

LED WORK LIGHT Model 66308

SET UP AND OPERATING INSTRUCTIONS



Distributed exclusively by Harbor Freight Tools[®].

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: http://www.harborfreight.com



Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Copyright[©] 2008 by Harbor Freight Tools[®]. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.

SAVE THIS MANUAL

Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

IMPORTANT SAFETY INFORMATION

In this manual, on the labeling, and all other information provided with this product:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

General Safety Rules



WARNING Read all safety warnings and instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

- 1. Work area safety
 - a. Keep work area clean and well lit. Cluttered or dark areas invite accidents.
 - b. Do not operate the Light in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. The Light gener-

ates heat sparks which may ignite the dust or fumes.

- 2. Electrical safety
 - a. The Light's plug must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with the Light. Unmodified plugs and matching outlets will reduce risk of electric shock.
 - b. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
 - c. Do not expose the Light to rain or wet conditions. Water entering the Light will increase the risk of electric shock.
 - d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the Light. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
 - e. For indoor use only. Do not use this product outside or in wet loca-tions.
- 3. Personal safety
 - a. Use personal protective equipment. Wear ANSI-approved eye protection during assembly.
 - b. Do not overreach. Keep proper footing and balance at all times. This enables better control of the Light in unexpected situations.
- 4. Light use and care
 - a. Maintain the Light. Check for breakage of parts and any other condition that may affect the Light's operation. If damaged, have it repaired before use.

Many accidents are caused by poorly maintained items.

- 5. Service
 - a. Have the Light serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the Light is maintained.

Light Safety Warnings

- 1. Maintain labels and nameplates on the Light. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 2 Do not leave the Light unattended when it is plugged into an electrical outlet. Turn off the Light, and unplug it from its electrical outlet before leaving.
- 3. This product is not a toy. Keep it out of reach of children.
- 4. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. In addition, people with pacemakers should:
 - · Avoid operating alone.
 - · Properly maintain and inspect to avoid electrical shock.

· Any power cord must be properly grounded. Ground Fault Circuit Interrupter (GFCI) should also be implemented - it prevents sustained electrical shock.

5. WARNING: Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (California Health & Safety Code § 25249.5, et seq.)

6. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



GROUNDING




Improperly connecting the grounding wire can result in electric shock.



Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the tool. Never remove the grounding prong from the plug. Do not use the tool if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician

Grounded Tools: Tools with Three Prong Plugs

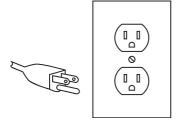


3-Prong Plug and Outlet

- 1. Tools marked with "Grounding Required" have a three wire cord and three prong grounding plug. The plug must be connected to a properly grounded outlet. If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock. (See 3-Prong Plug and Outlet.)
- 2. The grounding prong in the plug is connected through the green wire inside the cord to the grounding system in the tool. The green wire in the cord must be the only wire connected to the tool's grounding system and must never be attached to an electrically "live" terminal. (See 3-Prong Plug and Outlet.)
- 3. The tool must be plugged into an appropriate outlet, properly installed and grounded in accordance with all codes and ordinances. The plug and outlet should look like those in the

preceding illustration. (See 3-Prong Plug and Outlet.)

Double Insulated Tools: Tools with Two Prong Plugs

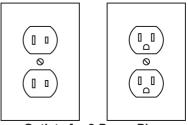

Outlets for 2-Prong Plug

- Tools marked "Double Insulated" do not require grounding. They have a special double insulation system which satisfies OSHA requirements and complies with the applicable standards of Underwriters Laboratories, Inc., the Canadian Standard Association, and the National Electrical Code. (See Outlets for 2-Prong Plug.)
- Double insulated tools may be used in either of the 120 volt outlets shown in the preceding illustration. (See Outlets for 2-Prong Plug.)

Extension Cords

- Grounded tools require a three wire extension cord. Double Insulated tools can use either a two or three wire extension cord.
- As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. (See Table A.)
- 3. The smaller the gauge number of the wire, the greater the capacity of the cord. For example, a 14 gauge cord

can carry a higher current than a 16 gauge cord. (See Table A.)

- 4. When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required. (See Table A.)
- 5. If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size. (See Table A.)
- If you are using an extension cord outdoors, make sure it is marked with the suffix "W-A" ("W" in Canada) to indicate it is acceptable for outdoor use.
- Make sure the extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
- 8. Protect the extension cords from sharp objects, excessive heat, and damp or wet areas.

| RECOMMENDED MINIMUM WIRE GAUGE FOR EXTENSION CORDS* (120/240 VOLT) | | | | | | | | |
|--|---|-----|-----|------|------|--|--|--|
| NAMEPLATE AMPERES (at full load) | EXTENSION CORD LENGTH | | | | | | | |
| | 25' | 50' | 75' | 100' | 150' | | | |
| 0 - 2.0 | 18 | 18 | 18 | 18 | 16 | | | |
| 2.1 – 3.4 | 18 | 18 | 18 | 16 | 14 | | | |
| 3.5 – 5.0 | 18 | 18 | 16 | 14 | 12 | | | |
| 5.1 – 7.0 | 18 | 16 | 14 | 12 | 12 | | | |
| 7.1 – 12.0 | 18 | 14 | 12 | 10 | - | | | |
| 12.1 – 16.0 | 14 | 12 | 10 | - | - | | | |
| 16.1 – 20.0 | 12 | 10 | - | - | - | | | |
| TABLE A | * Based on limiting the line voltage drop to five volts at 150% of the rated amperes. | | | | | | | |

Symbology

| | Double Insulated | | | |
|--------------------------|---|--|--|--|
| | Canadian Standards Association | | | |
| (UL) | Underwriters Laboratories, Inc. | | | |
| V~ | Volts Alternating Current | | | |
| A | Amperes | | | |
| n ₀ xxxx/min. | No Load Revolutions per Minute (RPM) | | | |

SPECIFICATIONS

| Electrical Requirements | 110 V~ / 60 Hz / 4.4 W |
|-------------------------|------------------------|
| Light Strength | 270 Lumens |

UNPACKING

When unpacking, make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this manual as soon as possible.

INITIAL SET UP

Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Unplug the light from the electrical outlet before assembly.

- **Note:** For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.
- 1. Slide the Base (2) into the bottom of the Lamp Assembly (1).
- 2. Secure with the Knob (3).

OPERATING INSTRUCTIONS




Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

- Position the LED work light near the work. Loosen Knob (3) and adjust Lamp Assembly (1) to direct the light beam. Tighten the Knob (3).
- 2. Plug the Light into a grounded 110V electrical outlet.
- 3. To prevent accidents, disconnect the power supply after use. Clean, then store the tool indoors out of children's reach.

USER-MAINTENANCE INSTRUCTIONS



Procedures not specifically explained in this manual must be performed only by a qualified technician.

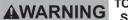

TO PREVENT SERIOUS INJURY

FROM ACCIDENTAL OPERATION: Unplug the light from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.


Cleaning, Maintenance, and Lubrication

- BEFORE EACH USE, inspect the general condition of the tool. Check for loose screws, misalignment or binding of moving parts, cracked or broken parts, damaged electrical wiring, and any other condition that may affect its safe operation.
- 2. **AFTER USE,** clean external surfaces of the tool with clean, moist cloth.
- 3. **A**WARNING! If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.

PARTS LIST

| Part | Description | Qty |
|------|---------------|-----|
| 1 | Lamp Assembly | 1 |
| 2 | Base | 1 |
| 3 | Knob | 1 |

ASSEMBLY DIAGRAM

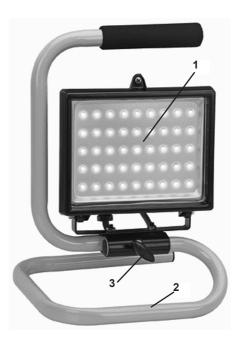

Record Product's Serial Number Here:_____

<u>Note:</u> If product has no serial number, record month and year of purchase instead.

Note: No replacement parts.

LIMITED 90 DAY WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

3491 Mission Oaks Blvd. • PO Box 6009 • Camarillo, CA 93011 • (800) 444-3353