V. Trouble Shooting

Phenomenon	Reason
No picture and sound	AC adapter or automobile adapter is improperly connected. Powerswitch is off.
No sound	Audio volume is offor in "mute" condition. Press VOL+
Remote Control not working	Check Remote Control Battery and make sure it is installed correctly. Battery may not have power or signal is blocked.

Notice to Customers

- Don't knock or press the LCD surface.
- HIGH VOLTAGE INSIDE! DO NOT dismantle the unit for your own safety.
- LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicates defects or fault.
- Picture for reference only, articles as arrival, will not notice separately if has any changes.

WARNING:

FOR YOUR SAFETY, PLEASE DON'T OPERATE OR WATCH DISPLAY WHILE DRIVING.

MANUAL


PYLE® Viewwww.pyleaudio.com



PLVWR750T

I. Installation Guide

- 1> This unit should be installed by a qualified service Technician.
- 2>This product is designed to operate with a 12V DC, negative ground battery system.
- 3>Don't connect the ground wire from the battery terminal prior to connecting the unit to the electrical system.
- 4>Please use accessories that come with this unit in order to avoid fire or electrical damage to it.

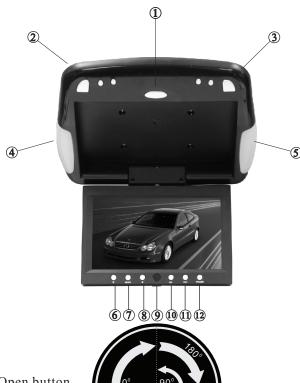

- ① Open button
- 2 Left light control button
- 3 Right light control button
- 4 Left light
- **6** Analog decrease
- 8 Analog increase
- 10 Channel decrease
- 12 Power ON/OFF button

- S Right light
- 7 Menu
- Remote window
- (1) Channel increase

II, Performance Parameter

Panel size: 7"
Display mode: 16:9
System: NTSC/PAL
Power supply: DC 12V
Power consumption: 12W
Resolution: 480×RGB×234

Operation temperature: $+5^{\circ}\text{C} \sim +40^{\circ}\text{C}$ Storage temperature: $-5^{\circ}\text{C} \sim +75^{\circ}\text{C}$

Brightness: 300cd/m² Contrast: 300:1 Built-in TV Tuner IR Transmitter

III、Remote Control



IV. Connection

