

300N Draft 802.11n Wireless Router

Model # AR625W

Quick Installation Guide

This Quick Installation Guide only provides the basic instructions. For more detailed information, please refer to the User's Manual in the supplied CD.

Connecting the Router

Note: Prior to connecting the router, be sure to power off your computer, DSL/Cable modem, and the router. To achieve maximum wireless coverage, tilt the router's antennas outward at 45° angle.

Step 1 Connect one end of a network cable to the **WAN** port of the router and connect the other end of the cable to the DSL/Cable modem.

Step 2 With another network cable, connect one end of the cable to your computer's network card and connect the other end to one of the **LAN** ports of the router.

Step 3 Power on the DSL/Cable modem and wait for the lights on the modem to settle down.

Step 4 Power on the router by connecting one end of the supplied power adapter to the power jack of the router and connecting the other end to an electrical outlet.

Step 5 Power on your computer.

Step 6 Make sure the WAN, WLAN, and the LAN port that the computer is connected to are lit. If not, try the above steps again.



Configuring the Router

Step 1 Open the web browser (Internet Explorer or Netscape), type 192.168.1.1 in the Address bar and press Enter.



Step 2 Enter admin for both the username and password fields and click OK.



Cable Modem

For most cable modem users, you should be able to connect to the Internet without any configuration. If your ISP has provided you with a host name, enter it in the optional **Host Name** field. Click **Apply** to save the setting.

Set-up	Wireless	Security	Access Restrictions	Applications Gaming	Admin	Statu
	Basic Setup	DDNS	MAC Address Clo	ine Advan	ced Routing	
In	ternet Setup					
in Internet Co	ternet Setup	Automatic Con	figuration - DHCP 💊	•		
In Internet Co Optional Set	ternet Setup onnection Type tings (required	Automatic Con Host Name:	figuration - DHCP 🔹		1	

If your ISP requires a registered MAC Address, click on the **MAC Address Clone** tab, select **Enabled**, and click on the **Clone My PC's MAC** button. Click **Apply** to save the setting.

et-up	Wireless	Security	Access Restrictions	Applications Gaming	Admin	Statu
	Basic Setup	DDNS	MAC Address 0	Clone Advi	anced Routing	
MAC Ad	dress Clone					
		⊙ Enabled ○	Disabled			
						_
		MAC Address:	00 . 00	00 . 00	. 00 . 00	
			Clone wy	POSIMAC		

If you have trouble connecting to the Internet, please refer to Section 4, Verifying Connection.

DSL

For DSL users, follow the steps below to configure the router.

Set-up	Wireless	Security	Access Restrictions	Applic Gat	cations ming	Admin	Statu
	Basic Setup	DDNS	MAC Address C	lone	Advan	ced Routing	
internet Co	ternet Setup	Automatic Cor	ifiguration - DHCP	~			
In Internet Co Optional Set	ternet Setup nnection Type ings (required	Automatic Cor Automatic Con Static IP	figuration - DHCP figuration - DHCP	~			

Step 1 Select **PPPoE** from the drop-down menu.

Step 2 Enter your username and password provided by your ISP.

Set-up	Wireless	Security	Access Restrictions	Applications Gaming	Admin	Statu
	Basic Setup	DDNS	MAC Address C	Clone Advan	iced Routing	
10						
Ir	iternet Setup					
lr Internet C	iternet Setup	PPPoE		¥		
lı Internet Ci	nternet Setup	PPPoE Username:	_	*	1	
lı Internet C	nternet Setup	PPPoE Username:		~		

Note: Depending on the ISP, you may need to include the domain name with your username.

Example: username@sbcglobal.net

Step 3 Click Apply to save the setting.

If you have trouble connecting to the Internet, please refer to Section 4, Verifying Connection.

Connecting to the Router Wirelessly

Below are the default wireless settings of the router. You must configure your wireless network card to the same settings in order to establish a wireless connection to the router. Please refer to your wireless network card's manual on how to configure these settings.

SSID (Network Name): **default** Operating Mode: **Infrastructure** Authentication: **Auto** Channel #: **6** Encryption: **disabled**

If you want to change the router's wireless settings, log in to the router and select the **Wireless** tab. Be sure to click **Apply** to save the setting.

Set-up	Wireless	Security	, Acces Restrictio	s Applicat ons Gamir	tions ng	Admin	Status
	Basic Wireless	Settings V	Areless Security	Wireless MAC	Filter	Advanced Wirel	ess Settings
Wir	eless Network						
		Wireless:		• Enabled	🔿 Disab	led	
		Network Mo	ode:	b/g/draft n 💌			
		Network Na	ime(SSID):	default			
		Channel:		6 - 2.437GHz	~		
		SSID Broad	cast:	• Enabled	Disable	ed	

For information on changing the router's log in password and enabling wireless encryption, please refer to the User's Manual in the provided CD.

Verifying Connection

If you have trouble connecting to the Internet try the steps belows.

- **Step 1** Power off the Cable/DSL modem, router, and computer and wait for **5 minutes**.
- Step 2 Turn on the Cable/DSL modem and wait for the lights on the modem to settle down.
- Step 3 Turn on the router and wait for the lights on the router to settle down.
- Step 4 Turn on the computer.
- **Step 5** Reconfigure the router as described in **Section 2**.

Step 6 Log in to the router and select the Status tab.

Step 7 Verify that the Internet IP Address, Default Gateway, and at least one of the DNS fields have valid numbers assigned to them (instead of all 0's).

Set-up	Wireless	Security	Access Restrictions	Applicat Gamir	ions ig	Admin	Statu	
	Router	Local Network	Wireless N	etwork				
Rout	er Information							
riout	or morniation	Firmware Vers	ion: vl	.0.8 ap8x-2.1.4	l.p7.o			
		Current Time:	т	Thu Aug 17 22:21:10 2006 (GMT -08:00)				
		Internet MAC A	ddress: 00	:14:6C:B6:5D:D)F			
		Host Name:						
		Domain Name:	Ai	rlink101				
		Subnet Mask: Default Gatewa	25 ay: 19	5.255.255.0 2.168.7.1				
		DNS 1:	19	2.168.7.1				
		DNS 2:	0.0	0.0.0				
		DNS 3:						
		MTU:	Au	ıto				
		_		ID Retilies	e Ranaw			

If you see all 0's, click on the **IP Address Renew** button (for Cable Modem users) or the **Connect** button (for DSL users).

If each field has a valid number assigned, the router is connected to the Internet.

Technical Support

E-mail: support@airlink101.com Toll Free: 1-888-746-3238 Web Site: www.airlink101.com

*Theoretical maximum wireless signal rate derived from IEEE 802.11g standard and IEEE 802.11n draft specification version 1.0. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, mix of wireless products used, radio frequency interference (e.g., cordless telephones and microwaves) as well as network overhead lower actual data throughput rate. Specifications are subject to change without notice. All products and trademarks are the property of their respective owners. Copyright ©2006 AirLink101[™]