

# xD

# 2012

## QUICK REFERENCE GUIDE

GET INFORMED.  
ROLL.



what moves you

# 2012 Scion xD

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Scion xD.

## **! A word about safe vehicle operations**

This *Quick Reference Guide* is not a full description of Scion xD operations. Every Scion xD owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	7

## FEATURES/OPERATIONS

Air Conditioning/Heating	12
Automatic Transmission	8
Bottle holders	15
Clock	13
Cruise control	11
Cup holders	15
Lights & turn signals	10
Multi-information display	14
Parking brake	8
Power outlet	15
Seat adjustments	9
Seat-Folding down rear seat	9
Seats-Head restraints	8
Steering wheel switches	14
Tilt steering wheel	12
USB port/AUX port	13
Windows	11
Windshield wipers & washers	10

## SAFETY AND



## EMERGENCY FEATURES

Door locks	16
Doors-Child safety locks	16
Floor mat installation	19
Seat belts	16
Seat belts-Shoulder belt anchor	16
Spare tire & tools	17
Star Safety System™	18-19
Tire Pressure Monitoring (warning) System	17


<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

# OVERVIEW

## Instrument panel

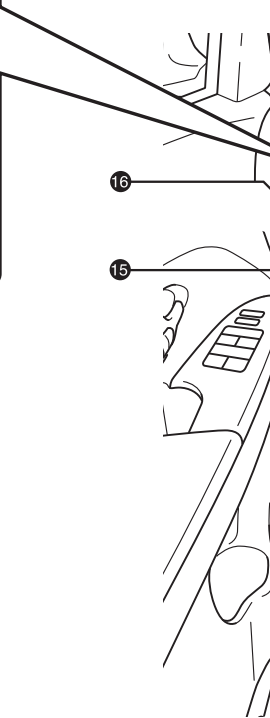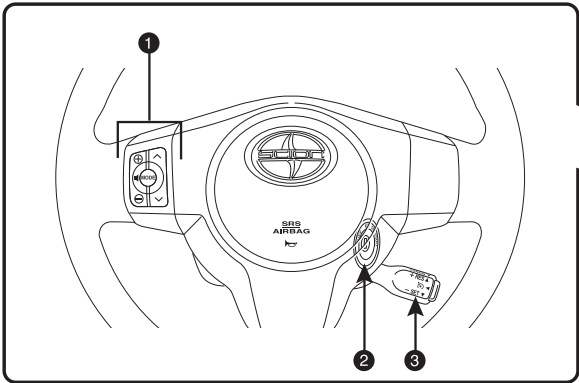


- ① Steering wheel audio controls\*
- ② Ignition switch
- ③ Cruise control
- ④ Headlight and turn signal controls
- ⑤ Wiper and washer controls
- ⑥ Emergency flasher button
- ⑦ Clock
- ⑧ Front passenger occupant classification indicator/Front passenger seat belt reminder light

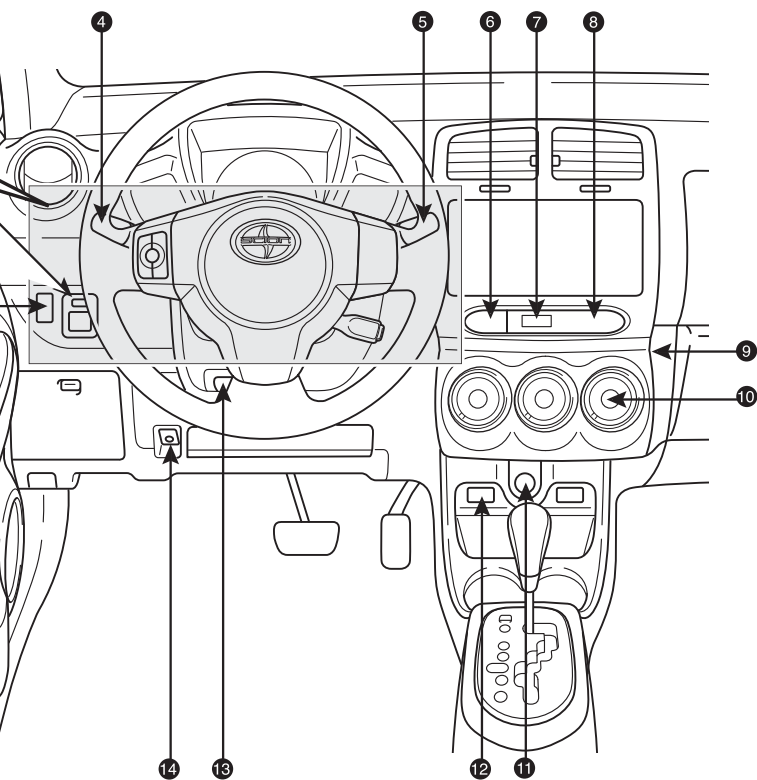

- 9 Air Conditioning controls
- 10 Rear window defogger button
- 11 12V DC Power outlet
- 12 USB port/AUX port\*
- 13 Tilt steering lock release
- 14 Tire Pressure Monitoring (warning) System reset
- 15 Instrument panel light control
- 16 Power rearview mirror controls

\* For details, refer to the *SCION Audio System, Owner's Manual* or *SCION Navigation System Owner's Manual*.

## Instrument cluster

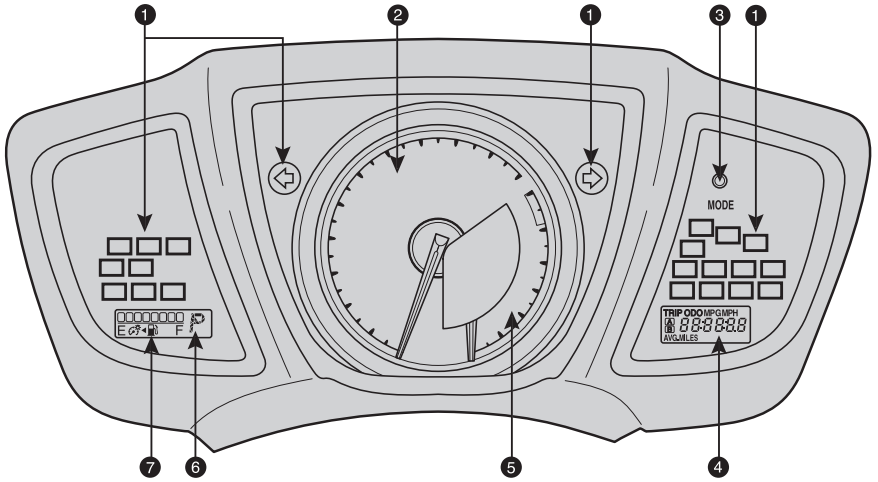









 
 



 


- ① Service indicator and reminder
- ② Speedometer
- ③ MODE switch
- ④ Multi-information display
- ⑤ Tachometer
- ⑥ Shift position indicator
- ⑦ Fuel gauge

## Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, *2012 Owner’s Manual*.

	Brake system warning <sup>1</sup>
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Low engine oil pressure warning <sup>1</sup>
	Open door warning
	Airbag SRS warning <sup>1</sup>


<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

	Low Tire Pressure Warning <sup>1</sup>
	Low windshield washer fluid level warning
	Low engine coolant temperature indicator
	High engine coolant temperature warning
	Engine oil replacement reminder <sup>1</sup>
	Front passenger occupant classification indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Low fuel level warning
	Slip indicator <sup>1</sup>
	Vehicle Stability Control OFF indicator <sup>1</sup>
	Traction Control OFF indicator
	Cruise control indicator <sup>2</sup>
	Electric power steering system warning <sup>1</sup>
	Anti-lock Brake System warning <sup>1</sup>

<sup>2</sup> If this light flashes, refer to "Cruise control," Section 2-4, 2012 Owner's Manual.

## Keyless entry

### Locking operation

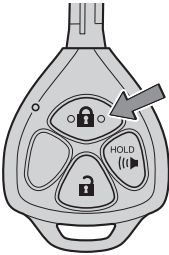

Push 

### Unlocking operation




Push ONCE: Driver door  
TWICE: ALL doors 




**NOTE:** If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

### Panic button



Push and hold 


## Fuel tank door release and cap

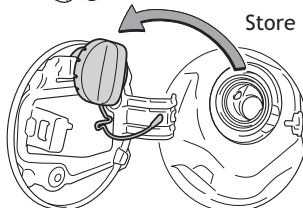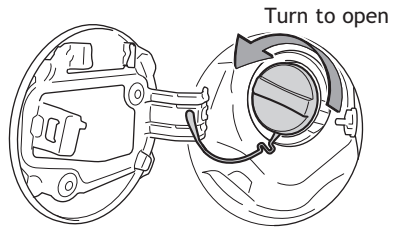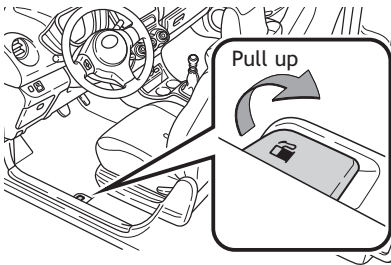


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.




## Light control-Instrument panel

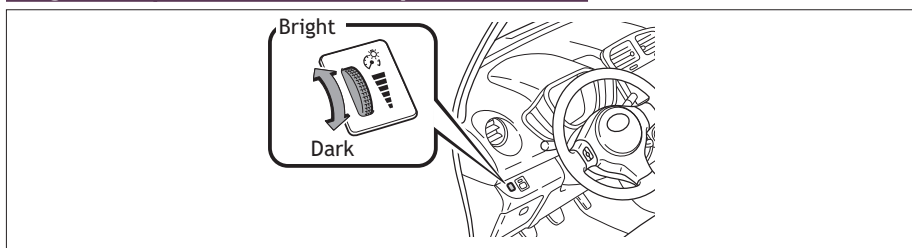

## Hood release

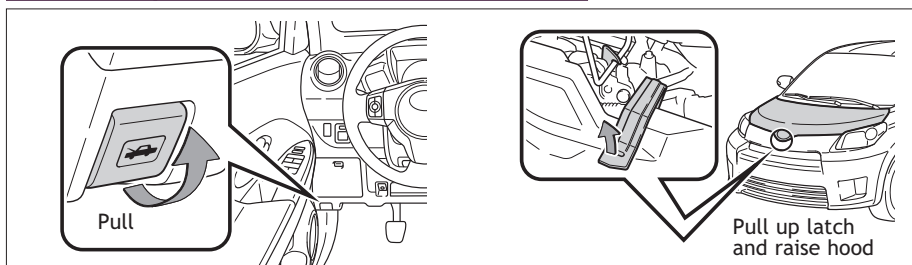

## Engine maintenance

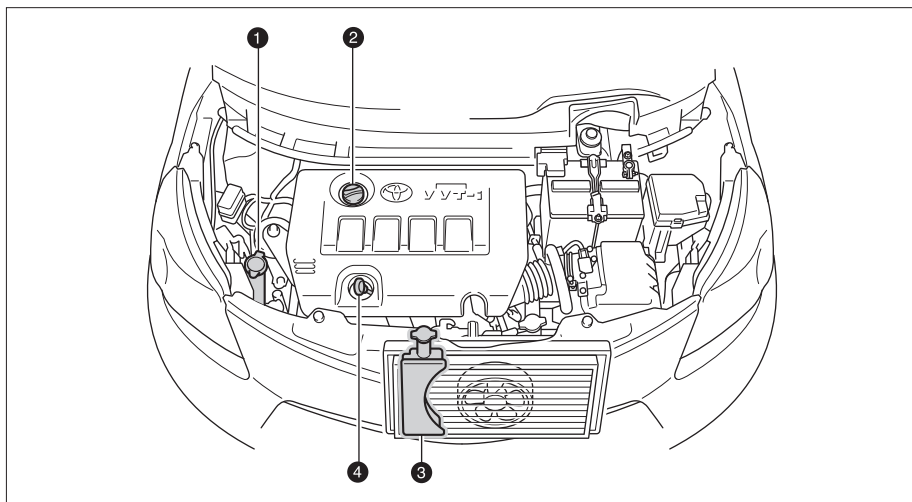


- ❶ Windshield washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine coolant reservoir
- ❹ Engine oil level dipstick

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty Maintenance Guide.”

# FEATURES/OPERATIONS


## Automatic Transmission (if equipped)

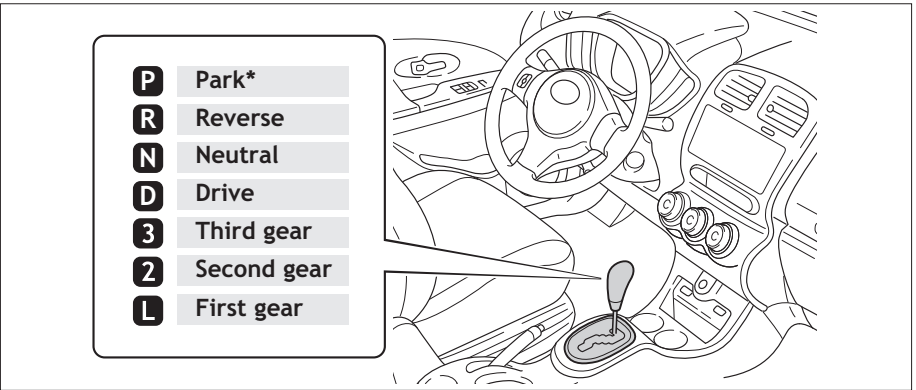


\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Parking brake

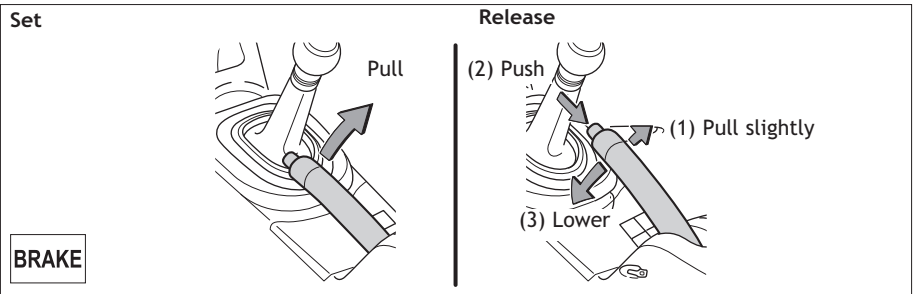


## Seats-Head restraints

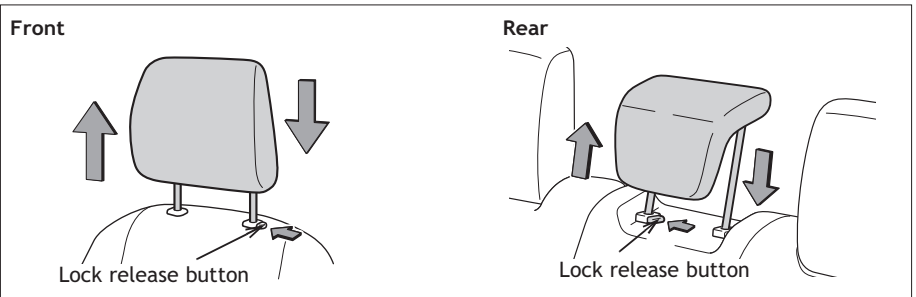


## Seat adjustments




Front

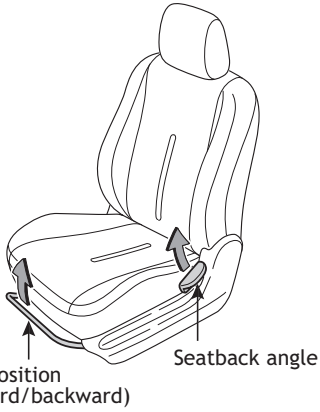

Rear

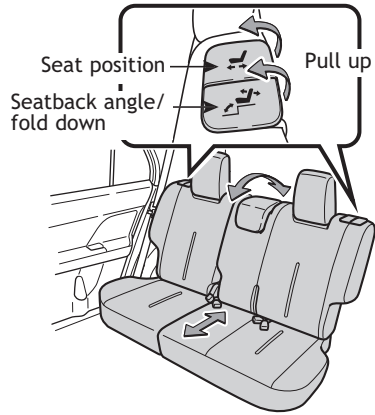


## Seat-Folding down rear seat

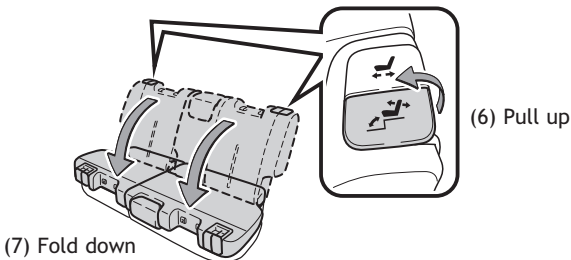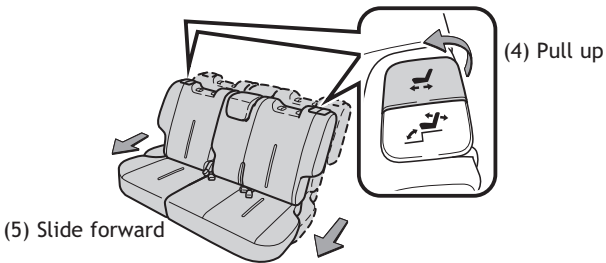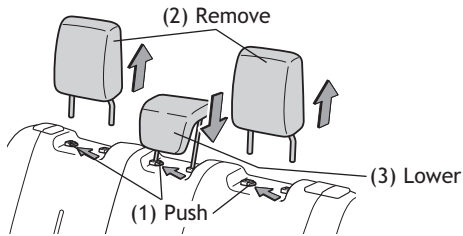



Lights & turn signals

Headlights

 
Type A



Type B

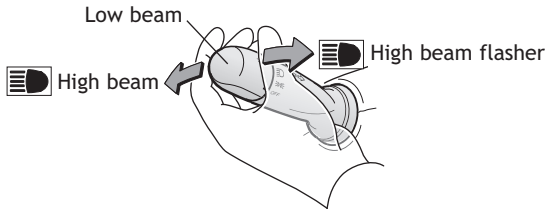 


Turn signals

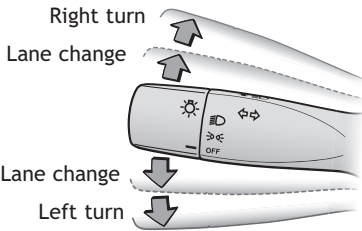


Windshield wipers & washers

Front

Type A

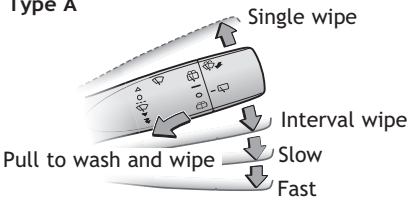


Type B

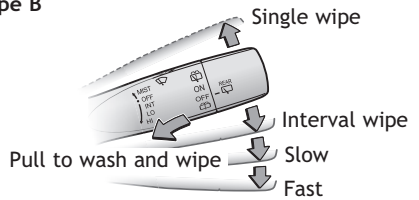


Rear

Type A

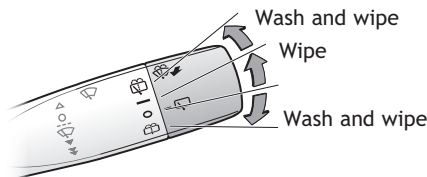


Type B

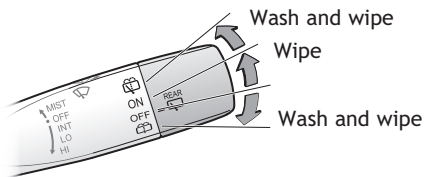


## Windows

### Driver side

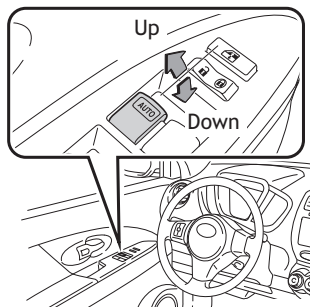

### Window lock switch

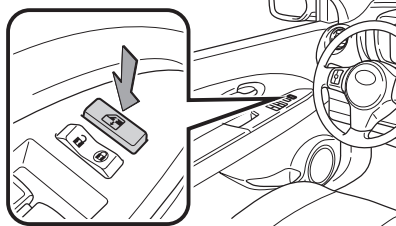


### Automatic down operation (driver side only)

Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


## Cruise control

### System ON/OFF

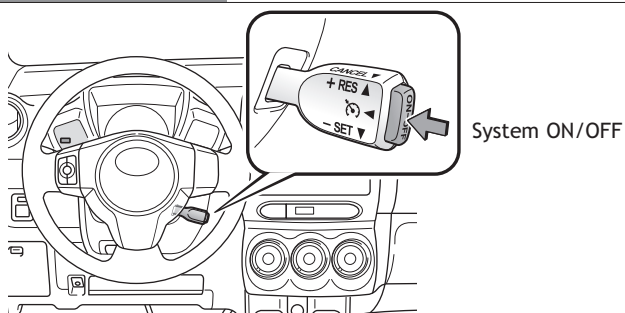

CRUISE


### Functions

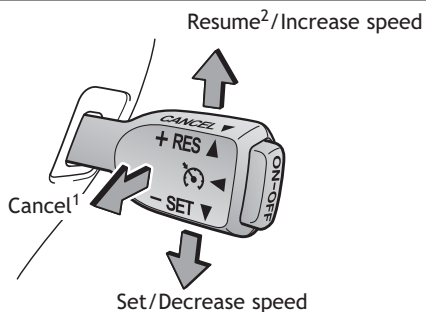

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed reaches 25 mph.

### Tilt steering wheel

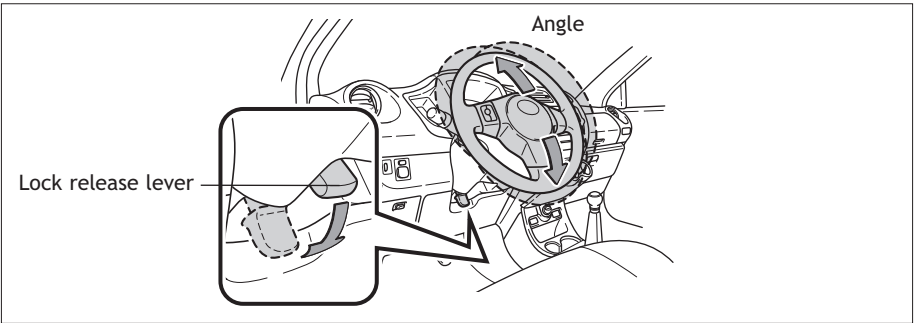


Hold wheel, push lever down, set angle and return lever.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.

### Air Conditioning/Heating

- 1 Air Conditioning ON/OFF  
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- 2 Fan speed
- 3 Rear window defogger
- 4 Temperature selector
- 5 Recirculate cabin air (fresh air when OFF)
- 6 Airflow vent  
In “” or “” mode, use with the air intake selector position in “” to reduce window fogging.

## USB port/AUX port

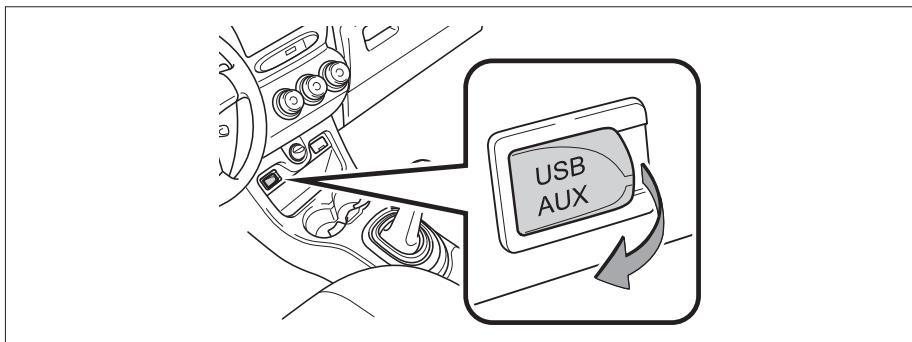

### USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


### AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


If you do not have a SCION genuine audio system, you will not be able to use the AUX port/USB port.

Refer to the *SCION Audio or Navigation System Owner's Manual* for more details.

## Clock

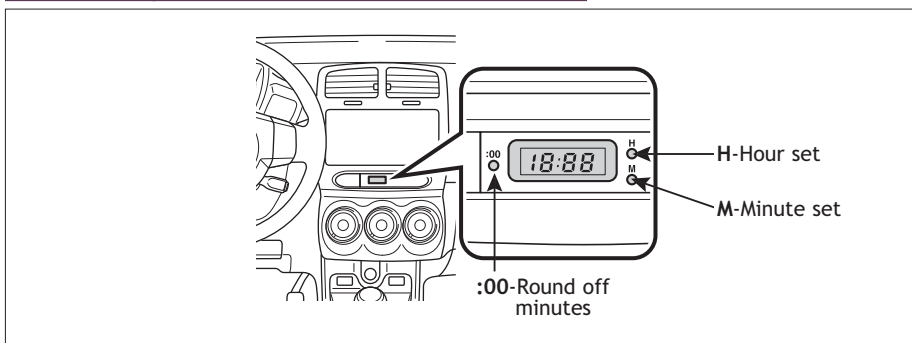


### Steering wheel switches

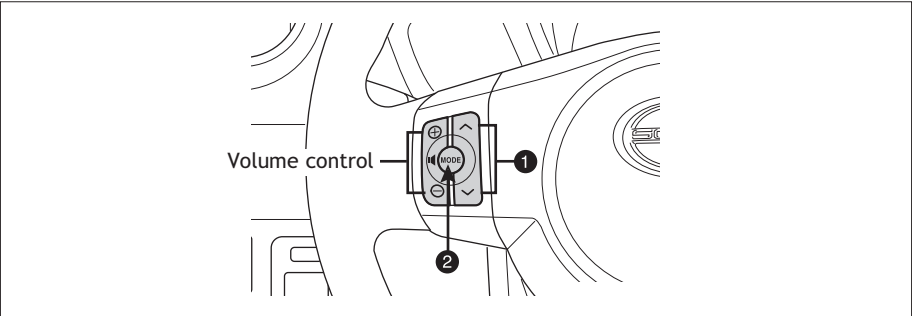

- ① “**v ^**”
  - In **radio mode** Push to select a preset station; push and hold to seek the next strong station.
  - In **CD mode** Push to skip up or down to a next/previous track.
- ② “**MODE**”
  - Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Refer to the *SCION Audio or Navigation System Owner’s Manual* for more details.

### Multi-information display

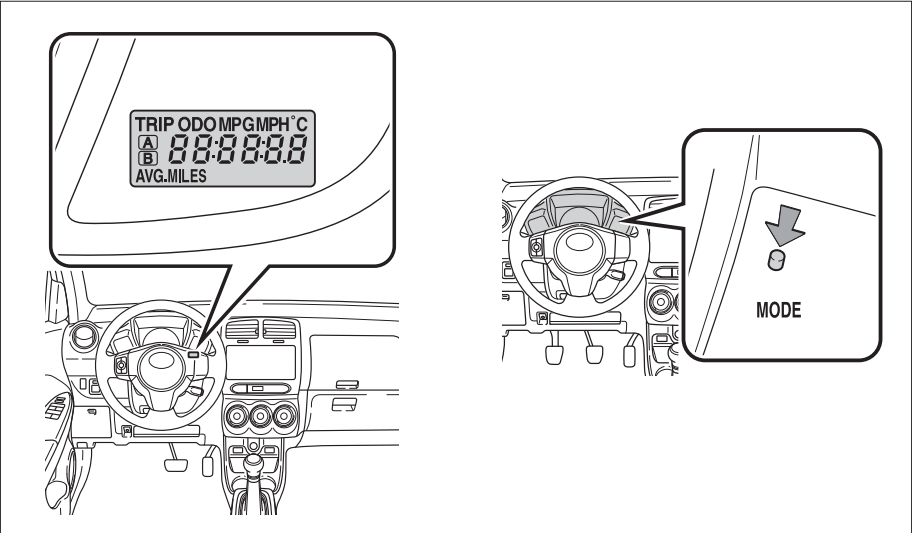


Push button to change information in the following succession:

- (1) Odometer
- (2) Trip meters
- (3) Current gas mileage (MPG)
- (4) Average gas mileage (AVG/MPG)
- (5) Average vehicle speed from engine start (AVG/MPH)
- (6) Miles left on remaining fuel (RANGE/MI)




## Power outlet

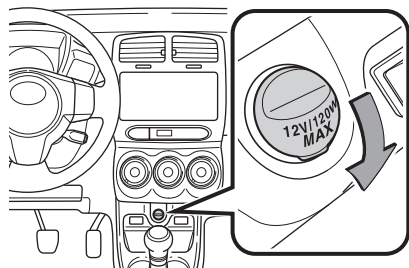


Designed for car accessories. Key must be in the “ACC” or “ON” position for use.

## Bottle holders

### Front

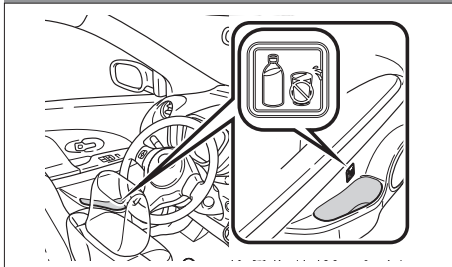


### Rear

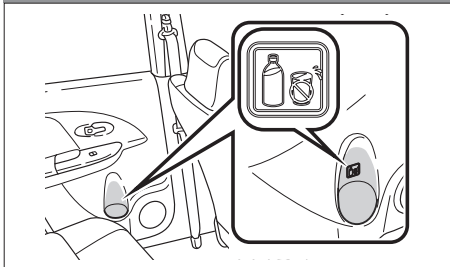


## Cup holders


### Front

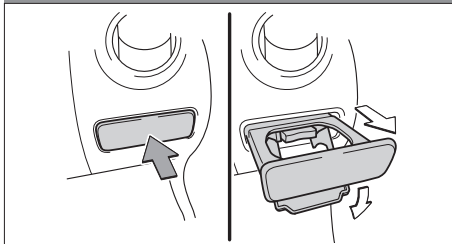

### Rear

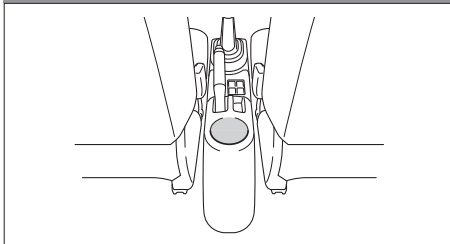


### Center

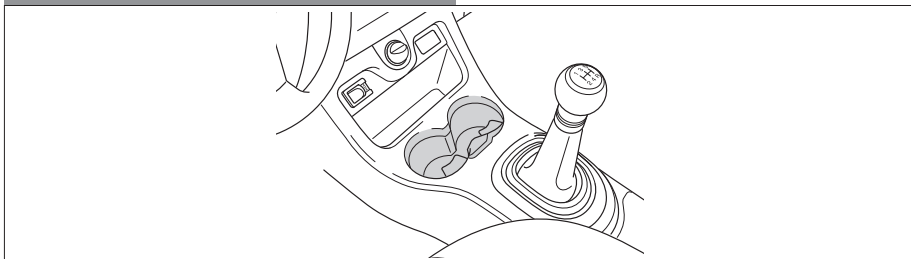


# SAFETY AND EMERGENCY FEATURES

## Door locks

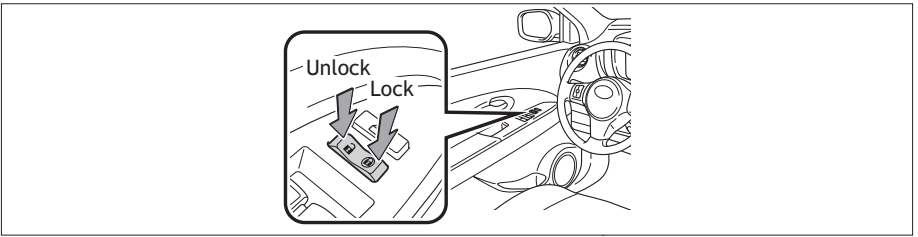


## Doors-Child safety locks

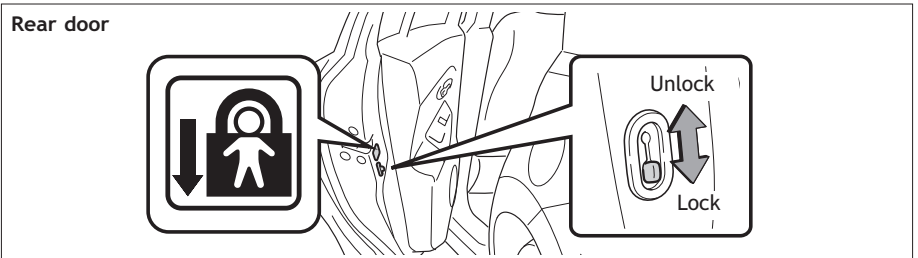


Moving the lever to "LOCK" will allow the door to be opened only from the outside.

## Seat belts-Shoulder belt anchor

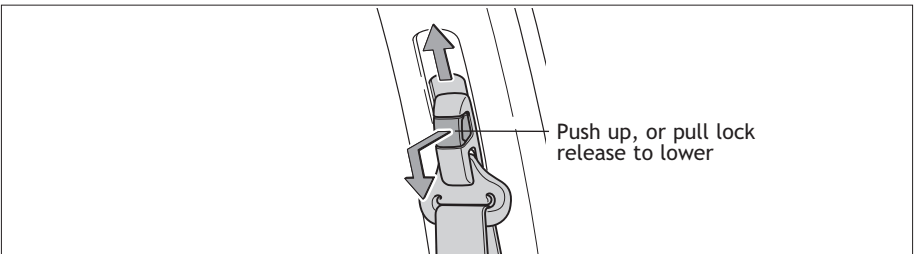


## Seat belts

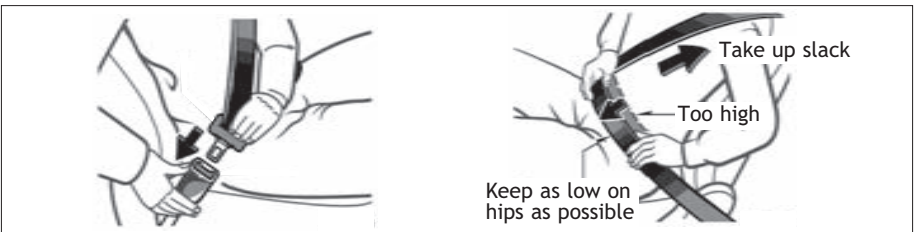

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Tire Pressure Monitoring (warning) System

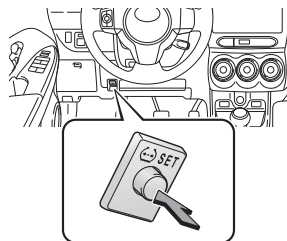

### System reset initialization

1. Push and hold “ SET” button until the indicator blinks three times.
2. Wait several minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the *Owner’s Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Scion dealer.


**NOTE:** The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

## Spare tire & tools

### Tool and spare tire location

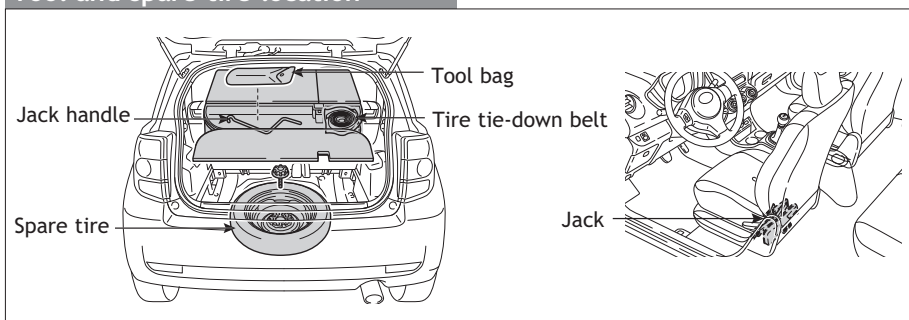

### Removing the spare tire

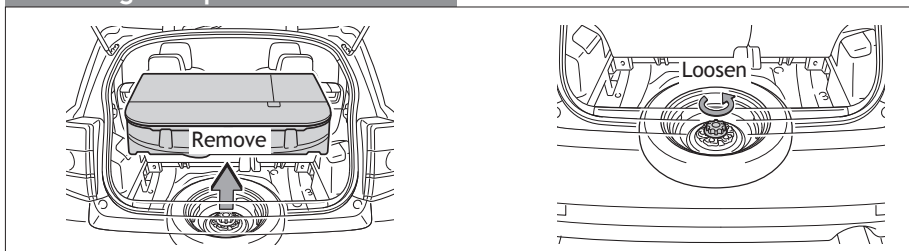

Refer to the *Owner’s Manual* for jack positioning and tire changing procedures.

## SAFETY AND EMERGENCY FEATURES

### Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

#### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

#### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help you drive safely.

#### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and provides the maximum brake effectiveness for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the maximum traction that the current road conditions will allow, helping you stay in control.

#### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain stability and balance when braking. Abrupt stops cause the vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to maximize the braking effectiveness of all four wheels.

#### Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

## Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

**For safety, follow these steps:**

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

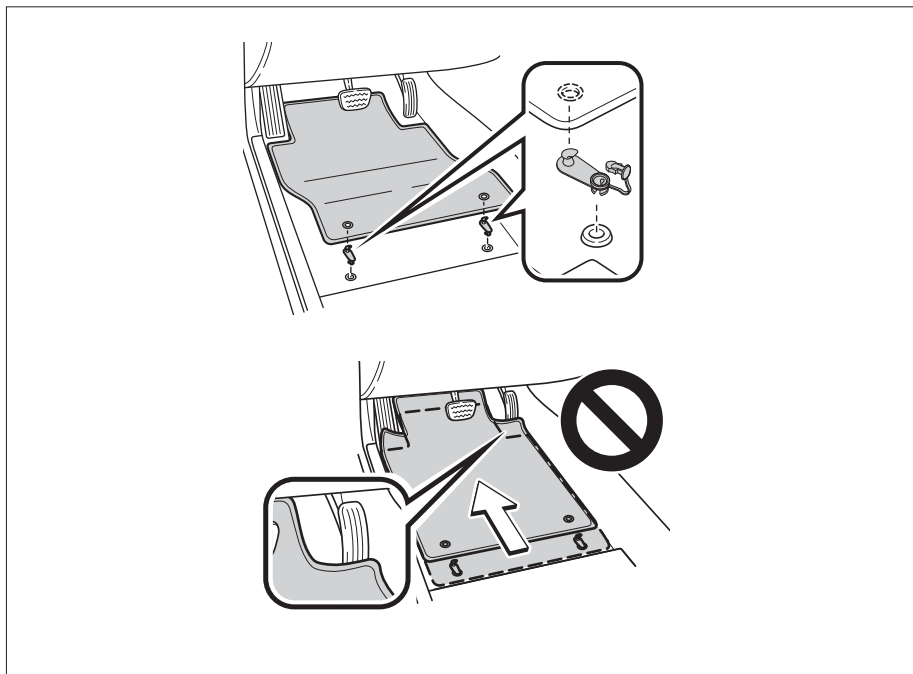

## NOTES



EMAIL

[www.scion.com](http://www.scion.com)

→ Contact

-

CHAT

[www.scion.com](http://www.scion.com)

→ Have a Question?

→ Contact

-

PHONE

1.866.70.SCION

-

MAIL

SCION

19001 S. Western Ave.

D102, P.O. Box 2742

Torrance, CA 90509-2742

USA

-

WEB

[www.scion.com](http://www.scion.com)

-



©2011 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.

Printed in U.S.A. 9/11

11-TCS-05092

00505-QRG12-XD