

Installation

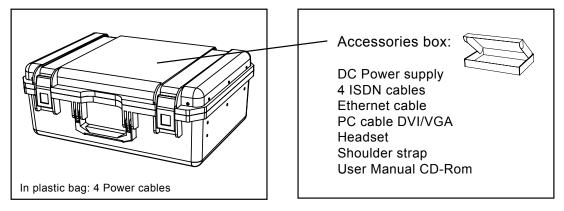


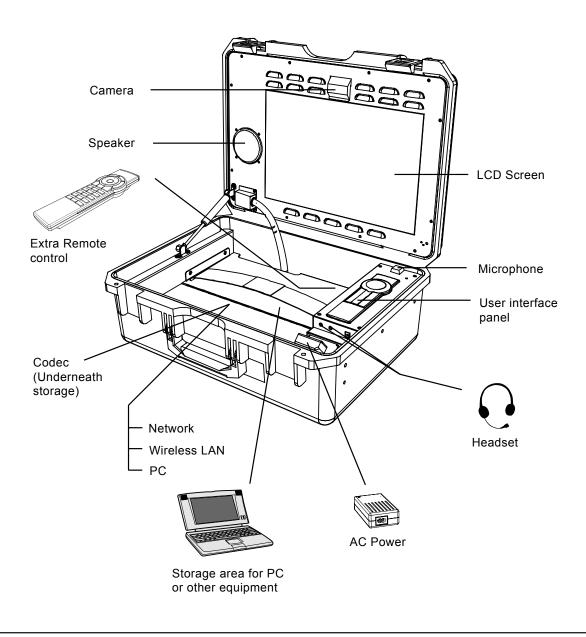

Note: Remove accessories box and other equipment from storage area when in use.



The Remote Control

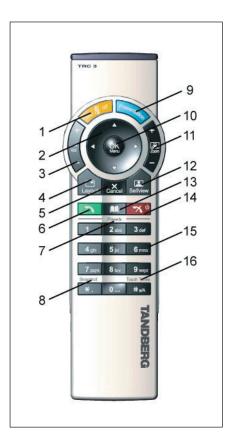

- 1. Mic off: Mute and unmute the microphone.
- 2. Arrow keys: Navigate in menus or move camera.
- 3. Volume: Adjust the volume up and down.
- 4. Layout: Change picture layout on the screen.
- **5. Cancel:** Go one step back or close menu.
- 6. Call: Press Call to start calling.
- 7. Presets: Activate presets in a call.
- 8. Snapshot: Send a snapshot in a call.
- 9. Presentation: Show PC (default).
- 10. OK/Menu: Navigate in menus.
- 11. Zoom: Zoom camera in and out.
- 12. Selfview: Show outgoing video picture (yourself).
- 13. Phone Book: Open Phone Book.
- 14. End Call/Standby: End call or go to standby.
- 15. Number keys: Dial a number.
- **16 Touch Tones:** Press Touch Tones in a call to dial extension numbers e.t.c.

If the menu is not already present, press the OK/Menu key on the remote control to open the menu. Navigate the menu with arrow keys and OK. Go one step back with the Cancel key. Close all menus by pressing Cancel for 1 second.

System Configuration

1. Open the Administrator Settings menu

Choose 'Control Panel' from the main menu. In 'Control Panel', select 'Administrator Settings' and press OK.

Please read the user manual for further details.

2. Language

Open 'General'. Select language and press 'Save'.

3. ISDN Configuration

Open 'Network - ISDN-BRI Settings'. Make ISDN configuration and press 'Save'.

ISDN-BRI Settings ISDN Switch Type ETSI (Euro ISDN) ▶ ② Line 1 Setup ② Line 2 Setup ② Line 3 Setup ② Line 4 Setup ② Advanced ISDN Settings TANDBERG MXP

4. LAN Configuration

Open 'Network -LAN Settings'. Make IP/H.323 settings and press 'Save'.

