

This quick guide explains basic function settings and how to shoot and playback images. You can take this guide with you for shooting. For detailed instructions, refer to the EOS 60D Instruction Manual.



English Edition
© CANON INC. 2010

Quick Start Guide

1 Insert the battery.

2 **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.

3 **Set the lens focus mode switch to <AF>.**

4 **Open the cover and insert a SD card.**

5 **Set the power switch to <ON>, and while holding down the button at the center of the Mode Dial, turn the dial to <□> (Full Auto).**

6 **Flip out the LCD monitor.**

7 **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

8 **Take the picture.**
Press the shutter button completely to take the picture.

9 **View the image.**
The captured image will be displayed for about 2 sec. on the LCD monitor.

The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, B, C).

Battery Life

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 1600 shots	Approx. 1100 shots

Image Playback

Index **Magnify** **Erase** **SET** **INFO. Shooting information** **Play** **Playback**

Preparation

Menu Operations

<MENU> button
<SET> button
<◀▶> <▲▼>

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select the tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

Basic Zone Modes

Quality: Enable
Release shutter without card: Enable
Image review: 2 sec.
Peripheral illumin. correct: Enable
Red-eye reduc.: Disable

Creative Zone Modes

Tab

Quality	RAW
Beep	Enable
Release shutter without card	Enable
Image review	2 sec.
Peripheral illumin. correct	Enable
Red-eye reduc.	Disable
Flash control	Disable

Menu items **Menu settings**

Image-recording Quality

- Select [Q] **Quality**.
- Select the image-recording quality with the <◀▶> dial or <◀▶> key.

Image-recording quality

Quality: RAW (18M 5184x3456 [514])

RAW: Turn the <◀▶> dial to select the quality.

JPEG: Press the <◀▶> key to select the quality.

Picture Style

- Select [Q] **Picture Style**.
- Press the <▲▼> key to select the Picture Style, then press <SET>.

Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Neutral> and <Faithful>, see the camera's instruction manual.

Quick Control Screen

- Press the <Q> button.
- The Quick Control screen will appear.

Aperture: F5.6
ISO speed: ISO 200
Shutter speed: 1/125
Drive mode: M
Highlight tone priority: H
Electronic level: H
Custom Controls: H
Image-recording quality: L
Auto Lighting Optimizer: ON
White balance: H
Metering mode: H

- Press the <▲▼> <◀▶> key to select the function, then turn the <◀▶> or <◉> dial to set it.
- In Basic Zone modes, the selectable functions may differ depending on the Basic Zone shooting mode.

Electronic Level

- Each time you press the <INFO.> button, the screen display will change.
- Display the electronic level.

Custom Functions

C.Fn I: Exposure

- Exposure level increments
- ISO speed setting increments
- ISO expansion
- Bracketing auto cancel
- Bracketing sequence
- Safety shift

C.Fn II: Image

- Long exposure noise reduction
- High ISO speed noise reduction
- Highlight tone priority

C.Fn III: Autofocus/Drive


- Lens drive when AF impossible
- AF point selection method
- Superimposed display
- AF-assist beam firing
- Mirror lockup

C.Fn IV: Operation/Others


- AF and metering buttons
- Assign SET button
- Dial direction during Tv/Av
- Focusing Screen
- Add image verification data

Shooting Operation


Nomenclature

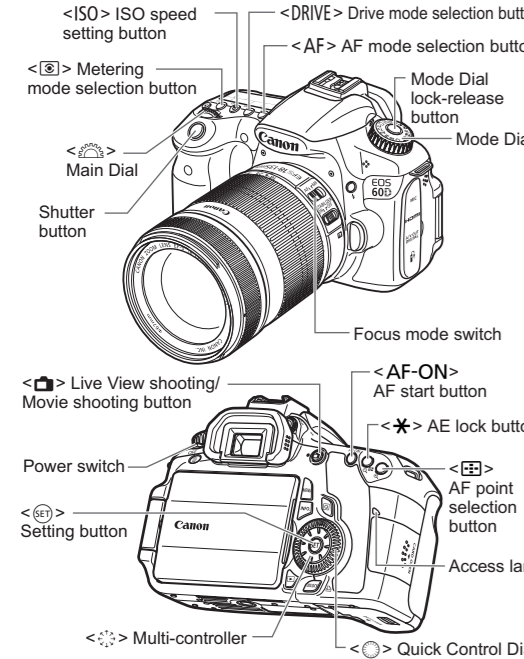


LCD Panel

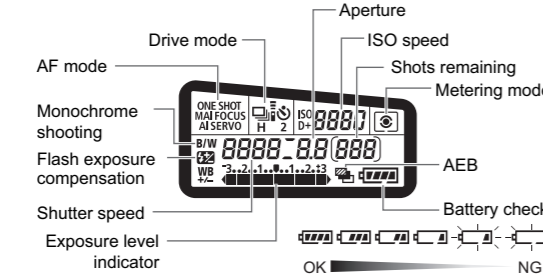

Viewfinder Information

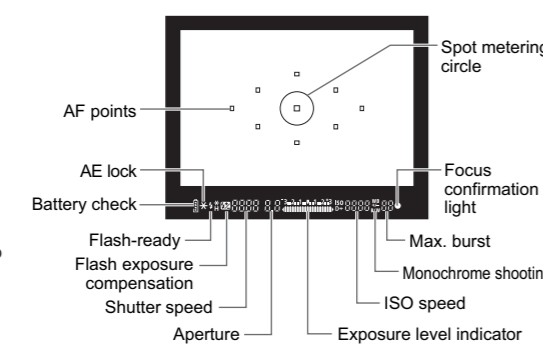

Basic Zone Modes

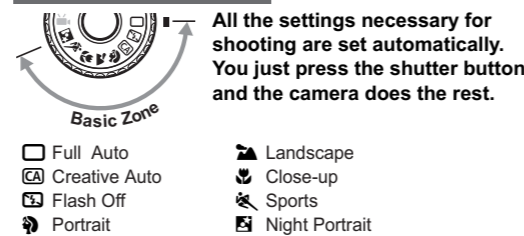


- Pressing the <Q> button will display the Quick Control screen. In the [CA]/[P]/[L]/[C]/[S]/[N] shooting mode, press the <▲> key to select the function, then press the <◀> key to set it as desired.


Using the Built-in Flash

Basic Zone Modes
If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the [S], [L], [C], [S], [N] modes).

Creative Zone Modes

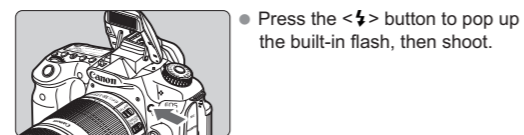

Creative Zone Modes

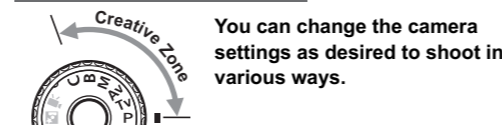


P: Program AE


The camera automatically sets the shutter speed and aperture in the same way as the [Q] mode.

- Set the Mode Dial to <P>.


Tv: Shutter-priority AE

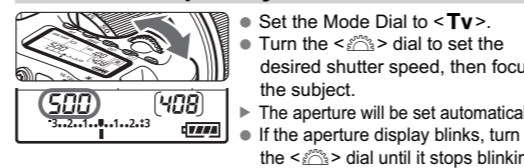


Av: Aperture-priority AE

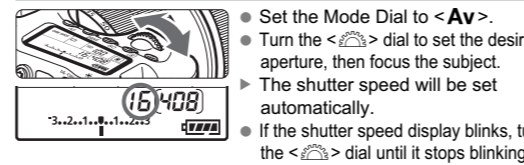


ISO: ISO Speed

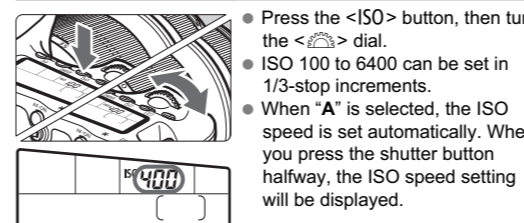


Drive Mode

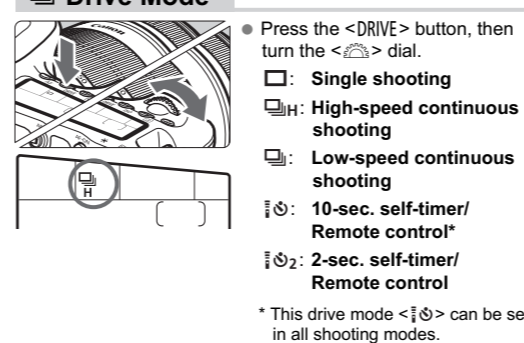


AF: AF Mode

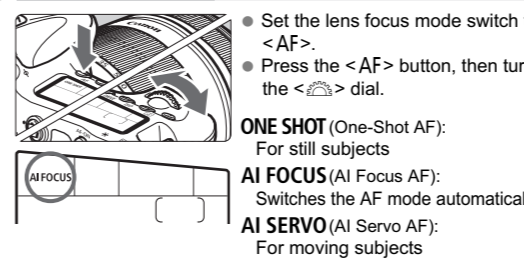

AF Point

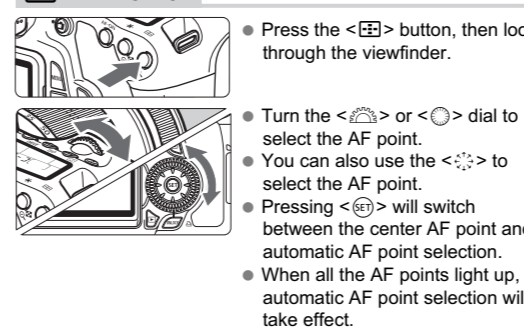 

Live View Shooting

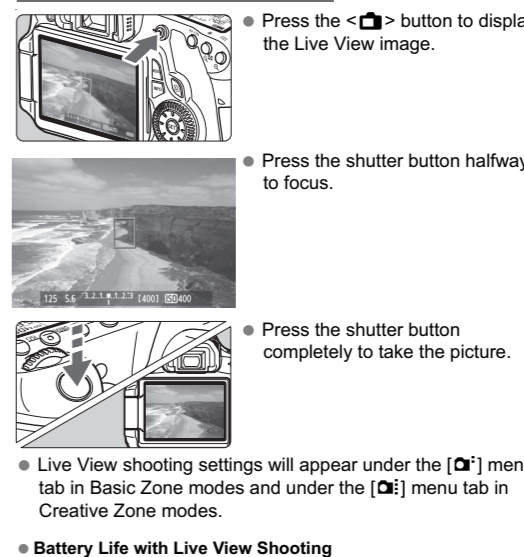 

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 350 shots	Approx. 320 shots

Shooting Movies

