

OPERATION GUIDE

KM-2540
KM-3040



This Operation Guide is for models KM-2540 and KM-3040. In this guide, KM-2540 refers to the 25 cpm (copies per minute) model and KM-3040 to the 30 cpm model.



Note This Operation Guide contains information that corresponds to using both the inch and metric versions of these machines.

The inch versions of these machines are shown in the screens in this guide. If you are using the metric version, use the messages provided for the inch version as reference only. In the body text, only the inch messages are given if these versions differ only in capitalization. When there is even a slight difference in the message, we have listed the information for the inch version followed, in brackets, by the corresponding information for the metric version.

Included Guides

The following guides are included with this machine. Refer to the proper guide based on your requirements.

Operation Guide (This Guide)

Describes how to load paper, basic copy operations, and troubleshooting.

Advanced Operation Guide

Explains copying features in depth, as well as default settings.

Quick Start Guide

Lists and briefly describes the copy functions of the machine.

Safety Conventions in This Guide

Please read this Operation Guide before using the machine. Keep it close to the machine for easy reference.

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.




WARNING: Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



CAUTION: Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

Symbols

The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.




.... [General warning]



.... [Warning of danger of electrical shock]



.... [Warning of high temperature]


The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.



.... [Warning of prohibited action]



.... [Disassembly prohibited]

The  symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.



.... [Alert of required action]



.... [Remove the power plug from the outlet]



.... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing. (fee required)


Contents

	Legal Information and Conventions	ix
1	Part Names	1-1
	Body	1-2
	Operation Panel	1-5
	Touch Panel	1-6
2	Preparation for Usage	2-1
	Loading Paper	2-2
	Setting Media Type and Paper Size for the Cassettes and MP Tray	2-7
	Loading Originals	2-14
	Language	2-18
3	Basic Operation	3-1
	Basic Copying Procedures	3-2
	Selecting Image Quality	3-4
	Adjusting Density	3-5
	Zoom	3-6
	Duplex Mode	3-10
	Split Mode	3-13
	Collate Mode	3-15
	Interrupt Copy	3-16
	Low-Power Mode	3-17
	Sleep Mode	3-17
4	Optional Equipment	4-1
	Overview of Optional Equipment	4-2
	Document Processor	4-3
	Paper Feeder	4-3
	Built-in Finisher	4-3
	Document Finisher	4-6
	Job Separator	4-6
	Key Counter	4-7
	Printer Kit	4-7
	Fax Kit	4-8
5	Maintenance	5-1
	Cleaning	5-2
	Toner Container and Waste Toner Box Replacement	5-7
6	Troubleshooting	6-1
	Solving Malfunctions	6-2
	Responding to Error Messages	6-4
	Clearing Paper Jams	6-8
7	Appendix	7-1
	Entering Characters on Touch Panel	7-2
	Paper	7-5
	Specifications	7-6
	Index	Index-1

Caution/Warning Labels


Caution labels have been attached to the machine at the following locations for safety purposes. Be sufficiently careful to avoid fire or electric shock when removing a paper jam or when replacing toner.

CAUTION EXTREMELY HOT SURFACE Avoid contact. | **ATTENTION** SURFACE TRÈS CHAUDE | **VORSICHT** SEHR HEISSE OBERFLÄCHE | **PRECAUCION** SUPERFICIE SUMAMENTE CALIENTE | **CAUTELA** SUPERFICIE ESTREMAMENTE CALDA Evitare il contatto. | **ВНИМАНИЕ** Поверхность очень горячая. Не додегиваться. | **注意** 表面炽熱。避免觸碰。 | **注意** 表面熾熱。避免觸碰。 | **注意** 高温部に手を触れないでください。火傷の原因となります。

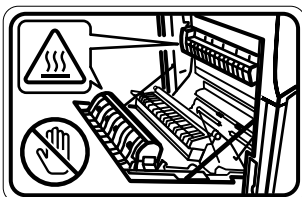


High temperature inside. Do not touch parts in this area, because there is a danger of getting burned.


High temperature inside. Do not touch parts in this area, because there is a danger of getting burned.

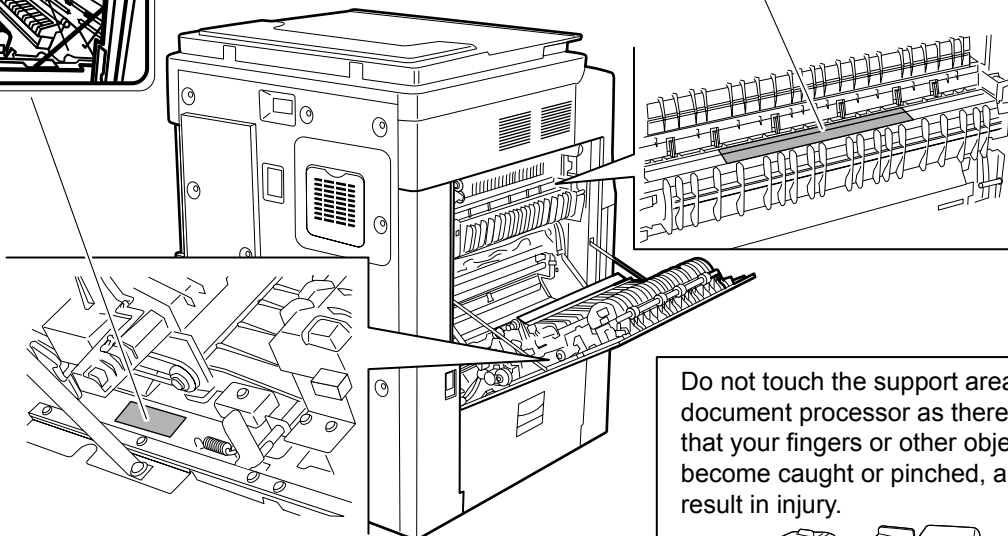

Do not touch the support area for the document processor as there is a danger that your fingers or other objects may become caught or pinched, and this can result in injury.

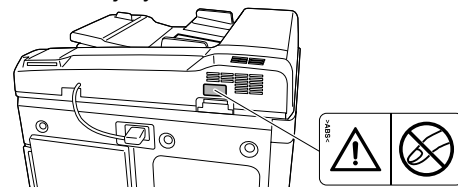

Do not incinerate toner and toner container. Dangerous sparks may cause burn.

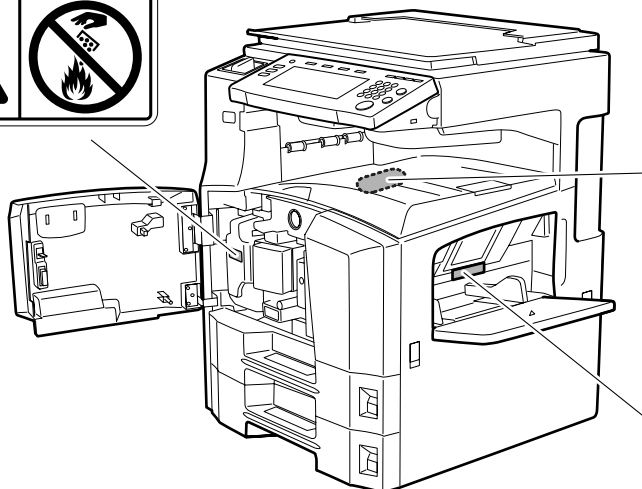

Label inside the printer (Laser radiation warning)



DANGER
CLASS 3B LASER RADIATION WHEN OPEN AVOID EXPOSURE TO THE BEAM

ATTENTION
CLASSE 3B RAYONNEMENT LASER EN CAS D'OUVERTURE EXPOSITION DANGEREUSE AU FAISCEAU

VORSICHT
KLASSE 3B LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHLE AUSSETZEN

PRECAUCION
CLASSE 3B RADIACIONE LASER CUANDO SE ABRE EVITAR EXPONERSE AL RAYO


VARO!
AVATTRESSA OLET ALTTIINA LUOKAN 3B LASERSATEILYLLE ÄLÄ KATSO SÄ TEESEEN

警告
ここを開くとクラス3Bレーザー光がでます。
ビームを直接見たり、触れないで下さい。

警告
打开时有3B类激光辐射 避免光束照射




Moving parts inside. May cause personal injury. Do not touch moving parts.


 **Note** Do not remove these labels.


Installation Precautions


Environment


Caution

Avoid placing the machine on or in locations which are unstable or not level. Such locations may cause the machine to fall down or fall over. This type of situation presents a danger of personal injury or damage to the machine. 

Avoid locations with humidity or dust and dirt. If dust or dirt become attached to the power plug, clean the plug to avoid the danger of fire or electrical shock. 

Avoid locations near radiators, heaters, or other heat sources, or locations near flammable items, to avoid the danger of fire. 

To keep the machine cool and facilitate changing of parts and maintenance, allow access space as shown below. Leave adequate space, especially around the rear cover, to allow air to be properly ventilated out of the machine. 

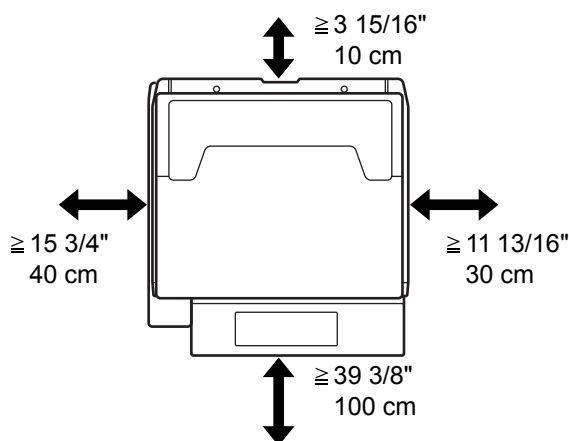

Other precautions

The service environmental conditions are as follows:

- Temperature: 50 to 90.5 °F (10 to 32.5 °C)
- Humidity: 15 to 80 %

However, adverse environmental conditions may affect the image quality. Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

Small amounts of ozone and other chemicals are released during copying, but the quantities do not present any health risk to humans. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

Do not install this machine beneath fluorescent lights. The original size may be detected incorrectly.

Power supply/Grounding the machine

Warning

Do not use a power supply with a voltage other than that specified. Avoid multiple connections in the same outlet. These types of situations present a danger of fire or electrical shock.



Plug the power cord securely into the outlet. If metallic objects come in contact with the prongs on the plug, it may cause a fire or electric shock.



Always connect the machine to an outlet with a ground connection to avoid the danger of fire or electrical shock in case of an electric short. If an earth connection is not possible, contact your service representative.



Other precautions

Connect the power plug to the closest outlet possible to the machine.

Handling of plastic bags

Warning

Keep the plastic bags that are used with the machine away from children. The plastic may cling to their nose and mouth causing suffocation.



Precautions for Use

Cautions when using the machine

Warning

Do not place metallic objects or containers with water (flower vases, flower pots, cups, etc.) on or near the machine. This situation presents a danger of fire or electrical shock should they fall inside.



Do not remove any of the covers from the machine as there is a danger of electrical shock from high voltage parts inside the machine.



Do not damage, break or attempt to repair the power cord. Do not place heavy objects on the cord, pull it, bend it unnecessarily or cause any other type of damage. These types of situations present a danger of fire or electrical shock.



Never attempt to repair or disassemble the machine or its parts as there is a danger of fire, electrical shock or damage to the laser. If the laser beam escapes, there is a danger of it causing blindness.



If the machine becomes excessively hot, smoke appears from the machine, there is an odd smell, or any other abnormal situation occurs, there is a danger of fire or electrical shock. Turn the main power switch off (⏻ position) immediately, be absolutely certain to remove the power plug from the outlet and then contact your service representative.



If anything harmful (paper clips, water, other fluids, etc.) falls into the machine, turn the main power switch off (⏻ position) immediately. Next, be absolutely certain to remove the power plug from the outlet to avoid the danger of fire or electrical shock. Then contact your service representative.



Do not remove or connect the power plug with wet hands, as there is a danger of electrical shock.



Always contact your service representative for maintenance or repair of internal parts.



Caution

Do not pull the power cord when removing it from the outlet. If the power cord is pulled, the wires may become broken and there is a danger of fire or electrical shock. (Always grasp the power plug when removing the power cord from the outlet.)



Always remove the power plug from the outlet when moving the machine. If the power cord is damaged, there is a danger of fire or electrical shock.



Always hold the designated parts only when lifting or moving the machine.



For safety purposes, always remove the power plug from the outlet when performing cleaning operations.



If dust accumulates within the machine, there is a danger of fire or other trouble. It is therefore recommended that you consult with your service representative in regard to cleaning of internal parts. This is particularly effective if accomplished prior to seasons of high humidity. Consult with your service representative in regard to the cost of cleaning the internal parts of the machine.



Other precautions

If the optional fax kit is installed, when the main power switch is off (⏻ position), fax send/receive is disabled. To turn the power off, press the **Power** key on the operation panel.

Do not place heavy objects on the machine or cause other damage to the machine.

Do not open the front cover, turn off the main power switch, or pull out the power plug during copying.

When lifting or moving the machine, contact your service representative.

Do not touch electrical parts, such as connectors or printed circuit boards. They could be damaged by static electricity.

Do not attempt to perform any operations not explained in this handbook.

Caution: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not look directly at the light from the scanning lamp as it may cause your eyes to feel tired or painful.

Cautions when handling consumables

Caution

Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.



Keep the toner container and the waste toner box out of the reach of children.



If toner happens to spill from the toner container or the waste toner box, avoid inhalation and ingestion, as well as contact with your eyes and skin.



- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth out with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy the toner container or the waste toner box.



Other precautions

After use, always dispose of the toner container and the waste toner box in accordance with Federal, State and Local rules and regulations.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the MP tray (multi-purpose tray), return it to its original package and reseal it.

Don't store the unit in a place exposed to:

- Direct sunlight
- High or rapidly variable temperature or humidity (limit: 104 °F or 40 °C)

Legal Information and Conventions

Please read this information before using your machine. This chapter provides information on the following topics:

Legal Information	x
Regarding Tradenames	x
Energy Saving Control Function	xi
Automatic 2-Sided Copy Function	xi
Recycled Paper	xi
Energy Star (ENERGY STAR®) Program	xi
About this Operation Guide	xvii
Conventions in This Guide	xvii
Originals and Paper Sizes	xviii

Legal Information

Notice: The information in this guide is subject to change without notification. Additional pages may be inserted in future editions. The user is asked to excuse any technical inaccuracies or typographical errors in the present edition.

No responsibility is assumed if accidents occur while the user is following the instructions in this guide. No responsibility is assumed for defects in the printer's firmware (contents of its read-only memory).

This guide, any copyrightable subject matter sold or provided with or in connection with the sale of the machine, are protected by copyright. All rights are reserved. Copying or other reproduction of all or part of this guide, any copyrightable subject matter without the prior written consent of Kyocera Mita Corporation is prohibited. Any copies made of all or part of this guide, any copyrightable subject must contain the same copyright notice as the material from which the copying is done.

Legal Restriction On Copying

- It may be prohibited to copy copyrighted material without permission of the copyright owner.
- It is prohibited under any circumstances to copy domestic or foreign currencies.
- Copying other items may be prohibited.

Regarding Tradenames

- PRESCRIBE and ECOSYS are registered trademarks of Kyocera Corporation.
- KPDL is trademark of Kyocera Corporation.
- Windows and Windows Server are registered trademarks of Microsoft Corporation.
- Windows NT is a trademark of Microsoft Corporation.
- PCL and PJI are registered trademarks of Hewlett-Packard Company.
- Adobe, Adobe Acrobat and Adobe Reader are registered trademarks of Adobe Systems Inc.
- PowerPC is a trademark of International Business Machines Corporation.
- CompactFlash is a trademark of SanDisk Corporation.

All other brand and product names are registered trademarks or trademarks of their respective companies. The designations [™] and [®] will not be used in this Operation Guide.

Energy Saving Control Function

The device comes equipped with a Low Power Mode where energy consumption is reduced after a certain amount of time elapses since the device was last used, as well as an Off Mode where the device automatically turns itself off after there is no activity within a set amount of time. When the copier includes printer and fax functions, the device comes equipped with a Low Power Mode where printer and fax functions remain in a waiting state but energy consumption is still reduced after a certain amount of time elapses since the device was last used, as well as a Sleep Mode where printer and fax functions remain in a waiting state but power consumption is still reduced to a minimum when there is no activity with the device within a set amount of time.

Low Power Mode

The device automatically enters Low Power Mode when 1 minute have passed since the device was last used. The amount of time of no activity that must pass before Low Power Mode is activated may be lengthened. For more information refer to *Low-Power Mode* on page 3-17.

Off Mode

The device automatically enters Off Mode when 9 minutes have passed since the device was last used. The amount of time of no activity that must pass before Off Mode is activated may be lengthened. For more information refer to *Sleep Mode* on page 3-17.

Sleep Mode (If the copier has printer and/or facsimile function)

The device automatically enters Sleep Mode when 9 minutes have passed since the device was last used. The amount of time of no activity that must pass before Sleep Mode is activated may be lengthened. For more information refer to *Sleep Mode* on page 3-17.

Automatic 2-Sided Copy Function

This device includes 2-sided copying as a standard function. For example, by copying two 1-sided originals onto a single sheet of paper as a 2-sided copy, it is possible to lower the amount of paper used. For more information refer to *Duplex Mode* on page 3-10.

Recycled Paper

This device supports the recycled paper which reduces the load on the environment. Your sales or service representative can provide information about recommended paper types.

Energy Star (ENERGY STAR®) Program



We have determined as a participating company in the International Energy Star Program that this product is compliant with the standards laid out in the International Energy Star Program.


Laser Safety (Europe)

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.


This machine is classified as Class 1 laser product under IEC 60825.

Caution: Performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

These labels are attached to the laser scanner unit inside the machine and are not in a user access area.

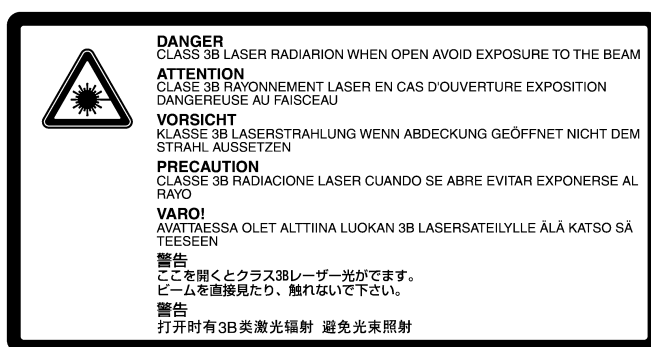

The label shown below is attached on the right side of the machine.

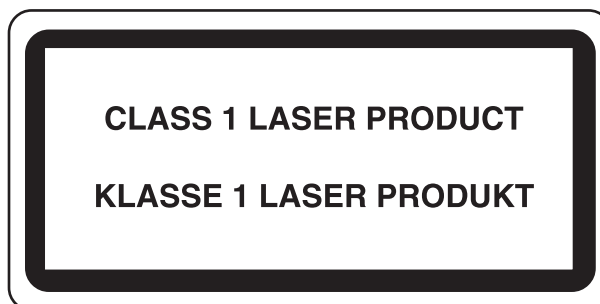

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

VORSICHT: Der Netzstecker ist die Hauptisoliervorrichtung! Die anderen Schalter auf dem Gerät sind nur Funktionsschalter und können nicht verwendet werden, um den Stromfluß im Gerät zu unterbrechen.



DECLARATION OF CONFORMITY TO 2004/108/EC, 2006/95/EEC, 93/68/EEC and 1995/5/EC

We declare under our sole responsibility that the product to which this declaration relates is in conformity with the following specifications.

EN55024

EN55022 Class B

EN61000-3-2

EN61000-3-3

EN60950-1

EN60825-1

EN300 330-1

EN300 330-2

Radio Frequency Transmitter

This machine contains the transmitter module. We, the manufacturer hereby declare that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Radio Tag Technology

In some countries the radio tag technology used in this equipment to identify the toner container may be subject to authorization and the use of this equipment may consequently be restricted.


SAFETY OF LASER BEAM (USA)



1. Safety of laser beam


This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S.DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

2. The CDRH Act

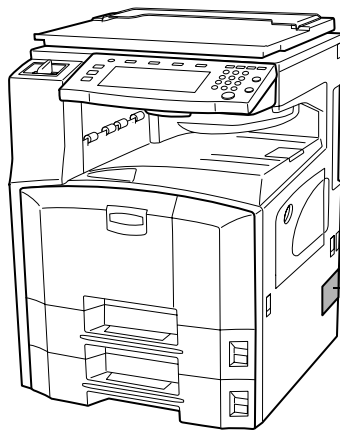A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States. On this machine, the label is on the right.




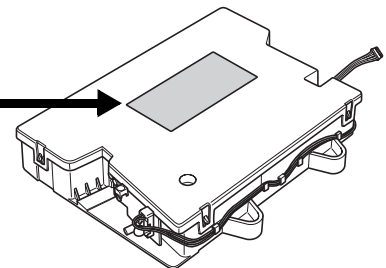
2540
COPYING MACHINE AC120V 60Hz 11.2A
MACHINE No. CODE No. MANUFACTURED
2J85  
Contains FCC ID : E52B5J0151 Contains IC : 1059B-B5J0151
This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.
This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Complies with FDA radiation performance standards, 21 CFR Subchapter J.
KYOCERA MITA Corporation 2-28 1-CHOME TAMATSUKURI CHUO-KU OSAKA JAPAN C11 MADE IN CHINA >A85<

3040
COPYING MACHINE AC120V 60Hz 11.2A
MACHINE No. CODE No. MANUFACTURED
2J85  
Contains FCC ID : E52B5J0151 Contains IC : 1059B-B5J0151
This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.
This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Complies with FDA radiation performance standards, 21 CFR Subchapter J.
KYOCERA MITA Corporation 2-28 1-CHOME TAMATSUKURI CHUO-KU OSAKA JAPAN C11 MADE IN CHINA >A85<

3. Optical unit

When checking the optical unit, avoid direct exposure to the laser beam, which is invisible. Shown at below is the label located on the cover of the optical unit.

	DANGER CLASS 3B LASER RADIATION WHEN OPEN AVOID EXPOSURE TO THE BEAM
	ATTENTION CLASSE 3B RAYONNEMENT LASER EN CAS D'OUVERTURE EXPOSITION DANGEREUSE AU FAISCEAU
	VORSICHT KLASSE 3B LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETZEN
	PRECAUTION CLASSE 3B RADIACIONE LASER CUANDO SE ABRE EVITAR EXPONERSE AL RAYO
	VARO! AVATTAESSA OLET ALTTIINA LUOKAN 3B LASERSATEILYLLE ÄLÄ KATSO SÄ TEESEEN
	警告 ここを開くとクラス3Bレーザー光がでます。 ビームを直接見たり、触れないで下さい。
	警告 打开时有3B类激光辐射 避免光照射



4. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

5. Safety switch

The power to the laser unit is cut off when the front cover is opened.

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

Attention: Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

CAUTION — The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules.

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

* The above warning is valid only in the United States of America.

Radio Tag Technology

In some countries the radio tag technology used in this equipment to identify the toner container may be subject to authorization and the use of this equipment may consequently be restricted.

MERCURY WARNING



THE LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

Warranty (USA)

KM-2540 / KM-3040 MULTIFUNCTIONAL PRODUCT LIMITED WARRANTY

Kyocera Mita America, Inc. and Kyocera Mita Canada, Ltd. (both referred to as "Kyocera") warrant the Customer's new Multifunctional Product (referred to as "MFP"), and the new accessories installed with the initial installation of the MFP, against any defects in material and workmanship for a period of one (1) year, or 300,000 copies/prints from date of installation, whichever first occurs. In the event the MFP or an accessory is found to be defective within the warranty period, Kyocera's only obligation and the Customer's exclusive remedy shall be replacement of any defective parts. Kyocera shall have no obligation to furnish labor.

This warranty is valid only for the original retail purchaser (referred to as the "Customer") of a new Kyocera MFP in the United States of America or Canada, based upon the country of purchase.

In order to obtain performance of this warranty, the Customer must immediately notify the Authorized Kyocera Dealer from whom the product was purchased. If the Kyocera Dealer is not able to provide service, write to Kyocera at the address below for the name and address of the Authorized Kyocera Dealer in your area or check Kyocera's Website at www.kyoceramita.com.

This warranty does not cover MFP's or accessories which: (a) have become damaged due to operator negligence, misuse, accidents, improper storage or unusual physical or electrical stress, (b) have used parts or supplies which are not genuine Kyocera brand parts or supplies, (c) have been installed or serviced by a technician not employed by Kyocera or an Authorized Kyocera Dealer, or (d) have had the serial number modified, altered, or removed.

This warranty does not cover Maintenance Kits or the components of Maintenance Kits, which consist of the drum unit, the fixing unit, and the developing unit which have separate warranties.

This warranty gives the Customer specific legal rights. The Customer may also have other rights, which vary from state to state, or province to province. Neither the seller, nor any other person, is authorized to extend the time period or expand this warranty on behalf of Kyocera.

THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND KYOCERA SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY SHALL NOT EXTEND TO, AND KYOCERA SHALL NOT BE LIABLE FOR, ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY ARISE OUT OF THE USE OF, OR INABILITY TO USE, THE MFP.

KYOCERA MITA AMERICA, INC.
225 Sand Road
Fairfield, New Jersey
07004-0008, USA

KYOCERA MITA CANADA, LTD.
6120 Kestrel Road
Mississauga, Ontario L5T 1S8
Canada

About this Operation Guide

This Operation Guide contains the following chapters:

1 Part Names

Identifies machine parts and operation panel keys.

2 Preparation for Usage

Explains adding paper, placing original, connecting the machine, and necessary configurations before first use.

3 Basic Operation

Describes the procedures for basic copying.

4 Optional Equipment

Introduces the convenient optional equipment available for this machine.

5 Maintenance

Describes cleaning and toner replacement.

6 Troubleshooting


Explains how to handle error messages, paper jams, and other problems.

Appendix

Explains how to enter text, describes the media types that can be used with the machine and lists the machine specifications.

Conventions in This Guide





The following conventions are used depending on the nature of the description.

Convention	Description	Example
Bold	Indicates operation panel keys.	Press the Start key.
[Regular]	Indicates touch panel keys.	Press [Basic].
<i>Italic</i>	Indicates touch panel messages.	<i>Ready to copy</i> is displayed.
Note	Indicates supplemental information or operations for reference.	 Note -
IMPORTANT	Indicates items that are required or prohibited so as to avoid problems.	IMPORTANT -

Originals and Paper Sizes

This section explains the notation used in this guide when referring to sizes of originals or paper sizes.

As in A4 and B5, which may be used either in the horizontal or vertical direction, in order to indicate the orientation of the original/paper, horizontal orientation is indicated by an additional R character.

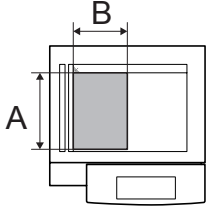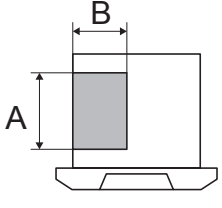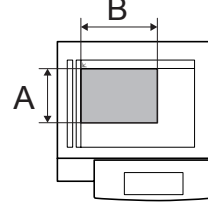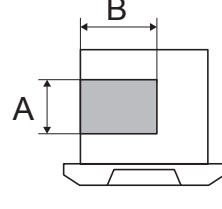Set direction	Indicated size ^a
<p data-bbox="635 533 826 562">Vertical direction</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p data-bbox="762 790 866 819">Original</p> </div> <div style="text-align: center;">  <p data-bbox="1042 790 1106 819">Size</p> </div> </div> <p data-bbox="635 831 1185 860">For original/paper, dimension A is longer than B.</p>	<p data-bbox="1219 533 1406 595">A4, B5, A5, B6, A6, 16K</p>
<p data-bbox="635 873 858 902">Horizontal direction</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p data-bbox="762 1131 866 1160">Original</p> </div> <div style="text-align: center;">  <p data-bbox="1042 1131 1106 1160">Size</p> </div> </div> <p data-bbox="635 1167 1185 1196">For original/paper, dimension A is shorter than B.</p>	<p data-bbox="1219 873 1406 936">A4R, B5R, A5R, B6R, A6R, 16KR</p>


- a. The size of original/paper that can be used depends on the function and source tray. For further details, refer to the page detailing that function or source tray.

1 Part Names


This chapter identifies machine parts and operation panel keys.

Body	1-2
Operation Panel	1-5
Touch Panel	1-6


Body

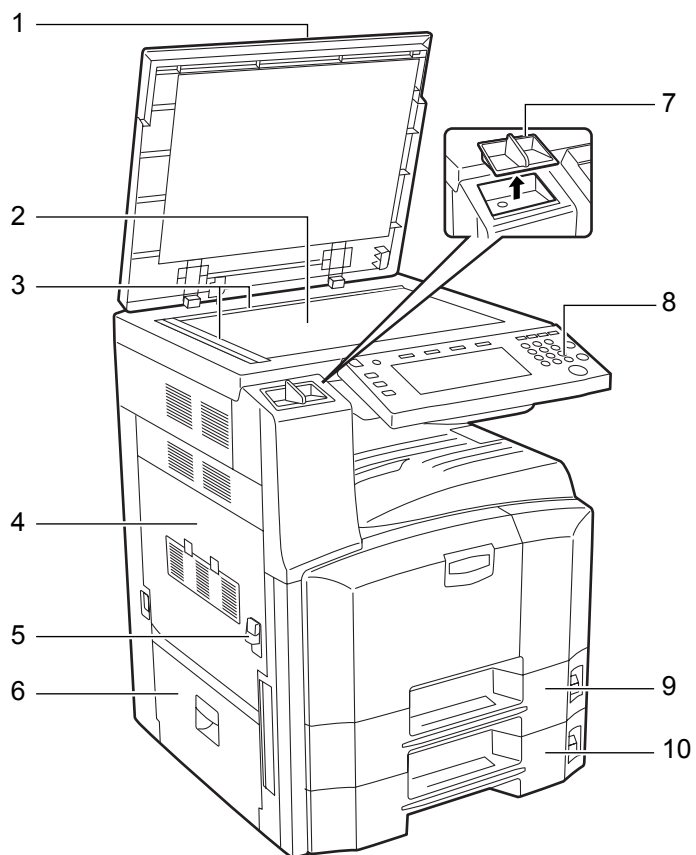

- 1 Original Cover (Option)
- 2 Platen
- 3 Original Size Indicator Plates
- 4 Left Cover 1
- 5 Left Cover 1 Lever
- 6 Left Cover 2
- 7 Clip Holder
- 8 Operation Panel
- 9 Cassette 1
- 10 Cassette 2

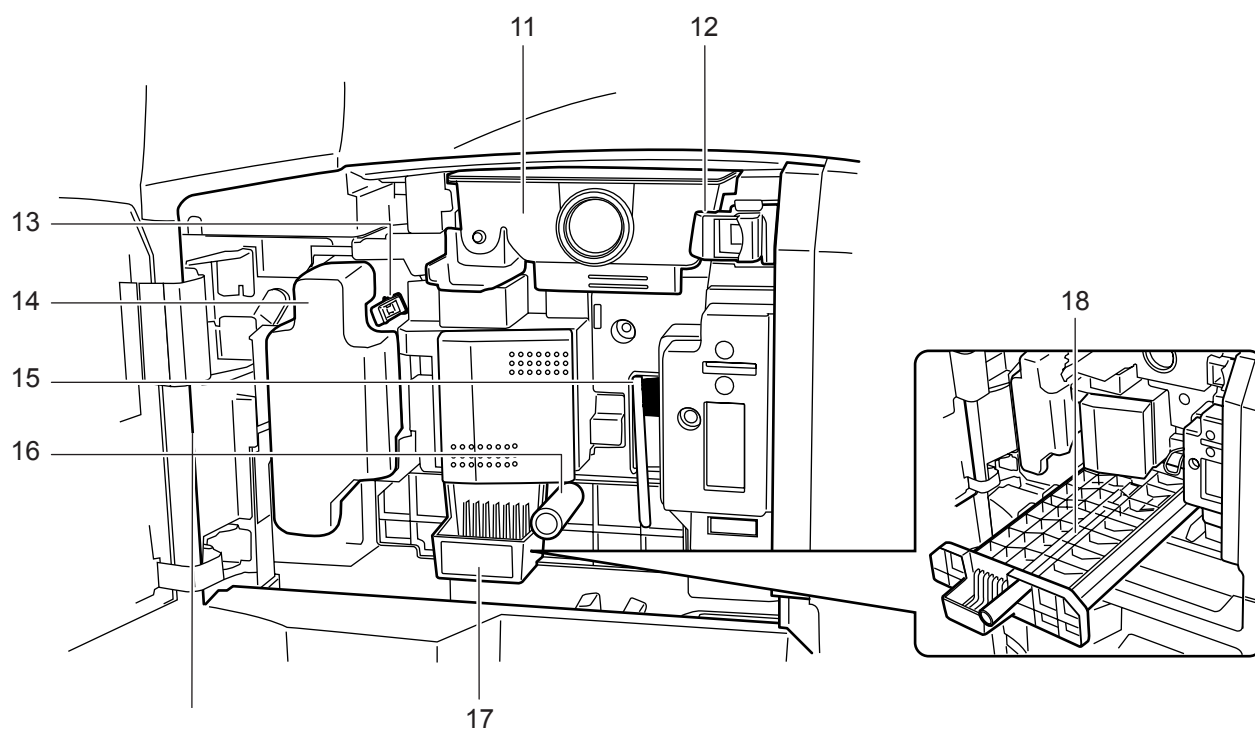


- 11** Toner Container
- 12** Toner Container Stopper
- 13** Main Charger
- 14** Waste Toner Box
- 15** Cleaning Brush
- 16** Green Knob (A1)
- 17** Paper Feed Unit (A2)
- 18** Paper Feed Unit Cover (A3)

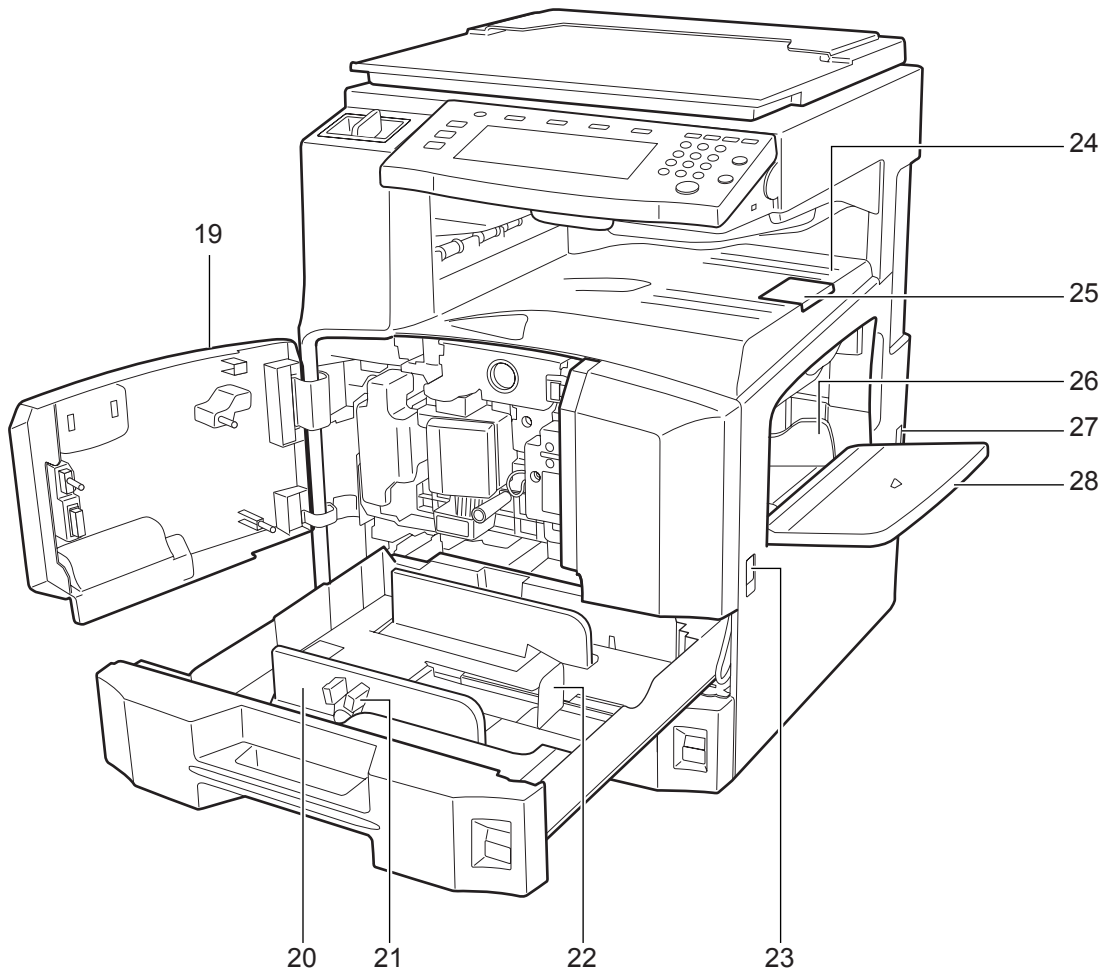

- 19** Front Cover
- 20** Paper Width Guide
- 21** Paper Width Adjusting Tab
- 22** Paper Length Guide
- 23** Carrying Handles
- 24** Top Tray
- 25** Output Stopper
- 26** Paper Width Guide
- 27** Main Power Switch
- 28** MP Tray (multi-purpose tray)

Operation Panel

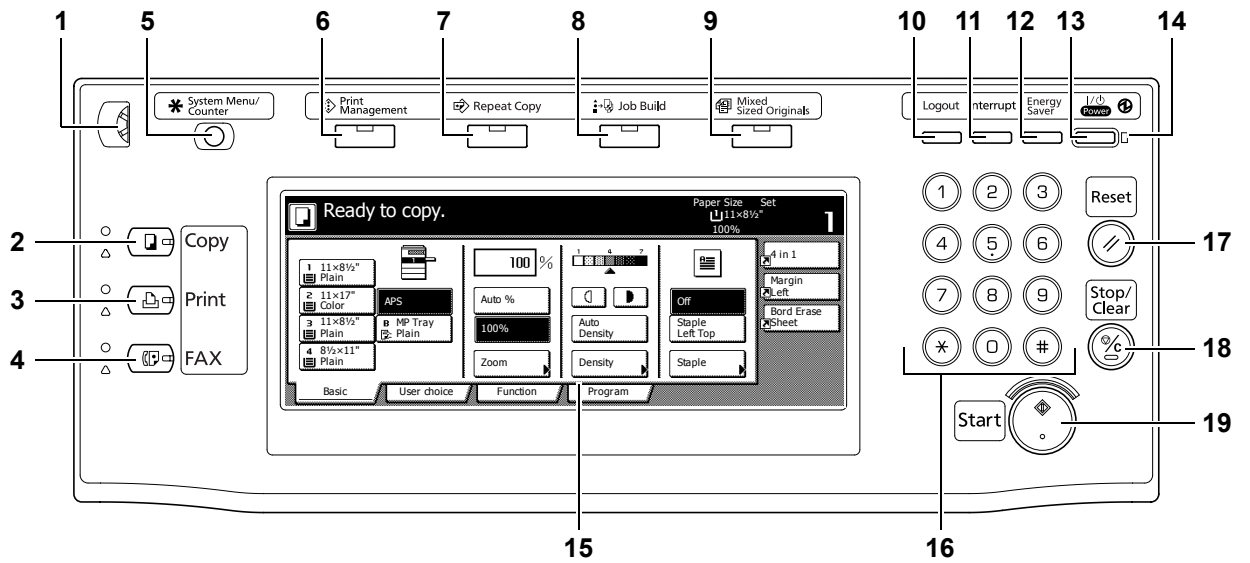


- 1 Brightness Adjustment Dial
- 2 **Copy** Key (Indicator/Lamp)
- 3 **Print** Key (Indicator/Lamp)
- 4 **FAX** Key (Indicator/Lamp)
- 5 **System Menu/Counter** Key
- 6 **Print Management** Key/Indicator
- 7 **Repeat Copy** Key/Indicator
- 8 **Job Build** Key/Indicator
- 9 **Mixed Sized Originals** Key/Indicator
- 10 **Logout** Key
- 11 **Interrupt** Key/Indicator
- 12 **Energy Saver** Key/Indicator
- 13 **Power** Key/Indicator
- 14 Main Power Indicator
- 15 Touch Panel
- 16 Numeric Keys
- 17 **Reset** Key
- 18 **Stop/Clear** Key
- 19 **Start** Key/Indicator


Touch Panel

Displayed by pressing the **Copy** key. Screen changes when **1, 2, 3** and **4** are pressed.


1 [Basic] screen

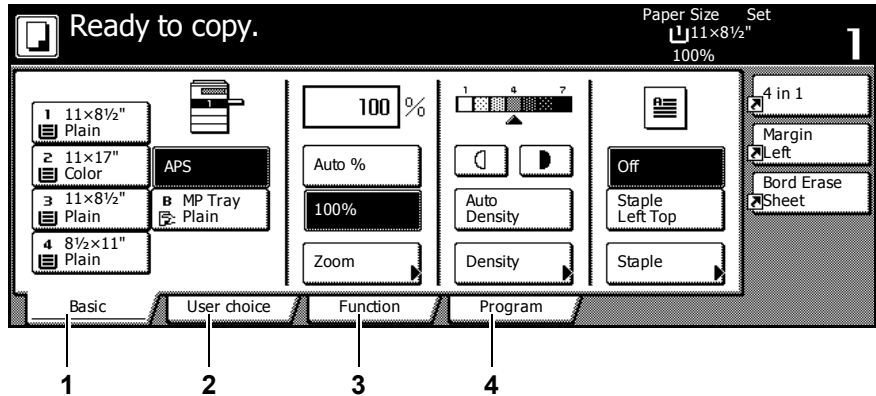


2 [User choice] screen

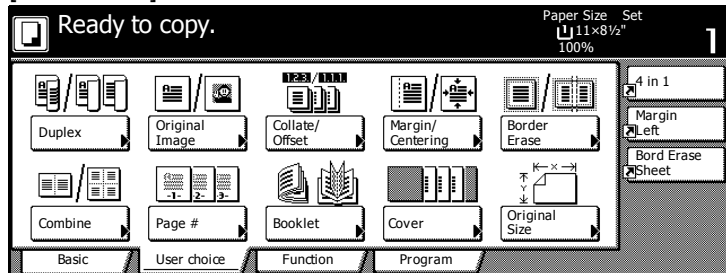

3 [Function] screen

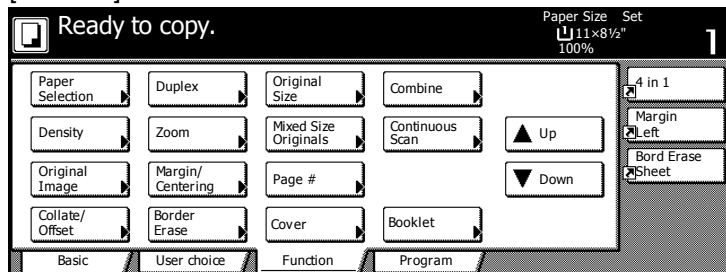

4 [Program] screen

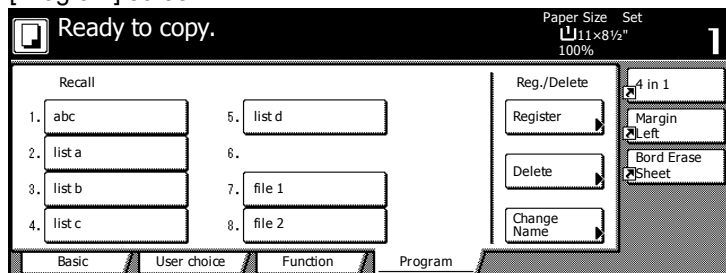

2 Preparation for Usage

This chapter explains the preparations required before using the machine.


Loading Paper	2-2
Before Loading Paper.....	2-2
Loading Paper into Cassette 1, 2	2-2
Loading Paper in the MP Tray.....	2-4
Loading Envelopes	2-6
Setting Media Type and Paper Size for the Cassettes and MP Tray	2-7
Specifying Paper Size for the Cassettes	2-7
Specifying the Media Type for the Cassettes	2-8
Specifying the Paper Size for the MP Tray	2-9
Specifying the Media Type for the MP Tray	2-13
Loading Originals	2-14
Loading Originals on the Platen	2-14
Loading Originals in the Document Processor (option).....	2-15
Language	2-18

Loading Paper

Paper can be loaded standardly in the two cassettes and the MP tray. An optional paper feeder is also available. (Refer to *Chapter 4 Optional Equipment*.)

Before Loading Paper

When you open a new package of paper, fan the sheets to separate them slightly prior to loading by the following steps.

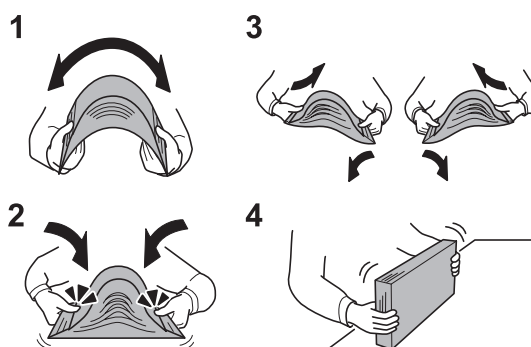

- 1 Bend the stack of sheets and swell in the middle.
- 2 Hold the stack at both ends and stretch the bottom out flat while keeping the top of the stack swelled.
- 3 Raise your right and left hands alternately to create a gap and let air between the sheets.
- 4 Finally, even out the stack on a level, flat table.

If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.

IMPORTANT If you copy with used paper (paper already used for copying), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.



Note If printouts are curled or not neatly stapled, turn the stack in the cassette upside down.

Avoid exposing opened paper to high temperatures and high humidity as dampness can cause problems. Seal any remaining paper after loading in the MP tray or cassettes back in the paper storage bag.

If the machine is not going to be used for a prolonged period, protect paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.



Note If you use special paper such as letterhead, paper with holes or paper with pre-prints such as logos or company name, refer to the *Advanced Operation Guide*.


Loading Paper into Cassette 1, 2

Up to 500 sheets of plain paper (80 g/m²) or colored paper (80 g/m²) may be loaded in each of the two standard cassettes.

The following paper sizes are supported: 11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, A4, A4R, B5, B5R, A5R, Folio, 8K, 16K and 16KR.

IMPORTANT When using media types other than plain paper (such as recycled or colored paper), always specify the media type setting. (Refer to *Specifying the Media Type for the Cassettes* on page 2-8.)


The cassettes can hold 60 to 120 g/m² paper. When using 120 g/m² paper, specify [Thick paper] for *Specifying the Media Type for the Cassettes* on page 2-8. If the media type setting is wrong, paper jams and deterioration of copy quality may occur.

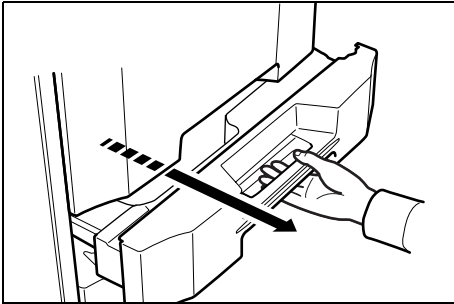

1 Pull the cassette out toward you until it stops.




Note Do not pull out more than one cassette at a time.

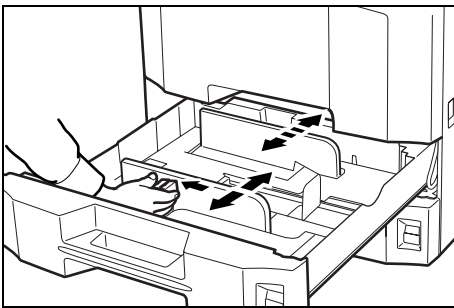


2 Holding the paper width adjusting tab, move the paper width guides to fit the paper.



Note Paper sizes are marked on the cassette.

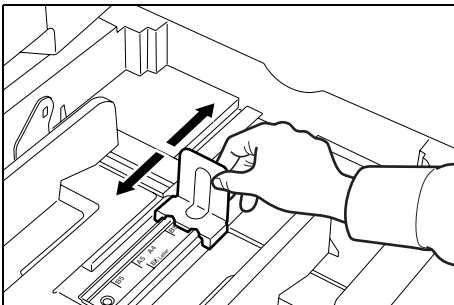

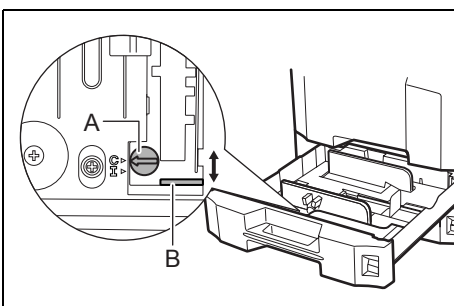

3 Adjust the paper length guide to the length of the paper.



Note Paper sizes are indicated on the cassettes.

To change between inch size and metric size (A, B sizes), follow the steps below to adjust the size switch.


1 Holding the paper width adjusting tab, move the paper width guide to a position other than that of the paper.


2 Turn the size switch **A** 90°.  > 

3 Move the size lever **B** up (**C**) or down (**I**).


C: metric size (centimeters) (A, B sizes)

I: inch size

4 Turn the size switch 90° to lock it.  > 

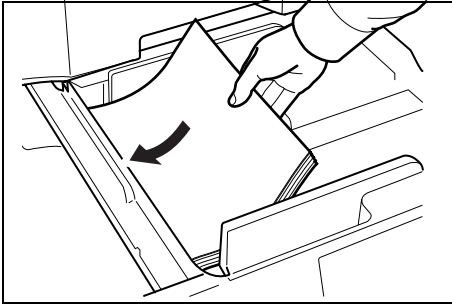

- 4** Align the paper flush against the left side of the cassette.

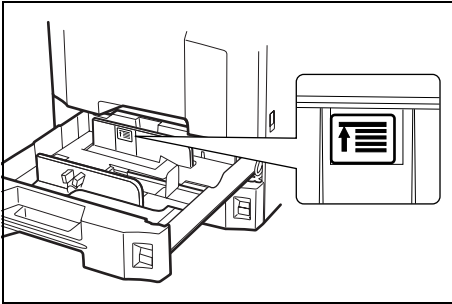


IMPORTANT Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.

Ensure that the loaded paper does not exceed the level indicator (see the figure).

When loading the paper, keep the side that was closest the package seal facing up.

The paper length and width guides must be adjusted to the paper size. Loading the paper without adjusting these guides may cause skewed feeding and paper jams.

Be sure that the paper length and width guides rest securely against the paper. If there is a gap, readjust the guides to fit the paper.

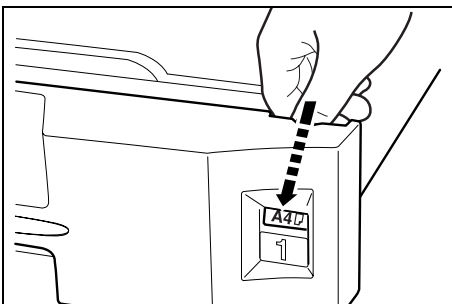

- 5** Insert the appropriate paper size card in the slot to indicate the size of the paper inside.

- 6** Gently push the cassette back in.



Note If the machine is not going to be used for a prolonged period, protect paper from humidity by removing it from the cassettes and sealing it in the original package.

- 7** Select the media type (plain, recycled, etc.) for the cassette with the operation panel. (Refer to *Specifying the Media Type for the Cassettes* on page 2-8.)

Loading Paper in the MP Tray

Up to 200 sheets of plain paper (80 g/m²) may be loaded in the MP tray.

The MP tray accepts paper sizes from 11 × 17" to 5 1/2 × 8 1/2", A3 to A6R, 8K, 16K and 16KR. Be sure to use the MP tray when you print on any special paper.

IMPORTANT When using media types other than plain paper (such as recycled or colored paper), always specify the media type setting. (Refer to *Specifying the Media Type for the MP Tray* on page 2-13.)


The capacity of the MP tray is as follows.

- Thick paper (120 g/m²): 130 sheets
- Thick paper (160 g/m²): 100 sheets
- Thick paper (200 g/m²): 50 sheets
- Hagaki: 80 sheets
- OHP film: 25 sheets
- Envelope DL, Envelope C5, Comm. #10, Monarch, Youkei 4, Youkei 2: 20 sheets




Note When you load custom size paper, enter the paper size by referring to *Specifying the Paper Size for the MP Tray* on page 2-9.


When you use special paper such as transparencies or thick paper, select the media type by referring to *Specifying the Media Type for the MP Tray* on page 2-13.

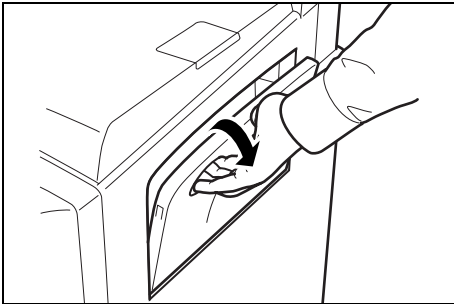

- 1 Open the MP tray.

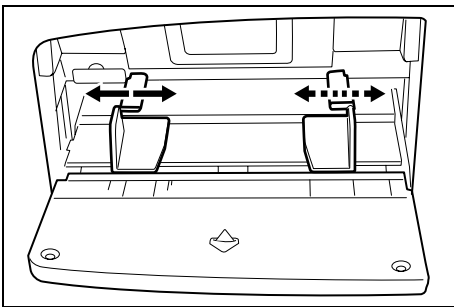

- 2 Adjust the paper width guides to the width of the paper.

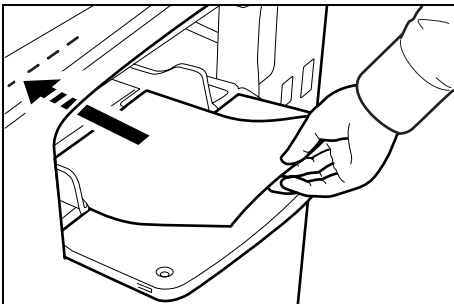

- 3 Insert the paper along the paper width guides into the tray until it stops.

IMPORTANT Keep the side that was closest the package seal facing up.

Curled paper must be uncurled before use.

Straighten the top edge if it is curled.


When loading paper, always adjust the paper width guides to the width of the paper. If you butt the paper up against either side of the MP tray and then use the machine without adjusting the paper width guides to the width of the paper, the machine will malfunction.

Loading Envelopes


Up to 20 envelopes may be loaded in the MP tray.

Acceptable envelope sizes are as follows.


Acceptable Envelope	Size
Monarch	3 7/8 × 7 1/2"
Comm. #10	4 1/8 × 9 1/2"
Envelope DL	110 × 220 mm
Envelope C5	162 × 229 mm
Executive	7 1/4 × 10 1/2"
Comm. #9	3 7/8 × 8 7/8"
Comm. #6-3/4	3 5/8 × 6 1/2"
ISO B5	176 × 250 mm
Envelope C4	229 × 324 mm
Oufuku Hagaki	148 × 200 mm
Youkei 2	162 × 114 mm
Youkei 4	234 × 105 mm

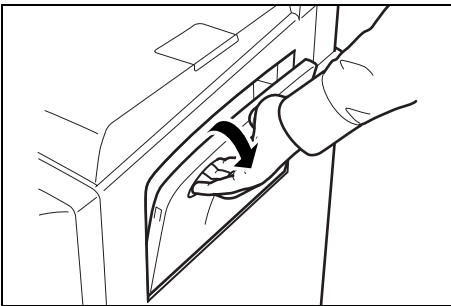

1 Open the MP tray.

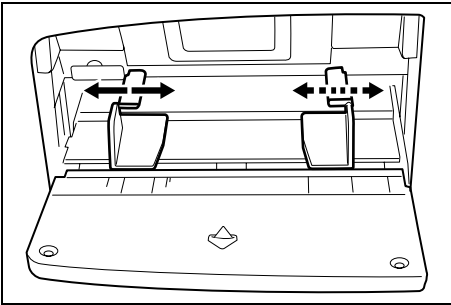

2 Adjust the paper width guides to the width of the envelope.

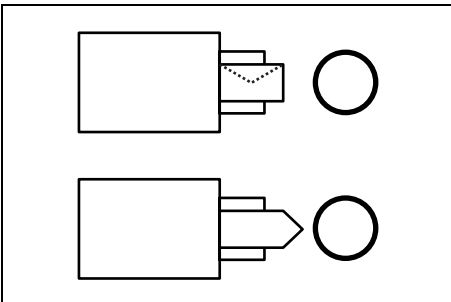

3 For landscape form envelopes, close the flap. Insert the envelope all the way along the width guides, keeping the printing side face-up and the flap closed.

For portrait form envelopes, open the flap. Insert the envelope all the way along the width guides, keeping the printing side face-up and the flap positioned opposite to the entrance.

IMPORTANT How envelopes are loaded (orientation and facing) will differ depending on the type of envelope. Be sure to load them correctly, otherwise they may be printed in the wrong direction or on the wrong face.



Note When you load envelopes in the MP tray, select the envelope type by referring to *Specifying the Media Type for the MP Tray* on page 2-13.

Setting Media Type and Paper Size for the Cassettes and MP Tray

The default paper size setting for cassettes 1 and 2 and for the optional paper feeder (cassettes 3 and 4) is [Auto Detection] and the default media type setting is [Plain]. To fix the type of paper to be used, specify the paper size and media type settings. Refer to *Specifying Paper Size for the Cassettes* below and *Specifying the Media Type for the Cassettes* on page 2-8.

The default paper size setting for the MP tray is [Auto Detection] and the default media type setting is [Plain]. To fix the type of paper to be used, specify the paper size and media type settings. Refer to *Specifying the Paper Size for the MP Tray* on page 2-9 and *Specifying the Media Type for the MP Tray* on page 2-13.


Specifying Paper Size for the Cassettes

To fix the type of paper to be used in cassettes 1 and 2 and in the optional paper feeder (cassettes 3 and 4), specify the paper size setting. To automatically detect the paper size, set to [Auto Detection] and select either [Centimeter] or [Inch] units.

The following paper sizes are available.

11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2",
8 1/2 × 13 1/2", 8 1/2 × 13" (Oficio II), A3, B4, A4, A4R, B5, B5R, A5R,
Folio, 8K, 16K, 16KR

1 Press the **System Menu/Counter** key.

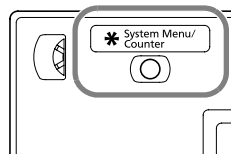

2 Press [Machine Default].



3 Use the numeric keys to enter the 4 digit management code. The default setting is 2500 for the 25 cpm model and 3000 for the 30 cpm model.


If the correct management code has been entered, the *Machine Default* screen will be displayed.

4 Press [▲] or [▼], select the cassette you wish to set the paper size from *Paper size (Cassette 1) - Paper size (Cassette 4)* and press [Change #].



Note *Cassette 3* and *Cassette 4* are shown when the optional paper feeder have been installed.

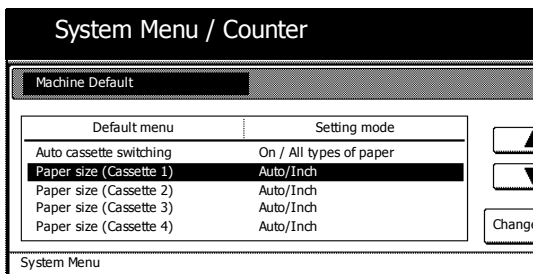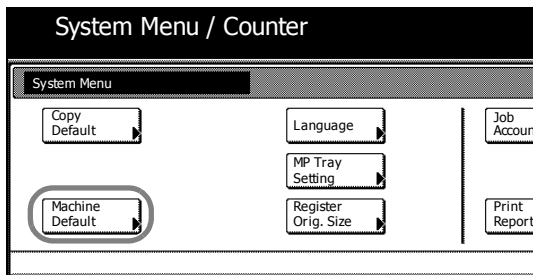

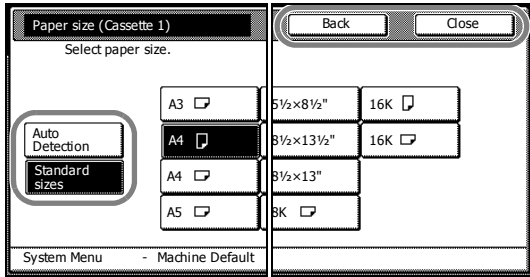

5 If [Auto Detection] is selected, choose the unit type. If [Standard sizes] is selected, choose the paper size.

Press [Close].

Key	Description
[Close]	Keeps the settings and returns to the previous page.
[Back]	Cancels settings and returns to the previous page.

6 Press [Close].

7 Press [End]. The display returns to the [Basic] screen.

Specifying the Media Type for the Cassettes


To use a media type other than plain paper in cassettes 1 and 2 or in the optional paper feeder (cassettes 3 and 4), specify the media type setting.

The following media types are available.


Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick paper, High Quality, Custom 1 - 8

IMPORTANT If the optional fax kit is installed, the available media types for printing received faxes are as shown below.

Plain, Rough, Recycled, Bond, Color (Colour), High Quality, Custom 1 - 8

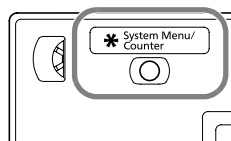


1 Press the **System Menu/Counter** key.

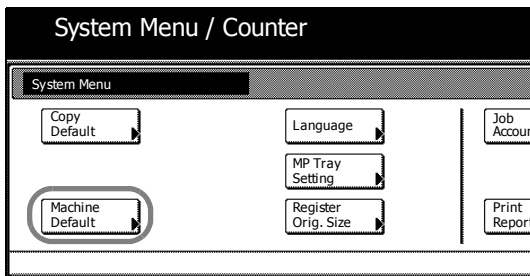

2 Press [Machine Default].

3 Use the numeric keys to enter the 4 digit management code. The default setting is 2500 for the 25 cpm model and 3000 for the 30 cpm model.


If the correct management code has been entered, the *Machine Default* screen will be displayed.

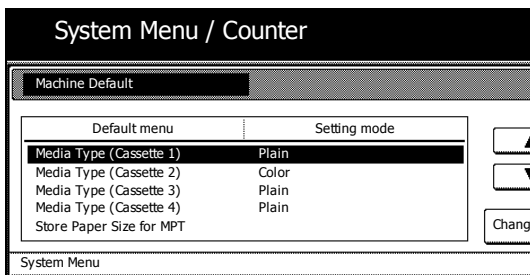

4 Press [▲] or [▼], select the cassette you wish to set the media type from *Media Type (Cassette 1) - Media Type (Cassette 4)* and press [Change #].



Note *Cassette 3* and *Cassette 4* are shown when the optional paper feeder have been installed.

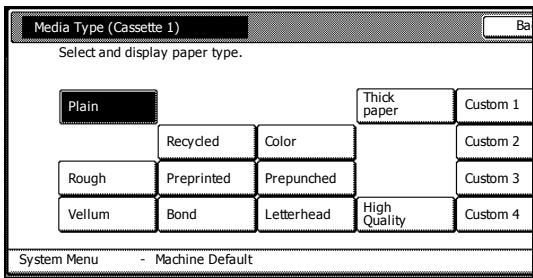

- 5 Select the media type and press [Close].
- 6 Press [Close].
- 7 Press [End]. The display returns to the [Basic] screen.

Specifying the Paper Size for the MP Tray

To fix the type of paper to be used in the MP tray, specify the paper size setting.


The following paper sizes are available.


Setting method	Unit	Paper size
Auto Detect	Inch	11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2"
	Centimeter	A3, B4, A4, A4R, B5, B5R, A5R, B6R, A6R
Other Standard Sizes		ISO B5, Envelope DL, Envelope C5, Envelope C4, Comm. #10, Comm. #9, Comm. #6-3/4, Monarch, Executive, OUFUKU HAGAKI (return postcard), YOUKEI 2, YOUKEI 4, 8 1/2 × 13 1/2", 8 1/2 × 13" (Oficio II), 8K, 16K, 16KR
Size Entry		Inch models Height: 3 7/8 - 11 5/8" (1/8" increments) Width: 5 7/8 - 17" (1/8" increments) Metric models Height: 98 - 297 mm (1 mm increments) Width: 148 - 432 mm (1 mm increments)
Custom Size		Pre-assigned paper size 1-4 Assignable paper sizes Inch models Height: 3 7/8 - 11 5/8" (1/8" increments) Width: 5 7/8 - 17" (1/8" increments) Metric models Height: 98 - 297 mm (1 mm increments) Width: 148 - 432 mm (1 mm increments)

Auto Detect


The paper size is automatically detected. Select between [Centimeter] ([Centimetre]) and [Inch] measurement units.

- 1 Press the **System Menu/Counter** key.

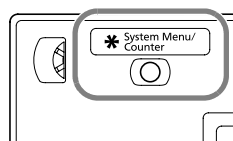

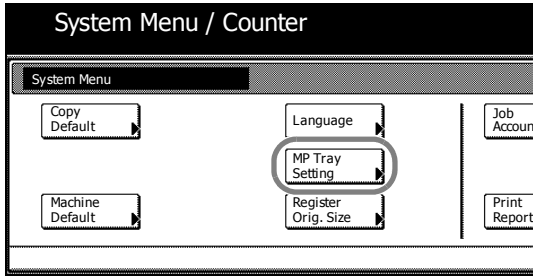

2 Press [MP Tray Setting].

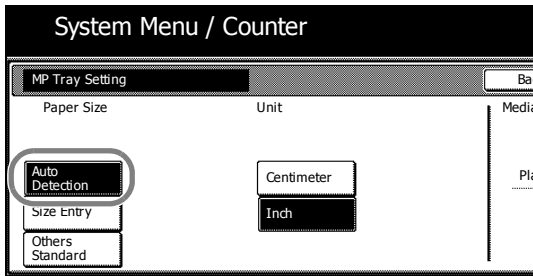


3 Press [Auto Detection].

4 Select [Centimeter] ([Centimetre]) or [Inch].


5 Press [Close]. The display returns to the [Basic] screen.

Other Standard Sizes


Specify special standard sizes.

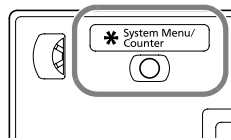


1 Press the **System Menu/Counter** key.

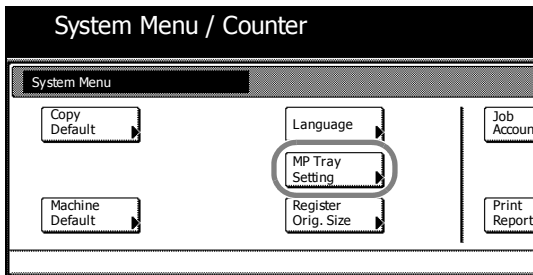

2 Press [MP Tray Setting].

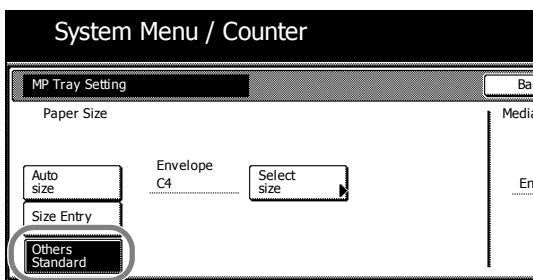

3 Press [Others Standard] and press [Select size].

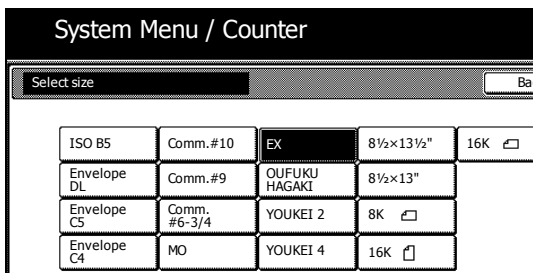

4 Select the paper size.


5 Press [Close].

6 Press [Close]. The display returns to the [Basic] screen.


Size Entry

Specify the required paper size.

1 Press the **System Menu/Counter** key.

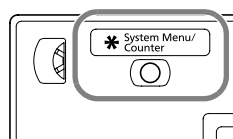

2 Press [MP Tray Setting].

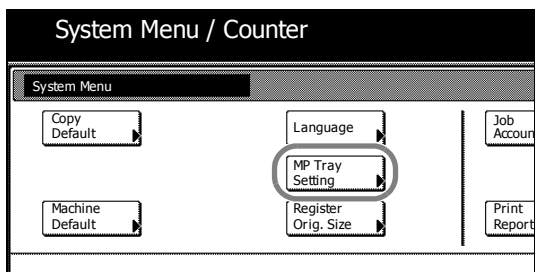


3 Press [Size Entry].

4 Press [+] and [-] to set the Y (height) and X (width) sizes.

With the metric models, you may enter the size directly using the numeric keys by pressing [#-Keys].

5 Press [Close]. The display returns to the [Basic] screen.

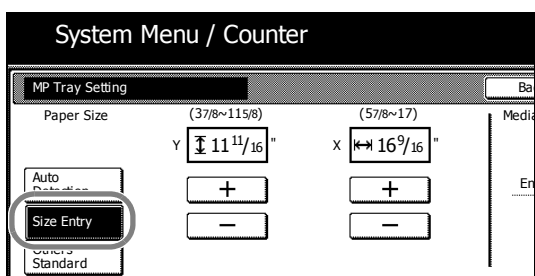


Custom Size

Store frequently used paper sizes as custom sizes. Also, the media type can be set for each custom size.

Assignment Method

1 Press the **System Menu/Counter** key.


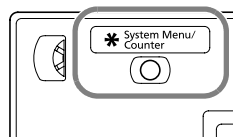



2 Press [Machine Default].

3 Use the numeric keys to enter the 4 digit management code. The default setting is 2500 for the 25 cpm model and 3000 for the 30 cpm model.


If the correct management code has been entered, the *Machine Default* screen will be displayed.

4 Press [▲] or [▼] to select *Store Paper Size for MPT*, and press [Change #].

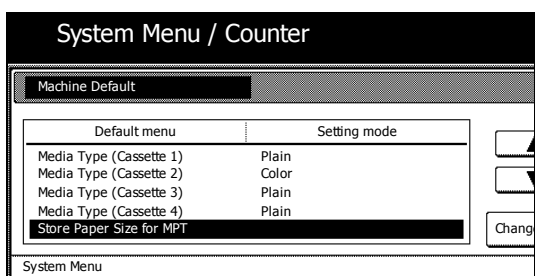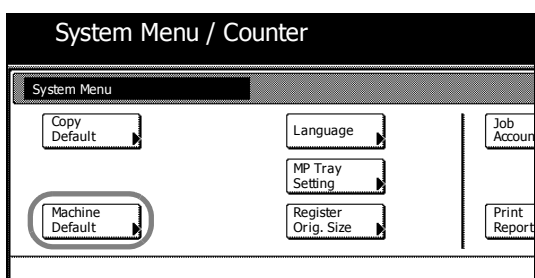

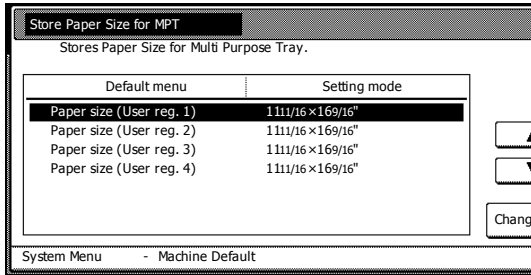

5 Press [▲] or [▼], select the number to register from *Paper size (User reg. 1 - 4)* and press [Change #].

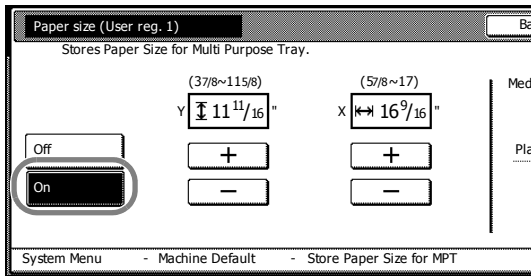

6 Press [On] and press [+] or [-] to set the Y (Length) and X (Width) sizes.

With the metric models, you may enter the size directly using the numeric keys by pressing [#-Keys].

To specify a media type, press [Select Media Type]. Select the media type and press [Close].


7 Press [Close].

8 Press [Close].


9 Press [End]. The display returns to the [Basic] screen.

Setting Method


1 Press the **System Menu/Counter** key.

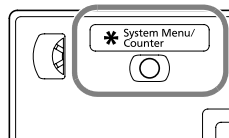

2 Press [MP Tray Setting].

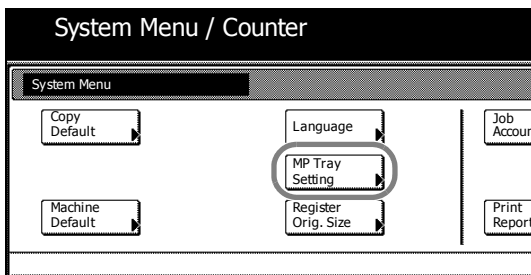


3 Press [Others Standard] and press [Select size].

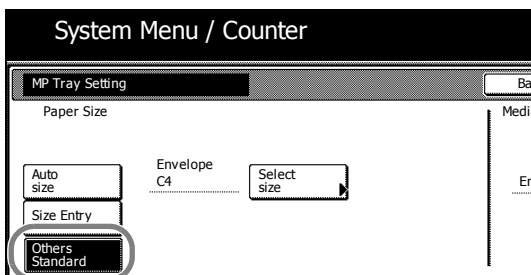

4 Select the paper size from *Custom Size (Use regist)*.

5 Press [Close].

6 Press [Close]. The display returns to the [Basic] screen.

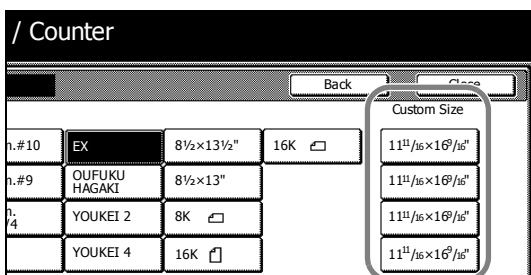

Specifying the Media Type for the MP Tray

To use a media type other than plain paper in the MP tray, specify the media type setting.

The following media types are available.

Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Thick paper, Envelope, High Quality, Custom 1 - 8


IMPORTANT If the optional fax kit is installed and you are using the MP tray to print received faxes (refer to *Turning Manual Paper Feed ON/OFF (MP Tray setting)* in Chapter 6 of the fax kit *Operation Guide*), the available media types are as shown below.

Plain, Rough, Recycled, Bond, Color (Colour), High Quality, Custom 1 - 8




Note Media type cannot be changed for MP tray paper size when a Custom size has been selected that has already set the media type.


1 Press the **System Menu/Counter** key.

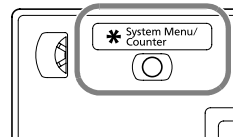

2 Press [MP Tray Setting].

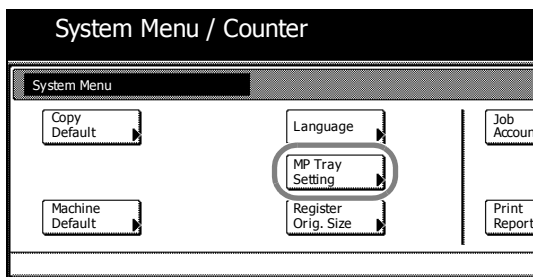


3 Press [Select Media Type].

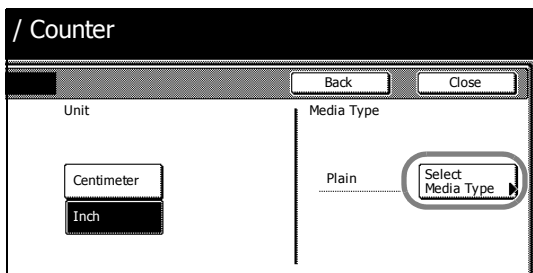

4 Select the media type.

5 Press [Close].

6 Press [Close]. The display returns to the [Basic] screen.

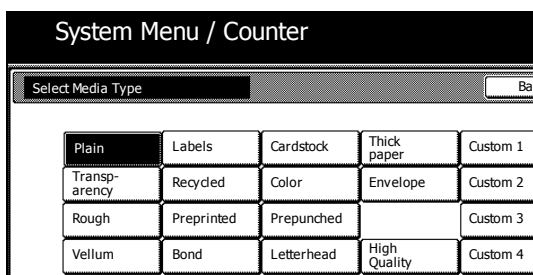


Loading Originals

Follow the steps below to load originals for copying.

Loading Originals on the Platen

You may place books or magazines on the platen in addition to ordinary sheet originals.


- 1 Open the original cover.

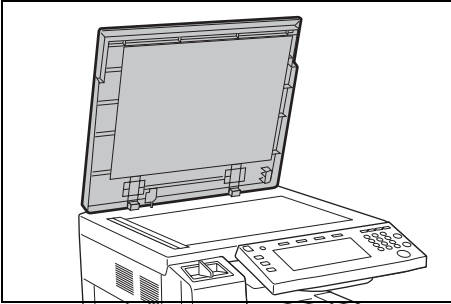


Note Open the optional document processor instead if installed. Before opening the document processor, be sure that there are no originals left on the original table or on the original eject table. Left originals may fall off when the document processor is opened.

Keep the document processor open if the original is 40 mm or thicker.


- 2 Place the original. Put the scanning side facedown and align it flush against the original size indicator plates with the back left corner as the reference point.

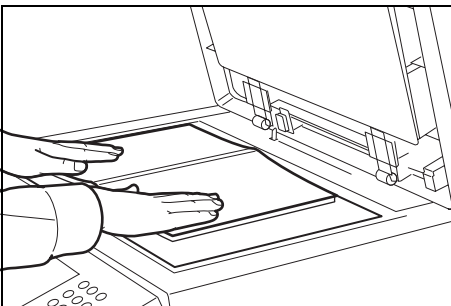

Original size indicator plates (Inch models)

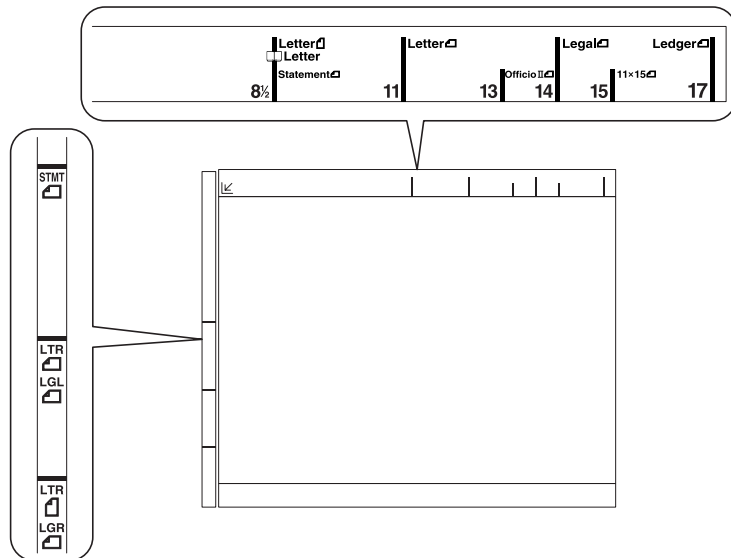


(Metric models)

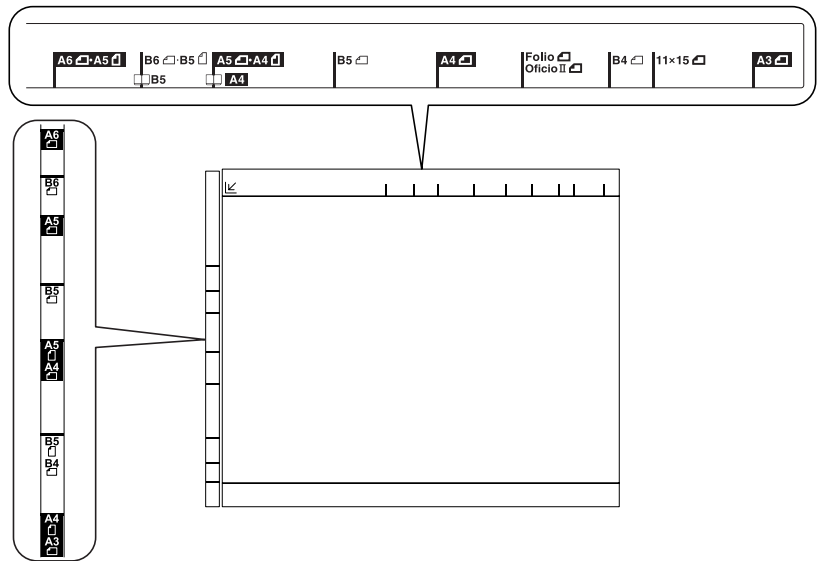

3 Close the original cover.

IMPORTANT Do not push the original cover forcefully when you close it. Excessive pressure may crack the platen glass.

 **Note** Shadows may be produced around the edges and in the middle of open-faced originals.




CAUTION Do not leave the document processor open as there is a danger of personal injury.

Loading Originals in the Document Processor (option)

The optional document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

Part Names of the Document Processor

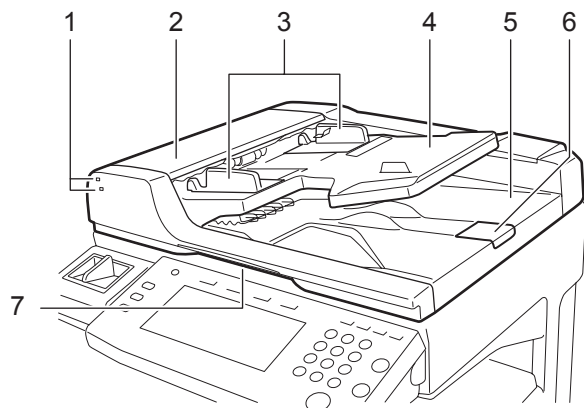

- 1 Original placement indicator
- 2 Top cover
- 3 Original width guides
- 4 Original table

- 5 Original eject table
- 6 Original stopper
- 7 Opening handle

Originals Supported by the Document Processor

The document processor supports the following types of originals.

Item	Specifications
Weight	45 g/m ² to 160 g/m ²
Size	Maximum 11 × 17" to Minimum 5 1/2 × 8 1/2" Maximum A3 to Minimum A5R
Capacity	Plain paper (80 g/m ²), Colored paper, Recycled paper: 75 sheets (Mixed sized originals: 30 sheets) Thick paper (120 g/m ²): 49 sheets Thick paper (160 g/m ²): 37 sheets Art paper: 1 sheet High quality paper (110 g/m ²): 54 sheets

Originals Not Supported by the Document Processor


Do not use the document processor for the following types of originals.


- Soft originals such as vinyl sheets
- Transparencies such as OHP film
- Carbon paper
- Originals with very slippery surfaces
- Originals with adhesive tape or glue
- Wet originals
- Originals with correction fluid which is not dried
- Irregularly shaped (non-rectangular) originals
- Originals with cut-out sections
- Crumpled paper
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam).
- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam).

How to Load Originals

IMPORTANT Before loading originals, be sure there are no originals left on the original eject table. Left originals may cause the new originals to jam.


- 1 Adjust the original width guides to the width of the originals.

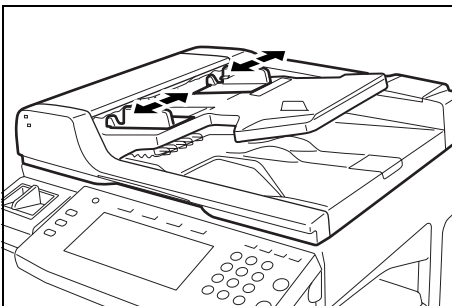

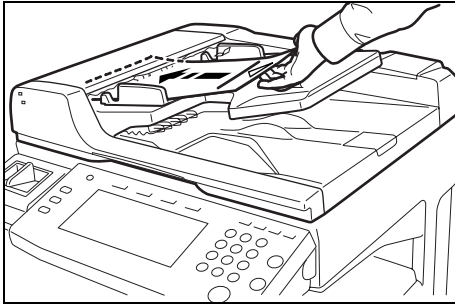


- 2** Place the originals. Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go. The original placement indicator will be lit.

IMPORTANT Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the guides. The gap may cause the originals to jam.

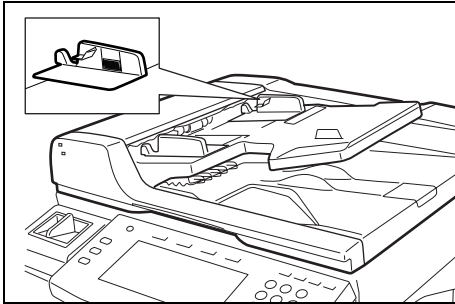

Ensure that loaded originals do not exceed the level indicator. If exceeded, originals may jam (see the figure).

Originals with punched holes or perforated lines should be placed such that the holes or perforations will be scanned last (not first).

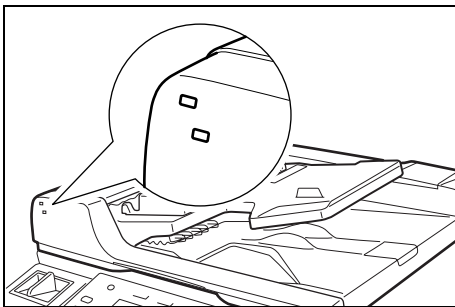

Original placement indicator

The original placement indicator is lit depending on how originals are placed.

Indications and their status are as follows.


- Green (upper indicator) lit: Original is placed properly.
- Green (upper indicator) blinking: Original is not placed properly. Remove and place again.
- Red (lower indicator) blinking: Original is jammed. Remove the jammed original and place it properly.

Language


Select the language displayed on the touch panel.

The following languages are available.


Model Type	Language
Inch models	English, French (<i>Français</i>), Spanish (<i>Español</i>), Japanese (日本語), Portuguese (<i>Português</i>)
Metric models	English, German (<i>Deutsch</i>), French (<i>Français</i>), Spanish (<i>Español</i>), Italian (<i>Italiano</i>), Russian (<i>Русский</i>)

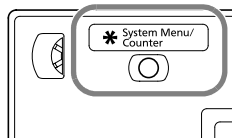

1 Press the **System Menu/Counter** key.

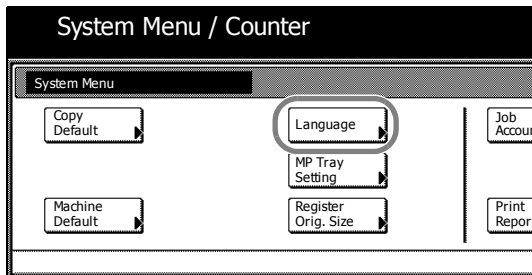

2 Press [Language].

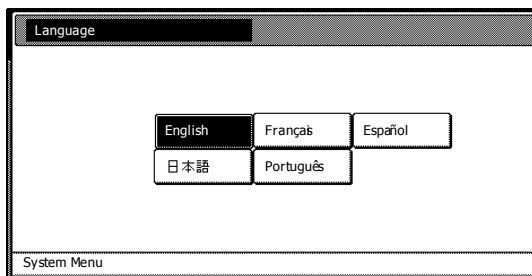

3 Select the key for the language you would like to set. The touch panel display will change to that language.


3 Basic Operation

This chapter explains the following operations.

Basic Copying Procedures	3-2
Turning off the main power switch	3-3
Selecting Image Quality	3-4
Adjusting Density	3-5
Zoom	3-6
Auto Zoom	3-6
Manual Zoom.....	3-7
Preset Zoom	3-7
XY Zoom.....	3-8
Duplex Mode	3-10
One-sided to Two-sided.....	3-10
Two-sided to Two-sided.....	3-10
Book to Two-sided.....	3-10
Split Mode	3-13
Two-sided to One-sided.....	3-13
Book to One-sided.....	3-13
Collate Mode	3-15
Interrupt Copy	3-16
Low-Power Mode	3-17
Auto Low-Power Mode	3-17
Sleep Mode	3-17
Auto Sleep Mode	3-17


Basic Copying Procedures

Follow the steps as below for basic copying.

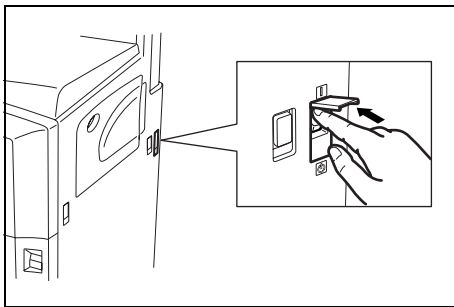

- 1 Open the main power switch cover and move the main power switch to on (|) position.


After warm-up is complete, the **Start** key's **Start** indicator will glow green.

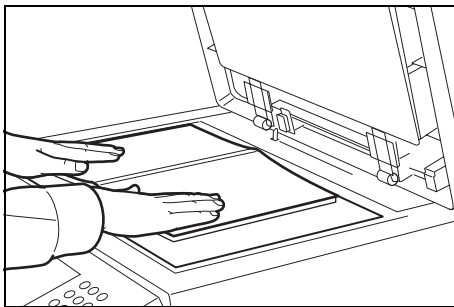


- 2 Place the original.




Note Refer to *Loading Originals* on page 2-14 for original placement instructions.

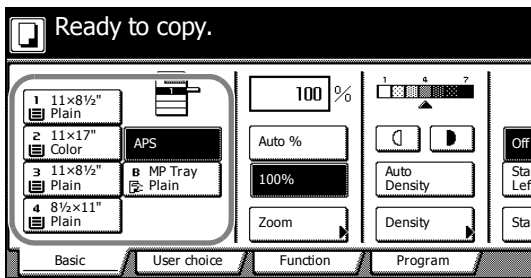


- 3 Confirm that [APS] is selected. In this mode, paper that matches the size of the originals will be selected automatically. To change the paper size, press the desired paper size to select the paper source.

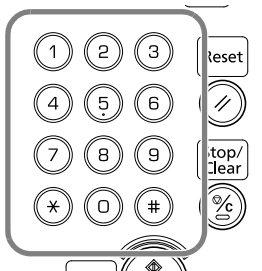


- 4 Use the numeric keys to enter the copy quantity. You can specify up to 999 copies.

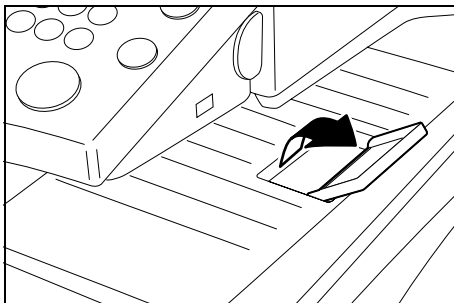


Note When copying onto 11 × 17" or A3 paper, open the output stopper.

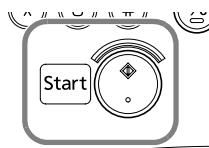

- 5 Press the **Start** key.

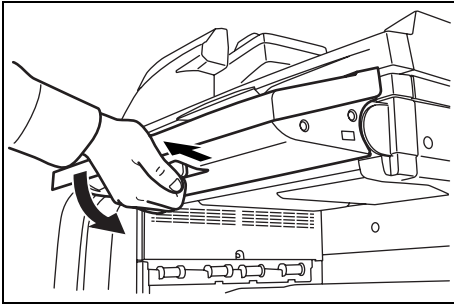


Note Adjust the angle of the operation panel by pulling the operation panel lower lever.

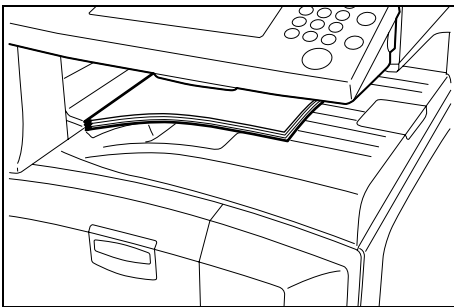

6 Remove the finished copies from the top tray.

The top tray can hold up to 250 sheets of standard paper (80 g/m²). However, the actual capacity varies depending on the type and condition of the paper.

Turning off the main power switch

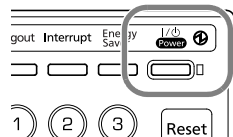

Press the **Power** key on the operation panel, and after verifying the **Power** indicator has gone off, switch off the main power switch.


If the optional fax kit is installed, when the main power switch is off (⏻ position), fax send/receive is disabled. To turn the power off, press the **Power** key on the operation panel.

Selecting Image Quality


Choose the image quality suited to the type of original.

Image Quality	Description
Text+Photo	Appropriate for mixed text and photo originals.
Photo	Appropriate for photo originals.
Text	Appropriate for document originals with large amounts of text.


- 1 Place the original.
- 2 Press [Function].

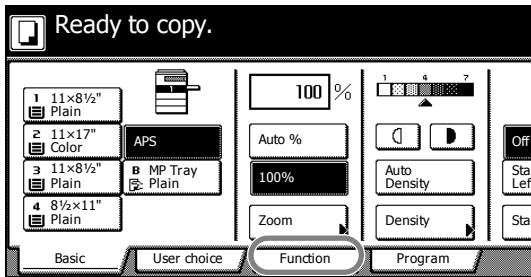


- 3 Press [Original Image].

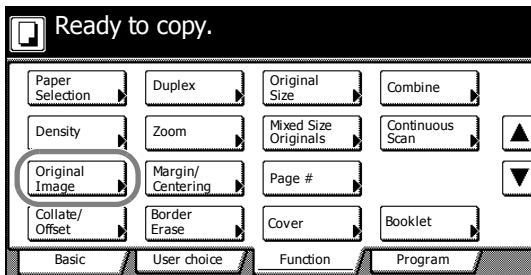

- 4 Select the image quality.

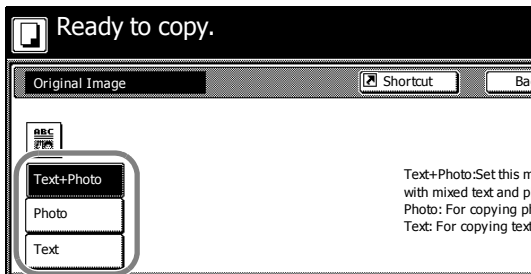



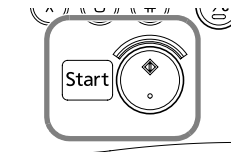

- 5 Press the **Start** key. Copying begins.




Adjusting Density


Adjust the density automatically or manually. The default setting is [Manual]. Follow the steps as below for Manual mode.


- 1 Place the original.
- 2 Press the density adjustment key ( / ) to adjust the density.

Press [Auto Density] to use Auto Density. The machine determines a suitable density for copying. To change the density from [Auto] to [Manual], press the density adjustment key ( / ).

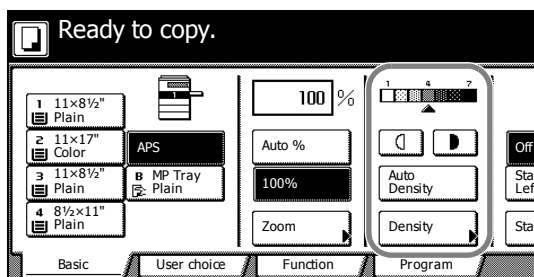

- 3 Press the **Start** key. Copying begins.

 **Note** Press [Density] to display the *Density* screen. You can also adjust the density from this screen.

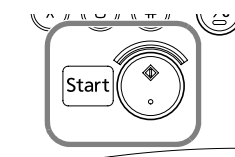

Zoom

Adjust the magnification to reduce or enlarge the original image.



The following zoom modes are available.

- Auto Zoom – Automatically reduces or enlarges the original image suited to the selected paper size.
- Manual Zoom – Reduces or enlarges the original image in 1 % increments between 25 - 400 %.
- Preset Zoom – Reduces or enlarges at preset magnifications.
- XY Zoom – Independently adjust vertical and horizontal magnifications. Set zoom size in 1 % increments between 25 - 400 %.


Auto Zoom

Automatically reduces or enlarges the original image suited to the selected paper size.


Follow the steps below to use auto zoom.

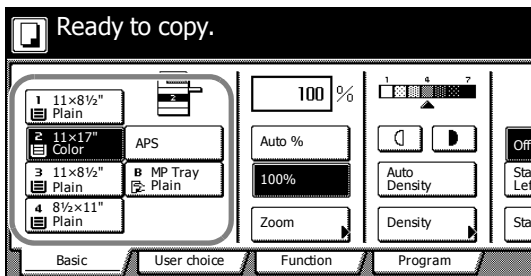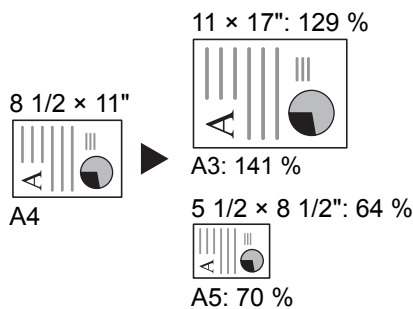

- 1 Place the original and select paper size.

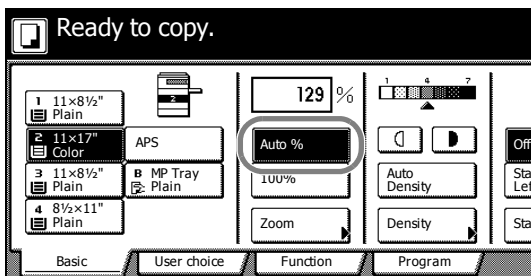

- 2 Press [Auto %].
The magnification will be displayed.


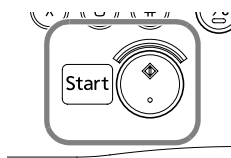


- 3 Press the **Start** key. The image will be automatically reduced or enlarged for copying onto the selected paper.


Manual Zoom

Reduces or enlarges the original image in 1 % increments between 25 - 400 %.


Follow the steps as below to use manual zoom.

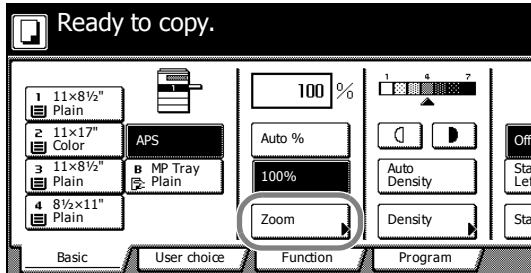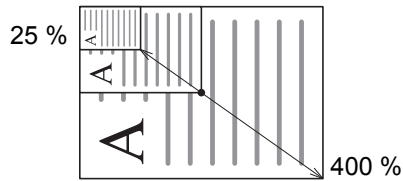

1 Place the original and press [Zoom].

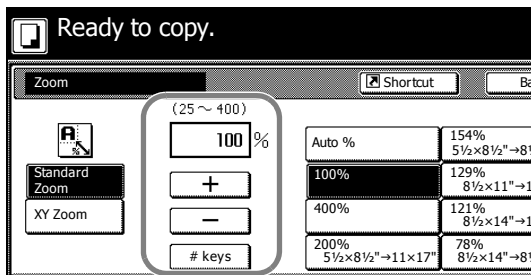

2 Press [+] and [-] to set the displayed magnification. Press [# keys] ([#-Keys]) to enter with numeric keys.

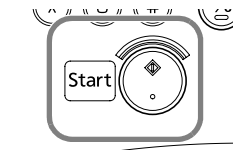

3 Press the **Start** key. Copying begins.

Preset Zoom


Reduces or enlarges at preset zoom levels.

Model Type	Zoom Level
Inch models	200 % (5 1/2 × 8 1/2" → 11 × 17") 154 % (5 1/2 × 8 1/2" → 8 1/2 × 14") 129 % (8 1/2 × 11" → 11 × 17") 121 % (8 1/2 × 14" → 11 × 17") 78 % (8 1/2 × 14" → 8 1/2 × 11") 77 % (11 × 17" → 8 1/2 × 14") 64 % (11 × 17" → 8 1/2 × 11") 50 % (11 × 17" → 5 1/2 × 8 1/2")
Metric models	200 % (A5 → A3) 141 % (A4 → A3, A5 → A4) 127 % (Folio → A3) 106 % (11 × 15" → A3) 90 % (Folio → A4) 75 % (11 × 15" → A4) 70 % (A3 → A4, A4 → A5)

Model Type	Zoom Level
Metric models (Asia Pacific)	200 % (A5→A3)
	141 % (A4→A3, B5→B4)
	122 % (A4→B4, A5→B5)
	115 % (B4→A3, B5→A4)
	86 % (A3→B4, A4→B5)
	81 % (B4→A4, B5→A5)
70 % (A3→A4, B4→B5)	

Follow the steps as below to use preset zoom.


- 1 Place the original and press [Zoom].

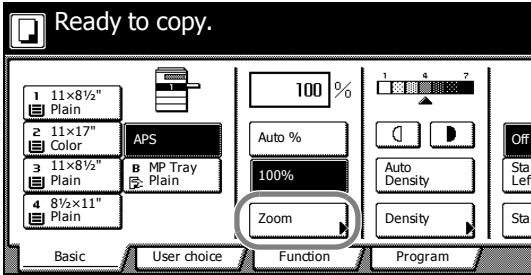


- 2 Select the zoom level.



Note You can also adjust the magnification in 1 % increments as desired by pressing [+] and [-].

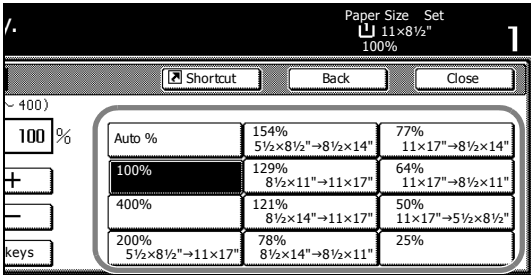


- 3 Press the **Start** key. Copying begins.

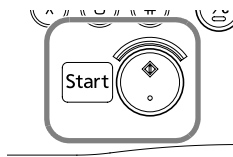

XY Zoom


Select vertical and horizontal magnifications individually. Set zoom level in 1 % increments between 25 - 400 %.


Follow the steps as below to use XY zoom.

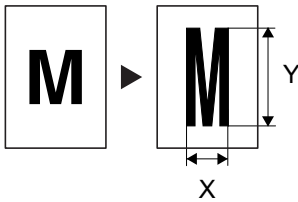


- 1 Place the original and press [Zoom].

- 2 Press [XY Zoom].

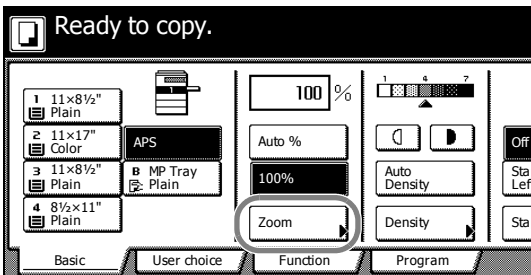


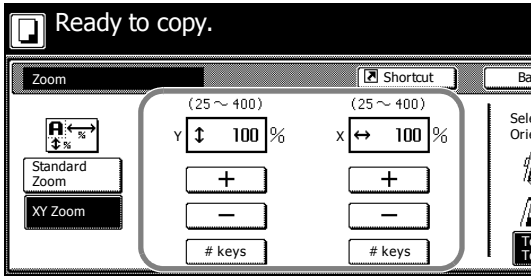

- 3** Press [+] and [-] to set the X and Y zoom ratios.
Press [# keys] ([#-Keys]) to enter with numeric keys.

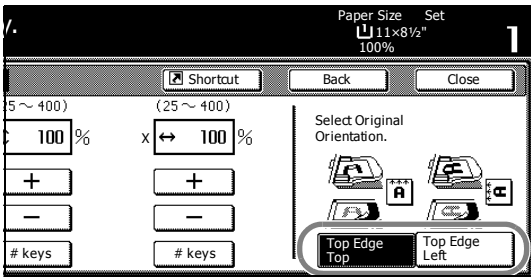

- 4** Under *Select Original Orientation*, select [Top Edge Top] or [Top Edge Left].

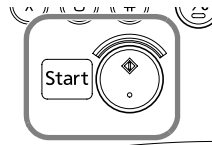

- 5** Press the **Start** key. Copying begins.

Duplex Mode



Use Duplex mode to create two-sided copies from a variety of originals, including facing pages (such as books or magazines) and two-sided originals.

One-sided to Two-sided

Produces two-sided copies from one-sided originals. The back side of the last copied page will be blank for originals with an odd number of pages.

The following binding options are available.

- Original Left/Right Bind to Finish Left/Right Bind: Back side is copied with same orientation as front side. ...**A**
- Original Left/Right Bind to Finish Top Bind: Images are copied onto the back side rotated 180°. Pages of the copied document are in the same orientation if pages are flipped upward. ...**B**

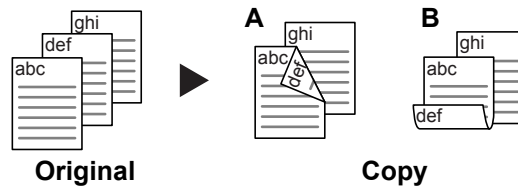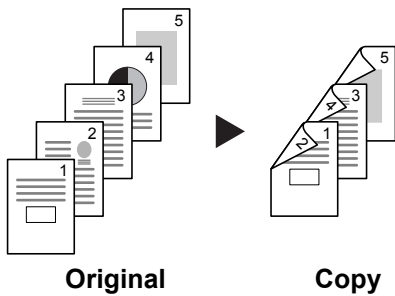


Two-sided to Two-sided

Produces two-sided copies from two-sided originals.




Note This operation requires the optional document processor.

Supported paper sizes for Two-sided to Two-sided operation are: 11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, A4, A4R, B5, B5R, A5R and Folio.

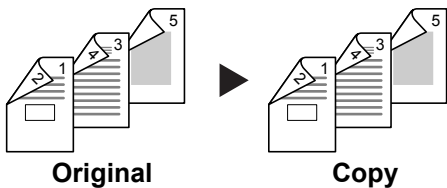

Book to Two-sided


Produces two-sided copies from originals such as books and magazines with facing pages.

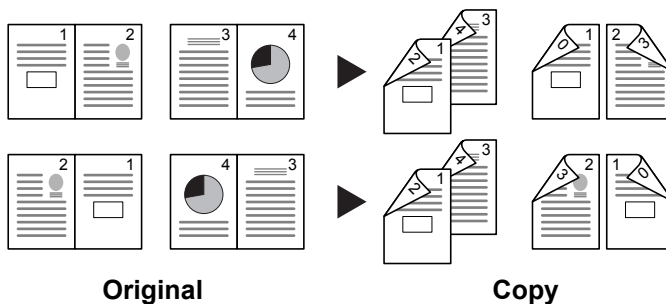


Note Supported paper sizes for Book to Two-Sided operation are limited to: 11 × 17", 8 1/2 × 11", A3, B4, A4R, B5R, A5R, and 8K.

Follow the steps as below to use duplex copying.


1 Press [Function].

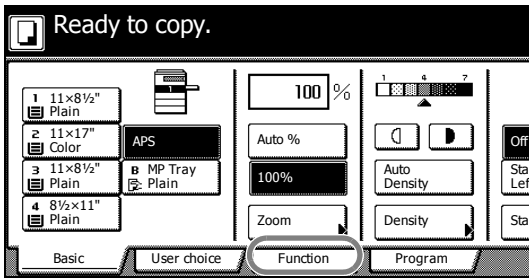


2 Press [Duplex].

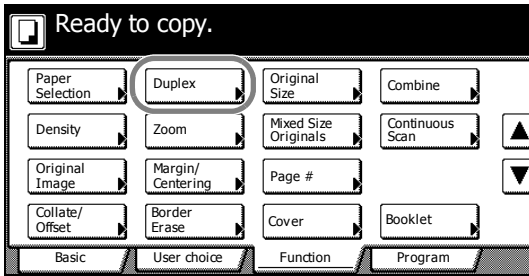


3 Select the desired Duplex mode.

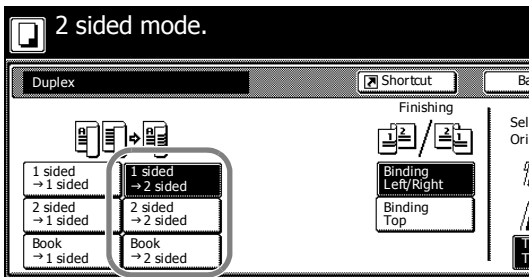


4 For [2 sided -> 2 sided] ([2-sided -> 2-sided]) or [Book -> 2 sided] ([Book -> 2-sided]), select the bind direction for *Original*.

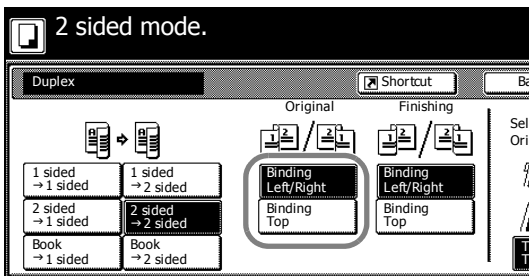


For [1 sided -> 2 sided] ([1-sided -> 2-sided]) or [2 sided -> 2 sided] ([2-sided -> 2-sided]), select the bind direction for *Finishing*.

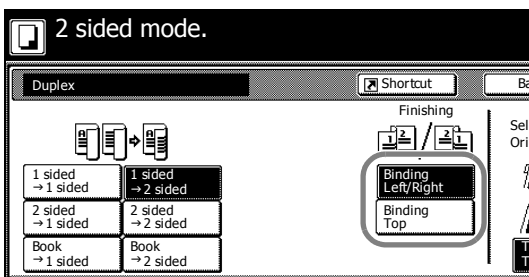


For [Book -> 2 sided] ([Book -> 2-sided]), set the copy page order for *Finishing*.

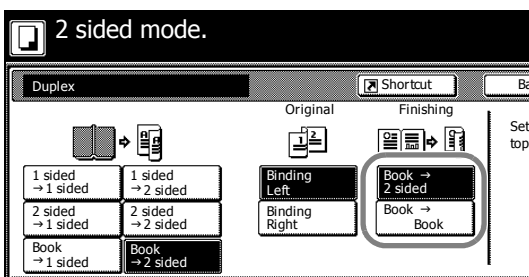

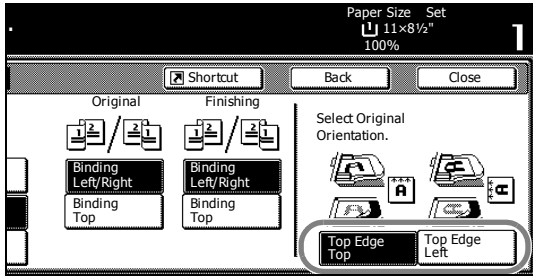

For [1 sided → 2 sided] ([1-sided → 2-sided]) or [2 sided → 2 sided] ([2-sided → 2-sided]), set [Top Edge Top] or [Top Edge Left] from *Select Original Orientation*.

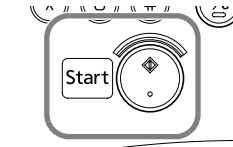

5 Place the original and press the **Start** key.

If the original has been placed on the optional document processor, copying begins automatically.

If the original is placed on the platen, *Scan next original(s)* is displayed. Place the next original page and press the **Start** key.

If all original pages have been scanned, press [Scanning finished]. Copying begins.

Split Mode


Use Split mode to create single-sided copies from two-sided originals or originals with facing pages (such as books or magazines) as follows.

Two-sided to One-sided

Copies each side of a two-sided original onto two individual sheets.



Note This operation requires the optional document processor.

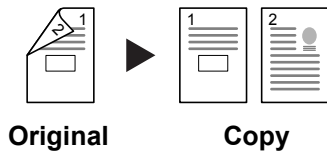

The following binding options are available.

- Binding Left/Right: The back side and front side of the original are copied with the same orientation.
- Binding Top: The back side is copied rotated 180 ° from the orientation of the front side.

Book to One-sided

Copies each page of originals with facing pages (such as books or magazines) onto two individual sheets.

The following binding options are available.


- Binding Left: Originals with facing pages are copied from left to right.
- Binding Right: Originals with facing pages are copied from right to left.




Note Original sizes for split mode copy mode are limited to 11 × 17", 8 1/2 × 11", A3, B4, A4R, B5R and 8K. Paper sizes are limited to 11 × 8 1/2", A4, B5 and 16K. Change the paper size to fit the original to that size.


Follow the steps as below to use Split mode.

1 Press [Function].

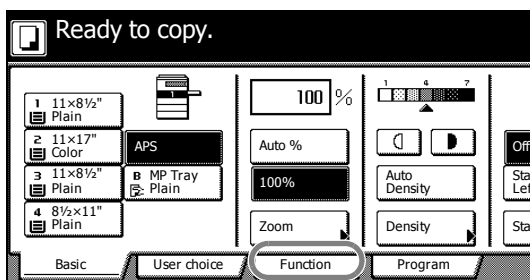


2 Press [Duplex].

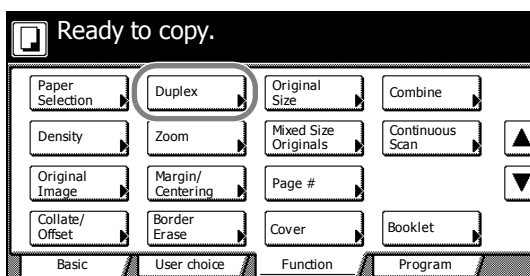


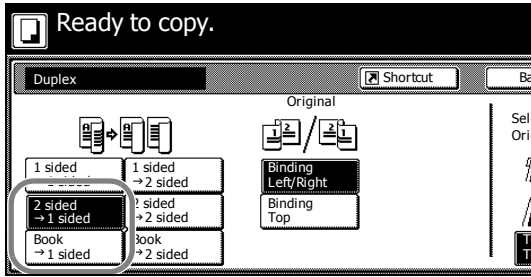


3 Select the desired Split mode.

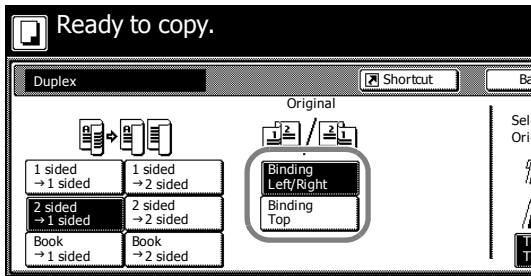

4 Specify the binding in the *Original* section.

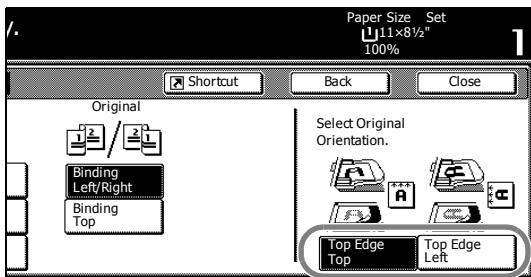

5 When [2 sided → 1 sided] ([2-sided → 1-sided]) is selected, select [Top Edge Top] or [Top Edge Left] for *Select Original Orientation*.

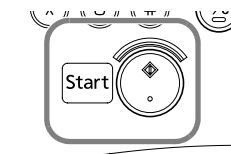

6 Place the original and press the **Start** key.

If the original has been placed on the optional document processor, copying begins automatically.



If the original is placed on the platen, *Scan next original(s)* is displayed. Place the next original page and press the **Start** key.

If all original pages have been scanned, press [Scanning finished]. Copying begins.


Collate Mode

Scans multiple originals to deliver complete sets of copies as required according to page number.


Follow the steps as below to use Collate mode.

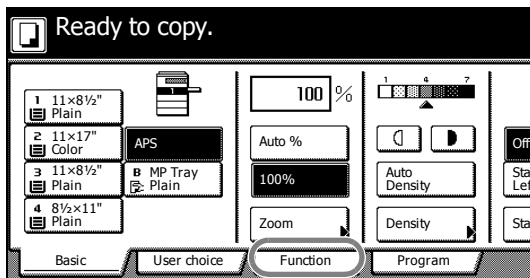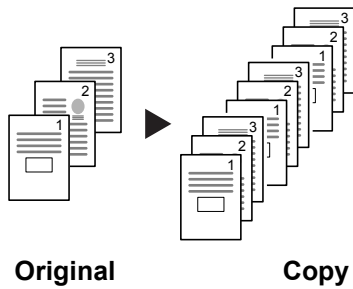

1 Press [Function].

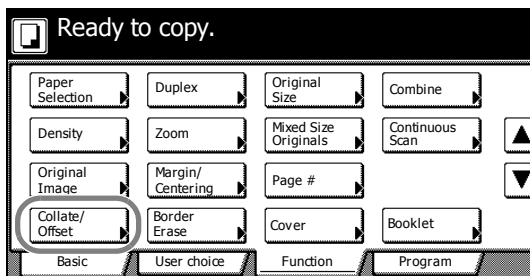


2 Press [Collate/Offset].

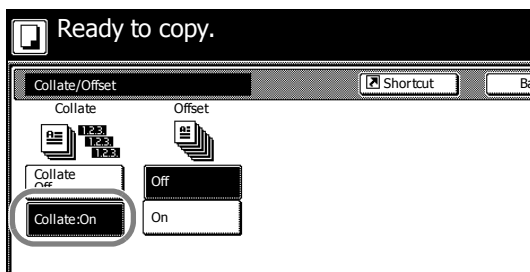

3 Press [Collate: On].

4 Use the numeric keys to enter the copy quantity.

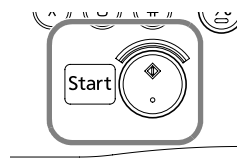

5 Place the original and press the **Start** key.


If the original has been placed on the optional document processor, copying begins automatically.

If the original is placed on the platen, *Scan next original(s)* is displayed. Place the next original page and press the **Start** key.

If all original pages have been scanned, press [Scanning finished]. Copying begins.


Complete sets of copies will be delivered on the top tray.

Interrupt Copy

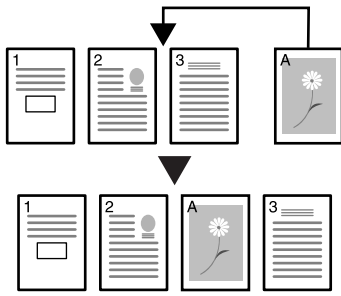

Interrupt copying is useful to pause one copy job and copy other originals with different copy settings. After completing the urgent job, you can resume the interrupted jobs according to their original settings. You can also pause copy jobs that are being printed when you need to make urgent copies.



Follow the steps as below to use interrupt copying.

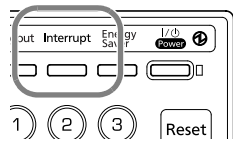

- 1 Press the **Interrupt** key.

Interrupt Mode OK will be displayed.

- 2 Temporarily remove and set aside the original pages of the current job.
- 3 Place the original for the interrupt job.

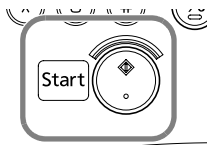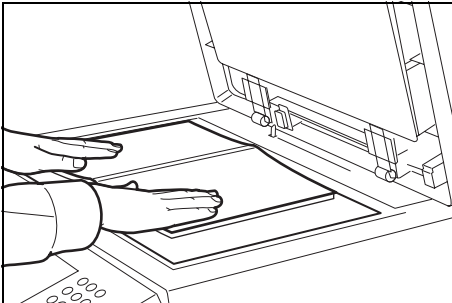


- 4 Specify the copy settings for the interrupt job and press the **Start** key.
- 5 After the interrupt job is completed, remove the originals and press the **Interrupt** key.

The previous settings will be restored. If there was a job being printed, it will be resumed.

- 6 Replace the interrupted original and press the **Start** key to restart the job.

Low-Power Mode

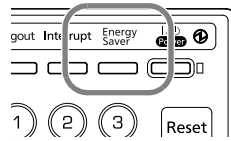

To activate Low-Power mode, press the **Energy Saver** key.

On the operation panel, only the **Energy Saver**, **Power**, and main power indicators will remain lit.

To resume copying, perform one of the following actions. The machine returns to a copy-ready condition.

- Press any key on the operation panel.
- Open the original cover or the optional document processor.
- Place originals in the optional document processor.


The machine will resume copy functionality in 10 seconds.

If you are using the optional printer function or fax function and print data or a fax arrives while the machine is in Low-Power mode, the machine automatically wakes up and starts printing.

Auto Low-Power Mode

In Auto Low-Power mode, the machine automatically switches to Low-Power mode if left idle for a preset period. The default period for Auto Low-Power mode is 1 minute.

Sleep Mode

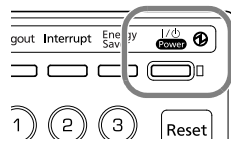

To activate Sleep mode, press the **Power** key.

On the operation panel, only the Main Power indicator will remain lit. The machine will use much less power than Low-Power mode.

To resume copying, press the **Power** key again. The machine will resume copy functionality in 15 seconds.

If you are using the optional printer function or fax function and print data or a fax arrives while the machine is in Sleep mode, the machine automatically starts printing without illuminating the operation panel.

Auto Sleep Mode

In Auto Sleep mode, the machine automatically switches to Sleep mode if left idle for a preset period. The default period for Auto Sleep mode is 9 minutes.


4 Optional Equipment

This chapter introduces the optional equipment available for the machine.


Overview of Optional Equipment	4-2
Document Processor	4-3
Paper Feeder	4-3
Built-in Finisher	4-3
Adding Staples.....	4-4
Clearing Staple Jams.....	4-5
Document Finisher	4-6
Job Separator	4-6
Key Counter	4-7
Inserting the Key Counter.....	4-7
Printer Kit	4-7
Fax Kit	4-8

Overview of Optional Equipment

The following optional equipment is available for the machine.

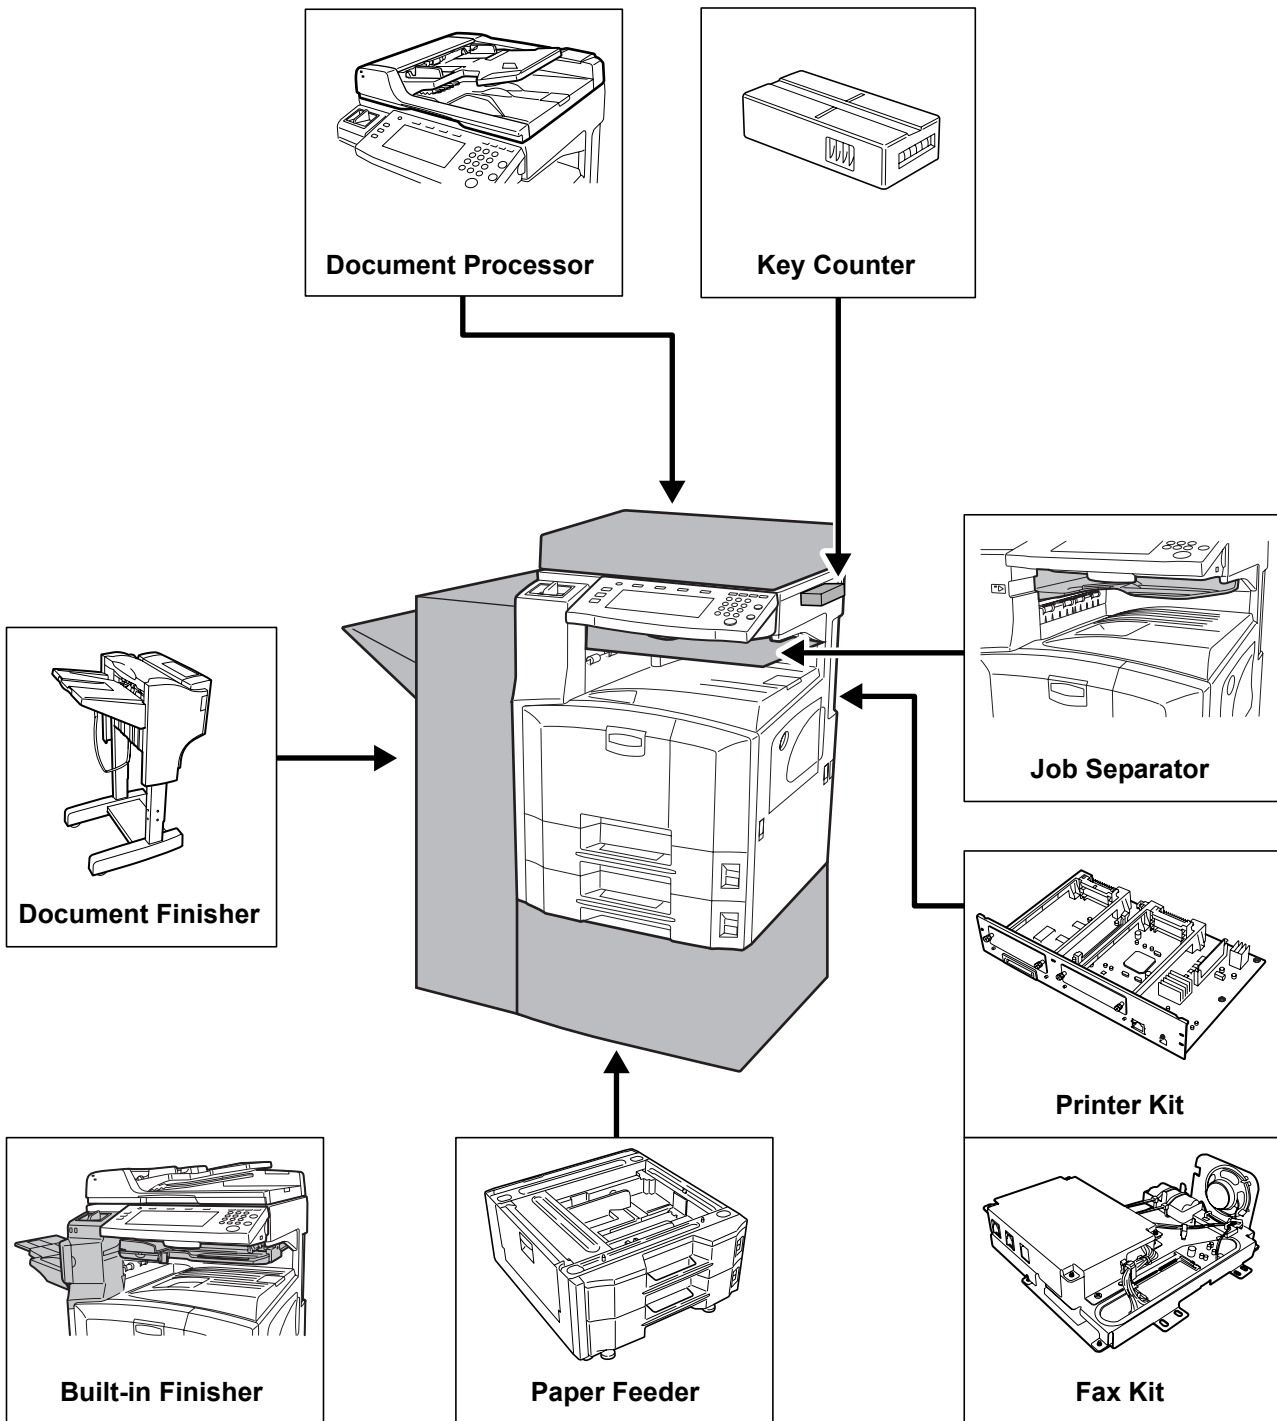


Document Processor

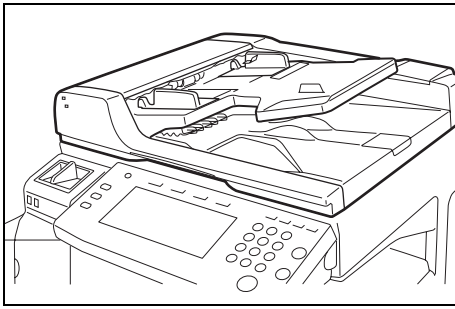

Automatically scans originals. Also you can perform duplex copying and split copying. For document processor operation, refer to *Loading Originals in the Document Processor (option)* on page 2-15.

Paper Feeder

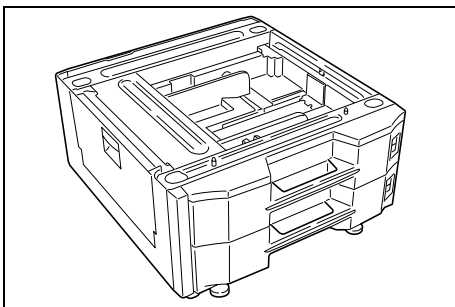


Two additional cassettes identical to the machine's double cassettes can be installed in the machine. Paper capacity and loading method are the same as Cassettes 1 and 2. Refer to *Loading Paper into Cassette 1, 2* on page 2-2.




Note Left cover 3 is located on the left side of the paper feeder for use in clearing paper jams.

Built-in Finisher


The built-in finisher holds a large quantity of finished prints. The finisher offers a convenient means of sorting. Sorted finished prints may also be stapled.

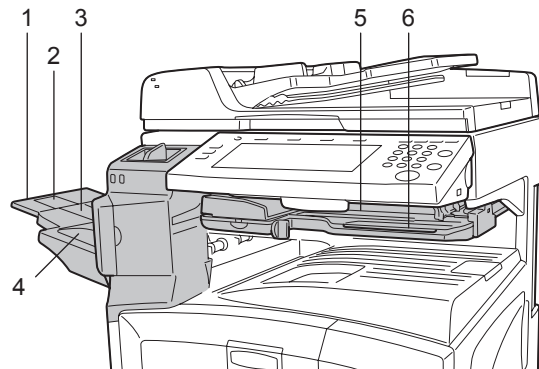


- 1 Ejected paper guide extension
- 2 Ejected paper guide 1
- 3 Ejected paper guide 2
- 4 Finisher tray
- 5 Process table
- 6 Finisher tray extension

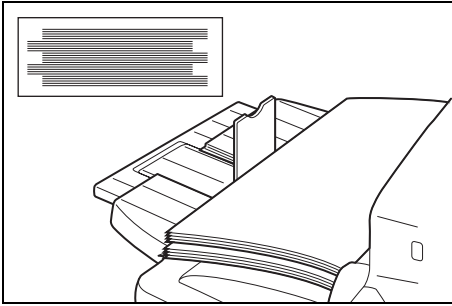


Note Sorted copies are delivered onto the finisher tray.

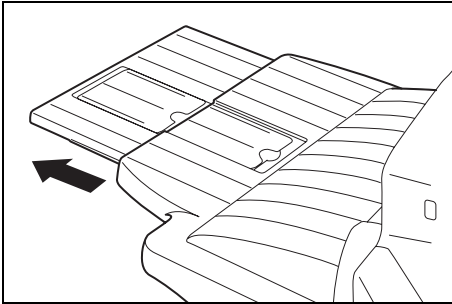

Adjust the ejected paper guide extension to the size of the paper.

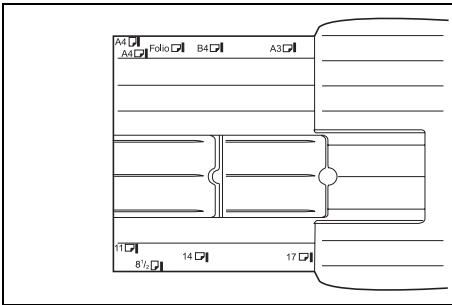


The paper sizes are marked on the ejected paper guide extension. Open ejected paper guides 1 and 2 as necessary to accommodate the size of the paper.

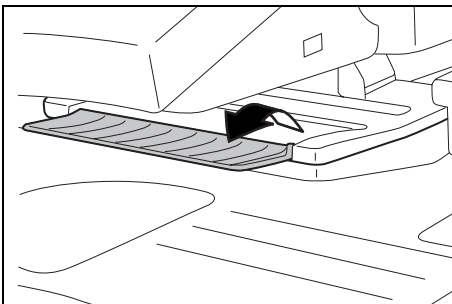


When stapling 11 × 17", 8 1/2 × 14", A3 or B4 paper, open the finisher tray extension to ensure that the paper does not fall out of the tray.


Adding Staples

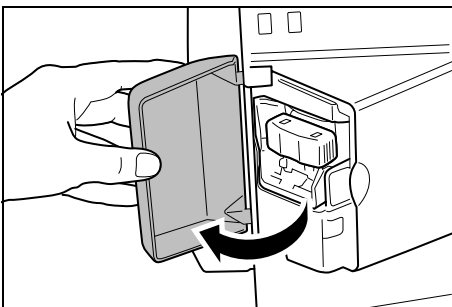


1 Open the front cover of the stapler.

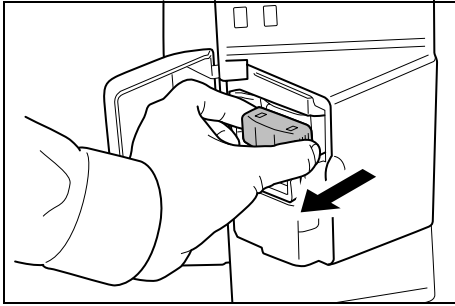


2 Pull out the staple holder.

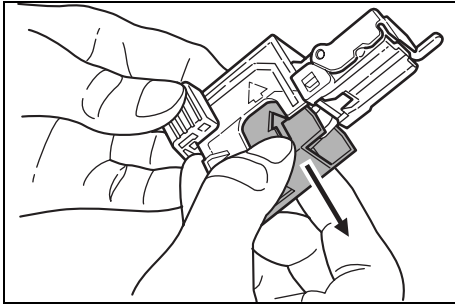


3 Remove the empty staple case from the staple holder.

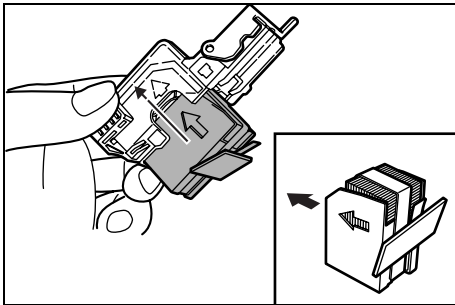

4 Holding the staple holder in your left hand, insert a new staple case with your right hand in the direction of the arrow.

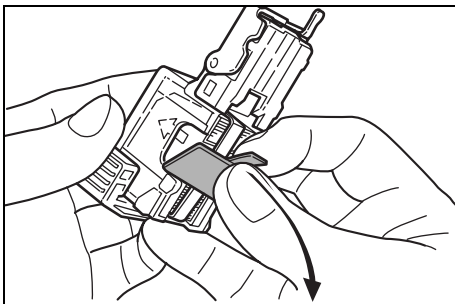


5 Insert the staple case as far as it will go. Pull of the paper tape wound around the staple case.

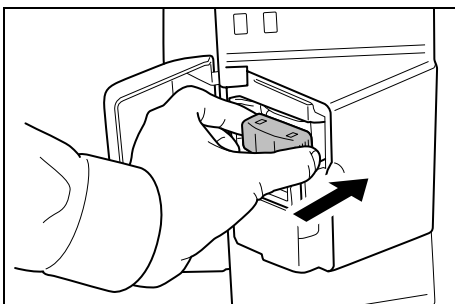


6 Reinsert the staple holder into the slot of the staple unit. The staple holder clicks locked when fully inserted.

Clearing Staple Jams


1 Pull out the staple holder referring to steps 1 and 2 of *Adding Staples*.

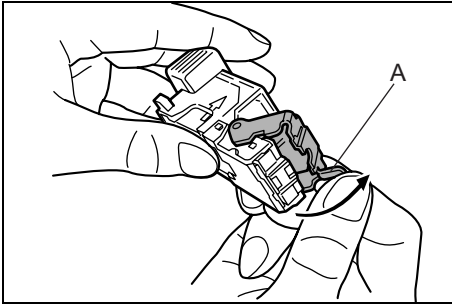

2 Lift the face plate up by tab **A**.

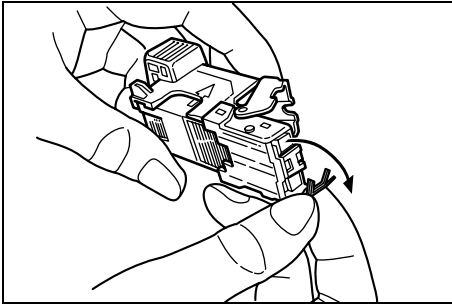

3 Remove the jammed staple from the end of the cartridge (staple-loaded side).

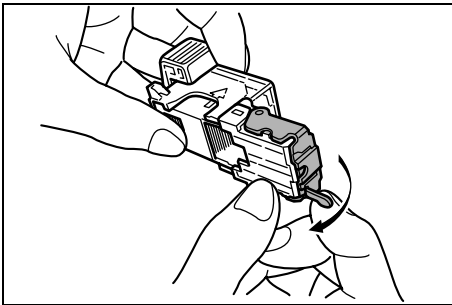


4 Lower the face plate back.

5 Insert the face plate back in place. The face plate clicks locked when fully inserted.

6 Lift the staple unit slightly, then lower it and insert it again into its place.


7 Close the stapler front cover.

Document Finisher

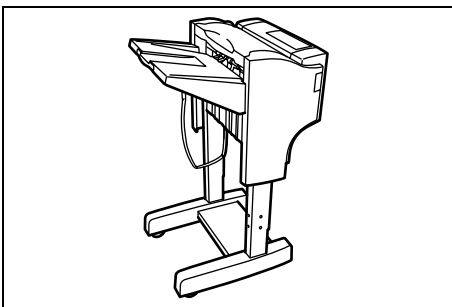

The document finisher holds a large quantity of finished copies. The finisher offers a convenient means of sorting. Sorted finished copies may also be stapled. For further details, refer to the Document Finisher *Operation Guide*.

Job Separator

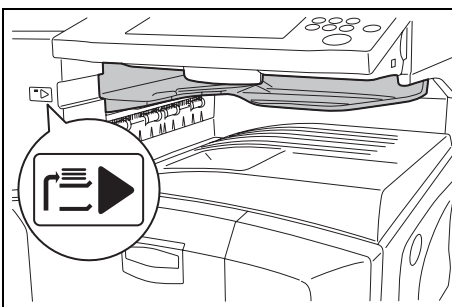



Separate paper according to output tray for easier sorting. Specify as the output tray for copy or print jobs. You can also specify the default mode output destination used for copies and received faxes.

There is a paper indicator in the front of the machine that shows whether there is paper in the job separator.

IMPORTANT Note that some media types have a tendency to curl and may jam in the paper eject unit.


If the ejected paper slips or stacks unevenly, turn the paper in the cassette over and try again.

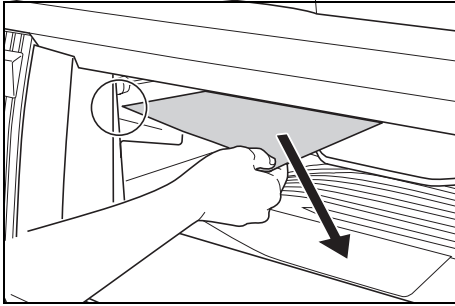

 **Note** To ensure that paper is delivered to the job separator, select the output destination or change the default setting. (For details, refer to *Chapter 1 Selecting Output Destination* and *Chapter 3 Machine Default* in the *Advanced Operation Guide*.)


When removing paper from the job separator, pull it out at an angle to avoid catching the corners of the paper.

Key Counter

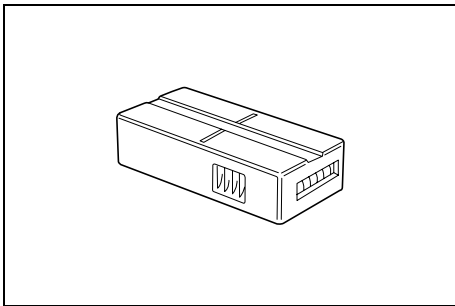


Use the key counter to monitor machine usage. The key counter offers a convenient solution for centralized management of copy volume for different departments in a large company.


Inserting the Key Counter

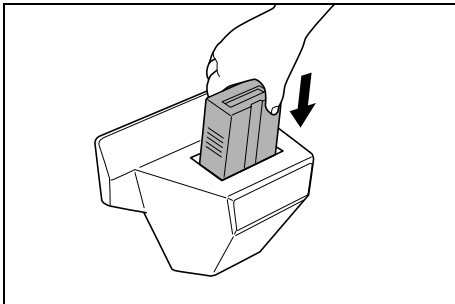

Insert the key counter securely into the key counter slot.


 **Note** When the key counter function is activated, copies can only be made when a key counter is inserted into the machine. If the key counter is not inserted securely, Insert key counter will be displayed.

Printer Kit

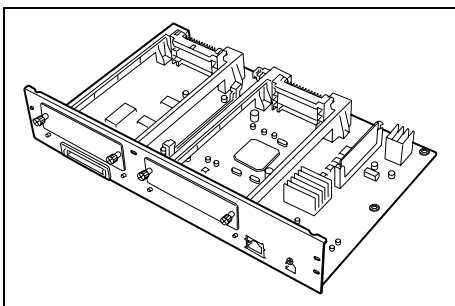

Install the printer kit to use the machine as a printer as well. For further details, refer to the *Printer Kit Operation Guide*.

Fax Kit

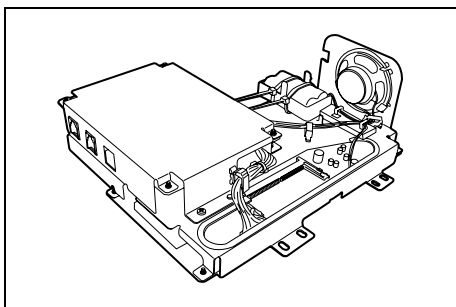

Install the fax kit to use the machine as a fax as well. For further details, refer to the Fax Kit *Operation Guide*.

5 Maintenance

This chapter describes cleaning and toner replacement.

Cleaning	5-2
Original Cover, Document Processor and Platen	5-2
Slit Glass	5-2
Separator.....	5-3
Transfer Roller.....	5-4
Main Charger.....	5-5
Toner Container and Waste Toner Box Replacement	5-7

Cleaning

Clean the machine regularly to ensure optimum copy quality.




CAUTION For safety, always unplug the power cord before cleaning the machine.

Original Cover, Document Processor and Platen


Wipe the rear side of the optional document processor or original cover and the platen with a soft cloth dampened with alcohol or diluted mild detergent.

IMPORTANT Do not use thinner or other organic solvents.

Original Cover (Document Processor)

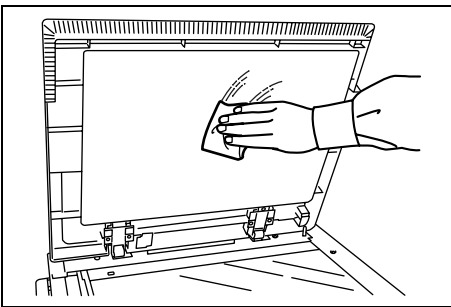

Platen

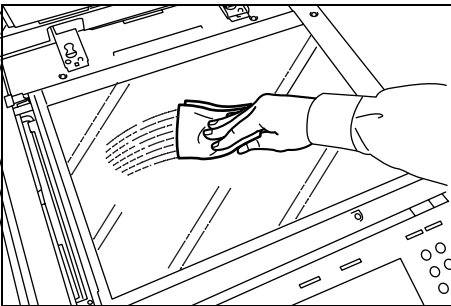


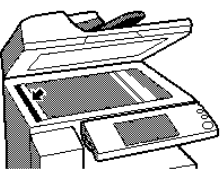
Slit Glass

If black streaks or other soiling appears in copies when the optional document processor is used, clean the slit glass and white guide with the cleaning cloth provided. The message: *Clean the slit glass for original fed from DP* (*Clean the slit glass for original fed*) may be displayed if the slit glass requires cleaning. After cleaning, press [End].

IMPORTANT Lightly wipe the slit glass and white guide with a dry cloth. To remove adhesive material or ink, apply alcohol to a cloth and wipe lightly. Do not use water, thinner, or organic solvents.


- 1 Remove the cloth from the cleaning cloth compartment.
- 2 Open the document processor and wipe slit glass **A**.


 Clean the slit glass for original fed from DP.



1. Open the document processor.
2. Clean the surface of the slit glass located on the left side and the reading guide on the document processor with the supplied dry cloth.
3. Close the document processor.
4. Press [END].

If the slit glass is dirty, black line will appear on the copy.

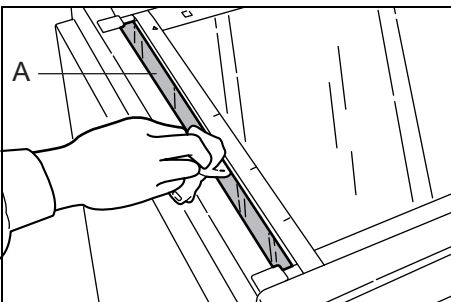


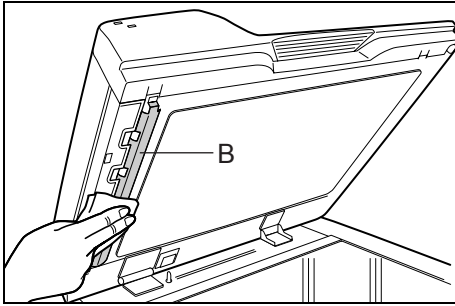


- 3** Wipe white guide **B** in the document processor.
- 4** Press [End].

Separator


To maintain the best possible print quality, clean the machine as described below on a regular basis (once a month).

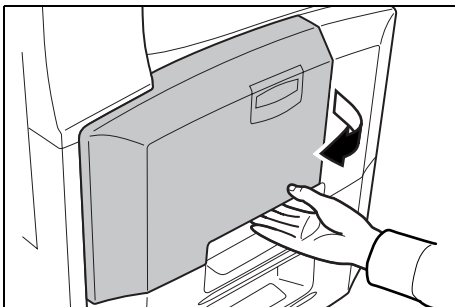


- 1** Open the front cover.

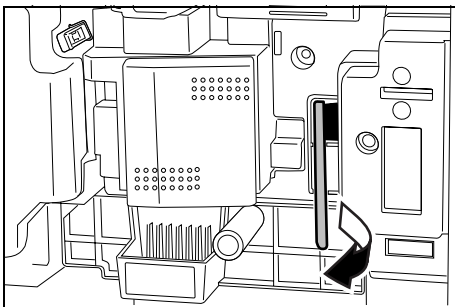


- 2** Remove cleaning brush (blue colored).

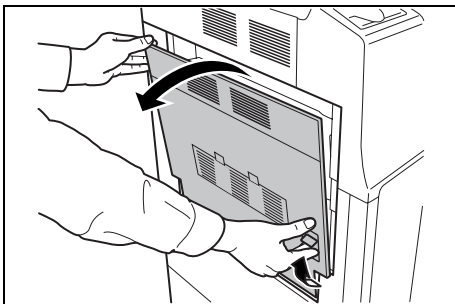

- 3** Pull up left cover 1 lever and open left cover 1.

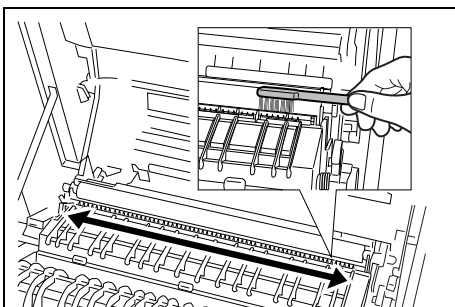

- 4** Run the brush from side to side along the separator as shown to remove any soiling.

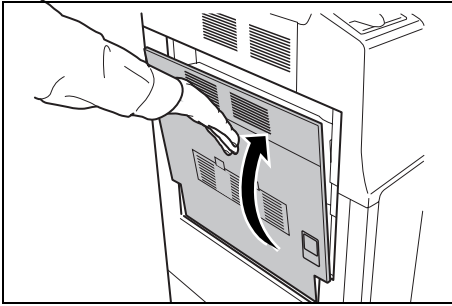


- 5** Replace the cleaning brush and close the front cover and left cover 1.


IMPORTANT Push in the position indicated to ensure that left cover 1 is securely closed.

Transfer Roller


To maintain the best possible print quality, clean the machine as described below on a regular basis (once a month).

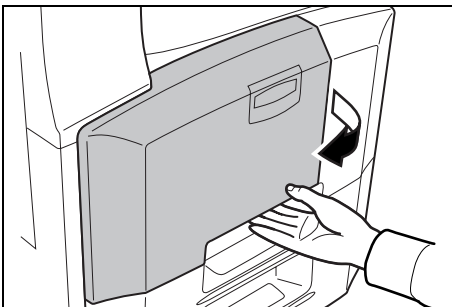


- 1** Open the front cover.

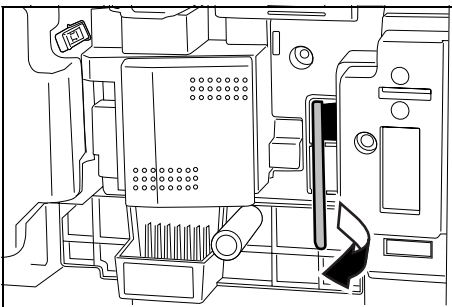


- 2** Remove cleaning brush (blue colored).

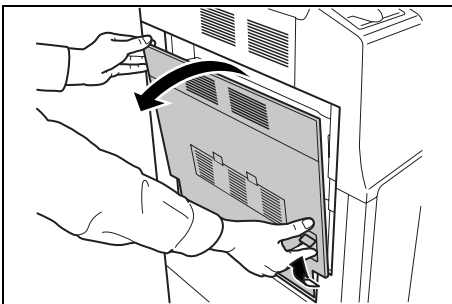

- 3** Pull up left cover 1 lever and open left cover 1.

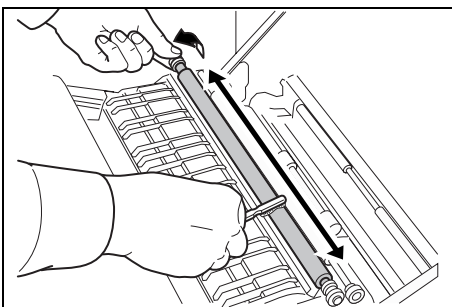

- 4** Run the brush from side to side along the transfer roller as shown, rotating by the gear at the end, to remove any soiling.

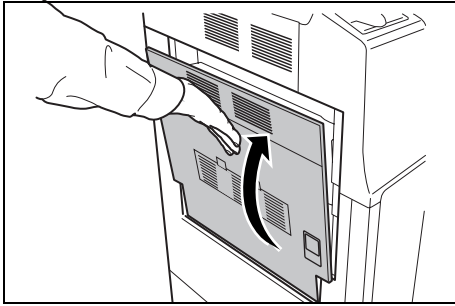


- 5 Replace the cleaning brush and close the front cover and left cover 1.

IMPORTANT Push in the position indicated to ensure that left cover 1 is securely closed.

Main Charger


If black or white vertical streaks appear on copies, clean the main charger.

- 1 Open the front cover.

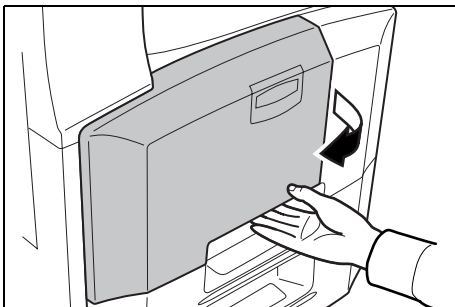


- 2 Remove the waste toner box.


- 3 Clean the main charger as described in steps 6 to 11 in *Toner Container and Waste Toner Box Replacement* on page 5-7.

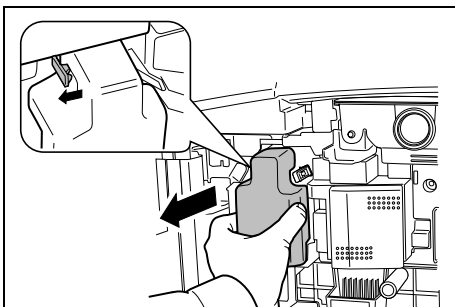


- 4 Install the waste toner box and close the front cover.

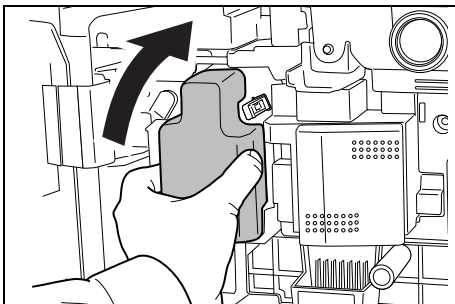


- 5 Press the **System Menu/Counter** key.

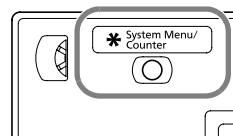


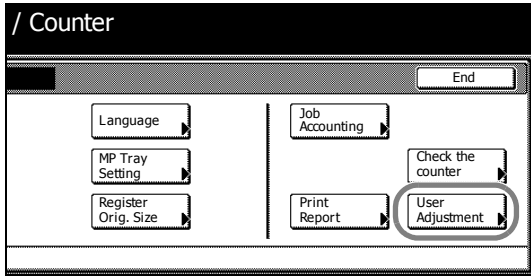

6 Press [User Adjustment].

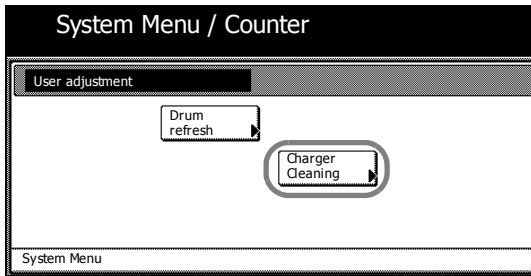

7 Press [Charger Cleaning].

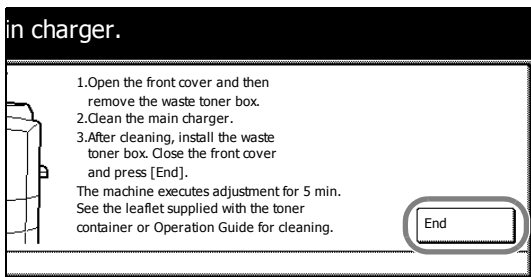

8 Press [End]. Adjustment begins. Wait 5 minutes.

Toner Container and Waste Toner Box Replacement

When the touch panel displays *Add toner*, replace the toner without delay even if several more copies are still possible. When replacing the toner container, replace the waste toner box as well.


Each time you replace the toner container, be sure to clean the parts as instructed below. Dirty parts may deteriorate output quality.



CAUTION Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.




CAUTION Do not attempt to force open or destroy the toner container or the waste toner box.

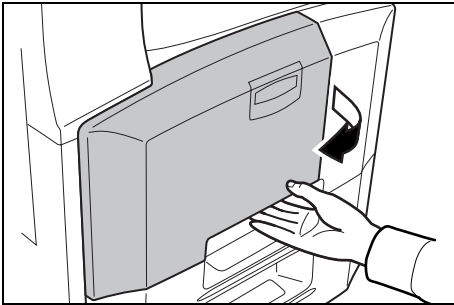


- 1** Open the front cover.




WARNING High voltage is present in the charger section. Take sufficient care when working in this area, as there is a danger of electrical shock.

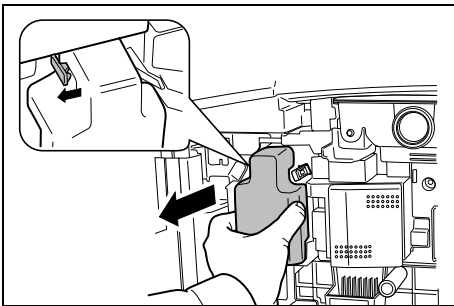


- 2** Remove the waste toner box.

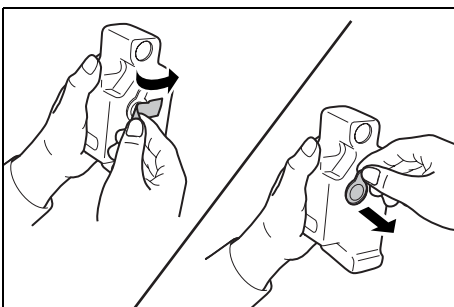

- 3** Peel the sticker off the waste toner box and remove the cap.

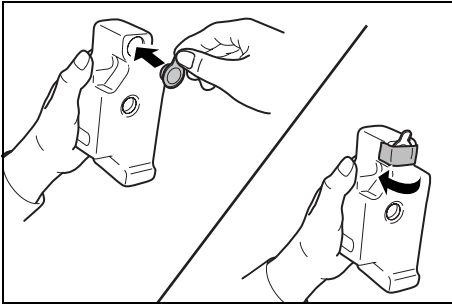

- 4** Fit the cap into the opening in the waste toner box and attach the sticker over the cap.

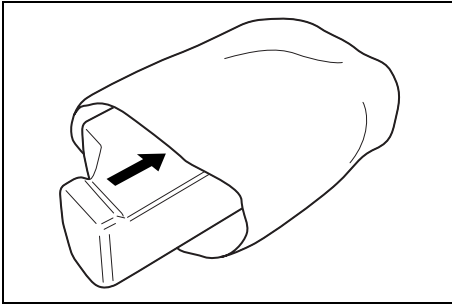


- 5** Place the used waste toner box in the provided plastic disposal bag.



CAUTION Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.




CAUTION Do not attempt to force open or destroy the toner container or the waste toner box.

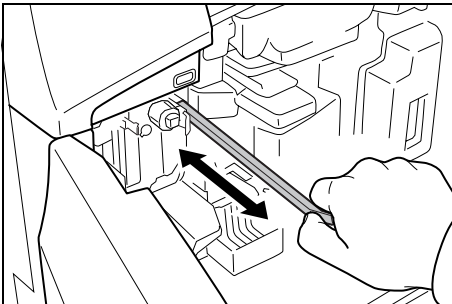


- 6** Pull the cleaner rod out slowly as far as it will go, and then push it back in.

Repeat 2 or 3 times.


IMPORTANT Do not pull strongly on the rod or pull it out completely.

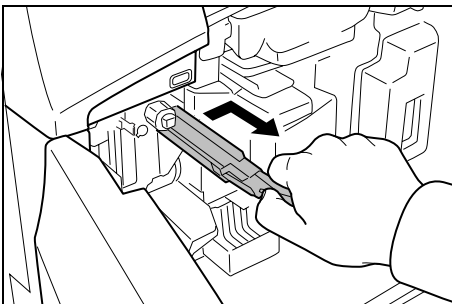


- 7** Hold the main charger to the right and pull out about 5 cm.

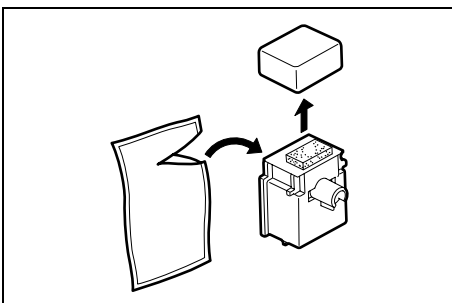

- 8** Take the grid cleaner provided out of its bag and remove the cap.

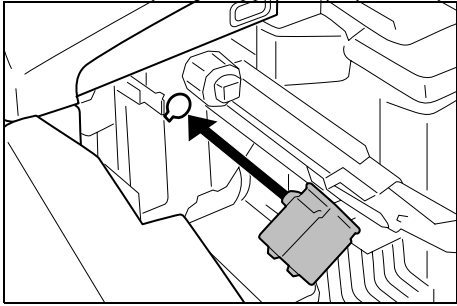


9 Align the grid cleaner with the notch and attach it to the machine.

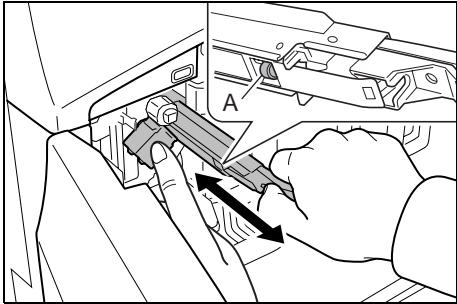


10 While gently holding the grid cleaner in place with your left hand, pull the main charger out fully and then push it back to a position where the roller **A** does not quite reach the white pad on the grid cleaner.

Repeat 2 or 3 times.


IMPORTANT When pushing the main charger back in, take care not to push it all the way in. This could result in damage to copies.

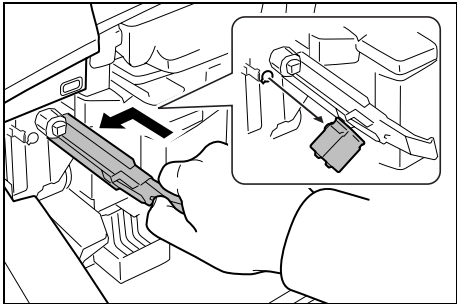


11 With the main charger pulled out about 5 cm (2 inches), remove the grid cleaner. Then push the main charger back in fully, applying pressure in the direction shown by the arrow so that the main charger is in its designated position.

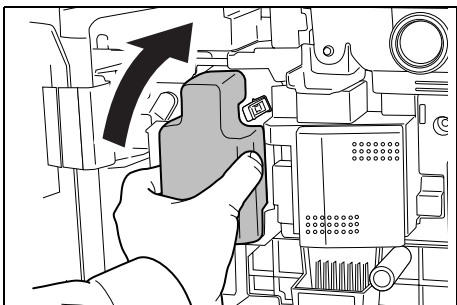


12 Install a new waste toner box.

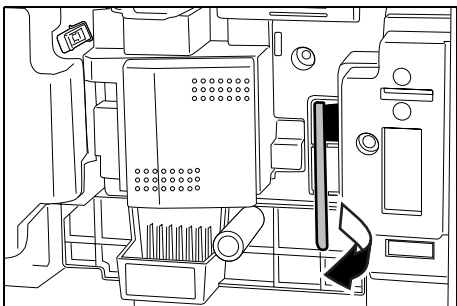


13 Remove cleaning brush (blue colored).

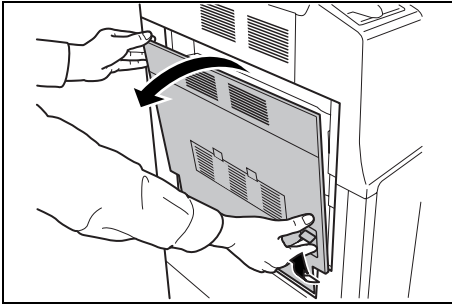


14 Pull up left cover 1 lever and open left cover 1.

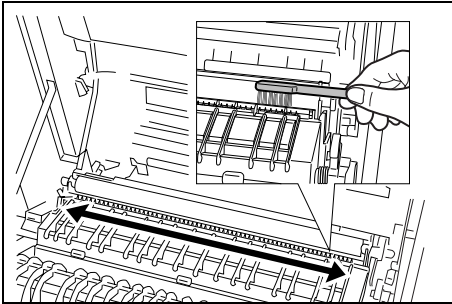

15 Run the brush from side to side along the separator as shown to remove any soiling.

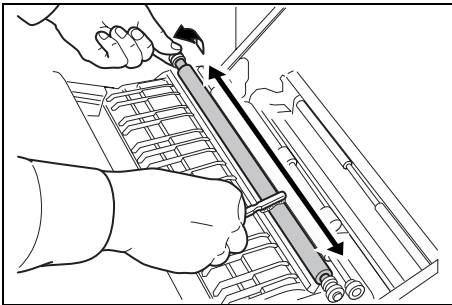


16 Run the brush from side to side along the transfer roller as shown, rotating by the gear at the end, to remove any soiling.

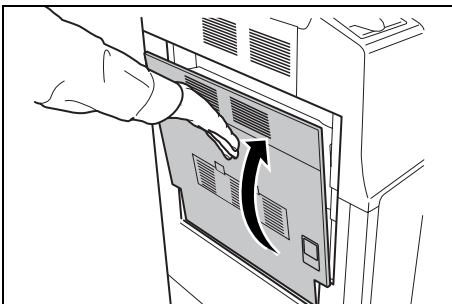


17 After cleaning, replace the cleaning brush and close left cover 1.

IMPORTANT Push in the position indicated to ensure that left cover 1 is securely closed.

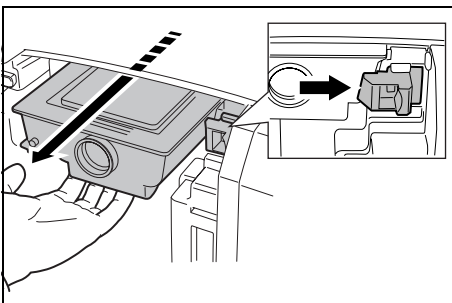


18 Push the toner container stopper to the right and pull out the old toner container.


IMPORTANT Do not pull the toner container out completely as it could drop onto the floor.

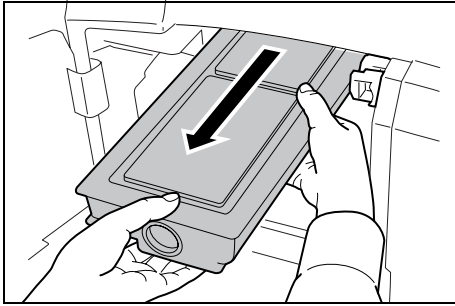


19 Hold the toner container in both hands and remove slowly.

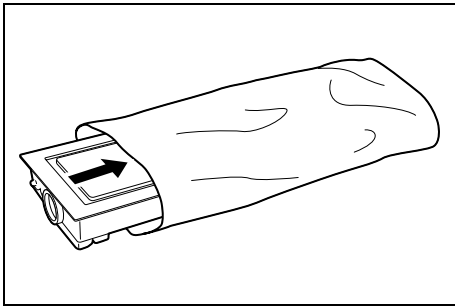


20 Place the used toner container in the provided plastic disposal bag.

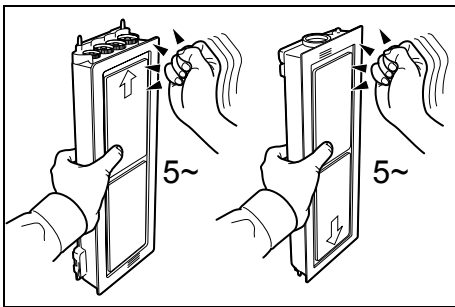


21 Hold the new toner container upright and tap the top of the container 5 or more times.
Then turn the container the other way up and again tap the top of the container 5 or more times.

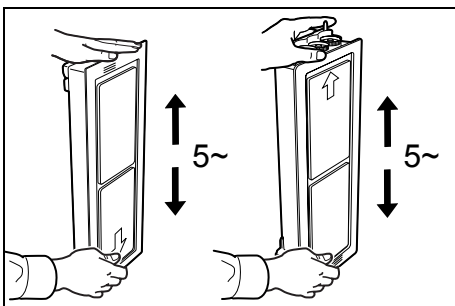


22 Then shake the toner container up and down 5 or more times.
Again turn the container the other way up and shake it another 5 or more times.

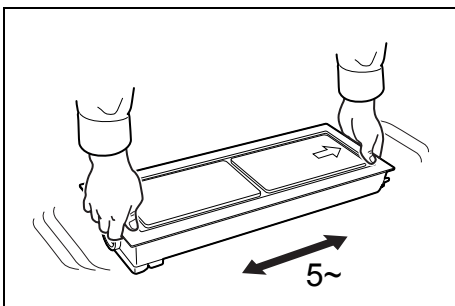


23 Shake the toner container from side to side 5 or more times so that the toner inside the container is distributed evenly.

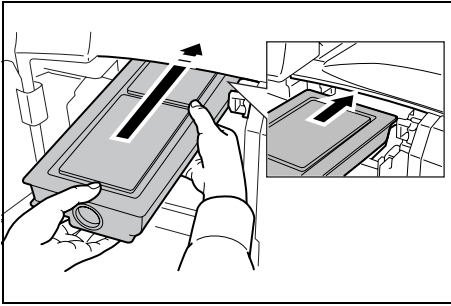


24 Hold the new toner container in both hands and gently push it into the machine.

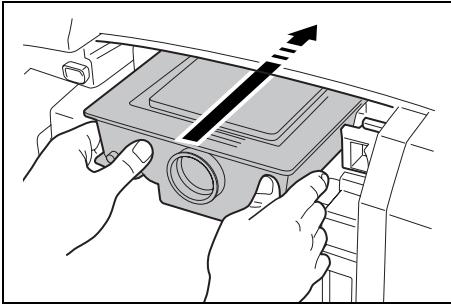


25 Using both hands, push the toner container in until it locks.

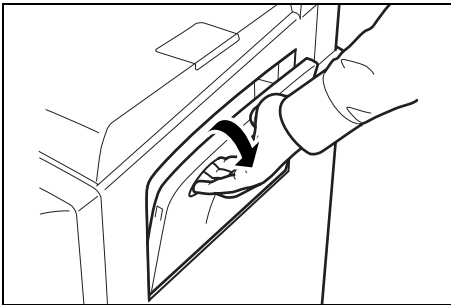

26 Open the MP tray.

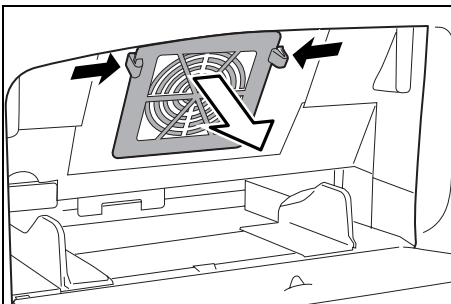

27 Remove the filter.

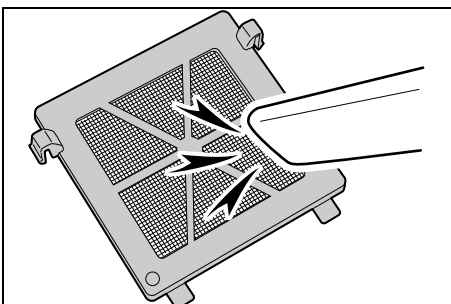

28 Remove dust from the filter using a vacuum cleaner or dry cloth.

IMPORTANT Do not wash the filter with water. Do not use the attached cleaning brush.

29 Put the filter back in place and close the MP tray.

30 Close the front cover.

31 When *Replaced the toner container?* appears, press [Yes].

32 When *Cleaned the main charger?* appears, press [Yes].

33 Adjustment begins. Wait 5 minutes.

After use, always dispose of the toner container and the waste toner box in accordance with Federal, State and Local rules and regulations.

6 Troubleshooting

This chapter explains how to solve problems with the machine.

Solving Malfunctions	6-2
Responding to Error Messages	6-4
Clearing Paper Jams	6-8
Jam Location Indicators.....	6-8
Paper Jam Precautions	6-9
Cassette 1	6-9
Cassette 2	6-10
Optional Cassettes 3 and 4	6-11
MP Tray	6-12
Inside the Left Covers 1, 2 and 3.....	6-12
Duplex Unit.....	6-13
Duplex Unit and Cassette 1.....	6-13
Paper Feed Unit	6-14
Optional Built-in Finisher	6-16
Optional Document Processor.....	6-18
Optional Document Finisher	6-19
Optional Job Separator.....	6-19

Solving Malfunctions

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, check the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.

Symptom	Checkpoints	Corrective Actions	Reference Page
The operation panel does not respond when the machine is turned on (position).	Is the machine plugged in?	Plug the power cord into an AC outlet.	—
Pressing the Start key does not produce copies.	Is a message displayed on the touch panel?	Determine the appropriate response to the message and take action accordingly.	page 6-4
The original size is not detected properly.	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 2-14
		Place originals face-up in the optional document processor.	page 2-15
Blank sheets are output.	Is the machine installed beneath fluorescent lights?	Do not install this machine beneath fluorescent lights.	—
	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 2-14
Copies are too light.	Is the machine set to Manual Density?	Use the density adjustment key to set the correct density.	page 3-5
	Is the toner distributed evenly within the toner container?	Shake the toner container up and down approximately 10 times.	page 5-7
Copies are too dark.	Is there a message indicating the addition of toner?	Replace the toner container.	page 5-7
	Is the paper damp?	Replace the paper with new paper.	page 2-2
Copies are too dark.	Is the machine set to Manual Density?	Use the density adjustment key to set the correct density.	page 3-5
Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).	Is the original a printed photograph?	Set the original image to [Photo].	page 3-4
Copies are not clear.	Did you choose appropriate image quality for the original?	Select an appropriate original image mode.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	page 2-2
Copies are dirty.	Are the original cover or platen dirty?	Clean the original cover or platen glass.	page 5-2
Copies are fuzzy.	Is the paper damp?	Replace the paper with new paper.	page 2-2

Symptom	Checkpoints	Corrective Actions	Reference Page
Copies are skewed.	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and flush against the original size indicator plates.	page 2-14
		When placing originals in the document processor, align the original width guides securely before placing the originals.	page 2-15
	Is the paper loaded correctly?	Check the position of the paper width guides.	page 2-2
Paper jams frequently occur.	Is the paper loaded correctly?	Load the paper correctly.	page 2-2
	Is the paper of the supported type? Is it in good condition?	Remove the paper from the cassette, turn it over, and reload it.	page 2-2
	Is the paper curled, folded, or wrinkled?	Replace the paper with new paper.	page 2-2
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 6-8
	Is the paper damp?	Replace the paper with new paper.	page 2-2
Copies from the optional document processor have black lines.	Is the slit glass dirty?	Clean the slit glass.	page 5-2
Copies are wrinkled.	Is the separator dirty?	Clean the separator.	page 5-3
	Is the paper damp?	Replace the paper with new paper.	page 2-2
	Is the paper set in a proper orientation?	Change the orientation in which the paper is positioned.	—

Responding to Error Messages

If the touch panel displays any of these messages, follow the corresponding procedure.


Error Messages	Checkpoints	Corrective Actions	Reference Page
<i>Close ### cover.</i>	Is the indicated cover open?	Close all covers securely.	—
<i>Check the cover.</i>	Are any covers open? Does the message indicate which cover is open?	Close all covers securely.	—
<i>Close Document Processor.</i>	Is the optional document processor open while loading the original?	Close the document processor.	—
<i>Close Document processor cover.</i>	Is the optional document processor top cover open?	Close the document processor top cover.	page 2-15
<i>Set cassette #. (Close paper cassette #.)</i>	Is the indicated cassette not fully closed?	Pull out the cassette and push in securely.	—
<i>Open cassette #, check and remove paper from inside of the machine. (Open cassette #, check and remove paper from inside of machine.)</i>	—	Completely pull out the indicated cassette and remove any paper inside.	—
<i>Reset feeding unit for paper cassette.</i>	Is the paper feeder securely pushed into the machine?	Pull out the paper feeder and securely push it all the way into the machine.	page 6-11
<i>Add paper in cassette #. (Add paper cassette #.)</i>	Is the indicated cassette out of paper?	Load paper. If the same type of paper is loaded in another cassette in the same orientation, you can press either one of paper selection keys on the left of the touch panel to switch to that cassette for copying.	—
<i>Add paper in the Multi Purpose Tray. ### size (Place paper on the Multi Purpose Tray. ### size)</i>	Is paper of the specified size loaded in the MP tray?	Load paper of the size indicated in the MP tray.	page 2-4
<i>Add paper in the Multi Purpose Tray. (Add paper on the Multi Purpose Tray.)</i>	Has all the paper on the MP tray been fed?	Load paper in the MP tray.	page 2-4
<i>Change the size of MP tray.</i>	Is the specified size paper loaded in the MP tray?	Reconfigure the size of the MP tray.	page 2-9
<i>Check paper size.</i>	Is the specified size paper loaded?	Load paper of a size that can be used.	—
<i>Reposition original.</i>	Is the orientation of the specified paper different from that of the original?	Change the orientation of the original. If you press the Start key without doing so, the original will be copied at the current size.	—

Error Messages	Checkpoints	Corrective Actions	Reference Page
<i>Check paper size. Copy paper is not the same size as original. (Paper size in cassette differs from actual size. Check paper size in cassette.)</i>	Is the specified paper loaded? Or are the settings incorrect?	Load the specified paper. Adjust any settings that are incorrect.	—
<i>Reposition original or change cassette. (Reset original or select another paper cassette.)</i>	Is the orientation of the specified paper different from that of the original?	Change the orientation of the original.	—
	Is the copier installed beneath fluorescent lights?	Do not install this machine beneath fluorescent lights.	—
<i>Reset originals in processor.</i>	—	Remove originals from the optional document processor, stack them uniformly and reset them.	page 2-15
<i>Reset all originals in processor. (Reset originals in processor.)</i>	—	Remove originals from the optional document processor, and reset them in the original order.	page 2-15
<i>Reset all originals in Document Processor. (Reset originals in Document Processor.)</i>	Are there any originals left in the optional document processor?	Reset all originals in the optional document processor.	—
<i>Cannot copy this paper type.</i>	Can the specified copy functions be used with the selected media type?	Select another type of media.	—
<i>Cannot staple this paper type.</i>	Did you select a media type that cannot be stapled?	Select another type of media.	Refer to the optional Document Finisher Operation Guide.
<i>Cannot staple this size. (Cannot staple this paper size.)</i>	Is stapling available for the size of the loaded paper?	Change the paper size.	page 7-9
			Refer to the optional Document Finisher Operation Guide.
<i>Cannot staple. ## :maximum capacity (Staple) (Cannot staple. ## :Max. staples)</i>	Is the maximum page quantity for stapling exceeded?	Decrease the number of sheets to be stapled to less than the maximum staple sheet count.	page 7-9
			Refer to the optional Document Finisher Operation Guide.
<i>The top tray is full of paper. Remove paper, and press Start key.</i>	During copying, is the maximum capacity of the top tray exceeded?	Remove some pages from the top tray and press the Start key. Printing continues.	—
<i>The top tray is full of paper. Remove paper, and press Continue key.</i>	During printing, is the maximum capacity of the top tray exceeded?	Remove some pages from the top tray and press [Continue]. Printing continues.	—
<i>Paper capacity exceeded. (Finisher) Remove paper, and press Start key.</i>	During copying, is the maximum capacity of the optional document finisher output tray exceeded?	Remove some pages from the optional document finisher and press the Start key. Printing continues.	—
<i>Paper capacity exceeded. (Finisher) Remove paper, and press Continue key.</i>	During printing, is the maximum capacity of the optional document finisher output tray exceeded?	Remove some pages from the optional document finisher and press [Continue]. Printing continues.	—

Error Messages	Checkpoints	Corrective Actions	Reference Page
<i>Remove paper. Finisher tray.</i>	Is the maximum capacity of the optional document finisher output tray exceeded?	Remove some pages from the optional document finisher.	—
<i>These functions cannot be combined.</i>	Have you selected functions that cannot be used together?	Check the settings.	—
<i>Insert key counter.</i>	Is the optional key counter inserted correctly?	Insert the optional key counter securely and completely.	—
<i>Memory full</i>	—	The current copy cannot be processed because there is no more copy memory free space, or the number of original pages exceeded the maximum 999 pages. When the following message is displayed select the resolution method. [Cancel]: Cancels copying. [Continue]: Copies up to the last scanned page.	—
<i>Toner will be empty soon.</i>	—	The toner container will need to be replaced soon. Prepare the replacement toner container.	page 5-7
<i>Ready to copy. Add toner.</i>	—	The machine is running low on toner; only one page may be printed at a time. Prepare the replacement toner container.	page 5-7
<i>Add toner.</i>	—	Replace the toner container.	page 5-7
<i>Set the toner container.</i>	Is the toner container securely installed?	Open the front cover and pull the toner container out. Shake the container well and set back in place.	page 5-7
<i>Clean the main charger.</i>	Have you cleaned the main charger?	Clean the main charger after replacing the toner container. After cleaning, press [End]. Adjustment begins. Wait 5 minutes.	page 5-7
<i>Image cycle. (Now adding toner.)</i>	—	Toner replenishment is in progress. Wait until the process is completed.	—
<i>Please wait. Now in the fusing temperature adjustment process.</i>	—	Performing internal maintenance. Wait until the process is completed.	—
<i>Check waste toner box.</i>	Is the waste toner box securely fastened?	Securely fasten the waste toner box.	page 5-7
<i>Replace the waste toner box.</i>	—	Replace the waste toner box.	page 5-7
<i>Clean the slit glass for original fed from DP. (Clean the slit glass for original fed.)</i>	—	Rub the slit glass with the included dry cleaning cloth.	page 5-2
<i>Install duplex unit.</i>	Is the duplex unit securely installed?	Open left cover 1 and install the duplex unit in place securely.	—
<i>Out of staples. Add staples. (Stapler empty. Add staples.)</i>	Is the optional document finisher or built-in finisher out of staples?	Refill staples.	page 4-4 Refer to the optional Document Finisher Operation Guide.

Error Messages	Checkpoints	Corrective Actions	Reference Page
<i>Time for maintenance.</i>	—	Periodic maintenance is required to keep your machine in good condition. Contact your Service Representative or Authorized Service Center promptly.	—
<i>Paper misfeed.</i>	—	If a paper jam occurs, the location of the jam will be indicated on the touch panel and the machine will stop. Leave the machine switched on (I position) and follow the instructions to remove the jammed paper.	page 6-8
<i>Remove paper from inner tray of Finisher.</i>	Is there any paper left in the optional document finisher?	Remove all paper left in the optional document finisher.	—
<i>Staple jam.</i>	Is the optional document finisher or built-in finisher experiencing a staple jam?	Remove the jammed staple.	page 4-5 Refer to the optional Document Finisher Operation Guide.
<i>System error. Call service.</i>	Is it re-displayed after opening and closing the front cover, turning off and on the main power switch, and plugging out and plugging in the power plug in the power outlet?	Make a note of this message (C followed by a number). Turn off the machine (⏻ position), unplug the power cord, and contact your Service Representative or Authorized Service Center.	—
<i>Paper cassette is out of order. Select another paper cassette. (Paper cassette is out of order. Select other paper cassette.)</i>	—	The cassette in use has a problem and is temporarily unavailable. Contact your Service Representative or Authorized Service Center promptly. To continue copying, use another cassette.	—
<i>System error. Main Power Switch Off / On.</i>	—	A system error has occurred. Turn the main power switch off and on again.	—
<i>Please wait. Remote edit. (Please wait. Remote editing.)</i>	Is Job account editing being done from a network connected computer?	Copying is not possible until editing is complete.	—



Clearing Paper Jams

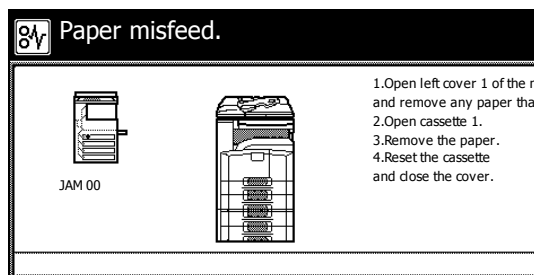

If a paper jam occurs, the touch panel will display *Paper misfeed* and the copying will stop. Refer to these procedures to remove the jammed paper.

Jam Location Indicators

When a paper jam occurs, the jam location indicators and corrective action are displayed. Jam location indicators indicate the paper jam position, as shown below.

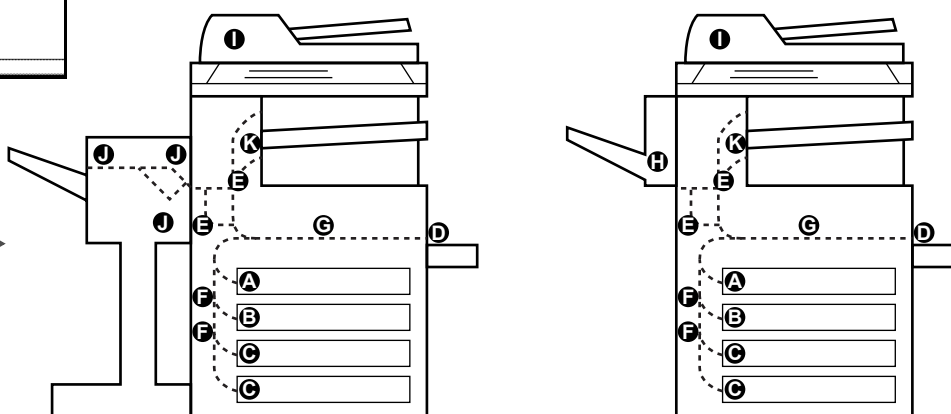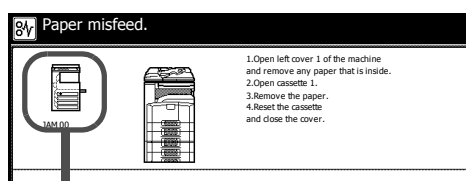

Jam Location Indicators	Paper Jam Location	Reference Page
A	Cassette 1	page 6-9 page 6-13
B	Cassette 2	page 6-10
C	Optional cassettes 3 and 4	page 6-11
D	MP tray	page 6-12
E	Duplex unit, Inside the left cover 1	page 6-12 page 6-13
F	Inside the left covers 2 and 3	page 6-12
G	Paper feed unit	page 6-14
H	Optional built-in finisher	page 6-16
I	Optional document processor	page 6-18
J	Optional document finisher	page 6-19
K	Optional job separator	page 6-19

After clearing the jam, the machine will warm up again and the error message will be cleared. The machine resumes from the page on which the jam occurred.

Paper Jam Precautions

- Do not reuse paper cleared from a jam.
- If the paper was torn during removal, be sure to remove any loose scraps of paper from the machine inside. Scraps of paper left in the machine may cause subsequent jamming.
- Jammed paper from the document finisher (option) will be fed out again. Do not return this paper to the document finisher tray.



WARNING High voltage is present in the charger section. Take sufficient care when working in this area, as there is a danger of electrical shock.




CAUTION The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.


Cassette 1

Follow the steps below to clear paper jams in cassette 1.


- 1** Pull up left cover 1 lever and open left cover 1.

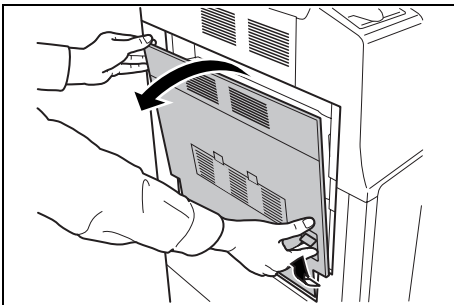


- 2** Remove the jammed paper.

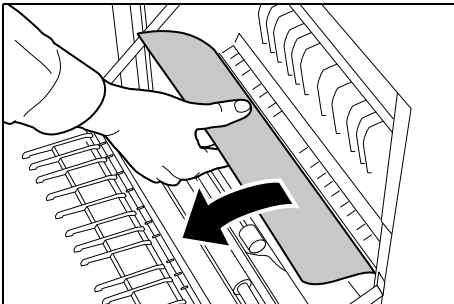


- 3** Pull out cassette 1.

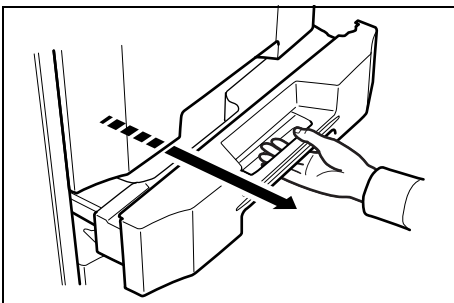

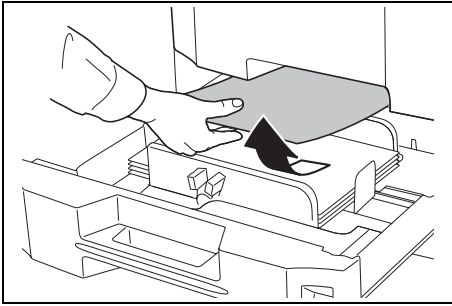

- 4** Remove the jammed paper.
If the paper tears, remove every loose scrap from inside the machine.

- 5** Push cassette 1 securely back in place.

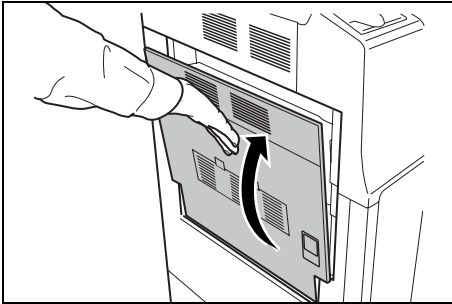


- 6** Press the indicated position to close left cover 1.


Cassette 2

Follow the steps below to clear paper jams in cassette 2.


- 1** Open left cover 2.

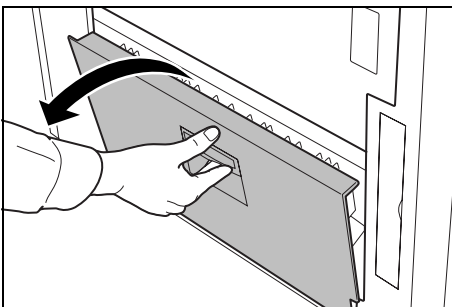


- 2** Remove the jammed paper.

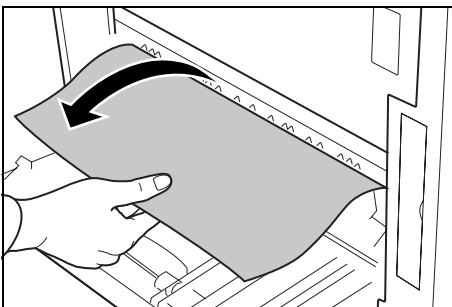

- 3** Pull out cassette 2.

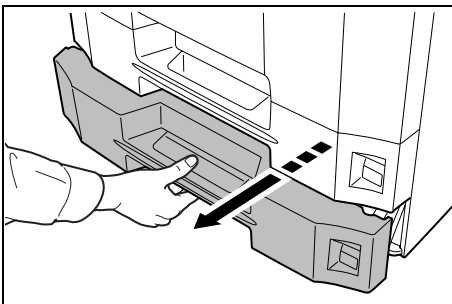

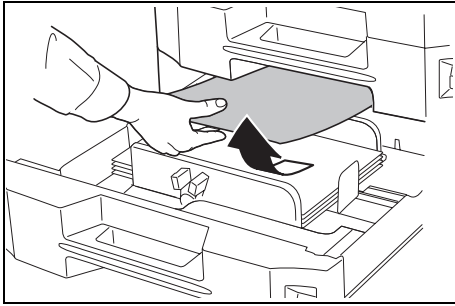

4 Remove the jammed paper.


If the paper tears, remove every loose scrap from inside the machine.

5 Push cassette 2 securely back in place.


6 Close left cover 2.

Optional Cassettes 3 and 4

Follow the steps below to clear paper jams in cassettes 3 or 4 when using the optional paper feeder.

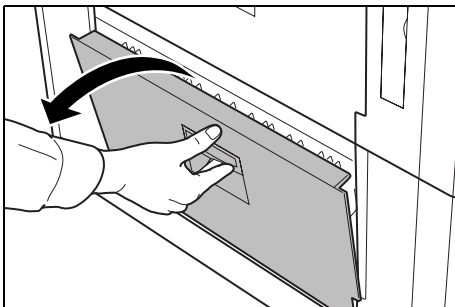


1 Open left cover 3.

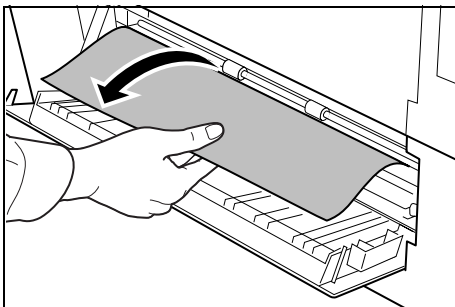


2 Remove the jammed paper.

If the paper tears, remove every loose scrap from inside the machine.

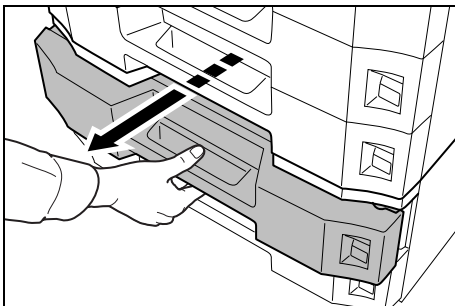

3 Pull out the cassette in use.

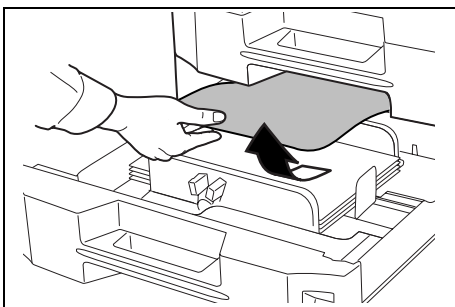

4 Remove the jammed paper.


5 Push the cassette securely back in place.

6 Close left cover 3.


MP Tray

Follow the steps below to clear paper jams in the MP tray.

- 1 Remove all papers from the MP tray.

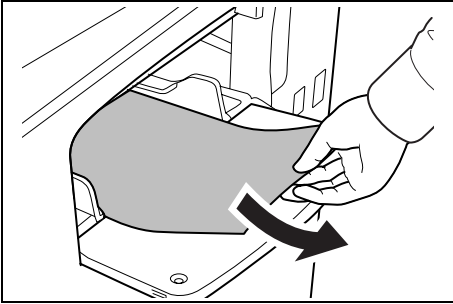


- 2 If paper is jammed inside, pull the paper toward you to remove.

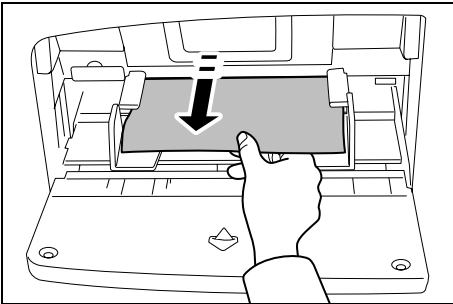

Inside the Left Covers 1, 2 and 3

Follow the steps below to clear paper jams inside left cover 1, 2 or 3 (option).


- 1 Open the left cover where paper is jammed inside.

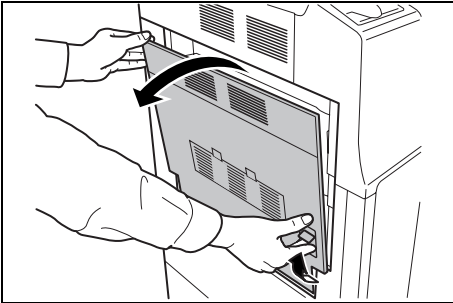

- 2 Remove the jammed paper.


If the paper tears, remove every loose scrap from inside the machine.

- 3 Close the left cover.

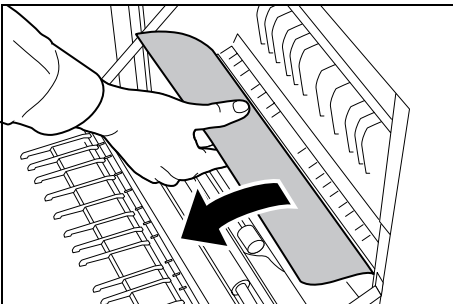


Duplex Unit


Follow the steps below to clear paper jams in the duplex unit.

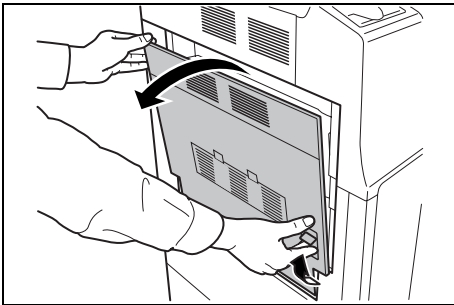


- 1** Pull up left cover 1 lever and open left cover 1.

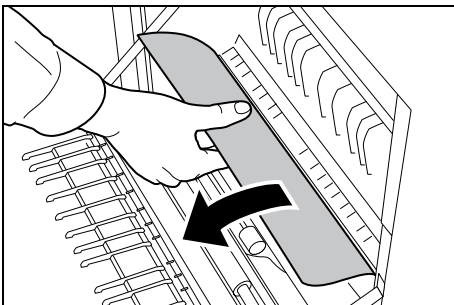

- 2** Remove the jammed paper.

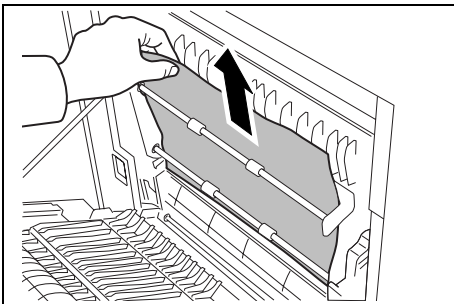


- 3** Lift up the duplex unit and remove the jammed paper.

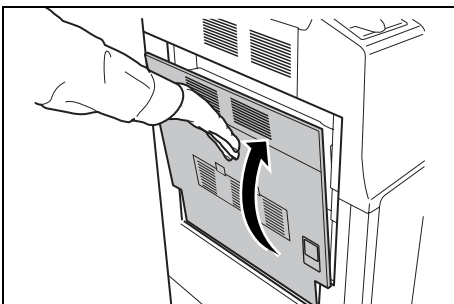


- 4** Press the indicated position to close left cover 1.

Duplex Unit and Cassette 1


Follow the steps below to clear paper jams in duplex unit and cassette 1.

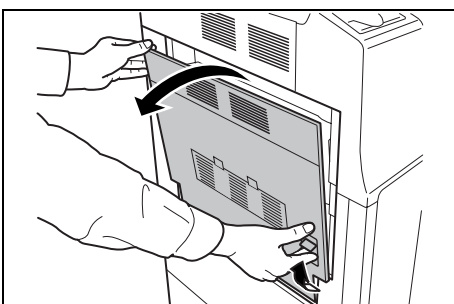


- 1** Pull up left cover 1 lever and open left cover 1.

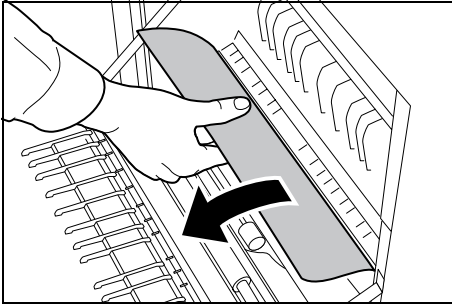

2 Remove the jammed paper.

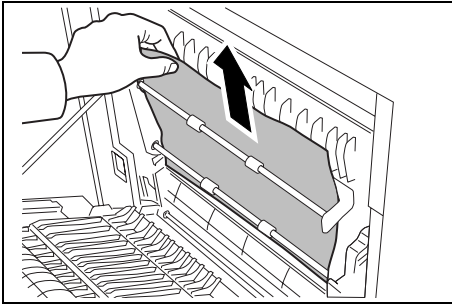


3 Lift up the duplex unit and remove the jammed paper.

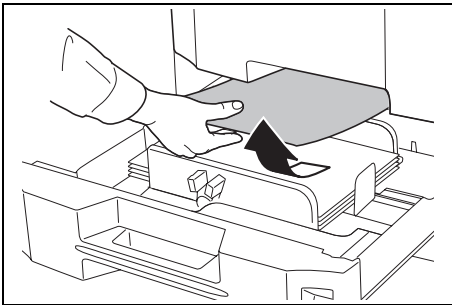

4 Pull out cassette 1 and remove the jammed paper.

If the paper tears, remove every loose scrap from inside the machine.


5 Push cassette 1 securely back in place.

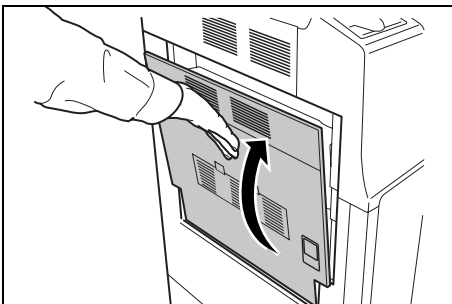


6 Press the indicated position to close left cover 1.

Paper Feed Unit

Follow the steps below to clear paper jams in the paper feed unit.

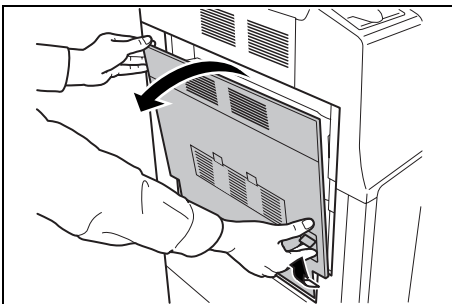


1 Pull up left cover 1 lever and open left cover 1.

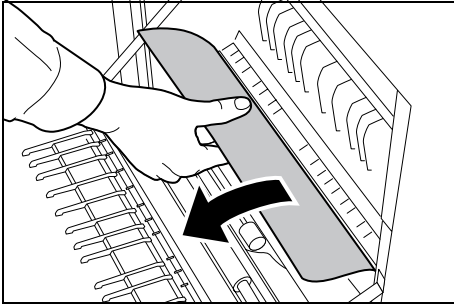


2 Remove the jammed paper.


If the paper tears, remove every loose scrap from inside the machine.

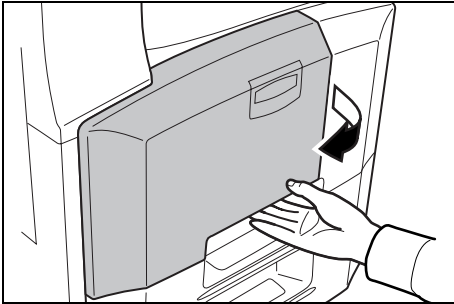

3 Open the front cover.

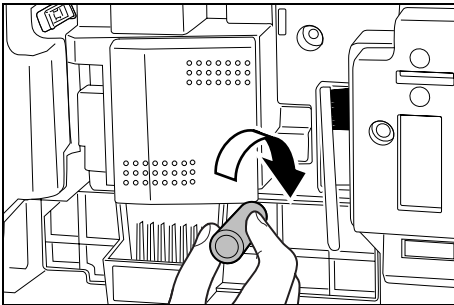


4 Turn the lower green knob (**A1**) clockwise.

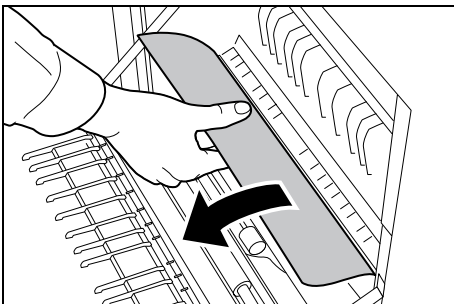


5 Remove the jammed paper.

If you cannot remove the paper, proceed with the next step.

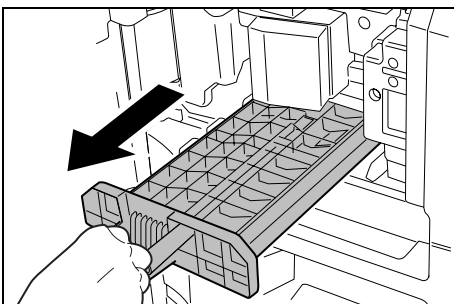


6 Pull out the paper feed unit (**A2**).

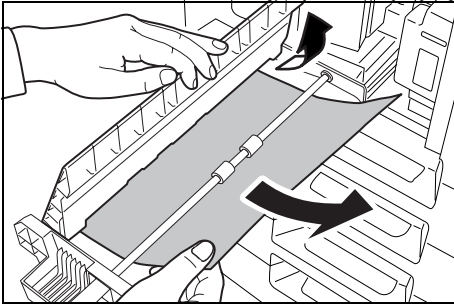

7 Open the paper feed unit cover (**A3**) and remove the jammed paper.

8 Push the paper feed unit (**A2**) back in place, and close the front cover.

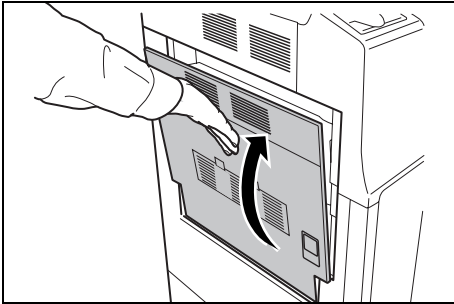


9 Press the indicated position to close left cover 1.

Optional Built-in Finisher


Follow the steps below to clear paper jams in the optional built-in finisher.

1 Remove any paper left in the finisher output slot.


2 Remove the output tray.

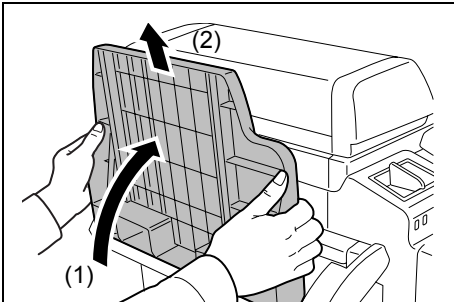


3 Pull up left cover 1 lever and open left cover 1.

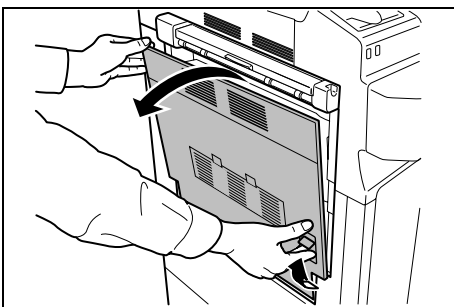


4 Remove the jammed paper.

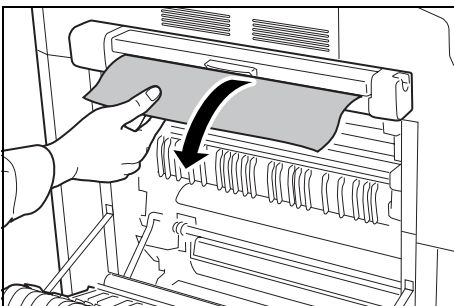


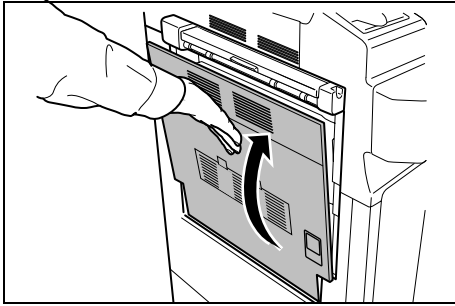


5 Press the indicated position to close left cover 1.

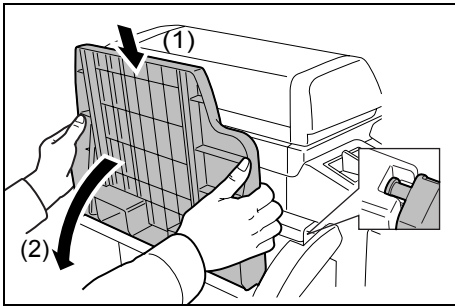


6 Reattach the output tray.

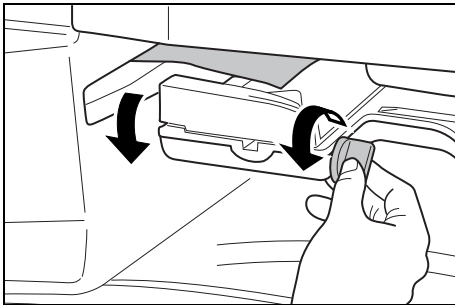

7 Turn the dial to lower the finisher process tray.

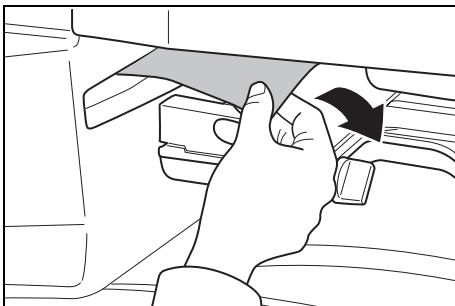


8 Remove any paper from the tray.

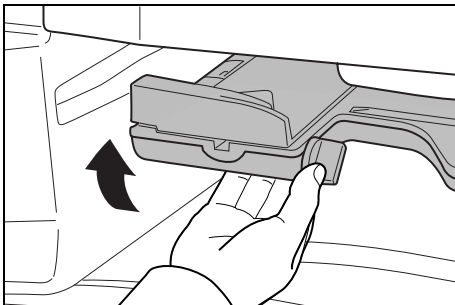


9 Push the tray upward back into place.

Optional Document Processor


Follow the steps below to clear paper jams in the optional document processor.

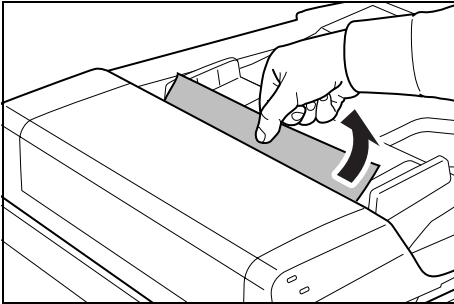


- 1** Remove the original from the original tray.

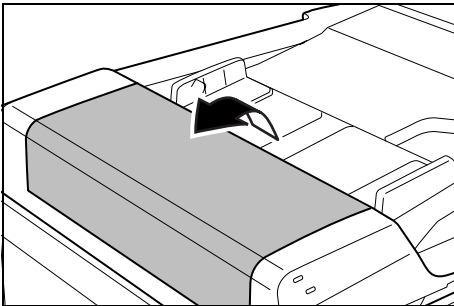

- 2** Open the document processor top cover.

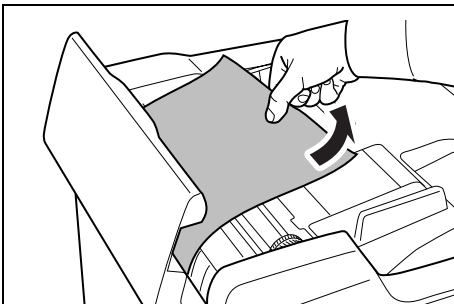


- 3** Remove the jammed original.

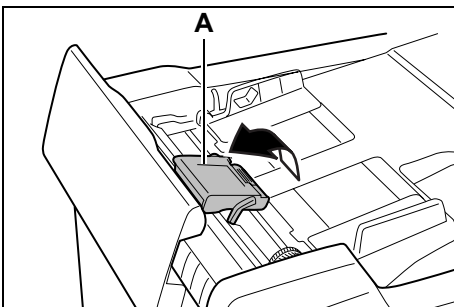

- 4** Lift up the paper feed unit **A**.

- 5** Remove the jammed original.

If the original tears, remove every loose scrap from inside the machine.

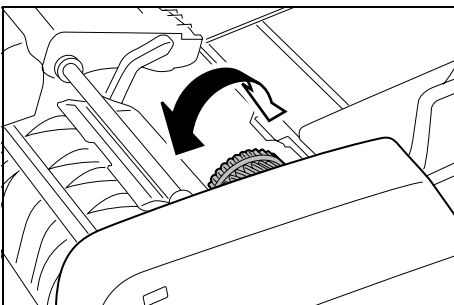

- 6** Remove the original by turning the dial as shown.

- 7** Put the paper feed unit **A** back in place and close the document processor top cover.


- 8** Reload the originals on the document processor tray.

Optional Document Finisher

If a misfeed occurs in the optional document finisher, refer to the Document Finisher *Operation Guide* to clear the jam.


Optional Job Separator

Follow the steps below to clear paper jams in the optional job separator.

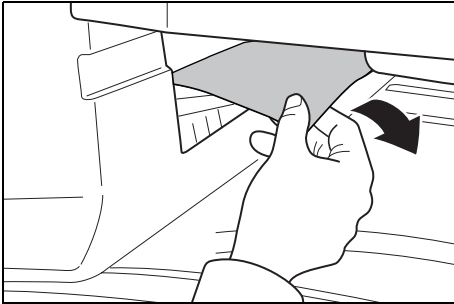


- 1** If jammed paper can be seen through the paper output slot, pull it out toward you.

If the paper tears, remove every loose scrap from inside the machine.

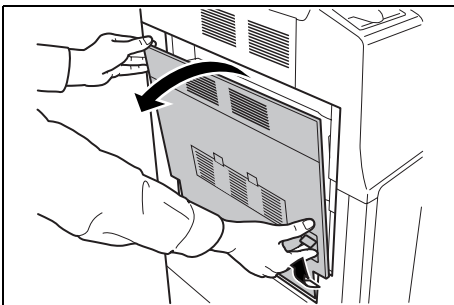


- 2** Pull up left cover 1 lever and open left cover 1.

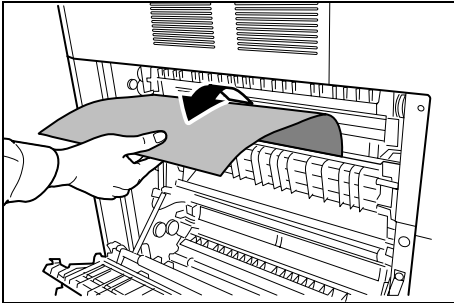

- 3** Remove the jammed paper.

If the paper tears, remove every loose scrap from inside the machine.

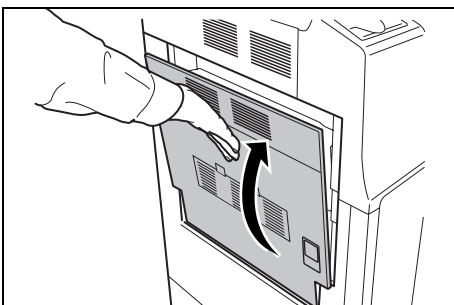

- 4** Press the indicated position to close left cover 1.

7 Appendix

This chapter explains how to enter text, describes the paper types that can be used with the machine and lists the machine specifications.

Entering Characters on Touch Panel	7-2
Paper	7-5
Specifications	7-6
Body	7-6
Document Processor (option).....	7-8
Paper Feeder (option)	7-8
Document Finisher (option)	7-9
Built-in Finisher (option).....	7-9
Job Separator (option).....	7-10
Environmental Specifications.....	7-10


Entering Characters on Touch Panel

To enter characters on the touch panel such as department names (for job accounting) or copying programs, etc., use the following procedures.

Input Screen


Inch models

Keyboard

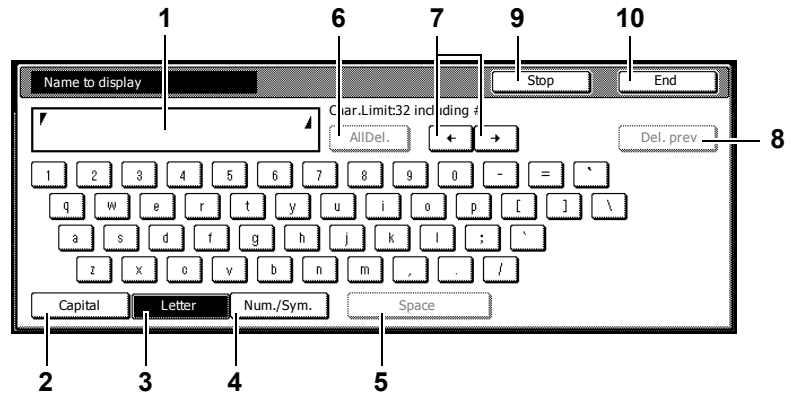


- 1 **Character display:** Displays the characters entered.
- 2 **[Capital]:** Press this key to enter capital letters.
- 3 **[Letter]:** Press this key to enter lowercase letters.
- 4 **[Num./Sym.]:** Press this key to enter the numeric and symbols.
- 5 **[Space]:** Press this key to enter a space.
- 6 **[AllDel.]:** Press this key to delete all characters entered.
- 7 **[←][→]:** Press these keys to move the cursor left and right.
- 8 **[Del. prev]:** Press this key to delete the character to the left of the cursor.
- 9 **[Stop]:** Press this key to return to the previous screen.
- 10 **[End]:** Press this key to confirm the characters you entered.

Capital keyboard

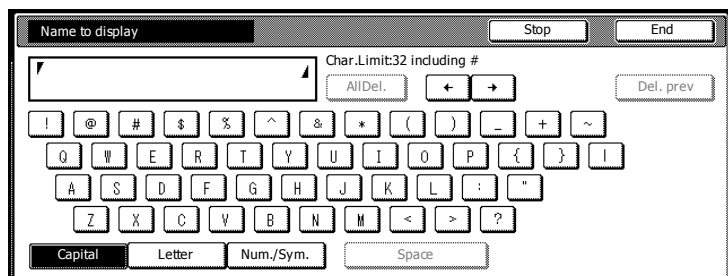


Numeral/Symbol keyboard

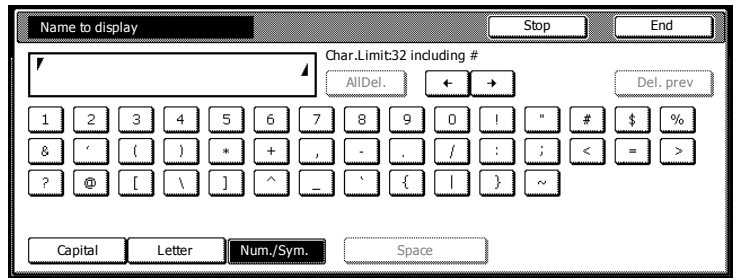


Metric Models

Keyboard

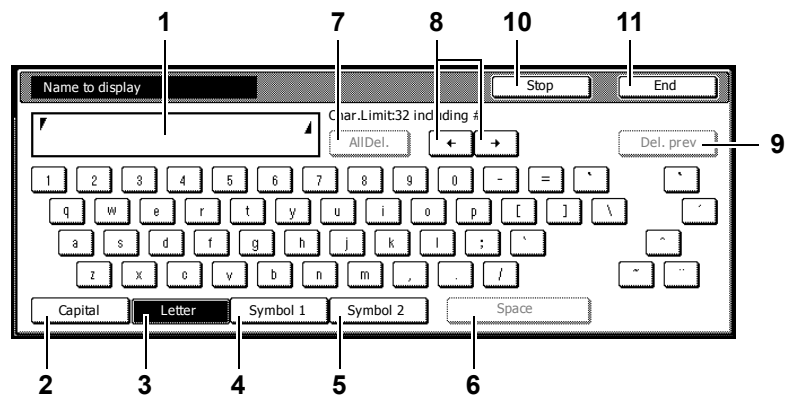


- 1 **Character display:** Displays the characters entered.
- 2 **[Capital]:** Press this key to enter capital letters.
- 3 **[Letter]:** Press this key to enter lowercase letters.
- 4 **[Symbol 1]:** Press this key to enter the numeric and symbols.
- 5 **[Symbol 2]:** Press this key to enter other symbols.
- 6 **[Space]:** Press this key to enter a space.
- 7 **[AllDel.]:** Press this key to delete all characters entered.
- 8 **[←][→]:** Press these keys to move the cursor left and right.
- 9 **[Del. prev]:** Press this key to delete the character to the left of the cursor.
- 10 **[Stop]:** Press this key to return to the previous screen.
- 11 **[End]:** Press this key to confirm the characters you entered.


Capital keyboard

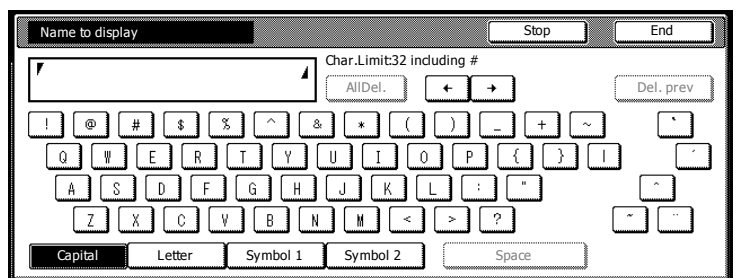

Symbol 1 keyboard

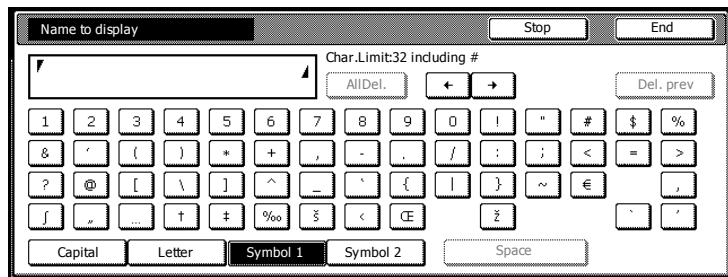


Symbol 2 keyboard

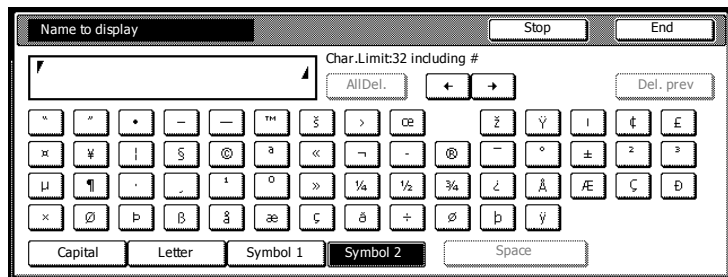


Entering Characters


The following is an example of how to enter 'Abcde' using the keyboard.

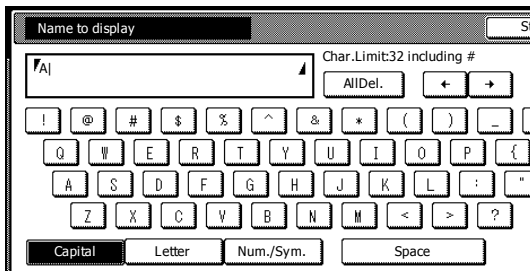

- 1 Press [Capital] and press [A] on the keyboard.

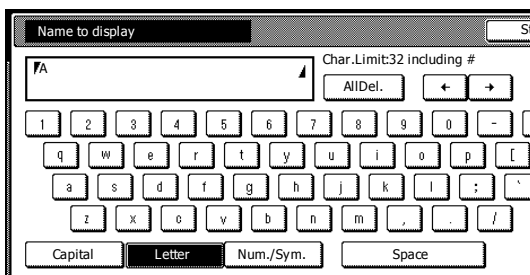

- 2 Press [Letter].

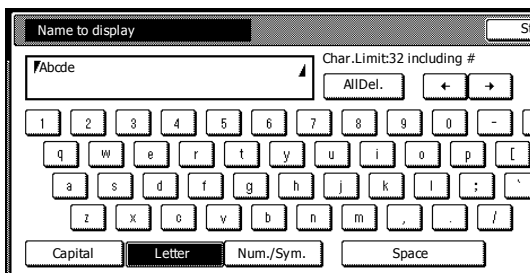

- 3 Press [b], [c], [d] and [e] in order.
- 4 When entering all characters are complete, press [End].

Paper

This section explains the paper sizes and types that can be used in the paper source.

Cassettes 1 and 2 and the optional paper feeder

Supported types	Supported paper sizes	No. of sheets
Plain paper (60 to 120 g/m ²) Recycled paper (60 to 120 g/m ²)	11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", 8K, 16K, 16KR	500 (80 g/m ²)
Plain paper (60 to 120 g/m ²) Recycled paper (60 to 120 g/m ²)	A3, B4, A4, A4R, B5, B5R, A5R, Folio	500 (80 g/m ²)

MP tray (Multi Purpose tray)

Supported types	Supported paper sizes	No. of sheets
Plain paper (45 to 200 g/m ²) Recycled paper (45 to 200 g/m ²) Colored paper (45 to 200 g/m ²)	11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", Executive, A3, B4, A4, A4R, B5, B5R, A5R, B6R, 8K, 16K, 16KR Other sizes: Portrait - 3 7/8 to 11 5/8" or 98 to 297 mm Landscape - 5 7/8 to 17" or 148 to 432 mm	200 (80 g/m ²)
Transparency	11 × 8 1/2", A4, A4R	25
Postcards OUFUKU HAGAKI (return postcard)	Postcards (100 × 148 mm) Return postcard (148 × 200 mm)	80
Envelopes	Envelope DL, Envelope C5, Envelope C4, Comm. #10, Comm. #9, Comm. #6-3/4, Monarch, ISO B5, Youkei 2, Youkei 4 Other sizes: Portrait - 3 7/8 to 11 5/8" or 98 to 297 mm Landscape - 5 7/8 to 17" or 148 to 432 mm	20

Specifications



Note These specifications are subject to change without notice.

Body

Item		Description	
		25 cpm model	30 cpm model
Type		Desktop	
Copying Method		Electrophotography by semiconductor laser	
Supported Original Types		Sheet, Book, 3-dimensional objects (maximum original size: 11 × 17"/A3)	
Original Feed System		Fixed	
Paper Weight	Cassette 1, 2	60 to 120 g/m ² (Duplex: 60 to 80 g/m ²)	
	MP Tray	45 to 200 g/m ²	
Media Type	Cassette 1, 2	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick paper, High Quality, Custom 1 to 8 (Duplex: Same as Simplex)	
	MP Tray	Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Thick paper, Envelope, High Quality, Custom 1 to 8	
Paper Size	Cassette 1, 2	Maximum: 11 × 17"/A3 (Duplex: 11 × 17"/A3) Minimum: 5 1/2 × 8 1/2"/A5R (Duplex: 5 1/2 × 8 1/2"/A5R)	
	MP Tray	Maximum: 11 × 17"/A3 Minimum: 5 1/2 × 8 1/2"/A6R	
Zoom Level		Manual mode: 25 to 400%, 1% increments Auto mode: Preset Zoom	
Copying Speed	Simplex	11 × 17"/A3: 12.5 sheets/min 8 1/2 × 14"/B4: 12.5 sheets/min 11 × 8 1/2"/A4: 25 sheets/min 8 1/2 × 11"/A4R: 17.5 sheets/min B5: 25 sheets/min B5R: 20 sheets/min	11 × 17"/A3: 15 sheets/min 8 1/2 × 14"/B4: 15 sheets/min 11 × 8 1/2"/A4: 30 sheets/min 8 1/2 × 11"/A4R: 22 sheets/min B5: 30 sheets/min B5R: 20 sheets/min
	Duplex	11 × 17"/A3: 9 sheets/min 8 1/2 × 14"/B4: 9 sheets/min 11 × 8 1/2"/A4: 19 sheets/min 8 1/2 × 11"/A4R: 10 sheets/min B5: 20 sheets/min B5R: 11 sheets/min	11 × 17"/A3: 9 sheets/min 8 1/2 × 14"/B4: 10 sheets/min 11 × 8 1/2"/A4: 20 sheets/min 8 1/2 × 11"/A4R: 11 sheets/min B5: 21 sheets/min B5R: 11 sheets/min
First Copy Time (A4, feed from Cassette)		4.7 seconds or less	
Warm-up Time (22°C/71.6°F, 60%)	Power on	15 seconds or less	
	Low Power	10 seconds or less	
	Sleep	15 seconds or less	

Item		Description	
		25 cpm model	30 cpm model
Paper Capacity	Cassette 1, 2	500 sheets (80 g/m ²)	
	MP Tray	200 sheets (80 g/m ²)	
Output Tray Capacity	Top tray	250 sheets (80 g/m ²)	
	with optional built-in finisher	100 sheets (80 g/m ²)	
	with optional job separator	150 sheets (80 g/m ²)	
Continuous Copying		1 to 999 sheets	
Image Write System		Semiconductor laser and electrophotography	
Image Storage Memory		64 MB (standard)	
Resolution		600 × 600 dpi	
Monthly Duty	Average	8,000 pages	10,000 pages
	Maximum	80,000 pages	100,000 pages
Operating Environment	Temperature	10 to 32.5°C/50 to 90.5°F	
	Humidity	15 to 80 %	
	Altitude	2,500 m/8,202 ft maximum	
	Brightness	1,500 lux maximum	
Dimension (W × D × H)		22 7/16 × 25 3/16 × 30 3/16" (Main unit only) 570 × 640 × 767.2 mm	
Weight (without toner container and waste toner box)		165 lb/75 kg	
Space Required (W × D)		28 9/16 × 25 3/16" (Using MP tray) 725 × 640 mm	
Power Source		120 V AC, 60 Hz, 11.2 A/220 to 240 V AC, 50 Hz, 6.0 A	
Power Consumption		1360 W	
Options		Document processor, Paper feeder, Document finisher, Built-in finisher, Job separator, Key counter, Printer kit and Fax kit	

Document Processor (option)

Item	Description
Original Feed Method	Automatic feed
Paper Weight	45 to 160 g/m ²
Supported Original Types	Sheet originals
Paper Size	Maximum: 11 × 17"/A3 Minimum: 5 1/2 × 8 1/2"/A5R
Original No. of Sheets	75 sheets or less (50 to 80 g/m ²) Mixed original sizes: 30 sheets or less (50 to 80 g/m ²)
Device Dimensions (W × D × H)	22 × 19 3/16 × 5 3/16" 559 × 487 × 131 mm
Weight	15.4 lb or less/7 kg or less

Paper Feeder (option)

Item	Description
Paper Supply Method	Friction Feed (No. Sheets: 500, 80 g/m ² , 2 cassettes)
Paper Weight	60 to 120 g/m ²
Media Type	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick paper, High Quality, Custom 1 to 8
Paper Size	11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, A4, A4R, B5, B5R, A5R, Folio, 8K, 16K, 16KR
Dimensions (W × D × H)	22 7/16 × 24 3/8 × 12 3/16" 570 × 618.7 × 309 mm
Weight	55 lb or less/25 kg or less

Document Finisher (option)

Item	Description
Number of Trays	1 tray
Paper Weight	Stapling: 80 g/m ² or less
Paper Size and Maximum Sheets (Non-stapling)	11 × 17", 8 1/2 × 14", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, Folio, 8K: 500 sheets 11 × 8 1/2", 8 1/2 × 11", A4, A4R, B5, 16K: 1000 sheets
Maximum Sheets for Stapling (Paper weight 80 g/m ² or less)	11 × 17", 8 1/2 × 14", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, Folio, 8K: 20 sheets 11 × 8 1/2", 8 1/2 × 11", A4, A4R, B5, 16K: 30 sheets
Dimensions (W × D × H)	22 × 20 11/16 × 36 1/16" 558 × 526 × 916 mm
Weight	Approx. 55 lb/Approx. 25 kg

Built-in Finisher (option)

Item	Description
Number of Trays	1 tray
Paper Weight	60 to 105 g/m ² or less
Paper Size and Maximum Sheets (Non-stapling)	11 × 17", 8 1/2 × 14", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, Folio, 8K: 250 sheets 11 × 8 1/2", 8 1/2 × 11", A4, A4R, B5, 16K: 500 sheets
Maximum Sheets for Stapling (Paper weight 80 g/m ² or less)	11 × 17", 8 1/2 × 14", 8 1/2 × 13" (Oficio II), A3, B4, Folio, 8K: 20 sheets 11 × 8 1/2", 8 1/2 × 11", A4, A4R, B5, 16K: 30 sheets
Dimensions (W × D × H)	12 13/16 × 17 11/16 × 6 1/2" 325 × 450 × 165 mm
Weight	17.6 lb or less/8 kg or less

Job Separator (option)

Item	Description
Number of Trays	1 tray
Paper Weight	45 to 160 g/m ²
Media Type	Plain, Rough, Vellum, Recycled, Bond, Color (Colour), Thick paper
Paper Size	11 × 17", 8 1/2 × 14", 11 × 8 1/2", 8 1/2 × 11", 7 1/4 × 10 1/2", 5 1/2 × 8 1/2", 8 1/2 × 13" (Oficio II), 8 1/2 × 13 1/2", A3, B4, A4, A4R, B5, B5R, A5R
Maximum Sheets	100 sheets (80 g/m ²) Bond, Thick paper: 20 sheets
Device Dimensions (W × D × H)	21 7/16 × 17 11/16 × 2 3/4" 545 × 450 × 70 mm
Weight	Approx. 3.3 lb/Approx. 1.5 kg

Environmental Specifications

Item		Description	
		25 cpm model	30 cpm model
Noise emission	During standby	47 dB (A) (L wad)	
	During copying	64.7 dB (A) (L wad)	66.5 dB (A) (L wad)
Power consumption	During copying (with full optional equipment)	1360 wh	
	During standby	160 W or less	
	During the Low Power mode	60 W or less	
	Recovery time from Low-Power mode	10 seconds	
	Recovery time from Sleep mode	15 seconds	
	During the Off mode (default settings)	3.2 W or less	
	During the Sleep mode (with full optional equipment)	13 W or less	
	Time to Low-Power mode (factory default setting)	1 minute	
	Time to Sleep mode (factory default setting)	9 minutes	
	During the Plugged-In mode	0.1 wh or less	
Power consumption in the Plugged-In mode can only be terminated by removing the power plug from the outlet.			
Duplexing		Standard	
Paper supply capability		Paper with 100 % recycled paper content may be used	



Note Contact your Dealer or Service Representative for recommended media types.

Index

A

- Adjusting density 3-5
- Auto Low-Power mode 3-17
- Auto Sleep mode 3-17

B

- Built-in finisher 4-3
 - Adding staples 4-4
 - Clearing staple jams 4-5
 - Paper jams 6-16
 - Specifications 7-9

C

- Carrying handles 1-4
- Cassette
 - Cassette 1 1-2
 - Cassette 2 1-2
 - Loading paper 2-2
 - Paper jams 6-9, 6-10, 6-11, 6-13
 - Specifying the media type 2-8
 - Specifying the paper size 2-7
- Caution/Warning labels iii
- Cleaner rod 5-8
- Cleaning
 - Main charger 5-5
 - Original cover, document processor and platen 5-2
 - Separator 5-3
 - Slit glass 5-2
 - Transfer roller 5-4
- Cleaning brush 1-3
- Clip holder 1-2
- Collate mode 3-15
- Conventions in this guide xvii
- Copy
 - Adjusting density 3-5
 - Basic copying procedures 3-2
 - Collate mode 3-15
 - Duplex mode 3-10
 - Interrupt copy 3-16
 - Selecting image quality 3-4
 - Split mode 3-13
 - Zoom 3-6
- Copying speed 7-6

D

- Document finisher 4-6
 - Paper jams 6-19
 - Specifications 7-9
- Document processor 4-3
 - Cleaning 5-2
 - Loading originals 2-16
 - Paper jams 6-18

- Part names 2-15
- Specifications 7-8
- Duplex mode 3-10
- Duplex unit
 - Paper jams 6-13

E

- Energy saving control function xi
- Energy Star program xi
- Entering characters on touch panel 7-2
- Environmental specifications 7-10
- Error messages 6-4

F

- Fax kit 4-8
- Front cover 1-4

G

- Green knob 1-3
- Grid cleaner 5-8
- Grounding the machine v

I

- Installation precautions iv
- Interrupt copy 3-16

J

- Job separator 4-6
 - Paper jams 6-19
 - Specifications 7-10

K

- Key counter 4-7
 - How to insert 4-7

L

- Language 2-18
- Left cover 1 1-2
 - Paper jams 6-12
- Left cover 1 lever 1-2
- Left cover 2 1-2
 - Paper jams 6-12
- Legal information and conventions
 - About this Operation Guide xvii
 - Automatic 2-sided copy function xi
 - Conventions in this guide xvii
 - Energy saving control function xi

Energy Star program	xi
Legal information	x
Originals and paper sizes	xviii
Recycled paper	xi
Regarding tradenames	x
Low-Power mode	xi, 3-17

M

Main charger	1-3
Cleaning	5-5
Main power switch	1-4
Maintenance	5-1
MP tray	1-4
Loading paper	2-4
Paper jams	6-12
Specifying the media type	2-13
Specifying the paper size	2-9

N

Names	
Body	1-2
Operation panel	1-5
Touch panel	1-6

O

Operation panel	1-2, 1-5
Option	
Built-in finisher	4-3
Document finisher	4-6
Document processor	4-3
Fax kit	4-8
Job separator	4-6
Key counter	4-7
Overview of optional equipment	4-2
Paper feeder	4-3
Printer kit	4-7
Original	
Loading in the document processor	2-15
Loading on the platen	2-14
Size	xviii
Original cover	1-2
Cleaning	5-2
Original placement indicator	2-15
Original size indicator plates	1-2
Output stopper	1-4
Output tray	3-3

P

Paper	7-5
Loading paper in the MP tray	2-4
Loading paper into cassette 1, 2	2-2
Loading paper into paper feeder	2-2
Note	2-2
Size	xviii
Specifying the media type	2-8, 2-13
Specifying the paper size	2-7, 2-9
Paper feeder	4-3

Loading paper	2-2
Paper jams	6-11
Specifications	7-8
Specifying the media type	2-8
Specifying the paper size	2-7
Paper feed unit	1-3
Paper jams	6-14
Paper feed unit cover	1-3
Paper jams	6-8
Built-in finisher	6-16
Cassette 1	6-9, 6-13
Cassette 2	6-10
Cassette 3 and 4	6-11
Document finisher	6-19
Document processor	6-18
Duplex unit	6-13
Jam location indicators	6-8
Job separator	6-19
Left covers 1, 2 and 3	6-12
MP tray	6-12
Paper feeder	6-11
Paper feed unit	6-14
Paper jam precautions	6-9
Paper length guide	1-4
Paper width adjusting tab	1-4
Paper width guide	1-4
Platen	1-2
Cleaning	5-2
Loading originals	2-14
Power supply	v
Precautions for use	vi
Preparation	2-1
Printer kit	4-7

S

Safety conventions	i
Selecting image quality	3-4
Separator	
Cleaning	5-3
Sleep mode	xi, 3-17
Slit glass	
Cleaning	5-2
Solving malfunctions	6-2
Specifications	
Body	7-6
Built-in finisher	7-9
Document finisher	7-9
Document processor	7-8
Environmental specifications	7-10
Job separator	7-10
Paper feeder	7-8
Split mode	3-13
Symbols	i

T

Toner container	1-3
Replacement	5-7
Toner container stopper	1-3
Top tray	1-4
Touch panel	1-6

Transfer roller	
Cleaning	5-4

W

Warm-up	3-2
Waste toner box	1-3
Replacement	5-7

Z

Zoom	
Auto zoom	3-6
Manual zoom	3-6, 3-7
Preset zoom	3-6, 3-7
XY zoom	3-6, 3-8

We recommend the use of our own brand supplies.

We will not be liable for any damage caused by the use of third party supplies in this machine.



PASSIONATE PEOPLE. FROM ALL OVER THE WORLD.



KYOCERA MITA EUROPE B.V.



EUROPEAN HEADQUARTERS
Hoeksteen 40
NL-2132 MS Hoofddorp
The Netherlands
Phone: +31 20 654 0000
Fax: +31 20 653 1256
www.kyoceramita-europe.com



KYOCERA MITA Europe B.V.,
Amsterdam (NL)
Zweigniederlassung Zürich
Hohlstrasse 614
CH-8048 Zürich
Phone: +41 1 908 49 49
Fax: +41 1 908 49 50
www.kyoceramita.ch

KYOCERA MITA SALES COMPANIES IN EMEA



KYOCERA MITA INTERNATIONAL SALES
(Europe, Middle East & North Africa)
Hoeksteen 40
NL-2132 MS Hoofddorp
The Netherlands
Phone: +31 20 654 0000
Fax: +31 20 653 1256
www.kyoceramita-europe.com



AUSTRIA
KYOCERA MITA GmbH Austria
Eduard Kittenberger Gasse 95
A-1230 Wien
Phone: +43 1 86 338 0
Fax: +43 1 86 338 400
www.kyoceramita.at



BELGIUM
S.A. KYOCERA MITA Belgium N.V.
Sint-Martinusweg 199-201
BE-1930 Zaventem
Phone: +32 2 720 9270
Fax: +32 2 720 8748
www.kyoceramita.be



DENMARK
KYOCERA MITA Denmark A/S
Ejby Industrivej 1
DK-2600 Glostrup
Phone: +45 70 22 3880
Fax: +45 45 76 3850
www.kyoceramita.dk



FINLAND
KYOCERA MITA Finland OY
Kirvesmiehenkatu 4
FI-00880 Helsinki
Phone: +358 9 4780 5200
Fax: +358 9 4780 5390
www.kyoceramita.fi



FRANCE
KYOCERA MITA France S.A.
Parc les Algorithmes Saint Aubin
FR-91194 Gif-Sur-Yvette
Phone: +33 1 6985 2600
Fax: +33 1 6985 3409
www.kyoceramita.fr



GERMANY
KYOCERA MITA Deutschland GmbH
Otto-Hahn-Str. 12
D-40670 Meerbusch / Germany
Phone: +49 2159 918 0
Fax: +49 2159 918 100
www.kyoceramita.de



ITALY
KYOCERA MITA Italia S.P.A.
Via Verdi, 89/91
I-20063 Cernusco sul Naviglio (MI)
Phone: +39 02 921 791
Fax: +39 02 921 796 00
www.kyoceramita.it



THE NETHERLANDS
KYOCERA MITA Nederland B.V.
Beechavenue 25
NL-1119 RA Schiphol-Rijk
Phone: +31 20 587 7200
Fax: +31 20 587 7260
www.kyoceramita.nl



NORWAY
KYOCERA MITA Norge
Olaf Helsetsvai 6
NO-0694 Oslo
Phone: +47 22 627 300
Fax: +47 22 627 200
www.kyoceramitanorge.no



PORTUGAL
KYOCERA MITA Portugal LDA.
Rua do Centro Cultural 41
PT-1700-106 Lisboa
Phone: +351 21 843 6780
Fax: +351 21 849 3312
www.kyoceramita.pt



SOUTH AFRICA
KYOCERA MITA South Africa (Pty) Ltd.
527 Kyalami Boulevard, Kyalami
Business Park · ZA-1685 Midrand
Phone: +27 11 540 2600
Fax: +27 11 466 3050
www.kyoceramita.co.za



SPAIN
KYOCERA MITA España S.A.
Avda. Manacor No. 2
ES-28290 Las Matas (Madrid)
Phone: +34 91 631 83 92
Fax: +34 91 631 82 19
www.kyoceramita.es



SWEDEN
KYOCERA MITA Svenska AB
Esbogatan 16B
SE-164 75 Kista
Phone: +46 8 546 550 00
Fax: +46 8 546 550 10
www.kyoceramita.se



UNITED KINGDOM
KYOCERA MITA UK Ltd.
8 Beacontree Plaza, Gillette Way,
Reading, Berkshire RG2 OBS
Phone: +44 1189 311 500
Fax: +44 1189 311 108
www.kyoceramita.co.uk

KYOCERA MITA WORLDWIDE



JAPAN
KYOCERA MITA Corporation
(Head Office)
2-28, 1-Chome, Tamatsukuri, Chuo-ku,
Osaka 540-8585, Japan
Phone: +81 6 6764 3555
Fax: +81 6 6764 3980
www.kyoceramita.com



USA
KYOCERA MITA America, INC.
(Head office)
225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008, USA
Phone: +1 973 808 8444
Fax: +1 973 882 6000
www.kyoceramita.com/us

KYOCERA CORPORATION



JAPAN
KYOCERA CORPORATION
(Corporate Headquarters)
6 Takeda Tobadono-cho, Fushimi-ku
Kyoto 612-8501, Japan
Phone: +81 75 604 3500
Fax: +81 75 604 3501
www.kyocera.co.jp

 **KYOCERA**



870CKGB20008

