# **PYLE®**

PyleAudio.com

718.535.1800 718.236.2400 (fax) 1600 63rd Street, Brooklyn NY 11204



# PWMA-370 OPERATING INSTRUCTIONS

300 WATT DUAL CHANNEL WIRELESS RECHARGEABLE PORTABLE PA SYSTEM WITH HANDHELD MIC AND LAVALIER/HEADSET MIC



# GENERAL DESCRIPTIONS

- 1.1t is consist of one set of of wireless and two wired microphone input circuits, both of them has separated volume control
- The standard accessories are VHF high band wireless transmitter and receiver.
- 3 It is equipped with built-in 7AH/12V rechargeable battery which can be charge 6 hours continuously, also DC power can be used directly
- 4.One guitar input function, one audio input and one iPod dock are supplied.
- 5. Treble and bass control are supplied.
- 6. Echo control is supplied.
- 7. With voltage selector switch for selecting a suitable one according to different countries.
- 8.8 " full range driver

# REMARKS

- 1. Correct power must be used, don't use any other power except the specified one.
- 2.Don't drag the power cable when pull out the plugs, just hold the plug to pull it out from socket.
- 3. Don't open chassis: it is very dangerous either open the chassis or put your hand inside the chassis, don't do it. If the device is not under normal working, pull out the plug at once and contact your retailer or nearest distributor.
- 4. Don't take volatile solvent such as toluene, alcohol, gasoline to clean the surface
- Please don't put it in a unventilated environment or at direct sunlight in symmer.
- 6 Avoid moisture or rain

#### PARAMETER -

#### AMPLIFIER

Power supply: TAC 200 V/SOHz TAC (10 V/60 Hz

including a built-in 12V7AII rechargeable buttery

Frequency response: 35Hz-29KHz

SFL. 94dB (1W/M)

T.H.D. < 1%

Input wired and \$58,413 V 600

Speaker: 8 full rauge driver

RMS Power 300W

Input jack.  $2 \times 1/4$  " wired mie jack,  $1 \times 1/4$  " GUITAR IN jack

1 × Andro input jack

≥60dB

#### RECEIVER

Carrier frequency range. 170-216 MIIz

RF sensitivity ≤-101dB

Operation range: 100ft

## TRANSMITTER

Image rejection

Carrier frequency rouge. 170-216 MHz

RF power output ≤10mW

Modulation level: 15K

Operation temperature -18°C-60°C

Power supply

Unit Hattery Life: Approx.3 Hours

Mic Battery Life Approx 45 Hours

۱V

#### INSTRUCTIONS

- Push the Power Switch of handheld microphone(bodypack transmitter) to ON position, your sound can be heard from amplifier when speaking. Adjust the Volume Control/Echo Control/Treble Control/Bass Control to proper position to avoid feedback.
- If the Power Indicator of microphone (bodypack transmitter) comes on at all times, it indicates the battery lack of power, please replace the battery.
- ® Connect relative cable of guitar with Guitar Input Jack on this system, you can play wonderful music.
- (9) IPOD Dock: Connect IPOD to IPOD dock, you can press "Play", "Pause", "Pre" and "Next" keys to control it. And unit will charge IPOD automatically once it is connected to the dock till IPOD battery is full so that no need to press "Charge" key to get IPOD charged. During charging, you can play IPOD at the same time.

# 3. Wired Microphone:

- Two way wired microphone input jacks are supplied for two people us simultaneously.
- 2 Plug Wired microphones into the jacks separately.
- Adjust Echo Control to get better sound.
- Adjust the volume of each microphone to make sure the sound is satisfactory.

#### SYSTEM FUNCTION FIGURE

1.Wireless Mic/MIC1 Volume 10.Bass Control

Control 11.Audio Input Jack

2 MIC2 Volume Control 12 Guitar Input Jack

3.Guitar Volume Control 13.MIC2 Input Jack

4. Audio Volume Control 14. Vent Hole


5. AUDIO.OUT JACK 15. Fixed Stand For The Uint

6.Ipod/MP3 Volume Control 16.Vent Hole

7.Echo Control 17.Woofer Speaker

8.Treble Control 18.MIC1 Input Jack

9.Metal Corner 19.Power Switch

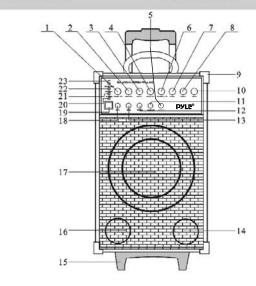

#### STEM FUNCTION FIGURE

20. Power Indicator

30.AC Fuse

21.Low Voltage Indicator

31 Power Socket

22 Charge Indicator

32. Warning

23.RF Indicator For

33 Rechargeable Battery Cover

Wireless Mie

34.5A11/12V Rechargeable Battery

24 Trailer Handle

35 Truckle Of Trailer

25 Heating Pane


36. Livelier Mic.

26.Handle

37. Headset Mic 27 Voltage Selector Switch 38. Handheld Mic

28 Battery Fuse

29.External DC Input Jack

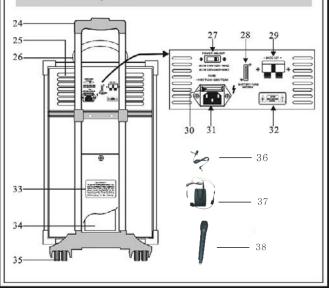

#### NSTRUCTIONS

### 1. Confirm the power

- (1) AC Power: Before operation, please confirm the voltage is same as the specified one marked on the label. If not, the unit will be damaged.
- 2 Built-in Rechargeable Battery: You needn't plug-in the AC power when the voltage for rechargeable battery is enough but use the battery directly.
- When the Low Voltage Indicator comes vellow, it indicates the battery voltage is not enough, please charge it in time.
- 4 When the Low Voltage Indicator comes out, it indicates the voltage is standard now.
- (5) If the unit is not used for a long time, please charge the rechargeable battery every 2 months, 8-10 hours for each time.

# 2. Operation Instructions:

- (1) Plug the power cable into the socket and connect it with this amplifier system.
- 2 Switch on the amplifier, the Power Indicator comes red.
- ® During charging, RECHARGE indicator comes red, when the indicator flashing, that means battery is amost full while it is ready all indicators will off.
- 4 During charging, you can play music at the same time, then RECHARGE indicator will flashing with the current comsuption indicating the speed of charge. Charge time is in direct proportion to the volume of music. When the battery is full. RECHARGE indicator will stop flashing and then off.
- Put two AA 1.5V battery into handheld microphone (bodypack) transmitter), push the Power Switch to middle, the Power Indicator will flash once. RF Indicator comes on green, the speakers are quiet.