



ECO7050 Guide

Once you have fully charged your eco7050 Handset, follow the instructions below to register this handset for use with your eco70/700:

REGISTERING YOUR HANDSET

Registration allows communication between your base unit and handset(s). If your handset is not registered, you will not be able to make a call or use some of the functions and features on the phone.

1. Charge the batteries (for 14 hours).
2. Register the handset (to the base unit).

the operation is different in eco70 and eco700.

In eco70, we need to set the base unit in registration mode by resetting the base power.

In eco700, we can set the base in registration mode by pressing and holding the base [●))] for 10s.

During standby mode,

1. Press and hold the [?▶] key for 3 seconds until both the [📶] and [📞] icons flash, then press and hold the [* ✕] key for 3 seconds. The following will appear on the display.



2. Press 1 and the handset begins to search for the base.
3. Enter the base pin code (0000). If the pin is wrong, the handset will restart searching for the base.
4. When the handset is registered, it will show "HS" followed by the handset number.

Registration shall be completed within 30 seconds. If registration is successful, the signal icon 📶 displays steadily. If registration failed, repeat the above procedure.



NOTE: Your base can register up to 5 handsets. After registering 5 handsets, your base unit registration memory is full. If you attempt to register an additional handset, registration will not be successful.

**FOR ALL OTHER INSTRUCTIONS, PLEASE REFER TO YOUR
eco70/700 USER GUIDE.**