 
Cuisinart PULP CONTROL CITRUS JUICER

QUICK REFERENCE GUIDE







Low Pulp



Medium Pulp

High Pulc

Place center of horizontally sliced fruit on the center of the juicing reamer. Apply firm and steady pressure to the fruit to start juicer.



For even, effective juicing, decrease and reapply pressure to stop and reverse direction of the juicing reamer. Squeeze fruit while juicing to extract additional juice. Discard rind when iuice has been fully extracted.



When juice flow slows, release cover to stop Fast-Spin. Close drip spout. Rotate reamer to the left to release. Remove sieve and reamer. rinse and replace. Repeat steps until desired amount of juice is reached.

Repeat with additional fruit until sieve appears full. Place cover on unit and press down to activate Fast-Spin feature and draw out remaining juice.

Cleaning Your Citrus Juicer Always unplug your Cuisinart™ Pulp Control Citrus Juicer from the electrical outlet before cleaning. Rinse juice container, reamer/sieve assembly and cover before placing on the top rack of the dishwasher. Wipe stainless steel housing with a damp microfiber cloth. Never immerse motor housing in liquid to clean. Push unused cord back into the base. Replace clean juice container, reamer and cover on unit to store.

IMPORTANT!

Do not throw away. Read before operating your new Citrus Juicer. Keep for further reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

PG-27672

For more helpful hints see Instruction Booklet