



Navigation System
QUICK-START GUIDE

Basic Operation

Power On / Off:

Press the **Power** button for 3 seconds to turn the radio off. Press again to turn on.



Select an Audio Source:

Repeatedly press the **Power/Source** button to cycle through:
STANDBY → TUNER → CD → AUX →
STANDBY ...

Adjust Volume:

Turn the volume knob

Listening to the Radio

Select Band

Push up for FM, down for AM

Station Seek:

Press right to seek up, left to seek down



Select Preset:

Briefly press to select existing preset.
Press and hold to establish new preset.

Playing a CD

Load the Disc

Eject Disc:

Press button to right side of slot



Pause/Play:

Briefly press to Pause or play the music

Change Track:

Push knob right or left to change to next or previous track.

Navigation

Touch Screen



Directly select items on the screen by touching them.



Finding Your Destination

1. From the Menu page, touch **Where to**.



2. Select a category, and a sub-category, if necessary. Touch  and  to see more choices.
3. Select a destination.
4. Touch **Go**.
5. Enjoy the route!

Navigation Views

