



Thinking of you

 **Electrolux**

User Manual

Tumble Dryer

EDC 77150W



We were thinking of you
when we made this product

Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

Contents

Safety information.....	5
Product description	7
Control panel.....	7
Use.....	8
Drying hints	12
Drying programme	14-15
Programme information	16
Care and cleaning	17
Something not working.....	18
Technical data	23
Consumption values	24
Installation	25
Environment concerns.....	27
Guarantee conditions	28
Customer service centres	29

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips

Environmental information

Safety Information



In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Clean fluff filters after using tumble dryer. To prevent fire risks, do not use the appliance if the fluff filters are damaged.
- As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic

machine, even if the dry weight of the item is within the limit advised.

- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
Items containing rubber foam or materials similar to rubber foam.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance,

6 electrolux **safety information**

check that it is not damaged. If in doubt, do not use it and contact the Service Centre.

- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.


- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.

Child safety


- This machine is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.
- When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing

Product description

- 1** Control panel
- 2** Fluff filters
- 3** Rating Plate
- 4** Condenser unit
- 5** Water reservoir
- 6** Adjustable feet

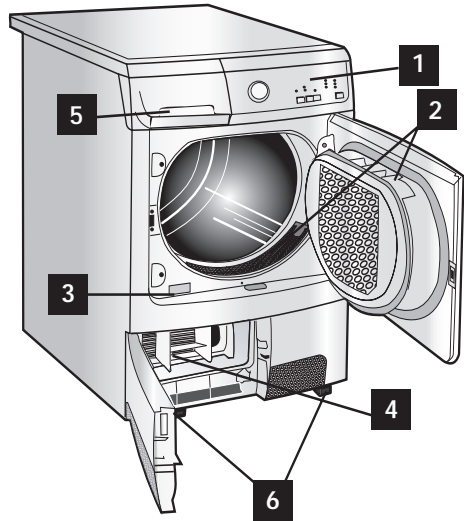

Control panel

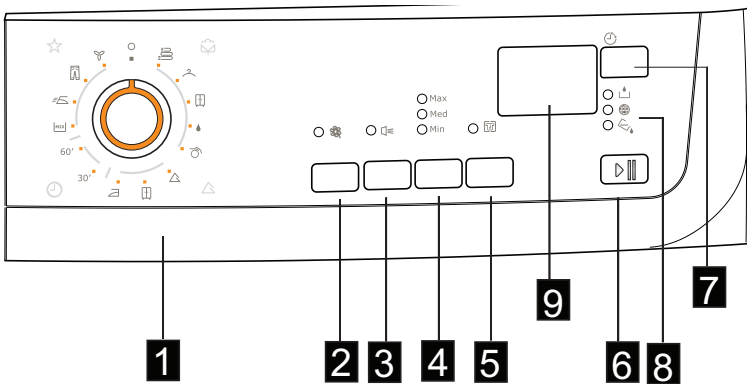

- | | |
|----------------------------------|-----------------------------|
| 1 Programme selector dial | 6 Start/Pause button |
| 2 Delicate button | 7 Delay button |
| 3 Dryness button | 8 Indicator lights |
| 4 Buzzer button | 9 Display |
| 5 Long Anti Crease button | |

Use

First Use



- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Daily Use


Load the laundry



Connect the appliance.
Open the door (see picture).




Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. Please check the laundry does not get caught between the door and filter.

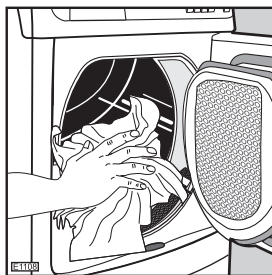

Select the required programme

Turn the programme selector dial to the required programme.
The light Start/Pause starts to flash.

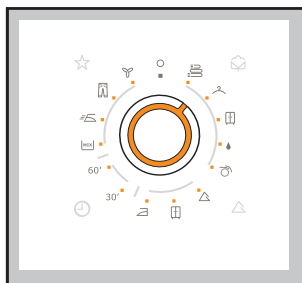

The selector dial is divided into following sections:

- Cottons ☼
- Synthetics ▲
- Time ⌚
- Special ☆

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry. Simply select the programme according to the type of laundry and degree of drying required.

The selector dial can be turned either clockwise or anticlockwise. The lights Drying, Cooling and End/Anticrease come on.

At the end of the programme the selector dial must be turned to position O, to switch the machine off.

Attention!

If you turn the programme selector dial to another programme when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme.

Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

When these buttons are pressed, the corresponding pilot lights come on.

When they are pressed again, the pilot lights go out.

Select Delicate

Pressing this button allows drying to be performed at a lower temperature, for delicate items.




The corresponding pilot light comes on. This option can also be used for time controlled drying. DELICATE is only suitable for use with loads of up to 3kg!

Select the Buzzer

When the drying cycle has finished, an intermittent audible signal will sound.



By depressing button  the acoustic signal is switched off in the following cases:

- when selecting the programme
- when depressing the buttons
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme.

The corresponding light comes on

Select the Dryness

Press the Dryness button repeatedly, to select the desired option. The relevant light will light up. Laundry becomes dryer from MIN to MAX.



When the programme has finished the pilot lights End is on.

 
Select the Long Anti Crease button



If the Long Anti Crease programme has been selected, programme duration

time of 10 minutes up to 180 minutes can be set by intervals of 10 minutes. If no programme duration time has been selected, a programme duration time of 30 min. is automatically adjusted.

Select the Start/Pause



Press this button to start the dryer after having selected the programme and the options.

The relevant light will stop flashing. If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash.

The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (light Cooling is on). You may remove the laundry after this phase.

The display will show the symbol End/Anticrease, and ☉ and ☹ illuminate and the buzzer sounds

If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted. This button must be depressed also after a power failure and after having re-inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of light ☹.

In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

Select the Delay Start



With the DELAY button, you can delay the start of a programme by between 30 minutes (30' and a maximum of 20 hours (20H).


1. Select the programme
2. Press the DELAY button as many times as necessary until the required start delay appears on the multi display, e.g. 12H if the programme is to be started in 12 hours.

3 If 20H is displayed and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.

3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 12H, 11H, 10H, ... 30' etc).

If you wish to add some laundry while the machine is performing the countdown, after having done so and having closed the door, press START/PAUSE again, in order to allow the machine to complete the remaining countdown time.

Display

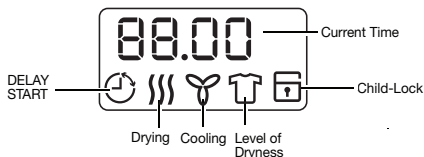

The display shows the following information:

- duration of selected programme
- delayed start

- end of programme
- incorrect option selection
- alarm code

Interrupting a programme

Depress the **“start pause”** button to interrupt a programme which is running, the corresponding light starts to flash. Depress the button again to restart the programme.



Cancelling a programme

Turn the selector dial to **“O”** to cancel a programme which is running. Now you can select a new programme.

At the end of the programme

If the laundry is not removed at the end of the cycle, the dryer performs an **anti-creasing** phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

Lights  and  remain lit and the buzzer sounds for 2 minutes.

Turn the programme selector dial to **“O”** to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty.

If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

Turn the programme selector dial to **“O”**; all the lights go out. The appliance is switched off.



Remove the laundry.

If you open and then close the door before turning the selector dial to “O” all the lights corresponding to the phases making up the performed programme come on.

After each use

- Clean the filters.
- Empty the water reservoir.

Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position Cooling  and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to **“Off”** and then to Cooling  and depress Start button.

Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to **“O”**. Select the new programme and press the Start button .

The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the BUZZER button) is pressed, Err appears in the multidisplay. The drying programme is not however affected by this (laundry protection).

Drying hints



Before loading the laundry

Never tumble dry the following:
Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before

drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).

- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

Cotton, linen: drum full but not too tightly packed;

Synthetics: drum no more than half full;

Delicate fabrics and woollens: drum no more than one third full.








 

 



 


Try to load to the maximum capacity of the machine as small loads are uneconomical.

Laundry weights




The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

Drying programmes


Programme	Type of laundry	Options	Description of programme
 Cotton  Extra	7 kg	Dryness Delicate Buzzer	Drying thick or multi-layered textiles, e.g. terry towelling items
 Cotton  Strong	7 kg	Dryness Delicate Buzzer	Drying thick textiles, e.g. terry towelling items, towels.
 Cotton  Cupboard	7 kg	Dryness Delicate Buzzer	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.
 Cotton  Stiro Damp	7 kg	Dryness Delicate Buzzer	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.
 Synthetics  Extra	3 kg	Dryness Delicate Buzzer	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.
 Synthetics  Cupboard	3 kg	Dryness Delicate Buzzer	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, underwear.
 Synthetics  Iron	3 kg	Dryness Delicate Buzzer	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.
 Synthetics  Machine iron	3 kg	Dryness Delicate Buzzer	Special programme for cotton and easy care, which can drying together in the same time.
 Time 30 60	1 kg	Delicate Buzzer	For drying individual items of laundry or for small volumes of less than 1kg.

Drying programmes

Programme	Type of laundry	Options	Description of programme
Special  Easy	1 kg	Dryness Delicate Buzzer	<p>Special programme with anti-crease mechanism for easy care textiles such as shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.)</p> <p>Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.</p>
Speciall Mix	3 kg	Dryness Delicate Buzzer	<p>Special programme for cotton and easy care, which can drying together in the same time.</p>
Special  Jeans	7 kg	Dryness Delicate Buzzer	<p>Special programme for leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the cuffs and seams).</p>
Special  Cooling		Buzzer	<p>Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)</p>

Programme information



Objective	Implementation
<p>Permanently program in the audible signal which reminds you that the programme is complete.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the BUZZER button and hold down for approx. 5 seconds. <p>A brief signal sounds several times. The Buzzer display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.</p>
<p>Adjust detection of degree of drying: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the START and the DRYNESS buttons at the same time and hold down for approx. 5 seconds. <p>The current setting is displayed on the programme progress display:</p> <ul style="list-style-type: none"> – C0: Setting for drier laundry – C1: Standard setting – C2: Setting for damper laundry <ol style="list-style-type: none"> 3. Press the START/PAUSE button until the setting required appears on the programme progress display. 4. Turn the programme selector to "O". <p>The setting is permanently programmed.</p>
<p>If the EMPTY WATER display is to remain permanently deactivated when using an external condensate drain.</p>	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the Dryness and DELICATE buttons at the same time and hold down for approx. 5 seconds. <p>The EMPTY WATER display flashes briefly. The EMPTY WATER display is permanently deactivated. Settings may be cancelled as under 1 and 2, but the EMPTY WATER.</p>
<p>Child Lock</p>	<p>The child lock can be activated or deactivated by pressing the buttons TIME and DRYNESS at the same time:</p> <ul style="list-style-type: none"> – before starting a program: the appliance can not be used – after starting a program: the running drying cycle can not be changed. <p>If the child lock is activated, the display shows the symbol </p> <p>At the end of a drying cycle the child lock will not be deactivated automatically.</p> <p>If a new program should be selected, first the child lock must be deactivated.</p>
<p>O = Cancelling/OFF</p>	<p>To reset a programme and to switch off the machine turn the selector dial to O. Now can a new programme be selected.</p>

Care and cleaning



You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning

Use only soap and water and then dry thoroughly.

Important: do not use methylated spirit, diluents or similar products..

Cleaning the door


Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.




Cleaning the filters


Your dryer will only function well if the filters are clean.

The filters collect all the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth.

The light  is on to remind you this operation.

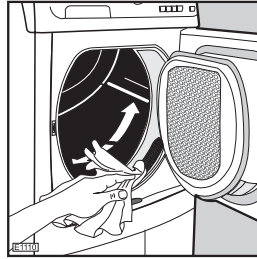

The filter in the inner door must be removed for cleaning.

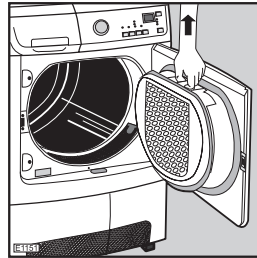

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer.


All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

After a while, a whitish patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).






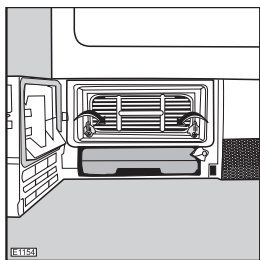
Do not use the appliance without filters.

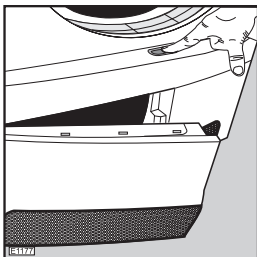



Cleaning the condenser unit

Clean the condenser when light  comes on.

The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture. During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion.



To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle.

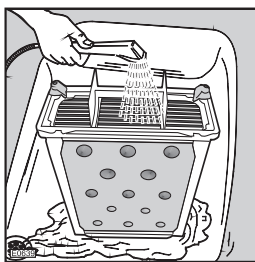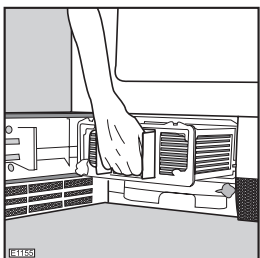

Clean it with a brush and rinse it under the shower if necessary.

Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.



Important! Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable.


Re-fit the condenser, turn the red stops upwards and close the door.



Do not use this appliance if the condenser has not been fitted.



Emptying the water reservoir

Water extracted from the laundry condenses inside the machine and is collected in a reservoir.


The reservoir must be emptied **after each drying cycle** to ensure efficient operation when the machine is next used. The pilot light  reminds you this operation.


Proceed as follows:

- Open the small door at the lower part of the cabinet
- Turn the yellow stop upwards
- Pull out the reservoir
- Open the small cover and let water flow down
- Close the small cover and re-insert correctly the reservoir
- Push it until it clicks and turn the yellow stop downwards to lock firmly it
- Close the small door and press the START/PAUSE button again to allow the programme to continue.

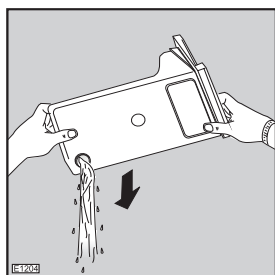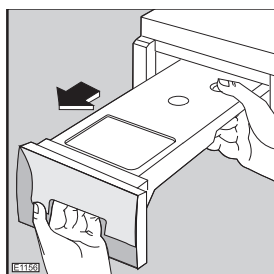

The reservoir must be re-inserted correctly.


If this is not done the pilot light  comes on during next drying and the programme stops, leaving the laundry damp. The buzzer will sound for 1 minute.

After emptying and inserting the reservoir the START-button  has to be depressed again to allow the programme to continue.

Handy tip: The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

Cleaning the air intake grille

Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance.

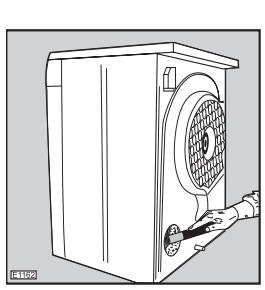

Cleaning the drum

When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.

This will eliminate the slight patina that has formed in the drum (due to residues of detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

Something not working

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red** Start/Pause pilot light flashes to indicate that the machine is not working.


Once the problem has been eliminated, press the **Start/Pause** button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible cause	Solution
Dryer does not work.	<ul style="list-style-type: none"> ● Mains plug is not plugged in or fuse is not working correctly. ● Loading door is open. ● Have you pressed the START/ PAUSE button? 	<ul style="list-style-type: none"> ● Plug in at mains socket. Check fuse in fuse box (domestic installation). ● Close loading door. ● Press the START/PAUSE button again.
Drying results unsatisfactory.	<ul style="list-style-type: none"> ● Wrong programme selected. ● Lint filter clogged. ● Heat exchanger clogged with lint. ● Incorrect volume of laundry. ● Ventilation slots in base area covered up. ● Residue on inside surface of drum or drum ribs. ● Conductance of water at installation site differs from standard setting of machine. 	<ul style="list-style-type: none"> ● Select a different programme the next time you dry (see "Overview of programmes" section). ● Clean lint filter. ● Clean heat exchanger. ● Observe recommended loading volumes. ● Uncover ventilation slots in base area. ● Clean inside surface of drum and drum ribs ● Re-programme standard setting for degree of drying (see 'Programming options' section).
Loading door does not close.	<ul style="list-style-type: none"> ● Fine strainer not in place and/or large mesh filter not locked in place. 	<ul style="list-style-type: none"> ● Install fine strainer and/or snap large mesh filter into place.

Malfunction	Possible cause	Solution
When pressing a button, the corresponding button flashes several times.	<ul style="list-style-type: none"> ● Washing protection. After the start of the programme, the option can no longer be set. 	<ul style="list-style-type: none"> ● Turn the programme knob to OFF. Set the programme again
Drum light does not work	<ul style="list-style-type: none"> ● Programme selector in OFF position. ● Defective light bulb 	<ul style="list-style-type: none"> ● Turn programme selector to LIGHT or to any programme ● Replace light bulb (see next section).
When a button is pressed, Err appears in the multi-display.	<ul style="list-style-type: none"> ● Washing protection. After the start of the programme, the option can no longer be set. 	<ul style="list-style-type: none"> ● Turn the programme knob to OFF. Set the programme again.
Programme inactive, Water reservoir full light illuminated.	<ul style="list-style-type: none"> ● Condensate tank is full. 	<ul style="list-style-type: none"> ● Empty condensate tank, then start programme with START/PAUSE button.
Drying cycle ends shortly after programme starts. END light illuminated.	<ul style="list-style-type: none"> ● Not enough washing loaded or washing loaded is too dry for selected programme. 	<ul style="list-style-type: none"> ● Select time programme or higher drying level (e.g. EXTRA DRY instead of STRONG).
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“)	<ul style="list-style-type: none"> ● Lint filter clogged. ● Heat exchanger clogged with lint. ● DELICATE button pressed and load volume too big. ● Load volume too big. ● Laundry insufficiently predrained. 	<ul style="list-style-type: none"> ● Clean lint filter ● Clean heat exchanger. ● DELICATE is only suitable for use with loads of up to 3 kg! ● Reduce load volume. ● Laundry must be adequately pre-drained.

22 electrolux **something not working**


If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

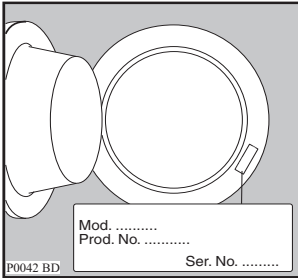

IMPORTANT: if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	58 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Depth with loading door open		109 cm
Maximum Load	Cotton	7 kg
	Synthetics	3 kg
Use	Domestic + 5°C à + 35°C	


 This appliance conforms with the following EU Directives:
 73/23/EEC dated 19.02.1973 Low Voltage Directive
 89/336/EEC dated 03.05.1989 EMC Directive inclusive of
 Amending
 Directive 92/31/EEC
 93/68/EEC dated 22.07.1993 CE Marking Directive

24 electrolux Consumption values

Consumption values			
Programme	Programme duration (in minutes)	Energy consumption (in kWh)	Revolutions per minute
Cottons Cupboard ¹⁾	140	4,5	1000
Cottons Iron ¹⁾	110	3,4	1000
Cottons Cupboard ¹⁾	125	3,9	1400
Synthetics Cupboard ²⁾	65	1,25	1200



- ¹⁾Max Cottons load: 7 kg
²⁾Max Synthetics load: 3 kg




The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Installation

Unpacking



All transit bolts and packing must be removed before using the appliance. Slide out the polythene bag with the polystyrene stuffing before using the appliance. Pull off adhesive strips from inside machine on top of drum.

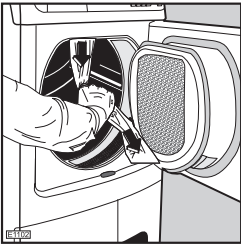

Should the appliance be moved, it must be transported vertically.



The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.

Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.

To keep vibration and noise to a

minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

The feet must never be removed. Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.



Important


The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front-loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

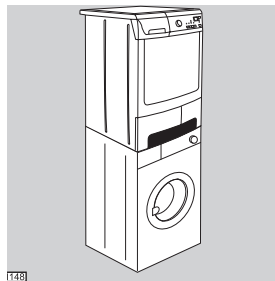

Door reversal



Reversing the door is not possible if after this operation the appliance result installed behind a door with a hinge on the opposite side to that of the appliance.

To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel.

Please contact the nearest Service Centre.

Electrical connection

This machine is designed to operate on a 220-230 V,

single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.2 kW), also taking into account any other appliances in use.

Connect the machine to an earthed socket, in accordance with current wiring regulations.



The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.




Important!

The power supply cable must be accessible after installing the machine.

Environment concerns

Packaging materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene


>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Ecological hints



To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

European guarantee

This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

Customer Service Centres

Should you need further assistance please contact your local Customer Service Centre

www.electrolux.com



Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	101 Oakley Road LUTON Beds LU4 9RJ
Hellas	+30 23 10 56 19 70	4, Limnou Str., 54627 Thessaloniki
Hrvatska	+38 51 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Longmile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lituania	+370 5 27 80 609	Verkiu 29, 09108 Vilnius, Lithuania
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2, 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q35 -2774-518 Paço de Arcos
Romania	+40 21 44 42 581	B-dul Timisoara 90, S6, Bucharest
Schweiz - Suisse - Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Tr aška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	+35 8 26 22 33 00	Konepajaranta 4, 28100 Pori
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim Istanbul
Россия	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ "Олимпик"



www.electrolux.com



125 985 630 -00-25052006