

*Sunbeam*

# Eco Jet

## Multipurpose Hand-held Steam Cleaner

Instruction Booklet  
SC4500

Please read these instructions carefully  
and retain for future reference.





# Contents

<b>Safety Precautions for your Eco Jet</b>	<b>2</b>
<b>Sunbeam's Safety Precautions</b>	<b>3</b>
<b>Features of your Eco Jet</b>	<b>4</b>
<b>Attachments and Accessories</b>	<b>6</b>
<b>Using your Eco Jet</b>	<b>8</b>
<b>Care and Cleaning</b>	<b>11</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Safety Precautions for your Eco Jet

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM ECO JET.

- The Sunbeam Eco Jet is intended for domestic household use only.
- Only use the attachments supplied with the Eco Jet. Others may cause hazards.
- Always unplug the Eco Jet from the power outlet when filling the tank with water.
- Do not add detergents, chemicals, aromatic products, or solutions of any kind when filling with water as this may damage the Eco Jet or make it unsafe for use.
- Do not exceed the maximum water level (300ml) as the unit may fail to operate effectively. The tank may overflow and boiling water may be emitted from the nozzle instead of steam.
- Do not tilt the Eco Jet more than 45 degrees from the horizontal or turn it upside down during or immediately after use. Boiling water could come out of the nozzle.
- Do not open the water tank cap during or immediately after use, as there is a danger of scalding. Follow the instructions to expel any remaining steam. Allow the unit to cool completely before opening.
- Should calcification occur, the white 'halo' effect can be removed using a decalcifying product or with a few drops of vinegar applied directly to the area.
- Do not direct the steam jet toward people or pets as this could be harmful.
- Do not direct steam toward equipment containing electrical components, such as the interior of ovens. It could damage the equipment and may cause serious injury.
- Always check the manufacturer's care and cleaning instructions before using the Eco Jet to clean fabrics, soft furnishings and other surfaces, where possible.
- Do not use the utility head on any surface without the cloth or squeegee fitted as it may damage or scratch the surface.
- Do not touch the surface of the Eco Jet or the attachments during or immediately after use as these parts will be hot. Allow to cool before handling.
- Allow the Eco Jet to cool completely before storing.

# Sunbeam's Safety Precautions

**Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

# Features of your Eco Jet

Water tank cap

Shoulder strap hook

Steam outlet

**1000W element**

The powerful 1000W boiler element guarantees a powerful, constant jet of high-pressure steam in excess of 100°C.


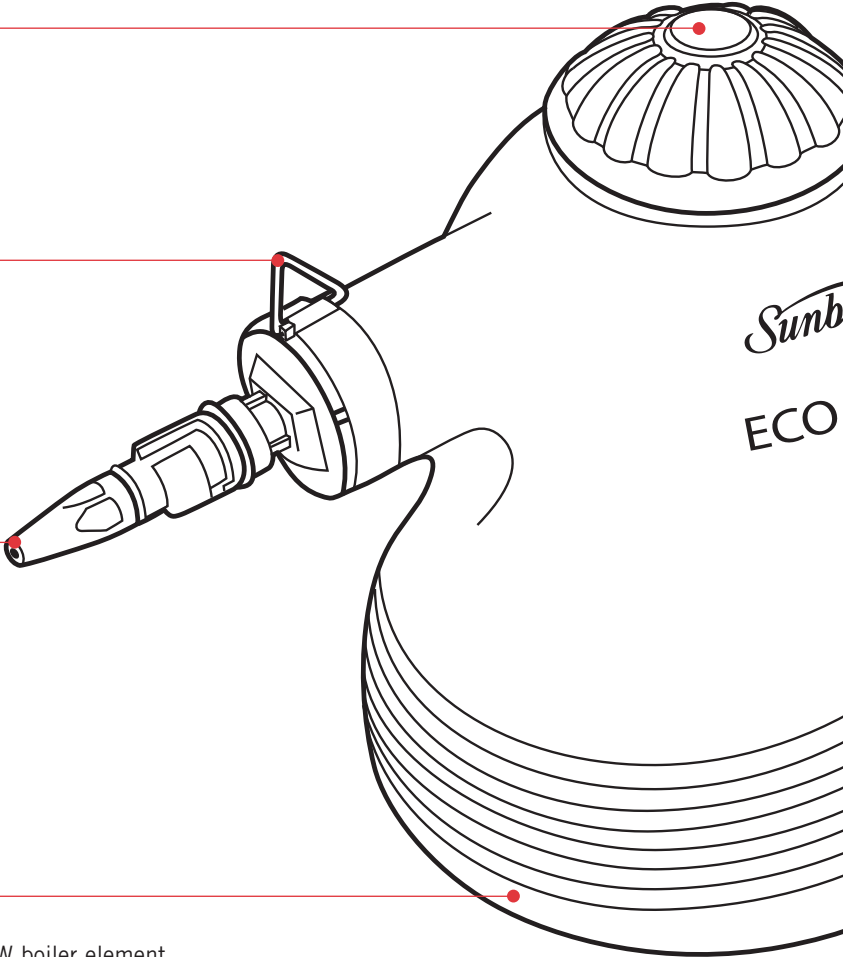


Figure 1

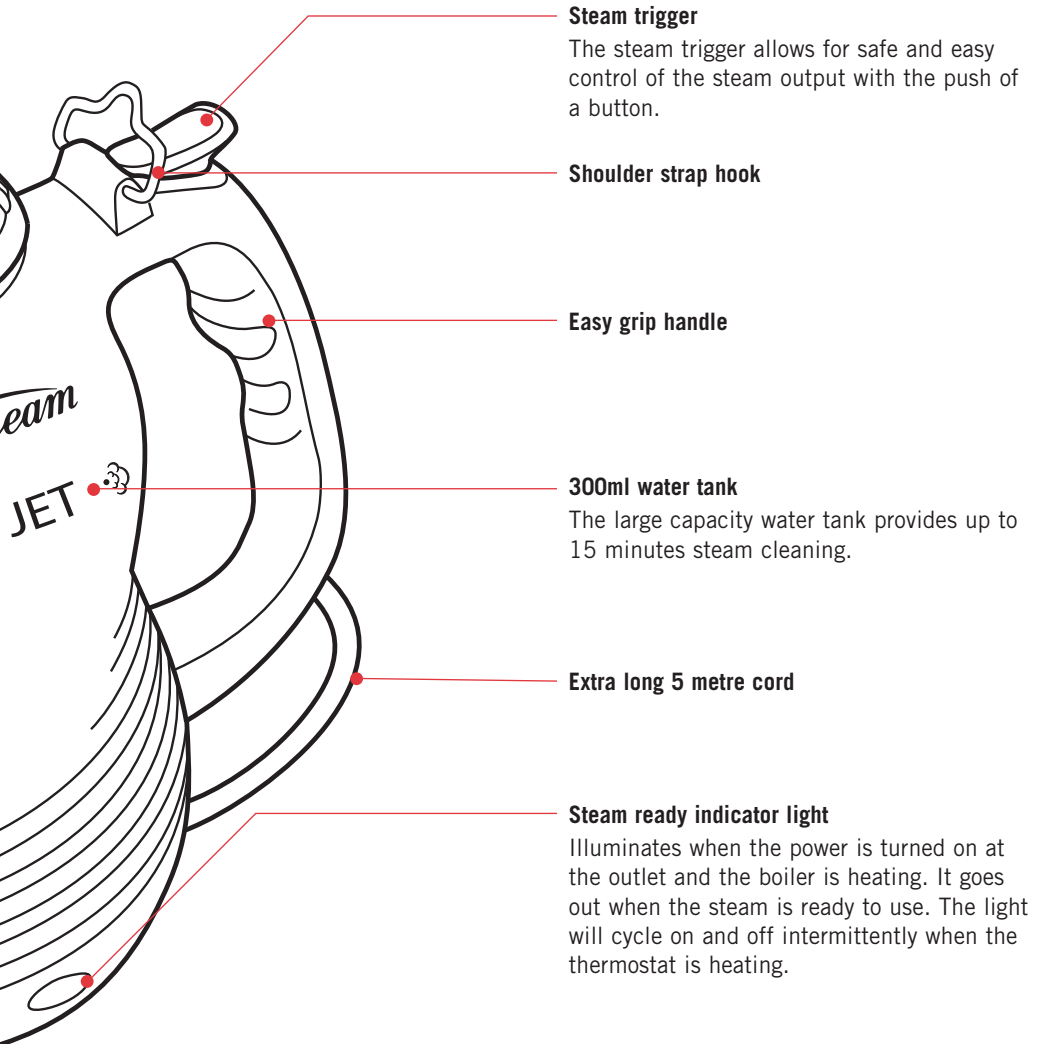

**Steam trigger**

The steam trigger allows for safe and easy control of the steam output with the push of a button.

**Shoulder strap hook**

**Easy grip handle**

**300ml water tank**

The large capacity water tank provides up to 15 minutes steam cleaning.

**Extra long 5 metre cord**


**Steam ready indicator light**

Illuminates when the power is turned on at the outlet and the boiler is heating. It goes out when the steam is ready to use. The light will cycle on and off intermittently when the thermostat is heating.

# Attachments and Accessories


## Standard nozzle

Suitable for most general cleaning tasks in and around your home. Can be used with the flexible extension nozzle.

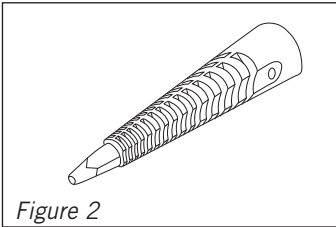


## Squeegee

The squeegee makes light work of cleaning windows, shower screens, mirrors and glass. Can be used with the flexible extension nozzle.

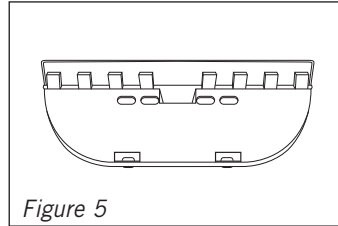


## Utility head

Used in conjunction with either the fabric cloth or the squeegee. Can be used with the flexible extension nozzle.

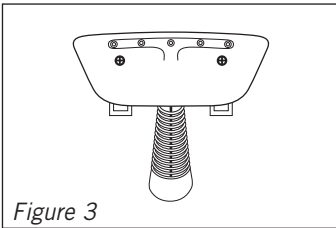


## Round brush

Ideal for spot cleaning rugs and carpet, cleaning car wheel rims and spot cleaning floor surfaces and tile grout. Can be used with the flexible extension nozzle.

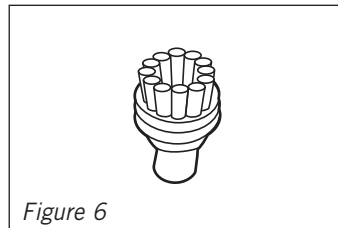


## Fabric cloth

The utility head with fabric cloth is ideal for maintaining upholstery and soft furnishings including sofas, curtains, blinds, rugs and mattress. Also removes creases from delicate clothing.

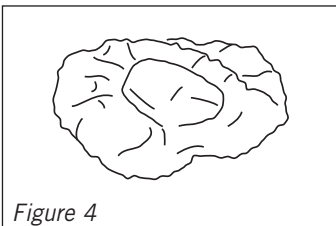

## Curved nozzle


The curved nozzle is perfect for cleaning those hard to reach areas such as taps, toilet rims, window sills and door runners. Can be used with the flexible extension nozzle.

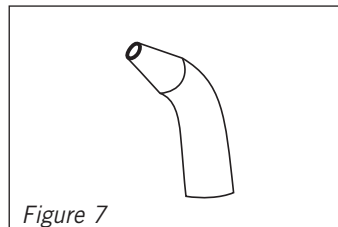




### Flexible extension nozzle


For hard to reach areas, the flexible extension nozzle can be used with any of the other attachments.

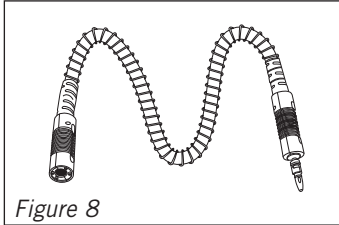


### Convenient adjustable shoulder strap

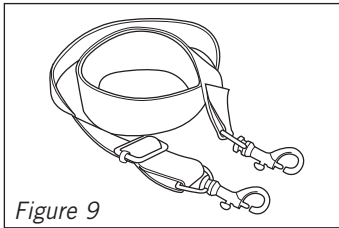

### 150ml water jug

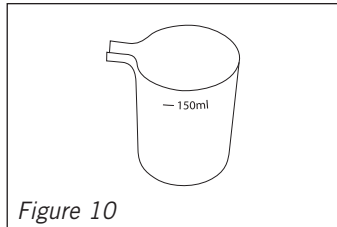

### Funnel

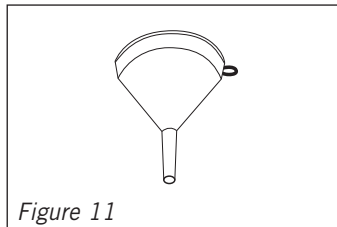

# Using your Eco Jet

## Before first use

Remove any packaging or marketing materials that may be attached to the Eco Jet.

Partially fill and then empty the water tank to remove any foreign particles that may remain in the tank following the manufacturing process.

**Note:** When turned on for the first time, your new Eco Jet may drip a small amount of water when initially producing steam. This is normal and will not reoccur.

## Filling the Eco Jet with water

Before filling with water, ensure that the power cord is removed from the power outlet.

1. Position the unit on a stable surface and remove the water tank cap.
2. Slowly fill with 300ml of clean tap water using the jug and funnel provided. Measure using the 150ml mark on the side of the measuring jug. Repeat.
3. Replace the cap and tighten.

**Note:** Do not exceed the maximum water level (300ml) as the unit may fail to operate effectively. The tank may overflow and boiling water may be emitted from the nozzle instead of steam.

## Using the Eco Jet

Ensure the unit is unplugged from the power outlet before fitting or changing attachments.

1. Fit the desired attachment following the instructions on page 9.
2. Insert the plug into a 230/240V power outlet and turn the power on. The light near the base of the unit will illuminate, indicating that the steam boiler is heating. Once the light goes out (approx. 3 - 4 minutes), the Eco Jet has reached the optimum temperature for producing steam and is ready to use.

3. Direct the Eco Jet at the desired surface and depress the steam trigger on the handle.
4. Slowly move the Eco Jet back and forth over the surface to be cleaned. To remove stubborn stains, hold the unit over the area for several seconds.
5. Once you have finished cleaning the desired area remove the plug from the power outlet.
6. Allow the unit to cool completely before storing.

**Caution: Do not tilt the Eco Jet more than 45 degrees from the horizontal or turn it upside down during or immediately after use. Boiling water could come out of the nozzle instead of steam.**

## Filling the Eco Jet during use

Do not unscrew the water tank cap until the following steps have been followed.

1. Unplug the power cord from the outlet.
2. Remove any remaining steam from the water tank by depressing the steam trigger until the tank is completely empty.
3. Partially unscrew the water tank cap, waiting five minutes for any remaining steam to escape and to allow the unit to cool down. Proceed to completely unscrew the cap.
4. Carefully empty any remaining water from the water tank.

**Caution: Water will be extremely hot.**

- Note:** Always ensure that the water tank is completely empty before refilling the Eco Jet to avoid overfilling. Do not exceed the maximum water level.
5. Slowly refill with 300ml (max) of clean tap water using the jug and funnel provided. Measure using the 150ml mark on the side of the measuring jug. Repeat.
  6. Replace the cap and tighten.

# Using your Eco Jet continued

## Fitting the attachments

Before removing any attachment, ensure the plug is disconnected from the power outlet. Always allow the unit and the attachment to cool completely before handling.

## Fitting the standard nozzle

1. Attach the standard nozzle to the Eco Jet by pushing it onto the steam outlet, aligning the arrow engraved on the attachment with the join line above the steam outlet. Turn the attachment in the direction of the arrow until it locks into place and the arrow on the attachment aligns with the double line marked on the side of the steam outlet.
2. To remove the standard nozzle, twist the attachment back against the direction of the arrow. When the arrow engraved on the attachment is aligned with the join line above the steam outlet, pull the attachment firmly to remove.

## Fitting the utility head and fabric cloth

1. Fit the fabric cloth to the utility head by stretching the elasticised cloth over it, ensuring it is evenly fitted and quite snug.

**Note:** Do not use the utility head without a cloth attached as this may cause damage to surfaces.

2. Attach the utility head with cloth to the Eco Jet by pushing it onto the steam outlet aligning the arrow engraved on the attachment with the join line above the steam outlet. Turn the attachment in the direction of the arrow until it locks into place and the arrow on the attachment aligns with the double line marked on the side of the steam outlet.

**Note:** When cleaning large areas the cloth may become quite wet and/or dirty. Switch the unit off at the outlet, wait for the attachment and the cloth to cool completely before removing the cloth to rinse, wring out and replace. Alternatively replace with a clean, dry cloth.

3. To remove the utility head, twist the attachment back against the direction of the arrow. When the arrow engraved on the attachment is aligned with the join line above the steam outlet, pull the attachment firmly to remove.

## Fitting the utility head and squeegee

The squeegee works in conjunction with the utility head and needs to be attached to it before being mounted to the unit.

1. Fit the squeegee to the utility head by aligning the hooks on the squeegee with the holes on the utility head.
2. Push the top of the utility head down so that it is secured under the clip on the top of the squeegee.
3. Attach the utility head with squeegee to the Eco Jet by pushing it onto the steam outlet aligning the arrow engraved on the attachment with the join line above the steam outlet. Turn the attachment in the direction of the arrow until it locks into place and the arrow on the attachment aligns with the double line marked on the side of the steam outlet.
4. To remove the squeegee from the utility head lift the clip on the top of the squeegee up and pull away from the utility head.

# Using your Eco Jet continued

## Fitting the round brush

The round brush can be used in conjunction with the standard nozzle, the flexible extension nozzle or fitted directly to the steam outlet on the Eco Jet.

1. Fit the round brush to any of the above attachments or directly to the steam outlet by aligning the inner hexagonal sides of the round brush with the tip of the attachment. Push the round brush firmly onto the attachment at the desired angle of use.
2. If using the round brush with one of the above attachments, fit the round brush to the attachment (according to step 1) then follow the relevant instructions for fitting that attachment to the Eco Jet.
3. To remove the round brush, simply pull firmly.

**Note:** Do not use on coarse surfaces such as tile grout or cement for extended periods as this may cause damage to the bristles.

## Fitting the curved nozzle

The curved nozzle can be used in conjunction with the standard nozzle, the flexible extension nozzle or fitted directly to the steam outlet on the Eco Jet.

1. Fit the curved nozzle to any of the above attachments or directly to the steam outlet by aligning the inner hexagonal sides of the curved nozzle with the tip of the attachment. Push the curved nozzle firmly onto the attachment at the desired angle of use.

2. If using the curved nozzle with one of the above attachments, fit the curved nozzle to the attachment (according to step 1) then follow the relevant instructions for fitting that attachment to the Eco Jet.
3. To remove the curved nozzle, simply pull firmly.

## Fitting the flexible extension nozzle

The flexible extension nozzle can be used in conjunction with any of the other attachments.

1. Attach the flexible extension nozzle to the Eco Jet by pushing it onto the steam outlet, aligning the arrow at the top of the attachment with the join line above the steam outlet. Turn the attachment in the direction of the arrow until it locks into place and the arrow on the attachment aligns with the double line marked on the side of the steam outlet.

**Note:** Fit the desired attachment to the flexible extension nozzle according to the relevant instructions for fitting that attachment to the Eco Jet.

2. To remove the flexible extension nozzle, twist the attachment back against the direction of the arrow. When the arrow engraved on the attachment is aligned with the join line above the steam outlet, pull the attachment firmly to remove.

## Fitting the adjustable shoulder strap

Attach the shoulder strap to the Eco Jet by clipping the ends of the strap to the shoulder strap hooks on the body of the unit. Adjust to the preferred length using the buckle on the strap.

# Care and Cleaning

## After each use

1. Remove the plug from the power outlet.
2. Remove any remaining steam from the water tank by depressing the steam trigger until the tank is completely empty.
3. Partially unscrew the water cap, waiting 5 minutes for any remaining steam to escape and to allow the unit to cool down. Proceed to completely unscrew the cap.
4. Carefully empty any remaining water from the water tank by turning it upside down above a sink or outdoors.

**Caution: Water may be extremely hot.**

5. Once completely cooled, store the Eco Jet in a cool, dry location.

## Cleaning the cloth

The cloth can be machine washed in warm water (60°C). Do not iron, tumble dry or bleach. For heavy soiling, soak the cloth in warm water and detergent or a mild stain remover to restore whiteness. Allow to dry completely before using or storing.

## Cleaning the Eco Jet interior

To clean the boiler, fill with tap water, then shake and empty. Repeat two or three times as required.

**Note:** This should be done every three months

## Cleaning the Eco Jet exterior

To clean the exterior of the unit, wipe it over with a damp soft cloth and wipe dry.

**Note:** Do not use cleaning detergents or chemicals to clean the exterior of the unit as these will damage its surface.

# Notes



The Sunbeam logo is written in a white, elegant cursive font on a red rectangular background.

## Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

[www.sunbeam.com.au](http://www.sunbeam.com.au)



is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2004.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line above.