



Assemblies include all parts shown in frames.

## AC0201

| REF.<br>NO. | PART<br>NO. | DESCRIPTION  | REF.<br>NO.  | PART<br>NO.  | DESCRIPTION  | REF.<br>NO.                          | PART<br>NO.                          | DESCRIPTION             |
|-------------|-------------|--|--|--|--|--------------------------------------|--------------------------------------|-------------------------|
| 813<br>1058 | 865111      |  | 5001<br>5003<br>5004<br>5005<br>5006<br>5007<br>5008<br>5009<br>5010 | 865086<br>865088<br>865091<br>865093<br>865095<br>865097<br>865099<br>865101 | Pump–Water 3" Outlet<br>Bracket–Flange<br>Impeller | 5011<br>5012<br>5013<br>5014<br>5015 | 865105<br>865107<br>865109<br>865115 | Screw<br>(Inlet Flange) |
| 1059        |             | Kit–Screw/Washer<br>(Flange to Crankcase<br>Cover) | 5010   | 803103   | Couping-water                                      | 5015                                 | 003140                               | Sear-Impelier           |
| 1117        | 865147      | Screw<br>(Engine Mount)                            |  |  |  |                                      |                                      |                         |