
LEGATO CD-40

Owner's manual GB

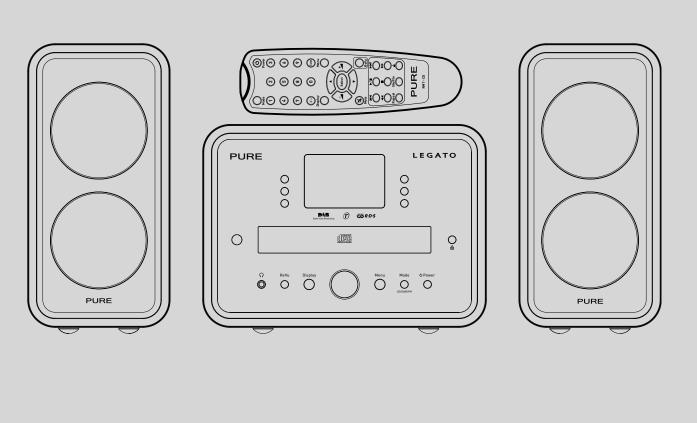



digital Padio

ReVu ©R·D·S





PURE

<u> Safety</u> instructions

Keep the unit away from heat sources such as radiators, heaters or other appliances that produce heat.

Ensure that the unit is not placed in such a way as to interfere with proper ventilation. For example the unit should not be placed on soft furnishings that may block ventilation openings or placed in an enclosed unit such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Do not expose the unit to direct sunlight.

Do not use the unit near water.

Avoid objects or liquids getting into the unit.

Do not remove screws from or open the unit casing.

Ensure that foreign objects are prevented from obstructing the cooling fan on the rear of the unit.

Do not use the unit with the rear fan cover or filter removed.

\land Care instructions

Legato main unit and speaker casings (where supplied) have a wood veneer covering. As with other wood products care must be taken when handling and cleaning to protect the wood from damage.

Do not expose the casings to detergents, solvents or abrasive materials

Do not expose the casings to sources of direct heat such as hot drinks.

Wipe over gently with a soft cloth to clean the casings.

Occasional use of light furniture polish (applied via a soft cloth) will help protect the surface.

The cooling fan on the rear of the unit has a removeable cover and filter fitted to help prevent dust entering the unit. We recommend periodically checking that the filter is clear by removing the cover. If the filter appears blocked rinse the filter in water, leave to dry thoroughly then replace the filter and protective cover.

Copyright

Copyright 2006 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Legato, the Legato logo, ReVu, the ReVu logo, PURE, the PURE logo, PURE Digital, the PURE Digital logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please register your product on our website at www.pure.com/register or by filling in and returning your warranty card. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual.

Credits

This manual was written by Bruce Murray. It is a product of PURE Digital, Imagination Technologies Ltd., Imagination House, Home Park Estate, Kings Langley, Herts, WD4 8LZ, UK. Version 5 January 2006

Contents


Getting started2
Overview diagrams 2
Connecting speakers
Switch on and off4
Changing the volume
Navigating menus 4
Listening to DAB radio5
Selecting a station5
Changing the information displayed5
ReVu™ - Pausing and rewinding radio5
Storing and recalling presets
Changing DAB options
Playing a CD8
Selecting a track
Changing the information displayed8
Changing CD options
Playing an MP3 CD 10
Changing the information displayed10
Changing MP3 options10
Listening to FM radio 11
Selecting a station11
Changing the information displayed11
Storing and recalling presets11
Changing FM options12
Listening to another source13
General setup options14
Audio14
Screen14
Alarm14
Sleep timer14
S/W version15
Hints and tips 16
Technical specifications17


Getting started

Overview diagrams


These diagrams show the function of controls, the connectors on the rear panel, the remote control and screen icons.

Front panel

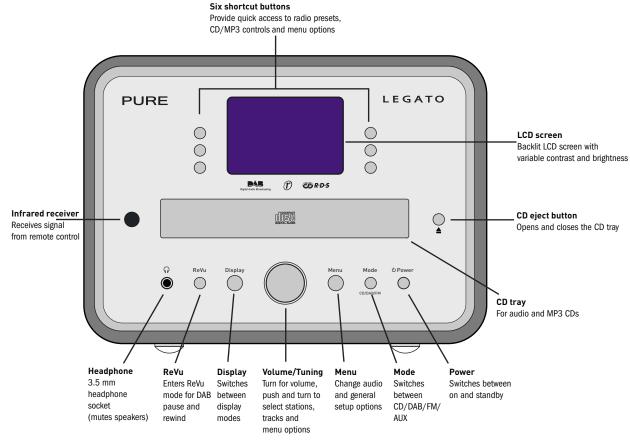


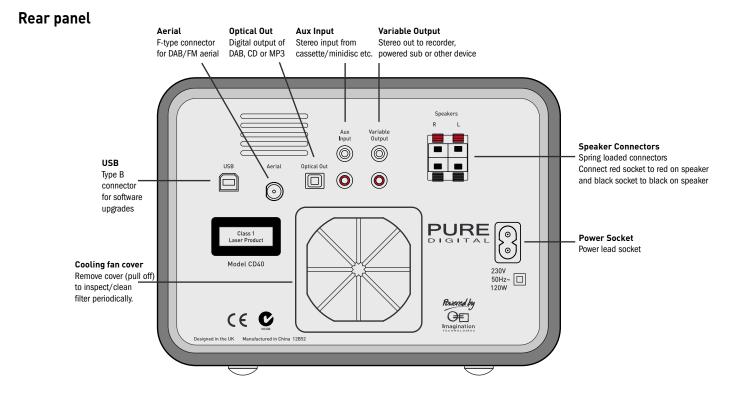


Remote control

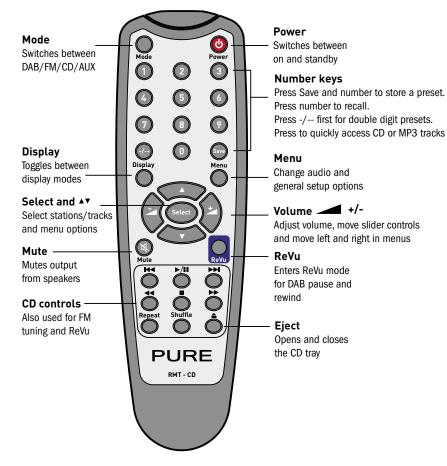


DAB screen

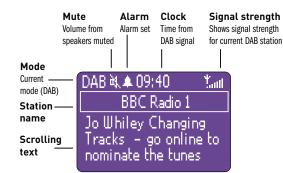


CD screen

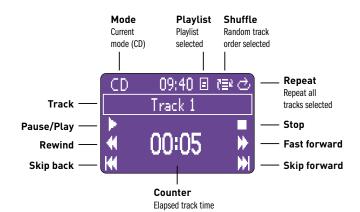

FM screen

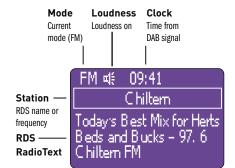

Connecting speakers

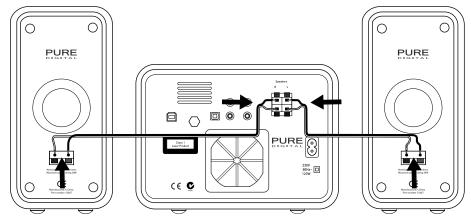

When connecting speakers connect the red (positive) terminals on Legato to the red terminals on the speaker and black (negative) to black. The speaker cable has a stripe on one strand to aid connection.

Ensure that the bared ends of the wires are securely gripped by the spring clips. Note that the sound from new speakers should improve over the course of a few days as they are 'run-in'.

You can also connect an active subwoofer to the Variable out sockets on your Legato for enhanced bass. See page 14 for more details.

Switch on and off

When you first plug your Legato in it switches to DAB mode and asks you if you want to perform a UK (UK Band III only) or Full autotune (full Band III) to find all DAB stations available in your area. These stations are stored in a station list and ordered alphanumerically.

The first station on the station list is selected.

To switch your unit off (standby) - press the Power button on the unit or remote control. You see the standby symbol and clock on the screen. Push the Display button to change between a small clock, large clock and day/date time display in standby.

To switch your Legato back on press the Power button again. Your unit starts in whatever mode you were in when you switched off.

Changing the volume

The Volume/Tuning dial operates as a volume control by default except when you are in a menu or browsing the station or track lists. When you adjust the volume you temporarily see the volume scale on screen indicating the current level. You can also use the volume buttons on the remote control to adjust the volume.

Navigating menus

You turn the Tuning dial to scroll through menu options or station or track lists and push to select options. In most menus if you do not select anything you return to the previous screen. Alternatively use the equivalent remote control buttons. You can also press a shortcut button to select the option shown on screen next to that button.



Listening to DAB radio

To listen to DAB radio push the Mode button until you see DAB in the top left of the screen.

When you first switch on your Legato it automatically enters DAB mode, autotunes to find all the DAB stations available in your area and lists them in alphanumeric order.

Selecting a station

To change stations, push the Tuning dial and turn to scroll through the station list, then push the Tuning dial again to tune to the highlighted station.

The currently selected station is shown in the box at the top of the screen.

Changing the information displayed

Legato has five DAB display modes which change what you see on screen while you listen to DAB radio. Push the Display button to switch between the modes.

Text Dynamic text broadcast by most stations.

Reception info DAB channel and frequency of the station you are listening to, signal strength meter and signal quality reading. As a guide, values from 85 to 100 indicate good reception, 70 to 84 average reception and 0 to 69 poor reception.

Broadcast info Name of the multiplex the current station belongs to. Multiplexes are groups of stations broadcast by a single operator. Description of the content broadcast by the station, Stereo or Mono indicator and data rate at which the station is being transmitted. This rate is set by the stations to suit the type of material being transmitted. High rates generally mean higher quality.

Presets DAB presets for quick access to your favourite stations using the six shortcut buttons.

Date and time Date and time broadcast by the multiplex.

ReVu™ - Pausing and rewinding radio

ReVu mode lets you pause and rewind live DAB digital radio.

Legato constantly stores audio and text from the station you are tuned to in its memory. The amount stored depends on how long you have been listening to that station and the data rate of the broadcast. You can access this stored audio and pause or rewind live radio over short periods (approximately 20 to 40 minutes depending on data rate).

Once the memory is full, ReVu keeps adding to the memory but starts to overwrite the oldest stored audio and text.

You can enter ReVu mode in two ways which you select as follows:

Paused - press and release the ReVu button or pause button on the remote


Fast forward/rewind - press and hold the ReVu button for three seconds or press the fast forward/rewind or skip forward/back buttons on the remote

DAB	09:40	tail
	BBC Radio	1
Tracks	iley s Chai s – go onl ate the tur	ine to
De	efault DAB scre	en

DAB Station List	
BBC Radio 1	
BBC London	
BBC Radio 1	
BBC Radio 2	

GВ

 Selecting a station




DAB 09:40 t.... BBC Radio 1 BBC National DAB Pop Music 128kbps Stereo


Display modes - Broadcast info



  
Display modes - Date and time







ReVu mode - playing

 

Presets 1 to 4

DAB Menu

Autotune UK	Manual tune
Autotune full	DRC [OFF]
Station order	

DAB options

When you enter ReVu mode you see the ReVu icon on the screen and a timer shows how many minutes and seconds behind the live broadcast you are.

Once in ReVu mode you can toggle between paused and playing by pushing the ReVu button again or pressing the pause/play (\blacksquare) button. To exit ReVu mode and return to the live broadcast press the stop (\blacksquare) or skip forward (\blacksquare) button to catch up with the live broadcast but remain in ReVu mode.

To pause and replay live radio

Push the ReVu button. The screen shows Paused and the timer shows how far behind the live broadcast you are.

Push the ReVu button again to start replaying the stored audio and text from where you left off. The timer stops counting, showing that you are now listening that many minutes and seconds behind real time. You can listen in this way for as long as you like, or press the fast forward, skip forward or stop shortcut button to catch up to real time.

To rewind radio

Press the ReVu button twice. Use the Rewind (**4**) button to move back in the recorded audio or the skip back (**4**) button to return to the start.

Storing and recalling presets

You can store up to 99 of your favourite stations as presets which you can then access quickly using the shortcut buttons or remote control. You can store and access presets while listening to radio but not if in ReVu mode.

Push any shortcut button or set the Display mode to show the presets as described on page 5. This shows the first page of presets on the screen. Flick through the other pages of presets using the left (\clubsuit) and right (\clubsuit) shortcut buttons or skip buttons on the remote.

To store a preset - Hold down the shortcut button you want to store the current station under until the station name appears or press the Save button and numbered buttons on the remote. The preset is stored.

To recall a preset - Push the shortcut button next to the preset you want to listen to or press the number buttons on the remote

Changing DAB options

To customise the way your Legato works in DAB mode push the Menu button, select DAB and choose from the following:

Autotune UK

Scans all UK frequencies for DAB stations and adds any new ones to the station list.

Autotune full

Scans the full range of digital frequencies in Band III. This option is for use outside the UK where other Band III stations may be available.

Station order

Change the order of stations on your station list using this option. The current order is shown at the top of the screen. Choose from the following:

Alphanumeric Displays all stations in alphanumeric order. **Favourite** Displays your eight most listened to stations at the top of the station list and the others below. Your favourite stations are selected by how long you listen to each station and indicated by a heart next to the name in the station list. Active Displays active stations at the top of the station list and inactive ones at the bottom, in alphanumeric order. Inactive stations are those on your station list but not currently available, marked with a '?'. **Multiplex** Lists stations in groups according to their multiplex. Multiplexes are groups of stations owned and broadcast by a multiplex operator. Trim stn list Removes inactive stations from the station list. Favs → presets Available only when Favourite station order (above) has been

selected. Transfers your eight favourite stations to presets.

Manual tune

Find new stations or fine tune your reception using this option.

You see a list of channels and frequencies. Each multiplex has a different channel and frequency (E.g., BBC is channel 12B and Digital One is 11D), contact the DRDB (Digital Radio Development Bureau) by phone on 08707 74 74 74 or at www.digitalradionow.com for information on multiplexes.

- Select the channel you want from the list. You see a signal strength display. The marker indicates the minimum required level for reception and the filled blocks indicate the current level.
- Move your aerial and try to raise the current level to the marker or beyond. You see the multiplex name at the top of the screen if a good signal is received and the stations in that multiplex are listed below and added to the station list.

DRC

Make the quieter sounds in a broadcast easier to hear at low volume or in a noisy environment using this option. The DRC (Dynamic Range Control) level of a broadcast is set by the station and sent with the signal. At the time of writing only stations such as BBC Radio 3 and 4 regularly broadcast a DRC level. Check with the broadcasters to find out if they use DRC on their stations.


Select one of the following options:

- **DRC OFF** DRC is switched off. Any DRC level broadcast is ignored. This is the default setting.
- **DRC HALF** DRC level is set to half that sent with the broadcast.

DRC FULL Applies the DRC level as sent with the broadcast.

DAB	09:40
12A 223	. 93MHz
128 225	. 64MHz
12C 227	. 36MHz
M	anual tuno

 Playing a CD



CD mode



Track 2 04:31

Selecting a track



Play LALLJ - Set playlis Shuffle [OFF] Repeat [OFF]

CD options

To listen to a CD push the Mode button until you see CD in the top left of the screen.

Push the eject button (\triangleq) and place your CD label side up in the CD tray. Push the eject button again to load the CD. Legato checks the CD type and loads a track list. If you insert a CD with MP3 files on it Legato enters MP3 mode, see page 10.

If you close the CD tray by pushing the tray or pressing play the CD automatically starts playing. You see the standard CD controls, track title and time into track on the screen.

Selecting a track

To change tracks on a CD, either:

- push the Tuning dial and turn to scroll through the track list, then push the Tuning dial again to play the track
- use the skip forward or skip back shortcut buttons on screen or remote
- select a track number using the numbered buttons on the remote

Changing the information displayed

To change what you see on screen while you listen to a CD push the Display button. Choose from the following options:

Track elapsed	Time the current track has been playing, or if stopped total time and number of tracks on the CD.
Track remaining	Time remaining of the current track.
Disc remaining	Time remaining of current CD.
CD text	Displays album name, track information, artist, etc., if included on the CD.
Date and time	Obtained from the DAB signal.

Changing CD options

To customise the way Legato works in CD mode push the Menu button, select CD and choose from the following:

Play

Choose whether to play all tracks on the CD [ALL] or just those on a playlist you have created [LIST]. See Set playlist below for details of creating a CD playlist. If you select LIST you see the playlist icon (\blacksquare).

Shuffle

Choose whether to play CD tracks in the order they appear on the disc [OFF] or in a random order [ON]. If you select ON you see the shuffle icon (124).

Repeat

Choose to repeat the current track [TRACK] when it ends or the whole disc [ALL]. This loops continuously until you set it to [OFF]. If you select TRACK you see the repeat track icon (\rightarrow 1), if you select ALL you see the repeat all icon (\rightarrow).

Set playlist

Create a playlist containing the order in which to play up to 20 tracks from the current CD.

To create a playlist:

- 1. Turn the Tuning dial and push to set the first track on your playlist.
- 2. Repeat until you have completed your playlist and push the bottom right shortcut button (OK) to set your playlist and exit. This automatically sets the Play mode to [LIST].

You see the playlist icon (\blacksquare).

Alternatively press the left middle shortcut button (Clear) to delete the current playlist order or bottom left shortcut button (Cancel) to exit the screen without saving any changes made

Your playlist is now set and if you play your CD it plays the tracks you specified in the order you specified.

The playlist remains available for as long as the CD inserted. If you eject the CD or change CDs the playlist you created is no longer available.

Playing an MP3 CD



Push the Mode button until you see CD in the top left of the screen to listen to a CD with MP3 files stored on it. Legato automatically detects if a CD has MP3 files on it and changes to MP3 mode.

MP3 files can be in folders on the CD if desired and MP3 playlist files are also supported. MP3 playlist files are simple text files (usually with a .M3U extension) specifying an order in which to play a selection of MP3 files on the CD.

The following icons on the track list help you identify tracks, folders and playlist files:

MP3 files Playlist file

E

Open folder -Closed folder +

Push the eject button and place your MP3 CD label side up in the CD tray. Push the eject button again to load the CD. Legato checks the CD type, changes the mode to MP3 and displays the normal CD controls.

If you close the CD tray by pushing the tray or pressing play the CD automatically starts playing. You see the standard CD controls, track title and time into track on the screen.

Selecting a track, playlist or folder

To change tracks on an MP3 CD, either:

- push the Tuning dial and turn to scroll through the track list, then push the Tuning dial again to play the track or playlist or open a folder
- use the skip forward or skip back shortcut buttons on screen or remote
- select a track number using the numbered buttons on the remote

Changing the information displayed

To change what you see on screen while you listen to an MP3 push the Display button. Choose from the following options:

Time into track	Time the current track has been playing
ID3 text	Displays ID3 text – album name, track information artist etc., if included with file
Date and time	Obtained from the DAB signal

Changing MP3 options

To customise the way Legato works in MP3 CD mode push the Menu button, select MP3 and choose from the following:

Shuffle

Choose whether to play MP3 tracks in the order they appear on the disc, current selected folder or playlist [OFF], or in random order [ON]. If you select ON you see the shuffle icon (124).

Repeat

Choose to repeat the current track [TRACK] when it ends or the whole disc, currently selected folder or playlist [ALL]. This loops continuously until you set it to [OFF]. If you select TRACK you see the repeat track icon ($\underline{\frown}$), if you select ALL you see the repeat all icon ($\underline{\frown}$).

MP3 Track List



MP3 track list



MP3 ID3 text

MP3 Setup Menu



MP3 options

Listening to FM radio

To listen to FM radio push the Mode button until you see FM in the top left of the screen. The first time you enter FM mode Legato asks you to select the FM tuning mode you want. Use the shortcut buttons or Tuning dial to select one of the following:

seek to find the next station.

Autotune	Finds all the stations available in your area and lists them in alphanumerical order using RDS (Radio Data System) station names where available.
Manual Tune	Lets you tune manually either in steps of 0.05 MHz or using a

Selecting a station

You select a station in different ways depending on which tuning mode you have chosen:

- Autotune To change stations, push the Tuning dial and turn to scroll through the station list, then push the Tuning dial again to tune to the highlighted station or use the shortcut buttons on screen.
- **Manual Tune** To change stations, push the Tuning dial and turn right or left to step up or down the frequency range or use the shortcut buttons on screen to step **a b** or scan **b** to the next station.

If you scan, the scan stops when the next station is found. The frequency display changes to show the RDS station name if available.

Changing the information displayed

To change what you see on screen while you listen to FM radio push the Display button. Choose between the following options:

- **RadioText** Dynamic text broadcast by some RDS stations.
- **Broadcast info** Description of the content broadcast by the station and its frequency. RDS stations only.
- **Presets** FM presets for quick access to your favourite stations using the six shortcut buttons.

Date and time Date and time obtained from the DAB signal.

Storing and recalling presets

You can store up to 99 of your favourite stations as presets which you can then access quickly using the shortcut buttons or remote control.

Push any shortcut button or set the Display mode to show the presets as described above. This shows the first page of presets on the screen. Flick through the other pages of presets using the left (\clubsuit) and right (\clubsuit) shortcut buttons or skip buttons on the remote.

To store a preset - Hold down the shortcut button you want to store the current station under until the station name or frequency appears or press the Save button and numbered buttons on the remote. The preset is stored.

To recall a preset - Push the shortcut button next to the preset you want to listen to or press the number buttons on the remote

FM 11:40
Chiltem
Today's Best Mix for Herts Beds and Bucks - 97. 6 Chiltern FM
FM mode
FM Station List
C hiltern
📢 🛛 BBCR2 🕨
Chiltern

 
Heart FM

FM station list

K

GB

М



FM - Broadcast info

FM 09:40		
Radio 1		
-	-	
-	-	
🔶 Presets 01-04	-+	
FM - Presets		

FM Menu

Tune [BYNAME] Station order Autotune

FM Setup options

Changing FM options

To customise the way your Legato works in FM mode push the Menu button, select FM and choose from the following:

Tune

Push the Tuning dial to choose between [BYNAME] which shows stations in a station list (similar to the DAB station list) using RDS station names or [MANUAL] to manually step through the FM frequencies in steps of 0.05 MHz or scan to next station.

Station order

Change the order of stations on your FM station list using this option. The current order is highlighted on screen. Choose from the following:

Alphanumeric Displays named stations at the top of the station list and others below in numerical order


Named stations Displays stations with an RDS name only

Autotune

Performs a scan to find all the stations available in your area and lists them in alphanumeric order using RDS station names where available.

Listening to another source

To listen to an audio source such as MiniDisc player attached to the Aux inputs on your Legato push the Mode button until you see AUX in the top left of the screen.

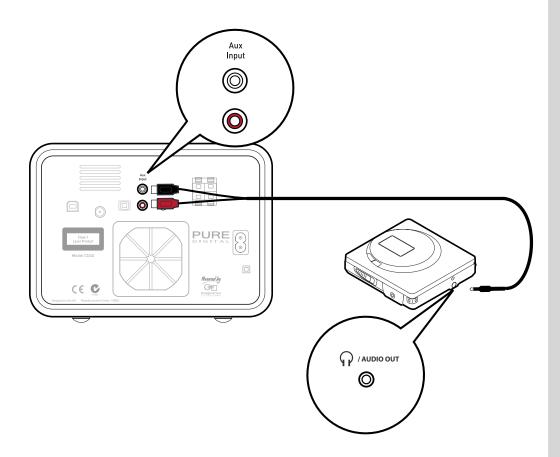



General setup options

Push the Menu button to access general setup options, available at all times, whether listening to radio or a CD. Choose one of the following options:

Audio

Tone

Turn the Tuning dial to set the Bass output level. Press the Tuning dial again to set the Treble level.

Loudness

Push the Tuning dial to toggle Loudness [ON] or [OFF]. When Loudness is on you see the Loudness icon on screen (\mathbf{z}).

Subwoofer

Push the Tuning dial to specify if you have an active subwoofer connected to your Variable output [YES] or not [NO]. If you specify YES, Variable output will mute if headphones are inserted.

Contact PURE for details of the SUB-1 active subwoofer.

Balance

Turn the Tuning dial to adjust the audio balance between left and right .

Screen

Active settings

Turn the Tuning dial to set the screen brightness. Press the Tuning dial again to set the contrast.

Standby settings

Turn the Tuning dial to select the standby screen brightness level.

Alarm

To set an alarm to wake you up:


Turn the Tuning dial or use the +/- shortcut buttons to set an alarm time, Mode [DAB/FM/Tone] and set the Alarm [On]. Radio alarms tune to the station you were tuned to last in that mode. When the alarm is set you see the Alarm icon (\clubsuit) on the screen. The alarm icon flashes when the alarm goes off.

To cancel the alarm and leave the unit switched on press the Tuning dial or press the Power button to cancel the alarm and switch off.

Sleep timer

To set a sleep timer to switch off your unit:

Turn the Tuning dial or use the +/- shortcut keys to set a time after which you want your Legato to switch off. Choose between 15, 30, 45, 60, 1hr 15 and 1hr 30 minutes. To switch a sleep timer off use the Clear shortcut button or set the time to zero.

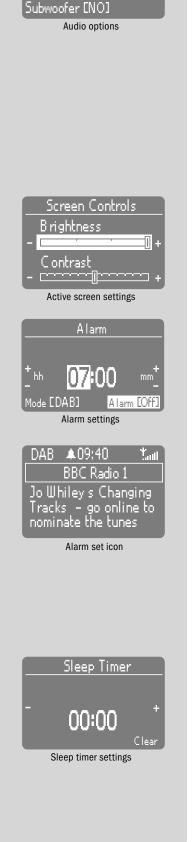

Audio Menu

Balance

Tonel

Loudness [OFF]

S/W version

Displays the current software version installed on your Legato and gives access to the Software Upgrade option.

Register your product and include an e-mail address to receive notification of software updates or visit our website at www.pure.com/support.

To upgrade your software, press the Software Upgrade shortcut button and follow the instructions on screen.

V1.2	
S/W upgrade	Exit
S/W version screen	

Hints and tips

(>>/<<) DAB Secondary services

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. At the time of writing not many secondary services are available. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

(?) Inactive or unavailable DAB stations

Inactive or unavailable stations are those which appear on the station list but are not currently available because either you are outside the broadcast area, have lost reception or the station is not currently broadcasting. Unavailable stations have a '?' before their name on the station list. If you select a station which has this symbol, Legato returns to the last station you were listening to.

I hear a 'burbling' sound on some DAB stations

Although DAB is excellent at providing quality audio from very little signal, the quality can suffer if the signal strength is too low. If that happens, a 'burbling' sound can sometimes be heard. To help reduce this, check that your aerial is fully extended and upright. If the problem persists try moving your radio or repositioning your aerial using manual tuning.

Screen says 'No stations available' in DAB mode

Check that your aerial is fully extended. Use Autotune to search for stations. Use manual tuning to adjust your aerial or radio position.

Clock shows the wrong time

This may happen if the DAB multiplex you are tuned to broadcasts an incorrect time signal, try tuning to a station in another multiplex.

Resetting your unit

Resetting your Legato removes all presets, stored stations and favourite station settings and resets all options to defaults. To reset:

- 1. Press and hold the Menu button for three seconds. The screen shows 'Do you want to reset?'.
- 2. Push the 'Yes' shortcut button or use the +/- or ▲▼ and select button on the remote to confirm the reset or press no buttons to cancel the reset.

My speakers don't sound good

Make sure that the red (positive) terminal on the speakers is connected to the red terminal on Legato and black (negative) to black .

Ensure the connections are secure and bared ends of the cables are contacting the metal of the terminals.

Note that from new, the sound from your speakers should improve over the course of a few days as they are 'run-in'.

My screen is too bright in standby

To set the brightness of your screen in standby press the Menu button, select Display and choose Standby settings to alter the brightness.

Alarm bell icon has a cross through it

This happens if you set an alarm but no DAB time has been acquired yet. Check that your aerial is connected, return to DAB or standby and wait for a short period and the normal icon should appear indicating that the time has been acquired.

Screen says 'DAB time not available'

This happens in CD/MP3/FM/AUX mode if DAB time has been acquired yet. Check that your aerial is connected, switch to DAB mode or standby, wait for a short period and the time should appear.

Technical specifications

Amplifier

22W RMS per channel power output (into 4 Ohms) 15 Hz to 35 kHz frequency response Dynamic Virtual Sub Technology™ provides a variable bass boost relative to volume Bass and treble tone control

CD player

CD-R and CD-RW playback compatible Support for CD Text and 20 track audio CD playlist Multiple playback modes (repeat, shuffle, etc.) MP3 playback, including support for ID3 tags and M3U playlists

DAB

PURE ReVu[™] enables pause and rewind of live DAB digital radio Full Band III (174 - 240 MHz) reception. Fully compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4 Fast autotune feature DPAC II[™] provides a more natural sound from DAB transmissions

FM

Supports RDS and RadioText Tune by RDS station name 87.5 - 108 MHz frequency range

Speakers (optional)

6 Ohms (nominal) impedance 30W RMS power handling Twin 3" custom designed full range drive units Neodymium magnets Phase correction plugs Bass reflex ported

Connectors

3.5 mm headphone output
RF F-connector 75 Ohms for DAB aerial connection
Dual phono for external line level audio input
Dual phono for stereo analogue audio output or connection to a subwoofer
Optical Toslink connector for digital S/PDIF output (IEC958 @ 48 kHz)
USB connector for future software upgrades
Stereo spring-clip terminals for speakers

General

Fully featured remote control Compliant with the EMC and Low Voltage Directives (89/336/EEC and 73/ 23/EEC) Main unit dimensions (excluding controls) 210 (w) x 155 (h) x 215 mm (d) Speaker dimensions 105 (w) x 215 (h) x 215 mm (d) (where included) 2 x 3m speaker cable supplied UK and Euro Mains cables supplied Bootlace aerial supplied Telephone support hotline and internet website Two year warranty

www.pure.com



PURE Digital, Imagination Technologies Ltd., Home Park Estate, Kings Langley, Herts, WD4 8LZ, UK



+44 (0) 1923 277477 support +44 (0) 1923 277488 sales +44 (0) 1923 270188

support@pure.com sales@pure.com



PURE