

ST-2008 (Remote Control) Tower Fan Owner's Manual



READ CAREFULLY BEFORE USE AND SAVE FOR YOUR RECORDS

# **Important Safety Instructions/ Read and Save**

### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


### **GENERAL SAFETY INSTRUCTIONS**

- 1. Disconnect Fan when moving it from one location to another.
- 2. Be sure that the Fan is on a stable surface, when operatinG, to avoid the chance of overturning.
- 3. WARNING: To reduce the risk of fire, electric shock or personal injury:
  - Do not use this Fan with any solid-state device.
  - Unplug Fan before cleaning or servicing.
  - Completely reassemble Fan, according to instructions, before reconnecting to power supply.

## **I. Specifications**

Mode: ST-2008 Rated voltage: 115V Rated frequency: 60HZ Input power: 45W

# **II.** Assembling

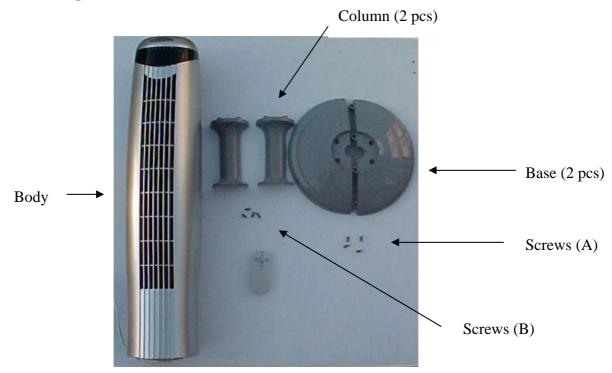

1. Thread the electric wire through the slot of columns.



2. Tighten columns, then fix the columns with fan body by using the four screws (B).



3. Thread the electric wire through hole in the middle of the base, put the two bases together.



4. Using the four screws (A) to combine columns with base together.



### 5. Finished.



# **III.** Operation

- 1. Plug the Fan into any standard 120V AC household outlets.
- 2. Push the "On/Off" button to turn on the Fan.
- 3. Using "I, II, III" button to choose Low, Medium and High Fan Speed.
- 4. Using "Timer" button to set the 7.5 hour timer.
- 5. "Osc" button is for the Fan's oscillation function.
- 6. "Wind" button is for the Normal, Natural and Sleepy Wind

**Solution** Indicates Natural Wind.

- $\bigcirc$  Indicates Sleepy Wind.
- 7. Push the "On/Off" button to turn off the Fan.

### WARRANTY

#### **One Year Limited Warranty**

**Soleus International Inc.** warrants the accompanying **Soleus Air ST-2008** to be free of defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States or Canada.

If the fan exhibits a defect in normal use, **Soleus International Inc.** will, at its option, either repair or replace it, free of charge within a reasonable time after the fan is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

#### THIS WARRANTY DOES NOT COVER:

- 1) Damage, accidental or otherwise, to the fan while in the possession of a consumer not caused by a defect in material or workmanship.
- 2) Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- 3) Damage to the finish of the case, or other appearance parts caused by wear.
- 4) Damage caused by repairs or alterations of the fan by anyone other than authorized by **Soleus International Inc.**
- 5) Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE FAN FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS FAN.

#### For Warranty, Technical Support and Customer Service

Please Call (888) 8-Soleus Or Write to:

Soleus International Inc. 9451 Telstar Ave. El Monte, CA 91731 USA www.soleusair.com