

## Hand blender Bifinett KH 499

### **⚠ Danger of electrical shock!**

- Connect the hand blender only to a properly installed plug point with a power supply voltage of 230 V at 50 Hz.
- Unplug the hand blender from the socket if you notice any faulty operation and before you decide to clean it.
- Never dip the motor unit of the hand blender into any liquid and make sure that liquids do not enter into the casing of the motor unit. Do not expose the appliance to humidity and do not use it outdoors. If by chance liquids do enter into the casing, unplug the appliance from the power socket immediately and have it repaired by a qualified technician.
- Never touch the hand blender, power cord or plug with wet hands.
- To unplug the power cord, always pull out the plug from the socket and do not pull at the cord itself.
- Do not crease or crimp the power cord and place the power cord in such a way as to prevent anyone from stepping or tripping over it.
- If the power cord or the motor unit is damaged, have the hand blender repaired by a qualified technician before using it again. Do not attempt to open motor unit casing of the hand blender. In this case, the appliance is not safe and the warranty is voided.
- Unplug the hand blender from the power supply immediately after use. Only when you unplug the appliance is completely safe.

### **⚠ Danger of injuries!**

- Always keep the hand blender out of the reach of children. Do not allow children to use it.
- Handle the extremely sharp blade **6** with caution as it can cause injuries. Mount the chopper back in its place after use and cleaning to avoid injuries to anyone. Keep the blade out of the reach of children.

GB

### **⚠ Fire hazard!**

- Do not operate the hand blender for more than 1 minute. Do not process hard foodstuffs for more than 15 seconds. Thereafter, switch the appliance off for 2 minutes to prevent it from overheating.

### **⚠ Attention!**

- Never attempt to remove foodstuffs from the vessel as long as the blade **6** is still running. Contents squirting out may cause soiling.
- Never fill the measuring cup beyond the 500 ml mark. Exceeding this may cause foodstuffs to spill out.
- Do not clean the attachments of your hand blender in a dishwasher as doing so may damage them.
- Do not use the vessels and the measuring cup in a microwave. Doing so may damage them.

### **Technical Data**

Mains voltage: 230 V / ~50 Hz  
Power rating: 300 W

### **Proper Use**

The hand blender is intended exclusively for processing foodstuffs in small quantities. It is meant for home use only. The hand blender is not intended for commercial use.

Keep this manual for future reference and pass it on with the device to any future users!