



Refill Instructions - Lexmark 10N0227 (No.27)



fig.1



fig.2



fig.3

Lexmark

X72, X74, X75, X1110, X1130, X1150, X1160, X1170, X1180,
X1185, X2230, X2240, X2250
Z13, Z23, Z25, Z33, Z34, Z35, Z75, Z513, Z515, Z597, Z601,
Z604, Z605, Z607, Z612, Z615, Z617, Z713

Items Required

Original Lexmark 27 Cartridge, Syringe & Filling Tube Cyan,
Magenta & Yellow Ink 5ml, sharp knife, news paper, sellotape

Instructions

1. Assemble syringe and steel filling tube and fill with appropriate colour ink. (fig.2)
 2. Remove the top from the black ink bottle and using the syringe remove 5ml of the colour ink (fig.3)
 3. The lid has to be removed from the cartridge. Cut around the edge with a sharp knife and then remove (fig.4)
 4. Insert the steel filling tube into the appropriate filling holes. (fig.5). Push down into centre of the sponge.
- IMPORTANT: Cartridge contains a sponge and a slight resistant may be felt.
5. **SLOWLY** Inject ink. Stop filling before ink overflows as you do not want the ink to contaminate the other colours.
 6. Repeat steps 4 and 5 with the other 2 colours
 7. Blot printer heads with tissue before continuing to fill next colour.
- IMPORTANT: Clean syringe with water and dry before refilling next colour.
8. After refilling replace the lid and stick it down with sellotape
 9. Leave the cartridge to stand overnight on non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.

IMPORTANT: DO NOT LEAVE ON TISSUE.

10. Install cartridge and run a priming cycle.

PLEASE NOTE: The ink indicator level may need to be turned off. Check your HP instructions manual for details.

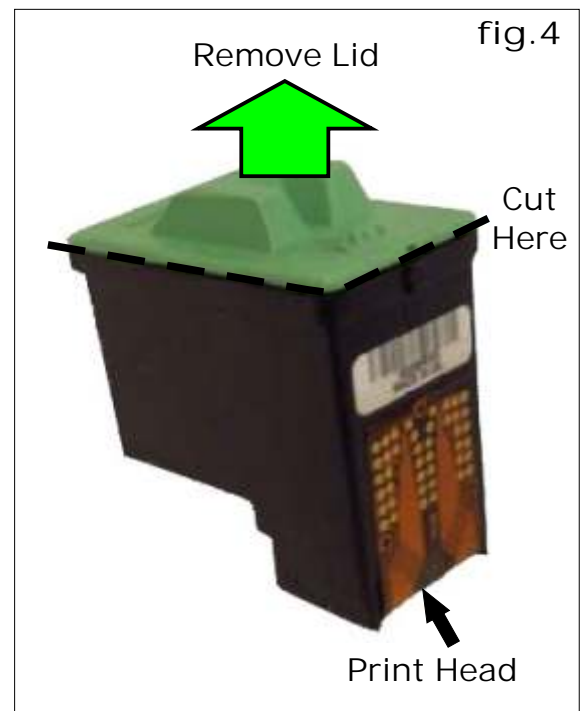 


fig.4

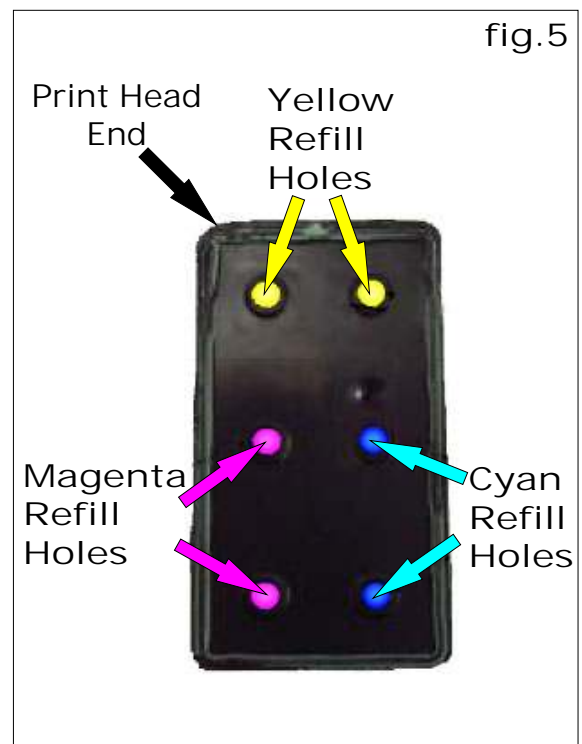 


fig.5