



MYPAL


A716 Pocket PC

Quick Start Guide


ASUS®

Getting to know MyPal


Front features

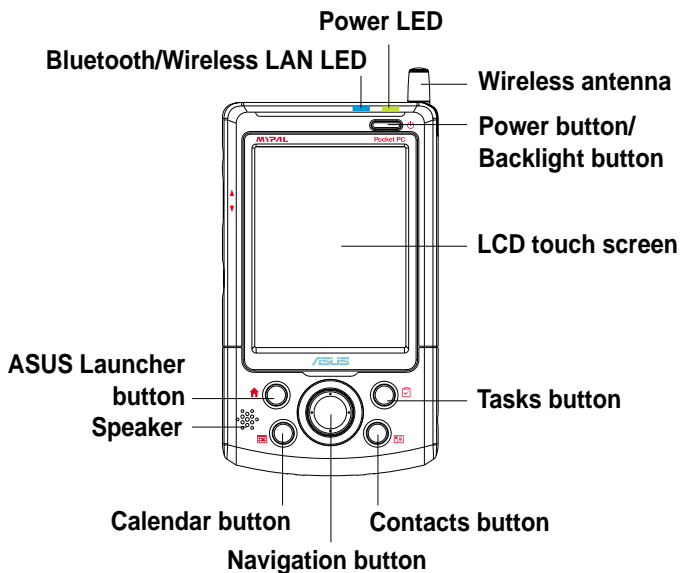

Back features

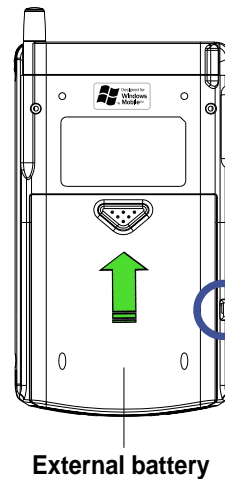


NOTE: The external (main) battery is not installed in the device when shipped. To install the battery, position it as shown then slide upward until it fits in place. To secure the battery, use the stylus to slide the battery latch hole toward the locked icon.

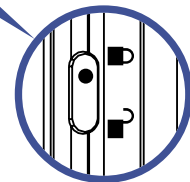


Side features


Left side

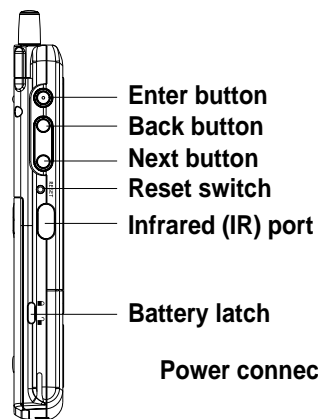


Right side

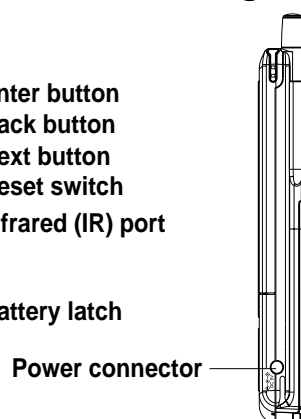

Top features

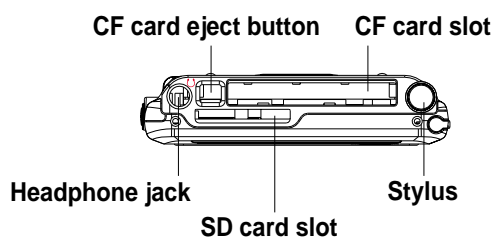


Bottom features

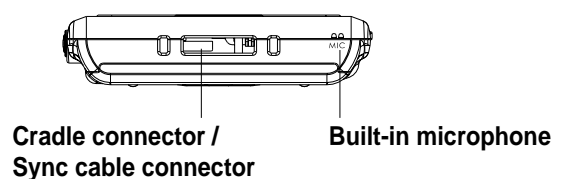

Setting up MyPal

Charging status LED

Blinks green when battery is charging
Steady green when battery is fully charged

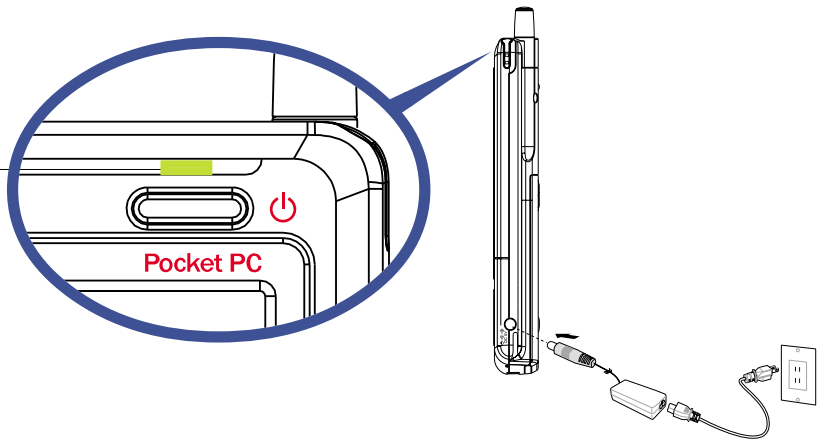


1

Connect the AC adapter cable to the connector at the bottom of the device.

Connect the power plug to a grounded power source.
Note that the charging status LED blinks green.

2a


When using the cradle, position the device with the cradle connector aligned to the device connector on the cradle.

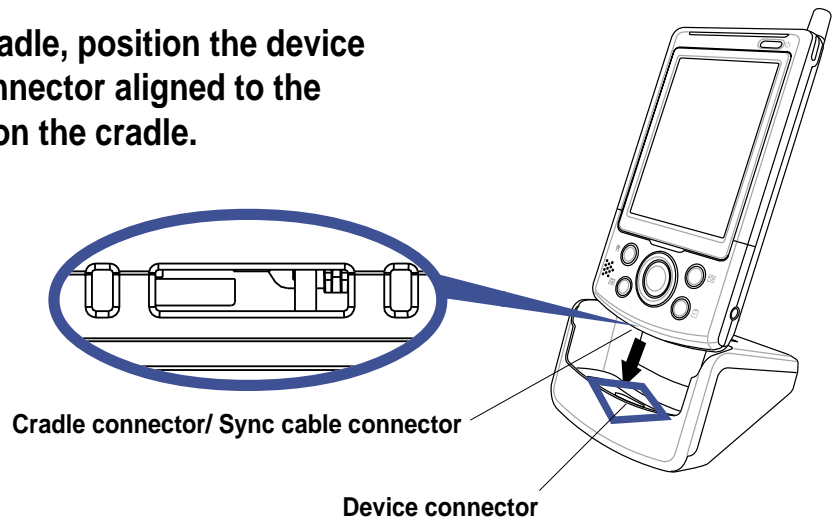

2b

Connect the AC adapter cable to the connector at the back of the cradle.

Connect the power plug to a grounded power source.

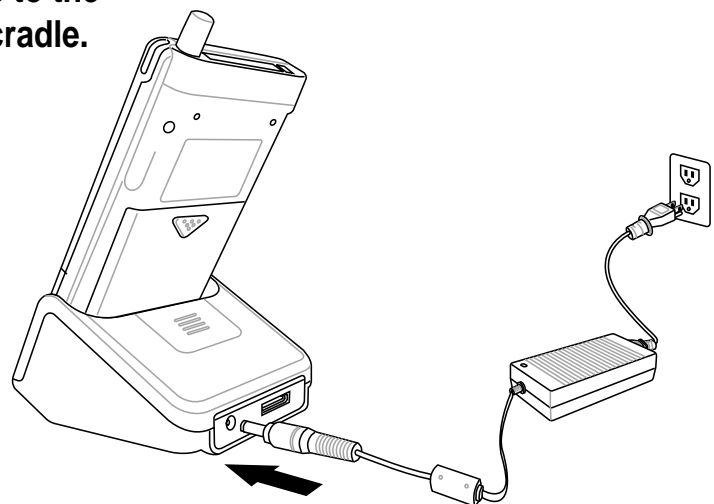


Synchronizing MyPal

Use the Companion CD to install the Microsoft® ActiveSync® on your desktop computer. ActiveSync is already installed on your device.

NOTE Do not connect your device to your computer until you have installed ActiveSync.

A Connect the flat plug of the USB sync cable to the connector at the bottom of the device.


Connect the USB plug to a USB port on your computer.

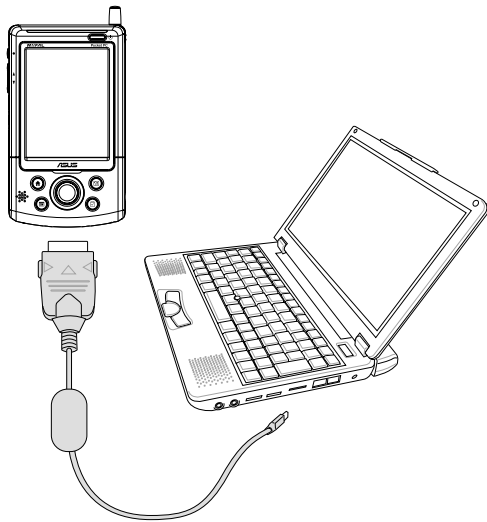

B When using the cradle, connect the flat plug of the USB sync cable to the connector at the back of the cradle.

Connect the USB plug to a USB port on your computer.

Connect the AC adapter.

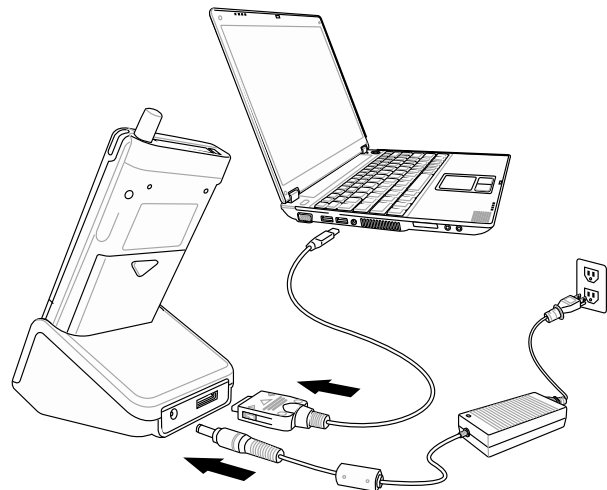

Upon connection, your device is automatically synchronized with your computer.


Synchronization status on MyPal



Connection status
Tap to connect and synchronize
Tap to stop synchronization
Synchronization status

Tap to synchronize via IR or change synchronization settings

Synchronization status on your computer

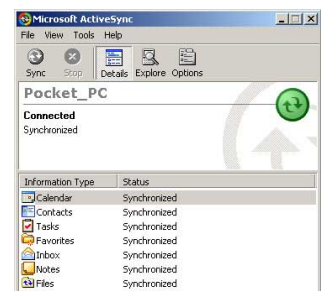


Pocket PC Software

Your device bundles the Pocket PC 2003 which includes several applications such as Microsoft® Pocket Outlook, Pocket Word, Pocket Excel, MSN Messenger, Windows® Media Player, and Microsoft® Reader.


Today screen

The Today screen appears when you turn on your device. The Today screen gives you a summary of the important information for the day. Tap any of the listed items with the stylus to display the details.

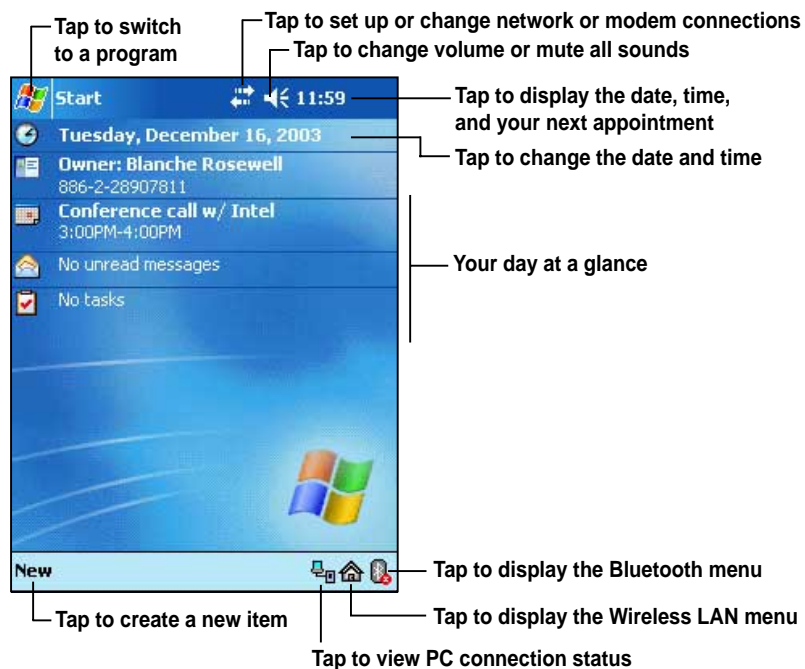

Start menu

From the Start menu, you can select programs, settings, and Help topics. To display the Start menu, tap the  icon from the top of the screen.

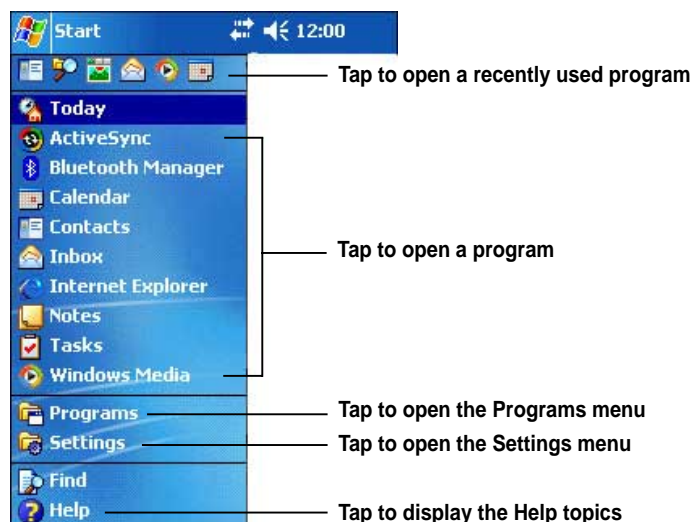

MyPal basics

Use any one of the following ways to enter information on your device

- **Typing** Tap the arrow on the lower right corner of the screen, select Keyboard.
- **Writing** Tap the Pen button on the command bar, use the stylus to write.
- **Drawing** Tap the Pen button on the command bar, use the stylus to draw.
- **Recording** Press the Record button on the side of the device, or tap the Record button on the recording toolbar.


Typing




Writing



Drawing

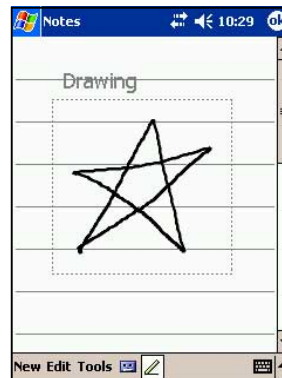

Recording

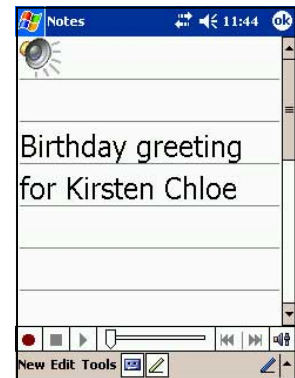

Reference information

Refer to the following sources of additional information for the ASUS MyPal A716

- Operation** MyPal A716 user's manual
- Online Help** Windows Pocket PC Help (*on your device*)
ActiveSync Help (*on your computer*)

Web sites and technical support

- Technical support: +886-2-2894-3447 ext. 7122
- Support Fax: +886-2-2890-7698
- Support e-mail: tsd@asus.com.tw
- Web site: www.asus.com.tw
- Online forum: www.asusnetq.com.tw
- Software download: download.asus.com.tw
- Electronic magazine: www.asusmag.com.tw
- Pocket PC web site: www.microsoft.com/mobile/pocketpc