



Blackjack²¹ pocket



I7009

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 823A4600 Rev.C

For 15 years, Radica has consistently produced the best portable electronic Blackjack games. Our superior programming, graphics and pocket-size design has mastered the competitive Vegas style play. Pocket Blackjack 21 delivers the classic challenge to hit 21, beat the dealer and win big!

Remember:

Aces = 1 or 11 points

Face Cards (K, Q, J) = 10 points

Number Cards = The face value

The type of winning hands and points awarded are listed on the back of the game.

TO PLAY



SOUND button - Press to turn the sound on/off.

ON/DEAL/HIT button

- Press to turn ON the game (The game turns itself off after sitting idle for one minute.)
- **Deal button** deals cards. 10 points are automatically bet for you.
- Press **Deal button** again for the dealer to give you another card (HIT). Continue pressing until you have the highest hand possible without going over 21.

The **DOUBLE** option is available if your first 2 cards total either 10 or 11 points. This option lets you double your bet and be dealt one additional card.

Press the **STAND** button to stop and keep the hand you currently have showing. Once the **STAND** button is pushed, additional cards are dealt to the dealer's hand until completing that hand. If your hand is higher than the dealer's (and less than 21), you win!

The **DEALER / PLAYER** button switches between the player's hand and the dealer's hand.

Note: If the player's point total gets down to zero, 200 points is automatically added to that total. Maximum Score: 99,995

RESET - When a blunt point is inserted, this button RESETS the game to its original settings.

BATTERY INSTALLATION

This game is powered by one (1) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert one (1) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.

- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**
- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **In an environment with radio frequency interference, the product may malfunction and require user to reset the product.**

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through recycling or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic

equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:
RADICA USA Ltd.
 13628-A Beta Road
 Dallas, TX 75244-4510



RADICA:®
 POCKET BLACKJACK 21 IS A REGISTERED
 TRADEMARK OF RADICA GAMES LTD.
 ©1997 - 2006 RADICA GAMES LTD.
 PRODUCT SHAPE™
 ALL RIGHTS RESERVED