

## Quick Setup

1



Unpack these items. Disconnect your game system from your TV.



Connect the wireless video receiver to power and plug it into a wall outlet.



Connect the video receiver to your TV where your game system was connected.



Connect the video transmitter to your game system, plug it into power, and turn it on.



Select your TV's video input just like you would for your game system. Your game should appear on screen.

6

Adjust the antennas on the transmitter and receiver to improve the picture on your TV. Point the sides marked with 4 squares towards each other.

You can get more help from the X10 technical support web site:

http://www.x10.com/support

GUIDE: IN60A

