GNT0063-001AIUS1

0305MOC-MW-SC

DIGITAL OUT DIGITAL SUPERVIDE

EN EN ©2005 Victor Company of Japan, Limited Region code of DVD VIDEO

This player can play back DVD VIDEO discs whose region code numbers include "1. Examples of playable DVD VIDEO discs:



Note of Color system format

This player accommodates the NTSC system, and

also can play back discs recorded with PAL system. (PAL video signals are converted to an NTSC signal and output.)

Supplied accessories

- If anything is missing, consult your dealer • Audio/video cable (Yellow/White/Red) (x 1)
- Remote control (x 1) • R6(SUM-3)/AA(15F) battery (x 2)
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. "DTS" and "DTS Digital Out" are trademarks of
- Digital Theater Systems, Inc. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized

by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

For customer use

Basic Operations

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet Retain this information for future reference Model No Serial No

Turning on and off the player

Each indicator lights up when corresponding

function/mode is activated, or corresponding

 
information is on the main display.

Warnings, Cautions and Others



NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNE The lightning flash with arrowhead

symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral



FLECTRIC SHOCK DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

This equipment has been tested and found to comply vith the limits for a Class B digital device, pursuant to part 15 of the FCC Rules

protection against harmful interference in a residential nstallation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Consult the dealer or an experienced radio/TV

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

For Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR BADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS

To reduce the risk of electrical shocks, fire, etc.: 1. Do not remove screws, covers or cabinet.

2. Do not expose this appliance to rain or moisture. Caution — U/I STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The U/I STANDBY/ON button in any

position does not disconnect the mains line. The power can be remote controlled.

CAUTION HIS PRODUCT USES A LASER SYSTEM LISE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF

REFER SERVICING TO QUALIFIED PERSONNEL. CLASS 1 LASER PRODUCT REPRODUCTION OF LABELS WARNING LABEL INSIDE OF THE UNIT

- VISIBLE OR INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. ATTENTION - RAYONNEMENT LASER VISIBLE OU INVISIBLE EN CAS D'OUVERTURE.

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus. When discarding batteries, environmental problems
- must be considered and local rules or laws governing the disposal of these batteries must be followed strictly. Do not expose this apparatus to rain, moisture, dripping

or splashing and that no objects filled with liquids, such

as vases, shall be placed on the apparatus.

Precautions

- Notes on the power cord When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (1.0 W) is always consumed while the power cord is connected to the wall outlet
- When unplugging the player from the wall outlet, always pull the plug, not the power cord.
- Do not handle the power cord with wet hands! • Disconnect the power cord before cleaning the
- player or moving the player.
- Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents
- If the cord is damaged, consult a dealer and have the power cord replaced with a new one.
- Avoid moisture, water, dust, and high temperatures Do not place the player in moist or dusty places.
- If water gets inside the player, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the player in this state may cause a fire or electrical shock.

Turning on and off the player

Start/resume normal Playback

Buttons To do

• Do not expose the player to direct sunlight or place it near a heating device.

Notes on installation

- Select a place which is level, dry and neither too hot
- nor too cold between 5°C and 35°C (41°F and 95°F). Leave sufficient distance between the player and the TV.
- Do not install the player in a place subject to vibrations.
- Do not put heavy objects on the player To prevent malfunction of the player
- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and
- Do not insert any metallic objects, such as wires hairpins, coins, etc. into the player. Do not block the vents. Blocking the vents may
- damage the player
- To clean the cabinet • Use a soft cloth. Follow the relevant instructions on
- the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

Playable discs

consult your dealer

DVD VIDEO, Audio CD, Video CD, SVCD



- CD-R/RW written in the SVCD, Video CD or Audio CD format • CD-R/RW written in JPEG in accordance with the
- "ISO 9660" format

Supported Digital audio formats: Linear PCM, Dolby Digital, DTS (Digital Theater Systems)*

- If a disc gets dirty, scratched or warped, or due to the disc characteristics or recording conditions, the
- player may not be able to play back such discs. The player can play back audio signals recorded in MIX-MODE CD, CD-G, CD-EXTRA and CD TEXT.
- With some discs, operations may not be possible To play back DTS-encoded DVD VIDEO or DTS encoded Audio CD discs correctly, connect the player to an amplifier with a built-in DTS decoder. Otherwise, playback sound will be distorted.

Unplayable discs

- If you try to play back discs listed below, noise may be generated and causes damage to speakers
- DVD-RW written in the VR format DVD-ROM, DVD-RAM, DVD AUDIO, CD-ROM,
- PHOTO CD SACD
- Unfinalized discs Discs of irregular shape or discs with tape, seals or
- paste on either the label side or playback side. Playing back these discs may damage the player

the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.


Connections

 
Before making connections:

Do not connect the AC power cord until all other connections have been made

• Connect VIDEO OUT of the player directly to the video input of your TV. Connecting VIDEO OUT of the player to a TV via a VCR/an integrated TV/Video system may cause a monitor problem.

Basic Connection

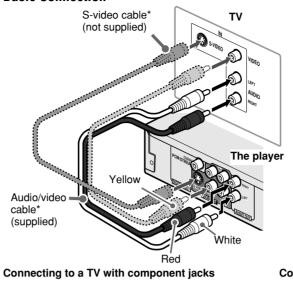



Interlace, press and hold VFP-I/P on the remote control for a few seconds.

- Connect "Y" to "Y," "PB" to "PB(CB)," "PR" to "PR(CR) correctly.
- When using component (Y, PB, PR) jacks, do not connect S-VIDEO jack with the player

About the scanning mode indicator


| [PICTURE SOURCE] of | JRE SOURCE] of Source type of DVD VIDE | | | | | |
|----------------------------|--|---------------------|--|--|--|--|
| the PICTURE menu | Film source | Video source [P] | | | | |
| AUTO | [DDP] | | | | | |
| FILM | [DDP] | [DDP] | | | | |
| VIDEO(NORMAL)/ (ACTIVE) | [P] | [P] | | | | |
| NOTE | | | | | | |

Some progressive TV and High-Definition TV sets are not fully compatible with the player. To check the compatibility of your TV, contact your local JVC


NOTES

- If your TV has a monaural audio input instead of stereo, use an optional audio cable which converts stereo audio output to monaural.
- If your TV is a HDTV or HD-ready TV, you can connect with component (Y, PB, PR) jacks. By connecting with component (Y, PB, PR) jacks, you can select the progressive scanning
- mode which provides the best picture quality. The S-VIDEO jack and component (Y, PB, PR) jacks cannot be used at the same time. When using the S-VIDEO jack, do not connect the component (Y, PB, PR) jacks with the player.

 Connecting to a stereo audio amplifier (receiver)



To enjoy high-quality surround sound, connect the decoder or an amplifier with a built-in decoder

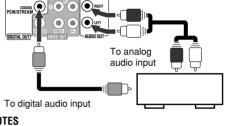

• Depending on the disc, no signal may be outputted from the DIGITAL OUT. Make an analog connection

preference display correctly according to the AUDIO OUTPUT" in "Initial settings.")


Turning on the power

Inserting the AC power plug

After all other connections have been made, insert the AC power plug to the wall outlet firmly.

Installing the batteries in the remote control

Open the compartment cover, and place the two supplied R6(SUM-3)/AA(15F) batteries in the remote control according to the polarity markings ("+" and "-") inside the compartment. Then replace the cover.

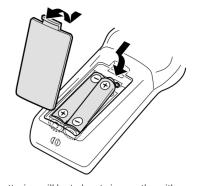

The batteries will last about six months with normal use. If the functions of the remote control become erratic, replace the batteries.

Precautions of the safe use of batteries Observe the following precautions for the safe use of

batteries. If they are used improperly their lives will be settings.") shortened, they may burst or their contents may leak. Remove the batteries from the remote control if it is

- not going to be used for a long period of time. Remove dead batteries and dispose of them
- properly. • Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into
- Never touch liquid that has leaked out of a battery. • Do not mix new and old batteries, or batteries of different types, when placing them.

Turning on and off the player Press **J**ISTANDBY/ON

an incinerator.

 
Initial setup

 
When you turn on the player for the first time after purchase, the following message appears on the TV

EXECUTE DVD PLAYER SETUP? - BASIC PICTURE/AUDIO


YES - PRESS ENTER NO - PRESS CANCEL Before enjoying this player, make the initial settings as

follows: 1 Press ENTER.





 For a normal (conventional) TV, select "4:3 LB" or



signal type, then press ENTER.

receiver or decoder (If you do not connect the player to such a device, press ENTER to finish the setting.)

- Receiver/decoder bearing both Dolby Digital and
- DTS logos, select "STREAM/PCM." • Receiver/decoder bearing neither Dolby Digital nor
- DTS logo, or digital recorder, select "PCM ONLY."

To bring up the DVD PLAYER SETUP display later Press SET UP for a few seconds until the DVD PLAYER

To bring up the menu bar When a disc is inserted, press ON SCREEN twice.

1 Press **◄/►** to select the icon you want to work with.

2 Press ENTER.

After pressing ENTER:

numeric buttons to enter the number you want, then press ENTER.

repeatedly to select the setting you want.

• The available functions differ depending on the

window and the status bar.

• T.REM: Remaining time of current title (DVD) or a disc (CD/VCD/SVCD) (Except for DVD: while stopped, disc total

In any condition

CHAPTER: Current chapter repeat (DVD)

ALL: A-B:

• OFF: Repeat mode deactivated. Select this to quit repeat mode

disc (CD/VCD/SVCD) by the time. In any condition In any condition except program or

VCD/SVCD: In any condition except PBC or program or random playback

random playback

selects the audio language (DVD), sound

track (DVD), or audio channel (VCD/SVCD) during selects the subtitle language (DVD) or

selects a desired scene angle in a multiangle part (DVD only).

99 tracks. 1. After selecting PROG. icon, press the numeric

buttons to specify tracks in the desired order

track is erased and the subsequent programmed tracks move up.

program contents. • To exit the program mode, press ON SCREEN after

Menu bar functions

You can use various functions from the menu bar.

A menu bar for the type of disc inserted will appear DVD: under the status bar. CD:

DVD-VIDEO 8.5Mbps TITLE 33 CHAP 33 TOTAL 1:25:58 ▶

(1) When a pull-down menu appears, press ▲/▼ to

when you can use a certain function.

• TOTAL: Elapsed time of current title (DVD) or a disc (CD/VCD/SVCD)

• TIME: Elapsed time of current chapter (DVD) or

track (CD/VCD/SVCD) Remaining time of current chapter (DVD) or track (CD/VCD/SVCD)

selects repeat mode. During playback DVD:

• TITI F· TRACK:

All track repeat (CD/VCD/SVCD)

Ex.: Menu bar for DVD VIDEO

To dismiss the menu bar and the status bar, press ON

Basic operation procedure

select the setting you want, then press ENTER. (2) When a number-entry box appears, use the

player status. Refer to the explanation below to check

Menu bar functions TIME selects the time mode shown in the display

(while stopped, current track total time)

VCD/SVCD: In any condition except PBC playback

Current title repeat (DVD) Current track repeat (CD/VCD/SVCD)

 
A-B repeat (During playback). After selecting A-B. press ENTER at the beginning point of repeat, then press ENTER again at the end point.

5

"ON SCREEN GUIDE" in "Initial settings.")




2 Press ▲/▼ to select the on-screen language for the preference displays, etc., then press ENTER.



3 Press ▲/▼ to select the monitor type, then press

 • For a wide-screen TV, select "16:9."



 Receiver/decoder bearing Dolby Digital logo and no DTS, select "DOLBY DIGITAL/PCM."

1 Press the button

Advanced Operations

setting. For DVD Video: select audio languages For SVCD/VCD: select the audio channel

SUBTITLE select the subtitle select the view-angle. Changing the Sound Field

changes As the value becomes bigger, the Sound Effect works stronger.

move the zoomed position.

0 2 3 4 5 6 7 8 9 (S) (O) (N) GROUP SOUND SOUND SFFECT VFP MMER

ANGLE SUBTITLE AUDIO ZOOM JV U

To adjust the picture tone 1 Select "USER1" or "USER2."

maintained (LOW/MID/HIGH). **BRIGHTNESS** Adjust this if the picture is bright or dark on the whole (-16 (darkest) to +16 (brightest)). Adjust this if the far and near position is unnatural Adjust this if the picture is whitish or blackish

SATURATION (-16 (blackest) to +16 (whitest)). TINT Adjust this if the appearance of flesh tone is unnatural (-16 to +16). **SHARPNESS** Adjust this if the picture is indistinct (LOW/HIGH). overlapped (-2 to +2).

Set [DIGITAL AUDIO OUTPUT] in the [AUDIO]

3

STANDBY/ON

type of programming, picture tone or personal preferences 1 Press VFP-I/P. preset. USER 1

Selected Preset I GAMMA I MID

Y DELAY general room software in a room with suppressed light

USER1 You can adjust USER2 parameters that affect the store the settings as a user preset. See below.

The brightness of dark and bright portion is

(3) When changing TIME setting, press ENTER • The selected item on the menu bar is shown in green.

the track to be corrected, then press CANCEL. The

Pressing ■ clears all the programmed tracks.

After selecting RND. icon, press ENTER.

The player starts random playback.

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK)



WARNING: TO REDUCE THE RISK OF FIRE OR

For U.S.A

connected

Insert a disc

Press to open the disc tray. 2 Place a disc in the disc tray. • To insert an 8-cm disc, place it in the inner

3 Press ≜ to close the disc trav.

Point toward the remote sensor directly as possible (the operating range is approx. 5 m.)

: Pause. I) / (I): Slow-motion playback with the current

: At the beginning of a scene containing multi-

normal speed. (Only for DVD Video)

Changing the display brightness

Press **DIMMER** to change the brightness of

(variable The disc is played back at about

playback) 1.2 or 1.5 times (FAST)/0.8 or 0.6

times (SLOW) normal speed.

The sound is not muted, and the

he playback position moves back 0 seconds before the current position (only within the same title). * ►II on the player starts/pauses playback.

subtitle does not go off (except for (For SVCD/VCD) The disc is played back at about 2 times (FAST)/0.5 times (SLOW)

> To select 5: press 5 To select 23: press 2, then 3. To select 40: press 4, then 0.

show the menu.

ENTER or ► (SELECT).

press ▶►I or I◄◄. To play back without PBC

(SELECT) to start playback. To reactivate PBC • Press TOP MENU or MENU. Press ■ to stop playback, then ► (SELECT). To switch the scanning mode between Progressive and NOTES

The Non-DVD side of a "DualDisc" does not comply with

Changing the language, sound and scene angle

▲/▼ to select the desired item. 3 Press ENTER to finish the

ANGLE

Each time you press **SOUND EFFECT**, the Sound Effect mode

Zooming the picture Each time you press **ZOOM**, the magnification changes. You can use ▲/▼/◄/► button to

OPEN/ CLOSE 2 Press the button repeatedly or - SLOW + DISPLAY ON SCRE TOP THUN ENTER D

> SET SET PREVIOUS SELECT NEXT

2 Press ▲/▼ to select a parameter, then press ENTER. Adjust this if the neutral color is bright or dark.

4 Repeat step 2 and 3 to adjust other parameters. 5 Press VFP-I/P to finish the setting.



DIGITAL OUT (COAXIAL) jack to a Dolby Digital or DTS

NOTES

connected digital audio equipment. (See "DIGITAL

Changing the picture tone (VFP) The VFP (Video Fine Processor) function allows you to adjust the picture character according to the

 
2 Press
/▶ to select the desired

Parameter NORMAL For watching TV in a CINEMA For watching a movie


3 Press ▲/▼ to adjust the parameter, then press ENTER.

Adjust this if the picture looks separately/

CD.



 ENTER. "4:3 PS." (See "MONITOR TYPE" in "Initial



SETUP display appears.

② ⇒ specifies beginning point of a title (DVD) or a

2. Press ►(SELECT) to start program playback. During program playback, you cannot edit the

the display window.

 When RESUME is ON or DISC RESUME, this player memorizes the position on the disc where you interrupted playback. To resume playback, press ►. To stop playback completely, press ■ again **II*** • Each time you press ■ on the remote control, the still picture advances to the next frame. ►►/◄ Fast forward/backward (While paused) Slow-motion playback Each time you press the button. the playback speed changes. With the label side up ►►I/I<- Skip chapter/track If you press and hold the button during playback, playback is advanced/reversed at 5 times normal speed VARI-PLAY (For DVD Video)

About On-screen guide icons Playback.

Fast forward/backward playback with the current speed. : At the beginning of a scene containing multiangle views.

audio sounds. : At the beginning of a scene containing multisubtitles. You can change the setting so that the on-screen

guide icons do not appear on the TV screen. (See

These limits are designed to provide reasonable

ncrease the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is

technician for help.

Each time you press DISPLAY, OPEN/ CLOSE the display window contents - SLOW +

■ ENTER **▶**

7 8 9

 \odot \odot

GROUP ÉFFÉCT VFP DIMMER

(While playing back) select For SVCD/VCD/CD: 1 2 3 Select track o select 5: press 5. 4 5 6 o select 23: press 2, then 3.

ANGLE SUBTITLE AUDIO ZOOM JVC shown on the TV screen.

• With some discs, you can also select items by entering the number using the numeric buttons. ■ For SVCD/VCD 1 While stopped, press TOP MENU or ► (SELECT) to

2 Press the numeric buttons to select a desired item.

To return to the previous menu, press RETURN. While stopped, press the numeric buttons instead of ▶

ocating the beginning of a scene You can select a title/chapter/ track directly and start playback For DVD Video: (While stopped) select title.

chapter. Using the disc menu You can operate a disc—SVCD/ VCD with Plavback Control*

select 40: press 4, then 0.

• If you press TITLE/GROUP

before entering the number, you

can select the title instead of the

* A method of controlling disc play

for SVCD/VCD by using the disc

1 Press TOP MENU or MENU to show the disc menu. To return to the normal playback, 2 Press ▲/▼/◄/▶ to select a desired item, then press select the normal size by pressing **ZOOM** repeatedly.

To move to the next or previous page of the current menu,

Buttons To do AUDIO

CONTRAST

CHAP. → specifies a chapter to play back from

PROG. specifies the playback order of tracks while stopped (unavailable for DVD). You can program up to

subtitle (SVCD) during playback.

RND. activates random playback while stopped (unavailable for DVD).

clearing the program.


You can play back JPEG files (still pictures) on a CD/CD-R/RW

Precautions

- Use "ISO 9660" as the disc format.
- The player does not support "packet writing (UDF files)" discs • The player supports discs recorded with up to five
- multiple sessions
- The player may be unable to play back a disc due to the characteristics or recording conditions.
- The player recognizes up to the fifth layer of groups 999 files per group (including unplayable files), and up to 250 groups per disc.
- Add the appropriate extension (".jpg") to the file
- The player cannot play back a picture of more than 5120 x 3413 pixels (baseline JPEG) or 2048 x 1536 pixels (progressive JPEG).

Selecting a specific file or group

You can select files or folders (groups) using the Control display on the TV screen. Control display

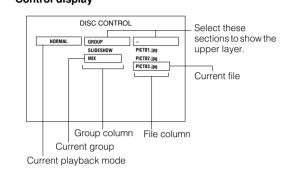

Press ▲/▼/◄/► to move the cursor bar to a desired file, then press ►(SELECT). • When you press ENTER, only the selected file is

Various playback mode

To play back a disc continuously, select NORMAL.

Repeat playback

- 1. While stopped, press ▲/▼/◄/► to move the cursor bar to playback mode. 2. Press ENTER repeatedly to select the desired repeat
 - REPEAT 1: Repeats the current file.
 - REPEAT GROUP: Repeats all files in the current
- REPEAT ALL: Repeats all files on the disc. 3. Press ► to move the cursor bar to the file column. then press ►(SELECT).

Random playback

- 1. While stopped, press ▲/▼/◄/► to move the cursor bar to playback mode.
- 2. Press ENTER repeatedly to select RANDOM.
- 3. Press ► to move the cursor bar to the file column, then press ►(SELECT).

- Program playback 1. While stopped, press ▲/▼/◄/▶ to move the cursor
- bar to playback mode. 2. Press ENTER repeatedly to select PROGRAM.
- 3. Press ▲/▼/◄/► to select the desired file, then press ENTER.
- 4. Repeat step 3 until all the desired files are selected. To erase the last programmed file, press ■ to move the cursor bar to the programmed files column, then press CANCEL.
- 5. Press ►(SELECT).

Various JPEG files playback

To zoom in a picture Press ZOOM

Each time you press ZOOM, you can magnify a JPEG file (x1.5/x2).

This function is not available for some JPEG files depending on their resolution size and JPEG format.

To rotate/reflect a still picture

- Pressing
 I/> rotates the picture by 90°. Pressing ▲ reflects the picture vertically. Pressing ▼ reflects the picture horizontally

To select a JPEG file from the thumbnail list

pressing I◄◄/▶►I

Coun

- 1. Press and hold THUMBNAIL/LIST while a JPEG file is selected on the Control display. 2. Press ▲/▼/◄/► to select the desired picture, then
- press ENTER.

You can change the page of thumbnail list by

Slide show playback of JPEG files

Press ►(SELECT) while a JPEG file is selected on the Control display.

- To select slide show effect
- Press and hold ANGLE-SLIDE EFFECT until [SLIDE EFFECT MODE:] and the current mode appears on the TV screen. By pressing and holding the button repeatedly, you
- can select the effect from 11 effects, random effect selection (RAND), and no effect (NONE). The effect is not applied to progressive JPEG files.

Initial settings

You can change the settings of this player according to your preferences and playing environment

How to set the Initial settings

| MENU LANGUAGE | ENGLISH |
|--------------------|---------|
| AUDIO LANGUAGE | ENGLISH |
| SUBTITLE | OFF |
| ON SCREEN LANGUAGE | ENGLISH |

2 Press →/▶ to select the menu. 3 Press A/▼ to move to select the item.

Press ENTER.

Press ▲/▼ to select the options, then press ENTER.

To dismiss a preference display Press SET UP

NOTES

- Some items in the menus cannot be changed during playback.
- If the upper and lower parts of the menu are cut off,
- adjust the picture size control of the TV. • For settings of the LANGUAGE menu or the PARENTAL LOCK menu, see also the code lists on

| the right. | |
|---|--|
| Depending on the disc, the settings may not apply | |
| correctly | |

LANGUAGE menu

| | - | | | | |
|-----------------------|---|--|--|--|--|
| Item | Contents | | | | |
| MENU LANGUAGE | You can select the default menu language of DVD VIDEO. | | | | |
| AUDIO LANGUAGE | You can select the default audio language of DVD VIDEO. | | | | |
| SUBTITLE | You can select the default subtitle language of DVD VIDEO. | | | | |
| ON SCREEN LANGUAGE | You can select "ENGLISH," "FRENCH," or "SPANISH" as the on-screen language. | | | | |

| PICTURE menu | | | | | |
|----------------|---|--|--|--|--|
| Item | Contents | | | | |
| MONITOR TYPE | You can select the monitor type to match your TV when you play back DVD VIDEO | | | | |
| 16:9 4:3 LB | discs recorded for wide-screen televisions. [16:9] (Wide television screen): For a wide-screen (16:9) TV. [4:3 LB] (Letter Box conversion): For a normal (4:3) TV. Displays a wide-screen picture to fit the width of the TV screen keeping the aspect ratio. [4:3 PS] (Pan Scan conversion): For a normal (4:3) TV. The picture is zoomed up to filling the screen vertically and the left and right sides of the picture are cut off. | | | | |
| PICTURE SOURCE | You can obtain optimal picture quality by selecting the source type of the disc contents. [AUTO]: Normally, select this option. The player recognizes the picture type (film or video source) of the current disc according to the disc information. [FILM]: For a film source disc. [VIDEO(NORMAL)]: For a video source disc with relatively a few movements. [VIDEO(ACTIVE)]: For a video source disc with relatively a lot of movements. | | | | |
| SCREEN SAVER | You can set the screen saver function to ON or OFF. | | | | |
| BACKGROUND | You can use your favorite image as the opening display. [STANDARD]: Display the JVC original image. [USER]: Display your favorite image as the opening display when a JPEG image is registered. [SAVE AS BACKGROUND]: To register a new image, select this while a JPEG image is displayed on the TV. | | | | |

11



AUDIO menu

| Item | Contents | | | | |
|----------------------|--|--|--|--|--|
| DIGITAL AUDIO OUTPUT | Set this item correctly according to the logo on your receiver or decoder. [PCM ONLY]: Receiver/decoder bearing neither Dolby Digital nor DTS logo, or digital recorder. [DOLBY DIGITAL/PCM]: Receiver/decoder bearing Dolby Digital logo and no DTS [STREAM/PCM]: Receiver/decoder bearing both Dolby Digital and DTS logos. | | | | |
| ANALOG DOWNMIX | Set this item properly according to your analog audio connection to play the sound of the surround multichannel audio on a DVD VIDEO. [DOLBY SURROUND]: Select this when connecting to a surround decoder. [STEREO]: Select this when connecting to a stereo amplifier or TV, or in case you want to record from a DVD VIDEO to a MiniDisc, cassette, etc. | | | | |
| D.RANGE CONTROL | Set this item to listen to DVD VIDEO recorded in Dolby Digital format at low or middle volume. [WIDE RANGE]: You can enjoy powerful playback sound. [NORMAL]: Normally, select this. [TV MODE]: Select this if the sound level of DVD VIDEO is lower than the one of TV program to make the sound at a lower volume clear. | | | | |
| OUTPUT LEVEL | Set this item to attenuate the level of the signal output from the analog AUDIO OUT terminals. If the sound from the speaker is distorted, select [LOW]. | | | | |

OTHERS menu

| Item | Contents | | | | | |
|--|--|--|--|--|--|--|
| RESUME | You can select the resume playback mode. [ON]: The player resumes playback from the position where playback has been stopped if the disc is still in the disc tray. [OFF]: This function is deactivated. [DISC RESUME]: The player resumes playback of the last 10 discs played. The player retains a memory of the stopped position of each disc even if the disc is removed from the disc tray. | | | | | |
| ON SCREEN GUIDE | Activate or deactivate the on-screen guide. | | | | | |
| AUTO STANDBY | Set the time until the player turns off (into standby) automatically if playback is stopped for more than 30 minutes or 60 minutes. | | | | | |
| PARENTAL LOCK PARENTAL LOCK COUNTRY CODE US SET LEVEL NONE PASSWORD EXIT | Select this item, then press ENTER to show the PARENTAL LOCK menu for limiting playback by children. Scenes which are limited by this function are not played or replaced with other scenes. [COUNTRY CODE]: Select the code of your country/area. [SET LEVEL]: Select the level of restriction. ("1" is the strictest.) [PASSWORD]: Enter your 4-digit password by pressing the numeric buttons (0 to 9) [EXIT]: Select this and press ENTER to go back to the OTHERS menu. Notes: • Some DVD VIDEO cannot be played by this function. If you try to play such a disc, the PARENTAL LOCK menu appears on the TV and asks whether you want to release the lock or not. To release the lock and play, select "TEMPORARY RELEASE," press ENTER, then enter your password. Otherwise, eject the disc. • To change the setting of the limitation, you need to enter your password. • If you forget your password, enter "8888." | | | | | |

Power does not come on.

Troubleshooting

→ Power plug is not inserted securely. Plug in securely.

Operation

"REGION CODE ERROR!" is shown on the TV → Region code of the inserted disc does not match the player. Check the region code of the disc printed on the disc jacket.

Operation is not possible.

- → Microcomputer malfunction due to lightning or static electricity. Turn off the power and unplug the power cord, then connect the power cord again.
- → Moisture condensation caused by a sudden change of temperature or humidity. Turn off the power, then turn it on a few hours later.
- → The disc does not allow the operation, or an unplayable disc is inserted. Check and replace the

[LOCK] is displayed on the display window and the disc tray does not open.

→ When you press while pressing down ■ on the player in standby mode, the tray lock function is activated. The disc tray cannot be opened or closed in this status. To release this status, press A while pressing down ■ on the player in standby mode.

Picture

Picture is noisy.

→ The player is connected to a VCR directly and the copyguard function is activated. Connect the plaver so that the picture signal flows directly to the TV. With some discs, the picture may be blurred when [PICTURE SOURCE] is set to [FILM] or [AUTO]. Set [PICTURE SOURCE] to [VIDEO (NORMAL)] or [VIDEO (ACTIVE)].

Picture is distorted when using

component (Y, PB, PR) or S-VIDEO jack(s). → Both the component connection and S-video connection are made. Disconnect the unused one

No picture is displayed on the TV screen or the

screen is blurred or divided into two parts. → The player is in the progressive scanning mode though it is connected to a TV via the VIDEO or S-VIDEO jack. Observe the display window. If [P] is turned on, the player is in the progressive scanning

Make the Progressive scanning mode inactive by using the VFP - I/P button.

Audio

DVD VIDEO disc playback sound level is lower than TV broadcast sound level. → Set the [D.RANGE CONTROL] preference to [TV

Analog audio output is distorted. → Set the [OUTPUT LEVEL] preference to [LOW].

So, the playback order can vary.

JPEG

13

No picture comes out.

→ JPEG disc is recorded with the "packet writing (UDF file)." It cannot be played. Check the files you want to play back.

Files are not played in the recorded order. → This player plays the files in the alphabetic order.

| try/Area | ahoo | liet for | Daron | talloc |
|-------------|--------|----------|--------|---------|
| ili y/Mi ca | LUUG | 1121 101 | raitii | lai Luu |
| | | | | |
| ra | CY Cyp | rus | IL. | Israel |

| AD | Andorra | CY | Cyprus | IL | Israel | MV | Maldives | SO | Somalia |
|----|--------------------------|------|-------------------------|------|----------------------------|------|------------------------|-----|----------------------------------|
| AE | United Arab Emirates | CZ | Czech Republic | IN | India | MW | Malawi | SR | Suriname |
| AF | Afghanistan | DE | Germany | IO | British Indian Ocean | MX | Mexico | ST | Sao Tome and |
| AG | Antigua and Barbuda | DJ | Djibouti | | Territory | MY | Malaysia | | Principe |
| Al | Anguilla | DK | Denmark | IQ | Iraq | MZ | Mozambique | SV | El Salvador |
| AL | Albania | DM | Dominica | IR | Iran (Islamic Republic of) | NA | Namibia | SY | Syrian Arab Republic |
| AM | Armenia | DO | Dominican Republic | IS | Iceland | NC | New Caledonia | SZ | Swaziland |
| AN | Netherlands Antilles | DZ | Algeria | IT | Italy | NE | Niger | TC | Turks and Caicos |
| AO | Angola | EC | Ecuador | JM | Jamaica | NF | Norfolk Island | L_ | Islands |
| AQ | Antarctica | EE | Estonia | JO | Jordan | NG | Nigeria | TD | Chad |
| AR | Argentina | EG | Egypt | JP | Japan | NI | Nicaragua | TF | French Southern |
| AS | American Samoa | EH | Western Sahara | KE | Kenya | NL | Netherlands | TC | Territories |
| AT | Austria | ER | Eritrea | KG | Kyrgyzstan | NO | Norway | TG | Togo |
| AU | Australia | ES | Spain | KH | Cambodia | NP | Nepal | TH | Thailand |
| AW | Aruba | ET | Ethiopia | KI | Kiribati | NR | Nauru | TJ | Tajikistan |
| AZ | Azerbaijan | FI | Finland | KM | Comoros | NU | Niue | TK | Tokelau |
| BA | Bosnia and Herzegovina | FJ | Fiji | KN | Saint Kitts and Nevis | NZ | New Zealand | TM | Turkmenistan |
| BB | Barbados | FK | Falkland Islands | KP | Korea, Democratic | OM | Oman | TN | Tunisia |
| BD | Bangladesh | FM | Micronesia (Federated | | People's Republic of | PA | Panama | TO | Tonga |
| BE | Belgium | | States of) | KR | Korea, Republic of | PE | Peru | TP | East Timor |
| BF | Burkina Faso | FO | Faroe Islands | KW | Kuwait | PF | French Polynesia | TR | Turkey |
| BG | Bulgaria | FR | France | KY | Cayman Islands | PG | Papua New Guinea | TT | Trinidad and Tobago |
| BH | Bahrain | FX | France, Metropolitan | KZ | Kazakhstan | PH | Philippines | TV | Tuvalu |
| BI | Burundi | GA | Gabon | LA | Lao People's | PK | Pakistan | TW | |
| BJ | Benin | GB | United Kingdom | | Democratic Republic | PL | Poland | TZ | Tanzania, United |
| BM | Bermuda | GD | Grenada | LB | Lebanon | PM | Saint Pierre and | ļ | Republic of |
| BN | Brunei Darussalam | GE | Georgia | LC | Saint Lucia | PIVI | Miguelon | UA | |
| BO | Bolivia | GF | French Guiana | LI | Liechtenstein | PN | Pitcairn | UG | - 9 |
| BR | Brazil | GH | Ghana | LK | Sri Lanka | PR | Puerto Rico | UM | |
| BS | | GI | Gibraltar | LR | Liberia | PT | Portugal | US | Outlying Islands United States |
| BT | Bahamas Bhutan | GL | Greenland | LS | Lesotho | PW | Palau | UY | |
| BV | | GM | Gambia | LT | Lithuania | PY | Paraguay | UZ | Uruguay Uzbekistan |
| BW | Bouvet Island | GN | Guinea | LU | Luxembourg | QA | Qatar | VA | |
| | Botswana | GP | Guadeloupe | LV | Latvia | RE | Réunion | VA | Vatican City State (Holy See) |
| BY | Belarus | GQ | Equatorial Guinea | LY | Libyan Arab Jamahiriya | RO | Romania | VC | Saint Vincent and the |
| BZ | Belize | GR | Greece | MA | Morocco | RU | Russian Federation | 1 | Grenadines |
| CA | Canada | GS | South Georgia and the | MC | Monaco | RW | Rwanda | VE | Venezuela |
| CC | Cocos (Keeling) Islands | GS | South Sandwich | MD | Moldova, Republic of | SA | Saudi Arabia | VG | |
| CF | Central African Republic | GT | Guatemala | MG | Madagascar | SB | Solomon Islands | VI | Virgin Islands (U.S.) |
| CG | Congo | GU | Guam | МН | Marshall Islands | | | VN | Vietnam Vietnam |
| CH | Switzerland | GW | Guinea-Bissau | ML | Mali | SC | Seychelles | VU | Vanuatu |
| CI | Côte d'Ivoire | GY | Guinea-bissau Guyana | MM | Myanmar | SD | Sudan | WF | |
| CK | Cook Islands | HK | Hong Kong | MN | Mongolia | SE | Sweden | VVI | Islands |
| CL | Chile | HM | Heard Island and | MO | Macau | SG | Singapore | WS | |
| CM | Cameroon | HIVI | McDonald Islands | MP | Northern Mariana | SH | Saint Helena | YE | Yemen |
| CN | China | HN | Honduras | 1.4 | Islands | SI | Slovenia | YT | Mayotte |
| CO | Colombia | HR | Croatia | MQ | Martinique | SJ | Svalbard and Jan Mayen | YU | Yugoslavia |
| CR | Costa Rica | HT | Haiti | MR | Mauritania | SK | Slovakia | ZA | South Africa |
| CU | Cuba | HU | | MS | Montserrat | SL | Sierra Leone | ZM | |
| CV | Cape Verde | _ | Hungary | MT | Malta | SM | San Marino | | |
| CX | Christmas Island | ID | Indonesia | MU | Mauritius | SN | Senegal | ZR | Zaire |
| | | ΙE | Ireland | IVIO | IVIAUITIUS | | | ZW | Zimbabwe |

Language codes list for the LANGUAGE menu AA Afar CA Catalan CO Corsican AF Afrikaans CS Czech AM Ameharic AM Ameharic AM Arabic AS Assamese AY Aymara AZ Azerbaijani BA Bashkir BE Byelorussian BG Bulgarian BG Bilgaria BG Bilgaria BG Bilsiama BG Bilsiama

LIMITED WARRANTY USA ONLY ONLY FOR PRODUCT PURCHASED IN U.S.A. CONSUMER VIDEO 1-90 JVC COMPANY OF AMERICA (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. ("The Warranty Period") THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND WHAT WE WILL DO: f If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis. Color televisions with a screen size of 27" or greater qualify for in-home service. In such cases, a technician will come to your home and either repair the TV there or remove and return it if it cannot be repaired in your home. WHAT YOU MUST DO FOR WARRANTY SERVICE Please do not return your product to the retailer Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s). Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website http://www.jvc.com. If your product qualifies for in-home service, the service representative will require clear access to the product. If you have any questions concerning your JVC Product, please contact our Customer Relations Department at 800-252-5722 WHAT IS NOT COVERED: This limited warranty provided by JVC does not cover: 1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed; 2. Initial installation, installation and removal from cabinets or mounting systems. 3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning; Barnage that occurs in supment, due to act or door, and cosmetic damage, Signal reception problems and failures due to line power surge; User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90days from the date of purchase; R Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase). Deteries except final nectial guiposes, including, but not limited to rental. Products used for commercial purposes, including, but not limited to rental. Loss of data resultant from malfunction of hard drive or other data storage device There are no express warranties except as listed above. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. V JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. IVC COMPANY OF AMERICA 1700 Valley Road DIVISION OF JVC AMERICAS CORP. http://www.jvc.com

* REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT. Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet.

Serial No.

Name of dealer

TO OUR VALUED CUSTOMER ——

12

THANK YOU FOR PURCHASING THIS JVC PRODUCT. WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

NEED HELP ON HOW TO HOOK UP? **NEED ASSISTANCE ON HOW TO OPERATE? NEED TO LOCATE A JVC SERVICE CENTER?** LIKE TO PURCHASE ACCESSORIES?

JVC IS HERE TO HELP! **TOLL FREE: 1(800)252-5722** http://www.jvc.com

Remember to retain your Bill of Sale for Warranty Service.

 Do not attempt to service the product yourself To prevent electrical shock, do not open the cabinet There are no user serviceable parts inside.

16

Audio outputs

Frequency response

Audio characteristics

DVD (sampling frequency 48 kHz):

Digital bitstream signals)

Please refer to qualified service personnel for repairs

Specifications Specifications and appearance are subject to change without prior notice.

General

Readable discs:

DVD VIDEO, DVD-R (Video format), DVD-RW (Video format), SVCD, Video CD, Audio CD (CD-DA). CD-R/RW (CD-DA, SVCD, Video CD, JPEG) Video format: NTSC, 480i/480p selectable

Other

Power requirements: AC 120 V ∼, 60 Hz Power consumption.

11.0 W (POWER ON), 1.0 W (STANDBY mode) Mass: 1.5 kg (3.3 lbs) Dimensions (W x H x D):

435 mm x 44 mm x 201.5 mm (17-3/16 inch x 1-3/4 inch x 7-15/16 inch)

Video outputs

Component (pin jacks)
Y Output: 1.0 Vp-p (75 Ω) *PB/PR Output:* 0.7 Vp-p (75 Ω) VIDEO (pin jack): 1.0 Vp-p (75 Ω) S-VIDEO (S jack) *Y Output:* 1.0 Vp-p (75 Ω)

C Output: 286 mVp-p (75 Ω) Horizontal resolution: 500 lines or more

ANALOG OUT (pin iack): 2.0 Vrms (10 k Ω)

DIGITAL OUT (COAXIAL): 0.5 Vp-p (75 Ω termination)

CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz

DVD (sampling frequency 96 kHz): 2 Hz to 44 kHz

Total harmonic distortion: less than 0.009%

2 Hz to 22 kHz(4 Hz to 20 kHz for DTS and Dolby

Wow and flutter: Unmeasurable (less than ± 0.002%)

15

Model No.

Purchase date