

# BEKO

INTEGRATED DIGITAL HD READY COLOUR TELEVISIONS

22WLP530HID



**HD**  
**ready**



Operating Instructions

# TABLE OF CONTENTS

<b>1.Important Information .....</b>	<b>1</b>
1.1 Cleaning the screen and cabinet.....	1
1.2 Disposing of your TV at the end of service life.....	1
1.3-Superior features of your integrated digital television.....	1
1.4-Receiving digital broadcasting channels .....	1
1.5-Changing the plug.....	1
<b>2.Features of your new television .....</b>	<b>2</b>
2.1-Special Features.....	2
<b>3.Important Safety Instructions.....</b>	<b>3</b>
<b>4.Start .....</b>	<b>6</b>
4.1-Aerial connection.....	6
4.2-Powering on your TV and the initial use .....	6
4.3-Batteries.....	6
<b>5.Your new television .....</b>	<b>7</b>
5.1-TV Control Panel .....	7
5.2-External Connections .....	7
5.3-Remote Control.....	8
<b>6.Performing the initial power-on settings .....</b>	<b>9</b>
6.1-TV controls.....	9
6.2-Turning on the TV and Setting the Channels.....	10
6.3-Performing Digital Tunings.....	10
6.4-Performing Analogue Tunings.....	13
<b>7.Settings of Your New Television .....</b>	<b>17</b>
7.1- Sound Menu Settings.....	17
7.2-Picture Menu Settings .....	17
7.3-Features Menu Settings.....	19
<b>8.Teletext.....</b>	<b>20</b>
<b>9.External Equipment Connections: .....</b>	<b>22</b>
<b>10.Help and tips .....</b>	<b>25</b>
<b>11.Technical specifications chart .....</b>	<b>26</b>
<b>12.Main UK Transmitter Stations.....</b>	<b>27</b>
<b>13.Guarantee and Service.....</b>	<b>28-29</b>

# 1 Important Information

LCD panels are produced with state-of-the-art technology. However, there may be black or lit spots on the screen under certain circumstances. That does not mean that the product is faulty.

## 1.1 Cleaning the screen and cabinet...

After powering off, wipe the screen and the cabinet clean with a soft and dry cloth. We recommend that you do not use patented polishes or solvents to clean the screen or cabinet since they may cause damage.

## 1.2 Disposing of your TV at the end of service life...

The cold cathode fluorescent lamp found in your LCD screen contains a very small amount of mercury. Once your TV set has completed its physical life, please dispose of it in accordance with local government regulations or leave it at a recycling centre.

## 1.3-Superior features of your integrated digital television

 
 
This television can receive and process all analogue and digital broadcastings. This television set has an integrated digital and analogue receiver. The digital receiver unit processes the signals coming from digital transmitters and can convert them into superior sound and image qualities. TV Guide (valid for digital broadcastings only) informs you about changes in the program list briefly and provides program lists of all digital broadcastings for a number of forthcoming days. You can display detailed information about each program by pressing a single button if this feature is supported by the broadcasting enterprise. This television has a comprehensive and user friendly menu configuration.

## 1.4-Receiving digital broadcasting channels

You will need outdoor or indoor (passive or active indoor antennas used together with its own power cord) antennas to receive digital broadcastings. Contrary to the analog broadcastings, all digital broadcastings may not have their own transmission frequency. Instead, various digital broadcasting channels are gathered in regional or national groups called bouquets. You can find current transmission data from teletexts of various broadcasting enterprises or from TV guide or from the internet.

## 1.5-Changing the plug

The supplied mains cable already has a mains plug fitted, however should you need to replace it at any time please refer to the appropriate wiring information below for your particular cable.

<p><b>IMPORTANT</b></p> <p>The wires in the mains lead are coloured in accordance with the following code: Blue - Neutral Brown - Live</p>  <p><b>5 A FUSE</b></p>	<p>As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red. No connection is to be made to the Earth terminal of the plug. If a 13 Amp (BS1363) Plug is used, fit an ASTA approved 5 A fuse If your product is fitted with a moulded plug which requires replacement please cut off and dispose of it safely, then rewire as shown.</p>
<p><b>IMPORTANT</b></p> <p>The wires in the mains lead are coloured in accordance with the following code: Blue - Neutral Brown - Live Yellow/Green - Earth</p>  <p><b>5 A FUSE</b></p>	<p>As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E, or by the earth symbol, or coloured green or green and yellow. The wire which is coloured blue or black must be connected to the terminal which is marked with the letter N or coloured Black. The wire which is coloured brown or red must be connected to the terminal which is marked with the letter L or coloured Red. If a 13 Amp (BS1363) Plug is used fit an ASTA approved 5 Amp fuse. If your product is fitted with a moulded plug which requires replacement please cut off and dispose of it safely, then rewire as shown.</p>

## 2 Features of your new television

---

We would like this product, which has been manufactured in modern facilities in accordance with total quality principles, to offer you the best performance. Therefore, we would like you to read this entire manual carefully before you use your product and keep it for future reference.

### 2.1-Special Features

- HDMI connection
- HD-Ready
- HDCP feature
- SCART connection
- Audio/Video PHONO inputs
- PC connection
- Component connection through VGA
- S-VHS connection through scart
- Low energy consumption
- Available for cable broadcasts
- Automatic switch-off feature that can be programmed between 15 and 120 minutes
- 10 pages Teletext
- Fasttext
- Toptext (\*)
- Digital teletext
- EPG (Electronic Program Guide) feature
- CI slot input
- Software upgrade by air transmission
- 6 Digital Favorite channel lists
- MHEG 1.06
- Automatic new channel search feature
- Sharpness feature in Color Transitions (CTI)
- Sharpness feature and picture resolution (LTI) in black-white transitions
- A clearer Picture made possible with a Digital Comb Filter
- DNR Noise reduction
- Manual fine tuning
- 100 Analog Program memory
- 1000 Digital Program memory
- Returning to the last viewed program by single button (SWAP)
- Infrared remote control equipped with all functions
- Feature of viewing the NTSC broadcast via scart input
- Easy performance of the processes with the advanced menu system
- Panel Lock
- 4:3, 16:9, 14:9 Subtitle, Letterbox, Auto picture formats
- Automatic broadcast detecting system by means of WSS feature
- Renaming, deleting, skipping and relocating the programs.

**HDMI**<sup>™</sup> HIGH DEFINITION MULTIMEDIA INTERFACE HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

(\*): These features are optional and they are not available on all models.

### 3 Important Safety Instructions



This symbol is used to warn the user about the “dangerous voltage” contained inside the TV that may create a risk of electrical shock.




This symbol is used to remind the user important usage and service instructions supplied with the TV

- 1) Please **READ** the operating instructions before using the TV for the first time.
- 2) Please observe the instructions contained in the Operating Instructions.
- 3) Please consider all warnings.



- 4) **MAKE SURE** that all power connections (extension cables and the connections between the TV components) have been made properly and in accordance with the manufacturer’s instructions. Before making or changing the connections, power off the TV and unplug the mains connection plug.

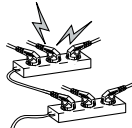


- 5) If you have any doubts regarding the installation, operation or safety of the device, please **REFER** to the retailer.


- 6) **BE CAREFUL** with glass panels and covers on the TV. The screen glass may break and cause serious injuries if something hits it.

- 7) To ensure adequate ventilation, please leave a clearance area of at least 10 cm around the television. This clearance prevents the TV from overheating and consequently causing damage.
  - Using the TV in dusty environments should also be avoided.
  - Never block the slots and openings by placing the TV on a bed, sofa, pillow or other similar surfaces.


- Never install the TV into closed places such as bookcases or cabinets unless adequate ventilation is provided.

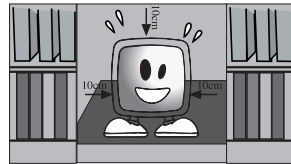

- 8) **DO NOT COVER** the ventilation openings of the TV with items such as newspapers, table-clothes, curtains, etc. Overheating causes damage and shortens the service life of the TV

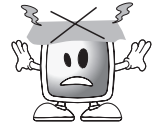

- 9) Your TV may be damaged if you place it under direct sunshine or close to a heater. Please abstain from using the TV in very hot or humid locations or in places where the temperature is likely to decrease below 5°C (41°F). **DO NOT PLACE** on or near the TV any hot objects or items with open flame such as candles or any night lamps. The high temperature can melt plastic parts and cause a fire.

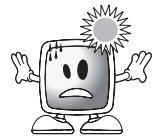


10) Never operate your TV close to water. Operating your TV, for example, near a bathtub, washbasin, wet basement and swimming pool can cause fire or electric shock.



• Do not allow your TV to get wet. Never pour any liquids onto the TV. Do not operate your TV if any solid or liquid substance enters into it. This can cause electric shock and your TV may be damaged. Have it checked immediately by qualified personnel.




• Keep open flame sources (such as candles) away from your TV in order to avoid risk of fire.

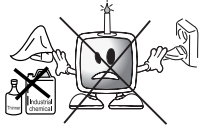

11) **DO NOT USE(MODEL DEPENDANT)** headphones at extremely high volume levels since this may cause permanent loss of hearing.



12) Operate your TV only in the 230 V 50Hz voltage range. Use the mains lead supplied with the product. If your TV is a grounded (Class I) product, then it must be connected to an earthed socket.

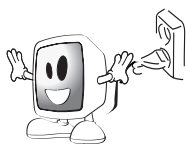

- **The socket into which you plug in the AC power cable must be within easy reach.**
- **Unplug the TV in order to disconnect it from mains power.**

13) Make sure that the mains lead is not stepped on and that there is no bending at the plug sections, plug heads and TV output point.



14) Use only the accessories specified by the manufacturer.


15) Use only, brackets or stands specified by the manufacturer or sold along with the TV. Place your TV on a level surface.




16) Unplug the mains lead cable during thunderstorms or when you will not use your TV for a long period of time.



17) Consult authorised service personnel for service requirements. Never attempt to repair the TV yourself. Opening the cabinet can expose you to dangerous voltages or other hazardous situations. Service is required in situations such as damage to the mains lead or its plug, water spills or substances falling into the TV, the TV is subjected to rain or moisture, it does not operate normally or it is dropped.

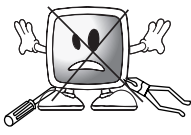

18) Wipe the TV cabinet clean with a soft and dry cloth. Wipe dust from the screen gently with a soft cloth. Stubborn stains can be cleaned with a cloth slightly moistened with soap and lukewarm water. Never use solvents such as thinner or gasoline for cleaning. Unplug the mains lead from the socket when cleaning the TV. Otherwise, there is the risk of electric shock.

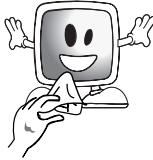


**Note 1:** This is a Class A product. During operation, the device can cause radio interference. In this case the user may have to remedy this. Please contact your specialist dealer.

**Note 2:** Electromagnetic fields can cause temporary performance degradation. This can be distinguished as noise in the image.

**Note 3:** Tighten the screws that are used to connect the wall mount kit by 1 Nm (10kgfcm) maximum.

19) Do not dispose of the batteries in a fire.

- Do not short circuit, dismantle, overheat or burn the batteries.

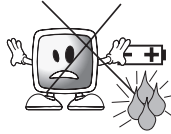

**There is the risk of explosion if the batteries are not replaced correctly. Replace only with the same or equivalent type batteries.**

22) For stand fitting and removal please refer to loose leaf sheet inside tv carton.

20) Disposing of the exhausted batteries:

- Dispose of the exhausted batteries in accordance with the local laws and regulations in order to protect our environment.



21) Do not dispose of your TV with regular household waste. Observe local laws and regulations for disposal.



## 4 Start

Remove your television carefully from its box. You can keep the packaging of your television to use in future.

### Contents of the box

Power cable (\*)

Remote control


2 batteries

Note: The Scart, VGA (\*) and PHONO cables are not supplied with the device.

(\*) These features are optional and may not be available on all models.

### 4.1-Aerial connection

If you use a 75 Ohm coaxial cable (round

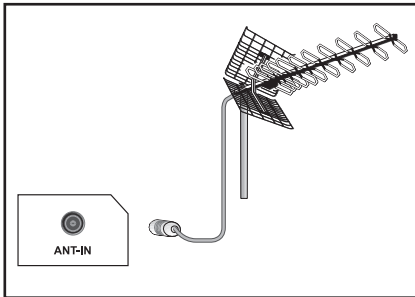

cable) as an antenna cable, connect the antenna plug directly to the antenna input located on the TV.

Motorized vehicles, energy lines and telecommunication lines affect your antenna. Therefore, be careful to install your antenna away from these and metal surface in such a way that it shall not swing. Do not make your antenna cable longer than required and do not coil it. Make sure that it is not crimped passing through a window or door. Your antenna and cable might be affected by natural phenomena such as rain, wind, smoke and humidity over time. Periodically check your antenna and equipment.

### 4.2-Powering on your TV and the initial use

1. Insert the power cable into the appropriate power supply input located on the back panel of the LCD TV.

2. Insert the plug of the mains lead, supplied with the device into the mains socket.

**Note 1:** Your TV will switch to the **stand-by** mode in five minutes if there is no broadcast signal from aerial.



3. To power on your television, press any numerical key or **P+** or **P-** keys on the remote control.

**Note:** If you are not going to use your television for a long time, unplug its power cable from the socket.

### Initial power on and performing settings

To set up your television, read the sections on the TV controls and making the channel settings.


### 4.3-Batteries

Open the lid of the battery compartment and make sure that you have placed the batteries in the correct direction. For this remote control, UM-4, IEC R03 or AAA 1.5 V batteries are suitable.

Do not throw your old batteries into the fire, discard them in a dedicated waste area for this purpose.

Do not mix used batteries with new ones or different types of batteries together.




The performance of the remote control will be reduced at a distance of 8 meters from or at an angle of 30 degrees beyond the centre of the TV.

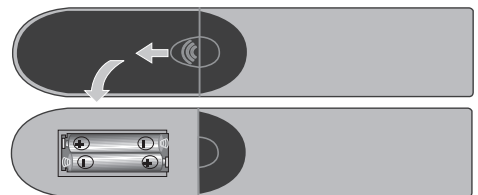




# 5 Your new television
  
## 5.1-TV Control Panel

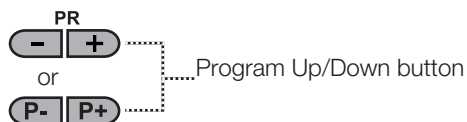

**Bright light:** TV is in Stand-by  
**Dimmed light:** TV is On  
**No light:** Power Cable is not connected

## 5.2-External Connections

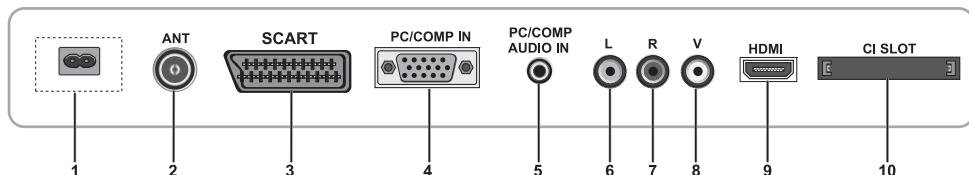

- 1- Power input
- 2- Aerial input
- 3- Scart input
- 4- VGA (PC/YPbPr connection input)
- 5- PC/Comp audio input
- 6- Audio input L
- 7- Audio input R
- 8- Video input
- 9- HDMI input
- 10- CI Slot Input

### Important Note:




































**Note 1:** RGB input via Scart offers the best picture quality.

**Note 2:** Above drawing for external connections is representational. Their order and places on your TV may be different.

Please see Technical Specifications Table on page 26 for the available external connections on your television.

## 5.3-Remote Control



-  Stand-by mode On/Off button
-  Temporary sound mute (Mute) button
-  Source menu button
-  Picture Format selection button
-  Subtitle selection button (D)
-  Sound selection button (D)
-  Numeric buttons
-  Favorite channel selection button (D)
-  Page Stop button in Txt mode (Hold)
-  EPG selection button (D)
-  Question/Answer button in Txt mode (Reveal)
-  Information button
-  Index page button in Txt mode
-  MENU button
-  Exit menu button
-  Return to previous menu button
-  Up movement button (Menu)
-  Next page selection button in Txt mode
-  Down movement button (Menu)
-  Previous page selection button in Txt mode
-  Right / Left movement buttons (Menu)
-  Menu selection confirm
-  Volume down button
-  Volume up button
-  Program forward selection button
-  Program backward selection button
-  Red teletext button
-  Start Digital Teletext
-  Green teletext button
-  Yellow teletext button
-  Blue teletext button
-  TV/Teletext selection button
-  Teletext page enlarge button (Double)
-  Picture Mode selection button
-  Page update button in Txt mode (Update)
-  Last viewed program selection button
-  Sub page button in Txt mode (Sub Page)

**Note:** In the analog mode when no menu is open on the screen, **Up/Down** movement buttons function as program **forward/backward** buttons, and **Left/Right** movement buttons perform Volume **up/down** functions.

**(D) :** Digital Mode Only

## 6 Performing the initial power-on settings

### 6.1-TV controls

#### 6.1.1-Temporary on/off (STAND-BY)

When you press the red **STAND-BY** button located on the upper left hand side of your remote control while your television is switched on, the sound and the picture will go off. In the stand-by mode, the power indicator of your television will glow brighter. To switch your television back on, either press any numeric button or **PR+ / PR-** buttons.

**PR-** buttons.

**Caution!** If you are not going to use your television for a long time, unplug its power cable from the socket.

#### 6.1.2-Channel Selection

You may select whichever program number you would like by pressing the **PR+ / PR-** buttons located on your television and your remote control. To select the programs that are above 9, you can use the Numerical buttons. You may enter the number of the program you would like to select using the numerical buttons. For example, to switch to the program

number 12, press respectively the numeric buttons 1 and 2 on your remote control. You can perform the program selection also from the Program Table.

#### 6.1.3-Digital TV, Analog TV and AV Mode Selection

Press the **AV** button on your remote control. **SOURCE** menu will be displayed. Select **DIGITAL TV, ANALOG TV** or desired **AV** mode from the Source menu with **Up/Down** movement buttons and confirm with **OK** button so that your television will switch to the source you have selected.

#### 6.1.4-Performing the Volume setting

You can adjust the volume of your television by using the **VOL+ / VOL-** buttons on your remote control.

#### 6.1.5-Temporary sound mute (MUTE)

To temporarily mute the sound of your television, press the **MUTE** button on your remote control. In that case, **MUTE** symbol will appear on the screen. When you press the same button a second time, the sound will be restored. If you press the **VOL+** button while in the Mute mode, the sound level is increased and the Mute function is aborted.


#### 6.1.6-Returning to Selected Program (SWAP)

Allows you to switch between the current program you watch and the last selected program. For example, if you change the channel to Program 11 while you were watching Program 1, press **SWAP** button to switch back to Program 1. Press **SWAP** button to switch back to Program 11 again.

PR 01 → SWP PR 11 → SWP PR 01

#### 6.1.7-Main Menu

Press the **MENU** button. The Menu including all the setting menus will appear on the screen. Navigate through the Menu titles with the **Up/Down** movement buttons and press the **OK** button to select the desired menu. If you want to exit the menu in any step, just press the **EXIT** button. Press **BACK** or **MENU** buttons to return to the previous Menu while you are in a sub menu.

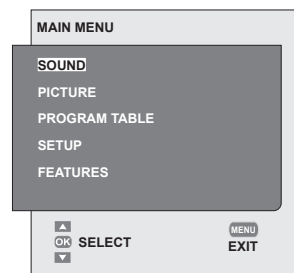

## 6.2-Turning on the TV and Setting the Channels

When you turn on your television for the first time, **FIRST TIME INSTALLATION CHECK AERIAL CABLE IS CONNECTED. PRESS OK KEY TO CONTINUE** message is displayed.

If the antenna connections are correct, press **OK** button to continue. **COUNTRY SELECTION** menu will be displayed. Select the country by using **Up/Down, Right/Left** movement buttons and press **OK** button to start the auto programming. **Channel Search** menu will be displayed and Digital channels are scanned and stored in the memory.

After completion of the searching process **Channel Search Results** menu will be displayed. Number of TV and Radio channels already detected and stored in the memory at the end of the search process will be displayed in this menu. Finish the Digital channel searching process by pressing the **OK** button.


**PRESS OK KEY TO START ANALOG SEARCH PRESS MENU KEY TO EXIT** message will be displayed. You can make Analog channel tuning with **OK** button or finish the searching process by pressing the **MENU** button.

## 6.3-Performing Digital Tunings

You can either tune the Digital programs automatically or manually and store them in your television.

### 6.3.1-Automatic Tuning of Channels and Storing in the Memory


Press **AV** button on your remote control, select **DIGITAL** tab from the **SOURCE** menu by using **Up/Down** movement buttons and confirm by pressing the **OK** button. Your TV will switch to Digital mode. Press **OK** **MENU** button, **MAIN MENU** will be displayed. Select **SETUP** tab with down movement button and confirm with the **OK** button. **SETUP** menu will be displayed.

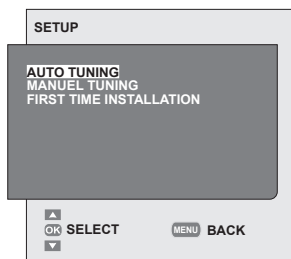

Select **AUTO TUNING** tab and confirm by pressing the **OK** button. **COUNTRY SELECTION** menu will be displayed.



Select the country by using **Up/Down, Right/Left** movement buttons and press **OK** button to start the auto programming. **Channel Search** menu will be displayed and Digital channels are scanned and stored in the memory.

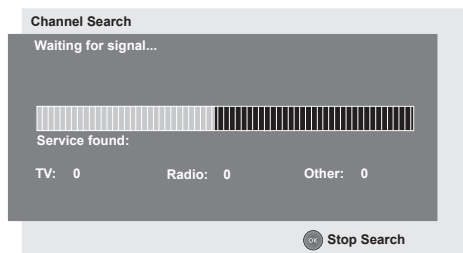


**Note:** You can also access **Auto Tuning** menu from the **System Menu** submenu under **Digital Features** menu.

### 6.3.2-Manual tuning of channels and storing in the memory


Press **MENU** button in digital mode and **MAIN MENU** will be displayed. Select **SETUP** tab with down movement button and confirm with the **OK** button. **SETUP** menu will



be displayed. Select **MANUAL TUNING** tab and confirm by pressing the **OK** button. **Manual Search Parameters** menu will be displayed.

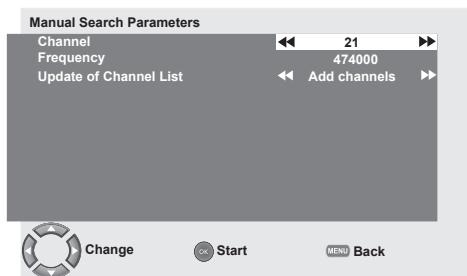

Highlight the **Channel** tab by means of **Up/Down** buttons and directly enter the frequency number of the channel you want to search, if you know, by using the numeric keys on the remote control. If you don't know the frequency number, you can scan frequencies by using the **Left/Right** movement buttons. After entering the frequency you want to search, highlight **Update of Channel List** tab with **Up/Down** movement buttons and select either one of **Add channels**, **Replace channels** or **Erase channel list** items, then press **OK** button to start searching. Channels will be searched or changed according to the search method you have chosen.

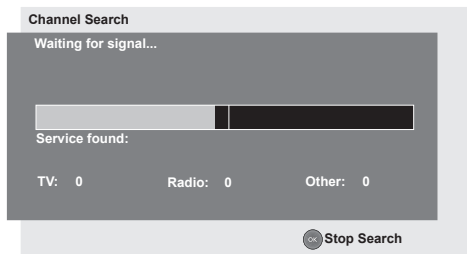

**Add Channels** : With this option, the new channels in the frequency which is desired to be manually searched will be scanned and added to the existing channel list.

**Replace Channels** : With this option, you can update the existing channel list with the modifications made by the broadcasting enterprise.

**Erase Channel List** :With this option, you can delete all channels in the existing channel list to store only the new channels in the desired frequency into the memory.

**Note:** You can also access **Manuel Tuning** menu from the **System Menu** submenu under **Digital Features** menu.


### 6.3.3-First Time Installation

If you select this function, all channel information in the memory will be deleted. The OSD where country selection shall be made is displayed and channel search is made automatically. First, digital channels are searched. You can start Analog channel search by pressing the **OK** button after the digital channel search is completed.

### 6.3.4-Program Table

With the program table, you can see the stored channels in a list, switch between TV channels and Radio channels or create your favorite channels list for 6 TV and Radio channels according to your preference.

Select the **PROGRAM TABLE** item from the main menu by means of **Up/Down** movement buttons to access program table and press **OK** button to confirm. Program Table will be displayed. You can also access the program table menu directly by pressing the **OK** button on your remote control when there is not any open menu on the screen.

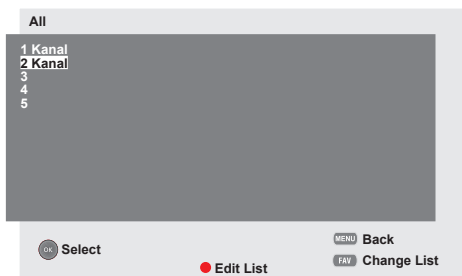

### 6.3.4.1-Displaying Television and Radio channel lists and selecting the channels

When the program table menu is opened, all TV channels stored in the list are displayed. You can navigate between the TV and radio channels with **Up/Down, Left/Right** movement buttons or you can select any channel you wish to watch or listen to by pressing the **OK** button. Press the **RED** button on the remote control when you are in the program menu to switch to the Favorite Channels list. Favorite Lists will be displayed. You can also select the TV and Radio channels directly by means of the **FAV** button on your remote control.

### 6.3.4.2-Creating favorite channels list


You can create 6 favorite channel lists according to your personal preferences; to do this, press the **RED** button when you are in Program table. Favorite Lists will be displayed. All TV channels can be seen on the Left hand side and favorite channels on the Right hand side. In All TV Channels list select the channel you want to add to the favorites list by using **Up/Down** movement buttons and press **OK** button to confirm; name of the channel you have selected will be displayed on the favorite channels list. Repeat the same steps for every channel you want to add. To create a different favorites list, you can change the favorite channels list by pressing **FAV** button on your remote control and add channels to these lists as described above. To select directly the favorite channels lists you have created, you can use the **FAV** button on your remote control.

**Note:** You can also access the **Favourite Lists** menu from the **Digital Features** menu.

### 6.3.5-Electronic TV Guide (EPG)

If it is supported by the broadcasting enterprise, the electronic TV guide gives entire general information about the programs of the next 8 days (for digital channels only).

To display the Electronic TV Guide, press **EPG** button on your remote control. Electronic TV Guide will be displayed.

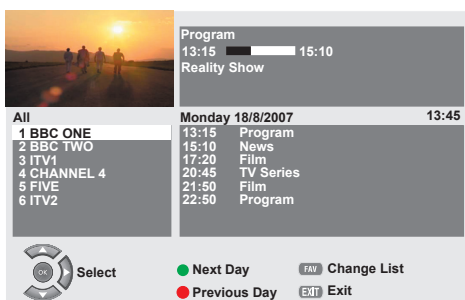


You can select the channel by using the **Up/Down** movement buttons and navigate through the program data with **Right** movement button. To get further information about the program press **INFO** button and detailed information about the selected program will be displayed. Press the **GREEN** button to display next day's program information, press the **RED** button to display previous day's program information and press **OK** button to add Reminder to any program. You can use the **FAV** button on your remote control to switch between TV, Radio and Favorites lists in the **EPG** menu.

**Important Note:** Not all broadcasting enterprises supply a detailed TV guide. Most of the broadcasting enterprises provide daily program information, but they do not give detailed explanations. Some broadcasting enterprises, on the other hand, do not give any program information at all.

### 6.3.6-Digital Features

To enter digital features menu, select **FEATURES** tab from the main menu by using **Up/Down** movement buttons. Select **DIGITAL FEATURES** tab from **FEATURES** menu by using **Up/Down** movement buttons and press **OK** button to confirm. **DIGITAL FEATURES** menu will be displayed.

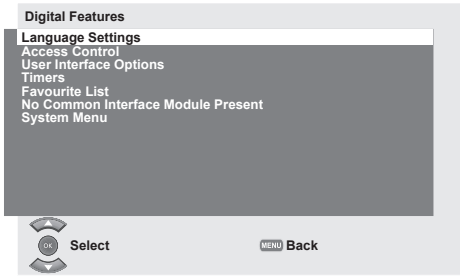

You can select the menu headings with **Up/Down** movement buttons to make settings.

### 6.3.6.1-Language Settings


You can select subtitle and sound language provided that the broadcast is supported for all digital broadcasting channels. Unless you make any selection, the language supported by the broadcaster will be selected automatically.



### 6.3.6.2-Access Control

With this feature you can preclude channels that are not appropriate for children and set age restriction for programs being broadcasted.

**Lock/Unlock Channels:** Select **Lock/Unlock Channels** tabs from **Access Control** menu and press **OK** button to confirm. All TV Channels list will be displayed; select the channel you want to preclude with **Up/Down** movement buttons and press **OK** button to confirm. **x** mark will be displayed at the beginning of the channel name and thus channel is precluded. To remove such preclusion, repeat the same steps. Select the channel to access the precluded channel and enter the correct password into the displayed password screen. The channel will not be displayed unless the correct password is entered.

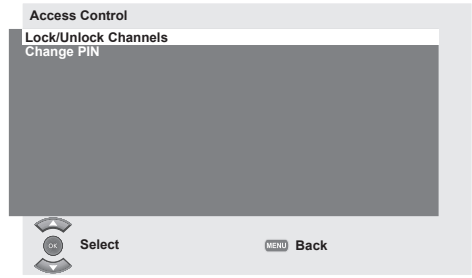

**Note 1:** To re-prevent access after entering the correct password and displaying the precluded channel, your television has to be switched to Standby mode and turned on again.

**Note 2:** The password for both of these features has been set as **0000** at the factory. You can change the password as you wish under **Change PIN** item in the **Access Control** menu.

### 6.3.6.3-User Interface Options

From this menu, you can decide whether to display the scrambled channels in the program table or not. **If List Scrambled Channels** is set to **ON**, all channels will be displayed, if it is set to **OFF**, scrambled channels will not be displayed and if it is set to **AUTO** and a CI card is installed to your television, then the scrambled channels supported by the card will be displayed.

### 6.3.6.4-Timers

In this menu you can view Reminders you had entered from the EPG or change or delete the entered Reminders.

### 6.3.6.5-Favourite Lists

Please see 6.3.4.2-Creating favorite channel list, for detailed explanation of this feature.

### 6.3.6.6-Common Interface Module

In this menu, you can make the CI Module settings that you can attach to your television.

### 6.3.6.7-System Menu

You can display your television's hardware and software data under this menu.


## 6.4-Performing Analog Tunings

You can either tune the Analog channels automatically or manually and store them in your television.

### 6.4.1-Automatic tuning of channels and storing in the memory

**Note:** If your television does not receive any antenna broadcast for a period of 5 minutes, it automatically switches to the stand-by position. The countdown OSD is displayed on the screen during the last 1 minute (applicable for Analog mode only)

You can tune the programs automatically with the Autoprogram function of your television and then sort the channels as you desire by means of the Program Table. Press **AV** button on your remote control, select **ANALOG** tab from the **SOURCE** menu by using **Up/Down** movement buttons and confirm by pressing the **OK** button. Your TV will switch to Analog mode. Press the **MENU** button on your remote control. Select **SETUP** tab with **Down** movement button and confirm with **OK** button. Setup menu is displayed.

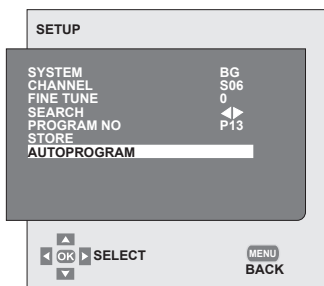

Select **PROGRAM NO** tab by pressing the **Up/Down** movement buttons in Setup menu, enter the channel number to be searched and stored automatically, then select **AUTOPROGRAM** tab by using the **Up/Down** movement buttons and press **OK** button; Country Selection menu will be displayed.



In the Country Selection menu, select the country, whose broadcast you would like to watch in priority, by pressing the **right/left** movement buttons and start autoprogramming by pressing the **OK** button. The channels will be automatically searched and those found will be stored in memory starting from the program selected in the Setup menu. At the same moment, the Autoprogram menu will be displayed and a marker indicating the progress of the autoprogramming will appear as shown below.




To stop the process at any given time, please press the **MENU** button. The Program Table, which will allow you to sort the channels as you wish, will be displayed after the automatic search is complete.


### 6.4.2-Manual tuning of channels and storing in the memory

#### 6.4.2.1-If you already know the channel number


Press the **MENU** button. Move to the **SETUP** menu by pressing the Down movement button in the Main Menu and confirm your selection with the **OK** button. Setup menu will be displayed.

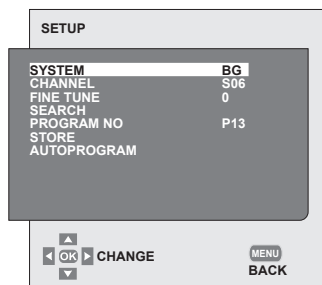





 Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down movement button. Press **OK** on your remote control to select **"S"** for cable channels and **"C"** for channels received via the antenna. Move onto the **PROGRAM NO** tab and using the number buttons enter the channel number in which you would like to have the channel stored. If the broadcast viewed on the screen is of your desired quality, first move onto the **STORE** tab with the down movement button to store in the memory the selection you have made and store the channel by pressing the **Left** or **Right** movement buttons. The prompt **STORED** will be displayed briefly. The channel will be stored according to the program number of your choice. You can tune and store in memory other channels the same way. In the event that you wish to exit the channel settings menu for any reason, simply press the **EXIT** button.

### 6.4.2.2-If you do not know the channel number



 Press the **MENU** button. Move to the **SETUP** menu by pressing the **Down** movement button in the Main Menu and confirm your selection with the **OK** button. Setup menu will be displayed. Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down movement button. Press **OK** on your remote control to select **"S"** for cable channels and **"C"** for channels received via the antenna. Select **SEARCH** tab using the **Up/Down** movement buttons, and scan the channels in ascending order with **Right** movement button and in descending order with **Left** movement button. If the channel that is found is of your liking, select the **STORE** tab. Then store it in the memory by pressing the **Right** or **Left** movement buttons. Repeat the same procedure for other channels by selecting the program number of your choice from the **PROGRAM NO** tab. If the channel you found is not of the desired quality and requires Fine Tuning or if you would like to rename the channel, refer to the relevant sections.

## 6.4.3-Fine Tuning


 If the channel you found is not of the desired quality and requires Fine Tuning, then select the **FINE TUNE** tab by pressing the Down movement button in the **Setup** menu. Using the **Left/Right** movement buttons on your remote control, adjust the broadcast displayed on the screen to your desired quality. Under normal circumstances, you will not require to use the Fine Tune function. The AFC values of your television will automatically adjust and lock themselves to the channel. However, you might need it in case the television transmitters do not operate according to the standards. To store in the memory the settings you have made, select the **Store** tab and press the **Right** or **Left** movement button.

## 6.4.4-Program Table

Press the **MENU** button. Move to the **PROGRAM TABLE** tab by pressing the **Down** movement button in Main Menu and confirm your selection with the **OK** button. **Program Table** menu will be displayed.

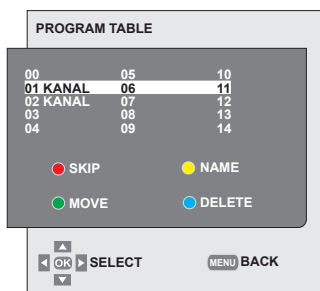

#### 6.4.4.1-Switching the locations of the stored channels



Select the program you would like to relocate by pressing the **Up/Down** or **Left/Right** movement buttons. Press the **“GREEN”** button. The program you selected will appear in red. Highlight the program number you would like to relocate by pressing the **Up/down** or **Right/left** movement buttons. Finish the relocation process by pressing the **“RED”** button. To cancel relocating the channels, press the **“GREEN”** button. When you press **“RED”** button, the channel

selected has been moved to your second selected program number and the channels between both program numbers have been shifted to the initially selected program number. After setting is complete, press the **EXIT** button to exit the menu.

#### 6.4.4.2-Deleting a stored channel



Select the program you would like to delete by pressing the **up/down** or **right/left** movement buttons. Press the **“BLUE”** button. You may perform the deletion process by pressing the **“RED”** button or you may abort the deletion process by pressing the **“GREEN”** button. Once you pres

the **“RED”** button, the selected program is deleted and all the following channels are transferred to previous program number. After setting is complete, press the **EXIT** button to exit the menu.

#### 6.4.4.3-Skipping a stored channel



In the event that you do not wish to see certain programs while navigating through the channels using the **PR+/PR-** buttons, then you can use this function. Select the program that will be hidden by pressing the **up/down** or **right/left** movement buttons. Press the **“RED”** button. The name of the program to be skipped shall appear in red. You may perform this procedure for more than one program. To view the skipped program, directly enter the program number using the numeric buttons. To cancel the program skipping process, press again the **“RED”**

button. After setting is complete, press the **EXIT** button to exit the menu.

#### 6.4.4.4-To name the channels



You can assign your program or programs of choice the names that have a maximum of five characters. Select the program you would like to name from the Program Table by pressing the **up/down** or **right/left** movement buttons. Press the **“YELLOW”** button. An empty space appears beside the channel for which you would like to specify name information. Here, choose


the desired letter, number or sign using the up/down movement buttons. For the second character, press the right movement button and then select the desired letter, number or sign again with the up/down movement buttons. After entering all the characters, store the name you have written in the memory by pressing the **“RED”** button. To write names for any of the other programs, simply repeat the above procedure. To cancel the program naming process, press the **“GREEN”** button. If you want to exit the menu, simply press the **EXIT** button. If the program is not named, then the channel number of that program will be displayed automatically.

# 7 Settings of Your New Television

## 7.1- Sound Menu Settings

### 7.1.1-Sound Menu

You can perform sound settings by entering the Sound menu. For this, press the **MENU** button on your remote control. Select **SOUND** by pressing the **Up/Down** movement buttons from the main menu and press the **OK** button. The Sound menu is displayed.

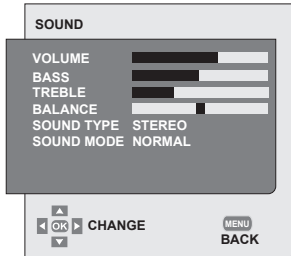

You can select the desired title to be processed from this menu. You can select the desired setting by pressing the **Up/Down** movement buttons and adjust their levels with **Right/Left** movement buttons. You can adjust **VOLUME, BASS, TREBLE, BALANCE, SOUND TYPE, SOUND MODE** levels as you desire. The changes you have made in the sound settings will be stored in the memory without requiring any other operations.

#### 7.1.1.1-Sound Type

Sound Type option is displayed on the Sound menu in all inputs except for the Analog TV mode. You may select the Sound Type as **STEREO, DUAL I, DUAL II** by this option. If your selection is DUAL I or DUAL II, the **BALANCE** option in the menu will be deactivated and cannot be changed by the user.


#### 7.1.1.2-Sound Mode

You may add some depth to the sound of the program you are watching; to do this, select one of the **NORMAL, SPATIAL, SURROUND** options from the **SOUND MODE** tab by pressing the **Right/Left** movement buttons. If your selection is **SPATIAL** or **SURROUND**, the **BALANCE** and **SOUND TYPE** options in the menu will be deactivated and cannot be changed by the user.

## 7.2-Picture Menu Settings

### 7.2.1-Picture Menu

You can perform other picture settings by entering the Picture menu. For this, press the **MENU** button on your remote control. Select **PICTURE** by pressing the **Up/Down** movement buttons from the main menu and press the **OK** button. The Picture menu will be displayed.

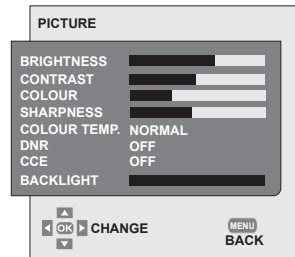

You can select the desired title to be processed from this menu. You can select the desired setting by pressing the **Up/Down** movement buttons and adjust their levels with **Right/Left** movement buttons. You can adjust **BRIGHTNESS, CONTRAST, COLOR** and **SHARPNESS** levels as you desire. The changes you have made in the picture settings will be stored in the memory without requiring any other operations.

#### 7.2.2-Color Temperature

Color intensity of the picture can be adjusted with this feature. Select **COLOUR TEMP.** tab from the Picture menu by pressing the **Up/Down** buttons to activate this feature and then select one of the **COOL, NORMAL** or **WARM** options by pressing the **Right/Left** buttons.

#### 7.2.3-DNR (Noise reduction)

You may reduce interference and noise formed in the picture by using this feature. Select **DNR** tab from the Picture menu by pressing the **Up/Down** buttons to activate this feature and then select one of the **OFF, LOW, MID, HIGH** or **AUTO** options by pressing the **Right/Left** buttons.


### 7.2.4-CCE (Color&Contrast Enhancement)

With this feature, you can make the colors in the picture appear more saturated. Select **CCE** tab from the picture menu by pressing the **Up/Down** buttons and then select **ON** by pressing the **Right/Left** buttons to activate this feature.

### 7.2.5-Backlight

With this feature, you can adjust the intensity of light reflected to the LCD Panel. To do this, select **BACKLIGHT** tab from **PICTURE** menu by using **Up/Down** movement buttons and press **right/left** movement buttons to select the level as you desire.

### 7.2.6-Picture Smart

You can select either one of the three non-adjustable settings in the memory or the options you have adjusted by pressing the (  ) button on your remote control. **SOFT**, **NATURAL**, **RICH** are default values; **USER** represents the values you stored in the memory.

**IMPORTANT NOTE:** Your TV is equipped with Digital Comb Filter feature to increase the picture quality. This option can not be changed by the end user if it is set to ON.

### 7.2.7-Tint

When NTSC video is input via Scart, you may make Hue settings. The tint option is not seen in the menu when you have not input this type of a video. When a NTSC video is connected via the Scart, this option becomes active and it is available in the menu.

### 7.2.8-Picture Format

With this option, you can view the broadcast you watch in a format of your choice. You can view the broadcasts in **AUTO**, **16:9**, **14:9**, **4:3**, **LETTERBOX**, **SUBTITLE** formats. Picture format can be selected as **16:9**, **14:9** or **4:3** formats in HDMI, YPBPR and PC modes. In that case, the name of the selected picture format will be displayed in the centre of the screen.

**Note:** In HDMI, YPBPR and PC Modes, **4:3** and **16:9** picture formats are supported.

### 7.2.8.1-Auto

Some movie channels may broadcast in the 16:9 format. If you would like to see this format automatically, then select **AUTO**. In that case, **AUTO 16:9** appears on your screen.



### 7.2.8.2-16:9

Please use this setting for watching wide screen DVDs, wide screen video cassette or 16:9 formatted broadcasts. Since various screen formats such as 16:9, 14:9 and etc. are used, black stripes might be formed on the lower and upper parts of the screen.



### 7.2.8.3-14:9

This is a movie format.



### 7.2.8.4-4:3

Use this setting to watch the broadcasts in the 4:3 format.



### 7.2.8.5-Letterbox

While watching a "16:9 or Cinemascope formatted" film or video cassette, this setting will eliminate or minimize the black stripes on the background by zooming in the picture without diffusing it.



### 7.2.8.6-Subtitle


If the subtitles are transmitted in the "16:9 formatted" broadcast, then this setting will push the picture upwards in order to ensure the entire written text to be seen.



**Note:** Since the use of certain functions in order to change the picture sizes for collective projection or commercial purposes (modifying the height and width etc.) will be deemed an infringement of the picture's copyright, legal proceedings can be carried out as required under relevant laws.

## 7.3-Features Menu Settings

Press the **MENU** button on your remote control. **Select FEATURES** tab by pressing the **Up/Down** movement buttons and press the **OK** button. The Features menu will be displayed.

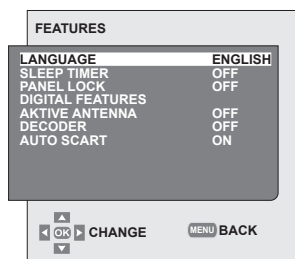

You can select the titles for which you would like to perform an operation in this menu by using the **Up/Down** movement buttons.

**Note:** The **DIGITAL FEATURES** tab in the features menu is deactivated in Analog mode. It is activated in Digital mode only.

### 7.3.1-Off Time

Off Timer switches your television automatically to Standby Mode after the preset time has elapsed. You can adjust this time from **15** to **120** minutes with increments of 15 minutes. To activate this feature, select the Off Time tab and press **Right/Left** movement buttons to select the desired time.

### 7.3.2-Panel Lock

If this feature is turned On, the control buttons on your LCD television will be locked and will not function. They will be active again when the feature is turned Off.

### 7.3.3-Digital Features

You can adjust the Digital TV features from this menu. See page 12.

## 7.3.4-Active Antenna

When this feature is set to On, you can feed an external antenna to your television by the tuner of your television without needing any external source. Active Antenna output power is -5V / 50 mA.

## 7.3.5-Decoder

This feature is used to turn off the sound and picture output on the scart. If the scart output is required to be active (on) for an analog decoder or recorder device that will be connected via its socket, then switch to the channel to be recorder and set the **DECODER** option to **ON** from the **FEATURES** menu by means of **right/left** movement buttons. This value should be stored separately for each channel.


## 7.3.6-Auto Scart

When this feature is set to On and when you operate an external device that is connected to your LCD television via scart, TV will automatically switch to AV mode where the device is connected. When it is set to Off, your TV does not switch to the external device automatically.


## 8 Teletext

Being one of the most prominent services of broadcasting today, Teletext renders the TV more fruitful. Teletext means in short the transmission of various updated information along with the TV broadcast signal in the form of text and graphics. To be able to receive a quality teletext broadcast, a good antenna system and a broadcast signal that is not weak, with no reflections and interference from other channels are required. Even in a very clear reception, it is normal for some characters or tabs to be lost. Such conditions will automatically be improved in a short time under normal circumstances.


### 8.1-Entering the Teletext Mode

 In a channel that does not have the Teletext feature, **NO TELETEXT** will be displayed when you press the **TXT** button. In order to switch your television to the teletext broadcast, please press the **TXT** button in a program that has a teletext broadcast. To switch back to the television broadcast, press the same button twice. Once you have switched to the teletext broadcast, the initial page that appears will be the index page. **P100** In this page, the titles of the topics in the teletext broadcast and the initial page numbers will appear.


### 8.2-Page Selection

 To be able to view the page you would like on the screen, type in the number of that page using the numerical keys. You can see the number you have entered on the left side of the upper title tab. When you would like to turn the pages one by one, you can go to the next page pressing the **up** button and to the previous page pressing the **down** button. Press the **INFO** button to return to the Index page.


### 8.3-Page enlarge button (DOUBLE)

 Using this button, you can watch the top half of the teletext page in an enlarged format. To be able to view the bottom half of the enlarged page, press the same button for the second time. Once you press the same button the third time, the page will be restored to its normal size.

### 8.4-Page Stop (HOLD)

 Some information is laid out by the broadcasting agency in multiple pages and it is broadcast in an automatic cycle mode. For example, on a text of four pages, the pages are indicated with the figures 01, 02, 03 and 04 on the bottom of the page. To view one of these pages for a longer time, press the **FAV** button. When you press the same button again, the cycle continues.


### 8.5-Subpage selection (SUB)

 If the page of text you are viewing contains sub pages the page numbers starting from 01 appear on the screen. You can switch to the sub pages with the **SWAP** button. In which case, the sub page tab is displayed on the bottom line within “**red -**” and “**green +**” frames. You can select the subpages by pressing the “**RED**” and “**GREEN**” buttons.

You can exit the subpage by pressing the **SWAP** button again.

### 8.6-Temporary TV Picture (UPDATE)



This button allows you to switch to the television picture while the page you want is being searched in the teletext broadcast eliminating the need to wait during the search. You may switch to the television picture by pressing the (  ) button while Teletext is searching for your desired page. Once the page you want is found, the number of that page appears on the screen.

### 8.7-Question - Answer Button (REVEAL)



Sometimes, a teletext page contains a hidden answer such as a game or a riddle. Press the **EPG** button to disclose the hidden answer.

### 8.8-Fasttext

The colored buttons on the remote control are for the fasttext feature. When you select any page, the titles on various subjects may appear on the screen in four different colors or inside colored frames (red, green, yellow and blue). By pressing the button pertaining to the relevant color on the remote control, you can access the subject of your choice without waiting.

**Note:** The fasttext feature is not available for all teletext broadcasts. It is determined by the broadcasting agency whether it is to be broadcast or not.

### 8.9-Toptext (optional)

There is a topics line in yellow and blue at the bottom of the teletext screen. You can select the relevant topic by pressing the yellow or blue buttons on the remote control. You can select the next page by pressing the red button and the previous page by pressing the green button.

**Note:** Toptext feature is not available in every program.


## 9 External Equipment Connections:

Your TV is equipped with 5 inputs including antenna input, which allows for the external device connection. These inputs are:



- 1-Aerial input
- 2-SCART input
- 3-AV input
- 4-VGA / YPBPR input
- 5-HDMI input

You can connect your external device supporting the suitable inputs to your TV via these inputs. By pressing the **AV** button on your remote control, select the external source input to which you connected your device.

### 9.1-Connecting an external equipment via Scart connection

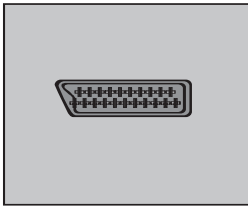

Rear view of TV

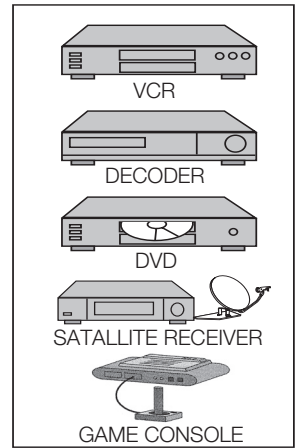
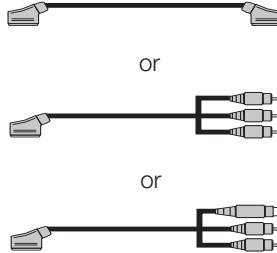


**SCART** : To watch the picture of the broadcast device connected to SCART, select Scart from the **Source** menu and press **OK** button. (You can watch via this Scart if the connected device has a RGB output).

**S-Video**: To watch the picture of the broadcast device connected using the **SVHS** input over the SCART input by scart converter, select **SCART-SVHS** option from the Source menu and press **OK** button. Your TV will switch to the selected source.

### 9.2-Connecting an external equipment via AV connection

Side view of TV

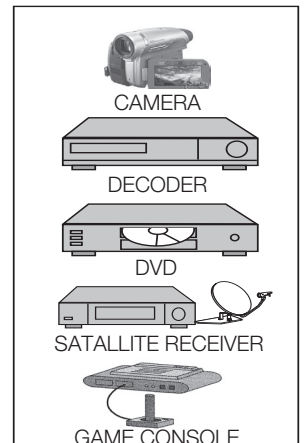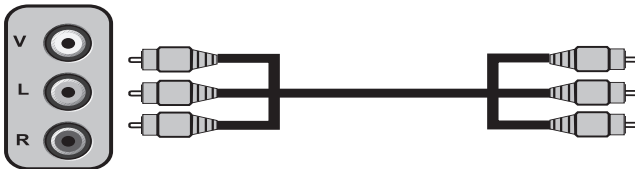


**AV** : To watch the picture of the broadcast device connected using the PHONO input, select **AV** option from the **Source** menu and press **OK** button. Your TV will switch to the selected source.



### 9.3-Connecting an external equipment via YPBPR connection

Rear view of TV

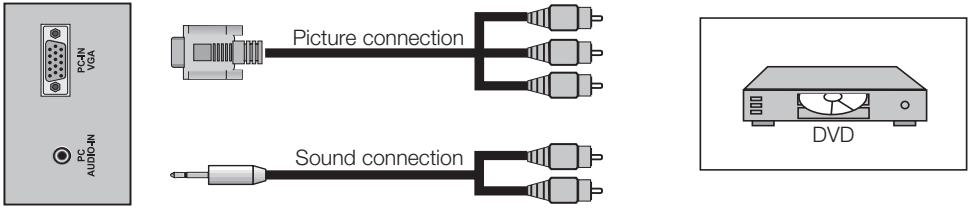


**YPBPR (Component Input):** When a connection is made via VGA socket with YPBPR, select **YPBPR** option from the **Source** menu and press the **OK** button to display the picture. Your TV will switch to the selected source.

### 9.4-Connecting an external equipment via HDMI connection



Side view of TV

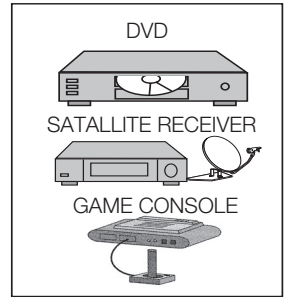

**HDMI:** When a connection is made via HDMI socket, select the **HDMI** input you connected through from the **Source** menu and press the **OK** button to be able to display these pictures. Your TV will switch to the selected source.

Connect to the HDMI input at the back of your TV by using the connector located on your PC or your digital video-transmission device with a suitable cable (not supplied with the TV).

**Note:** To be able to watch an image in the HDMI mode, your computer must be equipped with a HDMI graphic card.

You may display the resolution information by pressing the **INFO** button.

#### 9.4.1-HDCP

Your TV supports HDCP feature. To use this feature, you must set up a connection to your TV set's HDMI video port and select HDMI by pressing the **AV** key on your remote control.


**NOTE:** In HDMI mode; some resolutions are supported when a DVI to HDMI converter cable from a PC is used. Only 16:9 and 4:3 are supported as picture format.



#### High Definition - HD-READY

Your television can receive high-definition signals (HDTV). You can connect the input sources (HDTV set-top box or HDTV DVD player) to the (HDMI) socket (digital HDTV signal). This ensures that you can view digital HDTV programs, even if they are copy-protected (HDCP High-Definition Copy Protection).

## 9.5-PC connection

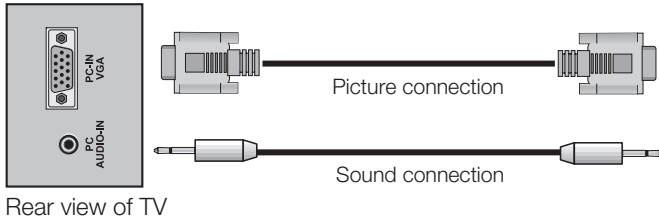

### 9.5.1-PC Connection:

Connect the D-Sub15 connector to the PC-IN socket at the back of your television by using an appropriate cable (not supplied with your television). Again, by using an appropriate cable, connect the audio output of your PC to the PC AUDIO-IN at the back of your television to listen to sounds from your PC and you can adjust the volume level of your source by using **VOL+/VOL-** buttons.

### 9.5.2-Transition to the PC mode

For your LCD-TV to switch to the monitor (PC) mode, press the **AV** button on your remote control. **SOURCE** menu will be displayed. Select **PC** option by pressing the **Up/down** movement buttons and press the **OK** button.

### 9.5.3-PC Setting

Enter into the **Setup** menu from the main menu by pressing the **MENU** button in the PC mode. In order to make the necessary settings in this menu, you can select the tabs with the **up/down** buttons on your remote control to make the following relevant settings.

### 9.5.4-AUTOCONFIGURATION

The most suitable geometric settings in accordance with the entry mode are configured by this function. For this operation, just select the **Autoconfiguration** tab and press **OK** button.

**9.5.5-HORIZONTAL POSITION:** Horizontal position setting.

**9.5.6-VERTICAL POSITION:** Vertical position setting.

**9.5.7-CLOCK FREQUENCY:** This is the pixel clock frequency. User can narrow down or enlarge the display by selecting a desired value.

**9.5.8-PHASE:** Using the **right/left** movement buttons, you can ensure that the colors and shapes are exactly consolidated on the PC image.

### 9.5.9-PICTURE FORMAT

You can select the PC image to be displayed in 16:9 or 4:3 formats.

## 10 Help and tips

Failure	Possible cause	Solution
The television does not function	Is the power cord connected to the mains supply?	Check the power cord.
	Is the main power On/Off button on?	Check if the On/Off button is on.
Poor picture quality	Is the antenna cable attached?	Check the antenna cable.
	If you are using a satellite antenna, is it well adjusted?	Have the antenna adjusted.
	Antenna may be affected by two connected external devices.	Try disconnecting one of the devices.
	It may need fine tuning.	Perform fine tuning.
	Picture settings are not correct.	Adjust Brightness, Contrast and Color.
Shadow and reflection in the picture.	Channel setting	Perform automatic, manual channel setting or fine tuning.
	Antenna	Check antenna cable and system
No picture	Is there any damage on the antenna cable?	Check the antenna cable.
	Are you sure you pressed the correct button on your remote control?	Press PR+ or PR- button to turn on the TV.
No color.	Color intensity level is at the lowest setting.	Lighten the color.
	Broadcast system setting (if setting choice is available)	Select the broadcast system.
	Problem in channel broadcasting.	Test with another channel.
No or defective teletext	Television channel (no teletext) or antenna system.	Test another channel for fine tuning and shadowy pictures
	Very weak signal	Check the antenna system.
No sound	Temporary sound mute may be on	Try pressing the mute button
	Is the sound turned down?	Turn on the volume with Vol + button.
Remote control does not work	Are the batteries correctly placed?	Place the batteries correctly.
	Are batteries exhausted?	Replace the batteries with new ones.
	Is there any obstacle between the remote control and television?	If yes, remove it.
Picture is not readable after turning on the TV	Child lock is active.	Disable the child lock.

If your television does not work properly even though you tried the above mentioned solutions, try turning it on and off again. If you cannot start your television even though you have applied all noted methods, refer to the dealer or authorised service from where you purchased the product. Never attempt to repair a faulty device yourself.

# 11 Technical specifications chart


SCREEN SIZE	15"	22"
Panel type	15", 16:9 Active matrix TFT	22", 16:9 Active matrix TFT
Sound output	2x2 W	2x3 W
Power consumption	25 W	55 W
Stand by power value	1 W	1 W
Teletext page	10	10
Scart input	Standard	Standard
Audio/Video PHONO input	Standard	Standard
HDMI input	Standard	Standard
VGA input	Standard	Standard
PC Audio input	Standard	Standard
CI Slot Input	Standard	Standard

## General technical specifications

<b>Power supply AC:</b>	230V 50 Hz
<b>Program memory Analog:</b>	100
<b>Program memory Digital:</b>	1000
<b>RF Aerial input:</b>	75 Ohm (Co-axial)
<b>Loudspeaker impedance:</b>	16 Ohm
<b>Sound systems:</b>	Mono / AV Stereo
<b>Batteries:</b>	2xUM - 4, IEC R03 or AAA 1.5V
<b>Channels received:</b>	VHF (Band I Channel 2-4) VHF (Band III Channel 5-12) UHF (Channel 21-69) Cable TV (S1-S20/S21-S41)
<b>Broadcasting systems received:</b>	PAL BG PAL SECAM BG PAL SECAM BG DK PAL SECAM BG LL' (*) PAL I

(\*): These features are optional and they are not available on all models.

Design and specifications may be changed without prior notification.

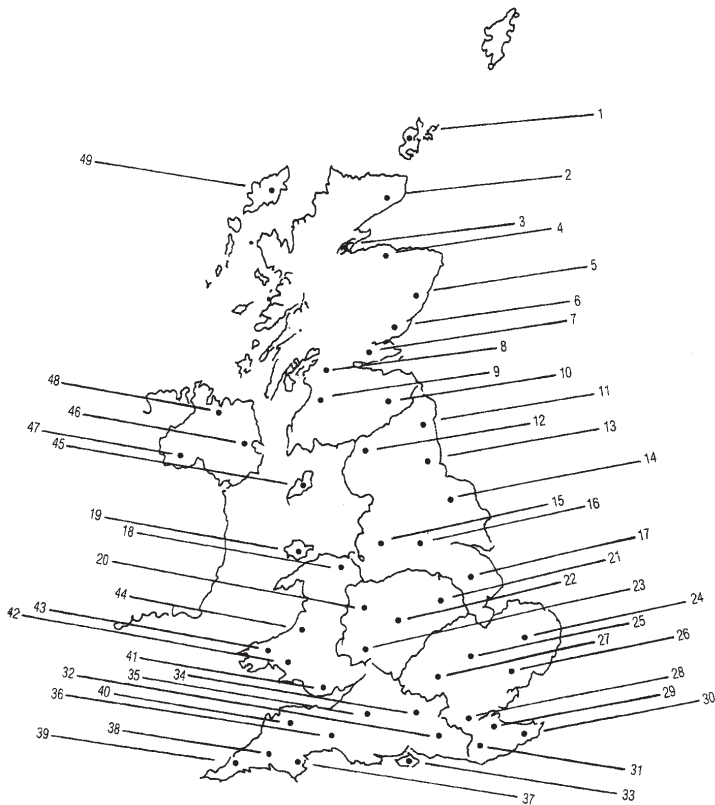

Regional Main stations	ANALOGUE UHF CHANNELS		CH4	CH5	Map		BBC1	BBC2	CH4	CH5	Map		
	BBC1	BBC2											
<b>North West</b>													
Caldbeck	30	34	28	32	56	12	Bluebell Hill	40	46	43	65	29	
Winter Hill	55	62	59	65	48	15	Crystal Palace	26	33	23	30	37	28
Douglas (IOM)	68	66	48	56	56	45	Dover	50	56	66	53	30	
<b>North</b>							Oxford	49	52	64	67	31	
Belmont	22	28	25	32	56	17	<b>East</b>						
Emley Moor	44	51	47	41	37	16	Sandy Heath	31	27	24	21	39	25
<b>North East</b>							Sudbury	51	44	41	47	35	26
Bilsdale West Moor	33	26	29	23	35	14	Tacolneston	62	55	59	65	52	24
Chalton	39	45	49	42	11	11	<b>Scotland</b>						
Pontop Pike	58	64	61	54	56/58	13	Angus	57	63	60	53	37	6
<b>Midlands (West)</b>							Black Hill	40	46	43	50	37	8
Ridge Hill	22	28	25	32	35	23	Cragkelly	31	27	24	21	48	7
Sutton Coldfield	46	40	43	50	37	22	Darvel	33	26	23	29	35	9
The Wreccin	26	33	23	29	25	20	Durris	22	28	25	32	67	5
<b>Midlands (East)</b>							Eitshal (Lewis)	33	26	23	29	49	
Waltham	58	64	61	54	35	21	Keeylang Hill	40	46	43	50	1	
<b>South West</b>							Knock More	33	26	23	29	4	
Beacon Hill	57	63	60	53	37	37	Rosemarkie	39	45	49	42	3	
Caradon Hill	22	28	25	32	38	38	Rumster Forest	31	27	24	21	2	
Huntshaw Cross	55	62	59	65	67	40	Selkirk	55	62	59	65	52	10
Redruth	51	44	41	47	37	39	<b>Wales</b>						
Stockland Hill	33	26	23	29	39	36	Blaenplwyf	31	27	24	21	56	44
<b>Channel Islands</b>							Carmel	57	63	60	53	42	
Fremont Point	51	44	41	47			Uanddona	57	63	60	53	19	
<b>West</b>							Moel-y-Parc	52	45	49	42	18	
Mendip	58	64	61	54	37	35	Presely	46	40	43	50	37	43
<b>South</b>							Wenvoe	44	51	41	47	41	
Hannington	39	45	42	66	35	34	<b>N.IRELAND</b>						
Midhurst	61	55	58	68	32	32	Brougher Mountain	22	28	25	32	37	47
Rowbridge	31	24	27	21	33	33	Divis	31	27	24	21	31	46
							Limavady	55	62	59	65	48	

# BEKO

## 13 Guarantee - Television

---

Your new television is guaranteed against the cost of breakdown repairs for twelve months from the date of the original purchase.

### What is covered?

- All repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- The cost of all functional replacement parts, excluding remote control batteries
- The Labour costs of an approved repairer to carry out the repair
- You may be offered a replacement instead of repair under guarantee.

You dealer will advise you.

### What is not covered?

- Transit or delivery damage
- Accidental damage
- Misuse, or abuse.
- Cabinet or appearance parts, including knobs and flaps
- Remote control batteries.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user instruction book.
- Repairs or replacements to product installed or used on commercial or non-household premises.

### Important notes.

- The product is guaranteed for domestic household use only.
- The guarantee will be void if the product is installed or used in commercial or non-household premises.
- The product must be correctly installed and operated in accordance with the instructions contained within the Operating Instructions Booklet provided with the product.
- The guarantee is given only within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee is not transferable if the product is resold.
- Beko Plc disclaims any liability for incidental or consequential damages.
- The guarantee does not in anyway diminish your statutory or legal rights.

**Beko House, Caxton Way, Watford, Herts, WD18 8UF, Tel: 0845 600 4911**

**E-mail: [Service@beko.co.uk](mailto:Service@beko.co.uk) [www.beko.co.uk](http://www.beko.co.uk)**

# BEKO

## HOW TO OBTAIN SERVICE

Congratulations on your choice of a DIGIFUSION Colour television. Your new television has been designed and manufactured to the highest quality standards to give you many years of use. To get the best out of it, please take a few moments to read the instruction book.

Your television is supplied with a full 12 months guarantee, covering parts and labour. Should you require service under guarantee, simply call the number below (\*\*see note for small screen sets)

**0845 600 4911**

Our service receptionist will ask you for your product model number, your retailer's name, and the date of purchase when you call. It will assist you if you complete the box at the bottom of this page when you take delivery of your television so that the information is readily available should you need it. If it is necessary for an engineer to visit your home he will normally be there within 48hrs of receipt of your call (excluding Bank Holidays) or at your earliest convenience.

Before telephoning for service please check the trouble shooting guide in the instruction book as often minor problems are easily identified and resolved by following the instructions contained there in. Service visits where there is no fault with the product could incur a charge even though the product is under guarantee.

Service is also available on the above number after the guarantee period has expired. The cost of any repairs outside of the guarantee period is payable to the engineer at the time of visit.

Please complete the box below for ease of reference later.

Model Number	Serial Number
Date of Purchase	Place of Purchase
<b>Please keep your purchase receipt. The engineer will need to see it should you require service under the 12-month Guarantee.</b>	

### \*\*\*Special Note:

In home repair service is not available on models with a screen size of 21" or under. You should contact your retailer for advice and assistance on these models..

