

BMP-001

Quick Installation Guide

Package Contents

1. Media Box main unit
2. Remote control
3. QIG
4. AV cable
5. Power adapter


Main interface and functions

Power interface: DC 5V/1.5A

Main functions:


1. Multimedia player (VIDEO/ AUDIO/ PHOTO)
2. Calendar
3. Alarm clock

Input interface:

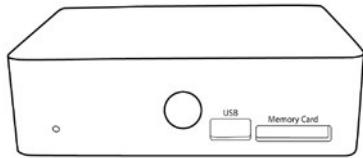

1. IR receiver
2. USB2.0 port
3. 4in1card reader (SD, MMC, MS(Pro), XD)

Output interface

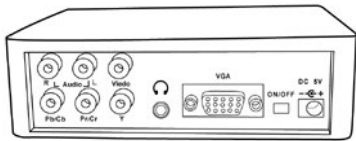

1. Video interface : RCA composite video jack, Component video jack (Y Pr/Cr Pb/Cb), VGA port
2. Audio interface : RCA audio jack(L&R), Earphone jack

Power interface

1. Power Jack
2. Power switch
3. Power LED indicator

Notice: The Media Box supports FAT32 file system for first logic partition

Remote control keys and operations

Key	Function	Description
UP/DOWN/ LEFT/RIGHT	Direction keys	Move the highlight square cursor
ENTER	Selection key	Execute the selected function
RETURN	Return key	Go to previous layer
MENU	Control key	Switch USB/Card or switch control bar
YCbCr	YCbCr output	Switch output to Y Pr/Cr Pb/Cb
Video	Video output	Switch output to RCA composite
VGA	VGA output	Switch output to VGA

Main menu

While connect the power adapter, audio cable(RCA L&R), video cable(RCA composite or Y Pr/Cr Pb/Cb or VGA), and insert USB/Card, then power on, select proper output, then main menu will show on the screen, you can use remote control to operate this system. Media Box will detect whether the USB drive or memory card is inserted on this device and indicate on the top right corner of the screen.




1.PHOTO

Enter PHOTO to view images in the USB drive/memory card, this device supports JPEG/BMP/GIF formats.



After entering PHOTO, system will list all images in selected drive, you can browse all directories in this drive.

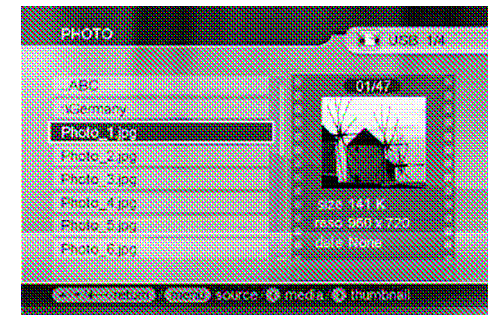

ENTER	Select
RETURN	Goto previous layer
UP/DOWN	Move cursor
LEFT	Switch to music/slide show
RIGHT	Thumbnail mode
MENU	Switch USB/Card




Click ENTER to enter play mode, click MENU to pop-up control bar, click LEFT/RIGHT to move the highlight cursor on the control bar, click ENTER to push down the button for specific function. Click MENU again to close the control bar.



2. MUSIC




Enter MUSIC to view music files, system will list all music (MP3, WMA) in selected drive

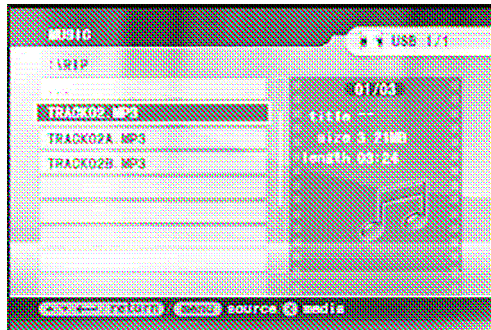

ENTER	Select
RETURN	Goto previous layer
UP/DOWN	Move cursor
LEFT	Switch to music/slide show
MENU	Switch USB/Card

Click ENTER to enter play mode, click LEFT/RIGHT to move the highlight cursor on the control bar, click ENTER to push down the button for specific function.

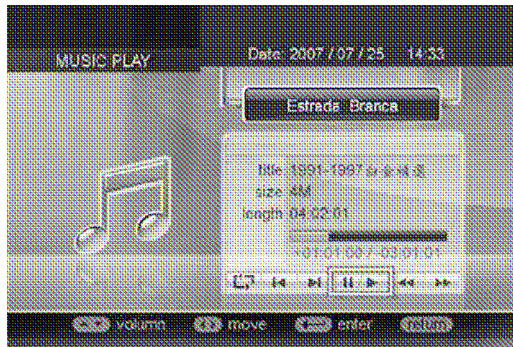


ENTER	Select
RETURN	Goto previous layer
UP/DOWN	Adjust volume level
LEFT/RIGHT	Move highlight cursor

3. VIDEO



Enter VIDEO to view video files, system will list all video files in selected drive

Notice: The Media Box **only** support **standard MPEG1/ MPEG2/ MPEG4** video files, and audio format of video file included must be **mp3** or **wma**, when you play incompatible video files, error message will show on the screen.

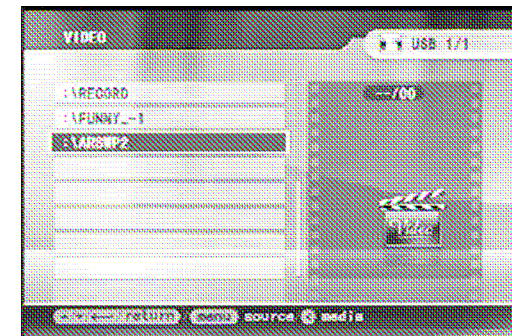

ENTER	Select
RETURN	Goto previous layer
UP/DOWN	Move cursor
LEFT	Switch to music/slide show
MENU	Switch USB/Card

Click ENTER to enter play mode, in play mode you can click MENU to switch the control bar on, then click LEFT/RIGHT to move the highlight cursor on the control bar, and click ENTER to execute specific function. If you want to switch off the control bar at any time, click MENU key again.



MENU	Switch control bar on/ off
LEFT/ RIGHT	Move highlight cursor
ENTER	Select
RETURN	Goto previous layer

4. SLIDE SHOW

SLIDE SHOW interface supports play music with photos.



Click ENTER to enter slide show interface, you will enter step 1 stage, please choose a photo file in your drive, then click ENTER.




After selecting a photo, you will enter step 2 stage, please choose a music file, then click ENTER.



ENTER	Select
RETURN	Goto previous layer
UP/DOWN	Move cursor

While SLIDE SHOW starts, you can click MENU to switch the control bar on, then click LEFT/RIGHT to move the highlight cursor on the control bar, and click ENTER to execute specific function. If you want to switch off the control bar at any time, click MENU key again.

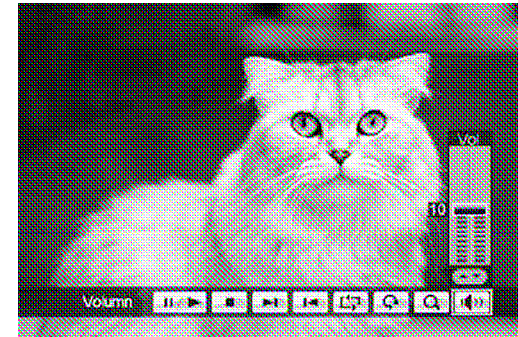



MENU	Switch control bar on/ off
LEFT/ RIGHT	Move highlight cursor
ENTER	Select
RETURN	Goto previous layer

5. CLOCK/DATE

You can enter CLOCK/DATE to see system clock and perpetual calendar.



 Click ENTER to enter CLOCK/DATE interface, the clock and calendar will show on the screen.

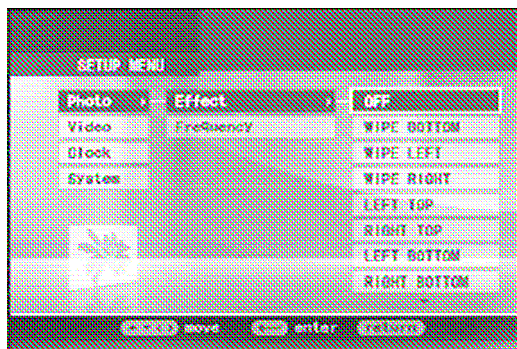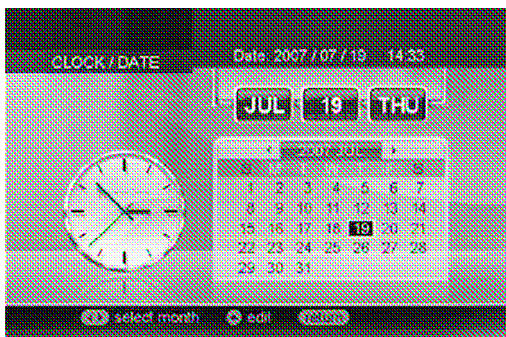

3100554400
Version 1.0

LEFT/RIGHT	Browse month in calendar
RETURN	Goto previous layer
UP	Enter setup interface to modify time and date

6. SETUP

You can enter SETUP interface to modify every system parameters of media box.



After you enter SETUP interface, four categories will show on the left of screen, you can move cursor and click ENTER to set every parameters detailed of the system.

ENTER	Select /Set
RETURN	Goto previous layer
UP/DOWN/LEFT/RIGHT	Move cursor

Photo	
Effect	Select photo transition effect
Frequency	Set photo changing interval time
Video	
Brightness	Adjust brightness level
Contrast	Adjust contrast level
Hue	Adjust hue level
Saturation	Adjust saturation level
Sharpness	Adjust sharpness level
Clock	
Date	Set current date
Alarm	Set alarm time
Time	Set current time
Power on	Set auto power on time
Power off	Set auto power off time
System	
TV system	Select TV standard, NTSC or PAL
OSD Language	Select OSD language
Video	Select display format
Default	Restore default setting
S/W Version	Show firmware version