


COMPETENCE E1100-4

Built-In Electric Oven

User information

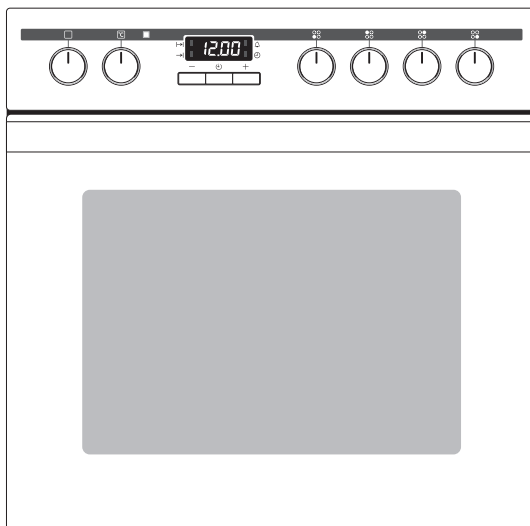

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Disposal	7
Description of the Appliance	8
General Overview.....	8
Control Panel	8
Oven Features.....	9
Oven accessories	9
Before Using for the first time	10
Setting and changing the time	10
Initial Cleaning.....	11
Using the Rings	12
Setting the heat setting	13
Using the Oven	14
Switching the Oven On and Off.....	14
Oven Functions.....	15
Inserting the Shelf and Tray.....	16
Clock Functions	17
Switching Off the Time Display	18
Uses, Tables and Tips	23
Cooking table.....	23
Baking.....	24
Baking table	26
Roasting	29
Roasting table.....	29
Grill Sizes	31
Grilling table.....	31
Making Preserves.....	32
Cleaning and Care	34
Outside of the appliance.....	34
Oven interior	34
Accessories.....	34
Shelf Support Rails	35
Oven Lighting.....	36
Oven Ceiling.....	37
Oven Door.....	38
Oven door glass	39

What to do if	40
Installation Instructions	41
Safety information for the installer.....	41
Guarantee Conditions	45
Customer Service Centres	46
Service	47

Operating Instructions



Safety instructions



This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.



Note on enamel coating

Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance


General Overview

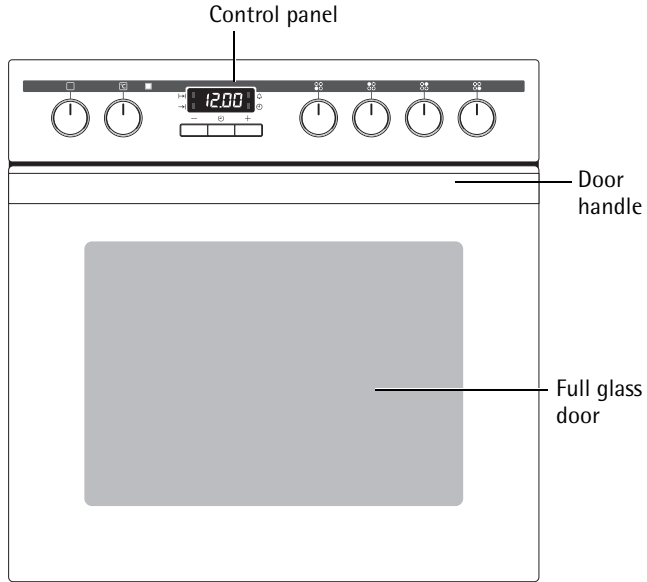

Control Panel

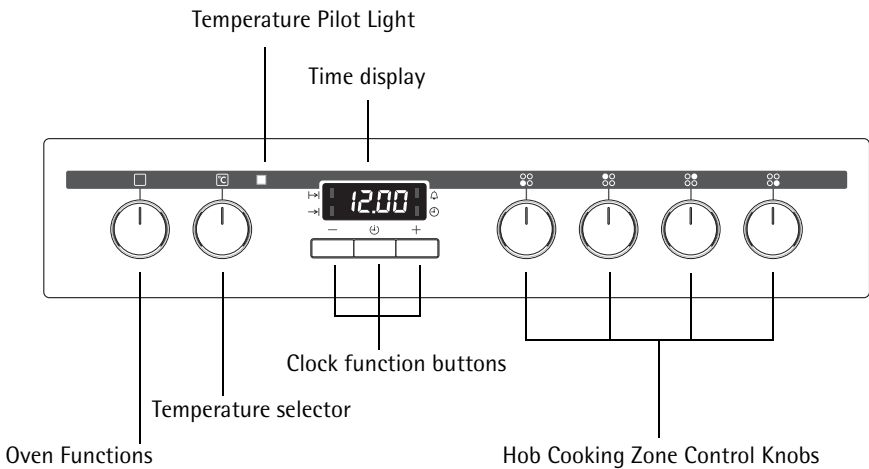


Oven Features

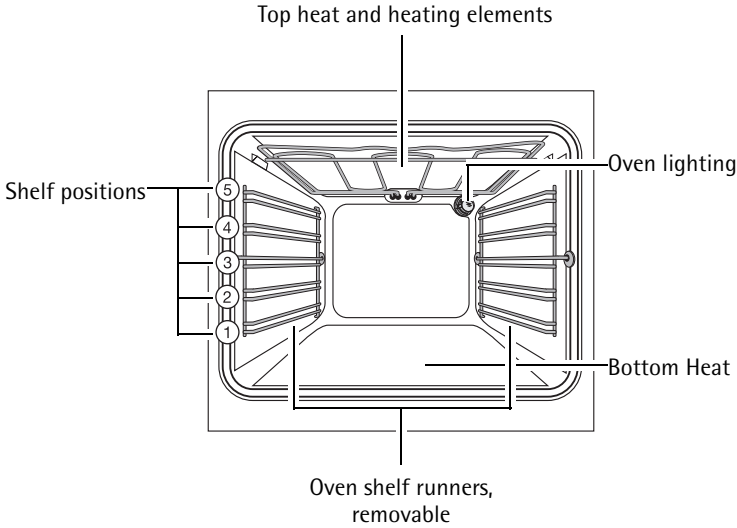

Oven steam vent


The steam from the oven is fed directly upwards via the duct in the rear of the cooking surface.

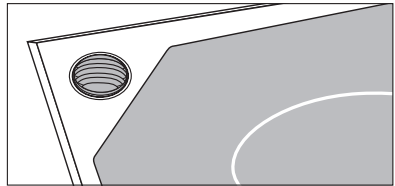

Oven accessories


Combination shelf

For dishes, cake tins, items for roasting and grilling.

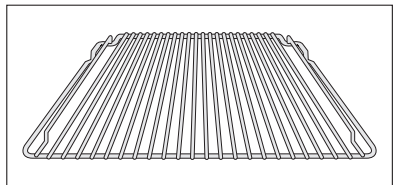

All-purpose tray


For moist cakes, roasts or for use as a baking tray or a pan to collect fat.

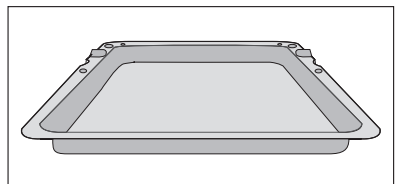





Before Using for the first time

Setting and changing the time

i The oven only operates when the time has been set.



When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time  flashes automatically.

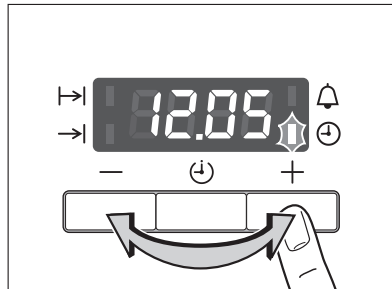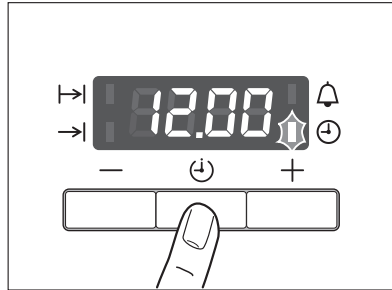
1. To change a time that has already been set, press the Selection  button repeatedly until the function indicator Time  flashes.
2. Using the $+$ or $-$ button, set the current time.



After approx. 5 seconds, the flashing stops and the clock displays the time set.

The appliance is now ready to use.

i The time can only be changed if no automatic function (Cook time  or End time ) has been set.

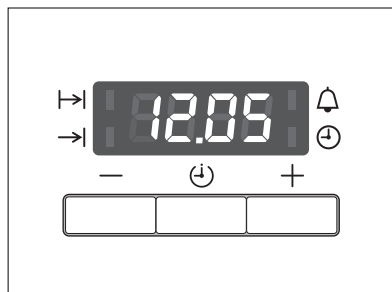

Initial Cleaning


Before using the oven for the first time you should clean it thoroughly.



Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.



To clean metal fronts use commercially available cleaning agents.

1. Turn the oven function switch to oven lighting .
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Then wash out the oven with warm water and washing-up liquid, and dry.
4. Wipe the front of the appliance with a damp cloth.

Using the Rings

i Also refer to the operating instructions for your built-in hob. It contains important information on ovenware, operation, cleaning and care.

Heat settings


- You may select the heat settings within the range of settings 1-9.
- Intermediate positions may be selected between settings 2 and 7.

1 = lowest heat setting

9 = highest heat setting




Switch the cooking zone off approx. 5-10 minutes before cooking is finished to make use of the residual heat. This saves electricity.

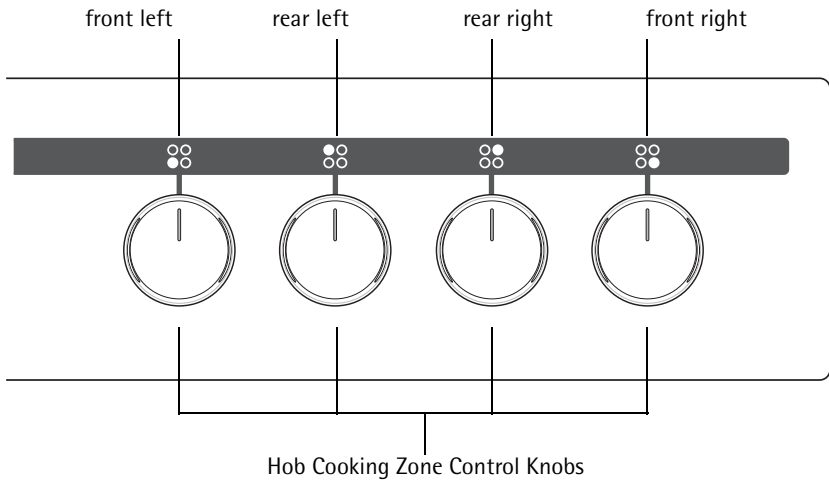


Setting the heat setting

1. Select the heat setting.

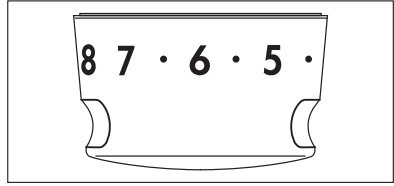


2. To end the cooking process, turn back to the Off position.

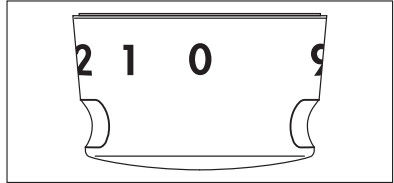

Using the Oven

Switching the Oven On and Off

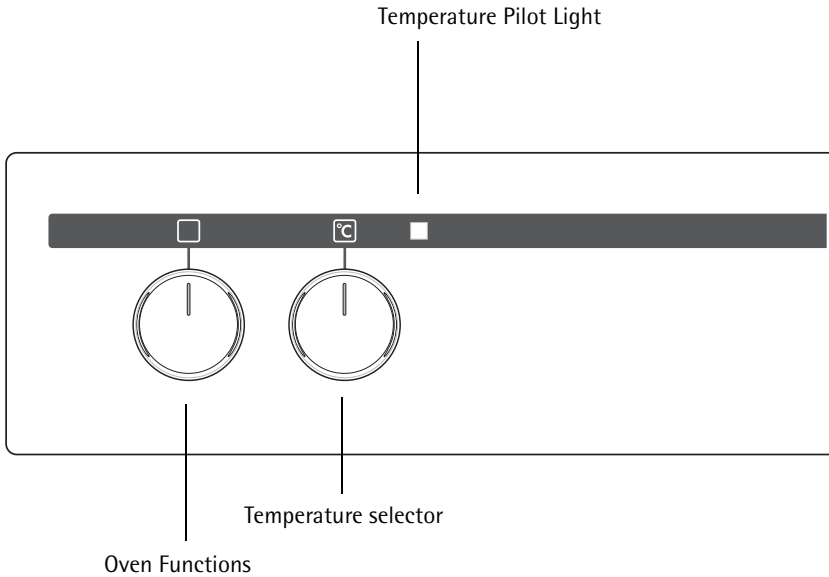

1. Turn the oven functions dial to the desired function.
2. Turn the temperature selector to the desired temperature.
The temperature pilot light is lit as long as the oven is heating up.
3. To turn the oven off, turn the oven functions dial and the temperature selector to the OFF position.









Cooling fan

The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

	Oven function	Application	Heating element/ fan
	Light	Using this function you can light up the oven interior, e.g. for cleaning.	---
	Conventional	For baking and roasting on one oven level .	Top heat, bottomheat
	Top heat	For browning bread, cakes and pastries and for bakes.	Top heat
	Bottom heat	For baking cakes with crispy or crusty bases .	Bottom heat
	Grill	For grilling flat foodstuffs placed in the middle of the grill and for toasting .	Grill
	Dual grill	For grilling flat foodstuffs in large quantities and for toasting .	Grill, top heat

Inserting the Shelf and Tray




Anti-tip device

All slide-in units have a small bulge on the left and right. This bulge is an anti-tip device and must always point to the rear of the oven.


Inserting tray:

The anti-tip device must point towards the rear of the oven.

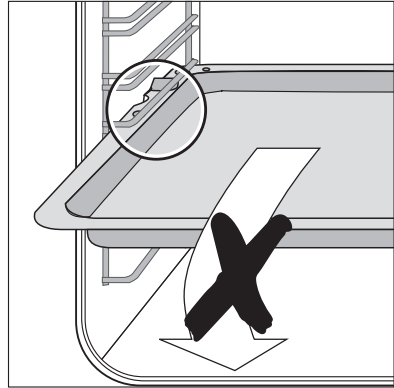


Inserting shelf:

Insert the shelf unit with both guide rails pointing upwards. The anti-tip device must point downwards and be positioned to the rear of the oven compartment.

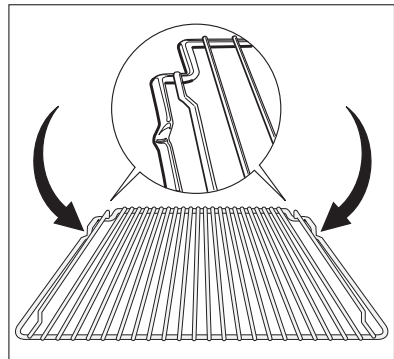


Inserting shelf and tray:

When using the shelf and the tray together, insert the shelf's anti-tip device exactly into the indentations in the tray.

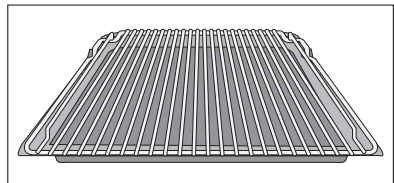

Clock Functions

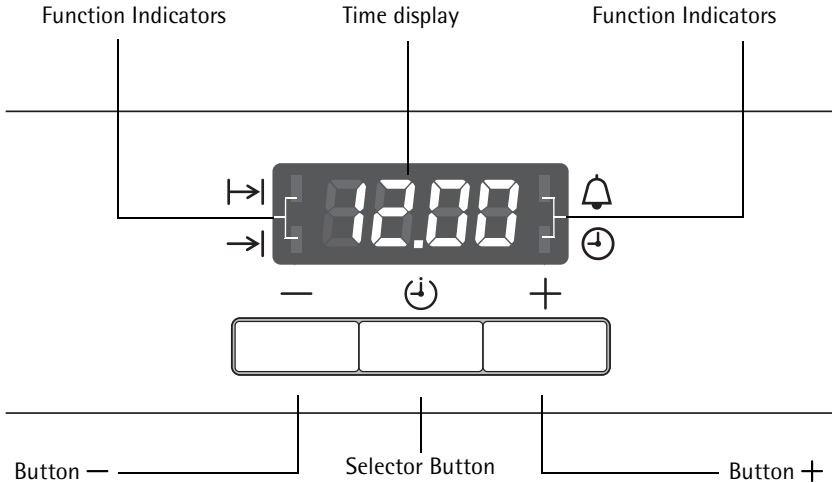

Countdown

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

Cook time

To set how long the oven is to be in use.

End time



To set when the oven is to switch off again.

Time

To set, change or check the time
(See also section "Before Using for the First Time").



How to use the clock functions

- After a function has been selected, the corresponding function indicator flashes for about 5 seconds. During this period, the desired times can be set using the + or - button.
- When the desired time has been set, the function indicator continues to flash for approx. 5 seconds. After that the function indicator is then lit. The set time begins to run.
- Press any of the buttons to stop the audible signal.
- The desired oven function and temperature can be selected before or after the clock functions Cook time  and End time  are set.
- When the cooking process is completed, turn the oven function dial and the temperature selector back to the OFF position.



Switching Off the Time Display

By switching off the time display you can save energy.




Switching off the time display

Press and hold down any two buttons until the display becomes dark (approx. 10 seconds).



Switching on the time display


Press and hold down any two buttons until the time reappears in the display (approx. 10 seconds).




The display can only be switched off if none of the clock functions Cook time , End time  or Countdown  is in use.


Countdown


1. Press the Selection  button repeatedly until the function indicator Countdown  flashes.

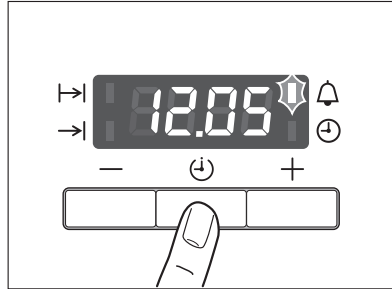


2. Using the + or - button set the desired Countdown (max. 2 hours 30 minutes).

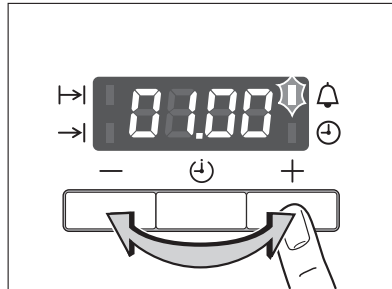

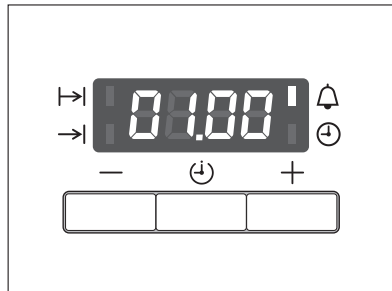

After approx. 5 seconds the display shows the time remaining. The function indicator Countdown  lights up.

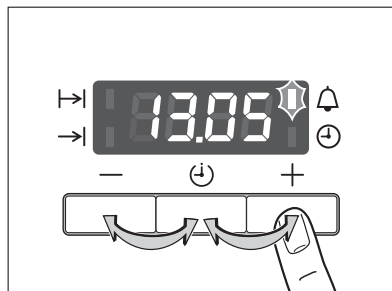


When the time has elapsed, the function indicator flashes and an audible signal sounds for 2 minutes. The signal can be stopped by pressing any button.





Cook time


1. Press the Selection  button repeatedly until the function indicator Cook time  flashes.

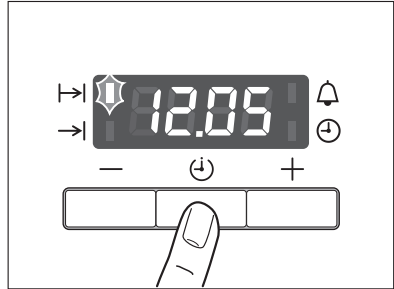

2. Using the + or - button set the desired cooking time.

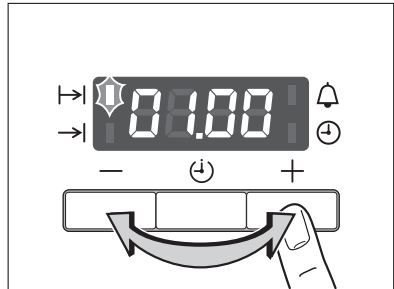


After approx. 5 seconds the display returns to showing the current time. The function indicator Cook time  lights up.

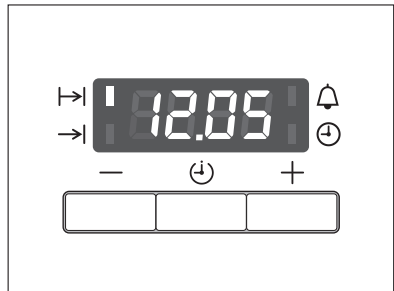




When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

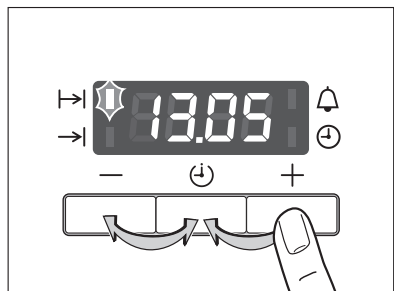3. The signal and the programme can be stopped by pressing any button.





End time


1. Press the Selection  button repeatedly until the function indicator End time  flashes.

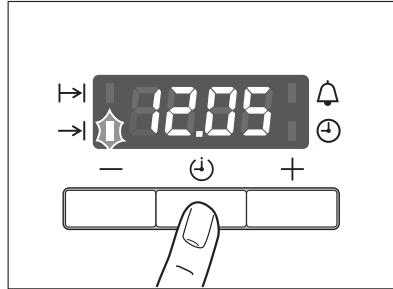

2. Using the + or - button set the desired switch-off time.

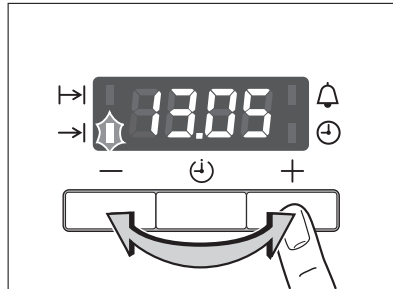


After approx. 5 seconds the display returns to showing the current time. The function indicator End time  lights up.

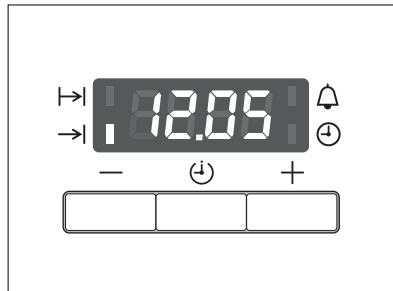



When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.


3. The signal and the programme can be stopped by pressing any button.

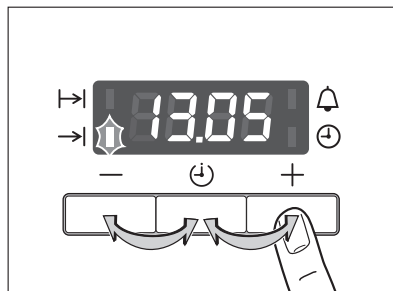


Cook time and End time combined

  


Cook time  and End time  can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.


1. Using the Cook time  function, set the time required for cooking the dish.

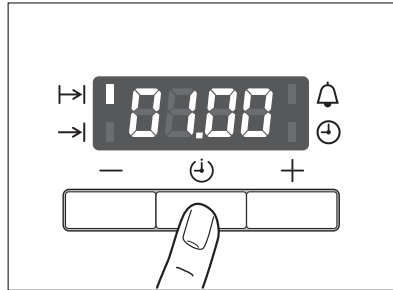

In this example, 1 hour.



2. Using the End time  function, set the time at which the dish should be ready.

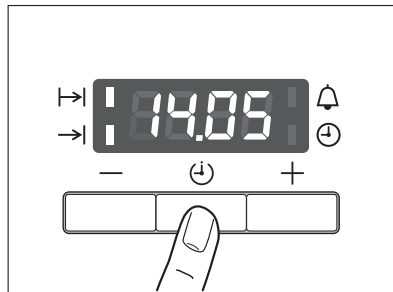In this case 14:05:00.




The function indicators Cook time  and End time  light up and the current time is shown in the display.

In this case 12:05.

The oven switches on automatically at the time calculated.

In this case, at 13:05:00.

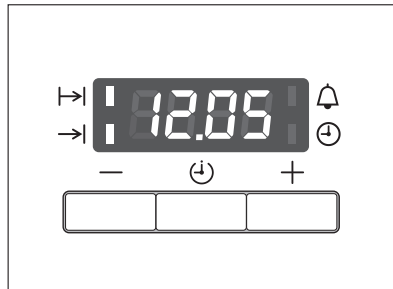

And switches itself off again when the cooking time entered has elapsed.

In this case, at 14:05.

Uses, Tables and Tips

Cooking table

The information given in the following table is for guidance only.

Heat setting	Cooking-process	suitable for	Cooking time	Tips/Hints
0		Residual heat, Off position		
1	Keeping food warm	Keeping cooked foods warm	as required	Cover
1-2	Melting	Hollandaise sauce, melting butter, chocolate, gelatine	5-25 mins.	Stir occasionally
	Solidifying	Fluffy omelettes, baked eggs	10-40 mins.	Cook with lid on
2-3	Simmering on low heat	Simmering rice and milk-based dishes Heating up ready-cooked meals	25-50 mins.	Add at least twice as much liquid as rice, stir milk dishes part way through cooking
3-4	Steaming Braising	Steaming vegetables, fish braising meat	20-45 mins.	With vegetables add only a little liquid (a few tablespoons)
4-5	Boiling	Steaming potatoes	20-60 mins.	Use only a little liquid, e. g.: max. 1/4 l water for 750 g potatoes
		Cooking larger quantities of food, stews and soups	60-150 mins.	Up to 3 l liquid plus ingredients
6-7	Gentle Frying	Frying escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	Steady frying	Turn halfway through cooking
7-8	Heavy Frying	Hash browns, loin steaks, steaks, Flädle (pancakes for garnishing soup)	5-15 mins. per pan	Turn halfway through cooking
9	Boiling Searing Deep frying	Boiling large quantities of water, cooking pasta, searing meat (goulash, pot roast), deep frying chips		



We recommend when boiling or searing foods using the highest heat setting at first and then letting foods requiring a longer cooking time finish cooking on the desired heat setting.



Overheated fats and oils can ignite quickly. If you are cooking foods in fat or oil (e.g. chips), remain nearby.

Baking

Oven function: Conventional


Baking tins

For Conventional dark metal and non-stick tins are suitable.


Oven levels

Baking with Conventional is only possible on one level.


1 baking tray:
e.g. oven level 3

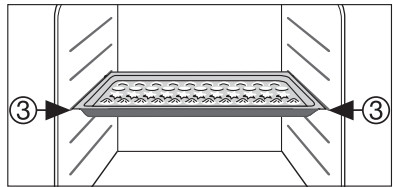

1 cake tin:
e.g. oven level 1

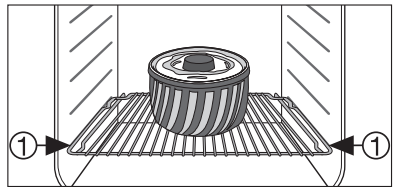

General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase the baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of the pastry, mixture or dough and the number and the type of baking tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.



With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to make use of the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Type of baking	Oven level	Temperature °C	Time
Baking in tins			
Ring cake or brioche	1	160-180	0:50-1:10
Madeira cake, fruit cakes	1	150-170	1:10-1:30
Sponge flan	2	160-180	0:25-0:40
Flan base – short pastry	3	190-210 ¹⁾	0:10-0:25
Flan base – sponge mixture	3	170-190	0:20-0:25
Apple tart (covered)	1	170-190	0:50-1:00
Apple pie (2 tins Ø20cm, placed diagonally to one another)	1	180-200	0:20-0:30
Savoury flan (e. g., quiche lorraine)	1	180-200	0:30-1:10
Cheesecake	1	160-180	1:00-1:30
Cakes/pastries/breads on baking trays			
Plaited bread/bread crown	3	170-190	0:30-0:40
Christmas stollen	3	160-180 ¹⁾	0:40-1:00
Bread (rye bread) first of allthen	2	250 ¹⁾ 160-180	0:20 0:30-1:00
Cream puffs, eclairs	3	190-210	0:25-0:40
Swiss roll	3	180-200 ¹⁾	0:10-0:20
Dry streusel cake	3	160-180	0:20-0:40
Buttered almond cake, sugar cakes, Bienenstich (custard-filled cake, coated with sugar and almonds)	3	190-210 ¹⁾	0:15-0:30
Fruit flans (made with yeast dough/ sponge mixture) ²⁾	3	170-190	0:25-0:50
Fruit flans made with short pastry ²⁾	3	170-190	0:40-1:20
Yeast cakes with delicate fillings (e. g., cream cheese, cream, etc.) (cooked on baking sheet)	3	160-180	0:40-1:20
Pizza (with a lot of topping) ²⁾	1	190-210 ¹⁾	0:30-1:00
Pizza (thin crust)	1	230-250 ¹⁾	0:10-0:25
Unleavened bread	1	230-250 ¹⁾	0:08-0:15
Tarts (Swiss-style)	1	210-230 ¹⁾	0:35-0:50

Type of baking	Oven level	Temperature °C	Time
Biscuits			
Short pastry biscuits	3	170-190 ¹⁾	0:06-0:20
Viennese whirls	3	160-180	0:10-0:40
Biscuits made with sponge mixture	3	170-190	0:15-0:20
Pastries made with egg white, meringues	3	100-120	2:00-2:30
Macaroons	3	120-140	0:30-0:60
Danish pastries	3	170-190	0:20-0:40
Puff pastries	3	190-210 ¹⁾	0:20-0:30
Rolls	3	180-220 ¹⁾	0:20-0:35
Small cakes (20 per tray)	3	170-190 ¹⁾	0:20-0:30

1) Pre-heat the oven

2) Use the all-purpose tray.

Tips on baking

Baking results	Possible cause	Remedy
The cake is not browned enough at the bottom	Wrong oven level	Place cake lower in the oven
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
Cake is not done within the baking time given	Temperature too low	Use a slightly higher oven setting

Roasting

Oven function: Conventional

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**



Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven.**
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Amount Weight	Oven level	Temperature °C	Time Hr.:Min.
Beef				
Pot roast	1-1.5 kg	1	200-250	2:00-2:30
Roast beef or fillet		1		per cm. of thickness
- rare	per cm. of thickness	1	230-250 ¹⁾	0:06-0:08
- medium	per cm. of thickness	1	230-250 ¹⁾	0:08-0:10
- well done	per cm. of thickness	1	210-230 ¹⁾	0:10-0:12

Type of meat	Amount Weight	Oven level	Temperature °C	Time Hr.:Min.
Pork				
Shoulder, neck, ham joint,	1-1.5 kg	1	210-220	1:30-2:00
Chop, spare rib	1-1.5 kg	1	180-190	1:00-1:30
Meat loaf	750 g-1 kg	1	170-180	0:45-1:00
Knuckles of pork (pre-cooked)	750 g-1 kg	1	210-220	1:30-2:00
Veal				
Roast veal	1 kg	1	210-220	1:30-2:00
Knuckle of veal	1.5-2 kg	1	210-225	2:00-2:30
Lamb				
Leg of lamb, roast lamb	1-1.5 kg	1	210-220	1:15-2:00
Saddle of lamb	1-1.5 kg	1	210-220	1:00-1:30
Game				
Saddle of hare, leg of hare	up to 1 kg	3	220-250 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg	1	210-220	1:00-1:30
Haunch of venison	1.5-2 kg	1	200-210	1:15-1:50
Poultry				
Poultry portions (4 to 6 pieces)	each 200-250g	3	220-250	0:35-0:50
Chicken halves (2 to 4 pieces)	each 400-500 g	3	220-250	0:35-0:50
Chicken, poulard	1-1.5 kg	1	220-250	0:45-1:15
Duck	1.5-2 kg	1	210-220	1:00-1:30
Goose	3.5-5 kg	1	200-210	2:30-3:00
Turkey	2.5-3.5 kg 4-6 kg	1	200-210 180-200	1:30-2:00 2:30-4:00
Fish (steamed)				
Whole fish	1-1.5 kg	2 / 3	210-220	0:45-1:15

1) Pre-heat the oven

Grill Sizes

Oven function: Grill  or Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- For grilling, use both the oven shelf and the roasting tray together.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1. Side	2. Side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Filet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Filet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	2-3 mins.	2-3 mins.
Toast with topping	3	6-8 mins.	---

1) Use the grill without the roasting tray

Making Preserves

Oven function: Bottom heat

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots ¹⁾	160-170	50-60	5-10
Mushrooms ¹⁾	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Attention: **Do not use any scouring agents, sharp cleaning tools or scourers.**

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and warm water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.

Oven interior

Clean the appliance after each use. In this way, dirt is easier to clean off and is not allowed to burn on.

1. For cleaning, turn the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



Clean stubborn dirt with a special oven cleaner.



Important: If using an oven spray, please follow the manufacturer's instructions exactly.

Accessories



Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then un-hitch at the back (2).

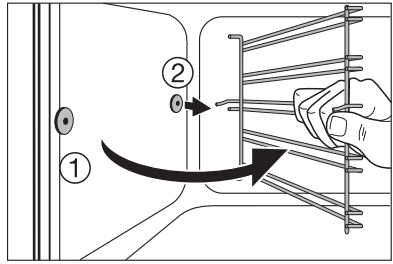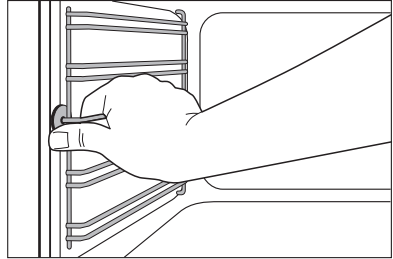


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

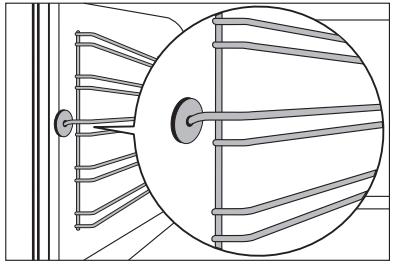

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

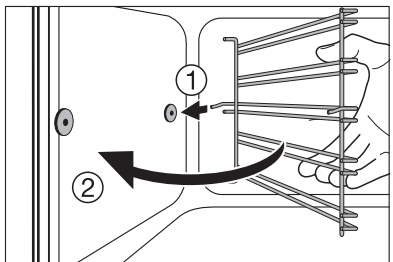

Oven Lighting




Warning: Risk of electric shock! Prior to changing the oven light bulb:
– Switch off the oven!
– Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/ cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

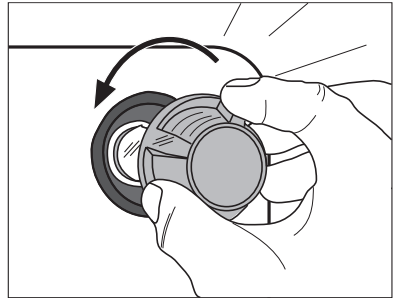

Oven Ceiling

The upper heating element can be folded down to make it easier to clean the oven ceiling.

Folding down the heating element




Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.



Caution: Do not use force to press the heating element down! The heating element might break.

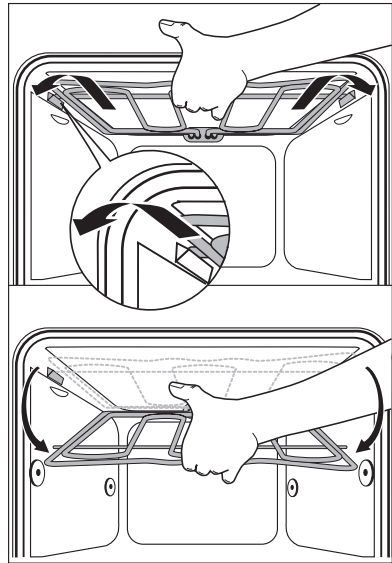


Cleaning the oven ceiling

Repositioning the heating element

1. Move the heating element back up towards the oven ceiling.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.



Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.

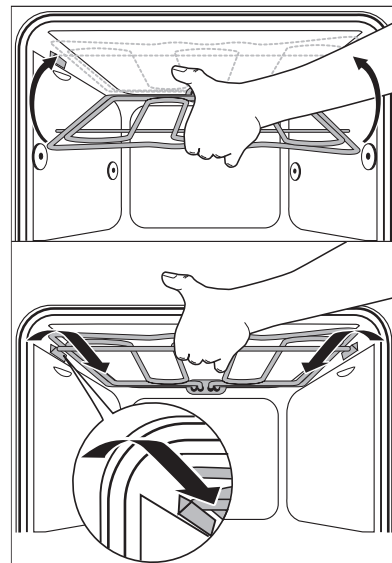


Oven Door

The door of your appliance may be removed for cleaning.


Removing the oven door

1. Open the oven door completely.
2. **Completely** fold back the **clamping levers** on both door hinges.
3. Grip the oven door with both hands and close it about 3/4 **going past the point of resistance**.
4. Pull the door away from the oven (**Caution:** the door is heavy!).
5. Place the door, outer surface downwards, on a soft, flat surface, (for example on a blanket) to avoid scratches.

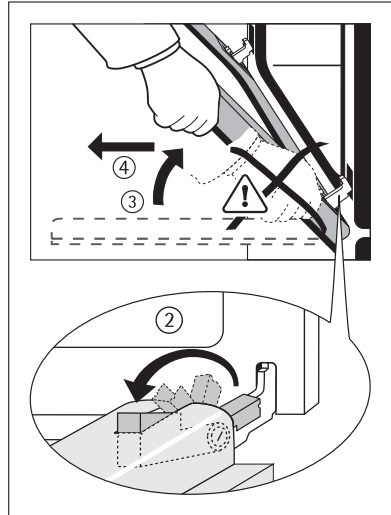

Hanging the oven door

1. From the side of the door on which the handle is positioned, take hold of the sides of the door with both hands.
2. Hold the door at an angle of approx. 60°.
3. Insert the door hinges as far as possible into the two slots on the right and left at the bottom of the oven **at the same time**.
4. Lift the door up until resistance is met and then open it fully.
5. Fold the clamping levers on both door hinges back into their original position.
6. Close the oven door

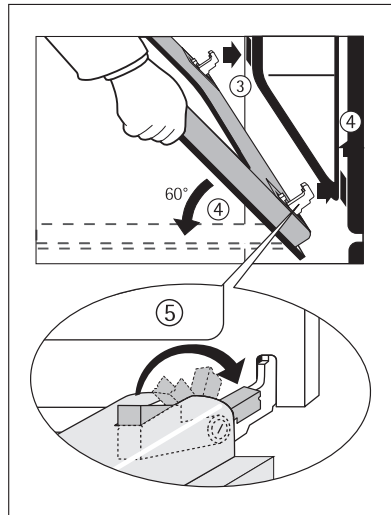

Oven door glass

The oven door has two glass plates, set next to each other. The inner plate can be removed for cleaning.




Caution: the following steps must be performed only with the oven door removed! If the glass is removed while the door is attached, the lighter weight may cause it to spring up and cause injury.



Important! Rough handling of the glass, especially at the edges of the front plate, may cause it to break.

Removing the glass from the door


1. Detach the door and, with the handle downwards, lower it onto a soft, even surface.
2. Grasp the top glass plate underneath, and push it towards the door handle against the pressure spring, until it comes free (①).
3. Hold the plate **gently** underneath, and slide it out (②).

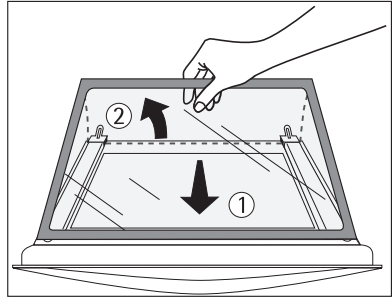

Cleaning the glass

Attaching the glass to the door

1. Insert the plate obliquely into the retaining frame at the handle (①).
2. Lower the plate. Place the glass against the pressurespring at the handle, and in front of the retaining frame at the bottom of the door, then push it **into the frame** (②). The glass plate must be firmly attached!

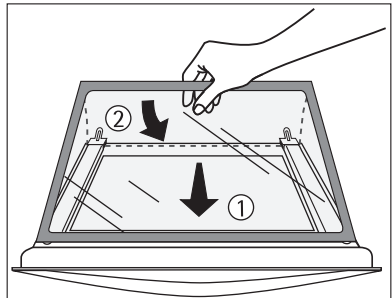

Re-attach the door to the oven.

What to do if ...

Problem	Possible cause	
The cooking zones are not functioning	Consult the operating instructions for the built-in cooking surface	
The oven does not heat up	The oven is not switched on	Switch the oven on
	The clock is not set	Set the current time on the clock
	The required settings have not been set	Check the settings
	The house wiring fuse (in the fuse box) has tripped	Check the fuse. If the fuses trip a number of times, please call an authorised electrician.
The oven lighting is not operating	The oven light bulb is faulty	Replace the oven bulb

If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Installation Instructions






Attention: The new appliance may only be installed and connected by a **registered expert**.




Please comply with this. If you do not, any damage resulting is not covered by the warranty.




Safety information for the installer


- The electrical installation is to be set up so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation.
Suitable separation devices include e.g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.
- Built-in ovens and built-in cooking surfaces are fitted with special connection systems. For safety reasons, they must only be combined with appliances from the same manufacturer.

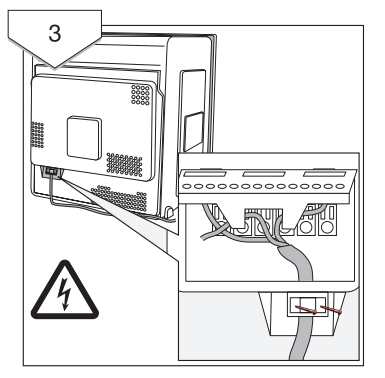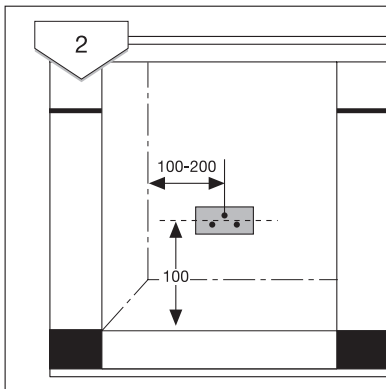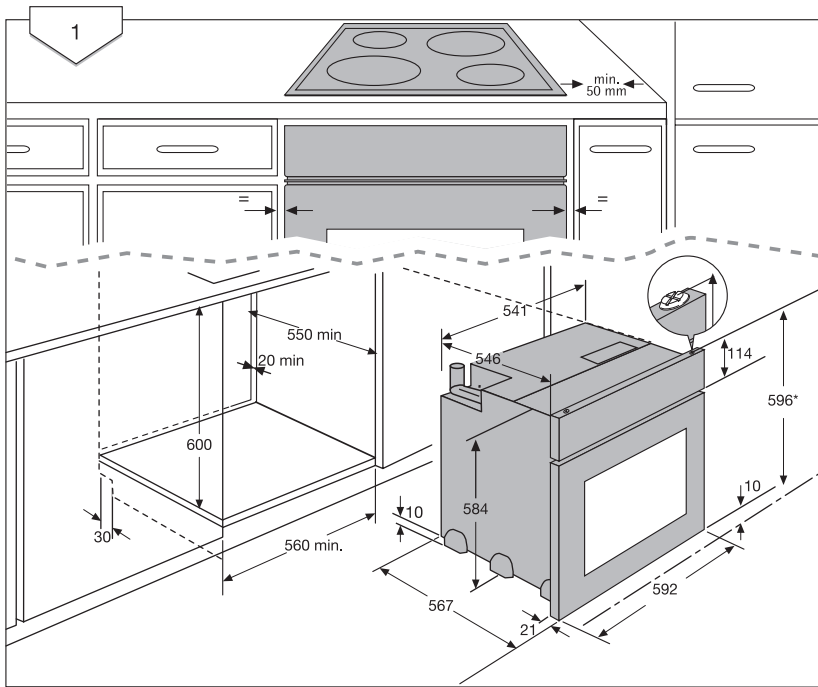

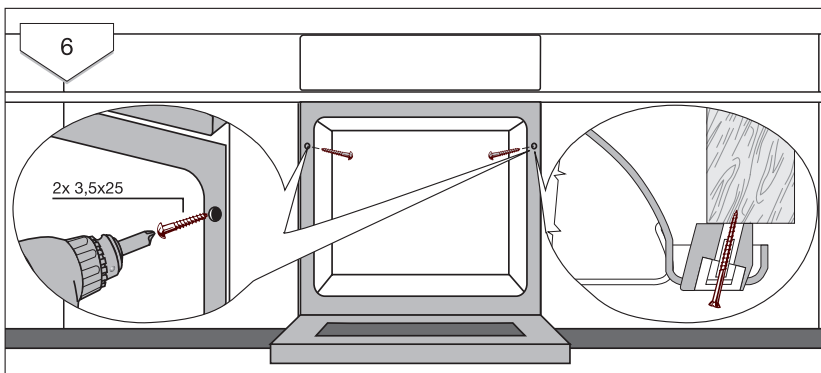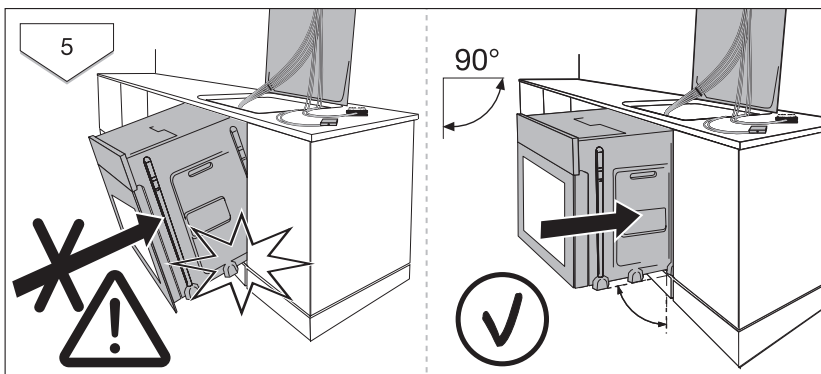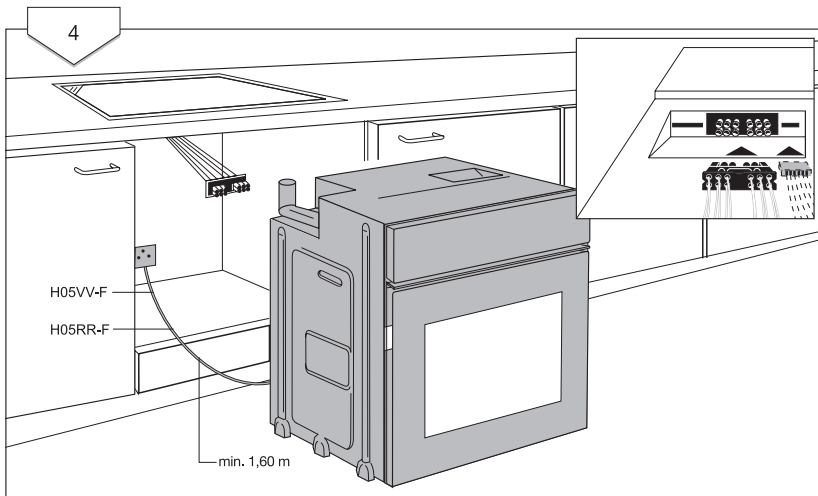

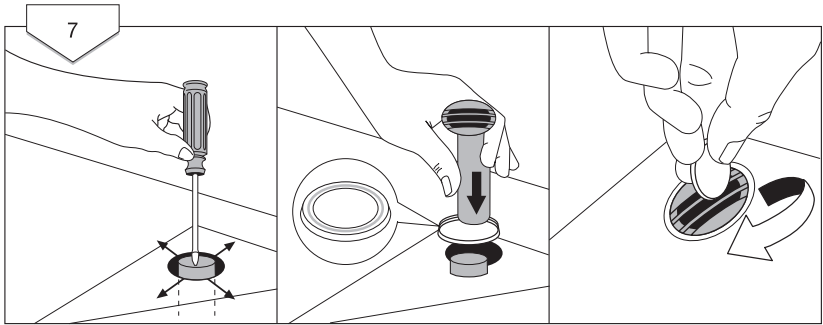

Ausbau/Removal

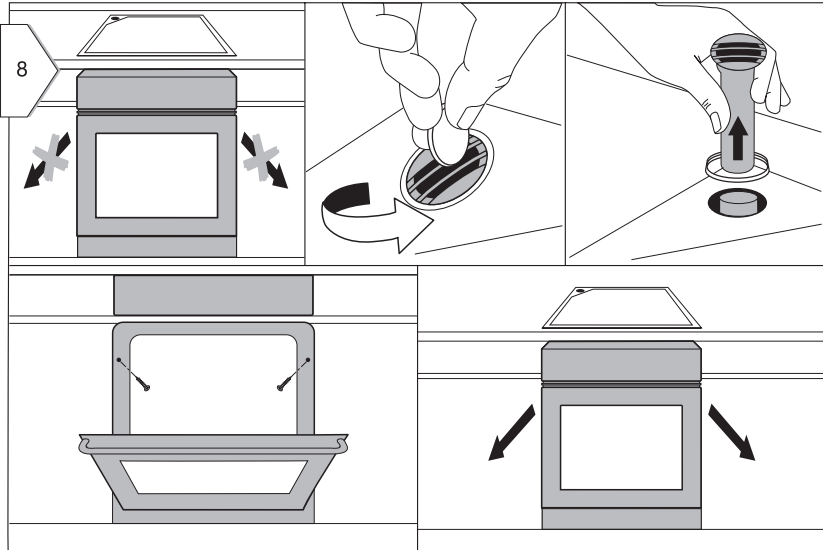

Guarantee Conditions

Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas

In these countries our AEG agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevőszolgálati irodák külföldön

Ezekben az országokban a mi AEG vevőszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG.

Customer Service Centres

Saudi Arabia

Alia Trading Corporation
P.O. Box 4101
King Abdul Aziz Street
Riyadh
Tel.: 4645977
Badi Nahas Est.
Siteen Street
P.O. Box 11529
Jeddah - 21463
Saudi Arabia
Tel.: 660 68 52 / 697 00 60


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

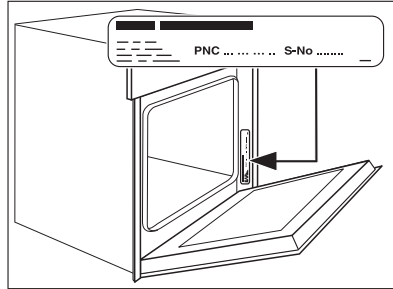

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 926 484-B-230305-01

Subject to change without notice