


FEATURES

- Clock function: Hour and Minute display.
- 12 or 24 hour format.
- Dual timer function: Minute and Second display.
- Count up function: Minute and Second display

INSERT THE BATTERIES

- Open the battery cover at the back of the unit.
- Insert two "LR44" batteries in proper polarity (+) and (-) as indicated.
- Close the battery cover.

Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel - cadmium) batteries.

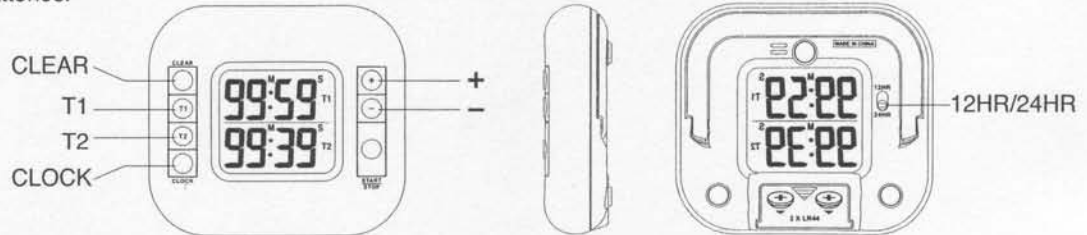

CLOCK SETTING

- Press and hold the CLOCK button for 3 seconds until the digits flash in display.
- Press "+" or "-" button to set the desired time. Press and hold the button to set the time at a fast rate.
- Press the CLOCK button to exit clock set mode.
- Slide the 12/24HR switch to select 12 or 24 hour mode.
- "AM" or "PM" will be displayed in the 12 HR format.

COUNTDOWN TIMER SETTING

- Press and hold T1 / T2 button for 3 seconds until the digits of Timer 1 / Timer 2 flash in display.
- Press "+" or "-" button to set desired countdown time. Press and hold the button to set the timer at a faster rate.
- Press the T1 / T2 button to exit setting mode of Timer 1 / Timer 2.

SINGLE COUNTDOWN TIMER (Only one timer is set)

- Press the START/STOP or T1 / T2 button to start countdown Timer 1 / Timer 2.
- The timer can be temporarily stopped by pressing the START/STOP or T1 / T2 button. You can restart it by pressing the START/STOP or T1 / T2 button again.
- When timer reach 0:00, the alarm sound for 1 minute. The timer will count up and the digits flash to show the time elapsed.
- When timer reach 0:00 and the alarm sound, press START/STOP or T1 / T2 button once to stop Bi-sound and press the button again to recall last countdown time.
- Press CLEAR button to reset digit when timer is in stop mode.
- The maximum count down time is 99 minutes and 30 seconds.
- In clock mode, the icon T1 or T2 will flash to indicate the timer is running. When timer reach 0:00 and the alarm sound, press START/STOP or T1 / T2 button once to stop Bi-sound

DUAL COUNTDOWN TIMER

- TIMER 1 and TIMER 2 can work at the same time. After the two timers are set, press START/STOP button to start the timers. The unit will sound if of the timer reach 0:00. Press START/STOP button to stop Bi-sound and stop the timer but the other timer run continuously. When the second timer reaches 0:00 and sound Bi-Bi, press START/STOP button to stop Bi-sound. Then, press START/STOP to recall the last countdown time of the two timers.
- In clock mode, the icon T1 and T2 will flash to indicate the timer channels are operating. When timer reach 0:00 and the alarm sound, press START/STOP button to stop Bi-sound

COUNT UP TIMER SETTING

- In clock mode, press the START/STOP button to start the count-up function.
- Press START/STOP button again to stop count-up function.
- Press CLEAR button to begin at "0:00".

HELPFUL HINTS

- Avoid exposing your Dual Timer to extreme temperature or water.
- Avoid contact with any corrosive materials such as perfume, alcohol, or cleaning agents.

MAVERICK LIMITED 90 DAY WARRANTY

Maverick Industries Inc. warrants this product to be free of defects in parts, materials and workmanship for a period of 90 days, from date of purchase. Should any repairs or servicing under this warranty be required, contact Maverick Customer Service by mail or phone for instructions on how to pack and ship the product to Maverick's National Service Center located as follows:

Maverick Customer Service

94 Mayfield Ave.
Edison NJ 08837
Telephone: (732) 417-9666 Hours: Weekdays 8:30 AM- 4:30 PM

Do not send any parts or product to Maverick without calling and obtaining a Return Authorization Number and instructions. This warranty is VOID if instructions for use are not followed; for accidental damage; for commercial use; for damage incurred while in transit; or if the product has been tampered with.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. www.maverickhousewares.com