

TOSHIBA

Leading Innovation >>>

Owner's Manual

Integrated High Definition LCD TV/DVD Combination



15CV100U

15CV101U

19CV100U

22CV100U

26CV100U

32CV100U

Owner's Record

The model number and serial number are on the back of your TV/DVD. Record these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this TV/DVD.

Model number:

Serial number:

For an overview of steps for setting up your new TV, see page 12.

Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an over-the-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition digital satellite program). For details, please contact your TV antenna installer, cable provider, or satellite provider.

Dear Customer,

Thank you for purchasing this Toshiba LCD TV/DVD. This manual will help you use the many exciting features of your new LCD TV/DVD. **Before operating your LCD TV/DVD, please read this manual completely**, and keep it nearby for future reference.

Safety Precautions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions. See item 25 on page 4.

WARNING: If you decide to wall mount this television, always use a UL Listed wall bracket appropriate for the size and weight of this television. The use of any wall bracket other than a UL Listed wall bracket appropriate for the size and weight of this television for wall mounting this television could result in serious bodily injury and/or property damage. See "Removing the Pedestal Stand" (E3 page 6).

NOTE TO CATV INSTALLERS

This is a reminder to call the CATV system installer's attention to Article 820-40 of the U.S. NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical. For additional antenna grounding information, see items 32 and 33 on page 4.

CHILD SAFETY:

It Makes A Difference How and Where You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:

The Issue

The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.

- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.



TOSHIBA Cares!

- The consumer electronics industry is committed to making home entertainment enjoyable and safe.

Tune Into Safety

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.



Wall Mounting: If you decide to wall mount your flat panel display, always:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.



www.CEA.org/safety

 
Important Safety Instructions

- 1) **Read these instructions.**
- 2) **Keep these instructions.**
- 3) **Heed all warnings.**
- 4) **Follow all instructions.**



- 5) **Do not use this apparatus near water.**
- 6) **Clean only with dry cloth.**
- 7) **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- 8) **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- 9) **Do not defeat the safety purpose of the polarized or grounding type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 10) **Protect the power cord** from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) **Only use attachments/accessories specified by the manufacturer.**
- 12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.** When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
- 14) **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Additional Safety Precautions

- 14a) **CAUTION:** If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 - ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock or fire.
 - NEVER allow your body to come in contact with any broken glass or liquid from the damaged television. The LCD panel inside the TV contains glass and a toxic liquid. If the liquid comes in contact with your mouth or eyes, or your skin is cut by broken glass, rinse the affected area thoroughly with water and consult your doctor.

- ALWAYS contact a service technician to inspect the TV any time it has been damaged or dropped.

15) CAUTION:

- To reduce the risk of electric shock, do not use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely to prevent blade exposure.
- To prevent electric shock, match wide blade of plug to wide slot; fully insert.

16) CAUTION:

Do not let children swallow the product or play with the plastic bag. Keep the product and the plastic bag out of the reach of children.

17) CAUTION:

Do not let water or other liquids come into contact with the product, as it may result in damage.

18) WARNING:

- To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- Keep the product away from direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
- The mains plug is used as the disconnect device, and therefore install the TV/DVD near the wall outlet so that the mains plug can be accessed easily at all times.

Installation, Care, and Service

Installation

Follow these recommendations and precautions and heed all warnings when installing your TV:

- 19) **WARNING: NEVER expose batteries to excessive heat such as sunshine, fire or the like.**

20)



ALWAYS plug the product into an outlet that is located in such a manner that it can be easily unplugged in case the product requires service.

- 21) NEVER route the product's power cord inside a wall or similar enclosed area.

- 22) Never modify this equipment. Changes or modifications may void: a) the warranty, and b) the user's authority to operate this equipment under the rules of the Federal Communications Commission.

23)



DANGER: RISK OF SERIOUS PERSONAL INJURY, DEATH, OR EQUIPMENT DAMAGE!




Never place the TV on an unstable cart, stand, or table. The TV may fall, causing serious personal injury, death, or serious damage to the TV.

- 24) To avoid damage to this product, never place or store the TV in direct sunlight; hot, humid areas; or areas subject to excessive dust or vibration.

- 25) Always place the TV on the floor or a sturdy, level, stable surface that can support the weight of the TV. In order to maintain stability and prevent the TV falling over, secure the TV with a sturdy strap from the hooks on the rear of the TV pedestal to a wall stud, pillar, or other immovable structure. Make sure the strap is tight, secure, and parallel to the floor.

Sturdy tie (as short as possible)

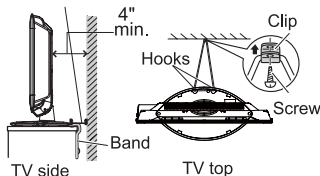


(The sturdy tie and hooks are applicable to 15CV100U, 15CV101U, 26CV100U and 32CV100U; the band is applicable to 15CV100U, 15CV101U and 26CV100U.)

- 26) The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

- 27) Never block or cover the slots or openings in the TV cabinet back, bottom, and sides. Never place the TV:

- on a bed, sofa, rug, or similar surface;
- too close to drapes, curtains, or walls; or
- in a confined space such as a bookcase, built-in cabinet, or any other place with poor ventilation.

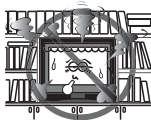

The slots and openings are provided to protect the TV from overheating and to help maintain reliable operation of the TV. Leave a space of at least 4 (four) inches around the TV.


- 28) Always place the back of the television at least 4 (four) inches away from any vertical surface (such as a wall) to allow proper ventilation.

- 29) Never allow anything to rest on or roll over the power cord, and never place the TV where the power cord is subject to wear or abuse.

- 30) Never overload wall outlets and extension cords.

- 31) Always operate this equipment from a 120 V AC, 60 Hz power source only.

- 32) Always make sure the antenna system is properly grounded to provide adequate protection against voltage surges and built-up static charges (see Section 810 of the National Electric Code).

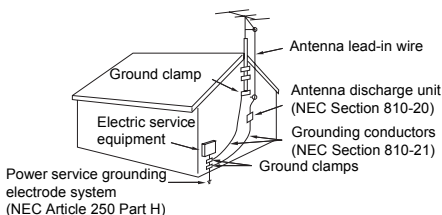

33) **! DANGER: RISK OF SERIOUS PERSONAL INJURY OR DEATH!**

- Use extreme care to make sure you are never in a position where your body (or any item you are in contact with, such as a ladder or screwdriver) can accidentally touch overhead power lines. Never locate the antenna near overhead power lines or other electrical circuits.
- Never attempt to install any of the following during lightning activity: a) an antenna system; or b) cables, wires, or any home theater component connected to an antenna or phone system.

Care

For better performance and safer operation of your TOSHIBA TV/DVD, follow these recommendations and precautions:

- 34) If you use the TV in a room whose temperature is 32 °F (0°C) or below, the picture brightness may vary until the LCD warms up. This is not a sign of malfunction.

- 35) Always unplug the TV before cleaning. When cleaning your TV, please first remove any dirt or dust from the surface. Gently wipe the cabinet and the display panel surface (the TV screen) with a dry, soft cloth only (cotton, flannel, etc.). The enclosed cleaning cloth is for cabinet cleaning. Harsh rubbing or use of a dirty or stiff cloth will scratch the TV surface. Avoid contact with alcohol, thinner, benzene, acidic or alkaline solvent cleaners, abrasive cleaners, or chemical cloths, which may damage the TV surface. Never spray volatile compounds such as insecticide on the TV surface. Such products may damage or discolor the TV.



36) **! WARNING: RISK OF ELECTRIC SHOCK! !**



Never spill liquids or push objects of any kind into the TV cabinet slots.

- 37) While it is thundering, do not touch the connecting cables or apparatus.

- 38) For added protection of your TV from lightning and power surges, always unplug the power cord and disconnect the antenna from the TV if you leave the TV unattended or unused for long periods of time.



- 39) ALWAYS unplug the TV to completely disconnect from mains power. When the TV is turned off using the on/off switch, it is not completely disconnected from power and a minute amount of current is still consumed.

- 40) During normal use, the TV may make occasional snapping or popping sounds. This is normal, especially when the TV is being turned on or off. If these sounds become frequent or continuous, unplug the power cord and contact a Toshiba Authorized Service Center.

- 41)  **WARNING: RISK OF SERIOUS PERSONAL INJURY OR EQUIPMENT DAMAGE!** 
Never strike the screen with a sharp or heavy object.

- 42) • The LCD screen of this product can be damaged by ultraviolet radiation from the sun. When selecting a location for the television, avoid locations where the screen may be exposed to direct sunlight, such as in front of a window.
• Never touch, press, or place anything on the LCD screen. These actions will damage the LCD screen. If you need to clean the LCD screen, follow the instructions in item 35 on page 4.

Service

- 43)  **WARNING: RISK OF ELECTRIC SHOCK!** 
Never attempt to service the TV yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Failure to follow this WARNING may result in death or serious injury. Refer all servicing not specified in this manual to a Toshiba Authorized Service Center.

- 44) If you have the TV serviced:
- Ask the service technician to use only replacement parts specified by the manufacturer.
 - Upon completion of service, ask the service technician to perform routine safety checks to determine that the TV is in safe operating condition.

- 45) The fluorescent lamp(s) in the LCD panel contains a small amount of mercury.
When the TV reaches the end of its useful life, dispose of the used TV by the approved method for your area, or ask a qualified service technician to properly dispose of the TV.

Note: The lamp(s) inside this product contains mercury. Disposal may be regulated due to environmental considerations. For disposal or recycling information, contact your local authorities or the Electronics Industries Alliance (www.eiae.org).

Choosing a location for your LCD TV

To Display your LCD TV on the included Pedestal Stand:

Observe the following safety precautions:

- 1) Read and Follow the pedestal assembly instructions included with the pedestal.

CAUTION: Before beginning pedestal assembly, carefully lay the front of the LCD Panel face down on a flat, cushioned surface such as a quilt or blanket. Leave the bottom of the TV protruding over the edge of the surface and assemble the pedestal as indicated below.


Note: Extreme care should always be used when attaching the pedestal stand to avoid damage to the LCD panel.

- 2) Place the TV on a sturdy, level surface that can support the weight of the TV.
3) Be sure to secure the TV to a wall, pillar, surface, or other immovable structure. (See item 25, page 4).

To Fold the Pedestal Stand (Applicable to 19CV100U/22CV100U)

- 1) Slide the lever on the back side of the pedestal stand to the left.
2) Lay the display down.

Slide the lever to the left

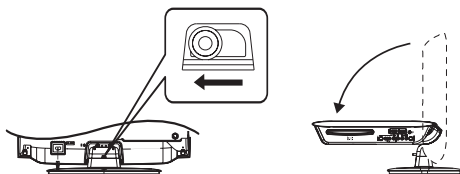

Rear side of the pedestal stand

IMPORTANT: Do not operate the LCD TV while the pedestal stand is folded.

To Display your LCD TV using a Wall Bracket:

If you decide to wall mount your LCD TV, always use a UL listed wall bracket appropriate for the size and weight of the LCD TV (See page 2):

- 1) **CAUTION:** Two people are required for installation.
2) Unplug and remove any cables and/or other component connectors from the rear of the TV.
3) Follow the instructions provided with your wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV as described in the instructions provided with the wall bracket.
4) **IMPORTANT:** Always use the screws supplied or recommended by the wall mount manufacturer.
5) After attaching the appropriate bracket(s) to the wall and the back of the TV, remove the pedestal stand from the TV as described below.


Removing the Pedestal Stand

- 1) Carefully lay the front of the TV face down on a flat, cushioned surface such as a quilt or blanket. Leave the stand protruding over the edge of the surface.


Note: *Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel.*

- 2) Remove the screws shown in the diagram below. This will allow removal of the pedestal stand.
- 3) Once you have removed all screws holding the pedestal stand in place, remove the pedestal stand from the TV by sliding the pedestal stand away from the TV.


15CV100U/15CV101U

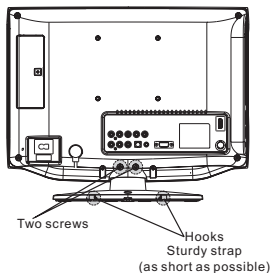

19CV100U/22CV100U

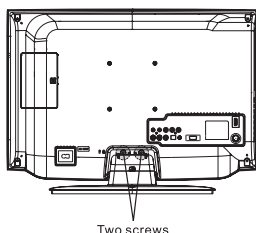

26CV100U/32CV100U

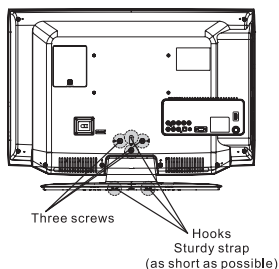


Note:

- 15CV100U, 22CV100U and 26CV100U are used for illustration purposes.
- The hooks for sturdy strap are not applicable to 19CV100U and 22CV100U.

Notes on moisture condensation

Moisture condensation damages the unit. Please read the following carefully.

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day and drops of water form on the outside of the glass. In the same way, moisture may condense on this unit's internal optical pick-up lens, one of the most crucial internal parts of the unit.

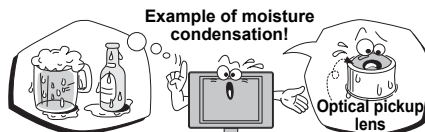


Moisture condensation may occur in the following situations:

- When you move the unit from a cold area to a warm area.
- When you use the unit in a room in which the heat was just turned on.
- When you use the unit in an area where cold air from an air conditioner directly hits the unit.
- When you use the unit in a humid area.



Never use the unit when moisture condensation may occur.

Using the unit when moisture condensation exists may damage discs and internal parts. Connect the power cord of the unit to the wall outlet, turn on the unit, remove the disc, and leave it for two or three hours. After two or three hours, the unit will have warmed up and evaporated any moisture. Leaving the TV connected to the wall outlet will help prevent moisture condensation in the unit.

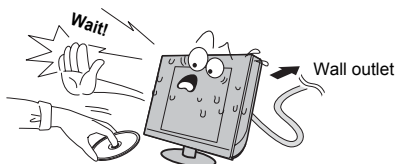

Notes on discs

On handling discs

- Do not touch the playback side of the disc. Handle the disc as shown in the figure below.



- Do not attach paper or tape to discs.



On cleaning discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.



- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.


On storing discs

- Do not store discs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping.


Structure of disc contents

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. Video CDs and Audio CDs are divided into tracks.

DVD

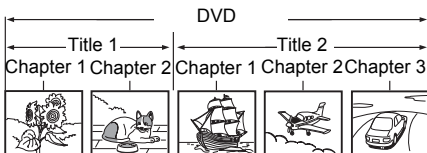

Video CD/Audio CD

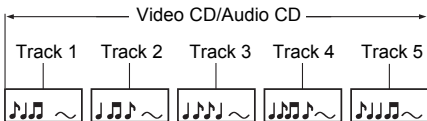

Each title, chapter or track is assigned a number, which is called "title number", "chapter number" or "track number" respectively. There may be discs that do not have these numbers.

 
Notes on copyright

The unauthorized recording, use, distribution, or revision of copyrighted materials including, without limitation, television programs, videotapes, and DVDs, is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

About this owner's manual

This owner's manual explains the basic instructions of this TV/DVD. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the TV/DVD may not respond to all operating command. This is not a defect of the TV/DVD. Refer to the instruction notes of discs.

The following symbol may appear on the TV screen during operation.



It means that the operation is not permitted by the TV/ DVD or the disc. For example, sometimes it is unable to stop the playback of copyright message of the disc when the Stop button is pressed. Alternatively, this symbol may also indicate that the feature is not available for the disc.

Notes on region numbers

The region number of this TV/DVD is 1. If region numbers, which stand for their playable area, are printed on your DVD and you do not find (1) or (2), disc playback will not be allowed by the player. (In this case, the TV/ DVD will display a message on-screen.). Some DVDs that have no region code label may still be subject to area restrictions and therefore not playable.

On Video CDs

This TV/DVD supports Video CDs equipped with the Playback Control (PBC) function, version 2.0. You can enjoy two playback variations depending on types of discs.

- Video CD not equipped with PBC function (Version 1.1)**

Sound and movie can be played on this TV/DVD in the same way as a DVD.

- Video CD equipped with PBC function (Version 2.0)**

In addition to operation of a Video CD not equipped with the PBC function, you can enjoy playback of interactive software with search function by using the on-screen playback menu. Some of the functions described in this owner's manual may not work with some discs.

Playable discs

This TV/DVD can play the following discs.

	Disc mark	Contents	Disc size	Maximum playback time
DVD Video disc		Audio + Video (moving pictures)	12 cm	Approx. 4 hours (single sided disc)
				Approx. 8 hours (double sided disc)
			8 cm	Approx. 80 minutes (single sided disc)
				Approx. 160 minutes (double sided disc)
Video CD		Audio + Video (moving pictures)	12 cm	Approx. 74 minutes (single sided disc)
			8 cm	Approx. 20 minutes (single sided disc)
Audio CD		Audio	12 cm	Approx. 74 minutes (single sided disc)
			8 cm	Approx. 20 minutes (single sided disc)

The following discs are also supported.

- DVD-R/RW discs containing files of DVD video format.
- CD-R/CD-RW discs containing CD-DA, Video CD, MP3, WMA, or JPEG files.
- Kodak Picture CD and FUJICOLOR CD.

Some of these discs may be incompatible.

- You cannot play discs other than those listed above.
- You cannot play discs of DVD-RAM, DVD-ROM, CD-ROM, Photo CD, etc., or non-standardized discs even if they may be labeled as above.
- Some CD-R/RWs cannot be played back depending on the recording conditions.
- This TV/DVD uses the NTSC color system, and cannot play DVD video discs recorded in any other color system (PAL, SECAM, etc.).
- This TV/DVD can play an 8 cm disc. Please do not use a disc adapter. It may cause trouble.
- Please do not insert any disc of an irregular shape into the TV/DVD, as it may interfere with the function of the TV/DVD. You may not be able to remove it.
- Please do not use after market accessories, such as a ring protector, as this may cause trouble with the operation of the TV/DVD.

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this TV/DVD will successfully play every disc bearing the DVD and CD logos. If you happen to experience any difficulty playing a DVD or CD on this TV/DVD, please contact Toshiba Customer Service.

DVD is a trademark of DVD Format/Logo Licensing Corporation.

FCC Declaration of Conformity Compliance Statement (Part 15):

The **Toshiba 15CV100U, 15CV101U, 19CV100U, 22CV100U, 26CV100U and 32CV100U LCD TV/ DVD combinations** comply with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The party responsible for compliance to these rules is:

Toshiba America Consumer Products, L.L.C.
82 Totowa Rd. Wayne, NJ 07470.

Ph: 1-800-631-3811

Note: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by removing and applying power to the equipment, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: *Changes or modifications to this equipment not expressly approved by Toshiba could void the users authority to operate this equipment.*

ENERGY STAR® User Information

ENERGY STAR User Information Statement: the factory default settings of this television meet ENERGY STAR® requirements. Enabling or changing certain features and functionality (e.g. Picture Settings) may increase energy consumption, possibly beyond the limits required for ENERGY STAR qualification.

To ensure your television is operating at optimal energy efficiency, select [Home] mode during initial activation.

 


ENERGY STAR® qualified TV. Products that earn the ENERGY STAR prevent green house gas emissions by meeting strict guidelines set by the U.S. Environmental Protection Agency. ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Important notes about your LCD TV

The following symptoms are technical limitations of LCD Display technology and are not an indication of malfunction; therefore, Toshiba is not responsible for perceived issues resulting from these symptoms.

- 1) An afterimage (ghost) may appear on the screen if a fixed, non-moving image is displayed for a long period of time. The afterimage is not permanent and will disappear in a short period of time.
- 2) The LCD panel contained in this TV is manufactured using an extremely high level of precision technology; however, there may be an occasional pixel (dot of light) that does not operate properly (does not light, remains constantly lit, etc.). This is a structural property of LCD technology, is not a sign of malfunction, and is not covered under your warranty. Such pixels are not visible when the picture is viewed from a normal viewing distance.



CERTIFICATION: COMPLIES WITH FDA PERFORMANCE STANDARDS FOR LASER PRODUCTS EXCEPT FOR DEVIATIONS PURSUANT TO LASER NOTICE NO.50, DATED JUNE 24, 2007.

CAUTION:

- THIS PRODUCT EMPLOYS A LASER SYSTEM.
- TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE.
- SHALL THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE CENTER.
- USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.

Trademark Information

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- QSound and [Q] symbol are trademarks of QSound Labs, Inc.
- Manufactured under license under U.S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks and DTS Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.


Contents

Important Safety Instructions	3
Installation, Care, and Service	3
Choosing a location for your LCD TV	5
Notes on discs	7
Chapter 1: Introduction	12
Features of your new TV	12
Overview of steps for installing, setting up, and using your new TV	12
TV front, top and side panel controls and connections	13
TV back panel connections	16
Chapter 2: Connecting your TV	17
Overview of cable types	17
About the connection illustrations	17
Connecting TV to a power source	17
Connecting a VCR, and antenna, Cable TV ..	18
Connecting a camcorder	18
Connecting a DVD player with ColorStream® (component video)	19
Connecting a satellite receiver	19
Connecting an HDMI or DVI device to the HDMI™ input	20
REGZA-LINK® connection	21
Connecting a digital audio system	22
Connecting a personal computer (PC)	23
Chapter 3: Using the remote control	24
Preparing the remote control for use	24
Installing the remote control batteries	24
Learning about the remote control	25
Chapter 4: Menu layout and navigation	27
Main menu layout	27
Setup/Installation menu layout	27
Navigating the menu system	27
Chapter 5: Setting up your TV	28
Initial Setup	28
Selecting the menu language	28
Configuring the antenna input source for the ANT/CABLE terminal	28
Programming channels into the TV's channel memory	29
Programming channels automatically ..	29
Programming channels manually	29
Labeling channels	30
Setting the HDMI™ audio mode	31
Viewing the digital signal meter	32
Setting the Time Zone	32
Viewing the system status	32
Reset Factory Defaults	32
Chapter 6: Using the TV's features	33
Selecting the video input source to view	33
Labeling the video input sources	33
Tuning channels	34
Setting the Channel Tuning Mode	34
Tuning to the next programmed channel	34
Tuning to a specific channel (programmed or unprogrammed)	35
Switching between two channels using Channel Return	35
Selecting the picture size	35
Scrolling the TheaterWide® picture (TheaterWide 2 and 3 only)	37
Using the auto aspect ratio feature	37
Selecting the cinema mode	37
Adjusting the picture	38
Selecting the picture mode	38
Adjusting the picture quality	38
Using the closed caption mode	39
Base closed captions	39
Digital CC Settings	39
CC Selector	40
Adjusting the audio	40
Muting the sound	40
Using the digital audio selector	40
Selecting stereo/SAP broadcasts	40
Adjusting the audio quality	41
Selecting the optical audio output format	41
Using the Dolby® Digital Dynamic Range Control feature	42
Using the Locks menu	42
Entering the PIN code	42
If you cannot remember your PIN code	42
Changing your PIN code	42
Blocking TV programs and movies by rating (V-Chip)	43
Downloading an additional rating system for blocking TV programs and movies ..	43
Unlocking programs temporarily	44
Using the input lock feature	45
Using the GameTimer®	45
Using the control panel lock feature	45
Using the PC settings feature	46
Setting the PC Audio	46
Setting the sleep timer	47
Using REGZA-LINK®	47
REGZA-LINK® playback device (DVD player, etc.) control	47
REGZA-LINK® Player Control menu functions	48
REGZA-LINK® input source selection...	48
VOLUME and MUTE controls of Audio Receiver	48
Other REGZA-LINK® functions	48
Displaying TV status information	49
Understanding the auto power off feature....	49

Understanding the last mode memory feature	49
Chapter 7: Using the TV's advanced features	50
Using the advanced picture settings features	50
Using dynamic contrast	50
Using the static gamma feature	50
Selecting the color temperature	50
Using CableClear® digital noise reduction	51
Using MPEG noise reduction	51
Using the Game Mode feature	51
Using the Auto Brightness Sensor	51
Using the advanced audio settings features	52
Using the QSound® sound feature	52
Using the Media Player	52
Media Player Specifications	52
Basic Operation	53
Viewing JPEG files	53
Listening to MP3 files	54
Chapter 8: Basic disc playback	56
Disc playback	56
Basic playback (DVD/VCD/CD)	56
Removing a disc	57
Disc playback reminders	57
Playback navigation	57
Playing in fast reverse or fast forward direction (DVD/VCD/CD)	57
Playing frame by frame (DVD/VCD)	57
Playing in slow motion (DVD/VCD)	57
Locating a chapter or track (DVD/VCD/CD)	58
Chapter 9: Advanced disc playback	59
Zoom function/Scene navigation	59
Using Zoom (DVD/VCD)	59
Locating a specific scene (DVD/VCD/CD)	59
Scene bookmark	60
Bookmarking a scene (DVD/VCD/CD)	60
Viewing a scene bookmark (DVD/VCD/CD)	60
Repeat playback/A-B repeat	60
Enabling repeat playback (DVD/VCD)	60
Enabling A-B repeat mode (DVD/VCD/CD)	61
Programmed playback/Random playback	61
Programming the playback sequence (VCD)	61
Enabling random playback (VCD)	62
Scene angle/Title selection/DVD menu	62
Changing the scene angle (DVD)	62
Selecting a DVD title (DVD)	62
DVD menu (DVD)	62
Soundtrack language/Audio channel/Subtitle	63
Selecting a soundtrack language (DVD)	63
Selecting the audio channel (VCD)	63
Viewing subtitles (DVD)	63
Playback information/VCD playback control	63
Viewing the playback info (DVD/VCD)	63
Turning off the PBC function (VCD)	64
MP3, WMA, JPEG, and Audio CD operation	65
MP3/WMA/JPEG/Audio CD information (CD)	65
About the file browser (CD)	66
Playing an audio file (CD)	66
Viewing a JPEG file (CD)	67
Viewing a slide show (CD)	67
MP3, WMA, JPEG and Audio CD playback modes	68
Enabling repeat playback (CD)	68
Enabling random playback (CD)	68
Programming the playback sequence (CD)	69
Chapter 10: Customizing disc playback	70
Customizing disc playback	70
Configuring the disc playback settings (DVD/VCD/CD)	70
Disc playback setup	71
Chapter 11: Troubleshooting	75
General troubleshooting	75
LED Indication	77
Chapter 12: Appendix	78
Specifications	78
Acceptable signal formats for PC IN and HDMI terminals	79
Limited United States Warranty LCD TV/DVD Combination – Depot Repair Warranty	80
The GNU General Public License (GPL)	82
The Libpng License Notices	85
The zlib License	86

Features of your new TV

The following are just a few of the many exciting features of your new Toshiba integrated HD, LCD TV/DVD:

- **Integrated digital tuning (8VSB ATSC and QAM)** eliminates the need for a separate digital converter set-top box (in most cases).
- **1080p output resolution**
- **Two HDMI™** digital, high-definition multimedia interfaces with 1080p input support (📖 Page 20).
- **HDMI capabilities**
- **Lip-Sync** feature activates an auto audio/video display timing adjustment function that allows HDMI source devices to accurately perform synchronization automatically.
- **REGZA-LINK®** allows control of external devices from the TV remote control via HDMI connection (📖 Page 47).
- **ColorStream® HD** high-resolution component video input (📖 Page 19).
- **QSound®** audio technologies (📖 Page 52).
- **Digital Audio Out** optical audio connection with Dolby® Digital optical output format (📖 Page 22).
- **CableClear®** digital picture noise reduction (📖 Page 51).
- **PC IN (Analog RGB)** computer terminal (📖 Page 23).
- **Channel Labeling** allows you to put the Call Letters (e.g. ABC, HBO, etc.) on the screen along with the station numbers, so you always know what you're watching (📖 Page 30).
- **Media Player** allows you to view your JPEG pictures and listen to MP3 music (📖 Page 52).
-  **ENERGY STAR® qualified**

Overview of steps for installing, setting up, and using your new TV

Follow these steps to set up your TV and begin using its many exciting features.


- 1 Observe the following when choosing a location for the TV:
 - Read “Important notes about your LCD TV” (📖 Page 9).
 - Place the TV in a proper location (📖 Page 2-5)
- 2 Do not plug in any power cords until AFTER you have connected all cables and devices to your TV.
- 3 BEFORE connecting cables or devices to the TV, learn the functions of the TV's connections and controls (📖 Page 13-16).
- 4 Connect your other electronic device(s) to the TV (📖 Page 17-23).
- 5 See “Chapter 3: Using the remote control” (📖 Page 24) for an overview of the buttons on the remote control, install the batteries and prepare to operate your other device(s).
- 6 AFTER connecting all cables and devices, plug in the power cords for your TV and other devices.


 
 
 
 
Note: After you turn on the TV, the Initial Setup menu appears automatically by default.

- 7 See “Chapter 4: Menu layout and navigation” for a quick overview of navigating the TV's menu system (📖 Page 27).
- 8 Program channels into the TV's channel memory (📖 Page 29).
- 9 For details on using the TV's features, see Chapters 6 and 7.
- 10 For details on disc playback, see Chapter 8 and 9.
- 11 For help, refer to the Troubleshooting Guide, see Chapter 11.
- 12 For technical specifications and warranty information, see Chapter 12.


TV front, top and side panel controls and connections

15CV100U/15CV101U

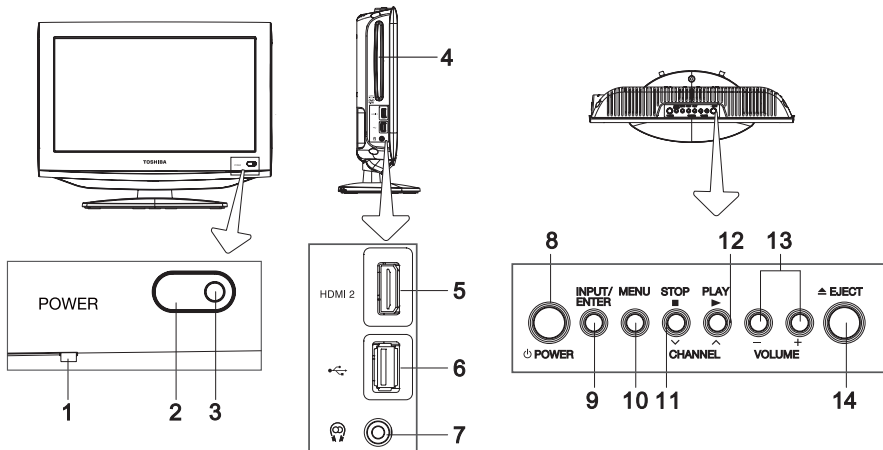

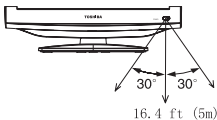- 1 Power LED** — This indicates the TV's status. See "LED indication" on Page 77 for additional information.
- 2 Remote sensor (embedded)** — Point the remote control toward this remote sensor.
Effective range:

16.4 ft (5m)
- 3 Auto Brightness Sensor** — This sensor will detect the ambient light conditions to optimize the backlighting levels. See "Using the Auto Brightness Sensor" on Page 51 for additional information.
- 4 Disc slot** — Load the disc into the disc slot to view or listen.
- 5 HDMI 2** — High-Definition Multimedia Interface (HDMI 2) input receives digital audio and uncompressed digital video from an HDMI device or uncompressed digital video from a DVI device. HDMI connection is necessary to receive 1080p signals.
- 6 USB terminal** — For use when inserting a USB device.
- 7 Headphone jack** — For use when inserting a stereo headphone (not supplied) with a 1/8-inch (3.5 mm) mini plug.
Note: Connecting a headphone to the TV/DVD will mute the sound from the built-in speakers.
- 8 POWER** — Press to turn the TV on and off. If the TV stops responding to the controls on the remote control or TV control panel and you cannot turn off the TV, press and hold the **POWER** button on the TV control panel for 5 or more seconds to reset the TV.
- 9 INPUT/ENTER** — Repeatedly press to change the source you are viewing (**ANT/CABLE, Video, ColorStream HD, HDMI 1, HDMI 2, PC, DVD**). When a menu is on-screen, the **INPUT** button on the TV's control panel functions as the **ENTER** button.
- 10 MENU** — Press to access the menu system (see Page 27).
- 11 STOP/CHANNEL**  — Press to stop the disc playback in DVD mode; press to change the channel in TV mode.
ARROW  — When a menu is on-screen, the button functions as down menu navigation button.
- 12 PLAY/CHANNEL**  — Press to play the disc in DVD mode; press to change the channel in TV mode.
ARROW  — When a menu is on-screen, the button functions as up menu navigation button.
- 13 VOLUME+/-** — These buttons adjust the volume level.
- 14 EJECT** — Press to eject the disc.

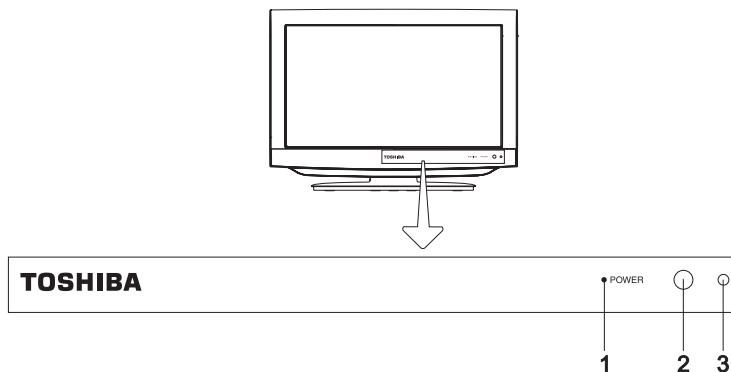
19CV100U/22CV100U/26CV100U/32CV100U



- 1 **Power LED** — This indicates the TV's status. See "LED indication" on Page 77 for additional information.

- 2 **Remote sensor** — Point the remote control toward this remote sensor.


Effective range:

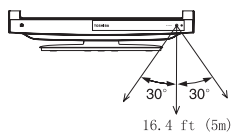

- 3 **Auto Brightness Sensor** — This sensor will detect the ambient light conditions to optimize the backlighting levels. See "Using the Auto Brightness Sensor" on Page 51 for additional information.


Note: 22CV100U is used for illustration purposes.

19CV100U/22CV100U

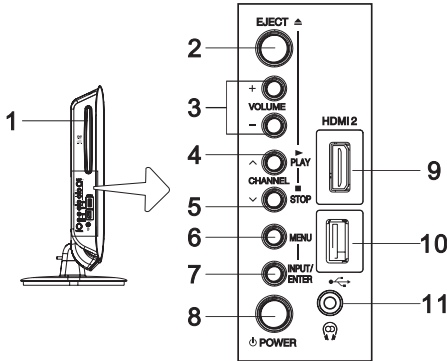

- 1 **Disc slot** — Load the disc into the disc slot to view or listen.
- 2 **EJECT** — Press to eject the disc.
- 3 **VOLUME+/-** — These buttons adjust the volume level.
- 4 **PLAY/CHANNEL** \wedge — Press to play the disc in DVD mode; press to change the channel in TV mode.
ARROW \wedge — When a menu is on-screen, the button functions as up menu navigation button.
- 5 **STOP/CHANNEL** \vee — Press to stop the disc playback in DVD mode; press to change the channel in TV mode.
ARROW \vee — When a menu is on-screen, the button functions as down menu navigation button.
- 6 **MENU** — Press to access the menu system (Page 27).
- 7 **INPUT/ENTER** — Repeatedly press to change the source you are viewing (**ANT/CABLE**, **Video**, **ColorStream HD**, **HDMI 1**, **HDMI 2**, **PC**, **DVD**). When a menu is on-screen, the **INPUT** button on the TV's control panel functions as the **ENTER** button.
- 8 **POWER** — Press to turn the TV on and off. If the TV stops responding to the controls on the remote control or TV control panel and you cannot turn off the TV, press and hold the **POWER** button on the TV control panel for 5 or more seconds to reset the TV.

26CV100U/32CV100U

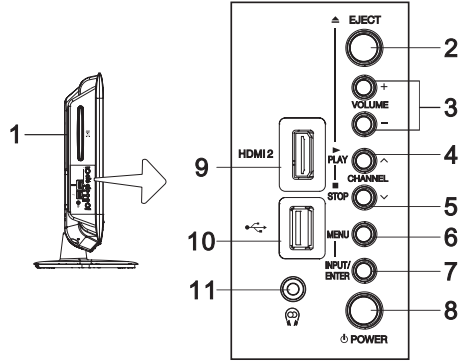

- 9 **HDMI 2** — High-Definition Multimedia Interface (**HDMI 2**) input receives digital audio and uncompressed digital video from an HDMI device or uncompressed digital video from a DVI device. HDMI connection is necessary to receive 1080p signals.
- 10 **USB terminal** — For use when inserting a USB device.
- 11 **Headphone jack** — For use when inserting a stereo headphone (not supplied) with a 1/8-inch (3.5 mm) mini plug.

Note: Connecting a headphone to the TV/DVD will mute the sound from the built-in speakers.

Note: 22CV100U and 26CV100U are used for illustration purposes.

Adjusting the screen angle (Applicable to 19CV100U/22CV100U)


You can adjust the angle of the TV screen 3° forward or 15° backward from a vertical angle. Hold the base of the TV while adjusting the screen.



Some illustrations in this owner's manual are for explanation purposes and may differ from the actual unit.

TV back panel connections

For an explanation of cable types and connections see Page 17-23.

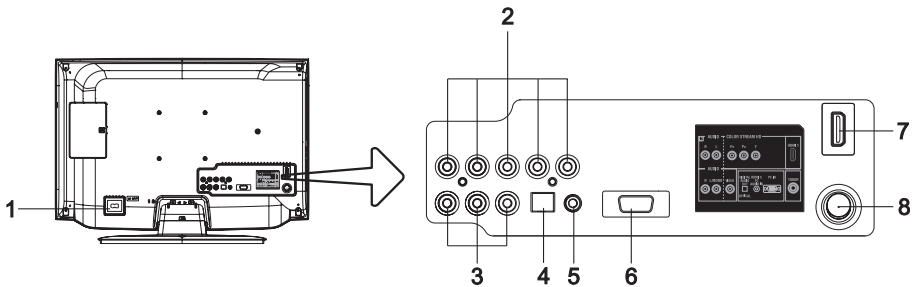

1 AC input jack — Connect one end of the supplied AC power cord into the TV's AC input jack and the other to a power outlet to turn on and operate the TV.

2 AUDIO/COLOR STREAM HD — ColorStream® high-definition component video inputs (with standard stereo audio inputs) for connecting devices with component video output, such as a Toshiba DVD player with ColorStream®.

Note: Component video cables carry only video information; separate audio cables are required for a complete connection.

3 AUDIO/VIDEO — Standard (composite) video and standard audio inputs plus for connecting devices with composite video.

Note: Standard (composite) video cables carry only video information; separate audio cables are required for a complete connection.

4 DIGITAL AUDIO OUT — Optical audio output in Dolby Digital or PCM (Pulse-Code Modulation) format for connecting an external Dolby Digital decoder, amplifier, or home theater system with optical audio input.

5 HDMI 1/PC AUDIO IN — PC audio input terminal is shared with HDMI 1 analog audio input terminal, and its use can be configured in the **Audio Setup** menu (ⓘ Page 46).

6 PC IN — For use when connecting a personal computer.

7 HDMI 1 — High-Definition Multimedia Interface (**HDMI 1**) input receives digital audio and uncompressed digital video from an HDMI device or uncompressed digital video from a DVI device. Also see item 5. HDMI connection is necessary to receive 1080p signals.

8 TUNER (ANT/CABLE) — Input that supports analog (NTSC) and digital (ATSC) off-air antenna signals and analog and digital Cable TV (QAM) signals.

Note: 22CV100U is used for illustration purposes.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Chapter 2: Connecting your TV

Overview of cable types

 
Cables can be purchased from most stores that sell audio/video devices. Before purchasing any cables, be sure of connector types required by your devices and the length of each cable.

Coaxial (F-type) cable



Coaxial (F-type) cable is used for connecting your antenna, cable TV service, and/or cable converter box to the **TUNER** input on your TV.

Standard A/V cables (red/white/yellow)



Standard A/V cables (composite video) usually come in sets of three and are for use with video devices with analog audio and composite video output. These cables (and the related inputs on your TV) are typically color-coded according to use: yellow for video, red for stereo right audio, and white for stereo left (or mono) audio.

Component video cables (red/green/blue)



Component video cables come in sets of three and are for use with video devices with component video output. (ColorStream® is Toshiba's brand of component video.) These cables are typically color-coded red, green, and blue. Separate audio cables are required for a complete connection.

Note: Component video cables provide better picture performance than a standard (composite) video.

HDMI™ cable (with HDMI Logo)



HDMI (High-Definition Multimedia Interface) cable is for use with devices with an HDMI output. An HDMI cable delivers digital audio and video in its native format. This cable carries both video and audio information; therefore, separate audio cables are not required for a complete HDMI device connection (ⓘ Page 20, 21 and 23).

Note: An HDMI cable provides the best audio and picture performance.

Optical audio cable



Optical audio cable is for connecting receivers with Dolby Digital or PCM (Pulse-Code Modulation) optical audio input to the TV's **DIGITAL AUDIO OUT** terminal (ⓘ Page 22).

Analog RGB (15-pin) computer cable



Analog RGB (15-pin) computer cable is for connecting a PC to the TV's **PC IN** terminal (ⓘ Page 23).

Note: Separate audio cables are required for a complete connection.


About the connection illustrations

You can connect different types and brands of devices to your TV in several different configurations. The connection illustrations in this manual are representative of typical device connections only. The input/output terminals on your devices may differ from those illustrated herein. For details on connecting and using your specific devices, refer to each device's owner's manual.

Connecting TV to a power source

To connect AC power:


Connect the AC cord plug into the TV/DVD's AC input jack and then connect the AC cord into an AC outlet.

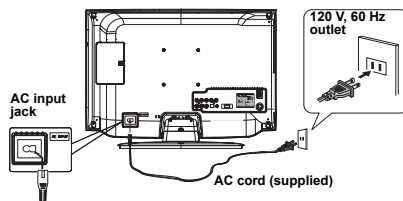

Notes:

- Never connect the AC cord plug to other than the specified voltage (120 V, 60 Hz). Use the supplied power cord only.
- If you cause a static discharge when touching the TV/DVD and it fails to function, simply unplug the TV/DVD from the AC outlet and plug it back in. The TV/DVD should return to normal operation.

Connecting a VCR, and antenna, Cable TV

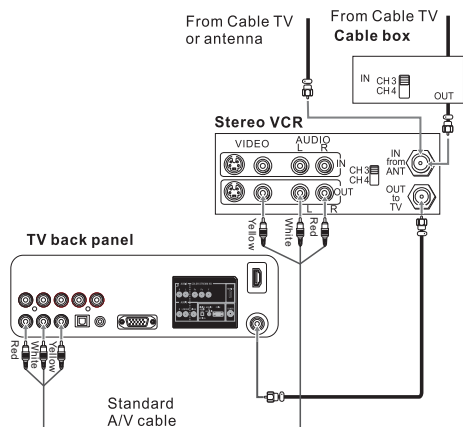

You will need:

- coaxial cables
- standard A/V cables

Note: When you use a Cable box, you may not be able to use the remote control to program or access certain features on the TV.*

To view the antenna or Cable signal:


Select the **ANT/CABLE** video input source on the TV.*

To view basic and premium Cable channels:


Turn OFF the VCR. Select the **ANT/CABLE** video input source on the TV.* Tune the TV to channel 3 or 4 (whichever channel the Cable box output is set to). Use the Cable box controls to change channels.

To view the VCR:

Turn ON the VCR. Select the **Video** video input source on the TV.*

* To select the video input source, press  on the remote control (Page 33).

Connecting a camcorder

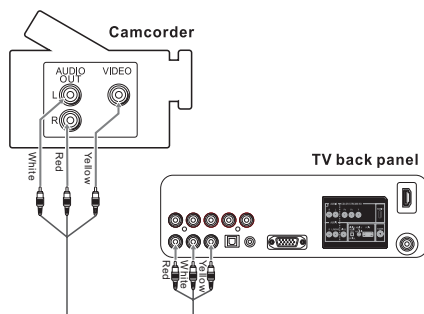


You will need:

- standard A/V cables


To view the camcorder video:

Select the **Video** video input source on the TV.*

* To select the video input source, press  on the remote control (Page 33).

The unauthorized recording, use, distribution, or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

Connecting a DVD player with ColorStream® (component video)

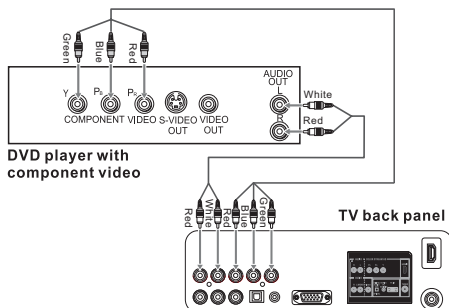


You will need:


- standard audio cables
- component video cables
 - You can connect the *component video cables (plus audio cables)* from the DVD player to the **COLOR STREAM HD** terminal on the TV. The **COLOR STREAM HD** terminal can be used to display *Progressive (480p, 720p) and Interlaced (480i, 1080i)*. Please check the Owner's Manual of the DVD player in order to determine the best output signal available.
 - If your DVD player does not have component video, connect a standard A/V cable to **AUDIO/VIDEO** terminal. If your DVD player has HDMI video, see Page 20.

To view the DVD player:

Turn ON the DVD player. Select the **ColorStream HD** video input source on the TV.*

* To select the video input source, press  on the remote control (Page 33).

Connecting a satellite receiver

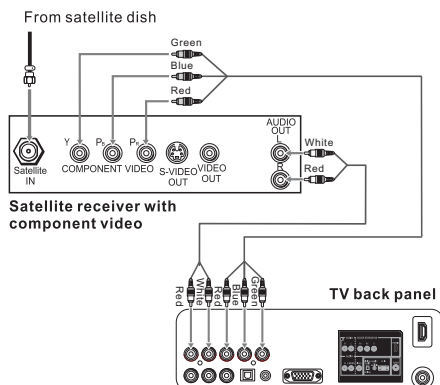


You will need:

- standard audio cables
- component video cables
 - You can connect the *component video cables (plus audio cables)* from the satellite receiver to the **COLOR STREAM HD** terminal on the TV. The **COLOR STREAM HD** terminal can be used to display *Progressive (480p, 720p) and Interlaced (480i, 1080i)*. Please check the Owner's Manual of the satellite receiver in order to determine the best output signal available.
 - If your satellite receiver does not have component video, connect a standard A/V cable to **AUDIO/VIDEO** terminal.

To view satellite programs using the component video connections:

Turn on the satellite receiver. Select the **ColorStream HD** video input source on the TV.*

* To select the video input source, press  on the remote control (Page 33).

The unauthorized recording, use, distribution, or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.


Connecting an HDMI or DVI device to the HDMI™ input

The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI source device, or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) program material in digital form from EIA/CEA-861-E compliant^[1] consumer electronic devices (such as a set-top box or DVD player with HDMI or DVI output). The HDMI input can accept and display VGA, SVGA, XGA, WXGA, 480i (60 Hz), 480p (60 Hz), 720p (60 Hz), 1080i (60 Hz), and 1080p (24 Hz/30 Hz/60 Hz) signal formats. For detailed signal specifications, see Page 79. Supported Audio format: Linear PCM, sampling rate 32/44.1/48 kHz.

Note: To connect a PC to the HDMI input, see Page 23.


To connect an HDMI device, you will need:

- one HDMI cable per HDMI device
 - For proper operation, it is recommended that you use an HDMI cable with the HDMI Logo (HDMI).
 - To display a 1080p/60 Hz signal format, you will need a High Speed HDMI cable. Conventional HDMI/DVI cable may not work properly.
 - HDMI cable transfers both video and audio. Separate analog audio cables are not required (see illustration).
 - See “Setting the HDMI™ audio mode” (Page 31).

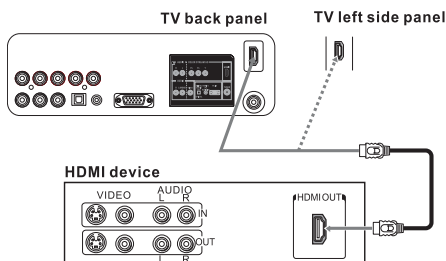

To view the HDMI device video:


Select the **HDMI 1** or **HDMI 2** video input source on the TV.*

- * To select the video input source, press  on the remote control (Page 33).

To connect a DVI device, you will need:

- one HDMI-to-DVI adapter cable
 - For proper operation, the length of an HDMI-to-DVI adapter cable should not exceed 9.8 ft (3m). The recommended length is 6.6 ft (2m).
- one pair of standard analog audio cables per DVI device.
 - An HDMI-to-DVI adapter cable transfers video only. Make sure to connect this cable to the **HDMI 1** input on the TV. Separate analog audio cables are required (see illustration).
 - See “Setting the HDMI™ audio mode” (Page 31).

TV back panel

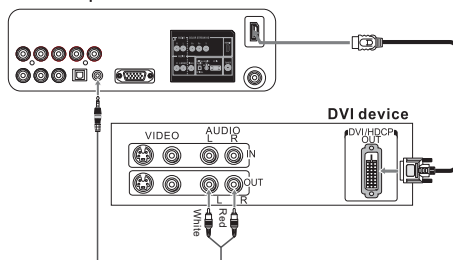

Note: To ensure that the HDMI or DVI device is reset properly, it is recommended that you follow these procedures:


- When turning on your electronic components, **turn on the TV first** and then the HDMI or DVI device.
- When turning off your electronic components, **turn off the HDMI or DVI device first** and then the TV.

[1] EIA/CEA-861-E compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals. Because this is an evolving technology, it is possible that some devices may not operate properly with the TV.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

REGZA-LINK® connection

You can control the basic functions of connected audio/video devices using the TV's remote control if you connect a REGZA-LINK® compatible audio receiver or playback device. For an explanation of setup and operations, see Page 47-49.

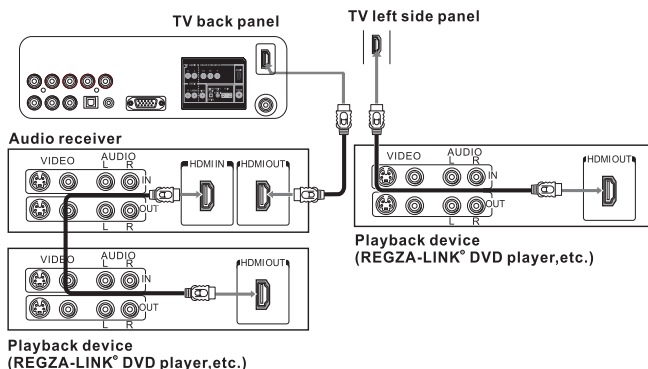

To connect an audio receiver and playback devices, you will need:

- HDMI cables (☞ Page 17)

Note:


- If several devices are connected, REGZA-LINK® feature may not operate properly.
- For proper operation, it is recommended that you use HDMI cables with the HDMI Logo (HDMI).

Before controlling the device(s):

- After completing the above connections, set the **REGZA-LINK Setup** menu as you desire (☞ Page 49).
- The connected devices must also be set. For details, see the operation manual for each device.
- The REGZA-LINK® feature uses the CEC technology as regulated by the HDMI standard.
- This feature is limited to models incorporating Toshiba's REGZA-LINK®. However, Toshiba is not liable for those operations. Refer to the individual instruction manuals for compatibility information.

Note: This feature may not work properly depending on the devices that are connected.


Connecting a digital audio system

The TV's **DIGITAL AUDIO OUT** terminal outputs a Dolby®* Digital  or 2-channel down-mixed PCM (Pulse-Code Modulation) signal for use with an external Dolby® Digital decoder or other external audio system with optical audio input.





If you have a DTS®  decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded soundtracks on DVDs and audio CDs.

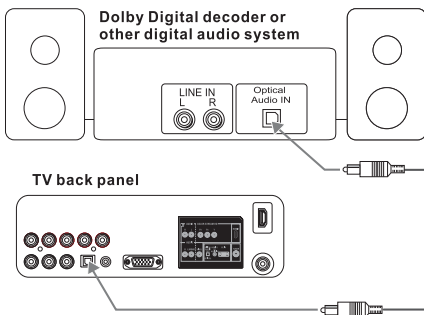
You will need:



- optical audio cable (Use an optical audio cable that has the larger “TosLink” connector and not the smaller “mini-optical” connector.)



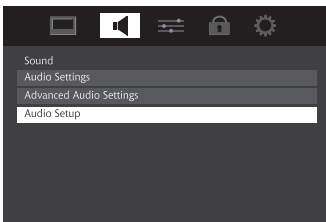


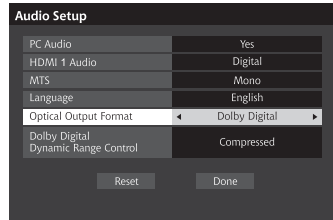
To control the audio:



- 1 Turn on the TV and the digital audio device.
- 2 Press  on the remote control and open the **Sound** menu.
- 3 Press  or  to select **Audio Setup** and then press .



- 4 Press  or  to select **Optical Output Format**.

- 5 Press  or  to select either **Dolby Digital** or **PCM**, depending on your device.
( “Selecting the optical audio output format” on Page 41).



- 6 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Note:

- Some audio systems may not be compatible with Dolby Digital bitstream signals. Older audio systems that are not compatible with standard optical out signals may not work properly, creating a high noise level that may damage speakers or headphones. **THIS DAMAGE IS NOT COVERED BY YOUR WARRANTY.**
- The **DIGITAL AUDIO OUT** terminal may not output some digital audio sources because of copy restrictions.

* Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.


** Manufactured under license under U.S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks and DTS Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

Connecting a personal computer (PC)

With either the PC IN or HDMI connection, you can watch your computer's display on the TV and hear the sound from the TV's speakers.

To connect a PC to the PC IN terminal on the TV:

When connecting a PC to the **PC IN** terminal on the TV, use an analog RGB (15-pin) computer cable and a PC audio cable.

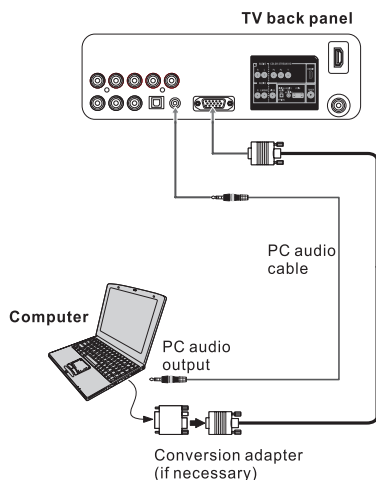

- To use a PC, set the monitor output resolution on the PC before connecting it to the TV. The PC IN terminal can accept and display VGA, SVGA, XGA, and WXGA signal formats. For detailed signal specifications, see Page 79.
- To display the optimum picture, use the PC settings feature (ⓘ “Using the PC settings feature” on Page 46).

Note:

- The PC audio input terminal on the TV is shared with the HDMI 1 analog audio input terminal.
- Some PC models cannot be connected to this TV.
- An adapter is not needed for computers with a compatible mini D-sub 15-pin terminal.
- Depending on the DVD's title and the specifications of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multi-angle scenes.


- Signal names for mini D-sub 15-pin connector

Pin No.	Signal name	Pin No.	Signal name	Pin No.	Signal Name
1	R	6	Ground	11	Reserved
2	G	7	Ground	12	SDA
3	B	8	Ground	13	H-sync
4	Reserved	9	5V	14	V-sync
5	Ground	10	Ground	15	SCL

To connect a PC to the HDMI terminal on the TV:

When connecting a PC to the HDMI terminal on the TV, use an adapter cable and analog audio cables.

If connecting a PC with an HDMI terminal, use an HDMI cable. Separate analog cables are not necessary (ⓘ Page 17).

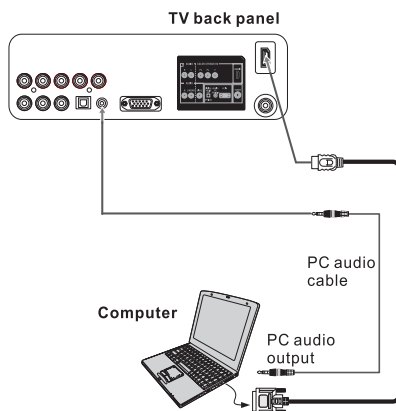

The HDMI input can accept and display VGA, SVGA, XGA, WXGA, 480i (60 Hz), 480p (60 Hz), 720p (60 Hz), 1080i (60 Hz), and 1080p (24 Hz/30 Hz/60 Hz) signal formats. For detailed signal specifications, see Page 79.

Note:

- The edges of the images may be hidden.
- If receiving a 480i (HDMI), 480p (HDMI), 720p, 1080i, or 1080p signal program, Native mode scales the video to display the entire picture within the borders of the screen (i.e. no overscanning).


Chapter 3: Using the remote control

Preparing the remote control for use


The remote control can operate your TV/DVD and control the basic functions of connected audio/video devices if you connect a REGZA-LINK[®] compatible audio receiver or playback device (▶ Page 47).

Installing the remote control batteries

- 1 Remove the battery cover from the back of the remote control.

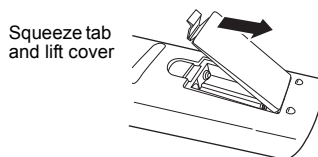

- 2 Install two AAA size batteries. Match the + and – symbols on the batteries to the symbols on the battery compartment.

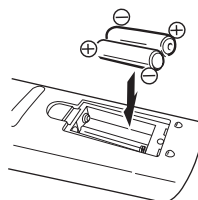

- 3 Close the battery cover on the remote control until the tab snaps.


Caution: Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Note:

- Be sure to use AAA size batteries.
- Dispose of batteries in a designated disposal area.
- Batteries should always be disposed of with the environment in mind. Always dispose of batteries in accordance with applicable laws and regulations.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace batteries with new ones.
- When necessary to replace batteries in the remote control, always replace both batteries with new ones. Never mix battery types or use new and used batteries in combination.
- Always remove batteries from the remote control if they are dead or if the remote control is not to be used for an extended period of time. This will prevent battery acid from leaking into the battery compartment.


Learning about the remote control

The buttons used for operating the TV/DVD are described here. For the REGZA-LINK[®] remote control functions, see the section "Using REGZA-LINK[®]" (Page 47).

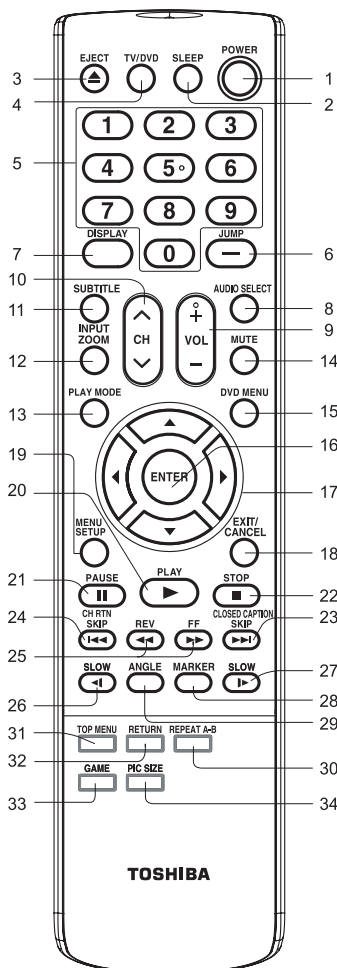

Note: The error message "NOT AVAILABLE" may appear if you press a key for a function that is not available.


- 1 POWER** turns the TV on and off. When the TV is on, the Power LED indicator on the TV front will be illuminated in green.
- 2 SLEEP** accesses the sleep timer (Page 47).
- 3 EJECT** ejects the disc from the disc slot.
- 4 TV/DVD** switches to TV or DVD mode.
- 5 Channel Numbers** directly tune channels.
- 6 JUMP** selects or locates a specific point with the disc playback (Page 59); tunes to a digital sub-channel as a "dash".
- 7 DISPLAY** displays setting or playback information (Page 49, 63).
- 8 AUDIO SELECT** selects the DVD soundtrack language or VCD audio channel (Page 63).
- 9 VOL + -** adjusts the volume level.
- 10 CH ^ v** cycles through programmed channels when no menu is on-screen (Page 34).
- 11 SUBTITLE** selects the subtitle language or switches subtitle off (Page 63).
- 12 INPUT/ZOOM** selects the video input source (Page 33); zooms into the center of the image during disc playback (Page 59).
- 13 PLAY MODE** sets the disc playback repeat mode (Page 60).
- 14 MUTE** reduces or turns off the sound (Page 40).
- 15 DVD MENU** accesses the DVD menu (Page 62).
- 16 ENTER** activates highlighted items in the main menu system.
- 17 Arrow buttons (▲ ▼ ◀ ▶)** select or adjust programming menus when a menu is on-screen.
- 18 EXIT/CANCEL** closes on-screen menus.
- 19 MENU/SETUP** accesses the main TV menu system (Page 27); configures the disc playback settings (Page 70).
- 20 PLAY** begins playback of the loaded disc (Page 56).
- 21 PAUSE** suspends disc playback temporarily or plays back disc frame by frame (Page 56, 57).
- 22 STOP** stops playback of the loaded disc (Page 56).

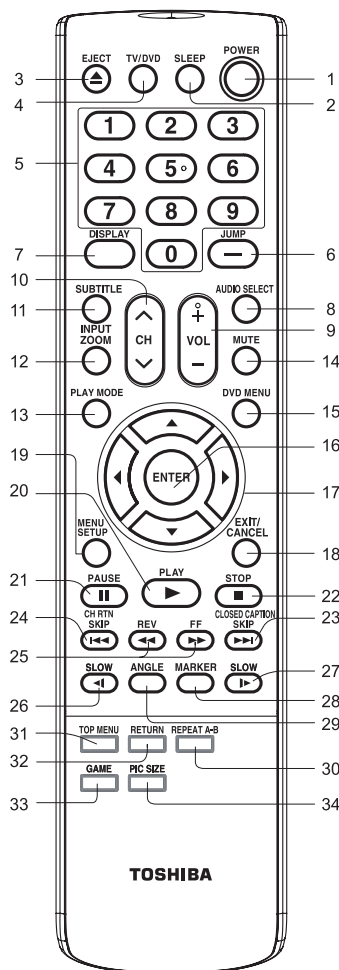






- 23 **CLOSED CAPTION/SKIP** ►► accesses the Closed Caption menu (ⓘ Page 39); skips forward to locate later DVD chapters (ⓘ Page 58).
- 24 **CH RTN/SKIP** ◀◀ returns to the last viewed channel or source (ⓘ Page 35); skips back to beginning of current DVD chapter or locate previous chapters (ⓘ Page 58).
- 25 **FF** ►► fast-forwards playback of the disc (ⓘ Page 57).
REV ◀◀ fast-reverses playback of the disc (ⓘ Page 57).
- 26 **SLOW** ◀◀ slow-reverses playback of the disc (ⓘ Page 57).
- 27 **SLOW** ►► slow-forwards playback of the disc (ⓘ Page 57).
- 28 **MARKER** bookmarks specific points in the playback range for later access (ⓘ Page 60).
- 29 **ANGLE** changes the scene angle when playing back a DVD recorded with multi-angle scenes (ⓘ Page 62).
- 30 **REPEAT A-B** repeats playback of a specific section between two set points (ⓘ Page 61).
- 31 **TOP MENU** accesses the top menu of DVDs that contain two or more titles (ⓘ Page 62).
- 32 **RETURN** returns to the root directory in Audio CD playback (ⓘ Page 66); returns to previous directory from Media Player sub-folder or sub-menu (ⓘ Page 53).
- 33 **GAME** displays the Game mode screen when using the TV as display device for video game consoles (ⓘ Page 51).
- 34 **PIC SIZE** cycles through the picture sizes (ⓘ Page 35).

Chapter 4: Menu layout and navigation



Main menu layout



To open the main menus (illustrated below), press  on the remote control or **MENU** on the TV control panel.

Icon	Item	Page
	Mode	38
	Picture Settings	38
	Noise Reduction	51
	Game Mode	51
	Theater Settings	35-37
	Audio Settings	41
	Advanced Audio Settings	52
	Audio Setup	40-42
	CC and Digital Audio Selectors	40
	Base CC Mode	39
	Digital CC Settings	39
	Input Labeling	33
	Channel Labeling	30
	Menu Language	28
	REGZA-LINK Player Control	48
	Enable Rating Blocking	43
	Edit Rating Limits	43
	Input Lock	45
	Control Panel Lock	45
	GameTimer	45
	New PIN Code	42
	Installation	28-32
	REGZA-LINK Setup	49
	Sleep Timer	47
	PC Settings	46
	Media Player	53

Setup/Installation menu layout


The Installation menu contains the **Terrestrial** and **System Status** menus.


To open the **Installation** menu (illustrated below), press  on the remote control, open the **Setup** menu, select **Installation**, and press .

 

 
 
 



Icon	Item	Page
	Input Configuration	28
	Channel Program	29
	Channel Options	29
	Channel Tuning Mode	34
	Time Zone	32
	Signal Meter	32
	System Information	32

Navigating the menu system

You can use the buttons on the remote control or TV control panel to access and navigate your TV's on-screen menu system.

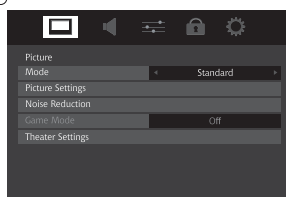



- Press  to open the menu.



- Press  or  on the remote control to select the top menu, and its respective items will appear below.
- To use the items, press  or  on the remote control or TV control panel to move up and down through them.
- Press  or  to adjust settings or press  to enter the sub-menus.
- All menus close automatically if you do not make a selection within 60 seconds, except the signal meter menu, which closes automatically after about 5 minutes.
- To close a menu instantly, press .


Initial Setup

When you first turn on or reset the TV, the Initial Setup window will appear.





- 1 In the **Menu Language** field, press ◀ or ▶ to select your preferred language.
- 2 Press ▲ or ▼ to select **Time Zone Setup** and set your desired time zone with ◀ or ▶ and then press .
- 3 Next, the location setting window will appear. For normal home use, press ◀ or ▶ to select **Home** and then press .
- 4 Next, **ANT/CABLE In** setup window will appear. Press ◀ or ▶ to select the input source (**Cable** or **Antenna**) for the **ANT/CABLE** input on the TV.
- 5 If you select **Antenna**, the **Channel Tuning Mode** setup window will appear. To tune only digital channels, select **Digital**. To tune digital channels preferentially over analog when entering channel number directly, select **Auto**. For normal tuning, select **Standard**. Press  to continue to Auto Tuning.
- 6 Press  to select **Start Scan** and continue with the Auto Tuning.

Selecting the menu language

You can choose from three different languages (English, French and Spanish) for the on-screen display of menus and messages.

- 1 Press  to open the menu.
- 2 Press ◀ or ▶ to highlight **Preferences** menu.
- 3 Press ▲ or ▼ to select **Menu Language**.
- 4 Press ◀ or ▶ to select your preferred menu language.

Configuring the antenna input source for the ANT/CABLE terminal

- 1 From the **Setup** menu, press ▲ or ▼ to select **Installation** and then press .
- 2 Press ◀ or ▶ to highlight **Terrestrial**, and then press ▲ or ▼ to select **Input Configuration** and then press .
- 3 Press ▲ or ▼ to highlight **ANT/CABLE In** and then press ◀ or ▶ to select the input source (**Cable** or **Antenna**) for the input on the TV.
- 4 To save your new settings, highlight **Done** and then press . To revert to your original settings, highlight **Cancel** and then press .

Programming channels into the TV's channel memory

When you press or on the remote control or TV control panel, your TV will stop only on the channels you programmed into the TV's channel memory.

Follow the steps below to program channels into the TV's channel memory.

Programming channels automatically

Your TV can automatically detect all active channels in your area and store them in its memory. After the channels are programmed automatically, you can manually add or skip individual channels in the channel memory.

Note:

- You must configure the **ANT/CABLE** input source before programming channels (Page 28).
- The automatic channel programming process will erase channels that were previously programmed into the TV's memory.
- To tune the TV to a channel not programmed in the channel memory, you must use the Channel Number buttons on the remote control.
- Programming channels when the **ANT/CABLE** input is configured for **Cable** will take substantially longer than when the antenna input is configured for **Antenna**. This is normal; however, once channel programming is finished, you should not have to repeat the programming process again unless your Cable TV service lineup changes significantly.

To program channels automatically:

- 1 Configure the **ANT/CABLE In** input if you have not already done so (Page 28).
- 2 From the **Setup** menu, press or to select **Installation** and then press .
- 3 Press or to highlight **Terrestrial**, and press or to select **Channel Program** and then press .
- 4 A screen will appear warning that previous programs and settings will be deleted.

- 5 Press to start channel programming. The TV will automatically cycle through all the channels, and store all active channels in the channel memory. When Auto Tuning is finished, press or to view the programmed channels.

Programming channels manually

After automatically programming channels into the channel memory, you can manually programming individual channels.

To skip channels in the channel memory

To prevent certain channels from being viewed, channel positions can be skipped.

- 1 From the **Setup** menu, press or to select **Installation** and then press .
- 2 Press or to highlight **Terrestrial**, and press or to select **Channel Options** and then press . The list of channels will appear.

Ch.	Type		
5-1	[DTV]	<input checked="" type="checkbox"/>	<input type="checkbox"/>
6	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>
6-1	[DTV]	<input type="checkbox"/>	<input type="checkbox"/>
8	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>
9	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>
10	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>
11	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>
12	[ATV]	<input type="checkbox"/>	<input type="checkbox"/>


- 3 Press or to select a channel position to be skipped and then press . A tick will appear in the box. To remove the tick, press again.
- 4 To save the setting, press .

Note: Skipped channels cannot be selected with or ; however, they can still be accessed using the number keys on the remote control.

To block channels in the channel memory:

You can block specific channels. You will not be able to tune blocked channels unless you unlock them.

- 1 From the **Channel Options** menu, press ► to move to the channel lock list.

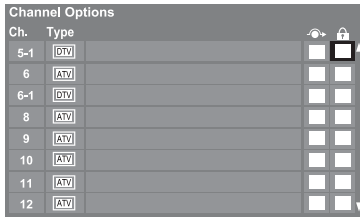

- 2 Press ▲ or ▼ to select a channel position to be locked and then press ENTER. Enter your four-digit PIN code. A tick will appear in the box. To remove the tick, press ENTER again.
- 3 To save the setting, press EXIT/CANCEL.

To manually add digital subchannels on a physical channel:

Use the Channel Numbers and the Dash (JUMP) on the remote control to enter the channel number (for example, 56-1).

If the channel is found, the number will be added to the list.

If the channel is not found, a message will appear.

To remove encrypted channels from the channel memory:

If an encrypted channel is accidentally added to the channel list by programming channels, you can remove the unwanted encrypted (non-viewable) channel while you are channel surfing. When you tunes to an encrypted channel, the following message will appear.

Digital Channel Is Encrypted - Press 1 on remote to remove channel


Press 1 while the message is on the screen to remove the unnecessary channel from the channel list.

Labeling channels

A list of common channel labels (logos) for various channels (ABC, CBS, etc.) will be programmed into the TV. You will be able to view and assign these logos from the Channel Labeling window. If the desired channel label is not provided in the list, you will be able to manually enter/edit labels using the software keyboard.

To assign channel labels:

- 1 From the **Preferences** menu, press ▲ or ▼ to select **Channel Labeling** and then press ENTER.
- The **Channel Labeling** window opens.
- 2 Press CH or CH to select the channel you want to label.
- 3 Press ▲ ▼ ◀ ▶ to select the desired channel label and then press ENTER.
- 4 Repeat steps 2 and 3 for other channels.
- 5 To save your settings, highlight **Done** and then press ENTER.

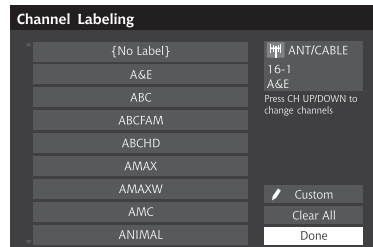

Note: The maximum number of labels that can be stored is 128.

To remove channel labels:

- 1 Open the **Channel Labeling** window.
- 2 Press CH or CH to select the channel for which you want to remove the label.
- 3 Press ▲ ▼ ◀ ▶ to select **{No Label}** and then press ENTER.
- 4 Repeat steps 2 and 3 for other channels.
- 5 To save your settings, highlight **Done** and then press ENTER.

To create and assign a custom label:

If the desired channel label is not available from the list of presets, you can create a custom label.

- 1 Open the **Channel Labeling** window.
- 2 Press or to select a channel you want to label.
- 3 Press or to select **Custom** and then press . The software keyboard will appear.
- 4 Repeatedly press the corresponding key on the remote control to highlight the desired character on the on-screen software keyboard.
- 5 The highlighted character is entered after you either press a different key, press , or after a two-second pause.
- 6 Repeat steps 4 and 5 until you have entered all desired text. Press when finished.
- 7 New labels will be added to the list in alphabetical order and marked with an icon to indicate that they are custom. Highlight the new custom label and then press to assign.

To delete the custom label:

- 1 Open the **Channel Labeling** window.
- 2 Highlight the label to be deleted and then press .
- 3 Highlight **Yes** from the deletion confirmation window and then press .

Setting the HDMI™ audio mode

To set the HDMI™ audio mode:

- 1 From the **Sound** menu, press or to select **Audio Setup** and then press .
- 2 Press or to select **HDMI 1 Audio** and then press or to select the HDMI 1 audio mode (**Auto** is the recommended mode). See “Connecting an HDMI or DVI device to the HDMI™ input” (Page 20).
- 3 To save your settings, highlight **Done** and then press .

Mode	Description
Auto	When viewing the HDMI 1 input, if digital audio from the HDMI input is available, it will be output. If not, the TV will automatically detect and output analog audio from the PC Audio input.
Digital	When viewing the HDMI 1 input, digital audio from the HDMI input will be output.
Analog	When viewing the HDMI 1 input, analog audio from the PC Audio input will be output.

Note: Because the PC and HDMI-1 inputs share the same set of analog audio inputs, the **PC Audio** menu setting influences the **HDMI 1 Audio** menu setting. If **PC Audio** is set to “No”, the **HDMI 1 Audio** setting changes to “Auto”. If **PC Audio** is set to “Yes”, the **HDMI 1 Audio** setting is set to “Digital” and is grayed out in the menu. (See “Connecting an HDMI or DVI device to the HDMI™ input” on Page 20.)

Viewing the digital signal meter

You can view the digital signal meter in the ANT/CABLE digital TV input source only.

To view the digital signal meter:

- 1 From the **Setup** menu, press ▲ or ▼ to select **Installation** and then press **ENTER**.
- 2 Press ◀ or ▶ to highlight **Terrestrial**, and press ▲ or ▼ to select **Signal Meter** and then press **ENTER**.
- 3 Press ▲ ▼ ◀ ▶ to select the antenna input and digital channel whose signal you want to check.

Note:

- *The physical digital channel number listed in the Signal Meter screen may not correspond to a virtual TV channel number. Contact your local broadcasters to obtain the RF channel numbers for your local digital stations.*
- *The signal strength does not change between virtual channels on the same physical channel.*

Setting the Time Zone

The Time Zone setup will allow you to specify the correct time zone for your region. This feature will allow the TV status information to show the correct time zone information for your viewing area.

To set the time zone:

- 1 From the **Setup** menu, press ▲ or ▼ to select **Installation** and then press **ENTER**.
- 2 Press ◀ or ▶ to highlight **Terrestrial**, and press ▲ or ▼ to select **Time Zone** and then press **ENTER**.
- 3 Press ▲ and then ◀ or ▶ to select the region.
- 4 Highlight **Done**, and then press **ENTER**.

After the time zone has been set, you will be asked to set the current Daylight Saving Time status.

To set the Daylight Saving Time Status:

- 1 Press ◀ or ▶ to select **Yes** or **No**, highlight **Done**, and then press **ENTER**.

Viewing the system status

- 1 From the **Setup** menu, press ▲ or ▼ to select **Installation** and then press **ENTER**.
- 2 Press ◀ or ▶ to highlight **System Status**, and press ▲ or ▼ to select **System Information** and then press **ENTER**.
- 3 Press ◀ or ▶ to scroll through the menu bar to select **Support Information** and view the related information.

Reset Factory Defaults

- 1 From the **Setup** menu, press ▲ or ▼ to select **Installation** and then press **ENTER**.
- 2 Press ◀ or ▶ to highlight **System Status**, and press ▲ or ▼ to select **System Information** and then press **ENTER**.
- 3 Press ◀ or ▶ to scroll through the menu bar to select **Factory Defaults**.
- 4 Enter your PIN code (or 0000 if no PIN code has been set).
- 5 Highlight **Yes** and then press **ENTER**. The TV will turn off automatically after a few seconds. After the TV turns off, unplug the TV power cord and then plug it in again to complete the reset process.

To cancel the reset:


Highlight **No** and then press **ENTER**.

Chapter 6: Using the TV's features

Selecting the video input source to view

- 1 Press **INPUT ZOOM** on the remote control or **INPUT/ENTER** on the TV control panel.
- 2 And then either:
 - a) Press 0–6; or
 - b) Repeatedly press **▲** or **▼** on the remote control and then press **ENTER** to change the input; or
 - c) Repeatedly press **INPUT ZOOM** on the remote control or **INPUT/ENTER** on the TV control panel to change the input.

The current signal source displays in the top right corner of the **Input Selection** screen.

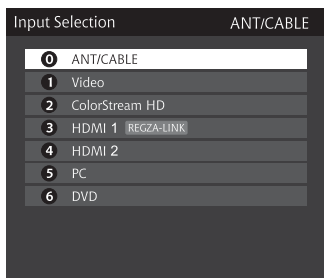

Note:

- You can label the video input sources according to the specific devices you have connected to the TV (see “Labeling the video input sources” at right).
- Sources can be hidden (see “Labeling the video input sources” at right).
- “No video signal” will appear randomly on the screen if no signal is received in video input mode.
- If CEC device is connected to an HDMI input, the REGZA-LINK icon will appear.

If a REGZA-LINK® device with HDMI switching capability (e.g. Audio Receiver) is connected to the HDMI input:

Press **INPUT ZOOM** on the remote control or **INPUT/ENTER** on the TV control panel repeatedly to highlight HDMI 1 or HDMI 2. If the connected CEC device has any connected devices, a separate device selection popup window will appear.



Press **INPUT ZOOM** repeatedly to highlight the desired input source, and then press **EXIT CANCEL**.

Note:

- When selecting REGZA-LINK® input sources from the popup window using **INPUT ZOOM**, some REGZA-LINK® devices may automatically turn on.
- When selecting input sources using **▲** or **▼**, you will have to press **ENTER** to actually select a particular device from the popup window.

Labeling the video input sources

You can label each video input source according to the type of device you connected to each source, from the following preset list of labels:


- – – (default label)
- Audio Receiver
- Cable
- Compact Disc
- DTV
- DVD
- Game Console
- HDMI Switch (HDMI inputs only)
- Laser Disc
- Satellite/DSS
- VCR
- Video Recorder
- Hide (to hide an unused input in the **Input Selection** screen)


Note: If you select **PC** in the **Input Selection** screen, you can choose only “– –”, “**Game Console**” or “**Hide**” as the label.

To label the video input sources:





- 1 From the **Preferences** menu, press **▲** or **▼** to select **Input Labeling** and then press **ENTER**.
- 2 Press **▲** or **▼** to select the video source you want to label.
- 3 Press **◀** or **▶** to select the desired label for that input source. If a particular input is not used, you can select **Hide** as the label, which will cause that input to be “grayed out” in the **Input Selection** screen and skipped over when you press **INPUT ZOOM** on the remote control or **INPUT/ENTER** on the TV control panel.
- 4 To save the new input labels, highlight **Done** and then press **ENTER**.
To revert to the factory default labels, highlight **Reset** and then press **ENTER**.

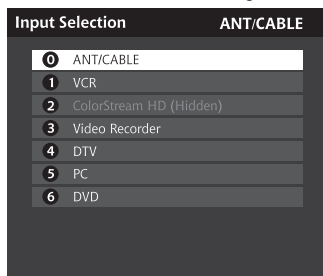Input labeling example:

The screen below is an example of how you could label the inputs if you connected a VCR to Video, a Video Recorder to HDMI 1, and a DTV set-top box to HDMI 2. Also note that the ColorStream HD input is labeled “Hidden”, which means that input will be skipped over when  is pressed.




To clear the input labels:

- 1 From the **Preferences** menu, press  or  to select **Input Labeling** and then press .
- 2 Highlight **Reset** and then press .


 
Tuning channels

 
 


 
 
 

 
Setting the Channel Tuning Mode

This feature allows you to choose how tuning will be handled for analog and digital channels when the TV is in Antenna mode.

Note: To use this feature, the **Input Configuration** must be set to **Antenna** ( Page 28).

The channel tuning mode has three options.

Mode	Description
Standard	Both analog and digital channels can be tuned normally.
Auto (Default)	Digital channels will have priority when manually entering a channel number using the Channel Number buttons (0-9) on the remote control, analog channels can still be tuned by  or  , if available.
Digital	Only digital channels can be tuned.

 
- 1 From the **Setup** menu, press  or  to select **Installation** and then press .
- 2 Press  or  to highlight **Terrestrial**, and then press  or  to select **Channel Tuning Mode**.
- 3 Press  or  to select your desired mode.

Note: Even if the **Channel Tuning Mode** is set to **Digital**, analog channel 3 will still be the default channel to prevent the initial case where no digital channels have been found in prior channel scans.

Tuning to the next programmed channel


To tune to the next programmed channel:

Press  or  on the remote control or **PLAY/CHANNEL**  or **STOP/CHANNEL**  on the TV control panel.



Note: This feature will not work unless you program channels into the TV's channel memory ( Page 29).




Tuning to a specific channel (programmed or unprogrammed)

Tuning analog channels:

 Press the Channel Number buttons (0–9) on the remote control. For example, to select channel 125, press 1, 2, 5, then .




Tuning digital channels:

Press the Channel Number buttons (0–9) on the remote control, followed by the dash () button and then the sub-channel number. For example, to select digital channel 125-1, press 1, 2, 5, -, 1, then .

Note: If a digital channel is not programmed — either through the automatic channel scan ( Page 29) or the channel add/skip function ( Page 29) you will have to tune the RF channel using the Channel Number buttons and dash () on the remote control.

Switching between two channels using Channel Return

The Channel Return feature allows you to switch between two channels without entering an actual channel number each time.

- 1 Select the first channel you want to view.
- 2 Select a second channel using the Channel Number buttons (and the dash () button if selecting a digital channel).
- 3 Press  on the remote control. The previous channel will display. Each time you press , the TV will switch back and forth between the last two channels that were tuned.

Note: If you press  from a non-antenna input, the TV will return to the last-viewed input.




 
Selecting the picture size

You can view many program formats in a variety of picture sizes—**Natural**, **TheaterWide 1**, **TheaterWide 2**, **TheaterWide 3**, **Full**, **4:3 HD**, **Native** and **Dot by Dot** (available in PC Mode Only).


 







Note: The “picture size” illustrations are examples only. The format of the image (in any of the picture sizes) will vary depending on the format of the signal you are currently watching. Select the picture size that displays the current program the way that looks best to you.

You can save separate picture size preferences for each input on your TV.

To select the picture size using the remote control:

   - 1 Press  on the remote control.
- 2 While the **Picture Size** screen is open, you can do one of the following to select the desired picture size:
 - Repeatedly press .
 - Press the corresponding Channel Number buttons (0–6) while the **Picture Size** screen is open.
 - Press  or  while the **Picture Size** screen is open.

To select the picture size using the menus:

- 1 From the **Picture** menu, press  or  to select **Theater Settings** and then press .
- 2 Press  or  to select **Picture Size** and then press  or  to select the desired picture size and then press .
- 3 Highlight **Done** and then press .

 
Note: Some of the picture sizes may not be available depending on the receiving signal format (those will be “grayed out” in the **Picture Size** screen).

Using these functions to change the picture size (i.e., changing the height/width ratio) for any purpose other than your private viewing may be prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

Note: If you select one of the TheaterWide® picture sizes, the top and bottom edges of the picture (including subtitles or captions) may be hidden. To view the hidden edges, either scroll the picture (**TheaterWide 2** and **3** only) or try viewing the program in **Full** or **Natural** picture size.


Picture Size

Natural




Some program formats will display with sidebars and/or bars at the top and bottom.

 TheaterWide 1 (for 4:3 format programs)




The center of the picture remains close to its original proportion, but the left and right edges are stretched wider to fill the screen.

 TheaterWide 2 (for letter box programs)




The top and bottom edges of the picture may be hidden*.

 TheaterWide 3 (for letter box programs with subtitles)



The top and bottom edges are hidden*.

 
Full (for 16:9 [480i, 480p] source programs only)



- If receiving a squeezed 4:3 format program, the picture is stretched wider to fill the width of the screen, but not stretched taller.
- None of the picture is hidden.


Picture Size

 4:3 HD (for 720p, 1080i, and 1080p program sources only)



Picture is not distorted from original size.

 Native (for 480i (HDMI), 480p (HDMI), 720p, 1080i, and 1080p signal programs)




- If receiving a 480i (HDMI), 480p (HDMI), 720p, 1080i, or 1080p signal program, **Native** mode scales the video to display the entire picture within the borders of the screen (i.e. no oversampling).
- This is especially useful for external HD sources such as DVD, DVHS movies, or PC graphics.

Note:

- *This mode is supported only for HDMI (1080p, 1080i, 720p, 480p, and 480i), ColorStream (1080i and 720p), and ANT/CABLE (digital) inputs (1080p, 1080i, and 720p).*
- *Depending on the input signals, the border of the picture may be hidden, displayed in black, or noisy.*

 Dot by Dot (for VGA, SVGA, XGA, and WXGA sources only)







The “Dot by Dot” picture is non-scaling display. Depending on the input signal formats, picture is displayed with sidebars and/or bars at the top and bottom. (Example: VGA input source)

* To view the hidden areas (such as subtitles or captions), see “Scrolling the TheaterWide® picture” (⏮ Page 37).

Scrolling the TheaterWide® picture (TheaterWide 2 and 3 only)

You can set separate scroll settings for the TheaterWide 2 and TheaterWide 3 modes for each input.

- 1 From the **Picture** menu, press ▲ or ▼ to select **Theater Settings** and then press .
- 2 In the **Picture Size** field, select either **TheaterWide 2** or **TheaterWide 3** (you cannot scroll in any other mode).
- 3 Press ▼ to highlight the **Picture Scroll** field.
- 4 Press ◀ or ▶ to scroll the picture up and down as needed and then press .
- 5 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Note: When receiving a signal at 480i resolution, the picture scroll function may have limited adjustment range.





Using the auto aspect ratio feature

When the auto aspect ratio feature is set to **On**, the TV will automatically select the picture size when one of the following input sources is received:

- A 480i, 480p, 720p, 1080i digital signal from the **ANT/CABLE** input
- A 480i signal from the **Video** input
- A 480i signal from the **ColorStream HD** input
- A 480i, 480p, 720p, 1080i, 1080p, or VGA (60Hz) signal from the **HDMI 1/2** input

Note: The auto aspect ratio feature is not applicable to the PC input.





To turn on the auto aspect ratio feature:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Theater Settings** and then press .
- 2 Press ▲ or ▼ to select **Auto Aspect Ratio** and then press ◀ or ▶ to select **On** and then press .
- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Selecting the cinema mode

When you view a DVD (3:2 pulldown processed) from a DVD player connected to the **Video**, **ColorStream HD** (component video), or **HDMI** inputs on the TV, smoother motion can be obtained by setting the **Cinema Mode** to **Film**.

To set the Cinema Mode to Film:
(available for 480i and 1080i signals)

- 1 From the **Picture** menu, press ▲ or ▼ to select **Theater Settings** and then press .
- 2 Press ▲ or ▼ to select **Cinema Mode** and then press ◀ or ▶ to select **Film** and then press .
- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

To set the Cinema Mode to Video:

Select **Video** in step 2 above.

Adjusting the picture

Selecting the picture mode

You can select your desired picture settings from four different modes, as described below.

Mode	Picture Quality
Sports	Bright and dynamic picture (factory setting)
Standard	Standard picture settings (factory setting)
Movie	Lower contrast for darkened room (factory setting)
PC	Designed for viewing of PC tables and documents
Preference	Your personal preferences

Note: PC mode is available for HDMI and PC inputs only (grayed out for other input sources).

- 1 From the **Picture** menu, press ▲ or ▼ to select **Mode** and then press **ENTER**.
- 2 Press ▲ or ▼ to select the picture mode you prefer and then press **ENTER**.

Note: The picture mode you select affects the current input only. You can select a different picture mode for each input.

Adjusting the picture quality

You can adjust the picture quality (Contrast, Backlight, DynaLight™, Brightness, Color, Tint, and Sharpness) to your personal preferences.

Selection	Pressing ◀	Pressing ▶
Contrast	lower	higher
Backlight*	darker	lighter
DynaLight**	On/Off	On/Off
Brightness	darker	lighter
Color	paler	deeper
Tint	reddish	greenish
Sharpness	softer	sharper

* Backlight

This feature adjusts the brightness of the entire screen. When in video mode and no signal is input, this will automatically be set to 0 (Settings are stored in memory).

** DynaLight

This function automatically strengthens the black coloring of dark areas in the video according to the level of darkness.

- 1 From the **Picture** menu, press ▲ or ▼ to select **Picture Settings** and then press **ENTER**.
- 2 Press ▲ or ▼ to select the picture quality you want to adjust (**Contrast**, **Backlight**, **DynaLight**, **Brightness**, **Color**, **Tint**, or **Sharpness**).
- 3 Press ◀ or ▶ to adjust the setting, as described in the table above and then press **ENTER**.
- 4 To save the new settings, highlight **Done** and then press **ENTER**. You can use any of the picture modes (⏮ “Selecting the picture mode” at left column) as a starting point for adjusting the picture settings.
To revert back to the base mode that you began adjusting the picture settings from, highlight **Reset** and then press **ENTER**.

The picture qualities you adjusted are automatically saved in the **Preference** mode (⏮ “Selecting the picture mode” at left column) until **Reset** is selected.

Using the closed caption mode

Base closed captions

The closed caption mode has two options:

- **Captions**—An on-screen display of the dialogue, narration, and sound effects of TV programs and videos that are closed captioned (usually marked “CC” in program guides).
- **Text**—An on-screen display of information not related to the current program, such as weather or stock data (when provided by individual stations).

- 1 From the **Preferences** menu, press **▲** or **▼** to select **Base CC Mode**.
- 2 Press **◀** or **▶** to select the desired closed caption mode.

• To view captions:


Highlight **CC1**, **CC2**, **CC3**, or **CC4**. (**CC1** displays translation of the primary language in your area.)



Note: If the program or video you selected is not closed captioned, no captions will display on-screen.

• To view text:

Highlight **T1**, **T2**, **T3**, or **T4**.

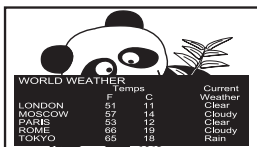

Note: If text is not available in your area, a black rectangle may appear on screen. If this happens, set the **Base CC Mode** to **Off**.

• To turn off the closed caption mode:

Select **Off** in step 2 above.

Note: A closed caption signal may not display in the following situations:

- When a videotape has been dubbed
- When the signal reception is weak
- When the signal reception is non-standard

Digital CC Settings

You can customize the closed caption display characteristics by changing the background color, opacity, text size, type, edge, and color.

Note:

- *This feature is available for digital channels only.*
- *You cannot set the Caption Text and Background as the same color.*

Mode	Description
Caption Size	Auto, Small, Standard, Large
Caption Text Type	Auto, Default, Mono w. Serif, Prop. w. Serif, Mono w/o Serif, Prop. w/o Serif, Casual, Cursive, Small Capitals
Caption Text Edge	Auto, None, Raised, Depressed, Uniform, Left Drop Shadow, Right Drop shadow
Caption Text Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan
Text Foreground Opacity	Auto, Transparent, Translucent, Flashing, Solid
Background Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan
Text Background Opacity	Auto, Transparent, Translucent, Flashing, Solid
Caption Text Edge Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan

To customize the closed captions:

- 1 From the **Preferences** menu, press **▲** or **▼** to select **Digital CC Settings** and then press **ENTER**.
- 2 Press **▲** or **▼** to select the characteristic you want to change, and then press **◀** or **▶** to select the format for that characteristic (see table above).
- 3 To save the new settings, highlight **Done** and then press **ENTER**. To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

CC Selector

You can use the **CC and Digital Audio Selectors** to temporarily override the default analog caption mode (set in **Base CC Mode**) for a particular channel. However, once you change to another analog channel, the closed caption setting will automatically change back to the current **Base CC Mode** setting.

You can also use the CC Selector to select digital closed caption services (if available). When such services are not available, the CC Selector presents a default list of services. If the selected service is not available, the next best service will be used instead.

To select closed captions:

- 1 From the **Preferences** menu, press **▲** or **▼** to select **CC and Digital Audio Selectors** and then press **ENTER**.
- 2 Press **▲** or **▼** to select **Closed Caption**, and then press **◀** or **▶** to select the desired service.
- 3 Press **EXIT/CANCEL**.

Adjusting the audio

Muting the sound

Press **MUTE** on the remote control to partially reduce (1/2 MUTE) or turn off (MUTE) the sound. Each time you press **MUTE**, the mute mode will change in the following order:



If the closed caption mode is set to **Off** when you select “MUTE” mode, the closed caption feature is automatically activated if the TV program is Closed Captioned. To mute the audio without automatically activating the closed caption feature, use **VOL** to set the volume to 0. See “Using the closed caption mode” (Page 39) for more information on closed caption modes.

Using the digital audio selector

You can use the **CC and Digital Audio Selectors** to conveniently switch between audio tracks on a digital channel (for those channels that have multiple audio tracks).

To use the digital audio selector:

- 1 From the **Preferences** menu, press **▲** or **▼** to select **CC and Digital Audio Selectors** and then press **ENTER**.
- 2 Press **▲** or **▼** to select **Audio**, and then press **◀** or **▶** to select the desired service.
- 3 Press **EXIT/CANCEL**.

Selecting stereo/SAP broadcasts

The multi-channel TV sound (MTS) feature allows you to output high-fidelity stereo sound. MTS also can transmit a second audio program (SAP) containing a second language, music, or other audio information (when provided by individual stations).

When the TV receives a stereo or SAP broadcast, the word “STEREO” or “SAP” appears on-screen when **DISPLAY** is pressed. The MTS feature is only available for analog signals on the **ANT/CABLE** input.

To listen to stereo sound:

- 1 From the **Sound** menu, press ▲ or ▼ to select **Audio Setup** and then press .
- 2 Press ▲ or ▼ to select **MTS**, and then press ◀ or ▶ to select **Stereo**.
- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Note:

- You can typically leave the TV in **Stereo** mode because it will automatically output the type of sound being broadcast (stereo or monaural).
- If the stereo sound is noisy, select **Mono** to reduce the noise.

To listen to an alternate language on an ATSC digital station (if available):

Highlight the **Language** field in step 2 above, and then press ◀ or ▶ to select the language you prefer.

To listen to a second audio program on an analog station (if available):




Select **SAP** in step 2 above.

Note:

- A second audio program (SAP) can be heard only on those TV stations that offer it. For example, a station might broadcast another language as a second audio program. If you have SAP on, you will see the current program on the screen but hear the other language instead of the program's normal audio.
- If you have SAP on and the station you are watching is not broadcasting a second audio program, the station's normal audio will be output. However, occasionally there is no sound at all in **SAP** mode. If this happens, set the **MTS** feature to **Stereo** mode.

Adjusting the audio quality




You can adjust the audio quality by adjusting the bass, treble, and balance.

- 1 From the **Sound** menu, press ▲ or ▼ to select **Audio Settings** and then press .
- 2 Press ▲ or ▼ to select the item you want to adjust (**Bass**, **Treble** or **Balance**).
- 3 Press ◀ or ▶ to adjust the level.
 - ◀ makes the bass or treble weaker or increases the balance in the left channel (depending on the item selected).
 - ▶ makes the bass or treble stronger or increases the balance in the right channel (depending on the item selected).
- 4 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Note: Selecting **Speakers** in step 2 and setting it to **Off** will mute the TV's built-in speakers.




Selecting the optical audio output format

You can use this feature to select the optical audio output format when you connect a Dolby Digital decoder or other digital audio system to the **Optical Audio Out** terminal on the TV (📺 “Connecting a digital audio system” on Page 22).

- 1 From the **Sound** menu, press ▲ or ▼ to select **Audio Setup** and then press .
- 2 Press ▲ or ▼ to select **Optical Output Format** and then press ◀ or ▶ to select either **Dolby Digital** or **PCM**, depending on your device.
- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Using the Dolby® Digital Dynamic Range Control feature

This dynamic range control feature causes the ATSC dynamic range to be further compressed, allowing you to switch from ATSC to analog broadcasts at the same dynamic range.

- 1 From the **Sound** menu, press ▲ or ▼ to select **Audio Setup** and then press .
- 2 Press ▲ or ▼ to select **Dolby Digital Dynamic Range Control** and then press ◀ or ▶ to select **Compressed**. When **Standard** is selected, the audio is output with minimal compression.
- 3 To save the new settings, highlight **Done** and then press . To revert to the factory defaults, highlight **Reset** and then press .




Note:



- This item will be grayed out for NTSC signals, Video, ColorStream, and PC inputs.
- The Dolby Digital Dynamic Range Control will function in relation to Optical Output Format (PCM mode).

Using the Locks menu

The Locks menu includes the Enable Rating Blocking, Edit Rating Limits, Input Lock, Control Panel Lock, GameTimer and New PIN Code features. You can use these features after entering the correct PIN code.


Entering the PIN code

- 1 Press  and then press ◀ or ▶ to highlight **Locks**.
- 2 Press ▼, which displays the PIN code entry screen.
 - The **Lock System** screen appears if a PIN code has not been stored. Press the Channel Number buttons to enter a new four-digit code, enter the code a second time to confirm, and then press .
 - The **Locks/Active** screen appears if the PIN code is already stored. Use the Channel Number buttons to enter your four-digit code and then press .




If the wrong PIN code is entered, the message “Incorrect PIN code, please try again!” appears. Highlight **Retry** and then press . Enter the code again and then press .

When the correct PIN code is entered, the **Locks** menu opens.

If you cannot remember your PIN code

While the PIN code entering screen is displayed, press  four times within five seconds. The PIN code will be cleared and you can enter a new PIN code.

Changing your PIN code






- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .
- 3 Press ▲ or ▼ to select **New PIN Code** and then press .
- 4 Press the Channel Number buttons to enter a new four-digit code. Reenter the PIN code to confirm it.
- 5 Press . The new PIN code is now active.

Blocking TV programs and movies by rating (V-Chip)

Some TV programs and movies include signals that classify the content of the program (violence, sex, dialogue, language). The V-Chip feature in this TV detects the signals and blocks the programs according to the ratings you select. (For rating descriptions, see the tables on the next page.)

Note: *Rating blocking is a function of the V-Chip feature in this TV, which supports the U.S. V-Chip system only.*

To block and unblock TV programs and movies:


- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .
- 3 Press ▲ or ▼ to select **Enable Rating Blocking**.
- 4 Press ◀ or ▶ to select **On** and then press .
- 5 Press ▲ or ▼ to select **Edit Rating Limits** and then press . The **Edit Rating Limits** screen appears.
- 6 Press ▲ ▼ ◀ or ▶ and then press  to select the level of blocking you prefer. A box with an "X" is a rating that will be blocked. As you highlight a rating, a definition for the rating appears at the bottom of the screen.
- 7 When done selecting the ratings you want to block, highlight **Done** and then press .




Downloading an additional rating system for blocking TV programs and movies

An additional rating system may be available for use in selectively blocking programs.




Note: *The currently tuned station must be receiving a digital signal before an additional rating system can be downloaded.*

To download the additional rating system (if available):

- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .

- 3 Press ▲ or ▼ to select **Enable Rating Blocking**.
- 4 Press ◀ or ▶ to select **On** and then press .
- 5 Press ▲ or ▼ to select **Edit Rating Limits** and then press . The **Edit Rating Limits** screen appears.
- 6 Press ▲ or ▼ to select **Alt RS** and then press . The **Edit Alternate Ratings** screen appears.

Note:

- The **Alt RS** button will only be available if an additional rating system is currently available.
 - It may take several minutes for the TV to download the additional rating system.
 - The information displayed in the **Alternate Ratings** screen will depend on the configuration of the additional rating system available at the time of download.
- 7 Press ▲ ▼ ◀ or ▶ and then press  to select the level of blocking you prefer. A box with an "X" is a rating that will be blocked.
 - 8 When done selecting the ratings you want to block, highlight **Done** and then press .
 - 9 In the **Edit Rating Limits** screen, highlight **Done** and then press .

Note:

- The additional rating system can only be downloaded one time. You will not be able to download any updates to the rating system should such updates become available.
- The additional rating system is not designed, transmitted, or controlled by the TV or Toshiba, nor is the availability of an additional rating system determined or controlled by Toshiba. Similarly, the rating of programs in an additional rating system is not determined, transmitted, or controlled by the TV or Toshiba.
- The additional rating system is an evolving technology; therefore, availability, content, and format may vary.

Chapter 6: Using the TV's features

Independent rating system for broadcasters	
Ratings	Description and Content themes
TV-MA	Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) L) Crude or indecent language S) Explicit sexual activity V) Graphic violence
TV-14	Parents Strongly Cautioned (This program contains some material that many parents would find unsuitable for children under 14 years of age.) D) Intensely suggestive dialog L) Strong, coarse language S) Intense sexual situations V) Intense violence
TV-PG	Parental Guidance Suggested (This program contains material parents may find unsuitable for younger children.) D) Some suggestive dialog L) Infrequent coarse language S) Some sexual situations V) Moderate violence
TV-G	General Audience (Most parents would find this program suitable for all ages.)
TV-Y7, TV-Y7FV	Directed to Older Children (This program is designed for children age 7 and above. Note: Programs in which fantasy violence may be more intense or more combative than other programs in this category are designated TV-Y7FV.)
TV-Y	All Children (This program is designed to be appropriate for all children.)

Independent rating system for movies	
Ratings	Description and Content themes
X	X-rated (For adults only)
NC-17	Not intended for anyone 17 and under
R	Restricted (Under 17 requires accompanying parent or adult)
PG-13	Parents Strongly Cautioned (Some material may be inappropriate for children under 13)
PG	Parental Guidance Suggested (Some material may not be suitable for children)
G	General Audience (Appropriate for all ages)

Note:

- If you place an **"X"** in the box next to **"None"** **Rated**, programs rated **"None"** will be blocked; however, programs that do not provide any rating information will not be blocked.
- To display the rating of the program you are watching, press **DISPLAY** on the remote control. If it is rated **"None"**, the word **"TV-NONE"** appears in the display screen (as shown below right). If rating information is not provided, no rating will appear in the display screen.

TV -PG L V

TV-NONE

Unlocking programs temporarily



If you try to tune the TV to a program that exceeds the rating limits you set, the TV will enter program lock mode and a warning message will appear on-screen.

You can either temporarily unlock the program or select an unlocked program to watch.

- 1 Press **MUTE**.
- 2 Enter your four-digit PIN code and then press **ENTER**. If the correct code is entered, the program lock mode is released and the normal picture appears. All locking is disabled until the TV is turned off, and will be enabled when the TV is turned on again.

Using the input lock feature

You can use the Input Lock feature to lock the video inputs (**Video**, **ColorStream HD**, **HDMI 1**, **HDMI 2**, and **PC**) and channels 3 and 4. You will not be able to view the input sources or channels until you unlock the inputs.



- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .
- 3 Press ▲ or ▼ to select **Input Lock**.
- 4 Press ◀ or ▶ to select the level of video input locking you prefer, as described below.
- 5 Press  to exit.

Mode	Description
Video	Locks Video, ColorStream HD, HDMI 1, HDMI 2, and PC.
Video+	Locks Video, ColorStream HD, HDMI 1, HDMI 2, PC and channels 3 and 4. • Select Video+ if you play video tapes via an ANT/CABLE input.
Off	Unlocks all video inputs and channels 3 and 4.

Using the GameTimer®

You can use the GameTimer to set a time limit for playing a video game (30–120 minutes). When the GameTimer expires, the TV enters Input Lock mode and locks out the input source for the video game device.


To set the GameTimer®:

- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .
- 3 Press ▲ or ▼ to select **GameTimer**.
- 4 Press ◀ or ▶ to select the length of time until the Input Lock is activated (30, 60, 90, or 120 minutes).
- 5 Press  to exit.

 
To cancel the GameTimer®:

Select **Off** in step 4 above.

To deactivate the Input Lock once the GameTimer® has activated it:



Set the **Input Lock** to **Off** ( left column).

Note:

- A message will appear when 10 minutes, 3 minutes, and 1 minute remain on the GameTimer.
- If the TV loses power with time remaining on the GameTimer, when power is restored, the TV will enter Input Lock mode (as if the GameTimer had been activated) and you will have to deactivate the Input Lock ( left column).

Using the control panel lock feature

You can lock the control panel to prevent your settings from being changed accidentally (by children, for example). When the control panel lock is **On**, none of the controls on the TV control panel will operate except **POWER**.


 
 

- 1 From the **Locks** menu, press ▼ to display the PIN code entering screen.
- 2 Enter your four-digit PIN code and then press .
- 3 Press ▲ or ▼ to select **Control Panel Lock**.
- 4 Press ◀ or ▶ to select **On** and then press  to exit.
When the control panel is locked and any button on the control panel (except **POWER**) is pressed, the message “NOT AVAILABLE” appears.

To unlock the control panel:

 
 
 
 
Select **Off** in step 4 above, or press and hold **VOLUME-** on the TV control panel for about 10 seconds until the volume icon appears.

Using the PC settings feature


You can view an image from a PC on the TV screen. When a PC is connected to the TV's PC IN terminal, you can use the PC Settings feature to make adjustments to the image. If the edges of the picture are cut off, readjust the **Horizontal Position** and **Vertical Position**. If the picture is affected by interference, readjust the **Clock Phase** and **Sampling Clock**.

- 1 Repeatedly press  to select PC input mode (see "Selecting the video input source to view" on Page 33).
- 2 From the **Setup** menu, press  or  to select **PC Settings** and then press .

Note: If a PC is not connected or there is no PC input signal, this feature will be grayed out in the **Setup** menu.

- 3 Press  or  to select the item you want to adjust.
- 4 Press  or  to make the appropriate adjustments.

 





 
Note: The screen is disrupted momentarily when adjusting the PC settings. This is not a sign of malfunction.

Mode	Description
Horizontal Position	Moves the picture left/right. The adjustment range is within ± 50 from center.*
Vertical Position	Moves the picture up/down. The adjustment range is within ± 10 from center.*
Clock Phase	Helps to reduce noise and sharpen the picture. The adjustment range is within ± 16 from center.*
Sampling Clock	Helps to reduce noise and minimize periodic vertical stripes on the screen. The adjustment range is within ± 10 from center.*
Auto Adjust	Highlight this item and then press  to get an optimum adjustment automatically.

* The default settings may vary depending on the input signal format.

Setting the PC Audio

This function allows you to output or mute the sound from your PC when connecting using the PC IN terminal and an analog RGB cable (see Page 23).

- 1 From the **Sound** menu, press  or  to select **Audio Setup** and then press .
- 2 Press  or  to select **PC Audio** and then press  or  to select **No** or **Yes**.

Yes: When viewing the PC input, the audio from the PC Audio input can be heard.



 

No: When viewing the PC input, there will be no audio.

Note: Because the PC and HDMI 1 inputs share the same set of analog audio inputs, the **PC Audio** menu setting influences the **HDMI 1 Audio** menu setting. If PC Audio is set to "No", the **HDMI 1 Audio** setting changes to "Auto". If PC Audio is set to "Yes", the **HDMI 1 Audio** setting is set to "Digital" and is grayed out in the menu. (see "Setting the HDMI™ audio mode" on Page 31.)





Setting the sleep timer

You can set the sleep timer to turn off the TV after a set length of time (maximum of 180 minutes).

To set the sleep timer using the remote control:


Press  on the remote control to set the length of time until the TV turns off. Repeatedly press  to increase the time in 10-minute increments, or press  or  to increase or decrease the time in 10-minute increments, to a maximum of 180 minutes.

 To set the sleep timer using the on-screen menus:

- 1 From the **Setup** menu, press  or  to select **Sleep Timer** and then press .
- 2 Press the Channel Number buttons to enter the length of time in 10-minute increments.
- 3 Highlight **Done** and then press .


Note: When a power failure occurs, the sleep timer setting may be cleared.

To display the remaining sleep time:

Press .

Note: A message will display on-screen when there is one minute remaining on the sleep timer.

To cancel the sleep timer:

Repeatedly press  until it is set to 0 minute.

Using REGZA-LINK®












This is a new feature that uses CEC technology and allows you to control Toshiba REGZA-LINK® compatible devices from the TV remote via HDMI connection (see Page 21).

When the **Enable REGZA-LINK** in the **REGZA-LINK Setup** menu (see Page 49) is set to **On**, the following REGZA-LINK® functions will be enabled.

REGZA-LINK® playback device (DVD player, etc.) control



With your TV's remote control, or using the **REGZA-LINK Player Control** menu, you can control the connected REGZA-LINK® playback device you are watching.


Available remote control key functions:

Button	Description
	Begins playback.
	Stops playback.
	Pauses the picture during play or record mode.
	Skips forward.
	Skips backward.
 	Fast-forwards/Fast-reverses.
	Enters contents menu, etc.
 	Navigates contents menu, etc.
	Closes the menu.

Note: These functions depend on the devices connected.

REGZA-LINK® Player Control menu functions


- 1 From the **Preferences** menu, press ▲ or ▼ to select **REGZA-LINK Player Control** and then press .
- 2 Press ▲ or ▼ to select the item you want to control and then press .

Item	Description
Power	Turns the selected device on and off.
Root Menu	Accesses the top menu of the selected device.
Contents Menu	Accesses the contents list when you press  . At this time, the REGZA-LINK Player Control menu will disappear.
Setup Menu	Accesses the setup menu of a DVD player.
Top Menu	Accesses the top menu of a DVD during playback.
Menu	Accesses the menu of a DVD during playback.

Note:




- These functions depend on the devices that are connected.
- The **REGZA-LINK Player Control** item will be grayed out in the following conditions:
 - A non-HDMI input is currently selected.
 - The **Enable REGZA-LINK** item is set to **Off**.
 - The connected CEC device is not a playback or recording device.

REGZA-LINK® input source selection

If a REGZA-LINK® device with HDMI switching capability (e.g. Audio Receiver) is connected to the HDMI input, you can select another REGZA-LINK® device that is connected to the master HDMI device using  on the remote control or the TV control panel (Page 33).

VOLUME and MUTE controls of Audio Receiver

With your TV's remote control, you can adjust or mute the sound volume of the Audio Receiver.

-   adjust the volume level.
-  turns off the sound.

Note:

- To use this function:
 - Set **Speaker Preference** to **Audio Receiver** in the **REGZA-LINK Setup** menu.
 - Confirm that a connected REGZA-LINK® device (such as DVD player, etc.) is selected for the Audio Receiver input source.
- You can also use this function when the audio receiver is connected to the TV's **DIGITAL AUDIO OUT** terminal (not HDMI connection). In this case, select a digital audio input mode on the Audio Receiver.
- These functions depend on the device connected.

Other REGZA-LINK® functions

When the **Enable REGZA-LINK** and each item in the **REGZA-LINK Setup** menu are set to **On**, the following functions will be enabled.

Item	Description
TV Auto Input Switch	If a connected HDMI device starts playing video or audio, the TV will automatically switch to the appropriate HDMI input.
TV Auto Power On	If a device is turned on, the TV turns on automatically.
Device Auto Standby	If the TV is turned off, the TV will send a message to turn off all of the devices connected to the TV.
Speaker Preference	From this item, you can set your audio output preference to the TV speakers or the audio receiver speakers. When this item is set to Audio Receiver , the TV remote can be used to adjust or mute the volume of the audio receiver. This item will be grayed out unless a REGZA-LINK® compatible audio receiver is connected.

Note: When you turn on the audio receiver, change its input source, or adjust the sound volume, the sound will be output from the audio receiver's speakers even if **TV Speakers** has been selected. Turn the TV off and on again to output the sound from the TV speakers.

To set the REGZA-LINK® Setup:

- 1 From the **Setup** menu, press **▲** or **▼** to select **REGZA-LINK Setup** and then press **ENTER**.
- 2 Press **▲** or **▼** to select **Enable REGZA-LINK** and then press **◀** or **▶** to select **On**.
Note: If you select **Enable REGZA-LINK Off**, the other items will be grayed out.
- 3 Press **▲** or **▼** to select the **REGZA-LINK Setup** item you want to use and then press **◀** or **▶** to select **On** or desired mode.
 - TV Auto Input Switch: On/Off
 - TV Auto Power: On/Off
 - Device Auto Standby: On/Off
 - Speaker Preference: TV Speakers/Audio Receiver
- 4 To save the new settings, highlight **Done** and then press **ENTER**.
To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

Displaying TV status information

To display TV status information using **DISPLAY**:

Press **DISPLAY** on the remote control.

The following information will display (if applicable):

- Current input (**ANT/CABLE**, **Video**, etc.)
- If **ANT/CABLE** is the current input, either "CABLE" (for cable TV) or "ANT" (for over-the-air broadcasts).
- Channel number (if in **ANT/CABLE** mode)
- Channel label (if set)
- Digital signal strength indicator (bar graph in lower right corner of box; for ATSC signal only)
- Stereo, Mono or SAP audio status (when HDMI input mode, Dolby Digital or PCM)
- Video resolution

- Aspect ratio of incoming video signal (4:3 or 16:9)
- V-Chip rating status
- GameTimer (if set)




To display more TV information:

Press **DISPLAY** on the remote control again.

The following additional information will display for off air digital channels (if applicable):

- Title
- Duration
- Detailed description

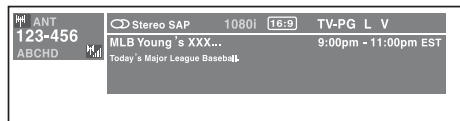

Note: The location of the banner can be moved to the top or bottom of the screen by pressing **▲** or **▼** while the **DISPLAY** is on-screen.

Understanding the auto power off feature

The TV will automatically turn itself off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day. This feature functions in **ANT/CABLE** mode only.

Understanding the last mode memory feature

If the power is cut off while you are viewing the TV, the Last Mode Memory feature automatically turns on the TV when the power is resupplied.

Note: If it's possible, and you will be away from the TV for an extended period of time, you should unplug the power cord.

Using the advanced picture settings features

Using dynamic contrast

When dynamic contrast is set to **On**, the TV will detect changes in the picture quality that affect the appearance of your contrast settings and then automatically adjust the video.

To select dynamic contrast preferences:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Picture Settings** and then press **ENTER**.
- 2 Press ▲ or ▼ to select **Advanced Picture Settings** and then press **ENTER**.
- 3 Press ▲ or ▼ to select **Dynamic Contrast** and then press ◀ or ▶ to select either **Off** or **On** and then press **ENTER**.
- 4 To save the new settings, highlight **Done** and then press **ENTER**.
To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

Note: If you select one of the factory-set picture modes (**Sports**, **Standard**, **Movie** or **PC**) and then change the dynamic contrast setting, the picture mode automatically changes to **Preference**.

Using the static gamma feature

The static gamma feature allows you to adjust the levels of black in the picture.

To adjust the static gamma settings:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Picture Settings** and then press **ENTER**.
- 2 Press ▲ or ▼ to select **Advanced Picture Settings** and then press **ENTER**.
- 3 Press ▲ or ▼ to select **Static Gamma** and then press ◀ or ▶ to adjust the static gamma and then press **ENTER**.

The adjustment range is within ± 5 from center.

- If the setting is moved in the minus direction, the detail of black colors will be decreased.
- If the setting is moved in the plus direction, the detail of black colors will be increased.

- 4 To save the new settings, highlight **Done** and then press **ENTER**.
To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

Note: If you select one of the factory-set picture modes (**Sports**, **Standard**, **Movie** or **PC**) and then change the static gamma setting, the picture mode automatically changes to **Preference**.

Selecting the color temperature

You can change the quality of the picture by selecting from three preset color temperatures (**Cool**, **Medium**, and **Warm**), as described below.

Mode	Picture Quality
Cool	blueish
Medium	neutral
Warm	reddish

To select the color temperature:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Picture Settings** and then press **ENTER**.
- 2 Press ▲ or ▼ to select **Advanced Picture Settings** and then press **ENTER**.
- 3 Press ▲ or ▼ to select **Color Temperature** and then press ◀ or ▶ to select the mode you prefer and then press **ENTER**.
- 4 Press ▲ or ▼ to select either **B Drive** or **G Drive** and then press ◀ or ▶ to adjust the settings and then press **ENTER**.
 - B Drive: ▶ makes the picture blueish.
 - G Drive: ▶ makes the picture greenish.

Note: The **B Drive** and **G Drive** settings are connected to the **Color Temperature** settings and will change based on which setting is selected in step 3 above.



- 5 To save the new settings, highlight **Done** and then press **ENTER**.
To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

Note: If you select one of the factory-set picture modes (**Sports**, **Standard**, **Movie** or **PC**) and then change the color temperature mode, the picture mode automatically changes to **Preference**.

Using CableClear® digital noise reduction



The CableClear® digital noise reduction feature allows you to reduce visible interference in your TV picture. This may be useful when receiving a broadcast with a weak signal (especially a Cable channel) or playing a noisy video cassette or disc.

To change the CableClear settings:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Noise Reduction** and then press .
- 2 Press ▲ or ▼ to select **CableClear** and then press ◀ or ▶ to select your desired setting and then press .

Note:





- If the current input is **ANT/CABLE**, or **Video**, the menu will display the text "CableClear". The available selections are **Off**, **Low**, **Middle**, and **High**.
- If the current input is **ColorStream HD**, **HDMI 1**, or **HDMI 2**, the menu will display the text "DNR". The available selections are **Off**, **Low**, **Middle**, and **High**. **Low**, **Middle**, and **High** will reduce the noise in varying degrees, from lowest to highest, respectively.

- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Using MPEG noise reduction

The MPEG noise reduction feature allows you to reduce visible interference caused by MPEG compression. Choices for MPEG noise reduction are **Off**, **Low**, **Middle**, and **High**. **Off** is automatically selected when this feature is disabled ("grayed out").

To select the MPEG noise reduction level:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Noise Reduction** and then press .
- 2 Press ▲ or ▼ to select **MPEG Noise Reduction** and then press ◀ or ▶ to select either **Off**, **Low**, **Middle** or **High** and then press .
- 3 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Using the Game Mode feature

You can use the Game Mode feature for shorter frame delays when playing a video game requiring split-second timing between the on-screen display and input from the controller (such as music creation and high-action games).

This feature is more effective for 480i and 1080i input signals.


Note: To use the Game Mode feature, the current video input must be **Video**, **ColorStream HD**, **HDMI 1**, or **HDMI 2**. The Game Mode cannot be turned on when any other video input is selected.

To turn on Game Mode:

- 1 From the **Picture** menu, press ▲ or ▼ to select **Game Mode**.
- 2 Press ◀ or ▶ to select **On**.






To turn off Game Mode:

Select **Off** in step 2 above, change the video input, or turn the TV off and then on again.

Note: You can change the video input by pressing  on the remote control (see Page 33).

Using the Auto Brightness Sensor

When the Auto Brightness Sensor feature is set to **On**, the TV will automatically optimize the backlighting levels to suit ambient light conditions.

- 1 From the **Picture** menu, press ▲ or ▼ to select **Picture Settings** and then press .
- 2 Press ▲ or ▼ to select **Advanced Picture Settings** and then press .
- 3 Press ▲ or ▼ to select **Auto Brightness Sensor** and then press ◀ or ▶ to select **On** or **Off** and then press .
- 4 To save the new settings, highlight **Done** and then press .
To revert to the factory defaults, highlight **Reset** and then press .

Using the advanced audio settings features

Using the QSound® sound feature

QSound® is the original name for a positional three-dimensional (3D) sound processing algorithm from QSound Labs, Inc. that creates 3D audio effects from multiple monophonic sources and sums the outputs to two channels for presentation over regular stereo speakers.

To adjust the QSound® settings:

- 1 Set the TV in **Stereo** mode (⏏ “Selecting stereo/SAP broadcasts” on Page 40).
- 2 From the **Sound** menu, press ▲ or ▼ to select **Advanced Audio Settings** and then press **ENTER**.
- 3 Press ▲ or ▼ to select the **QSound** feature and then press ◀ or ▶ to turn the QSound effect **On** or **Off**.
- 4 To save the new settings, highlight **Done** and then press **ENTER**.
To revert to the factory defaults, highlight **Reset** and then press **ENTER**.

Note: If the broadcast is monaural, the QSound effect will not work.

Using the Media Player

The TV allows you to enjoy photos and music stored on a USB device.

Note: Do not insert/remove the USB device while in use.

Media Player Specifications

Device

USB device:

USB Mass Storage Class devices (MSC)

Note:

- Connectivity is not guaranteed for all devices.
- Connect the USB device to the TV directly.
- Do not use a USB hub.

Supported file system

FAT12, FAT16 and FAT32

Supported photo format:

JPEG Exif ver 2.2 (DCF ver 1.1)

- Maximum viewable resolution: 8192 x 8192 pixels
- Maximum photo size: 9 MB

Note: It may take some time to open a file of large size.

Supported music format:

MPEG-1 (MP3)

- Sampling rate: 32, 44.1, 48 kHz
- ID3: ver.1, ver.2


Folder specifications

- Total number of files: Less than 2000 per folder



You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission.

Basic Operation

To set Auto Start:



- 1 From the **Setup** menu, press ▲ or ▼ to select **Media Player** and then press .
- 2 Press ▲ or ▼ to select **Auto Start** and then press ◀ or ▶ to select **On**.

Auto Start:


- 1 Insert USB device into the **USB** terminal on the left side of the TV.
- 2 A prompt will appear. Press ◀ or ▶ to select **Yes** and then press .
- 3 Press ▲ or ▼ to select **Photo** or **Music** and then press . The photo thumbnail view or music list will appear.

Note: If **Auto Start** is set to **Off**, you can start the **Media Player** manually.

To set manual Start:


- 1 Insert USB device into the **USB** terminal on the left side of the TV.
- 2 From the **Setup** menu, press ▲ or ▼ to select **Media Player** and then press .
- 3 Press ▲ or ▼ to select **Photo** or **Music** and then press . The photo thumbnail view or music list will appear.

To close the Media Player:


Press . The TV will return to the last-viewed channel or video input.

Viewing JPEG files



To view in Single View mode:

- 1 From **Media Player** menu, press ▲ or ▼ to select **Photo** and then press .
- 2 When the thumbnail view appears, press ▲ ▼ ◀ or ▶ to select a file or folder.

Note: An incompatible JPEG file will be displayed with an  icon.

- 3 Press  to begin viewing the selected file in full screen or to open the selected folder.
- 4 Press ▶ to view the next file, or press ◀ to view the previous file.


To view in Slide Show mode:

- 1 To switch to the Slide Show mode, press  while in Single View mode. To return to Single View mode, press  again.
- 2 Press ▶ to view the next file, or press ◀ to view the previous file.

To rotate the image:


 
 

 

While viewing the image in Single View mode, press ▲ to rotate the image 90 degrees clockwise, or press ▼ to rotate the image 90 degrees counterclockwise.


To return to the thumbnail:

Press  while in Single View mode or Slide Show mode.

To use the photo Quick Menu:

You can select your preferred photo viewing settings from the photo **Quick Menu**.

- 1 From the photo Single View, Slide Show or thumbnail mode, press  to enter the **Quick Menu**.
- Note:** The Quick Menu items of thumbnail and Single View/Slide Show modes are different.
- 2 Press  or  to select the item you want to adjust.
- 3 Press  or  to select your preferred setting.
- 4 Press  to return to the previous photo view mode.

Item	Description
Sort*	To set the file sorting preference in thumbnail view. <ul style="list-style-type: none"> • Title: to sort the files by file name. • New: to sort the files from new to old by file date. • Old: to sort the files from old to new by file date.
Interval Time	To set a time interval to view photos at your preferred intervals (3sec, 5sec, 10sec, 15sec, 30sec, 60sec, or 90sec).
Repeat	To display photos in the same folder repeatedly (On/Off).
Background Music Select**	To select background music for the photo display from the music stored in the USB device ( right column).
Sleep Timer**	To set the sleep timer to turn off the Media Player, as well as the TV (up to 180 minutes in 10-minute increments).



 

 
 


Note: The sleep timer setting in the Media Player Quick Menu or TV Setup Menu will override the previous setting of each other.

 
* This Quick Menu item is only available for access from the thumbnail view mode.

** This Quick Menu item is only available for access from Single View/Slide Show modes.

To set background music for photo mode:







You can select music from the music list stored in the USB device to be played back in photo mode.

- 1 From the photo Single View or Slide Show mode, press  to enter the **Quick Menu**.
- 2 Press  or  to select **Background Music Select** and then press . The available music list will appear.
- 3 Press  or  to select your desired music and then press  to play the music.
- 4 Press  repeatedly to return to the previous photo mode with the selected music on.

   Note: The music will be played back in accordance with the repeat setting set in the music Quick Menu ( Page 55).






Listening to MP3 files

Besides viewing JPEG files, you can also listen to the music files stored in the USB device.

- 1 From **Media Player** menu, press  or  to select **Music** and then press .
- 2 When the list appears, press  or  to select a file or folder.
- 3 Press  to begin playing the selected music file or to open the selected folder.

To use the remote control button in music playback:



 

 

You can use the remote control buttons listed below to control the music playback.

Button	Description
	Begins music playback.
	Stops music playback.
	Pauses music playback.
	Skips to play next music file.
	Skips to play previous music file.

Note: If no button on the remote control or TV control panel is pressed for 60 seconds after starting music playback, the TV will enter screen saver mode. Press any button but **POWER** to return to music list mode.

To use the music Quick Menu:

You can select your preferred music playback settings from the music **Quick Menu**.

- 1 From the music list or music playback mode, press  to enter the **Quick Menu**.
- Note:** *The Quick Menu items of music list and music playback modes are different.*
- 2 Press  or  to select the item you want to adjust.
- 3 Press  or  to select your preferred setting.
- 4 Press  to return to the previous menu or music mode.

Item	Description
Sort*	To set the file sorting preference in music list. <ul style="list-style-type: none"> • Title: to sort the files by file name. • New: to sort the files from new to old by file date. • Old: to sort the files from old to new by file date.
Repeat	To set preferred music repeat mode. <ul style="list-style-type: none"> • 1: to repeat the current playing music file. • All: to repeat all the music files in the folder where the current playing file is. • Off: to disable music repeat.
Audio Settings**	To adjust the audio quality (Bass/Treble/Balance).
Sleep Timer**	To set the sleep timer to turn off the Media Player, as well as the TV (up to 180 minutes in 10-minute increments).
Speaker**	To select the audio output preference. <ul style="list-style-type: none"> • TV Speakers: to output the music from the TV's built-in speakers. • Audio Receiver: to output the music from a connected amplifier (if available).

Note:

- *The sleep timer setting in the Media Player Quick Menu or TV Setup Menu will override the previous setting of each other.*

- *If Enable REGZA-LINK in the REGZA-LINK Setup menu is set to Off or no amplifier is detected, the Speaker item will be grayed out.*

* This Quick Menu item is only available for access from the music list.

** This Quick Menu item is only available for access from music playback mode.

Disc playback

This section shows you the basics on how to play a disc.

Basic playback (DVD/VCD/CD)*

- 1 Press **POWER** on the TV control panel or on the remote control.
The Power LED on the front of the TV changes to green. It may take approximately 10 seconds for a picture to appear on-screen. When using an amplifier, switch on the amplifier.
- 2 Press **TW/DVD** on the remote control to switch to DVD mode.
The DVD start-up screen will appear on-screen.



- 3 Hold the disc by its edges and load it in the disc slot with the label side facing forward. The prompt "Insert Disc" changes to "Reading" and then playback starts.

Note: *DO NOT touch the surface of the disc. This may leave a smudge that can cause playback errors.*

If the disc has its own menu, it will be displayed on-screen. Press **▲ ▼ ◀ ▶** or **▶** on the remote control to navigate the disc menu, then press **ENTER** to implement the selected menu option.

To adjust playback volume:

Press **[MUTE]** **[VOL.]**.

To temporarily suspend disc playback (still mode):

Press **PAUSE** **[⏸]**.

To continue playback from still mode:

Press **PLAY** **[▶]**.

To stop playback:

Press **STOP** **[⏹]**.

Playback resume function:

Your TV/DVD supports playback resume function. If you stopped the disc playback before it is completed, the TV/DVD records the stop point. **▶** appears on-screen. Press **PLAY** to resume playback on the stop point. If you press **STOP** twice in quick succession or unload the disc, the TV/DVD will clear the stop point.

Higher quality picture:

High resolution pictures on some discs may occasionally cause noise on the picture display. If this is the case, reduce the **Sharpness** setting under the **Picture Settings** menu (see Page 38).

Note:

- *Keep your fingers well clear of the disc slot when a disc is loading or unloading. Failure to do so may cause serious personal injury.*
- *Do not move the TV during playback. Doing so may damage the disc.*
- *When a disc is inserted when the TV is not in DVD mode, the TV will automatically switch to DVD mode.*


* This indicates the kind of disc that can employ the function described under that heading.

DVD : You can use this function with DVDs.


VCD : You can use this function with Video CDs.

CD : You can use this function with Audio CDs and CD-R/RW discs.

Removing a disc

- 1 Press **EJECT**  on the TV control panel or on the remote control.
- 2 Wait for the disc to be ejected and then remove the disc from the slot.


Disc playback reminders

 
- If the TV/DVD does not operate properly, static electricity build-up may be the cause. Turn off the TV/DVD, then disconnect the power cord from the AC outlet. Reconnect the power cord, then press **POWER**  to turn on the TV/DVD again.
- If an incompatible disc is loaded, one of the following error messages appears on-screen: “Incorrect Disc”, “Disc region incorrect” or “Enter Password”. If this is the case, check your disc again. Go to Page 8 for a list of supported disc formats, and to Page 76 for playback-related troubleshooting instructions.
- In some instances the TV/DVD may take a minute or so to start disc playback.
- When you load a disc with the playback side facing backward, “Reading” appears on-screen but it will be replaced by “Incorrect Disc”. Eject the disc and load it again making sure the playback side is now facing forward.
- The playback resume function may not work on some discs.
- Some DVDs may have fixed playback operations designed by the DVD manufacturer. Your TV/DVD follows this fixed playback design. In such cases, some playback features may not be available. You may refer to the instructions accompanying the DVD.
- Do not put any objects other than compatible discs on the disc slot. Doing so may cause damage to the TV/DVD.
- There may be a few seconds between the action of pressing a button and the function it activates.

Playback navigation

Playing in fast reverse or fast forward direction (DVD/VCD/CD)

- 1 Press **REV**  or **FF**  during playback.

REV  : Fast reverse playback

FF  : Fast forward playback

Each time you press **REV**  or **FF** , the playback speed changes.


To resume normal playback:


Press **PLAY** .

Note:

- The sound is muted during reverse and forward scan.
- The playback speed may differ depending on the disc.
- You can use fast reverse/fast forward playback for MP3, and WMA CDs.

Playing frame by frame (DVD/VCD)

- 1 Press **PAUSE**  during playback.

Each time you press **PAUSE** , the picture advances one frame.

 
 
To resume normal playback:


Press **PLAY** .


Note:

- The sound is muted during frame by frame playback.

Playing in slow motion (DVD/VCD)

- 1 Press **SLOW**  or **SLOW**  during playback.

SLOW  : Slow reverse playback

SLOW  : Slow forward playback

Each time you press **SLOW**  or **SLOW** , the slow motion speed changes.


 
To resume normal playback:


Press **PLAY** .


Note:

 
- The sound is muted during slow motion playback.

Locating a chapter or track (DVD/VCD/CD)

- 1 Press **SKIP**  or **SKIP**  repeatedly to display the chapter or track number you want to play.

SKIP : To locate succeeding chapters or tracks. Playback starts from the beginning of the selected chapter or track.


SKIP : Playback starts from the beginning of the current chapter or track.

When you press **SKIP**  twice in quick succession, playback starts from the beginning of the preceding chapter or track.



Chapter 9: Advanced disc playback


Zoom function/Scene navigation


You can change the viewing scale of a picture by using the Zoom function. Once the image has been rescaled, use the arrow buttons ▲ ▼ ◀ ▶ to pan the image.

Scene navigation options differ depending on the kind of disc. DVDs use the title, chapter or record time to locate the start point for playback. Audio CDs and Video CDs use the record time or track number. To view the discs title/track or chapter/track list, press .

Using Zoom (DVD/VCD)

- 1 Press  during playback.
The view will zoom into the center of the image. Each press of  will increase the scale value: **Q 1** ($\times 1.3$), **Q 2** ($\times 1.5$) and **Q 3** ($\times 2.0$).

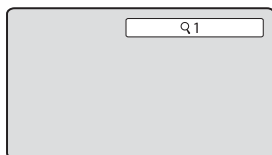


- 2 Press ▲ ▼ ◀ ▶ to pan the scene and view different sections of the picture.
- 3 To return to normal view, in Zoom mode, press  repeatedly until **Q Off** appears.

Note:

- You can use the Pause, Slow and Search playback functions in Zoom mode.
- Zoom function may not apply to some discs.

Locating a specific scene (DVD/VCD/CD)

- 1 Press  during playback, still or stop mode.


Jump	
Title	---
Chapter	---
Time	-- : -- : --


- 2 Press ▲ or ▼ to select a navigation option.

Jump	
Title	---
Chapter	---
Time	-- : -- : --


- 3 Use the Channel Number buttons (0-9) to key in a value for the navigation option you selected.

Jump	
Title	---
Chapter	12
Time	-- : -- : --

If you input a wrong number, press . Refer to the disc package to check the correct number.

- 4 Press  to start playback.

Note:

- When you use title navigation, playback starts from the first chapter of the selected title.
- For audio CDs and Video CDs, you can locate a scene by track number or record time.
- For PBC-enabled VCDs, turn off the PBC function first before using the Jump function ( Page 64).
- Scene navigation may not apply to some discs.

Scene bookmark

Scene bookmarks refer to specific points in the playback range that have been marked for later access. You can create up to three markers per disc.

 
Note: *The saved scene bookmarks are only accessible during the current session. Once you eject the disc or turn off the TV/DVD, all bookmarks will be cleared.*

Bookmarking a scene (DVD/VCD/CD)

- During playback, press **MARKER** at the scene where you would like to place the bookmark.



- Press **▲** or **▼** to select a blank marker, then press **ENTER** to bookmark the selected scene.




- Press **MARKER** to close the Bookmark window.
- To save two more bookmarks, repeat steps 1-3.

Note:

- In some cases, subtitles for the marked scene may not display.
- Bookmarking a scene may not apply to some discs.

Viewing a scene bookmark (DVD/VCD/CD)

 - Press **MARKER** during playback mode.
- Press **▲** or **▼** to select the saved marker.



- Press **ENTER** to start playback on the scene saved in the selected bookmark.

To delete a scene bookmark:

Perform steps 1 and 2 above, then press **EXIT/CANCEL**.

Repeat playback/A-B repeat

You can choose to repeat DVD playback by title or chapter. For audio CDs and Video CDs, you can repeat a single track or the entire disc.

The A-B repeat function lets you repeat a specific section between two set points. This section will be played repeatedly until you turn off the A-B repeat mode.

Enabling repeat playback (DVD/VCD)

 
- Press **PLAY MODE** during playback or stop mode.
- [DVD]
Press **ENTER** repeatedly to select a repeat mode. It can either be by **Chapter** or by **Title**.
The TV/DVD automatically starts repeat playback after finishing the current title or chapter.



[VCD]

- Press **▼** to select **Repeat**, then press **ENTER** repeatedly to select a repeat mode. It can either be **Single** or **All**.

The TV/DVD automatically starts repeat playback after finishing the current track.



Note: *If you set the repeat mode during stop mode, press **PLAY** to start Repeat playback.*

- Press **PLAY MODE** again to close the Play Mode window.


To resume normal playback:

Select **Off** in step 2 above.


Note:

 
- The Repeat mode is canceled when **SKIP** **◀◀** or **SKIP** **▶▶** is pressed.
- The Repeat playback function may not apply to some discs.

Enabling A-B repeat mode (DVD/VCD/CD)

- 1 During playback, press  at the point where you would like the playback loop to begin. This sets your “A” point.



- 2 When the playback reaches the point where you would like the playback loop to stop, press  again. This sets your “B” point.



The section between points A and B will be played repeatedly in a loop until you turn off the Repeat A-B mode.

To resume normal playback:

Press  until  Off appears on-screen.

Note:

- In some cases, subtitles for the repeated scene may not display.
- The A-B repeat mode may not apply to some DVD scenes.
- The A-B repeat mode is not applicable to interactive DVDs and JPEG CDs.

Programmed playback/Random playback



 

You can program the playback sequence of tracks on a Video CD. Or you can set the TV/DVD to play tracks at random.


For procedures applicable to audio/MP3/WMA/JPEG, go to Page 65.






Note:

 
- The programmed and random playback modes are not applicable to PBC-enabled Video CDs.
- The programmed and random playback modes are only applicable during the current session. Once you eject the disc or turn off the TV/DVD, these modes will be disabled.


Programming the playback sequence (VCD)

- 1 Press  in stop mode.
- 2 Press  or  to select **Mode**, then press  repeatedly to select **Program**.



 - 3 Press  or  to go to the right column. Press  or  to select the playback position, then use the Channel Number buttons (0-9) to input the track for that position. To program other tracks, repeat this step. If you input a wrong number, press .



- 4 Press ◀ or ▶ to return to the left column, then press ▲ or ▼ to select **Program Playback** and press .




Track playback will follow the sequence you set in step 3.


To resume normal playback:

In step 2, set **Mode** to **Normal**.

To change the program:

1. Set **Mode** to **Program**.
2. Press ▲ or ▼ to select the playback position you want to change the track input for, then press .
3. Use the Channel Number buttons (0-9) to input the new track for the selected position.



To remove a track from the programmed list:

 
1. Set **Mode** to **Program**.
2. Press ▲ or ▼ to select the playback position, then press .


To clear all the programs:

On the left column, press ▲ or ▼ to select **Clear Program**, then press .

Enabling random playback (VCD)

- 1 Press  in stop mode.
- 2 Press ▲ or ▼ to select **Mode**, then press  repeatedly to select **Shuffle**.



- 3 Press  to start random playback.

Note: If you set random playback during playback mode, random playback will begin after the current track finished playing.



To resume normal playback:

In step 2, set **Mode** to **Normal**.

Scene angle/Title selection/DVD menu

Changing the scene angle (DVD)




When playing back a DVD recorded with multi-angle scenes, you can select the scene angle that you prefer.

- 1 Press  during playback.
- 2 Press  repeatedly until the preferred scene angle is displayed.

Note: Depending on the DVD, you may not be able to change the scene angle even if multi-angle data are recorded on the disc.

Selecting a DVD title (DVD)

Some DVDs contain two or more titles. If this is the case, you can select a particular title for playback.





 
- 1 Press  during playback to display the title menu.
- 2 Press ▲ ▼ ◀ ▶ to select the preferred title.
- 3 Press  or  to start playback.


Note:

- Title selection may not apply to some DVDs.
- The title menu may simply be referred to a "menu" or "title" in the instructions supplied with the DVD.

DVD menu (DVD)

Some DVDs have an encoded menu that allows users to select a specific disc content, enable a particular DVD feature (e.g. subtitle or soundtrack language), or choose a particular title (for multi-title DVDs).

- 1 Press  during playback.
- 2 Press ▲ ▼ ◀ ▶ to select a DVD menu item, then press  or  to access it. Use the same keys to enable an option for the selected item. Repeat this step to configure other menu options.
- 3 Press  again to resume playback on the scene that was playing when you pressed .

Note: Depending on the DVD, you may not be able to resume playback from the same scene that was playing when you pressed .

Soundtrack language/Audio channel/Subtitle

Selecting a soundtrack language (DVD)

You can select the soundtrack language when you play a multilingual DVD.

During playback, press **AUDIO SELECT** repeatedly until the preferred language track is selected.

Selecting the audio channel (VCD)

During playback, press **AUDIO SELECT** repeatedly until the preferred audio channel is heard. Options include **Stereo**, **Left**, **Right**, and **Mix**.

Note:

- If the preferred language option is not heard after selecting it for several times, that language is not recorded on the disc.
- The soundtrack language selected is only applicable for the current session. When you stop playback and try to play the disc again, the default language track will be used.
- If you select the **DTS** option in DVDs with DTS feature, no sound will be heard from the TV/DVD's speakers. You need to connect an amplifier equipped with a DTS decoder to the Optical digital audio out jack.

Viewing subtitles (DVD)

When playing back a disc recorded with subtitles, you can select the subtitle language or turn the subtitle off.

To view subtitles:

Press **SUBTITLE** repeatedly during playback until the preferred language is selected.

The Subtitle prompt will disappear after a few seconds.

To disable subtitles:

Press **SUBTITLE** until **Off** appears.

Note:



- Not all DVDs have encoded subtitles.
- The subtitle selection may revert to the default language when you stop playback and try to play the DVD again.
- In some cases, the selected subtitle may not display immediately.

Playback information/VCD playback control


Viewing the playback info (DVD/VCD)

Press **DISPLAY** during playback.

DVD mode

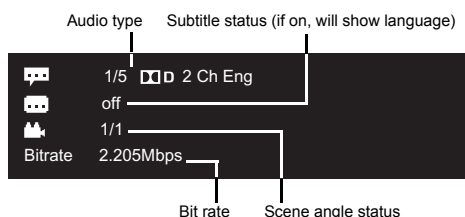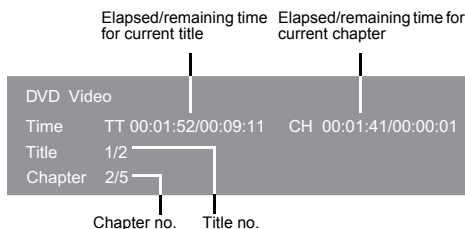

VCD mode

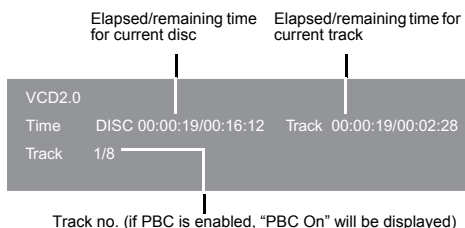


To close the information display:

Press **DISPLAY**.

Note: Depending on the disc, this operation may not be available.

Turning off the PBC function (VCD)

 - 1 Press **PLAY MODE** in stop mode.
- 2 Press **▲** or **▼** to select **Mode**, then press **ENTER** repeatedly until **Normal** appears.



- 3 Press **PLAY** to close the screen.

To turn on the PBC function:

Follow steps 1 and 2 above, then press **ENTER** repeatedly until **PBC** appears.

When enabled, PBC allows interactive Video CD playback using the remote control.

MP3, WMA, JPEG, and Audio CD operation

This TV/DVD can play MP3, WMA, and JPEG files recorded on a CD-R or CD-RW disc. To create the MP3/ WMA/ JPEG disc, you need a Windows PC with a CD-RW drive and file encoding software. You must use a Windows PC to create the MP3/WMA/JPEG disc.

This TV/DVD requires discs/recordings that meet certain technical standards in order to achieve optimal playback quality. There are many different types of recordable disc formats (including CD-R discs containing MP3 or WMA files). Not all recordable discs will produce optimal playback quality. The technical criteria set forth in this owner's manual are meant only as a guide. Use of CD-RW discs for recording MP3 files is not recommended.

You must obtain any required permission from copyright owners to download or use copyrighted content. *Toshiba can not and does not grant such permission.*

MP3/WMA/JPEG/Audio CD information (CD)

MP3/WMA/JPEG CD playback reminders

- Make sure the file name of the MP3, WMA, and JPEG files in the CD includes the 3-character file extension ("mp3", "wma", ".jpg", ".div", and ".avi") to make it compliant with the ISO 9660 standard.
- This TV/DVD can read 2000 files per disc. If a disc has more than 2000 files, it reads the first 2000 files, while the remaining files will be omitted.
- To play the files in sequence based on the recorded order:
 - Use an encoding software that records data alphabetically or numerically.
 - Include a two- or three-digit number prefix on the file name (ex. "01" "02" or "001" "002").
 - Refrain from making too many sub-folders.
- It may take more than one minute for this TV/DVD to read MP3, WMA, and JPEG files depending on the disc structure.
- Audio files recorded using the Joliet Recording Specification can be played back in this TV/DVD. The file name is displayed (up to 15 characters). Longer file names will be condensed.
- Music recorded based on the "Joliet Recording Specification" can be played back, the file name is displayed (within 15 letters) on the screen. Long file names will be condensed.
- This TV/DVD does not support data disc burned using the Apple Mac OS (Hierarchical File System, HFS format).
- MP3/WMA/JPEG CDs cannot be used for recording purpose.

File name display reminders

- The maximum number of characters for file name display is 15.
- Only the following characters will be displayed: A through Z (both upper and lower case), 0 through 9, and the underscore symbol (_).
- Non-supported characters will be replaced with a hyphen (-).

MP3/WMA/JPEG CD limitations

- Depending on the recording conditions, some MP3/WMA/JPEG CDs cannot be played back in your TV/DVD.
- Only MP3, WMA, and JPEG files recorded in the CD-R/RW disc will be played. Other files will not be read nor displayed.


MP3/WMA file encoding information

- MP3
 - File format: MPEG-1 Audio
 - Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz
 - Bit rate: 32 to 320 kbps (constant bit rate or variable bit rate)
 - The recommended recording setting for high-quality sound is 44.1 kHz sampling frequency and 128 kbps constant bit rate.
- WMA
 - File format: WMA version 7 or 8
 - Sampling frequency: 32 kHz / 48 kbps, 44.1 kHz / 48 to 92 kbps, 48 kHz / 128 to 192 kbps
 - A file recorded in mono (48 kHz / 48 kbps) is not supported by this TV/DVD.

Microsoft, Windows Media, and Windows Logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

About the file browser (CD)

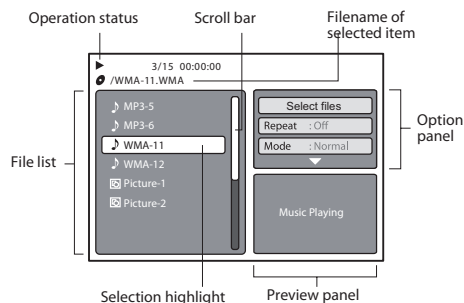

File icons

- Music file (MP3/WMA/Audio CD track)
- Picture file (JPEG)

If a CD contains a mixture of MP3, WMA and JPEG files, and is pressed without selecting a file, playback automatically begins starting from the first file in the list.

Setting the file type listing

You can choose the type of files listed in the file browser.

- 1 Press to move the selection highlight to the Option panel.
- 2 Press or to highlight **Select files**, then press .
- 3 Press or to select a file type from the list — **Audio** or **Photo**.
- 4 Press to add or remove the check mark next to each file type. Checked file type will be displayed in the file browser.
- 5 Press twice to move the selection highlight back to the file list.

Viewing image files in thumbnail mode

You can change the browser's view mode from list mode to thumbnail mode. This is convenient when browsing for JPEG files.

- 1 Press .
- 2 Press to select an image file.

To return the browser to list mode:


Press .

To view the previous or next thumbnail page:


Press **SKIP** or **SKIP** .

Playing an audio file (CD)

- 1 Load an MP3/WMA/Audio CD in the disc slot.
The file browser appears on-screen. It may automatically play by composition of an audio file.

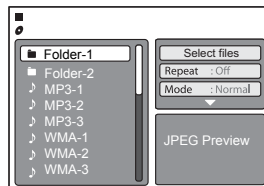

- 2 Press or to select another audio file for playback.

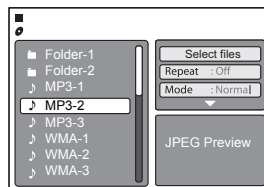

- 3 Press or to start playback.

To stop playback:

Press .


The TV/DVD records the stop point. "" appears on-screen. Press to resume playback. If you press twice in quick succession or unload the disc, the TV/DVD will clear the stop point.

Note:

- If the current directory has more than eight files, press or to scroll the file list.
- To see folder contents, select a folder and then press .
- To return to the root directory, press or select "Go Up..." then press .
- In thumbnail mode, press repeatedly to change the thumbnail size.
- The Repeat and Random/Programmed playback modes can be enabled during MP3 or WMA playback. Refer to Page 68.

Viewing a JPEG file (CD)

- 1 Load a disc containing JPEG files in the disc slot.
The file browser appears on-screen.
- 2 Press **▲** or **▼** to select an image file for view.
A preview of the selected file is displayed in the Preview panel.

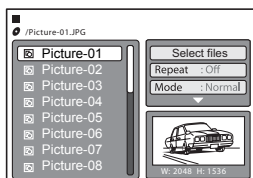

- 3 Press **ENTER** or **PLAY**.
The selected image is displayed in full-screen mode.



Press **SKIP** **◀◀** or **SKIP** **▶▶** to view the previous or next image file in the current directory.

To rotate an image:

Press **ANGLE** repeatedly until the preferred angle is obtained. The image angle is adjusted in 90° increments.

The current angle setting is shown on-screen: **90°**, **180°**, **270°**, or **No rotation**.

To magnify an image:

Press **INPUT ZOOM** repeatedly until the image is displayed in the preferred scale.

The current zoom setting is indicated by the following icons: **Q1** (× 1.3), **Q2** (× 1.5) and **Q3** (× 2.0).


To return to normal view:

Press **INPUT ZOOM** repeatedly until **Q Off** appears.

Viewing a slide show (CD)

If there are multiple JPEG files in the selected directory, you can view them in a slide show. For instructions on how to enable the slide show feature and set the interval period between pictures, go to Page 72.

- 1 Open the file folder containing the JPEG files you want to include in the slide show.
- 2 Press **▲** or **▼** to select the file you want to be the starting image for the slide show.
A preview of the selected file is displayed in the Preview panel.

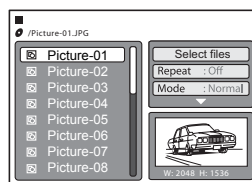

- 3 Press **ENTER** or **PLAY**.
The selected image is displayed in full-screen mode.
When the slide show is completed, the file browser appears.

To view the previous or next image in the slide show:

Press **SKIP** **◀◀** or **SKIP** **▶▶**.

To temporarily stop the slide show:

Press **PAUSE**. "||" appears briefly on-screen. Press **PLAY** or **SKIP** **▶▶** to resume the slide show.

To stop the slide show:


 
Press **STOP**. The file browser appears.

Note:



- The Rotate and Zoom modes are available in regular JPEG viewing and slide show modes.
- The Jump and A-B repeat modes are not available when viewing JPEG images.
- During a slide show, the interval time between images may increase if the file size is too big.
- When an image exceeds 5760 x 3840 pixels, the image display can appear cropped. This applies when viewing the image in the Preview panel of the file browser; or when in the thumbnail, full-screen, or slide show modes.

MP3, WMA, JPEG and Audio CD playback modes


You can choose to repeat CD playback by track or the entire disc. You can also program the file playback sequence or set the TV/DVD to play files at random.

 
Note: These playback modes are only applicable during the current session. Once you eject the disc or turn off the TV/DVD, these modes will be disabled. Pressing **SKIP**  or **SKIP**  during playback will also cancel these modes.


Enabling repeat playback (CD)

- During stop mode, in the Option panel of the file browser, press  or  to select **Repeat**.



- Press  repeatedly to select a repeat mode, **Track** or **All**.

 



 
- Press . The TV/DVD automatically starts repeat playback after finishing the current track.


To resume normal playback:

 
Select **Off** in step 2 above.


Enabling random playback (CD)

- During stop mode, in the Option panel of the file browser, press  or  to select **Mode**.



- Press  repeatedly to set mode to **Shuffle**.



- Press . The TV/DVD automatically applies the shuffle mode.

To resume normal playback:

Select **Normal** in step 2 above.


Note: When the **Music Intro** mode is enabled, the first 10 seconds of an audio track is played. This is useful if you are simply looking for a particular track in a list.

Programming the playback sequence (CD)

- 1 In the Option panel of the file browser, press **▲** or **▼** to select **Edit Mode**, then press **(ENTER)**.




- 2 Press **◀** to return to the file list and press **▲** or **▼** to select a file, then press **(ENTER)** to mark it for inclusion in the programmed playlist. A check mark will appear next to the file.

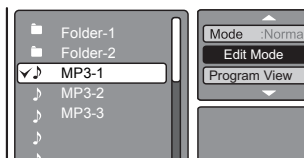


Repeat this step to mark any other files you want to add in the programmed playlist.


- 3 In the Option panel, press **▲** or **▼** to select **Add To Program**, then press **(ENTER)** to add the marked files in the programmed playlist.

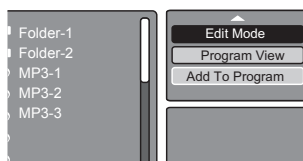

- 4 Press **▲** or **▼** to select **Edit Mode**, then press **(ENTER)** to disable it.

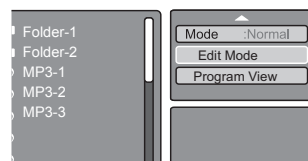


- 5 Press **▲** or **▼** to select **Program View**, then press **(ENTER)**.

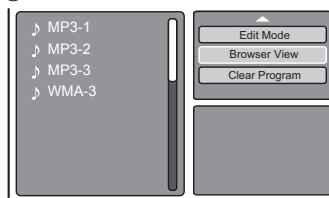


Program View

In Program view, only the files you added in step 3 are displayed.

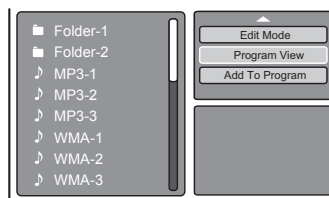

Browser View

- 6 In the programmed file list, press **▲** or **▼** to select a file, then press **(PLAY)** to start playback.

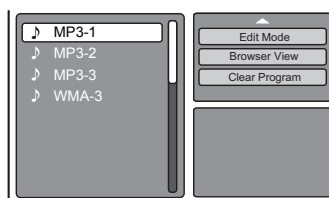


To remove a file from the programmed list:


1. Press **(STOP)** twice to stop playback.
2. In Program view, press **▲ ▼ ◀ ▶** to select **Edit Mode** on the Option panel, then press **(ENTER)** to enable it.
3. Press **◀** to go to the programmed list.
4. Press **▲ ▼ ◀ ▶** to select the file you want to remove, then press **(ENTER)**.
5. Repeat step 4 to mark any other files you want to remove from the list.
6. Press **▶** to go to the Option panel.
7. Press **▲** or **▼** to select **Clear Program**, then press **(ENTER)**.




Customizing disc playback


You can customize the disc playback settings to suit your preferences.


 

 


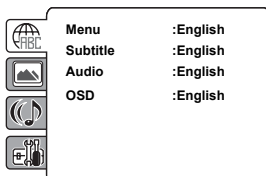



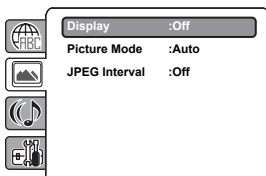

Configuring the disc playback settings (DVD/VCD/CD)

- 1 In DVD mode, press  during stop mode.




 


- 2 Press  or  to select a setup tab, then press . The first setup option is highlighted.



- 3 Press  or  to select the setup option you want to customize.
- 4 Press  or  to display a list of available option settings.
- 5 Press  or  to select an option setting, then press  to apply and save it.
Go to Page 71-74 for list of description for each option setting.
- 6 To configure another option on the same setup tab, repeat steps 3–5.
To configure an option on another tab, press , then use  or  to select a setup tab.
Repeat steps 3–5 to configure the preferred option.
- 7 To close the Setup screen, press  or .

Disc playback setup

Tab	Option	Description	Go to page
	Menu	Select the language for the DVD menu display.	72
	Subtitle	Select the subtitle language for disc playback.	
	Audio	Select the audio language for disc playback.	
	OSD	Select the language for the Setup screen display.	
	Display	Choose whether to show a status display whenever a button is pressed.	72
	Picture Mode	Select the DVD source content.	
	JPEG Interval	Select the interval time between images in a slide show.	
	Night Mode	Toggle the night mode on or off.	73
	Digital Out	Select the format for the digital audio output corresponding to your audio connection.	
	Parental	Set the restriction level for allowable disc content.	73
	Password	Change the access password for the parental control setting.	74

Note: These setup settings are retained in the TV/DVD's memory. It remains active even if the power is turned off.



	Menu	:English
	Subtitle	:English
	Audio	:English
	OSD	:English

■ Menu / ■ OSD

Select the language for the DVD and Setup menu display. Options include: English, French, and Spanish.

■ Subtitle / ■ Audio

Select the language for the subtitle display and audio track output during disc playback.

English	The selected language will be heard or seen.
French	
Spanish	
Auto (Subtitle)	The TV/DVD will display the subtitle in the disc's default language.
Off (Subtitle)	There will be no subtitle display.

Note: If the selected language is not available, the default disc language will be used.



	Display	:On
	Picture Mode	:Auto
	JPEG Interval	:Off

■ Display

Choose whether to show a status display whenever a button is pressed.

Off	There will be no on-screen display.
On	There will be on-screen display when any button is pressed.

■ Picture Mode

The source content of a DVD can either be recorded in: film format (images are recorded at 24 frames per second) or video format (images are recorded at 30 frames per second).

Auto	The TV/DVD automatically detects the type of source content and converts that signal in an appropriate method based on the current aspect ratio of the TV/DVD. This option will normally suit most DVDs.
Film	Suitable for playback of DVDs recorded in a film format.
Video	Suitable for playback of DVDs recorded in a video format.

Note: If picture appears cut off or doubled, select the "Video" setting.

■ JPEG Interval

Select the interval time between images during a JPEG slide show.

Off	Slide show option is disabled.
5, 10, or 15 seconds	Images will be displayed in a slide show using the selected interval time.



Night Mode :Off
Digital Out :Bitstream

■ Night Mode

Select to toggle the Night Mode feature on or off. When enabled, this function allows for automatic volume level adjustment for audio that may be too low (e.g. whispered dialogues) or too high (e.g. a thunderstorm scene).

Off Audio retains its disc recording volume level.

On Volume level is automatically adjusted depending on the scene content.

Note: The Night Mode feature is only applicable to Dolby Digital-featured DVDs. The adjusted sound level depends on the DVD encoding.

■ Digital Out

Select the sound format of the digital output depending on the enabled signal connection.

Off Disables digital sound output. Select this option when there's no equipment connected to the optical DIGITAL AUDIO OUT jack.

PCM Changes Dolby Digital output to PCM. Select this option when using a two-channel digital stereo amplifier.

Bitstream Select this option to output the signal in its native format.

Note: MPEG audio will always be in PCM format regardless of the Digital Output setting.



Parental :Off
Password :Change

■ Parental

A DVD is usually encoded with a rating level to indicate the recommended audience age. You have the option to select the content rating level allowed for playback in your TV/DVD.

You will be prompted to key in the system password to access this settings option. Press ▲ or ▼ to select the allowable rating level, then press .

Off No playback restriction. All discs can be played regardless of content rating.

Level 1–5 Discs of varied non-adult ratings will be played back. The higher the number, the more severe the content is.

Level 6–8 Discs of varied adult only ratings will be played back.

Note:

- The Parental rating levels correspond to the US movie ratings.

Level 1 – Kids Safe Level 5 – PG–R


Level 2 – G Level 6 – R

Level 3 – PG Level 7 – NC–17

Level 4 – PG–13 Level 8 – Adult

- Some discs may not have their rating level encoded on the disc though it's indicated on the disc jacket. Playback restriction will not apply to these discs so make sure to restrict access to it manually.

 



To temporarily cancel the parental restriction:

- 1) Load the restricted content DVD that you want to play.
- 2) Use the **Channel Number buttons (0–9)** to input the system password after the “Enter Password” message, then press .


This suspension of the parental restriction setting applies until disc is ejected.

■ Password

Select this option to change the access password for the parental control setting.


- 1) Press  or  to select **Password**, then press .
- 2) Use the **Channel Number buttons (0–9)** to input the current password, then press .

If the password has not been set yet key in “0000”. This is the factory default password.

- 3) Use the **Channel Number buttons (0–9)** to input the new password, then press .

You will be prompted to confirm the new password.

- 4) Use the **Channel Number buttons (0–9)** to input the new password again, then press .

- 5) Press  one last time to confirm the changed password. Note this new password for future reference.

If you forget the system password:

- 1) Make sure there is no disc in the disc slot.
- 2) Press and hold down “4” on the remote control, then press **VOLUME-** on the TV control panel.

The “Initializing” message appears on-screen to indicate that the password has been reset to its default factory setting “0000”. All DVD Setup-related settings will also be reset to their default factory values.

General troubleshooting

Before calling a service technician, please check this chapter for a possible cause of the problem and some solutions you can try.

Black box on-screen

- The closed caption feature is set to one of the Text modes (T1, T2, T3, or T4). Set the closed caption feature to Off (ⓘ Page 39).

TV stops responding to controls

- If the TV stops responding to the controls on the remote control or TV control panel and you cannot turn off the TV, press and hold **POWER** on the TV control panel for 5 or more seconds to reset the TV.
- If you cause a static discharge when touching the TV and the TV fails to function, simply unplug the TV from the AC outlet and plug it back in. The TV should return to normal operation.

Other problems


- If your TV's problem is not addressed in this Troubleshooting section or the recommended solution has not worked, use the Reset Factory Defaults procedure (ⓘ Page 32).

TV will not turn on



- Make sure the power cord is plugged in, and then press **POWER**.
- The remote control batteries may be dead. Replace the batteries or try the control panel buttons.

Picture problems

General picture problems

- Check the antenna/cable connections (ⓘ Chapter 2).
- Press  on the remote control or the TV and select a valid video input source (ⓘ Page 33). If no device is connected to a particular input on the TV, no picture will display when you select that particular input source. For device connection details, see Chapter 2.
- Antenna reception may be poor. Use a highly directional outdoor antenna (if applicable).
- The station may have broadcast difficulties. Try another channel.
- Adjust the picture qualities (ⓘ Page 38).

Video Input Selection problems

- If the **Input Selection** window does not appear when you press  on the remote control or the TV control panel, press  a second time, which will change to the next video input source and display the **Input Selection** window.

Cannot view external signals or channel 3 or 4

- If you cannot view signals from external devices connected to **Video**, **ColorStream HD**, **HDMI 1**, **HDMI 2**, **PC** or from channels 3 or 4, make sure the **Input Lock** is set to **Off** (ⓘ Page 45).

Noisy picture

- If you are watching an analog channel (off-air broadcast or Cable TV), you can set the **CableClear**® feature to reduce visible interference in the TV picture (ⓘ Page 51).

Poor color or no color

- The station may have broadcast difficulties. Try another channel.
- Adjust the **Tint** and/or **Color** (ⓘ Page 38).

Poor composite picture

- If the TV is connected to an external A/V device (e.g., DVD player, video game system, set-top box, etc.) try using a **ColorStream** or **HDMI** video connection instead.

Picture and sound are out of sync

- As with all products that contain a digital display, in rare instances, when viewing certain content (e.g. television broadcasts, video games, DVDs), you may notice that the sound and picture are slightly out of sync. This phenomenon can be caused by various factors including, without limitation, video processing within the TV, video processing in an attached gaming system, and video processing or different compression rates used by broadcasters in their programming. You may want to try one or more of the following suggestions, which may help to reduce the effect of this phenomenon:
 - If the TV is connected to an A/V receiver that has a programmable audio delay feature, use this feature to help synchronize the sound to the picture.
 - If you notice this phenomenon only on certain TV channels, please contact your local broadcast, cable, or satellite provider to inform them of this issue.

Sound problems

- Check the antenna/cable connections (ⓘ Chapter 2).
- The station may have broadcast difficulties. Try another channel.
- The sound may be muted. Press **VOLUME**.
- If you hear no sound, try setting the **MTS** feature to **Stereo** mode (ⓘ Page 41).
- If you are not receiving a second audio program from a known SAP source, make sure the **MTS** feature is set to **SAP** mode (ⓘ Page 41).
- If you hear audio that seems incorrect for the program you are watching (such as music or a foreign language), the SAP mode may be on. Set the **MTS** feature to **Stereo** mode (ⓘ Page 41).
- If you connect a PC using either the **PC IN** terminal or an **HDMI** terminal, make sure that the **PC Audio** setting is properly set (ⓘ Page 46).

Remote control problems

- Remove all obstructions between the remote control and the TV.
- The remote control batteries may be dead. Replace the batteries (ⓘ Page 24).

- If the TV still does not act as expected, use the Reset Factory Defaults procedure (ⓘ Page 32).


Channel tuning problems

- The channel may be blocked by the **Channel Options** feature. Unblock the channel (ⓘ Page 30).
- If you are unable to tune digital channels, check the antenna configuration (ⓘ Page 28). If you are still unable to tune digital channels, use the Reset Factory Defaults procedure (ⓘ Page 32). Also see "TV stops responding to controls" and "Other problems" (ⓘ Page 75).


Closed caption problems

- If the program or video you selected is not closed captioned, no captions will display (ⓘ Page 39).
- If text is not available, a black rectangle may appear. If this happens, turn off the closed caption feature (ⓘ Page 39).
- A closed-caption signal may not display correctly in the following situations: a) when a videotape has been dubbed; b) when the signal reception is weak; or c) when the signal reception is non-standard (ⓘ Page 39).

Rating blocking (V-Chip) problems


- If you forget your PIN code: While the PIN code entering screen is displayed, press  4 times within 5 seconds. The PIN code you previously stored will be cleared (ⓘ Page 42).
- The V-Chip feature is available for the U.S. V-Chip system only (ⓘ Page 43).

No REGZA-LINK® operation

- The REGZA-LINK® feature is available for Toshiba REGZA-LINK® compatible devices.
- Make sure the HDMI cables with the HDMI Logo () are used.
- When the connected REGZA-LINK® device does not work correctly after you have changed settings of the device, turn off your TV and unplug the power cord, and then plug and turn on again.
- If several devices are connected, REGZA-LINK® feature may not operate properly.
- Read the instruction manual furnished with the connected REGZA-LINK® device.

HDMI problems

For HDMI cables

- Make sure to use cables with the HDMI Logo () (ⓘ Page 17).

For Legacy HDMI source

- Some legacy HDMI sources may not work properly with the latest HDMI TV products, due to new standard adoption.

Media Player problems

- Make sure that devices are connected correctly.
- If you connect a USB device with separate cable or through USB hub, the TV does not recognize the USB device.

Disc playback problems

Playback does not start

- No disc is loaded.
- The disc may be dirty. Clean the disc.
- The disc format is not supported (ⓘ Page 8).

No picture

- The TV is not in DVD mode.

No sound

- The TV is in the special playback mode (ⓘ Page 57).
- If an external speaker is connected, check its volume control.

Picture distortion during fast reverse/forward playback

- The picture will be distorted occasionally. This is normal.

Playback features failure

- The playback features such as stopping, searching, slow motion play, repeat play or programmed play, etc are not applicable to all discs.


Playback does not start when the title is selected

- The disc may not be compliant with the "Parental" setting (ⓘ Page 73).

The audio soundtrack and/or subtitle language cannot be changed

- The disc has no multilanguage option encoded on it (ⓘ Page 63).

No subtitle

- The disc has no subtitle encoded on it.
- Subtitles are disabled. Press  (ⓘ Page 63).

Scene angle cannot be changed

- The disc has no multiangle scenes (ⓘ Page 62).

"X" appears on the screen

- The function is not applicable to the disc or to the current mode (ⓘ Page 7).

LED Indication

The Power LED light on the TV front indicates the TV's status, as described below.

LED Indication

Power LED

- **Green is ON (solid)**
The TV is operating properly.
- **Red is ON (solid)**
The TV is in Standby mode.

If, after trying the solutions, the problem still exists:

In the U.S., call TACP Consumer Solutions at 1-800- 631-3811.

Specifications

Note:

- *These models comply with the specifications listed below.*
- *Designs and specifications are subject to change without notice.*
- *These models may not be compatible with features and/or specifications that may be added in the future.*

Television System

NTSC standard
ATSC standard (8VSB)
Digital Cable (64 QAM, 256 QAM; in-the-clear, unencrypted)

Channel Coverage

VHF: 2 through 13
UHF: 14 through 69
Cable TV: 1-135 (4A, A5~A-1)
A~I, J~W
W+1~W+94

Power Source: 120 V AC, 60 Hz

Power Maximum Current

15CV100U/101U: 0.6 A
19CV100U: 0.7 A
22CV100U: 1.0 A
26CV100U: 1.3 A
32CV100U: 1.8 A

Power Consumption (in standby mode)

15CV100U/101U: 0.8 W
19CV100U: 0.8 W
22CV100U: 0.8 W
26CV100U: 0.8 W
32CV100U: 0.8 W

Audio Power

15CV100U/101U: 3W + 3W
19CV100U: 3W + 3W
22CV100U: 3W + 3W
26CV100U: 5W + 5W
32CV100U: 10W + 10W

Speaker Type:

15CV100U/101U: 70 x 30 x 26 mm
19CV100U: 70 x 30 x 26 mm
22CV100U: 70 x 30 x 26 mm
26CV100U: 167 x 45 x 37 mm
32CV100U: 167 x 45 x 37 mm

Video/Audio Terminals

VIDEO/AUDIO INPUT:

VIDEO: 1 V(p-p), 75 ohm, negative sync.
AUDIO: 500 mV(rms) (30% modulation equivalent, 47 k ohm or greater)

ColorStream® (component video) HD INPUT:

VIDEO:Y: 1 V(p-p), 75 ohm, negative sync.
Pr: 0.7 V(p-p), 75 ohm
Pb: 0.7 V(p-p), 75 ohm
Suggested formats: 1080i, 720p, 480p, 480i

AUDIO: 500 mV(rms), 47 k ohm or greater

HDMI™ INPUT:

HDMI compliant
HDCP compliant
Audio Lip Sync supported
HDMI Audio: 2-channel Linear-PCM; 32/44.1/48 kHz sampling frequency; 16/20/24 bits per sample

DIGITAL AUDIO OUTPUT: Optical type

PC INPUT: 15-Pin D-sub Analog RGB

DVD/CD player

Signal system: NTSC
Supported disc size: 12 cm, 8 cm
Pickup mechanism: 1-lens, 2-beams

Dimensions (including foot stand)

15CV100U/101U:	Width: 15.9 inches (403.1 mm)
	Height: 12.6 inches (320.7 mm)
	Depth: 5.6 inches (140.9 mm)
19CV100U:	Width: 18.9 inches (480.9 mm)
	Height: 14.4 inches (365.8 mm)
	Depth: 8.5 inches (215.0 mm)
22CV100U:	Width: 21.7 inches (552.3 mm)
	Height: 15.9 inches (404.5 mm)
	Depth: 8.5 inches (215.0 mm)
26CV100U:	Width: 26.2 inches (666.0 mm)
	Height: 19.3 inches (490.0 mm)
	Depth: 10.2 inches (260.0 mm)
32CV100U:	Width: 31.7 inches (804.6 mm)
	Height: 23.2 inches (590.0 mm)
	Depth: 10.0 inches (255.0 mm)

Mass (Weight)

15CV100U/101U: 7.5 lbs (3.4 kg)
19CV100U: 11.7 lbs (5.3 kg)
22CV100U: 13.0 lbs (5.9 kg)
26CV100U: 19.4 lbs (8.8 kg)
32CV100U: 26.0 lbs (11.8 kg)

Operation Conditions

Temperature: 32°F - 95°F (0°C - 35°C)
Humidity: 20 - 80% (no moisture condensation)

Supplied Accessories

- Remote control with two size AAA batteries
- AC power cord
- Owner's manual (this book)
- Cleaning cloth (to clean the cabinet and control panel)

Acceptable signal formats for PC IN and HDMI terminals

PC IN signal formats

Note: Depending on the connected PC, the following status may occur; incorrect display, false format detection, picture position failure, blur, or judder. But this is not a malfunction of your TV.

Format	Resolution	V.Frequency	H. Frequency	Pixel Clock Frequency
VGA	640 x 480	59.940Hz	31.469kHz	25.175MHz
SVGA	800 x 600	60.317Hz	37.879kHz	40.000MHz
XGA	1024 x 768	60.004Hz	48.363kHz	65.000MHz
WXGA	1280 x 720	60.000Hz	45.000kHz	74.250MHz
	1280 x 768	59.870Hz	47.776kHz	79.500MHz
	1360 x 768	60.015Hz	47.712kHz	85.500MHz

HDMI formats

Format	Resolution	V.Frequency	H. Frequency	Pixel Clock Frequency
VGA	640 x 480	59.940Hz	31.469kHz	25.175MHz
SVGA	800 x 600	60.317Hz	37.879kHz	40.000MHz
XGA	1024 x 768	60.004Hz	48.363kHz	65.000MHz
WXGA	1280 x 720	60.000Hz	45.000kHz	74.250MHz
	1280 x 768	59.870Hz	47.776kHz	79.500MHz
	1360 x 768	60.015Hz	47.712kHz	85.500MHz
480i	720 x 480i	59.940Hz	15.734kHz	27.000MHz
480p	720 x 480p	59.940Hz	31.469kHz	27.000MHz
720p	1280 x 720p	60.000Hz	45.000kHz	74.250MHz
1080i	1920 x 1080i	60.000Hz	33.750kHz	74.250MHz
1080p	1920 x 1080p	24.000Hz	27.000kHz	74.250MHz
1080p	1920 x 1080p	30.000Hz	33.750kHz	74.250MHz
1080p	1920 x 1080p	60.000Hz	67.500kHz	148.500MHz

- Some illustrations in this owner's manual are for explanation purposes and may differ from the actual unit.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.

Limited United States Warranty LCD TV/DVD Combination – Depot Repair Warranty

Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States.

THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS LCD TV/DVD COMBINATION AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

LCD TV/DVD COMBINATIONS PURCHASED IN THE U.S.A. AND USED ANYWHERE OUTSIDE OF THE U.S.A., INCLUDING, WITHOUT LIMITATION, CANADA AND MEXICO, ARE NOT COVERED BY THESE WARRANTIES.

LCD TV/DVD COMBINATIONS PURCHASED ANYWHERE OUTSIDE OF THE U.S.A., INCLUDING, WITHOUT LIMITATION, CANADA AND MEXICO, AND USED IN THE U.S.A., ARE NOT COVERED BY THESE WARRANTIES.

Limited One (1) Year Warranty on Parts and Labor

TACP warrants this LCD TV/DVD Combination and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. DURING THIS PERIOD, TACP WILL, AT TACP'S OPTION, REPAIR OR REPLACE A DEFECTIVE PART WITH A NEW OR REFURBISHED PART WITHOUT CHARGE TO YOU.

Rental Units

The warranty for LCD TV/DVD Combination rental units begins on the date of the first rental or thirty (30) days after the date of shipment to the rental firm, whichever comes first.

Commercial Units

LCD TV/DVD Combinations sold and used for commercial purposes have a limited warranty for all parts and labor, which warranty begins on the date of original retail purchase and ends on the date that is ninety (90) days thereafter.

Owner's Manual and Product Registration Card

Read this owner's manual thoroughly before operating this LCD TV/DVD Combination.

Complete and mail the enclosed product registration card or register your LCD TV/DVD Combination online at www.tacp.toshiba.com/service as soon as possible. By registering your LCD TV/DVD Combination you will enable TACP to bring you new products specifically designed to meet your needs and help us to contact you in the unlikely event a safety notification is required under the U.S. Consumer Product Safety Act. Failure to complete and return the product registration card does not diminish your warranty rights.

Your Responsibility

THE ABOVE WARRANTIES ARE SUBJECT TO THE FOLLOWING CONDITIONS:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this LCD TV/DVD Combination must be made by the Depot Warranty Repair Center specified by the TACP Consumer Solutions Center.
- (3) The warranties from TACP are effective only if the LCD TV/DVD Combination is purchased and operated in the Continental U.S.A. or Puerto Rico.
- (4) Labor service charges for set installation, setup, adjustment of customer controls, and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above, and do not extend to any LCD TV/DVD Combination or parts that have been lost or discarded by you or to damage to the LCD TV/DVD Combination or parts caused by fires, misuse, accident, Acts of God (such as lightning or fluctuations in electric power), improper installation, improper maintenance, or use in violation of instructions furnished by TACP; use or malfunction through simultaneous use of this LCD TV/DVD Combination and connected equipment; or to units that have been modified or had the serial number removed, altered, defaced, or rendered illegible.

How to Obtain Warranty Services

If, after following all of the operating instructions in this manual and checking the section "Troubleshooting," you find that service is needed:

- (1) For instructions on how to obtain warranty service for your LCD TV/DVD Combination, contact TACP's Consumer Solution Center toll free at 1-800-631-3811.
- (2) You must include a copy or original bill of sale or other proof of purchase along with the entire LCD TV/DVD Combination to the Depot Warranty Repair Center specified by the TACP Consumer Solutions Center. You are responsible for all inbound transportation and insurance charges for the LCD TV/DVD Combination to the Depot Warranty Repair Center specified by the TACP Consumer Solutions Center.

For additional information, visit TACP's website:

www.tacp.toshiba.com

ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A. AS HEREBY LIMITED, THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS, AND SIMILAR OBLIGATIONS OF TACP WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PARTS. IN NO EVENT SHALL TACP BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, BUSINESS INTERRUPTION, OR MODIFICATION OR ERASURE OF RECORDED DATA CAUSED BY USE, MISUSE OR INABILITY TO USE THIS LCD TV/DVD COMBINATION).

No person, agent, distributor, dealer, or company is authorized to change, modify, or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP arising under the warranty or under any statute or law of the United States or any state thereof is hereby limited to ninety (90) days from the date you discover, or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE IN THE U.S.A. SOME STATES OF THE U.S.A. DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, WHEN AN ACTION MAY BE BROUGHT, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE PROVISIONS MAY NOT APPLY TO YOU UNDER SUCH CIRCUMSTANCES.

A copy of the GPL source code in this product may be obtained by contacting Toshiba Consumer Solutions at (800) 631-3811. There will be a charge to cover the costs of providing the source code.

A copy of the LGPL source code in this product may be obtained by contacting Toshiba Consumer Solutions at (800) 631-3811. There will be a charge to cover the costs of providing the source code.

Portions of this software are copyright © <2007> The FreeType Project (www.freetype.org). All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

MPEG Layer-3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimedia.

The GNU General Public License (GPL)

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder

saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying,

distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property rights claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

One line to give the program's name and a brief idea of what it does.

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even

the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

The Libpng License Notices

This copy of the libpng notices is provided for your convenience. In case of any discrepancy between this copy and the notices in the file png.h that is included in the libpng distribution, the latter shall prevail.

COPYRIGHT NOTICE, DISCLAIMER, and LICENSE:

If you modify libpng you may insert additional notices immediately following this sentence.

This code is released under the libpng license.

libpng versions 1.2.6, August 15, 2004, through 1.2.41, December 3, 2009, are Copyright (c) 2004, 2006-2009 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-1.2.5 with the following individual added to the list of Contributing Authors:

Cosmin Truta

libpng versions 1.0.7, July 1, 2000, through 1.2.5 - October 3, 2002, are Copyright (c) 2000-2002 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-1.0.6 with the following individuals added to the list of Contributing Authors:

Simon-Pierre Cadieux

Eric S. Raymond

Gilles Vollant

and with the following additions to the disclaimer:

There is no warranty against interference with your enjoyment of the library or against infringement. There is no warranty that our efforts or the library will fulfill any of your particular purposes or needs. This library is provided with all faults, and the entire risk of satisfactory quality, performance, accuracy, and effort is with the user.

libpng versions 0.97, January 1998, through 1.0.6, March 20, 2000, are Copyright (c) 1998, 1999 Glenn Randers-Pehrson, and are distributed according to the same disclaimer and license as libpng-0.96, with the following individuals added to the list of Contributing Authors:

Tom Lane

Glenn Randers-Pehrson

Willem van Schaik

libpng versions 0.89, June 1996, through 0.96, May 1997, are Copyright (c) 1996, 1997 Andreas Dilger, and are distributed according to the same disclaimer and license as libpng-0.88, with the following individuals added to the list of Contributing Authors:

John Bowler

Kevin Bracey

Sam Bushell

Magnus Holmgren

Greg Roelofs

Tom Tanner

libpng versions 0.5, May 1995, through 0.88, January 1996, are Copyright (c) 1995, 1996 Guy Eric Schalnat, Group 42, Inc.

For the purposes of this copyright and license, "Contributing Authors" is defined as the following set of individuals:

Andreas Dilger

Dave Martindale

Guy Eric Schalnat

Paul Schmidt

Tim Wegner

The PNG Reference Library is supplied "AS IS". The Contributing Authors and Group 42, Inc. disclaim all warranties, expressed or implied, including, without limitation, the warranties of merchantability and of fitness for any purpose. The Contributing Authors and Group 42, Inc. assume no liability for direct, indirect, incidental, special, exemplary, or consequential damages, which may result from the use of the PNG Reference Library, even if advised of the possibility of such damage.

Permission is hereby granted to use, copy, modify, and distribute this source code, or portions hereof, for any purpose, without fee, subject to the following restrictions:

1. The origin of this source code must not be misrepresented.
2. Altered versions must be plainly marked as such and must not be misrepresented as being the original source.
3. This Copyright notice may not be removed or altered from any source or altered source distribution.

The Contributing Authors and Group 42, Inc. specifically permit, without fee, and encourage the use of this source code as a component to supporting the PNG file format in commercial products. If you use this source code in a product, acknowledgment is not required but would be appreciated.

A "png_get_copyright" function is available, for convenient use in "about" boxes and the like:

```
printf("%s",png_get_copyright(NULL));
```

Also, the PNG logo (in PNG format, of course) is supplied in the files "pngbar.png" and "pngbar.jpg" (88x31) and "pngnow.png" (98x31).

Libpng is OSI Certified Open Source Software. OSI Certified Open Source is a certification mark of the Open Source Initiative.

Glenn Randers-Pehrson

glennrp at users.sourceforge.net

December 3, 2009

The zlib License

**zlib.h -- interface of the “zlib” general
purpose compression library**

Version 1.2.3, July 18th, 2005

Copyright (C) 1995-2005 Jean-loup Gailly and Mark
Adler

This software is provided “as-is”, without any express or
implied warranty. In no event will the authors be held
liable for any damages arising from the use of this
software.

Permission is granted to anyone to use this software for
any purpose, including commercial applications, and to
alter it and redistribute it freely, subject to the following
restrictions:

1. The origin of this software must not be
misrepresented; you must not claim that you wrote
the original software. If you use this software in a
product, an acknowledgment in the product
documentation would be appreciated but is not
required.
2. Altered source versions must be plainly marked as
such, and must not be misrepresented as being the
original software.
3. This notice may not be removed or altered from any
source distribution.

Jean-loup Gailly jloup@gzip.org

Mark Adler madler@alumni.caltech.edu

TOSHIBA AMERICA CONSUMER PRODUCTS, L.L.C.

Corporate Headquarters: 82 TOTOWA ROAD, WAYNE, NJ 07470, U.S.A.

NATIONAL SERVICE DIVISION: 1420-B TOSHIBA DRIVE, LEBANON, TN 37087, U.S.A.

CableClear, ColorStream, GameTimer, and TheaterWide are registered trademarks of Toshiba America Consumer Products, L.L.C.

DynaLight is trademark of Toshiba America Consumer Products, L.L.C.

REGZA-LINK is a registered trademark of Toshiba Corporation.

PRINTED IN CHINA

TOSHIBA