

ALTO-SHAAM®

Combitherm® Combination Oven / Steamer



CT EXPRESS™

4•10ESi

4•10ESiVH


4•10CCi

Shown with ExpressTouch control
and optional hand sprayer



• INSTALLATION

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 USA
PHONE: 262.251.3800 • 800.558.8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
WWW.ALTO-SHAAM.COM

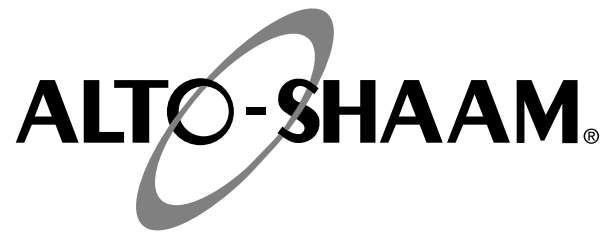

Delivery1
Unpacking1
Safety Procedures and Precautions2

Installation

Site Installation3
Ventilation Requirements3
Positioning on Site4
Lifting Instructions5
Leveling6
Stand Installation6
Accessories7
Stacking Dimensions7
Specifications, 4•10ESi8
Specifications, 4•10ESiVH9
Specifications, 4•10CCi10
Electrical Connection11
Mobile Equipment Restraint13
Water Quality Requirement14
Water Connections15
Hand Held Spray Hose16
Water Drainage17
Ventless Hood Information18
Ventless Hood Filters19
Installation Checklist20

Error Codes21
Wire Diagrams

Always refer to the wire diagram(s) included with the unit for most current version.

Warranty

Original Equipment Limited Warranty26
Transportation Damage and Claims27

ALTO-SHAAM®

DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.

Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to ensure prompt service in the event of a warranty parts and labor claim.


This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

1. Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

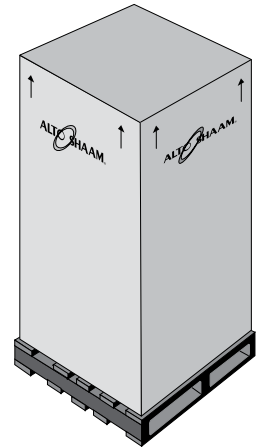

2. Read all instructions in this manual carefully before initiating the installation of this appliance.

DO NOT DISCARD THIS MANUAL.

This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam Tech Team Service Department.*

3. Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

CAUTION



**TO PREVENT PERSONAL INJURY,
USE CAUTION WHEN MOVING OR
LEVELING THIS APPLIANCE.**

THE INFORMATION CONTAINED IN THIS MANUAL IS IMPORTANT FOR THE PROPER INSTALLATION OF THIS OVEN. PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.


IMPROPER CONNECTION OF THIS APPLIANCE WILL NULLIFY ALL WARRANTIES.


LES INFORMATIONS CONTENUES DANS CE MANUEL SONT IMPORTANTES POUR L'INSTALLATION L'UTILISATION ET L'ENTRETIEND DE CE FOUR. S'IL VOUS PLAIT LISEZ-LE TRES ATTENTIVEMENT ET CONSERVEZ-LE.


LA NON-APPLICATION DE CES CONSIGNES ANNULE TOUTES GARANTIES.

SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

DANGER	
	Used to indicate the presence of a hazard that WILL cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored.


WARNING	
	Used to indicate the presence of a hazard that CAN cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored.

CAUTION	
	Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored.

CAUTION	
Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored.	

NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related.
--

1. This appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized or recommended.
2. This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.
3. Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified technical personnel.
4. This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

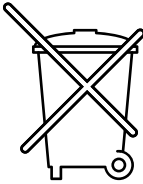NOTE	
	For equipment delivered for use in any location regulated by the following directive: DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE.

CAUTION	
	WHEN WELDING ANY STAINLESS STEEL COMPONENTS ON THIS APPLIANCE, THE ELECTRONIC CONTROL BOARDS MUST BE ISOLATED FROM THE APPLIANCE.

INSTALLATION

SITE INSTALLATION

DANGER



IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH, OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

DANGER



AVERTISSEMENT : UNE INSTALLATION, UN AJUSTEMENT, UNE ALTÉRIATION, UN SERVICE OU UN ENTRETIEN NON CONFORME AUX NORMES PEUT CAUSER DES DOMMAGES À LA PROPRIÉTÉ, DES BLESSURES OU LA MORT.

LIRE ATTENTIVEMENT LES DIRECTIVES D'OPÉRATION ET D'ENTRETIEN AVANT DE FAIRE L'INSTALLATION, OU L'ENTRETIEN DE CET ÉQUIPEMENT.

INSTALLATION CODES & STANDARDS

The following codes and standards are required for installation of this oven: AIR SUPPLY, ELECTRICAL CONNECTIONS, WATER CONNECTIONS, AND WASTE WATER DISCHARGE.

NOTE:

Where automatically operated appliances are vented through a ventilating hood or exhaust system equipped with a damper or with a power means of exhaust, provisions shall be made to allow the equipment to operate only when the damper is open to a position to properly vent the appliance and when the power means of exhaust is in operation.

*IN ACCORDANCE WITH NFPA 54
COMMONWEALTH OF MASSACHUSETTS ONLY.*

VENTILATION REQUIREMENTS

A steam ventilation hood is mandatory for the operation of the oven. The ventilation hood must be installed in accordance with local building codes for the steam exhaust and must protrude 12" - 20" (300mm to 500mm) over the front side of the oven. A grease filter must be located in the protruding area of the hood. Grease filters should be thoroughly cleaned on a regular basis following manufacturer's instruction. Ventilation hoods must ensure an adequate amount of incoming air during operation and must be operated whenever the combination oven/steamer is used in order to avoid the accumulation of condensation in the hood area.

SOUND PRESSURE MEASUREMENT

Microphone Position	Sound Pressure Level dBA	
	With Hood System Operating	Without Hood System Operating
Front	70	59
Right Side	69	58
Left Side	70	60
Rear	69	60



INSTALLATION

SITE INSTALLATION

CAUTION



THE APPLIANCE MUST REMAIN ON THE PALLET WHILE BEING MOVED TO THE INSTALLATION SITE BY FORK LIFT OR PALLET LIFT TRUCK.

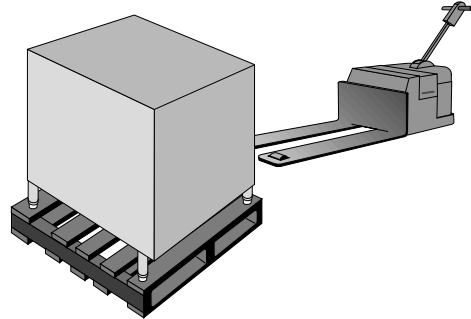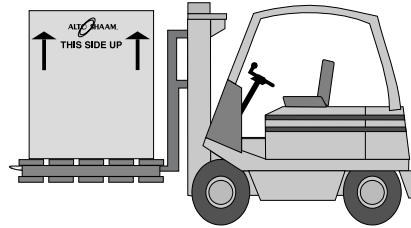

NOTE: Note dimensions required for doorways and aisles for access of the oven and pallet to the installation site. Transport the oven in an upright and level position only. Do not tilt the oven.

NOTE: To avoid equipment damage, observe attention label on oven for area to avoid with lifting fork.

POSITIONING ON SITE

Stand the oven in a level position. Use the adjustable feet to overcome an uneven floor and ensure that the unit is level.

It is strongly recommended that table top models be mounted on a factory supplied stand or a stand that is stable, open, and level. Recommended height is 32-inches (813mm). **Air supply vents are located at the bottom of the oven and must not be blocked when mounted on a stand.**

To insure proper operation, the installation of this oven must be completed by qualified technicians in accordance with the instructions provided in this manual. Failure to follow the instructions provided may result in damage to the oven, building, or cause personal injury to personnel.

DANGER



DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

CAUTION



TO PREVENT PERSONAL INJURY, USE CAUTION WHEN MOVING OR LEVELING THIS APPLIANCE.

MINIMUM CLEARANCE REQUIREMENTS

LEFT SIDE	4" (152mm) MINIMUM 8" (203mm) FROM HEAT OR STEAM PRODUCING EQUIPMENT 18" (457mm) SERVICE ACCESS RECOMMENDED
RIGHT SIDE	4" (102mm)
BACK	4" (102mm) FOR PLUMBING
BOTTOM	4" (102mm) FOR AIR MOVEMENT
TOP	20" (508mm) FOR AIR MOVEMENT

NOTE: Additional clearance is needed for service access. A minimum distance of 18" (457mm) is strongly recommended. If adequate service clearance is not provided, it will be necessary to disconnect the water and drain to move the oven with a fork lift for service access. Charges in connection with inadequate service access is not covered under warranty.

INSTALLATION

LIFTING INSTRUCTIONS


Remove banding before lifting.
Lift the unit from either side of the unit, **NEVER FROM THE FRONT OR BACK.**

Adjust the forks so that they do not damage any of the components under the unit.
Air intake vents are located in front of the legs and must not be damaged.

The left and right fork should be located between the front and back legs and located as close to the legs as possible.

Lift the unit high enough to remove the wooden pallet. Have a second person hold the unit to prevent unit from shifting.

When moving the unit, drive slowly, keep it low to the ground, and use extreme caution.

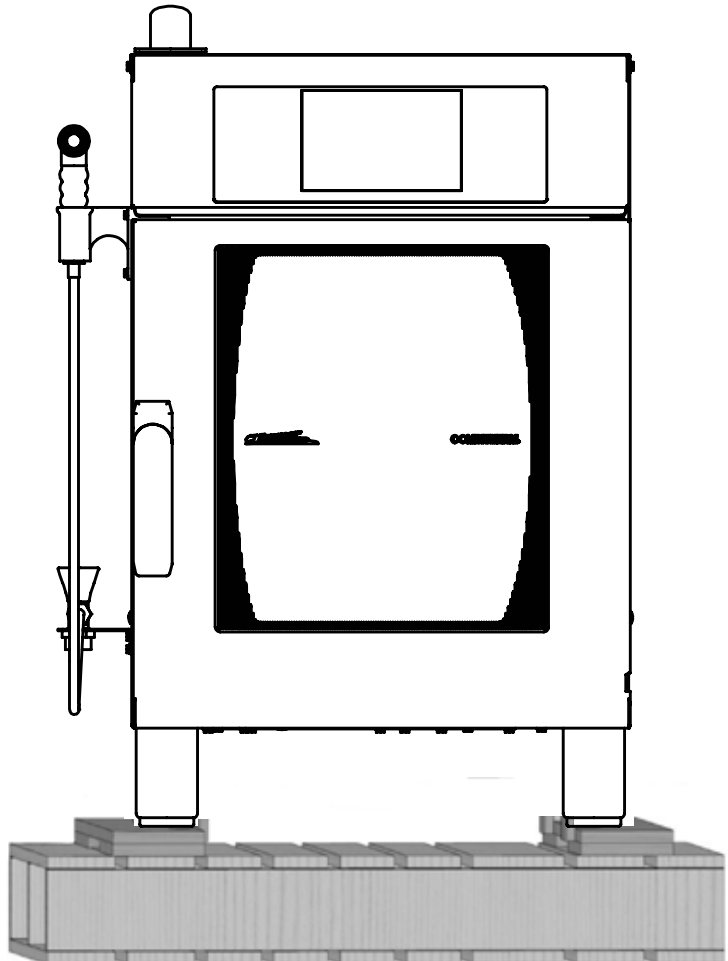

CAUTION



TO PREVENT PERSONAL INJURY,
USE CAUTION WHEN MOVING OR
LEVELING THIS APPLIANCE.

INSTALLATION

SITE INSTALLATION


POSITIONING REQUIREMENTS

- ❑ In order to ensure proper ventilation, a minimum distance of at least 4-inches (101mm) must be kept from the sides of the oven and any adjoining surfaces.

NOTE: Additional clearance is needed for service access. A minimum distance of 18-inches is strongly recommended. If adequate service clearance is not provided, it will be necessary to disconnect the water, and drain to move the oven with a fork lift for service access. Charges in connection with inadequate service access is not covered under warranty.

- ❑ Allow a minimum of 4" (102mm) from the right side of the oven to allow the door to open to at least a 90° angle. Fully opened, the door will extend up to a 225° angle.
- ❑ Allow a minimum clearance of 4" (102mm) from the back of the oven for plumbing connections.
- ❑ Allow a 20" (500mm) clearance at the top of the oven for free air movement and for the steam vent(s) located at the top.
- ❑ Do not install the oven adjacent to heat producing equipment such as fryers, broilers, etc. Heat from such appliances may cause damage to the controls of the Combitherm. Minimum clearance recommended: 20" (500mm)





Place the Combitherm oven on a stable, non-combustible level horizontal surface. For countertop models, the oven stand must be level. Level from front-to-back and side-to-side by means of the adjustable legs. In addition, the overall height of the oven should be positioned so the operating controls and shelves may be conveniently reached from the front.

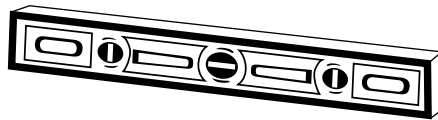

Stand Installation

- 1) Remove legs from the CT Express
- 2) Carefully left and set the CT Express on Stand
- 3) Flush the sides and back of CT Express and Stand
- 4) Secure the CT Express to Stand in four places with Screws and Lock Washers.


The leg stand has adjustable legs for leveling purposes. Stand legs must be bolted to the floor. **Air supply vents are located at the bottom of the oven and must not be blocked when mounted on a stand.**

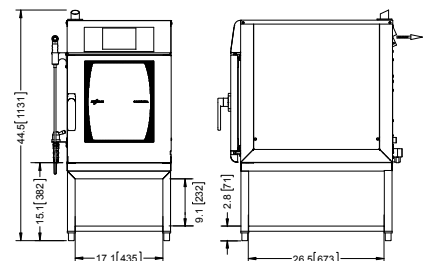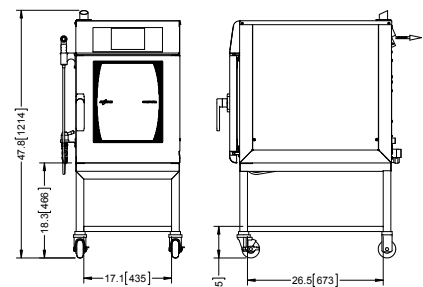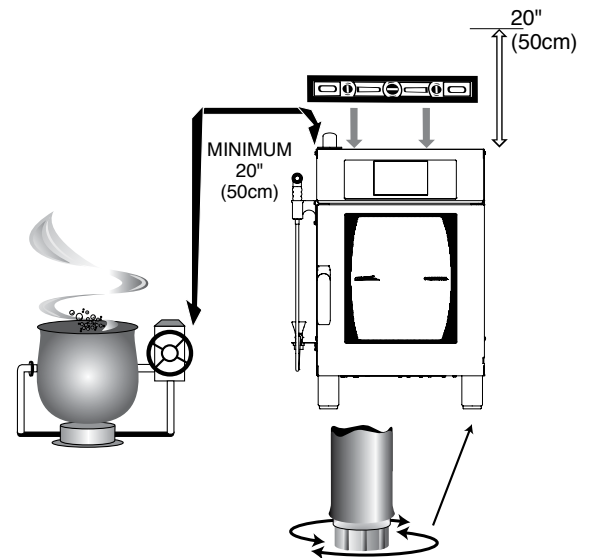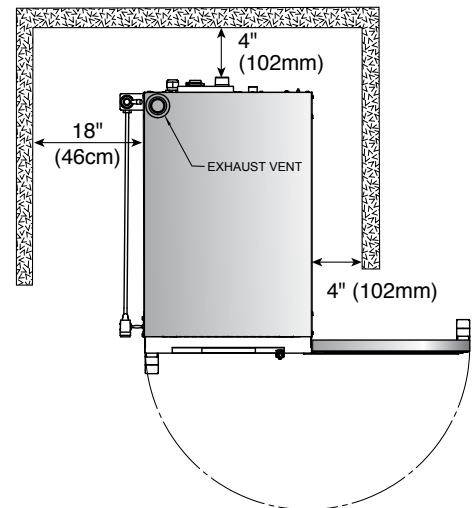

INSTALLATION

ACCESSORIES

<input type="checkbox"/> CombiClean® Tablets — SPECIALLY FORMULATED FOR COMBITHERM OVENS ➔ TWO (2) CONTAINERS/BOX, 90 PACKETS EACH CONTAINER	CE-28892
<input type="checkbox"/> Combitherm Cleaning Liquid — SPECIALLY FORMULATED FOR COMBITHERM OVENS ➔ TWELVE (12) CONTAINERS/CASE, 1 QUART (C. 1 LITER) EACH	CE-24750
<input type="checkbox"/> CombiGuard™ BWS Blended Water System (INCLUDES 50 GALLON TANK, 1 MEMBRANE & 3 FILTERS)	FI-28727
<input type="checkbox"/> CombiGuard™ BWS Replacement Filter Cartridge AMS-QT	FI-29316
<input type="checkbox"/> CombiGuard™ BWS Replacement Filter Cartridge SCLX2-Q	FI-29317
<input type="checkbox"/> CombiGuard™ BWS Replacement Prefilter Filter Cartridge CTO-Q	FI-29318
<input type="checkbox"/> CombiGuard™ 10 Triple-Guard Water Filtration System (FOR EACH OVEN, INCLUDES 1 CARTRIDGE)	FI-23014
<input type="checkbox"/> CombiGuard™ 10 Triple-Guard Replacement Filter (FOR EACH OVEN)	FI-26356
<input type="checkbox"/> CombiGuard™ 20 Triple-Guard Water Filtration System (FOR STACKED UNITS, INCLUDES 1 CARTRIDGE)	FI-28728
<input type="checkbox"/> CombiGuard™ 20 Triple-Guard Replacement Filter (FOR STACKED UNITS)	FI-28744
<input type="checkbox"/> Fry Basket, 12" x 20" (325mm x 530mm)	BS-26730
<input type="checkbox"/> Grilling Grate, 12" x 20" (325mm x 530mm)	SH-26731
<input type="checkbox"/> Poultry Roasting Rack: 6 POULTRY CAPACITY — FITS IN FULL-SIZE PAN	SH-23000
<input type="checkbox"/> Scale Free™ (CITRUS BASED, NON-CORROSIVE DELIMING PRODUCT) CASE = FOUR 4-LB BOTTLES; 4-LB BOTTLE MAKES 10 GALLONS	CE-27889
<input type="checkbox"/> Service Start-Up Check AVAILABLE THROUGH THE ALTO-SHAAM TECH TEAM SERVICE DEPARTMENT	SPECIFY AS REQUIRED
<input type="checkbox"/> Shelf, Stainless Steel Wire	SH-2903
Stacking Kit, 4•10 OVER QC2-3 OR QC2-20 W/O BACKSPLASH	5015781
Stand	
<input type="checkbox"/> STATIONARY WITH SINGLE SHELF, HEIGHT 14-5/8" (371mm)	5014737
<input type="checkbox"/> MOBILE WITH SINGLE SHELF, HEIGHT 18-5/16" (464mm)	5014738
<input type="checkbox"/> STATIONARY WITH DOUBLE SHELF, HEIGHT 35-5/8" (904mm)	5014985
<input type="checkbox"/> STATIONARY WITH SINGLE SHELF TO HOLD 300-TH/III OR 300-S HEIGHT 65-9/16 (1666mm)	5014986
Smoker wood chips bulk pack - 20 lb (9kg)	
<input type="checkbox"/> APPLE	WC-22543
<input type="checkbox"/> CHERRY	WC-22541
<input type="checkbox"/> HICKORY	WC-2829
<input type="checkbox"/> MAPLE	WC-22545

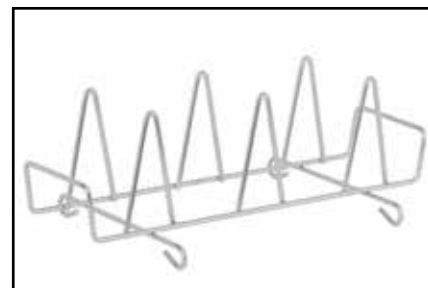


Six (6) Poultry Roasting Rack
(FITS IN FULL-SIZE PAN) SH-23000




Fry Basket BS-26730




Grilling Grate SH-26731

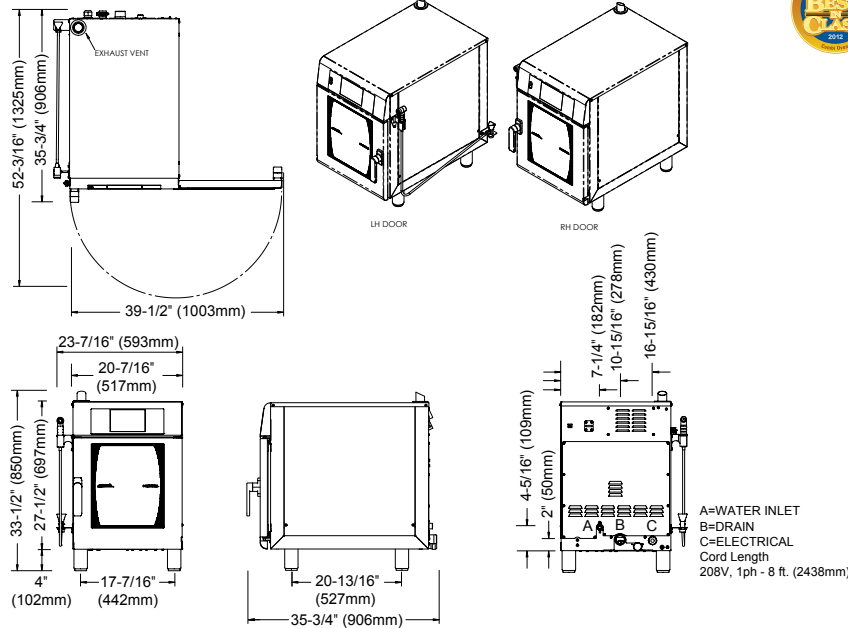



INSTALLATION REQUIREMENTS				DIMENSIONS: H x W x D																				
<ul style="list-style-type: none"> Oven must be installed level. Hood installation is required. Water supply shut off valve and back flow preventer when required by local code. 				EXTERIOR: 33-1/2" x 20-7/16" x 35-3/4" (850mm x 517mm x 906mm)																				
WATER REQUIREMENTS				EXTERIOR WITH OPTIONAL HAND SPRAYER:																				
ONE (1) COLD WATER INLETS - DRINKING QUALITY ONE (1) WATER INLET: 3/4" C* * An additional water supply is required for the optional hand held spray hose. LINE PRESSURE: 30 to 90 psi 2.8 to 6.2 bar WATER DRAIN: 1-1/2" CONNECTION WITH A 2" MINIMUM AIR GAP INSTALLED AS CLOSE TO THE OVEN AS POSSIBLE. MATERIALS MUST WITHSTAND TEMPERATURES UP TO 200°F (93°C).				WATER QUALITY MINIMUM STANDARDS USING A WATER SUPPLY NOT MEETING ALTO-SHAAM'S MINIMUM WATER QUALITY STANDARDS WILL VOID THIS WARRANTY. It is the responsibility of the purchaser to ensure that incoming water supply is compliant with the specifications listed through adequate treatment measures. Installation of the CombiGuard™ Water Filtration System is recommended, but this system may not address all water quality issues present.																				
CLEARANCE REQUIREMENTS				<table border="1"> <thead> <tr> <th>Contaminant</th> <th>Inlet Water Requirements (untreated water)</th> </tr> </thead> <tbody> <tr> <td>Free Chlorine</td> <td>Less than 0.1 ppm (mg/L)</td> </tr> <tr> <td>Hardness</td> <td>Less than 3 gpg (52 ppm)</td> </tr> <tr> <td>Chloride</td> <td>Less than 30 ppm (mg/L)</td> </tr> <tr> <td>pH</td> <td>7.0 to 8.5</td> </tr> <tr> <td>Alkalinity</td> <td>Less than 50 ppm (mg/L)</td> </tr> <tr> <td>Silica</td> <td>Less than 12 ppm (mg/L)</td> </tr> <tr> <td>Total Dissolved Solids (tds)</td> <td>Less than 60 ppm</td> </tr> </tbody> </table>					Contaminant	Inlet Water Requirements (untreated water)	Free Chlorine	Less than 0.1 ppm (mg/L)	Hardness	Less than 3 gpg (52 ppm)	Chloride	Less than 30 ppm (mg/L)	pH	7.0 to 8.5	Alkalinity	Less than 50 ppm (mg/L)	Silica	Less than 12 ppm (mg/L)	Total Dissolved Solids (tds)	Less than 60 ppm
Contaminant	Inlet Water Requirements (untreated water)																							
Free Chlorine	Less than 0.1 ppm (mg/L)																							
Hardness	Less than 3 gpg (52 ppm)																							
Chloride	Less than 30 ppm (mg/L)																							
pH	7.0 to 8.5																							
Alkalinity	Less than 50 ppm (mg/L)																							
Silica	Less than 12 ppm (mg/L)																							
Total Dissolved Solids (tds)	Less than 60 ppm																							
LEFT: 4" (152mm) 8" (203mm) FROM HEAT OR STEAM PRODUCING EQUIPMENT RECOMMENDED SERVICE ACCESS: 18" (457mm) RIGHT: 4" (102mm) TOP: 20" (508mm) FOR AIR MOVEMENT BACK: 4" (102mm) BOTTOM: 4" (102mm) FOR AIR MOVEMENT																								
ELECTRICAL (DEDICATED CIRCUIT REQUIRED)								CombiSmoker®																
MODEL	VOLTAGE	PH	HZ	AMPS	KW	AWG	CORD & PLUG	Additional kW																
4•10esi	208	1	60	22.5	4.68	—	NEMA L6-30P - US ONLY	+ .52 kw																
	240	1	60	25.5	6.12	8	NO CORD OR PLUG	+ .65 kw																
	208 – 240	3	60	15.0 – 18.0	5.4 – 7.48	10	NO CORD OR PLUG	+ .52 kw																
	208 - 240	1	50	22.5 – 25.5	4.68 – 6.12	10	NO CORD OR PLUG	+ .52 kw																
	380 – 415	3	50/60	9.0 – 10.0	6.3 – 7.48	10	NO CORD OR PLUG	+ .52 kw																
WEIGHT				CAPACITY				CombiSmoker®																
NET	180 lbs (82 kg)			FULL-SIZE PANS:	20" x 12" x 2-1/2"	Four (4)		Three (3)																
SHIP	310 lbs (141 kg)			GN 1/1:	530 x 325 x 65mm	Four (4)		Three (3)																
CRATE DIMENSIONS: (L x W x H)				HALF-SIZE SHEET PANS:	18" x 13" x 1"	Eight (8)		Six (6)																
37" x 42" x 45" (940mm x 1067mm x 1143mm)				GN 1/2:	265 x 325 x 65mm	Eight (8)		Six (6)																
				48 lb (22 kg) MAXIMUM																				
				VOLUME MAXIMUM: 30 quarts (38 liters)																				

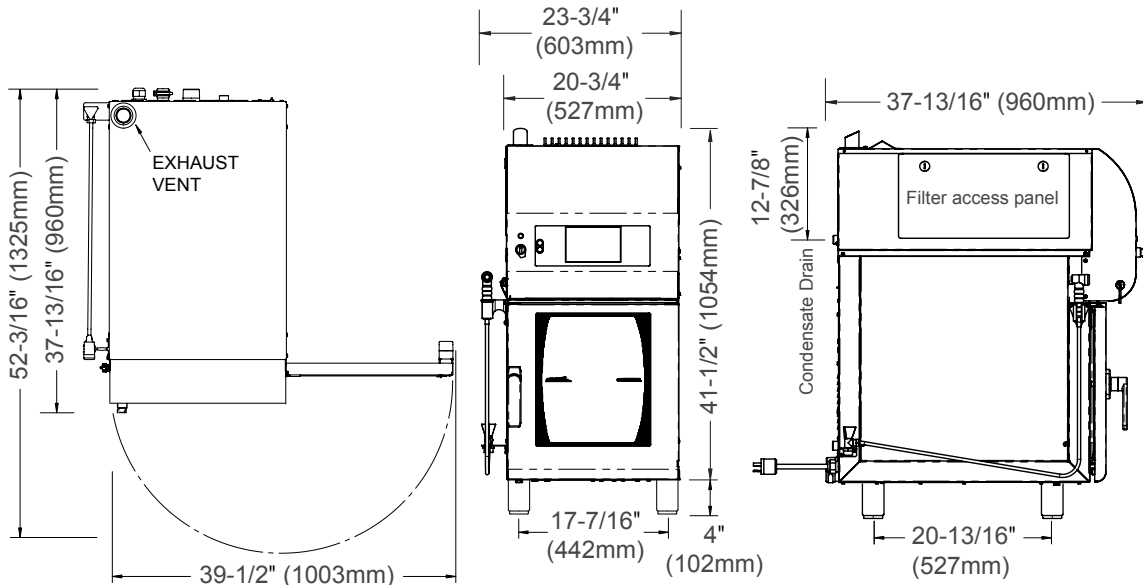

INSTALLATION REQUIREMENTS		DIMENSIONS: H x W x D																					
<ul style="list-style-type: none"> Oven must be installed level. Oven hood condensate drain outlet is 3/4" NPT. Oven water supply shut off valve and back flow preventer when required by local code. 		EXTERIOR: 45-1/2" x 20-3/4" x 37-13/16" (1156mm x 527mm x 960mm)																					
WATER REQUIREMENTS		EXTERIOR WITH OPTIONAL HAND HELD SPRAY HOSE:																					
ONE (1) COLD WATER INLETS - DRINKING QUALITY ONE (1) WATER INLET: 3/4" G* * An additional water supply is required for the optional hand held spray hose. LINE PRESSURE: 30 to 90 psi 2.8 to 6.2 bar WATER DRAIN: 1-1/2" CONNECTION WITH A 2" MINIMUM AIR GAP INSTALLED AS CLOSE TO THE OVEN AS POSSIBLE. MATERIALS MUST WITHSTAND TEMPERATURES UP TO 200°F (93°C).		WATER QUALITY MINIMUM STANDARDS USING A WATER SUPPLY NOT MEETING ALTO-SHAAM'S MINIMUM WATER QUALITY STANDARDS WILL VOID THIS WARRANTY. It is the responsibility of the purchaser to ensure that incoming water supply is compliant with the specifications listed through adequate treatment measures. Installation of the CombiGuard™ Water Filtration System is recommended, but this system may not address all water quality issues present.																					
CLEARANCE REQUIREMENTS		<table border="0"> <tr> <td>Contaminant</td> <td>Inlet Water Requirements (untreated water)</td> </tr> <tr> <td>Free Chlorine</td> <td>Less than 0.1 ppm (mg/L)</td> </tr> <tr> <td>Hardness</td> <td>Less than 3 gpg (52 ppm)</td> </tr> <tr> <td>Chloride</td> <td>Less than 30 ppm (mg/L)</td> </tr> <tr> <td>pH</td> <td>7.0 to 8.5</td> </tr> <tr> <td>Alkalinity</td> <td>Less than 50 ppm (mg/L)</td> </tr> <tr> <td>Silica</td> <td>Less than 12 ppm (mg/L)</td> </tr> <tr> <td>Total Dissolved Solids (tds)</td> <td>Less than 60 ppm</td> </tr> </table>						Contaminant	Inlet Water Requirements (untreated water)	Free Chlorine	Less than 0.1 ppm (mg/L)	Hardness	Less than 3 gpg (52 ppm)	Chloride	Less than 30 ppm (mg/L)	pH	7.0 to 8.5	Alkalinity	Less than 50 ppm (mg/L)	Silica	Less than 12 ppm (mg/L)	Total Dissolved Solids (tds)	Less than 60 ppm
Contaminant	Inlet Water Requirements (untreated water)																						
Free Chlorine	Less than 0.1 ppm (mg/L)																						
Hardness	Less than 3 gpg (52 ppm)																						
Chloride	Less than 30 ppm (mg/L)																						
pH	7.0 to 8.5																						
Alkalinity	Less than 50 ppm (mg/L)																						
Silica	Less than 12 ppm (mg/L)																						
Total Dissolved Solids (tds)	Less than 60 ppm																						
LEFT: 16-1/4" (413mm) FOR HOOD FILTER SERVICE 8" (203mm) FROM HEAT OR STEAM PRODUCING EQUIPMENT OVEN SERVICE ACCESS: 18" (457mm) RIGHT: 4" (102mm) TOP: 20" (508mm) FOR AIR MOVEMENT BACK: 4" (102mm) BOTTOM: 4" (102mm) FOR AIR MOVEMENT																							
ELECTRICAL (DEDICATED CIRCUIT REQUIRED)																							
MODEL	VOLTAGE	PH	HZ	AMPS	kW	AWG	CORD & PLUG																
4•10EsiVH	208	1	60	23.4	4.87	—	⚡ NEMA L6-30P - US ONLY																
	240	1	60	26.3	6.31	8	NO CORD OR PLUG																
	208 - 240	3	60	15.9 - 18.8	5.59 - 7.67	10	NO CORD OR PLUG																
	208 - 240	1	50	23.4 - 26.3	4.87 - 6.31	10	NO CORD OR PLUG																
	380 - 415	3	50/60	9.8 - 10.8	6.49 - 7.67	10	NO CORD OR PLUG																
WEIGHT		CAPACITY																					
NET	260 lbs (118 kg)	FULL-SIZE PANS:		20" x 12" x 2-1/2"	Four (4)																		
SHIP	415 lbs (188 kg)	GN 1/1:		530 x 325 x 65mm	Four (4)																		
CRATE DIMENSIONS: (L x W x H)		GN 1/1:		530 x 325 x 20mm	Eight (8)																		
43" x 31" x 58" (1092mm x 747mm x 1473mm)		HALF-SIZE SHEET PANS:		18" x 13" x 1"	Eight (8)																		
		48 lb (22 kg) MAXIMUM																					
		VOLUME MAXIMUM: 30 quarts (38 liters)																					

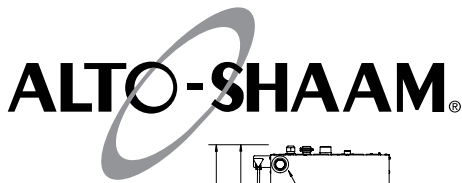

4•10CCi
COMBITHERM
CT Express™

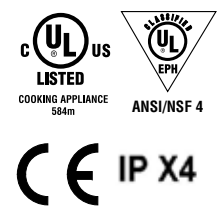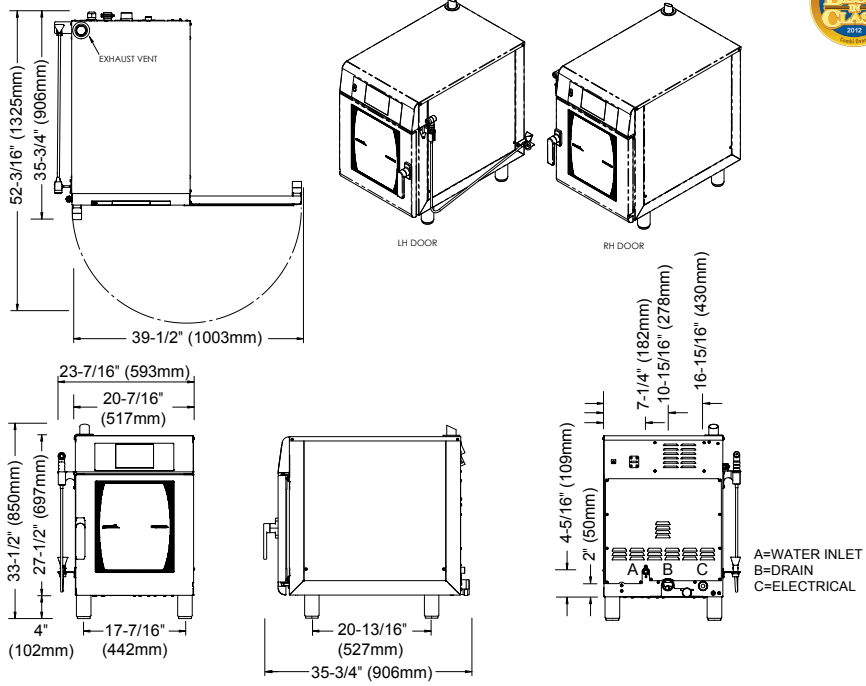

CE CERTIFICATION
 IN PROCESS

INSTALLATION REQUIREMENTS		DIMENSIONS: H x W x D																					
<ul style="list-style-type: none"> Oven must be installed level. Water supply shut off valve and back flow preventer when required by local code. 		EXTERIOR: 33-1/2" x 20-7/16" x 35-3/4" (850mm x 517mm x 906mm)																					
WATER REQUIREMENTS		EXTERIOR WITH OPTIONAL HAND SPRAYER:																					
ONE (1) COLD WATER INLETS - DRINKING QUALITY ONE (1) WATER INLET: 3/4" C* * An additional water supply is required for the optional hand held spray hose. LINE PRESSURE: 30 to 90 psi 2.8 to 6.2 bar WATER DRAIN: 1-1/2" CONNECTION WITH A 2" MINIMUM AIR GAP INSTALLED AS CLOSE TO THE OVEN AS POSSIBLE. MATERIALS MUST WITHSTAND TEMPERATURES UP TO 200°F (93°C).		WATER QUALITY MINIMUM STANDARDS USING A WATER SUPPLY NOT MEETING ALTO-SHAAM'S MINIMUM WATER QUALITY STANDARDS WILL VOID THIS WARRANTY. It is the responsibility of the purchaser to ensure that incoming water supply is compliant with the specifications listed through adequate treatment measures. Installation of the CombiGuard™ Water Filtration System is recommended, but this system may not address all water quality issues present.																					
CLEARANCE REQUIREMENTS		<table border="0"> <tr> <td>Contaminant</td> <td>Inlet Water Requirements (untreated water)</td> </tr> <tr> <td>Free Chlorine</td> <td>Less than 0.1 ppm (mg/L)</td> </tr> <tr> <td>Hardness</td> <td>Less than 3 gpg (52 ppm)</td> </tr> <tr> <td>Chloride</td> <td>Less than 30 ppm (mg/L)</td> </tr> <tr> <td>pH</td> <td>7.0 to 8.5</td> </tr> <tr> <td>Alkalinity</td> <td>Less than 50 ppm (mg/L)</td> </tr> <tr> <td>Silica</td> <td>Less than 12 ppm (mg/L)</td> </tr> <tr> <td>Total Dissolved Solids (tds)</td> <td>Less than 60 ppm</td> </tr> </table>						Contaminant	Inlet Water Requirements (untreated water)	Free Chlorine	Less than 0.1 ppm (mg/L)	Hardness	Less than 3 gpg (52 ppm)	Chloride	Less than 30 ppm (mg/L)	pH	7.0 to 8.5	Alkalinity	Less than 50 ppm (mg/L)	Silica	Less than 12 ppm (mg/L)	Total Dissolved Solids (tds)	Less than 60 ppm
Contaminant	Inlet Water Requirements (untreated water)																						
Free Chlorine	Less than 0.1 ppm (mg/L)																						
Hardness	Less than 3 gpg (52 ppm)																						
Chloride	Less than 30 ppm (mg/L)																						
pH	7.0 to 8.5																						
Alkalinity	Less than 50 ppm (mg/L)																						
Silica	Less than 12 ppm (mg/L)																						
Total Dissolved Solids (tds)	Less than 60 ppm																						
LEFT: 4" (102mm) 8" (203mm) FROM HEAT OR STEAM PRODUCING EQUIPMENT RECOMMENDED SERVICE ACCESS: 18" (457mm) RIGHT: 4" (102mm) TOP: 20" (508mm) FOR AIR MOVEMENT BACK: 4" (102mm) BOTTOM: 4" (102mm) FOR AIR MOVEMENT																							
ELECTRICAL (DEDICATED CIRCUIT REQUIRED)																							
MODEL	VOLTAGE	PH	HZ	AMPS	kW	AWG	CORD & PLUG																
4•10CCi	208	1	60	23.6	4.91	—	NEMA L6-30P - US ONLY																
	240	1	60	26.6	6.38	8	NO CORD OR PLUG																
	208 - 240	3	60	16.1 - 19.1	5.63 - 7.75	10	NO CORD OR PLUG																
	208 - 240	1	50	23.6 - 26.6	4.91 - 6.38	10	NO CORD OR PLUG																
	380 - 415	3	50/60	11.1 - 12.3	6.53 - 7.75	10	NO CORD OR PLUG																
WEIGHT		CAPACITY																					
NET	180 lbs (82 kg)	FULL-SIZE PANS:		20" x 12" x 2-1/2"	Four (4)																		
SHIP	310 lbs (141 kg)	GN 1/1:		530 x 325 x 65mm	Four (4)																		
CRATE DIMENSIONS: (L x W x H) 37" x 42" x 45" (940mm x 1067mm x 1143mm)		HALF-SIZE SHEET PANS:		18" x 13" x 1"	Eight (8)																		
		GN 1/2:		265 x 325 x 65mm	Eight (8)																		
		48 lb (22 kg) MAXIMUM																					
		VOLUME MAXIMUM: 30 quarts (38 liters)																					

INSTALLATION

ELECTRICAL CONNECTION



DANGER



ENSURE POWER SOURCE MATCHES VOLTAGE IDENTIFIED ON APPLIANCE RATING TAG.

DANGER



APPLIANCES WITH NO CORD PROVIDED BY FACTORY MUST BE EQUIPPED WITH A CORD OF SUFFICIENT LENGTH TO PERMIT THE APPLIANCE TO BE MOVED FOR CLEANING.



ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.

Hard wired models:

Hard wired models must be equipped with a country certified external allpole disconnection switch with sufficient contact separation.

If a power cord is used for the connection of the product an oil resistant cord like H05RN or H07RN or equivalent must be used.

1. An electrical wiring diagram is located behind the control panel on the left side of the oven. 3 Phase units must be branch circuit protected with proper ampacities, in accordance with the wiring diagram. A dedicated 30 Amp breaker is required.
2. Wire size for the main incoming power to the unit must match the minimum size listed in the specifications. For supply connections, locate the wire size posted on the label located on the electrical control box cover, behind the service panel.
3. When connecting to a Delta-B (wild leg) on a 3-phase system, the wild leg must be connected to line 3. Install wiring with a strain relief.
4. Before operating the oven, check all cable connections in the electrical connection area for tightness since connections can loosen during transport.

DANGER



To avoid electrical shock, this appliance **MUST** be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.



DANGER



IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH, OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

NOTE: After both water and electrical connections have been completed, operate the oven in any cooking mode for a period of 15 minutes and recheck the main power connections at the terminal block to make certain they remain tight.

380-415V:

For CE approved units: To prevent an electrical shock hazard between the appliance and other appliances or metal parts in close vicinity, an equalization-bonding stud is provided. An equalization bonding lead must be connected to this stud and the other appliances / metal parts to provide sufficient protection against potential difference. The terminal is marked with the following symbol.



INSTALLATION

ELECTRICAL CONNECTION

NOTE: Where local codes and CE regulatory requirements apply, appliances must be connected to an electrical circuit that is protected by an external GFCI type 2 outlet.

When required, recommended ground fault for Combitherm ovens is an appropriately sized breaker with built-in 30mA ground fault protection.



DANGER




ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.

DANGER



To avoid electrical shock, this appliance **MUST** be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.

Top/Back of unit

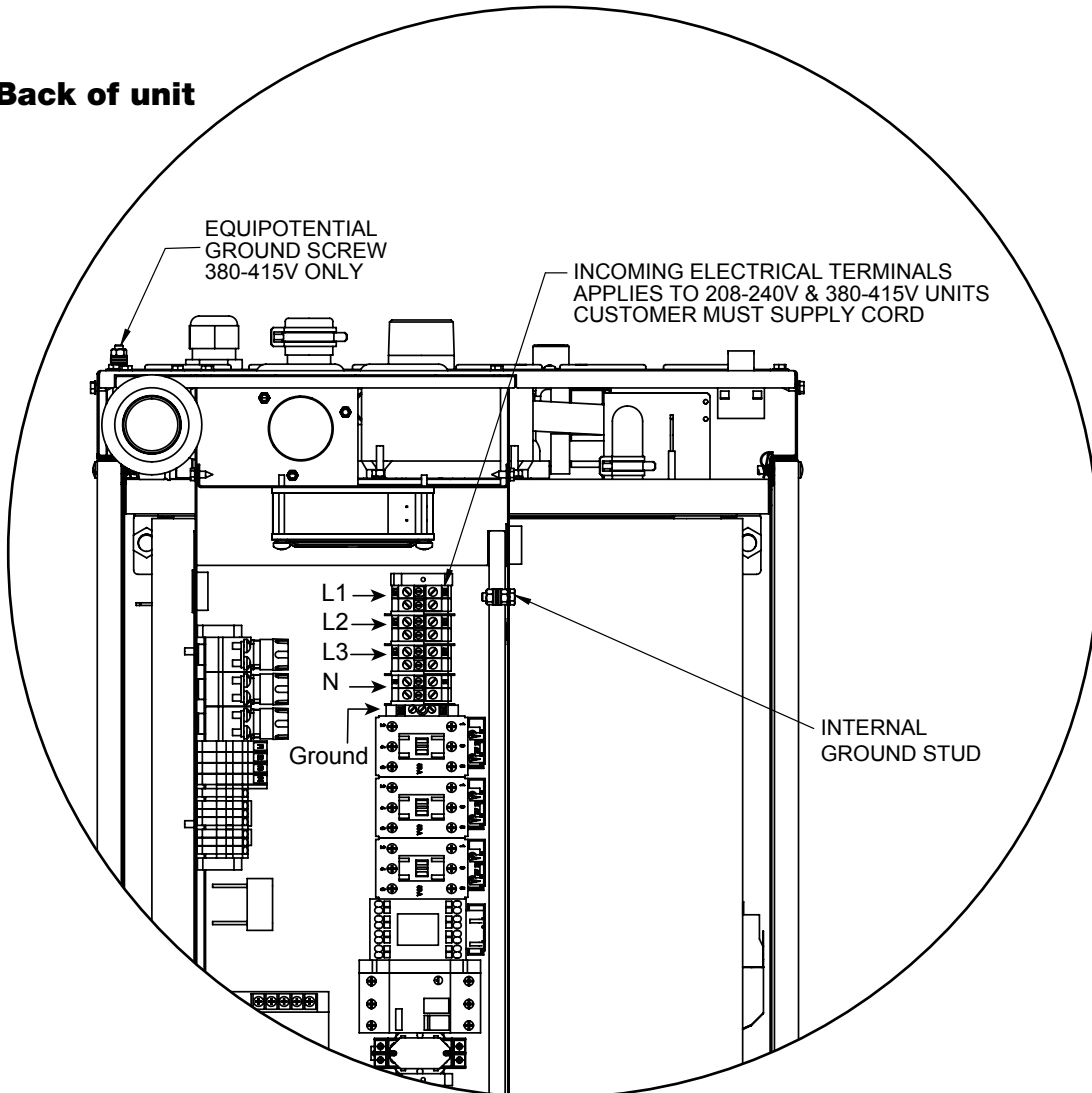


INSTALLATION

MOBILE EQUIPMENT RESTRAINT

Any appliance that is not furnished with a power supply cord but includes a set of casters, stand with casters, or a stacked configuration must be installed with a tether. Adequate means must be provided to limit the movement of this appliance without depending on or transmitting stress to the electrical conduit. The following requirements apply:

1. Casters must be a maximum height of 6" (152mm).
2. Two of the casters must be the locking type.
3. Such appliances must be installed with the use of a flexible connector secured to the building structure.
4. Each of the stacked appliances must be installed with the use of a flexible connector secured to the building structure. A single wall anchor may be used.

A mounting connector for a restraining device is located on the top right back panel of the appliance chassis or on an oven stand, approximately 18" (457mm) from the floor. A flexible connector is not supplied by nor is it available from the factory.

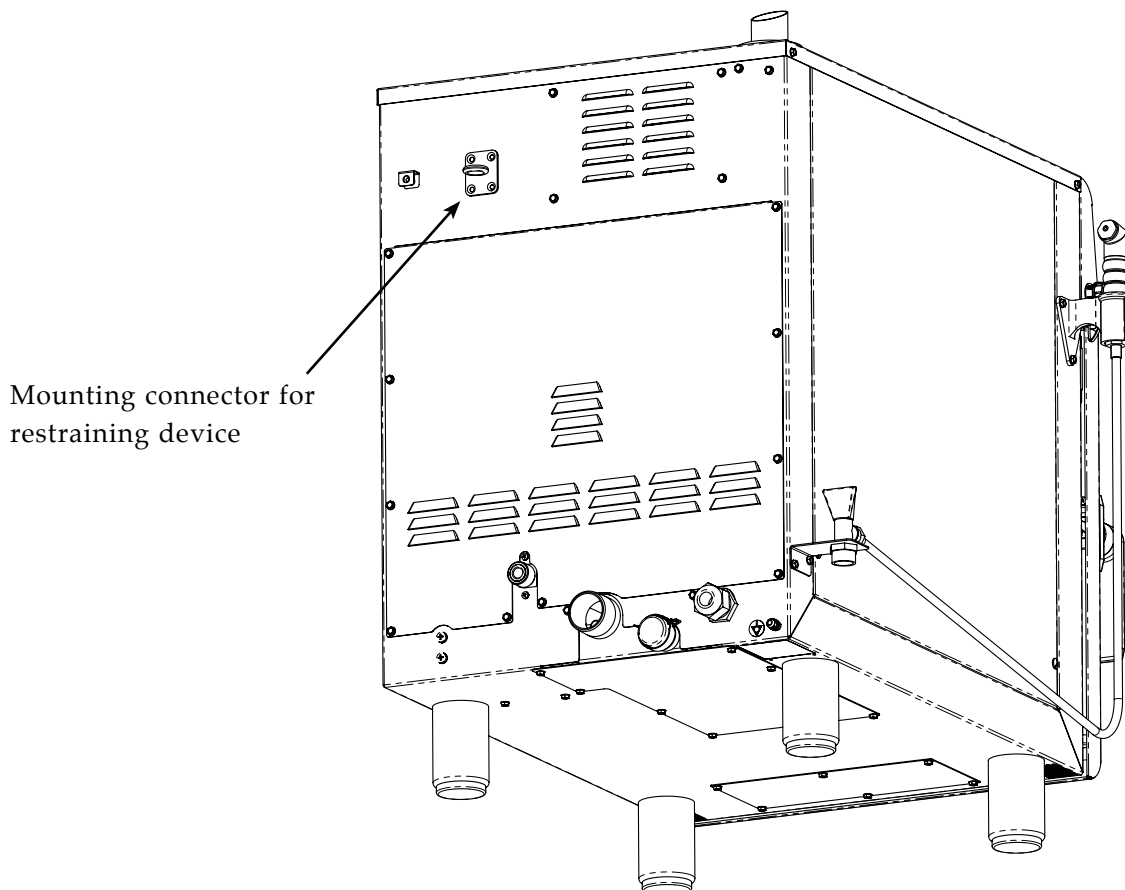

INSTALLATION

WATER QUALITY REQUIREMENT

USE A DRINKING QUALITY, COLD WATER SUPPLY ONLY

Water quality is of critical importance when installing steam producing equipment of any kind, particularly *high temperature* steam producing equipment. Water that is perfectly safe to drink is composed of chemical characteristics that directly affect the metal surfaces of steam producing equipment. These chemical characteristics differ greatly from region to region throughout the U.S. and the world. *Varying combinations of pH; alkalinity; hardness; chlorides; total dissolved solids; and other chemical characteristics, when subjected to high temperatures, will cause water to have a tendency to either scale or corrode.*

Alto-Shaam has consulted with people who understand the properties of water in order to provide water quality standards that meet the broadest possible range of acceptable water quality requirements to help protect your investment.

We strongly urge water testing to ascertain the water quality on site prior to the installation of any steam producing equipment. Since water quality is an important issue, Alto-Shaam is committed to provide as much information as possible to help protect the investment made in this equipment.


A CombiGuard™ Water Filtration System can be purchased as an option for installation on the Combitherm oven. This filter, when properly installed, maintained, and combined with the required levels of steam generating equipment maintenance, will help lessen the affect water has on metal surfaces. It will not, however, provide complete protection against all water damage from region to region.

Due to the complexity of water chemistry, it is important to understand that water quality plays a significant role in the longevity of steam producing equipment. Water quality and required maintenance of steam generating equipment is the direct responsibility of the owner/operator. Damage incurred as a direct result of poor water quality and/or surfaces affected by water quality is also the responsibility of the owner/operator. Damage due to water quality that does not meet the minimum standards shown below is not covered under the Alto-Shaam Combitherm warranty.

Alto-Shaam will continue our efforts to provide viable solutions to ease the impact of water quality as it relates to steam generating equipment.

ALTO-SHAAM COMBITHERM WATER QUALITY MINIMUM STANDARDS

CONTAMINANT	INLET WATER REQUIREMENTS (UNTREATED WATER)
Free Chlorine	Less than 0.1 ppm (mg/L)
Hardness	Less than 3 gpg (52 ppm)
Chloride	Less than 30 ppm (mg/L)
pH	7.0 to 8.5
Alkalinity	Less than 50 ppm (mg/L)
Silica	Less than 12 ppm (mg/L)
Total Dissolved Solids (tds)	Less than 60 ppm

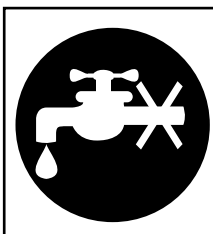

WARNING

TO PREVENT WATER PIPES FROM BURSTING, INCOMING WATER SUPPLY SHOULD BE TURNED OFF WHEN THE APPLIANCE IS NOT IN USE.

WARNING

WATER SUPPLY MUST BE OPEN WHEN CLEANING PROGRAM IS ACTIVATED. VERIFY WATER SUPPLY BEFORE STARTING CLEANING PROGRAM.

INSTALLATION

WATER CONNECTIONS

WATER REQUIREMENTS

ONE (1) COLD WATER INLET - DRINKING QUALITY

ONE (1) TREATED WATER INLET: 3/4" G
LINE PRESSURE: 30 to 90 psi
 2.8 to 6.2 bar

REFER TO PUBLISHED SPECIFIC WATER REQUIREMENTS

WATER DRAIN: 1-1/2" CONNECTION WITH A 2" MINIMUM AIR GAP INSTALLED AS CLOSE TO THE OVEN AS POSSIBLE. MATERIAL MUST WITHSTAND TEMPERATURES UP TO 200°F

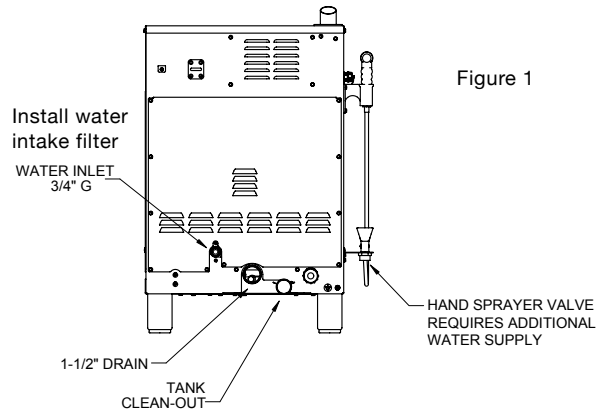


Figure 1

Flush the water line at the installation site.

Install water intake filters (provided) [see Figure 1] before connecting the oven to the water supply.

Backflow Prevention — The equipment must be installed with adequate backflow protection to comply with applicable federal, state, and local codes.

PIPE SEALING TAPE (TEFLON®) MUST BE USED AT ALL CONNECTION POINTS. The use of a pipe sealing compound is not recommended.

NOTE:


UNIONS OR FLEXIBLE LINES SHOULD BE USED TO ALLOW FOR OVEN MOVEMENT WHEN BEING SERVICED OR CLEANING IS NEEDED.

REFER TO FIGURE 1 ABOVE FOR PROPER INTAKE LOCATIONS.

Alto-Shaam now offers an improved water filtration system for Combitherm®. The CombiGuard™ triple-guard water filtration system filters dirt, sediment, and other debris as small as 1/2 micron. This system also significantly reduces chlorine content to protect against corrosive chlorine compounds. CombiGuard improves equipment efficiency, reduces service requirements and extends the life of the Combi oven. After installation, confirm that water quality standards specified in this manual are being met. Filtration systems include one filter cartridge. Additional cartridges can be purchased separately. Refer to page 7 for additional ordering information.

The CombiGuard™ BWS Blended Water System utilizes reverse osmosis to remove more than 97% of the total dissolved solids from water which can be precisely blended with filtered and treated water.


ONE SUGGESTED METHOD OF INSTALLATION

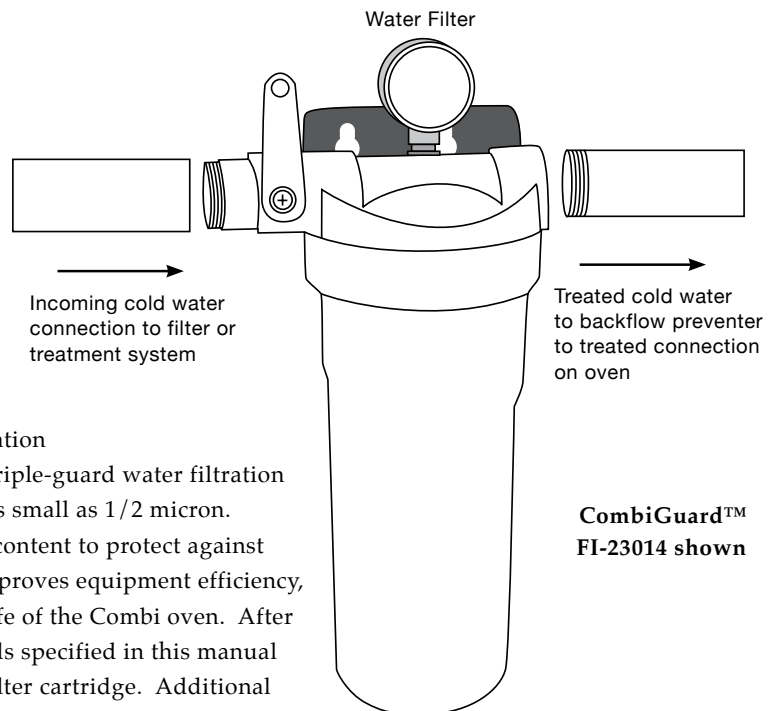

CombiGuard™ FI-23014 shown

INSTALLATION

OPTIONAL HAND HELD SPRAY HOSE

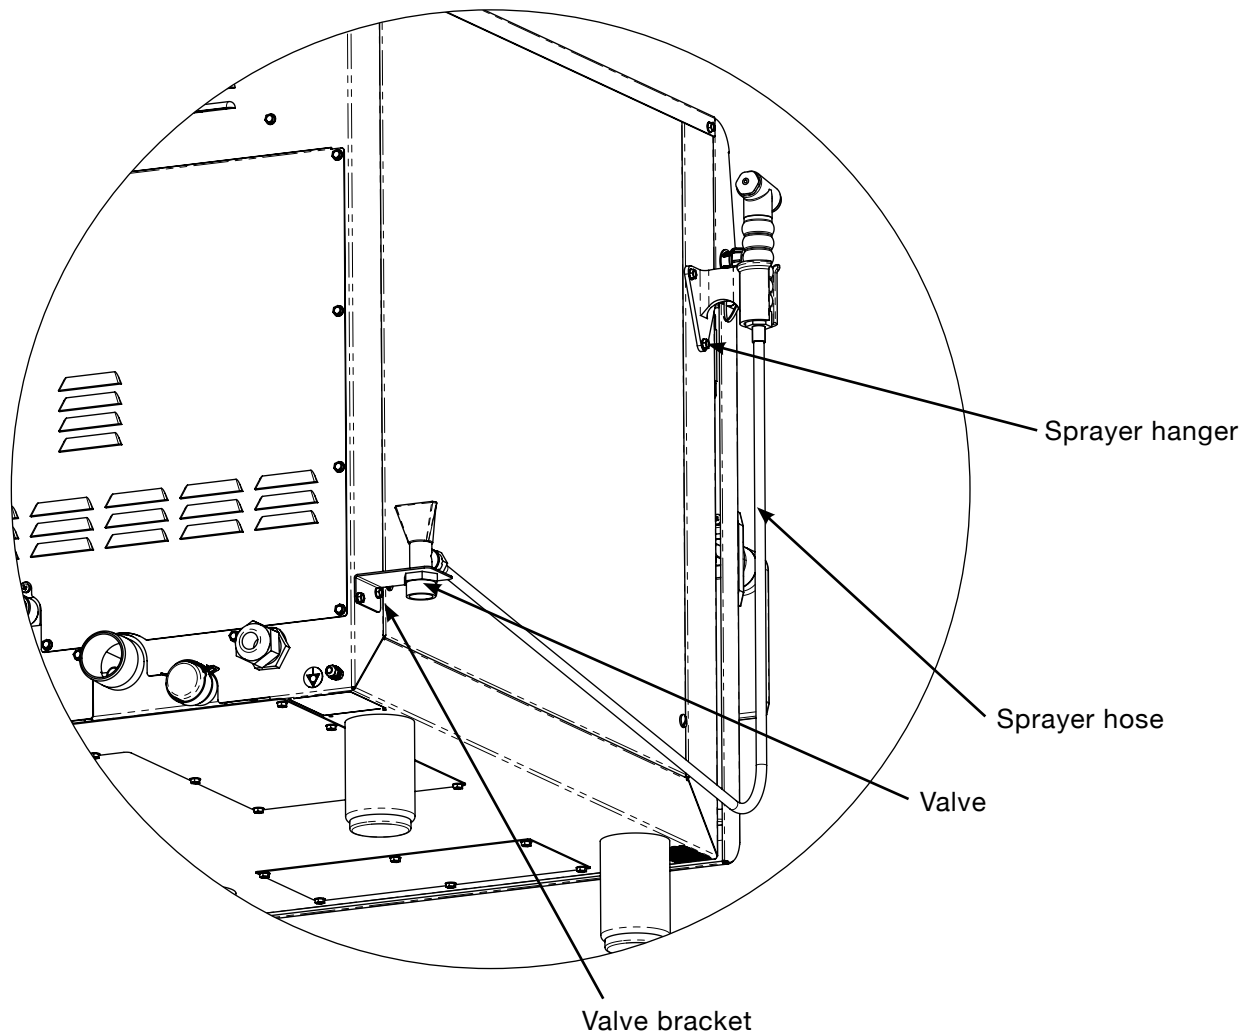

INSTALLATION

1. Two pre-drilled holes with screws in place are located at the lower rear side of the unit (same side as door opening). Remove screws, position valve bracket and attach using the 2 self drilling screws.
2. Three pre-drilled holes with screws in place are located at the upper front side of unit (same side as door opening). Remove screws, position sprayer hanger and fasten using the 3 self-drilling screws.
3. Connect the sprayer hose to the valve and place the sprayer in the hanger.
4. Continue to connect an incoming water supply line to the valve.

INSTALLATION

WATER VALVE

NOTE:

THE SHUT-OFF VALVE
MUST BE IN THE OPEN POSITION
WHEN THE OVEN IS BEING USED.



WATER DRAINAGE

The oven must discharge through an indirect waste pipe by means of an air gap. The drain fitting is supplied with a 1-1/2-inch (38mm) NPT thread.

A union is required. Install a 1-1/2-inch (38mm) diameter connection, drain line and clamp into place. The drain line must always be a positive gradient away from the Combitherm oven and not more than 12-inches (305mm) before an air gap.

NOTE: In the U.S.A., this equipment is to be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. [BOCA], and the Food Service Sanitation Manual of the Food & Drug Administration [FDA].

If several units are to be connected to one drain pipe, the dimensions of the pipe must be sufficient to allow an unobstructed water drain system.

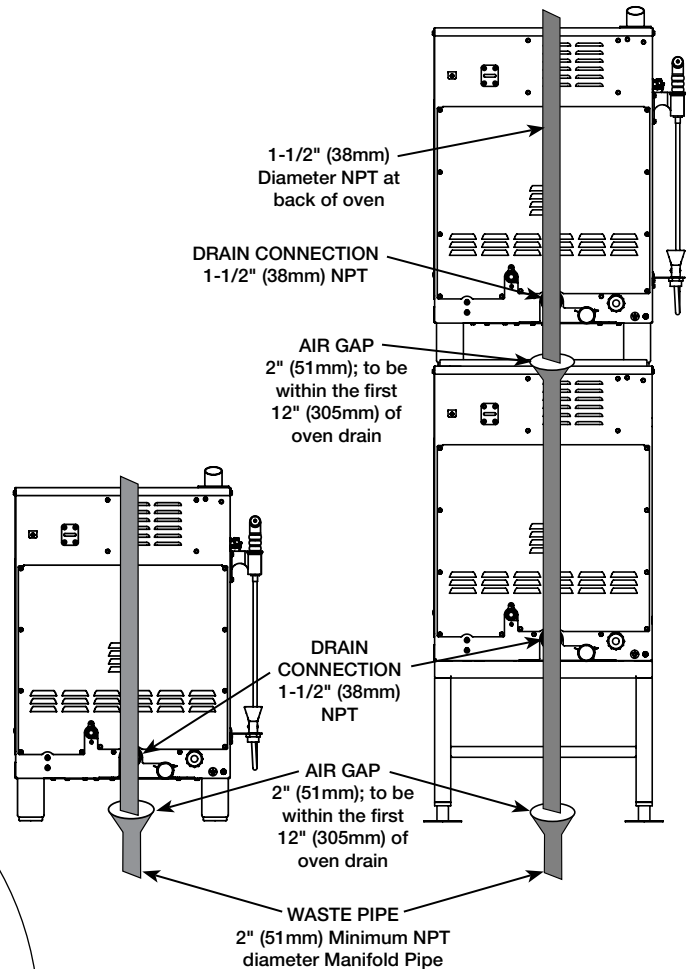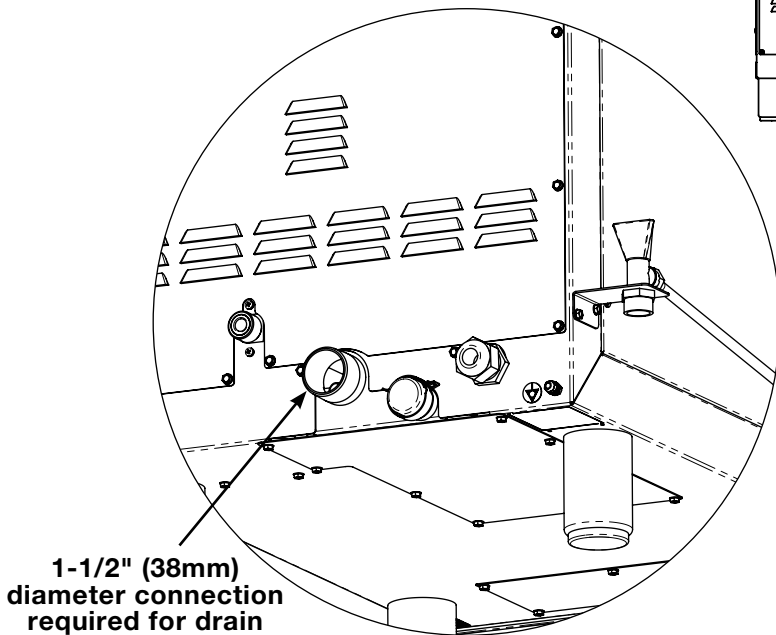

*MATERIALS MUST WITHSTAND
TEMPERATURES UP TO 200°F (93° C)


INSTALLATION

VENTLESS HOOD MODEL

The Ventless Hood option is factory installed directly on the top of the Alto-Shaam Combitherm oven. The hood is designed to vent clean air back into the kitchen, filtering vapors and grease. A high-power fan draws steam and fumes into the hood intake and out the top surface exhaust vent. Fumes and vapors are circulated through filters. An activated charcoal filter cleans the air before venting it out the top of the hood.

OPERATION

1. Turn the ventless hood power knob "ON".
2. Indicator light will illuminate.
3. Wait five seconds, then press the Combitherm oven power "ON".

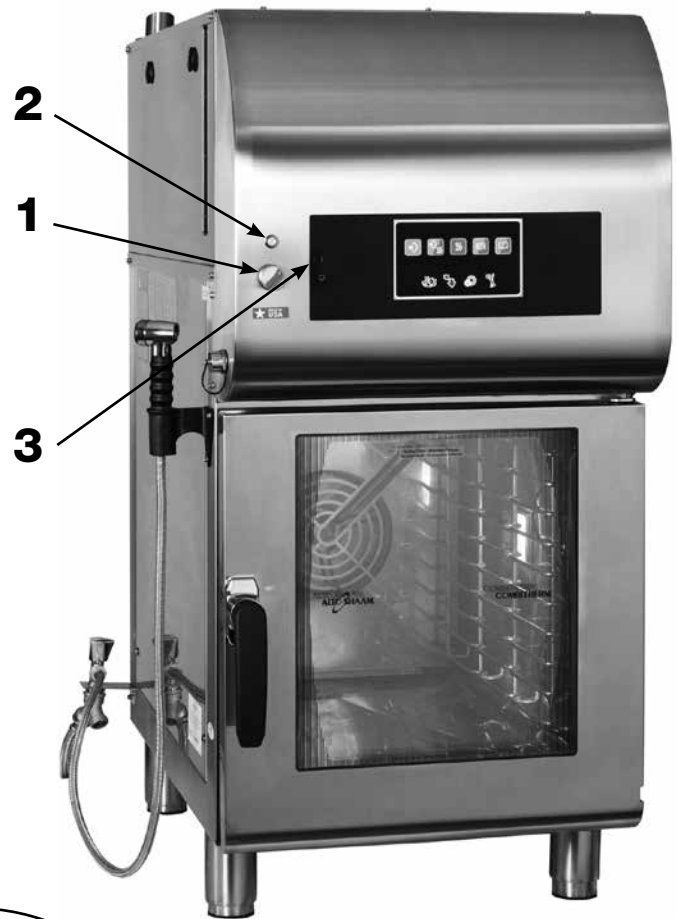


FILTER DOOR LATCH

Using a coin or screwdriver, turn to open; reverse procedure to close and latch.

Hood and oven will not operate unless this is closed properly.

INDICATOR LIGHT

If the indicator light does not illuminate, the filters may be missing or not properly aligned. Check them for proper positioning. Ventless hood and oven will not operate unless the hood is closed properly.

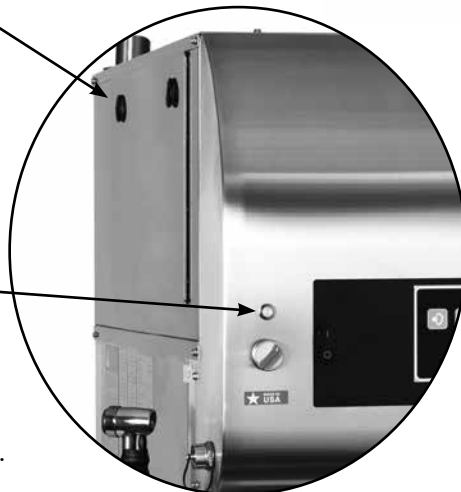


Timed Latching Mechanism: In order to evacuate steam and grease-laden air from the oven interior, this mechanism prevents the operator from fully opening the oven door for 20 seconds. Longer wait times can be programmed into the control. The mechanism automatically disengages at the end of a pre-set time allowing full door extension.

Emergency Latch Release: This release is to be used *ONLY* if the timed latch mechanism is not working or in the event of a power outage. Repeated use of the emergency release may damage the switching mechanism. Latch is located on the right side of the oven, toward the back.

INSTALLATION

VENTLESS HOOD MODEL

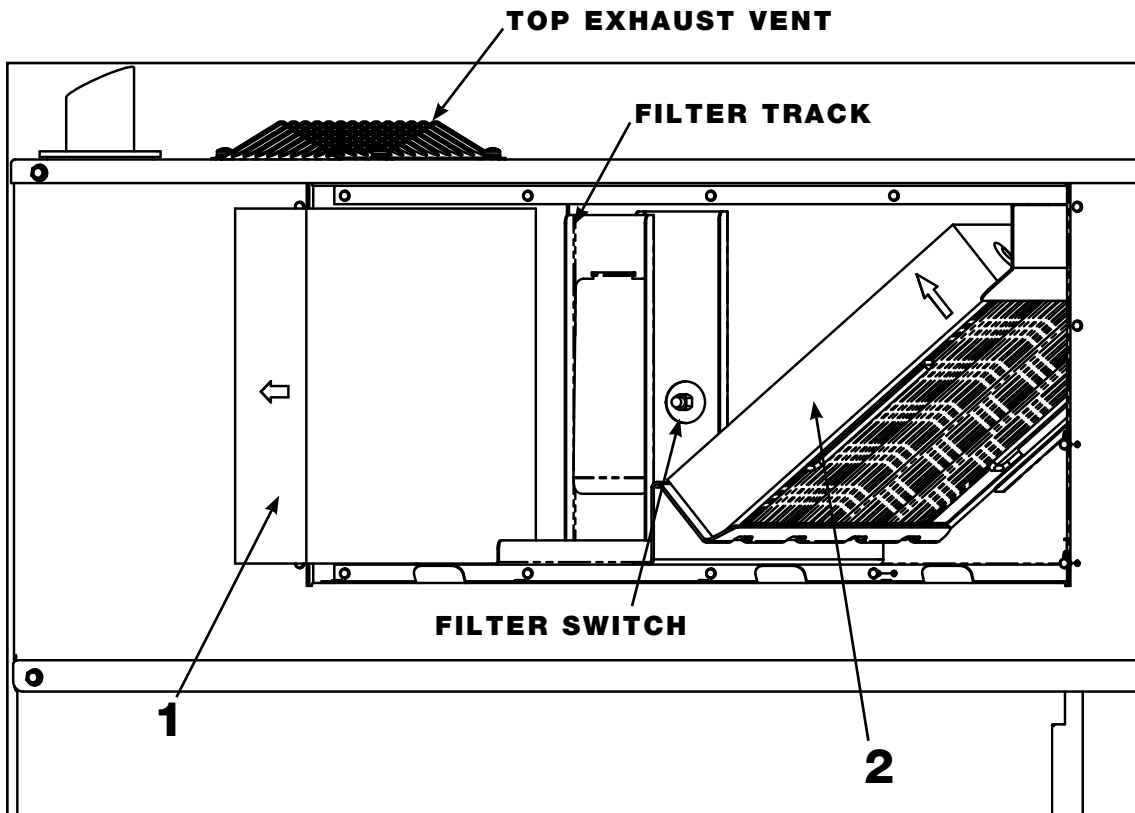

1. Charcoal Filter: The charcoal filter should be inspected for contaminant's on a regular basis. Replacement must be made at a minimum of three month intervals — more often if heavy contaminant's are visible or if the filter no longer controls odors.

To remove the charcoal filter, pull and slide out. When replacing the filter, ensure that the filter clip is in place at rear of the filter. Make certain the air flow arrow(s) point toward the hood fan (back of unit), and that the filter is replaced using the filter track in the metal back plate provided with the hood.

FI-24114

2. Grease Filter: Cleaning frequency should be based on oven usage with a maximum of two weeks between cleaning if the oven is used for non-grease laden products or steam applications only. Grease laden products require cleaning frequency of at least once a week.

Remove the grease filter by pulling it straight out of the housing. Place the filter in the dishwasher or wash separately by placing in hot, soapy water until all grease and particles have been removed. Rinse thoroughly. Allow the filter to air dry before reinstalling.

To replace the grease filter, the metal handles on the filter casing should be facing toward the front of the unit.

FI-24113

INSTALLATION

CT EXPRESS™ CHECKLIST

Use this list as a final check of oven installation conformance.

Damage directly attributed to improper set up, installation, or cleaning can invalidate warranty claims.

CLEARANCES:

Left: 4" (152mm) — Service access of 18" (457mm) recommended.
 8" (203mm) from heat or steam producing equipment.
 Right: 4" (102mm)
 Back: 4" (102mm) for plumbing
 Top: 20" (508mm) air movement Bottom: 4" (102mm) air movement

ARE ALL CLEARANCE

REQUIREMENTS MET? YES NO

IF NO, EXPLAIN: _____

WATER SUPPLY AND DRAINS:

Verify hook-up to *ONE* (1) *cold* water supply line with a 3/4" (19mm) G water connection supply line. Verify inlet water pressure is at a minimum of 30 PSI (2.8 bar). Maximum water pressure is not to exceed 90 PSI (6 bar). Verify drain diameter of 1-1/2" (38mm) with a positive descending slope, and with a 2" (51mm) air gap which is free of obstructions before connection to the site drain. Verify 1/8" (3.2mm) pitch to 10' (305cm) of drain line. Materials must withstand temperatures up to 200°F (93°C).
IMPORTANT: Alto-Shaam has listed Water Quality Requirements in the installation manual for this equipment. It is the responsibility of the end user to have the water connected to this appliance tested to ensure these standards are met before putting the oven into use. Failure to meet these standards will void the warranty if damage to the oven is found to be related to water quality.

ARE BOTH WATER SUPPLY LINES

PROPERLY CONNECTED? YES NO

IF NO, EXPLAIN: _____

IS A FILTER SYSTEM INSTALLED

ON THIS UNIT? YES NO

STORE HAS SEEN THIS

RECOMMENDATION: YES NO

SIGNATURE OF STORE REPRESENTATIVE: _____

ELECTRICAL CONNECTIONS:

Verify electrical power requirements for oven.
 Verify voltage at terminal block.
 Check all terminals for tightness.

VOLTAGE: _____

PHASE: _____

BREAKER SIZE: _____

LINE VOLTAGE AT TERMINAL BLOCK (TO GROUND):

LINE 1: _____ LINE 2: _____ LINE 3: _____

LINE VOLTAGE (PHASE TO PHASE): LINE 1 to 2: _____

LINE 2 to 3: _____

LINE 3 to 1: _____

ELECTRICAL SUPPLY LINE SIZE: _____

ALL ELECTRICAL TERMINALS TIGHT: YES NO

CONTROL BOARD CONNECTIONS & OPERATION:

ExpressTouch: With the Power ON, press the **Tool Box** key, then the **Settings Key** to access software version in the upper left corner.

Simple Control: As unit is powered on, software version will appear in the LED display.

RB _____

RECORD SOFTWARE VERSION: DB _____

ALL BOARD CONNECTIONS TIGHT: YES NO

ALL FUNCTIONS ARE DISPLAYED: YES NO

ALL FUNCTIONS ON CONTROL OPERATE: YES NO

UNIT OPERATES IN ALL MODES: YES NO

IF NO, EXPLAIN: _____

PHYSICAL CONDITION: *REFERENCE INSTALLATION INSTRUCTIONS FOR COMPLETE INFORMATION

- Bottom of oven has been checked for damage due to improper positioning on site
- Verify all gaskets and hoses are in place and function properly
- Verify the installation of drip pans*, racks, shelves, drain screen, spray hose*
- Verify the oven is level and installed on a solid, water resistant surface

SERVICE AGENCY:

START-UP DATE:

INSTALLATION NAME:

MODEL NO.:

SERIAL NO.:

TECH SIGNATURE:

CUSTOMER SIGNATURE:

ERROR CODES

This section is provided for the assistance of qualified technicians only and is not intended for use by untrained or unauthorized service personnel. If your Alto-Shaam® unit is not operating properly, check the following before calling your Authorized Alto-Shaam Service Agent:

- Check that unit is receiving power. Circuit breaker turned on?
Do not attempt to repair or service the oven beyond this point. Contact Alto-Shaam for the nearest authorized service agent. Repairs made by any other service agents without prior authorization by Alto-Shaam will void the warranty on the unit.

When the oven malfunctions, an error code will appear in the display.



PRESS THE START ICON TO ACKNOWLEDGE THE ERROR.

The icons that begin to flash represent operational modes that are still usable.

When the oven fault is corrected, the Combitherm will return to normal operation.

Error Code	Error Call Out in Display	Description of Error	Possible Cause
E01	Low Water Boiler	Low water level in boiler	<ul style="list-style-type: none"> — Water supply is shut off. — Low water pressure. — Generator drain cap missing or loose. — Generator drain pump is not sealing. — Generator drain pump elbow leaking. — Faulty or scaled water level probe. — Faulty or plugged dual solenoid valve assembly. — Wiring or connection issue. — No output to dual solenoid from relay board. — Relay board, high voltage is not operating.
E02	Control Temperature High	Relay board surface temperature too high	<ul style="list-style-type: none"> — Wiring or connection issue. — Cooling fan on Relay board assembly is not operating. — Cooling Fan on display board is not operating. — Main Cooling fan is not operating. — Cooling Fan on motor drive is not operating. — Unit is less than 20" from a heat producing source on its left hand side.
E03	Fan Motor Error	Fan motor does not work	<ul style="list-style-type: none"> — Exhaust hood is not operating properly. — Check LED flashes on the Motor Control. — See Motor Control Error Code list. — Connection Issue on Hall Effect sensor. — Fan wheel is not operating. — Hall sensor does not detect motor rotation.
E04	Fan Motor 2 Error	Lower fan motor on 20•20 does not work	<ul style="list-style-type: none"> — Exhaust hood is not operating properly. — Check LED flashes on the Motor Control. — See Motor Control Error Code list. — Connection Issue on Hall Effect sensor. — Fan wheel is not operating. — Hall sensor does not detect motor rotation.
E11	Convection Temperature High	Excess oven temperature	<p>Convection Mode & Combi Mode:</p> <ul style="list-style-type: none"> — Convection Oven contactor(s) stuck closed. — N6 Oven Cavity Temperature probe defective. — N6 Cavity Probe connection problem. — Relay board, high voltage is not operating. — Wiring or connection issue. <p>Combi Mode Only:</p> <ul style="list-style-type: none"> — Insufficient water supply into oven for steam production.

CONTINUED ON NEXT PAGE

ERROR CODES

Error Code	Error Call Out in Display	Description of Error	Possible Cause
E13	Boiler Temperature High	Boiler temperature overheats	<ul style="list-style-type: none"> — Scale build up inside steam generator. — Scale build up on water level probe. — B4 Probe connection problem. — B4 probe faulty.
E15	Condensor Temperature High	Excess condensor temperature	<ul style="list-style-type: none"> — Untreated water supply line is shut off. — Untreated water supply line is connected to warm water. — B3 probe connection problem. — B3 probe is faulty. — Single solenoid valve Y2 obstructed or faulty. — Wiring or connection problem. — Relay board, high voltage is not operating.
E20	<p>HACCP Only - B11 Core Temperature Probe Single Point Fault</p> <p>Error E20 is not shown in display. Instead a probe sign with "?" is shown as popup window. In case the customer cooks in time mode during first step and during second step switches to probe mode but has no probe in place, the error E20 will be shown in the error code list and HACCP list.</p>	Single point core temperature probe defect or disconnected.	<ul style="list-style-type: none"> — Clean Probe Receptacle Pins with sand paper. — B11 Single Point Core Temperature probe with quick connect, defective. — B11 Single Point Core Temperature probe wires with quick connect, disconnected. — B11 Single Point Core Temperature probe receptacle, defective. — B11 Single Point Core Temperature probe receptacle wires disconnected.
E21	N6 Cavity Probe Fault	Cavity temperature probe defect or disconnected	<ul style="list-style-type: none"> — N6 Oven Cavity Temperature probe defective. — N6 Oven Cavity Temperature connection problem.
E22	B10 Core Temperature Probe Multipoint Fault	Multipoint core temperature probe defect or disconnected	<ul style="list-style-type: none"> — B10 Multipoint Core Temperature probe defective. — B10 Multipoint Core Temperature probe connection problem.
E23	B4 Boiler Probe Fault	Boiler temperature probe defect or disconnected	<ul style="list-style-type: none"> — B4 Boiler temperature probe defective. — B4 probe wires connection problem.
E24	B5 Bypass Probe Fault	Bypass steam temperature probe defect or disconnected	<ul style="list-style-type: none"> — B5 Bypass steam temperature probe defective. — B5 Bypass steam temperature connection problem.
E25	B3 Condensor Probe Fault	Condensor water temperature probe defect or disconnected	<ul style="list-style-type: none"> — B3 Condensor temperature probe defective. — B3 Condensor probe connection problem.
E26	N8 Boiler Safety Temperature Probe Fault	Steam generator heating element protection probe defect or disconnected	<ul style="list-style-type: none"> — N8 Boiler temperature probe defective. — N8 probe connection problem.
E27	Boiler Element Temperature High	Excess steam generator safety probe	<ul style="list-style-type: none"> — Scale build up inside steam generator. — Scale build up on water level probe. — Water level probe connection failure. — N8 boiler temperature probe defective. — N8 probe connection problem. — Steam element contactor(s) stuck closed. — Wiring or connection problem.

CONTINUED ON NEXT PAGE

ERROR CODES

Error Code	Error Call Out in Display	Description of Error	Possible Cause
E34	Steam Generator Drain Pump Fault	Water level in steam generator does not drop during cleaning program	<ul style="list-style-type: none"> — Scale build up inside the steam generator drain pump. — Scale build up inside the steam generator affecting water level probes. — Generator drain pump is faulty. — Connection issue at drain pump. — No output to pump from relay board.
E36	Steam Temperature High	Oven cavity temperature is too high when operating in a steam mode or cleaning program	<ul style="list-style-type: none"> — Water supply is shut off. — Low water pressure. — Wiring or connection issue. — Water injection pipe obstructed. — Water flow control valve plugged or defective. — Dual solenoid valve Y-1 obstructed or defective. — No output to solenoid valve form relay board.
E51	No Water In Boiler	Water inside steam generator does not reach low water level	<ul style="list-style-type: none"> — Water supply is shut off. — Low water pressure. — Generator drain cap missing or loose. — Generator drain pump is not sealing. — Generator drain pump elbow leaking. — Faulty or scaled water level probe. — Faulty or plugged dual solenoid valve assembly. — Wiring or connection issue. — No output to dual solenoid from relay board.
E53	Fan Motor High Temperature	Fan motor too hot	<ul style="list-style-type: none"> — Exhaust hood is not operating properly. — Check LED flashes on the Motor Control. — See Motor Control Error Code list. — Connection Issue on Hall Effect sensor. — Fan wheel is not operating. — Hall sensor does not detect motor rotation.
E54	Fan Motor 2 High Temperature	20*20 lower fan motor too hot	<ul style="list-style-type: none"> — Exhaust hood is not operating properly. — Check LED flashes on the Motor Control. — See Motor Control Error Code list. — Connection Issue on Hall Effect sensor. — Fan wheel is not operating. — Hall sensor does not detect motor rotation.
E55	Vent Not Open	Browning valve does not open	<ul style="list-style-type: none"> — Alignment issue between motor cam and vent motor safety switch (micro switch). — Fault vent valve (motor). — Fault vent valve safety switch (micro switch). — Wiring or connection problem.

CONTINUED ON NEXT PAGE

ERROR CODES

Error Code	Error Call Out in Display	Description of Error	Possible Cause
E57	No Rinse Water	During rinse no water flow is detected through solenoid valve	<ul style="list-style-type: none"> — Water supply is shut off. — Low water pressure. — Check wiring to all components mentioned below. — Flow switch is dirty or defective. — Dual water solenoid valve obstructed or faulty (Y3.) — Relay board, high voltage, defective.
E93	Communication Error, FROM Display Board	Communication error between display board and low voltage relay board	<ul style="list-style-type: none"> — Check ribbon cable connections mentioned below. — Ribbon cable defective. — Relay board, low voltage, connector defective. — Display board connector defective.
E94	Communication Error, TO Display Board	Communication error between display board and low voltage relay board	<ul style="list-style-type: none"> — Check ribbon cable connections mentioned below. — Ribbon cable defective. — Relay board, low voltage, connector defective. — Display board connector defective.
E98	RB is in Celsius and DB is in Fahrenheit	Conflict of unit configuration in the setup menu	<ul style="list-style-type: none"> — Relay board and Data board do not match, use setup menu to change format.
E99	RB is in Fahrenheit and DB is in Celsius	Conflict of unit configuration in the setup menu	<ul style="list-style-type: none"> — Relay board and Data board do not match, use setup menu to change format.
E100	DB is not equal to RB version. Error generated by DB.	Software update may have failed.	<ul style="list-style-type: none"> — Check ribbon cable connections. — Ribbon cable defective. — Relay board, low voltage, connector defective. — Display board connector defective. — Software may need to be updated again.
E101	DB is not equal to RB version. Error generated by RB.	Software update may have failed.	<ul style="list-style-type: none"> — Check ribbon cable connections. — Ribbon cable defective. — Relay board, low voltage, connector defective. — Display board connector defective. — Software may need to be updated again.
E102	Ventless Hood Fault – Filters Not Present	Filter safety switches are not properly activated.	<ul style="list-style-type: none"> — Check filters are installed and properly seated. — Check filter switches are not damaged, defective or dislodged.
E103	Ventless Hood Fault – No Pressure	Pressure safety switch is not properly activated.	<ul style="list-style-type: none"> — Check power switch is on. — Check vent motor is turning in the proper direction. — Pressure switch is mis-wired or defective.

ERROR CODES

When the oven malfunctions, an error code will appear in the display.



PRESS THE START ICON TO ACKNOWLEDGE THE ERROR.

The icons that begin to flash represent operational modes that are still usable.

When the oven fault is corrected, the Combitherm will return to normal operation.

Error Code	Display Shows	Model		Mode			
		ES	ESG ESI	Steam	Combination	Convection	Retherm
E01	Low Water Boiler	Yes	No	No	No	To 365°F/185°C	No
E02	Control Temp High	Yes	Yes	No	No	No	No
E03	Fan Motor Error	Yes	Yes	No	No	No	No
E04	Fan Motor 2 Error	Yes	Yes	No	No	No	No
E11	Convection Temperature High	Yes	Yes	BOILER UNITS ONLY	No	No	No
E13	Boiler Temperature High	Yes	No	No	No	Yes	No
E15	Condenser Temperature High	Yes	Yes	No	No	To 356°F/180°C	No
E20	B11 Core Temperature Probe Single Point Fault - HACCP only	Yes	Yes	No	No	No	No
E21	N6 Cavity Probe Fault	Yes	Yes	BOILER UNITS ONLY	No	No	No
E22	B10 Core Temp Probe Fault	Yes	Yes	BY TIME ONLY	BY TIME ONLY	BY TIME ONLY	BY TIME ONLY
E23	B4 Boiler Probe Fault	Yes	No	No	No	No	No
E24	B5 Bypass Probe Fault	Yes	Yes	No	No	Yes	No
E25	B3 Condenser Probe Fault	Yes	Yes	Yes	No	To 356°F/180°C	No
E26	N8 Boiler Safety Temperature Probe Fault	Yes	No	No	No	No	No
E27	Boiler Element Temperature High	Yes	No	No	No	Yes	No
E34	Steam Generator Drain Pump Fault	Yes	No	No	No	No	No
E36	Steam Temperature High	Yes	No	No	No	Yes	No
E51	No Water in Boiler	Yes	No	No	No	Yes	No
E53	Fan Motor High Temperature	Yes	Yes	No	No	No	No
E54	Fan Motor 2 High Temperature	Yes	Yes	No	No	No	No
E55	Vent Not Open	Yes	Yes	Yes (NO BROWNING)	Yes (NO BROWNING)	Yes (NO BROWNING)	Yes (NO BROWNING)
E57	No Rinse Water	Yes	Yes	Yes	Yes	Yes	Yes
E93	Communication Error FROM Display Board	Yes	Yes	No	No	No	No
E94	Communication Error TO Display Board	Yes	Yes	No	No	No	No

ORIGINAL EQUIPMENT LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The labor warranty remains in effect one (1) year from installation or fifteen (15) months from the shipping date, whichever occurs first. Alto-Shaam will bear normal labor charges performed by an authorized Alto-Shaam service agent during standard business hours, and excluding overtime, holiday rates or any additional fees.

The original parts warranty remains in effect for one (1) year from installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

THIS WARRANTY DOES NOT APPLY TO:

1. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
2. Equipment damage caused by accident, shipping, improper installation or alteration.
3. Steam generator or steam generating system damage as a result of inadequate routine maintenance and cleaning. Required maintenance and cleaning of steam generating equipment is the responsibility of the owner/operator.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions including, but not limited to, equipment subjected to harsh or inappropriate chemicals including, but not limited to, compounds containing chlorine, chlorides or quaternary salts, or equipment with missing or altered serial numbers.
5. Equipment that uses water must meet Alto-Shaam's minimum water quality standards as shown below. **USE OF WATER NOT MEETING ALTO-SHAAM'S MINIMUM WATER QUALITY STANDARDS WILL VOID THIS WARRANTY.**

Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator. The installation and use of Alto-Shaam's CombiGuard™ Water Filtration System is highly recommended.

ALTO-SHAAM COMBITHERM WATER QUALITY MINIMUM STANDARDS	
CONTAMINANT	INLET WATER REQUIREMENTS (UNTREATED WATER)
Free Chlorine	Less than 0.1 ppm (mg/L)
Hardness	Less than 3 gpg (52 ppm)
Chloride	Less than 30 ppm (mg/L)
pH	7.0 to 8.5
Alkalinity	Less than 50 ppm (mg/L)
Silica	Less than 12 ppm (mg/L)
Total Dissolved Solids (tds)	Less than 60 ppm

6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Oven Cleaner including, but not limited to, damage due to chlorine, bleach, quaternary salts, scouring powders or other harmful chemicals. Use of Alto-Shaam's Combitherm Cleaner on Combitherm ovens is highly recommended.
7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or other consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ALTO-SHAAM BE LIABLE FOR LOSS OF USE, LOSS OF REVENUE OR PROFIT, OR LOSS OF PRODUCT, OR FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.

Warranty effective November 1, 2012

TRANSPORTATION DAMAGE AND CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:

Driver refuses to allow inspection of containers for visible damage.

6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE. ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____

Serial Number: _____

Date Installed: _____

Voltage: _____

Purchased From: _____



Alto-Shaam has established a twenty-four hour emergency service call center to offer immediate customer access to a local authorized service agency outside of standard business hours. The emergency service access is provided exclusively for Alto-Shaam equipment and is available throughout the United States through the use of Alto-Shaam's toll-free number. Emergency service access is available seven days a week including holidays.