

# Panasonic

## Quick Reference Guide

Model No. KX-T7710

### ***Important Information***

---

**When using the KX-T7710, keep the following conditions in mind.**

- If there is any problem, unplug the extension line and connect a known working phone. If the known working phone operates properly, have the defective phone repaired. If the known working phone does not operate properly, check the Panasonic KX series Business Telephone System and the internal extension wiring.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.
- The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.
- Do not use thinner, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Do not disassemble this product. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- Do not use any handset other than a Panasonic handset.
- The apparatus is designed to be installed and operated under controlled conditions of ambient temperature and a relative humidity not greater than 60%.
- Avoid installing the apparatus in damp or humid environments, such as in bathrooms or near swimming pools.
- 999 and 112 can be dialled on the apparatus after accessing the exchange line for the purpose of making outgoing calls to the BT emergency (999) and (112) services.

#### **WARNING:**

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

THIS HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

#### **IMPORTANT NOTICE:**

This product is designed for use in the U.K.

#### **Note:**

In this manual, the suffix of each model number is omitted.

# Features List



Off-hook



On-hook



Feature number








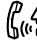







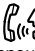



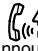




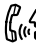







Talk

\* The Feature numbers described in this manual are for the Panasonic Hybrid IP-PBX KX-TDA100/KX-TDA200. If you are connected to a different Panasonic KX series Business Telephone System, please refer to its manuals.

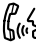\* "Location of Controls" is shown on page 5.

Desired Function	Operation
<b>Making Calls</b>	
Calling	<div> <div>To an extension</div> <div>  → extension no. →  </div> </div> <div> <div>To an external party</div> <div>  → line access no. → phone no. →  </div> </div>
Redial	<div>  → <b>REDIAL</b> →  </div> <p>The REDIAL will dial the last number you called manually.</p>
Quick Dialling	<div>  → quick dial no. →  </div>
One-touch Dialling	<div> <div>To store</div> <div>  →  PROGRAM → desired no. (max., 22 digits) →  /  Press One-touch button. </div> </div>
	<div> <div>To dial</div> <div>  →  /  Press One-touch button. →  </div> </div>
Calling an operator	<div>  → 0 →  </div>
Station Speed Dialling	<div> <div>To store</div> <div>  →  PROGRAM → desired no. (max., 22 digits) → <b>AUTO</b>  → Station speed dial no. (0-9) </div> </div>
	<div> <div>To dial</div> <div>  → <b>AUTO</b>  → Station speed dial no. (0-9) →  </div> </div>
System Speed Dialling	<div> <div>To dial</div> <div>  → <b>AUTO</b>  / * * → System speed dial no. →  </div> </div>

# Features List

Desired Function		Operation					
When the Dialed Extension is Busy/No Answer							
Message Waiting	Sender	To leave/cancel a notification  ▶  7 0 ▶ <table border="1" data-bbox="679 266 814 363"><tr><td>1</td><td>Leave</td></tr><tr><td>0</td><td>Cancel</td></tr></table> ▶ extension no. ▶ 		1	Leave	0	Cancel
	1	Leave					
0	Cancel						
Receiver	To call back  ▶  ▶ 		* In Normal Mode, you should change the default setting to "*702" for Message button. (See page 4.)				
During a Conversation							
Holding a call	Holding  R ▶  5 0 ▶ 		To retrieve a call at the holding extension  ▶  5 0 ▶ 				
	Transferring a call  R ▶ dial no. ▶  Announce. ▶ 						
Useful Features							
Paging	To page  ▶  3 3 group no. ▶  Announce.						
	To answer a page  ▶  4 3 ▶ 						
Three-party Conference	During a conversation  R ▶ desired phone no. ▶  ▶  R ▶ 3						
Locking your extension	To lock  ▶  7 7 ▶ 1 ▶ 						
	To unlock  ▶  7 7 ▶ 0 lock code ▶ 						

# Operations in NORMAL Mode

## ◆◆ One-touch buttons

 
Five One-touch buttons can be used as speed dialling buttons or to access a features.

## ◆◆ Station Speed Dialling

You can store up to 10 Station speed dial numbers.

## ◆◆ MESSAGE Button

You can change the feature access number for the MESSAGE Button. [Default: 702]  
For more detail, refer to the manual for the connected Panasonic KX series Business Telephone Systems.



## ◆◆ Setting Lock/Unlock

You can lock the settings for one-touch buttons and MESSAGE button. [Default: Unlock]



## ◆◆ Confirmation in Programming Mode

When programming, you can confirm your entry by three types of beep sound.

 
- One long beep: Your entry is accepted.
- Two beeps: Your entry is same as a previous entry.
- Three beeps: Your entry is rejected.

## ◆◆ Memory Back Up

If the telephone line is disconnected for more than three days, the stored numbers for One-touch dialling and Speed dialling will be erased. Please store them again.  
Also, the settings for MESSAGE and Flash time will return to the default settings.

## ◆◆ Flash Time

Before programming the length of Flash time, make sure the position of the **Mode switch** lever is "NORMAL". Enter the appropriate selection number for your country.

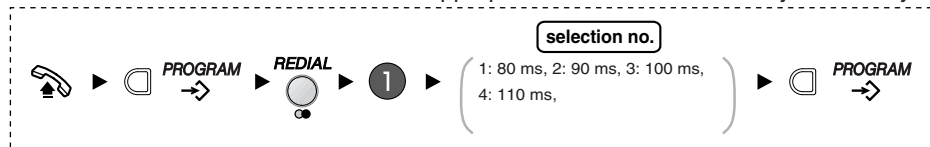


**Regarding other operations, please refer to the manuals for the Panasonic KX series Business Telephone System to which you are connected.**





# Things You Should Know

## Wall Mounting

 
1

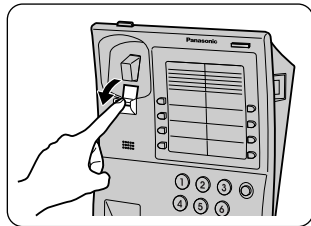


2

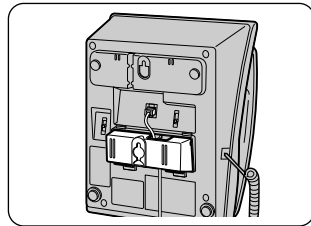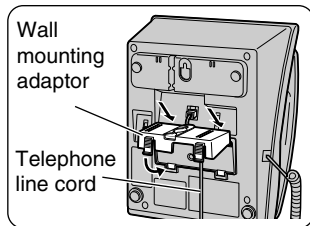  

3

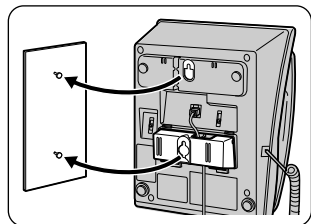 


 **To temporarily  
place the handset  
down during a  
conversation:**

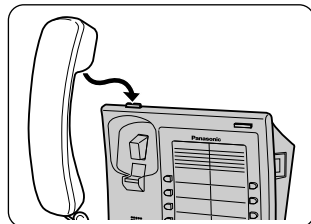


## Removing the Telephone Card Cover

 1

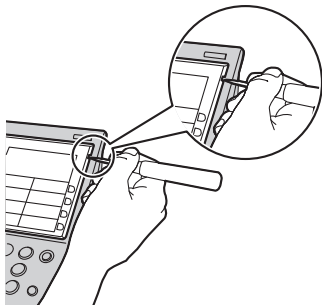

2

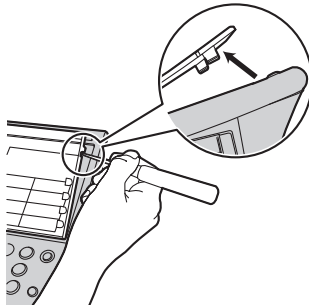 

This product is intended to be connected to Panasonic KX series Business Telephone Systems only.

We, Panasonic Communications Co., Ltd., declare that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

If you want to get a copy of the original Declaration of Conformity of our products which relates to the R&TTE, please use our web site: <http://www.panasonic-tc.de>