

# DT04-12C1 12.1" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

## **Front View**

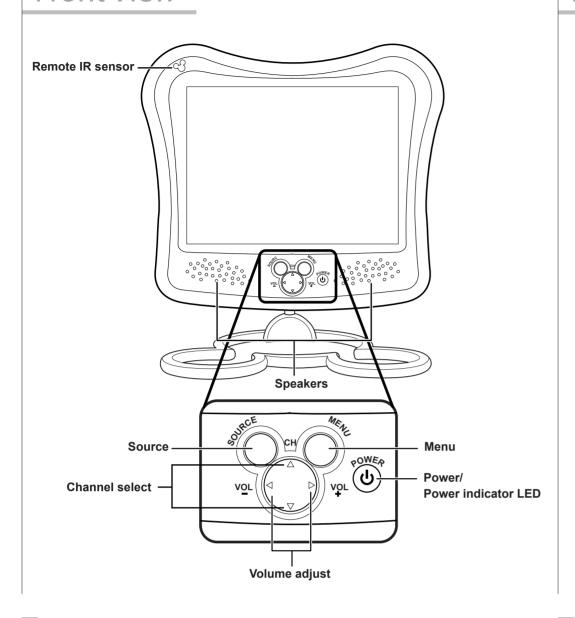


## **Rear View**

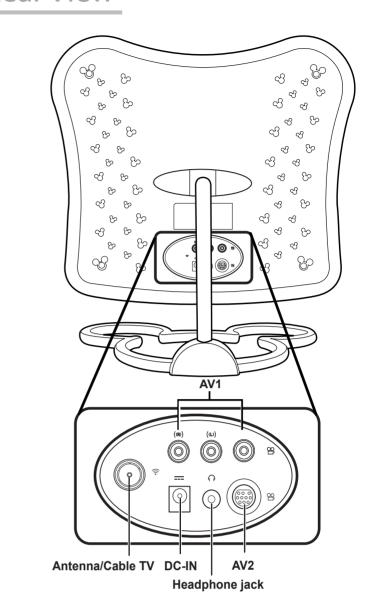


# **Making Connections**

#### **Connecting to Antenna/Cable TV**

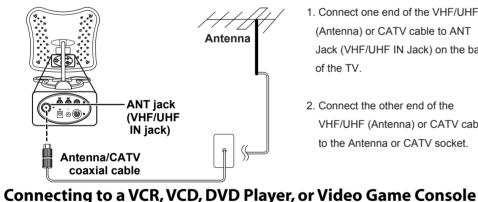


- Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
- 2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

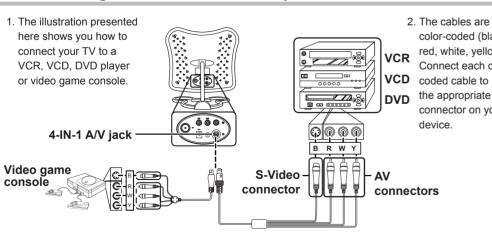

#### color-coded (black, red, white, yellow). Connect each colorcoded cable to the appropriate connector on your

### **Connecting the Power Adapter**

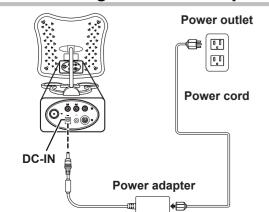

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel
- 3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

#### Note:


Images are for illustration only and may vary by model or region.

# A/V and Channel Setup

#### **Selecting A/V Sources**

- 1. Make sure your TV is turned on and a device such as a DVD player is connected.
- 2. Press the SOURCE button on the control panel to select different source signals. TV channel number, AV1, AV2 or AV2s appear on the screen.

Note: AV2s only appears on the screen when S-Video is connected

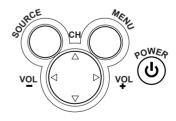



#### **Auto Channel Setup**

Please follow the instructions by using the control panel.

- 1. Press the **MENU** button to enter the OSD menu.
- 3. Press the **VOL +** button to enter the TV setting.
- 4. Press the **CH** ∇ button until the "Auto Program" feature is selected.
- 5. Press the **VOL +** button to begin "Auto Program".
- 6. Your television will begin automatically memorizing the available channels.

#### **Auto Program**

