

RCA

Television User's Guide

Changing Entertainment. Again.



A THOMSON BRAND

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



 
This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.


Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Table of Contents

Setup and Connections	1	V-Chip Movie Rating Limit	11
Dipole Antenna Connection	2	Blocking and Viewing Movie Ratings	11
Channel Marker	3	V-Chip TV Rating Limit	12
Front Panel Controls	3	The TV Rating Limit Screen	12
Front Panel Jacks	4	Blocking Age-Based Ratings and Content Themes	14
Front Panel Lock	4	Viewing Age-Based Ratings and Content Themes	14
Remote Control Buttons	5	V-Chip Unrated Program Block	15
The Main Menu	7	Lock/Unlock Parental Controls	15
The Picture Quality Menu	7	The Time menu	16
The Screen Menu	8	Troubleshooting	17
The Channel Menu	9	Accessories	18
V-Chip Parental Controls	10	Limited Warranty	19

 ANTENNA, CABLE, CABLE BOX OR VCR



TV (Back Panel)

 
 
Setup and Connections

Step 1: Connect your TV

Connect the cable from your cable system or off-air antenna to the cable in-jack on the back of the TV, as shown on the left.

Step 2: Plug in the TV

Plug the end of the power cord into the wall outlet. Match the wide blade of the plug with the wide slot in the outlet. Insert the plug completely into the outlet.

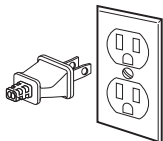

Step 3: Put Batteries in the Remote

 
1. Remove the battery compartment cover on the remote.
2. Insert new batteries. Match the polarities (+ and -) on the batteries with the diagram on the remote.
3. Put the battery compartment cover back on the remote.

Step 4: Turn on the TV

Press the ON•OFF button on the remote or POWER on the front panel.

Step 5: Auto Channel Search

Perform an *Auto Channel Search* (described in the *Channel* menu section).

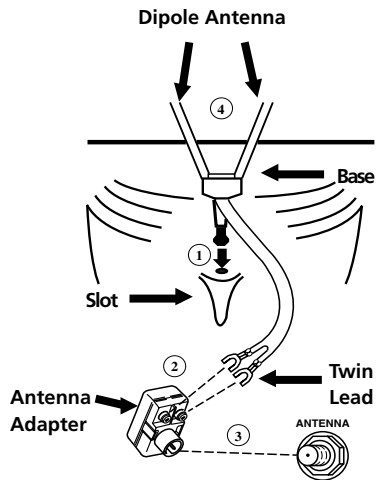

Dipole Antenna Connection

Follow the steps to connect the indoor antenna (supplied with model E13320) with your TV (only if you do not connect an outdoor antenna or a cable-TV system).

 
Insert the antenna base into the pocketed slot on the back of your set. Stand at the back of your set with the antenna twin-lead facing you, and press the base of the antenna into the slot until it locks in place.

Connect the ends of the twin-lead to the Antenna Adapter (supplied with model E13320).

Connect the Antenna Adapter to the ANTENNA connector on the back of the TV.

Later, after you've turned on the TV, adjust the length and position of the antenna rods for best reception.

- For viewing VHF channels, extend the rods fully.
- For viewing UHF channels, shorten the rods for best reception.

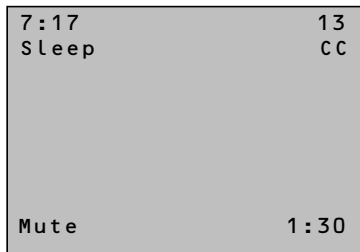

The Channel Marker shown is just an example of what your screen may look like.

You can press MENU or CLEAR to make the Channel Marker disappear, or it will disappear automatically after a short time.

Channel Marker

The Channel Marker comes up when you first turn on the TV, change channels, or press the INFO button.

01:30 Displayed to count down time left on the commercial skip timer.

13 Displays the current channel.

7:17 Displays the current time.

CC Displayed when Closed Captioning is available.

Mute Displayed when you mute the audio.

Sleep Displayed when the Sleep Timer has been set.

Front Panel Controls

CHAN ^ Scans up through the channel list. When a menu is displayed, CHAN ^ points up to items and adjusts menu controls.

CHAN v Scans down through the channel list. When a menu is displayed, CHAN v points down to items and adjusts menu controls.

MENU Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

POWER Turns the TV on and off.

VOL - Decreases the volume. When in the menu system, VOL - is used to point left to items and adjust menu controls.

VOL + Increases the volume. When in the menu system, VOL + is used to point right to items and adjust menu controls.

Chapter 1: Getting Started

Caution: If you choose to use a stand with your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being pushed off, pulled off, or tipped over. This could cause damage to the TV and/or personal injury.

Front Panel Jacks

Audio IN and Video IN Jacks

 
Receives audio signals from another component, like a VCR or camcorder, when it is connected to these jacks. You may have to purchase audio and video cables from your local electronics store.

To select these front panel jacks, press INPUT on your remote control.

Front Panel Lock

This feature allows you to lock the buttons on the front of the TV. Even when the front panel lock feature is ON, the TV operates with the remote control.

- To lock the buttons on the front of the TV, make sure the TV is turned ON, then press and hold the ON•OFF button on the remote for approximately 5 seconds.
- To turn off the front panel lock, make sure the TV is OFF, then press and hold the ON•OFF button on the remote for approximately 5 seconds. Now the buttons will operate properly.

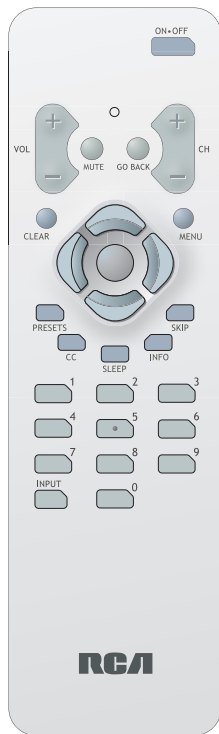

Remote Control Buttons

When operating the remote, point it directly at the front of the TV. Objects between the remote and the remote sensor can block the signal to the TV.

ON•OFF Turns the TV on or off.

VOL +/- Buttons Press VOL + to increase volume, or press VOL – to decrease volume. The volume display appears on the screen when you press the VOL buttons.

MUTE Press to quickly reduce sound to minimum level. Closed captioning (C1) may appear on the screen when you press MUTE. To restore sound and normal picture, press MUTE again or press VOL up.

GO BACK Pressing this button switches the TV back to the last tuned channel. This is useful if you want to watch two channels. Select the first channel you wish to watch. Then select the other channel by pressing two number buttons. The TV changes back and forth between the two channels each time you press this button.

CH +/- Buttons Press to select the next higher or lower channel in memory. You can add or erase channels in memory as desired.

CLEAR Press to clear the screen of all on-screen displays.

Arrow buttons (up, down, left, right) Use the arrow buttons to move through the on-screen menu system.

OK When a menu is on the screen, press to select the item that is highlighted.

MENU Press to bring up the menu screen, then use the arrow buttons to highlight the desired menu choice.

PRESETS Press to return all video settings (color, tint, contrast, brightness, and sharpness) back to the original settings.

Continues on next page...

Chapter 1: Getting Started

Point and Select

To use the on-screen menus, you need to know one rule: point and select.

- Use the **MENU** button to bring up the menu screen. Use the Arrow buttons to move the highlight up and down.

- Press the **OK** button to choose the highlighted item.

CC This button has no functionality with this product*.

SLEEP Sets the TV to automatically turn off in 30, 60, 90 or 120 minutes. Use the right and left arrow buttons to choose the amount of time.

INFO Brings up the channel banner.

SKIP (Commercial Skip) Starts an on-screen countdown timer. While the timer is on the screen, you can browse through other channels. Each press of the SKIP button adds 30 seconds to the timer. When the timer reaches 0:00, the TV will automatically go back to the channel it was on when the timer was started.

Number Buttons (0-9) Press to access any channel number. To select a channel, press two number buttons. For example, press 0 then 6 for channel 6. To select a 3-digit number, press and hold number button 1 until 1— appears on the screen. Then press the other two numbers.

INPUT Press to tune to the Audio/Video input. Press again to return to the regular program material. Make sure the source connected to input jacks is turned on.

*Closed captioning is accessible from the menu system, go to page 8.

TV Main Menu

- 1 Picture Quality
- 2 Screen
- 3 **Channel**
- 4 V-Chip Parental Controls
- 5 Time
- 0 Exit

The TV Main Menu

TV Main Menu

The *TV Main Menu* is your gateway to controlling the TV. It lets you adjust the TV's picture quality, screen, channel settings, parental controls, and time functions.

To select a menu item:

1. Press MENU to bring up the *TV Main Menu*.
2. Use the arrow buttons on the remote control to highlight an item and press MENU to select it. You can also press the corresponding number on the remote.
3. To exit any menu screen, highlight *Exit* and press MENU, or press CLEAR on the remote.

Picture Quality Menu

- 1 Contrast +.....|.....-
- 2 Color +.....|.....-
- 3 Tint +.....|.....-
- 4 Black Level +.....|.....-
- 5 Sharpness +.....|.....-
- 6 Reset Picture Controls
- 7 Exit

The Picture Quality Menu

The Picture Quality Menu

The *Picture Quality Menu* contains five controls that adjust the TV's picture. Use the arrow buttons to adjust the controls.

Contrast Adjusts the difference between light and dark areas of the picture.

Color Adjusts the richness of the color.

Tint Adjusts the balance between the red and green levels allowing you to get the correct fleshtones.

Black Level Adjusts the brightness of the picture.

Sharpness Adjusts the crispness of edges in the picture.

Reset Picture Controls Resets the picture controls to their original settings.

Tip

You can also use the **PRESETS** button on the remote at any time to reset the picture controls to their original settings.

Chapter 2: The Menu System

Screen	
1 CC Display:	OFF
2 CC Mode:	CC1
3 Menu Language:	English
0 Exit	

Closed Caption Modes

CC1: full translation of the primary language in your area

CC2: secondary language translation, simplified English, or whatever is being broadcast in your area

The Screen Menu

The *Screen* menu contains the controls that let you adjust the Closed-Caption display, Closed-Caption mode, and Menu Language.

CC (Closed-Caption) Display Lets you choose the way closed captioning information is shown on the screen. Use the MENU button to toggle between the following:

Off No captioning information displayed.

On Captioning information shown always, when available.

On When Muted Displays captioning information, when available, whenever you press the MUTE button. The captioning information is not displayed when the sound is not muted.

CC (Closed-Caption) Mode Lets you choose which captioning mode is used for displaying captioning information. Use the MENU button to toggle between the choices: CC1 and CC2.

Not all programs are encoded with closed-captioning information. When a program is closed captioned, the letters CC are displayed under the Channel Marker.

Menu Language Lets you select the language of your choice: English, French, or Spanish. Use the MENU button to toggle between the choices.

Channel	
1	Signal Type: CABLE TV
2	Auto Channel Search
3	List
0	Exit

The Channel menu

The Channel Menu

The *Channel* menu contains all the commands used to control your channels, including custom-building your channel list.

Signal Type Displays a toggle that lets you select the current antenna type:

Antenna Choose this if you are currently using an off-air antenna for UHF/VHF TV signals.

Cable TV Choose this if you are currently using cable or a cable box for TV signals.

Auto Channel Search Selecting this option tells the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the channel list. Inactive channels (weak stations or channels with no signal at all) will be removed from the channel list. (You may interrupt this process by pressing the MENU button.)

List Displays a control panel that lets you customize your channel scan list by adding or removing channels. Use the arrow buttons to move between fields and to enter settings. Press MENU to exit.

List	
Chan	Scan
#	List
059	YES
^	
v	
Press MENU to exit.	

List menu

Channel Number Use the CH +/- or arrow buttons to scroll through the channel scan list. You can also enter the channel number directly using the number buttons.

Scan List Indicates whether the channel number is included (YES) or is not included (NO) in the channel scan list.

TV Main Menu

- 1 Picture Quality
- 2 Screen
- 3 Channel
- 4 V-Chip Parental Controls**
- 5 Time
- 0 Exit

Setting V-Chip Parental Controls

The V-Chip software inside your TV comes turned "off," so if you choose to implement it, you must turn it on.

V-Chip Parental Controls

The *V-Chip Parental Controls* menu allows you to program your TV so that children cannot see certain programs. When you select *V-Chip Parental Controls*, you will be prompted to enter your password if controls are locked, or to remember to lock controls if unlocked.

The first three choices in the Parental Controls menu involve software inside your TV (dubbed V-Chip) which allows you to block TV programs and movies based on violence, sex, or other content you believe children should not view. Once you block programs, you or other adults can unblock programs with a password.

 
When turned "on," the software reads a code that most broadcasters send with programs. That code tells the V-Chip the program's age-based rating and content themes. If you have blocked the rating or content themes that the program contains, you will receive the message, "This program is blocked. Change channel or press DISPLAY (INFO) to enter password." when you tune to that program.

Broadcasters are not required to provide content themes or age-based ratings. Rated programs received with no content themes will only be blocked if you block their age-based rating. You can also block movies with a rating of "Not Rated" and "unrated" TV programs.

V-Chip Parental Controls

- 1 **Movie Rating Limit**
- 2 TV Rating Limit
- 3 Unrated Programs: VIEW
- 4 Parental Controls: UNLOCKED
- 0 Exit

Selecting Movie Rating Limit

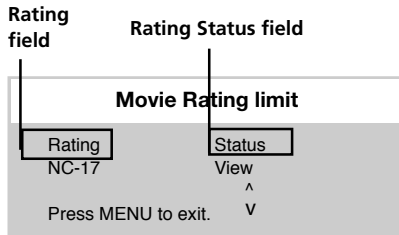

Viewing movie ratings

V-Chip Movie Rating Limit

With the *Movie Rating Limit* you can set movie-viewing limits.

Blocking Movie Ratings

You can automatically block all movie ratings above a specified rating using *Movie Ratings Limit* in the Parental Controls menu.

- **To block all movies above a certain rating:** In the Rating field, use the arrow up and down buttons to highlight the *lowest unacceptable* rating. Then highlight the Rating Status field and press the arrow up and down buttons to change the status from *View* to *Block*. All higher ratings will automatically change to *Block*.
- **To lock your selection(s):** Select *Parental Controls* from the Parental Controls menu. Press the right arrow button to select LOCKED. Enter your password (if you have not already set your password, you will be prompted to enter it again to confirm). The word UNLOCKED will flash to remind you that the Parental Controls are not LOCKED.

Viewing Movie Ratings

After you block movie ratings, you have the option of changing some of the ratings back to *View*.

- **To view movie ratings:** Highlight the Rating field and use the arrow up and down buttons to find the rating you want to view. Then use right arrow button to highlight the Rating Status field, and use arrow up and down buttons to change the status to *View*.

Continues on next page...

Chapter 2: The Menu System

Tip

When you change the status of an age-based rating to Block, the system will automatically block that rating and all of its content themes and all higher ratings and their content themes. When you change the status of a Content Theme to B, the system will automatically block that content theme in the current rating and in all higher ratings. Only the content theme status corresponding to the current age-based rating changes to View (V). Higher rated content themes do not change.

Tip

You can always press MENU to exit back to the previous screen while in the Rating Limit menu.

V-Chip TV Rating Limit


The V-Chip TV Rating Limit lets you decide which TV programs can be viewed. To set TV programming limits:

1. Choose *V-Chip Parental Controls* from the Main menu. If Parental Controls have previously been locked, you must enter your password. If they are not locked, you will get a message reminding you that your limits will not be effective until you lock Parental Controls.
2. Press MENU to continue.
3. Highlight and select *TV Rating Limit*.
4. Once you get to the TV Rating Limit screen, use the arrow buttons on your remote to change the status of a TV program rating or content theme from *View* to *Block*.

The following sections give you more details about how to change the status of TV program limits.

The TV Rating Limit Screen

 
Below is an example of where items are located within the TV Rating Limits screen.

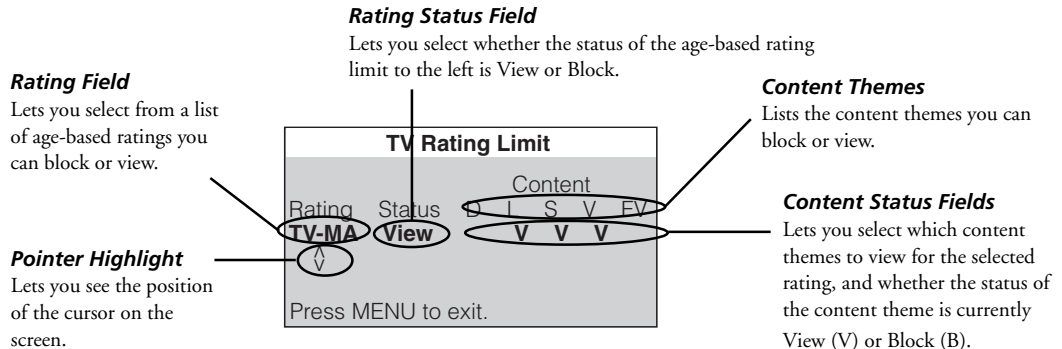


Chapter 2: The Menu System

Age-Based Rating	Description and Content Themes for Age-Based Ratings
TV-MA	Mature Audience Only. Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).
TV-14	Parents Strongly Cautioned. Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).
TV-PG	Parental Guidance Suggested. Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).
TV-G	General Audience. Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).
TV-Y7	Directed to Children 7 years and older. Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence (FV) or comedic violence, or may frighten children under the age of 7.
TV-Y	All Children. Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.

 Chapter 2: The Menu System

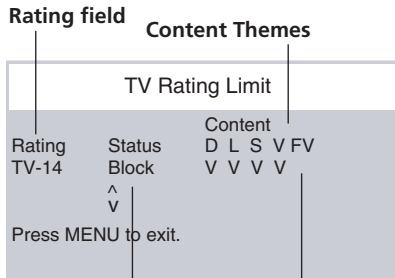

 Blocking age-based ratings and content themes

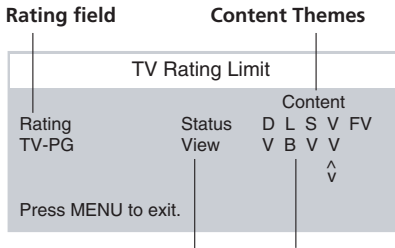

Viewing age-based ratings and content themes

Blocking Age-Based Ratings and Content Themes

You can automatically block all program ratings or content above a specified age-based rating level using the V-Chip *TV Rating Limit* screen.

Refer to the chart at the beginning of this section to learn about each age-based rating and its associated content ratings.

- **To block all programs above a certain rating level:** Highlight the Rating field, then scroll through the ratings using the arrow up and down buttons until the *lowest unacceptable* rating is highlighted. Then use the right arrow button to highlight the Rating Status field and select Block.
- **To block all programs with specific content above a certain rating level:** Content Themes are specific to the rating level. Therefore, you must first highlight the Rating field and scroll through the ratings using the arrow up and down buttons until the *lowest* rating associated with the type of content you want to block is highlighted. Then highlight the Content Theme Status field and change the V to B under the appropriate Content Theme.

Viewing Age-Based Ratings and Content Themes

After you have blocked age-based ratings and content themes, you have the option of selectively changing some of the ratings and themes back to View.

- **To view ratings:** Use the arrow left and right buttons to highlight the Rating Field, then use arrow up and down buttons to change its status from Block to View. When you change a specific rating to View, the Content Status fields corresponding to the unblocked rating become View as well.
- **To view content:** Highlight the Rating field, then use arrow up and down buttons to find the rating whose Content Theme settings you want to change. Next, highlight the Content Theme Status that you want to change using the right arrow button; then use the up and down arrow buttons to change it to V.

While within the Rating Limit screens, pressing PRESETS on the remote will reset all ratings to View and V.

“Unrated” vs. “Not Rated”

All movies are assigned a rating. Some movies are given a rating of Not Rated (NR). You can assign Block or View status to the NR rating in the V-Chip Movie Rating Limit screen.

Not all television programs are assigned a rating (age-based rating). To assign View or Block status to “unrated” television programs, you must use the Unrated Programs option from the V-Chip Parental Controls menu.

Remember

When you want to watch a blocked program, press the INFO button on the remote to enter your password.

Overriding Limits

When you override a blocked program by entering your password, the Parental Controls option on the V-Chip Parental Controls menu will read *Disabled*. In this state, access to the Parental Controls menu is still locked and all controls will be in effect the next time the TV is turned on.

V-Chip Unrated Program Block

Selecting this option lets you decide if programs that the V-Chip recognizes as “unrated” can be viewed.

View All unrated programs are available.

Block No unrated programs are available.

“Unrated” TV programs may include news, sports, political, religious, local, and weather programs, and public announcements. Also, the first few seconds of a channel with rated programming may be blocked (due to a brief delay in transmission of the rating information).

Lock/Unlock Parental Controls

Selecting this option lets you lock and unlock parental controls settings using a password.

You must lock Parental Controls for TV rating and content, movie rating, and unrated program blocks to take effect.

If you forget your password, the password can be reset to 0000 by pressing and holding the volume down and the channel up buttons simultaneously for five seconds. Using this password, you can then access the V-Chip menus.

Chapter 2: The Menu System

Time	
1	Sleep Timer
2	Set Time
3	Wake-up Timer
0	Exit

The Time menu

The Time menu

The *Time* menu contains the controls that let you set the *Sleep Timer*, *Set Time*, and *Wake-up Timer* functions.

Sleep Timer Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off. Use the VOL+/- buttons to increase or decrease the sleep timer by 30 minute increments. Press MENU to exit.

Set Time Displays a control panel that lets you enter the current time. Use the VOL+/- buttons and number buttons to set the time. Press MENU to exit.

Wake-up Timer Displays a control panel that lets you enter the time you wish your television to turn itself on. Use the VOL+/- buttons to set the wake-up timer. To clear the wake-up timer, display the wake-up screen and press PRESETS.

Troubleshooting

If you experience any difficulty with your TV, check these basic remedies before calling your service technician.

TV will not turn on or controls don't work

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is “live” by plugging in something else.
- Try unplugging set for one minute, plugging it back in, and then turning it on again.
- Make sure the Front Panel Lock feature is not set.

Problems with remote

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the TV's remote sensor.
- Maybe batteries in remote are weak, dead or installed incorrectly. Try replacing batteries.

Turns on or off while playing

- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high.
- Maybe the Sleep Timer or Alarm Timer is activated.

Blank screen or black box appears on the screen

- Try another channel.
- Press PRESETS, in case the picture controls are set too low.
- Captioning may be turned on. Check the Closed-Caption Display control panel in the Screen menu.

No sound, picture okay

- Maybe sound is muted. Try pressing volume up button to restore sound.

No picture, no sound, but power is on

- Maybe cable/air function is in wrong position. Try another channel.
- Maybe a vacant channel is tuned. Try another channel.

Sound okay, picture poor

- Check antenna connections.
- Try adjusting sharpness function to improve weak signals.

Chapter 3: Additional Information

Accessory Information

There are various accessories available to complement your TV. Prices are subject to change without notice. All accessories are subject to availability.

A shipping and handling fee will be charged upon ordering, and we are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.

How To Order

To place an order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below.

Use this number only to place an order for accessory items.

1-800-338-0376

 
You can buy some accessories on-line at

www.rca.com




RCR111TB1;
(part number 260602)
price \$19.25

***Remote Control** This is the remote control that came packed with your TV. Replacements or spares can be ordered as needed.*




156265

 ***Dipole Antenna** Designed to attach to the back of your TV. Can be used for both VHF and UHF channels.*



VH81 (3-ft)

 ***Screw-on Antenna Cable** Attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. The ends screw onto the connectors for a secure connection.*



Gold-Tipped Cables
VH89 (6 ft),
VH90(10-ft)

***Push-on Antenna Cable** Attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. Ends push on for a quick connection.*

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- 90 days for labor charges.
- One year for parts.
- Two years for the picture tube.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Television Service Center the labor charges to repair your television.
- Pay any Authorized RCA Television Service Center for the new or, at our option, refurbished replacement parts and picture tube required to repair your television.

How you get service:

- For screen sizes of 26" and smaller: Take your RCA television to any Authorized RCA Television Service Center and pick up when repairs are complete.
- For screen sizes larger than 26": Request home service from any Authorized RCA Television Service Center, provided that your television is located within the geographic territory covered by an Authorized RCA Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your home.
- To identify your nearest Authorized RCA Television Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your sales receipt or other evidence of purchase date or first rental.

Continues on next page...

Chapter 3: Additional Information

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Customer replacement fuses.
- Images burnt onto the screen.
- A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A television purchased or serviced outside the U.S.A.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Visit the RCA web site at www.rca.com

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

Thomson Inc.

**10330 North Meridian Street
Indianapolis, IN 46290**

©2004 Thomson Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in Thailand
TOCOM 1558177E

