

BLM LIBRARY  
88063725

#1033694490


Master ID: 88063725

TECHNICAL  
NOTE  
8

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT  
PORTLAND SERVICE CENTER  
P. O. Box 3861  
Portland, Oregon 97208

1525.4  
1400-451  
P-67-165

QL  
84.2  
.L35  
no.8

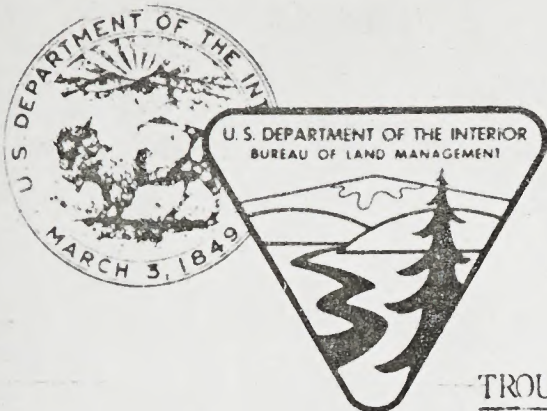

TROUGH FLOAT VALVES

The present practice to ensure proper working float valves is to replace the complete unit. The parts which become worn most of the time are the rubber washer or the leather seal. (Picture 1 & 2)



Picture 1

A float valve as ordered thru our catalogs



Picture 2

Normal disassembly of the valve

By examination it was found that the rubber washer and leather seal can be removed easily. These items can be purchased through local hardware stores and saves the purchasing of a new float valve unit. These repair parts can be carried for emergencies also. (Picture 3 & 4)



Picture 3

The washer shown removed



Picture 4

The washer and leather seal shown removed

