

## **Audio Controls**

### **Music (mp3), Books (audio), Recording (you created)**

Note: If you are loading audio books from another source other than Bookshare, RFBD, or NFB ect.. they will most likely be a MP3 file. Once loaded they will appear in your music player. Create an individual play list for each book and move the files there for continuous reading.

No matter what kind of audio you play, the keys to start, stop, rewind, and forward are the same.

#### **Play:Select**

To start playing or to resume from paused audio, press Select. Music Player resumes playback from where you paused it, or it begins playback at the start of the content.

#### **Pause: Select**


To stop playing your music, podcast, or recording, press Select. Music Player immediately pauses playback.

#### **Increase and Decrease Playback Rate:** Up and Down Arrows



To make it read faster, press Up Arrow. Down Arrow will make read slower.

#### **Rewind and Forward:** Hold Left and Right Arrow

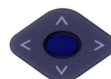

To rewind hold down the left arrow key. To forward hold right right arrow. The audio player RR/FF through the content and will play back a sample to tell you where you are. Music Player will also announces the amount of time it has moved.

You have to hold it down to RR/FF and release to stop the RR/FF

#### **Back and Next Track:** Left and Right Arrow

To move one track/song forward/backward press right or left arrow. The audio player will move to the next track and starts playing it, or it will move to the beginning of the current track, if your more than three seconds into the track and play. **To move to the previous track while more than three seconds into a song, press Left Arrow twice.** The audio player will then move to the previous song and play.

#### **Move Back or Forward by 10 Seconds:** ← 1 and 3 →

#### **Move Back or Forward One Minute:** ← 4 and 6 →

#### **Move Back or Forward 10 Minutes:** ← 7 and 9 →