

Playing a DVD or VHS tape

1. Power on DVD/VHS player (image shown below)
2. Using the DVD/VCR Selector button, choose either DVD or VCR
3. Insert DVD or VHS tape
4. On the LCD screen found at the lectern, choose which screen (or both, blue/red) to display the video. (e.g. within the red square press DVD/VCR to display video on the red screen)
5. On the LCD Screen, Press the DVD/VCR button found near the top right
(a remote control can be found in the drawer below the DVD/VCR player)
6. Control all functions of the DVD or VCR player within the LCD screen
7. When finished push stop, and then HOME to return to LCD screen
8. Press EJECT on the DVD/VCR player (buttons show below)

