

K2887 REINFORCING PLATE FITTING INSTRUCTIONS

NOTE

- When installed in accordance with these instructions, this component will provide the required degree of protection to the wearer in most type of accidents.
- The seat belt assembly and any accessories should be installed by a competent mechanic or an authorized seatbelt restraint fitter at an appropriate fitting station.
 - These fitting instructions should be read carefully before commencing installation of belt.

REINFORCING PLATE INFORMATION

- Reinforcing plate measures approximately (W) 50mm x (H) 80mm x (T) 3mm. as shown in Fig.1.
- Check with your local Road Transport Authority, Authorized Seatbelt Restraint fitter or Engineer overseeing the installation as to requirements regarding:
 - Placement of reinforcing plate and suitability for application.
 - Position of reinforcing plate and structural feasibility of new mounting point.
 - Angle of reinforcing plate in relation to direction of pull or load.
- Use the reinforcing plate to attach the retractor as shown in Fig. 2.
- The reinforcing plate can also be used to attach the anchor plate. (Fig. 3).

WARNING!

- To the installer: Please read the whole of the instructions for installation carefully and consult Klippan Safety Products in the event of doubt as to the method of installation.
- Ensure that the correct installation diagram is followed for your particular vehicle.
- Install the belts directly in accordance with instructions to obtain maximum efficiency. Any deviation could adversely affect the performance of the belt in an accident.
- Any work carried out relating to the modification or creation of new structural seatbelt mounting points needs to be checked and approved by an authorized or qualified engineer.

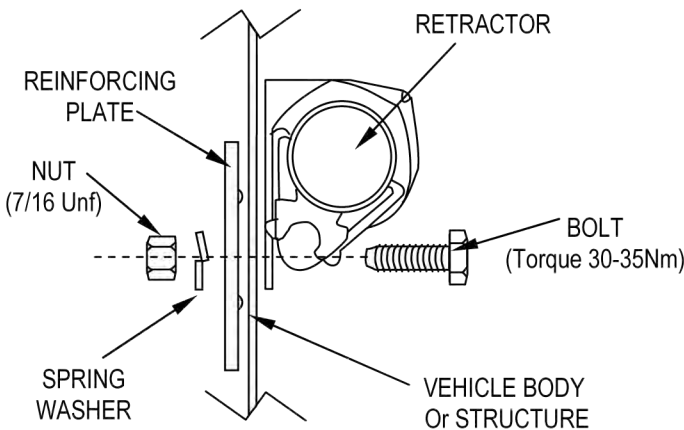


FIGURE 2

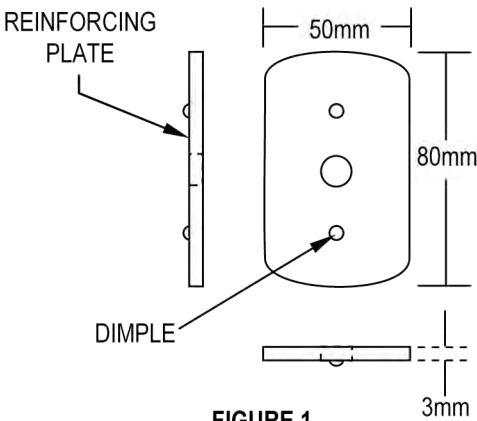


FIGURE 1

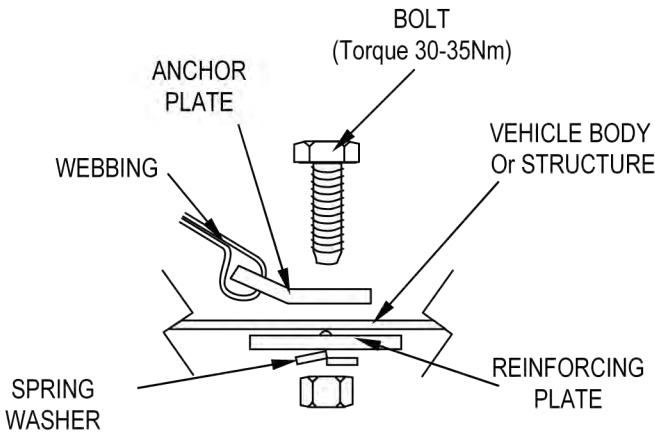


FIGURE 3