

## CONTENTS

### PREFACE

#### 1 INTRODUCTION

#### 2 POINT-TO-POINT

- 2.1 Introduction
- 2.2 Opening the communication link
- 2.3 Logically connecting the line
- 2.4 Sending a message
- 2.5 Receiving a message
- 2.6 Logically disconnecting the line
- 2.7 Closing the communication link
- 2.8 Data set control instructions
  - 2.8.1 Set status
  - 2.8.2 Read status
  - 2.8.3 Read/reset statistics
  - 2.8.4 Set timeout

#### 3 MULTIPOINT

- 3.1 Introduction
- 3.2 Opening the communication link
- 3.3 Logically connecting the line
- 3.4 Sending a message
- 3.5 Receiving a message
- 3.6 Logically disconnecting the line
- 3.7 Closing the communication link
- 3.8 Data set control instructions
  - 3.8.1 Read status
  - 3.8.2 Read/reset statistics

#### 4 NETWORKS

- 4.1 Introduction
- 4.2 Opening the communication link
- 4.3 Logically connecting the line
  - 4.3.1 Connect Passive
  - 4.3.2 Connect Active
- 4.4 Sending a message
- 4.5 Receiving a message
- 4.6 Logically disconnecting the line
- 4.7 Closing the communication link
- 4.8 Data set control instructions
  - 4.8.1 Read status
  - 4.8.2 Read/Reset statistics

