

# Flip Cameras QuickStart

## Recording Video

- 1 Power the flip camera **ON**
- 2 Press the red, round button on the camera to **RECORD** and to **STOP RECORDING**
- 3 Use the **PLUS** and **MINUS** buttons to **ZOOM** in and out

## Downloading Video

- 1 Power the flip camera **ON**
- 2 Release the **USB LATCH** to extend the **USB ARM**
- 3 Use the **USB ARM** to plug the flip camera into a **USB PORT** on the computer



- 4 If applicable, allow the **FOUND NEW HARDWARE** wizard to install drivers and recognize the flip camera

***Note:** The following bubbles may appear in the notification area:*

5. Select the **OPEN FOLDER TO VIEW FILES** option
6. Double-click the **DCIM** folder
7. Double-click the **100VIDEO** folder
8. **RIGHT-CLICK** the preferred video and select **COPY**
9. Navigate to your H:// drive and save there
10. Select **EDIT > PASTE**



## Playing a Video

- 1 Repeat steps 1-7 in **DOWNLOADING VIDEO** section above
- 2 **DOUBLE-CLICK** the preferred video

*The video should open in Windows Media Player*

*Updated September 2008*

## ***Deleting Video***

***Note:*** Before checking the flip camera back into the library, please **DELETE** recorded video so the next user will have plenty of storage space.

- 1 Repeat steps 1-7 in **DOWNLOADING VIDEO** section above
- 2 **RIGHT-CLICK** the preferred video and select **DELETE**

## ***Safely Removing the Flip Camera***

- 1 Click the **SAFELY REMOVE HARDWARE** icon in the notification area (found in the bottom, right corner of the screen next to the clock)



- 2 Click on the **SAFELY REMOVE USB MASS STORAGE DEVICE**

option that appears on the pop-up menu

3. When the **SAFE TO REMOVE HARDWARE MESSAGE** appears, pull the flip camera out of the USB port and power the camera **OFF**



## ***Additional Help***

For additional help on the flip camera, navigate to the **SUPPORT** section of the web site:

<http://theflip.com/index.shtml>