

Using the Flip Camera

 
Record and Play

Recording Videos


1. Press record button to start/stop.
2. Press up/down keys to zoom in/out.

Playing Videos

3. Press play button to start/stop.
4. Press left/right keys to view previous/next.

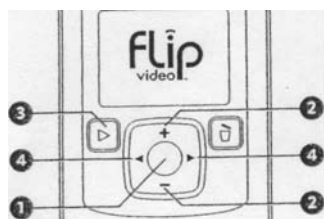

Camcorder Features

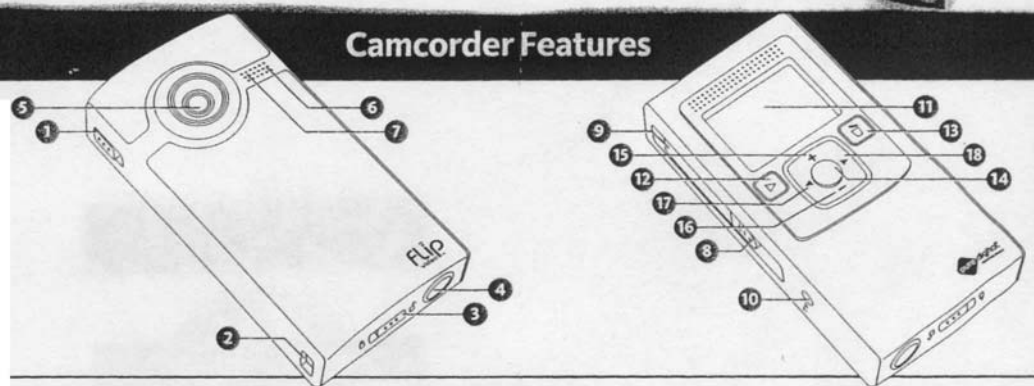 

10. Power Switch
11. Wrist Strap Hook
12. Battery latch
13. Tripod Mount
14. Lens
15. Microphone
16. Recording Indicator
17. USB Latch
18. USB Arm

1. TV Output Port
2. Screen
3. Play Button
4. Delete Button
5. Record Button (for start and stop)
6. Up Key (for zoom in)
7. Down Key (for zoom out)
8. Left Key (to view previous)
9. Right Key (to view next)

Transfer FLIP Video to Computer

1. With the FLIP video camera off, flip the sliding button to eject the USB connection on the camera. Plug the FLIP video camera in to a USB port on the front (or back) of the computer.
2. Wait for the software to upload.
3. Click OK to "View your FLIP Camcorder Videos."
4. A window will display your each video in a large thumbnail form. (It make take several minutes to "read" the videos for preview, depending upon the length of videos taken.)
5. Click the purple Share Videos button (on the left).
6. In the video thumbnail preview window, click on the Select All button (if you want to transfer all videos), or click to select only the videos to transfer.
7. Top right-under Public Online Sharing, click the green Continue button.
8. Top right-under Upload to Other websites, click the green Continue button.
9. A "preparing videos" status window will be displayed.
10. Click the red Close button when it has finished preparing the videos.
11. Close out (red X) of the two FLIP windows.
12. Pull the FLIP video camera out of the USB port. Close the USB connector and snap it back into place on the side of the camera. (The 'camera should turn itself off.)
13. On the desktop look for a folder called "Flip Videos for Uploading."
14. Open the Flip Videos for Uploading folder.
15. Inside you see should see a folder with today's date.
16. Inside that folder will be another folder called Videos Prepared for Any Website.
17. The videos you transferred to the computer will be inside that folder. You can rename your videos, but you MUST keep the .WMV extension.



**For Editing in Windows Movie Maker go
to: <http://fchslibrary.wikispaces.com/> and link to Tutorials**