

# Administration Guide

**FortiOS 7.2.6**





**FORTINET DOCUMENT LIBRARY**

<https://docs.fortinet.com>

**FORTINET VIDEO GUIDE**

<https://video.fortinet.com>

**FORTINET BLOG**

<https://blog.fortinet.com>

**CUSTOMER SERVICE & SUPPORT**

<https://support.fortinet.com>

**FORTINET TRAINING & CERTIFICATION PROGRAM**

<https://www.fortinet.com/training-certification>

**FORTINET TRAINING INSTITUTE**

<https://training.fortinet.com>

**FORTIGUARD CENTER**

<https://www.fortiguard.com>

**END USER LICENSE AGREEMENT**

<https://www.fortinet.com/doc/legal/EULA.pdf>

**FEEDBACK**

Email: [techdoc@fortinet.com](mailto:techdoc@fortinet.com)



September 28, 2023

FortiOS 7.2.6 Administration Guide

01-726-791905-20230928



# TABLE OF CONTENTS

<b>Change Log</b>	<b>23</b>
<b>Getting started</b>	<b>24</b>
Differences between models	24
Low encryption models	24
Using the GUI	24
Connecting using a web browser	25
Menus	25
Tables	26
Entering values	28
GUI-based global search	30
Loading artifacts from a CDN	31
Using the CLI	31
Connecting to the CLI	31
CLI basics	34
Command syntax	40
Subcommands	43
Permissions	45
Using FortiExplorer Go and FortiExplorer	45
FortiExplorer Go	45
FortiExplorer management	46
Getting started with FortiExplorer	46
Connecting FortiExplorer to a FortiGate with WiFi	49
Configure FortiGate with FortiExplorer using BLE	50
Running a security rating	53
Basic administration	54
Basic configuration	54
Registration	57
FortiCare and FortiGate Cloud login	62
Transfer a device to another FortiCloud account	64
Configuration backups	67
Deregistering a FortiGate	75
Fortinet Developer Network access	77
LEDs	80
Alarm levels	84
Troubleshooting your installation	84
<b>Dashboards and Monitors</b>	<b>87</b>
Using dashboards	87
Using widgets	88
Widgets	90
Viewing device dashboards in the Security Fabric	92
Creating a fabric system and license dashboard	93
Example	93
Dashboards	94
Resetting the default dashboard template	95



Status dashboard .....	95
Security dashboard .....	98
Network dashboard .....	100
Users & Devices .....	108
WiFi dashboard .....	112
<b>Monitors .....</b>	<b>118</b>
Non-FortiView monitors .....	118
FortiView monitors .....	118
FortiView monitors and widgets .....	119
Adding FortiView monitors .....	120
Using the FortiView interface .....	123
Enabling FortiView from devices .....	126
FortiView sources .....	128
FortiView Sessions .....	129
FortiView Top Source and Top Destination Firewall Objects monitors .....	131
Viewing top websites and sources by category .....	133
Cloud application view .....	136
<b>Network .....</b>	<b>147</b>
<b>Interfaces .....</b>	<b>147</b>
Interface settings .....	149
Physical interface .....	174
VLAN .....	175
Aggregation and redundancy .....	191
Loopback interface .....	195
Software switch .....	195
Hardware switch .....	197
Zone .....	201
Virtual wire pair .....	203
Enhanced MAC VLAN .....	210
VXLAN .....	213
<b>DNS .....</b>	<b>237</b>
Important DNS CLI commands .....	238
DNS domain list .....	241
FortiGate DNS server .....	242
DDNS .....	245
DNS latency information .....	248
DNS over TLS and HTTPS .....	250
DNS troubleshooting .....	255
<b>Explicit and transparent proxies .....</b>	<b>256</b>
Explicit web proxy .....	257
FTP proxy .....	260
Transparent proxy .....	262
Proxy policy addresses .....	265
Proxy policy security profiles .....	272
Explicit proxy authentication .....	276
Transparent web proxy forwarding .....	282
Upstream proxy authentication in transparent proxy mode .....	286
Multiple dynamic header count .....	287



Restricted SaaS access .....	290
Explicit proxy and FortiGate Cloud Sandbox .....	298
Proxy chaining .....	300
WAN optimization SSL proxy chaining .....	305
Agentless NTLM authentication for web proxy .....	313
Multiple LDAP servers in Kerberos keytabs and agentless NTLM domain controllers .....	316
Learn client IP addresses .....	317
Explicit proxy authentication over HTTPS .....	318
mTLS client certificate authentication .....	320
CORS protocol in explicit web proxy when using session-based, cookie-enabled, and captive portal-enabled SAML authentication .....	325
HTTP connection coalescing and concurrent multiplexing for explicit proxy .....	329
DHCP servers and relays .....	331
Default DHCP server for low-end FortiGates .....	331
Basic configuration .....	332
DHCP options .....	335
DHCP addressing mode on an interface .....	342
VCI pattern matching for DHCP assignment .....	345
FortiGate DHCP works with DDNS to allow FQDN connectivity to leased IP addresses .....	347
Static routing .....	347
Routing concepts .....	347
Policy routes .....	360
Equal cost multi-path .....	363
Dual internet connections .....	367
Dynamic routing .....	372
RIP .....	374
OSPF .....	393
BGP .....	410
BFD .....	448
Routing objects .....	457
Multicast .....	466
Multicast routing and PIM support .....	466
Configuring multicast forwarding .....	467
FortiExtender .....	471
WAN extension mode .....	471
LAN extension mode .....	471
Adding a FortiExtender .....	472
Direct IP support for LTE/4G .....	474
Sample LTE interface .....	475
Limitations .....	476
LLDP reception .....	477
Virtual routing and forwarding .....	479
Implementing VRF .....	480
VRF routing support .....	481
Route leaking between VRFs with BGP .....	486
Route leaking between multiple VRFs .....	489
VRF with IPv6 .....	499



IBGP and EBGP support in VRF .....	503
Support cross-VRF local-in and local-out traffic for local services .....	505
NetFlow .....	508
Verification and troubleshooting .....	509
NetFlow templates .....	509
NetFlow on FortiExtender and tunnel interfaces .....	522
sFlow .....	526
Configuring sFlow .....	526
Link monitor .....	529
Link monitor with route updates .....	529
Enable or disable updating policy routes when link health monitor fails .....	531
Add weight setting on each link health monitor server .....	533
SLA link monitoring for dynamic IPsec and SSL VPN tunnels .....	536
IPv6 .....	539
IPv6 overview .....	539
IPv6 quick start .....	540
Neighbor discovery proxy .....	544
IPv6 address assignment .....	545
NAT66, NAT46, NAT64, and DNS 64 .....	557
DHCPv6 relay .....	567
IPv6 tunneling .....	568
IPv6 configuration examples .....	579
FortiGate LAN extension .....	611
Diagnostics .....	617
Using the packet capture tool .....	617
Using the debug flow tool .....	621
<b>SD-WAN .....</b>	<b>626</b>
SD-WAN overview .....	626
SD-WAN components and design principles .....	626
SD-WAN designs and architectures .....	629
SD-WAN quick start .....	630
Configuring the SD-WAN interface .....	631
Adding a static route .....	632
Selecting the implicit SD-WAN algorithm .....	632
Configuring firewall policies for SD-WAN .....	633
Link monitoring and failover .....	633
Results .....	635
Configuring SD-WAN in the CLI .....	638
SD-WAN members and zones .....	640
Topology .....	641
Configuring SD-WAN member interfaces .....	641
Configuring SD-WAN zones .....	643
Using SD-WAN zones .....	644
Specify an SD-WAN zone in static routes and SD-WAN rules .....	646
Performance SLA .....	651
Performance SLA overview .....	651
Link health monitor .....	656
Monitoring performance SLA .....	658

Passive WAN health measurement .....	663
Passive health-check measurement by internet service and application .....	668
Mean opinion score calculation and logging in performance SLA health checks .....	672
Embedded SD-WAN SLA information in ICMP probes .....	675
SD-WAN application monitor using FortiMonitor .....	683
SD-WAN rules .....	686
SD-WAN rules overview .....	686
Implicit rule .....	694
Automatic strategy .....	698
Manual strategy .....	699
Best quality strategy .....	700
Lowest cost (SLA) strategy .....	704
Maximize bandwidth (SLA) strategy .....	707
Manual interface speedtest .....	710
Scheduled interface speedtest .....	711
SD-WAN traffic shaping and QoS .....	713
SDN dynamic connector addresses in SD-WAN rules .....	718
Application steering using SD-WAN rules .....	721
DSCP tag-based traffic steering in SD-WAN .....	734
ECMP support for the longest match in SD-WAN rule matching .....	741
Override quality comparisons in SD-WAN longest match rule matching .....	743
Use an application category as an SD-WAN rule destination .....	746
Advanced routing .....	750
Local out traffic .....	750
Using BGP tags with SD-WAN rules .....	756
BGP multiple path support .....	760
Controlling traffic with BGP route mapping and service rules .....	762
Applying BGP route-map to multiple BGP neighbors .....	769
Using multiple members per SD-WAN neighbor configuration .....	774
VPN overlay .....	780
ADVPN and shortcut paths .....	781
SD-WAN monitor on ADVPN shortcuts .....	794
Hold down time to support SD-WAN service strategies .....	795
SD-WAN integration with OCVPN .....	797
Adaptive Forward Error Correction .....	804
Dual VPN tunnel wizard .....	808
Duplicate packets on other zone members .....	809
Duplicate packets based on SD-WAN rules .....	812
Speed tests run from the hub to the spokes in dial-up IPsec tunnels .....	813
Interface based QoS on individual child tunnels based on speed test results .....	820
SD-WAN in large scale deployments .....	823
Advanced configuration .....	834
SD-WAN with FGCP HA .....	834
Configuring SD-WAN in an HA cluster using internal hardware switches .....	841
SD-WAN configuration portability .....	845
SD-WAN segmentation over a single overlay .....	851
Matching BGP extended community route targets in route maps .....	866
Copying the DSCP value from the session original direction to its reply direction .....	871
SD-WAN cloud on-ramp .....	874

Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM .....	875
Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway .....	880
Configuring the VIP to access the remote servers .....	883
Configuring the SD-WAN to steer traffic between the overlays .....	886
Verifying the traffic .....	890
Troubleshooting SD-WAN .....	896
Tracking SD-WAN sessions .....	897
Understanding SD-WAN related logs .....	897
SD-WAN related diagnose commands .....	900
SD-WAN bandwidth monitoring service .....	904
Using SNMP to monitor health check .....	907
<b>Zero Trust Network Access .....</b>	<b>911</b>
Zero Trust Network Access introduction .....	911
ZTNA application gateway and IP/MAC based access control .....	911
ZTNA telemetry, tags, and policy enforcement .....	912
Application gateway .....	912
Basic ZTNA configuration components .....	913
Basic ZTNA configuration .....	913
Establish device identity and trust context with FortiClient EMS .....	925
ZTNA scalability support for concurrent endpoints .....	930
SSL certificate based authentication .....	932
Full versus simple ZTNA policies .....	934
ZTNA advanced configurations .....	941
Access control of unmanageable and unknown devices .....	941
HTTP2 connection coalescing and concurrent multiplexing for ZTNA .....	948
Mapping ZTNA virtual host and TCP forwarding domains to the DNS database .....	950
ZTNA configuration examples .....	955
ZTNA HTTPS access proxy example .....	956
ZTNA HTTPS access proxy with basic authentication example .....	966
ZTNA TCP forwarding access proxy example .....	973
ZTNA SSH access proxy example .....	979
ZTNA application gateway with SAML authentication example .....	986
ZTNA application gateway with SAML and MFA using FortiAuthenticator example .....	990
ZTNA IP MAC based access control example .....	1006
ZTNA IPv6 examples .....	1013
ZTNA Zero Trust application gateway example .....	1019
ZTNA access proxy with KDC to access shared drives .....	1020
ZTNA troubleshooting and debugging commands .....	1025
Troubleshooting usage and output .....	1026
ZTNA troubleshooting scenarios .....	1030
ZTNA access control .....	1030
IP/MAC based access control .....	1032
Other useful CLI commands .....	1034
<b>Policy and Objects .....</b>	<b>1035</b>
Policies .....	1035
Firewall policy .....	1036
NGFW policy .....	1049



Local-in policy .....	1065
DoS policy .....	1069
Access control lists .....	1076
Interface policies .....	1077
Source NAT .....	1078
Destination NAT .....	1094
Examples and policy actions .....	1118
Address objects .....	1151
Address Types .....	1152
Address Group .....	1153
Subnet .....	1154
Dynamic policy — fabric devices .....	1154
IP range .....	1156
FQDN addresses .....	1157
Using wildcard FQDN addresses in firewall policies .....	1158
Geography based addresses .....	1160
IPv6 geography-based addresses .....	1163
Wildcard addressing .....	1165
Interface subnet .....	1166
Address group .....	1167
Address folders .....	1168
Allow empty address groups .....	1169
Address group exclusions .....	1170
FSSO dynamic address subtype .....	1171
ClearPass integration for dynamic address objects .....	1175
FortiNAC tag dynamic address .....	1178
MAC addressed-based policies .....	1181
ISDB well-known MAC address list .....	1182
IPv6 MAC addresses and usage in firewall policies .....	1184
Protocol options .....	1186
Log oversized files .....	1186
RPC over HTTP .....	1186
Protocol port mapping .....	1186
Common options .....	1186
Web options .....	1187
Email options .....	1188
Traffic shaping .....	1188
Configuration methods .....	1189
Traffic shaping policy .....	1190
Traffic shaping policies .....	1191
Traffic shaping profiles .....	1194
Traffic shapers .....	1204
Global traffic prioritization .....	1216
DSCP matching and DSCP marking .....	1219
Examples .....	1223
Internet Services .....	1239
Using Internet Service in a policy .....	1240
Using custom Internet Service in policy .....	1244
Using extension Internet Service in policy .....	1245

Global IP address information database .....	1248
IP reputation filtering .....	1250
Internet service groups in policies .....	1251
Allow creation of ISDB objects with regional information .....	1255
Internet service customization .....	1257
Look up IP address information from the Internet Service Database page .....	1258
Internet Service Database on-demand mode .....	1259
<b>Security Profiles .....</b>	<b>1262</b>
Inspection modes .....	1262
Flow mode inspection (default mode) .....	1263
Proxy mode inspection .....	1263
Inspection mode feature comparison .....	1265
Antivirus .....	1269
Protocol comparison between antivirus inspection modes .....	1270
Other antivirus differences between inspection modes .....	1270
AI-based malware detection .....	1271
Configuring an antivirus profile .....	1271
Proxy mode stream-based scanning .....	1274
Databases .....	1278
Content disarm and reconstruction .....	1279
FortiGuard outbreak prevention .....	1281
External malware block list .....	1283
Malware threat feed from EMS .....	1286
Checking flow antivirus statistics .....	1288
CIFS support .....	1290
Using FortiSandbox post-transfer scanning with antivirus .....	1296
Using FortiSandbox inline scanning with antivirus .....	1298
FortiSandbox database .....	1308
Using FortiNDR inline scanning with antivirus .....	1310
Exempt list for files based on individual hash .....	1313
Web filter .....	1314
URL filter .....	1315
FortiGuard filter .....	1320
Credential phishing prevention .....	1327
Additional antiphishing settings .....	1329
Usage quota .....	1332
Web content filter .....	1335
Advanced filters 1 .....	1338
Advanced filters 2 .....	1341
Web filter statistics .....	1345
URL certificate blocklist .....	1346
Websense Integrated Services Protocol .....	1346
Inspecting HTTP3 traffic .....	1347
Configuring web filter profiles with Hebrew domain names .....	1349
Video filter .....	1354
Configuring a video filter profile .....	1354
Filtering based on FortiGuard categories .....	1354
Filtering based on YouTube channel .....	1359

Replacement messages displayed in blocked videos .....	1364
DNS filter .....	1366
DNS filter behavior in proxy mode .....	1367
FortiGuard DNS rating service .....	1367
Configuring a DNS filter profile .....	1368
FortiGuard category-based DNS domain filtering .....	1372
Botnet C&C domain blocking .....	1375
DNS safe search .....	1378
Local domain filter .....	1380
DNS translation .....	1385
Applying DNS filter to FortiGate DNS server .....	1388
DNS inspection with DoT and DoH .....	1389
Troubleshooting for DNS filter .....	1392
Application control .....	1395
Configuring an application sensor .....	1396
Basic category filters and overrides .....	1397
Excluding signatures in application control profiles .....	1400
Port enforcement check .....	1402
Protocol enforcement .....	1402
SSL-based application detection over decrypted traffic in a sandwich topology .....	1404
Matching multiple parameters on application control signatures .....	1405
Application signature dissector for DNP3 .....	1408
Blocking QUIC manually .....	1408
Intrusion prevention .....	1410
Signature-based defense .....	1412
Configuring an IPS sensor .....	1415
IPS configuration options .....	1418
IPS signature filter options .....	1423
IPS with botnet C&C IP blocking .....	1426
IPS signatures for the industrial security service .....	1431
IPS sensor for IEC 61850 MMS protocol .....	1432
SCTP filtering capabilities .....	1434
File filter .....	1437
Configuring a file filter profile .....	1439
Supported file types .....	1443
Email filter .....	1445
Protocol comparison between email filter inspection modes .....	1446
Configuring an email filter profile .....	1446
Local-based filters .....	1447
FortiGuard-based filters .....	1454
Third-party-based filters .....	1456
Filtering order .....	1456
Protocols and actions .....	1458
Configuring webmail filtering .....	1459
Data leak prevention .....	1460
Protocol comparison between DLP inspection modes .....	1461
Archiving .....	1461
Logging and blocking files by file name .....	1461

Basic DLP settings .....	1462
Advanced DLP configurations .....	1465
DLP examples .....	1467
DLP fingerprinting .....	1481
VoIP solutions .....	1485
General use cases .....	1486
NAT46 and NAT64 for SIP ALG .....	1490
SIP message inspection and filtering .....	1498
SIP ALG and SIP session helper .....	1503
SIP pinholes .....	1508
SIP over TLS .....	1510
Voice VLAN auto-assignment .....	1512
Scanning MSRP traffic .....	1513
ICAP .....	1517
ICAP configuration example .....	1518
ICAP response filtering .....	1520
Secure ICAP clients .....	1522
ICAP scanning with SCP and FTP .....	1523
Web application firewall .....	1526
Protecting a server running web applications .....	1527
SSL & SSH Inspection .....	1528
Configuring an SSL/SSH inspection profile .....	1529
Certificate inspection .....	1532
Deep inspection .....	1533
Protecting an SSL server .....	1536
Handling SSL offloaded traffic from an external decryption device .....	1537
SSH traffic file scanning .....	1539
Redirect to WAD after handshake completion .....	1540
HTTP/2 support in proxy mode SSL inspection .....	1541
Define multiple certificates in an SSL profile in replace mode .....	1542
Disabling the FortiGuard IP address rating .....	1544
Custom signatures .....	1545
Configuring custom signatures .....	1546
Blocking applications with custom signatures .....	1547
Filters for application control groups .....	1549
Application groups in traffic shaping policies .....	1552
Overrides .....	1556
Web rating override .....	1556
Using local and remote categories .....	1564
Web profile override .....	1566
Profile groups .....	1570
<b>VPN .....</b>	<b>1573</b>
IPsec VPNs .....	1573
General IPsec VPN configuration .....	1573
Site-to-site VPN .....	1603
Remote access .....	1656
Aggregate and redundant VPN .....	1700
Overlay Controller VPN (OCVPN) .....	1744

ADVPN .....	1775
Fabric Overlay Orchestrator .....	1809
Other VPN topics .....	1829
VPN IPsec troubleshooting .....	1868
SSL VPN .....	1876
SSL VPN best practices .....	1876
SSL VPN quick start .....	1879
SSL VPN tunnel mode .....	1886
SSL VPN web mode .....	1896
SSL VPN authentication .....	1913
SSL VPN to IPsec VPN .....	2004
SSL VPN protocols .....	2011
Configuring OS and host check .....	2014
FortiGate as SSL VPN Client .....	2020
Dual stack IPv4 and IPv6 support for SSL VPN .....	2029
Disable the clipboard in SSL VPN web mode RDP connections .....	2040
SSL VPN IP address assignments .....	2045
Using SSL VPN interfaces in zones .....	2047
SSL VPN troubleshooting .....	2050
<b>User &amp; Authentication .....</b>	<b>2054</b>
Endpoint control and compliance .....	2055
Per-policy disclaimer messages .....	2055
Compliance .....	2057
FortiGuard distribution of updated Apple certificates .....	2059
Integrate user information from EMS and Exchange connectors in the user store .....	2060
User definition and groups .....	2063
Users .....	2063
User groups .....	2065
Retail environment guest access .....	2072
User and user group timeouts .....	2075
LDAP servers .....	2076
Configuring an LDAP server .....	2076
Enabling Active Directory recursive search .....	2079
Configuring LDAP dial-in using a member attribute .....	2080
Configuring wildcard admin accounts .....	2081
Configuring least privileges for LDAP admin account authentication in Active Directory .....	2083
Tracking users in each Active Directory LDAP group .....	2084
Tracking rolling historical records of LDAP user logins .....	2087
Configuring client certificate authentication on the LDAP server .....	2090
RADIUS servers .....	2092
Configuring a RADIUS server .....	2093
Using multiple RADIUS servers .....	2094
RADIUS AVPs and VSAs .....	2097
Restricting RADIUS user groups to match selective users on the RADIUS server .....	2099
Configuring RADIUS SSO authentication .....	2101
RSA ACE (SecurID) servers .....	2107
Support for Okta RADIUS attributes filter-Id and class .....	2111

Sending multiple RADIUS attribute values in a single RADIUS Access-Request .....	2113
Traffic shaping based on dynamic RADIUS VSAs .....	2113
RADIUS Termination-Action AVP in wired and wireless scenarios .....	2120
TACACS+ servers .....	2124
SAML .....	2126
Outbound firewall authentication for a SAML user .....	2126
SSL VPN with FortiAuthenticator as a SAML IdP .....	2128
Using a browser as an external user-agent for SAML authentication in an SSL VPN connection .....	2128
SAML authentication in a proxy policy .....	2132
Configuring SAML SSO in the GUI .....	2136
Outbound firewall authentication with Azure AD as a SAML IdP .....	2142
Authentication settings .....	2153
FortiTokens .....	2155
FortiToken Mobile quick start .....	2156
FortiToken Cloud .....	2164
Registering hard tokens .....	2164
Managing FortiTokens .....	2166
FortiToken Mobile Push .....	2168
Synchronizing LDAP Active Directory users to FortiToken Cloud using the two-factor filter .....	2170
Troubleshooting and diagnosis .....	2173
Configuring the maximum log in attempts and lockout period .....	2177
PKI .....	2177
Configuring a PKI user .....	2177
Using the SAN field for LDAP-integrated certificate authentication .....	2181
Configuring firewall authentication .....	2185
Creating a locally authenticated user account .....	2185
Creating a RADIUS-authenticated user account .....	2186
Creating an FSSO user group .....	2187
Creating a firewall user group .....	2189
Defining policy addresses .....	2189
Creating security policies .....	2190
FSSO .....	2191
FSSO polling connector agent installation .....	2194
FSSO using Syslog as source .....	2197
Configuring the FSSO timeout when the collector agent connection fails .....	2199
Authentication policy extensions .....	2201
Configuring the FortiGate to act as an 802.1X supplicant .....	2202
Example .....	2203
Include usernames in logs .....	2204
Install and configure FSSO Agent .....	2205
Configure the FortiGate .....	2207
Log, monitor, and report examples .....	2209



<b>Wireless configuration</b>	<b>2213</b>
<b>Switch Controller</b>	<b>2214</b>
<b>System</b>	<b>2215</b>
Basic system settings	2215
Advanced system settings	2215
Operating modes	2216
Administrators	2218
Local authentication	2218
Remote authentication for administrators	2219
Administrator account options	2222
REST API administrator	2224
SSO administrators	2226
FortiCloud SSO	2226
Allowing the FortiGate to override FortiCloud SSO administrator user permissions	2227
Password policy	2232
Public key SSH access	2234
Restricting SSH and Telnet jump host capabilities	2235
Remote administrators with TACACS VSA attributes	2236
Administrator profiles	2241
super_admin profile	2241
Creating customized profiles	2241
Displaying execute commands for custom system permissions	2242
Editing profiles	2243
Deleting profiles	2243
Fabric Management	2243
About firmware installations	2245
Firmware maturity levels	2245
Upgrading individual device firmware	2248
Upgrading individual device firmware by following the upgrade path (federated update)	2249
Upgrading all device firmware	2251
Upgrading all device firmware by following the upgrade path (federated update)	2253
Enabling automatic firmware updates	2256
Authorizing devices	2258
Firmware upgrade notifications	2261
Downloading a firmware image	2262
Testing a firmware version	2262
Installing firmware from system reboot	2264
Restoring from a USB drive	2266
Using controlled upgrades	2267
Downgrading individual device firmware	2267
Downloading the EOS support package for supported Fabric devices	2269
Settings	2273
Default administrator password	2273
Changing the host name	2275
Setting the system time	2275
Configuring ports	2279
Setting the idle timeout time	2280

Setting the password policy .....	2280
Changing the view settings .....	2280
Setting the administrator password retries and lockout time .....	2281
TLS configuration .....	2281
Controlling return path with auxiliary session .....	2282
Email alerts .....	2286
Using configuration save mode .....	2291
Trusted platform module support .....	2292
Configuring the persistency for a banned IP list .....	2294
Using the default certificate for HTTPS administrative access .....	2295
Virtual Domains .....	2299
VDOM overview .....	2299
General configurations .....	2304
Backing up and restoring configurations in multi VDOM mode .....	2312
Inter-VDOM routing configuration example: Internet access .....	2315
Inter-VDOM routing configuration example: Partial-mesh VDOMs .....	2324
High Availability .....	2338
FortiGate Clustering Protocol (FGCP) .....	2338
FortiGate Session Life Support Protocol (FGSP) .....	2338
VRRP .....	2339
FGCP .....	2339
FGSP .....	2407
Standalone configuration synchronization .....	2458
VRRP .....	2463
SNMP .....	2475
Interface access .....	2475
MIB files .....	2476
SNMP agent .....	2476
SNMP v1/v2c communities .....	2477
SNMP v3 users .....	2478
Access control for SNMP .....	2480
Important SNMP traps .....	2482
SNMP traps and query for monitoring DHCP pool .....	2483
Replacement messages .....	2484
Modifying replacement messages .....	2485
Replacement message images .....	2486
Replacement message groups .....	2488
FortiGuard .....	2491
Anycast .....	2492
Connection and OCSP stapling .....	2492
Configuring FortiGuard updates .....	2494
Configuring a proxy server for FortiGuard updates .....	2494
Manual updates .....	2495
Automatic updates .....	2496
Scheduled updates .....	2497
Sending malware statistics to FortiGuard .....	2498
Update server location .....	2499
Filtering .....	2500

Online security tools .....	2501
Anycast and unicast services .....	2501
Using FortiManager as a local FortiGuard server .....	2502
Cloud service communication statistics .....	2503
IoT detection service .....	2505
FortiAP query to FortiGuard IoT service to determine device details .....	2508
FortiGate Cloud / FDN communication through an explicit proxy .....	2508
FDS-only ISDB package in firmware images .....	2510
Licensing in air-gap environments .....	2511
License expiration .....	2513
Feature visibility .....	2515
Certificates .....	2515
Automatically provision a certificate .....	2516
Generate a new certificate .....	2520
Regenerate default certificates .....	2521
Import a certificate .....	2522
Generate a CSR .....	2524
CA certificate .....	2527
Remote certificate .....	2527
Certificate revocation list .....	2528
Export a certificate .....	2528
Uploading certificates using an API .....	2529
Procuring and importing a signed SSL certificate .....	2534
Microsoft CA deep packet inspection .....	2536
Administrative access using certificates .....	2541
Creating certificates with XCA .....	2541
Security .....	2549
BIOS-level signature and file integrity checking .....	2549
Real-time file system integrity checking .....	2553
Configuration scripts .....	2555
Workspace mode .....	2556
Custom languages .....	2558
RAID .....	2559
FortiGate encryption algorithm cipher suites .....	2562
HTTPS access .....	2562
SSH access .....	2563
SSL VPN .....	2565
Additional features .....	2568
Other Products .....	2570
Conserve mode .....	2572
Proxy inspection in conserve mode .....	2572
Flow inspection in conserve mode .....	2573
Diagnostics .....	2573
Using APIs .....	2574
Token-based authentication .....	2574
Making an API call to retrieve information from the FortiGate .....	2574
<b>Fortinet Security Fabric .....</b>	<b>2578</b>
Components .....	2578

Security Fabric connectors .....	2582
Configuring the root FortiGate and downstream FortiGates .....	2583
Configuring logging and analytics .....	2592
Configuring FortiClient EMS .....	2604
Synchronizing FortiClient ZTNA tags .....	2619
Configuring LAN edge devices .....	2622
Configuring central management .....	2623
Configuring sandboxing .....	2627
Configuring supported connectors .....	2634
Using the Security Fabric .....	2659
Dashboard widgets .....	2660
Topology .....	2662
Asset Identity Center page .....	2668
WebSocket for Security Fabric events .....	2676
Deploying the Security Fabric .....	2677
Deploying the Security Fabric in a multi-VDOM environment .....	2685
Other Security Fabric topics .....	2690
Configuring the Security Fabric with SAML .....	2708
Configuring single-sign-on in the Security Fabric .....	2708
CLI commands for SAML SSO .....	2713
SAML SSO with pre-authorized FortiGates .....	2714
Navigating between Security Fabric members with SSO .....	2715
Integrating FortiAnalyzer management using SAML SSO .....	2717
Integrating FortiManager management using SAML SSO .....	2721
Advanced option - FortiGate SP changes .....	2723
Security rating .....	2723
Security rating notifications .....	2726
Security rating check scheduling .....	2732
Opt out of ranking .....	2732
Logging the security rating .....	2733
Multi VDOM mode .....	2733
Security Fabric score .....	2734
Automation stitches .....	2735
Creating automation stitches .....	2736
Triggers .....	2750
Actions .....	2772
Public and private SDN connectors .....	2836
Getting started with public and private SDN connectors .....	2838
AliCloud SDN connector using access key .....	2842
AWS SDN connector using access keys .....	2844
Azure SDN connector using service principal .....	2850
Cisco ACI SDN connector using a standalone connector .....	2851
Retrieve IPv6 dynamic addresses from Cisco ACI SDN connector .....	2853
ClearPass endpoint connector via FortiManager .....	2855
GCP SDN connector using service account .....	2858
IBM Cloud SDN connector using API keys .....	2860
Kubernetes (K8s) SDN connectors .....	2864
Nuage SDN connector using server credentials .....	2880
Nutanix SDN connector using server credentials .....	2882

OCI SDN connector using certificates .....	2884
OpenStack SDN connector using node credentials .....	2886
SAP SDN connector .....	2890
VMware ESXi SDN connector using server credentials .....	2893
VMware NSX-T Manager SDN connector using NSX-T Manager credentials .....	2895
Multiple concurrent SDN connectors .....	2898
Filter lookup in SDN connectors .....	2902
Support for wildcard SDN connectors in filter configurations .....	2904
Endpoint/Identity connectors .....	2906
Fortinet single sign-on agent .....	2906
Poll Active Directory server .....	2907
Symantec endpoint connector .....	2908
RADIUS single sign-on agent .....	2914
Exchange Server connector .....	2917
Threat feeds .....	2921
External resources file format .....	2922
Configuring a threat feed .....	2923
FortiGuard category threat feed .....	2930
IP address threat feed .....	2934
Domain name threat feed .....	2937
Malware hash threat feed .....	2939
Threat feed connectors per VDOM .....	2941
STIX format for external threat feeds .....	2945
Using the AusCERT malicious URL feed with an API key .....	2947
Monitoring the Security Fabric using FortiExplorer for Apple TV .....	2951
NOC and SOC example .....	2952
Troubleshooting .....	2962
Viewing a summary of all connected FortiGates in a Security Fabric .....	2963
Diagnosing automation stitches .....	2965
<b>Log and Report .....</b>	<b>2969</b>
Viewing event logs .....	2969
System Events log page .....	2972
Security Events log page .....	2977
Reports page .....	2980
FortiAnalyzer .....	2980
FortiGate Cloud .....	2982
Local .....	2983
Log settings and targets .....	2984
Global Settings .....	2984
Local Logs .....	2985
Threat Weight .....	2985
Configuring logs in the CLI .....	2987
Email alerts .....	2988
Logging to FortiAnalyzer .....	2989
FortiAnalyzer log caching .....	2989
Configuring multiple FortiAnalyzers (or syslog servers) per VDOM .....	2992
Configuring multiple FortiAnalyzers on a FortiGate in multi-VDOM mode .....	2993
Advanced and specialized logging .....	2996

Logs for the execution of CLI commands .....	2996
Log buffer on FortiGates with an SSD disk .....	2998
Source and destination UUID logging .....	2999
Configuring and debugging the free-style filter .....	3001
Logging the signal-to-noise ratio and signal strength per client .....	3003
RSSO information for authenticated destination users in logs .....	3005
Destination user information in UTM logs .....	3008
Sample logs by log type .....	3012
Troubleshooting .....	3033
Log-related diagnostic commands .....	3034
Backing up log files or dumping log messages .....	3039
SNMP OID for logs that failed to send .....	3041
<b>WAN optimization .....</b>	<b>3045</b>
Features .....	3045
Protocol optimization .....	3045
Byte caching .....	3045
SSL offloading .....	3045
WAN optimization and HA .....	3045
Secure tunneling .....	3046
Prerequisites .....	3046
Disk usage .....	3046
Overview .....	3048
Client/server architecture .....	3048
Profiles .....	3048
Peers and authentication groups .....	3049
Tunnels .....	3050
Transparent mode .....	3052
Protocol optimization .....	3053
Cache service and video caching .....	3054
Manual and active-passive .....	3055
Monitoring performance .....	3056
System and feature operation with WAN optimization .....	3056
Best practices .....	3059
Example topologies .....	3059
In-path WAN optimization topology .....	3059
Out-of-path WAN optimization topology .....	3060
Topology for multiple networks .....	3060
Configuration examples .....	3061
Manual (peer-to-peer) WAN optimization configuration example .....	3062
Active-passive WAN optimization configuration example .....	3067
Secure tunneling configuration example .....	3072
Testing and troubleshooting the configuration .....	3077
<b>VM .....</b>	<b>3081</b>
Amazon Web Services .....	3081
Microsoft Azure .....	3081
Google Cloud Platform .....	3081
Oracle OCI .....	3082



AliCloud .....	3082
Private cloud .....	3082
VM license .....	3082
Uploading a license file .....	3083
VM license types .....	3083
Consuming a new vCPU .....	3085
CLI troubleshooting .....	3085
Permanent trial mode for FortiGate-VM .....	3087
Adding VDOMs with FortiGate v-series .....	3090
Terraform: FortiOS as a provider .....	3093
Troubleshooting .....	3097
PF and VF SR-IOV driver and virtual SPU support .....	3097
Using OCI IMDSv2 .....	3099
FIPS cipher mode for AWS, Azure, OCI, and GCP FortiGate-VMs .....	3101
<b>Hyperscale firewall .....</b>	<b>3104</b>
<b>Troubleshooting .....</b>	<b>3105</b>
Troubleshooting methodologies .....	3106
Verify user permissions .....	3106
Establish a baseline .....	3106
Create a troubleshooting plan .....	3108
Troubleshooting scenarios .....	3109
Checking the system date and time .....	3110
Checking the hardware connections .....	3111
Checking FortiOS network settings .....	3112
Troubleshooting CPU and network resources .....	3115
Troubleshooting high CPU usage .....	3116
Checking the modem status .....	3120
Running ping and traceroute .....	3121
Checking the logs .....	3124
Verifying routing table contents in NAT mode .....	3125
Verifying the correct route is being used .....	3126
Verifying the correct firewall policy is being used .....	3126
Checking the bridging information in transparent mode .....	3127
Checking wireless information .....	3128
Performing a sniffer trace or packet capture .....	3129
Debugging the packet flow .....	3131
Testing a proxy operation .....	3134
Displaying detail Hardware NIC information .....	3135
Performing a traffic trace .....	3138
Using a session table .....	3138
Finding object dependencies .....	3142
Diagnosing NPU-based interfaces .....	3143
Identifying the XAUI link used for a specific traffic stream .....	3143
Date and time settings .....	3144
Running the TAC report .....	3145
Using the process monitor .....	3145
Other commands .....	3147

---

ARP table .....	3147
IP address .....	3149
FortiGuard troubleshooting .....	3150
Verifying connectivity to FortiGuard .....	3150
Troubleshooting process for FortiGuard updates .....	3151
FortiGuard server settings .....	3152
View open and in use ports .....	3154
IPS and AV engine version .....	3154
CLI troubleshooting cheat sheet .....	3155
Additional resources .....	3155
Fortinet Document Library .....	3155
Release notes .....	3155
Fortinet Video Library .....	3155
Fortinet Community .....	3155
Fortinet Training Institute .....	3156
Fortinet Support .....	3156

# Change Log

Date	Change Description
2023-09-28	Initial release.

# Getting started

This section explains how to get started with a FortiGate.

## Differences between models

Not all FortiGates have the same features, particularly entry-level models (models 30 to 90). A number of features on these models are only available in the CLI.



Consult your model's QuickStart Guide, [hardware manual](#), or the [Feature / Platform Matrix](#) for further information about features that vary by model.

---

FortiGate models differ principally by the names used and the features available:

- Naming conventions may vary between FortiGate models. For example, on some models the hardware switch interface used for the local area network is called *lan*, while on other units it is called *internal*.
- Certain features are not available on all models. Additionally, a particular feature may be available only through the CLI on some models, while that same feature may be viewed in the GUI on other models.

If you believe your FortiGate model supports a feature that does not appear in the GUI, go to *System > Feature Visibility* and confirm that the feature is enabled. For more information, see [Feature visibility on page 2515](#).

## Low encryption models

Some FortiGate models support a low encryption (LENC) license. With an LENC license, FortiGate devices are considered low encryption models and are identified by *LENC*, for example FG-100E-LENC.

LENC models cannot use or inspect high encryption protocols, such as 3DES and AES. LENC models only use 56-bit DES encryption to work with SSL VPN and IPsec VPN, and they are unable to perform SSL inspection.

For a list of FortiGate models that support an LENC license, see [FortiGate LENC Models](#).

## Using the GUI

This section presents an introduction to the graphical user interface (GUI) on your FortiGate.

The following topics are included in this section:

- [Connecting using a web browser](#)
- [Menus](#)
- [Tables](#)

- [Entering values](#)
- [GUI-based global search](#)
- [Loading artifacts from a CDN on page 31](#)

For information about using the dashboards, see [Dashboards and Monitors on page 87](#).

## Connecting using a web browser

In order to connect to the GUI using a web browser, an interface must be configured to allow administrative access over HTTPS or over both HTTPS and HTTP. By default, an interface has already been set up that allows HTTPS access with the IP address 192.168.1.99.

Browse to <https://192.168.1.99> and enter your username and password. If you have not changed the admin account's password, use the default user name, `admin`, and leave the password field blank.

The GUI will now display in your browser, and you will be required to provide a password for the administrator account.

### To use a different interface to access the GUI:

1. Go to *Network > Interfaces* and edit the interface you wish to use for access. Take note of its assigned IP address.
2. In *Administrative Access*, select *HTTPS*, and any other protocol you require. You can also select *HTTP*, although this is not recommended as the connection will be less secure.
3. Click *OK*.
4. Browse to the IP address using your chosen protocol.  
The GUI will now be displayed in your browser.

## Menus



If you believe your FortiGate model supports a menu that does not appear in the GUI, go to *System > Feature Visibility* and ensure the feature is enabled. For more information, see [Feature visibility on page 2515](#).

The GUI contains the following main menus, which provide access to configuration options for most FortiOS features:

<b>Dashboard</b>	The dashboard displays various widgets that display important system information and allow you to configure some system options. For more information, see <a href="#">Dashboards and Monitors on page 87</a> .
<b>Network</b>	Options for networking, including configuring system interfaces and routing options. For more information, see <a href="#">Network on page 147</a> .
<b>Policy &amp; Objects</b>	Configure firewall policies, protocol options, and supporting content for policies, including schedules, firewall addresses, and traffic shapers. For more information, see <a href="#">Policy and Objects on page 1035</a> .
<b>Security Profiles</b>	Configure your FortiGate's security features, including Antivirus, Web Filter, and Application Control.

	For more information, see <a href="#">Security Profiles on page 1262</a> .
<b>VPN</b>	Configure options for IPsec and SSL virtual private networks (VPNs). For more information, see <a href="#">IPsec VPNs on page 1573</a> and <a href="#">SSL VPN on page 1876</a> .
<b>User &amp; Authentication</b>	Configure user accounts, groups, and authentication methods, including external authentication and single sign-on (SSO).
<b>WiFi &amp; Switch Controller</b>	Configure the unit to act as a wireless network controller, managing the wireless Access Point (AP) functionality of FortiWiFi and FortiAP units. On certain FortiGate models, this menu has additional features allowing for FortiSwitch units to be managed by the FortiGate. For more information, see <a href="#">Wireless configuration on page 2213</a> and <a href="#">Switch Controller on page 2214</a> .
<b>System</b>	Configure system settings, such as administrators, HA, FortiGuard, and certificates. For more information, see <a href="#">System on page 2215</a> .
<b>Security Fabric</b>	Access the physical topology, logical topology, automation, and settings of the Fortinet Security Fabric. For more information, see <a href="#">Fortinet Security Fabric on page 2578</a> .
<b>Log &amp; Report</b>	Configure logging and alert email as well as reports. For more information, see <a href="#">Log and Report on page 2969</a> .

## Tables

Many GUI pages contain tables of information that can be filtered and customized to display specific information in a specific way. Some tables allow content to be edited directly on that table, or rows to be copied and pasted.

## Navigation

Some tables contain information and lists that span multiple pages. Navigation controls will be available at the bottom of the page.

## Filters

Filters are used to locate a specific set of information or content in a table. They can be particularly useful for locating specific log entries. The filtering options vary, depending on the type of information in the log.

Depending on the table content, filters can be applied using the filter bar, using a column filter, or based on a cell's content. Some tables allow filtering based on regular expressions.

Administrators with read and write access can define filters. Multiple filters can be applied at one time.



**To manually create a filter:**

1. Click *Add Filter* at the top of the table. A list of the fields available for filtering is shown.
2. Select the field to filter by.
3. Enter the value to filter by, adding modifiers as needed.
4. Press *Enter* to apply the filter.

**To create a column filter:**

1. Click the filter icon on the right side of the column header
2. Choose a filter type from the available options.
3. Enter the filter text, or select from the available values.
4. Click *Apply*.

**To create a filter based on a cell's content:**

1. Right click on a cell in the table.
2. Select a filtering option from the menu.

## Column settings

Columns can be rearranged, resized, and added or removed from tables.

**To add or remove columns:**

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Select columns to add or remove.
3. Click *Apply*.

**To rearrange the columns in a table:**

1. Click and drag the column header.

**To resize a column:**

1. Click and drag the right border of the column header.

**To resize a column to fit its contents:**

1. Click the dots or filter icon on the right side of the column header and select *Resize to Contents*.

**To resize all of the columns in a table to fit their content:**

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Click *Best Fit All Columns*.

**To reset a table to its default view:**

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Click *Reset Table*.  
Resetting a table does not remove filters.

## Editing objects

In some tables, parts of a configuration can be edited directly in the table. For example, security profiles can be added to an existing firewall policy by clicking the edit icon in a cell in the *Security Profiles* column.

## Copying rows

In some tables, rows can be copied and pasted using the right-click menu. For example, a policy can be duplicated by copying and pasting it.

## Entering values

Numerous fields in the GUI and CLI require text strings or numbers to be entered when configuring the FortiGate. When entering values in the GUI, you will be prevented from entering invalid characters, and a warning message will be shown explaining what values are not allowed. If invalid values are entered in a CLI command, the setting will be rejected when you apply it.

- [Text strings on page 28](#)
- [Numbers on page 29](#)

## Text strings

Text strings are used to name entities in the FortiGate configuration. For example, the name of a firewall address, administrator, or interface are all text strings.

The following characters cannot be used in text strings, as they present cross-site scripting (XSS) vulnerabilities:

- ` - double quotes
- ' - single quote
- > - greater than
- < - less than

Most GUI text fields prevent XSS vulnerable characters from being added.



VDOM names and hostnames can only use numbers (0-9), letters (a-z and A-Z), dashes, and underscores.

---

The `tree` CLI command can be used to view the number of characters allowed in a name field. For example, entering the following commands show that a firewall address name can contain up to 80 characters, while its FQDN can contain 256 characters:

```

tree firewall address
-- [address] --*name      (80)
    |- uuid
    |- subnet
    |- type
    |- sub-type
    |- clearpass-spt
    |- [macaddr] --*macaddr      (128)
    |- start-ip
    |- end-ip
    |- fqdn      (256)
    |- country      (3)
    |- wildcard-fqdn      (256)
    |- cache-ttl      (0,86400)
    |- wildcard
    |- sdn      (36)
    |- [fsso-group] --*name      (512)
    |- interface      (36)
    |- tenant      (36)
    |- organization      (36)
    |- epq-name      (256)
    |- subnet-name      (256)
    |- sdn-tag      (16)
    |- policy-group      (16)
    |- obj-tag      (256)
    |- obj-type
    |- tag-detection-level      (16)
    |- tag-type      (64)
    |- dirty
    |- comment
    |- associated-interface      (36)
    |- color      (0,32)
    |- filter
    |- sdn-addr-type
    |- node-ip-only
    |- obj-id
    |- [list] --*ip      (36)
        |- obj-id      (128)
        +- net-id      (128)
    |- [tagging] --*name      (64)
        |- category      (64)
        +- [tags] --*name      (80)
    |- allow-routing
    +- fabric-object

```

## Numbers

Numbers are used to set sizes, rates, addresses, port numbers, priorities, and other such numeric values. They can be entered as a series of digits (without commas or spaces), in a dotted decimal format (such as IP addresses), or separated by colons (such as MAC addresses). Most numeric values use base 10 numbers, while some use hexadecimal values.

Most GUI and CLI fields prevent invalid numbers from being entered. The CLI help text includes information about the range of values allowed for applicable settings.

## GUI-based global search

The global search option in the GUI allows users to search for keywords appearing in objects and navigation menus to quickly access the object and configuration page. Click the magnifying glass icon in the top-left corner of the banner to access the global search.

The global search includes the following features:


- Keep a history of frequent and recent searches
- Sort results alphabetically by increasing or decreasing order, and relevance by search weight
- Search by category
- Search in Security Fabric members (accessed by the Security Fabric members dropdown menu in the banner)

## Examples

In this example, searching for the word *ZTNA* yields the following results:

- Firewall policy object *9*, which contains *ZTNA* in the property value, *Name*. The name of the policy is *ZTNA-TCP*.
- *ZTNA* server object *ZTNA-webserver*, which contains *ZTNA* in the property value, *Name*.
- *ZTNA* navigation menu item under *Policy & Objects > ZTNA*.


Since CMDB objects have a higher search weight (50) than navigation objects (20), the navigation menu result appears at the bottom.

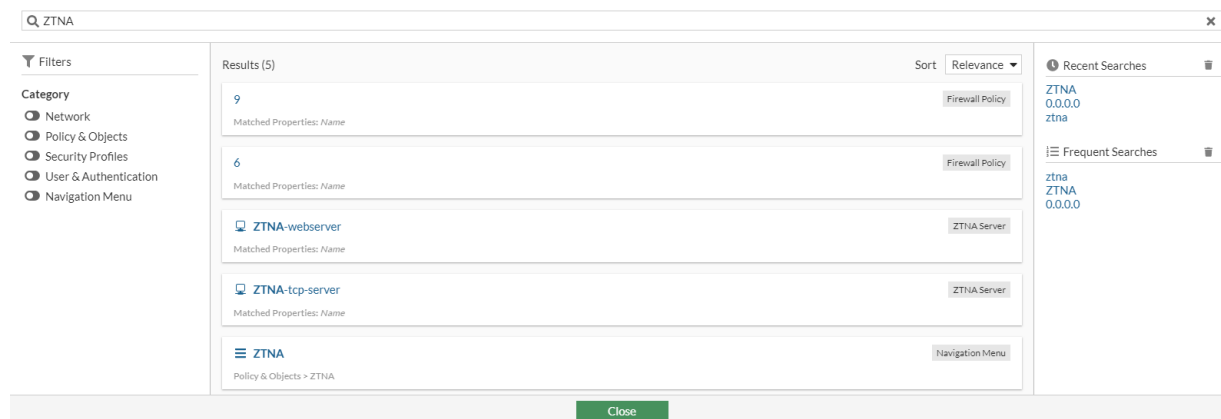

In this example, searching for the address *10.88.0.1* yields the following results:

- Address object *EMS* that has a subnet of *10.88.0.1/32*, which matches the search term.
- Virtual IP object *Telemetry-VIP* that has a mapped IP range of *10.88.0.1*, which matches the search term.
- Address objects *all*, *FIREWALL\_AUTH\_PORTAL\_ADDRESS*, and *FABRIC\_DEVICE* that have IP subnets of *0.0.0.0/0*, which the searched term falls into.
- Address group object *All\_Grp* that contains members addresses that have IP subnets of *0.0.0.0/0*, which the searched term falls into.

Sorting by *Relevance* will display address objects that are more closely matched at the top (*10.88.0.1*), and more loosely matched at the bottom (*0.0.0.0*).

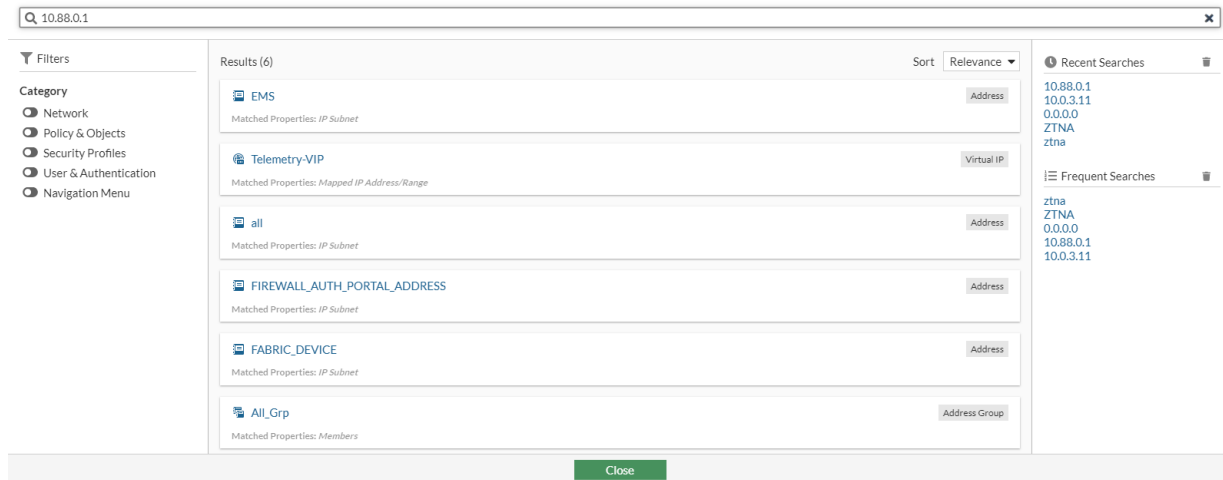

## Loading artifacts from a CDN

To improve GUI performance, loading static GUI artifacts cached in CDN (content delivery network) servers closer to the user instead of the FortiGate can be enabled. This allows the GUI to load more quickly with less latency for administrators who are accessing the FortiGate remotely. Upon failure, the files fall back to loading from the FortiGate. The CDN is only used after successful administrator logins.

### To configure loading static GUI files from a CDN:

```
config system global
    set gui-cdn-usage {enable | disable}
end
```

## Using the CLI

The Command Line Interface (CLI) can be used in lieu of the GUI to configure the FortiGate. Some settings are not available in the GUI, and can only be accessed using the CLI.

This section briefly explains basic CLI usage. For more information about the CLI, see the [FortiOS CLI Reference](#).

- [Connecting to the CLI on page 31](#)
- [CLI basics on page 34](#)
- [Command syntax on page 40](#)
- [Subcommands on page 43](#)
- [Permissions on page 45](#)

## Connecting to the CLI

You can connect to the CLI using a direct console connection, SSH, the FortiExplorer app on your iOS device, or the CLI console in the GUI.

You can access the CLI outside of the GUI in three ways:

- **Console connection:** Connect your computer directly to the console port of your FortiGate.
- **SSH access:** Connect your computer through any network interface attached to one of the network ports on your FortiGate.
- **FortiExplorer:** Connect your device to the FortiExplorer app on your iOS device to configure, manage, and monitor your FortiGate. See [Using FortiExplorer Go and FortiExplorer on page 45](#) for details.

To open a CLI console, click the `_>` icon in the top right corner of the GUI. The console opens on top of the GUI. It can be minimized and multiple consoles can be opened.

To edit policies and objects directly in the CLI, right-click on the element and select *Edit in CLI*.

## Console connection

A direct console connection to the CLI is created by directly connecting your management computer or console to the FortiGate using its DB-9 or RJ-45 console port.

Direct console access to the FortiGate may be required if:

- You are installing the FortiGate for the first time and it is not configured to connect to your network.
- You are restoring the firmware using a boot interrupt. Network access to the CLI will not be available until after the boot process has completed, making direct console access the only option.

To connect to the FortiGate console, you need:

- A console cable to connect the console port on the FortiGate to a communications port on the computer. Depending on your device, this is one of:
  - null modem cable (DB-9 to DB-9)
  - DB-9 to RJ-45 cable (a DB-9-to-USB adapter can be used)
  - USB to RJ-45 cable
- A computer with an available communications port
- Terminal emulation software

### To connect to the CLI using a direct console connection:

1. Using the console cable, connect the FortiGate unit's console port to the serial communications (COM) port on your management computer.
2. Start a terminal emulation program on the management computer, select the COM port, and use the following settings:

<b>Bits per second</b>	9600
<b>Data bits</b>	8
<b>Parity</b>	None
<b>Stop bits</b>	1
<b>Flow control</b>	None

3. Press *Enter* on the keyboard to connect to the CLI.
4. Log in to the CLI using your username and password (default: *admin* and no password).  
You can now enter CLI commands, including configuring access to the CLI through SSH.

## SSH access

SSH access to the CLI is accomplished by connecting your computer to the FortiGate using one of its network ports. You can either connect directly, using a peer connection between the two, or through any intermediary network.



If you do not want to use an SSH client and you have access to the GUI, you can access the CLI through the network using the CLI console in the GUI.

SSH must be enabled on the network interface that is associated with the physical network port that is used.

If your computer is not connected either directly or through a switch to the FortiGate, you must also configure the FortiGate with a static route to a router that can forward packets from the FortiGate to the computer. This can be done using a local console connection, or in the GUI.

To connect to the FortiGate CLI using SSH, you need:

- A computer with an available serial communications (COM) port and RJ-45 port
- An appropriate console cable
- Terminal emulation software
- A network cable
- Prior configuration of the operating mode, network interface, and static route.

### To enable SSH access to the CLI using a local console connection:

1. Using the network cable, connect the FortiGate unit's port either directly to your computer's network port, or to a network through which your computer can reach the FortiGate.
2. Note the number of the physical network port.
3. Using direct console connection, connect and log into the CLI.
4. Enter the following command:

```
config system interface
    edit <interface_str>
        append allowaccess ssh
    next
end
```

Where `<interface_str>` is the name of the network interface associated with the physical network port, such as `port1`.

5. Confirm the configuration using the following command to show the interface's settings:

```
show system interface <interface_str>
```

For example:

```
show system interface port1
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
        set allowaccess ping https ssh
        set type hard-switch
        set stp enable
        set role lan
```

```
        set snmp-index 6
    next
end
```

## Connecting using SSH

Once the FortiGate is configured to accept SSH connections, use an SSH client on your management computer to connect to the CLI.

The following instructions use [PuTTY](#). The steps may vary in other terminal emulators.

### To connect to the CLI using SSH:

1. On your management computer, start PuTTY.
2. In the *Host Name (or IP address)* field, enter the IP address of the network interface that you are connected to and that has SSH access enabled.
3. Set the port number to 22, if it is not set automatically.
4. Select *SSH* for the *Connection type*.
5. Click *Open*. The SSH client connects to the FortiGate.  
The SSH client may display a warning if this is the first time that you are connecting to the FortiGate and its SSH key is not yet recognized by the SSH client, or if you previously connected to the FortiGate using a different IP address or SSH key. This is normal if the management computer is connected directly to the FortiGate with no network hosts in between.
6. Click *Yes* to accept the FortiGate's SSH key.  
The CLI displays the log in prompt.
7. Enter a valid administrator account name, such as `admin`, then press *Enter*.
8. Enter the administrator account password, then press *Enter*.  
The CLI console shows the command prompt (FortiGate hostname followed by a #). You can now enter CLI commands.



If three incorrect log in or password attempts occur in a row, you will be disconnected. If this occurs, wait for one minute, then reconnect and attempt to log in again.

---

## CLI basics

Basic features and characteristics of the CLI environment provide support and ease of use for many CLI tasks.

### Help

Press the question mark (?) key to display command help and complete commands.

- Press the question mark (?) key at the command prompt to display a list of the commands available and a description of each command.
- Enter a command followed by a space and press the question mark (?) key to display a list of the options available for that command and a description of each option.
- Enter a command followed by an option and press the question mark (?) key to display a list of additional options available for that command option combination and a description of each option.



- Enter a question mark after entering a portion of a command to see a list of valid complete commands and their descriptions. If there is only one valid command, it will be automatically filled in.

## Shortcuts and key commands

Shortcut key	Action
<b>?</b>	List valid complete or subsequent commands. If multiple commands can complete the command, they are listed with their descriptions.
<b>Tab</b>	Complete the word with the next available match. Press multiple times to cycle through available matches.
<b>Up arrow or Ctrl + P</b>	Recall the previous command. Command memory is limited to the current session.
<b>Down arrow, or Ctrl + N</b>	Recall the next command.
<b>Left or Right arrow</b>	Move the cursor left or right within the command line.
<b>Ctrl + A</b>	Move the cursor to the beginning of the command line.
<b>Ctrl + E</b>	Move the cursor to the end of the command line.
<b>Ctrl + B</b>	Move the cursor backwards one word.
<b>Ctrl + F</b>	Move the cursor forwards one word.
<b>Ctrl + D</b>	Delete the current character.
<b>Ctrl + C</b>	Abort current interactive commands, such as when entering multiple lines. If you are not currently within an interactive command such as <code>config</code> or <code>edit</code> , this closes the CLI connection.
<b>\ then Enter</b>	Continue typing a command on the next line for a multiline command. For each line that you want to continue, terminate it with a backslash (\). To complete the command, enter a space instead of a backslash, and then press <i>Enter</i> .

## Command tree

Enter `tree` to display the CLI command tree. To capture the full output, connect to your device using a terminal emulation program and capture the output to a log file. For some commands, use the `tree` command to view all available variables and subcommands.

## Command abbreviation

You can abbreviate words in the command line to their smallest number of non-ambiguous characters.

For example, the command `get system status` could be abbreviated to `g sy stat`.

## Adding and removing options from lists

When configuring a list, the `set` command will remove the previous configuration.

For example, if a user group currently includes members A, B, and C, the command `set member D` will remove members A, B, and C. To avoid removing the existing members from the group, the command `set members A B C D` must be used.

To avoid this issue, the following commands are available:

<b>append</b>	Add an option to an existing list. For example, <code>append member D</code> adds user D to the user group without removing any of the existing members.
<b>select</b>	Clear all of the options except for those specified. For example, <code>select member B</code> removes all member from the group except for member B.
<b>unselect</b>	Remove an option from an existing list. For example, <code>unselect member C</code> removes only member C from the group, without affecting the other members.

## Environment variables

The following environment variables are support by the CLI. Variable names are case-sensitive.

<b>\$USERFROM</b>	The management access type ( <code>ssh</code> , <code>jsconsole</code> , and so on) and the IPv4 address of the administrator that configured the item.
<b>\$USERNAME</b>	The account name of the administrator that configured the item.
<b>\$SerialNum</b>	The serial number of the FortiGate.

For example, to set a FortiGate device's host name to its serial number, use the following CLI command:

```
config system global
    set hostname $SerialNum
end
```

## Special characters

The following characters cannot be used in most CLI commands: `<`, `>`, `(`, `)`, `#`, `'`, and `"`

If one of those characters, or a space, needs to be entered as part of a string, it can be entered by using a special command, enclosing the entire string in quotes, or preceding it with an escape character (backslash, `\`).

To enter a question mark (`?`) or a tab, `Ctrl + V` or `Ctrl + Shift + -` must be entered first.



Question marks and tabs cannot be copied into the CLI Console or some SSH clients. They must be typed in.

Character	Keys
?	Ctrl + V or Ctrl + Shift + - then ?
Tab	Ctrl + V then Tab
Space (as part of a string value, not to end the string)	Enclose the string in single or double quotation marks: "Security Administrator" or 'Security Administrator'. Precede the space with a backslash: Security\ Administrator.
' (as part of a string value, not to begin or end the string)	\'
" (as part of a string value, not to begin or end the string)	\"
\	\\

## Using grep to filter command output

The `get`, `show`, and `diagnose` commands can produce large amounts of output. The `grep` command can be used to filter the output so that it only shows the required information.

The `grep` command is based on the standard UNIX `grep`, used for searching text output based on regular expressions.

For example, the following command displays the MAC address of the internal interface:

```
get hardware nic internal | grep Current_HWaddr
Current_HWaddr          00:09:0f:cb:c2:75
```

The following command will display all TCP sessions that are in the session list, including the session list line number in the output:

```
get system session list | grep -n tcp
```

The following command will display all of the lines in the HTTP replacement message that contain URL or url:

```
show system replacemsg http | grep -i url
```

The following options can also be used:

```
-A <num> After
-B <num> Before
-C <num> Context
```

The `-f` option is available to support contextual output, in order to show the complete configuration. The following example shows the difference in the output when `-f` is used versus when it is not used:

Without `-f`:

```
show | grep ldap-group1
edit "ldap-group1"
set groups "ldap-group1"
```

With `-f`:

```
show | grep -f ldap-group1
config user group
edit "ldap-group1"
```

```
        set member "pc40-LDAP"
    next
end
config firewall policy
    edit 2
        set srcintf "port31"
        set dstintf "port32"
        set srcaddr "all"
        set action accept
        set identity-based enable
        set nat enable
        config identity-based-policy
            edit 1
                set schedule "always"
                set groups "ldap-group1"
                set dstaddr "all"
                set service "ALL"
            next
        end
    next
end
```

## Language support and regular expressions

Characters such as ñ and é, symbols, and ideographs are sometimes acceptable input. Support varies depending on the type of item that is being configured. CLI commands, objects, field names, and options must use their exact ASCII characters, but some items with arbitrary names or values can be input using your language of choice. To use other languages in those cases, the correct encoding must be used.

Input is stored using Unicode UTF-8 encoding, but is not normalized from other encodings into UTF-8 before it is stored. If your input method encodes some characters differently than in UTF-8, configured items may not display or operate as expected.

Regular expressions are especially impacted. Matching uses the UTF-8 character values. If you enter a regular expression using a different encoding, or if an HTTP client sends a request in a different encoding, matches may not be what is expected.

For example, with Shift-JIS, backslashes could be inadvertently interpreted as the symbol for the Japanese yen (¥), and vice versa. A regular expression intended to match HTTP requests containing monetary values with a yen symbol may not work if the symbol is entered using the wrong encoding.

For best results:

- use UTF-8 encoding, or
- use only characters whose numerically encoded values are the same in UTF-8, such as the US-ASCII characters that are encoded using the same values in ISO 8859-1, Windows code page 1252, Shift-JIS, and other encoding methods, or
- for regular expressions that must match HTTP requests, use the same encoding as your HTTP clients.



HTTP clients may send requests in encodings other than UTF-8. Encodings usually vary based on the client's operating system or input language. If the client's encoding method cannot be predicted, you might only be able to match the parts of the request that are in English, as the values for English characters tend to be encoded identically, regardless of the encoding method.

If the FortiGate is configured to use an encoding method other than UTF-8, the management computer's language may need to be changed, including the web browser and terminal emulator. If the FortiGate is configured using non-ASCII characters, all the systems that interact with the FortiGate must also support the same encoding method. If possible, the same encoding method should be used throughout the configuration to avoid needing to change the language settings on the management computer.

The GUI and CLI client normally interpret output as encoded using UTF-8. If they do not, configured items may not display correctly. Exceptions include items such as regular expression that may be configured using other encodings to match the encoding of HTTP requests that the FortiGate receives.

#### To enter non-ASCII characters in a terminal emulator:

1. On the management computer, start the terminal client.
2. Configure the client to send and receive characters using UTF-8 encoding.  
Support for sending and receiving international characters varies by terminal client.
3. Log in to the FortiGate.
4. At the command prompt, type your command and press *Enter*.  
Words that use encoded characters may need to be enclosed in single quotes ( ' ).  
Depending on your terminal client's language support, you may need to interpret the characters into character codes before pressing *Enter*. For example, you might need to enter: `edit '\743\601\613\743\601\652'`
5. The CLI displays the command and its output.

## Screen paging

By default, the CLI will pause after displaying each page worth of text when a command has multiple pages of output. This can be useful when viewing lengthy outputs that might exceed the buffer of terminal emulator.

When the display pauses and shows `--More--`, you can:

- Press *Enter* to show the next line,
- Press *Q* to stop showing results and return to the command prompt,
- Press an arrow key, *Insert*, *Home*, *Delete*, *End*, *Page Up*, or *Page Down* to show the next few pages,
- Press any other key to show the next page, or
- Wait for about 30 seconds for the console to truncate the output and return to the command prompt.

When pausing the screen is disabled, press *Ctrl + C* to stop the output and log out of the FortiGate.

#### To disable pausing the CLI output:

```
config system console
    set output standard
end
```

**To enable pausing the CLI output:**

```
config system console
    set output more
end
```

## Changing the baud rate

The baud rate of the local console connection can be changed from its default value of 9600.

**To change the baud rate:**

```
config system console
    set baudrate {9600 | 19200 | 38400 | 57600 | 115200}
end
```

## Editing the configuration file

The FortiGate configuration file can be edited on an external host by backing up the configuration, editing the configuration file, and then restoring the configuration to the FortiGate.

Editing the configuration file can save time is many changes need to be made, particularly if the plain text editor that you are using provides features such as batch changes.

**To edit the configuration file:**

1. Backup the configuration. See [Configuration backups on page 67](#) for details.
2. Open the configuration file in a plain text editor that supports UNIX-style line endings.
3. Edit the file as needed.



Do not edit the first line of the configuration file.

This line contains information about the firmware version and FortiGate model. If you change the model number, the FortiGate will reject the configuration when you attempt to restore it.

---

4. Restore the modified configuration to the FortiGate. See [Configuration backups on page 67](#) for details.  
The FortiGate downloads the configuration file and checks that the model information is correct. If it is correct, the configuration file is loaded and each line is checked for errors. If a command is invalid, that command is ignored. If the configuration file is valid, the FortiGate restarts and loads the downloaded configuration.

## Command syntax

When entering a command, the CLI console requires that you use valid syntax and conform to expected input constraints. It rejects invalid commands. Indentation is used to indicate the levels of nested commands.

Each command line consists of a command word, usually followed by configuration data or a specific item that the command uses or affects.

## Notation

Brackets, vertical bars, and spaces are used to denote valid syntax. Constraint notations, such as `<address_ipv4>`, indicate which data types or string patterns are acceptable value input.

All syntax uses the following conventions:

<b>Angle brackets &lt; &gt;</b>	Indicate a variable of the specified data type.
<b>Curly brackets { }</b>	Indicate that a variable or variables are mandatory.
<b>Square brackets [ ]</b>	Indicate that the variable or variables are optional. For example: <code>show system interface [&lt;name_str&gt;]</code> To show the settings for all interfaces, you can enter <code>show system interface</code> To show the settings for the Port1 interface, you can enter <code>show system interface port1</code> .
<b>Vertical bar  </b>	A vertical bar separates alternative, mutually exclusive options. For example: <code>set protocol {ftp   sftp}</code> You can enter either <code>set protocol ftp</code> or <code>set protocol sftp</code> .
<b>Space</b>	A space separates non-mutually exclusive options. For example: <code>set allowaccess {ping https ssh snmp http fgfm radius-acct probe-response capwap ftm}</code> You can enter any of the following: <code>set allowaccess ping</code> <code>set allowaccess https ping ssh</code> <code>set allowaccess http https snmp ssh ping</code> In most cases, to make changes to lists that contain options separated by spaces, you need to retype the entire list, including all the options that you want to apply and excluding all the options that you want to remove.

## Optional values and ranges

Any field that is optional will use square-brackets. The overall config command will still be valid whether or not the option is configured.

Square-brackets can be used to show that multiple options can be set, even intermixed with ranges. The following example shows a field that can be set to either a specific value or range, or multiple instances:

```
config firewall service custom
    set iprange <range1> [<range2> <range3> ...]
end
```

## next

The `next` command is used to maintain a hierarchy and flow to CLI commands. It is at the same indentation level as the preceding `edit` command, to mark where a table entry finishes.

The following example shows the next command used in the subcommand `entries`:

```
config dlp filepattern
  edit <1>
    set name <name>
    set comment [comment]
    config entries
      edit <2>
        set filter-type {pattern | type}
      next
    ←
```

After configuring table entry <2> then entering `next`, the <2> table entry is saved and the console returns to the `entries` prompt:

```
FGT60E1Q23456789 (entries) #
```

You can now create more table entries as needed, or enter `end` to save the table and return to the `filepattern` table element prompt.

## end

The `end` command is used to maintain a hierarchy and flow to CLI commands.

The following example shows the same command and subcommand as the `next` command example, except `end` has been entered instead of `next` after the subcommand:

```
config dlp filepattern
  edit <1>
    set name <name>
    set comment [comment]
    config entries
      edit <2>
        set filter-type {pattern | type}
      end
    ←
```

Entering `end` will save the <2> table entry and the table, and exit the `entries` subcommand entirely. The console returns to the `filepattern` table element prompt:

```
FGT60E1Q23456789 (1) #
```



## Subcommands

Subcommands are available from within the scope of some commands. When you enter a subcommand level, the command prompt changes to indicate the name of the current command scope. For example, after entering:

```
config system admin
```

the command prompt becomes:

```
(admin)#
```

Applicable subcommands are available until you exit the command, or descend an additional level into another subcommand. Subcommand scope is indicated by indentation.

For example, the `edit` subcommand is only available in commands that affects tables, and the `next` subcommand is available only in the `edit` subcommand:

```
config system interface
  edit port1
    set status up
  next
end
```

The available subcommands vary by command. From a command prompt under the `config` command, subcommands that affect tables and fields could be available.

## Table subcommands

### **edit <table\_row>**

Create or edit a table value.

In objects such as security policies, <table\_row> is a sequence number. To create a new table entry without accidentally editing an existing entry, enter `edit 0`. The CLI will confirm that creation of entry 0, but will assign the next unused number when the entry is saved after entering `end` or `next`.

For example, to create a new firewall policy, enter the following commands:

```
config firewall policy
  edit 0
  ....
  next
end
```

To edit an existing policy, enter the following commands:

```
config firewall policy
  edit 27
  ....
  next
end
```

The `edit` subcommand changes the command prompt to the name of the table value that is being edited.

### **delete <table\_row>**

Delete a table value.

For example, to delete firewall policy 30, enter the following commands:

```
config firewall policy
  delete 30
end
```

<b>purge</b>	<p>Clear all table values.</p> <p>The <code>purge</code> command cannot be undone. To restore purged table values, the configuration must be restored from a backup.</p>
<b>move</b>	<p>Move an ordered table value.</p> <p>In the firewall policy table, this equivalent to dragging a policy into a new position. It does not change the policy's ID number.</p> <p>For example, to move policy 27 to policy 30, enter the following commands:</p> <pre>config firewall policy   move 27 to 30 end</pre> <p>The <code>move</code> subcommand is only available in tables where the order of the table entries matters.</p>
<b>clone &lt;table_row&gt; to &lt;table_row&gt;</b>	<p>Make a clone of a table entry.</p> <p>For example, to create firewall policy 30 as a clone of policy 27, enter the following commands:</p> <pre>config firewall policy   clone 27 to 30 end</pre> <p>The <code>clone</code> subcommand may not be available for all tables.</p>
<b>rename &lt;table_row&gt; to &lt;table_row&gt;</b>	<p>Rename a table entry.</p> <p>For example to rename an administrator from Flank to Frank, enter the following commands:</p> <pre>config system admin   rename Flank to Frank end</pre> <p>The <code>rename</code> subcommand is only available in tables where the entries can be renamed.</p>
<b>get</b>	<p>List the current table entries.</p> <p>For example, to view the existing firewall policy table entries, enter the following commands:</p> <pre>config firewall policy   get</pre>
<b>show</b>	<p>Show the configuration. Only table entries that are not set to default values are shown.</p>
<b>end</b>	<p>Save the configuration and exit the current <code>config</code> command.</p>



Purging the `system interface` or `system admin` tables does not reset default table values. This can result in being unable to connect to or log in to the FortiGate, requiring the FortiGate to be formatted and restored.

## Field subcommands

<b>set &lt;field&gt; &lt;value&gt;</b>	Modify the value of a field.
--	------------------------------

	For example, the command <code>set fssso enable</code> sets the <code>fssso</code> field to the value <code>enable</code> .
<b>unset</b>	Set the field to its default value.
<b>select</b>	Clear all of the options except for those specified. For example, if a group contains members A, B, C, and D, to remove all members except for B, use the command <code>select member B</code> .
<b>unselect</b>	Remove an option from an existing list. For example, if a group contains members A, B, C, and D, to remove only member B, use the command <code>unselect member B</code> .
<b>append</b>	Add an option to an existing multi-option table value.
<b>clear</b>	Clear all the options from a multi-option table value.
<b>get</b>	List the configuration of the current table entry, including default and customized values.
<b>show</b>	Show the configuration. Only values that are not set to default values are shown.
<b>next</b>	Save changes to the table entry and exit the <code>edit</code> command so that you can configure the next table entry.
<b>abort</b>	Exit the command without saving.
<b>end</b>	Save the configuration and exit the current <code>config</code> command.

## Permissions

Administrator (or access) profiles control what CLI commands an administrator can access by assigning read, write, or no access to each area of FortiOS. For information, see [Administrator profiles on page 2241](#).

Read access is required to view configurations. Write access is required to make configuration changes. Depending on your account's profile, you may not have access to all CLI commands. To have access to all CLI commands, an administrator account with the `super_admin` profile must be used, such as the `admin` account.

Accounts assigned the `super_admin` profile are similar to the root administrator account. They have full permission to view and change all FortiGate configuration options, including viewing and changing other administrator accounts.

To increase account security, set strong passwords for all administrator accounts, and change the passwords regularly.

## Using FortiExplorer Go and FortiExplorer

### FortiExplorer Go

FortiExplorer Go for iOS is a free mobile application that provisions and deploys BLE capable FortiGates with the BLE Autodiscovery feature. You can also use FortiExplorer Go to remotely manage FortiGates registered to your FortiCare account.

FortiExplorer Go can be downloaded from the [App Store](#) and requires iOS 15 or later.


For more information, refer to the [FortiExplorer Go User Guide](#).



FortiExplorer is also available for support on Android on the [Google Play Store](#). Steps for configuring FortiExplorer for Android may differ from what is included in the guide, which is based on iOS devices.

## FortiExplorer management

FortiExplorer for iOS is a user-friendly application that helps you to rapidly provision, deploy, and monitor Security Fabric components from your iOS device.

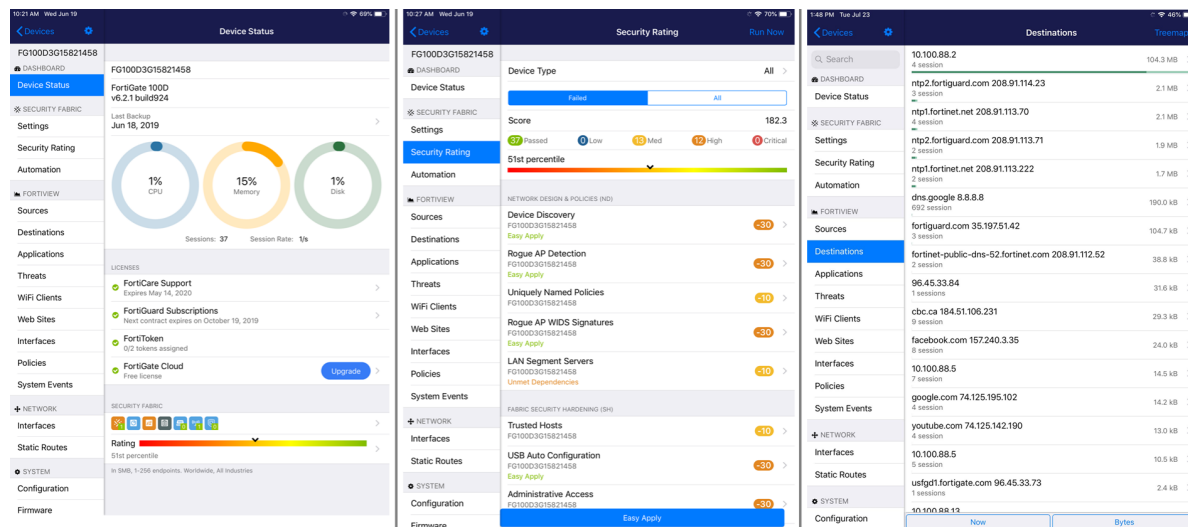

FortiExplorer for iOS requires iOS 10.0 or later and is compatible with iPhone, iPad, and Apple TV. It is supported by FortiOS 5.6 and later, and is available on the [App Store](#) for iOS devices.

Up to six members can use this app with 'Family Sharing' enabled in the App Store.




Firmware upload requires a valid firmware license. Users can download firmware for models with a valid support contract.

## Getting started with FortiExplorer

If your FortiGate is accessible on a wireless network, you can connect to it using FortiExplorer provided that your iOS device is on the same network. See [Connecting FortiExplorer to a FortiGate with WiFi](#). If your 200F series or 80F series FortiGate is in close proximity, you can connect to it using FortiExplorer using Bluetooth Low Energy (BLE). See [Configure FortiGate with FortiExplorer using BLE on page 50](#). Otherwise, you will need to physically connect your iOS device to the FortiGate using a USB cable.


### To connect and configure a FortiGate with FortiExplorer using a USB connection:

1. Connect your iOS device to your FortiGate USB A port. If prompted on your iOS device, *Trust* this computer.
2. Open FortiExplorer and select your FortiGate from the *FortiGate Devices* list . A blue USB icon will indicate that you are connected over a USB connection.

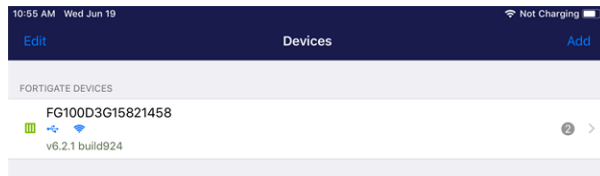


3. On the *Login* screen, select *USB*.
4. Enter the default *Username* (admin) and leave the *Password* field blank.
5. Optionally, select *Remember Password*.
6. Tap *Done* when you are ready.


FortiExplorer opens the FortiGate management interface to the *Device Status* page:

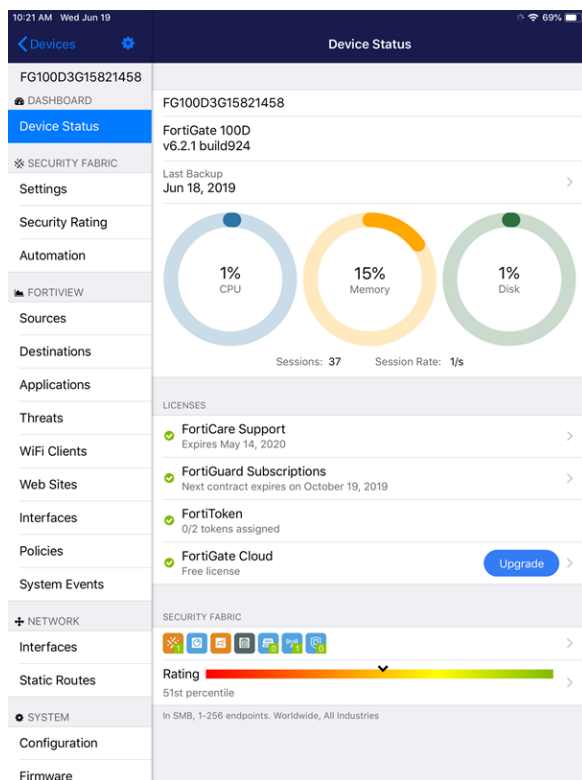


7. Go to *Network > Interfaces* and configure the WAN interface or interfaces.
8. The *wan1* interface *Address* mode is set to *DHCP* by default. Set it to *Manual* and enter its *Address*, *Netmask*, and *Default Gateway*, and then *Apply* your changes.

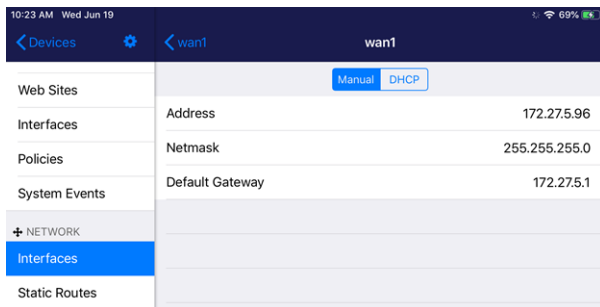

9. Optionally, configure *Administrative Access* to allow *HTTPS* access. This will allow administrators to access the FortiGate GUI using a web browser.

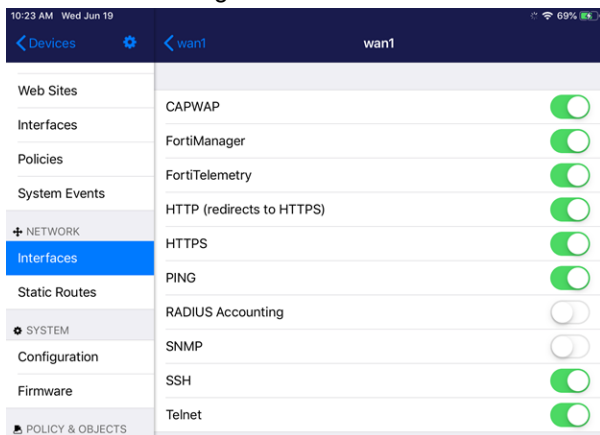

10. Go to *Network > Interfaces* and configure the local network (internal) interface.  
 11. Set the *Address* mode as before and configure *Administrative Access* if required.  
 12. Configure a *DHCP Server* for the internal network subnet.

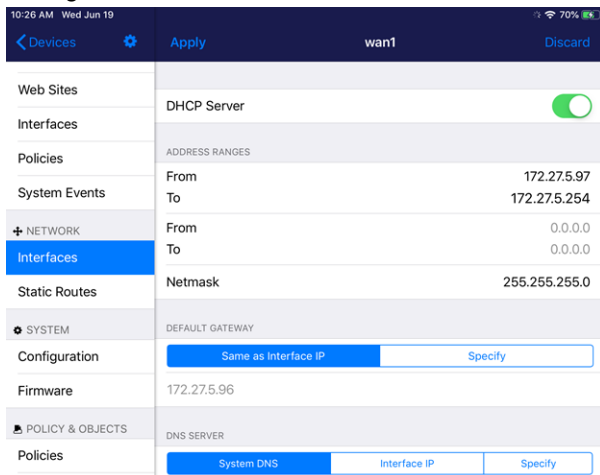

13. Return to the internal interface using the < button at the top of the screen.

14. Go to **Network > Static Routes** and configure the static route to the gateway.


15. Go to **Policy & Objects > Firewall Policy** and edit the Internet access policy. Enter a *Name* for the policy, enable the required *Security Profiles*, configure *Logging Options*, then tap **OK**.

## Connecting FortiExplorer to a FortiGate with WiFi


You can wirelessly connect to the FortiGate if your iOS device and the FortiGate are both connected to the same wireless network.

**To connect and configure a FortiGate with FortiExplorer wirelessly:**

1. Open the FortiExplorer app and tap *Add* on the *Devices* page.
2. On the *Add Device By* page, tap *HTTPS*.

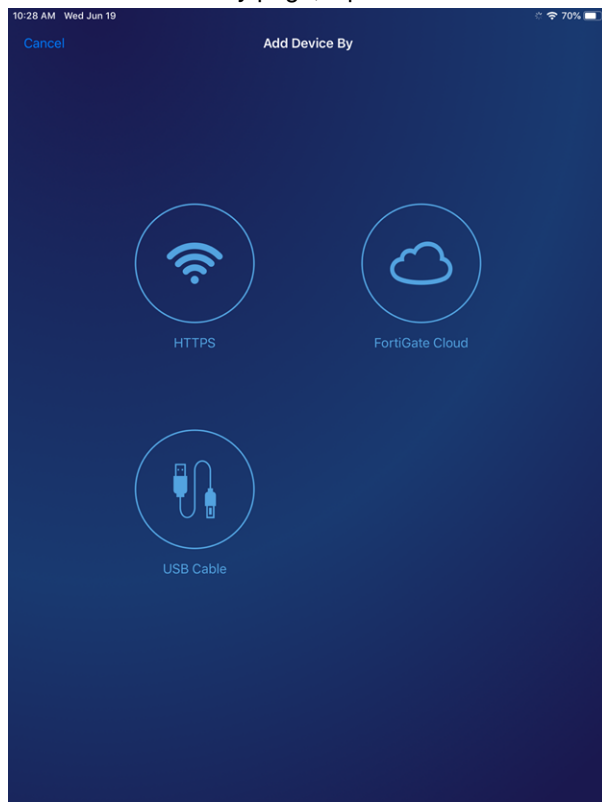

3. Enter the *Host* information, *Username*, and *Password*.
4. If required, change the default *Port* number, and optionally enable *Remember Password*.

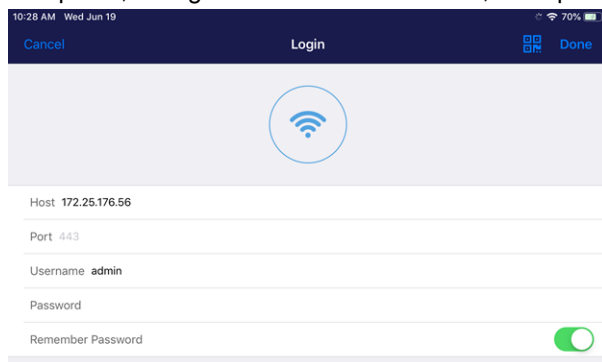

5. Tap *Done*.
6. If the FortiGate device identity cannot be verified, tap *Connect* at the prompt.  
FortiExplorer opens the FortiGate management interface to the *Device Status* page.

## Configure FortiGate with FortiExplorer using BLE

FortiGate 200F series and 80F series devices can be initially configured in FortiExplorer using Bluetooth Low Energy (BLE).



The state of the status LED on the device shows if BLE is enabled. See the device QuickStart guides for more information about LED states: [FortiGate 200F Series QuickStart Guide](#) and [FortiGate 80F Series QuickStart Guide](#).

---



When the status LED is flashing green, pressing and holding the reset button for five seconds or longer will reset the device to factory default settings.

---

BLE is enabled or disabled in the following scenarios after the FortiGate boots up:


- In factory default settings:
  - After the FortiGate has finished booting up (when the console login prompt is shown), the status LED will be flashing amber or red to indicate that BLE is enabled.
  - If the FortiGate is configured without using BLE, BLE will immediately be disabled and the status LED will turn solid green.
  - If the FortiGate is configured using BLE, the LED will continue flashing until the configuring device disconnects from BLE, after which BLE is disabled and the status LED turns solid green.
- Not in factory default configuration:
  - One minute after the FortiGate has finished booting up (when the console login prompt is shown), the status LED will turn solid green. Press and hold the reset button for one second. The status LED will start flashing to indicate that BLE is enabled.
  - If no BLE connection is made with the FortiGate, BLE will be disabled after one minute and the status LED will turn solid green.
  - If the FortiGate is configured without using BLE, BLE will immediately be disabled and the status LED will turn solid green.
  - If the FortiGate is configured using BLE, the LED will continue flashing until the configuring device disconnects from BLE, after which BLE is disabled and the status LED turns solid green.

**To enable BLE for one minute when the FortiGate is running and not in factory default configuration:**


```
# diagnose bluetooth enable 1
```

**To connect to and configure a FortiGate with FortiExplorer using BLE:**

1. Ensure that BLE is enabled on the FortiGate device.
2. Enable Bluetooth on your iOS device and open the FortiExplorer app.  
If the app has detected the FortiGate device, the device's serial number will be shown.

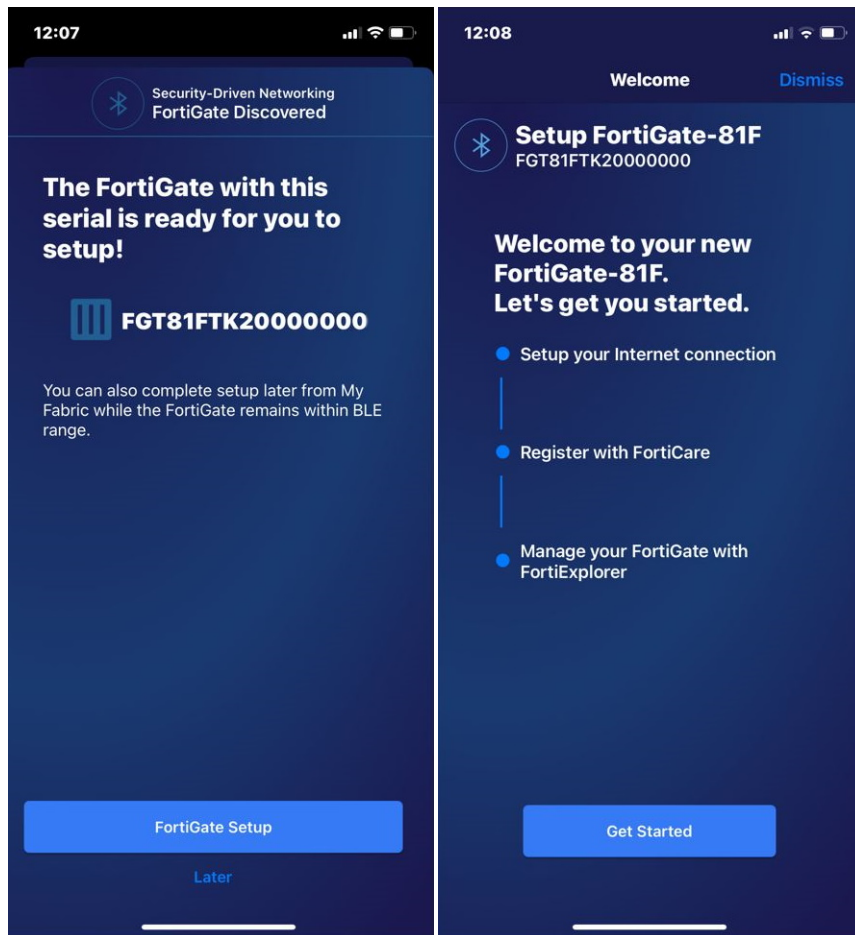

3. Log into the FortiGate in the app using the default credentials: *admin* and no password.
4. If this is the first time logging into the device, set a password.
5. Optionally, register with FortiCare.
6. Configure the FortiGate, including the WAN and internal interfaces, static routes, and other required settings.

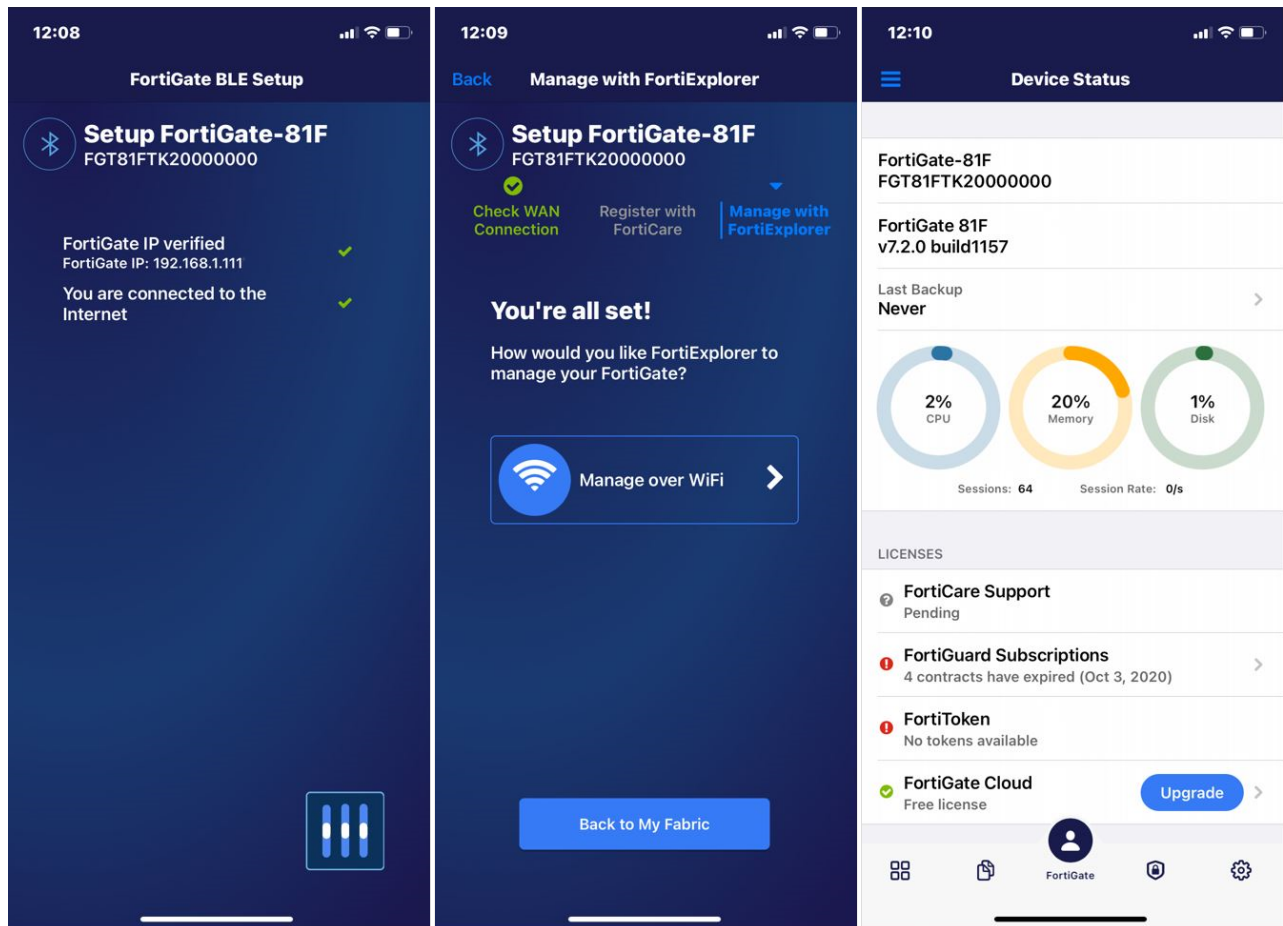

After configuring the FortiGate and disconnecting, BLE is disabled.


### To check the status of BLE on the FortiGate:

```
diagnose hardware test ble
diagnose bluetooth status
diagnose bluetooth get_bt_version
diagnose bluetooth clean_bt_mode
```

## Running a security rating

After configuring your network, run a security rating check to identify vulnerabilities and highlight best practices that could improve your network's security and performance.

Go to *Security Fabric > Security Rating* and follow the steps to determine the score. See [Security rating on page 2723](#) for more information.

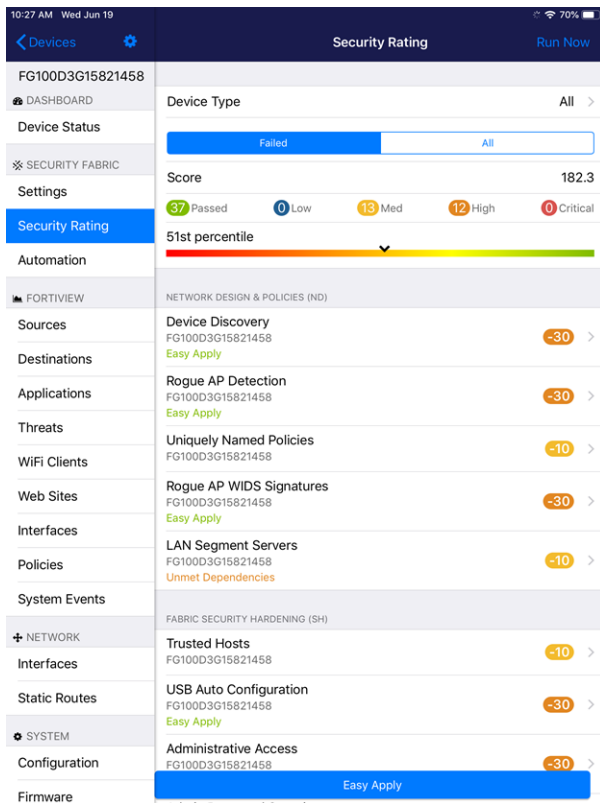

## Basic administration

This section contains information about basic FortiGate administration that you can do after you installing the unit in your network.

- [Basic configuration on page 54](#)
- [Registration on page 57](#)
- [FortiCare and FortiGate Cloud login on page 62](#)
- [Transfer a device to another FortiCloud account on page 64](#)
- [Configuration backups on page 67](#)
- [Deregistering a FortiGate on page 75](#)
- [Fortinet Developer Network access on page 77](#)

## Basic configuration

This topic will help you configure a few basic settings on the FortiGate as described in the [Using the GUI on page 24](#) and [Using the CLI on page 31](#) sections, including:

- [Configuring an interface on page 55](#)
- [Configuring the hostname on page 55](#)
- [Configuring the default route on page 56](#)

- [Ensuring internet and FortiGuard connectivity on page 56](#)
- [Using the default certificate for HTTPS administrative access on page 56](#)

## Configuring an interface

It is unlikely the default interface configuration will be appropriate for your environment and typically requires some effort of the administrator to use these settings, such as being physically near the FortiGate to establish a serial connection. Therefore, the first step is to configure an interface that can be used to complete the FortiGate configuration.

### To configure an interface in the GUI:

1. Go to *Network > Interfaces*. Select an interface and click *Edit*.
2. Enter an *Alias*.
3. In the *Address* section, enter the *IP/Netmask*.
4. In *Administrative Access* section, select the access options as needed (such as *PING*, *HTTPS*, and *SSH*).
5. Optionally, enable *DHCP Server* and configure as needed.
6. Click *OK*.

### To configure an interface in the CLI:

```
config system interface
  edit "port2"
    set ip 203.0.113.99 255.255.255.0
    set allowaccess ping https ssh
    set alias "Management"
  next
end
```

## Configuring the hostname

Setting the FortiGate's hostname assists with identifying the device, and it is especially useful when managing multiple FortiGates. Choose a meaningful hostname as it is used in the CLI console, SNMP system name, device name for FortiGate Cloud, and to identify a member of an HA cluster.

### To configure the hostname in the GUI:

1. Go to *System > Settings*.
2. Enter a name in the *Host name* field.
3. Click *Apply*.

### To configure the hostname in the CLI:

```
config system global
  set hostname 200F_YVR
end
```

## Configuring the default route

Setting the default route enables basic routing to allow the FortiGate to return traffic to sources that are not directly connected. The gateway address should be your existing router or L3 switch that the FortiGate is connected to. If you are directly connecting to the FortiGate, you may choose your endpoint's IP address as the gateway address. Set the interface to be the interface the gateway is connected to.

### To configure the default route in the GUI:

1. Go to *Network > Static Routes* and click *Create New*.
2. Leave the destination subnet as *0.0.0.0/0.0.0.0*. This is known as a default route, since it would match any IPv4 address.
3. Enter the *Gateway Address*.
4. Select an *Interface*.
5. Click *OK*.

### To configure the default route in the CLI:

```
config router static
  edit 0
    set gateway 192.168.1.254
    set device port1
  next
end
```

## Ensuring internet and FortiGuard connectivity

This step is not necessary for the configuration; however, it is necessary in order to keep your FortiGate up to date against the latest threats. Updates are provided to FortiGates that are registered and make a request to the FortiGuard network to verify if there are any more recent definitions.

Use `execute ping <domain.tld>` to ensure the DNS resolution is able to resolve the following FortiGuard servers:

- `fds1.fortinet.com`
- `service.fortiguard.net`
- `update.fortiguard.net`

You also need to ensure the necessary ports are permitted outbound in the event your FortiGate is behind a filtering device. Refer to the [Ports and Protocols](#) document for more information.

## Using the default certificate for HTTPS administrative access

By default, the FortiGate uses the `Fortinet_GUI_Server` certificate for HTTPS administrative access. Administrators should download the CA certificate and install it on their PC to avoid warnings in their browser. See [Using the default certificate for HTTPS administrative access on page 2295](#) for more information.

## Registration

The FortiGate, and then its service contract, must be registered to have full access to [Fortinet Customer Service and Support](#), and [FortiGuard](#) services. The FortiGate can be registered in either the FortiGate GUI or the FortiCloud support portal. The service contract can be registered from the FortiCloud support portal.



The service contract number is needed to complete registrations on the FortiCloud support portal. You can find this 12-digit number in the email that contains your service registration document (sent from [do-not-reply-contract@fortinet.com](mailto:do-not-reply-contract@fortinet.com)) in the service entitlement summary.

### To register your FortiGate in the GUI:

 
1. Connect to the FortiGate GUI. A dialog box appears, which indicates the steps you should take to complete the setup of your FortiGate. These steps include:

- a. *Specify Hostname*
- b. *Change Your Password*
- c. *Dashboard Setup*
- d. *Upgrade Firmware*

If you completed the [Basic configuration on page 54](#), the hostname and password steps are already marked as complete (checkmark). If you chose to deploy the latest firmware, the *Upgrade Firmware* step is marked as complete.

2. Click *Begin* to complete the dashboard setup. Two options appear (*Optimal* and *Comprehensive*).

3. Select the desired setting and click *OK*. The *Dashboard > Status* page opens. Note that the licenses are grayed out because the device or virtual machine is not registered.
4. Go to *System > FortiGuard* and click *Enter Registration Code*.



5. Enter the contract registration code from your service registration document.
6. Click *OK*.

### To register the FortiGate on the FortiCloud support portal:

1. Go to [support.fortinet.com](https://support.fortinet.com) and log in using your FortiCloud account credentials. If you do not have an account, click *Register* to create one.
2. In the left-side menu, click *Register Product*.
3. Enter the product serial number or license certificate number for a VM, select an end user type, then click *Next*.

**FortiCloud** Services Support

**Register Product** 1 Registration Code 2 3 4

**Registration Code**

Please enter your product serial number, service contract registration code or license certificate number to start the registration: \*

FGT40FTK

**End User Type**

The product will be used by

☐ A government user

☒ A non-government user

In this context a government end-user is any central, regional or local government department, agency, or other entity performing governmental functions, including:

1. Governmental research institutions.
2. Governmental corporations or their separate business units which are engaged in the manufacture or distribution of items or services controlled on the Wassenaar Munitions List.
3. International governmental organizations.

Clear Next

4. Enter the *Support Contract* number and *FortiCloud Key* (optionally, enter a product description), then click *Next*.

**FortiCloud** Services Support

**Register Product** > FGT40FTK 1 2 Registration Info 3 4

Serial Number: FGT40FTK Product Model: FortiGate 40F

Support Contract No.:

Product Description:

FortiCloud Key:

Your FortiCloud key is located on a sticker attached to your product. If you are unable to physically access the device, or the sticker is no longer present, you can register your product directly via product GUI without the Key. If you have any problems and require assistance, please contact us for assistance.

Fortinet Partner: \*

Select a Partner

Asset Folder:

My Assets

Cancel Previous Next

5. Review the product entitlement information, select the checkbox to accept the terms, then click *Confirm*.



**FortiCloud** Services Support

Register Product > FGT40FTK

Serial Number: FGT40FTK Product Model: FortiGate 40F

**Important Notice:**  
 READ BEFORE COMPLETING THE REGISTRATION.

Product Warranty Type: Fortinet Internal Order  
 Warranty Support Start Date: 2021-09-14  
 Warranty Support Start Event: Initial Registration of SN at support.fortinet.com

Asset location: My Assets

**PRODUCT ENTITLEMENT**

Support Type	Support Level	Activation Date	Expiration Date
Hardware	Advanced HW	2021-07-21	2022-07-21
Firmware & General Updates	Web/Online	2021-07-21	2022-07-21
Enhanced Support	24x7	2021-07-21	2022-07-21
Telephone Support	24x7	2021-07-21	2022-07-21
Advanced Malware Protection	Web/Online	2021-07-21	2022-07-21
NGFW	Web/Online	2021-07-21	2022-07-21
Web & Video Filtering	Web/Online	2021-07-21	2022-07-21
AntiSpam	Web/Online	2021-07-21	2022-07-21
FortiSandbox Cloud	Web/Online	2021-07-21	2022-07-21

Entitlement calculation is based on any existing warranty or contract services plus the term of your new contract. If you have questions regarding these conditions, please open a ticket for Registration Assistance by clicking [here](#).

☐ By accepting these terms, you are activating this support contract and the entitlement period provided can not be changed. If you wish to continue, click "confirm" button to submit your request.

Cancel Previous Confirm

6. Go to **Products > Product List**. The FortiGate is now visible in the product list.

**FortiCloud** Services Support

View Products - 7

Search Product List ...

SERIAL NUMBER	PRODUCT MODEL	DESCRIPTION	DAYS TO EXPIRATION	REGISTRATION DATE
FAZ-VM01	FortiAnalyzer VM	FAZ	2022-05-12	2021-05-12
FCITEMS001	FortiClient EMS	test	2025-05-24	2020-05-25
FGT50E	FortiGate 50E		2022-02-12	2019-07-04
FGVM01TM	FortiGate VM01	FGT1	2022-03-26	2021-03-26
FGVM01TM	FortiGate VM01	FGT2	2022-04-20	2021-04-20
FW60CM3G	FortiWiFi 60CM		No coverage	2017-05-04
FGT40FTK	FortiGate 40F		2022-07-21	2021-07-21


## FortiCare Register button

The FortiCare *Register* button is displayed in the GUI on various Fabric and device related pages and widgets available for FortiGates.

There are two methods to access the *Register* button:


- Right-click on a device in a topology.  
*Security Fabric > Physical Topology* page:

## Getting started

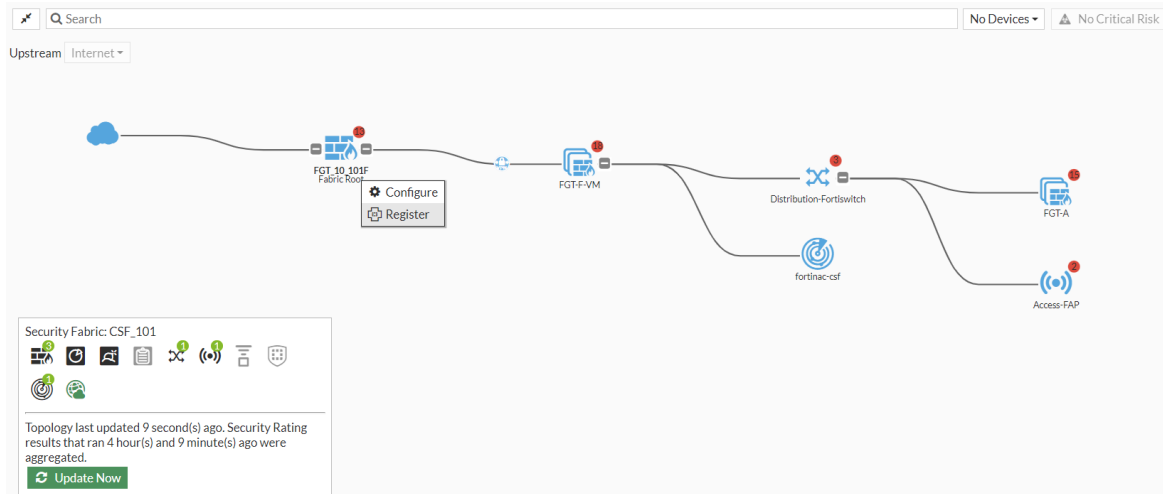

- Hover over a device to display the tooltip.

**Security Fabric > Logical Topology** page:

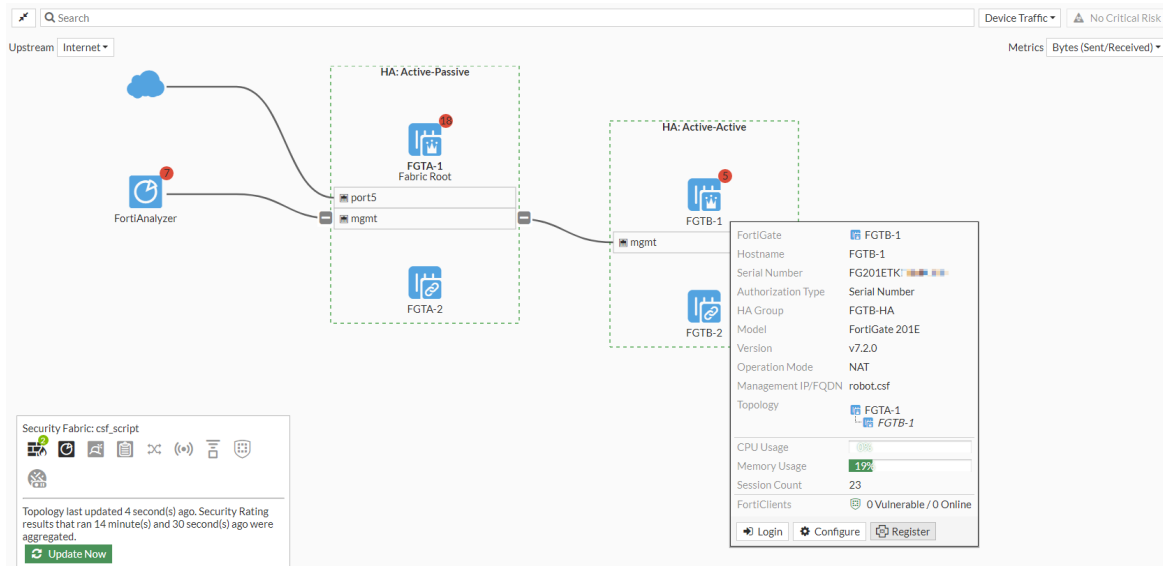

**System > HA** page:

FortiGate 301E MGMT HA 1 3 5 7 9 11 13 15 17 19 21 23 25 27 29 31 VVW1

FGTA-1 (Primary)

Refresh Edit Remove device from HA cluster

Status	Priority	Hostname	Serial No.	Role	System Uptime	Sessions	Throughput
Synchronized	254	FGTA-1	FG3H1E5818900718	Primary	27m 50s	0	40.00 kbps
Synchronized	128	FGTA-2		Secondary	27m 43s	0	18.00 kbps

FortiGate  
FGTA-1  
FG3H1E5818900718  
Serial Number  
FGTA-HA  
FortiGate 301E  
v7.2.0  
NAT  
robot.csf

Topology  
FGTA-1  
4 Downstream Fabric Devices

CPU Usage  
Memory Usage  
Session Count  
FortiClients

Configure Register



The **Register** button is also accessible from tooltips for devices on the *Managed FortiAPs* and *Managed FortiSwitches* pages.

Clicking **Register** opens the *Device Registration* pane. If a device is already registered, the pane still opens and displays the device information.

Device Registration

1 Registration Status 2 FortiCloud Account 3 Registration Summary

Name	Serial	Model	Type	Status	Registration	FortiCloud Account
FGTB-1	FG201ETK1	FG201E	FortiGate	Authorized	Registered	fortinet.com
FGTB-2	FG201ETK2	FG201E	FortiGate	Authorized	Registered	fortinet.com

Close

Primary and secondary HA members can be registered to FortiCare at the same time from the primary unit by using the **Register** button. The secondary unit will register through the HA proxy. In this example, a HA member is registered from the *Physical Topology* page.

### To register a HA member to FortiCare:

1. On the primary unit, go to *Security Fabric > Physical Topology*.
2. Hover over the HA member and click **Register**. The *Device Registration* pane opens.
3. Select the device and click **Register**.
4. Enter the required FortiCloud account information (password, country or region, reseller) and click **Submit**.
5. Once the registration is complete, click **Close**.

## FortiCare and FortiGate Cloud login

With FortiCloud, FortiOS supports a unified login to FortiCare and FortiGate Cloud. The FortiGate Cloud setup is a subset of the FortiCare setup.

- If the FortiGate is not registered, activating FortiGate Cloud will force you to register with FortiCare.
- If a FortiGate is registered in FortiCare using a FortiCloud account, then only that FortiCloud account can be used to activate FortiGate Cloud.
- If a different FortiCloud account was already used to activate FortiGate Cloud, then a notification asking you to migrate to FortiCloud is shown in the GUI after upgrading FortiOS.

The CLI can be used to activate FortiGate Cloud without registration, or with a different FortiCloud account.

### To activate FortiGate Cloud and register with FortiCare at the same time:

1. Go to *Dashboard > Status*.
2. In the FortiGate Cloud widget, click *Not Activated > Activate*.  
You must register with FortiCare before activating FortiGate Cloud.

The screenshot shows the 'FortiCare Registration' dialog box. It contains the following fields and options:

- FortiGate:** FG101E
- FortiCloud:** Login (selected), Create Account
- Email:** [Text input field]
- Password:** [Text input field] with a 'Forgot your password?' link.
- Country/Region:** [Dropdown menu]
- Reseller:** [Dropdown menu]
- End-user type:** Non-government (selected), Government
- Sign in to FortiGate Cloud using the same account:** [Toggle switch, currently off]
- Allow administrative login using FortiCloud SSO:** [Toggle switch, currently on]
- Buttons:** OK, Cancel

3. Enter your FortiCare *Email* address and *Password*.
4. Select your *Country/Region*, *Reseller*, and *End-user type*.
5. Enable *Sign in to FortiGate Cloud using the same account*.
6. Click **OK**.

### To activate FortiGate Cloud on an already registered FortiGate:

1. Go to *Dashboard > Status*.
2. In the *FortiGate Cloud* widget, click *Not Activated > Activate*.

The screenshot shows the FortiGate Cloud widget in the FortiGate GUI. The widget displays the status 'Not Activated' with an orange warning icon and an 'Activate' button. The background shows the 'System Information' and 'Licenses' widgets.

**System Information:**

- Hostname: FortiGate-101E
- Serial Number: [Redacted]
- Firmware: v7.0.4
- Mode: NAT
- System Time: 2022/01/23 14:34:46
- Uptime: 00:00:47:15
- WAN IP: [Redacted]

**Licenses (173.243.141.6):**

- FortiCare Support
- Firmware & General Updates
- IPS
- AntiVirus
- Web Filtering
- FortiToken: 0/2

**FortiGate Cloud:**

- Status: Not Activated (with orange warning icon)
- Activate button

- Enter the password for the account that was used to register the FortiGate.

FortiGate-101E: Activate FortiGate Cloud

FortiGate **FortiGate-101E**

Email @fortinet.com

Password

Domain **Global**

☒ Send logs to FortiGate Cloud

OK Cancel

**System Information**

Hostname FortiGate-101E

Serial Number

Firmware v7.0.4

Mode NAT

System Time 2022/01/23 14:31:39

Uptime 00:00:48:29

WAN IP

- Click OK.

The *FortiGate Cloud* widget now shows the activated FortiCloud account.

**System Information**

Hostname FortiGate-101E

Serial Number

Firmware v7.0.4

Mode NAT

System Time 2022/01/23 14:31:39

Uptime 00:00:44:09

WAN IP

**Licenses (173.243.141.6)**

- FortiCare Support
- Firmware & General Updates
- IPS
- AntiVirus
- Web Filtering

FortiToken 0/2

**FortiGate Cloud**

Status **Activated**

Server Location Global

Log Retention **Free License**

Storage Used 0 B

**To migrate from the activated FortiGate Cloud account to the registered FortiCloud account:**

- Go to *System > FortiGuard*.
- In the *FortiCare Support* row, click *Actions > Transfer FortiGate to Another Account*.

FortiGuard Distribution Network

**License Information**

Entitlement	Status
FortiCare Support	Registered
Virtual Machine	Valid (Expiration Date: 2022/04/21)
Firmware & General Updates	Licensed (Expiration Date: 2022/04/21)
Intrusion Prevention	Licensed (Expiration Date: 2022/04/21)
AntiVirus	Licensed (Expiration Date: 2022/04/21)
Web Filtering	Licensed (Expiration Date: 2022/04/21)
Outbreak Prevention	Licensed (Expiration Date: 2022/04/21)
SD-WAN Network Monitor	Licensed (Expiration Date: 2022/04/21)
Security Rating	Licensed (Expiration Date: 2022/04/21)
Industrial DB	Licensed (Expiration Date: 2022/04/21)
FortiIPAM	Licensed (Expiration Date: 2022/04/21)
IoT Detection Service	Licensed (Expiration Date: 2022/04/21)
FortiGate Cloud	Activated
FortiGate Cloud Log Retention	Free License

**FortiGuard Updates**

Next Update: 2022/01/23 14:48

Update Licenses & Definitions

**Service Communications**

Service	Traffic Volume (Last 24h)
FortiCare	0 B
FortiGate Cloud Log	3.21 kB
FortiGuard.com	2.60 MB
FortiGuard Download	48.42 MB
FortiGuard Query	4.57 kB
FortiGate Cloud Sandbox	0 B
OCVPN	0 B
SDNS	0 B
FortiToken Registration	0 B

**Actions**

- Login to My Account
- Transfer FortiGate to Another Account

Logout Upgrade

- Enter the *Password* of the current FortiCloud account.

4. Enter the target *FortiCloud Account* name and *Password*, then click *Next*.
5. Review the information in the *From* and *To* fields, then click *Transfer*.

### To activate FortiGate Cloud using an account that is not used for registration:

1. Enter the following with the credentials for the account being used to activate FortiGate Cloud:

```
# execute fortiguard-log login <account_id> <password>
```

2. Check the account type:

```
# diagnose fdsm contract-controller-update
Protocol=2.0|Response=202|Firmware=FAZ-4K-FW-2.50-
100|SerialNumber=FAMS000000000000|Persistent=false|ResponseItem=HomeServer:172.16.95.151
:443*AlterServer:172.16.95.151:443*Contract:20200408*NextRequest:86400*UploadConfig:False
*ManagementMode:Local*ManagementID:737941253*AccountType:multitenancy

Result=Success
```



A FortiCloud account that is not used for the support portal account cannot be used to register FortiGate. Attempting to activate FortiGate Cloud with this type of account will fail.

## Transfer a device to another FortiCloud account

Master account users can transfer a device from one FortiCloud/FortiCare account to another. Users can transfer a device up to three times within a twelve-month time period. If more transfers are required within the twelve-month time period, contact [Technical Support](#) to request the transfer.

### Requirements:


To transfer an account, you must:

- Have access to the FortiGate, as well as both the FortiCloud and FortiCare accounts.
- Be a master account user.

To verify if you are the master account user, log in to [support.fortinet.com](https://support.fortinet.com). Click the username, then select *My Account*.



The *Account Profile* page opens.

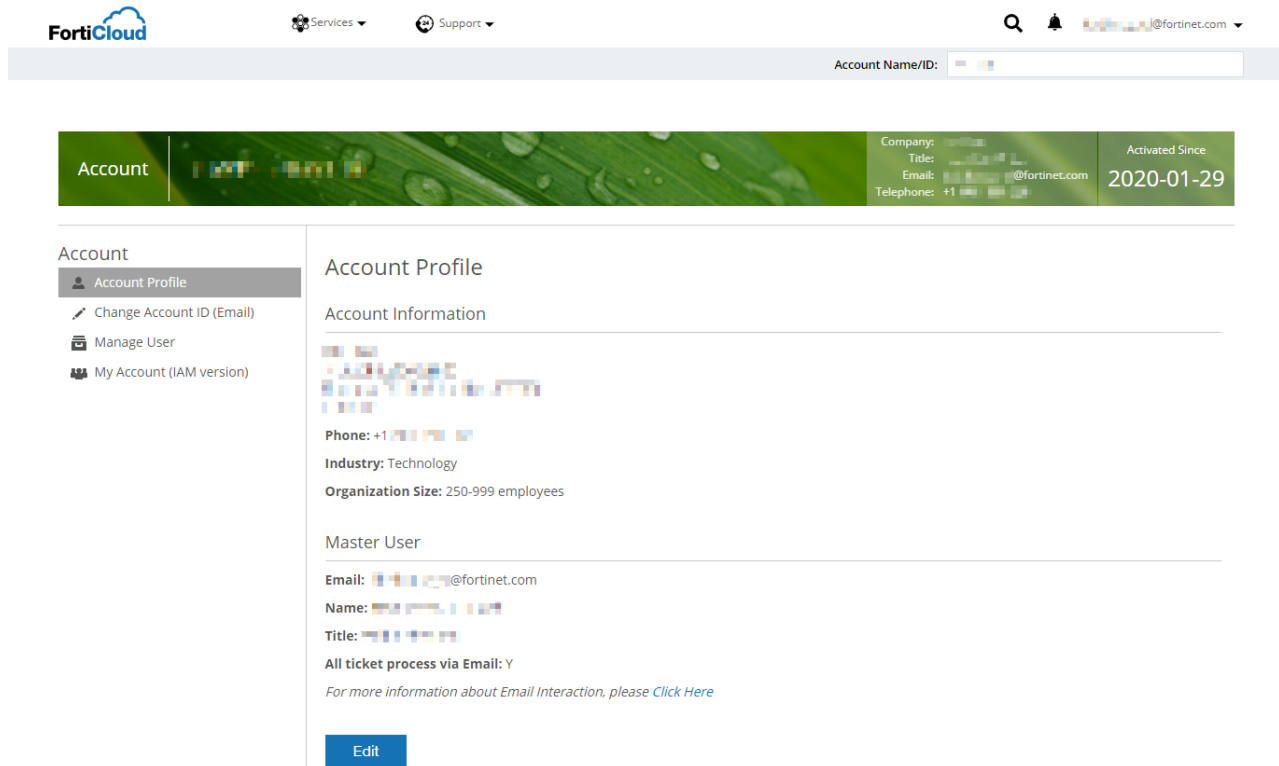


### To transfer an account in the GUI:

1. Go to *Dashboard > Status*.
2. In the *Licenses* widget, click the *FortiCare Support* link, then click *Transfer FortiGate to Another Account*.




You can also transfer an account from *System > FortiGuard*.

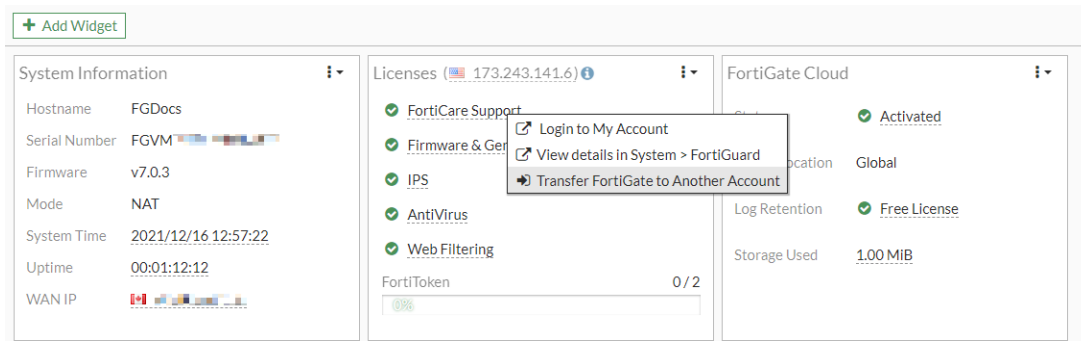


3. In the *Current FortiCloud Account* fields, enter the username and password for the current account. In the *Target FortiCloud Account* fields, enter the new username and password.


4. Click **Next**.

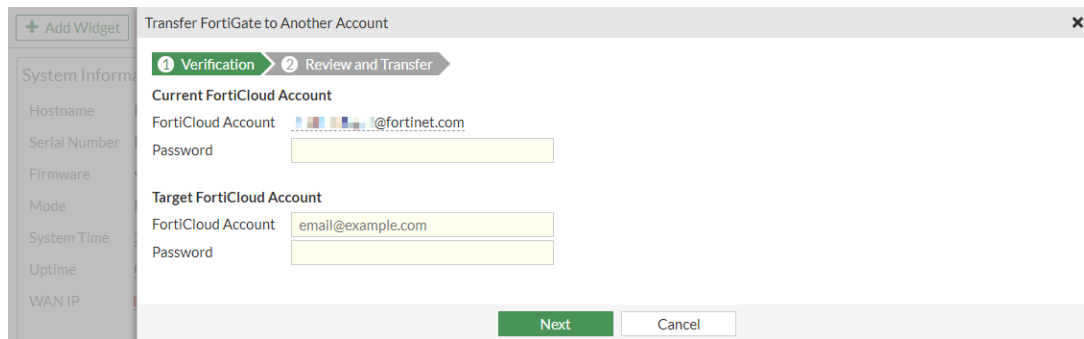

5. Review the information, then click **Transfer**.

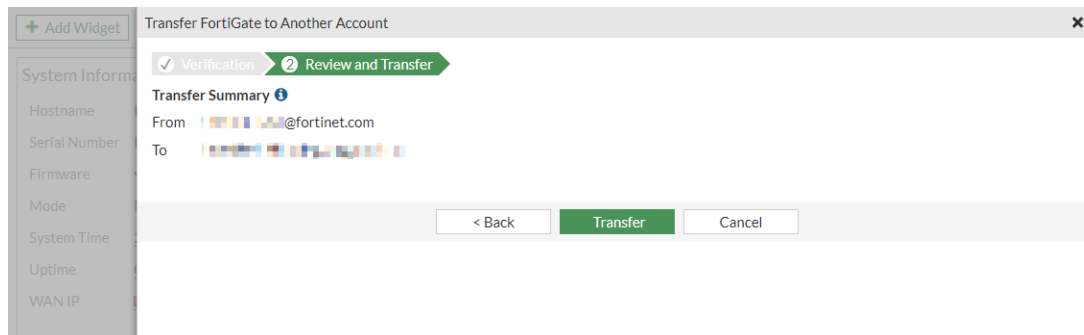

After the transfer is complete, the new the FortiCloud account is displayed in the *Licenses* widget.

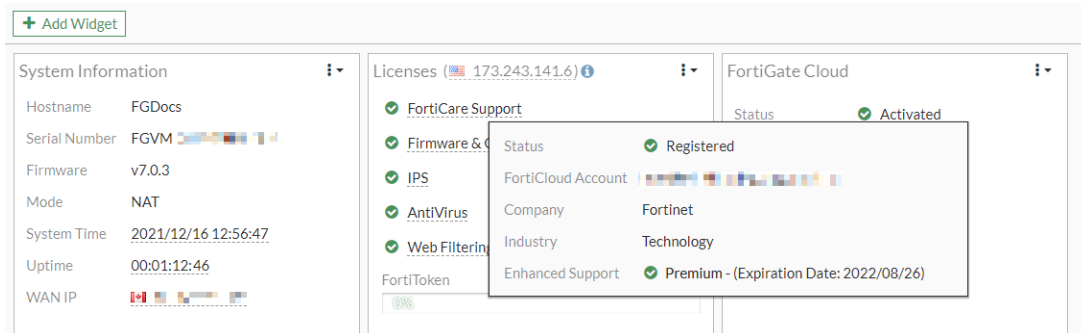



## Configuration backups

Once you successfully configure the FortiGate, it is extremely important that you back up the configuration. In some cases, you may need to reset the FortiGate to factory defaults or perform a TFTP upload of the firmware, which will erase the existing configuration. In these instances, the configuration on the device will have to be recreated, unless a backup can be used to restore it.

You can use the GUI or CLI to back up the configuration in FortiOS or YAML format. You have the option to save the configuration file in FortiOS format to various locations including the local PC, USB key, FTP, and TFTP server. FTP and TFTP are only configurable through the CLI. In YAML format, configuration files can be backed up or restored on an FTP or TFTP server through the CLI.

This topic includes the following information:

- [Backing up and restoring configurations from the GUI on page 67](#)
- [Backing up and restoring configurations from the CLI on page 70](#)
- [Configuration revision on page 74](#)
- [Restore factory defaults on page 75](#)
- [Secure file copy on page 75](#)

### Backing up and restoring configurations from the GUI

Configurations can be backed up using the GUI to your PC or a USB disk.

Field	Description
Scope	When the FortiGate is in multi-vdom mode and a user is logged in as a global administrator.
Backup to	You can choose where to save the configuration backup file. <ul style="list-style-type: none"><li>• <i>Local PC</i>: Save the configuration file to your PC.</li><li>• <i>USB Disk</i>: Save the configuration file to an external USB disk. This option is not available if there is no USB drive inserted in the USB port.</li></ul> You can also back up to FortiManager using the CLI.
File format	The configuration file can be saved in FortiOS or YAML format.
Password mask	Use password masking when sending a configuration file to a third party. When password masking is enabled, passwords and secrets will be replaced in the configuration file with <code>FortinetPasswordMask</code> .
Encryption	Enable <i>Encryption</i> to encrypt the configuration file. A configuration file cannot be restored on the FortiGate without a set password. Encryption must be enabled on the backup file to back up VPN certificates.

#### To back up the configuration in FortiOS format using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Backup*.
2. Direct the backup to your *Local PC* or to a *USB Disk*.

### 3. Enable *Encryption*.



This is recommended to secure your backup configurations and prevent unauthorized parties from reloading your configuration.

4. Enter a password, and enter it again to confirm it. This password will be required to restore the configuration.
5. Click **OK**.
6. When prompted, select a location on the PC or USB disk to save the configuration file. The configuration file will have a .conf extension.

### To back up the configuration in YAML format using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Backup*.
2. Direct the backup to your *Local PC* or to a *USB Disk*.
3. Select *YAML* for the *File format*.
4. Click **OK**.

When backing up a configuration that will be shared with a third party, such as Fortinet Inc. Support, passwords and secrets should be obfuscated from the configuration to avoid information being unintentionally leaked. Password masking can be completed in the *Backup System Configuration* page and in the CLI. When password masking is enabled, passwords and secrets will be replaced in the configuration file with `FortinetPasswordMask`.

### To mask passwords in the GUI:

1. Click on the username in the upper right-hand corner of the screen and select *Configuration > Backup*.
2. Select *YAML* as the *File format*.
3. Enable *Password mask*. A warning message is displayed.

4. Click **OK**. The configuration file is saved to your computer with passwords and secrets obfuscated.

The following is an example of output with password masking enabled:

```
config system admin
  edit "1"
    set accprofile "prof_admin"
    set vdom "root"
    set password FortinetPasswordMask
  next
end
config vpn ipsec phase1-interface
  edit "vpn-1"
```

```
set interface "port1"
set peertype any
set net-device disable
set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
set comments "VPN: vpn-1 (Created by VPN wizard)"
set wizard-type static-fortigate
set remote-gw 172.16.200.55
set psksecret FortinetPasswordMask
next
end
config wireless-controller vap
edit "ssid-1"
set passphrase FortinetPasswordMask
set schedule "always"
next
end
```

### Restoring configuration files from the GUI

Configuration files can be used to restore the FortiGate to a previous configuration in the *Restore System Configuration* page.

#### To restore the FortiGate configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Restore*.
2. Identify the source of the configuration file to be restored: your *Local PC* or a *USB Disk*.  
The *USB Disk* option will not be available if no USB drive is inserted in the USB port. You can restore from the FortiManager using the CLI.
3. Click *Upload*, locate the configuration file, and click *Open*.
4. Enter the password if required.
5. Click *OK*.

When restoring a configuration file that has password masking enabled, obfuscated passwords and secrets will be restored with the password mask.




Restoring the FortiGate with a configuration with passwords obfuscated is not recommended.

---

#### To restore an obfuscated YAML configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Restore*.
2. Click *Upload*. The File Explorer is displayed.
3. Navigate to the configuration file and click *Open*.

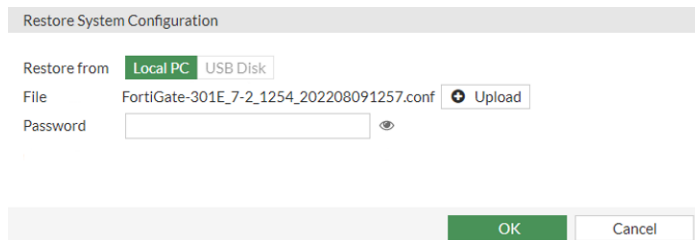


Restore System Configuration

Restore from: **Local PC** | USB Disk

File: FortiGate-301E\_7-2\_1254\_202208091257.conf

Password:

4. (Optional) Enter the file password in the *Password* field.
5. Click **OK**. The *Confirm* pane is displayed with a warning.

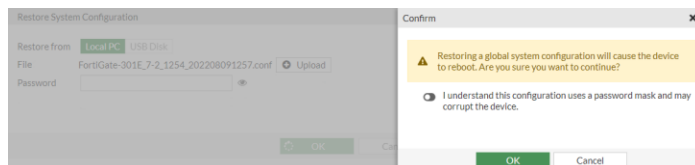

Restore System Configuration

Restore from: **Local PC** | USB Disk

File: FortiGate-301E\_7-2\_1254\_202208091257.conf

Password:

**Confirm**

⚠ Restoring a global system configuration will cause the device to reboot. Are you sure you want to continue?

☒ I understand this configuration uses a password mask and may corrupt the device.

6. Toggle the acknowledgment.
7. Click **OK**.

## Backing up and restoring configurations from the CLI

Configuration backups in the CLI are performed using the `execute backup` commands and can be backed up in FortiOS and YAML format.

Configuration files can be backed up to various locations depending on the command:

- `flash`: Backup the configuration file to the flash drive.
- `ftp`: Backup the configuration file to an FTP server.
- `management-station`: Backup the configuration file to a management station, such as FortiManager or FortiGate Cloud.
- `sftp`: Backup the configuration file to a SFTP server.
- `tftp`: Backup the configuration file to a TFTP server.
- `usb`: Backup the configuration file to an external USB drive.
- `usb-mode`: Backup the configuration file for USB mode.

Command	Description
# <code>execute backup config</code>	Back up the configuration in FortiOS format. Backup your configuration file to: <ul style="list-style-type: none"> <li>• <code>flash</code></li> <li>• <code>ftp</code></li> <li>• <code>management-station</code></li> <li>• <code>sftp</code></li> <li>• <code>tftp</code></li> <li>• <code>usb</code></li> <li>• <code>usb-mode</code></li> </ul>
# <code>execute backup full-config</code>	Backup the configuration, including backups of default configuration settings. Backup your configuration file to:

Command	Description
	<ul style="list-style-type: none"> <li>• ftp</li> <li>• sftp</li> <li>• tftp</li> <li>• usb</li> <li>• usb-mode</li> </ul>
# execute backup yaml-config	Backup the configuration in YAML format. Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• tftp</li> </ul>
# execute backup obfuscated-config	Backup the configuration with passwords and secrets obfuscated. Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• management-station</li> <li>• sftp</li> <li>• tftp</li> <li>• usb</li> </ul>
# execute backup obfuscated-full-config	Backup the configuration (including default configuration settings) with passwords and secrets obfuscated. Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• sftp</li> <li>• tftp</li> <li>• usb</li> </ul>
# execute backup obfuscated-yaml-config	Backup the configuration in YAML format with passwords and secrets obfuscated. Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• tftp</li> </ul>

### To back up the configuration in FortiOS format using the CLI:

For FTP, note that port number, username are optional depending on the FTP site:

```
# execute backup config ftp <backup_filename> <ftp_server>[:<ftp_port>] [<user_name>]
[<password>] [<backup_password>]
```

or for TFTP:

```
# execute backup config tftp <backup_filename> <tftp_servers> [<backup_password>]
```

or for SFTP:

```
# execute backup config sftp <backup_filename> <sftp_server>[:<sftp_port>] <user> <password>
[<backup_password>]
```

or:

```
# execute backup config management-station <comment>
```

or:

```
# execute backup config usb <backup_filename> [<backup_password>]
```

Use the same commands to backup a VDOM configuration by first entering the commands:

```
config vdom
  edit <vdom_name>
```

See [Backing up and restoring configurations in multi VDOM mode on page 2312](#) for more information.

When backing up a configuration in YAML format, if it is not already specified in the file name, `.yaml` will be appended to the end. For example, if the file name entered is `301E.conf`, the name will become `301E.conf.yaml` after the configuration is backed up.

### To back up the configuration in YAML format using the CLI:

```
# execute backup yaml-config {ftp | tftp} <filename> <server> [username] [password]
```

For example:

```
# execute backup yaml-config tftp 301E.conf 172.16.200.55
Please wait...
The suffix '.yaml' will be appended to the filename if user does not add it
specifically.
Connect to tftp server 172.16.200.55 ...
#
Send config file to tftp server OK.
```

Configuration files can be configured with obfuscated passwords and secrets to not unintentionally leak information when sharing configuration files with third parties.

### To mask passwords in a configuration backup in the CLI:

```
# execute backup obfuscated-config {ftp | management-station | sftp | tftp | usb}
```

### To mask passwords in the full configuration backup in the CLI:

```
# execute backup obfuscated-full-config {ftp | sftp | tftp | usb}
```

### To mask passwords in a configuration backup with YAML formatting in the CLI:

```
# execute backup obfuscated-yaml-config {ftp | tftp}
```



If a configuration is being backed up on a server, server information must be included with the command. Other information that may be required with an `execute backup` command includes file names, passwords, and comments.

---

## Restoring configuration files from the CLI

Configuration files can be used to restore the FortiGate using the CLI.

Command	Description
# execute restore config	<p>Restore a configuration that is in FortiOS or YAML format. The file format is automatically detected when it is being restored.</p> <p>Configurations can be loaded from:</p> <ul style="list-style-type: none"> <li>flash: Load the configuration file from flash to firewall.</li> <li>ftp: Load the configuration file from an FTP server.</li> <li>management-station: Load the configuration from a management station.</li> <li>tftp: Load the configuration from from a TFTP server.</li> <li>usb: Load the configuration file from an external USB disk to firewall.</li> <li>usb-mode: Load the configuration file from an external USB disk and reboot.</li> </ul>

### To restore the FortiGate configuration using the CLI:

For FTP, note that port number, username are optional depending on the FTP site:

```
# execute restore config ftp <backup_filename> <ftp_server>[:<port>] [<user_name>]
[<password>] [<backup_password>]
```

or for TFTP:

```
# execute restore config tftp <backup_filename> <tftp_server> [<backup_password>]
```

For restoring the configuration from FortiManager or FortiGate Cloud:

```
# execute restore config management-station normal <revision ID>
```

or:

```
# execute restore config usb <backup_filename> [<backup_password>]
```

The FortiGate will load the configuration file and restart. Once the restart has completed, verify that the configuration has been restored.

## Troubleshooting

When restoring a configuration, errors may occur, but the solutions are usually straightforward.

Error message	Reason and Solution
Configuration file error	<p>This error occurs when attempting to upload a configuration file that is incompatible with the device. This may be due to the configuration file being for a different model or being saved from a different version of firmware.</p> <p><b>Solution:</b> Upload a configuration file that is for the correct model of FortiGate device and the correct version of the firmware.</p>
Invalid password	<p>When the configuration file is saved, it can be protected by a password. The password entered during the upload process is not matching the one associated with the configuration file.</p> <p><b>Solution:</b> Use the correct password if the file is password protected.</p>

## Configuration revision

You can manage multiple versions of configuration files on models that have a 512MB flash memory and higher. Revision control requires either a configured central management server or the local hard drive, if your FortiGate has this feature. Typically, configuration backup to local drive is not available on lower-end models.

### Central management server

The central management server can either be a FortiManager unit or FortiGate Cloud.

If central management is not configured on your FortiGate, a message appears instructing you to either enable central management, or obtain a valid license.

#### To enable central management from the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Central Management* card.
2. Set the *Status* to *Enabled* and select a *Type*.
3. Click *OK*.

#### To enable central management from the CLI:

```
config system central-management
    set type {fortimanager | fortiguard}
    set mode backup
    set fmg <IP address>
end
```

#### To backup to the management server:

```
# execute backup config management-station <comment>
```

#### To view a backed up revision:

```
# execute restore config management-station normal 0
```

#### To restore a backed up revision:

```
# execute restore config management-station normal <revision ID>
```

## Backing up to a local disk

When revision control is enabled on your FortiGate unit, and configuration backups have been made, a list of saved revisions of those backed-up configurations appears.

Configuration backup occurs by default with firmware upgrades but can also be configured to occur every time you log out.

#### To configure configuration backup when logging out:

```
config system global
    set revision-backup-on-logout enable
end
```



**To manually force backup:**

```
# execute backup config flash <comment>
```

Configuration revisions are viewed by clicking on the user name in the upper right-hand corner of the screen and selecting *Configuration > Revisions*.

**To view a list of revisions backed up to the disk from the CLI:**

```
# execute revision list config
```

**To restore a configuration from the CLI:**

```
# execute restore config flash <revision ID>
```

## Restore factory defaults

There may be a need to reset the FortiGate to its original defaults; for example, to begin with a fresh configuration. There are two options when restoring factory defaults. The first resets the entire device to the original out-of-the-box configuration.

You can reset the device with the following CLI command:

```
# execute factoryreset
```

When prompted, type *y* to confirm the reset.

Alternatively, in the CLI you can reset the factory defaults but retain the interface and VDOM configuration with the following command:

```
# execute factoryreset2
```

## Secure file copy

You can also back up and restore your configuration using Secure File Copy (SCP). See [How to download a FortiGate configuration file and upload firmware file using secure file copy \(SCP\)](#).

You enable SCP support using the following command:

```
config system global
    set admin-scp enable
end
```


For more information about this command and about SCP support, see [config system global](#).

## Deregistering a FortiGate


An administrator can deregister a FortiGate, if the device has been registered for three or more years, using the GUI or CLI, without having to contact FortiCare administration. After the device is deregistered, all associated contracts are also deregistered, and all of the administrator's information is wiped.

## To deregister the FortiGate in the GUI:


1. Go to *Dashboard > Status*.
2. In the License widget, click *FortiGate Support* and select *Deregister FortiGate*.

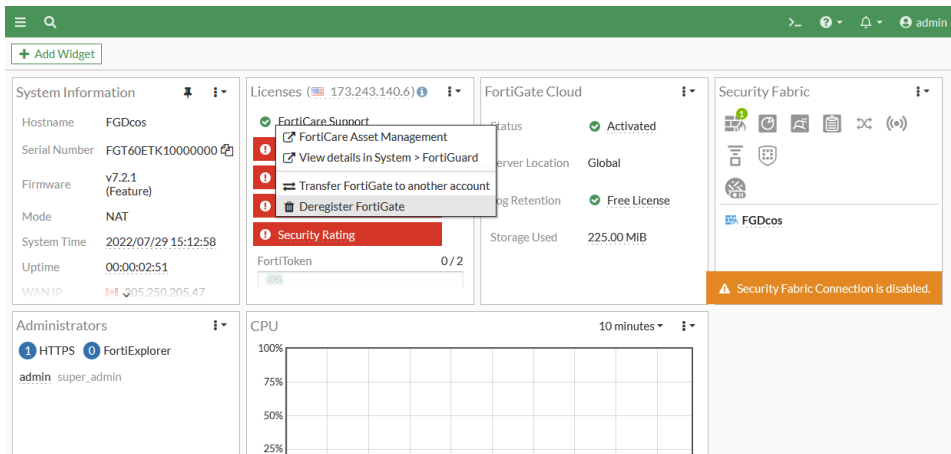


The FortiCare Deregistration pane opens.

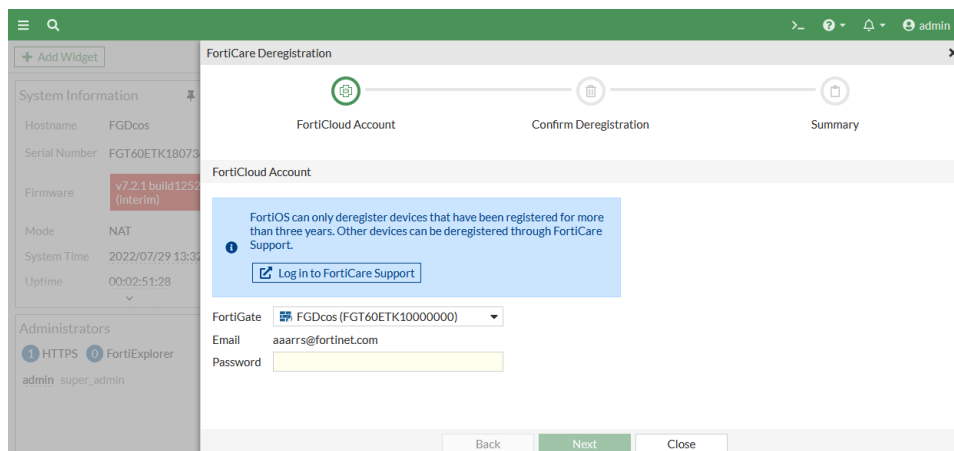

3. Enter your password then click *Next*.
4. Confirm the FortiGate deregistration then click *Submit*.

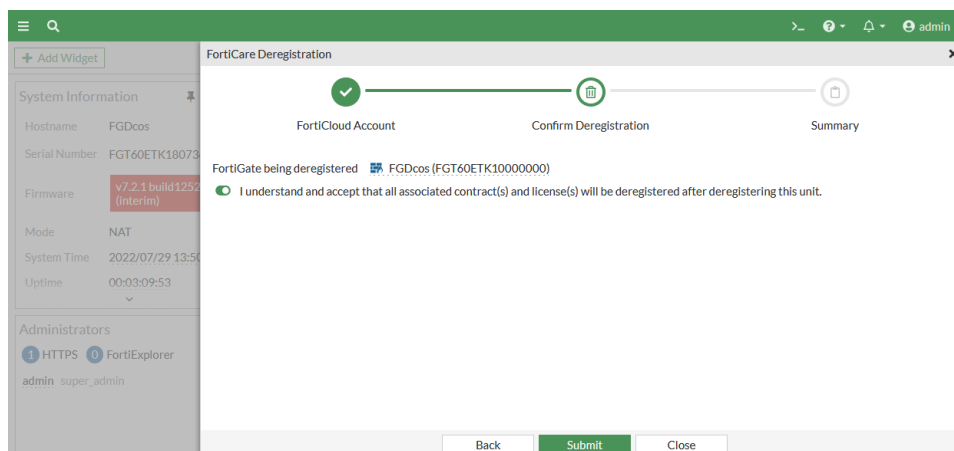

If the FortiGate has been registered for less than three years, the deregistration will fail.

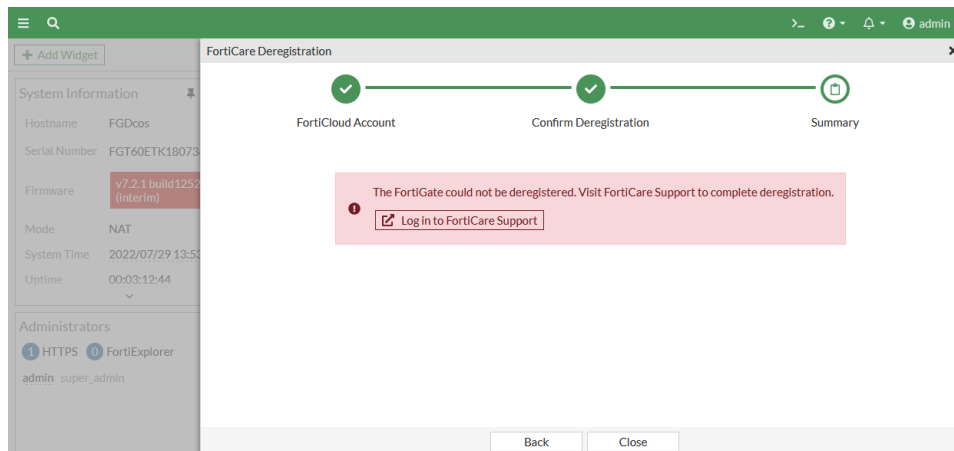

### To deregister the FortiGate in the CLI:

```
# diagnose forticare direct-registration product-deregister <accountID> <password>
```

If the FortiGate has been registered for less than three years, the deregistration will fail:

```
forticare_product_deregister:1335: Failed to get response (rc = 0, http_code = 403)
Unit deregistration unsuccessful.
```

## Fortinet Developer Network access


The [Fortinet Developer Network](#) (FNDN) is a subscription-based community that helps administrators enhance and increase the effectiveness of Fortinet products. Administrators can access the FortiAPI forum in FNDN to help create applications that interact with Fortinet products, such as custom web portals, automated deployment and provisioning systems, and scripted tasks. FNDN makes it easy for administrators and Fortinet professionals to interact, share sample code, and upload their own tools. The [FortiOS REST API](#) documentation is available within the FortiAPI forum.

All FNDN users must be sponsored by two Fortinet employees. The sponsors must be able to confirm the user's identity and need for access. Approvals from both sponsors are required before access is granted to new users. The sponsors' email addresses are required to create a new FNDN account.

Basic and licensed access options are available. Refer to the [Fortinet Developer Network](#) data sheet for more information.

### To create an FNDN account:

1. Obtain sponsorship from two Fortinet employees.
2. Go to the FNDN website, <https://fndn.fortinet.net/>. The log in page appears.

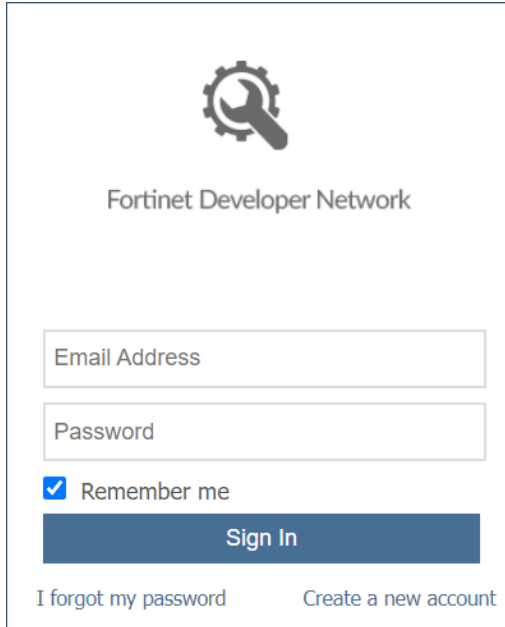

The image shows a login form for the Fortinet Developer Network. At the top is a logo consisting of a gear with a wrench inside it. Below the logo is the text "Fortinet Developer Network". The form contains two input fields: "Email Address" and "Password". Below these fields is a checkbox labeled "Remember me" which is checked. Below the checkbox is a blue button labeled "Sign In". At the bottom of the form are two links: "I forgot my password" and "Create a new account".

3. Click *Create a new account*. The *Sign Up* page appears.
4. Enter the information in the form fields and agree to the *Terms of Use*.

# Sign Up

Existing user? [Sign In](#)

Email Address \*

Please enter a valid business email address. Public email accounts and aliases are not permitted.

Password \*

Confirm Password \*

All new accounts require two Fortinet Sponsors. Sponsors are Fortinet employees that can confirm your identity and validate your need for an FNDN account. Please enter emails of your Sponsors in the fields below and assure that they are correct.

Main Sponsor \*

Supporting Sponsor \*

Optional: If you have an FNDN contract, you can enter the associated activation code now or anytime after your account has been created. The activation code can be found in your Fortinet Support Center account.

Activation Code

Full name \*

Personal social profiles

LinkedIn, Facebook or anything else.

Shipping address \*

Beta hardware will be provided to FNDN users selected to participate in our hardware beta program. Your shipping address is where you wish to receive these hardware units.

Company name \*

Company website \*


Title in company \*

Company industry

Company size

Security Check

☐ I'm not a robot

  
reCAPTCHA  
[Privacy](#) - [Terms](#)

☐ I agree to the [Terms of Use](#) \*

Create my Account

### 5. Click *Create my Account*.


New accounts are reviewed and approved by an FNDN administrator. After both sponsors approve the request, an FNDN administrator reviews the request and approves account access in around one business day if all requirements are met.

## LEDs



Check your device's QuickStart guide for specific LED information: [FortiGate QuickStart Guides](#).

The following faceplates show where the LEDs are typically found on FortiGate models:

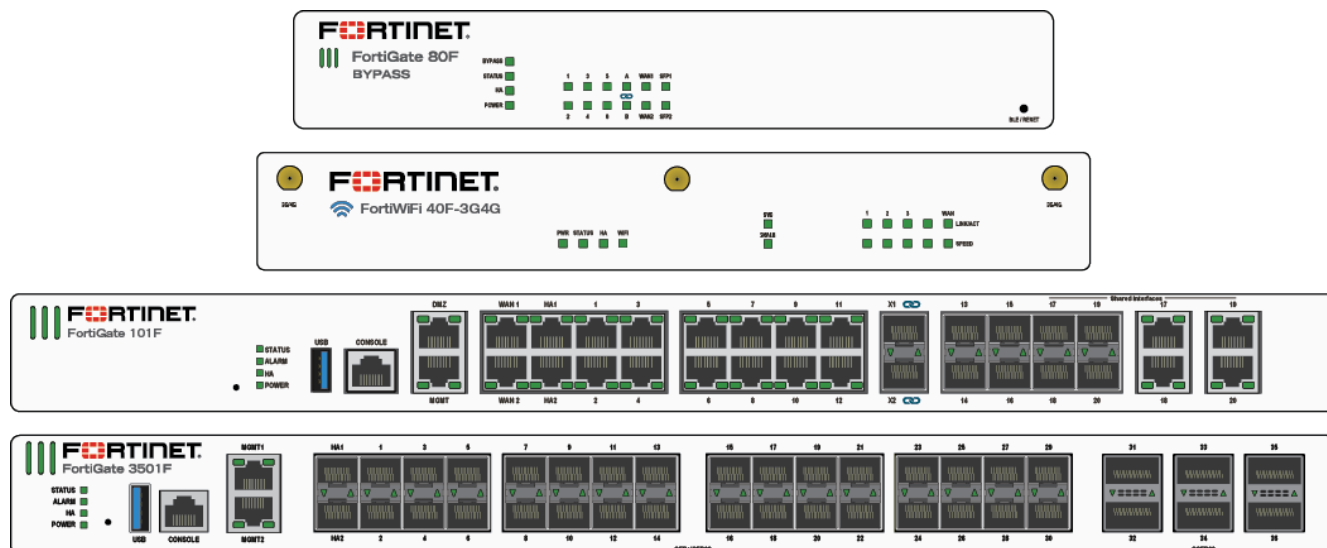

LED	State	Description
Logo	Green	The unit is on
	Blue	The FortiWiFi unit is on
	Off	The unit is off
Power (PWR)	Green	The unit is on and/or both power supplies are functioning
	Amber	One power supply is functioning
	Flashing Amber	Power supply failure
	Red	The unit is on, but only one power supply is functional
	Flashing Red	Power failure
	Off	The unit is off

LED	State	Description
Status (STA)	Green	Normal
	Flashing Green	Booting up
	Amber	Major or minor alarm
	Flashing Amber	BLE is on
	Red	Major alarm
	Flashing Red	BLE is on
	Off	The unit is off
Bypass (BYP)	Amber	Bypass Port Pair is active
	Off	Bypass Port Pair is off
Alarm	Red	Major alarm
	Amber	Minor alarm
	Off	No alarms
HA	Green	Operating in an HA cluster
	Amber or Red	HA failover
	Off	HA disabled
Max PoE	Green, Amber, or Red	Maximum PoE power allocated
	Off	PoE power available or normal
PoE	Green	Power delivered
	Flashing Green	Error or PoE device requesting power
	Off	No PoE device connected or no power delivered
SVC	Green	SVC is on
	Flashing Green	SVC activity
	Off	SVC is off
3G / 4G	Green	3G / 4G service is on
	Flashing Green	3G / 4G activity
	Off	3G / 4G service is off
WiFi	Green	WiFi connected
	Flashing Green	WiFi activity
	Off	WiFi is off

LED	State	Description
Power Supply	Green	Power supply operating normally
	Flashing Green	Power detected, but power supply not providing power or is in standby mode
	Amber	Power output is off, there is a power supply error, or there is no input power but the redundant supply is on
	Flashing Amber	Power supply error or warning events, or the power supply should be replaced
	Red	Cord unplugged or power lost
	Flashing Red	Power supply warning events
	Off	Power not detected
Power Supply OK	Green	Standby rail and main output on
	Flashing Green	Standby rail and main output off
	Off	Error or no AC power input
Power Supply Fail	Amber	Main output or fan error detected
	Flashing Amber	Power supply warning event detected
	Off	No errors or no power
Power Supply Input	Green	Input voltage within normal range
	Flashing Green	Over or under voltage warning
	Off	No input power
Power Supply Output	Green	Output voltage normal
	Flashing Green	Standby mode
	Amber	Critical error
	Flashing Amber	Warning
	Off	No output
Fan	Green	Fan(s) operating normally
	Flashing Green	Fan switching/initialization in progress
	Amber	Fan failure
	Red	Fan error, RPM too low or too high, or both fan sets have at least one alert
	Flashing Red	One fan set has at least one alert
	Off	Fan error or fan is off



## Port LEDs

LED	State	Description
Ethernet	Green	Connected at 1 Gbps
	Flashing Green	Transmitting and receiving data at 1 Gbps
	Amber	Connected at 10/100 Mbps
	Flashing Amber	Transmitting and receiving data at 10/100 Mbps
	Off	No link established
Ethernet Link/Activity	Green	Connected
	Flashing Green	Transmitting data
	Off	No link established
Ethernet Speed	Green	Connected at 1 Gbps
	Amber	Connected at 100 Mbps
	Off	Not connected or connected at 10 Mbps
Ethernet 10G Link/Activity	Green	Connected
	Flashing Green	Transmitting data
	Off	No link established
Ethernet 10G Speed	Green	Connected at 10 Gbps
	Amber	Connected at 5 Gbps, 2.5 Gbps, or 1 Gbps
	Off	Not connected or connected at 100 Mbps
PoE	Green	PoE power on or PoE device receiving power
	Amber	Providing power
	Red	Connected but not powered
	Off	PoE power off or no device receiving power
SFP	Green	Connected at 1 Gbps
	Flashing Green	Data activity
	Off	No link established
SFP+	Green	Connected at 10 Gbps or 1 Gbps
	Flashing Green	Data activity
	Off	No link established

LED	State	Description
SFP28	Green	Connected at 25 Gbps, 10 Gbps, or 1 Gbps
	Flashing Green	Data activity
	Off	No link established
QSFP28	Green	Connected at 100 Gbps or 40 Gbps
	Flashing Green	Data activity
	Off	No link established

## Alarm levels

### Minor alarm

Also called an IPMI non-critical (NC) alarm, it indicates a temperature or power level outside of the normal operating range that is not considered a problem. For a minor temperature alarm, the system could respond by increasing the fan speed. A non-critical threshold can be an upper non-critical (UNC) threshold (for example, a high temperature or a high power level) or a lower non-critical (LNC) threshold (for example, a low power level).

### Major alarm

Also called an IPMI critical or critical recoverable (CR) alarm, it indicates that the system is unable to correct the cause of the alarm, and that intervention is required. For example, the cooling system cannot provide enough cooling to reduce the temperature. It can also mean that the conditions are approaching the outside limit of the allowed operating range. A critical threshold can also be an upper critical (UC) threshold (such as a high temperature or high power level) or a lower critical (LC) threshold (such as a low power level).

### Critical alarm

Also called an IPMI non-recoverable (NR) alarm, it indicates that the system has detected a temperature or power level that is outside of the allowed operating range and physical damage is possible.

## Troubleshooting your installation

If your FortiGate does not function as desired after installation, try the following troubleshooting tips:

### 1. Check for equipment issues

Verify that all network equipment is powered on and operating as expected. Refer to the QuickStart Guide for information about connecting your FortiGate to the network.

### 2. Check the physical network connections

Check the cables used for all physical connections to ensure that they are fully connected and do not appear damaged, and make sure that each cable connects to the correct device and the correct Ethernet port on that device.

- 3. Verify that you can connect to the internal IP address of the FortiGate**

Connect to the GUI from the FortiGate's internal interface by browsing to its IP address. From the PC, try to ping the internal interface IP address; for example, `ping 192.168.1.99`. If you cannot connect to the internal interface, verify the IP configuration of the PC. If you can ping the interface but can't connect to the GUI, check the settings for administrative access on that interface. Alternatively, use SSH to connect to the CLI, and then confirm that HTTPS has been enabled for Administrative Access on the interface.
- 4. Check the FortiGate interface configurations**

Check the configuration of the FortiGate interface connected to the internal network (under *Network > Interfaces*) and check that *Addressing mode* is set to the correct mode.
- 5. Verify the security policy configuration**

Go to *Policy & Objects > Firewall Policy* and verify that the internal interface to Internet-facing interface security policy has been added and is located near the top of the policy list. Check the *Active Sessions* column to ensure that traffic has been processed (if this column does not appear, right-click on the table header and select *Active Sessions*). If you are using NAT mode, check the configuration of the policy to make sure that *NAT* is enabled and that *Use Outgoing Interface Address* is selected.
- 6. Verify the static routing configuration**

Go to *Network > Static Routes* and verify that the default route is correct. Go to *Monitor > Routing Monitor* and verify that the default route appears in the list as a static route. Along with the default route, you should see two routes shown as *Connected*, one for each connected FortiGate interface.
- 7. Verify that you can connect to the Internet-facing interface's IP address**

Ping the IP address of the Internet-facing interface of your FortiGate. If you cannot connect to the interface, the FortiGate is not allowing sessions from the internal interface to Internet-facing interface. Verify that *PING* has been enabled for *Administrative Access* on the interface.
- 8. Verify that you can connect to the gateway provided by your ISP**

Ping the default gateway IP address from a PC on the internal network. If you cannot reach the gateway, contact your ISP to verify that you are using the correct gateway.
- 9. Verify that you can communicate from the FortiGate to the Internet**

Access the FortiGate CLI and use the command `execute ping 8.8.8.8`. You can also use the `execute traceroute 8.8.8.8` command to troubleshoot connectivity to the Internet.
- 10. Verify the DNS configurations of the FortiGate and the PCs**

Check for DNS errors by pinging or using traceroute to connect to a domain name; for example: `ping www.fortinet.com`.

If the name cannot be resolved, the FortiGate or PC cannot connect to a DNS server and you should confirm that the DNS server IP addresses are present and correct.
- 11. Confirm that the FortiGate can connect to the FortiGuard network**

Once the FortiGate is on your network, you should confirm that it can reach the FortiGuard network. First, check the *License Information* widget to make sure that the status of all FortiGuard services matches the services that you have purchased. Go to *System > FortiGuard*, and, in the Filtering section, click *Test Connectivity*. After a minute, the GUI should indicate a successful connection. Verify that your FortiGate can resolve and reach FortiGuard at `service.fortiguard.net` by pinging the domain name. If you can reach this service, you can then verify the connection to FortiGuard servers by running the command `diagnose debug rating`. This displays a list of FortiGuard IP gateways you can connect to, as well as the following information:

  - **Weight:** Based on the difference in time zone between the FortiGate and this server
  - **RTT:** Return trip time
  - **Flags:** D (IP returned from DNS), I (Contract server contacted), T (being timed), F (failed)
  - **TZ:** Server time zone
  - **Curr Lost:** Current number of consecutive lost packets
  - **Total Lost:** Total number of lost packets

**12. Consider changing the MAC address of your external interface**

Some ISPs do not want the MAC address of the device connecting to their network cable to change. If you have added a FortiGate to your network, you may have to change the MAC address of the Internet-facing interface using the following CLI command:

```
config system interface
  edit <interface>
    set macaddr <xx:xx:xx:xx:xx:xx>
  end
end
```

**13. Check the FortiGate bridge table (transparent mode)**

When a FortiGate is in transparent mode, the unit acts like a bridge sending all incoming traffic out on the other interfaces. The bridge is between interfaces on the FortiGate unit. Each bridge listed is a link between interfaces. Where traffic is flowing between interfaces, you expect to find bridges listed. If you are having connectivity issues and there are no bridges listed, that is a likely cause. Check for the MAC address of the interface or device in question. To list the existing bridge instances on the FortiGate, use the following CLI command:

```
diagnose netlink brctl name host root.b
show bridge control interface root.b host.
fdb: size=2048, used=25, num=25, depth=1
Bridge root.b host table
port no device devname mac addr ttl attributes
3 4 wan1 00:09:0f:cb:c2:77 88
3 4 wan1 00:26:2d:24:b7:d3 0
3 4 wan1 00:13:72:38:72:21 98
4 3 internal 00:1a:a0:2f:bc:c6 6
1 6 dmz 00:09:0f:dc:90:69 0 Local Static
3 4 wan1 c4:2c:03:0d:3a:38 81
3 4 wan1 00:09:0f:15:05:46 89
3 4 wan1 c4:2c:03:1d:1b:10 0
2 5 wan2 00:09:0f:dc:90:68 0 Local Static
```

**14. Use FortiExplorer if you cannot connect to the FortiGate over Ethernet**

If you cannot connect to the FortiGate GUI or CLI, you may be able to connect using FortiExplorer. Refer to the QuickStart Guide or see the section on FortiExplorer for more details.

**15. Either reset the FortiGate to factory defaults or contact Fortinet Support for assistance**

To reset the FortiGate to factory defaults, use the CLI command `execute factoryreset`. When prompted, type `y` to confirm the reset.


If you require further assistance, visit the [Fortinet Support](#) website.

# Dashboards and Monitors

FortiOS includes predefined dashboards so administrators can easily monitor device inventory, security threats, traffic, and network health. You can customize the appearance of a default dashboard to display data pertinent to your Security Fabric or combine widgets to create custom dashboards. Many dashboards also allow you to switch views between fabric devices.

Each dashboard contains a set of widgets that allow you to view drilldown data and take actions to prevent threats. Use widgets to perform tasks such as viewing device inventory, creating and deleting DHCP reservations, and disconnecting dial-up users. You can add or remove widgets in a dashboard or save a widget as a standalone monitor.

Monitors display information in both text and visual format. Use monitors to change views, search for items, view drilldown information, or perform actions such as quarantining an IP address. FortiView monitors for the top categories are located below the dashboards. All of the available widgets can be added to the tree menu as a monitor.

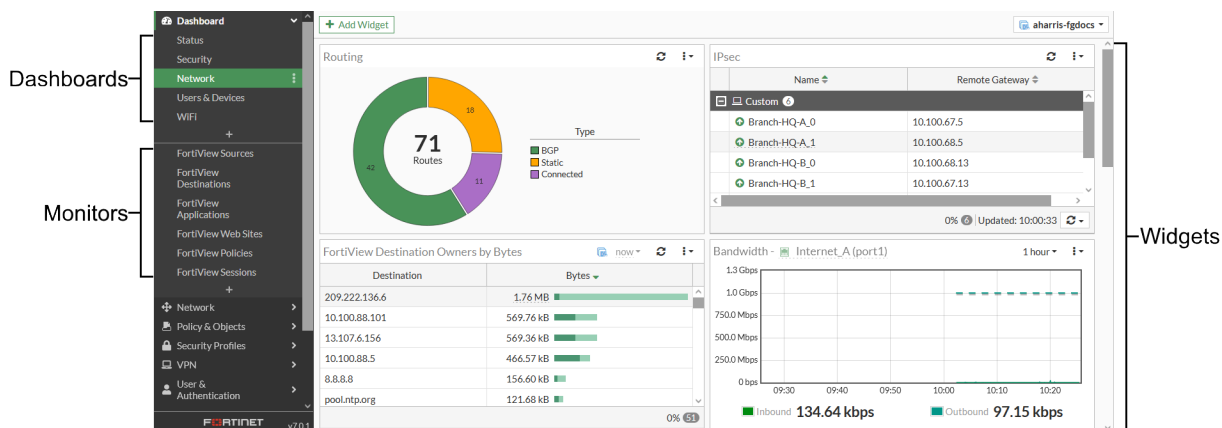


## Using dashboards

You can combine widgets to create custom dashboards. You can also use the dropdown in the tree menu to switch to another device in the Security Fabric.

### To create a new dashboard:

1. Under *Dashboard*, click the *Add Dashboard* button. The *Add Dashboard* window opens.

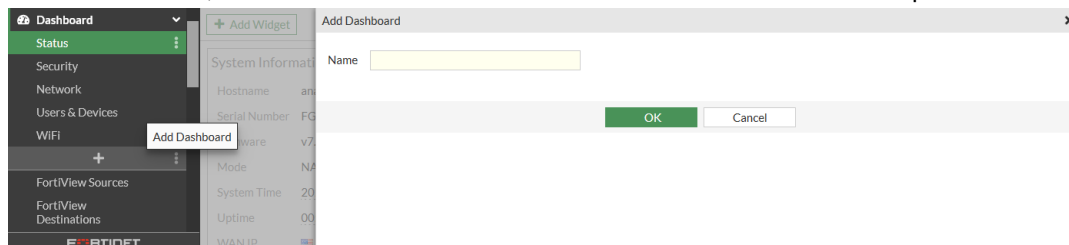

2. Enter a name in the *Name* field and click *OK*. The new dashboard opens.

**To add a widget to a dashboard:**

1. In the tree menu, select a dashboard.
2. In the banner, click *Add Widget*. The *Add Dashboard Widget* pane opens.
3. Click the *Add* button next to the widget. You can use the *Search* field to search for a widget. Enable *Show More* to view more widgets in a category.
4. Configure the widget settings, then click *Add Widget*.
5. Click *Close*.
6. (Optional) Click and drag the widget to the desired location in the dashboard.

**To edit a dashboard:**


1. Click the *Actions* menu next to the dashboard and select *Edit Dashboard*.



2. Edit the dashboard and click *OK*.

**To delete a dashboard:**

1. Click the *Actions* menu next to the dashboard and select *Delete Dashboard*.

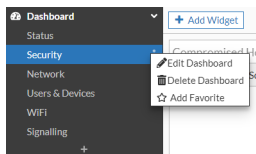


2. Click *Delete Dashboard*. The *Confirm* dialog opens.
3. Click *OK*.



You cannot delete the *Status* dashboard.

**To switch to another device in the Security Fabric:**

1. In the tree menu, click the device name and select a fabric device from dropdown.

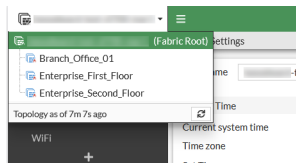


## Using widgets

You can convert a widget to a standalone monitor, change the view type, configure tables, and filter data.


**To save a dashboard widget as a monitor:**

1. Hover over the widget and click *Expand to full screen*.

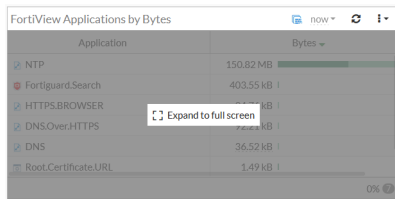

Full screen mode is not supported in all widgets.

 
2. In the widget, click *Save as Monitor*. The *Add Monitor* window opens.



3. (Optional) Enter a new name for the monitor in the *Name* field.
4. Click *OK*.

**To view the widget settings:**

1. Click the menu dropdown at the right side of the widget and select *Settings*.

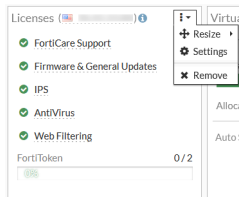

2. Configure the widget settings and click *OK*.



The settings will vary depending on the widget.

**To configure a table in the widget:**

1. Hover over the left side of the table header and click *Configure Table*.



 
2. Configure the table options:

Option	Description
<b>Best Fit All Columns</b>	Resizes all of the columns in a table to fit their content.
<b>Reset Table</b>	Resets the table to the default view.
<b>Select Columns</b>	Adds or removes columns from the view.

3. Click *Apply*.


#### To filter or configure a column in a table:

1. Hover over a column heading, and click *Filter/Configure Column*.



2. Configure the column options.

Option	Description
<b>Resize to Contents</b>	Resizes the column to fit the content.
<b>Group by this Column</b>	Groups the table rows by the contents in the selected column.

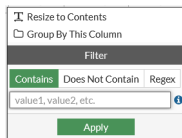

3. Click *Apply*.
4. To filter a column, enter a value in the *Filter* field, and click *Apply*.



Filtering is not supported in all widgets.

## Widgets

Dashboards are created per VDOM when VDOM mode is enabled. For information about VDOM mode, see [Virtual Domains on page 2299](#).



Some dashboards and widgets are not available in Multi-VDOM mode.

The following table lists the available widgets in VDOM mode:

Category	Widgets
<b>FortiView</b>	<ul style="list-style-type: none"> <li>FortiView Application Bandwidth FortiView</li> </ul>




Category	Widgets
	<ul style="list-style-type: none"> <li>• Applications FortiView Cloud Applications</li> <li>• FortiView Destination Interfaces FortiView</li> <li>• Destination Owners FortiView Destinations</li> <li>• FortiView Policies FortiView Sessions</li> <li>• FortiView Source Interfaces FortiView</li> <li>• Sources FortiView VPN FortiView Web</li> <li>• Categories FortiView Countries/Regions</li> <li>• FortiView Destination Firewall Objects</li> <li>• FortiView Interface Pairs FortiView Search</li> <li>• Phrases FortiView Servers FortiView Source</li> <li>• Firewall Objects FortiView Sources - WAN</li> <li>• FortiView Traffic Shaping</li> </ul>
<b>Security Fabric</b>	<ul style="list-style-type: none"> <li>• Fabric Device</li> <li>• FortiGate Cloud</li> <li>• Security Fabric Status</li> </ul>
<b>Network</b>	<ul style="list-style-type: none"> <li>• DHCP</li> <li>• Interface Bandwidth</li> <li>• IP Pool Utilization</li> <li>• IPsec</li> <li>• Routing</li> <li>• SD-WAN</li> <li>• SSL-VPN</li> <li>• Top IP Pools by Assigned IPs</li> </ul> <hr/> <div>  <p>The <i>Interface Bandwidth</i> widget can monitor a maximum of 25 interfaces.</p> </div> <hr/>
<b>System</b>	<ul style="list-style-type: none"> <li>• Administrators</li> <li>• Botnet Activity</li> <li>• HA Status</li> <li>• License Status</li> <li>• System Information</li> <li>• Top System Events</li> <li>• Virtual Machine</li> </ul>
<b>Resource Usage</b>	<ul style="list-style-type: none"> <li>• CPU Usage</li> <li>• Disk Usage</li> <li>• Log Rate Memory Usage</li> <li>• Session Rate</li> <li>• Sessions</li> </ul>
<b>Security</b>	<ul style="list-style-type: none"> <li>• Advanced Threat Protection Statistics</li> <li>• Compromised Hosts</li> </ul>

Category	Widgets
	<ul style="list-style-type: none"> <li>• FortiClient Detected Vulnerabilities</li> <li>• GTP Tunnel Rate</li> <li>• GTP Tunnels</li> <li>• Host Scan Summary</li> <li>• Quarantine</li> <li>• Top Endpoint Vulnerabilities</li> <li>• Top Failed Authentication</li> <li>• Top FortiSandbox Files</li> <li>• Top Threats</li> <li>• Top Threats - WAN</li> </ul>
<b>User &amp; Authentication</b>	<ul style="list-style-type: none"> <li>• Device Inventory</li> <li>• Firewall Users</li> <li>• FortiClient</li> <li>• FortiGuard Quota</li> <li>• FortiSwitch NAC VLANs</li> <li>• Top Admin Logins</li> <li>• Top Vulnerable Endpoint Devices</li> <li>• Top Cloud Users</li> </ul>
<b>WiFi</b>	<ul style="list-style-type: none"> <li>• Channel Utilization</li> <li>• Clients By FortiAP</li> <li>• FortiAP Status</li> <li>• Historical Clients</li> <li>• Interfering SSIDs</li> <li>• Login Failures</li> <li>• Rogue APs</li> <li>• Signal Strength</li> <li>• Top WiFi Clients</li> </ul>

## Viewing device dashboards in the Security Fabric

Use the device dropdown to view the dashboards in downstream fabric devices. You can also create dedicated device dashboards or log in and configure fabric devices.


To view the dashboards in fabric devices, click the device dropdown at the left side of the page, and select a device from the list.

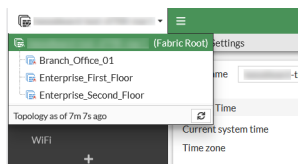



The device dropdown is available in the *Status*, *Security*, *Network*, *Users & Devices*, and *WiFi* dashboards. You can also enable the dropdown when you create a dashboard.

To log in to or configure a fabric device, hover over the device name until the device dialog opens and then select *Login* or *Configure*.

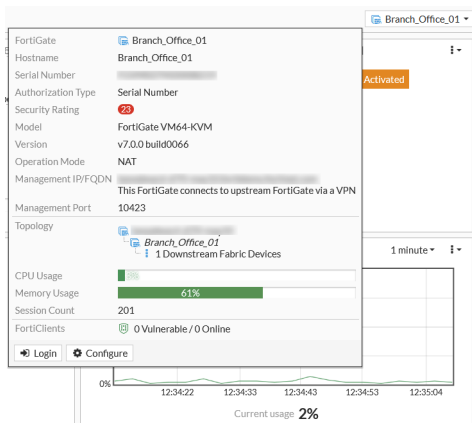


## Creating a fabric system and license dashboard

Create a dashboard summary page to monitor all the fabric devices in a single view. You can use this dashboard to monitor aspects of the devices such as system information, VPN and routing.

### Example

The following image is an example of a *Fabric System & License* dashboard to monitor the *System Information*, *Licenses*, and *Memory* usage for *Branch\_Office\_01* and *Branch\_Office\_02*.

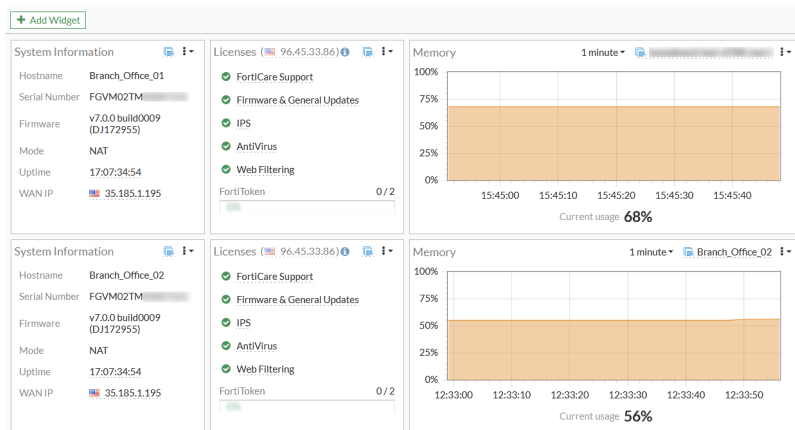


### To create a system dashboard:

1. Click the *Add Dashboard* button. The *Add Dashboard* window opens.



2. In the *Name* field, enter a name such as *Fabric System & Licences*, and click *OK*. The new dashboard appears.
3. In the banner, click *Add Widget*. The *Add Dashboard Widget* window opens. You can use the *Search* field to search for a specific widget (for example, *License Status*, *System Information*, and *Memory Usage*).
4. Click the *Add* button next to widget. The *Add Dashboard Widget* window opens.
5. In the *Fabric member* area, select *Specify* and select a device in the Security Fabric.

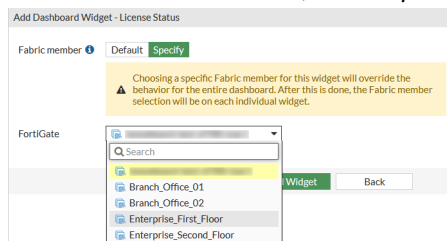

6. Click *Add Widget*. The widget is added to the dashboard.  
Repeat this step for all the devices you want to view in the dashboard.
7. (Optional) Arrange the widgets in the dashboard by fabric device.

## Dashboards

A dashboard is a collection of widgets that show the status of your devices, network, and Security Fabric at a glance. Widgets are condensed monitors that display a summary of the key details about your FortiGate pertaining to routing, VPN, DHCP, devices, users, quarantine, and wireless connections.

The following dashboards are included in the dashboard templates:

Dashboard	Default Template	Use these widgets to:
<b>Status</b>	<ul style="list-style-type: none"> <li>Comprehensive</li> <li>Optimal</li> </ul>	<ul style="list-style-type: none"> <li>View the device serial number, licenses, and administrators</li> <li>View the status of devices in the security fabric</li> <li>Monitor CPU and Memory usage</li> <li>Monitor IPv4 and IPv6 sessions</li> <li>View VMs and Cloud devices</li> </ul>
<b>Security</b>	<ul style="list-style-type: none"> <li>Optimal</li> </ul>	<ul style="list-style-type: none"> <li>View compromised hosts and host scan summary</li> <li>View top threats and vulnerabilities</li> </ul>
<b>Network</b>	<ul style="list-style-type: none"> <li>Optimal</li> </ul>	<ul style="list-style-type: none"> <li>Monitor DHCP clients</li> <li>Monitor IPsec VPN connections</li> <li>Monitor current routing table</li> <li>Monitor SD-WAN status</li> <li>Monitor SSL-VPN connections</li> </ul>

Dashboard	Default Template	Use these widgets to:
<b>Users &amp; Devices</b>	<ul style="list-style-type: none"> <li>Optimal</li> </ul>	<ul style="list-style-type: none"> <li>View users and devices connected to the network</li> <li>Identify threats from individual users and devices</li> <li>View FortiGuard and FortiClient data</li> <li>Monitor traffic bandwidth over time</li> </ul>
<b>WiFi</b>	<ul style="list-style-type: none"> <li>Comprehensive</li> <li>Optimal</li> </ul>	<ul style="list-style-type: none"> <li>View FortiAP status, channel utilization, and clients</li> <li>View login failures and signal strength</li> <li>View the number of WiFi clients</li> </ul>

## Resetting the default dashboard template


You can use the GUI to change the default dashboard template. The *Optimal* template contains a set of popular default dashboards and FortiView monitors. The *Comprehensive* template contains a set of default dashboards as well as all of the FortiView monitors.



Resetting the default template will delete any custom dashboards and monitors, and reset the widget settings.

### To reset all dashboards:


1. Click the *Actions* menu next to *Add Dashboard* or *Add Monitor* and click *Reset All Dashboards*. The *Dashboard Setup* window opens.

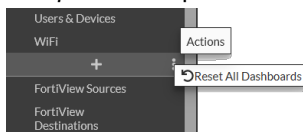

2. Select *Optimal* or *Comprehensive* and click *OK*.

## Status dashboard


The *Status* dashboard provides an overview of your FortiGate device and the devices in your Security Fabric. If your FortiGate is a virtual machine, information about the virtual machine is also displayed in the dashboard.

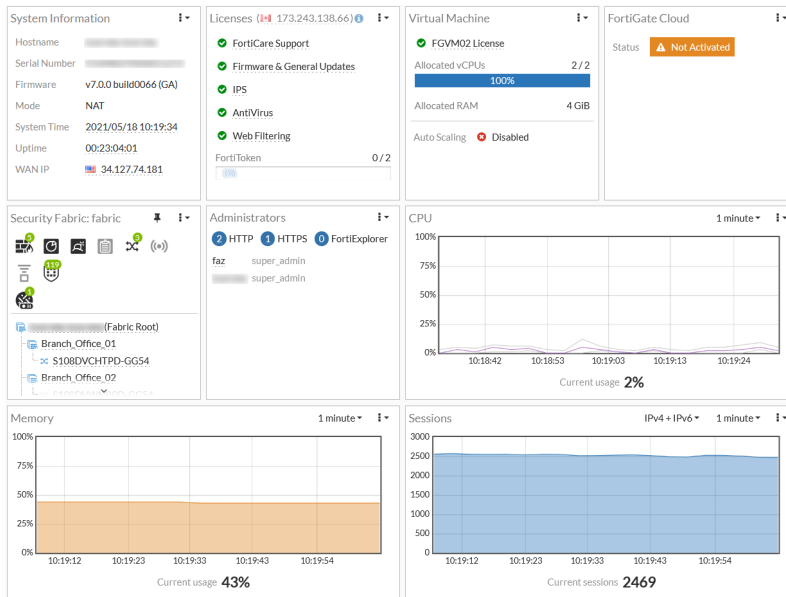

## Updating system information

The *System Information* widget contains links to the *Settings* module where you can update the *System Time*, *Uptime*, and *WAN IP*.

A notification will appear in the *Firmware* field when a new version of FortiOS is released. Click *Update firmware in System > Firmware* to view the available versions and update FortiOS.

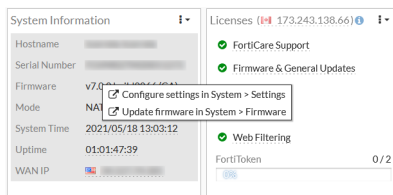

## Viewing Fabric devices


The *Security Fabric* widget provides a visual overview of the devices connected to the Fabric and their connection status. Hover of a device icon to view more information about the device.

Click a device in the Fabric to:

- View the device in the physical or logical topology
- Register, configure, deauthorize, or log in to the device
- Open *Diagnostics and Tools*
- View the *FortiClient Monitor*


These options will vary depending on the device.

Click *Expand & Pin hidden content* to view all the devices in the Fabric at once.

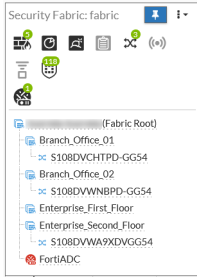


### Viewing administrators

The *Administrators* widget displays the active administrators and their access interface. Click the username to view the *Active Administrator Sessions* monitor. You can use the monitor to end an administrator's session.

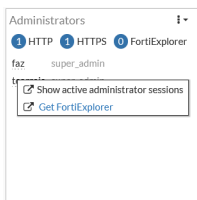

### Viewing logs sent for remote logging source


The *Logs Sent* widget displays chart for remote logging sources (FortiAnalyzer, FortiGate Cloud, and FortiAnalyzer Cloud) sent daily.

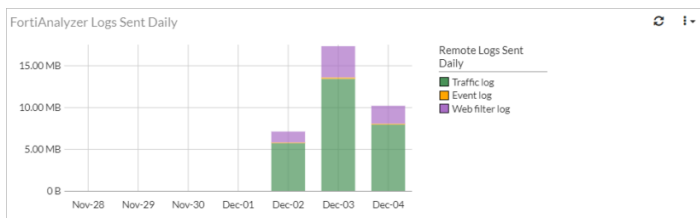


### Resource widgets

The resource widgets show the current usage statistics for *CPU*, *Memory*, and *Sessions*.

Click the *CPU* monitor to show the per core CPU usage.

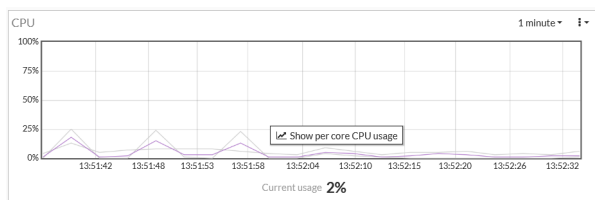

You can switch between *IPv4*, *IPv6*, or *IPv4+IPv6* in the *Sessions* monitor.

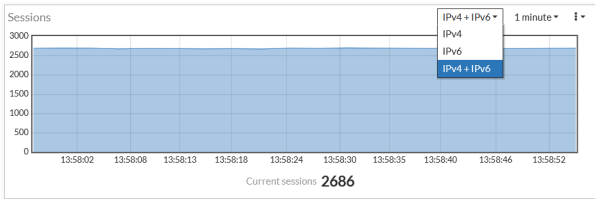

Security dashboard

The widgets in the *Security* dashboard provide a snapshot of the current threats and vulnerabilities targeting your Security Fabric.

The *Security* dashboard contains the following widgets:

Widget	Description
Compromised Hosts by Verdict	Shows the session information for a compromised host. See <a href="#">Viewing session information for a compromised host on page 98</a> .
Top Threats by Threat Level	Shows the top traffic sessions aggregated by threat. You can expand the widget to view drilldown information about the <i>Threat</i> , <i>Threat Category</i> , <i>Threat Level</i> , <i>Threat Score</i> and <i>Sessions</i> .
FortiClient Detected Vulnerabilities	Shows a summary of vulnerabilities detected by FortiClient. FortiClient must be enabled.
Host Scan Summary	Shows a summary of hosts scanned. Hover over a color in the chart to view the number of hosts by category. Click the chart to view the <i>FortiClient Monitor</i> or <i>Device Inventory</i> monitor.
Top Vulnerable Endpoint Devices by Detected Vulnerabilities	Shows a summary devices aggregated by vulnerabilities. Expand the widget to view drilldown information about the <i>Device</i> , <i>Source</i> and <i>Detected Vulnerabilities</i> .

Viewing session information for a compromised host

You can use the *Compromised Hosts by Verdict* widget to view the session information for a compromised host.



## To view session information for a compromised host in the GUI:

1. Go to *Dashboard > Security* and expand the *Compromised Hosts by Verdict* widget.

[Add Widget](#) fshuva-slx4one

← **Top Compromised Hosts by Verdict** 🔄 🔍 ⌵

Source	Device	Verdict	Threats
10.200.1.21	LAN-FSW-GUEST	Compromised	1
10.100.92.5	00:09:0f:00:03:02	Compromised	1
10.200.1.19	LAN-FSW-GUEST	Compromised	1
10.100.92.5	LAN-FINANCE	Compromised	1
10.200.1.20	LAN-FSW-GUEST	Compromised	1
10.100.92.15	LAN-FINANCE	Compromised	1
10.200.1.5	LAN-FSW-GUEST	Compromised	1
10.200.1.17	LAN-FSW-GUEST	Compromised	1
10.200.1.3	LAN-FSW-GUEST	Compromised	1
10.200.1.16	LAN-FSW-GUEST	Compromised	1
10.200.1.15	LAN-FSW-GUEST	Compromised	1
10.200.1.13	LAN-FSW-GUEST	Compromised	1
10.200.1.14	LAN-FSW-GUEST	Compromised	1
10.200.1.18	LAN-FSW-GUEST	Compromised	1
10.200.1.4	LAN-FSW-GUEST	Compromised	1
10.200.1.2	LAN-FSW-GUEST	Compromised	1
10.200.1.8	LAN-FSW-GUEST	Compromised	1
10.200.1.9	LAN-FSW-GUEST	Compromised	1
10.200.1.6	LAN-FSW-GUEST	Compromised	1
10.200.1.10	LAN-FSW-GUEST	Compromised	1
10.200.1.12	LAN-FSW-GUEST	Compromised	1
10.200.1.11	LAN-FSW-GUEST	Compromised	1
10.200.1.7	LAN-FSW-GUEST	Compromised	1
10.100.91.100	TAMIGERBER	Compromised	2

2. Double-click a compromised host to view the session information. You can also right-click a compromised host, and select *View Sessions*.

[Add Widget](#) fshuva-slx4one

← **Compromised Hosts by Verdict** 🔄 🔍 ⌵

**Summary of**

10.100.91.100 Critical Risk

Device: TAMIGERBER

Verdict: Compromised

Threats: 2

FortiGate: fshuva-slx4one

Actions: ⌵

**Blacklist** **Suspicious** **Sessions**

Detected Pattern	Threat Type	Threat Name	Threat Category	Detect method	Events	Security Action	Web Category
103.226.154.43	Malware	CnC	<a href="#">View Sessions</a>	Infected-ip	5	timeout	Malicious Websites
103.226.154.43	Malware	CnC		Infected-ip	1	dropped	Malicious Websites
103.226.154.43	Malware	CnC		Infected-ip	1	timeout	Malicious Websites

3. Double-click a session, or right-click the session and select *View Sessions* to view the information.

[Add Widget](#) fshuva-slx4one

← **Compromised Hosts by Verdict** 🔄 🔍 ⌵

**Summary of**

10.100.91.100 Critical Risk

Device: TAMIGERBER

Verdict: Compromised

Threats: 2

FortiGate: fshuva-slx4one

Actions: ⌵

**Blacklist** **Suspicious** **Sessions**

Date/Time	Source	Destination	Application Name	Security Action	Sent / Received
2020/05/21 03:45:03	10.100.91.100	103.226.154.43	HTTP		152 B / 0 B
2020/05/21 03:40:03	10.100.91.100	103.226.154.43	HTTP		152 B / 0 B
2020/05/21 03:35:03	10.100.91.100	103.226.154.43	HTTP		152 B / 0 B
2020/05/21 03:30:04	10.100.91.100	103.226.154.43	HTTP		152 B / 0 B
2020/05/21 03:24:34	10.100.91.100	103.226.154.43	HTTP		152 B / 0 B

## Network dashboard


The widgets in the Network dashboard show information related to networking for this FortiGate and other devices connected to your Security Fabric. Use this dashboard to monitor the status of Routing, DHCP, SD-WAN, IPsec and SSL VPN tunnels. All of the widgets in the *Network* dashboard can be expanded to full screen and saved as a monitor.

The *Network* dashboard contains the following widgets:

Widget	Description
<b>Static &amp; Dynamic Routing</b>	Shows the static and dynamic routes currently active in your routing table. The widget also includes policy routes, BGP neighbors and paths, and OSPF neighbors. See <a href="#">Static &amp; Dynamic Routing monitor on page 100</a> .
<b>DHCP</b>	Shows the addresses leased out by FortiGate's DHCP servers. See <a href="#">DHCP monitor on page 103</a> .
<b>SD-WAN</b>	Shows a summary of the SD-WAN status, including ADVPN shortcut information.
<b>IPsec</b>	Shows the connection statuses of your IPsec VPN site to site and dial-up tunnels. See <a href="#">IPsec monitor on page 104</a> .
<b>SSL-VPN</b>	Shows a summary of remote active users and the connection mode. See <a href="#">SSL-VPN monitor on page 106</a> .
<b>IP Pool Utilization</b>	Shows IP pool utilization.

### Static & Dynamic Routing monitor

The *Static & Dynamic Routing Monitor* displays the routing table on the FortiGate, including all static and dynamic routing protocols in IPv4 and IPv6. You can also use this monitor to view policy routes, BGP neighbors and paths, and OSPF neighbors.

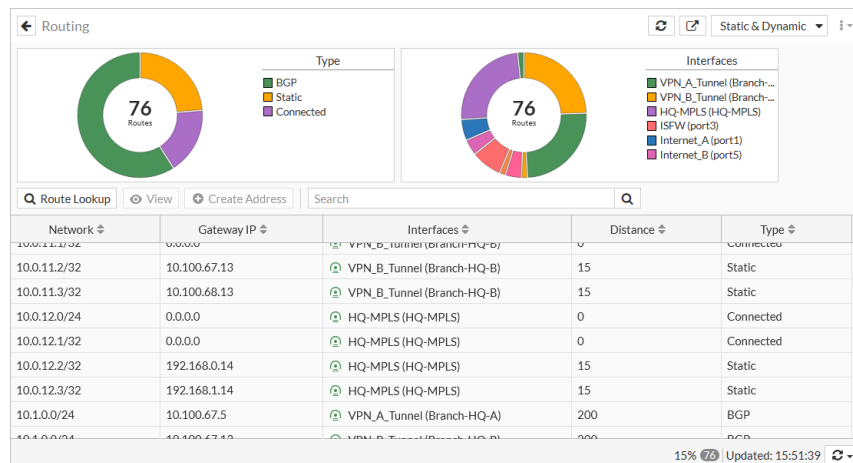

**To view the routing monitor in the GUI:**

1. Go to *Dashboard > Network*.
2. Hover over the *Routing* widget, and click *Expand to Full Screen*. The *Routing* monitor is displayed.
3. To view neighbors and paths, click the monitors dropdown at the top of the page.

**BGP Neighbors**

[+ Add Widget](#)

Routing ↻ 🔗 BGP Neighbors ⌵

View  🔍

Neighbor IP	Local IP	Remote AS	State	Admin Status
IPv4 (8)				
10.10.100.2	10.10.100.254	65412	Established	✔ Enabled
10.10.100.3	10.10.100.254	65412	Established	✔ Enabled
10.10.200.2	10.10.200.254	65412	Established	✔ Enabled
10.10.200.3	10.10.200.254	65412	Established	✔ Enabled
10.100.1.1	10.100.1.2	20	Established	✔ Enabled
10.100.1.5	10.100.1.6	20	Established	✔ Enabled
10.100.10.1	0.0.0.0	20	Idle	❌ Disabled
10.100.10.5	0.0.0.0	20	Idle	❌ Disabled
IPv6 (4)				

35% (12) Updated: 19:03:03 ↻

**BGP Paths**

[+ Add Widget](#)

Routing ↻ 🔗 BGP Paths ⌵

View  🔍

Prefix	Learned From	Next Hop	Origin	Best Path
2.2.2.2/32	10.10.100.2	10.10.100.2	IGP	✔ Yes
2.2.2.2/32	10.10.200.2	10.10.200.2	IGP	✔ Yes
4.4.4.4/32	10.10.100.3	10.10.100.3	IGP	✔ Yes
4.4.4.4/32	10.10.200.3	10.10.200.3	IGP	✔ Yes
7.0.0.0/24	10.100.1.1	10.100.1.1	IGP	✔ Yes
7.0.0.0/24	10.100.1.5	10.100.1.5	IGP	✔ Yes
8.0.0.0/24	10.100.1.1	10.100.1.1	IGP	✔ Yes
8.0.0.0/24	10.100.1.5	10.100.1.5	IGP	✔ Yes
9.0.0.0/24	0.0.0.0	0.0.0.0	IGP	✔ Yes

0% (23) Updated: 19:03:46 ↻

**IPv6 BGP Paths**

[+ Add Widget](#)

Routing ↻ 🔗 IPv6 BGP Paths ⌵

View  🔍

Prefix	Learned From	Next Hop Local	Next Hop Global	Origin	Best Path
2000::7:0:0/124	2000:10:100:1::1	::	2000:10:100:1::1	IGP	❌ No
2000::7:0:0/124	2000:10:100:1::5	::	2000:10:100:1::5	IGP	✔ Yes
2000::9:0:0/124	::	::	::	IGP	✔ Yes
2000:10:100:1::/126	2000:10:100:1::1	::	2000:10:100:1::1	IGP	✔ Yes
2000:10:100:1::4/126	2000:10:100:1::5	::	2000:10:100:1::5	IGP	✔ Yes
2000:10:100:1::200/120	2000:10:100:1::5	::	2000:10:100:1::5	IGP	✔ Yes
2000:10:100:2::/64	2000:10:100:1::1	::	2000:10:100:1::1	IGP	❌ No
2000:10:100:2::/64	2000:10:100:1::5	::	2000:10:100:1::5	IGP	✔ Yes
2000:10:100:10::/126	2000:10:100:1::1	::	2000:10:100:1::1	IGP	✔ Yes

0% (10) Updated: 19:04:05 ↻

### OSPF Neighbors

Neighbor IP	Router ID	State
172.16.209.2	2.2.2.2	Full
172.16.210.2	2.2.2.2	Full

4. To filter the *Interfaces* and *Type* columns:
  - a. Click the *Static & Dynamic* tab.
  - b. Hover over the column heading, and click the *Filter/Configure Column* icon.
  - c. Click *Group By This Column*, then click *Apply*.
5. (Optional) Click *Save as Monitor* to save the widget as monitor.



### To look up a route in the GUI:

1. Click *Route Lookup*.
2. Enter an IP address in the *Destination* field, then click *Search*. The matching route is highlighted on the *Routing* monitor.

### To view the routing table in the CLI:

```
# get route info routing-table all
```

#### Sample output:

```
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default
```

```
Routing table for VRF=0
S* 0.0.0.0/0 [1/0] via 10.0.10.1, To-HQ-A
[1/0] via 10.0.12.1, To-HQ-MPLS
[1/0] via 10.10.11.1, To-HQ-B
[1/0] via 10.100.67.1, port1
[1/0] via 10.100.67.9, port2
C 10.0.10.0/24 is directly connected, To-HQ-A
C 10.0.10.2/32 is directly connected, To-HQ-A
C 10.0.11.0/24 is directly connected, To-HQ-B
C 10.0.11.2/32 is directly connected, To-HQ-B
```

```
C 10.0.12.0/24 is directly connected, To-HQ-MPLS
C 10.0.12.2/32 is directly connected, To-HQ-MPLS
C 10.1.0.0/24 is directly connected, port3
C 10.1.0.2/32 is directly connected, port3
C 10.1.0.3/32 is directly connected, port3
C 10.1.100.0/24 is directly connected, vsw.port6
```

### To look up a firewall route in the CLI:

```
# diagnose firewall proute list
```

#### Sample output:

```
list route policy info(vf=root):
```

```
id=0x7f450002 vwl_service=2(BusinessCriticalCloudApp) vwl_mbr_seq=4 5 3 dscp_tag=0xff 0xff
  flags=0x0 tos=0x00 tos_mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=3
  (port1) oif=4(port2) oif=18(To-HQ-MPLS)
source(1): 0.0.0.0-255.255.255.255
destination wildcard(1): 0.0.0.0/0.0.0.0
internet service(4): Microsoft.Office.365(4294837472,0,0,0, 33182) Microsoft.Office.Online
  (4294837475,0,0,0, 16177) Salesforce(4294837976,0,0,0, 16920) GoToMeeting
  (4294836966,0,0,0, 16354)
hit_count=0 last_used=2020-03-30 10:50:18


id=0x7f450003 vwl_service=3(NonBusinessCriticalCloudApp) vwl_mbr_seq=4 5 dscp_tag=0xff 0xff
  flags=0x0 tos=0x00 tos_mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=3
  (port1) oif=4(port2)
source(1): 0.0.0.0-255.255.255.255
destination wildcard(1): 0.0.0.0/0.0.0.0
internet service(2): Facebook(4294836806,0,0,0, 15832) Twitter(4294838278,0,0,0, 16001)
hit_count=0 last_used=2020-03-30 10:50:18

id=0x7f450004 vwl_service=4(Ping-Policy) vwl_mbr_seq=1 2 dscp_tag=0xff 0xff flags=0x0
  tos=0x00 tos_mask=0x00 protocol=1 sport=0:65535 iif=0 dport=1-65535 oif=16(To-HQ-A)
  oif=17(To-HQ-B)
```

To view neighbors and paths

## DHCP monitor

The DHCP monitor shows all the addresses leased out by FortiGate's DHCP servers. You can use the monitor to revoke an address for a device, or create, edit, and delete address reservations.

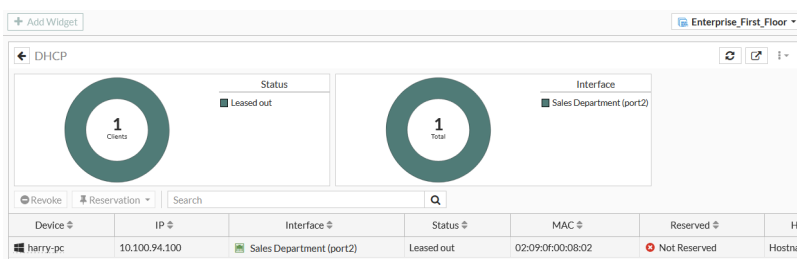

**To view the DHCP monitor:**

1. Go to *Dashboard > Network*.
2. Hover over the *DHCP* widget, and click *Expand to Full Screen*.



To filter or configure a column in the table, hover over the column heading and click *Filter/Configure Column*.

---

**To revoke a lease:**

1. Select a device in the table.
2. In the toolbar, click *Revoke*, or right-click the device, and click *Revoke Lease(s)*. The *Confirm* page is displayed.
3. Click *OK*.



A confirmation window opens only if there is an associated address reservation. If there is no address, the lease will be removed immediately upon clicking *Revoke*.

---

**To create a DHCP reservation:**

1. Select a server in the table.
2. In the toolbar, click *Reservation*, or right-click the device and click *Create DHCP Reservation*. The *Create New DHCP Reservation* page is displayed.
3. Configure the DHCP reservation settings.

4. Click *OK*.

**To view top sources by bytes:**

1. Right-click a device in the table and click *Show in FortiView*. The *FortiView Sources by Bytes* widget is displayed.

**To view the DHCP lease list in the CLI:**

```
# execute dhcp lease-list
```

**IPsec monitor**

The IPsec monitor displays all connected Site to Site VPN, Dial-up VPNs, and ADVPN shortcut tunnel information. You can use the monitor to bring a phase 2 tunnel up or down or disconnect dial-up users. A notification appears in the monitor when users have not enabled two-factor authentication.

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
<b>IPsec Aggregate</b>						
Branch-HQ-A_0	10.100.68.5		1.27 GB	1.75 GB	Branch-HQ-A_0	Branch-HQ-A
Branch-HQ-A_1	10.100.67.5		2.30 GB	1.09 GB	Branch-HQ-A_1	Branch-HQ-A
Branch-HQ-B_0	10.100.68.13		1.20 GB	1.64 GB	Branch-HQ-B_0	Branch-HQ-B
Branch-HQ-B_1	10.100.67.13		2.36 GB	3.27 GB	Branch-HQ-B_1	Branch-HQ-B
HQ-MPLS_0	192.168.0.14		682.10 MB	869.48 MB	HQ-MPLS_0	HQ-MPLS
HQ-MPLS_1	192.168.1.14		1.62 GB	1.82 GB	HQ-MPLS_1	HQ-MPLS

### To view the IPsec monitor in the GUI:

1. Go to *Dashboard > Network*.
2. Hover over the *IPsec* widget, and click *Expand to Full Screen*. A warning appears when an unauthenticated user is detected.



To filter or configure a column in the table, hover over the column heading and click *Filter/Configure Column*.

3. Hover over a record in the table. A tooltip displays the *Phase 1* and *Phase 2* interfaces. A warning appears next to a user who has not enabled two-factor authentication.

### To reset statistics:

1. Select a tunnel in the table.
2. In the toolbar, click *Reset Statistics* or right-click the tunnel, and click *Reset Statistics*. The *Confirm* dialog is displayed.
3. Click *OK*.

### To bring a tunnel up:

1. Select a tunnel in the table.
2. Click *Bring Up*, or right-click the tunnel, and click *Bring Up*. The *Confirm* dialog is displayed.
3. Click *OK*.

### To bring a tunnel down:

1. Select a tunnel in the table.
2. Click *Bring Down*, or right-click the tunnel, and click *Bring Down*. The *Confirm* dialog is displayed.
3. Click *OK*.

### To locate a tunnel on the VPN Map:

1. Select a tunnel in the table.
2. Click *Locate on VPN Map*, or right-click the tunnel, and click *Locate on VPN Map*. The *VPN Location Map* is displayed.

### To view the IPsec monitor in the CLI:

```
# diagnose vpn tunnel list
```

Sample output:

```

list all ipsec tunnel in vd 0
-----
name=fct-dialup ver=1 serial=4 10.100.67.5:0->0.0.0.0:0 tun_id=0.0.0.0 dst_mtu=0
bound_if=3 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/512 options[0200]=frag-rfc
accept_traffic=1 overlay_id=0

proxyid_num=0 child_num=0 refcnt=12 ilast=5545 olast=5545 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
-----
name=To-HQ-MPLS ver=2 serial=3 192.168.0.14:0->192.168.0.1:0 tun_id=19.168.0.1 dst_mtu=1500
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1 overlay_id=0


proxyid_num=1 child_num=0 refcnt=22 ilast=0 olast=0 ad=/0
stat: rxp=66693 txp=29183 rxb=33487128 txb=1908427
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=To-HQ-MPLS proto=0 sa=1 ref=6 serial=1 adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=32203 type=00 soft=0 mtu=1438 expire=266/0B replaywin=2048
seqno=2c5e esn=0 replaywin_lastseq=00002ea3 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=1773/1800
dec: spi=700c9198 esp=aes key=16 ebd04605de6148c8a92ced48b30930fa
ah=sha1 key=20 5f0201f67d7c714a046025a1df41d40376437f6a
enc: spi=5aacc20 esp=aes key=16 13d5d4b46e5e9c42eef509f2d9879188
ah=sha1 key=20 2dde67ef7a2a78b622d9a7ec6d75ad3c55d241e1
dec:pkts/bytes=11938/5226964, enc:pkts/bytes=11357/1312184

```

## SSL-VPN monitor

The SSL-VPN monitor displays remote user logins and active connections. You can use the monitor to disconnect a specific connection. The monitor will notify you when VPN users have not enabled two-factor authentication.



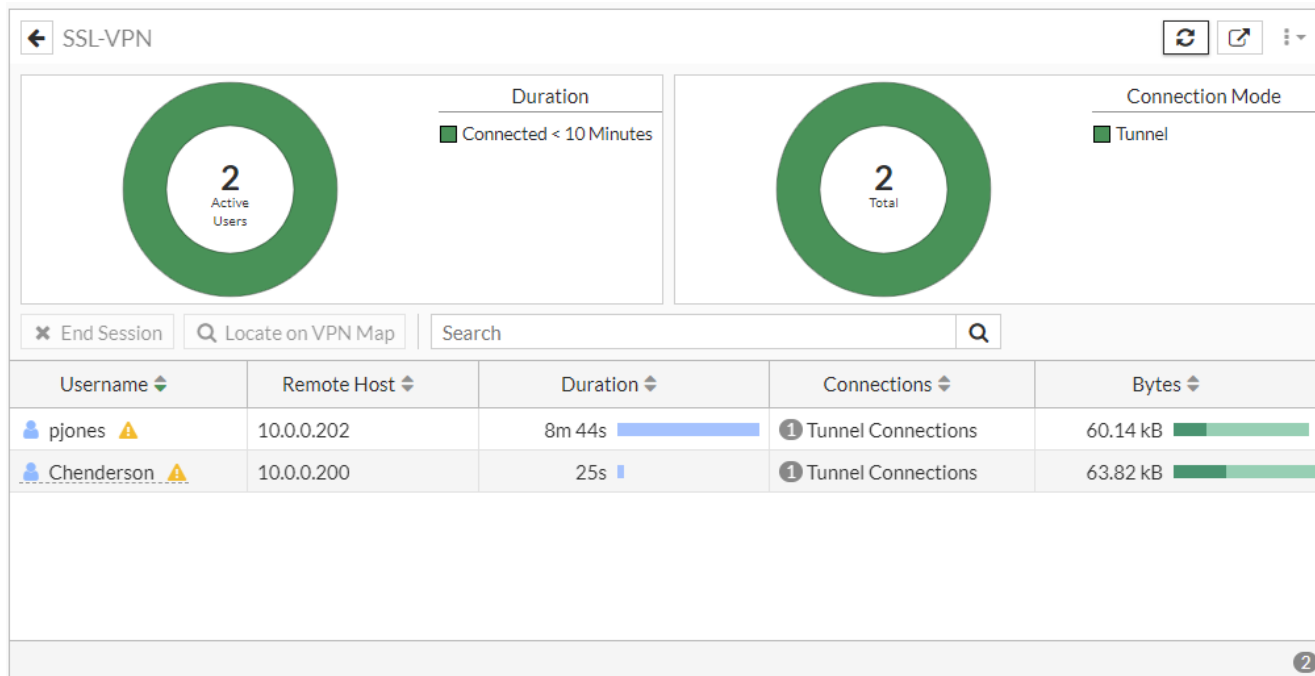

### To view the SSL-VPN monitor in the GUI:

1. Go *Dashboard > Network*.
2. Hover over the SSL-VPN widget, and click *Expand to Full Screen*. The *Duration* and *Connection Summary* charts are displayed at the top of the monitor.



To filter or configure a column in the table, hover over the column heading and click *Filter/Configure Column*.

### To disconnect a user:

1. Select a user in the table.
2. In the table, right-click the user, and click *End Session*. The Confirm window opens.
3. Click *OK*.

### To monitor SSL-VPN users in the CLI:

```
# get vpn ssl monitor
```

#### Sample output

```
SSL VPN Login Users:
Index User Group Auth Type Timeout From HTTP in/out HTTPS in/out
0 amitchell TAC 1(1) 296 10.100.64.101 3838502/11077721 0/0
1 mmiles Dev 1(1) 292 10.100.64.101 4302506/11167442 0/0
```

```
SSL VPN sessions:
Index User Group Source IP Duration I/O Bytes Tunnel/Dest IP
```

## Users & Devices

The *Users & Devices* dashboard shows the current status of users and devices connected to your network. All of the widgets can be expanded to view as monitor. In monitor view, you can create firewall addresses, deauthenticate a user, or remove a device from the network.

The *User & Devices* dashboard contains the following widgets:

Widget	Description
Device Inventory	Shows a summary of the hardware and software that is connected to the network. See <a href="#">Device inventory on page 108</a> .
FortiClient	Shows a summary of the FortiClient endpoints.
Firewall Users	Shows a summary of the users logged into the network.
Quarantine	Shows a summary of quarantined devices.
FortiSwitch NAC VLANs	Shows a summary of VLANs assigned to devices by FortiSwitch NAC policies.

### Device inventory

You can enable device detection to allow FortiOS to monitor your networks and gather information about devices operating on those networks, including:

- MAC address
- IP address
- Operating system
- Hostname
- Username
- Endpoint tags
- When FortiOS detected the device and on which interface

You can enable device detection separately on each interface in *Network > Interfaces*.

Device detection is intended for devices directly connected to your LAN and DMZ ports. The widget is only available when your *Interface Role* is *LAN*, *DMZ* or *Undefined*. It is not available when the role is *WAN*.


You can also manually add devices to Device Inventory to ensure that a device with multiple interfaces displays as a single device.

#### To view the device inventory monitor:

1. Go to *Dashboard > Users & Devices*.  
If you are using the Comprehensive dashboard template, go to *Dashboard > Device Inventory Monitor*.
2. Hover over the *Device Inventory* widget, and click *Expand to Full Screen*. The *Device Inventory* monitor is displayed.



To filter or configure a column in the table, hover over the column heading, and click *Filter/Configure Column*. See [Device inventory and filtering on page 109](#).

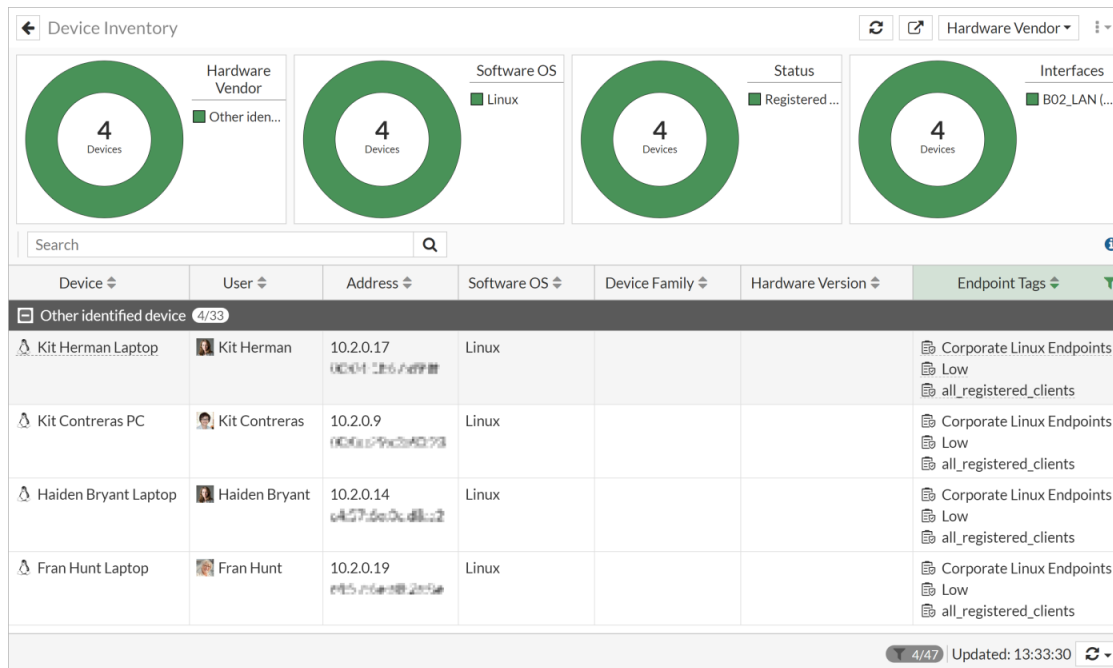


## Device inventory and filtering

The *Device Inventory* widget contains a series of summary charts that provide an overview of the hardware, operating system, status, and interfaces. You can use these clickable charts to simplify filtering among your devices.

### To view the device inventory and apply a filter:

 1. Go to *Dashboard > Users & Devices*.  
If you are using the Comprehensive dashboard template, go to *Dashboard > Device Inventory Monitor*. See .
2. Hover over the *Device Inventory* widget, and click *Expand to Full Screen*. The *Device Inventory* monitor is displayed.
3. To filter the order of the charts by operating system, click the dropdown in the top menu bar and select *Software OS*.
4. To filter a chart, click an item in the legend or chart area. The table displays the filter results.
5. To combine filters, hover over a column heading and click *Filter/Configure Column*.




6. Click the filter icon in the top-right corner of the chart to remove the filter.

## Filter examples


### To filter all offline devices:

1. In the *Status* chart, click *Offline* in the legend or on the chart itself.

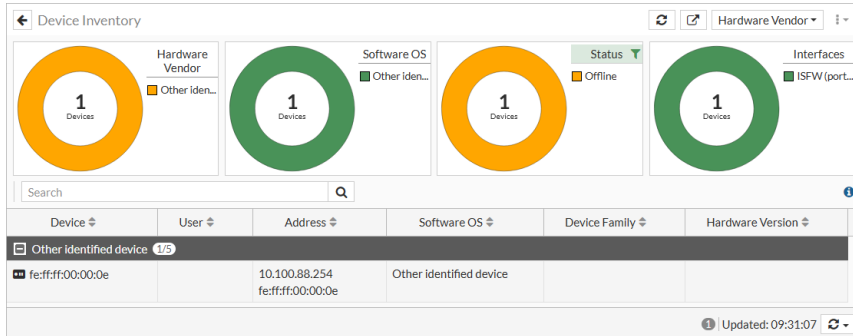

### To filter all devices discovered on port3:

1. In the *Interfaces* chart, click *port3*.

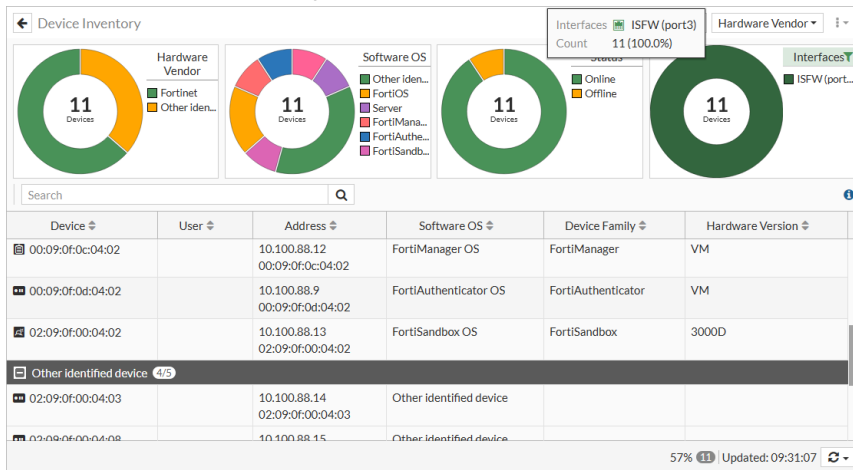


## Adding MAC-based addresses to devices

Assets detected by device detection appear in the *Device Inventory* widget. You can manage policies around devices by adding a new device object (MAC-based address) to a device. Once you add the MAC-based address, the device can be used in address groups or directly in policies.


### To add a MAC-based address to a device:

1. Go to *Dashboard > Users & Devices*.  
If you are using the Comprehensive dashboard template, go to *Dashboard > Device Inventory Monitor*. See .
2. Hover over the *Device Inventory* widget, and click *Expand to Full Screen*. The *Device Inventory* monitor is displayed.


3. Click a device, then click *Firewall Device Address*. The *New Address* dialog is displayed.

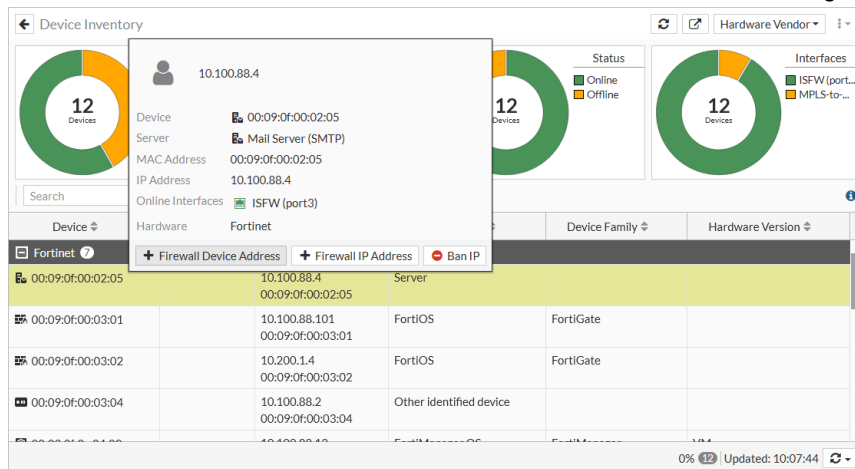

4. In the *Name* field, give the device a descriptive name so that it is easy to in the *Device* column.
5. Configure the *MAC Address*.

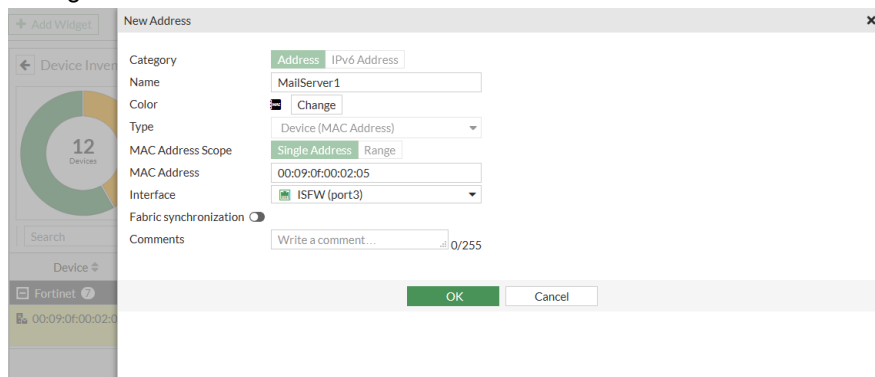


6. Click *OK*, then refresh the page. The MAC address icon appears in the *Address* column next to the device name.

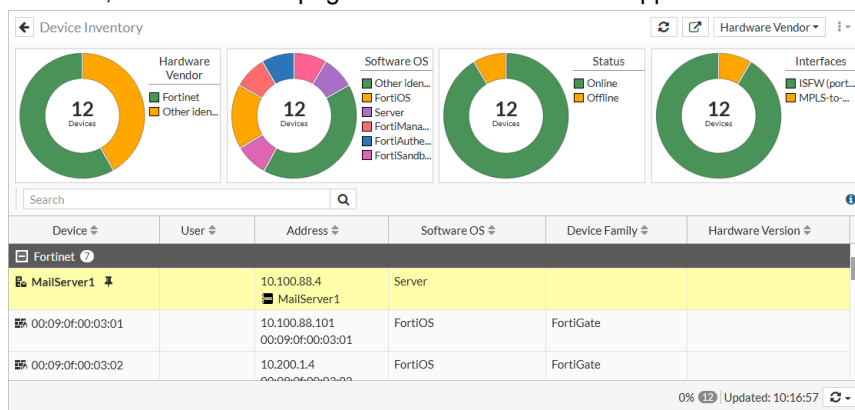

## Firewall Users monitor

The Firewall Users monitor displays all firewall users currently logged in. You can use the monitor to diagnose user-related logons or to highlight and deauthenticate a user.

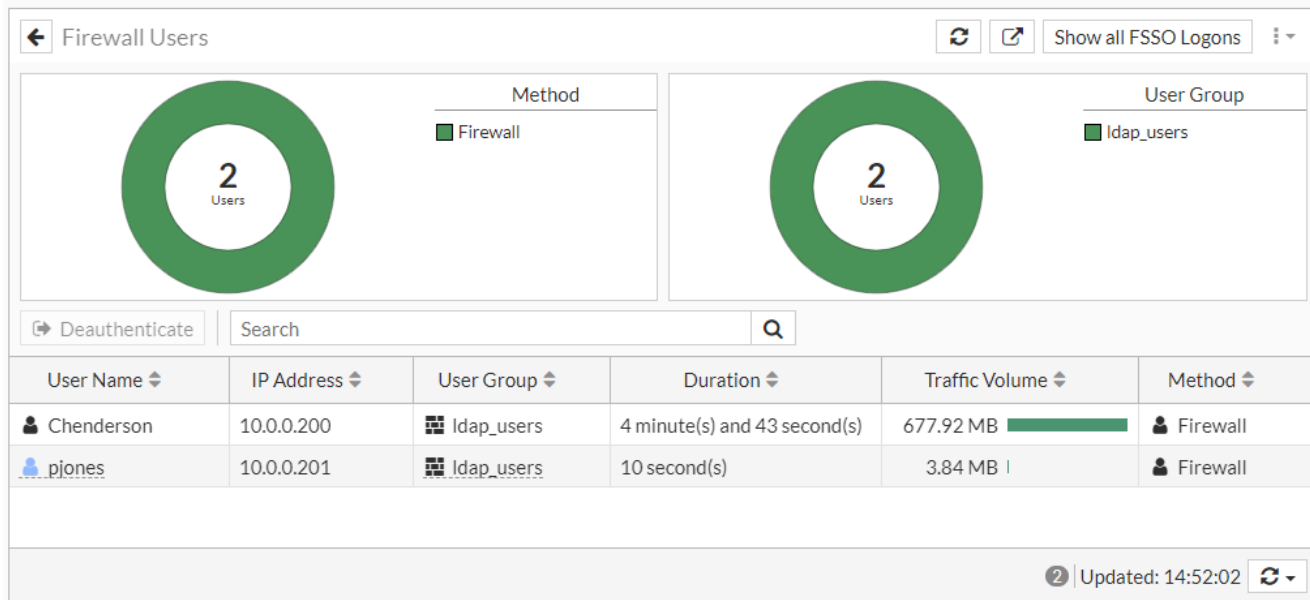

### To view the firewall monitor:

1. Go to *Dashboard > Users & Devices*.  
If you are using the Comprehensive dashboard template, go to *Dashboard > Firewall User Monitor*. See .
2. Hover over the *Firewall Users* widget, and click *Expand to Full Screen*.
3. To show FSSO logons, click *Show all FSSO Logons* at the top right of the page.



To filter or configure a column in the table, hover over the column heading and click *Filter/Configure Column*.

### To deauthenticate a user:

1. Go to *Dashboard > Users & Devices*.
2. Hover over the *Firewall Users* widget, and click *Expand to Full Screen*.
3. (Optional) Use the *Search* field to search for a specific user.
4. In the toolbar, click *Deauthenticate*, or right-click the user, and click *Deauthenticate*. The *Confirm* dialog is displayed.
5. Click *OK*.


### To view firewall users in the CLI:

```
# diagnose firewall auth list
```

## WiFi dashboard

The *WiFi* dashboard provides an overview of your WiFi network's performance, including FortiAP status, channel utilization, WiFi clients and associated information, login failures, and signal strength.

To access the WiFi dashboard, go to *Dashboard > WiFi*.

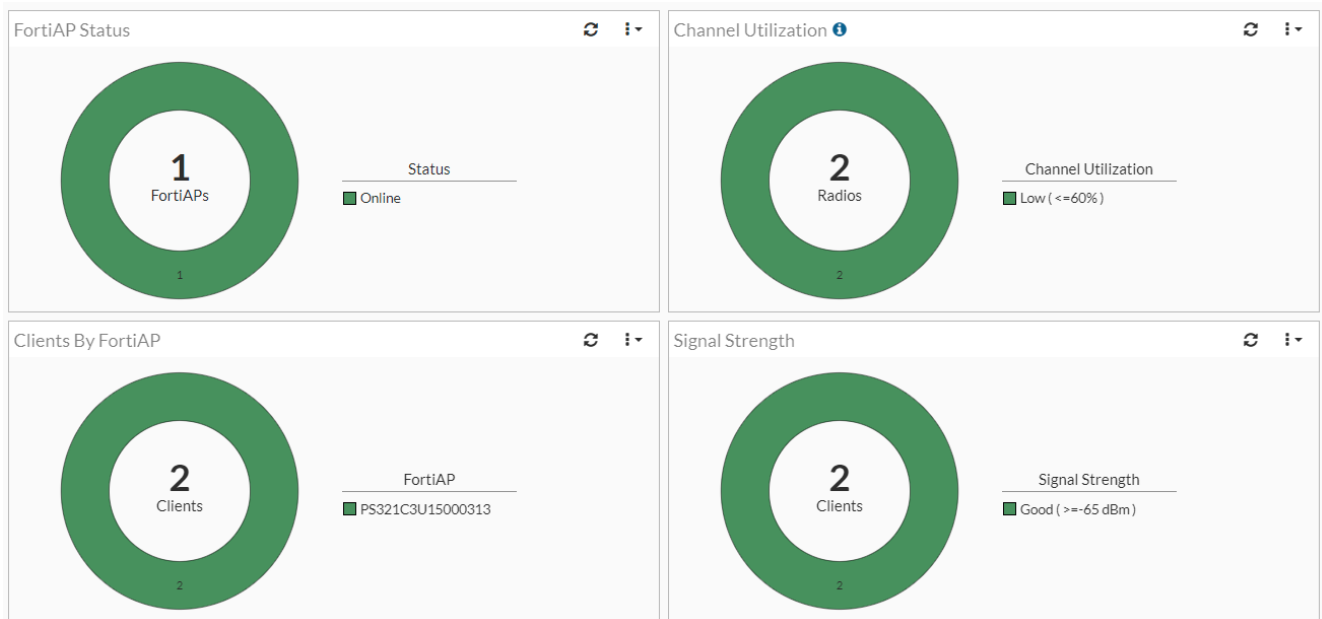


The WiFi dashboard can be customized per your requirements. To learn more about using and modifying dashboards and widgets, see [Dashboards and Monitors on page 87](#).

This section describes the following monitors available for the WiFi Dashboard:

- [FortiAP Status monitor on page 113](#)
- [Clients by FortiAP monitor on page 115](#)

## FortiAP Status monitor


The *FortiAP Status* monitor displays the status and the channel utilization of the radios of FortiAP devices connected to a FortiGate. It also provides access to tools to diagnose and analyze connected APs.

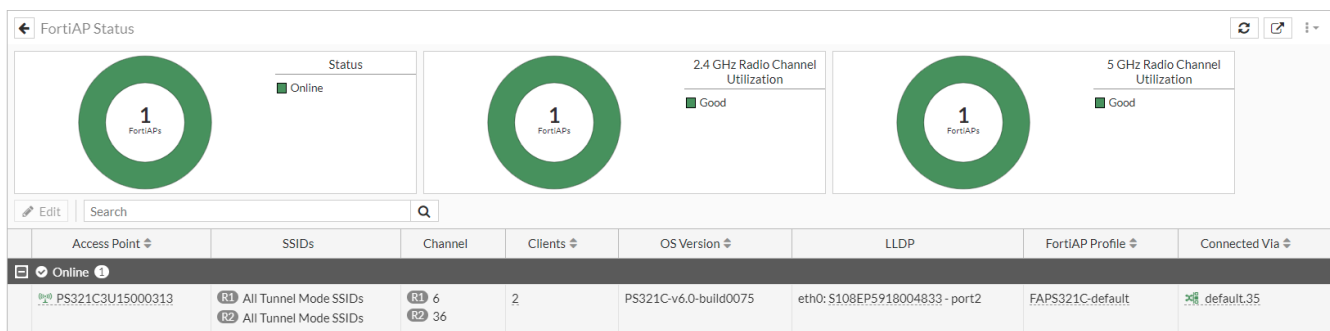

To view the *FortiAP Status* monitor:

1. Go to *Dashboard > WiFi*.
2. Hover over the *FortiAP Status* widget, and click *Expand to Full Screen*. The *FortiAP Status* monitor opens.

 3. (Optional) Click **Save as Monitor** to save the widget as monitor.



### To view the **Diagnostics and Tools** menu:

1. Right-click an *Access Point* in the table, and click *Diagnostics and Tools*. The *Diagnostics and Tools* dialog opens.

The screenshot shows the FortiAP Status dashboard. At the top, there are three circular gauges: 'Status' (Online), '2.4 GHz Radio Channel Utilization' (Good), and '5 GHz Radio Channel Utilization' (Good). Below these is a table with columns: Access Point, SSIDs, Channel, Clients, OS Version, LLDP, FortiAP Profile, and Connected Via. The first row shows an online access point with ID PS321C3U15000313. A right-click context menu is open over the first row, showing options: Edit, Authorize, Deauthorize, Upgrade, Restart, Registration, **Diagnostics and Tools**, Show in WiFi Maps, LED Blink, Edit In CLI, and Connect to CLI.

2. To monitor and analyze the FortiAP device, click on the tabs in the *Diagnostics and Tools* dialog, such as *Clients*, *Spectrum Analysis*, *VLAN Probe*, and so on.


The screenshot shows the 'Diagnostics and Tools' dialog for the FortiAP device PS321C3U15000313. The dialog has a left sidebar with a 'FortiAP Status' widget. The main area is divided into two panes. The top pane shows general information: Serial Number (PS321C3U15000313), Base MAC Address (08:5b:0e:eb:ac:5a), Status (Online), Country/Region (US), Connected Via (default.35), IPv4 Address (192.168.40.6), Uptime (44m 15s), Version (v6.0 build0075), and Registration (Not Registered). The bottom pane shows performance metrics for Radio 1 (2.4 GHz) and Radio 2 (5 GHz), including CPU Usage (2%), Memory Usage (14%), Interfering SSIDs, Clients, and Channel Utilization. The 'Clients' tab is selected, showing a graph of client activity over time. The 'Bandwidth' tab is also visible, showing a graph of bandwidth usage.



The *Diagnostics and Tools* dialog is similar to the device dialog from *WiFi & Switch Controller > Managed FortiAPs*. To learn more about the various tabs and their functions, see [Spectrum analysis of FortiAP E models](#), [VLAN probe report](#), and [Standardize wireless health metrics](#).


## Clients by FortiAP monitor

The *Clients by FortiAP* monitor allows you to view detailed information about the health of individual WiFi connections in the network. It also provides access to tools to diagnose and analyze connected wireless devices.

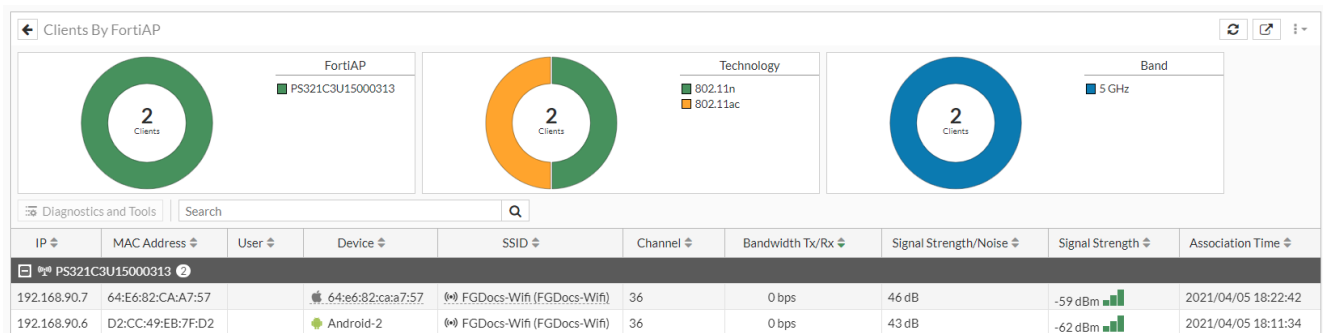


To view the *Clients by FortiAP* monitor:

 1. Go to *Dashboard > WiFi*.
2. Hover over the *Clients by FortiAP* widget, and click *Expand to Full Screen*. The *Clients by FortiAP* monitor opens.
3. (Optional) Click *Save as Monitor* to save the widget as monitor.



To view the summary page for a wireless client:

1. Right-click a client in the table and select *Diagnostics and Tools*. The *Diagnostics and Tools - <device>* page is displayed.

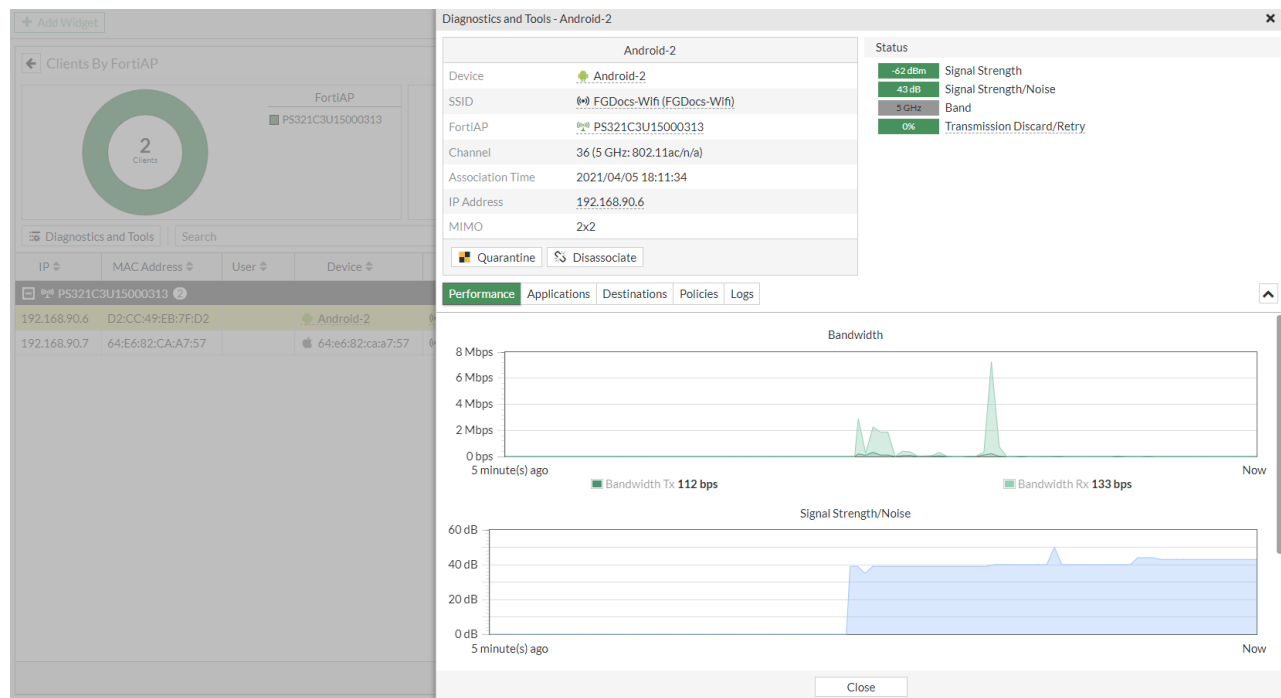

2. (Optional) Click *Quarantine* to quarantine the client,
3. (Optional) Click *Disassociate* to disassociate the client.

## Health status


The *Status* section displays the overall health for the wireless connection. The overall health of the connection is:

- Good if the value range for all three conditions are *Good*
- Fair or poor if one of the three conditions is *Fair* or *Poor* respectively.

Condition	Value Range
<b>Signal Strength</b>	<ul style="list-style-type: none"> <li>• <i>Good</i> &gt; -56dBm</li> <li>• -56dBm &gt; <i>Fair</i> &gt; -75dBm</li> <li>• <i>Poor</i> &lt; -75dBm</li> </ul>
<b>Signal Strength/Noise</b>	<ul style="list-style-type: none"> <li>• <i>Good</i> &gt; 39dBm</li> <li>• 20dBm &lt; <i>Fair</i> &lt; 39dBm</li> <li>• <i>Poor</i> &lt; 20dBm</li> </ul>
<b>Band</b>	<ul style="list-style-type: none"> <li>• <i>Good</i> = 5G band</li> <li>• <i>Fair</i> = 2.4G band</li> </ul>

The summary page also has the following FortiView tabs:

- Performance

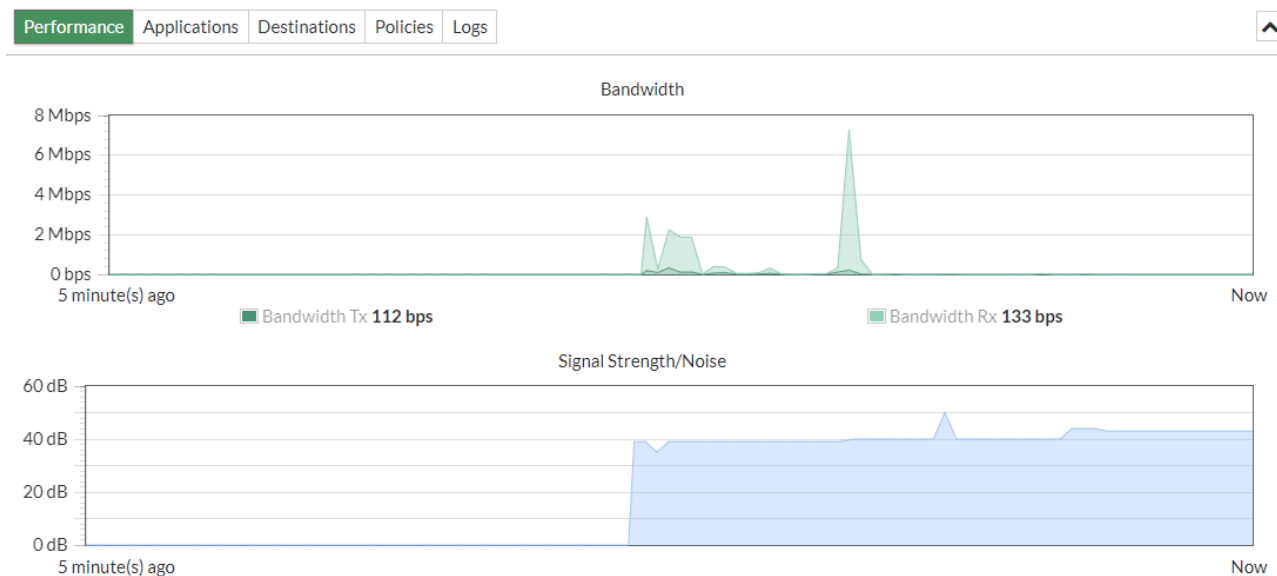

- Applications

Performance Applications Destinations Policies Logs

now

Application	Category	Risk	Bytes	Sessions	Bandwidth
UDP/443			1.24 MB	33	2.18 kbps
HTTPS.BROWSER	Web.Client		497.86 kB	4	0 bps
TCP/5061			16.46 kB	1	16 bps
DNS	Network.Service		14.37 kB	74	16 bps
TCP/443			11.99 kB	1	0 bps
TCP/5222			1.92 kB	1	16 bps

- Destinations

Performance Applications Destinations Policies Logs

now

Destination	Application	Bytes	Sessions	Bandwidth
r4---sn-n4v7sn7l.googlevideo.com (74.125....)	HTTPS.BROWSER	480.32 kB	1	0 bps
securepubads.g.doubleclick.net (216.58.21...)	Google-Gmail	142.74 kB	1	0 bps
www.googletagmanager.com (216.58.209.2...)	Google-Gmail	127.10 kB	1	0 bps
connect.facebook.net (69.171.250.13)	Facebook-Web	85.65 kB	1	0 bps
www.google.com (142.250.179.68)	Google-Web	54.71 kB	4	0 bps
s.youtube.com (64.233.167.102)	Google-Gmail	50.74 kB	1	0 bps
www.google-analytics.com (142.250.179.78..)	Google-Gmail	24.22 kB	2	0 bps
update.googleapis.com (216.58.209.227)	Google-Gmail	19.54 kB	2	0 bps
ca.rogers.rcs.telephony.goog (216.239.36.1...)	Google-Other	16.46 kB	1	0 bps
fonts.gstatic.com (216.58.213.163)	Google-Gmail	15.91 kB	2	0 bps
mtalk.google.com (64.233.167.188)	Google-Gmail	14.94 kB	2	0 bps

0% 26

- **Policies**

Performance

Applications

Destinations

Policies

Logs

↺

⌵

now

Policy	Policy Type	Source Interface	Destination Interface	Bytes	Sessions	Balance
FGDocs-Wifi-Out (31)	Firewall	FGDocs-Wifi (FGDocs-Wifi)	wan1 (port1)	1.10 MB <div><div></div></div>	41 <div><div></div></div>	

- **Logs**

Performance

Applications

Destinations

Policies

Logs

↺

⬇

⚙ Add Filter

📄

Details

Date/Time	Level	Action	Message	SSID	Channel
25 minutes ago	■ ■ ■ ■ ■ ■	client-ip-detected	Client d2:cc:49:eb:7f:d2 had an IP address detected ...	FGDocs-Wifi	36
25 minutes ago	■ ■ ■ ■ ■ ■	client-authentication	Client d2:cc:49:eb:7f:d2 authenticated.	FGDocs-Wifi	36
25 minutes ago	■ ■ ■ ■ ■ ■	client-deauthentication	Client d2:cc:49:eb:7f:d2 de-authenticated.	FGDocs-Wifi	36
25 minutes ago	■ ■ ■ ■ ■ ■	client-deauthentication	Client d2:cc:49:eb:7f:d2 de-authenticated.	FGDocs-Wifi	36

## Monitors

FortiGate supports both FortiView and Non-FortiView monitors. FortiView monitors are driven by traffic information captured from logs and real-time data. Non-FortiView monitors capture information from various real-time state tables on the FortiGate.

### Non-FortiView monitors

Non-FortiView monitors capture information on various state tables, such as the routes in the routing table, devices in the device inventory, DHCP leases in the DHCP lease table, connected VPNs, clients logged into the wireless network, and much more. These monitors are useful when troubleshooting the current state of the FortiGate, and to identify whether certain objects are in the state table or not. For more information, see [Dashboards on page 94](#).

### FortiView monitors

FortiView is the FortiOS log view tool and comprehensive monitoring system for your network. FortiView integrates real-time and historical data into a single view on your FortiGate. It can log and monitor network threats, keep track of administration activities, and more.

Use FortiView monitors to investigate traffic activity such as user uploads and downloads, or videos watched on YouTube. You can view the traffic on the whole network by user group or by individual. FortiView displays the information in both text and visual format, giving you an overall picture of your network traffic activity so that you can quickly decide on actionable items.

FortiView is integrated with many UTM functions. For example, you can quarantine an IP address directly in FortiView or create custom devices and addresses from a FortiView entry.




The logging range and depth will depend on the FortiGate model.

The *Optimal* template contains a set of popular default dashboards and FortiView monitors. The *Comprehensive* template contains a set of default dashboards as well as all of the FortiView monitors. See [Dashboards on page 94](#).

Template	Monitors
<b>Optimal</b>	<ul style="list-style-type: none"> <li>• FortiView Sources</li> <li>• FortiView Destinations</li> <li>• FortiView Applications</li> <li>• FortiView Web Sites</li> <li>• FortiView Policies</li> <li>• FortiView Sessions</li> </ul>
<b>Comprehensive</b>	<ul style="list-style-type: none"> <li>• FortiView Sources</li> <li>• FortiView Destinations</li> <li>• FortiView Applications</li> <li>• FortiView Web Sites</li> <li>• FortiView Threats</li> <li>• FortiView Compromised Hosts</li> <li>• FortiView Policies</li> <li>• FortiView Sessions</li> <li>• Device Inventory Monitor</li> <li>• Routing Monitor</li> <li>• DHCP Monitor</li> <li>• SD-WAN Monitor</li> <li>• FortiGuard Quota Monitor</li> <li>• IPsec Monitor</li> <li>• SSL-VPN Monitor</li> <li>• Firewall User Monitor</li> <li>• Quarantine Monitor</li> <li>• FortiClient Monitor</li> <li>• FortiAP Clients Monitor</li> <li>• Rogue APs Monitor</li> </ul>

## FortiView monitors and widgets

FortiView monitors are available in the tree menu under *Dashboards*. The menu contains several default monitors for the top categories. Additional FortiView monitors are available as widgets that can be added to the dashboards. You can also add FortiView monitors directly to the tree menu with the Add (+) button.

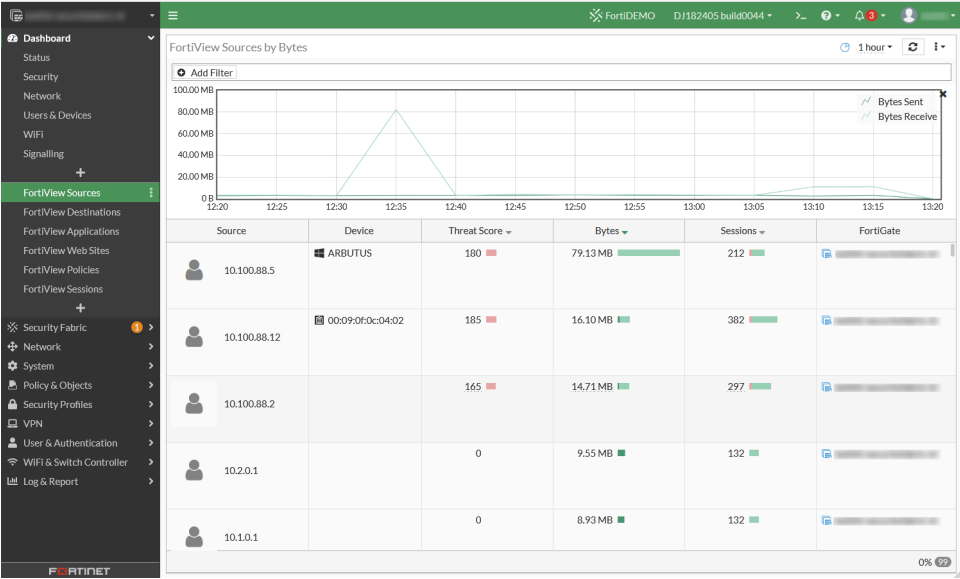

Core FortiView monitors

The following default monitors are available in the tree menu:

Dashboard	Usage
FortiView Sources	Displays Top Sources by traffic volume and drilldown by Source.
FortiView Destinations	Displays Top Destinations by traffic volume and drilldown by Destination.
FortiView Applications	Displays Top Applications by traffic volume and drilldown by Application.
FortiView Web Sites	Displays Top Websites by session count and drilldown by Domain.
FortiView Policies	Displays Top Policies by traffic volume and drilldown by Policy number
FortiView Sessions	Displays Top Sessions by traffic source and can be used to end sessions.

Usage is based on default settings. The pages may be customized further and sorted by other fields.




You can quarantine a host and ban an IP from all of the core FortiView monitors.

Adding FortiView monitors

Non-core FortiView monitors are available in the *Add monitor* pane. You can add a FortiView widget to a dashboard or the tree menu as a monitor.

**To add a monitor to the tree menu:**

1. In the tree menu, under the monitors section, click *Add Monitor (+)*. The *Add Monitor* window opens.

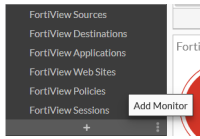

2. Click *Add* next to a monitor. You can use the *Search* field to search for a specific monitor.
3. In the *FortiGate* area, select *All FortiGates* or *Specify* to select a FortiGate device in the security fabric.
4. (Optional) In the *Data Source* area, select *Specify* and select a source device.
5. From the *Time Period* dropdown, select the time period. This option is not available in all monitors.
6. In the *Visualization* area, select *Table View* or *Bubble Chart*.
7. From the *Sort By* dropdown, select the sorting method.
8. Click *Add Monitor*. The monitor is added to the tree menu.

**Monitors by category**

Usage is based on the default settings. The monitors may be customized further and sorted by other fields.

**LANDMARK**

Widget	Sort by	Usage
<b>Applications</b>	Bytes/Sessions/Bandwidth/Packets	Displays top applications and drilldown by application.
<b>Application Bandwidth</b>	Bytes/Bandwidth	Displays bandwidth for top applications and drilldown by application.
<b>Cloud Applications</b>	Bytes/Sessions/Files(Up/Down)	Displays top cloud applications and drilldown by application.
<b>Cloud Users</b>	Bytes/Sessions/Files(Up/Down)	Displays top cloud users and drilldown by cloud user.
<b>Compromised Hosts</b>	Verdict	Displays compromised hosts and drilldown by source.
<b>Countries/Regions</b>	Bytes/Sessions/Bandwidth/Packets	Displays top countries/regions and drilldown by countries/regions.
<b>Destination Firewall Objects</b>	Bytes/Sessions/Bandwidth/Packets	Displays top destination firewall objects and drilldown by destination objects.
<b>Destination Owners</b>	Bytes/Sessions/Bandwidth/Packets	Displays top destination owners and drilldown by destination.
<b>Destinations</b>	Bytes/Sessions/Bandwidth/Packets	Displays top destinations and drilldown by destination.

Widget	Sort by	Usage
<b>Search Phrases</b>	Count	Displays top search phrases and drilldown by search phrase.
<b>Source Firewall Objects</b>	Bytes/Sessions/Bandwidth/Packets	Displays top search phrases and drilldown by source object.
<b>Sources</b>	Bytes/Sessions/Bandwidth/Packets	Displays top sources and drilldown by source.
<b>Threats</b>	Threat level/Threat Score/Sessions	Displays top threats and drilldown by threat.
<b>Traffic Shaping</b>	Dropped Bytes/Bytes/Sessions/Bandwidth/Packets	Displays top traffic shaping and drilldown by shaper.
<b>Web Categories</b>	Bytes/Sessions/Bandwidth/Packets	Displays top web categories and drilldown by category.
<b>Web Sites</b>	Bytes/Sessions/Bandwidth/Packets	Displays top web sites and drilldown by domain.
<b>WiFi Clients</b>	Bytes/Sessions	Displays top WiFi clients and drilldown by source.

## WAN

Widget	Sort by	Usage
<b>Servers</b>	Bytes/Sessions/Bandwidth/Packets	Displays top servers and drilldown by server address.
<b>Sources</b>	Bytes/Sessions/Bandwidth/Packets	Displays top sources and drilldown by device.
<b>Threats</b>	Threat Level/Threat Score/Sessions	Displays top threats and drilldown by threat.

## All Segments

Widget	Sort by	Usage
<b>Admin Logins</b>	Configuration Changes/Logins/Failed Logins	Displays top admin logins by username.
<b>Destination Interfaces</b>	Bytes/Sessions/Bandwidth/Packets	Displays top destination interfaces by destination interface.
<b>Endpoint Vulnerabilities</b>	Severity	Displays top endpoint vulnerabilities by vulnerability name.
<b>Failed Authentication</b>	Failed Attempts	Displays top failed authentications by failed authentication source.
<b>FortiSandbox Files</b>	Submitted	Displays top FortiSandbox files by file name.



Widget	Sort by	Usage
<b>Interface Pairs</b>	Bytes/Sessions/Bandwidth/Packets	Displays top interface pairs by source interface.
<b>Policies</b>	Bytes/Sessions/Bandwidth/Packets	Displays top policies by policy.
<b>Source Interfaces</b>	Bytes/Sessions/Bandwidth/Packets	Displays top source interfaces by source interface.
<b>System Events</b>	Level/Events	Displays top system events by event name.
<b>VPN</b>	Connections/Bytes	Displays top VPN connections by user.
<b>Vulnerable Endpoint Devices</b>	Detected Vulnerabilities	Displays top vulnerable endpoint devices by device.



 
A maximum of 25 interfaces can be monitored at one time on a device.

## Using the FortiView interface

Use the FortiView interface to customize the view and visualizations within a monitor to find the information you are looking for. The tools in the top menu bar allow you to change the time display, refresh or customize the data source, and filter the results. You can also right-click a table in the monitor to view drilldown information for an item.


### Real-time and historical charts

Use the *Time Display* dropdown to select the time period to display on the current monitor. Time display options vary depending on the monitor and can include real-time information (*now*) and historical information (*1 hour*, *24 hours*, and *7 days*).




Disk logging or remote logging must be enabled to view historical information.

You can create a custom time range by selecting an area in table with your cursor.

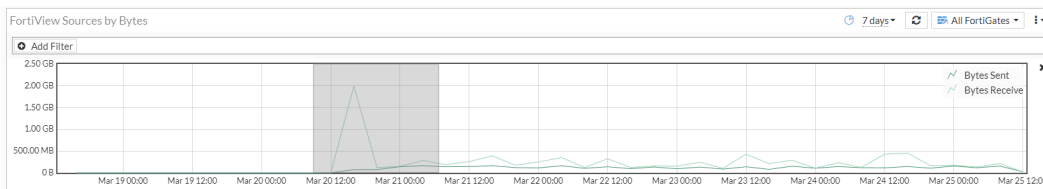

The icon next to the time period identifies the data source (FortiGate Disk, FortiAnalyzer, or FortiGate Cloud). You can hover over the icon to see a description of the device.

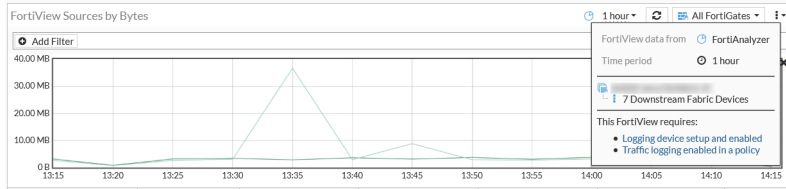

## Data source

FortiView gathers information from a variety of data sources. If there are no log disk or remote logging configured, the data will be drawn from the FortiGate's session table, and the *Time Period* is set to *Now*.

Other data sources that can be configured are:

- FortiGates (disk)
- FortiAnalyzer
- FortiGate Cloud




When *Data Source* is set to *Best Available Device*, FortiAnalyzer is selected when available, then FortiGate Cloud, and then FortiGate Disk.


## Drilldown information

Double-click or right-click an entry in a FortiView monitor and select *Drill Down to Details* to view additional details about the selected traffic activity. Click the *Back* icon in the toolbar to return to the previous view.

You can group drilldown information into different drilldown views. For example, you can group the drilldown information in the *FortiView Destinations* monitor by *Sources*, *Applications*, *Threats*, *Policies*, and *Sessions*.

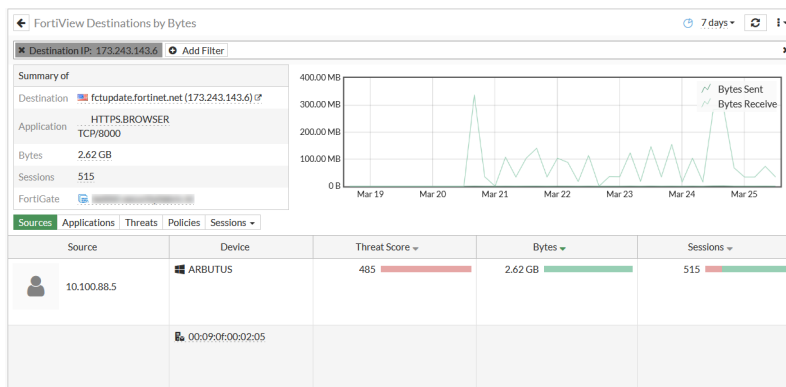

Double-click an entry to view the logs in *Sessions* view. Double-click a session to view the logs.

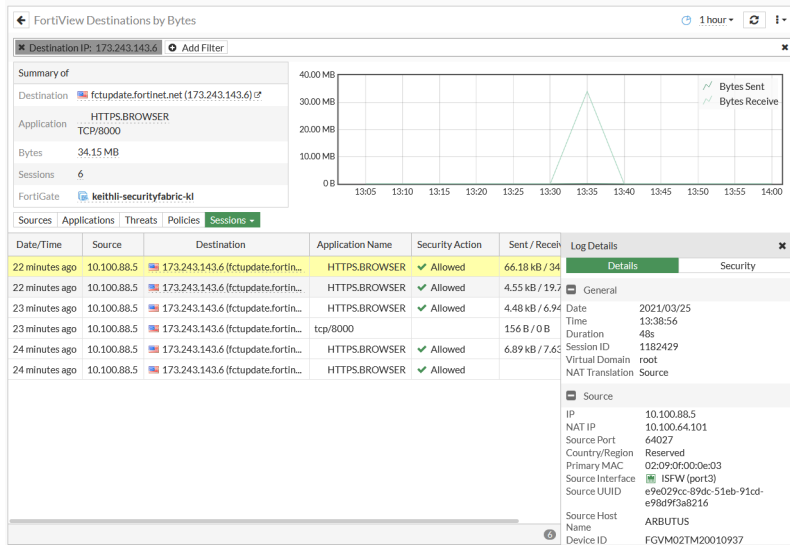

### Graph

- The graph shows the bytes sent/received in the time frame. real time does not include a chart.
- Users can customize the time frame by selecting a time period within the graph.

### Summary of


- Shows information such as the user/avatar, avatar/source IP, bytes, and sessions total for the time period.
- Can quarantine host (access layer quarantine) if they are behind a FortiSwitch or FortiAP.
- Can ban IP addresses, adds the source IP address into the quarantine list.

### Tabs

- Drilling down entries in any of these tabs (except sessions tab) will take you to the underlying traffic log in the sessions tab.
- Applications* shows a list of the applications attributed to the source IP. This can include scanned applications (using Application Control in a firewall policy or unscanned applications).
 

```
config log gui-display
    set fortiview-unscanned-apps enable
end
```
- Destinations* shows destinations grouped by IP address/FQDN.
- Threats* lists the threats caught by UTM profiles. This can be from antivirus, IPS, Web Filter, Application Control, etc.
- Web Sites* contains the websites which were detected either with webfilter, or through FQDN in traffic logs.
- Web Categories* groups entries into their categories as dictated by the Web Filter Database.
- Policies* groups the entries into which policies they passed through or were blocked by.
- Sessions* shows the underlying logs (historical) or sessions (real time). Drilldowns from other tabs end up showing the underlying log located in this tab.
- Search Phrases* shows entries of search phrases on search engines captured by a Web Filter UTM profile, with deep inspection enabled in firewall policy.
- More information can be shown in a tooltip while hovering over these entries.

To view matching logs or download a log, click the *Security* tab in the *Log Details*.

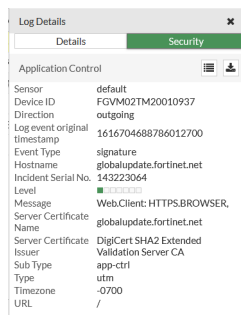

## Enabling FortiView from devices

You can enable FortiView from SSD disk, FortiAnalyzer and FortiGate Cloud.

### FortiView from disk

FortiView from disk is available on all FortiGates with an SSD disk.

### Restrictions

Model	Supported view
<b>Desktop models (100 series) with SSD</b>	Five minutes and one hour
<b>Medium models with SSD</b>	Up to 24 hours
<b>Large models (1500D and above) with SSD</b>	Up to seven days To enable seven days view: <pre>config log setting     set fortiview-weekly-data enable end</pre>

### Configuration

A firewall policy needs to be in place with traffic logging enabled. For optimal operation with FortiView, internal interface roles should be clearly defined as LAN. DMZ and internet facing or external interface roles should be defined as WAN.

#### To configure logging to disk:

```
config log disk setting
    set status enable
end
```

#### To include sniffer traffic and local-deny traffic when FortiView from Disk:

```
config report setting
    set report-source forward-traffic sniffer-traffic local-deny-traffic
end
```

This feature is only supported through the CLI.

 
## Troubleshooting

Use `execute report flush-cache` and `execute report recreate-db` to clear up any irregularities that may be caused by upgrading or cache issues.

## Traffic logs

### To view traffic logs from disk:

1. Go to *Log & Report*, and select either the *Forward Traffic*, *Local Traffic*, or *Sniffer Traffic* views.
2. In the top menu bar, click *Log location* and select *Disk*.



## FortiView from FortiAnalyzer

Connect FortiGate to a FortiAnalyzer to increase the functionality of FortiView. Adding a FortiAnalyzer is useful when adding monitors such as the *Compromised Hosts*. FortiAnalyzer also allows you to view historical information for up to seven days.


## Requirements

- A FortiGate or FortiOS
- A compatible FortiAnalyzer (see [Compatibility with FortiOS](#))

To configure logging to the FortiAnalyzer, see [Configuring FortiAnalyzer on page 2593](#)

### To enable FortiView from FortiAnalyzer:

1. Go to *Dashboard > FortiView Sources*.
2. Select a time range other than *Now* from the dropdown list to view historical data.
3. In top menu, click the dropdown, and select *Settings*. The *Edit Dashboard Widget* dialog is displayed.
  - a. In the *Data Source* area, click *Specify*.
  - b. From the dropdown, select *FortiAnalyzer*, and click *OK*.

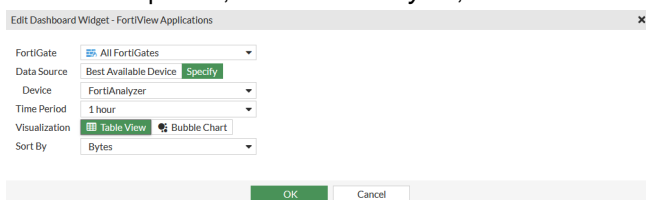

All the historical information now comes from the FortiAnalyzer.



When *Data Source* is set to *Best Available Device*, FortiAnalyzer is selected when available, then FortiGate Cloud, and then FortiGate Disk.


## FortiView from FortiGate Cloud

This function requires a FortiGate that is registered and logged into a compatible FortiGate Cloud. When using FortiGate Cloud, the *Time Period* can be set to up to 24 hours.

To configure logging to FortiGate Cloud, see [Configuring cloud logging on page 2596](#).

### To enable FortiView with log source as FortiGate Cloud:

1. Go to *Dashboard > FortiView Sources*.
2. In the top menu, click the dropdown, and select *Settings*. The *Edit Dashboard Widget* window opens.
  - a. In the *Data Source* area, click *Specify*.
  - b. From the dropdown, select *FortiGate Cloud*, then click *OK*.

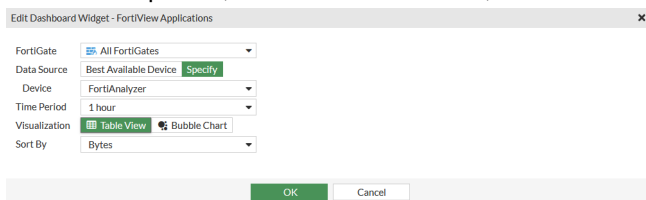


You can select FortiGate Cloud as the data source for all available FortiView pages and widgets.

## FortiView sources

The *FortiView Sources* monitor displays top sources sorted by Bytes, Sessions or Threat Score. The information can be displayed in real time or historical views. You can use the monitor to create or edit a firewall device address or IP address definitions, and temporarily or permanently ban IPs.

### To add a firewall device address:

1. In the *Device* column, hover over the device MAC address. An information window opens.

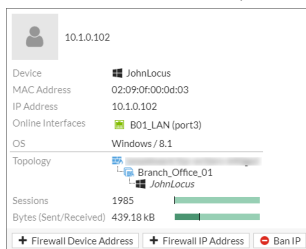


2. Click *Firewall Device Address*. The *New Address* dialog opens.
3. Configure the address settings, and click *Return*.



Use the *Name* field to assign a descriptive name to a device so it is easier to find it in the *Device* column. After you finish configuring the device, refresh the page to see the new name in the monitor.

### To add a firewall IP address:

1. In the *Device* column, hover over the device MAC address. An information window opens.

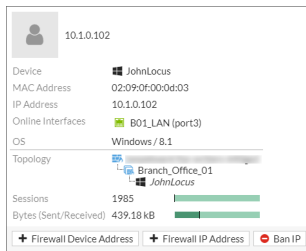


2. Click *Firewall IP Address*. The *New Address* window opens.
3. Configure the address settings, and click *Return*.




Use the *Name* field to assign a descriptive name to a device so it is easier to find it in the *Device* column. After you finish configuring the device, refresh the page to see the new name in the monitor.

### To ban an IP address:

1. In the *Device* column, hover over the device MAC address. An information window opens.

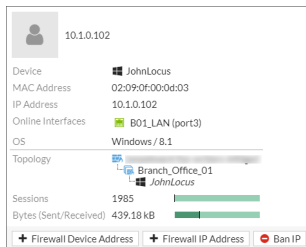

2. Click *Ban IP*. The *Ban IP* dialog is displayed.
3. Configure the ban IP settings, and click *OK*.

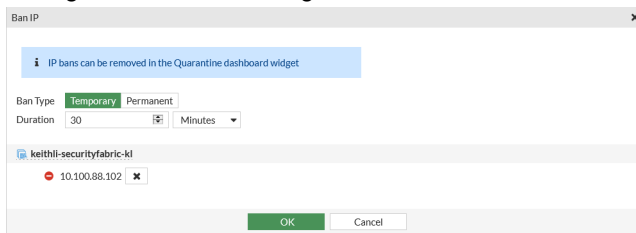

## FortiView Sessions

The *FortiView Sessions* monitor displays *Top Sessions* by traffic source and can be used to end sessions.

To view the *FortiView Sessions* dashboard, go to *Dashboard > FortiView Sessions*.

FortiView Sessions now All FortiGates

**Add Filter**


Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets
10.100.88.4	00:09:0f:00:02:05	45.75.200.87	Fortiguard.Search	UDP	49396	53	1.55 kB	18
10.100.88.4	00:09:0f:00:02:05	45.75.200.88	Fortiguard.Search	UDP	49396	53	1.55 kB	18
10.100.88.4	00:09:0f:00:02:05	45.75.200.85	Fortiguard.Search	UDP	49396	53	1.55 kB	18
10.2.0.1		10.100.88.2	TCP/514	TCP	24703	514	227.45 kB	3,191
10.100.88.2	00:09:0f:00:03:04	96.45.33.73	HTTPS.BROWSER	TCP	50852	443	1.56 kB	7
10.1.0.1		10.100.88.2	TCP/514	TCP	22009	514	227.45 kB	3,191
10.2.0.1		10.100.88.2	UDP/514	UDP	12865	514	13.37 MB	14,959
10.100.88.4	00:09:0f:00:02:05	209.222.147.43	Fortiguard.Search	UDP	49396	53	1.55 kB	18
10.100.88.4	00:09:0f:00:02:05	209.222.147.36	Fortiguard.Search	UDP	49396	53	1.85 kB	21
10.1.0.1		10.100.88.2	UDP/514	UDP	9451	514	22.55 MB	25,254
10.1.0.1		10.100.88.2	TCP/514	TCP	7513	514	718.37 kB	3,849
10.100.88.14	02:09:0f:00:04:03	10.100.77.102	TCP/80	TCP	27582	80	743 B	9
10.100.88.12	00:09:0f:0c:04:02	96.45.33.66	HTTPS.BROWSER	TCP	52158	443	23.62 kB	39
10.100.88.12	00:09:0f:0c:04:02	96.45.33.73	TCP/443	TCP	56540	443	52 B	1
10.100.88.14	02:09:0f:00:04:03	8.8.8.8	DNS	UDP	21208	53	213 B	2
192.168.0.6	Y-MPLS-ROUTER	162.159.200.1	UDP/123	UDP	123	123	152 B	2
10.100.88.9	00:09:0f:0d:04:02	208.91.112.61	NTP	UDP	123	123	26.14 kB	344
10.100.88.9	00:09:0f:0d:04:02	208.91.112.63	NTP	UDP	123	123	49.66 kB	604
10.100.77.200		74.104.167.114	NTP	UDP	123	123	152 B	2
10.100.88.2	00:09:0f:00:03:04	208.91.112.63	NTP	UDP	123	123	608 B	8

The session table displayed on the *FortiView Sessions* monitor is useful when verifying open connections. For example, if you have a web browser open to browse the Fortinet website, you would expect a session entry from your computer on port 80 to the IP address for the Fortinet website. You can also use a session table to investigate why there are too many sessions for FortiOS to process.


You can filter the sessions displayed in the session table by setting up the available filtering options.

### To filter sessions in the session table:

1. Click on the *Add Filter* button at the top of the session table.

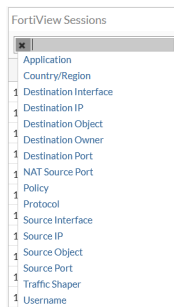

2. Select the required filtering option. The session table updates to the filter selection.

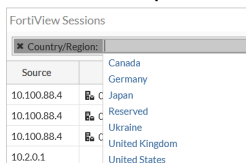

3. You may add one or more filters depending upon your requirements. To add more filters, repeat the above steps for a different set of filters.

FortiView Sessions

**Country/Region: Canada** **Protocol: UDP** **Applications: NTP**

Source	Device	Destination	NTP Application	Protocol	Source Port
10.100.88.9	00:09:0f:0d:04:02	208.91.112.61	NTP	UDP	123
10.100.88.9	00:09:0f:0d:04:02	208.91.112.63	NTP	UDP	123
10.100.88.12	00:09:0f:0c:04:02	208.91.112.61	NTP	UDP	123
10.100.88.102	00:09:0f:00:03:02	208.91.112.60	NTP	UDP	123
10.100.88.102	00:09:0f:00:03:02	208.91.112.61	NTP	UDP	123
10.100.88.102	00:09:0f:00:03:02	208.91.112.62	NTP	UDP	123
10.100.88.102	00:09:0f:00:03:02	208.91.112.63	NTP	UDP	123



You can be very specific with how you use filters and target sessions based on different filter combinations. For example, you may want to view all sessions from a device with a particular IP by adding the *Source IP* filter. Similarly, you may need to target all the sessions having a particular *Destination IP* and *Destination Port*, and so on.

You may also view the session data in the CLI.

### To view session data using the CLI:

```
# diagnose sys session list
```

The session table output in the CLI is very large. You can use the supported filters in the CLI to show only the data you need.

### To view session data with filters using the CLI:

```
# diagnose sys session filter <option>
```

See to learn more about using the supported filters in the CLI.

You may also decide to end a particular session or all sessions for administrative purposes.

### To end sessions from the GUI:

1. Select the session you want to end. To select multiple sessions, hold the *Ctrl* or *Shift* key on your keyboard while clicking the sessions.

Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets
10.100.88.2	00:09:0f:00:03:04	96.45.33.73	HTTPS.BROWSER	TCP	58282	443	18.50 kB	38
10.100.88.4	00:09:0f:00:02:05	45.75.200.87	Fortiguard.Search	UDP	49396	53	4.13 kB	48
10.100.88.4	00:09:0f:00:02:05	45.75.200.88	Fortiguard.Search	UDP	49396	53	4.13 kB	48

2. Right-click on the selected sessions, click on *End Session(s)* or *End All Sessions*.

Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets
10.100.88.2	00:09:0f:00:03:04	96.45.33.73	HTTPS.BROWSER	TCP	58282	443	18.50 kB	38
10.100.88.4	00:09:0f:00:02:05	45.75.200.87	Fortiguard.Search	UDP	49396	53	4.13 kB	48
10.100.88.4	00:09:0f:00:02:05	45.75.200.88	Fortiguard.Search	UDP	49396	53	4.13 kB	48
10.100.88.4	00:09:0f:00:02:05	45.75.200.85	Fortiguard.Search	UDP	49396	53	4.13 kB	48

3. Click *OK* in the confirmation dialog.

## FortiView Top Source and Top Destination Firewall Objects monitors

The *FortiView Source Firewall Objects* and *FortiView Destination Firewall Objects* monitors leverage UUID to resolve firewall object address names for improved usability.

### Requirements

To have a historical *Firewall Objects*-based view, address objects' UUIDs need to be logged.


### To enable address object UUID logging in the CLI:

```
config system global
  set log-uuid-address enable
```

end

### To add a firewall object monitor in the GUI:

1. Click **Add Monitor**. The **Add Monitor** window opens.

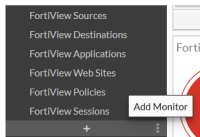

2. In the **Search** field, type *Destination Firewall Objects* and click the **Add** button next to the dashboard name.
3. In the **FortiGate** area, select the FortiGate(s) from the dropdown.
4. In the **Data Source** area, select *Best Available Device* or *Specify*. For information, see [Using the FortiView interface on page 123](#).
5. From the **Time Period** dropdown, select the time period. Select *now* for real-time information, or (*1 hour*, *24 hours*, and *7 days*) for historical information.
6. In the **Visualization** area, select *Table View* or *Bubble Chart*.
7. From the **Sort By** dropdown, select *Bytes*, *Sessions*, *Bandwidth*, or *Packets*.
8. Click **Add Monitor**. The monitor is added to the tree menu.

### To drill down Firewall Objects:

1. Open the *FortiView Source Firewall Objects* or *FortiView Destination Firewall Objects* monitor.
2. Right-click on any *Source* or *Destination Object* and click *Drill Down to Details*.

Source Object	Bytes	Sessions	Bandwidth	FortiGate
all	1.19 GB	15	5.94 kbps	
MPLS-Interfaces	27.73 MB	70	119.19 kbps	
B01_LAN	304 B	2	0 bps	Branch_Office_01
B02_LAN	23.43 kB	32	61.09 kbps	Branch_Office_02
all	129.73 kB	392	137.87 kbps	Enterprise_Second_Floor
all	457.35 kB	1,352	309.10 kbps	Enterprise_First_Floor
all	281.65 kB	954	214.22 kbps	

3. Click the tabs to sort the sessions by *Application*, *Destinations*, *Web Sites*, or *Policies*.

Summary of					
Source Object: all					
Bytes: 28.21 MB					
Sessions: 106					
Bandwidth: 196.50 kbps					
FortiGate:					
Applications Destinations Web Sites Policies Sessions					
Application	Category	Risk	Bytes	Sessions	Bandwidth
Fortiguard.Search	Cloud.IT		67.28 kB	26	0 bps
NTP	Network.Service		66.80 kB	5	304 bps
DNS	Network.Service		12.14 kB	43	1.05 kbps

4. To view signatures, click the entry in the **Category** column.

Applications Destinations Web Sites Policies Sessions					
Application	Category	Risk	Bytes	Sessions	Bandwidth
Fortiguard.Search	Cloud		67.28 kB	26	0 bps
NTP	Network		66.80 kB	5	304 bps
DNS	Network.Service		12.14 kB	43	1.05 kbps

5. To view sessions, right-click an entry and click *View Sessions*, or click the **Sessions** tab.
6. To end a session, right-click an entry in the **Sessions** tab and select *End Sessions* or *End All Sessions*.


## Viewing top websites and sources by category

You can use FortiGuard web categories to populate the category fields in various FortiView monitors such as *FortiView Web Categories*, *FortiView Websites* or *FortiView Sources*. To view the categories in a monitor, the web filter profile must be configured to at least monitor for a FortiGuard category based on a web filter and applied to a firewall policy for outbound traffic.

### To verify the web filter profile is monitor-only:


1. Go to *Security Profiles > Web Filter*.
2. Double-click a web filter that is applied to an outbound traffic firewall policy. The *Edit Web Filter Profile* window opens.
3. Ensure *FortiGuard category based filter* is enabled.

In the image below, the *General Interest - Business* categories are monitor-only.

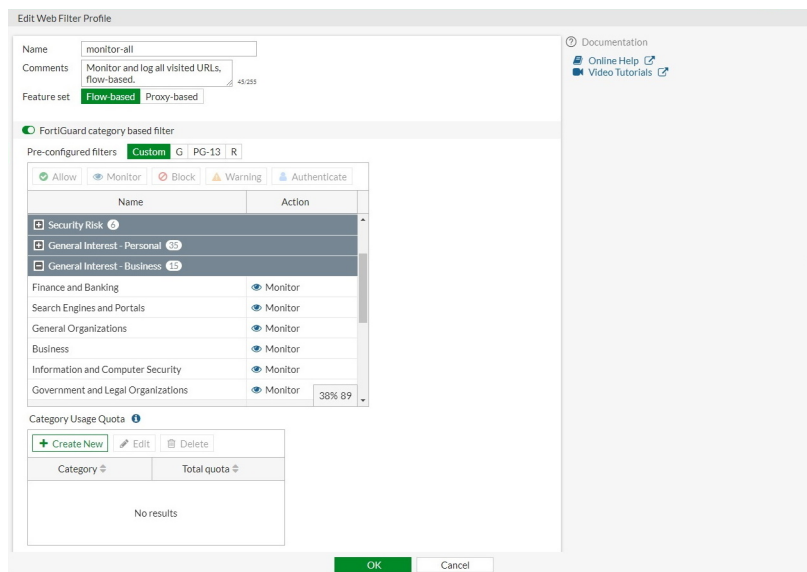

### To create a Web categories monitor:


1. Click *Add Monitor*. The *Add Monitor* window opens.

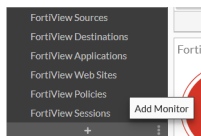


2. In the *Search* field, type *FortiView Web Categories* and click the *Add* button next to the monitor name.
3. In the *FortiGate* area, select the FortiGate(s) from the dropdown.
4. In the *Data Source* area, click *Best Available Device* or *Specify* to select a device in the security fabric.
5. From the *Time Period* dropdown, select a time period greater than *Now*.
6. From the *Sort By* dropdown, select *Bytes*, *Sessions*, *Bandwidth*, or *Packets*.
7. Click *Add Monitor*. The widget is added to the tree menu.

# Viewing the web filter category


The web filter category name appears in the *Category* column of the dashboard.

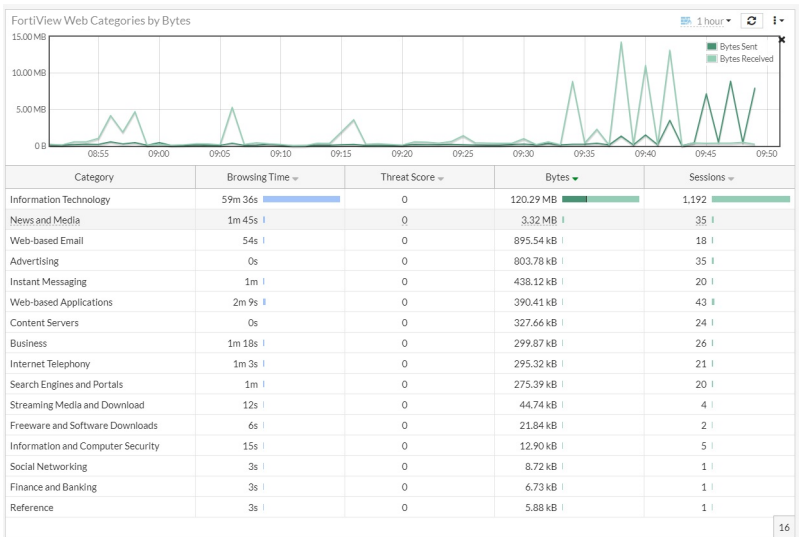


Click an entry in the table. The category name appears at the top of the *Summary of* box.

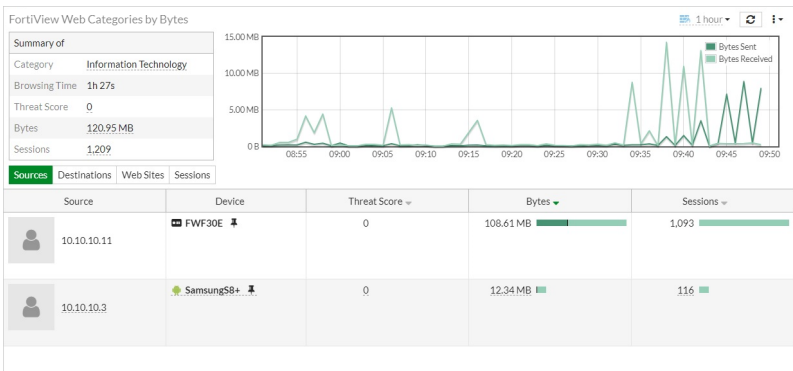


Click the *Web Sites* tab. The category name appears in the *Category* column.

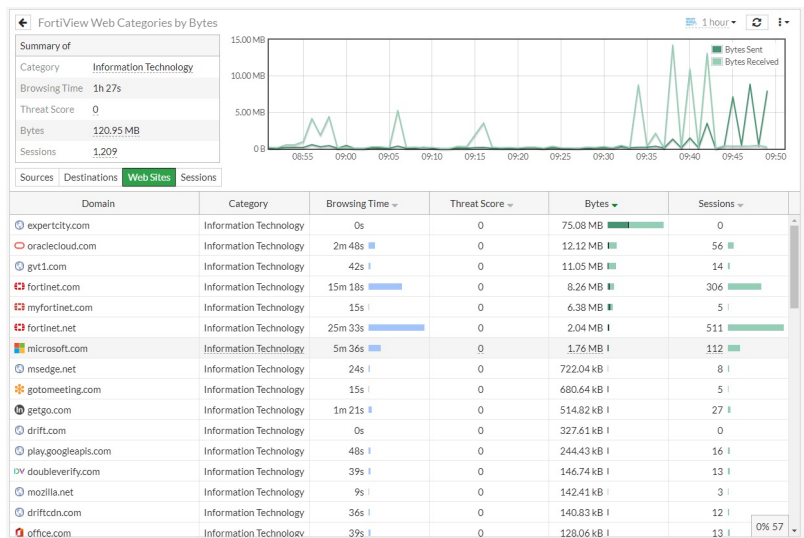

Click the **Sessions** tab. The category name appears in the **Category Description** column.

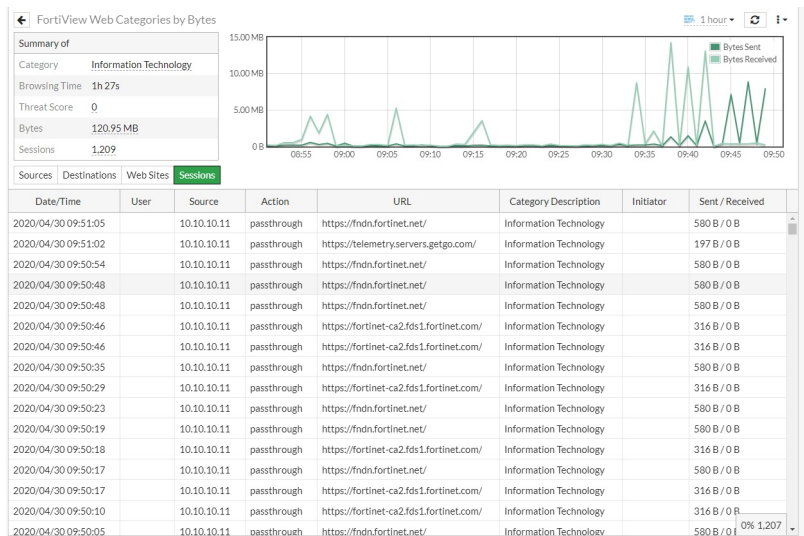

The category name also appears in the **Category** column in the **FortiView Websites** and **FortiView Sources** monitors.

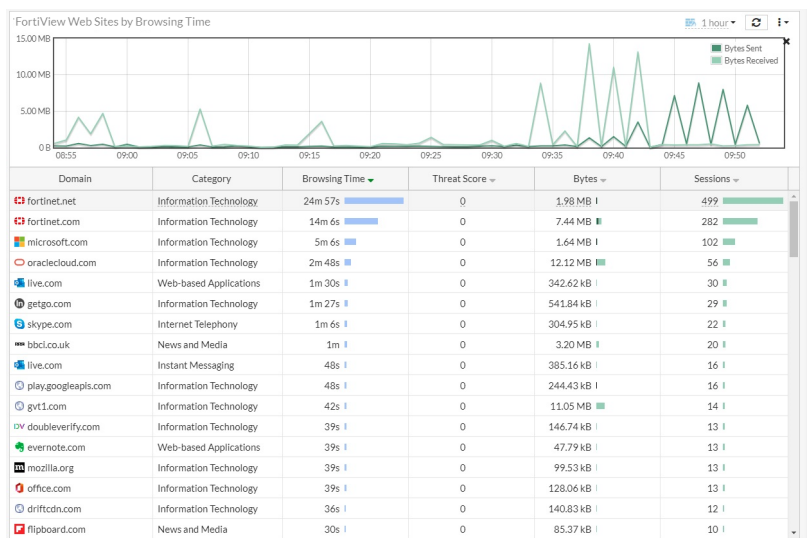

## Cloud application view

To see different cloud application views, set up the following:

- A FortiGate with a firewall policy that uses the *Application Control* security profile.
- A FortiGate with log data from the local disk or FortiAnalyzer.
- Optional but highly recommended: *SSL Inspection* set to *deep-inspection* in the related firewall policies.

 
## Viewing cloud applications

### Cloud applications

All cloud applications require *SSL Inspection* set to *deep-inspection* on the firewall policy. For example, `Facebook_File.Download` can monitor Facebook download behavior which requires *SSL deep-inspection* to parse the deep information in the network packets.


**To view cloud applications:**

1. Go to *Security Profiles > Application Control*.
2. Select a relative Application Control profile used by the firewall policy and click *Edit*.
3. On the *Edit Application Sensor* page, click *View Application Signatures*.
4. Hover over a column heading or the *Application Signature* bar. In the right gutter area, click the filter icon to filter the applications.




Cloud applications have a cloud icon beside them.

The lock icon indicates that the application requires SSL deep inspection.

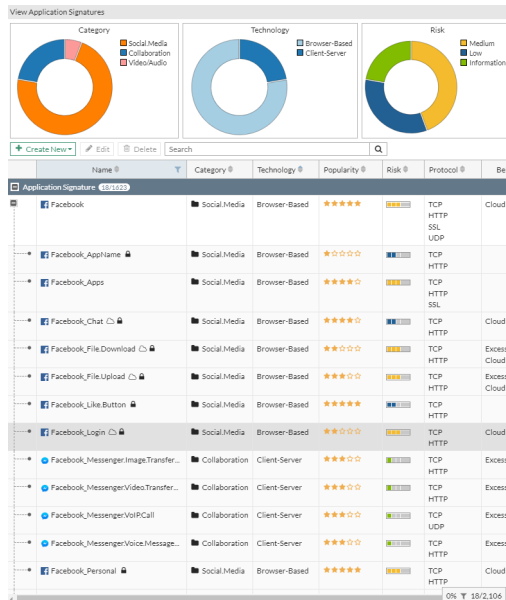

##### 5. Hover over an item to see its details.

This example shows *Gmail\_Attachment.Download*, a cloud application signature based sensor which requires SSL deep inspection. If any local network user behind the firewall logs into Gmail and downloads a Gmail attachment, that activity is logged.

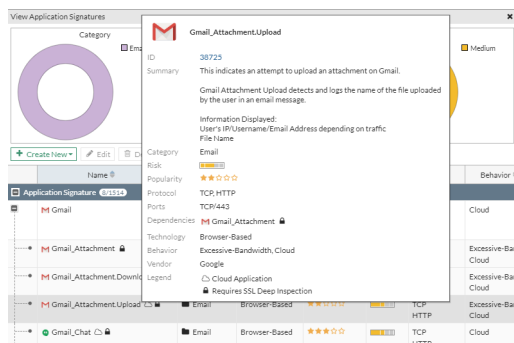

## Applications with cloud behavior


Applications with cloud behavior is a superset of cloud applications.

Some applications do not require SSL deep inspection, such as Facebook, Gmail, and YouTube. This means that if any traffic trigger application sensors for these applications, there is a FortiView cloud application view for that traffic.


Other applications require SSL deep inspection, such as Gmail attachment, Facebook\_Workplace, and so on.

**To view applications with cloud behavior:**


1. In the *Application Signature* page, ensure the *Behavior* column is displayed. If necessary, add the *Behavior* column.
  - a. Hover over the left side of the table column headings to display the *Configure Table* icon.
  - b. Click *Configure Table* and select *Behavior*.
  - c. Click *Apply*.

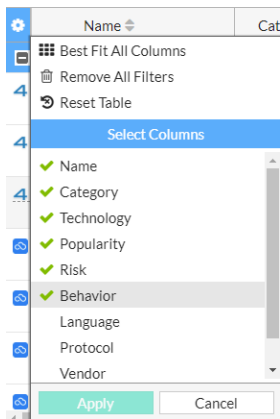

2. Click the filter icon in the *Behavior* column and select *Cloud* to filter by Cloud. Then click *Apply*.

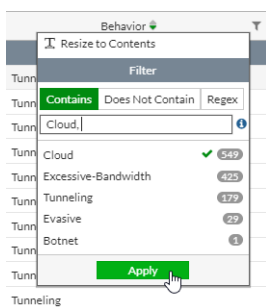


3. The *Application Signature* page displays all applications with cloud behavior.

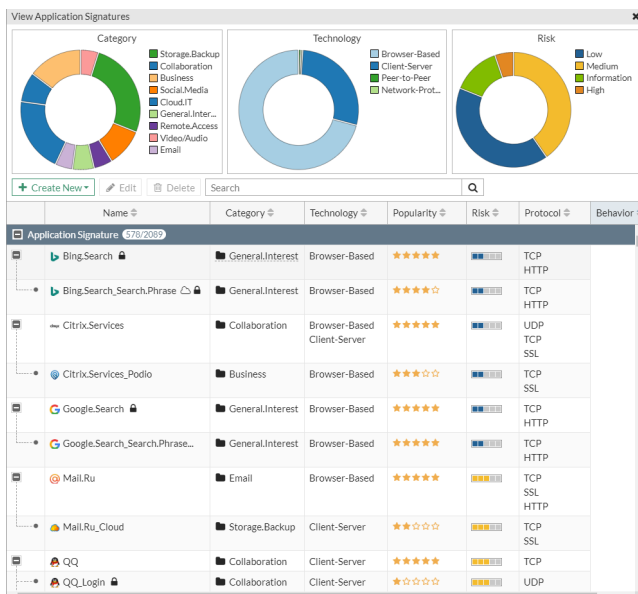


4. Use the *Search* box to search for applications. For example, you can search for *youtube*.



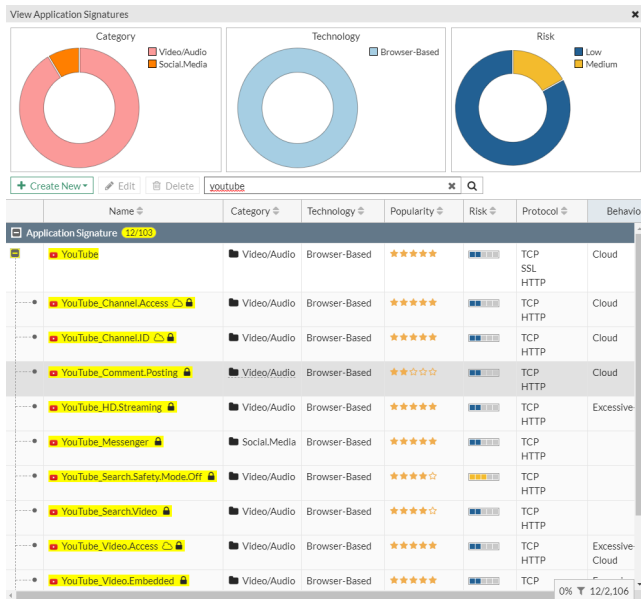


### 5. Hover over an item to see its details.

This example shows an application sensor with no lock icon which means that this application sensor does not require SSL deep inspection. If any local network user behind the firewall tries to navigate to the YouTube website, that activity is logged.

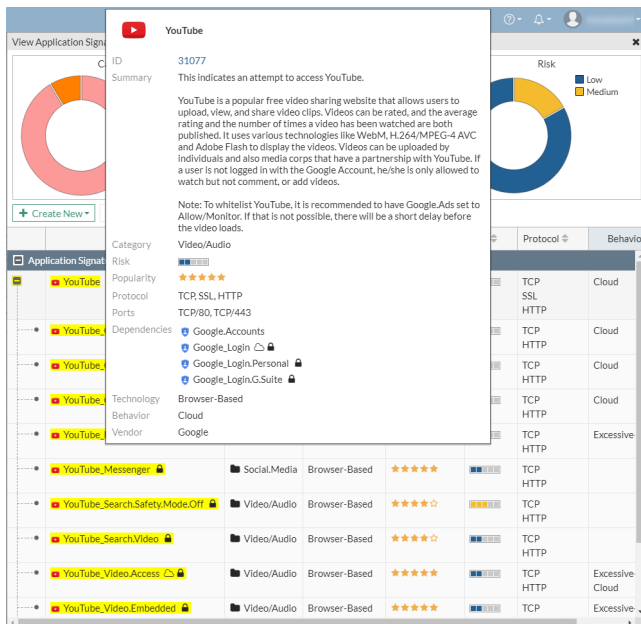


## Configuring the Cloud Applications monitor

On the *Edit Application Sensor* page in the *Categories* section, the eye icon next to a category means that category is monitored and logged.

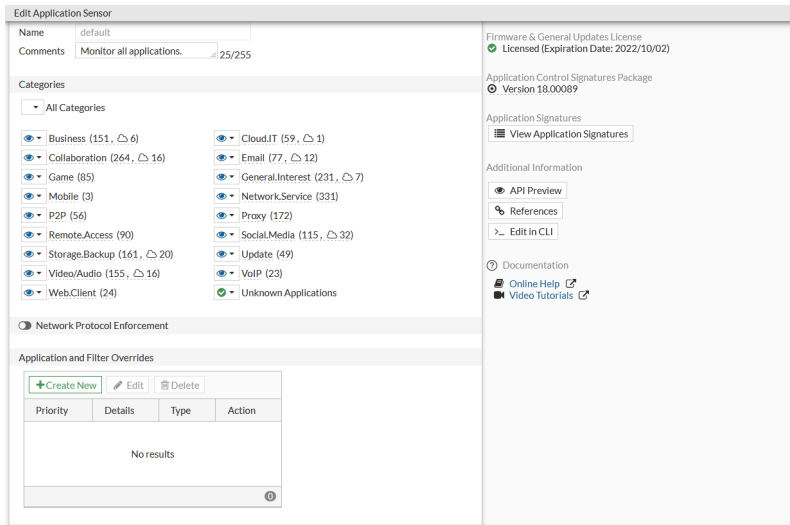

### To add the Cloud Applications monitor in the GUI:

1. Click **Add Monitor**. The *Add monitor* window opens.

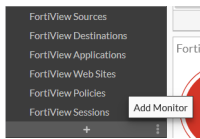


2. In the **Search** field, enter *FortiView Cloud Applications* and click the **Add** button next to the monitor.
3. In the **FortiGate** area, select the FortiGate(s) from the dropdown.
4. In the **Data Source** area, click *Best Available Device* or *Specify* to select a device in the security fabric.
5. From the **Time Period** dropdown, select a time period greater than *Now*.
6. From the **Sort By** dropdown, select *Bytes*, *Sessions*, or *Files (Up/Down)*.
7. Click **Add Monitor**. The monitor is added to the tree menu.
8. Open the monitor. If SSL deep inspection is enabled in the firewall, then the monitor shows the additional details that are logged, such as *Files (Up/Down)* and *Videos Played*.
  - For YouTube, the *Videos Played* column is triggered by the *YouTube\_Video.Play* cloud application sensor. This shows the number of local network users who logged into YouTube and played YouTube videos.
  - For Dropbox, the *Files (Up/Down)* column is triggered by *Dropbox\_File.Download* and *Dropbox\_File.Upload* cloud application sensors. This shows the number of local network users who logged into Dropbox and uploaded or downloaded files.

Application	Category	Risk	Bytes	Sessions	Files (Up/Down)	Videos Played
YouTube	Video/Audio	<div><div></div></div>	137.53 MB	120	0	34
Dropbox	Storage.Backup	<div><div></div></div>	7.34 MB	29	1	0
Google Hangouts	Collaboration	<div><div></div></div>	25.21 kB	3	0	0
Facebook	Social.Media	<div><div></div></div>	33.02 kB	6	0	0
Skype	Collaboration	<div><div></div></div>	32.92 kB	1	0	0

## Using the Cloud Applications monitor


To see additional information in the Cloud Applications monitor:

1. In the tree menu, click the *FortiView Cloud Applications* monitor to open it.

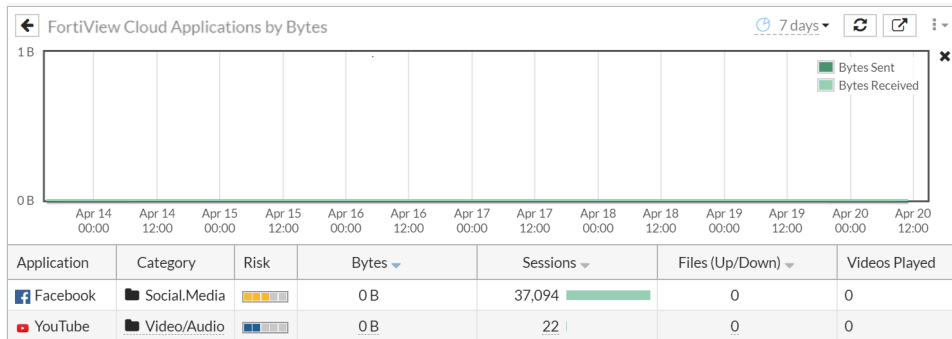

2. For details about a specific entry, double-click the entry or right-click the entry and select *Drill Down to Details*.
3. To see all the sessions for an application, click *Sessions*.


In this example, the *Application Name* column shows all applications related to YouTube.

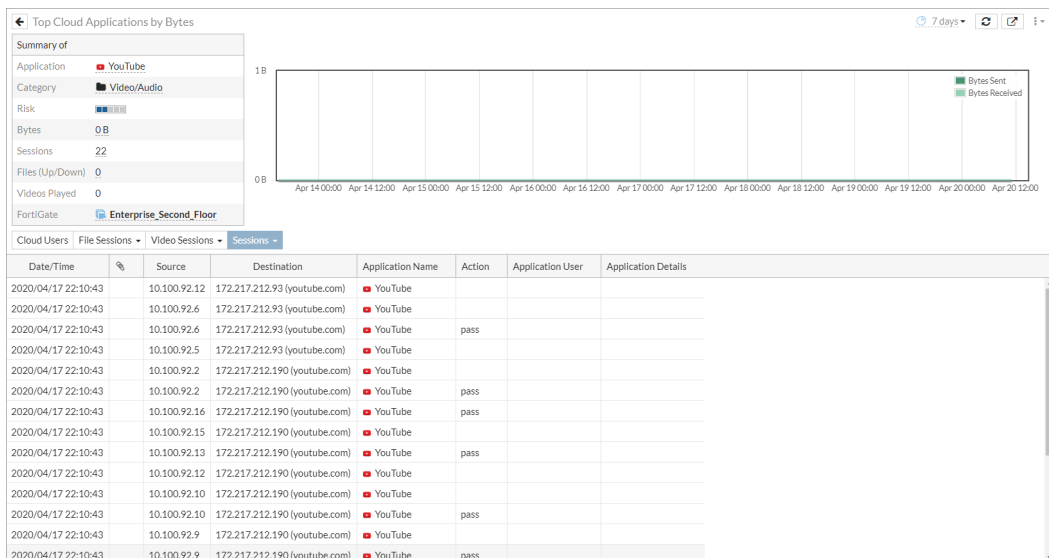


4. To view log details, double-click a session to display the *Log Details* pane.

Sessions monitored by SSL deep inspection (in this example, Youtube\_Video.Play) captured deep information such as *Application User*, *Application Details*, and so on. The *Log Details* pane also shows additional deep information such as application ID, *Message*, and so on.

Sessions not monitored by SSL deep inspection (YouTube) did not capture the deep information.

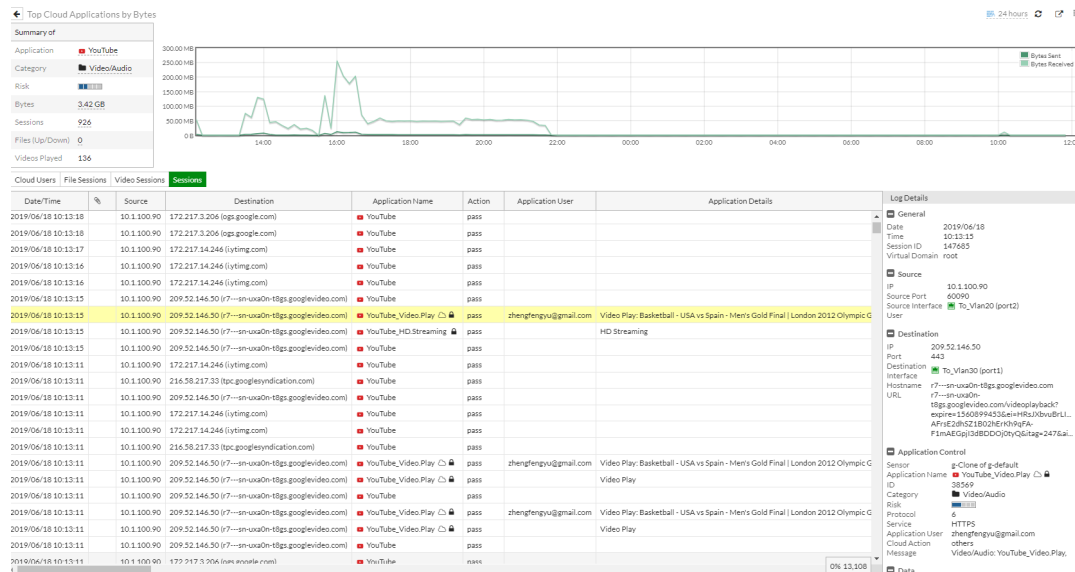

5. To display a specific time period, select and drag in the timeline graph to display only the data for that time period.

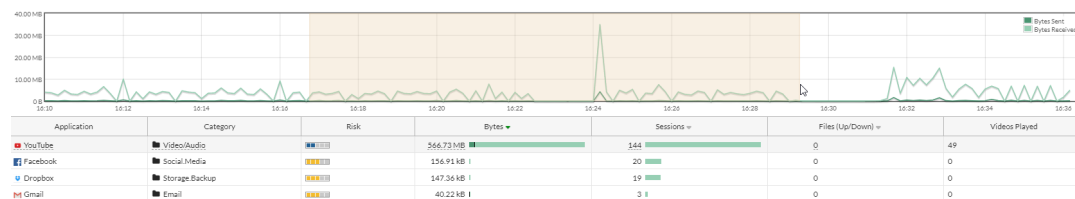

## Top application: YouTube example


## Monitoring network traffic with SSL deep inspection

This example describes how to monitor network traffic for YouTube using *FortiView Applications* view with SSL deep inspection.

### To monitor network traffic with SSL deep inspection:

- Create a firewall policy with the following settings:
  - Application Control* is enabled.
  - SSL Inspection* is set to *deep-inspection*.

- *Log Allowed Traffic* is set to *All Sessions*.

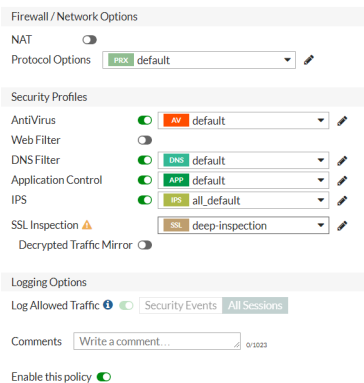

2. Go to *Security Profiles > Application Control*.
3. Select a relative Application Control profile used by the firewall policy and click *Edit*.
4. Because YouTube cloud applications are categorized into *Video/Audio*, ensure the *Video/Audio* category is monitored. Monitored categories are indicated by an eye icon.
5. Click *View Application Signatures* and hover over YouTube cloud applications to view detailed information about YouTube application sensors.
6. Expand *YouTube* to view the Application Signatures associated with the application.

Application Signature	Description	Application ID
<i>YouTube_Video.Access</i>	An attempt to access a video on YouTube.	16420
<i>YouTube_Channel.ID</i>	An attempt to access a video on a specific channel on YouTube.	44956
<i>YouTube_Comment.Posting</i>	An attempt to post comments on YouTube.	31076
<i>YouTube_HD.Streaming</i>	An attempt to watch HD videos on YouTube.	33104
<i>YouTube_Messenger</i>	An attempt to access messenger on YouTube.	47858
<i>YouTube_Video.Play</i>	An attempt to download and play a video from YouTube.	38569
<i>YouTube_Video.Upload</i>	An attempt to upload a video to YouTube.	22564
<i>YouTube</i>	An attempt to access YouTube. This application sensor does not depend on SSL deep inspection so it does not have a cloud or lock icon.	31077
<i>YouTube_Channel.Access</i>	An attempt to access a video on a specific channel on YouTube.	41598



To view the application signature description, click the ID link in the information window.

7. On the test PC, log into YouTube and play some videos.
8. On the FortiGate, go to *Log & Report > Security Events* and look for log entries for browsing and playing YouTube videos in the *Application Control* card.

In this example, note the *Application User* and *Application Details*. Also note that the *Application Control ID* is 38569 showing that this entry was triggered by the application sensor *YouTube\_Video.Play*.

Date/Time	Source	Destination	Application Name	Action	Application User	Application Details	Log Details
2019/06/20 16:02:25	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			General
2019/06/20 16:02:25	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Date 2019/06/20
2019/06/20 16:02:25	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Time 16:02:12
2019/06/20 16:02:14	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Session ID 1871
2019/06/20 16:02:14	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Virtual Domain root
2019/06/20 16:02:12	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Source
2019/06/20 16:02:12	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	IP 10.1.100.58
2019/06/20 16:02:12	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Source Port 59786
2019/06/20 16:02:12	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Source Interface %2_Vlan20 (port12)
2019/06/20 16:01:56	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			User
2019/06/20 16:01:56	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Destination
2019/06/20 16:01:54	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	IP 209.52.146.236
2019/06/20 16:01:54	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Port 443
2019/06/20 16:01:54	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Destination Interface %2_Vlan30 (port1)
2019/06/20 16:01:50	10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			URL r1--sn-uaon-tlgr.googlevideo.com/videosplayback?expire=1561093219&as=AAHfXGcAIIQb..AFVWtalsD05mMa-GPPWvFRE9-rok6Zmrs-yYbV6lag-251&source=youtu&requi..uaon-tlgr%2Can-qeeed7dme-aq%2Con6mvm&gl+2..
2019/06/20 16:01:48	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Application Control
2019/06/20 16:01:48	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Sensor g-Clone of g-default
2019/06/20 16:01:39	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Application Name YouTube_Video.Play
2019/06/20 16:01:39	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass		Video Play	ID 38569
2019/06/20 16:01:39	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Category Video/Audio
2019/06/20 16:01:34	10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Risk
2019/06/20 16:01:34	10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Protocol
2019/06/20 16:01:34	10.1.100.58	172.217.3.206 (music.youtube.com)	HTTPSBROWSER	pass			Service
2019/06/20 16:01:26	10.1.100.58	162.125.1.1 (www.dropbox.com)	Dropbox	pass			Application User fsa.jenkins@gmail.com
2019/06/20 16:01:26	10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Cloud Action others
2019/06/20 16:01:26	10.1.100.58	172.217.3.206 (music.youtube.com)	HTTPSBROWSER	pass			Message Video/Audio: YouTube_Video.Play
2019/06/20 16:01:25	10.1.100.90	208.91.114.49 (bbbs2.fortiguard.com)	SSL,SSLv3	pass	SSLv3		Data
2019/06/20 16:01:25	10.1.100.90	208.91.114.49 (bbbs2.fortiguard.com)	SSL	pass			File Name Everlasting God (Chris Tomlin)
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	File Size 527439
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Action pass
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Policy 2
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Level
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Cellular
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Service HTTPS
2019/06/20 16:01:23	10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Other

- Go to *Dashboard > FortiView Applications*.
- In the *FortiView Applications* monitor, double-click *YouTube* to view the drilldown information.
- Select the *Sessions* tab to see all the entries for the videos played. Check the sessions for *YouTube\_Video.Play* with the ID 38569.

Source	Destination	Application Name	Action	Application User	Application Details	Log Details
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			General
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Date 2019/06/20
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Time 16:02:12
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Session ID 1871
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Virtual Domain root
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Source
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			IP 10.1.100.58
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Source Port 59786
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Source Interface %2_Vlan20 (port12)
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			User
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Destination
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	IP 209.52.146.236
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Port 443
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Destination Interface %2_Vlan30 (port1)
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			URL r1--sn-uaon-tlgr.googlevideo.com/videosplayback?expire=1561093219&as=AAHfXGcAIIQb..AFVWtalsD05mMa-GPPWvFRE9-rok6Zmrs-yYbV6lag-251&source=youtu&requi..uaon-tlgr%2Can-qeeed7dme-aq%2Con6mvm&gl+2..
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Application Control
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Sensor g-Clone of g-default
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Application Name YouTube_Video.Play
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			ID 38569
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Category Video/Audio
10.1.100.58	172.217.14.238 (lb-sls.google.com)	YouTube	pass			Risk
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	Protocol
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	Service
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Application User fsa.jenkins@gmail.com
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Cloud Action others
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Message Video/Audio: YouTube_Video.Play
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Data
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass	fsa.jenkins@gmail.com	Video Play: Everlasting God (Chris Tomlin)	File Name Everlasting God (Chris Tomlin)
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube_Video.Play	pass		Video Play	File Size 527439
10.1.100.58	209.52.146.236 (r1--sn-uaon-tlgr.googlevideo.com)	YouTube	pass			Action pass
10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Policy 2
10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Level
10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Cellular
10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Service HTTPS
10.1.100.58	172.217.3.206 (music.youtube.com)	YouTube	pass			Other


## Monitoring network traffic without SSL deep inspection

This example describes how to monitor network traffic for YouTube using FortiView cloud application view without SSL deep inspection.

### To monitor network traffic without SSL deep inspection:

- Create a firewall policy with the following settings.
  - Application Control* is enabled.
  - SSL Inspection* is set to *certificate-inspection*.

- **Log Allowed Traffic** is set to **All Sessions**.

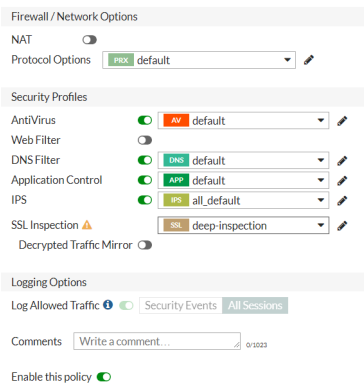

- On the test PC, log into YouTube and play some videos.
- On the FortiGate, go to **Log & Report > Security Events** and look for log entries for browsing and playing YouTube videos in the **Application Control** card.

In this example, the log shows only applications with the name YouTube. The log cannot show YouTube application sensors which rely on SSL deep inspection.


Date/Time	Source	Destination	Application Name	Action	Application User	Application Details	Log Details
2020/04/21 09:40:53	10.1.0.11	38.81.163.83 (3.debian.pool.ntp.org)	NTP	pass			General
2020/04/21 09:40:53	10.1.0.11	50.205.244.107 (1.debian.pool.ntp.org)	NTP	pass			Date 2020/04/21 Time 09:40:37 Session ID 2116087 Virtual Domain root
2020/04/21 09:40:53	10.1.0.11	71.19.144.140 (3.debian.pool.ntp.org)	NTP	pass			Source
2020/04/21 09:40:51	10.1.0.11	23.131.160.7 (0.debian.pool.ntp.org)	NTP	pass			IP 10.1.0.10 Source Port 57840 Source Interface B01_LAN (port3) Device ID FGV-M01TM19004860 User
2020/04/21 09:40:51	10.1.0.11	172.98.193.44 (3.debian.pool.ntp.org)	NTP	pass			Destination
2020/04/21 09:40:51	10.1.0.11	162.159.200.1 (2.debian.pool.ntp.org)	NTP	pass			IP 172.217.214.91 Port 443 Destination Interface Internet_A (port1) Hostname www.youtube.com URL /
2020/04/21 09:40:51	10.1.0.11	199.102.46.77 (0.debian.pool.ntp.org)	NTP	pass			Application Control
2020/04/21 09:40:50	10.1.0.11	198.211.103.209 (0.debian.pool.ntp.org)	NTP	pass			Sensor default Application Name YouTube ID 31077 Category Video/Audio Risk 6 Protocol 6 Service SSL Message Video/Audio: YouTube,
2020/04/21 09:40:39	10.1.0.10	35.186.224.25 (www.spotify.com)	Spotify	pass			Action
2020/04/21 09:40:38	10.1.0.10	52.11.104.17 (www.netflix.com)	Netflix	pass			Action pass Policy 1
2020/04/21 09:40:37	10.1.0.10	172.217.214.91 (www.youtube.com)	YouTube	pass			Security
2020/04/21 09:40:37	10.1.0.10	10.100.77.101	HTTPBROWSER	pass			Level
2020/04/21 09:40:36	10.1.0.10	104.28.13.158 (www.work365apps.com)	HTTPBROWSER	pass			Cellular
2020/04/21 09:40:35	10.1.0.10	104.28.12.158 (www.work365apps.com)	HTTPBROWSER	pass			Service SSL
2020/04/21 09:40:35	10.1.0.10	13.107.42.16 (azure.microsoft.com)	Microsoft.Portals	pass			Other
2020/04/21 09:40:35	10.1.0.10	13.107.42.16 (azure.microsoft.com)	Microsoft.Portals	pass			6818206770077368450
2020/04/21 09:40:35	10.1.0.10	216.115.208.197 (www.gotomeeting.com)	Citrix.Services	pass			
2020/04/21 09:40:35	10.1.0.10	13.107.7.190 (www.office.com)	Microsoft.Office.365.Portals	pass			
2020/04/21 09:40:35	10.1.0.10	13.107.7.190 (www.office.com)	Microsoft.Office.365.Portals	pass			
2020/04/21 09:40:34	10.1.0.10	136.147.40.130 (www.salesforce.com)	Salesforce	pass			
2020/04/21 09:40:34	10.1.0.10	136.147.40.130 (www.salesforce.com)	Salesforce	pass			
2020/04/21 09:40:34	10.1.0.10	66.35.17.243 (fortiguard.com)	HTTPS.BROWSER	pass			
2020/04/21 09:40:33	10.1.0.10	66.35.17.243 (fortiguard.com)	HTTPS.BROWSER	pass			
2020/04/21 09:40:33	10.1.0.10	74.125.124.100 (google.com)	Google.Services	pass			
2020/04/21 09:40:33	10.1.0.10	74.125.124.100 (google.com)	HTTPS.BROWSER	pass			
2020/04/21 09:40:33	10.1.0.10	74.125.124.138 (google.com)	HTTPS.BROWSER	pass			

- Go to **Dashboard > FortiView Applications**.

The **FortiView Application by Bytes** monitor shows the YouTube cloud application without the video played information that requires SSL deep inspection.

5. Double-click *YouTube* and click the *Sessions* tab.

These sessions were triggered by the application sensor *YouTube* with the ID 31077. This is the application sensor with cloud behavior which does not rely on SSL deep inspection.

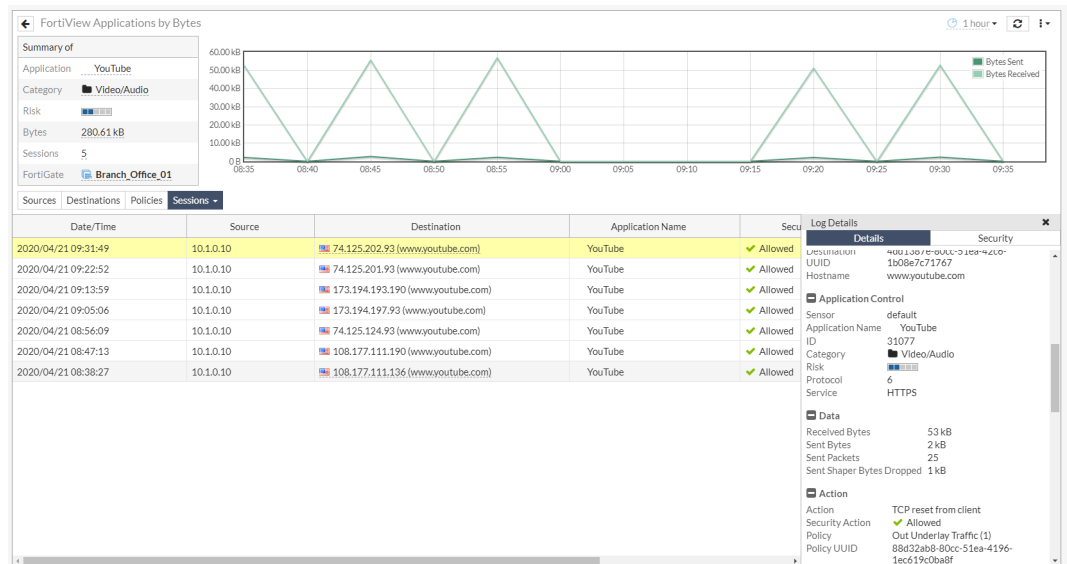



# Network

The following topics provide information about network settings:

- [Interfaces on page 147](#)
- [DNS on page 237](#)
- [Explicit and transparent proxies on page 256](#)
- [SD-WAN on page 626](#)
- [DHCP servers and relays on page 331](#)
- [Static routing on page 347](#)
- [Dynamic routing on page 372](#)
- [Multicast on page 466](#)
- [FortiExtender on page 471](#)
- [Direct IP support for LTE/4G on page 474](#)
- [LLDP reception on page 477](#)
- [Virtual routing and forwarding on page 479](#)
- [NetFlow on page 508](#)
- [sFlow on page 526](#)
- [Link monitor on page 529](#)
- [IPv6 on page 539](#)
- [FortiGate LAN extension on page 611](#)
- [Diagnostics on page 617](#)

## Interfaces

Physical and virtual interfaces allow traffic to flow between internal networks, and between the internet and internal networks. FortiOS has options for configuring interfaces and groups of sub-networks that can scale as your organization grows. The following table lists commonly used interface types.

Interface type	Description
Physical	A physical interface can be connected to with either Ethernet or optical cables. Depending on the FortiGate model, there is a varying number of Ethernet or optical physical interfaces. Some FortiGates have a grouping of interfaces labeled as <i>lan</i> that have a built-in switch functionality. See <a href="#">Physical interface on page 174</a> for more information.
VLAN	A virtual local area network (VLAN) logically divides a local area network (LAN) into distinct broadcast domains using IEEE 802.1Q VLAN tags. A VLAN interface supports VLAN tagging and is associated with a physical interface that can be connected to a device, such as a switch or a router that supports these tags. VLANs can be used on a FortiGate in NAT or transparent mode, and the FortiGate functions differently depending on the operation mode

Interface type	Description
	See <a href="#">VLAN on page 175</a> for more information.
Aggregate	<p>An aggregate interface uses a link aggregation method to combine multiple physical interfaces to increase throughput and to provide redundancy. FortiOS supports a link aggregation (LAG) interface using the Link Aggregation Control Protocol (LACP) based on IEEE 802.3ad.</p> <p>See <a href="#">Aggregation and redundancy on page 191</a> for more information.</p>
Redundant	<p>A redundant interface combines multiple physical interfaces where traffic only uses one of the interfaces at a time. Its primary purpose is to provide redundancy. This interface is typically used with a fully-meshed HA configuration.</p> <p>See <a href="#">Aggregation and redundancy on page 191</a> for more information.</p>
Loopback	<p>A loopback interface is a logical interface that is always up because it has no physical link dependency, and the attached subnet is always present in the routing table. It can be accessed through several physical or VLAN interfaces.</p> <p>See <a href="#">Loopback interface on page 195</a> for more information.</p>
Software switch	<p>A software switch is a virtual switch interface implemented in firmware that allows member interfaces to be added to it. Devices connected to member interfaces communicate on the same subnet, and packets are processed by the FortiGate's CPU. A software switch supports adding a wireless SSID as a member interface.</p> <p>See <a href="#">Software switch on page 195</a> for more information.</p>
Hardware switch	<p>A hardware switch is a virtual switch interface implemented at the hardware level that allows member interfaces to be added to it. Devices connected to member interfaces communicate on the same subnet. A hardware switch relies on specific hardware to optimize processing and supports the Spanning Tree Protocol (STP).</p> <p>See <a href="#">Hardware switch on page 197</a> for more information.</p>
Zone	<p>A zone is a logical group containing one or more physical or virtual interfaces. Grouping interfaces in zones can simplify firewall policy configurations.</p> <p>See <a href="#">Zone on page 201</a> for more information.</p>
Virtual wire pair	<p>A virtual wire pair (VWP) is an interface that acts like a virtual wire consisting of two interfaces, with an interface at each of the wire. No IP addressing is configured on a VWP, and communication is restricted between the two interfaces using firewall policies.</p> <p>See <a href="#">Virtual wire pair on page 203</a> for more information.</p>
FortiExtender WAN extension	<p>A FortiExtender WAN extension is a managed interface that allows a connected FortiExtender to provide WAN connectivity to the FortiGate.</p> <p>See <a href="#">FortiExtender on page 471</a> for more information.</p>
FortiExtender LAN extension	<p>A FortiExtender LAN extension is a managed interface that allows a connected FortiExtender to provide LAN connectivity to the FortiGate.</p> <p>See <a href="#">FortiExtender on page 471</a> for more information.</p>

Interface type	Description
Enhanced MAC VLAN	<p>An enhanced media access control (MAC) VLAN, or EMAC VLAN, interface allows a physical interface to be virtually subdivided into multiple virtual interfaces with different MAC addresses. In FortiOS, the EMAC VLAN functionality acts like a bridge.</p> <p>See <a href="#">Enhanced MAC VLAN on page 210</a> for more information.</p>
VXLAN	<p>A Virtual Extensible LAN (VXLAN) interface encapsulates layer 2 Ethernet frames within layer 3 IP packets and is used for cloud and data center networks.</p> <p>See <a href="#">VXLAN on page 213</a> for more information.</p>
Tunnel	<p>A tunnel virtual interface is used for IPsec interface-based or GRE tunnels and are created when configuring IPsec VPN and GRE tunnels, respectively. The tunnel interface can be configured with IP addresses on both sides of the tunnel since this is a requirement when using a tunnel interface with a dynamic routing protocol.</p> <p>See <a href="#">OSPF with IPsec VPN for network redundancy on page 1704</a>, <a href="#">GRE over IPsec on page 1619</a>, and <a href="#">Cisco GRE-over-IPsec VPN on page 1650</a> for more information.</p>
WiFi SSID	<p>A WiFi SSID interface is used to control wireless network user access to a wireless local radio on a FortiWiFi or to a wireless access point using a FortiAP. The SSID is created using the <i>WiFi &amp; Switch Controller &gt; SSIDs page</i>, and it appears in the <i>Network &gt; Interfaces</i> page once it is created.</p> <p>See <a href="#">Defining a wireless network interface (SSID)</a> in the FortiWiFi and FortiAP Configuration Guide for more information.</p>
VDOM link	<p>A VDOM link allows VDOMs to communicate internally without using additional physical interfaces.</p> <p>See <a href="#">Inter-VDOM routing</a> for more information.</p>

## Interface settings

Administrators can configure both physical and virtual FortiGate interfaces in *Network > Interfaces*. There are different options for configuring interfaces when FortiGate is in NAT mode or transparent mode.

The available options will vary depending on feature visibility, licensing, device model, and other factors. The following list is not comprehensive.

### To configure an interface in the GUI:

1. Go to *Network > Interfaces*.
2. Click *Create New > Interface*.
3. Configure the interface fields:

<b>Interface Name</b>	Physical interface names cannot be changed.
-----------------------	---

<b>Alias</b>	<p>Enter an alternate name for a physical interface on the FortiGate unit. This field appears when you edit an existing physical interface. The alias does not appear in logs.</p> <p>The maximum length of the alias is 25 characters.</p>
<b>Type</b>	The configuration type for the interface, such as VLAN, Software Switch, 802.3ad Aggregate, and others.
<b>Interface</b>	<p>This field is available when <i>Type</i> is set to <i>VLAN</i>.</p> <p>Select the name of the physical interface that you want to add a VLAN interface to. Once created, the VLAN interface is listed below its physical interface in the <i>Interface</i> list.</p> <p>You cannot change the physical interface of a VLAN interface.</p>
<b>VLAN ID</b>	<p>This field is available when <i>Type</i> is set to <i>VLAN</i>.</p> <p>Enter the VLAN ID. The VLAN ID can be any number between 1 and 4094 and must match the VLAN ID added by the IEEE 802.1Q-compliant router or switch that is connected to the VLAN subinterface.</p> <p>The VLAN ID can be edited after the interface is added.</p>
<b>VRF ID</b>	Virtual Routing and Forwarding (VRF) allows multiple routing table instances to coexist on the same router. One or more interface can have a VRF, and packets are only forwarded between interfaces with the same VRF.
<b>Virtual Domain</b>	<p>Select the virtual domain to add the interface to.</p> <p>Only administrator accounts with the <i>super_admin</i> profile can change the <i>Virtual Domain</i>.</p>
<b>Interface Members</b>	<p>This section can have different formats depending on the <i>Type</i>.</p> <p>Members can be selected for some interface types:</p> <ul style="list-style-type: none"> <li>• <i>Software Switch</i> or <i>Hardware Switch</i>: Specify the physical and wireless interfaces joined into the switch.</li> <li>• <i>802.3ad Aggregate</i> or <i>Redundant Interface</i>: This field includes the available and selected interface lists.</li> </ul>
<b>Role</b>	<p>Set the role setting for the interface. Different settings will be shown or hidden when editing an interface depending on the role:</p> <ul style="list-style-type: none"> <li>• <i>LAN</i>: Used to connected to a local network of endpoints. It is default role for new interfaces.</li> <li>• <i>WAN</i>: Used to connected to the internet. When WAN is selected, the <i>Estimated bandwidth</i> setting is available, and the following settings are not: <i>DHCP server</i>, <i>Create address object matching subnet</i>, <i>Device detection</i>, <i>Security mode</i>, <i>One-arm sniffer</i>, <i>Dedicate to extension/fortiap modes</i>, and <i>Admission Control</i>.and will show Estimated Bandwidth settings.</li> <li>• <i>DMZ</i>: Used to connected to the DMZ. When selected, <i>DHCP server</i> and <i>Security mode</i> are not available.</li> <li>• <i>Undefined</i>: The interface has no specific role. When selected, <i>Create address object matching subnet</i> is not available.</li> </ul>
<b>Estimated bandwidth</b>	The estimated WAN bandwidth.

	The values can be entered manually, or saved from a speed test executed on the interface. The values can be used in SD-WAN rules that use the Maximize Bandwidth or Best Quality strategy.
<b>Traffic mode</b>	<p>This option is only available when <i>Type</i> is <i>WiFi SSD</i>.</p> <ul style="list-style-type: none"> <li>• <i>Tunnel</i>: Tunnel to wireless controller</li> <li>• <i>Bridge</i>: Local bridge with FortiAP's interface</li> <li>• <i>Mesh</i>: Mesh downlink</li> </ul>
<b>Address</b>	
<b>Addressing mode</b>	<p>Select the addressing mode for the interface.</p> <ul style="list-style-type: none"> <li>• <i>Manual</i>: Add an IP address and netmask for the interface. If IPv6 configuration is enabled, you can add both an IPv4 and an IPv6 address.</li> <li>• <i>DHCP</i>: Get the interface IP address and other network settings from a DHCP server.</li> <li>• <i>Auto-managed by IPAM</i>: Assign subnets to prevent duplicate IP addresses from overlapping within the same Security Fabric. See <a href="#">Configure IPAM locally on the FortiGate on page 155</a>.</li> <li>• <i>PPPoE</i>: Get the interface IP address and other network settings from a PPPoE server. This option is only available on the low-end FortiGate models.</li> <li>• <i>One-Arm Sniffer</i>: Set the interface as a sniffer port so it can be used to detect attacks. See <a href="#">One-arm sniffer on page 163</a>.</li> </ul>
<b>IP/Netmask</b>	If <i>Addressing Mode</i> is set to <i>Manual</i> , enter an IPv4 address and subnet mask for the interface. FortiGate interfaces cannot have multiple IP addresses on the same subnet.
<b>IPv6 addressing mode</b>	<p>Select the addressing mode for the interface:</p> <ul style="list-style-type: none"> <li>• <i>Manual</i>: Add an IP address and netmask for the interface.</li> <li>• <i>DHCP</i>: Get the interface IP address and other network settings from a DHCP server.</li> <li>• <i>Delegated</i>: Select an <i>IPv6 upstream interface</i> that has DHCPv6 prefix delegation enabled, and enter an <i>IPv6 subnet</i> if needed. The interface will get the IPv6 prefix from the upstream DHCPv6 server that is connected to the IPv6 upstream interface, and form the IPv6 address with the subnet configured on the interface.</li> </ul>
<b>IPv6 Address/Prefix</b>	If <i>Addressing Mode</i> is set to <i>Manual</i> and IPv6 support is enabled, enter an IPv6 address and subnet mask for the interface. A single interface can have an IPv4 address, IPv6 address, or both.
<b>Auto configure IPv6 address</b>	<p>Automatically configure an IPv6 address using Stateless Address Auto-configuration (SLAAC).</p> <p>This option is available when <i>IPv6 addressing mode</i> is set to <i>Manual</i>.</p>
<b>DHCPv6 prefix delegation</b>	Enable/disable DHCPv6 prefix delegation, which can be used to delegate IPv6 prefixes from an upstream DHCPv6 server to another interface or downstream device.

	When enabled, there is an option to enable a <i>DHCPv6 prefix hint</i> that helps the DHCPv6 server provide the desired prefix.
<b>Create address object matching subnet</b>	<p>This option is available and automatically enabled when <i>Role</i> is set to <i>LAN</i> or <i>DMZ</i>.</p> <p>This creates an address object that matches the interface subnet and dynamically updates the object when the IP/Netmask changes.</p> <p>See <a href="#">Interface subnet on page 1166</a> for more information.</p>
<b>Secondary IP Address</b>	Add additional IPv4 addresses to this interface.
<b>Administrative Access</b>	
<b>IPv4 Administrative Access</b>	Select the types of administrative access permitted for IPv4 connections to this interface. See <a href="#">Configure administrative access to interfaces on page 153</a> .
<b>IPv6 Administrative Access</b>	Select the types of administrative access permitted for IPv6 connections to this interface. See <a href="#">Configure administrative access to interfaces on page 153</a> .
<b>DHCP Server</b>	Enable a DHCP server for the interface. See <a href="#">DHCP servers and relays on page 331</a> .
<b>Stateless Address Auto-configuration (SLAAC)</b>	Enable to provide IPv6 addresses to connected devices using SLAAC.
<b>DHCPv6 Server</b>	<p>Select to enable a DHCPv6 server for the interface.</p> <p>When enabled, you can configure <i>DNS service</i> settings: <i>Delegated</i> (delegate the DNS received from the upstream server), <i>Same as System DNS</i>, or <i>Specify</i> (up to four servers).</p> <p>You can also enable <i>Stateful server</i> to configure the DHCPv6 server to be stateful. Manually enter the IP range, or use <i>Delegated</i> mode to delegate IP prefixes from an upstream DHCPv6 server connected to the upstream interface.</p>
<b>Network</b>	
<b>Device Detection</b>	Enable/disable passively gathering device identity information about the devices on the network that are connected to this interface.
<b>Security Mode</b>	Enable/disable captive portal authentication for this interface. After enabling captive portal authentication, you can configure the authentication portal, user and group access, custom portal messages, exempt sources and destinations/services, and redirect after captive portal.
<b>DSL Settings</b>	
<b>Physical mode</b>	Set to <i>ADSL</i> or <i>VDSL</i> .
<b>Transfer mode</b>	<p>Set to <i>PTM</i> or <i>ATM</i>.</p> <p>If the <i>Transfer mode</i> is set to <i>ATM</i>, the <i>Virtual channel identification</i>, <i>Virtual path identification</i>, <i>ATM protocol</i>, and <i>MUX type</i> can be configured.</p>
<b>Traffic Shaping</b>	
<b>Outbound shaping profile</b>	Enable/disable traffic shaping on the interface. This allows you to enforce

bandwidth limits on individual interfaces. See [Interface-based traffic shaping profile on page 1223](#) for more information.

#### Miscellaneous

**Comments** Enter a description of the interface of up to 255 characters.

**Status** Enable/disable the interface.

- *Enabled*: The interface is active and can accept network traffic.
- *Disabled*: The interface is not active and cannot accept traffic.

4. Click **OK**.

### To configure an interface in the CLI:

```
config system interface
  edit <name>
    set vdom <VDM_name>
    set mode {static | dhcp | pppoe}
    set ip <IP_address/netmask>
    set security-mode {none | captive-portal | 802.1X}
    set egress-shaping-profile <profile>
    set device-identification {enable | disable}
    set allowaccess {ping https ssh http snmp telnet fgfm radius-acct probe-response
fabric ftm}
    set eap-supPLICANT {enable | disable}
    set eap-method {peap | tls}
    set eap-identity <identity>
    set eap-password <password>
    set eap-ca-cert <CA_cert>
    set eap-user-cert <user_cert>
    set secondary-IP enable
    config secondaryip
      edit 1
        set ip 9.1.1.2 255.255.255.0
        set allowaccess ping https ssh snmp http
      next
    end
  next
end
```

## Configure administrative access to interfaces

You can configure the protocols that administrators can use to access interfaces on the FortiGate. This helps secure access to the FortiGate by restricting access to a limited number of protocols. It helps prevent users from accessing interfaces that you don't want them to access, such as public-facing ports.

As a best practice, you should configure administrative access when you're setting the IP address for a port.

### To configure administrative access to interfaces in the GUI:

1. Go to **Network > Interfaces**.
2. Create or edit an interface.

3. In the *Administrative Access* section, select which protocols to enable for *IPv4* and *IPv6 Administrative Access*.

<b>Speed Test</b>	<p>Allow this interface to listen to speed test sender requests.</p> <p>To allow the FortiGate to be configured as speed test server, configure the following:</p> <pre>config system global     set speedtest-server {enable   disable} end</pre> <p>For more detail, see <a href="#">Speed tests run from the hub to the spokes in dial-up IPsec tunnels on page 813</a>.</p>
<b>HTTPS</b>	Allow secure HTTPS connections to the FortiGate GUI through this interface. If configured, this option is enabled automatically.
<b>HTTP</b>	Allow HTTP connections to the FortiGate GUI through this interface. This option can only be enabled if HTTPS is already enabled.
<b>PING</b>	The interface responds to pings. Use this setting to verify your installation and for testing.
<b>FMG-Access</b>	Allow FortiManager authorization automatically during the communication exchanges between FortiManager and FortiGate devices.
<b>SSH</b>	Allow SSH connections to the CLI through this interface.
<b>SNMP</b>	Allow a remote SNMP manager to request SNMP information by connecting to this interface.
<b>FTM</b>	Allow FortiToken Mobile Push (FTM) access.
<b>RADIUS Accounting</b>	Allow RADIUS accounting information on this interface.
<b>Security Fabric Connection</b>	Allow Security Fabric access. This enables FortiTelemetry and CAPWAP.

## FEC implementations on 10G, 25G, 40G, and 100G interfaces

Only supported FEC (forward error correction) implementations are allowed to be configured on 10G, 25G, 40G, and 100G interfaces based on the speed that is selected.

- For 1000M, 10G, or 40G interfaces, FEC is not supported and the option is disabled.
- For 25G and 100G interfaces, FEC is automatically set to `cl91-rs-fec` by default.

### To configure an interface for FEC:

```
config system interface
    edit <name>
        set speed {10000full | 1000full | 100Gauto | 100Gfull | 25000auto | 25000full | 40000full}
        set mediatype {sr4 | lr4 | cr4}
        set forward-error-correction {disable | cl91-rs-fec | cl74-fc-fec}
    next
end
```



```
speed {10000full |
      1000full | 100Gauto
      | 100Gfull |
      25000auto |
      25000full |
      40000full}
```

Set the interface speed:

- 10000full: 10G full-duplex
- 1000full: 1000M full-duplex
- 100Gauto: 100G auto-negotiation
- 100Gfull: 100G full-duplex
- 25000auto: 25G auto-negotiation
- 25000full: 25G full-duplex
- 40000full: 40G full-duplex

```
mediatype {sr4 | lr4 |
           cr4}
```

Set the media type to use:

- sr4: short-range transceiver (4-lane)
- lr4: long-range transceiver (4-lane)
- cr4: copper transceiver (4-lane)

```
forward-error-correction
{disable | cl91-rs-
fec | cl74-fc-fec}
```

Set the forward error correction type:

- disable: disable forward error correction
- cl91-rs-fec: Reed-Solomon (FEC CL91)
- cl74-fc-fec: Firecode (FEC CL74)

### To change the interface speed from 40G to 100G:

```
config system interface
    edit port26
        set speed 100Gfull
    next
end
```

The speed/mediatype/FEC of port26 will be changed from 40000full/sr4/disable to 100Gfull/sr4/cl91-rs-fec.


Do you want to continue? (y/n) y

Since the speed changed to 1000G, the `mediatype` setting automatically changes to `sr4`, and the `forward-error-correction` setting automatically changes to `cl91-rs-fec`. When the speed was 40G, the `forward-error-correction` setting was disabled.

## Configure IPAM locally on the FortiGate

IPAM (IP address management) is available locally on the FortiGate. A standalone FortiGate, or a Fabric root in the Security Fabric, can act as the IPAM server. Interfaces configured to be auto-managed by IPAM will receive an address from the IPAM server's address/subnet pool. *DHCP Server* is automatically enabled in the GUI, and the address range is populated by IPAM. Users can customize the address pool subnet and the size of a subnet that an interface can request.

IPAM can be configured on the *Network > IPAM* page using the *IPAM Settings*, *IPAM Rules*, and *IPAM Interfaces* tabs.

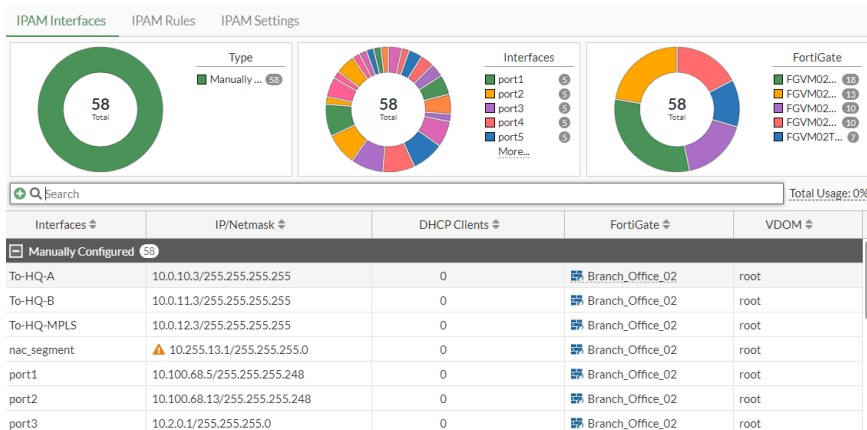

### To configure IPAM settings:

```
config system ipam
    set pool-subnet <class IP and netmask>
    set status {enable | disable}
    config pools
        edit <pool_name>
            set subnet <IP address/netmask>
        next
    end
    config rules
        edit <rule_name>
            set device {<FortiGate_serial_number> | *}
            set interface {<name> | *}
            set pool <pool_name>
        next
    end
end
```

pool-subnet <class IP and netmask>	Set the IPAM pool subnet, class A or class B subnet.
status {enable   disable}	Enable/disable IP address management services.
config pools	Set the subnet for the IP pool.
config rules	Set the device, interface, and IP pool for IPAM rules.


In previous FortiOS versions, the `set fortiipam-integration` option was configured under `config system global`.

The following options are available for allocating the subnet size:

```
config system interface
    set managed-subnetwork-size {32 | 64 | 128 | 256 | 512 | 1024 | 2048 | 4096 | 8192 | 16384 | 32768 | 65536}
end
```

## Example

In this example, FGT\_AA is the Security Fabric root with IPAM enabled. FGT\_BB and FGT\_CC are downstream Fabric devices and retrieve IPAM information from FGT\_AA. The Fabric interface on all FortiGates is port2. FGT\_AA acts as the DHCP server, and FGT\_BB acts as the DHCP client.

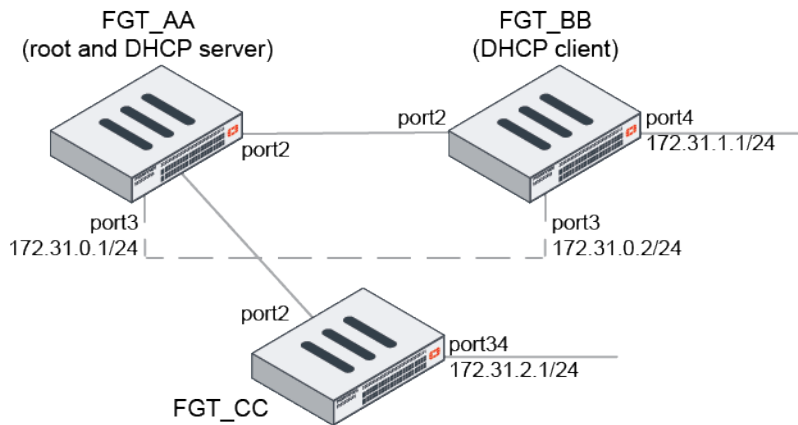

### To configure IPAM locally in the Security Fabric:

1. On the root FortiGate, go to *Network > Interfaces* and edit port3.
2. For *Addressing Mode*, select *Auto-Managed by IPAM*. *DHCP Server* is automatically enabled.

**Edit Interface**

Name: port3

Alias:

Type: Physical Interface

VRF ID: 0

Virtual domain: root

Role: Undefined

**Address**

Addressing mode: Manual DHCP **Auto-managed by IPAM** One-Arm Sniffer

⚠ IPAM is not enabled. Enable IPAM

IP/Netmask: Not allocated

Network size: 256 (255.255.255.0)

ℹ IPAM will allocate an IP subnet with the selected size.

**Administrative Access**

IPv4: ☐ HTTPS ☐ HTTP ☐ PING ☐ FMG-Access ☐ SSH ☐ SNMP ☐ FTM ☐ RADIUS Accounting ☐ Security Fabric Connection ☐ Speed Test

Receive LLDP: Use VDOM Setting Enable Disable

**DHCP Server**

DHCP status: **Enabled** Disabled

Address range: Not allocated

Netmask: 0.0.0.0

Default gateway: Same as Interface IP Specify

DNS server: Same as System DNS Same as Interface IP Specify

Lease time: 604800 second(s)

FortiGate: FGT\_AA


Status: Up

MAC address:


Additional Information: API Preview References Edit in CLI

Documentation: Online Help Video Tutorials

3. In this example, IPAM is not enabled yet. Click *Enable IPAM*. The *Subnets Managed by IPAM* pane opens.

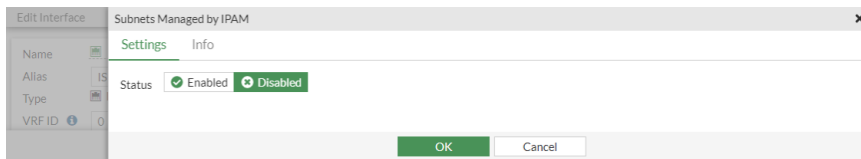

4. Select *Enabled*, enter the *Pool subnet* (only class A and B are allowed) and click *OK*. The root FortiGate is now the IPAM server in the Security Fabric.

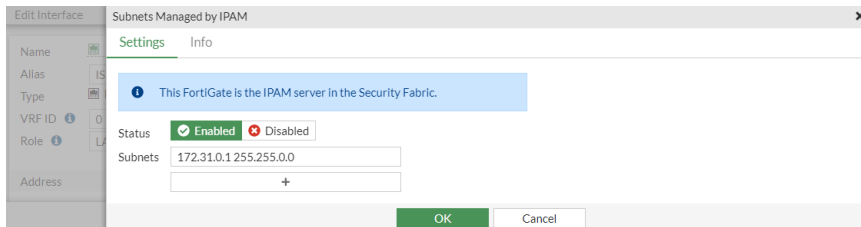

The following is configured in the backend:

```
config system interface
    edit "port3"
        set vdom "root"
        set ip 172.31.0.1 255.255.0.0
        set type physical
        set device-identification enable
        set snmp-index 5
        set ip-managed-by-fortiipam enable
    end
next
end

config system ipam
    set status enable
end
```

IPAM is managing a 172.31.0.0/16 network and assigned port3 a /24 network by default.

The *IP/Netmask* field in the *Address* section has been automatically assigned a class C IP by IPAM. The *Address range* and *Netmask* fields in the *DHCP Server* section have also been automatically configured by IPAM.

**Edit Interface**

Name: port3  
 Alias:   
 Type: Physical Interface  
 VRF ID: 0  
 Virtual domain: root  
 Role: Undefined

**Address**  
 Addressing mode: Manual DHCP **Auto-managed by IPAM** One-Arm Sniffer  
 IP/Netmask: 172.31.0.1/255.255.255.0  
 Network size: 256 (255.255.255.0)

**Administrative Access**  
 IPv4: ☐ HTTPS ☐ HTTP ☐ PING  
☐ FMG-Access ☐ SSH ☐ SNMP  
☐ FTM ☐ RADIUS Accounting ☐ Security Fabric Connection  
☐ Speed Test  
 Receive LLDP: **Use VDOM Setting** Enable Disable

**DHCP Server**  
 DHCP status: **Enabled** Disabled  
 Address range: 172.31.0.1-172.31.0.254  
 Netmask: 255.255.255.0  
 Default gateway: **Same as Interface IP** Specify  
 DNS server: **Same as System DNS** Same as Interface IP Specify  
 Lease time: 604800 second(s)

**FortiGate**  
 FGT\_AA  
 Status: Up  
 MAC address:   
 Additional Information: API Preview, References, Edit in CLI  
 Documentation: Online Help, Video Tutorials


5. Click **OK**.
6. Log in to FGT-BB and set the *Addressing Mode* of port4 to *Auto-Managed by IPAM*. The subnet assigned from the pool on the root is 172.31.1.1/24.
7. Log in to FG\_CC and set the *Addressing Mode* of port34 to *Auto-Managed by IPAM*. The subnet assigned from the pool on the root is 172.31.2.1/24.



Any interface on a downstream FortiGate can be managed by the IPAM server. The interface does not have to be directly connected to the Fabric root FortiGate.

### To edit the IPAM subnet:

1. Go to *Network > IPAM > IPAM Settings*.
2. Edit the pool subnet if needed.

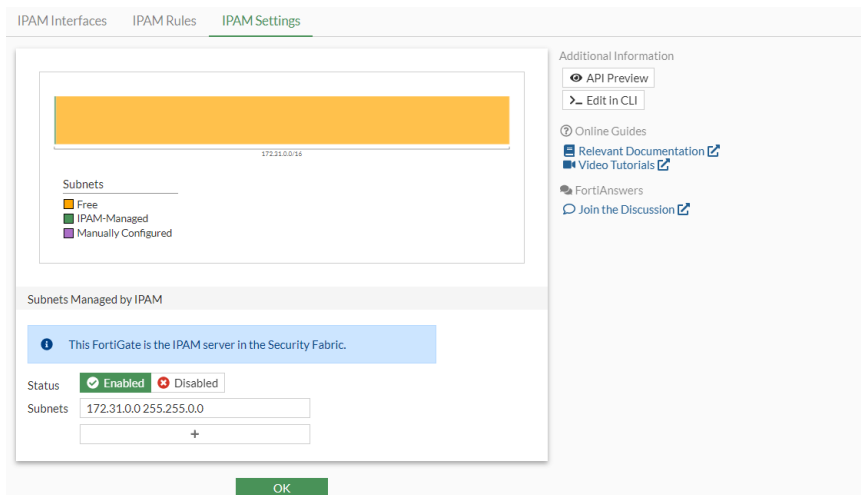

3. Click **OK**.

On downstream FortiGates, the settings on the *Network > IPAM > IPAM Settings* tab cannot be changed if IPAM is enabled on the root FortiGate.




Go to *Network > IPAM > IPAM Interfaces* to view the subnet allocations (port34, port3, and port3) and DHCP lease information. On FGT\_BB, port3 is a DHCP client and the DHCP server interface (FGT\_AA port3) is managed by IPAM, so it is displayed in the *Manually Configured* section.

## IPAM conflict markers

The *IPAM Interfaces* tab displays conflict markers when there are IP pool IP address conflicts with manually configured IP addresses. Administrators can use the *Edit Interface* dialog to manually resolve the conflict.

### To resolve conflicts in the GUI:

1. Go to *Network > IPAM > IPAM Interfaces*.
2. Hover your mouse over the conflict marker. The conflict marker information is displayed.

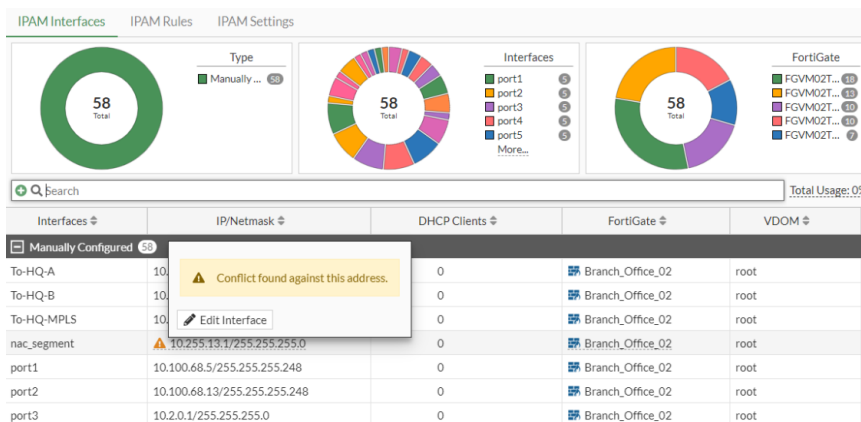

3. Click **Edit Interface**. The *Edit Interface* pane opens.

4. Enter a new IP address and netmask in the *IP/Netmask* field.
5. Click **OK**. A confirmation message is displayed.
6. Click **OK**.

## Diagnostics

Use the following commands to view IPAM related diagnostics.

### To view the largest available subnet size:

```
# diagnose sys ipam largest-available-subnet
Largest available subnet is a /17.
```

### To verify IPAM allocation information:

```
# diagnose sys ipam dump-ipams-entries
IPAM Entries: (sn, vdom, interface, subnet/mask, flag)
F140EP4Q17000000 root port34 172.31.2.1/24 0
FG5H1E5818900001 root port3 172.31.0.1/24 0
FG5H1E5818900002 root port4 172.31.1.1/24 0
FG5H1E5818900003 root port3 172.31.0.2/24 1
```

### To verify the available subnets:

```
# diagnose sys ipam dump-ipams-free-subnets
IPAM free subnets: (subnet/mask)
172.31.3.0/24
172.31.4.0/22
172.31.8.0/21
172.31.16.0/20
172.31.32.0/19
172.31.64.0/18
172.31.128.0/17
```

**To remove a device from IPAM in the Security Fabric:**

```
# diagnose sys ipam delete-device-from-ipams F140EP4Q17000000
Successfully removed device F140EP4Q17000000 from ipam
```

**Interface MTU packet size**

Changing the maximum transmission unit (MTU) on FortiGate interfaces changes the size of transmitted packets. Most FortiGate device's physical interfaces support jumbo frames that are up to 9216 bytes, but some only support 9000 or 9204 bytes.

To avoid fragmentation, the MTU should be the same as the smallest MTU in all of the networks between the FortiGate and the destination. If the packets sent by the FortiGate are larger than the smallest MTU, then they are fragmented, slowing down the transmission. Packets with the DF flag set in the IPv4 header are dropped and not fragmented.

On many network and endpoint devices, the path MTU is used to determine the smallest MTU and to transmit packets within that size.

- ASIC accelerated FortiGate interfaces, such as NP6, NP7, and SOC4 (np6xlite), support MTU sizes up to 9216 bytes.
- FortiGate VMs can have varying maximum MTU sizes, depending on the underlying interface and driver.
- Virtual interfaces, such as VLAN interfaces, inherit their MTU size from their parent interface.

**To verify the supported MTU size:**

```
config system interface
    edit <interface>
        set mtu-override enable
        set mtu <integer>
    next
end
```

**To change the MTU size:**

```
config system interface
    edit <interface>
        set mtu-override enable
        set mtu <max bytes>
    next
end
```

**Maximum MTU size on a path**

To manually test the maximum MTU size on a path, you can use the ping command on a Windows computer.

For example, you can send ICMP packets of a specific size with a DF flag, and iterate through increasing sizes until the ping fails.

- The `-f` option specifies the Do not Fragment (DF) flag.
- The `-l` option specifies the length, in bytes, of the Data field in the echo Request messages. This does not include the 8 bytes for the ICMP header and 20 bytes for the IP header. Therefore, if the maximum MTU is 1500 bytes, then the maximum supported data size is:  $1500 - 8 - 20 = 1472$  bytes.



**To determine the maximum MTU size on a path:**

1. In Windows command prompt, try a likely MTU size:

```
>ping 4.2.2.1 -l 1472 -f
Pinging 4.2.2.1 with 1472 bytes of data:
Reply from 4.2.2.1: bytes=1472 time=41ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=42ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=103ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=38ms TTL=52

Ping statistics for 4.2.2.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 38ms, Maximum = 103ms, Average = 56ms
```

2. Increase the size and try the ping again:

```
>ping 4.2.2.1 -l 1473 -f
Pinging 4.2.2.1 with 1473 bytes of data:
Request timed out.

Ping statistics for 4.2.2.1:
    Packets: Sent = 1, Received = 0, Lost = 1 (100% loss),
```

The second test fails, so the maximum MTU size on the path is 1472 bytes + 8-byte ICMP header + 20-byte IP header = 1500 bytes

**Maximum segment size**

The TCP maximum segment size (MSS) is the maximum amount of data that can be sent in a TCP segment. The MSS is the MTU size of the interface minus the 20 byte IP header and 20 byte TCP header. By reducing the TCP MSS, you can effectively reduce the MTU size of the packet.

The TCP MSS can be configured in a firewall policy (see [Configurations in the CLI on page 1042](#)), or directly on an interface.

**To configure the MSS on an interface:**

```
config system interface
    edit "wan2"
        set vdom "root"
        set mode dhcp
        set allowaccess ping fgfm
        set type physical
        set tcp-mss 1448
        set role wan
    next
end
```

**One-arm sniffer**

You can use a one-arm sniffer to configure a physical interface as a one-arm intrusion detection system (IDS). Traffic sent to the interface is examined for matches to the configured security profile. The matches are logged, and then all received traffic is dropped. Sniffing only reports on attacks; it does not deny or influence traffic.

You can also use the one-arm sniffer to configure the FortiGate to operate as an IDS appliance to sniff network traffic for attacks without actually processing the packets. To configure a one-arm IDS, enable sniffer mode on a physical interface and connect the interface to the SPAN port of a switch or a dedicated network tap that can replicate the traffic to the FortiGate.

If the one-arm sniffer option is not available, this means the interface is in use. Ensure that the interface is not selected in any firewall policies, routes, virtual IPs, or other features where a physical interface is specified. The option also does not appear if the role is set to WAN. Ensure the role is set to LAN, DMZ, or undefined.

The following table lists some of the one-arm sniffer settings you can configure:

Field	Description
<b>Security Profiles</b>	<p>The following profiles are configurable in the GUI and CLI:</p> <ul style="list-style-type: none"> <li>• Antivirus</li> <li>• Web filter</li> <li>• Application control</li> <li>• IPS</li> <li>• File filter</li> </ul> <p>The following profiles are only configurable in the CLI:</p> <ul style="list-style-type: none"> <li>• Email filter</li> <li>• DLP</li> <li>• IPS DoS</li> </ul>



Each security profile has a predefined profile for *One-Arm Sniffer* called *sniffer-profile*. The *sniffer-profile* can be viewed or edited from the GUI through the *Edit Interface* page only. Please refer to the [Example configuration on page 164](#) for a demonstration.

## CPU usage and packet loss

Traffic scanned on the one-arm sniffer interface is processed by the CPU, even if there is an SPU, such as NPU or CP, present. The one-arm sniffer may cause higher CPU usage and perform at a lower level than traditional inline scanning, which uses NTurbo or CP to accelerate traffic when present.

The absence of high CPU usage does not indicate the absence of packet loss. Packet loss may occur due to the capacity of the TAP devices hitting maximum traffic volume during mirroring, or on the FortiGate when the kernel buffer size is exceeded and it is unable to handle bursts of traffic.

## Example configuration

The following example shows how to configure a file filter profile that blocks PDF and RAR files used in a one-arm sniffer policy.

### To configure a one-arm sniffer policy in the GUI:

1. Go to *Network > Interfaces* and double-click a physical interface to edit it.
2. For *Role*, select either *LAN*, *DMZ*, or *Undefined*.
3. For *Addressing Mode*, select *One-Arm Sniffer*.

**Edit Interface**

Name:

Alias:

Type:

VRF ID:

Role:

☒ Dedicated Management Port

**Address**

Addressing mode:

**Security Profiles**

AntiVirus: ☒

Web Filter: ☒

Application Control sensor: ☒

IPS: ☒

File Filter: ☒

**Logging Options**

Log allowed traffic: ☒

**Network**

Device detection: ☒

**Traffic Shaping**

**FortiGate**

Status: ☒ Up

MAC address:

**Additional Information**

**Documentation**

4. In the *Security Profiles* section, enable *File Filter* and click *Edit*. The *Edit File Filter Profile* pane opens.
5. In the *Rules* table, click *Create New*.

Edit Interface

Name

Alias

TypePhysical Interface

VRF ID0

RoleUndefined

Dedicated Management Port

Address

Addressing modeManual DHCP Auto-manage

Security Profiles

AntiVirus

Web Filter

Application Control sensor

IPS

File Filter

Logging Options

Log allowed traffic

Network

Device detection

Traffic Shaping

Edit File Filter Profile

Name

CommentsFile type inspection.

Scan archive contents

Rules

+ Create New

Edit

Delete

Search

Rule	Comments	Traffic	Protocols	Match Files	Action	File Types
No results						

OKCancel

6. Configure the rule:
  - a. For *File types*, click the + and select *pdf* and *rar*.
  - b. For *Action*, select *Block*.
  - c. Click *OK* to save the rule.
7. Click *OK* to save the file filter profile.

FortiOS 7.2.6 Administration Guide  
Fortinet Inc.

166

Edit Interface

Name

Alias

TypePhysical Interface

VRF ID0

RoleUndefined

Dedicated Management Port

Address

Addressing modeManual DHCP Auto-manage

Security Profiles

AntiVirus

Web Filter

Application Control sensor

IPS

File Filter

Logging Options

Log allowed trafficSecurity Events All Sessions

Network

Device detection

Traffic Shaping

Edit File Filter Profile

Name

CommentsFile type inspection. 21/255

Scan archive contents

Rules

+ Create New

Edit

Delete

Search

Q

Rule	Comments	Traffic	Protocols	Match Files	Action	File Types
file		Both	CIFS FTP +4	Any	Block	pdf rar

OK Cancel

- Click **OK** to save the interface settings.
- Go to **Log & Report > Security Events** to view the *File Filter* logs.

Date/Time	Service	Action	URL	File Name	Matched file name	File Type	Matched file type	Filter Name
9 minutes ago	FTP	passthrough		hello2.pdf		pdf		file
10 minutes ago	FTP	passthrough		test.rar		rar		file

### To configure a one-arm sniffer policy in the CLI:

- Configure the interface:

```

config system interface
    edit "s1"
        set vdom "root"
        set ips-sniffer-mode enable
        set type physical
        set role undefined
        set snmp-index 31
    next
end

```

- Configure the file filter profile:

```

config file-filter profile
    edit "sniffer-profile"
        set comment "File type inspection."
        config rules
            edit "1"
                set protocol http ftp smtp imap pop3 cifs
            next
        next
    next
end

```

```
        set action block
        set file-type "pdf" "rar"
    next
end
next
end
```

### 3. Configure the firewall sniffer policy:

```
config firewall sniffer
    edit 1
        set interface "s1"
        set file-filter-profile-status enable
        set file-filter-profile "sniffer-profile"
    next
end
```

### 4. View the log:

```
# execute log filter category 19
# execute log display
1 logs found.
1 logs returned.
```

```
1: date=2020-12-29 time=09:14:46 eventtime=1609262086871379250 tz="-0800"
logid="1900064000" type="utm" subtype="file-filter" eventtype="file-filter"
level="warning" vd="root" policyid=1 sessionid=792 srcip=172.16.200.55 srcport=20
srcintf="s1" srcintfrole="undefined" dstip=10.1.100.11 dstport=56745 dstintf="s1"
dstintfrole="undefined" proto=6 service="FTP" profile="sniffer-profile"
direction="outgoing" action="blocked" filtername="1" filename="hello.pdf" filesize=9539
filetype="pdf" msg="File was blocked by file filter."
```

## Interface migration wizard

The *Integrate Interface* option on the *Network > Interfaces* page helps migrate a physical port into another interface or interface type such as aggregate, software switch, redundant, zone, or SD-WAN zone. The FortiGate will migrate object references either by replacing the existing instance with the new interface, or deleting the existing instance based on the user's choice. Users can also change the VLAN ID of existing VLAN sub-interface or FortiSwitch VLANs.



The interface migration wizard does not support turning an aggregate, software switch, redundant, zone, or SD-WAN zone interface back into a physical interface.

---

## Integrating an interface

In this example, a DHCP server interface is integrated into a newly created redundant interface, which transfers the DHCP server to a redundant interface.



### To integrate an interface:

1. Go to *Network > Interfaces* and select an interface in the list.
2. Click *Integrate Interface*. The wizard opens.





Alternatively, select an interface in the list. Then right-click and select *Integrate Interface*.

3. Select *Migrate to Interface* and click *Next*.

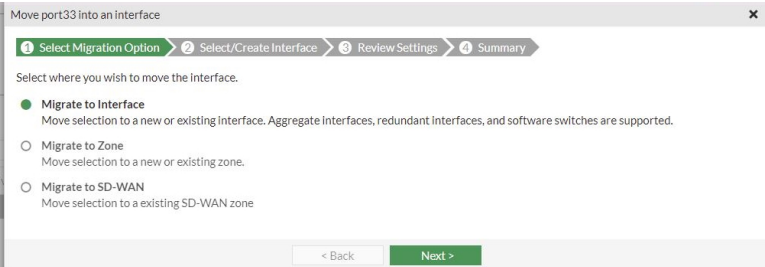
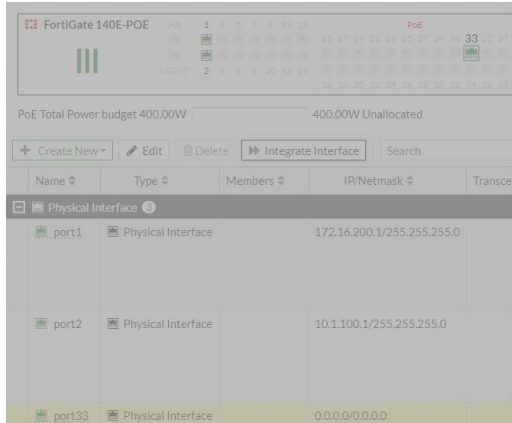


4. Select *Create an Interface*. Enter a name (*rd1*) and set the *Type* to *Redundant*.

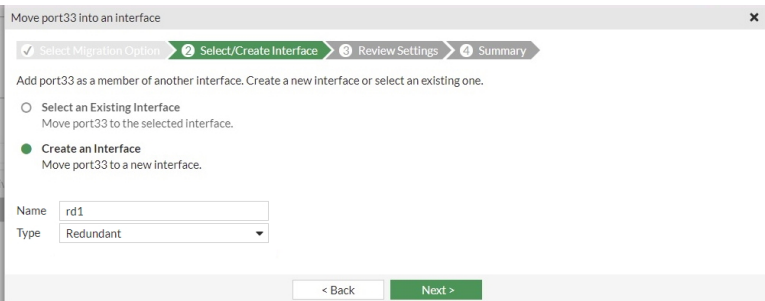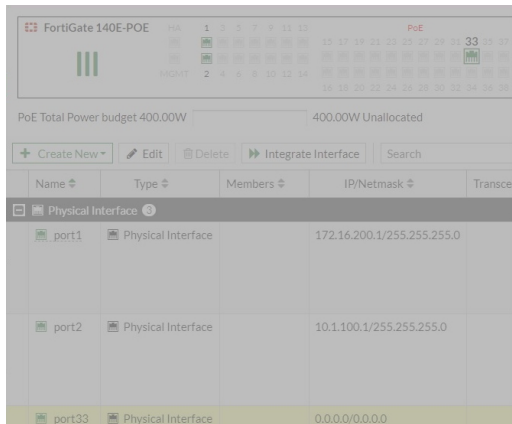


5. Click *Next*. The *References* section lists the associated services with options to *Replace Instance* or *Delete Entry*.

6. For the DHCP server *Action*, select *Replace Instance* and click *Create*.

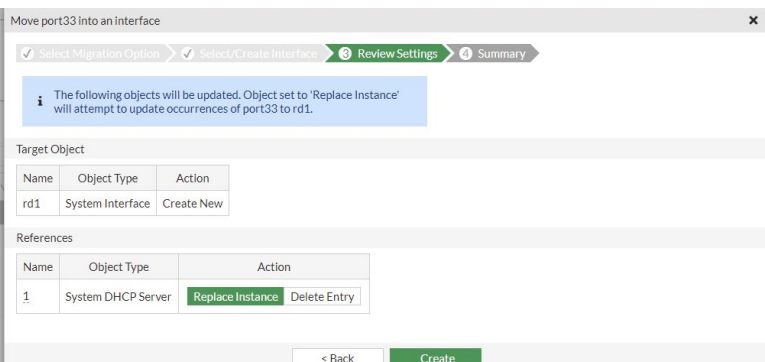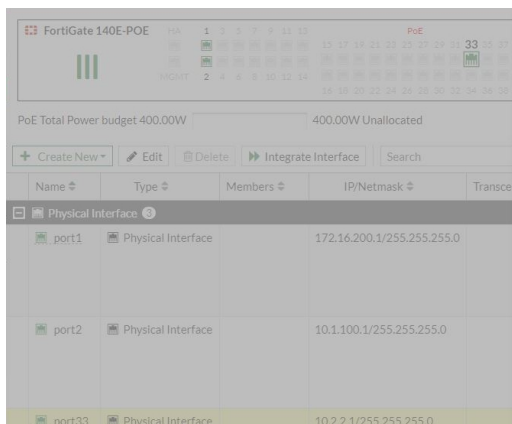

7. The migration occurs automatically and the statuses for the object and reference change to *Updated entry*. Click *Close*.

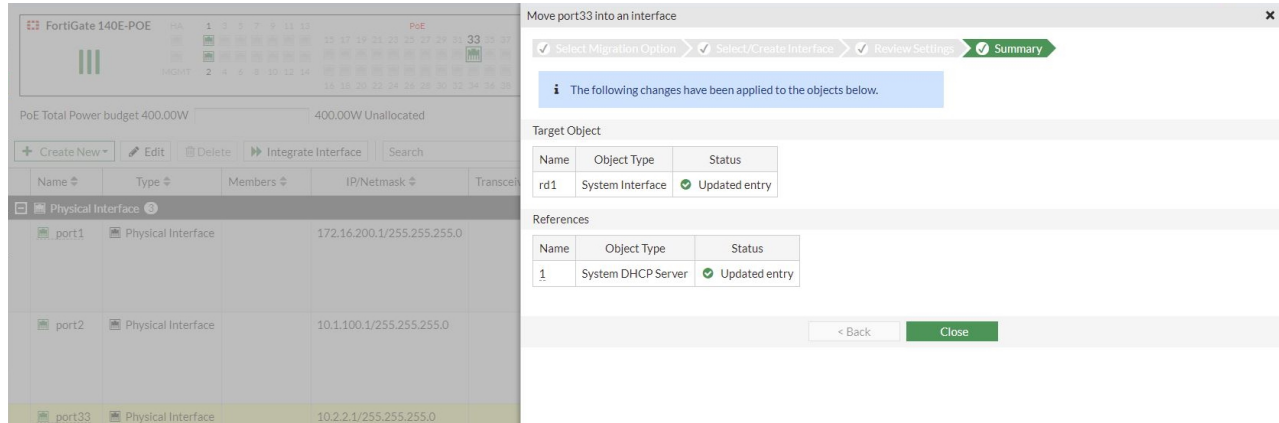


## Changing the VLAN ID

In this example, the VLAN ID of *Internal/VLAN* is changed from 11 to 22.

**To change the VLAN ID:**

1. Go to *Network > Interfaces* and edit an existing interface.
2. Beside the *VLAN ID* field, click *Edit*. The *Update VLAN ID* window opens.

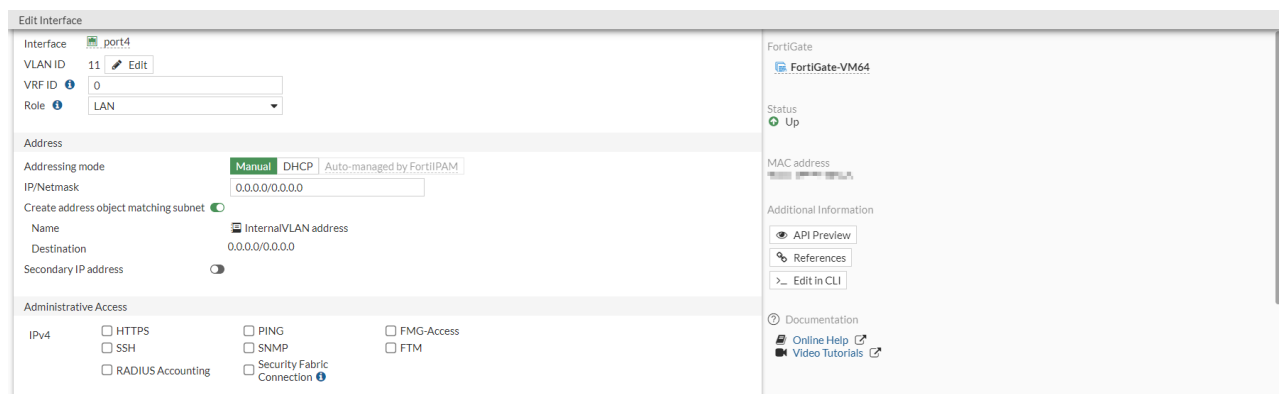

3. Enter the new ID (22) and click *Next*.



Edit Interface

Name: InternalVLAN
Alias:
Type: VLAN
Interface: port14
VLAN ID: 11 Edit
VRF ID: 0
Role: LAN

Addressing mode: Manual DHCP Auto-managed by FortiIPAM
IP/Netmask: 0.0.0.0/0.0.0.0
Create address object matching subnet: ☒
Name: InternalVLAN address
Destination: 0.0.0.0/0.0.0.0
Secondary IP address: ☐

Administrative Access
IPv4:
☐ HTTPS ☐ PING ☐ FMG-Access
☐ SSH ☐ SNMP ☐ FTM
☐ RADIUS Accounting ☐ Security Fabric Connection

Update VLAN ID

Update VLAN ID Review Settings Summary

VLAN ID: 22

< Back Next >

4. Verify the changes, then click *Update* and *OK*.

Edit Interface

Name: InternalVLAN
Alias:
Type: VLAN
Interface: port14
VLAN ID: 11 Edit
VRF ID: 0
Role: LAN

Addressing mode: Manual DHCP Auto-managed by FortiIPAM
IP/Netmask: 0.0.0.0/0.0.0.0
Create address object matching subnet: ☒
Name: InternalVLAN address
Destination: 0.0.0.0/0.0.0.0
Secondary IP address: ☐

Administrative Access
IPv4:
☐ HTTPS ☐ PING ☐ FMG-Access
☐ SSH ☐ SNMP ☐ FTM
☐ RADIUS Accounting ☐ Security Fabric Connection

Update VLAN ID

Update VLAN ID Review Settings Summary

Target Object

Name	Object Type	Action
InternalVLAN	System Interface	Edit

References

Name	Object Type	Action
InternalVLAN address	Address	No changes

< Back Update

5. The target object status changes to *Updated entry*. Click *Close*.

Edit Interface

Name: InternalVLAN
Alias:
Type: VLAN
Interface: port14
VLAN ID: 11 Edit
VRF ID: 0
Role: LAN

Addressing mode: Manual DHCP Auto-managed by FortiIPAM
IP/Netmask: 0.0.0.0/0.0.0.0
Create address object matching subnet: ☒
Name: InternalVLAN address
Destination: 0.0.0.0/0.0.0.0
Secondary IP address: ☐

Administrative Access
IPv4:
☐ HTTPS ☐ PING ☐ FMG-Access
☐ SSH ☐ SNMP ☐ FTM
☐ RADIUS Accounting ☐ Security Fabric Connection

Update VLAN ID

Update VLAN ID Review Settings Summary

The following changes have been applied to the objects below.

Target Object

Name	Object Type	Status
InternalVLAN	System Interface	Updated entry

References

Name	Object Type	Status
InternalVLAN address	Address	No changes

< Back Close

In the interface settings, the ID displays as 22.

**Edit Interface**

Name: InternalVLAN  
 Alias:   
 Type: VLAN  
 Interface: port4  
 VLAN ID: 22  
 VRF ID: 0  
 Role: LAN

**Address**

Addressing mode: Manual DHCP Auto-managed by FortiIPAM  
 IP/Netmask: 0.0.0.0/0.0.0.0  
 Create address object matching subnet: ☒  
 Name: InternalVLAN address  
 Destination: 0.0.0.0/0.0.0.0  
 Secondary IP address: ☐

**Administrative Access**

IPv4: ☐ HTTP ☐ PING ☐ FMG-Access  
☐ SSH ☐ SNMP ☐ FTM  
☐ RADIUS Accounting ☐ Security Fabric Connection

**FortiGate**  
 FortiGate-VM64  
 Status: Up  
 MAC address:   
 Additional Information:   
 API Preview   
 References   
 Edit in CLI   
 Documentation   
 Online Help   
 Video Tutorials

## Captive portals

A captive portal is used to enforce authentication before web resources can be accessed. Until a user authenticates successfully, any HTTP request returns the authentication page. After successfully authenticating, a user can access the requested URL and other web resources, as permitted by policies. The captive portal can also be configured to only allow access to members of specific user groups.

Captive portals can be hosted on the FortiGate or an external authentication server. They can be configured on any network interface, including VLAN and WiFi interfaces. On a WiFi interface, the access point appears open, and the client can connect to access point with no security credentials, but then sees the captive portal authentication page. See [Captive Portal Security](#), in the [FortiWiFi and FortiAP Configuration Guide](#) for more information.

All users on the interface are required to authenticate. Exemption lists can be created for devices that are unable to authenticate, such as a printer that requires access to the internet for firmware upgrades.

### To configure a captive portal in the GUI:

1. Go to **Network > Interfaces** and edit the interface that the users connect to. The interface *Role* must be *LAN* or *Undefined*.
2. Enable *Security mode*.

**Edit Interface**

**Network**

Device detection: ☒  
 Explicit web proxy: ☐  
 Explicit FTP proxy: ☐  
 Security mode: ☒ Captive Portal  
 Authentication portal: Local External  
 User access: Restricted to Groups Allow all  
 Customize portal messages: ☐  
 Exempt sources:   
 Exempt destinations/services:   
 Redirect after Captive Portal: Original Request Specific URL

**Status**  
 Up  
 MAC address: e8:1c:ba:18:f6:0a  
 Additional Information:   
 API Preview   
 References   
 Edit in CLI   
 Documentation   
 Online Help   
 Video Tutorials

OK Cancel

3. Configure the following settings, then click **OK**.

#### Authentication Portal

Configure the location of the portal:

- *Local*: the portal is hosted on the FortiGate unit.

	<ul style="list-style-type: none"> <li>• <i>External</i>: enter the FQDN or IP address of external portal.</li> </ul>
<b>User access</b>	<p>Select if the portal applies to all users, or selected user groups:</p> <ul style="list-style-type: none"> <li>• <i>Restricted to Groups</i>: restrict access to the selected user groups. The <i>Login page</i> is shown when a user tries to log in to the captive portal.</li> <li>• <i>Allow all</i>: all users can log in, but access will be defined by relevant policies. The <i>Disclaimer page</i> is shown when a user tried to log in to the captive portal.</li> </ul>
<b>Customize portal messages</b>	<p>Enable to use custom portal pages, then select a replacement message group. See <a href="#">Custom captive portal pages on page 174</a>.</p>
<b>Exempt sources</b>	<p>Select sources that are exempt from the captive portal.</p> <p>Each exemption is added as a rule in an automatically generated exemption list.</p>
<b>Exempt destinations/services</b>	<p>Select destinations and services that are exempt from the captive portal.</p> <p>Each exemption is added as a rule in an automatically generated exemption list.</p>
<b>Redirect after Captive Portal</b>	<p>Configure website redirection after successful captive portal authentication:</p> <ul style="list-style-type: none"> <li>• <i>Original Request</i>: redirect to the initially browsed to URL .</li> <li>• <i>Specific URL</i>: redirect to the specified URL.</li> </ul>

## To configure a captive portal in the CLI:

### 1. If required, create a security exemption list:

```
config user security-exempt-list
  edit <list>
    config rule
      edit 1
        set srcaddr <source(s)>
        set dstaddr <source(s)>
        set service <service(s)>
      next
      edit 2
        set srcaddr <source(s)>
        set dstaddr <source(s)>
        set service <service(s)>
      next
    end
  next
end
```

### 2. Configure captive portal authentication on the interface:

```
config system interface
  edit <interface>
    set security-mode {none | captive-portal}
    set security-external-web <string>
    set replacemsg-override-group <group>
    set security-redirect-url <string>
    set security-exempt-list <list>
    set security-groups <group(s)>
  end
end
```

```

    next
end

```

## Custom captive portal pages

Portal pages are HTML files that can be customized to meet user requirements.

Most of the text and some of the HTML in the message can be changed. Tags are enclosed by double percent signs (%%); most of them should not be changed because they might carry information that the FortiGate unit needs. For information about customizing replacement messages, see [Modifying replacement messages on page 2485](#).

The images on the pages can be replaced. For example, your organization's logo can replace the Fortinet logo. For information about uploading and using new images in replacement messages, see [Replacement message images on page 2486](#).

The following pages are used by captive portals:

<b>Login Page</b>	Requests user credentials. The %%QUESTION%% tag provides the <i>Please enter the required information to continue.</i> text. This page is shown to users that are trying to log in when <i>User access</i> is set to <i>Restricted to Groups</i> .
<b>Login Failed Page</b>	Reports that incorrect credentials were entered, and requests correct credentials. The %%FAILED_MESSAGE%% tag provides the <i>Firewall authentication failed. Please try again.</i> text.
<b>Disclaimer Page</b>	A statement of the legal responsibilities of the user and the host organization that the user must agree to before proceeding. This page is shown users that are trying to log in when <i>User access</i> is set to <i>Allow all</i> .
<b>Declined Disclaimer Page</b>	Shown if the user does not agree to the statement on the Disclaimer page. Access is denied until the user agrees to the disclaimer.

## Physical interface

A FortiGate has several physical interfaces that can connect to Ethernet or optical cables. Depending on the FortiGate model, it can have a varying combination of Ethernet, small form-factor pluggable (SFP), and enhanced small form-factor pluggable (SFP+) interfaces.

The port names, as labeled on the FortiGate, appear in the interfaces list on the *Network > Interfaces* page. Hover the cursor over a port to view information, such as the name and the IP address.

Refer to [Configuring an interface](#) for basic GUI and CLI configuration steps.

## Displaying transceiver status information for SFP and SFP+ interfaces

Transceiver status information for SFP and SFP+ interfaces installed on the FortiGate can be displayed in the GUI and CLI. For example, the type, vendor name, part number, serial number, and port name. The CLI output includes additional information that can be useful for diagnosing transmission problems, such as the temperature, voltage, and optical transmission power.

### To view transceiver status information in the GUI:

1. Go to **Network > Interfaces**. The *Transceiver* column is visible in the table, which displays the transceiver vendor name and part number.
2. Hover the cursor over a transceiver to view more information.

### To view transceiver status information in the CLI:

```
# get system interface transceiver
Interface port9 - SFP/SFP+
  Vendor Name   : FINISAR CORP.
  Part No.      : FCLF-8521-3
  Serial No.    : PMS***
Interface port10 - Transceiver is not detected.
Interface port11 - SFP/SFP+
  Vendor Name   : QNC
  Part No.      : LCP-1250RJ3SRQN
  Serial No.    : QNDT****
Interface port12 - SFP/SFP+
  Vendor Name   : QNC
  Part No.      : LCP-1250RJ3SRQN
  Serial No.    : QNDT****
Interface s1 - SFP/SFP+
  Vendor Name   : JDSU
  Part No.      : PLRXPLSCS4322N
  Serial No.    : CB26U****
Interface s2 - SFP/SFP+
  Vendor Name   : JDSU
  Part No.      : PLRXPLSCS4321N
  Serial No.    : C825U****
Interface vw1 - Transceiver is not detected.
Interface vw2 - Transceiver is not detected.
Interface x1 - SFP/SFP+
  Vendor Name   : Fortinet
  Part No.      : LCP-10GRJ3SRFN
  Serial No.    : 19090910****
Interface x2 - Transceiver is not detected.
```

SFP/SFP+ Interface	Temperature (Celsius)	Voltage (Volts)	Optical Tx Bias (mA)	Optical Tx Power (dBm)	Optical Rx Power (dBm)
port9	N/A	N/A	N/A	N/A	N/A
port11	N/A	N/A	N/A	N/A	N/A
port12	N/A	N/A	N/A	N/A	N/A
s1	38.3	3.35	6.80	-2.3	-3.2
s2	42.1	3.34	7.21	-2.3	-3.0
x1	N/A	N/A	N/A	N/A	N/A

++ : high alarm, + : high warning, - : low warning, -- : low alarm, ? : suspect.

## VLAN

Virtual local area networks (VLANs) multiply the capabilities of your FortiGate and can also provide added network security. VLANs use ID tags to logically separate devices on a network into smaller broadcast domains. These smaller

domains forward packets only to devices that are part of that VLAN domain. This reduces traffic and increases network security.

## VLANs in NAT mode

In NAT mode, the FortiGate unit functions as a layer-3 device. In this mode, the FortiGate unit controls the flow of packets between VLANs and can also remove VLAN tags from incoming VLAN packets. The FortiGate unit can also forward untagged packets to other networks such as the Internet.

In NAT mode, the FortiGate unit supports VLAN trunk links with IEEE 802.1Q-compliant switches or routers. The trunk link transports VLAN-tagged packets between physical subnets or networks. When you add VLAN subinterfaces to the FortiGate's physical interfaces, the VLANs have IDs that match the VLAN IDs of packets on the trunk link. The FortiGate unit directs packets with VLAN IDs to subinterfaces with matching IDs.

You can define VLAN subinterfaces on all FortiGate physical interfaces. However, if multiple virtual domains are configured on the FortiGate unit, you only have access to the physical interfaces on your virtual domain. The FortiGate unit can tag packets leaving on a VLAN subinterface. It can also remove VLAN tags from incoming packets and add a different VLAN tag to outgoing packets.

Normally in VLAN configurations, the FortiGate unit's internal interface is connected to a VLAN trunk, and the external interface connects to an Internet router that is not configured for VLANs. In this configuration, the FortiGate unit can apply different policies for traffic on each VLAN interface connected to the internal interface, which results in less network traffic and better security.


## Sample topology

In this example, two different internal VLAN networks share one interface on the FortiGate unit and share the connection to the Internet. This example shows that two networks can have separate traffic streams while sharing a single interface. This configuration can apply to two departments in a single company or to different companies.

There are two different internal network VLANs in this example. VLAN\_100 is on the 10.1.1.0/255.255.255.0 subnet, and VLAN\_200 is on the 10.1.2.0/255.255.255.0 subnet. These VLANs are connected to the VLAN switch.

The FortiGate internal interface connects to the VLAN switch through an 802.1Q trunk. The internal interface has an IP address of 192.168.110.126 and is configured with two VLAN subinterfaces (VLAN\_100 and VLAN\_200). The external interface has an IP address of 172.16.21.2 and connects to the Internet. The external interface has no VLAN subinterfaces.

When the VLAN switch receives packets from VLAN\_100 and VLAN\_200, it applies VLAN ID tags and forwards the packets of each VLAN both to local ports and to the FortiGate unit across the trunk link. The FortiGate unit has policies that allow traffic to flow between the VLANs, and from the VLANs to the external network.

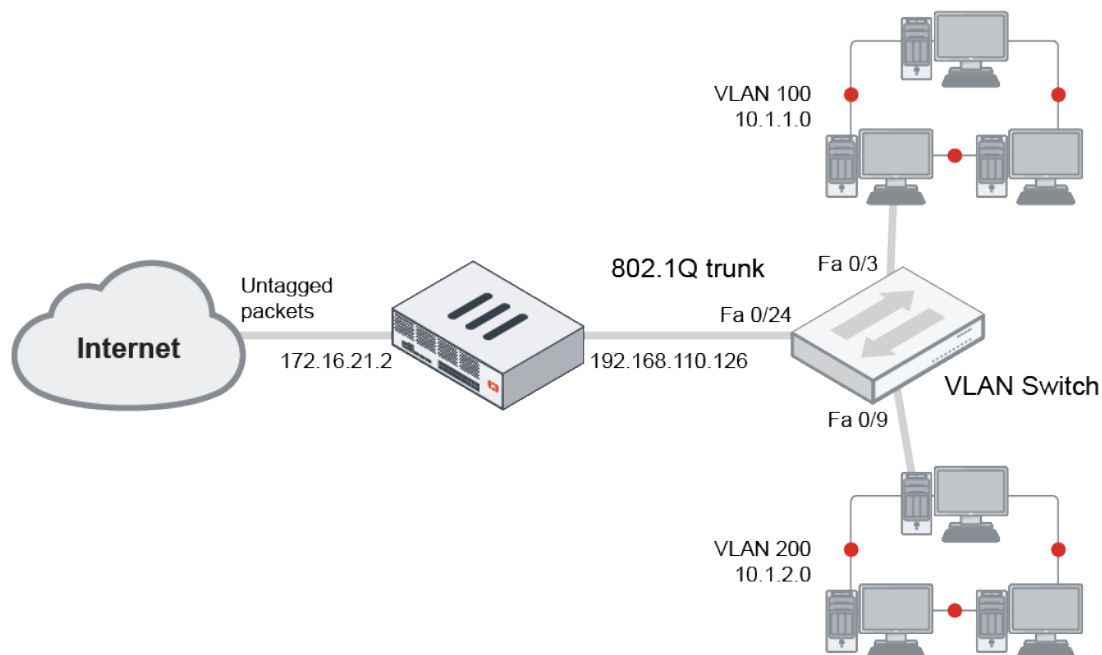

## Sample configuration

In this example, both the FortiGate unit and the Cisco 2950 switch are installed and connected and basic configuration has been completed. On the switch, you need access to the CLI to enter commands. No VDOMs are enabled in this example.

General configuration steps include:

1. [Configure the external interface.](#)
2. [Add two VLAN subinterfaces to the internal network interface.](#)
3. [Add firewall addresses and address ranges for the internal and external networks.](#)
4. [Add security policies to allow:](#)
  - the VLAN networks to access each other.
  - the VLAN networks to access the external network.

### To configure the external interface:

```
config system interface
    edit external
        set mode static
        set ip 172.16.21.2 255.255.255.0
    next
end
```

### To add VLAN subinterfaces:

```
config system interface
    edit VLAN_100
        set vdom root
        set interface internal
        set type vlan
```

```
        set vlanid 100
        set mode static
        set ip 10.1.1.1 255.255.255.0
        set allowaccess https ping
    next
    edit VLAN_200
        set vdom root
        set interface internal
        set type vlan
        set vlanid 200
        set mode static
        set ip 10.1.2.1 255.255.255.0
        set allowaccess https ping
    next
end
```

**To add the firewall addresses:**

```
config firewall address
    edit VLAN_100_Net
        set type ipmask
        set subnet 10.1.1.0 255.255.255.0
    next
    edit VLAN_200_Net
        set type ipmask
        set subnet 10.1.2.0 255.255.255.0
    next
end
```

**To add security policies:**

Policies 1 and 2 do not need NAT enabled, but policies 3 and 4 do need NAT enabled.

```
config firewall policy
    edit 1
        set srcintf VLAN_100
        set srcaddr VLAN_100_Net
        set dstintf VLAN_200
        set dstaddr VLAN_200_Net
        set schedule always
        set service ALL
        set action accept
        set nat disable
        set status enable
    next
    edit 2
        set srcintf VLAN_200
        set srcaddr VLAN_200_Net
        set dstintf VLAN_100
        set dstaddr VLAN_100_Net
        set schedule always
        set service ALL
        set action accept
        set nat disable
        set status enable
    next
```



```
edit 3
    set srcintf VLAN_100
    set srcaddr VLAN_100_Net
    set dstintf external
    set dstaddr all
    set schedule always
    set service ALL
    set action accept
    set nat enable
    set status enable
next
edit 4
    set srcintf VLAN_200
    set srcaddr VLAN_200_Net
    set dstintf external
    set dstaddr all
    set schedule always
    set service ALL
    set action accept
    set nat enable
    set status enable
next
end
```

## VLANs in transparent mode

In transparent mode, the FortiGate unit behaves like a layer-2 bridge but can still provide services such as antivirus scanning, web filtering, spam filtering, and intrusion protection to traffic. Some limitations of transparent mode is that you cannot use SSL VPN, PPTP/L2TP VPN, DHCP server, or easily perform NAT on traffic. The limits in transparent mode apply to IEEE 802.1Q VLAN trunks passing through the unit.

You can insert the FortiGate unit operating in transparent mode into the VLAN trunk without making changes to your network. In a typical configuration, the FortiGate unit internal interface accepts VLAN packets on a VLAN trunk from a VLAN switch or router connected to internal network VLANs. The FortiGate external interface forwards VLAN-tagged packets through another VLAN trunk to an external VLAN switch or router and on to external networks such as the Internet. You can configure the unit to apply different policies for traffic on each VLAN in the trunk.

To pass VLAN traffic through the FortiGate unit, you add two VLAN subinterfaces with the same VLAN ID, one to the internal interface and the other to the external interface. You then create a security policy to permit packets to flow from the internal VLAN interface to the external VLAN interface. If required, create another security policy to permit packets to flow from the external VLAN interface to the internal VLAN interface. Typically in transparent mode, you do not permit packets to move between different VLANs. Network protection features such as spam filtering, web filtering, and anti-virus scanning, are applied through the UTM profiles specified in each security policy, enabling very detailed control over traffic.

When the FortiGate unit receives a VLAN-tagged packet on a physical interface, it directs the packet to the VLAN subinterface with the matching VLAN ID. The VLAN tag is removed from the packet and the FortiGate unit then applies security policies using the same method it uses for non-VLAN packets. If the packet exits the FortiGate unit through a VLAN subinterface, the VLAN ID for that subinterface is added to the packet and the packet is sent to the corresponding physical interface.


## Sample topology

In this example, the FortiGate unit is operating in transparent mode and is configured with two VLANs: one with an ID of 100 and the other with ID 200. The internal and external physical interfaces each have two VLAN subinterfaces, one for VLAN\_100 and one for VLAN\_200.

The IP range for the internal VLAN\_100 network is 10.100.0.0/255.255.0.0, and for the internal VLAN\_200 network is 10.200.0.0/255.255.0.0.

The internal networks are connected to a Cisco 2950 VLAN switch which combines traffic from the two VLANs onto one in the FortiGate unit's internal interface. The VLAN traffic leaves the FortiGate unit on the external network interface, goes on to the VLAN switch, and on to the Internet. When the FortiGate unit receives a tagged packet, it directs it from the incoming VLAN subinterface to the outgoing VLAN subinterface for that VLAN.

In this example, we create a VLAN subinterface on the internal interface and another one on the external interface, both with the same VLAN ID. Then we create security policies that allow packets to travel between the VLAN\_100\_int interface and the VLAN\_100\_ext interface. Two policies are required: one for each direction of traffic. The same is required between the VLAN\_200\_int interface and the VLAN\_200\_ext interface, for a total of four security policies.

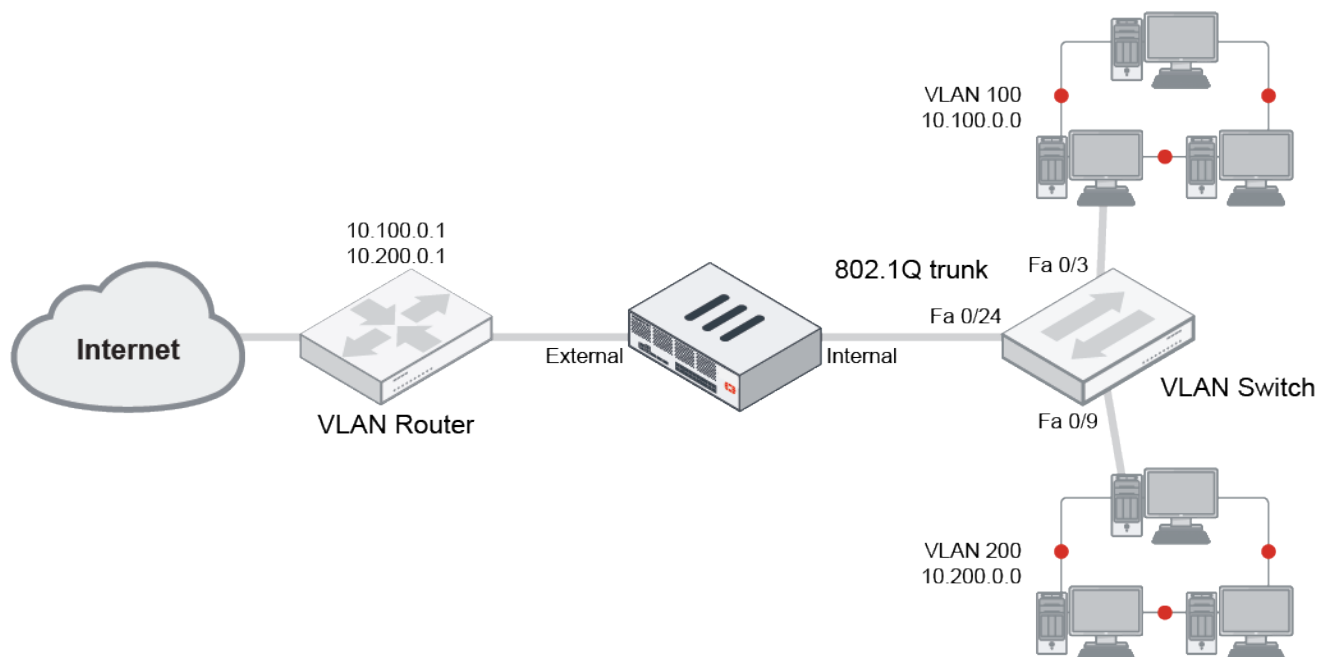

## Sample configuration

There are two main steps to configure your FortiGate unit to work with VLANs in transparent mode:

1. [Add VLAN subinterfaces.](#)
2. [Add security policies.](#)

You can also configure the protection profiles that manage antivirus scanning, web filtering, and spam filtering.

### To add VLAN subinterfaces:

```
config system interface
    edit VLAN_100_int
        set type vlan
```

```
        set interface internal
        set vlanid 100
    next
    edit VLAN_100_ext
        set type vlan
        set interface external
        set vlanid 100
    next
    edit VLAN_200_int
        set type vlan
        set interface internal
        set vlanid 200
    next
    edit VLAN_200_ext
        set type vlan
        set interface external
        set vlanid 200
    next
end
```

**To add security policies:**

```
config firewall policy
    edit 1
        set srcintf VLAN_100_int
        set srcaddr all
        set dstintf VLAN_100_ext
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 2
        set srcintf VLAN_100_ext
        set srcaddr all
        set dstintf VLAN_100_int
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 3
        set srcintf VLAN_200_int
        set srcaddr all
        set dstintf VLAN_200_ext
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 4
        set srcintf VLAN_200_ext
        set srcaddr all
        set dstintf VLAN_200_int
        set dstaddr all
        set action accept
```

```
        set schedule always
        set service ALL
    next
end
```

## Virtual VLAN switch

The hardware switch ports on FortiGate models that support virtual VLAN switches can be used as a layer 2 switch. Virtual VLAN switch mode allows 802.1Q VLANs to be assigned to ports, and the configuration of one interface as a trunk port.

The following FortiGate series are supported in FortiOS 7.2: 60F, 80F, 100E, 100F, 140E, 200F, 300E, 400E, 1100E, 1800F, 2600F, 3500F, 4200F, and 4400F.

The `virtual-switch-vlan` option must be enabled in the CLI to configure VLAN switch mode from the GUI or CLI.

### To enable VLAN switches:

```
config system global
    set virtual-switch-vlan enable
end
```

After this setting is enabled, any previously configured hardware switches will appear in the *Network > Interfaces* page under *VLAN Switch*.

### To enable VLAN switch mode in the GUI:

1. Go to *System > Settings*.
2. In the *View Settings* section, enable *VLAN switch mode*.
3. Click *Apply*.

## Basic configurations

Hardware switch ports can be configured as either a VLAN switch port or a trunk port. The available interfaces and allowable VLAN IDs that can be used depend on the FortiGate model. It is recommended to remove ports from the default VLAN switch before you begin configurations.

### To create a new VLAN and assign ports in the GUI:

1. Go to *Network > Interfaces* and click *Create New > Interface*.
2. Enter a name and configure the following:
  - a. Set the *Type* to *VLAN Switch*.
  - b. Enter a *VLAN ID*.
  - c. Click the **+** and add the *Interface Members*.
  - d. Configure the *Address* and *Administrative Access* settings as needed.
3. Click *OK*.

**To create a new VLAN and assign ports in the CLI:****1. Configure the VLAN:**

```
config system virtual-switch
  edit "VLAN10"
    set physical-switch "sw0"
    set vlan 10
    config port
      edit "internal1"
      next
      edit "internal2"
      next
    end
  next
end
```

**2. Configure the VLAN switch interface addressing:**


```
config system interface
  edit "VLAN10"
    set vdom "root"
    set ip 192.168.10.99 255.255.255.0
    set allowaccess ping https ssh snmp http fgfm
    set type hard-switch
  next
end
```

**To designate an interface as a trunk port:**

```
config system interface
  edit internal5
    set trunk enable
  next
end
```

**Example 1: HA using a VLAN switch**

In this example, two FortiGates in an HA cluster are connected to two ISP routers. Instead of connecting to external L2 switches, each FortiGate connects to each ISP router on the same hardware switch port on the same VLAN. A trunk port connects the two FortiGates to deliver the 802.1Q tagged traffic to the other. A full mesh between the FortiGate cluster and the ISP routers is achieved where no single point of failure will cause traffic disruptions.

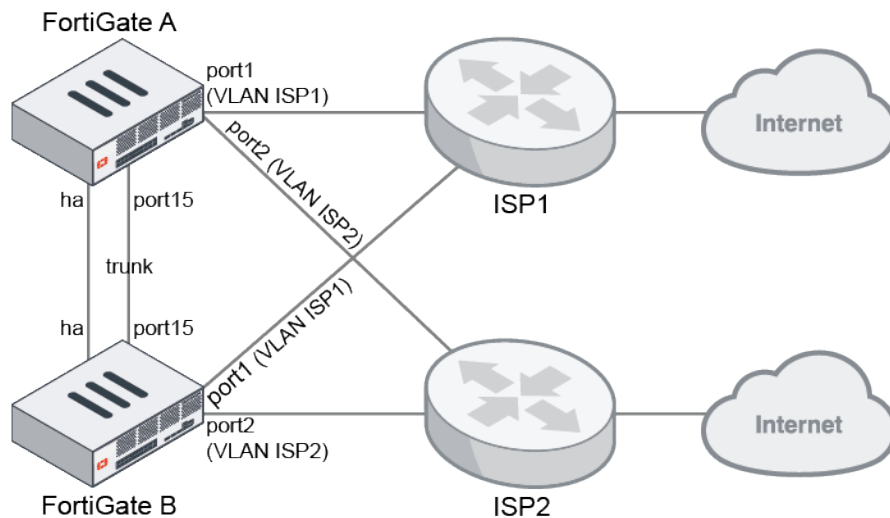

This example assumes that the HA settings are already configured. The interface and VLAN switch settings are identical between cluster members and synchronized. See [HA using a hardware switch to replace a physical switch on page 2380](#) for a similar example that does not use a VLAN switch.

### To configure the VLAN switches:

1. Configure the ISP interfaces with the corresponding VLAN IDs:

```

config system virtual-switch
    edit "ISP1"
        set physical-switch "sw0"
        set vlan 2951
        config port
            edit "port1"
            next
        end
    next
    edit "ISP2"
        set physical-switch "sw0"
        set vlan 2952
        config port
            edit "port2"
            next
        end
    next
end

```

2. Configure the VLAN switch interface addressing:

```

config system interface
    edit "ISP1"
        set vdom "root"
        set ip 192.168.10.99 255.255.255.0
        set allowaccess ping
        set type hard-switch
    next
    edit "ISP2"
        set vdom "root"
    next
end

```

```
        set ip 192.168.20.99 255.255.255.0
        set allowaccess ping
        set type hard-switch
    next
end
```

**3. Designate port15 as the trunk port:**


```
config system interface
    edit port15
        set trunk enable
    next
end
```

**4. Configure firewall policies to allow outgoing traffic on the ISP1 and ISP2 interfaces:**

```
config firewall policy
    edit 1
        set srcintf "port11"
        set dstintf "ISP1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
    edit 2
        set srcintf "port11"
        set dstintf "ISP2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

## Example 2: LAN extension

In this example, two hardware switch ports are assigned VLAN10, and two ports are assigned VLAN20 on FortiGate B. The wan2 interface is designated as the trunk port, and is connected to the upstream FortiGate A. The corresponding VLAN subinterfaces VLAN10 and VLAN20 on the upstream FortiGate allow further access to other networks.

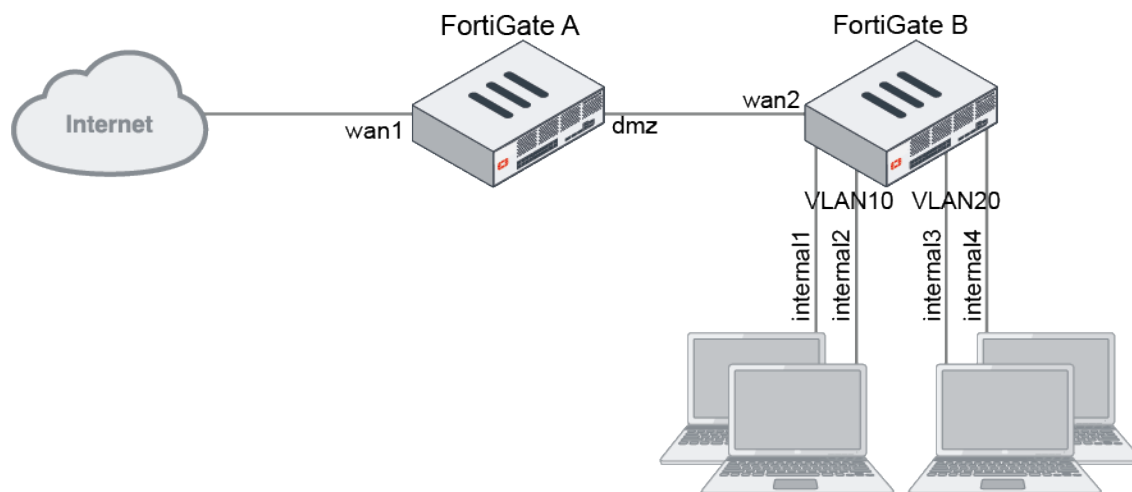

The available interfaces and VLAN IDs varies between FortiGate models. The FortiGate B in this example is a 60F model.

## To configure FortiGate B:

### 1. Configure the VLAN interfaces:

```

config system virtual-switch
    edit "VLAN10"
        set physical-switch "sw0"
        set vlan 10
        config port
            edit "internal1"
            next
            edit "internal2"
            next
        end
    next
    edit "VLAN20"
        set physical-switch "sw0"
        set vlan 20
        config port
            edit "internal3"
            next
            edit "internal4"
            next
        end
    next
end

```

### 2. Configure the VLAN switch interface addressing:

```

config system interface
    edit "VLAN10"
        set vdom "root"
        set ip 192.168.10.99 255.255.255.0
        set allowaccess ping https ssh snmp http fgfm
    next
end

```



```
        set type hard-switch
    next
    edit "VLAN20"
        set vdom "root"
        set ip 192.168.20.99 255.255.255.0
        set allowaccess ping https ssh snmp http fgfm
        set type hard-switch
    next
end
```

### 3. Designate wan2 as the trunk port:

```
config system interface
    edit wan2
        set trunk enable
    next
end
```

## To configure FortiGate A:

### 1. Configure the VLAN subinterfaces:

```
config system interface
    edit "VLAN10"
        set ip 192.168.10.98 255.255.255.0
        set allowaccess ping https ssh
        set role lan
        set interface "dmz"
        set vlanid 10
    next
    edit "VLAN20"
        set ip 192.168.20.98 255.255.255.0
        set allowaccess ping https ssh
        set role lan
        set interface "dmz"
        set vlanid 20
    next
end
```

### 2. Configure the DHCP server on VLAN10:

```
config system dhcp server
    edit 0
        set dns-service default
        set default-gateway 192.168.10.98
        set netmask 255.255.255.0
        set interface "VLAN10 "
        config ip-range
            edit 1
                set start-ip 192.168.10.100
                set end-ip 192.168.10.254
            next
        end
        set timezone-option default
    next
end
```

**3. Configure firewall policies that allow traffic from the VLAN10 and VLAN20 interfaces to the internet:**

```
config firewall policy
    edit 0
        set name "VLAN10-out"
        set srcintf "VLAN10"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
    edit 0
        set name "VLAN20-out"
        set srcintf "VLAN20"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

 
**To test the connection:**

1. Connect a PC to internal1 on FortiGate B.
2. Verify that it receives an IP address from FortiGate A's DHCP server.
3. From the PC, ping FortiGate B on 192.168.10.99.
4. Ping FortiGate A on 192.168.10.98.
5. Connect to the internet. Traffic is allowed by the VLAN10-out policy.

## QinQ 802.1Q in 802.1ad

QinQ (802.1ad) allows multiple VLAN tags to be inserted into a single frame, and can be configured on supported FortiGate devices.

In this example, the customer connects to a provider that uses 802.1ad double-tagging to separate their customer VLANs. The FortiGate connecting to the provider double-tags its frames with an outer provider-tag (S-Tag) and an inner customer-tag (C-Tag).



The customer identifies itself with the provider-tag (S-Tag) 232 and uses the customer-tag (C-Tag) 444 for traffic to its VLAN.

## To configure the interfaces:

1. Configure the interface to the provider that uses the outer tag (S-Tag):

 
```
config system interface
  edit "vlan-8021ad"
    set vdom "root"
    set vlan-protocol 8021ad
    set device-identification enable
    set role lan
    set snmp-index 47
    set interface "PORT"
    set vlanid 232
  next
end
```

2. Configure a dynamic VLAN interface that uses the inner tag (C-Tag):


```
config system interface
  edit "DVLAN"
    set vdom "vdom1"
    set device-identification enable
    set role lan
    set snmp-index 48
    set interface "vlan-8021ad"
    set vlanid 444
  next
end
```

## QinQ 802.1Q in 802.1Q

QinQ (802.1Q in 802.1Q) is supported for FortiGate VM models, where multiple VLAN tags can be inserted into a single frame.



In this example, the FortiGate VM is connected to a provider vSwitch and then a customer switch. The FortiGate encapsulates the frame with an outer 802.1Q tag of VLAN 100 and an inner 802.1Q tag of VLAN 200; port5 is used as the physical port. The provider vSwitch strips the outer tag and forwards traffic to the appropriate customer. Then the customer switch strips the inner tag and forwards the packet to the appropriate customer VLAN.

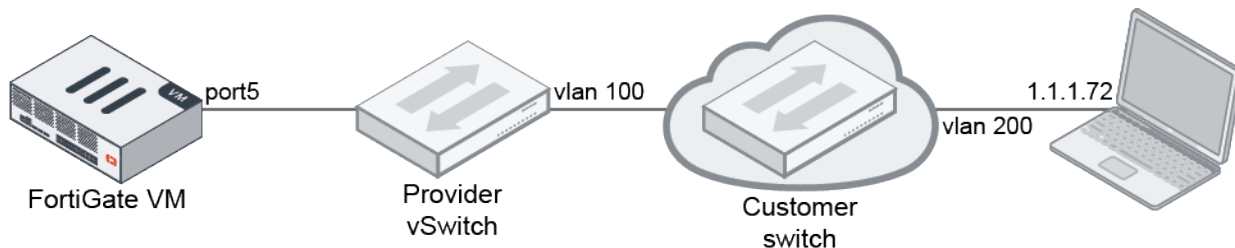

## To configure the interfaces:

### 1. Configure the interface to the provider that uses the outer tag:

```
config system interface
    edit "vlan-8021q"
        set vdom "root"
        set device-identification enable
        set role lan
        set interface "port5"
        set vlan-protocol 8021q
        set vlanid 100
    next
end
```

### 2. Configure the interface to the provider that uses the inner tag:

```
config system interface
    edit "vlan-qinq8021q"
        set vdom "root"
        set ip 1.1.1.71 255.255.255.0
        set allowaccess ping https ssh snmp http
        set device-identification enable
        set role lan
        set interface "vlan-8021q"
        set vlanid 200
    next
end
```

## To verify the traffic:

### 1. From the FortiGate, ping 1.1.1.72:

```
# execute ping 1.1.1.72
PING 1.1.1.72 (1.1.1.72): 56 data bytes
64 bytes from 1.1.1.72: icmp_seq=0 ttl=255 time=0.2 ms
64 bytes from 1.1.1.72: icmp_seq=1 ttl=255 time=0.1 ms
64 bytes from 1.1.1.72: icmp_seq=2 ttl=255 time=0.1 ms
64 bytes from 1.1.1.72: icmp_seq=3 ttl=255 time=0.1 ms
^C
--- 1.1.1.72 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.1/0.1/0.2 ms
```

### 2. Verify the packet capture frame header output captured from the FortiGate's port5:

```
Frame 2: 106 bytes on wire (848 bits), 106 bytes captured (848 bits)
Ethernet II, Src: VMware_93:ae:8f (00:50:56:93:ae:8f), Dst: VMware_93:e3:72
(00:50:56:93:e3:72)
    Destination: VMware_93:e3:72 (00:50:56:93:e3:72)
    Source: VMware_93:ae:8f (00:50:56:93:ae:8f)
    Type: 802.1Q Virtual LAN (0x8100)
802.1Q Virtual LAN, PRI: 0, DEI: 0, ID: 100
    000. .... = Priority: Best Effort (default) (0)
    ...0 .... = DEI: Ineligible
    .... 0000 0110 0100 = ID: 100
    Type: 802.1Q Virtual LAN (0x8100)
802.1Q Virtual LAN, PRI: 0, DEI: 0, ID: 200
```

```
000. .... .... = Priority: Best Effort (default) (0)
...0 .... .... = DEI: Ineligible
.... 0000 1100 1000 = ID: 200
Type: IPv4 (0x0800)
Internet Protocol Version 4, Src: 1.1.1.71, Dst: 1.1.1.72
Internet Control Message Protocol
```

The outer tag (first tag) is an 802.1Q tag with VLAN ID 100. The inner tag (second tag) is also an 802.1Q tag with VLAN ID 200.

## Aggregation and redundancy

Link aggregation (IEEE 802.3ad) enables you to bind two or more physical interfaces together to form an aggregated (combined) link. This new link has the bandwidth of all the links combined. If a link in the group fails, traffic is transferred automatically to the remaining interfaces. The only noticeable effect is reduced bandwidth.

This feature is similar to redundant interfaces. The major difference is a redundant interface group only uses one link at a time, where an aggregate link group uses the total bandwidth of the functioning links in the group, up to eight (or more).

An interface is available to be an aggregate interface if:

- It is a physical interface and not a VLAN interface or subinterface.
- It is not already part of an aggregate or redundant interface.
- It is in the same VDOM as the aggregated interface. Aggregate ports cannot span multiple VDOMs.
- It does not have an IP address and is not configured for DHCP or PPPoE.
- It is not referenced in any security policy, VIP, IP Pool, or multicast policy.
- It is not an HA heartbeat interface.
- It is not one of the FortiGate-5000 series backplane interfaces.

When an interface is included in an aggregate interface, it is not listed on the *Network > Interfaces* page. Interfaces still appear in the CLI although configuration for those interfaces do not take affect. You cannot configure the interface individually and it is not available for inclusion in security policies, VIPs, IP pools, or routing.

### Example configuration

This example creates an aggregate interface on a FortiGate-140D POE using ports 3-5 with an internal IP address of 10.1.1.123, as well as the administrative access to HTTPS and SSH.

#### To create an aggregate interface in the GUI:

1. Go to *Network > Interfaces* and select *Create New > Interface*.
2. Set *Name* to *aggregate*.
3. Set *Type* to *802.3ad Aggregate*.
4. Set *Interface members* to *port4*, *port5*, and *port6*.
5. Set *Addressing mode* to *Manual*.
6. Set *IP/Netmask* to *10.1.1.123/24*.
7. For *Administrative Access*, select *HTTPS* and *SSH*.
8. Click *OK*.

**To create an aggregate interface in the CLI:**

```
config system interface
    edit "aggregate"
        set vdom "root"
        set ip 10.1.1.123 255.255.255.0
        set allowaccess https ssh
        set type aggregate
        set member "port4" "port5" "port6"
        set snmp-index 45
    next
end
```

## Redundancy

In a redundant interface, traffic only goes over one interface at any time. This differs from an aggregated interface where traffic goes over all interfaces for increased bandwidth. This difference means redundant interfaces can have more robust configurations with fewer possible points of failure. This is important in a fully-meshed HA configuration.

An interface is available to be in a redundant interface if:

- It is a physical interface and not a VLAN interface.
- It is not already part of an aggregated or redundant interface.
- It is in the same VDOM as the redundant interface.
- It does not have an IP address and is not configured for DHCP or PPPoE.
- It has no DHCP server or relay configured on it.
- It does not have any VLAN subinterfaces.
- It is not referenced in any security policy, VIP, or multicast policy.
- It is not monitored by HA.
- It is not one of the FortiGate-5000 series backplane interfaces.

When an interface is included in a redundant interface, it is not listed on the *Network > Interfaces* page. You cannot configure the interface individually and it is not available for inclusion in security policies, VIPs, or routing.

## Example configuration

**To create a redundant interface in the GUI:**

1. Go to *Network > Interfaces* and select *Create New > Interface*.
2. Set *Name* to *redundant*.
3. Set *Type* to *Redundant Interface*.
4. Set *Interface members* to *port4*, *port5*, and *port6*.
5. Set *Addressing mode* to *Manual*.
6. Set *IP/Netmask* to *10.13.101.100/24*.
7. For *Administrative Access*, select *HTTPS* and *SSH*.
8. Click *OK*.

**To create a redundant interface in the CLI:**

```
config system interface
    edit "redundant"
```

```

        set vdom "root"
        set ip 10.13.101.100 255.255.255.0
        set allowaccess https http
        set type redundant
        set member "port4" "port5" "port6"
        set snmp-index 9
    next
end

```

## Enhanced hashing for LAG member selection

FortiGate models that have an internal switch that supports modifying the distribution algorithm can use enhanced hashing to help distribute traffic evenly, or load balance, across links on the Link Aggregation (LAG) interface.

The enhanced hashing algorithm is based on a 5-tuple of the IP protocol, source IP address, destination IP address, source port, and destination port.

Different computation methods allow for more variation in the load balancing distribution, in case one algorithm does not distribute traffic evenly between links across different XAUIs. The available methods are:

<b>xor16</b>	Use the XOR operator to make a 16 bit hash.
<b>xor8</b>	Use the XOR operator to make an 8 bit hash.
<b>xor4</b>	Use the XOR operator to make a 4 bit hash.
<b>crc16</b>	Use the CRC-16-CCITT polynomial to make a 16 bit hash.



The following NP6 non-service FortiGate models support this feature: 1500D, 1500DT, 3000D, 3100D, 3200D, 3700D, and 5001D.

### To configure the enhanced hashing:

```

config system npu
    set lag-out-port-select {enable | disable}
    config sw-eh-hash
        set computation {xor4 | xor8 | xor16 | crc16}
        set ip-protocol {include | exclude}
        set source-ip-upper-16 {include | exclude}
        set source-ip-lower-16 {include | exclude}
        set destination-ip-upper-16 {include | exclude}
        set destination-ip-lower-16 {include | exclude}
        set source-port {include | exclude}
        set destination-port {include | exclude}
        set netmask-length {0 - 32}
    end
end

```

For example, to use XOR16 and include all of the fields in the 5-tuple to compute the link in the LAG interface that the packet is distributed to:

```

config system npu
    set lag-out-port-select enable

```


```

config sw-eh-hash
    set computation xor16
    set ip-protocol include
    set source-ip-upper-16 include
    set source-ip-lower-16 include
    set destination-ip-upper-16 include
    set destination-ip-lower-16 include
    set source-port include
    set destination-port include
    set netmask-length 32
end
end

```

## Failure detection for aggregate and redundant interfaces

When an aggregate or redundant interface goes down, the corresponding fail-alert interface changes to down. When an aggregate or redundant interface comes up, the corresponding fail-alert interface changes to up.

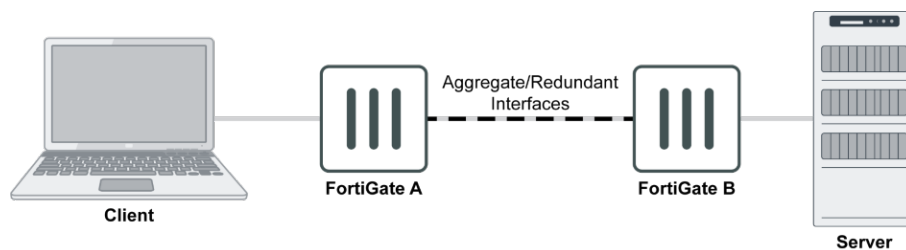

Fail-detect for aggregate and redundant interfaces can be configured using the CLI.

### To configure an aggregate interface so that port3 goes down with it:

```

config system interface
    edit "aggl"
        set vdom "root"
        set fail-detect enable
        set fail-alert-method link-down
        set fail-alert-interfaces "port3"
        set type aggregate
        set member "port1" "port2"
    next
end

```

### To configure a redundant interface so that port4 goes down with it:

```

config system interface
    edit "red1"
        set vdom "root"
        set fail-detect enable
        set fail-alert-method link-down
        set fail-alert-interfaces "port4"
        set type redundant
        set member "port1" "port2"
    next
end

```



## Loopback interface

A loopback interface is a logical interface that is always up. Its IP address does not depend on one specific physical port, and the attached subnet is always present in the routing table. Therefore, it can be accessed through several physical or VLAN interfaces.

Typically, a loopback interface can be used with management access, BGP peering, PIM rendezvous points, and SD-WAN.

Loopback interfaces require appropriate firewall policies to allow traffic to and from the interfaces. Multiple loopback interfaces can be configured in either non-VDOM mode or in each VDOM.

Dynamic routing protocols can be enabled on loopback interfaces. For example, loopback interfaces are a good practice for OSPF. To make it easier to troubleshoot OSPF, set the OSPF router ID to the same value as the loopback IP address to access a specific FortiGate using that IP address and SSH.

A loopback interface is configured using similar steps as a physical interface (see [Configuring an interface](#)).

## Software switch

A software switch is a virtual switch that is implemented at the software or firmware level and not at the hardware level. A software switch can be used to simplify communication between devices connected to different FortiGate interfaces. For example, a software switch lets you place the FortiGate interface connected to an internal network on the same subnet as your wireless interfaces. Then devices on the internal network can communicate with devices on the wireless network without any additional configuration on the FortiGate unit, such as additional security policies.

A software switch can also be useful if you require more hardware ports for the switch on a FortiGate unit. For example, if your FortiGate unit has a 4-port switch, WAN1, WAN2, and DMZ interfaces, and you need one more port, you can create a soft switch that can include the four-port switch and the DMZ interface, all on the same subnet. These types of applications also apply to wireless interfaces, virtual wireless interfaces, and physical interfaces such as those in FortiWiFi and FortiAP units.

Similar to a hardware switch, a software switch functions like a single interface. It has one IP address and all the interfaces in the software switch are on the same subnet. Traffic between devices connected to each interface is not regulated by security policies, and traffic passing in and out of the switch is controlled by the same policy.

When setting up a software switch, consider the following:

- Ensure that you have a back up of the configuration.
- Ensure that you have at least one port or connection, such as the console port, to connect to the FortiGate unit. If you accidentally combine too many ports, you need a way to undo errors.
- The ports that you include must not have any link or relation to any other aspect of the FortiGate unit, such as DHCP servers, security policies, and so on.
- Ensure the *Create address object matching subnet* option is disabled, if any port *Role* is set to either *LAN* or *DMZ*.
- For increased security, you can create a captive portal for the switch to allow only specific user groups access to the resources connected to the switch.

Some of the difference between software and hardware switches are:

Feature	Software switch	Hardware switch
Processing	Packets are processed in software by the CPU.	Packets are processed in hardware by the hardware switch controller, or SPU where applicable.
STP	Not Supported	Supported
Wireless SSIDs	Supported	Not Supported
Intra-switch traffic	Allowed by default. Can be explicitly set to require a policy.	Allowed by default.

### To create a software switch in the GUI:

1. Go to *Network > Interfaces*.
2. Click *Create New > Interface*.
3. Set *Type* to *Software Switch*.
4. Configure the *Name*, *Interface members*, and other fields as required.  
To add an interface to a software switch, it cannot be referenced by an existing configuration and its IP address must be set to 0.0.0.0/0.0.0.0.
5. Click *OK*.

### To create a software switch in the CLI:

```

config system switch-interface
    edit <interface>
        set vdom <vdom>
        set member <interface_list>
        set type switch
    next
end
config system interface
    edit <interface>
        set vdom <vdom>
        set type switch
        set ip <ip_address>
        set allowaccess https ssh ping
    next
end

```

To add an interface to a software switch, it cannot be referenced by an existing configuration and its IP address must be set to 0.0.0.0/0.0.0.0.

## Example

For this example, the wireless interface (WiFi) needs to be on the same subnet as the DMZ1 interface to facilitate wireless synchronization between an iPhone and a local computer. Because synchronization between two subnets is problematic, putting both interfaces on the same subnet allows synchronization to work. The software switch will accomplish this.

1. Clear the interfaces and back up the configuration:
  - a. Ensure the interfaces are not used for other security policy or for other use on the FortiGate unit.
  - b. Check the WiFi and DMZ1 ports to ensure that DHCP is not enabled and that there are no other dependencies on these interfaces.
  - c. Save the current configuration so that it can be recovered if something goes wrong.
2. Merge the WiFi port and DMZ1 port to create a software switch named `synchro` with an IP address of 10.10.21.12 and administrative access for HTTPS, SSH and PING:

```
config system switch-interface
  edit synchro
    set vdom "root"
    set type switch
    set member dmz1 wifi
  next
end
config system interface
  edit synchro
    set ip 10.10.21.12 255.255.255.0
    set allowaccess https ssh ping
  next
end
```

After the switch is set up, you add security policies, DHCP servers, and any other settings that are required.

## Hardware switch

A hardware switch is a virtual switch interface that groups different ports together so that the FortiGate can use the group as a single interface. Supported FortiGate models have a default hardware switch called either *internal* or *lan*. The hardware switch is supported by the chipset at the hardware level.


Ports that are connected to the same hardware switch behave like they are on the same physical switch in the same broadcast domain. Ports can be removed from a hardware switch and assigned to another switch or used as standalone interfaces.

Some of the difference between hardware and software switches are:

Feature	Hardware switch	Software switch
Processing	Packets are processed in hardware by the hardware switch controller, or SPU where applicable.	Packets are processed in software by the CPU.
STP	Supported	Not Supported
Wireless SSIDs	Not Supported	Supported
Intra-switch traffic	Allowed by default.	Allowed by default. Can be explicitly set to require a policy.

### To change the ports in a hardware switch in the GUI:

1. Go to *Network > Interface* and edit the hardware switch.
2. Click inside the *Interface members* field.

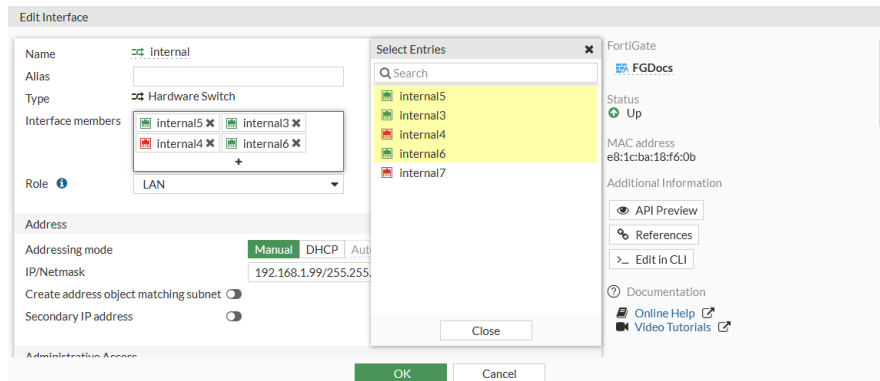

3. Select interfaces to add or remove them from the hardware switch, then click *Close*.  
To add an interface to a hardware switch, it cannot be referenced by an existing configuration and its IP address must be set to 0.0.0.0/0.0.0.0.
4. Click *OK*.  
Removed interfaces will now be listed as standalone interfaces in the *Physical Interface* section.

### To remove ports from a hardware switch in the CLI:

```
config system virtual-switch
  edit "internal"
    config port
      delete internal2
      delete internal7
      ...
    end
  next
end
```

### To add ports to a hardware switch in the CLI:


```
config system virtual-switch
  edit "internal"
    set physical-switch "sw0"
    config port
      edit "internal3"
      next
      edit "internal5"
      next
      edit "internal4"
      next
      edit "internal6"
      next
    end
  next
end
```

To add an interface to a hardware switch, it cannot be referenced by an existing configuration and its IP address must be set to 0.0.0.0/0.0.0.0.

## Using 802.1X on virtual switches for certain NP6 platforms

802.1X is supported under the hardware switch interface on the following NP6 platforms: FG-30xE, FG-40xE, and FG-110xE.

In this example, port3 and port4 are part of a hardware switch interface. The hardware switch acts as a virtual switch so that devices can connect directly to these ports and perform 802.1X authentication on the port.

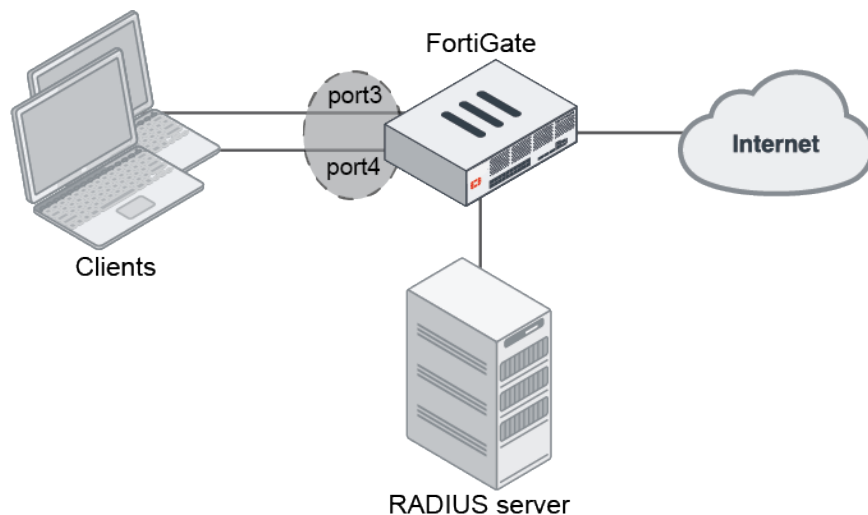

### Prerequisites:

1. Configure a RADIUS server (see [RADIUS servers on page 2092](#)).
2. Define a user group named test to use the remote RADIUS server and for 802.1X authentication (see [User definition and groups on page 2063](#)).
3. Configure a hardware switch (named 18188) with port3 and port4 as the members.
4. Configure a firewall policy that allows traffic from the 18188 hardware switch to go to the internet.
5. Enable 802.1X authentication on the client devices.

### To configure 802.1X authentication on a hardware switch in the GUI:

1. Go to *Network > Interfaces* and edit the hardware switch.
2. In the *Network* section, enable *Security mode* and select *802.1X*.

### 3. Click the + to add the *User group*.

### 4. Click OK.

## To configure 802.1X authentication on a hardware switch in the CLI:

### 1. Configure the virtual hardware switch interfaces:

```
config system virtual-switch
  edit "18188"
    set physical-switch "sw0"
  config port
    edit "port3"
    next
    edit "port4"
    next
  end
end
```

```

        end
    next
end

```

## 2. Configure 802.1X authentication:

```

config system interface
    edit "18188"
        set vdom "vdom1"
        set ip 1.1.1.1 255.255.255.0
        set allowaccess ping https ssh snmp fgfm ftm
        set type hard-switch
        set security-mode 802.1X
        set security-groups "test"
        set device-identification enable
        set lldp-transmission enable
        set role lan
        set snmp-index 52
    next
end

```

### To verify the that the 802.1X authentication was successful:

1. Get a client connected to port3 to authenticate to access the internet.
2. In FortiOS, verify the 802.1X authentication port status:

```

# diagnose sys 802-1x status

Virtual switch '18188' (default mode) 802.1x member status:
    port3: Link up, 802.1X state: authorized
    port4: Link up, 802.1X state: unauthorized

```

## Zone


Zones are a group of one or more physical or virtual FortiGate interfaces that you can apply firewall policies to for controlling inbound and outbound traffic. Grouping interfaces and VLAN subinterfaces into zones simplifies creating firewall policies where a number of network segments can use the same policy settings and protection profiles.

When you add a zone, you select the names of the interfaces and VLAN subinterfaces to add to the zone. Each interface still has its own address. Routing is still done between interfaces, that is, routing is not affected by zones. You can use firewall policies to control the flow of intra-zone traffic.

For example, in the sample configuration below, the network includes three separate groups of users representing different entities on the company network. While each group has its own set of ports and VLANs in each area, they can all use the same firewall policy and protection profiles to access the Internet. Rather than the administrator making nine separate firewall policies, he can make administration simpler by adding the required interfaces to a zone and creating three policies.

### Example configuration

You can configure policies for connections to and from a zone but not between interfaces in a zone. For this example, you can create a firewall policy to go between zone 1 and zone 3, but not between WAN2 and WAN1, or WAN1 and DMZ1.

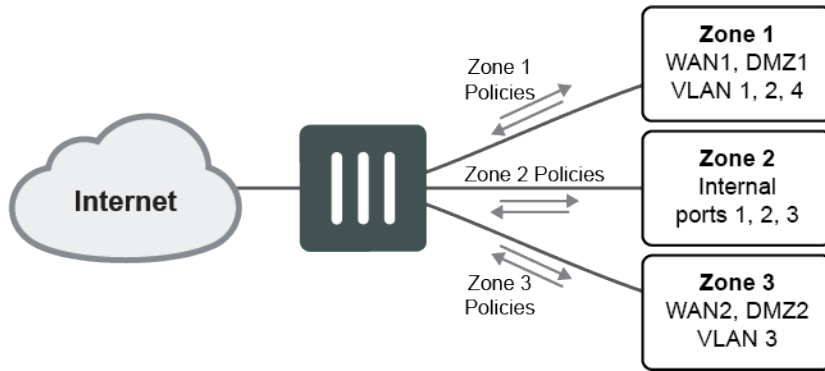

### To create a zone in the GUI:

1. Go to *Network > Interfaces*.



If VDOMs are enabled, go to the VDOM to create a zone.

2. Click *Create New > Zone*.
3. Configure the *Name* and add the *Interface Members*.
4. Enable or disable *Block intra-zone traffic* as required.
5. Click *OK*.

### To configure a zone to include the internal interface and a VLAN using the CLI:

```

config system zone
    edit zone_1
        set interface internal VLAN_1
        set intrazone {deny | allow}
    next
end
  
```

## Using zone in a firewall policy

### To configure a firewall policy to allow any interface to access the Internet using the CLI:

```

config firewall policy
    edit 2
        set name "2"
        set srcintf "Zone_1"
        set dstintf "port15"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
  
```



## Intra-zone traffic

In the zone configuration you can set `intrazone deny` to prohibit the different interfaces in the same zone to talk to each other.

For example, if you have ten interfaces in your zone and the `intrazone` setting is `deny`. You now want to allow traffic between a very small number of networks on different interfaces that are part of the zone but you do not want to disable the intra-zone blocking.

In this example, the zone VLANs are defined as: 192.168.1.0/24, 192.168.2.0/24, ... 192.168.10.0/24.

This policy allows traffic from 192.168.1.x to 192.168.2.x even though they are in the same zone and intra-zone blocking is enabled. The intra-zone blocking acts as a default deny rule and you have to specifically override it by creating a policy within the zone.

**To enable intra-zone traffic, create the following policy:**

<b>Source Interface</b>	Zone-name, e.g., <code>Vlans</code>
<b>Source Address</b>	192.168.1.0/24
<b>Destination</b>	Zone-name (same as Source Interface, i.e., <code>Vlans</code> )
<b>Destination Address</b>	192.168.2.0/24

## Virtual wire pair

A virtual wire pair consists of two interfaces that do not have IP addressing and are treated like a transparent mode VDOM. All traffic received by one interface in the virtual wire pair can only be forwarded to the other interface, provided a virtual wire pair firewall policy allows this traffic. Traffic from other interfaces cannot be routed to the interfaces in a virtual wire pair. Redundant and 802.3ad aggregate (LACP) interfaces can be included in a virtual wire pair.

Virtual wire pairs are useful for a typical topology where MAC addresses do not behave normally. For example, port pairing can be used in a Direct Server Return (DSR) topology where the response MAC address pair may not match the request's MAC address pair.



When creating a new virtual wire pair, the *Interface members* field displays interfaces without assigned addresses. Interfaces with assigned addresses are not displayed.


Therefore, you cannot add to a virtual wire pair an interface with *Addressing mode* set to *DHCP*. If you change the interface settings to *Manual* with *IP/Netmask* set to *0.0.0.0/0.0.0.0*, you can add the interface to a virtual wire pair.

## Example

In this example, a virtual wire pair (port3 and port4) makes it easier to protect a web server that is behind a FortiGate operating as an Internal Segmentation Firewall (ISFW). Users on the internal network access the web server through the ISFW over the virtual wire pair.



Interfaces used in a virtual wire pair cannot be used to access the ISFW FortiGate. Before creating a virtual wire pair, make sure you have a different port configured to allow admin access using your preferred protocol.

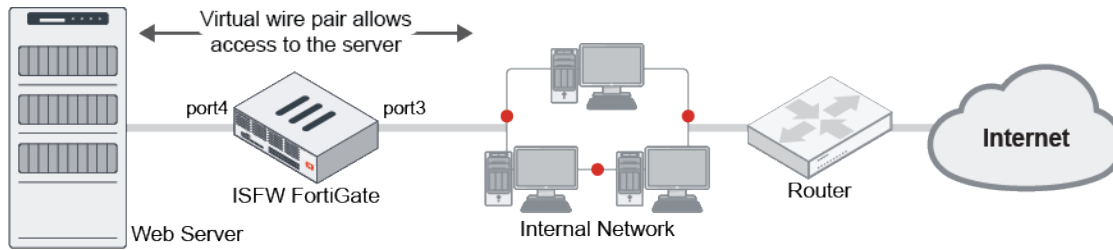

### To add a virtual wire pair using the GUI:

1. Go to *Network > Interfaces*.
2. Click *Create New > Virtual Wire Pair*.
3. Enter a name for the virtual wire pair.
4. Select the *Interface Members* to add to the virtual wire pair (*port3* and *port4*).  
These interfaces cannot be part of a switch, such as the default LAN/internal interface.
5. If required, enable *Wildcard VLAN* and set the *VLAN Filter*.
6. Click *OK*.

### To add a virtual wire pair using the CLI:

```
config system virtual-wire-pair
  edit "VWP-name"
    set member "port3" "port4"
    set wildcard-vlan disable
  next
end
```

### To create a virtual wire pair policy using the GUI:

1. Go to *Policy & Objects > Firewall Virtual Wire Pair Policy*.
2. Click *Create New*.
3. In the *Virtual Wire Pair* field, click the + to add the virtual wire pair.
4. Select the direction (arrows) that traffic is allowed to flow.
5. Configure the other settings as needed.
6. Click *OK*.

### To create a virtual wire pair policy using the CLI:

```
config firewall policy
  edit 1
    set name "VWP-Policy"
    set srcintf "port3" "port4"
    set dstintf "port3" "port4"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set fsso disable
```

```
next
end
```

## Configuring multiple virtual wire pairs in a virtual wire pair policy

You can create a virtual wire pair policy that includes different virtual wire pairs in NGFW profile and policy mode. This reduces overhead to create multiple similar policies for each VWP. In NGFW policy mode, multiple virtual wire pairs can be configured in a *Security Virtual Wire Pair Policy* and *Virtual Wire Pair SSL Inspection & Authentication* policy.

The virtual wire pair settings must have wildcard VLAN enabled. When configuring a policy in the CLI, the virtual wire pair members must be entered in `srcintf` and `dstintf` as pairs.

### To configure multiple virtual wire pairs in a policy in the GUI:

1. Configure the virtual wire pairs:

- a. Go to *Network > Interfaces* and click *Create New > Virtual Wire Pair*.
- b. Create a pair with the following settings:

<b>Name</b>	test-vwp-1
<b>Interface members</b>	wan1, wan2
<b>Wildcard VLAN</b>	Enable

- c. Click *OK*.
- d. Click *Create New > Virtual Wire Pair* and create another pair with the following settings:

<b>Name</b>	test-vwp-2
<b>Interface members</b>	port19, port20
<b>Wildcard VLAN</b>	Enable

- e. Click *OK*.
2. Configure the policy:
- a. Go to *Policy & Objects > Firewall Virtual Wire Pair Policy* and click *Create New*.
  - b. In the *Virtual Wire Pair* field, click the + to add *test-vwp-1* and *test-vwp-2*. Select the direction for each of the selected virtual wire pairs.

- c. Configure the other settings as needed.
- d. Click OK.

### To configure multiple virtual wire pairs in a policy in the CLI:

1. Configure the virtual wire pairs:

```
config system virtual-wire-pair
  edit "test-vwp-1"
    set member "wan1" "wan2"
    set wildcard-vlan enable
  next
  edit "test-vwp-2"
    set member "port19" "port20"
    set wildcard-vlan enable
  next
end
```

2. Configure the policy:

```
config firewall policy
  edit 1
    set name "vwp1&2-policy"
    set srcintf "port19" "wan1"
    set dstintf "port20" "wan2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
  next
end
```

## PRP handling in NAT mode with virtual wire pair

PRP (Parallel Redundancy Protocol) is supported in NAT mode for a virtual wire pair. This preserves the PRP RCT (redundancy control trailer) while the packet is processed by the FortiGate.

### To configure PRP handling on a device in NAT mode:

1. Enable PRP in the VDOM settings:

```
(root) # config system settings
      set prp-trailer-action enable
end
```

2. Enable PRP in the NPU attributes:

```
(global) # config system npu
      set prp-port-in "port15"
      set prp-port-out "port16"
end
```

3. Configure the virtual wire pair:


```
(root) # config system virtual-wire-pair
      edit "test-vwp-1"
        set member "port15" "port16"
      next
end
```

## Using VLAN sub-interfaces in virtual wire pairs

VLAN sub-interfaces, such as regular 802.1Q and 802.1ad (QinQ), are allowed to be members of a virtual wire pair.

### Example

In this example, the FortiGate has two VLAN interfaces. The first interface is a QinQ (802.1ad) interface over the physical interface port3. The second interface is a basic 802.1Q VLAN interface over physical interface port5. These two interfaces are grouped in a virtual wire pair so that bi-directional traffic is allowed. This example demonstrates ICMP from the client (3.3.3.4) sent to the server (3.3.3.1).

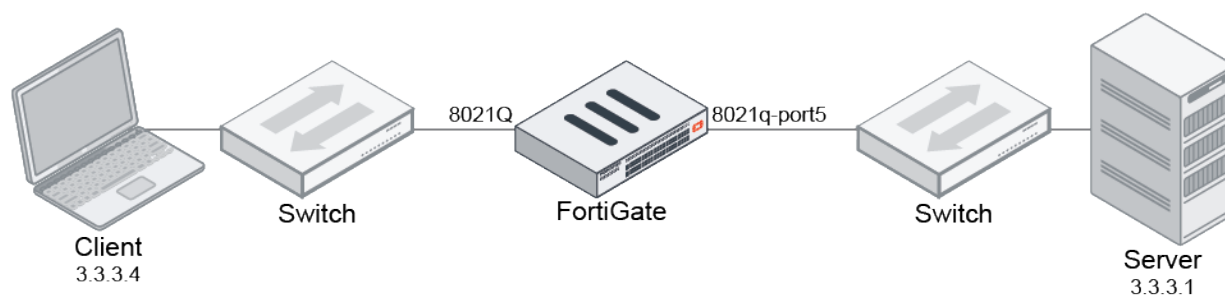

**To configure VLAN sub-interfaces in a virtual wire pair:****1. Configure the QinQ interfaces:**

```
config system interface
    edit "8021ad-port3"
        set vdom "vdom1"
        set vlan-protocol 8021ad
        set device-identification enable
        set role lan
        set snmp-index 31
        set interface "port3"
        set vlanid 3
    next
    edit "8021Q"
        set vdom "vdom1"
        set device-identification enable
        set role lan
        set snmp-index 32
        set interface "8021ad-port3"
        set vlanid 33
    next
end
```

**2. Configure the 802.1Q interface:**

```
config system interface
    edit "8021q-port5"
        set vdom "vdom1"
        set device-identification enable
        set role lan
        set snmp-index 33
        set interface "port5"
        set vlanid 5
    next
end
```

**3. Configure the virtual wire pair:**

```
config system virtual-wire-pair
    edit "VWP1"
        set member "8021Q" "8021q-port5"
    next
end
```

**4. Configure the firewall policy:**

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "8021Q" "8021q-port5"
        set dstintf "8021Q" "8021q-port5"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
```

```

    next
end

```

### To verify that bi-directional traffic passes through the FortiGate:

```

# diagnose sys session filter policy 1
# diagnose sys session list

session info: proto=1 proto_state=00 duration=18 expire=42 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=may_dirty br npu
statistic(bytes/packets/allow_err): org=168/2/1 reply=168/2/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=56->55/55->56 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 3.3.3.4:3072->3.3.3.1:8(0.0.0.0:0)
hook=post dir=reply act=noop 3.3.3.1:3072->3.3.3.4:0(0.0.0.0:0)
src_mac=08:5b:0e:71:bf:c6 dst_mac=d4:76:a0:5d:b2:de
misc=0 policy_id=1 pol_uuid_idx=534 auth_info=0 chk_client_info=0 vd=3
serial=00005f6c tos=ff/ff app_list=0 app=0 url_cat=0
rpidb_link_id=00000000 ngfwid=n/a
npu_state=0x4000c00 ofld=0 ofld=R
npu info: flag=0x81/0x81, offload=8/8, ips_offload=0/0, epid=187/156, ipid=156/187,
vlan=0x0005/0x0021
vlifid=156/187, vtag_in=0x0005/0x0021 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=0/5
total session 1

```

## DVLAN QinQ on NP7 platforms

DVLAN 802.1ad and 802.1Q modes are supported on NP7 platforms, which provides better performance and packet processing.

The default DVLAN mode is 802.1ad, but the DVLAN mode can be changed using `diagnose npu np7 dvlan-mode <dvlan_mode> {<npid> | all}`. The DVLAN mode can be applied to a specific NPID or all NPIDs. For example:

- `diagnose npu np7 dvlan-mode 802.1AD 0` will set NP0 to work in 802.1ad mode.
- `diagnose npu np7 dvlan-mode 802.1Q all` will set all NPUs to work in 802.1Q mode.



A reboot is required for custom DVLAN settings to take effect. To avoid any inconveniences or disruptions, changing the DVLAN settings should be done during a scheduled downtime or maintenance window.

In the virtual wire pair settings, the `outer-vlan-id` can be set. This is the same value as the outer provider-tag (S-Tag).

### To configure the outer VLAN ID:

```

config system virtual-wire-pair
    edit "dvlan-test"
        set member "port33" "port34"
        set wildcard-vlan enable

```

```
set outer-vlan-id 1234
next
end
```

## Enhanced MAC VLAN

The Media Access Control (MAC) Virtual Local Area Network (VLAN) feature in Linux allows you to configure multiple virtual interfaces with different MAC addresses (and therefore different IP addresses) on a physical interface.

FortiGate implements an enhanced MAC VLAN consisting of a MAC VLAN with bridge functionality. Because each MAC VLAN has a unique MAC address, virtual IP addresses (VIPs) and IP pools are supported, and you can disable Source Network Address Translation (SNAT) in policies.

MAC VLAN cannot be used in a transparent mode virtual domain (VDM). In a transparent mode VDM, a packet leaves an interface with the MAC address of the original source instead of the interface's MAC address. FortiGate implements an enhanced version of MAC VLAN where it adds a MAC table in the MAC VLAN which learns the MAC addresses when traffic passes through.

If you configure a VLAN ID for an enhanced MAC VLAN, it won't join the switch of the underlying interface. When a packet is sent to this interface, a VLAN tag is inserted in the packet and the packet is sent to the driver of the underlying interface. When the underlying interface receives a packet, if the VLAN ID doesn't match, it won't deliver the packet to this enhanced MAC VLAN interface.



When using a VLAN ID, the ID and the underlying interface must be a unique pair, even if they belong to different VDMs. This is because the underlying, physical interface uses the VLAN ID as the identifier to dispatch traffic among the VLAN and enhanced MAC VLAN interfaces.

---

If you use an interface in an enhanced MAC VLAN, do not use it for other purposes such as a management interface, HA heartbeat interface, or in Transparent VDMs.

If a physical interface is used by an EMAC VLAN interface, you cannot use it in a Virtual Wire Pair.

In high availability (HA) configurations, enhanced MAC VLAN is treated as a physical interface. It's assigned a unique physical interface ID and the MAC table is synchronized with the secondary devices in the same HA cluster.



In HA configurations, FortiGate assigns a virtual MAC to each interface. Virtual interfaces, such as EMAC VLAN interfaces with underlying NPU VLINK interface, are an exception and do not get assigned virtual MAC addresses.


---

### Example 1: Enhanced MAC VLAN configuration for multiple VDMs that use the same interface or VLAN

In this example, a FortiGate is connected, through port 1 to a router that's connected to the Internet. Three VDMs share the same interface (port 1) which connects to the same router that's connected to the Internet. Three enhanced MAC VLAN interfaces are configured on port 1 for the three VDMs. The enhanced MAC VLAN interfaces are in the same IP subnet segment and each have unique MAC addresses.

The underlying interface (port 1) can be a physical interface, an aggregate interface, or a VLAN interface on a physical or aggregate interface.



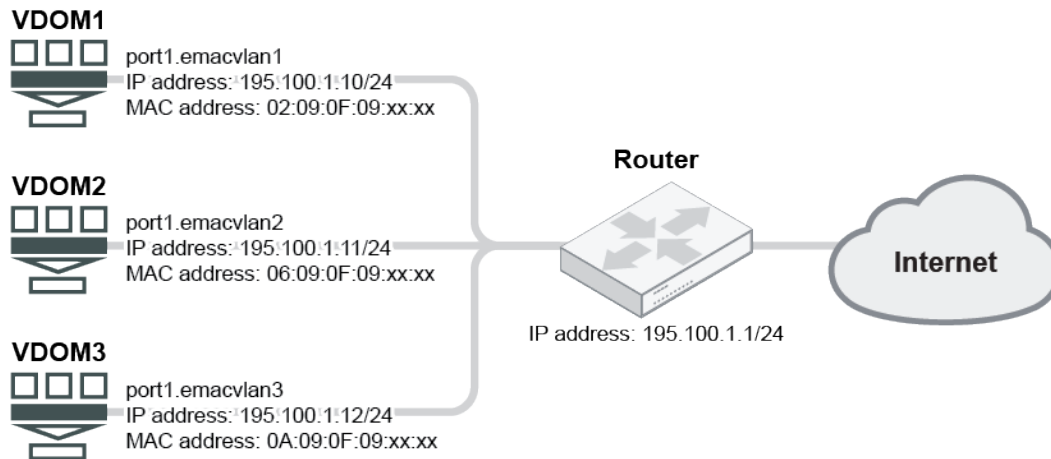


**To configure enhanced MAC VLAN for this example in the CLI:**

```
config system interface
  edit port1.emacvlan1
    set vdom VDOM1
    set type emac-vlan
    set interface port1
  next
  edit port1.emacvlan2
    set vdom VDOM2
    set type emac-vlan
    set interface port1
  next
  edit port1.emacvlan3
    set vdom VDOM3
    set type emac-vlan
    set interface port1
  next
end
```

## Example 2: Enhanced MAC VLAN configuration for shared VDOM links among multiple VDOMs

In this example, multiple VDOMs can connect to each other using enhanced MAC VLAN on network processing unit (NPU) virtual link (Vlink) interfaces.

FortiGate VDOM links (NPU-Vlink) are designed to be peer-to-peer connections and VLAN interfaces on NPU Vlink ports use the same MAC address. Connecting more than two VDOMs using NPU Vlinks and VLAN interfaces is not recommended as the VLAN interfaces share the same MAC address. To avoid overlapping MAC addresses on the same NPU Vlink, use EMAC VLANs instead.

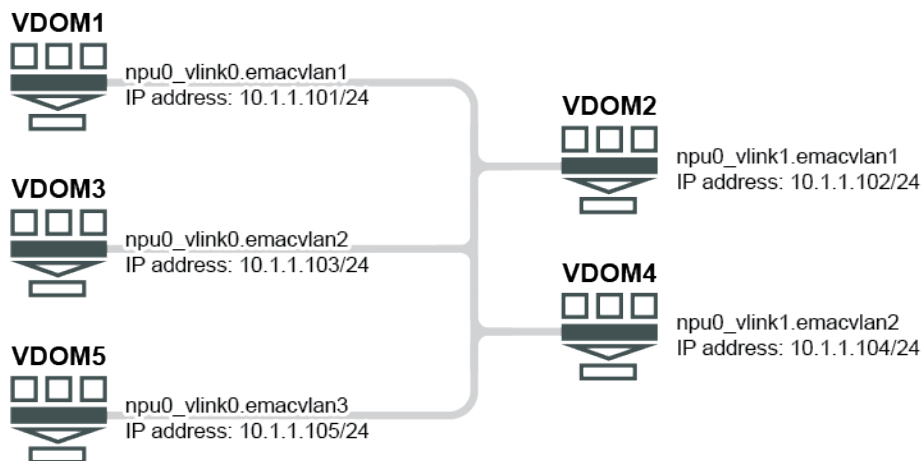

**To configure enhanced MAC VLAN for this example in the CLI:**

```
config system interface
  edit npu0_vlink0.emacvlan1
    set vdom VDOM1
    set type emac-vlan
    set interface npu0_vlink0
  next
  edit npu0_vlink0.emacvlan2
    set vdom VDOM3
    set type emac-vlan
    set interface npu0_vlink0
  next
  edit npu0_vlink1.emacvlan1
    set vdom VDOM2
    set type emac-vlan
    set interface npu0_vlink1
  next
end
```

### Example 3: Enhanced MAC VLAN configuration for unique MAC addresses for each VLAN interface on the same physical port

Some networks require a unique MAC address for each VLAN interface when the VLAN interfaces share the same physical port. In this case, the enhanced MAC VLAN interface is used the same way as normal VLAN interfaces.

To configure this, use the `set vlandid` command for the VLAN tag. The VLAN ID and interface must be a unique pair, even if they belong to different VDOMs.

**To configure enhanced MAC VLAN:**

```
config system interface
  edit <interface-name>
    set type emac-vlan
    set vlandid <VLAN-ID>
    set interface <physical-interface>
  next
end
```




FortiGate supports a maximum of 512 EMAC VLAN interfaces per underlying interface, and a maximum of 600 MAC addresses including EMAC VLAN interfaces.

## VXLAN

Virtual Extensible LAN (VXLAN) is a network virtualization technology used in large cloud computing deployments. It encapsulates layer 2 Ethernet frames within layer 3 IP packets using the UDP transport protocol on port 4789. VXLAN endpoints that terminate VXLAN tunnels can be virtual or physical switch ports, and are known as VXLAN tunnel endpoints (VTEPs).

### Sample VXLAN packet

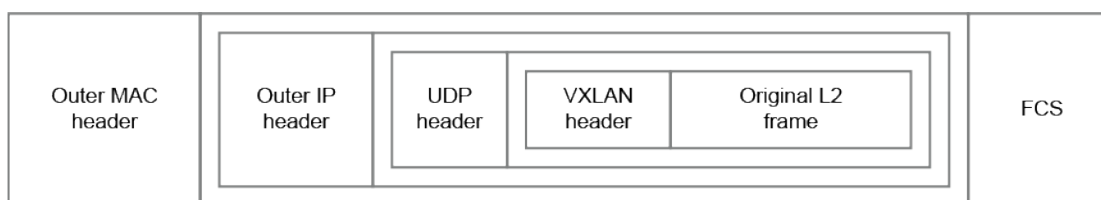

A VXLAN packet encapsulation occurs by first inserting a VXLAN header in front of the original layer 2 frame. This VXLAN header uses 3 B for the VNID that is used to identify the VXLAN segment, meaning that there are 16,777,215 different possible VNIDs. This allows for more unique LAN segments than possible VLANs. The original frame and the VXLAN header are then encapsulated into the UDP payload. The outer IP header allows it to be routed and transported over a layer 3 network, thus providing a layer 2 overlay scheme over a layer 3 network.

This equates to 50 B of overhead over the original frame: 14 B (Ethernet) + 20 B (IPv4) + 8 B (UDP) + 8 B (VXLAN headers). Since fragmenting a VXLAN packet is not recommended, it is advisable to increase the MTU size to 1550 B or above if possible, or to decrease the TCP MSS size inside a firewall policy.

For more information about VXLAN, see [RFC 7348](#).

The following topics provide information about VXLAN:

- [General VXLAN configuration and topologies on page 213](#)
- [VLAN inside VXLAN on page 218](#)
- [Virtual wire pair with VXLAN on page 220](#)
- [VXLAN over IPsec tunnel with virtual wire pair on page 222](#)
- [VXLAN over IPsec using a VXLAN tunnel endpoint on page 226](#)
- [VXLAN troubleshooting on page 231](#)

### General VXLAN configuration and topologies

This topic describes general VXLAN configurations and commonly used topologies. In the most basic configuration, a FortiGate is configured as a VXLAN tunnel endpoint (VTEP).

## To configure a FortiGate as a VTEP:

### 1. Configure the local interface:

```
config system vxlan
    edit <name>
        set interface <string>
        set vni <integer>
        set ip-version {ipv4-unicast | ipv6-unicast | ipv4-multicast | ipv6-multicast}
        set dstport <integer>
        set remote-ip <IP_address>
        set remote-ip6 <IP_address>
    next
end
```

interface <string>	Set the local outgoing interface for the VXLAN encapsulated traffic.
vni <integer>	Set the VXLAN network ID.
ip-version {ipv4-unicast   ipv6-unicast   ipv4-multicast   ipv6-multicast}	Set the IP version to use for the VXLAN device and communication over VXLAN (default = ipv4-unicast).
dstport <integer>	Set the VXLAN destination port (default = 4789).
remote-ip <IP_address>	Set the IPv4 address of the remote VXLAN endpoint.
remote-ip6 <IP_address>	Set the IPv6 address of the remote VXLAN endpoint.

The VXLAN system interface is automatically created with a `vxlan` type.

### 2. Configure the VXLAN interface settings:

```
config system interface
    edit <name>
        set vdom <string>
        set type vxlan
        set ip <IP_address>
        set allowaccess {ping https ssh http telnet fgfm radius-acct probe-response
fabric ftm speed-test}
    next
end
```

### 3. Connect the internal interface and VXLAN interface to the same L2 network.

- Connect using a software switch:

```
config system switch-interface
    edit <name>
        set vdom <string>
        set member <member_1> <member_2> ... <member_n>
        set intra-switch-policy {implicit | explicit}
    next
end
```

member <member_1> <member_2> ... <member_n>	Enter the VXLAN interface and other physical or virtual interfaces that will share the L2 network.
---	--

	When adding an interface member to a software switch, it cannot have an IP address or be referenced in any other settings. For newly created VLAN interfaces, it is advised to change the role from LAN to undefined so that an address is not automatically assigned.
<pre>intra-switch-policy {implicit   explicit}</pre>	<p>Allow any traffic between switch interfaces or require firewall policies to allow traffic between switch interfaces:</p> <ul style="list-style-type: none"> <li>• implicit: traffic between switch members is implicitly allowed.</li> <li>• explicit: traffic between switch members must match firewall policies (explicit firewall policies are required to allow traffic between members).</li> </ul>

- Connect using a virtual wire pair:

```
config system virtual-wire-pair
edit <name>
set member <member_1> <member_2>
set wildcard-vlan {enable | disable}
set vlan-filter <filter>
next
end
```

<pre>member &lt;member_1&gt; &lt;member_2&gt;</pre>	Enter the VXLAN interface and other physical or virtual interface that will share the L2 network.
<pre>wildcard-vlan {enable   disable}</pre>	Enable/disable wildcard VLAN. Disable to prevent VLAN-tagged traffic between the members of the virtual wire pair (default). Enable for VLAN tags to be allowed between the members.
<pre>vlan-filter &lt;filter&gt;</pre>	When wildcard-vlan is enabled, set the VLAN filter to specify which VLANs are allowed. By default, an empty vlan-filter allows all VLANs.

4. If using a virtual wire pair, configure a firewall policy that allows bi-directional traffic between the members of the virtual wire pair and inspection between them:


```
config firewall policy
edit <id>
set name <name>
set srcintf <member_1> <member_2>
set dstintf <member_1> <member_2>
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set service "ALL"
next
end
```

## Topologies

Many topologies can be deployed with VXLAN. A FortiGate can connect to VXLAN endpoints that are Fortinet devices or devices from other vendors. In the following topologies, it is assumed that at least one of the VTEPs is a FortiGate. The second VTEP can be any vendor.

### Basic VXLAN between two VTEPs


In this topology, a FortiGate (VTEP 1) is configured with a VXLAN interface over port1 where the `remote-ip` points to port1 of VTEP 2. The VXLAN interface and port2 can be associated with the same L2 network by making them members of either a software switch or a virtual wire pair. Devices under the L2 switches are part of the same L2 network.

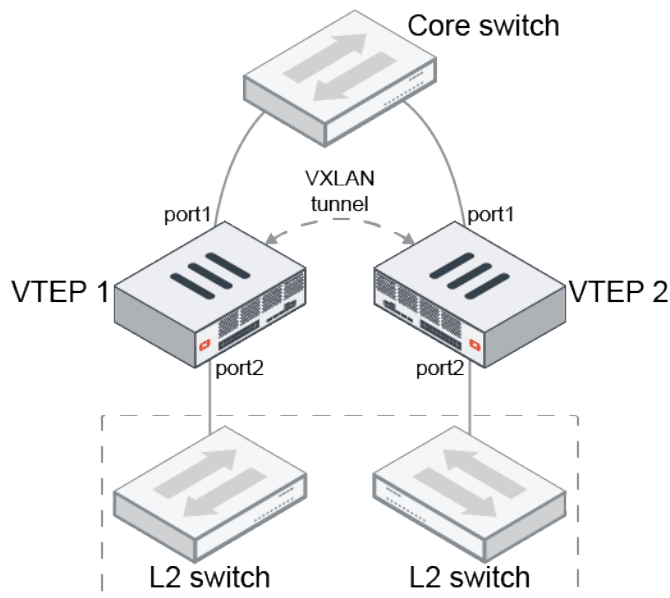

See [Virtual wire pair with VXLAN on page 220](#) for an example configuration.

### VXLAN between two VTEPs with wildcard VLANs


In this topology, a FortiGate (VTEP 1) is configured with a VXLAN interface over port1 where the `remote-ip` points to port1 of VTEP 2. The VXLAN interface is combined with port2 into the same L2 network using a virtual wire pair. The virtual wire pair allows wildcard VLANs to pass, which allows VLAN tags to be encapsulated over VXLAN. As a result, VLANs can span different switches over VXLAN.

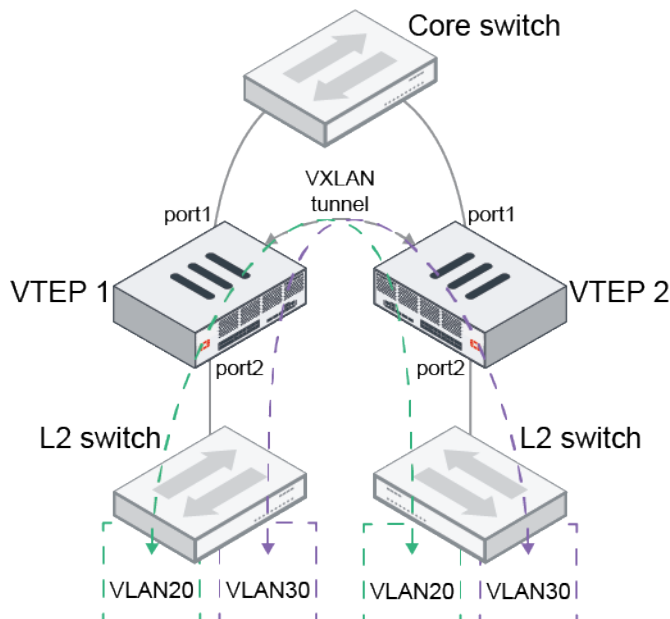

Variations of these two scenarios can also be found in FortiGate to FortiSwitch FortiLink connections over VXLAN. See [Deployment procedures](#) in the FortiSwitch VXLAN Deployment Guide for example configurations.

### VXLAN between two VTEPs over IPsec


In scenarios where VTEPs are located in different sites and traffic must be secured between the sites, VXLAN will need to be encrypted over IPsec. The VXLAN interface must use the IPsec interface as its outgoing interface. The `remote-ip` must be configured as the IP of the remote IPsec gateway. The VXLAN interface can be combined with port2 into the same L2 network using a software switch or virtual wire pair. Devices under the L2 switches can communicate with each other.

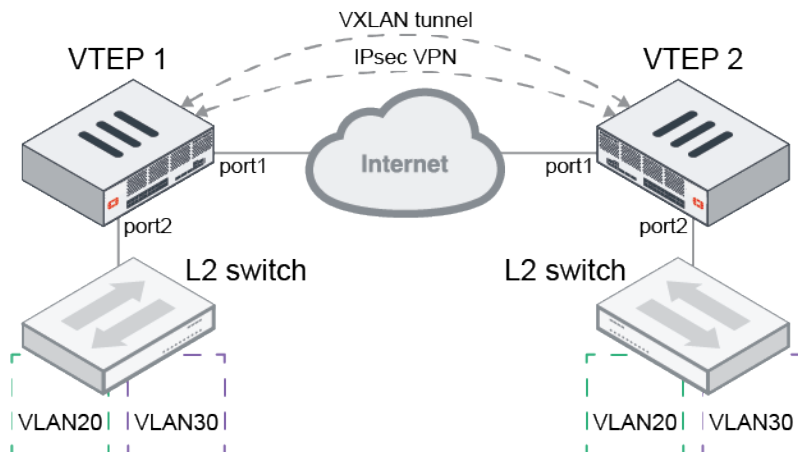

See [VXLAN over IPsec tunnel with virtual wire pair](#) on page 222 for an example configuration. A variation of this scenario is explained in [FortiGate LAN extension](#) on page 611 and in [FortiExtender as FortiGate LAN extension](#) (FortiExtender FortiGate-Managed Administration Guide).

### VXLAN between multiple VTEPs in an IPsec hub and spoke topology


In this topology, an IPsec VPN hub and spoke overlay network is already configured between sites. To allow networks behind the hub and spokes to be connected together, each spoke has a VXLAN connection to the hub, and the hub allows interconnection between its private network and each of the VXLAN interfaces to the spokes. In this scenario, the private networks behind each spoke are actually on the same L2 network as the private network behind the hub.

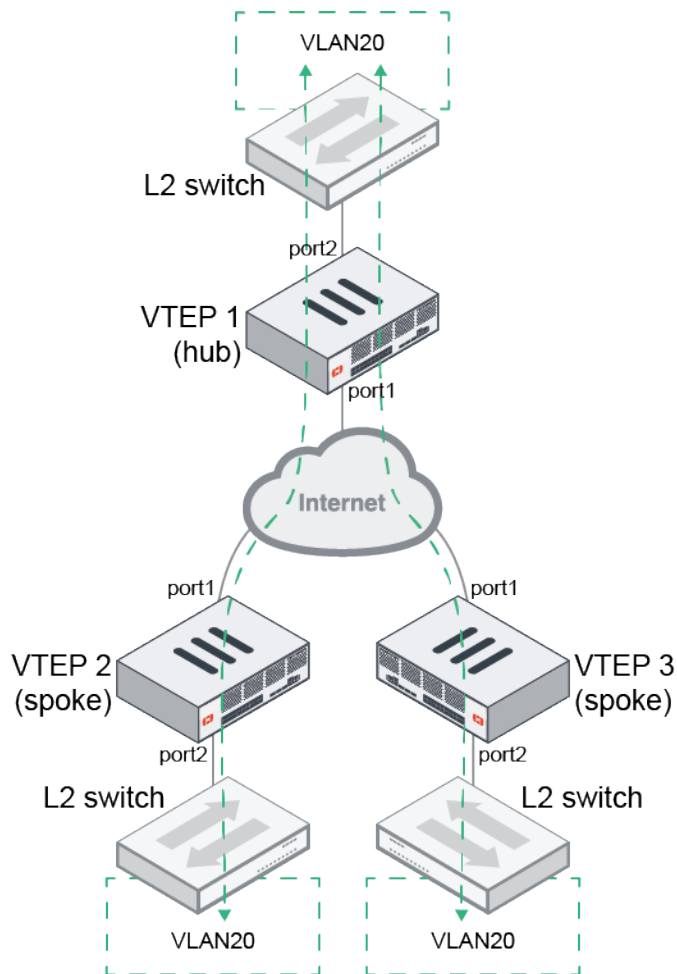

See [VXLAN over IPsec using a VXLAN tunnel endpoint on page 226](#) for an example configuration.

## VLAN inside VXLAN

VLANs can be assigned to VXLAN interfaces. In a data center network where VXLAN is used to create an L2 overlay network and for multitenant environments, a customer VLAN tag can be assigned to VXLAN interface. This allows the VLAN tag from VLAN traffic to be encapsulated within the VXLAN packet.

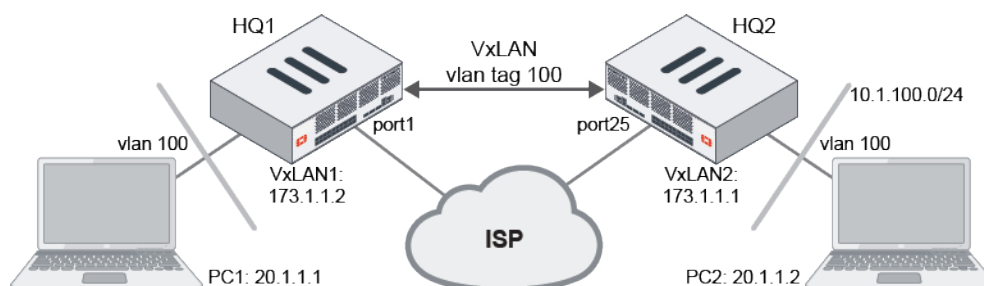



**To configure VLAN inside VXLAN on HQ1:****1. Configure VXLAN:**

```
config system vxlan
  edit "vxlan1"
    set interface port1
    set vni 1000
    set remote-ip 173.1.1.1
  next
end
```

**2. Configure system interface:**

```
config system interface
  edit vlan100
    set vdom root
    set vlanid 100
    set interface dmz
  next
  edit vxlan100
    set type vlan
    set vlanid 100
    set vdom root
    set interface vxlan1
  next
end
```

**3. Configure software-switch:**

```
config system switch-interface
  edit sw1
    set vdom root
    set member vlan100 vxlan100
    set intra-switch-policy implicit
  next
end
```



The default `intra-switch-policy implicit` behavior allows traffic between member interfaces within the switch. Therefore, it is not necessary to create firewall policies to allow this traffic.

---



Instead of creating a software-switch, it is possible to use a virtual-wire-pair as well. See [Virtual wire pair with VXLAN on page 220](#).

---

**To configure VLAN inside VXLAN on HQ2:****1. Configure VXLAN:**

```
config system vxlan
  edit "vxlan2"
    set interface port25
    set vni 1000
    set remote-ip 173.1.1.2
  next
```

```
end
```

## 2. Configure system interface:

```
config system interface
edit vlan100
set vdom root
set vlanid 100
set interface port20

next
edit vxlan100
set type vlan
set vlanid 100
set vdom root
set interface vxlan2

next
end
```

## 3. Configure software-switch:

```
config system switch-interface
edit sw1
set vdom root
set member vlan100 vxlan100

next
end
```

## To verify the configuration:

Ping PC1 from PC2.

The following is captured on HQ2:

No.	Time	Source	Destination	Protocol	Length	Info
1.0.000000		Fortinet_5b:a6:eb	Broadcast	ARP	110	who has 20.1.1.1? tell 20.1.1.2
2.0.000416		Fortinet_dd:69:cc	Fortinet_5b:a6:eb	ARP	110	20.1.1.1 is at 08:5b:0e:dd:69:cc
3.0.000741		20.1.1.2	20.1.1.1	ICMP	152	Echo (ping) request id=8eb00, seq=0/0, ttl=64 (reply in 4)
4.0.001088		20.1.1.1	20.1.1.2	ICMP	152	Echo (ping) reply id=8eb00, seq=0/0, ttl=255 (request in 3)
5.1.001785		20.1.1.2	20.1.1.1	ICMP	152	Echo (ping) request id=8eb00, seq=1/256, ttl=64 (reply in 6)
6.1.001815		20.1.1.1	20.1.1.2	ICMP	152	Echo (ping) reply id=8eb00, seq=1/256, ttl=255 (request in 5)
7.2.002701		20.1.1.2	20.1.1.1	ICMP	152	Echo (ping) request id=8eb00, seq=2/512, ttl=64 (reply in 8)
8.2.002750		20.1.1.1	20.1.1.2	ICMP	152	Echo (ping) reply id=8eb00, seq=2/512, ttl=255 (request in 7)
9.3.003735		20.1.1.2	20.1.1.1	ICMP	152	Echo (ping) request id=8eb00, seq=3/768, ttl=64 (reply in 10)

Frame 3: 152 bytes on wire (1216 bits), 152 bytes captured (1216 bits) on interface  
 Ethernet II, Src: Fortinet\_5b:a6:eb (08:5b:0e:eb:c8:99), Dst: Fortinet\_32:1a:d6 (90:6c:ac:32:1a:d6)  
 Internet Protocol Version 4, Src: 173.1.1.1, Dst: 173.1.1.2  
 User Datagram Protocol, Src Port: 4829, Dst Port: 4789  
 Virtual extensible local area network  
 Ethernet II, Src: Fortinet\_5b:a6:eb (90:6c:ac:5b:a6:eb), Dst: Fortinet\_dd:69:cc (08:5b:0e:dd:69:cc)  
 802.1Q Virtual LAN, PVID: 0, DEI: 0, ID: 100  
 0000 .... = Priority: Best effort (default) (0)  
 ...0 .... = DEI: Ineligible  
 ... 0000 0100 0100 = ID: 100  
 Type: IPv4 (0x0000)  
 Internet Protocol Version 4, Src: 20.1.1.2, Dst: 20.1.1.1  
 Internet Control Message Protocol


0000 90 6c ac 32 1a d6 08 5b 0e eb c8 99 00 00 45 00 .1.2...[ .....E.  
 0010 00 8a e1 e3 00 00 40 11 3c 7a ad 01 01 01 ad 01 .....8. <.....  
 0020 01 02 12 dd 17 5b 00 70 9f 49 08 00 00 00 00 03 .....v 1.....  
 0030 eb 08 08 5b 0e dd 69 cc 90 6c ac 5b a6 eb 01 00 ...[.1. 1.[.....  
 0040 00 64 08 00 45 00 00 54 45 a9 00 00 00 01 00 05 .d.E..1 E...8...

This captures the VXLAN traffic between 172.1.1.1 and 172.1.1.2 with the VLAN 100 tag inside.

## Virtual wire pair with VXLAN

Virtual wire pairs can be used with VXLAN interfaces.

In these examples, VXLAN interfaces are added between FortiGate HQ1 and FortiGate HQ2, a virtual wire pair is added in HQ1, and firewall policies are created on both HQ1 and HQ2.

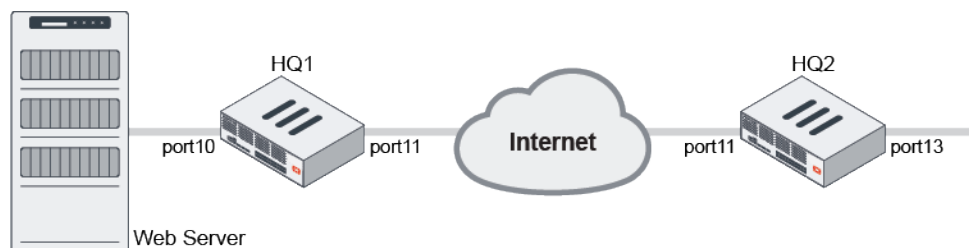**To create VXLAN interface on HQ1:**

```
config system interface
    edit "port11"
        set vdom "root"
        set ip 10.2.2.1 255.255.255.0
        set allowaccess ping https ssh snmp telnet
    next
end
config system vxlan
    edit "vxlan1"
        set interface "port11"
        set vni 1000
        set remote-ip "10.2.2.2"
    next
end
```

**To create VXLAN interface on HQ2:**

```
config system interface
    edit "port11"
        set vdom "root"
        set ip 10.2.2.2 255.255.255.0
        set allowaccess ping https ssh snmp http
    next
end
config system vxlan
    edit "vxlan1"
        set interface "port11"
        set vni 1000
        set remote-ip "10.2.2.1"
    next
end
config system interface
    edit "vxlan1"
        set vdom "root"
        set ip 10.1.100.2 255.255.255.0
        set allowaccess ping https ssh snmp
    next
end
```

**To create a virtual wire pair on HQ1:**

```
config system virtual-wire-pair
    edit "vwp1"
        set member "port10" "vxlan1"
```

```
    next
end
```

**To create a firewall policy on HQ1:**

```
config firewall policy
    edit 5
        set name "vxlan-policy"
        set srcintf "port10" "vxlan1"
        set dstintf "port10" "vxlan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
        set av-profile "default"
        set webfilter-profile "default"
        set dnsfilter-profile "default"
        set ips-sensor "default"
        set application-list "default"
        set fsso disable
    next
end
```


**To create a firewall policy on HQ2:**

```
config firewall policy
    edit 5
        set name "1"
        set srcintf "port13"
        set dstintf "vxlan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set nat enable
    next
end
```

## VXLAN over IPsec tunnel with virtual wire pair

VXLAN can be used to encapsulate VLAN traffic over a Layer 3 network. Using IPsec VPN tunnels to secure a connection between two sites, VXLAN can encapsulate VLAN traffic over the VPN tunnel to extend the VLANs between the two sites.

In this example, a site-to-site VPN tunnel is formed between two FortiGates. A VXLAN is configured over the IPsec interface. Multiple VLANs are connected to a switch behind each FortiGate. Host1 and Host2 are connected to VLAN10 on the switches on each site, and Host21 and Host22 are connected to VLAN20. Using virtual wire pairs, the internal interface (port1) will be paired with the VXLAN interface (vxlan) to allow VLAN traffic to pass through in either direction.

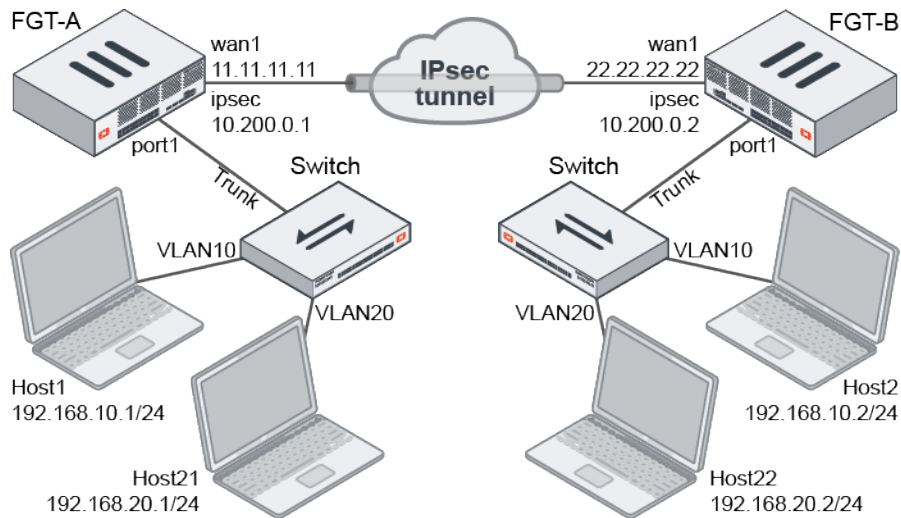

### To configure FGT-A:

#### 1. Configure the WAN interface:

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 11.11.11.11 255.255.255.0
    set allowaccess ping https ssh http fgfm
    set type physical
    set role wan
    set snmp-index 1
  next
end
```

#### 2. Configure a static route to send all traffic out the WAN interface:

```
config router static
  edit 1
    set gateway 11.11.11.1
    set device "wan1"
  next
end
```

#### 3. Configure the IPsec tunnel:

```
config vpn ipsec phase1-interface
  edit "ipsec"
    set interface "wan1"
    set peertype any
    set proposal aes256-sha1
    set remote-gw 22.22.22.22
    set psksecret *****
  next
end
config vpn ipsec phase2-interface
  edit "ipsec"
    set phase1name "ipsec"
    set proposal aes256-sha1
```

```

        set auto-negotiate enable
    next
end

```

**4. Configure local and remote IP addresses for the IPsec interface:**

```

config system interface
    edit "ipsec"
        set ip 10.200.0.1 255.255.255.255
        set remote-ip 10.200.0.2 255.255.255.252
    next
end

```

**5. Configure the VXLAN interface and bind it to the IPsec interface:**

```

config system vxlan
    edit "vxlan"
        set interface "ipsec"
        set vni 10
        set remote-ip "10.200.0.2"
    next
end

```

The remote IP address is the address of the remote IPsec peer.

**6. Configure a virtual wire pair with the port1 and vxlan interfaces as members:**

```

config system virtual-wire-pair
    edit "vwp"
        set member "port1" "vxlan"
        set wildcard-vlan enable
    next
end

```

The interfaces added to the virtual wire pair cannot be part of a switch, such as the default internal interface.

By enabling wildcard VLANs on the virtual wire pair, all VLAN tagged traffic that is allowed by the virtual wire pair firewall policies passes through the pair.

**7. Configure a virtual wire pair firewall policy to allow traffic between the port1 and vxlan interfaces:**

```

config firewall policy
    edit 4
        set name "vwp-pol"
        set srcintf "port1" "vxlan"
        set dstintf "port1" "vxlan"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

## To configure FGT-B

**1. Configure the WAN interface:**

```

config system interface
    edit "wan1"
        set vdom "root"

```

```
        set ip 22.22.22.22 255.255.255.0 255.255.255.0
        set allowaccess ping https ssh http fgfm
        set type physical
        set role wan
        set snmp-index 1
    next
end
```

**2. Configure a static route to send all traffic out the WAN interface:**

```
config router static
    edit 1
        set gateway 22.22.22.2
        set device "wan1"
    next
end
```

**3. Configure the IPsec tunnel:**

```
config vpn ipsec phase1-interface
    edit "ipsec"
        set interface "wan1"
        set peertype any
        set proposal aes256-sha1
        set remote-gw 11.11.11.11
        set psksecret *****
    next
end
config vpn ipsec phase2-interface
    edit "ipsec"
        set phase1name "ipsec"
        set proposal aes256-sha1
        set auto-negotiate enable
    next
end
```

**4. Configure local and remote IP addresses for the IPsec interface:**

```
config system interface
    edit "ipsec"
        set ip 10.200.0.2 255.255.255.255
        set remote-ip 10.200.0.1 255.255.255.252
    next
end
```

**5. Configure the VXLAN interface and bind it to the IPsec interface:**

```
config system vxlan
    edit "vxlan"
        set interface "ipsec"
        set vni 10
        set remote-ip "10.200.0.1"
    next
end
```

The remote IP address is the address of the remote IPsec peer.

**6. Configure a virtual wire pair with the port1 and vxlan interfaces as members:**

```
config system virtual-wire-pair
  edit "vwp"
    set member "port1" "vxlan"
    set wildcard-vlan enable
  next
end
```

**7. Configure a firewall policy to allow traffic between the port1 and vxlan interfaces:**

```
config firewall policy
  edit 4
    set name "vwp-pol"
    set srcintf "port1" "vxlan"
    set dstintf "port1" "vxlan"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end
```

## Test the configuration

**To test the configuration, ping Host2 (VLAN10: 192.168.10.2/24) from Host1 (VLAN10: 192.168.10.1/24):**

```
C:\>ping 192.168.10.2
```

```
Pinging 192.168.10.2 with 32 bytes of data:
Reply from 192.168.10.2: bytes=32 time=8ms TTL=56
Reply from 192.168.10.2: bytes=32 time=8ms TTL=56
Reply from 192.168.10.2: bytes=32 time=8ms TTL=56
Reply from 192.168.10.2: bytes=32 time=11ms TTL=56


Ping statistics for 192.168.10.2:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 8ms, Maximum = 11ms, Average = 8ms
```

Host21 should also be able to ping Host22.

## VXLAN over IPsec using a VXLAN tunnel endpoint

This example describes how to implement VXLAN over IPsec VPN using a VXLAN tunnel endpoint (VTEP).



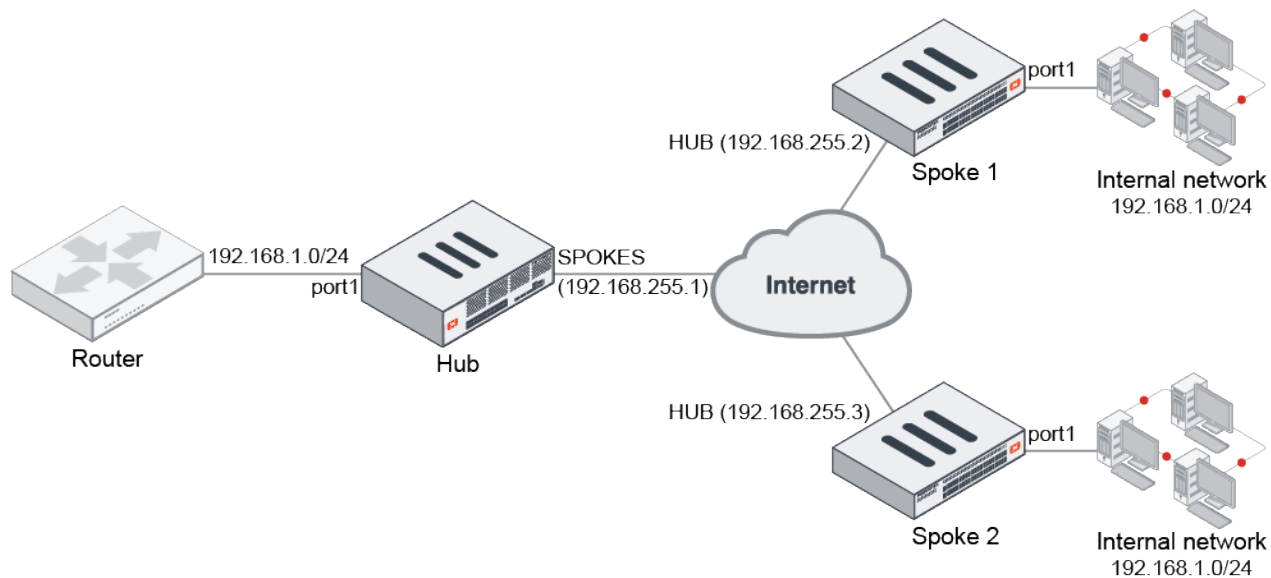

This example uses a hub and spoke topology. Dialup VPN is used because it allows a single phase 1 dialup definition on the hub FortiGate. Additional spoke tunnels are added with minimal changes to the hub by adding a user account and VXLAN interface for each spoke. Spoke-to-spoke communication is established through the hub. This example assumes that the authentication users and user groups have already been created. While this topology demonstrates hub and spoke with dialup tunnels with XAuth authentication, the same logic can be applied to a static VPN with or without XAuth.

IPsec tunnel interfaces are used to support VXLAN tunnel termination. An IP address is set for each tunnel interface. Ping access is allowed for troubleshooting purposes.

VTEPs are created on the hub and each spoke to forward VXLAN traffic through the IPsec tunnels. VXLAN encapsulates OSI layer 2 Ethernet frames within layer 3 IP packets. You will need to either combine the internal port1 and VXLAN interface into a soft switch, or create a virtual wire pair so that devices behind port1 have direct layer 2 access to remote peers over the VXLAN tunnel. This example uses a switch interface on the hub and a virtual wire pair on the spokes to demonstrate the two different methods.

In order to apply an IPsec VPN interface on the VXLAN interface setting, `net-device` must be disabled in the IPsec VPN phase 1 settings.

### To configure the hub FortiGate:

#### 1. Configure the IPsec phase 1 interface:

```
config vpn ipsec phase1-interface
  edit "SPOKES"
    set type dynamic
    set interface "port2"
    set mode aggressive
    set peertype one
    set net-device disable
    set proposal aes256-sha256
    set xauthtype auto
    set authusrgrp "SPOKES"
    set peerid "SPOKES"
    set psksecret <secret>
  next
end
```

**2. Configure the IPsec phase 2 interface:**

```
config vpn ipsec phase2-interface
    edit "SPOKES"
        set phase1name "SPOKES"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end
```

**3. Configure the IPsec VPN policy that allows VXLAN traffic between the spokes:**

```
config firewall policy
    edit 1
        set name "VXLAN_SPOKE_to_SPOKE"
        set srcintf "SPOKES"
        set dstintf "SPOKES"
        set srcaddr "NET_192.168.255.0"
        set dstaddr "NET_192.168.255.0"
        set action accept
        set schedule "always"
        set service "UDP_4789"
        set logtraffic all
        set fsso disable
    next
end
```

**4. Configure the IPsec tunnel interfaces (the remote IP address is not used, but it is necessary for this configuration):**

```
config system interface
    edit "SPOKES"
        set vdom "root"
        set ip 192.168.255.1 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 192.168.255.254 255.255.255.0
        set snmp-index 12
        set interface "port2"
    next
end
```

**5. Configure the VXLAN interfaces. Each spoke requires a VXLAN interface with a different VNI. The remote IP is the tunnel interfaces IP of the spokes.****a. Spoke 1:**

```
config system VXLAN
    edit "SPOKES_VXLAN1"
        set interface "SPOKES"
        set vni 1
        set remote-ip "192.168.255.2"
    next
end
```

**b. Spoke 2:**

```
config system VXLAN
    edit "SPOKES_VXLAN2"
        set interface "SPOKES"
        set vni 2
```

```
        set remote-ip "192.168.255.3"
    next
end
```

## To configure the spoke FortiGate:

### 1. Configure the IPsec phase 1 interface:

```
config vpn ipsec phase1-interface
    edit "HUB"
        set interface "port2"
        set mode aggressive
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set localid "SPOKES"
        set xauthtype client
        set authusr "SPOKE1"
        set authpasswd <secret>
        set remote-gw <hub public IP>
        set psksecret <secret>
    next
end
```

### 2. Configure the IPsec phase 2 interface:

```
config vpn ipsec phase2-interface
    edit "HUB"
        set phase1name "HUB"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 192.168.255.2 255.255.255.255
    next
end
```



The hub FortiGate inserts a reverse route pointing to newly established tunnel interfaces for any of the subnets that the spoke FortiGate's source quick mode selectors provides. This is why you should set the tunnel IP address here.

---

### 3. Configure the IPsec VPN policy:

```
config firewall policy
    edit 1
        set name "VTEP_IPSEC_POLICY"
        set srcintf "HUB"
        set dstintf "HUB"
        set srcaddr "none"
        set dstaddr "none"
        set action accept
        set schedule "always"
        set service "PING"
        set logtraffic disable
        set fsso disable
    next
end
```

**4. Configure the IPsec tunnel interface:**

```

config system interface
    edit "HUB"
        set vdom "root"
        set ip 192.168.255.2 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 192.168.255.1 255.255.255.0
        set snmp-index 12
        set interface "port2"
    next
end

```

**5. Configure the VXLAN interfaces (the remote IP is the tunnel interface IP of the hub):****a. Spoke 1:**

```

config system VXLAN
    edit "HUB_VXLAN"
        set interface "HUB"
        set vni 1
        set remote-ip "192.168.255.1"
    next
end

```

**b. Spoke 2:**

```

config system VXLAN
    edit "HUB_VXLAN"
        set interface "HUB"
        set vni 2
        set remote-ip "192.168.255.1"
    next
end

```

**To bind the VXLAN interface to the internal interface:****1. Configure a switch interface on the hub:**

```

config system switch-interface
    edit "SW"
        set vdom "root"
        set member "port1" "SPOKES_VXLAN1" "SPOKES_VXLAN2"
        set intra-switch-policy {implicit | explicit}
    next
end

```



Allowing intra-switch traffic is implicitly allowed by default. Use `set intra-switch-policy explicit` to require firewall policies to allow traffic between switch interfaces.

---

**2. Configure a virtual wire pair on the spokes:**

```

config system virtual-wire-pair
    edit "VWP"
        set member "HUB_VXLAN" "port1"
    next
end

```

```
next
end
```



The virtual wire pair requires an explicit policy to allow traffic between interfaces.

### To test the configuration:

#### 1. Ping the hub FortiGate from the spoke FortiGate:

```
user@pc-spoke1:~$ ping 192.168.1.1 -c 3
PING 192.168.1.1 (192.168.1.1) 56(84) bytes of data.
64 bytes from 192.168.1.1: icmp_seq=1 ttl=64 time=1.24 ms
64 bytes from 192.168.1.1: icmp_seq=2 ttl=64 time=0.672 ms
64 bytes from 192.168.1.1: icmp_seq=3 ttl=64 time=0.855 ms
--- 192.168.1.1 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2002 ms
rtt min/avg/max/mdev = 0.672/0.923/1.243/0.239 ms
```

#### 2. Sniff traffic on the hub FortiGate:

```
# diagnose sniffer packet any 'icmp or (udp and port 4789)' 4 0
interfaces=[any] filters=[icmp or (udp and port 4789)]
15:00:01.438230 SPOKES in 192.168.255.2.4790 -> 192.168.255.1.4789: udp 106
15:00:01.438256 SPOKES_VXLAN1 in 192.168.1.2 -> 192.168.1.1: icmp: echo request
15:00:01.438260 port1 out 192.168.1.2 -> 192.168.1.1: icmp: echo request
15:00:01.438532 port1 in 192.168.1.1 -> 192.168.1.2: icmp: echo reply
15:00:01.438536 SPOKES_VXLAN1 out 192.168.1.1 -> 192.168.1.2: icmp: echo reply
15:00:01.438546 SPOKES out 192.168.255.1.4851 -> 192.168.255.2.4789: udp 106
```


## VXLAN troubleshooting

The following commands can be used to troubleshoot VXLAN connectivity:

- `diagnose sys vxlan fdb list <VXLAN_interface>`
- `diagnose sys vxlan fdb stat <VXLAN_interface>`
- `diagnose netlink brctl name host <switch_interface>`
- `diagnose debug sniffer packet any 'udp and port 4789' 4 0 1`
- `diagnose debug enable`
- `diagnose debug flow filter port 4789`
- `diagnose debug flow trace start <repeat_#>`

## Topology

The following topology is used as an example configuration to demonstrate VXLAN troubleshooting steps.

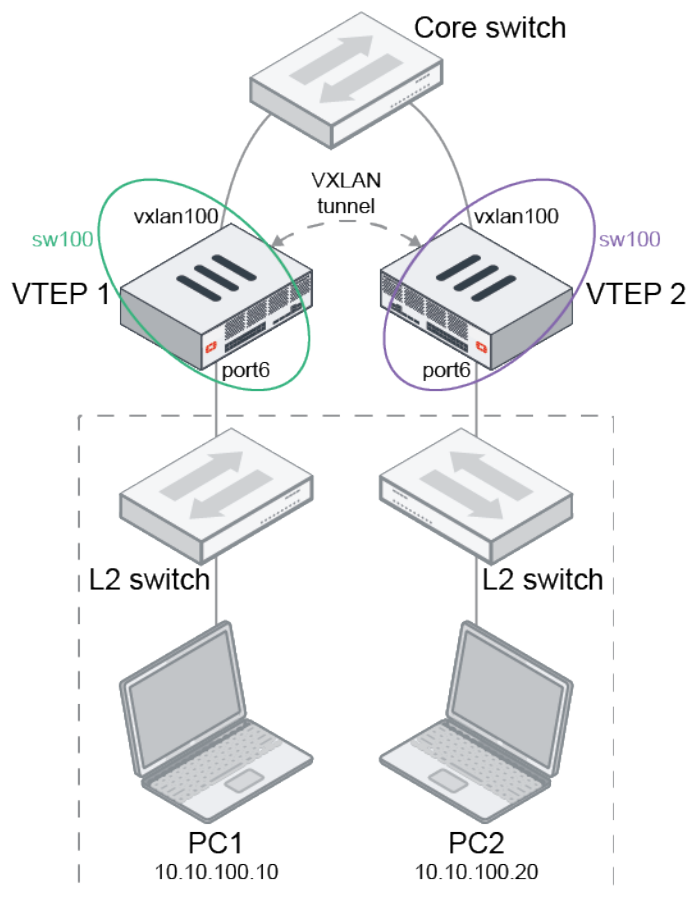

In this example, two FortiGates are configured as VXLAN tunnel endpoints (VTEPs). A VXLAN is configured to allow L2 connectivity between the networks behind each FortiGate. The VXLAN interface and port6 are placed on the same L2 network using a software switch (sw100). An L2 network is formed between PC1 and PC2.

The VTEPs have the following MAC address tables:

Interface/endpoint	VTEP 1	VTEP 2
vxlan100	7e:f2:d1:84:75:0f	ca:fa:31:23:8d:c1
port6	00:0c:29:4e:5c:1c	00:0c:29:d0:3e:0d
sw100	00:0c:29:4e:5c:1c	00:0c:29:d0:3e:0d

The MAC address of PC1 is 00:0c:29:90:4f:bf. The MAC address of PC2 is 00:0c:29:f0:88:2c.

### To configure the VTEP 1 FortiGate:

#### 1. Configure the local interface:

```
config system vxlan
  edit "vxlan100"
    set interface "port2"
    set vni 100
    set remote-ip "192.168.2.87"
```

```
    next
end
```

## 2. Configure the interface settings:

```
config system interface
    edit "port2"
        set vdom "root"
        set ip 192.168.2.86 255.255.255.0
        set allowaccess ping https ssh http fabric
    next
    edit "vxlan100"
        set vdom "root"
        set type vxlan
        set interface "port2"
    next
end
```

## 3. Configure the software switch:

```
config system switch-interface
    edit "sw100"
        set vdom "root"
        set member "port6" "vxlan100"
    next
end
```

## 4. Configure the software switch interface settings:

```
config system interface
    edit "sw100"
        set vdom "root"
        set ip 10.10.100.86 255.255.255.0
        set allowaccess ping
        set type switch
        set device-identification enable
        set lldp-transmission enable
        set role lan
    next
end
```

## To configure the VTEP 2 FortiGate:

### 1. Configure the local interface:

```
config system vxlan
    edit "vxlan100"
        set interface "port2"
        set vni 100
        set remote-ip "192.168.2.86"
    next
end
```

### 2. Configure the interface settings:

```
config system interface
    edit "port2"
        set vdom "root"
        set ip 192.168.2.87 255.255.255.0
```

```
        set allowaccess ping https ssh snmp http
    next
    edit "vxlan100"
        set vdom "root"
        set type vxlan
        set interface "port2"
    next
end
```

### 3. Configure the software switch:

```
config system switch-interface
    edit "sw100"
        set vdom "root"
        set member "port6" "vxlan100"
    next
end
```

### 4. Configure the software switch interface settings:

```
config system interface
    edit "sw100"
        set vdom "root"
        set ip 10.10.100.87 255.255.255.0
        set allowaccess ping
        set type switch
        set device-identification enable
        set lldp-transmission enable
        set role lan
        set snmp-index 42
    next
end
```

## To run diagnostics and debugs:

### 1. Start a ping from PC1 10.10.100.10 to PC2 10.10.100.20:

```
C:\Users\fortidocs>ping 10.10.100.20

Pinging 10.10.100.20 with 32 bytes of data:
Reply from 10.10.100.20: bytes=32 time=2ms TTL=128
Reply from 10.10.100.20: bytes=32 time=1ms TTL=128
Reply from 10.10.100.20: bytes=32 time=1ms TTL=128
Reply from 10.10.100.20: bytes=32 time<1ms TTL=128

Ping statistics for 10.10.100.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 2ms, Average = 1ms
```

### 2. Verify the ARP table:

```
C:\Users\fortidocs>arp /a

Interface: 10.10.100.10 --- 0x21
    Internet Address      Physical Address      Type
    10.10.100.20          00-0c-29-f0-88-2c    dynamic
    10.10.100.86          00-0c-29-4e-5c-1c    dynamic
```



```

10.10.100.255      ff-ff-ff-ff-ff-ff      static
224.0.0.22        01-00-5e-00-00-16      static
224.0.0.252        01-00-5e-00-00-fc      static

```

### 3. Run diagnostics on the VTEP 1 FortiGate.

#### a. Verify the forwarding database of VXLAN interface vxlan100:

```

# diagnose sys vxlan fdb list vxlan100
mac=00:00:00:00:00:00 state=0x0082 remote_ip=192.168.2.87 port=4789 vni=100 ifindex=6
mac=00:0c:29:f0:88:2c state=0x0002 remote_ip=192.168.2.87 port=4789 vni=100 ifindex=6

total fdb num: 2

```

The MAC address 00:0c:29:f0:88:2c is learned from PC2 10.10.100.20.

#### b. Verify the summary of statistics from the VXLAN's forwarding database:

```

# diagnose sys vxlan fdb stat vxlan100
fdb_table_size=256 fdb_table_used=2 fdb_entry=2 fdb_max_depth=1 cleanup_idx=0
cleanup_timer=252

```

#### c. Verify the software switch's forwarding table:

```

# diagnose netlink brctl name host sw100
show bridge control interface sw100 host.
fdb: hash size=32768, used=6, num=6, depth=1, gc_time=4, ageing_time=3, simple=switch
Bridge sw100 host table

```

port	no	device	devname	mac	addr	ttl	attributes
1	7	port6	00:0c:29:4e:5c:1c		0	Local Static	
2	33	vxlan100	7e:f2:d1:84:75:0f		0	Local Static	
2	33	vxlan100	00:00:00:00:00:00		26	Hit (26)	
1	7	port6	00:0c:29:90:4f:bf		0	Hit (0)	
1	7	port6	00:0c:29:d0:3e:ef		7	Hit (7)	
2	33	vxlan100	00:0c:29:f0:88:2c		0	Hit (0)	

The MAC address of port6 is 00:0c:29:4e:5c:1c. The MAC address of vxlan100 is 7e:f2:d1:84:75:0f. The MAC address 00:0c:29:f0:88:2c of PC2 is learned from the remote network.

### 4. Run diagnostics on the VTEP 2 FortiGate.

#### a. Verify the forwarding database of VXLAN interface vxlan100:

```

# diagnose sys vxlan fdb list vxlan100
mac=00:00:00:00:00:00 state=0x0082 remote_ip=192.168.2.86 port=4789 vni=100 ifindex=6
mac=00:0c:29:90:4f:bf state=0x0002 remote_ip=192.168.2.86 port=4789 vni=100 ifindex=6

total fdb num: 2

```

The MAC address 00:0c:29:90:4f:bf is learned from PC1 10.10.100.10.

#### b. Verify the summary of statistics from the VXLAN's forwarding database:

```

# diagnose sys vxlan fdb stat vxlan100
fdb_table_size=256 fdb_table_used=2 fdb_entry=2 fdb_max_depth=1 cleanup_idx=0
cleanup_timer=304

```

#### c. Verify the software switch's forwarding table:

```

# diagnose netlink brctl name host sw100
show bridge control interface sw100 host.
fdb: hash size=32768, used=5, num=5, depth=1, gc_time=4, ageing_time=3, simple=switch
Bridge sw100 host table

```

port	no	device	devname	mac	addr	ttl	attributes
2	50	vxlan100		00:00:00:00:00:00		10	Hit(10)
2	50	vxlan100		<b>00:0c:29:90:4f:bf</b>		2	Hit(2)
1	7	port6		00:0c:29:d0:3e:0d		0	Local Static
2	50	vxlan100		ca:fa:31:23:8d:c1		0	Local Static
1	7	port6		00:0c:29:f0:88:2c		0	Hit(0)

The MAC address of port6 is 00:0c:29:d0:3e:0d. The MAC address of vxlan100 is ca:fa:31:23:8d:c1. The MAC address 00:0c:29:90:4f:bf of PC1 is learned from the remote network.

**5. Perform a sniffer trace on the VTEP 1 FortiGate to view the life of the packets as they pass through the FortiGate:**

```
# diagnose sniffer packet any 'host 10.10.100.20 or (udp and host 192.168.2.87)' 4 0 1
Using Original Sniffing Mode
interfaces=[any]
filters=[host 10.10.100.20 or (udp and host 192.168.2.87)]
2022-11-04 14:35:18.567602 port6 in arp who-has 10.10.100.20 tell 10.10.100.10
2022-11-04 14:35:18.567629 vxlan100 out arp who-has 10.10.100.20 tell 10.10.100.10
2022-11-04 14:35:18.567642 port2 out 192.168.2.86.4804 -> 192.168.2.87.4789: udp 68
2022-11-04 14:35:18.567658 sw100 in arp who-has 10.10.100.20 tell 10.10.100.10
2022-11-04 14:35:18.568239 port2 in 192.168.2.87.4789 -> 192.168.2.86.4789: udp 68
2022-11-04 14:35:18.568263 vxlan100 in arp reply 10.10.100.20 is-at 00:0c:29:f0:88:2c
2022-11-04 14:35:18.568272 port6 out arp reply 10.10.100.20 is-at 00:0c:29:f0:88:2c
2022-11-04 14:35:18.568425 port6 in 10.10.100.10 -> 10.10.100.20: icmp: echo request
2022-11-04 14:35:18.568435 vxlan100 out 10.10.100.10 -> 10.10.100.20: icmp: echo request
2022-11-04 14:35:18.568443 port2 out 192.168.2.86.4805 -> 192.168.2.87.4789: udp 82
2022-11-04 14:35:18.568912 port2 in 192.168.2.87.4789 -> 192.168.2.86.4789: udp 68
2022-11-04 14:35:18.568925 vxlan100 in arp who-has 10.10.100.10 tell 10.10.100.20
2022-11-04 14:35:18.568935 port6 out arp who-has 10.10.100.10 tell 10.10.100.20
2022-11-04 14:35:18.568945 sw100 in arp who-has 10.10.100.10 tell 10.10.100.20
2022-11-04 14:35:18.569070 port6 in arp reply 10.10.100.10 is-at 00:0c:29:90:4f:bf
2022-11-04 14:35:18.569076 vxlan100 out arp reply 10.10.100.10 is-at 00:0c:29:90:4f:bf
2022-11-04 14:35:18.569081 port2 out 192.168.2.86.4806 -> 192.168.2.87.4789: udp 68
2022-11-04 14:35:18.569417 port2 in 192.168.2.87.4789 -> 192.168.2.86.4789: udp 82
2022-11-04 14:35:18.569427 vxlan100 in 10.10.100.20 -> 10.10.100.10: icmp: echo reply
2022-11-04 14:35:18.569431 port6 out 10.10.100.20 -> 10.10.100.10: icmp: echo reply
```

In the output, the following packet sequence is seen on the FortiGate:

- a. The FortiGate receives an ARP request from PC1 10.10.100.10 on port6.
  - b. The ARP request is forwarded to vxlan100 on the same software switch, where it gets encapsulated and sent out as a UDP port 4789 packet on port2.
  - c. A reply is received on port2 from the remote VTEP with the ARP response encapsulated in UDP port 4789 again.
  - d. The ARP reply is forwarded back out of port6 to PC1.
  - e. PC1 sends the ICMP request using the same steps.
- 6. Perform the same sniffer trace filter with a level 6 verbose level. In this example, the packet capture is converted into a Wireshark file.**

No.	Time	Source	Destination	Protocol	Length	Info
1	21:46:13.018875	Vmware_90:4f:bf	Broadcast	ARP	60	Who has 10.10.100.20? Tell 10.10.100.10
2	21:46:13.018917	Vmware_90:4f:bf	Broadcast	ARP	60	Who has 10.10.100.20? Tell 10.10.100.10
3	21:46:13.018934	Vmware_90:4f:bf	00:00:00_00:00:00	ARP	60	Who has 10.10.100.20? Tell 10.10.100.10
4	21:46:13.018950	Vmware_90:4f:bf	Broadcast	ARP	110	Who has 10.10.100.20? Tell 10.10.100.10
5	21:46:13.018978	Vmware_90:4f:bf	Broadcast	ARP	60	Who has 10.10.100.20? Tell 10.10.100.10
6	21:46:13.019528	Vmware_f0:88:2c	Vmware_90:4f:bf	ARP	110	10.10.100.20 is at 00:0c:29:f0:88:2c
7	21:46:13.019556	Vmware_f0:88:2c	00:00:00_00:00:01	ARP	60	10.10.100.20 is at 00:0c:29:f0:88:2c
8	21:46:13.019566	Vmware_f0:88:2c	00:00:00_00:00:00	ARP	60	10.10.100.20 is at 00:0c:29:f0:88:2c
9	21:46:13.019696	10.10.100.10	10.10.100.20	ICMP	74	Echo (ping) request id=0x0001, seq=28/7168, ttl=128 (no response)
10	21:46:13.019703	10.10.100.10	10.10.100.20	ICMP	74	Echo (ping) request id=0x0001, seq=28/7168, ttl=128 (reply in progress)
11	21:46:13.019709	10.10.100.10	10.10.100.20	ICMP	124	Echo (ping) request id=0x0001, seq=28/7168, ttl=128 (reply in progress)

Frame 4: 110 bytes on wire (880 bits), 110 bytes captured (880 bits)	
Ethernet II, Src: Vmware_4e:5c:f4 (00:0c:29:4e:5c:f4), Dst: 00:00:00_00:00:00 (00:00:00:00:00:00)	
Internet Protocol Version 4, Src: 192.168.2.86, Dst: 192.168.2.87	
User Datagram Protocol, Src Port: 4839, Dst Port: 4789	
Virtual eXtensible Local Area Network	
Flags: 0x0000, VXLAN Network ID (VNI)	
Group Policy ID: 0	
VXLAN Network Identifier (VNI): 100	
Reserved: 0	
Ethernet II, Src: Vmware_90:4f:bf (00:0c:29:90:4f:bf), Dst: Broadcast (ff:ff:ff:ff:ff:ff)	
Address Resolution Protocol (request)	

```

0000  00 00 00 00 00 00 00 00 29 4e 5c f4 08 00 45 00  .....N\...E.
0010  00 60 00 ab 00 00 40 11 93 e4 c8 a8 02 56 c0 a8  ....@.....V.
0020  02 57 12 e7 12 b5 00 4c 02 c6 08 00 00 00 00 00  W....L.....
0030  00 00 ff ff ff ff ff ff 00 0c 29 90 4f bf 00 06  .....O...
0040  00 01 08 00 06 04 00 01 00 0c 29 90 4f bf 0a 0a  .....O...
0050  64 0a 0a 00 00 00 00 00 0a 0a 64 14 00 00 00 00  d.....d....
0060  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00  .....

```

The packet that leaves the physical port2 is encapsulated in UDP and has a VXLAN header with VNI 100 as the identifier. There is an additional 50 B overhead of the UDP encapsulated VXLAN packets as opposed to the unencapsulated packets (for example, packet 4 versus packets 1 and 2).

## DNS

Domain name system (DNS) is used by devices to locate websites by mapping a domain name to a website's IP address.

A FortiGate can serve different roles based on user requirements:

- A FortiGate can control what DNS server a network uses.
- A FortiGate can function as a DNS server.

FortiGuard Dynamic DNS (DDNS) allows a remote administrator to access a FortiGate's Internet-facing interface using a domain name that remains constant even when its IP address changes.

FortiOS supports DNS configuration for both IPv4 and IPv6 addressing. When a user requests a website, the FortiGate looks to the configured DNS servers to provide the IP address of the website in order to know which server to contact to complete the transaction.

The FortiGate queries the DNS servers whenever it needs to resolve a domain name into an IP address, such as for NTP or web servers defined by their domain names.

The following topics provide information about DNS:

- [Important DNS CLI commands on page 238](#)
- [DNS domain list on page 241](#)
- [FortiGate DNS server on page 242](#)
- [DDNS on page 245](#)
- [DNS latency information on page 248](#)
- [DNS over TLS and HTTPS on page 250](#)
- [DNS troubleshooting on page 255](#)

## Important DNS CLI commands

DNS settings can be configured with the following CLI command:

```
config system dns
    set primary <ip_address>
    set secondary <ip_address>
    set protocol {cleartext dot doh}
    set ssl-certificate <string>
    set server-hostname <hostname>
    set domain <domains>
    set ip6-primary <ip6_address>
    set ip6-secondary <ip6_address>
    set timeout <integer>
    set retry <integer>
    set dns-cache-limit <integer>
    set dns-cache-ttl <integer>
    set cache-notfound-responses {enable | disable}
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
    set source-ip <class_ip>
    set server-select-method {least-rtt | failover}
    set alt-primary <ip_address>
    set alt-secondary <ip_address>
    set log {disable |error | all}
    set fqdn-cache-ttl <integer>
    set fqdn-min-refresh <integer>

end
```

For a FortiGate with multiple logical CPUs, you can set the DNS process number from 1 to the number of logical CPUs. The default DNS process number is 1.

```
config system global
    set dnsproxy-worker-count <integer>
end
```

## DNS protocols

The following DNS protocols can be enabled:

- **cleartext:** Enable clear text DNS over port 53 (default).
- **dot:** Enable DNS over TLS.
- **doh:** Enable DNS over HTTPS.

For more information, see [DNS over TLS and HTTPS on page 250](#).

## cache-notfound-responses

When enabled, any DNS requests that are returned with **NOT FOUND** can be stored in the cache. The DNS server is not asked to resolve the host name for **NOT FOUND** entries. By default, this option is disabled.

## dns-cache-limit

Set the number of DNS entries that are stored in the cache (0 to 4294967295, default = 5000). Entries that remain in the cache provide a quicker response to requests than going out to the Internet to get the same information.

## dns-cache-ttl

The duration that the DNS cache retains information, in seconds (60 to 86400 (1 day), default = 1800).

## fqdn-cache-ttl

FQDN cache time to live (TTL), in seconds (0 - 86400, default = 0).

This is the amount of time an FQDN's address record can live if not refreshed. This setting applies globally, across all VDOMs, to FQDNs that have unspecified firewall address `cache-ttl` settings. If the `cache-ttl` value is configured for an FQDN address, it will supersede the `fqdn-cache-ttl` setting for that address.

For example, configure the FQDN cache TTL on the global VDOM:

```
config system dns
    set fqdn-cache-ttl 2000
end

# diagnose test application dnsproxy 6

...
vfid=0 name=test.bb.com ver=IPv4 wait_list=0 timer=985 min_refresh=20 min_ttl=1000 cache_
ttl=2000 slot=-1 num=1 wildcard=0
    1.1.1.1 (ttl=1000:991:1991)
vfid=0 name=*.google.com ver=IPv4 wait_list=0 timer=0 min_refresh=20 min_ttl=0 cache_
ttl=2000 slot=-1 num=0 wildcard=
...
```

Change the cache TTL in a VDOM for a specific address:

```
config firewall address
    edit "test.bb.com"
        set cache-ttl 1000
    next
end

# sudo global diagnose test application dnsproxy 6

...
vfid=0 name=test.bb.com ver=IPv4 wait_list=0 timer=864 min_refresh=20 min_ttl=1000 cache_
ttl=1000 slot=-1 num=1 wildcard=0
    1.1.1.1 (ttl=1000:870:1870)
vfid=0 name=*.google.com ver=IPv4 wait_list=0 timer=0 min_refresh=20 min_ttl=0 cache_
ttl=2000 slot=-1 num=0 wildcard=1
...
```

## fqdn-min-refresh

FQDN cache minimum refresh time, in seconds (10 - 3600, default = 60).

An FQDN normally requeries for updates according to the lowest TTL interval returned from all the DNS records in a DNS response. The FortiGate has a default minimum refresh interval of 60 seconds; if a TTL interval is shorter than 60 seconds, it still requires a minimum of 60 seconds for the FortiGate to requery for new addresses. The `fqdn-min-refresh` setting changes the interval. The settings could be shortened if there are FQDNs that require fast resolutions based on a short TTL interval.

For example, if `fqdn_min_refresh` is unspecified:

```
# diagnose test application dnsproxy 6
worker idx: 0
vfid=0 name=www.aa.com ver=IPv4 wait_list=0 timer=29 min_refresh=60 min_ttl=20 cache_ttl=0
slot=-1 num=1 wildcard=0
      104.103.122.96 (ttl=20:0:0)
...
```

The `min_refresh` is the default values of 60 seconds. Although the `min_ttl` (TTL returned) value is shorter, the FortiGate only requeries for updates based on the `min_refresh` value. the `timer` value is the countdown until the next refresh is triggered. The FortiGate triggers a refresh slightly earlier than the larger of the `min_refresh` or `min_ttl` value.

If `fqdn_min_refresh` is configured:

```
config system dns
    set fqdn-min-refresh 20
end

# diagnose test application dnsproxy 6
worker idx: 0
vfid=0 name=www.aa.com ver=IPv4 wait_list=0 timer=12 min_refresh=20 min_ttl=20 cache_ttl=0
slot=-1 num=1 wildcard=0
      104.103.122.96 (ttl=20:18:18)
```

This setting can be used in combination with `fqdn-cache-ttl` and `cache-ttl` to send more frequent queries and store more resolved addresses in cache. This is useful in scenarios where the FQDN has many resolutions and changes very frequently.

## VDOM DNS

When the FortiGate is in multi-vdom mode, DNS is handled by the management VDOM. However in some cases, administrators may want to configure custom DNS settings on a non-management VDOM. For example, in a multi-tenant scenario, each VDOM might be occupied by a different tenant, and each tenant might require its own DNS server.

### To configure a custom VDOM within a non-management VDOM:

```
config vdom
edit <vdom>
config system vdom-dns
    set vdom-dns enable
    set primary <primary_DNS>
    set secondary <secondary_DNS>
    set protocol {cleartext dot doh}
    set ip6-primary <primary_IPv6_DNS>
    set ip6-secondary <secondary_IPv6_DNS>
    set source-ip <IP_address>
```

```
set interface-select-method {auto | sdwan | specify}
end
```

## DNS domain list

You can configure up to eight domains in the DNS settings using the GUI or the CLI.

When a FortiGate requests a URL that does not include an FQDN, FortiOS resolves the URL by traversing through the DNS domain list and performing a query for each domain until the first match is found.

By default, FortiGates use FortiGuard's DNS servers:

- Primary: 96.45.45.45
- Secondary: 96.45.46.46

You can also customize the DNS timeout time and the number of retry attempts.

### To configure a DNS domain list in the GUI:

1. Go to *Network > DNS*.
2. Set *DNS Servers* to *Specify*.
3. Configure the primary and secondary DNS servers as needed.
4. In the *Local Domain Name* field, enter the first domain (*sample.com* in this example).
5. Click the + to add more domains (*example.com* and *domainname.com* in this example). You can enter up to eight domains.
6. Configure additional DNS protocol and IPv6 settings as needed.

The screenshot displays the 'DNS Settings' configuration page in the FortiGate GUI. The 'DNS servers' section is set to 'Specify', with a primary server of 96.45.45.45 (10 ms) and a secondary server of 96.45.46.46 (10 ms). Under 'Local domain name', three domains are listed: sample.com, example.com, and domainname.com. The 'DNS Protocols' section shows DNS (UDP/53) enabled, while TLS (TCP/853) and HTTPS (TCP/443) are disabled. The 'IPv6 DNS Settings' section has empty fields for primary and secondary servers. On the right-hand side, the 'DNS Filter Rating Servers' section shows 173.243.140.53 (10 ms). Below this, the 'Additional Information' section contains links for API Preview, Edit in CLI, Local Out Setting, Setup guides, and Documentation (Online Help, Video Tutorials).

7. Click *Apply*.

### To configure a DNS domain list in the CLI:

```
config system dns
  set primary 96.45.45.45
  set secondary 96.45.46.46
```

```
set domain "sample.com" "example.com" "domainname.com"
end
```

## Verify the DNS configuration

In the following example, the local DNS server has the entry for *host1* mapped to the FQDN of *host1.sample.com*, and the entry for *host2* is mapped to the FQDN of *host2.example.com*.

### To verify that the DNS domain list is configured:

1. Open the FortiGate CLI.

2. Enter `execute ping host1`.

The system returns the following response:

```
PING host1.sample.com (1.1.1.1): 56 data bytes
```

As the request does not include an FQDN, FortiOS traverses the configured DNS domain list to find a match.

Because *host1* is mapped to the *host1.sample.com*, FortiOS resolves *host1* to *sample.com*, the first entry in the domain list.

3. Enter `execute ping host2`.

The system returns the following response:

```
PING host2.example.com (2.2.2.2): 56 data bytes
```

FortiOS traverses the domain list to find a match. It first queries *sample.com*, the first entry in the domain list, but does not find a match. It then queries the second entry in the domain list, *example.com*. Because *host2* is mapped to the FQDN of *host2.example.com*, FortiOS resolves *host2* to *example.com*.

## DNS timeout and retry settings

The DNS timeout and retry settings can be customized using the CLI.

```
config system dns
  set timeout <integer>
  set retry <integer>
end
```

<code>timeout &lt;integer&gt;</code>	The DNS query timeout interval, in seconds (1 - 10, default = 5).
<code>retry &lt;integer&gt;</code>	The number of times to retry the DNS query (0 - 5, default - 2).

## FortiGate DNS server

You can create local DNS servers for your network. Depending on your requirements, you can either manually maintain your entries (primary DNS server), or use it to refer to an outside source (secondary DNS server).

A local, primary DNS server requires that you to manually add all URL and IP address combinations. Using a primary DNS server for local services can minimize inbound and outbound traffic, and access time. Making it authoritative is not recommended, because IP addresses can change, and maintaining the list can become labor intensive.

A secondary DNS server refers to an alternate source to obtain URL and IP address combinations. This is useful when there is a primary DNS server where the entry list is maintained.



FortiGate as a DNS server also supports TLS and HTTPS connections to a DNS client. See [DNS over TLS and HTTPS on page 250](#) for details.

By default, DNS server options are not available in the FortiGate GUI.

### To enable DNS server options in the GUI:

1. Go to *System > Feature Visibility*.
2. Enable *DNS Database* in the *Additional Features* section.
3. Click *Apply*.

## Example configuration

This section describes how to create an unauthoritative primary DNS server. The interface mode is recursive so that, if the request cannot be fulfilled, the external DNS servers will be queried.

### To configure FortiGate as a primary DNS server in the GUI:

1. Go to *Network > DNS Servers*.
2. In the *DNS Database* table, click *Create New*.
3. Set *Type* to *Primary*.
4. Set *View* to *Shadow*.  
The *View* setting controls the accessibility of the DNS server. If you select *Public*, external users can access or use the DNS server. If you select *Shadow*, only internal users can use it.
5. Enter a *DNS Zone*, for example, *WebServer*.
6. Enter the *Domain Name* of the zone, for example, *fortinet.com*.
7. Enter the *Hostname* of the DNS server, for example, *Corporate*.
8. Enter the *Contact Email Address* for the administrator, for example, *admin@example.com*.
9. Disable *Authoritative*.

New DNS Zone

Type: **Primary** Secondary

View: **Shadow** Public

DNS Zone: WebServer

Domain Name: fortinet.com

Hostname of Primary DNS: Corporate

Contact Email Address: admin@example.com

TTL (86400 seconds): 1 Day(s), 0 Hour(s), 0 Minute(s), 0 Second(s)

Authoritative: ☐

DNS Forwarder:

DNS Entries

+ Create New Edit Delete

Type	Details	Status
No results		

OK Cancel

10. Add DNS entries:
  - a. In the *DNS Entries* table, click *Create New*.
  - b. Select a *Type*, for example *Address (A)*.

- c. Set the *Hostname*, for example *web.example.com*.

- d. Configure the remaining settings as needed. The options vary depending on the selected *Type*.

- e. Click **OK**.

11. Add more DNS entries as needed.

12. Click **OK**.

13. Enable DNS services on an interface:

- a. Go to *Network > DNS Servers*.
- b. In the *DNS Service on Interface* table, click *Create New*.
- c. Select the *Interface* for the DNS server, such as *wan2*.
- d. Set the *Mode* to *Recursive*.

- e. Click **OK**.

### To configure FortiGate as a primary DNS server in the CLI:

```
config system dns-database
  edit WebServer
    set domain example.com
    set type master
    set view shadow
    set ttl 86400
    set primary-name corporate
    set contact admin@example.com
    set authoritative disable
    config dns-entry
      edit 1
        set status enable
        set hostname web.example.com
        set type A
        set ip 192.168.21.12
      next
    end
  next
end

config system dns-server
  edit wan2
    set mode recursive
  next
end
```

## DDNS

If your external IP address changes regularly and you want a static domain name, you can configure the external interface to use a dynamic DNS (DDNS) service. This ensures that external users and customers can always connect to your company firewall. You can configure FortiGuard as the DDNS server using the GUI or CLI.


A license or subscription is not required to use the DDNS service, but configuring DDNS in the GUI is not supported if:

- The FortiGate model is a 1000-series or higher.
- The FortiGate is a VM.
- The DNS server is not using FortiGuard as the DNS.



FortiGate does not support DDNS when in transparent mode.

## Sample topology

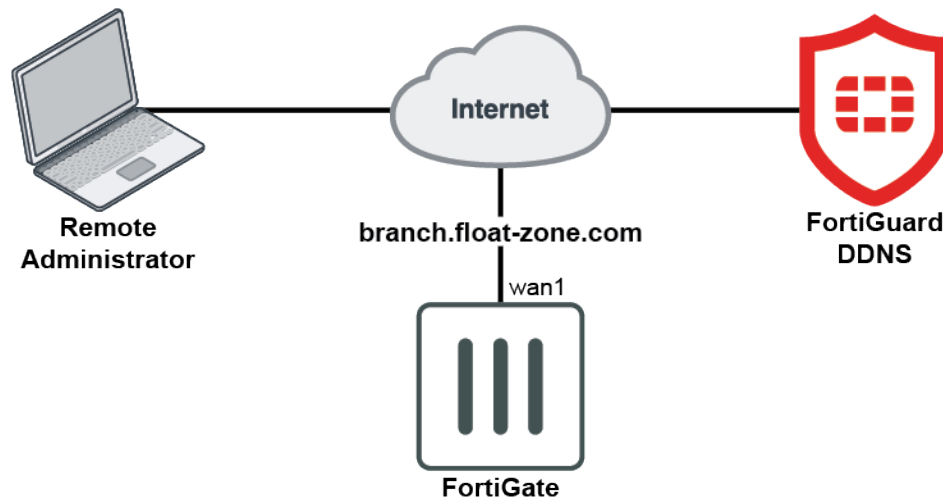

In this example, FortiGuard DDNS is enabled and the DDNS server is set to *float-zone.com*. Other DDNS server options include *fortiddns.com* and *fortidyndns.com*.

**To configure FortiGuard DDNS service as a DDNS server in the GUI:**

1. Go to *Network > DNS*
2. Enable *FortiGuard DDNS*.
3. Select the *Interface* with the dynamic connection.
4. Select the *Server* that you have an account with.

### 5. Enter your *Unique Location*.

### 6. Click *Apply*.

#### To configure the FortiGuard DDNS service as an IPv4 DDNS server in the CLI:

```
config system ddns
  edit 1
    set ddns-server FortiGuardDDNS
    set server-type ipv4
    set ddns-domain "branch.float-zone.com"
    set addr-type ipv4
    set use-public-ip enable
    set monitor-interface "wan1"
  next
end
```

#### To configure the FortiGuard DDNS service as an IPv6 DDNS server in the CLI:

```
config system ddns
  edit 1
    set ddns-server FortiGuardDDNS
    set server-type ipv6
    set ddns-domain "fgtatest001.float-zone.com"
    set addr-type ipv6
    set monitor-interface "wan1"
  next
end
```

## DDNS servers other than FortiGuard

If you do not have a FortiGuard subscription, or want to use a different DDNS server, you can configure a DDNS server for each interface. Only the first configured port appears in the GUI.

The available commands vary depending on the selected DDNS server.

#### To configure DDNS servers other than FortiGuard in the CLI:

```
config system ddns
  edit <DDNS_ID>
    set monitor-interface <external_interface>
```

```

        set ddns-server <ddns_server_selection>
        set server-type {ipv4 | ipv6}
        set ddns-server-addr <address>
        set addr-type ipv6 {ipv4 | ipv6}
    next
end

```

### To configure an IPv6 DDNS client with generic DDNS on port 3 in the CLI:

```

config system ddns
    edit 1
        set ddns-server genericDDNS
        set server-type ipv6
        set ddns-server-addr "2004:16:16:16::2" "16.16.16.2" "ddns.genericddns.com"
        set ddns-domain "test.com"
        set addr-type ipv6
        set monitor-interface "port3"
    next
end

```

## Refresh DDNS IP addresses

When using a public IP that is not assigned to the FortiGate, the FortiGate cannot trigger an update when the IP address changes. The FortiGate can be configured to refresh DDNS IP addresses by periodically checking the DDNS server at an update interval.

### To configure FortiGate to refresh DDNS IP addresses in the CLI:

```

config system ddns
    edit 1
        set use-public-ip enable
        set update-interval <seconds>
    next
end

```

When `update-interval` is set to 0:

- For FortiGuard DDNS, the interval is 300 seconds.
- For third part DDNS servers, the interval is assigned by the DDNS server.

## Disable cleartext

When `clear-text` is disabled, FortiGate uses the SSL connection to send and receive DDNS updates.

### To disable cleartext and set the SSL certificate in the CLI:

```

config system ddns
    edit 2
        set clear-text disable
        set ssl-certificate <cert_name>
    next
end

```

## DDNS update override

A DHCP server has an override command option that allows DHCP server communications to go through DDNS to perform updates for the DHCP client. This enforces a DDNS update of the A field every time even if the DHCP client does not request it. This allows support for the `allow`, `ignore`, and `deny client-updates` options.

### To enable DDNS update override in the CLI:

```
config system dhcp server
    edit 1
        set ddns-update enable
        set ddns-update-override enable
        set ddns-server-ip <ddns_server_ip>
        set ddns-zone <ddns_zone>
    next
end
```

## Troubleshooting

### To debug DDNS:

```
# diagnose debug application ddnsd -1
# diagnose debug enable
```

### To check if a DDNS server is available:

```
# diagnose test application ddnsd 3
```

#### Not available:

```
FortiDDNS status:
ddns_ip=0.0.0.0, ddns_ip6=::, ddns_port=443 svr_num=0 domain_num=0
```

#### Available:

```
FortiDDNS status:
ddns_ip=208.91.113.230, ddns_ip6=::, ddns_port=443 svr_num=1 domain_num=3
svr[0]= 208.91.113.230
domain[0]= fortiddns.com
domain[1]= fortidyndns.com
domain[2]= float-zone.com
```

## DNS latency information

High latency in DNS traffic can result in an overall sluggish experience for end-users. In the *DNS Settings* pane, you can quickly identify DNS latency issues in your configuration.

Go to *Network > DNS* to view DNS latency information in the right side bar. If you use FortiGuard DNS, latency information for DNS, DNS filter, web filter, and outbreak prevention servers is also visible. Hover your pointer over a latency value to see when it was last updated.

**DNS Settings**

Use FortiGuard Servers [Specify](#) Updated: 14:21:14

Primary DNS server 8.8.8.8 10 ms

Secondary DNS server 96.45.46.46 10 ms

Local domain name

**DNS Protocols**

DNS (UDP/53) ☒

TLS (TCP/853) ☐

HTTPS (TCP/443) ☐

**IPv6 DNS Settings**

Primary DNS server ::

Secondary DNS server ::

**DNS Filter Rating Servers**

173.243.140.53 10 ms

**Additional Information**

[API Preview](#)

[Edit in CLI](#)

[Local Out Setting](#)

**Setup guides**

[DNS Local Domain List](#)

[Using FortiGate as a DNS Server](#)

[FortiGuard DDNS](#)

**Documentation**

[Online Help](#)

[Video Tutorials](#)

[Apply](#)

### To view DNS latency information using the CLI:

```
# diagnose test application dnsproxy 2
worker idx: 0
worker: count=1 idx=0
retry_interval=500 query_timeout=1495
DNS latency info:
vfid=0 server=2001::1 latency=1494 updated=73311
vfid=0 server=96.45.46.46 latency=1405 updated=2547
vfid=0 server=8.8.8.8 latency=19 updated=91
SDNS latency info:
vfid=0 server=173.243.140.53 latency=1 updated=707681
DNS_CACHE: alloc=35, hit=26
RATING_CACHE: alloc=1, hit=49
DNS UDP: req=66769 res=63438 fwd=83526 alloc=0 cmp=0 retrans=16855 to=3233
         cur=111 switched=8823467 num_switched=294 v6_cur=80 v6_switched=7689041 num_v6_
switched=6
         ftg_res=8 ftg_fwd=8 ftg_retrans=0
DNS TCP: req=0, res=0, fwd=0, retrans=0 alloc=0, to=0
FQDN: alloc=45 nl_write_cnt=9498 nl_send_cnt=21606 nl_cur_cnt=0
Botnet: searched=57 hit=0 filtered=57 false_positive=0
```

### To view the latency from web filter and outbreak protection servers using the CLI:

```
# diagnose debug rating
Locale : english

Service : Web-filter
Status : Enable
License : Contract

Service : Antispam
Status : Disable

Service : Virus Outbreak Prevention
Status : Disable

-- Server List (Tue Jan 22 08:03:14 2019) --
```

IP	Weight	RTT	Flags	TZ	Packets	Curr	Lost	Total	Lost	Updated	Time
173.243.138.194 2019	10	0	DI	-8	700	0		2		Tue Jan 22	08:02:44
173.243.138.195 2019	10	0		-8	698	0		4		Tue Jan 22	08:02:44
173.243.138.198 2019	10	0		-8	698	0		4		Tue Jan 22	08:02:44
173.243.138.196 2019	10	0		-8	697	0		3		Tue Jan 22	08:02:44
173.243.138.197 2019	10	1		-8	694	0		0		Tue Jan 22	08:02:44
96.45.33.64 2019	10	22	D	-8	701	0		6		Tue Jan 22	08:02:44
64.26.151.36 2019	40	62		-5	704	0		10		Tue Jan 22	08:02:44
64.26.151.35 2019	40	62		-5	703	0		9		Tue Jan 22	08:02:44
209.222.147.43 2019	40	70	D	-5	696	0		1		Tue Jan 22	08:02:44
66.117.56.42 2019	40	70		-5	697	0		3		Tue Jan 22	08:02:44
66.117.56.37 2019	40	71		-5	702	0		9		Tue Jan 22	08:02:44
65.210.95.239 2019	40	74		-5	695	0		1		Tue Jan 22	08:02:44
65.210.95.240 2019	40	74		-5	695	0		1		Tue Jan 22	08:02:44
45.75.200.88 2019	90	142		0	706	0		12		Tue Jan 22	08:02:44
45.75.200.87 2019	90	155		0	714	0		20		Tue Jan 22	08:02:44
45.75.200.85 2019	90	156		0	711	0		17		Tue Jan 22	08:02:44
45.75.200.86 2019	90	159		0	704	0		10		Tue Jan 22	08:02:44
62.209.40.72 2019	100	157		1	701	0		7		Tue Jan 22	08:02:44
62.209.40.74 2019	100	173		1	705	0		11		Tue Jan 22	08:02:44
62.209.40.73 2019	100	173		1	699	0		5		Tue Jan 22	08:02:44
121.111.236.179 2019	180	138		9	706	0		12		Tue Jan 22	08:02:44
121.111.236.180 2019	180	138		9	704	0		10		Tue Jan 22	08:02:44

## DNS over TLS and HTTPS

DNS over TLS (DoT) is a security protocol for encrypting and encapsulating DNS queries and responses over the TLS protocol. DoT increases user privacy and security by preventing eavesdropping and manipulation of DNS data via man-in-the-middle attacks. Similarly, DNS over HTTPS (DoH) provides a method of performing DNS resolution over a secure HTTPS connection. DoT and DoH are supported in explicit mode where the FortiGate acts as an explicit DNS server that listens for DoT and DoH requests. Local-out DNS traffic over TLS and HTTPS is also supported.



## Basic configurations for enabling DoT and DoH for local-out DNS queries

Before enabling DoT or DoH, ensure that they are supported by the DNS servers. The legacy FortiGuard DNS servers (208.91.112.53 and 208.91.112.52) do not support DoT or DoH queries, and will drop these packets. At times, the latency status of the DNS servers might also appear high or unreachable.

Disabling DoT and DoH is recommended when they are not supported by the DNS servers.

### To enable DoT and DoH DNS in the GUI:

1. Go to *Network > DNS*.
2. Enter the primary and secondary DNS server addresses.
3. In the *DNS Protocols* section, enable *TLS (TCP/853)* and *HTTPS (TCP/443)*.

4. Configure the other settings as needed.
5. Click *Apply*.

### To enable DoT and DoH DNS in the CLI:

```
config system dns
    set primary 1.1.1.1
    set secondary 1.0.0.1
    set protocol {cleartext dot doh}
end
```

### To enable DoH on the DNS server in the GUI:

1. Go to *Network > DNS Servers*.
2. In the *DNS Service on Interface* section, edit an existing interface, or create a new one.
3. Select a *Mode*, and *DNS Filter* profile.

#### 4. Enable *DNS over HTTPS*.

Edit DNS Service

Interface

port1

Mode

Recursive
Non-Recursive
Forward to System DNS

DNS Filter

DNS dnsfilter

DNS over HTTPS

OK
Cancel


#### 5. Click *OK*.

#### To enable DoH on the DNS server in the CLI:

```
config system dns-server
  edit "port1"
    set dnsfilter-profile "dnsfilter"
    set doh enable
  next
end
```

## Examples

The following examples demonstrate how configure DNS settings to support DoT and DoH queries made to the FortiGate.

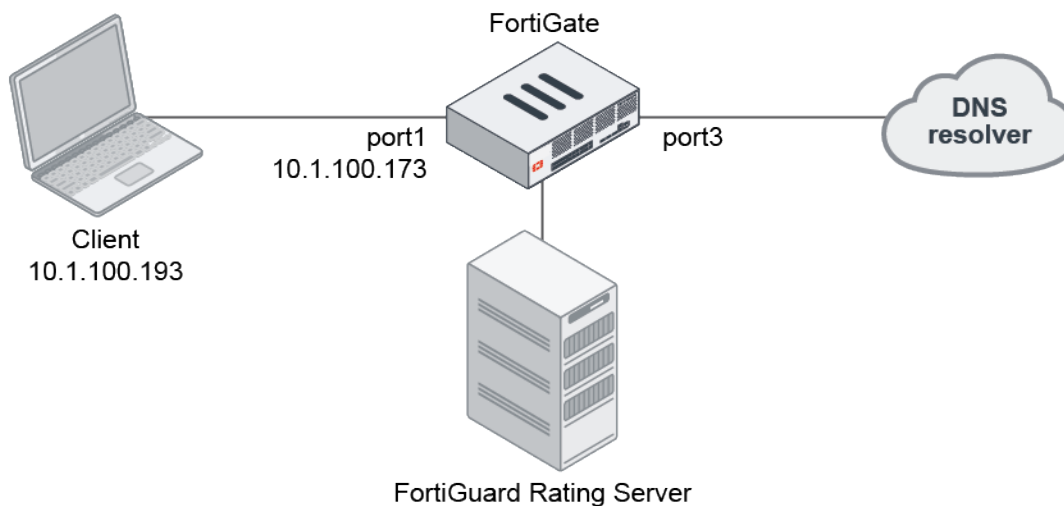

## DoT

The following example uses a DNS filter profile where the education category is blocked.

#### To enable scanning DoT traffic in explicit mode with a DNS filter:

##### 1. Configure the DNS settings:

```
config system dns
  set primary 1.1.1.1
```

```

        set secondary 1.0.0.1
    set protocol dot
end

```

## 2. Configure the DNS filter profile:

```

config dnsfilter profile
    edit "dnsfilter"
        config ftgd-dns
            config filters
                edit 1
                    set category 30
                    set action block
                next
            end
        end
    next
end

```

## 3. Configure the DNS server settings:

```

config system dns-server
    edit "port1"
        set dnsfilter-profile "dnsfilter"
    next
end

```

## 4. Send a DNS query over TLS (this example uses kdig on an Ubuntu client) using the FortiGate as the DNS server. The **www.ubc.ca** domain belongs to the education category:

```

root@client:/tmp# kdig -d @10.1.100.173 +tls +header +all www.ubc.ca
;; DEBUG: Querying for owner(www.ubc.ca.), class(1), type(1), server(10.1.100.173), port
(853), protocol(TCP)
;; DEBUG: TLS, received certificate hierarchy:
;; DEBUG: #1,
C=US,ST=California,L=Sunnyvale,O=Fortinet,OU=FortiGate,CN=FG3H1E5818903681,EMAIL=support
@fortinet.com
;; DEBUG:      SHA-256 PIN: Xhkpv9ABEhxDLtWG+lGEndNrBR7BlxjRYlGn2ltlkb8=
;; DEBUG: #2, C=US,ST=California,L=Sunnyvale,O=Fortinet,OU=Certificate
Authority,CN=fortinet-subca2001,EMAIL=support@fortinet.com
;; DEBUG:      SHA-256 PIN: 3T8EqFBjpRSkxQNPfagjUNeEUghXOEYp904ROlJM8yo=
;; DEBUG: #3, C=US,ST=California,L=Sunnyvale,O=Fortinet,OU=Certificate
Authority,CN=fortinet-ca2,EMAIL=support@fortinet.com
;; DEBUG:      SHA-256 PIN: /QfV4N3k5oxQR5RHtW/rbn/HrHgKpMLN0DEaeXY5yPg=
;; DEBUG: TLS, skipping certificate PIN check
;; DEBUG: TLS, skipping certificate verification
;; TLS session (TLS1.2)-(ECDHE-RSA-SECP256R1)-(AES-256-GCM)
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 56719
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.ubc.ca.                IN      A

;; ANSWER SECTION:
www.ubc.ca.                60     IN     A         208.91.112.55

;; Received 44 B
;; Time 2021-03-12 23:11:27 PST

```

```
;; From 10.1.100.173@853(TCP) in 0.2 ms
root@client:/tmp#
```

The IP returned by the FortiGate for `ubc.ca` belongs to the FortiGuard block page, so the query was blocked successfully.

## DoH

The following example uses a DNS filter profile where the education category is blocked.

### To configure scanning DoH traffic in explicit mode with a DNS filter:

#### 1. Configure the DNS settings:

```
config system dns
    set primary 1.1.1.1
    set secondary 1.0.0.1
    set protocol doh
end
```

#### 2. Configure the DNS filter profile:

```
config dnsfilter profile
    edit "dnsfilter"
        config ftgd-dns
            config filters
                edit 1
                    set category 30
                    set action block
                next
            end
        end
    next
end
```


#### 3. Configure the DNS server settings:

```
config system dns-server
    edit "port1"
        set dnsfilter-profile "dnsfilter"
        set doh enable
    next
end
```

#### 4. In your browser, enable DNS over HTTPS.

#### 5. On your computer, edit the TCP/IP settings to use the FortiGate interface address as the DNS server.

#### 6. In your browser, go to a website in the education category (`www.ubc.ca`). The website is redirected to the block page.

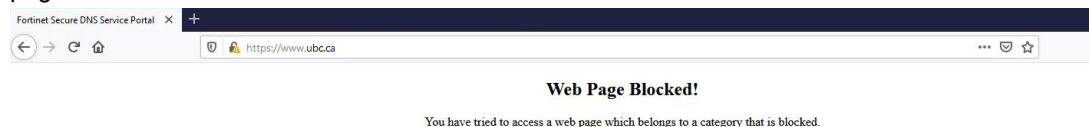

## DNS troubleshooting

The following diagnose command can be used to collect DNS debug information. If you do not specify worker ID, the default worker ID is 0.

```
# diagnose test application dnsproxy
worker idx: 0
1. Clear DNS cache
2. Show stats
3. Dump DNS setting
4. Reload FQDN
5. Requery FQDN
6. Dump FQDN
7. Dump DNS cache
8. Dump DNS DB
9. Reload DNS DB
10. Dump secure DNS policy/profile
11. Dump Botnet domain
12. Reload Secure DNS setting
13. Show Hostname cache
14. Clear Hostname cache
15. Show SDNS rating cache
16. Clear SDNS rating cache
17. DNS debug bit mask
18. DNS debug obj mem
99. Restart dnsproxy worker
```

### To view useful information about the ongoing DNS connection:

```
# diagnose test application dnsproxy 3
worker idx: 0
vdom: root, index=0, is primary, vdom dns is disabled, mip-169.254.0.1 dns_log=1 tls=0 cert=
dns64 is disabled
vdom: vdom1, index=1, is primary, vdom dns is enabled, mip-169.254.0.1 dns_log=1 tls=0 cert=
dns64 is disabled
dns-server:96.45.45.220:45 tz=-480 tls=0 req=0 to=0 res=0 rt=0 rating=1 ready=0 timer=37
probe=9 failure=0 last_failed=0
dns-server:8.8.8.8:53 tz=0 tls=0 req=73 to=0 res=73 rt=5 rating=0 ready=1 timer=0 probe=0
failure=0 last_failed=0
dns-server:65.39.139.63:53 tz=0 tls=0 req=39 to=0 res=39 rt=1 rating=0 ready=1 timer=0
probe=0 failure=0 last_failed=0
dns-server:62.209.40.75:53 tz=60 tls=0 req=0 to=0 res=0 rt=0 rating=1 ready=0 timer=37
probe=9 failure=0 last_failed=0
dns-server:209.222.147.38:53 tz=-300 tls=0 req=0 to=0 res=0 rt=0 rating=1 ready=0 timer=37
probe=9 failure=0 last_failed=0
dns-server:173.243.138.221:53 tz=-480 tls=0 req=0 to=0 res=0 rt=0 rating=1 ready=0 timer=37
probe=9 failure=0 last_failed=0
dns-server:45.75.200.89:53 tz=0 tls=0 req=0 to=0 res=0 rt=0 rating=1 ready=0 timer=37
probe=9 failure=0 last_failed=0
DNS_CACHE: hash-size=2048, ttl=1800, min-ttl=60, max-num=-1
DNS FD: udp_s=12 udp_c=17:18 ha_c=22 unix_s=23, unix_nb_s=24, unix_nc_s=25
        v6_udp_s=11, v6_udp_c=20:21, snmp=26, redir=13, v6_redir=14
DNS FD: tcp_s=29, tcp_s6=27, redir=31 v6_redir=32
FQDN: hash_size=1024, current_query=1024
DNS_DB: response_buf_sz=131072
LICENSE: expiry=2015-04-08, expired=1, type=2
```

```
FDG_SERVER:96.45.45.220:45
FGD_CATEGORY_VERSION:8
SERVER_LDB: gid=eb19, tz=-480, error_allow=0
FGD_REDIR_V4:208.91.112.55 FGD_REDIR_V6:
```

Important fields include:

tls	1 if the connection is TLS, 0 if the connection is not TLS.
rt	The round trip time of the DNS latency.
probe	The number of probes sent.

**To dump the second DNS worker's cache:**

```
diagnose test application dnsproxy 7 1
```

**To enable debug on the second worker:**

```
diagnose debug application dnsproxy -1 1
```

**To enable debug on all workers by specifying -1 as worker ID:**

```
diagnose debug application dnsproxy -1 -1
```

## Explicit and transparent proxies

This section contains instructions for configuring explicit and transparent proxies.

- [Explicit web proxy on page 257](#)
- [Transparent proxy on page 262](#)
- [FTP proxy on page 260](#)
- [Proxy policy addresses on page 265](#)
- [Proxy policy security profiles on page 272](#)
- [Explicit proxy authentication on page 276](#)
- [Transparent web proxy forwarding on page 282](#)
- [Upstream proxy authentication in transparent proxy mode on page 286](#)
- [Multiple dynamic header count on page 287](#)
- [Restricted SaaS access on page 290](#)
- [Explicit proxy and FortiGate Cloud Sandbox on page 298](#)
- [Proxy chaining on page 300](#)
- [WAN optimization SSL proxy chaining on page 305](#)
- [Agentless NTLM authentication for web proxy on page 313](#)
- [Multiple LDAP servers in Kerberos keytabs and agentless NTLM domain controllers on page 316](#)
- [Learn client IP addresses on page 317](#)
- [Explicit proxy authentication over HTTPS on page 318](#)
- [mTLS client certificate authentication on page 320](#)

- [CORS protocol in explicit web proxy when using session-based, cookie-enabled, and captive portal-enabled SAML authentication on page 325](#)
- [HTTP connection coalescing and concurrent multiplexing for explicit proxy on page 329](#)

## Explicit web proxy

Explicit web proxy can be configured on FortiGate for proxying HTTP and HTTPS traffic.

To deploy explicit proxy, individual client browsers can be manually configured to send requests directly to the proxy, or they can be configured to download proxy configuration instructions from a Proxy Auto-Configuration (PAC) file.

When explicit proxy is configured on an interface, the interface IP address can be used by client browsers to forward requests directly to the FortiGate. FortiGate also supports PAC file configuration.

### To configure explicit web proxy in the GUI:

1. Enable and configure explicit web proxy:
  - a. Go to *Network > Explicit Proxy*.
  - b. Enable *Explicit Web Proxy*.
  - c. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *8080*.
  - d. Configure the remaining settings as needed.

The screenshot shows the 'Explicit Proxy' configuration page in the FortiGate GUI. The 'Explicit Web Proxy' toggle is turned on. Under 'Listen on Interfaces', 'port2' is selected. 'IPv6 Explicit Proxy' is also enabled. For 'HTTP Port', the value '8080' is entered. 'HTTPS Port' is set to 'Use HTTP Port'. 'FTP over HTTP' is enabled, and 'FTP Port' is set to 'Use HTTP Port'. 'Proxy auto-config (PAC)' is enabled, and 'PAC Port' is set to 'Use HTTP Port'. The 'PAC File Content' section has 'Upload' and 'Download' buttons. 'Proxy FQDN' is set to '100D.qa'. 'Max HTTP request length' is set to '8 KB' and 'Max HTTP message length' is set to '32 KB'. 'Unknown HTTP version' is set to 'Best Effort'. 'Realm' is set to 'default'. 'Default Firewall Policy Action' is set to 'Deny'. 'Outgoing IP' and 'Outgoing IPv6' are both set to 'Same as Interface IP'. An 'Apply' button is located at the bottom right of the configuration area.

- e. Click *Apply*.
2. Create an explicit web proxy policy:
    - a. Go to *Policy & Objects > Proxy Policy*.
    - b. Click *Create New*.
    - c. Set *Proxy Type* to *Explicit Web* and *Outgoing Interface* to *port1*.
    - d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.

- e. Click **OK** to create the policy.



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

### 3. Configure a client to use the FortiGate explicit proxy:

Set the FortiGate IP address as the proxy IP address in the browser, or use an automatic configuration script for the PAC file.

## To configure explicit web proxy in the CLI:

### 1. Enable and configure explicit web proxy:

```
config web-proxy explicit
    set status enable
    set ftp-over-http enable
    set socks enable
    set http-incoming-port 8080
    set ipv6-status enable
    set unknown-http-version best-effort
end
config system interface
    edit "port2"
        set vdom "vdom1"
        set ip 10.1.100.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
        set type physical
        set explicit-web-proxy enable
        set snmp-index 12
    end
next
end
```



## 2. Create an explicit web proxy policy:

```
config firewall proxy-policy
  edit 1
    set name "proxy-policy-explicit"
    set proxy explicit-web
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
    set logtraffic all
  next
end
```



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

## 3. Configure a client to use the FortiGate explicit web proxy:

Set the FortiGate IP address as the proxy IP address in the browser, or use an automatic configuration script for the PAC file.

## Downloading a PAC file using HTTPS

PAC files can be downloaded for an explicit proxy through the FortiGate's captive portal using HTTPS to ensure a secure download.

In this example, a Windows PC has an HTTPS URL configured in its proxy settings to download a PAC file from a FortiGate by using a download link, <https://cp.myqalab.local:7831/proxy.pac>, through a captive portal. Once the PAC file is securely downloaded using HTTPS, browsers installed on the PC can use the proxy in the PAC file to visit a website.

The global web proxy settings must be configured to use a customized SSL certificate because the default Fortinet\_Factory certificate will not be accepted by Windows due to security restrictions. The customized SSL certificate is used as the HTTPS server's certificate on the FortiGate. All CA certificates in the server certificate must be installed and trusted on the Windows PC.

### To download a PAC file using HTTPS:

#### 1. Configure the explicit web proxy to get a PAC file through HTTPS:

```
config web-proxy explicit
  set pac-file-server-status enable
  unset pac-file-server-port
  set pac-file-name "proxy.pac"
  set pac-file-data "function FindProxyForURL(url, host) {
    // testtest
    return \"PROXY 10.1.100.1:8080\";
  }
  set pac-file-through-https enable
end
```


2. Configure the captive portal to be used as an HTTPS server to provide the service to download the PAC file:

```
config authentication setting
    set captive-portal-type ip
    set captive-portal-ip 10.1.100.1
    set captive-portal-ssl-port 7831
end
```

3. Configure the global web proxy settings to use a customized SSL certificate:

```
config web-proxy global
    set ssl-cert "server_cert"
end
```

4. On the Windows PC, go to *Settings > Network & Internet > Proxy*.

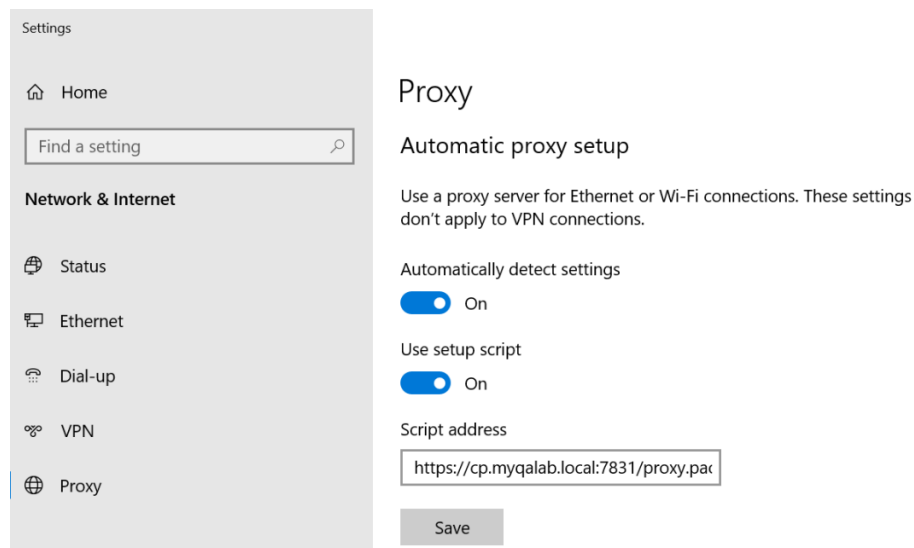

5. In the *Automatic proxy setup* section, click *Save* to trigger the PAC file download from the HTTPS URL.

## FTP proxy

FTP proxies can be configured on the FortiGate so that FTP traffic can be proxied. When the FortiGate is configured as an FTP proxy, FTP client applications should be configured to send FTP requests to the FortiGate.

### To configure explicit FTP proxy in the GUI:

1. Enable and configure explicit FTP proxy:
  - a. Go to *Network > Explicit Proxy*.
  - b. Enable *Explicit FTP Proxy*.
  - c. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *21*.
  - d. Configure the *Default Firewall Policy Action* as needed.

e. Click *Apply*.

2. Create an explicit FTP proxy policy:

- a. Go to *Policy & Objects > Proxy Policy*.
- b. Click *Create New*.
- c. Set *Proxy Type* to *FTP* and *Outgoing Interface* to *port1*.
- d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, and *Action* to *ACCEPT*.

e. Click *OK* to create the policy.



This example creates a basic policy. If required, security profiles can be enabled.

3. Configure the FTP client application to use the FortiGate IP address.

**To configure explicit FTP proxy in the CLI:**

1. Enable and configure explicit FTP proxy:

```
config ftp-proxy explicit
    set status enable
    set incoming-port 21
end
config system interface
    edit "port2"
        set vdom "vdom1"
        set ip 10.1.100.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
        set type physical
        set explicit-ftp-proxy enable
```

```
        set snmp-index 12
    next
end
```

## 2. Create an explicit FTP proxy policy:

```
config firewall proxy-policy
    edit 4
        set name "proxy-policy-ftp"
        set proxy ftp
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
    next
end
```



This example creates a basic policy. If required, security profiles can be enabled.

---

## 3. Configure the FTP client application to use the FortiGate IP address.

## Transparent proxy

In a transparent proxy deployment, the user's client software, such as a browser, is unaware that it is communicating with a proxy.

Users request internet content as usual, without any special client configuration, and the proxy serves their requests. FortiGate also allows users to configure in transparent proxy mode.

To redirect HTTPS traffic, SSL inspection is required.



If the base firewall policy successfully redirects to the proxy policy then antivirus and web filter profiles configured on the firewall policy will not be applied. Security profiles should be configured on the proxy policy.

---

### To configure transparent proxy in the GUI:

1. Configure a regular firewall policy with HTTP redirect:
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Click *Create New*.
  - c. Name the policy appropriately, set the *Incoming Interface* to *port2*, and set the *Outgoing Interface* to *port1*.
  - d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, *Service* to *ALL*, and *Action* to *ACCEPT*.
  - e. Set *Inspection Mode* to *Proxy-based* and *SSL Inspection* to *deep-inspection*.

- f. Configure the remaining settings as needed.
- g. Click OK.



By default, HTTP redirect can only be enabled in the CLI. Enable *Policy Advanced Options* in *Feature Visibility* to configure it in the GUI. See [Feature visibility on page 2515](#) on page 1 for more information.

2. Configure a transparent proxy policy:
  - a. Go to *Policy & Objects > Proxy Policy*.
  - b. Click *Create New*.
  - c. Set *Proxy Type* to *Transparent Web*, set the *Incoming Interface* to *port2*, and set the *Outgoing Interface* to *port1*.
  - d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.

- e. Configure the remaining settings as needed.
- f. Click OK to create the policy.



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

3. No special configuration is required on the client to use FortiGate transparent proxy. As the client is using the FortiGate as its default gateway, requests will first hit the regular firewall policy, and then be redirected to the transparent proxy policy.

### To configure transparent proxy in the CLI:

1. Configure a regular firewall policy with HTTP redirect:

```
config firewall policy
  edit 1
    set name "LAN To WAN"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set inspection-mode proxy
    set http-policy-redirect enable
    set fsso disable
    set ssl-ssh-profile "deep-inspection"
    set nat enable
  next
end
```

2. Configure a transparent proxy policy:

```
config firewall proxy-policy
  edit 5
    set name "proxy-policy-transparent"
    set proxy transparent-web
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
  next
end
```



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

3. No special configuration is required on the client to use FortiGate transparent proxy. As the client is using the FortiGate as its default gateway, requests will first hit the regular firewall policy, and then be redirected to the transparent proxy policy.

## Proxy policy addresses

Proxy addresses are designed to be used only by proxy policies. The following address types are available:

- [Host regex match on page 265](#)
- [URL pattern on page 266](#)
- [URL category on page 267](#)
- [HTTP method on page 268](#)
- [HTTP header on page 268](#)
- [User agent on page 269](#)
- [Advanced \(source\) on page 270](#)
- [Advanced \(destination\) on page 271](#)

### Fast policy match

The fast policy match function improves the performance of IPv4 explicit and transparent web proxies on FortiGate devices.

When enabled, after the proxy policies are configured, the FortiGate builds a fast searching table based on the different proxy policy matching criteria. When fast policy matching is disabled, web proxy traffic is compared to the policies one at a time from the beginning of the policy list.

Fast policy matching is enabled by default, and can be configured with the following CLI command:

```
config web-proxy global
    set fast-policy-match {enable | disable}
end
```

### Host regex match

In this address type, a user can create a hostname as a regular expression. Once created, the hostname address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the regular expression.

This example creates a host regex match address with the pattern *qa.[a-z]\*.com*.

#### To create a host regex match address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *Host Regex*,
  - *Type* to *Host Regex Match*, and
  - *Host Regex Pattern* to *qa.[a-z]\*.com*.

4. Click **OK**.

### To create a host regex match address in the CLI:

```
config firewall proxy-address
  edit "Host Regex"
    set type host-regex
    set host-regex "qa.[a-z]*.com"
  next
end
```

## URL pattern

In this address type, a user can create a URL path as a regular expression. Once created, the path address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the regular expression.

This example creates a URL pattern address with the pattern `/filetypes/`.

### To create a URL pattern address in the GUI:

1. Go to **Policy & Objects > Addresses**.
2. Click **Create New > Address**.
3. Set the following:
  - **Category** to *Proxy Address*,
  - **Name** to *URL Regex*,
  - **Type** to *URL Pattern*,
  - **Host** to *all*, and
  - **URL Path Regex** to `/filetypes/`.

4. Click **OK**.



### To create a URL pattern address in the CLI:

```
config firewall proxy-address
    edit "URL Regex"
        set type url
        set host "all"
        set path "/filetypes/"
    next
end
```

## URL category

In this address type, a user can create a URL category based on a FortiGuard URL ID. Once created, the address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the URL category.

The example creates a URL category address for URLs in the *Education* category. For more information about categories, see <https://fortiguard.com/webfilter/categories>.

For information about creating and using custom local and remote categories, see [Web rating override on page 1556](#), [Using local and remote categories on page 1564](#), and [Threat feeds on page 2921](#).

### To create a URL category address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *url-category*,
  - *Type* to *URL Category*,
  - *Host* to *all*, and
  - *URL Category* to *Education*.

The screenshot shows the 'New Address' configuration window in the FortiGate GUI. The 'Proxy Address' tab is active. The 'Name' field contains 'url-category'. The 'Type' dropdown is set to 'URL Category'. The 'Host' dropdown is set to 'all'. The 'URL Category' dropdown is set to 'Education'. The 'Comments' field has a placeholder 'Write a comment...' and a character count '0/255'. On the right, the 'Additional Information' sidebar shows 'API Preview' and 'Dynamic Address' options, along with a list of guides for configuring dynamic addresses from various cloud providers.

4. Click **OK**.

### To create a URL category address in the CLI:

```
config firewall proxy-address
    edit "url-category"
        set type category
        set host "all"
        set category 30
    next
end
```

To see a list of all the categories and their numbers, when editing the address, enter `set category ?`.

## HTTP method

In this address type, a user can create an address based on the HTTP request methods that are used. Multiple method options are supported, including: *CONNECT*, *DELETE*, *GET*, *HEAD*, *OPTIONS*, *POST*, *PUT*, and *TRACE*. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests that match the selected HTTP method.

The example creates a HTTP method address that uses the GET method.

### To create a HTTP method address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *method\_get*,
  - *Type* to *HTTP Method*,
  - *Host* to *all*, and
  - *Request Method* to *GET*.
4. Click *OK*.

### To create a HTTP method address in the CLI:

```
config firewall proxy-address
  edit "method_get"
    set type method
    set host "all"
    set method get
  next
end
```

## HTTP header

In this address type, a user can create a HTTP header as a regular expression. Once created, the header address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests where the HTTP header matches the regular expression.

This example creates a HTTP header address with the pattern *Q[A-B]*.

### To create a HTTP header address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *HTTP-header*,

- *Type* to *HTTP Header*,
- *Host* to *all*,
- *Header Name* to *Header\_Test*, and
- *Header Regex* to *Q[A-B]*.

4. Click *OK*.

#### To create a HTTP header address in the CLI:

```
config firewall proxy-address
    edit "method_get"
        set type header
        set host "all"
        set header-name "Header_Test"
        set header "Q[A-B]"
    next
end
```

## User agent

In this address type, a user can create an address based on the names of the browsers that are used as user agents. Multiple browsers are supported, such as Chrome, Firefox, Internet Explorer, and others. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests from the specified user agent.

This example creates a user agent address for Google Chrome.

#### To create a user agent address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *UA-Chrome*,
  - *Type* to *User Agent*,
  - *Host* to *all*, and
  - *User Agent* to *Google Chrome*.
4. Click *OK*.

#### To create a user agent address in the CLI:

```
config firewall proxy-address
    edit "UA-Chrome"
        set type ua
        set host "all"
        set ua chrome
    next
end
```

## Browser version control

For security reasons, the user can restrict the browser version by specifying a range of the supported versions which can be set from the CLI using `set ua-min-ver` and `set ua-max-ver`. This option is available when the address *Type* is either *User Agent* or *Advanced (Source)*.

### To restrict the browser version:

```
config firewall proxy-address
    edit "ua-ver"
        set type ua
        set ua firefox
        set ua-min-ver "100.0.1"
        set ua-max-ver "160"
    next
end
```

## Advanced (source)

In this address type, a user can create an address based on multiple parameters, including HTTP method, User Agent, and HTTP header. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests that match the selected address.

This example creates an address that uses the get method, a user agent for Google Chrome, and an HTTP header with the pattern *Q[A-B]*.

### To create an advanced (source) address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *advanced\_src*,
  - *Type* to *Advanced (Source)*,
  - *Host* to *all*,
  - *Request Method* to *GET*,
  - *User Agent* to *Google Chrome*, and
  - *HTTP header* to *Header\_Test : Q[A-B]*.
4. Click *OK*.

### To create an advanced (source) address in the CLI:

```
config firewall proxy-address
    edit "advance_src"
        set type src-advanced
        set host "all"
        set method get
        set ua chrome
        config header-group
            edit 1
```

```

        set header-name "Header_Test"
        set header "Q[A-B] "
    next
end
next
end

```

## Advanced (destination)

In this address type, a user can create an address based on URL pattern and URL category parameters. Once created, the address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the selected address.

This example creates an address with the URL pattern `/about` that are in the *Education* category. For more information about categories, see <https://fortiguard.com/webfilter/categories>.

### To create an advanced (destination) address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Set the following:
  - *Category* to *Proxy Address*,
  - *Name* to *Advanced-dst*,
  - *Type* to *Advanced (Destination)*,
  - *Host* to *all*,
  - *URL Path Regex* to */about*, and
  - *URL Category* to *Education*.

The screenshot shows the 'New Address' configuration window in FortiGate. The 'Category' tab is active, displaying the following settings: Name: Advanced-dst, Type: Advanced (Destination), Host: all, URL Path Regex: /about, and URL Category: Education. The 'Proxy Address' tab is also visible. On the right, the 'Additional Information' section includes 'API Preview' and 'Dynamic Address' options. The 'Dynamic Address' section lists several guides for configuring dynamic addresses from various cloud providers.

4. Click **OK**.

### To create an advanced (destination) address in the CLI:

```

config firewall proxy-address
  edit "Advanced-dst"
    set type dst-advanced
    set host "all"
    set path "/about"
    set category 30
  next
end

```

## Proxy policy security profiles

Web proxy policies support most security profile types.



Security profiles must be created before they can be used in a policy, see [Security Profiles on page 1262](#) for information.

### Explicit web proxy policy

The security profiles supported by explicit web proxy policies are:

- *AntiVirus*
- *Web Filter*
- *Video Filter*
- *Application Control*
- *IPS*
- *DLP Profile*
- *ICAP*
- *Web Application Firewall*
- *File Filter*
- *SSL Inspection*

**To configure security profiles on an explicit web proxy policy in the GUI:**

1. Go to *Policy & Objects > Proxy Policy*.
2. Click *Create New*.
3. Set the following:

Proxy Type	Explicit Web
Outgoing Interface	port1
Source	all
Destination	all
Schedule	always
Service	webproxy
Action	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

AntiVirus	av
Web Filter	urlfilter

<b>Application Control</b>	app
<b>IPS</b>	Sensor-1
<b>DLP Profile</b>	dlp
<b>ICAP</b>	default
<b>Web Application Firewall</b>	default
<b>SSL Inspection</b>	deep-inspection

6. Click **OK** to create the policy.

### To configure security profiles on an explicit web proxy policy in the CLI:

```
config firewall proxy-policy
edit 1
    set proxy explicit-web
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "web"
    set action accept
    set schedule "always"
    set utm-status enable
    set av-profile "av"
    set webfilter-profile "urlfilter"
    set dlp-profile "dlp"
    set ips-sensor "sensor-1"
    set application-list "app"
    set icap-profile "default"
    set waf-profile "default"
    set ssl-ssh-profile "deep-inspection"
next
end
```

## Transparent proxy

The security profiles supported by transparent proxy policies are:

- *AntiVirus*
- *Web Filter*
- *Video Filter*
- *Application Control*
- *IPS*
- *DLP Profile*
- *ICAP*
- *Web Application Firewall*
- *File Filter*
- *SSL Inspection*

### To configure security profiles on a transparent proxy policy in the GUI:

1. Go to *Policy & Objects > Proxy Policy*.
2. Click *Create New*.
3. Set the following:

<b>Proxy Type</b>	Transparent Web
<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	webproxy
<b>Action</b>	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

<b>AntiVirus</b>	av
<b>Web Filter</b>	urlfilter
<b>Application Control</b>	app
<b>IPS</b>	Sensor-1
<b>DLP Profile</b>	dlp
<b>ICAP</b>	default
<b>Web Application Firewall</b>	default
<b>SSL Inspection</b>	deep-inspection

6. Click *OK* to create the policy.

### To configure security profiles on a transparent proxy policy in the CLI:

```
config firewall proxy-policy
edit 2
    set proxy transparent-web
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
    set utm-status enable
    set av-profile "av"
    set webfilter-profile "urlfilter"
```



```

        set dlp-profile "dlp"
        set ips-sensor "sensor-1"
        set application-list "app"
        set icap-profile "default"
        set waf-profile "default"
        set ssl-ssh-profile "certificate-inspection"
    next
end

```

## FTP proxy

The security profiles supported by FTP proxy policies are:

- *AntiVirus*
- *Application Control*
- *IPS*
- *File Filter*
- *DLP Profile*

### To configure security profiles on an FTP proxy policy in the GUI:

1. Go to *Policy & Objects > Proxy Policy*.
2. Click *Create New*.
3. Set the following:

<b>Proxy Type</b>	FTP
<b>Outgoing Interface</b>	port1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Action</b>	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

<b>AntiVirus</b>	av
<b>Application Control</b>	app
<b>IPS</b>	Sensor-1
<b>DLP Profile</b>	dlp

6. Click *OK* to create the policy.

### To configure security profiles on an FTP proxy policy in the CLI:

```

config firewall proxy-policy
    edit 3

```

```
set proxy ftp
set dstintf "port1"
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set utm-status enable
set av-profile "av"
set dlp-profile "dlp"
set ips-sensor "sensor-1"
set application-list "app"
next
end
```

## Explicit proxy authentication

FortiGate supports multiple authentication methods. This topic explains using an external authentication server with Kerberos as the primary and NTLM as the fallback.

### To configure Explicit Proxy with authentication:

1. [Enable and configure the explicit proxy on page 276.](#)
2. [Configure the authentication server and create user groups on page 277.](#)
3. [Create an authentication scheme and rules on page 279.](#)
4. [Create an explicit proxy policy and assign a user group to the policy on page 280.](#)
5. [Verify the configuration on page 281.](#)

## Enable and configure the explicit proxy

### To enable and configure explicit web proxy in the GUI:

1. Go to *Network > Explicit Proxy*.
2. Enable *Explicit Web Proxy*.
3. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *8080*.
4. Configure the remaining settings as needed.
5. Click *Apply*.

### To enable and configure explicit web proxy in the CLI:

```
config web-proxy explicit
  set status enable
  set ftp-over-http enable
  set socks enable
  set http-incoming-port 8080
  set ipv6-status enable
  set unknown-http-version best-effort
end
config system interface
  edit "port2"
    set vdom "vdom1"
```

```

set ip 10.1.100.1 255.255.255.0
set allowaccess ping https ssh snmp http telnet
set type physical
set explicit-web-proxy enable
set snmp-index 12
end
next
end

```

## Configure the authentication server and create user groups

Since we are using an external authentication server with Kerberos authentication as the primary and NTLM as the fallback, Kerberos authentication is configured first and then FSSO NTLM authentication is configured.

For successful authorization, the FortiGate checks if user belongs to one of the groups that is permitted in the security policy.



When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

### To configure an authentication server and create user groups in the GUI:

#### 1. Configure Kerberos authentication:

- Go to *User & Authentication > LDAP Servers*.
- Click *Create New*.
- Set the following:

<b>Name</b>	ldap-kerberos
<b>Server IP</b>	172.18.62.220
<b>Server Port</b>	389
<b>Common Name Identifier</b>	cn
<b>Distinguished Name</b>	dc=fortinetqa,dc=local

- Click *OK*

- Define Kerberos as an authentication service. This option is only available in the CLI. For information on generating a keytab, see [Generating a keytab on a Windows server on page 281](#).
- Configure FSSO NTLM authentication:

FSSO NTLM authentication is supported in a Windows AD network. FSSO can also provide NTLM authentication service to the FortiGate unit. When a user makes a request that requires authentication, the FortiGate initiates

NTLM negotiation with the client browser, but does not process the NTLM packets itself. Instead, it forwards all the NTLM packets to the FSSO service for processing.

- a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New* and select *FSSO Agent on Windows AD* from the *Endpoint/Identity* category.
  - c. Set the *Name* to *FSSO, Primary FSSO Agent to 172.16.200.220*, and enter a password.
  - d. Click *OK*.
4. Create a user group for Kerberos authentication:
    - a. Go to *User & Authentication > User Groups*.
    - b. Click *Create New*.
    - c. Set the *Name* to *Ldap-Group*, and *Type* to *Firewall*.
    - d. In the *Remote Groups* table, click *Add*, and set the *Remote Server* to the previously created *ldap-kerberos* server.
    - e. Click *OK*.
  5. Create a user group for NTLM authentication:
    - a. Go to *User & Authentication > User Groups*.
    - b. Click *Create New*.
    - c. Set the *Name* to *NTLM-FSSO-Group*, *Type* to *Fortinet Single Sign-On (FSSO)*, and add *FORTINETQA/FSSO* as a member.
    - d. Click *OK*.

### To configure an authentication server and create user groups in the CLI:

#### 1. Configure Kerberos authentication:

```
config user ldap
  edit "ldap-kerberos"
    set server "172.18.62.220"
    set cnid "cn"
    set dn "dc=fortinetqa,dc=local"
    set type regular
    set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
    set password *****
  next
end
```

#### 2. Define Kerberos as an authentication service:

```
config user krb-keytab
  edit "http_service"
    set pac-data disable
    set principal "HTTP/FGT.FORTINETQA.LOCAL@FORTINETQA.LOCAL"
    set ldap-server "ldap-kerberos"
    set keytab
    "BQIAAABFAAIAEEZPULRJTkVUUUEuTE9DQUwABehUVFAAFEZHVC5GT1JUSU5FVFFBLkxPQ0FMAAAAQAAAAEAAE
    ACKLCMopitnVAAAARQACABGT1JUSU5FVFFBLkxPQ0FMAARIVFRQABGR1QuRk9SVE1ORVRRQS5MT0NBTA AAAAE
    AAAAABAADAAiiwJKJ6YrZ1QAAAE0AAgAQRk9SVE1ORVRRQS5MT0NBTA AESFRUUA AURkdULkZPULRJTkVUUUEuTE9
    DQUwAAAAABAAAAAQAFwAQUHo9uqR9cSkzyxdzKCEXdwAAAF0AAgAQRk9SVE1ORVRRQS5MT0NBTA AESFRUUA AURkd
    ULkZPULRJTkVUUUEuTE9DQUwAAAAABAAAAQAEgAgzee854Aq1HhQiKJZvV4tL2Poy7hMIARQpK8MCB//BIAAAB
    NAAIAEEZPULRJTkVUUUEuTE9DQUwABehUVFAAFEZHVC5GT1JUSU5FVFFBLkxPQ0FMAAAAQAAAAEABEAEG49vHE
    iiBghr63Z/lnwYrU="
```

```
    next
end
```

For information on generating a keytab, see [Generating a keytab on a Windows server on page 281](#).

**3. Configure FSSO NTLM authentication:**

```
config user fsso
    edit "1"
        set server "172.18.62.220"
        set password *****
    next
end
```

**4. Create a user group for Kerberos authentication:**

```
config user group
    edit "Ldap-Group"
        set member "ldap" "ldap-kerberos"
    next
end
```

**5. Create a user group for NTLM authentication:**

```
config user group
    edit "NTLM-FSSO-Group"
        set group-type fsso-service
        set member "FORTINETQA/FSSO"
    next
end
```

## Create an authentication scheme and rules

Explicit proxy authentication is managed by authentication schemes and rules. An authentication scheme must be created first, and then the authentication rule.

**To create an authentication scheme and rules in the GUI:**

1. Create an authentication scheme:
  - a. Go to *Policy & Objects > Authentication Rules*.
  - b. Click *Create New > Authentication Schemes*.
  - c. Set the *Name* to *Auth-scheme-Negotiate* and select *Negotiate* as the *Method*.
  - d. Click *OK*.
2. Create an authentication rule:
  - a. Go to *Policy & Objects > Authentication Rules*.
  - b. Click *Create New > Authentication Rules*.
  - c. Set the *Name* to *Auth-Rule*, *Source Address* to *all*, and *Protocol* to *HTTP*.
  - d. Enable *Authentication Scheme*, and select the just created *Auth-scheme-Negotiate* scheme.
  - e. Click *OK*.

### To create an authentication scheme and rules in the CLI:

#### 1. Create an authentication scheme:

```
config authentication scheme
  edit "Auth-scheme-Negotiate"
    set method negotiate <<< Accepts both Kerberos and NTLM as fallback
  next
end
```

#### 2. Create an authentication rule:

```
config authentication rule
  edit "Auth-Rule"
    set status enable
    set protocol http
    set srcaddr "all"
    set ip-based enable
    set active-auth-method "Auth-scheme-Negotiate"
    set comments "Testing"
  next
end
```

## Create an explicit proxy policy and assign a user group to the policy

### To create an explicit proxy policy and assign a user group to it in the GUI:

1. Go to *Policy & Objects > Proxy Policy*.
2. Click *Create New*.
3. Set *Proxy Type* to *Explicit Web* and *Outgoing Interface* to *port1*.
4. Set *Source* to *all*, and the just created user groups *NTLM-FSSO-Group* and *Ldap-Group*.
5. Also set *Destination* to *all*, *Schedule* to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.
6. Click *OK*.

### To create an explicit proxy policy and assign a user group to it in the CLI:

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "web"
    set action accept
    set schedule "always"
    set logtraffic all
    set groups "NTLM-FSSO-Group" "Ldap-Group"
    set av-profile "av"
    set ssl-ssh-profile "deep-custom"
  next
end
```

## Verify the configuration

Log in using a domain and system that would be authenticated using the Kerberos server, then enter the `diagnose wad user list` CLI command to verify:

```
# diagnose wad user list
ID: 8, IP: 10.1.100.71, VDOM: vdom1
  user name      : test1@FORTINETQA.LOCAL
  duration       : 389
  auth_type      : IP
  auth_method     : Negotiate
  pol_id         : 1
  g_id           : 1
  user_based      : 0
  expire         : no
LAN:
  bytes_in=4862 bytes_out=11893
WAN:
  bytes_in=7844 bytes_out=1023
```

Log in using a system that is not part of the domain. The NTLM fallback server should be used:

```
# diagnose wad user list
ID: 2, IP: 10.1.100.202, VDOM: vdom1
  user name      : TEST31@FORTINETQA
  duration       : 7
  auth_type      : IP
  auth_method     : NTLM
  pol_id         : 1
  g_id           : 5
  user_based      : 0
  expire         : no
LAN:
  bytes_in=6156 bytes_out=16149
WAN:
  bytes_in=7618 bytes_out=1917
```

## Generating a keytab on a Windows server

A keytab is used to allow services that are not running Windows to be configured with service instance accounts in the Active Directory Domain Service (AD DS). This allows Kerberos clients to authenticate to the service through Windows Key Distribution Centers (KDCs).

For an explanation of the process, see <https://docs.microsoft.com/en-us/windows-server/administration/windows-commands/ktpass>.

### To generate a keytab on a Windows server:

1. On the server, create a user for the FortiGate:
  - The service name is the FQDN for the explicit proxy interface, such as the hostname in the client browser proxy configuration. In this example, the service name is *FGT*.
  - The account only requires *domain users* membership.

- The password must be very strong.
  - The password is set to never expire.
2. Add the FortiGate FQDN in to the Windows DNS domain, as well as in-addr.arpa.
  3. Generate the Kerberos keytab using the `ktpass` command on Windows servers and many domain workstations:

```
# ktpass -princ HTTP/<domain name of test fgt>@realm -mapuser <user> -pass <password> -crypto all -ptype KRB5_NT_PRINCIPAL -out fgt.keytab
```

For example:

```
ktpass -princ HTTP/FGT.FORTINETQA.LOCAL@FORTINETQA.LOCAL -mapuser FGT -pass ***** -crypto all -ptype KRB5_NT_PRINCIPAL -out fgt.keytab
```



If the FortiGate is handling multiple keytabs in Kerberos authentication, use different passwords when generating each keytab.

---

4. Encode the keytab to base64 in a text file:
  - On Windows: `certutil -encode fgt.keytab tmp.b64 && findstr /v /c:- tmp.b64 > fgt.txt`
  - On Linux: `base64 fgt.keytab > fgt.txt`
  - On MacOS: `base64 -i fgt.keytab -o fgt.txt`
5. Use the code in `fgt.txt` as the keytab parameter when configuring the FortiGate.

## Transparent web proxy forwarding

In FortiOS, there is an option to enable proxy forwarding for transparent web proxy policies and regular firewall policies for HTTP and HTTPS.

In previous versions of FortiOS, you could forward proxy traffic to another proxy server (proxy chaining) with explicit proxy. Now, you can forward web traffic to the upstream proxy without having to reconfigure your browsers or publish a proxy auto-reconfiguration (PAC) file.

Once configured, the FortiGate forwards traffic generated by a client to the upstream proxy. The upstream proxy then forwards it to the server.

### To configure proxy forwarding:

1. Configure the web proxy forwarding server:

```
config web-proxy forward-server
  edit "upStream_proxy_1"
    set ip 172.16.200.20
    set healthcheck enable
    set monitor "http://www.google.ca"
  next
end
```

2. Append the web proxy forwarding server to a firewall policy:

```
config firewall policy
  edit 1
    set name "LAN To WAN"
```



```

set srcintf "port10"
set dstintf "port9"
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set service "ALL"
set utm-status enable
set logtraffic all
set webproxy-forward-server "upStream_proxy_1"
set fsso disable
set av-profile "av"
set ssl-ssh-profile "deep-custom"
set nat enable
next
end

```


## Selectively forward web requests to a transparent web proxy

Web traffic over HTTP/HTTPS can be forwarded selectively by the FortiGate's transparent web proxy to an upstream web proxy to avoid overwhelming the proxy server. Traffic can be selected by specifying the proxy address, which can be based on a FortiGuard URL category.



The FortiGuard web filter service must be enabled on the downstream FortiGate.

## Topology

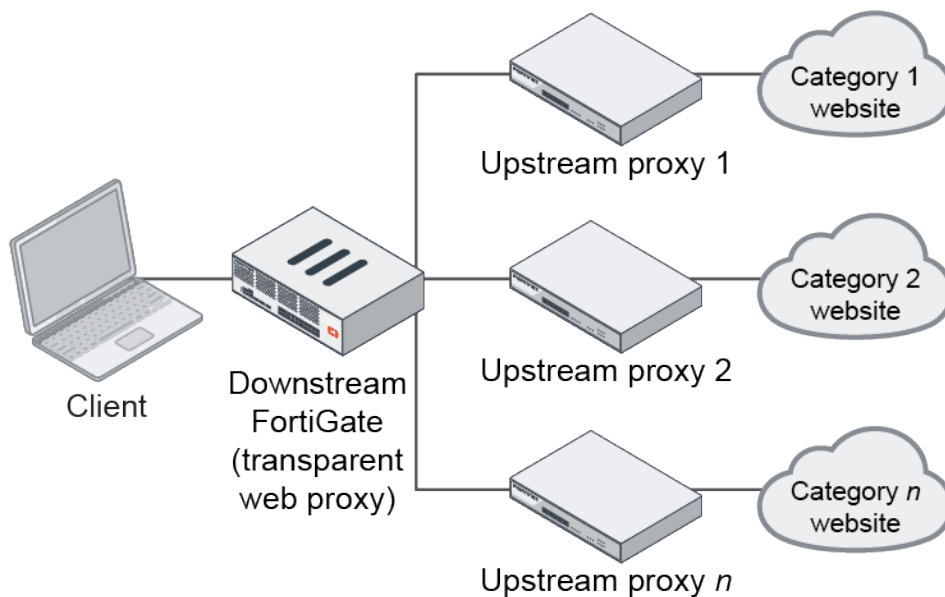

## Forwarding behavior

The forward server will be ignored if the proxy policy matching for a particular session needs the FortiGate to see authentication information inside the HTTP (plain text) message. For example, assume that user authentication is required and a forward server is configured in the transparent web proxy, and the authentication method is an active method (such as basic). When the user or client sends the HTTP request over SSL with authentication information to the FortiGate, the request cannot be forwarded to the upstream proxy. Instead, it will be forwarded directly to the original web server (assuming deep inspection and `http-policy-redirect` are enabled in the firewall policy).

The FortiGate will close the session before the client request can be forwarded if all of the following conditions are met:

- The certificate inspection is configured in the firewall policy that has the `http-policy-redirect` option enabled.
- A previously authenticated IP-based user record cannot be found by the FortiGate's memory during the SSL handshake.
- Proxy policy matching needs the FortiGate to see the HTTP request authentication information.

This means that in order to enable user authentication and use `webproxy-forward-server` in the transparent web proxy policy at the same time, the following best practices should be followed:

- In the firewall policy that has the `http-policy-redirect` option enabled, set `ssl-ssh-profile` to use the `deep-inspection` profile.
- Use IP-based authentication rules; otherwise, the `webproxy-forward-server` setting in the transparent web proxy policy will be ignored.
- Use a passive authentication method such as FSSO. With FSSO, once the user is authenticated as a domain user by a successful login, the web traffic from the user's client will always be forwarded to the upstream proxy as long as the authenticated user remains unexpired. If the authentication method is an active authentication method (such as basic, digest, NTLM, negotiate, form, and so on), the first session containing authentication information will bypass the forward server, but the following sessions will be connected through the upstream proxy.

## Sample configuration

On the downstream FortiGate proxy, there are two category proxy addresses used in two separate transparent web proxy policies as the destination address:

- In the policy with `upstream_proxy_1` as the forward server, the proxy address `category_infotech` is used to match URLs in the information technology category.
- In the policy with `upstream_proxy_2` as the forward server, the proxy address `category_social` is used to match URLs in the social media category.

### To configure forwarding requests to transparent web proxies:

#### 1. Configure the proxy forward servers:

```
config web-proxy forward-server
  edit "upStream_proxy_1"
    set ip 172.16.200.20
  next
  edit "upStream_proxy_2"
    set ip 172.16.200.46
  next
end
```

## 2. Configure the web proxy addresses:

```
config firewall proxy-address
    edit "category_infotech"
        set type category
        set host "all"
        set category 52
    next
    edit "category_social"
        set type category
        set host "all"
        set category 37
    next
end
```

## 3. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set http-policy-redirect enable
        set ssl-ssh-profile "deep-inspection"
        set av-profile "av"
        set nat enable
    next
end
```

## 4. Configure the proxy policies:

```
config firewall proxy-policy
    edit 1
        set proxy transparent-web
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "category_infotech"
        set service "webproxy"
        set action accept
        set schedule "always"
        set logtraffic all
        set webproxy-forward-server "upStream_proxy_1"
        set utm-status enable
        set ssl-ssh-profile "deep-inspection"
        set av-profile "av"
    next
    edit 2
        set proxy transparent-web
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
```

```

    set dstaddr "category_social"
    set service "webproxy"
    set action accept
    set schedule "always"
    set logtraffic all
    set webproxy-forward-server "upStream_proxy_2"
    set utm-status enable
    set ssl-ssh-profile "deep-inspection"
    set av-profile "av"
  next
end

```

## Upstream proxy authentication in transparent proxy mode

A downstream proxy FortiGate that needs to be authenticated by the upstream web proxy can use the basic authentication method to send its username and password, in the base64 format, to the upstream web proxy for authentication. If the authentication succeeds, web traffic that is forwarded from the downstream proxy FortiGate to the upstream proxy can be accepted and forwarded to its destinations.

In this example, a school has a FortiGate acting as a downstream proxy that is configured with firewall policies for each user group (students and staff). In each policy, a forwarding server is configured to forward the web traffic to the upstream web proxy.

The username and password that the upstream web proxy uses to authenticate the downstream proxy are configured on the forwarding server, and are sent to the upstream web proxy with the forwarded HTTP requests.

	Username	Password
student.proxy.local:8080	students	ABC123
staff.proxy.local:8081	staff	123456

On the downstream FortiGate, configure forwarding servers with the usernames and passwords for authentication on the upstream web proxy, then apply those servers to firewall policies for transparent proxy. For explicit web proxy, the forwarding servers can be applied to proxy policies.

When the transparent proxy is configured, clients can access websites without configuring a web proxy in their browser. The downstream proxy sends the username and password to the upstream proxy with forwarded HTTP requests to be authenticated.

### To configure the forwarding server on the downstream FortiGate:

```

config web-proxy forward-server
  edit "Student_Upstream_WebProxy"
    set addr-type fqdn
    set fqdn "student.proxy.local"
    set port 8080
    set username "student"
    set password ABC123
  next
  edit "Staff_Upstream_WebProxy"
    set addr-type fqdn
    set fqdn "staff.proxy.local"
    set port 8081

```

```

        set username "staff"
        set password 123456
    next
end

```

### To configure firewall policies for transparent proxy:

```

config firewall policy
    edit 1
        set srcintf "Vlan_Student"
        set dstintf "port9"
        set srcaddr "Student_Subnet"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssl-ssh-profile "deep-inspection"
        set av-profile "av"
        set webproxy-forward-server "Student_Upstream_WebProxy"
        set nat enable
    next
    edit 2
        set srcintf "Vlan_Staff"
        set dstintf "port9"
        set srcaddr "Staff_Subnet"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssl-ssh-profile "deep-inspection"
        set av-profile "av"
        set webproxy-forward-server "Staff_Upstream_WebProxy"
        set nat enable
    next
end

```

## Multiple dynamic header count

Multiple dynamic headers are supported for web proxy profiles, as well as Base64 encoding and the append/new options.

Administrators only have to select the dynamic header in the profile. The FortiGate will automatically display the corresponding static value. For example, if the administrator selects the `$client-ip` header, the FortiGate will display the actual client IP address.

The supported headers are:

<code>\$client-ip</code>	Client IP address
<code>\$user</code>	Authentication user name

\$domain	User domain name
\$local_grp	Firewall group name
\$remote_grp	Group name from authentication server
\$proxy_name	Proxy realm name

### To configure dynamic headers using the CLI:

Since authentication is required, FSSO NTLM authentication is configured in this example.

#### 1. Configure LDAP:

```
config user ldap
  edit "ldap-kerberos"
    set server "172.18.62.220"
    set cnid "cn"a
    set dn "dc=fortinetqa,dc=local"
    set type regular
    set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
    set password *****
  next
end
```

#### 2. Configure FSSO:

```
config user fsso
  edit "1"
    set server "172.18.62.220"
    set password *****
  next
end
```

#### 3. Configure a user group:

```
config user group
  edit "NTLM-FSSO"
    set group-type fsso-service
    set member "FORTINETQA/FSSO"
  next
end
```

#### 4. Configure an authentication scheme:

```
config authentication scheme
  edit "au-sch-ntlm"
    set method ntlm
  next
end
```

#### 5. Configure an authentication rule:

```
config authentication rule
  edit "au-rule-fsso"
    set srcaddr "all"
    set active-auth-method "au-sch-ntlm"
  next
end
```

**6. Create a web proxy profile that adds a new dynamic and custom Via header:**

```
config web-proxy profile
  edit "test"
    set log-header-change enable
    config headers
      edit 1
        set name "client-ip"
        set content "$client-ip"
      next
      edit 2
        set name "Proxy-Name"
        set content "$proxy_name"
      next
      edit 3
        set name "user"
        set content "$user"
      next
      edit 4
        set name "domain"
        set content "$domain"
      next
      edit 5
        set name "local_grp"
        set content "$local_grp"
      next
      edit 6
        set name "remote_grp"
        set content "$remote_grp"
      next
      edit 7
        set name "Via"
        set content "Fortigate-Proxy"
      next
    end
  next
end
```

**7. In the proxy policy, append the web proxy profile created in the previous step:**

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "web"
    set action accept
    set schedule "always"
    set logtraffic all
    set groups "NTLM-FSSO"
    set webproxy-profile "test"
    set utm-status enable
    set av-profile "av"
    set webfilter-profile "content"
    set ssl-ssh-profile "deep-custom"
```

```

    next
end

```

- Once traffic is being generated from the client, look at the web filter logs to verify that it is working.

The corresponding values for all the added header fields are shown in the *Web Filter* card at *Log & Report > Security Events*, in the *Change headers* section at the bottom of the *Log Details* pane.

```

1: date=2019-02-07 time=13:57:24 logid="0344013632" type="utm" subtype="webfilter"
eventtype="http_header_change" level="notice" vd="vdom1" eventtime=1549576642 policyid=1
transid=50331689 sessionid=1712788383 user="TEST21@FORTINETQA" group="NTLM-FSSO"
profile="test" srcip=10.1.100.116 srcport=53278 dstip=172.16.200.46 dstport=80
srcintf="port2" srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6
service="HTTP" url="http://172.16.200.46/" agent="curl/7.22.0" chgheaders="Added=client-
ip: 10.1.100.116|Proxy-Name: 1.1 100D.qa|user: TEST21|domain: FORTINETQA|local_grp:
NTLM-FSSO|remote_grp: FORTINETQA/FSSO|Via: Fortigate-Proxy"

```

## Restricted SaaS access

Large organizations may want to restrict SaaS access to resources like Microsoft Office 365, Google Workspace, and Dropbox by tenant to block non-company login attempts and secure the users from accessing non-approved cloud resources. Many cloud vendors enable this by applying tenant restrictions for access control. For example, users accessing Microsoft 365 applications with tenant restrictions through the corporate proxy will only be allowed to log in as the company's tenant and access the organization's applications.

To implement this, access requests from the clients pass through the company's web proxy, which inserts headers to notify the SaaS service to apply tenant restrictions with the permitted tenant list. Users are redirected the SaaS service login page, and are only allowed to log in if they belong to the permitted tenant list.

For more information, refer to the vendor-specific documentation:

- Office 365: [Restrict access to a tenant](#)
- Google Workspace: [Block access to consumer accounts](#)
- Dropbox: [Network control](#)

## Basic configuration

A web proxy profile can specify access permissions for Microsoft Office 365, Google Workspace, and Dropbox by inserting vendor-defined headers that restrict access to the specific accounts. Custom headers can also be inserted for any destination. The web proxy profile can then be applied to a firewall policy to control the header's insertion.

**To implement Office 365 tenant restriction, Google Workspace account access control, and Dropbox network access control:**

- Configure a web proxy profile according to the vendors' specifications:
  - Set the header name (defined by the service provider).
  - Set the traffic destination (the service provider).
  - Set the HTTP header content to be inserted into the traffic (defined by your settings).

```

config web-proxy profile
  edit <name>
    config headers
      edit <id>

```



```

        set name <string>
        set dstaddr <address>
        set action add-to-request
        set base64-encoding disable
        set add-option new
        set protocol https http
        set content <string>
    next
end
next
end

```

2. Apply the web proxy profile to a policy. SSL deep inspection must be used in the firewall policy:


The following table lists the vendor-specific `config headers` settings that must be configured in the web proxy profile (config web-proxy profile):

Setting	Vendor specification		
	Microsoft Office 365	Google Workspace	Dropbox
name <string>	<ul style="list-style-type: none"> <li>Restrict-Access-To-Tenants</li> <li>Restrict-Access-Context</li> </ul>	<ul style="list-style-type: none"> <li>X-GoogApps-Allowed-Domains</li> </ul>	<ul style="list-style-type: none"> <li>X-Dropbox-allowed-Team-Ids</li> </ul>
dstaddr <address>	<ul style="list-style-type: none"> <li>Use the built-in Microsoft Office 365 address.</li> </ul>	<ul style="list-style-type: none"> <li>Use the built-in Google Suite address.</li> </ul>	<ul style="list-style-type: none"> <li>Use the built-in wildcard.dropbox.com address.</li> </ul>
content <string>	<ul style="list-style-type: none"> <li>Enter the domain for Restrict-Access-To-Tenants.</li> <li>Enter the directory ID for Restrict-Access-Context.</li> </ul>	<ul style="list-style-type: none"> <li>Enter the domain.</li> </ul>	<ul style="list-style-type: none"> <li>Enter the Dropbox team ID.</li> </ul>

Due to vendors' changing requirements, these settings may no longer comply with the vendors' official guidelines. See the vendor documentation for more details.

## Microsoft Office 365 example

In this example, a web proxy profile is created to control permissions for Microsoft Office 365 to allow corporate domains and deny personal accounts, such as Hotmail and Outlook that are accessed through login.live.com.

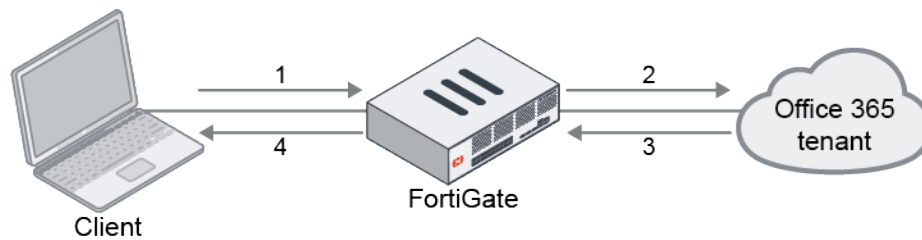

1. When a user attempts to access `login.microsoftonline.com`, `login.microsoft.com`, or `login.windows.net`, the traffic will match a proxy inspection mode firewall policy with the assigned web proxy profile.
2. The web proxy profile adds new headers to the customer tenant, indicating the allowed domain and restricted access for personal accounts. Next, the FortiGate starts a new connection with the Microsoft Office 365 domain controller including the new headers.
3. The Microsoft Office 365 domain controller assesses this data and will allow or deny this access, then sends a reply to the FortiGate.
4. The FortiGate sends a reply to the client.

The FortiGate will only indicate the correct domains to be allowed or denied through the headers to Microsoft. The custom sign-in portal in the browser is generated by Microsoft.

## Configuration summary

The following must be configured in FortiOS:

- An FQDN address for `login.live.com`
- An SSL inspection profile that uses deep inspection with an exemption for `login.live.com`



Ensure that the firewall certificate is installed on the client machines. A company certificate signed by an internal CA is recommended.

- A web filter profile in proxy mode with static URL filters for the SNI URLs
- A web proxy profile that adds new headers to the customer tenant
- A firewall policy using proxy mode inspection that applies the configured SSL SSL inspection, web filter, and web proxy profiles

The `Restrict-Access-To-Tenants` and `Restrict-Access-Context` headers are inserted for incoming requests to: `login.microsoftonline.com`, `login.microsoft.com`, and `login.windows.net`, which are part of the Microsoft Office 365 address group.

To restrict access to personal accounts using the `login.live.com` domain, the `sec-Restrict-Tenant-Access-Policy` header is inserted and uses `restrict-msa` as the header content.

Before configuring the FortiGate, collect the information related to the company domain in the Office 365 contract.

- `Restrict-Access-To-Tenants`: your `<domain.com>`
- `Restrict-Access-Context`: Directory ID



To find the Directory ID related to the domain, locate it in the Azure portal, or use the [whatismytenantid.com](https://whatismytenantid.com) open tool.

**To configure the FortiGate:****1. Add the FQDN address for login.live.com:**

```
config firewall address
    edit "login.live.com"
        set type fqdn
        set fqdn "login.live.com"
    next
end
```

**2. Configure the SSL inspection profile. In this example, the deep-inspection profile is cloned, and the live.com FQDN is removed from the exemption list.****a. Clone the deep-inspection profile:**

```
config firewall ssl-ssh-profile
    clone "deep-inspection" to "Tenant"
end
```

**b. Edit the Tenant profile and remove live.com from the config ssl-exempt list.****3. Configure the URL filter list:**

```
config webfilter urlfilter
    edit 1
        set name "Auto-webfilter-urlfilter"
        config entries
            edit 1
                set url "login.microsoftonline.com"
                set action allow
            next
            edit 2
                set url "login.microsoft.com"
                set action allow
            next
            edit 3
                set url "login.windows.net"
                set action allow
            next
            edit 4
                set url "login.live.com"
                set action allow
            next
        end
    next
end
```

**4. Configure the web filter profile:**

```
config webfilter profile
    edit "Tenant"
        set comment "Office 365"
        set feature-set proxy
        config web
            set urlfilter-table 1
        end
    next
end
```

5. Configure the web proxy profile (enter the header names exactly as shown):

```
config web-proxy profile
  edit "SaaS-Tenant-Restriction"
    set header-client-ip pass
    set header-via-request pass
    set header-via-response pass
    set header-x-forwarded-for pass
    set header-x-forwarded-client-cert pass
    set header-front-end-https pass
    set header-x-authenticated-user pass
    set header-x-authenticated-groups pass
    set strip-encoding disable
    set log-header-change disable
  config headers
    edit 1
      set name "Restrict-Access-To-Tenants"
      set dstaddr "login.microsoft.com" "login.microsoftonline.com"
    "login.windows.net"
      set action add-to-request
      set base64-encoding disable
      set add-option new
      set protocol https http
      set content <domain>
    next
  edit 2
    set name "Restrict-Access-Context"
    set dstaddr "login.microsoftonline.com" "login.microsoft.com"
  "login.windows.net"
    set action add-to-request
    set base64-encoding disable
    set add-option new
    set protocol https http
    set content <directory_ID>
  next
  edit 3
    set name "sec-Restrict-Tenant-Access-Policy"
    set dstaddr "login.live.com"
    set action add-to-request
    set base64-encoding disable
    set add-option new
    set protocol https http
    set content "restrict-msa"
  next
end
next
end
```

6. Configure the firewall policy:


```
config firewall policy
  edit 10
    set name "Tenant"
    set srcintf "port2"
    set dstintf "port1"
    set action accept
    set srcaddr "users-lan"
```

```
        set dstaddr "login.microsoft.com" "login.microsoftonline.com"
"login.windows.net" "login.live.com"
        set schedule "always"
        set service "HTTP" "HTTPS"
        set utm-status enable
        set inspection-mode proxy
        set webproxy-profile "SaaS-Tenant-Restriction"
        set ssl-ssh-profile "Tenant"
        set webfilter-profile "Tenant"
        set logtraffic all
        set nat enable
    next
end
```

## Testing the access


To test the access to corporate domains and personal accounts:

1. Get a client to log in with their corporate email using the login.microsoftonline.com domain.

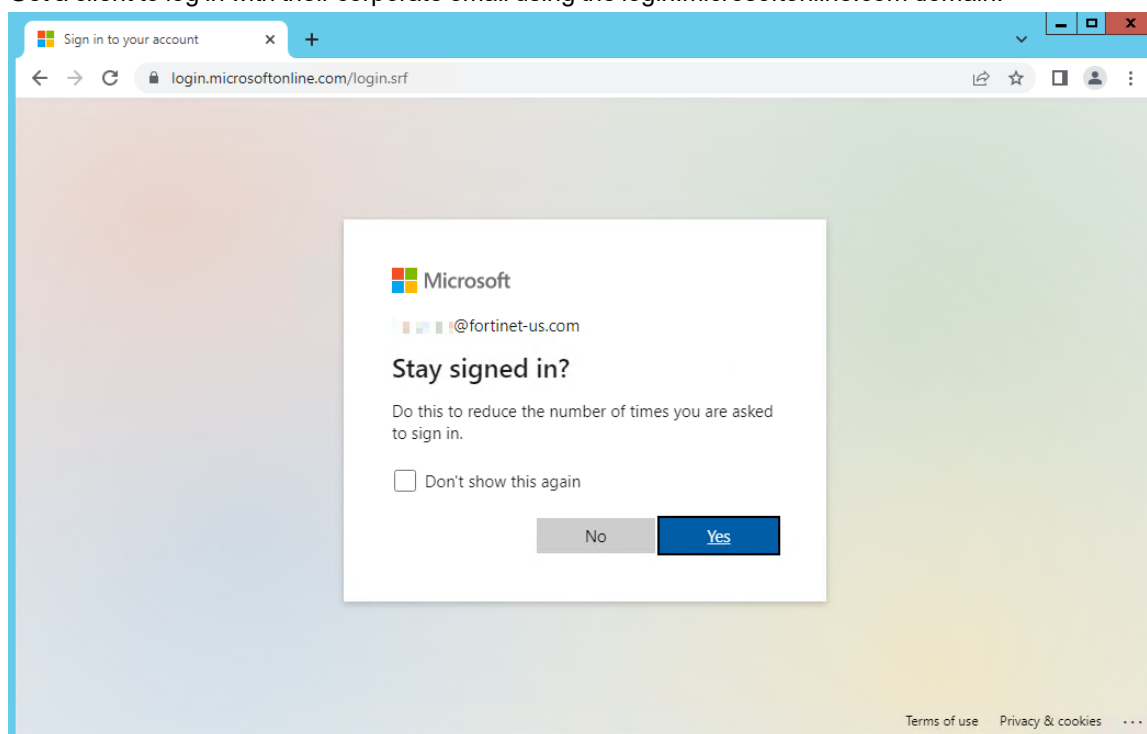


2. The client is able to enter their credentials and log in successfully.

3. Get a client to log in to their personal Outlook account.

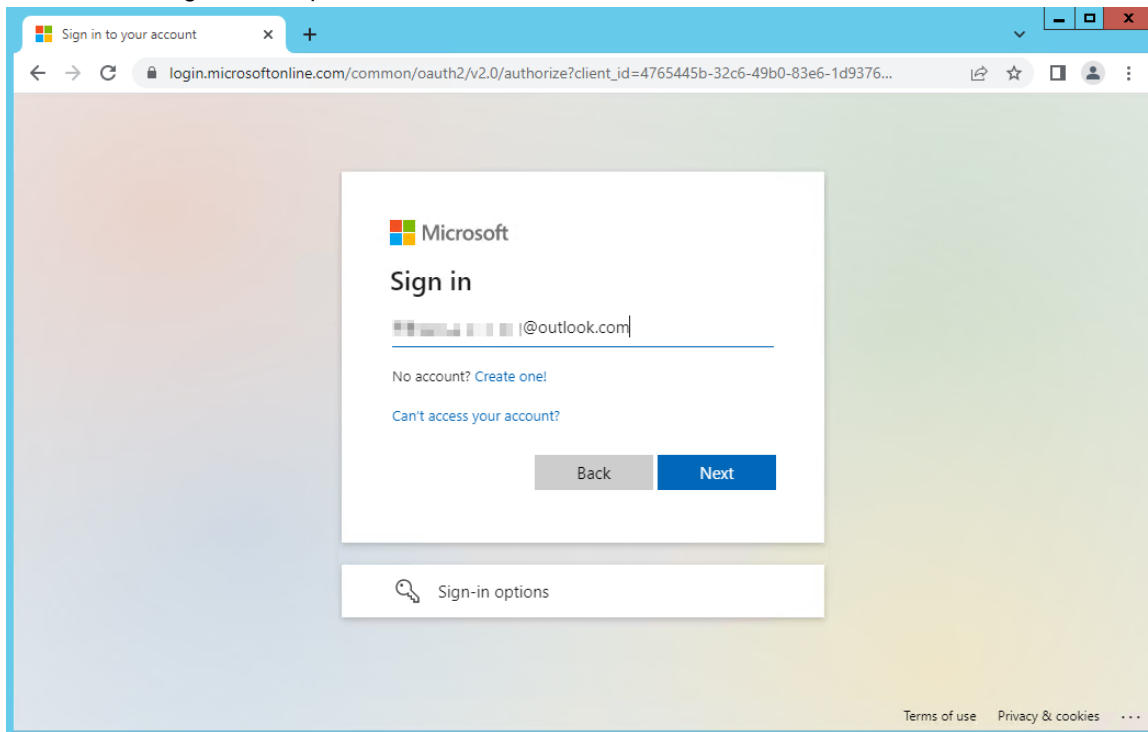

4. After the client enters their credentials, a message appears that they cannot access this resource because it is restricted by the cross-tenant access policy.

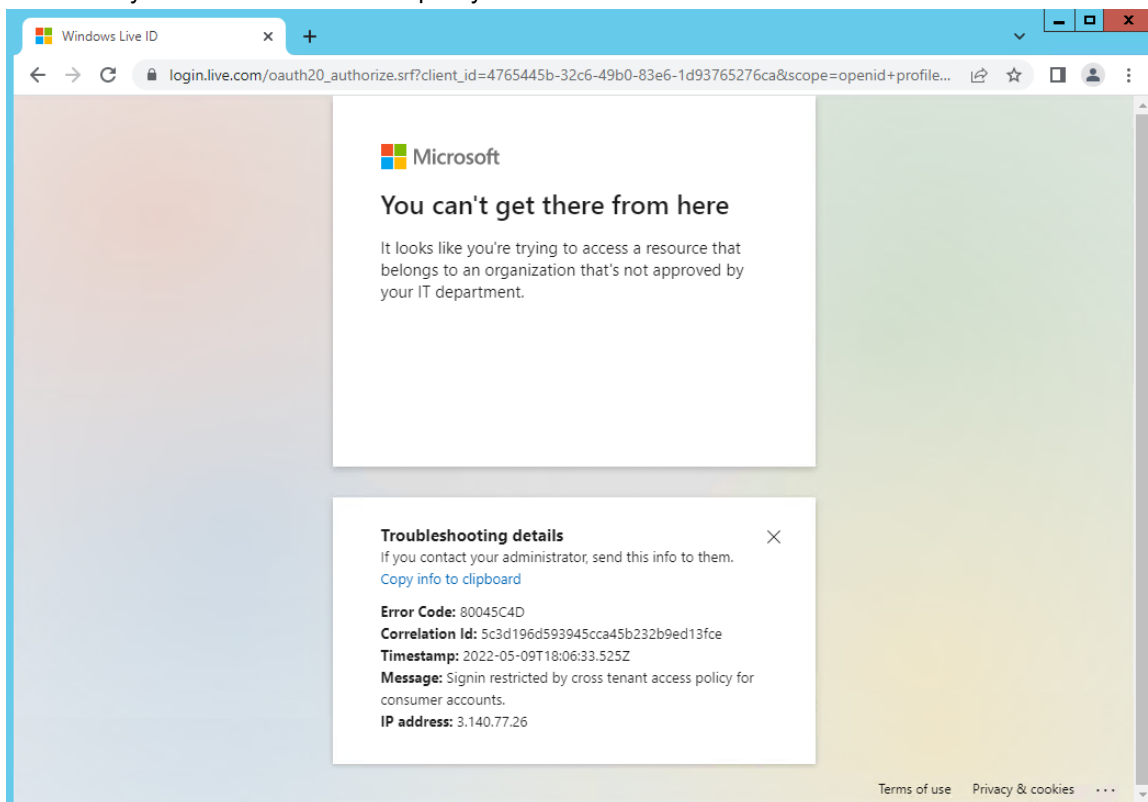

## Verifying the header insertion

To verify the header insertion for corporate domains and personal accounts:

1. On the FortiGate, start running the WAD debugs:

```
# diagnose wad debug enable category http
# diagnose wad debug enable level info
# diagnose debug enable
```

2. After a client attempts to access corporate domains, verify that the header information is sent to the Microsoft Active Directory:


```
[I][p:234][s:2481][r:33] wad_dump_fwd_http_req          :2567  hreq=0x7fc75f0cd468
Forward request to server:
POST /common/GetCredentialType?mkt=en-US HTTP/1.1
Host: login.microsoftonline.com
Connection: keep-alive
Content-Length: 1961
sec-ch-ua: " Not A;Brand";v="99", "Chromium";v="101", "Google Chrome";v="101"
hpgrequestid: d7f706a8-1143-4cdd-ad52-1cc69dc7bb00
sec-ch-ua-mobile: ?0
User-Agent: Mozilla/5.0 (Windows NT 6.3; Win64; x64) AppleWebKit/537.36 (KHTML, like
Gecko) Chrome/101.0.4951.54 Safari/537.36
client-request-id: 5c3d196d-5939-45cc-a45b-232b9ed13fce
...
Restrict-Access-To-Tenants: fortinet-us.com
Restrict-Access-Context: *****-****-452f-8535-*****
```

3. After a client attempts to access a personal account, verify that the header information is sent to the Microsoft Active Directory:

```
[I][p:234][s:2519][r:34] wad_dump_fwd_http_req          :2567  hreq=0x7fc75f0ce6a8
Forward request to server:
GET /oauth20_authorize.srf?client_id=4765445b-32c6-49b0-83e6-
1d93765276ca&scope=openid+profile+https%3a%2f%2fwww.office.com%2fv2%2fOfficeHome.All&red
irect_uri=https%3a%2f%2fwww.office.com%2flandingv2&response_type=code+id_
token&state=7tAtndYhcA3132S--UOTyLVETyIZs8FgndTpeYM9mJ1EeA-
X5nfqrSalnnPH41cHxfHGug6N5cblik676v6xZgszgh_
JARVKrptZwBvjI2cbnZ4mttYNNdK1FTlbEtu5VBjgtBOX2u6v3F_
9g7UikCpGTnBRGhvO2pyTndT3EEIyAHvhg9LsKRtY3kxce8dQkfkliDjLcc3q-01r4rpxSx2xZSbwg_
KkAN3kCRQ9uLfe0ziHAcpvunuKmzGBWKnBhC4sJkXrMEfXwCg4nsOjg&response_mode=form_
post&nonce=637877163655610380.MjNjZmM4NzQtOTU5My00OGZlLTkONTItZTE5NDU2YjVlODdjNjViOTQwYm
UtOTZlMS00M2Y5LTkyN2MtN2QyMjgwNjcxY2Uz&x-client-SKU=ID_NETSTANDARD2_0&x-client-
Ver=6.12.1.0&uaid=5c3d196d593945cca45b232b9ed13fce&msproxy=1&issuer=mso&tenant=common&u
i_locales=en-US&epct=AQABAAAAAAD--DLA3VO7QrddgJg7WevrfA6SLaDsJUcjb1Bg9OKonF3d_
lfNjSdDAIH5hlJdUSGejEBIqsko-A7JX67PzaGdEJgOIGa37VhJzGTyBZ-KgATe9FHssnNmLjM_
dojr0dAT83xDhiqQTN2-UcYdcP2s3vPainF7Nges5ecXRaEoE9Vw9-
sN7jfasOkPRWW03aI6buz0niABvA860YOWDb98vdJWPGkWE-euDr6n8_
zI5iAA&jshs=0&username=*****%40outlook.com&login_
hint=*****%40outlook.com HTTP/1.1
Host: login.live.com
Connection: keep-alive
...
Referer: https://login.microsoftonline.com/
Accept-Encoding: gzip, deflate, br
Accept-Language: en-US,en;q=0.9
sec-Restrict-Tenant-Access-Policy: restrict-msa
```

## Explicit proxy and FortiGate Cloud Sandbox

Explicit proxy connections can leverage FortiGate Cloud Sandbox for advanced threat scanning and updates. This allows FortiGates behind isolated networks to connect to FortiCloud services.

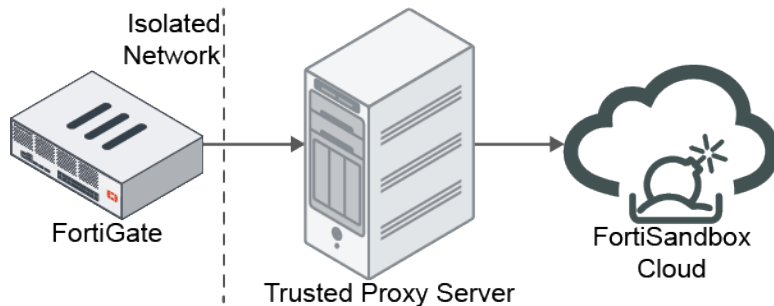

To configure FortiGuard services to communicate with an explicit proxy server:

```
config system fortiguard
    set proxy-server-ip 172.16.200.44
    set proxy-server-port 3128
    set proxy-username "test1"
    set proxy-password *****
end
```

To verify the explicit proxy connection to FortiGate Cloud Sandbox:

```
# diagnose debug application forticldd -1
Debug messages will be on for 30 minutes.
# diagnose debug enable
[2942] fds_handle_request: Received cmd 23 from pid=2526, len 0
[40] fds_queue_task: req-23 is added to Cloud-sandbox-controller
[178] fds_svr_default_task_xmit: try to get IPs for Cloud-sandbox-controller
[239] fds_resolv_addr: resolve aptctrl1.fortinet.com
[169] fds_get_addr: name=aptctrl1.fortinet.com, id=32, cb=0x2bc089
[101] dns_parse_resp: DNS aptctrl1.fortinet.com -> 172.16.102.21
[227] fds_resolv_cb: IP-1: 172.16.102.21
[665] fds_ctx_set_addr: server: 172.16.102.21:443
[129] fds_svr_default_pickup_server: Cloud-sandbox-controller: 172.16.102.21:443
[587] fds_https_start_server: server: 172.16.102.21:443
[579] ssl_new: SSL object is created
[117] https_create: proxy server 172.16.200.44 port:3128
[519] fds_https_connect: https_connect(172.16.102.21) is established.
[261] fds_svr_default_on_established: Cloud-sandbox-controller has connected to
ip=172.16.102.21
[268] fds_svr_default_on_established: server-Cloud-sandbox-controller handles cmd-23
[102] fds_pack_objects: number of objects: 1
[75] fds_print_msg: FCPC: len=109
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Command=RegionList
[81] fds_print_msg: Firmware=FG101E-FW-6.02-0917
[81] fds_print_msg: SerialNumber=FG101E4Q17002429
[81] fds_print_msg: TimeZone=-7
[75] fds_print_msg: http req: len=248
[81] fds_print_msg: POST https://172.16.102.21:443/FCPSERVICE HTTP/1.1
```



```
[81] fds_print_msg: User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1)
[81] fds_print_msg: Host: 172.16.102.21:443
[81] fds_print_msg: Cache-Control: no-cache
[81] fds_print_msg: Connection: close
[81] fds_print_msg: Content-Type: application/octet-stream
[81] fds_print_msg: Content-Length: 301
[524] fds_https_connect: http request to 172.16.102.21: header=248, ext=301.
[257] fds_https_send: sent 248 bytes: pos=0, len=248
[265] fds_https_send: 172.16.102.21: sent 248 byte header, now send 301-byte body
[257] fds_https_send: sent 301 bytes: pos=0, len=301
[273] fds_https_send: sent the entire request to server: 172.16.102.21:443
[309] fds_https_recv: read 413 bytes: pos=413, buf_len=2048
[332] fds_https_recv: received the header from server: 172.16.102.21:443, [HTTP/1.1 200
Content-Type: application/octet-stream
Content-Length: 279
Date: Thu, 20 Jun 2019 16:41:11 GMT
Connection: close]
[396] fds_https_recv: Do memmove buf_len=279, pos=279
[406] fds_https_recv: server: 172.16.102.21:443, buf_len=279, pos=279
[453] fds_https_recv: received a packet from server-172.16.102.21:443: sz=279, objs=1
[194] __ssl_data_ctx_free: Done
[839] ssl_free: Done
[830] ssl_disconnect: Shutdown
[481] fds_https_recv: obj-0: type=FCPR, len=87
[294] fds_svr_default_on_response: server-Cloud-sandbox-controller handles cmd-23
[75] fds_print_msg: fcpr: len=83
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Response=202
[81] fds_print_msg: ResponseItem=Region:Europe,Global,Japan,US
[81] fds_print_msg: existing:Japan
[3220] aptctrl_region_res: Got rsp: Region:Europe,Global,Japan,US
[3222] aptctrl_region_res: Got rsp: Region existing:Japan
[439] fds_send_reply: Sending 28 bytes data.
[395] fds_free_tsk: cmd=23; req.noreply=1
# [136] fds_on_sys_fds_change: trace
[2942] fds_handle_request: Received cmd 22 from pid-170, len 0
[40] fds_queue_task: req-22 is added to Cloud-sandbox-controller
[587] fds_https_start_server: server: 172.16.102.21:443
[579] ssl_new: SSL object is created
[117] https_create: proxy server 172.16.200.44 port:3128
[519] fds_https_connect: https_connect(172.16.102.21) is established.
[261] fds_svr_default_on_established: Cloud-sandbox-controller has connected to
ip=172.16.102.21
[268] fds_svr_default_on_established: server-Cloud-sandbox-controller handles cmd-22
[102] fds_pack_objects: number of objects: 1
[75] fds_print_msg: FCPC: len=146
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Command=UpdateAPT
[81] fds_print_msg: Firmware=FG101E-FW-6.02-0917
[81] fds_print_msg: SerialNumber=FG101E4Q17002429
[81] fds_print_msg: TimeZone=-7
[81] fds_print_msg: TimeZoneInMin=-420
[81] fds_print_msg: DataItem=Region:US
[75] fds_print_msg: http req: len=248
[81] fds_print_msg: POST https://172.16.102.21:443/FCPSERVICE HTTP/1.1
[81] fds_print_msg: User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1)
```

```
[81] fds_print_msg: Host: 172.16.102.21:443
[81] fds_print_msg: Cache-Control: no-cache
[81] fds_print_msg: Connection: close
[81] fds_print_msg: Content-Type: application/octet-stream
[81] fds_print_msg: Content-Length: 338
[524] fds_https_connect: http request to 172.16.102.21: header=248, ext=338.
[257] fds_https_send: sent 248 bytes: pos=0, len=248
[265] fds_https_send: 172.16.102.21: sent 248 byte header, now send 338-byte body
[257] fds_https_send: sent 338 bytes: pos=0, len=338
[273] fds_https_send: sent the entire request to server: 172.16.102.21:443
[309] fds_https_recv: read 456 bytes: pos=456, buf_len=2048
[332] fds_https_recv: received the header from server: 172.16.102.21:443, [HTTP/1.1 200
Content-Type: application/octet-stream
Content-Length: 322
Date: Thu, 20 Jun 2019 16:41:16 GMT
Connection: close]
[396] fds_https_recv: Do memmove buf_len=322, pos=322
[406] fds_https_recv: server: 172.16.102.21:443, buf_len=322, pos=322
[453] fds_https_recv: received a packet from server-172.16.102.21:443: sz=322, objs=1
[194] __ssl_data_ctx_free: Done
[839] ssl_free: Done
[830] ssl_disconnect: Shutdown
[481] fds_https_recv: obj-0: type=FCPR, len=130
[294] fds_svr_default_on_response: server-Cloud-sandbox-controller handles cmd-22
[75] fds_print_msg: fcpr: len=126
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Response=202
[81] fds_print_msg: ResponseItem=Server1:172.16.102.51:514
[81] fds_print_msg: Server2:172.16.102.52:514
[81] fds_print_msg: Contract:20210215
[81] fds_print_msg: NextRequest:86400
[615] parse_apt_contract_time_str: The APTContract is valid to Mon Feb 15 23:59:59 2021
[616] parse_apt_contract_time_str: FGT current local time is Thu Jun 20 09:41:16 2019
[3289] aptctrl_update_res: Got rsp: APT=172.16.102.51:514 APTAlter=172.16.102.52:514 next-
upd=86400
[395] fds_free_tsk: cmd=22; req.noreply=1
```

## Proxy chaining

For the explicit web proxy you can configure web proxy forwarding servers to use proxy chaining to redirect web proxy sessions to other proxy servers. Proxy chaining can be used to forward web proxy sessions from the FortiGate unit to one or more other proxy servers on your network or on a remote network. You can use proxy chaining to integrate the FortiGate explicit web proxy with a web proxy solution that you already have in place.

A FortiGate unit can forward sessions to most web proxy servers including a remote FortiGate unit with the explicit web proxy enabled. No special configuration of the explicit web proxy on the remote FortiGate unit is required.

You can deploy the explicit web proxy with proxy chaining in an enterprise environment consisting of small satellite offices and a main office. If each office has a FortiGate unit, users at each of the satellite offices can use their local FortiGate unit as an explicit web proxy server. The satellite office FortiGate units can forward explicit web proxy sessions to an explicit web proxy server at the central office. From here the sessions can connect to web servers on the Internet.

FortiGate proxy chaining does not support web proxies in the proxy chain authenticating each other.

The following examples assume explicit web proxy has been enabled.

### To enable explicit web proxy in the GUI:

1. Go to *System > Feature Visibility*.
2. In the *Security Features* column, enable *Explicit Proxy*.
3. Configure the explicit web proxy settings. See [Explicit web proxy on page 257](#).

### To add a web proxy forwarding server in the GUI:

1. Go to *Network > Explicit Proxy*. The *Explicit Proxy* page opens.
2. In the *Web Proxy Forwarding Servers* section, click *Create New*.
3. Configure the server settings:

<b>Name</b>	Enter the name of the forwarding server.
<b>Proxy Address Type</b>	Select the type of IP address of the forwarding server. A forwarding server can have an <i>FQDN</i> or <i>IP</i> address.
<b>Proxy Address</b>	Enter the IP address of the forwarding server.
<b>Port</b>	Enter the port number on which the proxy receives connections. Traffic leaving the FortiGate explicit web proxy for this server has its destination port number changed to this number.
<b>Server Down Action</b>	Select the action the explicit web proxy will take if the forwarding server is down. <ul style="list-style-type: none"> <li>• <i>Block</i>: Blocks the traffic if the remote server is down.</li> <li>• <i>Use Original Server</i>: Forwards the traffic from the FortiGate to its destination as if no forwarding server is configured.</li> </ul>
<b>Health Monitor</b>	Select to enable health check monitoring.
<b>Health Check Monitor Site</b>	Enter the address of a remote site.

4. Click *OK*.

### Example

The following example adds a web proxy forwarding server named `fwd-srv` at address `proxy.example.com` and port 8080.

### To add a web proxy forwarding server in the CLI:

```
config web-proxy forward-server
  edit fwd-srv
    set addr-type fqdn
    set fqdn proxy.example.com
    set port 8080
  next
end
```

## Web proxy forwarding server monitoring and health checking

By default, a FortiGate unit monitors a web proxy forwarding server by forwarding a connection to the remote server every 10 seconds. The remote server is assumed to be down if it does not respond to the connection. FortiGate continues checking the server. The server is assumed to be back up when the server sends a response. If you enable health checking, the FortiGate unit attempts to get a response from a web server every 10 seconds by connecting through the remote forwarding server.

You can configure health checking for each remote server and specify a different website to check for each one.

If the remote server is found to be down you can configure the FortiGate unit to block sessions until the server comes back up or to allow sessions to connect to their destination, bypassing the remote forwarding server. You cannot configure the FortiGate unit to fail over to another remote forwarding server.

### To configure proxy server monitor and health checking in the GUI:

1. Go to *Network > Explicit Proxy*. The *Explicit Proxy* page opens.
2. In the *Web Proxy Forwarding Servers* section, edit a server.
3. Configure the *Server Down Action* and *Health Monitor* settings.

<b>Server Down Action</b>	Select the action the explicit web proxy will take if the forwarding server is down. <ul style="list-style-type: none"> <li>• <i>Block</i>: Blocks the traffic if the remote server is down.</li> <li>• <i>Use Original Server</i>: Forwards the traffic from the FortiGate to its destination as if no forwarding server configured.</li> </ul>
<b>Health Monitor</b>	Select to enable health check monitoring.
<b>Health Check Monitor Site</b>	Enter the address of a remote site.

4. Click *OK*.

### Example

The following example enables health checking for a web proxy forwarding server and sets the server down option to bypass the forwarding server if it is down.

### To configure proxy server monitor and health checking in the CLI:

```
config web-proxy forward-server
  edit fwd-srv
    set healthcheck enable
    set monitor http://example.com
    set server-down-option pass
  next
end
```

## Grouping forwarding servers and load balancing traffic to the servers

You can add multiple web proxy forwarding servers to a forwarding server group and then add the server group to an explicit web proxy policy instead of adding a single server. Forwarding server groups are created from the FortiGate CLI but can be added to policies from the web-based manager (or from the CLI).

When you create a forwarding server group you can select a load balancing method to control how sessions are load balanced to the forwarding servers in the server group. Two load balancing methods are available:

- *Weighted* load balancing sends more sessions to the servers with higher weights. You can configure the weight for each server when you add it to the group.
- *Least-session* load balancing sends new sessions to the forwarding server that is processing the fewest sessions.

When you create a forwarding server group you can also enable *affinity*. Enable affinity to have requests from the same client processed by the same server. This can reduce delays caused by using multiple servers for a single multi-step client operation. Affinity takes precedence over load balancing.

You can also configure the behavior of the group if all of the servers in the group are down. You can select to block traffic or you can select to have the traffic pass through the FortiGate explicit proxy directly to its destination instead of being sent to one of the forwarding servers.

## Example

The following example adds a forwarding server group that uses weighted load balancing to load balance traffic to three forwarding servers. Server weights are configured to send most traffic to `server2`. The group has `affinity` enabled and blocks traffic if all of the forward servers are down.

### To configure load balancing in the CLI:

```
config web-proxy forward-server
  edit server_1
    set ip 172.20.120.12
    set port 8080
  next
  edit server_2
    set ip 172.20.120.13
    set port 8000
  next
  edit server_3
    set ip 172.20.120.14
    set port 8090
  next
end

config web-proxy forward-server-group
  edit New-fwd-group
    set affinity enable
    set ldb-method weighted
    set group-down-option block
    config server-list
      edit server_1
        set weight 10
      next
      edit server_2
        set weight 40
      next
      edit server_3
        set weight 10
      next
    end
  next
end
```

## Adding proxy chaining to an explicit web proxy policy

You can enable proxy chaining for web proxy sessions by adding a web proxy forwarding server or server group to an explicit web proxy policy. In a policy you can select one web proxy forwarding server or server group. All explicit web proxy traffic accepted by this security policy is forwarded to the specified web proxy forwarding server or server group.

### To add an explicit web proxy forwarding server in the GUI:

1. Go to *Policy & Objects > Proxy Policy* and click *Create New*.
2. Configure the policy settings:

<b>Proxy Type</b>	Explicit Web
<b>Outgoing Interface</b>	wan1
<b>Source</b>	Internal_subnet
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	webproxy
<b>Action</b>	Accept

3. Enable *Web Proxy Forwarding Server* and select the forwarding server, (for example, *fwd-srv*).
4. Click *OK*.

### Example

The following example adds a security policy that allows all users on the 10.31.101.0 subnet to use the explicit web proxy for connections through the wan1 interface to the Internet. The policy forwards web proxy sessions to a remote forwarding server named *fwd-srv*.

### To add an explicit web proxy forwarding server in the CLI:


```
config firewall proxy-policy
  edit 0
    set proxy explicit-web
    set dstintf "wan1"
    set srcaddr "Internal_subnet"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
    set webproxy-forward-server "fwd-srv"
  next
end
```

## Using TLS 1.3 with web proxy forward servers

A FortiGate can handle TLS 1.3 traffic in both deep and certificate inspection modes.

## Example

The following example demonstrates that the Squid server and the FortiGate can handle TLS 1.3 traffic.

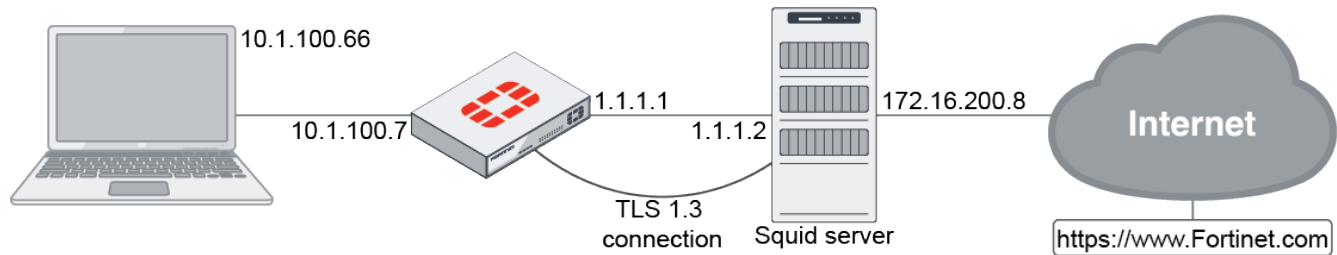

The following output from the Squid server demonstrates that the FortiGate supports TLS 1.3 traffic and forwards the hello retry request back to the client PC. The client PC then sends the client hello again, and the connection is successfully established.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	10.1.100.66	10.1.100.7	TCP	70	58896 → 443 [SYN] Seq=0 Win=64240 Len=0 MSS=1460 SACK_PERM=1 TSval=84354029 TSecr=0 WS=128
2	0.000016	10.1.100.66	10.1.100.7	TCP	78	443 → 58896 [SYN, ACK] Seq=0 Ack=1 Win=16384 Len=0 MSS=1460 SACK_PERM=1 TSval=346078 TSecr=84354029
3	0.000141	10.1.100.66	10.1.100.7	TCP	66	58896 → 443 [ACK] Seq=1 Ack=1 Win=64256 Len=0 TSval=84354029 TSecr=346078
4	0.000275	10.1.100.66	10.1.100.7	TLSv1.3	583	Client Hello
5	0.000288	10.1.100.66	10.1.100.7	TCP	66	443 → 58896 [ACK] Seq=1 Ack=518 Win=15616 Len=0 TSval=346078 TSecr=84354035
6	0.000945	10.1.100.66	10.1.100.7	TLSv1.3	159	Hello Retry Request
7	0.001006	10.1.100.66	10.1.100.7	TCP	66	58896 → 443 [ACK] Seq=518 Ack=94 Win=64256 Len=0 TSval=84354079 TSecr=346082
8	0.001219	10.1.100.66	10.1.100.7	TLSv1.3	589	Change cipher spec, Client Hello
9	0.001532	10.1.100.66	10.1.100.7	TCP	66	443 → 58896 [ACK] Seq=94 Ack=1041 Win=16640 Len=0 TSval=346083 TSecr=84354080
10	0.077822	10.1.100.66	10.1.100.7	TLSv1.3	1514	Server Hello, Change cipher spec, Application Data
11	0.077837	10.1.100.66	10.1.100.7	TLSv1.3	1514	Application Data [TCP segment of a reassembled PDU]
12	0.077840	10.1.100.66	10.1.100.7	TLSv1.3	317	Application Data, Application Data
13	0.078252	10.1.100.66	10.1.100.7	TCP	66	58896 → 443 [ACK] Seq=1041 Ack=3241 Win=62592 Len=0 TSval=84354108 TSecr=346085
14	0.078659	10.1.100.66	10.1.100.7	TLSv1.3	140	Application Data
15	0.081404	10.1.100.66	10.1.100.7	TLSv1.3	169	Application Data
16	0.081410	10.1.100.66	10.1.100.7	TCP	66	443 → 58896 [ACK] Seq=3241 Ack=1218 Win=16640 Len=0 TSval=346086 TSecr=84354109
17	0.101700	10.1.100.66	10.1.100.7	TLSv1.3	657	Application Data
18	0.101856	10.1.100.66	10.1.100.7	TLSv1.3	657	Application Data
19	0.102000	10.1.100.66	10.1.100.7	TCP	66	58896 → 443 [ACK] Seq=1218 Ack=4423 Win=64128 Len=0 TSval=84354131 TSecr=346088
20	0.112950	10.1.100.66	10.1.100.7	TLSv1.3	755	Application Data, Application Data, Application Data
21	0.135598	10.1.100.66	10.1.100.7	TLSv1.3	80	Application Data
22	0.135632	10.1.100.66	10.1.100.7	TCP	66	443 → 58896 [FIN, ACK] Seq=5092 Ack=1342 Win=16640 Len=0 TSval=346089 TSecr=84354145
23	0.136062	10.1.100.66	10.1.100.7	TCP	66	58896 → 443 [FIN, ACK] Seq=1341 Ack=5090 Win=64128 Len=0 TSval=84354146 TSecr=346089
24	0.136066	10.1.100.66	10.1.100.7	TCP	66	443 → 58896 [ACK] Seq=1309 Ack=1243 Win=16640 Len=0 TSval=346089 TSecr=84354145

## WAN optimization SSL proxy chaining

An SSL server does not need to be defined for WAN optimization (WANOpt) SSL traffic offloading (traffic acceleration). The server side FortiGate uses an SSL profile to resign the HTTP server's certificate, both with and without an external proxy, without an SSL server configured. GCM and ChaCha ciphers can also be used in the SSL connection.


## Examples

In these examples, HTTPS traffic is accelerated without configuring an SSL server, including with a proxy in between, and when the GCM or ChaCha ciphers are used.

### Example 1

In this example, the server certificate is resigned by the server side FortiGate, and HTTPS traffic is accelerated without configuring an SSL server.

HTTPS traffic with the GCM or ChaCha cipher can pass through WANOpt tunnel.

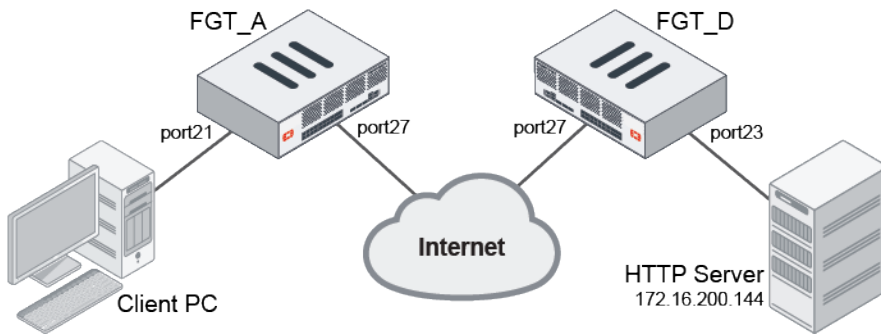

### To configure FGT\_A:

#### 1. Configure the hard disk to perform WANOpt:

```

config system storage
  edit "HDD2"
    set status enable
    set usage wanopt
    set wanopt-mode mix
  next
end

```

#### 2. Configure the WANOpt peer and profile:

```

config wanopt peer
  edit "FGT-D"
    set ip 120.120.120.172
  next
end

config wanopt profile
  edit "test"
    config http
      set status enable
      set ssl enable
    end
  next
end

```

#### 3. Create an SSL profile with deep inspection on HTTPS port 443:

```

config firewall ssl-ssh-profile
  edit "ssl"
    config https
      set ports 443
      set status deep-inspection
    end
  next
end

```

#### 4. Configure a firewall policy in proxy mode with WANOpt enabled and the WANOpt profile selected:

```

config firewall policy
  edit 1
    set name "WANOPT-A"

```



```
        set srcintf "port21"
        set dstintf "port27"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
        set wanopt enable
        set wanopt-profile "test"
        set nat enable
    next
end
```

## To configure FGT\_D:

### 1. Configure the hard disk to perform WANOpt:

```
config system storage
    edit "HDD2"
        set status enable
        set usage wanopt
        set wanopt-mode mix
    next
end
```

### 2. Configure the WANOpt peer:

```
config wanopt peer
    edit "FGT-A"
        set ip 110.110.110.171
    next
end
```

### 3. Create an SSL profile with deep inspection on HTTPS port 443. The default *Fortinet\_CA\_SSL* certificate is used to resign the server certificate:

```
config firewall ssl-ssh-profile
    edit "ssl"
        config https
            set ports 443
            set status deep-inspection
        end
    next
end
```

### 4. Configure a firewall policy in proxy mode with WANOpt enabled and passive WANOpt detection:

```
config firewall policy
    edit 1
        set name "WANOPT-B"
        set srcintf "port27"
        set dstintf "port23"
        set action accept
        set srcaddr "all"
```

```

        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set wanopt enable
        set wanopt-detection passive
        set nat enable
    next
end

```

**5. Configure a proxy policy to apply the SSL profile:**

```

config firewall proxy-policy
    edit 100
        set proxy wanopt
        set dstintf "port23"
        set srcaddr "all"
        set dstaddr "all"
        set service "ALL"
        set action accept
        set schedule "always"
        set utm-status enable
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
    next
end

```

**To confirm that traffic is accelerated:**

**1. On the client PC, curl a 10MB test sample for the first time:**

```

root@client:/tmp# curl -k https://172.16.200.144/test_10M.pdf -O
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left  Speed
100 9865k  100 9865k    0     0  663k      0  0:00:14  0:00:15 --:--:-- 1526k

```

It takes 15 seconds to finish the download.

**2. On FGT\_A, check the WAD statistics:**

```

# diagnose wad stats worker.tunnel
comp.n_in_raw_bytes      10155840
comp.n_in_comp_bytes     4548728
comp.n_out_raw_bytes     29624
comp.n_out_comp_bytes    31623

# diagnose wad stats worker.protos.http
wan.bytes_in             0
wan.bytes_out            0
lan.bytes_in             760
lan.bytes_out            10140606
tunnel.bytes_in          4548728
tunnel.bytes_out         31623

```

**3. Curl the same test sample a second time:**

```

root@client:/tmp# curl -k https://172.16.200.144/test_10M.pdf -O
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left  Speed

```

						Dload	Upload	Total	Spent	Left	Speed
100	9865k	100	9865k	0	0	663k	0	0:00:01	<b>0:00:01</b>	--:--:--	1526k

It now takes less than one second to finish the download.

#### 4. On FGT\_A, check the WAD statistics again:

```
# diagnose wad stats worker.tunnel
comp.n_in_raw_bytes           10181157
comp.n_in_comp_bytes           4570331
comp.n_out_raw_bytes           31627
comp.n_out_comp_bytes          34702

# diagnose wad stats worker.protos.http
wan.bytes_in                    0
wan.bytes_out                   0
lan.bytes_in                    1607
lan.bytes_out                 20286841
tunnel.bytes_in                 4570331
tunnel.bytes_out                 34702
```

The tunnel bytes are mostly unchanged, but the LAN bytes are doubled. This means that the bytes of the second curl come from the cache, showing that the traffic is accelerated.

### To confirm that a curl using the GCM cipher is accepted and accelerated:

#### 1. On the client PC, curl a 10MB test sample with the GCM cipher:

```
root@client:/tmp# curl -v -k --ciphers DHE-RSA-AES128-GCM-SHA256
https://172.16.200.144/test_10M.pdf -O
* Trying 172.16.200.144...
* TCP_NODELAY set
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left   Speed
  0     0    0     0    0     0     0     0  --:--:-- --:--:-- --:--:--    0*
Connected to 172.16.200.144 (172.16.200.144) port 443 (#0)
* ALPN, offering h2
* ALPN, offering http/1.1
* Cipher selection: DHE-RSA-AES128-GCM-SHA256
* successfully set certificate verify locations:
* CAfile: /etc/ssl/certs/ca-certificates.crt
  CPath: none
} [5 bytes data]
* TLSv1.3 (OUT), TLS handshake, Client hello (1):
} [512 bytes data]
* TLSv1.3 (IN), TLS handshake, Server hello (2):
{ [100 bytes data]
* TLSv1.2 (IN), TLS handshake, Certificate (11):
{ [1920 bytes data]
* TLSv1.2 (IN), TLS handshake, Server key exchange (12):
{ [783 bytes data]
* TLSv1.2 (IN), TLS handshake, Server finished (14):
{ [4 bytes data]
* TLSv1.2 (OUT), TLS handshake, Client key exchange (16):
} [262 bytes data]
* TLSv1.2 (OUT), TLS change cipher, Change cipher spec (1):
} [1 bytes data]
* TLSv1.2 (OUT), TLS handshake, Finished (20):
```

```

} [16 bytes data]
* TLSv1.2 (IN), TLS handshake, Finished (20):
{ [16 bytes data]
* SSL connection using TLSv1.2 / DHE-RSA-AES128-GCM-SHA256
* ALPN, server accepted to use http/1.1
* Server certificate:
*   subject: CN=ubuntu
*   start date: Sep 20 21:38:01 2018 GMT
*   expire date: Sep 17 21:38:01 2028 GMT
*   issuer: C=US; ST=California; L=Sunnyvale; O=Fortinet; OU=Certificate Authority;
CN=Fortinet Untrusted CA; emailAddress=support@fortinet.com
* SSL certificate verify result: self signed certificate in certificate chain (19),
continuing anyway.
} [5 bytes data]
> GET /test_10M.pdf HTTP/1.1
> Host: 172.16.200.144
> User-Agent: curl/7.64.1
> Accept: */*
>
{ [5 bytes data]
< HTTP/1.1 200 OK
< Date: Sat, 12 Jun 2021 00:31:08 GMT
< Server: Apache/2.4.37 (Ubuntu)
< Upgrade: h2,h2c
< Connection: Upgrade
< Last-Modified: Fri, 29 Jan 2021 20:10:25 GMT
< ETag: "9a2572-5ba0f98404aa5"
< Accept-Ranges: bytes
< Content-Length: 10102130
< Content-Type: application/pdf
<
{ [5 bytes data]
100 9865k 100 9865k 0 0 16.7M 0 --:--:-- --:--:-- --:--:-- 16.8M
* Connection #0 to host 172.16.200.144 left intact
* Closing connection 0

```

### To confirm that a curl using the ChaCha cipher is accepted and accelerated:

#### 1. On the client PC, curl a 10MB test sample with the ChaCha cipher:

```

root@client:/tmp# curl -v -k --ciphers ECDHE-RSA-CHACHA20-POLY1305
https://172.16.200.144/test.doc -O
* Trying 172.16.200.144...
* TCP_NODELAY set
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left   Speed
  0     0    0     0    0     0      0      0 --:--:-- --:--:-- --:--:--    0*
Connected to 172.16.200.144 (172.16.200.144) port 443 (#0)
* ALPN, offering h2
* ALPN, offering http/1.1
* Cipher selection: ECDHE-RSA-CHACHA20-POLY1305
* successfully set certificate verify locations:
*   CAfile: /etc/ssl/certs/ca-certificates.crt
  CAspace: none
} [5 bytes data]
* TLSv1.3 (OUT), TLS handshake, Client hello (1):

```


```

} [512 bytes data]
* TLSv1.3 (IN), TLS handshake, Server hello (2):
{ [100 bytes data]
* TLSv1.2 (IN), TLS handshake, Certificate (11):
{ [1920 bytes data]
* TLSv1.2 (IN), TLS handshake, Server key exchange (12):
{ [300 bytes data]
* TLSv1.2 (IN), TLS handshake, Server finished (14):
{ [4 bytes data]
* TLSv1.2 (OUT), TLS handshake, Client key exchange (16):
} [37 bytes data]
* TLSv1.2 (OUT), TLS change cipher, Change cipher spec (1):
} [1 bytes data]
* TLSv1.2 (OUT), TLS handshake, Finished (20):
} [16 bytes data]
* TLSv1.2 (IN), TLS handshake, Finished (20):
{ [16 bytes data]
* SSL connection using TLSv1.2 / ECDHE-RSA-CHACHA20-POLY1305
* ALPN, server accepted to use http/1.1
* Server certificate:
*  subject: CN=ubuntu
*  start date: Sep 20 21:38:01 2018 GMT
*  expire date: Sep 17 21:38:01 2028 GMT
*  issuer: C=US; ST=California; L=Sunnyvale; O=Fortinet; OU=Certificate Authority;
CN=Fortinet Untrusted CA; emailAddress=support@fortinet.com
*  SSL certificate verify result: self signed certificate in certificate chain (19),
continuing anyway.
} [5 bytes data]
> GET /test.doc HTTP/1.1
> Host: 172.16.200.144
> User-Agent: curl/7.64.1
> Accept: */*
>
{ [5 bytes data]
< HTTP/1.1 200 OK
< Date: Sat, 12 Jun 2021 00:32:11 GMT
< Server: Apache/2.4.37 (Ubuntu)
< Upgrade: h2,h2c
< Connection: Upgrade
< Last-Modified: Wed, 05 May 2021 21:59:49 GMT
< ETag: "4c00-5c19c504b63f4"
< Accept-Ranges: bytes
< Content-Length: 19456
< Content-Type: application/msword
<
{ [5 bytes data]
100 19456 100 19456 0 0 137k 0 --:--:-- --:--:-- --:--:-- 138k
* Connection #0 to host 172.16.200.144 left intact
* Closing connection 0

```

## Example 2

In this example, an external proxy is added to the configuration in [Example 1](#).

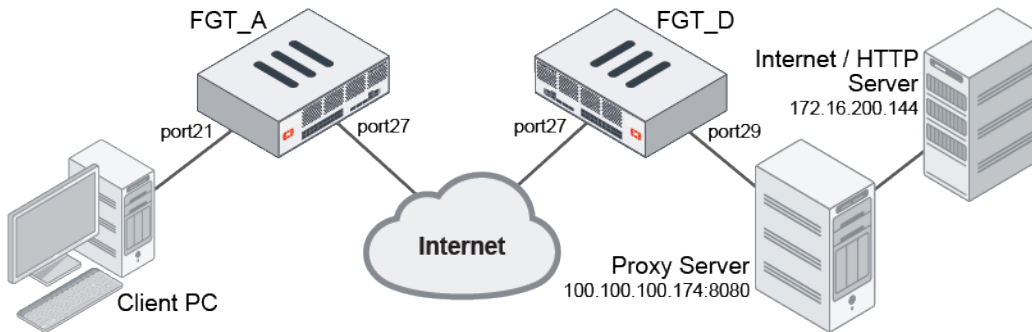

### To reconfigure FGT\_A:

```

config firewall profile-protocol-options
  edit "protocol"
    config http
      set ports 80 8080
      unset options
      unset post-lang
    end
  next
end

```

### To reconfigure FGT\_D:

1. Configure a new firewall policy for traffic passing from port27 to port29:

```

config firewall policy
  edit 1
    set name "WANOPT-B"
    set srcintf "port27"
    set dstintf "port29"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set wanopt enable
    set wanopt-detection passive
    set nat enable
  next
end

```

2. Configure a proxy policy for traffic on destination interface port29:

```

config firewall proxy-policy
  edit 100
    set proxy wanopt
    set dstintf "port29"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    set action accept
  
```

```

        set schedule "always"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
    next
end

```

### To confirm that HTTPS traffic is still being accelerated:

1. On the client PC, curl the same 10MB test sample through the explicit proxy:

```

root@client:/tmp# curl -x 100.100.100.174:8080 -v -k https://172.16.200.144/test_10M.pdf
-O
  % Total    % Received % Xferd  Average Speed   Time    Time     Time  Current
                                 Dload  Upload   Total   Spent    Left   Speed
100 9865k  100 9865k    0     0   663k      0  0:00:01  0:00:01 --:--:-- 1526k

```

It takes less than a second to finish the download.

## Agentless NTLM authentication for web proxy

Agentless Windows NT LAN Manager (NTLM) authentication includes support for the following items:

- Multiple servers
- Individual users

You can use multiple domain controller servers for the agentless NTLM. They can be used for load balancing and high service stability.

You can also use user-based matching in groups for Kerberos and agentless NTLM. In these scenarios, FortiOS matches the user's group information from an LDAP server.

### To support multiple domain controllers for agentless NTLM using the CLI:

1. Configure an LDAP server:

```

config user ldap
    edit "ldap-kerberos"
        set server "172.18.62.177"
        set cnid "cn"
        set dn "dc=fortinetqa,dc=local"
        set type regular
        set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
        set password *****
    next
end

```

2. Configure multiple domain controllers:

```

config user domain-controller
    edit "dc1"
        set ip-address 172.18.62.177
        config extra-server
            edit 1
                set ip-address 172.18.62.220
            next
        end
    end
end

```

```

        set ldap-server "ldap-kerberos"
    next
end

```

### 3. Create an authentication scheme and rule:

```

config authentication scheme
    edit "au-ntlm"
        set method ntlm
        set domain-controller "dc1"
    next
end

config authentication rule
    edit "ru-ntlm"
        set srcaddr "all"
        set ip-based disable
        set active-auth-method "au-ntlm"
    next
end

```

### 4. In the proxy policy, append the user group for authorization:

```

config firewall proxy-policy
    edit 1
        set proxy explicit-web
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "web"
        set action accept
        set schedule "always"
        set groups "ldap-group"
        set utm-status enable
        set av-profile "av"
        set ssl-ssh-profile "deep-custom"
    next
end

```

This configuration uses a round-robin method. When the first user logs in, the FortiGate sends the authentication request to the first domain controller. Later when another user logs in, the FortiGate sends the authentication request to another domain controller.

### 5. Verify the behavior after the user successfully logs in:

```

# diagnose wad user list
ID: 1825, IP: 10.1.100.71, VDOM: vdom1
  user name      : test1
  duration       : 497
  auth_type      : Session
  auth_method    : NTLM
  pol_id         : 1    g_id           : 5
  user_based     : 0    e
  xpire          : 103
LAN:
  bytes_in=2167 bytes_out=7657
WAN:
  bytes_in=3718 bytes_out=270

```



**To support individual users for agentless NTLM using the CLI:****1. Configure an LDAP server:**

```
config user ldap
  edit "ldap-kerberos"
    set server "172.18.62.177"
    set cnid "cn"
    set dn "dc=fortinetqa,dc=local"
    set type regular
    set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
    set password *****
  next
end
```

**2. Configure the user group and allow user-based matching:**

```
config user group
  edit "ldap-group"
    set member "ldap" "ldap-kerberos"
    config match
      edit 1
        set server-name "ldap-kerberos"
        set group-name "test1"
      next
    end
  next
end
```

**3. Create an authentication scheme and rule:**

```
config authentication scheme
  edit "au-ntlm"
    set method ntlm
    set domain-controller "dc1"
  next
end

config authentication rule
  edit "ru-ntlm"
    set srcaddr "all"
    set ip-based disable
    set active-auth-method "au-ntlm"
  next
end
```

**4. In the proxy policy, append the user group for authorization:**

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "web"
    set action accept
    set schedule "always"
    set groups "ldap-group"
    set utm-status enable
```

```

        set av-profile "av"
        set ssl-ssh-profile "deep-custom"
    next
end

```

This implementation lets you configure a single user instead of a whole group. The FortiGate will now allow the user named `test1`.

### To verify the configuration using the CLI:

```

diagnose wad user list
ID: 1827, IP: 10.1.15.25, VDOM: vdom1
user name   : test1
duration    : 161
auth_type   : Session
auth_method : NTLM
pol_id      : 1
g_id        : 5
user_based  : 0
expire      : 439
LAN:
    bytes_in=1309 bytes_out=4410
WAN:
    bytes_in=2145 bytes_out=544

```

## Multiple LDAP servers in Kerberos keytabs and agentless NTLM domain controllers

Multiple LDAP servers can be configured in Kerberos keytabs and agentless NTLM domain controllers for multi-forest deployments.

### To use multiple LDAP servers in Kerberos keytabs and agentless NTLM domain controllers:

#### 1. Add multiple LDAP servers:

```

config user ldap
    edit "ldap-kerberos"
        set server "172.16.200.98"
        set cnid "cn"
        set dn "dc=fortinetqa,dc=local"
        set type regular
        set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
        set password xxxxxxxxxx
    next
    edit "ldap-two"
        set server "172.16.106.128"
        set cnid "cn"
        set dn "OU=Testing,DC=ad864r2,DC=com"
        set type regular
        set username "cn=Testadmin,cn=users,dc=AD864R2,dc=com"
        set password xxxxxxxxxx
    next
end

```

#### 2. Configure a Kerberos keytab entry that uses both LDAP servers:

```

config user krb-keytab
    edit "http_service"
        set pac-data disable
        set principal "HTTP/FGT.FORTINETQA.LOCAL@FORTINETQA.LOCAL"
        set ldap-server "ldap-kerberos" "ldap-two"
        set keytab xxxxxxxxxx
    next
end

```

### 3. Configure a domain controller that uses both LDAP servers:

```

config user domain-controller
    edit "dc1"
        set ip-address 172.16.200.98
        set ldap-server "ldap-two" "ldap-kerberos"
    next
end

```

## Learn client IP addresses

Learning the actual client IP addresses is imperative for authorization. This function identifies the real client IP address when there is a NATing device between the FortiGate and the client.

```

config web-proxy global
    set learn-client-ip {enable | disable}
    set learn-client-ip-from-header {true-client-ip | x-real-ip | x-forwarded-for}
    set learn-client-ip-srcaddr <address> ... <address>
end

```

learn-client-ip {enable   disable}	Enable/disable learning the client's IP address from headers.
learn-client-ip-from-header {true-client-ip   x-real-ip   x-forwarded-for}	Learn client IP addresses from the specified headers.
learn-client-ip-srcaddr <address> ... <address>	The source address names.

## Example

In this example, the real client IP address is used to match a policy for FSSO authentication.

### To enable learning the client IP address:

```

config web-proxy global
    set proxy-fqdn "default.fqdn"
    set webproxy-profile "default"
    set learn-client-ip enable
        set learn-client-ip-from-header x-forwarded-for
    set learn-client-ip-srcaddr "all"
end

```

**To configure the proxy policy:**

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "mgmt1"
    set srcaddr "all"
    set dstaddr "all"
    set service "w"
    set action accept
    set schedule "always"
    set groups "fssol"
    set utm-status enable
    set av-profile "default"
    set dlp-profile "default"
    set profile-protocol-options "default"
    set ssl-ssh-profile "deep-inspection"
  next
end
```

**To configure the authentication scheme and rule:**

```
config authentication scheme
  edit "scheme1"
    set method fsso
  next
end


config authentication rule
  edit "rule1"
    set srcaddr "all"
    set sso-auth-method "scheme1"
  next
end
```

## Explicit proxy authentication over HTTPS

When a HTTP request requires authentication in an explicit proxy, the authentication can be redirected to a secure HTTPS captive portal. Once authentication is complete, the client can be redirected back to the original destination over HTTP.

### Example

A user visits a website via HTTP through the explicit web proxy on a FortiGate. The user is required to authenticate by either basic or form IP-based authentication for the explicit web proxy service. The user credentials need to be transmitted over the networks in a secured method over HTTPS rather than in plain text. The user credentials are protected by redirecting the client to a captive portal of the FortiGate over HTTPS for authentication where the user credentials are encrypted and transmitted over HTTPS.

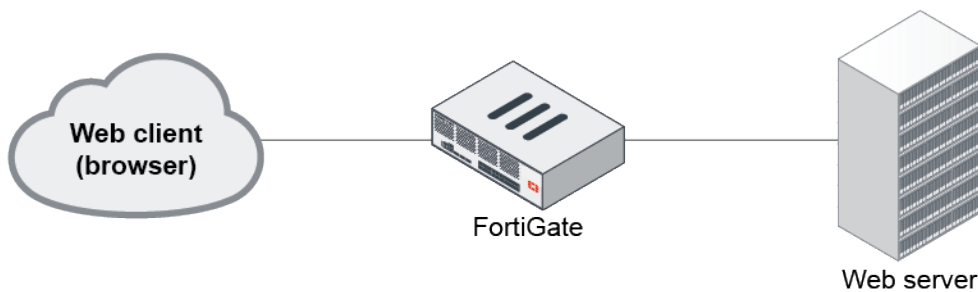

In this example, explicit proxy authentication over HTTPS is configured with form IP-based authentication. Once configured, you can enable authorization for an explicit web proxy by configuring users or groups in the firewall proxy policy.

### To configure explicit proxy authentication over HTTPS:

#### 1. Configure the authentication settings:

```
config authentication setting
    set captive-portal-type fqdn
    set captive-portal "fgt-cp"
    set auth-https enable
end
```

#### 2. Configure the authentication scheme:

```
config authentication scheme
    edit "form"
        set method form
        set user-database "local-user-db"
    next
end
```

#### 3. Configure the authentication rule:

```
config authentication rule
    edit "form"
        set srcaddr "all"
        set active-auth-method "form"
    next
end
```



If a session-based basic authentication method is used, enable `web-auth-cookie`.

#### 4. Configure the firewall address:

```
config firewall address
    edit "fgt-cp"
        set type fqdn
        set fqdn "fgt.fortinetqa.local"
    next
end
```

#### 5. Configure the interface:

```
config system interface
  edit "port10"
    set ip 10.1.100.1 255.255.255.0
    set explicit-web-proxy enable
    set proxy-captive-portal enable
  next
end
```

6. Configure a firewall proxy policy with users or groups (see [Explicit web proxy on page 257](#)).

## Verification

When a client visits a HTTP website, the client will be redirected to the captive portal for authentication by HTTPS. For example, the client could be redirected to a URL by a HTTP 303 message similar to the following:

*HTTP/1.1 303 See Other*

*Connection: close*

*Content-Type: text/html*

*Cache-Control: no-cache*

*Location:*

*https://fgt.fortinetqa.local:7831/XX/YY/ZZ/cpauth?scheme=http&Tmthd=0&host=172.16.200.46&port=80&rule=75&uri=Lw==&*


*Content-Length: 0*

The captive portal URL used for authentication is *https://fgt.fortinetqa.local:7831/....* Once the authentication is complete with all user credentials protected by HTTPS, the client is redirected to the original HTTP website they intended to visit.

## mTLS client certificate authentication

FortiGate supports client certificate authentication used in mutual Transport Layer Security (mTLS) communication between a client and server. Clients are issued certificates by the CA, and an access proxy configured on the FortiGate uses the new certificate method in the authentication scheme to identify and approve the certificate provided by the client when they try to connect to the access proxy. The FortiGate can also add the HTTP header X-Forwarded-Client-Cert to forward the certificate information to the server.

## Examples

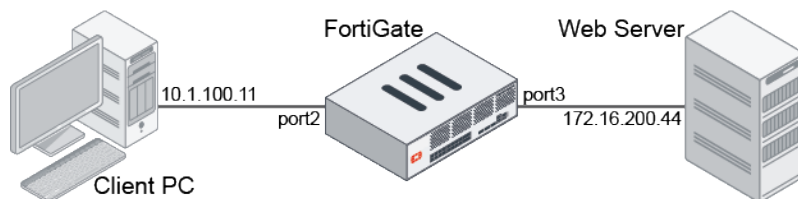

In these examples, the access proxy VIP IP address is 10.1.100.200.

## Example 1

In this example, clients are issued unique client certificates from your CA. The FortiGate authenticates the clients by their user certificate before allowing them to connect to the access proxy. The access server acts as a reverse proxy for the web server that is behind the FortiGate.

This example assumes that you have already obtained the public CA certificate from your CA, the root CA of the client certificate has been imported (CA\_Cert\_1), and the client certificate has been distributed to the endpoints.

### To configure the FortiGate:

1. Configure user authentication. Both an authentication scheme and rule must be configured, as the authentication is applied on the access proxy:

```
config authentication scheme
    edit "mtls"
        set method cert
        set user-cert enable
    next
end

config authentication rule
    edit "mtls"
        set srcintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set active-auth-method "mtls"
    next
end
```

2. Select the CA or CAs used to verify the client certificate:

```
config authentication setting
    set user-cert-ca "CA_Cert_1"
end
```

3. Configure the users. Users can be matched based on either the common-name on the certificate or the trusted issuer.

- Verify the user based on the common name on the certificate:

```
config user certificate
    edit "single-certificate"
        set type single-certificate
        set common-name "client.fortinet.com"
    next
end
```

- Verify the user based on the CA issuer:

```
config user certificate
    edit "trusted-issuer"
        set type trusted-issuer
        set issuer "CA_Cert_1"
    next
end
```

4. Configure the access proxy VIP. The SSL certificate is the server certificate that is presented to the user as they connect:

```

config firewall vip
  edit "mTLS"
    set type access-proxy
    set extip 10.1.100.200
    set extintf "port2"
    set server-type https
    set extport 443
    set ssl-certificate "Fortinet_CA_SSL"
  next
end

```

5. Configure the access proxy policy, including the real server to be mapped. To request the client certificate for authentication, `client-cert` is enabled:

```

config firewall access-proxy
  edit "mTLS-access-proxy"
    set vip "mTLS"
    set client-cert enable
    set empty-cert-action accept
    config api-gateway
      edit 1
        config realservers
          edit 1
            set ip 172.16.200.44
          next
        end
      next
    end
  next
end

```

6. Configure the proxy policy to apply authentication and the security profile, selecting the appropriate user object depending on the user type:

```


config firewall proxy-policy
  edit 3
    set proxy access-proxy
    set access-proxy "mTLS-access-proxy"
    set srcintf "port2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set users {"single-certificate" | "trusted-issuer"}
    set utm-status enable
    set ssl-ssh-profile "deep-inspection-clone"
    set av-profile "av"
  next
end

```


### To verify the results:

1. In a web browser, access the VIP address. This example uses Chrome.
2. When prompted, select the client certificate, then click OK.



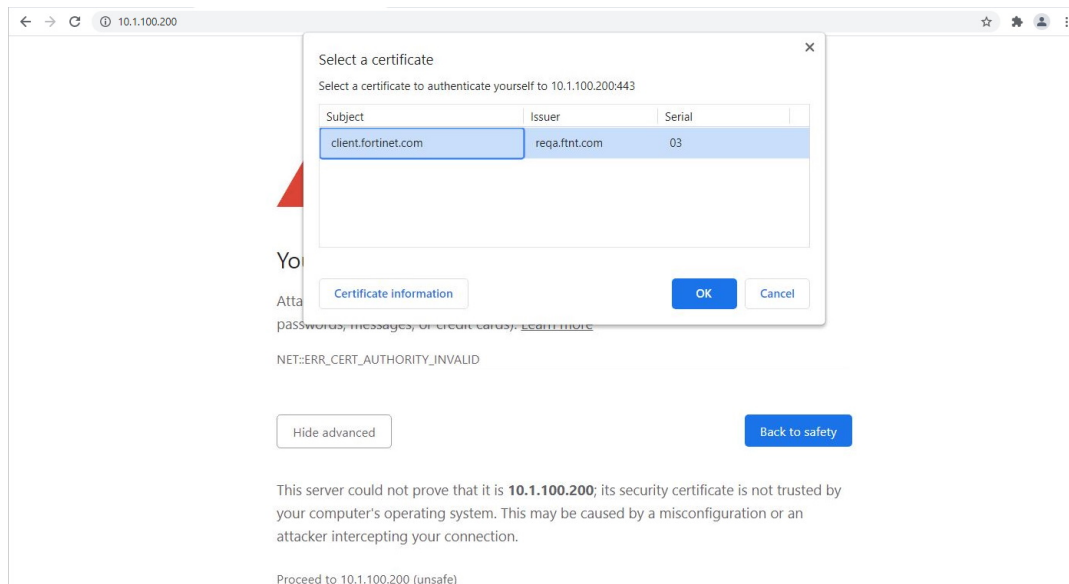

3. Click *Certificate information* to view details about the certificate.

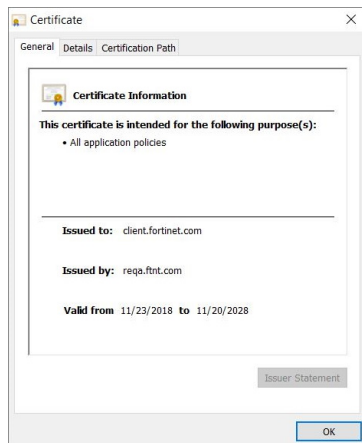

4. On the FortiGate, check the traffic logs.

- If client certificate authentication passes:

```
1: date=2021-06-03 time=15:48:36 eventtime=1622760516866635697 tz="-0700"
logid="0000000010" type="traffic" subtype="forward" level="notice" vd="vdom1"
srcip=10.1.100.11 srcport=45532 srcintf="port2" srcintfrole="undefined"
dstcountry="Reserved" srccountry="Reserved" dstip=172.16.200.44 dstport=443
dstintf="vdom1" dstintfrole="undefined" sessionid=154900 service="HTTPS"
wanoptapptype="web-proxy" proto=6 action="accept" policyid=3 policytype="proxy-
policy" poluuid="af5e2df2-c321-51eb-7d5d-42fa58868dcb" duration=0 user="single-
certificate" wanin=2550 rcvdbyte=2550 wanout=627 lanin=4113 sentbyte=4113 lanout=2310
appcat="unscanned"
```

- If the CA issuer is used to verify the client:

```
1: date=2021-06-03 time=15:43:02 eventtime=1622760182384776037 tz="-0700"
logid="0000000010" type="traffic" subtype="forward" level="notice" vd="vdom1"
srcip=10.1.100.11 srcport=45514 srcintf="port2" srcintfrole="undefined"
dstcountry="Reserved" srccountry="Reserved" dstip=10.1.100.200 dstport=443
dstintf="vdom1" dstintfrole="undefined" sessionid=153884 service="HTTPS"
```

```
wanoptapptype="web-proxy" proto=6 action="accept" policyid=3 policytype="proxy-policy" poluuid="af5e2df2-c321-51eb-7d5d-42fa58868dcb" duration=0 user="trusted-issuer" wanin=0 rcvdbyte=0 wanout=0 lanin=4089 sentbyte=4089 lanout=7517 appcat="unscanned" utmaction="block" countweb=1 crscore=30 craction=8 utmref=65535-0
```

- If the client certificate authentication fails, and the traffic is blocked:

```
1: date=2021-06-03 time=15:45:53 eventtime=1622760353789703671 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vdom1"
srcip=10.1.100.11 srcport=45518 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.44 dstport=443 dstintf="vdom1" dstintfrole="undefined"
srccountry="Reserved" dstcountry="Reserved" sessionid=154431 proto=6 action="deny"
policyid=0 policytype="proxy-policy" user="single-certificate" service="HTTPS"
trandisp="noop" url="https://10.1.100.200/" agent="curl/7.68.0" duration=0 sentbyte=0
rcvdbyte=0 sentpkt=0 rcvdpkt=0 appcat="unscanned" crscore=30 craction=131072
crlevel="high" msg="Traffic denied because of explicit proxy policy"
```

## Example 2

In this example, the same configuration as in [Example 1](#) is used, with a web proxy profile added to enable adding the client certificate to the HTTP header X-Forwarded-Client-Cert. The header is then forwarded to the server.

### To configure the FortiGate:

1. Repeat steps 1 to 6 of [Example 1](#), using the common name on the certificate to verify the user.
2. Configure a web proxy profile that adds the HTTP x-forwarded-client-cert header in forwarded requests:

```
config web-proxy profile
  edit "mtls"
    set header-x-forwarded-client-cert add
  next
end
```

3. Configure the proxy policy to apply authentication, the security profile, and web proxy profile:

```
config firewall proxy-policy
  edit 3
    set uuid af5e2df2-c321-51eb-7d5d-42fa58868dcb
    set proxy access-proxy
    set access-proxy "mTLS-access-proxy"
    set srcintf "port2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set logtraffic all
    set users "single-certificate"
    set webproxy-profile "mtls"
    set utm-status enable
    set ssl-ssh-profile "deep-inspection-clone"
    set av-profile "av"
  next
end
```

**To verify the results:**

The WAD debug shows that the FortiGate adds the client certificate information to the HTTP header. The added header cannot be checked using the sniffer, because the FortiGate encrypts the HTTP header to forward it to the server.

**1. Enable WAD debug on all categories:**

```
# diagnose wad debug enable category all
```

**2. Set the WAD debug level to verbose:**

```
# diagnose wad debug enable level verbose
```

**3. Enable debug output:**

```
# diagnose debug enable
```

**4. Check the debug output.**

- When the FortiGate receives the client HTTP request:

```
[0x7fc8d4bc4910] Received request from client: 10.1.100.11:45544
```


```
GET / HTTP/1.1
Host: 10.1.100.200
User-Agent: curl/7.68.0
Accept: */*
```

- When the FortiGate adds the client certificate in to the HTTP header and forwards the client HTTP request:

```
[0x7fc8d4bc4910] Forward request to server:
GET / HTTP/1.1
Host: 172.16.200.44
User-Agent: curl/7.68.0
Accept: */*
X-Forwarded-Client-Cert: -----BEGIN CERTIFICATE-----
MIIFXzCCA0egAwI...aCFHDHlR+wb39s=
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
MIIFpTCCA42gAwI...OtDtetkNoFLbvb
-----END CERTIFICATE-----
```

## CORS protocol in explicit web proxy when using session-based, cookie-enabled, and captive portal-enabled SAML authentication

The FortiGate explicit web proxy supports the Cross-Origin Resource Sharing (CORS) protocol, which allows the FortiGate to process a CORS preflight request and an actual CORS request properly, in addition to a simple CORS request when using session-based, cookie-enabled, and captive portal-enabled SAML authentication. This allows a FortiGate explicit web proxy user with this specific configuration to properly view a web page requiring CORS with domains embedded in it other than its own domain.

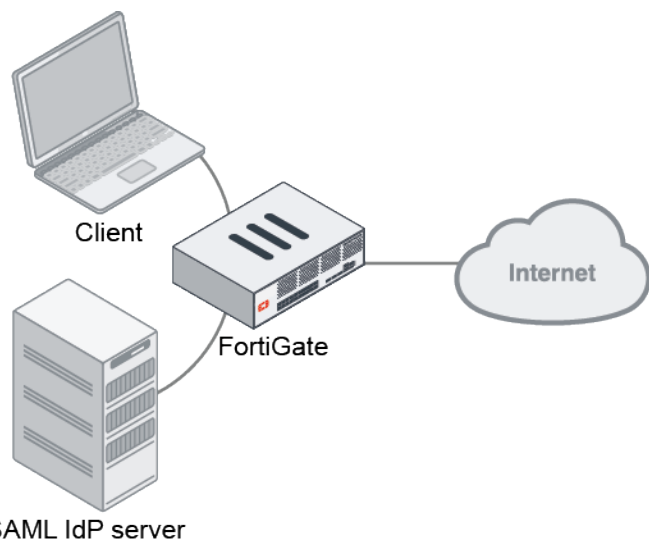

### To configure the FortiGate:

#### 1. Configure the authentication rule:

```
config authentication rule
  edit "saml"
    set srcaddr "all"
    set ip-based disable
    set active-auth-method "saml"
    set web-auth-cookie enable
  next
end
```

#### 2. Configure the captive portal:

```
config authentication setting
  set captive-portal "fgt9.myqalab.local"
end
```

#### 3. Configure the proxy policy

```
config firewall proxy-policy
  edit 3
    set proxy explicit-web
    set dstintf "port9"
    set srcaddr "all"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
    set logtraffic all
    set groups "ldap-group-saml"
    set utm-status enable
    set profile-protocol-options "protocol"
    set ssl-ssh-profile "deep-custom"
    set av-profile "av"
    set application-list "fff"
```

```

    next
end

```

## CORS request scenarios

### Preflight CORS request

The client sends the initial CORS preflight request (OPTIONS with the origin header) to the web server through FortiGate's web proxy and receives a CORS 200 OK response (with headers, such as Access-Control-Allow-Origin). The FortiGate will not redirect the client to the captive capital for authentication:

```

> OPTIONS /bidRequest HTTP/1.1
> Host: c2shb.pubgw.yahoo.com
> User-Agent: curl/7.61.1
> Accept: */*
> Access-Control-Request-Method: GET
> Access-Control-Request-Headers: content-type,x-openrtb-version
> Origin: https://www.cnn.com
...
< HTTP/1.1 200 OK
< Date: Thu, 19 May 2022 01:49:17 GMT
< Content-Length: 0
< Server: ATS/9.1.0.46
< Access-Control-Allow-Origin: https://www.cnn.com
< Access-Control-Allow-Methods: GET,POST,OPTIONS
< Access-Control-Allow-Headers: X-Requested-With,Content-Type,X-Openrtb-Version
< Access-Control-Allow-Credentials: true
< Access-Control-Max-Age: 600
< Age: 0
< Connection: keep-alive
< Set-Cookie: A3=d=AQABBB2ihWICEIUyD_Du5ol8tMdKKWxspR8FEgEBAQHzhmKPYgAAAAAA_
eMAAA&S=AQAAAlU0dAheQx6euvCps8ErK4I; Expires=Fri, 19 May 2023 07:49:17 GMT; Max-
Age=31557600; Domain=.yahoo.com; Path=/; SameSite=None; Secure; HttpOnly

```

### Real CORS request

Once the initial preflight request for the client is successful, the client sends the real CORS request (GET request with origin header) to the FortiGate, The FortiGate then replies with a 30x response to redirect the client to the captive portal. The 30x response includes CORS headers such as Access-Control-Allow-Origin:

```

> GET /bidRequest HTTP/1.1
> Host: c2shb.pubgw.yahoo.com
> User-Agent: curl/7.61.1
> Accept: */*
> Origin: https://www.cnn.com
...
< HTTP/1.1 303 See Other
< Access-Control-Max-Age: 1
< Access-Control-Allow-Origin: https://www.cnn.com
< Access-Control-Allow-Credentials: true
< Set-Cookie: FTNT-EP-
FG900D3915800054=pqWlpdswdcCnpaWli6WlpcjEwszGmJbGksbBwMCVwcPBlpKRnMGTl52QxJeUwYPWl8aYlJWLlIu
ULZWLlJalPQ==; Path=/; Domain=.pubgw.yahoo.com; HttpOnly; SameSite=None; Secure
< Connection: close
< Content-Type: text/html

```

```
< Cache-Control: no-cache
< Location:
https://fgt9.myqalab.local:7831/test/saml/login/?cptype=ckauth&scheme=https&4Tmthd=0&host=c2
shb.pubgw.yahoo.com&port=443&rule=98&uri=L2JpZFJlcXVlc3Q=&cdata=pqWlpdswdcCnpaWli6WlpcjEwszG
mJbGksbBwMCVvcPBlpKRnMGTl52QxJeUwYPW18aYlJWLLlIuU1ZWLLlJalpq==
< Content-Length: 0
```

## Redirection to captive portal

Once the client's real CORS request is redirected to the captive portal, the client sends another preflight to the captive portal. The captive portal then replies with a 20x response, which includes CORS headers such as `Access-Control-Allow-Origin`:

```
> OPTIONS
/test/saml/login/?cptype=ckauth&scheme=https&4Tmthd=1&host=gql.reddit.com&port=443&rule=98&u
ri=Lw==&cdata=pqWlpQM5dcCnpaWliqWlpcjEwszGmJbGksbAk5WTl8aTwJDGnJ2Tl52QxpHDkYPW18aYlJWLLlIuU1Z
WLLJGWpQ== HTTP/1.1
> Host: fgt9.myqalab.local:7831
> Connection: keep-alive
> Accept: */*
> Access-Control-Request-Method: GET
> Access-Control-Request-Headers: authorization,content-type,x-reddit-compression,x-reddit-
loid,x-reddit-session
> Origin: null
> User-Agent: Mozilla/5.0 (Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like
Gecko) Chrome/100.0.4896.75 Safari/537.36 Edg/100.0.1185.36
> Sec-Fetch-Mode: cors
> Sec-Fetch-Site: cross-site
> Sec-Fetch-Dest: empty
> Referer: https://www.reddit.com/
> Accept-Encoding: gzip, deflate, br
> Accept-Language: en-US,en;q=0.9
...
< HTTP/1.1 204 No Content
< Access-Control-Max-Age: 86400
< Access-Control-Allow-Methods: GET
< Access-Control-Allow-Headers: authorization,content-type,x-reddit-compression,x-reddit-
loid,x-reddit-session
< Access-Control-Allow-Origin: null
< Access-Control-Allow-Credentials: true
```

## Simple CORS request

If a simple CORS request (no preflight request sent before it) is used, when the FortiGate receives the simple request, it replies with a 30x response that includes CORS headers, such as `Access-Control-Allow-Origin`:

```
> Host: www.yahoo.com
> User-Agent: curl/7.61.1
> Accept: */*
> Origin: https://www.cnn.com
...
< HTTP/1.1 303 See Other
< Access-Control-Max-Age: 1
< Access-Control-Allow-Origin: https://www.cnn.com
< Access-Control-Allow-Credentials: true
< Set-Cookie: FTNT-EP-
```

```

FG900D3915800000=pqWlpaw7dcCnpaWli6WlpcjEwszGmJbGksbAkpOcxMDDlpbG1MST152QwcGcl4PW18aYlJWLlIu
UlZWl1JalpQ==; Path=/; Domain=.yahoo.com; HttpOnly; SameSite=None; Secure
< Connection: close
< Content-Type: text/html
< Cache-Control: no-cache
< Location:
https://fgt9.myqalab.local:7831/test/saml/login/?cptype=ckauth&scheme=https&4Tmthd=0&host=ww
w.yahoo.com&port=443&rule=98&uri=Lw==&cdata=pqWlpaw7dcCnpaWli6WlpcjEwszGmJbGksbAkpOcxMDDlpbG
1MST152QwcGcl4PW18aYlJWLlIuUlZWl1JalpQ==
< Content-Length: 0

```

## HTTP connection coalescing and concurrent multiplexing for explicit proxy

HTTP connection coalescing and concurrent multiplexing allows multiple HTTP requests to share the same TCP three-way handshake when the destination IP is the same.

### To configure the explicit web proxy:

```

config web-proxy explicit
    set http-connection-mode {static | multiplex | serverpool}
end

```

```

http-connection-mode
    {static | multiplex
    | serverpool}


```

#### Set the HTTP connection mode:

- **static:** only one server connection exists during the proxy session (default).
- **multiplex:** hold established connections until the proxy session ends.
- **serverpool:** share established connections with other proxy sessions.

## Example

In this example, multiple clients submit requests in HTTP. The requests hit the VIP address, and then FortiGate opens a session between itself (172.16.200.6) and the server (172.16.200.99). The coalescing occurs in this session as the multiple streams share the same session to connect to the same destination server.

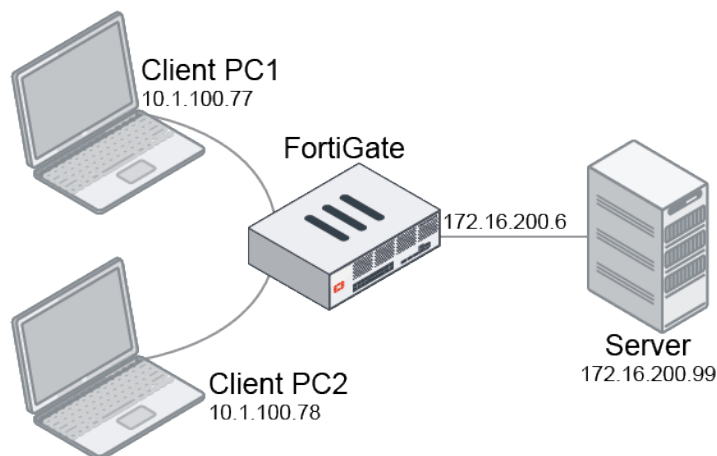

## To configure connection coalescing and concurrent multiplexing with an explicit proxy:

### 1. Configure the explicit web proxy:

```
config web-proxy explicit
    set status enable
    set http-incoming-port 8080
    set http-connection-mode serverpool
end
```

### 2. Enable explicit web proxy on port2:

```
config system interface
    edit "port2"
        set ip 10.1.100.6 255.255.255.0
        set explicit-web-proxy enable
    next
end
```

### 3. Configure the proxy policy:

```
config firewall proxy-policy
    edit 1
        set proxy explicit-web
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "all"
        set service "web"
        set action accept
        set schedule "always"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set utm-status enable
        set profile-protocol-options "default-clone"
        set ssl-ssh-profile "deep-inspection-clone"
    next
end
```

### 4. Get the clients to access the server through the explicit web proxy (10.1.100.6:8080). The FortiGate shares the first connection TCP three-way handshake with later connections that connect to same destination address.

### 5. Verify the sniffer packet capture on the FortiGate server side. There is one TCP three-way handshake, but there are two HTTP connections.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	172.16.200.6	172.16.200.99	TCP	76	8874 → 80 [SYN] Seq=0 Win=65535 Len=0 MSS=1460 SACK_PERM=1 TSval=288652 TSecr=0 WS=4896
2	0.000099	172.16.200.99	172.16.200.6	TCP	76	80 → 8874 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=3489676249 TSecr=288652 WS=128
3	0.000114	172.16.200.6	172.16.200.99	TCP	68	8874 → 80 [ACK] Seq=1 Ack=1 Win=176128 Len=0 TSval=288652 TSecr=3489676249
4	0.000137	172.16.200.6	172.16.200.99	HTTP	169	GET / HTTP/1.1
5	0.000208	172.16.200.99	172.16.200.6	TCP	68	80 → 8874 [ACK] Seq=1 Ack=102 Win=65152 Len=0 TSval=3489676249 TSecr=288652
6	0.000503	172.16.200.99	172.16.200.6	HTTP	423	HTTP/1.1 200 OK (text/html)
7	0.000507	172.16.200.6	172.16.200.99	TCP	68	8874 → 80 [ACK] Seq=102 Ack=356 Win=176128 Len=0 TSval=288652 TSecr=3489676249
8	2.148158	172.16.200.6	172.16.200.99	HTTP	169	GET / HTTP/1.1
9	2.148419	172.16.200.99	172.16.200.6	HTTP	399	HTTP/1.1 200 OK (text/html)
10	2.148430	172.16.200.6	172.16.200.99	TCP	68	8874 → 80 [ACK] Seq=203 Ack=687 Win=176128 Len=0 TSval=288867 TSecr=3489678397

### 6. Change the HTTP connection mode to static:

```
config web-proxy explicit
    set status enable
    set http-incoming-port 8080
    set http-connection-mode static
end
```



## 7. Verify the sniffer packet capture. This time, the FortiGate establishes a TCP connection for each client.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	172.16.200.6	172.16.200.99	TCP	76	9082 → 80 [SYN] Seq=0 Win=65535 Len=0 MSS=1460 SACK_PERM=1 TSval=312906 TSecr=0 WS=4096
2	0.000116	172.16.200.99	172.16.200.6	TCP	76	80 → 9082 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=3489918787 TSecr=312906 WS=128
3	0.000130	172.16.200.99	172.16.200.6	TCP	68	9082 → 80 [ACK] Seq=1 Ack=1 Win=176128 Len=0 TSval=312906 TSecr=3489918787
4	0.000153	172.16.200.6	172.16.200.99	HTTP	169	GET / HTTP/1.1
5	0.000260	172.16.200.99	172.16.200.6	TCP	68	80 → 9082 [ACK] Seq=1 Ack=182 Win=65152 Len=0 TSval=3489918787 TSecr=312906
6	0.000716	172.16.200.99	172.16.200.6	HTTP	423	HTTP/1.1 200 OK (text/html)
7	0.000720	172.16.200.6	172.16.200.99	TCP	68	9082 → 80 [ACK] Seq=182 Ack=356 Win=176128 Len=0 TSval=312907 TSecr=3489918788
8	0.003241	172.16.200.6	172.16.200.99	TCP	68	9082 → 80 [FIN, ACK] Seq=182 Ack=356 Win=176128 Len=0 TSval=312907 TSecr=3489918788
9	0.003337	172.16.200.99	172.16.200.6	TCP	68	80 → 9082 [FIN, ACK] Seq=356 Ack=183 Win=65152 Len=0 TSval=3489918790 TSecr=312907
10	0.003341	172.16.200.6	172.16.200.99	TCP	68	9082 → 80 [ACK] Seq=183 Ack=357 Win=176128 Len=0 TSval=312907 TSecr=3489918790
11	2.166296	172.16.200.6	172.16.200.99	TCP	76	9085 → 80 [SYN] Seq=0 Win=65535 Len=0 MSS=1460 SACK_PERM=1 TSval=313123 TSecr=0 WS=4096
12	2.166399	172.16.200.99	172.16.200.6	TCP	76	80 → 9085 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=3489920953 TSecr=313123 WS=128
13	2.166414	172.16.200.6	172.16.200.99	TCP	68	9085 → 80 [ACK] Seq=1 Ack=1 Win=176128 Len=0 TSval=313123 TSecr=3489920953
14	2.166435	172.16.200.6	172.16.200.99	HTTP	169	GET / HTTP/1.1
15	2.166516	172.16.200.99	172.16.200.6	TCP	68	80 → 9085 [ACK] Seq=1 Ack=182 Win=65152 Len=0 TSval=3489920953 TSecr=313123
16	2.166807	172.16.200.99	172.16.200.6	HTTP	423	HTTP/1.1 200 OK (text/html)
17	2.166810	172.16.200.6	172.16.200.99	TCP	68	9085 → 80 [ACK] Seq=182 Ack=356 Win=176128 Len=0 TSval=313123 TSecr=3489920954
18	2.169862	172.16.200.6	172.16.200.99	TCP	68	9085 → 80 [FIN, ACK] Seq=182 Ack=356 Win=176128 Len=0 TSval=313123 TSecr=3489920954
19	2.169965	172.16.200.99	172.16.200.6	TCP	68	80 → 9085 [FIN, ACK] Seq=356 Ack=183 Win=65152 Len=0 TSval=3489920957 TSecr=313123

## DHCP servers and relays

A DHCP server dynamically assigns IP addresses to hosts on the network connected to the interface. The host computers must be configured to obtain their IP addresses using DHCP. You can configure one or more DHCP servers on any FortiGate interface.

A DHCP server can be in server or relay mode. In server mode, you can define up to ten address ranges to assign addresses from, and options such as the default gateway, DNS server, lease time, and other advanced settings. In relay mode, the interface forwards DHCP requests from DHCP clients to an external DHCP server and returns the responses to the DHCP clients. The DHCP server must have appropriate routing so that its response packets to the DHCP clients arrive at the unit.

If an interface is connected to multiple networks through routers, you can add a DHCP server for each network. The IP range of each DHCP server must match the network address range. The routers must be configured for DHCP relay.

## Default DHCP server for low-end FortiGates

On low-end FortiGate units, a DHCP server is configured on the internal interface, by default, with the following values:

Field	Value
Address Range	192.168.1.110 to 192.168.1.210
Netmask	255.255.255.0
Default Gateway	192.168.1.99
Lease Time	7 days
DNS Server 1	192.168.1.99

These settings are appropriate for the default internal interface IP address of 192.168.1.99. If you change this address to a different network, you need to change the DHCP server settings to match.

- [Basic configuration on page 332](#)
- [DHCP options on page 335](#)
- [DHCP addressing mode on an interface on page 342](#)
- [VCI pattern matching for DHCP assignment on page 345](#)
- [FortiGate DHCP works with DDNS to allow FQDN connectivity to leased IP addresses on page 347](#)

## Basic configuration

The following contains information on basic configurations.

### Configure a DHCP server on an interface

A DHCP server can be configured on an interface in the GUI from *Network > Interfaces*.

#### To configure a DHCP server in the GUI:

1. Go to *Network > Interfaces*.
2. Edit an interface.
3. Enable the *DHCP Server* option and configure the settings.
4. Click *OK*.

Field	Description
<b>Address Range</b>	By default, the FortiGate unit assigns an address range based on the address of the interface for the complete scope of the address. For example, if the interface address is 172.20.120.230, the default range created is 172.20.120.231 to 172.20.120.254. Select the range and select <i>Edit</i> to adjust the range or select <i>Create New</i> to add a different range.
<b>Netmask</b>	Enter the netmask of the addresses that the DHCP server assigns.
<b>Default Gateway</b>	Select this to use either <i>Same as Interface IP</i> or select <i>Specify</i> and enter the IP address of the default gateway that the DHCP server assigns to DHCP clients.
<b>DNS Server</b>	Select this to use <i>Same as system DNS</i> , <i>Same as Interface IP</i> or select <i>Specify</i> and enter the IP address of the DNS server.
<b>Mode</b>	Select the type of DHCP server FortiGate will be. By default, it is a <i>Server</i> . Select <i>Relay</i> if needed. When <i>Relay</i> is selected, the above configuration is replaced by a field to enter the <i>DHCP Server IP</i> address.
<b>DHCP Server IP</b>	This appears only when <i>Mode</i> is <i>Relay</i> . Enter the IP address of the DHCP server where FortiGate obtains the requested IP address.
<b>Type</b>	Select this to use the DHCP in <i>Regular</i> or <i>IPsec</i> mode.
<b>Additional DHCP Options</b>	Use this to create new DHCP options.
<b>Add from DHCP Client List</b>	If the client is currently connected and using an IP address from the DHCP server, you can select this option to select the client from the list.

#### To configure a DHCP server in the CLI:

```
config system dhcp server
  edit 1
    set dns-service default
    set default-gateway 192.168.1.2
    set netmask 255.255.255.0
```

```
set interface "port1"
config ip-range
  edit 1
    set start-ip 192.168.1.1
    set end-ip 192.168.1.1
  next
  edit 2
    set start-ip 192.168.1.3
    set end-ip 192.168.1.254
  next
end
set timezone-option default
set tftp-server "172.16.1.2"
next
end
```

## Configure a DHCP relay on an interface

### To configure a DHCP relay in the GUI:

1. Go to *Network > Interfaces*.
2. Edit an interface.
3. Expand the *Advanced* section and set *Mode* to *Relay*.
4. Enter the *DHCP Server IP*.
5. Click *OK*.

### To configure a DHCP relay in the CLI:

1. Configure the interface, making sure to configure `set dhcp-relay-ip`:

```
config system interface
  edit "port2"
    set vdom "root"
    set dhcp-relay-service enable
    set ip 10.1.1.5 255.255.255.0
    set allowaccess ping https ssh fabric
    set type physical
    set snmp-index 4
    set dhcp-relay-ip "192.168.20.10"
  next
end
```

## Configure a DHCP server and relay on an interface

A FortiGate interface can be configured to work in DHCP server mode to lease out addresses, and at the same time relay the DHCP packets to another device, such as a FortiNAC to perform device profiling.

The DHCP message to be forwarded to the relay server under the following conditions:

- `dhcp-relay-request-all-server` is enabled
- Message type is either DHCPDISCOVER or DHCPINFORM
- Client IP address in client message is 0
- Server ID is NULL in the client message

- Server address is a broadcast address (255.255.255.255)
- Server address is 0



Configuring a DHCP server and relay on the same interface is currently only supported in the CLI.

---

### To configure a DHCP server and relay in the CLI:

#### 1. Configure the interface:

```
config system interface
  edit "port2"
    set vdom "root"
    set dhcp-relay-service enable
    set ip 10.1.1.5 255.255.255.0
    set allowaccess ping https ssh fabric
    set type physical
    set snmp-index 4
    set dhcp-relay-ip "192.168.20.10"
    set dhcp-relay-request-all-server enable
  next
end
```

#### 2. Configure the DHCP server settings:

```
config system dhcp server
  edit 17
    set status enable
    set dns-service default
    set default-gateway 10.1.1.5
    set netmask 255.255.255.0
    set interface "port2"
    config ip-range
      edit 1
        set start-ip 10.1.1.6
        set end-ip 10.1.1.254
      next
    end
  next
end
```

## Excluding addresses in DHCP

If you have a large address range for the DHCP server, you can block a range of addresses that will not be included in the available addresses for the connecting users using the `config exclude-range` subcommand.

### To exclude addresses in DHCP:

```
config system dhcp server
  edit <id>
    config exclude-range
      edit <sequence_number>
```

```
        set start-ip <address>
        set end-ip <address>
    next
end
next
end
```

## Viewing information about DHCP server connections

To view information about DHCP server connections, go to *Dashboard > Network* and expand the *DHCP* monitor widget. On this page, you can also add IP addresses to the reserved IP address list.

## DHCP options

When adding a DHCP server, you can include DHCP options. The DHCP options are BOOTP vendor information fields that provide additional vendor-independent configuration parameters to manage the DHCP server. For example, you might need to configure a FortiGate DHCP server that gives out a separate option as well as an IP address, such as an environment that needs to support PXE boot with Windows images. The *Option code* is specific to the application. The documentation for the application indicates the values to use. The *Option code* is a value between 1 and 255.

For detailed information about DHCP options, see [RFC 2132](#), DHCP Options and BOOTP Vendor Extensions.

The FortiOS DHCP server supports up to a maximum of 30 options per DHCP server. These optional fields can be set in either the GUI or CLI.



DHCP server options are not available in transparent mode.

The DHCP options include:

- [Common DHCP options on page 335](#)
- [Additional DHCP options on page 338](#)
- [IP address assignment with relay agent information option on page 340](#)

## Common DHCP options

All FortiGate models come with predefined DHCP options. These DHCP options are widely used and required in most scenarios. The following DHCP options can be set straight from the *DHCP server* section of the *Edit Interface* dialog:

Option Code	Option Name	Purpose
*1	<i>Netmask</i>	Assign subnet mask to the DHCP client.
*3	<i>Default Gateway</i>	Assign default gateway to the DHCP client.
6	<i>DNS server</i>	Assign DNS server to the DHCP client.
42	<i>NTP server</i>	Assign NTP server to the DHCP client.
*51	<i>Lease time</i>	Lease time for the DHCP client.

Option Code	Option Name	Purpose
<b>138</b>	<i>Wireless controllers</i>	Assign CAPWAP Access Controller addresses to the DHCP client.
<b>150</b>	<i>TFTP server(s)</i>	Assign TFTP server to the DHCP client.

The parameter marked with an asterisk (\*) are mandatory and must be filled in.

## Configuring the lease time

This configuration implements DHCP option code 51. The global lease time (measured in seconds, 300 - 864000) determines the length of time an IP address remains assigned to a client. Once the lease expires, the address is released for allocation to the next client that requests an IP address.

### To configure the global lease time:

```
config system dhcp server
    edit <id>
        set interface <interface>
        set netmask <netmask>
        set lease-time <integer>
    next
end
```

The default lease time is seven days (604800 seconds). To have an unlimited lease time, set the value to zero.

The lease time can also be configured in the GUI in the *Lease time* field within the *DHCP server* section of the *Edit Interface* dialog.

### Configuring the lease time for IP ranges

The lease time can also be configured for an IP range. Measured in seconds, the range is similar to the global lease time (300 - 864000), but the default value is zero (0). If the default (0) is used for an IP range, it applies the global DHCP server lease time value.

### To configure the lease time for an IP range:

```
config system dhcp server
    edit <id>
        config ip-range
            edit <id>
                set lease-time <integer>
            next
        end
    next
end
```

This setting can only be configured in the CLI.

## Breaking an address lease

If you need to end an IP address lease, you can break the lease. This is useful if you have limited addresses and longer lease times when some leases are no longer necessary, for example, with corporate visitors.

**To break a lease:**

```
# execute dhcp lease-clear <ip_address>
```

**To break a lease for all IP addresses for the DHCP servers in the current VDOM:**

```
# execute dhcp lease-clear all
```

**Configuring NTP servers**

This configuration implements DHCP option code 42. NTP server can be used by the client to synchronize their time which is very important as for many features to work, including scheduling, logging, and SSL-dependent features, the FortiOS system time must be accurate. This option specifies a list of the NTP servers available to the client by IP address.

**To configure NTP servers:**

```
config system dhcp server
  edit 2
    set ntp-service {local | default | specify}
    set ntp-server1 <class_ip>
    set ntp-server2 <class_ip>
    set ntp-server3 <class_ip>
  next
end
```

NTP servers can also be configured in the GUI in the *NTP server* field within the *DHCP server > Advanced* section of the *Edit Interface* dialog.

```
ntp-service {local |
default | specify}
```

Set the option for assigning NTP servers to DHCP clients:

- **local:** the IP address of the interface that the DHCP server is added to becomes the client's NTP server IP address.
- **default:** clients are assigned the FortiGate's configured NTP servers.
- **specify:** specify up to three NTP servers in the DHCP server configuration.

**Configuring TFTP servers**

This configuration implements DHCP option code 150. TFTP server are used by VoIP phones to obtain the VoIP Configuration. You can configure multiple TFTP servers for a DHCP server. For example, you may want to configure a main TFTP server and a backup TFTP server.

The `tftp-server` command allows you to configure the TFTP servers, using either their hostnames or IP addresses. Separate multiple server entries with spaces.

**To configure TFTP servers:**

```
config system dhcp server
  edit <id>
    set interface <interface>
    set netmask <netmask>
    set tftp-server <hostname/IP address> <hostname/IP address>
  next
end
```

TFTP servers can also be configured in the GUI in the *TFTP server(s)* field within the *DHCP server > Advanced* section of the *Edit Interface* dialog.

## Additional DHCP options

The FortiGate can be used to provide additional DHCP options that can be useful for different scenarios.

A few of the options are explained below:

- [Option 82 on page 339](#)
- [Option 77 on page 339](#)

### To configure the DHCP options in the GUI:

1. Go to *Network > Interfaces*, click *Create New* or *Edit* the existing interface.
2. Enable *DHCP Server*.
3. Expand the *Advanced* section and select *Create New* under *Additional DHCP options*.
4. Select a predefined *Option code* from the list or select *Specify* to enter a custom *Option code*.
5. Configure the rest of the parameters as required and click *OK* to save the options.
6. Click *OK* to save the setting.

### To configure the DHCP options in the CLI:

```
config system dhcp server
    edit <id>
        config options
            edit <integer>
                set code <integer>
                set type {hex | string | ip | fqdn}
                set value <string>
            next
        end
    next
end
```

Variable	Description
code <integer>	DHCP client option code (0 - 255, default = 0). See <a href="#">Dynamic Host Configuration Protocol (DHCP) and Bootstrap Protocol (BOOTP) Parameters</a> for a list of possible options.
type {hex   string   ip   fqdn}	DHCP server option type (default = hex).
value <string>	DHCP server option value.
ip <ip address>	DHCP server option IP address. This option is only available when type is ip.



## Example

To configure option 252 with value `http://192.168.1.1/wpad.dat`:

```
config system dhcp server
  edit <id>
    config options
      edit <id>
        set code 252
        set type hex
        set value 687474703a2f2f3139322e3136382e312e312f777061642e646174
      next
    end
  next
end
```



In the example above, 687474703a2f2f3139322e3136382e312e312f777061642e646174 is the hexadecimal equivalent of the ASCII text `http://192.168.1.1/wpad.dat`.

## Option 82

The DHCP relay agent information option (option 82 in [RFC 3046](#)) helps protect the FortiGate against attacks such as spoofing (forging) of IP addresses and MAC addresses, and DHCP IP address starvation.

This option is disabled by default. However, when `dhcp-relay-service` is enabled, `dhcp-relay-agent-option` becomes enabled.

To configure the DHCP relay agent option:

```
config system interface
  edit <interface>
    set vdom root
    set dhcp-relay-service enable
    set dhcp-relay-ip <ip>
    set dhcp-relay-agent-option enable
    set vlanid <id>
  next
end
```

See [IP address assignment with relay agent information option on page 340](#) for an example.

## Option 77

This option can be used for User Class information (UCI) matching. When enabled, only DHCP requests with a matching UCI are served with the specified range.

To configure UCI matching:

```
config system dhcp server
  edit <id>
    config ip-range
      edit <id>
```

```


        set uci-match {enable | disable}
        set uci-string <string>
    next
end
config options
    edit <id>
        set uci-match {enable | disable}
        set uci-string <string>
    next
end
next
end

```

uci-match {enable   disable}	Enable/disable User Class information (UCI) matching for option 77.
uci-string <string>	Enter one or more UCI strings in quotation marks separated by spaces.

## IP address assignment with relay agent information option

Option 82 (DHCP relay information option) helps protect the FortiGate against attacks such as spoofing (or forging) of IP and MAC addresses, and DHCP IP address starvation.

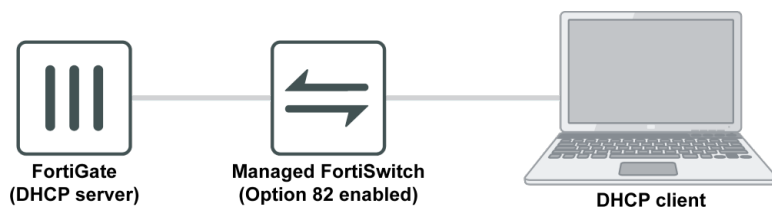

The following CLI variables are included in the `config system dhcp server > config reserved-address` command:

circuit-id-type {hex   string}	DHCP option type; hex or string (default).
circuit-id <value>	Option 82 circuit ID of the client that will get the reserved IP address. Format: <i>vlan-mod-port</i> <ul style="list-style-type: none"> <li>vlan: VLAN ID (2 bytes)</li> <li>mod: 1 = snoop, 0 = relay (1 byte)</li> <li>port: port number (1 byte)</li> </ul>
remote-id-type {hex   string}	DHCP option type; hex or string (default).
remote-id <value>	Option 82 remote ID of the client that will get the reserved IP address. Format: the MAC address of the client.
type {mac   option82}	The DHCP reserved address type; mac (default) or option82.

### To create an IP address assignment rule using option 82 in the GUI:

1. Go to *Network > Interfaces*.
2. Edit an existing port, or create a new one.



The port *Role* must be *LAN* or *Undefined*.

3. Enable *DHCP Server*.
4. Configure the address ranges and other settings as needed.
5. Click + to expand the *Advanced* options.

**Edit Interface**

☒ DHCP Server

DHCP status: ☒ Enabled ☐ Disabled

Address range: 192.168.2.100-192.168.2.254

Netmask: 255.255.255.0

Default gateway: ☒ Same as Interface IP ☐ Specify

DNS server: ☒ Same as System DNS ☐ Same as Interface IP ☐ Specify

Lease time: 604800 seconds(s)

**Advanced**

Mode: ☒ Server ☐ Relay

Type: ☒ Regular ☐ IPsec

NTP server: ☒ Local ☐ Same as System NTP ☐ Specify

Wireless controllers: ☒ Same as Interface IP ☐ Specify

Time zone: ☒ Same as System ☐ Specify

Next bootstrap server: 0.0.0.0

TFTP server(s):

**Additional DHCP Options**

[+ Create New](#) [Edit](#) [Delete](#)

Code	Type	Value
No results		

**IP Address Assignment Rules**

[+ Create New](#) [Edit](#) [Delete](#)  [Add from DHCP Client List](#)

Type	Match Criteria	Action	IP
Implicit	Unknown MAC Addresses	Assign IP	

**FortiGate**

FGDocs

Status: ☒ Up

MAC address: 00:09:0f:09:00:02

**Additional Information**

[API Preview](#)

[References](#)

[Edit in CLI](#)

**PoE Status**

☒ Up

**Online Guides**

[Relevant Documentation](#)

[Video Tutorials](#)

**FortiAnswers**

[Join the Discussion](#)

6. In the *IP Address Assignment Rules* table, click *Create New*. The *Create New IP Address Assignment Rule* pane opens.
7. Configure the new rule:
  - a. For the *Type*, select *DHCP Relay Agent*.
  - b. Enter the *Circuit ID* and *Remote ID*.
  - c. Enter the *IP* address that will be reserved.

**Create New IP Address Assignment Rule**

Type: **MAC Address** **DHCP Relay Agent**

Description: Write a comment... 0/255

Match Criteria

Circuit ID: String Hexadecimal 00010102

Remote ID: String Hexadecimal 704ca5e477d6

Action

Action type: Assign IP Block **Reserve IP**

IP: 192.168.2.100

OK Cancel

8. Click OK.

**To create an IP address assignment rule using option 82 with the CLI:**

```
config system dhcp server
  edit 1
    set netmask 255.255.255.0
    set interface "port4"
    config ip-range
      edit 1
        set start-ip 192.168.2.100
        set end-ip 192.168.2.254
      next
    end
    config reserved-address
      edit 1
        set type option82
        set ip 192.168.2.100
        set circuit-id-type hex
        set circuit-id "00010102"
        set remote-id-type hex
        set remote-id "704ca5e477d6"
      next
    end
  next
end
```

## DHCP addressing mode on an interface

Any FortiGate interface can be configured to obtain an IP address dynamically using DHCP. If you configure DHCP on an interface on the FortiGate, the FortiGate automatically broadcasts a DHCP request from the interface. The interface is configured with the IP address, any DNS server addresses, and the default gateway address that the DHCP server provides.

### Configuring an Interface as a DHCP Client

You can configure interface as a DHCP client.

### To configure an interface as a DHCP client in the GUI:

1. Go to *Network > Interfaces*.
2. Edit an interface.
3. Select the *DHCP* option in the *Addressing mode*.
4. Configure the rest of the setting as required.
5. Click *OK*.

The following table describes the DHCP status information when DHCP is configured for an interface.

Field	Description
<b>Status</b>	<p>Displays DHCP status messages as the interface connects to the DHCP server and gets addressing information.</p> <p>Status can be one of the following values:</p> <ul style="list-style-type: none"> <li>• <i>Initializing</i>: No activity.</li> <li>• <i>Connecting</i>: Interface attempts to connect to the DHCP server.</li> <li>• <i>Connected</i>: Interface retrieves an IP address, netmask, and other settings from the DHCP server.</li> <li>• <i>Failed</i>: Interface was unable to retrieve an IP address and other settings from the DHCP server.</li> </ul>
<b>Obtained IP/Netmask</b>	The IP address and netmask leased from the DHCP server. This is only displayed if the <i>Status</i> is <i>Connected</i> .
<b>Renew</b>	Select this to renew the DHCP license for this interface. This is only displayed if the <i>Status</i> is <i>Connected</i> .
<b>Expiry Date</b>	The time and date when the leased IP address and netmask is no longer valid for the interface. The IP address is returned to the pool to be allocated to the next user request for an IP address. This is only displayed if the <i>Status</i> is <i>Connected</i> .
<b>Default Gateway</b>	The IP address of the gateway defined by the DHCP server. This is displayed only if the <i>Status</i> is <i>Connected</i> , and if <i>Retrieve default gateway from server</i> is enabled.
<b>Acquired DNS</b>	The DNS server IP defined by the DHCP server. This is displayed only if the <i>Status</i> is <i>Connected</i> .
<b>Retrieve default gateway from server</b>	Enable this to retrieve a default gateway IP address from the DHCP server. The default gateway is added to the static routing table.
<b>Distance</b>	Enter the administrative distance for the default gateway retrieved from the DHCP server. The administrative distance is an integer from 1 to 255, and specifies the relative priority of a route when there are multiple routes to the same destination. A lower administrative distance indicates a more preferred route.
<b>Override internal DNS</b>	<p>Enable this to use the DNS addresses retrieved from the DHCP server instead of the DNS server IP addresses on the DNS page.</p> <p>When VDOMs are enabled, you can override the internal DNS only on the management VDOM.</p>

**To configure an interface as a DHCP client in the CLI:**

```
config system interface
  edit <name>
    set mode dhcp
    set defaultgw {enable | disable}
    set distance <integer>
    set dns-server-override {enable | disable}
  next
end
```

## Configuring the DHCP renew time

You can set a minimum DHCP renew time for an interface acting as a DHCP client. This option is available only when mode is set to DHCP.

**To set the DHCP renew time:**

```
config system interface
  edit <name>
    set vdom <vdom>
    set interface <interface>
    set mode dhcp
    set dhcp-renew-time <integer>
  next
end
```

The possible values for `dhcp-renew-time` are 300 to 605800 seconds (five minutes to seven days). To use the renew time that the server provides, set this entry to 0.

## DHCP client options

When an interface is in DHCP addressing mode, DHCP client options can be configured in the CLI. For example, a vendor class identifier (usually DHCP client option 60) can be specified so that a request can be matched by a specific DHCP offer.

Multiple options can be configured, but any options not recognized by the DHCP server are discarded.

**To configure client option 60 - vendor class identifier:**

```
config system interface
  edit port1
    set vdom vdom1
    set mode dhcp
    config client-options
      edit 1
        set code 60
        set type hex
        set value aabbccdd
      next
    end
    set type physical
    set snmp-index 4
```

```

    next
end

```

Variable	Description
code <integer>	DHCP client option code (0 - 255, default = 0). See <a href="#">Dynamic Host Configuration Protocol (DHCP) and Bootstrap Protocol (BOOTP) Parameters</a> for a list of possible options.
type {hex   string   ip   fqdn}	DHCP client option type (default = hex).
value <string>	DHCP client option value.
ip <ip>	DHCP client option IP address. This option is only available when type is ip.

## VCI pattern matching for DHCP assignment

VCIs (vendor class identifiers) are supported in DHCP to allow VCI pattern matching as a condition for IP or DHCP option assignment. A single IP address, IP ranges of a pool, and dedicated DHCP options can be mapped to a specific VCI string.

```


config system dhcp server
    edit <id>
        config ip-range
            edit <id>
                set vci-match {enable | disable}
                set vci-string <string>
            next
        end
        config options
            edit <id>
                set vci-match {enable | disable}
                set vci-string <string>
            next
        end
    next
end

```

vci-match {enable   disable}	Enable/disable VCI matching. When enabled, only DHCP requests with a matching VCI are served with this range.
vci-string <string>	Set the VCI string. Enter one or more VCI strings in quotation marks separated by spaces.

## Example

In this example, any DHCP client that matches the FortiGate-201F VCI will get their IP from the pool of 10.2.2.133-10.2.2.133, and options 42 (NTP servers) and 150 (TFTP server address). Any DHCP client that matches the FortiGate-101F VCI will get their IP from the default pool (10.2.2.132-10.2.2.132/10.2.2.134-10.2.2.254) and only get the 150 option.

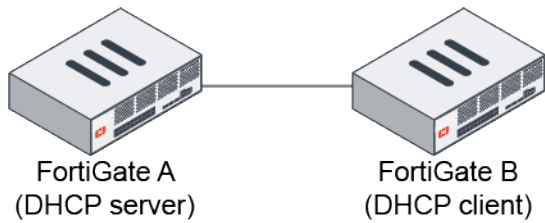**To configure VCI pattern matching on FortiGate A:**

```
config system dhcp server
  edit 1
    set dns-service default
    set default-gateway 10.2.2.131
    set netmask 255.255.255.0
    set interface "port3"
    config ip-range
      edit 1
        set start-ip 10.2.2.132
        set end-ip 10.2.2.132
      next
      edit 2
        set start-ip 10.2.2.133
        set end-ip 10.2.2.133
        set vci-match enable
        set vci-string "FortiGate-201F"
      next
      edit 3
        set start-ip 10.2.2.134
        set end-ip 10.2.2.254
      next
    end
    config options
      edit 1
        set code 42
        set type ip
        set vci-match enable
        set vci-string "FortiGate-201F"
        set ip "8.8.8.8"
      next
      edit 2
        set code 150
        set type ip
        set ip "172.16.200.55"
      next
    end
    set vci-match enable
    set vci-string "FortiGate-201F" "FortiGate-101F"
  next
end
```



## FortiGate DHCP works with DDNS to allow FQDN connectivity to leased IP addresses

As clients are assigned IP addresses, they send back information that would be found in an A record to the FortiGate DHCP server, which can take this information and pass it back to a corporate DNS server so that even devices using leased IP address can be reached using FQDNs. You can configure the settings for this feature using the `ddns-update` CLI command and some other DDNS related options. Please refer to *DDNS update override* in the [DDNS on page 245](#) topic for further details.

## Static routing

Static routing is one of the foundations of firewall configuration. It is a form of routing in which a device uses manually-configured routes. In the most basic setup, a firewall will have a default route to its gateway to provide network access. In a more complex setup with dynamic routing, ADVPN, or SD-WAN involved, you would still likely find static routes being deployed.

This section explores concepts in using static routing and provides examples in common use cases:

- [Routing concepts on page 347](#)
- [Policy routes on page 360](#)
- [Equal cost multi-path on page 363](#)
- [Dual internet connections on page 367](#)

The following topics include additional information about static routes:

- [Deploying the Security Fabric on page 2677](#)
- [Security Fabric over IPsec VPN on page 2699](#)
- [Adding a static route on page 632](#)
- [IPsec VPN in an HA environment on page 1711](#)
- [IPsec VPN to Azure with virtual network gateway on page 1637](#)
- [FortiGate as dialup client on page 1657](#)
- [ADVPN with BGP as the routing protocol on page 1779](#)
- [ADVPN with OSPF as the routing protocol on page 1788](#)
- [ADVPN with RIP as the routing protocol on page 1797](#)
- [Basic site-to-site VPN with pre-shared key on page 1603](#)
- [Site-to-site VPN with digital certificate on page 1608](#)
- [Site-to-site VPN with overlapping subnets on page 1615](#)
- [Tunneled Internet browsing on page 1685](#)
- [Multiple concurrent SDN connectors on page 2898](#)
- [Packet distribution and redundancy for aggregate IPsec tunnels on page 1717](#)
- [Using BGP tags with SD-WAN rules on page 756](#)

## Routing concepts

This section contains the following topics:

- [Default route on page 348](#)
- [Adding or editing a static route on page 348](#)
- [Configuring FQDNs as a destination address in static routes on page 349](#)
- [Routing table on page 349](#)
- [Viewing the routing database on page 352](#)
- [Kernel routing table on page 353](#)
- [Route cache on page 354](#)
- [Route look-up on page 355](#)
- [Blackhole routes on page 355](#)
- [Reverse path look-up on page 356](#)
- [Asymmetric routing on page 356](#)
- [Routing changes on page 359](#)
- [Static route tags on page 359](#)

## Default route

The default route has a destination of `0.0.0.0/0.0.0.0`, representing the least specific route in the routing table. It is a catch all route in the routing table when traffic cannot match a more specific route. Typically this is configured with a static route with an administrative distance of `10`. In most instances, you will configure the next hop interface and the gateway address pointing to your next hop. If your FortiGate is sitting at the edge of the network, your next hop will be your ISP gateway. This provides internet access for your network.

Sometimes the default route is configured through DHCP. On some desktop models, the WAN interface is preconfigured in DHCP mode. Once the WAN interface is plugged into the network modem, it will receive an IP address, default gateway, and DNS server. FortiGate will add this default route to the routing table with a distance of `5`, by default. This will take precedence over any default static route with a distance of `10`. Therefore, take caution when you are configuring an interface in DHCP mode, where *Retrieve default gateway from server* is enabled. You may disable it and/or change the distance from the *Network > Interfaces* page when you edit an interface.

## Adding or editing a static route

To add a static route using the GUI:

1. Go to *Network > Static Routes* and click *Create New*.
2. Enter the following information:

<b>Dynamic Gateway</b>	When enabled, a selected DHCP/PPPoE interface will automatically retrieve its dynamic gateway.
<b>Destination</b>	<ul style="list-style-type: none"> <li>• Subnet Enter the destination IP address and netmask. A value of <code>0.0.0.0/0.0.0.0</code> creates a default route.</li> <li>• Named Address Select an address or address group object. Only addresses with static route configuration enabled will appear on the list. This means a geography type address cannot be used.</li> <li>• Internet Service</li> </ul>

	Select an Internet Service. These are known IP addresses of popular services across the Internet.
<b>Interface</b>	Select the name of the interface that the static route will connect through.
<b>Gateway Address</b>	Enter the gateway IP address. When selecting an IPsec VPN interface or SD-WAN creating a blackhole route, the gateway cannot be specified.
<b>Administrative Distance</b>	Enter the distance value, which will affect which routes are selected first by different protocols for route management or load balancing. The default is 10.
<b>Advanced Options</b>	Optionally, expand <i>Advanced Options</i> and enter a <i>Priority</i> . When two routes have an equal distance, the route with a lower priority number will take precedence. The default is 1.

3. Click **OK**.

## Configuring FQDNs as a destination address in static routes

You can configure FQDN firewall addresses as destination addresses in a static route, using either the GUI or the CLI.

In the GUI, to add an FQDN firewall address to a static route in the firewall address configuration, enable the *Static Route Configuration* option. Then, when you configure the static route, set *Destination* to *Named Address*.

### To configure an FQDN as a destination address in a static route using the CLI:

```
config firewall address
    edit 'Fortinet-Documentation-Website'
        set type fqdn
        set fqdn docs.fortinet.com
        set allow-routing enable
    next
end

config router static
    edit 0
        set dstaddr Fortinet-Documentation-Website
        ...
    next
end
```

## Routing table

A routing table consists of only the best routes learned from the different routing protocols. The most specific route always takes precedence. If there is a tie, then the route with a lower administrative distance will be injected into the routing table. If administrative distances are also equal, then all the routes are injected into the routing table, and *Cost* and *Priority* become the deciding factors on which a route is preferred. If these are also equal, then FortiGate will use [Equal cost multi-path on page 363](#) to distribute traffic between these routes.


### Viewing the routing table in the GUI

You can view routing tables in the FortiGate GUI under *Dashboard > Network > Static & Dynamic Routing* by default. Expand the widget to see the full page. Additionally, if you want to convert the widget into a dashboard, click on the **Save**

as *Monitor* icon on the top right of the page.

You can also monitor policy routes by toggling from *Static & Dynamic* to *Policy* on the top right corner of the page. The active policy routes include policy routes that you created, SD-WAN rules, and Internet Service static routes. It also supports downstream devices in the Security Fabric.

The following figure show an example of the static and dynamic routes in the Routing Monitor:

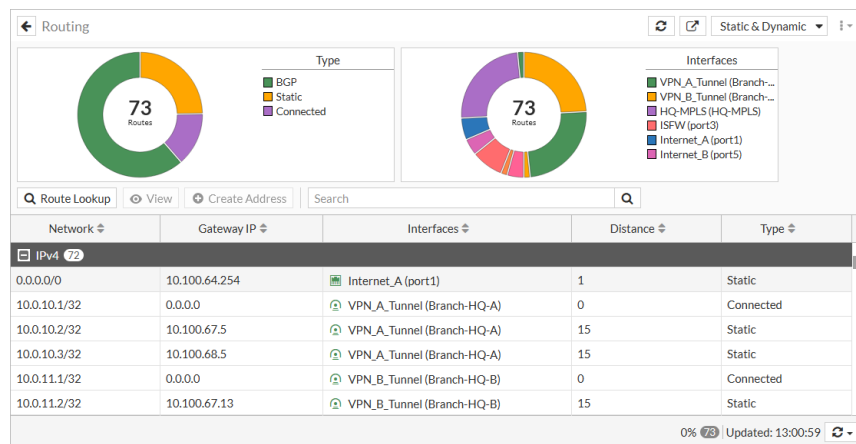

To view more columns, right-click on the column header to select the columns to be displayed:

Field	Description
<b>IP Version</b>	Shows whether the route is IPv4 or IPv6.
<b>Network</b>	The IP addresses and network masks of destination networks that the FortiGate can reach.
<b>Gateway IP</b>	The IP addresses of gateways to the destination networks.
<b>Interfaces</b>	The interface through which packets are forwarded to the gateway of the destination network.
<b>Distance</b>	The administrative distance associated with the route. A lower value means the route is preferable compared to other routes to the same destination.
<b>Type</b>	<p>The type values assigned to FortiGate routes (Static, Connected, RIP, OSPF, or BGP):</p> <ul style="list-style-type: none"> <li><b>Connected:</b> All routes associated with direct connections to FortiGate interfaces</li> <li><b>Static:</b> The static routes that have been added to the routing table manually</li> <li><b>RIP:</b> All routes learned through RIP</li> <li><b>RIPNG:</b> All routes learned through RIP version 6 (which enables the sharing of routes through IPv6 networks)</li> <li><b>BGP:</b> All routes learned through BGP</li> <li><b>OSPF:</b> All routes learned through OSPF</li> <li><b>OSPF6:</b> All routes learned through OSPF version 6 (which enables the sharing of routes through IPv6 networks)</li> <li><b>IS-IS:</b> All routes learned through IS-IS</li> <li><b>HA:</b> RIP, OSPF, and BGP routes synchronized between the primary unit and the subordinate units of a high availability (HA) cluster. HA routes are maintained on subordinate units and are visible only if you're viewing the router monitor from a virtual domain that is configured as a subordinate virtual domain in a virtual cluster.</li> </ul>

Field	Description
<b>Metric</b>	The metric associated with the route type. The metric of a route influences how the FortiGate dynamically adds it to the routing table. The following are types of metrics and the protocols they are applied to: <ul style="list-style-type: none"> <li>• <i>Hop count</i>: Routes learned through RIP</li> <li>• <i>Relative cost</i>: Routes learned through OSPF</li> <li>• <i>Multi-Exit Discriminator (MED)</i>: Routes learned through BGP. By default, the MED value associated with a BGP route is zero. However, the MED value can be modified dynamically. If the value was changed from the default, the Metric column displays a non-zero value.</li> </ul>
<b>Priority</b>	In static routes, priorities are 0 by default. When two routes have an equal distance, the route with the lower priority number will take precedence.
<b>VRF</b>	Virtual routing and forwarding (VRF) allows multiple routing table instances to co-exist. VRF can be assigned to an Interface. Packets are only forwarded between interfaces with the same VRF.
<b>Up Since</b>	The total accumulated amount of time that a route learned through RIP, OSPF, or BGP has been reachable.

## Viewing the routing table in the CLI

Viewing the routing table using the CLI displays the same routes as you would see in the GUI.

If VDOMs are enabled on the FortiGate, all routing-related CLI commands must be run within a VDOM and not in the global context.

### To view the routing table using the CLI:

```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
        O - OSPF, IA - OSPF inter area

N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2

E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default
Routing table for VRF=0
S*      0.0.0.0/0 [1/0] via 172.31.0.1, MPLS [1/0] via 192.168.2.1, port1 [1/0] via
192.168.122.1, port2
S       1.2.3.4/32 [10/0] via 172.16.100.81, VLAN100
C       10.10.2.0/24 is directly connected, hub
C       10.10.2.1/32 is directly connected, hub
O       10.10.10.0/24 [110/101] via 192.168.2.1, port1, 01:54:18
C       10.253.240.0/20 is directly connected, wgt.root
S       110.2.2.122/32 [22/0] via 2.2.2.2, port2, [3/3]
C       172.16.50.0/24 is directly connected, WAN1-VLAN50
C       172.16.60.0/24 is directly connected, WAN2-VLAN60
C       172.16.100.0/24 is directly connected, VLAN100
C       172.31.0.0/30 is directly connected, MPLS
C       172.31.0.2/32 is directly connected, MPLS
```

```

B      192.168.0.0/24 [20/0] via 172.31.0.1, MPLS, 00:31:43
C      192.168.2.0/24 is directly connected, port1
C      192.168.20.0/24 is directly connected, port3
C      192.168.99.0/24 is directly connected, Port1-VLAN99
C      192.168.122.0/24 is directly connected, port2
Routing table for VRF=10
C      172.16.101.0/24 is directly connected, VLAN101

```

### Examining an entry:

```

B      192.168.0.0/24 [20/0] via 172.31.0.1, MPLS, 00:31:43

```

Value	Description
B	BGP. The routing protocol used.
192.168.0.0/24	The destination of this route, including netmask.
[20/0]	20 indicates an administrative distance of 20 out of a range of 0 to 255. 0 is an additional metric associated with this route, such as in OSPF.
172.31.0.1	The gateway or next hop.
MPLS	The interface that the route uses.
00:31:43	The age of the route in HH:MM:SS.

## Viewing the routing database

The routing database consists of all learned routes from all routing protocols before they are injected into the routing table. This likely lists more routes than the routing table as it consists of routes to the same destinations with different distances. Only the best routes are injected into the routing table. However, it is useful to see all learned routes for troubleshooting purposes.

### To view the routing database using the CLI:

```

# get router info routing-table database
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area

N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
     E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       > - selected route, * - FIB route, p - stale info
Routing table for VRF=0
S    *> 0.0.0.0/0 [1/0] via 172.31.0.1, MPLS
      *>          [1/0] via 192.168.2.1, port1
      *>          [1/0] via 192.168.122.1, port2
S    *> 1.2.3.4/32 [10/0] via 172.16.100.81, VLAN100
C    *> 10.10.2.0/24 is directly connected, hub
C    *> 10.10.2.1/32 is directly connected, hub
O    *> 10.10.10.0/24 [110/101] via 192.168.2.1, port1, 02:10:17
C    *> 10.253.240.0/20 is directly connected, wgt.root
S    *> 110.2.2.122/32 [22/0] via 2.2.2.2, port2, [3/3]

```

```

C    *> 172.16.50.0/24 is directly connected, WAN1-VLAN50
C    *> 172.16.60.0/24 is directly connected, WAN2-VLAN60
C    *> 172.16.100.0/24 is directly connected, VLAN100
O      172.31.0.0/30 [110/201] via 192.168.2.1, port1, 00:47:36
C    *> 172.31.0.0/30 is directly connected, MPLS

```

Selected routes are marked by the > symbol. In the above example, the OSPF route to destination 172.31.0.0/30 is not selected.

## Kernel routing table

The kernel routing table makes up the actual Forwarding Information Base (FIB) that used to make forwarding decisions for each packet. The routes here are often referred to as kernel routes. Parts of this table are derived from the routing table that is generated by the routing daemon.

### To view the kernel routing table using the CLI:

```

# get router info kernel
tab=254 vf=0 scope=0 type=1 proto=11 prio=0 0.0.0.0/0.0.0.0/0->0.0.0.0/0 pref=0.0.0.0
    gwy=172.31.0.1 flag=04 hops=0 oif=31(MPLS)
    gwy=192.168.2.1 flag=04 hops=0 oif=3(port1)
    gwy=192.168.122.1 flag=04 hops=0 oif=4(port2)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.122.98/255.255.255.255/0->1.1.1.1/32
pref=0.0.0.0 gwy=192.168.122.1 dev=4(port2)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 172.31.0.2/255.255.255.255/0->1.1.1.1/32
pref=0.0.0.0 gwy=172.31.0.1 dev=31(MPLS)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.2.5/255.255.255.255/0->1.1.1.1/32
pref=0.0.0.0 gwy=192.168.2.1 dev=3(port1)
tab=254 vf=0 scope=0 type=1 proto=11 prio=0 0.0.0.0/0.0.0.0/0->1.2.3.4/32 pref=0.0.0.0
gwy=172.16.100.81 dev=20(VLAN100)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.122.98/255.255.255.255/0->8.8.8.8/32
pref=0.0.0.0 gwy=192.168.122.1 dev=4(port2)

```

The kernel routing table entries are:

Value	Description
tab	Table number: It will either be 254 (unicast) or 255 (multicast).
vf	Virtual domain of the firewall: It is the VDOM index number. If VDOMs are not enabled, this number is 0.
type	Type of routing connection. Valid values include: <ul style="list-style-type: none"> <li>0 - unspecified</li> <li>1 - unicast</li> <li>2 - local</li> <li>3 - broadcast</li> <li>4 - anycast</li> <li>5 - multicast</li> <li>6 - blackhole</li> <li>7 - unreachable</li> <li>8 - prohibited</li> </ul>

Value	Description
proto	Type of installation that indicates where the route came from. Valid values include: <ul style="list-style-type: none"> <li>• 0 - unspecific</li> <li>• 2 - kernel</li> <li>• 11 - ZebOS routing module</li> <li>• 14 - FortiOS</li> <li>• 15 - HA</li> <li>• 16 - authentication based</li> <li>• 17 - HA1</li> </ul>
prio	Priority of the route. Lower priorities are preferred.
->0.0.0.0/0 (->x.x.x.x/mask)	The IP address and subnet mask of the destination.
pref	Preferred next hop along this route.
gwy	Gateway: The address of the gateway this route will use.
dev	Outgoing interface index: This number is associated with the interface for this route. If VDOMs are enabled, the VDOM is also included here. If an interface alias is set for this interface, it is also displayed here.

## Route cache

The route cache contains recently used routing entries in a table. It is consulted before the routing table to speed up the route look-up process.

### To view the route cache using the CLI:

```
# diagnose ip rtcache list
family=02 tab=254 vrf=0 vf=0 type=01 tos=0 flag=00000200
0.0.0.0@0->208.91.113.230@3(port1) gwy=192.168.2.1 prefsr=192.168.2.5
ci: ref=0 lastused=1 expire=0 err=00000000 used=5 br=0 pmtu=1500

family=02 tab=254 vrf=0 vf=0 type=01 tos=0 flag=00000200
192.168.2.5@0->8.8.8.8@3(port1) gwy=192.168.2.1 prefsr=0.0.0.0
ci: ref=0 lastused=0 expire=0 err=00000000 used=2 br=0 pmtu=1500

family=02 tab=254 vrf=0 vf=0 type=02 tos=8 flag=80000200
8.8.8.8@31(MPLS)->172.31.0.2@6(root) gwy=0.0.0.0 prefsr=172.31.0.2
ci: ref=1 lastused=0 expire=0 err=00000000 used=0 br=0 pmtu=16436

family=02 tab=254 vrf=0 vf=0 type=02 tos=0 flag=84000200
192.168.20.6@5(port3)->192.168.20.5@6(root) gwy=0.0.0.0 prefsr=192.168.20.5
ci: ref=2 lastused=0 expire=0 err=00000000 used=1 br=0 pmtu=16436
...
```

The size of the route cache is calculated by the kernel, but can be modified.



**To modify the size of the route cache:**

```
config system global
    set max-route-cache-size <number_of_cache_entries>
end
```

**Route look-up**

Route look-up typically occurs twice in the life of a session. Once when the first packet is sent by the originator and once more when the first reply packet is sent from the responder. When a route look-up occurs, the routing information is written to the session table and the route cache. If routing changes occur during the life of a session, additional routing look-ups may occur.

FortiGate performs a route look-up in the following order:

1. Policy-based routes: If a match occurs and the action is to forward, traffic is forwarded based on the policy route.
2. Route Cache: If there are no matches, FortiGate looks for the route in the route cache.
3. Forwarding Information Base, otherwise known as the kernel routing table.
4. If no match occurs, the packet is dropped.

**Searching the routing table**

When there are many routes in your routing table, you can perform a quick search by using the search bar to specify your criteria, or apply filters on the column header to display only certain routes. For example, if you want to only display static routes, you may use "static" as the search term, or filter by the *Type* field with value *Static*.

Route look-up on the other hand provides a utility for you to enter criteria such as *Destination*, *Destination Port*, *Source*, *Protocol* and/or *Source Interface*, in order to determine the route that a packet will take. Once you click *Search*, the corresponding route will be highlighted.

You can also use the CLI for a route look-up. The CLI provides a basic route look-up tool.

**To look-up a route in the CLI:**

```
# get router info routing-table details 4.4.4.4
Routing table for VRF=0
Routing entry for 0.0.0.0/0
    Known via "static", distance 1, metric 0, best
    * 172.31.0.1, via MPLS distance 0
    * 192.168.2.1, via port1 distance 0
    * 192.168.122.1, via port2 distance 0
```

**Blackhole routes**

Sometimes upon routing table changes, it is not desirable for traffic to be routed to a different gateway. For example, you may have traffic destined for a remote office routed through your IPsec VPN interface. When the VPN is down, traffic will try to re-route to another interface. However, this may not be viable and traffic will instead be routed to your default route through your WAN, which is not desirable. Traffic may also be routed to another VPN, which you do not want. For such scenarios, it is good to define a blackhole route so that traffic is dropped when your desired route is down. Upon reconnection, your desired route is once again added to the routing table and your traffic will resume routing to your desired interface. For this reason, blackhole routes are created when you configure an IPsec VPN using the IPsec wizard.

**To create a blackhole route in the GUI:**

1. Go to *Network > Static Routes*.
2. Click *Create New*. The *New Static Route* screen appears.
3. Specify a *Destination* type.
4. Select *Blackhole* from the *Interface* field.
5. Type the desired *Administrative Distance*.
6. Click *OK*.



Route priority for a *Blackhole* route can only be configured from the CLI.

---

## Reverse path look-up

Whenever a packet arrives at one of the interfaces on a FortiGate, the FortiGate determines whether the packet was received on a legitimate interface by doing a reverse look-up using the source IP address in the packet header. This protects against IP spoofing attacks. If the FortiGate does not have a route to the source IP address through the interface on which the packet was received, the FortiGate drops the packet as per Reverse Path Forwarding (RPF) check. There are two modes of RPF – feasible path and strict. The default feasible RPF mode checks only for the existence of at least one active route back to the source using the incoming interface. The strict RPF check ensures the best route back to the source is used as the incoming interface.

**To configure a strict Reverse Path Forwarding check in the CLI:**

```
config system settings
    set strict-src-check enable
end
```


You can remove RPF state checks without needing to enable asymmetric routing by disabling state checks for traffic received on specific interfaces. Disabling state checks makes a FortiGate less secure and should only be done with caution for troubleshooting purposes.

**To remove Reverse Path Forwarding checks from the state evaluation process in the CLI:**

```
config system interface
    edit <interface_name>
        set src-check disable
    next
end
```

## Asymmetric routing

Asymmetric routing occurs when request and response packets follow different paths that do not cross the same firewall. In the following topology, traffic between PC1 and PC2 takes two different paths.

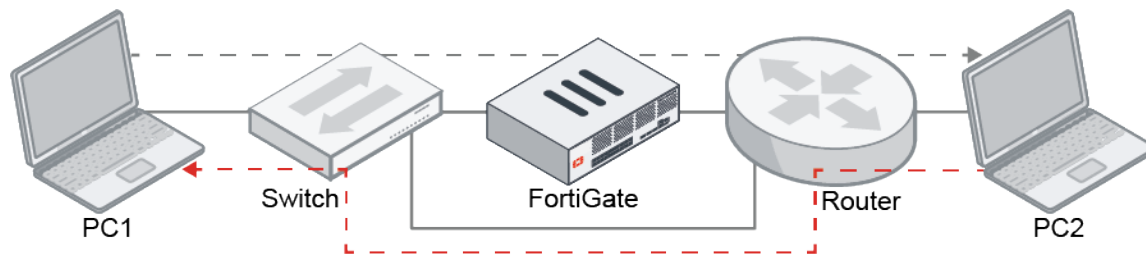

Traffic from PC1 to PC2 goes through the FortiGate, while traffic from PC2 to PC1 does not.

In TCP, if the packets in the request and response directions follow different paths, the FortiGate will block the packets, since the TCP three-way handshake is not established through the FortiGate.

#### Scenario 1: PC1 starts a TCP connection with PC2

1. The TCP SYN is allowed by the FortiGate.
2. The TCP SYN/ACK bypasses the FortiGate.
3. The TCP ACK is blocked by the FortiGate.
4. Subsequent TCP packets are blocked by the FortiGate.

#### Scenario 2: PC2 starts a TCP connection with PC1

1. The TCP SYN bypasses the FortiGate.
2. The TCP SYN/ACK is blocked by the FortiGate.
3. Subsequent TCP packets are blocked by the FortiGate.

In ICMP, consider the following scenarios.

#### Scenario 1: PC1 pings PC2

1. The ICMP request passes through the FortiGate. A session is created.
2. The ICMP reply bypasses the FortiGate, but reaches PC1. The ping is successful.
3. The ICMP request passes through the FortiGate, and it matches the previous session.
4. The ICMP reply bypasses the FortiGate, but it reaches PC1. The ping is successful.
5. Subsequent ICMP requests are allowed by the FortiGate.

#### Scenario 2: PC2 pings PC1

1. The ICMP request bypasses the FortiGate, but it reaches PC1.
2. The ICMP reply passes through the FortiGate. No session is matched, and the packet is dropped.
3. Subsequent ICMP replies are blocked by the FortiGate.

If an ICMP request does not pass through the FortiGate, but the response passes through the FortiGate, then by default it blocks the packet as invalid.

### Permitting asymmetric routing

If required, the FortiGate can be configured to permit asymmetric routing.

**To permit asymmetric routing:**

```
config system settings
    set asymroute enable
end
```

This setting should be used only when the asymmetric routing issue cannot be resolved by ensuring both directions of traffic pass through the FortiGate.

When asymmetric routing is enabled and occurs, the FortiGate cannot inspect all traffic. Potentially malicious traffic may pass through and compromise the security of the network.

Asymmetric routing behaves as follows when it is permitted by the FortiGate:

**TCP packets****Scenario 1: PC1 starts a TCP connection with PC2**

1. The TCP SYN is allowed by the FortiGate. The FortiGate creates a session, checks the firewall policies, and applies the configuration from the matching policy (UTM inspection, NAT, traffic shaping, and so on).
2. The TCP SYN/ACK bypasses the FortiGate.
3. The TCP ACK is allowed by the FortiGate. The packet matches the previously created session.
4. Subsequent TCP packets are allowed by the FortiGate. The packets in the session can also be offloaded where applicable.

**Scenario 2: PC2 starts a TCP connection with PC1**

1. The TCP SYN bypasses the FortiGate.
2. The TCP SYN/ACK is allowed by the FortiGate. No session is matched. The packet passes to the CPU and is forwarded based on the routing table.
3. The TCP ACK bypasses the FortiGate.
4. Subsequent TCP packets are allowed by the FortiGate. The FortiGate acts as a router that only makes routing decisions. No security inspection is performed.

**ICMP packets****Scenario 1: PC1 pings PC2**

1. There is no difference from when asymmetric routing is disabled.

**Scenario 2: PC2 pings PC1**

1. The ICMP request bypasses the FortiGate, but it reaches PC1.
2. The ICMP reply passes through the FortiGate. No session is matched. The packet passes to the CPU and is forwarded based on the routing table.
3. Subsequent ICMP replies are allowed by the FortiGate. The FortiGate acts as a router that only makes routing decisions. No security inspection is performed.

**UDP packets**

Asymmetric routing does not affect UDP packets. UDP packets are checked by the session table regardless of asymmetric routing. A policy is required to allow UDP.

## Routing changes

When routing changes occur, routing look-up may occur on an existing session depending on certain configurations.

### Routing changes without SNAT

When a routing change occurs, FortiGate flushes all routing information from the session table and performs new routing look-up for all new packets on arrival by default. You can modify the default behavior using the following commands:

```
config system interface
    edit <interface>
        set preserve-session-route enable
    next
end
```

By enabling `preserve-session-route`, the FortiGate marks existing session routing information as persistent. Therefore, routing look-up only occurs on new sessions.

### Routing changes with SNAT


When SNAT is enabled, the default behavior is opposite to that of when SNAT is not enabled. After a routing change occurs, sessions with SNAT keep using the same outbound interface as long as the old route is still active. This may be the case if the priority of the static route was changed. You can modify this default behavior using the following commands:

```
config system global
    set snat-route-change enable
end
```

By enabling `snat-route-change`, sessions with SNAT will require new route look-up when a routing change occurs. This will apply a new SNAT to the session.

## Static route tags

When a static route is configured with a route tag, it is matched in the route map, and then used to set the route's metric and advertise to the BGP neighbor. In the following example, route tag 565 is used, and router R1 receives the advertised route from the FortiGate router R5.

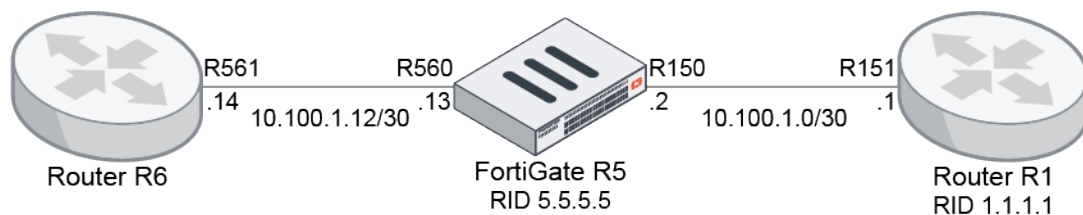

### To configure the FortiGate:

#### 1. Configure the static route:

```
config router static
    edit 1
        set dst 77.7.7.7 255.255.255.255
```

```

        set distance 2
        set device "R560"
        set tag 565
    next
end

```

## 2. Configure the route map:

```

config router route-map
    edit "map1"
        config rule
            edit 2
                set match-tag 565
                set set-metric 2301
            next
        end
    next
end

```

## 3. Configure the BGP neighbor:

```

config router bgp
    config neighbor
        edit "10.100.1.2"
            set route-map-out "map1"
        next
    end
end

```

On its neighbor side, router R1 receives the advertised route from the FortiGate router R5.

## 4. Verify the BGP routing table:

```

# get router info routing-table bgp
Routing table for VRF=0
B       77.7.7.7/32 [20/2301] via 10.100.1.1 (recursive is directly connected, R150),
03:18:53, [1/0]

```

## 5. Verify the network community:

```

# get router info bgp network 77.7.7.7/32
VRF 0 BGP routing table entry for 77.7.7.7/32
Paths: (1 available, best #1, table Default-IP-Routing-Table)
Advertised to non peer-group peers:
 2.2.2.2 3.3.3.3 10.100.1.5 2000::2:2:2:2
Original VRF 0
20
10.100.1.1 from 10.100.1.1 (5.5.5.5)
Origin incomplete metric 2301, localpref 200, valid, external, best
Last update: Wed Oct  5 16:48:28 2022

```

## Policy routes

Policy routing allows you to specify an interface to route traffic. This is useful when you need to route certain types of network traffic differently than you would if you were using the routing table. You can use the incoming traffic's protocol, source or destination address, source interface, or port number to determine where to send the traffic.

When a packet arrives, the FortiGate starts at the top of the policy route list and attempts to match the packet with a policy. For a match to be found, the policy must contain enough information to route the packet. At a minimum, this requires the outgoing interface to forward the traffic, and the gateway to route the traffic to. If one or both of these are not specified in the policy route, then the FortiGate searches the routing table to find the best active route that corresponds to the policy route. If no routes are found in the routing table, then the policy route does not match the packet. The FortiGate continues down the policy route list until it reaches the end. If no matches are found, then the FortiGate does a route lookup using the routing table.



Policy routes are sometimes referred to as Policy-based routes (PBR).

## Configuring a policy route

In this example, a policy route is configured to send all FTP traffic received at port1 out through port4 and to a next hop router at 172.20.120.23. To route FTP traffic, the protocol is set to TCP (6) and the destination ports are set to 21 (the FTP port).

### To configure a policy route in the GUI:

1. Go to *Network > Policy Routes*.
2. Click *Create New > Policy Route*.
3. Configure the following fields:

<b>Incoming interface</b>	port1
<b>Source Address</b>	0.0.0.0/0.0.0.0
<b>Destination Address</b>	0.0.0.0/0.0.0.0
<b>Protocol</b>	TCP
<b>Destination ports</b>	21 - 21
<b>Type of service</b>	0x00
<b>Bit Mask</b>	0x00
<b>Outgoing interface</b>	Enable and select port4
<b>Gateway address</b>	172.20.120.23

4. Click **OK**.

### To configure a policy route in the CLI:

```
config router policy
  edit 1
    set input-device "port1"
    set src "0.0.0.0/0.0.0.0"
    set dst "0.0.0.0/0.0.0.0"
    set protocol 6
    set start-port 21
    set end-port 21
    set gateway 172.20.120.23
    set output-device "port4"
    set tos 0x00
    set tos-mask 0x00
  next
end
```

### Moving a policy route

A routing policy is added to the bottom of the table when it is created. Routing policies can be moved to a different location in the table to change the order of preference. In this example, routing policy 3 will be moved before routing policy 2.



### To move a policy route in the GUI:

1. Go to *Network > Policy Routes*.
2. In the table, select the policy route.

<div>+ Create New</div>		<div>Edit</div>	<div>Delete</div>	<div>Search</div>		<div>Q</div>
Seq.#	Incoming Interface	Outgoing Interface	Source	Destination	Hit Count	
IPv4						
1	<div>VPN_A_Tunnel (Branch-HQ-A)</div>	<div>VPN_A_Tunnel (Branch-HQ-A)</div>			0	
2	<div>VPN_B_Tunnel (Branch-HQ-B)</div>	<div>VPN_B_Tunnel (Branch-HQ-B)</div>			0	
3	<div>HQ-MPLS (HQ-MPLS)</div>	<div>HQ-MPLS (HQ-MPLS)</div>			0	
Updated: 13:27:34						

3. Drag the selected policy route to the desired position.

<div>+ Create New</div>		<div>Edit</div>	<div>Delete</div>	<div>Search</div>		<div>Q</div>
Seq.#	Incoming Interface	Outgoing Interface	Source	Destination	Hit Count	
IPv4						
1	VPN_A_Tunnel (Branch-HQ-A)	VPN_A_Tunnel (Branch-HQ-A)			0	
3	HQ-MPLS (HQ-MPLS)	HQ-MPLS (HQ-MPLS)			0	
2	VPN_B_Tunnel (Branch-HQ-B)	VPN_B_Tunnel (Branch-HQ-B)			0	
Updated: 13:26:38						

### To move a policy route in the CLI:

```
config router policy
    move 3 after 1
end
```

## Equal cost multi-path

Equal cost multi-path (ECMP) is a mechanism that allows a FortiGate to load-balance routed traffic over multiple gateways. Just like routes in a routing table, ECMP is considered after policy routing, so any matching policy routes will take precedence over ECMP.

ECMP pre-requisites are as follows:

- Routes must have the same destination and costs. In the case of static routes, costs include distance and priority
- Routes are sourced from the same routing protocol. Supported protocols include static routing, OSPF, and BGP

### ECMP and SD-WAN implicit rule

ECMP and SD-WAN implicit rule are essentially similar in the sense that an SD-WAN implicit rule is processed after SD-WAN service rules are processed. See [Implicit rule on page 694](#) to learn more.

The following table summarizes the different load-balancing algorithms supported by each:

ECMP	SD-WAN		Description
	GUI	CLI	
source-ip-based	Source IP	source-ip-based	Traffic is divided equally between the interfaces. Sessions that start at the same source IP address use the same path. This is the default selection.

ECMP	SD-WAN		Description
	GUI	CLI	
weight-based	Sessions	weight-based	The workload is distributed based on the number of sessions that are connected through the interface. The weight that you assign to each interface is used to calculate the percentage of the total sessions allowed to connect through an interface, and the sessions are distributed to the interfaces accordingly.
usage-based	Spillover	usage-based	The interface is used until the traffic bandwidth exceeds the ingress and egress thresholds that you set for that interface. Additional traffic is then sent through the next interface member.
source-dest-ip-based	Source-Destination IP	source-dest-ip-based	Traffic is divided equally between the interfaces. Sessions that start at the same source IP address and go to the same destination IP address use the same path.
Not supported	Volume	measured-volume-based	This mode is supported in SD-WAN only. The workload is distributed based on the number of packets that are going through the interface.

### To configure the ECMP algorithm from the CLI:

- At the VDOM level:

```
config system settings
    set v4-ecmp-mode {source-ip-based* | weight-based | usage-based | source-dest-ip-based}
end
```

- If SD-WAN is enabled, the above option is not available and ECMP is configured under the SD-WAN settings:

```
config system sdwan
    set status enable
    set load-balance-mode {source-ip-based* | weight-based | usage-based | source-dest-ip-based | measured-volume-based}
end
```

For ECMP in IPv6, the mode must also be configured under SD-WAN:


```
# diagnose sys vd list
system fib version=63
list virtual firewall info:
name=root/root index=0 enabled fib_ver=40 use=168 rt_num=46 asym_rt=0 sip_helper=0, sip_nat_trace=1, mc_fwd=0, mc_ttl_nc=0, tpmc_sk_pl=0
ecmp=source-ip-based, ecmp6=source-ip-based asym_rt6=0 rt6_num=55 strict_src_check=0 dns_log=1 ses_num=20 ses6_num=0 pkt_num=19154477
```

**To change the number of paths allowed by ECMP:**

```
config system settings
    set ecmp-max-paths <number of paths>
end
```



Setting `ecmp-max-paths` to the lowest value of 1 is equivalent to disabling ECMP.

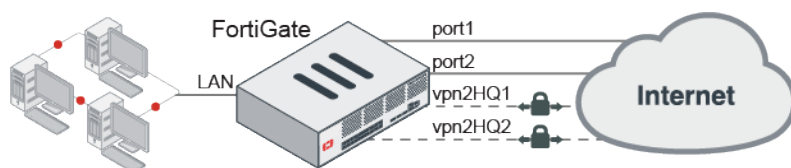**ECMP configuration examples**

The following examples demonstrate the behavior of ECMP in different scenarios:

- [Example 1: Default ECMP on page 365](#)
- [Example 2: Same distance, different priority on page 366](#)
- [Example 3: Weight-based ECMP on page 366](#)
- [Example 4: Load-balancing BGP routes on page 367](#)

**Example 1: Default ECMP**

```
config router static
    edit 1
        set gateway 172.16.151.1
        set device "port1"
    next
    edit 2
        set gateway 192.168.2.1
        set device "port2"
    next
end

# get router info routing-table all
Routing table for VRF=0
S*    0.0.0.0/0 [10/0] via 172.16.151.1, port1
      [10/0] via 192.168.2.1, port2
C     172.16.151.0/24 is directly connected, port1
C     192.168.2.0/24 is directly connected, port2
```

**Result:**

Both routes are added to the routing table and load-balanced based on the source IP.

## Example 2: Same distance, different priority

```
config router static
  edit 1
    set gateway 172.16.151.1
    set priority 5
    set device "port1"
  next
  edit 2
    set gateway 192.168.2.1
    set device "port2"
  next
end

# get router info routing-table all
Routing table for VRF=0
S*    0.0.0.0/0 [10/0] via 192.168.2.1, port2
      [10/0] via 172.16.151.1, port1, [5/0]
C     172.16.151.0/24 is directly connected, port1
C     192.168.2.0/24 is directly connected, port2
```

### Result:

Both routes are added to the routing table, but traffic is routed to `port2` which has a lower priority value with a default of 0.

## Example 3: Weight-based ECMP

```
config router static
  edit 3
    set dst 10.10.30.0 255.255.255.0
    set weight 80
    set device "vpn2HQ1"
  next
  edit 5
    set dst 10.10.30.0 255.255.255.0
    set weight 20
    set device "vpn2HQ2"
  next
end

# get router info routing-table all
Routing table for VRF=0
...
S     10.10.30.0/24 [10/0] is directly connected, vpn2HQ1, [0/80]
      [10/0] is directly connected, vpn2HQ2, [0/20]
C     172.16.151.0/24 is directly connected, port1
C     192.168.0.0/24 is directly connected, port3
C     192.168.2.0/24 is directly connected, port2
```

### Result:

Both routes are added to the routing table, but 80% of the sessions to `10.10.30.0/24` are routed to `vpn2HQ1`, and 20% are routed to `vpn2HQ2`.

## Example 4: Load-balancing BGP routes

```

config router bgp
  set as 64511
  set router-id 192.168.2.86
  set ebgp-multipath enable
  config neighbor
    edit "192.168.2.84"
      set remote-as 64512
    next
    edit "192.168.2.87"
      set remote-as 64512
    next
  end
end
# get router info routing-table all
Routing table for VRF=0
...
C   172.16.151.0/24 is directly connected, port1
C   192.168.0.0/24 is directly connected, port3
C   192.168.2.0/24 is directly connected, port2
B   192.168.80.0/24 [20/0] via 192.168.2.84, port2, 00:00:33
    [20/0] via 192.168.2.87, port2, 00:00:33

```

### Result:


The network 192.168.80.0/24 is advertised by two BGP neighbors. Both routes are added to the routing table, and traffic is load-balanced based on Source IP.

For multiple BGP paths to be added to the routing table, you must enable `ebgp-multipath` for eBGP or `ibgp-multipath` for iBGP. These settings are disabled by default.

## Dual internet connections

Dual internet connections, also referred to as dual WAN or redundant internet connections, refers to using two FortiGate interfaces to connect to the Internet. This is generally accomplished with SD-WAN, but this legacy solution provides the means to configure dual WAN without using SD-WAN. You can use dual internet connections in several ways:

- Link redundancy: If one interface goes down, the second interface automatically becomes the main connection.
- Load sharing: This ensures better throughput.
- Use a combination of link redundancy and load sharing.

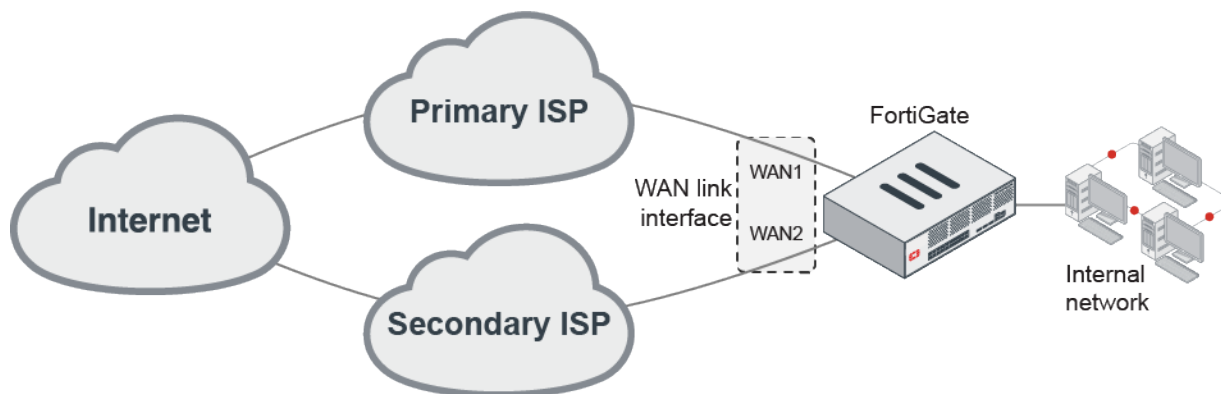

This section describes the following dual internet connection scenarios:

- [Scenario 1: Link redundancy and no load-sharing on page 368](#)
- [Scenario 2: Load-sharing and no link redundancy on page 370](#)
- [Scenario 3: Link redundancy and load-sharing on page 371](#)

## Scenario 1: Link redundancy and no load-sharing

Link redundancy ensures that if your Internet access is no longer available through a certain port, the FortiGate uses an alternate port to connect to the Internet.

In this scenario, two interfaces, WAN1 and WAN2, are connected to the Internet using two different ISPs. WAN1 is the primary connection. In the event of a failure of WAN1, WAN2 automatically becomes the connection to the Internet. For this configuration to function correctly, you must configure the following settings:

- [Link health monitor on page 368](#): To determine when the primary interface (WAN1) is down and when the connection returns.
- [Routing on page 369](#): Configure a default route for each interface.
- [Security policies on page 370](#): Configure security policies to allow traffic through each interface to the internal network.

### Link health monitor

Adding a link health monitor is required for routing failover traffic. A link health monitor confirms the device interface connectivity by probing a gateway or server at regular intervals to ensure it is online and working. When the server is not accessible, that interface is marked as down.

Set the `interval` (how often to send a ping) and `failtime` (how many lost pings are considered a failure). A smaller interval value and smaller number of lost pings results in faster detection, but creates more traffic on your network.

The link health monitor supports both IPv4 and IPv6, and various other protocols including ping, tcp-echo, udp-echo, http, and twamp.

#### To add a link health monitor (IPv4) using the CLI:

```
config system link-monitor
  edit <link-monitor-name>
    set addr-mode ipv4
    set srcintf <interface-name>
    set server <server-IP-address>
    set protocol {ping tcp-echo udp-echo http twamp}
    set gateway-ip <gateway-IP-address>
    set interval <seconds>
    set failtime <retry-attempts>
    set recoverytime <number-of-successful-responses>
    set status enable
  next
end
```

Option	Description
<code>set update-cascade-interface {enable   disable}</code>	This option is used in conjunction with fail-detect and fail-alert options in interface settings to cascade the link failure down to another interface. See the <a href="#">Bring other interfaces down when link monitor fails</a> KB article for details.
<code>set update-static-route {enable   disable}</code>	When the link fails, all static routes associated with the interface will be removed.

## Routing

You must configure a default route for each interface and indicate your preferred route as follows:

- Specify different distances for the two routes. The lower of the two distance values is declared active and placed in the routing table.

Or

- Specify the same distance for the two routes, but give a higher priority to the route you prefer by defining a lower value. Both routes will be added to the routing table, but the route with a higher priority will be chosen as the best route

In the following example, we will use the first method to configure different distances for the two routes. You might not be able to connect to the backup WAN interface because the FortiGate does not route traffic out of the backup interface. The FortiGate performs a reverse path look-up to prevent spoofed traffic. If an entry cannot be found in the routing table that sends the return traffic out through the same interface, the incoming traffic is dropped.

### To configure the routing of the two interfaces using the GUI:

- Go to *Network > Static Routes*, and click *Create New*.
- Enter the following information:

<b>Destination</b>	For an IPv4 route, enter a subnet of 0.0.0.0/0.0.0.0. For an IPv6 route, enter a subnet of ::/0.
<b>Interface</b>	Select the primary connection. For example, wan1.
<b>Gateway Address</b>	Enter the gateway address.
<b>Administrative Distance</b>	Leave as the default of 10.

- Click *OK*.
- Repeat the above steps to set *Interface* to wan2 and *Administrative Distance* to 20.

### To configure the routing of the two interfaces using the CLI:

```
config router {static | static6}
  edit 1
    set dst 0.0.0.0 0.0.0.0
    set device wan1
    set gateway <gateway_address>
    set distance 10
```

```
next
edit 2
    set dst 0.0.0.0 0.0.0.0
    set device wan2
    set gateway <gateway_address>
    set distance 20
next
end
```

## Security policies

When you create security policies, you need to configure duplicate policies to ensure that after traffic fails over WAN1, regular traffic is allowed to pass through WAN2, as it did with WAN1. This ensures that failover occurs with minimal effect to users.

## Scenario 2: Load-sharing and no link redundancy

Load sharing may be accomplished in a few of the following ways of the many possible ways:

- By defining a preferred route with a lower distance, and specifying policy routes to route certain traffic to the secondary interface.
- By defining routes with same distance values but different priorities, and specifying policy routes to route certain traffic to the secondary interface.
- By defining routes with same distance values and priorities, and use equal-cost multi-path (ECMP) routing to equally distribute traffic between the WAN interfaces.

In our example, we will use the first option for our configuration. In this scenario, because link redundancy is not required, you do not have to configure a link monitor.



Traffic behaviour without a link monitor is as follows:

- If the remote gateway is down but the primary WAN interface of a FortiGate is still up, the FortiGate will continue to route traffic to the primary WAN. This results in traffic interruptions.
  - If the primary WAN interface of a FortiGate is down due to physical link issues, the FortiGate will remove routes to it and the secondary WAN routes will become active. Traffic will failover to the secondary WAN.
- 

## Routing

Configure routing as you did in [Scenario 1: Link redundancy and no load-sharing on page 368](#) above.

## Policy routes

By configuring policy routes, you can redirect specific traffic to the secondary WAN interface. This works in this case because policy routes are checked before static routes. Therefore, even though the static route for the secondary WAN is not in the routing table, traffic can still be routed using the policy route.

In this example, we will create a policy route to route traffic from one address group to the secondary WAN interface.



### To configure a policy route from the GUI:

1. Go to *Network > Policy Routes*, and click *Create New*.
2. Enter the following information:

<b>Incoming interface</b>	Define the source of the traffic. For example, <code>internal</code> .
<b>Source Address</b>	If we prefer to route traffic only from a group of addresses, define an address or address group, and add here.
<b>Destination Address</b>	Because we want to route all traffic from the address group here, we do not specify a destination address.
<b>Protocol</b>	Specify any protocol.
<b>Action</b>	Forward traffic.
<b>Outgoing interface</b>	Select the secondary WAN as the outbound interface. For example, <code>wan2</code> .
<b>Gateway address</b>	Input the gateway address for your secondary WAN. Because its default route has a higher distance value and is not added to the routing table, the gateway address must be added here.

3. Click OK.

### To configure a policy route from the CLI:

```
config router policy
  edit 1
    set input-device "internal"
    set srcaddr "Laptops"
    set gateway <gateway_address>
    set output-device "wan2"
  next
end
```

## Security policies

Your security policies should allow all traffic from `internal` to WAN1. Because link redundancy is not needed, you do not need to duplicate all WAN1 policies to WAN2. You will only need to define policies used in your policy route.

## Scenario 3: Link redundancy and load-sharing

In this scenario, both the links are available to distribute Internet traffic with the primary WAN being preferred more. Should one of the interfaces fail, the FortiGate will continue to send traffic over the other active interface. The configuration is a combination of both the link redundancy and the load-sharing scenarios. The main difference is that the configured routes have equal distance values, with the route with a higher priority being preferred more. This ensures both routes are active in the routing table, but the route with a higher priority will be the best route.

### Link health monitor

Link monitor must be configured for both the primary and the secondary WAN interfaces. This ensures that if the primary or the secondary WAN fails, the corresponding route is removed from the routing table and traffic re-routed to the other

WAN interface.

For configuration details, see sample configurations in [Scenario 1: Link redundancy and no load-sharing on page 368](#).

## Routing

Both WAN interfaces must have default routes with the same distance. However, preference is given to the primary WAN by giving it a higher priority.

### To configure the routing of the two interfaces using the CLI:

```
config router {static | static6}
    edit 1
        set dst 0.0.0.0 0.0.0.0
        set device wan1
        set gateway <gateway_address>
        set distance 10
        set priority 1
    next
    edit 2
        set dst 0.0.0.0 0.0.0.0
        set device wan2
        set gateway <gateway_address>
        set distance 10
        set priority 10
    next
end
```

## Policy routes

The policy routes configuration is very similar to that of the policy routes in [Scenario 2: Load-sharing and no link redundancy on page 370](#), except that the gateway address should not be specified. When a policy route is matched and the gateway address is not specified, the FortiGate looks at the routing table to obtain the gateway. In case the secondary WAN fails, traffic may hit the policy route. Because there is no gateway specified and the route to the secondary WAN is removed by the link monitor, the policy route will be bypassed and traffic will continue through the primary WAN. This ensures that the policy route is not active when the link is down.

## Security policies

When you create security policies, you need to configure duplicate policies to ensure that after traffic fails over WAN1, regular traffic is allowed to pass through WAN2, as it was with WAN1. This ensures that failover occurs with minimal effect to users.

## Dynamic routing

Dynamic routing protocols attempt to build a map of the network topology to identify the best routes to reach different destinations. Instead of manually defining static routes, which is not scalable, dynamic routing typically involves defining neighbors and peer routers that share their network topology and routing updates with each other. Protocols like distance vector, link state, and path vector are used by popular routing protocols. FortiGate supports RIP, OSPF, BGP,

and IS-IS, which are interoperable with other vendors. When different dynamic routing protocols are used, the administrative distance of each protocol helps the FortiGate decide which route to pick.




Go to *System > Feature Visibility* and enable *Advanced Routing* to configure dynamic routing options in the GUI. See [Feature visibility on page 2515](#) for more information.

This section includes:

- [RIP on page 374](#)
- [OSPF on page 393](#)
- [BGP on page 410](#)
- [BFD on page 448](#)
- [Routing objects on page 457](#)

To view the routing table and perform route look-ups in the GUI, go to *Dashboard > Network* and expand the *Routing* widget.

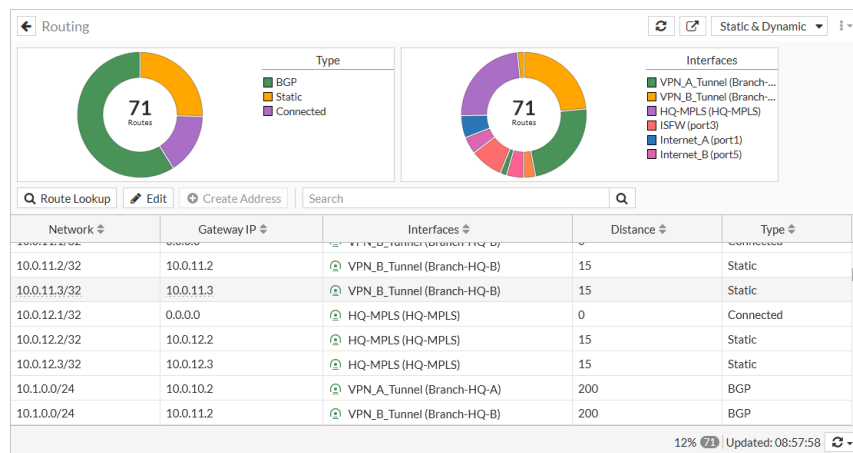

### To view the routing table in the CLI:

```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
S*  0.0.0.0/0 [5/0] via 192.168.0.1, wan1
C   10.10.10.0/24 is directly connected, internal
C   169.254.2.1/32 is directly connected, Dialup-test
C   172.31.0.0/30 is directly connected, toKVM-MPLS
C   172.31.0.1/32 is directly connected, toKVM-MPLS
C   192.168.0.0/24 is directly connected, wan1
O   192.168.2.0/24 [110/101] via 10.10.10.11, internal, 00:00:26
S   192.168.20.0/24 [10/0] via 172.31.0.2, toKVM-MPLS
    [10/0] via 10.10.10.11, internal
```

## RIP

Routing Information Protocol (RIP) is a distance-vector routing protocol that is intended for small and relatively homogeneous networks. It works well when there are minimal redundant paths and limited hop counts. FortiGate supports RIP version 1 ([RFC 1058](#)), RIP version 2 ([RFC 2453](#)), and RIPvng ([RFC 2080](#)).

### Basic configuration

**To configure the FortiGate to participate in RIP using the most basic configurations in the GUI:**

1. Go to *Network > RIP*.
2. Set the *Version*.
3. Add the networks that the FortiGate will advertise in and that will participate in RIP.
4. If the interface settings, such as passive interface, authentication, or enabling send/receive updates, must be edited, add the interfaces to the *Interface* table.
5. Click *Apply*.

**To configure the FortiGate to participate in RIP using the most basic configurations in the CLI:**

```
config router rip
  config network
    edit 1
      set prefix <subnet> <netmask>
    next
  end
  config interface
    edit <interface>
      set receive-version 2
      set send-version 2
    next
  end
end
```

### Default route injection

Enabling *Inject default route* (default-information-originate) advertises a default route into the FortiGate's RIP network.

**To enable/disable default route injection in the GUI:**

1. Go to *Network > RIP*.
2. Expand the *Advanced Options*.
3. Enable/disable *Inject Default Route*.
4. Click *OK*.

**To enable/disable default route injection in the CLI:**

```
config router rip
  set default-information-originate {enable | disable}
```

```
end
```

## Default metric

The default metric setting sets the default metric for all redistributed routes. If the default metric is set to five, and static routes are redistributed, then static routes have a metric of five. This value can be overridden by setting a specific metric value for a protocol. For example, the static route metric can be set to two, overriding the default metric.

```
config router rip
    set default-metric 5
    config redistribute "static"
        set status enable
        set metric 2
    end
end
```

The default metric is five, but redistributed static routes have a metric of two. So, the default metric is overridden and the metric for redistributed static routes is two.

## Timers

RIP uses the update, timeout, and garbage timers to regulate its performance. The default timer settings are effective in most configurations. When customizing the settings, you must ensure that the new settings are compatible with your local routers and access servers.

Go to *Network > RIP* and expand the *Advanced Options* to configure the timers in the GUI, or use the CLI:

```
config router rip
    set timeout-timer <seconds>
    set update-timer <seconds>
    set garbage-timer <seconds>
end
```

### Update timer

The update timer sets the interval between routing updates. The default value is 30 seconds. Randomness is added to help prevent network congestion due to multiple routers trying to update their neighbors simultaneously. The update timer must be at least three times shorter than the timeout timer.

If there is significant RIP traffic on the network, you can increase the update timer to send fewer updates. You must apply the same increase to all routers on the network to avoid timeouts that degrade your network speed.

### Timeout timer

The timeout timer is the maximum amount of time that a reachable route is kept in the routing table since its last update. The default value is 180 seconds. If an update for the route is received before the timeout period elapses, then the timer is reset. The timeout timer should be at least three times longer than the update timer.

If routers are not responding to updates in time, increasing the timeout timer can help. A longer timeout timer results in longer update periods, and the FortiGate could wait a considerable amount of time for all of the timers to expire on an unresponsive route.

## Garbage timer

The garbage timer is the amount of time that the FortiGate advertises a route as unreachable before deleting the route from the routing table. The default value is 120 seconds.

If the timer is short, older routes are removed from the routing table more quickly, resulting in a smaller routing table. This can be useful for large networks, or if the network changes frequently.

## Authentication and key chain

RIP version 1 (RIPv1) has no authentication. RIP version 2 (RIPv2) uses text passwords or authentication keys to ensure that the routing information exchanged between routers is reliable. For authentication to work, both the sending and receiving routers must be set to use authentication and must be configured with the same password or keys. An authentication key that uses authentication key chains is more secure than a text password because the intervals when the key is valid can be configured.

A key chain is a list of one or more authentication keys that each have send and receive lifetimes. Keys are used to authenticate routing packets only during the keys specified lifetimes. The FortiGate migrates from one key to the next according to the scheduled lifetimes. The sending and receiving routers should have synchronized system dates and times to ensure that both ends are using the same keys at the same times. You can overlap the key lifetimes to make sure that a key is always available, even if there is some difference in the system times.

### To configure a text password in the GUI:

1. Go to *Network > RIP*.
2. In the *Interfaces* table, click *Create New*, or edit an existing interface.
3. Enable *Authentication* and select *Text* or *MD5*.
4. Click *Change*, and enter the password.
5. Configure the remaining settings as needed.
6. Click *OK*.
7. Click *Apply*.

### To configure a text password in the CLI:

```
config router rip
  config interface
    edit <interface>
      set auth-mode {text | md5}
      set auth-string *****
    next
  end
end
```

### To configure a key chain with two sequentially valid keys and use it in a RIP interface:

```
config router key-chain
  edit rip_key
    config key
      edit 1
        set accept-lifetime 09:00:00 23 02 2020 09:00:00 17 03 2020
        set send-lifetime 09:00:00 23 02 2020 09:00:00 17 03 2020
      next
    next
  end
end
```

```
        set key-string *****
    next
    edit 2
        set accept-lifetime 09:01:00 17 03 2020 09:00:00 1 04 2020
        set send-lifetime 09:01:00 17 03 2020 09:00:00 1 04 2020
        set key-string *****
    next
end
next
end

config router rip
    config interface
        edit port1
            set auth-keychain "rip_key"
        next
    end
end
```

## Passive RIP interfaces

By default, an active RIP interface keeps the FortiGate routing table current by periodically asking neighbors for routes and sending out route updates. This can generate a significant amount of extra traffic in a large network.

A passive RIP interface listens to updates from other routers, but does not send out route updates. This can reduce network traffic when there are redundant routers in the network that would always send out essentially the same updates.

This example shows how to configure a passive RIPv2 interface on port1 using MD5 authentication.

### To configure a passive RIP interface in the GUI:

1. Go to *Network > RIP*.
2. In the *Interfaces* table, click *Create New*.
3. Set *Interface* to the required interface.
4. Enable *Passive*.
5. Enable *Authentication* and set it to *MD5*.
6. Click *Change* and enter a password.
7. Set *Receive Version* to 2.
8. Click *OK*.

### To configure a passive RIP interface in the CLI:

```
config router rip
    set passive-interface "port1"
    config interface
        edit "port1"
            set auth-mode md5
            set auth-string *****
            set receive-version 2
            set send-version 2
        next
    end
```

```

end
end

```


## RIP and IPv6

RIP next generation (RIPng) is an extension of RIPv2 that includes support for IPv6. See [Basic RIPng example on page 391](#) and [IPv6 tunneling on page 568](#) for more information.

## Basic RIP example

In this example, a medium-sized network is configured using RIPv2.

- Two core routers, RIP Router2 and RIP Router3, connect to the ISP router for two redundant paths to the internet.
- Two other routers, RIP Router1 and RIP Router4, connect to the two core routers and to different local networks.
- The ISP router is using RIP for its connections to the core routers, and redistributes its default route to the network - that is, default route injection is enabled.
- The ISP router uses NAT and has a static route to the internet. None of the other routers use NAT or static routes.

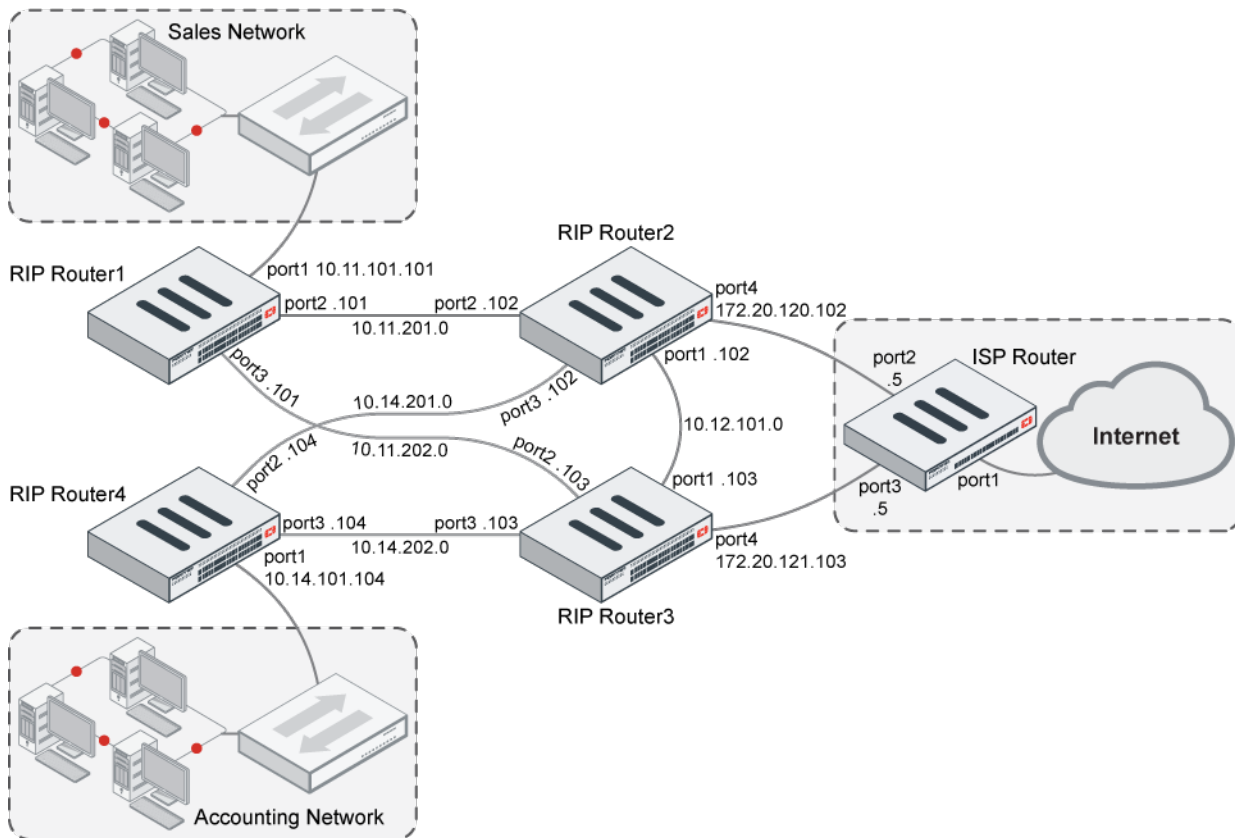

All of the FortiGate routers are configured as shown, using netmask 255.255.255.0. Firewall policies have been configured to allow the required traffic to flow across the interfaces.



Router	Interface	Interface name	IP address
Router1	port1	LoSales	10.11.101.101
	port2	vd12link0	10.11.201.101
	port3	vd13link0	10.11.202.101
Router2	port1	vd23link0	10.12.101.102
	port2	vd12link1	10.11.201.102
	port3	vd42link1	10.14.201.102
	port4	vdr2link1	172.20.120.102
Router3	port1	vd23link1	10.12.101.103
	port2	vd13link1	10.11.202.103
	port3	vd43link1	10.14.202.103
	port4	vdr3link1	172.20.121.103
Router4	port1	LoAccounting	10.14.101.104
	port2	vd42link0	10.14.201.104
	port3	vd43link0	10.14.202.104
ISP Router	port1	port1	To internet
	port2	vdr2link0	172.20.120.5
	port3	vdr3link0	172.20.121.5

After configuring each router, you can check the status of the connections by viewing the RIP database, RIP interfaces, and routing table. See [Verifying the configuration on page 384](#).

After the network is configured, you can test it to ensure that when network events occur, such as a downed link, routing updates are triggered and converge as expected. See [Testing the configuration and routing changes on page 388](#).

## ISP router

### To configure the ISP Router in the GUI:

1. Go to *Network > RIP*.
2. Set the *Version* to 2.
3. Under *Networks*, add two networks:
  - 172.20.120.0/255.255.255.0
  - 172.20.121.0/255.255.255.0
4. Add the interfaces:
  - a. In the *Interfaces* table, click *Create New*.
  - b. Set *Interface* to *port2*.
  - c. Leave the remaining settings as their default values.

- d. Click *OK*.
- e. Repeat these steps for *port3*.
5. Under *Advanced Options*, enable *Inject Default Route*.  
This setting allows the ISP router to share its default 0.0.0.0 routes with other routers in the RIP network.
6. Click *Apply*.

### To configure the ISP Router in the CLI:

```
config router rip
    set default-information-originate enable
    config network
        edit 1
            set prefix 172.20.121.0 255.255.255.0
        next
        edit 2
            set prefix 172.20.120.0 255.255.255.0
        next
    end
    config interface
        edit "port2"
            set receive-version 2
            set send-version 2
        next
        edit "port3"
            set receive-version 2
            set send-version 2
        next
    end
end
```

### Router2 and Router3

Router2 and Router3 RIP configurations have different IP addresses, but are otherwise the same.

### To configure Router2 and Router3 in the GUI:

1. Go to *Network > RIP*.
2. Set the *Version* to 2.
3. Under *Networks*, add the IP addresses for each port:

Router2	10.12.101.0/255.255.255.0
	10.11.201.0/255.255.255.0
	10.14.201.0/255.255.255.0
	172.20.120.0/255.255.255.0

Router3	10.12.101.0/255.255.255.0
	10.11.202.0/255.255.255.0
	10.14.202.0/255.255.255.0
	172.20.121.0/255.255.255.0

4. Add the interfaces:
  - a. In the *Interfaces* table, click *Create New*.
  - b. Set *Interface* to *port1*.
  - c. Leave the remaining settings as their default values.
  - d. Click *OK*.
  - e. Repeat these steps for *port2*, *port3*, and *port4*.
5. Click *Apply*.

### To configure Router2 in the CLI:

```

config router rip
  config network
    edit 1
      set prefix 10.12.101.0 255.255.255.0
    next
    edit 2
      set prefix 10.11.201.0 255.255.255.0
    next
    edit 3
      set prefix 10.14.201.0 255.255.255.0
    next
    edit 4
      set prefix 172.20.120.0 255.255.255.0
    next
  end
config interface
  edit "port1"
    set receive-version 2
    set send-version 2
  next
  edit "port2"
    set receive-version 2
    set send-version 2
  next
  edit "port3"
    set receive-version 2
    set send-version 2
  next
  edit "port4"
    set receive-version 2
    set send-version 2
  next
end
end

```

**To configure Router3 in the CLI:**

```

config router rip
  config network
    edit 1
      set prefix 10.12.101.0 255.255.255.0
    next
    edit 2
      set prefix 10.11.202.0 255.255.255.0
    next
    edit 3
      set prefix 10.14.202.0 255.255.255.0
    next
    edit 4
      set prefix 172.20.121.0 255.255.255.0
    next
  end
config interface
  edit "port1"
    set receive-version 2
    set send-version 2
  next
  edit "port2"
    set receive-version 2
    set send-version 2
  next
  edit "port3"
    set receive-version 2
    set send-version 2
  next
  edit "port4"
    set receive-version 2
    set send-version 2
  next
end
end

```

**Router1 and Router4**

Router1 and Router4 RIP configurations have different IP addresses, but are otherwise the same.

**To configure Router1 and Router4 in the GUI:**

1. Go to *Network > RIP*.
2. Set the *Version* to 2.
3. Under *Networks*, add the IP addresses for each port:

Router1	10.11.101.0/255.255.255.0
	10.11.201.0/255.255.255.0
	10.11.202.0/255.255.255.0

Router4	10.14.101.0/255.255.255.0
	10.14.201.0/255.255.255.0
	10.14.202.0/255.255.255.0

**4. Add the interfaces:**

- a. In the *Interfaces* table, click *Create New*.
- b. Set *Interface* to *port1*.
- c. For port1 only, enable *Passive*.
- d. Leave the remaining settings as their default values.
- e. Click *OK*.
- f. Repeat these steps for *port2* and *port3*, making sure that *Passive* is disabled.

**5. Click *Apply*.**

**To configure Router1 in the CLI:**

```
config router rip
  config network
    edit 1
      set prefix 10.11.101.0 255.255.255.0
    next
    edit 2
      set prefix 10.11.201.0 255.255.255.0
    next
    edit 3
      set prefix 10.11.202.0 255.255.255.0
    next
  end
  set passive-interface "port1"
  config interface
    edit "port1"
      set receive-version 2
      set send-version 2
    next
    edit "port2"
      set receive-version 2
      set send-version 2
    next
    edit "port3"
      set receive-version 2
      set send-version 2
    next
  end
end
```

**To configure Router4 in the CLI:**

```
config router rip
  config network
    edit 1
      set prefix 10.14.101.0 255.255.255.0
    next
```

```

        edit 2
            set prefix 10.14.201.0 255.255.255.0
        next
        edit 3
            set prefix 10.14.202.0 255.255.255.0
        next
    end
    set passive-interface "port1"
    config interface
        edit "port1"
            set receive-version 2
            set send-version 2
        next
        edit "port2"
            set receive-version 2
            set send-version 2
        next
        edit "port3"
            set receive-version 2
            set send-version 2
        next
    end
end
end

```

## Verifying the configuration

The interface's names are shown in the debugs. The same commands should also be run on the other routers.

### To verify the configuration after the ISP router, Router2, and Router3 have been configured:

This verification can be done after the ISP router, Router2, and Router3 have been configured. Only Router2's debugs are shown.

#### 1. Check the RIP interface information:

```

# get router info rip interface
Router2 is up, line protocol is up
  RIP is not enabled on this interface
ssl.Router2 is up, line protocol is up
  RIP is not enabled on this interface
vdr2link1 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      172.20.120.102/24
vd12link1 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.11.201.102/24

```

```

vd42link1 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.14.201.102/24
vd23link0 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.12.101.102/24

```

RIP starts exchanging routes as soon as the networks are added to the Router2 and Router3 configurations because the RIP interfaces are active by default, and start sending and receiving RIP updates when a matching interface on the subnet is found. The interface configuration allows the interface settings to be fine tuned, in this case to specify only RIPv2 support.

## 2. Check the RIP database:

```

# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP

```

	Network	Next Hop	Metric	From	If	Time
R	0.0.0.0/0	172.20.120.5	2	172.20.120.5	vdr2link1	02:55
Rc	10.11.201.0/24		1		vd12link1	
R	10.11.202.0/24	10.12.101.103	2	10.12.101.103	vd23link0	02:33
Rc	10.12.101.0/24		1		vd23link0	
Rc	10.14.201.0/24		1		vd42link1	
R	10.14.202.0/24	10.12.101.103	2	10.12.101.103	vd23link0	02:33
Rc	172.20.120.0/24		1		vdr2link1	
R	172.20.121.0/24	10.12.101.103	2	10.12.101.103	vd23link0	02:33

## 3. Check the routing table:

```

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

```

Routing table for VRF=0

```

R*    0.0.0.0/0 [120/2] via 172.20.120.5, vdr2link1, 13:37:23
C     10.11.201.0/24 is directly connected, vd12link1
R     10.11.202.0/24 [120/2] via 10.12.101.103, vd23link0, 14:10:01
C     10.12.101.0/24 is directly connected, vd23link0
C     10.14.201.0/24 is directly connected, vd42link1
R     10.14.202.0/24 [120/2] via 10.12.101.103, vd23link0, 14:10:01
C     172.20.120.0/24 is directly connected, vdr2link1
R     172.20.121.0/24 [120/2] via 10.12.101.103, vd23link0, 13:20:36

```

Router2 has learned the default gateway from the ISP router, and has learned of other networks from Router3.

## 4. If firewall policies are correctly configured, the outside network can be reached:

```
# execute ping-options source 10.11.201.102
# execute ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8): 56 data bytes
64 bytes from 8.8.8.8: icmp_seq=0 ttl=115 time=4.5 ms
64 bytes from 8.8.8.8: icmp_seq=1 ttl=115 time=4.2 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=115 time=4.2 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=115 time=4.2 ms
64 bytes from 8.8.8.8: icmp_seq=4 ttl=115 time=4.1 ms
--- 8.8.8.8 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 4.1/4.2/4.5 ms

# execute traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 32 hops max, 3 probe packets per hop, 84 byte packets
 1  172.20.120.5  0.101 ms  0.030 ms  0.014 ms
 2  172.16.151.1  0.169 ms  0.144 ms  0.131 ms
 3  * * *
```

### To verify the configuration after Router1 and Router4 have also been configured:

This verification can be done after Router1 and Router4 have been configured. Only Router1's debugs are shown.

#### 1. Check the RIP interface information:

```
# get router info rip interface
Router1 is up, line protocol is up
  RIP is not enabled on this interface
ssl.Router1 is up, line protocol is up
  RIP is not enabled on this interface
vd12link0 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.11.201.101/24
vd13link0 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.11.202.101/24
LoSales is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv2 packets only
    Send RIPv2 packets only
    Passive interface: Enabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:
      10.11.101.101/24
      127.0.0.1/8
```

#### 2. Check the RIP database:



```
# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP
   Network      Next Hop      Metric From      If      Time
R  0.0.0.0/0     10.11.202.103      3 10.11.202.103  vd13link0 02:35
Rc 10.11.101.0/24      1      LoSales
Rc 10.11.201.0/24      1      vd12link0
Rc 10.11.202.0/24      1      vd13link0
R  10.12.101.0/24     10.11.202.103      2 10.11.202.103  vd13link0 02:35
R  10.14.101.0/24     10.11.202.103      3 10.11.202.103  vd13link0 02:35
R  10.14.201.0/24     10.11.201.102      2 10.11.201.102  vd12link0 02:30
R  10.14.202.0/24     10.11.202.103      2 10.11.202.103  vd13link0 02:35
R  172.20.120.0/24     10.11.201.102      2 10.11.201.102  vd12link0 02:30
R  172.20.121.0/24     10.11.202.103      2 10.11.202.103  vd13link0 02:35
```

### 3. Check the routing table:

```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default
Routing table for VRF=0
R*  0.0.0.0/0 [120/3] via 10.11.202.103, vd13link0, 00:09:42
C   10.11.101.0/24 is directly connected, LoSales
C   10.11.201.0/24 is directly connected, vd12link0
C   10.11.202.0/24 is directly connected, vd13link0
R   10.12.101.0/24 [120/2] via 10.11.202.103, vd13link0, 00:09:42
R   10.14.101.0/24 [120/3] via 10.11.202.103, vd13link0, 00:09:42
R   10.14.201.0/24 [120/2] via 10.11.201.102, vd12link0, 00:09:42
R   10.14.202.0/24 [120/2] via 10.11.202.103, vd13link0, 00:09:42
R   172.20.120.0/24 [120/2] via 10.11.201.102, vd12link0, 00:09:42
R   172.20.121.0/24 [120/2] via 10.11.202.103, vd13link0, 00:09:42
```

### 4. If firewall policies are correctly configured, the accounting network and the internet are reachable from the sales network:

```
# execute ping-options source 10.11.101.101
# execute ping 10.14.101.104
PING 10.14.101.104 (10.14.101.104): 56 data bytes
64 bytes from 10.14.101.104: icmp_seq=0 ttl=254 time=0.1 ms
64 bytes from 10.14.101.104: icmp_seq=1 ttl=254 time=0.0 ms
64 bytes from 10.14.101.104: icmp_seq=2 ttl=254 time=0.0 ms
64 bytes from 10.14.101.104: icmp_seq=3 ttl=254 time=0.0 ms
64 bytes from 10.14.101.104: icmp_seq=4 ttl=254 time=0.0 ms
--- 10.14.101.104 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.0/0.0/0.1 ms

# execute traceroute 10.14.101.104
traceroute to 10.14.101.104 (10.14.101.104), 32 hops max, 3 probe packets per hop, 84
byte packets
 1 10.11.202.103 0.079 ms 0.029 ms 0.013 ms
 2 10.14.101.104 0.043 ms 0.020 ms 0.010 ms
```

```
# execute ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8): 56 data bytes
64 bytes from 8.8.8.8: icmp_seq=0 ttl=114 time=4.3 ms
64 bytes from 8.8.8.8: icmp_seq=1 ttl=114 time=4.1 ms
--- 8.8.8.8 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max = 4.1/4.2/4.3 ms

# execute traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 32 hops max, 3 probe packets per hop, 84 byte packets
 1  10.11.202.103  0.094 ms  0.036 ms  0.030 ms
 2  172.20.121.5   0.216 ms  0.045 ms  0.038 ms
```

## Testing the configuration and routing changes

After the network is configured, test it to ensure that when network events occur, such as a downed link, routing updates are triggered and converge as expected.

In the following examples, we disable certain links to simulate network outages, then verify that routing and connectivity is restored after the updates have converged.

### Example 1 - ISP router port3 interface goes down

In this example, a link outage occurs on port3 of the ISP router. Consequently, all routers must use Router2, and not Router3, to reach the internet. Note the RIP database before and after the link failure, and the time taken for the route updates to propagate and return to a functioning state.

Router4's debugs are shown.

Before:

```
# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP
  Network      Next Hop      Metric From      If      Time
R  0.0.0.0/0    10.14.202.103      3 10.14.202.103  vd43link0 02:31
R  10.11.101.0/24 10.14.202.103      3 10.14.202.103  vd43link0 02:31
R  10.11.201.0/24 10.14.201.102      2 10.14.201.102  vd42link0 02:47
R  10.11.202.0/24 10.14.202.103      2 10.14.202.103  vd43link0 02:31
R  10.12.101.0/24 10.14.202.103      2 10.14.202.103  vd43link0 02:31
Rc 10.14.101.0/24      1      LoAccounting
Rc 10.14.201.0/24      1      vd42link0
Rc 10.14.202.0/24      1      vd43link0
R  172.20.120.0/24 10.14.201.102      2 10.14.201.102  vd42link0 02:47
R  172.20.121.0/24 10.14.202.103      2 10.14.202.103  vd43link0 02:31

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default
Routing table for VRF=0
R*   0.0.0.0/0 [120/3] via 10.14.202.103, vd43link0, 02:45:15
R    10.11.101.0/24 [120/3] via 10.14.202.103, vd43link0, 02:44:49
R    10.11.201.0/24 [120/2] via 10.14.201.102, vd42link0, 02:45:15
```

```

R      10.11.202.0/24 [120/2] via 10.14.202.103, vd43link0, 02:45:15
R      10.12.101.0/24 [120/2] via 10.14.202.103, vd43link0, 02:45:15
C      10.14.101.0/24 is directly connected, LoAccounting
C      10.14.201.0/24 is directly connected, vd42link0
C      10.14.202.0/24 is directly connected, vd43link0
R      172.20.120.0/24 [120/2] via 10.14.201.102, vd42link0, 02:45:15
R      172.20.121.0/24 [120/2] via 10.14.202.103, vd43link0, 02:45:15

# execute traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 32 hops max, 3 probe packets per hop, 84 byte packets
 1  10.14.202.103  0.187 ms  0.054 ms  0.030 ms
 2  172.20.121.5  0.117 ms  0.062 ms  0.040 ms
 3  * * *

```

After:

- You might see different routes, and the routes might change, while convergence is occurring. During convergence, the metric for your default route increases to 16.

```

# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP
      Network      Next Hop      Metric From      If      Time
R  0.0.0.0/0       10.14.202.103      16 10.14.202.103  vd43link0 01:50

```

- After convergence is complete, the RIP database will look similar to the following:

```

# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP
      Network      Next Hop      Metric From      If      Time
R  0.0.0.0/0       10.14.201.102      3 10.14.201.102  vd42link0 02:53
R  10.11.101.0/24  10.14.202.103      3 10.14.202.103  vd43link0 03:00
R  10.11.201.0/24  10.14.201.102      2 10.14.201.102  vd42link0 02:53
R  10.11.202.0/24  10.14.202.103      2 10.14.202.103  vd43link0 03:00
R  10.12.101.0/24  10.14.202.103      2 10.14.202.103  vd43link0 03:00
Rc 10.14.101.0/24          1      LoAccounting
Rc 10.14.201.0/24          1      vd42link0
Rc 10.14.202.0/24          1      vd43link0
R  172.20.120.0/24  10.14.201.102      2 10.14.201.102  vd42link0 02:53

```

- The default router should point to Router2, with the same number of hops:

```

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
R*  0.0.0.0/0 [120/3] via 10.14.201.102, vd42link0, 00:05:24
R    10.11.101.0/24 [120/3] via 10.14.202.103, vd43link0, 02:58:13
R    10.11.201.0/24 [120/2] via 10.14.201.102, vd42link0, 02:58:39
R    10.11.202.0/24 [120/2] via 10.14.202.103, vd43link0, 02:58:39
R    10.12.101.0/24 [120/2] via 10.14.202.103, vd43link0, 02:58:39
C    10.14.101.0/24 is directly connected, LoAccounting
C    10.14.201.0/24 is directly connected, vd42link0

```

```

C      10.14.202.0/24 is directly connected, vd43link0
R      172.20.120.0/24 [120/2] via 10.14.201.102, vd42link0, 02:58:39

# execute traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 32 hops max, 3 probe packets per hop, 84 byte packets
 1  10.14.201.102  0.167 ms  0.063 ms  0.029 ms
 2  172.20.120.5   0.117 ms  0.073 ms  0.041 ms
 3  172.16.151.1   0.303 ms  0.273 ms  0.253 ms

```

## Example 2- Additional link failures on Router2

In addition to the link failure on the ISP router in example, port1 and port3 on Router2 have also failed. This means that Router4 must go through Router3, Router1, Router2, then the ISP router to reach the internet. Note that, for a period of time, some routes' metrics increase to 16. If no better routes are found for these networks, then they eventually disappear.

After the convergence completes, the RIP database and routing table on Router4 should resemble the following:

```

# get router info rip database
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP
   Network      Next Hop      Metric From      If      Time
R  0.0.0.0/0     10.14.202.103      5 10.14.202.103   vd43link0 02:54
R  10.11.101.0/24 10.14.202.103      3 10.14.202.103   vd43link0 02:54
R  10.11.201.0/24 10.14.202.103      3 10.14.202.103   vd43link0 02:54
R  10.11.202.0/24 10.14.202.103      2 10.14.202.103   vd43link0 02:54
Rc 10.14.101.0/24      1                  LoAccounting
Rc 10.14.202.0/24      1                  vd43link0
R  172.20.120.0/24 10.14.202.103      4 10.14.202.103   vd43link0 02:54

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default
Routing table for VRF=0
R*   0.0.0.0/0 [120/5] via 10.14.202.103, vd43link0, 00:03:54
R    10.11.101.0/24 [120/3] via 10.14.202.103, vd43link0, 03:10:12
R    10.11.201.0/24 [120/3] via 10.14.202.103, vd43link0, 00:03:54
R    10.11.202.0/24 [120/2] via 10.14.202.103, vd43link0, 03:10:38
C    10.14.101.0/24 is directly connected, LoAccounting
C    10.14.202.0/24 is directly connected, vd43link0
R    172.20.120.0/24 [120/4] via 10.14.202.103, vd43link0, 00:03:54

```

Reaching the internet on the default gateway now requires five hops from Router4:

```

# execute traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 32 hops max, 3 probe packets per hop, 84 byte packets
 1  10.14.202.103  0.087 ms  0.026 ms  0.012 ms
 2  10.11.202.101  0.045 ms  0.024 ms  0.025 ms
 3  10.11.201.102  0.048 ms  0.024 ms  0.015 ms
 4  172.20.120.5   0.050 ms  0.028 ms  0.019 ms
 5  * * *


```

## Basic RIPng example

In this example, a small network is configured with RIP next generation (RIPng). Two FortiGates are connected to the internal network and the ISP, providing some redundancy to help ensure that the internal network can always reach the internet.

The FortiGates are running in NAT mode with VDOMs disabled, and firewall policies have already been configured to allow traffic to flow across the interfaces.

All of the internal computers and other network devices support IPv6 addressing and are running RIPng (where applicable), so no static routing is required. Internal network devices only need to know the FortiGate's internal interface network addresses.

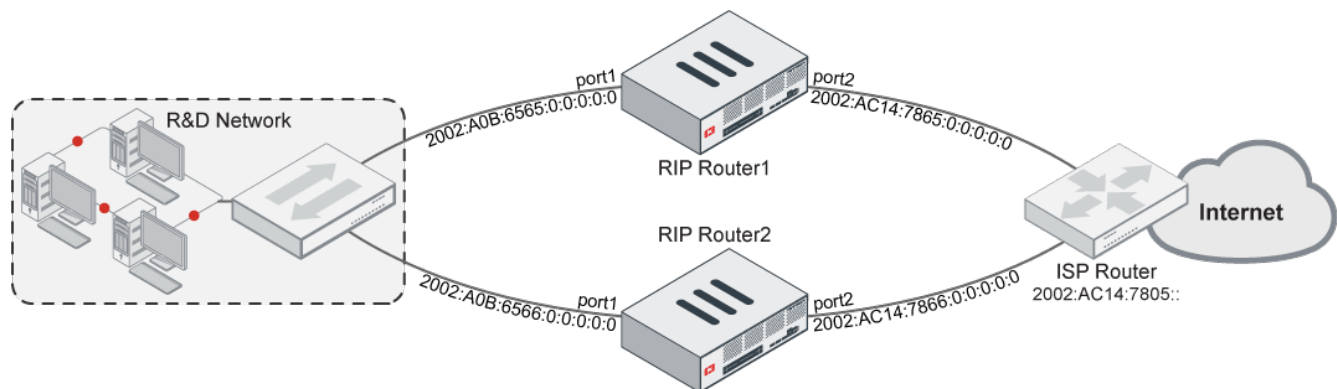

Router	Interface (alias)	IPv6 address
Router1	port1 (internal)	2002:A0B:6565:0:0:0:0:0
	port2 (ISP)	2002:AC14:7865:0:0:0:0:0
Router2	port1 (internal)	2002:A0B:6566:0:0:0:0:0
	port2 (ISP)	2002:AC14:7866:0:0:0:0:0

On each FortiGate, the interfaces are configured first, and then RIPng. No redistribution or authentication is configured.

In the RIPng configuration, only the interface names are required. The ISP router and the other FortiGate are configured as neighbors. Declaring the neighbors reduces the discovery traffic when the routers start. There is no specific command to include a subnet in the RIP broadcast, and RIPng can only be configured using the CLI.

### To configure Router1:

#### 1. Configure the interfaces:

```

config system interface
    edit port1
        set allowaccess ping https ssh
        set type physical
        set description "Internal RnD network"
        set alias "internal"
        config ipv6
            set ip6-address 2002:a0b:6565::/0
        end
    end
end
  
```

```
next
edit port2
    set allowaccess ping https ssh
    set type physical
    set description "ISP and Internet"
    set alias "ISP"
    config ipv6
        set ip6-address 2002:ac14:7865::/0
    end
next
end
```

## 2. Configure RIPng:

```
config router ripng
    config neighbor
        edit 1
            set ip6 2002:a0b:6566::
            set interface port1
        next
        edit 2
            set ip6 2002:ac14:7805::
            set interface port2
        next
    end
config interface
    edit port1
    next
    edit port2
    next
end
end
```

## To configure Router2:

### 1. Configure the interfaces:

```
config system interface
    edit port1
        set allowaccess ping https ssh
        set type physical
        set description "Internal RnD network"
        set alias "internal"
        config ipv6
            set ip6-address 2002:a0b:6566::/0
        end
    next
    edit port2
        set allowaccess ping https ssh
        set type physical
        set description "ISP and Internet"
        set alias "ISP"
        config ipv6
            set ip6-address 2002:ac14:7866::/0
        end
    next
end
```

## 2. Configure RIPng:

```
config router ripng
  config neighbor
    edit 1
      set ip6 2002:a0b:6565::
      set interface port1
    next
  edit 2
    set ip6 2002:ac14:7805::
    set interface port2
  next
end
config interface
  edit port1
  next
  edit port2
  next
end
end
```

### Testing the configuration

The following commands can be used to check the RIPng information on the FortiGates, and can help track down issues:

#### To view the local scope IPv6 addresses used as next-hops by RIPng on the FortiGate:

```
# diagnose ipv6 address list
```

#### To view IPv6 addresses that are installed in the routing table:

```
# diagnose ipv6 route list
```

#### To view the IPv6 routing table:

```
# get router info6 routing-table
```

This information is similar to the `diagnose ipv6 route list` command, but it is presented in an easier to read format.

#### To view the brief output on the RIP information for the interface listed:

```
# get router info6 rip interface external
```

This includes information such as, if the interface is up or down, what routing protocol is being used, and whether passive interface or split horizon is enabled.

## OSPF

Open Shortest Path First (OSPF) is a link state routing protocol that is commonly used in large enterprise networks with L3 switches, routers, and firewalls from multiple vendors. It can quickly detect link failures, and converges network traffic

without networking loops. It also has features to control which routes are propagated, allowing for smaller routing tables, and provides better load balancing on external links when compared to other routing protocols.

To configure OSPF in the GUI, go to *Network > OSPF*:

Option	Description
Router ID	A unique ID to identify your router in the network, typically in the format x.x.x.x.
Areas	The areas that the router is part of. For each area, define the <i>Area ID</i> , <i>Type</i> , and <i>Authentication</i> method.
Networks	The networks that OSPF is enabled in, and the area that they belong to.
Interfaces	OSPF interfaces for transmitting and receiving packets. Configure interface properties, such as <i>Network Type</i> , <i>Cost</i> , <i>Hello interval</i> , and others.
Advanced Options	Settings for <i>Inject Default Route</i> , <i>Passive Interfaces</i> , and <i>Redistribute</i> . Redistribution can be enabled by protocol and the metric for each protocol can be configured.

This section includes the following topics:


- [Basic OSPF example on page 394](#)
- [OSPFv3 neighbor authentication on page 405](#)
- [OSPF graceful restart upon a topology change on page 407](#)

## Basic OSPF example

In this example, three FortiGate devices are configured in an OSPF network.

- Router1 is the Designated Router (DR). It has the highest priority and the lowest IP address, to ensure that it becomes the DR.
- Router2 is the Backup Designated Router (BDR). It has a high priority to ensure that it becomes the BDR.
- Router3 is the Autonomous System Border Router (ASBR). It routes all traffic to the ISP BGP router for internet access. It redistributes routes from BGP and advertises a default route to its neighbors. It can allow different types of routes, learned outside of OSPF, to be used in OSPF. Different metrics can be assigned to these routes to make them more or less preferred than regular OSPF routes. Route maps could be used to further control what prefixes are advertised or received from the ISP.



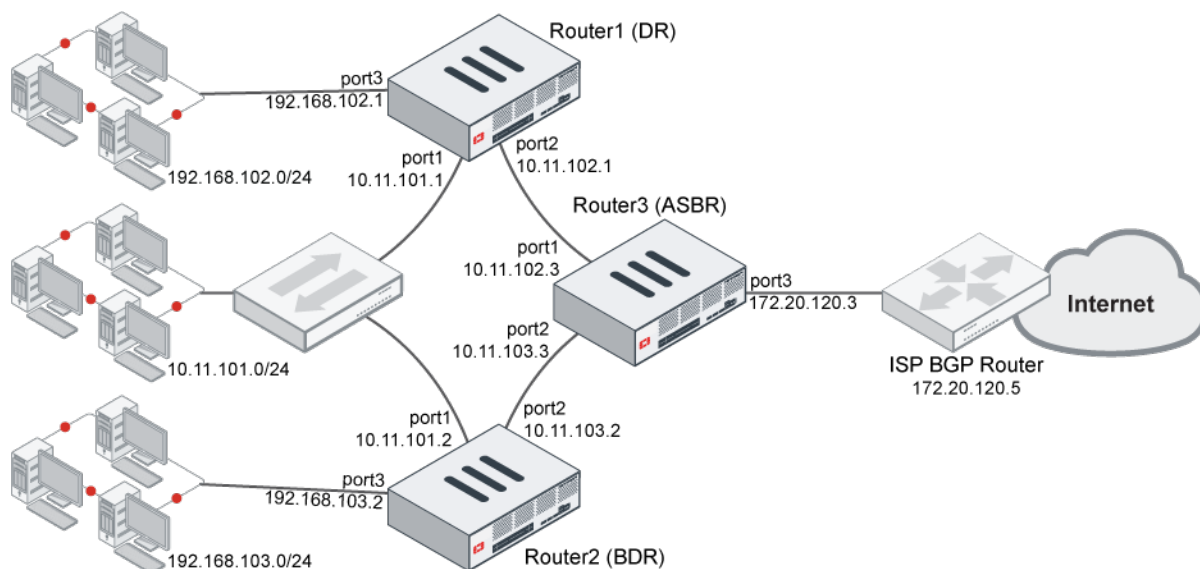

FortiGate	Interface	IP address
Router1 (DR)	port1	10.11.101.1
	port2	10.11.102.1
	port3	192.168.102.1
Router2 (BDR)	port1	10.11.101.2
	port2	10.11.103.2
	port3	192.168.103.2
Router3 (ASBR)	port1	10.11.102.3
	port2	10.11.103.3
	port3	172.20.120.3

- Firewall policies are already configured to allow unfiltered traffic in both directions between all of the connected interfaces.
- The interfaces are already configured, and NAT is only used for connections to public networks. The costs for all of the interfaces is left at 0.
- The OSPF network belongs to Area 0, and is not connected to any other OSPF networks. All of the routers are part of the backbone 0.0.0.0 area, so no inter-area communications are needed.
- Router3 redistributes BGP routes into the OSPF AS and peers with the ISP BGP Router over eBGP. For information about configuring BGP, see [BGP on page 410](#).
- The advertised networks - 10.11.101.0, 10.11.102.0, and 10.11.103.0 - are summarized by 10.11.0.0/16. Additional networks are advertised individually by the /24 subnet.

## Router1

### To configure Router1 in the GUI:

1. Go to *Network > OSPF*.
2. Set *Router ID* to *10.11.101.1*.
3. In the *Areas* table, click *Create New* and set the following:

Area ID	0.0.0.0
Type	Regular
Authentication	None

4. Click *OK*.
5. In the *Networks* table, click *Create New* and set the following:

Area	0.0.0.0
IP/Netmask	10.11.0.0 255.255.0.0

6. Click *OK*.
7. In the *Networks* table, click *Create New* again and set the following:

Area	0.0.0.0
IP/Netmask	192.168.102.0 255.255.255.0

8. Click *OK*.
9. In the *Interfaces* table, click *Create New* and set the following:

Name	Router1-Internal-DR
Interface	port1
Cost	0
Priority	255
Authentication	None
Timers	<ul style="list-style-type: none"> <li>• Hello Interval: 10</li> <li>• Dead Interval: 40</li> </ul>

10. Click *OK*.
11. In the *Interfaces* table, click *Create New* again and set the following:

Name	Router1-External
Interface	port2
Cost	0
Authentication	None
Timers	<ul style="list-style-type: none"> <li>• Hello Interval: 10</li> <li>• Dead Interval: 40</li> </ul>

12. Click *OK*.
13. Click *Apply*.

### To configure Router1 in the CLI:

```
config router ospf
  set router-id 10.11.101.1
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "Router1-Internal-DR"
      set interface "port1"
      set priority 255
      set dead-interval 40
      set hello-interval 10
    next
    edit "Router1-External"
      set interface "port2"
      set dead-interval 40
      set hello-interval 10
    next
  end
  config network
    edit 1
      set prefix 10.11.0.0 255.255.0.0
    next
    edit 2
      set prefix 192.168.102.0 255.255.255.0
    next
  end
end
```

## Router2

### To configure Router2 in the GUI:

1. Go to *Network > OSPF*.
2. Set *Router ID* to *10.11.101.2*.
3. In the *Areas* table, click *Create New* and set the following:

Area ID	0.0.0.0
Type	Regular
Authentication	None

4. Click *OK*.
5. In the *Networks* table, click *Create New* and set the following:

Area	0.0.0.0
IP/Netmask	10.11.0.0 255.255.0.0

6. Click *OK*.
7. In the *Networks* table, click *Create New* again and set the following:

Area	0.0.0.0
IP/Netmask	192.168.103.0 255.255.255.0

8. Click *OK*.
9. In the *Interfaces* table, click *Create New* and set the following:

Name	Router2-Internal
Interface	port1
Cost	0
Priority	250
Authentication	None
Timers	<ul style="list-style-type: none"><li>Hello Interval: 10</li><li>Dead Interval: 40</li></ul>

10. Click *OK*.
11. In the *Interfaces* table, click *Create New* again and set the following:

Name	Router2-External
Interface	port2
Cost	0
Authentication	None
Timers	<ul style="list-style-type: none"><li>Hello Interval: 10</li><li>Dead Interval: 40</li></ul>

12. Click *OK*.
13. Click *Apply*.

### To configure Router2 in the CLI:

```
config router ospf
  set router-id 10.11.101.1
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "Router2-Internal"
    set interface "port1"
    set priority 250
    set dead-interval 40
    set hello-interval 10
  next
  edit "Router2-External"
    set interface "port2"
```

```

        set dead-interval 40
        set hello-interval 10
    next
end
config network
    edit 1
        set prefix 10.11.0.0 255.255.0.0
    next
    edit 2
        set prefix 192.168.103.0 255.255.255.0
    next
end
end

```

## Router3

### To configure Router3 in the GUI:

1. Go to *Network > OSPF*.
2. Set *Router ID* to *10.11.103.3*.
3. Under *Default Settings*, set *Inject default route to Regular Areas*.  
A default route must be present on Router3 to advertise it to other routers.
4. Enable *Redistribute BGP* and use the default settings.
5. In the *Areas* table, click *Create New* and set the following:

Area ID	0.0.0.0
Type	Regular
Authentication	None

6. Click *OK*.
7. In the *Networks* table, click *Create New* and set the following:

Area	0.0.0.0
IP/Netmask	10.11.0.0 255.255.0.0

8. Click *OK*.
9. In the *Interfaces* table, click *Create New* and set the following:

Name	Router3-Internal
Interface	port1
Cost	0
Authentication	None
Timers	<ul style="list-style-type: none"> <li>• Hello Interval: 10</li> <li>• Dead Interval: 40</li> </ul>

10. Click *OK*.
11. In the *Interfaces* table, click *Create New* again and set the following:

Name	Router3-Internal2
Interface	port2
Cost	0
Authentication	None
Timers	<ul style="list-style-type: none"><li>• Hello Interval: 10</li><li>• Dead Interval: 40</li></ul>

12. Click *OK*.

13. Click *Apply*.

### To configure Router3 in the CLI:

```
config router ospf
  set default-information-originate enable
  set router-id 10.11.103.3
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "Router3-Internal"
      set interface "port1"
      set dead-interval 40
      set hello-interval 10
    next
    edit "Router3-Internal2"
      set interface "port2"
      set dead-interval 40
      set hello-interval 10
    next
  end
  config network
    edit 1
      set prefix 10.11.0.0 255.255.0.0
    next
  end
  config redistribute "bgp"
    set status enable
  end
end
```

### To configure BGP on Router3 in the CLI:

```
config router bgp
  set as 64511
  set router-id 1.1.1.1
  config neighbor
    edit "172.20.120.5"
      set remote-as 64512
    next
  end
  config network
```

```

        edit 1
            set prefix 172.20.120.0 255.255.255.0
        next
    end
end

```

For more information on configuring BGP, see [BGP on page 410](#).

## Testing the configuration

Both the network connectivity and OSPF routing are tested. When a link goes down, routes should converge as expected.

## Working state

- Router3:

```

Router3 # get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State           Dead Time   Address        Interface
10.11.101.1      1    Full/Backup     00:00:34   10.11.102.1    port1
10.11.101.2      1    Full/Backup     00:00:38   10.11.103.2    port2

Router3 # get router info ospf status
Routing Process "ospf 0" with ID 10.11.103.3
Process uptime is 18 hours 52 minutes
Process bound to VRF default
Conforms to RFC2328, and RFC1583Compatibility flag is disabled
Supports only single TOS(TOS0) routes
Supports opaque LSA
Do not support Restarting
This router is an ASBR (injecting external routing information)
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Refresh timer 10 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 3. Checksum 0x021B78
Number of opaque AS LSA 0. Checksum 0x000000
Number of non-default external LSA 2
External LSA database is unlimited.
Number of LSA originated 16
Number of LSA received 100
Number of areas attached to this router: 1
    Area 0.0.0.0 (BACKBONE)
        Number of interfaces in this area is 2(2)
        Number of fully adjacent neighbors in this area is 2
        Area has no authentication
        SPF algorithm last executed 00:37:36.690 ago
        SPF algorithm executed 13 times
        Number of LSA 6. Checksum 0x03eafa

Router3 # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area

```

```

* - candidate default
Routing table for VRF=0
B*    0.0.0.0/0 [20/0] via 172.20.120.5, port3, 01:10:12
O     10.11.101.0/24 [110/2] via 10.11.103.2, port2, 00:39:34
      [110/2] via 10.11.102.1, port1, 00:39:34
C     10.11.102.0/24 is directly connected, port1
C     10.11.103.0/24 is directly connected, port2
C     172.20.120.0/24 is directly connected, port3
O     192.168.102.0/24 [110/2] via 10.11.102.1, port1, 02:24:59
O     192.168.103.0/24 [110/2] via 10.11.103.2, port2, 02:14:32
B     192.168.160.0/24 [20/0] via 172.20.120.5, port3, 19:08:39
B     192.168.170.0/24 [20/0] via 172.20.120.5, port3, 01:10:12

```

- Router2:

```

Router2 # get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID    Pri   State           Dead Time   Address        Interface
10.11.101.1    255   Full/DR         00:00:35   10.11.101.1    port1
10.11.103.3     1     Full/DR         00:00:38   10.11.103.3    port3

Router2 # get router info ospf status
Routing Process "ospf 0" with ID 10.11.101.2
Process uptime is 2 hours 53 minutes
Process bound to VRF default
Conforms to RFC2328, and RFC1583Compatibility flag is disabled
Supports only single TOS(TOS0) routes
Supports opaque LSA
Do not support Restarting
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Refresh timer 10 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 3. Checksum 0x021979
Number of opaque AS LSA 0. Checksum 0x000000
Number of non-default external LSA 2
External LSA database is unlimited.
Number of LSA originated 5
Number of LSA received 128
Number of areas attached to this router: 1
  Area 0.0.0.0 (BACKBONE)
    Number of interfaces in this area is 3(3)
    Number of fully adjacent neighbors in this area is 2
    Area has no authentication
    SPF algorithm last executed 00:47:49.990 ago
    SPF algorithm executed 15 times
    Number of LSA 6. Checksum 0x03e8fb

Router2 # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default
Routing table for VRF=0
O*E2   0.0.0.0/0 [110/10] via 10.11.103.3, port2, 01:03:58

```



```

C      10.11.101.0/24 is directly connected, port1
O      10.11.102.0/24 [110/2] via 10.11.103.3, port2, 00:49:01
        [110/2] via 10.11.101.1, port1, 00:49:01
C      10.11.103.0/24 is directly connected, port2
O      192.168.102.0/24 [110/2] via 10.11.101.1, port1, 00:49:01
C      192.168.103.0/24 is directly connected, port3
O E2   192.168.160.0/24 [110/10] via 10.11.103.3, port2, 01:39:31
O E2   192.168.170.0/24 [110/10] via 10.11.103.3, port2, 01:19:39

```

The default route advertised by Router3 using default-information-originate is considered an OSPF E2 route. Other routes redistributed from BGP are also E2 routes.

- Router1:

```

Router1 # get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address        Interface
10.11.101.2      250   Full/Backup       00:00:36    10.11.101.2    port1
10.11.103.3      1     Full/DR           00:00:37    10.11.102.3    port2

Router1 # get router info ospf status
Routing Process "ospf 0" with ID 10.11.101.1
Process uptime is 3 hours 7 minutes
Process bound to VRF default
Conforms to RFC2328, and RFC1583Compatibility flag is disabled
Supports only single TOS(TOS0) routes
Supports opaque LSA
Do not support Restarting
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Refresh timer 10 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 3. Checksum 0x02157B
Number of opaque AS LSA 0. Checksum 0x000000
Number of non-default external LSA 2
External LSA database is unlimited.
Number of LSA originated 2
Number of LSA received 63
Number of areas attached to this router: 1
  Area 0.0.0.0 (BACKBONE)
    Number of interfaces in this area is 3(3)
    Number of fully adjacent neighbors in this area is 2
    Area has no authentication
    SPF algorithm last executed 00:54:08.160 ago
    SPF algorithm executed 11 times
    Number of LSA 6. Checksum 0x03e6fc

Router1 # get router info routing-table all
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default
O*E2   0.0.0.0/0 [110/10] via 10.11.102.3, port2, 01:09:48
C      10.11.101.0/24 is directly connected, port1
C      10.11.102.0/24 is directly connected, port2

```

```

O      10.11.103.0/24 [110/2] via 10.11.102.3, port2, 00:54:49
      [110/2] via 10.11.101.2, port1, 00:54:49
C      192.168.102.0/24 is directly connected, port3
O      192.168.103.0/24 [110/2] via 10.11.101.2, port1, 00:54:49
O E2   192.168.160.0/24 [110/10] via 10.11.102.3, port2, 01:45:21
O E2   192.168.170.0/24 [110/10] via 10.11.102.3, port2, 01:25:29

```

### Link down state

If port1 is disconnected on Router3:

- Router3:

```

Router3 # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default

Routing table for VRF=0
B*    0.0.0.0/0 [20/0] via 172.20.120.5, VLAN20, 01:29:25
O     10.11.101.0/24 [110/2] via 10.11.103.2, port2, 00:00:09
C     10.11.103.0/24 is directly connected, port2
C     172.20.120.0/24 is directly connected, port3
O     192.168.102.0/24 [110/3] via 10.11.103.2, port2, 00:00:09
O     192.168.103.0/24 [110/2] via 10.11.103.2, port2, 02:33:45
B     192.168.160.0/24 [20/0] via 172.20.120.5, port3, 19:27:52
B     192.168.170.0/24 [20/0] via 172.20.120.5, port3, 01:29:25

```

- Router2:

```

Router2 # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default

Routing table for VRF=0
O*E2  0.0.0.0/0 [110/10] via 10.11.103.3, port2, 01:16:36
C     10.11.101.0/24 is directly connected, port1
O     10.11.102.0/24 [110/2] via 10.11.101.1, port1, 00:02:27
C     10.11.103.0/24 is directly connected, port2
O     192.168.102.0/24 [110/2] via 10.11.101.1, port1, 01:01:39
C     192.168.103.0/24 is directly connected, port3
O E2   192.168.160.0/24 [110/10] via 10.11.103.3, port2, 01:52:09
O E2   192.168.170.0/24 [110/10] via 10.11.103.3, port2, 01:32:17

```

- Router1:

```

Router1 # get router info routing-table all
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area

```

```

* - candidate default
O*E2  0.0.0.0/0 [110/10] via 10.11.101.2, port1, 00:05:14
C      10.11.101.0/24 is directly connected, port1
C      10.11.102.0/24 is directly connected, port2
O      10.11.103.0/24 [110/2] via 10.11.101.2, port1, 00:05:15
C      192.168.102.0/24 is directly connected, port3
O      192.168.103.0/24 [110/2] via 10.11.101.2, port1, 01:03:50
O E2   192.168.160.0/24 [110/10] via 10.11.101.2, port1, 00:05:14
O E2   192.168.170.0/24 [110/10] via 10.11.101.2, port1, 00:05:14

```

## OSPFv3 neighbor authentication

OSPFv3 neighbor authentication is available for enhanced IPv6 security.

### To configure an OSPF6 interface:

```

config router ospf6
  config ospf6-interface
    edit <name>
      set authentication {none | ah | esp | area}
      set key-rollover-interval <integer>
      set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
      set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
      config ipsec-keys
        edit <spi>
          set auth-key <string>
          set enc-key <string>
        next
      end
    next
  end
end

```

### To configure an OSPF6 virtual link:

```

config router ospf6
  config area
    edit <id>
      config virtual-link
        edit <name>
          set authentication {none | ah | esp | area}
          set key-rollover-interval <integer>
          set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
          set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
          config ipsec-keys
            edit <spi>
              set auth-key <string>
              set enc-key <string>
            next
          end
        next
      end
    next
  end
end

```

**To configure an OSPF6 area:**

```

config router ospf6
  config area
    edit <id>
      set authentication {none | ah | esp}
      set key-rollover-interval <integer>
      set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
      set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
      config ipsec-keys
        edit <spi>
          set auth-key <string>
          set enc-key <string>
        next
      end
    next
  end
end
end

```

**CLI command descriptions**

Command	Description
<id>	Area entry IP address.
authentication {none   ah   esp   area}	Authentication mode: <ul style="list-style-type: none"> <li>• none: Disable authentication</li> <li>• ah: Authentication Header</li> <li>• esp: Encapsulating Security Payload</li> <li>• area: Use the routing area authentication configuration</li> </ul>
key-rollover-interval <integer>	Enter an integer value (300 - 216000, default = 300).
ipsec-auth-alg {md5   sha1   sha256   sha384   sha512}	Authentication algorithm.
ipsec-enc-alg {null   des   3des   aes128   aes192   aes256}	Encryption algorithm.
<spi>	Security Parameters Index.
auth-key <string>	Authentication key should be hexadecimal numbers. Key length for each algorithm: <ul style="list-style-type: none"> <li>• MD5: 16 bytes</li> <li>• SHA1: 20 bytes</li> <li>• SHA256: 32 bytes</li> <li>• SHA384: 48 bytes</li> <li>• SHA512: 64 bytes</li> </ul> If the key is shorter than the required length, it will be padded with zeroes.
enc-key <string>	Encryption key should be hexadecimal numbers. Key length for each algorithm: <ul style="list-style-type: none"> <li>• DES: 8 bytes</li> <li>• 3DES: 24 bytes</li> </ul>

Command	Description
	<ul style="list-style-type: none"> <li>• AES128: 16 bytes</li> <li>• AES192: 24 bytes</li> <li>• AES256: 32 bytes</li> </ul> <p>If the key is shorter than the required length, it will be padded with zeroes.</p>

## OSPF graceful restart upon a topology change

In OSPF graceful restart mode, the `restart-on-topology-change` option can be used to keep restarting the router in graceful restart mode when a topology change is detected during a restart.

```
config router ospf
    set restart-on-topology-change {enable | disable}
end
```



OSPFv3 graceful restart mode upon a topology change can be used in OSPF6:


```
config router ospf6
    set restart-on-topology-change {enable | disable}
end
```

## Example

In this example, a restarting router (one of the FG-300Es in the HA cluster) informs its neighbors using grace LSAs before restarting its OSPF process. When the helper router (the FG-601E) receives the grace LSAs, it enters helper mode to help with the graceful restart until the graceful period expires. It will act as though there are no changes on the restarting router (FG-300E). A generic router simulates a topology change during the restart event.

If `restart-on-topology-change` is enabled on the restarting router, it will not exit the graceful restart mode even when a topology change is detected.

If `restart-on-topology-change` is disabled on the restarting router, it will exit graceful restart mode when a topology change is detected.

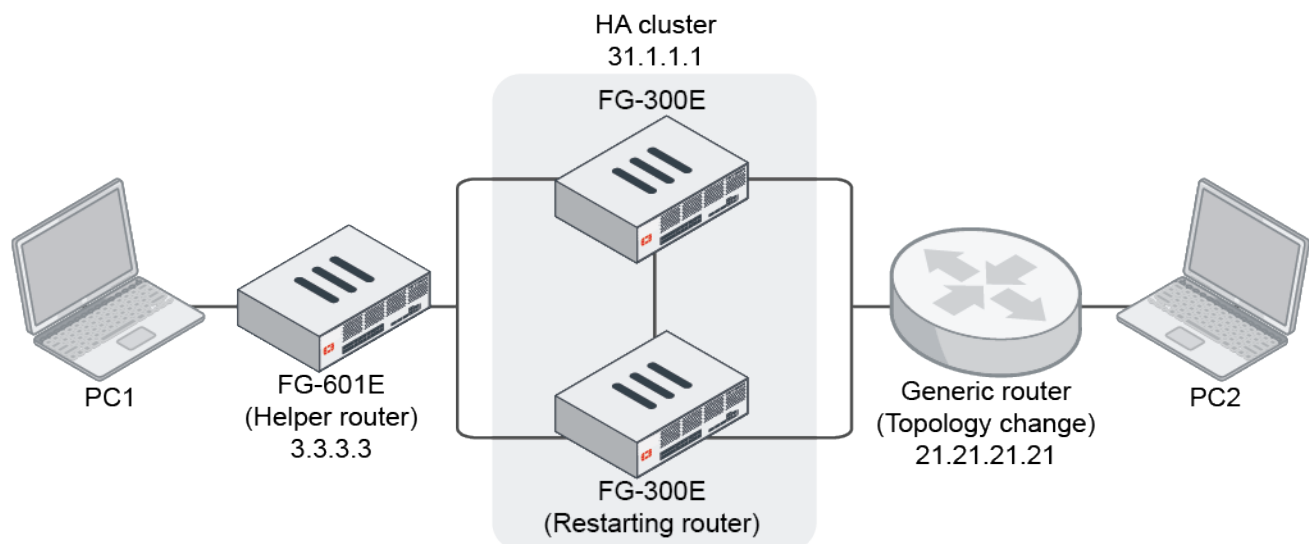

**To configure the restarting router:**

```

config router ospf
    set router-id 31.1.1.1
    set restart-mode graceful-restart
    set restart-period 180
    set restart-on-topology-change enable
config area
    edit 0.0.0.0
    next
end
config network
    edit 1
        set prefix 172.16.200.0 255.255.255.0
    next
    edit 2
        set prefix 31.1.1.1 255.255.255.255
    next
end
end

```

**To configure the restarting helper router:**

```

config router ospf
    set router-id 3.3.3.3
    set restart-mode graceful-restart
config area
    edit 0.0.0.0
    next
end
config network
    edit 1
        set prefix 172.16.200.0 255.255.255.0
    next
    edit 2
        set prefix 3.3.3.3 255.255.255.255
    next
end
end

```

**Testing the configuration****Topology change with continuing graceful restart enabled:**

When `restart-on-topology-change` is enabled and there is a topology change during the HA OSPF graceful restart, the graceful restart will continue. The routes on the helper router (FG-601E) are still there and no traffic will drop.

```

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State           Dead Time   Address        Interface
31.1.1.1         1    Full/DR         00:14:47*   172.16.200.31  port1

# get router info routing-table ospf
Routing table for VRF=0
O        21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:09:55

```

```

O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:55:31
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:12:31

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:47*   172.16.200.31 port1

# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:10:07
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:55:43
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:12:43

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:38*   172.16.200.31 port1

# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:10:17
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:55:53
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:12:53

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:00:38    172.16.200.31 port1

# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:10:37
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:56:13
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:13:13

```

### Topology change with continuing graceful restart disabled:

When `restart-on-topology-change` is disabled and there is a topology change during the HA OSPF graceful restart, the graceful restart will exit. The routes on the helper router (FG-601E) are lost and traffic will drop.

```

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:57*   172.16.200.31 port1

# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:11:16
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:56:52
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:13:52

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:42*   172.16.200.31 port1

# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:11:31

```

```
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:57:07
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:14:07

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:40*   172.16.200.31 port1
```

No routes are lost:

```
# get router info routing-table ospf
Routing table for VRF=0
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:57:09
```

```
# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID      Pri   State             Dead Time   Address      Interface
31.1.1.1         1    Full/DR          00:14:38*   172.16.200.31 port1
```

No routes are lost:

```
# get router info routing-table ospf
Routing table for VRF=0
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 00:57:11
```

No routes are lost:

```
# get router info routing-table ospf
Routing table for VRF=0
O      21.21.21.21/32 [110/300] via 172.16.200.31, port1, 00:04:42
O      31.1.1.1/32 [110/200] via 172.16.200.31, port1, 01:01:59
O      100.21.1.0/24 [110/200] via 172.16.200.31, port1, 00:04:42
```

## BGP

Border Gateway Protocol (BGP) is a standardized routing protocol that is used to route traffic across the internet. It exchanges routing information between Autonomous Systems (AS) on the internet and makes routing decisions based on path, network policies, and rule sets. BGP contains two distinct subsets: internal BGP (iBGP) and external BGP (eBGP). iBGP is intended for use within your own networks. eBGP is used to connect different networks together and is the main routing protocol for the internet backbone.

To configure BGP in the GUI, go to *Network > BGP*:

Option	Description
Local AS	The AS number for the local router.
Router ID	A unique ID to identify your router in the network, typically in the format x.x.x.x.
Neighbors	The neighbors that the FortiGate will be peering with. Configure the remote router's AS number, any other properties used for peering with the neighbor, and IPv4 and IPv6 filtering.
Neighbor Groups	The neighbor groups that share the same outbound policy configurations.
Neighbor Ranges	The source address range of BGP neighbors that will be automatically assigned to a neighbor group.



Option	Description
IPv4 & IPv6 Networks	The networks to be advertised to other BGP routers.
IPv4 & IPv6 Redistribute	Enable redistribution by protocol. Specify either <i>All</i> routes, or <i>Filter</i> by route map.
Dampening	Enable route flap dampening to reduce the propagation of flapping routes.
Graceful Restart	Enable BGP graceful restart, which causes the adjacent routers to keep routes active while the BGP peering is restarted on the FortiGate. This is useful in HA instances when failover occurs.
Advanced Options	Various advanced settings, such as <i>Local Preference</i> , <i>Distance internal</i> , <i>Keepalive</i> , <i>Holdtime</i> , and others
Best Path Selection	Configure path selection attributes on this router.



Currently, FortiGates do not support BGP graceful restart when peering with neighbor routers operating in graceful restart helper-only mode.

This section includes the following topics:


- [Basic BGP example on page 411](#)
- [Route filtering with a distribution list on page 420](#)
- [Next hop recursive resolution using other BGP routes on page 424](#)
- [Next hop recursive resolution using ECMP routes on page 425](#)
- [BGP conditional advertisement on page 426](#)
- [BGP error handling per RFC 7606 on page 432](#)
- [BGP next hop tag-match mode on page 433](#)
- [BGP neighbor password on page 438](#)
- [BGP multi-exit discriminator on page 439](#)
- [Troubleshooting BGP on page 443](#)

## Basic BGP example

In this example, BGP is configured on two FortiGate devices. The FortiGates are geographically separated, and form iBGP peering over a VPN connection. FGT\_A also forms eBGP peering with ISP2.

FGT\_A learns routes from ISP2 and redistributes them to FGT\_B while preventing any iBGP routes from being advertised.

The internal networks behind the FortiGates can communicate with each other, and the internal networks behind FGT\_B can traverse FGT\_A to reach networks that are advertised by ISP2.

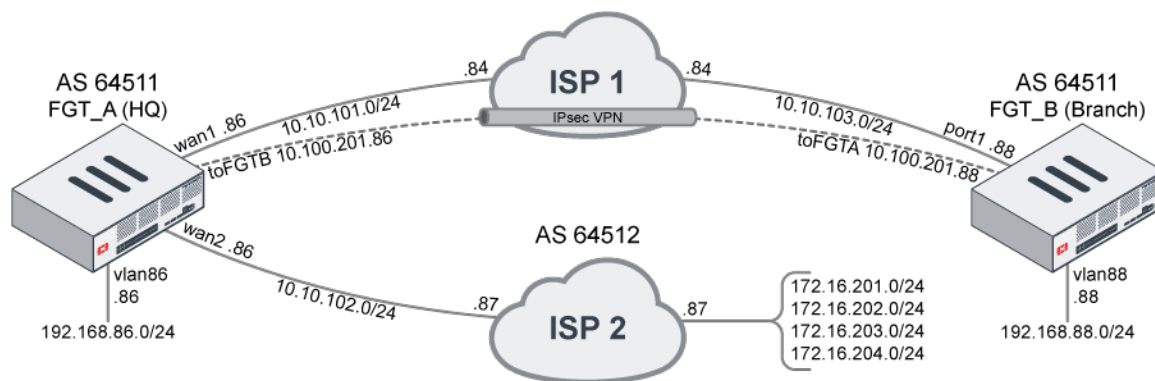

- FGT\_A and FGT\_B have static routes to each other through ISP1. ISP1 does not participate in BGP.
- The IPsec VPN tunnel between FGT\_A and FGT\_B is configured with wildcard 0.0.0.0/0 networks for phase2 local and remote selectors. The VPN interfaces have IP addresses already configured and are used for peering between FGT\_A and FGT\_B.
- FGT\_A is configure to peer with ISP2 on 10.10.108.86.
- The firewall policies between FGT\_A and FGT\_B are not NATed. The firewall policies egressing on wan2 are NATed.

## Configuring iBGP peering

### To configure FGT\_A to establish iBGP peering with FGT\_B in the GUI:

1. Go to *Network > BGP*.
2. Set *Local AS* to 64511
3. Set *Router ID* to 1.1.1.1.
4. In the *Neighbors* table, click *Create New* and set the following:

IP	10.100.201.88
Remote AS	64511

5. Click *OK*.
6. Under *Networks*, set *IP/Netmask* to 192.168.86.0/24.
7. Click *Apply*.
8. In the CLI, set the interface used as the source IP address of the TCP connection (where the BGP session, TCP/179, is connecting from) for the neighbor (*update-source*) to *toFGTB*.

### To configure FGT\_A to establish iBGP peering with FGT\_B in the CLI:

```
config router bgp
  set as 64511
  set router-id 1.1.1.1
  config neighbor
    edit "10.100.201.88"
      set remote-as 64511
      set update-source "toFGTB"
    next
  end
```

```

config network
  edit 1
    set prefix 192.168.86.0 255.255.255.0
  next
end
end

```

### To configure FGT\_B to establish iBGP peering with FGT\_A in the GUI:

1. Go to *Network > BGP*.
2. Set *Local AS* to *64511*
3. Set *Router ID* to *2.2.2.2*.
4. In the *Neighbors* table, click *Create New* and set the following:

IP	10.100.201.86
Remote AS	64511

5. Click *OK*.
6. Under *Networks*, set *IP/Netmask* to *192.168.88.0/24*.
7. Click *Apply*.
8. In the CLI, set the interface used as the source IP address of the TCP connection (where the BGP session, TCP/179, is connecting from) for the neighbor (*update-source*) to *toFGTA*.

### To configure FGT\_B to establish iBGP peering with FGT\_A in the CLI:

```

config router bgp
  set as 64511
  set router-id 2.2.2.2
  config neighbor
    edit "10.100.201.86"
      set remote-as 64511
      set update-source "toFGTA"
    next
  end
  config network
    edit 1
      set prefix 192.168.88.0 255.255.255.0
    next
  end
end
end

```

### To check the FGT\_A and FGT\_B peering:

1. Check the BGP neighbors:
 

```
# get router info bgp neighbors
```
2. Check the networks learned from neighbors:
 

```
# get router info bgp network
```
3. Check that the routes are added to the routing table:
 

```
# get router info routing-table all
```

To see the neighborhood status, network, and routing table command outputs for the completed example, see [Troubleshooting and debugging on page 416](#).

## Configuring eBGP peering

By establishing eBGP peering with ISP2, learned routes will have a distance of 20 and will automatically be propagated to iBGP peers. iBGP peers do not change the next hop when they advertise a route. To make FGT\_B receive a route with FGT\_A as the next hop, and not ISP 2's network, *Next hop self* (`next-hop-self`) is enabled for routes advertised to FGT\_B.

Additionally, to peer with another router that is multiple hops away, enable `ebg-enforce-multihop` in the neighbor configuration.

In this example, the iBGP routes are automatically advertised to the eBGP neighbor, so a route map is created to deny iBGP routes from being advertised to ISP 2. Prefixes from ISP 2 are advertised to FGT\_A and FGT\_B, but no prefixes are advertised from FGT\_A to ISP 2.

### To configure FGT\_A to establish eBGP peering with ISP 2 in the GUI:

1. Configure a route map to prevent advertisement of iBGP routes to ISP 2:
  - a. Go to *Network > Routing Objects* and click *Create New > Route Map*.
  - b. Set *Name* to *exclude1*.
  - c. In the *Rules* table, click *Create New*.
  - d. Set *Action* to *Deny*.
  - e. Under *Other Rule Variables*, enable *Match origin* and set it to *IGP*.
  - f. Click *OK*.
  - g. Click *OK*.
2. Update the BGP configuration:
  - a. Go to *Network > BGP*.
  - b. In the *Neighbors* table, click *Create New* and set the following:

IP	10.10.102.87
Remote AS	64512
Route map out	exclude1

- c. Click *OK*.
- d. In the *Neighbors* table, edit the previously created entry, *10.100.201.88*.
- e. Under *IPv4 Filtering*, select *Next hop self*.
- f. Click *OK*.
- g. Click *Apply*.

### To configure FGT\_A to establish eBGP peering with ISP 2 in the CLI:

1. Configure a route map to prevent advertisement of iBGP routes to ISP 2:

```
config router route-map
edit "exclude1"
config rule
edit 1
```

```

        set action deny
        set match-origin igp
    next
end
next
end

```

## 2. Update the BGP configuration:

```

config router bgp
config neighbor
edit "10.10.102.87"
set remote-as 64512
set route-map-out "excludel"
next
edit "10.100.201.88"
set next-hop-self enable
next
end
end

```

To see the neighborhood status, network, and routing table command outputs for the completed example, see [Troubleshooting and debugging on page 416](#).

## Firewall policies

On FGT\_A configure the following policies:

- Allow the internal subnet to the VPN interface. Do not enable NAT. Enable security profiles as required.
- Allow the VPN interface to the internal subnet. Do not enable NAT. Enable security profiles as required.
- Allow the internal subnet to wan2. Enable NAT and security profiles as required.
- Allow VPN traffic from toFGTA to wan2. Enable NAT and security profiles as required.

On FGT\_B configure the following policies:

- Allow the internal subnet to the VPN interface. Do not enable NAT. Enable security profiles as required.
- Allow the VPN interface to the internal subnet. Do not enable NAT. Enable security profiles as required.

### To verify that pinging from FGT\_B to FGT\_A is successful:

```

FGT_B # execute ping-options source 192.168.88.88
FGT_B # execute ping 192.168.86.86
PING 192.168.86.86 (192.168.86.86): 56 data bytes
64 bytes from 192.168.86.86: icmp_seq=0 ttl=255 time=0.5 ms
...
--- 192.168.86.86 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.3/0.3/0.5 ms

```

### To verify that pinging from FGT\_B to a subnet in ISP 2 is successful:

```

FGT_B # execute ping-options source 192.168.88.88
FGT_B # execute ping 172.16.201.87
PING 172.16.201.87 (172.16.201.87): 56 data bytes
64 bytes from 172.16.201.87: icmp_seq=0 ttl=254 time=0.6 ms
...

```

```

--- 172.16.201.87 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.4/0.4/0.6 ms

FGT_B # execute traceroute-options source 192.168.88.88
FGT_B # execute traceroute 172.16.201.87
traceroute to 172.16.201.87 (172.16.201.87), 32 hops max, 3 probe packets per hop, 84 byte
packets
 1  10.100.201.86  0.315 ms  0.143 ms  0.110 ms
 2  172.16.201.87  0.258 ms  0.144 ms  0.222 ms

```

## Troubleshooting and debugging

When troubleshooting issues, logically step through the debugs. For example, if peering cannot be established between FGT\_A and FGT\_B:

1. Verify the basic connectivity between the FGT\_A wan1 interface and the FGT\_B port1 interface.
2. Verify that the VPN between FGT\_A and FGT\_B is established.
3. Verify the connectivity between the VPN interfaces.
4. Check the neighborhood status on each peer. Use the BGP state to help determine the possible issue, for example:

Idle state	The local FortiGate has not started the BGP process with the neighbor. This could be because the eBGP peer is multiple hops away, but multihop is not enabled.
Connect	The local FortiGate has started the BGP process, but has not initiated a TCP connection, possibly due to improper routing.
Active	The local FortiGate has initiated a TCP connection, but there is no response. This might indicate issues with the delivery or the response from the remote peer.

5. If there are issues establishing the TCP connection, use the command `diagnose sniffer packet any 'tcp and port 179'` to identify the problem at the packet level.

The following outputs show instances where all of the configurations are completed, peering has formed, and routes have been exchanged. The debug output during each configuration step might differ from these outputs. These debug outputs can be used to help identify what might be missing or misconfigured on your device.

### To verify the status of the neighbors:

```

FGT_A # get router info bgp neighbors
VRF 0 neighbor table:
BGP neighbor is 10.10.102.87, remote AS 64512, local AS 64511, external link
  BGP version 4, remote router ID 192.168.2.87
  BGP state = Established, up for 01:54:37
  Last read 00:00:29, hold time is 180, keepalive interval is 60 seconds
  Configured hold time is 180, keepalive interval is 60 seconds
  Neighbor capabilities:
    Route refresh: advertised and received (old and new)
    Address family IPv4 Unicast: advertised and received
    Address family IPv6 Unicast: advertised and received
  Received 513 messages, 1 notifications, 0 in queue
  Sent 517 messages, 2 notifications, 0 in queue
  Route refresh request: received 0, sent 0
  Minimum time between advertisement runs is 30 seconds
For address family: IPv4 Unicast

```

```
BGP table version 5, neighbor version 0
Index 3, Offset 0, Mask 0x8
Community attribute sent to this neighbor (both)
Outbound path policy configured
Route map for outgoing advertisements is *excludelroot
4 accepted prefixes, 4 prefixes in rib
0 announced prefixes
For address family: IPv6 Unicast
BGP table version 1, neighbor version 0
Index 3, Offset 0, Mask 0x8
Community attribute sent to this neighbor (both)
0 accepted prefixes, 0 prefixes in rib
0 announced prefixes
Connections established 4; dropped 3
Local host: 10.10.102.86, Local port: 20364
Foreign host: 10.10.102.87, Foreign port: 179
Nexthop: 10.10.102.86
Nexthop interface: wan2
Nexthop global: ::
Nexthop local: ::
BGP connection: non shared network
Last Reset: 01:54:42, due to BGP Notification sent
Notification Error Message: (CeaseUnspecified Error Subcode)
BGP neighbor is 10.100.201.88, remote AS 64511, local AS 64511, internal link
BGP version 4, remote router ID 2.2.2.2
BGP state = Established, up for 01:54:07
Last read 00:00:11, hold time is 180, keepalive interval is 60 seconds
Configured hold time is 180, keepalive interval is 60 seconds
Neighbor capabilities:
  Route refresh: advertised and received (old and new)
  Address family IPv4 Unicast: advertised and received
  Address family IPv6 Unicast: advertised and received
Received 527 messages, 3 notifications, 0 in queue
Sent 543 messages, 8 notifications, 0 in queue
Route refresh request: received 0, sent 0
Minimum time between advertisement runs is 30 seconds
Update source is toFGTB
For address family: IPv4 Unicast
BGP table version 5, neighbor version 4
Index 1, Offset 0, Mask 0x2
NEXT_HOP is always this router
Community attribute sent to this neighbor (both)
1 accepted prefixes, 1 prefixes in rib
5 announced prefixes
For address family: IPv6 Unicast
BGP table version 1, neighbor version 1
Index 1, Offset 0, Mask 0x2
Community attribute sent to this neighbor (both)
0 accepted prefixes, 0 prefixes in rib
0 announced prefixes
Connections established 7; dropped 6
Local host: 10.100.201.86, Local port: 179
Foreign host: 10.100.201.88, Foreign port: 6245
Nexthop: 10.100.201.86
Nexthop interface: toFGTB
Nexthop global: ::
```

```

Nexthop local: ::
BGP connection: non shared network
Last Reset: 01:54:12, due to BGP Notification received
Notification Error Message: (CeaseUnspecified Error Subcode)

FGT_B # get router info bgp neighbors
VRF 0 neighbor table:
BGP neighbor is 10.100.201.86, remote AS 64511, local AS 64511, internal link
  BGP version 4, remote router ID 1.1.1.1
  BGP state = Established, up for 01:56:04
  Last read 00:00:48, hold time is 180, keepalive interval is 60 seconds
  Configured hold time is 180, keepalive interval is 60 seconds
  Neighbor capabilities:
    Route refresh: advertised and received (old and new)
    Address family IPv4 Unicast: advertised and received
    Address family IPv6 Unicast: advertised and received
  Received 532 messages, 3 notifications, 0 in queue
  Sent 526 messages, 3 notifications, 0 in queue
  Route refresh request: received 0, sent 0
  Minimum time between advertisement runs is 30 seconds
  Update source is toFGTA
For address family: IPv4 Unicast
  BGP table version 4, neighbor version 3
  Index 1, Offset 0, Mask 0x2
  Community attribute sent to this neighbor (both)
  5 accepted prefixes, 5 prefixes in rib
  1 announced prefixes
For address family: IPv6 Unicast
  BGP table version 1, neighbor version 1
  Index 1, Offset 0, Mask 0x2
  Community attribute sent to this neighbor (both)
  0 accepted prefixes, 0 prefixes in rib
  0 announced prefixes
Connections established 7; dropped 6
Local host: 10.100.201.88, Local port: 6245
Foreign host: 10.100.201.86, Foreign port: 179
Nexthop: 10.100.201.88
Nexthop interface: toFGTA
Nexthop global: ::
Nexthop local: ::
BGP connection: non shared network
Last Reset: 01:56:09, due to BGP Notification sent
Notification Error Message: (CeaseUnspecified Error Subcode)

# get router info bgp neighbors <neighbor's IP> can also be used to verify the status of a specific
neighbor.

```

### To verify the networks learned from neighbors or a specific network:

```

FGT_A # get router info bgp network
VRF 0 BGP table version is 5, local router ID is 1.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete

```

Network	Next Hop	Metric	LocPrf	Weight	RouteTag	Path
*> 172.16.201.0/24	10.10.102.87	0		0	0 64512 i	<-/1>
*> 172.16.202.0/24	10.10.102.87	0		0	0 64512 i	<-/1>



```

*> 172.16.203.0/24 10.10.102.87 0 0 0 64512 i <-/1>
*> 172.16.204.0/24 10.10.102.87 0 0 0 64512 i <-/1>
*> 192.168.86.0 0.0.0.0 100 32768 0 i <-/1>
*>i192.168.88.0 10.100.201.88 0 100 0 0 i <-/1>
Total number of prefixes 6
FGT_A # get router info bgp network 172.16.201.0
VRF 0 BGP routing table entry for 172.16.201.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
    10.100.201.88
  Original VRF 0
  64512
    10.10.102.87 from 10.10.102.87 (192.168.2.87)
      Origin IGP metric 0, localpref 100, valid, external, best
      Last update: Tue Dec 15 22:52:08 2020

FGT_A # get router info bgp network 192.168.88.0
VRF 0 BGP routing table entry for 192.168.88.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  Local
    10.100.201.88 from 10.100.201.88 (2.2.2.2)
      Origin IGP metric 0, localpref 100, valid, internal, best
      Last update: Tue Dec 15 22:52:39 2020

FGT_B # get router info bgp network
VRF 0 BGP table version is 4, local router ID is 2.2.2.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network      Next Hop      Metric LocPrf Weight RouteTag Path
*>i172.16.201.0/24 10.100.201.86 0 100 0 0 64512 i <-/1>
*>i172.16.202.0/24 10.100.201.86 0 100 0 0 64512 i <-/1>
*>i172.16.203.0/24 10.100.201.86 0 100 0 0 64512 i <-/1>
*>i172.16.204.0/24 10.100.201.86 0 100 0 0 64512 i <-/1>
*>i192.168.86.0 10.100.201.86 0 100 0 0 i <-/1>
*> 192.168.88.0 0.0.0.0 100 32768 0 i <-/1>
Total number of prefixes 6

```

### To verify the routing tables on FGT\_A and FGT\_B:

```

FGT_A # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
S*    0.0.0.0/0 [10/0] via 172.16.151.1, port1, [5/0]
      [10/0] via 192.168.2.1, port2, [10/0]
C     10.10.101.0/24 is directly connected, wan1
C     10.10.102.0/24 is directly connected, wan2
S     10.10.103.0/24 [10/0] via 10.10.101.84, wan1
C     10.100.201.0/24 is directly connected, toFGTB
C     10.100.201.86/32 is directly connected, toFGTB

```

```

C      172.16.151.0/24 is directly connected, port1
B      172.16.201.0/24 [20/0] via 10.10.102.87, wan2, 02:09:50
B      172.16.202.0/24 [20/0] via 10.10.102.87, wan2, 02:09:50
B      172.16.203.0/24 [20/0] via 10.10.102.87, wan2, 02:09:50
B      172.16.204.0/24 [20/0] via 10.10.102.87, wan2, 02:09:50
C      192.168.2.0/24 is directly connected, port2
C      192.168.86.0/24 is directly connected, vlan86
B      192.168.88.0/24 [200/0] via 10.100.201.88, toFGTB, 02:09:19

FGT_B # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default


Routing table for VRF=0
S*     0.0.0.0/0 [10/0] via 10.10.103.84, port1
C      10.10.103.0/24 is directly connected, port1
C      10.100.201.0/24 is directly connected, toFGTA
C      10.100.201.88/32 is directly connected, toFGTA
B      172.16.201.0/24 [200/0] via 10.100.201.86, toFGTA, 02:11:36
B      172.16.202.0/24 [200/0] via 10.100.201.86, toFGTA, 02:11:36
B      172.16.203.0/24 [200/0] via 10.100.201.86, toFGTA, 02:11:36
B      172.16.204.0/24 [200/0] via 10.100.201.86, toFGTA, 02:11:36
B      192.168.86.0/24 [200/0] via 10.100.201.86, toFGTA, 02:11:36
C      192.168.88.0/24 is directly connected, vlan88

```

## Route filtering with a distribution list

During BGP operations, routes can be propagated between BGP peers and redistributed from other routing protocols. In some situations, advertising routes from one peer to another might need to be prevented.

The [Basic BGP example on page 411](#) explains using a route map to filter routes that are learned from iBGP to prevent them from propagating to an eBGP peer. In this example, a distribution list is used to prevent certain routes from one peer from being advertised to another peer.

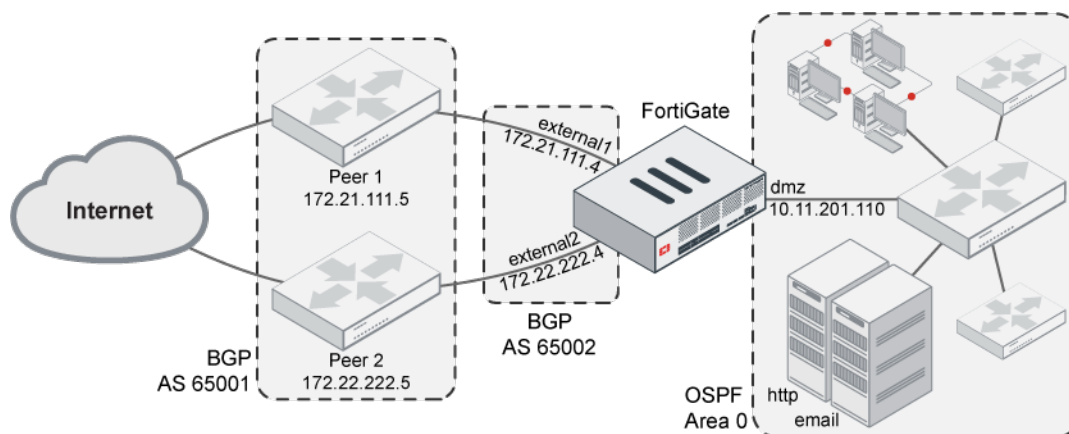

- A company has its own web and email servers in an OSPF area, and needs to advertise routes to these resources to external peers. Users, routers, and other server all reside in the OSPF area.

- The FortiGate acts as the BGP border router, redistributing routes from the company's network to its BGP peers. It is connected to the OSPF area using its DMZ interface.
- Two ISP managed BGP peers in an AS (Peer 1 and Peer 2) are used to access the internet, and routes must not to be advertised from Peer 1 to Peer 2. The manufacturers of these routers, and information about other devices on the external BGP AS, are not known.
- Routes to the BGP peers are redistributed so that external locations can access the web and email servers in the OSPF area. The FortiGate device's external interfaces and the BGP peers are in different ASs, and form eBGP peers.
- Other networking devices must be configured for BGP. The peer routers must be updated with the FortiGate device's BGP information, including IP addresses, AS number, and any specific capabilities that are used, such as IPv6, graceful restart, BFD, and so on.
- It is assumed that security policies have been configured to allow traffic between the networks and NAT is not used. To tighten security, only the required services should be allowed inbound to the various servers.
- In a real life scenario, public IP addresses would be used in place of private IP addresses.

## Configuring BGP

In this example, Peer 1 routes are blocked from being advertised to Peer 2 using an access list. All incoming routes from Peer 1 are blocked when updates are sent to Peer 2.

Routes learned from OSPF are redistributed into BGP. EBGp multi path is enabled to load-balance traffic between the peers using ECMP. See [Equal cost multi-path on page 363](#) for more information.

### To configure BGP in the GUI:

1. Configure an access list to block Peer 1 routes:
  - a. Go to *Network > Routing Objects* and click *Create New > Access List*.
  - b. Set *Name* to *block\_peer1*.
  - c. In the *Rules* table, click *Create New*.
  - d. Set *Action* to *Deny*.
  - e. Enable *Exact Match* and specify the prefix *172.21.111.0 255.255.255.0*.
  - f. Click *OK*.
  - g. Click *OK*.
2. Configure BGP:
  - a. Go to *Network > BGP*.
  - b. Set *Local AS* to *65001*.
  - c. Set *Router ID* to *10.11.201.110*.
  - d. In the *Neighbors* table, click *Create New* and set the following:

IP	172.21.111.5
Remote AS	65001

- e. Click *OK*.
- f. In the *Neighbors* table, click *Create New* again and set the following:

IP	172.22.222.5
----	--------------

Remote AS	65001
Distribute list out	Enable, and select the <i>block_peer1</i> access list.

- g. Click *OK*.
- h. Under *IPv4 Redistribute*, enable *OSPF* and select *ALL*.
- i. Expand *Best Path Selection* and enable *EBGP multi path*.
- j. Click *Apply*.

### To configure BGP in the CLI:

1. Configure an access list to block Peer 1 routes:

```
config router access-list
    edit "block_peer1"
        config rule
            edit 1
                set action deny
                set prefix 172.21.111.0 255.255.255.0
                set exact-match enable
            next
        end
    next
end
```

2. Configure BGP:

```
config router bgp
    set as 65001
    set router-id 10.11.201.110
    set ebgp-multipath enable
    config neighbor
        edit "172.21.111.5"
            set remote-as 65001
        next
        edit "172.22.222.5"
            set distribute-list-out "block_peer1"
            set remote-as 65001
        next
    end
    config redistribute "ospf"
        set status enable
    end
end
```

## Configuring OSPF

In this example, all of the traffic is within the one OSPF area, and there are other OSPF routers in the network. When adjacencies are formed, other routers receive the routes advertised from the FortiGate that are redistributed from BGP.

### To configure OSPF in the GUI:

1. Go to *Network > OSPF*.
2. Set *Router ID* to *10.11.201.110*.

3. In the *Areas* table, click *Create New* and set the following:

Area ID	0.0.0.0
Type	Regular
Authentication	None

4. Click *OK*.

5. In the *Networks* table, click *Create New* and set the following:

Area	0.0.0.0
IP/Netmask	10.11.201.0 255.255.255.0

6. Click *OK*.

7. In the *Interfaces* table, click *Create New* and set the following:

Name	OSPF_dmz_network
Interface	dmz

8. Click *OK*.

9. Enable *Redistribute BGP* and set *Metric value* to 1.

10. Click *Apply*.

### To configure OSPF in the CLI:

```
config router ospf
  set router-id 10.11.201.110
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "OSPF_dmz_network"
      set interface "dmz"
    next
  end
  config network
    edit 1
      set prefix 10.11.201.0 255.255.255.0
    next
  end
  config redistribute "bgp"
    set status enable
    set metric 1
  end
end
```

### Testing the configuration

To test this configuration, run the standard connectivity checks, and also make sure that routes are being passed between protocols as expected. Use the following checklist to help verify that the FortiGate is configured successfully:

1. Check that the FortiGate has established peering with BGP Peer 1 and Peer 2:

```
# get router info bgp summary
# get router info bgp neighbors
```

2. Check that the FortiGate has formed adjacency with OSPF neighbors:

```
# get router info ospf status
# get router info ospf neighbors
```

3. Check the routing table on the FortiGate to make sure that routes from both OSPF and BGP are included:

```
# get router info routing-table all
```

4. Check devices in the OSPF network for internet connectivity and to confirm that routes redistributed from BGP are in their routing tables.
5. Check the routing table on Peer 2 to confirm that no routes from Peer 1 are included.
6. Check that the routes from the internal OSPF network are redistributed to Peer 1 and Peer 2.
7. Verify connectivity to the HTTP and email servers.


## Next hop recursive resolution using other BGP routes

By default, BGP routes are not considered when a BGP next hop requires recursive resolution. They are considered when `recursive-next-hop` is enabled. Recursive resolution will resolve to one level.

### To consider BGP routes for recursive resolution of next hops:

```
config router bgp
    set recursive-next-hop enable
end
```

### Example

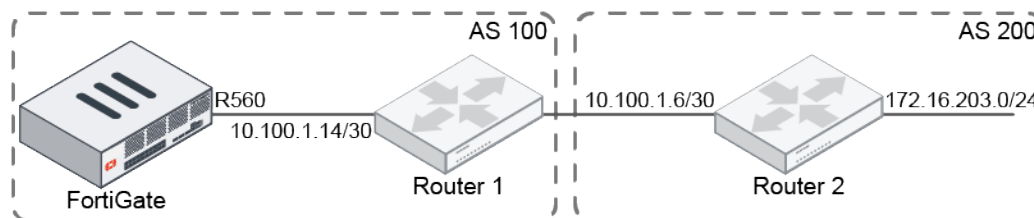

### To see the change in the routing table when the option is enabled:

1. Check the BGP routing table:

```
# get router info routing-table bgp
Routing table for VRF=0
B      10.100.1.4/30 [200/0] via 10.100.1.14 (recursive is directly connected, R560),
00:02:06
```

2. Enable BGP routes for recursive resolution of next hops:

```
config router bgp
  set recursive-next-hop enable
end
```

### 3. Check the BGP routing table again:

```
# get router info routing-table bgp
Routing table for VRF=0
B      10.100.1.4/30 [200/0] via 10.100.1.14 (recursive is directly connected, R560),
00:02:15
B      172.16.203.0/24 [200/0] via 10.100.1.6 (recursive via 10.100.1.14, R560),
00:00:06
```

The second BGP route's next hop is now recursively resolved by another BGP route.


## Next hop recursive resolution using ECMP routes

When there are multiple ECMP routes to a BGP next hop, all of them are considered for the next hop recursive resolution. This ensures that the outgoing traffic can be load balanced.



To support multipath, either EGBP or IGBP multipath must be enabled:

```
config router bgp
  set ebgp-multipath enable
  set ibgp-multipath enable
end
```

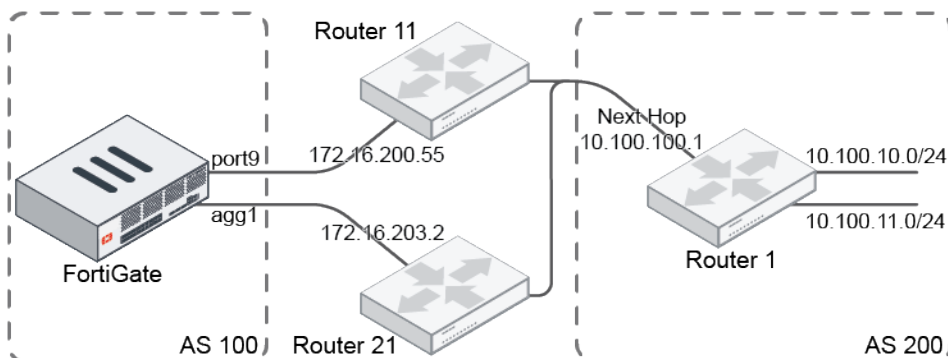

In this example, there are two static routes. The FortiGate has learned two BGP routes from Router 1 that have the same next hop at 10.100.100.1. The next hop is resolved by the two static routes.

### To verify that the routes are added to the BGP routing table:

#### 1. Check the two static routes:

```
# get router info routing-table static
Routing table for VRF=0
S      10.100.100.0/24 [10/0] via 172.16.200.55, port9
      [10/0] via 172.16.203.2, agg1
```

#### 2. Confirm that both routes are in the BGP routing table:


```
# get router info routing-table bgp
Routing table for VRF=0
B      10.100.10.0/24 [20/200] via 10.100.100.1 (recursive via 172.16.200.55, port9),
00:00:07                                     (recursive via 172.16.203.2, agg1),
00:00:07
B      10.100.11.0/24 [20/200] via 10.100.100.1 (recursive via 172.16.200.55, port9),
00:00:07                                     (recursive via 172.16.203.2, agg1),
00:00:07
```

## BGP conditional advertisement

BGP conditional advertisement allows the router to advertise a route only when certain conditions are met. Multiple conditions can be used together, with conditional route map entries treated as an AND operator, and IPv6 is supported.

### Multiple conditions example

In this example, the FortiGate only advertises routes to its neighbor 2.2.2.2 if it learns multiple BGP routes defined in its conditional route map entry. All conditionals must be met.

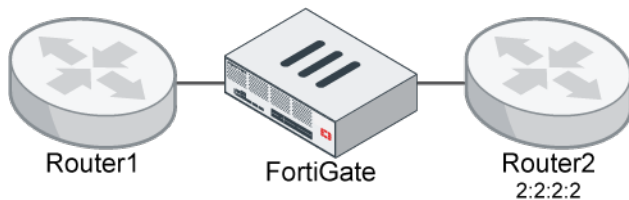

### To configure multiple conditions in BGP conditional advertisements:

#### 1. Configure the IPv4 prefix list:

```
config router prefix-list
  edit "281"
    config rule
      edit 1
        set prefix 172.28.1.0 255.255.255.0
        unset ge
        unset le
      next
    end
  next
  edit "222"
    config rule
      edit 1
        set prefix 172.22.2.0 255.255.255.0
        unset ge
        unset le
      next
    end
  next
end
```



**2. Configure the community list:**

```
config router community-list
  edit "30:5"
    config rule
      edit 1
        set action permit
        set match "30:5"
      next
    end
  next
end
```

**3. Configure the IPv4 route maps:**

```
config router route-map
  edit "comm1"
    config rule
      edit 1
        set match-community "30:5"
        set set-route-tag 15
      next
    end
  next
  edit "2224"
    config rule
      edit 1
        set match-ip-address "222"
      next
    end
  next
  edit "2814"
    config rule
      edit 1
        set match-ip-address "281"
      next
    end
  next
end
```

**4. Configure the IPv6 prefix list:**

```
config router prefix-list6
  edit "adv-222"
    config rule
      edit 1
        set prefix6 2003:172:22:1::/64
        unset ge
        unset le
      next
    end
  next
  edit "list6-2"
    config rule
      edit 1
        set prefix6 2003:172:28:2::/64
        unset ge
        unset le
      next
    end
  next
end
```

```

        next
    end
    next
end

```

##### 5. Configure the IPv6 route maps:

```

config router route-map
    edit "map-222"
        config rule
            edit 1
                set match-ip6-address "adv-222"
            next
        end
    next
    edit "map-282"
        config rule
            edit 1
                set action deny
                set match-ip6-address "list6-2"
            next
        end
    next
end

```

##### 6. Configure the BGP settings:

```

config router bgp
    config neighbor
        edit "2.2.2.2"
            config conditional-advertise
                edit "2224"
                    set condition-routemap "2814" "2224" "comm1"
                    set condition-type non-exist
                next
            end
        next
        edit "2003::2:2:2:2"
            config conditional-advertise6
                edit "map-222"
                    set condition-routemap "map-222" "map-282"
                next
            end
            set route-reflector-client6 enable
        next
    end
end

```

##### To verify the IPv4 conditional advertisements:

```

# get router info bgp neighbors 2.2.2.2
...
Conditional advertise-map:
    Adv-map 2224root 2814root, cond-state 0-1
           2224root, cond-state 0-1
           comm1root, cond-state 0-0
...

```

In this output, the condition is that the routes in route maps 2814, 2224 and comm1 do not exist. However, routes for 2814 and 2224 exist, so the conditions are not met.

### To verify the IPv6 conditional advertisements:

```
# get router info6 bgp neighbors 2003::2:2:2:2
...
Conditional advertise-map:
    Adv-map map-222root map-222root, cond-state 1-1
                                map-282root, cond-state 1-0
...
```


In this output, the condition is that the routes in route maps map-222 and map-282 exist. However, routes for map-222 exist, but map-282 does not, so the conditions are not met.

### To view the conditional route maps:

```
# diagnose ip router command show-vrf root show running router bgp
...
neighbor 2.2.2.2 advertise-map 2224root exist-map 2814root
neighbor 2.2.2.2 advertise-map 2224root exist-map 2224root
neighbor 2.2.2.2 advertise-map 2224root exist-map comm1root
... ..
!
address-family ipv6
neighbor 2003::2:2:2:2 advertise-map map-222root non-exist-map map-222root
neighbor 2003::2:2:2:2 advertise-map map-222root non-exist-map map-282root
!
```

## IPv6 example 1

In this example, the FortiGate advertises its local network to the secondary router when the primary router is down. The FortiGate detects the primary router is down in the absence of a learned route.

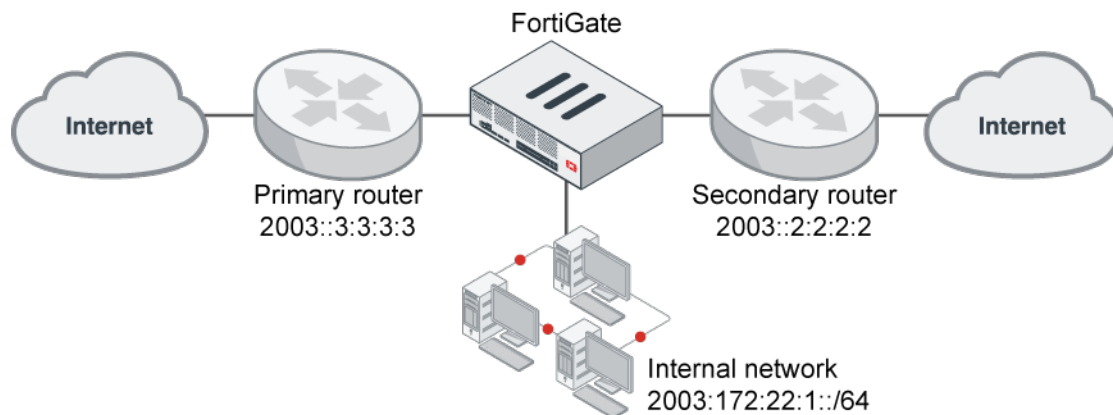

- When the FortiGate learns route 2003:172:28:1::/64 from the primary router, it does not advertise its local route (2003:172:22:1::/64) to the secondary router.
- When the FortiGate does not learn route 2003:17:28:1::/64 from the primary router, advertises its local route (2003:172:22:1::/64) to the secondary router.
- The BGP conditional advertisement condition is set to be true if the condition route map (2003:172:28:1::/64) is not matched (non-exist).

## To configure BGP conditional advertisement with IPv6:

### 1. Configure the IPv6 prefix lists:

```
config router prefix-list6
    edit "adv-222"
        config rule
            edit 1
                set prefix6 2003:172:22:1::/64
                unset ge
                unset le
            next
        end
    next
    edit "lrn-281"
        config rule
            edit 1
                set prefix6 2003:172:28:1::/64
                unset ge
                unset le
            next
        end
    next
end
```

### 2. Configure the route maps:

```
config router route-map
    edit "map-221"
        config rule
            edit 1
                set match-ip6-address "adv-222"
            next
        end
    next
    edit "map-281"
        config rule
            edit 1
                set match-ip6-address "lrn-281"
            next
        end
    next
end
```

### 3. Configure BGP:

```
config router bgp
    set as 65412
    set router-id 1.1.1.1
    set ibgp-multipath enable
    set network-import-check disable
    set graceful-restart enable
    config neighbor
        edit "2003::2:2:2:2"
            set soft-reconfiguration6 enable
            set remote-as 65412
            set update-source "loopback1"
            config conditional-advertise6
        end
    end
```

```

        edit "map-221"
            set condition-routemap "map-281"
            set condition-type non-exist
        next
    end
next
edit "2003::3:3:3:3"
    set soft-reconfiguration6 enable
    set remote-as 65412
    set update-source "loopback1"
next
end
end

```

In this configuration, if route map `map-281` does not exist, then the FortiGate advertises route map `map-221` to neighbor `2003::2:2:2`.

**4. Verify the routing table:**

```
# get router info6 routing-table bgp
B      2003:172:28:1::/64 [200/0] via 2003::3:3:3:3 (recursive via
****:***:***:****:****, port9), 01:23:45
B      2003:172:28:2::/64 [200/0] via 2003::3:3:3:3 (recursive via
****:***:***:****:****, port9), 23:09:22
```

When the FortiGate learns 2003:172:28:1::/64, it will not advertise its local route 2003:172:22:1::/64 to neighbor 2003::2:2:2. If the FortiGate has not learned 2003:172:28:1::/64, it will advertise its local route 2003:172:22:1::/64 to neighbor 2003::2:2:2.

## IPv6 example 2

With the same IPv6 prefix lists and route maps, when the FortiGate does learn 2003:172:28:1::/64, it advertises local route 2003:172:22:1::/64 to the secondary router. The BGP conditional advertisement condition is set to be true if the condition route map is matched (`exist`).

## To configure BGP conditional advertisement with IPv6:

### 1. Configure BGP:

```
config router bgp
  config neighbor
    edit "2003::2:2:2:2"
      config conditional-advertise6
        edit "map-221"
          set condition-routemap "map-281"
          set condition-type exist
        next
      end
    next
  end
end
```

**2. Verify the routing table:**

```
# get router info6 routing-table bgp
B          2003:172:28:1::/64 [200/0] via 2003::3:3:3:3 (recursive via
****:****:****:****:****, port9), 01:23:45
```

```
B          2003:172:28:2::/64 [200/0] via 2003::3:3:3:3 (recursive via
****::****:****:****:****, port9), 23:09:22
```

When the FortiGate learns 2003:172:28:1::/64, it will advertise its local route 2003:172:22:1::/64 to neighbor 2003::2:2:2. If the FortiGate has not learned route 2003:172:28:1::/64, it will not advertise its local route 2003:172:22:1::/64 to neighbor 2003::2:2:2.

## BGP error handling per RFC 7606

The FortiGate uses one of the three approaches to handle malformed attributes in BGP UPDATE messages, in order of decreasing severity:

1. Notification and Session reset
2. Treat-as-withdraw
3. Attribute discard

When a BGP UPDATE message contains multiple malformed attributes, the most severe approach that is triggered by one of the attributes is followed. See [RFC 7606](#) for more information.

The following table lists the BGP attributes, and how FortiGate handles a malformed attribute in the UPDATE message:

BGP attribute	Handling
origin	Handled by the treat-as-withdraw approach.
AS path	Handled by the treat-as-withdraw approach.
AS 4 path	Handled by the attribute discard approach.
aggregator	Handled by the attribute discard approach.
aggregator 4	Handled by the attribute discard approach.
next-hop	Handled by the treat-as-withdraw approach.
multiple exit discriminator	Handled by the treat-as-withdraw approach.
local preference	Handled by the treat-as-withdraw approach.
atomic aggregate	Handled by the attribute discard approach.
community	Handled by the treat-as-withdraw approach.
extended community	Handled by the treat-as-withdraw approach.
originator	Handled by the treat-as-withdraw approach.
cluster	Handled by the treat-as-withdraw approach.
PMSI	Handled by the treat-as-withdraw approach.
MP reach	Handled by the notification message approach.
MP unreach	Handled by the notification message approach.
attribute set	Handled by the treat-as-withdraw approach.
AIGP	Handled by the treat-as-withdraw approach.

BGP attribute	Handling
Unknown	If the BGP flag does not indicate that this is an optional attribute, this malformed attribute is handled by the notification message approach.

## BGP next hop tag-match mode


Tag-match mode can be configured to increase flexibility when controlling how BGP routes' next hops are resolved:

```
config router bgp
    set tag-resolve-mode {disable | preferred | merge}
end
```

Best-match (disable)	Resolve the BGP route's next hops with best-matched routes. This is the default setting.
Tag-match (preferred)	Resolve the BGP route's next hops with routes that have the same tag. If there are no results, resolve the next hops with best-matched routes.
Tag-and-best-match (merge)	Merge tag-match with best-match if they are using different routes, then let shortcuts hide their parents. The results exclude the next hops of tag-match whose interfaces have appeared in best-match.

In these examples:

- Each spoke has two IPsec tunnels to each hub, and one BGP peer on loopback interface to each hub (route-reflector).
- The loopbacks are exchanged with IKE between the spokes and hubs. They are installed as static routes that are used to provide reachability for establishing BGP neighbors.
- The summary BGP routes from the loopback IP address ranges that originated on the hubs are advertised to the spokes for resolving the BGP next hop s on the spokes.
- The spokes' PC LAN subnets are reflected by the hubs.
- Spoke\_1 receives BGP routes (the LAN subnet and loopback IP summary) from Hub\_1 with tag 1 and from Hub\_2 with tag 2.
- SD-WAN is enabled on Spoke\_1, and all of the tunnels are SD-WAN members.

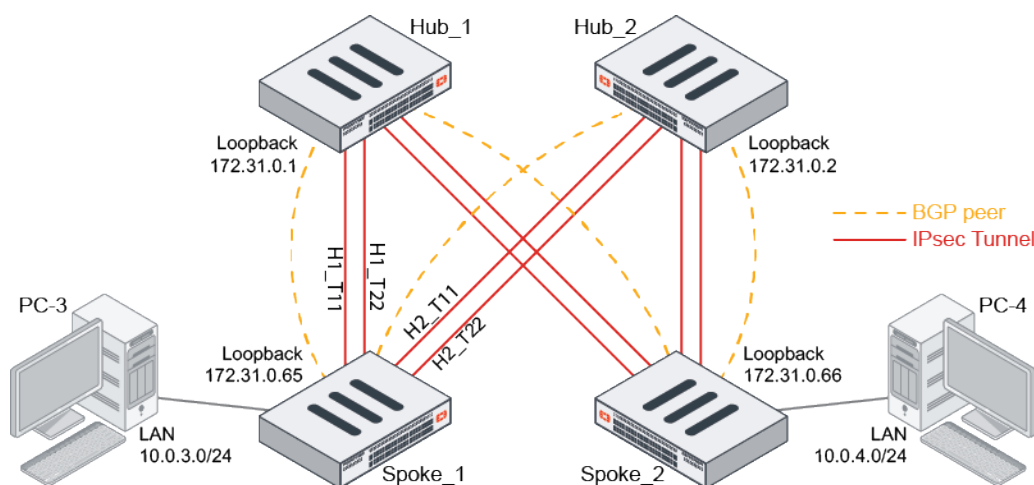

## Example 1: Connection between Hub and Spoke down

If the connections between Hub\_1 and Spoke\_2 are down, traffic from PC\_3 to PC\_4 can still go through Hub\_1 because of the best-match resolving on Spoke\_1, but packets will be dropped on Hub\_1. When tag-match is enabled on Spoke\_1, the spoke will resolve the PC\_4 LAN route to Hub2, and traffic will be forwarded to Hub\_2 and reach its destination.

### To test the tag-match mode:

#### 1. View the key routes on Spoke\_1:

```
Spoke_1(root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 [2] (recursive via H1_T11 tunnel
172.31.1.1), 20:09:52
        (recursive via H1_T22 tunnel 10.0.0.2), 20:09:52
        (recursive via H2_T11 tunnel 172.31.1.101), 20:09:52
        (recursive via H2_T22 tunnel 10.0.0.4), 20:09:52
B      172.31.0.0/25 [200/0] via 172.31.0.1 (recursive via H1_T11 tunnel 172.31.1.1),
23:25:37
        (recursive via H1_T22 tunnel 10.0.0.2), 23:25:37
        [200/0] via 172.31.0.2 (recursive via H2_T11 tunnel 172.31.1.101), 23:25:37
        (recursive via H2_T22 tunnel 10.0.0.4), 23:25:37
S      172.31.0.1/32 [15/0] via H1_T11 tunnel 172.31.1.1, [1/0]
        [15/0] via H1_T22 tunnel 10.0.0.2, [1/0]
S      172.31.0.2/32 [15/0] via H2_T11 tunnel 172.31.1.101, [1/0]
        [15/0] via H2_T22 tunnel 10.0.0.4, [1/0]
C      172.31.0.65/32 is directly connected, Loopback0
...
```

172.31.0.0/25 is the loopback IP summary originated by both Hub\_1 and Hub\_2. The next hop of the PC\_4 LAN route is resolved to Hub\_1 (H1\_T11, H1\_T22) and Hub\_2 (H2\_T11, H2\_T22) based on the loopback IP summary route.

#### 2. When connections between Spoke\_2 and Hub\_1 fails due to the BGP neighbor, tunnels, or physical ports going down, the PC\_4 LAN route can be still resolved to Hub\_1 and Hub\_2 because the loopback IP summary can still be received from both Hub\_1 and Hub\_2:

```
Spoke_1(root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 (recursive via H1_T11 tunnel 172.31.1.1),
00:03:06
        (recursive via H1_T22 tunnel 10.0.0.2), 00:03:06
        (recursive via H2_T11 tunnel 172.31.1.101), 00:03:06
        (recursive via H2_T22 tunnel 10.0.0.4), 00:03:06
B      172.31.0.0/25 [200/0] via 172.31.0.1 (recursive via H1_T11 tunnel 172.31.1.1),
23:55:34
        (recursive via H1_T22 tunnel 10.0.0.2), 23:55:34
        [200/0] via 172.31.0.2 (recursive via H2_T11 tunnel 172.31.1.101), 23:55:34
        (recursive via H2_T22 tunnel 10.0.0.4), 23:55:34
...
```

#### 3. If traffic sent from PC\_3 to PC\_4 goes through Hub\_1, packets are dropped because there is no PC\_4 LAN route on Hub\_1:

```
Spoke_1 (root) # diagnose sniffer packet any 'host 10.0.4.2' 4
interfaces=[any]
```



```

filters=[host 10.0.4.2]
11.261264 port4 in 10.0.3.2 -> 10.0.4.2: icmp: echo request
11.261349 H1_T11 out 10.0.3.2 -> 10.0.4.2: icmp: echo request
12.260268 port4 in 10.0.3.2 -> 10.0.4.2: icmp: echo request
12.260291 H1_T11 out 10.0.3.2 -> 10.0.4.2: icmp: echo request

Hub_1 (root) # diagnose sniffer packet any 'host 10.0.4.2' 4
interfaces=[any]
filters=[host 10.0.4.2]
6.966064 EDGE_T1 in 10.0.3.2 -> 10.0.4.2: icmp: echo request
7.965012 EDGE_T1 in 10.0.3.2 -> 10.0.4.2: icmp: echo request

```

4. If the tag-match mode is set to tag-match (preferred) on Spoke\_1, then the PC\_4 LAN route can only be resolved to Hub\_2 because of tag-match checking:

```

Spoke_1(root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 tag 2 (recursive via H2_T11 tunnel
172.31.1.101), 00:02:35
          (recursive via H2_T22 tunnel 10.0.0.4), 00:02:35
B      172.31.0.0/25 [200/0] via 172.31.0.1 tag 1 (recursive via H1_T11 tunnel
172.31.1.1), 03:18:41
          (recursive via H1_T22 tunnel 10.0.0.2), 03:18:41
          [200/0] via 172.31.0.2 tag 2 (recursive via H2_T11 tunnel 172.31.1.101),
03:18:41
          (recursive via H2_T22 tunnel 10.0.0.4), 03:18:41
...

Spoke_1 (root) # get router info routing-table details 10.0.4.0/24

Routing table for VRF=0
Routing entry for 10.0.4.0/24
  Known via "bgp", distance 200, metric 0, best
  Last update 00:01:11 ago
  * 172.31.0.66, tag 2 (recursive via H2_T11 tunnel 172.31.1.101), tag-match
    (recursive via H2_T22 tunnel 10.0.0.4), tag-match

```

5. If traffic is again sent from PC\_3 to PC\_4, it will go through Hub\_2 and reach the destination:

```

Spoke_1 (root) # diagnose sniffer packet any 'host 10.0.4.2' 4
interfaces=[any]
filters=[host 10.0.4.2]
7.216948 port4 in 10.0.3.2 -> 10.0.4.2: icmp: echo request
7.217035 H2_T11 out 10.0.3.2 -> 10.0.4.2: icmp: echo request
7.217682 H2_T11 in 10.0.4.2 -> 10.0.3.2: icmp: echo reply
7.217729 port4 out 10.0.4.2 -> 10.0.3.2: icmp: echo reply

```

## Example 2: SD-WAN failover when shortcut down

After the shortcut from Spoke\_1 to Spoke\_2 is established, Spoke\_1 will only resolve the PC\_4 LAN route to the shortcut, because of best-match resolving, prohibiting SD-WAN failover. When tag-and-best-match is enabled on Spoke\_1, the spoke can resolve the PC\_4 LAN route to the shortcut and to other alternative tunnels, allowing SD-WAN failover.

**To test the tag-and-best-match mode:**

1. Unset `tag-resolve-mode` and resume the connections between Spoke\_2 and Hub\_1. The routing table on Spoke\_1 changes to the initial state:

```
Spoke_1(root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 [2] (recursive via H1_T11 tunnel
172.31.1.1), 00:01:54
        (recursive via H1_T22 tunnel 10.0.0.2), 00:01:54
        (recursive via H2_T11 tunnel 172.31.1.101), 00:01:54
        (recursive via H2_T22 tunnel 10.0.0.4), 00:01:54
B      172.31.0.0/25 [200/0] via 172.31.0.1 (recursive via H1_T11 tunnel 172.31.1.1),
03:30:35
        (recursive via H1_T22 tunnel 10.0.0.2), 03:30:35
        [200/0] via 172.31.0.2 (recursive via H2_T11 tunnel 172.31.1.101), 03:30:35
        (recursive via H2_T22 tunnel 10.0.0.4), 03:30:35
S      172.31.0.1/32 [15/0] via H1_T11 tunnel 172.31.1.1, [1/0]
        [15/0] via H1_T22 tunnel 10.0.0.2, [1/0]
S      172.31.0.2/32 [15/0] via H2_T11 tunnel 172.31.1.101, [1/0]
        [15/0] via H2_T22 tunnel 10.0.0.4, [1/0]
C      172.31.0.65/32 is directly connected, Loopback0
...

```

2. Send traffic from PC\_3 to PC\_4.

The shortcut from Spoke\_1 to Spoke\_2 is established.

The PC\_4 LAN route is only resolved to the shortcut because of best-match resolving. If the shortcut is out of SLA, then the traffic cannot switch over to another, alternative tunnel.

```
Spoke_1 (root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 [2] (recursive via H1_T11_0 tunnel
10.0.0.40), 00:09:22
B      172.31.0.0/25 [200/0] via 172.31.0.1 (recursive via H1_T11 tunnel 172.31.1.1),
03:40:12
        (recursive via H1_T22 tunnel 10.0.0.2), 03:40:12
        [200/0] via 172.31.0.2 (recursive via H2_T11 tunnel 172.31.1.101), 03:40:12
        (recursive via H2_T22 tunnel 10.0.0.4), 03:40:12
S      172.31.0.1/32 [15/0] via H1_T11 tunnel 172.31.1.1, [1/0]
        [15/0] via H1_T22 tunnel 10.0.0.2, [1/0]
S      172.31.0.2/32 [15/0] via H2_T11 tunnel 172.31.1.101, [1/0]
        [15/0] via H2_T22 tunnel 10.0.0.4, [1/0]
C      172.31.0.65/32 is directly connected, Loopback0
S      172.31.0.66/32 [15/0] via H1_T11_0 tunnel 10.0.0.40, [1/0]
...

```

3. If the tag-match mode is set to tag-and-best-match (merge) on Spoke\_1, then the PC\_4 LAN route is resolved to the H1\_T11\_0 shortcut based on best-match resolving, and to H1\_T11, H1\_T22, H2\_T11, H2\_T22 based on tag-match resolving. It is then resolved to H1\_T11, H1\_T22, H2\_T11, H2\_T22 after letting the shortcut hide its parent tunnel.

```
Spoke_1 (root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 tag 1 (recursive via H1_T11_0 tunnel
10.0.0.40), 00:07:36

```

```

        (recursive via H1_T22 tunnel 10.0.0.2), 00:07:36
    [200/0] via 172.31.0.66 tag 2 (recursive via H1_T11_0 tunnel 10.0.0.40),
00:07:36
        (recursive via H2_T11 tunnel 172.31.1.101), 00:07:36
        (recursive via H2_T22 tunnel 10.0.0.4), 00:07:36
B      172.31.0.0/25 [200/0] via 172.31.0.1 tag 1 (recursive via H1_T11 tunnel
172.31.1.1), 03:48:26
        (recursive via H1_T22 tunnel 10.0.0.2), 03:48:26
    [200/0] via 172.31.0.2 tag 2 (recursive via H2_T11 tunnel 172.31.1.101),
03:48:26
        (recursive via H2_T22 tunnel 10.0.0.4), 03:48:26
S      172.31.0.1/32 [15/0] via H1_T11 tunnel 172.31.1.1, [1/0]
        [15/0] via H1_T22 tunnel 10.0.0.2, [1/0]
S      172.31.0.2/32 [15/0] via H2_T11 tunnel 172.31.1.101, [1/0]
        [15/0] via H2_T22 tunnel 10.0.0.4, [1/0]
C      172.31.0.65/32 is directly connected, Loopback0
S      172.31.0.66/32 [15/0] via H1_T11_0 tunnel 10.0.0.40, [1/0]

...

Spoke_1 (root) # get router info routing-table details 10.0.4.0/24

Routing table for VRF=0
Routing entry for 10.0.4.0/24
  Known via "bgp", distance 200, metric 0, best
  Last update 00:01:02 ago
  * 172.31.0.66, tag 1 (recursive via H1_T11_0 tunnel 10.0.0.42), best-match
    (recursive via H1_T22 tunnel 10.0.0.2), tag-match
  * 172.31.0.66, tag 2 (recursive via H1_T11_0 tunnel 10.0.0.42), best-match
    (recursive via H2_T11 tunnel 172.31.1.101), tag-match
    (recursive via H2_T22 tunnel 10.0.0.4), tag-match

```

4. If the H1\_T11\_0 shortcut goes out of SLA, traffic will switch to tunnel H1\_T22 and shortcut H1\_T22\_0 is triggered. The PC\_4 LAN route is resolved to H1\_T11, H1\_T22, H2\_T11, H2\_T22.

```

Spoke_1 (root) # get router info routing-table all
C      10.0.3.0/24 is directly connected, port4
B      10.0.4.0/24 [200/0] via 172.31.0.66 tag 1 (recursive via H1_T11_0 tunnel
10.0.0.40), 00:18:50
        (recursive via H1_T22_0 tunnel 10.0.0.41), 00:18:50
    [200/0] via 172.31.0.66 tag 2 (recursive via H1_T11_0 tunnel 10.0.0.40),
00:18:50
        (recursive via H1_T22_0 tunnel 10.0.0.41), 00:18:50
        (recursive via H2_T11 tunnel 172.31.1.101), 00:18:50
        (recursive via H2_T22 tunnel 10.0.0.4), 00:18:50
B      172.31.0.0/25 [200/0] via 172.31.0.1 tag 1 (recursive via H1_T11 tunnel
172.31.1.1), 03:59:40
        (recursive via H1_T22 tunnel 10.0.0.2), 03:59:40
    [200/0] via 172.31.0.2 tag 2 (recursive via H2_T11 tunnel 172.31.1.101),
03:59:40
        (recursive via H2_T22 tunnel 10.0.0.4), 03:59:40
S      172.31.0.1/32 [15/0] via H1_T11 tunnel 172.31.1.1, [1/0]
        [15/0] via H1_T22 tunnel 10.0.0.2, [1/0]
S      172.31.0.2/32 [15/0] via H2_T11 tunnel 172.31.1.101, [1/0]
        [15/0] via H2_T22 tunnel 10.0.0.4, [1/0]
C      172.31.0.65/32 is directly connected, Loopback0
S      172.31.0.66/32 [15/0] via H1_T11_0 tunnel 10.0.0.40, [1/0]

```

```

[15/0] via H1_T22_0 tunnel 10.0.0.41, [1/0]
...
Spoke_1 (root) # get router info routing-table details 10.0.4.0/24

Routing table for VRF=0
Routing entry for 10.0.4.0/24
  Known via "bgp", distance 200, metric 0, best
  Last update 00:06:40 ago
  * 172.31.0.66, tag 1 (recursive via H1_T11_0 tunnel 10.0.0.42), best-match
    (recursive via H1_T22_0 tunnel 10.0.0.43), best-match
  * 172.31.0.66, tag 2 (recursive via H1_T11_0 tunnel 10.0.0.42), best-match
    (recursive via H1_T22_0 tunnel 10.0.0.43), best-match
    (recursive via H2_T11 tunnel 172.31.1.101), tag-match
    (recursive via H2_T22 tunnel 10.0.0.4), tag-match

Spoke_1(root) # diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
  Gen(22), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Member sub interface(4):
    1: seq_num(1), interface(H1_T11):
      1: H1_T11_0(93)
    3: seq_num(4), interface(H1_T22):
      1: H1_T22_0(94)
  Members(4):
    1: Seq_num(1 H1_T11), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
    2: Seq_num(4 H1_T22_0), alive, sla(0x1), gid(0), cfg_order(3), cost(0), selected
    3: Seq_num(4 H1_T22), alive, sla(0x1), gid(0), cfg_order(3), cost(0), selected
    4: Seq_num(1 H1_T11_0), alive, sla(0x0), gid(0), cfg_order(0), cost(0), selected
  Src address(1):
    10.0.0.0-10.255.255.255
  Dst address(1):
    10.0.0.0-10.255.255.255

Service(2): Address Mode(IPV4) flags=0x200 use-shortcut-sla
  Gen(10), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Members(2):
    1: Seq_num(6 H2_T11), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
    2: Seq_num(9 H2_T22), alive, sla(0x1), gid(0), cfg_order(3), cost(0), selected
  Src address(1):
    10.0.0.0-10.255.255.255
  Dst address(1):
    10.0.0.0-10.255.255.255

```


## BGP neighbor password

A BGP neighbor password is used for the neighbor range. Once a BGP group is configured, it uses a password to establish the neighborhood.

```

config router bgp
  config neighbor-group
    edit <name>
      set password <password>
    next

```

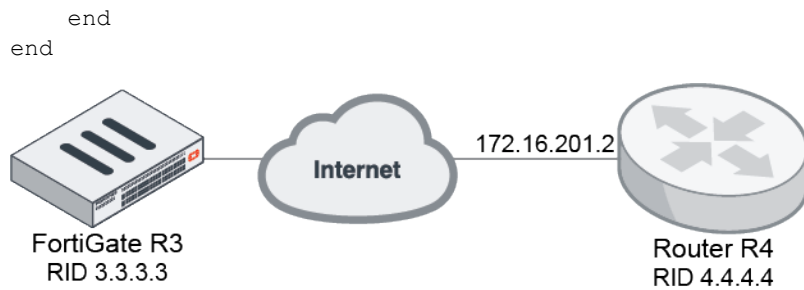

## To configure the BGP group:

### 1. Configure the R3 FortiGate settings:

```

config router bgp
  config neighbor-group
    edit "FGT"
      set soft-reconfiguration enable
      set remote-as 65050
      set local-as 65518
      set local-as-no-prepend enable
      set local-as-replace-as enable
      set route-map-in "del-comm"
      set keep-alive-timer 30
      set holdtime-timer 90
      set update-source "np0_vlink0"
      set weight 1000
      set password ENC *****
    next
  end
  config neighbor-range
    edit 1
      set prefix 172.16.201.0 255.255.255.0
      set max-neighbor-num 10
      set neighbor-group "FGT"
    next
  end
end
end

```

### 2. Configure the R4 router settings:

```

config router bgp
  config neighbor
    edit "172.16.201.1"
      set soft-reconfiguration enable
      set remote-as 65518
      set password *****
    next
  end
end
end

```

## BGP multi-exit discriminator

Border Gateway Protocol (BGP) is the routing protocol that governs how internet traffic is efficiently routed between autonomous systems (AS). BGP uses path attributes for its best path calculation to a network.

Multi-Exit Discriminator (MED) is a BGP path attribute that discriminates among multiple exit or entry points to the same neighboring AS. MED is also known as Optional Non-Transitive path attribute. The lower the MED value, the more preferred the path is to the receiving router.

MED is typically utilized when an AS has multiple exit points to another AS. In such cases, the AS may want to influence incoming traffic by advertising different MED values for the same route.


### Common use case

A common use case for MED is in the context of a dual-homed AS. In a dual-homed AS scenario, the FortiGate connects to two different ISPs belonging to the same AS for redundancy and load balancing. By manipulating the MED value, the AS can direct traffic to one ISP over the other. For instance, if one link is congested, the AS can advertise a higher MED value for that link, making the other link more suitable to incoming traffic.



MED is a BGP path attribute that discriminates among multiple exit or entry points to the same neighboring AS. If an administrator has two or more eBGP peering to different AS then the local preference can be used to influence the routing decision.

The following example discusses the use of MED in dual-homed AS network and the configuration of MED Path Attribute on FortiOS.

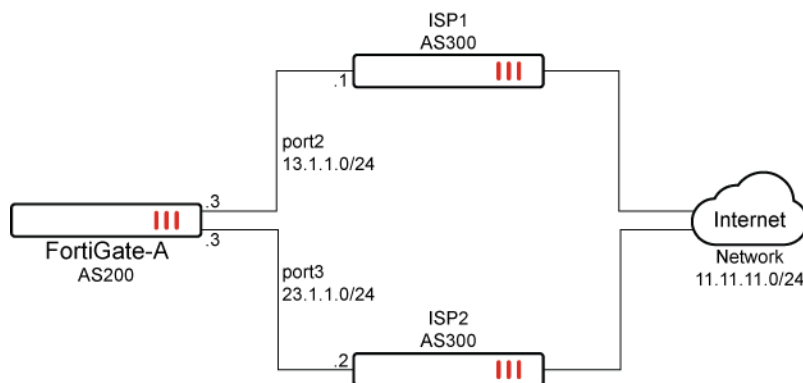

Characteristics of the topology include the following:

- FortiGate-A has two internet service providers: ISP1 and ISP2.
- FortiGate-A belongs to AS 200.
- ISP1 and ISP2 both belong to AS 300.
- FortiGate-A will establish eBGP peering relationships with ISP1 and ISP2.
- Network 11.11.11.0/24 resides on the Internet and is reachable by both ISP1 and ISP2.
- eBGP multipath is enabled on FortiGate-A if FortiGate-A needs to perform equal cost load-balancing of traffic between both ISP1 and ISP2 to reach to 11.11.11.0/24.
- The network 11.11.11.0/24 on the Internet is being advertised by both ISP1 and ISP2 to FortiGate-A through eBGP.

For this example, the traffic originating from behind the FortiGate-A should prefer ISP1 rather than ISP2 to reach 11.11.11.0/24, and needs to use the BGP MED Path Attribute. This is done by configuring `set set-metric` in a route map configuration and ensuring the MED value of ISP1 is less than that of ISP2.

## To configure MED in a dual-homed AS network using the CLI:

### 1. Configure eBGP peering on FortiGate-A by specifying the BGP neighbors:

```
config router bgp
    set as 200
    set router-id 2.2.2.2
    config neighbor
        edit "13.1.1.1"
            set remote-as 300
        next
        edit "23.1.1.2"
            set remote-as 300
        next
    end
end
```

### 2. Configure eBGP on ISP1 and ISP2, and advertise the 11.11.11.0/24 network:

```
config router bgp
    set as 300
    set router-id 3.3.3.3
    config neighbor
        edit "13.1.1.3"
            set remote-as 200
        next
    end
    config network
        edit 1
            set prefix 11.11.11.0 255.255.255.0
        next
    end
end
```

### 3. Verify the eBGP neighbors on Fortigate-A with ISP1 and ISP2:

```
# get router info bgp summary
VRF 0 BGP router identifier 2.2.2.2, local AS number 200
BGP table version is 6
1 BGP AS-PATH entries
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
13.1.1.1	4	300	48	50	0	0	0	00:25:45	1
23.1.1.2	4	300	56	60	6	0	0	00:26:30	1

### 4. Configure the prefix list to filter and select the 11.11.11.0/24 subnet inside the prefix list:

#### a. Configure ISP1:

```
config router prefix-list
    edit "ISP1_Prefix_List"
        config rule
            edit 1
                set prefix 11.11.11.0 255.255.255.0
            next
        end
    next
end
```

**b. Configure ISP2:**

```

config router prefix-list
  edit "ISP2_Prefix_List"
    config rule
      edit 1
        set prefix 11.11.11.0 255.255.255.0
      next
    end
  next
end

```

**5. Configure route maps and configure the MED value:****a. Configure ISP1:**

```

config router route-map
  edit "MED_Route_MAP"
    config rule
      edit 1
        set match-ip-address "ISP1_Prefix_List"
        set set-metric 300
      next
    end
  next
end

```

**b. Configure ISP2:**

```

config router route-map
  edit "MED_Route_MAP_2"
    config rule
      edit 1
        set match-ip-address "ISP2_Prefix_List"
        set set-metric 400
      next
    end
  next
end

```

**6. Apply the route map in the outbound direction:**

Applying the configuration in the outbound direction ensures that the MED is changed to the respective value for the route 11.11.11.0/24 specified in the prefix list.

---

**a. Configure the ISP1 BGP:**

```

config router bgp
  set as 300
  set router-id 3.3.3.3
  config neighbor
    edit "13.1.1.3"
      set remote-as 200
      set route-map-out "MED_Route_MAP"
    next
  end
end

```



**b. Configure the ISP2 BGP:**

```

config router bgp
  set as 300
  set router-id 4.4.4.4
  config neighbor
    edit "23.1.1.3"
      set remote-as 200
      set route-map-out "MED_Route_MAP_2"
    next
  end
end

```

**7. Verify that ISP1 is selected as the best path to reach the 11.11.11.0/24 network:**

The neighbor that is considered the best, valid route is marked with a \*>.

```

# get router info bgp network
VRF 0 BGP table version is 6, local router ID is 2.2.2.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          Next Hop           Metric LocPrf Weight RouteTag Path
*> 11.11.11.0/24    13.1.1.1             300          0          0 300 i <-/1>
* 23.1.1.2         400                  0          0 300 i <-/->

Total number of prefixes 1

```

**8. Verify the routing table of FortiGate-A:**

The routing table only contains the best and valid paths.

```

# get router info routing-table details
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
B    11.11.11.0/24 [20/300] via 13.1.1.1, port2, 00:37:47
C    13.1.1.0/24 is directly connected, port2
C    23.1.1.0/24 is directly connected, port3

```

## Troubleshooting BGP

There are some features in BGP that are used to deal with problems that may arise. Typically, the problems with a BGP network that has been configured involve routes going offline frequently. This is called route flap and causes problems

for the routers using that route.

## Clearing routing table entries

To see if a new route is being properly added to the routing table, you can clear all or some BGP neighbor connections (sessions) using the `execute router clear bgp` command.

For example, if you have 10 routes in the BGP routing table and you want to clear the specific route to IP address 10.10.10.1, enter the following CLI command:

```
# execute router clear bgp ip 10.10.10.1
```

To remove all routes for AS number 650001, enter the following CLI command:

```
# execute router clear bgp as 650001
```

## Route flap

When routers or hardware along a route go offline and back online that is called a route flap. Flapping is the term that is used if these outages continue, especially if they occur frequently.

Route flap is a problem in BGP because each time a peer or a route goes down, all the peer routers that are connected to that out-of-service router advertise the change in their routing tables. This creates a lot of administration traffic on the network and the same traffic re-occurs when that router comes back online. If the problem is something like a faulty network cable that alternates online and offline every 10 seconds, there could easily be an overwhelming amount of routing updates sent out unnecessarily.

Another possible reason for route flap occurs with multiple FortiGate devices in HA mode. When an HA cluster fails over to the secondary unit, other routers on the network may see the HA cluster as being offline, resulting in route flap. While this doesn't occur often, or more than once at a time, it can still result in an interruption in traffic which is disruptive for network users. The easy solution for this problem is to increase the timers on the HA cluster, such as TTL timers, so they don't expire during the failover process. Also, configuring graceful restart on the HA cluster helps with a smooth failover.

The first method of dealing with route flap is to check your hardware. If a cable is loose or bad, it can easily be replaced and eliminate the problem. If an interface on the router is bad, either avoid using that interface or swap in a functioning router. If the power source is bad on a router, either replace the power supply or use a power conditioning backup power supply. These quick and easy fixes can save you from configuring more complex BGP options. However, if the route flap is from another source, configuring BGP to deal with the outages will ensure your network users uninterrupted service.

Some methods of dealing with route flap in BGP include:

- [Holdtime timer on page 444](#)
- [Dampening on page 445](#)
- [Graceful restart on page 446](#)
- [BFD on page 447](#)

## Holdtime timer

The first step to troubleshooting a flapping route is the holdtime timer. This timer reduces how frequently a route going down will cause a routing update to be broadcast.

Once activated, the holdtime timer won't allow the FortiGate to accept any changes to that route for the duration of the timer. If the route flaps five times during the timer period, only the first outage will be recognized by the FortiGate. For the duration of the other outages, there won't be changes because the Fortigate is essentially treating this router as down. If the route is still flapping after the timer expires, it will start again.

If the route isn't flapping (for example, if it goes down, comes up, and stays back up) the timer will still count down and the route is ignored for the duration of the timer. In this situation, the route is seen as down longer than it really is but there will be only the one set of route updates. This isn't a problem in normal operation because updates are not frequent.

The potential for a route to be treated as down when it's really up can be viewed as a robustness feature. Typically, you don't want most of your traffic being routed over an unreliable route. So if there's route flap going on, it's best to avoid that route if you can. This is enforced by the holdtime timer.

### How to configure the holdtime timer

There are three different route flapping situations that can occur: the route goes up and down frequently, the route goes down and back up once over a long period of time, or the route goes down and stays down for a long period of time. These can all be handled using the holdtime timer.

For example, your network has two routes that you want to set the timer for. One is your main route (to 10.12.101.4) that all of your Internet traffic goes through, and it can't be down for long if it's down. The second is a low speed connection to a custom network that's used infrequently (to 10.13.101.4). The timer for the main route should be fairly short (for example, 60 seconds). The second route timer can be left at the default, since it's rarely used.

### To configure the BGP holdtime timer:

```
config router bgp
  config neighbor
    edit 10.12.101.4
      set holdtime-timer 60
      set keepalive-timer 60
    next
    edit 10.13.101.4
      set holdtime-timer 180
      set keepalive-timer 60
    next
  end
end
```

## Dampening

Dampening is a method that's used to limit the amount of network problems due to flapping routes. With dampening, the flapping still occurs but the peer routers pay less and less attention to that route as it flaps more often. One flap doesn't start dampening, but the second flap starts a timer where the router won't use that route because it is considered unstable. If the route flaps again before the timer expires, the timer continues to increase. There's a period of time called the reachability half-life, after which a route flap will be suppressed for only half the time. This half-life comes into effect when a route has been stable for a while but not long enough to clear all the dampening completely. For the flapping route to be included in the routing table again, the suppression time must expire.

If the route flapping was temporary, you can clear the flapping or dampening from the FortiGate device's cache by using one of the `execute router clear bgp` CLI commands:

```
# execute router clear bgp dampening {<ip_address> | <ip_address/netmask>}
```

or

```
# execute router clear bgp flap-statistics {<ip_address> | <ip_address/netmask>}
```

For example, to remove route flap dampening information for the 10.10.0.0/16 subnet, enter the following CLI command:

```
# execute router clear bgp dampening 10.10.0.0/16
```

**To configure BGP route dampening:**

```

config router bgp
    set dampening {enable | disable}
    set dampening-max-suppress-time <minutes_integer>
    set dampening-reachability-half-life <minutes_integer>
    set dampening-reuse <reuse_integer>
    set dampening-route-map <routemap-name_str>
    set dampening-suppress <limit_integer>
    set dampening-unreachability-half-life <minutes_integer>
end

```

**Graceful restart**

BGP4 has the capability to gracefully restart.

In some situations, route flap is caused by routers that appear to be offline but the hardware portion of the router (control plane) can continue to function normally. One example of this is when some software is restarting or being upgraded but the hardware can still function normally.

Graceful restart is best used for these situations where routing won't be interrupted, but the router is unresponsive to routing update advertisements. Graceful restart doesn't have to be supported by all routers in a network, but the network will benefit when more routers support it.

FortiGate HA clusters can benefit from graceful restart. When a failover takes place, the HA cluster advertises that it is going offline, and will not appear as a route flap. It will also enable the new HA main unit to come online with an updated and usable routing table. If there is a flap, the HA cluster routing table will be out-of-date.

For example, the FortiGate is one of four BGP routers that send updates to each other. Any of those routers may support graceful starting. When a router plans to go offline, it sends a message to its neighbors stating how long it expects to be offline. This way, its neighboring routers don't remove it from their routing tables. However, if that router isn't back online when expected, the routers will mark it offline. This prevents routing flap and its associated problems.

FortiGate devices support both graceful restart of their own BGP routing software and neighboring BGP routers.



Currently, FortiGates do not support BGP graceful restart when peering with neighbor routers operating in graceful restart helper-only mode.

---

**To configure BGP graceful restart:**

```

config router bgp
    set graceful-restart {disable | enable}
    set graceful-restart-time <seconds_integer>
    set graceful-stalepath-time <seconds_integer>
    set graceful-update-delay <seconds_integer>
    config neighbor
        edit 10.12.101.4
            set capability-graceful-restart {enable | disable}
        next
    end
end

```

Before the restart, the router sends its peers a message to say it's restarting. The peers mark all the restarting router's routes as stale, but they continue to use the routes. The peers assume the router will restart, check its routes, and take

care of them, if needed, after the restart is complete. The peers also know what services the restarting router can maintain during its restart. After the router completes the restart, the router sends its peers a message to say it's done restarting.

**To restart the router:**

```
# execute router restart
```

**Scheduled time offline**

Graceful restart is a means for a router to advertise that it is going to have a scheduled shutdown for a very short period of time. When neighboring routers receive this notice, they will not remove that router from their routing table until after a set time elapses. During that time, if the router comes back online, everything continues to function as normal. If that router remains offline longer than expected, then the neighboring routers will update their routing tables as they assume that the router will be offline for a long time.

The following example demonstrates if you want to configure graceful restart on the FortiGate where you expect the FortiGate to be offline for no more than two minutes, and after three minutes the BGP network should consider the FortiGate to be offline.

**To configure graceful restart time settings:**

```
config router bgp
    set graceful-restart enable
    set graceful-restart-time 120
    set graceful-stalepath-time 180
end
```

**BFD**

Bidirectional Forwarding Detection (BFD) is a protocol that you can use to quickly locate hardware failures in the network. Routers running BFD communicate with each other and if a timer runs out on a connection then that router is declared down. BFD then communicates this information to the routing protocol and the routing information is updated.

For more information about BFD, see [BFD on page 448](#).

**BGP path selection process**

Sometimes the FortiGate may receive multiple BGP paths from neighbors and must decide which is the best path to take. The following criteria are used to determine the best path.

Consider only routes with no AS loops and a valid next hop, and then:

1. Prefer the highest weight (this attribute is local to the FortiGate).
2. Prefer the highest local preference (applicable within AS).
3. Prefer the route originated by the local router (next hop = 0.0.0.0).
4. Prefer the shortest AS path.
5. Prefer the lowest origin code (IGP > EGP > incomplete).
6. Prefer the lowest MED (exchanged between autonomous systems).
7. Prefer the EBGp path over IBGP path.
8. Prefer the path through the closest IGP neighbor.
9. Prefer the oldest route for EBGp paths.

10. Prefer the path with the lowest neighbor BGP router ID.
11. Prefer the path with the lowest neighbor IP address.

## BFD

Bidirectional Forwarding Detection (BFD) is a protocol that you can use to quickly locate hardware failures in the network. Routers running BFD send packets to each other at a negotiated rate. If packets from a BFD-enabled router fail to arrive, that router is declared to be down. BFD communicates this information to the associated routing protocols and the routing information is updated. It helps detect one way device failure and is used for fast convergence of routing protocols.

BFD can run on an entire FortiGate, selected interfaces, or on a protocol, such as BGP, for all configured interfaces. The configuration hierarchy allows each lower level to override the BFD setting of the upper level. For example, if you enable BFD for an entire FortiGate, you can disable BFD for an interface or for BGP.



Echo mode and authentication are not supported for BFD on the FortiGate.

---

BFD can be enabled per device, VDOM, or interface. Once enabled, a BFD neighbor should be defined. Finally, enable BFD on a route or routing protocol.

### To configure BFD for an entire FortiGate:

```
config system settings
    set bfd {enable | disable}
    set bfd-desired-min-tx <ms>
    set bfd-required-min-rx <ms>
    set bfd-detect-mult <multiplier>
    set bfd-dont-enforce-src-port {enable | disable}
end
```

### To configure BFD for an interface:

```
config system interface
    edit <interface-name>
        set bfd {global | enable | disable}
        set bfd-desired-min-tx <ms>
        set bfd-required-min-rx <ms>
        set bfd-detect-mult <multiplier>
    next
end
```

### To configure BFD neighbors:

```
config router {bfd | bfd6}
    config neighbor
        edit <IP-address>
            set interface <interface-name>
        next
    next
end
```

```
end  
end
```

**To show BFD neighbors:**

```
# get router {info | info6} bfd neighbor
```

**To show BFD requests:**

```
# get router {info | info6} bfd requests
```

## BFD and static routes

BFD for static routes allows you to configure routing failover based on remote path failure detection. BFD removes a static route from the routing table if the FortiGate can't reach the route's destination and returns the route to the routing table if the route's destination is restored.

For example, you can add two static routes with BFD enabled. If one of the routes has a higher priority, all matching traffic uses that route. If BFD determines that the link to the gateway of the route with the higher priority is down, the higher priority route is removed from the routing table and all matching traffic uses the lower priority route. If the link to the gateway for the higher priority route comes back up, BFD adds the route back into the routing table and all matching traffic switches to use the higher priority route.


You can configure BFD for IPv4 and IPv6 static routes.

**To configure BFD for static routes:**

```
config router {static | static6}  
  edit <sequence-number>  
    set bfd {enable | disable}  
    set device <gateway-out-interface>  
  next  
end
```

## Example

The following example demonstrates the configuration of static routes between two FortiGates. There is a host behind FortiGate 2 with an IP address of 1.1.1.1. FortiGate 1 has multiple paths to reach the host.

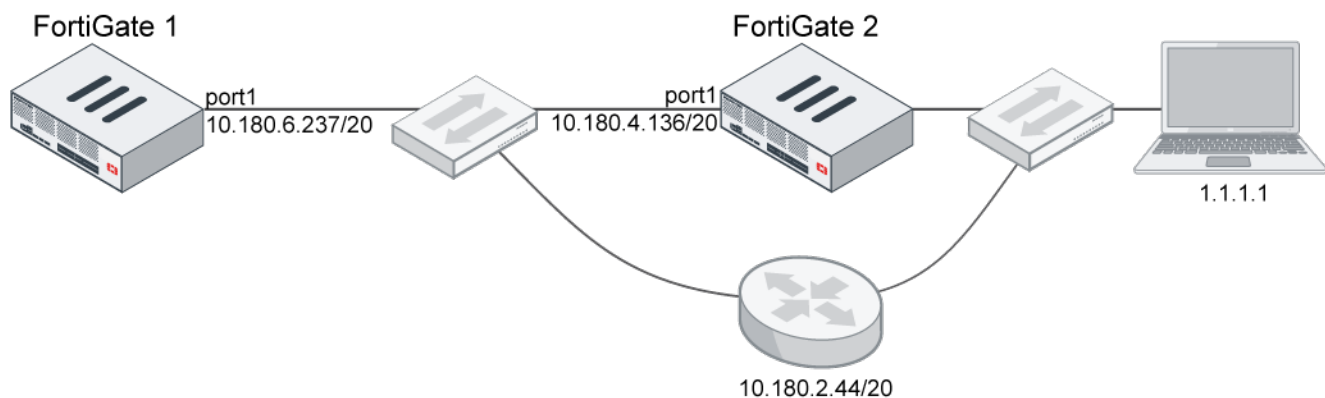

**To configure static routes:****1. Configure FortiGate 1:**

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 10.180.6.237 255.255.240.0
    set allowaccess ping
    set bfd enable
  next
end
config router bfd
  config neighbor
    edit 10.180.4.136
      set interface "port1"
    next
  end
end
```

**2. Configure FortiGate 2:**

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 10.180.4.136 255.255.240.0
    set allowaccess ping
    set bfd enable
  next
end
config router bfd
  config neighbor
    edit 10.180.6.237
      set interface "port1"
    next
  end
end
```

**3. Configure two static routes:**

```
config router static
  edit 2
    set dst 1.1.1.1 255.255.255.255
    set gateway 10.180.4.136
    set device "port1"
    set bfd enable
  next
  edit 3
    set dst 1.1.1.1 255.255.255.255
    set gateway 10.180.2.44
    set distance 20
    set device "port1"
  next
end
```

**4. Confirm that BFD neighborship is established:**



```
# get router info bfd neighbor
OurAddress      NeighAddress    State      Interface      LDesc/RDesc
10.180.6.237    10.180.4.136    UP         port1          1/1
```

##### 5. Review the active route in the routing table:

```
# get router info routing-table all
S      1.1.1.1/32 [10/0] via 10.180.4.136, port1
C      10.180.0.0/20 is directly connected, port1
```



The route with the lower distance is preferred in the routing table.

If port1 on FortiGate 2 goes down or FortiGate 1 is unable to reach 10.180.4.126, the BFD neighborship will go down.

```
# get router info bfd neighbor
OurAddress      NeighAddress    State      Interface      LDesc/RDesc
10.180.6.237    10.180.4.136    DOWN       port1          1/1
```

With BFD neighborship down, the FortiGate is unable to reach 1.1.1.1/32 through gateway 10.180.4.136. The routing table will be updated so that the route through gateway 10.180.2.44 is active in the routing table.

```
# get router info routing-table all
S      1.1.1.1/32 [20/0] via 10.180.2.44, port1
C      10.180.0.0/20 is directly connected, port1
```

BFD removes a static route from the routing table if the FortiGate cannot reach the route's destination. The static route will be returned to the routing table if the route's destination is restored.

## BFD and OSPF

You can configure BFD for Open Shortest Path First (OSPF) on a FortiGate. FortiGate supports BFD for OSPF for both IPv4 and IPv6. BFD must be configured globally and per interface.

### To configure BFD for OSPF:

```
config router {ospf | ospf6}
    set bfd {enable | disable}
end
```

### To enable BFD on a specific OSPF interface:

```
config router {ospf | ospf6}
    set bfd enable
    config {ospf-interface | ospf6-interface}
        edit <ID>
            set bfd {global | enable | disable}
            set area-id <IP address>
        next
    end
end
```

If BFD is configured when OSPF is not, no BFD packets will be sent. When both BFD and OSPF are configured, the neighbors for both will be the same. Use the following commands to confirm that the neighbor IP addresses match:

```
# get router info ospf neighbor
# get router info bfd neighbor
```

## BFD and BGP

While BGP can detect route failures, BFD can be configured to detect these failures more quickly, which allows for faster responses and improved convergence. This can be balanced with the bandwidth BFD uses in its frequent route checking.

The `config router bgp` commands allow you to set the addresses of the neighbor units that are also running BFD. Both units must be configured with BFD in order to use it.

### To configure BFD for BGP:

```
config router bgp
  config neighbor
    edit <neighbor-IP-address>
      set bfd {enable | disable}
    next
  end
end
```

## BFD for Multihop paths

FortiGate BFD can support neighbors connected over multiple hops. When BFD is down, BGP sessions will be reset and will try to re-establish neighbor connection immediately. See [BFD for multihop path for BGP on page 453](#) for more information.

### To configure BFD for multihop paths:

```
config router {bfd | bfd6}
  config multihop-template
    edit <ID>
      set src <IP address/netmask>
      set dst <IP address/netmask>
      set bfd-desired-min-tx <integer>
      set bfd-required-min-rx <integer>
      set bfd-detect-mult <integer>
      set auth-mode {none | md5}
      set md5-key <password>
    next
  end
end
```

## Troubleshooting BFD

You can troubleshoot BFD using the following commands:

```
# get router {info | info6} bfd neighbor
# get router {info | info6} bfd requests
# diagnose sniffer packet any <filter> <sniffer count>
```

```
# diagnose debug application bfdd <debug level>
# diagnose debug enable
```

## BFD for multihop path for BGP


In BFD, a FortiGate can support neighbors connected over multiple hops. When BFD is down, BGP sessions are reset and will try to immediately re-establish neighbor connections. Previously, BFD was only supported when two routers or FortiGates were directly connected on the same network.

```
config router {bfd | bfd6}
  config multihop-template
    edit <ID>
      set src <class_IP/netmask>
      set dst <class_IP/netmask>
      set bfd-desired-min-tx <integer>
      set bfd-required-min-rx <integer>
      set bfd-detect-mult <integer>
      set auth-mode {none | md5}
      set md5-key <password>
    next
  end
end
```

src <class_IP/netmask>	Enter the source prefix.
dst <class_IP/netmask>	Enter the destination prefix.
bfd-desired-min-tx <integer>	Set the BFD desired minimal transmit interval, in milliseconds (100 - 30000, default = 250).
bfd-required-min-rx <integer>	Set the BFD required minimal transmit interval, in milliseconds (100 - 30000, default = 250).
bfd-detect-mult <integer>	Set the BFD detection multiplier (3 - 50, default = 3).
auth-mode {none   md5}	Set the authentication mode (none or meticulous MD5).
md5-key <password>	Enter the password.

## Example

This example includes IPv4 and IPv6 BFD neighbor configurations. The BFD neighbor is also a BGP neighbor that is in a different AS.

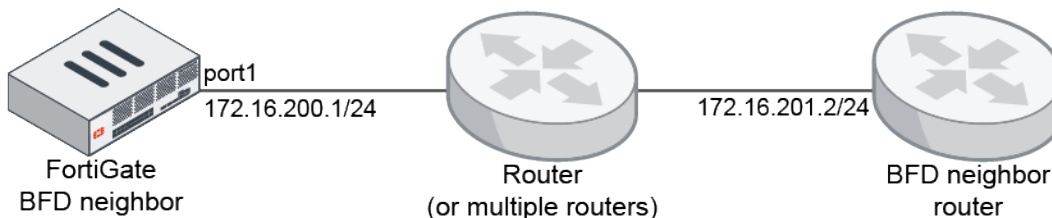

**To configure BFD with multihop BGP paths:****1. Enable BFD on all interfaces:**

```
config system settings
    set bfd enable
end
```

**2. Enable BFD on port1 and ignore the global configuration:**

```
config system interface
    edit "port1"
        set bfd enable
    next
end
```

**3. Configure the BGP neighbors:**

```
config router bgp
    set as 65412
    set router-id 1.1.1.1
    config neighbor
        edit "172.16.201.2"
            set bfd enable
            set ebgp-enforce-multihop enable
            set soft-reconfiguration enable
            set remote-as 65050
        next
        edit "2000:172:16:201::2"
            set bfd enable
            set ebgp-enforce-multihop enable
            set soft-reconfiguration enable
            set remote-as 65050
        next
    end
end
```

**4. Configure the IPv4 BFD:**

```
config router bfd
    config multihop-template
        edit 1
            set src 172.16.200.0 255.255.255.0
            set dst 172.16.201.0 255.255.255.0
            set auth-mode md5
            set md5-key *****
        next
    end
end
```

**5. Configure the IPv6 BFD:**

```
config router bfd6
    config multihop-template
        edit 1
            set src 2000:172:16:200::/64
            set dst 2000:172:16:201::/64
        next
    end
end
```

```

end
end

```

## Testing the connection

### 1. Verify the BFD status for IPv4 and IPv6:

```

# get router info bfd requests
BFD Peer Requests:
  client types(ct in 0x): 01=external 02=static
                        04=ospf 08=bgp 10=pim-sm
src=172.16.200.1      dst=172.16.201.2      ct=08 ifi=9 type=SM

# get router info bfd neighbor
OurAddress      NeighAddress      State      Interface      LDesc/RDesc
172.16.200.1    172.16.201.2    UP         port1          5/3/M

# get router info6 bfd requests
BFD Peer Requests:
  client types(ct in 0x): 01=external 02=static
                        04=ospf 08=bgp 10=pim-sm
src=2000:172:16:200::1
dst=2000:172:16:201::2
ct=08 ifi=9 type=SM

# get router info6 bfd neighbor
OurAddress: 2000:172:16:200::1
NeighAddress: 2000:172:16:201::2
State: UP Interface: port1 Desc: 6/4 Multi-hop

```

### 2. Verify the BGP status and the BGP routing table:

```

# get router info bgp summary
VRF 0 BGP router identifier 1.1.1.1, local AS number 65412
BGP table version is 11
3 BGP AS-PATH entries
0 BGP community entries

Neighbor      V      AS MsgRcvd MsgSent   TblVer  InQ  OutQ  Up/Down  State/PfxRcd
172.16.201.2    4      65050    185     187      10    0    0 00:54:20        4
2000:172:16:201::2 4      65050    159     160      10    0    0 00:54:24        4

Total number of neighbors 2

# get router info routing-table bgp
Routing table for VRF=0
B      172.28.1.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:54:32
B      172.28.2.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:54:32
B      172.28.5.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:54:32
B      172.28.6.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:54:32

# get router info6 bgp summary
VRF 0 BGP router identifier 1.1.1.1, local AS number 65412
BGP table version is 8
3 BGP AS-PATH entries

```

```
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
172.16.201.2	4	65050	185	187	7	0	0	00:54:24	3
2000:172:16:201::2	4	65050	159	160	7	0	0	00:54:28	3

```
Total number of neighbors 2
```

```
# get router info6 routing-table bgp
```

```
Routing table for VRF=0
```

```
B 2000:172:28:1::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:54:40
```

```
B 2000:172:28:2::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:54:40
```

```
B 2000:172:28:3::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:54:40
```

### 3. Simulate a disruption to the BFD connection. The BFD neighbor is lost:

```
# get router info bfd neighbor
```

OurAddress	NeighAddress	State	Interface	LDesc/RDesc

```
# get router info6 bfd neighbor
```

### 4. The BGP neighbor is reset, and the FortiGate attempts to re-establish a connection with the neighbor. The timers are reset once the neighbor connection is re-established:

```
# get router info bgp summary
```

```
VRF 0 BGP router identifier 1.1.1.1, local AS number 65412
```

```
BGP table version is 12
```

```
4 BGP AS-PATH entries
```

```
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
172.16.201.2	4	65050	189	192	11	0	0	00:00:11	4
2000:172:16:201::2	4	65050	165	167	12	0	0	00:00:08	4

```
Total number of neighbors 2
```

```
# get router info6 bgp summary
```

```
VRF 0 BGP router identifier 1.1.1.1, local AS number 65412
```

```
BGP table version is 10
```

```
4 BGP AS-PATH entries
```

```
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
172.16.201.2	4	65050	189	192	8	0	0	00:00:15	3
2000:172:16:201::2	4	65050	165	167	9	0	0	00:00:12	3

```
Total number of neighbors 2
```

### 5. The BGP routes are learned again, and there are new timers in the route tables:

```
# get router info routing-table bgp
```

```
Routing table for VRF=0
```

```
B 172.28.1.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:00:15
```

```
B 172.28.2.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
```

```

00:00:15
B      172.28.5.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:00:15
B      172.28.6.0/24 [20/0] via 172.16.201.2 (recursive via 172.16.200.4, port1),
00:00:15

# get router info6 routing-table bgp
Routing table for VRF=0
B      2000:172:28:1::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:00:13
B      2000:172:28:2::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:00:13
B      2000:172:28:3::/64 [20/0] via 2000:172:16:201::2 (recursive via
2000:172:16:200::4, port1), 00:00:13

```

## Routing objects

The following objects can be configured from the *Network > Routing Objects* page:

- [Route maps on page 457](#)
- [Access lists on page 460](#)
- [Prefix lists on page 462](#)
- [AS path lists on page 464](#)
- [Community lists on page 465](#)

## Route maps

Route maps are a powerful tool to apply custom actions to dynamic routing protocols based on specific conditions. They are used primarily in BGP to manipulate routes advertised by the FortiGate (`route-map-out`) or received routes from other BGP routers (`route-map-in`).

Route maps can be used in OSPF for conditional `default-information-originate`, filtering external routes, or matching specific routes for redistribution. Similarly, route maps can be used by RIP to match routes for redistribution.

A route map may have multiple rules that are processed from the top down. Each rule has an action to permit or deny. The rules have criteria for matching a route based on various attributes, or setting attributes based on a matched route.

For example, a route map can be used to match BGP routes with a certain community string, and then set an AS path to the matching route. This can be applied to a BGP neighbor by configuring the route map in setting for that neighbor.

### To configure a route map that matches criteria based on other routing objects:

```

config router route-map
  edit <name>
    config rule
      edit <id>
        set action {permit | deny}
        set match-as-path <string>
        set match-community <string>
        set match-ip-address <string>
        set match-ip6-address <string>
        set match-ip-nexthop <string>
        set match-ip6-nexthop <string>

```

```

        next
    end
next
end

```

<code>match-as-path &lt;string&gt;</code>	Match a BGP AS path list.
<code>match-community &lt;string&gt;</code>	Match a BGP community list.
<code>match-ip-address &lt;string&gt;</code>	Match an IPv4 address permitted by <code>access-list</code> or <code>prefix-list</code> .
<code>match-ip6-address &lt;string&gt;</code>	Match an IPv6 address permitted by <code>access-list6</code> or <code>prefix-list6</code> .
<code>match-ip-nexthop &lt;string&gt;</code>	Match a next hop IPv4 address passed by <code>access-list</code> or <code>prefix-list</code> .
<code>match-ip6-nexthop &lt;string&gt;</code>	Match a next hop IPv6 address passed by <code>access-list6</code> or <code>prefix-list6</code> .

Route maps can be used by various routing protocols, such as RIP, OSPF, and BGP.

#### To use a route map with RIP:

```

config router rip
    config redistribute
        edit <name>
            set routemap <string>
        next
    end
end

```

#### To use a route map with OSPF:

```

config router ospf
    set default-information-route-map <string>
    set distribute-route-map-in <string>
    config redistribute <string>
        set routemap <string>
    end
end

```

<code>default-information-route-map &lt;string&gt;</code>	Enter the default information route map.
<code>distribute-route-map-in &lt;string&gt;</code>	Enter the route map to filter incoming external routes.
<code>redistribute &lt;string&gt;</code>	Configure the redistribute protocol.

#### To use a route map with BGP:

```

config router bgp
    config neighbor
        edit <ip>
            set route-map-in <string>
            set route-map-in6 <string>
            set route-map-in-vpnv4 <string>
            set route-map-out <string>
        end
    end
end

```



```

        set route-map-out-preferable <string>
        set route-map-out6 <string>
        set route-map-out6-preferable <string>
        set route-map-out-vpnv4 <string>
        set route-map-out-vpnv4-preferable <string>
    next
end
config network
    edit <id>
        set prefix <IP/netmask>
        set route-map <string>
    next
end
config redistribute <string>
    set route-map <string>
end
end

```

route-map-in <string>	Enter the IPv4 inbound route map filter.
route-map-in6 <string>	Enter the IPv6 inbound route map filter.
route-map-in-vpnv4 <string>	Enter the VPNv4 inbound route map filter.
route-map-out <string>	Enter the IPv4 outbound route map filter.
route-map-out-preferable <string>	Enter the IPv4 outbound route map filter if the peer is preferred.
route-map-out6 <string>	Enter the IPv6 outbound route map filter.
route-map-out6-preferable <string>	Enter the IPv6 outbound route map filter if the peer is preferred.
route-map-out-vpnv4 <string>	Enter the VPNv4 outbound route map filter.
route-map-out-vpnv4- preferable <string>	Enter the VPNv4 outbound route map filter if the peer is preferred.
route-map <string>	Enter the route map to modify the generated route.
redistribute <string>	Configure the redistribute protocol.

### To use a route map with BGP conditional advertisement:

```

config router bgp
    set as <AS_number>
    config neighbor
        edit <ip>
            set remote-as <AS_number>
            config conditional-advertise
                edit <advertise-routemap>
                    set condition-routemap <name1>, <name2>, ...
                    set condition-type {exist | non-exist}
                next
            end
        next
    next
end

```

```

    end
end

```

<code>&lt;advertise-routemap&gt;</code>	Edit the advertising route map.
<code>condition-routemap</code> <code>&lt;name1&gt;, &lt;name2&gt;,</code> <code>...</code>	Enter the list of conditional route maps.

## Access lists

Access lists are simple lists used for filtering routes based on a prefix consisting of an IPv4 or IPv6 address and netmask.

### To configure an IPv4 access list:

```

config router access-list
    edit <name>
        config rule
            edit <id>
                set action {permit | deny}
                set prefix <IPv4_address>
                set wildcard <wildcard_filter>
                set exact-match {enable | disable}
            next
        end
    next
end

```

### To configure an IPv6 access list:

```

config router access-list6
    edit <name>
        config rule
            edit <id>
                set action {permit | deny}
                set prefix <IPv6_address>
                set exact-match {enable | disable}
            next
        end
    next
end

```

In RIP, an access list can be used in the `distribute-list` setting to filter received or advertised routes, or in an `offset-list` to offset the hop count metric for a specific prefix.

### To use an access list in RIP:

```

config router rip
    config distribute-list
        edit <id>
            set direction {in | out}
            set listname <string>
        next
    end

```

```

    config offset-list
        edit <id>
            set direction {in | out}
            set access-list <string>
            set offset <integer>
        next
    end
end

```

listname <string>	Enter the distribute access or prefix list name.
access-list <string>	Enter the access list name.

In OSPF, an access list can be used in the `distribute-list-in` setting to act as a filter to prevent a certain route from being inserted into the routing table. An access list can also be used in the `distribute-list` to filter the routes that can be distributed from other protocols.

### To use an access list in OSPF:

```

config router ospf
    set distribute-list-in <string>
    config distribute-list
        edit <id>
            set access-list <string>
            set protocol {connected | static | rip}
        next
    end
end

```

distribute-list-in <string>	Enter the filter for incoming routes.
access-list <string>	Enter the access list name.

In BGP, an access list can be used to filter updates from a neighbor or to a neighbor.

### To use an access list in BGP:

```

config router bgp
    config neighbor
        edit <ip>
            set distribute-list-in <string>
            set distribute-list-in6 <string>
            set distribute-list-in-vpnv4 <string>
            set distribute-list-out <string>
            set distribute-list-out6 <string>
            set distribute-list-out-vpnv4 <string>
        next
    end
end

```

distribute-list-in <string>	Enter the filter for IPv4 updates from this neighbor.
--------------------------------	---

<code>distribute-list-in6</code> <code>&lt;string&gt;</code>	Enter the filter for IPv6 updates from this neighbor.
<code>distribute-list-in-vpnv4</code> <code>&lt;string&gt;</code>	Enter the filter for VPNv4 updates from this neighbor.
<code>distribute-list-out</code> <code>&lt;string&gt;</code>	Enter the filter for IPv4 updates to this neighbor.
<code>distribute-list-out6</code> <code>&lt;string&gt;</code>	Enter the filter for IPv6 updates to this neighbor.
<code>distribute-list-out-vpnv4</code> <code>&lt;string&gt;</code>	Enter the filter for VPNv4 updates to this neighbor.

In a route map, an access list can be used to match IP addresses and next hops.

### To use an access list in a route map:

```
config router route-map
  edit <name>
    config rule
      edit <id>
        set match-ip-address <string>
        set match-ip6-address <string>
        set match-ip-nexthop <string>
        set match-ip6-nexthop <string>
      next
    end
  next
end
```

<code>match-ip-address &lt;string&gt;</code>	Match an IPv4 address permitted by <code>access-list</code> or <code>prefix-list</code> .
<code>match-ip6-address</code> <code>&lt;string&gt;</code>	Match an IPv6 address permitted by <code>access-list6</code> or <code>prefix-list6</code> .
<code>match-ip-nexthop &lt;string&gt;</code>	Match a next hop IPv4 address passed by <code>access-list</code> or <code>prefix-list</code> .
<code>match-ip6-nexthop</code> <code>&lt;string&gt;</code>	Match a next hop IPv6 address passed by <code>access-list6</code> or <code>prefix-list6</code> .

## Prefix lists

Similar to access lists, prefix lists are simple lists used for filtering routes based on a prefix consisting of an IPv4 or IPv6 address and netmask, but they use settings to specify the minimum (`ge`, greater than or equal) and maximum (`le`, less than or equal) prefix length to be matched. For example, a prefix of 10.0.0.0/8 with a `ge` of 16 will match anything in the 10.0.0.0/8 network with /16 or above; 10.10.0.0/16 will match, and 10.10.0.0/12 will not match.

### To configure an IPv4 prefix list:

```
config router prefix-list
  edit "prefix-list1"
    config rule
      edit 1
        set action {permit | deny}
        set prefix <IPv4_address>
```

```

        set ge <integer>
        set le <integer>
    next
end
next
end

```

### To configure an IPv6 prefix list:

```

config router prefix-list6
    edit "prefix-list-IPv6"
        config rule
            edit 1
                set action {permit | deny}
                set prefix6 <IPv6_address>
                set ge <integer>
                set le <integer>
            next
        end
    next
end

```

In RIP, an prefix list can be used in the `distribute-list` setting to filter received or advertised routes.

### To use a prefix list in RIP:

```

config router rip
    config distribute-list
        edit <id>
            set listname <string>
        next
    end
end

```

<code>listname &lt;string&gt;</code>	Enter the distribute access or prefix list name.
--------------------------------------	--

In OSPF, a prefix list can be used in the `distribute-list-in` setting to act as a filter to prevent a certain route from being inserted into the routing table.

### To use a prefix list in OSPF:

```

config router ospf
    set distribute-list-in <string>
end

```

<code>distribute-list-in &lt;string&gt;</code>	Enter the filter for incoming routes.
--	---------------------------------------

In BGP, a prefix list can be used to filter updates from a neighbor or to a neighbor.

### To use a prefix list in BGP:

```

config router bgp
    config neighbor
        edit <ip>

```

```

        set prefix-list-in <string>
        set prefix-list-in6 <string>
        set prefix-list-in-vpnv4 <string>
        set prefix-list-out <string>
        set prefix-list-out6 <string>
        set prefix-list-out-vpnv4 <string>
    next
end
end

```

prefix-list-in <string>	Enter the IPv4 inbound filter for updates from this neighbor.
prefix-list-in6 <string>	Enter the IPv6 inbound filter for updates from this neighbor.
prefix-list-in-vpnv4 <string>	Enter the inbound filter for VPNv4 updates from this neighbor.
prefix-list-out <string>	Enter the IPv4 outbound filter for updates to this neighbor.
prefix-list-out6 <string>	Enter the IPv6 outbound filter for updates to this neighbor.
prefix-list-out-vpnv4 <string>	Enter the outbound filter for VPNv4 updates to this neighbor.

In a route map, a prefix list can be used to match IP addresses and next hops.

### To use a prefix list in a route map:

```

config router route-map
    edit <name>
        config rule
            edit <id>
                set match-ip-address <string>
                set match-ip6-address <string>
                set match-ip-nexthop <string>
                set match-ip6-nexthop <string>
            next
        end
    next
end

```

match-ip-address <string>	Match an IPv4 address permitted by access-list or prefix-list.
match-ip6-address <string>	Match an IPv6 address permitted by access-list6 or prefix-list6.
match-ip-nexthop <string>	Match a next hop IPv4 address passed by access-list or prefix-list.
match-ip6-nexthop <string>	Match a next hop IPv6 address passed by access-list6 or prefix-list6.

## AS path lists

AS path lists use regular expressions to compare and match the AS\_PATH attribute for a BGP route. They can be used to filter inbound or outbound routes from a BGP neighbor, or as matching criteria in a route map to match an AS\_PATH in a BGP route.

**To configure an AS path list:**

```

config router aspath-list
  edit <name>
    config rule
      edit <id>
        set action {deny | permit}
        set regexp <string>
      next
    end
  next
end

```

**To use an AS path list in BGP:**

```

config router bgp
  config neighbor
    edit <ip>
      set filter-list-in <string>
      set filter-list-in6 <string>
      set filter-list-out <string>
      set filter-list-out6 <string>
    next
  end
end

```

filter-list-in <string>	Enter the BGP filter for IPv4 inbound routes.
filter-list-in6 <string>	Enter the BGP filter for IPv6 inbound routes.
filter-list-out <string>	Enter the BGP filter for IPv4 outbound routes.
filter-list-out6 <string>	Enter the BGP filter for IPv6 outbound routes.

**To use an AS path list in a route map:**

```

config router route-map
  edit <name>
    config rule
      edit <id>
        set match-as-path <string>
      next
    end
  next
end

```

match-as-path <string>	Match a BGP AS path list.
------------------------	---------------------------

**Community lists**

Community lists provide a means to filter BGP routes using a community string. They can be applied in a route map to match routes that have the community string defined in the community list.

**To configure a community list:**

```
config router community-list
  edit <name>
    set type {standard | expanded}
    config rule
      edit <id>
        set action {deny | permit}
        set regexp <string>
        set match <string>
      next
    end
  next
end
```

**To use a community list in a route map to match a BGP community:**

```
config router route-map
  edit <name>
    config rule
      edit <id>
        set match-community <string>
      next
    end
  next
end
```

match-community <string> Match a BGP community list.



In an SD-WAN deployment, a remote BGP router or spoke may communicate a preferred interface or path to route traffic using a community string. See [Using BGP tags with SD-WAN rules on page 756](#) and [Controlling traffic with BGP route mapping and service rules on page 762](#) for examples.

## Multicast

The following topics include information about multicast:

- [Multicast routing and PIM support on page 466](#)
- [Configuring multicast forwarding on page 467](#)

### Multicast routing and PIM support

Multicasting (also called IP multicasting) consists of using a single multicast source to send data to many receivers. Multicasting can be used to send data to many receivers simultaneously while conserving bandwidth and reducing network traffic. Multicasting can be used for one-way delivery of media streams to multiple receivers and for one-way data transmission for news feeds, financial information, and so on. Many dynamic routing protocols such as RIPv2, OSPF, and EIGRP use multicasting to share hello packets and routing information.



A FortiGate can operate as a Protocol Independent Multicast (PIM) version 2 router. FortiGates support PIM sparse mode ([RFC 4601](#)) and PIM dense mode ([RFC 3973](#)), and can service multicast servers or receivers on the network segment to which a FortiGate interface is connected. Multicast routing is not supported in transparent mode.

To support PIM communications, the sending and receiving applications, and all connecting PIM routers in between, must be enabled with PIM version 2. PIM can use static routes, RIP, OSPF, or BGP to forward multicast packets to their destinations. To enable source-to-destination packet delivery, sparse mode or dense mode must be enabled on the PIM router interfaces. Sparse mode routers cannot send multicast messages to dense mode routers. If the FortiGate is located between a source and a PIM router, between two PIM routers, or is connected directly to a receiver, you must manually create a multicast policy to pass encapsulated (multicast) packets or decapsulated data (IP traffic) between the source and destination.

## PIM domains

A PIM domain is a logical area comprising a number of contiguous networks. The domain contains at least one bootstrap router (BSR), and if sparse mode is enabled, a number of rendezvous points (RPs) and designated routers (DRs). When PIM is enabled, the FortiGate can perform any of these functions at any time as configured.

A PIM domain can be configured in the GUI by going to *Network > Multicast*, or in the CLI using `config router multicast`. Note that PIM version 2 must be enabled on all participating routers between the source and receivers. Use `config router multicast` to set the global operating parameters.

When PIM is enabled, the FortiGate allocates memory to manage mapping information. The FortiGate communicates with neighboring PIM routers to acquire mapping information and, if required, processes the multicast traffic associated with specific multicast groups.

Instead of sending multiple copies of generated IP traffic to more than one specific IP destination address, PIM-enabled routers encapsulate the data and use a Class D multicast group address (224.0.0.0 to 239.255.255.255) to forward multicast packets to multiple destinations. A single stream of data can be sent because one destination address is used. Client applications receive multicast data by requesting that the traffic destined for a certain multicast group address be delivered to them.

## Configuring multicast forwarding

There is sometimes confusion between the terms forwarding and routing. These two functions should not take place at the same time. Multicast forwarding should be enabled when the FortiGate is in NAT mode and you want to forward multicast packets between multicast routers and receivers. However, this function should not be enabled when the FortiGate itself is operating as a multicast router, or has an applicable routing protocol that uses multicast.

Multicast forwarding is not supported on enhanced MAC VLAN interfaces. To use multicast with enhanced MAC VLAN interfaces, use PIM ([Multicast routing and PIM support on page 466](#)).

There are two steps to configure multicast forwarding:

1. [Enabling multicast forwarding on page 467](#)
2. [Configuring multicast policies on page 468](#)

## Enabling multicast forwarding

Multicast forwarding is enabled by default. If a FortiGate is operating in transparent mode, adding a multicast policy enables multicast forwarding. In NAT mode you must use the `multicast-forward` setting to enable or disable

multicast forwarding.

## Multicast forwarding in NAT mode

When `multicast-forward` is enabled, the FortiGate forwards any multicast IP packets in which the TTL is 2 or higher to all interfaces and VLAN interfaces, except the receiving interface. The TTL in the IP header will be reduced by 1. Even though the multicast packets are forwarded to all interfaces, you must add multicast policies to allow multicast packets through the FortiGate.

### To enable multicast forwarding in NAT mode:

```
config system settings
    set multicast-forward enable
end
```

## Prevent the TTL for forwarded packets from being changed

You can use the `multicast-ttl-notchange` option so that the FortiGate does not increase the TTL value for forwarded multicast packets. Use this option only if packets are expiring before reaching the multicast router.

### To prevent the TTL for forwarded packets from being changed:

```
config system settings
    set multicast-ttl-notchange enable
end
```

## Disable multicast traffic from passing through the FortiGate without a policy check in transparent mode

In transparent mode, the FortiGate does not forward frames with multicast destination addresses. The FortiGate should not interfere with the multicast traffic used by routing protocols, streaming media, or other multicast communication. To avoid any issues during transmission, you can disable `multicast-skip-policy` and configure multicast security policies.

### To disable multicast traffic from passing through the FortiGate without a policy check in transparent mode:

```
config system settings
    set multicast-skip-policy disable
end
```

## Configuring multicast policies

Multicast packets require multicast policies to allow packets to pass from one interface to another. Similar to firewall policies, in a multicast policy you specify the source and destination interfaces, and the allowed address ranges for the source and destination addresses of the packets. You can also use multicast policies to configure source NAT and destination NAT for multicast packets.

Keep the following in mind when configuring multicast policies:

- The matched forwarded (outgoing) IP multicast source IP address is changed to the configured IP address.
- The `snat` setting is optional. Use it when SNAT is needed.



IPv4 and IPv6 multicast policies can be configured in the GUI. Go to *System > Feature Visibility*, and enable *Multicast Policy* and *IPv6*.

## Sample basic policy

In this basic policy, multicast packets received on an interface are flooded unconditionally to all interfaces on the forwarding domain, except the incoming interface.

```
config firewall multicast-policy
  edit 1
    set srcintf "any"
    set dstintf "any"
    set srcaddr "all"
    set dstaddr "all"
  next
end
```

The destination address (`dstaddr`) is a multicast address object. The `all` option corresponds to all multicast addresses in the range 224.0.0.0-239.255.255.255.

## Sample policy with specific source and destination interfaces

This multicast policy only applies to the source port `wan1` and the destination port `internal`.

```
config firewall multicast-policy
  edit 1
    set srcintf "wan1"
    set dstintf "internal"
    set srcaddr "all"
    set dstaddr "all"
  next
end
```

## Sample policy with specific source address object

In this policy, packets are allowed to flow from `wan1` to `internal`, and sourced by the address 172.20.120.129, which is represented by the `example_addr-1` address object.

```
config firewall multicast-policy
  edit 1
    set srcintf "wan1"
    set dstintf "internal"
    set srcaddr "example_addr-1"
    set dstaddr "all"
  next
end
```

## Sample detailed policy

This policy accepts multicast packets that are sent from a PC with IP address 192.168.5.18 to destination address range 239.168.4.0-255. The policy allows the multicast packets to enter the `internal` interface and then exit the `external` interface. When the packets leave the external interface, their source address is translated to 192.168.18.10.

```

config firewall address
    edit "192.168.5.18"
        set subnet 192.168.5.18 255.255.255.255
    next
end

config firewall multicast-address
    edit "239.168.4.0"
        set start-ip 239.168.4.0
        set end-ip 239.168.4.255
    next
end

config firewall multicast-policy
    edit 1
        set srcintf "internal"
        set dstintf "external"
        set srcaddr "192.168.5.18"
        set dstaddr "239.168.4.0"
        set snat enable
        set snat-ip 192.168.18.10
    next
end

```



To configure multicast policies in the GUI, enable *Multicast Policy* in *System > Feature Visibility*.

## Using multi VDOM mode

When using multi VDOM mode, it is important to avoid causing a multicast network loop by creating an all-to-all multicast policy. By default, on models that support NPU virtual links, changing the `vdom-mode` to `multi-vdom` will create a pair of `np0_vlink0` and `np0_vlink1` interfaces in the same root VDOM. By virtue of the all-to-all multicast policy and the fact the `np0_vlink` interfaces are virtually connected, it forms a multicast network loop.

Therefore, when using multi VDOM mode:

1. Ensure there is no existing all-to-all multicast policy before changing to multi VDOM mode.
2. If an all-to-all multicast policy must be defined, ensure that no two connected interfaces (such as `np0_vlink0` and `np0_vlink1`) belong in the same VDOM.

### This configuration will result in a multicast loop:

```

config system global
    set vdom-mode multi-vdom
end
config firewall multicast-policy
    edit 1
        set logtraffic enable
        set srcintf "any"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
    next
end

```

```

end
show system interface
config system interface
    edit "npu0_vlink0"
        set vdom "root"
        set type physical
    next
    edit "npu0_vlink1"
        set vdom "root"
        set type physical
    next
end

```

## FortiExtender


There are two configuration modes available on the FortiGate for FortiExtender integration: WAN extension mode and LAN extension mode.



For information about configuring FortiExtender, see the FortiExtender [Admin Guide \(FGT-Managed\)](#) and [Admin Guide \(Standalone\)](#).

### WAN extension mode

In WAN extension mode, the FortiExtender works as an extended WAN interface in IP pass-through mode. The FortiGate manages FortiExtender over the CAPWAP protocol in IP pass-through mode, and is integrated into FortiOS as a manageable interface.

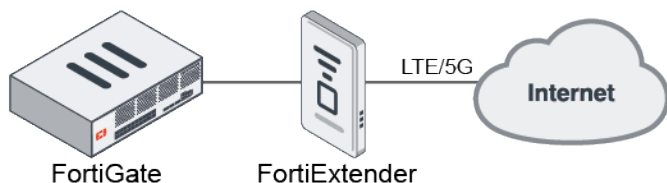


Sample configurations in WAN extension mode could include connecting a FortiExtender to two FortiGates in HA active-passive mode, or connecting two FortiExtenders to two FortiGates in HA active-active mode to provide dual active redundancy for wireless WAN access.

For more information, see [FortiExtender and FortiGate integration](#) in the FortiExtender (Managed) Administration Guide.

### LAN extension mode

The LAN extension configuration mode allows FortiExtender to provide remote thin edge connectivity back to the FortiGate over a backhaul connection. A FortiExtender deployed at a remote location will discover the FortiGate access controller (AC) and form an IPsec tunnel (or multiple tunnels when multiple links exist on the FortiExtender) back to the FortiGate. A VXLAN is established over the IPsec tunnels to create an L2 network between the FortiGate and the network behind the remote FortiExtender.

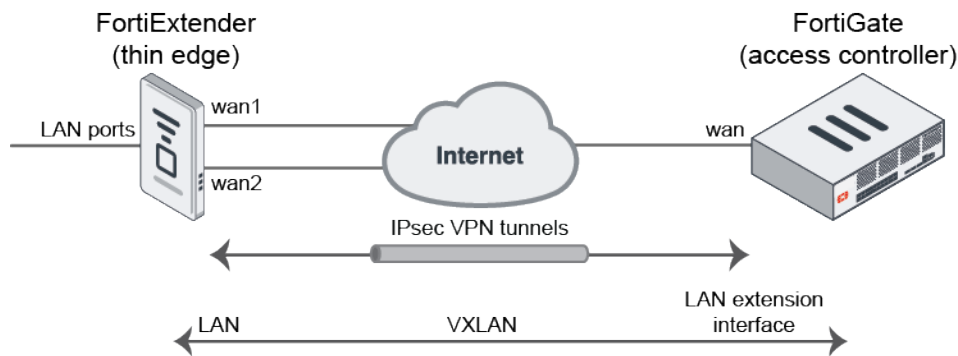

For more information, see [FortiExtender as FortiGate LAN extension](#) in the FortiExtender (Managed) Administration Guide.

## Adding a FortiExtender

To add a FortiExtender to the FortiGate, create a virtual FortiExtender interface, then add a FortiExtender and assign the interface to the modem. Like other interface types, the FortiExtender interface can be used in static routes, SD-WAN (see [Manage dual FortiExtender devices](#)), policies, and other functions.

### To create a virtual FortiExtender interface in the GUI:

1. Go to *Network > Interfaces* and click *Create New > FortiExtender*.
2. Enter a name for the interface.
3. Configure the remaining settings as needed. See [Interface settings on page 149](#) for more details.

The screenshot shows the 'New Interface' configuration window. The 'Name' field contains 'fext'. The 'Type' is set to 'FortiExtender'. Under 'Estimated bandwidth', '1000 kbps Upstream' and '500 kbps Downstream' are selected. In the 'Address' section, 'Retrieve default gateway from server' is checked, 'Distance' is '5', and 'Override internal DNS' is checked. Under 'Administrative Access', for 'IPv4', 'Speed Test', 'PING', and 'SNMP' are checked. 'HTTPS' is checked under the 'Administrative Access' heading. 'HTTP', 'SSH', 'RADIUS Accounting', 'FMG-Access', and 'FTM' are unchecked. The 'Security Fabric' checkbox is also unchecked. At the bottom, the 'OK' button is green and highlighted.

4. Click *OK*.

### To add a FortiExtender in the GUI:

1. Go to *Network > FortiExtender* and click *Create New > Extenders*.
2. Enter your FortiExtender's serial number in the *Serial number* field.
3. Optionally, set an *Alias* for the FortiExtender.
4. In the *State* section, enable *Authorized*.
5. Set *Interface* to the FortiExtender interface.

6. Configure the remaining setting as required. See the [FortiExtender Administration Guide \(FGT-Managed\)](#) for more information.

7. Click **OK**.
8. In the extenders list, right-click on the FortiExtender and select *Diagnostics and Tools* to review the modem and SIM status, and other details about the FortiExtender.

### To create a virtual FortiExtender interface in the CLI:

```
config system interface
  edit "fext"
    set vdom "root"
    set mode dhcp
    set allowaccess ping https speed-test
    set type fext-wan
    set estimated-upstream-bandwidth 1000
    set estimated-downstream-bandwidth 500
  next
end
```

### To configure the FortiExtender in the CLI:

```
config extender-controller extender
  edit "FX211E0000000000"
    set id "FX211E0000000000"
    set authorized enable
    config modem1
      set ifname "fext"
    end
  next
end
```

### To verify the modem settings in the CLI:

```
get extender modem-status FX211E0000000000 1
Modem 0:
  physical_port:      2-1.2
  manufacture:       Sierra Wireless, Incorporated
  product:            Sierra Wireless, Incorporated
  ....
```

## Direct IP support for LTE/4G

Direct IP is a public IP address that is assigned to a computing device, which allows the device to directly access the internet.

When an LTE modem is enabled in FortiOS, a DHCP interface is created. As a result, the FortiGate can acquire direct IP (which includes IP, DNS, and gateway) from the LTE network carrier.

Since some LTE modems require users to input the access point name (APN) for the LTE network, the LTE modem configuration allows you to set the APN.



LTE modems can only be enabled by using the CLI.

---

### To enable direct IP support using the CLI:

#### 1. Enable the LTE modem:

```
config system lte-modem
  set status enable
end
```

#### 2. Check that the LTE interface was created:

```
config system interface
  edit "wwan"
    set vdom "root"
    set mode dhcp
    set status down
    set distance 1
    set type physical
    set snmp-index 23
  next
end
```

Shortly after the LTE modem joins its carrier network, `wwan` is enabled and granted direct IP:

```
config system interface
  edit wwan
    get
  name : wwan
  ....
  ip : 100.112.75.43 255.255.255.248
  ....
  status : up
  ....
  defaultgw : enable
  DHCP Gateway : 100.112.75.41
  Lease Expires : Thu Feb 21 19:33:27 2019
  dns-server-override : enable
  Acquired DNS1 : 184.151.118.254
  Acquired DNS2 : 70.28.245.227
  ....
```



PCs can reach the internet via the following firewall policy:

```
config firewall policy
edit 5
    set name "LTE"
    set srcintf "port9"
    set dstintf "wwan"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set fsso disable
    set nat enable
next
end
```

## Sample LTE interface

When an LTE modem is enabled, you can view the LTE interface in the GUI and check the acquired IP, DNS, and gateway.

### To view the LTE interface in the GUI:

1. Go to *Network > Interfaces*.
2. Double-click the LTE interface (*wwan*) to view the properties.
3. Look in the *Address* section to see the *Obtained IP/Netmask*, *Acquired DNS*, and *Default Gateway*.
4. Click *Return*.

### To configure the firewall policy that uses the LTE interface:

1. Go to *Policy & Objects > Firewall Policy*.
2. Edit the LTE policy.
3. In the *Outgoing Interface* field, select the interface (*wwan* in this example).
4. Configure the rest of the policy as needed.

The screenshot shows the 'New Policy' configuration window in FortiGate. The policy is named 'LTE'. The configuration is as follows:

- Name: LTE
- Incoming Interface: modem
- Outgoing Interface: wwan
- Source: all
- Destination: all
- Schedule: always
- Service: ALL
- Action: ACCEPT (checked), DENY, IPsec
- Inspection Mode: Flow-based (selected), Proxy-based
- Firewall/Network Options: NAT is enabled (checked)

The 'Additional Information' panel on the right contains the following links:

- API Preview
- Documentation
- Online Help
- Video Tutorials
- Consolidated Policy Configuration

5. Click OK.

## Limitations

- Most LTE modems have a preset APN in their SIM card. Therefore, the APN does not need to be set in the FortiOS configuration. In cases where the internet cannot be accessed, consult with your carrier and set the APN in the LTE modem configuration (for example, inet.bell.ca):

```
config system lte-modem
    set status enable
    set apn "inet.bell.ca"
end
```

- Some models, such as the FortiGate 30E-3G4G, have built-in LTE modems. In this scenario, the LTE modem is enabled by default. The firewall policy via the LTE interface is also created by default. Once you plug in a SIM card, your network devices can connect to the internet.

### Sample FortiGate 30E-3G4G default configuration:

```
config system lte-modem
    set status enable
    set extra-init ''
    set manual-handover disable
    set force-wireless-profile 0
    set authtype none
    set apn ''
    set modem-port 255
    set network-type auto
    set auto-connect disable
    set gpsd-enabled disable
    set data-usage-tracking disable
    set gps-port 255
end

config firewall policy
....
edit 3
    set srcintf "internal"
```

```
        set dstintf "wan"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

## LLDP reception

Device detection can scan LLDP as a source for device identification, but the FortiGate does not read or store the full information. Enabling LLDP reception allows the FortiGate to receive and store LLDP messages, learn about active neighbors, and makes the LLDP information available via the CLI, REST API, and SNMP.

You need to enable `device-identification` at the interface level, and then `lldp-reception` can be enabled on three levels: globally, per VDOM, or per interface.

### To configure device identification on an interface:

```
config system interface
    edit <port>
        set device-identification enable
    next
end
```

### To configure LLDP reception globally:

```
config system global
    set lldp-reception enable
end
```

### To configure LLDP reception per VDOM:


```
config system setting
    set lldp-reception enable
end
```

### To configure LLDP reception per interface:

```
config system interface
    edit <port>
        set lldp-reception enable
    next
end
```

### To view the LLDP information in the GUI:

1. Go to *Dashboard > Users & Devices*.
2. Expand the *Device Inventory* widget to full screen.

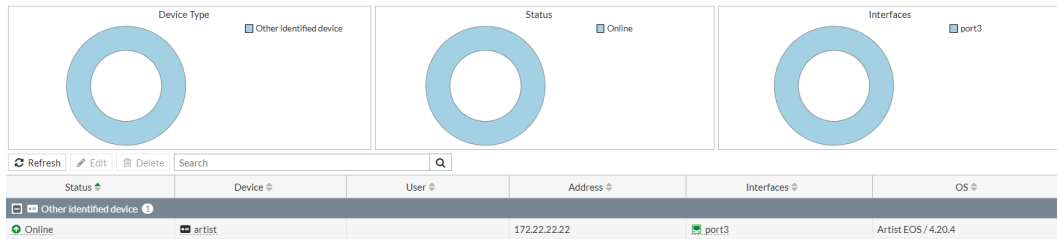

### To view the received LLDP information in the CLI:

```
# diagnose user device list
hosts
  vd root/0 44:0a:a0:0a:0a:0a gen 3 req S/2
  created 10290s gen 1 seen 0s port3 gen 1
  ip 172.22.22.22 src lldp
  type 20 'Other Network Device' src lldp id 155 gen 2
  os 'Artist EOS ' version '4.20.4' src lldp id 155
  host 'artist' src lldp
```

### To view additional information about LLDP neighbors and ports:

```
# diagnose lldprx neighbor {summary | details | clear}
# diagnose lldprx port {details | summary | neighbor | filter}
# diagnose lldprx port neighbor {summary | details}
```

Note that the port index in the output corresponds to the port index from the following command:

```
# diagnose netlink interface list port2 port3 | grep index
if=port2 family=00 type=1 index=4 mtu=1500 link=0 master=0
if=port3 family=00 type=1 index=5 mtu=1500 link=0 master=0
```

### To view the received LLDP information in the REST API:

```
{
  "http_method": "GET",
  "results": [
    {
      "mac": "90:9c:9c:c9:c9:90",
      "chassis_id": "90:9C:9C:C9:C9:90",
      "port": 19,
      "port_id": "port12",
      "port_desc": "port12",
      "system_name": "S124DN3W00000000",
      "system_desc": "FortiSwitch-124D v3.6.6, build0416, 180515 (GA)",
      "ttl": 120,
      "addresses": [
        {
          "type": "ipv4",
          "address": "192.168.1.99"
        }
      ]
    }
  ],
  "vdom": "root",
```

```
"path":"network",
"name":"lldp",
"action":"neighbors",
"status":"success",
"serial":"FG201E4Q00000000",
"version":"v6.2.0",
"build":866
}

{
  "http_method":"GET",
  "results":[
    {
      "name":"port1",
      "rx":320,
      "neighbors":1
    }
  ],
  "vdom":"root",
  "path":"network",
  "name":"lldp",
  "action":"ports",
  "mkey":"port1",
  "status":"success",
  "serial":"FG201E4Q00000000",
  "version":"v6.2.0",
  "build":866
}
```

## Virtual routing and forwarding

Virtual Routing and Forwarding (VRF) is used to divide the FortiGate's routing functionality (layer 3), including interfaces, routes, and forwarding tables, into separate units. Packets are only forwarded between interfaces that have the same VRF.

VDOMs divide the FortiGate into two or more complete and independent virtual units that include all FortiGate functions. VDOMs can be used for routing segmentation, but that should not be the only reason to implement them when a less complex solution (VRFs) can be used. VDOMs also support administration boundaries, but VRFs do not.

Up to 252 VRFs can be configured per VDOM for any device, but only ten VDOMs can be configured by default on a FortiGate (more VDOMs can be configured on larger devices with additional licenses).

- [Implementing VRF on page 480](#)
- [VRF routing support on page 481](#)
- [Route leaking between VRFs with BGP on page 486](#)
- [Route leaking between multiple VRFs on page 489](#)
- [VRF with IPv6 on page 499](#)
- [IBGP and EBGP support in VRF on page 503](#)
- [Support cross-VRF local-in and local-out traffic for local services on page 505](#)

## Implementing VRF

VRFs are always enabled and, by default, all routing is done in VRF 0. To use additional VRFs, assign a VRF ID to an interface. All routes relating to that interface are isolated to that VRF specific routing table. Interfaces in one VRF cannot reach interfaces in a different VRF.

If some traffic does have to pass between VRFs, route leaking can be used. See [Route leaking between VRFs with BGP on page 486](#).



Enable *Advanced Routing* in *System > Feature Visibility* to configure VRFs.

### To configure a VRF ID on an interface in the GUI:

1. Go to *Network > Interfaces* and click *Create New > Interface*.
2. Enter a value in the VRF ID field.
3. Configure the other settings as needed.

4. Click *OK*.
5. To add the VRF column in the interface table, click the gear icon, select *VRF*, and click *Apply*.

Name	Type	IP/Netmask	Administrative Access	VRF	DHCP Clients	DHCP Ranges
face		1.1.1.1/255.255.255.0	PING HTTPS SSH SNMP	0	1	1.1.1.2-1.1.1.254
face		10.1.22.1/255.255.255.0	PING HTTPS SSH SNMP	14		
face		192.168.0.120/255.255.255.255	PING HTTPS SSH SNMP	0		

**To configure a VRF ID on an interface in the CLI:**


```

config system interface
  edit interface42
    ...
    set vrf 14
  next
end

```

**VRF routing support**

VRF supports static routing, OSPF, and BGP. Other routing protocols require using VDOMs.

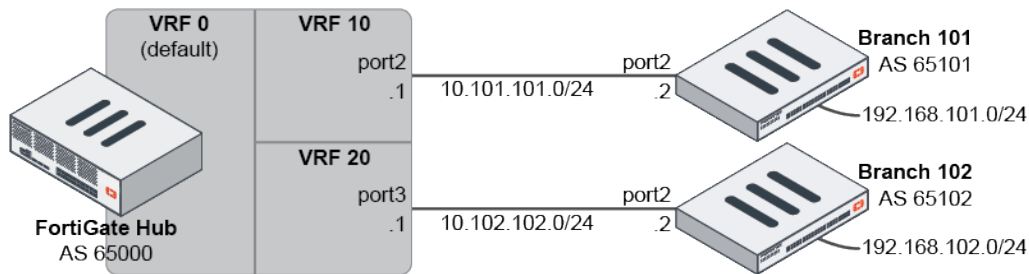**BGP**

In this example, BGP is used to update the VRF that it is neighbors with.

The hub is configured with two neighbors connected to two interfaces. The branches are configured to match the hub, with branch networks configured to redistribute into BGP.

Policies must be created on the hub and branches to allow traffic between them.

**To configure the hub:**

```

config router bgp
  set as 65000
  config neighbor
    edit "10.101.101.2"
      set soft-reconfiguration enable
      set interface "port2"
      set remote-as 65101
      set update-source "port2"
    next
    edit "10.102.102.2"
      set soft-reconfiguration enable
      set interface "port3"
      set remote-as 65102
      set update-source "port3"
    next
  end
end

```

**To configure branch 101:**

```

config router bgp
  set as 65101
  config neighbor
    edit "10.101.101.1"
      set soft-reconfiguration enable
      set interface "port2"
      set remote-as 65000
      set update-source "port2"
    next
  end
  config redistribute connected
    set status enable
  end
end

```

**To configure branch 102:**

```

config router bgp
  set as 65102
  config neighbor
    edit "10.102.102.1"
      set soft-reconfiguration enable
      set interface "port2"
      set remote-as 65000
      set update-source "port2"
    next
  end
  config redistribute connected
    set status enable
  end
end

```

**To verify the BGP neighbors and check the routing table on the hub:**

```

# get router info bgp summary
BGP router identifier 192.168.0.1, local AS number 65000
BGP table version is 2
2 BGP AS-PATH entries
0 BGP community entries

```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/Pf
10.101.101.2	4	65101	4	4	2			0	0
10.102.102.2	4	65102	3	3	1			0	0

```
Total number of neighbors 2
```

```

# get router info routing-table all
Routing table for VRF=0
Codes (..)
S* 0.0.0.0/0 [10/0] via 192.168.0.254, port1
C 10.101.101.0/24 is directly connected, port2
C 10.102.102.0/24 is directly connected, port3
C 192.168.0.0/24 is directly connected, port1

```



```
B      192.168.101.0/24 [20/0] via 10.101.101.2, port2, 00:01:25
B      192.168.102.0/24 [20/0] via 10.102.102.2, port3, 00:00:50
```

### To configure VRF on the hub:

#### 1. Put the interfaces into VRF:

```
config system interface
    edit port2
        set vrf 10
    next
    edit port3
        set vrf 20
    next
end
```

#### 2. Restart the router to reconstruct the routing tables:

```
# execute router restart
```

#### 3. Check the routing tables:

```
# get router info routing-table all
Routing table for VRF=0
Codes (...)
S*      0.0.0.0/0 [10/0] via 192.168.0.254, port1
C      192.168.0.0/24 is directly connected, port1

Routing table for VRF=10
C      10.101.101.0/24 is directly connected, port2
B      192.168.101.0/24 [20/0] via 10.101.101.2, port2, 00:02:25

Routing table for VRF=20
C      10.102.102.0/24 is directly connected, port3
B      192.168.102.0/24 [20/0] via 10.102.102.2, port2, 00:01:50
```

#### 4. Check the BGP summary:

```
# get router info bgp summary
```

```
VRF 10 BGP router identifier 10.101.101.1, local AS number 65000
BGP table version is 1
2 BGP AS-PATH entries
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State
10.101.101.2	4	65101	4	4	2	0	0	0	

```
Total number of neighbors 1
```

```
VRF 10 BGP router identifier 10.101.101.1, local AS number 65000
BGP table version is 1
2 BGP AS-PATH entries
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State
10.102.102.2	4	65102	3	3	1	0	0	0	

Total number of neighbors 1

## OSPF

OSPF routes in VRFs work the same as BGP: the interface that OSPF is using is added to the VRF.

### To configure the hub:

#### 1. Configure OSPF:

```
config router ospf
  set router-id 1.1.1.1
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit Branch101
      set interface "port2"
      set dead-interval 40
      set hello-interval 10
    next
    edit Branch102
      set dead-interval 40
      set hello-interval 10
    next
  end
  config network
    edit 0
      set prefix 10.101.101.0 255.255.255.0
    next
    edit 0
      set prefix 10.102.102.0 255.255.255.0
    next
    edit 0
      set prefix 192.168.1.0 255.255.255.0
    next
  end
end
```

#### 2. Put the interfaces into VRF:

```
config system interface
  edit port2
    set vrf 10
  next
  edit port3
    set vrf 20
  next
end
```

**To configure branch 101:**

```
config router ospf
  set router-id 101.101.101.101
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit HUB
      set interface port2
      set dead-interval 40
      set hello-interval 10
    next
  end
  config network
    edit 0
      set prefix 10.101.101.0 255.255.255.0
    next
    edit 0
      set prefix 192.168.101.0 255.255.255.0
    next
  end
end
```

**To check the routing table and OSPF summary:**

```
# get router info routing-table ospf
# get router info ospf interface
```

## Static route

Static routes in VRFs work the same as BGP and OSPF because the interface that the static route is using is added to the VRF.

**To add a VRF ID in a static route in the GUI:**

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Click *Create New > Interface* or *Edit* an existing interface.
  - c. Enter a value in the *VRF ID* field.
  - d. Configure the other settings as needed.
  - e. Click *OK*.
2. Add a static route to VRF. For example, using blackhole:
  - a. Go to *Network > Static Routes*.
  - b. Click *Create New* and select the type of static route.
  - c. Enter a *Subnet*.
  - d. In the *Interface* field, select *Blackhole*.
  - e. In the *VRF ID* field, enter the ID created in step one.
  - f. Click *OK*.

**To add a VRF ID in a static route in the CLI:****1. Configure the interface:**

```
config system interface
    edit port2
        set vrf 10
    next
end
```

**2. Add a static route to the VRF. For example, using blackhole:**

```
config router static
    edit 3
        set dst 0.0.0.0/0
        set blackhole enable
        set vrf 10
    next
end
```

A static route can also be added to the VRF when using an IPsec interface by enabling VPN ID with IPsec encapsulation. See [SD-WAN segmentation over a single overlay on page 851](#) for more information.

**To add a static route to the VRF when using IPsec:**

```
config vpn ipsec phase1-interface
    edit "vpn1"
        set interface "port2"
        set auto-discovery-receiver enable
        set encapsulation vpn-id-ipip
        set remote-gw 1.1.101.1
        set psksecret *****
    next
end
config router static
    edit 1
        set dst 10.32.0.0 255.224.0.0
        set device "vpn1"
        set vrf 10
    next
end
```

**To check the routing table:**

```
# get router info routing-table static
```


## Route leaking between VRFs with BGP

Route leaking allows you to configure communication between VRFs. If route leaking is not configured, then the VRFs are isolated. This example shows route leaking with BGP using virtual inter-VDOM links.

In this example, a hub FortiGate forms BGP neighbors with two branches. It learns the networks 192.168.101.0/24 and 192.168.102.0/24 from the neighbors and separates them into VRF 10 and VRF 20.

To leak the learned routes to each other, an inter-VDOM link (IVL) is formed. An IVL normally bridges two VDOMs, but in this case the links reside on the same VDOM and are used to bridge the two VRFs. NPU links could also be used on models that support it to deliver better performance.

VRF 10 has a leaked route to 192.168.102.0/24 on IVL *link-10-20-0*, and VRF 20 has a leaked route to 192.168.101.0/24 on IVL *link-10-20-1*,

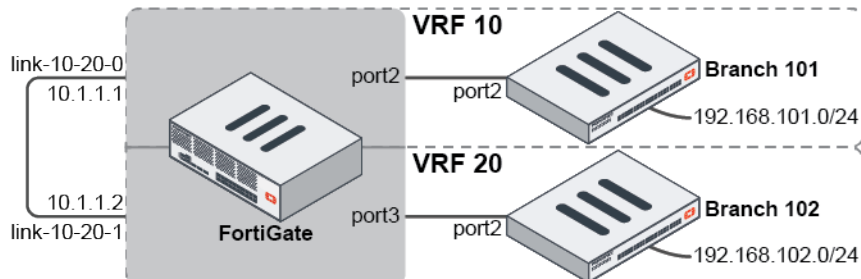

### To configure route leaking:

1. Allow interface subnets to use overlapping IP addresses:

```
config system settings
    set allow-subnet-overlap enable
end
```

2. Configure the inter-VDOM links:

```
config system vdom-link
    edit link-10-20-
        next
    end
```

3. Configure the interface settings:

```
config system interface
    edit link-10-20-0
        set vdom "root"
        set vrf 10
        set ip 10.1.1.1/30
    next
    edit link-10-20-1
        set vdom "root"
        set vrf 20
        set ip 10.1.1.2/30
    next
end
```

4. Create the prefix lists:

These objects define the subnet and mask that are leaked.

```
config router prefix-list
    edit VRF10_Route
        config rule
            edit 1
                set prefix 192.168.101.0 255.255.255.0
            next
        end
```

```

    next
    edit VRF20_Route
        config rule
            edit 1
                set prefix 192.168.102.0 255.255.255.0
            next
        end
    next
end

```

##### 5. Create the route map:

The route map can be used to group one or more prefix lists.

```

config router route-map
    edit "Leak_from_VRF10_to_VRF20"
        config rule
            edit 1
                set match-ip-address "VRF10_Route"
            next
        end
    next
    edit "Leak_from_VRF20_to_VRF10"
        config rule
            edit 1
                set match-ip-address "VRF20_Route"
            next
        end
    next
end

```

##### 6. Configure the VRF leak in BGP, specifying a source VRF, destination VRF, and the route map to use:

```

config router bgp
    config vrf
        edit "10"
            config leak-target
                edit "20"
                    set route-map "Leak_from_VRF10_to_VRF20"
                    set interface "link-10-20-0"
                next
            end
        next
        edit "20"
            config leak-target
                edit "10"
                    set route-map "Leak_from_VRF20_to_VRF10"
                    set interface "link-10-20-1"
                next
            end
        next
    end
end

```

##### 7. Create policies to allow traffic between the VRFs.


Without a policy permitting traffic on the route between the VRFs, the VRFs are still isolated.

## Route leaking between multiple VRFs


In this example, routing leaking between three VRFs in a star topology is configured. This allows the solution to be scaled to more VRFs without building full mesh, one-to-one connections between each pair of VRFs. VLAN subinterfaces are created on VDOM links to connect each VRF to the central VRF, allowing routes to be leaked from a VRF to the central VRF, and then to the other VRFs. Static routes are used for route leaking in this example.

For instructions on creating route leaking between two VRFs, see [Route leaking between VRFs with BGP on page 486](#).

### Physical topology:

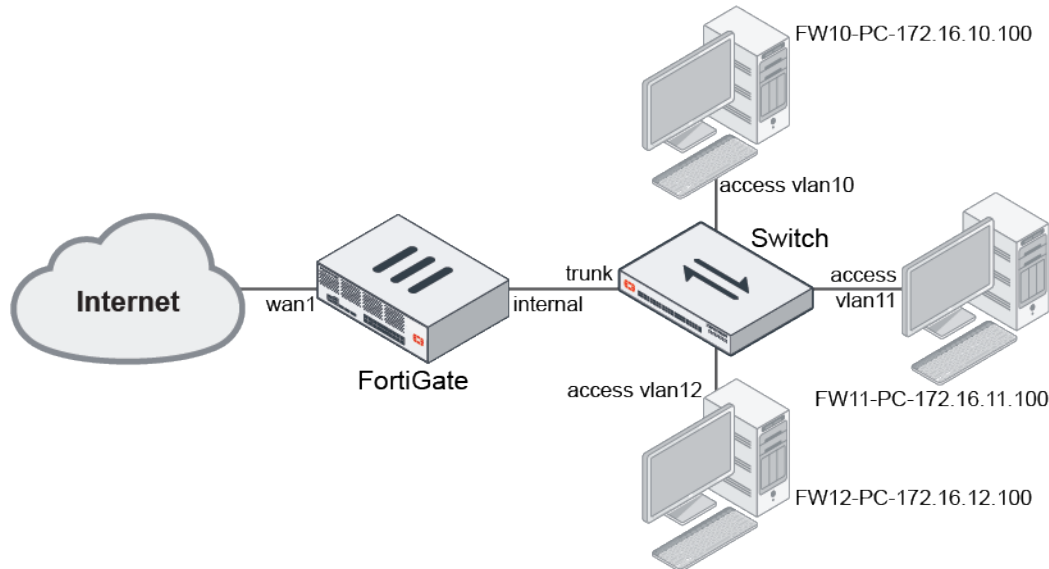

### Logical topology:

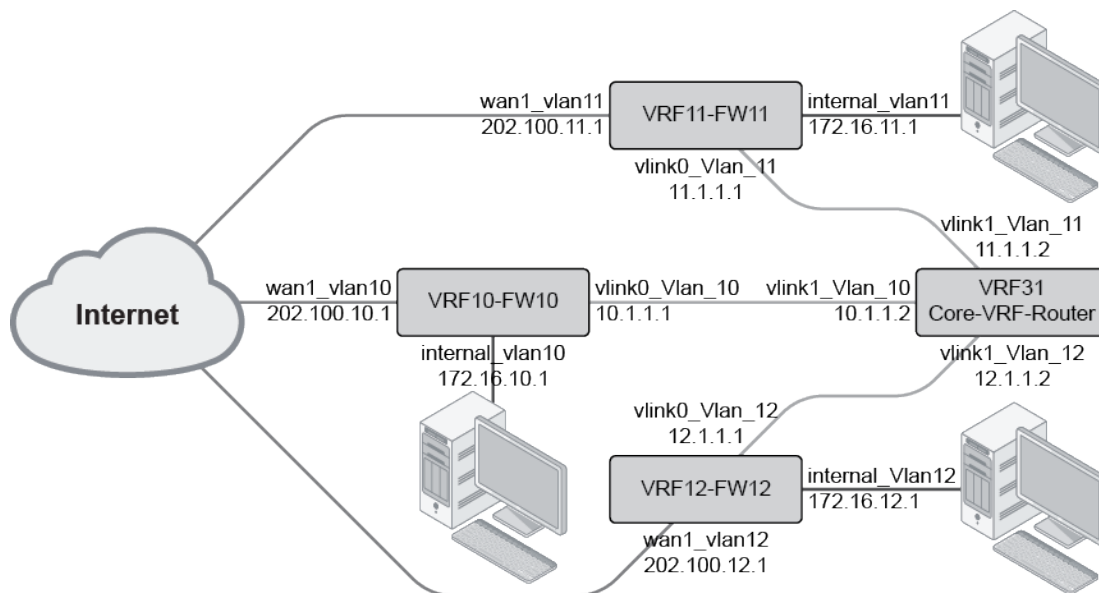

In this example, a specific route is leaked from each of the VRFs to each of the other VRFs. VLAN subinterfaces are created based on VDOM links to connect each VRF to the core VRF router.

Multi VDOM mode is enabled so that NP VDOM links can be used. The setup could be configured without enabling multi VDOM mode by manually creating non-NP VDOM links, but this is not recommended as the links are not offloaded to the NPU.

After VDOMs are enabled, all of the configuration is done in the *root* VDOM.

### To configure the FortiGate:

#### 1. Enable multi VDOM mode:

```
config system global
    set vdom-mode multi-vdom
end
```

If the FortiGate has an NP, the VDOM links will be created:

```
# show system interface
config system interface
    ...
    edit "npu0_vlink0"
        set vdom "root"
        set type physical
    next
    edit "npu0_vlink1"
        set vdom "root"
        set type physical
    next
    ...
end
```

If multi VDOM mode is not used, the VDOM links can be manually created:

```
config system vdom-link
    edit <name of vmlink>
    next
end
```

#### 2. Allow interface subnets to use overlapping IP addresses:

```
config vdom
    edit root
        config system settings
            set allow-subnet-overlap enable
        end
    end
```

#### 3. Configure the inter-connecting VLAN subinterfaces between VRF based on VDOM-LINK:

```
config system interface
    edit "vlink0_vlan_10"
        set vdom "root"
        set vrf 10
        set ip 10.1.1.1 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink0_vlan_10"
        set role lan
        set interface "npu0_vlink0"
```



```
        set vlanid 10
    next
    edit "vlink1_Vlan_10"
        set vdom "root"
        set vrf 31
        set ip 10.1.1.2 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink1_Vlan_10"
        set role lan
        set interface "npu0_vlink1"
        set vlanid 10
    next
    edit "vlink0_Vlan_11"
        set vdom "root"
        set vrf 11
        set ip 11.1.1.1 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink0_Vlan_11"
        set role lan
        set interface "npu0_vlink0"
        set vlanid 11
    next
    edit "vlink1_Vlan_11"
        set vdom "root"
        set vrf 31
        set ip 11.1.1.2 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink1_Vlan_11"
        set role lan
        set interface "npu0_vlink1"
        set vlanid 11
    next
    edit "vlink0_Vlan_12"
        set vdom "root"
        set vrf 12
        set ip 12.1.1.1 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink0_Vlan_12"
        set role lan
        set interface "npu0_vlink0"
        set vlanid 12
    next
    edit "vlink1_Vlan_12"
        set vdom "root"
        set vrf 31
        set ip 12.1.1.2 255.255.255.252
        set allowaccess ping https ssh http
        set alias "vlink1_Vlan_12"
        set role lan
        set interface "npu0_vlink1"
        set vlanid 12
    next
end
```

**4. Configure a zone to allow intrazone traffic between VLANs in the central VRF:**

```
config system zone
    edit "Core-VRF-Router"
        set intrazone allow
        set interface "vlink1_Vlan_10" "vlink1_Vlan_11" "vlink1_Vlan_12"
    next
end
```

**5. Add allow policies for the VRF31 core router:**

```
config firewall policy
    edit 0
        set name "any_to_core_vrf31"
        set srcintf "any"
        set dstintf "Core-VRF-Router"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
    edit 0
        set name "core_vrf31_to_any"
        set srcintf "Core-VRF-Router"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
end
```

**6. Configure VRF10, VRF11, and VRF12 on the Internal and WAN VLAN sub-interfaces:**

```
config system interface
    edit "Internal_VRF10"
        set vdom "root"
        set vrf 10
        set ip 172.16.10.1 255.255.255.0
        set allowaccess ping https ssh http
        set alias "Internal_VRF10"
        set role lan
        set interface "internal"
        set vlanid 10
    next
    edit "Internal_VRF11"
        set vdom "root"
        set vrf 11
        set ip 172.16.11.1 255.255.255.0
        set allowaccess ping https ssh http
        set alias "Internal_VRF11"
        set role lan
        set interface "internal"
        set vlanid 11
    next
```

```
edit "Internal_VRF12"
    set vdom "root"
    set vrf 12
    set ip 172.16.12.1 255.255.255.0
    set allowaccess ping https ssh http
    set alias "Internal_VRF12"
    set role lan
    set interface "internal"
    set vlanid 12
next
edit "wan1_VRF10"
    set vdom "root"
    set vrf 10
    set ip 202.100.10.1 255.255.255.0
    set allowaccess ping
    set alias "wan1_VRF10"
    set role wan
    set interface "wan1"
    set vlanid 10
next
edit "wan1_VRF11"
    set vdom "root"
    set vrf 11
    set ip 202.100.11.1 255.255.255.0
    set allowaccess ping
    set alias "wan1_VRF11"
    set role wan
    set interface "wan1"
    set vlanid 11
next
edit "wan1_VRF12"
    set vdom "root"
    set vrf 12
    set ip 202.100.12.1 255.255.255.0
    set allowaccess ping
    set alias "wan1_VRF12"
    set role wan
    set interface "wan1"
    set vlanid 12
next
end
```

## 7. Configure static routing and route leaking between each VRF and Core-VRF-Router:

```
config router static
    edit 1
        set dst 172.16.10.0 255.255.255.0
        set gateway 10.1.1.1
        set device "vlink1_Vlan_10"
        set comment "VRF31_Core_Router"
    next
    edit 2
        set dst 172.16.11.0 255.255.255.0
        set gateway 11.1.1.1
        set device "vlink1_Vlan_11"
        set comment "VRF31_Core_Router"
```

```
next
edit 3
    set dst 172.16.12.0 255.255.255.0
    set gateway 12.1.1.1
    set device "vlink1_Vlan_12"
    set comment "VRF31_Core_Router"
next
edit 4
    set dst 172.16.11.0 255.255.255.0
    set gateway 10.1.1.2
    set device "vlink0_Vlan_10"
    set comment "VRF10_Route_Leaking"
next
edit 5
    set dst 172.16.12.0 255.255.255.0
    set gateway 10.1.1.2
    set device "vlink0_Vlan_10"
    set comment "VRF10_Route_Leaking"
next
edit 6
    set dst 172.16.10.0 255.255.255.0
    set gateway 11.1.1.2
    set device "vlink0_Vlan_11"
    set comment "VRF11_Route_Leaking"
next
edit 7
    set dst 172.16.12.0 255.255.255.0
    set gateway 11.1.1.2
    set device "vlink0_Vlan_11"
    set comment "VRF11_Route_Leaking"
next
edit 8
    set dst 172.16.10.0 255.255.255.0
    set gateway 12.1.1.2
    set device "vlink0_Vlan_12"
    set comment "VRF12_Route_Leaking"
next
edit 9
    set dst 172.16.11.0 255.255.255.0
    set gateway 12.1.1.2
    set device "vlink0_Vlan_12"
    set comment "VRF12_Route_Leaking"
next
edit 10
    set gateway 202.100.10.254
    set device "wan1_VRF10"
    set comment "VRF10_Default_Route"
next
edit 11
    set gateway 202.100.11.254
    set device "wan1_VRF11"
    set comment "VRF11_Default_Route"
next
edit 12
    set gateway 202.100.12.254
```

```

        set device "wan1_VRF12"
        set comment "VRF12_Default_Route"
    next
end

```

In the GUI, go to **Network > Static Routes** to view the static routes:

Destination	Gateway IP	Interface	Status	Comments
172.16.10.0/24	10.1.1.1	vlink1_Vlan_10 (vlink1_Vlan_10)	Enabled	VRF31_Core_Router
172.16.11.0/24	11.1.1.1	vlink1_Vlan_11 (vlink1_Vlan_11)	Enabled	VRF31_Core_Router
172.16.12.0/24	12.1.1.1	vlink1_Vlan_12 (vlink1_Vlan_12)	Enabled	VRF31_Core_Router
172.16.11.0/24	10.1.1.2	vlink0_Vlan_10 (vlink0_Vlan_10)	Enabled	VRF10_Route_Leaking
172.16.12.0/24	10.1.1.2	vlink0_Vlan_10 (vlink0_Vlan_10)	Enabled	VRF10_Route_Leaking
172.16.10.0/24	11.1.1.2	vlink0_Vlan_11 (vlink0_Vlan_11)	Enabled	VRF11_Route_Leaking
172.16.12.0/24	11.1.1.2	vlink0_Vlan_11 (vlink0_Vlan_11)	Enabled	VRF11_Route_Leaking
172.16.10.0/24	12.1.1.2	vlink0_Vlan_12 (vlink0_Vlan_12)	Enabled	VRF12_Route_Leaking
172.16.11.0/24	12.1.1.2	vlink0_Vlan_12 (vlink0_Vlan_12)	Enabled	VRF12_Route_Leaking
0.0.0.0/0	202.100.10.254	wan1_VRF10 (wan1_VRF10)	Enabled	VRF10_Default_Route
0.0.0.0/0	202.100.11.254	wan1_VRF11 (wan1_VRF11)	Enabled	VRF11_Default_Route
0.0.0.0/0	202.100.12.254	wan1_VRF12 (wan1_VRF12)	Enabled	VRF12_Default_Route

## 8. Configure firewall policies for VRF10, VRF11, and VRF12

```

config firewall policy
    edit 6
        set name "VRF10_to_Internet_Policy"
        set srcintf "Internal_VRF10"
        set dstintf "wan1_VRF10"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
    next
    edit 7
        set name "VRF10_to_VRF_Leaking_Route"
        set srcintf "Internal_VRF10"
        set dstintf "vlink0_Vlan_10"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
    edit 8
        set name "VRF_Leaking_Route_to_VRF10"
        set srcintf "vlink0_Vlan_10"
        set dstintf "Internal_VRF10"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
end

```

```
next
edit 9
    set name "VRF11_to_Internet_Policy"
    set srcintf "Internal_VRF11"
    set dstintf "wan1_VRF11"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set nat enable
next
edit 10
    set name "VRF11_to_VRF_Leaking_Route"
    set srcintf "Internal_VRF11"
    set dstintf "vlink0_Vlan_11"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
next
edit 11
    set name "VRF_Leaking_Route_to_VRF11"
    set srcintf "vlink0_Vlan_11"
    set dstintf "Internal_VRF11"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
next
edit 12
    set name "VRF12_to_Internet_Policy"
    set srcintf "Internal_VRF12"
    set dstintf "wan1_VRF12"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set nat enable
next
edit 13
    set name "VRF12_to_VRF_Leaking_Route"
    set uuid 92bccf8e-b27b-51eb-3c56-6d5259af6299
    set srcintf "Internal_VRF12"
    set dstintf "vlink0_Vlan_12"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
```

```

        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
edit 14
    set name "VRF_Leaking_Route_to_VRF12"
    set srcintf "vlink0_Vlan_12"
    set dstintf "Internal_VRF12"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
next
end

```

In the GUI, go to *Policy & Objects > Firewall Policy* to view the policies.

### To check the results:

#### 1. On the FortiGate, check the routing table to see each VRF:

```

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
C       10.6.30.0/24 is directly connected, mgmt

Routing table for VRF=10
S*      0.0.0.0/0 [10/0] via 202.100.10.254, wan1_VRF10
C       10.1.1.0/30 is directly connected, vlink0_Vlan_10
C       172.16.10.0/24 is directly connected, Internal_VRF10
S       172.16.11.0/24 [10/0] via 10.1.1.2, vlink0_Vlan_10
S       172.16.12.0/24 [10/0] via 10.1.1.2, vlink0_Vlan_10
C       202.100.10.0/24 is directly connected, wan1_VRF10

Routing table for VRF=11
S*      0.0.0.0/0 [10/0] via 202.100.11.254, wan1_VRF11
C       11.1.1.0/30 is directly connected, vlink0_Vlan_11
S       172.16.10.0/24 [10/0] via 11.1.1.2, vlink0_Vlan_11
C       172.16.11.0/24 is directly connected, Internal_VRF11
S       172.16.12.0/24 [10/0] via 11.1.1.2, vlink0_Vlan_11
C       202.100.11.0/24 is directly connected, wan1_VRF11

Routing table for VRF=12
S*      0.0.0.0/0 [10/0] via 202.100.12.254, wan1_VRF12
C       12.1.1.0/30 is directly connected, vlink0_Vlan_12
S       172.16.10.0/24 [10/0] via 12.1.1.2, vlink0_Vlan_12
S       172.16.11.0/24 [10/0] via 12.1.1.2, vlink0_Vlan_12
C       172.16.12.0/24 is directly connected, Internal_VRF12

```

```
C      202.100.12.0/24 is directly connected, wan1_VRF12
```

```
Routing table for VRF=31
```

```
C      10.1.1.0/30 is directly connected, vlink1_Vlan_10
C      11.1.1.0/30 is directly connected, vlink1_Vlan_11
C      12.1.1.0/30 is directly connected, vlink1_Vlan_12
S      172.16.10.0/24 [10/0] via 10.1.1.1, vlink1_Vlan_10
S      172.16.11.0/24 [10/0] via 11.1.1.1, vlink1_Vlan_11
S      172.16.12.0/24 [10/0] via 12.1.1.1, vlink1_Vlan_12
```

## 2. From the FW10-PC:

```
# ifconfig ens32
ens32: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
    inet 172.16.10.100 netmask 255.255.255.0 broadcast 172.16.10.255
    inet6 fe80::dbed:c7fe:170e:e61c prefixlen 64 scopeid 0x20<link>
    ether 00:0c:29:2a:3a:17 txqueuelen 1000 (Ethernet)
    RX packets 1632 bytes 160001 (156.2 KiB)
    RX errors 0 dropped 52 overruns 0 frame 0
    TX packets 2141 bytes 208103 (203.2 KiB)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

# route -n
Kernel IP routing table
Destination      Gateway          Genmask          Flags Metric Ref    Use Iface
0.0.0.0          172.16.10.1     0.0.0.0          UG      100    0        0 ens32
172.16.10.0      0.0.0.0         255.255.255.0    U        100    0        0 ens32
192.168.122.0    0.0.0.0         255.255.255.0    U        0      0        0 virbr0
```

### a. Ping a public IP address through VRF10:

```
# ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8) 56(84) bytes of data.
64 bytes from 8.8.8.8: icmp_seq=1 ttl=113 time=4.33 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=113 time=4.17 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=113 time=4.04 ms
^C
--- 8.8.8.8 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2002ms
rtt min/avg/max/mdev = 4.049/4.188/4.336/0.117 ms
```

### b. Ping the internet gateway through VRF10:

```
# ping 202.100.10.254
PING 202.100.10.254 (202.100.10.254) 56(84) bytes of data.
64 bytes from 202.100.10.254: icmp_seq=1 ttl=254 time=0.294 ms
64 bytes from 202.100.10.254: icmp_seq=2 ttl=254 time=0.225 ms
64 bytes from 202.100.10.254: icmp_seq=3 ttl=254 time=0.197 ms
^C
--- 202.100.10.254 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2000ms
rtt min/avg/max/mdev = 0.197/0.238/0.294/0.044 ms
```

### c. Ping the FW11-PC on VRF11 from VRF10:

```
# ping 172.16.11.100
PING 172.16.11.100 (172.16.11.100) 56(84) bytes of data.
64 bytes from 172.16.11.100: icmp_seq=1 ttl=61 time=0.401 ms
64 bytes from 172.16.11.100: icmp_seq=2 ttl=61 time=0.307 ms
```



```

64 bytes from 172.16.11.100: icmp_seq=3 ttl=61 time=0.254 ms
64 bytes from 172.16.11.100: icmp_seq=4 ttl=61 time=0.277 ms
64 bytes from 172.16.11.100: icmp_seq=5 ttl=61 time=0.262 ms
^C
--- 172.16.11.100 ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 3999ms
rtt min/avg/max/mdev = 0.254/0.300/0.401/0.054 ms

```

### 3. On the FortiGate, sniff traffic between VRF10 and VRF11:

```

# diagnose sniffer packet any "icmp and host 172.16.11.100" 4 1 0
interfaces=[any]
filters=[icmp and host 172.16.11.100]
10.086656 Internal_VRF10 in 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086705 vlink0_Vlan_10 out 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086706 npu0_vlink0 out 172.16.10.100 -> 172.16.11.100: icmp: echo request

10.086711 vlink1_Vlan_10 in 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086739 vlink1_Vlan_11 out 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086740 npu0_vlink1 out 172.16.10.100 -> 172.16.11.100: icmp: echo request

10.086744 vlink0_Vlan_11 in 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086929 Internal_VRF11 out 172.16.10.100 -> 172.16.11.100: icmp: echo request
10.086930 internal out 172.16.10.100 -> 172.16.11.100: icmp: echo request

10.087053 Internal_VRF11 in 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087061 vlink0_Vlan_11 out 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087062 npu0_vlink0 out 172.16.11.100 -> 172.16.10.100: icmp: echo reply

10.087066 vlink1_Vlan_11 in 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087071 vlink1_Vlan_10 out 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087072 npu0_vlink1 out 172.16.11.100 -> 172.16.10.100: icmp: echo reply

10.087076 vlink0_Vlan_10 in 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087176 Internal_VRF10 out 172.16.11.100 -> 172.16.10.100: icmp: echo reply
10.087177 internal out 172.16.11.100 -> 172.16.10.100: icmp: echo reply
^C
20 packets received by filter
0 packets dropped by kernel

```

## VRF with IPv6

IPv6 routes support VRF. Static, connected, OSPF, and BGP routes can be isolated in different VRFs. BGP IPv6 routes can be leaked from one VRF to another.

```

config router bgp
  config vrf6
    edit <origin vrf-id>
      config leak-target
        edit <target vrf-id>
          set route-map <route-map>
          set interface <interface>
        next
      end
    next
  next

```

```

end
end

```

The origin or target VRF ID is an integer value from 0 - 31.


```

config router static6
  edit <id>
    set vrf <vrf-id>
  next
end

```

## Using a VRF leak on BGP

In this example, the route 2000:5:5:5::/64 learned from Router 1 is leaked to VRF 20 through the interface vlan552. Conversely, the route 2009:3:3:3::/64 learned from Router 2 is leaked to VRF 10 through interface vlan55.

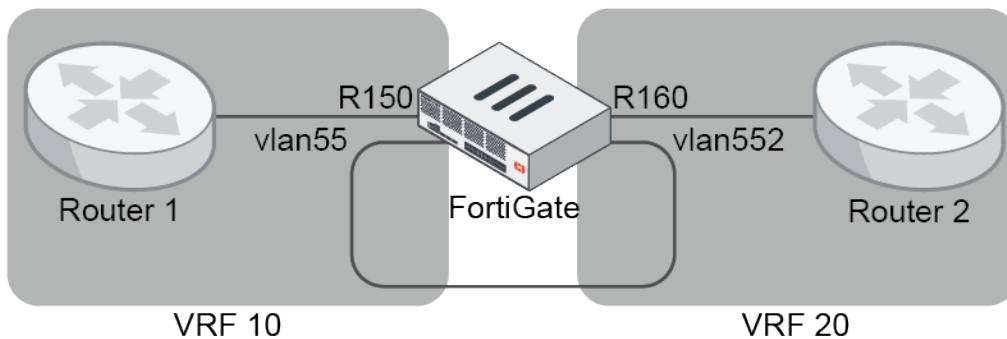

### To configure VRF leaking in BGP:

#### 1. Configure the BGP neighbors:

```

config router bgp
  set as 65412
  config neighbor
    edit "2000:10:100:1::1"
      set activate disable
      set remote-as 20
      set update-source "R150"
    next
    edit "2000:10:100:1::5"
      set activate disable
      set soft-reconfiguration enable
      set interface "R160"
      set remote-as 20
    next
  end
end

```

#### 2. Configure the VLAN interfaces:

```

config system interface
  edit "vlan55"
    set vdom "root"
    set vrf 10
    set ip 55.1.1.1 255.255.255.0
  next
end

```

```
        set device-identification enable
        set role lan
        set snmp-index 51
        config ipv6
            set ip6-address 2000:55::1/64
        end
        set interface "npu0_vlink0"
        set vlanid 55
    next
    edit "vlan552"
        set vdom "root"
        set vrf 20
        set ip 55.1.1.2 255.255.255.0
        set device-identification enable
        set role lan
        set snmp-index 53
        config ipv6
            set ip6-address 2000:55::2/64
        end
        set interface "npu0_vlink1"
        set vlanid 55
    next
end
```

### 3. Configure the IPv6 prefixes:

```
config router prefix-list6
    edit "1"
        config rule
            edit 1
                set prefix6 2000:5:5:5::/64
                unset ge
                unset le
            next
        end
    next
    edit "2"
        config rule
            edit 1
                set prefix6 2009:3:3:3::/64
                unset ge
                unset le
            next
        end
    next
end
```

### 4. Configure the route maps:

```
config router route-map
    edit "from106"
        config rule
            edit 1
                set match-ip6-address "1"
            next
        end
    next
end
```

```

        edit "from206"
        config rule
        edit 1
            set match-ip6-address "2"
        next
    end
next
end

```

5. Configure the IPv6 route leaking (leak route 2000:5:5:5::/64 learned from Router 1 to VRF 20, then leak route 2009:3:3:3::/64 learned from Router 2 to VRF 10):

```

config router bgp
    config vrf6
        edit "10"
            config leak-target
                edit "20"
                    set route-map "from106"
                    set interface "vlan55"
                next
            end
        next
        edit "20"
            config leak-target
                edit "10"
                    set route-map "from206"
                    set interface "vlan552"
                next
            end
        next
    end
end

```

### To verify the VRF leaking:

1. Check the routing table before the leak:

```

# get router info6 routing-table bgp
Routing table for VRF=10
B      2000:5:5:5::/64 [20/0] via fe00::2000:0000:0000:00, R150, 00:19:45

Routing table for VRF=20
B      2008:3:3:3::/64 [20/0] via fe00::3000:0000:0000:00, R160, 00:18:49
B      2009:3:3:3::/64 [20/0] via fe00::3000:0000:0000:00, R160, 00:18:49

```

2. Check the routing table after the leak:

```

# get router info6 routing-table bgp
Routing table for VRF=10
B      2000:5:5:5::/64 [20/0] via fe00::2000:0000:0000:0, R150, 00:25:45
B      2009:3:3:3::/64 [20/0] via fe80::10:0000:0000:4245, vlan55, 00:00:17

Routing table for VRF=20
B      2000:5:5:5::/64 [20/0] via fe80::10:0000:0000:4244, vlan552, 00:00:16
B      2008:3:3:3::/64 [20/0] via fe00::3000:0000:0000:00, R160, 00:24:49
B      2009:3:3:3::/64 [20/0] via fe00::3000:0000:0000:00, R160, 00:24:49

```

## Using VRF on a static route

In this example, a VRF is defined on static route 22 so that it will only appear in the VRF 20 routing table.

### To configure the VRF on the static route:


```
config router static6
  edit 22
    set dst 2010:2:2:2::/64
    set blackhole enable
    set vrf 20
  next
end
```

## IBGP and EBGp support in VRF

Support is included for internal and external border gateway protocols (IBGP and EBGp) in virtual routing and forwarding (VRF).

FortiGate can establish neighbor connections with other FortiGates or routers, and the learned routes are put into different VRF tables according to the neighbor's settings.

This example uses the following topology:

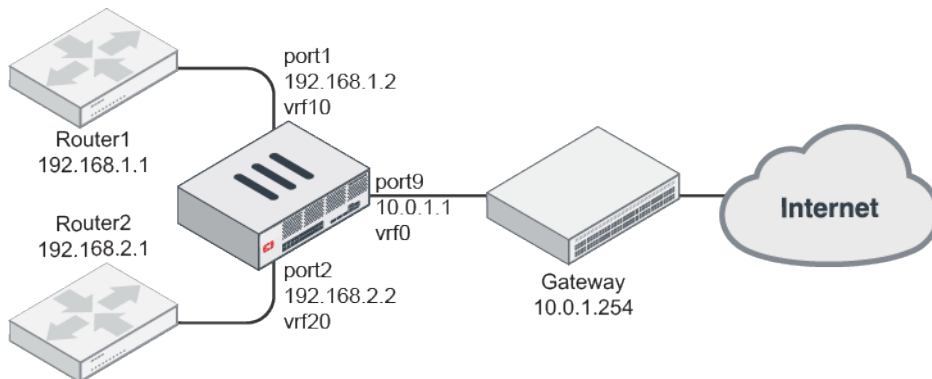

- BGP routes learned from the Router1 neighbor are put into vrf10.
- BGP routes learned from the Router2 neighbor are put into vrf20.

### To configure this example:

```
config system interface
  edit port1
    set vrf 10
  next
  edit port2
    set vrf 20
  next
end

config router bgp
  config neighbor
    edit "192.168.1.1"
```

```

        set update-source port1
    next
    edit "192.168.2.1"
        set interface port2
    next
end
end

```

## Results

Using the above topology:

- Both Router1 and Router2 establish OSPF and BGP neighbor with the FortiGate.
- Router1 advertises 10.10.1.0/24 into OSPF and 10.10.2.0/24 into BGP.
- Router2 advertises 20.20.1.0/24 into OSPF and 20.20.2.0/24 into BGP.

When port1 and port2 have not set VRF, all of the routing is in VRF=0:

```

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
        O - OSPF, IA - OSPF inter area
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
        i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
        * - candidate default

```

```

Routing table for VRF=0
S*      0.0.0.0/0 [5/0] via 10.0.1.254, port9
C        10.0.1.0/24 is directly connected, port9
O        10.10.1.0/24 [110/10] via 192.168.1.1, port1, 00:18:31
B        10.10.2.0/24 [20/200] via 192.168.1.1, port1, 00:01:31
O        20.20.1.0/22 [110/10] via 192.168.2.1, port2, 00:19:05
B        20.20.2.0/24 [20/200] via 192.168.2.1, port2, 00:01:31
C        192.168.1.0/24 is directly connected, port1
C        192.168.2.0/24 is directly connected, port2

```

After VRF is set for BGP, BGP routes are added to the VRF tables along with OSPF and connected routes:

```

# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
        O - OSPF, IA - OSPF inter area
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
        i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
        * - candidate default

```

```

Routing table for VRF=0
S*      0.0.0.0/0 [5/0] via 10.0.1.254, port9
C        10.0.1.0/24 is directly connected, port9

Routing table for VRF=10
O        10.10.1.0/24 [110/10] via 192.168.1.1, port1, 00:18:31
B        10.10.2.0/24 [20/200] via 192.168.1.1, port1, 00:01:31
C        192.168.1.0/24 is directly connected, port1

```

```

Routing table for VRF=20
O        20.20.1.0/22 [110/10] via 192.168.2.1, port2, 00:19:05

```

```

B      20.20.2.0/24 [20/200] via 192.168.2.1, port2, 00:01:31
C      192.168.2.0/24 is directly connected, port2

```

## BGP neighbor groups

This feature is also supported in the BGP neighbor groups. For example:

```

config router bgp
  config neighbor-group
    edit "FGT"
      set update-source "port1"
    next
  end
  config neighbor-range
    edit 1
      set prefix 172.16.201.0 255.255.255.0
      set neighbor-group "FGT"
    next
  end
end

```

Note that the `set interface` command is not supported.

## Support cross-VRF local-in and local-out traffic for local services

When local-out traffic such as SD-WAN health checks, SNMP, syslog, and so on are initiated from an interface on one VRF and then pass through interfaces on another VRF, the reply traffic will be successfully forwarded back to the original VRF.




VRF 0 is a special VRF. By default, all routing is done in VRF 0. So all routes in different VRFs, such as VRF 10 or VRF 20, will all be included in VRF 0. VRF 0 cannot be used in the cross-VRF case.

For local-in and local-out traffic, all routes relating to one VRF are isolated from other VRFs so interfaces in one VRF cannot reach interfaces in a different VRF, except for VRF 0.

## Example

In this example, there is an NPU VDOM link that is configured on the root VDOM. Two VLANs, vrf10 and vrf20, are created on either ends of the NPU VDOM link, each belonging to a different VRF.

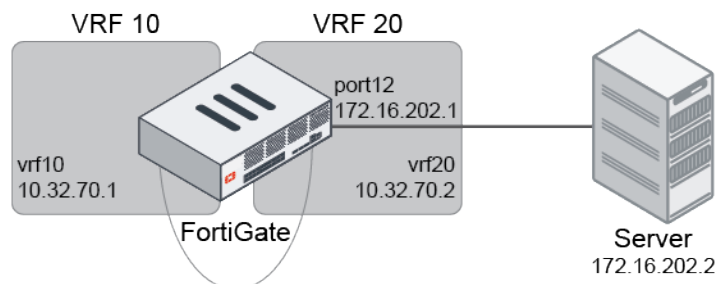

When pinging from the vrf10 interface in VRF 10 to the destination server 172.16.202.2, since there is a single static route for VRF 10 with a gateway of vrf20/10.32.70.2, traffic is sent to the next hop and subsequently routed through port12 to the server.

As seen in the sniffer trace, the ICMP replies are received on port12 in VRF 20, then pass through vrf20, and are ultimately forwarded back to vrf10 in VRF 10. The traffic flow demonstrates that local-out traffic sourced from one VRF passing through another VRF can return back to the original VRF.

### To configure cross-VRF local-out traffic for local services:

#### 1. Configure the interfaces:

```
config system interface
  edit "vrf10"
    set vdom "root"
    set vrf 10
    set ip 10.32.70.1 255.255.255.0
    set allowaccess ping
    set device-identification enable
    set role lan
    set snmp-index 35
    set interface "npu0_vlink0"
    set vlanid 22
  next
  edit "vrf20"
    set vdom "root"
    set vrf 20
    set ip 10.32.70.2 255.255.255.0
    set allowaccess ping
    set device-identification enable
    set role lan
    set snmp-index 36
    set interface "npu0_vlink1"
    set vlanid 22
  next
  edit "port12"
    set vdom "root"
    set vrf 20
    set ip 172.16.202.1 255.255.255.0
    set allowaccess ping https ssh snmp http telnet fgfm radius-acct probe-response
  fabric ftm speed-test
    set type physical
    set alias "TO_FGT_D_port22"
    set snmp-index 14
    config ipv6
      set ip6-address 2003:172:16:202::1/64
      set ip6-allowaccess ping
    end
  next
end
```

#### 2. Configure the firewall policy:

```
config firewall policy
  edit 1
    set srcintf "vrf20"
    set dstintf "port12"
```



```

        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
    next
end

```

### 3. Configure the static route:

```

config router static
    edit 2
        set gateway 10.32.70.2
        set distance 3
        set device "vrf10"
    next
end

```

### To test the configuration:

#### 1. Execute a ping from the vrf10 interface in VRF 10 to the destination server (172.16.202.2):

```

# execute ping-options interface vrf10
# execute ping 172.16.202.2
PING 172.16.202.2 (172.16.202.2): 56 data bytes
64 bytes from 172.16.202.2: icmp_seq=0 ttl=254 time=0.1 ms
64 bytes from 172.16.202.2: icmp_seq=1 ttl=254 time=0.0 ms

--- 172.16.202.2 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max = 0.0/0.0/0.1 ms

```

#### 2. Run a sniffer trace on 172.16.202.2 for ICMP:

```

# diagnose sniffer packet any "host 172.16.202.2 and icmp" 4
interfaces=[any]
filters=[host 172.16.202.2 and icmp]
3.393920 vrf10 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
3.393922 npu0_vlink0 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
3.393927 vrf20 in 10.32.70.1 -> 172.16.202.2: icmp: echo request
3.393943 port12 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
3.393977 port12 in 172.16.202.2 -> 10.32.70.1: icmp: echo reply
3.393987 vrf20 out 172.16.202.2 -> 10.32.70.1: icmp: echo reply
3.393988 npu0_vlink1 out 172.16.202.2 -> 10.32.70.1: icmp: echo reply
3.393993 vrf10 in 172.16.202.2 -> 10.32.70.1: icmp: echo reply
4.393941 vrf10 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
4.393942 npu0_vlink0 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
4.393948 vrf20 in 10.32.70.1 -> 172.16.202.2: icmp: echo request
4.393957 port12 out 10.32.70.1 -> 172.16.202.2: icmp: echo request
4.393980 port12 in 172.16.202.2 -> 10.32.70.1: icmp: echo reply
4.393987 vrf20 out 172.16.202.2 -> 10.32.70.1: icmp: echo reply
4.393987 npu0_vlink1 out 172.16.202.2 -> 10.32.70.1: icmp: echo reply
4.393994 vrf10 in 172.16.202.2 -> 10.32.70.1: icmp: echo reply

```

## NetFlow

NetFlow allows you to collect IP network traffic statistics for an interface, and then export those statistics for analysis. NetFlow samplers, that sample every packet, are configured per interface. Full NetFlow is supported through the information maintained in the firewall session.

### To configure NetFlow:

```
config system netflow
    set collector-ip <ip>
    set collector-port <port>
    set source-ip <ip>
    set active-flow-timeout <integer>
    set inactive-flow-timeout <integer>
    set template-tx-timeout <integer>
    set template-tx-counter <integer>
end
```

collector-ip <ip>	Collector IPv4 or IPv6 address.
collector-port <port>	NetFlow collector port number (0 - 65535).
source-ip <ip>	Source IPv4 or IPv6 address, for communication with the NetFlow agent.
active-flow-timeout <integer>	Timeout to report active flows, in minutes (1 - 60, default = 30).
inactive-flow-timeout <integer>	Timeout for periodic report of finished flows, in seconds (10 - 600, default = 15).
template-tx-timeout <integer>	Timeout for periodic template flowset transmission, in minutes (1 - 1440, default = 30).
template-tx-counter <integer>	Counter of flowset records, before resending a template flowset record (10 - 6000, default = 20).

### To configure NetFlow in a specific VDOM:

```
config vdom
    edit <vdom>
        config system vdom-netflow
            set vdom-netflow enable
            set collector-ip <ip>
            set collector-port <port>
            set source-ip <ip>
        end
    end
next
end
```

### To configure a NetFlow sampler on an interface:

```
config system interface
    edit <interface>
        set netflow-sampler {disable | tx | rx | both}
```

```

    next
end

```

disable	Disable the NetFlow protocol on this interface (default).
tx	Monitor transmitted traffic on this interface.
rx	Monitor received traffic on this interface.
both	Monitor transmitted/received traffic on this interface.

## Verification and troubleshooting

If data are not seen on the NetFlow collector after it has been configured, use the following sniffer commands to verify if the FortiGate and the collector are communicating:

- By collector port:

```
# diagnose sniffer packet 'port <collector-port>' 6 0 a
```

- By collector IP address:

```
# diagnose sniffer packet 'host <collector-ip>' 6 0 a
```

NetFlow uses the sflow daemon. The current NetFlow configuration can be viewed using test level 3 or 4:

```
# diagnose test application sflowd 3
```

```
# diagnose test application sflowd 4
```

Netflow Cache Stats:

```
vdoms=1 Collectors=1 Cached_intf=2 Netflow_enabled_intf=1 Live_sessions=0 Session cache max
count:71950
```

## NetFlow templates

NetFlow uses templates to capture and categorize the data that it collects. FortiOS supports the following NetFlow templates:

Name	Template ID	Description
STAT_OPTIONS	256	Statistics information about exporter
APP_ID_OPTIONS	257	Application information
IPV4	258	No NAT IPv4 traffic
IPV6	259	No NAT IPv6 traffic
ICMP4	260	No NAT ICMPv4 traffic
ICMP6	261	No NAT ICMPv6 traffic
IPV4_NAT	262	Source/Destination NAT IPv4 traffic
IPV4_AF_NAT	263	AF NAT IPv4 traffic (4->6)

Name	Template ID	Description
IPV6_NAT	264	Source/Destination NAT IPv6 traffic
IPV6_AF_NAT	265	AF NAT IPv6 traffic (6->4)
ICMP4_NAT	266	Source/Destination NAT ICMPv4 traffic
ICMP4_AF_NAT	267	AF NAT ICMPv4 traffic (4->6)
ICMP6_NAT	268	Source/Destination NAT ICMPv6 traffic
ICMPv6_AF_NAT	269	AF NAT ICMPv6 traffic (6->4)

## 256 - STAT\_OPTIONS

<b>Description</b>	Statistics information about exporter
<b>Scope Field Count</b>	1
<b>Data Field Count</b>	7
<b>Option Scope Length</b>	4
<b>Option Length</b>	28
<b>Padding</b>	0000

### Scope fields

Field #	Field	Type	Length
1	System	System (1)	2

### Data fields

Field #	Field	Type	Length
1	TOTAL_BYTES_EXP	TOTAL_BYTES_EXP (40)	8
2	TOTAL_PKTS_EXP	TOTAL_PKTS_EXP (41)	8
3	TOTAL_FLOWS_EXP	TOTAL_FLOWS_EXP (42)	8
4	FLOW_ACTIVE_TIMEOUT	FLOW_ACTIVE_TIMEOUT (36)	2
5	FLOW_INACTIVE_TIMEOUT	FLOW_INACTIVE_TIMEOUT (37)	2
6	SAMPLING_INTERVAL	SAMPLING_INTERVAL (34)	4
7	SAMPLING_ALGORITHM	SAMPLING_ALGORITHM (35)	1

## 257 - APP\_ID\_OPTIONS

<b>Description</b>	Application information
<b>Scope Field Count</b>	1
<b>Data Field Count</b>	4
<b>Option Scope Length</b>	4
<b>Option Length</b>	16
<b>Padding</b>	0000

### Scope fields

Field #	Field	Type	Length
1	System	System (1)	2

### Data fields

Field #	Field	Type	Length
1	APPLICATION_ID	APPLICATION_ID (95)	9
2	APPLICATION_NAME	APPLICATION_NAME (96)	64
3	APPLICATION_DESC	APPLICATION_DESC (94)	64
4	applicationCategoryName	applicationCategoryName (372)	32

## 258 - IPV4

<b>Description</b>	No NAT IPv4 traffic
<b>Data Field Count</b>	17

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4

Field #	Field	Type	Length
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
17	IP_DST_ADDR	IP_DST_ADDR (12)	4

## 259 - IPV6

<b>Description</b>	No NAT IPv6 traffic
<b>Data Field Count</b>	17

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9

Field #	Field	Type	Length
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16

## 260 - ICMP4

<b>Description</b>	No NAT ICMPv4 traffic
<b>Data Field Count</b>	16

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR(12)	4

## 261 - ICMP6

<b>Description</b>	No NAT ICMPv6 traffic
<b>Data Field Count</b>	16

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
16	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16

## 262 - IPV4\_NAT

<b>Description</b>	Source/Destination NAT IPv4 traffic
<b>Data Field Count</b>	25

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8



Field #	Field	Type	Length
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	postIpDiffServCodePoint	postIpDiffServCodePoint (98)	1
13	IP_TOS	ipClassofService (5)	1
14	DST_DOS	postIpClassOfService (55)	1
15	APPLICATION_ID	APPLICATION_ID (95)	9
16	INTERNET_APPLICATION_ID	INTERNET_APPLICATION_ID(66)	4
17	FLOW_FLAGS	FLOW_FLAGS (65)	2
18	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
19	flowEndReason	flowEndReason (136)	1
20	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
21	IP_DST_ADDR	IP_DST_ADDR (12)	4
22	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
23	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
24	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
25	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 263 - IPV4\_AF\_NAT

<b>Description</b>	AF NAT IPv4 traffic (4->6)
<b>Data Field Count</b>	21

## Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
18	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
19	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 264 - IPV6\_NAT

<b>Description</b>	Source/Destination NAT IPv6 traffic
<b>Data Field Count</b>	21

## Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
17	IP_DST_ADDR	IP_DST_ADDR (12)	4
18	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
19	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 265 - IPV6\_AF\_NAT

<b>Description</b>	AF NAT IPv6 traffic (6->4)
<b>Data Field Count</b>	21

## Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
18	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
19	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 266 - ICMPV4\_NAT

<b>Description</b>	Source/Destination NAT ICMPv4 traffic
<b>Data Field Count</b>	20

## Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR (12)	4
17	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
18	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 267 - ICMPV4\_AF\_NAT

<b>Description</b>	AF NAT ICMPv4 traffic (4->6)
<b>Data Field Count</b>	20

## Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8

Field #	Field	Type	Length
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPv6_SRC_ADDR	IPv6_SRC_ADDR (27)	16
16	IPv6_DST_ADDR	IPv6_DST_ADDR (28)	16
17	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
18	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 268 - ICMPV6\_NAT

<b>Description</b>	Source/Destination NAT ICMPv6 traffic
<b>Data Field Count</b>	20

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4

Field #	Field	Type	Length
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR (12)	4
17	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
18	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## 269 - ICMPV6\_AF\_NAT

<b>Description</b>	AF NAT ICMPv6 traffic (6->4)
<b>Data Field Count</b>	20

### Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2

Field #	Field	Type	Length
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
16	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
17	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
18	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

## NetFlow on FortiExtender and tunnel interfaces

NetFlow sampling is supported on FortiExtender and VPN tunnel interfaces.

VPN tunnel interfaces can be IPsec, IP in IP, or GRE tunnels. NetFlow sampling is supported on both NPU and non-NPU offloaded tunnels.

### Examples

In the following examples, a FortiExtender and a VPN tunnel interface are configured with NetFlow sampling.

#### To configure a FortiExtender interface with NetFlow sampling:

1. Configure a FortiExtender interface with NetFlow sampling enabled for both transmitted and received traffic:

```
config system interface
    edit "fext-211"
        set vdom "root"
        set mode dhcp
        set type fext-wan
        set netflow-sampler both
        set role wan
        set snmp-index 8
        set macaddr 2a:4e:68:a3:f4:6a
    next
end
```

2. Check the NetFlow status and configuration:



Device index 26 is the FortiExtender interface fext-211.

```
# diagnose test application sflowd 3
==== Netflow Vdom Configuration ====
Global collector:172.18.60.80:[2055] source ip: 0.0.0.0 active-timeout(seconds):60
inactive-timeout(seconds):600
_____ vdom: root, index=0, is master, collector: disabled (use global config) (mgmt vdom)
|_ coll_ip:172.18.60.80[2055],src_ip:10.6.30.105,seq_num:300,pkts/time to next
template: 18/29
|_ exported: Bytes:3026268, Packets:11192, Sessions:290 Flows:482
|_____ interface:fext-211 sample_direction:both device_index:26 snmp_index:8
```

### 3. Check the network interface list:

```
# diagnose netlink interface list
...
if=fext-211 family=00 type=1 index=26 mtu=1500 link=0 master=0
ref=27 state=start present fw_flags=60000 flags=up broadcast run multicast
...
```

### 4. Check the session list for the FortiExtender interface and NetFlow flowset packet:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=1732 expire=59 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty netflow-origin netflow-reply
statistic(bytes/packets/allow_err): org=145572/1733/1 reply=145572/1733/1 tuples=2
tx speed(Bps/kbps): 83/0 rx speed(Bps/kbps): 83/0
origin->sink: org pre->post, reply pre->post dev=5->26/26->5
gwy=10.39.252.244/172.16.200.55
hook=post dir=org act=snat 172.16.200.55:61290->8.8.8.8:8(10.39.252.243:61290)
hook=pre dir=reply act=dnat 8.8.8.8:61290->10.39.252.243:0(172.16.200.55:61290)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=0
serial=00001298 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x040000
no_ofld_reason: non-npu-intf
total session 1
```

### 5. The flowset packet can be captured on UDP port 2055 by a packet analyzer, such as Wireshark:

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	192.168.201.254	192.168.201.1	CFLOW	1182 total: 3 (v9) records Obs-Domain-ID=	1 [Data-Template:258,268,262,266,263,267,259,261,264,268,265,269] [Options-Template:256] [Options-Template:258]
2	4.758958	192.168.201.254	192.168.201.1	CFLOW	562 total: 6 (v9) records Obs-Domain-ID=	1 [Data:268] [Data:262] [Data:262] [Data:262] [Data:262] [Data:262]
3	24.769668	192.168.201.254	192.168.201.1	CFLOW	350 total: 4 (v9) records Obs-Domain-ID=	1 [Data:258] [Data:258] [Data:258] [Data:258]
4	66.089588	192.168.201.254	192.168.201.1	CFLOW	1182 total: 3 (v9) records Obs-Domain-ID=	1 [Data-Template:258,268,262,266,263,267,259,261,264,268,265,269] [Options-Template:256] [Options-Template:258]
5	64.889548	192.168.201.254	192.168.201.1	CFLOW	142 total: 1 (v9) record Obs-Domain-ID=	1 [Data:268]
6	114.459127	192.168.201.254	192.168.201.1	CFLOW	206 total: 2 (v9) records Obs-Domain-ID=	1 [Data:258] [Data:258]
7	120.419489	192.168.201.254	192.168.201.1	CFLOW	1182 total: 3 (v9) records Obs-Domain-ID=	1 [Data-Template:258,268,262,266,263,267,259,261,264,268,265,269] [Options-Template:256] [Options-Template:258]
8	124.079721	192.168.201.254	192.168.201.1	CFLOW	142 total: 1 (v9) record Obs-Domain-ID=	1 [Data:268]
9	134.889131	192.168.201.254	192.168.201.1	CFLOW	206 total: 2 (v9) records Obs-Domain-ID=	1 [Data:258] [Data:258]
10	180.820868	192.168.201.254	192.168.201.1	CFLOW	1182 total: 3 (v9) records Obs-Domain-ID=	1 [Data-Template:258,268,262,266,263,267,259,261,264,268,265,269] [Options-Template:256] [Options-Template:258]
11	184.709586	192.168.201.254	192.168.201.1	CFLOW	718 total: 9 (v9) records Obs-Domain-ID=	1 [Data:268] [Data:258] [Data:258] [Data:258] [Data:258] [Data:258] [Data:258] [Data:258] [Data:258]

Version: 9
Count: 1
SysTime: 18082.530000000 seconds
Timestamp: Dec 7, 2020 18:27:44.000000000 Pacific Standard Time
FlowIdentifier: 281
SourceId: 1
FlowId: 1 [16-265] (1 Flow)
FlowId: (Data) (268)
FlowId Length: 88
FlowId: (Data) (268)
Flow 1
Octets: 5124
Post Octets: 5124
Packets: 61
Post Packets: 61
Duration: 68.820868 seconds (switched)
StartTime: 18082.530000000 seconds
EndTime: 18093.610000000 seconds
InputInt: 1
OutputInt: 8
DOW Type: 000000
Protocol: TCP (1)
Classification Engine ID: 0000-L7-PEN (20)
Selector ID: 0000000000000000
Unknown Field Type: Type 66: Value (hex bytes): 00 00 00 00
Unknown Field Type: Type 65: Value (hex bytes): 00 45
Forwarding Status
01... .. ForwardingStatus: Forward (1)
..00 0000 = ForwardingStatus:ForwardCode: Forwarded (Unknown) (0)
Flow End Reason: Active timeout (2)
SrcAddr: 172.16.200.35
DstAddr: 8.8.8.8
Post NAT Source IPv4 Address: 10.10.252.243
Post NAT Destination IPv4 Address: 0.0.0.0
Post NAT Source Transport Port: 0
Post NAT Destination Transport Port: 0

0000 00 50 af 8e 4b 0d 50 8e ce 77 ee 05 00 45 00	...	K [ W ] E
0010 45 30 00 00 3d 11 02 e5 c8 a8 c3 fe c8 a8	...	G [ S ]
0020 c5 7c 5f 88 07 00 6c 5c c3 00 00 02 00 0a	...	B [ ]
0030 27 02 5f ce e4 a8 00 00 01 20 00 00 02 01 0a	...	

## To configure a VPN tunnel interface with NetFlow sampling:

### 1. Configure a VPN interface with NetFlow sampling enabled for both transmitted and received traffic:

```
config system interface
    edit "A-to-B_vpn"
        set vdom "vdom1"
        set type tunnel
        set netflow-sampler both
        set snmp-index 42
        set interface "port3"
    next
end
```

### 2. Configure the VPN tunnel:

```
config vpn ipsec phase1-interface
    edit "A-to-B_vpn"
        set interface "port3"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set comments "VPN: A-to-B_vpn [Created by VPN wizard]"
        set wizard-type static-fortigate
        set remote-gw 10.2.2.2
        set psksecret ENC
    next
end

config vpn ipsec phase2-interface
    edit "A-to-B_vpn"
        set phase1name "A-to-B_vpn"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        set aes256gcm chacha20poly1305
        set comments "VPN: A-to-B_vpn [Created by VPN wizard]"
        set src-addr-type name
        set dst-addr-type name
        set src-name "A-to-B_vpn_local"
```

```

        set dst-name "A-to-B_vpn_remote"
    next
end

```

### 3. Check the NetFlow status and configuration:

Device index 52 is the VPN interface A-to-B\_vpn.

```

# diagnose test application sflowd 3
===== Netflow Vdom Configuration =====
Global collector:172.18.60.80:[2055] source ip: 0.0.0.0 active-timeout(seconds):60
inactive-timeout(seconds):15
_____ vdom: vdom1, index=1, is master, collector: disabled (use global config) (mgmt
vdom)
    |_ coll_ip:172.18.60.80[2055],src_ip:10.1.100.1,seq_num:60,pkts/time to next
template: 15/6
    |_ exported: Bytes:11795591, Packets:48160, Sessions:10 Flows:34
    |_____ interface:A-to-B_vpn sample_direction:both device_index:52 snmp_index:42

```

### 4. Check the session list for the VPN interface and NetFlow flowset packet (unencapsulated traffic going through the VPN tunnel):

```

# diagnose sys session list
session info: proto=6 proto_state=01 duration=6 expire=3599 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu netflow-origin netflow-reply
statistic(bytes/packets/allow_err): org=6433/120/1 reply=884384/713/1 tuples=2
tx speed(Bps/kbps): 992/7 rx speed(Bps/kbps): 136479/1091
orgin->sink: org pre->post, reply pre->post dev=10->52/52->10 gwy=10.2.2.2/10.1.100.22
hook=pre dir=org act=noop 10.1.100.22:43714->172.16.200.55:80(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.200.55:80->10.1.100.22:43714(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:0c:29:ac:ae:4f
misc=0 policy_id=5 auth_info=0 chk_client_info=0 vd=1
serial=00003b6c tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000001 no_offload
npu info: flag=0x82/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: disabled-by-policy
total session 1

```

### 5. The flowset packet can be captured on UDP port 2055 by a packet analyzer, such as Wireshark:

The screenshot shows a network traffic analysis interface. The top pane displays a list of packets with columns for No., Time, Source, Destination, Protocol, Length, and Info. The bottom pane shows a detailed view of a selected packet (No. 7, Time 86.342807, Source 192.168.201.254, Destination 192.168.201.1, Protocol CFLOW, Length 206). The detailed view includes packet structure information such as Padding, Flowset 2, Flowset ID, Flowset Length, Flowset ID, Flow ID, Octets, Post Octets, Packets, Post Packets, Duration, SrcPort, DstPort, Output, Protocol, Post ID, Self Serv Code Point, Classification Engine ID, Selector ID, Unknown Field Type, Forwarding Status, Flow End Reason, SrcAddr, DstAddr, and Padding.

## sFlow

sFlow is a method of monitoring the traffic on your network to identify areas on the network that may impact performance and throughput. FortiGate supports sFlow v5. sFlow collector software is available from a number of third-party software vendors. For more information about sFlow, see [www.sflow.org](http://www.sflow.org).

The packet information that the FortiGate's sFlow agent collects depends on the interface type:

- On an internal interface, when the interface receives packets from devices with private IP addresses, the collected information includes the private IP addresses.
- On an external, or WAN, interface, when the interface receives to route to or from the internet, the collected information includes the IP address of the WAN interface as the source or destination interface, depending on the direction of the traffic. It does not include IP addresses that are NATed on another interface.

sFlow datagrams contain the following information:

- Packet headers, such as MAC, IPv4, and TCP
- Sample process parameters, such as rate and pool
- Input and output ports
- Priority (802.1p and ToS)
- VLAN (802.1Q)
- Source prefixes, destination prefixes, and next hop addresses
- BGP source AS, source peer AS, destination peer AS, communities, and local preference
- User IDs (TACACS, RADIUS) for source and destination
- Interface statistics (RFC 1573, RFC 2233, and RFC 2358)

## Configuring sFlow

sFlow can be configured globally, then on traffic VDOMs and individual interfaces.

When configuring sFlow on a VDOM, the collector can be specified, or the collector that is configured globally can be used.

sFlow is supported on some interface types, such as physical, VLAN, and aggregate. It is not supported on virtual interfaces, such as VDOM link, IPsec, GRE, or SSL. When configuring sFlow on an interface, the rate that the agent samples traffic, the direction of that traffic, and the frequency that the agent sends sFlow datagrams to the sFlow collector can be specified. If sFlow is configured on the VDOM that the interface belongs to, the agent sends datagrams to the collector configured for the VDOM. Otherwise, the datagrams are sent to the collector that is configured globally.

Configuring sFlow for an interface disables NP offloading for all traffic on that interface.

### To configure sFlow globally:

```
config system sflow
    set collector-ip <ipv4_address>
    set collector-port <port>
    set source-ip <ipv4_address>
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

collector-ip <ipv4_address>	The IPv4 address of the sFlow collector that sFlow agents added to interface (default = 0.0.0.0).
collector-port <port>	The UDP port number used for sending sFlow datagrams (0 - 65535, default = 6343). Only configured this option if required by the sFlow collector or your network configuration.
source-ip <ipv4_address>	The source IPv4 address that the sFlow agent used to send datagrams to the collector (default = 0.0.0.0). If this option is not configured, the FortiGate uses the IP address of the interface that it sends the datagram through.
interface-select-method {auto   sdwan   specify}	How the outgoing interface to reach the server is selected (default = auto).
interface <interface>	The outgoing interface used to reach the server. This option is only available when interface-select-method is specify.

### To configure sFlow for a VDOM:

```
config vdom
    edit <vdom>
        config system vdom-sflow
            set vdom-sflow {enable | disable}
            set collector-ip <ipv4_address>
            set collector-port <port>
            set source-ip <ipv4_address>
            set interface-select-method {auto | sdwan | specify}
            set interface <interface>
        end
    next
end
```

<code>vdom-sflow {enable   disable}</code>	Enable/disable the sFlow configuration for the current VDOM (default = disable).
<code>collector-ip &lt;ipv4_address&gt;</code>	The IPv4 address of the sFlow collector that sFlow agents added to interface (default = 0.0.0.0). If this option is not configured, the global setting will be used.
<code>collector-port &lt;port&gt;</code>	The UDP port number used for sending sFlow datagrams (0 - 65535, default = 6343). Only configured this option if required by the sFlow collector or your network configuration. If this option is not configured, the global setting will be used.
<code>source-ip &lt;ipv4_address&gt;</code>	The source IPv4 address that the sFlow agent used to send datagrams to the collector (default = 0.0.0.0). If this option is not configured, the FortiGate uses the IP address of the interface that it sends the datagram through.
<code>interface-select-method {auto   sdwan   specify}</code>	How the outgoing interface to reach the server is selected (default = auto).
<code>interface &lt;interfae&gt;</code>	The outgoing interface used to reach the server. This option is only available when <code>interface-select-method</code> is <code>specify</code> .

### To configure sFlow on an interface:

```
config system interface
    edit <interface>
        set sflow-sampler {enable | disable}
        set sample-rate <integer>
        set polling-interval <integer>
        set sample-direction {tx | rx | both}
    next
end
```

<code>sflow-sampler {enable   disable}</code>	Enable/disable sFlow on this interface (default = disable).
<code>sample-rate &lt;integer&gt;</code>	The average number of packets that the agent lets pass before taking a sample (10 - 99999, default = 2000). Setting a lower rate will sample a higher number of packets, increasing the accuracy or the sampling data, but also increasing the CPU and network bandwidth usage. The default value is recommended.
<code>polling-interval &lt;integer&gt;</code>	The amount of time that the agent waits between sending datagrams to the collector, in seconds (1 - 255, default = 20). Setting a higher value lowers the amount of data that the agent sends across the network, but makes the collector's view of the network less current.
<code>sample-direction {tx   rx   both}</code>	The direction of the traffic that the agent collects (default = both).

## Link monitor

The link monitor is a mechanism that allows the FortiGate to probe the status of a detect server in order to determine the health of the link, next hop, or the path to the server. Ping, TCP echo, UDP echo, HTTP, and TWAMP protocols can be used for the probes. Typically, the detect server is set to a stable server several hops away. Multiple servers can also be configured with options to define the protocol and weights for each server.

The link monitor serves several purposes. In the most basic configuration, it can be used to detect failures and remove routes associated with the interface and gateway to prevent traffic from routing out the failed link. More granularity is added in 7.0 that allows only the routes specified in the link monitor to be removed from the routing table. With this benefit, only traffic to specific routing destinations are removed, rather than all routing destinations.

Another enhancement starting in 7.0.1 is an option to toggle between enabling or disabling policy route updates when a link health monitor fails.

The link monitor can also monitor remote servers for HA failover. Using the HA built-in link monitor, it is only able to detect physical link failovers to trigger HA link failover. With the link monitor, remote servers can be used to monitor the health of the path to the server in order to trigger HA failover.

Finally, the link monitor can cascade the failure to other interfaces. When the `update-cascade-interface` option is enabled, the interface can be configured in conjunction with `fail-detect` enabled to trigger a link down event on other interfaces.

The following topics provide more information about the link monitor:


- [Link monitor with route updates on page 529](#)
- [Enable or disable updating policy routes when link health monitor fails on page 531](#)
- [Add weight setting on each link health monitor server on page 533](#)
- [Dual internet connections on page 367](#)
- [SLA link monitoring for dynamic IPsec and SSL VPN tunnels on page 536](#)

## Link monitor with route updates

When a link monitor fails, only the routes that are specified in the link monitor are removed from the routing table, instead of all the routes with the same interface and gateway. If no routes are specified, then all of the routes are removed. Only IPv4 routes are supported.

### Example

In this example, the FortiGate has several routes to 23.2.2.2/32 and 172.16.202.2/24, and is monitoring the link *agg1* by pinging the server at 10.1.100.22. The link monitor uses the gateway 172.16.203.2.

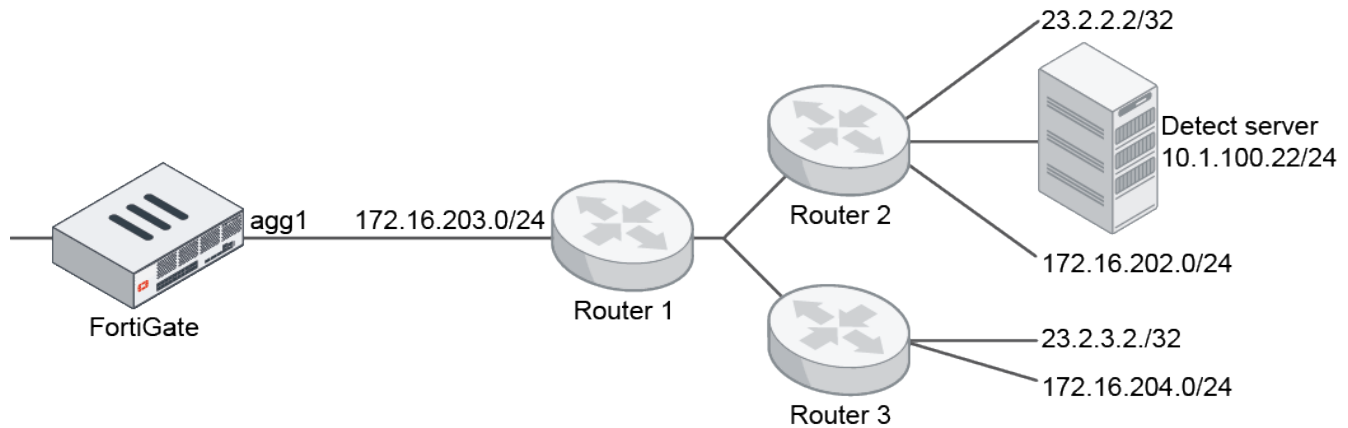

When the link monitor fails, only the routes to the specified subnet using interface *agg1* and gateway 172.16.203.2 are removed.

### To configure the link monitor:

```

config system link-monitor
  edit "22"
    set srcintf "agg1"
    set server "10.1.100.22"
    set gateway-ip 172.16.203.2
    set route "23.2.2.2/32" "172.16.202.0/24"
  next
end

```

### To check the results:

#### 1. When the link monitor is alive:

```

# get router info routing-table static
Routing table for VRF=0
S* 0.0.0.0/0 [5/0] via 10.100.1.249, port12
S 10.1.100.0/24 [10/0] via 172.16.203.2, agg1
S 23.2.2.2/32 [10/0] via 172.16.203.2, agg1
S 23.2.3.2/32 [10/0] via 172.16.203.2, agg1
S 172.16.201.0/24 [10/0] via 172.16.200.4, port9
S 172.16.202.0/24 [10/0] via 172.16.203.2, agg1
S 172.16.204.0/24 [10/0] via 172.16.200.4, port9
  [10/0] via 172.16.203.2, agg1
  [10/0] via 172.16.206.2, vlan100, [100/0]

```

#### 2. When the link monitor is dead:

```

# get router info routing-table static
Routing table for VRF=0
S* 0.0.0.0/0 [5/0] via 10.100.1.249, port12
S 10.1.100.0/24 [10/0] via 172.16.203.2, agg1
S 23.2.3.2/32 [10/0] via 172.16.203.2, agg1
S 172.16.201.0/24 [10/0] via 172.16.200.4, port9
S 172.16.204.0/24 [10/0] via 172.16.200.4, port9
  [10/0] via 172.16.203.2, agg1
  [10/0] via 172.16.206.2, vlan100, [100/0]

```




## Enable or disable updating policy routes when link health monitor fails

An option has been added to toggle between enabling or disabling policy route updates when a link health monitor fails. By disabling policy route updates, a link health monitor failure will not cause corresponding policy-based routes to be removed.

```
config system link-monitor
  edit <name>
    set update-policy-route {enable | disable}
  next
end
```

### Example

In the following topology, the FortiGate is monitoring the detect server, 10.1.100.22. The FortiGate has a policy-based route to destination 172.16.205.10 using the same gateway (172.16.202.1) and interface (port22). By configuring `update-policy-route disable`, the policy-based route is not removed when the link health monitor detects a failure.

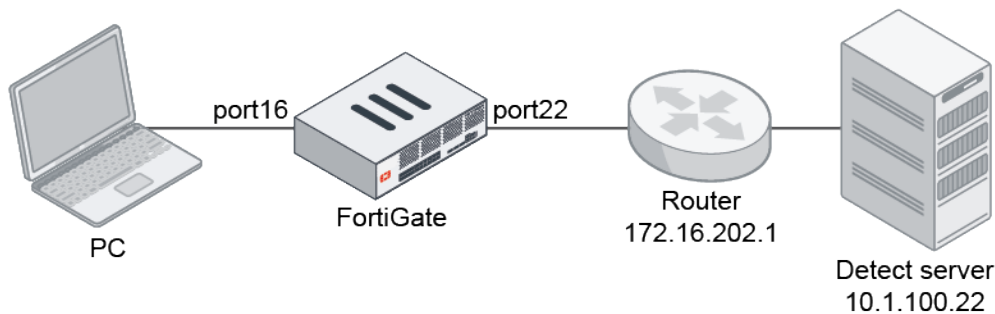

### To disable updating policy routes when the link health monitor fails:

#### 1. Configure the link health monitor:

```
config system link-monitor
  edit "test-1"
    set srcintf "port22"
    set server "10.1.100.22"
    set gateway-ip 172.16.202.1
    set failtime 3
    set update-policy-route disable
  next
end
```

#### 2. Configure the policy route:

```
config router policy
  edit 1
    set input-device "port16"
    set dst "172.16.205.10/255.255.255.255"
    set gateway 172.16.202.1
    set output-device "port22"
    set tos 0x14
    set tos-mask 0xff
```

```

    next
end

```

### 3. When the health link monitor status is up, verify that the policy route is active.

#### a. Verify the link health monitor status:

```

# diagnose sys link-monitor status
Link Monitor: test-1, Status: alive, Server num(1), HA state: local(alive), shared
(alive)
Flags=0x1 init, Create time: Fri May 28 15:20:15 2021
Source interface: port22 (14)
Gateway: 172.16.202.1
Interval: 500 ms
Service-detect: disable
Diffservcode: 000000
Class-ID: 0
  Peer: 10.1.100.22(10.1.100.22)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.22/32, gwy(172.16.202.1)
      protocol: ping, state: alive
        Latency(Min/Max/Avg): 0.374/0.625/0.510 ms
        Jitter(Min/Max/Avg): 0.008/0.182/0.074
        Packet lost: 0.000%
        Number of out-of-sequence packets: 0
        Fail Times(0/3)
        Packet sent: 7209, received: 3400, Sequence(sent/rcvd/exp):
7210/7210/7211

```

#### b. Verify the policy route list:

```

# diagnose firewall proute list
list route policy info(vf=root):
id=1 dscp_tag=0xff 0xff flags=0x0 tos=0x14 tos_mask=0xff protocol=0 sport=0-0 iif=41
dport=0-65535 oif=14(port22) gwy=172.16.202.1
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 172.16.205.10/255.255.255.255
hit_count=1 last_used=2021-05-27 23:04:33

```

### 4. When the health link monitor status is down, verify that the policy route is active:

#### a. Verify the link health monitor status:

```

# diagnose sys link-monitor status
Link Monitor: test-1, Status: die, Server num(1), HA state: local(die), shared(die)
Flags=0x9 init log_downgateway, Create time: Fri May 28 15:20:15 2021
Source interface: port22 (14)
Gateway: 172.16.202.1
Interval: 500 ms
Service-detect: disable
Diffservcode: 000000
Class-ID: 0
  Peer: 10.1.100.22(10.1.100.22)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.22/32, gwy(172.16.202.1)
      protocol: ping, state: die
        Packet lost: 11.000%
        Number of out-of-sequence packets: 0
        Recovery times(0/5) Fail Times(0/3)

```

```
Packet sent: 7293, received: 3471, Sequence(sent/rcvd/exp):
7294/7281/7282
```

**b. Verify the policy route list:**

```
# diagnose firewall proute list
list route policy info(vf=root):
id=1 dscp_tag=0xff 0xff flags=0x0 tos=0x14 tos_mask=0xff protocol=0 sport=0-0 iif=41
dport=0-65535 oif=14(port22) gwy=172.16.202.1
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 172.16.205.10/255.255.255.255
hit_count=1 last_used=2021-05-27 23:04:33
```

If the `update-policy-route` setting is enabled, the link health monitor would be down and the policy-based route would be disabled:

```
# diagnose firewall proute list
list route policy info(vf=root):
id=1 dscp_tag=0xff 0xff flags=0x8 disable tos=0x14 tos_mask=0xff protocol=0 sport=0-0
iif=41 dport=0-65535 oif=14(port22) gwy=172.16.202.1
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 172.16.205.10/255.255.255.255
hit_count=1 last_used=2021-05-27 23:04:33
```

## Add weight setting on each link health monitor server


Prior to FortiOS 7.0.1, the link health monitor is determined to be dead when all servers are unreachable. Starting in 7.0.1, the link health monitor can configure multiple servers and allow each server to have its own weight setting. When the link health monitor is down, it will trigger static route updates and cascade interface updates if the weight of all dead servers exceeds the monitor's fail weight threshold.

```
config system link-monitor
  edit <name>
    set srcintf <interface>
    set server-config {default | individual}
    set fail-weight <integer>
    config server-list
      edit <id>
        set dst <address>
        set weight <integer>
      next
    end
  next
end
```

server-config	Set the server configuration mode: <ul style="list-style-type: none"> <li>default: all servers share the same attributes.</li> <li>individual: some attributes can be specified for individual servers.</li> </ul>
fail-weight <integer>	Threshold weight to trigger link failure alert (0 - 255, default = 0).
server-list	Configure the servers to be monitored by the link monitor.
dst <address>	Enter the IP address of the server to be monitored.
weight <integer>	Weight of the monitor to this destination (0 - 255, default = 0).

## Examples

In the following topology, there are two detect servers that connect to the FortiGate through a router: server 1 (10.1.100.22) and server 2 (10.1.100.55).

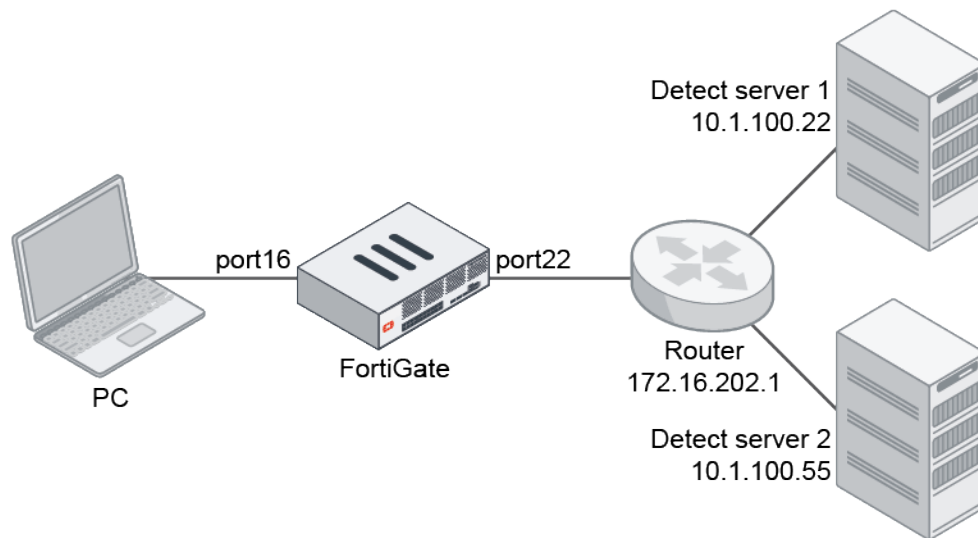

### Alive link health monitor

In this configuration, one server is dead and one server alive. The failed server weight is not over the threshold, so the link health monitor status is alive.

#### To configure the weight settings on the link health monitor:

##### 1. Configure the link health monitor:

```

config system link-monitor
  edit "test-1"
    set srcintf "port22"
    set server-config individual
    set gateway-ip 172.16.202.1
    set failtime 3
    set fail-weight 40
    config server-list
      edit 1
        set dst "10.1.100.22"
        set weight 60
      next
      edit 2
        set dst "10.1.100.55"
        set weight 30
      next
    end
  next
end

```

##### 2. Trigger server 2 to go down. The link monitor is still alive because the fail weight threshold has not been reached.

### 3. Verify the link health monitor status:

```
# diagnose sys link-monitor status test-1
Link Monitor: test-1, Status: alive, Server num(2), HA state: local(alive), shared
(alive)
Flags=0x1 init, Create time: Fri Jun  4 17:23:29 2021
Source interface: port22 (14)
Gateway: 172.16.202.1
Interval: 500 ms
Service-detect: disable
Diffservcode: 000000
Class-ID: 0
Fail-weight (40): not activated
  Peer: 10.1.100.22(10.1.100.22)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.22/32, gwy(172.16.202.1)
    protocol: ping, state: alive
      Latency(Min/Max/Avg): 0.417/0.585/0.530 ms
      Jitter(Min/Max/Avg): 0.007/0.159/0.057
      Packet lost: 0.000%
      Number of out-of-sequence packets: 0
      Fail Times(0/3)
      Packet sent: 239, received: 236, Sequence(sent/rcvd/exp): 240/240/241
  Peer: 10.1.100.55(10.1.100.55)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.55/32, gwy(172.16.202.1)
    Fail weight 30 applied
    protocol: ping, state: dead
      Packet lost: 100.000%
      Number of out-of-sequence packets: 0
      Recovery times(0/5) Fail Times(1/3)
      Packet sent: 239, received: 3, Sequence(sent/rcvd/exp): 240/4/5
```

## Dead link health monitor

In this configuration, one server is dead and one server alive. The failed server weight is over the threshold, so the link health monitor status is dead.

### To configure the weight settings on the link health monitor:

#### 1. Configure the link health monitor:

```
config system link-monitor
  edit "test-1"
    set srcintf "port22"
    set server-config individual
    set gateway-ip 172.16.202.1
    set failtime 3
    set fail-weight 40
  config server-list
    edit 1
      set dst "10.1.100.22"
      set weight 30
    next
    edit 2
      set dst "10.1.100.55"
```

```

        set weight 50
    next
end
next
end

```

2. Trigger server 2 to go down. The link monitor is dead because the fail weight threshold has been reached.

3. Verify the link health monitor status:

```

# diagnose sys link-monitor status test-1
Link Monitor: test-1, Status: dead, Server num(2), HA state: local(dead), shared(dead)
Flags=0x9 init log_downgateway, Create time: Fri Jun  4 17:23:29 2021
Source interface: port22 (14)
Gateway: 172.16.202.1
Interval: 500 ms
Service-detect: disable
Diffservcode: 000000
Class-ID: 0
Fail-weight (40): activated
  Peer: 10.1.100.22(10.1.100.22)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.22/32, gwy(172.16.202.1)
    protocol: ping, state: alive
      Latency(Min/Max/Avg): 0.393/0.610/0.520 ms
      Jitter(Min/Max/Avg): 0.009/0.200/0.095
      Packet lost: 0.000%
      Number of out-of-sequence packets: 0
      Fail Times(0/3)
      Packet sent: 680, received: 677, Sequence(sent/rcvd/exp): 681/681/682
  Peer: 10.1.100.55(10.1.100.55)
    Source IP(172.16.202.2)
    Route: 172.16.202.2->10.1.100.55/32, gwy(172.16.202.1)
    Fail weight 50 applied
    protocol: ping, state: dead
      Packet lost: 100.000%
      Number of out-of-sequence packets: 0
      Recovery times(0/5) Fail Times(1/3)
      Packet sent: 680, received: 3, Sequence(sent/rcvd/exp): 681/4/5

```

## SLA link monitoring for dynamic IPsec and SSL VPN tunnels

The link health monitor settings can measure SLA information of dynamic VPN interfaces, which assign IP addresses to their clients during tunnel establishment. This includes SSL VPN tunnels, IPsec remote access, and IPsec site-to-site tunnels.



This feature currently only supports IPv4 and the ICMP monitoring protocol. In the IPsec tunnel settings, `net-device` must be disabled.

```

config system link-monitor
  edit <name>
    set server-type {static | dynamic}
  next
end


```

**To view the dial-up tunnel statistics:**

```
# diagnose sys link-monitor tunnel {name | all} [<tunnel_name>]
```

**Example**

In this example, endpoint users dial up using FortiClient to create IPsec tunnels with the FortiGate and obtain IP addresses. The link monitor on the FortiGate's dynamic VPN interface detects the path quality to the endpoints.

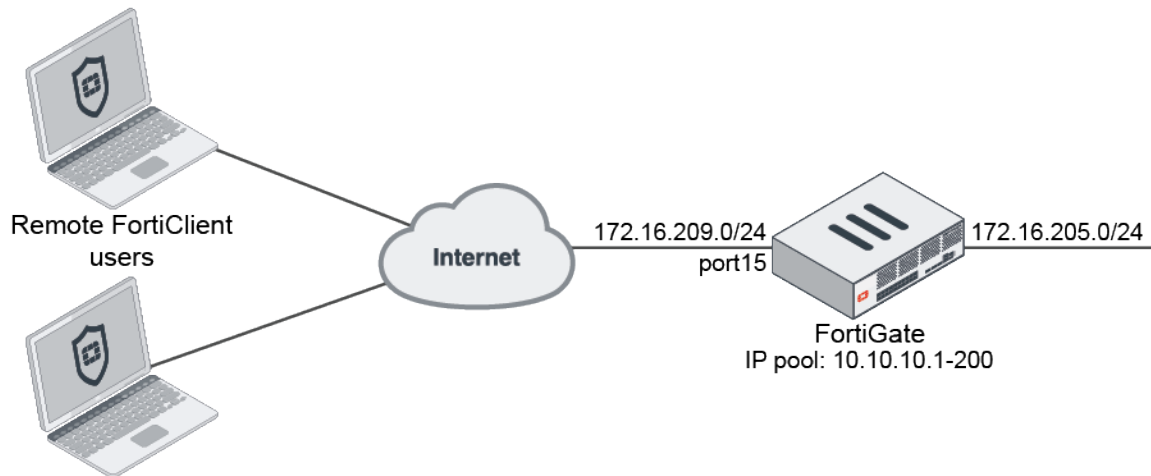**To configure SLA link health monitoring in dynamic IPsec tunnels:****1. Configure the IPsec phase 1 interface:**

```
config vpn ipsec phase1-interface
  edit "for_Branch"
    set type dynamic
    set interface "port15"
    set mode aggressive
    set peertype any
    set net-device disable
    set mode-cfg enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set dpd on-idle
    set dhgrp 5
    set xauthtype auto
    set authusrgrp "vpngroup"
    set assign-ip-from name
    set ipv4-netmask 255.255.255.0
    set dns-mode auto
    set ipv4-split-include "172.16.205.0"
    set ipv4-name "client_range"
    set save-password enable
    set psksecret *****
    set dpd-retryinterval 60
  next
end
```

**2. Configure the IPsec phase 2 interface:**

```
config vpn ipsec phase2-interface
    edit "for_Branch_p2"
        set phase1name "for_Branch"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set dhgrp 5
    next
end
```

**3. Configure the dynamic interface:**

```
config system interface
    edit "for_Branch"
        set vdom "root"
        set ip 10.10.10.254 255.255.255.255
        set type tunnel
        set remote-ip 10.10.10.253 255.255.255.0
        set snmp-index 100
        set interface "port15"
    next
end
```

**4. Add the IPsec dial-up tunnel to the link health monitor:**

```
config system link-monitor
    edit "1"
        set srcintf "for_Branch"
        set server-type dynamic
    next
end
```

**5. Once endpoint users have connected using FortiClient, verify the tunnel information:**

```
# get vpn ipsec tunnel summary
'for_Branch_0' 10.1.100.23:0 selectors(total,up): 1/1 rx(pkt,err): 21091/0 tx
(pkt,err): 20741/0
'for_Branch_1' 10.1.100.13:0 selectors(total,up): 1/1 rx(pkt,err): 19991/0 tx
(pkt,err): 20381/0
```

**6. Verify the link health monitor status:**

```
# diagnose sys link-monitor tunnel all
for_Branch_0 (1): state=alive, peer=10.10.10.1, create_time=2022-02-08 10:43:11,
srcintf=for_Branch, latency=0.162, jitter=0.018, pktloss=0.000%
for_Branch_1 (1): state=alive, peer=10.10.10.2, create_time=2022-02-08 10:49:24,
srcintf=for_Branch, latency=0.266, jitter=0.015, pktloss=0.000%
```

**7. Manually add 200 ms latency on the path between the FortiGate and FortiClients.****8. Verify the link health monitor status again:**

```
# diagnose sys link-monitor tunnel all
for_Branch_0 (1): state=alive, peer=10.10.10.1, create_time=2022-02-08 10:43:11,
srcintf=for_Branch, latency=200.177, jitter=0.021, pktloss=0.000%
for_Branch_1 (1): state=alive, peer=10.10.10.2, create_time=2022-02-08 10:49:24,
srcintf=for_Branch, latency=200.257, jitter=0.017, pktloss=0.000%
```



## IPv6

From an administrative point of view IPv6 works almost the same as IPv4 in FortiOS. The primary difference is the use of IPv6 format for addresses. See [IPv6 overview on page 539](#) for more information.

By default, the IPv6 settings are not displayed in the GUI.

### To enable IPv6 in the GUI:

1. Go to *System > Feature Visibility*.
2. Under *Core Features*, enable *IPv6*.
3. Click *Apply*.

Once enabled, you will be able to use IPv6 addresses as well as the IPv4 addressing for the following FortiGate firewall features which are not limited to:

- [Interfaces](#)
- [DHCP Server](#)
- [DHCP Relay](#)
- [DNS](#)
- [Static Routes](#)
- [Firewall Policy](#)
- [NAT](#)
- [Addresses](#)
- [Virtual IPs](#)
- [IP Pools](#)
- [IPsec VPN](#)
- [GRE over IPsec](#)

This section also contains the following topics:

- [IPv6 overview on page 539](#)
- [IPv6 quick start on page 540](#)
- [Neighbor discovery proxy on page 544](#)
- [IPv6 address assignment on page 545](#)
- [NAT66, NAT46, NAT64, and DNS 64 on page 557](#)
- [DHCPv6 relay on page 567](#)
- [IPv6 tunneling on page 568](#)
- [IPv6 configuration examples on page 579](#)

## IPv6 overview

Internet Protocol version 6 (IPv6) is the latest version of the Internet Protocol (IP) and was developed to address the limitations of its predecessor, IPv4. The primary issue with IPv4 is its limited number of addresses, which are based on a 32-bit scheme and have a theoretical limit of 2 to the power of 32. In contrast, IPv6 uses a 128-bit address scheme, allowing for a much larger theoretical limit of 2 to the power of 128 addresses.

In simpler terms:

- IPv4 can support 4 294 967 296 addresses.
- IPv6 can support 340 282 366 920 938 463 463 374 607 431 768 211 456 addresses.

In addition to the expanded number of addresses, some of the other benefits of IPv6 include:

- More efficient routing due to reduction in the size of routing tables. This is achieved through hierarchical address allocation, which allows for more efficient routing of data packets.
- Reduced management requirements by supporting stateless auto-reconfiguration of hosts. This means that devices can automatically configure their network settings without the need for manual intervention.
- Improved methods to change Internet Service Providers. With IPv6, it is easier for users to switch between different ISPs without experiencing any service disruption.
- Better mobility support by providing seamless connection. This means that devices can move between different networks without losing their connection.
- Multi-homing. This allows a device to have multiple network connections, providing increased reliability and redundancy.
- Improved security with built-in support for IPsec. IPsec is a security protocol that provides authentication and encryption for data transmitted over a network.
- IPv6 offers scoped addresses with link-local, unique local, and global address spaces. This allows for more flexible addressing and improved network organization.

Address Type	Notation	Description	Example
Link-local Unicast	FE80::/10	Designed for use on a local link and are automatically configured on all interfaces. These addresses are not routable.	FE80::1
Unique Local Unicast	FC00::/7	Similar to IPv4 private addresses and can be used on your own network. They are not routable globally.	FC00::1 FD00::1
Global Unicast	2001::/3	Similar to IPv4 public addresses and can be used on the Internet. They are routable globally.	2001::1 3000::1

See [Internet Protocol Version 6 Address Space](#) for more information.

## IPv6 quick start

This section provides an introduction to setting up a few basic IPv6 settings on the FortiGate. See [Basic administration on page 54](#) for more information about basic FortiGate administration.



This chapter provides instructions for basic IPv6 configuration that should work in most cases, regardless of whether the device has an existing IPv4 configuration or is a new FortiGate device.

The topics covered in this section include:

- [Configuring an interface on page 541](#)
- [Configuring the default route on page 541](#)
- [Configuring the DNS on page 542](#)
- [Configuring the address object on page 542](#)

- [Configuring the address group on page 543](#)
- [Configuring the firewall policy on page 543](#)

Before starting, make sure to enable the IPv6 feature.

#### To enable IPv6 in the GUI:

1. Go to *System > Feature Visibility*.
2. Under *Core Features*, enable *IPv6*.
3. Click *Apply*.

## Configuring an interface

#### To configure an interface in the GUI:

1. Go to *Network > Interfaces*.
2. Select an interface and click *Edit*.
3. In the *Address* section, enter the *IPv6 Address/Prefix*.
4. In the *Administrative Access* section, select the IPv6 access options as needed (such as *PING*, *HTTPS*, and *SSH*).
5. Click *OK*.

#### To configure an interface in the CLI:

```
config system interface
    edit <interface name>
        config ipv6
            set ip6-address <IPv6 prefix>
            set ip6-allowaccess{ping | https | ssh | snmp | http | telnet | fgfm | fabric}
        end
    next
end
```

## Configuring the default route

Setting the default route enables basic routing to allow the FortiGate to return traffic to sources that are not directly connected. The gateway address should be your existing router or L3 switch that the FortiGate is connected to. Set the interface to be the interface the gateway is connected to.

#### To configure the default route in the GUI:

1. Go to *Network > Static Routes*.
2. Click *Create New > IPv6 Static Route*.
3. Leave the *Destination* prefix as *::/0*. This is known as a default route, since it would match any IPv6 address.
4. Enter the *Gateway Address*.
5. Select an *Interface*.
6. Click *OK*.

**To configure the default route in the CLI:**

```
config router static6
    edit 0
        set gateway <IPv6 address>
        set device <interface name>
    next
end
```

## Configuring the DNS

**To configure a DNS domain list in the GUI:**

1. Go to *Network > DNS*.
2. Under *IPv6 DNS Settings*, configure the primary and secondary DNS servers as needed.
3. Click *Apply*.

**To configure a DNS domain list in the CLI:**

```
config system dns
    set ip6-primary <IPv6 address>
    set ip6-secondary <IPv6 address>
end
```

## Configuring the address object

Addresses define sources and destinations of network traffic and can be used in many functions such as firewall policies, ZTNA, and so on. When creating an IPv6 address object, several different types of addresses can be specified similar to IPv4 addresses. See [Address Types on page 1152](#) for more information.

**To configure an IPv6 address in the GUI:**

1. Go to *Policy & Objects > Addresses*.
2. Select *Create New > Address*.
3. In the *Category* field, select *IPv6 Address*.
4. Enter a *Name* for the address object.
5. In the *Type* field, select one of the types from the dropdown menu.
6. Configure the rest of the settings as required.
7. Click *OK*.

**To configure an IPv6 address in the CLI:**

```
config firewall address6
    edit <name>
        set type {ipprefix | iprange | fqdn | geography | dynamic | template | mac}
    next
end
```

## Configuring the address group

Address groups are designed for ease of use in the administration of the device. See [Address group on page 1167](#) for more information.

### To create an address group:

1. Go to *Policy & Objects > Addresses*.
2. Go to *Create New > Address Group*.
3. In the *Category* field, select *IPv6 Group*.
4. Enter a *Group name* for the address object.
5. Select the + in the *Members* field. The *Select Entries* pane opens.
6. Select members of the group. It is possible to select more than one entry. Select the x icon in the field to remove an entry.
7. Enter any additional information in the *Comments* field.
8. Click *OK*.

### To configure an address group in the CLI:

```
config firewall addrgrp6
  edit <name>
    set member <name>
  next
end
```

## Configuring the firewall policy

A firewall policy must be in place for any traffic that passes through a FortiGate. See [Firewall policy on page 1036](#) for more information.

### To create a firewall policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Enter a *Name* and configure the following necessary settings:

<b>Incoming Interface</b>	Incoming (ingress) interface
<b>Outgoing Interface</b>	Outgoing (egress) interface
<b>Source</b>	Source IPv6 address name and address group names
<b>Destination</b>	Destination IPv6 address name and address group names
<b>Schedule</b>	Schedule name
<b>Service</b>	Service and service group names
<b>Action</b>	Policy action

**To configure a firewall policy in the CLI:**

```

config firewall policy
    edit <policyid>
        set srcintf <name>
        set dstintf <name>
        set action {accept | deny}
        set srcaddr6 <name>
        set dstaddr6 <name>
        set schedule <name>
        set service <name>
    next
end

```

See [IPv6 quick start example on page 579](#) for a sample configuration.

## Neighbor discovery proxy

This feature provides support for proxying the IPv6 Neighbor Discovery Protocol (NDP) to allow the following ICMP messages to be forwarded between upstream and downstream interfaces:

- Router Advertisement (RA)
- Neighbor Solicitation (NS)
- Neighbor Advertisement (NA)
- Router Solicitation (RS)
- Redirect



Typically only one interface receives RA traffic, and the interface is automatically considered the upstream interface.

The Neighbor Discovery Protocol (NDP) is a layer 2 protocol that performs several tasks to improve the efficiency and consistency of data transmission across multiple networks and processes. NDP uses ICMPv6 messages to perform the following tasks:

- Stateless auto-configuration: This enables the auto-configuration of IPv6 addresses without the need for a DHCP server. This means that each host on the network can automatically configure its unique IPv6 link-local address and global unicast address.
- Address Resolution: NDP performs a function similar to IPv4's Address Resolution Protocol (ARP), but instead of using ARP, it uses NDP to dynamically resolve IPv6 addresses to their corresponding MAC addresses.
- Neighbor Unreachability Detection (NUD): This function detects when a host is no longer reachable, allowing for more efficient routing and data transmission.
- Duplicate Address Detection (DAD): This function verifies that there is no duplication of unicast IPv6 addresses in the network, ensuring that each host has a unique address.

Configure ND proxy in the CLI using the following syntax:


```

config system nd-proxy
    set status {enable|disable}
    set member <interface> <interface> [<interface>...]
end

```

Option	Description
status	Enable/disable the use of neighbor discovery proxy.
member	List of interfaces using the neighbor discovery proxy.

In this example, the client is connected to a FortiGate device that is configured as an ND (Neighbor Discovery) proxy. Port1 is the upstream interface that receives Router Advertisement (RA) traffic, and port5 is the downstream interface that connects to the client. This setup allows the FortiGate device to facilitate communication between the client and the IPv6 router.

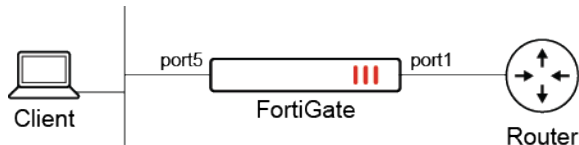

### To configure ND Proxy on FortiGate:

1. Enable address auto-configuration on the upstream interface:

```

config system interface
  edit "port1"
    config ipv6
      set autoconf enable
    end
  next
end

```

2. Enable ND proxy on the interfaces:

```

config system nd-proxy
  set status enable
  set member "port1" "port5"
end

```



See [RFC 4389](#) for more information on Neighbor Discovery Proxies (ND Proxy).

## IPv6 address assignment

On the FortiGate, an interface can use the following methods to obtain an IPv6 address:

- [IPv6 stateless address auto-configuration \(SLAAC\) on page 546](#)
- [DHCPv6 stateful server on page 547](#)
- [SLAAC with DHCPv6 stateless server on page 549](#)
- [IPv6 prefix delegation on page 551](#)



You can configure IPv6 using the CLI. To configure IPv6 using the GUI, ensure IPv6 is enabled by going to *System > Feature Visibility* and enabling *IPv6*.

 
## IPv6 stateless address auto-configuration (SLAAC)

FortiGate can easily obtain an IPv6 address on any given interface using SLAAC (stateless address auto-configuration). SLAAC is designed only for IP assignments and does not provide DNS server addresses to hosts. See [RFC 4862](#) for more information.

Use one of the following options to obtain a DNS server address:

- [DHCPv6 stateful server on page 547](#)
- [SLAAC with DHCPv6 stateless server on page 549](#)

In this example, Server-Fgt is connected to Client-Fgt. Server-Fgt has SLAAC enabled, which allows Client-Fgt to automatically obtain an IPv6 address using the auto-configuration IPv6 address option.



### To enable IPv6 auto-configuration in the GUI:

1. Configure SLAAC on Server-Fgt:

- Go to *Network > Interfaces* and edit port5.
- Configure the following settings:

<b>IPv6 addressing mode</b>	Manual
<b>IPv6 Address/Prefix</b>	2001:db8:d0c:1::1/64
<b>Stateless Address Auto-configuration (SLAAC)</b>	Enable
<b>IPv6 prefix list</b>	Enable
<b>IPv6 prefix</b>	2001:db8:d0c:1::/64

- Click OK.

2. Configure Client-Fgt to automatically obtain an IPv6 address:

- Go to *Network > Interfaces* and edit port5.
- Enable *Auto configure IPv6 address*. Client-Fgt uses the prefix that it obtains from the Server-Fgt interface, and automatically generates an IPv6 address.

3. Verify that Client-Fgt automatically generated an IPv6 address:

- Go to *Network > Interfaces* and edit port5. The *IPv6 Address/Prefix* field is populated with an IPv6 address.



## To enable IPv6 auto-configuration in the CLI:

### 1. Configure SLAAC on Server-Fgt:

```
config system interface
  edit "port5"
    config ipv6
      set ip6-address 2001:db8:d0c:1::1/64
      set ip6-send-adv enable
      config ip6-prefix-list
        edit 2001:db8:d0c:1::/64
        next
      end
    end
  next
end
```

### 2. Configure Client-Fgt to automatically obtain an IPv6 address:

```
config system interface
  edit "port5"
    config ipv6
      set autoconf enable
    end
  next
end
```

 
### 3. Verify that Client-Fgt automatically generated an IPv6 address:

```
# diagnose ipv6 address list | grep port5
dev=4 devname=port5 flag= scope=0 prefix=64 addr=2001:db8:d0c:1:20c:29ff:fe4d:f83d
preferred=604419 valid=2591619 cstamp=976270 tstamp=979470
```

## DHCPv6 stateful server

Similar to a DHCPv4 server, a DHCPv6 server is stateful. It can track client/server states, assign IP addresses to clients, and maintain full control over the process. In addition to assigning IP addresses, a DHCP server can also provide DNS server addresses. However, this IP address assignment method does not support failover protection. If the DHCPv6 server fails, hosts are unable to obtain an IPv6 address, and the network ceases to function. Furthermore, DHCPv6 does not provide gateway information. See [RFC 3315](#) for more information.

In this example, Server-Fgt is connected to Client-Fgt. Server-Fgt has a stateful DHCPv6 server configured that allows Client-Fgt to automatically obtain an IPv6 address and DNS server address using the DHCP option.



## To configure a DHCPv6 stateful server in the GUI:

1. Configure the Server-Fgt with DHCPv6 stateful server:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Configure the following settings:

<b>DHCPv6 Server</b>	Enable
<b>IPv6 subnet</b>	2001:db8:d0c:1::/64
<b>DNS service</b>	Same as System DNS
<b>Stateful server.</b>	Enable
<b>IP mode</b>	IP range
<b>Address range</b>	2001:db8:d0c:1::a to 2001:db8:d0c:1::f

- c. Click OK.
2. Configure Client-Fgt to obtain an IPv6 address using DHCP:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Set *IPv6 addressing mode* to *DHCP*.
  - c. Click OK.
3. Verify that Client-Fgt obtained an IPv6 address and DNS server address from the DHCPv6 server:
  - a. Go to *Network > Interfaces* and edit port5. The *Obtained IP/Netmask* and *Acquired DNS* fields are populated with an IPv6 address.

### To configure a DHCPv6 stateful server in the CLI:

1. Configure Server-Fgt with DHCPv6 stateful server:

```
config system dhcp6 server
  edit 1
    set dns-service default
    set subnet 2001:db8:d0c:1::/64
    set interface "port5"
    config ip-range
      edit 1
        set start-ip 2001:db8:d0c:1::a
        set end-ip 2001:db8:d0c:1::f
      next
    end
  next
end
```

2. Configure Client-Fgt to obtain an IPv6 address using DHCP:

```
config system interface
  edit "port5"
    config ipv6
      set ip6-mode dhcp
    end
  next
end
```

3. Verify that Client-Fgt obtained an IPv6 address and DNS server address from the DHCPv6 server:

```
# diagnose ipv6 address list | grep port5
dev=4 devname=port5 flag=P scope=0 prefix=128 addr=2001:db8:d0c:1::a
preferred=4294967295 valid=4294967295 cstamp=1298969 tstamp=1298969ip6-address
# dia test application dnsproxy 3
worker idx: 0
```

```

 
VDM: root, index=0, is primary, vdom dns is enabled, pip-0.0.0.0 dns_log=1
dns64 is disabled
DNS servers:
2001:db8:d0c:1::ff:53 vrf=0 tz=0 encrypt=none req=1 to=1 res=0 rt=0 ready=1 timer=0
probe=0 failure=1 last_failed=19812

```

## SLAAC with DHCPv6 stateless server

Using Stateless Address Auto Configuration (SLAAC) with a stateless DHCPv6 server provides a solution for obtaining other host configurations, such as DNS server addresses, while retaining the auto-configuration aspect of SLAAC. This approach also provides failover protection in the event that the DHCPv6 server fails. In addition to obtaining host configurations through the stateless DHCPv6 server, interfaces can also obtain gateway information through Router Advertisements (RAs). This allows for a robust and flexible IPv6 network configuration.

In this example, Server-Fgt is connected to Client-Fgt. Server-Fgt has both SLAAC and stateless DHCPv6 server enabled. This allows Client-Fgt to automatically obtain an IPv6 address using the *Auto configure IPv6 address* option and to acquire a DNS server address using the `dhcp6-information-request` option.



### To enable IPv6 auto-configuration with DHCPv6 stateless server in the GUI:

1. Configure SLAAC on Server-Fgt:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Configure the following settings:

<b>IPv6 addressing mode</b>	Manual
<b>IPv6 Address/Prefix</b>	2001:db8:d0c:1::1/64
<b>Stateless Address Auto-configuration (SLAAC)</b>	Enable
<b>IPv6 prefix list</b>	Enable
<b>IPv6 prefix</b>	2001:db8:d0c:1::/64

- c. Click OK.
- d. Input the following commands from the CLI:

```

config system interface
  edit "port5"
    config ipv6
      set ip6-other-flag enable
    end
  next
end

```

2. Configure DHCPv6 stateless server on the Server-Fgt:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Configure the following settings:

<b>DHCPv6 Server</b>	Enable
<b>DNS service</b>	Same as System DNS
<b>Stateful server</b>	Disable

c. Click OK.

3. Configure Client-Fgt to automatically obtain an IPv6 address and DNS server address from the DHCPv6 server:

- a. Go to *Network > Interfaces* and edit port5.
- b. Enable *Auto configure IPv6 address*. Client-Fgt uses the prefix obtained from the Server-Fgt interface to automatically generate an IPv6 address.
- c. Input the following commands from the CLI:

```
config system interface
  edit "port5"
    config ipv6
      set dhcp6-information-request enable
    end
  next
end
```

d. Click OK.

4. Verify that Client-Fgt automatically generated an IPv6 address and obtained the DNS server address from the DHCPv6 server:

- a. Go to *Network > Interfaces* and edit port5. The IPv6 Address/Prefix field is populated with an IPv6 address
- b. Use the below CLI command to verify the DNS server address:

```
#dia test application dnsproxy 3
worker idx: 0
VDOM: root, index=0, is primary, vdom dns is enabled, pip-0.0.0.0 dns_log=1
dns64 is disabled
DNS servers:
2001:db8:d0c:1::1:53 vrf=0 tz=0 encrypt=none req=1 to=1 res=0 rt=0 ready=1 timer=0
probe=0 failure=1 last_failed=46738
...
```

### To enable IPv6 autoconfiguration with DHCPv6 stateless server in the CLI:

1. Configure SLAAC on Server-Fgt:

```
config system interface
  edit "port5"
    config ipv6
      set ip6-address 2001:db8:d0c:1::1/64
      set ip6-send-adv enable
      set ip6-other-flag enable
      config ip6-prefix-list
        edit 2001:db8:d0c:1::/64
      next
    end
  next
end
```

2. Configure DHCPv6 stateless server on the Server-Fgt:

```

config system dhcp6 server
  edit 1
    set dns-service default
    set interface "port5"
  next
end

```

### 3. Configure the Client-Fgt to obtain an IPv6 address automatically:

```

config system interface
  edit "port5"
    config ipv6
      set autoconf enable
      set dhcp6-information-request enable
    end
  next
end

```

### 4. Verify that Client-Fgt automatically generated an IPv6 address and obtained the DNS server address from the DHCPv6 server:

```

# diagnose ipv6 address list | grep port5
dev=4 devname=port5 flag= scope=0 prefix=64 addr=2001:db8:d0c:1:20c:29ff:fe4d:f83d
preferred=604681 valid=2591881 cstamp=1675487 tstamp=1772919
# dia test application dnsproxy 3
worker idx: 0
VDOM: root, index=0, is primary, vdom dns is enabled, pip-0.0.0.0 dns_log=1
dns64 is disabled
DNS servers:
2001:db8:d0c:1::1:53 vrf=0 tz=0 encrypt=none req=1 to=1 res=0 rt=0 ready=1 timer=0
probe=0 failure=1 last_failed=46738
...


```

## IPv6 prefix delegation

IPv6 prefix delegation allows the dynamic assignment of an address prefix and DNS server address to an upstream interface. An upstream interface is typically the interface that is connected to an Internet Service Provider (ISP). This process also automates the assignment of prefixes to downstream interfaces. A downstream interface is any interface that is not an upstream interface and uses delegated addressing mode. Downstream interfaces can be configured to request specific IPv6 subnets from the upstream interface. Once a downstream interface receives the IPv6 address, other devices connected to the downstream interface can obtain an IPv6 address by using DHCPv6 or by configuring their own IP address using auto-configuration.

In this example, Server-Fgt is connected to a DHCPv6 server provided by the ISP through an upstream interface (port1). Server-Fgt is configured with a delegate interface (port5) to receive the IPv6 prefix and DNS server address from the upstream interface.

A downstream interface (port5) connects Client-Fgt to Server-Fgt. The Client-Fgt interface (port5) is configured to receive the IPv6 address and DNS server address from the Server-FortiGate using DHCP addressing mode or auto-configuration.

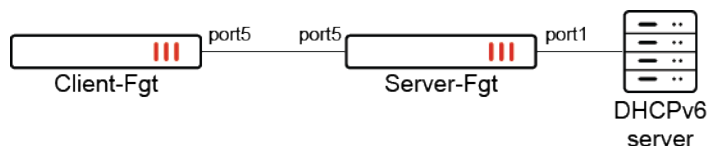

Using the GUI or CLI to configure a downstream FortiGate to obtain the IPv6 and DNS server address from delegated interface using DHCP mode requires the following steps:

1. Configure the following items on Server\_FGT:
  - Upstream interface
  - Downstream interface
  - DHCPv6 server on the downstream interface.
2. Configure Client\_FGT to receive IPv6 prefix and DNS from the delegated interface.

Instead of configuring a DHCPv6 server on the downstream interface of Server\_FGT, you can configure SLAAC. See [IPv6 prefix delegation with SLAAC on page 555](#).

## GUI configuration

### To configure Server\_FGT:

1. Configure the upstream interface on Server-Fgt:
  - a. Go to *Network > Interfaces* and edit the port1.
  - b. Enable *DHCPv6 prefix delegation*.
  - c. Select the + in the IAPD prefix hint to open the ID and prefix field.
  - d. Enter 1 for *ID* and *::/48* for *prefix* field. You can add two or more entries. Select the x icon in the field to remove an entry.

The screenshot shows the 'Edit Interface' window. Under the 'DHCPv6 prefix delegation' section, the toggle switch is turned on. Below it, the 'IAPD 1 prefix hint' section contains a table with two columns: 'ID' and 'Prefix'. The first row has '1' in the ID column and '::/48' in the Prefix column. There is a plus icon (+) below the table to add more entries, and an 'x' icon to the right of the table to remove entries.

ID	Prefix
1	::/48

- e. Click OK.
2. Verify upstream interface obtained the prefix delegation, see [Verify upstream interface obtained prefix delegation and DNS server address](#).
3. Configure the downstream interface on Server-Fgt:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Set *IPv6 addressing mode* to *Delegated*.
  - c. Enter 1 for *Identity association identifier* field.
  - d. Set *IPv6 upstream* interface to *port1*.
  - e. Click OK.
4. Verify downstream interface obtained an IPv6 Address/Prefix:
  - a. Go to *Network > Interfaces* and edit port5. The IPv6 Address/Prefix field is populated with an IPv6 Address/Prefix.
5. Configure DHCPv6 Server on the downstream interface:
  - a. Go to *Network > Interfaces* and edit the port5
  - b. Enable *DHCPv6 Server*.
  - c. Set *DNS service* to *Delegated*.
  - d. From the *Upstream interface* dropdown list, select *port1*.
  - e. Input the following commands from the CLI:

```
config system dhcp6 server
    edit 1
        set delegated-prefix-iaid 1
    next
end
```

- f. Enable *Stateful server*.
- g. Set *IP mode* to *Delegated*.
- h. Click OK.

### To configure Client\_FGT:

1. Configure the Client-Fgt interface using DHCP mode:
  - a. Go to *Network > Interfaces* and edit the port5.
  - b. Set *IPv6 addressing mode* to *DHCP*. This allows Client\_Fgt to obtain the IPv6 prefix and DNS from the delegated interface.
  - c. Click OK.
2. Verify that Client-Fgt obtained an IPv6 address and the DNS server address from the delegated interface:
  - a. Go to *Network > Interfaces* and edit port5. The *Obtained IP/Netmask* and *Acquired DNS* fields are populated with an IPv6 address.

## CLI configuration

Using the CLI to configure a downstream FortiGate to obtain the IPv6 and DNS server address from delegated interface using DHCP mode requires the following steps:

### To configure Server\_FGT:

1. Configure the upstream interface on Server-Fgt:

```
config system interface
    edit "port1"
        config ipv6
            set dhcp6-prefix-delegation enable
            config dhcp6-iapd-list
                edit 1
                    set prefix-hint ::/48
                next
            end
        end
    next
end
```

2. Verify upstream interface obtained prefix delegation and DNS server address:

```
config system interface
    edit port1
        config ipv6
Server-Fgt # get
ip6-mode          : static
```

```

...
dhcp6-prefix-delegation: enable
delegated-prefix iaid 1      : 2001:db8:d0c::/48
preferred-life-time          : 4294967295
valid-life-time              : 4294967295
delegated-DNS1              : 2001:db8::35
delegated-DNS2               : ::
...
dhcp6-iapd-list:
  == [ 1 ]
    iaid:      1      prefix-hint: ::/48      prefix-hint-plt: 604800
    prefix-hint-vlt: 2592001

```

### 3. Configure the downstream interface on Server-Fgt:

```

config system interface
  edit "port5"
    config ipv6
      set ip6-mode delegated
      set ip6-delegated-prefix-iaid 1
      set ip6-upstream-interface "port1"
    end
  next
end

```

### 4. Verify downstream interface obtained an IPv6 Address/Prefix:

```

config system interface
  edit "port5"
    config ipv6
Server-Fgt # get
ip6-mode          : delegated
nd-mode           : basic
ip6-address       : 2001:db8:d0c::/48
...
ip6-delegated-prefix-iaid: 1
ip6-upstream-interface: port1
ip6-subnet        : ::/0

```

### 5. Configure DHCPv6 server on the downstream interface:

```

config system dhcp6 server
  edit 1
    set dns-service delegated
    set interface "port5"
    set upstream-interface "port1"
    set delegated-prefix-iaid 1
    set ip-mode delegated
  next
end

```



**To configure Client\_FGT:**

1. Configure Client-Fgt interface to use DHCP mode:

```
config system interface
    edit "port5"
        config ipv6
            set ip6-mode dhcp
        end
    next
end
```

2. Verify Client-Fgt obtained an IPv6 address and the DNS server address from the delegated interface:

```
# diagnose ipv6 address list | grep port5
dev=7 devname=port5 flag=P scope=0 prefix=128 addr=2001:db8:d0c::1
preferred=4294967295 valid=4294967295 cstamp=43208325 tstamp=43208325
# dia test application dnsproxy 3
worker idx: 0
VDOM: root, index=0, is primary, vdom dns is enabled, pip-0.0.0.0 dns_log=1
dns64 is disabled
DNS servers:
2001:db8::35:53 vrf=0 tz=0 encrypt=none req=3 to=2 res=0 rt=1046 ready=1 timer=0
probe=0 failure=2 last_failed=65131
```


**IPv6 prefix delegation with SLAAC**

A downstream FortiGate can be configured to obtain the IPv6 address and DNS server address from a delegated interface using SLAAC instead of DHCPv6. Following is a summary of the configuration steps:

1. Configure the following items on Server\_FGT:
  - Upstream interface
  - Downstream interface
  - SLAAC on the downstream interface
2. Configure Client\_FGT to receive IPv6 prefix and DNS from the delegated interface.

**To configure Server\_FGT:**

1. Configure the upstream interface on Server-Fgt:
  - a. Go to *Network > Interfaces* and edit the port1.
  - b. Enable *DHCPv6 prefix delegation*.
  - c. Select the + in the IAPD prefix hint to open the ID and prefix field.
  - d. Enter 1 for *ID* and *::/48* for *prefix* field. You can add two or more entries. Select the x icon in the field to remove an entry.

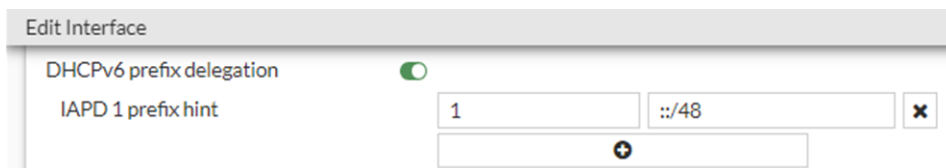

ID	Prefix
1	::/48

- e. Click OK.

2. Verify upstream interface obtained the prefix delegation, see [Verify upstream interface obtained prefix delegation and DNS server address](#).
3. Configure the downstream interface on Server-Fgt:
  - a. Go to *Network > Interfaces* and edit port5.
  - b. Set *IPv6 addressing mode* to *Delegated*.
  - c. Enter 1 for *Identity association identifier* field.
  - d. Set *IPv6 upstream interface* to *port1*.
  - e. Click OK.
4. Verify downstream interface obtained an IPv6 Address/Prefix:
  - a. Go to *Network > Interfaces* and edit port5. The IPv6 Address/Prefix field is populated with an IPv6 Address/Prefix.
5. Configure SLAAC on downstream interface:

```
config system interface
  edit "port5"
    config ipv6
      set ip6-mode delegated
      set ip6-send-adv enable
      set ip6-delegated-prefix-iaid 1
      set ip6-upstream-interface "port1"
      config ip6-delegated-prefix-list
        edit 1
          set upstream-interface "port1"
          set delegated-prefix-iaid 1
          set subnet 0:0:0:1::/64
          set rdns-service delegated
        next
      end
    end
  next
end
```

### To configure Client\_FGT:

1. Configure Client-Fgt interface using auto-configure:

```
config system interface
  edit "port5"
    config ipv6
      set autoconf enable
    end
  next
end
```

2. Verify Client-Fgt automatically generated an IPv6 address and obtained the DNS server address from the delegated interface:

```
# diagnose ipv6 address list | grep port5
```

```
dev=4 devname=port5 flag= scope=0 prefix=64 addr=2000:db8:d0c:1:20c:29ff:fe4d:f847
preferred=4294967295 valid=4294967295 cstamp=17203697 tstamp=17225377
```



FortiGate can send DNS server addresses using Router Advertisement (RA), which allows any device that is capable of receiving DNS server addresses by using RA to obtain DNS server addresses.

Additionally, FortiGate can receive DNS server addresses through the use of SLAAC with a DHCPv6 stateless server, even though it is currently unable to receive DNS server addresses using RA due to [RFC 4862](#) implementation. See [SLAAC with DHCPv6 stateless server on page 549](#) for more information.

## NAT66, NAT46, NAT64, and DNS 64

Multiple NAT46 and NAT64 related objects are consolidated into regular objects. A per-VDOM virtual interface, `naf.<vdom>`, is automatically added to process NAT46 and NAT64 traffic. The features include:

- `vip46` and `vip64` settings are consolidated in `vip` and `vip6` configurations.
- `policy46` and `policy64` settings are consolidated in `firewall policy` settings.
- `nat46` and `nat64` are included in `firewall policy` settings.
- `ippool` and `ippool6` support NAT46 and NAT64 (when enabled, the IP pool should match a subnet).
- Central SNAT supports NAT46 and NAT64.
- `add-nat46-route` in `ippool6` and `add-nat64-route` in `ippool` are enabled by default. The FortiGate generates a static route that matches the IP range in `ippool6` or `ippool` for the `naf` tunnel interface.



Automatic processing of the `naf` tunnel interface is not supported in security policies.

To configure NAT46 or NAT64 translation, use the standard `vip` or `vip6` setting, apply it in a firewall policy, enable NAT46 or NAT64, and enter the IP pool to complete the configuration.



The external IP address cannot be the same as the external interface IP address.

This section includes:

- [NAT66 policy on page 557](#)
- [NAT46 policy on page 559](#)
- [NAT64 policy and DNS64 \(DNS proxy\) on page 562](#)

### NAT66 policy

NAT66 is used for translating an IPv6 source or destination address to a different IPv6 source or destination address. NAT66 is not as common or as important as IPv4 NAT, as many IPv6 addresses do not need NAT66 as much as IPv4 NAT. However, NAT66 can be useful for a number of reasons. For example, you may have changed the IP addresses of

some devices on your network but want traffic to still appear to be coming from their old addresses. You can use NAT66 to translate the source addresses of packets from the devices to their old source addresses.

In FortiOS, NAT66 options can be added to an IPv6 security policy. Configuring NAT66 is very similar to configuring NAT in an IPv4 security policy.

#### To configure NAT66:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Configure the required policy parameters.
4. Enable *NAT* and select *Use Outgoing Interface Address*. For packets that match this policy, its source IP address is translated to the IP address of the outgoing interface.
5. Click *OK*.

Nat66 can also translate one IPv6 source address to another address that is not the same as the address of the existing interface. You can do this using IP pools.

#### To configure the IPv6 pool:

1. Go to *Policy & Objects > IP Pools*.
2. Click *Create New*.
3. Enter the following:

IP Pool Type	IPv6 Pool
Name	test-ippool6-1
External IP Range	2000:172:16:101::1-2000:172:16:101::1

4. Click *OK*.

#### To use the IPv6 pool in the firewall policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* or edit an existing policy.
3. Configure the required policy parameters.
4. Enable *NAT* and select *Use Dynamic IP Pool*.
5. Click *OK*.

#### NAT66 destination address translation

NAT66 can also be used to translate destination addresses. This is done in an IPv6 policy by using IPv6 virtual IPs. For example, the destination address 2001:db8::dd can be mapped to 2001:db8::ee.

#### To configure the IPv6 VIP:

1. Go to *Policy & Objects > Virtual IPs*.
2. Click *Create New*.

3. Enter the following:

<b>VIP type</b>	IPv6
<b>Name</b>	example-vip6
<b>External IP address/range</b>	2001:db8::dd
<b>Map to IPv6 address/range</b>	2001:db8::ee

4. Click *OK*.


#### To use the IPv6 VIP in the firewall policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* or edit an existing policy.
3. Configure the required policy parameters.
4. In the *Destination* field, select *example-vip6* from the dropdown menu.
5. Click *OK*.

## NAT46 policy

NAT46 refers to the mechanism that allows IPv4 addressed hosts to communicate with IPv6 hosts. Without such a mechanism, IPv4 environments cannot connect to IPv6 networks.

### Sample topology

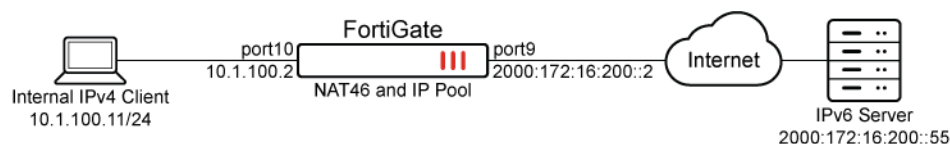

In this example, an IPv4 client tries to connect to an IPv6 server. A VIP is configured on FortiGate to map the server IPv6 IP address `2000:172:16:200:55` to an IPv4 address `10.1.100.55`. On the other side, an IPv6 IP pool is configured and the source address of packets from client are changed to the defined IPv6 address. In this setup, the client PC can access the server by using IP address `10.1.100.55`.

### Sample configuration

#### To configure NAT46 in the GUI:

1. Enable IPv6:
  - a. Go to *System > Feature Visibility*.
  - b. In the *Core Features* section, enable *IPv6*.
  - c. Click *Apply*.
2. Configure the VIP:

- a. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
- b. Enter the following:

<b>VIP type</b>	IPv4
<b>Name</b>	vip46_server
<b>Interface</b>	port2
<b>Type</b>	Static NAT
<b>External IP address/range</b>	10.1.100.55
<b>Map to IPv6 address/range</b>	2000:172:16:200::55

- c. Click *OK*.

3. Configure the IPv6 IP pool:

- a. Go to *Policy & Objects > IP Pools* and click *Create New*.
- b. Enter the following:

<b>IP Pool Type</b>	IPv6 Pool
<b>Name</b>	client_external
<b>External IP address/range</b>	2000:172:16:201::-2000:172:16:201::7
<b>NAT46</b>	Enable

- c. Click *OK*.

4. Configure the firewall policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
- b. Enter the following:

<b>Name</b>	policy46-1
<b>Incoming Interface</b>	port10
<b>Outgoing Interface</b>	port9
<b>Source</b>	all
<b>Destination</b>	vip46_server
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	NAT46
<b>IP Pool Configuration</b>	client_external

- c. Configure the other settings as needed.
- d. Click *OK*.

**To configure NAT46 in the CLI:****1. Enable IPv6:**

```
config system global
    set gui-ipv6 enable
end
```

**2. Configure the VIP:**

```
config firewall vip
    edit "vip46_server"
        set extip 10.1.100.55
        set nat44 disable
        set nat46 enable
        set extintf "port2"
        set ipv6-mappedip 2000:172:16:200::55
    next
end
```

**3. Configure the IPv6 IP pool:**

```
config firewall ippool6
    edit "client_external"
        set startip 2000:172:16:201::
        set endip 2000:172:16:201::7
        set nat46 enable
    next
end
```

**4. Configure the firewall policy:**

```
config firewall policy
    edit 2
        set name "policy46-1"
        set srcintf "port10"
        set dstintf "port9"
        set action accept
        set nat46 enable
        set srcaddr "all"
        set dstaddr "vip46_server"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set ippool enable
        set poolname6 "client_external"
    next
end
```

## Sample troubleshooting

### To trace the flow and troubleshoot:

```
# diagnose debug flow filter saddr 10.1.100.11
# diagnose debug flow show function-name enable
show function name
# diagnose debug flow show iprope enable
show trace messages about iprope
# diagnose debug flow trace start 5

id=20085 trace_id=1 func=print_pkt_detail line=5401 msg="vd-root:0 received a packet
(proto=1, 10.1.100.11:27592->10.1.100.55:2048) from port10. type=8, code=0, id=27592,
seq=1."
id=20085 trace_id=1 func=init_ip_session_common line=5561 msg="allocate a new session-
000003b9"
id=20085 trace_id=1 func=iprope_dnat_check line=4948 msg="in-[port10], out-[]"
id=20085 trace_id=1 func=iprope_dnat_tree_check line=822 msg="len=1"
id=20085 trace_id=1 func=__iprope_check_one_dnat_policy line=4822 msg="checking gnum-100000
policy-1"
id=20085 trace_id=1 func=get_vip46_addr line=998 msg="find DNAT46: IP-2000:172:16:200::55,
port-27592"
id=20085 trace_id=1 func=__iprope_check_one_dnat_policy line=4904 msg="matched policy-1,
act=accept, vip=1, flag=100, sflag=2000000"
id=20085 trace_id=1 func=iprope_dnat_check line=4961 msg="result: skb_flags-02000000, vid-1,
ret-matched, act-accept, flag-00000100"
id=20085 trace_id=1 func=fw_pre_route_handler line=183 msg="VIP-10.1.100.55:27592, outdev-
unkown"
id=20085 trace_id=1 func=__ip_session_run_tuple line=3220 msg="DNAT 10.1.100.55:8-
>10.1.100.55:27592"
id=20085 trace_id=1 func=vf_ip_route_input_common line=2594 msg="find a route: flag=80000000
gw-10.1.100.55 via root"
id=20085 trace_id=1 func=ip4_nat_af_input line=601 msg="nat64 ipv4 received a packet
proto=1"
id=20085 trace_id=1 func=__iprope_check line=2112 msg="gnum-100012, check-fffffffa0024ebe"
id=20085 trace_id=1 func=__iprope_check_one_policy line=1873 msg="checked gnum-100012
policy-1, ret-matched, act-accept"
id=20085 trace_id=1 func=__iprope_user_identity_check line=1677 msg="ret-matched"
id=20085 trace_id=1 func=get_new_addr46 line=1047 msg="find SNAT46: IP-2000:172:16:201::13
(from IPPool), port-27592"
id=20085 trace_id=1 func=__iprope_check_one_policy line=2083 msg="policy-1 is matched, act-
accept"
id=20085 trace_id=1 func=__iprope_check line=2131 msg="gnum-100012 check result: ret-
matched, act-accept, flag-08050500, flag2-00200000"
id=20085 trace_id=1 func=iprope_policy_group_check line=4358 msg="after check: ret-matched,
act-accept, flag-08050500, flag2-00200000"
id=20085 trace_id=1 func=resolve_ip6_tuple line=4389 msg="allocate a new session-00000081"
```


## NAT64 policy and DNS64 (DNS proxy)

NAT64 policy translates IPv6 addresses to IPv4 addresses so that a client on an IPv6 network can communicate transparently with a server on an IPv4 network.



NAT64 policy is usually implemented in combination with the DNS proxy called DNS64. DNS64 synthesizes AAAA records from A records and is used to synthesize IPv6 addresses for hosts that only have IPv4 addresses. DNS proxy and DNS64 are interchangeable terms.

## Sample topology

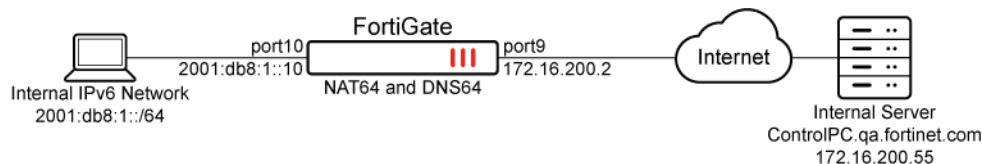

In this example, a host on the internal IPv6 network communicates with `ControlPC.qa.fortinet.com` that only has IPv4 address on the Internet. Central NAT is disabled.

1. The host on the internal network does a DNS lookup for `ControlPC.qa.fortinet.com` by sending a DNS query for an AAAA record for `ControlPC.qa.fortinet.com`.
2. The DNS query is intercepted by the FortiGate DNS proxy. The DNS proxy performs an A-record query for `ControlPC.qa.fortinet.com` and gets back an RRSset containing a single A record with the IPv4 address `172.16.200.55`.
3. The DNS proxy then synthesizes an AAAA record. The IPv6 address in the AAAA record begins with the configured NAT64 prefix in the upper 96 bits and the received IPv4 address in the lower 32 bits. By default, the resulting IPv6 address is `64:ff9b::172.16.200.55`.
4. The host on the internal network receives the synthetic AAAA record and sends a packet to the destination address `64:ff9b::172.16.200.55`.
5. The packet is routed to the FortiGate internal interface (port10) where it is accepted by the NAT64 security policy.
6. The FortiGate translates the destination address of the packets from IPv6 address `64:ff9b::172.16.200.55` to IPv4 address `172.16.200.55` and translates the source address of the packets to `172.16.200.200` (or another address in the IP pool range) and forwards the packets out the port9 interface to the Internet.

## Sample configuration

### To configure a NAT64 policy with DNS64 in the GUI:

1. Enable IPv6 and DNS database:
  - a. Go to *System > Feature Visibility*.
  - b. In the *Core Features* section, enable *IPv6*.
  - c. In the *Additional Features* section, enable *DNS Database*.
  - d. Click *Apply*.
2. Enable DNS proxy on the IPv6 interface:
  - a. Go to *Network > DNS Servers*.
  - b. In the *DNS Service on Interface* table, click *Create New*.
  - c. For *Interface*, select *port10*.
  - d. For *Mode*, select *Forward to System DNS*.
  - e. Click *OK*.
3. Configure the IPv6 DHCP server:

- a. Go to *Network > Interfaces* and edit port10.
- b. Enable *DHCPv6 Server* and enter the following:

<b>IPv6 subnet</b>	2001:db8:1::/64
<b>DNS service</b>	Specify
<b>DNS server 1</b>	2001:db8:1::10

- c. Click *OK*.

4. Configure the IPv6 VIP for the destination IPv6 addresses:

These are all of the IPv6 addresses that the FortiGate DNS proxy synthesizes when an IPv6 device performs a DNS query that resolves to an IPv4 Address. In this example, the synthesized IPv6 address in the AAAA record begins with the configured NAT64 prefix in the upper 96 bits, so the VIP is for all the IPv6 addresses that begin with 64:ff9b.

- a. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
- b. Enter the following:

<b>VIP type</b>	IPv6
<b>Name</b>	vip6
<b>Eternal IP address/range</b>	64:ff9b::-64:ff9b::ffff:ffff
<b>Map to IPv4 address/range</b>	Use Embedded

- c. Click *OK*.

5. Configure the IPv6 firewall address for the internal network:

- a. Click *Create New > Address*.
- b. Enter the following:

<b>Category</b>	IPv6 Address
<b>Name</b>	internal-net6
<b>Type</b>	IPv6 Subnet
<b>IP/Netmask</b>	2001:db8:1::/48

- c. Click *OK*.

6. Configure the IP pool containing the IPv4 address that is used as the source address of the packets exiting port9:

- a. Go to *Policy & Objects > IP Pools* and click *Create New*.
- b. Enter the following:

<b>IP Pool Type</b>	IPv4 Pool
<b>Name</b>	exit-pool4
<b>Type</b>	Overload
<b>External IP address/range</b>	172.16.200.200-172.16.200.207
<b>NAT64</b>	Enable



*External IP address/range must start and end on the boundaries of a valid subnet. For example, 172.16.200.0-172.16.200.7 and 172.16.200.16-172.16.200.31 are a valid subnets (/29 and /28 respectively).*

c. Click OK.

7. Configure the NAT64 policy:

a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.

b. Enter the following:

<b>Name</b>	policy64-1
<b>Incoming Interface</b>	port10
<b>Outgoing Interface</b>	port9
<b>Source</b>	internal-net6
<b>Destination</b>	vip6
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	NAT64
<b>IP Pool Configuration</b>	exit-pool4

c. Click OK.

**To configure a NAT64 policy with DNS64 in the CLI:**

1. Enable IPv6 and DNS database:

```
config system global
    set gui-ipv6 enable
end

config system settings
    set gui-dns-database enable
end
```

2. Enable DNS proxy on the IPv6 interface:

```
config system dns-server
    edit "port10"
        set mode forward-only
    next
end
```

3. Configure the IPv6 DHCP server:

```
config system dhcp6 server
    edit 1
        set subnet 2001:db8:1::/64
        set interface "port10"
        set dns-server1 2001:db8:1::10
```

```

    next
end

```

**4. Configure the IPv6 VIP for the destination IPv6 addresses:**

```

config firewall vip6
    edit "vip6"
        set extip 64:ff9b::-64:ff9b::ffff:ffff
        set embedded-ipv4-address enable
    next
end

```

**5. Configure the IPv6 firewall address for the internal network:**

```

config firewall address6
    edit "internal-net6"
        set ip6 2001:db8:1::/48
    next
end

```

**6. Configure the IP pool containing the IPv4 address that is used as the source address of the packets exiting port9:**

```

config firewall ippool
    edit "exit-pool4"
        set startip 172.16.200.200
        set endip 172.16.200.207
        set nat64 enable
    next
end

```



*External IP address/range must start and end on the boundaries of a valid subnet. For example, 172.16.200.0-172.16.200.7 and 172.16.200.16-172.16.200.31 are a valid subnets (/29 and /28 respectively).*

---

**7. Configure the NAT64 policy:**

```

config firewall policy
    edit 1
        set name "policy64-1"
        set srcintf "port10"
        set dstintf "port9"
        set action accept
        set nat64 enable
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 internal-net6
        set dstaddr6 vip6
        set schedule "always"
        set service "ALL"
        set ippool enable
        set poolname "exit-pool4"
    next
end

```

### To enable DNS64 and related settings using the CLI:

Enabling DNS64 means that all IPv6 traffic received by the current VDOM can be subject to NAT64 if the source and destination address matches an NAT64 security policy.

By default, the setting `always-synthesize-aaaa-record` is enabled. If you disable this setting, the DNS proxy (DNS64) will attempt to find an AAAA records for queries to domain names and therefore resolve the host names to IPv6 addresses. If the DNS proxy cannot find an AAAA record, it synthesizes one by adding the NAT64 prefix to the A record.

```
config system dns64
    set status {enable | disable}
    set dns64-prefix <ipv6-prefix>
    set always-synthesize-aaaa-record {enable | disable}
end
```

By default, the `dns64-prefix` is `64:ff9b::/96`.

## DHCPv6 relay

Similar to DHCPv4, DHCPv6 facilitates communication between networks by relaying queries and responses between a client and a DHCP server on separate networks. The FortiGate device serves as a DHCPv6 relay agent and forwards DHCPv6 messages between clients and servers. The relay agent receives DHCPv6 messages from clients and forwards them to the appropriate DHCPv6 server. In response, the server sends a message containing configuration information for the client, which the relay agent forwards to the client. This enables seamless information exchange between the two networks.

Configure DHCPv6 relay in the CLI using the following syntax:

```
config system interface
    edit <interface>
        config ipv6
            set dhcp6-relay-service {enable|disable}
            set dhcp6-relay-type regular
            set dhcp6-relay-ip <ip6-address>
        end
    end
next
end
```

In this example, a client connects to a FortiGate device that is configured to function as a DHCPv6 relay. Port1 on the FortiGate device connects to a DHCPv6 server, and port5 is configured as a DHCPv6 relay. The DHCPv6 server has an IP address of `2000:db8:d0c::a`. This configuration enables the FortiGate device to facilitate communication between the client and the DHCPv6 server on separate networks.



### To configure DHCPv6 relay on the FortiGate:

```
config system interface
    edit port5
        config ipv6
            set dhcp6-relay-service enable
        end
    end
```

```

        set dhcp6-relay-type regular
        set dhcp6-relay-ip 2000:db8:d0c::a
    end
next
end

```

## IPv6 tunneling

IPv6 tunneling involves tunneling IPv6 packets from an IPv6 network through an IPv4 network to another IPv6 network. This is different than NAT because once the packet reaches its final destination, the true originating address of the sender is still readable. The IPv6 packets are encapsulated within packets with IPv4 headers that carry their IPv6 payload through the IPv4 network. IPv6 tunneling is suitable in networks that have completely transitioned over to IPv6 but need an internet connection, which is still mostly IPv4 addresses.

Both IPv6 tunneling devices, whether they are a host or a network device, must be dual stack compatible. The tunneling process is as follows:

1. The tunnel entry node creates an encapsulating IPv4 header and transmits the encapsulated packet.
2. The tunnel exit node receives the encapsulated packet.
3. The IPv4 header is removed.
4. The IPv6 header is updated and the IPv6 packet is processed.

There are two types of tunnels in IPv6 tunneling, automatic and configured. Automatic tunnels are configured by using IPv4 address information embedded in an IPv6 address. The IPv6 address of the destination host includes information about which IPv4 address the packet should be tunneled to. Configured tunnels are manually configured, and they are used for IPv6 addresses that do not have any embedded IPv4 information. The IPv6 and IPv4 addresses of the tunnel endpoints must be specified.

## Tunnel configurations


There are four tunneling configurations available depending on which segment of the path between the endpoints of the session the encapsulation takes place.

Type	Description
Network device-to-network device	Dual stack capable devices connected by an IPv4 infrastructure can tunnel IPv6 packets between themselves. The tunnel spans one segment of the path taken by the IPv6 packets.
Host-to-network device	Dual stack capable hosts can tunnel IPv6 packets to an intermediary IPv6 or IPv4 network device that is reachable through an IPv4 infrastructure. The tunnel spans the first segment of the path taken by the IPv6 packets.
Host-to-host	Dual stack capable hosts that are interconnected by an IPv4 infrastructure can tunnel IPv6 packets between themselves. The tunnel spans the entire path taken by the IPv6 packets.
Network device-to-host	Dual stack capable network devices can tunnel IPv6 packets to their final destination IPv6 or IPv4 host. The tunnel spans only the last segment of the path taken by the IPv6 packets.

Regardless of whether the tunnel starts at a host or a network device, the node that does the encapsulation needs to maintain soft state information, such as the maximum transmission unit (MTU), about each tunnel in order to process the IPv6 packets.

## 6in4 tunnel

The following tunnel configuration tunnels IPv6 traffic over an IPv4 network. An internal IPv6 interface can be configured under `config system` interface.

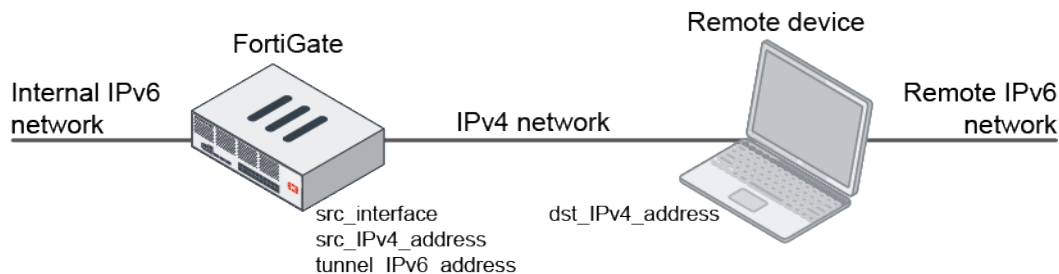

### To configure an IPv6 tunnel over IPv4:

```
config system sit-tunnel
  edit <name>
    set source <src_IPv4_address>
    set destination <dst_IPv4_address>
    set interface <src_interface>
    set ip6 <tunnel_IPv6_address>
  next
end
```

## 4in6 tunnel

Conversely, the following tunnel configuration tunnels IPv4 traffic over an IPv6 network.

### To configure an IPv4 tunnel over IPv6:

```
config system ipv6-tunnel
  edit <name>
    set source <src_IPv6_address>
    set destination <dst_IPv6_address>
    set interface <src_interface>
  next
end
```



The preceding configurations are not available in transparent mode.

This section includes:

- [IPv6 IPsec VPN on page 570](#)
- [IPv6 GRE tunnels on page 571](#)

- [IPv6 tunnel inherits MTU based on physical interface on page 571](#)
- [Configuring IPv4 over IPv6 DS-Lite service on page 574](#)

## IPv6 IPsec VPN

This topic describes how to configure the IPv6 IPsec VPN feature on your FortiGate device.



You can configure IPv6 using the CLI. To configure IPv6 using GUI, ensure IPv6 is enabled by going to *System > Feature Visibility* and enabling IPv6.

### Overview

FortiOS supports route-based IPv6 IPsec, but not policy-based. This section describes different ways IPv6 IPsec can be used:

<b>IPv4 over IPv6</b>	The VPN gateways have IPv6 addresses. The protected networks have IPv4 addresses. The phase 2 configurations at either end use IPv4 selectors. See <a href="#">Site-to-site IPv4 over IPv6 VPN example on page 594</a> for sample configuration.
<b>IPv6 over IPv4</b>	The VPN gateways have IPv4 addresses. The protected networks use IPv6 addresses. The phase 2 configurations at either end use IPv6 selectors. See <a href="#">Site-to-site IPv6 over IPv4 VPN example on page 603</a> for sample configuration.
<b>IPv6 over IPv6</b>	Both the VPN gateways and the protected networks use IPv6 addresses. The phase 2 configurations at either end use IPv6 selectors. See <a href="#">Site-to-site IPv6 over IPv6 VPN example on page 586</a> for sample configuration.

### Configuring IPv6 IPsec VPNs

Configuration of an IPv6 IPsec VPN follows the same sequence as for an IPv4 route-based VPN:

<b>Phase 1 and Phase 2 settings</b>	The configuration is the same as for an IPv4 route-based VPN, except that <code>ip-version</code> is set to 6 and the <code>remote-gw6</code> keyword is used to specify an IPv6 remote gateway address. See <a href="#">Phase 1 configuration on page 1574</a> and <a href="#">Phase 2 configuration on page 1588</a> for more information.
<b>Security policies</b>	To complete the VPN configuration, you need a security policy in each direction to permit traffic between the protected network's port and the IPsec interface. You need IPv6 policies unless the VPN is IPv4 over IPv6. See <a href="#">VPN security policies on page 1592</a> for more information.
<b>Routing</b>	Appropriate routing is needed for both the IPsec packets and the encapsulated traffic within them: <ul style="list-style-type: none"> <li>• You need a route, which could be the default route, to the remote VPN gateway via the appropriate interface.</li> <li>• You need a route to the remote protected network via the IPsec interface.</li> </ul>



- You need a blackhole route to the remote protected network to ensure that IPsec traffic doesn't match the default route when the IPsec tunnel is down.

Routing is dependent on the method:

- **IPv4 over IPv6:** The route to the remote VPN gateway is an IPv6 route. The route to the remote protected network is an IPv4 route.
- **IPv6 over IPv4:** The route to the remote VPN gateway is an IPv4 route. The route to the remote protected network is an IPv6 route.
- **IPv6 over IPv6:** Routes to both the remote VPN gateway and the remote protected network are IPv6 routes.



You can create a new IPv6 static route from *Network > Static Routes*.

You can configure Phase 1 and Phase 2 settings from *VPN > IPsec Wizard*.

#### To configure Phase 1 and phase 2 settings:

1. Go to *VPN > IPsec Wizard*.
2. Enter a name and set *Template type* to *Custom*.
3. Click *Next*.
4. Under *Network*, set *IP Version* to *IPv6*.
5. Configure the rest of phase 1 and phase 2 settings as required and click *OK*.

## IPv6 GRE tunnels

IPv6 addresses can be used at both ends of a GRE tunnel in the same way as with IPv4. See [GRE over IPsec on page 1619](#) for more information.

The configuration is similar to a tunnel for IPv4. However, when you configure the specific tunnel, you need to set the `ip-version` option to 6. This will enable IPv6-specific options for the tunnel.

#### To configure a GRE tunnel:

```
config system gre-tunnel
  edit <name of tunnel>
    set ip-version 6
    set remote-gw6 <IPv6 address of the remote gateway>
    set local-gw6 <IPv6 address of the local gateway>
  next
end
```

## IPv6 tunnel inherits MTU based on physical interface

The MTU of an IPv6 tunnel interface is calculated from the MTU of its parent interface minus headers.

## Example



In this topology, FortiGate B and FortiGate D are connected over an IPv6 network. An IPv6 tunnel is formed, and IPv4 can be used over the IPv6 tunnel. The tunnel interface MTU is based on the physical interface MTU minus the IP and TCP headers (40 bytes). On FortiGate B's physical interface port5, the MTU is set to 1320. The IPv6 tunnel is based on port5, and its MTU value of 1280 is automatically calculated from the MTU value of its physical interface minus the header. The same is true for port3 on FortiGate D.

### To verify the MTU for the IPv6 tunnel on FortiGate B:

#### 1. Configure port5:

```

config system interface
  edit "port5"
    set vdom "root"
    set type physical
    set snmp-index 7
    config ipv6
      set ip6-address 2000:172:16:202::1/64
      set ip6-allowaccess ping
    end
    set mtu-override enable
    set mtu 1320
  next
end

```

#### 2. Configure the IPv6 tunnel:

```

config system ipv6-tunnel
  edit "B_2_D"
    set source 2000:172:16:202::1
    set destination 2000:172:16:202::2
    set interface "port5"
  next
end

```

#### 3. Configure the tunnel interface:

```

config system interface
  edit "B_2_D"
    set vdom "root"
    set ip 172.16.210.1 255.255.255.255
    set allowaccess ping https http
    set type tunnel
    set remote-ip 172.16.210.2 255.255.255.255
    set snmp-index 33
    config ipv6
      set ip6-address 2000:172:16:210::1/64
      set ip6-allowaccess ping
      config ip6-extra-addr
    end
  end
end

```

```

        edit fe80::2222/10
        next
    end
end
set interface "port5"
next
end

```

#### 4. Verify the interface lists:

```

# diagnose netlink interface list port5
if=port5 family=00 type=1 index=13 mtu=1320 link=0 master=0
ref=68 state=start present fw_flags=0 flags=up broadcast run multicast
Qdisc=mq hw_addr=**:**:**:**:**:** broadcast_addr=**:**:**:**:**:**
stat: rxp=1577 txp=1744 rxb=188890 txb=203948 rxe=0 txe=0 rxd=0 txd=0 mc=825 collision=0
@ time=1631647112
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=68

# diagnose netlink interface list B_2_D
if=B_2_D family=00 type=769 index=41 mtu=1280 link=0 master=0
ref=25 state=start present fw_flags=0 flags=up p2p run noarp multicast
Qdisc=noqueue local=0.0.0.0 remote=0.0.0.0
stat: rxp=407 txp=417 rxb=66348 txb=65864 rxe=0 txe=61 rxd=0 txd=0 mc=0 collision=60 @
time=1631647126
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=25

```

### To verify the MTU for the IPv6 tunnel on FortiGate D:

#### 1. Configure port3:

```

config system interface
    edit "port3"
        set vdom "root"
        set type physical
        set snmp-index 5
        config ipv6
            set ip6-address 2000:172:16:202::2/64
            set ip6-allowaccess ping
        end
        set mtu-override enable
        set mtu 1320
    next
end

```

#### 2. Configure the IPv6 tunnel:

```

config system ipv6-tunnel
    edit "D_2_B"
        set source 2000:172:16:202::2
        set destination 2000:172:16:202::1
        set interface "port3"
    end
end

```

```

    next
end

```

### 3. Configure the tunnel interface:

```

config system interface
    edit "D_2_B"
        set vdom "root"
        set ip 172.16.210.2 255.255.255.255
        set allowaccess ping https http
        set type tunnel
        set remote-ip 172.16.210.1 255.255.255.255
        set snmp-index 36
        config ipv6
            set ip6-address 2000:172:16:210::2/64
            set ip6-allowaccess ping
            config ip6-extra-addr
                edit fe80::4424/10
                next
            end
        end
        set interface "port3"
    next
end

```

### 4. Verify the interface lists:

```

# diagnose netlink interface list port3

# diagnose netlink interface list D_2_B

```

## Configuring IPv4 over IPv6 DS-Lite service

IPv4 over IPv6 DS-Lite service can be configured on a virtual network enabler (VNE) tunnel. In addition, VNE tunnel fixed IP mode supports username and password authentication.


```

config system vne-tunnel
    set status enable
    set mode {map-e | fixed-ip | ds-lite}
    set ipv4-address <IPv4_address>
    set br <IPv6_address or FQDN>
    set http-username <string>
    set http-password <password>
end

```

mode {map-e   fixed-ip   ds-lite}	<b>Set the VNE tunnel mode:</b> <ul style="list-style-type: none"> <li>map-e: MAP-E</li> <li>fixed-ip: fixed IP</li> <li>ds-lite: DS-Lite</li> </ul>
ipv4-address <IPv4_address>	Enter the tunnel IPv4 address and netmask. This setting is optional.
br <IPv6_address or FQDN>	Enter the IPv6 or FQDN of the border relay.
http-username <string>	Enter the HTTP authentication user name.
http-password <password>	Enter the HTTP authentication password.

DS-Lite allows applications using IPv4 to access the internet with IPv6. DS-Lite is supported by internet providers that do not have enough public IPv4 addresses for their customers, so DS-Lite is used for IPv6 internet connections. When a DS-Lite internet connections is used, the FortiGate encapsulates all data from IPv4 applications into IPv6 packets. The packets are then transmitted to the internet service provider using the IPv6 connection. Next, a dedicated server unpacks the IPv6 packets and forwards the IPv4 data to the actual destination on the internet.

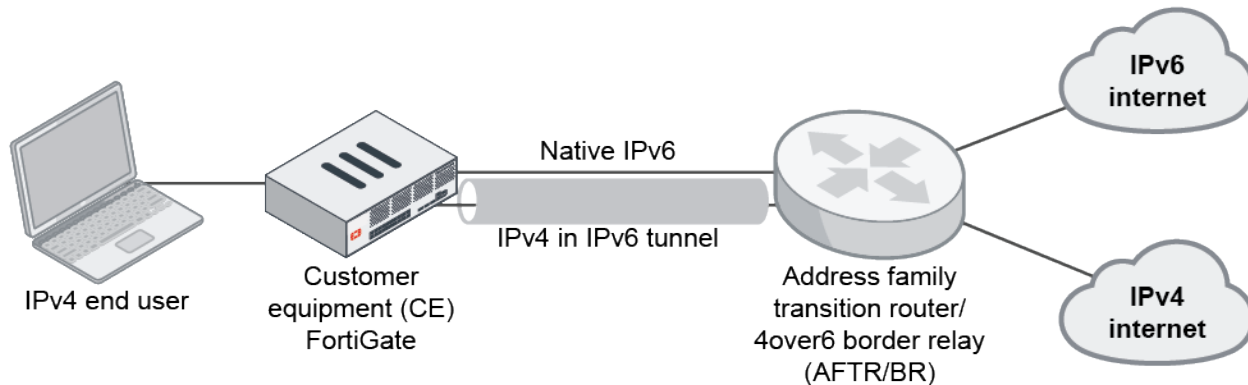

## DS-Lite example

In this example, DS-Lite VNE tunnel mode is used between the FortiGate and the BR.

### To configure a DS-Lite tunnel between the FortiGate and the BR:

#### 1. Configure the IPv6 interface:

```

config system interface
  edit "wan1"
    set vdom "root"
    set mode dhcp
    set allowaccess ping fgfm
    set type physical
    set role wan
    set snmp-index 1
    config ipv6
      set ip6-allowaccess ping
      set dhcp6-information-request enable
      set autoconf enable
      set unique-autoconf-addr enable
    end
  next
end

```

#### 2. Configure the VNE tunnel:

```

config system vne-tunnel
  set status enable
  set interface "wan1"
  set ssl-certificate "Fortinet_Factory"
  set auto-asic-offload enable
  set ipv4-address 192.168.1.99 255.255.255.255
  set br "dgw.xxxxx.jp"
  set mode ds-lite
end

```

**3. View the wan1 IPv6 configuration details:**

```

config system interface
    edit "wan1"
        config ipv6
            get
                ip6-mode            : static
                nd-mode             : basic
                ip6-address         : 2001:f70:2880:xxxx:xxxx:xxxx:fe39:ccd2/64
                ip6-allowaccess     : ping
                icmp6-send-redirect : enable
                ra-send-mtu         : enable
                ip6-reachable-time  : 0
                ip6-retrans-time    : 0
                ip6-hop-limit       : 0
                dhcp6-information-request: enable
                cli-conn6-status    : 1
                vrrp-virtual-mac6   : disable
                vrip6_link_local    : ::
                ip6-dns-server-override: enable
                Acquired DNS1       : 2001:f70:2880:xxxx:xxxx:xxxx:fe40:9082
                Acquired DNS2       : ::
                ip6-extra-addr:
                ip6-send-adv        : disable
                autoconf            : enable
                prefix              : 2001:f70:2880:xxxx::/64
                preferred-life-time : 942735360
                valid-life-time     : 1077411840
                unique-autoconf-addr: enable
                interface-identifier: ::
                dhcp6-relay-service : disable
            end
        next
    end
end

```

**4. Verify the IPv6 address list:**

```

# diagnose ipv6 address list
dev=5 devname=wan1 flag= scope=0 prefix=64 addr=2001:f70:2880:xxxx:xxxx:xxxx:fe39:ccd2
preferred=11525 valid=13325 cstamp=6520 tstamp=6892
dev=5 devname=wan1 flag=P scope=253 prefix=64 addr=fe80::xxxx:xxxx:fe39:ccd2
preferred=4294967295 valid=4294967295 cstamp=6373 tstamp=6373
dev=18 devname=root flag=P scope=254 prefix=128 addr>:::1 preferred=4294967295
valid=4294967295 cstamp=3531 tstamp=3531
dev=25 devname=vsys_ha flag=P scope=254 prefix=128 addr>:::1 preferred=4294967295
valid=4294967295 cstamp=5604 tstamp=5604
dev=27 devname=vsys_fgfm flag=P scope=254 prefix=128 addr>:::1 preferred=4294967295
valid=4294967295 cstamp=6377 tstamp=6377

```

**5. Test the tunnel connection by pinging the Google public DNS IPv6 address:**

```
# execute ping6 2001:4860:4860::8888
PING 2001:4860:4860::8888 (2001:4860:4860::8888) 56 data bytes
64 bytes from 2001:4860:4860::8888: icmp_seq=1 ttl=114 time=6.89 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=2 ttl=114 time=3.39 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=3 ttl=114 time=3.46 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=4 ttl=114 time=3.34 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=5 ttl=114 time=3.39 ms
--- 2001:4860:4860::8888 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss, time 4079ms
rtt min/avg/max/mdev = 3.340/4.097/6.895/1.400 ms
```

**Fixed IP mode example**

In this example, fixed IP VNE tunnel mode with HTTP authentication is used between the FortiGate and the BR.

**To configure a fixed IP mode with HTTP authentication between the FortiGate and the BR:****1. Configure the IPv6 interface:**

```
config system interface
    edit "wan1"
        set vdom "root"
        set mode dhcp
        set allowaccess ping fgfm
        set type physical
        set role wan
        set snmp-index 1
        config ipv6
            set ip6-allowaccess ping
            set dhcp6-information-request enable
            set autoconf enable
        end
    next
end
```

**2. Configure the VNE tunnel:**

```
config system vne-tunnel
    set status enable
    set interface "wan1"
    set ipv4-address 120.51.xxx.xxx1 255.255.255.255
    set br "2001:f60:xxxx:xxxx::1"
    set update-url "https://ddnsweb1.ddns.xxxxxx.jp/cgi-bin/ddns_
api.cgi?d=xxxxxx.v4v6.xxxxx.jp&p=*****&a=[IP6]&u=xxxxxx.v4v6.xxxxx.jp"
    set mode fixed-ip
    set http-username "laptop-1"
    set http-password *****
end
```

**3. Verify the wan1 IPv6 configuration details:**

```
config system interface
    edit "wan1"
        config ipv6
```

```
get
....
```

#### 4. Verify the VNE daemon:

```
# diagnose test application vned 1
-----
vdom: root/0, is master, devname=wan1 link=0 tun=vne.root mode=fixed-ip ssl_
cert=Fortinet_Factory
end user ipv6 prefix: 2001:f70:2880:xxxx::/64
interface ipv6 addr: 2001:f70:2880:xxxx:xxxx:xxxx:fe39:ccd2
config ipv4 prefix: 120.51.xxx.xxx1/255.255.255.255
config br: 2001:f60:xxxx:xxxx::1
HTTP username: laptop-1
update url: https://ddnsweb1.ddns.xxxxxx.jp/cgi-bin/ddns_
api.cgi?d=xxxxxx.v4v6.xxxxx.jp&p=*****&a=[IP6]&u=xxxxxx.v4v6.xxxxx.jp
host: ddnsweb1.ddns.xxxxxx.jp path: /cgi-bin/ddns_
api.cgi?d=xxxxxx.v4v6.xxxxx.jp&p=*****&a=[IP6]&u=xxxxxx.v4v6.xxxxx.jp port:443 ssl:
1
tunnel br: 2001:f60:xxxx:xxxx::1
tunnel ipv6 addr: 2001:f70:2880:xxxx:xxxx:xxxx:fe39:ccd2
tunnel ipv4 addr: 120.51.xxx.xxx1/255.255.255.255
update result: <H1>DDNS API</H1><HR><H2>* Query parameter check :
OK</H2><FQDN=xxxxxx.v4v6.xxxxx.jp<BR>Password=*****<BR>IPv6=2001:f70:2880:xxxx:xxxx:
xxxx:fe39:ccd2<BR>UID=xxxxxx.v4v6.xxxxx.jp<BR>Address=2001:f70:2880:xxxx:xxxx:xxxx:fe39:
ccd2<BR><H2>* routerinfo check : OK</H2><H2>* records check : OK</H2><H2>* routerinfo
update : OK</H2><H2>* records update : OK</H2><H2>* DDNS API update : Success [2022-01-
18 18:37:58 1642498678]</H2>
Fixed IP rule client: state=succeed retries=0 interval=0 expiry=0 reply_code=0
fqdn=2001:f60:xxxx:xxxx::1 num=1 cur=0 ttl=4294967295 expiry=0
2001:f60:xxxx:xxxx::1
Fixed IP DDNS client: state=succeed retries=0 interval=10 expiry=0 reply_code=200
fqdn=ddnsweb1.ddns.xxxxxx.jp num=1 cur=0 ttl=6 expiry=0
2001:f61:0:2a::18
```

#### 5. Test the tunnel connection by pinging the Google public DNS IPv4 and IPv6 addresses:

```
# execute ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8): 56 data bytes
64 bytes from 8.8.8.8: icmp_seq=0 ttl=119 time=3.7 ms
64 bytes from 8.8.8.8: icmp_seq=1 ttl=119 time=3.6 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=119 time=3.6 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=119 time=3.6 ms
64 bytes from 8.8.8.8: icmp_seq=4 ttl=119 time=3.5 ms
--- 8.8.8.8 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 3.5/3.6/3.7 ms

# execute ping6 2001:4860:4860::8888
PING 2001:4860:4860::8888(2001:4860:4860::8888) 56 data bytes
64 bytes from 2001:4860:4860::8888: icmp_seq=1 ttl=114 time=6.99 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=2 ttl=114 time=3.61 ms
```



```
64 bytes from 2001:4860:4860::8888: icmp_seq=3 ttl=114 time=3.34 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=4 ttl=114 time=3.27 ms
64 bytes from 2001:4860:4860::8888: icmp_seq=5 ttl=114 time=3.75 ms
--- 2001:4860:4860::8888 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss, time 4039ms
rtt min/avg/max/mdev = 3.276/4.195/6.992/1.409 ms
```

## IPv6 configuration examples

The following topics provide instructions on different IPv6 configuration examples:

- [IPv6 quick start example on page 579](#)
- [Site-to-site IPv6 over IPv6 VPN example on page 586](#)
- [Site-to-site IPv4 over IPv6 VPN example on page 594](#)
- [Site-to-site IPv6 over IPv4 VPN example on page 603](#)

### IPv6 quick start example

In this example, a host belonging to a specific range on the internal IPv6 network can communicate exclusively with the web server and FTP server.

Additionally, all internal clients can access the Internet.

### Prerequisites

Before you begin to configure IPv6, go through the following steps:


1. Obtain an IPv6 /48 global routing prefix, commonly known as a site prefix. To procure a 48-bit IPv6 site prefix for your organization simply liaise with your ISP.
2. Design a subnetting plan for your organization's IPv6 network using a 16-bit subnet ID, allowing for up to 65 535 subnets. The specific scheme will depend on the network's size, structure, and the organization's needs.

At this stage, the following installation and configuration conditions are assumed:

- You have administrative access to the GUI or CLI.
- The FortiGate unit is incorporated into your WAN or other networks, but for simplicity, only the standalone FortiGate configuration is displayed.

### Topology

The following topology is used for this example:

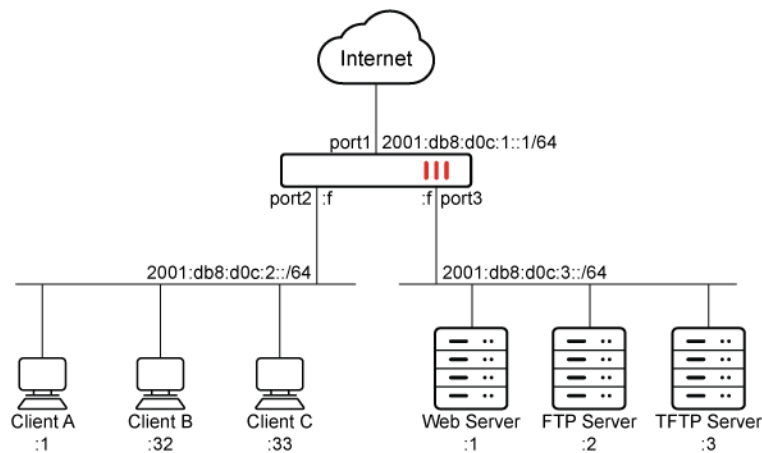

- The company is assigned the site prefix of 2001:db8:d0c::/48 by their ISP.
- The IPv6 address for the Web Server is 2001:db8:d0c:3::1/64.
- The IPv6 address for the FTP Server is 2001:db8:d0c:3::2/64.
- The IPv6 address for the TFTP Server is 2001:db8:d0c:3::3/64.
- The range on the internal IPv6 network that can access both servers is from 2001:db8:d0c:2::1 to 2001:db8:d0c:2::32.
- The IPv6 address of port1 is 2001:db8:d0c:1::1/64.
- The IPv6 address of port2 is 2001:db8:d0c:2::f/64.
- The IPv6 address of port3 is 2001:db8:d0c:3::f/64.
- The IPv6 address of the default gateway is 2001:db8:d0c:1::f/64.



Please note that the IPv6 addresses used in this example are for illustrative purposes only and should not be used in your environment.

The 2001:db8::/32 prefix is a special IPv6 prefix designated for use in documentation examples. See [RFC 3849](#) for more information.

### To configure the example in the GUI:

1. Configure the IPv6 address on port1, port2 and port3:
  - a. Go to *Network > Interfaces* and edit port1.
  - b. For *IPv6 addressing Mode*, select manual and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:1::1/64
----------------------------	----------------------

- c. Click OK.
- d. Repeat steps a and b for port2.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:2::f/64
----------------------------	----------------------

- e. Repeat steps a and b for port3.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:3::f/64
----------------------------	----------------------

2. Configure the default route:

- a. Go to *Network > Static Routes*.
- b. Click *Create New > IPv6 Static Route*.
- c. Configure the following settings:

<b>Destination</b>	::/0
<b>Gateway Address</b>	2001:db8:d0c:1::f
<b>Interface</b>	port1

- d. Select *OK*.

3. Configure the IPv6 firewall address for the Web Server:

- a. Go to *Policy & Objects > Addresses*.
- b. Select *Create New > Address*.
- c. Select *IPv6 Address* and fill out the fields with the following information:

<b>Name</b>	Web_Server
<b>Type</b>	IPv6 Subnet
<b>IPv6 Address</b>	2001:db8:d0c:3::1/128

- d. Select *OK*.

4. Configure the IPv6 firewall address for the FTP Server:

- a. Go to *Policy & Objects > Addresses*.
- b. Select *Create New > Address*.
- c. Select *IPv6 Address* and fill out the fields with the following information:

<b>Name</b>	FTP_Server
<b>Type</b>	IPv6 Subnet
<b>IPv6 Address</b>	2001:db8:d0c:3::2/128

- d. Select *OK*.

5. Configure the IPv6 address group, which includes both the Web and FTP servers:

- a. Go to *Policy & Objects > Addresses*.
- b. Select *Create New > Address Group*.
- c. Select *IPv6 Group* and fill out the fields with the following information:

<b>Group name</b>	Custom_Server
<b>Members</b>	Web_Server, FTP_Server

- d. Select *OK*.

6. Configure the IPv6 firewall address for the Internal IPv6 network range which can access both the Web and FTP server:

- a. Go to *Policy & Objects > Addresses*.
- b. Select *Create New > Address*.

- c. Select *IPv6 Address* and fill out the fields with the following information:

<b>Name</b>	Internal_Custom_Range
<b>Type</b>	IPv6 Range
<b>IP Range</b>	2001:db8:d0c:2::1 - 2001:db8:d0c:2::32

- d. Select *OK*.

7. Configure the IPv6 firewall policy to allow IPv6 traffic from *Internal\_Custom\_Range* to *Custom\_Server*:

- a. Go to *Policy & Objects > Firewall Policy*.
- b. Click *Create New*.
- c. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	Internal_Custom_Range
<b>Destination</b>	Custom_Server
<b>Schedule</b>	always
<b>Service</b>	FTP, HTTPS
<b>Action</b>	ACCEPT

- d. Click *OK*.

8. Configure the IPv6 firewall policy to allow IPv6 traffic from internal clients to the Internet:

- a. Go to *Policy & Objects > Firewall Policy*.
- b. Click *Create New*.
- c. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- d. Click *OK*.

### To configure the example in the CLI:

1. Configure the IPv6 address on port1, port2, and port3:

```
config system interface
  edit "port1"
    config ipv6
```

```
        set ip6-address 2001:db8:d0c:1::1/64
    end
next
edit "port2"
    config ipv6
        set ip6-address 2001:db8:d0c:2::f/64
    end
next
edit "port3"
    config ipv6
        set ip6-address 2001:db8:d0c:3::f/64
    end
next
end
```

**2. Configure the default route:**

```
config router static6
    edit 0
        set gateway 2001:db8:d0c:1::f
        set device "port1"
    next
end
```

**3. Configure the IPv6 firewall address for the Web Server:**

```
config firewall address6
    edit "Web_Server"
        set ip6 2001:db8:d0c:3::1/128
    next
end
```

**4. Configure the IPv6 firewall address for the FTP Server:**

```
config firewall address6
    edit "FTP_Server"
        set ip6 2001:db8:d0c:3::2/128
    next
end
```

**5. Configure the IPv6 address group, which includes for the Web and FTP Servers:**

```
config firewall addrgrp6
    edit "Custom_Server"
        set member "FTP_Server" "Web_Server"
    next
end
```

**6. Configure the IPv6 firewall address for the Internal IPv6 network range which can access both the Web and FTP Server:**

```
config firewall address6
    edit "Internal_Custom_Range"
        set type iprange
        set start-ip 2001:db8:d0c:2::1
        set end-ip 2001:db8:d0c:2::32
    next
end
```

**7. Configure the IPv6 firewall policy to allow IPv6 traffic from *Internal\_Custom\_Range* to *Custom\_Server*:**

```

config firewall policy
  edit 1
    set name "IPv6_internal_to_server"
    set srcintf "port2"
    set dstintf "port3"
    set action accept
    set srcaddr6 "Internal_Custom_Range"
    set dstaddr6 "Custom_Server"
    set schedule "always"
    set service "FTP" "HTTPS"
    set utm-status enable
    set logtraffic all
  next
end

```

#### 8. Configure the IPv6 firewall policy to allow IPv6 traffic from Internal clients to the Internet:

```

config firewall policy
  edit 1
    set name "IPv6_internal_to_internet"
    set srcintf "port2"
    set dstintf "port1"
    set action accept
    set srcaddr6 "all"
    set dstaddr6 "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set logtraffic all
  next
end

```

### Verification

The following commands can be used to verify that IPv6 traffic is entering and leaving the FortiGate as expected. See [Debugging the packet flow on page 3131](#) for more information.

```

diagnose debug enable
diagnose debug flow trace start6 200

```

The output below indicates that hosts belonging to the *Internal\_Custom\_Range* can successfully reach both the *Web\_Server* and *FTP\_Server* defined in the *Custom\_Server* address group.

However, they are unable to reach the TFTP server, as it is not included in the *Custom\_Server* group. Furthermore, hosts with IPv6 addresses that do not belong to the *Internal\_Custom\_Range* are not able to access *Custom\_Server*.

#### Host belonging to *Internal\_Custom\_Range* accessing *Web\_Server*:

```

id=65308 trace_id=21 func=resolve_ip6_tuple_fast line=4962 msg="vd-root:0 received a packet
(proto=6, 2001:db8:d0c:2::1:55114->2001:db8:d0c:3::1:443) from port2."
id=65308 trace_id=21 func=resolve_ip6_tuple line=5102 msg="allocate a new session-0000006b"
id=65308 trace_id=21 func=ip6_route_input line=2186 msg="find a route: gw-:: via port3 err 0
flags 40000001"
id=65308 trace_id=21 func=fw6_forward_handler line=501 msg="Check policy between port2 ->
port3"
id=65308 trace_id=21 func=fw6_forward_handler line=638 msg="Allowed by Policy-1:"

```

**Host belonging to *Internal\_Custom\_Range* accessing *FTP\_Server*:**

```
id=65308 trace_id=6 func=resolve_ip6_tuple_fast line=4962 msg="vd-root:0 received a packet
(proto=6, 2001:db8:d0c:2::32:50982->2001:db8:d0c:3::2:21) from port2."
id=65308 trace_id=6 func=resolve_ip6_tuple line=5102 msg="allocate a new session-00000053"
id=65308 trace_id=6 func=ip6_route_input line=2186 msg="find a route: gw-:: via port3 err 0
flags 40000001"
id=65308 trace_id=6 func=fw6_forward_handler line=501 msg="Check policy between port2 ->
port3"
id=65308 trace_id=6 func=fw6_forward_handler line=638 msg="Allowed by Policy-1:"
```

**Host belonging to *Internal\_Custom\_Range* accessing *TFTP\_Server*:**

```
id=65308 trace_id=17 func=resolve_ip6_tuple_fast line=4962 msg="vd-root:0 received a packet
(proto=17, 2001:db8:d0c:2::32:65316->2001:db8:d0c:3::3:69) from port2."
id=65308 trace_id=17 func=resolve_ip6_tuple line=5102 msg="allocate a new session-00000055"
id=65308 trace_id=17 func=ip6_route_input line=2186 msg="find a route: gw-:: via port3 err 0
flags 40000001"
id=65308 trace_id=17 func=fw6_forward_handler line=501 msg="Check policy between port2 ->
port3"
id=65308 trace_id=17 func=fw6_forward_handler line=530 msg="Denied by forward policy check"
```

**Host not belonging to *Internal\_Custom\_Range* accessing *FTP\_Server*:**

```
id=65308 trace_id=1 func=resolve_ip6_tuple_fast line=4962 msg="vd-root:0 received a packet
(proto=6, 2001:db8:d0c:2::33:52555->2001:db8:d0c:3::2:21) from port2."
id=65308 trace_id=1 func=resolve_ip6_tuple line=5102 msg="allocate a new session-0000004d"
id=65308 trace_id=1 func=ip6_route_input line=2186 msg="find a route: gw-:: via port3 err 0
flags 40000001"
id=65308 trace_id=1 func=fw6_forward_handler line=501 msg="Check policy between port2 ->
port3"
id=65308 trace_id=1 func=fw6_forward_handler line=530 msg="Denied by forward policy check"
```

**Internal clients accessing the Internet:**

The output below indicates that internal clients can successfully reach the internet.

1. Go to *Log & Report > Forward Traffic*.
2. View the log details in the GUI, or download the log file:


```
1: date=2023-05-10 time=13:22:54 eventtime=1683750174692262952 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root"
srcip=2001:db8:d0c:2::1 srcport=64780 srcintf="port2" srcintfrole="undefined"
dstip=64:ff9b::83fd:21c8 dstport=443 dstintf="port1" dstintfrole="undefined"
sessionid=15723 proto=6 action="close" policyid=2 policytype="policy" poluid="ea8a972e-
d7e9-51ed-9b29-757f04e7194c" policyname="IPv6_internal_to_internet"
srccountry="Reserved" service="HTTPS" trandisp="noop" duration=3 sentbyte=47192
rcvdbyte=13199 sentpkt=49 rcvdpkt=48 appcat="unscanned"
2: date=2023-05-10 time=13:19:47 eventtime=1683749987902192921 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root"
srcip=2001:db8:d0c:2::33 srcport=51246 srcintf="port2" srcintfrole="undefined"
dstip=64:ff9b::349f:31c7 dstport=443 dstintf="port1" dstintfrole="undefined"
sessionid=15126 proto=6 action="close" policyid=2 policytype="policy" poluid="ea8a972e-
d7e9-51ed-9b29-757f04e7194c" policyname="IPv6_internal_to_internet"
```

```
srccountry="Reserved" service="HTTPS" trandisp="noop" duration=59 sentbyte=5109
rcvbyte=7726 sentpkt=13 rcvpkt=11 appcat="unscanned"
```

## Site-to-site IPv6 over IPv6 VPN example

In this example, clients on IPv6-addressed networks communicate securely over public IPv6 infrastructure.

The following topology is used for this example:

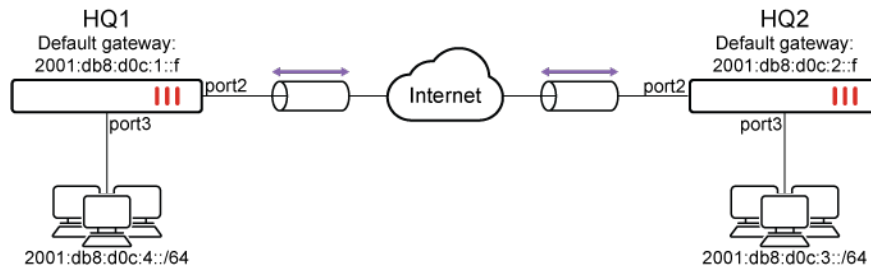

- Port2 connects to the public network and port3 connects to the local network.
- The IPv6 address for HQ1 port2 and port3 is 2001:db8:d0c:1::e and 2001:db8:d0c:4::e, respectively.
- The IPv6 address for HQ2 port2 and port3 is 2001:db8:d0c:2::e and 2001:db8:d0c:3::e, respectively.



Please note that the IPv6 addresses used in this example are for illustrative purposes only and should not be used in your environment.

The 2001:db8::/32 prefix is a special IPv6 prefix designated for use in documentation examples. See [RFC 3849](#) for more information.

### To configure the example in the GUI:

#### 1. Configure the HQ1 FortiGate.

- Configure the IPv6 address on port2 and port3:
  - Go to *Network > Interfaces* and edit port2.
  - Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:1::e/64
----------------------------	----------------------

- Click *OK*.
- Repeat these steps for port3.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:4::e/64
----------------------------	----------------------

- Configure IPsec settings:
  - Go to *VPN > IPsec Wizard* and enter a VPN name.
  - Set *Template type* to *Custom*.
  - Click *Next*.
  - Configure the following *Network* settings:

<b>IP Version</b>	IPv6
-------------------	------



<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	2001:db8:d0c:2::e
<b>Interface</b>	port2

- v. Configure the following *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

- vi. Configure the following *New Phase 2* settings:

<b>Local Address</b>	IPv6 Subnet
<b>Remote Address</b>	IPv6 Subnet

- c. Configure the IPv6 firewall policy to allow IPv6 traffic from port3 to the IPsec interface:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ2
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- d. Configure the IPv6 firewall policy to allow IPv6 traffic from the IPsec interface to port3:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

## e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv6 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	::/0
<b>Gateway Address</b>	2001:db8:d0c:1::f
<b>Interface</b>	port2

- iv. Select *OK*.
- v. Repeat the first two steps and configure the following settings for the route to the remote protected network:

<b>Destination</b>	2001:db8:d0c:3::/64
<b>Interface</b>	to_HQ2

- vi. Select *OK*.
- vii. Repeat the first two steps and configure the following settings for the blackhole route:

<b>Destination</b>	2001:db8:d0c:3::/64
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

## 2. Configure the HQ2 FortiGate:

- a. Configure the IPv6 address on port2 and port3:
  - i. Go to *Network > Interfaces* and edit port2.
  - ii. Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:2::e/64
----------------------------	----------------------

- iii. Click *OK*.
- iv. Repeat these steps for port3.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:3::e/64
----------------------------	----------------------

## b. Configure IPsec settings:

- i. Go to *VPN > IPsec Wizard* and enter a VPN name.
- ii. Set *Template type* to *Custom*.
- iii. Click *Next*.
- iv. Configure the following *Network* settings:

<b>IP Version</b>	IPv6
<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	2001:db8:d0c:1::e

<b>Interface</b>	port2
------------------	-------

- v. Configure the following *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

- vi. Configure the following *New Phase 2* settings:

<b>Local Address</b>	IPv6 Subnet
<b>Remote Address</b>	IPv6 Subnet

- c. Configure the IPv6 firewall policy to allow IPv6 traffic from port3 to the IPsec interface:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- d. Configure the IPv6 firewall policy to allow IPv6 traffic from the IPsec interface to port3:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ1
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv6 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	::/0
<b>Gateway Address</b>	2001:db8:d0c:2::f
<b>Interface</b>	port2

- iv. Select *OK*.
- v. Repeat the first two steps and configure the following settings for the route to the remote protected network:

<b>Destination</b>	2001:db8:d0c:4::/64
<b>Interface</b>	to_HQ1

- vi. Select *OK*.
- vii. Repeat the first two steps and configure the following settings for the blackhole route:

<b>Destination</b>	2001:db8:d0c:4::/64
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

### To configure the example in the CLI:

#### 1. Configure the HQ1 FortiGate.

- a. Configure the IPv6 address on port2 and port3:

```
config system interface
  edit port2
    config ipv6
      set ip6-address 2001:db8:d0c:1::e/64
    end
  next
  edit port3
    config ipv6
      set ip6-address 2001:db8:d0c:4::e/64
    end
  next
end
```

- b. Configure IPsec settings:

```
config vpn ipsec phase1-interface
  edit "to_HQ2"
    set interface port2
    set ip-version 6
    set peertype any
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw6 2001:db8:d0c:2::e
```

```

        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set src-addr-type subnet6
        set dst-addr-type subnet6
    next
end

```

**c. Configure the IPv6 firewall policy to allow IPv6 traffic between port3 to the IPsec interface:**

```

config firewall policy
    edit 1
        set srcintf "port3"
        set dstintf "to_HQ2"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
    edit 2
        set srcintf "to_HQ2"
        set dstintf "port3"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static6
    edit 1
        set gateway 2001:db8:d0c:1::f
        set device "port2"
    next
    edit 2
        set dst 2001:db8:d0c:3::/64
        set device "to_HQ2"
    next
    edit 3
        set dst 2001:db8:d0c:3::/64
        set blackhole enable
        set distance 254
    next
end

```

**2. Configure the HQ2 FortiGate.**

**a. Configure the IPv6 address on port2 and port3:**

```
config system interface
  edit port2
    config ipv6
      set ip6-address 2001:db8:d0c:2::e/64
    end
  next
  edit port3
    config ipv6
      set ip6-address 2001:db8:d0c:3::e/64
    end
  next
end
```

**b. Configure IPsec settings:**

```
config vpn ipsec phase1-interface
  edit "to_HQ1"
    set interface port2
    set ip-version 6
    set peertype any
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw6 2001:db8:d0c:1::e
    set psksecret sample
  next
end
config vpn ipsec phase2-interface
  edit "to_HQ2"
    set phase1name "to_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    set src-addr-type subnet6
    set dst-addr-type subnet6
  next
end
```

**c. Configure the IPv6 firewall policy to allow IPv6 traffic between port3 to the IPsec interface:**

```
config firewall policy
  edit 1
    set srcintf "port3"
    set dstintf "to_HQ1"
    set srcaddr6 "all"
    set dstaddr6 "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic "all"
  next
  edit 2
    set srcintf "to_HQ1"
    set dstintf "port3"
    set srcaddr6 "all"
    set dstaddr6 "all"
    set action accept
    set schedule "always"
    set service "ALL"
```

```

        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static6
    edit 1
        set gateway 2001:db8:d0c:2::f
        set device "port2"
    next
    edit 2
        set dst 2001:db8:d0c:4::/64
        set device "to_HQ1"
    next
    edit 3
        set dst 2001:db8:d0c:4::/64
        set blackhole enable
        set distance 254
    next
end

```

## Verification

The following commands are useful to check IPsec phase1/phase2 interface status:

**1. Run the diagnose vpn ike gateway list command on HQ1. The system should return the following:**

```

vd: root/0
name: to_HQ2
version: 1
interface: port2 6
addr: 2001:db8:d0c:1::e:500 -> 2001:db8:d0c:2::e:500
tun_id: 10.0.0.1/::10.0.0.1
remote_location: 0.0.0.0
network-id: 0
created: 1537s ago
peer-id: 2001:db8:d0c:2::e
peer-id-auth: no
IKE SA: created 1/1  established 1/1  time 0/0/0 ms
IPsec SA: created 1/1  established 1/1  time 0/0/0 ms

id/spi: 160 8d7231820bb5ffd9/6c840a4c11b57927
direction: initiator
status: established 1537-1537s ago = 0ms
proposal: aes128-sha256
key: 32d8521a77d98529-5fe4b67914d30f87
lifetime/rekey: 86400/84562
DPD sent/recvd: 00000007/00000003
peer-id: 2001:db8:d0c:2::e

```

**2. Run the diagnose vpn tunnel list command on HQ1. The system should return the following:**

```

list all ipsec tunnel in vd 0
-----
name=to_HQ2 ver=1 serial=1 2001:db8:d0c:1::e:0->2001:db8:d0c:2::e:0 tun_id=10.0.0.1 tun_
id6=:10.0.0.1 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf mode=auto/1 encaps=none/552 options[0228]=npu frag-rfc

```

```

run_state=0 role=primary accept_traffic=1 overlay_id=0


proxyid_num=1 child_num=0 refcnt=4 ilast=416 olast=416 ad=/0
stat: rxp=28 txp=51 rxb=76440 txb=274972
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=7
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1
  src: 0:::-ffff:ffff:ffff:ffff:ffff:ffff:ffff:0
  dst: 0:::-ffff:ffff:ffff:ffff:ffff:ffff:ffff:0
  SA: ref=3 options=10202 type=00 soft=0 mtu=1422 expire=41332/0B replaywin=2048
      seqno=34 esn=0 replaywin_lastseq=0000001d qat=0 rekey=0 hash_search_len=1
  life: type=01 bytes=0/0 timeout=42897/43200
  dec: spi=97511f0c esp=aes key=16 3b65a0121f54e07101d7b7a84b0ce243
      ah=sha1 key=20 c64cdcb40949573383c2c9f26d5af5d63776b1ce
  enc: spi=0f65cc64 esp=aes key=16 3de2f282167bac00d0a9dd942359cff3
      ah=sha1 key=20 e80e31d277f045053950e56db9eec5b6e529ea1a
  dec:pkts/bytes=56/152880, enc:pkts/bytes=99/357420
  npu_flag=00 npu_rgwy=2001:db8:d0c:2::e npu_lgwy=2001:db8:d0c:1::e npu_selid=0 dec_
npuuid=0 enc_npuuid=0
run_tally=0

```

## Site-to-site IPv4 over IPv6 VPN example

In this example, two private networks with IPv4 addressing communicate securely over IPv6 infrastructure.

The following topology is used for this example:

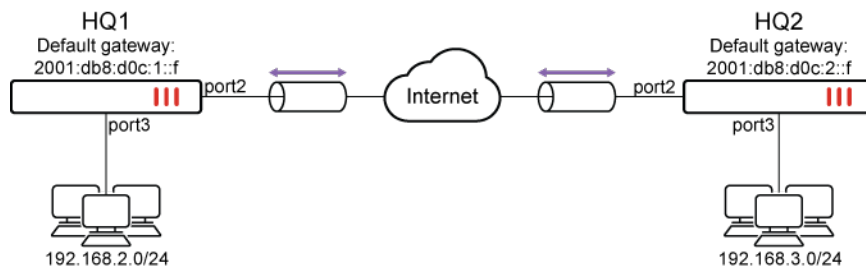

- Port2 connects to the IPv6 public network and port3 connects to the IPv4 local network.
- HQ1 port2 IPv6 address is 2001:db8:d0c:1::e and port3 IPv4 address is 192.168.2.1.
- HQ2 port2 IPv6 address is 2001:db8:d0c:2::e and port3 IPv4 address is 192.168.3.1.



Please note that the IPv6 addresses used in this example are for illustrative purposes only and should not be used in your environment.

The 2001:db8::/32 prefix is a special IPv6 prefix designated for use in documentation examples. See [RFC 3849](#) for more information.



**To configure the example in the GUI:****1. Configure the HQ1 FortiGate.****a. Configure the IPv6 address on port2 and IPv4 address on port3:**

- i. Go to *Network > Interfaces* and edit port2.
- ii. Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:1::e/64
----------------------------	----------------------

- iii. Click *OK*.
- iv. Go to *Network > Interfaces* and edit port3.
- v. Set *Addressing mode* to *Manual* and enter the *IP/Netmask*.

<b>IP/Netmask</b>	192.168.2.1/24
-------------------	----------------

**b. Configure IPsec settings:**

- i. Go to *VPN > IPsec Wizard* and enter a VPN name.
- ii. Set *Template type* to *Custom*.
- iii. Click *Next*.
- iv. Configure the following *Network* settings:

<b>IP Version</b>	IPv6
<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	2001:db8:d0c:2::e
<b>Interface</b>	port2

**v. Configure the following *Authentication* settings:**

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

**vi. Configure the following *New Phase 2* settings:**

<b>Local Address</b>	addr_subnet
<b>Remote Address</b>	addr_subnet

**c. Configure the IPv4 firewall policy to allow IPv4 traffic from port3 to the IPsec interface:**

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.

- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ2
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- d. Configure the IPv4 firewall policy to allow IPv4 traffic from the IPsec interface to port3:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv6 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	0.0.0.0/0.0.0.0
<b>Gateway Address</b>	2001:db8:d0c:1::f
<b>Interface</b>	port2

- iv. Select *OK*.

- v. Repeat the first two steps for *IPv4 Static Route* and configure the following settings for the route to the remote protected network:

<b>Destination</b>	192.168.3.0/24
<b>Interface</b>	to_HQ2

- vi. Select *OK*.

- vii. Repeat the first two steps for *IPv4 Static Route* and configure the following settings for the blackhole route:

<b>Destination</b>	192.168.3.0/24
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

2. Configure the HQ2 FortiGate:

- a. Configure the IPv6 address on port2 and IPv4 address on port3:

- i. Go to *Network > Interfaces* and edit port2.
- ii. Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:2::e/64
----------------------------	----------------------

- iii. Click *OK*.
- iv. Go to *Network > Interfaces* and edit port3.
- v. Set *Addressing mode* to *Manual* and enter the *IP/Netmask*.

<b>IP/Netmask</b>	192.168.3.1/24
-------------------	----------------

- b. Configure IPsec settings:

- i. Go to *VPN > IPsec Wizard* and enter a VPN name.
- ii. Set *Template type* to *Custom*.
- iii. Click *Next*.
- iv. Configure the following *Network* settings:

<b>IP Version</b>	IPv6
<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	2001:db8:d0c:1::e
<b>Interface</b>	port2

- v. Configure the following *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

- vi. Configure the following *New Phase 2* settings:

<b>Local Address</b>	addr_subnet
<b>Remote Address</b>	addr_subnet

- c. Configure the IPv4 firewall policy to allow IPv4 traffic from port3 to the IPsec interface:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.

- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- d. Configure the IPv4 firewall policy to allow IPv4 traffic from the IPsec interface to port3:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ1
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv6 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	0.0.0.0/0.0.0.0
<b>Gateway Address</b>	2001:db8:d0c:2::f
<b>Interface</b>	port2

- iv. Select *OK*.

- v. Repeat the first two steps for *IPv4 Static Route* and configure the following settings for the route to the remote protected network:

<b>Destination</b>	192.168.2.0/24
<b>Interface</b>	to_HQ1

- vi. Select *OK*.

- vii. Repeat the first two steps for *IPv4 Static Route* and configure the following settings for the blackhole route:

<b>Destination</b>	192.168.2.0/24
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

### To configure the example in the CLI:

1. Configure the HQ1 FortiGate.

- a. Configure the IPv6 address on port2 and IPv4 address on port3:

```
config system interface
  edit port2
    config ipv6
      set ip6-address 2001:db8:d0c:1::e/64
    end
  next
  edit port3
    set ip 192.168.2.1/24
  next
end
```

- b. Configure IPsec settings:

```
config vpn ipsec phase1-interface
  edit "to_HQ2"
    set interface port2
    set ip-version 6
    set peertype any
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw6 2001:db8:d0c:2::e
    set psksecret sample
  next
end
config vpn ipsec phase2-interface
  edit "to_HQ2"
    set phase1name "to_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
    aes256gcm chacha20poly1305
    set src-addr-type subnet
    set dst-addr-type subnet
  next
end
```

- c. Configure the IPv4 firewall policy to allow IPv4 traffic between port3 to the IPsec interface:

```
config firewall policy
  edit 1
    set srcintf "port3"
    set dstintf "to_HQ2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
```

```

        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
    edit 2
        set srcintf "to_HQ2"
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static6
    edit 1
        set gateway 2001:db8:d0c:1::f
        set device "port2"
    next
end
config router static
    edit 1
        set dst 192.168.3.0 255.255.255.0
        set device "to_HQ2"
    next
    edit 2
        set dst 192.168.3.0 255.255.255.0
        set device blackhole
        set distance 254
    next
end

```

**2. Configure the HQ2 FortiGate.**

**a. Configure the IPv6 address on port2 and IPv4 address on port3:**

```

config system interface
    edit port2
        config ipv6
            set ip6-address 2001:db8:d0c:2::e/64
        end
    next
    edit port3
        set ip 192.168.3.1/24
    next
end

```

**b. Configure IPsec settings:**

```

config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface port2
        set ip-version 6
        set peertype any
    end
end

```

```

        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw6 2001:db8:d0c:1::e
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set src-addr-type subnet
        set dst-addr-type subnet
    next
end

```

**c. Configure the IPv4 firewall policy to allow IPv4 traffic between port3 to the IPsec interface:**

```

config firewall policy
    edit 1
        set srcintf "port3"
        set dstintf "to_HQ1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
    edit 2
        set srcintf "to_HQ1"
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static6
    edit 1
        set gateway 2001:db8:d0c:2::f
        set device "port2"
    next
end
config router static
    edit 1
        set dst 192.168.2.0 255.255.255.0
        set device "to_HQ1"
    next
    edit 2
        set dst 192.168.2.0 255.255.255.0
        set device blackhole
        set distance 254
    next
end

```

```

    next
end

```

## Verification

The following commands are useful to check IPsec phase1/phase2 interface status:

1. Run the `diagnose vpn ike gateway list` command on HQ1. The system should return the following:

```

vd: root/0
name: to_HQ2
version: 1
interface: port2 6
addr: 2001:db8:d0c:1::e:500 -> 2001:db8:d0c:2::e:500
tun_id: 10.0.0.1/::10.0.0.1
remote_location: 0.0.0.0
network-id: 0
created: 7215s ago
peer-id: 2001:db8:d0c:2::e
peer-id-auth: no
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/2 established 1/2 time 0/5/10 ms

id/spi: 160 8d7231820bb5ffd9/6c840a4c11b57927
direction: initiator
status: established 7215-7215s ago = 0ms
proposal: aes128-sha256
key: 32d8521a77d98529-5fe4b67914d30f87
lifetime/rekey: 86400/78884
DPD sent/recvd: 00000007/00000003
peer-id: 2001:db8:d0c:2::e

```

2. Run the `diagnose vpn tunnel list` command on HQ1. The system should return the following:

```

list all ipsec tunnel in vd 0
-----
name=to_HQ2 ver=1 serial=1 2001:db8:d0c:1::e:0->2001:db8:d0c:2::e:0 tun_id=10.0.0.1 tun_
id6::10.0.0.1 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf mode=auto/1 encap=none/552 options[0228]=npu frag-rfc
run_state=0 role=primary accept_traffic=1 overlay_id=0

proxyid_num=1 child_num=0 refcnt=4 ilast=581 olast=581 ad=/0
stat: rxp=4 txp=4 rxb=26312 txb=26312
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=7
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=2
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:0.0.0.0-255.255.255.255:0
SA: ref=3 options=10202 type=00 soft=0 mtu=1422 expire=42116/0B replaywin=2048
seqno=5 esn=0 replaywin_lastseq=00000005 qat=0 rekey=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42902/43200
dec: spi=97511f0d esp=aes key=16 c7323977434f48604c37d7be423f7519
ah=sha1 key=20 ee8f9b457cec9b3c2e614db058bb97896d7ef8d9
enc: spi=0f65cc65 esp=aes key=16 8b78642018b02165d1ef29ad3d8215c8
ah=sha1 key=20 f2adca47b0b3925a87e329a237f0fd521e0afd19
dec:pkts/bytes=8/52624, enc:pkts/bytes=8/52984

```




```
npu_flag=00 npu_rgwy=2001:db8:d0c:2::e npu_lgwy=2001:db8:d0c:1::e npu_selid=1 dec_
npuid=0 enc_npuid=0
run_tally=0
```

## Site-to-site IPv6 over IPv4 VPN example

In this example, IPv6-addressed networks communicate securely over IPv4 public infrastructure.

The following topology is used for this example:

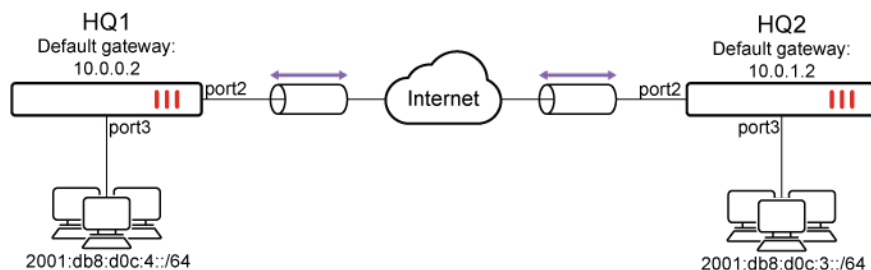

- Port2 connects to the IPv4 public network and port3 connects to the IPv6 local network.
- HQ1 port2 IPv4 address is 10.0.0.1 and port3 IPv6 address is 2001:db8:d0c:4::e.
- HQ2 port2 IPv4 address is 10.0.1.1 and port3 IPv6 address is 2001:db8:d0c:3::e.



Please note that the IPv6 addresses used in this example are for illustrative purposes only and should not be used in your environment.

The 2001:db8::/32 prefix is a special IPv6 prefix designated for use in documentation examples. See [RFC 3849](#) for more information.

### To configure the example in the GUI:

#### 1. Configure the HQ1 FortiGate.

##### a. Configure the IPv4 address on port2 and IPv6 address on port3:

- Go to *Network > Interfaces* and edit port2.
- Set *Addressing mode* to *Manual* and enter the *IP/Netmask*.

<b>IP/Netmask</b>	10.0.0.1/24
-------------------	-------------

##### iii. Click OK.

##### iv. Go to *Network > Interfaces* and edit port3.

- Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:4::e/64
----------------------------	----------------------

##### b. Configure IPsec settings:

- Go to *VPN > IPsec Wizard* and enter a VPN name.
- Set *Template type* to *Custom*.
- Click *Next*.
- Configure the following *Network* settings:

<b>IP Version</b>	IPv4
<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	10.0.1.1
<b>Interface</b>	port2

- v. Configure the following *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

- vi. Configure the following *New Phase 2* settings:

<b>Local Address</b>	IPv6 Subnet
<b>Remote Address</b>	IPv6 Subnet

- c. Configure the IPv6 firewall policy to allow IPv6 traffic from port3 to the IPsec interface:

- i. Go to *Policy & Objects > Firewall Policy*.
- ii. Click *Create New*.
- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ2
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.
- d. Configure the IPv6 firewall policy to allow IPv6 traffic from the IPsec interface to port3:
- i. Go to *Policy & Objects > Firewall Policy*.
  - ii. Click *Create New*.

- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv4 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	0.0.0.0/0.0.0.0
<b>Gateway Address</b>	10.0.0.2
<b>Interface</b>	port2

- iv. Select *OK*.

- v. Repeat the first two steps for *IPv6 Static Route* and configure the following settings for the route to the remote protected network:

<b>Destination</b>	2001:db8:d0c:3::/64
<b>Interface</b>	to_HQ2

- vi. Select *OK*.

- vii. Repeat the first two steps for *IPv6 Static Route* and configure the following settings for the blackhole route:

<b>Destination</b>	2001:db8:d0c:3::/64
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

2. Configure the HQ2 FortiGate:

- a. Configure the IPv4 address on port2 and IPv6 address on port3:
  - i. Go to *Network > Interfaces* and edit port2.
  - ii. Set *Addressing mode* to *Manual* and enter the *IP/Netmask*.

<b>IP/Netmask</b>	10.0.1.1/24
-------------------	-------------

- iii. Click *OK*.

- iv. Go to *Network > Interfaces* and edit port3.
- v. Set *IPv6 addressing mode* to *Manual* and enter the *IPv6 Address/Prefix*.

<b>IPv6 Address/Prefix</b>	2001:db8:d0c:3::e/64
----------------------------	----------------------

- b. Configure IPsec settings:
  - i. Go to *VPN > IPsec Wizard* and enter a VPN name.
  - ii. Set *Template type* to *Custom*.
  - iii. Click *Next*.
  - iv. Configure the following *Network* settings:

<b>IP Version</b>	IPv4
<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	10.0.0.1
<b>Interface</b>	port2

- v. Configure the following *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	sample

- vi. Configure the following *New Phase 2* settings:

<b>Local Address</b>	IPv6 Subnet
<b>Remote Address</b>	IPv6 Subnet

- c. Configure the IPv6 firewall policy to allow IPv6 traffic from port3 to the IPsec interface:
  - i. Go to *Policy & Objects > Firewall Policy*.
  - ii. Click *Create New*.
  - iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	to_HQ1
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.
- d. Configure the IPv6 firewall policy to allow IPv6 traffic from the IPsec interface to port3:
  - i. Go to *Policy & Objects > Firewall Policy*.
  - ii. Click *Create New*.

- iii. Name the policy and configure the following parameters:

<b>Incoming Interface</b>	to_HQ1
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- iv. Click *OK*.

- e. Configure the static routes:

- i. Go to *Network > Static Routes*.
- ii. Click *Create New > IPv4 Static Route*.
- iii. Configure the following settings for the default route to the remote VPN gateway:

<b>Destination</b>	0.0.0.0/0.0.0.0
<b>Gateway Address</b>	10.0.1.2
<b>Interface</b>	port2

- iv. Select *OK*.

- v. Repeat the first two steps for *IPv6 Static Route* and configure the following settings for the route to the remote protected network:

<b>Destination</b>	2001:db8:d0c:4::/64
<b>Interface</b>	to_HQ1

- vi. Select *OK*.

- vii. Repeat the first two steps for *IPv6 Static Route* and configure the following settings for the blackhole route:

<b>Destination</b>	2001:db8:d0c:4::/64
<b>Interface</b>	Blackhole
<b>Administrative Distance</b>	254

- viii. Select *OK*.

### To configure the example in the CLI:

1. Configure the HQ1 FortiGate.

- a. Configure the IPv6 address on port2 and port3:

```
config system interface
  edit port2
    set ip 10.0.0.1/24
  next
```

```

    edit port3
        config ipv6
            set ip6-address 2001:db8:d0c:4::e/64
        end
    next
end

```

**b. Configure IPsec settings:**

```

config vpn ipsec phase1-interface
    edit "to_HQ2"
        set interface port2
        set ip-version 4
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 10.0.1.1
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set src-addr-type subnet6
        set dst-addr-type subnet6
    next
end

```

**c. Configure the IPv6 firewall policy to allow IPv6 traffic between port3 to the IPsec interface:**

```

config firewall policy
    edit 1
        set srcintf "port3"
        set dstintf "to_HQ2"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
    edit 2
        set srcintf "to_HQ2"
        set dstintf "port3"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static
    edit 1

```

```

        set gateway 10.0.0.2
        set device "port2"
    next
end
config router static6
    edit 1
        set dst 2001:db8:d0c:3::/64
        set device "to_HQ2"
    next
    edit 2
        set dst 2001:db8:d0c:3::/64
        set device blackhole
        set distance 254
    next
end

```

## 2. Configure the HQ2 FortiGate.

### a. Configure the IPv6 address on port2 and port3:

```

config system interface
    edit port2
        set ip 10.0.1.1/24
    next
    edit port3
        config ipv6
            set ip6-address 2001:db8:d0c:3::e/64
        end
    next
end

```

### b. Configure IPsec settings:

```

config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface port2
        set ip-version 4
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 10.0.0.1
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set src-addr-type subnet6
        set dst-addr-type subnet6
    next
end

```

### c. Configure the IPv6 firewall policy to allow IPv6 traffic between port3 to the IPsec interface:

```

config firewall policy
    edit 1
        set srcintf "port3"

```

```

        set dstintf "to_HQ1"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
    edit 2
        set srcintf "to_HQ1"
        set dstintf "port3"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic "all"
    next
end

```

**d. Configure the static routes:**

```

config router static
    edit 1
        set gateway 10.0.1.2
        set device "port2"
    next
end
config router static6
    edit 1
        set dst 2001:db8:d0c:4::/64
        set device "to_HQ1"
    next
    edit 2
        set dst 2001:db8:d0c:4::/64
        set device blackhole
        set distance 254
    next
end

```

## Verification

The following commands are useful to check IPsec phase1/phase2 interface status:

1. Run the `diagnose vpn ike gateway list` command on HQ1. The system should return the following:

```

vd: root/0
name: to_HQ2
version: 1
interface: port2 6
addr: 10.0.0.1:500 -> 10.0.0.2:500
tun_id: 10.0.0.2/::10.0.0.2
remote_location: 0.0.0.0
network-id: 0
created: 576319s ago
peer-id: 10.0.0.2
peer-id-auth: no

```



```
IKE SA: created 1/8  established 1/8  time 0/1127/9000 ms
IPsec SA: created 1/7  established 1/7  time 0/5/10 ms
```

```
id/spi: 8 c04ab0ead989f579/267813e164d4ec22
direction: initiator
status: established 59710-59710s ago = 0ms
proposal: aes128-sha256
key: 034a0c3bf3deb551-8d647af9b6f76578
lifetime/rekey: 86400/26389
DPD sent/recvd: 00000044/00000047
peer-id: 10.0.0.2
```

**2. Run the diagnose vpn tunnel list command on HQ1. The system should return the following:**


```
list all ipsec tunnel in vd 0
-----
name=to_HQ2 ver=1 serial=1 10.0.0.1:0->10.0.0.2:0 tun_id=10.0.0.2 tun_id6=:10.0.0.2
dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf mode=auto/1 encap=none/552 options[0228]=npu frag-rfc
run_state=0 role=primary accept_traffic=1 overlay_id=0

proxyid_num=1 child_num=0 refcnt=4 ilast=27652 olast=27652 ad=/0
stat: rxp=198 txp=192 rxb=15840 txb=15360
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=68
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1
src: 0:::-ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff:0
dst: 0:::-ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff:0
SA: ref=3 options=10202 type=00 soft=0 mtu=1438 expire=2709/0B replaywin=2048
seqno=d esn=0 replaywin_lastseq=0000000c qat=0 rekey=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42933/43200
dec: spi=24felf3a esp=aes key=16 de482993279020176bb2709052ef0656
    ah=sha1 key=20 b6fe007aa8e2c587762c4f9808321ae5e015dc0a
enc: spi=5989a2d9 esp=aes key=16 438c8d60ae9ca8400138965ff90a1384
    ah=sha1 key=20 a931ee4518c365dae630431b25edfe6d930e8075
dec:pkts/bytes=22/1760, enc:pkts/bytes=24/2784
npu_flag=00 npu_rgwy=10.0.0.2 npu_lgwy=10.0.0.1 npu_selid=0 dec_npuid=0 enc_npuid=0
```

## FortiGate LAN extension


LAN extension mode allows a remote FortiGate to provide remote connectivity to a local FortiGate over a backhaul connection.

The remote FortiGate, called the FortiGate Connector, discovers the local FortiGate, called the FortiGate Controller, and forms one or more IPsec tunnels back to the FortiGate Controller. A VXLAN is established over the IPsec tunnels creating an L2 network between the FortiGate Controller and the network behind the FortiGate Connector.

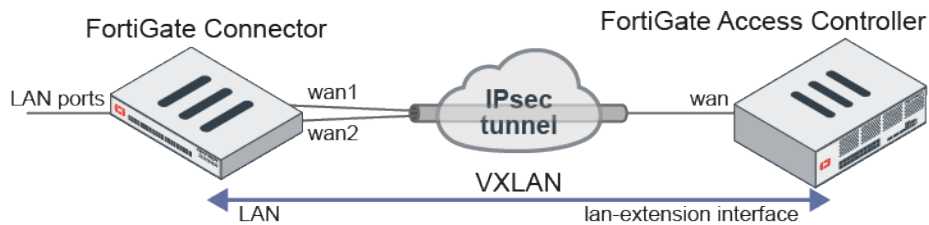

In this example, the Controller provides secure internet access to the remote network behind the Connector. The Controller has two WAN connections: an inbound backhaul connection and an outbound internet connection. The Connector has two wired WAN/uplink ports that are connected to the internet.

After the Connector discovers the Controller and is authorized by the Controller, the Controller pushes a FortiGate LAN extension profile to the Connector. The Connector uses the profile configurations to form two IPsec tunnels back to the Controller. Additional VXLAN aggregate interfaces are automatically configured to create an L2 network between the Connector LAN port and a virtual LAN extension interface on the Controller. Clients behind the Connector can then connect to the internet through the Controller that is securing the internet connection.

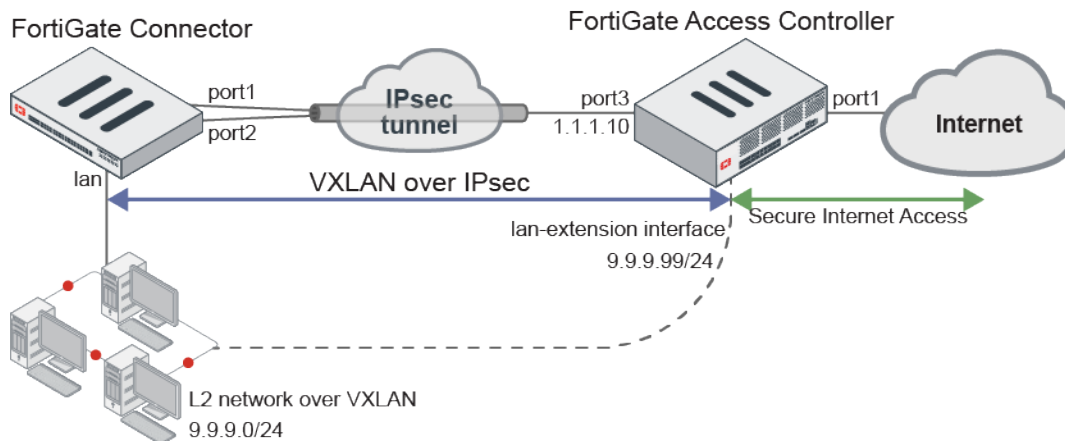

### To discover and authorize the FortiGate Controller:

#### 1. On the FortiGate Controller:

- a. For high-end models (1000 series and higher), enable the FortiExtender setting:

```
config system global
    set fortiextender enable
end
```



This command is configured by default on low- and medium-end models (900 series and lower).

- b. Enable security fabric connections on port3 to allow the Connector to connect over CAPWAP:

```
config system interface
    edit "port3"
        set vdom "root"
        set ip 1.1.1.10 255.255.255.0
        set allowaccess fabric ping
    end
```

```

        set ip-managed-by-fortiipam enable
    next
end

```

## 2. On the FortiGate Connector:

### a. Enable VDOMs:

```

config system global
    set vdom-mode multi-vdom
end

```

You will be logged out of the device when VDOM mode is enabled.

### b. For high-end models (1000 series and higher), enable the FortiExtender setting in the global VDOM:

```

config global
    config system global
        set fortiextender enable
    end
end

```



This command is configured by default on low- and medium-end models (900 series and lower).

---

### c. Create the lan-ext VDOM while setting the VDOM type to LAN extension (making the VDOM act as a FortiExtender in LAN extension mode), and add the Controller IP address:

```

config vdom
    edit lan-ext
        config system settings
            set vdom-type lan-extension
            set lan-extension-controller-addr "1.1.1.10"
            set ike-port 4500
        end
    next
end

```

### d. Configure port1 and port2 to access the Controller:

```

config system interface
    edit "port1"
        set vdom "lan-ext"
        set ip 5.5.5.1 255.255.255.0
        set allowaccess ping fabric
        set type physical
        set lldp-reception enable
        set role wan
    next
    edit "port2"
        set vdom "lan-ext"
        set ip 6.6.6.1 255.255.255.0
        set allowaccess ping fabric
        set type physical
        set lldp-reception enable
        set role wan
    next
end

```

```

    next
end

```

### 3. On the FortiGate Controller:

#### a. Extension controller configurations are automatically initialized:

```

config extension-controller fortigate-profile
    edit "FGCONN-lanext-default"
        set id 0
        config lan-extension
            set ipsec-tunnel "fg-ipsec-XdSpij"
            set backhaul-interface "port3"
        end
    next
end

config extension-controller fortigate
    edit "FGT60E0000000001"
        set id "FG5H1E0000000001"
        set device-id 0
        set profile "FGCONN-lanext-default"
    next
end

```


#### b. Enable FortiGate administration to authorize the Connector:

```

config extension-controller fortigate
    edit "FGT60E0000000001"
        set authorized enable
    next
end

```

### 4. After the FortiGate Connector has been authorized, the Controller pushes the IPsec tunnel configuration to the Connector, forcing it to establish the tunnel and form the VXLAN mechanism.

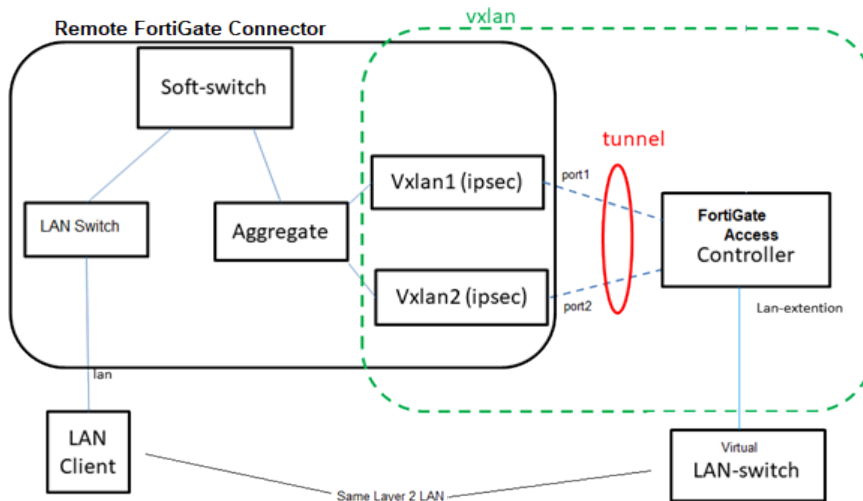

The VXLANs are built on the IPsec tunnels between the Connector and Controller. The VXLAN interfaces are aggregated for load balancing and redundancy. A softswitch combines the aggregate interface with the local LAN ports, allowing the LAN ports to be part of the VXLAN. This combines the local LAN ports with the virtual LAN extension interface on the FortiGate Controller.

- a. The Connector receives the IPsec configurations from the Controller, and creates tunnels for each uplink:

```
config vpn ipsec phase1-interface
  edit "ul-port1"
    set interface "port1"
    set ike-version 2
    set peertype any
    set net-device disable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set localid "peerid-T4YLv2rp62SU6JhoCPIv02MzjLtS7P5HlxRER1Qpi6O9ZsAsbPSPvoiE"
    set dpd on-idle
    set comments "[FGCONN] Do NOT edit. Automatically generated by extension
controller."
    set remote-gw 1.1.1.10
    set psksecret *****
  next
  edit "ul-port2"
    set interface "port2"
    set ike-version 2
    set peertype any
    set net-device disable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set localid "peerid-T4YLv2rp62SU6JhoCPIv02MzjLtS7P5HlxRER1Qpi6O9ZsAsbPSPvoiE"
    set dpd on-idle
    set comments "[FGCONN] Do NOT edit. Automatically generated by extension
controller."
    set remote-gw 1.1.1.10
    set psksecret *****
  next
end
```

- b. VXLAN interfaces are formed over each tunnel:

```
config system vxlan
  edit "vx-port1"
    set interface "ul-port1"
    set vni 1
    set dstport 9999
    set remote-ip "10.252.0.1"
  next
  edit "vx-port2"
    set interface "ul-port2"
    set vni 1
    set dstport 9999
    set remote-ip "10.252.0.1"
  next
end
```

- c. An aggregate interface is configured to load balance between the two VXLAN interfaces, using the source MAC and providing link redundancy:

```
config system interface
  edit "le-agg-link"
    set vdom "lan-ext"
    set type aggregate
    set member "vx-port1" "vx-port2"
    set snmp-index 35
    set lacp-mode static
```

```

        set algorithm Source-MAC
    next
end

```

- d. The softswitch bridges the aggregate interface and the local LAN to connect the LAN to the VXLAN bridged L2 network that goes to the FortiGate LAN extension interface:

```

config system switch-interface
    edit "le-switch"
        set vdom "lan-ext"
        set member "le-agg-link" "lan"
    next
end

```

- e. After the IPsec tunnel is setup and the VXLAN is created over the tunnel, the LAN extension interface is automatically created on the Controller:

```

config system interface
    edit "FGT60E0000000001"
        set vdom "root"
        set ip 192.168.0.254 255.255.255.0
        set allowaccess ping ssh
        set type lan-extension
        set role lan
        set snmp-index 27
        set ip-managed-by-fortiipam enable
        set interface "fg-ipsec-XdSpij"
    next
end

```

### To configure the LAN extension interface and firewall policy on the FortiGate Controller:

1. Set the IP address and netmask of the LAN extension interface:

```

config system interface
    edit "FGT60E0000000001"
        set ip 9.9.9.99 255.255.255.0
        set ip-managed-by-fortiipam enable
    next
end

```

Devices on the remote LAN network will use this as their gateway.

2. Optionally, enable DHCP on the interface to assign IP addresses to the remote devices:

```

config system dhcp server
    edit 3
        set dns-service default
        set default-gateway 9.9.9.99
        set netmask 255.255.255.0
        set interface "FGT60E0000000001"
        config ip-range
            edit 1
                set start-ip 9.9.9.100
                set end-ip 9.9.9.254
            next
        end
        set dhcp-settings-from-fortiipam enable
    config exclude-range

```

```

        edit 1
            set start-ip 9.9.9.254
            set end-ip 9.9.9.254
        next
    end
next
end

```

### 3. Configure the firewall policy to allow traffic from the LAN extension interface to the WAN interface (port1):

```

config firewall policy
    edit "lan-ext"
        set name "qsaf"
        set srcintf "FGT60E0000000001"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

Optionally, security profiles and other settings can be configured.

The policy allows remote LAN clients to access the internet through the backhaul channel. Clients in the remote LAN behind the Connector receive an IP address over DHCP and access the internet securely through the Controller.

## Diagnostics

Administrators can use the *Diagnostics* page to access the following tools:

Capture packet	Captures packet streams in real-time to let you view header and payload information. See <a href="#">Using the packet capture tool on page 617</a> .
Debug flow	Traces packet flow through FortiOS to help you diagnose and debug issues. See <a href="#">Using the debug flow tool on page 621</a> .

See also [Performing a sniffer trace or packet capture on page 3129](#) and [Debugging the packet flow on page 3131](#).

## Using the packet capture tool

Administrators can use the packet capture tool to select a packet and view its header and payload information in real-time. Once completed, packets can be filtered by various fields or through the search bar. The capture can be saved as a PCAP file that you can use with a third-party application, such as Wireshark, for further analysis.

Recent capture criteria is saved after the packet capture, and you can select and use the same criteria again.

For information about running a packet capture in the CLI, see [Performing a sniffer trace or packet capture on page 3129](#).

### To use the packet capture tool in the GUI:

1. Go to *Network > Diagnostics* and select the *Packet Capture* tab.
2. Optionally, select an *Interface* (*any* is the default).
3. Optionally, enable *Filters* and select a *Filtering syntax*:
  - a. *Basic*: enter criteria for the *Host*, *Port*, and *Protocol number*.


The screenshot shows the 'Packet Capture' tab in the FortiOS GUI. At the top, there are two tabs: 'Packet Capture' (selected) and 'Debug Flow'. A blue information box at the top left states: 'NPU hardware acceleration must be disabled on the respective firewall policy to see all packets. To do so, set "auto-asic-offload" to "disable" in the CLI.' Below this, the 'Interface' is set to 'any' with a dropdown arrow. The 'Maximum captured packets' is set to 1 with a toggle switch. The 'Filters' section is expanded, showing 'Filtering syntax' with 'Basic' selected and 'Advanced' as an option. Below 'Filtering syntax', there are four input fields: 'Host', 'Port', 'Protocol number', and a '+' button for each. At the bottom, there is a green 'Start capture' button. On the right side, there is a section titled 'Recent Capture Criteria'.

- b. *Advanced*: enter a string, such as *src host 172.16.200.254 and dst host 172.16.200.1 and dst port 443*.


The screenshot shows the 'Packet Capture' tab in the FortiOS GUI, similar to the previous one. The 'Interface' is still 'any' and 'Maximum captured packets' is 1. In the 'Filters' section, 'Filtering syntax' now has 'Advanced' selected, and 'Basic' is unselected. Below 'Filtering syntax', there is a single 'Filter' input field. At the bottom, there is a green 'Start capture' button. The 'Recent Capture Criteria' section is still visible on the right.

4. Click *Start capture*. The capture is visible in real-time.



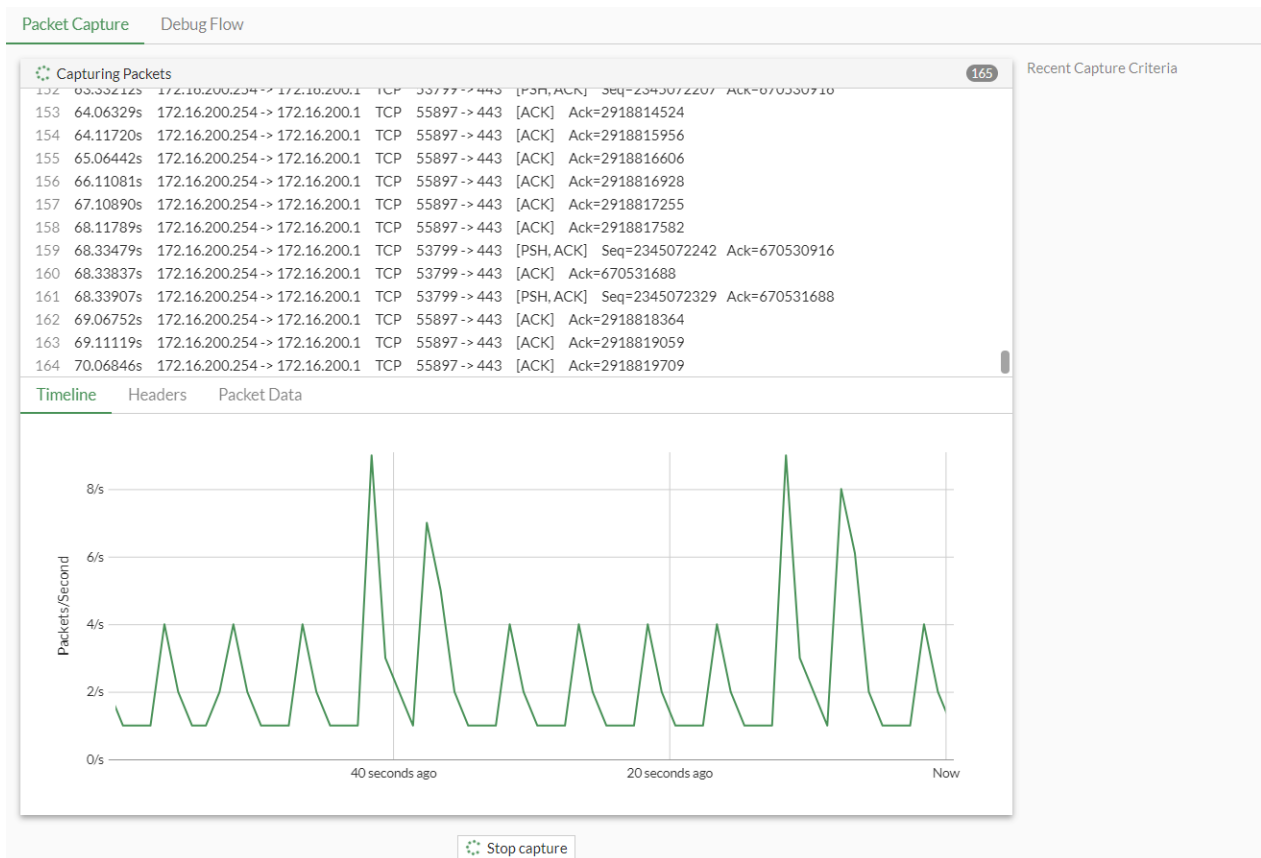

5. While the capture is running, select a packet, then click the *Headers* or *Packet Data* tabs to view more information.

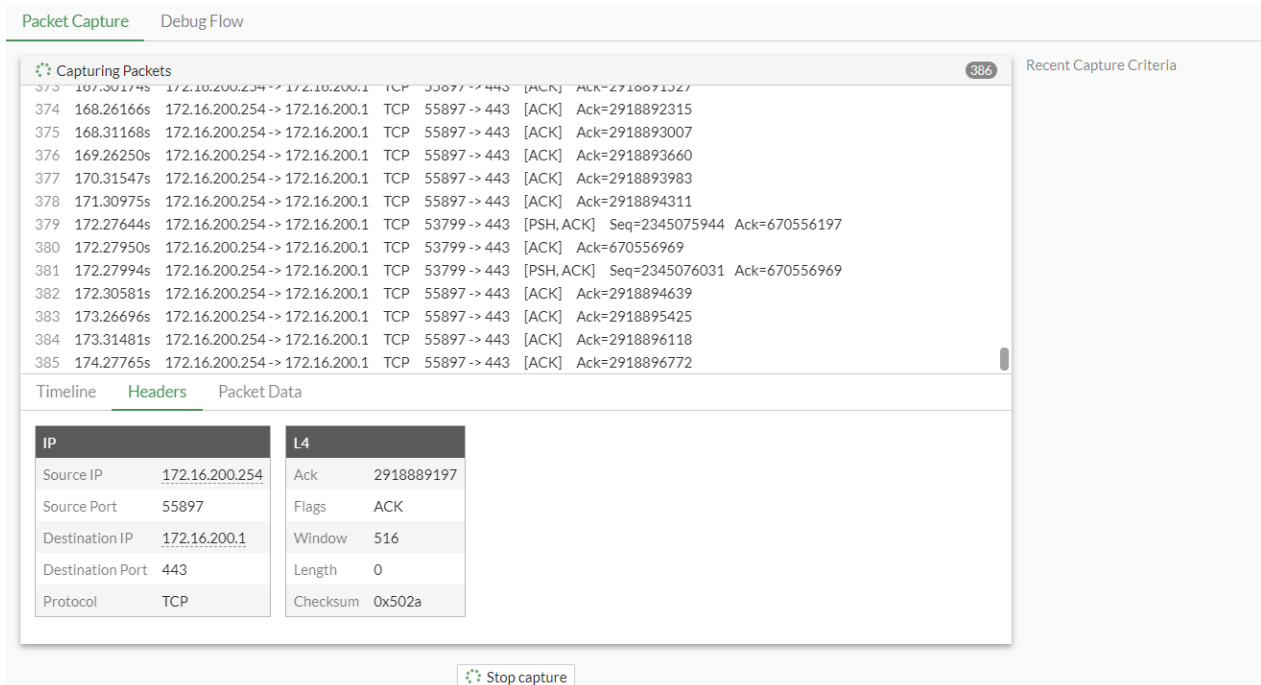

Packet Capture Debug Flow

**Capturing Packets** 497 Recent Capture Criteria

Time	Source IP	Destination IP	Source Port	Destination Port	Protocol	Details
208.27734s	172.16.200.254	172.16.200.1	TCP	55897 -> 443	TCP	[ACK] Ack=2918930311
208.30063s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[PSH, ACK] Seq=2345077654 Ack=670614838
208.30384s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[ACK] Ack=670615587
208.30494s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[PSH, ACK] Seq=2345077741 Ack=670615587
208.67222s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[PSH, ACK] Seq=2345077776 Ack=670615587
208.68852s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[ACK] Ack=670616975
208.69082s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[PSH, ACK] Seq=2345077863 Ack=670616975
208.69107s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[PSH, ACK] Seq=2345077960 Ack=670616975
208.69360s	172.16.200.254	172.16.200.1	TCP	53799 -> 443	TCP	[ACK] Ack=670617488
209.27780s	172.16.200.254	172.16.200.1	TCP	55897 -> 443	TCP	[ACK] Ack=2918930961
209.27831s	172.16.200.254	172.16.200.1	TCP	55897 -> 443	TCP	[ACK] Ack=2918932702
209.27855s	172.16.200.254	172.16.200.1	TCP	55897 -> 443	TCP	[ACK] Ack=2918934610

Timeline Headers **Packet Data**

Search

```

0 00 00 00 01 00 06 90 6c ac e8 c9 0e 00 00 08 00 |.....1.....|
10 45 00 00 7f 71 0f 40 00 7e 06 a2 48 ac 10 c8 fe |E..q.@...H....|
20 ac 10 c8 01 d2 27 01 bb 8b c7 0a 27 27 f8 41 6e |.....'.....An|
30 50 18 0e fc 78 75 00 00 17 03 03 00 52 f9 fc ab |P...xu.....R...|
40 ab 69 7f 3c 56 02 6d 0c 9d 19 b4 ed 2d 11 2e ae |.i <V.m.....|
50 de d6 8f af fc a8 5d cf da 45 13 79 ae 91 96 6b |.....].E.y...k|
60 61 a8 9e 7a 7d b3 cc 97 fe f3 91 bd 4d bc c5 34 |a..z}.....M..4|
70 f7 23 12 d7 3f c8 87 5c c3 96 0d 0b 51 04 7c a7 |.#..?......Q..|
80 7a c1 b3 4a bc 1d 3d c0 f1 7d 8f 75 a7 6f bd |Z..J...=..).u.o.|

```

Stop capture

6. When the capture is finished, click **Save as pcap**. The PCAP file is automatically downloaded.

Packet Capture Debug Flow

**Capturing Packets** 727 Recent Capture Criteria

Time	Source IP	Destination IP	Source Port	Destination Port	Protocol
0.07541s	172.16.200.254	172.16.200.1	55897	443	TCP
1.06700s	172.16.200.254	172.16.200.1	55897	443	TCP
2.04962s	172.16.200.254	172.16.200.1	53799	443	TCP
2.05034s	172.16.200.254	172.16.200.1	53799	443	TCP
2.05063s	172.16.200.254	172.16.200.1	53799	443	TCP
2.05555s	172.16.200.254	172.16.200.1	53799	443	TCP
2.05653s	172.16.200.254	172.16.200.1	53799	443	TCP

Timeline Headers **Packet Data**

Search

```

0 00 00 00 01 00 06 90 6c ac e8 c9 0e 00 00 08 00 |.....1.....|
10 45 00 00 7f 71 0f 40 00 7e 06 a2 48 ac 10 c8 fe |E..q.@...H....|
20 ac 10 c8 01 d2 27 01 bb 8b c7 0a 27 27 f8 41 6e |.....'.....An|
30 50 18 0e fc 78 75 00 00 17 03 03 00 52 f9 fc ab |P...xu.....R...|
40 ab 69 7f 3c 56 02 6d 0c 9d 19 b4 ed 2d 11 2e ae |.i <V.m.....|
50 de d6 8f af fc a8 5d cf da 45 13 79 ae 91 96 6b |.....].E.y...k|
60 61 a8 9e 7a 7d b3 cc 97 fe f3 91 bd 4d bc c5 34 |a..z}.....M..4|
70 f7 23 12 d7 3f c8 87 5c c3 96 0d 0b 51 04 7c a7 |.#..?......Q..|
80 7a c1 b3 4a bc 1d 3d c0 f1 7d 8f 75 a7 6f bd |Z..J...=..).u.o.|

```

Back Save as pcap

7. Optionally, use the **Search** bar or the column headers to filter the results further.

The packet capture history is listed under **Recent Capture Criteria** in the right-side of the screen. Clicking the hyperlink will take you back to the main page with the interface and filter settings already populated.



For more granular sniffer output with various verbose settings, use `diagnose sniffer packet <interface> <'filter'> <verbose> <count> <tsformat>`. See [Performing a sniffer trace or packet capture on page 3129](#).

### To use recent capture criteria:

1. Go to *Network > Diagnostics* and select the *Packet Capture* tab.
2. Under *Recent Capture Criteria*, click one of the saved capture criteria. The criteria populate the fields.
3. Click *Start Capture*.

## Using the debug flow tool

Administrators can use the debug flow tool to display debug flow output in real-time until it is stopped. The completed output can be filtered by time, message, or function. The output can be exported as a CSV file.

For information about using the debug flow tool in the CLI, see [Debugging the packet flow on page 3131](#).

### To run a debug flow:

1. Go to *Network > Diagnostics* and select the *Debug Flow* tab.
2. Optionally, enable *Filters* and select a *Filter type*:
  - a. *Basic*: filter by *IP address*, *Port*, and *Protocol*, which is the equivalent of:
    - `# diagnose debug flow filter addr <addr/range>`
    - `# diagnose debug flow filter port <port/range>`
    - `# diagnose debug flow filter proto <protocol>`

Packet Capture
Debug Flow

NPU hardware acceleration must be disabled on the respective firewall policy to see all packets. To do so, set "auto-asic-offload" to "disable" in the CLI.

Number of packets

Filters

Filter type
☒ Basic
☐ Advanced

IP type
☒ IPv4
☐ IPv6

IP address

Port

Protocol

Start debug flow

Debug Flow

Trace the flow of a packet through the FortiGate's various systems. Used for advanced diagnostics and debugging.

- b. **Advanced:** filter by *Source IP*, *Source port*, *Destination IP*, *Destination port*, and *Protocol*, which is the equivalent of:

- # diagnose debug flow filter saddr <addr/range>
- # diagnose debug flow filter sport <port/range>
- # diagnose debug flow filter daddr <addr/range>
- # diagnose debug flow filter dport <port/range>
- # diagnose debug flow filter proto <protocol>

Packet Capture
Debug Flow

NPU hardware acceleration must be disabled on the respective firewall policy to see all packets. To do so, set "auto-asic-offload" to "disable" in the CLI.

Number of packets

Filters

Filter type
☐ Basic
☒ Advanced

IP type
☒ IPv4
☐ IPv6

Source IP

Source port

Destination IP

Destination port

Protocol

Start debug flow

Debug Flow

Trace the flow of a packet through the FortiGate's various systems. Used for advanced diagnostics and debugging.

3. Click **Start debug flow**. The debug messages are visible in real-time.

Packet Capture

Debug Flow

Capturing Packets

19

14:34:08 401 vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun\_id=0.0.0.0 from loc  
14:34:08 401 Find an existing session, id-0001ed8f, reply direction  
14:34:08 402 vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun\_id=0.0.0.0 from loc  
14:34:08 402 Find an existing session, id-0001ed8f, original direction  
14:34:08 403 vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:64488) tun\_id=0.0.0.0 fr  
14:34:08 403 Find an existing session, id-0001ed8c, reply direction  
14:34:08 404 vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun\_id=0.0.0.0 from loc  
14:34:08 404 Find an existing session, id-0001ed8f, original direction  
14:34:08 405 vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun\_id=0.0.0.0 from loc  
14:34:08 405 Find an existing session, id-0001ed8f, reply direction  
14:34:08 406 vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun\_id=0.0.0.0 from loc  
14:34:08 406 Find an existing session, id-0001ed8f, original direction  
14:34:08 407 vd-root:0 received a packet(proto=6, 192.168.1.69:64488->192.168.1.114:80) tun\_id=0.0.0.0 fr  
14:34:08 407 Find an existing session, id-0001ed8c, original direction  
14:34:10 408 vd-root:0 received a packet(proto=17, 127.0.0.1:24267->127.0.0.1:12121) tun\_id=0.0.0.0 from l  
14:34:10 408 Find an existing session, id-0000dca8, original direction  
14:34:10 409 vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:58153) tun\_id=0.0.0.0 fr  
14:34:10 409 Find an existing session, id-0001ea11, reply direction  
14:34:10 410 vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:58153) tun\_id=0.0.0.0 fr  
14:34:10 410 Find an existing session, id-0001ea11, reply direction  
14:34:10 411 vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:58153) tun\_id=0.0.0.0 fr  
14:34:10 411 Find an existing session, id-0001ea11, reply direction  
14:34:10 412 vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:58153) tun\_id=0.0.0.0 fr  
14:34:10 412 Find an existing session, id-0001ea11, reply direction  
14:34:10 413 vd-root:0 received a packet(proto=6, 192.168.1.69:58153->192.168.1.114:80) tun\_id=0.0.0.0 fr  
14:34:10 413 Find an existing session, id-0001ea11, original direction

Debug Flow

Trace the flow of a packet through the FortiGate's various systems. Used for advanced diagnostics and debugging.

Stop debug flow

- When the debug flow is finished (or you click *Stop debug flow*), click *Save as CSV*. The CSV file is automatically downloaded.

Packet Capture    **Debug Flow**

+ Search    Save as CSV    100

Time	Message
<b>Packet Trace #401</b>	
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun_id=0.0.0.0 from local. flag [I], seq 438318878, ack 2805173986, win 10
14:34:08	Find an existing session, id-0001ed8f, reply direction
<b>Packet Trace #402</b>	
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun_id=0.0.0.0 from local. flag [I], seq 2805173986, ack 438319658, win 3
14:34:08	Find an existing session, id-0001ed8f, original direction
<b>Packet Trace #403</b>	
14:34:08	vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:64488) tun_id=0.0.0.0 from local. flag [I], seq 4030540490, ack 4127893098, win 11
14:34:08	Find an existing session, id-0001ed8c, reply direction
<b>Packet Trace #404</b>	
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun_id=0.0.0.0 from local. flag [F], seq 2805173986, ack 438319658, win 3
14:34:08	Find an existing session, id-0001ed8f, original direction
<b>Packet Trace #405</b>	
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun_id=0.0.0.0 from local. flag [F], seq 438319658, ack 2805173987, win 10
14:34:08	Find an existing session, id-0001ed8f, reply direction

Return

**Debug Flow**  
Trace the flow of a packet through the FortiGate's various systems. Used for advanced diagnostics and debugging.

The current output can be filtered by *Time* and *Message*. The *Function* field can be added.

5. Hover over the table header and click the gear icon (*Configure Table*).
6. Select *Function* and click *Apply*. The *Function* column is displayed and can be used to filter the output for further analysis.

Packet Capture   **Debug Flow**

Search  Save as CSV 100

Debug Flow  
Trace the flow of a packet through the FortiGate's various systems.  
Used for advanced diagnostics and debugging.

Filter  
Contains   Exact Match   NOT  
value1, value2, etc.

Time	Message	Function
<b>Packet Trace #401</b>		
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun_id=0.0.0.0 from local flag [I], seq	print_pkt_detail
14:34:08	Find an existing session, id-0001ed8f, reply direction	resolve_ip_tuple_fast
<b>Packet Trace #402</b>		
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun_id=0.0.0.0 from local flag [I], seq	print_pkt_detail
14:34:08	Find an existing session, id-0001ed8f, original direction	resolve_ip_tuple_fast
<b>Packet Trace #403</b>		
14:34:08	vd-root:0 received a packet(proto=6, 192.168.1.114:80->192.168.1.69:64488) tun_id=0.0.0.0 from local flag [I], seq	print_pkt_detail
14:34:08	Find an existing session, id-0001ed8c, reply direction	resolve_ip_tuple_fast
<b>Packet Trace #404</b>		
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:22393->127.0.0.1:9980) tun_id=0.0.0.0 from local flag [F], seq	print_pkt_detail
14:34:08	Find an existing session, id-0001ed8f, original direction	resolve_ip_tuple_fast
<b>Packet Trace #405</b>		
14:34:08	vd-root:0 received a packet(proto=6, 127.0.0.1:9980->127.0.0.1:22393) tun_id=0.0.0.0 from local flag [F], seq	print_pkt_detail
14:34:08	Find an existing session, id-0001ed8f, reply direction	resolve_ip_tuple_fast

0% 264

Return

Filter list:

- print\_pkt\_detail 100
- resolve\_ip\_tuple\_fast 95
- \_iprope\_check\_one\_policy 16
- \_iprope\_check 13
- iprope\_dnat\_check 10
- iprope\_policy\_group\_check 10
- init\_ip\_session\_common 5
- iprope\_dnat\_tree\_check 5
- ip\_route\_input\_slow 3
- ip\_session\_handle\_no\_dst 3
- vf\_ip\_route\_input\_common 1
- iprope\_access\_proxy\_check 1
- iprope\_in\_check 1
- fw\_local\_in\_handler 1

Apply

# SD-WAN

The following topics provide information about SD-WAN:

- [SD-WAN overview on page 626](#)
- [SD-WAN quick start on page 630](#)
- [SD-WAN members and zones on page 640](#)
- [Performance SLA on page 651](#)
- [SD-WAN rules on page 686](#)
- [Advanced routing on page 750](#)
- [VPN overlay on page 780](#)
- [Advanced configuration on page 834](#)
- [SD-WAN cloud on-ramp on page 874](#)
- [Troubleshooting SD-WAN on page 896](#)

## SD-WAN overview

SD-WAN is a software-defined approach to managing Wide-Area Networks (WAN). It consolidates the physical transport connections, or underlays, and monitors and load-balances traffic across the links. VPN overlay networks can be built on top of the underlays to control traffic across different sites.

Health checks and SD-WAN rules define the expected performance and business priorities, allowing the FortiGate to automatically and intelligently route traffic based on the application, internet service, or health of a particular connection.

WAN security and intelligence can be extended into the LAN by incorporating wired and wireless networks under the same domain. FortiSwitch and FortiAP devices integrate seamlessly with the FortiGate to form the foundation of an SD-Branch.

Some of the key benefits of SD-WAN include:

- Reduced cost with transport independence across MPLS, 4G/5G LTE, and others.
- Reduced complexity with a single vendor and single-pane-of-glass management.
- Improve business application performance thanks to increased availability and agility.
- Optimized user experience and efficiency with SaaS and public cloud applications.






## SD-WAN components and design principles

SD-WAN can be broken down into three layers:

- Management and orchestration
- Control, data plane, and security
- Network access



The control, data plane, and security layer can only be deployed on a FortiGate. The other two layers can help to scale and enhance the solution. For large deployments, FortiManager and FortiAnalyzer provide the management and orchestration capabilities FortiSwitch and FortiAP provide the components to deploy an SD-Branch.

Layer	Functions	Devices	
Management and orchestration	<ul style="list-style-type: none"> <li>Unified management</li> <li>Template based solution</li> <li>Zero touch provisioning</li> <li>Logging, monitoring, and analysis</li> <li>Automated orchestration using the REST API</li> </ul>	FortiManager 	FortiAnalyzer 
Control, data plane, and security	<ul style="list-style-type: none"> <li>Consolidation of underlays and overlays into SD-WAN zones <ul style="list-style-type: none"> <li><a href="#">Underlay</a> and <a href="#">Overlay</a></li> </ul> </li> <li>Scalable VPN solutions using ADVPN <ul style="list-style-type: none"> <li><a href="#">Overlay</a></li> </ul> </li> <li>Static and dynamic routing definition <ul style="list-style-type: none"> <li><a href="#">Routing</a></li> </ul> </li> <li>NGFW firewalling <ul style="list-style-type: none"> <li><a href="#">Security</a></li> </ul> </li> <li>SD-WAN health-checks and monitoring <ul style="list-style-type: none"> <li><a href="#">SD-WAN</a></li> </ul> </li> <li>Application-aware steering and intelligence <ul style="list-style-type: none"> <li><a href="#">SD-WAN</a></li> </ul> </li> </ul>	FortiGate 	
Network access	<ul style="list-style-type: none"> <li>Wired and wireless network segmentation</li> <li>Built-in network access control</li> </ul>	FortiSwitch 	FortiAP 

## Design principles

The [Five-pillar approach](#), described in the SD-WAN / SD-Branch Architecture for MSSPs guide, is recommended when designing a secure SD-WAN solution.

### Underlay

Determine the WAN links that will be used for the underlay network, such as your broadband link, MPLS, 4G/5G LTE connection, and others.

For each link, determine the bandwidth, quality and reliability (packet loss, latency, and jitter), and cost. Use this information to determine which link to prefer, what type of traffic to send across the each link, and to help you the baselines for health-checks.

## Overlay

VPN overlays are needed when traffic must travel across multiple sites. These are usually site-to-site IPsec tunnels that interconnect branches, datacenters, and the cloud, forming a hub-and-spoke topology.

The management and maintenance of the tunnels should be considered when determining the overlay network requirements. Manual tunnel configuration might be sufficient in a small environment, but could become unmanageable as the environment size increases. ADVPN can be used to help scale the solution; see [ADVPN on page 1775](#) for more information.

## Routing

Traditional routing designs manipulate routes to steer traffic to different links. SD-WAN uses traditional routing to build the basic routing table to reach different destinations, but uses SD-WAN rules to steer traffic. This allows the steering to be based on criteria such as destination, internet service, application, route tag, and the health of the link. Routing in an SD-WAN solution is used to identify all possible routes across the underlays and overlays, which the FortiGate balances using ECMP.

In the most basic configuration, static gateways that are configured on an SD-WAN member interface automatically provide the basic routing needed for the FortiGate to balance traffic across the links. As the number of sites and destinations increases, manually maintaining routes to each destination becomes difficult. Using dynamic routing to advertise routes across overlay tunnels should be considered when you have many sites to interconnect.

## Security

Security involves defining policies for access control and applying the appropriate protection using the FortiGate's NGFW features. Efficiently grouping SD-WAN members into SD-WAN zones must also be considered. Typically, underlays provide direct internet access and overlays provide remote internet or network access. Grouping the underlays together into one zone, and the overlays into one or more zones could be an effective method.

## SD-WAN

The SD-WAN pillar is the intelligence that is applied to traffic steering decisions. It is comprised of four primary elements:

- **SD-WAN zones**

SD-WAN is divided into zones. SD-WAN member interfaces are assigned to zones, and zones are used in policies as source and destination interfaces. You can define multiple zones to group SD-WAN interfaces together, allowing logical groupings for overlay and underlay interfaces. Routing can be configured per zone.

See [SD-WAN members and zones on page 640](#).

- **SD-WAN members**

Also called interfaces, SD-WAN members are the ports and interfaces that are used to run traffic. At least one interface must be configured for SD-WAN to function.

See [Configuring the SD-WAN interface on page 631](#).

- **Performance SLAs**

Also called health-checks, performance SLAs are used to monitor member interface link quality, and to detect link failures. When the SLA falls below a configured threshold, the route can be removed, and traffic can be steered to different links in the SD-WAN rule.

SLA health-checks use active or passive probing:

- Active probing requires manually defining the server to be probed, and generates consistent probing traffic.
- Passive probing uses active sessions that are passing through firewall policies used by the related SD-WAN interfaces to derive health measurements. It reduces the amount of configuration, and eliminates probing traffic. See [Passive WAN health measurement on page 663](#) for details.

See [Performance SLA on page 651](#).

- **SD-WAN rules**

Also called services, SD-WAN rules control path selection. Specific traffic can be dynamically sent to the best link, or use a specific route.


Rules control the strategy that the FortiGate uses when selecting the outbound traffic interface, the SLAs that are monitored when selecting the outgoing interface, and the criteria for selecting the traffic that adheres to the rule. When no SD-WAN rules match the traffic, the implicit rule applies.

See [SD-WAN rules on page 686](#).


## SD-WAN designs and architectures

The core functionalities of Fortinet's SD-WAN solution are built into the FortiGate. Whether the environment contains one FortiGate, or one hundred, you can use SD-WAN by enabling it on the individual FortiGates.


At a basic level, SD-WAN can be deployed on a single device in a single site environment:

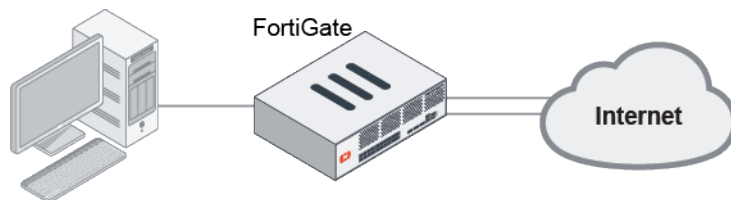

At a more advanced level, SD-WAN can be deployed in a multi-site, hub and spoke environment:

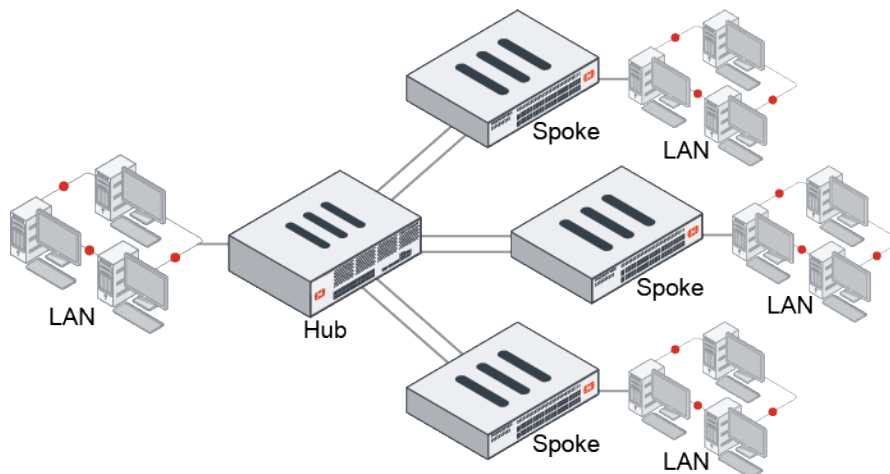

At an enterprise or MSSP level, the network can include multiple hubs, possibly across multiple regions:

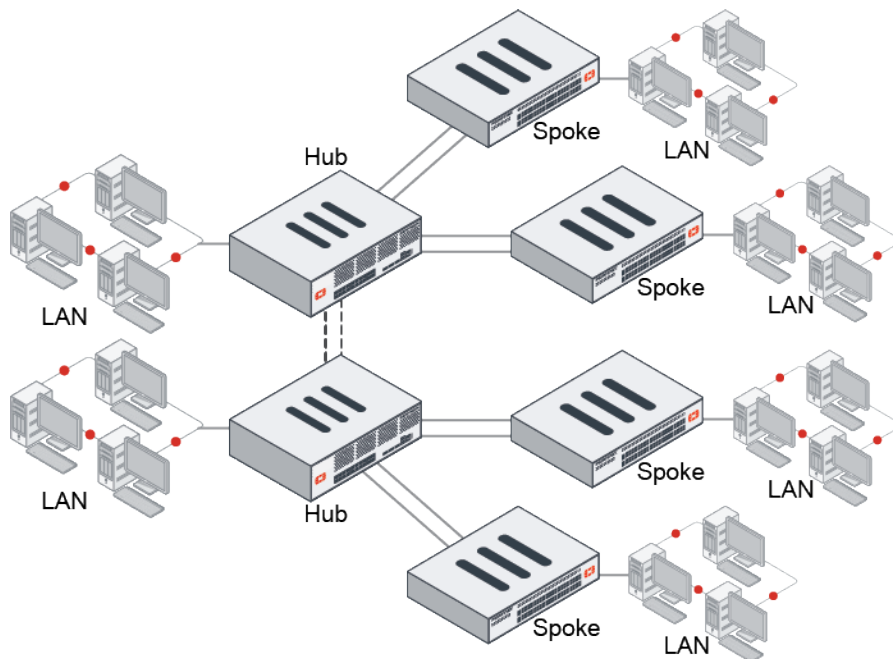


For more details, see the [SD-WAN / SD-Branch Architecture for MSSPs](#) guide.

## SD-WAN quick start

This section provides an example of how to start using SD-WAN for load balancing and redundancy.

In this example, two ISP internet connections, wan1 (DHCP) and wan2 (static), use SD-WAN to balance traffic between them at 50% each.

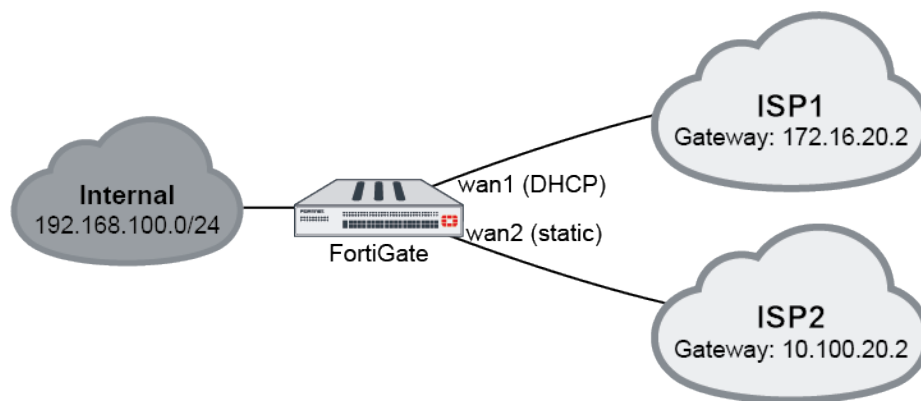

1. [Configuring the SD-WAN interface on page 631](#)
2. [Adding a static route on page 632](#)
3. [Selecting the implicit SD-WAN algorithm on page 632](#)
4. [Configuring firewall policies for SD-WAN on page 633](#)
5. [Link monitoring and failover on page 633](#)
6. [Results on page 635](#)
7. [Configuring SD-WAN in the CLI on page 638](#)

## Configuring the SD-WAN interface

First, SD-WAN must be enabled and member interfaces must be selected and added to a zone. The selected FortiGate interfaces can be of any type (physical, aggregate, VLAN, IPsec, and others), but must be removed from any other configurations on the FortiGate.

In this step, two interfaces are configured and added to the default SD-WAN zone (virtual-wan-link) as SD-WAN member interfaces. This example uses a mix of static and dynamic IP addresses; your deployment could also use only one or the other.

Once the SD-WAN members are created and added to a zone, the zone can be used in firewall policies, and the whole SD-WAN can be used in static routes.

### To configure SD-WAN members:

1. Configure the wan1 and wan2 interfaces. See [Interface settings on page 149](#) for details.
  - a. Set the wan1 interface *Addressing mode* to *DHCP* and *Distance* to *10*.



By default, a DHCP interface has a distance of 5, and a static route has a distance of 10. It is important to account for this when configuring your SD-WAN for 50/50 load balancing by setting the DHCP interface's distance to 10.

- b. Set the wan2 interface *IP/Netmask* to *10.100.20.1 255.255.255.0*.
2. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
3. Set the *Interface* to *wan1*.
4. Leave *SD-WAN Zone* as *virtual-wan-link*.
5. As wan1 uses DHCP, leave *Gateway* set to *0.0.0.0*.


If IPv6 visibility is enabled in the GUI, an IPv6 gateway can also be added for each member. See [Feature visibility on page 2515](#) for details.

6. Leave *Cost* as *0*.

The *Cost* field is used by the Lowest Cost (SLA) strategy. The link with the lowest cost is chosen to pass traffic. The lowest possible *Cost* is *0*.

7. Set *Status* to *Enable*, and click *OK*.

8. Repeat the above steps for wan2, setting *Gateway* to the ISP's gateway: *10.100.20.2*.

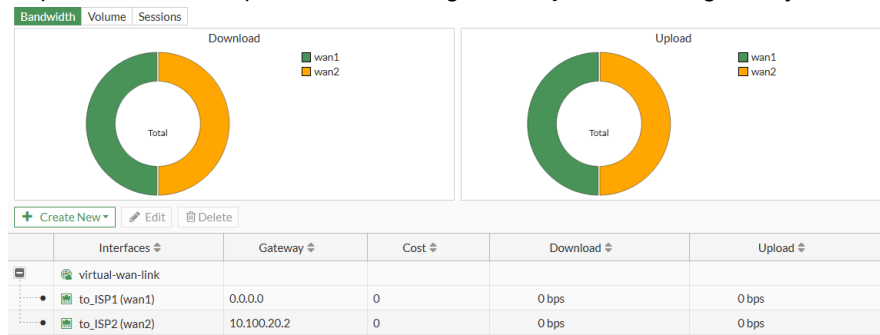

## Adding a static route

You must configure a default route for the SD-WAN. The default gateways for each SD-WAN member interface do not need to be defined in the static routes table. FortiGate will decide what route or routes are preferred using Equal Cost Multi-Path (ECMP) based on distance and priority.

### To create a static route for SD-WAN:

1. Go to *Network > Static Routes*.
2. Click *Create New*. The *New Static Route* page opens.
3. Set *Destination* to *Subnet*, and leave the IP address and subnet mask as *0.0.0.0/0.0.0.0*.
4. In the *Interface* field select an SD-WAN zone.

New Static Route

Automatic gateway retrieval ☐

Destination: **Subnet** | Internet Service

0.0.0.0/0.0.0.0

Interface: virtual-wan-link

Comments: Write a comment... 0/255

Status: **Enabled** | Disabled

Additional Information: API Preview, Documentation, Online Help, Video Tutorials

OK Cancel

5. Ensure that *Status* is *Enabled*.
6. Click *OK*.

## Selecting the implicit SD-WAN algorithm

SD-WAN rules define specific routing options to route traffic to an SD-WAN member.

If no routing rules are defined, the default *Implicit* rule is used. It can be configured to use one of five different load balancing algorithms. See [Implicit rule on page 694](#) for more details and examples.

This example shows four methods to equally balance traffic between the two WAN connections. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and edit the *sd-wan* rule to select the method that is appropriate for your requirements.

- **Source IP** (CLI command: `source-ip-based`):  
Select this option to balance traffic equally between the SD-WAN members according to a hash algorithm based on the source IP addresses.

- **Session** (*weight-based*):  
Select this option to balance traffic equally between the SD-WAN members by the session numbers ratio among its members. Use weight 50 for each of the 2 members.
- **Source-Destination IP** (*source-dest-ip-based*):  
Select this option to balance traffic equally between the SD-WAN members according to a hash algorithm based on the source and destination IP addresses.
- **Volume** (*measured-volume-based*):  
Select this option to balance traffic equally between the SD-WAN members according to the bandwidth ratio among its members.

## Configuring firewall policies for SD-WAN

SD-WAN zones can be used in policies as source and destination interfaces. Individual SD-WAN members cannot be used in policies.

You must configure a policy that allows traffic from your organization's internal network to the SD-WAN zone. Policies configured with the SD-WAN zone apply to all SD-WAN interface members in that zone.

### To create a firewall policy for SD-WAN:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*. The *New Policy* page opens.
3. Configure the following:


<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	<i>internal</i>
<b>Outgoing Interface</b>	<i>virtual-wan-link</i>
<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>all</i>
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>ALL</i>
<b>Action</b>	<i>ACCEPT</i>
<b>Firewall / Network Options</b>	Enable <i>NAT</i> and set <i>IP Pool Configuration</i> to <i>Use Outgoing Interface Address</i> .
<b>Security Profiles</b>	Apply profiles as required.
<b>Logging Options</b>	Enable <i>Log Allowed Traffic</i> and select <i>All Sessions</i> . This allows you to verify results later.

4. Enable the policy, then click *OK*.

## Link monitoring and failover

Performance SLA link monitoring measures the health of links that are connected to SD-WAN member interfaces by sending probing signals through each link to a server, and then measuring the link quality based on latency, jitter, and

packet loss. If a link is broken, the routes on that link are removed and traffic is routed through other links. When the link is working again, the routes are re-enabled. This prevents traffic being sent to a broken link and lost.

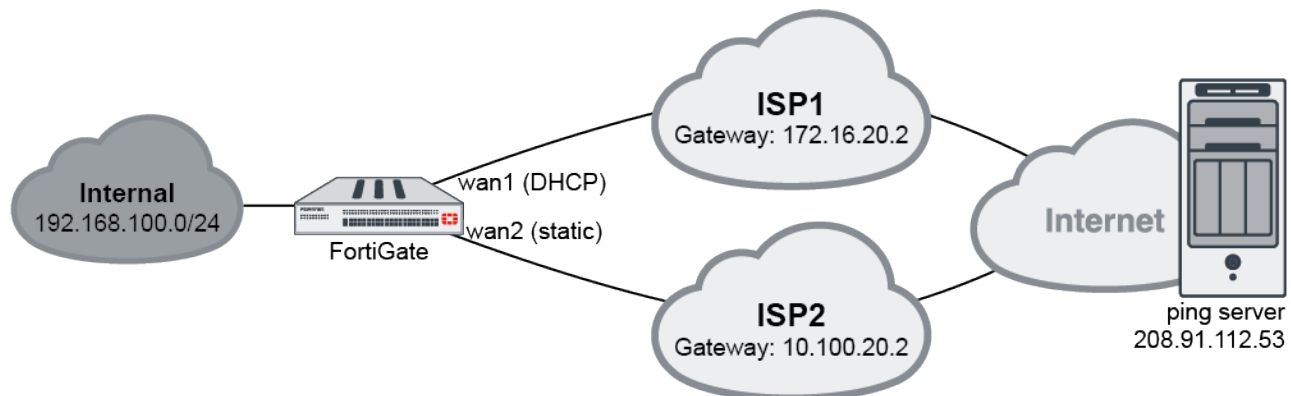

In this example, the detection server IP address is 208.91.112.53. A performance SLA is created so that, if ping fails per the metrics defined, the routes to that interface are removed and traffic is detoured to the other interface. The ping protocol is used, but other protocols could also be selected as required.

### To configure a performance SLA:

1. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
2. Enter a name for the SLA and set *Protocol* to *Ping*.
3. In the *Server* field, enter the detection server IP address (208.91.112.53 in this example).
4. In the *Participants* field, select *Specify* and add wan1 and wan2.

**New Performance SLA**

Name:

Detection Mode: ☒ Active ☐ Passive ☐ Prefer Passive

Protocol: ☒ Ping ☐ HTTP ☐ DNS

Server:

Participants:  

- ☒ to\_ISP1 (wan1)
- ☒ to\_ISP2 (wan2)

Enable probe packets: ☒

SLA Target: ☐

**Link Status**

Check interval:  ms

Failures before inactive:

Restore link after:  check(s)

**Actions when Inactive**

Update static route: ☒

**Additional Information**

Performance SLA Setup Guides

- 

Documentation

- 

SLA targets are not required for link monitoring.

5. Configure the required metrics in *Link Status*.
6. Ensure that *Update static route* is enabled. This disables static routes for the inactive interface and restores routes on recovery.
7. Click *OK*.



Results

The following GUI pages show the function of the SD-WAN and can be used to confirm that it is setup and running correctly:


- [Interface usage on page 635](#)
- [Performance SLA on page 636](#)
- [Routing table on page 637](#)
- [Firewall policy on page 638](#)

Interface usage

Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab to review the SD-WAN interfaces' usage.


Bandwidth

Select *Bandwidth* to view the amount of downloaded and uploaded data for each interface.

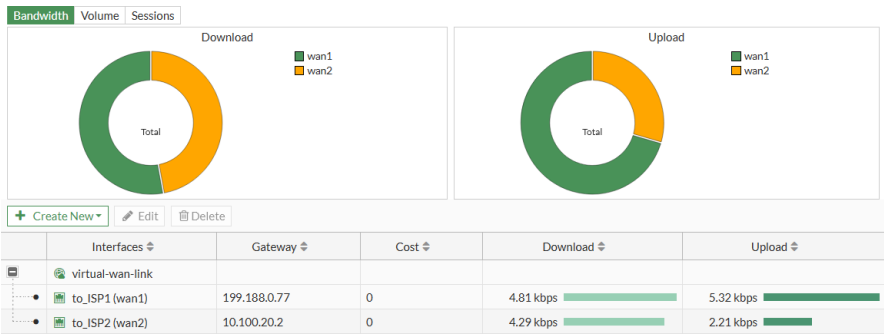


Volume

Select *Volume* to see donut charts of the received and sent bytes on the interfaces.

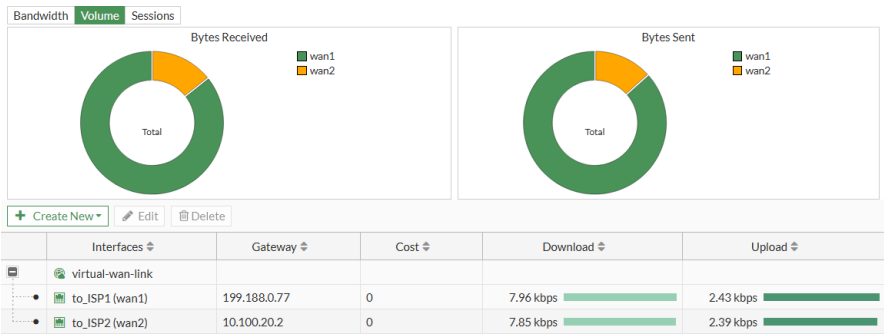

## Sessions

Select **Sessions** to see a donut chart of the number of active sessions on each interface.

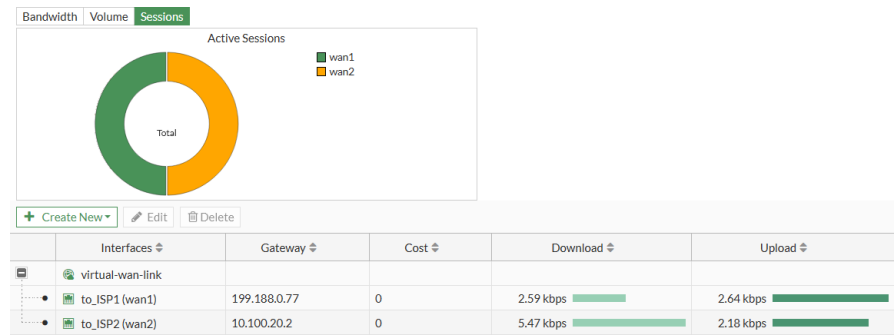


## Performance SLA

Go to **Network > SD-WAN**, select the **Performance SLAs** tab, and select the SLA from the table (*server* in this example) to view the packet loss, latency, and jitter on each SD-WAN member in the health check server.


## Packet loss

Select **Packet Loss** to see the percentage of packets lost for each member.

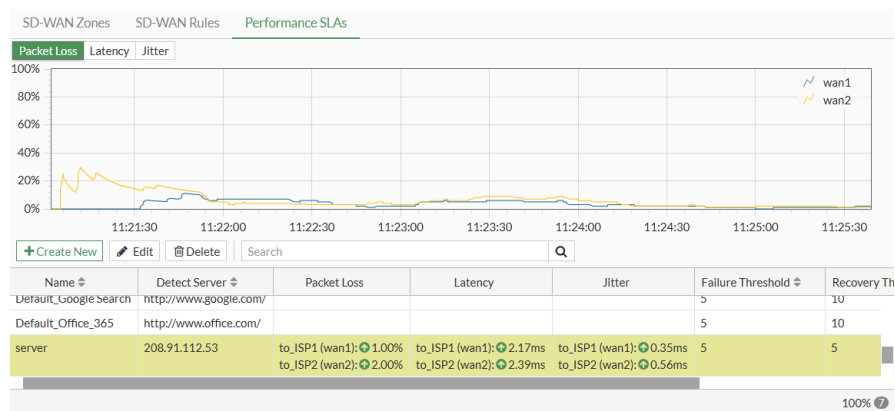


## Latency

Select *Latency* to see the current latency, in milliseconds, for each member.

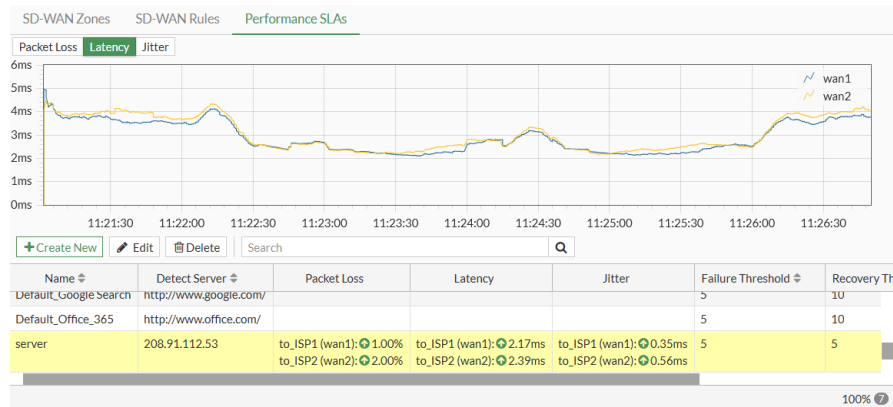


## Jitter

Select *Jitter* to see the jitter, in milliseconds, for each member.

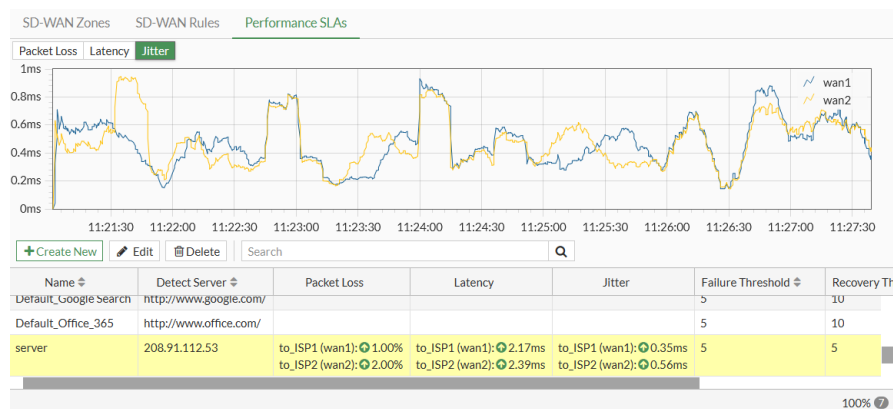

## Routing table

Go to *Dashboard > Network*, expand the *Routing* widget, and select *Static & Dynamic* to review all static and dynamic routes. For more information about the widget, see [Static & Dynamic Routing monitor on page 100](#).

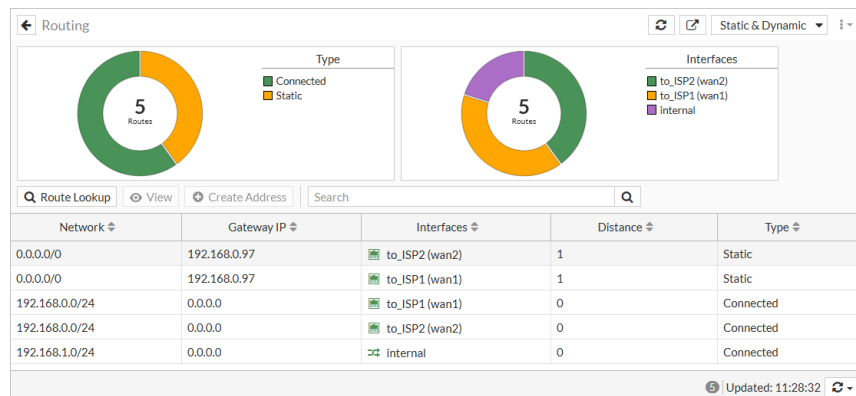

## Firewall policy

Go to **Policy & Objects > Firewall Policy** to review the SD-WAN policy.

<a href="#">+ Create New</a>		<a href="#">Edit</a>	<a href="#">Delete</a>	<a href="#">Policy Lookup</a>	Search		<a href="#">Interface Pair View</a>		By Sequence	
Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes	
<div>Internal → virtual-wan-link</div>										
sd-wan	all	all	always	ALL	ACCEPT	Enabled	no-inspection	All	59.19 MB	
<div>Implicit</div>										
Implicit Deny	all	all	always	ALL	DENY			Disabled	1.27 kB	
0 Security Rating Issues										Updated: 11:30:29

## Configuring SD-WAN in the CLI

This example can be entirely configured using the CLI.

### To configure SD-WAN in the CLI:

#### 1. Configure the wan1 and wan2 interfaces:

```
config system interface
  edit "wan1"
    set alias to_ISP1
    set mode dhcp
    set distance 10
  next
  edit "wan2"
    set alias to_ISP2
    set ip 10.100.20.1 255.255.255.0
  next
end
```

#### 2. Enable SD-WAN and add the interfaces as members:

```
config system sdwan
  set status enable
  config members
    edit 1
      set interface "wan1"
    next
    edit 2
      set interface "wan2"
      set gateway 10.100.20.2
    next
  end
end
```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

**3. Create a static route for SD-WAN:**

```
config router static
  edit 1
    set sdwan-zone "virtual-wan-link"
  next
end
```

**4. Select the implicit SD-WAN algorithm:**

```
config system sdwan
  set load-balance-mode {source-ip-based | weight-based | source-dest-ip-based |
measured-volume-based}
end
```

**5. Create a firewall policy for SD-WAN:**

```
config firewall policy
  edit <policy_id>
    set name <policy_name>
    set srcintf "internal"
    set dstintf "virtual-wan-link"
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
    set utm-status enable
    set ssl-ssh-profile <profile_name>
    set av-profile <profile_name>
    set webfilter-profile <profile_name>
    set dnsfilter-profile <profile_name>
    set emailfilter-profile <profile_name>
    set ips_sensor <sensor_name>
    set application-list <app_list>
    set voip-profile <profile_name>
    set logtraffic all
    set nat enable
    set status enable
  next
end
```

**6. Configure a performance SLA:**

```
config system sdwan
  config health-check
    edit "server"
      set server "208.91.112.53"
      set update-static-route enable
      set members 1 2
    next
  end
end
```

## Results

### To view the routing table:

```
# get router info routing-table all

Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [1/0] via 172.16.20.2, wan1
        [1/0] via 10.100.20.2, wan2
C       10.100.20.0/24 is directly connected, wan2
C       172.16.20.2/24 is directly connected, wan1
C       192.168.0.0/24 is directly connected, internal
```

### To diagnose the Performance SLA status:

```
FGT # diagnose sys sdwan health-check
Health Check(server):
Seq(1): state(alive), packet-loss(0.000%) latency(15.247), jitter(5.231) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(13.621), jitter(6.905) sla_map=0x0
```

## SD-WAN members and zones

SD-WAN bundles interfaces together into zones. Interfaces are first configured as SD-WAN members. This does not change the interface, it just allows SD-WAN to reference the interface as a member. SD-WAN member interfaces can be any interface supported by FortiGates, such as physical ports, VLAN interfaces, LAGs, IPsec tunnels, GRE tunnels, IPsec tunnels, and FortiExtender interfaces. Once SD-WAN members are configured, they can be assigned to a zone. Zones are used in policies as source and destination interfaces, in static routes, and in SD-WAN rules.

Multiple zones can be used to group SD-WAN interfaces for logical scenarios, such as overlay and underlay interfaces. Using multiple zones in policies allows for more granular control over functions like resource access and UTM access. Individual SD-WAN member interfaces cannot be used directly in policies, but they can be moved between SD-WAN zones at any time. If a member interface requires a special SD-WAN consideration, it can be put into an SD-WAN zone by itself.


SD-WAN zones and members can be used in IPv4 and IPv6 static routes to make route configurations more flexible. SD-WAN zones and members can be used in SD-WAN rules to simplify the rule configuration. See [Specify an SD-WAN zone in static routes and SD-WAN rules on page 646](#) for more information.

When the Security Fabric is configured, SD-WAN zones are included in the Security Fabric topology views.

## Topology

This topology is used in the following procedures:

- [Configuring SD-WAN member interfaces](#)
- [Configuring SD-WAN zones](#)
- [Using SD-WAN zones](#)

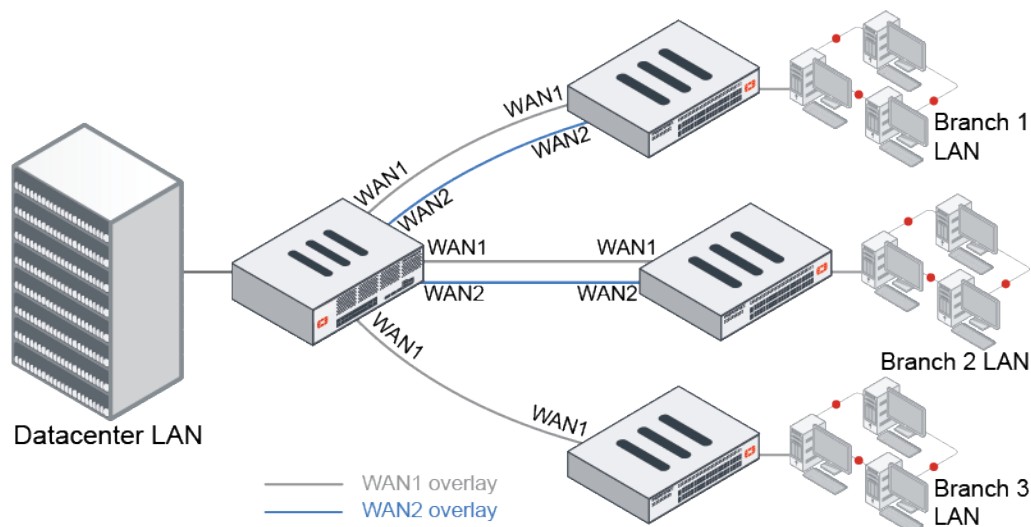

## Configuring SD-WAN member interfaces

When configuring SD-WAN zones and members, it does not matter what order they are defined. In this example, the members are defined first, and they will be placed temporarily in the default zone called virtual-wan-link. A zone must be defined when creating a member, and the overlay and underlay zones will be created in the next procedure. It is standard practice to create SD-WAN members for each underlay and overlay interface, as most SD-WAN implementations apply SD-WAN intelligence to both underlay and overlay networks.

The following options can be configured for SD-WAN members:

GUI option	CLI option	Description
<i>Interface</i>	<code>interface</code>	Select the interface to use as an SD-WAN member. Optionally, select <i>None</i> in the GUI to not use an interface yet.
<i>SD-WAN Zone</i>	<code>zone</code>	Select the destination zone if it exists at the time of member creation. Otherwise, the default virtual-wan-link zone is applied.  A new zone can be created within the GUI dropdown field.

GUI option	CLI option	Description
<b>Gateway/IPv6 Gateway</b>	gateway/gateway6	Enter the default gateway for the interface. For interfaces that already have a default gateway, such as those configured using DHCP, this field is pre-populated in the GUI.
<b>Cost</b>	cost	Enter the cost of the interface for services in SLA mode (0 - 4294967295, default = 0). A lower cost has a higher preference.
<b>Priority</b>	priority	Enter the priority of the interface for IPv4 (1 - 65535, default = 1). The priority is used in the static route created for the SD-WAN member interface and in SD-WAN rules (including the implicit rule). When priority is used to determine the best route, the lower value takes precedence.
<b>Status</b>	status	Enable or disable the interface in SD-WAN.
n/a	source/source6	Set the source IP address used in the health check packet to the server.

#### To configure the SD-WAN members and add them to the default zone in the GUI:

1. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
2. Set the *Interface* to *WAN1*.
3. Leave the *SD-WAN Zone* as *virtual-wan-link*.

4. Click **OK**.
5. Repeat these steps to create SD-WAN members for the WAN2, VPN1, and VPN2 interfaces.

#### To configure the SD-WAN members and add them to the default zone in the CLI:

```
config system sdwan
  config members
    edit 1
      set interface "WAN1"
      set zone "virtual-wan-link"
    next
    edit 2
      set interface "WAN2"
```



```

        set zone "virtual-wan-link"
    next
    edit 3
        set interface "VPN1"
        set zone "virtual-wan-link"
    next
    edit 4
        set interface "VPN2"
        set zone "virtual-wan-link"
    next
end
end

```

## Configuring SD-WAN zones

While SD-WAN zones are primarily used to logically group interfaces that are often used for the same purpose (such as WAN1 and WAN2), sometimes an SD-WAN zone can have a single member. This is due to the constraint that SD-WAN members may not be referenced directly in policies; however, SD-WAN members can be referenced directly in SD-WAN rules.

In this example, two zones named Overlay and Underlay are configured, and the member interfaces are added to their respective zones.

### To configure the SD-WAN zones in the GUI:

1. Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab.
2. Click *Create New > SD-WAN Zone*.
3. Enter the *Name*, *Underlay*.
4. Set the *Interface members* to *WAN1* and *WAN2*.

5. Click *OK*.
6. Repeat these steps to configure the *Overlay* zone with members *VPN1* and *VPN2*.

### To configure the SD-WAN zones in the CLI:

1. Configure the SD-WAN zones:

```

config system sdwan
    config zone
        edit "Overlay"
        next
    end
end

```

```

        edit "Underlay"
        next
    end
end

```

## 2. Add the member interfaces to their respective zones:

```

config system sdwan
    config members
        edit 1
            set interface WAN1
            set zone "Underlay"
        next
        edit 2
            set interface WAN2
            set zone "Underlay"
        next
        edit 3
            set interface VPN1
            set zone "Overlay"
        next
        edit 4
            set interface VPN2
            set zone "Overlay"
        next
    end
end

```



In the `config zone` settings, there is a `service-sla-tie-break` parameter that includes three options for the tie-break method used when multiple interfaces in a zone are eligible for traffic:

- `cfg-order`: members that meet the SLA are selected in the order they are configured (default).
- `fib-best-match`: members that meet the SLA are selected that match the longest prefix in the routing table.
- `input-device`: members that meet the SLA are selected by matching the input device.

See [Overlay stickiness on page 852](#) for more information.

## Using SD-WAN zones

Once SD-WAN zones are defined, they can be used in firewall policies. This section covers three policy scenarios:

- [Datacenter resource access](#)
- [Direct internet access](#)
- [Remote internet access](#)



SD-WAN zones are a critical component of SD-WAN rules. See [Fields for configuring WAN intelligence on page 690](#) for more information.

## Datacenter resource access

Datacenter resources are made available through the VPN branches or overlay. In this example, there are two SD-WAN members in the overlay zone that the branch FortiGate can use to route traffic to and from the datacenter resource. The overlay zone is used as the destination in the firewall policy.

### To configure the firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	<i>DC_Access</i>
<b>Incoming Interface</b>	<i>LAN</i>
<b>Outgoing Interface</b>	<i>Overlay</i>
<b>Source</b>	<i>Branch_LAN</i>
<b>Destination</b>	<i>DC_LAN</i>
<b>Action</b>	<i>ACCEPT</i>

3. Configure the other settings as needed.
4. Click *OK*.



This firewall policy allows traffic to any interfaces included in the zone. The SD-WAN rules contain the intelligence used to select which members in the zone to use.

---

## Direct internet access

Direct internet access (DIA) is how a branch may access resources contained on the public internet. This can be non-business resources (such as video streaming sites), or publically available business resources (such as vendor portals).

### To configure the firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	<i>DIA</i>
<b>Incoming Interface</b>	<i>LAN</i>
<b>Outgoing Interface</b>	<i>Underlay</i>
<b>Source</b>	<i>Branch_LAN</i>
<b>Destination</b>	<i>all</i>
<b>Action</b>	<i>ACCEPT</i>

3. Configure the other settings as needed.
4. Click *OK*.

## Remote internet access

Remote internet access (RIA) is the ability for a branch location to route public internet access requests across the overlay and out one of the hub's (or datacenter's) WAN interfaces. This option is effective when a branch has a WAN circuit with a local ISP and a second circuit that is private, such as MPLS. When the WAN circuit goes down, it is possible to send traffic through the hub using the MPLS overlay.

### To configure the firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	<i>RIA</i>
<b>Incoming Interface</b>	<i>LAN</i>
<b>Outgoing Interface</b>	<i>Overlay</i>
<b>Source</b>	<i>Branch_LAN</i>
<b>Destination</b>	<i>all</i>
<b>Action</b>	<i>ACCEPT</i>

3. Configure the other settings as needed.
4. Click *OK*.

## Specify an SD-WAN zone in static routes and SD-WAN rules

SD-WAN zones can be used in IPv4 and IPv6 static routes, and in SD-WAN service rules. This makes route configuration more flexible, and simplifies SD-WAN rule configuration.

### To configure an SD-WAN zone in a static route in the GUI:

1. Go to *Network > Static Routes*
2. Edit an existing static route, or click *Create New* to create a new route.
3. Set *Interface* to one or more SD-WAN zones.

4. Configure the remaining settings are required.
5. Click **OK**.

#### To configure an SD-WAN zone in a static route in the CLI:

```
config router {static | static6}
  edit 1
    set sdwan-zone <zone> <zone> ...
  next
end
```

#### To configure an SD-WAN zone in an SD-WAN rule in the GUI:

1. Go to **Network > SD-WAN** and select the **SD-WAN Rules** tab
2. Edit an existing rule, or click **Create New** to create a new rule.
3. In the **Zone preference** field add one or more SD-WAN zones.


4. Configure the remaining settings are needed.
5. Click **OK**.

#### To configure an SD-WAN zone in an SD-WAN rule in the CLI:

```
config system sdwan
  config service
    edit 1
      set priority-zone <zone>
    next
  end
end
```

## Examples

In these two examples, three SD-WAN members are created. Two members, port13 and port15, are in the default zone (*virtual-wan-link*), and the third member, to\_FG\_B\_root, is in the *SASE* zone.

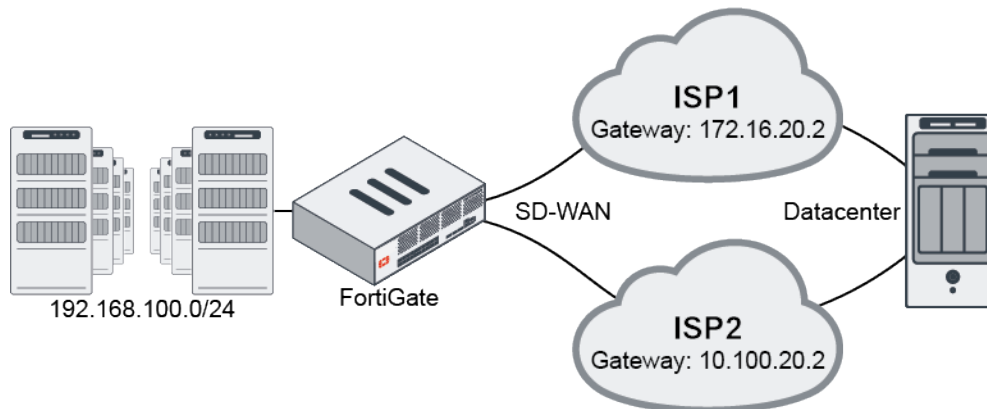

### Example 1

In this example:

- Two service rules are created. Rule 1 uses the *virtual-wan-link* zone, and rule 2 uses the *SASE* zone.
- Two IPv4 static routes are created. The first route uses the *virtual-wan-link* zone, and the second route uses the *SASE* zone.

#### To configure the SD-WAN:

1. Assign port13 and port15 to the *virtual-wan-link* zone and to\_FG\_B\_root to the *SASE* zone:

```

config system sdwan
  set status enable
  config members
    edit 1
      set interface "port13"
      set zone "virtual-wan-link"
      set gateway 10.100.1.1
    next
    edit 2
      set interface "port15"
      set zone "virtual-wan-link"
      set gateway 10.100.1.5
    next
    edit 3
      set interface "to_FG_B_root"
      set zone "SASE"
    next
  end
end

```

2. Create two service rules, one for each SD-WAN zone:

```

config system sdwan
  config service

```

```

edit 1
    set dst "10.100.20.0"
    set priority-zone "virtual-wan-link"
next
edit 2
    set internet-service enable
    set internet-service-name "Fortinet-FortiGuard"
    set priority-zone "SASE"
next
end
end

```

### 3. Configure static routes for each of the SD-WAN zones:

```

config router static
    edit 1
        set distance 1
        set sdwan-zone "virtual-wan-link"
    next
    edit 2
        set dst 172.16.109.0 255.255.255.0
        set distance 1
        set sdwan-zone "SASE"
    next
end

```

### To verify the results:

#### 1. Check the service rule 1 diagnostics:

```

# diagnose sys sdwan service 1

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members(2):
    1: Seq_num(1 port13), alive, selected
    2: Seq_num(2 port15), alive, selected
Dst address(1):
    10.100.20.0-10.100.20.255

```

Both members of the *virtual-wan-link* zone are selected. In manual mode, the interface members are selected based on the member configuration order. In SLA and priority mode, the order depends on the link status. If all of the link statuses pass, then the members are selected based on the member configuration order.

#### 2. Check the service rule 2 diagnostics:

```

# diagnose sys sdwan service 2

Service(2): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members(1):
    1: Seq_num(3 to_FG_B_root), alive, selected
Internet Service(1): Fortinet-FortiGuard(1245324,0,0,0)

```

The member of the *SASE* zone is selected.

#### 3. Review the routing table:

```
# get router info routing-table static
Routing table for VRF=0
S*      0.0.0.0/0 [1/0] via 10.100.1.1, port13
          [1/0] via 10.100.1.5, port15
S      172.16.109.0/24 [1/0] via 172.16.206.2, to_FG_B_root
```

The default gateway has the members from the *virtual-wan-link* zone, and the route to 172.16.10.9.0/24 has the single member from the *SASE* zone.

## Example 2

In this example, two IPv6 static routes are created. The first route uses the *virtual-wan-link* zone, and the second route uses the *SASE* zone.

### To configure the SD-WAN:

1. Configure port13 and port15 with IPv6 addresses and assign them to the *virtual-wan-link* zone, and assign to\_FG\_B\_root to the *SASE* zone:

```
config system sdwan
  set status enable
  config members
    edit 1
      set interface "port13"
      set zone "virtual-wan-link"
      set gateway6 2004:10:100:1::1
      set source6 2004:10:100:1::2
    next
    edit 2
      set interface "port15"
      set zone "virtual-wan-link"
      set gateway6 2004:10:100:1::5
      set source6 2004:10:100:1::6
    next
    edit 3
      set interface "to_FG_B_root"
      set zone "SASE"
    next
  end
end
```

2. Configure IPv6 static routes for each of the SD-WAN zones:

```
config router static6
  edit 1
    set distance 1
    set sdwan-zone "virtual-wan-link"
  next
  edit 2
    set dst 2003:172:16:109::/64
    set distance 1
    set sdwan-zone "SASE"
  next
end
```



**To verify the results:****1. Review the routing table:**

```
# get router info6 routing-table static
Routing table for VRF=0
S*      ::/0 [1/0] via 2004:10:100:1::1, port13, 00:20:51, [1024/0]
          [1/0] via 2004:10:100:1::5, port15, 00:20:51, [1024/0]
S       2003:172:16:109::/64 [1/0] via ::ac10:ce02, to_FG_B_root, 00:20:51, [1024/0]
S       2003:172:16:209::/64 [5/0] via ::ac10:ce02, to_FG_B_root, 14:40:14, [1024/0]
```

The IPv6 default route includes the members from the *virtual-wan-link* zone, and the route to 2003:172:16:109::/64 has the single member from the *SASE* zone.

## Performance SLA

Performance SLAs are used to measure the health of links that are connected to SD-WAN member interfaces by either sending probing signals through each link to a server, or using session information that is captured by firewall policies (see [Passive WAN health measurement on page 663](#) for information), and measuring the link quality based on latency, jitter, and packet loss. If a link fails all of the health checks, the routes on that link are removed from the SD-WAN link load balancing group, and traffic is routed through other links. When the link passes SLA, the routes are reestablished. This prevents traffic from being sent to a broken link and getting lost.

The following topics provide instructions on configuring performance SLA:

- [Performance SLA overview on page 651](#)
- [Link health monitor on page 656](#)
- [Monitoring performance SLA on page 658](#)
- [Passive WAN health measurement on page 663](#)
- [Passive health-check measurement by internet service and application on page 668](#)
- [Mean opinion score calculation and logging in performance SLA health checks on page 672](#)
- [Embedded SD-WAN SLA information in ICMP probes on page 675](#)
- [SD-WAN application monitor using FortiMonitor on page 683](#)

## Performance SLA overview

Performance SLAs consist of three parts:

- [Health checks](#)
- [SLA targets](#)
- [Link status](#)

### Health checks

A health check is defined by a [probe mode](#), [protocol](#), and [server](#). These three options specify what resource is being evaluated and how the evaluation is done. Each health check should be configured specifically for that resource, so the probe mode, protocol and server should be tailored for the particular service. For example, the health check for a VoIP service will differ than one for a database replication service.

Performance SLA participants are the interfaces that will be evaluated for a given health check. They must be SD-WAN member interfaces, but do not have to belong to the same zone. When selecting participants, only select participants that you expect the service communications to use. For example, a health check for a corporate resource might only use the overlay to access the service. Therefore, you would only add the VPN interfaces as participants.

There are six predefined performance SLA profiles for newly created VDOMs or factory reset FortiGate devices: AWS, DNS, FortiGuard, Gmail, Google Search, and Office 365. These performance SLA profiles provide Fortinet recommended settings for common services. To complete the performance SLA configuration, add the participants for the service. You can adjust the default settings to suit your needs.

## Probe mode

The probe mode can be set to active, passive, or prefer passive.

In active mode, the FortiGate sends a packet of the type specified by the protocol setting towards the defined server. This allows you to evaluate the path to the destination server using the protocol that matches the service provided by the server. Active probing does add some overhead in the form of health check probes (and additional configurations to define the probe type and server), but it has the benefit of constantly measuring the performance of the path to the server. This can be beneficial when reviewing historical data.

In passive mode, session information captured by firewall policies is used to determine latency, jitter, and packet loss. This has the added benefit of not generating additional traffic, and does not require the performance SLA to define a specific server for measurement. Instead, the SD-WAN rule must define the traffic to evaluate, and the firewall policy permitting the traffic must have a setting enabled. See [Passive WAN health measurement on page 663](#) and [Passive health-check measurement by internet service and application on page 668](#) for more information.

Prefer passive mode is a combination of active and passive modes. Health is measured using traffic when there is traffic, and using probes when there is no traffic. A protocol and server must be configured.

## Protocol

Health checks support a variety of protocols and protocol specific options. The most commonly used protocols (ping, HTTP, and DNS) can be configured in the GUI when creating a new performance SLA on the *Network > SD-WAN > Performance SLAs* page. The following protocols and options can be configured in the CLI using the `set protocol <option>` parameter:

ping	Use PING to test the link with the server.
tcp-echo	Use TCP echo to test the link with the server.
udp-echo	Use UDP echo to test the link with the server.
http	Use HTTP-GET to test the link with the server.
twamp	Use TWAMP to test the link with the server.
dns	Use DNS query to test the link with the server. The FortiGate sends a DNS query for an A Record and the response matches the expected IP address.
tcp-connect	Use a full TCP connection to test the link with the server. The method to measure the quality of the TCP connection can be: <ul style="list-style-type: none"> <li>• <code>half-open</code>: FortiGate sends SYN and gets SYN-ACK. The latency is based on the round trip between SYN and SYN-ACK (default).</li> </ul>

- **half-close:** FortiGate sends FIN and gets FIN-ACK. The latency is based on the round trip between FIN and FIN-ACK.

ftp

Use FTP to test the link with the server.

The FTP mode can be:

- **passive:** The FTP health-check initiates and establishes the data connection (default).
- **port:** The FTP server initiates and establishes the data connection.



SD-WAN health checks can generate traffic that becomes quite high as deployments grow. Take this into consideration when setting DoS policy thresholds. For details on setting DoS policy thresholds, refer to [DoS policy on page 1069](#).

### To use UDP-echo and TCP-echo as health checks:

```
config system sdwan
  set status enable
  config health-check
    edit "h4_udp1"
      set protocol udp-echo
      set port 7
      set server <server>
    next
    edit "h4_tcp1"
      set protocol tcp-echo
      set port 7
      set server <server>
    next
    edit "h6_udp1"
      set addr-mode ipv6
      set server "2032::12"
      set protocol udp-echo
      set port 7
    next
  end
end
```

### To use DNS as a health check, and define the IP address that the response must match:

```
config system sdwan
  set status enable
  config health-check
    edit "h4_dns1"
      set protocol dns
      set dns-request-domain "ip41.forti2.com"
      set dns-match-ip 1.1.1.1
    next
    edit "h6_dns1"
      set addr-mode ipv6
      set server "2000::15.1.1.4"
      set protocol dns
      set port 53
      set dns-request-domain "ip61.xxx.com"
    next
  end
end
```

```
end
end
```

**To use TCP Open (SYN/SYN-ACK) and TCP Close (FIN/FIN-ACK) to verify connections:**

```
config system sdwan
    set status enable
    config health-check
        edit "h4_tcpconnect1"
            set protocol tcp-connect
            set port 443
            set quality-measured-method {half-open | half-close}
            set server <server>
        next
        edit "h6_tcpconnect1"
            set addr-mode ipv6
            set server "2032::13"
            set protocol tcp-connect
            set port 444
            set quality-measured-method {half-open | half-close}
        next
    end
end
```

**To use active or passive mode FTP to verify connections:**

```
config system sdwan
    set status enable
    config health-check
        edit "h4_ftp1"
            set protocol ftp
            set port 21
            set user "root"
            set password *****
            set ftp-mode {passive | port}
            set ftp-file "1.txt"
            set server <server>
        next
        edit "h6_ftp1"
            set addr-mode ipv6
            set server "2032::11"
            set protocol ftp
            set port 21
            set user "root"
            set password *****
            set ftp-mode {passive | port}
            set ftp-file "2.txt"
        next
    end
end
```

Health check probe packets support DSCP markers for accurate link performance evaluation for high priority applications. This allows the probe packet to match the real traffic it is providing measurements for, including how that traffic is shaped by upstream devices based on the DSCP markers.

**To mark health check packets with DSCP:**

```

config system sdwan
    config health-check
        edit <name>
            set diffservcode <6-bits_binary, 000000-111111>
            set protocol <option>
        next
    end
end

```

**Server**

An IP address or FQDN can be defined as the server that the probe packets will be sent to. Up to two servers can be defined this way. When two servers are provided, both must fail in order for the health check to fail. This is to avoid a scenario where one remote server is down and causes a false positive that the link is down. The FortiGate can still use the interface associated with this health check to reach the remaining healthy server.

The purpose of the server is not simply to measure the health of the link, but rather the health of the path to a resource. It is highly recommended to use an IP address or FQDN that reflects the resource so the traffic path is considered.



A server can only be used in one performance SLA at any given time.

---

**SLA targets**

SLA targets are a set of constraints that are used in SD-WAN rules to control the paths that traffic takes. The constraints are:

- Latency threshold: latency for SLA to make a decision, in milliseconds (0 - 10000000, default = 5).
- Jitter threshold: jitter for SLA to make a decision, in milliseconds (0 - 10000000, default = 5).
- Packet loss threshold: packet loss for SLA to make a decision, in percentage (0 - 100, default = 0).

These settings should be specific to the service whose performance is being considered. You should attempt to configure the constraints to be just under the maximum values for the application or service to function well. For example, if your application requires less than 100 ms latency, then you should configure the SLA target to be 90 ms. Misconfiguring these settings will cause the performance SLA to lose value. If the values are too tight, then you may have traffic flipping between links before necessary. If the values are too loose, then performance may be impacted and the FortiGate will do nothing about it.

In the GUI, one SLA target can be configured, but additional targets can be configured in the CLI. Once a second target is configured in the CLI, additional targets can be configured from the GUI. Multiple SLA targets can be configured where a server provides multiple services that have different values for acceptable performance. For example, Google provides a DNS service and entertainment services (YouTube), so it is necessary to configure multiple SLA targets in this case since you can only configure a server in one performance SLA.

**Link status**

The *Link Status* section of the performance SLA configuration consists of three settings that determine the frequency that the link is evaluated, and the requirements to be considered valid or invalid:

- *Check interval*: the interval in which the FortiGate checks the interface, in milliseconds (500 - 3600000, default = 500).
- *Failures before inactive*: the number of failed status checks before the interface shows as inactive (1 - 3600, default = 5). This setting helps prevent flapping, where the system continuously transfers traffic back and forth between links.
- *Restore link after*: the number of successful status checks before the interface shows as active (1 - 3600, default = 5). This setting also helps prevent flapping.

When a participant becomes inactive, the performance SLA causes the FortiGate to withdraw all static routes associated with that interface. If there are multiple static routes using the same interface, they will all be withdrawn when the link monitor is failing.

## Link health monitor

Performance SLA link health monitoring measures the health of links that are connected to SD-WAN member interfaces by either sending probing signals through each link to a server, or using session information that is captured on firewall policies (see [Passive WAN health measurement on page 663](#) for information), and measuring the link quality based on latency, jitter, and packet loss. If a link fails all of the health checks, the routes on that link are removed from the SD-WAN link load balancing group, and traffic is routed through other links. When the link is working again the routes are reestablished. This prevents traffic being sent to a broken link and lost.

When an SD-WAN member has multiple health checks configured, all of the checks must fail for the routes on that link to be removed from the SD-WAN link load balancing group.

Two health check servers can be configured to ensure that, if there is a connectivity issue, the interface is at fault and not the server. A server can only be used in one health check.

The FortiGate uses the first server configured in the health check server list to perform the health check. If the first server is unavailable, then the second server is used. The second server continues to be used until it becomes unavailable, and then the FortiGate returns to the first server, if it is available. If both servers are unavailable, then the health check fails.

You can configure the protocol that is used for status checks, including: Ping, HTTP, DNS, TCP echo, UDP echo, two-way active measurement protocol (TWAMP), TCP connect, and FTP. In the GUI, only Ping, HTTP, and DNS are available.

You can view link quality measurements by going to *Network > SD-WAN* and selecting the *Performance SLAs* tab. The table shows the default health checks, the health checks that you configured, and information about each health check. The values shown in the *Packet Loss*, *Latency*, and *Jitter* columns are for the health check server that the FortiGate is currently using. The green up arrows indicate that the server is responding, and does not indicate if the health checks are being met. See [Results on page 635](#) for more information.

### To configure a link health monitor in the GUI:

1. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
2. Set a *Name* for the SLA.
3. Set the *Protocol* that you need to use for status checks: *Ping*, *HTTP*, or *DNS*.
4. Set *Server* to the IP addresses of up to two servers that all of the SD-WAN members in the performance SLA can reach.
5. Set *Participants* to *All SD-WAN Members*, or select *Specify* to choose specific SD-WAN members.
6. Set *Enable probe packets* to enable or disable sending probe packets.

## 7. Configure SLA Target:

If the health check is used in an SD-WAN rule that uses *Manual* or *Best Quality* strategies, enabling *SLA Target* is optional. If the health check is used in an SD-WAN rule that uses *Lowest Cost (SLA)* or *Maximum Bandwidth (SLA)* strategies, then *SLA Target* is enabled.

When *SLA Target* is enabled, configure the following:

- *Latency threshold*: Calculated based on last 30 probes (default = 5ms).
- *Jitter threshold*: Calculated based on last 30 probes (default = 5ms).
- *Packet Loss threshold*: Calculated based on last 100 probes (default = 0%).

## 8. In the *Link Status* section configure the following:

- *Check interval*: The interval in which the FortiGate checks the interface, in milliseconds (500 - 3600000, default = 500).
- *Failures before inactive*: The number of failed status checks before the interface shows as inactive (1 - 3600, default = 5). This setting helps prevent flapping, where the system continuously transfers traffic back and forth between links
- *Restore link after*: The number of successful status checks before the interface shows as active (1 - 3600, default = 5). This setting helps prevent flapping, where the system continuously transfers traffic back and forth between links

## 9. In the *Actions when Inactive* section, enable *Update static route* to disable static routes for inactive interfaces and restore routes when interfaces recover.

## 10. Click OK.

## To configure a link health monitor in the CLI:

```
config system sdwan
  config health-check
    edit "PingSLA"
      set addr-mode {ipv4 | ipv6}
      set server <server1_IP_address> <server2_IP_address>
      set detect-mode {active | passive | prefer-passive}
      set protocol {ping | tcp-echo | udp-echo | http | twamp | dns | tcp-connect |
ftp}
      set ha-priority <integer>
      set probe-timeout <integer>
      set probe-count <integer>
```

```

    set probe-packets {enable | disable}
    set interval <integer>
    set failtime <integer>
    set recoverytime <integer>
    set diffservcode <binary>
    set update-static-route {enable | disable}
    set update-cascade-interface {enable | disable}
    set sla-fail-log-period <integer>
    set sla-pass-log-period <integer>
    set threshold-warning-packetloss <integer>
    set threshold-alert-packetloss <integer>
    set threshold-warning-latency <integer>
    set threshold-alert-latency <integer>
    set threshold-warning-jitter <integer>
    set threshold-alert-jitter <integer>
    set members <member_number> ... <member_number>
    config sla
        edit 1
            set link-cost-factor {latency jitter packet-loss}
            set latency-threshold <integer>
            set jitter-threshold <integer>
            set packetloss-threshold <integer>
        next
    end
next
end
end

```

Additional settings are available for some of the protocols:

Protocol	Additional options
http	port <port_number> http-get <url> http-match <response_string>
twamp	port <port_number> security mode {none   authentication} password <password> packet-size <size>
ftp	ftp {passive   port} ftp-file <path>

For more examples see [Protocol](#).

## Monitoring performance SLA


SD-WAN diagnostics can be used to help maintain your SD-WAN solution.



## Monitoring SD-WAN link quality status

Link quality plays a significant role in link selection for SD-WAN. Investigate any prolonged issues with packet loss, latency, or jitter to ensure that your network does not experience degraded performance or an outage.

You can monitor the link quality status of SD-WAN interface members by going to *Network > SD-WAN* and selecting the *Performance SLAs* tab.

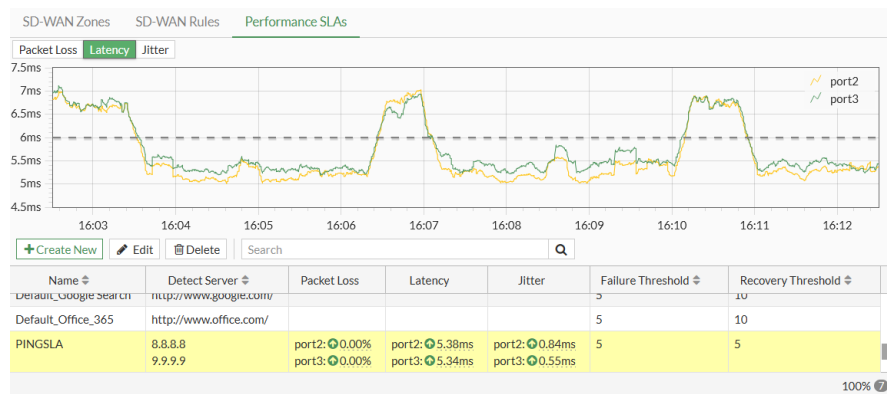

The live charts show the packet loss, latency, or jitter for the selected health check. Hover the cursor over a line in the chart to see the specific value for that interface at that specific time.

The table shows information about each health check, including the configured servers, link quality data, and thresholds. The colored arrow indicates the status of the interface when the last status check was performed: green means that the interface was active, and red means that the interface was inactive. Hover the cursor over the arrow for additional information.

## Monitoring system event logs

The features adds an SD-WAN daemon function to keep a short, 10 minute history of SLA that can be viewed in the CLI.

Performance SLA results related to interface selection, session failover, and other information, can be logged. These logs can then be used for long-term monitoring of traffic issues at remote sites, and for reports and views in FortiAnalyzer.

The time intervals that Performance SLA fail and pass logs are generated in can be configured.

### To configure the fail and pass logs' generation time interval:

```
config system sdwan
    config health-check
        edit "PingSLA"
            set sla-fail-log-period 30
            set sla-pass-log-period 60
        next
    end
end
```

**To view the 10 minute Performance SLA link status history:**

```
FGDocs # diagnose sys sdwan sla-log PingSLA 1
Timestamp: Fri Sep  4 10:32:37 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 4.455, jitter: 0.430, packet loss: 0.000%.
Timestamp: Fri Sep  4 10:32:37 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 4.461, jitter: 0.436, packet loss: 0.000%.
Timestamp: Fri Sep  4 10:32:38 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 4.488, jitter: 0.415, packet loss: 0.000%.
...
Timestamp: Fri Sep  4 10:42:36 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 6.280, jitter: 0.302, packet loss: 0.000%.
Timestamp: Fri Sep  4 10:42:37 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 6.261, jitter: 0.257, packet loss: 0.000%.
Timestamp: Fri Sep  4 10:42:37 2020, vdom root, health-check PingSLA, interface: wan2,
status: up, latency: 6.229, jitter: 0.245, packet loss: 0.000%.
```

**SLA pass logs**

The FortiGate generates Performance SLA logs at the specified pass log interval (sla-pass-log-period) when SLA passes.

```
date="2021-04-15" time="10:04:56" id=6951431609690095758 bid=52507 dvid=1047
itime=1618506296 euid=3 epid=3 dsteuid=3 dstepid=3 logver=700000066 logid="0113022925"
type="event" subtype="sdwan" level="information" msg="Health Check SLA status."
logdesc="SDWAN SLA information" status="up" interface="port1" eventtime=1618506296222639301
tz="-0700" eventtype="SLA" jitter="0.277" inbandwidthavailable="10.00Gbps"
outbandwidthavailable="10.00Gbps" bibandwidthavailable="20.00Gbps" packetloss="1.000%"
latency="186.071" slamap="0x1" healthcheck="BusinessCritical_CloudApps" slatargetid=1
outbandwidthused="40kbps" inbandwidthused="24kbps" bibandwidthused="64kbps"
devid="FGVM02TM20000000" vd="root" devname="Branch_Office_01" csf="fabric"

date="2021-04-15" time="10:04:56" id=6951431609690095759 bid=52507 dvid=1047
itime=1618506296 euid=3 epid=3 dsteuid=3 dstepid=3 logver=700000066 logid="0113022925"
type="event" subtype="sdwan" level="information" msg="Health Check SLA status."
logdesc="SDWAN SLA information" status="up" interface="port2" eventtime=1618506296223163068
tz="-0700" eventtype="SLA" jitter="0.204" inbandwidthavailable="10.00Gbps"
outbandwidthavailable="10.00Gbps" bibandwidthavailable="20.00Gbps" packetloss="0.000%"
latency="185.939" slamap="0x1" healthcheck="BusinessCritical_CloudApps" slatargetid=1
outbandwidthused="142kbps" inbandwidthused="23kbps" bibandwidthused="165kbps"
devid="FGVM02TM20000000" vd="root" devname="Branch_Office_01" csf="fabric"
```

In the FortiAnalyzer GUI:

#	Date/Time	Level	Device ID	Interface	Status	Message
19	10:04:38	information	FGVM02TM200...	port1	up	Health Check SLA status.
20	10:04:38	information	FGVM02TM200...	port2	up	Health Check SLA status.
21	10:04:39	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
22	10:04:42	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
23	10:04:49	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
24	10:04:53	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
25	10:04:56	information	FGVM02TM200...	port1	up	Health Check SLA status.
26	10:04:56	information	FGVM02TM200...	port2	up	Health Check SLA status.
27	10:04:58	information	FGVM02TM200...	port1	up	Health Check SLA status.
28	10:04:58	information	FGVM02TM200...	port2	up	Health Check SLA status.
29	10:04:58	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
30	10:05:03	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
31	10:05:09	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
32	10:05:13	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
33	10:05:15	information	FGVM02TM200...	port1	up	Health Check SLA status.
34	10:05:15	information	FGVM02TM200...	port2	up	Health Check SLA status.
35	10:05:18	information	FGVM02TM200...	port1	up	Health Check SLA status.
36	10:05:18	information	FGVM02TM200...	port2	up	Health Check SLA status.

## SLA fail logs

The FortiGate generates Performance SLA logs at the specified fail log interval (sla-fail-log-period) when SLA fails.

```
date="2021-04-15" time="10:04:59" id=6951431618280030243 bid=52507 dvid=1047
itime=1618506298 euid=3 epid=3 dsteuid=3 dstepid=3 logver=700000066 logid="0113022925"
type="event" subtype="sdwan" level="notice" msg="Health Check SLA status. SLA failed due to
being over the performance metric threshold." logdesc="SDWAN SLA information" status="down"
interface="To-HQ-MPLS" eventtime=1618506299718862835 tz="-0700" eventtype="SLA"
jitter="0.000" inbandwidthavailable="10.00Gbps" outbandwidthavailable="10.00Gbps"
bibandwidthavailable="20.00Gbps" packetloss="100.000%" latency="0.000" slamap="0x0"
healthcheck="BusinessCritical_CloudApps" slatargetid=1 metric="packetloss"
outbandwidthused="0kbps" inbandwidthused="0kbps" bibandwidthused="0kbps"
devid="FGVM02TM20000000" vd="root" devname="Branch_Office_01" csf="fabric"
```

```
date="2021-04-15" time="10:05:03" id=6951431639754866704 bid=52514 dvid=1046
itime=1618506303 euid=3 epid=3 dsteuid=3 dstepid=3 logver=700000066 logid="0113022925"
type="event" subtype="sdwan" level="notice" msg="Health Check SLA status. SLA failed due to
being over the performance metric threshold." logdesc="SDWAN SLA information" status="down"
interface="To-HQ-MPLS" eventtime=1618506304085863643 tz="-0700" eventtype="SLA"
jitter="0.000" inbandwidthavailable="10.00Gbps" outbandwidthavailable="10.00Gbps"
bibandwidthavailable="20.00Gbps" packetloss="100.000%" latency="0.000" slamap="0x0"
healthcheck="BusinessCritical_CloudApps" slatargetid=1 metric="packetloss"
outbandwidthused="6kbps" inbandwidthused="3kbps" bibandwidthused="9kbps"
devid="FGVM02TM20000000" vd="root" devname="Branch_Office_02" csf="fabric"
```

In the FortiAnalyzer GUI:

#	Date/Time	Level	Device ID	Interface	Status	Message
15	10:04:28	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
16	10:04:32	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
17	10:04:35	information	FGVM02TM200...	port1	up	Health Check SLA status.
18	10:04:35	information	FGVM02TM200...	port2	up	Health Check SLA status.
19	10:04:38	information	FGVM02TM200...	port1	up	Health Check SLA status.
20	10:04:38	information	FGVM02TM200...	port2	up	Health Check SLA status.
21	10:04:39	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
22	10:04:42	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
23	10:04:49	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
24	10:04:53	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
25	10:04:56	information	FGVM02TM200...	port1	up	Health Check SLA status.
26	10:04:56	information	FGVM02TM200...	port2	up	Health Check SLA status.
27	10:04:58	information	FGVM02TM200...	port1	up	Health Check SLA status.
28	10:04:58	information	FGVM02TM200...	port2	up	Health Check SLA status.
29	10:04:58	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
30	10:05:03	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
31	10:05:09	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
32	10:05:13	notice	FGVM02TM200...	To-HQ-MPLS	down	Health Check SLA status. S
33	10:05:16	information	FGVM02TM200...	port1	up	Health Check SLA status.

## Monitoring using the REST API

SLA log and interface information can be monitored using the REST API. This feature is also used by FortiManager as part of its detailed SLA monitoring and drilldown features.

API call	URL
Interface log	<a href="https://172.172.172.9/api/v2/monitor/virtual-wan/interface-log">https://172.172.172.9/api/v2/monitor/virtual-wan/interface-log</a>
SLA log	<a href="https://172.172.172.9/api/v2/monitor/virtual-wan/sla-log">https://172.172.172.9/api/v2/monitor/virtual-wan/sla-log</a>
Health check log	<a href="https://172.172.172.9/api/v2/monitor/virtual-wan/health-check">https://172.172.172.9/api/v2/monitor/virtual-wan/health-check</a>

A comprehensive list of API calls with sample output is available on the [Fortinet Developer Network](#).

### CLI diagnose commands:

```
# diagnose sys sdwan intf-sla-log port13
Timestamp: Wed Jan 9 18:33:49 2019, used inbandwidth: 3208bps, used outbandwidth:
3453bps, used bibandwidth: 6661bps, tx bytes: 947234bytes, rx bytes: 898622bytes.
Timestamp: Wed Jan 9 18:33:59 2019, used inbandwidth: 3317bps, used outbandwidth:
3450bps, used bibandwidth: 6767bps, tx bytes: 951284bytes, rx bytes: 902937bytes.
Timestamp: Wed Jan 9 18:34:09 2019, used inbandwidth: 3302bps, used outbandwidth:
3389bps, used bibandwidth: 6691bps, tx bytes: 956268bytes, rx bytes: 907114bytes.
Timestamp: Wed Jan 9 18:34:19 2019, used inbandwidth: 3279bps, used outbandwidth:
3352bps, used bibandwidth: 6631bps, tx bytes: 958920bytes, rx bytes: 910793bytes.
Timestamp: Wed Jan 9 18:34:29 2019, used inbandwidth: 3233bps, used outbandwidth:
3371bps, used bibandwidth: 6604bps, tx bytes: 964374bytes, rx bytes: 914854bytes.
Timestamp: Wed Jan 9 18:34:39 2019, used inbandwidth: 3235bps, used outbandwidth:
3362bps, used bibandwidth: 6597bps, tx bytes: 968250bytes, rx bytes: 918846bytes.
Timestamp: Wed Jan 9 18:34:49 2019, used inbandwidth: 3165bps, used outbandwidth:
3362bps, used bibandwidth: 6527bps, tx bytes: 972298bytes, rx bytes: 922724bytes.
Timestamp: Wed Jan 9 18:34:59 2019, used inbandwidth: 3184bps, used outbandwidth:
3362bps, used bibandwidth: 6546bps, tx bytes: 977282bytes, rx bytes: 927019bytes.

# diagnose sys sdwan sla-log ping 1 spoke11-p1_0
Timestamp: Wed Mar 3 15:35:20 2021, vdom root, health-check ping, interface: spoke11-
p1_0, status: up, latency: 0.135, jitter: 0.029, packet loss: 0.000%.
```

```
# diagnose sys sdwan sla-log ping 2 spoke12-pl_0
Timestamp: Wed Mar  3 15:36:08 2021, vdom root, health-check ping, interface: spoke12-
pl_0, status: up, latency: 0.095, jitter: 0.010, packet loss: 0.000%.

# diagnose sys sdwan health-check
Health Check(ping):
Seq(1 spoke11-pl): state(alive), packet-loss(0.000%) latency(0.156), jitter(0.043) sla_
map=0x1
Seq(1 spoke11-pl_0): state(alive), packet-loss(0.000%) latency(0.128), jitter(0.024)
sla_map=0x1
Seq(2 spoke12-pl): state(alive), packet-loss(0.000%) latency(0.125), jitter(0.028) sla_
map=0x1
Seq(2 spoke12-pl_0): state(alive), packet-loss(0.000%) latency(0.093), jitter(0.008)
sla_map=0x1
```

## Passive WAN health measurement

SD-WAN passive WAN health measurement determines the health check measurements using session information that is captured on firewall policies that have *Passive Health Check* (`passive-wan-health-measurement`) enabled. Passive measurements analyze session information that is gathered from various TCP sessions to determine the jitter, latency, and packet loss.

Using passive WAN health measurement reduces the amount of configuration required and decreases the traffic that is produced by health check monitor probes doing active measurements. Passive WAN health measurement analyzes real-life traffic; active WAN health measurement using a detection server might not reflect the real-life traffic.

By default, active WAN health measurement is enabled when a new health check is created. It can be changed to passive or prefer passive:

<b>passive</b>	Health is measured using traffic, without probes. No link health monitor needs to be configured.
<b>prefer-passive</b>	Health is measured using traffic when there is traffic, and using probes when there is no traffic. A link health monitor must be configured, see <a href="#">Link health monitor</a> for details.




When `passive-wan-health-measurement` is enabled, `auto-asic-offload` will be disabled.

## Example

In this example, the FortiGate is configured to load-balance between two WAN interfaces, port15 and port16. A health check is configured in passive mode, and SLA thresholds are set. Passive WAN health measurement is enabled on the SD-WAN policy.

Measurements are taken from YouTube traffic generated by the PC. When latency is introduced to the traffic on port15, the passive health check trigger threshold is exceeded and traffic is rerouted to port16.

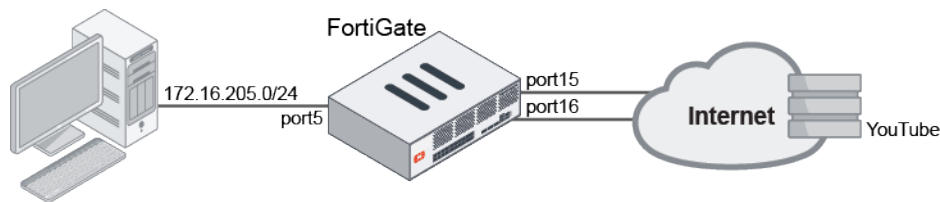

### To configure the SD-WAN in the GUI:

1. Create the SD-WAN zone:
  - a. Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab.
  - b. Click *Create New > SD-WAN Zone*.
  - c. Enter a name for the zone, such as *SD-WAN*.
  - d. Click *OK*.
2. Create the SD-WAN members:
  - a. Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab.
  - b. Click *Create New > SD-WAN Member*.
  - c. Set *Interface* to *port15*, *SD-WAN Zone* to *SD-WAN*, and *Gateway* set to *172.16.209.2*.
  - d. Click *OK*.
  - e. Click *Create New > SD-WAN Member* again.
  - f. Set *Interface* to *port16*, *SD-WAN Zone* to *SD-WAN*, and *Gateway* set to *172.16.210.2*.
  - g. Click *OK*.
3. Create a performance SLA:
  - a. Go to *Network > SD-WAN* and select the *Performance SLAs* tab.
  - b. Edit an existing health check, or create a new one.
  - c. Set *Probe mode* to *Passive*.
  - d. Set *Participants* to *Specify* and add *port15* and *port16*.
  - e. Configure two SLA targets. Note that the second SLA target must be configured in the CLI.

**New Performance SLA**

Name:

Probe mode: ☒ Active ☒ **Passive** ☐ Prefer Passive

Participants:  

- ☒ port15
- ☒ port16

**SLA Targets**

Target 1

- Latency threshold: ☒ 500 ms
- Jitter threshold: ☒ 500 ms
- Packet Loss threshold: ☒ 10 %

Target 2

- Latency threshold: ☒ 1000 ms
- Jitter threshold: ☒ 1000 ms
- Packet Loss threshold: ☒ 10 %

**Actions when Inactive**

Update static route: ☒

**Additional Information**

- 
- 
- 
- 
- 
- 
- 

- f. Configure the remaining settings as needed.

- g. Click OK.

The SLA list shows the probe mode in the *Detect Server* column, if the probe mode is passive or prefer passive.



Probe packets can only be disabled in the CLI and when the probe mode is not passive.

4. Create SD-WAN rules:

- a. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.  
b. Configure the first rule:

<b>Name</b>	Background_Traffic
<b>Source address</b>	172.16.205.0
<b>Application</b>	Click in the field, and in the <i>Select Entries</i> pane search for <i>YouTube</i> and select all of the entries
<b>Strategy</b>	Maximize Bandwidth (SLA)
<b>Interface preference</b>	port15 and port16
<b>Required SLA target</b>	Passive_Check#2

- c. Click OK.  
d. Click *Create New* again and configure the second rule:

<b>Name</b>	Foreground_Traffic
<b>Source address</b>	172.16.205.0
<b>Address</b>	all
<b>Protocol number</b>	Specify - 1
<b>Strategy</b>	Lowest Cost (SLA)
<b>Interface preference</b>	port15 and port16
<b>Required SLA target</b>	Passive_Check#1

- e. Click OK.

**To configure the firewall policy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.  
2. Configure the policy:

<b>Name</b>	SD-WAN-HC-policy
<b>Incoming Interface</b>	port5
<b>Outgoing Interface</b>	SD-WAN
<b>Source</b>	all
<b>Destination</b>	all

<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>Passive Health Check</b>	Enabled Passive health check can only be enabled in a policy when the outgoing interface is an SD-WAN zone.

3. Click OK.

### To configure the SD-WAN in the CLI:

```
config system sdwan
  set status enable
  config zone
    edit "SD-WAN"
    next
  end
  config members
    edit 1
      set zone "SD-WAN"
      set interface "port15"
      set gateway 172.16.209.2
    next
    edit 2
      set zone "SD-WAN"
      set interface "port16"
      set gateway 172.16.210.2
    next
  end
  config health-check
    edit "Passive_Check"
      set detect-mode passive
      set members 1 2
      config sla
        edit 1
          set latency-threshold 500
          set jitter-threshold 500
          set packetloss-threshold 10
        next
        edit 2
          set latency-threshold 1000
          set jitter-threshold 1000
          set packetloss-threshold 10
        next
      end
    next
  end
  config service
    edit 1
      set name "Background_Traffic"
      set mode load-balance
      set src "172.16.205.0"
      set internet-service enable
```



```

        set internet-service-app-ctrl 31077 33321 41598 31076 33104 23397 30201 16420
17396 38569 25564
        config sla
            edit "Passive_Check"
                set id 2
            next
        end
        set priority-member 1 2
    next
    edit 2
        set name "Foreground_Traffic"
        set mode sla
        set src "172.16.205.0"
        set protocol 1
        set dst "all"
        config sla
            edit "Passive_Check"
                set id 1
            next
        end
        set priority-member 1 2
    next
end
end

```

### To configure the firewall policy in the CLI:

```

config firewall policy
    edit 1
        set name "SD-WAN-HC-policy"
        set srcintf "port5"
        set dstintf "SD-WAN"
        set nat enable
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set passive-wan-health-measurement enable
        set auto-asic-offload disable
    next
end

```

## Results

### When both links pass the SLA:

```

# diagnose sys link-monitor-passive interface
Interface port16 (28):
    Latency 10.000 Jitter 5.000 Packet_loss 0.000% Last_updated Fri Mar 5 10:09:21 2021

Interface port15 (27):
    Latency 60.000 Jitter 0.000 Packet_loss 0.000% Last_updated Fri Mar 5 10:39:24 2021

# diagnose sys sdwan health-check
Health Check(Passive_Check):

```

```
Seq(1 port15): state(alive), packet-loss(0.000%) latency(60.000), jitter(0.750) sla_map=0x3
Seq(2 port16): state(alive), packet-loss(0.000%) latency(10.000), jitter(5.000) sla_map=0x3

# diagnose sys sdwan service 2

Service(2): Address Mode(IPV4) flags=0x200
  Gen(1), TOS(0x0/0x0), Protocol(1: 1->65535), Mode(sla), sla-compare-order
  Members(2):
    1: Seq_num(1 port15), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
    2: Seq_num(2 port16), alive, sla(0x1), gid(0), cfg_order(1), cost(0), selected
  Src address(1):
    172.16.205.0-172.16.205.255

  Dst address(1):
    8.8.8.8-8.8.8.8
```

**When the latency is increased to 610ms on port15, the SLA is broken and pings are sent on port16:**

```
# diagnose sys sdwan health-check
Health Check(Passive_Check):
Seq(1 port15): state(alive), packet-loss(0.000%) latency(610.000), jitter(2.500) sla_map=0x3
Seq(2 port16): state(alive), packet-loss(0.000%) latency(50.000), jitter(21.000) sla_map=0x3

# diagnose sys sdwan service 2

Service(2): Address Mode(IPV4) flags=0x200
  Gen(6), TOS(0x0/0x0), Protocol(1: 1->65535), Mode(sla), sla-compare-order
  Members(2):
    1: Seq_num(2 port16), alive, sla(0x1), gid(1), cfg_order(1), cost(0), selected
    2: Seq_num(1 port15), alive, sla(0x0), gid(2), cfg_order(0), cost(0), selected
  Src address(1):
    172.16.205.0-172.16.205.255

  Dst address(1):
    8.8.8.8-8.8.8.8
```

## Passive health-check measurement by internet service and application


Passive health measurement supports passive detection for each internet service and application.

If internet services or applications are defined in an SD-WAN rule with passive health check, SLA information for each service or application will be differentiated and collected. SLA metrics (latency, jitter, and packet loss) on each SD-WAN member in the rule are then calculated based on the relevant internet service's or application's SLA information.

In this example, three SD-WAN rules are created:

- Rule 1: Best quality (latency) using passive SLA for the internet services Alibaba and Amazon.
- Rule 2: Best quality (latency) using passive SLA for the applications Netflix and YouTube.
- Rule 3: Best quality (latency) using passive SLA for all other traffic.

After passive application measurement is enabled for rules one and two, the SLA metric of rule one is the average latency of the internet services Alibaba and Amazon, and the SLA metric of rule two is the average latency of the applications Netflix and YouTube.

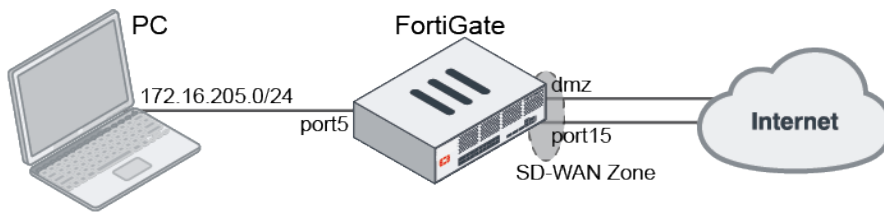

### To configure the SD-WAN:

#### 1. Configure the SD-WAN members:

```
config system sdwan
    set status enable
    config zone
        edit "virtual-wan-link"
        next
    end
    config members
        edit 1
            set interface "dmz"
            set gateway 172.16.208.2
        next
        edit 2
            set interface "port15"
            set gateway 172.16.209.2
        next
    end
end
```

#### 2. Configure the passive mode health check:

```
config health-check
    edit "Passive_HC"
        set detect-mode passive
        set members 1 2
    next
end
```

#### 3. Configure SD-WAN service rules:

```
config service
    edit 1
        set name "1"
        set mode priority
        set src "172.16.205.0"
        set internet-service enable
        set internet-service-name "Alibaba-Web" "Amazon-Web"
        set health-check "Passive_HC"
        set priority-members 1 2
        set passive-measurement enable //Enable "passive application measurement", it
is a new command which is introduced in this project.
    next
    edit 2
        set name "2"
        set mode priority
        set src "172.16.205.0"
```

```

        set internet-service enable
        set internet-service-app-ctrl 18155 31077
        set health-check "Passive_HC"
        set priority-members 1 2
        set passive-measurement enable      ///Enable "passive application measurement"
    next
    edit 3
        set name "3"
        set mode priority
        set dst "all"
        set src "172.16.205.0"
        set health-check "Passive_HC"
        set priority-members 1 2
    next
end

```

#### 4. Configure SD-WAN routes:

```

config router static
    edit 1
        set distance 1
        set sdwan-zone "virtual-wan-link"
    next
end

```

#### 5. Configure the firewall policy with passive WAN health measurement enabled:

```

config firewall policy
    edit 1
        set uuid 972345c6-1595-51ec-66c5-d705d266f712
        set srcintf "port5"
        set dstintf "virtual-wan-link"
        set action accept
        set srcaddr "172.16.205.0"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set passive-wan-health-measurement enable
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
        set application-list "g-default"
        set auto-asic-offload disable
    next
end

```

#### To verify the results:

1. On the PC, open the browser and visit the internet services and applications.
2. On the FortiGate, check the collected SLA information to confirm that each server or application on the SD-WAN members was measured individually:

```

# diagnose sys link-monitor-passive interface

Interface dmz (5):
    Default(0x00000000): latency=3080.0   11:57:54, jitter=5.0       11:58:08,
    pktloss=0.0   % NA
    Alibaba-Web(0x00690001): latency=30.0   11:30:06, jitter=25.0    11:29:13,

```

```

pktloss=0.0 % NA
    YouTube(0x00007965): latency=100.0    12:00:35, jitter=2.5    12:00:30,
pktloss=0.0 % NA
    Netflix(0x000046eb): latency=10.0    11:31:24, jitter=10.0    11:30:30,
pktloss=0.0 % NA
    Amazon-Web(0x00060001): latency=80.0    11:31:52, jitter=35.0    11:32:07,
pktloss=0.0 % NA

Interface port15 (27):
    Default(0x00000000): latency=100.0    12:00:42, jitter=0.0    12:00:42,
pktloss=0.0 % NA
    Amazon-Web(0x00060001): latency=30.0    11:56:05, jitter=0.0    11:55:21,
pktloss=0.0 % NA
    Alibaba-Web(0x00690001): latency=0.0    11:26:08, jitter=35.0    11:27:08,
pktloss=0.0 % NA
    YouTube(0x00007965): latency=100.0    11:33:34, jitter=0.0    11:33:50,
pktloss=0.0 % NA
    Netflix(0x000046eb): latency=0.0    11:26:29, jitter=0.0    11:29:03,
pktloss=0.0 % NA

```

### 3. Verify that the SLA metrics on the members are calculated as expected:

```

# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x600 use-shortcut-sla
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor
(latency), link-cost-threshold(10), health-check(Passive_HC)
  Members(2):
    1: Seq_num(2 port15), alive, latency: 15.000, selected          // Average latency
of "Alibaba-Web" and "Amazon-Web" on port15:    15.000 = (0.0+30.0)/2
    2: Seq_num(1 dmz), alive, latency: 55.000, selected          // Average latency
of "Alibaba-Web" and "Amazon-Web" on dmz:    55.000 = (30.0+80.0)/2
  Internet Service(2): Alibaba-Web(6881281,0,0,0) Amazon-Web(393217,0,0,0)
  Src address(1):
    172.16.205.0-172.16.205.255

Service(2): Address Mode(IPV4) flags=0x600 use-shortcut-sla
  Gen(2), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor
(latency), link-cost-threshold(10), health-check(Passive_HC)
  Members(2):
    1: Seq_num(1 dmz), alive, latency: 55.000, selected          // Average latency
of "Netflix" and "YouTube" on dmz:    55.000 = (10.0+100.0)/2
    2: Seq_num(2 port15), alive, latency: 50.000, selected          // Average latency
of "Netflix" and "YouTube" on port15:    50.000 = (0.0+100.0)/2
  Internet Service(2): Netflix(4294837427,0,0,0 18155) YouTube(4294838283,0,0,0 31077)
  Src address(1):
    172.16.205.0-172.16.205.255

Service(3): Address Mode(IPV4) flags=0x200 use-shortcut-sla
  Gen(9), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor
(latency), link-cost-threshold(10), health-check(Passive_HC)
  Members(2):
    1: Seq_num(2 port15), alive, latency: 46.000, selected          // Average latency
of all TCP traffic on port15:    46 = (100.0+30.0+0.0+100.0+0.0)/5
    2: Seq_num(1 dmz), alive, latency: 660.000, selected          // Average latency of
all TCP traffic on dmz:    660 = (3080.0+30.0+100.0+10.0+80.0)/5
  Src address(1):

```

```
172.16.205.0-172.16.205.255
```

```
Dst address(1):
0.0.0.0-255.255.255.255
```

## Mean opinion score calculation and logging in performance SLA health checks

The mean opinion score (MOS) is a method of measuring voice quality using a formula that takes latency, jitter, packet loss, and the codec into account to produce a score from zero to five (0 - 5). The G.711, G.729, and G.722 codecs can be selected in the health check configurations, and an MOS threshold can be entered to indicate the minimum MOS score for the SLA to pass. The maximum MOS score will depend on which codec is used, since each codec has a theoretical maximum limit.

```
config system sdwan
  config health-check
    edit <name>
      set mos-codec {g711 | g729 | g722}
      config sla
        edit <id>
          set link-cost-factor {latency jitter packet-loss mos}
          set mos-threshold <value>
        next
      end
    next
  end
end
```

mos-codec {g711   g729   g722}	Set the VoIP codec to use for the MOS calculation (default = g711).
link-cost-factor {latency jitter packet-loss mos}	Set the criteria to base the link selection on.
mos-threshold <value>	Set the minimum MOS for the SLA to be marked as pass (1.0 - 5.0, default = 3.6).

### To configure a health check to calculate the MOS:

```
config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
    next
  end
  config members
    edit 1
      set interface "dmz"
      set gateway 172.16.208.2
    next
    edit 2
      set interface "port15"
      set gateway 172.16.209.2
    next
  end
  config health-check
```

```

edit "Test_MOS"
    set server "2.2.2.2"
    set sla-fail-log-period 30
    set sla-pass-log-period 30
    set members 0
    set mos-codec g729
    config sla
        edit 1
            set link-cost-factor mos
            set mos-threshold "4.0"
        next
    end
next
end
end
end

```

### To use an MOS SLA to steer traffic in an SD-WAN rule:

```

config system sdwan
    config service
        edit 1
            set name "MOS_traffic_steering"
            set mode sla
            set dst "HQ_LAN"
            set src "Branch_LAN"
            config sla
                edit "Test_MOS"
                    set id 1
                next
            end
            set priority-members 0
        next
    end
end
end

```



The MOS currently cannot be used to steer traffic when the mode is set to priority.

### To verify the MOS calculation results:

#### 1. Verify the health check diagnostics:

```

# diagnose sys sdwan health-check
Health Check(Test_MOS):
Seq(1 dmz): state(alive), packet-loss(0.000%) latency(0.114), jitter(0.026), mos(4.123),
bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x1
Seq(2 port15): state(alive), packet-loss(0.000%) latency(0.100), jitter(0.008), mos
(4.123), bandwidth-up(999999), bandwidth-dw(999999), bandwidth-bi(1999998) sla_map=0x1

# diagnose sys sdwan sla-log Test_MOS 1
Timestamp: Tue Jan  4 11:23:06 2022, vdom root, health-check Test_MOS, interface: dmz,
status: up, latency: 0.151, jitter: 0.040, packet loss: 0.000%, mos: 4.123.
Timestamp: Tue Jan  4 11:23:07 2022, vdom root, health-check Test_MOS, interface: dmz,
status: up, latency: 0.149, jitter: 0.041, packet loss: 0.000%, mos: 4.123.

```

```
# diagnose sys sdwan sla-log Test_MOS 2
Timestamp: Tue Jan  4 11:25:09 2022, vdom root, health-check Test_MOS, interface:
port15, status: up, latency: 0.097, jitter: 0.009, packet loss: 0.000%, mos: 4.123.
Timestamp: Tue Jan  4 11:25:10 2022, vdom root, health-check Test_MOS, interface:
port15, status: up, latency: 0.097, jitter: 0.008, packet loss: 0.000%, mos: 4.123.
```

## 2. Change the mos-codec to g722. The diagnostics will now display different MOS values:

```
# diagnose sys sdwan health-check
Health Check(Test_MOS):
Seq(1 dmz): state(alive), packet-loss(0.000%) latency(0.150), jitter(0.031), mos(4.453),
bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x1
Seq(2 port15): state(alive), packet-loss(0.000%) latency(0.104), jitter(0.008), mos
(4.453), bandwidth-up(999999), bandwidth-dw(999999), bandwidth-bi(1999998) sla_map=0x1
```

## 3. Increase the latency on the link in port15. The calculated MOS value will decrease accordingly. In this example, port15 is out of SLA since its MOS value is now less than the 4.0 minimum:

```
# diagnose sys sdwan health-check
Health Check(Test_MOS):
Seq(1 dmz): state(alive), packet-loss(0.000%) latency(0.106), jitter(0.022), mos(4.453),
bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x1
Seq(2 port15): state(alive), packet-loss(0.000%) latency(300.119), jitter(0.012), mos
(3.905), bandwidth-up(999999), bandwidth-dw(999999), bandwidth-bi(1999998) sla_map=0x0
```

## Sample logs

```
date=2022-01-04 time=11:57:54 eventtime=1641326274876828300 tz="-0800" logid="0113022933"
type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN SLA notification"
eventtype="SLA" healthcheck="Test_MOS" slatargetid=1 interface="port15" status="up"
latency="300.118" jitter="0.013" packetloss="0.000" mos="3.905"
inbandwidthavailable="1000.00Mbps" outbandwidthavailable="1000.00Mbps"
bibandwidthavailable="2.00Gbps" inbandwidthused="0kbps" outbandwidthused="0kbps"
bibandwidthused="0kbps" slamap="0x0" metric="mos" msg="Health Check SLA status. SLA failed
due to being over the performance metric threshold."
```

```
date=2022-01-04 time=11:57:24 eventtime=1641326244286635920 tz="-0800" logid="0113022923"
type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN status"
eventtype="Health Check" healthcheck="Test_MOS" slatargetid=1 oldvalue="2" newvalue="1"
msg="Number of pass member changed."
```

```
date=2022-01-04 time=11:57:24 eventtime=1641326244286627260 tz="-0800" logid="0113022923"
type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN status"
eventtype="Health Check" healthcheck="Test_MOS" slatargetid=1 member="2" msg="Member status
changed. Member out-of-sla."
```

```
date=2022-01-04 time=11:57:02 eventtime=1641326222516756500 tz="-0800" logid="0113022925"
type="event" subtype="sdwan" level="information" vd="root" logdesc="SDWAN SLA information"
eventtype="SLA" healthcheck="Test_MOS" slatargetid=1 interface="port15" status="up"
latency="0.106" jitter="0.007" packetloss="0.000" mos="4.453"
inbandwidthavailable="1000.00Mbps" outbandwidthavailable="1000.00Mbps"
bibandwidthavailable="2.00Gbps" inbandwidthused="0kbps" outbandwidthused="0kbps"
bibandwidthused="0kbps" slamap="0x1" msg="Health Check SLA status."
```




## Embedded SD-WAN SLA information in ICMP probes

In the hub and spoke SD-WAN design, in order for traffic to pass symmetrically from spoke to hub and hub to spoke, it is essential for the hub to know which IPsec overlay is in SLA and out of SLA. Prior to introducing embedded SLA information in ICMP probes, it is common practice for spokes to use the SD-WAN neighbor feature and `route-map-out-preferable` setting to signal the health of each overlay to the hub. However, this requires BGP to be configured per overlay, and to manipulate BGP routes using custom BGP communities.

With embedded SLA information in ICMP probes, spokes can communicate their SLA for each overlay directly through ICMP probes to the hub. The hub learns these SLAs and maps the status for each spoke and its corresponding overlays.

The hub uses the SLA status to apply priorities to the IKE routes, giving routes over IPsec overlays that are within SLAs a lower priority value and routes over overlays out of SLAs a higher priority value. If BGP is used, recursively resolved BGP routes can inherit the priority from its parent.

Embedded SLA information in ICMP probes allows hub and spoke SD-WAN to be designed with a BGP on loopback topology, or without BGP at all. The following topology outlines an example of the BGP on loopback design where each spoke is peered with the hub and route reflector on the loopback interface.

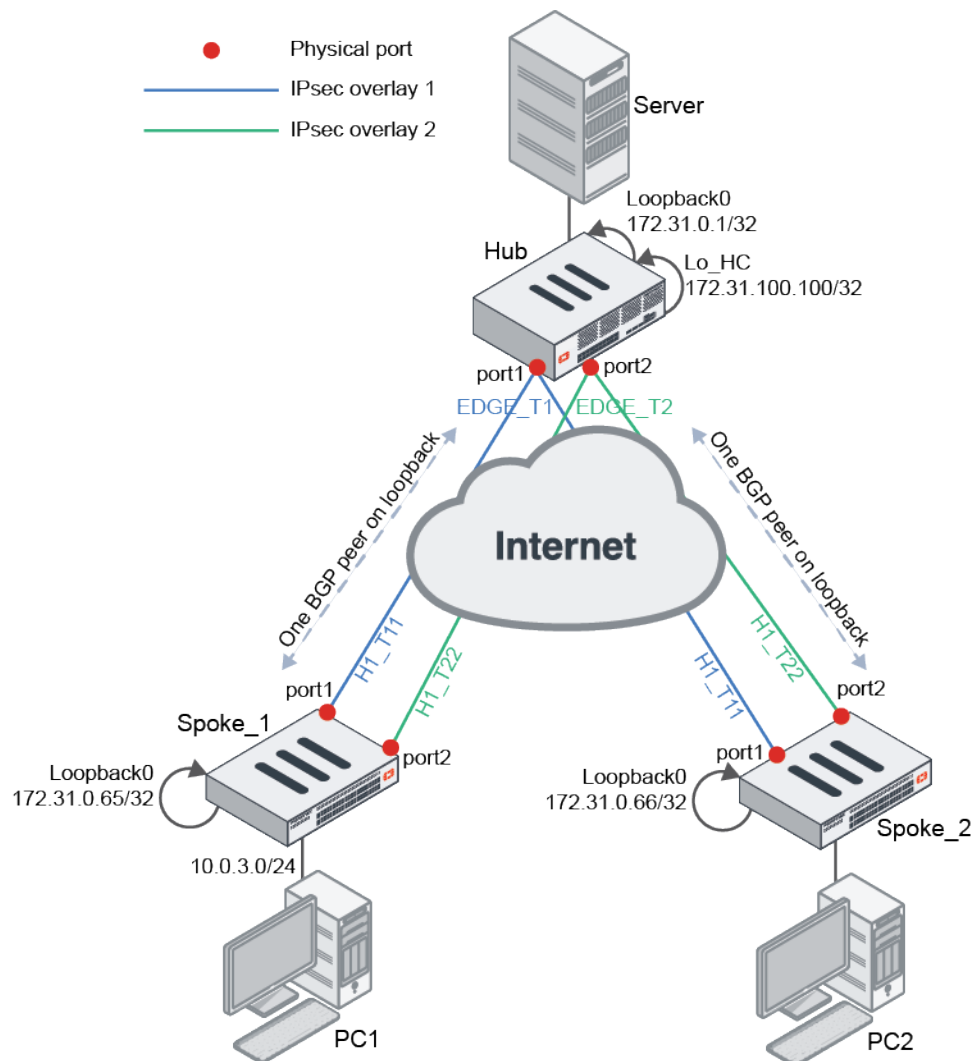

In this topology, each FortiGate's BGP router ID is based on its Loopback0 interface. Each spoke has SLA health checks defined to send ICMP probes to the server's Lo\_HC interface on 172.31.100.100. The ICMP probes include embedded SLA information for each SD-WAN overlay member.

### Related SD-WAN settings:

```
config system sdwan
    config health-check
        edit <name>
            set detect-mode {active | passive | prefer-passive | remote}
            set embed-measured-health {enable | disable}
            config sla
                edit <id>
                    set priority-in-sla <integer>
                    set priority-out-sla <integer>
                next
            end
            set sla-id-redistribute <id>
        next
    end
end
```

```
detect-mode {active |
    passive | prefer-
    passive | remote}
```

Set the mode that determines how to detect the server:

- active: the probes are sent actively (default).
- passive: the traffic measures health without probes.
- prefer-passive: the probes are sent in case of no new traffic.
- remote: the link health is obtained from remote peers.

```
embed-measured-health
    {enable | disable}
```

Enable/disable embedding SLA information in ICMP probes (default = disable).

```
set priority-in-sla
    <integer>
```

Set the priority that will be set to the IKE route when the corresponding overlay is in SLA (0 - 65535).

```
set priority-out-sla
    <integer>
```

Set the priority that will be set to the IKE route when the corresponding overlay is out of SLA (0 - 65535).

```
sla-id-redistribute <id>
```

Set the SLA entry (ID) that will be applied to the IKE routes (0 - 32, default = 0).

### Related BGP setting:

```
config router bgp
    set recursive-inherit-priority {enable | disable}
end
```

```
recursive-inherit-
    priority {enable |
    disable}
```

Enable/disable allowing recursive resolved BGP routes to inherit priority from its parent (default = disable).

## Example with BGP on loopback SD-WAN

This example demonstrates the configurations needed to configure the SD-WAN and BGP settings for the preceding topology. It is assumed that IPsec VPN overlays are already configured per the topology, and that loopback interfaces

are already configured on each FortiGate.

## Configuring the Spoke\_1 FortiGate

In the SD-WAN settings, note the following requirements:

1. Configure the SD-WAN zones and members. For each SD-WAN member, define the source of its probes to be the Loopback0 interface IP.
2. Configure the SLA health check to point to the Hub's Lo\_HC interface and IP. Enable `embed-measured-health`.
3. Configure an SD-WAN service rule to route traffic based on the maximize bandwidth (SLA) algorithm to prefer member H1\_T11 over H1\_T22.
4. Configure `set exchange-interface-ip enable` and `set exchange-ip-addr4` to the Loopback0 interface IP. The `exchange-interface-ip` option is automatically turned on when ADVPN has already been configured. If ADVPN has not been configured, then `set exchange-interface-ip enable` must be configured before `set exchange-ip-addr4` can be configured.

### To configure the SD-WAN settings:

```
config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
    next
    edit "overlay"
    next
  end
  config members
    edit 1
      set interface "H1_T11"
      set zone "overlay"
      set source 172.31.0.65
    next
    edit 4
      set interface "H1_T22"
      set zone "overlay"
      set source 172.31.0.65
    next
  end
  config health-check
    edit "HUB"
      set server "172.31.100.100"
      set embed-measured-health enable
      set members 0
      config sla
        edit 1
          set link-cost-factor latency
          set latency-threshold 100
        next
      end
    next
  end
  config service
    edit 1
      set mode sla
      set dst "CORP_LAN"
```

```

        set src "CORP_LAN"
        config sla
            edit "HUB"
                set id 1
            next
        end
        set priority-members 1 4
    next
end
end

```

### To configure the BGP settings:

```

config router bgp
    set as 65001
    set router-id 172.31.0.65
    config neighbor
        edit "172.31.0.1"
            set remote-as 65001
            set update-source "Loopback0"
        next
    end
    config network
        edit 1
            set prefix 10.0.3.0 255.255.255.0
        next
    end
end

```

### To add the loopback IP to the IPsec interface settings:

```

config vpn ipsec phase1-interface
    edit "H1_T11"
        set exchange-interface-ip enable
        set exchange-ip-addr4 172.31.0.65
    next
    edit "H1_T22"
        set exchange-interface-ip enable
        set exchange-ip-addr4 172.31.0.65
    next
end

```

## Configuring the hub FortiGate

In the SD-WAN settings, note the following requirements:

1. Configure the SD-WAN zone and members.
2. Configure the SLA health checks to detect SLAs based on the remote site (spoke). This must be defined for each SD-WAN member:
  - a. For the SLA, specify the same link cost factor and metric as the spoke (100).
  - b. Define the IKE route priority for in and out of SLA. Lower priority values have higher priority than higher priority values.
3. Define the SLA entry ID that will be applied to the IKE routes.

4. Configure `set exchange-interface-ip enable` and `set exchange-ip-addr4` to the Loopback0 interface IP. The `exchange-interface-ip` option is automatically turned on when ADVPN has already been configured. If ADVPN has not been configured, then `set exchange-interface-ip enable` must be configured before `set exchange-ip-addr4` can be configured.

#### To configure the SD-WAN settings:

```
config system sdwan
    set status enable
    config zone
        edit "virtual-wan-link"
            next
        end
    config members
        edit 1
            set interface "EDGE_T1"
        next
        edit 2
            set interface "EDGE_T2"
        next
    end
    config health-check
        edit "1"
            set detect-mode remote
            set sla-id-redistribute 1
            set members 1
            config sla
                edit 1
                    set link-cost-factor latency
                    set latency-threshold 100
                    set priority-in-sla 10
                    set priority-out-sla 20
                next
            end
        next
        edit "2"
            set detect-mode remote
            set sla-id-redistribute 1
            set members 2
            config sla
                edit 1
                    set link-cost-factor latency
                    set latency-threshold 100
                    set priority-in-sla 15
                    set priority-out-sla 25
                next
            end
        next
    end
end
```

In the BGP settings, note the following requirements:

1. Enable `recursive-inherit-priority` to inherit the route priority from its parent, which is the priority defined in the health check SLA settings.
2. Configure the other BGP settings similar to a regular BGP hub.

**To configure the BGP settings:**

```

config router bgp
  set as 65001
  set router-id 172.31.0.1
  set recursive-inherit-priority enable
  config neighbor-group
    edit "EDGE"
      set remote-as 65001
      set update-source "Loopback0"
      set route-reflector-client enable
    next
  end
  config neighbor-range
    edit 1
      set prefix 172.31.0.64 255.255.255.192
      set neighbor-group "EDGE"
    next
  end
end

```

**To add the loopback IP to the IPsec interface settings:**

```

config vpn ipsec phase1-interface
  edit "EDGE_T1"
    set exchange-interface-ip enable
    set exchange-ip-addr4 172.31.0.1
  next
  edit "EDGE_T2"
    set exchange-interface-ip enable
    set exchange-ip-addr4 172.31.0.1
  next
end

```

**Testing and verification**

Once the hub and spokes are configured, verify that SLA statuses are passed from the spoke to the hub.

**To verify that the SLA statuses are passed from the spoke to the hub:**

1. On Spoke\_1, display the status of the health-checks for H1\_T11 and H1\_T22:

```

# diagnose sys sdwan health-check
Health Check(HUB):
Seq(1 H1_T11): state(alive), packet-loss(0.000%) latency(0.228), jitter(0.018), mos
(4.404), bandwidth-up(999999), bandwidth-dw(1000000), bandwidth-bi(1999999) sla_map=0x1
Seq(4 H1_T22): state(alive), packet-loss(0.000%) latency(0.205), jitter(0.007), mos
(4.404), bandwidth-up(999998), bandwidth-dw(1000000), bandwidth-bi(1999998) sla_map=0x1

```

2. On Spoke\_1, display the status and order of the overlays in the SD-WAN service rule:

```

# diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Tie break: cfg
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members(2):

```

```

1: Seq_num(1 H1_T11), alive, sla(0x1), gid(0), cfg_order(0), local cost(0), selected

2: Seq_num(4 H1_T22), alive, sla(0x1), gid(0), cfg_order(3), local cost(0), selected

Src address(1):
    10.0.0.0-10.255.255.255
Dst address(1):
    10.0.0.0-10.255.255.255

```

Both overlays are within SLA, so H1\_T11 is preferred due to its `cfg-order`.

Spoke\_1's SLA information for H1\_T11 and H1\_T22 is embedded into the ICMP probes destined for the hub's Lo\_HC interface. The hub receives this information and maps the SLAs correspondingly per spoke and overlay based on the same SLA targets.

As a result, since all SLAs are within target, the hub sets the routes over each overlay as follows:

Hub SD-WAN member	Overlay	SLA status	Priority for IKE routes
1	EDGE_T1	0x1 – within SLA	10
2	EDGE_T2	0x1 – within SLA	15

### 3. Verify that the spoke has sent its health check result to hub.

#### a. On the hub, display the status of the health checks for EDGE\_T1 and EDGE\_T2:

```

# diagnose sys sdwan health-check remote
Remote Health Check: 2(2)
    Passive remote statistics of EDGE_T2(22):
EDGE_T2_0(172.31.3.5): timestamp=02-09 16:19:11, latency=1.056, jitter=0.582,
pktloss=0.000%
Remote Health Check: 1(1)
    Passive remote statistics of EDGE_T1(21):
EDGE_T1_0(172.31.3.1): timestamp=02-09 16:19:11, latency=1.269, jitter=0.675,
pktloss=0.000%

```

### 4. When there are multiple spokes, additional options can be used to filter a spoke by health check name, or health check name and the member's sequence number (`diagnose system sdwan health-check remote <hc_name> <seq_num>`).

#### a. To filter the health check by health check name:

```

# diagnose sys sdwan health-check remote 1
Remote Health Check: 1(1)
    Passive remote statistics of EDGE_T1(21):
EDGE_T1_0(172.31.3.1): timestamp=02-09 16:43:37, latency=1.114, jitter=0.473,
pktloss=0.000%

```

When this method is used, the output displays all the members of the specified health check name.

#### b. To filter the health check by health check name and the member's sequence number:

```

# diagnose sys sdwan health-check remote 1 1
Remote Health Check: 1(1)
    Passive remote statistics of EDGE_T1(21):
EDGE_T1_0(172.31.3.1): timestamp=02-09 16:43:41, latency=1.178, jitter=0.497,
pktloss=0.000%

```

When this method is used, the output displays the specified member of the specified health check name.



If the detect-mode is set to remote, use `diagnose sys sdwan health-check remote` in lieu of `diagnose sys sdwan health-check`.

5. Simultaneously, BGP recursive routes inherit the priority based on the parent IKE routes. The recursively resolved BGP routes that pass through EDGE\_T1 will have a priority of 10, and routes that pass through EDGE\_T2 will have a priority of 15. Therefore, traffic from the hub to the spoke will be routed to EDGE\_T1.

Verify the routing tables.

a. Static:

```
# get router info routing-table static
Routing table for VRF=0
S      172.31.0.65/32 [15/0] via EDGE_T1 tunnel 10.0.0.69 vrf 0, [10/0]
                                           [15/0] via EDGE_T2 tunnel 172.31.0.65 vrf 0, [15/0]
```

b. BGP:

```
# get router info routing-table bgp
Routing table for VRF=0
B      10.0.3.0/24 [200/0] via 172.31.0.65 (recursive via EDGE_T1 tunnel 10.0.0.69
vrf 0 [10]), 04:32:53
                                           (recursive via EDGE_T2 tunnel 172.31.0.65
vrf 0 [15]), 04:32:53, [1/0]
```

Next, test by making the health checks over the spokes' H1\_T11 tunnel out of SLA. This should trigger traffic to start flowing from the spokes' H1\_T22 tunnel. Consequently, the SLA statuses are passed from the spoke to the hub, and the hub will start routing traffic to EDGE\_T2.

**To verify that the hub will start routing traffic to EDGE\_T2 when the spoke H1\_T11 tunnel is out of SLA:**

1. On Spoke\_1, display the status of the health checks for H1\_T11 and H1\_T22:

```
# diagnose sys sdwan health-check
Health Check(HUB):
Seq(1 H1_T11): state(alive), packet-loss(0.000%) latency(120.228), jitter(0.013), mos
(4.338), bandwidth-up(999999), bandwidth-dw(1000000), bandwidth-bi(1999999) sla_map=0x0
Seq(4 H1_T22): state(alive), packet-loss(0.000%) latency(0.220), jitter(0.008), mos
(4.404), bandwidth-up(999998), bandwidth-dw(1000000), bandwidth-bi(1999998) sla_map=0x1
```

2. Verify the routing tables.

a. Static:

```
# get router info routing-table static
Routing table for VRF=0
S      172.31.0.65/32 [15/0] via EDGE_T2 tunnel 172.31.0.65 vrf 0, [15/0]
                                           [15/0] via EDGE_T1 tunnel 10.0.0.69 vrf 0, [20/0]
```

The priority for EDGE\_T1 has changed from 10 to 20.

b. BGP:

```
# get router info routing-table bgp
Routing table for VRF=0
B      10.0.3.0/24 [200/0] via 172.31.0.65 (recursive via EDGE_T2 tunnel 172.31.0.65
vrf 0 [15]), 00:01:19
```



```
(recursive via EDGE_T1 tunnel 10.0.0.69
vrf 0 [20]), 00:01:19, [1/0]
```

EDGE\_T2 is now preferred. The priority for EDGE\_T1 has changed from 10 to 20.

Spoke\_1's SLA information for H1\_T11 embedded into the ICMP probes has now changed.

As a result, the hub sets the routes over each overlay as follows:

Hub SD-WAN member	Overlay	SLA status	Priority for IKE routes
1	EDGE_T1	0x0 – out of SLA	20
2	EDGE_T2	0x1 – within SLA	15

The BGP recursive routes inherit the priority based on the parent IKE routes. Since priority for IKE routes on EDGE\_T1 has changed to 20, recursively resolved BGP routes passing through EDGE\_T1 has also dropped to 20. As a result, hub to spoke\_1 traffic will go over EDGE\_T2.

## SD-WAN application monitor using FortiMonitor

The agent-based health check detection mode works with FortiMonitor to provide more accurate user level performance statistics. FortiMonitor acts as an agent and sends health check probes on behalf of the monitored FortiGate interface. FortiMonitor mimics a real user, and the probes return a more accurate application level performance. The SLA information collected from FortiMonitor is sent back to the FortiGate as the monitored interface's SLA information. These statistics can be used to gain a deeper insight into the SD-WAN traffic performance.

```
config system sdwan
  config health-check
    edit <name>
      set detect-mode agent-based
    next
  end
  config service
    edit <id>
      set agent-exclusive {enable | disable}
    next
  end
end
```


The following diagnostic commands can be used to view agent related metrics:

```
# diagnose sys link-monitor-passive agent <option>
```

list	List all the collected reports.
list-app	List the details of each application.
flush	Flush all the collected reports.
flush-app	Flush the details of all the applications.
agent-oif-map	List the agent and interface maps.

## Example

In this example, routing is achieved through SD-WAN rules. The agent-based health check detection mode creates the FortiMonitor IP address and FortiGate SD-WAN interface map.

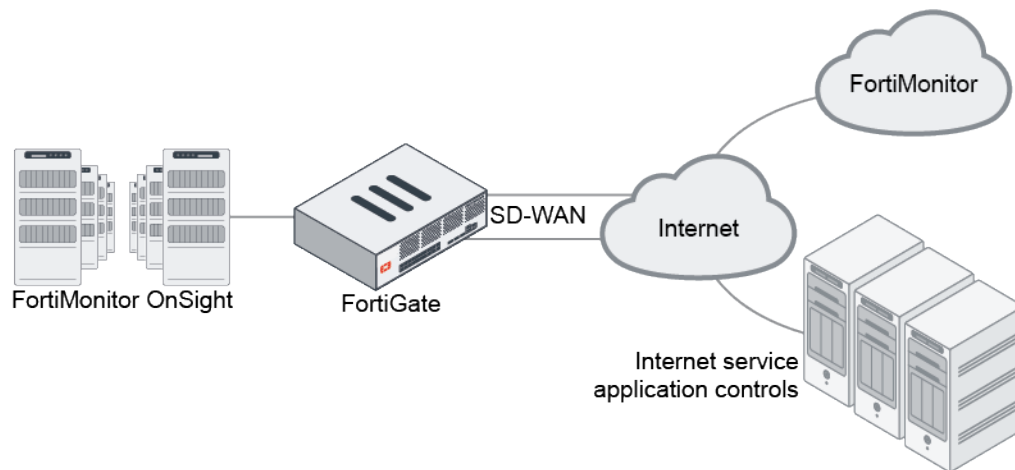

This example assumes that the FortiMonitor has already been added to the Security Fabric (see [Configuring FortiMonitor on page 2642](#) for detailed instructions). The FortiMonitor OnSight (client) can be configured for two or more IP addresses, and each IP address is capable of sending application probes to user-specified applications.

Specific routing is implemented on the FortiGate to ensure each FortiMonitor client collects performance statistics for only one SD-WAN member interface. The FortiMonitor is configured to send application-specific probes to measure that application's performance on a given SD-WAN member. The FortiGate uses the FortiMonitor performance statistics to determine link quality based on application performance by mapping the health check. The link quality for a given application can then be used to steer the matching application traffic with greater accuracy.

### To configure the FortiGate:

1. Configure the address objects for each FortiMonitor client:

```

config firewall address
    edit "FMR_OnSight1"
        set subnet 10.2.1.80 255.255.255.255
    next
    edit "MR_OnSight2"
        set subnet 10.2.1.81 255.255.255.255
    next
end
  
```

2. Configure the SD-WAN rules to ensure each OnSight client uses only one SD-WAN member, and map the FortiMonitor IP to an SD-WAN member (interface):

```

config system sdwan
    config service
        edit 1
            set dst "all"
            set src "FMR_OnSight1"
            set priority-members 1
            set agent-exclusive enable
        next
    end
end
  
```

```

        edit 2
            set dst "all"
            set src "FMR_OnSight2"
            set priority-members 2
            set agent-exclusive enable
        next
    end
end

```

### 3. Configure the SD-WAN health check:

```

config health-check
    edit "FMR"
        set detect-mode agent-based
        set members 1 2
        config sla
            edit 1
                next
            end
        next
    end
end

```

## To verify the SD-WAN member performance:

### 1. Verify the health check diagnostics:

```

# diagnose sys sdwan health-check
Health Check(FMR):
Seq(1 v1236): state(alive), packet-loss(0.000%) latency(183.214), jitter(0.124), mos
(4.225), bandwidth-up(999992), bandwidth-dw(999976), bandwidth-bi(1999968) sla_map=0x0
Seq(2 v1237): state(alive), packet-loss(0.000%) latency(182.946), jitter(0.100), mos
(4.226), bandwidth-up(999998), bandwidth-dw(999993), bandwidth-bi(1999991) sla_map=0x0

```

### 2. Verify the collected reports:

```

# diagnose sys link-monitor-passive agent list
v1236( 23) | src=10.2.1.80 | latency=183.2    20:27:24 | jitter=0.1    20:27:24 |
pktloss=0.0 % 20:27:24
v1237( 24) | src=10.2.1.81 | latency=182.9    20:27:24 | jitter=0.1    20:27:24 |
pktloss=0.0 % 20:27:24

```

### 3. Verify the details of each application:

```

# diagnose sys link-monitor-passive agent list-app
app_id=0x00000000, app=fortinet.com, dev=v1236(23)
    latency=183.2, jitter=0.1, pktloss=0.0, ntt=99.2, srt=384.8, app_err=0.0, 20:28:25
app_id=0x00000000, app=fortinet.com, dev=v1237(24)
    latency=183.1, jitter=0.5, pktloss=0.0, ntt=104.4, srt=377.8, app_err=0.0, 20:28:25

```

### 4. Verify the agent and interface maps:

```

# diagnose sys link-monitor-passive agent agent-oif-map
oif=v1236(23), src=10.2.1.80
oif=v1237(24), src=10.2.1.81

```

## SD-WAN rules

SD-WAN rules, which are sometimes called *service rules*, identify traffic of interest, and then route the traffic based on a strategy and the condition of the route or *link* between two devices. You can use many strategies to select the outgoing interface and many performance service level agreements (SLAs) to evaluate the link conditions.

Use the following topics to learn about and create SD-WAN rules for your needs:

- [SD-WAN rules overview on page 686](#)
- [Implicit rule on page 694](#)
- [Automatic strategy on page 698](#)
- [Manual strategy on page 699](#)
- [Best quality strategy on page 700](#)
- [Lowest cost \(SLA\) strategy on page 704](#)
- [Maximize bandwidth \(SLA\) strategy on page 707](#)
- [Manual interface speedtest on page 710](#)
- [Scheduled interface speedtest on page 711](#)
- [SD-WAN traffic shaping and QoS on page 713](#)
- [SDN dynamic connector addresses in SD-WAN rules on page 718](#)
- [Application steering using SD-WAN rules on page 721](#)
- [DSCP tag-based traffic steering in SD-WAN on page 734](#)
- [ECMP support for the longest match in SD-WAN rule matching on page 741](#)
- [Override quality comparisons in SD-WAN longest match rule matching on page 743](#)
- [Use an application category as an SD-WAN rule destination on page 746](#)

## SD-WAN rules overview

SD-WAN rules control how sessions are distributed to SD-WAN members. You can configure SD-WAN rules from the GUI and CLI.

From the GUI, go to *Network > SD-WAN > SD-WAN Rules*. When creating a new SD-WAN rule, or editing an existing SD-WAN rule, use the *Source* and *Destination* sections to identify traffic, and use the *Outgoing interfaces* section to configure WAN intelligence for routing traffic.

From the CLI, use the following command to configure SD-WAN rules:

```
config system sdwan
    config service
        edit <ID>
            next
        end
    end
end
```

The following topics describe the fields used to configure SD-WAN rules:

- [Fields for identifying traffic on page 687](#)
- [Fields for configuring WAN intelligence on page 690](#)
- [Additional fields for configuring WAN intelligence on page 693](#)

## Fields for identifying traffic

This topic describes the fields in an SD-WAN rule used for defining the traffic to which the rule applies. Some fields are available only in the CLI.

SD-WAN rules can identify traffic by a variety of means:

Address type	Source	Destination
IPv4/6	✓	✓
MAC	✓	✓
Group	✓	✓
FABRIC_DEVICE dynamic address	✓	✓
Users	✓	✓
User groups	✓	✓

Address type	Source	Destination
Application control (application aware routing)		✓
Internet service database (ISDB)		✓
BGP route tags		✓
Differentiated Services Code Point (DSCP) tags		✓

In the GUI, go to *Network > SD-WAN > SD-WAN Rules*. Click *Create New*, or double-click an existing rule to open it for editing. The *Source* and *Destination* sections are used to identify traffic for the rule:

In the CLI, edit the service definition ID number to identify traffic for the rule:

```
config system sdwan
  config service
    edit <ID>
    <CLI commands from the following tables>
    ...
  end
end
```

The following table describes the fields used for the name, ID, and IP version of the SD-WAN rule:

ID, Name, and IP version		
Field	CLI	Description
ID	<pre>config system sdwan   config service     edit &lt;ID&gt;     next   end end</pre>	ID is generated when the rule is created. You can only specify the ID from the CLI.
Name	<pre>set name &lt;string&gt;</pre>	The name does not need to relate to the traffic being matched, but it is good practice to have intuitive rule names.
IP version	<pre>set addr-mode &lt;ipv4   ipv6&gt;</pre>	The addressing mode can be IPv4 or IPv6.

ID, Name, and IP version		
Field	CLI	Description
		To configure in the GUI, IPv6 must be enabled from <i>System &gt; Feature Visibility</i> page.

The following table describes the fields used for source section of the SD-WAN rule:

Source		
Field	CLI	Description
Source address	set src <object> Can be negated from the CLI with set src-negate.	One or more address objects.
User group	set users <user object> set groups <group object>	Individual users or user groups
Source interface (input-device)	set input-device <interface name> Can be negated with set input-device-negate enable.	CLI only. Select one or more source interfaces.

The following table describes the fields used for the destination section of the SD-WAN rule:

Destination		
Field	CLI	Description
Address	set dst <object> set protocol <integer> set start-port <integer> set end-port <integer> Use set dst-negate enable to negate the address object.	One or more address objects. One protocol and one port range can be combined with the address object. If it is necessary for an SD-WAN rule to match multiple protocols or multiple port ranges, you can create a custom Internet Service.
Internet Service	set internet-service enable set internet-service-custom <name_1> <name_2> ... <name_n> set internet-service-custom-group <name_1> <name_2> ... <name_n> set internet-service-name <name_1> <name_2> ... <name_n> set internet-service-group <name_1> <name_2> ... <name_n>	One or more internet services or service groups.

Destination		
Field	CLI	Description
Application	<pre>set internet-service-app-ctrl   &lt;id_1&gt; &lt;id_2&gt; ... &lt;id_n&gt; set internet-service-app-ctrl-   group &lt;name_1&gt; &lt;name_2&gt;   ... &lt;name_n&gt; set internet-service-app-ctrl-   category &lt;id_1&gt; &lt;id_2&gt;   ... &lt;id_n&gt;</pre>	<p>One or more applications or application groups.</p> <p>Can be used with internet services or service group.</p>
Route tag (route-tag)	<pre>set route-tag &lt;integer&gt;</pre>	<p>CLI only.</p> <p>This replaces the <code>dst</code> field (if previously configured) and matches a BGP route tag configured in a route map. See <a href="#">Using BGP tags with SD-WAN rules on page 756</a>.</p>
TOS mask (tos-mask)	<pre>set tos-mask &lt;8-bit hex value&gt;</pre>	<p>CLI only.</p> <p>In order to leverage type of service (TOS) matching or DSCP matching on the IP header, the SD-WAN rule must specify the bit mask of the byte holding the TOS value. For example, a TOS mask of 0xe0 (11100000) matches the upper 3 bits.</p>
TOS (tos)	<pre>set tos &lt;8 bit hex value&gt;</pre>	<p>CLI only.</p> <p>The value specified here is matched after the <code>tos-mask</code> is applied.</p> <p>For example, the FortiGate receives DSCP values 110000 and 111011. (DSCP is the upper 6 bits of the TOS field – 11000000 and 11101100 respectively). Using the TOS value 0xe0 (11100000), only the second DSCP value is matched.</p>

By default, individual applications and application groups cannot be selected in SD-WAN rules. To enable this functionality in the GUI, go to *System > Feature Visibility* and enable *Application Detection Based SD-WAN*. In the CLI, enter:

```
config system global
  set gui-app-detection-sdwan enable
end
```

## Fields for configuring WAN intelligence

This topic describes the fields in an SD-WAN rule used for configuring WAN intelligence, which processes and routes traffic that matches the SD-WAN rule.



In the GUI, go to *Network > SD-WAN > SD-WAN Rules*. Click *Create New*, or double-click an existing rule to open it for editing. The *Outgoing Interfaces* section is used to configure WAN intelligence for the rule:

WAN intelligence is comprised of the following parts:

- [Interface or zone preference on page 691](#)
- [Strategy on page 692](#)
- [Performance SLA on page 692](#)

## Interface or zone preference

By default, the configured order of interfaces and/or zones in a rule are used. Interfaces and zones that are selected first have precedence over interfaces selected second and so on.

You can specify both interfaces and zones. When a zone is specified in the *Zone preference* field, it is equivalent to selecting each of the contained interface members in the *Interface preference* section. Interface members in a zone have lower priority than interfaces configured in the *Interface preference* section.

For example:

- There are 3 interfaces: port1, port2 and port3.
  - Port2 is in Zone1
  - Port1 and port3 belong to the default *virtual-wan-link* zone.
- An SD-WAN rule is created with *Interface preference* set to *port3* and *port1*, and *Zone preference* set to *Zone1*.

The SD-WAN rule prefers the interfaces in the following order:

1. port3
2. port1
3. port2

You can configure the interface and zone preference in the CLI:

```

config system sdwan
    config service
        edit <ID>
            set priority-members <integer>
            set priority-zone <interface>
        next
    end
end

```

## Strategy

Strategy dictates how the interface and/or zone order changes as link conditions change. You can use the following strategies:

- Automatic (`auto`): interfaces are assigned a priority based on quality. See [Automatic strategy on page 698](#).
- Manual (`manual`): interfaces are manually assigned a priority. See [Manual strategy on page 699](#).
- Best Quality (`priority`): interfaces are assigned a priority based on the `link-cost-factor` of the interface. See [Best quality strategy on page 700](#).
- Lowest cost (SLA) (`sla`): interfaces are assigned a priority based on selected SLA settings. See [Lowest cost \(SLA\) strategy on page 704](#).
- Maximize Bandwidth (SLA) (`load-balance`): traffic is distributed among all available links based on the selected load balancing algorithm. See [Maximize bandwidth \(SLA\) strategy on page 707](#).

## Performance SLA

The best quality, lowest cost, and maximize bandwidth strategies are the most intelligent modes, and they leverage SLA health checks to provide meaningful metrics for a given link. FortiGate uses the metrics to make intelligent decisions to route traffic.

Automatic and manual strategies have pre-configured logic that do not leverage SLA health checks.

The goal of the performance SLA is to measure the quality of each SD-WAN member link. The following methods can be used to measure the quality of a link:

- Active measurement
  - Health-check traffic is sent to a server with a variety of protocols options.
  - The following SLA metrics are measured on this probe traffic:
    - Latency
    - Jitter
    - Packet loss
- Passive measurement
  - SLA metrics are measured on real or live traffic, reducing the amount of probe traffic that is sent and received.
  - There is the option (`prefer passive`) to initiate probe traffic when no live traffic is present.

Performance SLA is utilized by `auto`, *Lowest Cost (SLA)*, *Maximize Bandwidth (SLA)*, and *Best Quality* strategies. *Lowest Cost (SLA)* and *Maximize Bandwidth SLA* use SLA targets in a pass or fail style to evaluate whether a link is considered for traffic. *Best Quality* compares a specific metric of the SLA to pick the best result.

Therefore it is integral to select or create an SLA target(s) that relates to the traffic targeted by the rule. It does not make sense to evaluate a public resource, such as YouTube, when the rule matches Azure traffic.

See [Performance SLA on page 651](#) for more details.

## Additional fields for configuring WAN intelligence

This topic describes the fields in an SD-WAN rule used for configuring WAN intelligence for egress traffic:

- [Forward and/or reverse differentiated services code point \(DSCP\) on page 693](#)
- [Default and gateway options on page 693](#)

For information about accessing fields for configuring WAN intelligence, see [Fields for configuring WAN intelligence on page 690](#).

### Forward and/or reverse differentiated services code point (DSCP)

The FortiGate differentiated services feature can be used to change the DSCP value for all packets accepted by a policy.

The packet's `DSCP` field for traffic initiating a session (forward) or for reply traffic (reverse) can be changed and enabled in each direction separately by configuring it in the firewall policy using the *Forward DSCP* and *Reverse DSCP* fields.

From the CLI:

```
config system sdwan
  config service
    edit <ID>
      ...
      set dscp-forward enable
      ...
    next
  end
end
```

<code>set dscp-forward enable</code>	Enable use of forward DSCP tag.
<code>set dscp-forward-tag 000000</code>	Forward traffic DSCP tag.
<code>set dscp-reverse enable</code>	Enable use of reverse DSCP tag.
<code>set dscp-reverse-tag 000000</code>	Reverse traffic DSCP tag.

### Default and gateway options

Following are additional gateway options that can be set only in the CLI:

```
config system sdwan
  config service
    edit <ID>
      ...
      set default enable
      ...
    next
  end
end
```

<code>set default [enable disable]</code>	Enable or disable use of SD-WAN as default service.
<code>set gateway [enable disable]</code>	Enable or disable SD-WAN service gateway.

By default, these settings are set to `disable`.

These two commands help adjust FortiGate route selection by affecting how the FortiGate consults the Forward Information Base (FIB).

In order to decide whether an SD-WAN policy-route can be matched, FortiGate performs the following FIB lookups:

- FIB best match for the destination must return an SD-WAN member.
- FIB route to the destination must exist over the desired SD-WAN member.

When `set default enable` is used with `set gateway enable`, FortiGate bypasses the FIB checks, and instead routes any matching traffic of the SD-WAN rule to the chosen SD-WAN member using the member's configured gateway. SD-WAN members must have a gateway configured.

When `set default disable` is used with `set gateway enable`, FortiGate keeps the first rule in effect but causes the second rule to change to:

- FIB route to the gateway IP address must exist over any interface.

See also [Fields for configuring WAN intelligence on page 690](#).

## Implicit rule

SD-WAN rules define specific policy routing options to route traffic to an SD-WAN member. When no explicit SD-WAN rules are defined, or if none of the rules are matched, then the default implicit rule is used.

In an SD-WAN configuration, the default route usually points to the SD-WAN interface, so each active member's gateway is added to the routing table's default route. FortiOS uses equal-cost multipath (ECMP) to balance traffic between the interfaces. One of five load balancing algorithms can be selected:

Source IP ( <code>source-ip-based</code> )	Traffic is divided equally between the interfaces, including the SD-WAN interface. Sessions that start at the same source IP address use the same path. This is the default selection.
Sessions ( <code>weight-based</code> )	<p>The workload is distributing based on the number of sessions that are connected through the interface.</p> <p>The weight that you assign to each interface is used to calculate the percentage of the total sessions that are allowed to connect through an interface, and the sessions are distributed to the interfaces accordingly.</p> <p>The sessions with the same source and destination IP are forwarded to the same path if the device model and kernel version supports route cache. However, it is not guaranteed and the route cache could be refreshed in case network events take place. In most cases where route cache is not supported, the sessions with the same source and destination IP will be load balanced between SD-WAN member interfaces.</p> <p>An interface's weight value cannot be zero.</p>
Spillover ( <code>usage-based</code> )	The interface is used until the traffic bandwidth exceeds the ingress and egress thresholds that you set for that interface. Additional traffic is then sent through the next SD-WAN interface member.
Source-Destination IP ( <code>source-dest-ip-based</code> )	Traffic is divided equally between the interfaces. Sessions that start at the same source IP address and go to the same destination IP address use the same path.

Volume (measured-volume-based)

The workload is distributing based on the number of packets that are going through the interface.

The volume weight that you assign to each interface is used to calculate the percentage of the total bandwidth that is allowed to go through an interface, and the bandwidth is distributed to the interfaces accordingly.

An interface's volume value cannot be zero.




You cannot exclude an interface from participating in load balancing using the implicit rule. If the weight or volume were set to zero in a previous FortiOS version, the value is treated as a one.

Interfaces with static routes can be excluded from ECMP if they are configured with a lower priority than other static routes.

## Examples

The following four examples demonstrate how to use the implicit rules (load-balance mode).

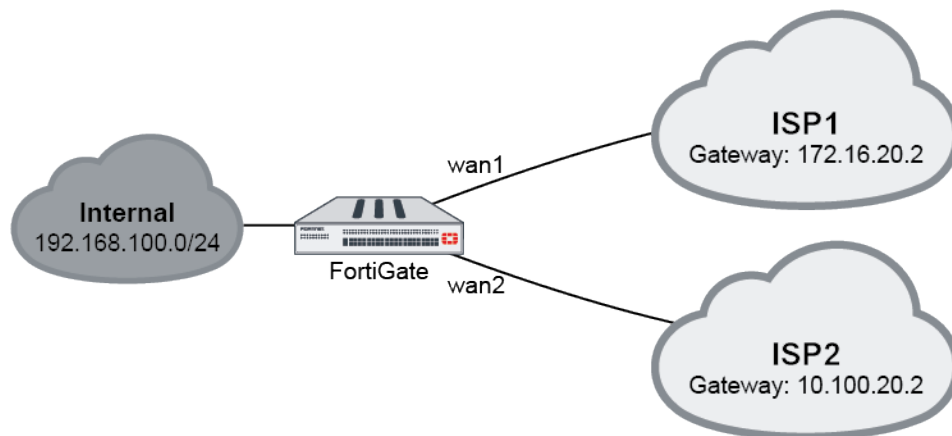

If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

### Example 1

Outgoing traffic is equally balanced between wan1 and wan2, using *source-ip-based* or *source-dest-ip-based* mode.

#### Using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for details.
2. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab.
3. Edit the *sd-wan* rule (the last default rule).
4. For the *Load Balancing Algorithm*, select either *Source IP* or *Source-Destination IP*.
5. Click *OK*.

**Using the CLI:**

1. Enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for details.
2. Set the load balancing algorithm:  
Source IP based:

```
config system sdwan
    set load-balance-mode source-ip-based
end
```

Source-Destination IP based:

```
config system sdwan
    set load-balance-mode source-dest-ip-based
end
```


**Example 2**

Outgoing traffic is balanced between wan1 and wan2 with a customized ratio, using *weight-based* mode: wan1 runs 80% of the sessions, and wan2 runs 20% of the sessions.

Sessions with the same source and destination IP addresses (`src-ip` and `dst-ip`) will be forwarded to the same path, but will still be considered in later session ratio calculations.

**Using the GUI:**

1. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab.
2. Edit the *sd-wan* rule (the last default rule).
3. For the *Load Balancing Algorithm*, select *Sessions*.
4. Enter 80 in the *wan1* field, and 20 in the *wan2* field.

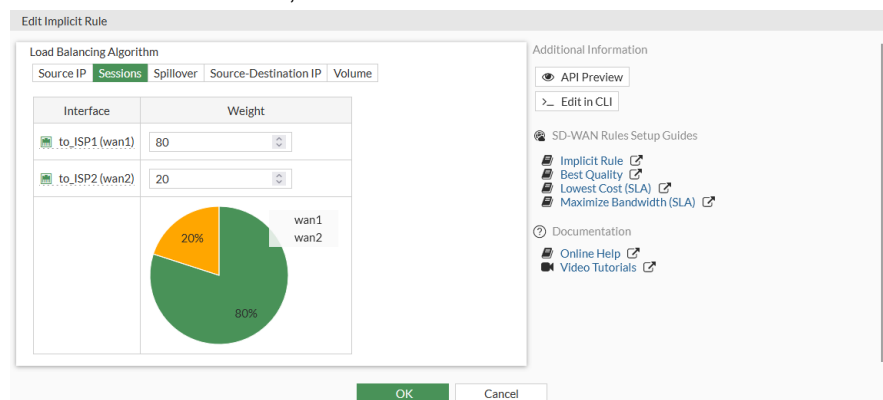

5. Click **OK**.

**Using the CLI:**

```
config system sdwan
    set load-balance-mode weight-based
    config members
        edit 1
            set interface "wan1"
            set weight 80
```

```
        next
    edit 2
        set interface "wan2"
        set weight 20
    next
end
end
```

### Example 3

Outgoing traffic is balanced between wan1 and wan2 with a customized ratio, using *measured-volume-based* mode: wan1 runs 80% of the volume, and wan2 runs 20% of the volume.

#### Using the GUI:

1. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab.
2. Edit the *sd-wan* rule (the last default rule).
3. For the *Load Balancing Algorithm*, select *Volume*.
4. Enter 80 in the *wan1* field, and 20 in the *wan2* field.
5. Click *OK*.

#### Using the CLI:

```
config system sdwan
    set load-balance-mode measured-volume-based
    config members
        edit 1
            set interface "wan1"
            set volume-ratio 80
        next
        edit 2
            set interface "wan2"
            set volume-ratio 20
        next
    end
end
```

### Example 4

Load balancing can be used to reduce costs when internet connections are charged at different rates. For example, if wan2 charges based on volume usage and wan1 charges a fixed monthly fee, we can use wan1 at its maximum bandwidth, and use wan2 for overflow.

In this example, wan1's bandwidth is 10Mbps down and 2Mbps up. Traffic will use wan1 until it reaches its spillover limit, then it will start to use wan2. Note that *auto-asic-offload* must be disabled in the firewall policy.

#### Using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for details.
2. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab.
3. Edit the *sd-wan* rule (the last default rule).
4. For the *Load Balancing Algorithm*, select *Spillover*.

5. Enter 10000 in the *wan1 Ingress Spillover Threshold* field, and 2000 in the *wan1 Egress Spillover Threshold* field.

Interface	Ingress Spillover Threshold	Egress Spillover Threshold
to_ISP1 (wan1)	10000 kbps	2000 kbps
to_ISP2 (wan2)	0 kbps	0 kbps

Additional Information:

- API Preview
- Edit in CLI
- SD-WAN Rules Setup Guides
  - Implicit Rule
  - Best Quality
  - Lowest Cost (SLA)
  - Maximize Bandwidth (SLA)
- Documentation
  - Online Help
  - Video Tutorials

OK Cancel

6. Click OK.

### Using the CLI:

```
config system sdwan
    set load-balance-mode usage-based
    config members
        edit 1
            set interface "wan1"
            set spillover-threshold 2000
            set ingress-spillover-threshold 10000
        next
    end
end
```

## Automatic strategy

The automatic strategy is a legacy rule that lets you select an outgoing interface based on its performance ranking compared to the other SD-WAN interfaces. This is achieved by applying a performance SLA to rank the interfaces, and then selecting the desired rank.

In this example, you have three SD-WAN interfaces to three different ISPs that all go to the public internet. WAN1 is your highest quality link and should be reserved for business critical traffic. WAN2 and WAN3 are redundant backup links. You noticed one non-critical application is taking up a lot of bandwidth and want to prioritize it to the lowest quality link at any given time.

### To configure automatic SD-WAN rules from the CLI:

```
config system sdwan
    config members
        edit 1
            set interface "wan1"
        next
        edit 2
            set interface "wan2"
        next
        edit 3
            set interface "wan3"
        next
    end
end
```



```
end
config health-check
    edit "non-critical application"
        set server "noncritical.application.com"
        set members 1 2 3
        config sla
            edit 1
                set latency-threshold 250
                set jitter-threshold 50
                set packetloss-threshold 3
            next
        end
    next
end
config service
    edit 1
        set name "non-critical application"
        set mode auto
        set quality-link 3
        set dst "non-critical-app-address-object"
        set health-check "non-critical application"
    next
end
```



The `auto` option is only available in the CLI. If you use the GUI to edit the rule, the `auto` option will be overwritten because you cannot select `auto` in the GUI.

---

## Manual strategy

In manual mode, no health checks are used. As a result, the decision making closer resembles logic than intelligence. SD-WAN manual rules are similar to regular policy-based routes, but have the added features of application-aware routing and BGP-tag routing. A manual strategy rule is comprised of the following parts:

- Defining the interfaces to be used
- Ordering the interfaces based on preference

### To configure manual SD-WAN rules from the GUI:

1. Go to *Network > SD-WAN*.
2. Select the *SD-WAN Rules* tab, and click *Create New*.

3. Set the following options to create a manual rule:

<b>Name</b>	Type a name for the rule.
<b>Source</b>	(Optional) Specify a <i>Source address</i> and/or <i>User group</i> .
<b>Destination</b>	Specify the destination using an <i>Address</i> object or an <i>Internet Service</i> or an <i>Application</i> .
<b>Zone preference</b>	Specify one or more SD-WAN interfaces or zones. The order in which the interfaces or zones are specified determines their priority when the rule is matched.

4. Set the remaining options as desired, and click *OK* to create the rule.

**To configure manual SD-WAN rules from the CLI:**

```
config system sdwan
  config members
    edit 1
      set interface "wan1"
    next
    edit 2
      set interface "wan2"
    next
  end
  config service
    edit 1
      set name "manual"
      set mode manual
      set priority-members 2 1
      set dst "DC_net"
      set hold-down-time 60
    next
  end
end
```



- The command `set mode manual` will not appear in the configuration because it is the default mode.
- The command `set hold-down-time <integer>` is an optional command that controls how long to wait before switching back to the primary interface in the event of a failover.

## Best quality strategy

When using *Best Quality* mode, SD-WAN will choose the best link to forward traffic by comparing the *link-cost-factor*. A link-cost factor is a specific metric of participating link(s) (such as, latency, packet loss, and so on) evaluated against a target that you define (such as a health-check server), for example, the latency of WAN1 and WAN2 to your datacenter. Below is a list of link-cost factors available to you:

GUI	CLI	Description
Latency	latency	Select a link based on latency.
Jitter	jitter	Select a link based on jitter.
Packet Loss	packet-loss	Select a link based on packet loss.
Downstream	inbandwidth	Select a link based on available bandwidth of incoming traffic.
Upstream	outbandwidth	Select a link based on available bandwidth of outgoing traffic.
Bandwidth	bandwidth	Select a link based on available bandwidth of bidirectional traffic.
Customized profile	custom-profile-1	Select link based on customized profile. If selected, set the following weights: <ul style="list-style-type: none"> <li>packet-loss-weight: Coefficient of packet-loss.</li> <li>latency-weight: Coefficient of latency.</li> <li>jitter-weight: Coefficient of jitter.</li> <li>bandwidth-weight: Coefficient of reciprocal of available bidirectional bandwidth.</li> </ul>

Although SD-WAN intelligence selects the best quality link according to the selected metric, by default a preference or advantage is given to the first configured SD-WAN member. This default is 10% and may be configured with the CLI command `set link-cost-threshold 10`.

Example of how `link-cost-threshold` works:

```
config system sdwan
  config members
    edit 1
      set interface "wan1"
    next
    edit 2
      set interface "wan2"
    next
  end
  config service
    edit 1
      set name "Best_Quality"
      set mode priority
      set priority-members 2 1
      set dst "DC_net"
      set health-check "DC_HealthCheck"
      set link-cost-factor latency
      set link-cost-threshold 10
    next
  end
end
```

In this example both WAN1 and WAN2 are assumed to have 200ms latency to the health-check server named `DC_HealthCheck`. Because WAN2 is specified before WAN1 in `priority-members`, SD-WAN parses the two interfaces metric as follows:

- WAN1: 200ms
- WAN2:  $200\text{ms} / (1+10\%) = \sim 182\text{ms}$

As a result, WAN2 is selected because the latency is lower.


If the *Downstream* (inbandwidth), *Upstream* (outbandwidth), or *Bandwidth* (bibandwidth) quality criteria is used, the FortiGate uses the upstream and downstream bandwidth values configured on the member interfaces to calculate bandwidth.

The interface bandwidth configuration can be done manually, or the interface speedtest can be used to populate the bandwidth values based on the speedtest results. See [Manual interface speedtest on page 710](#) for details.

#### To manually configure the upstream and downstream interface bandwidth values:

```
config system interface
  edit <interface>
    set estimated-upstream-bandwidth <speed in kbps>
    set estimated-downstream-bandwidth <speed in kbps>
  next
end
```

### Example

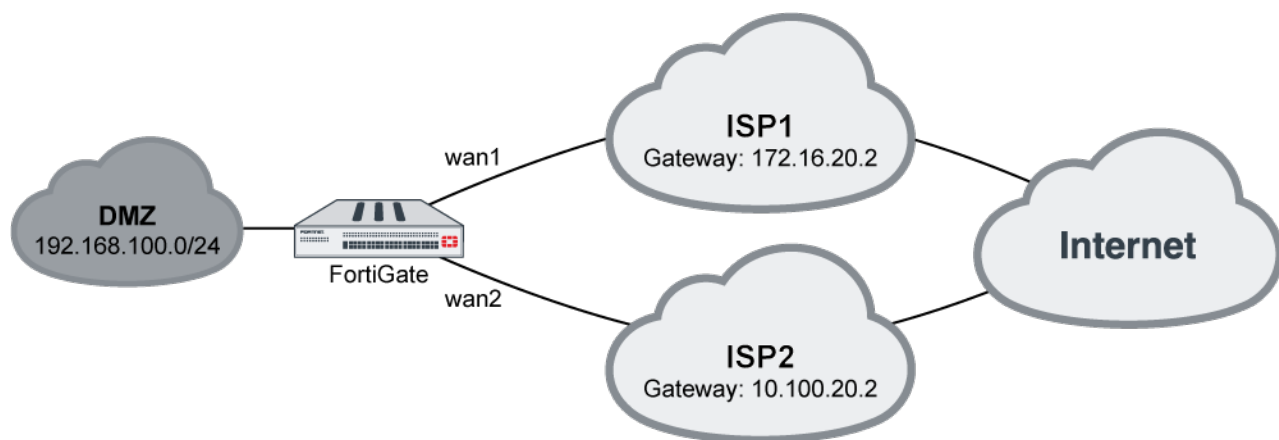

In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet, and you want Gmail services to use the link with the least latency.

#### To configure an SD-WAN rule to use Best Quality:

1. On the FortiGate, add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for more details.
2. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
3. Enter a name for the performance SLA, such as *google*, and set the *Server* to *google.com*. See [Health checks](#) for more details.
4. Click *OK*.
5. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
6. Enter a name for the rule, such as *gmail*.
7. Configure the following settings:

Priority Rule

Name

Source

Source address

User group

Destination

Address

Internet Service

Application

Outgoing Interfaces

Select a strategy for how outgoing interfaces will be chosen.

☐ Manual  
Manually assign outgoing interfaces.

☒ **Best Quality**  
The interface with the best measured performance is selected.

☐ **Lowest Cost (SLA)**  
The interface that meets SLA targets is selected. When there is a tie, the interface with the lowest assigned cost is selected.

☐ **Maximize Bandwidth (SLA)**  
Traffic is load balanced among interfaces that meet SLA targets.

Interface preference

Zone preference

Measured SLA

Quality criteria

Forward DSCP ☐

Reverse DSCP ☐

Status ☒ Enable ☐ Disable

Additional Information

[API Preview](#)

[SD-WAN Rules Setup Guides](#)

[Implicit Rule](#) [Best Quality](#) [Lowest Cost \(SLA\)](#) [Maximize Bandwidth \(SLA\)](#)

[Documentation](#)

[Online Help](#) [Video Tutorials](#)

OK Cancel

<b>Internet Service</b>	Google-Gmail
-------------------------	--------------

<b>Strategy</b>	Best Quality
-----------------	--------------

<b>Interface preference</b>	wan1 and wan2
-----------------------------	---------------

<b>Measured SLA</b>	google
---------------------	--------

<b>Quality criteria</b>	Latency
-------------------------	---------

8. Click OK.

### To configure an SD-WAN rule to use priority:

```
config system sdwan
config health-check
    edit "google"
        set server "google.com"
        set members 1 2
    next
end
config service
    edit 1
        set name "gmail"
        set mode priority
        set internet-service enable
        set internet-service-id 65646
        set health-check "google"
```

```

        set link-cost-factor latency
        set priority-members 1 2
    next
end
end

```

### To diagnose the Performance SLA status:

```
FGT # diagnose sys sdwan health-check google
```

```
Health Check(google):
```

```
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
```

```
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0
```

```
FGT # diagnose sys sdwan service 1
```

```
Service(1):
```

```

TOS(0x0/0x0), protocol(0: 1->65535), Mode(priority), link-cost-facotr(latency), link-
cost-threshold(10), health-check(google) Members:

```

```
1: Seq_num(2), alive, latency: 12.633, selected
```


```
2: Seq_num(1), alive, latency: 14.563, selected
```

```
Internet Service: Google-Gmail(65646)
```

As wan2 has a smaller latency, SD-WAN will put Seq\_num(2) on top of Seq\_num(1) and wan2 will be used to forward Gmail traffic.

## Lowest cost (SLA) strategy

When using *Lowest Cost (SLA)* mode (`sla` in the CLI), SD-WAN will choose the lowest cost link that satisfies SLA to forward traffic. The lowest possible cost is 0. If multiple eligible links have the same cost, the *Interface preference* order will be used to select a link.

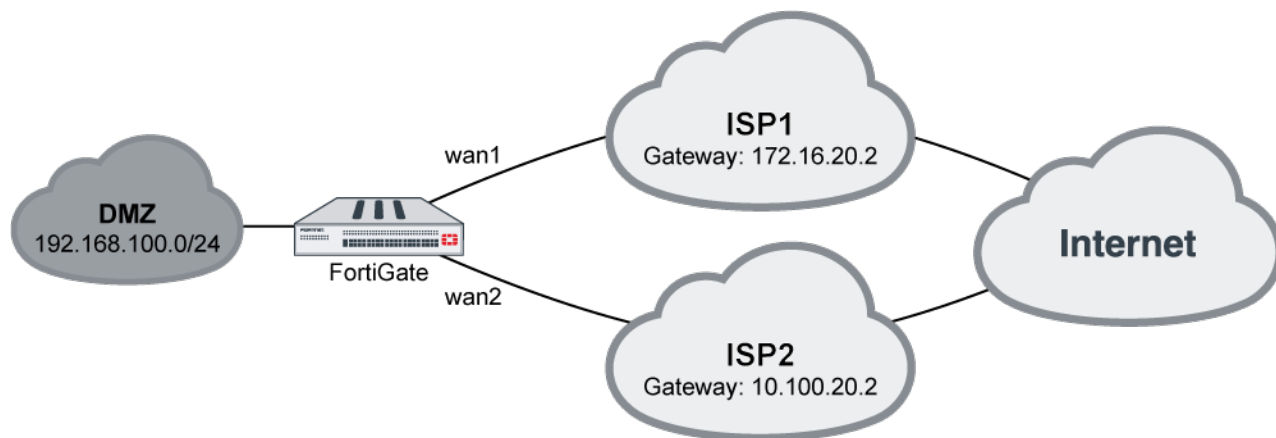

In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet. The cost of wan2 is less than that of wan1. You want to configure Gmail services to use the lowest cost interface, but the link quality must meet a standard of latency: 10ms, and jitter: 5ms.

### To configure an SD-WAN rule to use Lowest Cost (SLA):

1. On the FortiGate, add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for details.
2. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
3. Enter a name for the performance SLA, such as *google*, and set the *Server* to *google.com*.
4. Enable *SLA Target*. Set the *Latency threshold* to *10 ms*, and the *Jitter threshold* to *5 ms*. See [Health checks](#) for more details.
5. Click *OK*.
6. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
7. Enter a name for the rule, such as *gmail*.
8. Configure the following settings:

The screenshot shows the 'Priority Rule' configuration window for a rule named 'gmail'. The configuration is as follows:

- Name:** gmail
- Source:**
  - Source address: +
  - User group: +
- Destination:**
  - Address: +
  - Internet Service: Google-Gmail
  - Application: +
- Outgoing Interfaces:**
  - Select a strategy for how outgoing interfaces will be chosen.
    - ☐ Manual: Manually assign outgoing interfaces.
    - ☐ Best Quality: The interface with the best measured performance is selected.
    - ☒ **Lowest Cost (SLA)**: The interface that meets SLA targets is selected. When there is a tie, the interface with the lowest assigned cost is selected.
    - ☐ Maximize Bandwidth (SLA): Traffic is load balanced among interfaces that meet SLA targets.
  - Interface preference: to\_ISP1 (wan1), to\_ISP2 (wan2)
  - Zone preference: +
  - Required SLA target: google
  - Forward DSCP: ☐
  - Reverse DSCP: ☐
  - Status: ☒ Enable ☐ Disable

**SLA Details Table:**

	Packet Loss	Latency	Jitter
google		10.00ms	5.00ms
to_ISP1 (wan1)	0.00%	4.76ms	0.39ms
to_ISP2 (wan2)	0.00%	4.68ms	0.33ms

**Additional Information:**

- API Preview
- SD-WAN Rules Setup Guides
  - Implicit Rule
  - Best Quality
  - Lowest Cost (SLA)
  - Maximize Bandwidth (SLA)
- Documentation
  - Online Help
  - Video Tutorials

Buttons: OK, Cancel

**Internet Service** Google-Gmail

**Strategy** Lowest Cost (SLA)

**Interface preference** wan1 and wan2

**Required SLA target** google

9. Click *OK*.

**To configure an SD-WAN rule to use SLA:**

```

config system sdwan
  config members
    edit 1
      set interface "wan1"
      set cost 10
    next
    edit 2
      set interface "wan2"
      set cost 5
    next
  end
  config health-check
    edit "google"
      set server "google.com"
      set members 1 2
      config sla
        edit 1
          set latency-threshold 10
          set jitter-threshold 5
        next
      end
    next
  end
  config service
    edit 1
      set name "gmail"
      set mode sla
      set internet-service enable
      set internet-service-id 65646
      config sla
        edit "google"
          set id 1
        next
      end
      set priority-members 1 2
    next
  end
end

```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.



The CLI command `set minimum-sla-meet-members` allows you to specify the number of links that must meet SLA for the rule to take effect. If the number of members is less than the minimum set with this command, the rule will not take effect.

---

**To diagnose the Performance SLA status:**

```

FGT # diagnose sys sdwan health-check google
Health Check(google):

```



```
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0
```

```
FGT # diagnose sys sdwan service 1
```

```
Service(1): Address Mode(IPV4) flags=0x0
```

```
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
```

```
Members:<<BR>>
```

```
1: Seq_num(2), alive, sla(0x1), cfg_order(1), selected
```

```
2: Seq_num(1), alive, sla(0x1), cfg_order(0), selected
```

```
Internet Service: Google.Gmail(65646)
```

When both wan1 and wan2 meet the SLA requirements, Gmail traffic will only use wan2. If only wan1 meets the SLA requirements, Gmail traffic will only use wan1, even though it has a higher cost. If neither interface meets the requirements, wan2 will be used.

If both interface had the same cost and both met the SLA requirements, the first link configured in `set priority-members` would be used.

## Maximize bandwidth (SLA) strategy

When using *Maximize Bandwidth* mode (`load-balance` in the CLI), SD-WAN will choose all of the links that satisfies SLA to forward traffic based on a load balancing algorithm. The load balancing algorithm, or hash method, can be one of the following:

round-robin	All traffic are distributed to selected interfaces in equal portions and circular order. This is the default method, and the only option available when using the GUI.
source-ip-based	All traffic from a source IP is sent to the same interface.
source-dest-ip-based	All traffic from a source IP to a destination IP is sent to the same interface.
inbandwidth	All traffic are distributed to a selected interface with most available bandwidth for incoming traffic.
outbandwidth	All traffic are distributed to a selected interface with most available bandwidth for outgoing traffic.
bibandwidth	All traffic are distributed to a selected interface with most available bandwidth for both incoming and outgoing traffic.

When the `inbandwidth`, `outbandwidth`, or `bibandwidth` load balancing algorithm is used, the FortiGate will compare the bandwidth based on the configured upstream and downstream bandwidth values.

The interface speedtest can be used to populate the bandwidth values based on the speedtest results. See [Manual interface speedtest on page 710](#) for details.


### To manually configure the upstream and downstream bandwidth values:

```
config system interface
  edit <interface>
    set estimated-upstream-bandwidth <speed in kbps>
    set estimated-downstream-bandwidth <speed in kbps>
```

```
next
end
```



ADVPN is not supported in this mode.

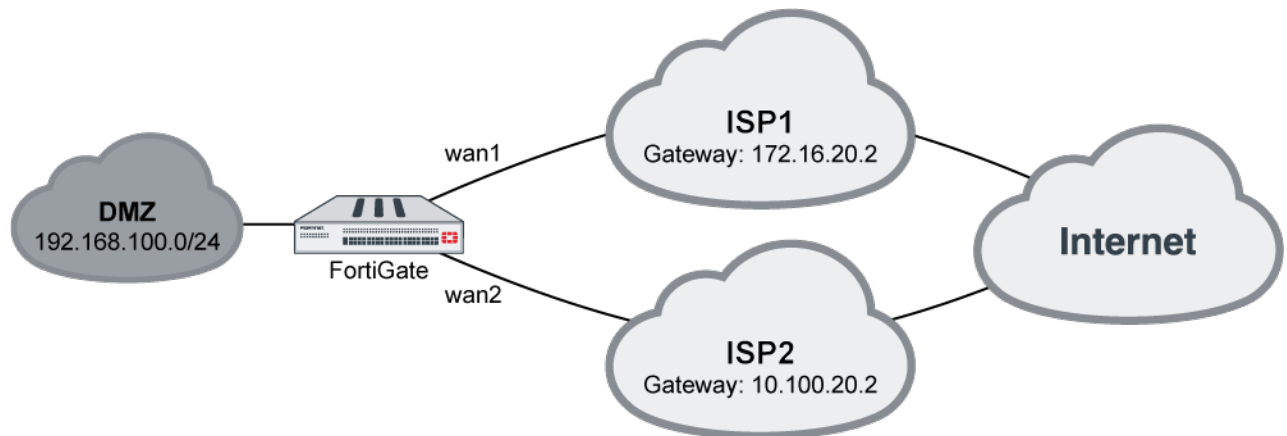

In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet. You want to configure Gmail services to use both of the interface, but the link quality must meet a standard of latency: 10ms, and jitter: 5ms. This can maximize the bandwidth usage.

#### To configure an SD-WAN rule to use Maximize Bandwidth (SLA):

1. On the FortiGate, add wan1 and wan2 as SD-WAN members, then add a policy and static route. See [SD-WAN quick start on page 630](#) for details.
2. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
3. Enter a name for the performance SLA, such as *google*, and set the *Server* to *google.com*.
4. Enable *SLA Target*. Set the *Latency threshold* to *10 ms*, and the *Jitter threshold* to *5 ms*. See [Health checks](#) for more details.
5. Click *OK*.
6. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
7. Enter a name for the rule, such as *gmail*.

## 8. Configure the following settings:

Priority Rule

Name:

Source

Source address:

User group:

Destination

Address:

Internet Service:

Application:

Outgoing Interfaces

Select a strategy for how outgoing interfaces will be chosen.

☐ Manual  
Manually assign outgoing interfaces.

☐ Best Quality  
The interface with the best measured performance is selected.

☐ Lowest Cost (SLA)  
The interface that meets SLA targets is selected. When there is a tie, the interface with the lowest assigned cost is selected.

☒ Maximize Bandwidth (SLA)  
Traffic is load balanced among interfaces that meet SLA targets.

Interface preference:

Zone preference:

Required SLA target:

Forward DSCP: ☐

Reverse DSCP: ☐

Status:

SLA Details

	Packet Loss	Latency	Jitter
google		10.00ms	5.00ms
to_ISP1 (wan1)	0.00%	4.76ms	0.39ms
to_ISP2 (wan2)	0.00%	4.68ms	0.33ms

Additional Information

SD-WAN Rules Setup Guides

- [Implicit Rule](#)
- [Best Quality](#)
- [Lowest Cost \(SLA\)](#)
- [Maximize Bandwidth \(SLA\)](#)

Documentation

- [Online Help](#)
- [Video Tutorials](#)

OK Cancel

Field	Setting
Internet Service	Google-Gmail
Strategy	Maximize Bandwidth (SLA)
Interface preference	wan1 and wan2
Required SLA target	google

## 9. Click OK.

## To configure an SD-WAN rule to use SLA:

```
config system sdwan
config health-check
    edit "google"
        set server "google.com"
        set members 1 2
    config sla
        edit 1
            set latency-threshold 10
            set jitter-threshold 5
        next
    end
next
end
config service
```

```

edit 1
    set name "gmail"
    set addr-mode ipv4
    set mode load-balance
    set hash-mode round-robin
    set internet-service enable
    set internet-service-name Google-Gmail
    config sla
        edit "google"
            set id 1
        next
    end
    set priority-members 1 2
next
end
end

```



The CLI command `set minimum-sla-meet-members` allows you to specify the number of links that must meet SLA for the rule to take effect. If the number of members is less than the minimum set with this command, the rule will not take effect.

### To diagnose the performance SLA status:

```
FGT # diagnose sys sdwan health-check google
```

```
Health Check(google):
```

```
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
```

```
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0
```

```
FGT # diagnose sys sdwan service 1
```

```
Service(1): Address Mode(IPV4) flags=0x0
```

```
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(load-balance)
```

```
Members:<<BR>>
```

```
1: Seq_num(1), alive, sla(0x1), num of pass(1), selected
```

```
2: Seq_num(2), alive, sla(0x1), num of pass(1), selected
```

```
Internet Service: Google.Gmail(65646)
```


When both wan1 and wan2 meet the SLA requirements, Gmail traffic will use both wan1 and wan2. If only one of the interfaces meets the SLA requirements, Gmail traffic will only use that interface.

If neither interface meets the requirements but health-check is still alive, then wan1 and wan2 tie. The traffic will try to balance between wan1 and wan2, using both interfaces to forward traffic.

## Manual interface speedtest


An interface speedtest can be manually performed on WAN interfaces in the GUI. The results of the test can be added to the interface's *Estimated bandwidth*. The estimated upstream and downstream bandwidths can be used in SD-WAN service rules to determine the best link to use when either Maximize Bandwidth or Best Quality strategies are selected.

An SD-WAN Network Monitor license is required to use the speedtest. The *License* widget and the *System > FortiGuard* page show the license status.

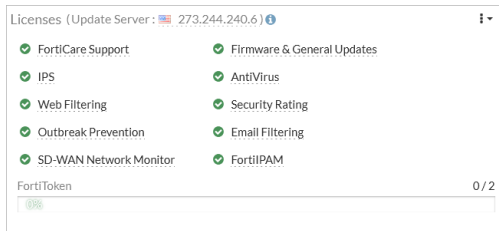

### To run an interface speedtest in the GUI:

1. Go to *Network > Interfaces*.
2. Edit a WAN interface. The interfaces can be grouped by role using the grouping dropdown on the right side of the toolbar.
3. Click *Execute speed test* in the right pane.

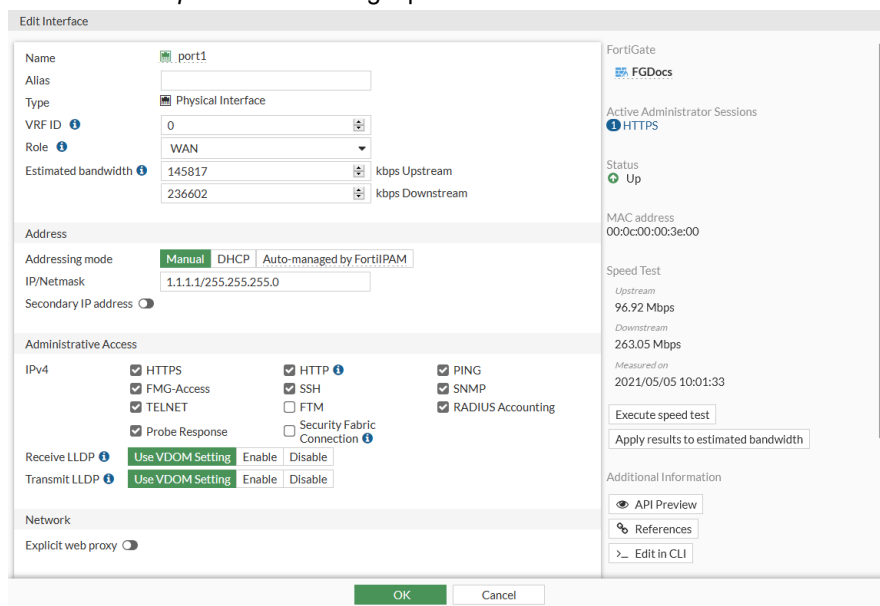

4. When the test completes, click *OK* in the *Confirm* pane to apply the results to the estimated bandwidth. The results can also be applied later by clicking *Apply results to estimated bandwidth*. The speedtest results are used to populate the *Estimated bandwidth* fields.
5. Click *OK*.



The FortiGate must be connected to FortiGuard, and able to reach either the AWS or Google speedtest servers.

## Scheduled interface speedtest

The SD-WAN Network Monitor service supports running a speed test based on a schedule. The test results are automatically updated in the interface `measured-upstream-bandwidth` and `measured-downstream-bandwidth` fields. These fields do not impact the interface inbound bandwidth, outbound bandwidth, estimated upstream bandwidth, or estimated downstream bandwidth settings.

An SD-WAN Network Monitor license is required to use the speedtest. The *License* widget and the *System > FortiGuard* page show the license status.

When the scheduled speed tests run, it is possible to temporarily bypass the bandwidth limits set on the interface and configure custom maximum or minimum bandwidth limits. These configurations are optional.

```
config system speed-test-schedule
  edit <interface>
    set schedules <schedule> ...
    set update-inbandwidth enable {enable | disable}
    set update-outbandwidth enable {enable | disable}
    set update-inbandwidth-maximum <integer>
    set update-inbandwidth-minimum <integer>
    set update-outbandwidth-maximum <integer>
    set update-outbandwidth-minimum <integer>
  next
end
```

update-inbandwidth enable {enable   disable}	Enable/disable bypassing the interface's inbound bandwidth setting.
update-outbandwidth enable {enable   disable}	Enable/disable bypassing the interface's outbound bandwidth setting.
update-inbandwidth-maximum <integer>	Maximum downloading bandwidth to be used in a speed test, in Kbps (0 - 16776000).
update-inbandwidth-minimum <integer>	Minimum downloading bandwidth to be considered effective, in Kbps (0 - 16776000).
update-outbandwidth-maximum <integer>	Maximum uploading bandwidth to be used in a speed test, in Kbps (0 - 16776000).
update-outbandwidth-minimum <integer>	Minimum uploading bandwidth to be considered effective, in Kbps (0 - 16776000).

In the following example, a speed test is scheduled on port1 at 10:00 AM, and another one at 14:00 PM.

### To run a speed test based on a schedule:

#### 1. Configure the recurring schedules:

```
config firewall schedule recurring
  edit "10"
    set start 10:00
    set end 12:00
    set day monday tuesday wednesday thursday friday
  next
  edit "14"
    set start 14:00
    set end 16:00
    set day monday tuesday wednesday thursday friday
  next
end
```

**2. Configure the speed test schedule:**

```
config system speed-test-schedule
  edit "port1"
    set schedules "10" "14"
    set update-inbandwidth enable
    set update-outbandwidth enable
    set update-inbandwidth-maximum 60000
    set update-inbandwidth-minimum 10000
    set update-outbandwidth-maximum 50000
    set update-outbandwidth-minimum 10000
  next
end
```

**3. View the speed test results:**

```
config system interface
  edit port1
    get | grep measure
    measured-upstream-bandwidth: 23691
    measured-downstream-bandwidth: 48862
    bandwidth-measure-time: Wed Jan 27 14:00:39 2021
  next
end
```


## SD-WAN traffic shaping and QoS

Use a traffic shaper in a firewall shaping policy to control traffic flow. You can use it to control maximum and guaranteed bandwidth, or put certain traffic to one of the three different traffic priorities: high, medium, or low.

An advanced shaping policy can classify traffic into 30 groups. Use a shaping profile to define the percentage of the interface bandwidth that is allocated to each group. Each group of traffic is shaped to the assigned speed limit based on the outgoing bandwidth limit configured on the interface.

For more information, see [Traffic shaping on page 1188](#).

### Sample topology

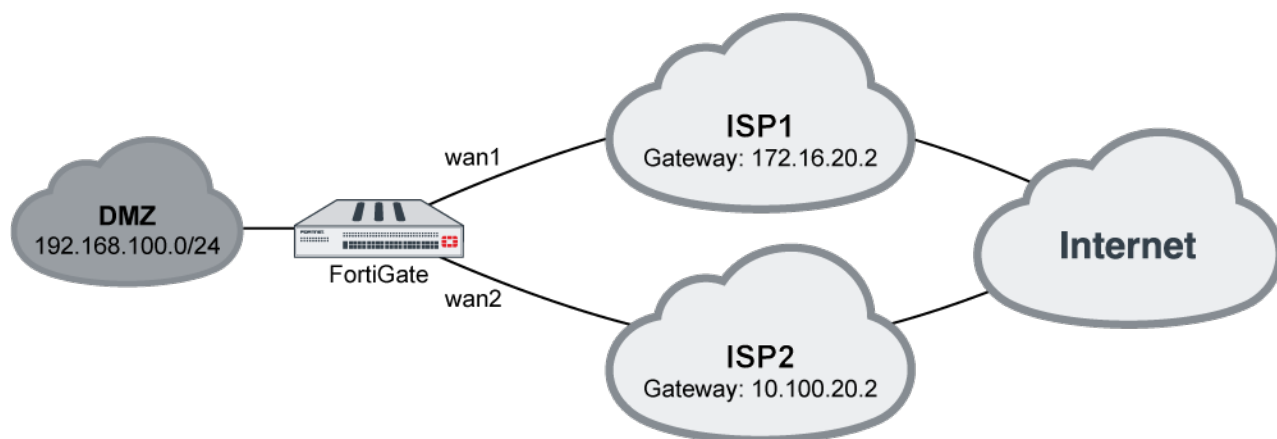

## Sample configuration

This example shows a typical customer usage where the customer's SD-WAN uses the default zone, and has two member: wan1 and wan2, each set to 10Mb/s.

An overview of the procedures to configure SD-WAN traffic shaping and QoS with SD-WAN includes:

1. Give HTTP/HTTPS traffic high priority and give FTP low priority so that if there are conflicts, FortiGate will forward HTTP/HTTPS traffic first.
2. Even though FTP has low priority, configure FortiGate to give it a 1Mb/s guaranteed bandwidth on each SD-WAN member so that if there is no FTP traffic, other traffic can use all the bandwidth. If there is heavy FTP traffic, it can still be guaranteed a 1Mb/s bandwidth.
3. Traffic going to specific destinations such as a VOIP server uses wan1 to forward, and SD-WAN forwards with an Expedited Forwarding (EF) DSCP tag 101110.

### To configure SD-WAN traffic shaping and QoS with SD-WAN in the GUI:

1. On the FortiGate, add wan1 and wan2 as SD-WAN members, then add a policy and static route.  
See [SD-WAN quick start on page 630](#).
2. Add a firewall policy with *Application Control* enabled. See [Configuring firewall policies for SD-WAN on page 633](#).
3. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shapers* tab, and edit *low-priority*.
  - a. Enable *Guaranteed Bandwidth* and set it to 1000 kbps.
4. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
  - a. Name the traffic shaping policy, for example, *HTTP-HTTPS*.
  - b. Set the following:

<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>all</i>
<b>Service</b>	<i>HTTP and HTTPS</i>
<b>Outgoing interface</b>	<i>virtual-wan-link</i>
<b>Shared Shaper</b>	Enable and set to <i>high-priority</i>
<b>Reverse Shaper</b>	Enable and set to <i>high-priority</i>

- c. Click *OK*.
5. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
    - a. Name the traffic shaping policy, for example, *FTP*.
    - b. Set the following:

<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>all</i>
<b>Service</b>	<i>FTP, FTP_GET, and FTP_PUT</i>
<b>Outgoing interface</b>	<i>virtual-wan-link</i>
<b>Shared Shaper</b>	Enable and set to <i>low-priority</i>
<b>Reverse Shaper</b>	Enable and set to <i>low-priority</i>

- c. Click *OK*



6. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
  - a. Enter a name for the rule, such as *Internet*.
  - b. In the *Destination* section, click *Address* and select the VoIP server that you created in the firewall address.
  - c. Under *Outgoing Interfaces* select *Manual*.
  - d. For *Interface preference* select *wan1*.
  - e. Click *OK*.
7. Use CLI commands to modify DSCP settings. See the DSCP CLI commands below.

**To configure the firewall policy using the CLI:**

```
config firewall policy
  edit 1
    set name "1"
    set srcintf "dmz"
    set dstintf "virtual-wan-link"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set application-list "default"
    set nat enable
  next
end
```

**To configure the firewall traffic shaper priority using the CLI:**

```
config firewall shaper traffic-shaper
  edit "high-priority"
    set maximum-bandwidth 1048576
    set per-policy enable
  next
  edit "low-priority"
    set guaranteed-bandwidth 1000
    set maximum-bandwidth 1048576
    set priority low
    set per-policy enable
  next
end
```

**To configure the firewall traffic shaping policy using the CLI:**

```
config firewall shaping-policy
  edit 1
    set name "http-https"
    set service "HTTP" "HTTPS"
    set dstintf "virtual-wan-link"
    set traffic-shaper "high-priority"
    set traffic-shaper-reverse "high-priority"
    set srcaddr "all"
    set dstaddr "all"
  next
```

```

edit 2
    set name "FTP"
    set service "FTP" "FTP_GET" "FTP_PUT"
    set dstintf "virtual-wan-link"
    set traffic-shaper "low-priority"
    set traffic-shaper-reverse "low-priority"
    set srcaddr "all"
    set dstaddr "all"
next
end

```

### To configure SD-WAN traffic shaping and QoS with SD-WAN in the CLI:

```

config system sdwan
    set status enable
    config members
        edit 1
            set interface "wan1"
            set gateway 172.16.20.2
        next
        edit 2
            set interface "wan2"
            set gateway 10.100.20.2
        next
    end
    config service
        edit 1
            set name "SIP"
            set priority-members 1
            set dst "voip-server"
            set dscp-forward enable
            set dscp-forward-tag 101110
        next
    end
end

```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

### To use the diagnose command to check if specific traffic is attached to the correct traffic shaper:

```

# diagnose firewall iprope list 100015

policy index=1 uuid_idx=0 action=accept
flag (0):
shapers: orig=high-priority(2/0/134217728) reply=high-priority(2/0/134217728)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=0 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(2): 36 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=6,

```

```

service(2):
    [6:0x0:0/(1,65535)->(80,80)] helper:auto
    [6:0x0:0/(1,65535)->(443,443)] helper:auto

policy index=2 uuid_idx=0 action=accept
flag (0):
shapers: orig=low-priority(4/128000/134217728) reply=low-priority(4/128000/134217728)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=0 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(2): 36 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
service(3):
    [6:0x0:0/(1,65535)->(21,21)] helper:auto
    [6:0x0:0/(1,65535)->(21,21)] helper:auto
    [6:0x0:0/(1,65535)->(21,21)] helper:auto

```

### To use the diagnose command to check if the correct traffic shaper is applied to the session:

```

# diagnose sys session list
session info: proto=6 proto_state=01 duration=11 expire=3599 timeout=3600 flags=00000000
sockflag=00000000 sockport=0 av_idx=0 use=5
origin-shaper=low-priority prio=4 guarantee 128000Bps max 1280000Bps traffic 1050Bps drops
0B
reply-shaper=
per_ip_shaper=
class_id=0 shaping_policy_id=2 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty npu npd os mif route_preserve
statistic(bytes/packets/allow_err): org=868/15/1 reply=752/10/1 tuples=2
tx speed(Bps/kbps): 76/0 rx speed(Bps/kbps): 66/0
orgin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58241->172.16.200.55:21(172.16.200.1:58241)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58241(10.1.100.11:58241)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=4
serial=0003255f tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id = 00000000
dd_type=0 dd_mode=0
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: offload-denied helper
total session 1

```

### To use the diagnose command to check the status of a shared traffic shaper:

```

# diagnose firewall shaper traffic-shaper list

name high-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 0 KB/sec
current-bandwidth 0 B/sec

```

```
priority 2
tos ff
packets dropped 0
bytes dropped 0

name low-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
tos ff
packets dropped 0
bytes dropped 0

 
name high-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 0 KB/sec
current-bandwidth 0 B/sec
priority 2
policy 1
tos ff
packets dropped 0
bytes dropped 0

name low-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
policy 2
tos ff
packets dropped 0
bytes dropped 0
```

## SDN dynamic connector addresses in SD-WAN rules

SDN dynamic connector addresses can be used in SD-WAN rules. FortiGate supports both public (AWS, Azure, GCP, OCI, AliCloud) and private (Kubernetes, VMware ESXi and NSX, OpenStack, ACI, Nuage) SDN connectors.

The configuration procedure for all of the supported SDN connector types is the same. This example uses an Azure public SDN connector.



There are four steps to create and use an SDN connector address in an SD-WAN rule:

1. Configure the FortiGate IP address and network gateway so that it can reach the Internet.
2. [Create an Azure SDN connector.](#)
3. [Create a firewall address to associate with the configured SDN connector.](#)
4. [Use the firewall address in an SD-WAN service rule.](#)

**To create an Azure SDN connector:**

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.
3. In the *Public SDN* section, click *Microsoft Azure*.
4. Enter the following:

<b>Name</b>	azure1
<b>Status</b>	Enabled
<b>Update Interval</b>	Use Default
<b>Server region</b>	Global
<b>Directory ID</b>	942b80cd-1b14-42a1-8dcf-4b21dece61ba
<b>Application ID</b>	14dbd5c5-307e-4ea4-8133-68738141feb1
<b>Client secret</b>	xxxxxx
<b>Resource path</b>	disabled

5. Click *OK*.

**To create a firewall address to associate with the configured SDN connector:**

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Enter the following:

<b>Category</b>	Address
<b>Name</b>	azure-address
<b>Type</b>	Dynamic
<b>Sub Type</b>	Fabric Connector Address
<b>SDN Connector</b>	azure1
<b>SDN address type</b>	Private
<b>Filter</b>	SecurityGroup=edsouza-centos
<b>Interface</b>	Any

4. Click **OK**.

#### To use the firewall address in an SD-WAN service rule:

1. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
2. Set the *Name* to *Azure1*.
3. For the *Destination Address* select *azure-address*.
4. Configure the remaining settings as needed. See [SD-WAN rules on page 686](#) for details.
5. Click **OK**.

## Diagnostics

Use the following CLI commands to check the status of and troubleshoot the connector.

#### To see the status of the SDN connector:

```
# diagnose sys sdn status
```

SDN Connector	Type	Status	Updating	Last update
-----	-----	-----	-----	-----
azure1	azure	connected	no	n/a

#### To debug the SDN connector to resolve the firewall address:

```
# diagnose debug application azd -1
Debug messages will be on for 30 minutes.

...
azd sdn connector azure1 start updating IP addresses
azd checking firewall address object azure-address-1, vd 0
IP address change, new list:
10.18.0.4
10.18.0.12
...
...

# diagnose sys sdwan service

Service(2): Address Mode(IPV4) flags=0x0
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Service role: standalone
```

```
Member sub interface:
Members:
  1: Seq_num(1), alive, selected
Dst address:
  10.18.0.4 - 10.18.0.4
  10.18.0.12 - 10.18.0.12
  ... ..
  ... ..
  ... ..
```

## Application steering using SD-WAN rules

This topic covers how to use application steering in a topology with multiple WAN links. The following examples illustrate how to use different strategies to perform application steering to accommodate different business needs:

- [Application matching on page 721](#)
- [Static application steering with a manual strategy on page 722](#)
- [Dynamic application steering with lowest cost and best quality strategies on page 725](#)

By default, individual applications and application groups cannot be selected in SD-WAN rules. To enable this functionality in the GUI, go to *System > Feature Visibility* and enable *Application Detection Based SD-WAN*. In the CLI, enter:

```
config system global
  set gui-app-detection-sdwan enable
end
```




For application based steering to work, application control must be enabled in a policy. See [Application control on page 1395](#).

---

## Application matching

To apply application steering, SD-WAN service rules match traffic based on the applications that are in the application signature database. To view the signatures, go to *Security Profiles > Application Signatures* and select *Signature*.

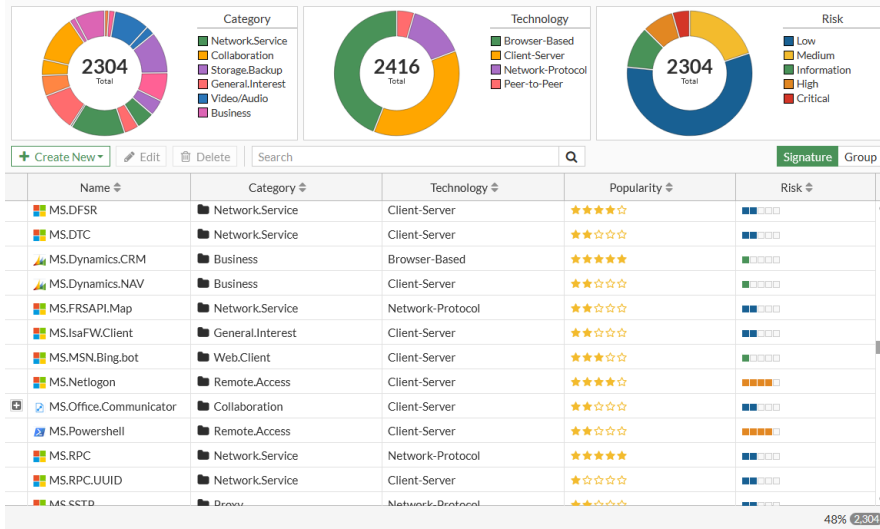

On the first session that passes through, the IPS engine processes the traffic in the application layer to match it to a signature in the application signature database. The first session does not match any SD-WAN rules because the signature has not been recognized yet. When the IPS engine recognizes the application, it records the 3-tuple IP address, protocol, and port in the application control Internet Service ID list. To view the application and corresponding 3-tuple:

```
# diagnose sys sdwan internet-service-app-ctrl-list [app ID]
52.114.142.254
Microsoft.Teams (43541 4294837333): 52.114.142.254 6 443 Fri Jun 18 13:52:18 2021
```

The recognized application and 3-tuple stay in the application control list for future matches to occur. If there are no hits on the entry for eight hours, the entry is deleted.




For services with multiple IP addresses, traffic might not match the expected SD-WAN rule because the traffic is destined for an IP address that has not previously been recognized by the FortiGate. The `diagnose sys sdwan internet-service-app-ctrl-list` command can be used to help troubleshoot such situations.

## Static application steering with a manual strategy

This example covers a typical usage scenario where the SD-WAN has two members: MPLS and DIA. DIA is primarily used for direct internet access to internet applications, such as Office365, Google applications, Amazon, and Dropbox. MPLS is primarily used for SIP, and works as a backup when DIA is not working.



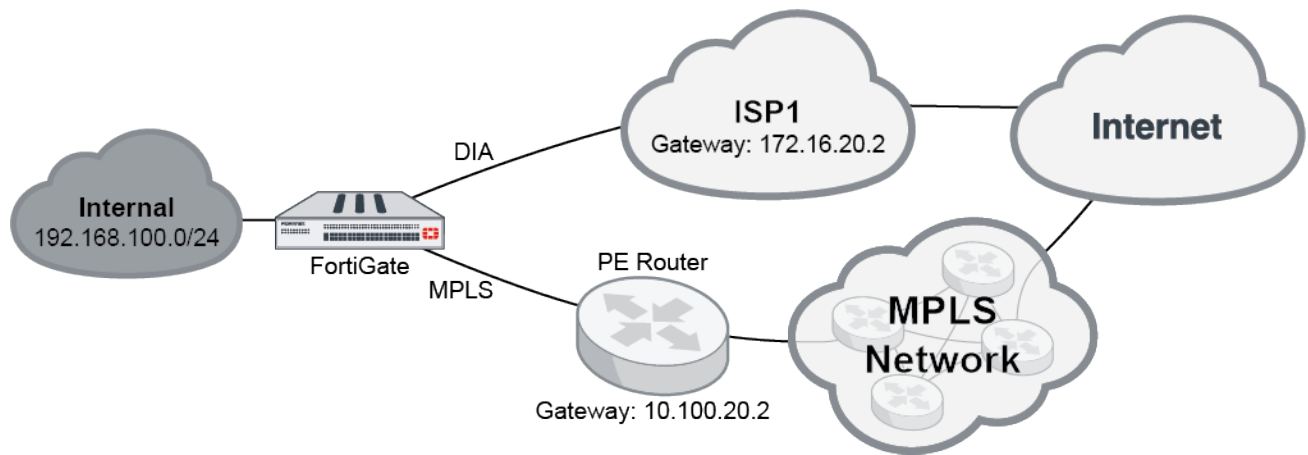

This example configures all SIP traffic to use MPLS while all other traffic uses DIA. If DIA is not working, the traffic will use MPLS.

By default, individual applications and application groups cannot be selected in SD-WAN rules. To enable this functionality in the GUI, go to *System > Feature Visibility* and enable *Application Detection Based SD-WAN*. In the CLI, enter:

```
config system global
    set gui-app-detection-sdwan enable
end
```

#### To configure an SD-WAN rule to use SIP and DIA in the GUI:

1. Add port1 (DIA) and port2 (MPLS) as SD-WAN members, and configure a static route. See [Configuring the SD-WAN interface on page 631](#) for details.
2. Create a firewall policy with an *Application Control* profile configured. See [Configuring firewall policies for SD-WAN on page 633](#) for details.
3. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
4. Enter a name for the rule, such as *SIP*.
5. Click the *Application* field and select the applicable SIP applications from the *Select Entries* panel.
6. Under *Outgoing Interfaces*, select *Manual*.
7. For *Interface preference*, select *MPLS*.
8. Click *OK*.
9. Click *Create New* to create another rule.
10. Enter a name for the rule, such as *Internet*.
11. Click the *Address* field and select *all* from the panel.
12. Under *Outgoing Interfaces*, select *Manual*.
13. For *Interface preference*, select *DIA*.
14. Click *OK*.

#### To configure the firewall policy using the CLI:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf "virtual-wan-link"
```

```
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set fsso disable
        set application-list "default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

### To configure an SD-WAN rule to use SIP and DIA using the CLI:

```
config system sdwan
    set status enable
    config members
        edit 1
            set interface "MPLS"
        next
        edit 2
            set interface "DIA"
        next
    end
    config service
        edit 1
            set name "SIP"
            set internet-service enable
            set internet-service-app-ctrl 34640 152305677 38938 26180 26179 30251
            set priority-members 2
        next
        edit 2
            set name "Internet"
            set dst "all"
            set priority-members 1
        next
    end
end
```

All SIP traffic uses MPLS. All other traffic goes to DIA. If DIA is broken, the traffic uses MPLS. If you use VPN instead of MPLS to run SIP traffic, you must configure a VPN interface, for example vpn1, and then replace member 1 from MPLS to vpn1 for SD-WAN member.



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

### To use the diagnose command to check performance SLA status using the CLI:

```
# diagnose sys sdwan service 1

Service(1): Address Mode(IPV4) flags=0x0
```

```

TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members:<<BR>>

1: Seq_num(1), alive, selected

Internet Service: SIP(4294836224 34640) SIP.Method(4294836225 152305677) SIP.Via.NAT
(4294836226 38938) SIP_Media.Type.Application(4294836227 26180) SIP_Message(4294836228
26179) SIP_Voice(4294836229 30251)

# diagnose sys sdwan service 2

Service(2): Address Mode(IPV4) flags=0x0

TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members:<<BR>>

1: Seq_num(2), alive, selected


Dst address: 0.0.0.0-255.255.255.255

# diagnose sys sdwan internet-service-app-ctrl-list
Ctrl application(SIP 34640):Internet Service ID(4294836224)
Ctrl application(SIP.Method 152305677):Internet Service ID(4294836225)
Ctrl application(SIP.Via.NAT 38938):Internet Service ID(4294836226)
Ctrl application(SIP_Media.Type.Application 26180):Internet Service ID(4294836227)
Ctrl application(SIP_Message 26179):Internet Service ID(4294836228)
Ctrl application(SIP_Voice 30251):Internet Service ID(4294836229)

```

## Dynamic application steering with lowest cost and best quality strategies

In this example, the SD-WAN has three members: two ISPs (DIA\_1 and DIA\_2) that are used for access to internet applications, and an MPLS link that is used exclusively as a backup for business critical applications.

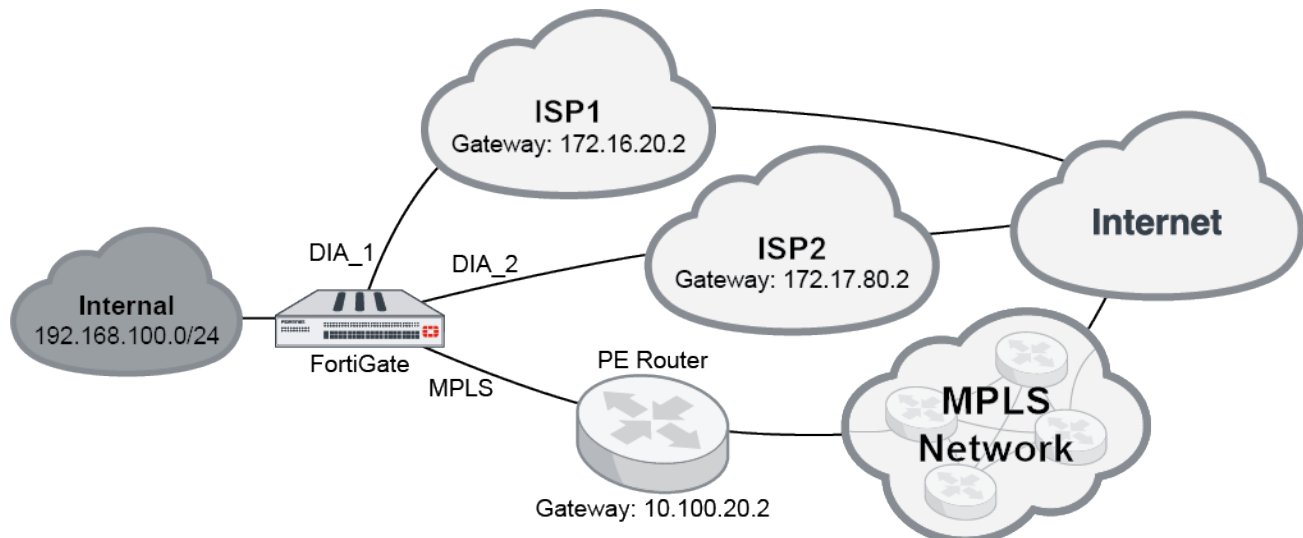

Business applications, such as Office365, Google, Dropbox, and SIP, use the *Lowest Cost (SLA)* strategy to provide application steering, and traffic falls back to MPLS only if both ISP1 and ISP2 are down. Non-business applications, such as Facebook and Youtube, use the *Best Quality* strategy to choose between the ISPs.

By default, individual applications and application groups cannot be selected in SD-WAN rules. To enable this functionality in the GUI, go to *System > Feature Visibility* and enable *Application Detection Based SD-WAN*. In the CLI, enter:

```
config system global
    set gui-app-detection-sdwan enable
end
```

### To configure the SD-WAN members, static route, and firewall policy in the GUI:

1. Add port1 (DIA\_1), port2 (DIA\_2), and port3 (MPLS) as SD-WAN members. Set the cost of DIA\_1 and DIA\_2 to 0, and MPLS to 20. See [Configuring the SD-WAN interface on page 631](#) for details.
2. Configure a static route. See [Adding a static route on page 632](#) for details.
3. Create a firewall policy to allow traffic out on SD-WAN, with an *Application Control* profile configured. See [Configuring firewall policies for SD-WAN on page 633](#) for details.

### To configure the SD-WAN rule and performance SLA checks for business critical application in the GUI:

1. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
2. Set the name to *BusinessCriticalApps*.  
This rule will steer your business critical traffic to the appropriate link based on the *Lowest Cost (SLA)*.
3. Set *Source address* to *all*.
4. Under *Destination*, set *Application* to your required applications. In this example: *Microsoft.Office.365*, *Microsoft.Office.Online*, *Google.Docs*, *Dropbox*, and *SIP*.
5. Under *Outgoing Interfaces*, select *Lowest Cost (SLA)*.  
The lowest cost is defined in the SD-WAN member interface settings (see [Configuring the SD-WAN interface on page 631](#)). The lowest possible cost is 0, which represents the most preferred link. In this example, DIA\_1 and DIA\_2 both have a cost of 0, while MPLS has a cost of 20 because it is used for backup.
6. In *Interface preference*, add the interfaces in order of preference when the cost of the links is tied. In this example, DIA\_1, DIA\_2, then MPLS.  
MPLS will always be chosen last, because it has the highest cost. DIA\_1 and DIA\_2 have the same cost, so an interface is selected based on their order in the *Interface preference* list.
7. Set *Required SLA target* to ensure that only links that pass your SLA target are chosen in this SD-WAN rule:
  - a. Click in the *Required SLA target* field.
  - b. In the *Select Entries* pane, click *Create*. The *New Performance SLA* pane opens.
  - c. Set *Name* to *BusinessCriticalApps\_HC*.  
This health check is used for business critical applications in your SD-WAN rule.
  - d. Leave *Protocol* set to *Ping*, and add up to two servers, such as *office.com* and *google.com*.
  - e. Set *Participants* to *Specify*, and add all three interfaces: DIA\_1, DIA\_2, and MPLS.
  - f. Enable *SLA Target*.  
The attributes in your target determine the quality of your link. The SLA target of each link is compared when determining which link to use based on the lowest cost. Links that meet the SLA target are preferred over links that fail, and move to the next step of selection based on cost. If no links meet the SLA target, then they all move to the next step.  
In this example, disable *Latency threshold* and *Jitter threshold*, and set *Packet loss threshold* to 1.
  - g. Click *OK*.
  - h. Select the new performance SLA to set it as the *Required SLA target*.

When multiple SLA targets are added, you can choose which target to use in the SD-WAN rule.

The screenshot shows the 'Priority Rule' configuration window for a rule named 'BusinessCriticalApps'. The configuration is as follows:

- Name:** BusinessCriticalApps
- Source:**
  - Source address: all
  - User group: (empty)
- Destination:**
  - Address: (empty)
  - Internet Service: (empty)
  - Application:
    - Dropbox
    - Google.Docs
    - Microsoft.Office.365
    - Microsoft.Office.Online
    - SIP
- Outgoing Interfaces:**
  - Select a strategy for how outgoing interfaces will be chosen:
    - ☐ Manual: Manually assign outgoing interfaces.
    - ☐ Best Quality: The interface with the best measured performance is selected.
    - ☐ Lowest Cost (SLA): The interface that meets SLA targets is selected. When there is a tie, the interface with the lowest assigned cost is selected.
    - ☒ Maximize Bandwidth (SLA): Traffic is load balanced among interfaces that meet SLA targets.
  - Interface preference:
    - DIA\_1 (port1)
    - DIA\_2 (port2)
    - MPLS (port3)
  - Zone preference: (empty)
  - Required SLA target: BusinessCriticalApps\_HC
  - Forward DSCP: (disabled)
  - Reverse DSCP: (disabled)
  - Status: ☒ Enable ☐ Disable

**SLA Details Table:**

	Packet Loss	Latency	Jitter
BusinessCriticalApps_HC	1.00%		
DIA_1 (port1)	0.00%	12.52ms	1.29ms
DIA_2 (port2)	0.00%	12.76ms	1.45ms
MPLS (port3)	0.00%	12.72ms	1.45ms

**Additional Information:**

- API Preview
- SD-WAN Rules Setup Guides
  - Implicit Rule
  - Best Quality
  - Lowest Cost (SLA)
  - Maximize Bandwidth (SLA)
- Documentation
  - Online Help
  - Video Tutorials

Buttons: OK, Cancel

8. Click OK to create the SD-WAN rule.

**To configure the SD-WAN rule and performance SLA checks for non-business critical application in the GUI:**

1. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
2. Set the name to *NonBusinessCriticalApps*.

This rule will steer your non-business critical traffic to the appropriate link based on the *Best Quality*. No SLA target must be met, as the best link is selected based on the configured quality criteria and interface preference order.

3. Set *Source address* to *all*.
4. Under *Destination*, set *Application* to your required applications. In this example: *Facebook*, and *Youtube*.
5. Under *Outgoing Interfaces*, select *Best Quality*.
6. In *Interface preference*, add the interfaces in order of preference.

By default, a more preferred link has an advantage of 10% over a less preferred link. For example, when latency is used, the preferred link's calculated latency = real latency / (1+10%).

---

The preferred link advantage can be customized in the CLI when the mode is `priority` (*Best Quality*) or `auto`:



```
config system sdwan
  config service
    edit <id>
      set link-cost-threshold <integer>
    next
  end
end
```

---

7. Create and apply a new performance SLA profile:

- a. Click in the *Measured SLA* field.
- b. In the drop-down list, click *Create*. The *New Performace SLA* pane opens.
- c. Set *Name* to *NonBusinessCritical\_HC*.  
This health check is used for non-business critical applications in your SD-WAN rule.
- d. Leave *Protocol* set to *Ping*, and add up to two servers, such as *youtube.com* and *facebook.com*.
- e. Set *Participants* to *Specify*, and add the *DIA\_1* and *DIA\_2* interfaces. In this example, MPLS is not used for non-business critical applications.
- f. Leave *SLA Target* disabled.
- g. Click *OK*.
- h. Select the new performance SLA from the list to set it as the *Measured SLA*.

8. Set *Quality criteria* as required. In this example, *Latency* is selected.

For bandwidth related criteria, such as *Downstream*, *Upstream*, and *Bandwidth* (bi-directional), the selection is based on available bandwidth. An estimated bandwidth should be configured on the interface to provide a baseline, maximum available bandwidth.

**Priority Rule**

Name: NonBusinessCriticalApps

**Source**

Source address: all

User group: +

**Destination**

Address: +

Internet Service: +

Application: Facebook, YouTube

**Outgoing Interfaces**

Select a strategy for how outgoing interfaces will be chosen.

☐ Manual  
Manually assign outgoing interfaces.

☒ **Best Quality**  
The interface with the best measured performance is selected.

☐ Lowest Cost (SLA)  
The interface that meets SLA targets is selected. When there is a tie, the interface with the lowest assigned cost is selected.

☐ Maximize Bandwidth (SLA)  
Traffic is load balanced among interfaces that meet SLA targets.

Interface preference: DIA\_1 (port1), DIA\_2 (port2)

Zone preference: +

Measured SLA: NonBusinessCriticalApps\_HC

Quality criteria: Latency

Forward DSCP: +

Reverse DSCP: +

Status: ☒ Enable ☐ Disable

**Additional Information**

API Preview

SD-WAN Rules Setup Guides

Implicit Rule, Best Quality, Lowest Cost (SLA), Maximize Bandwidth (SLA)

Documentation

Online Help, Video Tutorials

OK Cancel

9. Click OK to create the SD-WAN rule.

## To configure the SD-WAN members, static route, and firewall policy in the CLI:

### 1. Configure the interfaces:

```
config system interface
    edit "port1"
        set ip <class_ip&net_netmask>
        set alias "DIA_1"
        set role wan
    next
    edit "port2"
        set ip <class_ip&net_netmask>
        set alias "DIA_2"
        set role wan
    next
    edit "port3"
        set ip <class_ip&net_netmask>
        set alias "MPLS"
        set role wan
    next
end
```

### 2. Configure the SD-WAN members:

```
config system sdwan
    set status enable
```

```

config members
  edit 1
    set interface "port1"
    set gateway 172.16.20.2
  next
  edit 2
    set interface "port2"
    set gateway 172.17.80.2
  next
  edit 3
    set interface "port3"
    set gateway 10.100.20.2
    set cost 20
  next
end
end

```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

3. Configure a static route. See [Adding a static route on page 632](#) for details.
4. Create a firewall policy to allow traffic out on SD-WAN, with an *Application Control* profile configured. See [Configuring firewall policies for SD-WAN on page 633](#) for details.

### To configure the SD-WAN rule and performance SLA checks for business critical application in the CLI:

1. Configure the *BusinessCriticalApps\_HC* health-check:

```

config system sdwan
  config health-check
    edit "BusinessCriticalApps_HC"
      set server "office.com" "google.com"
      set members 1 2 3
      config sla
        edit 1
          set link-cost-factor packet-loss
          set packetloss-threshold 1
        next
      end
    next
  end
end
end

```

2. Configure the *BusinessCriticalApps* service to use *Lowest Cost (SLA)*:

```

config system sdwan
  config service
    edit 1
      set name "BusinessCriticalApps"
      set mode sla
      set src "all"
      set internet-service enable
      set internet-service-app-ctrl 17459 16541 33182 16177 34640
      config sla

```



```
        edit "BusinessCriticalApps_HC"
            set id 1
        next
    end
    set priority-members 1 2 3
next
end
end
```

**To configure the SD-WAN rule and performance SLA checks for non-business critical application in the CLI:**

1. Configure the *nonBusinessCriticalApps\_HC* health-check:

```
config system sdwan
    config health-check
        edit "NonBusinessCriticalApps_HC"
            set server "youtube.com" "facebook.com"
            set members 1 2
        next
    end
end
```

2. Configure the *NonBusinessCriticalApps* service to use *Lowest Cost (SLA)*:

```
config system sdwan
    config service
        edit 4
            set name "NonBusinessCriticalApps"
            set mode priority
            set src "all"
            set internet-service enable
            set internet-service-app-ctrl 15832 31077
            set health-check "NonBusinessCriticalApps_HC"
            set priority-members 1 2
        next
    end
end
```


## Verification

Check the following GUI pages, and run the following CLI commands to confirm that your traffic is being steered by the SD-WAN rules.

## Health checks

To verify the status of each of the health checks in the GUI:

1. Go to **Network > SD-WAN**, select the **Performance SLAs** tab, and select each of the health checks from the list.

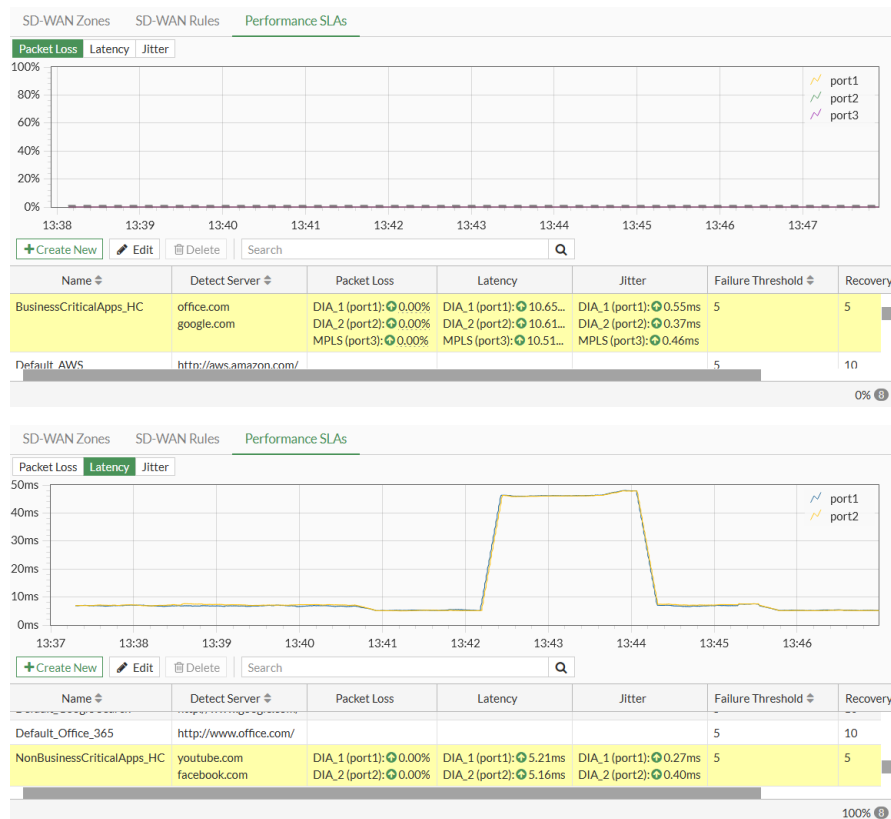

To verify the status of each of the health checks in the CLI:

```
# diagnose sys sdwan health-check
Health Check(BusinessCritical_HC):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(12.884), jitter(0.919) sla_map=0x1
Seq(2 port2): state(alive), packet-loss(0.000%) latency(13.018), jitter(0.723) sla_map=0x1
Seq(3 port3): state(alive), packet-loss(0.000%) latency(13.018), jitter(0.923) sla_map=0x1
Health Check(NonBusinessCritical_HC):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(6.888), jitter(0.953) sla_map=0x0
Seq(2 port2): state(alive), packet-loss(0.000%) latency(6.805), jitter(0.830) sla_map=0x0
```

## Rule members and hit count

To verify the active members and hit count of the SD-WAN rule in the GUI:

1. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab.

SD-WAN Zones SD-WAN Rules Performance SLAs						
<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Clone</a> <a href="#">Delete</a> <input type="text" value="Search"/>						
ID	Name	Source	Destination	Criteria	Members	Hit Count
IPv4						
1	BusinessCriticalApps	all	Dropbox Google.Docs Microsoft.Office.365 Microsoft.Office.Online SIP	SLA	<input checked="" type="checkbox"/> DIA_1 (port1) <input checked="" type="checkbox"/> DIA_2 (port2) <input checked="" type="checkbox"/> MPLS (port3)	45
4	NonBusinessCriticalApps	all	Facebook YouTube	Latency	<input checked="" type="checkbox"/> DIA_1 (port1) <input checked="" type="checkbox"/> DIA_2 (port2)	32
Implicit						
sd-wan	all	all	Source IP	any		
Updated: 04:05:32						

The interface that is currently selected by the rule has a checkmark next to its name in the *Members* column. Hover the cursor over the checkmark to open a tooltip that gives the reason why that member is selected. If multiple members are selected, only the highest ranked member is highlighted (unless the mode is *Maximize Bandwidth (SLA)*).

To verify the active members and hit count of the SD-WAN rule in the CLI:

```
# diagnose sys sdwan service
```

```
Service(3): Address Mode(IPV4) flags=0x0
Gen(13), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members:
  1: Seq_num(1 port1), alive, sla(0x1), cfg_order(0), cost(0), selected
  2: Seq_num(2 port2), alive, sla(0x1), cfg_order(1), cost(0), selected
  3: Seq_num(3 port3), alive, sla(0x1), cfg_order(2), cost(20), selected
Internet Service: Dropbox(4294836727,0,0,0 17459) Google.Docs(4294836992,0,0,0 16541)
Microsoft.Office.365(4294837472,0,0,0 33182) Microsoft.Office.Online(4294837475,0,0,0 16177)
SIP(4294837918,0,0,0 34640)
Src address:
  0.0.0.0-255.255.255.255


Service(4): Address Mode(IPV4) flags=0x0
Gen(211), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(latency),
link-cost-threshold(10), heath-check(NonBusinessCritical_HC)
Members:
  1: Seq_num(1 port1), alive, latency: 5.712, selected
  2: Seq_num(2 port2), alive, latency: 5.511, selected
Internet Service: Facebook(4294836806,0,0,0 15832) YouTube(4294838537,0,0,0 31077)
Src address:
  0.0.0.0-255.255.255.255
```

## Applications and sessions

To verify sessions in FortiView:

1. Go to a dashboard and add the *FortiView Cloud Applications* widget sorted by bytes. See [Cloud application view on page 136](#) for details.

## 2. Drill down on an application, such as *YouTube*, then select the *Sessions* tab.

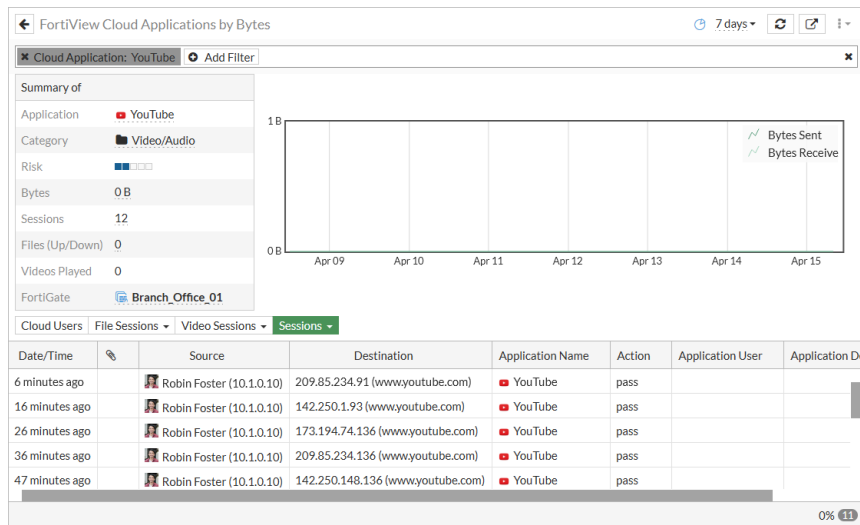

### To verify applications identified by Application Control in SD-WAN:


```
# diagnose sys sdwan internet-service-app-ctrl-list
```

```
Steam(16518 4294838108): 23.6.148.10 6 443 Thu Apr 15 08:51:54 2021
Netflix(18155 4294837589): 54.160.93.182 6 443 Thu Apr 15 09:13:25 2021
Netflix(18155 4294837589): 54.237.226.164 6 443 Thu Apr 15 10:04:37 2021
Minecraft(27922 4294837491): 65.8.232.41 6 443 Thu Apr 15 09:12:19 2021
Minecraft(27922 4294837491): 65.8.232.46 6 443 Thu Apr 15 09:02:07 2021
Minecraft(27922 4294837491): 99.84.244.51 6 443 Thu Apr 15 10:23:57 2021
Minecraft(27922 4294837491): 99.84.244.63 6 443 Thu Apr 15 10:03:30 2021
YouTube(31077 4294838537): 74.125.69.93 6 443 Thu Apr 15 08:52:59 2021
YouTube(31077 4294838537): 108.177.112.136 6 443 Thu Apr 15 09:33:53 2021
YouTube(31077 4294838537): 142.250.1.93 6 443 Thu Apr 15 10:35:13 2021
...
```

## DSCP tag-based traffic steering in SD-WAN

Differentiated Services Code Point (DSCP) tags can be used to categorize traffic for quality of service (QoS). SD-WAN traffic steering on an edge device can be provided based on the DSCP tags.

This section provides an example of using DSCP tag-based traffic steering using secure SD-WAN. Traffic from the customer service and marketing departments at a headquarters are marked with separate DSCP tags by the core switch and passed to the edge FortiGate. The edge FortiGate reads the tags, then steers traffic to the preferred interfaces based on the defined SD-WAN rules.

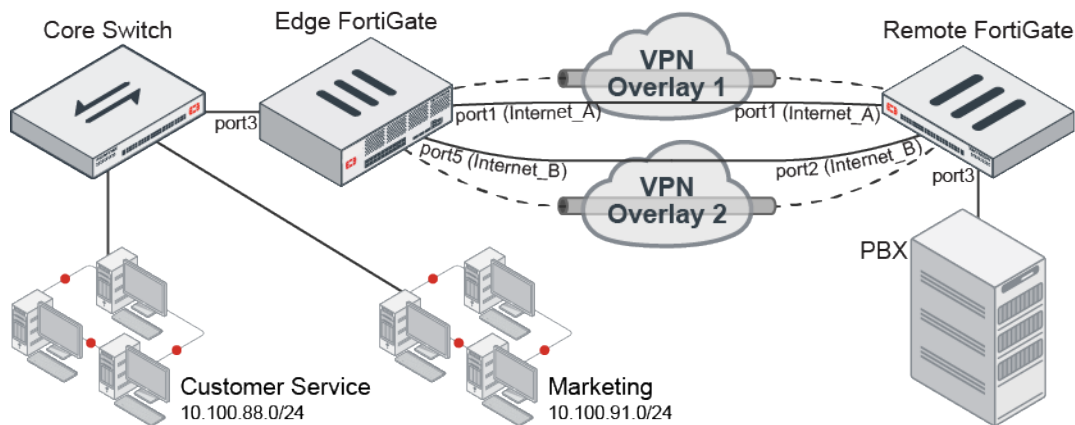

VoIP and social media traffic are steered. VoIP traffic from the customer service department is more important than social media traffic. The edge FortiGate identifies the tagged traffic based on SD-WAN rules then steers the traffic:

- VoIP traffic is marked with DSCP tag 011100 and steered to the VPN overlay with the lowest jitter, to provide the best quality voice communication with the remote PBX server.
- Social media traffic is marked with the DSCP tag 001100 and steered to the internet connection with the lowest cost.

The following is assumed to be already configured:

- Two IPsec tunnels ([IPsec VPNs on page 1573](#)):
  - Branch-HQ-A on Internet\_A (port 1)
  - Branch-HQ-B on Internet\_B (port 5)
- Four SD-WAN members in two zones ([Configuring the SD-WAN interface on page 631](#)):
  - Overlay zone includes members Branch-HQ-A and Branch-HQ-B
  - virtual-wan-link zone includes members Internet\_A and Internet\_B

Internet\_A has a cost of 0 and Internet\_B has a cost of 10. When using the lowest cost strategy, Internet\_A will be preferred. Both members are participants in the Default\_DNS performance SLA.
- A static route that points to the SD-WAN interface ([Adding a static route on page 632](#)).
- Two firewall policies:

Name	SD-WAN-OUT	Overlay-OUT
From	port3	port3
To	virtual-wan-link	Overlay
Source	all	all
Destination	all	all
Schedule	always	always
Service	all	all
Action	Accept	Accept
NAT	enabled	enabled

After the topology is configured, you can proceed with the configuration of the edge FortiGate:

- [Configuring SD-WAN rules on page 736](#)
- [Results on page 737](#)

## Configuring SD-WAN rules

Configure SD-WAN rules to govern the steering of DSCP tag-based traffic to the appropriate interfaces. Traffic is steered based on the criteria that are configured in the SD-WAN rules.

In this example, three SD-WAN rules are configured to govern DSCP tagged traffic:

- *VoIP-Steer* for [VoIP traffic](#).
- *Facebook-DSCP-steer* for [Social media traffic](#).
- *All-traffic* for all of the [Other web traffic](#).

After configuring the rules, go to *Network > SD-WAN* and select the *SD-WAN Rules* tab to check the rules.

### VoIP traffic

VoIP traffic is steered to the *Overlay* zone.

DSCP values are usually 6-bit binary numbers that are padded with zeros at the end. VoIP traffic with DSCP tag 011100 will become 01110000. This 8-bit binary number is represented in its hexadecimal form, 0x70, as the type of service bit pattern (`tos`) value. The type of service evaluated bits (`tos-mask`) hexadecimal value of 0xf0 (11110000 in binary) is used to check the four most significant bits in the `tos` value. The four most significant bits of the `tos` (0111) are used to match the first four bits of the DSCP tag. Only the non-zero bit positions in the `tos-mask` are used for comparison; the zero bit positions are ignored.

The *Best quality* (`priority` mode) strategy is used to select the preferred interface, with the *Quality criteria* (`link-cost-members`) set to *Jitter*. The interface with the lowest amount of jitter is selected. For more information about configuring SD-WAN rules with the *Best Quality* strategy, see [Best quality strategy on page 700](#).

#### To configure the rule for DSCP tagged VoIP traffic using the CLI:

```
config sys sdwan
  config service
    edit 5
      set name "VoIP-Steer"
      set mode priority
      set tos 0x70
      set tos-mask 0xf0
      set dst "all"
      set health-check "Default_DNS"
      set link-cost-factor jitter
      set priority-members 4 3
    next
  end
end
```

### Social media traffic

Social media traffic is steered to the *virtual-wan-link* zone.

DSCP values are usually 6-bit binary numbers that are padded with zeros at the end. Social media traffic traffic with DSCP tag 001100 will become 00110000. This 8-bit binary number is represented in its hexadecimal form, 0x30, as the `tos` value. The `tos-mask` hexadecimal value of 0xf0 (11110000 in binary) is used to check the four most significant bits in the `tos` value. The four most significant bits of the `tos` (0011) are used to match the first four bits of the DSCP tag. Only the non-zero bit positions in the `tos-mask` are used for comparison; the zero bit positions are ignored.

The *Manual* (manual mode) strategy is used to select the preferred interface. Internet\_B (port5, priority member 2) is set as the preferred interface to steer all social media traffic to. For more information about configuring SD-WAN rules with the manual strategy, see [Manual strategy on page 699](#).

#### To configure SD-WAN rule for DSCP tagged social media traffic using the CLI:

```
config system sdwan
  config service
    edit 3
      set name "Facebook-DSCP-steer"
      set mode manual
      set tos 0x30
      set tos-mask 0xf0
      set dst "all"
      set priority-members 2 1
    next
  end
end
```

#### Other web traffic

Other web traffic is steered to the *virtual-wan-link* zone.

The *Lowest Cost* (SLA) strategy (sla mode) is used to select the preferred interface. The interface that meets the defined SLA targets (*Default\_DNS* in this case) is selected. If there is a tie, the interface with the lowest cost is selected, Internet\_A (port1) in this case.

For more information about configuring SD-WAN rules with the *Lowest Cost* (SLA) strategy, see [Lowest cost \(SLA\) strategy on page 704](#).

#### To configure SD-WAN rule for all other web traffic using the CLI:

```
config system sdwan
  config service
    edit 2
      set name "All-traffic"
      set mode sla
      set dst "all"
      config sla
        edit "Default_DNS"
          set id 1
        next
      end
      set priority-members 1 2
    next
  end
end
```

## Results

These sections show the function of SD-WAN with respect to DSCP tagged traffic steering, and can help confirm that it is running as expected:

- Verifying the DSCP tagged traffic on FortiGate on page 738
- Verifying the service rules on page 739
- Verifying traffic steering on the SD-WAN rules on page 739
- Verifying that steered traffic is leaving from the expected interface on page 740

## Verifying the DSCP tagged traffic on FortiGate

Packet sniffing is used to verify the incoming DSCP tagged traffic. See [Using the FortiOS built-in packet sniffer](#) for more information.

Wireshark is used to verify that VoIP traffic is tagged with the expected DSCP tag, 0x70 or 0x30.

### VoIP traffic marked with DSCP tag 0x70:

```
# diagnose sniffer packet any '(ip and ip[1] & 0xfc == 0x70)' 6 0 1
```

No.	Time	Source	Destination	Protocol	Length	Info
1	22:59:39.814674	10.100.88.171	10.1.0.102	UDP	242	65477 → 5061 Len=200
2	22:59:39.814687	10.0.11.1	10.1.0.102	UDP	242	65477 → 5061 Len=200
3	22:59:39.814699	10.100.65.101	10.100.67.13	ESP	310	ESP (SPI=0x9d0fc87a)
4	22:59:39.815641	10.100.88.171	10.1.0.102	UDP	242	65477 → 5061 Len=200
5	22:59:39.815652	10.0.11.1	10.1.0.102	UDP	242	65477 → 5061 Len=200
6	22:59:39.815674	10.100.65.101	10.100.67.13	ESP	310	ESP (SPI=0x9d0fc87a) , Shim6 (12bis)[Malformed Packet]
7	22:59:39.816494	10.100.88.171	10.1.0.102	UDP	242	65477 → 5061 Len=200
8	22:59:39.816507	10.0.11.1	10.1.0.102	UDP	242	65477 → 5061 Len=200
9	22:59:39.816519	10.100.65.101	10.100.67.13	ESP	310	ESP (SPI=0x9d0fc87a)
10	22:59:39.817452	10.100.88.171	10.1.0.102	UDP	242	65477 → 5061 Len=200
11	22:59:39.817469	10.0.11.1	10.1.0.102	UDP	242	65477 → 5061 Len=200
12	22:59:39.817561	10.100.65.101	10.100.67.13	ESP	310	ESP (SPI=0x9d0fc87a)
13	22:59:39.818469	10.100.88.171	10.1.0.102	UDP	242	65477 → 5061 Len=200

Frame 1: 242 bytes on wire (1936 bits), 242 bytes captured (1936 bits) on Ethernet II, Src: Fortinet\_00:03:01 (00:09:0f:00:03:01), Dst: 00:00:00:00:00:01 (00:00:00:00:00:01)

Internet Protocol Version 4, Src: 10.100.88.171, Dst: 10.1.0.102

0100 .... = Version: 4

.... 0101 = Header Length: 20 bytes (5)

> Differentiated Services Field: 0x70 (DSCP: AF32, ECN: Not-ECT)

Total Length: 228

Identification: 0x49de (18910)

Flags: 0x0000

Fragment offset: 0

Time to live: 127

Protocol: UDP (17)

Header checksum: 0x8345 [validation disabled]

[Header checksum status: Unverified]

Source: 10.100.88.171

Destination: 10.1.0.102

> User Datagram Protocol, Src Port: 65477, Dst Port: 5061

> Data (200 bytes)

0000 00 00 00 00 01 00 09 0f 00 03 01 08 00 45 70 .....Ep

Differentiated Services Field (p.dsfield), 1 byte

Packets: 111 · Displayed: 111 (100.0%)

Profile: Default

### Web traffic marked with DSCP tag 0x30:

```
# diagnose sniffer packet any '(ip and ip[1] & 0xfc == 0x30)' 6 0 1
```



No.	Time	Source	Destination	Protocol	Length	Info
1	22:45:39.816774	10.100.91.100	157.240.2.174	TCP	66	44513 → 443 [SYN] Seq=0 Win=8192 Len=0 MSS=1460 WS=256 SACK_PERM=1
2	22:45:39.828483	157.240.2.174	10.100.91.100	TCP	66	443 → 44513 [SYN, ACK] Seq=0 Ack=1 Win=28000 Len=0 MSS=1400 SACK_PERM=1 WS=2
3	22:45:39.829729	10.100.91.100	157.240.2.174	TCP	54	44513 → 443 [ACK] Seq=1 Ack=1 Win=131584 Len=0
4	22:45:39.832995	10.100.91.100	157.240.2.174	TLSv1.3	571	Client Hello
5	22:45:39.843987	157.240.2.174	10.100.91.100	TCP	54	443 → 44513 [ACK] Seq=1 Ack=518 Win=29184 Len=0
6	22:45:39.845792	157.240.2.174	10.100.91.100	TLSv1.3	1454	Server Hello, Change Cipher Spec, Application Data
7	22:45:39.845949	157.240.2.174	10.100.91.100	TLSv1.3	1454	Application Data [TCP segment of a reassembled PDU]
8	22:45:39.845853	157.240.2.174	10.100.91.100	TLSv1.3	645	Application Data
9	22:45:39.846987	10.100.91.100	157.240.2.174	TCP	54	44513 → 443 [ACK] Seq=518 Ack=3392 Win=131584 Len=0
10	22:45:39.868813	10.100.91.100	157.240.2.174	TLSv1.3	118	Change Cipher Spec, Application Data
11	22:45:39.870612	10.100.91.100	157.240.2.174	TLSv1.3	224	Application Data
12	22:45:39.870675	10.100.91.100	157.240.2.174	TLSv1.3	437	Application Data
13	22:45:39.880139	157.240.2.174	10.100.91.100	TLSv1.3	230	Application Data
14	22:45:39.880178	157.240.2.174	10.100.91.100	TLSv1.3	128	Application Data

Frame 1: 66 bytes on wire (528 bits), 66 bytes captured (528 bits)	
Ethernet II, Src: Fortinet_00:00:00:00:00:01, Dst: 00:00:00:00:00:01	
Internet Protocol Version 4, Src: 10.100.91.100, Dst: 157.240.2.174	
0100 ... = Version: 4 .... 0101 = Header Length: 20 bytes (5)	
Differentiated Services Field: 0x30 (DSCP: AF12, ECN: Not-ECT) Total Length: 52 Identification: 0x6f56 (28582)	
Flags: 0x4000, Don't fragment Fragment offset: 0 Time to live: 127 Protocol: TCP (6) Header checksum: 0x85d7 [validation disabled] [Header checksum status: Unverified] Source: 10.100.91.100 Destination: 157.240.2.174	
Transmission Control Protocol, Src Port: 44513, Dst Port: 443, Seq: 0, Len: 0	

0000	00 00 00 00 01 00 00 0f 00 03 01 08 00 45 30	.....E0
------	--	---------

Differentiated Services Field (p.d.sfield), 1 byte

Packets: 114 · Displayed: 114 (100.0%)

Profile: Default

## Verifying the service rules

To check that the expected DSCP tags and corresponding interfaces are used by the SD-WAN rules to steer traffic:

```
# diagnose sys sdwan service
```

```
Service(5): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x70/0xf0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(4 Branch-HQ-B), alive, selected
  Dst address:
    0.0.0.0-255.255.255.255
```

```
Service(3): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x30/0xf0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(2 port5), alive, selected
  Dst address:
    0.0.0.0-255.255.255.255
```

```
Service(2): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Members:
    1: Seq_num(1 port1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2 port5), alive, sla(0x1), cfg_order(1), cost(10), selected
  Dst address:
    0.0.0.0-255.255.255.255
```

## Verifying traffic steering on the SD-WAN rules

Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab to check the *Hit Count* on the SD-WAN interfaces.

SD-WAN Zones						
SD-WAN Rules						
Performance SLAs						
<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Clone</a> <a href="#">Delete</a> <input type="text" value="Search"/>						
ID	Name	Source	Destination	Criteria	Members	Hit Count
IPv4						
5	VoIP-Steer		all	Jitter	VPN_B_Tunnel (Branch-HQ-B) VPN_A_Tunnel (Branch-HQ-A)	8,090
3	Facebook-DSCP-steer		all		Internet_B (port5) Internet_A (port1)	184
2	All-traffic		all	SLA	Internet_A (port1) Internet_B (port5)	23,505
Implicit						
	sd-wan	all all	all all	Source IP	any	
Updated: 15:48:39						

## Verifying that steered traffic is leaving from the expected interface

To confirm that web traffic (port 443) flows through the correct underlay interface members, and VoIP traffic flows through the correct overlay interface members, go to *Dashboard > FortiView Policies* and double click on the policy name.

Web traffic is expected to leave on *Interface\_A (port1)* or *Interface\_B (port5)*:

FortiView Policies by Bytes											
<a href="#">Policy: 3</a> <a href="#">Add Filter</a>											
<b>Summary of</b> Policy: SD-WAN-Out (33) Policy Type: Firewall Source Interface: ISFW (port3) Destination Interface: Internet_A (port1) Bytes: 5.37 MB Sessions: 314 Bandwidth: 4.10 kbps FortiGate: cloud-on-ramp											
Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets	Duration (seconds)	Destination Interface	
10.100.88.151	00:09:0f:00:03:01	216.58.192.226	Google Ads	TCP	28454	443	12.65 kB	47	35s	Internet_A (port1)	
10.100.88.151	00:09:0f:00:03:01	216.58.192.132	HTTPS.BROWSER	TCP	28432	443	12.85 kB	89	39s	Internet_A (port1)	
10.100.88.151	00:09:0f:00:03:01	13.249.135.106	HTTPS.BROWSER	TCP	28447	443	13.93 kB	30	36s	Internet_A (port1)	
10.100.88.151	00:09:0f:00:03:01	13.249.135.36	HTTPS.BROWSER	TCP	28485	443	7.75 kB	22	21s	Internet_A (port1)	
10.100.88.161	00:09:0f:00:03:01	157.240.2.25	Facebook	TCP	28449	443	321.46 kB	264	35s	Internet_B (port5)	
10.100.88.151	00:09:0f:00:03:01	69.147.64.34	Yahoo.Services	TCP	28436	443	8.80 kB	28	39s	Internet_A (port1)	
10.100.88.161	00:09:0f:00:03:01	157.240.18.19	Facebook	TCP	28413	443	8.45 kB	33	2m 13s	Internet_B (port5)	
10.100.88.161	00:09:0f:00:03:01	157.240.18.174	Instagram	TCP	28411	443	193.70 kB	267	2m 14s	Internet_B (port5)	
10.100.88.161	00:09:0f:00:03:01	69.171.250.63	Instagram	TCP	28410	443	23.42 kB	58	2m 16s	Internet_B (port5)	
10.100.88.161	00:09:0f:00:03:01	69.171.250.63	Instagram	TCP	28412	443	10.87 kB	40	2m 14s	Internet_B (port5)	

VoIP traffic is expected to leave on the preferred *VPN\_B\_Tunnel (Branch-HQ-B)* interface:

FortiView Policies by Bytes											
<a href="#">Policy: 3</a> <a href="#">Add Filter</a>											
<b>Summary of</b> Policy: Overlay-out (34) Policy Type: Firewall Source Interface: ISFW (port3) Destination Interface: VPN_B_Tunnel (Branch-HQ-B) Bytes: 1.84 MB Sessions: 3 Bandwidth: 221.35 kbps FortiGate: cloud-on-ramp											
Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets	Duration (seconds)	Destination Interface	
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	TCP/5061	TCP	34779	5061	728 B	14	17s	VPN_B_Tunnel (Branch-HQ-B)	
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	UDP/5061	UDP	65477	5061	1.84 MB	8,084	3m 16s	VPN_B_Tunnel (Branch-HQ-B)	
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	UDP/5061	UDP	65478	5061	32 B	1	2m 4s	VPN_B_Tunnel (Branch-HQ-B)	

## ECMP support for the longest match in SD-WAN rule matching


The longest match SD-WAN rule can match ECMP best routes. The rule will select the egress ports on ECMP specific routes, and not the less specific routes, to transport traffic.

The service mode determines which egress port on the ECMP specific routes is selected to forward traffic:

- Manual (`manual`): The first configured alive port is selected.
- Best Quality (`priority`): The best quality port is selected.
- Lowest Cost (`sla`): The first configured or lower cost port in SLA is selected.

### Example

By default, SD-WAN selects the outgoing interface from all of the links that have valid routes to the destination. In some cases, it is required that only the links that have the best (or longest match) routes (single or ECMP) to the destination are considered.

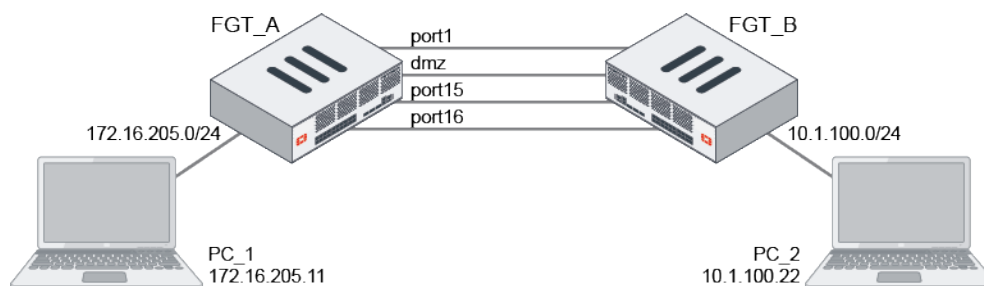

In this example, four SD-WAN members in two zones are configured. The remote PC (PC\_2 - 10.1.100.22) is accessible on port15 and port16, even though there are valid routes for all of the SD-WAN members. A single SD-WAN service rule is configured that allows traffic to be balanced between all four of the members, but only chooses between port15 and port16 for the specific 10.1.100.22 address.

A performance SLA health check is configured to monitor 10.1.100.2. An SD-WAN service rule in Lowest Cost (SLA) mode is configured to select the best interface to steer the traffic. In the rule, the method of selecting a member if more than one meets the SLA (`tie-break`) is configured to select members that meet the SLA and match the longest prefix in the routing table (`fib-best-match`). If there are multiple ECMP routes with the same destination, the FortiGate will take the longest (or best) match in the routing table, and choose from those interface members.

### To configure the SD-WAN:

```
config system sdwan
  config zone
    edit "virtual-wan-link"
    next
    edit "z1"
    next
  end
  config members
    edit 1
    set interface "port1"
    set gateway 172.16.200.2
    next
    edit 2
```

```

        set interface "dmz"
        set gateway 172.16.208.2
    next
    edit 3
        set interface "port15"
        set zone "z1"
        set gateway 172.16.209.2
    next
    edit 4
        set interface "port16"
        set zone "z1"
        set gateway 172.16.210.2
    next
end
config health-check
    edit "1"
        set server "10.1.100.2"
        set members 0
        config sla
            edit 1
                next
            end
        next
    end
next
end
config service
    edit 1
        set name "1"
        set mode sla
        set dst "all"
        set src "172.16.205.0"
        config sla
            edit "1"
                set id 1
            next
        end
        set priority-members 1 2 3 4
        set tie-break fib-best-match
    next
end
end

```

### To check the results:

1. The debug shows the SD-WAN service rule. All of the members meet SLA, and because no specific costs are attached to the members, the egress interface is selected based on the interface priority order that is configured in the rule:

```
FGT_A (root) # diagnose sys sdwan service
```

```

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Gen(4), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members(4):
  1: Seq_num(1 port1), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
  2: Seq_num(2 dmz), alive, sla(0x1), gid(0), cfg_order(1), cost(0), selected
  3: Seq_num(3 port15), alive, sla(0x1), gid(0), cfg_order(2), cost(0), selected
  4: Seq_num(4 port16), alive, sla(0x1), gid(0), cfg_order(3), cost(0), selected

```

```

Src address(1):
  172.16.205.0-172.16.205.255
Dst address(1):
  0.0.0.0-255.255.255.255

```

2. The routing table shows that there are ECMP default routes on all of the members, and ECMP specific (or best) routes only on port15 and port16:

```

FGT_A (root) # get router info routing-table static
Routing table for VRF=0
S*      0.0.0.0/0 [1/0] via 172.16.200.2, port1
          [1/0] via 172.16.208.2, dmz
          [1/0] via 172.16.209.2, port15
          [1/0] via 172.16.210.2, port16
S      10.1.100.22/32 [10/0] via 172.16.209.2, port15
          [10/0] via 172.16.210.2, port16

```

Because tie-break is set to fib-best-match, the first configured member from port15 and port16 is selected to forward traffic to PC\_2. For all other traffic, the first configured member from all four of the interfaces is selected to forward traffic.

3. On PC-1, generate traffic to PC-2:

```
ping 10.1.100.22
```

4. On FGT\_A, sniff for traffic sent to PC\_2:

```

# diagnose sniffer packet any 'host 10.1.100.22' 4
interfaces=[any]
filters=[host 10.1.100.22]
2.831299 port5 in 172.16.205.11 -> 10.1.100.22: icmp: echo request
2.831400 port15 out 172.16.205.11 -> 10.1.100.22: icmp: echo request

```

Traffic is leaving on port15, the first configured member from port15 and port16.

## Override quality comparisons in SD-WAN longest match rule matching


In SD-WAN rules, the longest match routes will override the quality comparisons when all of the specific routes are out of SLA.

With this feature in an SD-WAN rule:

- **Lowest Cost (sla):** Even though all of the egress ports on specific routes (longest matched routes) are out of SLA, the SD-WAN rule still selects the first configured or lower-cost port from the egress ports to forward traffic.
- **Best Quality (priority):** Even though the egress ports on specific routes (longest matched routes) have worse quality than all other ports on less specific routes, the SD-WAN rule still selects the best quality port from the ports on specific routes to forward traffic.

This feature avoids a situation where, if the members on specific routes (longest matched routes) are out of SLA or have worse quality, the traffic might be forwarded to the wrong members in SLA (higher quality) on the default or aggregate routes.

## Example

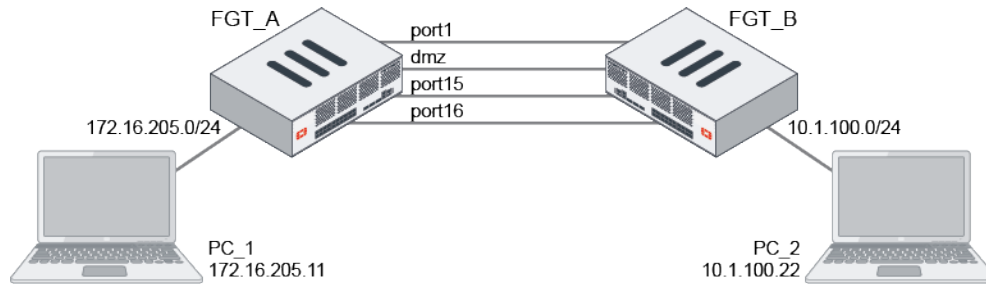

In this example, four SD-WAN members in two zones are configured. The remote PC (PC\_2 - 10.1.100.22) is accessible on port15 and port16, even though there are valid routes for all of the SD-WAN members. A single SD-WAN service rule is configured that allows traffic to be balanced between all four of the members, but only chooses between port15 and port16 for the specific 10.1.100.22 address. If neither port15 nor port16 meet the SLAs, traffic will be forwarded on one of these interfaces, instead of on port1 or dmz.

A performance SLA health check is configured to monitor 10.1.100.2. An SD-WAN service rule in Lowest Cost (SLA) mode is configured to select the best interface to steer the traffic. In the rule, the method of selecting a member if more than one meets the SLA (*tie-break*) is configured to select members that meet the SLA and match the longest prefix in the routing table (*fib-best-match*). If there are multiple ECMP routes with the same destination, the FortiGate will take the longest (or best) match in the routing table, and choose from those interface members.

### To configure the SD-WAN:

```
config system sdwan
  config zone
    edit "virtual-wan-link"
    next
    edit "z1"
    next
  end
  config members
    edit 1
      set interface "port1"
      set gateway 172.16.200.2
    next
    edit 2
      set interface "dmz"
      set gateway 172.16.208.2
    next
    edit 3
      set interface "port15"
      set zone "z1"
      set gateway 172.16.209.2
    next
    edit 4
      set interface "port16"
      set zone "z1"
      set gateway 172.16.210.2
    next
  end
  config health-check
```

```

        edit "1"
            set server "10.1.100.2"
            set members 0
            config sla
                edit 1
                next
            end
        next
    end
    config service
        edit 1
            set name "1"
            set mode sla
            set dst "all"
            set src "172.16.205.0"
            config sla
                edit "1"
                    set id 1
                next
            end
            set priority-members 1 2 3 4
            set tie-break fib-best-match
        next
    end
end

```

### To check the results:

1. The debug shows the SD-WAN service rule. Both port15 and port16 are up, but out of SLA:

```

FGT_A (root) # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Gen(3), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members(4):
  1: Seq_num(1 port1), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
  2: Seq_num(2 dmz), alive, sla(0x1), gid(0), cfg_order(1), cost(0), selected
  3: Seq_num(3 port15), alive, sla(0x0), gid(0), cfg_order(2), cost(0), selected
  4: Seq_num(4 port16), alive, sla(0x0), gid(0), cfg_order(3), cost(0), selected
Src address(1):
  172.16.205.0-172.16.205.255

Dst address(1):
  0.0.0.0-255.255.255.255

```

2. The routing table shows that there are ECMP default routes on all of the members, and ECMP specific (or best) routes only on port15 and port16:

```

FGT_A (root) # get router info routing-table static
Routing table for VRF=0
S*   0.0.0.0/0 [1/0] via 172.16.200.2, port1
      [1/0] via 172.16.208.2, dmz
      [1/0] via 172.16.209.2, port15
      [1/0] via 172.16.210.2, port16
S    10.1.100.22/32 [10/0] via 172.16.209.2, port15
      [10/0] via 172.16.210.2, port16

```

Because `tie-break` is set to `fib-best-match`, even though both `port15` and `port16` are out of SLA, the first configured member of the two (`port15`) is selected to forward traffic to `PC_2`. For all other traffic, the first configured member from all of the interfaces that are in SLA is selected to forward traffic (`port1`).

3. On `PC-1`, generate traffic to `PC-2`:

```
ping 10.1.100.22
```

4. On `FGT_A`, sniff for traffic sent to `PC_2`:

```
# diagnose sniffer packet any 'host 10.1.100.22' 4
interfaces=[any]
filters=[host 10.1.100.22]
2.831299 port5 in 172.16.205.11 -> 10.1.100.22: icmp: echo request
2.831400 port15 out 172.16.205.11 -> 10.1.100.22: icmp: echo request
```

Traffic is leaving on `port15`, the first configured member from `port15` and `port16`, even though both are out of SLA.

## Use an application category as an SD-WAN rule destination


An application category can be selected as an SD-WAN service rule destination criterion. Previously, only application groups or individual applications could be selected.

```
config system sdwan
  config service
    edit <id>
      set internet-service enable
      set internet-service-app-ctrl-category <id_1> <id_2> ... <id_n>
    next
  end
end
```

To view the detected application categories details based on category ID, use `diagnose sys sdwan internet-service-app-ctrl-category-list <id>`.

### Example

In this example, traffic steering is applied to traffic detected as video/audio (category ID 5) or email (category ID 21) and applies the lowest cost (SLA) strategy to this traffic. When costs are tied, the priority goes to member 1, `dmz`.

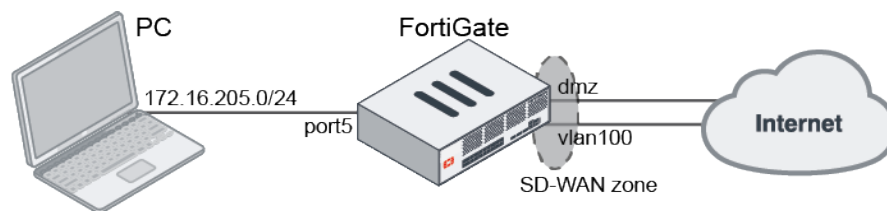

### To configure application categories as an SD-WAN rule destination in the GUI:

1. Enable the feature visibility:
  - a. Go to *System > Feature Visibility*.
  - b. In the *Additional Features* section, enable *Application Detection Based SD-WAN*.
  - c. Click *Apply*.





To enable GUI visibility of application detection based SD-WAN in the CLI:

```
config system global
    set gui-app-detection-sdwan enable
end
```

2. Configure the SD-WAN members:
  - a. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
  - b. Set the *Interface* to *dmz*, and set the *Gateway* to *172.16.208.2*.
  - c. Click *OK*.
  - d. Repeat these steps to create another member for the *vlan100* interface with gateway *172.16.206.2*.
3. Configure the performance SLA (health check):
  - a. Go to *Network > SD-WAN*, and select the *Performance SLAs* tab, and click *Create New*.
  - b. Configure the following settings:

<b>Name</b>	1
<b>Protocol</b>	DNS
<b>Server</b>	8.8.8.8
<b>SLA Target</b>	Enable

- c. Click *OK*.
4. Configure the SD-WAN rule to use the video/audio and email application categories:
  - a. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
  - b. In the *Destination* section, click the + in the *Application* field.
  - c. Click *Category*, and select *Video/Audio* and *Email*.

- d. Configure the other settings as needed.
  - e. Click *OK*.

5. Configure the firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Configure the following settings:

<b>Incoming Interface</b>	<i>port5</i>
<b>Outgoing Interface</b>	<i>virtual-wan-link</i>
<b>Source</b>	<i>172.16.205.0</i>
<b>Destination</b>	<i>all</i>
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>ALL</i>
<b>Action</b>	<i>ACCEPT</i>
<b>Application Control</b>	<i>g-default</i>
<b>SSL Inspection</b>	<i>certificate-inspection</i>

- c. Click *OK*.

#### To configure application categories as an SD-WAN rule destination in the CLI:

1. Configure the SD-WAN settings:

```

config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
    next
  end
  config members
    edit 1
      set interface "dmz"
      set gateway 172.16.208.2
    next
    edit 2
      set interface "vlan100"
      set gateway 172.16.206.2
    next
  end
  config health-check
    edit "1"
      set server "8.8.8.8"
      set protocol dns
      set members 0
      config sla
        edit 1
        next
      end
    next
  end
end
end
end

```

**2. Configure the SD-WAN rule to use application categories 5 and 21:**

```

config system sdwan
  config service
    edit 1
      set name "1"
      set mode sla
      set src "172.16.205.0"
      set internet-service enable
      set internet-service-app-ctrl-category 5 21
      config sla
        edit "1"
          set id 1
        next
      end
      set priority-members 1 2
    next
  end
end

```

**3. Configure the firewall policy:**

```

config firewall policy
  edit 1
    set srcintf "port5"
    set dstintf "virtual-wan-link"
    set action accept
    set srcaddr 172.16.205.0
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set application-list "g-default"
  next
end

```

**To test the configuration:****1. Verify that the traffic is sent over dmz:**

```

# diagnose firewall proute list
list route policy info(vf=root):
id=2133590017(0x7f2c0001) vwl_service=1(1) vwl_mbr_seq=1 2 dscp_tag=0xff 0xff flags=0x0
tos=0x00 tos_mask=0x00 protocol=0 sport=0-65535 iif=0 dport=1-65535 path(2) oif=5(dmz)
oif=95(vlan100)
source(1): 172.16.205.0-172.16.205.255
destination wildcard(1): 0.0.0.0/0.0.0.0
internet service(2): (null)(0,5,0,0,0) (null)(0,21,0,0,0)
hit_count=469 last_used=2021-12-15 15:06:05

```

**2. View some videos and emails on the PC, then verify the detected application details for each category:**

```

# diagnose sys sdwan internet-service-app-ctrl-category-list 5
YouTube(31077 4294838537): 142.250.217.110 6 443 Wed Dec 15 15:39:50 2021
YouTube(31077 4294838537): 173.194.152.89 6 443 Wed Dec 15 15:37:20 2021
YouTube(31077 4294838537): 173.194.152.170 6 443 Wed Dec 15 15:37:37 2021
YouTube(31077 4294838537): 209.52.146.205 6 443 Wed Dec 15 15:37:19 2021

```

```
# diagnose sys sdwan internet-service-app-ctrl-category-list 21
Gmail(15817 4294836957): 172.217.14.197 6 443 Wed Dec 15 15:39:47 2021
```

### 3. Verify that the captured email traffic is sent over dmz:

```
# diagnose sniffer packet any 'host 172.217.14.197' 4
interfaces=[any]
filters=[host 172.217.14.197]
5.079814 dmz out 172.16.205.100.60592 -> 172.217.14.197.443: psh 2961561240 ack
2277134591
```

### 4. Edit the SD-WAN rule so that dmz has a higher cost and vlan100 is preferred.

### 5. Verify that the traffic is now sent over vlan100:

```
# diagnose firewall proute list
list route policy info(vf=root):
id=2134048769(0x7f330001) vwl_service=1(1) vwl_mbr_seq=2 1 dscp_tag=0xff 0xff flags=0x0
tos=0x00 tos_mask=0x00 protocol=0 sport=0-65535 iif=0 dport=1-65535 path(2) oif=95
(vlan100) oif=5(dmz)
source(1): 172.16.205.0-172.16.205.255
destination wildcard(1): 0.0.0.0/0.0.0.0
internet service(2): (null) (0,5,0,0,0) (null) (0,21,0,0,0)
hit_count=635 last_used=2021-12-15 15:55:43

# diagnose sniffer packet any 'host 172.217.14.197' 4
interfaces=[any]
filters=[host 172.217.14.197]
304.625168 vlan100 in 172.16.205.100.60592 -> 172.217.14.197.443: psh 2961572711 ack
2277139565
```

## Advanced routing

The following topics provide instructions on SD-WAN advanced routing:

- [Local out traffic on page 750](#)
- [Using BGP tags with SD-WAN rules on page 756](#)
- [BGP multiple path support on page 760](#)
- [Controlling traffic with BGP route mapping and service rules on page 762](#)
- [Applying BGP route-map to multiple BGP neighbors on page 769](#)
- [Using multiple members per SD-WAN neighbor configuration on page 774](#)

## Local out traffic

Local out, or self-originating, traffic is traffic that originates from the FortiGate going to external servers and services. The traffic can be from Syslog, FortiAnalyzer logging, FortiGuard services, remote authentication, and others.

By default, local out traffic relies on routing table lookups to determine the egress interface that is used to initiate the connection. However, many types of local out traffic support selecting the egress interface based on SD-WAN or manually specified interfaces. When manually specifying the egress interface, the source IP address can also be manually configured.

Go to *Network > Local Out Routing* to configure the available types of local out traffic. Some types of traffic can only be configured in the CLI.



By default *Local Out Routing* is not visible in the GUI. Go to *System > Feature Visibility* to enable it. See [Feature visibility on page 2515](#) for more information.

When VDOMs are enabled, the following entries are available on the local out routing page:

Global view	VDOM view
<b>External Resources</b>	<b>LDAP Servers</b>
AWS_IP_Blacklist	ldap
AWS_Malware_Hash	
<b>Log</b>	<b>Log</b>
Log FortiAnalyzer Setting	Log FortiAnalyzer Override Settings
Log FortiAnalyzer Cloud Setting	Log Syslogd Override Settings
FortiGate Cloud Log Settings	
Log Syslogd Setting	<b>RADIUS Servers</b>
	fac_radius_server
<b>System</b>	<b>TACACS+</b>
System DNS	TACACS
System FortiGuard	
System FortiSandbox	

If a service is disabled, it is grayed out. To enable it, select the service and click *Enable Service*. If a service is enabled, there is a *Local Out Setting* button in the gutter of that service's edit page to directly configure the local-out settings.

## Examples

### To configure DNS local-out routing:

1. Go to *Network > Local Out Routing* and double-click *System DNS*.
2. For *Outgoing interface*, select one of the following:

<b>Auto</b>	Select the outgoing interface automatically based on the routing table.
<b>SD-WAN</b>	Select the outgoing interface using the configured SD-WAN interfaces and rules.
<b>Specify</b>	Select the outgoing interface from the dropdown.
<b>3. Use Interface IP</b>	Use the primary IP, which cannot be configured by the user.

**Manually**

Selected an IP from the list, if the selected interface has multiple IPs configured.

If *Specify* is selected, select a setting for *Source IP*:

4. Click **OK**.

To edit local-out settings from a **RADIUS** server entry:

1. Go to *User & Authentication > RADIUS Servers* and double-click an entry to edit it.
2. Click *Local Out Setting*.

The *Edit Local Out Setting* pane opens.

3. Configure the settings for *Outgoing interface* and *Source IP*.

The left screenshot shows the 'Edit RADIUS Server' configuration window. It includes fields for Name (fac\_radius\_server), Authentication method (Default), NAS IP, and a checkbox for 'Include in every user group'. Below these are sections for Primary and Secondary Servers, each with IP/Name, Secret, and Connection status fields. There are also buttons for 'Test Connectivity' and 'Test User Credentials'. The right screenshot shows the 'Edit Local Out Setting' window, which has fields for Name (fac\_radius\_server), Outgoing interface (Auto, SD-WAN, Specify), and Source IP (Use Interface IP, Manually). Both windows have OK and Cancel buttons at the bottom.

4. Click **OK**.

### To edit multiple entries concurrently:

1. Go to *Network > Local Out Routing*.
2. If applicable, select *IPv4* or *IPv6*. *IPv4+IPv6* does not support multi-select.
3. Click *Multi-Select Mode*. All of the local out settings that can be edited concurrently are shown.
4. Select the specific entries, or click *Select All* to select all of the entries.

	Name	Source IP	Outgoing Interface	IP Version
Log	FortiGate Cloud Log Settings	Dynamic	Auto	IPv4
System	System DNS	Dynamic	Auto	IPv4
	System FortiGuard	Dynamic	Auto	IPv4

5. Click **Edit** and configure the local out settings as required.

The screenshot shows the 'Edit Multiple Local Out Settings' dialog. It has fields for 'Outgoing interface' (Auto, SD-WAN, Specify) and 'Source IP' (Use Interface IP, Manually). There are OK and Cancel buttons at the bottom.

6. Click **OK**.

7. Click *Exit Multi-Select Mode* to return to the normal view.

## Configuring local out routing in the CLI

Some local out routing settings can only be configured using the CLI.

### PING

IPv4 and IPv6 pings can be configured to use SD-WAN rules:

```
execute ping-options use-sdwan {yes | no}
execute ping6-options use-sdwan {yes | no}
```

### Traceroute

IPv4 traceroute can be configured to use SD-WAN rules:

```
execute traceroute-options use-sdwan {yes | no}
```

### Central management

Central management traffic can use SD-WAN rules or a specific interface:

```
config system central-management
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

### NTP server

NTP server traffic can use SD-WAN rules or a specific interface:

```
config system ntp
    config ntpserver
        edit <id>
            set interface-select-method {auto | sdwan | specify}
            set interface <interface>
        next
    end
end
```

### DHCP proxy

DHCP proxy traffic can use SD-WAN rules or a specific interface:

```
config system settings
    set dhcp-proxy-interface-select-method {auto | sdwan | specify}
    set dhcp-proxy-interface <interface>
end
```

#### **dhcp-proxy-interface-select-method {auto | sdwan | specify}**

Select the interface selection method:

- **auto:** Set the outgoing interface automatically (default).
- **sdwan:** Set the interface by SD-WAN or policy routing rules.
- **specify:** Set the interface manually.

#### **dhcp-proxy-interface <interface>**

Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

### DHCP relay

DHCP relay traffic can use SD-WAN rules or a specific interface:

```
config system interface
    edit <interface>
        set dhcp-relay-interface-select-method {auto | sdwan | specify}
```



```

        set dhcp-relay-interface <interface>
    next
end

```

**dhcp-relay-interface-select-method {auto | sdwan | specify}**

Select the interface selection method:

- **auto:** Set the outgoing interface automatically (default).
- **sdwan:** Set the interface by SD-WAN or policy routing rules.
- **specify:** Set the interface manually.

**dhcp-relay-interface <interface>**

Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

## CA and local certificate renewal with SCEP

Certificate renewal with SCEP traffic can use SD-WAN rules or a specific interface:

```

config vpn certificate setting
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end

```

## IPS TLS protocol active probing

TLS active probing can use SD-WAN rules or a specific interface:

```

config ips global
    config tls-active-probe
        set interface-selection-method {auto | sdwan | specify}
        set interface <interface>
        set vdom <VDOM>
        set source-ip <IPv4 address>
        set source-ip6 <IPv6 address>
    end
end

```

**interface-select-method {auto | sdwan | specify}**

Select the interface selection method:

- **auto:** Set the outgoing interface automatically (default).
- **sdwan:** Set the interface by SD-WAN or policy routing rules.
- **specify:** Set the interface manually.

**interface <interface>**

Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

**vdom <VDOM>**

Specify the VDOM. This option is only available and must be configured when `interface-select-method` is `sdwan` or `specify`.

**source-ip <IPv4 address>**

Specify the source IPv4 address. This option is only available and must be configured when `interface-select-method` is `sdwan` or `specify`.

**source-ip6 <IPv6 address>**

Specify the source IPv6 address. This option is only available and must be configured when `interface-select-method` is `sdwan` or `specify`.

## Netflow and sflow

Netflow and sflow can use SD-WAN rules or a specific interface:

```
config system {netflow | sflow | vdom-netflow | vdom-sflow}
  set interface-select-method {auto | sdwan | specify}
  set interface <interface>
end
```

<b>interface-select-method {auto   sdwan   specify}</b>	Select the interface selection method: <ul style="list-style-type: none"> <li>• <b>auto:</b> Set the outgoing interface automatically (default).</li> <li>• <b>sdwan:</b> Set the interface by SD-WAN or policy routing rules.</li> <li>• <b>specify:</b> Set the interface manually.</li> </ul>
<b>interface &lt;interface&gt;</b>	Specify the outgoing interface. This option is only available and must be configured when <code>interface-select-method</code> is <code>specify</code> .

## FortiClient EMS

FortiClient EMS endpoint control traffic can use SD-WAN rules or a specific interface:

```
config endpoint-control fctems
  edit fctems1
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
  end
end
```


## TACACS+

System log entries can be sent to external TACACS+ accounting servers. TACACS+ traffic can use SD-WAN rules or a specific IP address:

```
config log tacacs+accounting setting
  set interface-select-method {auto | sdwan | specify}
  set source-ip <IP address>
end
```

## Using BGP tags with SD-WAN rules

SD-WAN rules can use Border Gateway Protocol (BGP) learned routes as dynamic destinations.

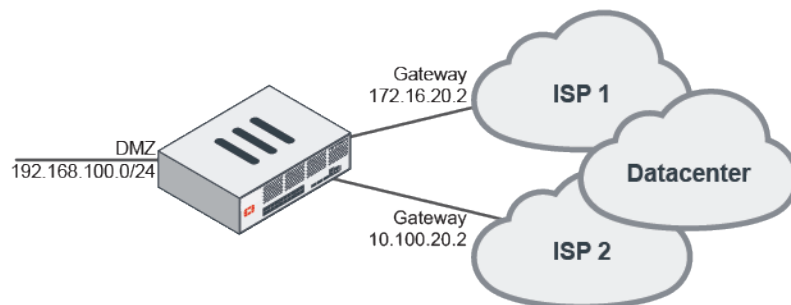

In this example, a customer has two ISP connections, wan1 and wan2. wan1 is used primarily for direct access to internet applications, and wan2 is used primarily for traffic to the customer's data center.

The customer could create an SD-WAN rule using the data center's IP address range as the destination to force that traffic to use wan2, but the data center's IP range is not static. Instead, a BGP tag can be used.

For this example, wan2's BGP neighbor advertises the data center's network range with a community number of 30:5.

This example assumes that SD-WAN is enabled on the FortiGate, wan1 and wan2 are added as SD-WAN members in the *virtual-wan-link* SD-WAN zone, and a policy and static route have been created. See [SD-WAN quick start on page 630](#) for details.



FortiOS supports IPv4 and IPv6 route tags.

---

### To configure BGP tags with SD-WAN rules:

#### 1. Configure the community list:

```
config router community-list
  edit "30:5"
    config rule
      edit 1
        set action permit
        set match "30:5"
      next
    end
  next
end
```

#### 2. Configure the route map:

```
config router route-map
  edit "comm1"
    config rule
      edit 1
        set match-community "30:5"
        set set-route-tag 15
      next
    end
  next
end
```

#### 3. Configure BGP:

```
config router bgp
  set as xxxxx
  set router-id xxxx
  config neighbor
    edit "10.100.20.2"
      set soft-reconfiguration enable
      set remote-as xxxxx
      set route-map-in "comm1"
    next
  end
end
```

#### 4. Configure a firewall policy:

```
config firewall policy
  edit 1
    set name "1"
```

```

        set srcintf "dmz"
        set dstintf "virtual-wan-link"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

##### 5. Edit the SD-WAN configuration:

```

config system sdwan
    set status enable
    config members
        edit 1
            set interface "wan1"
            set gateway 172.16.20.2
        next
        edit 2
            set interface "wan2"
        next
    end
    config service
        edit 1
            set name "DataCenter"
            set mode manual
            set route-tag 15
            set priority-members 2
        next
    end
end

```

## Troubleshooting BGP tags with SD-WAN rules

### Check the network community

Use the `get router info bgp network` command to check the network community:

```

# get router info bgp network
BGP table version is 5, local router ID is 1.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network Next Hop Metric LocPrf Weight RouteTag Path
*> 0.0.0.0/0 10.100.1.5 32768 0 ?
*> 1.1.1.1/32 0.0.0.0 32768 0 ?
*> 10.1.100.0/24 172.16.203.2 32768 0 ?
*> 10.100.1.0/30 0.0.0.0 32768 0 ?
*> 10.100.1.4/30 0.0.0.0 32768 0 ?
*> 10.100.1.248/29 0.0.0.0 32768 0 ?
*> 10.100.10.0/24 10.100.1.5 202 10000 15 20 e
*> 172.16.200.0/24 0.0.0.0 32768 0 ?
*> 172.16.200.200/32
    0.0.0.0 32768 0 ?

```

```
*> 172.16.201.0/24 172.16.200.4 32768 0 ?
*> 172.16.203.0/24 0.0.0.0 32768 0 ?
*> 172.16.204.0/24 172.16.200.4 32768 0 ?
*> 172.16.205.0/24 0.0.0.0 32768 0 ?
*> 172.16.206.0/24 0.0.0.0 32768 0 ?
*> 172.16.207.1/32 0.0.0.0 32768 0 ?
*> 172.16.207.2/32 0.0.0.0 32768 0 ?
*> 172.16.212.1/32 0.0.0.0 32768 0 ?
*> 172.16.212.2/32 0.0.0.0 32768 0 ?
*> 172.17.200.200/32
      0.0.0.0 32768 0 ?
*> 172.27.1.0/24 0.0.0.0 32768 0 ?
*> 172.27.2.0/24 0.0.0.0 32768 0 ?
*> 172.27.5.0/24 0.0.0.0 32768 0 ?
*> 172.27.6.0/24 0.0.0.0 32768 0 ?
*> 172.27.7.0/24 0.0.0.0 32768 0 ?
*> 172.27.8.0/24 0.0.0.0 32768 0 ?
*> 172.29.1.0/24 0.0.0.0 32768 0 ?
*> 172.29.2.0/24 0.0.0.0 32768 0 ?
*> 192.168.1.0 0.0.0.0 32768 0 ?
```

Total number of prefixes 28

```
# get router info bgp network 10.100.11.0
BGP routing table entry for 10.100.10.0/24
Paths: (2 available, best 1, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
    172.10.22.2
  20
    10.100.20.2 from 10.100.20.2 (6.6.6.6)
      Origin EGP metric 200, localpref 100, weight 10000, valid, external, best
      Community: 30:5 <<<<=====
      Last update: Wen Mar 20 18:45:17 2019
```

## Check dynamic BGP addresses

Use the `get router info route-map-address` command to check dynamic BGP addresses:

```
# get router info route-map-address
Extend-tag: 15, interface(wan2:16)
  10.100.11.0/255.255.255.0
```

## Check dynamic BGP addresses used in policy routes

Use the `diagnose firewall proute list` command to check dynamic BGP addresses used in policy routes:


```
# diagnose firewall proute list
list route policy info(vf=root):

id=4278779905 vwl_service=1(DataCenter) flags=0x0 tos=0x00 tos_mask=0x00 protocol=0
sport=0:65535 iif=0 dport=1-65535 oif=16
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 10.100.11.0/255.255.255.0
```

## BGP multiple path support

BGP supports multiple paths, allowing an ADVPN to advertise multiple paths. This allows BGP to extend and keep additional network paths according to [RFC 7911](#).

In this example, Spoke1 and Spoke2 each have four VPN tunnels that are connected to the Hub with ADVPN. The Spoke-Hub has established four BGP neighbors on all four tunnels.

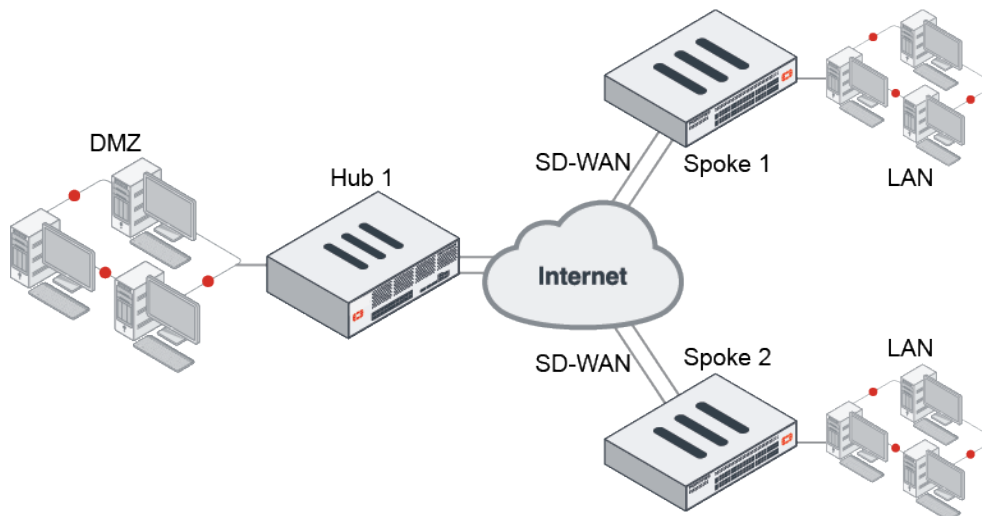

Spoke 1 and Spoke 2 can learn four different routes from each other.

### To configure the hub:

```
config router bgp
  set as 65505
  set router-id 11.11.11.11
  set ibgp-multipath enable
  set additional-path enable
  set additional-path-select 4
  config neighbor-group
    edit "gr1"
      set capability-default-originate enable
      set remote-as 65505
      set additional-path both
      set adv-additional-path 4
      set route-reflector-client enable
    next
  end
  config neighbor-range
    edit 1
      set prefix 10.10.0.0 255.255.0.0
      set neighbor-group "gr1"
    next
  end
  config network
    edit 12
      set prefix 11.11.11.11 255.255.255.255
    next
```

```

end
end

```

### To configure a spoke:

```

config router bgp
    set as 65505
    set router-id 2.2.2.2
    set ibgp-multipath enable
    set additional-path enable
    set additional-path-select 4
config neighbor
    edit "10.10.100.254"
        set soft-reconfiguration enable
        set remote-as 65505
        set additional-path both
        set adv-additional-path 4
    next
    edit "10.10.200.254"
        set soft-reconfiguration enable
        set remote-as 65505
        set additional-path both
        set adv-additional-path 4
    next
    edit "10.10.203.254"
        set soft-reconfiguration enable
        set remote-as 65505
        set additional-path both
        set adv-additional-path 4
    next
    edit "10.10.204.254"
        set soft-reconfiguration enable
        set remote-as 65505
        set additional-path both
        set adv-additional-path 4
    next
end
config network
    edit 3
        set prefix 22.1.1.0 255.255.255.0
    next
end
end

```

### To view the BGP routing table on a spoke:

```

Spoke1 # get router info routing-table bgp
Routing table for VRF=0
B*   0.0.0.0/0 [200/0] via 10.10.200.254, vd2-2, 03:57:26
      [200/0] via 10.10.203.254, vd2-3, 03:57:26
      [200/0] via 10.10.204.254, vd2-4, 03:57:26
      [200/0] via 10.10.100.254, vd2-1, 03:57:26
B    1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
      [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
      [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
      [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51

```

```

B      11.11.11.11/32 [200/0] via 10.10.200.254, vd2-2, 03:57:51
[200/0] via 10.10.203.254, vd2-3, 03:57:51
[200/0] via 10.10.204.254, vd2-4, 03:57:51
[200/0] via 10.10.100.254, vd2-1, 03:57:51
B      33.1.1.0/24 [200/0] via 10.10.204.3, vd2-4, 03:57:26
[200/0] via 10.10.203.3, vd2-3, 03:57:26
[200/0] via 10.10.200.3, vd2-2, 03:57:26
[200/0] via 10.10.100.3, vd2-1, 03:57:26
[200/0] via 10.10.204.3, vd2-4, 03:57:26
[200/0] via 10.10.203.3, vd2-3, 03:57:26
[200/0] via 10.10.200.3, vd2-2, 03:57:26
[200/0] via 10.10.100.3, vd2-1, 03:57:26
[200/0] via 10.10.204.3, vd2-4, 03:57:26
[200/0] via 10.10.203.3, vd2-3, 03:57:26
[200/0] via 10.10.200.3, vd2-2, 03:57:26
[200/0] via 10.10.100.3, vd2-1, 03:57:26
[200/0] via 10.10.204.3, vd2-4, 03:57:26
[200/0] via 10.10.203.3, vd2-3, 03:57:26
[200/0] via 10.10.200.3, vd2-2, 03:57:26
[200/0] via 10.10.100.3, vd2-1, 03:57:26

```

## Controlling traffic with BGP route mapping and service rules


SD-WAN allows you to select different outbound WAN links based on performance SLAs. It is important that BGP neighbors are aware of these settings, and changes to them.

BGP can adapt to changes in SD-WAN link SLAs in the following ways:

- Applying different route-maps based on the SD-WAN's health checks. For example, different BGP community strings can be advertised to BGP neighbors when SLAs are not met.
- Traffic can be selectively forwarded based on the active BGP neighbor. If the SD-WAN service's role matches the active SD-WAN neighbor, the service is enabled. If there is no match, then the service is disabled.

### Example

In this topology, a branch FortiGate has two SD-WAN gateways serving as the primary and secondary gateways. The gateways reside in different datacenters, but have a full mesh network between them.

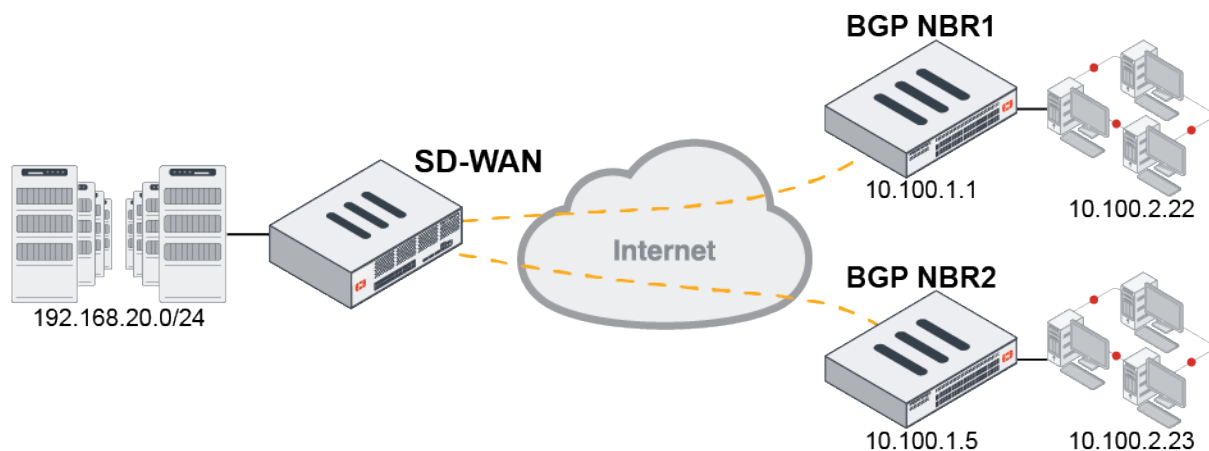



This example shows how route-maps and service rules are selected based on performance SLAs and the member that is currently active. Traffic flows through the primary gateway unless the neighbor's health check is outside of its SLA. If that happens, traffic routes to the secondary gateway.

BGP NBR1 is the primary neighbor and BGP NBR2 is the secondary neighbor.

The branch FortiGate's wan1 and wan2 interfaces are members of the SD-WAN. When the SD-WAN neighbor status is primary, it will advertise community *20:1* to BGP NBR1 and *20:5* to BGP NBR2. When the SD-WAN neighbor status is secondary, it will advertise *20:5* to BGP NBR1 and *20:2* to BGP NBR2.

Only one of the primary or secondary neighbors can be active at one time. The SD-WAN neighbor status is used to decide which neighbor is selected:

- **Primary:** The primary neighbor takes precedence if its SLAs are met.
- **Secondary:** If the primary neighbor's SLAs are not met, the secondary neighbor becomes active if its SLAs are met.
- **Standalone:** If neither the primary or secondary neighbor's SLAs are met, the SD-WAN neighbor status becomes standalone.

## Route map

SD-WAN is configured to let BGP advertise different communities when the SLA status changes. When the SLA is missed, it triggers BGP to advertise a different community to its BGP neighbor based on its route-map. The BGP neighbors can use the received community string to select the best path to reach the branch.

### To configure BGP route-maps and neighbors:

1. Configure an access for the routes to be matched:

```
config router access-list
  edit "net192"
    config rule
      edit 1
        set prefix 192.168.20.0 255.255.255.0
      next
    end
  next
end
```

2. Configure the primary neighbor's preferred route-map:

```
config router route-map
  edit "comm1"
    config rule
      edit 1
        set match-ip-address "net192"
        set set-community "20:1"
      next
    end
  next
end
```

3. Configure the secondary neighbor's preferred route-map:

```
config router route-map
  edit "comm2"
    config rule
      edit 1
```

```

        set match-ip-address "net192"
        set set-community "20:2"
    next
end
next
end

```

#### 4. Configure the failed route-map:

```

config router route-map
    edit "comm5"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "20:5"
            next
        end
    next
end

```

#### 5. Configure BGP neighbors:

```

config router bgp
    set as 65412
    set router-id 1.1.1.1
    set ibgp-multipath enable
    config neighbor
        edit "10.100.1.1"
            set soft-reconfiguration enable
            set remote-as 20
            set route-map-out "comm5"
            set route-map-out-preferable "comm1"
        next
        edit "10.100.1.5"
            set soft-reconfiguration enable
            set remote-as 20
            set route-map-out "comm5"
            set route-map-out-preferable "comm2"
        next
    end
end

```

When SLAs are met, route-map-out-preferable is used. When SLAs are missed, route-map-out is used.

### To configure SD-WAN:

#### 1. Configure the SD-WAN members:

```

config system sdwan
    set status enable
    config members
        edit 1
            set interface "port1"
        next
        edit 2
            set interface "port2"
        next
    end
end

```

```

    end
end

```

## 2. Configure health checks for each member:

```

config system sdwan
  config health-check
    edit "ping"
      set server "10.100.2.22"
      set members 1
      config sla
        edit 1
          set link-cost-factor packet-loss
          set packetloss-threshold 1
        next
      end
    next
  edit "ping2"
    set server "10.100.2.23"
    set members 2
    config sla
      edit 1
        set link-cost-factor packet-loss
        set packetloss-threshold 1
      next
    end
  next
end
end

```

## 3. Configure the SD-WAN neighbors and assign them a role and the health checks used to determine if the neighbor meets the SLA:

SD-WAN neighbors can only be configured in the CLI.

```

config system sdwan
  config neighbor
    edit "10.100.1.1"
      set member 1
      set role primary
      set health-check "ping"
      set sla-id 1
    next
    edit "10.100.1.5"
      set member 2
      set role secondary
      set health-check "ping2"
      set sla-id 1
    next
  end
end

```

## Service rules

Create SD-WAN service rules to direct traffic to the primary neighbor when its SLAs are met, and to the secondary neighbor when the primary neighbor's SLAs are missed.

**To configure the SD-WAN service rules:**

```

config system sdwan
  config service
    edit 1
      set name "Primary-Out"
      set role primary
      set dst "all"
      set src "all"
      set priority-members 1
    next
    edit 2
      set name "Secondary-Out"
      set role secondary
      set dst "all"
      set src "all"
      set priority-members 2
    next
  end
end

```



If neither the primary nor secondary neighbors are active, the SD-WAN neighbor status becomes standalone. Only service rules with `standalone-action` enabled will continue to pass traffic. This option is disabled by default.

---

**Verification****To verify when the primary neighbor is passing traffic:****1. Verify the health check status:**

```

FortiGate-Branch # diagnose sys sdwan health-check
Health Check(ping):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(0.569), jitter(0.061) sla_
map=0x1
Health Check(ping2):
Seq(2 port2): state(alive), packet-loss(0.000%) latency(3.916), jitter(2.373) sla_
map=0x1

```

**2. Verify SD-WAN neighbor status:**

```

FortiGate-Branch # diagnose sys sdwan neighbor
SD-WAN neighbor status: hold-down(disable), hold-down-time(0), hold_boot_time(0)
Selected role(primary) last_secondary_select_time/current_time in seconds 0/572
Neighbor(10.100.1.1): member(1) role(primary)
  Health-check(ping:1) sla-pass selected alive
Neighbor(10.100.1.5): member(2) role(secondary)
  Health-check(ping2:1) sla-pass alive

```

**3. Verify service rules status:**

```

FortiGate-Branch # diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(3), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Service role: primary

```

```

Members:
  1: Seq_num(1 port1), alive, selected
Src address:
  0.0.0.0-255.255.255.255

Dst address:
  0.0.0.0-255.255.255.255

Service(2): Address Mode(IPV4) flags=0x0
Gen(6), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Service role: secondary, disabled by unselected.
Members:
  1: Seq_num(2 port2), alive, selected
Src address:
  0.0.0.0-255.255.255.255

Dst address:
  0.0.0.0-255.255.255.255

```

#### 4. Verify neighbor routers:

##### a. Primary neighbor router:

```

FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    10.100.1.2 from 10.100.1.2 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 20:1
      Last update: Thu Apr 30 13:41:40 2020

```

##### b. Secondary neighbor router:

```

FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  64512
    10.100.1.6 from 10.100.1.6 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 20:5
      Last update: Thu Apr 30 13:41:39 2020

```

#### To verify when the secondary neighbor is passing traffic:

##### 1. Verify the health check status:

```

FortiGate-Branch # diagnose sys sdwan health-check
Health Check(ping):
Seq(1 port1): state(dead), packet-loss(54.000%) sla_map=0x0
Health Check(ping2):
Seq(2 port2): state(alive), packet-loss(0.000%) latency(4.339), jitter(3.701) sla_map=0x1

```

**2. Verify SD-WAN neighbor status:**

```
FortiGate-Branch # diagnose sys sdwan neighbor
SD-WAN neighbor status: hold-down(disable), hold-down-time(0), hold_boot_time(0)
    Selected role(secondary) last_secondary_select_time/current_time in seconds
936/936
Neighbor(10.100.1.1): member(1) role(primary)
    Health-check(ping:1) sla-fail dead
Neighbor(10.100.1.5): member(2) role(secondary)
    Health-check(ping2:1) sla-pass selected alive
```

**3. Verify service rules status:**

```
FortiGate-Branch # diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(4), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: primary, disabled by unselected.
  Members:
    1: Seq_num(1 port1), alive, selected
  Src address:
    0.0.0.0-255.255.255.255

  Dst address:
    0.0.0.0-255.255.255.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(7), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: secondary
  Members:
    1: Seq_num(2 port2), alive, selected
  Src address:
    0.0.0.0-255.255.255.255

  Dst address:
    0.0.0.0-255.255.255.255
```

**4. Verify neighbor routers:****a. Primary neighbor router:**

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
  10.100.1.2 from 10.100.1.2 (192.168.122.98)
    Origin IGP metric 0, localpref 100, valid, external, best
    Community: 20:5
  Last update: Thu Apr 30 15:41:58 2020
```

**b. Secondary neighbor router:**


```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  64512
  10.100.1.6 from 10.100.1.6 (192.168.122.98)
```

```
Origin IGP metric 0, localpref 100, valid, external, best
Community: 20:2
Last update: Thu Apr 30 15:42:07 2020
```

## Applying BGP route-map to multiple BGP neighbors

Controlling traffic with BGP route mapping and service rules explained how BGP can apply different route-maps to the primary and secondary SD-WAN neighbors based on SLA health checks.

In this example, SD-WAN neighbors that are not bound to primary and secondary roles are configured.

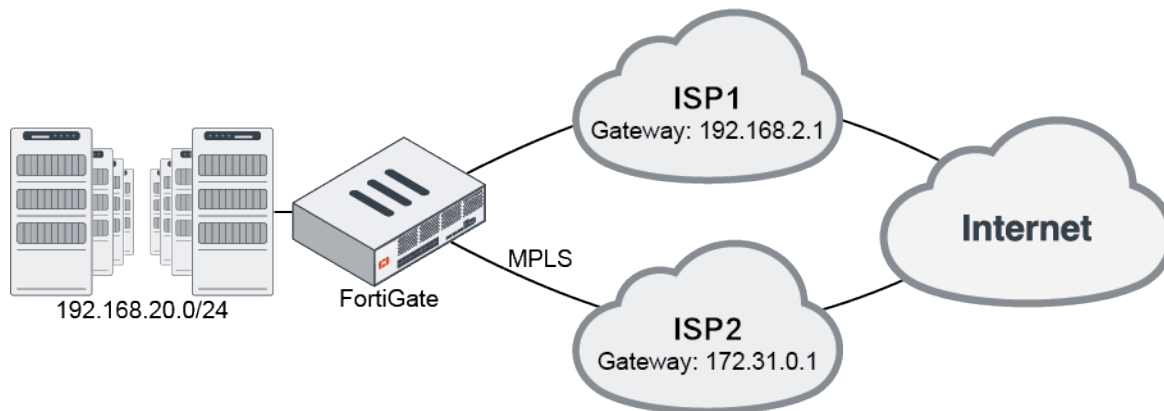

The FortiGate has multiple SD-WAN links and has formed BGP neighbors with both ISPs.

ISP1 is used primarily for outbound traffic, and has an SD-WAN service rule using the lowest cost algorithm applied to it. When SLAs for ISP1 are not met, it will fail over to the MPLS line.

Inbound traffic is allowed by both WAN links, with each WAN advertising a community string when SLAs are met. When SLAs are not met, the WAN links advertise a different community string.

This example uses two SD-WAN links. The topology can be expanded to include more links as needed.

### To configure BGP route-maps and neighbors:

1. Configure an access list for routes to be matched:

```
config router access-list
  edit "net192"
    config rule
      edit 1
        set prefix 192.168.20.0 255.255.255.0
      next
    end
  next
end
```

2. Configure route-maps for neighbor ISP1:

```
config router route-map
  edit "comm1"
    config rule
      edit 1
        set match-ip-address "net192"
```

```

        set set-community "64511:1"
    next
end
next
edit "comm-fail1"
    config rule
        edit 1
            set match-ip-address "net192"
            set set-community "64511:5"
        next
    end
next
end

```

### 3. Configure route-maps for neighbor ISP2:

```

config router route-map
    edit "comm2"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64522:1"
            next
        end
    next
    edit "comm-fail2"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64522:5"
            next
        end
    next
end

```

### 4. Configure the BGP neighbors:

```

config router bgp
    set as 64512
    set keepalive-timer 1
    set holdtime-timer 3
    config neighbor
        edit "192.168.2.1"
            set soft-reconfiguration enable
            set remote-as 64511
            set route-map-out "comm-fail1"
            set route-map-out-preferable "comm1"
        next
        edit "172.31.0.1"
            set soft-reconfiguration enable
            set remote-as 64522
            set route-map-out "comm-fail2"
            set route-map-out-preferable "comm2"
        next
    end
    config network
        edit 1

```



```
        set prefix 192.168.20.0 255.255.255.0
    next
end
end
```

When SLAs are met, `route-map-out-preferable` is used. When SLAs are missed, `route-map-out` is used.

## To configure SD-WAN:

### 1. Configure the SD-WAN members:

```
config system sdwan
    set status enable
    config members
        edit 1
            set interface "port1"
            set gateway 192.168.2.1
        next
        edit 2
            set interface "MPLS"
            set cost 20
        next
    end
end
```

### 2. Configure the health checks that must be met:

```
config system sdwan
    config health-check
        edit "pingserver"
            set server "8.8.8.8"
            set members 2 1
            config sla
                edit 1
                    set link-cost-factor packet-loss
                    set packetloss-threshold 2
                next
            end
        next
    end
end
```

### 3. Configure the SD-WAN neighbors and assign them a role and the health checks used to determine if the neighbor meets the SLA:

When no role is defined, the default role, `standalone`, is used.

```
config system sdwan
    config neighbor
        edit "192.168.2.1"
            set member 1
            set health-check "pingserver"
            set sla-id 1
        next
        edit "172.31.0.1"
            set member 2
            set health-check "pingserver"
            set sla-id 1
        next
    end
```

```

    end
end

```

## Service rules

Create SD-WAN service rules to direct traffic to the SD-WAN links based on the lowest cost algorithm. The same SLA health check and criteria that are used for the SD-WAN neighbor are used for this SD-WAN service rule.

When no roles are defined in the service rule, the default role, `standalone`, is used.

### To configure the SD-WAN service rule:

```

config system sdwan
  config service
    edit 1
      set name "OutboundAll"
      set mode sla
      set dst "all"
      set src "all"
      config sla
        edit "pingserver"
          set id 1
        next
      end
      set priority-members 1 2
    next
  end
end

```

## Verification

### To verify that when both SLAs are met, port1 is selected due to its lower cost:

#### 1. Verify the health check status:

```

FortiGate-Branch # diagnose sys sdwan health-check
Health Check(pingserver):
Seq(2 MPLS): state(alive), packet-loss(0.000%) latency(24.709), jitter(14.996) sla_
map=0x1
Seq(1 port1): state(alive), packet-loss(0.000%) latency(28.771), jitter(14.840) sla_
map=0x1

```

#### 2. Verify SD-WAN neighbor status:

```

FortiGate-Branch # diagnose sys sdwan neighbor
Neighbor(192.168.2.1): member(1) role(standalone)
  Health-check(pingserver:1) sla-pass selected alive
Neighbor(172.31.0.1): member(2) role(standalone)
  Health-check(pingserver:1) sla-pass selected alive

```

#### 3. Verify service rules status:

Because the service role is `standalone`, it matches both neighbors. The mode (SLA) determines that port1 is lower cost.

```

FortiGate-Branch # diagnose sys sdwan service

```

```

Service(1): Address Mode(IPV4) flags=0x0
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Service role: standalone
Members:
  1: Seq_num(1 port1), alive, sla(0x1), cfg_order(0), cost(0), selected
  2: Seq_num(2 MPLS), alive, sla(0x1), cfg_order(1), cost(20), selected
Src address:
  0.0.0.0-255.255.255.255

Dst address:
  0.0.0.0-255.255.255.255

```

#### 4. Verify neighbor routers:

##### a. Primary neighbor router:

```

FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
Not advertised to any peer
64512
192.168.2.5 from 192.168.2.5 (192.168.122.98)
Origin IGP metric 0, localpref 100, valid, external, best
Community: 64511:1
Last update: Thu Apr 30 23:59:05 2020

```

##### b. Secondary neighbor router:

```

FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
Not advertised to any peer
Original VRF 0
64512
172.31.0.2 from 172.31.0.2 (192.168.122.98)
Origin IGP metric 0, localpref 100, valid, external, best
Community: 64522:1
Last update: Fri May 1 00:11:28 2020

```

**To verify that when neighbor ISP1 misses SLAs, MPLS is selected and BGP advertises a different community string for ISP1:**

#### 1. Verify the health check status:

```

FortiGate-Branch # diagnose sys sdwan health-check
Health Check(pingserver):
Seq(2 MPLS): state(alive), packet-loss(0.000%) latency(25.637), jitter(17.820) sla_map=0x1
Seq(1 port1): state(dead), packet-loss(16.000%) sla_map=0x0

```

#### 2. Verify SD-WAN neighbor status:

```

FortiGate-Branch # diagnose sys sdwan neighbor
Neighbor(192.168.2.1): member(1) role(standalone)
Health-check(pingserver:1) sla-fail dead
Neighbor(172.31.0.1): member(2) role(standalone)
Health-check(pingserver:1) sla-pass selected alive

```

**3. Verify service rules status:**

As SLA failed for neighbor ISP1, MPLS is preferred.

```
FortiGate-Branch # diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(3), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Service role: standalone
  Members:
    1: Seq_num(2 MPLS), alive, sla(0x1), cfg_order(1), cost(20), selected
    2: Seq_num(1 port1), dead, sla(0x0), cfg_order(0), cost(0)
  Src address:
    0.0.0.0-255.255.255.255

  Dst address:
    0.0.0.0-255.255.255.255
```

**4. Verify neighbor routers:**

The community received on ISP1 is updated.

**a. Primary neighbor router:**

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    192.168.2.5 from 192.168.2.5 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 64511:5
      Last update: Fri May 1 00:33:26 2020
```

**b. Secondary neighbor router:**

```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  64512
    172.31.0.2 from 172.31.0.2 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 64522:1
      Last update: Fri May 1 00:22:42 2020
```

## Using multiple members per SD-WAN neighbor configuration

SD-WAN BGP neighbor configurations are used to define the SLA health check in which an SD-WAN member must meet to qualify as being up. When the SD-WAN member meets the SLA threshold, the FortiGate will apply the route map defined in the BGP neighbor's `route-map-out-preferable` option. If the SD-WAN member fails to meet the SLA, the FortiGate will apply the route map defined in the BGP neighbor's `route-map-out` option instead. This allows the FortiGate to advertise the health of the SD-WAN member to its BGP neighbor by advertising different community strings based on its SLA status.



For more information, refer to the following BGP examples: [Controlling traffic with BGP route mapping and service rules on page 762](#) and [Applying BGP route-map to multiple BGP neighbors on page 769](#).

Selecting multiple SD-WAN members allows the SD-WAN neighbor feature to support topologies where there are multiple SD-WAN overlays and/or underlays to a neighbor. The `minimum-sla-meet-members` option is used to configure the minimum number of members that must be in an SLA per neighbor for the preferable route map to be used.

```
config system sdwan
  config neighbor
    edit <ip>
      set member {<seq-num_1>} [<seq-num_2>] ... [<seq-num_n>]
      set minimum-sla-meet-members <integer>
    next
  end
end
```

<pre>member {&lt;seq-num_1&gt;}       [&lt;seq-num_2&gt;] ...       [&lt;seq-num_n&gt;]</pre>	Enter the member sequence number list. Multiple members can be defined.
<pre>minimum-sla-meet-members       &lt;integer&gt;</pre>	<p>Set the minimum number of members that meet SLA when the neighbor is preferred (1 - 255, default = 1).</p> <ul style="list-style-type: none"> <li>• If the number of in SLA members is less than the <code>minimum-sla-meet-members</code> value, the default route map will be used.</li> <li>• If the number of in SLA members is equal or larger than the <code>minimum-sla-meet-members</code> value, the preferable route map will be used.</li> </ul>


## Example

In the following example, the spoke FortiGate has four tunnels: two tunnels to Hub\_1 and two tunnels to Hub\_2. The spoke has two BGP neighbors: one to Hub\_1 and one to Hub-2. BGP neighbors are established on loopback IPs.

The SD-WAN neighbor plus `route-map-out-preferable` configuration is deployed on the spoke to achieve the following:

- If any tunnel to Hub\_1 or Hub\_2 is in SLA, the preferable route map will be applied on the BGP neighbor to Hub\_1 or Hub\_2.
- If both tunnels to Hub\_1 or Hub\_2 are out of SLA, the default route map will be applied on the BGP neighbor to Hub\_1 or Hub\_2.

The preferable route map and default route map are used to set different custom BGP communities as the spoke advertises its LAN routes to the hub. Each hub can translate communities into different BGP MED or AS prepends and signal them to the external peers to manipulate inbound traffic, thereby routing traffic to the spoke only when the SLAs are met on at least one of two VPN overlays. In this example, community string 10:1 signals to the neighbor that SLAs are met, and 10:2 signals that SLAs are not met.

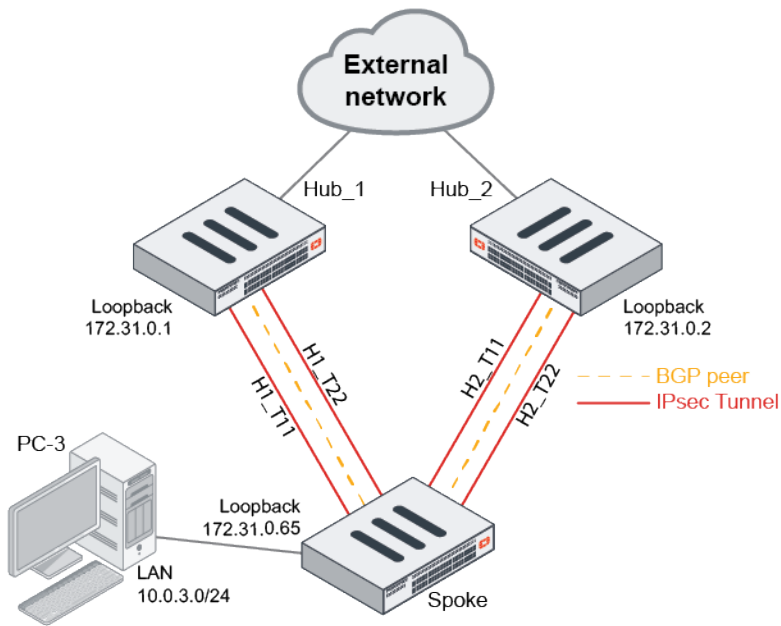

### To configure the BGP route maps and neighbors:

1. Configure an access list of prefixes to be matched:

```
config router access-list
  edit "net10"
    config rule
      edit 1
        set prefix 10.0.3.0 255.255.255.0
      next
    end
  next
end
```

2. Configure route maps for neighbors in SLA (preferable) and out of SLA (default):

```
config router route-map
  edit "in_sla"
    config rule
      edit 1
        set match-ip-address "net10"
        set set-community "10:1"
      next
    end
  next
  edit "out_sla"
    config rule
      edit 1
        set match-ip-address "net10"
        set set-community "10:2"
      next
    end
  next
end
```

**3. Configure the BGP neighbors:**

```
config router bgp
  set router-id 172.31.0.65
  config neighbor
    edit "172.31.0.1"
      set route-map-out "out_sla"
      set route-map-out-preferable "in_sla"
      set update-source "Loopback0"
    next
    edit "172.31.0.2"
      set route-map-out "out_sla"
      set route-map-out-preferable "in_sla"
      set update-source "Loopback0"
    next
  end
  config network
    edit 1
      set prefix 10.0.3.0 255.255.255.0
    next
  end
end
```

**To configure SD-WAN:****1. Configure the SD-WAN members:**

```
config system sdwan
  set status enable
  config members
    edit 1
      set interface "H1_T11"
      set source 172.31.0.65
    next
    edit 4
      set interface "H1_T22"
      set source 172.31.0.65
    next
    edit 6
      set interface "H2_T11"
      set source 172.31.0.65
    next
    edit 9
      set interface "H2_T22"
      set source 172.31.0.65
    next
  end
end
```

**2. Configure the health check that must be met:**

```
config system sdwan
  config health-check
    edit "HUB"
      set server "172.31.100.100"
      set members 0
    config sla
```

```

        edit 1
            set link-cost-factor latency
            set latency-threshold 100
        next
    end
next
end
end

```

### 3. Configure the SD-WAN neighbors:

```

config system sdwan
config neighbor
    edit "172.31.0.1"
        set member 1 4
        set health-check "HUB"
        set sla-id 1
        set minimum-sla-meet-members 1
    next
    edit "172.31.0.2"
        set member 6 9
        set health-check "HUB"
        set sla-id 1
        set minimum-sla-meet-members 1
    next
end
end

```

**To verify that when two members to Hub\_1/Hub\_2 are in SLA, the preferable route map is be applied on BGP neighbors to Hub\_1/Hub\_2:**

```

Branch1_A_FGT (root) # diagnose sys sdwan health-check
Health Check(HUB):
Seq(1 H1_T11): state(alive), packet-loss(0.000%) latency(0.209), jitter(0.017), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999999), bandwidth-bi(1999998) sla_map=0x1
Seq(4 H1_T22): state(alive), packet-loss(0.000%) latency(0.171), jitter(0.004), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x1
Seq(6 H2_T11): state(alive), packet-loss(0.000%) latency(0.175), jitter(0.014), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999999), bandwidth-bi(1999998) sla_map=0x1
Seq(9 H2_T22): state(alive), packet-loss(0.000%) latency(0.176), jitter(0.019), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x1

# diagnose sys sdwan neighbor
Neighbor(172.31.0.1): member(1 4 )role(standalone)
    Health-check(HUB:1)  sla-pass selected alive
Neighbor(172.31.0.2): member(6 9 )role(standalone)
    Health-check(HUB:1)  sla-pass selected alive

```

**On Hub\_1 and Hub\_2, the expected communities have been attached into the spoke's LAN route:**

```

Hub_1_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
    Not advertised to any peer
    Original VRF 0
    Local, (Received from a RR-client)
        172.31.0.65 from 172.31.0.65 (172.31.0.65)
            Origin IGP metric 0, localpref 100, valid, internal, best

```



**Community: 10:1**

Last update: Wed Dec 29 22:38:29 2021

```
Hub_2_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  Local, (Received from a RR-client)
    172.31.0.65 from 172.31.0.65 (172.31.0.65)
      Origin IGP metric 0, localpref 100, valid, internal, best
Community: 10:1
```

Last update: Wed Dec 29 22:43:10 2021

If one member for each neighbor becomes out of SLA, the preferable route map is still applied:

```
Branch1_A_FGT (root) # diagnose sys sdwan health-check
Health Check(HUB):
Seq(1 H1_T11): state(alive), packet-loss(0.000%) latency(120.207), jitter(0.018), mos
(4.338), bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x0
Seq(4 H1_T22): state(alive), packet-loss(0.000%) latency(0.182), jitter(0.008), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x1
Seq(6 H2_T11): state(alive), packet-loss(0.000%) latency(120.102), jitter(0.009), mos
(4.404), bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x0
Seq(9 H2_T22): state(alive), packet-loss(0.000%) latency(0.176), jitter(0.009), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x1

# diagnose sys sdwan neighbor
Neighbor(172.31.0.1): member(1 4 )role(standalone)
  Health-check(HUB:1) sla-pass selected alive
Neighbor(172.31.0.2): member(6 9 )role(standalone)
  Health-check(HUB:1) sla-pass selected alive

Hub_1_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  Local, (Received from a RR-client)
    172.31.0.65 from 172.31.0.65 (172.31.0.65)
      Origin IGP metric 0, localpref 100, valid, internal, best
Community: 10:1
  Last update: Thu Dec 30 10:44:47 2021

Hub_2_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  Local, (Received from a RR-client)
    172.31.0.65 from 172.31.0.65 (172.31.0.65)
      Origin IGP metric 0, localpref 100, valid, internal, best
Community: 10:1
  Last update: Wed Dec 29 22:43:10 2021
```

If both members for Hub\_1 become out of SLA, the default route map is applied:

```

Branch1_A_FGT (root) # diagnose sys sdwan health-check
Health Check(HUB):
Seq(1 H1_T11): state(alive), packet-loss(0.000%) latency(120.194), jitter(0.018), mos
(4.338), bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x0
Seq(4 H1_T22): state(alive), packet-loss(0.000%) latency(120.167), jitter(0.006), mos
(4.338), bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x0
Seq(6 H2_T11): state(alive), packet-loss(0.000%) latency(120.180), jitter(0.012), mos
(4.338), bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x0
Seq(9 H2_T22): state(alive), packet-loss(0.000%) latency(0.170), jitter(0.005), mos(4.404),
bandwidth-up(999999), bandwidth-dw(999997), bandwidth-bi(1999996) sla_map=0x1

# diagnose sys sdwan neighbor
Neighbor(172.31.0.1): member(1 4 )role(standalone)
    Health-check(HUB:1) sla-fail alive
Neighbor(172.31.0.2): member(6 9 )role(standalone)
    Health-check(HUB:1) sla-pass selected alive

Hub_1_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
    Not advertised to any peer
    Original VRF 0
    Local, (Received from a RR-client)
        172.31.0.65 from 172.31.0.65 (172.31.0.65)
            Origin IGP metric 0, localpref 100, valid, internal, best
            Community: 10:2
            Last update: Thu Dec 30 10:57:33 2021

Hub_2_FGT (root) # get router info bgp network 10.0.3.0/24
VRF 0 BGP routing table entry for 10.0.3.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
    Not advertised to any peer
    Original VRF 0
    Local, (Received from a RR-client)
        172.31.0.65 from 172.31.0.65 (172.31.0.65)
            Origin IGP metric 0, localpref 100, valid, internal, best
            Community: 10:1
            Last update: Wed Dec 29 22:43:10 2021

```

## VPN overlay

The following topics provide instructions on SD-WAN VPN overlays:

- [ADVPN and shortcut paths on page 781](#)
- [SD-WAN monitor on ADVPN shortcuts on page 794](#)
- [Hold down time to support SD-WAN service strategies on page 795](#)
- [SD-WAN integration with OCVPN on page 797](#)
- [Adaptive Forward Error Correction on page 804](#)
- [Dual VPN tunnel wizard on page 808](#)
- [Duplicate packets on other zone members on page 809](#)
- [Duplicate packets based on SD-WAN rules on page 812](#)
- [Speed tests run from the hub to the spokes in dial-up IPsec tunnels on page 813](#)

- [Interface based QoS on individual child tunnels based on speed test results on page 820](#)
- [SD-WAN in large scale deployments on page 823](#)

### ADVPN and shortcut paths

This topic provides an example of how to use SD-WAN and ADVPN together.

ADVPN (Auto Discovery VPN) is an IPsec technology that allows a traditional hub-and-spoke VPN's spokes to establish dynamic, on-demand, direct tunnels between each other to avoid routing through the topology's hub device. The primary advantage is that it provides full meshing capabilities to a standard hub-and-spoke topology. This greatly reduces the provisioning effort for full spoke-to-spoke low delay reachability, and addresses the scalability issues associated with very large fully meshed VPN networks.

If a customer's head office and branch offices all have two or more internet connections, they can build a dual-hub ADVPN network. Combined with SD-WAN technology, the customer can load-balance traffic to other offices on multiple dynamic tunnels, control specific traffic using specific connections, or choose better performance connections dynamically.




SD-WAN load-balance mode rules (or services) do not support ADVPN members. Other modes' rules, such as SLA and priority, support ADVPN members.

---

This topic covers three parts:

1. Configure dual-hub ADVPN with multiple branches.
2. Configure BGP to exchange routing information among hubs and spokes.
3. Configure SD-WAN on spoke to do load-balancing and control traffic.

## Configuration example

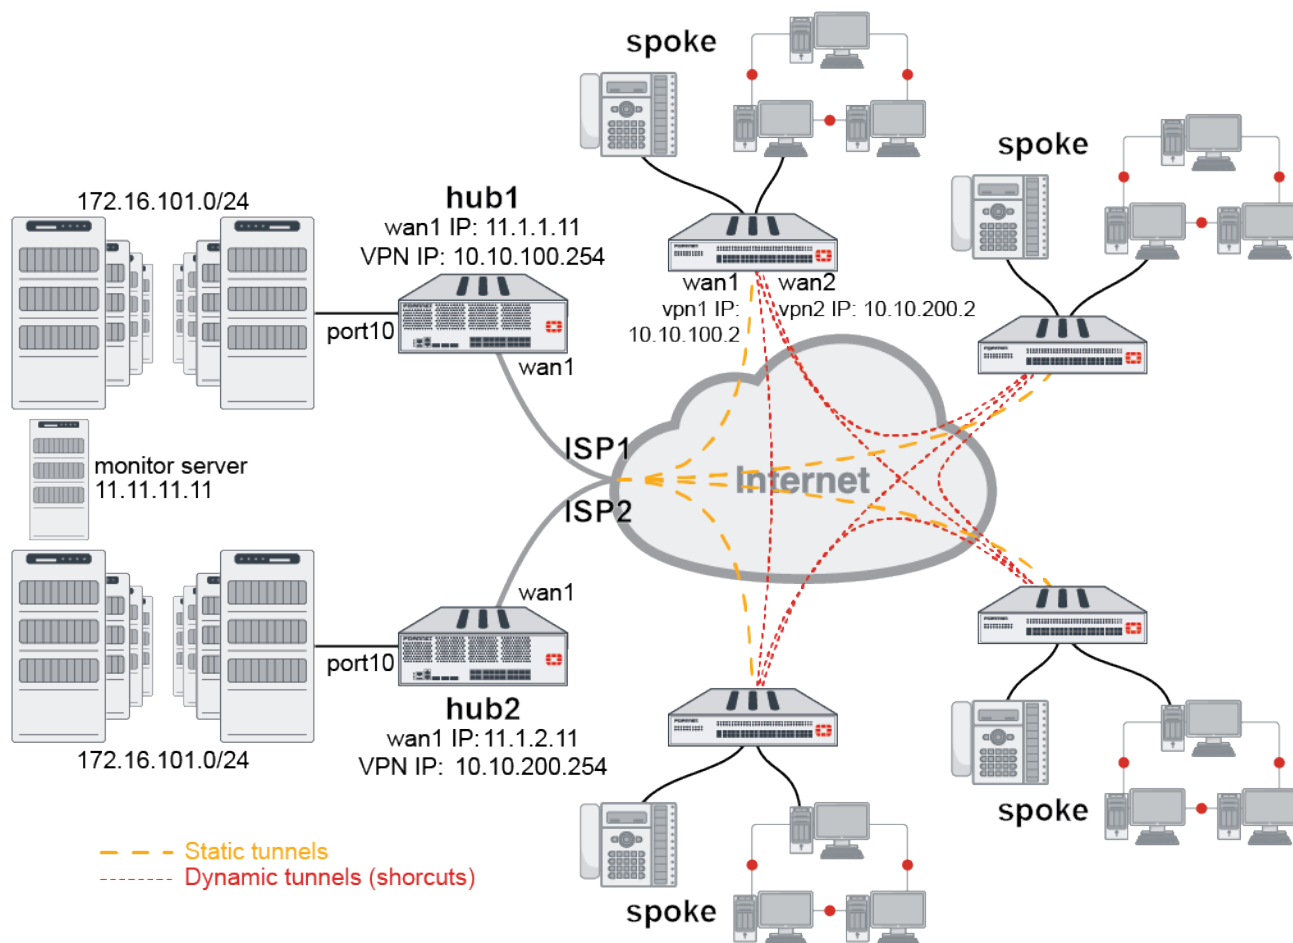

A typical ADVPN configuration with SD-WAN usually has two hubs, and each spoke connects to two ISPs and establishes VPN tunnels with both hubs.

This example shows a hub-and-spoke configuration using two hubs and one spoke:

- Hub1 and Hub2 both use wan1 to connect to the ISPs and port10 to connect to internal network.
- Spoke1 uses wan1 to connect to ISP1 and wan2 to connect to ISP2.
- wan1 sets up VPN to hub1.
- wan2 sets up VPN to hub2.

The SD-WAN is configured on the spoke. It uses the two VPN interfaces as members and two rules to control traffic to headquarters or other spokes using ADVPN VPN interfaces. You can create more rules if required.

For this example:

- Use SD-WAN member 1 (via ISP1) and its dynamic shortcuts for financial department traffic if member 1 meets SLA requirements. If it doesn't meet SLA requirements, it will use SD-WAN member 2 (via ISP2).
- Use SD-WAN member 2 (via ISP2) and its dynamic shortcuts for engineering department traffic.
- Load balance other traffic going to hubs and other spokes between these two members.
- Set up all other traffic to go with their original ISP connection. All other traffic does not go through SD-WAN.
- Set up basic network configuration to let all hubs and spokes connect to their ISPs and the Internet.

Hub internal network	172.16.101.0/24
Spoke1 internal network	10.1.100.0/24
ADVPN 1 network	10.10.100.0/24
ADVPN 2 network	10.10.200.0/24
Hub1 wan1 IP	11.1.1.11
Hub2 wan1 IP	11.1.2.11
Hub1 VPN IP	10.10.100.254
Hub2 VPN IP	10.10.200.254
Spoke1 to hub1 VPN IP	10.10.100.2
Spoke1 to hub2 VPN IP	10.10.200.2
Ping server in Headquarters	11.11.11.11
Internal subnet of spoke1	22.1.1.0/24
Internal subnet of spoke2	33.1.1.0/24
Firewall addresses	Configure hub_subnets and spoke_subnets before using in policies. These can be customized.

The GUI does not support some ADVPN related options, such as auto-discovery-sender, auto-discovery-receiver, auto-discovery-forwarder, and IBGP neighbor-group setting, so this example only provides CLI configuration commands.

### Hub1 sample configuration

#### To configure the IPsec phase1 and phase2 interface:

```
config vpn ipsec phase1-interface
    edit "hub-phase1"
        set type dynamic
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1 3des-
sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "hub-phase2"
        set phase1name "hub-phase1"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256 3des-
sha256
    next
end
```



When `net-device` is disabled, a tunnel ID is generated for each dynamic tunnel. This ID, in the form of an IP address, is used as the gateway in the route entry to that tunnel. The `tunnel-search` option is removed in FortiOS 7.0.0 and later.

### To configure the VPN interface and BGP:

```
config system interface
    edit "hub-phase1"
        set ip 10.10.100.254 255.255.255.255
        set remote-ip 10.10.100.253 255.255.255.0
    next
end
config router bgp
    set as 65505
    config neighbor-group
        edit "advpn"
            set link-down-failover enable
            set remote-as 65505
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.100.0 255.255.255.0
            set neighbor-group "advpn"
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
        edit 2
            set prefix 11.11.11.0 255.255.255.0
        next
    end
end
```

### To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "hub-phase1"
        set dstintf "port10"
        set srcaddr "spoke_subnets"
        set dstaddr "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to headquarter"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "hub-phase1"
```

```

        set dstintf "hub-phase1"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to spokes"
    next
    edit 3
        set name "internal2spoke"
        set srcintf "port10"
        set dstintf "hub-phase1"
        set srcaddr "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from headquarter to spokes"
    next
end

```

### Hub2 sample configuration

Hub2 configuration is the same as hub1 except the wan1 IP address, VPN interface IP address, and BGP neighbor-range prefix.

### To configure the IPsec phase1 and phase2 interface:

```

config vpn ipsec phase1-interface
    edit "hub-phase1"
        set type dynamic
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1 3des-
sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "hub-phase2"
        set phase1name "hub-phase1"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256 3des-
sha256
    next
end

```

### To configure the VPN interface and BGP:

```

config system interface
    edit "hub-phase1"

```

```

        set ip 10.10.200.254 255.255.255.255
        set remote-ip 10.10.200.253 255.255.255.0
    next
end
config router bgp
    set as 65505
    config neighbor-group
        edit "advpn"
            set link-down-failover enable
            set remote-as 65505
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.200.0 255.255.255.0
            set neighbor-group "advpn"
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
        edit 2
            set prefix 11.11.11.0 255.255.255.0
        next
    end
end
end

```

### To configure the firewall policy:

```

config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "hub-phase1"
        set dstintf "port10"
        set srcaddr "spoke_subnets"
        set dstaddr "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to headquarter"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "hub-phase1"
        set dstintf "hub-phase1"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to spokes"
    next
    edit 3
        set name "internal2spoke"

```



```

        set srcintf "port10"
        set dstintf "hub-phase1"
        set srcaddr "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from headquarter to spokes"
    next
end

```

## Spoke1 sample configuration

### To configure the IPsec phase1 and phase2 interface:

```

config vpn ipsec phase1-interface
    edit "spoke1-phase1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 11.1.1.11
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1-2-phase1"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 11.1.2.11
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1-phase2"
        set phase1name "spoke1-phase1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1-2-phase2"
        set phase1name "spoke1-2-phase1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
chacha20poly1305
        set auto-negotiate enable
    next
end

```

**To configure the VPN interface and BGP:**

```
config system interface
  edit "spoke1-phase1"
    set ip 10.10.100.2 255.255.255.255
    set remote-ip 10.10.100.254 255.255.255.0
  next
  edit "spoke1-2-phase1"
    set ip 10.10.200.2 255.255.255.255
    set remote-ip 10.10.200.254 255.255.255.0
  next
end
config router bgp
  set as 65505
  config neighbor
    edit "10.10.100.254"
      set advertisement-interval 1
      set link-down-failover enable
      set remote-as 65505
    next
    edit "10.10.200.254"
      set advertisement-interval 1
      set link-down-failover enable
      set remote-as 65505
    next
  end
  config network
    edit 1
      set prefix 10.1.100.0 255.255.255.0
    next
  end
end
```

**To configure SD-WAN:**

```
config system sdwan
  set status enable
  config members
    edit 1
      set interface "spoke1-phase1"
    next
    edit 2
      set interface "spoke1-2-phase1"
    next
  end
  config health-check
    edit "ping"
      set server "11.11.11.11"
      set members 1 2
      config sla
        edit 1
          set latency-threshold 200
          set jitter-threshold 50
          set packetloss-threshold 5
        next
      end
    end
```

```
        next
    end
    config service
        edit 1
            set mode sla
            set dst "financial-department"
            config sla
                edit "ping"
                    set id 1
                next
            end
            set priority-members 1 2
        next
        edit 2
            set priority-members 2
            set dst "engineering-department"
        next
    end
end
end
```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

### To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "virtual-wan-link"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets" "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow internal traffic going out to headquarter and other spokes"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "virtual-wan-link"
        set dstintf "internal"
        set srcaddr "spoke_subnets" "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow headquarter and other spokes traffic coming in"
    next
end
```

## Troubleshooting ADVPN and shortcut paths

### Before spoke vs spoke shortcut VPN is established

Use the following CLI commands to check status before spoke vs spoke shortcut VPN is established.

#### # get router info bgp summary

```
BGP router identifier 2.2.2.2, local AS number 65505
BGP table version is 13
3 BGP AS-PATH entries
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
10.10.100.254	4	65505	3286	3270	11	0	0	00:02:15	5
10.10.200.254	4	65505	3365	3319	12	0	0	00:02:14	5

Total number of neighbors 2

#### # get router info routing-table bgp

Routing table for VRF=0

```
B* 0.0.0.0/0 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:00:58
    [200/0] via 10.10.100.254, spoke1-phase1, 00:00:58
B 1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:01:29
    [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:01:29
B 11.11.11.0/24 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:01:29
    [200/0] via 10.10.100.254, spoke1-phase1, 00:01:29
B 33.1.1.0/24 [200/0] via 10.10.200.3, spoke1-2-phase1, 00:00:58
    [200/0] via 10.10.100.3, spoke1-phase1, 00:00:58
    [200/0] via 10.10.200.3, spoke1-2-phase1, 00:00:58
    [200/0] via 10.10.100.3, spoke1-phase1, 00:00:58
```

#### # diagnose vpn tunnel list

list all ipsec tunnel in vd 3

```
-----
name=spoke1-phase1 ver=1 serial=5 12.1.1.2:0->11.1.1.11:0 tun_id=11.1.1.11 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc accept_traffic=1
```

```
proxyid_num=1 child_num=0 refcnt=22 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=185 rxb=16428 txb=11111
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=4
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42820/0B replaywin=2048
seqno=ba esn=0 replaywin_lastseq=00000002 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42903/43200
dec: spi=03e01a2a esp=aes key=16 56e673f0df05186aa657f55cbb631c13
    ah=sha1 key=20 b0d50597d9bed763c42469461b03da8041f87e88
enc: spi=2ead61bc esp=aes key=16 fe0ccd4a3ec19fe6d520c437eb6b8897
    ah=sha1 key=20 e3e669bd6df41b88eadaacba66463706f26fb53a
dec:pkts/bytes=1/16368, enc:pkts/bytes=185/22360
npu_flag=03 npu_rgwy=11.1.1.11 npu_lgwy=12.1.1.2 npu_selid=0 dec_npuid=1 enc_npuid=1
-----
```

```
name=spoke1-2-phase1 ver=1 serial=6 112.1.1.2:0->11.1.2.11:0 tun_id=11.1.2.11 dst_mtu=15324
```

```
bound_if=90 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc accept_traffic=1
```

```
proxyid_num=1 child_num=0 refcnt=21 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=186 rxb=16498 txb=11163
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=74
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1-2 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42818/0B replaywin=2048
seqno=bb esn=0 replaywin_lastseq=00000002 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec: spi=03e01a2b esp=aes key=16 fe49f5042a5ad236250bf53312db1346
ah=sha1 key=20 5dbb15c8cbc046c284bb1c6425dac2b3e15bec85
enc: spi=2ead61bd esp=aes key=16 d6d97be52c3cccb9e88f28a9db64ac46
ah=sha1 key=20 e20916ae6ea2295c2fbd5cbc8b8f5dd8b17f52f1
dec:pkts/bytes=1/16438, enc:pkts/bytes=186/22480
npu_flag=03 npu_rgwy=11.1.2.11 npu_lgwy=112.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
```

#### # diagnose sys sdwan service

```
Service(1): Address Mode(IPV4) flags=0x0
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
Member sub interface:
Members:
1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(0), selected
Dst address: 33.1.1.1-33.1.1.100
```

```
Service(2): Address Mode(IPV4) flags=0x0
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Member sub interface:
Members:
1: Seq_num(2), alive, selected
Dst address: 33.1.1.101-33.1.1.200
```

#### # diagnose firewall proute list

```
list route policy info(vf=vd2):
```

```
id=2132869121 vwl_service=1 vwl_mbr_seq=1 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=70 oif=71
destination(1): 33.1.1.1-33.1.1.100
source wildcard(1): 0.0.0.0/0.0.0.0
```

```
id=2132869122 vwl_service=2 vwl_mbr_seq=2 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=71
destination(1): 33.1.1.101-33.1.1.200
source wildcard(1): 0.0.0.0/0.0.0.0
```

### After spoke vs spoke shortcut VPN is established

Use the following CLI commands to check status after spoke vs spoke shortcut VPN is established.

#### # get router info routing-table bgp

```
Routing table for VRF=0
```

```

B*      0.0.0.0/0 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:01:33
        [200/0] via 10.10.100.254, spoke1-phase1, 00:01:33
B       1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:02:04
        [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:02:04
B       11.11.11.0/24 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:02:04
        [200/0] via 10.10.100.254, spoke1-phase1, 00:02:04
B       33.1.1.0/24 [200/0] via 10.10.200.3, spoke1-2-phase1_0, 00:01:33
        [200/0] via 10.10.100.3, spoke1-phase1_0, 00:01:33
        [200/0] via 10.10.200.3, spoke1-2-phase1_0, 00:01:33
        [200/0] via 10.10.100.3, spoke1-phase1_0, 00:01:33

```

#### # diagnose sys sdwan service

```

Service(1): Address Mode(IPV4) flags=0x0
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
Member sub interface:
  1: seq_num(1), interface(spoke1-phase1):
    1: spoke1-phase1_0(111)
  2: seq_num(2), interface(spoke1-2-phase1):
    1: spoke1-2-phase1_0(113)
Members:
  1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
  2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(0), selected
Dst address: 33.1.1.1-33.1.1.100

```

```

Service(2): Address Mode(IPV4) flags=0x0
TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Member sub interface:
  1: seq_num(2), interface(spoke1-2-phase1):
    1: spoke1-2-phase1_0(113)
Members:
  1: Seq_num(2), alive, selected
Dst address: 33.1.1.101-33.1.1.200

```

#### # diagnose vpn tunnel list

```
list all ipsec tunnel in vd 3
```

```

-----
name=spoke1-phase1 ver=1 serial=5 12.1.1.2:0->11.1.1.11:0 tun_id=11.1.1.11 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc accept_traffic=1

```

```

proxyid_num=1 child_num=1 refcnt=20 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=759 rxb=16428 txb=48627
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=4
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42536/0B replaywin=2048
    seqno=2f8 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42898/43200
dec: spi=03e01a42 esp=aes key=16 1f131bda108d33909d49fc2778bd08bb
    ah=sha1 key=20 14131d3f0da9b741a2fd13d530b0553aa1f58983
enc: spi=2ead61d8 esp=aes key=16 81ed24d5cd7bb59f4a80dceb5a560e1f
    ah=sha1 key=20 d2ccc2f3223ce16514e75f672cd88c4b4f48b681
dec:pkts/bytes=1/16360, enc:pkts/bytes=759/94434
npu_flag=03 npu_rgwy=11.1.1.11 npu_lgwy=12.1.1.2 npu_selid=0 dec_npuuid=1 enc_npuuid=1

```

```

-----
name=spoke1-2-phasel ver=1 serial=6 112.1.1.2:0->11.1.2.11:0 tun_id=11.1.2.11 dst_mtu=15324
bound_if=90 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc accept_traffic=1

```

```

proxyid_num=1 child_num=1 refcnt=19 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=756 rxb=16450 txb=48460
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=74
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-2 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42538/0B replaywin=2048
    seqno=2f5 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42900/43200
  dec: spi=03e01a43 esp=aes key=16 7fc87561369f88b56d08bfda769eb45b
    ah=sha1 key=20 0ed554ef231c5ac16dc2e71d1907d7347dda33d6
  enc: spi=2ead61d9 esp=aes key=16 00286687aa1762e7d8216881d6720ef3
    ah=sha1 key=20 59d5eec6299ebcf038c190860774e2833074d7c3
  dec:pkts/bytes=1/16382, enc:pkts/bytes=756/94058
  npu_flag=03 npu_rgwy=11.1.2.11 npu_lgwy=112.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
-----

```

```

name=spoke1-phase1_0 ver=1 serial=55 12.1.1.2:0->13.1.1.3:0 tun_id=13.1.1.3 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1

```

```

parent=vd2-1 index=0
proxyid_num=1 child_num=0 refcnt=18 ilast=8 olast=8 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=1a227 type=00 soft=0 mtu=15262 expire=42893/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=03e01a44 esp=aes key=16 c3b77a98e3002220e2373b73af14df6e
    ah=sha1 key=20 d18d107c248564933874f60999d6082fd7a78948
  enc: spi=864f6dba esp=aes key=16 eb6181806ccb9bac37931f9eadd4d5eb
    ah=sha1 key=20 ab788f7a372877a5603c4ede1be89a592fc21873
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=13.1.1.3 npu_lgwy=12.1.1.2 npu_selid=51 dec_npuid=0 enc_npuid=0
-----

```

```

name=spoke1-2-phasel_0 ver=1 serial=57 112.1.1.2:0->113.1.1.3:0 tun_id=113.1.1.3 dst_
mtu=15324
bound_if=90 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1

```

```

parent=vd2-2 index=0
proxyid_num=1 child_num=0 refcnt=17 ilast=5 olast=5 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-2 proto=0 sa=1 ref=3 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0

```

```

dst: 0:0.0.0.0/0.0.0.0:0
SA:  ref=3 options=1a227 type=00 soft=0 mtu=15262 expire=42900/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec:  spi=03e01a45 esp=aes key=16 0beb519ed9f800e8b4c0aa4e1df7da35
    ah=sha1 key=20 bc9f38db5296cce4208a69f1cc8a9f7ef4803c37
enc:  spi=864f6dbb esp=aes key=16 1d26e3556afcdb9f8e3e33b563b44228
    ah=sha1 key=20 564d05ef6f7437e1fd0a88d5fee7b6567f9d387e
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
npu_flag=00 npu_rgwy=113.1.1.3 npu_lgwy=112.1.1.2 npu_selid=53 dec_npuid=0 enc_npuid=0

```

#### # diagnose firewall proute list

```
list route policy info(vf=vd2):
```

```

id=2132869121 vwl_service=1 vwl_mbr_seq=1 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=111 oif=70 oif=113 oif=71
destination(1): 33.1.1.1-33.1.1.100
source wildcard(1): 0.0.0.0/0.0.0.0

```


```

id=2132869122 vwl_service=2 vwl_mbr_seq=2 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=113 oif=71
destination(1): 33.1.1.101-33.1.1.200
source wildcard(1): 0.0.0.0/0.0.0.0

```

## SD-WAN monitor on ADVPN shortcuts

SD-WAN monitors ADVPN shortcut link quality by dynamically creating link monitors for each ADVPN link. The dynamic link monitor on the spoke will use ICMP probes and the IP address of the gateway as the monitored server. These ICMP probes will not be counted as actual user traffic that keeps the spoke-to-spoke tunnel alive.

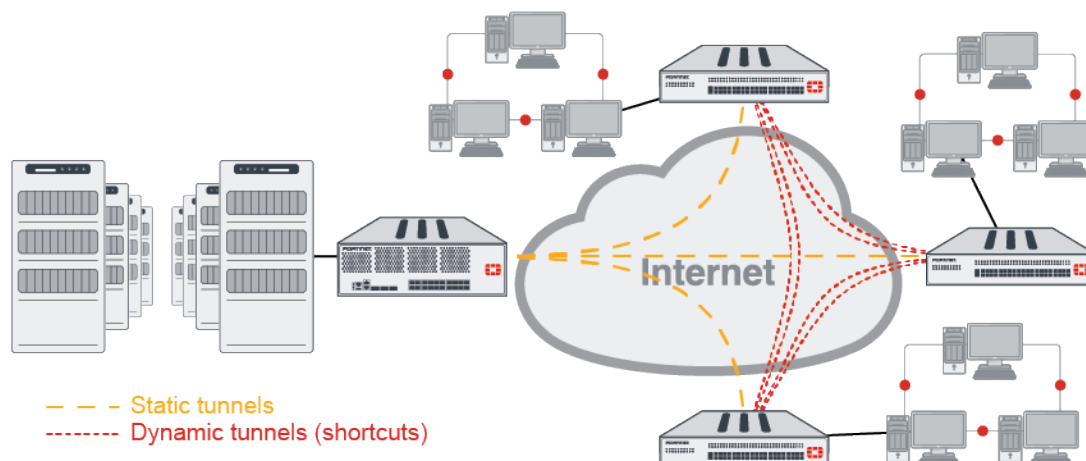

- When no shortcut is established:

```

# diagnose sys sdwan health-check
Health Check(ping):
Seq(1 tunnel-1): state(alive), packet-loss(0.000%) latency(0.038), jitter(0.006) sla_
map=0x3
Seq(2 tunnel-2): state(alive), packet-loss(0.000%) latency(0.035), jitter(0.004) sla_
map=0x3

```



- When one shortcut is established:

```
# diagnose sys sdwan health-check
Health Check(ping):
Seq(1 tunnel-1): state(alive), packet-loss(0.000%) latency(0.039), jitter(0.003) sla_
map=0x3
Seq(1 tunnel-1_0): state(alive), packet-loss(0.000%) latency(0.060), jitter(0.023) sla_
map=0x3
Seq(2 tunnel-2): state(alive), packet-loss(0.000%) latency(0.035), jitter(0.002) sla_
map=0x3
```

- When more than one shortcut is established:

```
# diagnose sys sdwan health-check
Health Check(ping):
Seq(1 tunnel-1): state(alive), packet-loss(0.000%) latency(0.036), jitter(0.004) sla_
map=0x3
Seq(1 tunnel-1_0): state(alive), packet-loss(0.000%) latency(0.041), jitter(0.009) sla_
map=0x3
Seq(2 tunnel-2): state(alive), packet-loss(0.000%) latency(0.030), jitter(0.005) sla_
map=0x3
Seq(2 tunnel-2_0): state(alive), packet-loss(0.000%) latency(0.031), jitter(0.004) sla_
map=0x3
```

## Hold down time to support SD-WAN service strategies

In a hub and spoke SD-WAN topology with shortcuts created over ADVPN, a downed or recovered shortcut can affect which member is selected by an SD-WAN service strategy. When a downed shortcut tunnel recovers and the shortcut is added back into the service strategy, the shortcut is held at a low priority until the hold down time has elapsed.


By default, the hold down time is zero seconds. It can be set to 0 - 10000000 seconds.

### To configure the hold down time:

```
config system sdwan
  config service
    edit 1
      set hold-down-time <integer>
    next
  end
end
```

## Example

In this example, the hold down time is set to 15 seconds, and then the SD-WAN service is looked at before and after the hold down elapses after a downed shortcut recovers.

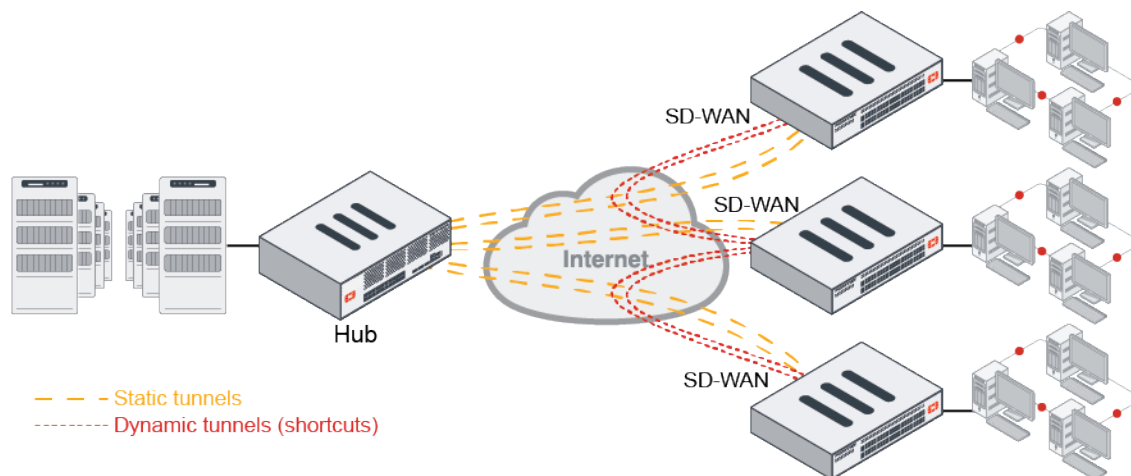

### To configure the hold down time:

```
config system sdwan
  config service
    edit 1
      set hold-down-time 15
    next
  end
end
```

### To view which SD-WAN member is selected before and after the hold down time elapses:

Before the hold down time has elapsed:

```
# diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
  Gen(34), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(packet-
  loss), link-cost-threshold(0), health-check(ping)
Hold down time(15) seconds, Hold start at 2003 second, now 2010
Member sub interface(4):
  1: seq_num(1), interface(vd2-1):
    1: vd2-1_0(86)
  3: seq_num(2), interface(vd2-2):
    1: vd2-2_0(88)

Members(4):
  1: Seq_num(1 vd2-1), alive, packet loss: 27.000%, selected
  2: Seq_num(2 vd2-2_0), alive, packet loss: 0.000%, selected
  3: Seq_num(2 vd2-2), alive, packet loss: 0.000%, selected
  4: Seq_num(1 vd2-1_0), alive, packet loss: 61.000%, selected
Dst address(1):
  33.1.1.101-33.1.1.200
```

After the hold down time has elapsed:

```
# diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
  Gen(35), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(packet-
  loss), link-cost-threshold(0), health-check(ping)
Hold down time(15) seconds, Hold start at 2018 second, now 2019
```

```
Member sub interface(4):
```

```
2: seq_num(2), interface(vd2-2):
```

```
1: vd2-2_0(88)
```

```
3: seq_num(1), interface(vd2-1):
```

```
1: vd2-1_0(86)
```

```
Members(4):
```

```
1: Seq_num(2 vd2-2_0), alive, packet loss: 0.000%, selected
```

```
2: Seq_num(2 vd2-2), alive, packet loss: 0.000%, selected
```

```
3: Seq_num(1 vd2-1), alive, packet loss: 24.000%, selected
```

```
4: Seq_num(1 vd2-1_0), alive, packet loss: 44.000%, selected
```


```
Dst address(1):
```

```
33.1.1.101-33.1.1.200\
```

## SD-WAN integration with OCVPN

OCVPN has the capability to enable SD-WAN in order to dynamically add its tunnel interfaces as SD-WAN members. Users can configure SD-WAN health checks and service rules to direct traffic over the OCVPN tunnels.

The following example uses a dual hub and spoke topology. Each hub and spoke has two WAN link connections to the ISP. The spokes generate two IPsec tunnels to each hub (four tunnels in total). BGP neighbors are established over each tunnel and routes from the hubs and other spokes learned from all neighbors, which forms an ECMP scenario. All tunnels are placed as SD-WAN members, so traffic can be distributed across tunnels based on the configured SD-WAN service rules.

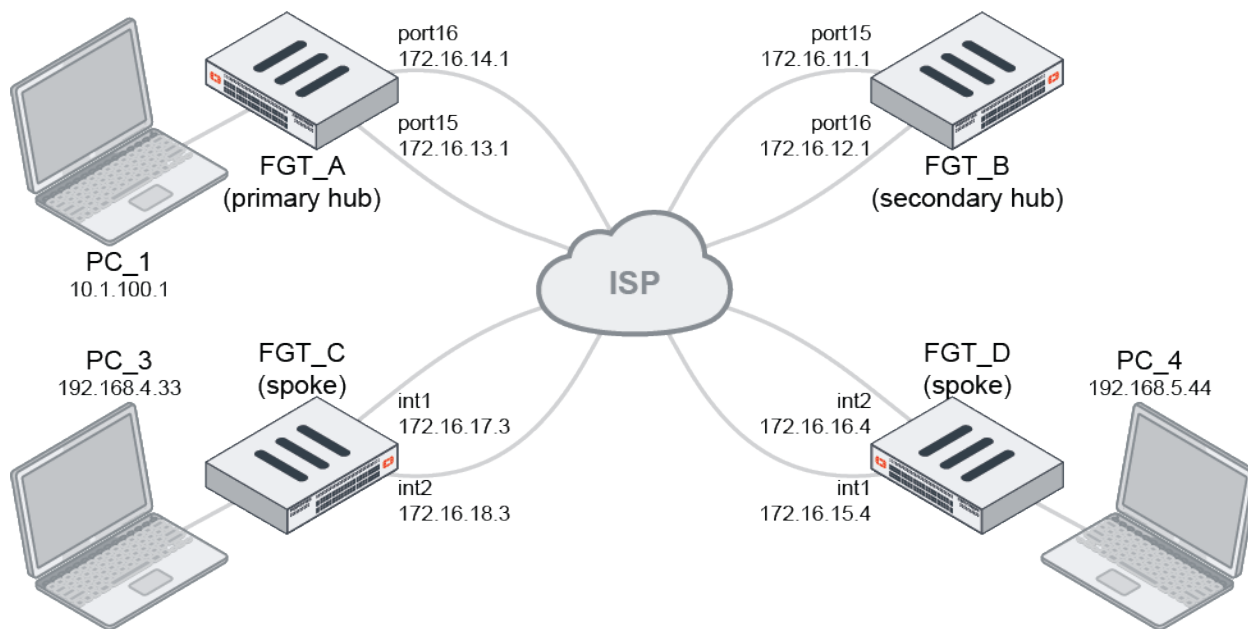

### To integrate SD-WAN with OCVPN in the GUI:

1. Configure the primary hub:
  - a. Go to *VPN > Overlay Controller VPN* and set the *Status* to *Enable*.
  - b. For *Role*, select *Primary Hub*.

- c. Enter the WAN interfaces (*port15* and *port16*) and tunnel IP allocation block (*10.254.0.0/16*).



The WAN interface is position sensitive, meaning a tunnel will be created with the first position interface on the hub to the first position interface on the spoke, and so on. In this example, FGT\_A (primary hub) will create two tunnels with FGT\_C (spoke):

- FGT\_A port15 <==> FGT\_C internal1
- FGT\_A port16 <==> FGT\_C internal2

- d. Enable *Auto-discovery shortcuts*.
- e. Enable *Add OCVPN tunnels to SD-WAN*. The IPsec tunnels will be added automatically to the SD-WAN members if SD-WAN is enabled.

2. Configure the overlays on the primary hub:

- a. In the *Overlays* section, click *Create New*.
- b. Enter a name and add the local interface (*port2*). Note the overlay is either based on local subnets or local interfaces, but not both.  
By default, inter-overlay traffic is not enabled. Toggle *Allow traffic from other overlays* to enable it.
- c. Click *OK* and repeat these steps to create the second overlay (*loop1*).

- d. Click *Apply*.

3. Configure the secondary hub with the same settings as the primary hub.

4. Configure the spoke:


- a. Go to *VPN > Overlay Controller VPN* and set the *Status* to *Enable*.
- b. For *Role*, select *Spoke*.
- c. Enter the WAN interfaces (*internal1* and *internal2*).
- d. Enable *Auto-discovery shortcuts*.
- e. Enable *Add OCVPN tunnels to SD-WAN*. The IPsec tunnels will be added automatically to the SD-WAN members if SD-WAN is enabled.
- f. Configure the overlays.



The overlay names on the spokes must match the names on the hub for the traffic to be allowed through the same overlay.

- g. Click *Apply*.

- Configure the other spoke with the same settings.
- On a spoke, go to **Network > SD-WAN** and select the **SD-WAN Zones** tab to view the configuration generated by OCVPN.

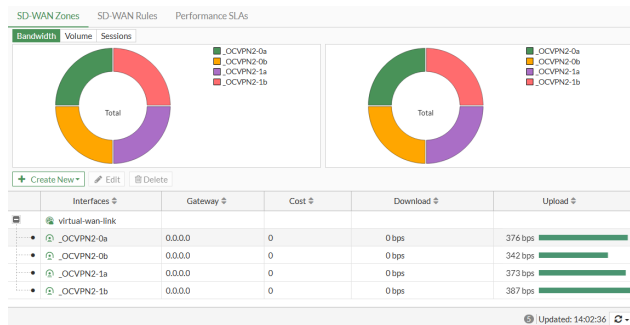

Firewall policies will be automatically generated by OCVPN between the local interfaces and the SD-WAN interface. Each policy will define the proper local and remote networks for its source and destination addresses.

### To integrate SD-WAN with OCVPN in the CLI:

- Configure the primary hub:

```
config vpn ocvpn
  set role primary-hub
  set sdwan enable
  set wan-interface "port15" "port16"
  set ip-allocation-block 10.254.0.0 255.255.0.0
  config overlays
    edit "overlay1"
      config subnets
        edit 1
          set type interface
          set interface "port2"
        next
      end
    next
    edit "overlay2"
      config subnets
        edit 1
          set type interface
          set interface "loop1"
        next
      end
    next
  end
end
```

- Configure the secondary hub with the same settings as the primary hub.
- Configure the spoke:

```
config vpn ocvpn
  set status enable
  set sdwan enable
  set wan-interface "internal1" "internal2"
  config overlays
    edit "overlay1"
      config subnets
```

```
        edit 1
            set type interface
            set interface "wan2"
        next
    end
next
edit "overlay2"
    config subnets
        edit 1
            set type interface
            set interface "loop1"
        next
    end
next
end
end
```

4. Configure the other spoke with the same settings.

5. Configure SD-WAN:

```
config system sdwan
    set status enable
    config members
        edit 1
            set interface "_OCVPN2-0a"
        next
        edit 2
            set interface "_OCVPN2-0b"
        next
        edit 3
            set interface "_OCVPN2-1a"
        next
        edit 4
            set interface "_OCVPN2-1b"
        next
    end
end
```

Firewall policies will be automatically generated by OCVPN between the local interfaces and the SD-WAN interface. Each policy will define the proper local and remote networks for its source and destination addresses.



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

**To verify the integration is working after the ADVPN shortcut is triggered:**

1. Check the routing table on the spoke:

```
FGT_C # get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
```

\* - candidate default

Routing table for VRF=0

```

S*      0.0.0.0/0 [10/0] via 172.16.17.2, internal1
        [10/0] via 172.16.18.2, internal2
B       10.1.100.0/24 [200/0] via 10.254.7.254, _OCVPN2-0a, 00:10:24
        [200/0] via 10.254.15.254, _OCVPN2-0b, 00:10:24
B       10.1.200.0/24 [200/0] via 10.254.7.254, _OCVPN2-0a, 00:10:24
        [200/0] via 10.254.15.254, _OCVPN2-0b, 00:10:24
B       10.2.100.0/24 [200/0] via 10.254.71.254, _OCVPN2-1a, 00:10:15
        [200/0] via 10.254.79.254, _OCVPN2-1b, 00:10:15
B       10.2.200.0/24 [200/0] via 10.254.71.254, _OCVPN2-1a, 00:10:15
        [200/0] via 10.254.79.254, _OCVPN2-1b, 00:10:15
B       10.254.0.0/16 [200/0] via 10.254.7.254, _OCVPN2-0a, 00:10:15
        [200/0] via 10.254.15.254, _OCVPN2-0b, 00:10:15
        [200/0] via 10.254.71.254, _OCVPN2-1a, 00:10:15
        [200/0] via 10.254.79.254, _OCVPN2-1b, 00:10:15
C       10.254.0.0/21 is directly connected, _OCVPN2-0a
C       10.254.0.1/32 is directly connected, _OCVPN2-0a
C       10.254.8.0/21 is directly connected, _OCVPN2-0b
C       10.254.8.1/32 is directly connected, _OCVPN2-0b
C       10.254.64.0/21 is directly connected, _OCVPN2-1a
C       10.254.64.1/32 is directly connected, _OCVPN2-1b_0 <==shortcut tunnel
C       10.254.64.2/32 is directly connected, _OCVPN2-1a
C       10.254.72.0/21 is directly connected, _OCVPN2-1b
C       10.254.72.2/32 is directly connected, _OCVPN2-1b
        is directly connected, _OCVPN2-1b_0
C       172.16.17.0/24 is directly connected, internal1
C       172.16.18.0/24 is directly connected, internal2
C       172.16.200.0/24 is directly connected, wan1
C       192.168.1.0/24 is directly connected, internal
C       192.168.4.0/24 is directly connected, wan2
B       192.168.5.0/24 [200/0] via 10.254.0.2, _OCVPN2-0a, 00:00:10
        [200/0] via 10.254.8.2, _OCVPN2-0b, 00:00:10
        [200/0] via 10.254.0.2, _OCVPN2-0a, 00:00:10
        [200/0] via 10.254.8.2, _OCVPN2-0b, 00:00:10
        [200/0] via 10.254.64.1, _OCVPN2-1b_0, 00:00:10
        [200/0] via 10.254.72.1, _OCVPN2-1b, 00:00:10
        [200/0] via 10.254.64.1, _OCVPN2-1b_0, 00:00:10
        [200/0] via 10.254.72.1, _OCVPN2-1b, 00:00:10
C       192.168.44.0/24 is directly connected, loop1
B       192.168.55.0/24 [200/0] via 10.254.0.2, _OCVPN2-0a, 00:00:10
        [200/0] via 10.254.8.2, _OCVPN2-0b, 00:00:10
        [200/0] via 10.254.0.2, _OCVPN2-0a, 00:00:10
        [200/0] via 10.254.8.2, _OCVPN2-0b, 00:00:10
        [200/0] via 10.254.64.1, _OCVPN2-1b_0, 00:00:10
        [200/0] via 10.254.72.1, _OCVPN2-1b, 00:00:10
        [200/0] via 10.254.64.1, _OCVPN2-1b_0, 00:00:10
        [200/0] via 10.254.72.1, _OCVPN2-1b, 00:00:10

```

## 2. Check the VPN tunnel state:

```
FGT_C # diagnose vpn tunnel list
```

```
list all ipsec tunnel in vd 0
```

```
-----
name=_OCVPN2-1b_0 ver=2 serial=1c 172.16.18.3:0->172.16.15.4:0 tun_id=172.16.15.4 dst_
```

```

mtu=1500
bound_if=9 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1 overlay_id=4

parent=_OCVPN2-1b index=0
proxyid_num=1 child_num=0 refcnt=15 ilast=0 olast=0 ad=r/2
stat: rxp=641 txp=1025 rxb=16436 txb=16446
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1b proto=0 sa=1 ref=3 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=42650/0B replaywin=1024
seqno=407 esn=0 replaywin_lastseq=00000280 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=43186/43200
dec: spi=90f03d9d esp=aes key=16 6cb33685bbc67d5c85488e0176ecf7b0
ah=sha1 key=20 7d11b3babe62c840bf444b7b1f637b4324722a71
enc: spi=7bc94bda esp=aes key=16 b4d8fc731d411eb24448b4077a5872ca
ah=sha1 key=20 b724064d827304a6d80385ed4914461108b7312f
dec:pkts/bytes=641/16368, enc:pkts/bytes=2053/123426
npu_flag=03 npu_rgwy=172.16.15.4 npu_lgwy=172.16.18.3 npu_selid=1f dec_npuid=1 enc_
npuid=1
-----
name=_OCVPN2-0a ver=2 serial=18 172.16.17.3:0->172.16.13.1:0 tun_id=172.16.17.3 dst_
mtu=1500
bound_if=8 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_
dev frag-rfc accept_traffic=1 overlay_id=1

proxyid_num=1 child_num=0 refcnt=20 ilast=0 olast=0 ad=r/2
stat: rxp=1665 txp=2922 rxb=278598 txb=70241
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=7
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0a proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=41599/0B replaywin=1024
seqno=890 esn=0 replaywin_lastseq=00000680 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42899/43200
dec: spi=90f03d95 esp=aes key=16 a6ffcc197bblb46ec745d0b595cdd69a
ah=sha1 key=20 8007c134e41edf282f95daf9c9033d688ef05ccc
enc: spi=a1bf21bf esp=aes key=16 ead05be389b0dec222f969e2f9c46b1d
ah=sha1 key=20 b04105d34d4b0e61b018f2e60591f9b1510783bb
dec:pkts/bytes=1665/278538, enc:pkts/bytes=4237/265074
npu_flag=03 npu_rgwy=172.16.13.1 npu_lgwy=172.16.17.3 npu_selid=1b dec_npuid=1 enc_
npuid=1
-----
name=_OCVPN2-1a ver=2 serial=1a 172.16.17.3:0->172.16.11.1:0 tun_id=172.16.11.1 dst_
mtu=1500
bound_if=8 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_
dev frag-rfc accept_traffic=1 overlay_id=3

proxyid_num=1 child_num=0 refcnt=17 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=2913 rxb=16376 txb=69642
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=5
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1a proto=0 sa=1 ref=28 serial=1 auto-negotiate adr

```



```

src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=41653/0B replaywin=1024
    seqno=887 esn=0 replaywin_lastseq=00000002 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42900/43200
dec: spi=90f03d9b esp=aes key=16 ee03f5b0f617a26c6177e91d60abf90b
    ah=sha1 key=20 f60cbbc4ebbd6d0327d23137da707b7ab2dc49e6
enc: spi=a543a7d3 esp=aes key=16 1d37efab13a5c0347b582b2198b15cb8
    ah=sha1 key=20 427ee4c82bac6f26f0bcabfe04328c7f57ce682e
dec:pkts/bytes=1/16316, enc:pkts/bytes=4229/264036
npu_flag=03 npu_rgw=172.16.11.1 npu_lgw=172.16.17.3 npu_selid=1d dec_npuid=1 enc_
npuid=1
-----
name=_OCVPN2-0b ver=2 serial=19 172.16.18.3:0->172.16.14.1:0 tun_id=172.16.14.1 dst_
mtu=1500
bound_if=9 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_
dev frag-rfc accept_traffic=1 overlay_id=2

proxyid_num=1 child_num=0 refcnt=20 ilast=0 olast=0 ad=r/2
stat: rxp=1665 txp=2917 rxb=278576 txb=69755
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=7
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0b proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=41599/0B replaywin=1024
    seqno=88b esn=0 replaywin_lastseq=00000680 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42899/43200
dec: spi=90f03d96 esp=aes key=16 9d7eb233c1d095b30796c3711d53f2fd
    ah=sha1 key=20 d8feacd42b5e0ba8b5e38647b2f2734c94644bd1
enc: spi=a1bf21c0 esp=aes key=16 d2c0984bf86dc504c5475230b24034f0
    ah=sha1 key=20 3946e4033e1f42b0d9a843b94448f56fd5b57bee
dec:pkts/bytes=1665/278516, enc:pkts/bytes=4233/264411
npu_flag=03 npu_rgw=172.16.14.1 npu_lgw=172.16.18.3 npu_selid=1c dec_npuid=1 enc_
npuid=1
-----
name=_OCVPN2-1b ver=2 serial=1b 172.16.18.3:0->172.16.12.1:0 tun_id=172.16.12.1 dst_
mtu=1500
bound_if=9 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_
dev frag-rfc accept_traffic=1 overlay_id=4

proxyid_num=1 child_num=1 refcnt=19 ilast=1 olast=0 ad=r/2
stat: rxp=1 txp=2922 rxb=16430 txb=70173
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=4
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1b proto=0 sa=1 ref=28 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=41656/0B replaywin=1024
    seqno=890 esn=0 replaywin_lastseq=00000002 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42903/43200
dec: spi=90f03d9c esp=aes key=16 a655767c1ed6cff4575857eb3981ad81
    ah=sha1 key=20 bfc2bccd7103a201be2641d4c6147d437d2c3f70
enc: spi=a543a7d4 esp=aes key=16 7221b814e483165b01edfd8260d261a
    ah=sha1 key=20 d54819643c2f1b20da2aea4282d50a1f1bc1d72a
dec:pkts/bytes=1/16370, enc:pkts/bytes=4238/265164

```

```
npu_flag=03 npu_rgwy=172.16.12.1 npu_lgwy=172.16.18.3 npu_selid=1e dec_npuid=1 enc_
npuid=1
```

### 3. Check the SD-WAN state:

```
FGT_C # diagnose sys sdwan health-check
Health Check(Default_DNS):
Health Check(Default_Office_365):
Health Check(Default_Gmail):
Health Check(Default_AWS):
Health Check(Default_Google Search):
Health Check(Default_FortiGuard):
Health Check(ocvpn):
Seq(1 _OCVPN2-0a): state(alive), packet-loss(0.000%) latency(0.364), jitter(0.028) sla_
map=0x0
Seq(2 _OCVPN2-0b): state(alive), packet-loss(0.000%) latency(0.287), jitter(0.026) sla_
map=0x0
Seq(3 _OCVPN2-1a): state(dead), packet-loss(100.000%) sla_map=0x0
Seq(4 _OCVPN2-1b): state(dead), packet-loss(100.000%) sla_map=0x0
Seq(4 _OCVPN2-1b_0): state(alive), packet-loss(0.000%) latency(0.289), jitter(0.029)
sla_map=0x0
```

## Adaptive Forward Error Correction


Forward Error Correction (FEC) is used to control and correct errors in data transmission by sending redundant data across the VPN in anticipation of dropped packets occurring during transit. The mechanism sends out x number of redundant packets for every y number of base packets.

Adaptive FEC considers link conditions and dynamically adjusts the FEC packet ratio:

- The FEC base and redundant packet relationship is dynamically adjusted based on changes to the network SLA metrics defined in the SD-WAN SLA health checks. For example, when there is no or low packet loss in the network, FEC can work on a low redundant level sending only one redundant packet for every 10 base packets. As packet loss increases, the number of redundant packets sent can rise accordingly.
- FEC can be applied only to streams that are sensitive to packet loss. For Example, policies that allow the UDP based VoIP protocol can enable FEC, while TCP based traffic policies do not. This reduces unnecessary bandwidth consumption by FEC.
- Because FEC does not support NPU offloading, the ability to specify streams and policies that do not require FEC allows those traffic to be offloaded. This means that not all traffic suffers a performance impact.

In this example, an IPsec tunnel is configured between two FortiGates that both have FEC enabled. The tunnel is an SD-WAN zone, and an SLA health-check is used to monitor the quality of the VPN overlay. The intention is to apply FEC to UDP traffic that is passing through the VPN overlay, while allowing all other traffic to pass through without FEC. An FEC profile is configured to adaptively increase redundant levels if the link quality exceeds a 10% packet loss threshold, or the bandwidth exceeds 950 Mbps.

The DMZ interface and IPsec tunnel vd1-p1 are SD-WAN members. FEC is enabled on vd1-p1, and health-check works on vd1-p1.

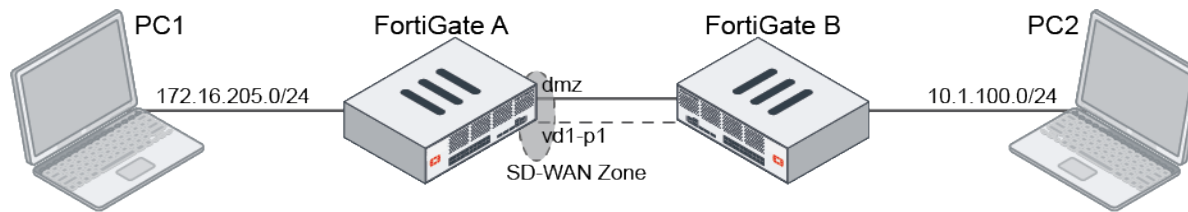

### To configure the FortiGates:

1. On both FortiGates, enable FEC and NPU offloading on the IPsec tunnel vd1-p1:

```
config vpn ipsec phase1-interface
  edit "vd1-p1"
    set npu-offload enable
    set fec-egress enable
    set fec-ingress enable
  next
end
```

2. On FortiGate A, configure SD-WAN:

The VPN overlay member (vd1-p1) must be included in the health-check and configured as the higher priority member in the SD-WAN rule.

```
config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
    next
  end
  config members
    edit 1
      set interface "dmz"
      set gateway 172.16.208.2
    next
    edit 2
      set interface "vd1-p1"
    next
  end
  config health-check
    edit "1"
      set server "2.2.2.2"
      set members 2
      config sla
        edit 1
          next
        end
      next
    end
  end
  config service
    edit 1
      set name "1"
      set dst "all"
      set src "172.16.205.0"
      set priority-members 2 1
    end
  end
```

```

        next
    end
end

```

3. On FortiGate A, create a policy to specify performing FEC on UDP traffic, and a policy for other traffic:

```

config firewall policy
    edit 1
        set srcintf "port5"
        set dstintf "virtual-wan-link"
        set action accept
        set srcaddr "172.16.205.0"
        set dstaddr "all"
        set schedule "always"
        set service "ALL_UDP"
        set fec enable
    next
    edit 2
        set srcintf "any"
        set dstintf "any"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
    next
end

```

4. On FortiGate A, configure FEC mapping to bind network SLA metrics and FEC base and redundant packets:

```

config vpn ipsec fec
    edit "m1"
        config mappings
            edit 1
                set base 8
                set redundant 2
                set packet-loss-threshold 10
            next
            edit 2
                set base 9
                set redundant 3
                set bandwidth-up-threshold 950000
            next
        end
    next
end

```

The mappings are matched from top to bottom: packet loss greater than 10% with eight base and two redundant packets, and then uploading bandwidth greater than 950 Mbps with nine base and three redundant packets.

5. On FortiGate A, apply the FEC mappings on vd1-p1:

```

config vpn ipsec phase1-interface
    edit "vd1-p1"
        set fec-health-check "1"
        set fec-mapping-profile "m1"
        set fec-base 10
        set fec-redundant 1
    end
end

```

```

    next
end

```

The FEC base and redundant values are used when the link quality has not exceeded the limits specified in the FEC profile mapping. If `fec-codec` is set to `xor` the base and redundant packet values will not be updated.

### To verify the results:

1. Send TCP and UDP traffic from PC1 to PC2, then check the sessions on FortiGate A:

```

# diagnose sys session list

session info: proto=6 proto_state=01 duration=12 expire=3587 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=112/2/1 reply=112/2/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=15->102/102->15
gwy=172.16.209.2/172.16.205.11
hook=pre dir=org act=noop 172.16.205.11:39176->10.1.100.22:5001(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.22:5001->172.16.205.11:39176(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=2 pol_uuid_idx=719 auth_info=0 chk_client_info=0 vd=0
serial=00020f7a tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=2 sdwan_service_id=1
rpd_b_link_id=ff000001 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x5000c00
npu info: flag=0x82/0x81, offload=8/8, ips_offload=0/0, epid=249/74, ipid=74/86,
vlan=0x0000/0x0000
vlifid=74/249, vtag_in=0x0000/0x0001 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=5/5

session info: proto=17 proto_state=00 duration=0 expire=180 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty fec
statistic(bytes/packets/allow_err): org=100366/67/1 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=15->102/102->15 gwy=172.16.209.2/0.0.0.0
hook=pre dir=org act=noop 172.16.205.11:49052->10.1.100.22:5001(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.22:5001->172.16.205.11:49052(0.0.0.0:0)
misc=0 policy_id=1 pol_uuid_idx=593 auth_info=0 chk_client_info=0 vd=0
serial=000210fa tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=2 sdwan_service_id=1
rpd_b_link_id=ff000001 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x5040000
no_ofld_reason: non-npu-intf

```

Non-FEC protected TCP traffic is offloaded, while FEC protected UDP traffic is not offloaded

2. On FortiGate A, check the health-check result and the corresponding FEC base and redundant packets:

```
# diagnose sys sdwan health-check
Health Check(1):
Seq(2 vd1-p1): state(alive), packet-loss(0.000%) latency(0.168), jitter(0.021),
bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x1
```

Because bandwidth-up is more than 950000kbps, base and redundant are set to 9 and 3:

```
# diagnose vpn tunnel fec vd1-p1
egress:
    enabled=1 base=9 redundant=3 codec=0 timeout=10(ms)
    encode=6621 encode_timeout=6621 encode_fail=0
    tx_data=6880 tx_parity=18601
ingress:
    enabled=1 timeout=50(ms)
    fasm_cnt=0 fasm_full=0
    ipsec_fec_chk_fail=0 complete=0
    rx_data=0 rx_parity=0
    recover=0 recover_timeout=0 recover_fail=0
    rx=0 rx_fail=0
```

3. Make packet loss more than 10%, then check the health-check result and the corresponding FEC base and redundant packets again:

```
# diagnose sys sdwan health-check
Health Check(1):
Seq(2 vd1-p1): state(alive), packet-loss(15.000%) latency(0.168), jitter(0.017),
bandwidth-up(999999), bandwidth-dw(999998), bandwidth-bi(1999997) sla_map=0x0
```

Because packet loss is more than 10%, entry one in FEC mapping is first matched, and base and redundant are set to 8 and 2:

```
# diagnose vpn tunnel fec vd1-p1
egress:
    enabled=1 base=8 redundant=2 codec=0 timeout=10(ms)
    encode=6670 encode_timeout=6670 encode_fail=0
    tx_data=6976 tx_parity=18748
ingress:
    enabled=1 timeout=50(ms)
    fasm_cnt=0 fasm_full=0
    ipsec_fec_chk_fail=0 complete=0
    rx_data=0 rx_parity=0
    recover=0 recover_timeout=0 recover_fail=0
    rx=0 rx_fail=0
```


## Dual VPN tunnel wizard

This wizard is used to automatically set up multiple VPN tunnels to the same destination over multiple outgoing interfaces. This includes automatically configuring IPsec, routing, and firewall settings, avoiding cumbersome and error-prone configuration steps.

### To create a new SD-WAN VPN interface using the tunnel wizard:

1. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
2. In the *Interface* drop-down, click *+VPN*. The *Create IPsec VPN for SD-WAN members* pane opens.

3. Enter the required information, then click *Next*.
4. Review the settings then click *Create*.
5. Click *Close* to return to the SD-WAN page.  
The newly created VPN interface will be highlighted in the *Interface* drop-down list.
6. Select the VPN interface to add it as an SD-WAN member, then click *OK*.

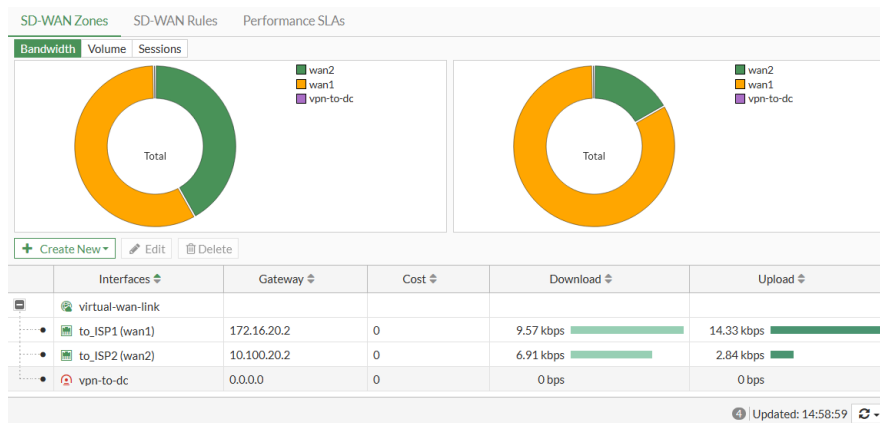

## Duplicate packets on other zone members

When duplication rules are used, packets are duplicated on other good links within the SD-WAN zone and de-duplicated on the destination FortiGate. Use *force* mode to force duplication on other links within the SD-WAN zone, or use *on-demand* mode to trigger duplication only when SLA fails on the selected member.


The duplication rule is configured in the CLI by using the `config duplication` command. The following options can be configured:

Parameter	Description
srcaddr	Source address or address group names.
dstaddr	Destination address or address group names.
srcaddr6	Source IPv6 address or IPv6 address group names.
dstaddr6	Destination IPv6 address or IPv6 address group names.
srcintf	Incoming (ingress) interfaces or zones.
dstintf	Outgoing (egress) interfaces or zones.
service	Service and service group names.
packet-duplication	Configure packet duplication method. <ul style="list-style-type: none"> <li>• disable: Disable packet duplication (default).</li> <li>• force: Duplicate packets across all interface members of the SD-WAN zone.</li> <li>• on-demand: Duplicate packets across all interface members of the SD-WAN zone based on the link quality.</li> </ul>
packet-de-duplication	Enable/disable discarding of packets that have been duplicated (default = disable).

The `duplication-max-num <integer>` option under `config system sdwan` is the maximum number of interface members that a packet is duplicated on in the SD-WAN zone (2 - 4, default = 2). If this value is set to 3, the original packet plus two more copies are created. If there are three member interfaces in the SD-WAN zone and the `duplication-max-num` is set to 2, the packet duplication follows the configuration order, so the packets are duplicated on the second member.

## Example

The packet duplication feature works best in a spoke-spoke or hub-and-spoke topology. In this example, a hub-and-spoke ADVPN topology is used. Before shortcuts are established, Hub 1 forwards the duplicate packets from Spoke 1 to Spoke 2. Once shortcuts are established, Hub 1 is transparent, and duplicate packets are exchanged directly between the spokes.

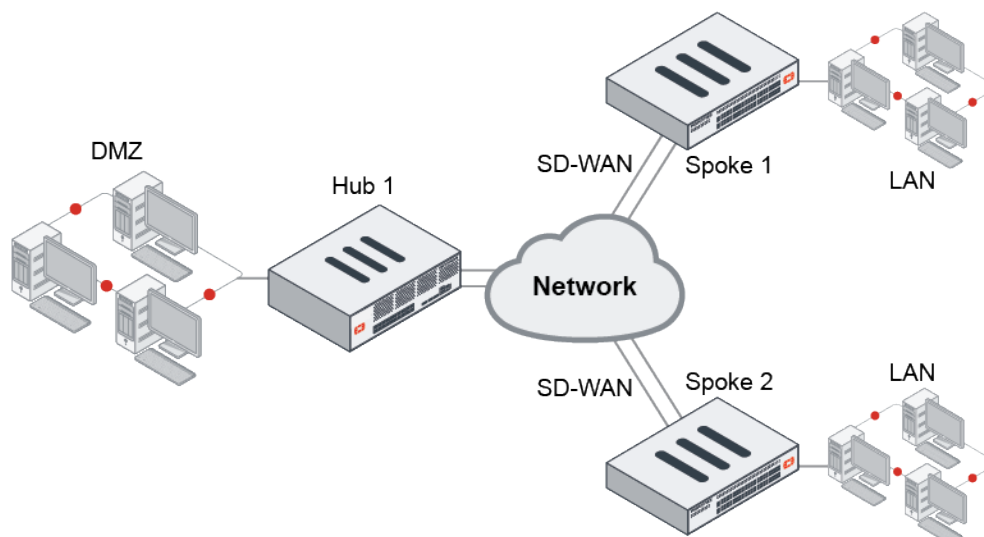



**To configure packet duplication between Spoke 1 and Spoke 2:****1. Configure Spoke 1:**

```
config system sdwan
    set status enable
    config zone
        edit "virtual-wan-link"
        next
        edit "sdwanzone_v4"
        next
    end
    config members
        edit 1
            set interface "t1"
            set zone "sdwanzone_v4"
        next
        edit 4
            set interface "t21"
            set zone "sdwanzone_v4"
        next
        edit 2
            set interface "t2"
            set zone "sdwanzone_v4"
        next
    end
    config health-check
        edit "h1"
            set server "10.34.1.1"
            set interval 1000
            set failtime 10
            set members 1 2
            config sla
                edit 1
                    set packetloss-threshold 40
                next
            end
        next
    end
    config duplication
        edit 1
            set srcaddr "all"
            set dstaddr "all"
            set srcintf "port1"
            set dstintf "sdwanzone_v4"
            set service "ALL"
            set packet-duplication force
            set packet-de-duplication enable
        next
    end
end
```

**2. Configure Spoke 2 with similar settings.**

## Duplicate packets based on SD-WAN rules

SD-WAN duplication rules can specify SD-WAN service rules to trigger packet duplication. This allows the duplication to occur based on an SD-WAN rule instead of the source, destination, and service parameters in the duplication rule.

1. Packets can be forced to duplicate to all members of the same SD-WAN zone. See [Duplicate packets on other zone members on page 809](#) for details.

For example, in Spoke 1 set `packet-duplication` to `force` so that when a client sends a packet to the server, it is duplicated to all members of the same zone as long as its health check is alive. If a member's health check is dead, then the member is removed from the SD-WAN duplication zone.


2. Packets can be duplicated to other members of the SD-WAN zone on-demand only when the condition of the link is not good enough.

Set `packet-duplication` to `on-demand`. If `sla-match-service` is disabled, when all the SLAs of the member exceed threshold (`sla_map=0`), the packet is duplicated. But when the SLAs are within threshold (`sla_map!=0`), the packet is not duplicated.

If `sla-match-service` is enabled, then only the SLA health checks and targets used in the service rule need to exceed threshold in order to trigger packet duplication.

3. Packets can be duplicated to all members of the same SD-WAN zone when the traffic matches one or more regular SD-WAN service rules.

The following example shows the third type of packet duplication.

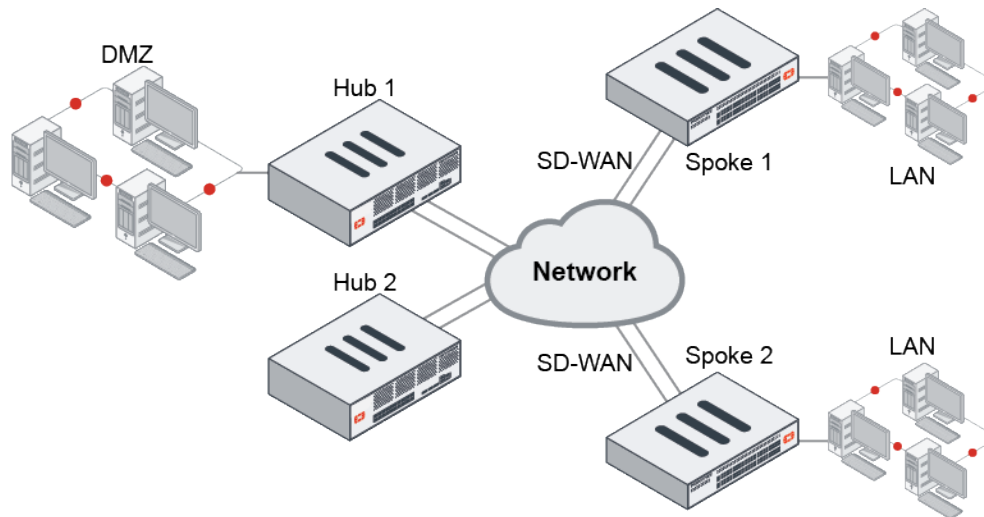

In this example, SD-WAN is configured with three members: `vpn1`, `vpn2`, and `vpn3`. Service rule 1 controls all traffic from `10.100.20.0/24` to `172.16.100.0/24` using member 1.

To send a duplicate of the traffic that matches service rule 1 using member 2, members 1 and 2 are added to the same SD-WAN zone, and a duplication rule is configured with `service-id` set to 1.

### To send a duplicate of the traffic that matches service rule 1 using member 2:

```
config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
    next
    edit "zone2"
```

```

        next
    end
    config members
        edit 1
            set interface "vpn1"
        next
        edit 2
            set interface "vpn2"
        next
        edit 3
            set interface "vpn3"
            set zone "zone2"
        next
    end
    config service
        edit 1
            set dst "172.16.100.0"
            set src "10.100.20.0"
            set priority-members 1
        next
    end
    config duplication
        edit 1
            set service-id 1
            set packet-duplication force
        next
    end
end
end

```

## Speed tests run from the hub to the spokes in dial-up IPsec tunnels

In a hub and spoke SD-WAN topology that uses dial-up VPN overlays, QoS can be applied on individual tunnels based on the measured bandwidth between the hub and spokes. The FortiGate can use the built in speed test to dynamically populate the egress bandwidth to individual dial-up tunnels from the hub.

SD-WAN members on a spoke can switch routes when the speed test is running from the hub to the spoke. The speed test results can be cached for reuse when a tunnel comes back after going down.

### CLI commands

**Allow upload speed tests to be run from the hub to spokes on demand for dial-up IPsec tunnel:**

```

config system speed-test-schedule
    edit <interface>
        set dynamic-server {enable | disable}
    next
end

```

<interface>	The dial-up IPsec tunnel interface on the hub.
dynamic-server {enable   disable}	Enable/disable the dynamic speed test server (default = disable).



To limit the maximum and minimum bandwidth used in the speed test, enable `set update-inbandwidth` and `set update-outbandwidth`. See [Scheduled interface speedtest on page 711](#) for more information.

```
config system global
    set speedtest-server {enable | disable}
end
```

<code>speedtest-server {enable   disable}</code>	Enable/disable the speed test server on the spoke (default = disable). This setting must be enabled on spoke FortiGates. This enables iPerf in server mode, which listens on the default iPerf TCP port 5201.
--	---

### Allow an SD-WAN member on the spoke to switch routes when it is on speed test from the hub to spokes:

```
config system sdwan
    set speedtest-bypass-routing {enable | disable}
    config neighbor
        edit <bgp neighbor>
            set mode speedtest
        next
    end
end
```

<code>speedtest-bypass-routing {enable   disable}</code>	Enable/disable bypass routing when doing a speed test on an SD-WAN member (default = disable).
<code>set mode speedtest</code>	Use the speed test to select the neighbor.

### Manually run uploading speed test on the physical interfaces of each tunnel of an dial-up IPsec interface:

```
execute speed-test-dynamic <interface> <tunnel_name> <'y'/'n'> <max-out> <min-out>
```


<code>&lt;interface&gt;</code>	IPsec phase1 interface name.
<code>&lt;tunnel_name&gt;</code>	The tunnel name, or <code>all</code> for all tunnels.
<code>&lt;'y'/'n'&gt;</code>	Apply the result to the tunnels' shaper or not.
<code>&lt;max-out&gt;</code>	The maximum speed used in a speed test, in kbps.
<code>&lt;min-out&gt;</code>	The minimum speed used in a speed test, in kbps.

### Manually run a non-blocking uploading speed test:

```
diagnose netlink interface speed-test-tunnel <interface> <tunnel_name>
```

**Debug and test commands:**

<code>diagnose debug application speedtest &lt;int&gt;</code>	Enable debug of the speed test module in the forticron daemon.
<code>diagnose debug application speedtestd &lt;int&gt;</code>	Enable debug of the speed test server daemon.
<code>diagnose test application forticron 9</code>	List the scheduled speed tests.
<code>diagnose test application forticron 10</code>	Show the cached speed test results.
<code>diagnose test application forticron 11</code>	Write the cached speed test results to disk.
<code>diagnose test application forticron 12</code>	Load the speed test results from disk.
<code>diagnose test application forticron 99</code>	Cancel all pending speed tests.

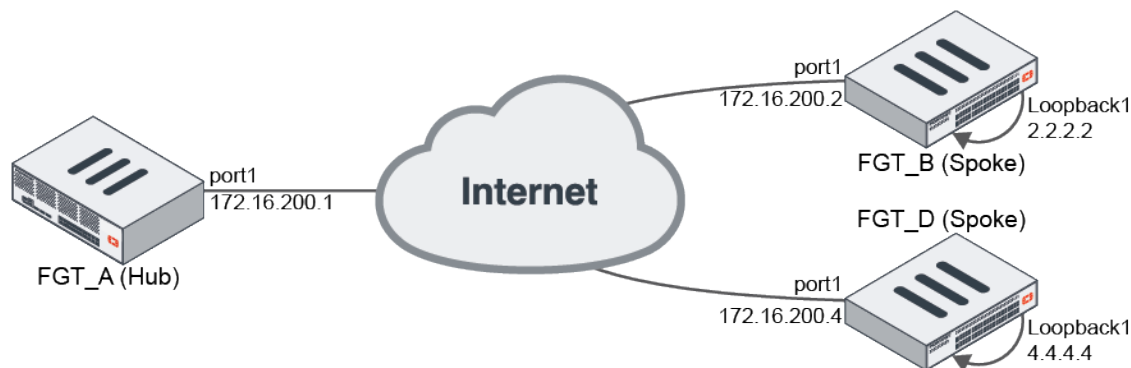**Example**

In this example, the hub is configured as a VPN dial-up server and both of the spokes are connected to the hub. It is assumed that the VPN configuration is already done, with a dynamic gateway type and kernel device creation (`net-device`) disabled. Only one SD-WAN interface is used, so there is only one VPN overlay member in the SD-WAN zone. Multiple WAN interfaces and VPN overlays could be used.

The VPN interfaces and IP addresses are:

FortiGate	Interface	IP Address
FGT_A (Hub)	hub-phase1	10.10.100.254
FGT_B (Spoke)	spoke11-p1	10.10.100.2
FGT_D (Spoke)	spoke21-p1	10.10.100.3

A recurring speed test is configured that runs on the hub over the dial-up interfaces. The speed tests are performed over the underlay interface from the hub to the spoke. Each spoke is configured to operate as a speed test server and to allow the speed test to run on its underlay interface. The spokes establish BGP peering with the hub over the VPN interface, and advertises its loopback network to the hub. The specific configuration is only shown for FGT\_B.

When the speed test is running, routing through the VPN overlay can be bypassed, and route maps are used to filter the routes that are advertised to peers. The spoke's route map does not advertise any routes to the peer, forcing the hub to use others paths to reach the spoke's network.

When no speed tests are running, the spoke's route map allows its network to be advertised on the hub.

When the speed test is complete, the measured egress bandwidth is dynamically applied to the VPN tunnel on the hub, and the result is cached for future use, in case the tunnel is disconnected and reconnected again.

### To configure the hub FortiGate (FGT\_A):

#### 1. Configure a shaping profile:

```
config firewall shaping-profile
  edit "profile_1"
    config shaping-entries
      edit 1
        set class-id 2
        set priority low
        set guaranteed-bandwidth-percentage 10
        set maximum-bandwidth-percentage 10
      next
    end
    set default-class-id 2
  next
end
```

Three classes are used in the profile for low, medium, and high priority traffic. Each class is assigned a guaranteed and maximum bandwidth as a percentage of the measured bandwidth from the speed test.

#### 2. Use the shaping profile in the interface:

```
config system interface
  edit "hub-phase1"
    set egress-shaping-profile "profile_1"
  next
end
```

#### 3. Configure a schedule to use for the speed tests:

```
config firewall schedule recurring
  edit "speedtest_recurring"
    set start 01:00
    set end 23:00
    set day monday tuesday wednesday thursday friday saturday
  next
end
```

#### 4. Configure the speed test schedule:

```
config system speed-test-schedule
  edit "hub-phase1"
    set schedules "speedtest_recurring"
    set dynamic-server enable
  next
end
```

**To configure the spoke FortiGates (FGT\_B and FGT\_D):****1. Enable the speed test daemon:**

```
config system global
    set speedtest-server enable
end
```

**2. Allow speed tests on the interface:**

```
config system interface
    edit "port1"
        append allowaccess speed-test
    next
end
```

**3. Configure SD-WAN with bypass routing enabled for speed tests on member *spoke11-p1*:**

```
config system sdwan
    set speedtest-bypass-routing enable
    config members
        edit 1
            set interface "spoke11-p1"
        next
    end
    config neighbor
        edit "10.10.100.254"
            set member 1
            set mode speedtest
        next
    end
end
```

**4. Configure BGP routing:**

```
config router route-map
    edit "No_Speed-Test"
        config rule
            edit 1
                set action permit
            next
        end
    next
    edit "Start_Speed-Test"
        config rule
            edit 1
                set action deny
            next
        end
    next
end

config router bgp
    set as 65412
    config neighbor
        edit "10.10.100.254"
            set remote-as 65412
            set route-map-out "Start_Speed-Test"
            set route-map-out-preferable "No_Speed-Test"
        end
    end
```

```

        next
    end
    config network
        edit 1
            set prefix 2.2.2.2 255.255.255.255
        next
        edit 2
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
end

```

### To manually run the speed test:

```

# execute speed-test-dynamic hub-phase1 all y 1000 100
Start testing the speed of each tunnel of hub-phase1
[6400d9] hub-phase1_0: physical_intf=port1, local_ip=172.16.200.1, server_ip=172.16.200.2
Wait for test 6400d9 to finish...
Speed-test result for test ID 6400d9:
    Completed
    measured upload bandwidth is 1002 kbps
    measured time Sun Jun 20 15:56:34 2021

```

The tested out-bandwidth is more than the set maximum accepted value 1000. Will update the tunnel's shaper by the set update-outbandwidth-maximum.

Apply shaping profile 'profile\_1' with bandwidth 1000 to tunnel hub-phase1\_0 of interface hub-phase1

```

[6400e0] hub-phase1_1: physical_intf=port1, local_ip=172.16.200.1, server_ip=172.16.200.4
Wait for test 6400e0 to finish...

```

```

Speed-test result for test ID 6400e0:
    Completed
    measured upload bandwidth is 1002 kbps
    measured time Sun Jun 20 15:56:39 2021

```

The tested out-bandwidth is more than the set maximum accepted value 1000. Will update the tunnel's shaper by the set update-outbandwidth-maximum.

Apply shaping profile 'profile\_1' with bandwidth 1000 to tunnel hub-phase1\_1 of interface hub-phase1

```

# diagnose netlink interface speed-test-tunnel hub-phase1 all
send speed test request for tunnel 'hub-phase1_0' of 'hub-phase1': 172.16.200.1 ->
172.16.200.2
send speed test request for tunnel 'hub-phase1_1' of 'hub-phase1': 172.16.200.1 ->
172.16.200.4

```

## Results

### 1. Before the speed test starts, FGT\_A can receive the route from FGT\_B by BGP:

```

# get router info routing-table bgp
Routing table for VRF=0
B       2.2.2.2/32 [200/0] via 10.10.100.2 (recursive via 172.16.200.2, hub-phase1),
00:00:10
B       10.1.100.0/24 [200/0] via 10.10.100.2 (recursive via 172.16.200.2, hub-phase1),
00:00:10

```

### 2. At the scheduled time, the speed test starts for the hub-phase1 interface from hub to spoke:



```
# diagnose test application forticron 9
Speed test schedules:
  Interface      Server      Update      Up/Down-limit (kbps)      Days
H:M      TOS      Schedule
-----
hub-phase1      dynamic
14:41      0x00      speedtest_recurring      1111111
Active schedules:
  64002f: hub-phase1(port1) 172.16.200.2      hub-phase1_1
  64002e: hub-phase1(port1) 172.16.200.4      hub-phase1_0
```

The diagnose debug application speedtest -l command can be used on both the hub and spokes to check the speed test execution.

### 3. While the speed test is running, FGT\_A does not receive the route from FGT\_B by BGP:

```
# get router info routing-table bgp
Routing table for VRF=0
```

### 4. Speed tests results can be dynamically applied to the dial-up tunnel for egress traffic shaping:

```
# diagnose vpn tunnel list
-----
name=hub-phase1_0 ver=2 serial=c 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
...
egress traffic control:
  bandwidth=737210(kbps) lock_hit=0 default_class=2 n_active_class=3
    class-id=2      allocated-bandwidth=73720(kbps)      guaranteed-
bandwidth=73720(kbps)
      max-bandwidth=73720(kbps)      current-bandwidth=0(kbps)
      priority=low      forwarded_bytes=52
      dropped_packets=0      dropped_bytes=0
    class-id=3      allocated-bandwidth=221163(kbps)      guaranteed-
bandwidth=221162(kbps)
      max-bandwidth=294883(kbps)      current-bandwidth=0(kbps)
      priority=medium      forwarded_bytes=0
      dropped_packets=0      dropped_bytes=0
    class-id=4      allocated-bandwidth=442325(kbps)      guaranteed-
bandwidth=147441(kbps)
      max-bandwidth=442325(kbps)      current-bandwidth=0(kbps)
      priority=high      forwarded_bytes=0
      dropped_packets=0      dropped_bytes=0
-----
name=hub-phase1_1 ver=2 serial=d 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
...
egress traffic control:
  bandwidth=726813(kbps) lock_hit=0 default_class=2 n_active_class=3
    class-id=2      allocated-bandwidth=72681(kbps)      guaranteed-
bandwidth=72681(kbps)
      max-bandwidth=72681(kbps)      current-bandwidth=0(kbps)
      priority=low      forwarded_bytes=123
      dropped_packets=0      dropped_bytes=0
    class-id=3      allocated-bandwidth=218044(kbps)      guaranteed-
bandwidth=218043(kbps)
      max-bandwidth=290725(kbps)      current-bandwidth=0(kbps)
```

```

                                priority=medium          forwarded_bytes=0
                                dropped_packets=0          dropped_bytes=0
class-id=4                     allocated-bandwidth=436087 (kbps)      guaranteed-
bandwidth=145362 (kbps)        max-bandwidth=436087 (kbps)      current-bandwidth=0 (kbps)
                                priority=high            forwarded_bytes=0
                                dropped_packets=0          dropped_bytes=0

```

##### 5. Speed test results can be cached, indexed, and written to disk:

```

# diagnose test application forticron 10
Speed test results:
1: vdom=root, phaselintf=hub-phase1, peer-id='spoke11-p1', bandwidth=737210, last_
log=1624226603
2: vdom=root, phaselintf=hub-phase1, peer-id='spoke21-p1', bandwidth=726813, last_
log=1624226614

# diagnose test application forticron 11
Write 2 logs to disk.

# diagnose test application forticron 12
load 2 results.

```

Disable then reenable the IPsec VPN tunnel and the cached speed test results can be applied to the tunnel again:

```

# diagnose vpn tunnel list
-----
name=hub-phase1_0 ver=2 serial=c 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
...
egress traffic control:
    bandwidth=737210 (kbps) lock_hit=0 default_class=2 n_active_class=3
-----
name=hub-phase1_1 ver=2 serial=d 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
...
egress traffic control:
    bandwidth=726813 (kbps) lock_hit=0 default_class=2 n_active_class=3

```

## Interface based QoS on individual child tunnels based on speed test results

In a hub and spoke SD-WAN topology that uses dial-up VPN overlays, QoS can be applied on individual tunnels based on the measured bandwidth between the hub and spokes. The FortiGate can use the built in speed test to dynamically populate the egress bandwidth to individual dial-up tunnels from the hub.

A bandwidth limit, derived from the speed test, and a traffic shaping profile can be applied on the dial-up IPsec tunnel interface on the hub. A class ID and percentage based QoS settings can be applied to individual child tunnels using a traffic shaping policy and profile.

### CLI commands

If the interface is an IPsec dial-up server, then egress shaping profile type can only be set to `policing`; it cannot be set to `queuing`:

```

config firewall shaping-profile
    edit <profile-name>

```

```

        set type policing
    next
end

```


The outbandwidth value is dynamically obtained from the speed test results for each individual child tunnel, and should not be set manually:

```

config system interface
    edit <dialup-server-phase1-name>
        set egress-shaping-profile <profile-name>
        set outbandwidth <bandwidth>
    next
end

```

## Example

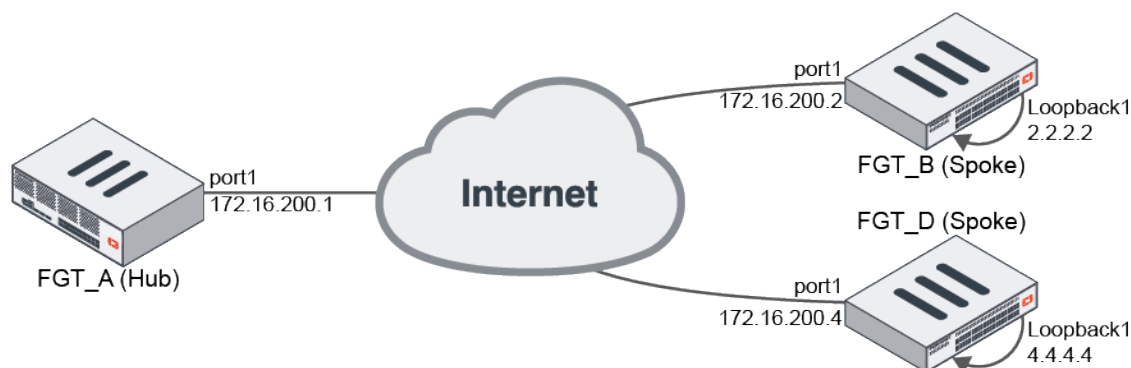

In this example, the hub is configured as a VPN dial-up server and both of the spokes are connected to the hub. It is assumed that the VPN configuration is already done, with a dynamic gateway type and kernel device creation (`net-device`) disabled. Only one SD-WAN interface is used, so there is only one VPN overlay member in the SD-WAN zone. Multiple WAN interfaces and VPN overlays could be used.

The VPN interfaces and IP addresses are:

FortiGate	Interface	IP Address
FGT_A (Hub)	hub-phase1	10.10.100.254
FGT_B (Spoke)	spoke11-p1	10.10.100.2
FGT_D (Spoke)	spoke21-p1	10.10.100.3

The hub VPN has two child tunnels, one to each spoke.

The speed test configuration is shown in [Speed tests run from the hub to the spokes in dial-up IPsec tunnels on page 813](#). This example shows applying a shaping profile to the hub's tunnel interface in order to apply interface based traffic shaping to the child tunnels.

A traffic shaping policy is used to match and assign traffic to the classes in the shaping profile.

### To configure the hub FortiGate (FGT\_A) and check the results:

1. Configure the hub FortiGate (FGT\_A) as in [Speed tests run from the hub to the spokes in dial-up IPsec tunnels on page 813](#).

**2. Configure the shaping profile:**

```

config firewall shaping-profile
  edit "profile_1"
    config shaping-entries
      edit 1
        set class-id 2
        set priority low
        set guaranteed-bandwidth-percentage 10
        set maximum-bandwidth-percentage 10
      next
      edit 2
        set class-id 3
        set priority medium
        set guaranteed-bandwidth-percentage 30
        set maximum-bandwidth-percentage 40
      next
      edit 3
        set class-id 4
        set priority high
        set guaranteed-bandwidth-percentage 20
        set maximum-bandwidth-percentage 60
      next
    end
    set default-class-id 2
  next
end

```

**3. Configure a traffic shaping policy:**

```

config firewall shaping-policy
  edit 2
    set service "ALL"
    set schedule "always"
    set dstintf "hub-phase1"
    set class-id 3
    set srcaddr "all"
    set dstaddr "all"
  next
end

```

In this example, all traffic through the hub-phase1 interface is put into class ID 3. Class IDs can be assigned based on your traffic requirements.

- 4.** At the scheduled time, the speed test will start for the hub-phase1 interface from the hub to the spokes. The speed test results can then be dynamically applied on individual child tunnels as egress traffic shaping, and the class ID percentage based QoS settings is applicable on them as templates.

```

# diagnose vpn tunnel list
-----
name=hub-phase1_0 ver=2 serial=c 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
...
egress traffic control:
    bandwidth=737210(kbps) lock_hit=0 default_class=2 n_active_class=3
    class-id=2 allocated-bandwidth=73720(kbps) guaranteed-
bandwidth=73720(kbps)
    max-bandwidth=73720(kbps) current-bandwidth=0(kbps)

```

```

        priority=low    forwarded_bytes=52
        dropped_packets=0    dropped_bytes=0
        class-id=3
        bandwidth=221162 (kbps)    allocated-bandwidth=221163 (kbps)    guaranteed-
        max-bandwidth=294883 (kbps)    current-bandwidth=0 (kbps)
        priority=medium    forwarded_bytes=0
        dropped_packets=0    dropped_bytes=0
        class-id=4
        bandwidth=147441 (kbps)    allocated-bandwidth=442325 (kbps)    guaranteed-
        max-bandwidth=442325 (kbps)    current-bandwidth=0 (kbps)
        priority=high    forwarded_bytes=0
        dropped_packets=0    dropped_bytes=0
    -----
    name=hub-phasel_1 ver=2 serial=d 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
    mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
    ...
    egress traffic control:
        bandwidth=726813 (kbps) lock_hit=0 default_class=2 n_active_class=3
        class-id=2    allocated-bandwidth=72681 (kbps)    guaranteed-
    bandwidth=72681 (kbps)
        max-bandwidth=72681 (kbps)    current-bandwidth=0 (kbps)
        priority=low    forwarded_bytes=123
        dropped_packets=0    dropped_bytes=0
        class-id=3
        bandwidth=218043 (kbps)    allocated-bandwidth=218044 (kbps)    guaranteed-
        max-bandwidth=290725 (kbps)    current-bandwidth=0 (kbps)
        priority=medium    forwarded_bytes=0
        dropped_packets=0    dropped_bytes=0
        class-id=4
        bandwidth=145362 (kbps)    allocated-bandwidth=436087 (kbps)    guaranteed-
        max-bandwidth=436087 (kbps)    current-bandwidth=0 (kbps)
        priority=high    forwarded_bytes=0
        dropped_packets=0    dropped_bytes=0

```

The guaranteed and maximum bandwidths equal 10% of the speed test result, as expected.


## SD-WAN in large scale deployments

Phase 2 selectors can be used to inject IKE routes on the ADVPN shortcut tunnel. When configuration method (`mode-cfg`) is enabled in IPsec phase 1 configuration, enabling `mode-cfg-allow-client-selector` allows custom phase 2 selectors to be configured. By also enabling the addition of a route to the peer destination selector (`add-route`) in the phase 1 configuration, IKE routes based on the phase 2 selectors can be injected. This means that routes do not need to be reflected on the hub to propagate them between spokes, avoiding possible BGP daemon process load issues and improving network scalability in a large-scale ADVPN network.

Route map rules can apply priorities to BGP routes. On the hub, priorities can be set in a route map's rules, and the route map can be applied on BGP routes. This allows the hub to mark the preferred path learned from the spokes with a priority value (lower priority is preferred), instead of using multiple SD-WAN policy routes on the hub. When a preferred outbound route map (`route-map-out-preferable`) is also configured in an SD-WAN neighbor on the spoke, deploying SD-WAN rules on the hub to steer traffic from the hub to a spoke is unnecessary.

SD-WAN members' local cost can be exchanged on the ADVPN shortcut tunnel so that spokes can use the remote cost as tiebreak to select a preferred shortcut. If multiple shortcuts originate from the same member to different members on

the same remote spoke, then the remote cost on the shortcuts is used as the tiebreak to decide which shortcut is preferred.

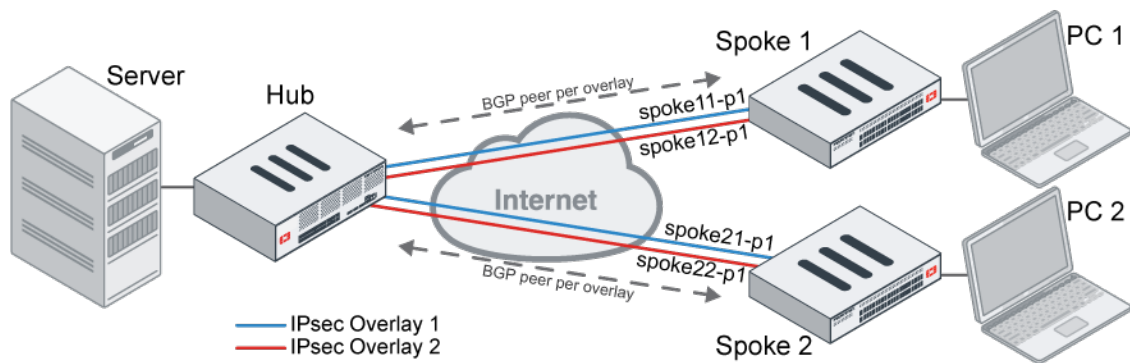

In this example, SD-WAN is configured on an ADVPN network with a BGP neighbor per overlay.

Instead of reflecting BGP routes with the route-reflector on the hub, when the shortcuts are triggered, IKE routes on the shortcuts are directly injected based on the configured phase 2 selectors to allow routes to be exchanged between spokes.

Routes between the hub and the spokes are exchanged by BGP, and the spokes use the default route to send spoke-to-spoke traffic to the hub and trigger the shortcuts.

Instead of configuring SD-WAN rules on the hub, different priorities are configured on the BGP routes by matching different BGP communities to steer traffic from the hub to the spokes.

### To configure Spoke 1:

#### 1. Configure phase 1:

```
config vpn ipsec phase1-interface
    edit "spoke11-p1"
        ...
        set ike-version 2
        set net-device enable
        set add-route enable
        set mode-cfg enable
        set auto-discovery-receiver enable
        set mode-cfg-allow-client-selector enable
        set link-cost 11
        ...
    next
    edit "spoke12-p1"
        ...
        set ike-version 2
        set net-device enable
        set add-route enable
        set mode-cfg enable
        set auto-discovery-receiver enable
        set mode-cfg-allow-client-selector enable
        set link-cost 21
    next
end
```

#### 2. Configure phase 2:

```

config vpn ipsec phase2-interface
    edit "spoke11-p2"
        ...
        set src-name "LAN_Net"
        set dst-name "all"
    next
    edit "spoke12-p2"
        ...
        set src-name "LAN_Net"
        set dst-name "all"
    next
end

```

### 3. Configure an address group:

Spoke 1 uses LAN subnet 10.1-3.100.0/24.

```

config firewall addrgrp
    edit "LAN_Net"
        set member "10.1.100.0" "10.2.100.0" "10.3.100.0"
    next
end

```

### 4. Configure route maps:

- If overlay 1 to the hub is in SLA, attach "65000:1" to the BGP routes advertised to the hub over overlay 1.
- If overlay 2 to the hub is in SLA, attach "65000:2" to the BGP routes advertised to the hub over overlay 2.
- If any overlay to the hub is out of SLA, attach "65000:9999" to the BGP routes advertised to the hub over any overlay.

```

config router route-map
    edit "HUB_CARRIER1"
        config rule
            edit 1
                set set-community "65000:1"
                ...
            next
        end
    ...
next
edit "HUB_CARRIER2"
    config rule
        edit 1
            set set-community "65000:2"
            ...
        next
    end
    ...
next
edit "HUB_BAD"
    config rule
        edit 1
            set set-community "65000:9999"
            ...
        next
    end
    ...

```

```
    next
end
```

## 5. Configure BGP and SD-WAN members and neighbors:

```
config router bgp
    set as 65412
    config neighbor
        edit "10.10.15.253"
            set remote-as 65412
            set route-map-out "HUB_BAD"
            set route-map-out-preferable "HUB_CARRIER1"
            ...
        next
        edit "10.10.16.253"
            set remote-as 65412
            set route-map-out "HUB_BAD"
            set route-map-out-preferable "HUB_CARRIER2"
            ...
        next
    end
end

config system sdwan
    config members
        edit 1
            set interface "spoke11-p1"
            set cost 10
        next
        edit 2
            set interface "spoke12-p1"
            set cost 20
        next
    end
    config neighbor
        edit "10.10.15.253"
            set member 1
            set health-check "1"
            set sla-id 1
        next
        edit "10.10.16.253"
            set member 2
            set health-check "11"
            set sla-id 1
        next
    end
end
```

## To configure Spoke 2:

### 1. Configure phase 1:

```
config vpn ipsec phase1-interface
    edit "spoke21-p1"
        ...
        set ike-version 2
        set net-device enable
```



```

        set add-route enable
        set mode-cfg enable
        set auto-discovery-receiver enable
        set mode-cfg-allow-client-selector enable
        set link-cost 101
        ...
    next
    edit "spoke22-p1"
        ...
        set ike-version 2
        set net-device enable
        set add-route enable
        set mode-cfg enable
        set auto-discovery-receiver enable
        set mode-cfg-allow-client-selector enable
        set link-cost 201
    next
end

```

## 2. Configure phase 2:

```

config vpn ipsec phase2-interface
    edit "spoke21-p2"
        ...
        set src-name "LAN_Net"
        set dst-name "all"
    next
    edit "spoke22-p2"
        ...
        set src-name "LAN_Net"
        set dst-name "all"
    next
end

```

## 3. Configure an address group:

Spoke 2 uses LAN subnet 192.168.5-7.0/24.

```

config firewall addrgrp
    edit "LAN_Net"
        set member "192.168.5.0" "192.168.6.0" "192.168.7.0"
    next
end

```

## 4. Configure route maps:

- If overlay 1 to the hub is in SLA, attach "65000:1" to the BGP routes advertised to the hub over overlay 1.
- If overlay 2 to the hub is in SLA, attach "65000:2" to the BGP routes advertised to the hub over overlay 2.
- If any overlay to the hub is out of SLA, attach "65000:9999" to the BGP routes advertised to the hub over any overlay.

```

config router route-map
    edit "HUB_CARRIER1"
        config rule
            edit 1
                set set-community "65000:1"
                ...
            next
        end
    end

```

```

...
next
edit "HUB_CARRIER2"
  config rule
    edit 1
      set set-community "65000:2"
      ...
    next
  end
  ...
next
edit "HUB_BAD"
  config rule
    edit 1
      set set-community "65000:9999"
      ...
    next
  end
  ...
next
end

```

## 5. Configure BGP and SD-WAN members and neighbors:

```

config router bgp
  set as 65412
  config neighbor
    edit "10.10.15.253"
      set remote-as 65412
      set route-map-out "HUB_BAD"
      set route-map-out-preferable "HUB_CARRIER1"
      ...
    next
    edit "10.10.16.253"
      set remote-as 65412
      set route-map-out "HUB_BAD"
      set route-map-out-preferable "HUB_CARRIER2"
      ...
    next
  end
end

config system sdwan
  config members
    edit 1
      set interface "spoke21-p1"
      set cost 10
    next
    edit 2
      set interface "spoke22-p1"
      set cost 20
    next
  end
  config neighbor
    edit "10.10.15.253"
      set member 1
      set health-check "1"

```

```

        set sla-id 1
    next
    edit "10.10.16.253"
        set member 2
        set health-check "11"
        set sla-id 1
    next
end
end

```

## To configure the hub:

### 1. Configure the route maps:

- Set the priority to 100 for routes with community 65000:1, indicating that they are in SLA for overlay 1.
- Set the priority to 200 for routes with community 65000:2, indicating that they are in SLA for overlay 2.
- Set the priority to 9999 for routes with community 65000:9999, indicating that they are out of SLA for any overlay.

```

config router route-map
    edit "Set_Pri"
        config rule
            edit 1
                set match-community "comm_65000:1"
                set set-priority 100
            next
            edit 2
                set match-community "comm_65000:2"
                set set-priority 200
            next
            edit 3
                set match-community "comm_65000:9999"
                set set-priority 9999
            next
        end
    next
end

```

### 2. Configure BGP:

```

config router bgp
    set as 65412
    config neighbor-group
        edit "advpn"
            set remote-as 65412
            set route-map-in "Set_Pri"
            ...
        next
        edit "advpn2"
            set remote-as 65412
            set route-map-in "Set_Pri"
            ...
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.15.0 255.255.255.0
    end

```

```

        set neighbor-group "advpn"
    next
    edit 2
        set prefix 10.10.16.0 255.255.255.0
        set neighbor-group "advpn2"
    next
end
end

```

## To test the configuration:

### 1. Check the routing tables on the spokes:

#### Spoke 1:

```

spoke-1 (root) # get router info routing-table all
B*      0.0.0.0/0 [200/0] via 10.10.15.253 (recursive is directly connected, spoke11-
p1), 00:01:17, [1/0]          // default route to hub
        [200/0] via 10.10.16.253 (recursive is directly connected,
spoke12-p1), 00:01:17, [1/0]
B       9.0.0.0/24 [200/0] via 10.10.15.253 (recursive is directly connected, spoke11-
p1), 00:01:17, [1/0]          // route to the server behind hub
        [200/0] via 10.10.16.253 (recursive is directly connected,
spoke12-p1), 00:01:17, [1/0]
C       10.1.100.0/24 is directly connected, port2          // route to PC 1
C       10.10.15.0/24 is directly connected, spoke11-p1     // overlay 1
C       10.10.15.1/32 is directly connected, spoke11-p1
C       10.10.16.0/24 is directly connected, spoke12-p1     // overlay 2
C       10.10.16.1/32 is directly connected, spoke12-p1

```

#### Spoke 2:

```

spoke-2 (root) # get router info routing-table all
B*      0.0.0.0/0 [200/0] via 10.10.15.253 (recursive is directly connected, spoke21-
p1), 00:46:14, [1/0]          // default route to hub
        [200/0] via 10.10.16.253 (recursive is directly connected,
spoke22-p1), 00:46:14, [1/0]
B       9.0.0.0/24 [200/0] via 10.10.15.253 (recursive is directly connected, spoke21-
p1), 00:46:18, [1/0]          // route to the server behind hub
        [200/0] via 10.10.16.253 (recursive is directly connected,
spoke22-p1), 00:46:18, [1/0]
C       10.10.15.0/24 is directly connected, spoke21-p1     // overlay 1
C       10.10.15.2/32 is directly connected, spoke21-p1
C       10.10.16.0/24 is directly connected, spoke22-p1     // overlay 2
C       10.10.16.2/32 is directly connected, spoke22-p1
C       192.168.5.0/24 is directly connected, port2         // route to PC 2

```

### 2. Send traffic from PC 1 to PC 2 and trigger the shortcut:

The IKE routes on the shortcut are directly injected based on the phase 2 selectors, and spoke-to-spoke traffic then goes directly through the shortcut instead of going through the hub.

#### Spoke 1:

```

spoke-1 (root) # get router info routing-table static
S       192.168.5.0/24 [15/0] via spoke11-p1_0 tunnel 172.16.200.4 vrf 0, [1/0]
S       192.168.6.0/24 [15/0] via spoke11-p1_0 tunnel 172.16.200.4 vrf 0, [1/0]
S       192.168.7.0/24 [15/0] via spoke11-p1_0 tunnel 172.16.200.4 vrf 0, [1/0]

```

```
spoke-1 (root) # diagnose sniffer packet any 'host 192.168.5.44' 4
interfaces=[any]
filters=[host 192.168.5.44]
1.446306 port2 in 10.1.100.22 -> 192.168.5.44: icmp: echo request
1.446327 spoke11-p1_0 out 10.1.100.22 -> 192.168.5.44: icmp: echo request
1.446521 spoke11-p1_0 in 192.168.5.44 -> 10.1.100.22: icmp: echo reply
1.446536 port2 out 192.168.5.44 -> 10.1.100.22: icmp: echo reply
```

#### Spoke 2:

```
spoke-2 (root) # get router info routing-table static
S      10.1.100.0/24 [15/0] via spoke21-p1_0 tunnel 10.10.15.1 vrf 0, [1/0]
S      10.2.100.0/24 [15/0] via spoke21-p1_0 tunnel 10.10.15.1 vrf 0, [1/0]
S      10.3.100.0/24 [15/0] via spoke21-p1_0 tunnel 10.10.15.1 vrf 0, [1/0]
```

### 3. Confirm that the overlays are in SLA on the spokes:

#### Spoke 1:

```
spoke-1 (root) # diagnose sys sdwan neighbor
Neighbor(10.10.15.253): member(1)role(standalone)
Health-check(1:1) sla-pass selected alive
Neighbor(10.10.16.253): member(2)role(standalone)
Health-check(11:1) sla-pass selected alive
```

#### Spoke 2:

```
spoke-2 (root) # diagnose sys sdwan neighbor
Neighbor(10.10.15.253): member(1)role(standalone)
Health-check(1:1) sla-pass selected alive
Neighbor(10.10.16.253): member(2)role(standalone)
Health-check(11:1) sla-pass selected alive
```

### 4. On the hub, check that the routes received from the spokes have the expected priorities:

```
hub (root) # diagnose ip route list | grep proto=11
tab=254 vf=0 scope=0 type=1 proto=11 prio=100 0.0.0.0/0.0.0.0/0->10.1.100.0/24
pref=0.0.0.0 gwy=10.10.15.1 dev=101(hub-phase1)
tab=254 vf=0 scope=0 type=1 proto=11 prio=200 0.0.0.0/0.0.0.0/0->10.1.100.0/24
pref=0.0.0.0 gwy=10.10.16.1 dev=102(hub2-phase1)
tab=254 vf=0 scope=0 type=1 proto=11 prio=100 0.0.0.0/0.0.0.0/0->192.168.5.0/24
pref=0.0.0.0 gwy=10.10.15.2 dev=101(hub-phase1)
tab=254 vf=0 scope=0 type=1 proto=11 prio=200 0.0.0.0/0.0.0.0/0->192.168.5.0/24
pref=0.0.0.0 gwy=10.10.16.2 dev=102(hub2-phase1)
```

The priority set by the hub's route map is based on the community string received from the spoke. The route with a lower priority value is selected, so traffic to Spoke 1 goes out on the hub-phase1 tunnel:

```
hub (root) # diagnose sniffer packet any 'host 9.0.0.2' 4
interfaces=[any]
filters=[host 9.0.0.2]
2.735456 R190 in 9.0.0.2 -> 10.1.100.22: icmp: echo request
2.735508 hub-phase1 out 9.0.0.2 -> 10.1.100.22: icmp: echo request
2.735813 hub-phase1 in 10.1.100.22 -> 9.0.0.2: icmp: echo reply
2.735854 R190 out 10.1.100.22 -> 9.0.0.2: icmp: echo reply
```

### 5. If overlay 1 goes out of SLA, the priorities of the routes on the hub are updated and traffic from the hub to Spoke 1 goes through overlay 2:

#### Spoke 1:

```
spoke-1 (root) # diagnose sys sdwan neighbor
Neighbor(10.10.15.253): member(1)role(standalone)
    Health-check(1:1) sla-fail alive
Neighbor(10.10.16.253): member(2)role(standalone)
    Health-check(11:1) sla-pass selected alive
```

#### Spoke 2:

```
spoke-2 (root) # diagnose sys sdwan neighbor
Neighbor(10.10.15.253): member(1)role(standalone)
    Health-check(1:1) sla-fail alive
Neighbor(10.10.16.253): member(2)role(standalone)
    Health-check(11:1) sla-pass selected alive
```

#### Hub:

```
hub (root) # diagnose ip route list | grep proto=11
tab=254 vf=0 scope=0 type=1 proto=11 prio=200 0.0.0.0/0.0.0.0/0->10.1.100.0/24
pref=0.0.0.0 gwy=10.10.16.1 dev=102(hub2-phasel)
tab=254 vf=0 scope=0 type=1 proto=11 prio=9999 0.0.0.0/0.0.0.0/0->10.1.100.0/24
pref=0.0.0.0 gwy=10.10.15.1 dev=101(hub-phasel)
tab=254 vf=0 scope=0 type=1 proto=11 prio=200 0.0.0.0/0.0.0.0/0->192.168.5.0/24
pref=0.0.0.0 gwy=10.10.16.2 dev=102(hub2-phasel)
tab=254 vf=0 scope=0 type=1 proto=11 prio=9999 0.0.0.0/0.0.0.0/0->192.168.5.0/24
pref=0.0.0.0 gwy=10.10.15.2 dev=101(hub-phasel)

hub (root) # diagnose sniffer packet any 'host 9.0.0.2' 4
interfaces=[any]
filters=[host 9.0.0.2]
3.550181 R190 in 9.0.0.2 -> 10.1.100.22: icmp: echo request
3.550234 hub2-phasel out 9.0.0.2 -> 10.1.100.22: icmp: echo request
3.550713 hub2-phasel in 10.1.100.22 -> 9.0.0.2: icmp: echo reply
3.550735 R190 out 10.1.100.22 -> 9.0.0.2: icmp: echo reply
```

### 6. Verify the service diagnostics on Spoke 1:

```
# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Tie break: cfg
Gen(4), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members(2):
    1: Seq_num(1 spoke11-p1), alive, sla(0x1), gid(0), cfg_order(0), local cost(10),
    selected
    2: Seq_num(2 spoke12-p1), alive, sla(0x1), gid(0), cfg_order(1), local cost(20),
    selected
Src address(1):
    10.1.100.0-10.1.100.255

Dst address(1):
    0.0.0.0-255.255.255.255
```

### 7. Verify the service diagnostics on Spoke 2:

```
# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Tie break: cfg
Gen(2), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
```

```

Members(2):
  1: Seq_num(1 spoke21-p1), alive, sla(0x1), gid(0), cfg_order(0), local cost(10),
selected
  2: Seq_num(2 spoke22-p1), alive, sla(0x1), gid(0), cfg_order(1), local cost(20),
selected
Src address(1):
  192.168.5.0-192.168.5.255

Dst address(1):
  0.0.0.0-255.255.255.255

```

#### 8. Trigger shortcuts between Spoke 1 and Spoke 2:

- Shortcuts spoke11-p1\_1 and spoke11-p1\_0 originate from spoke11-p1.
- spoke11-p1\_1 corresponds to spoke21-p1\_0 on Spoke 2.
- spoke11-p1\_0 corresponds to spoke22-p1\_0 on Spoke 2.

##### Spoke 1:

```

# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Tie break: cfg
Gen(11), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Member sub interface(4):
  3: seq_num(1), interface(spoke11-p1):
    1: spoke11-p1_0(80)
    2: spoke11-p1_1(81)
Members(4):
  1: Seq_num(1 spoke11-p1_1), alive, sla(0x1), gid(0), remote cost(101), cfg_order(0),
local cost(10), selected
  2: Seq_num(1 spoke11-p1_0), alive, sla(0x1), gid(0), remote cost(201), cfg_order(0),
local cost(10), selected
  3: Seq_num(1 spoke11-p1), alive, sla(0x1), gid(0), cfg_order(0), local cost(10),
selected
  4: Seq_num(2 spoke12-p1), alive, sla(0x1), gid(0), cfg_order(1), local cost(20),
selected
Src address(1):
  10.1.100.0-10.1.100.255

Dst address(1):
  0.0.0.0-255.255.255.255

```

##### Spoke 2:

```

# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
Tie break: cfg
Gen(15), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Member sub interface(4):
  2: seq_num(1), interface(spoke21-p1):
    1: spoke21-p1_0(75)
  4: seq_num(2), interface(spoke22-p1):
    1: spoke22-p1_0(74)
Members(4):
  1: Seq_num(1 spoke21-p1_0), alive, sla(0x1), gid(0), remote cost(11), cfg_order(0),
local cost(10), selected

```

```

2: Seq_num(1 spoke21-p1), alive, sla(0x1), gid(0), cfg_order(0), local cost(10),
selected
3: Seq_num(2 spoke22-p1_0), alive, sla(0x1), gid(0), remote cost(11), cfg_order(1),
local cost(20), selected
4: Seq_num(2 spoke22-p1), alive, sla(0x1), gid(0), cfg_order(1), local cost(20),
selected
Src address(1):
    192.168.5.0-192.168.5.255

Dst address(1):
    0.0.0.0-255.255.255.255

```

The spoke11-p1\_1 shortcut on Spoke 1 is preferred over spoke11-p1\_0 due to the lower remote link cost of 101 when they have the same local SD-WAN member link cost of 10.

#### 9. Verify the policy route list on Spoke 1:

```

# diagnose firewall proute list
list route policy info(vf=root):

id=2131755009(0x7f100001) vwl_service=1(1) vwl_mbr_seq=1 1 1 2 dscp_tag=0xfc 0xfc
flags=0x0 tos=0x00 tos_mask=0x00 protocol=0 sport=0-65535 iif=0(any) dport=1-65535 path
(4) oif=81(spoke11-p1_1) oif=80(spoke11-p1_0) oif=54(spoke11-p1) oif=55(spoke12-p1)
source(1): 10.1.100.0-10.1.100.255
destination(1): 0.0.0.0-255.255.255.255
hit_count=176 last_used=2022-07-12 11:56:08

```

## Advanced configuration

The following topics provide instructions on SD-WAN advanced configuration:

- [SD-WAN with FGCP HA on page 834](#)
- [Configuring SD-WAN in an HA cluster using internal hardware switches on page 841](#)
- [SD-WAN configuration portability on page 845](#)
- [SD-WAN segmentation over a single overlay on page 851](#)
- [Matching BGP extended community route targets in route maps on page 866](#)
- [Copying the DSCP value from the session original direction to its reply direction on page 871](#)



See also [Packet distribution for aggregate static IPsec tunnels in SD-WAN on page 1732](#).

## SD-WAN with FGCP HA

This example shows how to convert a standalone FortiGate SD-WAN solution to a FGCP HA cluster with full-mesh WAN set up. This configuration allows you to load balance your internet traffic between multiple ISP links. It also provides redundancy for your internet connection if your primary ISP is unavailable, or if one of the FortiGates in the HA cluster fails.

This example assumes that a standalone FortiGate has already been configured for SD-WAN by following the [SD-WAN quick start on page 630](#).

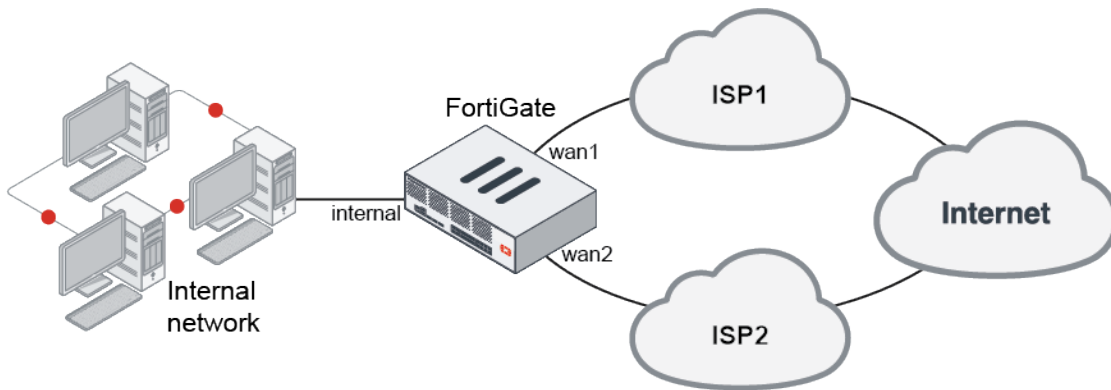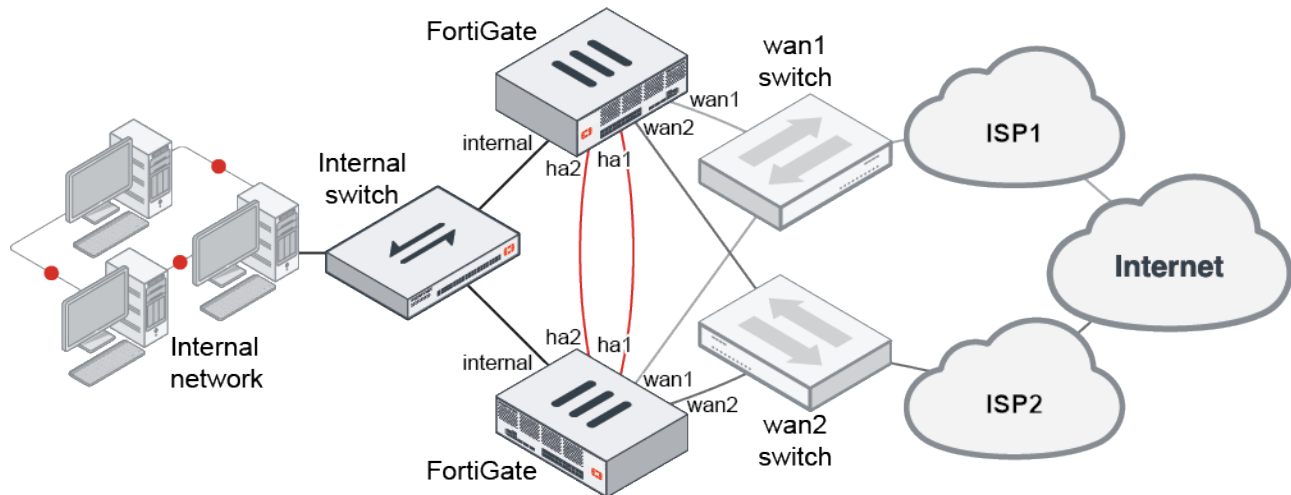

**Standalone FortiGate:****FGCP HA cluster:**

The following devices are required to convert the topology to HA:

- A second FortiGate that is the same model running the same firmware version.
- Two switches for connecting each FortiGate's WAN interface to the corresponding ISP modem.

Before you begin:

- Ensure that the licenses and subscriptions on both HA members match.
- Ensure that there are one or more ports reserved for HA heartbeat.
- Ensure you have physical access to both HA members.



Enabling HA and re-cabling the WAN interfaces will cause network interruptions.  
This procedure should be performed during a maintenance window.

## Configuring the standalone FortiGate for HA

After running the following commands, the FortiGate negotiates to establish an HA cluster. You might temporarily lose connectivity with the FortiGate as FGCP negotiations take place and the MAC addresses of the FortiGate interfaces are changed to HA virtual MAC addresses.

This configurations sets the HA mode to active-passive.

The ha1 and ha2 interfaces are configured as the heartbeat interfaces, with priorities set to 200 and 100 respectively. Setting different priorities for the heartbeat interfaces is a best practice, but is not required.

If you have more than one cluster on the same network, each cluster should have a different group ID. Changing the group ID changes the cluster interface's virtual MAC addresses. If the group IP causes a MAC address conflict on your network, select a different group ID.

Enabling override and increasing the device priority means that this FortiGate always becomes the primary unit.

### To configure the standalone FortiGate for HA in the GUI:

1. Go to *System > Settings* and change the *Host name* so that the FortiGate can be easily identified as the primary unit.
2. Go to *System > HA* and configure the following options:

<b>Mode</b>	Active-Passive
<b>Device priority</b>	250
<b>Group name</b>	My-cluster
<b>Password</b>	<password>
<b>Heartbeat interfaces</b>	ha1 and ha2
<b>Heartbeat Interface Priority</b>	<b>port2</b> (ha1): 200 <b>port3</b> (ha2): 100



Override and the group ID can only be configured from the CLI.

3. Click **OK**.  
Connectivity with the FortiGate will temporarily be lost.

### To configure the standalone FortiGate for HA in the CLI:

1. Change the host name so that the FortiGate can be easily identified:

```
config system global
    set hostname primary_FG
end
```

2. Configure HA:

```
config system ha
    set mode a-p
    set group-id 100
    set group-name My-cluster
    set password <password>
    set priority 250
    set override enable
    set hbdev ha1 200 ha2 100
end
```



If HA mode does not start after running the above steps, ensure that none of the FortiGate's interfaces use DHCP or PPPoE addressing.

## Configuring the secondary FortiGate for HA

The secondary FortiGate must be the same model and running the same firmware version as the primary FortiGate. The HA settings are the same as the for the primary unit, except the secondary device has a lower priority and override is not enabled.



It is best practice to reset the FortiGate to factory default settings prior to configuring HA. This reduces the chance of synchronization problems.

```
# execute factoryreset
This operation will reset the system to factory default!
Do you want to continue? (y/n) y
```

This is unnecessary if the device is new from the factory.

### To configure the secondary FortiGate for HA in the GUI:

1. Go to *System > Settings* and change the *Host name* so that the FortiGate can be easily identified as the backup unit.
2. Go to *System > HA* and configure the options the same as for the primary FortiGate, except with a lower priority:

<b>Mode</b>	Active-Passive
<b>Device priority</b>	128
<b>Group name</b>	My-cluster
<b>Password</b>	<password>
<b>Heartbeat interfaces</b>	ha1 and ha2
<b>Heartbeat Interface Priority</b>	<b>port2</b> (ha1): 200 <b>port3</b> (ha2): 100

3. Click *OK*.

### To configure the secondary FortiGate for HA in the CLI:

1. Change the host name so that the secondary FortiGate can be easily identified:

```
config system global
    set hostname secondary_FG
end
```

2. Configure HA:

```
config system ha
    set mode a-p
    set group-id 100
    set group-name My-cluster
    set password <password>
    set priority 128
    set hbdev ha1 200 ha2 100
end
```

## Connecting the heartbeat interfaces between the FortiGates

### To connect and check the heartbeat interfaces:

1. Connect the heartbeat interfaces ha1 and ha2 between the primary and secondary FortiGate.
  - a. An HA primary device is selected. Because the primary FortiGate has a higher priority and override enabled, it assumes the role of HA primary.

b. The secondary FortiGate synchronizes its configuration from the primary device.

2. Verify that the checksums match between the primary and secondary FortiGates:

```
# diagnose sys ha checksum cluster

===== FG5H0XXXXXXXXXX0 =====

is_manage_primary()=1, is_root_primary()=1
debugzone
global: 2b e9 81 38 c2 9d 4f db b7 0e 1f 49 42 c6 1e fb
root: af a6 48 c5 c2 9a 8b 81 a5 53 fb 27 e9 ae 01 6a
all: 89 1f 63 77 48 8a 30 ee 57 06 ca eb 71 e6 8e ad

checksum
global: 2b e9 81 38 c2 9d 4f db b7 0e 1f 49 42 c6 1e fb
root: af a6 48 c5 c2 9a 8b 81 a5 53 fb 27 e9 ae 01 6a
all: 89 1f 63 77 48 8a 30 ee 57 06 ca eb 71 e6 8e ad

===== FG5H0XXXXXXXXXX1 =====

is_manage_primary()=0, is_root_primary()=0
debugzone
global: 2b e9 81 38 c2 9d 4f db b7 0e 1f 49 42 c6 1e fb
root: af a6 48 c5 c2 9a 8b 81 a5 53 fb 27 e9 ae 01 6a
all: 89 1f 63 77 48 8a 30 ee 57 06 ca eb 71 e6 8e ad

checksum
global: 2b e9 81 38 c2 9d 4f db b7 0e 1f 49 42 c6 1e fb
root: af a6 48 c5 c2 9a 8b 81 a5 53 fb 27 e9 ae 01 6a
all: 89 1f 63 77 48 8a 30 ee 57 06 ca eb 71 e6 8e ad
```

If all of the cluster members have identical checksums, then their configurations are synchronized. If the checksums are not the same, wait for a few minutes, then repeat the command. Some parts of the configuration might take a significant amount of time to synchronize (tens of minutes).

## Connecting other traffic interfaces

After the device configurations are synchronized, you can connect the rest of the traffic interfaces. Making these connections will disrupt traffic as cables are disconnected and reconnected.

Switches must be used between the cluster and the ISPs, and between the cluster and the internal network, as shown in the topology diagram.

## Checking cluster operations

The *HA Status* dashboard widget shows the synchronization status. Hover over the host names of each FortiGate in the widget to verify that they are synchronized and have the same checksum.

To view more information about the cluster status, including the number of sessions passing through the cluster members, go to *System > HA*.

See [Check HA synchronization status on page 2364](#) for more information.

## Results

1. Browse the internet on a computer in the internal network.
2. Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab to see the bandwidth, volume, and sessions for traffic on the SD-WAN interfaces. See [Results on page 635](#) for details.
3. Go to *Dashboard > Network*, and expand the *SD-WAN* widget to see information about each interface, such as the number of sessions and the bit rate.

Interface	Status	Sessions	Upload	Download
sd-wan				
wan1		49	190 bps	51 bps
wan2		33	2.97 kbps	6.75 kbps

Updated: 14:30:42

## Testing HA failover

All traffic should currently be flowing through the primary FortiGate. If it becomes unavailable, traffic fails over to the secondary FortiGate. When the primary FortiGate rejoins the cluster, the secondary FortiGate continues to operate as the primary FortiGate.

To test this, ping a reliable IP address from a computer in the internal network, and then power off the primary FortiGate.

There will be a momentary pause in the ping results until traffic diverts to the backup FortiGate, allowing the ping traffic to continue:

```
64 bytes from 184.25.76.114: icmp_seq=69 ttl=52 time=8.719 ms\
64 bytes from 184.25.76.114: icmp_seq=70 ttl=52 time=8.822 ms\
64 bytes from 184.25.76.114: icmp_seq=74 ttl=52 time=8.901 ms\
Request timeout for icmp_seq 75\
64 bytes from 184.25.76.114: icmp_seq=76 ttl=52 time=8.860 ms\
64 bytes from 184.25.76.114: icmp_seq=77 ttl=52 time=9.174 ms\
64 bytes from 184.25.76.114: icmp_seq=83 ttl=52 time=8.639 ms}
```



If you are using port monitoring, you can also unplug the primary FortiGate's internet facing interface to test failover.

After the secondary FortiGate becomes the primary, you can log into the cluster using the same IP address as before the fail over. If the primary FortiGate is powered off, you will be logged into the backup FortiGate. Check the host name to verify what device you have logged into. The FortiGate continues to operate in HA mode, and if you restart the primary FortiGate, it will rejoin the cluster and act as the backup FortiGate. Traffic is not disrupted when the restarted FortiGate rejoins the cluster.

You can also use the CLI to force an HA failover. See [Force HA failover for testing and demonstrations on page 2390](#) for information.

## Testing ISP failover

To test a failover of the redundant internet configuration, you need to simulate a failed internet connection to one of the ports. You can do this by disconnecting power from the wan1 switch, or by disconnecting the wan1 interfaces of both FortiGates from ISP1.


After disconnecting, verify that users still have internet access

- Go to *Dashboard > Network*, and expand the *SD-WAN* widget. The *Upload* and *Download* columns for wan1 show that traffic is not going through that interface.

Interface	Status	Sessions	Upload	Download
sd-wan ⓘ				
wan1	🟢	12	0 bps	0 bps
wan2	🟢	33	2.97 kbps	6.75 kbps

Updated: 14:30:42

- Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab. The *Bandwidth*, *Volume*, and *Sessions* tabs show that traffic is entirely diverted to wan2.

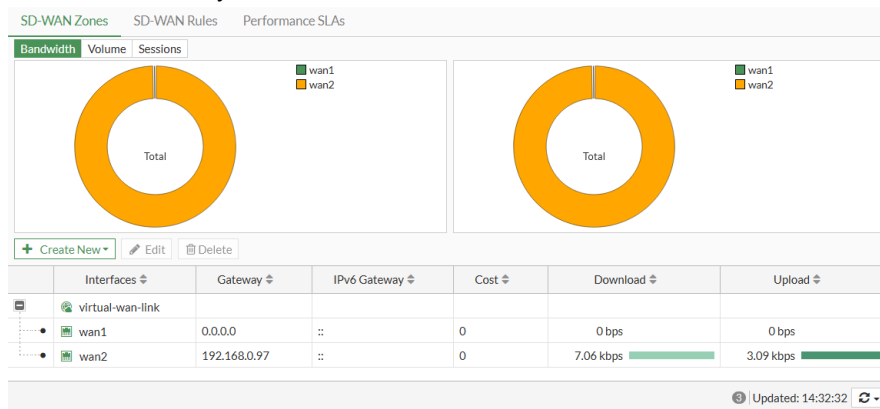

Users on the network should not notice the wan1 failure. If you are using the wan1 gateway IP address to connect to the administrator dashboard, it will appear as though you are still connecting through wan1.


After verifying a successful failover, reestablish the connection to ISP1.

## Configuring SD-WAN in an HA cluster using internal hardware switches

In this SD-WAN configuration, two FortiGates in an active-passive (A-P) HA pair are used to provide hardware redundancy. Instead of using external switches to provide a mesh network connection to the ISP routers, the FortiGates use their built-in hardware switches to connect to the ISP routers.



Only FortiGate models that have hardware switches can be used for this solution. Ports in a software switch are not in a forwarding state when a FortiGate is acting as a secondary device in a A-P cluster.

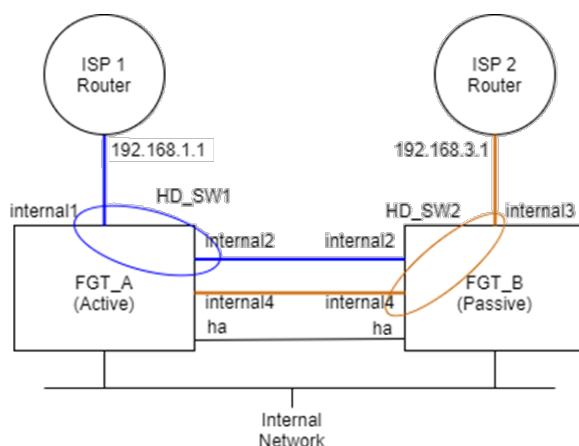

In this topology:

- Two hardware switches are created, HD\_SW1 and HD\_SW2.
- HD\_SW1 is used to connect to ISP 1 Router and includes the internal1 and internal2 ports.
- HD\_SW2 is used to connect to ISP 2 Router and includes the internal3 and internal4 ports.
- Another interface on each device is used as the HA heartbeat interface, connecting the two FortiGates in HA.

The FortiGates create two hardware switches to connect to ISP 1 and ISP2. When FGT\_A is the primary device, it reaches ISP 1 on internal1 in HD\_SW1 and ISP 2 on internal4 in HD\_SW2. When FGT\_B is the primary device, it reaches ISP 1 on internal2 in HD\_SW1 and ISP 2 on internal3 on HD\_SW2.

## HA failover

This is not a standard HA configuration with external switches. In the case of a device failure, one of the ISPs will no longer be available because the switch that is connected to it will be down.

For example, If FGT\_A loses power, HA failover will occur and FGT\_B will become the primary unit. Its connection to internal2 on HD\_SW1 will also be down, so it will be unable to connect to ISP 1. Its SD-WAN SLAs will be broken, and traffic will only be routed through ISP 2.



A link on a hardware switch cannot be monitored in HA monitor, so it is impossible to perform link failure when a port in either of the hardware switches fails. Performing a link failure is unnecessary in this configuration though, because any link failure on the hardware switch will be experienced by both cluster members. SD-WAN SLA health checks should be used to monitor the health of each ISP.

## Failure on a hardware switch or ISP router

If a hardware switch or switch interface is down, or the ISP router is down, the SD-WAN can detect the broken SLA and continue routing to the other ISP.


For example, if FGT\_A is the primary unit, and ISP 2 Router becomes unreachable, the SLA health checks on SD-WAN will detect the broken SLA and cause traffic to stop routing to ISP 2.

## Configuration

### To configure the HA A-P cluster with internal hardware switches:

1. Configure two FortiGates with internal switches in an A-P HA cluster (follow the steps in [HA active-passive cluster setup on page 2352](#)), starting by connecting the heartbeat interface.
2. When the HA cluster is up, connect to the primary FortiGate's GUI.
3. Remove the existing interface members from the default hardware switch:
  - a. Go to *Network > Interfaces*.
  - b. In the *LAN* section, double-click the *internal* interface to edit it.
  - c. In *Interface Members*, remove all of the interfaces




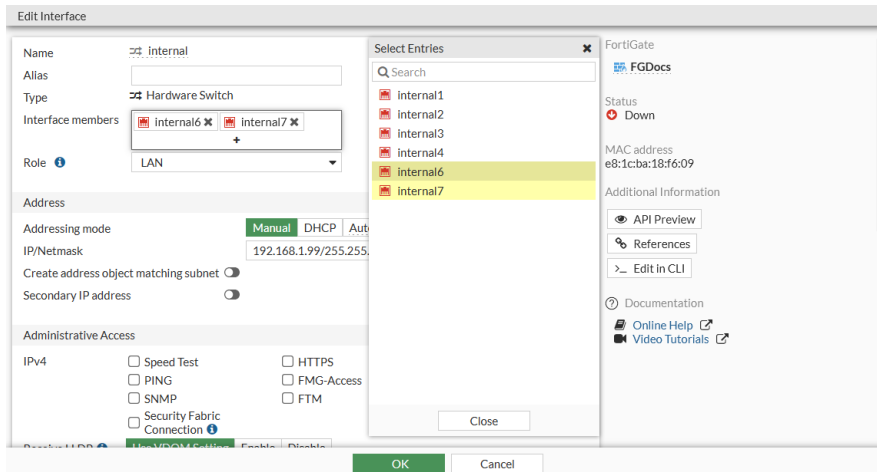

d. Click **OK**.

4. Configure the hardware switch interfaces for the two ISPs:

- a. Go to *Network > Interfaces* and click *Create New > Interface*.
- b. Enter a name (*HD\_SW1*).
- c. Set *Type* to *Hardware Switch*.
- d. In *Interface Members*, add two interfaces (*internal1* and *internal2*).
- e. Set *IP/Netmask* to 192.168.1.2/24.
- f. Configure the remaining settings as needed.

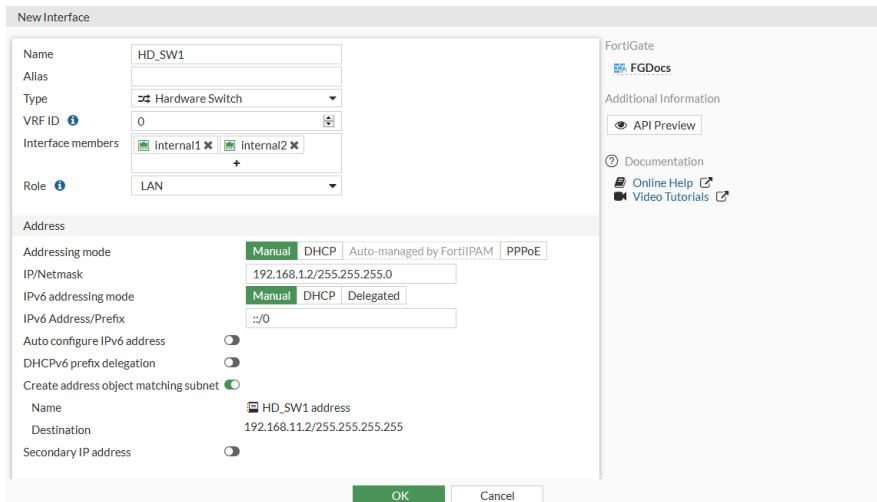

g. Click **OK**.

h. Repeat these steps to create a second hardware switch interface (*HD\_SW2*) with two interface members

(*internal3* and *internal4*) and *IP/Netmask* set to *192.168.3.2/24*.

### To connect the devices as shown in the topology:


1. Connect the incoming interface to the internal switch on both FortiGates.
2. On FGT\_A, connect internal1 of HD\_SW1 to ISP 1 Router.
3. On FGT\_B, connect internal3 of HD\_SW2 to ISP 2 Router.
4. For HD\_SW1, connect FGT\_A internal2 directly to FGT\_B internal2.
5. For HD\_SW2, connect FGT\_A internal4 directly to FGT\_B internal4.

### To configure SD-WAN:



The primary FortiGate makes all the SD-WAN decisions.

1. On the primary FortiGate, go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
2. In the *Interface* dropdown, select *HD\_SW1*.
3. Leave *SD-WAN Zone* set to *virtual-wan-link*.
4. Enter the *Gateway* address *192.168.1.1*.
5. Click *OK*.
6. Repeat these steps to add the second interface (*HD\_SW2*) with the gateway *192.168.3.1*.
7. Click *Apply*.

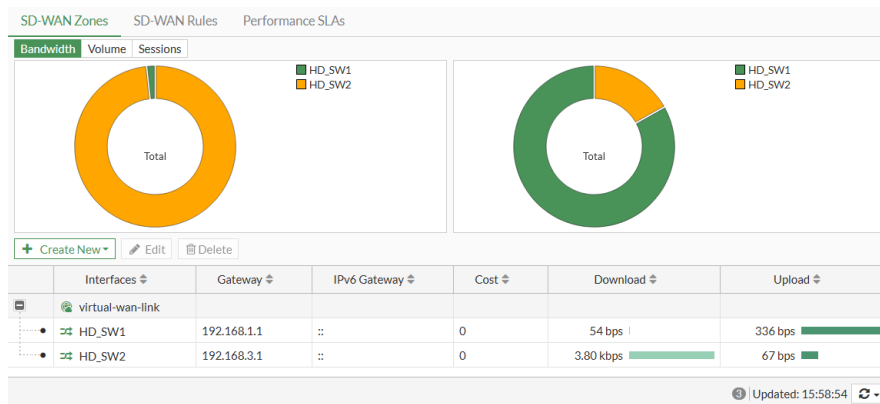


8. Create a health check:
  - a. Go to *Network > SD-WAN*, select the *Performance SLA* tab, and click *Create New*.
  - b. Set *Name* to *GW\_HC*.
  - c. Set *Protocol* to *Ping* and *Servers* to *8.8.8.8*.
  - d. Set *Participants* to *All SD-WAN Members*.
  - e. Enable *SLA Target* and leave the default values.
  - f. Click *OK*.
9. Create SD-WAN rules as needed. The SLA health check can be used to determine when the ISP connections are in or out of SLA, and to failover accordingly.

## SD-WAN configuration portability

When configuring SD-WAN, adding interfaces to members is optional.

This allows the SD-WAN to be configured without associating any interfaces to SD-WAN members. It also allows a configuration to be copied directly from one device to another, without requiring the devices to have interfaces with the same names.

After the configuration is created, add interfaces to the members make it functional.

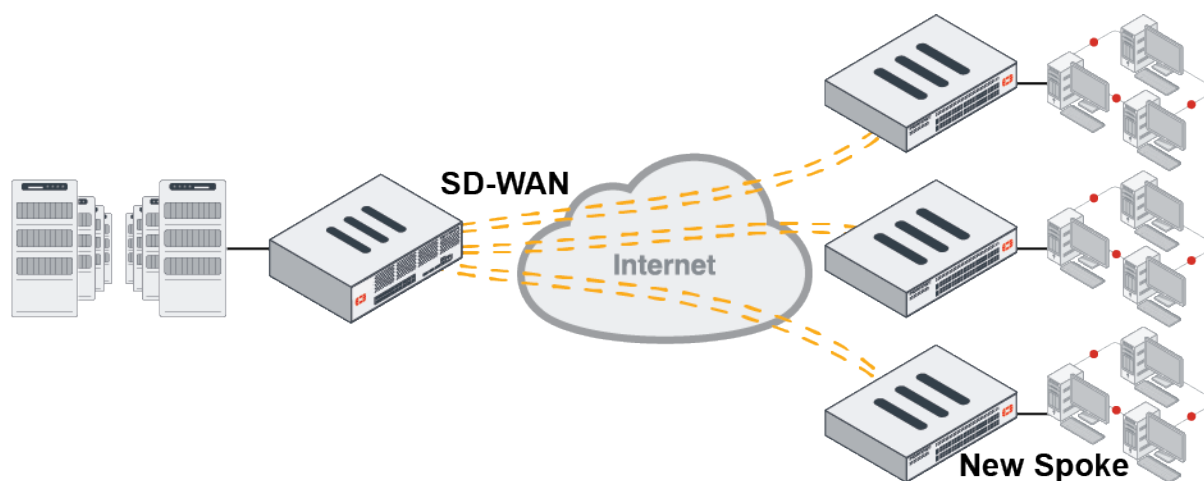

## Example 1

In this example, we create a template with two SD-WAN members configured without assigned interfaces that are used in a performance SLA and SD-WAN rule. The template can be used to configure new devices, as in [Example 2 on page 849](#). Interfaces are then assigned to the members, and the configuration becomes active.

### To create the SD-WAN members in the GUI:

1. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
2. Leave all the settings set to their default values and click *OK*.

3. Repeat the above steps to create a second member.  
The empty members are listed on the *SD-WAN Zones* tab.

	Interfaces	Gateway	IPv6 Gateway	Cost	Download	Upload
virtual-wan-link						
Member 1		0.0.0.0	::	0		
Member 2		0.0.0.0	::	0		

Updated: 16:08:17

The members are disabled until interfaces are configured, but can still be used in performance SLAs and SD-WAN rules.

### To create a performance SLA in the GUI:

1. Go to *Network > SD-WAN* and select the *Performance SLAs* tab.
2. Click *Create New*.

### 3. Configure the performance SLA, specifying the empty members as participants.

### 4. Click OK.

## To create an SD-WAN rule in the GUI:

1. Go to **Network > SD-WAN**, select the **SD-WAN Rules** tab, and click **Create New**.
2. Configure the rule, adding both members to the **Interface preference** field:

	Packet Loss	Latency	Jitter
office	0.00%	300.00ms	200.00ms
Member 1	?	?	?
Member 2	?	?	?

### 3. Click OK.

## To assign interfaces to the SD-WAN members in the GUI:

1. Go to **Network > SD-WAN** and select the **SD-WAN Zones** tab.
2. Edit the first member

### 3. Set *Interface* to an actual interface.

#### 4. Click **OK**.

#### 5. Repeat the above steps to assign an interface to the second member.

### To configure the SD-WAN in the CLI:

#### 1. Create SD-WAN members:

```
config system sdwan
    set status enable
    config members
        edit 1
        next
        edit 2
        next
    end
end
```

#### 2. Create a health check (performance SLA):

```
config system sdwan
    config health-check
        edit "office"
            set server "office365.com"
            set protocol http
            set sla-fail-log-period 300
            set sla-pass-log-period 300
            set members 2 1
            config sla
                edit 1
                    set latency-threshold 300
                    set jitter-threshold 200
                next
                edit 2
                    set link-cost-factor latency
                    set latency-threshold 20
                next
            end
        next
    end
end
```

#### 3. Create a service (rule):

```
config system sdwan
    config service
        edit 3
            set name "Office365"
```

```
        set mode sla
        set internet-service enable
        set internet-service-app-ctrl 33182
        config sla
            edit "office"
                set id 2
            next
        end
        set priority-members 1 2
    next
end
end
```

The SD-WAN configuration can now be used in as a template for new spokes, as in [Example 2 on page 849](#).

### To assign interfaces to the SD-WAN members in the CLI:

```
config system sdwan
    config members
        edit 1
            set interface "_OCVPN4-0.0"
        next
        edit 2
            set interface "_OCVPN4-0.1"
        next
    end
end
```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

## Example 2


In this example, the configuration from [Example 1](#) is copied onto a new FortiGate.

### Using the CLI console and the GUI

#### To copy the SD-WAN configuration from the original FortiGate:

1. Optionally, change the console screen paging setting. See [Screen paging on page 39](#) for details.
2. Open the CLI console.
3. If necessary, click *Clear console* to empty the console.
4. Enter the following command:  

```
show system sdwan
```
5. Either click *Download* and open the file in a text editor, or click *Copy to clipboard* and paste the content into a text editor.

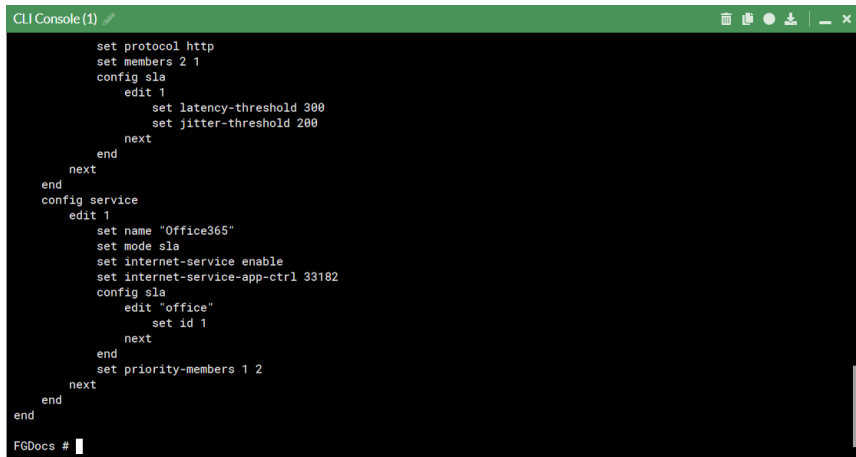

```

CLI Console(1)
set protocol http
set members 2 1
config sla
  edit 1
    set latency-threshold 300
    set jitter-threshold 200
  next
end
next
end
config service
  edit 1
    set name "Office365"
    set mode sla
    set internet-service enable
    set internet-service-app-ctrl 33182
    config sla
      edit "office"
        set id 1
      next
    end
    set priority-members 1 2
  next
end
end
FGDocs #

```

6. Edit the CLI configuration as necessary. For example, the first line that shows the `show` command should be deleted, and the default health checks can be removed.
7. If required, save the CLI configuration as a text file.

#### To paste the SD-WAN configuration onto a new FortiGate:

1. Copy the SD-WAN configuration from the text editor.
2. On the new FortiGate, open the CLI console.
3. Press `Ctrl + v` to paste the CLI commands.
4. In necessary, press `Enter` to apply the last `end` command.

The SD-WAN configuration is copied to the new FortiGate.

If the interfaces do not exist, the SD-WAN members are created without interfaces, and are disabled until interfaces are configured.

#### To assign interfaces to the SD-WAN members:

1. Go to *Network > SD-WAN* and select the *SD-WAN Zones* tab.
2. Edit the first member
3. Set *Interface* to an actual interface.
4. Click *OK*.
5. Repeat the above steps to assign an interface to the second member.

### Using a terminal emulator

The following instructions use [PuTTY](#). The steps may vary in other terminal emulators.

#### To copy the SD-WAN configuration from the original FortiGate:

1. Connect to the FortiGate. See [Connecting to the CLI on page 31](#) for details.
2. Enter the following command:  
`show system sdwan`
3. Select the output, press `Ctrl + c` to copy it, and then paste it into a text editor.
4. Edit the CLI configuration as necessary. For example, the default health checks can be removed.
5. If required, save the CLI configuration as a text file.



**To paste the SD-WAN configuration onto a new FortiGate:**

1. Connect to the new FortiGate. See [Connecting to the CLI on page 31](#) for details.
2. Copy the SD-WAN configuration from the text editor.
3. Right-click to paste the SD-WAN configuration.
4. In necessary, press *Enter* to apply the last `end` command.

The SD-WAN configuration is copied to the new FortiGate.

If the interfaces do not exist, the SD-WAN members are created without interfaces, and are disabled until interfaces are configured.

**To assign interfaces to the SD-WAN members in the CLI:**

```
config system sdwan
  config members
    edit 1
      set interface "_OCVPN4-0.0"
    next
    edit 2
      set interface "_OCVPN4-0.1"
    next
  end
end
```



If no SD-WAN zone is specified, members are added to the default *virtual-wan-link* zone.

---

## SD-WAN segmentation over a single overlay

SD-WAN, VPN, and BGP configurations support L3 VPN segmentation over a single overlay. In these configurations, a hub and spoke SD-WAN deployment requires that branch sites, or spokes, are able to accommodate multiple companies or departments, and each company's subnet is separated by a different VRF. A subnet on one VRF cannot communicate with a subnet on another VRF between different branches, but can communicate with the same VRF.

### SD-WAN options

#### VRF-aware SD-WAN health checks

SD-WAN on the originating spoke can tag the health check probes with the correct VRF when transmitting to a multi-VRF tunnel. The hub can then forward the probes to the correct health check server in the same VRF as the hub.

```
config system sdwan
  config health-check
    edit <name>
      set vrf <vrf id>
      set source <address>
    next
  end
end
```

vrf <vrf id>	Virtual Routing Forwarding ID.
source <address>	Source IP address used in the health-check packet to the server.

## Overlay stickiness

When a hub has multiple overlays, traffic received on one overlay should egress on the same overlay when possible. The `service-sla-tie-break` option ensures overlay stickiness. In SD-WAN service rules, options are available to ensure that traffic received in a zone stays in that zone.

```
config system sdwan
    config zone
        edit <name>
            set service-sla-tie-break input-device
        next
    end
    config service
        edit <id>
            set input-zone <zone>
            set tie-break input-device
        next
    end
end
```

service-sla-tie-break input-device	Members that meet the SLA are selected by matching the input device.
input-zone <zone>	Source input-zone name.
tie-break input-device	Members that meet the SLA are selected by matching the input device.

## IPsec options

### Configurable rate limit for shortcut offers sent by the hub

By default, the hub sends a shortcut offer to a spoke every five seconds. If the hub continues to send offers that keep failing, and there are a large number of spokes, this can cause a high load on the hub. This setting makes the interval between shortcut offers configurable.

```
config vpn ipsec phase1-interface
    edit <name>
        set auto-discovery-offer-interval <interval>
    next
end
```

auto-discovery-offer- interval <interval>	Interval between shortcut offer messages, in seconds (1 - 300, default = 5).
--	--

## Segmentation over a single overlay

Segmentation requires that VRF info is encapsulated within the IPsec VPN tunnel. This setting enables multi-VRF IPSEC tunnels.

```

config vpn ipsec phase1-interface
    edit <name>
        set encapsulation vpn-id-ipip
    next
end

```

encapsulation vpn-id-ipip    VPN ID with IPIP encapsulation.

## VPN configuration for BGP

The role of a VRF can be specified, along with other VRF details. Up to 252 VRFs can be configured per VDOM for any device.

```

config router bgp
    config vrf
        edit <vrf>
            set role {standalone | ce | pe}
            set rd <string>
            set export-rt <route_target>
            set import-rt <route_target>
            set import-route-map <route_map>
            config leak-target
                edit <vrf>
                    set route-map <route-map>
                    set interface <interface>
                next
            end
        next
    end
end

```

role {standalone   ce   pe}	VRF role: standalone, customer edge (CE), or provider edge (PE).
rd <string>	Route Distinguisher: AA AA:NN. This option is only available when the role is CE.
export-rt <route_target>	List of export route target. This option is only available when the role is CE.
import-rt <route_target>	List of import route target. This option is only available when the role is CE.
import-route-map <route_map>	Import route map. This option is only available when the role is CE.
route-map <route-map>	Route map of VRF leaking.
interface <interface>	Interface that is used to leak routes to the target VRF.



In FortiOS 7.0, config vrf was config vrf-leak, and config leak-target was config target.

## Display BGP routes by VRF and neighbor


```
# diagnose ip router bgp set-filter vrf <vrf>
# diagnose ip router bgp set-filter neighbor <neighbor address>
# diagnose ip router bgp set-filter reset
# execute router clear bgp vpnv4 unicast soft {in | out}
# get router info filter show
# get router info filter vrf {vrf | all}
```

## Examples

In example 1, multiple companies (or departments of a company) share the ADVPN. Company A and company B each have two branches in two different locations. Company A's branches (A-1 and A-2) can talk to each other using the VPN shortcut, but not to company B's branches (B-1 and B-2). Likewise, company B's branches can talk to each other using the VPN shortcut, but not to company A's branches. Traffic can share the tunnels and shortcuts, but cannot be mixed up.

[Example 2](#) shows that performance SLA health checks can be sent from a spoke's VRF to the loopback on the hub that is in the same VRF.

[Example 3](#) shows that when traffic is ingress on the hub on one overlay, it will preferably egress on the same overlay.

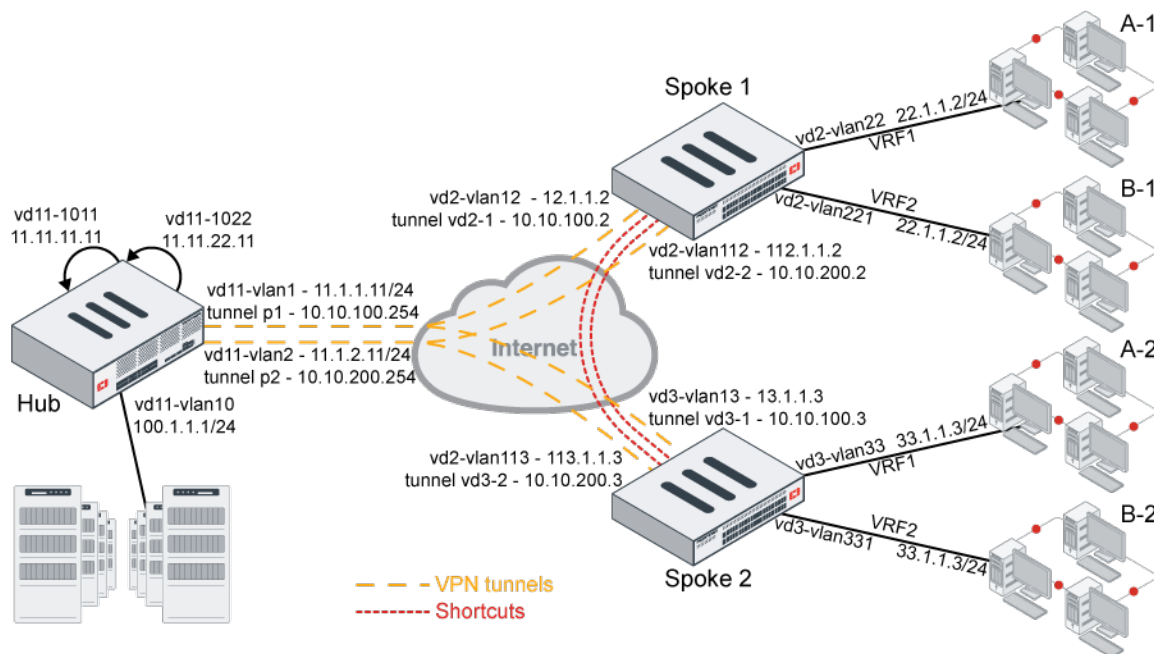

### Example 1

In this example, two spokes each have two tunnels to the hub.

- Each spoke has two VRFs behind it that can use the same IP address or subnets.
- The computers in VRF1 behind spoke 1 can talk to the computers in VRF1 behind spoke 2, but not to any of the computers in the VRF2s behind either spoke.
- The computers in VRF2 behind spoke 1 can talk to the computers in VRF2 behind spoke 2, but not to any of the computers in the VRF1s behind either spoke.

**To configure the hub:**

```
config router bgp
  set as 65505
  set router-id 11.11.11.11
  set ibgp-multipath enable
  set additional-path enable
  set additional-path-vpnv4 enable
  set cluster-id 11.12.13.14
  set additional-path-select 3
  config neighbor-group
    edit "gr1"
      set capability-graceful-restart enable
      set capability-default-originate enable
      set next-hop-self-rr enable
      set soft-reconfiguration-vpnv4 enable
      set remote-as 65505
      set additional-path both
      set additional-path-vpnv4 both
      set adv-additional-path 3
      set route-reflector-client enable
      set route-reflector-client-vpnv4 enable
    next
    edit "gr2"
      set capability-graceful-restart enable
      set capability-default-originate enable
      set next-hop-self-rr enable
      set soft-reconfiguration-vpnv4 enable
      set remote-as 65505
      set additional-path both
      set additional-path-vpnv4 both
      set adv-additional-path 3
      set route-reflector-client enable
      set route-reflector-client-vpnv4 enable
    next
  end
  config neighbor-range
    edit 1
      set prefix 10.10.100.0 255.255.255.0
      set neighbor-group "gr1"
    next
    edit 2
      set prefix 10.10.200.0 255.255.255.0
      set neighbor-group "gr2"
    next
  end
  config network
    edit 12
      set prefix 11.11.11.11 255.255.255.255
    next
    edit 22
      set prefix 11.11.22.11 255.255.255.255
    next
    edit 10
      set prefix 100.1.1.0 255.255.255.0
    next
```

```
edit 33
    set prefix 11.1.1.0 255.255.255.0
next
end
config vrf
    edit "0"
        set role pe
    next
    edit "1"
        set role ce
        set rd "1:1"
        set export-rt "1:1"
        set import-rt "1:1"
    next
    edit "2"
        set role ce
        set rd "2:1"
        set export-rt "2:1"
        set import-rt "2:1"
    next
end
end
config vpn ipsec phase1-interface
    edit "p1"
        set type dynamic
        set interface "vd11-vlan1"
        set peertype any
        set net-device disable
        set proposal aes128-sha1
        set add-route disable
        set dpd on-idle
        set dhgrp 5
        set auto-discovery-sender enable
        set auto-discovery-offer-interval 10
        set encapsulation vpn-id-ipip
        set psksecret *****
        set dpd-retryinterval 60
    next
    edit "p2"
        set type dynamic
        set interface "vd11-vlan2"
        set peertype any
        set net-device disable
        set proposal aes128-sha1
        set add-route disable
        set dpd on-idle
        set dhgrp 5
        set auto-discovery-sender enable
        set auto-discovery-offer-interval 10
        set encapsulation vpn-id-ipip
        set psksecret *****
        set dpd-retryinterval 60
    next
end
```

```
config vpn ipsec phase2-interface
  edit "p1"
    set phase1name "p1"
    set proposal aes128-sha1
    set dhgrp 5
  next
  edit "p2"
    set phase1name "p2"
    set proposal aes128-sha1
    set dhgrp 5
  next
end
```

**To configure a spoke:**

```
config router bgp
  set as 65505
  set router-id 2.2.2.2
  set ebgp-multipath enable
  set ibgp-multipath enable
  set network-import-check disable
  set additional-path enable
  set additional-path6 enable
  set additional-path-vpnv4 enable
  set recursive-next-hop enable
  set graceful-restart enable
  set additional-path-select 4
config neighbor
  edit "10.10.100.254"
    set capability-dynamic enable
    set capability-graceful-restart-vpnv4 enable
    set soft-reconfiguration enable
    set soft-reconfiguration-vpnv4 enable
    set remote-as 65505
    set additional-path both
    set additional-path-vpnv4 both
    set adv-additional-path 3
  next
  edit "10.10.200.254"
    set capability-dynamic enable
    set capability-graceful-restart-vpnv4 enable
    set soft-reconfiguration enable
    set soft-reconfiguration-vpnv4 enable
    set remote-as 65505
    set additional-path both
    set additional-path-vpnv4 both
    set adv-additional-path 3
  next
end
config network
  edit 3
    set prefix 22.1.1.0 255.255.255.0
  next
  edit 4
    set prefix 12.12.12.0 255.255.255.0
  next
```

```
end
config vrf
    edit "0"
        set role pe
    next
    edit "1"
        set role ce
        set rd "1:1"
        set export-rt "1:1"
        set import-rt "1:1"
    next
    edit "2"
        set role ce
        set rd "2:1"
        set export-rt "2:1"
        set import-rt "2:1"
    next
end
end

config vpn ipsec phase1-interface
    edit "vd2-1"
        set interface "vd2-vlan12"
        set peertype any
        set net-device enable
        set proposal aes128-sha1
        set add-route disable
        set dhgrp 5
        set idle-timeout enable
        set idle-timeoutinterval 5
        set auto-discovery-receiver enable
        set encapsulation vpn-id-ipip
        set remote-gw 11.1.1.11
        set psksecret *****
    next
    edit "vd2-2"
        set interface "vd2-vlan112"
        set peertype any
        set net-device enable
        set proposal aes128-sha1
        set add-route disable
        set dhgrp 5
        set auto-discovery-receiver enable
        set encapsulation vpn-id-ipip
        set remote-gw 11.1.2.11
        set psksecret *****
    next
end

config vpn ipsec phase2-interface
    edit "vd2-1"
        set phase1name "vd2-1"
        set proposal aes128-sha1
        set dhgrp 5
        set auto-negotiate enable
    next
    edit "vd2-2"
```



```
        set phasename "vd2-2"
        set proposal aes128-sha1
        set dhgrp 5
        set auto-negotiate enable
    next
end

config system sdwan
    set status enable
    config zone
        edit "virtual-wan-link"
        next
        edit "SASE"
        next
        edit "zon2"
        next
    end
    config members
        edit 1
            set interface "vd2-1"
            set cost 10
        next
        edit 2
            set interface "vd2-2"
            set cost 20
        next
    end
    config health-check
        edit "ping"
            set server "11.11.11.11"
            set members 1 2
            config sla
                edit 1
                    set latency-threshold 200
                    set jitter-threshold 50
                next
            end
        next
        edit "1"
            set server "22.1.1.2"
            set vrf 1
            set members 1 2
        next
    end
    config service
        edit 2
            set mode sla
            set dst "100-200"
            config sla
                edit "ping"
                    set id 1
                next
            end
            set priority-members 2
            set use-shortcut-sla disable
        next
        edit 1
```

```

        set name "test-tag"
        set mode sla
        set dst "001-100"
        config sla
            edit "ping"
                set id 1
            next
        end
        set priority-members 1 2
    next
end
end

```

### To check the spoke 1 routes:

```

# get router info routing-table bgp
Routing table for VRF=0
B*      0.0.0.0/0 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11 vrf 0),
04:42:57, [1/0]
                [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11 vrf 0),
04:42:57, [1/0]
B      1.1.1.1/32 [200/0] via 11.1.1.1 [2] (recursive via 12.1.1.1, vd2-vlan12), 04:42:57,
[1/0]
B      1.222.222.222/32 [200/0] via 11.1.1.1 [2] (recursive via 12.1.1.1, vd2-vlan12),
04:42:57, [1/0]
B      11.11.11.11/32 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11 vrf
0), 04:42:57, [1/0]
                [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11 vrf
0), 04:42:57, [1/0]
B      33.1.1.0/24 [200/0] via 10.10.100.254 [2] (recursive via vd2-1 tunnel 11.1.1.11 vrf
0), 04:42:57, [1/0]
                [200/0] via 10.10.200.254 [2] (recursive via vd2-2 tunnel 11.1.2.11 vrf
0), 04:42:57, [1/0]
B      100.1.1.0/24 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11 vrf 0),
04:42:57, [1/0]
                [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11 vrf 0),
04:42:57, [1/0]

Routing table for VRF=1
B V      33.1.1.0/24 [200/0] via 10.10.100.3 [2] (recursive via vd2-1 tunnel 11.1.1.11 vrf
0), 04:42:57, [1/0]
                [200/0] via 10.10.200.3 [2] (recursive is directly connected, vd2-2_0),
04:42:57, [1/0]

Routing table for VRF=2
B V      33.1.1.0/24 [200/0] via 10.10.100.3 [2] (recursive via vd2-1 tunnel 11.1.1.11 vrf
0), 04:42:56, [1/0]
                [200/0] via 10.10.200.3 [2] (recursive is directly connected, vd2-2_0),
04:42:56, [1/0]

VRF1 routes:

# get router info filter vrf 1
# get router info routing-table bgp
Routing table for VRF=1
B V      33.1.1.0/24 [200/0] via 10.10.100.3 [2] (recursive via vd2-1 tunnel 11.1.1.11 vrf
0), 04:44:11, [1/0]

```

```
[200/0] via 10.10.200.3 [2] (recursive is directly connected, vd2-2_0),
04:44:11, [1/0]
```

### To test the configuration on shortcut 1:

1. From VRF1 of spoke 1 ping VRF1 of spoke 2 and from VRF2 of spoke 1 ping VRF2 spoke 2. Both VRF1 and VRF2 source and destination IP addresses are the same, so you can see how the traffic is isolated
2. Check sessions on spoke 1:

The output `vd=<vdom ID>:<VRF ID>` indicates that sessions are created in and stay in the corresponding VRFs.

- User at 22.1.1.22 in VRF1 on spoke 1 pings 33.1.1.33 in VRF1 on spoke2.

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=21 expire=42 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=420/5/1 reply=420/5/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=89->131/131->89
gwy=10.10.200.3/22.1.1.22
hook=pre dir=org act=noop 22.1.1.22:48417->33.1.1.33:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.33:48417->22.1.1.22:0(0.0.0.0:0)
src_mac=02:4c:a5:fc:6a:7f
misc=0 policy_id=1 pol_uuid_idx=566 auth_info=0 chk_client_info=0 vd=1:1
serial=00092eee tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=1
rpd_b_link_id=ff000001 ngfwid=n/a
npu_state=0x5040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
```

- User at 22.1.1.22 in VRF2 on spoke 1 pings 33.1.1.33 in VRF2 on spoke2:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=4 expire=56 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=168/2/1 reply=168/2/1 tuples=2
tx speed(Bps/kbps): 39/0 rx speed(Bps/kbps): 39/0
origin->sink: org pre->post, reply pre->post dev=113->131/131->113
gwy=10.10.200.3/22.1.1.22
hook=pre dir=org act=noop 22.1.1.22:55841->33.1.1.33:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.33:55841->22.1.1.22:0(0.0.0.0:0)
src_mac=02:4c:a5:fc:6a:7f
misc=0 policy_id=1 pol_uuid_idx=566 auth_info=0 chk_client_info=0 vd=1:2
serial=00092f77 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=1
rpd_b_link_id=ff000001 ngfwid=n/a
npu_state=0x5040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
```

### 3. Check sessions on spoke 2:

The output `vd=<vdom ID>:<VRF ID>` indicates that sessions are created in and stay in the corresponding VRFs.

- User at 22.1.1.22 in VRF1 on spoke 1 pings 33.1.1.33 in VRF1 on spoke 2:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=11 expire=49 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=168/2/1 reply=168/2/1 tuples=2
tx speed(Bps/kbps): 14/0 rx speed(Bps/kbps): 14/0
origin->sink: org pre->post, reply pre->post dev=132->92/92->132
gwy=33.1.1.33/10.10.200.2
hook=pre dir=org act=noop 22.1.1.22:27733->33.1.1.33:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.33:27733->22.1.1.22:0(0.0.0.0:0)
misc=0 policy_id=1 pol_uuid_idx=630 auth_info=0 chk_client_info=0 vd=6:1
serial=000a29fd tos=ff/ff app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x4000001 no_offload
npu info: flag=0x00/0x82, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: disabled-by-policy
```

- User at 22.1.1.22 in VRF2 on spoke 1 pings 33.1.1.33 in VRF2 on spoke 2:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=17 expire=43 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=168/2/1 reply=168/2/1 tuples=2
tx speed(Bps/kbps): 9/0 rx speed(Bps/kbps): 9/0
origin->sink: org pre->post, reply pre->post dev=132->115/115->132
gwy=33.1.1.33/10.10.200.2
hook=pre dir=org act=noop 22.1.1.22:24917->33.1.1.33:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.33:24917->22.1.1.22:0(0.0.0.0:0)
dst_mac=02:4c:a5:fc:6a:7f
misc=0 policy_id=1 pol_uuid_idx=630 auth_info=0 chk_client_info=0 vd=6:2
serial=000a29ca tos=ff/ff app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x4000001 no_offload
npu info: flag=0x00/0x82, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: disabled-by-policy
```

**To test the configuration on shortcut 2:**

1. From VRF1 of spoke 1 ping VRF1 of spoke 2 and from VRF2 of spoke 1 ping VRF2 spoke 2. Both VRF1 and VRF2 source and destination IP addresses are the same, so you can see how the traffic is isolated
2. Check sessions on spoke 1:

The output `vd=<vdom ID>:<VRF ID>` indicates that sessions are created in and stay in the corresponding VRFs.

- User at 22.1.1.22 in VRF1 on spoke 1 pings 33.1.1.133 in VRF1 on spoke 2:

```
# diagnose sys session listsession info: proto=1 proto_state=00 duration=17 expire=45
timeout=0 flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=336/4/1 reply=336/4/1 tuples=2
tx speed(Bps/kbps): 19/0 rx speed(Bps/kbps): 19/0
origin->sink: org pre->post, reply pre->post dev=89->137/137->89
gwy=10.10.200.3/22.1.1.22
hook=pre dir=org act=noop 22.1.1.22:25968->33.1.1.133:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.133:25968->22.1.1.22:0(0.0.0.0:0)
src_mac=02:4c:a5:fc:6a:7f
misc=0 policy_id=1 pol_uuid_idx=566 auth_info=0 chk_client_info=0 vd=1:1
serial=000aa475 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=2
rpdb_link_id=ff000002 ngfwid=n/a
npu_state=0x5040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
```

- User at 22.1.1.22 in VRF2 on spoke 1 pings 33.1.1.133 in VRF2 on spoke 2:

```
# diagnose sys session listsession info: proto=1 proto_state=00 duration=8 expire=53
timeout=0 flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=252/3/1 reply=252/3/1 tuples=2
tx speed(Bps/kbps): 30/0 rx speed(Bps/kbps): 30/0
origin->sink: org pre->post, reply pre->post dev=113->137/137->113
gwy=10.10.200.3/22.1.1.22
hook=pre dir=org act=noop 22.1.1.22:28528->33.1.1.133:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.133:28528->22.1.1.22:0(0.0.0.0:0)
src_mac=02:4c:a5:fc:6a:7f
misc=0 policy_id=1 pol_uuid_idx=566 auth_info=0 chk_client_info=0 vd=1:2
serial=000aa49f tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=2
rpdb_link_id=ff000002 ngfwid=n/a
npu_state=0x5040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
```

3. Check sessions on spoke 2:

The output `vd=<vdom ID>:<VRF ID>` indicates that sessions are created in and stay in the corresponding VRFs.

- User at 22.1.1.22 in VRF1 on spoke 1 pings 33.1.1.133 in VRF1 on spoke 2:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=24 expire=38 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=336/4/1 reply=336/4/1 tuples=2
tx speed(Bps/kbps): 13/0 rx speed(Bps/kbps): 13/0
origin->sink: org pre->post, reply pre->post dev=138->92/92->138
gwy=33.1.1.133/10.10.200.2
hook=pre dir=org act=noop 22.1.1.22:25968->33.1.1.133:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.133:25968->22.1.1.22:0(0.0.0.0:0)
misc=0 policy_id=1 pol_uuid_idx=630 auth_info=0 chk_client_info=0 vd=6:1
serial=000aa476 tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000001 no_offload
npu info: flag=0x00/0x82, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: disabled-by-policy
```

- User at 22.1.1.22 in VRF2 on spoke 1 pings 33.1.1.133 in VRF2 on spoke2:

```
# diagnose sys session list
session info: proto=1 proto_state=00 duration=15 expire=46 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=252/3/1 reply=252/3/1 tuples=2
tx speed(Bps/kbps): 16/0 rx speed(Bps/kbps): 16/0
origin->sink: org pre->post, reply pre->post dev=138->115/115->138
gwy=33.1.1.133/10.10.200.2
hook=pre dir=org act=noop 22.1.1.22:28528->33.1.1.133:8(0.0.0.0:0)
hook=post dir=reply act=noop 33.1.1.133:28528->22.1.1.22:0(0.0.0.0:0)
misc=0 policy_id=1 pol_uuid_idx=630 auth_info=0 chk_client_info=0 vd=6:2
serial=000aa4a0 tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000001 no_offload
npu info: flag=0x00/0x82, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: disabled-by-policy
```

## Example 2

In this example, SLA health checks are sent from a spoke's VRF to the loopback on the hub that is in the same VRF.

**To configure the health check:**

```

config system sdwan
  config health-check
    edit "1"
      set server "11.11.22.11"
      set vrf 1
      set source 22.1.1.2
      set members 1 2
      config sla
        edit 1
          set latency-threshold 200
          set jitter-threshold 50
        next
      end
    next
  end
end

```

**To check the health check status:**

```

# diagnose sys sdwan health-check status 1
Health Check(1):
Seq(1 vd2-1): state(alive), packet-loss(0.000%) latency(0.023), jitter(0.002), mos(4.404),
bandwidth-up(0), bandwidth-dw(0), bandwidth-bi(0) sla_map=0x1
Seq(2 vd2-2): state(alive), packet-loss(0.000%) latency(0.022), jitter(0.002), mos(4.404),
bandwidth-up(0), bandwidth-dw(0), bandwidth-bi(0) sla_map=0x1

```

**Example 3**

In this example, when traffic from spoke 1 arrives at the hub on tunnel 1, it will egress the hub on tunnel 1 to go to other spokes. If traffic arrives on tunnel 2, it will egress on tunnel 2, and not tunnel 1.

**To configure SD-WAN on the hub:**

```

config system sdwan
  set status enable
  config zone
    edit "virtual-wan-link"
      set service-sla-tie-break input-device
    next
  end
  config members
    edit 1
      set interface "p1"
    next
    edit 2
      set interface "p2"
    next
  end
  config health-check
    edit "1"
      set server "22.1.1.2"
      set members 1 2
      config sla

```

```

        edit 1
        next
    end
next
end
config service
    edit 1
        set mode sla
        set dst "all"
        config sla
            edit "1"
                set id 1
            next
        end
        set priority-members 1 2
        set tie-break input-device
    next
end
end
end

```

**To verify that traffic stays in the same overlay on ingress and egress on the hub:**

1. Confirm that the SD-WAN service rule has `Tie break` set to `input-device` so that, when SLAs are met on all of the members, traffic prefers to egress on the same member as the input device:

```
# diagnose sys sdwan service
```

```
Service(1): Address Mode(IPV4) flags=0x200 use-shortcut-sla
```

```
Tie break: input-device
```

```
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
```

```
Members(2):
```

```
1: Seq_num(1 p1), alive, sla(0x1), gid(0), cfg_order(0), local cost(0), selected
```

```
2: Seq_num(2 p2), alive, sla(0x1), gid(0), cfg_order(1), local cost(0), selected
```

```
Dst address(1):
```

```
0.0.0.0-255.255.255.255
```

2. Use `diagnose sniffer packet` commands to verify that traffic ingress and egress are on the same overlay.

## Matching BGP extended community route targets in route maps

BGP extended community route targets can be matched in route maps. This can be applied in a scenario where the BGP route reflector receives routes from many VRFs, and instead of reflecting all routes from all VRFs, users only want to reflect routes based on a specific extended community route target.

**To configure the extended community list:**

```

config router extcommunity-list
    edit <name>
        set type {standard | expanded}
        config rule
            edit <id>
                set action {deny | permit}
                set type {rt | soo}
                set match <extended_community_specifications>
            end
        end
    end
end

```



```

        set regexp <ordered_list_of_attributes>
    next
end
next
end

```

type {standard   expanded}	Set the extended community list type (standard or expanded).
action {deny   permit}	Deny or permit route-based operations based on the route's extended community attribute.
type {rt   soo}	Set the extended community type: <ul style="list-style-type: none"> <li>• rt: route target</li> <li>• soo: site of origin</li> </ul>
match <extended_community_specifications>	Set the extended community specifications for matching a reserved extended community (community number in AA:NN format; use quotation marks complex expressions, "123:234 345:456").
regexp <ordered_list_of_attributes>	Set the ordered list of extended community attributes as a regular expression.

### To configure the BGP extended community list in the route map:

```

config router route-map
    edit <name>
        config rule
            edit <id>
                set match-extcommunity <list>
                set match-extcommunity-exact {enable | disable}
            next
        end
    next
end

```


match-extcommunity <list>	Set the BGP extended community list to match to.
match-extcommunity-exact {enable   disable}	Enable/disable exact matching of extended communities.

## Example

In this example, multiple companies (or departments of a company) share the same hub and spoke VPN infrastructure. Company A and company B each have two branches in two different locations. The goal is for company A's branches (A-1 and A-2) to be able to communicate only with each other over VPN but not with company B's branches. Likewise, company B's branches (B-1 and B-2) can only communicate with each other over VPN but not with company A's. This is accomplished by placing each branch VLAN into their respective VRFs (VRF1 and VRF2), and encapsulating the VRF information within the VPN tunnel. The hub forms BGP peering with its neighbors, spoke 1 and spoke 2, over each IPsec overlay. The hub's BGP route reflector reflects the routes to the corresponding VRFs, allowing each spoke to form ADVPN shortcuts with the other spoke for each VRF.

However, in this scenario, we want A-1 and A-2 to use an ADVPN shortcut, but we do not want B-1 and B-2 to use ADVPN. A route map is configured on the hub to match the desired extended community route target number where only

this route target is permitted, and others are denied. This allows the hub's BGP route reflector to only reflect routes associated with VRF1, allowing the spokes to form an ADVPN shortcut for VRF1. Routes associated with VRF2 are not reflected, and each spoke must route traffic through the hub to reach VRF2 on the other spoke.

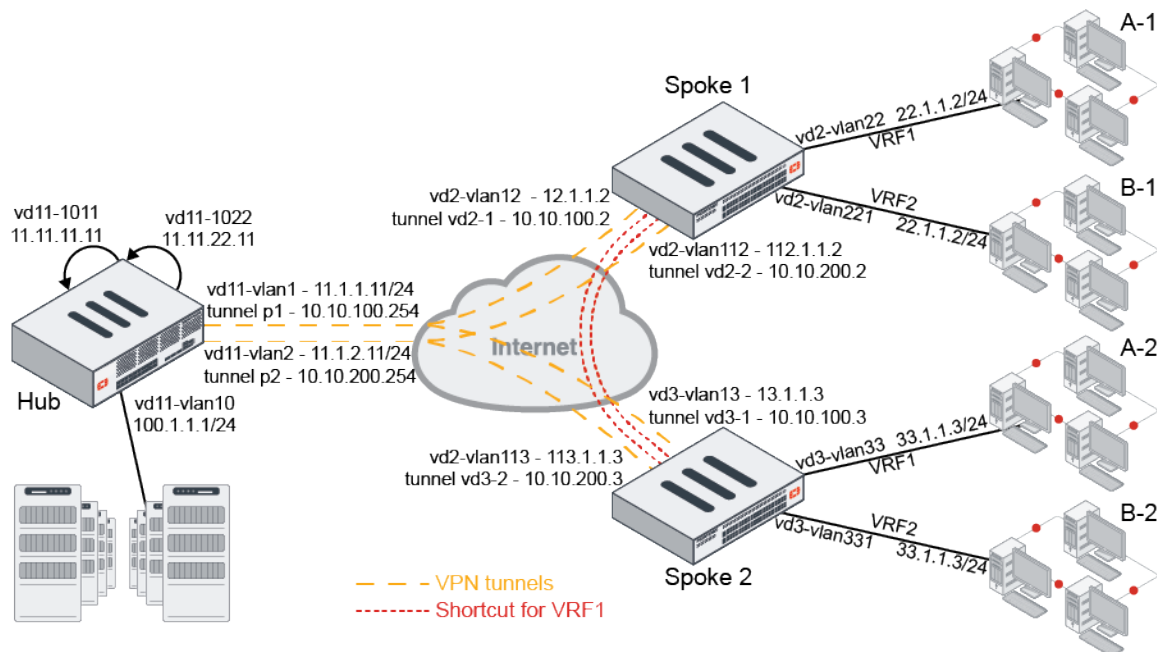

Configure the topology by following the instructions of [Example 1](#) in [SD-WAN segmentation over a single overlay on page 851](#). Note that when checking the spoke 1 routes in example 1, there is a VRF2 route:

```
Spoke 1 # get router info routing-table bgp
...
Routing table for VRF=2
B V    33.1.1.0/24 [200/0] via 10.10.100.3 [2] (recursive via vd2-1 tunnel 11.1.1.11),
00:00:20, [1/0]
                [200/0] via 10.10.200.3 [2] (recursive via vd2-2 tunnel 11.1.2.11),
00:00:20, [1/0]
```

The following procedure applies a route map on the hub's BGP configurations to limit route reflection to only routes matching the external community target of 1:1. This external community target corresponds to BGP paths for VRF1 learned from spoke 1 and spoke 2. The external community target of 2:1 corresponds to BGP paths for VRF2. By not explicitly permitting this target (2:1) in the community list and denying everything other than the permitted target (1:1) in the route map, the VRF2 BGP paths are essentially omitted from being reflected to the spokes.

### To configure BGP filtering for an extended community route target on the hub:

#### 1. Identify the external community target of VRF1 to be permitted:

```
# get router info bgp network 33.1.1.0/24
VRF 0 BGP routing table entry for 33.1.1.0/24
Paths: (2 available, best #2, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
    11.1.1.1
  Advertised to peer-groups:
    gr1 gr2
...
VRF 1 BGP routing table entry for 33.1.1.0/24
```

```

Paths: (2 available, best #2, table Default-IP-Routing-Table)
Not advertised to any peer
Original VRF 0 external duplicated
Local, (Received from a RR-client)
  0.0.0.0 from 10.10.100.3 (3.3.3.3)
    Origin IGP metric 0, localpref 100, valid, internal, best
    Extended Community: RT:1:1
    Receive Path ID: 1
    Advertised Path ID: 1
    Last update: Wed Aug 17 10:31:02 2022
Original VRF 0 external duplicated
Local, (Received from a RR-client)
  0.0.0.0 from 10.10.200.3 (3.3.3.3)
    Origin IGP metric 0, localpref 100, valid, internal, best
    Extended Community: RT:1:1
    Receive Path ID: 1
    Advertised Path ID: 2
    Last update: Wed Aug 17 10:31:02 2022
VRF 2 BGP routing table entry for 33.1.1.0/24
Paths: (2 available, best #2, table Default-IP-Routing-Table)
Not advertised to any peer
Original VRF 0 external duplicated
Local, (Received from a RR-client)
  0.0.0.0 from 10.10.100.3 (3.3.3.3)
    Origin IGP metric 0, localpref 100, valid, internal, best
    Extended Community: RT:2:1
    Receive Path ID: 1
    Advertised Path ID: 1
    Last update: Wed Aug 17 10:31:02 2022
Original VRF 0 external duplicated
Local, (Received from a RR-client)
  0.0.0.0 from 10.10.200.3 (3.3.3.3)
    Origin IGP metric 0, localpref 100, valid, internal, best
    Extended Community: RT:2:1
    Receive Path ID: 1
    Advertised Path ID: 2
    Last update: Wed Aug 17 10:31:02 2022

```

## 2. Configure the extended community list:

```

config router extcommunity-list
  edit "extcomm1"
    config rule
      edit 1
        set action permit
        set match "1:1"
        set type rt
      next
    end
  next
end

```

## 3. Apply the extended community list to the route map:

```

config router route-map
  edit "rmp11"
    config rule

```

```

        edit 1
            set match-extcommunity "extcomm1"
        next
        edit 2
            set action deny
        next
    end
next
end

```

#### 4. Update the related BGP neighbor group settings:

```

config router bgp
    config neighbor-group
        edit "gr1"
            set route-map-out-vpn4 "rmp11"
        next
        edit "gr2"
            set route-map-out-vpn4 "rmp11"
        next
    end
end

```

#### 5. Refresh the routes:

```
# execute router clear bgp all vpnv4 unicast out
```

#### 6. Check the spoke 1 routes. Since the extended community route target is applied, the VFR2 route does not appear in the BGP routing table:

```

# get router info routing-table bgp
Routing table for VRF=0
B*      0.0.0.0/0 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11),
03:47:50, [1/0]
           [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11),
03:47:50, [1/0]
B       1.1.1.1/32 [200/0] via 11.1.1.1 [2] (recursive via 12.1.1.1, vd2-vlan12),
03:47:50, [1/0]
B       1.222.222.222/32 [200/0] via 11.1.1.1 [2] (recursive via 12.1.1.1, vd2-vlan12),
03:47:50, [1/0]
B       11.11.11.11/32 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11),
03:47:50, [1/0]
           [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11),
03:47:50, [1/0]
B       33.1.1.0/24 [200/0] via 10.10.100.254 [2] (recursive via vd2-1 tunnel
11.1.1.11), 03:47:21, [1/0]
           [200/0] via 10.10.200.254 [2] (recursive via vd2-2 tunnel
11.1.2.11), 03:47:21, [1/0]

Routing table for VRF=1
B V     11.11.22.11/32 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11),
03:47:50, [1/0]
           [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11),
03:47:50, [1/0]
B V     33.1.1.0/24 [200/0] via 10.10.100.3 [2] (recursive via vd2-1 tunnel 11.1.1.11),
03:47:21, [1/0]
           [200/0] via 10.10.200.3 [2] (recursive via vd2-2 tunnel 11.1.2.11),
03:47:21, [1/0]

```

```

B V      100.1.1.0/24 [200/0] via 10.10.100.254 (recursive via vd2-1 tunnel 11.1.1.11),
03:47:50, [1/0]
                                [200/0] via 10.10.200.254 (recursive via vd2-2 tunnel 11.1.2.11),
03:47:50, [1/0]

```

## Copying the DSCP value from the session original direction to its reply direction

In an SD-WAN scenario when DSCP tags are used to mark traffic from the spoke to the hub, it is sometimes desirable for the hub to mark the reply traffic with the same DSCP tags. The `diffserv-copy` setting in firewall policy configurations allows the DSCP tag to be copied to the reply direction.


```

config firewall policy
    edit <id>
        set diffserv-copy {enable | disable}
    next
end

```

### Example

The use cases in this example are for a hub and spoke SD-WAN deployment. Traffic from the spoke (either real traffic or SLA health check probes) can be marked with a certain DSCP tag when leaving the spoke. QoS may be applied by an upstream device based on the DSCP tag. When the traffic arrives on the hub, the hub may also want to mark the reply traffic to the spoke with the same DSCP tag. This would allow QoS to be applied to the traffic in the reply direction as well, which is traffic in the hub to spoke direction associated with the same session in the spoke to hub direction.

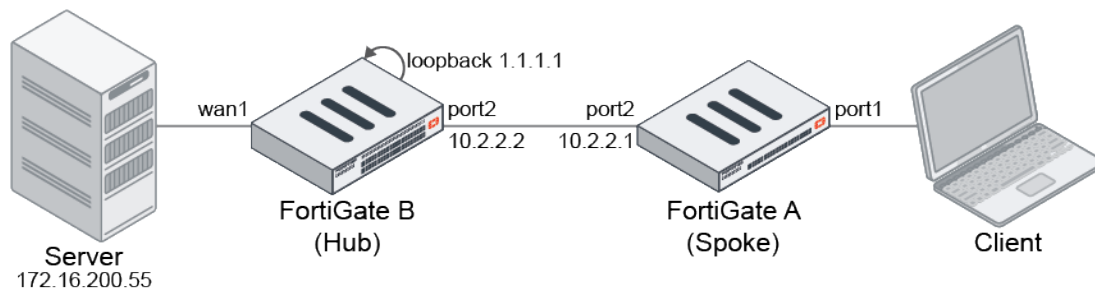

While this topology simplifies the SD-WAN deployment into a single hub and spoke, this feature applies to the following configurations:

- Multiple spokes (branch sites)
- One or more hubs (data center sites)
- Multiple overlays connecting spokes to hubs
- SD-WAN configured on spokes to pick the best overlay

### Use case 1: typical forwarding traffic

Traffic originates from the spoke and is destined for a server behind the hub. The spoke marks the traffic with a DSCP tag of 101010. This is done by enabling `diffserv-forward` on the spoke firewall policy. It can also be accomplished by enabling `dscp-forward` in an SD-WAN rule.

The hub allows the traffic in through a firewall policy. By enabling `diffserv-copy` on the firewall policy, it will mark the reply traffic on the corresponding sessions with the same DSCP tag in which it came.

**To configure the FortiGates:****1. Configure the firewall policy on the spoke (FortiGate A):**

```

config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "virtual-wan-link"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all6"
        set dstaddr6 "all6"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
        set diffserv-forward enable
        set diffservcode-forward 101010
    next
end

```

**2. Configure the firewall policy on the hub (FortiGate B):**

```

config firewall policy
    edit 3
        set srcintf "virtual-wan-link"
        set dstintf "wan1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
        set diffserv-copy enable
    next
end

```

**To test the configuration:**

1. Generate some forwarding traffic.
2. Verify that the session's `tos` value from the original direction is applied to the reply direction:

```

# diagnose sys session filter policy 3
# diagnose sys session filter dst 172.16.200.55
# diagnose sys session list

session info: proto=1 proto_state=00 duration=35 expire=59 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255

```

```

state=log may_dirty f00
statistic(bytes/packets/allow_err): org=3024/36/1 reply=3024/36/1 tuples=2
tx speed(Bps/kbps): 82/0 rx speed(Bps/kbps): 82/0
origin->sink: org pre->post, reply pre->post dev=20->17/17->20 gwy=172.16.200.55/10.2.2.1
hook=post dir=org act=snat 10.2.2.1:25290->172.16.200.55:8(172.16.200.2:25290)
hook=pre dir=reply act=dnat 172.16.200.55:25290->172.16.200.2:0(10.2.2.1:25290)
misc=0 policy_id=3 pol_uuid_idx=1097 auth_info=0 chk_client_info=0 vd=3
serial=0000a018 tos=6a/6a app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x4000001 no_offload
no_ofld_reason: disabled-by-policy
total session 1

```

## Use case 2: local-in traffic destined to a loopback interface

SLA health checks from the spoke are destined for a loopback interface on the hub. The health check is marked with a DSCP tag of 000001 by the spoke. When the hub receives the probes to its loopback, it will mark the replies with the same DSCP tags in which it came.

### To configure the FortiGates:

#### 1. Configure the health check on the spoke (FortiGate A):

```

config system sdwan
    config health-check
        edit "ping"
            set server "1.1.1.1"
            set diffservcode 000001
            set members 0
        next
    end
end

```

#### 2. Configure the loopback interface on the hub (FortiGate B):

```

config system interface
    edit "loopback"
        set vdom "vdom1"
        set ip 1.1.1.1 255.255.255.255
        set allowaccess ping https ssh http telnet
        set type loopback
        set role lan
        set snmp-index 35
    next
end

```

#### 3. Configure the firewall policy on the hub:

```

config firewall policy
    edit 1
        set srcintf "virtual-wan-link"
        set dstintf "loopback"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
    end
end

```

```

        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
        set diffserv-copy enable
    next
end

```

### To test the configuration:

1. Generate some local-in traffic.
2. Verify that the session's `tos` value from the original direction is applied to the reply direction:

```

# diagnose sys session list

session info: proto=1 proto_state=00 duration=1 expire=59 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=log local may_dirty
statistic(bytes/packets/allow_err): org=80/2/1 reply=80/2/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->in, reply out->post dev=20->42/42->20 gwy=1.1.1.1/0.0.0.0
hook=pre dir=org act=noop 10.2.2.1:15->1.1.1.1:8(0.0.0.0:0)
hook=post dir=reply act=noop 1.1.1.1:15->10.2.2.1:0(0.0.0.0:0)
misc=0 policy_id=1 pol_uuid_idx=0 auth_info=0 chk_client_info=0 vd=3
serial=0001a846 tos=41/41 app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason: local disabled-by-policy
total session 1

```



Capture packets can also be used verify that the DSCP value from the original direction is applied to the reply direction.


## SD-WAN cloud on-ramp

In this example, you configure a connection to a new cloud deployment that has some remote servers. SD-WAN is used to steer traffic through the required overlay tunnel.

The on-premise FortiGate has two internet connections, each with a single VPN connection. The two VPN gateways are configured on the cloud for redundancy, one terminating at the FortiGate-VM, and the other at the native AWS VPN Gateway.

This example uses AWS as the Infrastructure as a Service (IaaS) provider, but the same configuration can also apply to other services. A full mesh VPN setup is not shown, but can be added later if required.



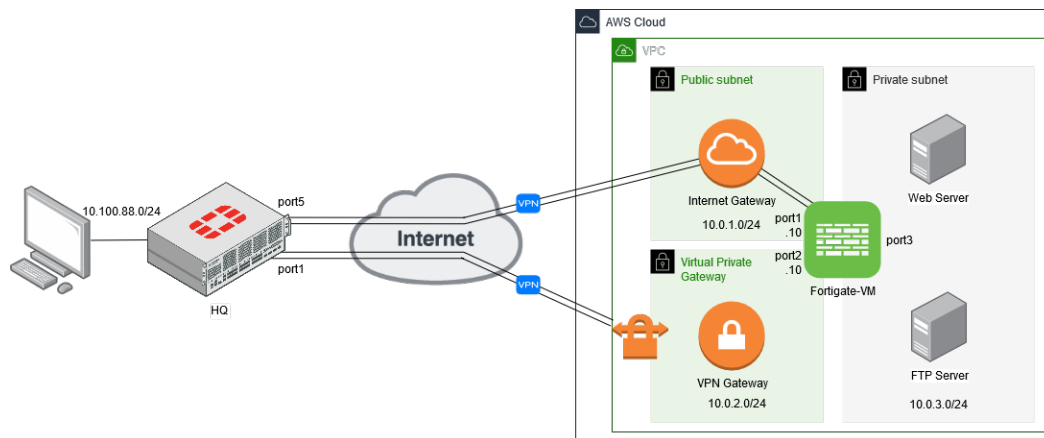

To connect to the servers that are behind the cloud FortiGate-VM, virtual IP addresses (VIPs) are configured on port2 to map to the servers:

- VPN traffic terminating on port1 is routed to the VIP on port2 to access the web servers.
- VPN traffic terminating on the VPN gateway accesses the VIPs on port2 directly.

There are four major steps to configure this setup:

1. [Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM on page 875](#)
2. [Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway on page 880](#)
3. [Configuring the VIP to access the remote servers on page 883](#)
4. [Configuring the SD-WAN to steer traffic between the overlays on page 886](#)

After the configuration is complete, verify the traffic to ensure that the configuration is working as expected, see [Verifying the traffic on page 890](#).

## Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM

### Configure the cloud FortiGate-VM

To create an address for the VPN gateway:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set *Name* to *local\_subnet\_10\_0\_2\_0*.
3. Set *IP/Netmask* to *10.0.2.0/24*.

4. Click **OK**.

**To configure a custom IPsec VPN:**

1. Go to *VPN > IPsec Wizard*.
2. Set *Name* to *Core\_Dialup*.
3. Set *Template type* to *Custom*.

VPN Creation Wizard

1 VPN Setup

Name: Core\_Dialup

Template type: Site to Site | Hub-and-Spoke | Remote Access | **Custom**

< Back   Next >   Cancel

4. Click *Next*.
5. Configure *Network* settings:

<b>Remote Gateway</b>	Dialup User
<b>Interface</b>	port1
<b>NAT Traversal</b>	Enable

6. Configure *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	Enter the pre-shared key.
<b>Version</b>	1
<b>Mode</b>	Aggressive This setting allows the peer ID to be specified.
<b>Accept Types</b>	Specific peer ID
<b>Peer ID</b>	laaS The other end of the tunnel needs to have its local ID set to laaS.

New VPN Tunnel

**Authentication**

Method: Pre-shared Key

Pre-shared Key: [masked]

**IKE**

Version: 1 2

Mode: Aggressive Main (ID protection)

**Peer Options**

Accept Types: Specific peer ID

Peer ID: laaS

OK Cancel

IPsec VPNs

Guides

- IPsec VPN Cookbook Recipes
- VPN Setup on FortiClient
- Configuring an IPsec VPN Connection

Documentation

- Online Help
- Video Tutorials

7. Leave the default *Phase 1 Proposal* settings and disable *XAUTH*.

8. Configure the *Phase 2 Selector* settings:

<b>Name</b>	Ent_Core
<b>Local Address</b>	Named Address - <i>local_subnet_10_0_2_0</i>
<b>Remote Address</b>	Named Address - <i>all</i> This setting allows traffic originating from both the remote subnet 10.100.88.0 and the health checks from the VPN interface on the remote FortiGate. For increased security, each subnet can be specified individually.

## 9. Click OK.

## To configure remote and local tunnel IP addresses:

1. Go to *Network > Interfaces* and edit the *Core\_Dialup* interface under *port1*.
2. Set *IP* to *172.16.200.1*.
3. Set *Remote IP/Netmask* to *172.16.200.2 255.255.255.0*. This is where remote health check traffic will come from.
4. Enable *Administrative access* for *HTTPS*, *PING*, and *SSH*.

**Edit Interface**

Name: Core\_Dialup  
 Alias:   
 Type: Tunnel Interface  
 Interface: port1  
 VRF ID: 0  
 Role: Undefined

**Address**  
 Addressing mode: Manual  
 IP: 172.16.200.1  
 Remote IP/Netmask: 172.16.200.2 255.255.255.0

**Administrative Access**  
 IPv4: ☒ HTTPS, ☒ PING, ☐ FMG-Access  
☒ SSH, ☐ SNMP, ☐ FTM  
☐ RADIUS Accounting, ☐ Security Fabric Connection  
☐ DHCP Server

FortiGate: FortiGate-VM  
 Status: Up  
 Additional Information: API Preview, References, Edit in CLI, Documentation, Online Help, Video Tutorials

OK Cancel

## 5. Click OK.

## To configure a route to the remote subnet through the tunnel:

1. Go to *Network > Static Routes* and click *Create New*.
2. Set *Destination* to *Subnet* and enter the IP address and netmask: *10.100.88.0/255.255.255.0*.
3. Set *Interface* to *Core\_Dialup*.

**New Static Route**

Destination: Subnet Internet Service  
 10.100.88.0/255.255.255.0  
 Interface: Core\_Dialup  
 Administrative Distance: 10  
 Comments: Write a comment... 0/255  
 Status: Enabled Disabled

Advanced Options

Additional Information: API Preview, Documentation, Online Help, Video Tutorials

OK Cancel

## 4. Click OK.

### To configure a firewall policy to allow traffic from the tunnel to port2:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following:

<b>Name</b>	Core_Dialup-to-port2
<b>Incoming Interface</b>	Core_Dialup
<b>Outgoing Interface</b>	port2
<b>Source</b>	all
<b>Destination</b>	local_subnet_10_0_2_0
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

3. Configure the remaining settings as required.
4. Click **OK**.

## Configure the HQ FortiGate

### To create an address for the VPN gateway:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set *Name* to *remote\_subnet\_10\_0\_2\_0*.
3. Set *IP/Netmask* to *10.0.2.0/24*.
4. Click **OK**.

### To configure a custom IPsec VPN:

1. Go to *VPN > IPsec Wizard*.
2. Set *Name* to *FGT\_AWS\_Tun*.
3. Set *Template type* to *Custom*.
4. Click **Next**.
5. Configure *Network* settings:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	100.21.29.17
<b>Interface</b>	port5
<b>NAT Traversal</b>	Enable

6. Configure *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	Enter the pre-shared key.
<b>Version</b>	1
<b>Mode</b>	Aggressive This setting allows the peer ID to be specified.
<b>Accept Types</b>	Any peer ID

7. Leave the default *Phase 1 Proposal* settings, except set *Local ID* to *laaS*.

8. Disable *XAUTH*.

9. Configure the *Phase 2 Selector* settings:

<b>Name</b>	FGT_AWS_Tun
<b>Local Address</b>	Named Address - <i>all</i> This setting allows traffic originating from both the local subnet 10.100.88.0 and the health checks from the VPN interface. For increased security, each subnet can be specified individually.
<b>Remote Address</b>	Named Address - <i>remote_subnet_10_0_2_0</i>

10. Click *OK*.

**To configure local and remote tunnel IP addresses:**

1. Go to *Network > Interfaces* and edit the *FGT\_AWS\_Tun* interface under *port5*.
2. Set *IP* to *172.16.200.2*.
3. Set *Remote IP/Netmask* to *172.16.200.1 255.255.255.0*.
4. Enable *Administrative access* for *HTTPS*, *PING*, and *SSH*.
5. Click *OK*.



Routing is defined when creating the SD-WAN interface. The firewall policy is created after the SD-WAN interface is defined.

## Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway


This example uses static routing. It is assumed that the AWS VPN Gateway is already configured, and that proper routing is applied on the corresponding subnet.

### Verify the AWS configuration

See [Creating routing tables and associate subnets](#) in the [AWS Administration Guide](#) for configuration details.


#### To check the AWS configuration:

1. Go to *Virtual Private Network (VPN) > Customer Gateways* to confirm that the customer gateway defines the FortiGate IP address as its Gateway IP address, in this case **34.66.121.231**.

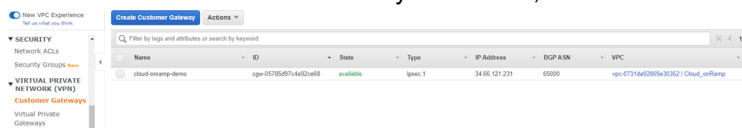

Name	ID	State	Type	IP Address	BGP ASN	VPC
cloud-onramp-demo	cgw-05705d571a4d32e68	available	ipsec.1	34.66.121.231	65000	vpc-07316a02899a30302   Cloud_onRamp

 
2. Go to *Virtual Private Network (VPN) > Virtual Private Gateways* to confirm that a virtual private gateway (VPG) has been created. In this case it is attached to the **Cloud\_onRamp** VPC that contains the FortiGate and servers.



Name	ID	State	Type	VPC	ASN (Amazon side)
Cloud_onRamp_VPG	vpg-043e045b75aea6a2	attached	ipsec.1	vpc-07316a02899a30302   Cloud_onRamp	64512

3. Go to *Virtual Private Network (VPN) > Site-to-Site VPN Connections* to confirm that site-to-site VPN connections have been created and attached to the customer gateway and virtual private gateway.

If **Routing Options** is **Static**, the IP prefix of the remote subnet on the HQ FortiGate (10.100.88.0) is entered here.

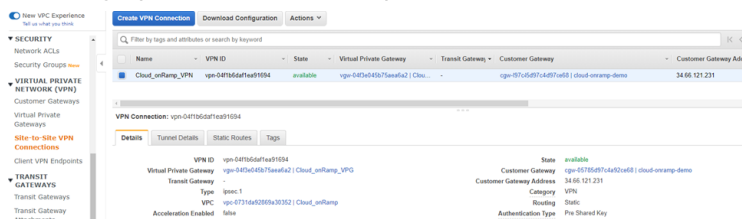


Name	VPN ID	State	Virtual Private Gateway	Transit Gateway	Customer Gateway	Customer Gateway Address
Cloud_onRamp_VPN	vpn-04f1b6daf1ea91694	available	vpg-043e045b75aea6a2   Clou...	vpc-05705d571a4d32e68   cloud-onramp-demo	cgw-05705d571a4d32e68	34.66.121.231

VPN ID	Virtual Private Gateway	Transit Gateway	Customer Gateway	Customer Gateway Address	Category	Routing	Status	Authentication Type
vpn-04f1b6daf1ea91694	vpg-043e045b75aea6a2   Cloud_onRamp_VPG	ipsec.1	cgw-05705d571a4d32e68   cloud-onramp-demo	34.66.121.231	VPN	Static	UP	Pre Shared Key

AWS site-to-site VPN always creates two VPN tunnels for redundancy. In this example, only Tunnel 1 is used.

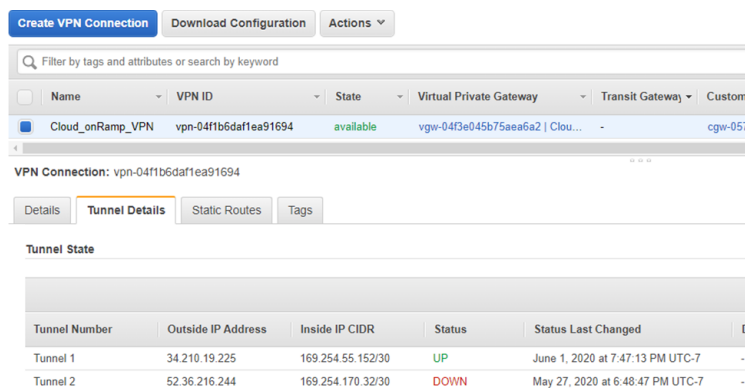

Name	VPN ID	State	Virtual Private Gateway	Transit Gateway	Customer Gateway	Customer Gateway Address
Cloud_onRamp_VPN	vpn-04f1b6daf1ea91694	available	vpg-043e045b75aea6a2   Clou...	-	cgw-05705d571a4d32e68	34.66.121.231


VPN Connection: vpn-04f1b6daf1ea91694

Tunnel State


Tunnel Number	Outside IP Address	Inside IP CIDR	Status	Status Last Changed	D
Tunnel 1	34.210.19.225	169.254.55.152/30	UP	June 1, 2020 at 7:47:13 PM UTC-7	-
Tunnel 2	52.36.216.244	169.254.170.32/30	DOWN	May 27, 2020 at 6:48:47 PM UTC-7	-

4. Click **Download Configuration** to download the FortiGate's tunnel configurations. The configuration can be referred to when configuring the FortiGate VPN.

5. The new VPG is attached to your VPC, but to successfully route traffic to the VPG, proper routing must be defined. Go to *Virtual Private Cloud > Subnets*, select the *Cloud-OnRamp-VPN*, and select the *Route Table* tab to verify that there are at least two routes to send traffic over the VPG.

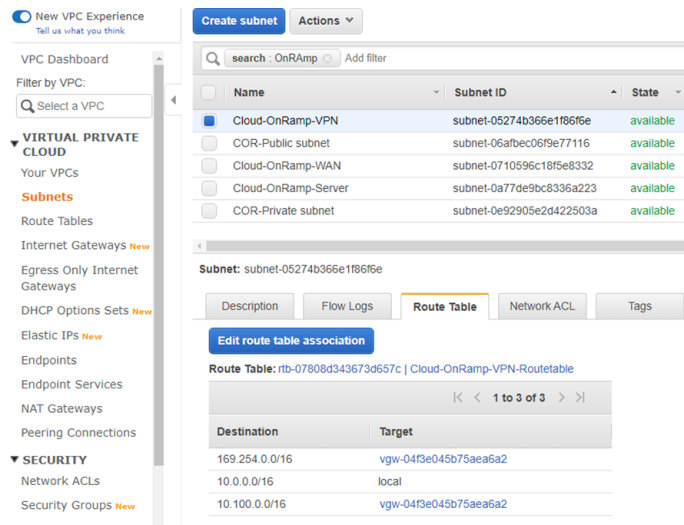

- *169.254.0.0/24* defines the tunnel IP address. Health check traffic originating from the FortiGate will come from this IP range.
  - *10.100.0.0/16* defines the remote subnet from the HQ FortiGate.
  - Both routes point to the just created VPG *vgw-04xxxx*.
6. On the cloud FortiGate-VM EC2 instances, ensure that port1 and port2 both have *Source/Dest. Check* set to *false*. This allows the FortiGate to accept and route traffic to and from a different network. If you launched the instance from the AWS marketplace, this setting defaults to *true*.

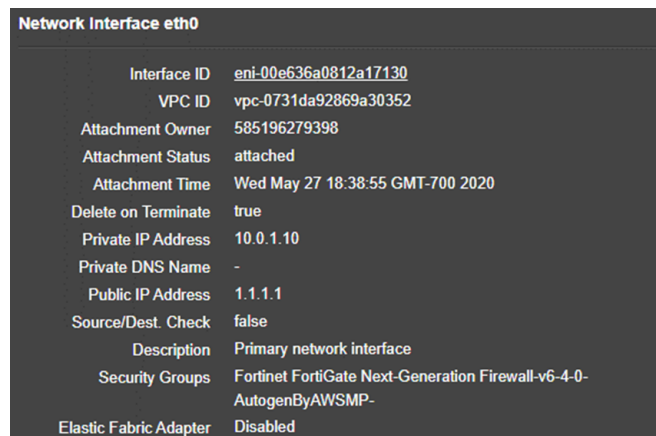

## Configure routing to the VPG on the cloud FortiGate-VM

To configure routing to the VPG on the cloud FortiGate-VM:

1. Go to *Network > Static Routes* and click *Create New*.
2. Set *Destination* to *Subnet* and enter the IP address and netmask: *10.100.88.0/255.255.255.0*.
3. Set *Gateway Address* to *Specify* and enter *10.0.2.1*.

#### 4. Set *Interface* to *port2*.

The new route must have the same *Administrative Distance* as the route that was created for traffic through the *Core\_Dialup* tunnel to ensure that both routes are added to the routing table (see [To configure a route to the remote subnet through the tunnel](#)).

The *Gateway Address* is arbitrarily set to 10.0.2.1. The VPG does not have an IP address, but the address defined here allows the FortiGate to route traffic out of port2, while AWS routes the traffic based on its routing table.

#### 5. Click **OK**.

#### 6. Go to *Network > Static Routes* to view the configured static routes:

<div> <div>+ Create New</div> <div>Edit</div> <div>Clone</div> <div>Delete</div> <div>Search</div> <div>Q</div> </div>				
Destination	Gateway IP	Interface	Status	Comments
IPv4				
10.100.88.0/24	1.0.0.0	Core_Dialup	Enabled	
10.100.88.0/24	10.0.2.1	port2	Enabled	

#### 7. If *Optimal* dashboards is selected, go to *Dashboard > Network* and expand the Routing widget to view the routing table.

If *Comprehensive* dashboards is selected, go to *Dashboard > Routing Monitor* and select *Static & Dynamic* in the widget toolbar to view the routing table:

Network	Gateway IP	Interfaces	Distance	Type
10.100.88.0/24	1.0.0.0	Core_Dialup	10	Static
10.100.88.0/24	10.0.2.1	port2	10	Static
172.16.200.1/32	0.0.0.0	Core_Dialup	0	Connected
10.100.88.0/24	1.0.0.0	Core_Dialup	10	Static

Updated: 04:43:02

## Configure IPsec VPN on the HQ FortiGate

### To configure a custom IPsec VPN:

- Go to *VPN > IPsec Wizard*.
- Set *Name* to *AWS\_VPG*.
- Set *Template type* to *Custom*.
- Click **Next**.
- Configure *Network* settings:

Remote Gateway	Static IP Address
<b>IP Address</b>	34.210.19.225 This address is taken from the downloaded AWS configuration file.
<b>Interface</b>	port1
<b>NAT Traversal</b>	Enable

#### 6. Configure *Authentication* settings:

<b>Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	Enter the pre-shared key.
<b>Version</b>	1
<b>Mode</b>	Main

#### 7. Configure the *Phase 1 Proposal* settings using information from the downloaded AWS configuration file.



8. Disable *XAUTH*.
9. Configure the *Phase 2 Selector* settings:

<b>Name</b>	AWS_VPG
<b>Local Address</b>	Named Address - <i>all</i> This setting allows traffic originating from both the local subnet 10.100.88.0 and the health checks from the VPN interface. For increased security, each subnet can be specified individually.
<b>Remote Address</b>	Named Address - <i>remote_subnet_10_0_2_0</i>

10. Click *OK*.

#### To configure local and remote tunnel IP addresses:

1. Go to *Network > Interfaces* and edit the *AWS\_VPG* interface under *port1*.
2. Set *IP* to *169.254.55.154*.
3. Set *Remote IP/Netmask* to *169.254.55.153 255.255.255.0*.
4. Enable *Administrative access* for *HTTPS* and *PING*.
5. Click *OK*.




Routing is defined when creating the SD-WAN interface. The firewall policy is created after the SD-WAN interface is defined.

## Configuring the VIP to access the remote servers

VIPs, interface IP addresses, and policies are created on the cloud FortiGate-VM to allow access to the remote servers.

#### To configure additional private IPs on AWS for the FortiGate VIP:

1. On the FortiGate EC2 instance, edit the *Elastic Network Interface* that corresponds to *port2*. In this example, Network Interface *eth1*.
2. Go to *Actions > Manage IP Addresses*.
3. Add two private IP address in the 10.0.2.0/24 subnet.  
These address will be used in the VIPs on the FortiGate. This ensures that traffic to these IP addresses is routed to the FortiGate by AWS.

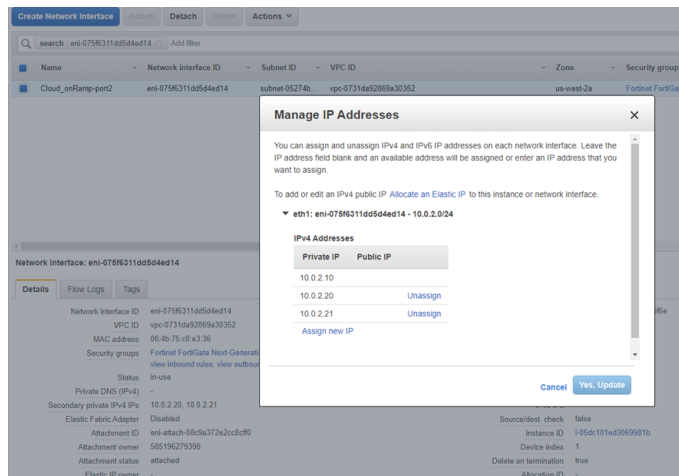

4. Click **Yes, Update**.

### To configure VIPs on the cloud FortiGate-VM:

1. Go to **Policy & Objects > Virtual IPs** and click **Create New > Virtual IP**.
2. Configure the following:

<b>Name</b>	VIP-HTTP
<b>Interface</b>	port2
<b>External IP address/range</b>	10.0.2.20
<b>Map to IPv4 address/range</b>	10.0.3.33

New Virtual IP

VIP type: IPv4

Name: VIP-HTTP

Comments: Write a comment... 0/255

Color: Change

Network

Interface: port2

Type: Static NAT FQDN

External IP address/range: 10.0.2.20

Map to IPv4 address/range: 10.0.3.33

☐ Optional Filters

☐ Port Forwarding

OK Cancel

FortiGate

FortiGate-VM

Additional Information

API Preview

Documentation

Online Help Video Tutorials

3. Click **OK**.

4. Create a second VIP for the FTP server with the following settings:

<b>Name</b>	VIP-FTP
<b>Interface</b>	port2
<b>External IP address/range</b>	10.0.2.21
<b>Map to IPv4 address/range</b>	10.0.3.44

Name	Details	Interfaces	Services	Ref.
IPv4 Virtual IP				
VIP-HTTP	10.0.2.20 → 10.0.3.33	port2		0
VIP-FTP	10.0.2.21 → 10.0.3.44	port2		0

### To configure firewall policies to allow traffic from port2 to port3:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following:

<b>Name</b>	To-WebServer
<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	VIP-HTTP
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	Enabled

3. Configure the remaining settings as required.
4. Click *OK*.
5. Create a second policy for the FTP VIP with the following settings:

<b>Name</b>	To-FTP
<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	VIP-FTP
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

**NAT**

Enabled

**6. Click OK.**

<a href="#">+ Create New</a>		<a href="#">Edit</a>	<a href="#">Delete</a>	<a href="#">Policy Lookup</a>	Search	<input type="text" value="Q"/>	<a href="#">Interface Pair View</a>	By Sequence	
Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
<div>Core_Dialup → port2 1</div>									
Core_Dialup-to-port2	all	local_subnet_10_0_2_0	always	ALL	ACCEPT	Enabled	SSL no-inspection	UTM	0 B
<div>port2 → port3 2</div>									
To-WebServer	all	VIP-HTTP	always	ALL	ACCEPT	Enabled	SSL no-inspection	UTM	0 B
To-FTP	all	VIP-FTP	always	ALL	ACCEPT	Enabled	SSL no-inspection	UTM	0 B
<div>Implicit 3</div>									
0 Security Rating Issues									
									Updated: 05:12:29

## Configuring the SD-WAN to steer traffic between the overlays

Configure the HQ FortiGate to use two overlay tunnels for SD-WAN, steering HTTPS and HTTP traffic through the FGT\_AWS\_Tun tunnel, and SSH and FTP through the AWS\_VPG tunnel.

1. Add SD-WAN member interfaces
2. Configure a route to the remote network
3. Configure firewall policies
4. Configure a health check
5. Configure SD-WAN rules

**To add SD-WAN member interfaces:**

1. Go to *Network > SD-WAN*, select the *SD-WAN Zones* tab, and click *Create New > SD-WAN Member*.
2. Set *Interface* to *AWS\_VPG* then click *OK*.

New SD-WAN Member

Interface

SD-WAN Zone

Gateway

Cost

Status

AWS\_VPG

virtual-wan-link

0.0.0.0

0

Enabled

Disabled

Additional Information

API Preview

SD-WAN Setup Guides

Creating the SD-WAN Interface

MPLS (SIP and Backup) + DIA (Cloud Apps)

SD-WAN Traffic Shaping and QoS with SD-WAN

Per Packet Distribution and Tunnel Aggregation

Documentation


Online Help

Video Tutorials

OK

Cancel

3. Click *Create New > SD-WAN Member* again.
4. Set *Interface* to *FGT\_AWS\_Tun*.
5. Set *Gateway* to *172.16.200.1*.

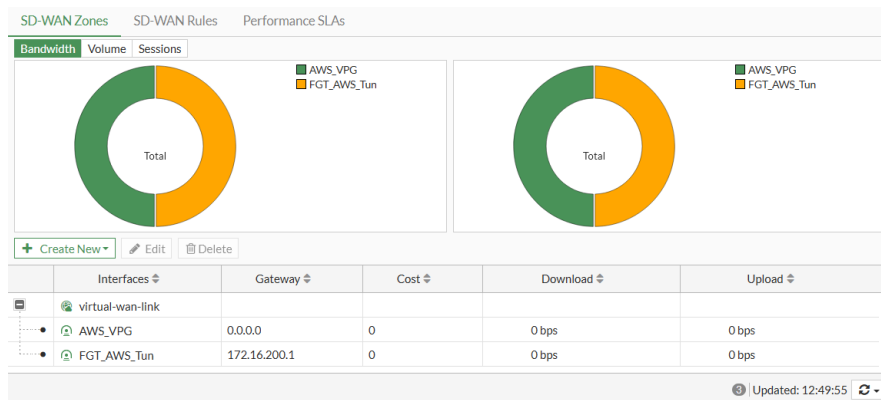6. Click **OK**.**To configure a route to the remote network 10.0.2.0/24:**

1. Go to **Network > Static Routes** and click **Create New**.
2. Set **Destination** to **Subnet** and enter the IP address and netmask: **10.0.2.0/255.255.255.0**.
3. Set **Interface** to **virtual-wan-link**.

Automatic gateway retrieval: ☐

Destination: **Subnet** | Internet Service

10.0.2.0/255.255.255.0

Interface: **virtual-wan-link**

Comments: Write a comment... 0/255


Status: **Enabled** | Disabled

OK Cancel

Additional Information: API Preview, Documentation, Online Help, Video Tutorials

4. Click **OK**.

Individual routes to each tunnel are automatically added to the routing table with the same distance:

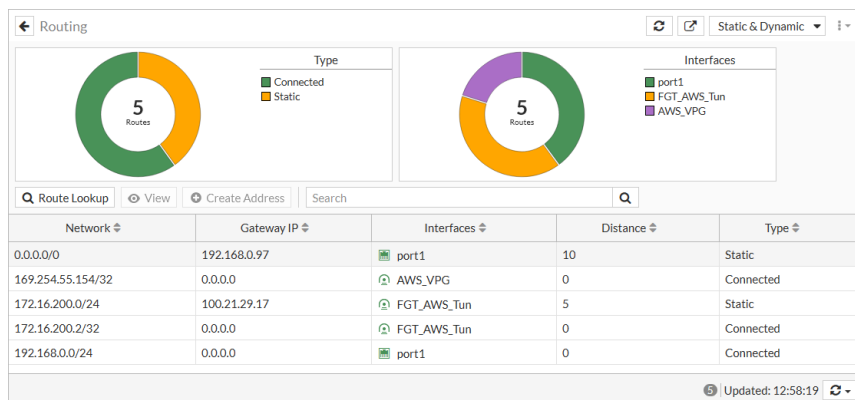**To configure firewall policies to allow traffic from the internal subnet to SD-WAN:**

1. Go to **Policy & Objects > Firewall Policy** and click **Create New**.
2. Configure the following:

Name	ISFW-to-IaaS
------	--------------

<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	virtual-wan-link
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	Enabled

3. Configure the remaining settings as required.
4. Click **OK**.

Once the firewall policies are configured, the VPN tunnels should come up when there is traffic.

### To configure a health check to monitor the status of the tunnels:


As you are accessing the servers on the 10.0.2.0/24 subnet, it is preferable to use the FortiGate port2 interface as the ping server for detection. This ensures that, if the gateway is not reachable in either tunnel, its routes are brought down and traffic continues on the other tunnel.

1. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, and click *Create New*.
2. Configure the following:

<b>Name</b>	ping_AWS_Gateway
<b>Protocol</b>	Ping
<b>Server</b>	10.0.2.10
<b>Participants</b>	Specify Add AWS_VPG and FGT_AWS_Tun as participants.

The screenshot shows the 'New Performance SLA' configuration interface. The main form has the following fields: Name (ping\_AWS\_Gateway), Detection Mode (Active), Protocol (Ping), Server (10.0.2.10), and Participants (AWS\_VPG, FGT\_AWS\_Tun). The 'Additional Information' sidebar on the right contains links to API Preview, Performance SLA Setup Guides, Link Monitoring, SLA Targets, Documentation, Online Help, and Video Tutorials.

3. Click **OK**.

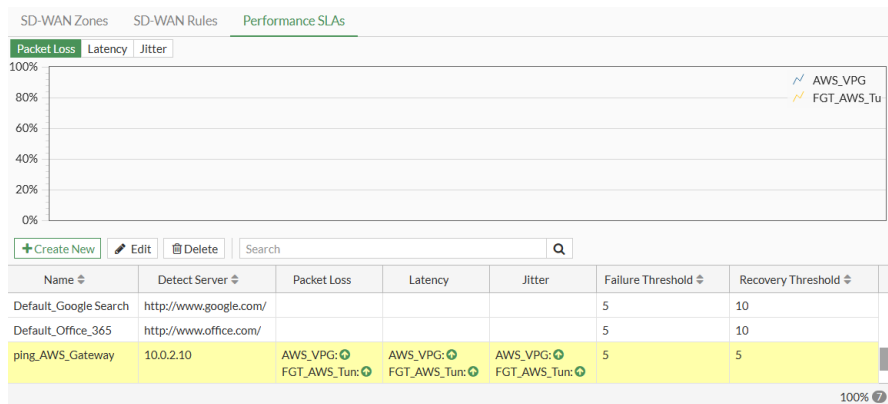

Health check probes originate from the VPN interface's IP address. This is why the phase2 selectors are configured with *Local Address* set to *all*.

### To configure SD-WAN rules to steer traffic:

HTTPS and HTTP traffic is steered to the FGT\_AWS\_Tun tunnel, and SSH and FTP traffic is steered to the AWS\_VPG tunnel. The Manual algorithm is used in this example.

1. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
2. Configure the following:

<b>Name</b>	http-to-FGT_AWS_Tun
<b>Source Address</b>	all
<b>Address</b>	remote_subnet_10_0_2_0
<b>Protocol</b>	TCP
<b>Port range</b>	80 - 80
<b>Outgoing Interfaces</b>	Manual
<b>Interface preference</b>	FGT_AWS_Tun

3. Click *OK*.
4. Create other SD-WAN rules as required:

SD-WAN Zones **SD-WAN Rules** Performance SLAs

+ Create New Edit Clone Delete Search

ID	Name	Source	Destination	Criteria	Members	Hit Count
<b>IPv4</b>						
1	http-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
2	ssh-to-AWS_VPG	all	remote_subnet_10_0_2_0		AWS_VPG	1
3	https-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
4	ftp-to-AWS_VPG	all	FTP-Server		AWS_VPG	1
<b>Implicit</b>						
	sd-wan	all	all	Source IP	.any	

Updated: 13:26:33

## Verifying the traffic

### To verify that pings are sent across the IPsec VPN tunnels

- On the HQ FortiGate, run the following CLI command:


```
# diagnose sniffer packet any 'host 10.0.2.10' 4 0 1 interfaces=[any]
Using Original Sniffing Mode
interfaces=[any]
filters=[host 10.0.2.10]
pcap_snapshot: snaplen raised from 0 to 262144
2021-06-05 11:35:14.822600 AWS_VPG out 169.254.55.154 -> 10.0.2.10: icmp: echo request
2021-06-05 11:35:14.822789 FGT_AWS_Tun out 172.16.200.2 -> 10.0.2.10: icmp: echo request
2021-06-05 11:35:14.877862 FGT_AWS_Tun in 10.0.2.10 -> 172.16.200.2: icmp: echo reply
2021-06-05 11:35:14.878887 AWS_VPG in 10.0.2.10 -> 169.254.55.154: icmp: echo reply
```

- On the cloud FortiGate-VM, run the following CLI command:

```
# diagnose sniffer packet any 'host 10.0.2.10' 4 0 1 interfaces=[any]
Using Original Sniffing Mode
interfaces=[any]
filters=[host 10.0.2.10]
pcap_snapshot: snaplen raised from 0 to 262144
2021-06-05 11:37:57.176329 port2 in 169.254.55.154 -> 10.0.2.10: icmp: echo request
2021-06-05 11:37:57.176363 port2 out 10.0.2.10 -> 169.254.55.154: icmp: echo reply
2021-06-05 11:37:57.176505 Core_Dialup in 172.16.200.2 -> 10.0.2.10: icmp: echo request
2021-06-05 11:37:57.176514 Core_Dialup out 10.0.2.10 -> 172.16.200.2: icmp: echo reply
```

### To verify the SLA health checks on the HQ FortiGate:

- Go to **Network > SD-WAN**, select the **Performance SLAs** tab, select **Packet Loss**, and click the **ping\_AWS\_Gateway** SLA:

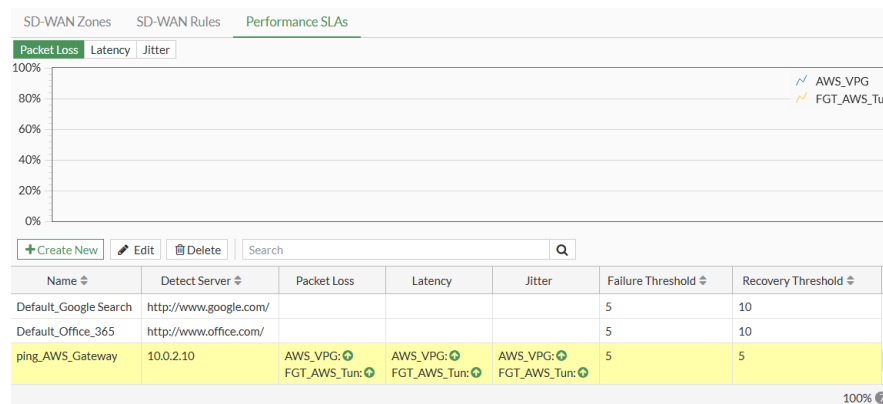

- Run the following CLI command:

```
# diagnose sys sdwan health-check
...
Seq(1 AWS_VPG): state(alive), packet-loss(0.000%) latency(56.221), jitter(0.290) sla_map=0x0
Seq(2 FGT_AWS_Tun): state(alive), packet-loss(0.000%) latency(55.039), jitter(0.223) sla_map=0x0
```



## To verify service rules:

### 1. Go to *Network > SD-WAN* and select the *SD-WAN Rules* tab:

SD-WAN Zones SD-WAN Rules Performance SLAs						
<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Clone</a> <a href="#">Delete</a> <input type="text" value="Search"/>						
ID	Name	Source	Destination	Criteria	Members	Hit Count
IPv4						
1	http-to-FGT_AWS_Tun	all	remote_subnet_10.0.2.0		FGT_AWS_Tun	1
2	ssh-to-AWS_VPG	all	remote_subnet_10.0.2.0		AWS_VPG	1
3	https-to-FGT_AWS_Tun	all	remote_subnet_10.0.2.0		FGT_AWS_Tun	1
4	ftp-to-AWS_VPG	all	FTP-Server		AWS_VPG	1
Implicit						
	sd-wan	all	all	Source IP	any	
Updated: 13:26:33						

### 2. Run the following CLI command:

```
# diagnose sys sdwan service
```

```
Service(1): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 80->80), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 22->22), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255

Service(3): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 443->443), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255

Service(4): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.21-10.0.2.21
```

**To verify that sessions are going to the correct tunnel:**

1. Run the following CLI command to verify that HTTPS and HTTP traffic destined for the Web server at 10.0.2.20 uses FGT\_AWS\_Tun:

```
# diagnose sys session filter dst 10.0.2.20
# diagnose sys session list

session info: proto=6 proto_state=11 duration=2 expire=3597 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=FGT_AWS_Tun/ vlan_cos=0/255
state=log may_dirty npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=593/4/1 reply=3689/5/1 tuples=3
tx speed(Bps/kbps): 264/2 rx speed(Bps/kbps): 1646/13
origin->sink: org pre->post, reply pre->post dev=0->18/18->0 gwy=172.16.200.1/0.0.0.0
hook=post dir=org act=snat 10.100.88.101:55589->10.0.2.20:80 (172.16.200.2:55589)
hook=pre dir=reply act=dnat 10.0.2.20:80->172.16.200.2:55589 (10.100.88.101:55589)
hook=post dir=reply act=noop 10.0.2.20:80->10.100.88.101:55589 (0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b7442c tos=ff/ff app_list=2000 app=34050 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id= ff000001 rpd_b_svc_id=2154552596 ngfwid=n/a
npu_state=0x3041008

session info: proto=6 proto_state=66 duration=1 expire=3 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=FGT_AWS_Tun/ vlan_cos=0/255
state=log may_dirty ndr f00 csf_syncd_log
statistic(bytes/packets/allow_err): org=48/1/0 reply=40/1/1 tuples=3
tx speed(Bps/kbps): 26/0 rx speed(Bps/kbps): 22/0
origin->sink: org pre->post, reply pre->post dev=5->18/18->5
gwy=172.16.200.1/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55621->10.0.2.20:443 (172.16.200.2:55621)
hook=pre dir=reply act=dnat 10.0.2.20:443->172.16.200.2:55621 (10.100.88.101:55621)
hook=post dir=reply act=noop 10.0.2.20:443->10.100.88.101:55621 (0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b74b50 tos=ff/ff app_list=2000 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id= ff000003 rpd_b_svc_id=2154552596 ngfwid=n/a
npu_state=0x3041008
```

2. Run the following CLI command to verify that SSH and FTP traffic destined for the FTP server at 10.0.2.21 uses AWS\_VPG:

```
# diagnose sys session filter dst 10.0.2.20
# diagnose sys session list
```

```

session info: proto=6 proto_state=11 duration=197 expire=3403 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ helper=ftp vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=580/12/1 reply=863/13/1 tuples=3
tx speed(Bps/kbps): 2/0 rx speed(Bps/kbps): 4/0
origin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55528->10.0.2.21:21(169.254.55.154:55528)
hook=pre dir=reply act=dnat 10.0.2.21:21->169.254.55.154:55528(10.100.88.101:55528)
hook=post dir=reply act=noop 10.0.2.21:21->10.100.88.101:55528(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b72a5f tos=ff/ff app_list=2000 app=15896 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id= ff000004 rpd_b_svc_id=2149689849 ngfwid=n/a
npu_state=0x3041008


session info: proto=6 proto_state=11 duration=3 expire=3596 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=1496/6/1 reply=1541/5/1 tuples=3
tx speed(Bps/kbps): 416/3 rx speed(Bps/kbps): 429/3
origin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55644->10.0.2.21:22(169.254.55.154:55644)
hook=pre dir=reply act=dnat 10.0.2.21:22->169.254.55.154:55644(10.100.88.101:55644)
hook=post dir=reply act=noop 10.0.2.21:22->10.100.88.101:55644(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b75287 tos=ff/ff app_list=2000 app=16060 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id= ff000002 rpd_b_svc_id=2149689849 ngfwid=n/a
npu_state=0x3041008

```

### To simulate an issue on an overlay VPN tunnel:

On the cloud FortiGate-VM, disable the firewall policy allowing Core\_Dialup to port2.

1. Health-checks through the FGT\_AWS\_Tun tunnel fail:
  - a. Go to *Network > SD-WAN*, select the *Performance SLAs* tab, select *Packet Loss*, and click the *ping\_AWS\_Gateway* SLA:

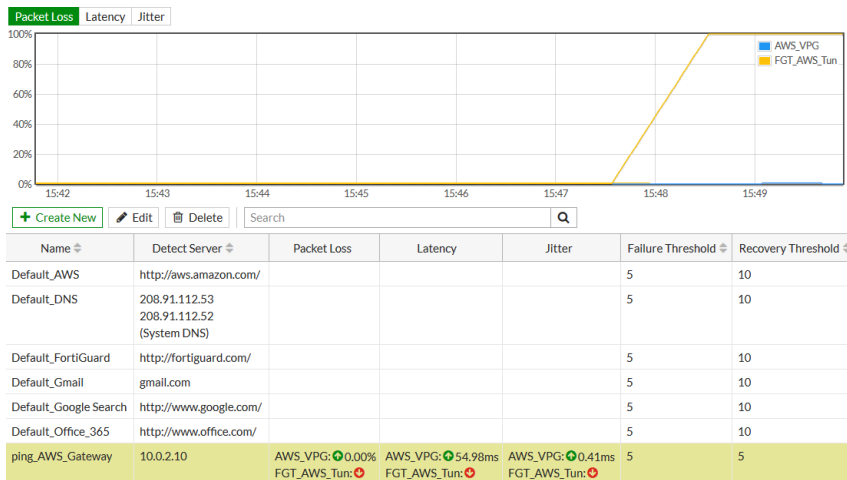

- b. Run the following CLI command:

```
# diagnose sys sdwan health-check
...
Seq(1 AWS_VPG): state(alive), packet-loss(0.000%) latency(52.746), jitter(0.713) sla_map=0x0
Seq(2 FGT_AWS_Tun): state(dead), packet-loss(19.000%) sla_map=0x0
```

## 2. Service rules show that the member is down:

- a. Go to **Network > SD-WAN** and select the **SD-WAN Rules** tab:

ID	Name	Source	Destination	Criteria	Members	Hit Count
IPv4						
1	http-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
2	ssh-to_AWS_VPG	all	remote_subnet_10_0_2_0		AWS_VPG	2
3	https-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
4	ftp-to_AWS_VPG	all	FTP-Server		AWS_VPG	2
Implicit						
	sd-wan	all	all	Source IP	any	

- b. Run the following CLI command:

```
# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(2), TOS(0x0/0x0), Protocol(6: 80->80), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), dead
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 22->22), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255
```

```

Service(3): Address Mode(IPV4) flags=0x0
  Gen(2), TOS(0x0/0x0), Protocol(6: 443->443), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), dead
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.0-10.0.2.255

Service(4): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
    0.0.0.0-255.255.255.255
  Dst address:
    10.0.2.21-10.0.2.21

```

### 3. Sessions are redirected to the working tunnel:

#### a. Run the following CLI command:

```

# diagnose sys session list

session info: proto=6 proto_state=11 duration=3 expire=3596 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=504/4/1 reply=620/3/1 tuples=3
tx speed(Bps/kbps): 150/1 rx speed(Bps/kbps): 184/1
origin->sink: org pre->post, reply pre->post dev=0->17/17->0
gwy=169.254.55.153/0.0.0.0
hook=post dir=org act=snat 10.100.88.101:56373->10.0.2.20:80(169.254.55.154:56373)
hook=pre dir=reply act=dnat 10.0.2.20:80->169.254.55.154:56373(10.100.88.101:56373)
hook=post dir=reply act=noop 10.0.2.20:80->10.100.88.101:56373(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b87199 tos=ff/ff app_list=2000 app=34050 url_cat=0
rpdb_link_id= 80000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x3041008

session info: proto=6 proto_state=66 duration=3 expire=1 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr f00 csf_syncd_log
statistic(bytes/packets/allow_err): org=48/1/0 reply=40/1/1 tuples=3
tx speed(Bps/kbps): 15/0 rx speed(Bps/kbps): 12/0
origin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:56383->10.0.2.20:443(169.254.55.154:56383)

```

```
hook=pre dir=reply act=dnat 10.0.2.20:443->169.254.55.154:56383(10.100.88.101:56383)
hook=post dir=reply act=noop 10.0.2.20:443->10.100.88.101:56383(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b876bb tos=ff/ff app_list=2000 app=0 url_cat=0
rpd_b_link_id= 80000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x3041008
total session 2
```

4. Routes to the *FGT\_AWS\_Tun* tunnel are removed:

- a. If *Optimal* dashboards is selected, go to *Dashboard > Network* and expand the Routing widget to view the routing table.

If *Comprehensive* dashboards is selected, go to *Dashboard > Routing Monitor* and select *Static & Dynamic* in the widget toolbar to view the routing table:

Network	Gateway IP	Interfaces	Distance	IP Version	Type
IPv4 40					
0.0.0.0/0	10.100.64.254	Internet_A (port1)	1	IPv4	Static
0.0.0.0/0	10.100.65.254	Internet_B (port5)	1	IPv4	Static
10.0.2.0/24	169.254.55.153	AWS_VPG	1	IPv4	Static
10.0.10.0/24	0.0.0.0	VPN_A_Tunnel (Branch-HQ-A)	0	IPv4	Connected
10.0.10.1/32	0.0.0.0	VPN_A_Tunnel (Branch-HQ-A)	0	IPv4	Connected

- b. Run the following CLI command:

```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
S*    0.0.0.0/0 [1/0] via 10.100.64.254, port1
      [1/0] via 10.100.65.254, port5
S     10.0.2.0/24 [1/0] via 169.254.55.153, AWS_VPG
C     10.0.10.0/24 is directly connected, Branch-HQ-A
C     10.0.10.1/32 is directly connected, Branch-HQ-A
...
```

## Troubleshooting SD-WAN

The following topics provide instructions on SD-WAN troubleshooting:

- [Tracking SD-WAN sessions on page 897](#)
- [Understanding SD-WAN related logs on page 897](#)
- [SD-WAN related diagnose commands on page 900](#)
- [SD-WAN bandwidth monitoring service on page 904](#)
- [Using SNMP to monitor health check on page 907](#)

## Tracking SD-WAN sessions

You can check the destination interface in *Dashboard > FortiView Sessions* in order to see which port the traffic is being forwarded to.

The example below demonstrates a source-based load-balance between two SD-WAN members:

- If the source IP address is an *even* number, it will go to *port13*.
- If the source IP address is an *odd* number, it will go to *port12*.

Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets	Duration (seconds)	Destination Interface
10.2.0.21	00:00:00:00:00:00	50.200.244.000	UDP/123	UDP	123	123	152 B	2		port12
10.2.0.15	00:00:00:00:00:00	95.217.180.000	UDP/123	UDP	123	123	152 B	2	2m 11s	port12
10.2.0.16	00:00:00:00:00:00	4.53.100.000	UDP/123	UDP	123	123	152 B	2	1m 49s	port13
10.1.0.16	00:00:00:00:00:00	90.245.170.000	UDP/123	UDP	123	123	152 B	2	12s	port13
10.100.88.4	00:00:00:00:00:00	209.020.047.000	FortiGuard.Search	UDP	45932	53	0 B	0	56s	port13
10.1.0.11	00:00:00:00:00:00	66.80.78.000	UDP/123	UDP	123	123	152 B	2	2m 1s	port12
10.100.88.4	00:00:00:00:00:00	209.200.147.000	FortiGuard.Search	UDP	44624	53	0 B	0	1m 36s	port13
10.1.0.14	00:00:00:00:00:00	50.205.240.000	UDP/123	UDP	123	123	152 B	2	58s	port13
10.1.0.16	00:00:00:00:00:00	104.105.082.000	UDP/123	UDP	123	123	152 B	2	12s	port13
10.2.0.16	00:00:00:00:00:00	90.217.188.000	UDP/123	UDP	123	123	152 B	2	1m 49s	port13
10.1.0.14	00:00:00:00:00:00	206.209.0.000	UDP/123	UDP	123	123	152 B	2	58s	port13
10.2.0.17	00:00:00:00:00:00	4.50.160.000	UDP/123	UDP	123	123	152 B	2	1m 26s	port12
10.100.88.4	00:00:00:00:00:00	209.220.147.000	FortiGuard.Search	UDP	56358	53	0 B	0	1m 26s	port13
10.100.88.4	00:00:00:00:00:00	96.40.30.000	FortiGuard.Search	UDP	28454	53	0 B	0	2m 44s	port13
10.100.88.2	00:00:00:00:00:00	90.40.33.000	HTTPS.BROWSER	TCP	42908	443	1.77 KB	11	46s	port13
10.100.88.4	00:00:00:00:00:00	90.45.30.000	FortiGuard.Search	UDP	27164	53	0 B	0	1m 14s	port13

## Understanding SD-WAN related logs

This topic lists the SD-WAN related logs and explains when the logs will be triggered.

### Health-check detects a failure:

- When health-check detects a failure, it will record a log:

```
1: date=2021-04-20 time=17:06:31 eventtime=1618963591590008160 tz="-0700"
logid="0100022921" type="event" subtype="system" level="critical" vd="root"
logdesc="Routing information changed" name="test" interface="R150" status="down"
msg="Static route on interface R150 may be removed by health-check test. Route:
(10.100.1.2->10.100.2.22 ping-down) "
```

- When health-check detects a recovery, it will record a log:

```
2: date=2021-04-20 time=17:11:46 eventtime=1618963906950174240 tz="-0700"
logid="0100022921" type="event" subtype="system" level="critical" vd="root"
logdesc="Routing information changed" name="test" interface="R150" status="up"
msg="Static route on interface R150 may be added by health-check test. Route:
(10.100.1.2->10.100.2.22 ping-up) "
```

### Health-check has an SLA target and detects SLA qualification changes:

- When health-check has an SLA target and detects SLA changes, and changes to fail:

```
1: date=2021-04-20 time=21:32:33 eventtime=1618979553388763760 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Health Check" healthcheck="test" slatargetid=1 oldvalue="2"
newvalue="1" msg="Number of pass member changed."
```

```
2: date=2021-04-20 time=21:32:33 eventtime=1618979553388751880 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Health Check" healthcheck="test" slatargetid=1 member="1" msg="Member
status changed. Member out-of-sla."
```

- When health-check has an SLA target and detects SLA changes, and changes to pass:

```
1: date=2021-04-20 time=21:38:49 eventtime=1618979929908765200 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Health Check" healthcheck="test" slatargetid=1 oldvalue="1"
newvalue="2" msg="Number of pass member changed."
```

```
2: date=2021-04-20 time=21:38:49 eventtime=1618979929908754060 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="information" vd="root"
logdesc="SDWAN status" eventtype="Health Check" healthcheck="test" slatargetid=1
member="1" msg="Member status changed. Member in sla."
```

### SD-WAN calculates a link's session/bandwidth over/under its ratio and stops/resumes traffic:

- When SD-WAN calculates a link's session/bandwidth over its configured ratio and stops forwarding traffic:

```
1: date=2021-04-20 time=21:55:14 eventtime=1618980914728863220 tz="-0700"
logid="0113022924" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
volume status" eventtype="Volume" interface="R160" member="2" msg="Member enters into
conservative status with limited ability to receive new sessions for too much traffic."
```

- When SD-WAN calculates a link's session/bandwidth according to its ratio and resumes forwarding traffic:

```
2: date=2021-04-20 time=22:12:52 eventtime=1618981972698753360 tz="-0700"
logid="0113022924" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
volume status" eventtype="Volume" interface="R160" member="2" msg="Member resume normal
status to receive new sessions for internal adjustment"
```

### The SLA mode service rule's SLA qualified member changes:

- When the SLA mode service rule's SLA qualified member changes. In this example R150 fails the SLA check, but is still alive:

```
1: date=2021-04-20 time=22:40:46 eventtime=1618983646428803040 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" seq="2,1" msg="Service
prioritized by SLA will be redirected in sequence order."
```

- When the SLA mode service rule's SLA qualified member changes. In this example R150 changes from fail to pass:

```
2: date=2021-04-20 time=22:41:51 eventtime=1618983711678827920 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" seq="1,2" msg="Service
prioritized by SLA will be redirected in sequence order."
```

### The priority mode service rule member's link status changes:

- When priority mode service rule member's link status changes. In this example R150 changes to better than R160, and both are still alive:

```
1: date=2021-04-20 time=22:56:55 eventtime=1618984615708804760 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" metric="packet-loss" seq="2,1"
msg="Service prioritized by performance metric will be redirected in sequence order."
```



- When priority mode service rule member's link status changes. In this example R160 changes to better than R150, and both are still alive:

```
2: date=2021-04-20 time=22:56:58 eventtime=1618984618278852140 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" metric="packet-loss" seq="1,2"
msg="Service prioritized by performance metric will be redirected in sequence order."
```

#### SD-WAN member is used in service and it fails the health-check:

- When SD-WAN member fails the health-check, it will stop forwarding traffic:

```
1: date=2021-04-20 time=23:04:32 eventtime=1618985072898756700 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" interface="R150" member="1" serviceid=1 service="test"
gateway=10.100.1.1 msg="Member link is unreachable or miss threshold. Stop forwarding
traffic. "
```

- When SD-WAN member passes the health-check again, it will resume forwarding logs:

```
2: date=2021-04-20 time=23:06:08 eventtime=1618985168018789600 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" interface="R150" member="1" serviceid=1 service="test"
gateway=10.100.1.1 msg="Member link is available. Start forwarding traffic. "
```

#### Load-balance mode service rule's SLA qualified member changes:

- When load-balance mode service rule's SLA qualified member changes. In this example R150 changes to not meet SLA:

```
1: date=2021-04-20 time=23:10:24 eventtime=1618985425048820800 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" member="2 (R160)" msg="Service
will be load balanced among members with available routing."
```

- When load-balance mode service rule's SLA qualified member changes. In this example R150 changes to meet SLA:

```
2: date=2021-04-20 time=23:11:34 eventtime=1618985494478807100 tz="-0700"
logid="0113022923" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
status" eventtype="Service" serviceid=1 service="test" member="2 (R160),1 (R150)"
msg="Service will be load balanced among members with available routing."
```

#### SLA link status logs, generated with interval sla-fail-log-period or sla-pass-log-period:

- When SLA fails, SLA link status logs will be generated with interval sla-fail-log-period:

```
1: date=2021-04-20 time=23:18:10 eventtime=1618985890469018260 tz="-0700"
logid="0113022925" type="event" subtype="sdwan" level="notice" vd="root" logdesc="SDWAN
SLA information" eventtype="SLA" healthcheck="test" slatargetid=1 interface="R150"
status="up" latency="0.061" jitter="0.004" packetloss="2.000%"
inbandwidthavailable="0kbps" outbandwidthavailable="200.00Mbps"
bibandwidthavailable="200.00Mbps" inbandwidthused="1kbps" outbandwidthused="1kbps"
bibandwidthused="2kbps" slamap="0x0" metric="packetloss" msg="Health Check SLA status.
SLA failed due to being over the performance metric threshold."
```

- When SLA passes, SLA link status logs will be generated with interval `sla-pass-log-period`:

```
2: date=2021-04-20 time=23:18:12 eventtime=1618985892509027220 tz="-0700"
logid="0113022925" type="event" subtype="sdwan" level="information" vd="root"
logdesc="SDWAN SLA information" eventtype="SLA" healthcheck="test" slatargetid=1
interface="R150" status="up" latency="0.060" jitter="0.003" packetloss="0.000%"
inbandwidthavailable="0kbps" outbandwidthavailable="200.00Mbps"
bibandwidthavailable="200.00Mbps" inbandwidthused="1kbps" outbandwidthused="1kbps"
bibandwidthused="2kbps" slamap="0x1" msg="Health Check SLA status."
```

## SD-WAN related diagnose commands

This topic lists the SD-WAN related diagnose commands and related output.

### To check SD-WAN health-check status:

```
FGT # diagnose sys sdwan health-check
Health Check(server):
Seq(1 R150): state(alive), packet-loss(0.000%) latency(0.110), jitter(0.024) sla_map=0x0
Seq(2 R160): state(alive), packet-loss(0.000%) latency(0.068), jitter(0.009) sla_map=0x0

FGT # diagnose sys sdwan health-check
Health Check(ping):
Seq(1 R150): state(alive), packet-loss(0.000%) latency(0.100), jitter(0.017) sla_map=0x0
Seq(2 R160): state(dead), packet-loss(100.000%) sla_map=0x0

FGT # diagnose sys sdwan health-check google
Health Check(google):
Seq(1 R150): state(alive), packet-loss(0.000%) latency(0.081), jitter(0.019) sla_map=0x0
Seq(2 R160): state(alive), packet-loss(0.000%) latency(0.060), jitter(0.004) sla_map=0x0
```

### To check SD-WAN member status:

- When SD-WAN load-balance mode is *source-ip-based/source-dest-ip-based*.

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
weight: 0
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 0
```

- When SD-WAN load-balance mode is *weight-based*.

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
weight: 33
Session count: 15
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 66
Session count: 1
```

- When SD-WAN load-balance mode is *measured-volume-based*.

- Both members are under volume and still have room:

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
```

```
weight: 33
  Config volume ratio: 33, last reading: 218067B, volume room 33MB
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 66
  Config volume ratio: 66, last reading: 202317B, volume room 66MB
```

- Some members are overloaded and some still have room:

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
weight: 0
  Config volume ratio: 33, last reading: 1287767633B, overload volume 517MB
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 63
  Config volume ratio: 66, last reading: 1686997898B, volume room 63MB
```

- When SD-WAN load balance mode is *usage-based/spillover*.

- When no spillover occurs:

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
weight: 255
  Egress-spillover-threshold: 400kbit/s, ingress-spillover-threshold: 300kbit/s
  Egress-overbps=0, ingress-overbps=0
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 254
  Egress-spillover-threshold: 0kbit/s, ingress-spillover-threshold: 0kbit/s
  Egress-overbps=0, ingress-overbps=0
```

- When member has reached limit and spillover occurs:

```
FGT # diagnose sys sdwan member
Member(1): interface: R150, gateway: 10.100.1.1 2000:10:100:1::1, priority: 0 1024,
weight: 255
  Egress-spillover-threshold: 400kbit/s, ingress-spillover-threshold: 300kbit/s
  Egress-overbps=1, ingress-overbps=0
Member(2): interface: R160, gateway: 10.100.1.5 2000:10:100:1::5, priority: 0 1024,
weight: 254
  Egress-spillover-threshold: 0kbit/s, ingress-spillover-threshold: 0kbit/s
  Egress-overbps=0, ingress-overbps=0
```

- You can also use the `diagnose netlink dstmac list` command to check if you are over the limit.

```
FGT # diagnose netlink dstmac list R150
dev=R150 mac=00:00:00:00:00:00 vwl rx_tcp_mss=0 tx_tcp_mss=0 egress_overspill_
threshold=50000 egress_bytes=100982 egress_over_bps=1 ingress_overspill_
threshold=37500 ingress_bytes=40 ingress_over_bps=0 sampler_rate=0 vwl_zone_id=1
intf_qua=0
```

## To check SD-WAN service rules status:

- *Manual mode* service rules.

```
FGT # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members(2):
  1: Seq_num(1 R150), alive, selected
  2: Seq_num(2 R160), alive, selected
```

```
Dst address(1):
10.100.21.0-10.100.21.255
```

- **Auto mode service rules.**

```
FGT # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(auto), link-cost-factor(latency),
link-cost-threshold(10), health-check(ping)
Members(2):
1: Seq_num(2 R160), alive, latency: 0.066, selected
2: Seq_num(1 R150), alive, latency: 0.093
Dst address(1):
10.100.21.0-10.100.21.255
```

- **Priority mode service rules.**

```
FGT # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor
(latency), link-cost-threshold(10), health-check(ping)
Members(2):
1: Seq_num(2 R160), alive, latency: 0.059, selected
2: Seq_num(1 R150), alive, latency: 0.077, selected
Dst address(1):
10.100.21.0-10.100.21.255
```

- **Load-balance mode service rules.**

```
FGT # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(load-balance hash-mode=round-robin)
Members(2):
1: Seq_num(1 R150), alive, sla(0x1), gid(2), num of pass(1), selected
2: Seq_num(2 R160), alive, sla(0x1), gid(2), num of pass(1), selected
Dst address(1):
10.100.21.0-10.100.21.255
```

- **SLA mode service rules.**

```
FGT # diagnose sys sdwan service
Service(1): Address Mode(IPV4) flags=0x200
Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
Members(2):
1: Seq_num(1 R150), alive, sla(0x1), gid(0), cfg_order(0), cost(0), selected
2: Seq_num(2 R160), alive, sla(0x1), gid(0), cfg_order(1), cost(0), selected
Dst address(1):
10.100.21.0-10.100.21.255
```

### To check interface logs from the past 15 minutes:

```
FGT (root) # diagnose sys sdwan intf-sla-log R150
Timestamp: Wed Apr 21 16:58:27 2021, used inbandwidth: 655bps, used outbandwidth:
81655306bps, used bibandwidth: 81655961bps, tx bys: 3413479982bytes, rx bytes: 207769bytes.
Timestamp: Wed Apr 21 16:58:37 2021, used inbandwidth: 649bps, used outbandwidth:
81655540bps, used bibandwidth: 81656189bps, tx bys: 3515590414bytes, rx bytes: 208529bytes.
Timestamp: Wed Apr 21 16:58:47 2021, used inbandwidth: 655bps, used outbandwidth:
81655546bps, used bibandwidth: 81656201bps, tx bys: 3617700886bytes, rx bytes: 209329bytes.
Timestamp: Wed Apr 21 16:58:57 2021, used inbandwidth: 620bps, used outbandwidth:
```

```

81671580bps, used bibandwidth: 81672200bps, tx bys: 3719811318bytes, rx bytes: 210089bytes.
Timestamp: Wed Apr 21 16:59:07 2021, used inbandwidth: 620bps, used outbandwidth:
81671580bps, used bibandwidth: 81672200bps, tx bys: 3821921790bytes, rx bytes: 210889bytes.
Timestamp: Wed Apr 21 16:59:17 2021, used inbandwidth: 665bps, used outbandwidth:
81688152bps, used bibandwidth: 81688817bps, tx bys: 3924030936bytes, rx bytes: 211926bytes.
Timestamp: Wed Apr 21 16:59:27 2021, used inbandwidth: 671bps, used outbandwidth:
81688159bps, used bibandwidth: 81688830bps, tx bys: 4026141408bytes, rx bytes: 212726bytes.

```

### To check SLA logs in the past 10 minutes:

```

FGT (root) # diagnose sys sdwan sla-log ping 1
Timestamp: Wed Apr 21 17:10:11 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.079, jitter: 0.023, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:12 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.079, jitter: 0.023, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:12 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.081, jitter: 0.024, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:13 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.081, jitter: 0.025, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:13 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.082, jitter: 0.026, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:14 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.083, jitter: 0.026, packet loss: 0.000%.
Timestamp: Wed Apr 21 17:10:14 2021, vdom root, health-check ping, interface: R150, status:
up, latency: 0.084, jitter: 0.026, packet loss: 0.000%.

```

### To check Application Control used in SD-WAN and the matching IP addresses:

```

FGT # diagnose sys sdwan internet-service-app-ctrl-list
Gmail(15817 4294836957): 64.233.191.19 6 443 Thu Apr 22 10:10:34 2021
Gmail(15817 4294836957): 142.250.128.83 6 443 Thu Apr 22 10:06:47 2021
Facebook(15832 4294836806): 69.171.250.35 6 443 Thu Apr 22 10:12:00 2021
Amazon(16492 4294836342): 3.226.60.231 6 443 Thu Apr 22 10:10:57 2021
Amazon(16492 4294836342): 52.46.135.211 6 443 Thu Apr 22 10:10:58 2021
Amazon(16492 4294836342): 52.46.141.85 6 443 Thu Apr 22 10:10:58 2021
Amazon(16492 4294836342): 52.46.155.13 6 443 Thu Apr 22 10:10:58 2021
Amazon(16492 4294836342): 54.82.242.32 6 443 Thu Apr 22 10:10:59 2021
YouTube(31077 4294838537): 74.125.202.138 6 443 Thu Apr 22 10:06:51 2021
YouTube(31077 4294838537): 108.177.121.119 6 443 Thu Apr 22 10:08:24 2021
YouTube(31077 4294838537): 142.250.136.119 6 443 Thu Apr 22 10:02:02 2021
YouTube(31077 4294838537): 142.250.136.132 6 443 Thu Apr 22 10:08:16 2021
YouTube(31077 4294838537): 142.250.148.100 6 443 Thu Apr 22 10:07:28 2021
YouTube(31077 4294838537): 142.250.148.132 6 443 Thu Apr 22 10:10:32 2021
YouTube(31077 4294838537): 172.253.119.91 6 443 Thu Apr 22 10:02:01 2021
YouTube(31077 4294838537): 184.150.64.211 6 443 Thu Apr 22 10:04:36 2021
YouTube(31077 4294838537): 184.150.168.175 6 443 Thu Apr 22 10:02:26 2021
YouTube(31077 4294838537): 184.150.168.211 6 443 Thu Apr 22 10:02:26 2021
YouTube(31077 4294838537): 184.150.186.141 6 443 Thu Apr 22 10:02:26 2021
YouTube(31077 4294838537): 209.85.145.190 6 443 Thu Apr 22 10:10:36 2021
YouTube(31077 4294838537): 209.85.200.132 6 443 Thu Apr 22 10:02:03 2021

```

### To check the dynamic tunnel status:

```
# diagnose sys link-monitor interface <name> <name>_0
```

For example:

```
# diagnose sys link-monitor interface vd2-2
Interface(vd2-2): state(up, since Tue Jun 15 12:31:28 2021), bandwidth(up:1299bps,
down:0bps), session count(IPv4:2, IPv6:0), tx(2409919 bytes), rx(5292290 bytes), latency
(0.03), jitter(0.00), packet-loss(0.00).

# diagnose sys link-monitor interface vd2-2 vd2-2_0
Interface(vd2-2_0): state(up, since Tue Jun 15 15:21:52 2021), bandwidth(up:640bps,
down:0bps), session count(IPv4:0, IPv6:0), tx(102242 bytes), rx(16388 bytes), latency(0.03),
jitter(0.00), packet-loss(0.00).
```

### To check BGP learned routes and determine if they are used in SD-WAN service:

```
FGT # get router info bgp network 10.100.11.0/24
VRF 0 BGP routing table entry for 10.100.11.0/24
Paths: (2 available, best #2, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
    10.100.1.1
  Original VRF 0
  20 10
    10.100.1.1 from 10.100.1.1 (5.5.5.5)
      Origin incomplete metric 0, route tag 15, localpref 100, valid, external, best
      Community: 30:5
      Advertised Path ID: 2
      Last update: Thu Apr 22 10:27:27 2021

  Original VRF 0
  20 10
    10.100.1.5 from 10.100.1.5 (6.6.6.6)
      Origin incomplete metric 0, route tag 15, localpref 100, valid, external, best
      Community: 30:5
      Advertised Path ID: 1
      Last update: Thu Apr 22 10:25:50 2021

FGT # diagnose sys sdwan route-tag-list
Route-tag: 15, address: v4(1), v6(0)Last write/now: 6543391 6566007
  service(1), last read route-tag 15 at 6543420
Prefix(24): Address list(1):
  10.100.11.0-10.100.11.255 oif: 50 48

FGT # diagnose firewall proute list
list route policy info(vf=root):
id=2133196801(0x7f260001) vwl_service=1(DataCenter) vwl_mbr_seq=1 2 dscp_tag=0xff 0xff
flags=0x40 order-addr tos=0x00 tos_mask=0x00 protocol=0 sport=0-65535 iif=0 dport=1-65535
oif=48(R150) oif=50(R160)
destination(1): 10.100.11.0-10.100.11.255
source wildcard(1): 0.0.0.0/0.0.0.0
hit_count=0 last_used=2021-04-22 10:25:10
```

## SD-WAN bandwidth monitoring service

The bandwidth measuring tool is used to detect true upload and download speeds. Bandwidth tests can be run on demand or automated using a script to measure upload and download speeds up to 1 Gbps of throughput. This can be useful when configuring SD-WAN SLA and rules to balance SD-WAN traffic.

The speed test tool requires a valid SD-WAN Bandwidth Monitoring Service license.

The speed test tool is compatible with iperf3.6 with SSL support. It can test the upload bandwidth to the FortiGate Cloud speed test service. It can initiate the server connection and send download requests to the server. The tool can be run up to 10 times a day.

FortiGate downloads the speed test server list. The list expires after 24 hours. One of the speed test servers is selected, based on user input. The speed test runs, testing upload and download speeds. The test results are shown in the command terminal.

#### To download the speed test server list:

```
# execute speed-test-server download
Download completed.
```

#### To check the speed test server list:

```
# execute speed-test-server list
AWS_West valid
    Host: 34.210.67.183 5204 fortinet
    Host: 34.210.67.183 5205 fortinet
    Host: 34.210.67.183 5206 fortinet
    Host: 34.210.67.183 5207 fortinet
Google_West valid
    Host: 35.197.55.210 5204 fortinet
    Host: 35.197.55.210 5205 fortinet
    Host: 35.197.55.210 5206 fortinet
    Host: 35.197.55.210 5207 fortinet
    Host: 35.230.2.124 5204 fortinet
    Host: 35.230.2.124 5205 fortinet
    Host: 35.230.2.124 5206 fortinet
    Host: 35.230.2.124 5207 fortinet
    Host: 35.197.18.234 5204 fortinet
    Host: 35.197.18.234 5205 fortinet
    Host: 35.197.18.234 5206 fortinet
    Host: 35.197.18.234 5207 fortinet
```

#### To run the speed test:

You can run the speed test without specifying a server. The system will automatically choose one server from the list and run the speed test.

```
# execute speed-test auto
The license is valid to run speed test.
Speed test quota for 2/1 is 9
current vdom=root
Run in uploading mode.
Connecting to host 35.230.2.124, port 5206
[ 16] local 172.16.78.185 port 2475 connected to 35.230.2.124 port 5206
[ ID] Interval Transfer Bitrate Retr Cwnd
[ 16] 0.00-1.01 sec 11.0 MBytes 91.4 Mbits/sec 0 486 KBytes
[ 16] 1.01-2.00 sec 11.6 MBytes 98.4 Mbits/sec 0 790 KBytes
[ 16] 2.00-3.01 sec 11.0 MBytes 91.6 Mbits/sec 15 543 KBytes
[ 16] 3.01-4.01 sec 11.2 MBytes 94.2 Mbits/sec 1 421 KBytes
[ 16] 4.01-5.01 sec 11.2 MBytes 93.5 Mbits/sec 0 461 KBytes
- - - - -
[ ID] Interval Transfer Bitrate Retr
```

```
[ 16] 0.00-5.01 sec 56.1 MBytes 93.8 Mb/s 16 sender
[ 16] 0.00-5.06 sec 55.8 MBytes 92.6 Mb/s receiver

speed test Done.
Run in reverse downloading mode!
Connecting to host 35.230.2.124, port 5206
Reverse mode, remote host 35.230.2.124 is sending
[ 16] local 172.16.78.185 port 2477 connected to 35.230.2.124 port 5206
[ ID] Interval Transfer Bitrate
[ 16] 0.00-1.00 sec 10.9 MBytes 91.4 Mb/s
[ 16] 1.00-2.00 sec 11.2 MBytes 93.9 Mb/s
[ 16] 2.00-3.00 sec 11.2 MBytes 94.0 Mb/s
[ 16] 3.00-4.00 sec 11.2 MBytes 93.9 Mb/s
[ 16] 4.00-5.00 sec 10.9 MBytes 91.1 Mb/s
- - - - -
[ ID] Interval Transfer Bitrate Retr
[ 16] 0.00-5.03 sec 57.5 MBytes 95.9 Mb/s 40 sender
[ 16] 0.00-5.00 sec 55.4 MBytes 92.9 Mb/s receiver

speed test Done
```

### To run the speed test on a server farm or data center:

```
# execute speed-test auto AWS_West
The license is valid to run speed test.
Speed test quota for 2/1 is 8
current vdom=root
Run in uploading mode.
Connecting to host 34.210.67.183, port 5205
```

### To run the speed test on a local interface when there are multiple valid routes:

```
# execute speed-test port1 Google_West
The license is valid to run speed test.
Speed test quota for 2/1 is 6
bind to local ip 172.16.78.202
current vdom=root
Specified interface port1 does not comply with default outgoing interface port2 in routing
table!
Force to use the specified interface!
Run in uploading mode.
Connecting to host 35.197.18.234, port 5205
[ 11] local 172.16.78.202 port 20852 connected to 35.197.18.234 port 5205
[ ID] Interval Transfer Bitrate Retr Cwnd
[ 11] 0.00-1.01 sec 10.7 MBytes 89.0 Mb/s 0 392 KBytes
[ 11] 1.01-2.01 sec 10.5 MBytes 88.5 Mb/s 1 379 KBytes
[ 11] 2.01-3.01 sec 11.3 MBytes 94.5 Mb/s 0 437 KBytes
[ 11] 3.01-4.01 sec 11.2 MBytes 94.3 Mb/s 0 478 KBytes
[ 11] 4.01-5.00 sec 11.3 MBytes 95.2 Mb/s 0 503 KBytes
- - - - -
[ ID] Interval Transfer Bitrate Retr
[ 11] 0.00-5.00 sec 55.1 MBytes 92.3 Mb/s 1 sender
[ 11] 0.00-5.04 sec 54.5 MBytes 90.7 Mb/s receiver

speed test Done.
Run in reverse downloading mode!
```



```

Connecting to host 35.197.18.234, port 5205
Reverse mode, remote host 35.197.18.234 is sending
[ 11] local 172.16.78.202 port 20853 connected to 35.197.18.234 port 5205
[ ID] Interval Transfer Bitrate
[ 11] 0.00-1.00 sec 10.9 MBytes 91.1 Mbits/sec
[ 11] 1.00-2.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 2.00-3.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 3.00-4.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 4.00-5.00 sec 11.2 MBytes 94.0 Mbits/sec
- - - - -
[ ID] Interval Transfer Bitrate Retr
[ 11] 0.00-5.03 sec 57.4 MBytes 95.8 Mbits/sec 33 sender
[ 11] 0.00-5.00 sec 55.7 MBytes 93.4 Mbits/sec receiver

```

speed test Done.

### To add a script to run a speed test automatically once every 24 hours:

```

config system auto-script
    edit "speedtest"
        set interval 86400
        set repeat 0
        set start auto
        set script "
execute speed-test-server download
execute speed-test"
    next
end

```

### To view the results of the speed test script:

```
execute auto-script result speedtest
```

## Using SNMP to monitor health check

You can monitor SD-WAN health check related statistics using SNMP. The MIB file can be downloaded by going to *System > SNMP* and clicking *Download FortiGate MIB File*.

The following OIDs can be monitored:

Name	OID	Description
fgVWLHealthCheckLinkNumber	.1.3.6.1.4.1.12356.101.4.9.1	The number of health check links in fgVWLHealthCheckLinkTable
fgVWLHealthCheckLinkTable	.1.3.6.1.4.1.12356.101.4.9.2	SD-WAN health check statistics table.  This table has a dependent expansion relationship with fgVdTable. Only health checks with a configured member link are present in this table.

Name	OID	Description
fgVWLHealthCheckLinkTableEntry	.1.3.6.1.4.1.12356.101.4.9.2.1	SD-WAN health check statistics on a virtual domain.
fgVWLHealthCheckLinkID	.1.3.6.1.4.1.12356.101.4.9.2.1.1	SD-WAN health check link ID. Only health checks with configured member link are present in this table. Virtual-wan-link health check link IDs are only unique within a virtual domain.
fgVWLHealthCheckLinkName	.1.3.6.1.4.1.12356.101.4.9.2.1.2	Health check name.
fgVWLHealthCheckLinkSeq	.1.3.6.1.4.1.12356.101.4.9.2.1.3	SD-WAN member link sequence.
fgVWLHealthCheckLinkState	.1.3.6.1.4.1.12356.101.4.9.2.1.4	Health check state on a specific member link.
fgVWLHealthCheckLinkLatency	.1.3.6.1.4.1.12356.101.4.9.2.1.5	The average latency of a health check on a specific member link within last 30 probes, in float number.
fgVWLHealthCheckLinkJitter	.1.3.6.1.4.1.12356.101.4.9.2.1.6	The average jitter of a health check on a specific member link within last 30 probes, in float number.
fgVWLHealthCheckLinkPacketSend	.1.3.6.1.4.1.12356.101.4.9.2.1.7	The total number of packets sent by a health check on a specific member link.
fgVWLHealthCheckLinkPacketRecv	.1.3.6.1.4.1.12356.101.4.9.2.1.8	The total number of packets received by a health check on a specific member link.
fgVWLHealthCheckLinkPacketLoss	.1.3.6.1.4.1.12356.101.4.9.2.1.9	The packet loss percentage of a health check on a specific member link within last 30 probes, in float number.
fgVWLHealthCheckLinkVdom	.1.3.6.1.4.1.12356.101.4.9.2.1.10	The VDOM that the link monitor entry exists in. This name corresponds to the fgVdEntName used in fgVdTable.
fgVWLHealthCheckLinkBandwidthIn	.1.3.6.1.4.1.12356.101.4.9.2.1.11	The available bandwidth of incoming traffic detected by a health check on a specific member link, in Mbps,

Name	OID	Description
fgVWLHealthCheckLinkBandwidthOut	.1.3.6.1.4.1.12356.101.4.9.2.1.12	The available bandwidth of outgoing traffic detected by a health check on a specific member link, in Mbps.
fgVWLHealthCheckLinkBandwidthBi	.1.3.6.1.4.1.12356.101.4.9.2.1.13	The available bandwidth of bi-direction traffic detected by a health check on a specific member link, in Mbps.
fgVWLHealthCheckLinkIfName	.1.3.6.1.4.1.12356.101.4.9.2.1.14	SD-WAN member interface name.

## Example

This example shows a SD-WAN health check configuration and its collected statistics.

### To configure the SD-WAN health check:

```
config system sdwan
    set status enable
    config zone
        edit "virtual-wan-link"
        next
    end
    config members
        edit 1
            set interface "port1"
            set gateway 192.168.2.1
        next
        edit 2
            set interface "MPLS"
            set zone "SD-Zone2"
            set cost 20
        next
        edit 3
            set interface "port2"
        next
    end
    config health-check
        edit "pingserver"
            set server "8.8.8.8"
            set sla-fail-log-period 10
            set sla-pass-log-period 20
            set members 2 1 3
            config sla
                edit 1
                    set link-cost-factor jitter packet-loss
                    set packetloss-threshold 2
                next
            end
        next
    end
```

```

end
end

```

**The collected statistics:**

fgVWLHealthCheckLinkID	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1	1	2	3
fgVWLHealthCheckLinkName	.1.3.6.1.4.1.1.12356.101.4.9.2.1.2	pingserver	pingserver	pingserver
fgVWLHealthCheckLinkSeq	.1.3.6.1.4.1.1.12356.101.4.9.2.1.3	2	1	3
fgVWLHealthCheckLinkState	.1.3.6.1.4.1.1.12356.101.4.9.2.1.4	0	0	0
fgVWLHealthCheckLinkLatency	.1.3.6.1.4.1.1.12356.101.4.9.2.1.5	39.302	43.124	44.348
fgVWLHealthCheckLinkJitter	.1.3.6.1.4.1.1.12356.101.4.9.2.1.6	4.346	3.951	5.05
fgVWLHealthCheckLinkPacketSend	.1.3.6.1.4.1.1.12356.101.4.9.2.1.7	3657689	3657689	3657689
fgVWLHealthCheckLinkPacketRecv	.1.3.6.1.4.1.1.12356.101.4.9.2.1.8	3196258	3220258	3219466
fgVWLHealthCheckLinkPacketLoss	.1.3.6.1.4.1.1.12356.101.4.9.2.1.9	0	0	0
fgVWLHealthCheckLinkVdom	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1 0	root	root	root
fgVWLHealthCheckLinkBandwidthIn	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1 1	9999963	9999937	9999999
fgVWLHealthCheckLinkBandwidthOut	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1 2	9999981	9999953	9999998
fgVWLHealthCheckLinkBandwidthBi	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1 3	19999944	19999890	19999997
fgVWLHealthCheckLinkIfName	.1.3.6.1.4.1.1.12356.101.4.9.2.1.1 4	MPLS	port1	port2

# Zero Trust Network Access

This section includes information about ZTNA related new features:

- [Zero Trust Network Access introduction on page 911](#)
  - [Basic ZTNA configuration on page 913](#)
  - [Establish device identity and trust context with FortiClient EMS on page 925](#)
    - [ZTNA scalability support for concurrent endpoints on page 930](#)
  - [SSL certificate based authentication on page 932](#)
  - [Full versus simple ZTNA policies on page 934](#)
- [ZTNA advanced configurations on page 941](#)
- [ZTNA configuration examples on page 955](#)
- [ZTNA troubleshooting and debugging commands on page 1025](#)
- [ZTNA troubleshooting scenarios on page 1030](#)

## Zero Trust Network Access introduction


Zero Trust Network Access (ZTNA) is an access control method that uses client device identification, authentication, and Zero Trust tags to provide role-based application access. It gives administrators the flexibility to manage network access for On-net local users and Off-net remote users. Access to applications is granted only after device verification, authenticating the user's identity, authorizing the user, and then performing context based posture checks using Zero Trust tags.

Traditionally, a user and a device have different sets of rules for on-net access and off-net VPN access to company resources. With a distributed workforce and access that spans company networks, data centers, and cloud, managing the rules can become complex. User experience is also affected when multiple VPNs are needed to get to various resources. ZTNA can improve this experience.

## ZTNA application gateway and IP/MAC based access control

- ZTNA application gateway allows users to securely access resources through an SSL encrypted access proxy. This simplifies remote access by eliminating the use of VPNs.
- IP/MAC based access control combines IP/MAC with uses ZTNA tags for identification and security posture check to implement role-based zero trust access.

## ZTNA telemetry, tags, and policy enforcement

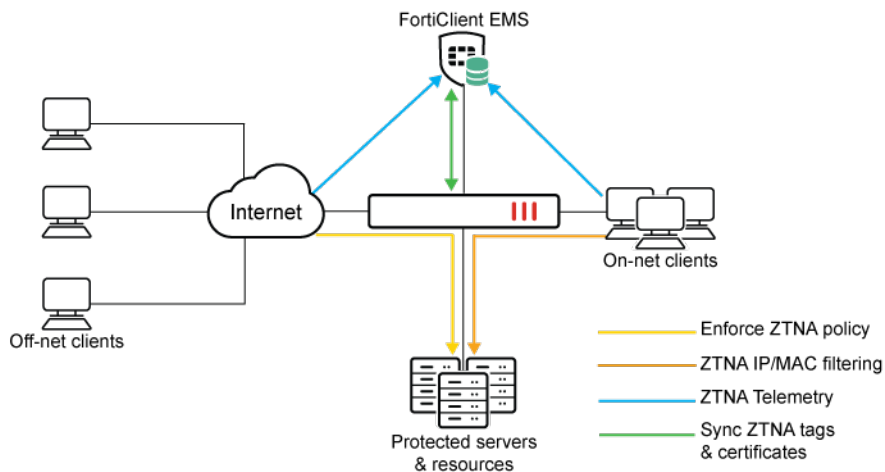


When On-net and Off-net FortiClient endpoints register to FortiClient EMS, device information, log on user information, and security posture are all shared over ZTNA telemetry with the EMS server. Clients also make a certificate signing request to obtain a client certificate from the EMS that is acting as the ZTNA Certificate Authority (CA).

Based on the client information, EMS applies matching Zero Trust tagging rules to tag the clients. These tags, and the client certificate information, are synchronized with the FortiGate in real-time. This allows the FortiGate to verify the client's identity using the client certificate, and grant access based on the ZTNA tags applied in the ZTNA policy.

For more information, see [Establish device identity and trust context with FortiClient EMS on page 925](#).

## Application gateway

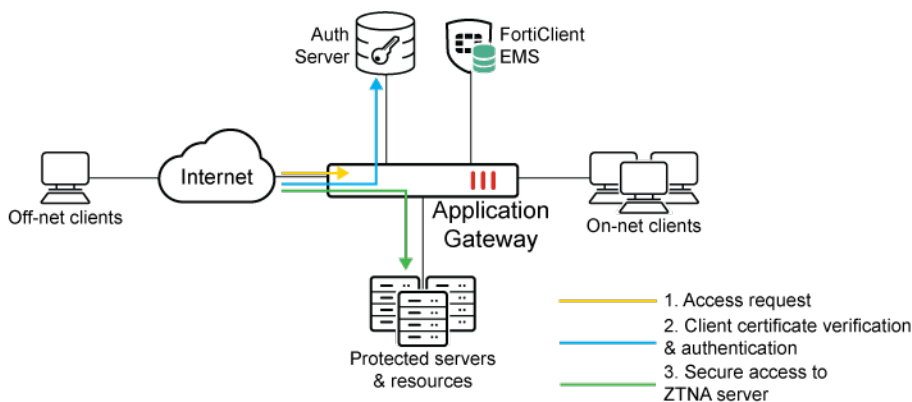

The FortiGate application gateway can proxy HTTP, SSH, RDP, SMB, FTP, and other TCP traffic over secure connections with the client. This enables seamless access from the client to the protected servers, without needing to form IPsec or SSL VPN tunnels.

## HTTPS access proxy

The FortiGate HTTPS access proxy works as a reverse proxy for the HTTP server. When a client connects to a webpage hosted by the protected server, the address resolves to the FortiGate's access proxy VIP. The FortiGate proxies the

connection and takes steps to authenticate the user. It prompts the user for their certificate on the browser, and verifies this against the ZTNA endpoint record that is synchronized from the EMS. If an authentication scheme, such as SAML authentication, is configured, the client is redirected to a captive portal for sign-on. If this passes, traffic is allowed based on ZTNA policies, and the FortiGate returns the webpage to the client.

For example configurations, see [ZTNA HTTPS access proxy example on page 956](#), [ZTNA HTTPS access proxy with basic authentication example on page 966](#), and [ZTNA application gateway with SAML authentication example on page 986](#).

## TCP forwarding access proxy (TFAP)

The TCP forwarding access proxy works as a special type of HTTPS reverse proxy. Instead of proxying traffic to a web server, TCP traffic is tunneled between the client and the access proxy over HTTPS, and forwarded to the protected resource. The FortiClient on the remote endpoint intercepts traffic destined for the protected resources and routes them to the FortiGate proxy gateway. An HTTPS connection is made to the FortiGate's access proxy VIP, where the client certificate is verified and access is granted based on the ZTNA policies. TCP traffic is forwarded from the FortiGate to the protected resource, and an end to end connection is established. To reduce overhead, you can disable access proxy encryption on the client, as some TCP protocols, like RDP, are already secure. The TCP forwarding access proxy supports UTM scanning and deep inspection for HTTP, HTTPS, SMTP, SMTPS, IMAP, IMAPS, POP3, POP3S, SMB, and CIFS.

For an example configuration, see [ZTNA TCP forwarding access proxy example on page 973](#).

## SSH access proxy

The SSH access proxy provides some benefits to proxying SSH connections over TFAP, including allowing SSH deep inspection, performing optional SSH host-key validation, and allowing one time user authentication to authenticate the ZTNA SSH access proxy connection and SSH server connection.

For an example configuration, see [ZTNA SSH access proxy example on page 979](#).

## Basic ZTNA configuration components

The basic components that are required to configure ZTNA application gateway on the FortiGate are:

1. FortiClient EMS fabric connector and ZTNA tags.
2. FortiClient EMS running version 7.0.0 or later or FortiClient EMS Cloud.
3. FortiClient running 7.0.0 or later.
4. ZTNA server
5. ZTNA policy
6. (Optional) User authentication
7. (Optional) HA configurations

For configuration details, see [Basic ZTNA configuration on page 913](#).

## Basic ZTNA configuration

To deploy a ZTNA application gateway, configure the following components on the FortiGate:

1. [Configure a FortiClient EMS connector on page 914](#)
2. [Configure a ZTNA server on page 916](#)
3. [Configure a ZTNA policy on page 919](#)
4. [Optional authentication on page 922](#)
5. [Optional HA configurations on page 924](#)



To configure ZTNA in the GUI, go to *System > Feature Visibility* and enable *Zero Trust Network Access*.



Desktop models that are below 100-series have ZTNA settings disabled by default. To configure ZTNA, enable the following:

```
config system global
    set proxy-and-explicit-proxy enable
end
```

## Configure a FortiClient EMS connector

### To add an on-premise FortiClient EMS server in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
  2. Set the *Status* to *Enabled*.
  3. Enter a name for the connector and the IP address or FQDN of the EMS.
  4. Click *OK*.
  5. A window appears to verify the EMS server certificate. Click *Accept*.
- See [FortiClient EMS](#) for more information.

### To add an on-premise FortiClient EMS server in the CLI:

```
config endpoint-control fctems
    edit <name>
        set server <server IP or domain>
    next
end
```

### To add FortiClient EMS Cloud in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
  2. Set the *Status* to *Enabled*.
  3. Set the *Type* to *FortiClient EMS Cloud*.
  4. Enter a name for the connector.
  5. Click *OK*. A window appears to verify the EMS server certificate.
  6. Click *Accept*.
- See [FortiClient EMS](#) for more information.



**To add FortiClient EMS Cloud in the CLI:**

```

config endpoint-control fcems
    edit <name>
        set fortinetone-cloud-authentication enable
        set certificate <string>
    next
end

```

**ZTNA tags**

After the FortiGate connects to the FortiClient EMS, it automatically synchronizes ZTNA tags. ZTNA tags are generated from tagging rules configured on the FortiClient EMS. These tagging rules are based on various posture checks that can be applied on the endpoints. See [Endpoint Posture Check Reference](#).

**To view the synchronized ZTNA tags in the GUI:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Tags* tab.
2. Hover the cursor over a tag name to view more information about the tag, such as its resolved addresses.

ZTNA Servers

ZTNA Tags

+ Create New Group

Edit


Delete

Search

Name	Provided By	Details	Type	Category	Detection Level	Comments	Ref.
ZTNA IP Critical-Vulnerability	EMS-FortiDemo		ZTNA IP Tag	Zero Trust			0
ZTNA IP Group-Membership-Critical-Vulnerability	EMS-FortiDemo		IP Tag	Zero Trust			0
ZTNA IP all_registered_clients	EMS-FortiDemo		IP Tag	Zero Trust			0
LOCAL TAG EMS_ALL_UNKNOW			IP Tag				0
LOCAL TAG EMS_ALL_UNMANAC			IP Tag				0
LOCAL TAG FCTEM8821000553			IP Tag				1
LOCAL TAG FCTEM8821000553			IP Tag				0
LOCAL TAG FCTEM8821000553_Low			ZTNA IP Tag				2
LOCAL TAG FCTEM8821000553_Medium			ZTNA IP Tag				1
LOCAL TAG FCTEM8821000553_Windows7			ZTNA IP Tag				1
LOCAL TAG FCTEM8821000553_Windows10			ZTNA IP Tag				0
LOCAL TAG FCTEM8821000553			ZTNA IP Tag				0
ZTNA MAC Critical-Vulnerability	EMS-FortiDemo		ZTNA MAC Tag	Zero Trust			0
ZTNA MAC Group-Membership-Domain-Users	EMS-FortiDemo		ZTNA MAC Tag	Zero Trust			0
ZTNA MAC all_registered_clients	EMS-FortiDemo		ZTNA MAC Tag	Zero Trust			0
LOCAL TAG MAC_FCTEM8821000553_Critical			ZTNA MAC Tag				0
LOCAL TAG MAC_FCTEM8821000553_High			ZTNA MAC Tag				0
LOCAL TAG MAC_FCTEM8821000553_Low			ZTNA MAC Tag				0
LOCAL TAG MAC_FCTEM8821000553_Medium			ZTNA MAC Tag				0
LOCAL TAG MAC_FCTEM8821000553_Windows7			ZTNA MAC Tag				0
LOCAL TAG MAC_FCTEM8821000553_Windows10			ZTNA MAC Tag				0

**To create a ZTNA tag group in the GUI:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Tags* tab.
2. Click *Create New Group*.
3. Enter a name for the group and select the group members.

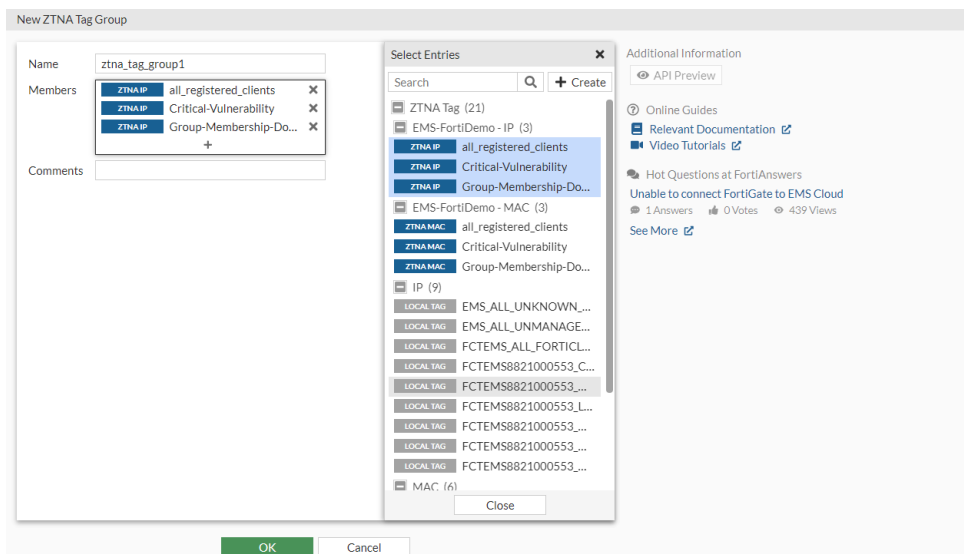

4. Click **OK**.

#### To view the synchronized ZTNA tags in the CLI:

```
# diagnose firewall dynamic address
# diagnose firewall dynamic list
```

#### To create a ZTNA tag group in the CLI:

```
config firewall addrgrp
  edit <group name>
    set category ztna-ems-tag
    set member <members>
  next
end
```

## Configure a ZTNA server

To configure a ZTNA server, define the access proxy VIP and the real servers that clients will connect to. The access proxy VIP is the FortiGate ZTNA gateway that clients make HTTPS connections to. The service/server mappings define the virtual host matching rules and the real server mappings of the HTTPS requests.

#### To create a ZTNA server for HTTPS access proxy in the GUI:

1. Go to *Policy & Objects* > *ZTNA* and select the *ZTNA Servers* tab.
2. Click *Create New*.
3. Enter a name for the server.
4. Select an external interface, enter the external IP address, and select the external port that the clients will connect to.
5. Select the *Default certificate*. Clients will be presented with this certificate when they connect to the access proxy VIP.

6. Add server mapping:

- a. In the *Service/server mapping* table, click *Create New*.
- b. Set *Service* to *HTTPS*.
- c. Set *Virtual Host* to *Any Host* or *Specify*.
  - *Any Host*: Any request that resolves to the access proxy VIP will be mapped to your real servers. For example, if both `www.example1.com` and `www.example2.com` resolve to the VIP, then both requests are mapped to your real servers.
  - *Specify*: Enter the name or IP address of the host that the request must match. For example, if `www.example1.com` is entered as the host, then only requests to `www.example1.com` will match.
- d. Configure the path as needed.

The path can be matched by substring, wildcard, or regular expression. For example, if the virtual host is specified as `www.example1.com`, and the path substring is `map1`, then `www.example1.com/map1` will be matched.

- e. If multiple servers will be configured, enable *Load balancing* and select an algorithm.
- f. Add a server:

- i. In the *Servers* table, click *Create New*.
    - ii. Enter the server IP address and port number.
    - iii. Set the server status.
    - iv. Click *OK*.
    - v. Add more servers as needed.
  - g. Click *OK*.
  - h. Add more server mappings as needed.
7. Click *OK*.

### To create a ZTNA server and access proxy VIP in the CLI:

#### 1. Configure an access proxy VIP:

```
config firewall vip
  edit <name>
    set type access-proxy
    set extip <external IP>
    set extintf <external interface>
    set server-type {https | ssh}
    set extport <external port>
    set ssl-certificate <certificate>
  next
end
```

#### 2. If the virtual host is specified, configure the virtual host:

```
config firewall access-proxy-virtual-host
  edit <auto generated when configured from GUI>
    set ssl-certificate <certificate>
    set host <host name or IP>
    set host-type {sub-string | wildcard}
  next
end
```

#### 3. Configure the server and path mapping:

```
config firewall access-proxy
  edit <name>
    set vip <vip name>
    set client-cert {enable | disable}
    set empty-cert-action {accept | block}
    set log-blocked-traffic {enable | disable}
    config api-gateway
      edit 1
        set url-map <mapped path>
        set service {http | https | tcp-forwarding | samlsp}
        set virtual-host <name of virtual-host if specified>
        set url-map-type {sub-string | wildcard | regex}
        config realservers
          edit 1
            set addr-type ip
            set ip <ip of real server>
            set port <port>
            set status {active | standby | disable}
            set health-check {enable | disable}
```

```

        set translate-host {enable | disable}
    next
end
set ldb-method static
set persistence none
set ssl-dh-bits 2048
set ssl-algorithm high
set ssl-min-version tls-1.1
set ssl-max-version tls-1.3
next
end
next
end

```

## Configure a ZTNA policy

A ZTNA policy is used to enforce zero trust role based access control by using ZTNA tags or tag groups to verify a device's security posture. A ZTNA policy can also utilize security profiles to protect this traffic.



In earlier versions, ZTNA rules were special proxy policies that controlled access to the ZTNA servers, and they could be configured from the *Policy & Objects > ZTNA > ZTNA Rules* tab. However, on this version and above, these special proxy policies are now configured from *Policy & Objects > Proxy Policy* page.

There are two ways to configure ZTNA rules in the GUI by using a full or simple ZTNA policy:

- Full ZTNA policy: The legacy method for configuring access-proxy policies.
- Simple ZTNA policy: A simplified method for configuring a ZTNA policy using firewall policies. This method covers most functionalities of a Full ZTNA policy, except it cannot control access based on destination interface or real server's destination address.

### To configure a simple ZTNA policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter a name for the ZTNA policy.
4. Set *Type* to *ZTNA*.
5. Select an *Incoming Interface* and *Source*.
6. Add the ZTNA tags or tag groups that are allowed access. If multiple tags are included, the matching method is set to *Any* by default.
7. Select the *ZTNA Server*.
8. Select the *Action*.

9. Configure the remaining options as needed.
10. Click OK.

### To configure a simple ZTNA policy in the CLI:

```
config firewall policy
  edit 1
    set name <ZTNA policy name>
    set srcintf <interface>
    set dstintf "any"
    set action accept
    set srcaddr "all"
    set dstaddr <access proxy vip>
    set ztna-ems-tag <ZTNA tags>
    set schedule "always"
    set nat enable
  next
end
```



The `dstintf` command cannot be modified.

### To configure a full ZTNA policy in the GUI:

1. Go to *System > Feature Visibility*.
2. Under *Security Features*, enabled *Explicit Proxy*.
3. Click *Apply*.
4. Go to *Policy & Objects > Proxy Policy*.

5. Click *Create New*.
6. Enter a name for the rule.
7. Select an *Incoming Interface* and *Source*.
8. Add the ZTNA tags or tag groups that are allowed access. If multiple tags are included, the matching method is set to *Any* by default.
9. Select the *Destination*.
10. Select the *ZTNA Server*.
11. Select the *Action*.

12. Configure the remaining options as needed.
13. Click *OK*.

### To configure a full ZTNA policy in the CLI:

```
config firewall proxy-policy
edit 1
set name <ZTNA policy name>
set proxy access-proxy
set access-proxy <access proxy>
set srcintf <interface>
set srcaddr "all"
set transparent {enable | disable}
set dstaddr "all"
set ztna-ems-tag <ZTNA tag(s)>
set ztna-tags-match-logic {or | and}
set action accept
set schedule "always"
set logtraffic all
set poolname <ip_pool>
set utm-status enable
```

```

    set ssl-ssh-profile <inspection profile>
next
end

```



The `transparent` and `poolname` settings cannot be enabled at the same time. Use one setting at a time when configuring ZTNA policies.

## Optional authentication

To configure authentication to the access proxy, you must configure an authentication scheme and authentication rule in the GUI or CLI. They are used to authenticate proxy-based policies, similar to configuring authentication for explicit and transparent proxy.

The authentication scheme defines the method of authentication that is applied. For ZTNA, basic HTTP and SAML methods are supported. Each method has additional settings to define the data source to check against. For example, with basic HTTP authentication, a user database can reference an LDAP server, RADIUS server, local database, or other supported authentication servers that the user is authenticated against.

The authentication rule defines the proxy sources and destinations that require authentication, and which authentication scheme to apply. For ZTNA, active authentication method is supported. The active authentication method references a scheme where users are actively prompted for authentication, like with basic authentication.

After the authentication rule triggers the method to authenticate the user, a successful authentication returns the groups that the user belongs to. In the ZTNA policy you can define a user or user group as the allowed source. Only users that match that user or group are allowed through the proxy policy.

### To configure a basic authentication scheme in the GUI:

1. Go to *Policy & Objects > Authentication Rules*.
2. Click *Create New > Authentication Scheme*.
3. Enter a name for the scheme.
4. Set the *Method* as *Basic*.
5. Select the *User database* as required.

6. Click *OK*.

### To configure a basic authentication scheme in the CLI:

```

config authentication scheme
    edit <name>
        set method basic
    end
end

```



```

        set user-database <auth server>
    next
end

```

### To configure an authentication rule in the GUI:

1. Go to *Policy & Objects > Authentication Rules*.
2. Click *Create New > Authentication Rule*.
3. Enter a name for the rule.
4. Select the *Source Address*.
5. Select the *Incoming interface*.
6. Select the *Authentication Scheme*.

7. Click *OK*.

### To configure an authentication rule in the CLI:

```

config authentication rule
    edit <name>
        set status enable
        set protocol http
        set srcintf <interface>
        set srcaddr <address>
        set dstaddr <address>
        set ip-based enable
        set active-auth-method <active auth scheme>
    next
end

```

### To apply a user group to a full ZTNA policy in the GUI:

1. Go to *Policy & Objects > Proxy Policy*.
2. Edit an existing rule, or click *Create New* to create a new rule.
3. Click in the *Source* field, select the *User* tab, and select the users and user groups that will be allowed access.
4. Configure the remaining settings as required.
5. Click *OK*.

### To apply a user group to a full ZTNA policy in the CLI:

```

config firewall proxy-policy
    edit <policy ID>

```

```
set name <ZTNA policy name>
set proxy access-proxy
set access-proxy <access proxy>
set srcintf <interface>
set srcaddr "all"
set dstaddr "all"
set ztna-ems-tag <ZTNA tags>
set ztna-tags-match-logic {or | and}
set action accept
set schedule "always"
set logtraffic all
set groups <user group>
set utm-status enable
set ssl-ssh-profile <inspection profile>
next
end
```

The authentication rule and scheme defines the method used to authenticate users. With basic HTTP authentication, a sign in prompt is shown after the client certificate prompt. After the authentication passes, the returned groups that the user is a member of are checked against the user groups that are defined in the ZTNA policy. If a group matches, then the user is allowed access after passing a posture check.

For basic setup information, see [ZTNA HTTPS access proxy with basic authentication example on page 966](#).

For advanced setup information, see [ZTNA application gateway with SAML authentication example on page 986](#) and [ZTNA application gateway with SAML and MFA using FortiAuthenticator example on page 990](#).

## Optional HA configurations

User information and TLS sessions are synchronized between HA members for ZTNA proxy sessions. When a failover occurs, the new primary unit will continue allowing sessions from the logged in users without asking for the client certificate and re-authentication again.

There are no special configurations for HA. Refer to [HA active-passive cluster setup on page 2352](#) and [HA active-active cluster setup on page 2354](#) to configure your HA cluster.

## HTTP access proxy vs TCP forwarding access proxy

In an HTTP access proxy connection, there is no configurations needed on the client endpoint. Users can simply access the HTTP website on a browser by entering its URL. For TCP forwarding access proxy, a ZTNA rule must be configured on the FortiClient endpoint. This rule instructs the FortiClient to listen to traffic to the destination address and port, and redirects the traffic to the FortiGate access proxy over HTTPS.


When deciding between using HTTP access proxy or TFAP for accessing web applications, consider the following.

- Use HTTP access proxy when the protected web application address can be resolved by the remote users publicly.
- Use TFAP when the protected application address can only be resolved on the internal network. TCP forwarding rules allow the FortiClient to intercept the request to the destination address and forward them to the application gateway.

For more information, see [ZTNA TCP forwarding access proxy example on page 973](#).

## Establish device identity and trust context with FortiClient EMS

How device identity is established through client certificates, and how device trust context is established between FortiClient, FortiClient EMS, and the FortiGate, are integral to ZTNA.

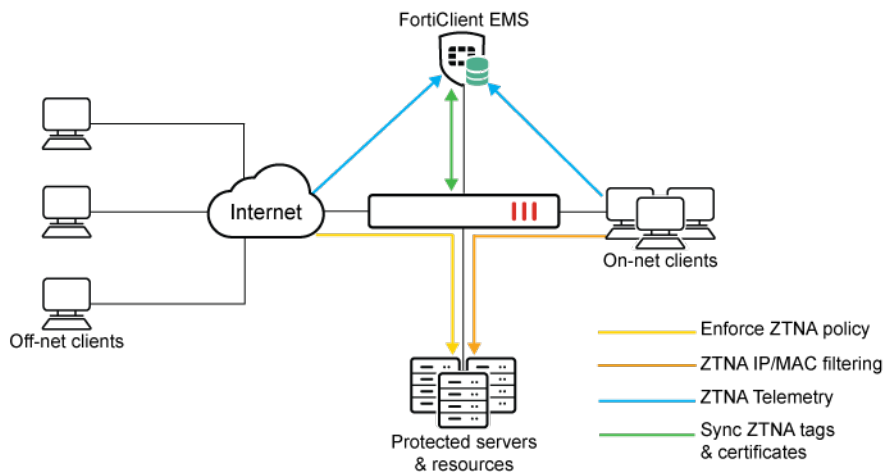

### Device roles

#### FortiClient

FortiClient endpoints provide the following information to FortiClient EMS when they register to the EMS:

- Device information (network details, operating system, model, and others)
- Logged on user information
- Security posture (On-net/Off-net, antivirus software, vulnerability status, and others)

It also requests and obtains a client device certificate from the EMS ZTNA Certificate Authority (CA) when it registers to FortiClient EMS. The client uses this certificate to identify itself to the FortiGate.

#### FortiClient EMS

FortiClient EMS issues and signs the client certificate with the FortiClient UID, certificate serial number, and EMS serial number. The certificate is then synchronized to the FortiGate. EMS also shares its EMS ZTNA CA certificate with the FortiGate, so that the FortiGate can use it to authenticate the clients.

FortiClient EMS uses zero trust tagging rules to tag endpoints based on the information that it has on each endpoint. The tags are also shared with the FortiGate. See [Endpoint Posture Check Reference](#) for a list of the endpoint posture checks that EMS can perform.



Each ZTNA tag creates two firewall addresses in all VDOMs on a FortiGate. One firewall address is the IP address, and the other firewall address is the MAC address. Because each FortiGate model has a global limit and a per-VDOM limit for the maximum number of supported firewall addresses, the FortiGate model determines the maximum number of ZTNA tags allowable by that unit, which is the maximum number of firewall address divided by two. For each FortiGate model's limit, see the Maximum Values table.

## FortiGate

The FortiGate maintains a continuous connection to the EMS server to synchronize endpoint device information, including primarily:

- FortiClient UID
- Client certificate SN
- EMS SN
- Device credentials (user/domain)
- Network details (IP and MAC address and routing to the FortiGate)

When a device's information changes, such as when a client moves from on-net to off-net, or their security posture changes, EMS is updated with the new device information and then updates the FortiGate. The FortiGate's WAD daemon can use this information when processing ZTNA traffic. If an endpoint's security posture change causes it to no longer match the ZTNA policy criteria on an existing session, then the session is terminated.

## Certificate management on FortiClient EMS

FortiClient EMS has a *default\_ZTNARootCA* certificate generated by default that the ZTNA CA uses to sign CSRs from the FortiClient endpoints. Clicking the refresh button revokes and updates the root CA, forcing updates to the FortiGate and FortiClient endpoints by generating new certificates for each client.

**FortiClient Endpoint Management Server**

Invitations 1 admin

Dashboard Endpoints Deployment & Installers Endpoint Policy & Components Endpoint Profiles Zero Trust Tags FortiGuard Outbreak Detect... Software Inventory Quarantine Management Administration User Management **System Settings** Log Settings FortiGuard Services EMS Server Certificates EMS Alerts Endpoint Alerts SMTP Server Custom Messages Feature Select

### EMS Settings

Expand All Collapse All

**Shared Settings**

Hostname: WIN-EMS.fortiad.info

Listen on IP: 10.88.0.1  
FQDN is required when listening to all IPs.

Use FQDN: ☒ ems.ztnademo.com

Remote HTTPS access: ☒  
Only enforced when Windows Firewall is running.

HTTPS port: 443

Pre-defined hostname: WIN-EMS,WIN-EMS.fortiad.info,10.88.0.1,10.88.0.3,10.88.0.4,10.88

Custom hostname: \*

Management IP and Port: Optional e.g. 443  
⚠ If this EMS server is set up to be accessed through a public proxy, please provide the public proxy's hostname:IP

Redirect HTTP request to HTTPS: ☒

Webserver certificate: ztna-wildcard.pem

Use Webserver certificate for Endpoint Control: ☒  
⚠ Enabling this feature will result in FortiClients older than 7.0.2 to lose connectivity with EMS. Ensure that all your FortiClients are 7.0.2 or higher. [More information](#)

EMS CA certificate (ZTNA): default\_ZTNARootCA.pem 2048-02-17  
Certificate was created on 2023-02-23T21:51:42.680


Reset Stalled Deployment Interval: 12 hours

Save



Do not confuse the EMS CA certificate (ZTNA) with the SSL certificate. The latter is the server certificate that is used by EMS for HTTPS access and fabric connectivity to the EMS server.

EMS can also manage individual client certificates. To revoke the current client certificate that is used by the endpoint: go to *Endpoint > All Endpoints*, select the client, and click *Action > Revoke Client Certificate*.

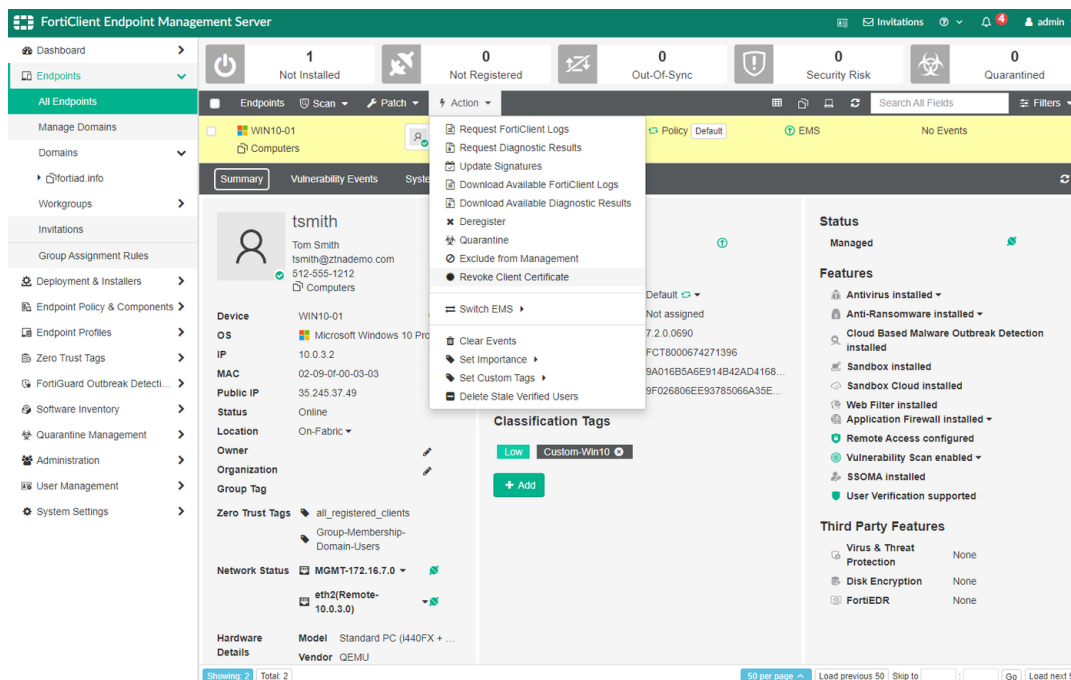


## Locating and viewing the client certificate on an endpoint

In Windows, FortiClient automatically installs certificates into the certificate store. The certificate information in the store, such as certificate UID and SN, should match the information on EMS and the FortiGate.


To locate certificates on other operating systems, consult the vendor documentation.

### To locate the client certificate and EMS ZTNA CA certificate on a Windows PC:

1. In the Windows search box, enter *user certificate* and click *Manage user certificates* from the results.

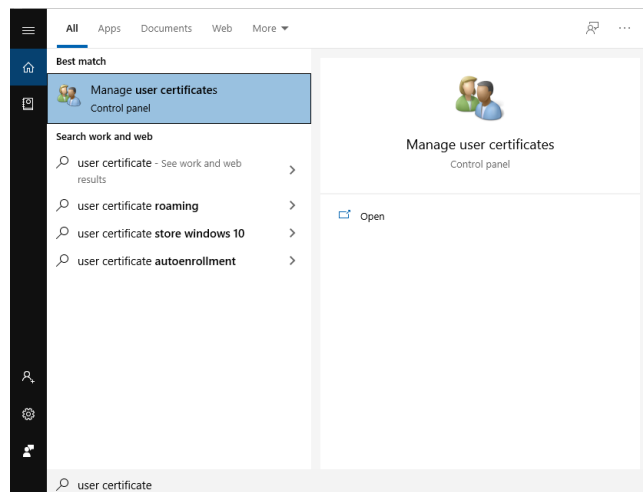


2. In the certificate manager, go to *Certificates - Current User > Personal > Certificates* and find the certificate that is issued by the FortiClient EMS.

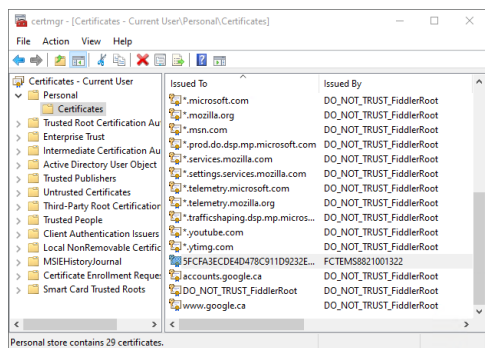


3. Right-click on it and select Properties.

4. The **General** tab shows the client certificate UID and the issue and expiry dates. The **Details** tab show the certificate SN.

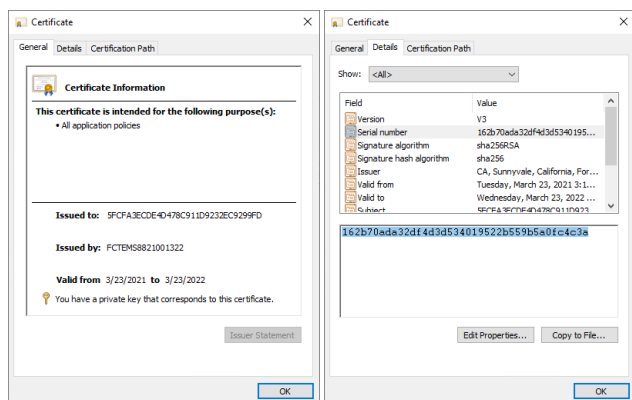

5. Go to the **Certificate Path** tab to see the full certificate chain.

6. Select the root CA and click **View Certificate** to view the details about the EMS ZTNA CA certificate.

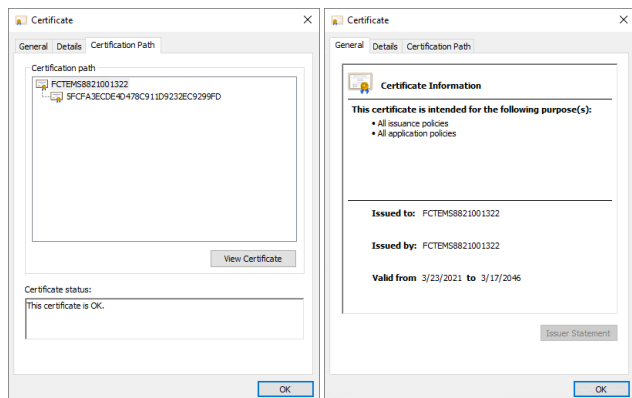

## Verifying that the client information is synchronized to the FortiGate

The following diagnose commands help to verify the presence of matching endpoint record, and information such as the client UID, client certificate SN, and EMS certificate SN on the FortiGate. If any of the information is missing or incomplete, client certificate authentication might fail because the corresponding endpoint entry is not found. More in-depth diagnosis would be needed to determine the reason for the missing records.

Command	Description
# diagnose endpoint record list <ip>	Show the endpoint record list. Optionally, filter by the endpoint IP address.
# diagnose wad dev query-by uid <uid> <ems sn> <ems tenant id>	Query from WAD diagnose command by UID.
# diagnose wad dev query-by ipv4 <ip>	Query from WAD diagnose command by IP address.
# diagnose test application fcnacd 7 # diagnose test application fcnacd 8	Check the FortiClient NAC daemon ZTNA and route cache.
#diagnose test application fcnacd 5	Force a sync with the FortiClient EMS server.

### To check the endpoint record list for IP address 10.0.3.2:

```
# diagnose endpoint record list 10.0.3.2
Record #1:
    IP Address = 10.0.3.2
    MAC Address = 02:09:0f:00:03:03
    MAC list =
    VDOM = (-1)
    EMS serial number: FCTEMS8822001975
    EMS tenant id: 00000000000000000000000000000000
    Client cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
    Public IP address: 34.23.223.220
    Quarantined: no
    Online status: online
    Registration status: registered
    On-net status: on-net
    Gateway Interface:
    FortiClient version: 7.2.0
    AVDB version: 1.0
    FortiClient app signature version: 23.544
    FortiClient vulnerability scan engine version: 2.34
    FortiClient UID: 9A016B5A6E914B42AD4168C066EB04CA
    ...
    Number of Routes: (0)
online records: 1; offline records: 0; quarantined records: 0; out-of-sync records: 0
```

### To check the tags that are processed by the WAD daemon for a particular device:

```
# diagnose wad dev query-by uid 9A016B5A6E914B42AD4168C066EB04CA FCTEMS8822001975
00000000000000000000000000000000
Attr of type=0, length=83, value(ascii)=9A016B5A6E914B42AD4168C066EB04CA
Attr of type=4, length=0, value(ascii)=
Attr of type=6, length=1, value(ascii)=true
Attr of type=5, length=40, value(ascii)=2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Attr of type=3, length=66, value(ascii)=ZTNA_Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=68, value(ascii)=ZTNA_Remote-Allowed_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
```

[illegible]

**To check the FortiNAC daemon cache:**

```
# diagnose test application fcnacd 7
Entry #1:
- UID: 9A016B5A6E914B42AD4168C066EB04CA
- EMS Fabric ID: FCTEMS8822001975:00000000000000000000000000000000
- Sys upd time: 2023-05-03 16:48:15.1107479
- Tag upd time: 2023-05-03 16:48:15.1107479
lls_idx_mask = 0x00000001
#ID:0
UID:      9A016B5A6E914B42AD4168C066EB04CA
State:    sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN:  2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online:   Yes
Route IP: 0.0.0.0
vfid:     0
has more: No
Tags:
idx:0, ttdl:1   name:Domain-Users
idx:1, ttdl:1   name:Remote-Allowed
idx:2, ttdl:1   name:Group-Membership-Domain-Users
idx:3, ttdl:2   name:Low
idx:4, ttdl:1   name:Malicious-File-Detected
idx:5, ttdl:2   name:Remote
idx:6, ttdl:1   name:all registered clients
```

## ZTNA scalability support for concurrent endpoints

ZTNA scalability supports up to 50 thousand concurrent endpoints. Communication between FortiOS and FortiClient EMS has efficient queries that request incremental updates. Retrieved device information can be written to the FortiClient NAC daemon cache.

FortiOS can receive tag information from the EMS common tags API. This feature requires FortiClient EMS 7.0.3 or later.

The APIs `api/v1/report/fct/uid_tags` and `api/v1/report/fct/tags` replace the API `api/v1/report/fct/host_tags`.



**To use the common tags API capability:****1. Enable the common tags API when connecting the EMS:**

```
config endpoint-control fctems
    edit "local.ems"
        set server "10.6.30.213"
        set capabilities fabric-auth silent-approval websocket websocket-malware push-
ca-certs common-tags-api
    next
end
```

**2. The FortiGate uses the new APIs to obtain device information from the EMS:**

```
[ec_ems_context_submit_work:414] Call submitted successfully.
    obj-id: 11, desc: REST API to get updates of tag endpoints., entry:
api/v1/report/fct/tags.
[ec_ems_context_submit_work:414] Call submitted successfully.
    obj-id: 12, desc: REST API to get updates of tags associated with FCT UID., entry:
api/v1/report/fct/uid_tags.
[ec_ez_worker_process:334] Processing call for obj-id: 11, entry:
"api/v1/report/fct/tags"
[dynamic_addr_ha_act:215] called (EMS SN N/A).
[dynamic_addr_ha_act:215] called (EMS SN N/A).
[ec_ez_worker_process:441] Call completed successfully.
    obj-id: 11, desc: "REST API to get updates of tag endpoints.", entry:
"api/v1/report/fct/tags".
[ec_ez_worker_process:334] Processing call for obj-id: 12, entry:
"api/v1/report/fct/uid_tags"
[ec_record_sync_tags_info_store:1419] Received 1 tags for
3D86DF70B85E16CBAD67908A897B4494 with sn FCTEMS8888888888
[ec_record_sync_tags_info_store:1419] Received 1 tags for
DA12930442F13F84D2441F03FCB6A10E with sn FCTEMS8888888888
[ec_record_sync_tags_info_store:1419] Received 1 tags for
25C59C275F257F4C5FBC7F6F5F56788E with sn FCTEMS8888888888
[ec_ez_worker_process:441] Call completed successfully.
    obj-id: 12, desc: "REST API to get updates of tags associated with FCT UID.", entry:
"api/v1/report/fct/uid_tags".
[ec_ems_context_submit_work:414] Call submitted successfully.
    obj-id: 7, desc: REST API to get updates about system info., entry:
api/v1/report/fct/sysinfo.
[ec_ems_context_submit_work:414] Call submitted successfully.
    obj-id: 11, desc: REST API to get updates of tag endpoints., entry:
api/v1/report/fct/tags.
[ec_ez_worker_process:334] Processing call for obj-id: 11, entry:
"api/v1/report/fct/tags"
[ec_ez_worker_process:441] Call completed successfully.
    obj-id: 11, desc: "REST API to get updates of tag endpoints.", entry:
"api/v1/report/fct/tags".
(.....)
```

**3. Confirm that the device information from the EMS is written to the FortiClient NAC daemon cache:**

```
# diagnose endpoint record list
...
    Avatar source: OS
    Phone number:
    Number of Routes: (1)
```

```

Gateway Route #0:
- IP:10.1.91.6, MAC: 4f:8d:c2:73:dd:fe, Indirect: no
- Interface:port2, VFID:1, SN: FG5H1E5999999999
online records: 37174; offline records: 0; quarantined records: 0; out-of-sync records:
0

```

#### 4. Use the tags that are pulled from the EMS in a firewall address:

```

config firewall address
  edit "FCTEMS8888888888_ZT_AD_MGMT"
    set type dynamic
    set sub-type ems-tag
    set obj-tag "ZT_AD_MGMT"
    set tag-type "zero_trust"
  next
end

```

#### 5. Check the tags' resolved IP and MAC addresses:

```

# diagnose firewall fqdn getinfo-ip FCTEMS8888888888_ZT_AD_MGMT
getinfo FCTEMS8888888888_ZT_AD_MGMT id:114 generation:106 count:187 data_len:6160 flag 0

# diagnose firewall fqdn getinfo-mac MAC_FCTEMS8888888888_ZT_AD_MGMT
getinfo MAC_FCTEMS8888888888_ZT_AD_MGMT id:163 generation:105 count:371 data_len:2226
flag 0

# diagnose firewall dynamic address FCTEMS8888888888_ZT_AD_MGMT
CMDB name: FCTEMS8888888888_ZT_AD_MGMT
TAG name: ZT_AD_MGMT
FCTEMS8888888888_ZT_AD_MGMT: ID(114)
  ADDR(10.1.10.4)
  (.....)
  ADDR(10.1.99.195)
Total IP dynamic range blocks: 190.
Total IP dynamic addresses: 281.

# diagnose firewall dynamic address MAC_FCTEMS8888888888_ZT_AD_MGMT
CMDB name: MAC_FCTEMS8888888888_ZT_AD_MGMT
TAG name: ZT_AD_MGMT
MAC_FCTEMS8888888888_ZT_AD_MGMT: ID(163)
  MAC(52:f1:9d:06:1c:db)
  MAC(4b:77:2b:db:82:15)
  MAC(df:6e:9e:d9:04:1e)
Total MAC dynamic addresses: 393.

```

## SSL certificate based authentication

A client certificate is obtained when an endpoint registers to EMS. FortiClient automatically submits a CSR request and the FortiClient EMS signs and returns the client certificate. This certificate is stored in the operating system's certificate store for subsequent connections. The endpoint information is synchronized between the FortiGate and FortiClient EMS. When an endpoint disconnects or is unregistered from EMS, its certificate is removed from the certificate store and revoked on EMS. The endpoint obtains a certificate again when it reconnected the EMS.

By default, client certificate authentication is enabled on the access proxy, so when the HTTPS request is received the FortiGate's WAD process challenges the client to identify itself with its certificate. The FortiGate makes a decision based on the following possibilities:

1. If the client responds with the correct certificate that the client UID and certificate SN can be extracted from:
  - If the client UID and certificate SN match the record on the FortiGate, the client is allowed to continue with the ZTNA proxy rule processing.
  - If the client UID and certificate SN do not match the record on the FortiGate, the client is blocked from further ZTNA proxy rule processing.
2. If the client cancels and responds with an empty client certificate:
  - If `empty-cert-action` is set to `accept`, the client is allowed to continue with ZTNA proxy rule processing.
  - If `empty-cert-action` is set to `block`, the client is blocked from further ZTNA proxy rule processing.

### To configure the client certificate actions:

```
config firewall access-proxy
  edit <name>
    set client-cert {enable | disable}
    set empty-cert-action {accept | block | accept-unmanageable}
  next
end
```


## Example

In this example, a client connects to *qa.fortinet.com* and is prompted for a client certificate.

- `client-cert` is set to `enable`, and `empty-cert-action` is set to `block`.
- The ZTNA server is configured, and a ZTNA policy is set to allow this client.
- The domain resolves to the FortiGate access proxy VIP.

### Scenario 1:

When prompted for the client certificate, the client clicks *OK* and provides a valid certificate that is verified by the FortiGate.

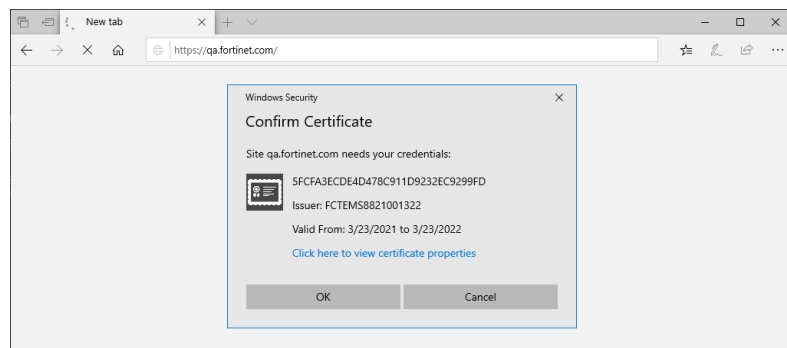


### Result:

The client passes SSL certificate authentication and is allowed to access the website.

## Scenario 2:

When prompted for the client certificate, the client clicks *Cancel*, resulting in an empty certificate response to the access proxy.

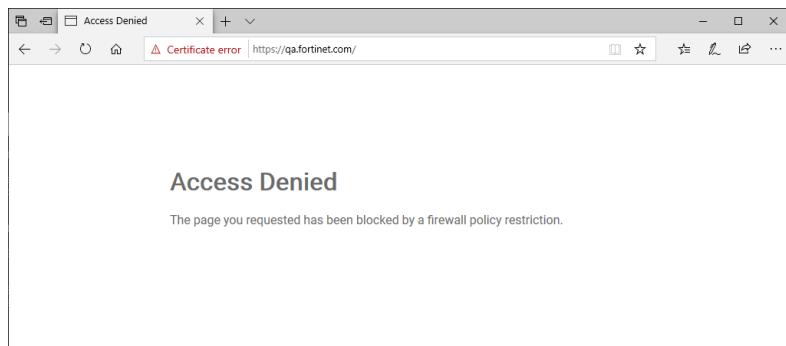

### Result:

Because the certificate response is empty and `empty-cert-action` is set to `block`, the WAD daemon blocks the connection.



Currently, the Microsoft Edge, Google Chrome, and Safari browsers are supported by ZTNA.

---

## Full versus simple ZTNA policies

There are two ways to configure ZTNA rules in the GUI by using a full or simple ZTNA policy.

### Full ZTNA policy

In a full ZTNA policy, the CLI configuration remains the same as previous versions. In the GUI, the *Policy & Objects > ZTNA > ZTNA Rules* tab has been removed. Administrators can configure ZTNA policies from the *Policy & Objects > Proxy Policy* page, and by setting the *Type* to *ZTNA*.

New Proxy Policy

Name

Type

Incoming Interface

Source

ZTNA Tag

Destination

ZTNA Server

Schedule

Action

Explicit Web

Transparent Web

FTP

ZTNA

+

+

+

+

always

ACCEPT

DENY

Firewall/Network Options

Protocol Options

Outgoing source IP

PROT default

Proxy Default

Original Source IP

Security Profiles

Use Security Profile Group

AntiVirus

Web Filter

Application Control

IPS

File Filter

DLP Profile

SSL Inspection

no-inspection

Logging Options

Log Allowed Traffic

Security Events

All Sessions

Comments

Write a comment...

0/1023

Enable this policy

OK

Cancel

Additional Information

API Preview

Online Guides

Relevant Documentation

Video Tutorials

Consolidated Policy Configuration

Hot Questions at FortiAnswers

Join the Discussion

## Simple ZTNA policy

In a simple ZTNA policy, a regular firewall policy is used for policy management. When creating a new firewall policy, administrators can configure a ZTNA policy by setting the *Type* to *ZTNA*.

New Policy

Name ?

Type Standard **ZTNA**

Incoming Interface

Source

ZTNA Tag

Destination

Schedule always

Action ACCEPT DENY

Firewall/Network Options

Protocol Options PROT default

Security Profiles

Use Security Profile Group ☐

AntiVirus ☐

Web Filter ☐

Video Filter ☐

DNS Filter ☐

Application Control ☐

IPS ☐

File Filter ☐

Email Filter ☐

DLP Profile ☐

SSL Inspection SSL no-inspection

Logging Options

Log Allowed Traffic ☒ Security Events All Sessions

Generate Logs when Session Starts ☐

Comments  0/1023

OK Cancel

Additional Information

API Preview

Online Guides

[Relevant Documentation](#)

[Video Tutorials](#)

[Consolidated Policy Configuration](#)

Hot Questions at FortiAnswers

[Is Web Cache on the GUI?](#)

1 Answers 0 Votes 252 Views

[See More](#)



A simple ZTNA policy cannot control access based on the destination interface or the real server's destination address. See the [Examples](#) section for detailed configurations.

## Authentication for ZTNA policies

Authentication remains largely the same between both ZTNA policy configuration modes. You can specify user groups under *Source* to define the groups in which the access control applies to. However, the underlying authentication schemes and rules must still be in place to direct the traffic to the ZTNA application gateway.

## Authentication for regular firewall policies

Authentication for regular firewall policies is traditionally handled by authd, which does not require an authentication scheme and rules to be configured in order to function. This enhancement allows authentication for regular firewall policies to be handled by WAD so that the authentication scheme and rules are used to determine the type of

authentication and the traffic that requires authentication. This option is disabled by default, but can be enabled as follows:

```
config firewall auth-portal
    set proxy-auth {enable | disable}
end
```

## Redirecting a simple ZTNA policy to a full ZTNA policy

An option is added so that after matching a simple ZTNA policy, the traffic can be redirected for a full ZTNA policy match. This setting can only be configured from the CLI, and it is disabled by default.

```
config firewall policy
    edit <id>
        set ztna-policy-redirect {enable | disable}
    next
end
```


For example, a client has both tag A and tag B. In the simple ZTNA policy, the client matches a policy that requires tag A for a posture check. If they are using the `ztna-policy-redirect` option, then it will also require a full ZTNA policy match.

If a full ZTNA policy allows either tag A or tag B or all traffic in general, then the traffic is allowed. Otherwise, if a full ZTNA policy explicitly denies one of the tags, the traffic will be denied.

If no full ZTNA policy is matched, then the traffic is implicitly denied.

## Examples

The following examples demonstrate how to configure a ZTNA policy using the full and simple ZTNA policy modes.

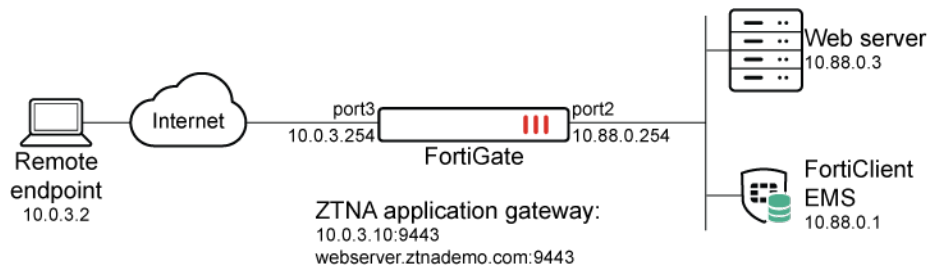

It is assumed that the following settings are already configured:

- EMS connection and EMS tags (Malicious-File-Detected and FortiAD.Info)
- ZTNA server configuration (ZTNA-webserver)
- Authentication scheme and rule

## Configuring a full ZTNA policy

**To configure a full ZTNA policy in the GUI:**

1. Go to *Policy & Objects > Proxy Policy* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	<i>ZTNA-webserver</i>
<b>Type</b>	<i>ZTNA</i>
<b>Incoming Interface</b>	<i>port3</i>
<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>Webserver1 (10.88.0.3/32)</i>
<b>ZTNA Server</b>	<i>ZTNA-webserver</i>
<b>Schedule</b>	<i>always</i>
<b>Action</b>	<i>ACCEPT</i>

3. Click **OK**.

### To configure a full ZTNA policy in the CLI:

```
config firewall proxy-policy
  edit 1
    set name "ZTNA-webserver"
    set proxy access-proxy
    set access-proxy "ZTNA-webserver"
    set srcintf "port3"
    set srcaddr "all"
    set dstaddr "Webserver1"
    set action accept
    set schedule "always"
  next
end
```

When traffic is allowed, the ZTNA logs show traffic passing through policy 1 on a policy called *ZTNA-webserver*, which is a proxy policy.

### To verify the traffic logs:

```
# execute log filter category traffic
# execute log filter field subtype ztna
# execute log display
9 logs found.
9 logs returned.
1: date=2023-03-06 time=20:16:11 eventtime=1678162572109525759 tz="-0800" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=28597
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=20140
srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="tcp/9443" proxyapptype="http"
proto=6 action="accept" policyid=1 policytype="proxy-policy" poluuid="1c0a04b8-bc85-51ed-
48ba-7d43279fb899" policyname="ZTNA-webserver" duration=3604 gatewayid=1 vip="ZTNA-
webserver" accessproxy="ZTNA-webserver" clientdevicemanageable="manageable" wanin=303150
rcvbyte=303150 wanout=3755 lanin=2813 sentbyte=2813 lanout=304697 appcat="unscanned"
```



## Configuring a simple ZTNA policy

### To configure a simple ZTNA policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	<i>ZTNA-webserver-fp</i>
<b>Type</b>	<i>ZTNA</i>
<b>Incoming Interface</b>	<i>port3</i>
<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>ZTNA-webserver</i>
<b>Schedule</b>	<i>always</i>
<b>Action</b>	<i>ACCEPT</i>

3. Click *OK*.

### To configure a simple ZTNA policy in the CLI:

```
config firewall policy
  edit 9
    set name "ZTNA-webserver-fp"
    set srcintf "port3"
    set dstintf "any"
    set action accept
    set srcaddr "all"
    set dstaddr "ZTNA-webserver"
    set schedule "always"
    set service "ALL"
  next
end
```

When traffic is allowed, the ZTNA logs show traffic passing through policy 9 on a policy called *ZTNA-webserver-fp*, which is a firewall policy.

### To verify the traffic logs:

```
# execute log filter category traffic
# execute log filter field subtype ztna
# execute log display
14 logs found.
10 logs returned.
```

```
1: date=2023-03-06 time=23:01:55 eventtime=1678172515724776640 tz="-0800" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=31687
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=28076
srcuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="tcp/9443" proxyapptype="http"
proto=6 action="accept" policyid=9 policytype="proxy-policy" poluid="1f1d5036-bcaa-51ed-
1d28-687edafe9439" polycyname="ZTNA-webserver-fp" duration=75 gatewayid=1 vip="ZTNA-
```

```
webserver" accessproxy="ZTNA-webserver" clientdevicemanageable="manageable" wanin=3445
rcvdbyte=3445 wanout=1189 lanin=2358 sentbyte=2358 lanout=4759 appcat="unscanned"
```

## Configuring a ZTNA simple policy with ZTNA tags and authentication

In this example, a simple ZTNA policy uses the FortiAD.Info tag for a posture check and authentication against a pre-configured Active Directory server where the user tsmith resides. The authentication scheme and rule have already been configured as follows:

```
config authentication scheme
    edit "ZTNA-Auth-scheme"
        set method basic
        set user-database "LDAP-fortiad"
    next
end

config authentication rule
    edit "ZTNA-Auth-rule"
        set srcintf "port3"
        set srcaddr "all"
        set active-auth-method "ZTNA-Auth-scheme"
    next
end
```

### To append ZTNA tag and authentication settings to the simple ZTNA policy:

1. Go to *Policy & Objects > Firewall Policy* and edit the *ZTNA-webserver-fp* policy.
2. For the *Source* field, click the + and add the user group named *LDAP-Remote-Allowed-Group*.
3. For the *ZTNA Tag* field, click the + and add the *FortiAD.Info* tag.
4. Click *OK*.

### To verify the configuration:

1. Connect to the web server from a client.
2. After selecting the client certificate, the browser will prompt for a username and password. Enter the username (tsmith) and their password.

Upon a successful authentication, the user will be able to access the web server.

3. On the FortiGate, verify that the logs for the allowed traffic show the user tsmith and the tag EMS1\_ZTNA\_FortiAD.Info:

```
# execute log filter field subtype ztna
# execute log display
18 logs found.
10 logs returned.
1: date=2023-03-06 time=23:25:23 eventtime=1678173923745891128 tz="-0800"
logid="0005000024" type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2
srcport=32017 srcintf="port3" srcintfrole="wan" dstcountry="Reserved"
srccountry="Reserved" dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz"
sessionid=29615 srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="tcp/9443"
proxyapptype="http" proto=6 action="accept" policyid=9 policytype="proxy-policy"
poluid="1f1d5036-bcaa-51ed-1d28-687edafe9439" policyname="ZTNA-webserver-fp"
duration=106 user="tsmith" group="LDAP-Remote-Allowed-Group" authserver="LDAP-fortiad"
gatewayid=1 vip="ZTNA-webserver" accessproxy="ZTNA-webserver"
```

```
clientdeviceid="9A016B5A6E914B42AD4168C066EB04CA" clientdevicemanageable="manageable"
clientdevicetags="MAC_EMS1_ZTNA_all_registered_clients/EMS1_ZTNA_all_registered_
clients/MAC_EMS1_ZTNA_FortiAD.Info/EMS1_ZTNA_FortiAD.Info" emsconnection="online"
wanin=301793 rcvdbyte=301793 wanout=3331 lanin=2877 sentbyte=2877 lanout=333000
fctuid="9A016B5A6E914B42AD4168C066EB04CA" appcat="unscanned"
```

## ZTNA advanced configurations

This section includes the following ZTNA advanced configurations:

- [Access control of unmanageable and unknown devices on page 941](#)
- [HTTP2 connection coalescing and concurrent multiplexing for ZTNA on page 948](#)
- [Mapping ZTNA virtual host and TCP forwarding domains to the DNS database on page 950](#)

## Access control of unmanageable and unknown devices

The ZTNA application gateway can determine whether a client device that does not have FortiClient installed is a mobile device that is considered unmanageable, or is not a mobile device that is considered unknown. The ZTNA application gateway tags the device as either `EMS_ALL_UNMANAGEABLE_CLIENTS` or `EMS_ALL_UNKNOWN_CLIENTS` respectively. The FortiGate WAD process achieves this by either matching device TLS fingerprints against a library or learning information from the HTTP User-Agent header if the `set user-agent-detect` setting is enabled.

### Configuring the ZTNA access proxy and proxy policy

The `EMS_ALL_UNMANAGEABLE_CLIENTS` and `EMS_ALL_UNKNOWN_CLIENTS` tags allow for ZTNA access control of unmanageable and unknown devices using a proxy policy. The `accept-unmanageable` option for the `empty-cert-action` setting allows unmanageable clients to continue ZTNA proxy rule processing.

```
config firewall access-proxy
  edit <name>
    set client-cert enable
    set user-agent-detect {enable | disable}
    set empty-cert-action {accept | block | accept-unmanageable}
  next
end
```

<code>user-agent-detect {enable   disable}</code>	Enable/disable detecting the device type by HTTP User-Agent if no client certificate is provided (default = enable).
<code>empty-cert-action {accept   block   accept-unmanageable}</code>	Set the action for an empty client certificate: <ul style="list-style-type: none"> <li>• <code>accept</code>: accept the SSL handshake if the client certificate is empty.</li> <li>• <code>block</code>: block the SSL handshake if the client certificate is empty.</li> <li>• <code>accept-unmanageable</code>: accept the SSL handshake only if the end point is unmanageable.</li> </ul>

The `user-agent-detect` and `empty-cert-action` settings can only be configured in the CLI.

```
config firewall proxy-policy
  edit <id>
```

```

        set ztna-ems-tag {EMS_ALL_UNMANAGEABLE_CLIENTS | EMS_ALL_UNKNOWN_CLIENTS}
    next
end

```

```

ztna-ems-tag {EMS_ALL_
  UNMANAGEABLE_CLIENTS
  | EMS_ALL_UNKNOWN_
  CLIENTS}

```

#### Set the EMS tag names:

- EMS\_ALL\_UNMANAGEABLE\_CLIENTS: match any device that is unmanageable.
- EMS\_ALL\_UNKNOWN\_CLIENTS: match any device that is not recognized.

Consider the following use cases.

- Case 1: if a client device sends a TLS client hello in a mobile pattern, then WAD will try to match its TLS fingerprint with a WAD original library and mark it with an EMS\_ALL\_UNMANAGEABLE\_CLIENTS tag.
- Case 2: if WAD cannot match the TLS fingerprint with an original library but user-agent-detect is enabled (under config firewall access-proxy), WAD will try to learn the device type from client request's User-Agent header. If it matches a mobile device, then it is still marked with an EMS\_ALL\_UNMANAGEABLE\_CLIENTS tag.
- Case 3: if WAD cannot match the TLS fingerprint with an existing original or temporary library, or cannot learn it from User-Agent header, or user-agent-detect is disabled, then it will mark the device as EMS\_ALL\_UNKNOWN\_CLIENTS.

In the access proxy settings, if empty-cert-action is set to accept-unmanageable, then only case 1 and 2 would go through the proxy policy. Case 3 would be denied, and a replacement message page would appear.

### To configure ZTNA policy access control of unmanageable devices:

#### 1. Configure the client certificate actions:

```

config firewall access-proxy
    edit "zt1"
        set vip "zt1"
        set client-cert enable
        set user-agent-detect enable
        set auth-portal disable
        set empty-cert-action accept
        set log-blocked-traffic disable
        set add-vhost-domain-to-dnsdb disable
        set decrypted-traffic-mirror ''
    next
end

```

#### 2. Configure the proxy policy with the ZTNA EMS tag to control device access:

```

config firewall proxy-policy
    edit 1
        set proxy access-proxy
        set access-proxy "zt1"
        set srcintf "port2" "ag2"
        set srcaddr "all"
        set dstaddr "all"
        set ztna-ems-tag "EMS_ALL_UNMANAGEABLE_CLIENTS"
    next
end

```

## Configuring dynamic address local tags

Like other ZTNA tags, `EMS_ALL_UNMANAGEABLE_CLIENTS` and `EMS_ALL_UNKNOWN_CLIENTS` are dynamic addresses on the FortiGate. The following diagnostic commands can be used to view local tag information:

- `diagnose firewall dynamic address`: a list of unmanageable and unknown clients' IP addresses associated with the `EMS_ALL_MANAGEABLE_CLIENTS` and `EMS_ALL_UNKNOWN_CLIENTS` dynamic addresses, respectively, is displayed.
- `diagnose user-device-store device memory list`: when device detection is enabled on a FortiGate interface that has a layer 2 connection to unmanageable and unknown device clients, then a client's device information is displayed.

### To verify the list of dynamic firewall addresses in the CLI:

```
(vdom1) # diagnose firewall dynamic address
List all dynamic addresses:
IP dynamic addresses in VDOM vdom1(vfid: 1):
...
CMDB name: EMS_ALL_UNMANAGEABLE_CLIENTS
EMS_ALL_UNMANAGEABLE_CLIENTS: ID(101)
    ADDR(10.1.100.22)
Total IP dynamic range blocks: 1.
Total IP dynamic addresses: 1.
CMDB name: EMS_ALL_UNKNOWN_CLIENTS
EMS_ALL_UNKNOWN_CLIENTS: ID(154)
Total IP dynamic range blocks: 0.
Total IP dynamic addresses: 0.
...
```

### To verify the client device information in the CLI:

```
(vdom1) # diagnose user-device-store device memory list
Record #1:
...
device_info
...
    'is_online' = 'true'
    'is_ems_registered' = 'false'
    'active_start_time' = '1668811449'
    'is_fortiguard_src' = 'false'
    'tags' = 'EMS_ALL_UNMANAGEABLE_CLIENTS'
...
interface_info
...
```

**To view the local tag information in the GUI:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Tags* tab.

ZTNA Servers

ZTNA Tags

+ Create New Group

Edit

Delete

+ Search

Name	Provided By	Details	Type	Category	Detection Level	Comments	Ref.
<div>ZTNA IP</div> Critical-Vulnerability	<div>EMS1</div>		ZTNA IP Tag	Zero Trust			0
<div>ZTNA IP</div> Group-Membership-Domain-Users	<div>EMS1</div>		ZTNA IP Tag	Zero Trust			2
<div>ZTNA IP</div> all_registered_clients	<div>EMS1</div>		ZTNA IP Tag	Zero Trust			1
<div>LOCAL TAG</div> EMS_ALL_UNKNOWN_CLIENTS			ZTNA IP Tag				0
<div>LOCAL TAG</div> EMS_ALL_UNMANAGEABLE_CLIENTS			ZTNA IP Tag				0
<div>LOCAL TAG</div> FCTEMS_ALL_FORTICLOUD_SERVERS			ZTNA IP Tag				0
<div>ZTNA MAC</div> Critical-Vulnerability	<div>EMS1</div>		ZTNA MAC Tag	Zero Trust			0
<div>ZTNA MAC</div> Group-Membership-Domain-Users	<div>EMS1</div>		ZTNA MAC Tag	Zero Trust			0
<div>ZTNA MAC</div> all_registered_clients	<div>EMS1</div>		ZTNA MAC Tag	Zero Trust			0

2. Hover over a tag to view the tooltip, which displays matched endpoints and resolved addresses.

**To apply a local tag in a full ZTNA policy:**

1. Go to *Policy & Objects > Proxy Policy*.
2. Click *Create New*, or select and edit an existing entry.
3. In the *ZTNA Tag* field, click the + to add tags. The local tags appear in the *IP* section.

**New Proxy Policy**

**Warning:** To create explicit web or FTP proxy policies, they must first be enabled under Network > Explicit Proxy.

Name:

Type: ☐ Explicit Web ☐ Transparent Web ☒ FTP ☒ ZTNA

Incoming Interface:

Source:

ZTNA Tag:

Destination:

ZTNA Server:

Schedule:

Action: ☒ ACCEPT ☐ DENY

**Firewall/Network Options**

Protocol Options:

Outgoing source IP: ☒ Proxy Default ☐ Original Source IP

**Security Profiles**

AntiVirus: ☐

Web Filter: ☐

Application Control: ☐

IPS: ☐

File Filter: ☐

SSL Inspection:

**Select Entries**

Search:

ZTNA TAG (9)

EMS1 - IP (3)

- ☒ ZTNA IP all\_registered\_clients
- ☒ ZTNA IP Critical-Vulnerability
- ☒ ZTNA IP Group-Membership-Domain-L

EMS1 - MAC (3)

- ☒ ZTNA MAC all\_registered\_clients
- ☒ ZTNA MAC Critical-Vulnerability
- ☒ ZTNA MAC Group-Membership-Domain-L

IP (3)

- ☒ LOCAL TAG EMS\_ALL\_UNKNOWN\_CLIEN
- ☒ LOCAL TAG EMS\_ALL\_UNMANAGEABLE
- ☒ LOCAL TAG FCTEMS\_ALL\_FORTICLOUD\_S

**Additional Information**

4. Configure the other settings as needed.
5. Click OK.

Local tag information is also available in the following GUI widgets and pages:

- **Dashboard > FortiClient widget**

**FortiClient**

Interface: ☒ port2

Status: ☒ Unregistered

1 Devices

Search:

Device	User	Address	FortiClient Version	Endpoint Tags
ztna-client	fosqa	10.1.100.22 2000:10:1:100:22	7.2.0	LOCAL TAG EMS_ALL_UNMANAGEABLE_CLIENTS

Updated: 14:56:11

- **Security Fabric > Asset Identity Center page**

Q Search							Latest ▾		Asset	Identity
Device	Software OS	Hardware	Address	Endpoint Tags		User	Status	IoT Vulnerabilities	Endpoint Vulnerabilities	
WIN_CLIENT	Microsoft	VMware, Inc.	10.1.100.214	ZTNA.IP	ZT_EMS_MGMT		Registered - Online			
				ZTNA.MAC	ZT_EMS_MGMT					
				ZTNA.IP	ZT_AD_MGMT					
				ZTNA.MAC	ZT_AD_MGMT					
				16						
AD-WIN-SERVER.qa.wangd.com	Windows	VMware	10.1.100.219				Online			
	Other identified device	VMware	10.1.100.11				Online			
ztna-client	Linux	VMware, Inc.	10.1.100.22 2000:10:1:100:22	LOCAL TAG	EMS_ALL_UNMANAGEABLE_CLIENTS		Unregistered		1	
FortiSwitch OS	FortiSwitch OS	Fortinet / FortiSwitch / 548D	10.10.90.90				Online			

5

## Viewing ZTNA traffic logs

ZTNA traffic logs include the following fields related to unmanageable and unknown devices.

- Client connection status with EMS server with possible values of unknown, offline, or online:
  - CLI = `emsconnection`
  - GUI = *EMS Connection*
- Device manageability status with possible values of unknown, manageable, or unmanageable:
  - CLI = `clientdevicemanageable`
  - GUI = *Client Device Manageable*

The device manageability status can have one of the following values:

- Unknown: traffic from a client with an unknown TLS fingerprint and where the user agent information is not available for learning.
- Manageable: traffic from a non-mobile device (platform or operating system), with a known TLS fingerprint, or where the user agent information is available for learning.
- Unmanageable: traffic from a mobile device with a known mobile TLS fingerprint or user agent information is available for learning.

### To view the ZTNA traffic logs in the CLI:

```
(vdom1)# execute log filter category 0
(vdom1)# execute log filter field subtype ztna
(vdom1)# execute log display
```

```
1: date=2022-11-18 time=14:23:57 eventtime=1668810238188622828 tz="-0800" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="vdom1" srcip=10.1.100.22 srcport=41400
srcintf="port2" srcintfrole="undefined" dstcountry="Reserved" srccountry="Reserved"
dstip=172.16.200.207 dstport=443 dstintf="port1" dstintfrole="undefined" sessionid=12147
service="HTTPS" proxyapptype="http" proto=6 action="accept" policyid=1 policytype="proxy-
policy" poluuid="03a79dd2-6775-51ed-19a0-444a0314f1a0" policyname="ztna_rule_mobile"
duration=0 gatewayid=1 vip="ztna_server" accessproxy="ztna_server" clientdeviceid="pf-
mobile;os-unknown;app-safari" clientdevicemanageable="unmanageable" clientdevicetags="EMS_
```



```
ALL_UNMANAGEABLE_CLIENTS" emsconnection="unknown" wanin=1884 rcvdbyte=1884 wanout=833
lanin=960 sentbyte=960 lanout=3046 fctuid="pf-mobile;os-unknown;app-safari"
appcat="unscanned"
```

```
3: date=2022-11-18 time=14:23:52 eventtime=1668810232937847134 tz="-0800" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="vdom1" srcip=10.1.100.22 srcport=46392
srcintf="port2" srcintfrole="undefined" dstcountry="Reserved" srccountry="Reserved"
dstip=172.16.200.209 dstport=443 dstintf="port1" dstintfrole="undefined" sessionid=12144
service="HTTPS" proxyapptype="http" proto=6 action="accept" policyid=2 policytype="proxy-
policy" poluid="141b7db8-6785-51ed-32a5-58d696e60e2d" duration=0 gatewayid=1 vip="ztna_
server2" accessproxy="ztna_server2" clientdeviceid="pf-pc;os-unknown;app-curl"
clientdevicemanageable="manageable" clientdevicetags="EMS_ALL_UNKNOWN_CLIENTS"
emsconnection="unknown" wanin=1907 rcvdbyte=1907 wanout=699 lanin=861 sentbyte=861
lanout=3089 fctuid="pf-pc;os-unknown;app-curl" appcat="unscanned"
```

```
5: date=2022-11-18 time=14:23:42 eventtime=166881022897968134 tz="-0800" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="vdom1" srcip=10.1.100.22 srcport=46390
srcintf="port2" srcintfrole="undefined" dstcountry="Reserved" srccountry="Reserved"
dstip=172.18.62.68 dstport=4443 dstintf="vdom1" dstintfrole="undefined" sessionid=12134
service="tcp/4443" proxyapptype="http" proto=6 action="deny" policyid=0 policytype="proxy-
policy" duration=0 vip="ztna_server2" accessproxy="ztna_server2"
clientdevicemanageable="unknown" msg="Denied: failed to match a proxy-policy" wanin=0
rcvdbyte=0 wanout=0 lanin=806 sentbyte=806 lanout=2661 appcat="unscanned" crscore=30
craction=131072 crlevel="high"
```

### To view the ZTNA traffic logs in the GUI:

1. Go to **Log & Report > ZTNA Traffic**.
2. Select an entry and click **Details**.
3. Check the **Client Device Manageable** and **EMS Connection** fields.

#	Date/Time	ZTNA Server	Service	Result	Policy ID	Client Device Manageable	EMS Connection	Action	Log Details
1	2022/11/18 14:23:57	ztna_server	HTTPS	✓ Accept (960 B / 1.88 kB)		unmanageable	Unknown	accept	<div>Other</div> <div>Log event original timestamp 1668810238188622800</div> <div>Timezone -0800</div> <div>Log ID 0005000024</div> <div>Type traffic</div> <div>Sub Type ztna</div> <div>Source Interface undefined</div> <div>Role undefined</div> <div>Destination Interface undefined</div> <div>Role undefined</div> <div>Proxy Application Category http</div> <div>Policy Name ztna_rule_mobile</div> <div>API Gateway ID 1</div> <div>VIP ztna_server</div> <div>ZTNA Server ztna_server</div> <div>Client Device Manageable unmanageable</div> <div>Client Device Tags LOCAL TAG EMS_ALL_UNMANAGEABLE_CLIENTS</div> <div>EMS Connection Unknown</div>
2	2022/11/18 14:23:57	ztna_server	tcp/4443	✓ Accept (611 B / 0 B)		unmanageable		accept	
3	2022/11/18 14:23:52	ztna_server2	HTTPS	✓ Accept (861 B / 1.91 kB)		manageable	Unknown	accept	
4	2022/11/18 14:23:52	ztna_server2	tcp/4443	✓ Accept (611 B / 0 B)		manageable		accept	
5	2022/11/18 14:23:42	ztna_server2	tcp/4443	✗ Deny	Implicit Deny	unknown		deny	
6	2022/11/18 14:23:42	ztna_server2	tcp/4443	✓ Accept (611 B / 0 B)		unknown		accept	

## HTTP2 connection coalescing and concurrent multiplexing for ZTNA

HTTP2 connection coalescing and concurrent multiplexing allows multiple HTTP2 requests to share the same TLS connection when the destination IP is the same, and the host names are compatible in the certificate. In ZTNA scenarios, the FortiGate application gateway may accept multiple HTTP2 requests to the same ZTNA server destined to different virtual hosts on the same real server. These HTTP2 requests can share the same TLS connection between the FortiGate and the real server so that the handshake does not need to be performed multiple times for multiple connections.



In order for the FortiGate to match the SNI (Server Name Indication), this SNI value must appear under the SAN extension on the server certificate. Configuring the SNI value under the CN alone will not work.


### To configure the ZTNA access proxy:

```
config firewall access-proxy
  edit <name>
    set http-supported-max-version {http1 | http2}
    set svr-pool-multiplex {enable | disable}
    set svr-pool-ttl <integer>
    set svr-pool-server-max-request <integer>
  next
end
```

http-supported-max-version {http1   http2}	Set the maximum supported HTTP version: <ul style="list-style-type: none"> <li>http1: support HTTP 1.1 and HTTP1.</li> <li>http2: support HTTP2, HTTP 1.1, and HTTP1 (default).</li> </ul>
svr-pool-multiplex {enable   disable}	Enable/disable server pool multiplexing. When enabled, share the connected server in HTTP, HTTPS, and web portal API gateway.
svr-pool-ttl <integer>	Set the time-to-live in the server pool for idle connections to servers (in seconds, 0 - 2147483647, default = 15).
svr-pool-server-max-request <integer>	Set the maximum number of requests that servers in server pool handle before disconnecting (0 - 2147483647, default = 0).

### Example

In this example, multiple clients submit requests in HTTP2. The requests hit the VIP address, and then FortiGate opens a session between itself (172.16.200.6) and the server (172.16.200.99). The coalescing occurs in this session as the multiple streams share the same TLS session to connect to the same destination server.

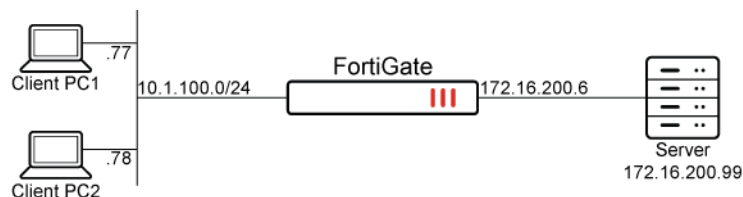

**To configure connection coalescing and concurrent multiplexing with ZTNA:****1. Configure the VIP:**

```
config firewall vip
    edit "vip-ztna"
        set type access-proxy
        set extip 10.1.100.223
        set extintf "port2"
        set server-type https
        set extport 443
        set ssl-certificate "Fortinet_SSL"
    next
end
```

**2. Configure the ZTNA server and path mapping:**

```
config firewall access-proxy
    edit "ztna"
        set vip "vip-ztna"
        set client-cert disable
        set svr-pool-multiplex enable
        set http-supported-max-version http2
        config api-gateway
            edit 1
                set url-map "/"a"
                set virtual-host "a.ftnt.com"
                config realservers
                    edit 1
                        set ip 172.16.200.99
                    next
                end
            next
            edit 2
                set url-map "/"b"
                set virtual-host "b.ftnt.com"
                config realservers
                    edit 1
                        set ip 172.16.200.99
                    next
                end
            next
        end
    next
end
next
end
```

**3. Configure the ZTNA policy:**

```
config firewall proxy-policy
    edit 3
        set proxy access-proxy
        set access-proxy "ztna"
        set srcintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set logtraffic all
```

```

set utm-status enable
set ssl-ssh-profile "deep-inspection-clone"
set av-profile "av"
next
end

```

4. Get the clients to access a.ftnt.com and b.ftnt.com. The clients share access with the same real server and certificate (CN=\*.ftnt.com). The FortiGate shares the first TLS connection with second TLS connection.
5. Verify the sniffer packet capture on the FortiGate server side. There is one client hello.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	172.16.200.6	172.16.200.99	TCP	74	6888 → 443 [SYN] Seq=0 Win=65535 Len=0 MSS=1460 SACK_PERM=1 TSval=806055 TSecr=0 WS=4096
2	0.000115	172.16.200.99	172.16.200.6	TCP	74	443 → 6888 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=834657448 TSecr=806055 WS=128
3	0.000127	172.16.200.6	172.16.200.99	TCP	66	6888 → 443 [ACK] Seq=1 Ack=1 Win=176128 Len=0 TSval=806055 TSecr=834657448
4	0.000162	172.16.200.6	172.16.200.99	TLSv1.2	344	Client Hello
5	0.000262	172.16.200.99	172.16.200.6	TCP	66	443 → 6888 [ACK] Seq=1 Ack=279 Win=64896 Len=0 TSval=834657448 TSecr=806055
6	0.006877	172.16.200.99	172.16.200.6	TLSv1.2	1514	Server Hello
7	0.006882	172.16.200.6	172.16.200.99	TCP	66	6888 → 443 [ACK] Seq=279 Ack=1449 Win=176128 Len=0 TSval=806055 TSecr=834657455
8	0.006883	172.16.200.99	172.16.200.6	TLSv1.2	825	Certificate, Server Key Exchange, Server Hello Done
9	0.006890	172.16.200.6	172.16.200.99	TCP	66	6888 → 443 [ACK] Seq=279 Ack=2208 Win=176128 Len=0 TSval=806055 TSecr=834657455
10	0.017158	172.16.200.6	172.16.200.99	TLSv1.2	215	Client Key Exchange, Change Cipher Spec
11	0.017171	172.16.200.6	172.16.200.99	TLSv1.2	111	Encrypted Handshake Message
12	0.017266	172.16.200.99	172.16.200.6	TCP	66	443 → 6888 [ACK] Seq=2208 Ack=473 Win=64768 Len=0 TSval=834657465 TSecr=806056
13	0.017686	172.16.200.99	172.16.200.6	TLSv1.2	117	Change Cipher Spec, Encrypted Handshake Message
14	0.017773	172.16.200.99	172.16.200.6	TLSv1.2	123	Application Data
15	0.022595	172.16.200.6	172.16.200.99	TCP	66	6888 → 443 [ACK] Seq=473 Ack=2316 Win=176128 Len=0 TSval=806057 TSecr=834657466
16	0.022582	172.16.200.6	172.16.200.99	TLSv1.2	177	Application Data
17	0.022590	172.16.200.6	172.16.200.99	TLSv1.2	145	Application Data
18	0.022686	172.16.200.99	172.16.200.6	TCP	66	443 → 6888 [ACK] Seq=2316 Ack=663 Win=64640 Len=0 TSval=834657471 TSecr=806057
19	0.022935	172.16.200.99	172.16.200.6	TLSv1.2	122	Application Data
20	0.022987	172.16.200.99	172.16.200.6	TLSv1.2	268	Application Data
21	0.022993	172.16.200.6	172.16.200.99	TCP	66	6888 → 443 [ACK] Seq=663 Ack=2566 Win=176128 Len=0 TSval=806057 TSecr=834657471
22	0.023285	172.16.200.6	172.16.200.99	TLSv1.2	108	Application Data
23	0.065172	172.16.200.99	172.16.200.6	TCP	66	443 → 6888 [ACK] Seq=2566 Ack=705 Win=64640 Len=0 TSval=834657513 TSecr=806057

6. Disable server pool multiplexing:

```

config firewall access-proxy
edit "ztna"
set vip "vip-ztna"
set svr-pool-multiplex disable
next
end

```

7. Verify the sniffer packet capture. This time, the FortiGate does not coalesce the TLS connection, so there are two client hellos.

No.	Time	Source	Destination	Protocol	Length	Info
27	3.209425	172.16.200.99	172.16.200.6	TLSv1.2	815	Certificate, Server Key Exchange, Server Hello Done
13	0.017192	172.16.200.99	172.16.200.6	TLSv1.2	119	Change Cipher Spec, Encrypted Handshake Message
32	3.219623	172.16.200.99	172.16.200.6	TLSv1.2	119	Change Cipher Spec, Encrypted Handshake Message
4	0.000160	172.16.200.6	172.16.200.99	TLSv1.2	346	Client Hello
23	3.201384	172.16.200.6	172.16.200.99	TLSv1.2	346	Client Hello
10	0.016623	172.16.200.6	172.16.200.99	TLSv1.2	217	Client Key Exchange, Change Cipher Spec
29	3.219146	172.16.200.6	172.16.200.99	TLSv1.2	217	Client Key Exchange, Change Cipher Spec
11	0.016635	172.16.200.6	172.16.200.99	TLSv1.2	113	Encrypted Handshake Message
30	3.219157	172.16.200.6	172.16.200.99	TLSv1.2	113	Encrypted Handshake Message
6	0.006115	172.16.200.99	172.16.200.6	TLSv1.2	1516	Server Hello
25	3.209418	172.16.200.99	172.16.200.6	TLSv1.2	1516	Server Hello

## Mapping ZTNA virtual host and TCP forwarding domains to the DNS database

When ZTNA application gateway is deployed on a FortiGate in the network, remote clients need to be able to reach the protected resources via their host addresses that resolves to the ZTNA application gateway's virtual IP. One way of registering these addresses is through the DNS server on the FortiGate.

While it is possible to manually manage the list of hosts and their mapped external VIP addresses on the FortiGate's DNS database or on an external DNS, there may be some drawbacks. One drawback is you may not want to expose the internal host names and addresses publicly. Secondly, you may not want to manually maintain the list of host addresses and mappings.

As such, there is a setting to automatically map a virtual host or TCP forwarding domain directly to the external VIP address of the ZTNA access proxy.

```

config firewall access-proxy
edit <name>

```

```

    set add-vhost-domain-to-dnsdb {enable | disable}
  next
end

```

```

add-vhost-domain-to-dnsdb
{enable | disable}

```

When enabled, all virtual hosts and TCP forwarding domains in the access proxy will be added under `config system dns-database`.



The mapping of one virtual host is restricted to one access proxy entry only. The same virtual host cannot be used in multiple access proxy entries.

Once enabled, the virtual host or TCP forwarding domain will be added to a `shadow-ztna` type DNS database. This type of DNS is hidden in the GUI and CLI, but is published through API to connecting ZTNA clients over a DoH/DoT tunnel. The FortiClient endpoint learns about these virtual host addresses and is able to redirect those traffic to the appropriate ZTNA access proxy.

The `shadow-ztna` option is a hidden setting under `dns-database`:

```

config system dns-database
  edit <name>
    set view {shadow | public | shadow-ztna}
  next
end

```

```

view {shadow | public |
shadow-ztna}


```

Set the zone view:

- `shadow`: shadow DNS zone to serve internal clients.
- `public`: public DNS zone to serve public clients.
- `shadow-ztna` (hidden): resolve to the ZTNA VIP. This implicit DNS zone is only visible to clients connecting to the ZTNA DoT/DoH tunnel.

## Example

In this example, the FortiGate has several ZTNA access proxies configured with different VIPs attached to each one.

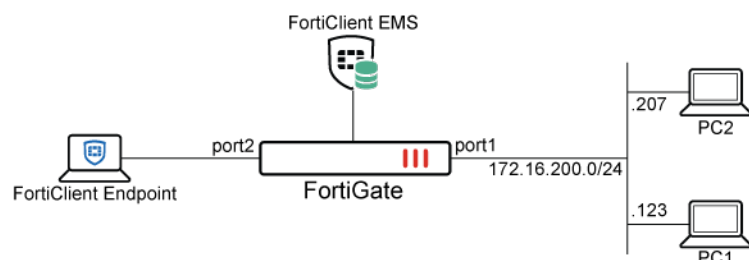

Different virtual hosts and TCP forwarding domains are configured on each access proxy:

Access proxy	VIP address	Virtual host	TCP forwarding domain
ztna	172.18.82.66	vh1: test1.test.com vh2: test2.test.com	
ztna_2	172.18.82.67	vh3: test3.test.com	

Access proxy	VIP address	Virtual host	TCP forwarding domain
ztna_3	172.18.82.68		test4.test.com

Consequently, DNS entries with shadow ZTNA view are added to the local DNS database.

From the FortiClient endpoint, users will be able to access the protected resources using these addresses and mapping:

- address -> access proxy address -> real server address
- https://test1.test.com -> https://172.18.82.66 -> https://172.16.200.207
- https://test2.test.com -> https://172.18.82.66 -> https://172.16.200.123
- https://test3.test.com -> https://172.18.82.67 -> https://172.16.200.207
- TCP app test4.test.com -> 172.18.82.68:443 -> TCP app server

### To configure the FortiGate:

#### 1. Configure three access proxy VIPs:

```
config firewall vip
    edit "ztna"
        set type access-proxy
        set extip 172.18.82.66
        set extintf "any"
        set server-type https
        set extport 443
        set ssl-certificate "Fortinet_SSL"
    next
    edit "ztna_2"
        set type access-proxy
        set extip 172.18.82.67
        set extintf "any"
        set server-type https
        set extport 443
        set ssl-certificate "Fortinet_SSL"
    next
    edit "ztna_3"
        set type access-proxy
        set extip 172.18.82.68
        set extintf "any"
        set server-type https
        set extport 443
        set ssl-certificate "Fortinet_SSL"
    next
end
```

#### 2. Configure three virtual hosts to be used in the ZTNA access proxies:

```
config firewall access-proxy-virtual-host
    edit "vh1"
        set ssl-certificate "*.test.com"
        set host "test1.test.com"
    next
    edit "vh2"
        set ssl-certificate "*.test.com"
        set host "test2.test.com"
    next
end
```

```

    edit "vh3"
        set ssl-certificate "*.test.com"
        set host "test3.test.com"
    next
end

```

### 3. Configure the first access proxy, and map virtual hosts vh1 and vh2 to different services:

```

config firewall access-proxy
    edit "ztna"
        set vip "ztna"
        set add-vhost-domain-to-dnsdb enable
        config api-gateway
            edit 1
                set virtual-host "vh1"
                config realservers
                    edit 1
                        set addr-type fqdn
                        set address "fqdn4"
                    next
                    edit 2
                        set ip 172.16.200.207
                    next
                end
            next
        edit 2
            set service http
            set virtual-host "vh2"
            config realservers
                edit 1
                    set ip 172.16.200.123
                next
            end
        next
    end
next
end

```

### 4. Configure the second access proxy, and map one service to virtual host vh3.

```

config firewall access-proxy
    edit "ztna_2"
        set vip "ztna_2"
        set add-vhost-domain-to-dnsdb enable
        config api-gateway
            edit 1
                set virtual-host "vh3"
                config realservers
                    edit 1
                        set ip 172.16.200.207
                    next
                end
            next
        end
    end
next
end

```

Since `add-vhost-domain-to-dnsdb` is enabled, a virtual host used in the other access proxy cannot be mapped to this access proxy.

5. Configure the third access proxy for TCP forwarding:

```
config firewall access-proxy
    edit "ztna_3"
        set vip "ztna_3"
        set add-vhost-domain-to-dnsdb enable
    config api-gateway
        edit 2
            set url-map "/tcp"
            set service tcp-forwarding
            config realservers
                edit 1
                    set domain "test4.test.com"
                next
            end
        next
    end
next
end
next
end
```

6. The virtual host and TCP forwarding domains are mapped to their corresponding access proxy VIP under the local DNS database. Each will appear as a shadow ZTNA entry.



These settings cannot be configured or edited in the GUI or CLI.

---

```
show full-configuration system dns-database
config system dns-database
    edit "test1.test.com"
        set domain "test1.test.com"
        set view shadow-ztna
        config dns-entry
            edit 1
                set ttl 86400
                set hostname "test1.test.com"
                set ip 172.18.82.66
            next
        end
        set primary-name "test1.test.com"
        set contact "fgt-ztna"
    next
    edit "test2.test.com"
        set domain "test2.test.com"
        set view shadow-ztna
        config dns-entry
            edit 1
                set ttl 86400
                set hostname "test2.test.com"
                set ip 172.18.82.66
            next
        end
        set primary-name "test2.test.com"
```



```
        set contact "fgt-ztna"
    next
    edit "test3.test.com"
        set domain "test3.test.com"
        set view shadow-ztna
        config dns-entry
            edit 1
                set ttl 86400
                set hostname "test3.test.com"
                set ip 172.18.82.67
            next
        end
        set primary-name "test3.test.com"
        set contact "fgt-ztna"
    next
    edit "test4.test.com"
        set domain "test4.test.com"
        set view shadow-ztna
        config dns-entry
            edit 1
                set ttl 86400
                set hostname "test4.test.com"
                set ip 172.18.82.68
            next
        end
        set primary-name "test4.test.com"
        set contact "fgt-ztna"
    next
end
```

7. Once a FortiClient endpoint registers to EMS and is able to retrieve the list of hosts from the FortiGate ZTNA service portal, it will be able to reach each of the hosts test1, test2, test3, and test4.test.com.


## ZTNA configuration examples

This section includes the following ZTNA configuration examples:

- [ZTNA HTTPS access proxy example on page 956](#)
- [ZTNA HTTPS access proxy with basic authentication example on page 966](#)
- [ZTNA TCP forwarding access proxy example on page 973](#)
- [ZTNA SSH access proxy example on page 979](#)
- [ZTNA application gateway with SAML authentication example on page 986](#)
- [ZTNA application gateway with SAML and MFA using FortiAuthenticator example on page 990](#)
- [ZTNA IP MAC based access control example on page 1006](#)
- [ZTNA IPv6 examples on page 1013](#)
- [ZTNA Zero Trust application gateway example on page 1019](#)
- [ZTNA access proxy with KDC to access shared drives on page 1020](#)

## ZTNA HTTPS access proxy example

In this example, an HTTPS access proxy is configured to demonstrate its function as a reverse proxy on behalf of the web server it is protecting. It verifies user identity, device identity, and trust context, before granting access to the protected source.

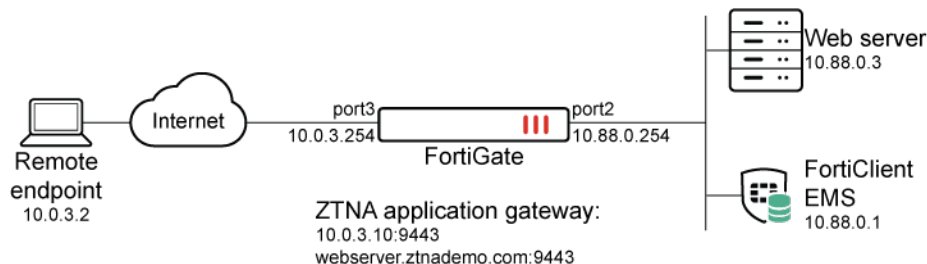

This example shows access control that allows or denies traffic based on ZTNA tags. Traffic is allowed when the FortiClient endpoint is tagged as *Low Importance* using Classification tags, and denied when the endpoint is tagged with *Malicious-File-Detected*.

This example assumes that the FortiGate EMS fabric connector is already successfully connected.




To configure ZTNA in the GUI, go to *System > Feature Visibility* and enable *Zero Trust Network Access*.

### To configure a Zero Trust tagging rule on the FortiClient EMS:

1. Log in to the FortiClient EMS.
2. Go to *Zero Trust Tags > Zero Trust Tagging Rules*, and click *Add*.
3. In the *Name* field, enter *Malicious-File-Detected*.
4. In the *Tag Endpoint As* dropdown list, select *Malicious-File-Detected*.

EMS uses this tag to dynamically group together endpoints that satisfy the rule, as well as any other rules that are configured to use this tag.


5. Click *Add Rule* then configure the rule:
  - a. For OS, select *Windows*.
  - b. From the *Rule Type* dropdown list, select *File* and click the + button.
  - c. Enter a file name, such as *C:\virus.txt*.
  - d. Click *Save*.

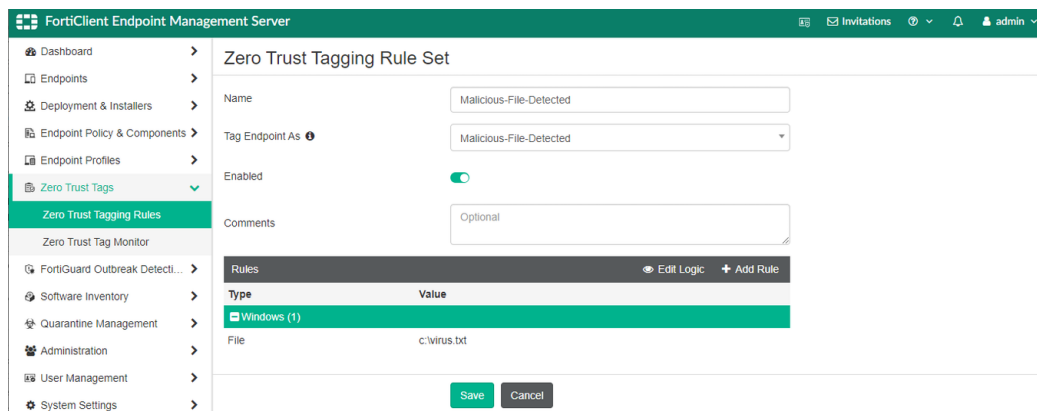

6. Click **Save**.

**To configure FortiClient EMS to share classification tags:**

1. Go to *Administration > Fabric Devices*.
2. Select the FortiGate device.
3. Click *Edit*.
4. Under *Tag Types Being Shared*, add *Classification Tags*.

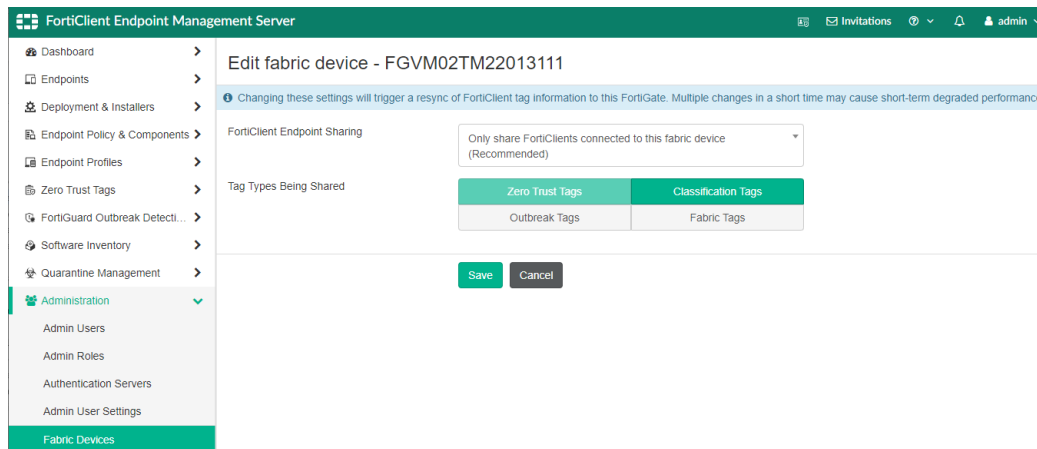

5. Click **Save**.

**To configure a ZTNA server for HTTPS access proxy in the GUI:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Servers* tab.
2. Click *Create New*.
3. Set *Name* to *ZTNA-webserver*.
4. Configure the network settings:
  - a. Set *External interface* to *port3*.
  - b. Set *External IP* to *10.0.3.10*.
  - c. Set *External port* to *9443*.
5. Select the *Default certificate*. Clients will be presented with this certificate when they connect to the access proxy VIP.
6. Add server mapping:

- a. In the *Service/server mapping* table, click *Create New*.
- b. Set *Service* to *HTTPS*.
- c. Set *Virtual Host* to *Any Host*.
- d. Configure the path as needed. For example, to map to *webserver.ztnademo.com/fortigate*, enter */fortigate*.
- e. Add a server:
  - i. In the *Servers* table, click *Create New*.
  - ii. Set *IP* to *10.88.0.3*.
  - iii. Set *Port* to *9443*.
  - iv. Click *OK*.

New Service/Server Mapping

Type: IPv4

Service: HTTP HTTPS TCP Forwarding

Virtual Host: Any Host Specify

Match path by: Substring Wildcard Regular Expression

Path: /

Servers

Load balancing: ☐

Address	Port	Status
10.88.0.3	9443	Active

OK Cancel

- f. Click *OK*.

New ZTNA Server

Type: IPv4

Name: ZTNA-webserver

Comments:

Network

External Interface: WAN (port3)

External IP: 10.0.3.10

External port: 9443

SAML: ☐

Services and Servers

Default certificate: ztna-wildcard

Service/server mapping

Service	URL	# Real Servers
HTTPS	/	1

OK Cancel

7. Click *OK*.

**To configure simple ZTNA policies to allow and deny traffic based on ZTNA tags in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Create a rule to deny traffic:

- a. Click *Create New*.
- b. Set *Name* to *ZTNA-Deny-malicious*.
- c. Set *Type* to *ZTNA*.
- d. Set *Incoming Interface* to *port3*.
- e. Set *Source* to *all*.
- f. Add the ZTNA tag *Malicious-File-Detected*.  
This tag is dynamically retrieved from EMS when you first created the Zero Trust Tagging Rule.
- g. Select the ZTNA server *ZTNA-webserver*.
- h. Set *Action* to *DENY*.
- i. Enable *Log Violation Traffic*.

The screenshot shows the 'Create New Policy' window. The 'Name' field is 'ZTNA-Deny-Malicious'. The 'Type' is 'ZTNA'. The 'Incoming Interface' is 'WAN (port3)'. The 'Source' is 'all'. The 'ZTNA Tag' is 'ZTNA Malicious-File-Detected'. The 'ZTNA Server' is 'ZTNA-webserver'. The 'Schedule' is 'always'. The 'Action' is 'DENY'. The 'Log Violation Traffic' checkbox is checked. The 'Comments' field is empty. The 'Enable this policy' checkbox is checked. The 'OK' button is highlighted in green.

- j. Click *OK*.
3. Create a rule to allow traffic:
    - a. Click *Create New*.
    - b. Set *Name* to *ZTNA-Allow-Simple*.
    - c. Set *Type* to *ZTNA*.
    - d. Set *Incoming Interface* to *port3*.
    - e. Set *Source* to *all*. This can also be set to specific IP addresses to only allow those addresses to connect to this HTTPS access proxy.
    - f. Add the *Class* tag *Low*.
    - g. Select the ZTNA server *ZTNA-webserver*.
    - h. Configure the remaining options as needed.
    - i. Click *OK*.
  4. On the firewall policy list, make sure that the deny rule (*ZTNA-Deny-malicious*) is above the allow rule (*ZTNA-Allow-Simple*).

**To configure HTTPS access in the CLI:****1. Configure the access proxy VIP:**

```
config firewall vip
    edit "ZTNA-webserver"
        set type access-proxy
        set extip 10.0.3.10
        set extintf "port3"
        set server-type https
        set extport 9443
        set ssl-certificate "ztna-wildcard"
    next
end
```

**2. Configure the server and path mapping:**

```
config firewall access-proxy
    edit "ZTNA-webserver"
        set vip "ZTNA-webserver"
        set client-cert enable
        set log-blocked-traffic enable
        config api-gateway
            edit 1
                config realservers
                    edit 1
                        set ip 10.88.0.3
                        set port 9443
                    next
                end
            next
        end
    next
end
```

**3. Configure ZTNA policies:**

```
config firewall policy
    edit 9
        set name "ZTNA-Deny-Malicious"
        set srcintf "port3"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "ZTNA-webserver"
        set ztna-ems-tag "EMS1_ZTNA_Malicious-File-Detected"
        set schedule "always"
        set logtraffic all
    next
    edit 10
        set name "ZTNA-Allow-Simple"
        set srcintf "port3"
        set dstintf "any"
        set action accept
        set srcaddr "all"
        set dstaddr "ZTNA-webserver"
        set ztna-ems-tag "EMS1_CLASS_Low"
        set schedule "always"
        set logtraffic all
```

```

    set nat enable
  next
end

```

For configuration examples using full ZTNA policy, see [Configure a ZTNA policy on page 919](#).

## Testing the remote access to the HTTPS access proxy

After FortiClient EMS and FortiGate are configured, the HTTPS access proxy remote connection can be tested.


### Access allowed:

1. On the remote Windows PC, open FortiClient.
2. On the *Zero Trust Telemetry* tab, make sure that you are connected to the EMS server.




It is not necessary to configure a *ZTNA Destination* on the FortiClient for the HTTPS access proxy use case. In fact, configuring a *ZTNA Destination* rule for the website may interfere with its operation.


3. Open a browser and enter the address of the server and the access port. When entering the FQDN, make sure that the DNS can resolve the address to the IP address of the FortiGate. In this example, `webserver.ztnademo.com` resolves to `10.0.3.10`.
4. The browser prompts for the client certificate to use. Select the EMS signed certificate, then click *OK*.

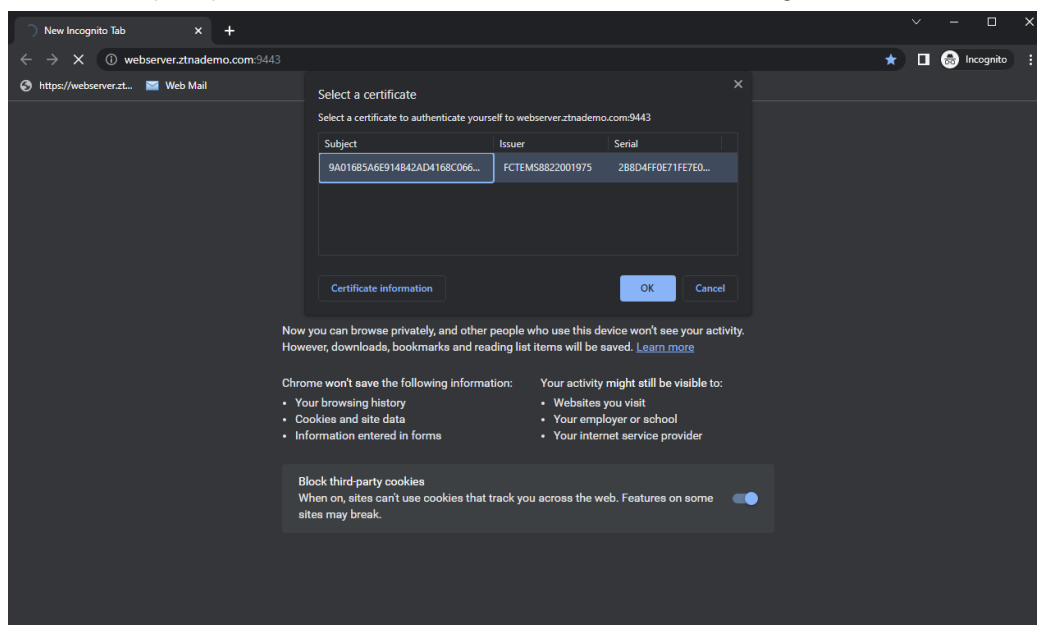

The certificate is in the *User Configuration* store, under *Personal > Certificates*. The details show the SN of the certificate, which matches the record on the FortiClient EMS and the FortiGate.

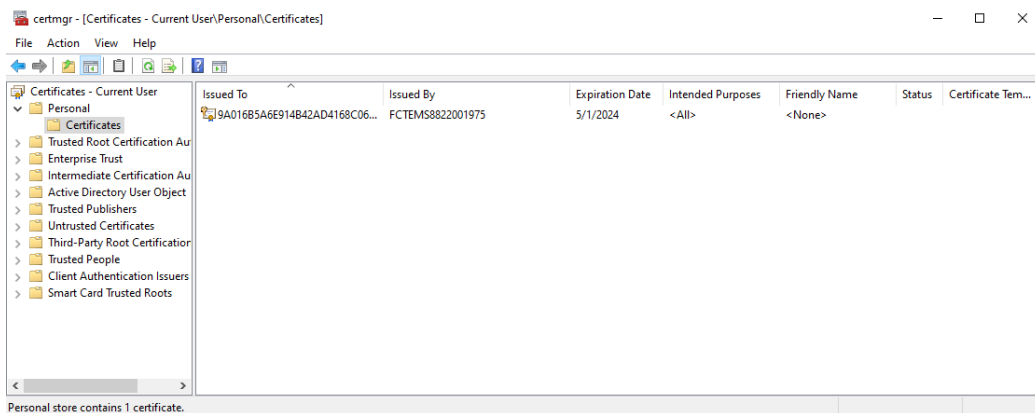

5. The client is verified by the FortiGate to authenticate your identity.
6. The FortiGate matches your security posture by verifying your ZTNA tag and matching the corresponding ZTNA rule, and you are allowed access to the web server.

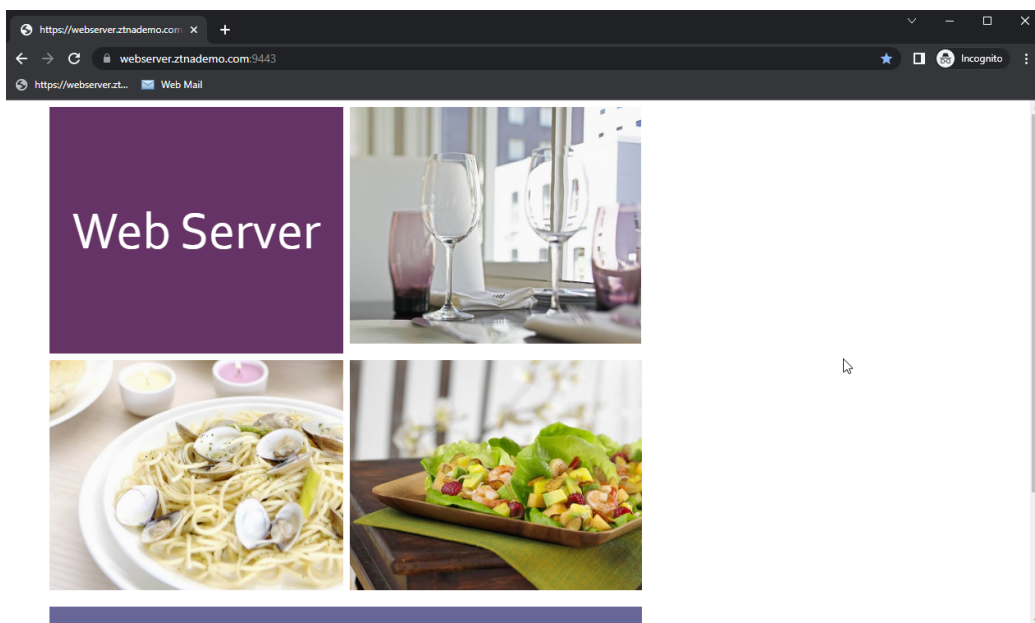


### Access denied:

1. On the remote Windows PC, trigger the Zero Trust Tagging Rule by creating the file in C:\virus.txt.
2. Open a browser and enter the address <http://webserver.ztnademo.com:9443>.
3. The client is verified by the FortiGate to authenticate your identity.
4. FortiGate checks your security posture. Because EMS has tagged the PC with the *Malicious-File-Detected* tag, it matches the *ZTNA-Deny-malicious* rule.



## 5. You are denied access to the web server.

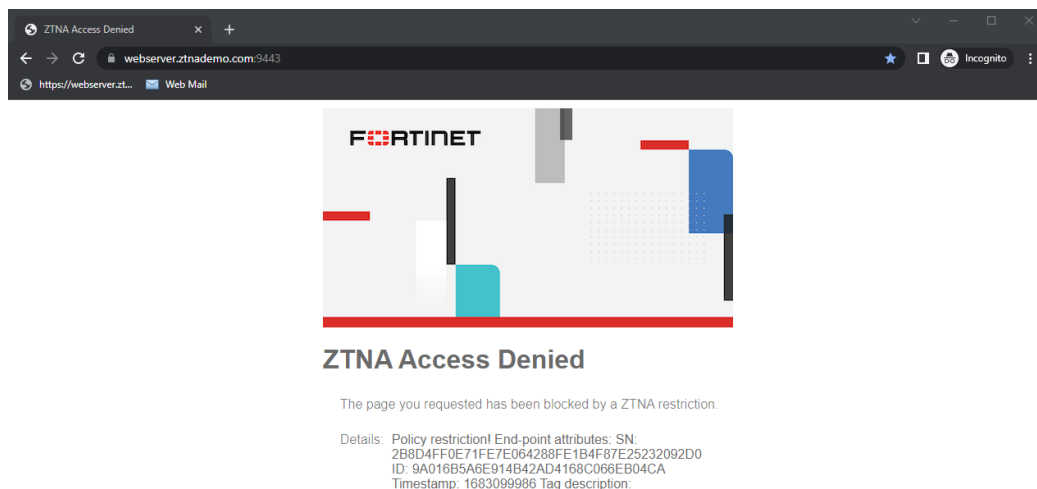

## Logs and debugs

## Access allowed:

```
# diagnose endpoint record list
```

```
Record #1:
```

```

IP Address = 10.0.3.2
MAC Address = 02:09:0f:00:03:03
MAC list =
VDOM = (-1)
EMS serial number: FCTEMS8822001975
EMS tenant id: 00000000000000000000000000000000
Client cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Public IP address: 34.23.223.220
Quarantined: no
Online status: online
Registration status: registered
On-net status: on-net
Gateway Interface:
FortiClient version: 7.2.0
AVDB version: 1.0
FortiClient app signature version: 23.544
FortiClient vulnerability scan engine version: 2.34
FortiClient UID: 9A016B5A6E914B42AD4168C066EB04CA
Host Name: WIN10-01
OS Type: WIN64
...
Number of Routes: (0)

```

```
online records: 1; offline records: 0; quarantined records: 0; out-of-sync records: 0
```

```
# diagnose test application fcnacd 7
```

```
Entry #1:
```

```

- UID: 9A016B5A6E914B42AD4168C066EB04CA
- EMS Fabric ID: FCTEMS8822001975:00000000000000000000000000000000
- Sys upd time: 2023-05-03 07:32:24.0367058
- Tag upd time: 2023-05-03 07:32:24.0367058
lls_idx_mask = 0x00000001
#ID:0
UID:      9A016B5A6E914B42AD4168C066EB04CA
State:    sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online:   Yes
Route IP:0.0.0.0
vfid:     0
has more:No
Tags:
idx:0, ttl:1    name:Domain-Users
idx:1, ttl:1    name:Remote-Allowed
idx:2, ttl:1    name:Group-Membership-Domain-Users
idx:3, ttl:2    name:Low
idx:4, ttl:2    name:Remote
idx:5, ttl:1    name:all_registered_clients

# diagnose wad dev query-by uid 9A016B5A6E914B42AD4168C066EB04CA FCTEMS8822001975
00000000000000000000000000000000 Attr of type=0, length=83, value
(ascii)=9A016B5A6E914B42AD4168C066EB04CA
Attr of type=4, length=0, value(ascii)=
Attr of type=6, length=1, value(ascii)=true
Attr of type=5, length=40, value(ascii)=2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Attr of type=3, length=66, value(ascii)=ZTNA_Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=68, value(ascii)=ZTNA_Remote-Allowed_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=83, value(ascii)=ZTNA_Group-Membership-Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=58, value(ascii)=CLASS_Low_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=61, value(ascii)=CLASS_Remote_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=76, value(ascii)=ZTNA_all_registered_clients_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Response termination due to no more data

# execute log filter category 0
# execute log filter field subtype ztna
# execute log display
1: date=2023-05-03 time=00:42:22 eventtime=1683099742638807678 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=35553
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=7258
srcuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="tcp/9443" proxyapptype="http"
proto=6 action="accept" policyid=10 policytype="policy" poluid="92d54e0e-e949-51ed-5dba-
7b4724d33d52" policyname="ZTNA-Allow-Simple" duration=599 gatewayid=1 realserverid=1
vip="ZTNA-webserver" accessproxy="ZTNA-webserver"
clientdeviceid="9A016B5A6E914B42AD4168C066EB04CA" clientdevicemanageable="manageable"
clientdevicetags="EMS1_ZTNA_all_registered_clients/EMS1_CLASS_Remote" emsconnection="online"

```

```
wanin=301677 rcvdbyte=301677 wanout=3177 lanin=2716 sentbyte=2716 lanout=302368
fctuid="9A016B5A6E914B42AD4168C066EB04CA" appcat="unscanned"
```

**Access denied:**

```
# diagnose test application fcnacd 7
Entry #1:
- UID: 9A016B5A6E914B42AD4168C066EB04CA
- EMS Fabric ID: FCTEMS8822001975:00000000000000000000000000000000
- Sys upd time: 2023-05-03 07:32:24.0367058
- Tag upd time: 2023-05-03 07:45:20.0034279
lls_idx_mask = 0x00000001
#ID:0
UID: 9A016B5A6E914B42AD4168C066EB04CA
State: sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online: Yes
Route IP:0.0.0.0
vfid: 0
has more:No
Tags:
idx:0, ttld:1 name:Domain-Users
idx:1, ttld:1 name:Remote-Allowed
idx:2, ttld:1 name:Group-Membership-Domain-Users
idx:3, ttld:2 name:Low
idx:4, ttld:1 name:Malicious-File-Detected
idx:5, ttld:2 name:Remote
idx:6, ttld:1 name:all_registered_clients

# diagnose wad dev query-by uid 9A016B5A6E914B42AD4168C066EB04CA FCTEMS8822001975
00000000000000000000000000000000
Attr of type=0, length=83, value(ascii)=9A016B5A6E914B42AD4168C066EB04CA
Attr of type=4, length=0, value(ascii)=
Attr of type=6, length=1, value(ascii)=true
Attr of type=5, length=40, value(ascii)=2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Attr of type=3, length=66, value(ascii)=ZTNA_Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=68, value(ascii)=ZTNA_Remote-Allowed_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=83, value(ascii)=ZTNA_Group-Membership-Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=58, value(ascii)=CLASS_Low_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=77, value(ascii)=ZTNA_Malicious-File-Detected_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=61, value(ascii)=CLASS_Remote_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=76, value(ascii)=ZTNA_all_registered_clients_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Response termination due to no more data


# execute log display
1: date=2023-05-03 time=00:46:26 eventtime=1683099986322746507 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=35731
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
```

```
dstip=10.0.3.10 dstport=9443 dstintf="root" dstintfrole="undefined" sessionid=7574
srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" dstuuid="96e98cb0-e937-51ed-3e8b-
9ee64af51512" service="tcp/9443" proxyapptype="http" proto=6 action="deny" policyid=9
policytype="proxy-policy" poluuid="3aa15b1a-e949-51ed-6b93-77ca8d2c4d6e" policyname="ZTNA-
Deny-Malicious" duration=0 vip="ZTNA-webserver" accessproxy="ZTNA-webserver"
clientdeviceid="9A016B5A6E914B42AD4168C066EB04CA" clientdevicemanageable="manageable"
clientdevicetags="EMS1_ZTNA_all_registered_clients/EMS1_CLASS_Remote" emsconnection="online"
msg="Traffic denied because of proxy-policy action is deny. Matched tag: EMS1_ZTNA_
Malicious-File-Detected" wanin=0 rcvdbyte=0 wanout=0 lanin=2375 sentbyte=2375 lanout=2506
fctuid="9A016B5A6E914B42AD4168C066EB04CA" appcat="unscanned" crscore=30 craction=131072
crlevel="high"
```

## ZTNA HTTPS access proxy with basic authentication example

This example expands on the previous example ([ZTNA HTTPS access proxy example on page 956](#)), adding LDAP authentication to the ZTNA rule. Users are allowed based on passing the client certificate authentication check, user authentication, and security posture check.

Users that are in the AD security group *ALLOWED-VPN* are allowed access to the access proxy. Users that are not part of this security group are not allowed access.

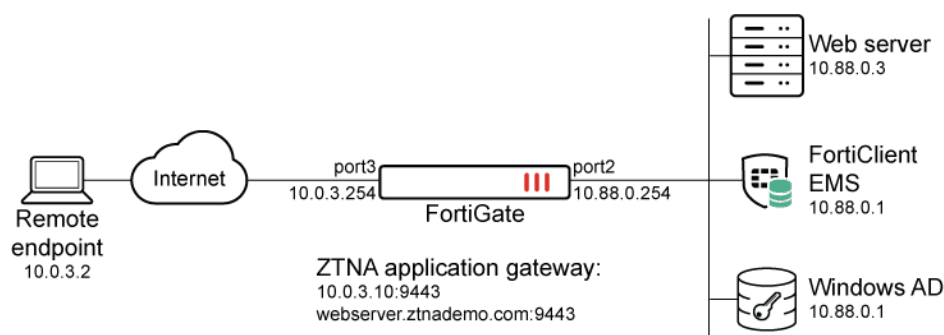

This example assumes that the FortiGate EMS fabric connector is already successfully connected.

LDAP/Active Directory Users and Groups:

- Domain: fortiad.info
- Users (Groups):
  - tsmith (Domain Users, Remote-Allowed)
  - lhansen (Domain Users)

**To configure a secure connection to the LDAP server in the GUI:**

1. Go to *User & Authentication > LDAP Servers* and click *Create New*.
2. Configure the following settings:

<b>Name</b>	LDAP-fortiad
<b>Server IP/Name</b>	10.88.0.1
<b>Server Port</b>	636
<b>Common Name Identifier</b>	sAMAccountName

<b>Distinguished Name</b>	dc=fortiad,dc=info
<b>Exchange server</b>	Disabled
<b>Bind Type</b>	Regular Enter the <i>Username</i> and <i>Password</i> for LDAP binding and lookup.
<b>Secure Connection</b>	Enabled <ul style="list-style-type: none"> <li>Set <i>Protocol</i> to <i>LDAPS</i></li> <li>Enable <i>Certificate</i> and select the CA certificate to validate the server certificate.</li> </ul>
<b>Server identity check</b>	Optionally, enable to verify the domain name or IP address against the server certificate.

3. Click *Test Connectivity* to verify the connection to the server.
4. Click *OK*.

### To configure a secure connection to the LDAP server in the CLI:

```
config user ldap
  edit "LDAP-fortiad"
    set server "10.88.0.1"
    set cnid "sAMAccountName"
    set dn "dc=fortiad,dc=info"
    set type regular
    set username "fortiad\\Administrator"
    set password <password>
    set secure ldaps
    set ca-cert "CA_Cert_1"
    set port 636
  next
end
```

**To configure a remote user group from the LDAP server in the GUI:**

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Set the name to *LDAP-Remote-Allowed-Group*.
3. Set *Type* to *Firewall*.
4. In the *Remote Groups* table click *Add*:
  - a. Set *Remote Server* to *LDAP-fortiad*.
  - b. Locate the *Remote-Allowed* group, right-click on it, and click *Add Selected*.
  - c. Click *OK*.

The screenshot shows the 'Edit User Group' window in the FortiGate GUI. The 'Name' field is set to 'LDAP-Remote-Allowed-Group' and the 'Type' is 'Firewall'. Below these fields is a 'Members' section with a '+' icon. The 'Remote Groups' section contains a table with two columns: 'Remote Server' and 'Group Name'. The first row is selected, showing 'LDAP-fortiad' as the Remote Server and 'CN=Remote-Allowed,CN=Users,DC=fortiad,DC=info' as the Group Name. To the right of the table are buttons for '+ Add', 'Edit', and 'Delete'. On the far right, there is a sidebar with 'FortiGate-VM64-KVM' and a 'Send SSL-VPN Configuration' button. Below that, under 'Additional Information', are links for 'API Preview', 'References', 'Edit in CLI', 'Online Guides', 'Relevant Documentation', 'Video Tutorials', 'Hot Questions at FortiAnswers', and 'Join the Discussion'. At the bottom of the window are 'OK' and 'Cancel' buttons.

5. Click *OK*.

**To configure a remote user group from the LDAP server in the CLI:**

```
config user group
  edit "LDAP-Remote-Allowed-Group"
    set member "LDAP-fortiad"
    config match
      edit 1
        set server-name "LDAP-fortiad"
        set group-name "CN=Remote-Allowed,CN=Users,DC=fortiad,DC=info"
      next
    end
  next
end
```

**Authentication scheme and rules**

After the LDAP server and user group have been configured, an authentication scheme and rule must be configured.



To configure authentication schemes and rules in the GUI, go to *System > Feature Visibility* and enable *Explicit Proxy*.

## Authentication scheme

The authentication scheme defines the method of authentication that is applied. In this example, basic HTTP authentication is used so that users are prompted for a username and password the first time that they connect to a website through the HTTPS access proxy.

### To configure an authentication scheme in the GUI:

1. Go to *Policy & Objects > Authentication Rules* and click *Create New > Authentication Scheme*.
2. Set the name to *ZTNA-Auth-scheme*.
3. Set *Method* to *Basic*.
4. Set *User database* to *Other* and select *LDAP-fortiad* as the LDAP server.

5. Click **OK**.

### To configure an authentication scheme in the CLI:

```
config authentication scheme
  edit "ZTNA-Auth-scheme"
    set method basic
    set user-database "LDAP-fortiad"
  next
end
```

## Authentication rule

The authentication rule defines the proxy sources and destination that require authentication, and what authentication scheme is applied. In this example, active authentication through the basic HTTP prompt is used and applied to all sources.

### To configure an authentication rule in the GUI:

1. Go to *Policy & Objects > Authentication Rules* and click *Create New > Authentication Rule*.
2. Set the name to *ZTNA-Auth-rule*.
3. Set *Source Address* to *all*.
4. Set *Protocol* to *HTTP*.
5. Enable *Authentication Scheme* and select *ZTNA-Auth-scheme*.
6. Click **OK**.

**To configure an authentication rule in the CLI:**

```
config authentication rule
    edit "ZTNA-Auth-rule"
        set srcaddr "all"
        set active-auth-method "ZTNA-Auth-scheme"
    next
end
```

**Applying the user group to a ZTNA policy**

A user or user group must be applied to the ZTNA policy that you need to control user access to. The authenticated user from the authentication scheme and rule must match the user or user group in the ZTNA policy.

In this example, the user group is applied to the two simple ZTNA policies that were configured in [ZTNA HTTPS access proxy example on page 956](#).

**To apply a user group to the simple ZTNA policies in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Edit the *ZTNA-Deny-malicious* rule.
3. Click in the *Source* field, select the *User* tab, select the *LDAP-Remote-Allowed-Group* group, then click *Close*.
4. Click *OK*.
5. Edit the *ZTNA-Allow-Simple* rule.
6. Click in the *Source* field, select the *User* tab, select the *LDAP-Remote-Allowed-Group* group, then click *Close*.
7. Click *OK*.

**To apply a user group to the simple ZTNA policies in the CLI:**

```
config firewall policy
    edit 9
        set name "ZTNA-Deny-Malicious"
        set srcintf "port3"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "ZTNA-webserver"
        set ztna-ems-tag "EMS1_ZTNA_Malicious-File-Detected"
        set schedule "always"
        set logtraffic all
        set groups "LDAP-Remote-Allowed-Group"
    next
    edit 10
        set name "ZTNA-Allow-Simple"
        set srcintf "port3"
        set dstintf "any"
        set action accept
        set srcaddr "all"
        set dstaddr "ZTNA-webserver"
        set ztna-ems-tag "EMS1_CLASS_Low"
        set schedule "always"
        set logtraffic all
        set nat enable
```



```

        set groups "LDAP-Remote-Allowed-Group"
    next
end

```

For configuration examples using full ZTNA policy, see [Configure a ZTNA policy on page 919](#).

## Testing remote access to the HTTPS access proxy with user authentication

### Scenario 1: access allowed - user tsmith

1. On a remote Windows PC, open the FortiClient app, select the *Zero Trust Telemetry* tab, and confirm that you are connected to the EMS server.



It is not necessary to configure a *ZTNA Destination* on the FortiClient for the HTTPS access proxy use case. In fact, configuring a *ZTNA Destination* rule for the website may interfere with its operation.

2. In a browser, enter the address of the server and the access port.  
If entering an FQDN, make sure that DNS can resolve the address to the IP address of the FortiGate. In this example, *webserver.ztnademo.com* resolves to 10.0.3.10.
3. When the browser asks for the client certificate to use, select the EMS signed certificate, then click *OK*.  
The client certificate is verified by the FortiGate to authenticate your identity.
4. When prompted, enter the username *tsmith* and the password, and click *Sign in*.  
As *tsmith* is a member of the *Remote-Allowed-Group* group in Active Directory, it will match the *LDAP-Remote-Allowed-Group* user group. After the user authentication passes, the FortiGate performs a posture check on the ZTNA group. When that passes, you are allowed access to the website.

### Verifying the results

```

# diagnose firewall auth list

10.0.3.2, tsmith
  type: fw, id: 0, duration: 12, idled: 12
  expire: 288, allow-idle: 300
  packets: in 0 out 0, bytes: in 0 out 0
  group_id: 3
  group_name: LDAP-Remote-Allowed-Group

# diagnose test app fcnacd 7
Entry #1:
- UID: 9A016B5A6E914B42AD4168C066EB04CA
- EMS Fabric ID: FCTEMS8822001975:00000000000000000000000000000000
- Sys upd time: 2023-05-03 22:34:31.2279124
- Tag upd time: 2023-05-03 23:43:09.6251663
lls_idx_mask = 0x00000001
#ID:0
UID:      9A016B5A6E914B42AD4168C066EB04CA
State:    sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN:  2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online:   Yes
Route IP: 0.0.0.0

```

```

vfid:      0
has more:No
Tags:
idx:0, ttl:1  name:Domain-Users
idx:1, ttl:1  name:Remote-Allowed
idx:2, ttl:1  name:Group-Membership-Domain-Users
idx:3, ttl:2  name:Low
idx:5, ttl:2  name:Remote
idx:6, ttl:1  name:all_registered_clients

```



The `user_name` is the windows log in username learned by FortiClient. It might not match the username used in firewall user authentication.

```

# execute log filter category 0
# execute log filter field subtype ztna
# execute log display
1: date=2023-05-03 time=16:49:37 eventtime=1683157776498494503 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=48054
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=19221
srcuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="tcp/9443" proxyapptype="http"
proto=6 action="accept" policyid=10 policytype="policy" poluid="92d54e0e-e949-51ed-5dba-
7b4724d33d52" policyname="ZTNA-Allow-Simple" duration=149 user="tsmith" group="LDAP-Remote-
Allowed-Group" authserver="LDAP-fortiad" gatewayid=1 realserverid=1 vip="ZTNA-webserver"
accessproxy="ZTNA-webserver" clientdeviceid="9A016B5A6E914B42AD4168C066EB04CA"
clientdevicemanageable="manageable" clientdevicetags="EMS1_ZTNA_all_registered_clients/EMS1_
CLASS_Remote" emsconnection="online" wanin=301802 rcvdbyte=301802 wanout=3340 lanin=2876
sentbyte=2876 lanout=337447 fctuid="9A016B5A6E914B42AD4168C066EB04CA" appcat="unscanned"

```

## Scenario 2: access denied – user lhansen

- If scenario 1 has just been tested, log in to the FortiGate and deauthenticate the user:
  - Go to *Dashboard > Assets & Identities* and expand the *Firewall Users* widget.
  - Right-click on the user *tsmith* and select deauthenticate.
- On a remote Windows PC, open the FortiClient app, select the *Zero Trust Telemetry* tab, and confirm that you are connected to the EMS server.
- In a browser, enter the address *webserver.ztnademo.com*.
- When the browser asks for the client certificate to use, select the EMS signed certificate, then click *OK*. This option might not appear if you have already selected the certificate when testing scenario 1.  
The client certificate is verified by the FortiGate to authenticate your identity.
- When prompted, enter the username *lhansen* and the password, and click *Sign in*.  
As *lhansen* is not a member of the *Remote-Allowed* group in Active Directory, it will not match the *LDAP-Remote-Allowed-Group* user group. Because no other policies are matched, this user is implicitly denied

## Verifying the results

Go to *Dashboard > Assets & Identities*, expand the *Firewall Users* widget, and confirm that user *lhansen* is listed, but no applicable user group is returned.

```
# execute log display
```

```
1: date=2023-05-03 time=16:56:46 eventtime=1683158205537262334 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=48243
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.0.3.10 dstport=9443 dstintf="root" dstintfrole="undefined" sessionid=19434
srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" dstuuid="96e98cb0-e937-51ed-3e8b-
9ee64af51512" service="tcp/9443" proxyapptype="http" proto=6 action="deny" policyid=0
policytype="proxy-policy" duration=10 user="lhansen" authserver="LDAP-fortiad" vip="ZTNA-
webserver" accessproxy="ZTNA-webserver" clientdeviceid="9A016B5A6E914B42AD4168C066EB04CA"
clientdevicemanager="manageable" clientdevicetags="EMS1_ZTNA_all_registered_clients/EMS1_
CLASS_Remote" emsconnection="online" msg="Traffic denied because of failed to match a proxy-
policy" wanin=0 rcvdbyte=0 wanout=0 lanin=2689 sentbyte=2689 lanout=72739
fctuid="9A016B5A6E914B42AD4168C066EB04CA" appcat="unscanned" crscore=30 craction=131072
crlevel="high"
```

## ZTNA TCP forwarding access proxy example

In this example, a TCP forwarding access proxy (TFAP) is configured to demonstrate an HTTPS reverse proxy that forwards TCP traffic to the designated resource. The access proxy tunnels TCP traffic between the client and the FortiGate over HTTPS, and forwards the TCP traffic to the protected resource. It verifies user identity, device identity, and trust context, before granting access to the protected source.

TCP forwarding access proxy supports communication between the client and the access proxy without SSL/TLS encryption. The connection still begins with a TLS handshake. The client uses the HTTP 101 response to switch protocols and remove the HTTPS stack. Further end to end communication between the client and server are encapsulated in the specified TCP port, but not encrypted by the access proxy. This improves performance by reducing the overhead of encrypting an already secured underlying protocol, such as RDP, SSH, or FTPS. Users should still enable the encryption option for end to end protocols that are insecure.


In this example, RDP (Remote Desktop Protocol) and SMB (Server Message Block) protocol access are configured to one server, and SSH access to the other server. Encryption is disabled for RDP and SSH, and enabled for SMB.



FortiClient (Windows) must be running 7.0.3 or later to detect SMB.



You cannot use ZTNA connection rules and TCP forwarding on a Windows 7 endpoint.

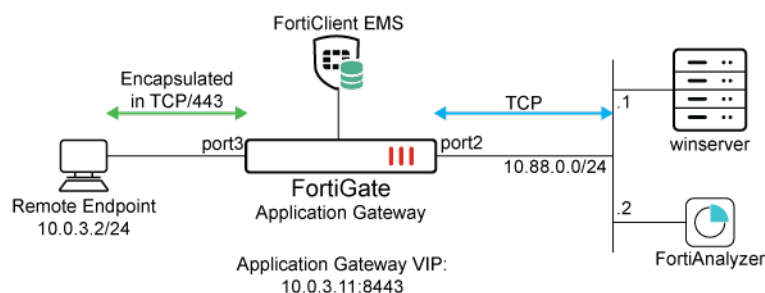

This example assumes that the FortiGate EMS fabric connector is already successfully connected.

**To configure the ZTNA server for TCP access proxy in the GUI:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Servers* tab.
2. Click *Create New*.
3. Set *Name* to *ZTNA-tcp-server*.
4. Configure the network settings:
  - a. Set *External interface* to *port3*.
  - b. Set *External IP* to *10.0.3.11*.
  - c. Set *External port* to *8443*.
5. Select the *Default certificate*. Clients will be presented with this certificate when they connect to the access proxy VIP.
6. Add server mapping:
  - a. In the *Service/server mapping* table, click *Create New*.
  - b. Set *Service* to *TCP Forwarding*.
  - c. Add a server:
    - i. In the *Servers* table, click *Create New*.
    - ii. Create a new address for the FortiAnalyzer server at 10.88.0.2 and use it as the address.
    - iii. Set *Port* to 22.
    - iv. Click *OK*.
  - d. Add another server:
    - i. In the *Servers* table, click *Create New*.
    - ii. Create a new address for the winserver at 10.88.0.1 and use it as the address.
    - iii. Set *Port* to 445, 3389 to correspond to SMB and RDP.
    - iv. Click *OK*.
  - e. Click *OK*.
7. Click *OK*.

**To configure a simple ZTNA policy to allow traffic to the TCP access proxy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*, and click *Create New*.
2. Set *Name* to *ZTNA\_remote*.
3. Set *Type* to *ZTNA*.
4. Set *Incoming Interface* to *port3*.
5. Set *Source* to *all*.
6. Select the ZTNA server *ZTNA-tcp-server*.
7. Configure the remaining options as needed.
8. Click *OK*.

**To configure the access proxy VIP in the CLI:**

```
config firewall vip
  edit "ZTNA-tcp-server"
    set type access-proxy
```

```
        set extip 10.0.3.11
        set extintf "port3"
        set server-type https
        set extport 8443
        set ssl-certificate "Fortinet_SSL"
    next
end
```

**To configure the server addresses in the CLI:**

```
config firewall address
    edit "FAZ"
        set subnet 10.88.0.2 255.255.255.255
    next
    edit "winserver"
        set subnet 10.88.0.1 255.255.255.255
    next
end
```

**To configure access proxy server mappings in the CLI:**

```
config firewall access-proxy
    edit "ZTNA-tcp-server"
        set vip "ZTNA-tcp-server"
        config api-gateway
            edit 1
                set url-map "/tcp"
                set service tcp-forwarding
                config realservers
                    edit 1
                        set address "FAZ"
                        set mappedport 22
                    next
                    edit 2
                        set address "winserver"
                        set mappedport 445 3389
                    next
                end
            next
        end
    next
end
next
end
next
end
```

The mapped port (`mappedport`) restricts the mapping to the specified port or port range. If `mappedport` is not specified, then any port will be matched.

**To configure a ZTNA rule (proxy policy) in the CLI:**

```
config firewall policy
    edit 11
        set name "ZTNA_remote"
        set srcintf "port3"
        set dstintf "any"
        set action accept
        set srcaddr "all"
        set dstaddr "ZTNA-tcp-server"
```

```

    set schedule "always"
    set logtraffic all
    set nat enable
next
end

```

For configuration examples using full ZTNA policy, see [Configure a ZTNA policy on page 919](#).

## Test the connection to the access proxy


Before connecting, users must have a ZTNA connection rule in FortiClient.



ZTNA TCP forwarding rules can be provisioned from the EMS server. See [Provisioning ZTNA TCP forwarding rules via EMS](#) for details.

### To create a ZTNA Destination in FortiClient:

1. On the *ZTNA Destination* tab, click *Add Destination*.
2. Set *Destination Name* to *SSH-FAZ*.
3. Set *Destination Host* to *10.88.0.2:22*. This is the real IP address and port of the server.
4. Set *Proxy Gateway* to *10.0.3.11:8443*. This is the access proxy address and port that are configured on the FortiGate.
5. Leave *Encryption* disabled. This option determines whether or not the Client to FortiGate access proxy connection is encrypted in HTTPS.

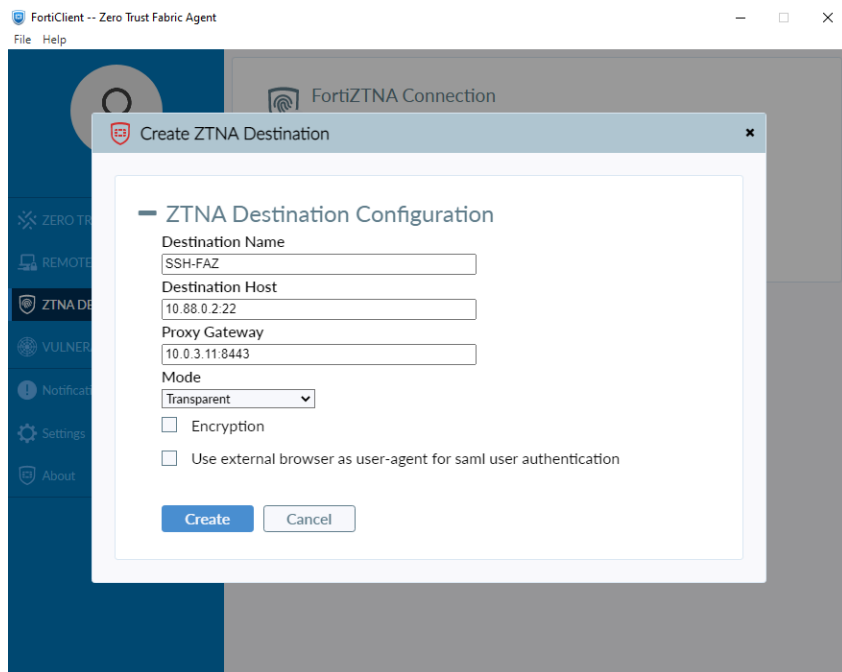


6. Click *Create*.
7. Create a second rule with the following settings:


- *Rule Name:* RDP-winservice
- *Destination Host:* 10.88.0.1:3389
- *Proxy Gateway:* 10.0.3.11:8443
- *Encryption:* Disabled


8. Create a third rule with the following settings:

- *Rule Name:* SMB-winservice
- *Destination Host:* 10.88.0.1:445
- *Proxy Gateway:* 10.0.3.11:8443
- *Encryption:* Enabled

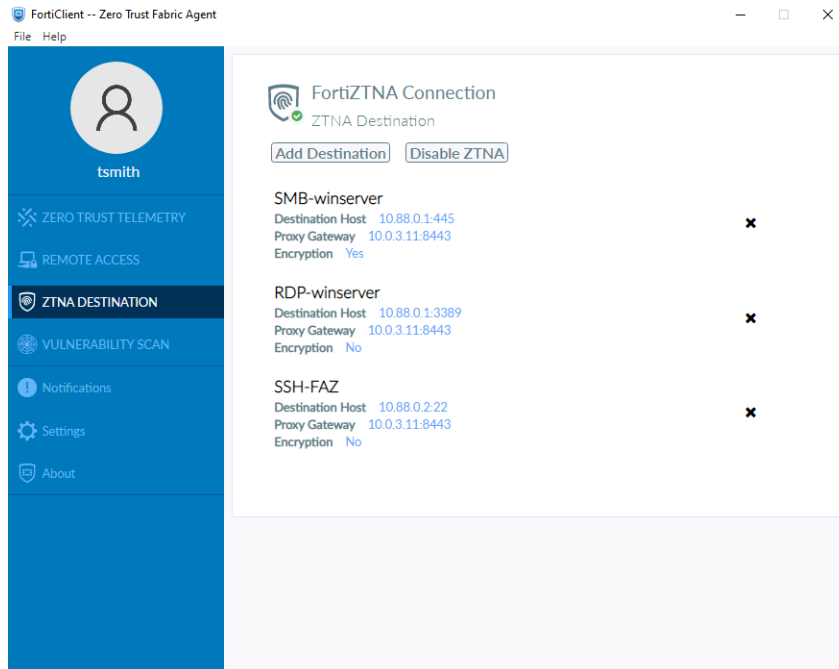

After creating the ZTNA connection rules, you can SSH, RDP, and SMB directly to the server IP address and port.

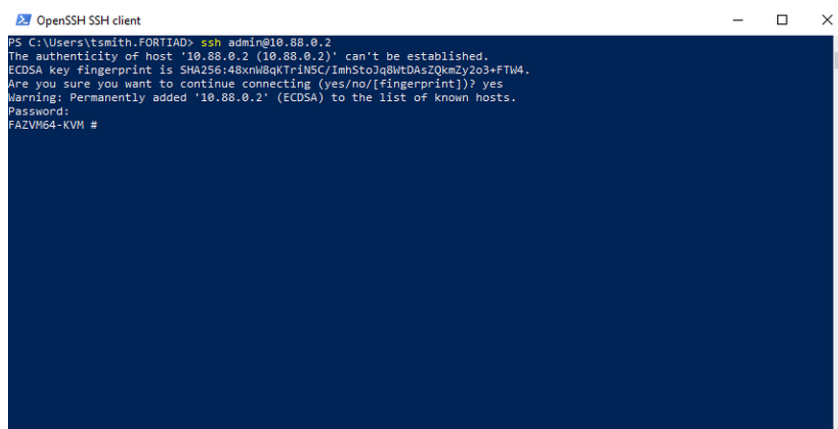

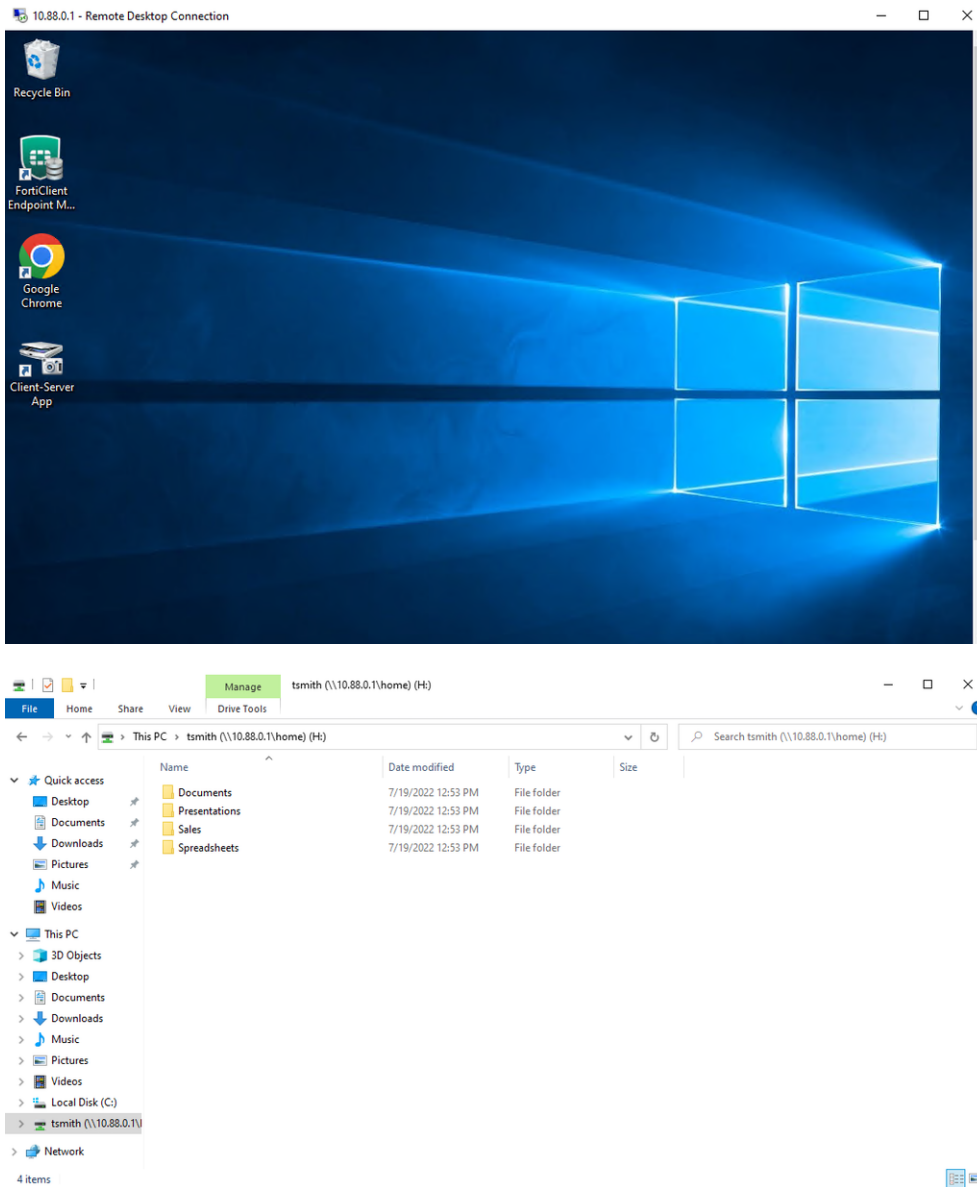

## Logs

```
# execute log filter category 0
# execute log filter field subtype ztna
# execute log display
```

### SSH:

```
1: date=2023-05-04 time=11:56:35 eventtime=1683226594376318600 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=62958
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.2 dstport=22 dstintf="port2" dstintfrole="dmz" sessionid=31382
srcuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="SSH" proxyapptype="http" proto=6
action="accept" policyid=11 policytype="policy" poluuid="a63a424a-eaa9-51ed-cf84-
```



```
b36eec5d2195" policyname="ZTNA_remote" duration=178 gatewayid=1 vip="ZTNA-tcp-server"
accessproxy="ZTNA-tcp-server" clientdevicemanageable="manageable" wanin=2821 rcvbyte=2821
wanout=2705 lanin=4556 sentbyte=4556 lanout=5087 appcat="unscanned"
```

**RDP:**

```
1: date=2023-05-04 time=11:59:14 eventtime=1683226753600713941 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=63053
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.1 dstport=3389 dstintf="port2" dstintfrole="dmz" sessionid=31513
srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="RDP" proxyapptype="http" proto=6
action="accept" policyid=11 policytype="policy" poluuid="a63a424a-eea9-51ed-cf84-
b36eec5d2195" policyname="ZTNA_remote" duration=13 gatewayid=1 vip="ZTNA-tcp-server"
accessproxy="ZTNA-tcp-server" clientdevicemanageable="manageable" wanin=1588 rcvbyte=1588
wanout=1040 lanin=2893 sentbyte=2893 lanout=3854 appcat="unscanned"
```

**SMB:**


```
1: date=2023-05-04 time=12:15:07 eventtime=1683227707205696615 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=63113
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.1 dstport=445 dstintf="port2" dstintfrole="dmz" sessionid=31635
srcuuid="b458a65a-f759-51ea-d7df-ef2e750026d1" service="SMB" proxyapptype="http" proto=6
action="accept" policyid=11 policytype="policy" poluuid="a63a424a-eea9-51ed-cf84-
b36eec5d2195" policyname="ZTNA_remote" duration=801 gatewayid=1 vip="ZTNA-tcp-server"
accessproxy="ZTNA-tcp-server" clientdevicemanageable="manageable" wanin=37670 rcvbyte=37670
wanout=27153 lanin=33484 sentbyte=33484 lanout=44429 appcat="unscanned"
```

## ZTNA SSH access proxy example

ZTNA can be configured with SSH access proxy to provide a seamless SSH connection to the server.

Advantages of using an SSH access proxy instead of a TCP forwarding access proxy include:

- Establishing device trust context with user identity and device identity checks.
- Applying SSH deep inspection to the traffic through the SSH related profile.
- Performing optional SSH host-key validation of the server.
- Using one-time user authentication to authenticate the ZTNA SSH access proxy connection and the SSH server connection.

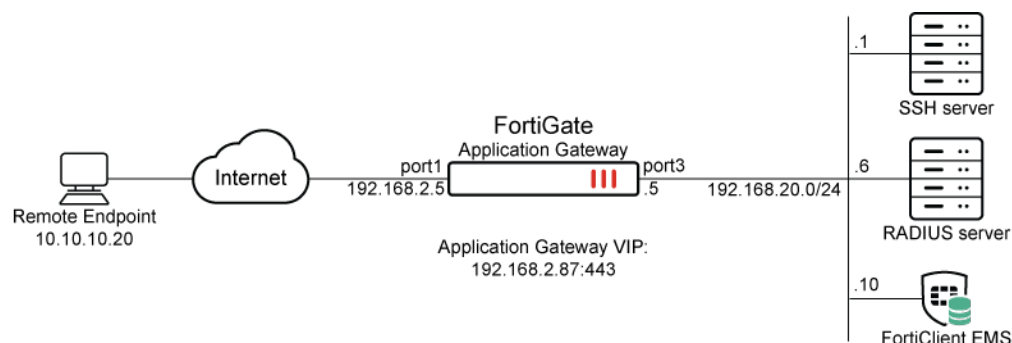


## Perform SSH host-key validation of the server

To act as a reverse proxy for the SSH server, the FortiGate must perform SSH host-key validation to verify the identity of the SSH server. The FortiGate does this by storing the public key of the SSH server in its SSH host-key configurations. When a connection is made to the SSH server, if the public key matches one that is used by the server, then the connection is established. If there is no match, then the connection fails.

## One-time user authentication

SSH access proxy allows user authentication to occur between the client and the access proxy, while using the same user credentials to authenticate with the SSH server. The following illustrates how this works:

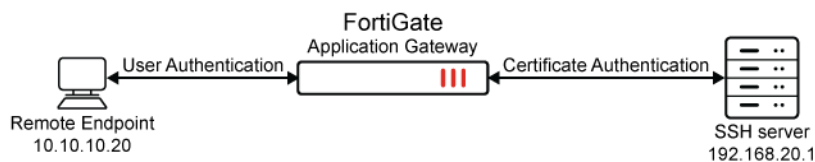

1. The remote endpoint registers to FortiClient EMS and receives the client certificate.
2. The remote endpoint tries to connect to the SSH access proxy. It must use the same username that is later used for access proxy authentication.
3. The FortiGate challenges the endpoint with device identity validation.
4. The remote endpoint provides the EMS issued certificate for device identification.
5. The FortiGate challenges the endpoint with user authentication. For example, this could be done with basic or SAML authentication.
6. The user enters their credentials on the remote endpoint.
7. The FortiGate authenticates the user and collects the username.
8. Using the FortiGate's CA or the customer's CA certificate, the FortiGate signs an SSH certificate and embeds the username in its principal.
9. The FortiGate attempts to connect to the SSH server using the certificate authentication.
10. The SSH server verifies the authenticity of the certificate, and matches the username principal against its `authorized_keys` file.
11. If the username matches a record in the file, then the SSH connection is established. If no match is found, then the SSH connection fails.

## Example

In this example, an SSH connection is established using SSH access proxy with host-key validation and one-time authentication.

- The SSH server is a Linux based server that uses `sshd` to provide remote access
- For SSH host-key validation, the public key of the SSH server has been imported into the FortiGate.
- For one-time authentication using certificate authentication:
  - The SSH server must allow certificate authentication.
  - The SSH server must have the proper entry in its `authorized_keys` file that contains the user principal and the FortiGate CA's public key.
  - The entry is present in the user directory corresponding to the user that is trying to log in.

**To pre-configure the Linux SSH server:****1. Retrieve the public key used for host-key validation:****a. Locate the public key files in the SSH server:**

```
$ ls -la /etc/ssh/*.pub
-rw-r--r-- 1 root root 186 Mar 29 2020 /etc/ssh/ssh_host_ecdsa_key.pub
-rw-r--r-- 1 root root 106 Mar 29 2020 /etc/ssh/ssh_host_ed25519_key.pub
-rw-r--r-- 1 root root 406 Mar 29 2020 /etc/ssh/ssh_host_rsa_key.pub2
```

**b. Choose the public key file based on the hash type (in this case, ECDSA), and show its content:**

```
$ cat /etc/ssh/ssh_host_ecdsa_key.pub
ecdsa-sha2-nistp256 AAAAE2*****IpEik=
```

This key will be used when configuring the FortiGate.

**2. Retrieve the FortiGate CA's public key from the FortiGate:**

```
# show full firewall ssh local-ca Fortinet_SSH_CA
config firewall ssh local-ca
  edit "Fortinet_SSH_CA"
    set password ENC <hidden password>
    set private-key "-----BEGIN OPENSSH PRIVATE KEY-----
<hidden private key>
-----END OPENSSH PRIVATE KEY-----"
    set public-key "ssh-rsa AAAAB3*****JLX1xj3"
    set source built-in
  next
end
```

**3. On the Linux server, enable the SSH service to use the authorized\_keys file:****a. Locate and edit the /etc/ssh/sshd\_config file.****b. Ensure that the AuthorizedKeysFile line is uncommented, for example:**

```
AuthorizedKeysFile      .ssh/authorized_keys .ssh/authorized_keys2
```

**4. Allow remote SSH log in with certificate authentication and principal name:****a. Log in to the SSH server using the account that will be granted remote SSH access (in this example: radCurtis):****b. Locate the account's authorized\_keys file in the ~/.ssh directory:**

```
$ ls -la ~/.ssh
total 12
drwxrwxr-x 2 radCurtis radCurtis 4096 Aug 10 19:14 .
drwxr-xr-x 5 radCurtis radCurtis 4096 Aug 10 19:13 ..
-rw-rw-r-- 1 radCurtis radCurtis  419 Aug 10 19:14 authorized_keys
```

**c. If the directory and file do not exist, create the directory:**

```
$ mkdir ~/.ssh
```

**d. Create an entry containing the following keywords and add them to the authorized\_keys file:**

```
echo 'cert-authority,principals="radCurtis" ssh-rsa AAAAB3*****JLX1xj3' >>
authorized_keys
```

Where:

- **cert-authority** - indicates that this entry is used in certificate authentication by validating the certificate using the public key provided in this entry.

- `principals="radCurtis"` - indicates the user that must match with the username embedded in the SSH certificate.
- `ssh-rsa AAAAB3*****JLXlxj3` - indicates the FortiGate CA's public key that is used to validate the SSH certificate.

##### 5. Restart the sshd service:

```
$ sudo systemctl stop sshd
$ sudo systemctl start sshd
```

The SSH server can now accept SSH connection from `radCurtis@<server IP>`, where the SSH certificate used by the FortiGate to log in contains `radCurtis` embedded as a principal.



When a user connects from a SSH client using `<username>@<server IP>`, `sshd` will locate the `authorized_keys` file in the directory `/home/<username>/.ssh/authorized_keys`. If the `authorized_keys` is not in that directory, authentication will fail on the SSH server side.

If you suspect that authentication is failing on the SSH server, use the following commands to manually start `sshd` in debug mode to troubleshoot:

```
$ sudo systemctl stop sshd
$ /usr/sbin/sshd -ddd -p 22
```

## To configure the FortiGate :

### 1. Configure a new VIP to allow access to the SSH access proxy over 192.168.2.87:443:

```
config firewall vip
  edit "ZTNA_SSH"
    set type access-proxy
    set extip 192.168.2.87
    set extintf "any"
    set server-type https
    set extport 443
    set ssl-certificate "Fortinet_SSL"
  next
end
```

### 2. Configure the address object for the SSH server:

```
config firewall address
  edit "SSH_server"
    set subnet 192.168.20.1 255.255.255.255
  next
end
```

### 3. Configure the host-key that will be used to authenticate the SSH server. The public-key was retrieved when pre-configure the Linux SSH server (step 1b).

```
config firewall ssh host-key
  edit "ed25519"
    set type ECDSA
    set usage access-proxy
    set public-key "AAAAB3*****IpEik="
  next
end
```

**4. Configure the access proxy SSH client certificate:**

A CA certificate is assigned to sign the SSH certificate that will be used in the SSH authentication. The SSH certificate will have the username embedded in the certificate principal.

```
config firewall access-proxy-ssh-client-cert
    edit "ssh-access-proxy"
        set source-address enable
        set auth-ca "Fortinet_SSH_CA"
    next
end
```

**5. Configure the access-proxy server setting:**

```
config firewall access-proxy
    edit "ZTNA_SSH"
        set vip "ZTNA_SSH"
        set client-cert enable
        config api-gateway
            edit 1
                set url-map "tcp"
                set service tcp-forwarding
                config realservers
                    edit 1
                        set address "SSH_server"
                        set type ssh
                        set ssh-client-cert "ssh-access-proxy"
                        set ssh-host-key-validation enable
                        set ssh-host-key "ed25519"
                    next
                end
            next
        end
    next
end
```

**6. Configure the RADIUS setting, user setting, and user group to apply user authentication to the access proxy connection using RADIUS:**

```
config user radius
    edit "Win2k16-Radius"
        set server "192.168.20.6"
        set secret ENC <secret>
    next
end
config user local
    edit "radCurtis"
        set type radius
        set radius-server "Win2k16-Radius"
    next
end
config user group
    edit "radius_group"
        set member "radCurtis" "Win2k16-Radius"
    next
end
```

**7. Create the authentication scheme and rule to perform the authentication:**

```

config authentication scheme
    edit "basic_auth"
        set method basic
        set user-database "Win2k16-Radius"
    next
end
config authentication rule
    edit "ztna-basic"
        set srcaddr "all"
        set ip-based disable
        set active-auth-method "basic_auth"
        set web-auth-cookie enable
    next
end

```

8. Configure the full ZTNA policy to allow traffic to the SSH server, and apply user authentication, posture check, and a security profile where necessary:

```

config firewall proxy-policy
    edit 5
        set name "SSH-proxy"
        set proxy access-proxy
        set access-proxy "ZTNA_SSH"
        set srcintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set ztna-ems-tag "FCTEMS8821001056_ems138_av_tag"
        set action accept
        set schedule "always"
        set groups "radius_group"
        set utm-status enable
        set ssl-ssh-profile "custom-deep-inspection"
    next
end

```

#### To check the results:


1. On the remote client, open FortiClient, go to the *Zero Trust Telemetry* tab, and make sure that it is connected to the EMS server.
2. Go to the *ZTNA Destination* tab and click *Add Destination*.
3. Configure the Destination, then click *Create*:

<b>Rule Name</b>	SSH-Linux
<b>Destination Host</b>	192.168.20.1:22
<b>Proxy Gateway</b>	192.168.2.87:443
<b>Mode</b>	Transparent
<b>Encryption</b>	Disabled (recommended)


When Encryption is disabled, the connection between the client and FortiGate access proxy is not encapsulated in HTTPS after the client and FortiGate connection is established. This allows for less overhead, because SSH is already a secure connection.

4. Open an SSH client, such as PuTTY, and make an SSH connection to *radCurtis@192.168.20.1* on port 22.

5. After device authentication is performed and passes in the background, FortiClient prompts the user to sign in. Enter the username, *radCurtis*, and password, then click *Sign in*.

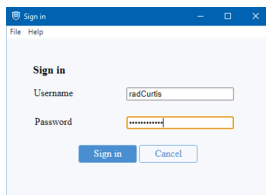

After successful user authentication, the SSH connection is established without an additional log in.

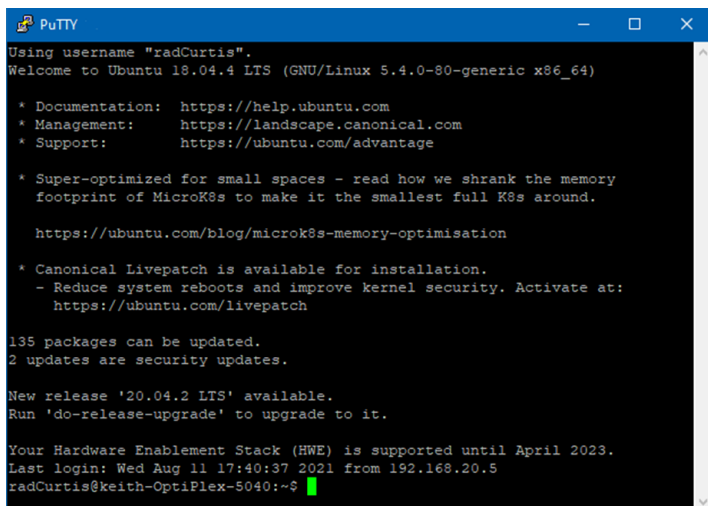

6. On the FortiGate, check the logged in user:
  - a. Go to *Dashboard > Assets & Identities* and expand the *Firewall Users* widget.
  - b. Check the WAD proxy user list:

```
# diagnose wad user list
ID: 2, VDOM: root, IPv4: 10.10.10.25
  user name   : radCurtis
  worker      : 0
  duration    : 614
  auth_type   : Session
  auth_method : Basic
  pol_id      : 5
  g_id        : 12
  user_based  : 0
  expire      : 53
LAN:
  bytes_in=3403 bytes_out=5699
WAN:
  bytes_in=3681 bytes_out=3132
```

7. The successful connection is logged in the forward traffic logs after the SSH connection has disconnected:


```
# execute log display
25 logs found.
10 logs returned.

1: date=2021-08-11 time=17:59:56 eventtime=1628729996110159120 tz="-0700"
logid="0000000024" type="traffic" subtype="forward" level="notice" vd="root"
```

```
srcip=10.10.10.25 srcport=50627 srcintf="port1" srcintfrole="wan" dstcountry="Reserved"
srccountry="Reserved" dstip=192.168.20.1 dstport=22 dstintf="root"
dstintfrole="undefined" sessionid=1926338 srcuuid="5445be2e-5d7b-51ea-e2c3-ae6b7855c52f"
service="SSH" proto=6 action="accept" policyid=5 policytype="proxy-policy"
poluuid="16fb5550-e976-51eb-e76c-d45e96dfa5dc" policyname="SSH-proxy" duration=67
user="radCurtis" group="radius_group" authserver="Win2k16-Radius" wanin=3681
rcvbyte=3681 wanout=3132 lanin=3403 sentbyte=3403 lanout=5699 appcat="unscanned"
```

## ZTNA application gateway with SAML authentication example

In this example, an HTTPS access proxy is configured, and SAML authentication is applied to authenticate the client. The FortiGate acts as the SAML SP and a SAML authenticator serves as the IdP. In addition to verifying the user and device identity with the client certificate, the user is also authorized based on user credentials to establish a trust context before granting access to the protected resource.

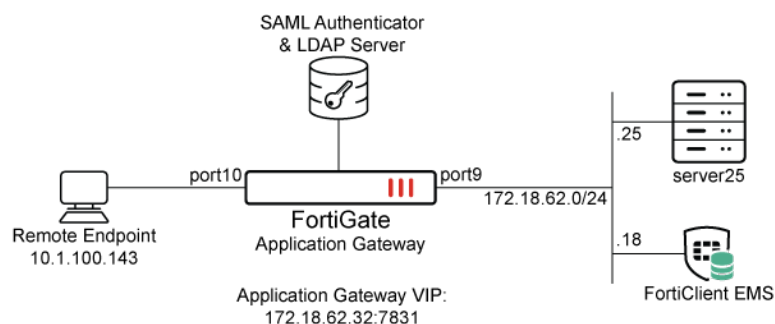

This example assumes that the FortiGate EMS fabric connector is already successfully connected.

### To configure the access proxy VIP:

```
config firewall vip
  edit "ZTNA_server01"
    set type access-proxy
    set extip 172.18.62.32
    set extintf "any"
    set server-type https
    set extport 7831
    set ssl-certificate "Fortinet_CA_SSL"
  next
end
```

### To configure access proxy server mappings:

```
config firewall access-proxy
  edit "ZTNA_server01"
    set vip "ZTNA_server01"
    set client-cert enable
    config api-gateway
      edit 1
        set service https
        config realservers
          edit 1
            set ip 172.18.62.25
            set port 443
```



```
        next
    end
    next
end
next
end
```

**To configure a SAML server:**

```
config user saml
    edit "saml_ztna"
        set cert "Fortinet_CA_SSL"
        set entity-id "https://fgt9.myqalab.local:7831/samlap"
        set single-sign-on-url "https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/login/"
        set single-logout-url "https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/logout/"
        set idp-entity-id "http://MYQALAB.LOCAL/adfs/services/trust"
        set idp-single-sign-on-url "https://myqalab.local/adfs/ls"
        set idp-single-logout-url "https://myqalab.local/adfs/ls"
        set idp-cert "REMOTE_Cert_4"
        set digest-method sha256
        set adfs-claim enable
        set user-claim-type upn
        set group-claim-type group-sid
    next
end
```

**To map the SAML server into an access proxy configuration:**

```
config firewall access-proxy
    edit "ZTNA_server01"
        config api-gateway
            edit 3
                set service samlsp
                set saml-server "saml_ztna"
            next
        end
    next
end
```

**To configure an LDAP server and an LDAP server group to verify user groups:**

```
config user ldap
    edit "ldap-10.1.100.198"
        set server "10.1.100.198"
        set cnid "cn"
        set dn "dc=myqalab,dc=local"
        set type regular
        set username "cn=fosqal,cn=users,dc=myqalab,dc=local"
        set password *****
        set group-search-base "dc=myqalab,dc=local"
    next
end

config user group
    edit "ldap-group-saml"
        set member "ldap-10.1.100.198"
```

```
    next
end
```

**To configure the authentication rule and scheme to match the new SAML server:**

```
config authentication rule
    edit "saml_ztna"
        set srcintf "port10"
        set srcaddr "all"
        set ip-based disable
        set active-auth-method "saml_ztna"
        set web-auth-cookie enable
    next
end

config authentication scheme
    edit "saml_ztna"
        set method saml
        set saml-server "saml_ztna"
        set saml-timeout 30
        set user-database "ldap-10.1.100.198"
    next
end
```

**To enable user group authentication in an access-proxy type firewall proxy-policy:**

```
config firewall proxy-policy
    edit 6
        set name "ZTNA_remote"
        set proxy access-proxy
        set access-proxy "ZTNA_server01"
        set srcintf "any"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set groups "ldap-group-saml"
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
    next
end
```

## Testing the connection


**To test the connection:**

It is not necessary to configure a *ZTNA Destination* on the FortiClient for the HTTPS access proxy use case. In fact, configuring a *ZTNA Destination* rule for the website may interfere with its operation.

---

1. On a client PC, try to access the webpage through the HTTPS access proxy. For example, go to `http://172.18.62.32:7831` in a browser.

- The client PC is prompted for a client certificate. After the certificate is validated, you are redirected to a SAML log in portal.

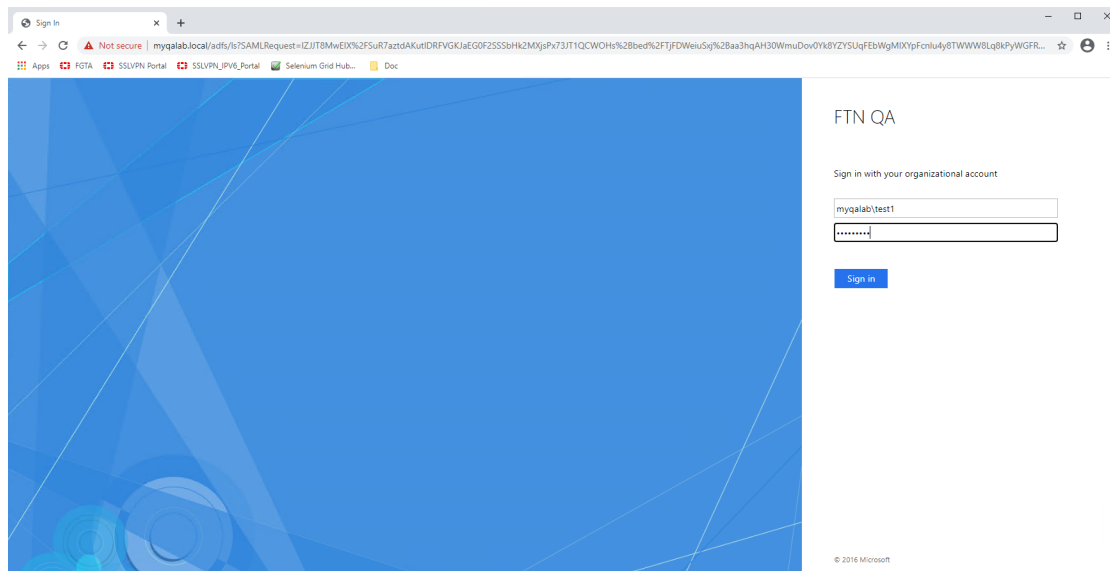

- Enter your user credentials. The SAML server authenticates and sends a SAML assertion response message to the FortiGate.
- The FortiGate queries the LDAP server for the user group, and then verifies the user group against the groups or groups defined in the proxy policy.
- The user is proxied to the webpage on the real web server.

## Logs and debugs

Use the following command to check the user information after the user has been authenticated:

```
# diagnose wad user list
ID: 7, VDOM: vdom1, IPv4: 10.1.100.143
  user name   : test1@MYQALAB.local
  worker      : 0
  duration    : 124
  auth_type   : Session
  auth_method : SAML
  pol_id      : 6
  g_id        : 13
  user_based  : 0
  expire      : no
LAN:
  bytes_in=25953 bytes_out=14158
WAN:
  bytes_in=8828 bytes_out=6830
```

### Event log:

```
1: date=2021-03-24 time=19:02:21 eventtime=1616637742066893182 tz="-0700" logid="0102043025"
type="event" subtype="user" level="notice" vd="vdom1" logdesc="Explicit proxy authentication
successful" srcip=10.1.100.143 dstip=172.18.62.32 authid="saml" user="test1@MYQALAB.local"
group="N/A" authproto="HTTP(10.1.100.143)" action="authentication" status="success"
reason="Authentication succeeded" msg="User test1@MYQALAB.local succeeded in authentication"
```

### Traffic log:


```
1: date=2021-03-24 time=19:09:06 eventtime=1616638146541253587 tz="-0700" logid="0000000010"
type="traffic" subtype="forward" level="notice" vd="vdom1" srcip=10.1.100.143 srcport=58084
srcintf="port10" srcintfrole="undefined" dstcountry="Reserved" srccountry="Reserved"
dstip=172.18.62.25 dstport=443 dstintf="vdom1" dstintfrole="undefined" sessionid=8028
service="HTTPS" wanoptapptype="web-proxy" proto=6 action="accept" policyid=6
policytype="proxy-policy" poluid="8dcfe762-8d0b-51eb-82bf-bfbee59b89f2" duration=8
user="test1@MYQALAB.local" group="ldap-group-saml" authserver="ldap-10.1.100.198"
wanin=10268 rcvdbyte=10268 wanout=6723 lanin=7873 sentbyte=7873 lanout=10555
appcat="unscanned"
```

## ZTNA application gateway with SAML and MFA using FortiAuthenticator example

ZTNA application gateway supports device verification using device certificates that are issued by EMS. To authenticate users, administrators can use either basic or SAML authentication. An advantage of SAML authentication is that multi-factor authentication (MFA) can be provided by the SAML Identity Provider (IdP).

In these examples, a FortiAuthenticator is used as the IdP, and MFA is applied to user authentication for remote users accessing the web, RDP, and SSH resources over the ZTNA application gateway. It is assumed that the FortiGate EMS fabric connector has already been successfully connected.

- [Configuring the FortiAuthenticator on page 991](#)
- [Configuring the FortiGate SAML settings on page 995](#)
- [Example 1 - Applying SAML and MFA to ZTNA HTTPS access proxy on page 999](#)
- [Example 2 - Applying SAML and MFA to a ZTNA TCP forwarding access proxy for RDP connections on page 1002](#)
- [Example 3 - Applying SAML and MFA to a ZTNA SSH access proxy on page 1004](#)

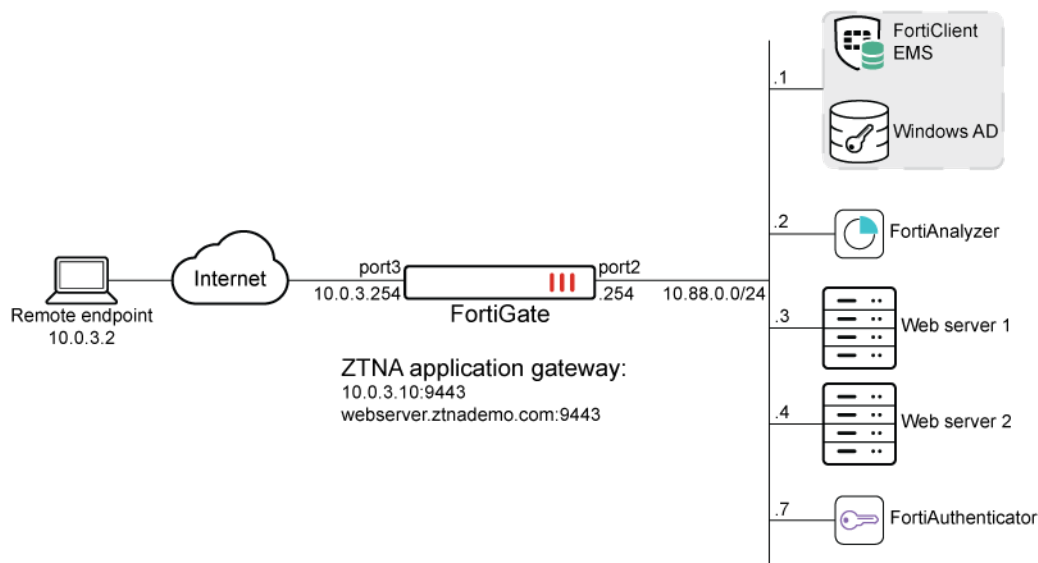

DNS resolutions:

- webserver.ztnademo.com:9443 -> 10.0.3.10:9443
- fac.ztnademo.com -> 10.0.3.7

The FortiAuthenticator (FAC) integrates with Active Directory (AD) on the Windows Domain Controller, which is also acting as the EMS server. Users are synchronized from the AD to the FAC, and remote users are configured with token-based authentication. SAML authentication is configured on the FortiGate, pointing to the FAC as the SAML IdP. The

SAML server is applied to the ZTNA application gateway authentication scheme and rule, to provide the foundation for applying user authentication on individual ZTNA policies.

## Configuring the FortiAuthenticator

First configure the FortiAuthenticator to synchronize users from AD using LDAP, apply MFA to individual remote users, and be the IdP.

### To create a remote authentication server pointing to the Windows AD:

1. Go to *Authentication > Remote Auth. Servers > LDAP* and click *Create New*.
2. Configure the following:

<b>Name</b>	FortiAD
<b>Primary server name / IP</b>	10.88.0.1
<b>Port</b>	389 (or another port if using LDAPS)
<b>Based distinguished name</b>	DC=fortiad,DC=info
<b>Bind type</b>	Regular
<b>Username</b>	<user account used for LDAP bind>
<b>Password</b>	<password of user>
<b>Server Type</b>	Microsoft Active Directory
<b>User object class</b>	person (default)
<b>Username attribute</b>	sAMAccountName (default)
<b>Group object class</b>	group (default)
<b>Obtain group membership from</b>	User attribute
<b>Group membership attribute</b>	memberOf (default)
<b>Secure connection</b>	Enable if using LDAPS or STARTTLS

3. Click *OK*.
4. Edit the *FortiAD* entry.
5. At the bottom, click *Import users*.

**Edit LDAP Server**

Name:

Primary server name/IP:  Port:

☐ Use secondary server

☐ Use Zero Trust tunnel

Base distinguished name:

Bind type:

Username:  Password:

Server type:

☐ Add supported domain names (used only if this is not a Windows Active Directory server)

**Query Elements**

User object class:

Username attribute:

Group object class:

Obtain group memberships from:

Group membership attribute:

☐ Force use of administrator account for group membership lookups

**Secure Connection**

☐ Enable

**Windows Active Directory Domain Authentication**

☐ Enable

6. On the *Import Remote LDAP User* screen, configure the following settings:
  - a. For *Remote LDAP Server*, select *FortiAD*.
  - b. For *Action*, select *Import users*.
    - i. Click *Go*.
    - ii. Select the users to import.
    - iii. Click *OK*.

The screen displays the users that are imported.

<input type="button" value="Import"/> <input type="button" value="Export Users"/> <input type="button" value="Delete"/> <input type="button" value="Re-Enable"/> <input type="text"/> <input type="button" value="LDAP"/> <input type="button" value="RADIUS"/> <input type="button" value="SAML"/> <input type="button" value="Refresh"/>						
<input type="checkbox"/>	Username	Remote LDAP Server	Admin	Status	Token	Token Requested
<input type="checkbox"/>	lhansen	FortiAD (10.88.0.1)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
<input type="checkbox"/>	rkilombo	FortiAD (10.88.0.1)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
<input type="checkbox"/>	tsmith	FortiAD (10.88.0.1)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Email (tsmi...	<input checked="" type="checkbox"/>

3 / 30000 remote LDAP users

For more details, see [LDAP](#) in the [FortiAuthenticator Administration Guide](#).

### To configure a remote LDAP user to use MFA:

1. Go to *Authentication > User Management > Remote Users*, and edit a user.
2. Enable *One-Time Password (OTP) authentication*.
  - a. Set *Deliver token codes from*.
  - b. Set *Deliver token by*.

For this example, select *FortiToken > Mobile*, select the Token from the drop-down list, and set the *Activation delivery method* to email.

3. In the *User Information* section, add the email address that will be used for the FortiToken activation.

**Edit Remote LDAP User**

Remote LDAP server: FortiAD (10.88.0.1)  
 Username: tsmith  
 Distinguished name: CN=Tom Smith,OU=Sales,DC=fortiad,DC=info

☐ Disabled  
☒ One-Time Password (OTP) authentication

Deliver token codes from: FortiAuthenticator FortiToken Cloud  
 Deliver token code by: FortiToken Email SMS Dual (Email & SMS) Test Token  
 Hardware Mobile

Token: FTKMOB1875E1E09F  
 Activation delivery method: Email SMS Scan QR code  
 Temporary token

☐ FIDO authentication  
☒ Allow RADIUS authentication  
☐ Sync in HA Load Balancing mode

**User Role**  
 Role: Administrator Sponsor **User**

**User Information**

Display name:   
 First name: Tom Last name: Smith  
 Email: tsmith@ztnademo.com Notify Phone number:   
 Mobile number: +1 506-234-5678 Notify SMS gateway: Use default  
 Company:   
 Department:   
 Title:   
 Birthdate:    
 Language: Use default

4. Click **OK**.

An activation email is sent to the user that they can use to install the token to their FortiToken Mobile app. For more details, see [Remote users](#) in the [FortiAuthenticator Administration Guide](#).

### To configure SAML IdP:

- Go to **Authentication > SAML IdP > General** and enable *Enable SAML Identity Provider portal*.
- The *Server address* is the device FQDN or IP address (configured in the System Information widget at **System > Dashboard > Status**). In this example, it is *fac.ztnademo.com*.
- Set *Username input format* to *username@realm*.
- Click *Add a realm* in the *Realms* table:
  - Set *Realm* to the just created LDAP realm (*FortiAD*).
  - Optionally, enable *Filter* and select the required users groups. In this example, *Sales* is configured.
- Set *Default IdP certificate* to the certificate that will be used in the HTTPS connection to the IdP portal.

**Edit SAML Identity Provider Settings**

☒ Enable SAML Identity Provider portal

Device FQDN: fac.ztnademo.com  
 Server address: fac.ztnademo.com  
 IdP-initiated login URL: https://fac.ztnademo.com/saml-idp/portal/   
 Username input format: ☒ username@realm ☐ realm\username ☐ realm/username

☒ Use default realm when user-provided realm is different from all configured realms

**Realms:**

Default	Realm	Allow Local Users To Override Remote Users	Groups	Delete
<input checked="" type="radio"/>	fortiad   FortiAD (10.88.0.1)	<input type="checkbox"/>	<input checked="" type="checkbox"/> Filter: Sales <input type="checkbox"/> Filter local users: <input type="button" value="X"/>	<input type="button" value="Add a realm"/>

Login session timeout: 480 minutes (5-1440)  
 Default IdP certificate: ZTNA\_Server | CN=\*,ztnademo.com  
☐ Automatically switch IdP certificate before its expiry time  
 Default signing algorithm: http://www.w3.org/2000/09/xmldsig#rsa-sha1  
☐ Get nested groups for user  
☐ IAM login

**OK**

6. Click **OK**.

7. Go to *Authentication > SAML IdP > Service Providers*, and click *Create New* to create a service provider (SP) for the FortiGate SP.
8. Configure the following, which must match what will be configured on the FortiGate:

<b>SP name</b>	saml-service-provider
<b>IdP prefix</b>	ztna
<b>Server certificate</b>	Use default setting in <i>SAML IdP &gt; General</i> page.
<b>SP entity ID</b>	http://webserver.ztnademo.com:9443/remote/saml/metadata/
<b>SP ACS (login) URL</b>	https://webserver.ztnademo.com:9443/remote/saml/login
<b>SP SLS (logout) URL</b>	https://webserver.ztnademo.com:9443/remote/saml/logout
<b>Participate in single logout</b>	Enable

Where the *SP entity ID*, *SP ACS (login) URL*, and *SP SLS (logout) URL* break down as follows:

- *webserver.ztnademo.com* - The FQDN that resolves to the FortiGate SP.
- *9443* - The port that is used to map to the FortiGate's SAML SP service.
- */remote/saml/* - The custom, user defined fields.
- */metadata*, */login*, and */logout* - The standard convention used to identify the SP entity, log in portal, and log out portal.

**Edit SAML Service Provider**

IdP address: fac.ztnademo.com

SP name: saml-service-provider

IdP prefix: ztna

IdP entity ID: http://fac.ztnademo.com/saml-idp/ztna/metadata/

IdP single sign-on URL: https://fac.ztnademo.com/saml-idp/ztna/login/

IdP single logout URL: https://fac.ztnademo.com/saml-idp/ztna/logout/

Server certificate: Use default setting in SAML IdP General page

IdP signing algorithm: Use default signing algorithm in SAML IdP General page

☐ Support IdP-initiated assertion response

☒ Participate in single logout

**SP Metadata**

SP entity ID: http://webserver.ztnademo.com:9443/remote/saml/metadata/

SP ACS (login) URL: https://webserver.ztnademo.com:9443/remote/saml/login/

SP SLS (logout) URL: https://webserver.ztnademo.com:9443/remote/saml/logout/

☐ SAML request must be signed by SP

**Authentication**

Authentication method:

- ☐ Mandatory password and OTP
- ☒ All configured password and OTP factors
- ☐ Password-only
- ☐ OTP-only
- ☐ FIDO-only

☐ Adaptive Authentication [Configure subnets](#)

Application name for FTM push notification:

☐ Use FIDO-only authentication if requested by the SP

**Assertion Attribute Configuration**

Subject NameID: Username

Format: urn:oasis:names:tc:SAML:2.0:nameid-format:unspecified

☐ Include realm name in subject NameID

**Assertion Attributes**

9. Click *OK*.
10. Edit the just created SP object and, under *Assertion Attribute*, click *Add Assertion Attribute*.
11. Set *SAML attribute* to the username and set *User attribute* to *Username*, then click *OK*.
12. Click *OK*.

For more details, see [Configuring SAML settings in the SAML Interoperability Guide](#).



## Configuring the FortiGate SAML settings

On the FortiGate, a SAML user is used to define the SAML SP and IdP settings. This user is then applied to the ZTNA proxy using an authentication scheme, rule, and settings. A ZTNA server is then created to allow access to the SAML SP server so that end users can reach the FortiGate SP's captive portal. The SAML user must then be added to a ZTNA policy to trigger authentication when accessing the ZTNA application gateway.

### To create a new SAML user/server from the GUI:

1. On the FortiGate, go to *User & Authentication > Single Sign-On*.
2. Click *Create New*.
3. Set *Name* to *ZTNA-FAC-SAML*.
4. Set *Address* to *webserver.ztnademo.com:9443*.

The *Entity ID*, *Assertion consumer service URL* and *Single logout service URL* will be updated. These should be the same URLs you inputted into FAC.

5. Enable *Certificate*, then select the certificate used for the client.

In this example, the *ztna-wildcard* certificate is a local certificate that is used to sign SAML messages that are exchanged between the client and the FortiGate SP.

6. Click *Next*.
7. Use the settings from the Identity Provider to fill the custom *Identity Provider Details*. In this example, we select *Fortinet Product*, and fill in the fields as follows:

<b>Address</b>	fac.ztnademo.com
<b>Prefix</b>	ztna
<b>IdP certificate</b>	REMOTE_Cert_1

- Where the `REMOTE_Cert_1` certificate is a remote certificate that is used to identify the IdP; in this example, `fac.ztnademo.com`.

8. Set *Attribute used to identify users* to *username*. Attributes to identify users and groups are case sensitive.

9. Click **Submit** to save the settings.

### To create a new SAML user/server from the CLI:

```
config user saml
  edit "ZTNA-FAC-SAML"
    set cert "ztna-wildcard"
    set entity-id "http://webserver.ztnademo.com:9443/remote/saml/metadata/"
    set single-sign-on-url "https://webserver.ztnademo.com:9443/remote/saml/login"
    set single-logout-url "https://webserver.ztnademo.com:9443/remote/saml/logout"
    set idp-entity-id "http://fac.ztnademo.com/saml-idp/ztna/metadata/"
    set idp-single-sign-on-url "https://fac.ztnademo.com/saml-idp/ztna/login/"
    set idp-single-logout-url "https://fac.ztnademo.com/saml-idp/ztna/logout/"
    set idp-cert "REMOTE_Cert_1"
    set user-name "username"
    set digest-method sha1
  next
end
```

### To create a user group for the SAML user object:

1. Under *User & Authentication > User Groups*, click *Create New*.
2. Set *Name* to *ztna-saml-users*.
3. Under *Remote Groups*, click *Add*.
4. For *Remote Server*, select *ZTNA-FAC-SAML*.
5. Click *OK*.
6. Click *OK* again to save.

### To apply the SAML server to proxy authentication from the GUI:

1. Go to *Policy & Objects > Authentication Rules*.
2. Click *Create New > Authentication Scheme*.
3. Set the name to *ZTNA-SAML-scheme*.

4. Set *Method* to *SAML*.
5. Set *SAML SSO server* to *ZTNA-FAC-SAML*.
6. Click *OK*.
7. Go to *Policy & Objects > Authentication Rules*.
8. Click *Create New > Authentication Rule*.
9. Set the *Name* to *ZTNA-SAML-rule*.
10. Set *Source Address* to *all*.
11. Set *Incoming interface* to *port3*.
12. Set *Protocol* to *HTTP*.
13. Enable *Authentication Scheme* and select *ZTNA-SAML-scheme*.
14. Set *IP-based Authentication* to *Disable*.
15. Click *OK*.

**To apply the SAML server to proxy authentication from the CLI:**

```
config authentication scheme
    edit "ZTNA-SAML-scheme"
        set method saml
        set saml-server "ZTNA-FAC-SAML"
    next
end
config authentication rule
    edit "ZTNA-SAML-rule"
        set srcintf "port3"
        set srcaddr "all"
        set ip-based disable
        set active-auth-method "ZTNA-SAML-scheme"
        set web-auth-cookie enable
    next
end
```

Assign an active authentication scheme and captive portal to serve the log in page for the SAML requests.

**To configure the active authentication scheme and captive portal from the GUI:**

1. Go to *User & Authentication > Authentication Settings*.
2. Enable *Authentication scheme*.
3. Select *ZTNA-SAML-scheme*.
4. Set *Captive portal type* to *FQDN*.
5. Enable *Captive Portal*.
6. Select the firewall address *webserver.ztnademo.com*. If this has not be created, create this firewall address.
7. Click *Apply* to save.

**To configure the active authentication scheme and captive portal from the CLI:**

```
config firewall address
    edit "webserver.ztnademo.com"
        set type fqdn
        set fqdn "webserver.ztnademo.com"
    next
```

```

end
config authentication setting
    set active-auth-scheme "ZTNA-SAML-scheme"
    set captive-portal "webserver.ztnademo.com"
end

```

### To configure a ZTNA application gateway to allow SAML authentication requests to the SP:

1. Configure the ZTNA server:

- a. Go to *Policy & Objects > ZTNA*, select the *ZTNA Servers* tab, and click *Create New*.
- b. Configure the following:

<b>Name</b>	ZTNA-access
<b>External interface</b>	Any
<b>External IP</b>	10.0.3.10
<b>External port</b>	9443
<b>SAML</b>	Enabled
<b>SAML SSO Server</b>	ZTNA-FAC-SAML
<b>Default certificate</b>	ztna-wildcard

- c. Click *OK*.

2. Define the full ZTNA policy to allow access to the ZTNA server:

- a. Go to *Policy & Objects > Proxy policy* and click *Create New*.
- b. Configure the following:

<b>Name</b>	ZTNA-Rule
<b>Type</b>	ZTNA
<b>Incoming Interface</b>	port3
<b>Source (Address)</b>	all
<b>Source (User)</b>	ztna-saml-users
<b>Destination</b>	all
<b>ZTNA Server</b>	ZTNA-access
<b>Action</b>	Accept
<b>Log Allowed Traffic</b>	All Sessions

- c. Click *OK*.

### To configure a VIP and a firewall policy to forward IdP authentication traffic to the FortiAuthenticator:

Remote clients connect to the FortiAuthenticator IdP behind the FortiGate using a VIP. In this example, users connect to the FQDN fac.ztnademo.com that resolves to the VIP's external IP address.

1. Configure the VIP to forward traffic to the FortiAuthenticator:
  - a. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
  - b. Configure the following:

<b>Name</b>	FAC-VIP
<b>Interface</b>	Any
<b>External IP address</b>	10.0.3.7
<b>Map to &gt; IPv4 address/range</b>	10.88.0.7
<b>Port Forwarding</b>	Enabled
<b>Protocol</b>	TCP
<b>External service port</b>	443
<b>Map to IPv4 port</b>	443

- c. Click *OK*.
2. Configure a firewall policy to allow VIP:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Configure the following:

<b>Name</b>	WAN_to_FAC
<b>Type</b>	Standard
<b>Incoming Interface</b>	port3
<b>Outgoing Interface</b>	port2
<b>Source</b>	All
<b>ZTNA Server</b>	FAC-VIP
<b>Schedule</b>	Always
<b>Service</b>	HTTP. HTTPS
<b>Action</b>	Accept
<b>NAT</b>	disabled

- c. Click *OK*.

## Example 1 - Applying SAML and MFA to ZTNA HTTPS access proxy

In this HTTPS access proxy example, two real servers are implemented with round robin load balancing performed between them. The HTTPS access proxy is configured on the same ZTNA server as was configured in the authentication step. The same ZTNA rule and firewall policy also apply.

**To configure the ZTNA server for HTTPS access proxy with load balancing:**

1. Go to *Policy & Objects > ZTNA* and select the *ZTNA Servers* tab.
2. Edit the ZTNA-access server.
3. In the *Service/server mapping* table, click *Create New*:
  - a. Set *Service* to *HTTPS*.
  - b. Set *Virtual Host* to *Any Host*.
  - c. In the *Servers* table click *Create New*:
    - i. Set *IP* to *10.88.0.3*.
    - ii. Set *Port* to *9443*.
    - iii. Set *Status* to *Active*.
    - iv. Click *OK*.
  - d. Create a second server with *IP 10.88.0.4*.
  - e. Click *OK*.
4. Enable *Load balancing*, and select the *Round Robin* algorithm.
5. Click *OK*.
6. Click *OK* again to finish.

**Testing and verification:**

From the remote endpoint, user Tom Smith attempts to connect to the web server over ZTNA:

1. On the remote Windows computer, open FortiClient and register to the EMS server.



It is not necessary to configure a *ZTNA Destination* on the FortiClient for the HTTPS access proxy use case. In fact, configuring a *ZTNA Destination* rule for the website may interfere with its operation.

2. Open a browser and attempt to connect to the web server at <https://webserver.ztnademo.com:9443>.
3. Device authentication prompts the user for their device certificate. Select the certificate issued by EMS and click *OK*.
4. FortiGate receives the SAML request and redirects the user to the IdP login screen. Enter the username and password for Tom Smith and click *Login*.
5. A second prompt opens asking for the *Token Code*. Enter the code then click *Verify*.

Not **tsmith**? [Sign in as a different user](#)

6. The FortiAuthenticator IdP verifies the login, then sends the SAML assertion back to the user.
7. The browser redirects the assertion to the FortiGate SP, which decides if the user is allowed access.
8. On a successful login, FortiGate redirects the user to the web page that they are trying to access.

## Logs and debugs:

On the FortiGate, a successful connection can be seen in *Log & Report > Forward Traffic log*, or by using the CLI:

```
# execute log filter category 0
# execute log filter field subtype srcip
# execute log display
...
2: date=2023-05-09 time=00:47:56 eventtime=1683618475812847145 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=17201
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.4 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=141588
service="tcp/9443" proxyapptype="http" proto=6 action="accept" policyid=1 policytype="proxy-
policy" policyname="ZTNA-Rule" duration=83 user="tsmith" group="ztna-saml-users"
authserver="ZTNA-FAC-SAML" gatewayid=1 realserverid=2 vip="ZTNA-access" accessproxy="ZTNA-
access" clientdevicemanageable="manageable" wanin=316227 rcvdbyte=316227 wanout=6477
lanin=14843 sentbyte=14843 lanout=315122 appcat="unscanned"
...
8: date=2023-05-09 time=00:46:09 eventtime=1683618369392379538 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=17177
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.3 dstport=9443 dstintf="port2" dstintfrole="dmz" sessionid=141526
service="tcp/9443" proxyapptype="http" proto=6 action="accept" policyid=1 policytype="proxy-
policy" poluid="08a04362-ee38-51ed-77fa-737e2656f04a" policyname="ZTNA-Rule" duration=63
user="tsmith" group="ztna-saml-users" authserver="ZTNA-FAC-SAML" gatewayid=1 realserverid=1
vip="ZTNA-access" accessproxy="ZTNA-access" clientdevicemanageable="manageable" wanin=313997
rcvdbyte=313997 wanout=4894 lanin=14676 sentbyte=14676 lanout=314865 appcat="unscanned"
...
10: date=2023-05-09 time=00:45:26 eventtime=1683618326285366024 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root" srcip=10.0.3.2
srcport=17181 srcintf="port3" srcintfrole="wan" dstip=10.0.3.7 dstport=443 dstintf="port2"
dstintfrole="dmz" srccountry="Reserved" dstcountry="Reserved" sessionid=141539 proto=6
action="client-rst" policyid=6 policytype="policy" poluid="2e840d4e-1184-51ec-63b9-
9b805a8b7344" policyname="WAN_to_FAC" service="HTTPS" trandisp="dnat" tranip=10.88.0.7
transport=443 duration=10 sentbyte=3449 rcvdbyte=4372 sentpkt=13 rcvdpkt=13
appcat="unscanned"
```

Log number ten shows that authentication first passes through the WAN\_to\_FAC policy. Log numbers two and eight show the traffic allowed through the ZTNA proxy-policy over two successive sessions. Note that they have different destination IP addresses (dstip), indicating that ZTNA was performing server load balancing.

Use the following command to show if the FortiGate's WAD process has an active record of the SAML user login:

```
# diagnose wad user list

ID: 8, VDOM: root, IPv4: 10.0.3.2
  user name      : tsmith
  worker         : 1
  duration       : 332
  auth_type      : Session
  auth_method    : SAML
  pol_id         : 1
  g_id           : 4
  user_based     : 0
  expire         : 390
  LAN:
    bytes_in=29519 bytes_out=629987
```

WAN:

bytes\_in=958636 bytes\_out=19201

## Example 2 - Applying SAML and MFA to a ZTNA TCP forwarding access proxy for RDP connections

In this TCP forwarding access proxy example, RDP connections are allowed to be forwarded to the Windows/EMS server. Traffic to TCP/3389 is allowed through the ZTNA proxy.

### To configure the ZTNA server for TCP forwarding on TCP/3389:

1. Create a firewall address for the Windows/EMS server:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the following:

<b>Name</b>	winserver
<b>Type</b>	Subnet
<b>IP/Netmask</b>	10.88.0.1/32
<b>Interface</b>	any

- c. Click *OK*.
2. Go to *Policy & Objects > ZTNA* and select the *ZTNA Servers* tab.
3. Edit the ZTNA-access server.
4. In the *Service/server mapping* table, click *Create New*:
  - a. Set *Service* to *TCP Forwarding*.
  - b. In the *Servers* table click *Create New*:
    - i. Set *Address* to *winserver*.
    - ii. Set *Ports* to *3389*.
    - iii. Click *OK*.
  - c. Click *OK*.
5. Click *OK*.

### Testing and verification:

On the remote endpoint, manually configure a ZTNA destination to forward RDP traffic to the ZTNA application gateway. The rules can also be pushed from the EMS server; for details see [Provisioning ZTNA TCP forwarding rules via EMS](#).

Configure the ZTNA Destination:

1. On the remote Windows computer, open FortiClient.
2. Register to the EMS server.
3. On the *ZTNA Destination* tab, click *Add Destination* to add a TCP forwarding rule.



## 4. Configure the following:

<b>Rule Name</b>	RDP-server
<b>Destination Host</b>	10.88.0.1:3389
<b>Proxy Gateway</b>	10.0.3.10:9443
<b>Mode</b>	Transparent
<b>Encryption</b>	Disabled <i>Encryption</i> can be enabled or disabled. When it is disabled, the client to access proxy connection is not encrypted in HTTPS. Because RDP is encrypted by default, disabling <i>Encryption</i> does not reduce security.

5. Click *Create*.

Connect over RDP:

1. On the remote PC, open a new RDP connection.
2. Enter the IP address 10.88.0.1. By default, RDP session use port 3389.  
When the connection to the ZTNA application gateway is established, FortiGate will redirect the SAML login request to the FortiAuthenticator IdP.  
A FortiClient prompt will open with the FortiAuthenticator login screen.
3. Enter the username and password then click *Login*.
4. A second prompt opens asking for the *Token Code*. Enter the code from your FortiToken app, then click *Verify*.
5. FortiAuthenticator verifies the token code, determines if the login is successful, then sends the SAML assertion back to the client.
6. The client redirects the response back to the FortiGate SP.
7. If the log in was successful, the user can now log on to the RDP session.

## Logs and debugs:

On the FortiGate, a successful connection can be seen in *Log & Report > Forward Traffic log*, or by using the CLI:

```
# execute log filter category 0
# execute log filter field srcip 10.0.3.2
# execute log display
...
8: date=2023-05-09 time=01:14:34 eventtime=1683620074907124357 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=17556
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.1 dstport=3389 dstintf="port2" dstintfrole="dmz" sessionid=142359
service="RDP" proxyapptype="http" proto=6 action="accept" policyid=1 policytype="proxy-
policy" poluid="08a04362-ee38-51ed-77fa-737e2656f04a" policyname="ZTNA-Rule" duration=85
user="tsmith" group="ztna-saml-users" gatewayid=3 vip="ZTNA-access" accessproxy="ZTNA-
access" clientdevicemanageable="manageable" wanin=0 rcvdbyte=0 wanout=0 lanin=3639
sentbyte=3639 lanout=3797 appcat="unscanned"

9: date=2023-05-09 time=01:14:16 eventtime=1683620056835075857 tz="-0700" logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="root" srcip=10.0.3.2 srcport=17571
srcintf="port3" srcintfrole="wan" dstip=10.0.3.7 dstport=443 dstintf="port2"
dstintfrole="dmz" srccountry="Reserved" dstcountry="Reserved" sessionid=142389 proto=6
action="client-rst" policyid=6 policytype="policy" poluid="2e840d4e-1184-51ec-63b9-
9b805a8b7344" policyname="WAN_to_FAC" service="HTTPS" trandisp="dnat" tranip=10.88.0.7
```

```
transport=443 duration=10 sentbyte=3368 rcvdbyte=4376 sentpkt=13 rcvdpkt=13
appcat="unscanned"
```

Use the following command to show if the FortiGate's WAD process has an active record of the SAML user login:

```
# diagnose wad user list
```

```
ID: 9, VDOM: root, IPv4: 10.0.3.2
  user name   : tsmith
  worker      : 1
  duration    : 164
  auth_type   : Session
  auth_method : SAML
  pol_id      : 1
  g_id        : 4
  user_based  : 0
  expire      : no
LAN:
  bytes_in=80950 bytes_out=233010
WAN:
  bytes_in=219973 bytes_out=58315
```

### Example 3 - Applying SAML and MFA to a ZTNA SSH access proxy

In this SSH access proxy example, SSH connections can be forwarded to the FortiAnalyzer (10.88.0.2).

**To configure the ZTNA server for SSH access proxy:**

1. Create a firewall address for the web server:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the following:

<b>Name</b>	FAZ
<b>Type</b>	Subnet
<b>IP/Netmask</b>	10.88.0.2/32
<b>Interface</b>	any

- c. Click *OK*.
2. Go to *Policy & Objects > ZTNA* and select the *ZTNA Servers* tab.
3. Edit the ZTNA-access server.
4. In the *Service/server mapping* table, edit the *TCP Forwarding* entry:
  - a. In the *Servers* table click *Create New*:
    - i. Set *Address* to *FAZ*.
    - ii. Set *Ports* to *22*.
    - iii. Optionally, enable *Additional SSH Options* to configure other SSH options as needed.
    - iv. Click *OK*.
  - b. Click *OK*.
5. Click *OK*.

## Testing and verification:

On the remote endpoint, manually configure ZTNA destination to forward SSH traffic to the ZTNA access proxy. The destination can also be pushed from the EMS server; for details see [Provisioning ZTNA TCP forwarding rules via EMS](#).

Configure the ZTNA Destination:

1. On the remote Windows computer, open FortiClient.
2. Register to the EMS server.
3. On the *ZTNA Destination* tab, click *Add Destination* to add a TCP forwarding rule.
4. Configure the following:

<b>Rule Name</b>	SSH-FAZ
<b>Destination Host</b>	10.88.0.2:22
<b>Proxy Gateway</b>	10.0.3.10:9443
<b>Mode</b>	Transparent
<b>Encryption</b>	Disabled

5. Click *Create*.

Connect over SSH:

1. On the remote PC, open a new SSH connection.
2. Enter the host admin@10.88.0.2 on port 22.  
When the connection to the ZTNA application is established, FortiGate will redirect the SAML login request to the FortiAuthenticator IdP.  
A FortiClient prompt will open with the FortiAuthenticator login screen.
3. Enter the username and password then click *Login*.
4. A second prompt opens asking for the *Token Code*. Enter the code from your FortiToken app, then click *Verify*.
5. FortiAuthenticator verifies the token code, determines if the login is successful, then sends the SAML assertion back to the client.
6. The client redirects the response back to the FortiGate SP.
7. If the log in was successful, the user can now log on to the SSH session.

## Logs and debugs:

On the FortiGate, a successful connection can be seen in *Log & Report > Forward Traffic log*, or by using the CLI:

```
# execute log filter category 0
# execute log filter field srcip 10.0.3.2
# execute log display
...
5: date=2023-05-09 time=10:06:04 eventtime=1683651963820802005 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.0.3.2 srcport=22536
srcintf="port3" srcintfrole="wan" dstcountry="Reserved" srccountry="Reserved"
dstip=10.88.0.2 dstport=22 dstintf="port2" dstintfrole="dmz" sessionid=151696 service="SSH"
proxyapptype="http" proto=6 action="accept" policyid=1 policytype="proxy-policy"
policyname="ZTNA-Rule" duration=9 user="tsmith" group="ztna-saml-users" gatewayid=3
vip="ZTNA-access" accessproxy="ZTNA-access" clientdevicemanageable="manageable" wanin=2981
rcvdbyte=2981 wanout=2753 lanin=4663 sentbyte=4663 lanout=5247 appcat="unscanned"
```

Use the following command to show if the FortiGate's WAD process has an active record of the SAML user login:

```
# diagnose wad user list
```

```
ID: 10, VDOM: root, IPv4: 10.0.3.2
```

```
user name : tsmith
```

```
worker : 1
```

```
duration : 387
```

```
auth_type : Session
```

```
auth_method : SAML
```

```
pol_id : 1
```

```
g_id : 4
```

```
user_based : 0
```

```
expire : no
```

```
LAN:
```

```
bytes_in=23261 bytes_out=14024
```

```
WAN:
```


```
bytes_in=3242 bytes_out=2541
```

## ZTNA IP MAC based access control example

In this example, firewall policies are configured that use ZTNA tags to control access between on-net devices and an internal web server. This mode does not require the use of the access proxy, and only uses ZTNA tags for access control. Traffic is passed when the FortiClient endpoint meets two conditions.

1. It is tagged with the *Domain-Users* ZTNA tag, identifying the device as logged on to the Domain.
2. It has the *High* importance classification tag indicating the device is High importance and low risk.

Traffic is denied when the FortiClient endpoint is tagged with *Malicious-File-Detected*.

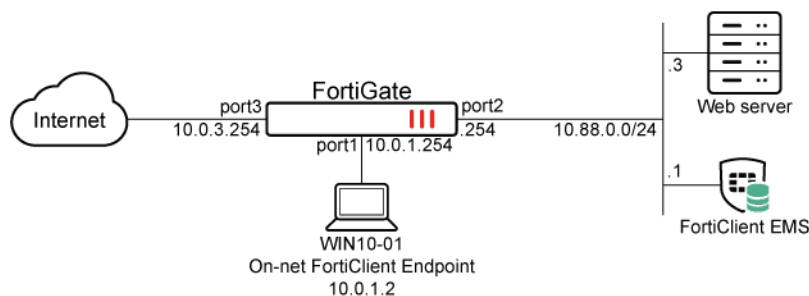

This example assumes that the FortiGate EMS fabric connector is already successfully connected.




To configure ZTNA in the GUI, go to *System > Feature Visibility* and enable *Zero Trust Network Access*.

### To configure Zero Trust tagging rules on the FortiClient EMS:

1. Log in to the FortiClient EMS.
2. Go to *Zero Trust Tags > Zero Trust Tagging Rules*, and click *Add*.
3. In the *Name* field, enter *Malicious-File-Detected*.
4. In the *Tag Endpoint As* dropdown list, select *Malicious-File-Detected*.
5. Click *Add Rule* then configure the rule:


- a. For OS, select *Windows*.
- b. From the *Rule Type* dropdown list, select *File* and click the + button.
- c. Enter a file name, such as *C:\virus.txt*.
- d. Click **Save**.

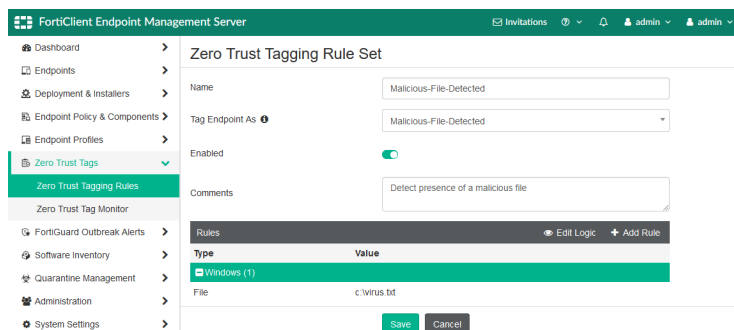

6. Click **Save**.
7. Click **Add** again to add another rule.
8. In the *Name* field, enter *Domain-Users*.
9. In the *Tag Endpoint As* dropdown list, enter *Domain-Users* and press **Enter**.
10. Click **Add Rule**, then configure the rule:
  - a. For OS, select *Windows*.
  - b. From the *Rule Type* dropdown list, select *User in AD Group*.
  - c. For *AD Group*, select the *Domain-Users* AD group.
  - d. Click **Save**.

### To configure a classification tag on the FortiClient EMS:

1. Go to *Endpoint > All Endpoints*.
2. Select the WIN10-01 computer that will be granted access. This computer should be already registered to FortiClient EMS.
3. In the *Summary* tab, under *Classification Tags*, click **Add** and then set to High Importance.

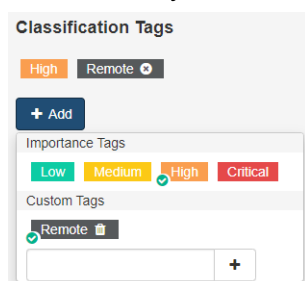

4. Go to *Administration > Fabric Devices*.
5. Select the connecting FortiGate, then click **Edit**.
6. Under *Tag Types Being Shared*, add *Classification Tags*.
7. Click **Save**.

**To configure a firewall policy with IP/MAC based access control to deny traffic in the GUI:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Set *Name* to *block-internal-malicious-access*.
3. Set *Type* to *Standard*.
4. Set *Incoming Interface* to *port1*.
5. Set *Outgoing Interface* to *port2*.
6. Set *Source* to *all*.
7. Set *IP/MAC Based Access Control* to the *Malicious-File-Detected* tag.
8. Set *Destination* to the address of the Web server. If no address is created, create a new address object for 10.88.0.3/32.
9. Set *Service* to *ALL*.
10. Set *Action* to *DENY*.
11. Enable *Log Violation Traffic*.
12. Configuring the remaining settings as needed.
13. Click *OK*.

**To configure a firewall policy with IP/MAC based access control to allow access in the GUI:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Set *Name* to *allow-internal-access*.
3. Set *Type* to *Standard*.
4. Set *Incoming Interface* to *port1*.
5. Set *Outgoing Interface* to *port2*.
6. Set *Source* to *all*.
7. Set *IP/MAC Based Access Control* to the *Domain-Users ZTNA IP* tag.
8. Set *Logical And With Secondary Tags* to *Specify*. This option allows for a second group of tags to be used with a logical And operator.
9. Set *Secondary Tags* as the *High Class IP* tag.
10. Set *Destination* to the address of the Web server.
11. Set *Service* to *ALL*.
12. Set *Action* to *ACCEPT*.
13. Enable *Log Allowed Traffic* and set it to *All Sessions*.
14. Configuring the remaining settings as needed.
15. Click *OK*.

**To configure firewall policies with IP/MAC based access control to block and allow access in the CLI:**

```
config firewall policy
  edit 10
    set name "block-internal-malicious-access"
    set srcintf "port1"
    set dstintf "port2"
    set ztna-status enable
    set srcaddr "all"
    set dstaddr "Webserver"
    set ztna-ems-tag "EMS1_ZTNA_Malicious-File-Detected"
```

```
        set schedule "always"
        set service "ALL"
        set logtraffic all
    next
edit 12
    set name "allow-internal-access"
    set srcintf "port1"
    set dstintf "port2"
    set action accept
    set ztna-status enable
    set srcaddr "all"
    set dstaddr "Webserver"
    set ztna-ems-tag "EMS1_ZTNA_Domain-Users"
    set ztna-ems-tag-secondary "EMS1_CLASS_High"
    set schedule "always"
    set service "ALL"
    set logtraffic all
next
end
```



When multiple tags are selected with `set ztna-ems-tag <tags>`, matching occurs using a logical OR operator. Therefore any single tag that match will return true.

The `set ztna-tags-match-logic {and | or}` option cannot be used to change the logical operator. This option is applied by wad to tags selected for ZTNA proxy-policy.

The `set ztna-ems-tag-secondary <tags>` option by default allows a second group of tags to be specified. This group and the primary group are joined by the logical and operator.


---

## Testing the access to the web server from the on-net client endpoint

### Access allowed:


1. On the WIN10-01 PC, open FortiClient.
2. On the *Zero Trust Telemetry* tab, make sure that you are connected to the EMS server.
3. Open a browser and enter the address of the server.
4. The FortiGate matches your security posture by verifying your ZTNA tags and matching the corresponding `allow-`

`internal-access` firewall policy, and you are allowed access to the web server.

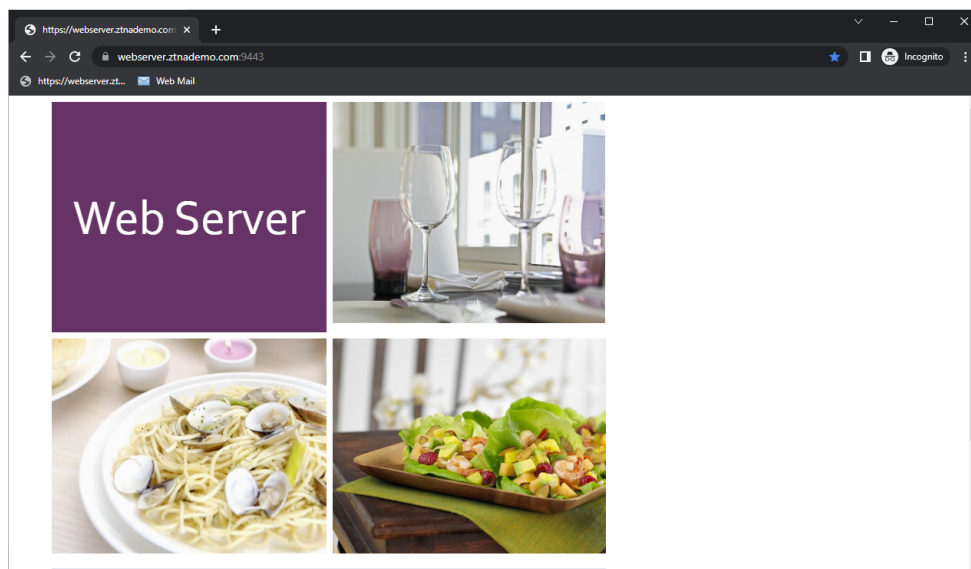

#### Access denied:

 1. On the WIN10-01 PC, trigger the Zero Trust Tagging Rule by creating the file in `C:\virus.txt`.
2. Open a browser and enter the address of the server.
3. FortiGate checks your security posture. Because EMS has tagged the PC with the *Malicious-File-Detected* tag, it matches the *block-internal-malicious-access* firewall policy.
4. You are denied access to the web server.



#### This site can't be reached

`webserver.ztnademo.com` took too long to respond.

Try:

- [Checking the connection](#)
- [Checking the proxy and the firewall](#)

ERR\_CONNECTION\_TIMED\_OUT

[Reload](#)

[Details](#)

## Logs and debugs

#### Access allowed:

```
# diagnose endpoint record list
```

```
Record #1:
```

```
IP Address = 10.0.1.2
```

```
MAC Address = 02:09:0f:00:01:02
```



```

MAC list =
VDM = root (0)
EMS serial number: FCTEMS8822001975
EMS tenant id: 00000000000000000000000000000000
Client cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Public IP address: 34.23.223.220
Quarantined: no
Online status: online
Registration status: registered
On-net status: on-net
Gateway Interface: port1
FortiClient version: 7.2.0
...
Number of Routes: (1)
    Gateway Route #0:
        - IP:10.0.1.2, MAC: 02:09:0f:00:01:02, VPN: no
        - Interface:port1, VFID:0, SN: FGVM02TM22013111
online records: 1; offline records: 0; quarantined records: 0; out-of-sync records: 0

# diagnose wad dev query-by uid 9A016B5A6E914B42AD4168C066EB04CA FCTEMS8822001975
00000000000000000000000000000000
Attr of type=0, length=83, value(ascii)=9A016B5A6E914B42AD4168C066EB04CA
Attr of type=4, length=0, value(ascii)=
Attr of type=6, length=1, value(ascii)=true
Attr of type=5, length=40, value(ascii)=2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Attr of type=3, length=66, value(ascii)=ZTNA_Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=68, value(ascii)=ZTNA_Remote-Allowed_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=83, value(ascii)=ZTNA_Group-Membership-Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=59, value(ascii)=CLASS_High_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=61, value(ascii)=CLASS_Remote_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=76, value(ascii)=ZTNA_all_registered_clients_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Response termination due to no more data

# diagnose firewall dynamic list
List all dynamic addresses:
IP dynamic addresses in VDM root(vfid: 0):
...
CMDB name: EMS1_CLASS_High
TAG name: High
EMS1_CLASS_High: ID(134)
    RANGE(10.0.1.0-10.0.0.255)
    ADDR(10.0.1.2)
Total IP dynamic range blocks: 1.
Total IP dynamic addresses: 0.
...
CMDB name: EMS1_ZTNA_Domain-Users
TAG name: Domain-Users
EMS1_ZTNA_Domain-Users: ID(186)
    RANGE(10.0.1.0-10.0.0.255)
    ADDR(10.0.1.2)

```

```

Total IP dynamic range blocks: 1.
Total IP dynamic addresses: 0.

# diagnose test application fcnacd 7
Entry #1:
- UID: 9A016B5A6E914B42AD4168C066EB04CA
- EMS Fabric ID: FCTEMS8822001975:00000000000000000000000000000000
- Sys upd time: 2023-05-11 01:39:29.5936762
- Tag upd time: 2023-05-11 06:24:59.1435977
lls_idx_mask = 0x00000001
#ID:0
UID:      9A016B5A6E914B42AD4168C066EB04CA
State:    sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online:   Yes
Route IP:10.0.1.2
vfid:     0
has more:No
Tags:
idx:0, ttl:1    name:Domain-Users
idx:1, ttl:1    name:Remote-Allowed
idx:2, ttl:1    name:Group-Membership-Domain-Users
idx:3, ttl:2    name:High
idx:5, ttl:2    name:Remote
idx:6, ttl:1    name:all_registered_clients

# execute log filter field srcip 10.0.1.2
# execute log display
35: date=2023-05-10 time=23:22:14 eventtime=1683786134265076528 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root" srcip=10.0.1.2
srcport=14358 srcintf="port1" srcintfrole="undefined" dstip=10.88.0.3 dstport=9443
dstintf="port2" dstintfrole="dmz" srcuid="b458a65a-f759-51ea-d7df-ef2e750026d1"
dstuid="592dfb72-0775-51ec-aa79-94bd9894388c" srccountry="Reserved" dstcountry="Reserved"
sessionid=177080 proto=6 action="server-rst" policyid=12 policytype="policy"
poluid="aaeld38a-efc2-51ed-e820-ff7964c9bdeb" policyname="allow-internal-access"
service="tcp/9443" trandisp="noop" duration=130 sentbyte=2821 rcvdbyte=310602 sentpkt=31
rcvdpkt=222 appcat="unscanned" sentdelta=0 rcvddelta=40

```

### Access denied:

```

# diagnose wad dev query-by uid 9A016B5A6E914B42AD4168C066EB04CA FCTEMS8822001975
00000000000000000000000000000000
Attr of type=0, length=83, value(ascii)=9A016B5A6E914B42AD4168C066EB04CA
Attr of type=4, length=0, value(ascii)=
Attr of type=6, length=1, value(ascii)=true
Attr of type=5, length=40, value(ascii)=2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
Attr of type=3, length=66, value(ascii)=ZTNA_Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=68, value(ascii)=ZTNA_Remote-Allowed_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=83, value(ascii)=ZTNA_Group-Membership-Domain-Users_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=59, value(ascii)=CLASS_High_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000
Attr of type=3, length=77, value(ascii)=ZTNA_Malicious-File-Detected_
FCTEMS8822001975000000000000000000000000000000000000000000000000000000

```

```
Attr of type=3, length=61, value(ascii)=CLASS_Remote_
FCTEMS882200197500000000000000000000000000000000000000
Attr of type=3, length=76, value(ascii)=ZTNA_all_registered_clients_
FCTEMS882200197500000000000000000000000000000000000000

# diagnose firewall dynamic list
List all dynamic addresses:
...
CMDB name: EMS1_ZTNA_Malicious-File-Detected
TAG name: Malicious-File-Detected
EMS1_ZTNA_Malicious-File-Detected: ID(205)
RANGE(10.0.1.0-10.0.0.255)
ADDR(10.0.1.2)
Total IP dynamic range blocks: 1.
Total IP dynamic addresses: 0.

# diagnose test application fcnacd 7
Entry #1:
...
State: sysinfo:1, tag:1, tagsz:1, out-of-sync:0
Owner:
Cert SN: 2B8D4FF0E71FE7E064288FE1B4F87E25232092D0
online: Yes
Route IP:10.0.1.2
vfid: 0
has more:No
Tags:
idx:0, ttldl:1 name:Domain-Users
idx:1, ttldl:1 name:Remote-Allowed
idx:2, ttldl:1 name:Group-Membership-Domain-Users
idx:3, ttldl:2 name:High
idx:4, ttldl:1 name:Malicious-File-Detected
idx:5, ttldl:2 name:Remote
idx:6, ttldl:1 name:all_registered_clients

# execute log filter field srcip 10.0.1.2
# execute log display

1: date=2023-05-10 time=23:37:02 eventtime=1683787022146761572 tz="-0700" logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="root" srcip=10.0.1.2 srcport=14609
srcintf="port1" srcintfrole="undefined" dstip=10.88.0.3 dstport=9443 dstintf="port2"
dstintfrole="dmz" srccuid="b458a65a-f759-51ea-d7df-ef2e750026d1" dstuuid="592dfb72-0775-
51ec-aa79-94bd9894388c" srccountry="Reserved" dstcountry="Reserved" sessionid=177409 proto=6
action="deny" policyid=10 policypolicytype="policy" poluid="92938512-ef9a-51ed-6a39-bafb9147e9aa"


policyname="block-internal-malicious-access" service="tcp/9443" trandisp="noop" duration=0
sentbyte=0 rcvdbyte=0 sentpkt=0 rcvdpkt=0 appcat="unscanned" crscore=30 craction=131072
crlevel="high"



```

## ZTNA IPv6 examples

IPv6 can be configured in ZTNA in several scenarios:

- IPv6 Client — IPv6 Access Proxy — IPv6 Server
- IPv6 Client — IPv6 Access Proxy — IPv4 Server
- IPv4 Client — IPv4 Access Proxy — IPv6 Server

These examples show the basic configuration for each scenario. It is assumed that the EMS fabric connector is already successfully connected.

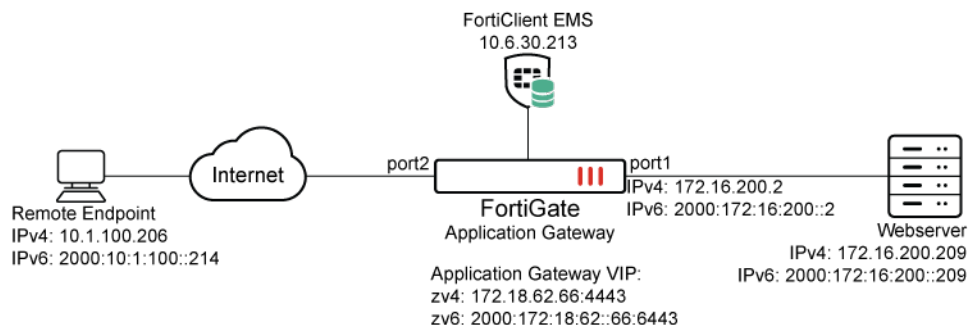

## Example 1: IPv6 Client — IPv6 Access Proxy — IPv6 Server

### To configure the FortiGate:

#### 1. Configure the IPv6 access proxy VIP:

```

config firewall vip6
    edit "zv6"
        set type access-proxy
        set extip 2000:172:18:62::66
        set server-type https
        set extport 6443
        set ssl-certificate "cert"
    next
end

```

#### 2. Configure a virtual host:

```

config firewall access-proxy-virtual-host
    edit "vhost_ipv6"
        set ssl-certificate "cert"
        set host "qa6.test.com"
    next
end

```

The client uses this address to connect to the access proxy.

#### 3. Configure an IPv6 access proxy and IPv6 api-gateway, apply the VIP6 and virtual host to it, and assign an IPv6 address to the realserver:

```

config firewall access-proxy6
    edit "zs6"
        set vip "zv6"
        config api-gateway6
            edit 1
                set virtual-host "vhost_ipv6"
                config realservers
                    edit 1
                        set ip 2000:172:16:200::209
                    next
                end
            next
        end
    next
end

```

```

        end
    next
end

```

#### 4. Apply the IPv6 access proxy to a proxy policy:

```

config firewall proxy-policy
    edit 1
        set name "ztna_rule"
        set proxy access-proxy
        set access-proxy6 "zs6"
        set srcintf "port2"
        set action accept
        set schedule "always"
        set logtraffic all
        set srcaddr6 "all"
        set dstaddr6 "all"
        set utm-status enable
        set ssl-ssh-profile "custom-deep-inspection"
        set webfilter-profile "monitor-all"
    next
end

```

#### 5. Apply the IPv6 VIP to a firewall policy:

```

config firewall policy
    edit 4
        set name "ZTNA"
        set srcintf "port2"
        set dstintf "any"
        set action accept
        set srcaddr6 "all"
        set dstaddr6 "zv6"
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy
        set logtraffic all
        set nat enable
    next
end

```

### To test the configuration:

1. On an IPv6 client, ensure that the address [qa6.test.com](https://qa6.test.com) resolves to the IPv6 VIP address of 2000:172:18:62::66.
2. In a browser, connect to <https://qa6.test.com:6443>.
3. After device certificate verification, the browser will open up the webpage on the IPv6 real server.
4. In the Forward Traffic Log, the following log is available:

```

3: date=2021-06-25 time=13:38:18 eventtime=1624653498459580215 tz="-0700"
logid="0000000024" type="traffic" subtype="forward" level="notice" vd="root"
srcip=2000:10:1:100::214 srcport=55957 srcintf="port2" srcintfrole="undefined"
dstcountry="Reserved" srccountry="Reserved" dstip=2000:172:16:200::209 dstport=443
dstintf="root" dstintfrole="undefined" sessionid=92406 service="HTTPS" proto=6
action="accept" policyid=1 policytype="proxy-policy" poluid="7afdac8c-d5db-51eb-dfc6-
67bb86e4bdcf" policynome="ztna_rule" duration=5 wanin=2031 rcvdbyte=2031 wanout=1332
lanin=1247 sentbyte=1247 lanout=950 appcat="unscanned" utmaction="allow" countweb=1
utmref=65445-0

```

## Example 2: IPv6 Client — IPv6 Access Proxy — IPv4 Server

### To configure the FortiGate:

#### 1. Configure the IPv6 access proxy VIP:

```
config firewall vip6
    edit "zv6"
        set type access-proxy
        set extip 2000:172:18:62::66
        set server-type https
        set extport 6443
        set ssl-certificate "cert"
    next
end
```

#### 2. Configure a virtual host:

```
config firewall access-proxy-virtual-host
    edit "vhost_ipv6"
        set ssl-certificate "cert"
        set host "qa6.test.com"
    next
end
```

The client uses this address to connect to the access proxy.

#### 3. Configure an IPv6 access proxy and IPv6 api-gateway, apply the VIP6 and virtual host to it, and assign an IPv4 address to the realserver:

```
config firewall access-proxy6
    edit "zs6"
        set vip "zv6"
        config api-gateway6
            edit 1
                set virtual-host "vhost_ipv6"
                config realservers
                    edit 1
                        set ip 172.16.200.209
                    next
                end
            next
        end
    next
end
```

#### 4. Apply the IPv6 access proxy to a proxy policy:

```
config firewall proxy-policy
    edit 1
        set name "ztna_rule"
        set proxy access-proxy
        set access-proxy6 "zs6"
        set srcintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
```

```

        set logtraffic all
        set srcaddr6 "all"
        set dstaddr6 "all"
        set utm-status enable
        set ssl-ssh-profile "custom-deep-inspection"
        set webfilter-profile "monitor-all"
    next
end

```

##### 5. Apply the IPv6 VIP to a firewall policy:

```

config firewall policy
    edit 4
        set name "ZTNA"
        set srcintf "port2"
        set dstintf "any"
        set action accept
        set srcaddr6 "all"
        set dstaddr6 "zv6"
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy
        set logtraffic all
        set nat enable
    next
end

```

#### To test the configuration:

1. On an IPv6 client, ensure that the address [qa6.test.com](https://qa6.test.com) resolves to the IPv6 VIP address of 2000:172:18:62::66.
2. In a browser, connect to <https://qa6.test.com:6443>.
3. After device certificate verification, the browser will open up the webpage on the IPv4 real server.
4. In the Forward Traffic Log, the following log is available:

```

2: date=2021-06-25 time=13:46:54 eventtime=1624654014129553521 tz="-0700"
logid="0000000024" type="traffic" subtype="forward" level="notice" vd="root"
srcip=2000:10:1:100::214 srcport=60530 srcintf="port2" srcintfrole="undefined"
dstcountry="Reserved" srccountry="Reserved" dstip=172.16.200.209 dstport=443
dstintf="root" dstintfrole="undefined" sessionid=219 service="HTTPS" proto=6
action="accept" policyid=1 policytype="proxy-policy" poluid="7afdac8c-d5db-51eb-dfc6-
67bb86e4bdcf" policyname="ztna_rule" duration=5 wanin=2028 rcvdbyte=2028 wanout=1321
lanin=1236 sentbyte=1236 lanout=947 appcat="unscanned" utmaction="allow" countweb=1
utmref=65443-14

```

### Example 3: IPv4 Client — IPv4 Access Proxy — IPv6 Server

#### To configure the FortiGate:

1. Configure the IPv4 access proxy VIP:

```

config firewall vip
    edit "zv4"
        set type access-proxy
        set extip 172.18.62.66
        set extintf "any"
    next
end

```

```
        set server-type https
        set extport 4443
        set ssl-certificate "cert"
    next
end
```

## 2. Configure a virtual host:

```
config firewall access-proxy-virtual-host
    edit "vhost_ipv4"
        set ssl-certificate "cert"
        set host "qa.test.com"
    next
end
```

The client uses this address to connect to the access proxy.

## 3. Configure an IPv4 access proxy and IPv6 api-gateway, apply the VIP and virtual host to it, and assign an IPv6 address to the realserver:

```
config firewall access-proxy
    edit "zs4"
        set vip "zv4"
        config api-gateway6
            edit 1
                set virtual-host "vhost_ipv4"
                config realservers
                    edit 1
                        set ip 2000:172:16:200::209
                    next
                end
            next
        end
    next
end
next
end
```

## 4. Apply the IPv4 access proxy to a proxy policy:

```
config firewall proxy-policy
    edit 1
        set name "ztna_rule"
        set proxy access-proxy
        set access-proxy "zs4"
        set srcintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set logtraffic all
        set srcaddr6 "all"
        set dstaddr6 "all"
        set utm-status enable
        set ssl-ssh-profile "custom-deep-inspection"
        set webfilter-profile "monitor-all"
    next
end
```

## 5. Apply the IPv4 VIP to a firewall policy:



```

config firewall policy
  edit 4
    set name "ZTNA"
    set srcintf "port2"
    set dstintf "any"
    set action accept
    set srcaddr "all"
    set dstaddr "zv4"
    set schedule "always"
    set service "ALL"
    set inspection-mode proxy
    set logtraffic all
    set nat enable
  next
end

```

### To test the configuration:

1. On an IPv4 client, ensure that the address [qa6.test.com](https://qa6.test.com) resolves to the IPv4 VIP address of 172.18.62.66.
2. In a browser, connect to <https://qa6.test.com:6443>.
3. After device certificate verification, the browser will open up the webpage on the IPv6 real server.
4. In the Forward Traffic Log, the following log is available:


```

1: date=2021-06-25 time=13:52:30 eventtime=1624654350689576485 tz="-0700"
logid="0000000024" type="traffic" subtype="forward" level="notice" vd="root"
srcip=10.1.100.206 srcport=53492 srcintf="port2" srcintfrole="undefined"
dstcountry="Reserved" srccountry="Reserved" dstip=2000:172:16:200::209 dstport=443
dstintf="root" dstintfrole="undefined" sessionid=726 service="HTTPS" proto=6
action="accept" policyid=1 policytype="proxy-policy" poluuid="7afdac8c-d5db-51eb-dfc6-
67bb86e4bdcf" policyname="ztna_rule" duration=0 wanin=1901 rcvdbyte=1901 wanout=736
lanin=569 sentbyte=569 lanout=3040 appcat="unscanned" utmaction="allow" countweb=1
utmref=65443-28

```

## ZTNA Zero Trust application gateway example

The Zero Trust application gateway (ZTAG) for SaaS applications delivers Zero Trust Network Access (ZTNA) to companies that deploy SaaS applications and services in the cloud. A Zero Trust application gateway is deployed in the cloud, protecting resources on the private subnets by enforcing security and access control.

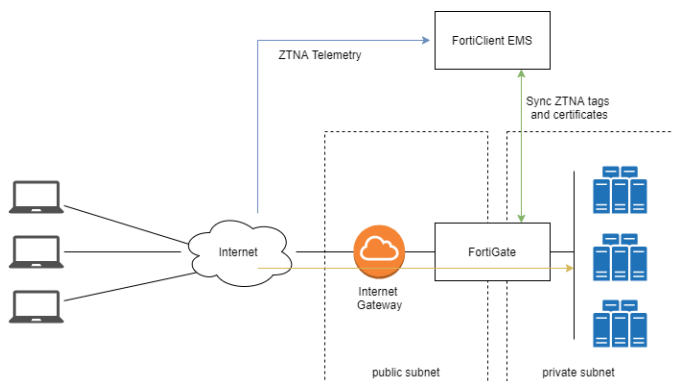

A Zero Trust application gateway can be deployed directly on AWS and Azure. The deployment template can configure the necessary ZTNA settings to get the ZTNA configurations started.

For more information, see the [Zero Trust Application Gateway Admin Guide](#).

## ZTNA access proxy with KDC to access shared drives

Kerberos Key Distribution Center (KDC) proxy protocol can be used to remotely authenticate domain users and issue Kerberos tickets. A remote user can use the same Kerberos ticket to authenticate when remotely accessing shared drives through ZTNA access proxy.

The following options are available when setting up ZTNA access proxy on TCP 445 for remote access to mapped drives:

- Create the mapped drive using the server's IP address, which uses Windows NT LAN Manager (NTLM) to authenticate users.
- Create the mapped drive using the server's FQDN (or DNS name), which requires Kerberos authentication.

The preferred way to create mapped drives is using the server's DNS name. KDC proxy protocol can be a reliable way to initiate Kerberos authentication for remote users to seamlessly access mapped drives and requires the following steps:

1. [Set up the KDC proxy service on a server.](#)
2. [Set up the ZTNA access proxy for mapped drives.](#)



The KDC Proxy only works for domain-joined workstations.

---

## Setting up the KDC proxy service

The following steps are required to set up the KDC proxy service on a server:

1. [Deploy a server that is joined to the domain and create a trusted certificate.](#)
2. [Configure the KDC proxy service on the server.](#)
3. [Configure clients to use the KDC proxy.](#)
4. [If client machines cannot retrieve group policy updates, configure registry keys on the clients.](#)

## Deploying a server and creating a certificate

Deploy a server that is joined to the domain. At a minimum, the server must have a public network interface with a domain name pointed to it. Clients will connect to the server over the internet. For networking, you can forward port 443 if necessary.

Create a trusted certificate for the public domain name of the proxy endpoint:

- Domain: fortitest.net
- KDC proxy: kdcproxy.fortitest.net

The KDC proxy service is present on the server, but not configured.

## Configuring the KDC proxy service on the server

The KDC proxy service must be configured before it can be started.

### To configure the server:

1. Start an elevated command prompt, and configure a URL ACL for the endpoint:

```
netsh http add urlacl url=https://+:443/KdcProxy user="NT authority\Network Service"
```

2. Associate the certificate created previously with the endpoint:

```
netsh http add sslcert ipport=0.0.0.0:443 certhash=<thumbprint of your certificate>
appid={generated Guid}
```

This association instructs HTTP.SYS to use the certificate when connections occur over HTTPS.

For example: `netsh http add sslcert ipport=0.0.0.0:443`

```
certhash=aaaabbbbccccdddeeeeffff0000111122223333 appid={aaaaaaaa-bbbb-cccc-dddd-
aaaabbbbcccc}
```



For `appid` you should generate a random GUID here. From PowerShell try `[Guid]::NewGuid()`. The `certhash` is the thumbprint of your certificate.

---

3. If not using smart card certificates (or Windows Hello) for authentication, disable the certificate authentication requirement:

```
REG ADD "HKLM\SYSTEM\CurrentControlSet\Services\KPSSVC\Settings" /v HttpsClientAuth /t
REG_DWORD /d 0x0 /f
```

4. Additionally if not using certificates, enable password authentication:

```
REG ADD "HKLM\SYSTEM\CurrentControlSet\Services\KPSSVC\Settings" /v
DisallowUnprotectedPasswordAuth /t REG_DWORD /d 0x0 /f
```

5. Configure the KDC Proxy Service (KPSSVC) to start automatically:

```
sc config kpssvc start=auto
```

6. Start the service:

```
net start kpssvc
```

## Configuring clients to use a KDC proxy

Clients must be configured to use a KDC proxy. This can be done through GPO or through modifying the registry directly. The GPO path is:

```
Computer Configuration\Policies\Administrative Templates\System\Kerberos\Specify KDC proxy
servers for Kerberos clients
```

Enabling this policy requires setting a realm-to-value mapping. The realm is your domain name, starting with a period (for example `".fortitesting.net"`), or a `"*"` to include all domains in a wildcard format. The value is specially crafted:

```
<https kdcproxy.fortitesting.net:10446:kdcproxy />
```

If using a custom path or port, you can specify it explicitly; otherwise, you can leave them empty and the client will fill in the rest:

```
<https kdcproxy.fortitest.net />
```

Deploy the policy, and reboot the client. Wait a while for caching to complete, and then log in. You should find users are now authenticating over the KDC proxy endpoint.

To verify from a logged in session, launch a command prompt and try the following command:

```
klist get krbtgt
```

## Configuring registry keys on clients

If you are trying to deploy these settings on a client machine that cannot retrieve group policy updates, manually configure the registry keys for the client:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Policies\System\Kerberos]
"KdcProxyServer_Enabled"=dword:00000001
```

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Policies\System\Kerberos\KdcProxy\ProxyServers]
"*"="<https kdcproxy.fortitest.net />" or ".fortitest.net"="<https kdcproxy.fortitest.net />"
```

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Policies\System\Kerberos\Parameters]
"NoRevocationCheck"=dword:00000000
```

## Setting up the ZTNA access proxy for mapped drives

The following steps are required to set up ZTNA access proxy for mapped drives on the FortiGate:


1. [Configure FortiClient to have the ZTNA destination rule.](#)
2. [Configure ZTNA on FortiGate.](#)

## Configuring a ZTNA destination rule on FortiClient


The ZTNA destination rule can be configured by using FortiClient EMS or by manually configuring FortiClient. The destination host matches the server's FQDN on port 445, and the proxy gateway should be the FortiGate WAN port on the chosen external port.

Another rule is required for the KDC proxy communication with the destination host defined as the FQDN of the KDC proxy server and port 443.


The map network drive configuration should be the last step after configuring the FortiGate. The following example shows the mapped drive:

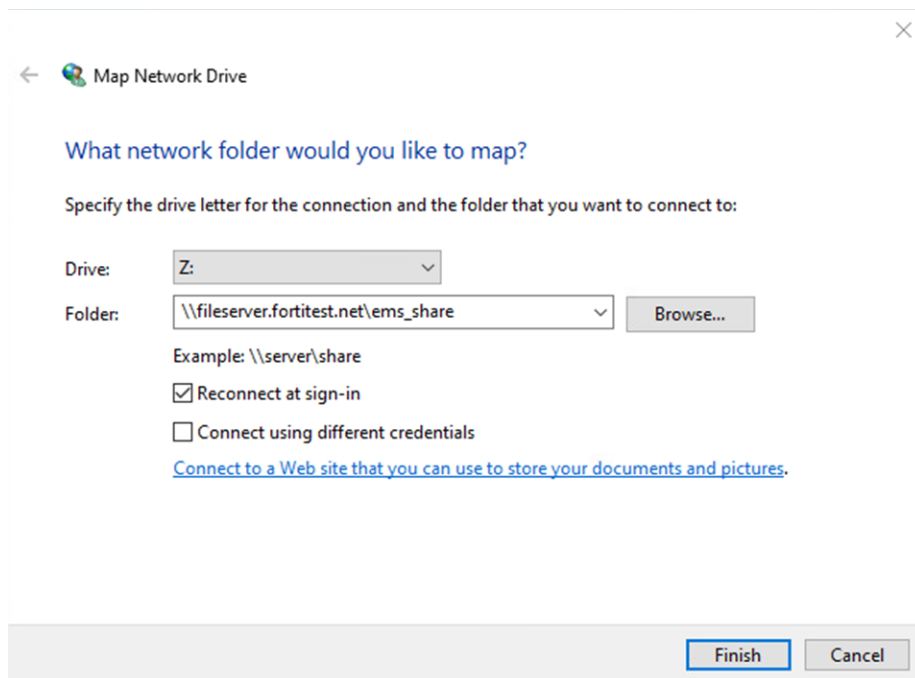

The following example shows a ZTNA destination configured in FortiClient with the *Proxy Gateway*:

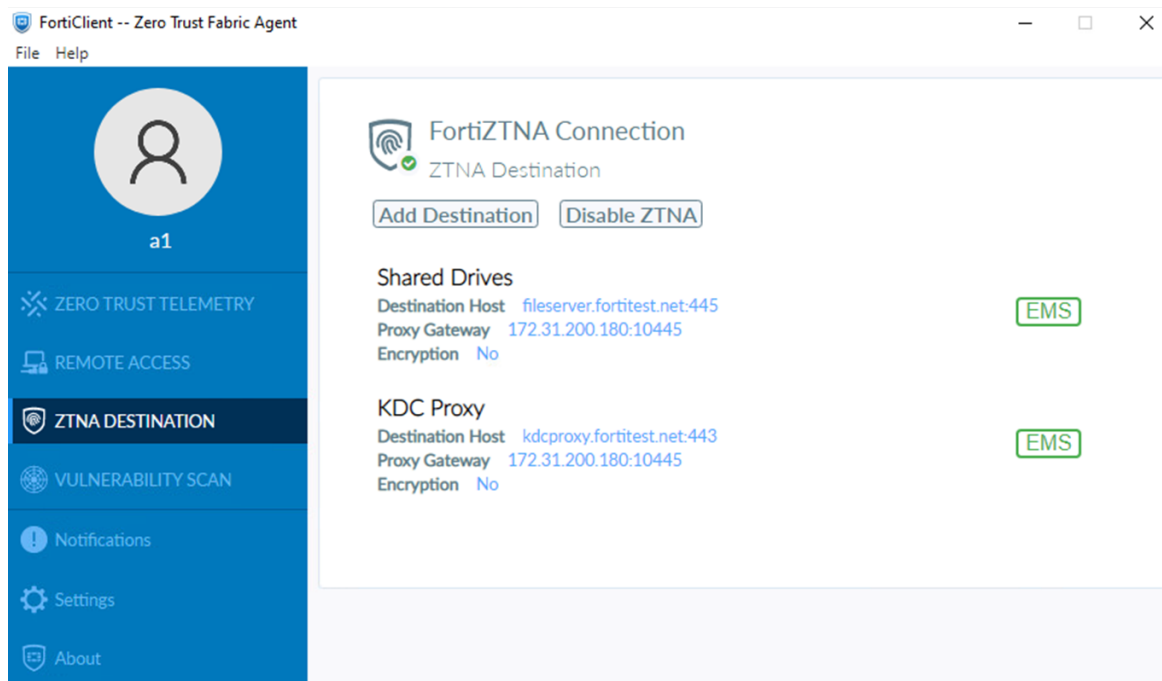


The following example shows the registry settings:

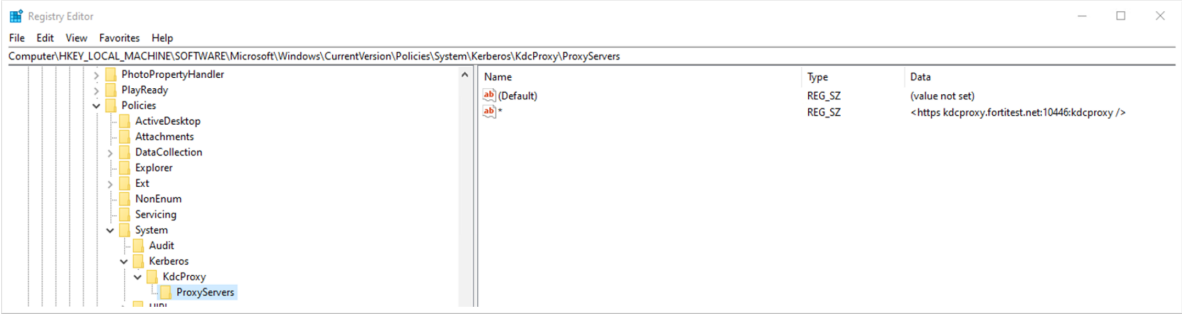

Configuring FortiGate

A ZTNA server and a proxy policy are required to verify and forward the incoming requests on port 10445 to the file server on port 445 as well as to the KDC proxy server on port 443.

The following example shows the ZTNA server:

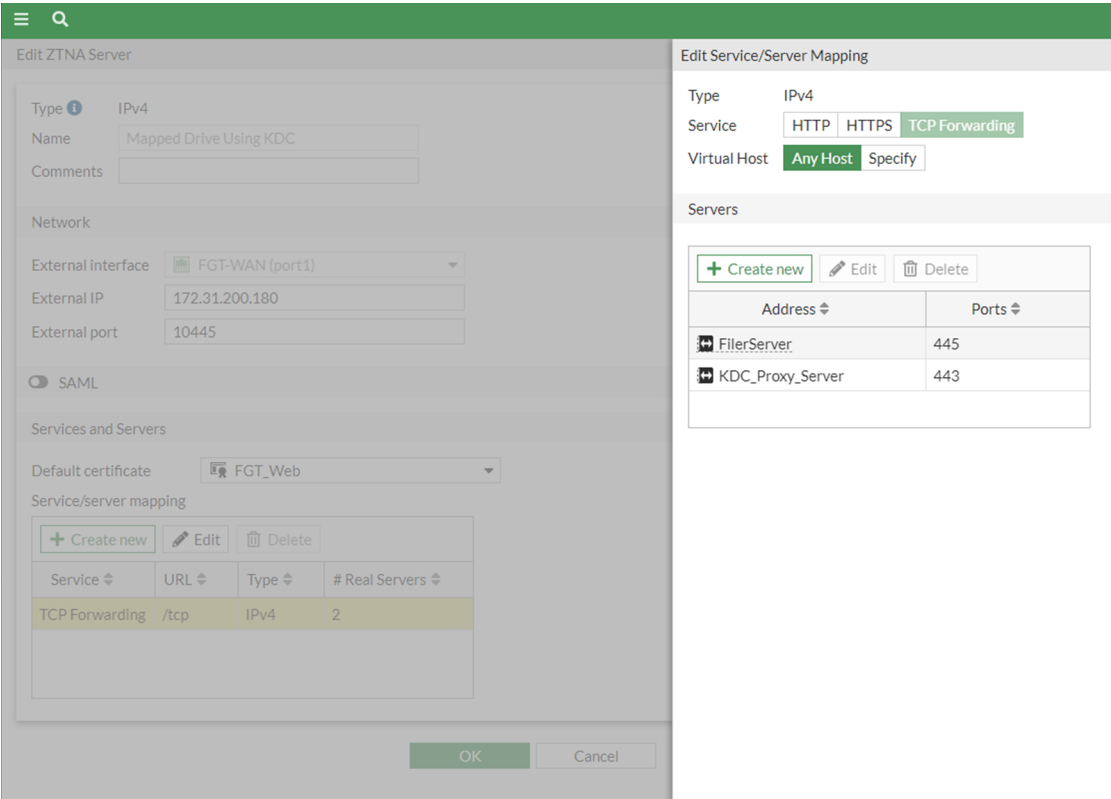

The following example shows the proxy policy:

Edit Proxy Policy

Name ⓘ

Mapped Drive Using KDC

Type

Explicit WebTransparent WebFTPZTNA

Incoming Interface

FGT-WAN (port1)

Source

all

+

ZTNA Tag

+

Destination

FilerServer

KDC\_Proxy\_Server

+

ZTNA Server

Mapped Drive Using KDC

+

Schedule

always

Action

ACCEPTDENY

Security Profiles

AntiVirus

Web Filter

Application Control

IPS

File Filter

SSL Inspection

SSLno-inspection

Logging Options

Log Allowed Traffic ⓘ

Security EventsAll Sessions

Comments

Write a comment...0/1023

Enable this policy

OK

Cancel

ZTNA troubleshooting and debugging commands

The following debug commands can be used to troubleshoot ZTNA issues:

Command	Description
# diagnose endpoint fctems test-connectivity <EMS>	Verify FortiGate to FortiClient EMS connectivity.
# execute fctems verify <EMS>	Verify the FortiClient EMS's certificate.
# diagnose test application fcnacd 2	Dump the EMS connectivity information.
# diagnose debug app fcnacd -1 # diagnose debug enable	Run real-time FortiClient NAC daemon debugs.
# diagnose endpoint record list <ip>	Show the endpoint record list. Optionally, filter by the endpoint IP address.

Command	Description
# diagnose endpoint lls-comm send ztna find-uid <uid> <EMS_serial_number> <EMS_tenant_id>	Query endpoints by client UID, EMS serial number, and EMS tenant ID.
# diagnose endpoint lls-comm send ztna find-ip-vdom <ip> <vdom>	Query endpoints by the client IP-VDOM pair.
# diagnose wad dev query-by uid <uid> <EMS_serial_number> <EMS_tenant_id>	Query from WAD diagnose command by UID, EMS serial number, and EMS tenant ID.
# diagnose wad dev query-by ipv4 <ip>	Query from WAD diagnose command by IP address.
# diagnose firewall dynamic list	List EMS ZTNA tags and all dynamic IP and MAC addresses.
# diagnose test application fcnacd 7 # diagnose test application fcnacd 8	Check the FortiClient NAC daemon ZTNA and route cache.
# diagnose wad worker policy list	Display statistics associated with access proxy rules.
# diagnose wad debug enable category all # diagnose wad debug enable level verbose # diagnose debug enable	Run real-time WAD debugs.
# diagnose debug reset	Reset debugs when completed



The WAD daemon handles proxy related processing. The FortiClient NAC daemon (fcnacd) handles FortiGate to EMS connectivity.

## Troubleshooting usage and output

### 1. Verify the FortiGate to EMS connectivity and EMS certificate:

```
# diagnose endpoint fctems test-connectivity WIN10-EMS
Connection test was successful:

# execute fctems verify WIN10-EMS
Server certificate already verified.

# diagnose test application fcnacd 2
EMS context status:
FortiClient EMS number 1:
    name: WIN10-EMS confirmed: yes
    fetched-serial-number: FCTEMS0000109188
Websocket status: connected
```

### 2. If fcnacd does not report the proper status, run real-time fcnacd debugs:

```
# diagnose debug app fcnacd -1
# diagnose debug enable
```

### 3. Verify the following information about an endpoint:



- Network information
- Registration information
- Client certificate information
- Device information
- Vulnerability status
- Relative position with the FortiGate

```
# diagnose endpoint record list 10.6.30.214
Record #1:
    IP Address = 10.6.30.214
    MAC Address = 00:0c:29:ba:1e:61
    MAC list = 00:0c:29:ba:1e:61;00:0c:29:ba:1e:6b;
    VDOM = root (0)
    EMS serial number: FCTEMS8821001322
    EMS tenant id: 00000000000000000000000000000000
    Client cert SN: 17FF6595600A1AF53B87627AB4EBEDD032593E64
    Quarantined: no
    Online status: online
    Registration status: registered
    On-net status: on-net
    Gateway Interface: port2
    FortiClient version: 7.0.0
    AVDB version: 84.778
    FortiClient app signature version: 18.43
    FortiClient vulnerability scan engine version: 2.30
    FortiClient UID: 5FCFA3ECDE4D478C911D9232EC9299FD
    Host Name: ADPC
    ...
    Number of Routes: (1)
        Gateway Route #0:
            - IP:10.1.100.214, MAC: 00:0c:29:ba:1e:6b, Indirect: no
            - Interface:port2, VFID:0, SN: FG5H1E5819902474
online records: 1; offline records: 0; quarantined records: 0
```

#### 4. Query the endpoint information, include ZTNA tags, by UID or IP address:

```
# diagnose endpoint lls-comm send ztna find-uid 5FCFA3ECDE4D478C911D9232EC9299FD
FCTEMS8821001322 00000000000000000000000000000000
UID: 5FCFA3ECDE4D478C911D9232EC9299FD
EMS Fabric ID: FCTEMS8821001322:00000000000000000000000000000000
    status code:ok
    Domain: qa.wangd.com
    User: user1
    Cert SN:17FF6595600A1AF53B87627AB4EBEDD032593E64
    EMS SN: FCTEMS8821001322
    Routes(1):
        - route[0]: IP=10.1.100.214, VDom=root
    Tags(3):
        - tag[0]: name=ZT_OS_WIN
        - tag[1]: name=all_registered_clients
        - tag[2]: name=Medium

# diagnose endpoint lls-comm send ztna find-ip-vdom 10.1.100.214 root
UID: 5FCFA3ECDE4D478C911D9232EC9299FD
    status code:ok
    Domain: qa.wangd.com
```

```
User: user1
Cert SN:17FF6595600A1AF53B87627AB4EBEDD032593E64
EMS SN: FCTEMS8821001322
Routes(1):
- route[0]: IP=10.1.100.214, VDom=root
Tags(3):
- tag[0]: name=ZT_OS_WIN
- tag[1]: name=all_registered_clients
- tag[2]: name=Medium
```

## 5. Query endpoint information from WAD by UID or IP address:

```
# diagnose wad dev query-by uid 5FCFA3ECDE4D478C911D9232EC9299FD FCTEMS8821001322
00000000000000000000000000000000
Attr of type=0, length=32, value(ascii)=5FCFA3ECDE4D478C911D9232EC9299FD
Attr of type=4, length=30, value(ascii)=MAC_FCTEMS8821001322_ZT_OS_WIN
Attr of type=4, length=26, value(ascii)=FCTEMS8821001322_ZT_OS_WIN
Attr of type=4, length=43, value(ascii)=MAC_FCTEMS8821001322_all_registered_clients
Attr of type=4, length=39, value(ascii)=FCTEMS8821001322_all_registered_clients
Attr of type=4, length=27, value(ascii)=MAC_FCTEMS8821001322_Medium
Attr of type=4, length=23, value(ascii)=FCTEMS8821001322_Medium
Attr of type=5, length=18, value(ascii)=FOSQA@qa.wangd.com
Attr of type=6, length=40, value(ascii)=17FF6595600A1AF53B87627AB4EBEDD032593E64

# diagnose wad dev query-by ipv4 10.1.100.214
Attr of type=0, length=32, value(ascii)=5FCFA3ECDE4D478C911D9232EC9299FD
Attr of type=4, length=30, value(ascii)=MAC_FCTEMS8821001322_ZT_OS_WIN
Attr of type=4, length=26, value(ascii)=FCTEMS8821001322_ZT_OS_WIN
Attr of type=4, length=43, value(ascii)=MAC_FCTEMS8821001322_all_registered_clients
Attr of type=4, length=39, value(ascii)=FCTEMS8821001322_all_registered_clients
Attr of type=4, length=27, value(ascii)=MAC_FCTEMS8821001322_Medium
Attr of type=4, length=23, value(ascii)=FCTEMS8821001322_Medium
Attr of type=5, length=18, value(ascii)=FOSQA@qa.wangd.com
Attr of type=6, length=40, value(ascii)=17FF6595600A1AF53B87627AB4EBEDD032593E64
```

**6.** List all the dynamic ZTNA IP and MAC addresses learned from EMS:

```
# diagnose firewall dynamic list
List all dynamic addresses:
FCTEMS0000109188_all_registered_clients: ID(51)
    ADDR(172.17.194.209)
    ADDR(192.168.40.8)
...
FCTEMS0000109188_Low: ID(78)
    ADDR(172.17.194.209)
    ADDR(192.168.40.8)
...
FCTEMS0000109188_Malicious-File-Detected: ID(190)
    ADDR(172.17.194.209)
    ADDR(192.168.40.8)
...
```

7. Check the FortiClient NAC daemon ZTNA and route cache:

```
# diagnose test application fcnacd 7
ZTNA Cache:
-uid 5FCFA3ECDE4D478C911D9232EC9299FD: { "tags": [ "ZT_OS_WIN", "all_registered_
clients", "Medium" ], "domain": "qa.wangd.com", "user name": "user1", "client cert sn":
```

```
"17FF6595600A1AF53B87627AB4EBEDD032593E64", "owner": "FOSQA@qa.wangd.com", "gateway_
route_list": [ { "gateway_info": { "fgt_sn": "FG5H1E5819902474", "interface": "port2",
"vdom": "root" }, "route_info": [ { "ip": "10.1.100.214", "mac": "00-0c-29-ba-1e-6b",
"route_type": "direct" } ] } ], "ems_sn": "FCTEMS8821001322" }
```

```
# diagnose test application fcnacd 8
IP-VfID Cache:
IP: 10.1.100.206, vfid: 0, uid: 3DED29B54386416E9888F2DCBD2B9D21
IP: 10.1.100.214, vfid: 0, uid: 5FCFA3ECDE4D478C911D9232EC9299FD
```

## 8. Troubleshoot WAD with real-time debugs to understand how the proxy handled a client request:

```
# diagnose wad debug enable category all
# diagnose wad debug enable level verbose
# diagnose debug enable

[0x7fbd7a46bb60] Received request from client: 10.10.10.20:56312
GET / HTTP/1.1 Host: 192.168.2.86:8443 Connection: keep-alive Cache-Control: max-age=0
Upgrade-Insecure-Requests: 1 User-Agent: Mozilla/5.0 (Windows NT 10.0; Win64; x64)
AppleWebKit/537.36 (KHTML, like Gecko) Chrome/89.0.4389.90 Safari/537.36 Edg/89.0.774.57
Accept:
text/html,application/xhtml+xml,application/xml;q=0.9,image/webp,image/apng,*/*;q=0.8,ap
plication/signed-exchange;v=b3;q=0.9 Sec-Fetch-Site: none Sec-Fetch-Mode: navigate Sec-
Fetch-User: ?1 Sec-Fetch-Dest: document Accept-Encoding: gzip, deflate, br Accept-
Language: en-US,en;q=0.9 [p:29957][s:458767][r:1] wad_http_marker_uri(1269): path=/
len=1
[p:29957][s:458767][r:1] wad_http_parse_host(1641): host_len=17
[p:29957][s:458767][r:1] wad_http_parse_host(1677): len=12
[p:29957][s:458767][r:1] wad_http_parse_host(1686): len=4
[p:29957][s:458767][r:1] wad_http_str_canonicalize(2180): path=/ len=1 changes=0
[p:29957][s:458767][r:1] wad_http_str_canonicalize(2189): path=/ len=1 changes=0
[p:29957][s:458767][r:1] wad_http_normalize_uri(2232): host_len=12 path_len=1 query_
len=0
[p:29957][s:458767][r:1] wad_vs_proxy_match_gwy(2244): 6:WIN2K16-P1: matching gwy with
vhost(_def_virtual_host_)
[p:29957][s:458767][r:1] wad_vs_proxy_match_vhost(2293): 6:WIN2K16-P1: matching vhost
by: 192.168.2.86
[p:29957][s:458767][r:1] wad_vs_matcher_map_find(477): Empty matcher!
[p:29957][s:458767][r:1] wad_vs_proxy_match_vhost(2296): 6:WIN2K16-P1: no host matched.
[p:29957][s:458767][r:1] wad_vs_proxy_match_gwy(2263): 6:WIN2K16-P1: matching gwy by (/)
with vhost(_def_virtual_host_).
[p:29957][s:458767][r:1] wad_pattern_matcher_search(1210): pattern-match succ:/
[p:29957][s:458767][r:1] wad_vs_proxy_match_gwy(2271): 6:WIN2K16-P1: Matched gwy(1) type
(https).
[p:29957][s:458767][r:1] wad_http_vs_check_dst_ovrd(776): 6:WIN2K16-P1:1: Found server:
192.168.20.6:443
[p:29957][s:458767][r:1] wad_http_req_exec_act(9296): dst_addr_type=3 wc_nontp=0 sec_
web=1 web_cache=0 req_bypass=0
[p:29957][s:458767][r:1] wad_http_req_check_policy(8117): starting policy matching(vs_
pol= 1):10.10.10.20:56312->192.168.20.6:443
[p:29957][s:458767][r:1] wad_fw_addr_match_ap(1524): matching ap:WIN2K16(7) with vip
addr:WIN2K16-P1(10)
[p:29957][s:458767][r:1] wad_fw_addr_match_ap(1524): matching ap:WIN2K16-P1(10) with vip
addr:WIN2K16-P1(10)
[p:29957][s:458767][r:1] wad_http_req_policy_set(6811): match pid=29957 policy-id=2 vd=0
in_if=3, out_if=7 10.10.10.20:56312 -> 192.168.20.6:443
[p:29957][s:458767][r:1] wad_cifs_profile_init(93): CIFS Profile 0x7fbd7a5bf200 [] of
```

```
type 0 created
[p:29957][s:458767][r:1] wad_http_req_proc_policy(6622): web_cache(http/https=0/0, fwd_
srv=<nil>).
[p:29957][s:458767][r:1] wad_auth_inc_user_count(1668): increased user count,
quota:128000, n_shared_user:2, vd_used: 2, vd_max: 0, vd_gurantee: 0
[p:29957][s:458767][r:1] __wad_fmем_open(563): fmem=0xaaee3e8, fmem_name='cmem 336
bucket', elm_sz=336, block_sz=73728, overhead=20, type=advanced
[p:29957][s:458767][r:1] __wad_hauth_user_node_hold(2107): wad_hauth_user_node_alloc
(1568): holding node 0x7fbd76d48060
mapping user_node:0x7fbd76d48060, user_ip:0x7fbd7a57b408(0), user:0x7fbd7a5cf420(0)
[p:29957][s:458767][r:1] __wad_hauth_user_node_hold(2107): wad_user_node_stats_hold
(483): holding node 0x7fbd76d48060
[p:29957][s:458767][r:1] __wad_hauth_user_node_hold(2107): wad_http_session_upd_user_
node (4813): holding node 0x7fbd76d48060
[p:29957][s:458767][r:1] wad_http_req_proc_policy(6698): policy result:vf_id=0:0 sec_
profile=0x7fbd7a5bef00 set_cookie=0
[p:29957][s:458767][r:1] wad_http_urlfilter_check(381): uri_norm=1 inval_host=0 inval_
url=0 scan_hdr/body=1/0 url_local=0 block=0 user-cat=0 allow=0 ftgd=0 keyword=0 wisp=0
[p:29957][s:458767][r:1] wad_http_req_proc_waf(1309): req=0x7fbd7a46bb60 ssl.deep_scan=1
proto=10 exempt=0 waf=(nil) body_len=0 ua=Chrome/89.0.4389.90 skip_scan=0
[p:29957][s:458767][r:1] wad_http_req_proc_antiphish(5376): Processing antiphish request
[p:29957][s:458767][r:1] wad_http_req_proc_antiphish(5379): No profile
[p:29957][s:458767][r:1] wad_http_connect_server(4696): http session 0x7fbd7a532ac8
req=0x7fbd7a46bb60
[p:29957][s:458767][r:1] wad_http_srv_still_good(4575): srv((nil)) nontp(0) dst_type(3)
req: dst:192.168.20.6:443, proto:10)
hcs: dst:N/A:0, proto:1)
```



Always reset the debugs after using them:

```
# diagnose debug reset
```

---


## ZTNA troubleshooting scenarios

This topic describes how to troubleshoot common FortiClient endpoint IP/MAC access control issues for the following topologies:

- [ZTNA access control on page 1030](#)
- [IP/MAC based access control on page 1032](#)

### ZTNA access control

In this topology, FortiClient endpoints use an SSL encrypted connection to the FortiGate access proxy to access protected resources. FortiGate works with FortiClient EMS to use a combination of IP/MAC addresses and ZTNA tags to control FortiClient endpoint access to resources.

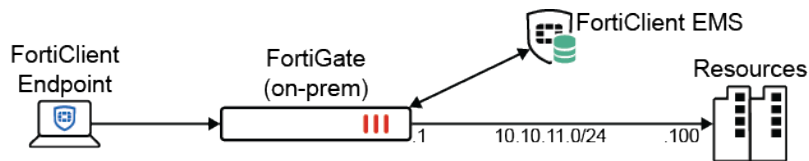

This section describes how to handle the following errors:

- [Invalid ZTNA certificate on page 1031](#)
- [ZTNA policy mismatch on page 1031](#)

## Invalid ZTNA certificate

When FortiClient attempts to access a server protected by ZTNA, an *Invalid ZTNA certificate* error is shown. This error often appears when the serial number for the ZTNA certificate differs between the endpoint and the FortiGate.

1. Check the serial number for the ZTNA certificate on the endpoint and the FortiGate:
  - a. On the endpoint, check the serial number for the certificate.
  - b. On the FortiGate, check the serial number for the client certificate by running the following command:
 

```
# diagnose endpoint record list
```
2. If the serial number for the ZTNA certificate differs between the endpoint and the FortiGate, and the serial number on the FortiGate is comprised of zeros, check the following:
  - a. For FortiClient, make sure that the endpoint is running FortiClient 7.0 or later. FortiClient versions earlier than 7.0 do not support ZTNA.
  - b. For FortiClient EMS, make sure that ZTNA is enabled. Check the profile on EMS and the endpoint's summary information.
  - c. For licensing, make sure that you have a ZTNA agent license entitlement. Only some license types support ZTNA.
3. If the serial numbers still do not match, deregister FortiClient from EMS, and then connect FortiClient to EMS again to trigger a new certificate signing request.

## ZTNA policy mismatch

In most cases, FortiGate denies incoming ZTNA requests because the endpoint FortiClient does not meet the tagging criteria configured in the ZTNA rule and is considered a policy mismatch.

1. On the FortiGate, look at the ZTNA event logs and the forwarded logs.
2. Run the following commands on the ZTNA server:

```
# diagnose wad debug enable category policy
# diagnose wad debug enable level verbose
# diagnose debug enable
```

The command output contains incoming ZTNA requests and the FortiGate process for matching the connection to a ZTNA rule.

3. Verify the zero trust tags for the endpoint:
  - On FortiClient, verify the applied tags. Click the avatar to view the zero trust tags.
  - On FortiClient EMS, verify the endpoint's tags. Go to the endpoint list and click the endpoint.

- On FortiGate, verify the tags using the following commands:

- Display ZTNA cache data for all endpoints:

```
# diagnose test application fcnacd 7
```

- Display ZTNA cache data for an individual endpoint:

```
# diagnose wad dev query-by uid <UID> <EMS S/N> <tenant ID>
```


- If the tagging information differs between FortiGate and EMS, examine the EMS tag exchange communication between FortiGate and EMS by looking at the cmNotify and python logs in the debug diagnostics for EMS.

For more information about FortiClient EMS diagnostics, see [Generate Diagnostic Log](#) in the FortiClient EMS Administration Guide.

## IP/MAC based access control

In the following ZTNA topology, FortiClient endpoints use VPN to access resources. FortiGate works with FortiClient EMS to use a combination of IP/MAC addresses and ZTNA tags to control FortiClient endpoint access to resources.

For more information, see [ZTNA IP MAC based access control example on page 1006](#).

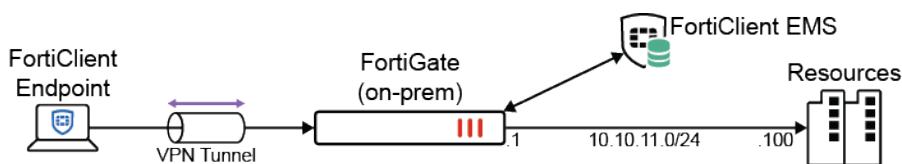

## ZTNA tag information missing on the FortiGate

If the IP address for the FortiClient endpoint is not associated with a ZTNA tag on the FortiGate, a firewall policy mismatch occurs, and the FortiGate denies network access to the FortiClient endpoint.

The following workflow summarizes how FortiGate retrieves the IP address and tags for the FortiClient endpoint to help you better understand how to troubleshoot the situation:

- FortiClient establishes a VPN connection to the FortiGate.
- FortiGate uses the API to pass FortiClient's UUID and VPN IP address to FortiClient EMS.
- FortiGate requests system information and tags from FortiClient based on the response from EMS.

Based on the workflow, start troubleshooting before the FortiClient endpoint attempts to establish a VPN connection to FortiGate. On FortiGate, run the following commands:

```
# diagnose debug application fcnacd -1
# diagnose debug console timestamp enable
# diagnose endpoint filter show-large-data yes
# diagnose debug enable
```

The following outputs illustrate how to examine the command output. The output can differ between environments. The outputs help illustrate how to understand the communication between FortiGate and FortiClient EMS.

In the following output, FortiGate's VPN daemon sends FortiClient's UUID and the VPN IP address to FortiClient EMS using the API. The NAC daemon makes the API call to send the details to FortiClient EMS:

```

2022-10-17 08:50:41 [fcems_call_vpn_client_gateway_call:1147] VPN act connect (UID: 3358095CFDCB414B9EDA49ADE79AF428, Interface: port1, IP: 10.212.134.200, VDom: root, FortiGate-SN: FGVMO2TM22018374) added to EMS FortiClientEMS (FCTEMS8821003330:00000000000000000000000000000000)
2022-10-17 08:50:41 [ec_ez_worker_base_prep_resolver:373] Outgoing interface index 0 for 2 (FortiClientEMS).
2022-10-17 08:50:41 [ec_ez_worker_prep_data_url:98] request (206):
""
{"sn_list":["FGVMO2TM22018374"],"uid_list":
[{"uid":"3358095CFDCB414B9EDA49ADE79AF428","ip":"10.212.134.200","is_
delete":false,"vdom":"root","interface":"port1","sn":"F
GVM02TM22018374"}],"is_snapshot":false}
""

2022-10-17 08:50:41 [ec_ez_worker_prep_data_url:176] Full URL:
https://172.31.200.183/api/v1/fgt/gateway_details/vpn
2022-10-17 08:50:41 [ec_ems_context_submit_work:498] Call submitted successfully.
obj-id: 7, desc: REST API to send updated regarding VPN updates., entry:
api/v1/fgt/gateway_details/vpn.

2022-10-17 08:50:41 [ec_daemon_submit_sock_call:49] sent 244,244
2022-10-17 08:50:42 [_renew_resolver:219] called.

2022-10-17 08:50:42 [ec_ez_worker_process:347] Processing call for obj-id: 7, entry:
"api/v1/fgt/gateway_details/vpn"
2022-10-17 08:50:42 [ec_ez_worker_process:366] reply:
""
{"result": {"retval": 1, "message": "FortiGate VPN connection details updated successfully"}}
""

```

The following example from the fcmNotify.log file on FortiClient EMS shows how FortiClient EMS interprets the information sent from FortiGate:

```

2022-10-26 11:59:37,817 DEBUG ems_logger 6 7 [VPN Gateway Details]: Request made with
params: {'is_snapshot': False, 'sn_list': ['FG10E0TB20903081', 'FG10E0TB20903034'], 'uid_
list': [{'uid': 'D997B2A7A78E4E6F832309FF97FC2215', 'vdom': 'root', 'interface': 'EXT',
'sn': 'FG10E0TB20903081', 'ip': '10.1.18.61', 'is_delete': False}]}].
2022-10-26 11:59:38,281 DEBUG ems_logger 6 7 [Sysinfo c44cc74b1185431491f71c133c097f00
Certificate user: FG10E0TB20903081]: Request with SN [FG10E0TB20903034,FG10E0TB20903081]
success. Returned 1 endpoints. uid_offset: D997B2A7A78E4E6F832309FF97FC2215, updated_after:
2022-10-26 15:59:37.8237471, is_final: True
2022-10-26 11:59:38,543 DEBUG ems_logger 6 7 [UID-Tags e6ecc42c058e48b2b71cf7d65ecd432c
Certificate user: FG10E0TB20903081]: Request with SN [FG10E0TB20903034,FG10E0TB20903081]
success. uid_offset: D997B2A7A78E4E6F832309FF97FC2215, updated_after: 2022-10-26
15:59:37.8227461, is_final: True

```

FortiGate uses the information from FortiClient EMS to make a targeted API call to FortiClient EMS to retrieve both system information and tag information (with the means of uid\_offset and updated\_after parameters) for the endpoint. The following is the API call to retrieve the tags from FortiClient EMS:

```

https://172.31.200.182/api/v1/report/fct/uid_tags?sn_list[]=FGVMO2TM22018374&updated_
after=2022-10-17 15:59:37.8227461&uid_offset=3358095CFDCB414B9EDA49ADE79AF428

```

The following is an example of the API call and subsequent communication between FortiGate and FortiClient EMS to retrieve tags for the FortiClient endpoint IP address:

```

2022-10-17 08:50:42 [ec_ez_worker_base_prep_resolver:373] Outgoing interface index 0 for 2
(FortiClientEMS).
2022-10-17 08:50:42 [ec_ez_worker_prep_data_url:98] request (26):
""
sn_list[]=FGVM02TM22018374
""

2022-10-17 08:50:42 [ec_ez_worker_prep_data_url:176] Full URL:
https://172.31.200.183/api/v1/report/fct/uid_tags?sn_list[]=FGVM02TM22018374
2022-10-17 08:50:42 [ec_ems_context_submit_work:498] Call submitted successfully.
    obj-id: 13, desc: REST API to get updates of tags associated with FCT UID., entry:
api/v1/report/fct/uid_tags.

2022-10-17 08:50:43 [ec_ez_worker_process:347] Processing call for obj-id: 12, entry:
"api/v1/report/fct/tags"
2022-10-17 08:50:43 [ec_ez_worker_process:366] reply:
""
{"result": {"retval": 1, "message": "Returned FCT incremental tags information."}, "data":
{"tag_uid_offset": "F200BAC5-352C-41AD-9BC2-C6D177D391B1", "updated_after": "2022-10-17
15:52:20.4951668", "is_zipped": true, "is_final": true, "unzipped_size": 3508, "data":
"eJzF10tv4zYUhf9KoxVuwadIZsfnYBYTFEgwsyGKQbGYVKgsGZKcJg3mv/c66SNAa04BF87GgERa59Mhe ...
BLXtFb2IRdYii2Qx9/uI6+scMw/XrUzcMp/B3U5zwm"}}
""

2022-10-17 08:50:43 [fcems_json_unzip:285] unzipped:
""
{"command_version":2,"serial":"FCTEMS8821003330","device_type":"fortiems","commands":
[{"command":"update","addresses":[{"uuid":"814CA385-A346-4028-91FE-06011FFBC8A1","tag_
properties":{"name":"vul_enabled","type":"zero_trust"},"type":"ipblock","values":[]},
{"uuid":"814CA385-A346-4028- ... -93B7-E15BB3007AEC","tag_properties":
{"name":"FortiESNAC.exe","type":"zero_trust"}},{ "uuid":"82DF3EC6-9D1B-4200-A3C6-
366D9AFF4ED0","tag_properties":{"name":"IPSEC_Allowed","type":"zero_trust"}}]}]}
""

```

## Other useful CLI commands

Output the JSON-formatted list of FortiGate interfaces (gateways) with IP and MAC addresses. This is the list that FortiGate sends to EMS so that EMS can identify the endpoints that are directly connected to the firewall:

```
# diagnose endpoint fctems json gateway-mac-request
```

Makes EMS execute API calls to the EMS API endpoints on demand:

```
# diagnose test application fcnacd 5
```

Send the gateway list to EMS on demand. It could be useful to execute `diagnose test application fcnacd 5` right after command during troubleshooting, as EMS will have an updated list of firewall interfaces:

```
# diagnose test application fcnacd 99
```

For more commands, see [ZTNA troubleshooting and debugging commands on page 1025](#).



# Policy and Objects

This section contains topics on configuring policies and traffic shaping:

- [Policies on page 1035](#)
- [Address objects on page 1151](#)
- [Protocol options on page 1186](#)
- [Traffic shaping on page 1188](#)
- [Internet Services on page 1239](#)

## Policies

The firewall policy is the axis around which most features of the FortiGate revolve. Many firewall settings end up relating to or being associated with the firewall policies and the traffic they govern. Any traffic going through a FortiGate has to be associated with a policy. These policies are essentially discrete compartmentalized sets of instructions that control the traffic flow going through the firewall. These instructions control where the traffic goes, how it is processed, if it is processed, and whether or not it is allowed to pass through the FortiGate.

When the firewall receives a connection packet, it analyzes the source address, destination address, and service (by port number). It also registers the incoming interface, the outgoing interface it needs to use, and the time of day. Using this information, the FortiGate firewall attempts to locate a security policy that matches the packet. If a policy matches the parameters, then the FortiGate takes the required action for that policy. If it is *Accept*, the traffic is allowed to proceed to the next step. If the action is *Deny* or a match cannot be found, the traffic is not allowed to proceed.

The two basic actions at the initial connection are either *Accept* or *Deny*:

- If the action is *Accept*, the policy permits communication sessions. There may be other packet processing instructions, such as requiring authentication to use the policy or restrictions on the source and destination of the traffic.
- If the action is *Deny*, the policy blocks communication sessions, and you can optionally log the denied traffic. If no security policy matches the traffic, the packets are dropped. A *Deny* security policy is needed when it is required to log the denied traffic, also called *violation traffic*.

One other action can be associated with the policy:

- *IPsec*: this is an *Accept* action that is specifically for IPsec VPNs.



Each field in a firewall policy that accepts multiple inputs, such as srcaddr and dstaddr, can accept as many inputs as there are unique objects created. The maximum number of objects depends on the model. See the [Maximum Values Table](#) for more details.

---

The following topics provide information on the available types of policies and configuration instructions:

- [Firewall policy on page 1036](#)
- [NGFW policy on page 1049](#)
- [Local-in policy on page 1065](#)

- [DoS policy on page 1069](#)
- [Access control lists on page 1076](#)
- [Interface policies on page 1077](#)

The following topics provide instructions on configuring policies:

- [Source NAT on page 1078](#)
- [Destination NAT on page 1094](#)
- [Examples and policy actions on page 1118](#)

## Firewall policy

The firewall policy is the axis around which most of the other features of the FortiGate firewall revolve. A large portion of the settings in the firewall at some point will end up relating to or being associated with the firewall policies and the traffic that they govern. Any traffic going through a FortiGate unit has to be associated with a policy. These policies are essentially discrete compartmentalized sets of instructions that control the traffic flow going through the firewall. These instructions control where the traffic goes, how it's processed, if it's processed, and even whether or not it's allowed to pass through the FortiGate.

The following topics provide information on the firewall policy and configuration:

- [Firewall policy parameters on page 1036](#)
- [Configurations in the GUI on page 1037](#)
- [Configurations in the CLI on page 1042](#)
- [Policy views on page 1047](#)
- [Policy lookup on page 1049](#)

## Firewall policy parameters

For traffic to flow through the FortiGate firewall, there must be a policy that matches its parameters:

- Incoming interface(s)
- Outgoing interface(s)
- Source address(es)
- User(s) identity
- Destination address(es)
- Internet service(s)
- Schedule
- Service

Traffic parameters are checked against the configured policies for a match. If the parameters do not match any configured policies, the traffic is denied.

Traffic flow initiated from each direction requires a policy, that is, if sessions can be initiated from both directions, each direction requires a policy.

Just because packets can go from point A to point B on port X does not mean that the traffic can flow from point B to point A on port X. A policy must be configured for each direction.

When designing a policy, there is often reference to the traffic flow, but most communication is two-way so trying to determine the direction of the flow might be confusing. If traffic is HTTP web traffic, the user sends a request to the

website, but most of the traffic flow will be coming from the website to the user or in both directions? For the purposes of determining the direction for a policy, the important factor is the direction of the initiating communication. The user is sending a request to the website, so this is the initial communication; the website is responding so the traffic is from the user's network to the Internet.



FortiOS does not perform a reverse-path check on reply traffic that matches an allowed session based on the IP tuple. The request traffic can be sent on one interface and the reply traffic could return on another interface.

## Configurations in the GUI

Firewall policies can be created in the GUI by configuring the necessary parameters.

<b>Incoming interface(s)</b>	This is the interface or interfaces by which the traffic is first connected to the FortiGate unit. The exception being traffic that the FortiGate generates itself. This is not limited to the physical Ethernet ports found on the device. The incoming interface can also be a logical or virtual interface such as a VPN tunnel, a Virtual WAN link, or a wireless interface.
<b>Outgoing interface(s)</b>	This is the interface or interfaces used by traffic leaving a port once it has been processed by the firewall. Similar to incoming interfaces, it is not limited to only physical interfaces.
<b>Source address(es)</b>	The addresses that a policy can receive traffic from can be wide open or tightly controlled. For a public web server that the world at large should be able to access, the best choice will be <i>all</i> . If the destination is a private web server that only the branch offices of a company should be able to access, or a list of internal computers that are the only ones allowed to access an external resource, then a group of preconfigured addresses is the better strategy
<b>User(s) identity</b>	This parameter is based on a user identity that can be from a number of authentication authorities. It will be an account or group that has been set up in advance that can be selected from the drop down menu. The exception to this is the feature that allows the importing of LDAP Users. When the feature is used, a small wizard window will appear to guide the user through the setup. The caveat is that the LDAP server object in the <i>User &amp; Authentication &gt; LDAP Servers</i> section has to be already configured to allow the use of this import feature.
<b>Destination address(es)</b>	In the same way that the source address may need to be limited, the destination address can be used as a traffic filter. When the traffic is destined for internal resources, the specific address of the resource can be defined to better protect the other resources on the network. One of the specialized destination address options is to use a Virtual IP address. If the destination address doesn't need to be internal, you can define policies that are only for connecting to specific addresses on the Internet.
<b>Internet service(s)</b>	In this context, an Internet service is a combination of one or more addresses and one or more services associated with a service found on the Internet such as an update service for software.

**Schedule**

The time frame that is applied to the policy. This can be something as simple as a time range that the sessions are allowed to start, such as between 8:00 am and 5:00 pm. Something more complex like business hours that include a break for lunch and time of the session's initiation may need a schedule group because it will require multiple time ranges to make up the schedule.

**Service**

The services chosen represent the TCP/IP suite port numbers that will most commonly be used to transport the named protocols or groups of protocols. This is different than *Application Control* which looks more closely at the packets to determine the actual protocol used to create them.

A case where either side can initiate the communication, like between two internal interfaces on the FortiGate unit, would be a more likely situation to require a policy for each direction.


## Enabling advanced policy options in the GUI

Advanced policy options can be enabled so that you can configure the options in the GUI.

### To enable advanced policy options:

```
config system settings
    set gui-advanced-policy enable
end
```

Advanced policy options are now available when creating or editing a policy in the GUI:

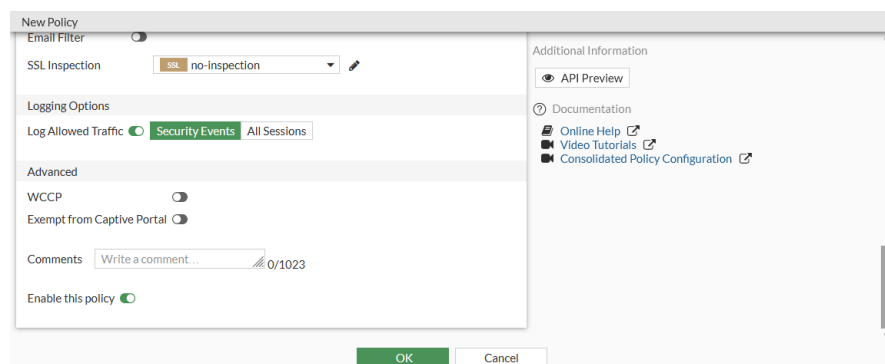

### To enable configuring TCP sessions without SYN:

```
config system settings
    set tcp-session-without-syn enable
end
```

TCP sessions without SYN can now be configured when creating or editing a policy in the GUI:

### Add Policy change summary and Policy expiration to Workflow Management

Two options, *Policy change summary* and *Policy expiration*, are included in *Workflow Management*. *Policy change summary* enforces an audit trail for changes to firewall policies. *Policy expiration* allows administrators to set a date for the firewall policy to be disabled.

There are three states for the *Policy change summary*:

- *Disable*: users will not be prompted to add a summary when editing a policy.
- *Required*: the *Policy change summary* will be enabled and will require users to add a summary when editing or creating a firewall policy.
- *Optional*: the *Policy change summary* will be enabled but users can leave the summary empty, if preferred, when editing or creating a firewall policy.

There are three states for *Policy expiration*:

- *Disable*: the firewall policy will not expire. This is the default setting for *Policy expiration*.
- *Default*: the firewall policy will expire after the default number of days.
- *Specify*: the firewall policy will expire at a set date and time.



The default value for *Policy expiration* is 30 days. This number can be changed in the CLI or in *System > Settings* in the GUI to any value between zero and 365 days. If the default value is set to zero, the *Default* state will disable the *Policy expiration*.

### To configure the firewall policy change summary and default expiration in the GUI:

1. Go to *System > Feature Visibility*.
2. Enable *Workflow Management*.
3. Click *Apply*.
4. Go to *System > Settings*.
5. In the *Workflow Management* section, set *Policy change summary* to *Required*. *Policies expire by default* is enabled by default with an *Expire after* value of 30.

System Settings

ACME interface [?](#)

Allow concurrent sessions [?](#) ☒

Allow administrative login using FortiCloud SSO ☐

Minutes (1 - 480)

Additional Information

[API Preview](#)

[Edit in CLI](#)

Virtual Domain

Setup guides

[How to Configure Virtual Domains](#)

Documentation

[Online Help](#)

[Video Tutorials](#)

Security Rating Issues

Show Dismissed ☐

Password Policy

Password scope [?](#) ☒ Off ☐ Admin ☐ IPsec ☐ Both

Workflow Management

Configuration save mode [?](#) ☒ Automatic ☐ Workspace

Policy change summary [?](#) ☒ Required ☐ Optional

Policies expire by default ☒

Expire after  Days

View Settings

Language

Theme

Date/Time display ☒ FortiGate timezone ☐ Browser timezone

Apply

6. Click *Apply*.

### To configure firewall policy expiration in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Name the policy and configure the necessary parameters.
3. Set *Policy expiration* to *Specify*. The *Expiration date* fields appears with the current date and time.

New Policy

DNS Filter ☐

Application Control ☐

IPS ☐

File Filter ☐

SSL Inspection ☒ no-inspection [?](#)

Logging Options

Log Allowed Traffic [?](#) ☒ Security Events ☐ All Sessions

Workflow Management

Policy expiration ☒ Default ☒ Specify

Expiration date

Comments  0/1023

Enable this policy ☒

Additional Information

[API Preview](#)

Documentation

[Online Help](#)

[Video Tutorials](#)

[Consolidated Policy Configuration](#)

OK Cancel

4. Select the date and time for the policy to expire from the *Expiration date* fields.
5. Click *OK*. The *Workflow Management - Summarize Changes* pane opens.

6. In the *Change summary* field, enter details about the changes made to the policy. These details can be referred to later for auditing purposes.
7. Click *OK*.

#### To configure the firewall policy change summary in the CLI:

```
config system settings
    set gui-enforce-change-summary {disable | require | optional}
end
```

#### To configure the policy expiration default value in the CLI:

```
config system settings
    set default-policy-expiry-days <integer>
end
```

#### To configure firewall policy expiration in the CLI:

```
config firewall policy
    edit <id>
        set policy-expiry {enable | disable}
        set policy-expiry-date <YYYY-MM-DD HH:MM:SS>
    next
end
```

Policy change summaries are used to track changes made to a firewall policy. The *Audit trail* allow users to review the policy change summaries, including the date and time of the change and which user made the change.

#### To review the audit trail in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Select the policy you want to review and click *Edit*.

**Edit Policy**

Name:

Incoming Interface:

Outgoing Interface:

Source:

IP/MAC Based Access Control:

Destination:

Schedule:

Service:

Action: ☒ ACCEPT ☐ DENY

Inspection Mode: ☒ Flow-based ☐ Proxy-based

Firewall/Network Options: ☒ NAT ☐ NAT46 ☐ NAT64

Statistics (since last reset)

ID	29
Last used	N/A
First used	N/A
Active sessions	0
Hit count	0
Total bytes	0 B
Current bandwidth	0 bps

Additional Information

- In the right-side banner, click *Audit Trail*. The *Audit trail for Firewall Policy* pane opens and displays the policy change summaries for the selected policy.

**Audit trail for Firewall Policy 29**

Date/Time	Summary	Changed By
2022/03/18 09:24:06	Change expiry date	admin
2022/03/18 09:20:29	New policy	admin
2022/03/18 09:17:19		admin

0% 4 | Updated: 09:24:08

**Changes**

Attribute	Previous Value	New Value
policy-expiry-date	2022-04-17 09:20:26	2022-04-20 09:20:00

**Metadata**

Date	2022/03/18 09:24:06
Action	Edit
Summary	Change expiry date
Changed by	admin
Transaction ID	9895993

- Select an entry to review the details of the change made.
- When you are done reviewing the *Audit Trail*, click *Close*.
- Click *Cancel* to exit the *Edit Policy* page.

## Configurations in the CLI

Firewall policies can be created in the CLI by configuring the necessary parameters. See [Configurations in the GUI on page 1037](#) for more information on the various parameters.



Parameter	Definition
srcintf	Incoming (ingress) interface.
dstintf	Outgoing (egress) interface.
srcaddr	Source IPv4 address and address group names.
dstaddr	Destination IPv4 address and address group names.
internet-service	Enable/disable use of Internet Services for this policy. If enabled, destination address and service are not used.
schedule	Schedule name.
service	Service and service group names.
anti-replay	Enable/disable checking of TCP flags per policy.
match-vip	Enable/disable matching of VIPs when used in a policy with a deny action.
auto-asic-offload	Enable/disable hardware acceleration. Available on select FortiGate models with Secure Processing Unit (SPU) hardware only.
tcp-mss-sender	Sender TCP maximum segment size (MSS).
tcp-mss-receiver	Receiver TCP maximum segment size (MSS).
session-ttl	Time-to-live (TTL) in seconds for session accepted by this policy.

### Firewall anti-replay option per policy

When the global anti-replay option is disabled, the FortiGate does not check TCP flags in packets. The per policy anti-replay option overrides the global setting. This allows you to control whether or not TCP flags are checked per policy.

#### To enable the anti-replay option so TCP flags are checked using the CLI:

```
config firewall policy
  edit 1
    set name "policyid-1"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set anti-replay enable
    set logtraffic all
    set nat enable
  next
end
```

### Deny matching with a policy with a virtual IP applied

Preventing hosts with specific source addresses from accessing a server behind the FortiGate may be required in some cases. For this scenario, you should have previously configured a firewall policy with a virtual IP (VIP) object applied to it

to allow such access. See [Destination NAT on page 1094](#) for details.

When denying traffic destined for a typical firewall policy without a VIP applied, you would simply configure a new firewall policy with an action of `deny` and with specific source addresses above the firewall policy that you want to prevent these hosts from accessing. However, the FortiGate matches firewall policies with VIPs applied differently than typical firewall policies. Policies with VIPs applied have priority over typical firewall policies.

Therefore, to block specific source traffic destined for a firewall policy specified with an action of `accept` and with a VIP applied, you should configure `set match-vip enable` on the firewall policy with a `deny` action that has been configured to match traffic before the firewall policy with the VIP applied. By default, new `deny` action firewall policies have `match-vip` enabled.



If the policy action is set to `accept`, `match-vip` cannot be enabled.

---

### To block VIP traffic in a deny policy:

```
config firewall policy
  edit 1
    set name "deny-policy-1"
    set srcintf "wan1"
    set dstintf "lan1"
    set srcaddr "src-hosts-to-deny-access"
    set dstaddr "all"
    set action "deny"
    set schedule "always"
    set service "all"
    set match-vip enable
  next
  edit 2
    set name "vip-policy-1"
    set srcintf "wan1"
    set dstintf "lan1"
    set srcaddr "all"
    set dstaddr "vip-object-1"
    set action "accept"
    set schedule "always"
    set service "ALL"
  next
end
```

Alternatively, to block access to a firewall policy with a VIP applied, you can configure a new VIP object configured with `set src-filter <range>`. Configure a new firewall policy with a `deny` action and with this new VIP applied, and then configure this policy to match traffic before the firewall policy with the same VIP applied with an action of `accept`. In this case, the firewall policy can simply have `set match-vip disable`.

### To specify a VIP with source addresses specified with a deny policy:

```
config firewall vip
  edit "vip-with-srcaddr-to-deny"
    set extip "10.1.100.199"
    set extintf "wan1"
    set mappedip "172.16.200.55"
```

```
        set src-filter "1.1.1.1/24"
    next
end
config firewall policy
    edit 3
        set name "deny-policy-3"
        set srcintf "wan1"
        set dstintf "lan1"
        set srcaddr "all"
        set dstaddr "vip-with-srcaddr-to-deny"
        set action "deny"
        set match-vip disable
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "vip-policy-1"
        set srcintf "wan1"
        set dstintf "lan1"
        set srcaddr "all"
        set dstaddr "vip-object-1"
        set action "accept"
        set match-vip disable
        set schedule "always"
        set service "ALL"
    next
end
```

## Hardware acceleration

Hardware acceleration is supported on select FortiGate devices and is enabled by default on all firewall policies to ensure optimal performance when processing network traffic traversing the FortiGate. See the [Hardware Acceleration Reference Manual](#) for details.

Typically, hardware acceleration on a specific firewall policy is disabled for one of two purposes:

- To allow CLI commands such as the packet sniffer and debug flow to display all traffic matching the policy since traffic offloaded by SPU hardware on a FortiGate device is not visible by those CLI tools.
- To troubleshoot any possible issues arising by using hardware acceleration.

### To disable hardware acceleration in an IPv4 firewall policy:

```
config firewall policy
    edit 1
        set auto-asic-offload disable
    next
end
```

### To disable hardware acceleration in an IPv6 firewall policy:

```
config firewall policy6
    edit 1
        set auto-asic-offload disable
    next
end
```

**To disable hardware acceleration in a multicast firewall policy:**

```
config firewall multicast-policy
  edit 1
    set auto-asic-offload disable
  next
end
```

**TCP Maximum Segment Size (MSS)**

The TCP maximum segment size (MSS) is the maximum amount of data that can be sent in a TCP segment. The MSS is the MTU size of the interface minus the 20 byte IP header and 20 byte TCP header. By reducing the TCP MSS, you can effectively reduce the MTU size of the packet.

The TCP MSS can be configured in a firewall policy, or directly on an interface. See [Interface MTU packet size on page 162](#) for details on configuring TCP MSS directly on an interface.

**To configure TCP MSS in a firewall policy:**

```
config firewall policy
  edit <policy ID>
    set srcintf "internal"
    set dstintf "wan1"
    set srcaddr "10.10.10.6"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set tcp-mss-sender 1448
    set tcp-mss-receiver 1448
  next
end
```

**Adjusting session time-to-live (TTL)**

A session is a communication channel between two devices or applications across the network. Sessions allow FortiOS to inspect and act on a sequential group of packets in a session all at once instead of inspecting each packet individually. Each session has an entry in the session table that includes important information about the session.

The session time-to-live (TTL) parameter determines how long a session of a particular protocol such as TCP, UDP, or ICMP remains in the session table. To ensure proper operation of some devices or applications, the session TTL parameter may need to be increased or decreased to allow sessions to remain active in the session table for a longer or shorter duration, respectively.

**To configure a modified session TTL in a firewall policy:**

```
config firewall policy
  edit <policy ID>
    set srcintf "internal"
    set dstintf "wan1"
    set srcaddr "10.10.10.6"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set session-ttl 1800
```

```
    next
end
```

The session TTL can be set to zero or `never` to ensure a session never times out. See [No session timeout on page 1140](#) for details.

Session TTL should only be set to zero or `never` after careful consideration of:

- The connected device's or application's requirements for sessions to always stay alive
- The expectation that a connected device or application will use the same session determined by traffic using a fixed source port, fixed destination port, fixed source IP address, and fixed destination IP address.



When session TTL is set to zero or `never`, then sessions will not be cleared from the session table or expire after a specified time unless the CLI commands `diagnose system session filter <filter>` and `diagnose system session clear` are used.

If this setting is used in the case when traffic through a firewall policy can generate numerous unique sessions, then this may have unintended consequences to the FortiGate's memory usage and performance due to the session table constantly growing and not clearing out idle sessions.

---

#### To disable session TTL in a firewall policy:

```
config firewall policy
    edit <policy ID>
        set srcintf "internal"
        set dstintf "wan1"
        set srcaddr "10.10.10.6"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set session-ttl never
    next
end
```

## Policy views

In *Policy & Objects* policy list pages, there are two policy views: *Interface Pair View* and *By Sequence* view.

*Interface Pair View* displays the policies in the order that they are checked for matching traffic, grouped by the pairs of incoming and outgoing interfaces in collapsible sections.

<div> <div>Create New</div> <div>Edit</div> <div>Delete</div> <div>Policy Lookup</div> <div>Search</div> </div> <div> <div>Export</div> <div>Interface Pair View</div> <div>By Sequence</div> <div>IPv4 + IPv6</div> </div>									
Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
DMZ Segment (port2) → WAN_Zone									
DMZ to Internet	all	all	always	ALL	ACCEPT	Enabled	<div>AV default</div> <div>DNS default</div> <div>APP default</div> <div>IPS default</div> <div>SSL certificate-inspection</div>	All	13.86 MB
FortiDEMO → ISFW (port3)									
vpn_FortiDEMO_remote	FortiDEMO_remote	FortiDEMO_local	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
ISFW (port3) → FortiDEMO									
vpn_FortiDEMO_local	FortiDEMO_local	FortiDEMO_remote	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
ISFW (port3) → WAN_Zone									
LAN to Internet	all	all	always	ALL	ACCEPT	Enabled	<div>AV default</div> <div>DNS default</div> <div>APP default</div> <div>IPS default</div> <div>SSL certificate-inspection</div>	All	3.75 GB
VPN_Zone → VPN_Zone									
Branch1 to Branch2	all	all	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
VPN_Zone → WAN_Zone									
VPN to Internet	all	all	always	ALL	ACCEPT	Enabled	<div>AV default</div> <div>DNS default</div> <div>APP default</div> <div>IPS default</div> <div>SSL certificate-inspection</div>	All	144.46 MB
WAN_Zone → Management (port4)									
WAN to FAC	all	FortiAuthenticator	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
Implicit									
Implicit Deny	all	all	always	ALL	DENY			All	254.41 kB
<div>0 Security Rating Issues</div> <div>0% Updated: 16:28:20</div>									

*By Sequence* displays policies in the order that they are checked for matching traffic without any grouping.

<div><div>Create New</div><div>Edit</div><div>Delete</div><div>Policy Lookup</div><div>Search</div></div> <div><div>Export</div><div>Interface Pair View</div><div>By Sequence</div><div>IPv4 + IPv6</div></div>												
ID	Name	From	To	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
40	WAN to FAC	WAN_Zone	Management (port4)	all	FortiAuthenticator	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
13	LAN to Internet	ISFW (port3)	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	AV default DNS default APP default IPS default SSL certificate-inspection	All	3.75 GB
2	DMZ to Internet	DMZ Segment (port2)	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	AV default DNS default APP default IPS default SSL certificate-inspection	All	13.86 MB
17	Branch1 to Branch2	VPN_Zone	VPN_Zone	all	all	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
26	VPN to Internet	VPN_Zone	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	AV default DNS default APP default IPS default SSL certificate-inspection	All	144.46 MB
30	vpn_FortiDEMO_local	ISFW (port3)	FortiDEMO	FortiDEMO_local	FortiDEMO_remote	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
31	vpn_FortiDEMO_remote	FortiDEMO	ISFW (port3)	FortiDEMO_remote	FortiDEMO_local	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
0	Implicit Deny	any	any	all	all	always	ALL	DENY			All	254.41 kB
<div>0 Security Rating Issues</div> <div>0% Updated: 16:24:04</div>												

The default display is *Interface Pair View*. You can switch between the two views except if *any* or multiple interfaces are applied in the policy. The FortiGate automatically changes the view on the policy list page to *By Sequence* whenever there is a policy containing *any* or multiple interfaces as the *Source* or *Destination* interface. If the *Interface Pair View* is grayed out, it is likely that one or more policies have used the *any* or multiple interfaces.

You can export the current view to CSV and JSON formats by clicking *Export* and selecting *CSV* or *JSON*. The file is automatically downloaded.

+ Create New		Edit	Delete	Q Policy Lookup		Search		Q		Export		Interface Pair View		By Sequence	IPv4 + IPv6
ID	Name	From	To	Source	Destination	Schedule	Service	Action	NAT	CSV	JSON	Security Profiles	Log	Bytes	
40	WAN to FAC	WAN_Zone	Management (port4)	all	FortiAuthenticator	always	ALL	ACCEPT	Disabled	no-inspection		All	0 B		
13	LAN to Internet	ISFW (port3)	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	default	default	All	3.75 GB		
2	DMZ to Internet	DMZ Segment (port2)	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	default	default	All	13.86 MB		
17	Branch1 to Branch2	VPN_Zone	VPN_Zone	all	all	always	ALL	ACCEPT	Disabled	no-inspection		All	0 B		
26	VPN to Internet	VPN_Zone	WAN_Zone	all	all	always	ALL	ACCEPT	Enabled	default	default	All	144.46 MB		
30	vpn_FortiDEMO_local	ISFW (port3)	FortiDEMO	FortiDEMO_local	FortiDEMO_remote	always	ALL	ACCEPT	Disabled	no-inspection		All	0 B		
31	vpn_FortiDEMO_remote	FortiDEMO	ISFW (port3)	FortiDEMO_remote	FortiDEMO_local	always	ALL	ACCEPT	Disabled	no-inspection		All	0 B		
0	Implicit Deny	any	any	all	all	always	ALL	DENY				All	254.41 kB		
Security Rating Issues															
0% Updated: 16:29:41															

## Policy lookup

Firewall policy lookup is based on the `Source_interfaces/Protocol/Source_Address/Destination_Address` that matches the `source-port` and `dst-port` of the protocol. Use this tool to find out which policy matches specific traffic from a number of policies. After completing the lookup, the matching firewall policy is highlighted on the policy list page.

The *Policy Lookup* tool has the following requirements:

- Transparent mode does not support policy lookup function.
- When executing the policy lookup, you need to confirm whether the relevant route required for the policy work already exists.

## Sample configuration

This example uses the TCP protocol to show how policy lookup works:

1. On a *Policy & Objects* policy list page, click *Policy Lookup* and enter the traffic parameters.

Create New

Policy Lookup

×

Name

Source

Internal5

IP Version

Protocol

Source

Source Port

Destination

Destination Port

Internal5

IPv4

TCP

1.1.1.2

12345

172.16.200.55

80

Search

Close

2. Click *Search* to display the policy lookup results.

## NGFW policy

Profile-based next-generation firewall (NGFW) mode is the traditional mode where you create a profile (antivirus, web filter, and so on) and then apply the profile to a policy.

In policy-based NGFW mode, you allow applications and URL categories to be used directly in security policies, without requiring web filter or application control profiles. However, it is possible to select and apply web filter URL categories and groups.

In policy-based mode:

- Central NAT is always enabled. If no Central SNAT policy exists, you must create one. See [Central SNAT on page 1085](#) for more information.
- Pre-match rules are defined separately from security policies, and define broader rules, such as SSL inspection and user authentication.
- The IPsec wizard is not supported.

If your FortiGate operates in NAT mode, rather than enabling source NAT in individual NGFW policies, go to *Policy & Objects > Central SNAT* and add source NAT policies that apply to all matching traffic. In many cases, you may only need one SNAT policy for each interface pair.

The NGFW mode is set per VDOM, and it is only available when the VDOM inspection mode is flow-based. You can operate your entire FortiGate or individual VDOMs in NGFW policy mode. The application default port can be set as a service port in the NGFW mode using the `default-app-port-as-service` option.

In NGFW mode, administrators can configure a security policy in learn mode to monitor traffic. See [Learn mode in security policies in NGFW mode on page 1061](#) for more information.

## Enabling policy-based NGFW mode

### To enable policy-based NGFW mode without VDOMs in the GUI:

1. Go to *System > Settings*.
2. In *NGFW Mode*, select *Policy-based*.
3. Click *Apply*.

### To enable policy-based NGFW mode with VDOMs in the GUI:

1. Go to *System > VDOM*.
2. Double-click a VDOM to edit the settings.
3. In *NGFW Mode*, select *Policy-based*.
4. Click *OK*.

### To enable policy-based NGFW mode without VDOMs in the CLI:

```
config system settings
    set ngfw-mode policy-based
end
```

### To enable policy-based NGFW mode with VDOMs in the CLI:

```
config vdom
    edit <vdom>
        config system settings
            set ngfw-mode policy-based
        end
    next
end
```



## Security and SSL Inspection & Authentication policies

Security policies work with SSL Inspection & Authentication policies to inspect traffic. To allow traffic from a specific user or user group, both Security and SSL Inspection & Authentication policies must be configured. A default SSL Inspection & Authentication policy with the certificate-inspection SSL Inspection profile is preconfigured. Traffic will match the SSL Inspection & Authentication policy first. If the traffic is allowed, packets are sent to the IPS engine for application, URL category, user, and user group match, and then, if enabled, UTM inspection (antivirus, IPS, DLP, and email filter) is performed.

SSL Inspection & Authentication policies are used to pre-match traffic before sending the packets to the IPS engine:

- There are no schedule or action options; traffic matching the policy is always redirected to the IPS engine.
- SSL inspection, formerly configured in the VDOM settings, is configured in an SSL Inspection & Authentication policy.
- Users and user groups that require authentication must be configured in an SSL Inspection & Authentication policy.

Security policies work with SSL Inspection & Authentication policies to inspect traffic:

- Applications and URL categories can be configured directly in the policy.
- Users and user groups that require authentication must also be configured in a security policy.
- The available actions are *Accept* or *Deny*.
- The *Service* option can be used to enforce the standard port for the selected applications.
- UTM inspection is configured in a security policy.

**Edit Policy**

ID: 2

Name: allow-QA-Facebook

Incoming Interface: port18

Outgoing Interface: port17

Source: all, Dev, QA

Destination: all

Schedule: always

Service: App Default

Application: Facebook

URL Category: +

Action: ☒ ACCEPT ☐ DENY

Firewall / Network Options

Protocol Options: default

Security Profiles

Statistics (since last reset)

ID: 2

Hit count: 0

Clear Counters

Additional Information

API Preview

Edit in CLI

Documentation

Online Help

Video Tutorials

OK Cancel

## To configure policies for Facebook and Gmail access in the CLI:

### 1. Configure an SSL Inspection & Authentication policy:

```
config firewall policy
  edit 1
    set name "Policy-1"
    set srcintf "port18"
    set dstintf "port17"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    set ssl-ssh-profile "new-deep-inspection"
    set groups "Dev" "HR" "QA" "SYS"
  next
end
```

### 2. Configure security policies:

```
config firewall security-policy
  edit 2
    set name "allow-QA-Facebook"
    set srcintf "port18"
    set dstintf "port17"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set application 15832
    set groups "Dev" "QA"
  next
  edit 4
    set name "allow-QA-Email"
    set srcintf "port18"
    set dstintf "port17"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
```

```

        set url-category 23
        set groups "QA"
    next
end

```

## Logs

In the application control and web filter logs, `securityid` maps to the security policy ID.

### Application control log:

```

date=2019-06-17 time=16:35:47 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1560814547702405829 tz="-0700"
appid=15832 user="Jack" group="QA" srcip=10.1.100.102 dstip=157.240.3.29 srcport=56572
dstport=443 srcintf="port18" srcintfrole="undefined" dstintf="port17"
dstintfrole="undefined" proto=6 service="P2P" direction="incoming" policyid=1
sessionid=42445 appcat="Social.Media" app="Facebook" action="pass" hostname="external-seal-
1.xx.fbcdn.net" incidentserialno=1419629662 url="/" securityid=2 msg="Social.Media:
Facebook," apprisk="medium" scertcname="*.facebook.com" scertissuer="DigiCert SHA2 High
Assurance Server CA"

```

### Web filter log:

```

date=2019-06-17 time=16:42:41 logid="0317013312" type="utm" subtype="webfilter"
eventtype="ftgd_allow" level="notice" vd="vd1" eventtime=1560814961418114836 tz="-0700"
policyid=4 sessionid=43201 user="Jack" group="QA" srcip=10.1.100.102 srcport=56668
srcintf="port18" srcintfrole="undefined" dstip=172.217.3.165 dstport=443 dstintf="port17"
dstintfrole="undefined" proto=6 service="HTTPS" hostname="mail.google.com"
action="passthrough" reqtype="direct" url="/" sentbyte=709 rcvdbyte=0 direction="outgoing"
msg="URL belongs to an allowed category in policy" method="domain" cat=23 catdesc="Web-based
Email" securityid=4

```

### Traffic logs:

```

date=2019-06-17 time=16:35:53 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vd1" eventtime=1560814553778525154 tz="-0700" srcip=10.1.100.102
srcport=56572 srcintf="port18" srcintfrole="undefined" dstip=157.240.3.29 dstport=443
dstintf="port17" dstintfrole="undefined" poluid="b740d418-8ed3-51e9-5a7b-114e99ab6370"
sessionid=42445 proto=6 action="server-rst" user="Jack" group="QA" policyid=1
policytype="consolidated" centralnatid=1 service="HTTPS" dstcountry="United States"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=56572 duration=6
sentbyte=276 rcvdbyte=745 sentpkt=5 rcvdpkt=11 appid=15832 app="Facebook"
appcat="Social.Media" apprisk="medium" utmaction="allow" countapp=1 utmref=65531-294

```

```

2: date=2019-06-17 time=16:47:45 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vd1" eventtime=1560815265058557636 tz="-0700" srcip=10.1.100.102
srcport=56668 srcintf="port18" srcintfrole="undefined" dstip=172.217.3.165 dstport=443
dstintf="port17" dstintfrole="undefined" poluid="b740d418-8ed3-51e9-5a7b-114e99ab6370"
sessionid=43201 proto=6 action="timeout" user="Jack" group="QA" policyid=1
policytype="consolidated" centralnatid=1 service="HTTPS" dstcountry="United States"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=56668 duration=303
sentbyte=406 rcvdbyte=384 sentpkt=4 rcvdpkt=4 appcat="unscanned" utmaction="allow"
countweb=1 utmref=65531-3486

```

## Other NGFW policy-based mode options

You can combine *Application Control* and *Web Filter* in the same NGFW mode policy.

The following security profiles can be used in NGFW policy-based mode:

- AntiVirus
- Web Filter
- Intrusion Prevention
- File Filter
- Email Filter

Logging can also be enabled in security policies.


## Inspection mode per policy

Inspection mode is configured on a per-policy basis in NGFW mode. This gives you more flexibility when setting up different policies.


When configuring a firewall policy, you can select a *Flow-based* or *Proxy-based Inspection Mode*. The default setting is *Flow-based*.

### To configure inspection mode in a policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Create a new policy, or edit an existing policy.
3. Configure the policy as needed.
  - a. If you change the *Inspection Mode* to *Proxy-based*, the *Proxy HTTP(S) traffic* option displays.

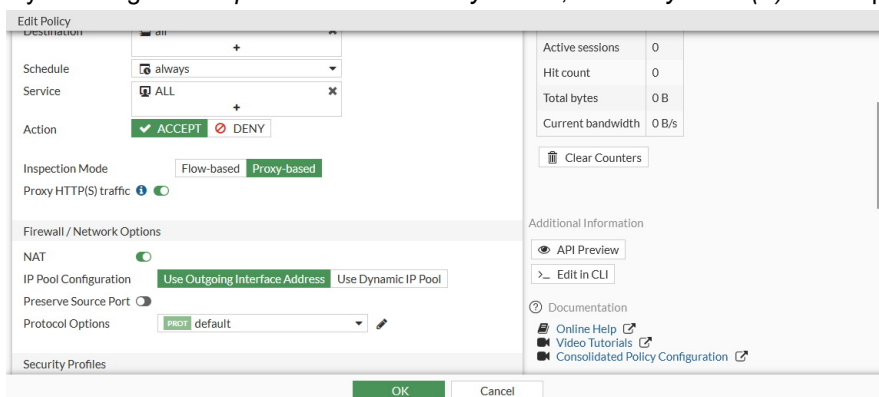

- b. In the *Security Profiles* section, if no security profiles are enabled, the default *SSL Inspection* is *no-inspection*.
- c. In the *Security Profiles* section, if you enable any security profile, the *SSL Inspection* changes to *certificate-inspection*.

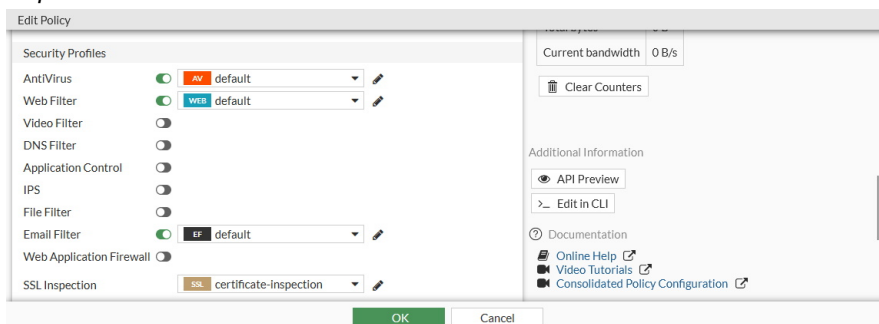

**To see the inspection mode changes using the CLI:**

```
config firewall policy
  edit 1
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set inspection-mode proxy
    set nat enable
  next
end
```

**To see the HTTP and SSH policy redirect settings when inspection mode is set to proxy using the CLI:**

```
config firewall policy
  edit 1
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set inspection-mode proxy
    set http-policy-redirect enable
    set ssh-policy-redirect enable
    set nat enable
  next
end
```

**To see the default SSL-SSH policy set to no inspection using the CLI:**

```
config firewall policy
  edit 1
    show fu | grep ssl-ssh-profile
    set ssl-ssh-profile "no-inspection"
  next
end
```

## NGFW policy mode application default service

In NGFW policy-based mode, the application default service enforces applications running only on their default service port. The applications specified in the policy are monitored, and if traffic is detected from a nonstandard port, it is blocked, and a log entry is recorded with a *port-violation* event type.

If you are not using the default ports, and need to pick specific services, select *Specify* to select the required services.

### Example

In this example, the standard port is enforced for HTTPS traffic using the HTTP.Audio application.

First, an SSL Inspection & Authentication policy is created do to traffic pre-match, and then a security policy is created to allow the HTTP.Audio application when using the default port. Fetching an MP3 file from an HTTP server using port 443 is allowed, but is blocked when using a nonstandard port, such as 8443.

### To enforce the HTTP.Audio application using the default port in the GUI:

1. Create a new SSL Inspection & Authentication policy, or use the default policy.
2. Go to *Policy & Objects > Security Policy*, and click *Create New*.
3. Enter a name for the policy, such as *allow\_HTTP.Audio*.
4. Configure the ports as needed.
5. Set *Service* to *App Default*.
6. In the *Application* field, select *HTTP.Audio*.
7. Set the *Action* to *Accept*.

8. Click **OK**.

### To enforce the HTTP.Audio application using the default port in the CLI:

1. Create a firewall policy:

```
config firewall policy
  edit 1
    set name "consolidated_all"
    set srcintf "port13"
    set dstintf "port14"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    set ssl-ssh-profile "new-deep-inspection"
  next
end
```

2. Create a security policy:

```
config firewall security-policy
  edit 1
```

```
        set name "allow_HTTP.Audio"
        set srcintf "port13"
        set dstintf "port14"
        set srcaddr "all"
        set enforce-default-app-port enable
        set action accept
        set schedule "always"
        set logtraffic all
        set application 15879
    next
end
```

## Logs

The application logs show logs with an event type of `port-violation` for traffic on port 8443 that is blocked, and an event type of `signature` for traffic on port 443 that is allowed.

### Blocked:

```
2: date=2019-06-18 time=16:15:40 logid="1060028736" type="utm" subtype="app-ctrl"
eventtype="port-violation" level="warning" vd="vd1" eventtime=1560899740218875746 tz="-0700"
appid=15879 srcip=10.1.100.22 dstip=172.16.200.216 srcport=52680 dstport=8443
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="HTTPS" direction="incoming" policyid=1 sessionid=5041 appcat="Video/Audio"
app="HTTP.Audio" action="block" hostname="172.16.200.216" incidentserialno=1906780850
url="/app_data/story.mp3" securityid=2 msg="Video/Audio: HTTP.Audio," apprisk="elevated"
```

### Allowed:

```
1: date=2019-06-18 time=16:15:49 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1560899749258579372 tz="-0700"
appid=15879 srcip=10.1.100.22 dstip=172.16.200.216 srcport=54527 dstport=443
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="HTTPS" direction="incoming" policyid=1 sessionid=5064 appcat="Video/Audio"
app="HTTP.Audio" action="pass" hostname="172.16.200.216" incidentserialno=1139663486
url="/app_data/story.mp3" securityid=2 msg="Video/Audio: HTTP.Audio," apprisk="elevated"
```

## Add option to set application default port as a service port

The `default-app-port-as-service` option can be used in NGFW mode to set the application default port as a service port. This allows applications to match the policy and be blocked immediately the first time that traffic hits the firewall. When this option is enabled, the NGFW policy aggregates the ports used by the applications in the policy and performs a pre-match on the traffic.

```
config system settings
    set default-app-port-as-service {enable | disable}
end
```



This option can be configured on a per-VDOM level.

---

This setting is enabled by default on new installations. When upgrading, the setting is disabled to retain the previous behavior.

**To configure the application default port as service port:****1. Configure the VDOM settings:**

```
config system settings
    set vdom-type traffic
    set opmode nat
    set ngfw-mode policy-based
    set block-land-attack disable
    set default-app-port-as-service enable
    set application-bandwidth-tracking disable
end
```

**2. Configure the NGFW policy:**

```
config firewall security-policy
    edit 1
        set name "test"
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set internet-service-src disable
        set enforce-default-app-port enable
        set action accept
    next
end
```

**Sample logs**

The following logging behavior occurs in NGFW mode with default-app-port-as-service:

- When default-app-port-as-service and enforce-default-app-port are enabled, traffic that does not match the default port is blocked immediately. Only a traffic log is generated.

**Log with SSH and FTP traffic:**

```
1: date=2022-02-24 time=11:16:36 eventtime=1645730197145603994 tz="-0800"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vd1"
srcip=10.1.100.12 srcport=40402 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.55 dstport=21 dstintf="port1" dstintfrole="undefined"
srccountry="Reserved" dstcountry="Reserved" sessionid=6811 proto=6 action="deny"
policyid=0 policytype="security-policy" poluid="7ed35582-95a2-51ec-0d21-4093cb91e67b"
policyname="Default" centralnatid=1 service="FTP" trandisp="snat" transip=172.16.200.4
transport=40402 duration=10 sentbyte=0 rcvbyte=0 sentpkt=0 rcvpkt=0 appcat="unscanned"
```

**Log with SSH and FTP traffic with port 2121:**

```
1: date=2022-02-24 time=11:19:20 eventtime=1645730360685614031 tz="-0800"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vd1"
srcip=10.1.100.12 srcport=41362 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.55 dstport=2121 dstintf="port1" dstintfrole="undefined"
srccountry="Reserved" dstcountry="Reserved" sessionid=7213 proto=6 action="deny"
policyid=0 policytype="security-policy" poluid="7ed35582-95a2-51ec-0d21-4093cb91e67b"
policyname="Default" centralnatid=1 service="tcp/2121" trandisp="snat"
```



```
transip=172.16.200.4 transport=41362 duration=9 sentbyte=60 rcvdbyte=0 sentpkt=1
rcvdpkt=0 appcat="unscanned"
```

- When default-app-port-as-service is disabled and enforce-default-app-port is enabled, traffic that does not match the default port is not blocked immediately. Application and traffic logs are generated.

### Traffic log with SSH and FTP traffic:

```
1: date=2022-02-24 time=11:21:51 eventtime=1645730511325606916 tz="-0800"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vd1"
srcip=10.1.100.12 srcport=40408 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.55 dstport=21 dstintf="port1" dstintfrole="undefined"
srccountry="Reserved" dstcountry="Reserved" sessionid=7522 proto=6 action="deny"
policyid=0 policytype="security-policy" poluuid="7ed35582-95a2-51ec-0d21-4093cb91e67b"
policyname="Default" centralnatid=1 service="FTP" trandisp="snat" transip=172.16.200.4
transport=40408 duration=14 sentbyte=164 rcvdbyte=171 sentpkt=3 rcvdpkt=2 appid=15896
app="FTP" appcat="Network.Service" apprisk="elevated" utmaction="block" countapp=1
utmref=65501-0
```

### Application log with SSH and FTP traffic:

```
2: date=2022-02-24 time=11:21:39 eventtime=1645730499338228209 tz="-0800"
logid="1059028705" type="utm" subtype="app-ctrl" eventtype="signature" level="warning"
vd="vd1" appid=15896 srcip=10.1.100.12 srccountry="Reserved" dstip=172.16.200.55
dstcountry="Reserved" srcport=40408 dstport=21 srcintf="port2" srcintfrole="undefined"
dstintf="port1" dstintfrole="undefined" proto=6 service="FTP" direction="outgoing"
policyid=0 sessionid=7522 action="block" appcat="Network.Service" app="FTP"
incidentserialno=188744239 msg="Network.Service: FTP" apprisk="elevated"
```

### Traffic log with SSH and FTP traffic with port 2121:

```
1: date=2022-02-24 time=11:24:25 eventtime=1645730665235613912 tz="-0800"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vd1"
srcip=10.1.100.12 srcport=41366 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.55 dstport=2121 dstintf="port1" dstintfrole="undefined"
srccountry="Reserved" dstcountry="Reserved" sessionid=7876 proto=6 action="deny"
policyid=0 policytype="security-policy" poluuid="7ed35582-95a2-51ec-0d21-4093cb91e67b"
policyname="Default" centralnatid=1 service="tcp/2121" trandisp="snat"
transip=172.16.200.4 transport=41366 duration=11 sentbyte=112 rcvdbyte=171 sentpkt=2
rcvdpkt=2 appid=15896 app="FTP" appcat="Network.Service" apprisk="elevated"
utmaction="block" countapp=1 utmref=65500-0
```

### Application log with SSH and FTP traffic with port 2121:

```
2: date=2022-02-24 time=11:24:16 eventtime=1645730656426052412 tz="-0800"
logid="1060028736" type="utm" subtype="app-ctrl" eventtype="port-violation"
level="warning" vd="vd1" appid=15896 srcip=10.1.100.12 srccountry="Reserved"
dstip=172.16.200.55 dstcountry="Reserved" srcport=41366 dstport=2121 srcintf="port2"
srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6 service="FTP"
direction="outgoing" policyid=0 sessionid=7876 action="block" appcat="Network.Service"
app="FTP" incidentserialno=188744241 msg="Network.Service: FTP, non-default port used:
2121" apprisk="elevated"
```

## Application logging in NGFW policy mode

In NGFW policy mode, if an application, application category, or application group is selected on a security policy, and traffic logging is set to *UTM* or *All*, then application control logs will be generated. In addition, when a signature is set to the *ACCEPT* action under a security policy, all corresponding child signatures will be assessed and logged as well.

Under NGFW, with `default-app-port-as-service` enabled, enable APP Default. The traffic which doesn't match the default port will be blocked immediately, and there is only traffic log generated.

Under NGFW, with `default-app-port-as-service` disabled, enable APP Default. The traffic which doesn't match the default port will not be blocked immediately, and there is app and traffic logs generated.

### To verify application logging:

1. Go to *Policy & Objects > Security Policy* and configure a new policy for YouTube.
2. Set *Action* to *ACCEPT* and *Log Allowed Traffic* to *Security Events*.

3. Configure the remaining settings as required, then click **OK**.
4. On a client system, play some YouTube videos.
5. On FortiOS, go to *Log & Report > Security Events* and view the *Application Control* logs.

There are logs not only for *YouTube*, but also for *YouTube\_Video.Play*, *YouTube\_Video.Access*, and so on, as verified from the *Application Name* column.

Date/Time	Source	Destination	Application Name	Action	Application User
2020/06/26 16:55:50	10.1.100.199	209.52.146.47 (r4---sn-uxa0n-t8gs.googlevideo.com)	YouTube_Video.Play	pass	Video Play
2020/06/26 16:55:50	10.1.100.199	209.52.146.47 (r4---sn-uxa0n-t8gs.googlevideo.com)	YouTube	pass	
2020/06/26 16:55:50	10.1.100.199	209.52.146.47 (r4---sn-uxa0n-t8gs.googlevideo.com)	YouTube_HD.Streaming	pass	HD Streaming
2020/06/26 16:55:50	10.1.100.199	209.52.146.47 (r4---sn-uxa0n-t8gs.googlevideo.com)	YouTube	pass	
2020/06/26 16:55:49	10.1.100.199	216.58.193.78 (www.youtube.com)	YouTube_Channel.ID	pass	Channel ID: UC>
2020/06/26 16:55:49	10.1.100.199	209.52.189.76 (r1---sn-uxa0n-t8gl.googlevideo.com)	YouTube_Video.Play	pass	Video Play
2020/06/26 16:55:49	10.1.100.199	209.52.189.76 (r1---sn-uxa0n-t8gl.googlevideo.com)	YouTube_Video.Play	pass	Video Play: Can
2020/06/26 16:55:49	10.1.100.199	209.52.189.76 (r1---sn-uxa0n-t8gl.googlevideo.com)	YouTube_HD.Streaming	pass	HD Streaming
2020/06/26 16:55:49	10.1.100.199	209.52.189.76 (r1---sn-uxa0n-t8gl.googlevideo.com)	YouTube	pass	
2020/06/26 16:55:49	10.1.100.199	209.52.189.76 (r1---sn-uxa0n-t8gl.googlevideo.com)	YouTube	pass	
2020/06/26 16:55:49	10.1.100.199	216.58.193.78 (www.youtube.com)	YouTube_Video.Access	pass	Video Access
2020/06/26 16:55:33	10.1.100.199	172.217.14.225 (y3.ggpht.com)	YouTube	pass	
2020/06/26 16:55:31	10.1.100.199	216.58.193.86 (i.yimg.com)	YouTube	pass	
2020/06/26 16:55:31	10.1.100.199	216.58.193.78 (www.youtube.com)	YouTube	pass	

## Learn mode in security policies in NGFW mode

In NGFW mode, administrators can configure a security policy in learn mode to monitor traffic that passes through the source and destination interfaces. The learn mode uses a special prefix in the `polycymode` and `profile` fields in traffic and UTM logs for use by FortiAnalyzer and the Policy Analyzer Management Extension Application (MEA) that is available with FortiManager.



When enabled on FortiManager, Policy Analyzer MEA works with security policies in learning mode to analyze logs sent from a managed FortiGate to FortiAnalyzer. Based on the analyzed traffic, FortiManager administrators can choose to automatically create a policy in FortiManager for the managed FortiGate. For more information about Policy Analyzer MEA, see the [Policy Analyzer Administration Guide](#).

The following limitations apply when learn mode is enabled in a security policy:

- Only interfaces with `device-identification enable` can be used as source interfaces in a security policy with learning mode enabled.
- Incoming and outgoing interfaces do not support `any`.
- Internet service is not supported.
- NAT46 and NAT64 are not supported.
- Users and groups are not supported.
- Some negate options are not supported.

### To enable learn mode in the GUI:

1. Enable policy-based NGFW mode:
  - a. Go to *System > Settings*.
  - b. Set the *NGFW Mode* to *Policy-based* and click *Apply*.
2. Go to *Policy & Objects > Security Policy*, and open a security policy for editing.
3. Set the *Policy Mode* to *Learn Mode*.

4. Select an *Incoming Interface*.
5. Select an *Outgoing Interface*.
6. (Optional) Type a comment in the *Comments* box.
7. Toggle on *Enable this policy*.
8. Click *OK* to save the security policy.

#### To enable learn mode in the CLI:

1. Enable policy-based NGFW mode:

```
config system settings
    set ngfw-mode policy-based
end
```

2. Enable learn mode in a security policy:

```
config firewall security-policy
    edit <id>
        set learning-mode enable
    next
end
```

#### To view learn mode fields in logs in the CLI:

1. Filter and view fields in traffic logs:

```
# execute log filter category 0
```

```
# execute log display
```

```
1 logs found.
```

```
1 logs returned.
```

```
1: date=2022-03-21 time=10:21:11 eventtime=1647883271150012188 tz="-0700"
logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root"
srcip=10.1.100.41 srcport=43296 srcintf="port24" srcintfrole="undefined"
dstip=172.16.200.55 dstport=80 dstintf="port17" dstintfrole="wan"
srccountry="Reserved" dstcountry="Reserved" sessionid=33934 proto=6
polycymode="learn" action="accept" policyid=99 policytype="security-policy"
poluid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c" policyname="Security-policy-99"
centralnatid=3 service="HTTP" trandisp="snat" transip=172.16.200.9 transport=43296
duration=1 sentbyte=412 rcvdbyte=529 sentpkt=6 rcvdpkt=4 appid=15893
app="HTTP.BROWSER" appcat="Web.Client" apprisk="medium" utmaction="allow"
countweb=1 countav=1 countips=3 countapp=1 crscore=50 craction=2
srchwvvendor="VMware" devtype="Computer" osname="Debian"
mastersrcmac="00:0c:29:b5:92:8d" srcmac="00:0c:29:b5:92:8d" srcserver=0
utmref=65534-0
```

**2. Filter and view fields in UTM logs:**

```
# execute log filter category 2

# execute log display

1 logs found.

1 logs returned.

1: date=2022-03-21 time=10:21:09 eventtime=1647883270101403283 tz="-0700"
logid="0211008193" type="utm" subtype="virus" eventtype="infected" level="notice"
vd="root" policyid=99 poluuid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c"
policytype="security-policy" policymode="learn" msg="File is infected."
action="monitored" service="HTTP" sessionid=33934 srcip=10.1.100.41
dstip=172.16.200.55 srcport=43296 dstport=80 srccountry="Reserved"
dstcountry="Reserved" srcintf="port24" srcintfrole="undefined" dstintf="port17"
dstintfrole="wan" proto=6 direction="incoming" filename="eicar.com"
quarskip="Quarantine-disabled" virus="EICAR_TEST_FILE" viruscat="Virus" dtype="av-
engine" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172
url="http://172.16.200.55/virus/eicar.com" profile="learn-av" agent="curl/7.35.0"
httpmethod="GET"
analyticscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical" rawdata="Response-
Content-Type=application/x-msdos-program"
```

**3. Filter and view fields in UTM-IPS logs:**

```
# execute log filter category 4

# execute log display

3 logs found.

3 logs returned.

1: date=2022-03-21 time=10:21:09 eventtime=1647883270101485354 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
vd="root" severity="info" srcip=10.1.100.41 srccountry="Reserved"
dstip=172.16.200.55 dstcountry="Reserved" srcintf="port24" srcintfrole="undefined"
dstintf="port17" dstintfrole="wan" sessionid=33934 action="detected" proto=6
service="HTTP" policyid=99 poluuid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c"
policytype="security-policy" policymode="learn" attack="Eicar.Virus.Test.File"
srcport=43296 dstport=80 agent="curl/7.35.0" httpmethod="GET" direction="incoming"
attackid=29844 profile="learn-ips" ref="http://www.fortinet.com/ids/VID29844"
incidentserialno=158335134 attackcontextid="2/2"
attackcontext="YW0NCg0KWDVPIVAlQEFQWzRcUFpYNTQoUF4pN0NDKTd9JEVJQ0FSLVNUQU5EQVJELUFO
VELWSVJVUy1URVNULUZJTEUhJEgrSCo8L1BBQ0tFVD4="

2: date=2022-03-21 time=10:21:09 eventtime=1647883270101484791 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
```

```
vd="root" severity="info" srcip=10.1.100.41 srccountry="Reserved"
dstip=172.16.200.55 dstcountry="Reserved" srcintf="port24" srcintfrole="undefined"
dstintf="port17" dstintfrole="wan" sessionid=33934 action="detected" proto=6
service="HTTP" policyid=99 poluid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c"
policytype="security-policy" policymode="learn" attack="Eicar.Virus.Test.File"
srcport=43296 dstport=80 agent="curl/7.35.0" httpmethod="GET" direction="incoming"
attackid=29844 profile="learn-ips" ref="http://www.fortinet.com/ids/VID29844"
incidentserialno=158335134 attackcontextid="1/2"
attackcontext="PFBBVFRFuk5TPiBYNU8hUCVAQVBbNFxQWlg1NChQXik3Q0MpN30kRu1DQVItU1RBTkRB
UkQtQU5USVZJU1VTLVRFU1QtRklMRSEkSctIKjtYNU8hUCVAQVBbNFxQWlg1NChQXik3Q0MpN30kRu1DQVI
tU1RBTkRBukQtQU5USVZJU1VTLVRFU1QtRklMRSEkSctIKjwvUEFUVVEVSTlM+CjxvUkk+IDwvVJJpGo8SE
VBREVSPiBIVFRQLzEuMSAYMDAgT0sNcKRhdGU6IE1vbiwgMjEgTWfYfYIDiWmJgMTc6MjE6MTAgR01UDQpTZ
XJ2ZXI6IEFwYWNoZS8yLjQuMTggKFVidW50dSkNcKxhc3QtTW9kaWZpZWQ6IFRodSwgMDEgRGVjIDlwMTYy
MDE6MjY6MzUgR01UDQpFVGFnOiAiNDQNTQyOGViNjU4MDk3YSINCkFjY2VwdC1SYW5nZXM6IGJ5dGVzDQp
Db250ZW50LUxlbmd0aDogNjgNcNvbnRlbnQtVHlwZTogYXBwbGljYXRpb24veC1tc2Rvcylwcm9ncmFtDQ
oNCjwvSEVBREVSPgo8Qk9EWT4gWDVPIVA1QEeFQWzRcUFpYNTQoUF4pN0NDKtd9JEVJQ0FSLVNUQU5EQVJEL
UFOVElWSVJVUy1URVNULUZJTEUhJEgrSc08L0JPRFk+CjxQQUNLRVQ+IEhUVFAvMS4xIDIwMCPBsw0KRGF0
ZTogTW9uLCAyMSBNYXlGmJyAjMyiAxNzoyMT0xMCBHTVQNC1NlcNzlcjogQXhY2hlLzIuNC4xOCAoVWJ1bnR
lKQ0KTGFzdC1Nb2RpZml1ZDogVGhlLCAwMSBEZWMGMjYxNiAwMT0yNj0zNSBHTVQNCkVUYWc6ICI0NC01ND
I4ZWI2NTgwOTdhIgoKQWNjZXB0LVJhbmdlczogYn10ZXMNcKvbnRlbnQtTGvUz3RoOiA2OA0KQ29udGVud
C1UeXBlOiBhcHBsaWNhdGlvbi94LW1zZG9zLXByb2dy"
```

```
3: date=2022-03-21 time=10:21:09 eventtime=1647883270101483279 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
vd="root" severity="info" srcip=10.1.100.41 srccountry="Reserved"
dstip=172.16.200.55 dstcountry="Reserved" srcintf="port24" srcintfrole="undefined"
dstintf="port17" dstintfrole="wan" sessionid=33934 action="detected" proto=6
service="HTTP" policyid=99 poluuid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c"
policytype="security-policy" policymode="learn" attack="Eicar.Virus.Test.File"
srcport=43296 dstport=80 hostname="172.16.200.55" url="/virus/eicar.com"
agent="curl/7.35.0" httpmethod="GET" direction="incoming" attackid=29844
profile="learn-ips" ref="http://www.fortinet.com/ids/VID29844"
incidentserialno=158335134 msg="file_transfer: Eicar.Virus.Test.File"
attackcontextid="0/2" rawdataid="1/1" rawdata="Response-Content-Type=application/x-
msdos-program"
```

#### 4. Filter and view fields in UTM-webfilter logs:

```
# execute log filter category 3
```

```
# execute log display
```

2 logs found.

2 logs returned.

```
2: date=2022-03-21 time=10:21:09 eventtime=1647883270100329681 tz="-0700"
logid="0319013317" type="utm" subtype="webfilter" eventtype="urlmonitor"
level="notice" vd="root" policyid=99 poluid="6e3f7f54-a932-51ec-73ba-8282cfd0b73c"
policytype="security-policy" policymode="learn" sessionid=33934 srcip=10.1.100.41
```

```
srcport=43296 srccountry="Reserved" srcintf="port24" srcintfrole="undefined"
dstip=172.16.200.55 dstport=80 dstcountry="Reserved" dstintf="port17"
dstintfrole="wan" proto=6 httpmethod="GET" service="HTTP" hostname="172.16.200.55"
agent="curl/7.35.0" profile="learn-webf" action="passthrough" reqtype="direct"
url="http://172.16.200.55/virus/eicar.com" sentbyte=92 rcvdbyte=0
direction="outgoing" msg="URL has been visited" ratemethod="domain" cat=255
catdesc="Unknown"
```

## Local-in policy

While security profiles control traffic flowing through the FortiGate, local-in policies control inbound traffic that is going to a FortiGate interface.

Administrative access traffic (HTTPS, PING, SSH, and others) can be controlled by allowing or denying the service in the interface settings. Trusted hosts can be configured under an administrator to restrict the hosts that can access the administrative service.

Local-in policies allow administrators to granularly define the source and destination addresses, interface, and services. Traffic destined for the FortiGate interface specified in the policy that meets the other criteria is subject to the policies action.

Local-in policies can be used to restrict administrative access or other services, such as VPN, that can be specified as services. You can define source addresses or address groups to restrict access from. For example, by using a geographic type address you can restrict a certain geographic set of IP addresses from accessing the FortiGate. An IP Address threat feed can also be used as either a source or destination address; see [Applying an IP address threat feed in a local-in policy on page 2936](#) for more information.



Local-in policies can only be created or edited in the CLI. You can view the existing local-in policies in the GUI by enabling it in *System > Feature Visibility* under the *Additional Features* section. This page does not list the custom local-in policies.

### To configure a local-in policy using the CLI:

```
config firewall {local-in-policy | local-in-policy6}
  edit <policy_number>
    set intf <interface>
    set srcaddr <source_address> [source_address] ...
    set dstaddr <destination_address> [destination_address] ...
    set action {accept | deny}
    set service <service_name> [service_name] ...
    set schedule <schedule_name>
    set comments <string>
  next
end
```

For example, to prevent the source subnet 10.10.10.0/24 from pinging port1, but allow administrative access for PING on port1:

```
config firewall address
  edit "10.10.10.0"
    set subnet 10.10.10.0 255.255.255.0
  next
```

```
end
config firewall local-in-policy
  edit 1
    set intf "port1"
    set srcaddr "10.10.10.0"
    set dstaddr "all"
    set service "PING"
    set schedule "always"
  next
end
```

### To test the configuration:

1. From the PC at 10.10.10.12, start a continuous ping to port1:

```
ping 192.168.2.5 -t
```

2. On the FortiGate, enable debug flow:

```
# diagnose debug flow filter addr 10.10.10.12
# diagnose debug flow filter proto 1
# diagnose debug enable
# diagnose debug flow trace start 10
```

3. The output of the debug flow shows that traffic is dropped by local-in policy 1:

```
# id=20085 trace_id=1 func=print_pkt_detail line=5746 msg="vd-root:0 received a packet
(proto=1, 10.10.10.12:1->192.168.2.5:2048) from port1. type=8, code=0, id=1, seq=128."
id=20085 trace_id=1 func=init_ip_session_common line=5918 msg="allocate a new session-
0017c5ad"
id=20085 trace_id=1 func=vf_ip_route_input_common line=2615 msg="find a route:
flag=80000000 gw=192.168.2.5 via root"
id=20085 trace_id=1 func=fw_local_in_handler line=474 msg="iprope_in_check() check
failed on policy 1, drop"
```

## Implicit deny rule

If a local-in-policy is not functioning correctly and traffic that should be blocked is being allowed through, the issue may be that the implicit deny local-in-policy has not been created. Unlike IPv4 policies, there is no default implicit deny policy. The implicit deny policy should be placed at the bottom of the list of local-in-policies. Local-in-policies are created for each interface, but if you want to create a general implicit deny rule for all interfaces for a specific service, source, address, or destination address, use the `any` interface.



By default, no local-in policies are defined, so there are no restrictions on local-in traffic. When you define a local-in policy, if no action is set manually, then the action will default to `deny`.

---

For example, to allow only the source subnet 172.16.200.0/24 to ping port1:

```
config firewall address
  edit "172.16.200.0"
    set subnet 172.16.200.0 255.255.255.0
  next
end
config firewall local-in-policy
```



```
edit 2
    set intf "port1"
    set srcaddr "172.16.200.0"
    set dstaddr "all"
    set action accept
    set service "PING"
    set schedule "always"
next
edit 3
    set intf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "PING"
    set schedule "always"
next
end
```

### To test the configuration:

1. From the PC at 172.16.200.2, start a continuous ping to port1:

```
ping 172.16.200.1 -t
```

2. On the FortiGate, enable debug flow:

```
# diagnose debug flow filter proto 1
# diagnose debug enable
# diagnose debug flow trace start 10
```

3. The output of the debug flow shows that ping traffic coming from the 172.16.200.0 subnet is allowed:

```
# id=65308 trace_id=25 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.16.200.2:5->172.16.200.1:2048) tun_id=0.0.0.0 from port1. type=8, code=0,
id=5, seq=0."
id=65308 trace_id=25 func=init_ip_session_common line=6121 msg="allocate a new session-
00029409, tun_id=0.0.0.0"
id=65308 trace_id=25 func=__vf_ip_route_input_rcu line=2012 msg="find a route:
flag=80000000 gw=0.0.0.0 via root"
id=65308 trace_id=25 func=ip_session_confirm_final line=3189 msg="npu_state=0x0, hook=1"
id=65308 trace_id=26 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.16.200.1:5->172.16.200.2:0) tun_id=0.0.0.0 from local. type=0, code=0,
id=5, seq=0."
id=65308 trace_id=26 func=resolve_ip_tuple_fast line=6027 msg="Find an existing session,
id-00029409, reply direction"
id=65308 trace_id=27 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.16.200.2:5->172.16.200.1:2048) tun_id=0.0.0.0 from port1. type=8, code=0,
id=5, seq=1."
id=65308 trace_id=27 func=resolve_ip_tuple_fast line=6027 msg="Find an existing session,
id-00029409, original direction"
id=65308 trace_id=28 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.16.200.1:5->172.16.200.2:0) tun_id=0.0.0.0 from local. type=0, code=0,
id=5, seq=1."
```

4. From the PC at 172.20.120.13, start a continuous ping to port1:

```
ping 172.16.200.1 -t
```

5. The output of the debug flow shows that ping traffic coming from subnets other than 172.16.200.0 is dropped by local-in policy 3:

```
# id=65308 trace_id=21 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.20.120.13:1->172.16.200.1:2048) tun_id=0.0.0.0 from port2. type=8, code=0,
id=1, seq=8."
id=65308 trace_id=21 func=init_ip_session_common line=6121 msg="allocate a new session-
0002929d, tun_id=0.0.0.0"
id=65308 trace_id=21 func=__vf_ip_route_input_rcu line=2012 msg="find a route:
flag=80000000 gw=0.0.0.0 via root"
id=65308 trace_id=21 func=__iprope_tree_check line=520 msg="gnum=100004, use int hash,
slot=51, len=2"
id=65308 trace_id=21 func=fw_local_in_handler line=545 msg="iprope_in_check() check
failed on policy 3, drop"
```

## Additional options

To disable or re-enable the local-in policy, use the `set status {enable | disable}` command.

To dedicate the interface as an HA management interface, use the `set ha-mgmt-intf-only enable` command.

### Example:

```
config firewall local-in-policy
edit 1
    set ha-mgmt-intf-only enable
    set intf port4
    set srcaddr all
    set dstaddr all
    set service ALL
    set schedule always
    set action accept
    set status enable
next
end
```



If a user tries to set the HA reserved management interface during the local-in policy an error is generated. Use the `set ha-mgmt-intf-only enable` command to avoid the error.

---

## TTL policies

You can configure a time-to-live (TTL) policy to block attack traffic with high TTLs. This feature only applies to local-in traffic and does not apply to traffic passing through the FortiGate. You can use `srcintf` to set the interface that the local-in traffic hits. See [config firewall ttl-policy](#).

### To configure a TTL policy using the CLI:

```
config firewall ttl-policy
edit <id>
    set status {enable | disable}
    set action {accept | deny}
    set srcintf <interface>
    set srcaddr <source_address> [source_address] ...
```

```

        set service <service_name> [service_name] ...
        set schedule <schedule_name>
        set ttl <value/range>
    next
end

```

## DoS policy

A Denial of Service (DoS) policy examines network traffic arriving at a FortiGate interface for anomalous patterns, which usually indicates an attack.

A denial of service occurs when an attacking system starts an abnormally large number of sessions with a target system. The large number of sessions slows down or disables the target system, preventing legitimate users from using it.

DoS policies are checked before security policies, preventing attacks from triggering more resource intensive security protection and slowing down the FortiGate.

### DoS anomalies

Predefined sensors are setup for specific anomalous traffic patterns. New DoS anomalies cannot be added by the user.

The predefined anomalies that can be used in DoS policies are:

Anomaly	Description	Recommended Threshold
tcp_syn_flood	If the SYN packet rate of new TCP connections, including retransmission, to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second.
tcp_port_scan	If the SYN packet rate of new TCP connections, including retransmission, from one source IP address exceeds the configured threshold value, the action is executed.	1000 packets per second.
tcp_src_session	If the number of concurrent TCP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
tcp_dst_session	If the number of concurrent TCP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
udp_flood	If the UDP traffic to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second.
udp_scan	If the UDP sessions setup rate originating from one source IP address exceeds the configured threshold value, the action is executed.	2000 sessions per second.
udp_src_session	If the number of concurrent UDP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.

Anomaly	Description	Recommended Threshold
udp_dst_session	If the number of concurrent UDP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
icmp_flood	If the number of ICMP packets sent to one destination IP address exceeds the configured threshold value, the action is executed.	250 packets per second.
icmp_sweep	If the ICMP sessions setup rate originating from one source IP address exceeds the configured threshold value, the action is executed.	100 sessions per second.
icmp_src_session	If the number of concurrent ICMP connections from one source IP address exceeds the configured threshold value, the action is executed.	300 concurrent sessions
icmp_dst_session	If the number of concurrent ICMP connections to one destination IP address exceeds the configured threshold value, the action is executed.	1000 concurrent sessions
ip_src_session	If the number of concurrent IP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
ip_dst_session	If the number of concurrent IP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
sctp_flood	If the number of SCTP packets sent to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second
sctp_scan	If the number of SCTP sessions originating from one source IP address exceeds the configured threshold value, the action is executed.	1000 packets per second
sctp_src_session	If the number of concurrent SCTP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions
sctp_dst_session	If the number of concurrent SCTP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions

For thresholds based on the number of concurrent sessions, blocking the anomaly will not allow more than the number of concurrent sessions to be set as the threshold.

For example, if the period for a particular anomaly is 60 seconds, such as those where the threshold is measured in concurrent sessions, after the 60 second timer has expired the number of allowed sessions that match the anomaly criteria is reset to zero. This means that, if you allow 10 sessions through before blocking, after the 60 seconds has elapsed, another 10 sessions will be allowed. The attrition of sessions from expiration should keep the allowed sessions from reaching the maximum.

For rate based thresholds, where the threshold is measured in packets per second, the *Block* action prevents anomalous traffic from overwhelming the firewall in two ways:

- continuous: Block packets once an anomaly is detected, and continue to block packets while the rate is above the threshold. This is the default setting.
- periodical: After an anomaly is detected, allow the configured number of packets per second.

For example, if a DoS policy is configured to block icmp\_flood with a threshold of 10pps, and a continuous ping is started at a rate of 20pps for 1000 packets:

- In continuous mode, the first 10 packets are passed before the DoS sensor is triggered, and then the remaining 990 packets are blocked.
- In periodical mode, 10 packets are allowed to pass per second, so 500 packets are blocked in the 50 seconds during which the ping is occurring.



The actual numbers of passed and blocked packets may not be exact, as fluctuations in the rates can occur, but the numbers should be close to the defined threshold.

---

### To configure the block action for rate based anomaly sensors:

```
config ips global
    set anomaly-mode {continuous | periodical}
end
```

## DoS policies

A DoS policy can be configured to use one or more anomalies.

### To configure a DoS policy in the GUI:

1. Go to *Policy & Objects > IPv4 DoS Policy* or *Policy & Objects > IPv6 DoS Policy* and click *Create New*.  
If the option is not visible, enable *DoS Policy* in *Feature Visibility*. See [Feature visibility on page 2515](#) for details.

## 2. Configure the following:

<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	Enter the interface that the policy applies to.
<b>Source Address</b>	Enter the source address.
<b>Destination Address</b>	Enter the destination address.  This is the address that the traffic is addressed to. In this case, it must be an address that is associated with the firewall interface. For example, it could be an interface address, a secondary IP address, or the address assigned to a VIP address.
<b>Service</b>	Select the services or service groups.  The ALL service can be used or, to optimize the firewall resources, only the services that will be answered on an interface can be used.
<b>L3 Anomalies</b> <b>L4 Anomalies</b>	Configure the anomalies: <ul style="list-style-type: none"> <li>• <b>Logging:</b> Enable/disable logging for specific anomalies or all of them. Anomalous traffic will be logged when the action is <i>Block</i> or <i>Monitor</i>.</li> <li>• <b>Action:</b> Select the action to take when the threshold is reached: <ul style="list-style-type: none"> <li>• <i>Disable:</i> Do not scan for the anomaly.</li> <li>• <i>Block:</i> Block the anomalous traffic.</li> <li>• <i>Monitor:</i> Allow the anomalous traffic, but record a log message if logging is enabled.</li> </ul> </li> <li>• <b>Threshold:</b> The number of detected instances that triggers the anomaly action.</li> </ul>
<b>Comments</b>	Optionally, enter a comment.

3. Enable the policy, then click **OK**.

The quarantine option is only available in the CLI. See [Quarantine on page 1073](#) for information.

**To configure a DoS policy in the GUI:**

```
config firewall DoS-policy
edit 1
    set name "Flood"
    set interface "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    config anomaly
        edit "icmp_flood"
            set status enable
            set log enable
            set action block
            set quarantine attacker
            set quarantine-expiry 1d1h1m
```

```

        set quarantine-log enable
        set threshold 100
    next
end
next
end

```

name <string>	Enter a name for the policy.
interface <string>	Enter the interface that the policy applies to.
srcaddr <string>	Enter the source address.
dstaddr <string>	Enter the destination address. This is the address that the traffic is addressed to. In this case, it must be an address that is associated with the firewall interface. For example, it could be an interface address, a secondary IP address, or the address assigned to a VIP address.
service <string>	Enter the services or service groups. The <b>ALL</b> service can be used or, to optimize the firewall resources, only the services that will be answered on an interface can be used.
status {enable   disable}	Enable/disable this anomaly.
log {enable   disable}	Enable/disable anomaly logging. When enabled, a log is generated whenever the anomaly action is triggered, regardless of which action is configured.
action {pass   block}	Set the action to take when the threshold is reached: <ul style="list-style-type: none"> <li>pass: Allow traffic, but record a log message if logging is enabled.</li> <li>block: Block traffic if this anomaly is found.</li> </ul>
quarantine {none   attacker}	Set the quarantine method (see <a href="#">Quarantine on page 1073</a> ): <ul style="list-style-type: none"> <li>none: Disable quarantine.</li> <li>attacker: Block all traffic from the attacker's IP address, and add the attacker's IP address to the banned user list.</li> </ul>
quarantine-expiry <###d##h##m>	Set the duration of the quarantine, in days, hours, and minutes (###d##h##m) (1m - 364d23h59m, default = 5m). This option is available if quarantine is set attacker.
quarantine-log {enable   disable}	Enable/disable quarantine logging (default = disable). This option is available if quarantine is set attacker.
threshold <integer>	The number of detected instances - packets per second or concurrent session number - that triggers the anomaly action.

## Quarantine

Quarantine is used to block any further traffic from a source IP address that is considered a malicious actor or a source of traffic that is dangerous to the network. Traffic from the source IP address is blocked for the duration of the quarantine, and the source IP address is added to the banned user list.


The banned user list is kept in the kernel, and used by Antivirus, Data Leak Prevention (DLP), DoS, and Intrusion Prevention System (IPS). Any policies that use any of these features will block traffic from the attacker's IP address.

**To view the quarantined user list:**

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
192.168.2.205    Wed Nov 25 12:47:54 2020 Wed Nov 25 12:57:54 2020 DOS
```

**Troubleshooting DoS attacks**

The best way to troubleshoot DoS attacks is with Anomaly logs and IPS anomaly debug messages.

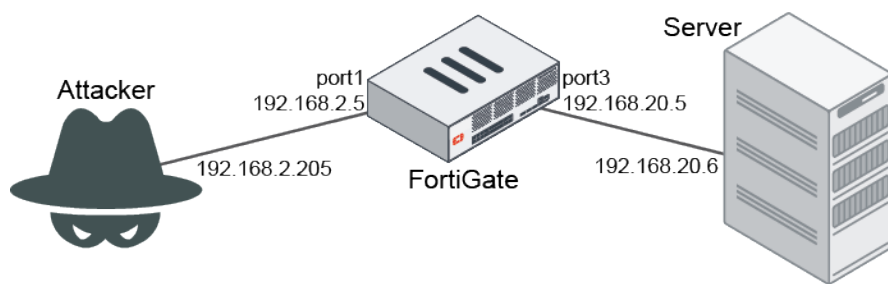**To test an icmp\_flood attack:**

1. From the Attacker, launch an icmp\_flood with 50pps lasting for 3000 packets.
2. On the FortiGate, configure continuous mode and create a DoS policy with an icmp\_flood threshold of 30pps:

```
config firewall DoS-policy
  edit 1
    set name icmpFlood
    set interface "port1"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    config anomaly
      edit "icmp_flood"
        set status enable
        set log enable
        set action block
        set threshold 30
      next
    end
  next
end
```

3. Configure the debugging filter:

```
# diagnose ips anomaly config
DoS sensors in kernel vd 0:
DoS id 1 proxy 0
  0 tcp_syn_flood status 0 log 0 nac 0 action 0 threshold 2000
  ...
  7 udp_dst_session status 0 log 0 nac 0 action 0 threshold 5000
  8 icmp_flood status 1 log 1 nac 0 action 7 threshold 30
  9 icmp_sweep status 0 log 0 nac 0 action 0 threshold 100
  ...
total # DoS sensors: 1.
```



```
# diagnose ips anomaly filter id 8
```

4. Launch the `icmp_flood` from a Linux machine. This example uses Nmap:

```
$ sudo nping --icmp --rate 50 -c 3000 192.168.2.50
SENT (0.0522s) ICMP [192.168.2.205 > 192.168.2.50 Echo request (type=8/code=0) id=8597
seq=1] IP [ttl=64 id=47459 iplen=28 ]
...
Max rtt: 11.096ms | Min rtt: 0.028ms | Avg rtt: 1.665ms
Raw packets sent: 3000 (84.000KB) | Rcvd: 30 (840B) | Lost: 2970 (99.00%)
Nping done: 1 IP address pinged in 60.35 seconds
```

5. During the attack, check the anomaly list on the FortiGate:

```
# diagnose ips anomaly list
list nids meter:
id=icmp_flood      ip=192.168.2.50 dos_id=1 exp=998 pps=46 freq=50
```

```
total # of nids meters: 1.
```

<b>id=icmp_flood</b>	The anomaly name.
<b>ip=192.168.2.50</b>	The IP address of the host that triggered the anomaly. It can be either the client or the server.  For <code>icmp_flood</code> , the IP address is the destination IP address. For <code>icmp_sweep</code> , it would be the source IP address.
<b>dos_id=1</b>	The DoS policy ID.
<b>exp=998</b>	The time to be expired, in jiffies (one jiffy = 0.01 seconds).
<b>pps=46</b>	The number of packets that had been received when the diagnose command was executed.
<b>freq=50</b>	For session based anomalies, <code>freq</code> is the number of sessions. For packet rate based anomalies (flood, scan): <ul style="list-style-type: none"> <li>In continuous mode: <code>freq</code> is the greater of <code>pps</code>, or the number of packets received in the last second.</li> <li>In periodic mode: <code>freq</code> is the <code>pps</code>.</li> </ul>

6. Go to *Log & Report > Security Events* and download the *Anomaly* logs:

```
date=2020-11-20 time=14:38:39 eventtime=1605911919824184594 tz="-0800"
logid="0720018433" type="utm" subtype="anomaly" eventtype="anomaly" level="alert"
vd="root" severity="critical" srcip=192.168.2.205 srccountry="Reserved"
dstip=192.168.2.50 srcintf="port1" srcintfrole="undefined" sessionid=0 action="clear_session"
proto=1 service="PING" count=1307 attack="icmp_flood" icmpid="0x2195"
icmptype="0x08" icmpcode="0x00" attackid=16777316 policyid=1 policytype="DoS-policy"
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 31 > threshold 30, repeats 28 times"
crscore=50 craction=4096 crlevel="critical"

date=2020-11-20 time=14:39:09 eventtime=1605911949826224056 tz="-0800"
logid="0720018433" type="utm" subtype="anomaly" eventtype="anomaly" level="alert"
vd="root" severity="critical" srcip=192.168.2.205 srccountry="Reserved"
dstip=192.168.2.50 srcintf="port1" srcintfrole="undefined" sessionid=0 action="clear_session"
proto=1 service="PING" count=1497 attack="icmp_flood" icmpid="0x2195"
icmptype="0x08" icmpcode="0x00" attackid=16777316 policyid=1 policytype="DoS-policy"
```

```
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 50 > threshold 30, repeats 1497 times" crscore=50 craction=4096 crlevel="critical"
```

## Analysis

In the first log message:

<b>msg="anomaly: icmp_flood, 31 &gt; threshold 30</b>	At the beginning of the attack, a log is recorded when the threshold of 30pps is broken.
<b>repeats 28 times</b>	The number of packets that has exceeded the threshold since the last time a log was recorded.
<b>srcip=192.168.2.205 dstip=192.168.2.50</b>	The source and destination IP addresses of the attack.
<b>action="clear_session"</b>	Equivalent to block. If action was set to monitor and logging was enabled, this would be action="detected".

In the second log message:

- Because it is an ongoing attack, the FortiGate generates one log message for multiple packets every 30 seconds..
- It will not generate a log message if:
  - The same attack ID happened more than once in a five second period, or
  - The same attack ID happened more than once in a 30 second period and the actions are the same and have the same source and destination IP addresses.

<b>msg="anomaly: icmp_flood, 50 &gt; threshold 30</b>	In the second before the log was recorded, 50 packets were detected, exceeding the configured threshold.
<b>repeats 1497 times</b>	The number of packets that has exceeded the threshold since the last time a log was recorded

## Access control lists

An access control list (ACL) is a granular, targeted blocklist that is used to block IPv4 and IPv6 packets on a specified interface based on the criteria configured in the ACL policy.

On FortiGate models with ports that are connected through an internal switch fabric with TCAM capabilities, ACL processing is offloaded to the switch fabric and does not use CPU resources. VLAN interfaces that are based on physical switch fabric interfaces are also supported. Interfaces that are connected through an internal switch fabric usually have names prefixed with *port* or *lan*, such as *port1* or *lan2*; other interfaces are not supported.

The packets will be processed by the CPU when offloading is disabled or not possible, such as when a port on a supported model does not connect to the internal fabric switch.

ACL is supported on the following FortiGate models:

- 100D, 100E, 100EF, 101E
- 140D, 140D-POE, 140E, 140E-POE
- 1500D, 1500DT

- 3000D, 3100D, 3200D, 3700D, 3800D
- All 300E and larger E-series models
- All 100F and larger F-series models

## Example

**To block all IPv4 and IPv6 telnet traffic from port2 to Company\_Servers:**

```
config firewall acl
  edit 1
    set interface "port2"
    set srcaddr "all"
    set dstaddr "Company_Servers"
    set service "TELNET"
  next
end
config firewall acl6
  edit 1
    set interface "port2"
    set srcaddr "all"
    set dstaddr "Company_Servers_v6"
    set service "TELNET"
  next
end
```

## Diagnose commands

**To check the number of packets dropped by an ACL:**

```
# diagnose firewall acl counter
ACL id 1 dropped 0 packets

# diagnose firewall acl counter6
ACL id 2 dropped 0 packets
```

**To clear the packet drop counters:**

```
# diagnose firewall acl clearcounter
# diagnose firewall acl clearcounter6
```

## Interface policies

Interface policies are implemented before the security policies and are only flow-based. They are configured in the CLI.

This feature allows you to attach a set of IPS policies with the interface instead of the forwarding path, so packets can be delivered to IPS before entering the firewall. This feature is used for following IPS deployments:

- One-Arm: By defining interface policies with IPS and DoS anomaly checks and enabling sniff-mode on the interface, the interface can be used for one-arm IDS.
- IPv6 IPS: IPS inspection can be enabled through interface IPv6 policy.

- Scan traffic that is destined to the FortiGate.
- Scan and log traffic that are silently dropped or flooded by Firewall or Multicast traffic.

IPS sensors can be assigned to an interface policy. Both incoming and outgoing packets are inspected by IPS sensor (signature).

### To configure an interface policy:

```
config firewall interface-policy
    edit 1
        set status enable
        set comments 'test interface policy #1'
        set logtraffic utm
        set interface "port2"
        set srcaddr all
        set dstaddr all
        set service "ALL"
        set application-list-status disable
        set ips-sensor-status disable
        set dsri disable
        set av-profile-status enable
        set av-profile default
        set webfilter-profile-status disable
    next
end
```

## Source NAT

The following topics provide instructions on configuring policies with source NAT:

- [Static SNAT on page 1078](#)
- [Dynamic SNAT on page 1079](#)
- [Central SNAT on page 1085](#)
- [Configuring an IPv6 SNAT policy on page 1090](#)
- [SNAT policies with virtual wire pairs on page 1092](#)

### Static SNAT

Network Address Translation (NAT) is the process that enables a single device such as a router or firewall to act as an agent between the Internet or Public Network and a local or private network. This agent acts in real time to translate the source or destination IP address of a client or server on the network interface. For the source IP translation, this enables a single public address to represent a significantly larger number of private addresses. For the destination IP translation, the firewall can translate a public destination address to a private address. So we don't have to configure a real public IP address for the server deployed in a private network.

We can subdivide NAT into two types: source NAT (SNAT) and destination NAT (DNAT). This topic is about SNAT. We support three NAT working modes: static SNAT, dynamic SNAT, and central SNAT.

In static SNAT all internal IP addresses are always mapped to the same public IP address. This is a port address translation, Since we have 60416 available port numbers, this one public IP address can handle the conversion of 60,416 internal IP addresses to the same service, where a service is defined by a specified protocol, destination IP address, and destination port.

Internal Source IP	Source Port	Translated Source IP	Translated Source Port
10.1.100.1	11110	172.16.200.1	5117
10.1.100.1	11111	172.16.200.1	5118
10.1.100.2	11112	172.16.200.1	5119
*****	*****	172.16.200.1	*****
*****	*****	172.16.200.1	65533

FortiGate firewall configurations commonly use the Outgoing Interface address.


## Sample configuration

The following example of static SNAT uses an internal network with subnet 10.1.100.0/24 (vlan20) and an external/ISP network with subnet 172.16.200.0/24 (vlan30).

When the clients in internal network need to access the servers in external network, We need to translate IP addresses from 10.1.100.0/24 to an IP address 172.16.200.0/24, In this example, we implement static SNAT by creating a firewall policy.

### To configure static NAT:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the required policy parameters.
3. Enable *NAT* and select *Use Outgoing Interface Address*. For packets that match this policy, its source IP address is translated to the IP address of the outgoing interface.
4. If needed, enable *Preserve Source Port* to keep the same source port for services that expect traffic to come from a specific source port. Disable *Preserve Source Port* to allow more than one connection through the firewall for that service.

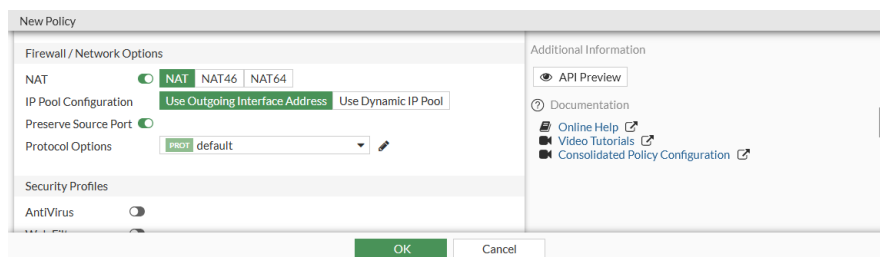

5. Click *OK*.

## Dynamic SNAT

Dynamic SNAT maps the private IP addresses to the first available public address from a pool of addresses. In the FortiGate firewall, this can be done by using IP pools. IP pools is a mechanism that allows sessions leaving the FortiGate firewall to use NAT. An IP pool defines a single IP address or a range of IP addresses to be used as the source address for the duration of the session. These assigned addresses are used instead of the IP address assigned to that FortiGate interface.

## IP pool types

FortiGate uses four types of IPv4 IP pools. This topic focuses on some of the differences between them.

### Overload

This type of IP pool is similar to static SNAT mode. We need to define an external IP range that contains one or more IP addresses. When there is only one IP address it is almost the same as static SNAT, the outgoing interface address is used. When it contains multiple IP addresses, it is equivalent to an extended mode of static SNAT.

For instance, if we define an overload type IP pool with two external IP addresses (172.16.200.1—172.16.200.2), since there are 60,416 available port numbers per IP, this IP pool can handle 60,416\*2 internal IP addresses to the same service, where a service is defined by a specific protocol, destination IP address, and destination port.

Original Source IP	Original Source Port	Translated Source IP	Translated Source Port
10.1.100.1	11110	172.16.200.1	5117
10.1.100.2	11111	172.16.200.1	5118
*****	*****	172.16.200.1	*****
*****	*****	172.16.200.1	65533
*****	*****	172.16.200.2	5117
*****	*****	*****	*****
*****	*****	172.16.200.2	65533

The mapped IP address can be calculated from the source IP address. The index number of the address in the pool is the remainder of the source IP address, in decimal, divided by the number addresses in the pool.



To calculate the decimal value of the source IP address, either use an online calculator, or use the following equation:

$$a.b.c.d = a * (256)^3 + b * (256)^2 + c * (256) + d$$

For example:

$$192.168.0.1 = 192 * (256)^3 + 168 * (256)^2 + 0 * (256) + 1 = 3232235521$$

If there is one IP pool, where:

- $P_1$  = the first address in the IP pool
- $R_1$  = the number of IP addresses in the IP pool
- $X$  = the source IP address as a decimal number
- $Y$  = the mapped IP address

Then the equation to determine the mapped address is:

$$Y = P_1 + X \bmod R_1$$

For example:

IP pool	Source IP address
172.26.73.20 to 172.26.73.90	192.168.1.200

1. Convert the source IP address to a decimal number:

$$192 * (256)^3 + 168 * (256)^2 + 1 * (256) + 200 = 3232235976$$

- Determine the number of IP addresses in the pool:

$$172.26.73.90 - 172.26.73.20 = 71$$

- Find the remainder of the source IP address divided by the number of addresses in the pool:

$$3232235976 \bmod 71 = 26$$

- Add the remainder to the first IP address in the pool:

$$172.26.73.20 + 26 = 172.26.73.46$$

So, the mapped IP address is **172.26.73.46**.

If there are multiple IP pools, the calculation is similar to when there is only one pool.

If there are two IP pools, where:

- $P_1$  = the first address in the first IP pool
- $P_2$  = the first address in the second IP pool
- $R_1$  = the number of IP addresses in the first IP pool
- $R_2$  = the number of IP addresses in the second IP pool
- $X$  = the source IP address as a decimal number
- $Y$  = the mapped IP address

Then the equations to determine the mapped address are:

$$\text{If } X \bmod (R_1 + R_2) \geq R_1, \text{ then } Y = P_2 + X \bmod R_2$$

$$\text{If } X \bmod (R_1 + R_2) < R_1, \text{ then } Y = P_1 + X \bmod R_1$$

For example:

IP pools	Source IP address
pool01: 172.26.73.20 to 172.26.73.90	192.168.1.200
pool02: 172.26.75.50 to 172.26.75.150	

- Convert the source IP address to a decimal number:

$$192 * (256)^3 + 168 * (256)^2 + 1 * (256) + 200 = 3232235976$$

- Determine the total number of IP addresses in the pools:

$$(172.26.73.90 - 172.26.73.20) + (172.26.75.150 - 172.26.75.50) = 71 + 101 = 172$$

- Find the remainder of the source IP address divided by the number of addresses in the pools:

$$3232235976 \bmod 172 = 108$$

- The remainder is greater than the number of addresses in pool01, so the address is selected from pool02 and the remainder is recalculated based only on pool02:

$$3232235976 \bmod 101 = 40$$

- Add the new remainder to the first IP address in pool02:

$$172.26.75.50 + 40 = 172.26.75.90$$

So, the mapped IP address is **172.26.75.90**.

### One-to-one

This type of IP pool means that the internal IP address and the external (translated) IP address match one-to-one. The port address translation (PAT) is disabled when using this type of IP pool. For example, if we define a one-to-one type IP pool with two external IP addresses (172.16.200.1 - 172.16.200.2), this IP pool only can handle two internal IP addresses.

## Fixed port range

For the overload and one-to-one IP pool types, we do not need to define the internal IP range. For the fixed port range type of IP pool, we can define both internal IP range and external IP range. Since each external IP address and the number of available port numbers is a specific number, if the number of internal IP addresses is also determined, we can calculate the port range for each address translation combination. So we call this type fixed port range. This type of IP pool is a type of port address translation (PAT).

For instance, if we define one external IP address (172.16.200.1) and ten internal IP addresses (10.1.100.1-10.1.100.10), we have translation IP+Port combination like following table:

Original Source IP	Original Source Port	Translated Source IP	Translated Source Port Range
10.1.100.1	*****	172.16.200.1	5117~11157
10.1.100.2	*****	172.16.200.1	11158~17198
10.1.100.3	*****	172.16.200.1	*****
10.1.100.4	*****	172.16.200.1	*****
10.1.100.5	*****	172.16.200.1	*****
10.1.100.6	*****	172.16.200.1	*****
10.1.100.7	*****	172.16.200.1	*****
10.1.100.8	*****	172.16.200.1	*****
10.1.100.9	*****	172.16.200.1	53445~59485
10.1.100.10	*****	172.16.200.1	59486~65526

## Port block allocation

This type of IP pool is also a type of port address translation (PAT). It gives users a more flexible way to control the way external IPs and ports are allocated. Users need to define *Block Size/Block Per User* and external IP range. *Block Size* means how many ports each Block contains. *Block per User* means how many blocks each user (internal IP) can use.

The following is a simple example:

- **External IP Range:** 172.16.200.1—172.16.200.1
- **Block Size:** 128
- **Block Per User:** 8

Result:

- **Total-PBAs:** 472 (60416/128)
- **Maximum ports can be used per User (Internal IP Address):** 1024 (128\*8)
- **How many Internal IP can be handled:** 59 (60416/1024 or 472/8)

## Sample configuration



When an IP pool object is created with *ARP Reply* enabled, the object does not need to be referenced in any policies before a FortiGate interface starts responding to ARP requests for the addresses in the IP pool.

## To configure overload IP pool in the GUI:

1. In *Policy & Objects > IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Overload*.



3. Enter the external IP range separated by a hyphen (172.16.200.1-172.16.200.1).

New Dynamic IP Pool

IP Pool Type: **IPv4 Pool** | IPv6 Pool

Name: Overload-ippool

Comments: Write a comment... 0/255

Type: **Overload** | One-to-One | Fixed Port Range | Port Block Allocation

External IP address/range: 172.16.200.1-172.16.200.1

NAT64: ☐

ARP Reply: ☒

OK Cancel

FortiGate  
FortiGate-VM64

Additional Information

API Preview

Documentation

Online Help Video Tutorials

4. Click OK.

#### To configure overload IP pool in the CLI:

```
config firewall ippool
    edit "Overload-ippool"
        set startip 172.16.200.1
        set endip 172.16.200.1
    next
end
```

#### To configure one-to-one IP pool using the GUI:

1. In *Policy & Objects > IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *One-to-One*.
3. Enter the external IP range separated by a hyphen (172.16.200.1-172.16.200.2).

New Dynamic IP Pool

IP Pool Type: **IPv4 Pool** | IPv6 Pool

Name: One-to-One-ippool

Comments: Write a comment... 0/255

Type: Overload | **One-to-One** | Fixed Port Range | Port Block Allocation

External IP address/range: 172.16.200.1-172.16.200.2

ARP Reply: ☒

OK Cancel

FortiGate  
FortiGate-VM64

Additional Information

API Preview

Documentation

Online Help Video Tutorials

4. Click OK.

#### To configure one-to-one IP pool in the CLI:

```
config firewall ippool
    edit "One-to-One-ippool"
        set type one-to-one
```

```

        set startip 172.16.200.1
        set endip 172.16.200.2
    next
end

```

### To configure fixed port range IP pool in the GUI:

1. In *Policy & Objects > IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Fixed Port Range*.
3. Enter the external IP range separated by a hyphen *172.16.200.1-172.16.200.1*.
4. Enter the internal IP range separated by a hyphen *10.1.100.1-10.1.100.10*.

5. Click *OK*.

### To configure fixed port range IP pool in the CLI:

```

config firewall ippool
    edit "FPR-ippool"
        set type fixed-port-range
        set startip 172.16.200.1
        set endip 172.16.200.1
        set source-startip 10.1.100.1
        set source-endip 10.1.100.10
    next
end

```

### To configure port block allocation IP pool in the GUI:

1. In *Policy & Objects > IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Port Block Allocation*.

3. Enter the external IP range separated by a hyphen *172.16.200.1-172.16.200.1*).

The screenshot shows the 'New Dynamic IP Pool' configuration window. The 'IPv4 Pool' tab is active. The 'Name' field contains 'PBA-ippool'. The 'Comments' field is empty. The 'Type' is set to 'Port Block Allocation'. The 'External IP address/range' is '172.16.200.1-172.16.200.1'. The 'Block Size' is '128'. The 'Blocks Per User' is '8'. The 'ARP Reply' checkbox is checked. The 'OK' button is highlighted in green.

4. Click **OK**.

### To configure port block allocation IP pool in the CLI:

```
config firewall ippool
    edit PBA-ippool
        set type port-block-allocation
        set startip 172.16.200.1
        set endip 172.16.200.1
        set block-size 128
        set num-blocks-per-user 8
    next
end
```

## Central SNAT

The central SNAT table enables you to define and control (with more granularity) the address translation performed by FortiGate. With the NAT table, you can define the rules for the source address or address group, and which IP pool the destination address uses.

FortiGate reads the NAT rules from the top down until it hits a matching rule for the incoming address. This enables you to create multiple NAT policies that dictate which IP pool is used based on source address, destination address, and source port. NAT policies can be rearranged within the policy list. NAT policies are applied to network traffic after a security policy.

The central SNAT table allows you to create, edit, delete, and clone central SNAT entries.

### Central SNAT notes

- The central NAT feature is not enabled by default.
- If central NAT is enabled, the NAT option under IPv4 policies is skipped and SNAT must be done via `central-snat-map`. The firewall policy list and dialog boxes have messages and redirection links to show this information.
- If NGFW mode is policy-based, then it is assumed that central NAT (specifically SNAT) is enabled implicitly.

## Sample configuration

### To enable central SNAT from the GUI:

1. In *System > Settings*, under *System Operations Settings*, enable *Central SNAT*.
2. Click *Apply*.

### To enable or disable central SNAT using the CLI:

```
config system settings
    set central-nat {enable | disable}
end
```

When central NAT is enabled, *Policy & Objects* displays the Central SNAT section.

The Central SNAT policy has many options:

Field	Description
Type	Specify whether you are performing SNAT on IPv4 or IPv6. This option only appears when IPv6 is enabled under Feature Visibility.
Incoming Interface	Specify one or more interfaces for the ingress traffic.
Outgoing Interface	Specify one or more interfaces for the egress traffic.
Source Address	Specify the address or address group of the source.
Destination Address	Specify the address or address group of the destination.
NAT	Enable or disable to perform NAT. When disabled, no source address translation will occur.
IP Pool Configuration	Use outgoing interface address: <ul style="list-style-type: none"> <li>• Use the address of the outgoing interfaces as source address.</li> </ul> Use Dynamic IP Pool: <ul style="list-style-type: none"> <li>• Choose an IP Pool to perform source NAT.</li> </ul>
Protocol	Choose from any, TCP, UDP, SCTP, or specify the protocol number to match. For example, for ICMP, click <i>specify</i> with the protocol number 1.
Explicit port mapping	Enable in order to match this NAT policy only when the following ports are a match: <ul style="list-style-type: none"> <li>• Choose an original source port from one to 65535. NAT'd port will be chosen by the FortiGate based on the IP Pool configuration.</li> </ul> <p>Explicit port mapping cannot apply to some protocols which do not use ports, such as ICMP. When enabling a NAT policy which uses Explicit port mapping, always consider that ICMP traffic will not match this policy.</p> <p>When using IP Pools, only the Overload type IP Pool allows Explicit port mapping. When Explicit port mapping is applied, you must define an original source port range and a translated sort port range. The source port will map one to one with the translated port.</p> <p>Refer to <a href="#">Dynamic SNAT</a> to understand how each IP Pool type works.</p>

Field	Description
Comments	Enter comments for this NAT policy.
Enable this policy	Enable or disable this policy.

### To configure central SNAT using the CLI:

```
config firewall central-snat-map
  edit <policyID number>
    set status {enable | disable}
    set orig-addr <valid address object preconfigured on the FortiGate>
    set srcintf <name of interface on the FortiGate>
    set dst-addr <valid address object preconfigured on the FortiGate>
    set dstintf <name of interface on the FortiGate>
    set protocol <integer for protocol number>
    set orig-port <integer for original port number>
    set nat-port <integer for translated port number>
    set comments <string>
  next
end
```

### Example one

Apply SNAT to all traffic from port2 to port3.

### To configure from the CLI:

```
config firewall central-snat-map
  edit 1
    set srcintf "port3"
    set dstintf "port2"
    set orig-addr "all"
    set dst-addr "all"
  next
end
```

### Example two

Apply an IP Pool to all traffic from port3 to port2 that are TCP. NAT all other traffic using the outgoing interface IP.

### To configure from the CLI:

```
config firewall ippool
  edit "Overload-IPPOOL"
    set startip 192.168.2.201
    set endip 192.168.2.202
  next
end
config firewall central-snat-map
  edit 1
    set srcintf "port3"
    set dstintf "port2"
    set orig-addr "all"
```

```
        set dst-addr "all"
        set protocol 6
        set nat-ippool "Overload-IPPOOL"
    next
    edit 2
        set srcintf "port3"
        set dstintf "port2"
        set orig-addr "all"
        set dst-addr "all"
    next
end
```

### To collect session table output from the CLI:

```
diagnose sys session list
```

The TCP session (protocol 6) is NAT'd with Overload-IPPOOL to 192.168.2.201:

```
session info: proto=6 proto_state=05 duration=14 expire=0 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=860/7/1 reply=555/8/1 tuples=2
tx speed(Bps/kbps): 60/0 rx speed(Bps/kbps): 38/0
orgin->sink: org pre->post, reply pre->post dev=9->6/6->9 gwy=192.168.2.1/192.168.0.10
hook=post dir=org act=snat 192.168.0.10:49531->23.57.57.114:443 (192.168.2.201:61776)
hook=pre dir=reply act=dnat 23.57.57.114:443->192.168.2.201:61776 (192.168.0.10:49531)
pos/(before,after) 0/(0,0), 0/(0,0)
dst_mac=04:d5:90:5f:a2:2a
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=00011065 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x040000
```

A UDP session (protocol 17) is NAT'd to the outgoing interface IP address 192.168.2.86:

```
session info: proto=17 proto_state=01 duration=16 expire=163 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ helper=dns-udp vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=59/1/1 reply=187/1/1 tuples=2
tx speed(Bps/kbps): 3/0 rx speed(Bps/kbps): 11/0
orgin->sink: org pre->post, reply pre->post dev=9->6/6->9 gwy=192.168.2.1/192.168.0.10
hook=post dir=org act=snat 192.168.0.10:52177->4.2.2.1:53 (192.168.2.86:61770)
hook=pre dir=reply act=dnat 4.2.2.1:53->192.168.2.86:61770 (192.168.0.10:52177)
dst_mac=04:d5:90:5f:a2:2a
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=00011061 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x040000
```

### Example three

Apply an IP Pool to all traffic from port3 to port2 that have a specific original port range, mapping the ports to the same NAT'd port range. Nat all other traffic using the outgoing interface IP.

#### To configure from the CLI:

```
config firewall central-snat-map
  edit 1
    set srcintf "port3"
    set dstintf "port2"
    set orig-addr "all"
    set dst-addr "all"
    set orig-port 50000-65535
    set nat-ippool "Overload-IPPOOL"
    set nat-port 50000-65535
  next
  edit 2
    set srcintf "port3"
    set dstintf "port2"
    set orig-addr "all"
    set dst-addr "all"
  next
end
```

#### To collect session table output from the CLI:

```
diagnose sys session list
```

Traffic with original port in the range between 50000-65535 will be NAT'd with the Overload type IP Pool. The mapped port is in the same port range:

```
session info: proto=17 proto_state=01 duration=3 expire=176 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ helper=dns-udp vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=71/1/1 reply=123/1/1 tuples=2
tx speed(Bps/kbps): 23/0 rx speed(Bps/kbps): 40/0
orgin->sink: org pre->post, reply pre->post dev=9->6/6->9 gwy=192.168.2.1/192.168.0.10
hook=post dir=org act=snat 192.168.0.10:52540->4.2.2.1:53(192.168.2.201:52540)
hook=pre dir=reply act=dnat 4.2.2.1:53->192.168.2.201:52540(192.168.0.10:52540)
dst_mac=04:d5:90:5f:a2:2a
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=00011399 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x040000
```

Traffic with original port outside the range of 50000-65535 will be NAT'd to the outgoing interface IP:

```
session info: proto=6 proto_state=01 duration=3 expire=3597 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
```

```

per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=2262/10/1 reply=2526/11/1 tuples=2
tx speed(Bps/kbps): 741/5 rx speed(Bps/kbps): 828/6
origin->sink: org pre->post, reply pre->post dev=9->6/6->9 gwy=192.168.2.1/192.168.0.10
hook=post dir=org act=snat 192.168.0.10:49805->142.250.68.66:443(192.168.2.86:62214)
hook=pre dir=reply act=dnat 142.250.68.66:443->192.168.2.86:62214(192.168.0.10:49805)
pos/(before,after) 0/(0,0), 0/(0,0)
dst_mac=04:d5:90:5f:a2:2a
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=0001139a tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x040000

```

Protocols which do not use ports, such as ICMP, will be NAT'd to the outgoing interface IP:

```

session info: proto=1 proto_state=00 duration=7 expire=59 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty
statistic(bytes/packets/allow_err): org=480/8/1 reply=480/8/1 tuples=2
tx speed(Bps/kbps): 66/0 rx speed(Bps/kbps): 66/0
origin->sink: org pre->post, reply pre->post dev=9->6/6->9 gwy=192.168.2.1/192.168.0.10
hook=post dir=org act=snat 192.168.0.10:1->4.2.2.1:8(192.168.2.86:62209)
hook=pre dir=reply act=dnat 4.2.2.1:62209->192.168.2.86:0(192.168.0.10:1)
dst_mac=04:d5:90:5f:a2:2a
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=0001138b tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x040000

```


## Configuring an IPv6 SNAT policy

IPv4 and IPv6 central SNAT maps are displayed in the same table.


**To configure an IPv6 policy with central SNAT in the GUI:**

1. Enable central SNAT:
  - a. In the Global VDOM, go to *System > VDOM*.
  - b. Select a VDOM and click *Edit*. The *Edit Virtual Domain Settings* pane opens.
  - c. Enable *Central SNAT*.



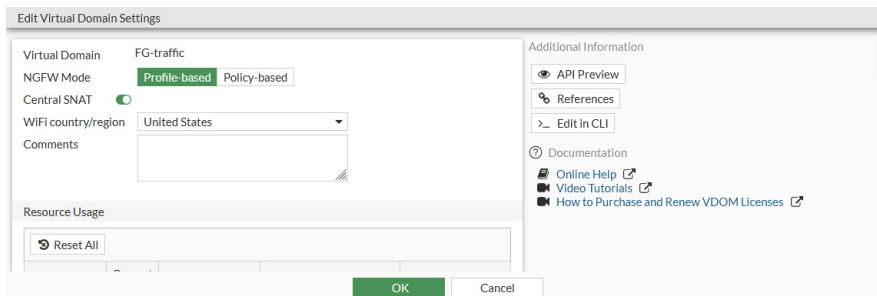

- d. Click **OK**.
2. In the VDOM with central SNAT enabled (FG-traffic in this example), go to *Policy & Objects > Central SNAT* and click *Create New*.
3. Configure the policy settings:
  - a. For *Type*, select *IPv6*.
  - b. Enter the interface, address, and IP pool information.
  - c. Configure the remaining settings as needed.

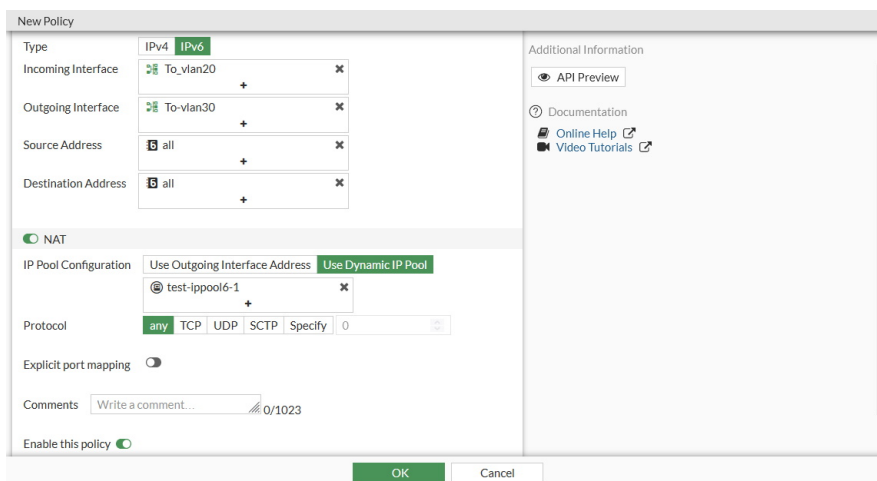

- d. Click **OK**.  
The matching SNAT traffic will be handled by the IPv6 central SNAT map.

### To configure an IPv6 policy with central SNAT in the CLI:

1. Enable central SNAT:

```
config vdom
  edit FG-traffic
    config system settings
      set central-nat enable
    end
  next
end
```

2. Create an IPv6 central SNAT policy:

```
config vdom
  edit FG-traffic
    config firewall central-snat-map
```

```
        edit 2
            set type ipv6
            set srcintf "wan2"
            set dstintf "wan1"
            set orig-addr6 "all"
            set dst-addr6 "all"
            set nat-ippool6 "test-ippool6-1"
        next
    end
next
end
```

### 3. Verify the SNAT traffic:

```
(FG-traffic) # diagnose sniffer packet any icmp6 4
interfaces=[any]
filters=[icmp6]
3.602891 wan2 in 2000:10:1:100::41 -> 2000:172:16:200::55: icmp6: echo request seq 0
3.602942 wan1 out 2000:172:16:200::199 -> 2000:172:16:200::55: icmp6: echo request seq 0
3.603236 wan1 in 2000:172:16:200::55 -> 2000:172:16:200::199: icmp6: echo reply seq 0
3.603249 wan2 out 2000:172:16:200::55 -> 2000:10:1:100::41: icmp6: echo reply seq 0
4.602559 wan2 in 2000:10:1:100::41 -> 2000:172:16:200::55: icmp6: echo request seq 1
4.602575 wan1 out 2000:172:16:200::199 -> 2000:172:16:200::55: icmp6: echo request seq 1
4.602956 wan1 in 2000:172:16:200::55 -> 2000:172:16:200::199: icmp6: echo reply seq 1
4.602964 wan2 out 2000:172:16:200::55 -> 2000:10:1:100::41: icmp6: echo reply seq 1
^C
8 packets received by filter
0 packets dropped by kernel
```

## SNAT policies with virtual wire pairs

Source NAT (SNAT) can be configured in IPv4 and IPv6 policies with virtual wire pair (VWP) interfaces, and between VWP interfaces when central NAT is enabled.

### To configure a policy using SNAT and a VWP interface when central NAT is disabled:

#### 1. Create the VWP interface:

```
config system virtual-wire-pair
    edit "test-vw-1"
        set member "port1" "port4"
    next
end
```

#### 2. Create the IP pool. The IP pool must have a different subnet than the VWP peers.

```
config firewall ippool
    edit "vwp-pool-1"
        set startip 172.16.222.99
        set endip 172.16.222.100
    next
end
```

#### 3. Configure the firewall policy:

```
config firewall policy
    edit 88
```

```
        set srcintf "port4"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
        set ippool enable
        set poolname "vwp-pool-1"
    next
end
```

**4. Verify the IP pool functions as expected and traffic passes through:**

```
# diagnose sniffer packet any icmp 4
interfaces=[any]
filters=[icmp]
23.438095 port4 in 172.16.200.11 -> 172.16.200.156: icmp: echo request
23.438126 port1 out 172.16.222.100 -> 172.16.200.156: icmp: echo request
23.438492 port1 in 172.16.200.156 -> 172.16.222.100: icmp: echo reply
23.438501 port4 out 172.16.200.156 -> 172.16.200.11: icmp: echo reply
24.439305 port4 in 172.16.200.11 -> 172.16.200.156: icmp: echo request
24.439319 port1 out 172.16.222.100 -> 172.16.200.156: icmp: echo request
24.439684 port1 in 172.16.200.156 -> 172.16.222.100: icmp: echo reply
24.439692 port4 out 172.16.200.156 -> 172.16.200.11: icmp: echo reply

8 packets received by filter
0 packets dropped by kernel
```

**To configure a SNAT between VWP interfaces when central NAT is enabled:**

**1. Enable central NAT:**

```
config system settings
    set central-nat enable
end
```

**2. Create the VWP interface:**

```
config system virtual-wire-pair
    edit "test-vw-1"
        set member "port1" "port4"
    next
end
```

**3. Create the IP pool. The IP pool must have a different subnet than the VWP peers.**

```
config firewall ippool
    edit "vwp-pool-1"
        set startip 172.16.222.99
        set endip 172.16.222.100
    next
end
```

**4. Configure the SNAT policy:**

```
config firewall central-snat-map
  edit 2
    set srcintf "port4"
    set dstintf "port1"
    set orig-addr "all"
    set dst-addr "all"
    set nat-ippool "vwp-pool-1"
  next
end
```

**5. Configure the firewall policy:**

```
config firewall policy
  edit 90
    set srcintf "port4"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
  next
end
```

## Destination NAT

The following topics provide instructions on configuring policies with destination NAT:

- [Static virtual IPs on page 1094](#)
- [Virtual IP with services on page 1097](#)
- [Virtual IPs with port forwarding on page 1099](#)
- [Virtual server load balance on page 1101](#)
- [Central DNAT on page 1109](#)
- [Configure FQDN-based VIPs on page 1113](#)
- [Remove overlap check for VIPs on page 1114](#)
- [VIP groups on page 1115](#)
- [HTTP2 connection coalescing and concurrent multiplexing for virtual server load balancing on page 1116](#)

### Static virtual IPs

Static Virtual IPs (VIP) are used to map external IP addresses to internal IP addresses. This is also called destination NAT, where a packet's destination is being NAT'd, or mapped, to a different address.


Static VIPs are commonly used to map public IP addresses to resources behind the FortiGate that use private IP addresses. A static one-to-one VIP is when the entire port range is mapped. A port forwarding VIP is when the mapping is configured on a specific port or port range.

Some of the VIP configuration options are:

Setting	Description
VIP Type	<ul style="list-style-type: none"> <li>IPv4 (<code>config firewall vip</code>) - The source and destination are both IPv4.</li> <li>IPv6 (<code>config firewall vip6</code>) - The source and destination are both IPv6.</li> </ul> <p><b>Note:</b> <i>IPv6</i> is only available when <i>IPv6</i> is enabled in the <i>Feature Visibility</i>.</p>
Interface ( <code>extintf</code> )	<p>The external interface that the firewall policy source interface must match. For example, if the external interface is <code>port1</code>, then the VIP can be used in a policy from <code>port1</code> to <code>port3</code>, but not in a policy from <code>port2</code> to <code>port3</code>.</p> <p>If the external interface is <i>any</i>, then the VIP can be used in any firewall policy.</p>
Type ( <code>type</code> )	<ul style="list-style-type: none"> <li>Static NAT - Use an external IP address or address range.</li> <li>FQDN - Use an external IP or FQDN address.</li> <li>load-balance (CLI only) - Load balance traffic.</li> <li>server-load-balance - Load balance traffic across multiple servers. SSL processing can be offloaded to the FortiGate. This type of VIP is configure from <i>Policy &amp; Objects &gt; Virtual Servers</i>.</li> <li>dns-translation (CLI only) - DNS translation.</li> <li>access-proxy - Used for ZTNA. See <a href="#">ZTNA HTTPS access proxy example on page 956</a> for details.</li> </ul>
External IP address/range ( <code>extip</code> )	<p>In a static NAT VIP, the external IP address is the IP address that the FortiGate listens for traffic on.</p> <p>When the external interface is not <i>any</i>, <code>0.0.0.0</code> can be used to make the external IP address equivalent to the external interface's IP address.</p> <p>The external IP address is also used to perform SNAT for the mapped server when the server outbound traffic with a destination interface that matches the external interface. The firewall policy must also have NAT enabled.</p>
IPv4 address/range ( <code>mappedip</code> )	The IPv4 address or range that the internal resource is being mapped to.
IPv6 address/range ( <code>ipv6-mappedip</code> )	The IPv6 address or range that the internal resource is being mapped to.
<code>srcintf-filter</code> (CLI only)	<p>Listen for traffic to the external IP address only on the specified interface. While the external interface restricts the policies where the VIP can be used, it does not restrict listening to only the external interface. To restrict listening to only a specific interface, <code>srcintf-filter</code> must be configured.</p>
<code>nat-source-vip</code> (CLI only)	<p>Force all of the traffic from the mapped server to perform SNAT with the external IP address, regardless of the destination interface.</p> <p>If <code>srcintf-filter</code> is defined, then <code>nat-source-vip</code> only forces SNAT to be performed when the destination matches the <code>srcintf-filter</code> interface.</p> <p>In both cases, the firewall policy must have NAT enabled.</p>
<code>arp-reply</code> (CLI only)	Enable/disable responding to ARP requests on the external IP address (default = enable).

Setting	Description
	When a VIP object is created with <code>arp-reply</code> enabled, the object does not need to be referenced in any policies before a FortiGate interface starts responding to ARP requests for the addresses in the VIP.
Source address ( <code>src-filter</code> )	Restrict the source IP address, address range, or subnet that is allowed to access the VIP.
Services ( <code>service</code> )	Set the services that are allowed to be mapped.
Port Forwarding ( <code>portforward</code> )	Enable port forwarding to specify the port ( <code>mappedport</code> ) to map to. If no services are configured, you can configure the protocol ( <code>protocol</code> ) to use when forwarding packets, the external service port range ( <code>extport</code> ) to be mapped to a port range on the destination network, and the mapped port range ( <code>mappedport</code> and <code>ipv6-mappedport</code> ) on the destination network.
Port Mapping Type	<ul style="list-style-type: none"> <li>One to one - Each external service port is mapped to one port. A range is allowed, but the number of ports should be the same.</li> <li>Many to Many - The port mapping can be one to one, one to many, or many to one. There are no restrictions on how many external ports must map to internal ports.</li> </ul>

### Sample configuration

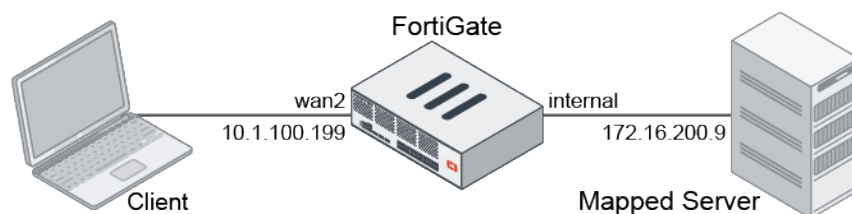

#### To create a virtual IP in the GUI:

1. In *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
2. Select a *VIP Type* based on the IP versions used.
3. Enter a unique name for the virtual IP.
4. Enter values for the external IP address/range and map to IPv4/IPv6 address/range fields.

5. Click OK.

### To create a virtual IP in the CLI:

```
config firewall vip
    edit "Internal_WebServer"
        set extip 10.1.100.199
        set extintf "any"
        set mappedip "172.16.200.55"
    next
end
```

### To apply a virtual IP to policy in the CLI:

```
config firewall policy
    edit 8
        set name "Example_Virtual_IP_in_Policy"
        set srcintf "wan2"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "Internal_WebServer"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

## Virtual IP with services

Virtual IP with services is a more flexible virtual IP mode. This mode allows users to define services to a single port number mapping.

This topic shows how to use virtual IP with services enabled. This example has one public external IP address. We map TCP ports 8080, 8081, and 8082 to an internal WebServer TCP port 80. This allows remote connections to communicate with a server behind the firewall.

## Sample configuration

### To create a virtual IP with services in the GUI:

1. In *Policy & Objects* > *Virtual IPs* and click *Create New* > *Virtual IP*.
2. Set *VIP Type* to *IPv4*.
3. Enter a unique name for the virtual IP and fill in the other fields.
4. Configure the fields in the *Network* section. For example:
  - Set *Interface* to *any*.
  - Set *External IP Address/Range* to *10.1.100.199*.
  - Set *Mapped IP Address/Range* to *172.16.200.55*.
5. Enable *Optional Filters* and then enable *Services*.
6. In the *Services* field click + to display the *Services* pane.
7. In the *Services* pane select *TCP\_8080*, *TCP\_8081*, and *TCP\_8082*.
8. Enable *Port Forwarding* and set *Map to IPv4 port* to *80*.

New Virtual IP

VIP type: **IPv4** IPv6

Name: WebServer\_VIP\_Services

Comments: Write a comment... 0/255

Color: Change

Network

Interface: any

Type: **Static NAT** FQDN

External IP address/range: 10.1.100.199-10.1.100.199

Map to

IPv4 address/range: 172.16.200.55 - 172.16.200.55

IPv6 address/range: Starting IPv6 address

☒ Optional Filters

Source address: ☒

Services: ☒

☒ Port Forwarding

Protocol: **TCP** UDP SCTP ICMP

Port Mapping Type: **One to one** Many to many

External service port: 1 to 65535

Map to IPv4 port: 1 to 65535

Map to IPv6 port: 1 to 65535

OK Cancel

9. Click **OK**.

### To see the results:

1. Apply the above virtual IP to the firewall policy.
2. The results are:
  - Access 10.1.100.199:8080 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
  - Access 10.1.100.199:8081 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
  - Access 10.1.100.199:8082 from external network and FortiGate maps to 172.16.200.55:80 in internal network.



**To create a virtual IP with services in the CLI:**

```
config firewall vip
  edit "WebServer_VIP_Services"
    set service "TCP_8080" "TCP_8081" "TCP_8082"
    set extip 10.1.100.199
    set extintf "any"
    set portforward enable
    set mappedip "172.16.200.55"
    set mappedport 80
  next
end
```

## Virtual IPs with port forwarding

If you need to hide the internal server port number or need to map several internal servers to the same public IP address, enable port-forwarding for Virtual IP.

This topic shows how to use virtual IPs to configure port forwarding on a FortiGate unit. This example has one public external IP address. We map TCP ports 8080, 8081, and 8082 to different internal WebServers' TCP port 80. This allows remote connections to communicate with a server behind the firewall.

## Sample configuration

**To create a virtual IP with port forwarding in the GUI:**

1. In *Policy & Objects > Virtual IPs*.
2. Click *Create New* and select *Virtual IP*.
3. For *VIP Type*, select *IPv4*.
4. Enter a unique name for the virtual IP and fill in the other fields.
5. Configure the fields in the *Network* section. For example:
  - Set *Interface* to *any*.
  - Set *External IP Address/Range* to *10.1.100.199*.
  - Set *Mapped IP Address/Range* to *172.16.200.55*.
6. Leave *Optional Filters* disabled.
7. Enable *Port Forwarding*.
8. Configure the fields in the *Port Forwarding* section. For example:
  - Set *Protocol* to *TCP*.
  - Set *External Service Port* to *8080*.
  - Set *Map to IPv4 port* to *80*.

9. Click **OK**.
10. Follow the above steps to create two additional virtual IPs.
  - a. For one virtual IP:
    - Use a different *Mapped IP Address/Range*, for example, *172.16.200.56*.
    - Set *External Service Port* to *8081*.
    - Use the same *Map to IPv4 port* number: *80*.
  - b. For the other virtual IP:
    - Use a different *Mapped IP Address/Range*, for example, *172.16.200.57*.
    - Set *External Service Port* to *8082*.
    - Use the same *Map to IPv4 port* number: *80*.
11. Create a *Virtual IP Group* and put the above three virtual IPs into that group.

### To see the results:

1. Apply the above virtual IP to the Firewall policy.
2. The results are:
  - Access 10.1.100.199:8080 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
  - Access 10.1.100.199:8081 from external network and FortiGate maps to 172.16.200.56:80 in internal network.
  - Access 10.1.100.199:8082 from external network and FortiGate maps to 172.16.200.57:80 in internal network

## Virtual server load balance

This topic shows a special virtual IP type: virtual server. Use this type of VIP to implement server load balancing.

The FortiOS server load balancing contains all the features of a server load balancing solution. You can balance traffic across multiple backend servers based on multiple load balancing schedules including:


- Static (failover)
- Round robin
- Weighted (to account for different sized servers or based on the health and performance of the server including round trip time and number of connections)

The load balancer supports HTTP, HTTPS, IMAPS, POP3S, SMTPS, SSL/TLS, and generic TCP/UDP and IP protocols. Session persistence is supported based on the SSL session ID based on an injected HTTP cookie, or based on the HTTP or HTTPS host. SSL/TLS load balancing includes protection from protocol downgrade attacks. Server load balancing is supported on most FortiGate devices and includes up to 10,000 virtual servers on high end systems.



FortiOS HTTP and HTTPS server load balancing does not support load balancing based on URL routing. You can use FortiWeb server pools or FortiADC server load balancing to load balance sessions to two or more URL based routes.

## Sample topology

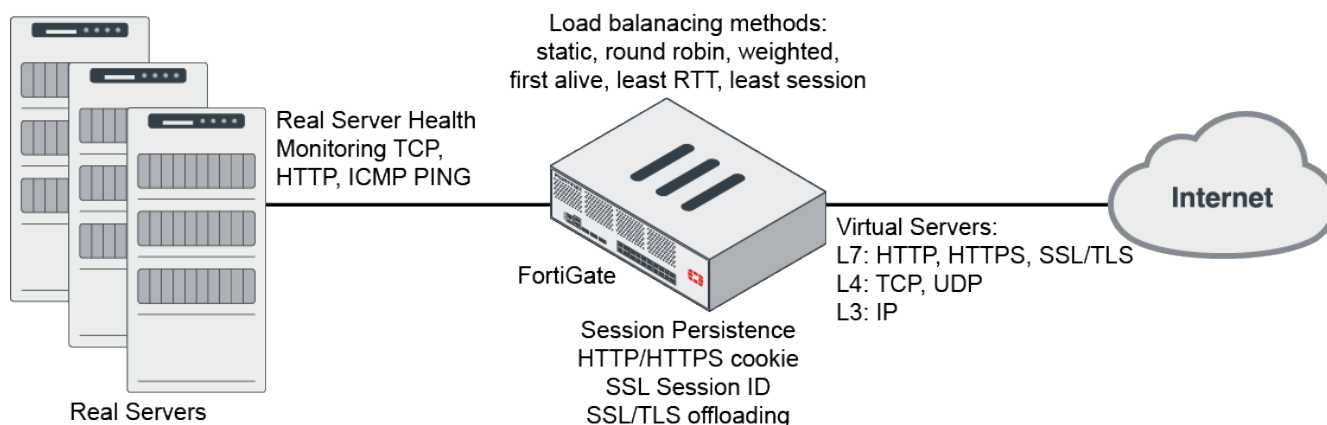

## SSL/TLS offloading

FortiGate SSL/TLS offloading is designed for the proliferation of SSL/TLS applications. The key exchange and encryption/decryption tasks are offloaded to the FortiGate unit where they are accelerated using FortiASIC technology which provides significantly more performance than a standard server or load balancer. This frees up valuable resources on the server farm to give better response to business operations. Server load balancing offloads most SSL/TLS versions including SSL 3.0, TLS 1.0, and TLS 1.2, and supports full mode or half mode SSL offloading with DH key sizes up to 4096 bits.

FortiGate SSL offloading allows the application payload to be inspected before it reaches your servers. This prevents intrusion attempts, blocks viruses, stops unwanted applications, and prevents data leakage. SSL/TLS content inspection supports TLS versions 1.0, 1.1, and 1.2 and SSL versions 1.0, 1.1, 1.2, and 3.0.

## Virtual server requirements

When creating a new virtual server, you must configure the following options:

- Virtual Server Type.
- Load Balancing Methods.
- Health check monitoring (optional).
- Session persistence (optional).
- Virtual Server IP (External IP Address).
- Virtual Server Port (External Port).
- Real Servers (Mapped IP Address & Port).

## Virtual server types

Select the protocol to be load balanced by the virtual server. If you select a general protocol such as IP, TCP, or UDP, the virtual server load balances all IP, TCP, or UDP sessions. If you select specific protocols such as HTTP, HTTPS, or SSL, you can apply additional server load balancing features such as *Persistence* and *HTTP Multiplexing*.

<b>HTTP</b>	Select <i>HTTP</i> to load balance only HTTP sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced (usually port 80 for HTTP sessions). You can enable <i>HTTP Multiplexing</i> . You can also set <i>Persistence</i> to <i>HTTP Cookie</i> to enable cookie-based persistence.
<b>HTTPS</b>	Select <i>HTTPS</i> to load balance only HTTPS sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced (usually port 443 for HTTPS sessions). You can enable <i>HTTP Multiplexing</i> . You can also set <i>Persistence</i> to <i>HTTP Cookie</i> to enable cookie-based persistence, or you can set <i>Persistence</i> to <i>SSL Session ID</i> .
<b>IMAPS</b>	Select <i>IMAPS</i> to load balance only IMAPS sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced (usually port 993 for IMAPS sessions). You can also set <i>Persistence</i> to <i>SSL Session ID</i> .
<b>POP3S</b>	Select <i>POP3S</i> to load balance only POP3S sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced (usually port 995 for POP3S sessions). You can also set <i>Persistence</i> to <i>SSL Session ID</i> .
<b>SMTPS</b>	Select <i>SMTPS</i> to load balance only SMTPS sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced (usually port 465 for SMTPS sessions). You can also set <i>Persistence</i> to <i>SSL Session ID</i> .
<b>SSL</b>	Select <i>SSL</i> to load balance only SSL sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced. You can also set <i>Persistence</i> to <i>SSL Session ID</i> .
<b>TCP</b>	Select <i>TCP</i> to load balance only TCP sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced.

<b>UDP</b>	Select <i>UDP</i> to load balance only UDP sessions with the destination port number that matches the <i>Virtual Server Port</i> setting. Change <i>Virtual Server Port</i> to match the destination port of the sessions to be load balanced.
<b>IP</b>	Select <i>IP</i> to load balance all sessions accepted by the security policy that contains this virtual server.

## Load balancing methods

The load balancing method defines how sessions are load balanced to real servers.

All load balancing methods do not send traffic to real servers that are down or not responding. FortiGate can only determine if a real server is not responding by using a health check monitor. You should always add at least one health check monitor to a virtual server or to real servers; otherwise load balancing might try to distribute sessions to real servers that are not functioning.

<b>Static</b>	The traffic load is statically spread evenly across all real servers. Sessions are not assigned according to how busy individual real servers are. This load balancing method provides some persistence because all sessions from the same source address always go to the same real server. Because the distribution is stateless, so if a real server is added, removed, or goes up or down, the distribution is changed and persistence might be lost.
<b>Round Robin</b>	Directs new requests to the next real server. This method treats all real servers as equals regardless of response time or the number of connections. This method does not direct requests to real servers that down or non responsive.
<b>Weighted</b>	Real servers with a higher weight value receive a larger percentage of connections. Set the real server weight when adding a real server.
<b>Least Session</b>	Directs requests to the real server that has the least number of current connections. This method works best in environments where the real servers or other equipment you are load balancing all have similar capabilities. This load balancing method uses the FortiGate session table to track the number of sessions being processed by each real server. The FortiGate unit cannot detect the number of sessions actually being processed by a real server.
<b>Least RTT</b>	Directs sessions to the real server with the lowest round trip time. The round trip time is determined by a ping health check monitor. The default is 0 if no ping health check monitors are added to the virtual server.
<b>First Alive</b>	Directs sessions to the first live real server. This load balancing schedule provides real server failover protection by sending all sessions to the first live real server. If a real server fails, all sessions are sent to the next live real server. Sessions are not distributed to all real servers so all sessions are processed by the first real server only.
<b>HTTP Host</b>	Load balances HTTP host connections across multiple real servers using the host's HTTP header to guide the connection to the correct real server.

## Health check monitoring

In the FortiGate GUI, you can configure health check monitoring so that the FortiGate unit can verify that real servers are able respond to network connection attempts. If a real server responds to connection attempts, the load balancer continues to send sessions to it. If a real server stops responding to connection attempts, the load balancer assumes that the server is down and does not send sessions to it. The health check monitor configuration determines how the

load balancer tests real servers. You can use a single health check monitor for multiple load balancing configurations. You can configure TCP, HTTP, DNS, and ping health check monitors. You usually set the health check monitor to use the same protocol as the traffic being load balanced to it. For example, for an HTTP load balancing configuration, you would normally use an HTTP health check monitor.

### **Session persistence**

Use persistence to ensure a user is connected to the same real server every time the user makes an HTTP, HTTPS, or SSL request that is part of the same user session. For example, if you are load balancing HTTP and HTTPS sessions to a collection of eCommerce web servers, when users make a purchase, they will be starting multiple sessions as they navigate the eCommerce site. In most cases, all the sessions started by this user during one eCommerce session should be processed by the same real server. Typically, the HTTP protocol keeps track of these related sessions using cookies. HTTP cookie persistence ensure all sessions that are part of the same user session are processed by the same real server.

When you configure persistence, the FortiGate unit load balances a new session to a real server according to the load balance method. If the session has an HTTP cookie or an SSL session ID, the FortiGate unit sends all subsequent sessions with the same HTTP cookie or SSL session ID to the same real server.

### **Real servers**


Add real servers to a load balancing virtual server to provide information the virtual server requires to send sessions to the server. A real server configuration includes the IP address of the real server and port number the real server receives sessions on. The FortiGate unit sends sessions to the real server's IP address using the destination port number in the real server configuration.

When configuring a real server, you can also specify the weight (if the load balance method is set to *Weighted*) and you can limit the maximum number of open connections between the FortiGate unit and the real server. If the maximum number of connections is reached for the real server, the FortiGate unit automatically switches all further connection requests to other real servers until the connection number drops below the limit. Setting *Maximum Connections* to 0 means that the FortiGate unit does not limit the number of connections to the real server.

### **Sample of HTTP load balancing to three real web servers**

This example describes the steps to configure the load balancing configuration below. In this configuration, a FortiGate unit is load balancing HTTP traffic from the Internet to three HTTP servers on the internal network. HTTP sessions are accepted at the wan1 interface with destination IP address 172.20.120.121 on TCP port 8080, and forwarded from the internal interface to the web servers. When forwarded, the destination address of the session is translated to the IP address of one of the web servers.

This load balancing configuration also includes session persistence using HTTP cookies, round-robin load balancing, and TCP health monitoring for the real servers. Ping health monitoring consists of the FortiGate unit using ICMP ping to ensure the web servers can respond to network traffic.

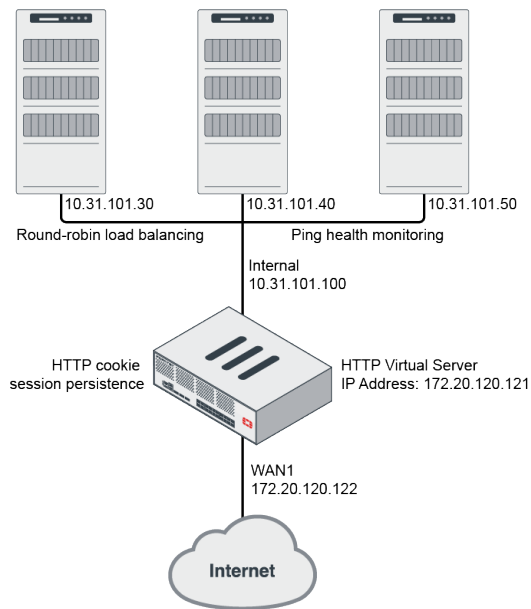

### General steps:

1. Create a health check monitor.  
A ping health check monitor causes the FortiGate to ping the real servers every 10 seconds. If one of the servers does not respond within 2 seconds, the FortiGate unit will retry the ping 3 times before assuming that the HTTP server is not responding.
2. Create a load balance virtual server with three real servers.
3. Add the load balancing virtual server to a policy as the destination address.




To see the virtual servers and health check monitors options in the GUI, *Load Balance* must be selected in *Feature Visibility > Additional Features*. See [Feature visibility on page 2515](#) on page 1 for details.

### Configure a load balancing virtual server in the GUI

#### To create a health check monitor:

1. Go to *Policy & Objects > Health Check*.
2. Click *Create New*.
3. Set the following:
  - *Name* to *Ping-mon-1*
  - *Type* to *Ping*
  - *Interval* to *10 seconds*
  - *Timeout* to *2 seconds*
  - *Retry* to *3 attempt(s)*

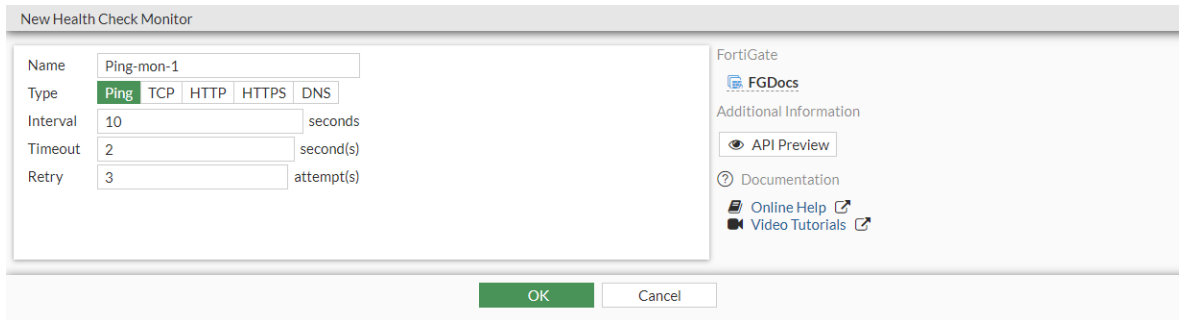

**New Health Check Monitor**

Name:

Type: **Ping** TCP HTTP HTTPS DNS

Interval:  seconds

Timeout:  second(s)

Retry:  attempt(s)

FortiGate

FGDocs

Additional Information

[API Preview](#)

[Documentation](#)


[Online Help](#) [Video Tutorials](#)

**OK** **Cancel**

4. Click **OK**.

### To create a virtual server:

1. Go to *Policy & Objects > Virtual Servers*.
2. Click *Create New*.
3. Set the following:
  - *Name* to *Vserver-HTTP-1*
  - *Type* to *HTTP*
  - *Interface* to *wan1*
  - *Virtual Server IP* to *172.20.120.121*
  - *Virtual Server Port* to *8080*
  - *Load Balance Method* to *Round Robin*
  - *Persistence* to *HTTP Cookie*
  - *Health Check* to *Ping-mon-1*

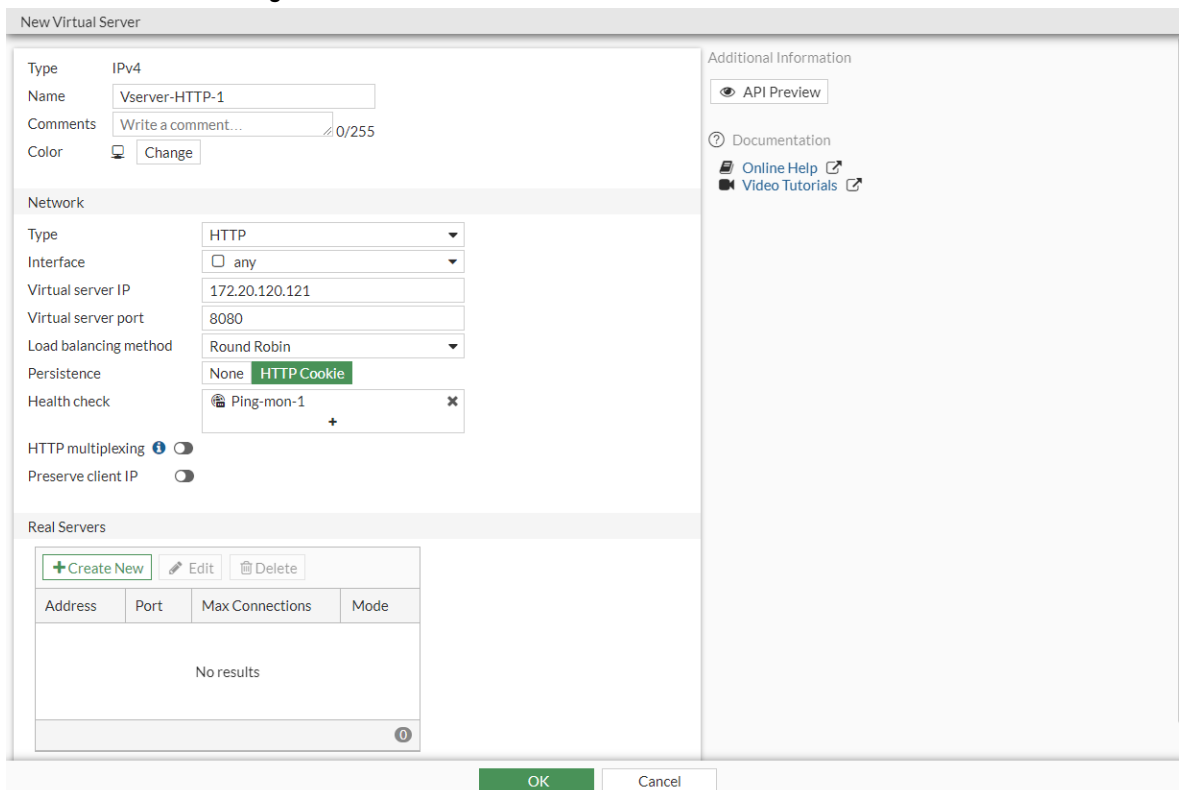

**New Virtual Server**

Type: IPv4

Name:

Comments:  0/255

Color: [Change](#)

**Network**

Type: HTTP

Interface: ☐ any

Virtual server IP:

Virtual server port:

Load balancing method: Round Robin

Persistence: None **HTTP Cookie**

Health check:  [+](#) [×](#)

HTTP multiplexing: ☒

Preserve client IP: ☐

**Real Servers**

[+ Create New](#) [Edit](#) [Delete](#)

Address	Port	Max Connections	Mode
No results			


**OK** **Cancel**



4. In the *Real Servers* table, click *Create New*.

5. Set the following for the first real server:

- *Type* to *IP*
- *IP Address* to *10.31.101.30*
- *Port* to *80*
- *Max Connections* to *0*
- *Mode* to *Active*

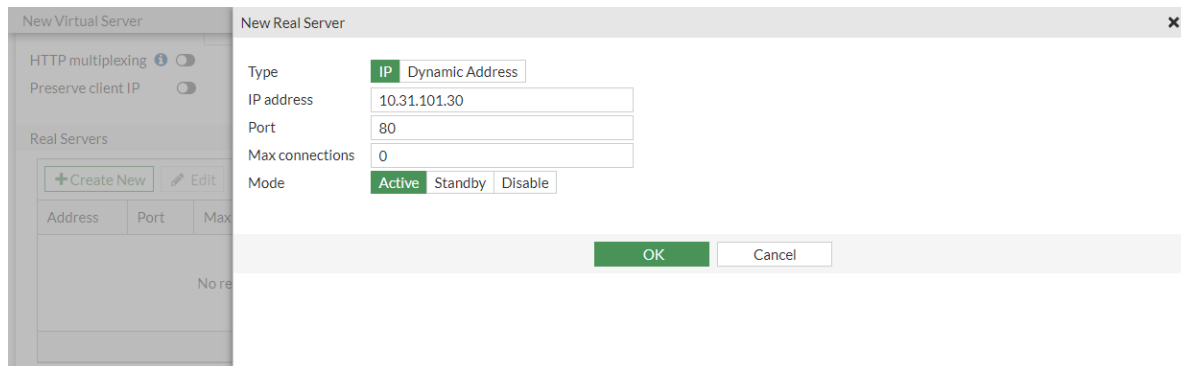

6. Click *OK*. Configure two more real servers with IP addresses 10.31.101.40 and 10.31.101.50, and the same settings as the first real server.

7. Click *OK*.

**To create a security policy that includes the load balance virtual server as the destination address:**

1. Go to *Policy & Objects > Firewall Policy*.

2. Click *Create New*.

3. Set the *Inspection Mode* to *Proxy-based*. The new virtual server will not be available if the inspection mode is *Flow-based*.

4. Set the following:

- *Name* to *LB-policy*
- *Incoming Interface* to *wan1*
- *Outgoing Interface* to *internal*
- *Source* to *all*
- *Destination* to *Vserver-HTTP-1*
- *Schedule* to *always*
- *Service* to *ALL*
- *Action* to *ACCEPT*

5. Enable *NAT* and set *IP Pool Configuration* to *Use Outgoing Interface Address*.

## 6. Enable *AntiVirus* and select an antivirus profile.

The screenshot shows the 'New Policy' configuration window in FortiGate. The 'Incoming Interface' is set to 'wan1', 'Outgoing Interface' is 'internal', and 'Source' is 'all'. The 'Destination' is 'Vserver-HTTP-1'. The 'Service' is 'ALL'. The 'Action' is 'ACCEPT'. The 'Inspection Mode' is 'Proxy-based'. The 'Security Profiles' section shows 'AntiVirus' is enabled with the 'AV default' profile selected. The 'Firewall / Network Options' section shows 'NAT' is enabled with 'NAT46' selected. The 'IP Pool Configuration' is 'Use Outgoing Interface Address'. The 'Protocol Options' are 'default'. The 'Additional Information' panel on the right shows 'API Preview' and 'Documentation' links.

## 7. Click OK.

## Configure a load balancing virtual server in the CLI

### To configure HTTP load balancing to three real web servers in the CLI:

#### 1. Create a health check monitor:

```
config firewall ldb-monitor
    edit "Ping-mon-1"
        set type ping
        set interval 10
        set timeout 2
        set retry 3
    next
end
```

#### 2. Create a virtual server:

```
config firewall vip
    edit "Vserver-HTTP-1"
        set type server-load-balance
        set extip 172.20.120.121
        set extintf "any"
        set server-type http
        set monitor "Ping-mon-1"
        set ldb-method round-robin
        set persistence http-cookie
```

```
set extport 8080
config realservers
  edit 1
    set type ip
    set ip 10.31.101.30
    set port 80
  next
  edit 2
    set type ip
    set ip 10.31.101.40
    set port 80
  next
  edit 3
    set type ip
    set ip 10.31.101.50
    set port 80
  next
end
next
end
```

**3. Add the load balancing virtual server to a policy as the destination address:**

```
config firewall policy
  edit 2
    set name "LB-policy"
    set inspection-mode proxy
    set srcintf "wan1"
    set dstintf "internal"
    set srcaddr "all"
    set dstaddr "Vserver-HTTP-1"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set av-profile "default"
    set fsso disable
    set nat enable
  next
end
```

## Results

Traffic accessing 172.20.120.121:8080 is forwarded in turn to the three real servers.

If the access request has an http-cookie, FortiGate forwards the access to the corresponding real server according to the cookie.

## Central DNAT

Central NAT allows for the central configuration of SNAT (source NAT) and DNAT (destination NAT).

**To enable central NAT in the GUI:**

1. Go to *System > Settings*.
2. In the *System Operation Settings*, enable *Central SNAT*.
3. Click *Apply*.

**To enable central NAT in the CLI:**

```
config system settings
    set central-nat {enable | disable}
end
```

When central NAT is enabled, virtual IPs (VIPs) are not configured in the firewall policy. The VIPs are configured as separate objects where their status must be enabled.



This option is only available for IPv4 VIP and VIP46 objects.

---

Configuring a DNAT and VIP object in central NAT mode is similar to configuring a VIP when central NAT is disabled. See [Static virtual IPs on page 1094](#) for more information on each setting.

VIP objects can carry over when switching from non-central NAT mode to central NAT mode or vice-versa. However, if a VIP is assigned to a firewall policy in non-central NAT mode, it must be unassigned before switching to central NAT mode.

In this example, a DNAT and VIP are configured to forward traffic from 10.1.100.130 to 172.16.200.44. This example assumes that the firewall address, Addr\_172.16.200.44/32, has already been configured.

**To configure DNAT and a VIP in the GUI:**

1. Configure the VIP:
  - a. Go to *Policy & Objects > DNAT & Virtual IPs* and click *Create New > DNAT & Virtual IP*.
  - b. Enter a name (*test-vip44-1*).
  - c. Set the *External IP address/range* to *10.1.100.130*.
  - d. Set the *Map to IPv4 address/range* to *172.16.200.44*.

New DNAT & Virtual IP

DNAT & VIP type IPv4 DNAT

Name test-vip44-1

Comments Write a comment... 0/255

Color Change

Status ☒

Network

Interface any

Type Static NAT FQDN

Source interface filter ☐

External IP address/range 10.1.100.130

Map to

IPv4 address/range 172.16.200.44

☐ Optional Filters

☐ Port Forwarding

FortiGate

[FGDocs](#)

Statistics (since last reset)

ID	Last used	First used	Hit count
	N/A	N/A	0

Clear Counters

Additional Information

API Preview

Documentation

[Online Help](#)

[Video Tutorials](#)

OK Cancel

e. Click OK.

2. Configure a firewall policy that allows traffic in the direction of the VIP:

a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.

b. Configure the following settings:

<b>Name</b>	<i>VIP-port2toport3</i>
<b>Source</b>	<i>all</i>
<b>Destination</b>	<i>Addr_172.16.200.40</i>
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>ALL</i>
<b>Action</b>	<i>ACCEPT</i>

c. Configure the other settings as needed. There is no SNAT configuration section, so central SNAT policies will be applied.

d. Click OK.

## To configure DNAT and a VIP in the CLI:

### 1. Configure the VIP:

```
config firewall vip
  edit "test-vip44-1"
    set extip 10.1.100.130
    set mappedip "172.16.200.44"
    set extintf "any"
    set status enable
  next
end
```

### 2. Configure a firewall policy that allows traffic in the direction of the VIP:

```
config firewall policy
  edit 3
    set name "VIP-port2toport3"
    set srcintf "port2"
    set dstintf "port3"
    set action accept
    set srcaddr "all"
    set dstaddr "Addr_172.16.200.40"
    set schedule "always"
    set service "ALL"
  next
end
```

## To verify the DNAT and VIP:

If the VIP status is enabled, it will appear in the VIP table:

```
# diagnose firewall iprope list 100000
policy index=7 uuid_idx=625 action=accept
flag (8000104): f_p nat pol_stats
cos_fwd=0 cos_rev=0
group=00100000 av=00000000 au=00000000 split=00000000
host=0 chk_client_info=0x0 app_list=0 ips_view=0
misc=0
zone(1): 0 -> zone(1): 0
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
dest(1): 10.1.100.130-10.1.100.130, uuid_idx=625,
service(1):
    [0:0x0:0/(0,0)->(0,0)] helper:auto
nat(1): flag=0 base=10.1.100.130:0 172.16.200.44-172.16.200.44(0:0)
```

If the VIP status is disabled, it will not appear in the VIP table.

In this example, a one-to-one static NAT is enabled. Send a ping to 10.1.100.130, and the traffic will be forwarded to the destination 172.16.200.44.

## Configure FQDN-based VIPs

In public cloud environments, sometimes it is necessary to map a VIP to an FQDN address.

### To configure an FQDN-based VIP in the GUI:

1. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
2. Enter a name for the VIP.
3. Select an interface.
4. For *Type*, select *FQDN*.
5. For *External*, select *IP* and enter the external IP address.
6. For *Mapped address*, select an FQDN address.

The screenshot shows the 'New Virtual IP' configuration window in the FortiGate GUI. The configuration is as follows:

- VIP type:** IPv4 (selected)
- Name:** FQDN-vip-1
- Comments:** Write a comment... (0/255)
- Color:** Change
- Network:**
  - Interface:** any
  - Type:** Static NAT (selected), FQDN (selected)
  - External:** IP (selected), FQDN (selected)
  - External Address:** 10.2.2.199
  - Mapped address:** destination
- Optional Filters:** Disabled
- Port Forwarding:** Disabled

The 'OK' button is highlighted in green, and the 'Cancel' button is in grey.

7. Click **OK**.  
In the virtual IP list, hover over the address to view more information.

<div> <div>Create New</div> <div>Edit</div> <div>Clone</div> <div>Delete</div> <div>Search</div> </div>				
Name	Details	Interfaces	Services	Ref.
IPv4 Virtual IP 1				
FQDN-vip-1	10.2.2.199 → destination	any		0
<div> <div>Address</div> <div>Type</div> <div>FQDN</div> <div>Interface</div> <div>Resolved To</div> <div>References</div> <div>Edit</div> </div> <div> <div>destination</div> <div>FQDN</div> <div>pc4.qa.fortinet.com</div> <div>any</div> <div>172.16.200.44</div> <div>1</div> </div>				

### To configure an FQDN-based VIP in the CLI:

```
config firewall vip
  edit "FQDN-vip-1"
    set type fqdn
    set extip 10.2.2.199
    set extintf "any"
    set mapped-addr "destination"
  next
end
```

### Remove overlap check for VIPs

There is no overlap check for VIPs, so there are no constraints when configuring multiple VIPs with the same external interface and IP. A new security rating report alerts users of any VIP overlaps.

### To configure two VIPs with the same external interface and IP:

```
config firewall vip
  edit "test-vip44-1"
    set extip 10.1.100.154
    set mappedip "172.16.200.156"
    set extintf "port24"
  next
  edit "test-vip44-1_clone"
    set extip 10.1.100.154
    set mappedip "172.16.200.156"
    set extintf "port24"
    set src-filter 10.1.100.11
  next
end
```




No error message appears regarding the overlapping VIPs.



### To view the security rating report:

1. Go to *Security Fabric > Security Rating* and click the *Optimization* scorecard.
2. Expand the *Failed* section. The *Virtual IP Overlap* results show an overlap (*test-vip44-1* and *test-vip44-1\_clone*) on the root FortiGate.

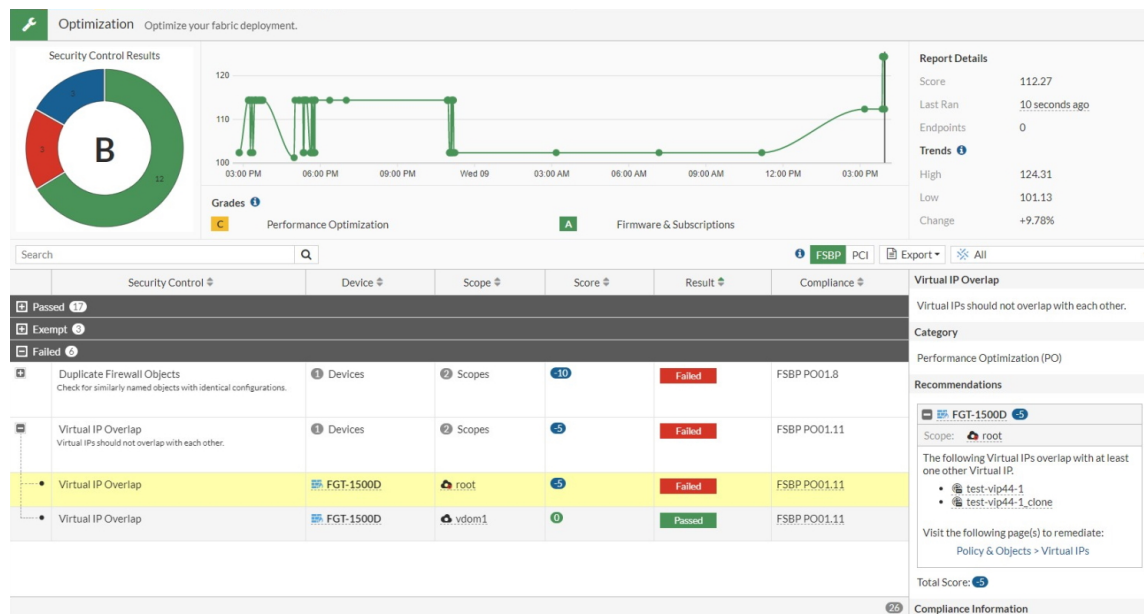

## VIP groups

Virtual IP addresses (VIPs) can be organized into groups. This is useful in scenarios where there are multiple VIPs that are used together in firewall policies. If the VIP group members change, or a group member's settings change (such as the IP address, port, or port mapping type), then those changes are automatically updated in the corresponding firewall policies.

The following table summarizes which VIP types are allowed and not allowed to be members of a VIP group:

Group type	VIP types allowed as members	VIP types not allowed as members
IPv4	<ul style="list-style-type: none"> <li>Static NAT</li> <li>Load balance</li> <li>DNS translation</li> <li>FQDN</li> </ul>	<ul style="list-style-type: none"> <li>Access proxy</li> <li>Server load balance</li> </ul>
IPv6	<ul style="list-style-type: none"> <li>Static NAT</li> </ul>	<ul style="list-style-type: none"> <li>Access proxy</li> <li>Server load balance</li> </ul>

Different VIP types can be added to the same group.

### To configure a VIP group in the GUI:

1. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP Group*.
2. Set the *Type* to *IPv4* or *IPv6*.
3. Enter a name.

4. Optionally, enter additional information in the *Comments* field.
5. For IPv4 groups, select the *Interface*. Select a specific interface if all of the VIPs are on the same interface; otherwise, select *any*.
6. Click the + in the *Members* field and select the members to add to the group.
7. Click *OK*.

#### To configure an IPv4 VIP group in the CLI:

```
config firewall vipgrp
  edit <name>
    set interface <name>
    set member <vip1> <vip2> ...
  next
end
```

#### To configure an IPv6 VIP group in the CLI:

```
config firewall vipgrp6
  edit <name>
    set member <vip1> <vip2> ...
  next
end
```

## HTTP2 connection coalescing and concurrent multiplexing for virtual server load balancing

HTTP2 connection coalescing and concurrent multiplexing allows multiple HTTP2 requests to share the same TLS connection when the destination IP is the same.

#### To configure the load balanced virtual server:

```
config firewall vip
  edit <name>
    set type server-load-balance
    set server-type {http | https}
    set http-multiplex {enable | disable}
    set http-multiplex-ttl <integer>
    set http-multiplex-max-request <integer>
    set http-supported-max-version {http1 | http2}
  next
end
```

http-multiplex {enable   disable}	Enable/disable HTTP multiplexing.
http-multiplex-ttl <integer>	Set the time-to-live for idle connections to servers (in seconds, 0 - 2147483647, default = 15).
http-multiplex-max-request <integer>	Set the maximum number of requests that the multiplex server can handle before disconnecting (0 - 2147483647, default = 0).


```
http-supported-max-
  version {http1 |
    http2}
```

Set the maximum supported HTTP version:

- http1: support HTTP 1.1 and HTTP1.
- http2: support HTTP2, HTTP 1.1, and HTTP1 (default).

## Example

In this example, multiple clients submit requests in HTTP2. The requests hit the VIP address, and then FortiGate opens a session between itself (172.16.200.6) and the server (172.16.200.99). The coalescing occurs in this session as the multiple streams share the same TLS session to connect to the same destination server.

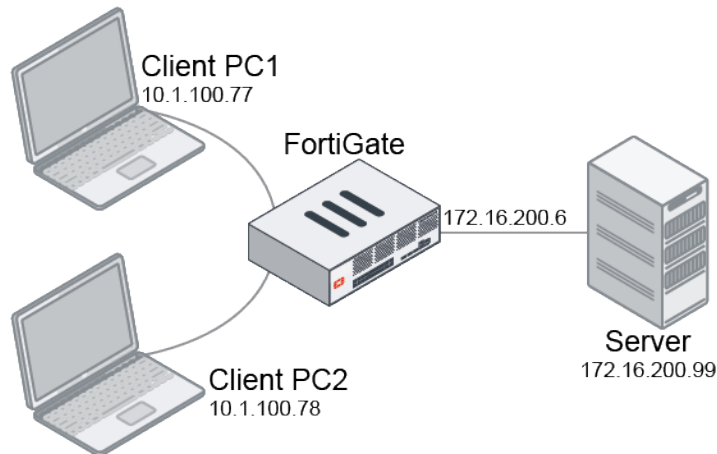

**To configure connection coalescing and concurrent multiplexing with virtual server load balancing:**

### 1. Configure the virtual server:

```
config firewall vip
  edit "vip-test"
    set type server-load-balance
    set extip 10.1.100.222
    set extintf "port2"
    set server-type https
    set extport 443
    config realservers
      edit 1
        set ip 172.16.200.99
        set port 443
      next
    end
    set http-multiplex enable
    set ssl-mode full
    set ssl-certificate "Fortinet_SSL"
  next
end
```

### 2. Configure the firewall policy:

```
config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port3"
```

```

set action accept
set srcaddr "all"
set dstaddr "vip-test"
set schedule "always"
set service "ALL"
set utm-status enable
set inspection-mode proxy
set ssl-ssh-profile "deep-inspection-clone"
set av-profile "av"
set logtraffic all
set nat enable

next
end

```

3. Get the clients to access the VIP address (10.1.100.222). The FortiGate shares the first TLS connection with second TLS connection.
4. Verify the sniffer packet capture on the FortiGate server side. There is one client hello.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	172.16.200.6	172.16.200.99	TCP	74	7688 → 443 [SYN] Seq=0 Win=65535 Len=0 MSS=1460 SACK_PERM=1 TSval=806055 TSecr=0 WS=4096
2	0.000115	172.16.200.99	172.16.200.6	TCP	74	443 → 7688 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=834657448 TSecr=806055 WS=128
3	0.000127	172.16.200.6	172.16.200.99	TCP	66	7688 → 443 [ACK] Seq=1 Ack=1 Win=176128 Len=0 TSval=806055 TSecr=834657448
4	0.000162	172.16.200.6	172.16.200.99	TLSv1.2	344	Client Hello
5	0.000262	172.16.200.99	172.16.200.6	TCP	66	443 → 7688 [ACK] Seq=1 Ack=279 Win=64896 Len=0 TSval=834657448 TSecr=806055
6	0.006877	172.16.200.99	172.16.200.6	TLSv1.2	1514	Server Hello
7	0.006882	172.16.200.6	172.16.200.99	TCP	66	7688 → 443 [ACK] Seq=279 Ack=1449 Win=176128 Len=0 TSval=806055 TSecr=834657455
8	0.006883	172.16.200.99	172.16.200.6	TLSv1.2	825	Certificate, Server Key Exchange, Server Hello Done
9	0.006890	172.16.200.6	172.16.200.99	TCP	66	7688 → 443 [ACK] Seq=279 Ack=2208 Win=176128 Len=0 TSval=806055 TSecr=834657455
10	0.017158	172.16.200.6	172.16.200.99	TLSv1.2	215	Client Key Exchange, Change Cipher Spec
11	0.017171	172.16.200.6	172.16.200.99	TLSv1.2	111	Encrypted Handshake Message
12	0.017266	172.16.200.99	172.16.200.6	TCP	66	443 → 7688 [ACK] Seq=2208 Ack=473 Win=64768 Len=0 TSval=834657465 TSecr=806056
13	0.017686	172.16.200.99	172.16.200.6	TLSv1.2	117	Change Cipher Spec, Encrypted Handshake Message
14	0.017773	172.16.200.99	172.16.200.6	TLSv1.2	123	Application Data
15	0.022590	172.16.200.6	172.16.200.99	TCP	66	7688 → 443 [ACK] Seq=473 Ack=2316 Win=176128 Len=0 TSval=806057 TSecr=834657466
16	0.022582	172.16.200.6	172.16.200.99	TLSv1.2	177	Application Data
17	0.022590	172.16.200.6	172.16.200.99	TLSv1.2	145	Application Data
18	0.022686	172.16.200.99	172.16.200.6	TCP	66	443 → 7688 [ACK] Seq=2316 Ack=663 Win=64640 Len=0 TSval=834657471 TSecr=806057
19	0.022935	172.16.200.99	172.16.200.6	TLSv1.2	122	Application Data
20	0.022987	172.16.200.99	172.16.200.6	TLSv1.2	268	Application Data
21	0.022993	172.16.200.6	172.16.200.99	TCP	66	7688 → 443 [ACK] Seq=663 Ack=2566 Win=176128 Len=0 TSval=806057 TSecr=834657471
22	0.023285	172.16.200.6	172.16.200.99	TLSv1.2	108	Application Data
23	0.065172	172.16.200.99	172.16.200.6	TCP	66	443 → 7688 [ACK] Seq=2566 Ack=705 Win=64640 Len=0 TSval=834657513 TSecr=806057

5. Disable HTTP multiplexing:

```

config firewall vip
edit "vip-test"
config realservers
edit 1
set type ip
set ip 172.16.200.99
set port 443
next
end
set http-multiplex disable
next
end

```

6. Verify the sniffer packet capture. This time, the FortiGate does reuse the TLS connection, so there are two client hellos sent to the real server.

No.	Time	Source	Destination	Protocol	Length	Info
28	2.569066	172.16.200.99	172.16.200.6	TLSv1.3	339	Application Data
29	2.569218	172.16.200.99	172.16.200.6	TLSv1.3	364	Application Data
31	2.569816	172.16.200.6	172.16.200.99	TLSv1.3	92	Application Data
33	2.569938	172.16.200.99	172.16.200.6	TLSv1.3	92	Application Data
10	0.006286	172.16.200.6	172.16.200.99	TLSv1.3	225	Application Data, Application Data
27	2.568901	172.16.200.6	172.16.200.99	TLSv1.3	225	Application Data, Application Data
8	0.006006	172.16.200.99	172.16.200.6	TLSv1.3	799	Application Data, Application Data, Application Data
4	0.000139	172.16.200.6	172.16.200.99	TLSv1.3	458	Client Hello
23	2.568209	172.16.200.6	172.16.200.99	TLSv1.3	729	Client Hello
6	0.006000	172.16.200.99	172.16.200.6	TLSv1.3	1516	Server Hello, Change Cipher Spec, Application Data
25	2.568715	172.16.200.99	172.16.200.6	TLSv1.3	308	Server Hello, Change Cipher Spec, Application Data, Application Data

## Examples and policy actions

The following topics provide examples and instructions on policy actions:

- [NAT46 and NAT64 policy and routing configurations on page 1119](#)
- [Mirroring SSL traffic in policies on page 1130](#)
- [Recognize anycast addresses in geo-IP blocking on page 1132](#)
- [Matching GeoIP by registered and physical location on page 1133](#)
- [HTTP to HTTPS redirect for load balancing on page 1135](#)
- [Use Active Directory objects directly in policies on page 1136](#)
- [No session timeout on page 1140](#)
- [MAP-E support on page 1141](#)
- [Seven-day rolling counter for policy hit counters on page 1145](#)
- [Cisco Security Group Tag as policy matching criteria on page 1147](#)
- [Virtual patching on the local-in management interface on page 1149](#)

## NAT46 and NAT64 policy and routing configurations

Multiple NAT46 and NAT64 related objects are consolidated into regular objects. A per-VDOM virtual interface, `naf.<vdom>`, is automatically added to process NAT46/NAT64 traffic. The features include:

- `vip46` and `vip64` settings are consolidated in `vip` and `vip6` configurations.
- `policy46` and `policy64` settings are consolidated in `firewall policy` settings.
- `nat46/nat64` are included in `firewall policy` settings.
- `ippool` and `ippool6` support NAT46 and NAT64 (when enabled, the IP pool should match a subnet).
- Central SNAT supports NAT46 and NAT64.
- `add-nat46-route` in `ippool6` and `add-nat64-route` in `ippool` are enabled by default. The FortiGate generates a static route that matches the IP range in `ippool6` or `ippool` for the `naf` tunnel interface.



Automatic processing of the `naf` tunnel interface is not supported in security policies.

---

To configure NAT46/NAT64 translation, use the standard `vip/vip6` setting, apply it in a firewall policy, enable NAT46/NAT64, and enter the IP pool to complete the configuration.



The external IP address cannot be the same as the external interface IP address.

---


## Examples

IPv6 must be enabled to configure these examples. In the GUI, so go to *System > Feature Visibility* and enable *IPv6*. In the CLI, enter the following:

```
config system global
    set gui-ipv6 enable
end
```

## NAT46 policy

In this example, a client PC is using IPv4 and an IPv4 VIP to access a server that is using IPv6. The FortiGate uses NAT46 to translate the request from IPv4 to IPv6 using the virtual interface `nafe.root`. An `ippool6` is applied so that the request is SNATed to the `ippool6` address (2000:172:16:101::1 - 2000:172:16:101::1).

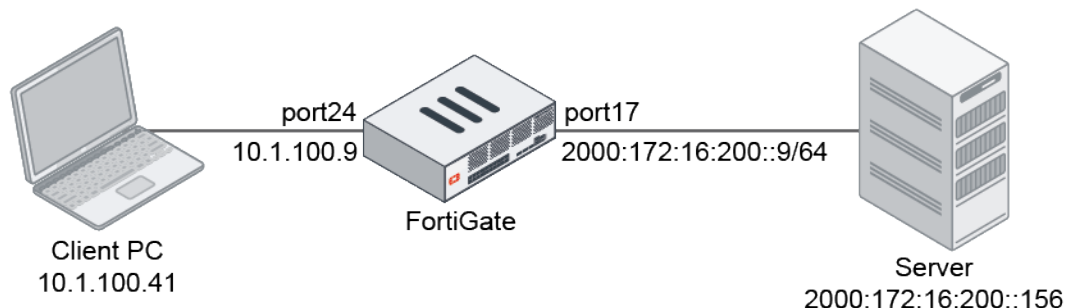

### To create a NAT46 policy in the GUI:

1. Configure the VIP:
  - a. Go to *Policy & Objects > Virtual IPs* and click *Create New > VIP*.
  - b. Enter the following:

<b>VIP type</b>	IPv4
<b>Name</b>	test-vip46-1
<b>Interface</b>	To_vlan20
<b>Type</b>	Static NAT
<b>External IP address/range</b>	10.1.100.150
<b>Map to IPv6 address/range</b>	2000:172:16:200::156

- c. Click **OK**.

2. Configure the IPv6 pool:
  - a. Go to *Policy & Objects > IP Pools* and click *Create New*.
  - b. Enter the following:

<b>IP Pool Type</b>	IPv6 Pool
<b>Name</b>	test-ippool6-1
<b>External IP address/range</b>	2000:172:16:101::1-2000:172:16:101::1
<b>NAT46</b>	Enable

New Dynamic IP Pool

IP Pool Type

IPv4 Pool IPv6 Pool

Name

test-ippool6-1

Comments

Write a comment...

External IP Address/range

2000:172:16:101::1-2000:172:16:101::1 0/255

NAT46

☒

FortiGate

FGT-1500D

Additional Information

API Preview

Documentation

Online Help Video Tutorials

OK

Cancel

- c. Click *OK*.
3. Configure the firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New* or edit an existing policy.
  - b. Enter the following:

<b>Name</b>	policy46-1
<b>Incoming Interface</b>	To_vlan20
<b>Outgoing Interface</b>	To_vlan30
<b>Source</b>	all
<b>Destination</b>	test-vip46-1
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	NAT46
<b>IP Pool Configuration</b>	test-ippool6-1

## c. Configure the other settings as needed.

**Edit Policy**

ID: 2  
 Name: policy46-1  
 ZTNA: ☐  
 Incoming Interface: To\_vlan20 (port24)  
 Outgoing Interface: To\_vlan30 (port17)  
 Source: all  
 Negate Source: ☐  
 Destination: test-vip46-1  
 Negate Destination: ☐  
 Schedule: always  
 Service: ALL  
 Action: ☒ ACCEPT ☐ DENY ☐ IPsec  
 Inspection Mode: **Flow-based** Proxy-based

**Firewall / Network Options**  
 NAT: ☒ NAT **NAT46** NAT64  
 IP Pool Configuration: test-ippool6-1  
 Preserve Source Port: ☐  
 Protocol Options: **PROT** default  
 Disclaimer Options  
 Display Disclaimer: ☐

**Statistics (since last reset)**

ID	2
Last used	7 hour(s) ago
First used	10 day(s) ago
Active sessions	0
Hit count	199
Total bytes	39.62 MB
Current bandwidth	0 B/s

Clear Counters

Last 7 Days Bytes IPv4 + IPv6

20 MB  
15 MB  
10 MB  
5 MB  
0 B

Jun 07 Jun 08 Jun 09 Jun 10 Jun 11 Jun 12 Jun 13 Jun 14

Additional Information  
 API Preview  
 Edit in CLI  
 Documentation  
 Online Help

OK Cancel

## d. Click OK.

## To create a NAT46 policy in the CLI:

## 1. Configure the VIP:

```
config firewall vip
  edit "test-vip46-1"
    set extip 10.1.100.150
    set nat44 disable
    set nat46 enable
    set extintf "port24"
    set arp-reply enable
    set ipv6-mappedip 2000:172:16:200::156
  next
end
```

## 2. Configure the IPv6 pool:

```
config firewall ippool6
  edit "test-ippool6-1"
    set startip 2000:172:16:101::1
    set endip 2000:172:16:101::1
    set nat46 enable
    set add-nat46-route enable
  next
end
```

## 3. Configure the firewall policy:

```
config firewall policy
  edit 2
    set name "policy46-1"
    set srcintf "port24"
```



```

        set dstintf "port17"
        set action accept
        set nat46 enable
        set srcaddr "all"
        set dstaddr "test-vip46-1"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set ippool enable
        set poolname6 "test-ippool6-1"
    next
end

```

## To verify the traffic and session tables:

### 1. Verify the traffic by the sniffer packets:

```

(root) # diagnose sniffer packet any 'icmp or icmp6' 4
interfaces=[any]
filters=[icmp or icmp6]
2.593302 port24 in 10.1.100.41 -> 10.1.100.150: icmp: echo request
2.593344 naf.root out 10.1.100.41 -> 10.1.100.150: icmp: echo request
2.593347 naf.root in 2000:172:16:101::1 -> 2000:172:16:200::156: icmp6: echo request seq
1
2.593383 port17 out 2000:172:16:101::1 -> 2000:172:16:200::156: icmp6: echo request seq
1
2.593772 port17 in 2000:172:16:200::156 -> 2000:172:16:101::1: icmp6: echo reply seq 1
2.593788 naf.root out 2000:172:16:200::156 -> 2000:172:16:101::1: icmp6: echo reply seq
1
2.593790 naf.root in 10.1.100.150 -> 10.1.100.41: icmp: echo reply
2.593804 port24 out 10.1.100.150 -> 10.1.100.41: icmp: echo reply
11 packets received by filter
0 packets dropped by kernel

```

### 2. Verify the session tables for IPv4 and IPv6:

```

(root) # diagnose sys session list
session info: proto=1 proto_state=00 duration=2 expire=59 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty f00 netflow-origin netflow-reply
statistic(bytes/packets/allow_err): org=252/3/1 reply=252/3/1 tuples=2
tx speed(Bps/kbps): 106/0 rx speed(Bps/kbps): 106/0
orgin->sink: org pre->post, reply pre->post dev=24->53/53->24
gwy=10.1.100.150/10.1.100.41
hook=pre dir=org act=noop 10.1.100.41:29388->10.1.100.150:8(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.150:29388->10.1.100.41:0(0.0.0.0:0)
peer=2000:172:16:101::1:29388->2000:172:16:200::156:128 naf=1
hook=pre dir=org act=noop 2000:172:16:101::1:29388->2000:172:16:200::156:128(:::0)
hook=post dir=reply act=noop 2000:172:16:200::156:29388->2000:172:16:101::1:129(:::0)
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0

```

```

serial=00012b77 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
total session 1

(root) # diagnose sys session6 list
session6 info: proto=58 proto_state=00 duration=5 expire=56 timeout=0 flags=00000000
sockport=0 socktype=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=log may_dirty
statistic(bytes/packets/allow_err): org=312/3/0 reply=312/3/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=53->17/17->53
hook=pre dir=org act=noop 2000:172:16:101::1:29388->2000:172:16:200::156:128(:::0)
hook=post dir=reply act=noop 2000:172:16:200::156:29388->2000:172:16:101::1:129(:::0)
peer=10.1.100.150:29388->10.1.100.41:0 naf=2
hook=pre dir=org act=noop 10.1.100.41:29388->10.1.100.150:8(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.150:29388->10.1.100.41:0(0.0.0.0:0)
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=0
serial=00001bbc tos=ff/ff ips_view=1024 app_list=0 app=0 url_cat=0
rpd_b_link_id = 00000000 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason: disabled-by-policy
total session 1


```

The IPv4 session is between the incoming physical interface port24 and naf.root. The IPv6 session is between the naf.root and the outgoing physical interface port17.

### NAT64 policy

In this example, a client PC is using IPv6 and an IPv6 VIP to access a server that is using IPv4. The FortiGate uses NAT64 to translate the request from IPv6 to IPv4 using the virtual interface naf.root. An `ippool` is applied so that the request is SNATed to the `ippool` address (172.16.101.2 - 172.16.101.3).

An embedded VIP64 object is used in this configuration so a specific IPv4 mapped IP does not need to be set. The lower 32 bits of the external IPv6 address are used to map to the IPv4 address. Only an IPv6 prefix is defined. In this example, the IPv6 prefix is 2001:10:1:100::, so the IPv6 address 2001:10:1:100::ac10:c89c will be translated to 172.16.200.156.

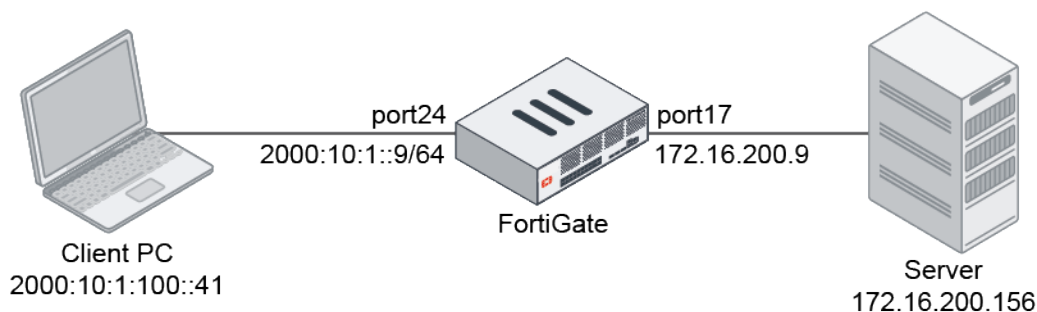

### To create a NAT64 policy in the GUI:

1. Configure the VIP:
  - a. Go to *Policy & Objects > Virtual IPs* and click *Create New > VIP*.
  - b. Enter the following:

<b>VIP type</b>	IPv6
<b>Name</b>	test-vip64-1
<b>External IP address/range</b>	2000:10:1:100::150
<b>Map to IPv4 address/range</b>	<b>Specify:</b> 172.16.200.156

- c. Click **OK**.
2. Configure the VIP with the embedded IPv4 address enabled:
  - a. Go to *Policy & Objects > Virtual IPs* and click *Create New > VIP*.
  - b. Enter the following:

<b>VIP type</b>	IPv6
<b>Name</b>	test-vip64-2
<b>External IP address/range</b>	2001:10:1:100::-2001:10:1:100::ffff:ffff
<b>Map to IPv4 address/range</b>	Use Embedded

c. Click **OK**.

3. Configure the IP pool:

- a. Go to *Policy & Objects > IP Pools* and click *Create New*.
- b. Enter the following:

<b>IP Pool Type</b>	IPv4 Pool
<b>Name</b>	test-ippool4-1
<b>Type</b>	Overload
<b>External IP address/range</b>	172.16.101.2-172.16.101.3
<b>NAT64</b>	Enable

c. Click **OK**.

4. Configure the firewall policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New* or edit an existing policy.
- b. Enter the following:

c.

<b>Name</b>	policy64-1
<b>Incoming Interface</b>	To_vlan20
<b>Outgoing Interface</b>	To_vlan30
<b>Source</b>	all
<b>Destination</b>	test-vip64-1 test-vip64-2

<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	NAT64
<b>IP Pool Configuration</b>	test-ippool4-1

- d. Configure the other settings as needed.

- e. Click OK.

## To create a NAT64 policy in the CLI:

1. Configure the VIP:

```
config firewall vip6
  edit "test-vip64-1"
    set extip 2000:10:1:100::150
    set nat66 disable
    set nat64 enable
    set ipv4-mappedip 172.16.200.156
  next
end
```

2. Configure the VIP with the embedded IPv4 address enabled:

```
config firewall vip6
  edit "test-vip64-2"
    set extip 2001:10:1:100::-2001:10:1:100::ffff:ffff
    set nat66 disable
    set nat64 enable
    set embedded-ipv4-address enable
```

```
    next
end
```

### 3. Configure the IP pool:

```
config firewall ippool
    edit "test-ippool4-1"
        set startip 172.16.101.2
        set endip 172.16.101.3
        set nat64 enable
        set add-nat64-route enable
    next
end
```

### 4. Configure the firewall policy:

```
config firewall policy
    edit 1
        set name "policy64-1"
        set srcintf "port24"
        set dstintf "port17"
        set action accept
        set nat64 enable
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "test-vip64-1" "test-vip64-2"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set ippool enable
        set poolname "test-ippool4-1"
    next
end
```

## To verify the traffic and session tables:

### 1. Verify the VIP64 traffic by the sniffer packets:

```
(root) # diagnose sniffer packet any 'icmp or icmp6' 4
interfaces=[any]
filters=[icmp or icmp6]
20.578417 port24 in 2000:10:1:100::41 -> 2000:10:1:100::150: icmp6: echo request seq 1
20.578495 naf.root out 2000:10:1:100::41 -> 2000:10:1:100::150: icmp6: echo request seq 1
20.578497 naf.root in 172.16.101.2 -> 172.16.200.156: icmp: echo request
20.578854 port17 out 172.16.101.2 -> 172.16.200.156: icmp: echo request
20.579083 port17 in 172.16.200.156 -> 172.16.101.2: icmp: echo reply
20.579093 naf.root out 172.16.200.156 -> 172.16.101.2: icmp: echo reply
20.579095 naf.root in 2000:10:1:100::150 -> 2000:10:1:100::41: icmp6: echo reply seq 1
20.579377 port24 out 2000:10:1:100::150 -> 2000:10:1:100::41: icmp6: echo reply seq 1
11 packets received by filter
0 packets dropped by kernel
```

**2. Verify the session tables for IPv6 and IPv4:**

```
(root) # diagnose sys session6 list
session6 info: proto=58 proto_state=00 duration=5 expire=56 timeout=0 flags=00000000
sockport=0 socktype=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=log may_dirty
statistic(bytes/packets/allow_err): org=312/3/0 reply=312/3/0 tuples=2
tx speed(Bps/kbps): 55/0 rx speed(Bps/kbps): 55/0
orgin->sink: org pre->post, reply pre->post dev=24->53/53->24
hook=pre dir=org act=noop 2000:10:1:100::41:29949->2000:10:1:100::150:128(:::0)
hook=post dir=reply act=noop 2000:10:1:100::150:29949->2000:10:1:100::41:129(:::0)
peer=172.16.101.2:45392->172.16.200.156:8 naf=1
hook=pre dir=org act=noop 172.16.101.2:45392->172.16.200.156:8(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.200.156:45392->172.16.101.2:0(0.0.0.0:0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=0
serial=000021ec tos=ff/ff ips_view=1024 app_list=0 app=0 url_cat=0
rpdb_link_id = 00000000 ngfwid=n/a
npu_state=0x040001 no_offload
no_ofld_reason: disabled-by-policy non-npu-intf
total session 1

(root) # diagnose sys session list
session info: proto=1 proto_state=00 duration=7 expire=54 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty f00
statistic(bytes/packets/allow_err): org=252/3/1 reply=252/3/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=53->17/17->53
gwy=172.16.200.156/172.16.101.2
hook=pre dir=org act=noop 172.16.101.2:45392->172.16.200.156:8(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.200.156:45392->172.16.101.2:0(0.0.0.0:0)
peer=2000:10:1:100::150:29949->2000:10:1:100::41:129 naf=2
hook=pre dir=org act=noop 2000:10:1:100::41:29949->2000:10:1:100::150:128(:::0)
hook=post dir=reply act=noop 2000:10:1:100::150:29949->2000:10:1:100::41:129(:::0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=0
serial=0001347f tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason: disabled-by-policy
total session 1
```

The IPv6 session is between the incoming physical interface port24 and naf.root. The IPv4 session is between the naf.root and the outgoing physical interface port17.

**3. Verify the embedded VIP64 traffic by the sniffer packets:**

```
(root) # diagnose sniffer packet any 'icmp or icmp6' 4
interfaces=[any]
filters=[icmp or icmp6]
```

```


7.696010 port24 in 2000:10:1:100::41 -> 2001:10:1:100::ac10:c89c: icmp6: echo request
seq 1
7.696057 naf.root out 2000:10:1:100::41 -> 2001:10:1:100::ac10:c89c: icmp6: echo request
seq 1
7.696060 naf.root in 172.16.101.2 -> 172.16.200.156: icmp: echo request
7.696544 port17 out 172.16.101.2 -> 172.16.200.156: icmp: echo request
7.696821 port17 in 172.16.200.156 -> 172.16.101.2: icmp: echo reply
7.696839 naf.root out 172.16.200.156 -> 172.16.101.2: icmp: echo reply
7.696841 naf.root in 2001:10:1:100::ac10:c89c -> 2000:10:1:100::41: icmp6: echo reply
seq 1
7.697167 port24 out 2001:10:1:100::ac10:c89c -> 2000:10:1:100::41: icmp6: echo reply seq
1
11 packets received by filter
0 packets dropped by kernel

```

## Mirroring SSL traffic in policies

SSL mirroring allows the FortiGate to decrypt and mirror traffic to a designated port. A new decrypted traffic mirror profile can be applied to IPv4, IPv6, and explicit proxy firewall policies in both flow and proxy mode. Full SSL inspection must be used in the policy for the traffic mirroring to occur.

SSL inspection is automatically enabled when you enable a security profile on the policy configuration page.

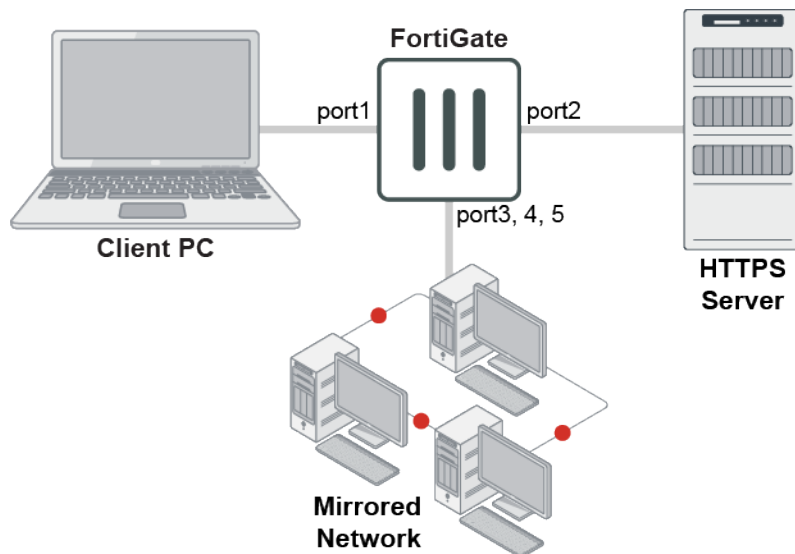


### To configure SSL mirroring in a policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Create a new policy, or edit an existing one.
3. Configure the interfaces, sources, and other required information.
4. In the *Security Profiles* section, for *SSL Inspection*, select *deep-inspection*, or another profile that uses *Full SSL Inspection*.




5. Enable *Decrypted Traffic Mirror*. The terms of use agreement opens.

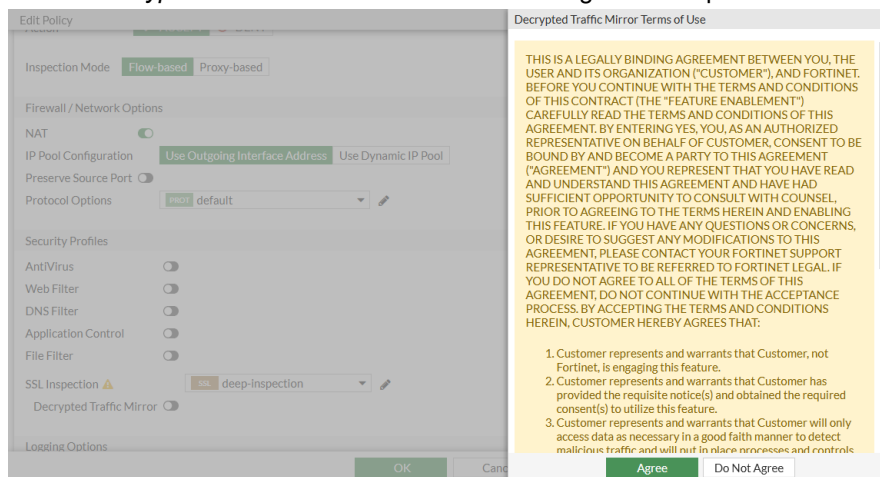

6. Click *Agree* to accept the terms.

7. In the drop-down list, select a decrypted traffic mirror, or click *Create* to create a new one. In this example, a new decrypted traffic mirror is created using the port3 interface.

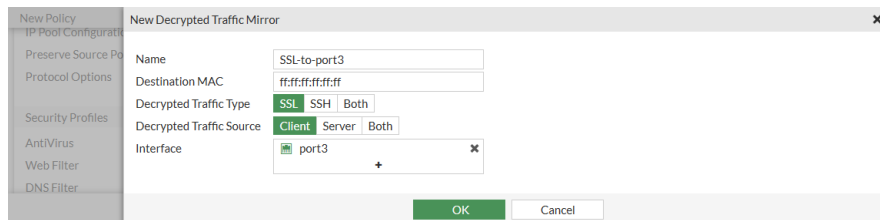

8. Click *OK* to save the policy.

### To configure SSL mirroring in proxy mode in the CLI:

1. Create the decrypted traffic mirror profile:

```
config firewall decrypted-traffic-mirror
    edit SSL-to-port3
        set dstmac ff:ff:ff:ff:ff:ff
        set traffic-type ssl
        set traffic-source client
        set interface port3
    next
end
```

2. Configure the policy to enable SSL traffic mirroring:

```
config firewall policy
    edit 1
        set name "mirror-policy"
        set srcintf "port1"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
```

```
set ssl-ssh-profile "deep-inspection"  
set decrypted-traffic-mirror "SSL-to-port3"
```

THIS IS A LEGALLY BINDING AGREEMENT BETWEEN YOU, THE USER AND ITS ORGANIZATION ("CUSTOMER"), AND FORTINET. BEFORE YOU CONTINUE WITH THE TERMS AND CONDITIONS OF THIS CONTRACT (THE "FEATURE ENABLEMENT") CAREFULLY READ THE TERMS AND CONDITIONS OF THIS AGREEMENT. BY ENTERING YES, YOU, AS AN AUTHORIZED REPRESENTATIVE ON BEHALF OF CUSTOMER, CONSENT TO BE BOUND BY AND BECOME A PARTY TO THIS AGREEMENT ("AGREEMENT") AND YOU REPRESENT THAT YOU HAVE READ AND UNDERSTAND THIS AGREEMENT AND HAVE HAD SUFFICIENT OPPORTUNITY TO CONSULT WITH COUNSEL, PRIOR TO AGREEING TO THE TERMS HEREIN AND ENABLING THIS FEATURE. IF YOU HAVE ANY QUESTIONS OR CONCERNS, OR DESIRE TO SUGGEST ANY MODIFICATIONS TO THIS AGREEMENT, PLEASE CONTACT YOUR FORTINET SUPPORT REPRESENTATIVE TO BE REFERRED TO FORTINET LEGAL. IF YOU DO NOT AGREE TO ALL OF THE TERMS OF THIS AGREEMENT, DO NOT CONTINUE WITH THE ACCEPTANCE PROCESS. BY ACCEPTING THE TERMS AND CONDITIONS HEREIN, CUSTOMER HEREBY AGREES THAT:

1. Customer represents and warrants that Customer, not Fortinet, is engaging this feature.
2. Customer represents and warrants that Customer has provided the requisite notice(s) and obtained the required consent(s) to utilize this feature.
3. Customer represents and warrants that Customer will only access data as necessary in a good faith manner to detect malicious traffic and will put in place processes and controls to ensure this occurs.
4. Customer represents and warrants that Customer has the right to enable and utilize this feature, and Customer is fully in compliance with all applicable laws in so doing.
5. Customer shall indemnify Fortinet in full for any of the above certifications being untrue.
6. Customer shall promptly notify Fortinet Legal in writing of any breach of these Terms and Conditions and shall indemnify Fortinet in full for any failure by Customer or any of its employees or representatives to abide in full by the Terms and Conditions above.
7. Customer agrees that these Terms and Conditions shall be governed by the laws of the State of California, without regards to the choice of laws provisions thereof and Customer hereby agrees that any dispute related to these Terms and Conditions shall be resolved in Santa Clara County, California, USA, and Customer hereby consents to personal jurisdiction in Santa Clara County, California, USA.

```
Do you want to continue? (y/n) y  
    next  
end
```

## Recognize anycast addresses in geo-IP blocking

An anycast IP can be advertised from multiple locations and the router selects a path based on latency, distance, cost, number of hops, and so on. This technique is widely used by providers to route users to the closest server. Since the IP is hosted in multiple geographic locations, there is no way to specify one single location to that IP.

Anycast IP address ranges can be bypassed in geo-IP blocking. The ISDB contains a list of confirmed anycast IP ranges that can be used for this purpose.

When the source or destination is set to `geoip`, you can enable the `geoip-anycast` option. Once enabled, IPs where the `anycast` option is set to 1 in `geoip_db` are bypassed in country matching and blocking.



You can only use the CLI to configure this feature.

### To enable the `geoip-anycast` option using the CLI:

```
config firewall policy
  edit 1
    set name "policyid-1"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "test-geoip-CA_1"
    set action accept
    set schedule "always"
    set service "ALL"
    set geoip-anycast enable
    set logtraffic all
    set nat enable
  next
end
```

### To check the `geoip-anycast` option for an IP address using the CLI:

```
diagnose geoip ip2country 1.0.0.1
1.0.0.1 - Australia, is anycast ip
```

The `anycast` IP is 1.0.0.1.

## Matching GeoIP by registered and physical location

IP addresses have both a physical and registered location in the geography IP database. Sometimes these two locations are different. The `geoip-match` command allows users to match an IPv4 address in an firewall policy to its physical or registered location when a GeoIP is used as a source or destination address. IPv6 policies currently support geography address objects but do not support `geoip-match`.

In the following example, the physical location of 220.243.219.10 is CA (Canada), the registered location is CN (China), and it is not an `anycast` IP.

### To configure GeoIP matching based on registered location:

1. Create a firewall policy to match the IP:

```
config firewall policy
  edit 1
    set name "policy_id_1"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
```

```

        set dstaddr "test-geoip-CA"
        set action accept
        set schedule "always"
        set service "ALL"
        set geoip-match registered-location
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end

```

Since CA is applied as a destination address and registered location IP matching is enabled, if the destination IP of the traffic is 220.243.219.10, then the traffic will be blocked because the registered location is CN.

**2. Verify that the policy is blocking traffic from the IP address:**

```

# diagnose sniffer packet any icmp 4
interfaces=[any]
filters=[icmp]
5.383798 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
6.381982 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
7.382608 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
^C
3 packets received by filter
0 packets dropped by kernel

```

**To configure GeoIP matching based on physical location:**

**1. Create a firewall policy to match the IP:**

```

config firewall policy
    edit 1
        set name "policy_id_1"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "test-geoip-CA"
        set action accept
        set schedule "always"
        set service "ALL"
        set geoip-match physical-location
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end

```

Since CA is applied as a destination address and physical location IP matching is enabled, if the destination IP of the traffic is 220.243.219.10, then the traffic will pass through.

**2. Verify that the policy is allowing traffic from the IP address:**

```

# diagnose sniffer packet any icmp 4
interfaces=[any]
filters=[icmp]
5.273985 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
5.274176 wan1 out 172.16.200.10 -> 220.243.219.10: icmp: echo request
6.274426 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
6.274438 wan1 out 172.16.200.10 -> 220.243.219.10: icmp: echo request

```

```
7.273978 wan2 in 10.1.100.41 -> 220.243.219.10: icmp: echo request
7.273987 wan1 out 172.16.200.10 -> 220.243.219.10: icmp: echo request
^C
6 packets received by filter
0 packets dropped by kernel
```

## HTTP to HTTPS redirect for load balancing

You can configure a virtual server with HTTP to HTTPS redirect enabled. When enabled, a virtual server can convert a client's HTTP requests to HTTPS requests. Through this mandatory conversion, HTTP traffic is converted to HTTPS traffic. This conversion improves the security of the user network.

You can only enable this feature by using the CLI. After you enable this feature, traffic flows as follows:

- When FortiGate receives an HTTP request for an external IP, such as 10.1.100.201 in the following example, FortiGate sends an HTTP 303 response back to the original client and redirects HTTP to HTTPS, instead of forwarding the HTTP request to the real backend servers.
- The client browser restarts the TCP session to HTTPS.
- The HTTPS session comes to the FortiGate where a matching firewall policy allows the HTTPS traffic and establishes a secure SSL connection, and then forwards the request to the real backend servers.

### To configure virtual server with HTTPS redirect enabled:

1. Create a virtual server with `server-type` set to `http`:

```
config firewall vip
    edit "virtual-server-http"
        set type server-load-balance
        set extip 10.1.100.201
        set extintf "wan2"
        set server-type http
        set ldb-method round-robin
        set extport 80
        config realservers
            edit 1
                set ip 172.16.200.44
                set port 80
            next
            edit 2
                set ip 172.16.200.55
                set port 80
            next
        end
    next
end
```

2. Create a virtual server with `server-type` set to `https` and with the same external IP address:

```
config firewall vip
    edit "virtual-server-https"
        set type server-load-balance
        set extip 10.1.100.201
        set extintf "wan2"
        set server-type https
        set ldb-method round-robin
        set extport 443
        config realservers
            edit 1 set ip 172.16.200.44
```

```
        set port 443
    next
    edit 2
        set ip 172.16.200.55
        set port 443
    next
end
set ssl-certificate "Fortinet_CA_SSL"
next
end
```

3. Enable the `http-redirect` option for the virtual server with `server-type` set to `http`:

```
config firewall vip
    edit "virtual-server-http"
        set http-redirect enable
    next
end
```

4. Add the two virtual servers to a policy:

```
config firewall policy
    edit 9
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "virtual-server-http" "virtual-server-https"
        set action accept
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end
```

## Use Active Directory objects directly in policies

Active Directory (AD) groups can be used directly in identity-based firewall policies. You do not need to add remote AD groups to local FSSO groups before using them in policies.


FortiGate administrators can define how often group information is updated from AD LDAP servers.

### To retrieve and use AD user groups in policies:

1. [Set the FSSO Collector Agent AD access mode on page 1136](#)
2. [Add an LDAP server on page 1137](#)
3. [Create the FSSO collector that updates the AD user groups list on page 1138](#)
4. [Use the AD user groups in a policy on page 1139](#)

### Set the FSSO Collector Agent AD access mode

To use this feature, you must set FSSO Collector Agent to *Advanced* AD access mode. If the FSSO Collector Agent is running in the default mode, FortiGate cannot correctly match user group memberships.

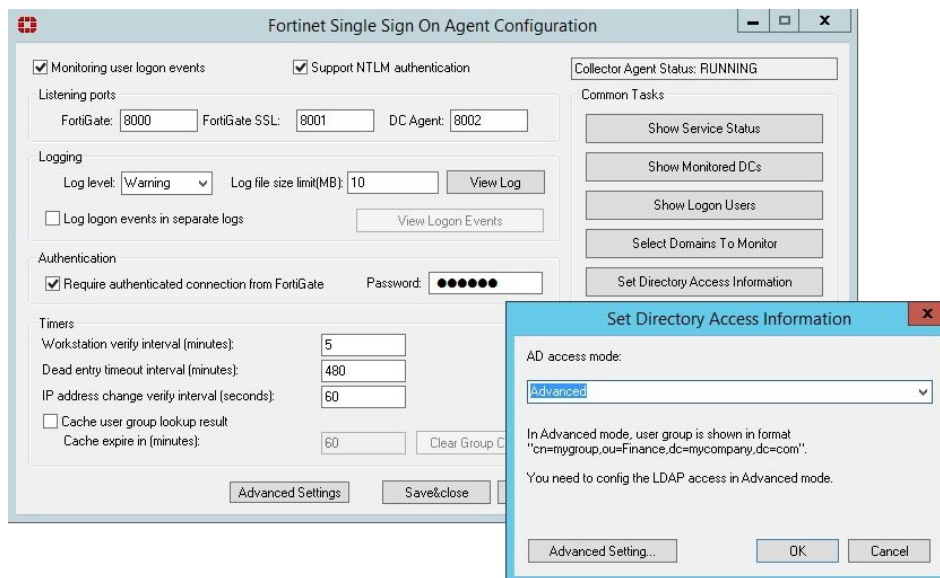

## Add an LDAP server




When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

### To add an LDAP server in the GUI:

1. Go to *User & Authentication > LDAP Servers*.
2. Click *Create New*.
3. Configure the settings as needed.

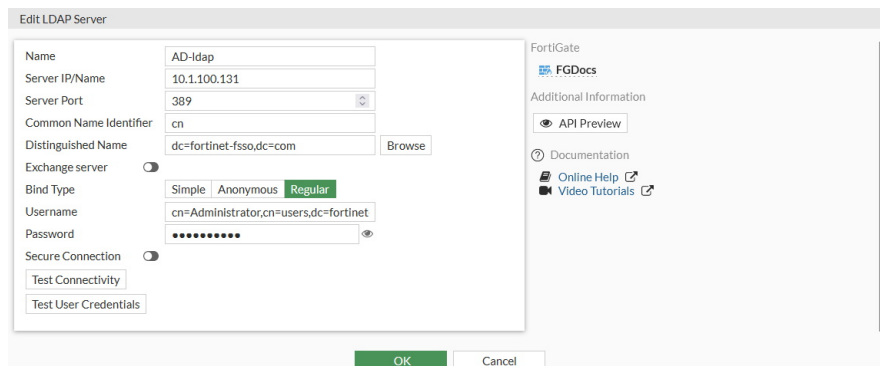

4. If secure communication over TLS is supported by the remote AD LDAP server:

- a. Enable *Secure Connection* .
- b. Select the protocol.
- c. Select the certificate from the CA that issued the AD LDAP server certificate.

If the protocol is LDAPS, the port will automatically change to 636.

5. Click *OK*.

#### To add an LDAP server in the CLI:

```
config user ldap
  edit "AD-ldap"
    set server "10.1.100.131"
    set cnid "cn"
    set dn "dc=fortinet-fsso,dc=com"
    set type regular
    set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
    set password XXXXXXXXXXXXXXXXXXXXXXXXXX
  next
end
```

### Create the FSSO collector that updates the AD user groups list


#### To create an FSSO agent connector in the GUI:

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.
3. In the *Endpoint/Identity* section, click *FSSO Agent on Windows AD*.
4. Fill in the *Name*
5. Set the *Primary FSSO Agent* to the IP address of the FSSO Collector Agent, and enter its password.
6. Set the *User Group Source* to *Local*.
7. Set the *LDAP Server* to the just created *AD-ldap* server.
8. Enable *Proactively Retrieve from LDAP Server*.
9. Set the *Search Filter* to *(&(objectClass=group)(cn=group\*))*.  
The default search filter retrieves all groups, including Microsoft system groups. In this example, the filter is configured to retrieve *group1*, *group2*, etc, and not groups like *grp199*.  
The filter syntax is not automatically checked; if it is incorrect, the FortiGate might not retrieve any groups.
10. Set the *Interval (minutes)* to configure how often the FortiGate contacts the remote AD LDAP server to update the group information.



11. Click OK.

12. To view the AD user groups that are retrieved by the FSSO agent, hover the cursor over the group icon on the fabric connector listing.

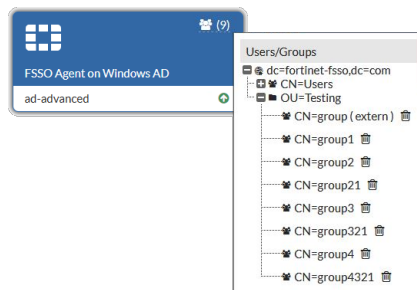


### To create an FSSO agent connector in the CLI:

```
config user fsso
  edit "ad-advanced"
    set server "10.1.100.131"
    set password XXXXXXXXXXXXXXXX
    set ldap-server "AD-ldap"
    set ldap-poll enable
    set ldap-poll-interval 2
    set ldap-poll-filter "(&(objectClass=group)(cn=group*))"
  next
end
```

You can view the retrieved AD user groups with the `show user adgrp` command.

### Use the AD user groups in a policy

The AD user groups retrieved by the FortiGate can be used directly in firewall policies.

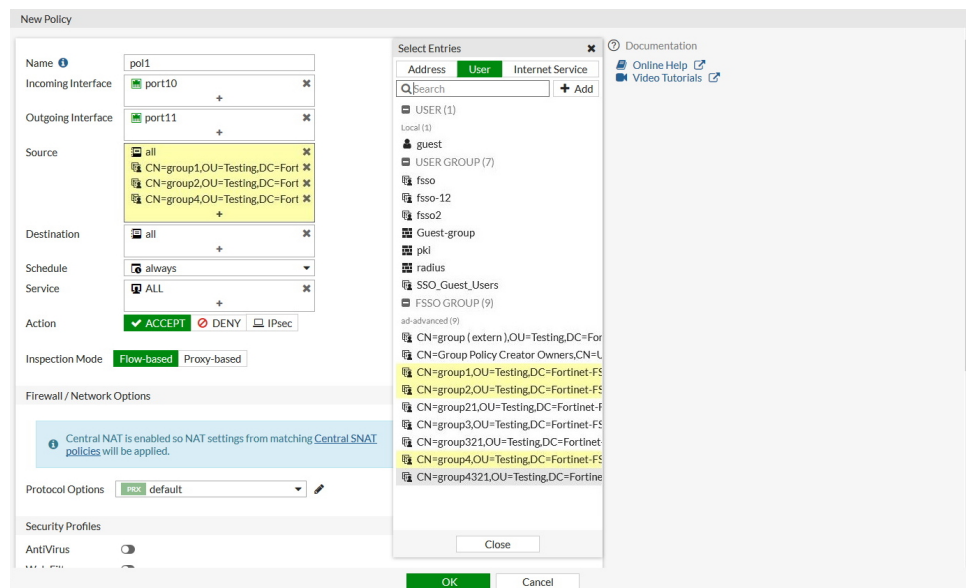

## No session timeout

To allow clients to permanently connect with legacy medical applications and systems that do not have keepalive or auto-reconnect features, the session timeout can be set to never for firewall services, policies, and VDOMs.

The options to disable session timeout are hidden in the CLI.

### To set the session TTL value of a custom service to never:

```
config firewall service custom
  edit "tcp_23"
    set tcp-portrange 23
    set session-ttl never
  next
end
```

### To set the session TTL value of a policy to never:

```
config firewall policy
  edit 201
    set srcintf "wan1"
    set dstintf "wan2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "TCP_8080"
    set logtraffic disable
    set session-ttl never
    set nat enable
  next
end
```

**To set the session TTL value of a VDOM to never:**

```
config system session-ttl
  set default never
  config port
    edit 1
      set protocol 6
      set timeout never
      set start-port 8080
      set end-port 8080
    next
  end
end
```


**To view a session list with the timeout set to never:**

```
# diagnose sys session list

session info: proto=6 proto_state=01 duration=9 expire=never timeout=never flags=00000000
sockflag=00000000 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty f00
statistic(bytes/packets/allow_err): org=2290/42/1 reply=2895/34/1 tuples=2
tx speed(Bps/kbps): 238/1 rx speed(Bps/kbps): 301/2
origin->sink: org pre->post, reply pre->post dev=18->17/17->18 gwy=172.16.200.55/10.1.100.41
hook=post dir=org act=snat 10.1.100.41:34256->172.16.200.55:23 (172.16.200.10:34256)
hook=pre dir=reply act=dnat 172.16.200.55:23->172.16.200.10:34256 (10.1.100.41:34256)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=9 auth_info=0 chk_client_info=0 vd=1
serial=000000b27 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id = 00000000 ngfwid=n/a
dd_type=0 dd_mode=0
npu_state=0x000001 no_offload
no_ofld_reason: disabled-by-policy
total session 1
```

## MAP-E support

On a customer edge (CE) FortiGate, an IPv4-over-IPv6 (MAP-E) tunnel can be created between the FortiGate and the border relay (BR) operating in an IPv6 network. A tunnel interface is created between the FortiGate and BR, which can be applied to firewall policies and IPsec VPN.

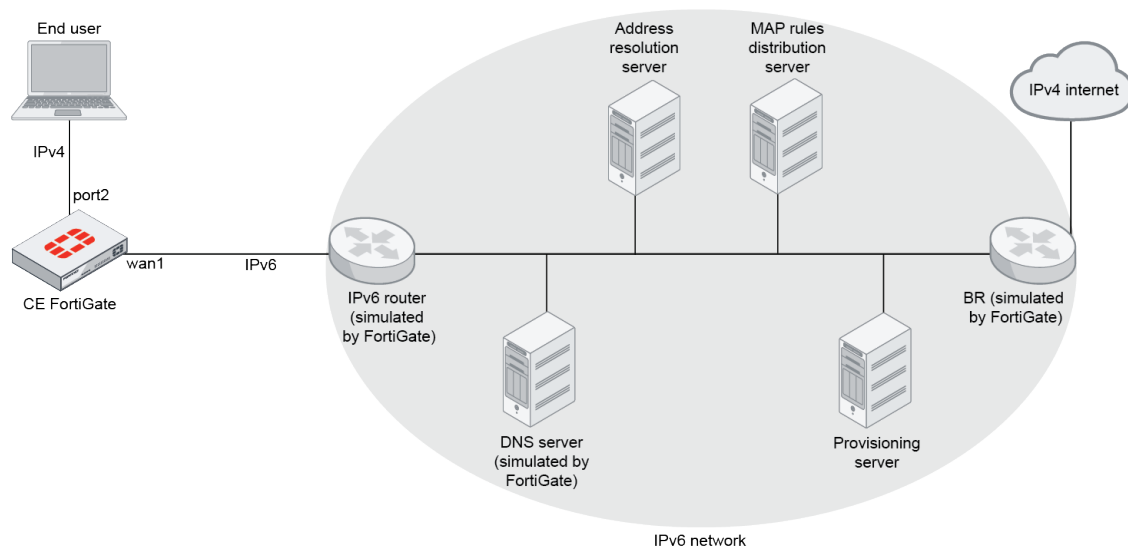

### To configure a MAP-E tunnel between the FortiGate and the BR:

#### 1. Configure fixed IP mode.

##### a. Configure IPv6 on the interface:

```
config system interface
  edit "wan1"
    config ipv6
      set autoconf enable
      set unique-autoconf-addr enable
      set interface-identifier ::6f:6clf:3400:0
    end
  next
end
```


The `interface-identifier` is an IPv6 address. Its last 64-bit will be kept and the rest will be cleared automatically. It will combine with the IPv6 prefix it gets from the IPv6 router to generate the IPv6 address of the interface.

By default, `unique-autoconf-addr` is disabled. It must be enabled so it can handle IPv6 prefix changing.

##### b. Configure the VNE tunnel:


```
config system vne-tunnel
  set status enable
  set interface "wan1"
  set mode fixed-ip
  set ipv4-address 10.10.81.81 255.255.255.0
  set br 2001:160::82
  set update-url "http://qa.forosqa.com/update?user=xxxx&pass=yyyy"
end
```

Initial sequence overview of VNE tunnel under fixed IP mode:

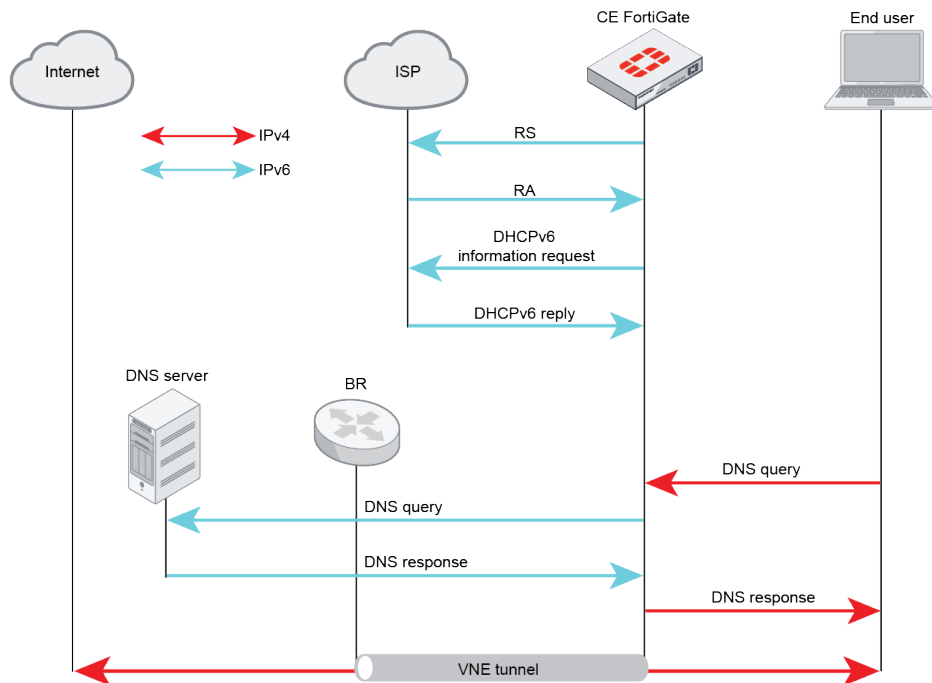

Once the IPv6 address of the FortiGate changes, the tunnel will be down because the BR does not know the FortiGate's new IPv6 address. The FortiGate uses `update-url` to update the new IPv6 address to the provisioning server. The provisioning server updates the FortiGate's IPv6 address to the BR so the VNE tunnel can be re-established.


Communication sequence overview of re-establishing VNE tunnel:

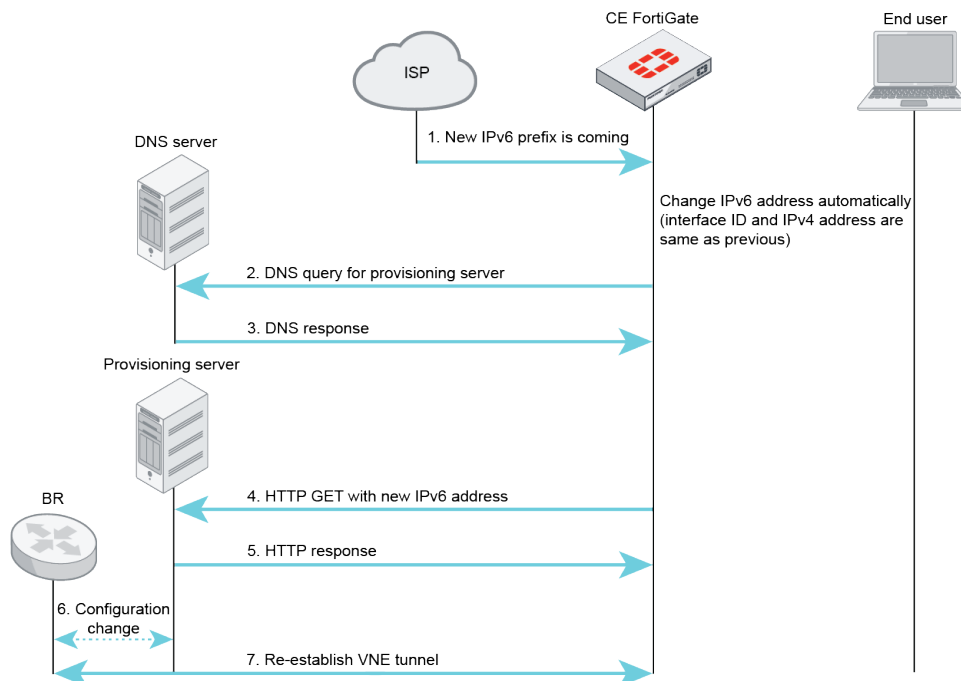

## 2. Configure the VNE tunnel to use MAP-E mode:

```
config system vne-tunnel
    set status enable
    set interface 'wan1'
    set ssl-certificate "Fortinet_Factory"
    set bmr-hostname *****
    set auto-asic-offload enable
    set mode map-e
end
```

Initial sequence overview of VNE tunnel under MAP-E mode:

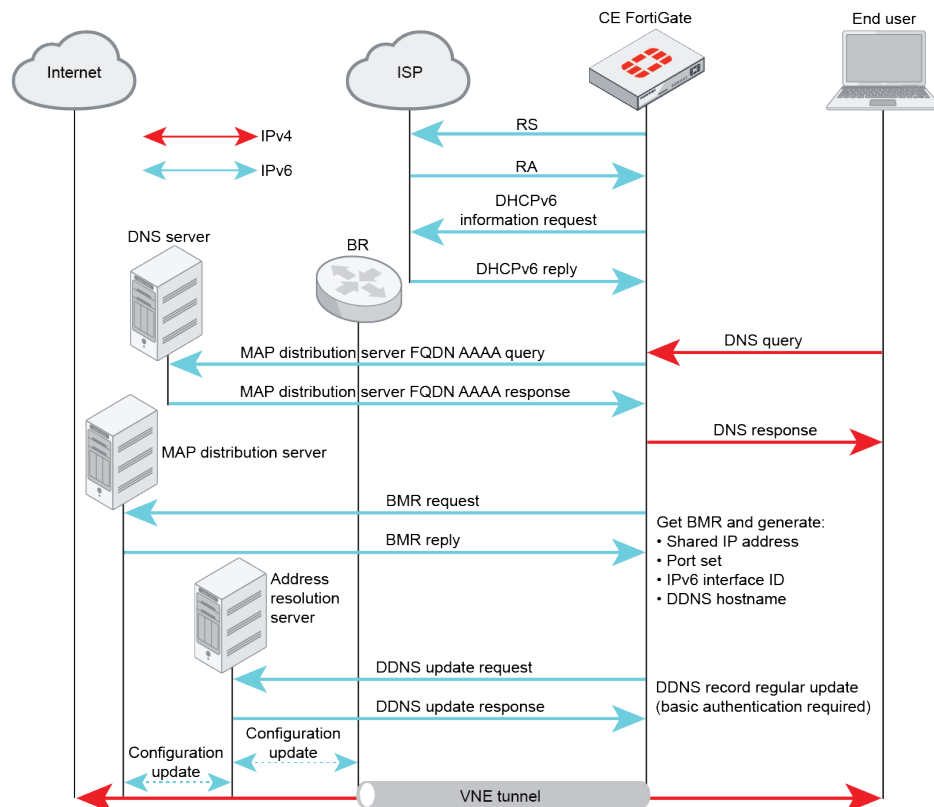

The FortiGate sends a MAP rule request to the MAP distribution server once the IPv6 address is configured on the FortiGate by RS/RA. Next, the FortiGate will send an AAAA query to get the IPv6 address of the MAP distribution server. After sending the BMR request to the MAP distribution server, the FortiGate will get the IPv4 address, port set, BR IPv6 address, and hostname of the address resolution server from the BMR reply. The VNE tunnel between the FortiGate and BR is now established.

The address resolution server is actually a dynamic DNS. The hostname is used for the FortiGate to maintain an IPv6 address when it changes.

The FortiGate updates the DDNS server with its IPv6 address whenever it updates, which in turn provides the update to the MAP distribution server and BR so they know how to resolve the FortiGate by hostname.

Once the VNE tunnel is established, a tunnel interface is created (`vne.root`), and an IPv4-over-IPv6 tunnel is set up between the FortiGate and BR. The route, firewall policy, and DNS server can now be configured to let the traffic go through the VNE tunnel and protect the end-user. The VNE tunnel can also be used in IPsec phase 1.

**3. Configure the route:**

```
config router static
  edit 1
    set device "vne.root"
  next
end
```

**4. Configure the firewall policy:**

```
config firewall policy
  edit 111
    set name "ff"
    set srcintf "port2"
    set dstintf "vne.root"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set av-profile "default"
    set nat enable
  next
end
```

**5. Configure the DNS server:**


```
config system dns-server
  edit "port2"
  next
end
```

## Seven-day rolling counter for policy hit counters


Instead of storing a single number for the hit count and byte count collected since the inception of each policy, seven numbers for the last seven days and an active counter for the current day are stored. The past seven-day hit count is displayed in the policy list and policy pages. A seven-day bar chart shows statistics on each policy page. This feature is currently supported in firewall and multicast policies, but not security policies.

**To view the rolling counter information in the GUI:**

1. Go to *Policy & Objects > Firewall Policy* or *Policy & Objects > Multicast Policy*.
2. Select a policy and hover over the *Bytes*, *Packets*, or *Hit Count* values to view the tooltip with the corresponding traffic statistics and bar graph (this example uses firewall policies).

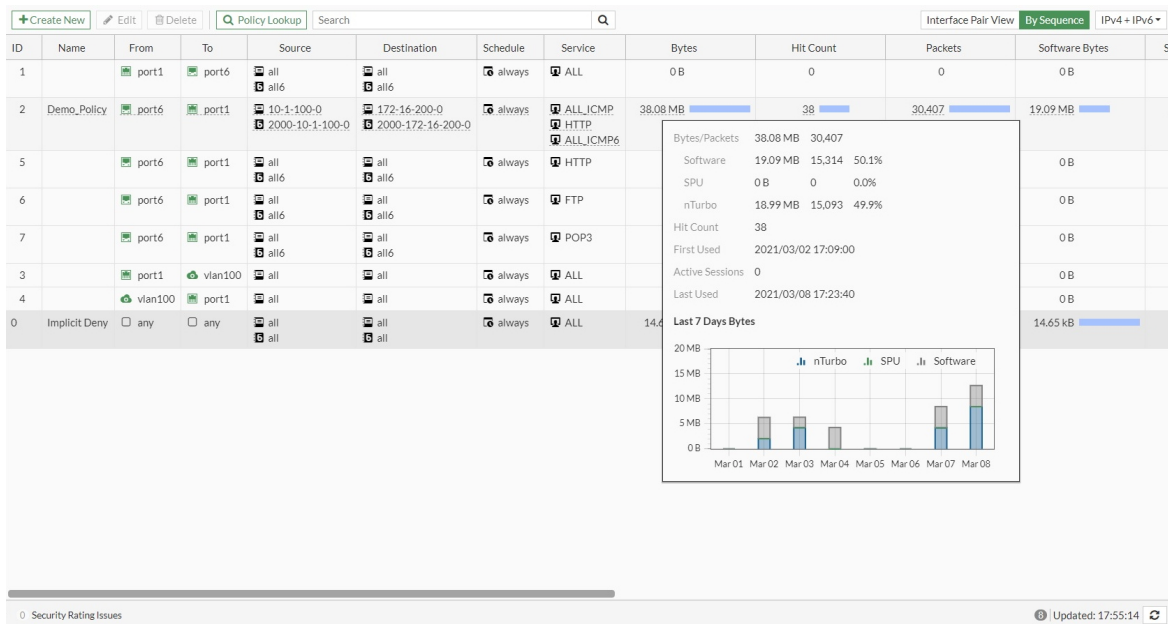

- Click *Edit*. The policy traffic statistics appear in the right-hand side of the page.
- Use the dropdowns to filter the bar graph data by counter (*Bytes*, *Packets*, or *Hit Count*) and policy type (*IPv4*, *IPv6*, or *IPv4 + IPv6*).

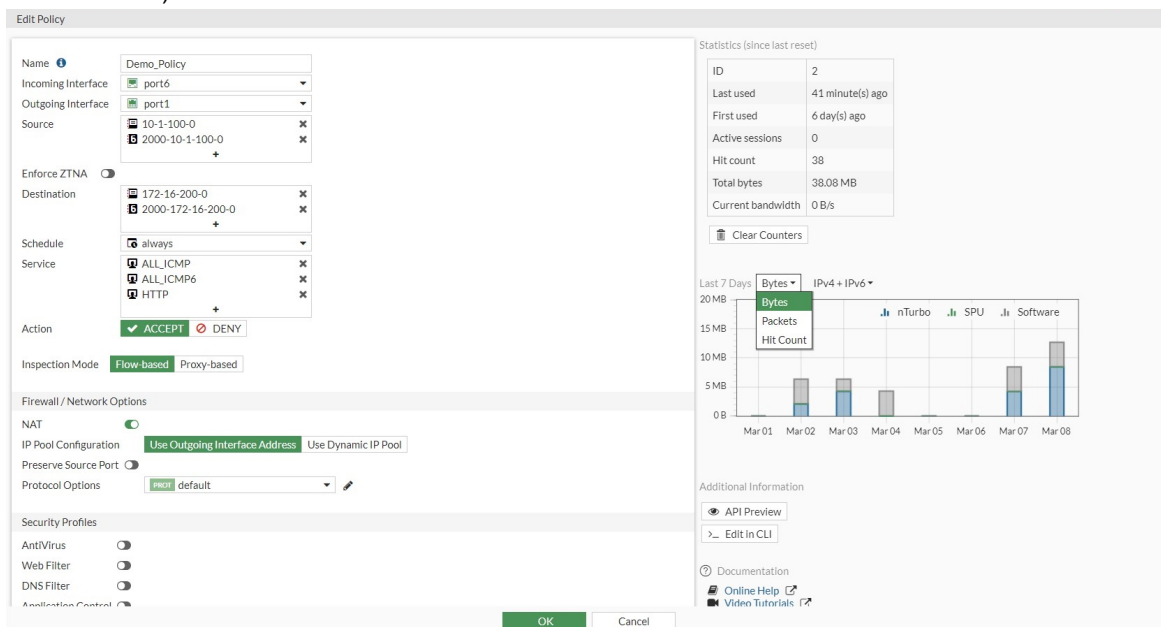

- Optionally, click *Clear Counters* to delete the traffic statistics for the policy.
- Click *OK*.

### To view the rolling counter information in the CLI:

```
# diagnose firewall iprope show 100004 2
idx=2 pkts/bytes=14709/18777329 asic_pkts/asic_bytes=8087/10413737 nturbo_pkts/nturbo_
bytes=8087/10413737 flag=0x0 hit count:19 (4 7 0 1 1 3 3 0)
first:2021-03-02 17:09:00 last:2021-03-08 17:23:40
```



```

established session count:0
  first est:2021-03-02 17:11:20 last est:2021-03-08 17:23:40

# diagnose firewall iprope6 show 100004 2
idx=2 pkts/bytes=15698/19307164 asic_pkts/asic_bytes=7006/8578911 nturbo_pkts/nturbo_
bytes=7006/8578911 flag=0x0 hit count:19 (4 7 0 1 3 2 2 0)
  first:2021-03-02 17:10:32 last:2021-03-08 17:23:33
established session count:0
  first est:2021-03-02 17:11:43 last est:2021-03-08 17:23:33

```

## Cisco Security Group Tag as policy matching criteria

The FortiGate can read the Cisco Security Group Tag (SGT) in Ethernet frames, and use them as matching criteria in firewall policies. A policy can match based on the presence of an SGT, or the detection of a specific ID or IDs.

When a packet with a SGT passes through and a session is established, the `ext_header_type=0xc5:0xc5` flag is included in the session table.

This feature is available in flow mode policies for virtual wire pair policies or policies in transparent mode VDOMs.



Ethernet frames with both Cisco Security Group Tags and VLAN tags are supported in 7.4.0 and later.

### To configure a firewall policy to detect SGTs in Ethernet frames:


```

config firewall policy
  edit 1
    set sgt-check {enable | disable}
    set sgt <ID numbers>
  next
end

```

## Examples

In these examples, port2 and port5 are in a virtual wire pair. Firewall policies are created that pass traffic with SGTs with a specific ID number, any ID number, or either of two specific ID numbers.

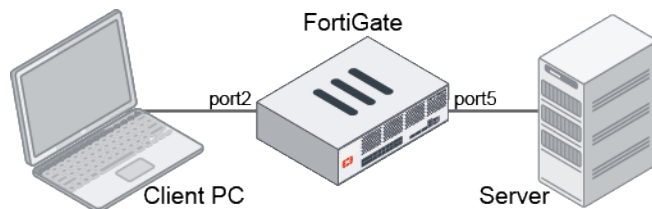

### To configure the virtual wire pair:

```

config system virtual-wire-pair
  edit "test-vwp-1"
    set member "port5" "port2"
    set wildcard-vlan enable
  end

```

```
    next
end
```

**To configure a firewall policy to match frames that have an SGT with ID 20 and allow them through:**

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port5"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set sgt-check enable
        set sgt 20
    next
end
```

**To configure a firewall policy to match frames that have an SGT with any ID:**

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port5"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set sgt-check enable
    next
end
```

**To configure a firewall policy to match frames that have the SGT with IDs 20 or 21:**

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port5"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set sgt-check enable
        set sgt 20 21
    next
end
```

**To check the session list:**

```
# diagnose sys session list
```

```
session info: proto=6 proto_state=01 duration=10 expire=3593 timeout=3600 flags=00000000
```

```

socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=log may_dirty br dst-vis f00
statistic(bytes/packets/allow_err): org=112/2/1 reply=60/1/1 tuples=2
tx speed(Bps/kbps): 10/0 rx speed(Bps/kbps): 5/0
origin->sink: org pre->post, reply pre->post dev=13->10/10->13 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.1.11:36970->10.1.2.11:80(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.2.11:80->10.1.1.11:36970(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
dst_mac=00:b0:e1:22:cf:e4
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=1
serial=0000183c tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason: disabled-by-policy
ext_header_type=0xc5:0xc5
total session 1

```

## Virtual patching on the local-in management interface

Virtual patching is a method of mitigating vulnerability exploits by using the FortiGate's IPS engine to block known vulnerabilities. Virtual patching can be applied to traffic destined to the FortiGate by applying the FMWP (Firmware Virtual Patch) database to the local-in interface using local-in policies. Attacks geared towards GUI and SSH management access, for example, can be mitigated using the FMWP database pushed from FortiGuard, thereby virtually patching these vulnerabilities.

When the `virtual-patch` option is enabled in a local-in policy, the IPS engine queries the FortiGuard API server using the WAD process to obtain a list of vulnerabilities targeting the FortiGate on the current FortiOS version. IPS enables vulnerability rules to scan local-in traffic on the specified interface. All matched local-in traffic is dropped accordingly.

### To configure virtual patching:

```

config firewall local-in-policy
    edit <id>
        set virtual-patch {enable | disable}
    next
end

```

The FortiGate must have a valid FMWR (Firmware) license to install the FMWP database. The FMWP database can be viewed by running the `diagnose autoupdate versions` command.

```

# diagnose autoupdate versions
FMWP Definitions
-----
Version: 23.00084 signed
Contract Expiry Date: Wed Jan  1 2031
Last Updated using manual update on Wed Sep  6 15:19:11 2023
Last Update Attempt: Wed Sep  6 15:40:08 2023
Result: No Updates

```

Once `virtual-patch` is enabled, the WAD process will periodically query vulnerability items from the FortiGuard API server and forward it to IPS.

### Sample vulnerability item found on the FortiGuard API server

```
{ "ID": 918630, "product": "fortios", "vendor": "fortinet", "max_version": "7.2.5", "min_version": "7.2.0", "severity": "high", "vuln_type": "Format String", "refs": [ "https://www.fortiguards.com/psirt/FG-IR-23-137" ], "description": "This indicates detection of a Zero-Day vulnerability protected by a signature from Fortinet's FortiGuard Labs. This signature should help mitigate the threat proactively both prior to, and after an official statement is available from the vendor. Once an official advisory or statement is available from the vendor, the signature name and its description will be updated to provide more details regarding this vulnerability. Further details may also be made available in an advisory on FortiGuard Center (http://www.fortiguards.com).", "patch_sig_id": 10004065, "patch_sig_ids": [], "detection_sig_ids": null, "date_added": "2023-08-22T13:09:11", "date_updated": "2023-08-22T13:09:11" }
```

FortiGuard can be queried from the FortiOS CLI for a list of vulnerability rules while specifying parameters for the vendor, version, product, and model by running the `diagnose wad dev-vuln query` command. For example, to query Fortinet Inc.'s FortiOS 7.2.5:

```
# diagnose wad dev-vuln query vendor=fortinet&version=7.2.5&product=fortios
Dev-Vuln Lookup result: success, cache: found, fgd: unknown, item: 0x7fb474e0b4a0
Vulnerability details:
info entry (1):
    'vendor' = fortinet
    'product' = fortios
    'model' = N/A
    'version.min' = 7.2.0
    'version.max' = 7.2.5
    'firmware' = N/A
    'build' = N/A
    'date_added' = 2023-08-22T13:09:11
    'date_updated' = 2023-08-22T13:09:11
    'sig_id' = 10004065
    'vuln_id' = 918630
    'severity' = 3
...
```

After receiving the vulnerability rules from the WAD process, the IPS engine marks them as virtual patch rules mapped to each CVE vulnerability signature. For example:


FortiOS.NodeJS.Proxy.Authentication.Bypass(CVE-2022-40684)

FortiOS.SSL.VPN.Web.Portal.Password.Improper.Authentication(CVE-2018-13382)

FortiOS.SSL.VPN.Web.Protoal.Pathname.Information.Disclosure(CVE-2018-13379)

### Example

In this example, the FortiGate's port2 is configured with virtual patching enabled. In the test scenario, the FortiGate is set to debug mode in order to block a harmless attack. IPS will scan local-in traffic and all matched local-in traffic will be dropped accordingly. Intrusion prevention logs will be recorded.

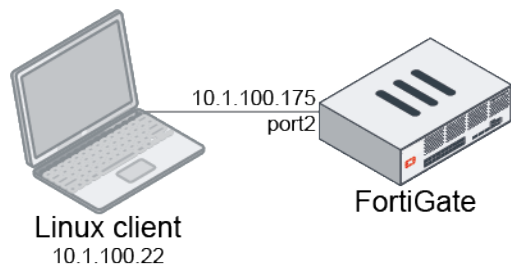

### To configure virtual patching on the local-in management interface:

#### 1. Configure the local-in policy:

```
config firewall local-in-policy
  edit 1
    set intf "port2"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set service "ALL"
    set schedule "always"
    set virtual-patch enable
  next
end
```

#### 2. From the Linux client, start a cURL download:

```
# curl -ik -H 'Host: 127.0.0.1:9980' -H 'User-Agent: Node.js' -H 'Forwarded: by=\"
[:ffff:127.0.0.1]:443\";for=\"[:ffff:127.0.0.1]:5325\";proto=https;host=localhost' -H
'$X-Forwarded-Vdom: root' 'https://10.1.100.175/api/v2/cmdb/system/admin'
```

The attack is blocked, and a security event log (intrusion prevention) is recorded.

```
1: date=2023-09-06 time=16:03:13 eventtime=1694041393775430036 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert" vd="vd1"
severity="critical" srcip=10.1.100.22 srccountry="Reserved" dstip=10.1.100.175
dstcountry="Reserved" srcintf="port38" srcintfrole="undefined" dstintf="vd1"
dstintfrole="undefined" sessionid=8636 action="dropped" proto=6 service="HTTP"
policyid=1 attack="FortiOS.NodeJS.Proxy.Authentication.Bypass." srcport=48940 dstport=80
hostname="127.0.0.1" url="/api/v2/cmdb/system/admin" agent="Node.js" httpmethod="GET"
direction="outgoing" attackid=10002156 ref="http://www.fortinet.com/ids/VID10002156"
incidentserialno=212860935 msg="vPatch: FortiOS.NodeJS.Proxy.Authentication.Bypass."
crscore=50 craction=4096 crlevel="critical"
```

## Address objects

Addresses define sources and destinations of network traffic and can be used in many functions such as firewall policies, ZTNA, etc.

**To view the possible uses list of address object usage:**

1. Go to *Policy & Objects > Addresses*.
2. Click the number under *Ref.* The *Usage of Address:<Predefined address>* pane opens, where *<Predefined address>* is one of the predefined addresses, such as `SSLVPN_TUNNEL_ADDR1`.
3. In the *Usage of Address:<Predefined address>* pane, click *Possible Uses* to view the list.

When properly set up, these address objects can be used with great flexibility to make the configuration of different functions simpler and more intuitive. When used in a firewall policy, the FortiGate compares the IP addresses contained in packet headers with a policy's source and destination addresses to determine if the policy matches the traffic. The matching of IP addresses in packet headers is also performed for other FortiGate functions configured with address objects.

## Address Types

When creating an IPv4 address, there are several different types of addresses that can be specified. Which one is chosen will depend on which method most easily yet accurately describes the addresses that you are trying to include with as few entries as possible based on the information that you have. For instance, if you are trying to describe the addresses of a specific company's web server but do not know how extensive their web server farm is, you would be more likely to use a Fully Qualified Domain Name (FQDN) rather than a specific IP address. On the other hand, some computers do not have FQDNs and a specific IP address must be used.

The following table provides a short description of the different types of addresses:

Address type	Description
Subnet	<p>The subnet type of address is expressed using a host address and a subnet mask. This is the most flexible of the address types because the address can refer to as little as one individual address (x.x.x.x/32) or as many as all of the available addresses (0.0.0.0/0).</p> <p>See <a href="#">Subnet on page 1154</a> and <a href="#">Dynamic policy — fabric devices on page 1154</a> for more information.</p>
IP range	<p>The IP range type can be used to define a continuous set of IP addresses between one specific IP address and another (inclusive). It is a flexible way to describe a continuous set of addresses while being specific and granular, without needing to fall within the boundaries of standard subnets.</p> <p>See <a href="#">IP range on page 1156</a> for more information.</p>
FQDN	<p>The Fully Qualified Domain Name (FQDN) address type accepts an address string and resolves it to one or more IP addresses. It relies on DNS to keep up with address changes without having to manually change the IP addresses on the FortiGate.</p> <p>See <a href="#">FQDN addresses on page 1157</a> for more information.</p> <p>FQDN can also be specified as wildcard addresses such as *.example.com. See <a href="#">Using wildcard FQDN addresses in firewall policies on page 1158</a> for more information.</p>

Address type	Description
Geography	<p>Geography addresses are those determined by the country/region of origin. The IPs for the country/region is automatically determined from the Geography IP database.</p> <p>See <a href="#">Geography based addresses on page 1160</a> and <a href="#">IPv6 geography-based addresses on page 1163</a> for more information.</p>
Dynamic	<p>Dynamic address object can be used in the policies that support dynamic address type and comes in different subtypes such as FSSO and SDN connector dynamic addresses.</p> <p>See <a href="#">FSSO dynamic address subtype on page 1171</a>, <a href="#">ClearPass integration for dynamic address objects on page 1175</a>, <a href="#">FortiNAC tag dynamic address on page 1178</a>, and <a href="#">Public and private SDN connectors on page 2836</a> for more information.</p>
Device (Mac address)	<p>A MAC address is a link layer-based address type and it cannot be forwarded across different IP segments. In FortiOS, you can configure a firewall address object with a singular MAC, wildcard MAC, multiple MACs, or a MAC range.</p> <p>See <a href="#">MAC addressed-based policies on page 1181</a>, <a href="#">Adding MAC-based addresses to devices on page 110</a>, <a href="#">ISDB well-known MAC address list on page 1182</a>, and <a href="#">IPv6 MAC addresses and usage in firewall policies on page 1184</a> for more information.</p>
Wildcard (CLI only)	<p>Wildcard addresses are addresses that identify ranges of IP addresses, reducing the amount of firewall addresses and security policies required to match some of the traffic on your network.</p> <p>See <a href="#">Wildcard addressing on page 1165</a> for more information.</p>
Interface subnet (CLI only)	<p>For all interfaces set to a LAN or DMZ role, an option is available and enabled by default to automatically create an address object for the connected network. If the interface's subnet changes, the address object subnet changes too.</p> <p>See <a href="#">Interface subnet on page 1166</a> for more information.</p>

## Address Group

Address groups are designed for ease of use in the administration of the device. If you have several addresses or address ranges that will commonly be treated the same or require the same security policies, you can put them into address groups, rather than entering multiple individual addresses in each policy that refers to them.

There are two different types of address groups and the following table provides a short description of each type:

Address group type	Description
Group	<p>Members of an address group type group can belong to multiple address groups.</p> <p>See <a href="#">Address group on page 1167</a>, <a href="#">Allow empty address groups on page 1169</a>, and <a href="#">Address group exclusions on page 1170</a> for more information.</p>
Folder	<p>Members or an address group type folder can only belong to a single address folder.</p> <p>See <a href="#">Address folders on page 1168</a> for more information.</p>

## Subnet

A subnet address object is usually used to refer internal networks or addresses which are defined by the network administrator.

A subnet address usually consists of a network address and a netmask, for example, 192.168.1.0 255.255.255.0. In this example, the network address is 192.168.1.0 and the netmask is 255.255.255.0. The network address defines the network to match and the netmask specify the IP address to match on the network.

In the above example, the subnet address 192.168.1.0 255.255.255.0 would match the following IP addresses:

```
192.168.1.1
192.168.1.2
192.168.1.3
...
192.168.1.255
```

For defining a subnet address object the valid format of IP address and netmask could be either:

x.x.x.x/x.x.x.x, such as 192.168.1.0/255.255.255.0

or

x.x.x.x/x, such as 192.168.1.0/24



To define a single address using subnet, use the netmask 255.255.255.255 or /32. A warning message will be shown if any other netmask is used and will not let the user save the address object.

### To create a subnet address:

1. Go to *Policy & Objects > Addresses*.
2. Select *Create New > Address*.
3. In the *Category* field, select *Address*.
4. Enter a *Name* for the address object.
5. In the *Type* field, select *Subnet* from the dropdown menu.
6. In the *IP/Netmask* field, enter the address and subnet mask according to the format x.x.x.x/x.x.x.x or the short hand format of x.x.x.x/x
7. In the *Interface* field, leave as the default *any* or select a specific interface from the dropdown menu.
8. Enable/disable *Static route configuration*.
9. Enter any additional information in the *Comments* field.
10. Click *OK*.

## Dynamic policy — fabric devices

The dynamic address group represents the configured IP addresses of all Fortinet devices connected to the Security Fabric. It currently includes FortiManager, FortiAnalyzer, FortiClient EMS, FortiMail, FortiAP(s), and FortiSwitch(es). Like other dynamic address groups for fabric connectors, it can be used as an IPv4 address in firewall policies and objects.



The list of firewall addresses includes a default address object called `FABRIC_DEVICE`. You can apply the `FABRIC_DEVICE` object to the following types of policies:

- Firewall policy, including virtual wire pairs, NAT 46, and NAT 64 (IPv4 only)
- IPv4 shaping policy
- IPv4 ACL policy


You cannot apply the `FABRIC_DEVICE` object to the following types of policies:

- IPv4 explicit proxy policy

You also cannot use the `FABRIC_DEVICE` object with the following settings:

- Custom extension on `internet-service`
- Exclusion of `addrgrp`

Initially the `FABRIC_DEVICE` object does not have an address value. The address value is populated dynamically as things change. As a result, you cannot edit the `FABRIC_DEVICE` object, add any addresses to the object, or remove any addresses from the object. The *Edit Address* pane in the GUI only has a *Return* button because the object is read-only:

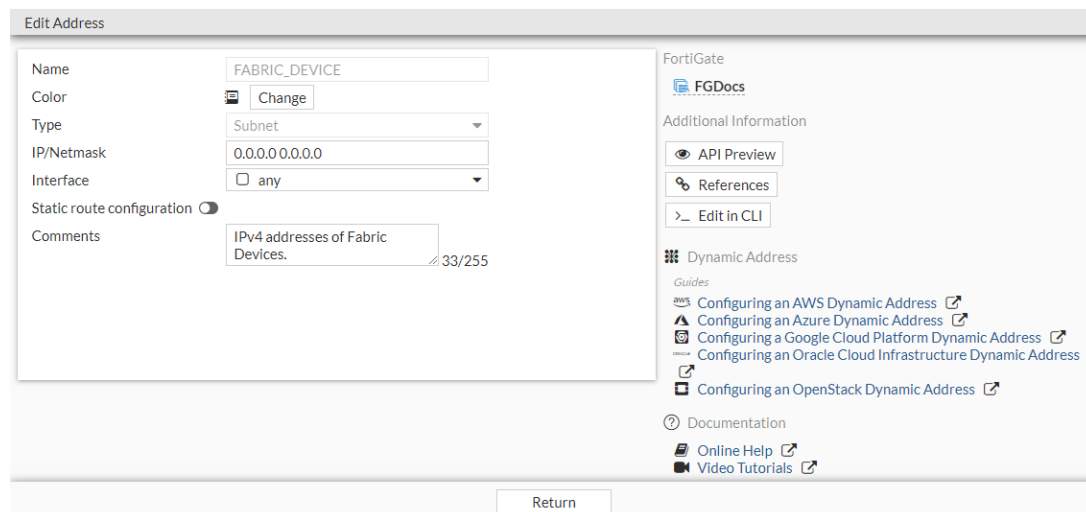

The `FABRIC_DEVICE` object address values are populated based on:

- FortiAnalyzer IP (from the *Fabric Settings* pane)
- FortiManager IP (from the *Fabric Settings* pane)
- FortiMail IP (from the *Fabric Settings* pane)
- FortiClient EMS IP (from the *Fabric Settings* pane)
- FortiAP IPs (from the *FortiAP Setup* pane or DHCP)
- FortiSwitch IPs (from the *FortiSwitch Setup* page or DHCP)

**To apply the `FABRIC_DEVICE` object to a firewall policy using the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Create a new policy or edit an existing policy.
3. For the *Destination* field, select `FABRIC_DEVICE` from the list of address entries.
4. Configure the rest of the policy as needed.
5. Click *OK*.

**To apply the FABRIC\_DEVICE object to a firewall policy using the CLI:**

```
config firewall address
  edit "FABRIC_DEVICE"
    set type ipmask
    set comment "IPv4 addresses of Fabric Devices."
    set visibility enable
    set associated-interface ''
    set color 0
    set allow-routing disable
    set subnet 0.0.0.0 0.0.0.0
  next
end

config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "FABRIC_DEVICE"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set fsso disable
    set nat enable
  next
end
```

**Diagnose command**

You can use the diagnose command to list IP addresses of Fortinet devices that are configured in the Security Fabric.

**To run the diagnose command using the CLI:**

```
(root) # diagnose firewall sf-addresses list

FabricDevices: 172.18.64.48
FortiAnalyzer: 172.18.60.25
FortiSandbox: 172.18.52.154
FortiManager: 172.18.28.31
FortiClientEMS: 172.18.62.6
FortiAP:
FortiSwitch:
FortiAP/SW-DHCP:
```

**IP range**

The IP range type of address can describe a group of addresses while being specific and granular. It does this by specifying a continuous set of IP addresses between one specific IP address and another.

The format would be:

x.x.x.x-x.x.x.x, such as 192.168.110.100-192.168.110.120

**To create an IP range address:**

1. Go to *Policy & Objects > Addresses*.
2. Select *Create New > Address*.
3. In the *Category* field, select *Address*.
4. Enter a *Name* for the address object.
5. In the *Type* field, select *IP Range* from the dropdown menu.
6. In the *IP Range* field, enter the range of addresses in the following format: x.x.x.x-x.x.x.x (no spaces)
7. In the *Interface* field, leave as the default any or select a specific interface from the drop down menu.
8. Enable/disable *Static route configuration*.
9. Enter any additional information in the *Comments* field.
10. Click *OK*.

## FQDN addresses

By using Fully Qualified Domain Name (FQDN) addressing you can take advantage of the dynamic ability of DNS to keep up with address changes without having to manually change the addresses on the FortiGate. FQDN addresses are most often used with external web sites but they can be used for internal web sites as well if there is a trusted DNS server that can be accessed. FQDN addressing also comes in handy for large web sites that may use multiple addresses and load balancers for their web sites. The FortiGate firewall automatically maintains a cached record of all the addresses resolved by the DNS for the FQDN addresses used.

For example, if you were doing this manually and you wanted to have a security policy that involved Google, you could track down all of the IP addresses that they use across multiple countries. Using the FQDN address is simpler and more convenient.

When representing hosts by an FQDN, the domain name can also be a subdomain, such as mail.example.com.

Valid FQDN formats include:

- <host\_name>.<top\_level\_domain\_name>, such as example.com
- <host\_name>.<second\_level\_domain\_name>.<top\_level\_domain\_name>, such as mail.example.com.

The FortiGate firewall keeps track of the DNS TTLs so as the entries change on the DNS servers the IP address will effectively be updated for the FortiGate. As long as the FQDN address is used in a security policy, it stores the address in the DNS cache.



There is a possible security downside to using FQDN addresses. Using a fully qualified domain name in a security policy means that your policies are relying on the DNS server to be accurate and correct. Should the DNS server be compromised, security policies requiring domain name resolution may no longer function properly.

---

**To create a Fully Qualified Domain Name address:**

1. Go to *Policy & Objects > Addresses*.
2. Select *Create New > Address*.
3. In the *Category* field, choose *Address*.
4. Enter a *Name* for the address object.
5. In the *Type* field, select *FQDN* from the dropdown menu.

6. Enter the domain name in the *FQDN* field.
7. In the *Interface* field, leave as the default *any* or select a specific interface from the dropdown menu.
8. Enable/disable *Static route configuration*.
9. Enter any additional information in the *Comments* field.
10. Click *OK*.

## Using wildcard FQDN addresses in firewall policies

You can use wildcard FQDN addresses in firewall policies. IPv4, IPv6, ACL, local, shaping, NAT64, NAT46, and NGFW policy types support wildcard FQDN addresses.

For wildcard FQDN addresses to work, the FortiGate should allow DNS traffic to pass through.

Initially, the wildcard FQDN object is empty and contains no addresses. When the client tries to resolve a FQDN address, the FortiGate will analyze the DNS response. The IP address(es) contained in the answer section of the DNS response will be added to the corresponding wildcard FQDN object. It is therefore necessary to have the DNS session-helpers defined in the `config system session-helper` setting.



Since FortiGate must analyze the DNS response, it does not work with DNS over HTTPS.

---

In FortiOS 7.0 and later, FortiGate supports DNS over TLS. It is possible to analyze DNS responses sent over DoT, as long as there is a firewall policy that allows the DNS traffic from the client and is configured with a DNS filter that supports DoT. For information on configuring this, see [DNS inspection with DoT and DoH on page 1389](#).

When the wildcard FQDN gets the resolved IP addresses, FortiOS loads the addresses into the firewall policy for traffic matching.

The FortiGate will keep the IP addresses in the FQDN object table as long as the DNS entry itself has not expired. Once it expires, the IP address is removed from the wildcard FQDN object until another query is made. At any given time, a single wildcard FQDN object may have up to 1000 IP addresses.



The DNS expiry TTL value is set by the authoritative name server for that DNS record. If the TTL for a specific DNS record is very short and you would like to cache the IP address longer, then you can extend it with the CLI. See [To extend the TTL for a DNS record in the CLI: on page 1160](#)



Wildcard FQDN IPs are synchronized to other autoscale members whenever a peer learns of a wildcard FQDN address.

---

### To create a wildcard FQDN using the GUI:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Specify a *Name*.
3. For *Type*, select *FQDN*.

4. For *FQDN*, enter a wildcard FQDN address, for example, \*.fortinet.com.

5. Click **OK**.

#### To use a wildcard FQDN in a firewall policy using the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. For *Destination*, select the wildcard FQDN.
3. Configure the rest of the policy as needed.
4. Click **OK**.

#### To create a wildcard FQDN using the CLI:

```
config firewall address
  edit "test-wildcardfqdn-1"
    set type fqdn
    set fqdn "*.fortinet.com"
  next
end
```

#### To use wildcard FQDN in a firewall policy using the CLI:

```
config firewall policy
  edit 2
    set srcintf "port3"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "test-wildcardfqdn-1"
    set action accept
    set schedule "always"
    set service "ALL"
    set auto-asic-offload disable
    set nat enable
  next
end
```

#### To use the diagnose command to list resolved IP addresses of wildcard FQDN objects:

```
# diagnose firewall fqdn list

List all FQDN:
```

```
*.fortinet.com: ID(48) ADDR(96.45.36.159) ADDR(192.168.100.161) ADDR(65.39.139.161)
```

Alternatively:

```
# diagnose test application dnsproxy 6

worker idx: 0

vfid=0 name=*.fortinet.com ver=IPv4 min_ttl=3266:0, cache_ttl=0 , slot=-1, num=3,
wildcard=1

          96.45.36.159 (ttl=68862:68311:68311) 192.168.100.161 (ttl=3600:3146:3146)
65.39.139.161
(ttl=3600:3481:3481)
```

**To use the diagnose command for firewall policies which use wildcard FQDN:**

```
# diagnose firewall iprule list 100004
...
destination fqdn or dynamic address (1):*.fortinet.com ID(48) uuid_idx=57 ADDR
(208.91.114.104) ADDR(208.91.114.142) ADDR(173.243.137.143) ADDR(65.104.9.196) ADDR
(96.45.36.210)
...
```

**To extend the TTL for a DNS record in the CLI:**

The TTL for DNS records can be configured globally, or for a specific FQDN address. If it is configured for an FQDN address, that setting will supersede the global setting for that address. See [Important DNS CLI commands on page 238](#) for information about configuring a global TTL.

In this the example the `set cache-ttl` value has been extended to 3600 seconds.

```
config firewall address
    edit "fortinet.com"
        set type fqdn
        set fqdn "www.fortinet.com"
        set cache-ttl 3600
    next
end
```

## Geography based addresses

Geography addresses are those determined by country of origin. The IP for the country or region is automatically determined from the Geography IP database.

**To view IP Geography database:**

```
#diagnose autoupdate versions | grep -A 6 "IP Geography DB"
IP Geography DB
-----
Version: 3.00152
Contract Expiry Date: n/a
Last Updated using manual update on Thu Nov 17 17:52:00 2022
Last Update Attempt: Wed Nov 23 10:56:46 2022
Result: No Updates
```



Without a valid license, local IP geography database will continue to work. However the FortiGate will stop receiving geography IP updates from the FortiGuard servers and the geography IP database will no longer be updated. IP geolocation service is part of base services included with all FortiCare support contracts. See [FortiGuard Security Services](#) for more information.

### To create a geography address:

1. Go to *Policy & Objects > Addresses*.
2. Select *Create New > Address*.
3. In the *Category* field, choose *Address*.
4. Enter a *Name* for the address object.
5. In the *Type* field, select *Geography* from the dropdown menu.
6. In the *Country/Region* field, select a single country from the dropdown menu.
7. In the *Interface* field, leave as the default *any* or select a specific interface from the dropdown menu.
8. Enter any additional information in the *Comments* field.
9. Click *OK*.

## Overrides

It is possible to assign a specific IP address range to a customized country ID. Generally, geographic addressing is done at the VDOM level; it could be considered global if you are using the root VDOM, but the `geoip-override` setting is a global setting.

### To configure a geography IP override:

1. Assign a specific IP address range to a customized country ID:

```
config system geoip-override
  edit "MyCustomCountry"
    config ip-range
      edit 1
        set start-ip 1.1.1.1
        set end-ip 1.1.1.2
      next
    end
  next
end
```

2. Use `get sys geoip-country XX` to determine the name corresponding to the custom 2-digit country code A0:

```
# get sys geoip-country A0
id          : A0
name        : MyCustomCountry
```

3. Show the full configuration of the geography IP override just created to show that it corresponds to country code A0:

```
# show full sys geoip-override
config system geoip-override
  edit "MyCustomCountry"
    set description ''
```

```

set country-id "A0"
config ip-range
    edit 1
        set start-ip 1.1.1.1
        set end-ip 1.1.1.2
    next
end
next
end

```

### To configure a geography address:

1. Enable debug to display the CLI commands running on the backend in response to certain GUI configuration:

```

# diagnose debug enable
# diagnose debug cli 7
Debug messages will be on for 30 minutes.

```

2. Go to **Policy & Objects > Addresses** and create a geography address using the previously created custom country code:

3. Observe the corresponding CLI commands run on the backend:

```

FGT # 0: config firewall address
0: edit "TestGeoAddress"
0: set type geography
0: set country "A0"
0: end

```

## Diagnose commands

There are a few diagnose commands used with geographic addresses:

```
diagnose firewall ipgeo [country-list | ip-list | ip2country | override | copyright-notice]
```

Diagnose command	Description
country-list	List of all countries.
ip-list	List of the IP addresses associated with the country.
ip2country	Used to determine which country a specific IP address is assigned to.
override	List of user defined geography data; items configured with the <code>config system geoip-override</code> command.
copyright-notice	Shows the copyright notice.



```
diagnose geoip [geoip-query | ip2country | iprange]
```

Diagnose command	Description
geoip-query	Used to determine the complete geolocation of a specific IP address from the FortiGuard IP Geography DB.
ip2country	Used to determine the physical and registered locations of the IP address as well and if the type is anycast.
lprange	List the IP addresses or IP ranges associated with the country.

For more details and examples using these diagnose commands, see the Fortinet Community article [Technical Tip: Commands to verify GeoIP information and troubleshoot GeoIP database](#).

## IPv6 geography-based addresses

Geography-based IPv6 addresses can be created and applied to IPv6 firewall policies.



IPv6 geography-based addresses do not support `geoip-override` or `geoip-anycast`.

### To create an IPv6 geography-based address in the GUI:

1. Go to *Policy and Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set *Category* to *IPv6 Address*.
4. Enter a name for the address.
5. Set *Type* to *IPv6 Geography*.
6. Select the *Country/Region* from the list.
7. Optionally, enter comments.

The screenshot shows the 'New Address' configuration window in the FortiGate GUI. The 'Category' is set to 'IPv6 Address'. The 'Name' field contains 'test-ipv6-geoip'. The 'Color' field has a 'Change' button. The 'Type' is set to 'IPv6 Geography'. The 'Country/Region' is set to 'Canada'. The 'Comments' field contains 'IPv6 Geography address'. The 'OK' button is highlighted in green.

8. Click **OK**.

### To use the IPv6 geography address in a policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Edit an existing policy, or create a new one, using the IPv6 geography address as the *Source* or *Destination Address*.

The screenshot shows the 'New Policy' configuration window. The 'ID' is 0, 'Name' is 'test-policy6-1', 'Incoming Interface' is 'wan2 (port6)', 'Outgoing Interface' is 'wan1 (port5)', 'Source' is 'all', 'Destination' is 'test-ipv6-geoip', 'Schedule' is 'always', 'Service' is 'ALL', and 'Action' is 'ACCEPT'. The 'Inspection Mode' is 'Flow-based'.

3. In the policy list, hover over the address to view details.

<a href="#">+ Create New</a>	<a href="#">Edit</a>	<a href="#">Delete</a>	<a href="#">Policy Lookup</a>	Search	Interface Pair View	By Sequence	IPv4 + IPv6
Name	From	To	Source	Destination	Action		
DMZ to WAN	port2	wan1 (port5)	all	all	ACC		
Internet Service in Policy	wan2 (port6)	wan1 (port5)	all	Google	ACC		
LB-policy	wan1 (port5)	port2	all	Vserver	ACC		
test-policy6-1	wan2 (port6)	wan1 (port5)	all	test-ipv6-geoip	ACC		
Implicit Deny	any	any	all	all	DEN		

IPv6 Address: test-ipv6-geoip

Type: IPv6 Geography

Comments: IPv6 Geography address

References: 1

[Edit](#)

100% 10 Updated: 16:34:58

### To configure an IPv6 geography-based address in the CLI:

1. Create an IPv6 geography-based address:

```
config firewall address6
  edit "test-ipv6-geoip"
    set type geography
    set color 6
    set comment "IPv6 Geography address"
    set country "CA"
  next
end
```

2. Use the IPv6 geography-based address in a policy:

```
config firewall policy
  edit 1
    set name "test-policy6-1"
    set srcintf "port6"
```

```
        set dstintf "port5"
        set srcaddr6 "all"
        set dstaddr6 "test-ipv6-geoip"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

## Wildcard addressing

Wildcard addresses are addresses that identify ranges of IP addresses, reducing the amount of firewall addresses and security policies required to match some of the traffic on your network. Wildcard addresses are an advanced feature, usually required only for complex networks with complex firewall filtering requirements. By using these wildcard addresses in the firewall configuration, administrators can eliminate creating multiple, separate IP based address objects and then grouping them to then apply to multiple security policies.

A wildcard address consists of an IP address and a wildcard netmask, for example, 192.168.0.56 255.255.0.255. In this example, the IP address is 192.168.0.56 and the wildcard netmask is 255.255.0.255. The IP address defines the networks to match and the wildcard netmask defines the specific addresses to match on these networks.

In a wildcard netmask, zero denotes ignoring the value of the octet in the IP address. This means the wildcard firewall address matches any number in this address octet. This also means that the number included in this octet of IP address is ignored and can be any number. Usually, if the octet in the wildcard netmask is zero, the corresponding octet in the IP address is also zero.

In a wildcard netmask, a number denotes matching addresses according to how the numbers translate into binary addresses. For example, the wildcard netmask is 255; the wildcard address will only match addresses with the value for this octet that is in the IP address part of the wildcard address. So, if the first octet of the IP address is 192 and the first octet of the wildcard netmask is 255, the wildcard address will only match addresses with 192 in the first octet.

In the above example, the wildcard address 192.168.0.56 255.255.0.255 would match the following IP addresses:

```
192.168.0.56
192.168.1.56
192.168.2.56
...
192.168.255.56
```

The wildcard addresses 192.168.0.56 255.255.0.255 and 192.168.1.56 255.255.0.255 define the same thing since the 0 in the wildcard mask means to match any address in the third octet.

The following is an example of how to configure a wildcard firewall address.

```
config firewall address
    edit example_wildcard_address
        set type wildcard
        set wildcard 192.168.0.56 255.255.0.255
    next
end
```



Wildcard firewall addresses are initially configured in the CLI. You cannot choose wildcard in the GUI when creating the address, but after the address is created in the CLI, it will show up in the GUI. The *Type* field shows a grayed-out value of *Wildcard* and the settings, other than the *Type*, can be edited.

---

## Interface subnet

Interface subnet address type enables an address object to be created automatically for the interface with which it is associated. Once created, the address object is updated when the interface IP/netmask changes on the associated interface.

To create the interface subnet address type object, create or edit an interface under *Network > Interfaces*, and enable the *Create address object matching subnet* option.



The *Create address object matching subnet* option is automatically enabled and displayed in the GUI when *Role* is set to *LAN* or *DMZ*.

When you disable the *Create address object matching subnet* option, the feature is disabled, and the associated firewall address is deleted.

### To create an interface subnet:

1. Go to *Network > Interfaces*.
2. Select *Create New > Interface* or select existing interface and *Edit*.
3. Set *Role* to either *LAN* or *DMZ*.
4. Verify that *Create address object matching subnet* is available and automatically enabled.

5. Click *OK*.

The following is an example of how to configure an interface subnet firewall address on the CLI:

```
config firewall address
  edit "port1 address"
    set type interface-subnet
    set interface "port1"
  next
end
```


Interface subnet addresses are automatically created when *Role* is set to *LAN* or *DMZ* in the *Interface* page, or you can manually configure interface subnet addresses in the CLI. You cannot choose *Interface Subnet* in the GUI when creating

the address, but after the address is created, *Interface Subnet* displays in the GUI. However, all the settings are grayed out, except *Name* and *Comments*, which can be edited.

When *Role* is set to *LAN* or *DMZ* in the *Interface* page, the new address object displays on the *Policy & Objects > Address > Interface Subnet* page.



After the address is created, the subnet is dynamically assigned to the address object, which can be seen in both GUI and CLI. If the interface address changes, the subnet will update dynamically.

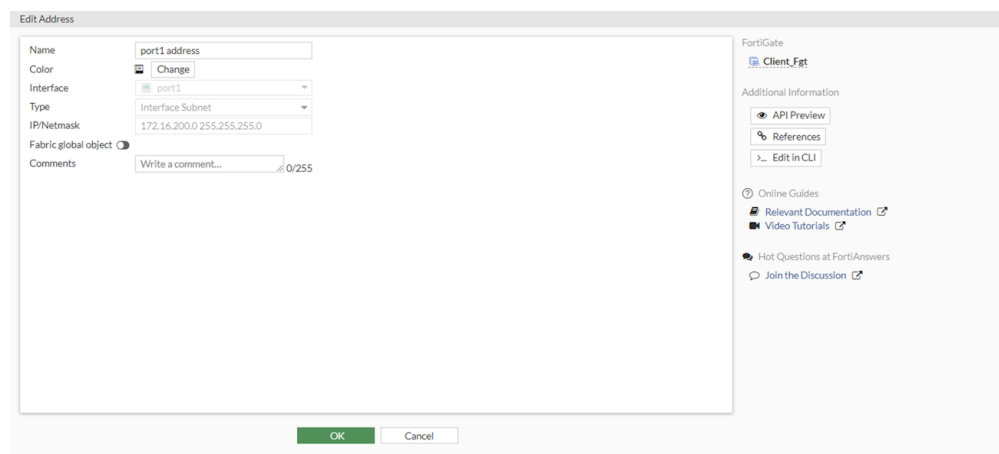

```
config firewall address
  edit "port1 address"
    set type interface-subnet
    set subnet 172.16.200.0 255.255.255.0
    set interface "port1"
  next
end
```

## Address group

The use of groups is not mandatory. However, adding individual addresses to a policy sometimes becomes tedious. If you use several different addresses with a given policy, these address objects can be grouped into an address group as it is much easier to add or subtract addresses from the group.

Security policies require addresses with homogenous network interfaces. Therefore, address groups should contain only addresses bound to the same network interface or Any.

For example, if address 1.1.1.1 is associated with port1, and address 2.2.2.2 is associated with port2, they cannot be in the same group. However, if 1.1.1.1 and 2.2.2.2 are configured with an interface of Any, they can be grouped, even if the addresses involve different networks.

### To create an address group:

1. Go to *Policy & Objects > Addresses*.
2. Go to *Create New > Address Group*.
3. In the *Category* field, select *IPv4 Group*.
4. Enter a *Group name* for the address object.

5. In the *Type* field, select *Group*.
6. Select the + in the *Members* field. The *Select Entries* pane opens.
7. Select members of the group. It is possible to select more than one entry. Select the x icon in the field to remove an entry.
8. Enable/disable *Static route configuration*.
9. Enter any additional information in the *Comments* field.
10. Click *OK*.

## Address folders

Some address objects logically belong to the same device, such as two IPs from the same computer. These address objects can be grouped into an address folder, which is an exclusive list of address objects that do not appear in other address groups or folders.

In the CLI, the folder type can be set after the member list is already populated. If the member list contains an incompatible entry, then the setting will be discarded when the *next/end* command is issued. If the folder type is set before the member list is populated, then the possible member entry list will be filtered according to the selected type.

### To create an address folder in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address Group* and enter a name.
3. For *Type*, select *Folder*.
4. For *Members*, click the + to add the addresses. Address folders and groups are exclusive, so the *Select Entries* window filters out address objects that are a member of an existing group or folder.

New Address Group

Group name: dev1-addr-comb

Color: Members of address folders can only belong to a single address folder.

Type: Group **Folder**

Members:

dev1-IP-nic1	x
dev1-IP-nic2	x
dev1-mac	x








 

 

 








+

Static route configuration: info ☐

Comments: Write a comment... 0/255

5. Click *OK*.
6. In the address table, expand the *Address Group* section to view the folder (*dev1-addr-comb*). The expandable

folder view shows the address folder's child objects:

	 safe-network1-devices	Address Group (Folder)	2 entries		0
	 dev1-addr-comb	Address Group (Folder)	3 entries		1
	 dev1-IP-nic1	Subnet	192.168.1.25/32		1
	 dev1-IP-nic2	Subnet	192.168.1.22/32		1
	 dev1-mac	Device (MAC Address)	00:0a:95:9d:68:16		1
	 dev2-addr-comb	Address Group (Folder)	4 entries		1
	 dev2-IP-nic1	Subnet	192.168.1.101/32		1
	 dev2-IP-nic2	Subnet	192.168.1.102/32		1
	 dev2-IP-nic3	Subnet	192.168.1.103/32		1
	 dev2-mac	Device (MAC Address)	11:5b:12:2c:87:02		1

### To configure an address folder in the CLI:

```
config firewall addrgrp
    edit "safe-network1-devices"
        set type folder
        set member "dev1-addr-comb" "dev2-addr-comb"
        set comment ''
        set exclude disable
        set color 13
    next
end

config firewall addrgrp
    edit "dev1-addr-comb"
        set type folder
        set member "dev1-IP-nic1" "dev1-IP-nic2" "dev1-mac"
        set comment ''
        set exclude disable
        set color 18
    next
end

config firewall addrgrp
    edit "dev2-addr-comb"
        set type folder
        set member "dev2-IP-nic1" "dev2-IP-nic2" "dev2-IP-nic3" "dev2-mac"
        set comment ''
        set exclude disable
        set color 5
    next
end
```

## Allow empty address groups

Address groups with no members can be configured in the GUI, CLI, and through the API. In previous versions of FortiOS, error messages appear for empty address groups and they cannot be configured.

### To create an empty address group in the GUI:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address Group*.
2. Enter a name.

3. Click **OK**. The *This field is required.* error is not displayed under the *Members* field.

### To create an empty address group in the CLI:

```
config firewall addrgrp
  edit "test-empty-addrgrp4-1"
  next
end
```

No error message is returned in the console.

## Address group exclusions

Specific IP addresses or ranges can be subtracted from the address group with the *Exclude Members* setting in IPv4 address groups.



This feature is only supported for IPv4 address groups, and only for addresses with a *Type* of *IP Range* or *Subnet*.

### To exclude addresses from an address group using the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Create a new address group, or edit an existing address group.
3. Enable *Exclude Members* and click the + to add entries.
4. Configure the other settings as needed.



## 5. Click OK.

The excluded members are listed in the *Exclude Members* column.

<div><div>+ Create New</div><div>Edit</div><div>Clone</div><div>Delete</div></div>		<div>Search</div>		<div>Synchronized</div>		
Name		Details	Interface	Type	Ref.	Exclude Members
Address Group						
Cosignees		all		Address Group	0	Marketing Network Marketing-DB
FinanceServersDMZ		Finance-Server1 Finance-Server2		Address Group	1	
FortiDEMO_local		FortiDEMO_local...		Address Group	3	
FortiDEMO_remote		FortiDEMO_remot...		Address Group	3	
G Suite		gmail.com wildcard.google.co...		Address Group	0	
0 Security Rating Issues					76% 49 Updated: 10:36:56	

0 Security Rating Issues

76% 49 Updated: 10:36:56

## To exclude addresses from an address group using the CLI:

```
config firewall addrgrp
  edit <address group>
    set exclude enable
    set exclude-member <address> <address> ... <address>
  next
end
```

## FSSO dynamic address subtype


The Fortinet Single Sign-ON (FSSO) dynamic firewall address subtype can be used in policies that support dynamic address types. The FortiGate will update the dynamic address used in firewall policies based on the source IP information for the authenticated FSSO users.

It can also be used with FSSO group information that is forwarded by ClearPass Policy Manager (CPPM) via FortiManager, and other FSSO groups provided by the FSSO collector agent or FortiNAC.

## To configure FSSO dynamic addresses with CPPM and FortiManager in the GUI:


- Create the dynamic address object:
  - Go to *Policy & Objects > Addresses*, and click *Create New > Address*.
  - For *Type*, select *Dynamic*.

- c. For *Sub Type*, select *Fortinet Single Sign-On (FSSO)*. The *Select Entries* pane opens and displays all available FSSO groups.
- d. Select one or more groups.
- e. Click *OK* to save the configuration.

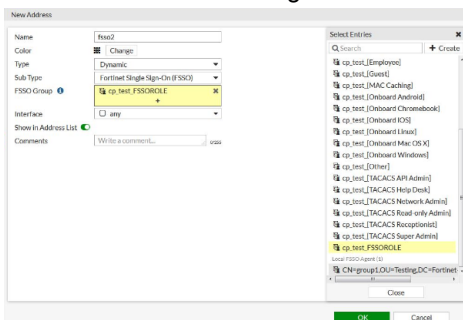

In the address table, there will be an error message for the address you just created (*Unresolved dynamic address: fssoc*). This is expected because there are currently no authenticated FSSO users (based on source IP) in the local FSSO user list.

2. Add the dynamic address object to a firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Create a new policy or edit an existing policy.
  - c. For *Source*, add the dynamic FSSO address object you just created.
  - d. Configure the rest of the policy as needed.
  - e. Click *OK* to save your changes.

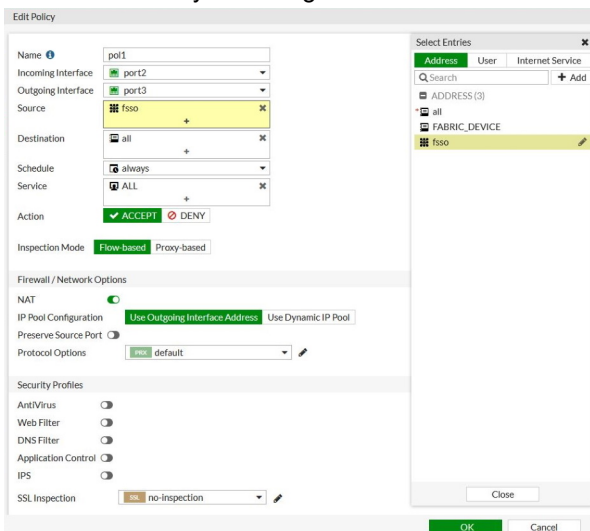

3. Test the authentication to add a source IP address to the FSSO user list:
  - a. Log in as user and use CPPM for user authentication to connect to an external web server. After successful authentication, CPPM forwards the user name, source IP address, and group membership to the FortiGate via FortiManager.
  - b. Go to *Monitor > Firewall User Monitor* to view the user name (*fssoc1*) and IP address.

Refresh   Deauthenticate   Show all FSSO Logins   Search					
User Name	User Group	Duration	IP Address	Traffic Volume	Method
fssoc1	FSSO-CPPM cp_test_FSSOROLE	44 minute(s) and 36 second(s)	10.1.100.185	0 B	Fortinet Single Sign-On

- c. Go to *Policy & Objects > Addresses* to view the updated address table. The error message no longer appears.

- d. Hover over the dynamic FSSO address to view the IP address (*fsso resolves to: 10.1.100.185*).

Name	Type	Details	Interface	Visibility	Ref.
FABRIC_DEVICE	Subnet	0.0.0.0/0		Visible	0
FIREWALL_AUTH_PORTAL_ADDRESS	Subnet	0.0.0.0/0		Hidden	0
SSL	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (ssl.root)	Visible	0
all	Subnet	0.0.0.0/0		Visible	1
fsso	Dynamic (FSSO)	cp_test_FSSOROLE		Visible	1

## To verify user traffic in the GUI:

- Go to **Log & Report > Forward Traffic**.

Details for the user *fsso1* are visible in the traffic log:

Date/Time	Source	Device	Destination	Application	Log Details
2019/08/29 11:23:06	fsso1 (10.1.100.185)		13.56.33.144 (ec2-13-56-33-144.us-west-1.compute.amazonaws.com)		General Date: 2019/08/29 Time: 11:22:42 Duration: 2s Session ID: 1360230 Virtual Domain: root NAT Translation Source
2019/08/29 11:22:42	fsso1 (10.1.100.185)		13.56.33.144 (ec2-13-56-33-144.us-west-1.compute.amazonaws.com)		Source IP: 10.1.100.185 NAT IP: 172.16.200.199 Source Port: 61820 Country/Region: Reserved Source Interface: port2 User: fsso1
2019/08/28 15:32:02	fsso2 (10.1.100.188)		20.189.79.72		Destination IP: 13.56.33.144 Port: 80 Country/Region: United States Destination Interface: port3
2019/08/28 15:29:27	fsso2 (10.1.100.188)		216.58.217.35 (sea15s08-in-f31e100.net)		Application Control Application Name: unscanned Category: undefined Risk: 6 Protocol: HTTP Service: HTTP
2019/08/28 15:24:55	fsso2 (10.1.100.188)		173.243.138.99		Data Received Bytes: 394 B Received Packets: 4 Sent Bytes: 504 B Sent Packets: 6
2019/08/28 15:24:51	fsso2 (10.1.100.188)		173.243.138.99		Action Action: Accept: session close Policy: pol1 (1) Policy: 2b89ed8a-c906-51e9-
2019/08/28 15:10:06	fsso2 (10.1.100.188)		72.21.91.29		
2019/08/28 15:10:00	fsso2 (10.1.100.188)		72.21.91.29		
2019/08/28 15:09:19	fsso2 (10.1.100.188)		72.21.81.200		
2019/08/28 15:09:18	fsso2 (10.1.100.188)		72.21.81.200		
2019/08/28 15:09:17	fsso2 (10.1.100.188)		72.21.81.200		
2019/08/28 14:32:02	fsso2 (10.1.100.188)		20.189.79.72		
2019/08/28 14:24:53	fsso2 (10.1.100.188)		173.243.138.99		
2019/08/28 14:24:48	fsso2 (10.1.100.188)		173.243.138.99		
2019/08/28 14:14:06	fsso2 (10.1.100.188)		104.80.88.122 (a104-80-88-122.deploy.static.akamaitechnologies.com)		
2019/08/28 14:14:00	fsso2 (10.1.100.188)		104.80.88.122 (a104-80-88-122.deploy.static.akamaitechnologies.com)		
2019/08/28 14:12:56	fsso2 (10.1.100.188)		72.21.81.200		
2019/08/28 14:12:56	fsso2 (10.1.100.188)		72.21.81.200		
2019/08/28 14:12:44	fsso2 (10.1.100.188)		151.139.128.14		
2019/08/28 14:12:38	fsso2 (10.1.100.188)		151.139.128.14		
2019/08/28 13:32:02	fsso2 (10.1.100.188)		20.189.79.72		
2019/08/28 12:32:02	fsso2 (10.1.100.188)		20.189.79.72		
2019/08/28 12:24:53	fsso2 (10.1.100.188)		173.243.138.100		
2019/08/28 12:24:49	fsso2 (10.1.100.188)		173.243.138.100		

- If another user is authenticated by CPPM, then the dynamic address *fsso* entry in the address table will be updated. The IP address for user *fsso2* (10.1.100.188) is now visible:

Name	Type	Details	Interface	Visibility	Ref.
FABRIC_DEVICE	Subnet	0.0.0.0/0		Visible	0
FIREWALL_AUTH_PORTAL_ADDRESS	Subnet	0.0.0.0/0		Hidden	0
SSL	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (ssl.root)	Visible	0
all	Subnet	0.0.0.0/0		Visible	1
fsso	Dynamic (FSSO)	cp_test_FSSOROLE		Visible	1

- Go to **FortiView > Sources** to verify that the users were able to successfully pass the firewall policy.

Source	Device	Bytes	Sessions	Bandwidth
fsso2 10.1.100.188		12.07 MB	173	10.32 Mbps
fsso1 10.1.100.185		4.42 MB	148	5.62 Mbps



If a user logs off and CPPM receives log off confirmation, then CPPS updates the FortiGate FSSO user list via FortiManager. The user IP address is deleted from the dynamic FSSO address, and the user is no longer be able to pass the firewall policy.

**To configure FSSO dynamic addresses with CPPM and FortiManager in the CLI:****1. Create the dynamic address object:**

```
config firewall address
  edit "fsso"
    set type dynamic
    set sub-type fsso
    set fsso-group "cp_test_FSSOROLE"
  next
end
```

**2. Add the dynamic address object to a policy:**

```
config firewall policy
  edit 1
    set name "pol1"
    set srcintf "port2"
    set dstintf "port3"
    set srcaddr "fsso"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set fsso disable
    set nat enable
  next
end
```

**To verify user traffic in the CLI:****1. Check the FSSO user list:**

```
diagnose debug authd fsso list
----FSSO logons----
IP: 10.1.100.185  User: fsso1  Groups: cp_test_FSSOROLE  Workstation:  MemberOf: FSSO-
CPPM cp_test_FSSOROLE
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----
```

**2. Check the authenticated firewall users list:**

```
diagnose firewall auth list
10.1.100.185, fsso1
type: fsso, id: 0, duration: 2928, idled: 2928
server: FortiManager
packets: in 0 out 0, bytes: in 0 out 0
group_id: 2 33554433
group_name: FSSO-CPPM cp_test_FSSOROLE
----- 1 listed, 0 filtered -----
```

After user traffic passes through the firewall, the nu

```
diagnose firewall auth list
10.1.100.185, fsso1
type: fsso, id: 0, duration: 3802, idled: 143
server: FortiManager
packets: in 1629 out 1817, bytes: in 2203319 out 133312
```

```
group_id: 2 33554433
group_name: FSSO-CPPM cp_test_FSSOROLE
----- 1 listed, 0 filtered -----
```

## ClearPass integration for dynamic address objects

ClearPass Policy Manager (CPPM) can gather information about the statuses of network hosts, for example, the latest patches or virus infections. Based on this information, CPPM send the IP addresses and current states, such as Healthy or Infected, to the FortiGate.

On the FortiGate, the IP addresses received from CPPM are added to a dynamic firewall address with the *clearpass-spt* subtype. This address can be used in any policy that supports dynamic addresses, such as Firewall or SSL-VPN policies.

In this example, you create two dynamic IP addresses that are used in two firewall policies (deny and allow). One policy allows traffic (host state = Healthy), and the other denies traffic (host state = Infected). When CPPM sends the information, the IP addresses are assigned according to their host state: Healthy or Infected.

You can then verify that traffic from the Infected host is denied access by the deny policy, and traffic from the Healthy host is allowed access by the allow policy.

### Create a REST API administrator

A REST API administrator is required to generate an authorization token for REST API messages, and to limit hosts that can send REST API messages to the FortiGate.

#### To create a REST API administrator in the GUI:

1. Go to *System > Administrators*.
2. Click *Create New > REST API Admin*.
3. Configure the *Username* and other information as needed.
4. Disable *PKI Group*.
5. In the *Trusted Hosts* field, enter *10.1.100.0/24*.

New REST API Admin

Username: cpi-back

Comments: 0/255

Administrator profile: clearpass

PKI Group: ☐

CORS Allow Origin: ☐


Restrict login to trusted hosts

Trusted Hosts: ☒ 10.1.100.0/24

OK Cancel

For this example, an administrator profile called *clearpass* was created with full read/write access. See [Administrator profiles on page 2241](#) for details.

6. Click **OK**.  
The *New API* key pane opens.

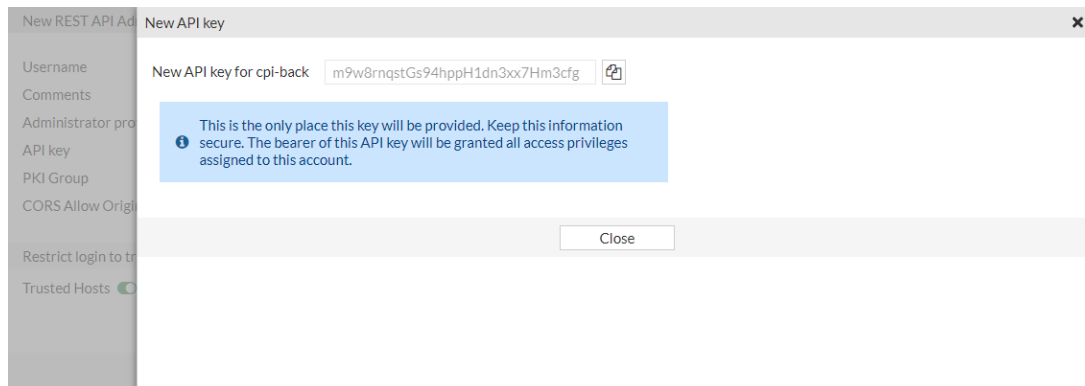

The API key is the REST API authorization token that is used in REST API messages sent by CPPM to the FortiGate.

7. Copy the API key to a secure location. A new key can be generated if this one is lost or compromised.
8. Click *Close*.

### To create a REST API administrator in the CLI:

```
config system api-user
    edit "cpi-back"
        set accprofile "clearpass"
        config trusthost
            edit 1
                set ipv4-trusthost 10.1.100.0 255.255.255.0
            next
        end
    next
end

execute api-user generate-key cp-api
    New API key: 0f1HxGHh9r9p74k7qgfHNNH40p51bjs
    NOTE: The bearer of this API key will be granted all access privileges assigned to the
    api-user cp-api.
```

## Create dynamic IP addresses with the clearpass subtype

Two dynamic IP addresses are required, one for the allow policy, and the other for the deny policy.

### To create the dynamic IP addresses:

```
config firewall address
    edit "cppm"
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt healthy
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
    edit "cppm-deny"
        set type dynamic
```

```
        set sub-type clearpass-spt
        set clearpass-spt infected
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
end
```

## Create firewall policies

Two firewall policies are required, one to accept traffic (*cppm-allow*), and the other to deny traffic (*cppm-deny*).

### To create the firewall policies in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Configure the allow policy:
  - a. Click *Create New*.
  - b. Enter a name for the policy.
  - c. Set *Source* set to *cppm*.
  - d. Set *Action* to *ACCEPT*.
  - e. Configure the remaining settings as needed.
  - f. Click *OK*.
3. Configure the deny policy:
  - a. Click *Create New*.
  - b. Enter a name for the policy.
  - c. Set *Source* set to *cppm-deny*.
  - d. Set *Action* to *DENY*.
  - e. Configure the remaining settings as needed.
  - f. Click *OK*.

### To create the firewall policies in the CLI:

```
config firewall address
    edit "cppm"
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt healthy
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
    edit "cppm-deny"
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt infected
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
```

```

    next
end

```

## Verification

Go to **Log & Report > Forward Traffic** to review traffic logs and ensure that traffic is allowed or denied as expected.

To verify that FortiGate addresses are assigned correctly, enter the following:

```

# diagnose firewall dynamic list
List all dynamic addresses:
cppm-deny: ID(141)
            ADDR(10.1.100.188)


cppm: ID(176)
      ADDR(10.1.100.185)
      ADDR(10.1.100.186)

```

## FortiNAC tag dynamic address

The FortiNAC tag dynamic firewall address type is used to store the device IP, FortiNAC firewall tags, and FortiNAC group information sent from FortiNAC by the REST API when user logon and logoff events are registered.

In the following example, the user connecting to the network will be required to first log on to the FortiNAC. When the login succeeds, the logon information is synchronized to the FortiGate using the REST API. The FortiGate updates the dynamic firewall address object with the user and IP information of the user device. This firewall address is used in firewall policies to dynamically allow network access for authenticated users, thereby allowing SSO for the end user.

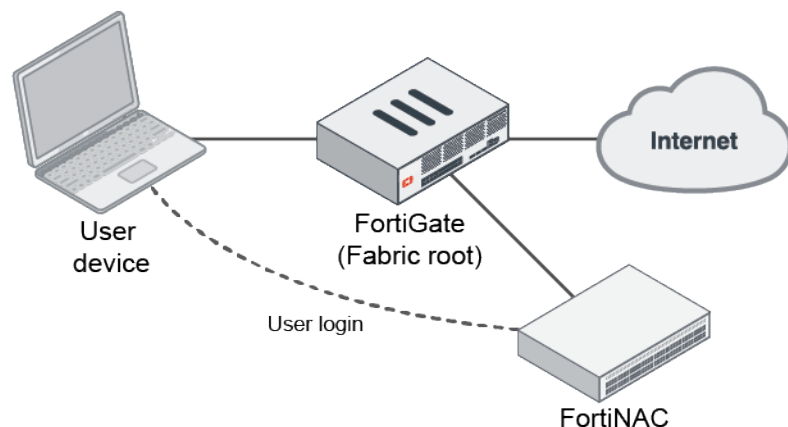

This example assumes the following:

- The FortiGate is the Security Fabric root device (refer to [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more information).
- The FortiNAC is running version 9.2.2 (or later), and it is connected to the Security Fabric (refer to [Configuring FortiNAC on page 2644](#) for more information).
- Firewall tags and groups have been assigned in FortiNAC to the registered FortiGate (refer to [Virtualized Devices](#) for more information). Unlike firewall tags, which are simple labels that can be configured on FortiNAC, firewall groups can be local, built-in, user-defined, or remote user groups imported from a remote server used for user authentication. Only groups that the user of the current logon event belongs to are sent to the FortiGate. Firewall tags are sent for all user authentication.



### To use a FortiNAC tag dynamic firewall address in a policy:

1. Trigger two user logon events on the FortiNAC.
2. In FortiOS, go to *Policy & Objects > Addresses*, and expand the *FortiNAC Tag (IP Address)* section to view the newly created dynamic firewall address objects. The dynamic firewall addresses matching the current user logon status on FortiNAC have the current IP address of user devices. The addresses without matching user logons are marked with a red exclamation mark (!).

<div> <div>+ Create New</div> <div>Edit</div> <div>Clone</div> <div>Delete</div> <div>Search</div> <div>Q</div> <div>Synchronized</div> </div>						
Name	Details	Interface	Fabric Sync	Type	Ref.	
IP Range/Subnet						
FABRIC_DEVICE	0.0.0.0/0		Disable	Address	0	
FIREWALL_AUTH_PORTAL_ADDRESS	0.0.0.0/0		Disable	Address	0	
SSLVPN_TUNNEL_ADDR1	10.212.134.200 - 10.212.134.210		Disable	Address	3	
all	0.0.0.0/0		Disable	Address	12	
ipsec_range	10.1.10.1 - 10.1.10.24		Disable	Address	0	
van_vpn_range	1.1.1.1 - 1.1.1.5		Disable	Address	0	
FortiNAC Tag (IP Address)						
!! FNVCMATM... Forced User Authentication Ex...			Disable	Address	0	
!! FNVCMATM... QA-group1	10.1.100.184-10.1.100.185		Disable	Address	1	
!! FNVCMATM... QA-group2	10.1.100.184-10.1.100.185		Disable	Address	1	
!! FNVCMATM... Registered Hosts	10.1.100.184-10.1.100.185		Disable	Address	1	
!! FNVCMATM... g1			Disable	Address	0	
!! FNVCMATM... g2	10.1.100.184-10.1.100.185		Disable	Address	0	
!! FNVCMATM... group1			Disable	Address	0	
!! FNVCMATM... group2	10.1.100.184-10.1.100.185		Disable	Address	0	
Dynamic (ClearPass)						
!! cp-healthy			Disable	Address	0	
0 Security Rating Issues						
0% Updated: 10:45:39						

3. Go to *Policy & Objects > Firewall Policy* and click *Create New* or edit an existing policy. FortiNAC tag dynamic firewall address can be used as source or destination addresses.

Edit Policy

Name

pol1

Incoming Interface

port2

Outgoing Interface

port1

Source

FNVCMATM... QA-grou

FNVCMATM... QA-grou

Destination

FNVCMATM... Register

Schedule

always

Service

ALL

Action

ACCEPT

DENY

Inspection Mode

Flow-based

Proxy-based

Firewall / Network Options

NAT

NAT46

NAT64

IP Pool Configuration

Use Outgoing Interface Address

Preserve Source Port

PROT

default

Security Profiles

Select Entries

Address

User

Internet Service

Q Search

+ Create

ADDRESS (19)

all

cp-healthy

cp-infected

FABRIC\_DEVICE

FIREWALL\_AUTH\_PORTAL\_ADDRESS

FNVCMATM... Forced User A

FNVCMATM... g1

FNVCMATM... g2

FNVCMATM... group1

FNVCMATM... group2

FNVCMATM... QA-group1

FNVCMATM... QA-group2

FNVCMATM... Registered Hc

fso1

ipsec\_range

loop address

sepm-address

SSLVPN\_TUNNEL\_ADDR1

Close

Statistics (since last reset)

ID

2

Last used

1 day(s) ago

First used

49 day(s) ago

Active sessions

0

Hit count

73,053

Total bytes

2.49 GB

Current bandwidth

0 bps

Clear Counters

Last 7 Days

Bytes

IPv4 + IPv6

500 MB

400 MB

300 MB

200 MB

100 MB

0 B

Dec 10

Dec 11

Dec 12

Dec 13

Dec 14

Dec 15

Dec 16

Dec 17

nTurbo


SPU

Software

OK

Cancel

- Configure the settings as needed, then click **OK**. In this policy, traffic can only pass if it originates from any of the mapped IP addresses (10.1.100.184 and 10.1.100.185); other traffic cannot pass.
- Hover over the address in the policy, then in the tooltip, click **View Matched Addresses**.

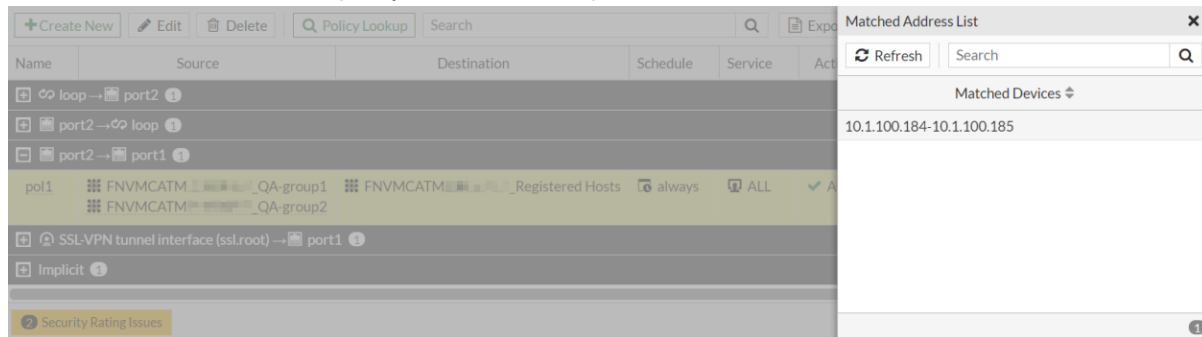


- Have one of the users log off from the FortiNAC.
- In FortiOS, go to **Policy & Objects > Addresses** and verify the **FortiNAC Tag** addresses. A user logged off from 10.1.100.184, so now only 10.1.100.185 is mapped to the dynamic firewall objects.

Name	Details	Interface	Fabric Sync	Type	Ref.
<b>IP Range/Subnet</b>					
FABRIC_DEVICE	0.0.0.0/0		Disable	Address	0
FIREWALL_AUTH_PORTAL_ADDRESS	0.0.0.0/0		Disable	Address	0
SSLVPN_TUNNEL_ADDR1	10.212.134.200 - 10.212.134.210		Disable	Address	3
all	0.0.0.0/0		Disable	Address	12
ipsec_range	10.1.10.1 - 10.1.10.24		Disable	Address	0
van_vpn_range	1.1.1.1 - 1.1.1.5		Disable	Address	0
<b>FortiNAC Tag (IP Address)</b>					
FNVCMATM_..._Forced User Authentication Ex...			Disable	Address	0
FNVCMATM_..._QA-group1	10.1.100.185		Disable	Address	1
FNVCMATM_..._QA-group2	10.1.100.185		Disable	Address	1
FNVCMATM_..._Registered Hosts	10.1.100.185		Disable	Address	1
FNVCMATM_..._g1			Disable	Address	0
FNVCMATM_..._g2	10.1.100.185		Disable	Address	0
FNVCMATM_..._group1			Disable	Address	0
FNVCMATM_..._group2	10.1.100.185		Disable	Address	0
<b>Dynamic (ClearPass)</b>					
cp-healthy			Disable	Address	0

All firewall policies using those objects are automatically updated.

- Go to **Policy & Objects > Firewall Policy**. Hover over the address in the policy, then in the tooltip, click **View Matched Addresses**.

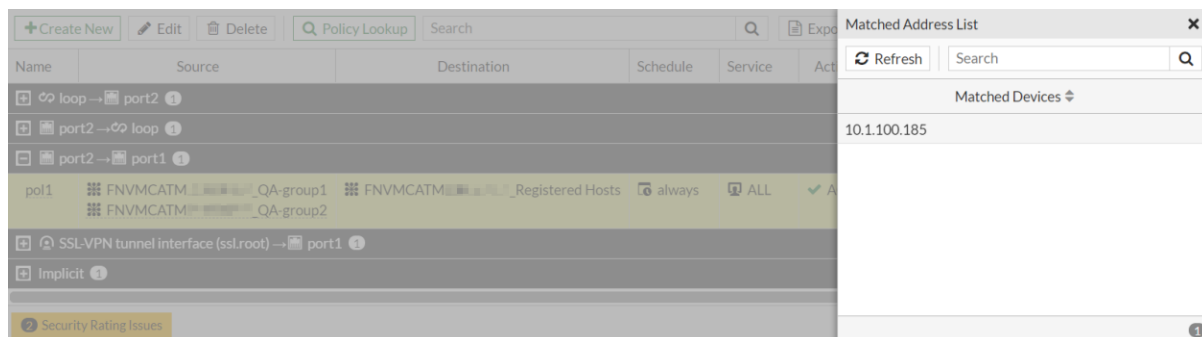

The firewall policy was automatically updated so that traffic from 10.1.100.184 can no longer pass, and only traffic from 10.1.100.185 can pass.

## MAC addressed-based policies

MAC addresses can be added to the following IPv4 policies:

- Firewall
- Virtual wire pair
- ACL
- Central SNAT
- DoS

A MAC address is a link layer-based address type and it cannot be forwarded across different IP segments. In FortiOS, you can configure a firewall address object with a singular MAC, wildcard MAC, multiple MACs, or a MAC range.

FortiOS only supports the MAC address type as source address for policies in NAT mode VDOM. When you use the MAC address type in a policy as source address in NAT mode VDOM, IP address translation (NAT) is still performed according to the rules defined in the policy. The MAC address type only works for source address matching. It does not have any association with NAT actions.

For policies in transparent mode or the virtual wire pair interface, you can use the MAC address type as source or destination address.

### To configure a MAC address using the GUI:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Enter a name.
3. For *Category*, select *Address*.
4. For *Type*, select *Device (MAC Address)*.
5. Enter the MAC address.

The screenshot shows the 'New Address' configuration window in the FortiOS GUI. The 'Category' tab is selected, and the 'Address' sub-tab is active. The configuration fields are as follows:

- Category:** Address (selected from a dropdown)
- Name:** test-mac-addr1
- Color:** Change (button)
- Type:** Device (MAC Address) (selected from a dropdown)
- MAC address:** 00:0c:29:41:98:88
- Interface:** any (selected from a dropdown)
- Comments:** Write a comment... (text area)

The right sidebar displays the 'FortiGate-VM64' configuration page. Under 'Additional Information', there is an 'API Preview' button. Below that, the 'Dynamic Address' section is expanded, showing a list of guides: 'Configuring an AWS Dynamic Address', 'Configuring an Azure Dynamic Address', 'Configuring a Google Cloud Platform Dynamic Address', 'Configuring an Oracle Cloud Infrastructure Dynamic Address', and 'Configuring an OpenStack Dynamic Address'. At the bottom, there is a 'Documentation' section with links to 'Online Help' and 'Video Tutorials'.

6. Click **OK**.

7. Go to *Policy & Objects > Firewall Policy* to apply the address type to a policy in NAT mode VDOM:

- a. For *Source*, select the MAC address you just configured.
- b. For *Destination*, select an address.



In NAT mode VDOM, this address type cannot be used as destination address.

---

- c. Configure the other settings as needed.
- d. Click OK.

### To configure a MAC address using the CLI:

1. Create a new MAC address:

```
config firewall address
  edit "test-mac-addr1"
    set type mac
    set macaddr 00:0c:29:41:98:88
  next
end
```

2. Apply the address type to a policy. In transparent mode or the virtual wire pair interface, this address type can be mixed with other address types in the policy:

```
config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "test-mac-addr1" "10-1-100-42"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set nat enable
  next
end
```

## ISDB well-known MAC address list

The Internet Service Database (ISDB) includes well-known vendor MAC address range lists. The lists can only be used for source MAC addresses in IPv4 policies, and include the vendor name and the MAC address ranges that the vendor belongs to.

### To view the vendor list:

```
# diagnose vendor-mac id
Please input Vendor MAC ID.
ID: 1 name: "Asus"
ID: 2 name: "Acer"
ID: 3 name: "Amazon"
ID: 4 name: "Apple"
```

```
ID: 5 name: "Xiaomi"
ID: 6 name: "BlackBerry"
ID: 7 name: "Canon"
ID: 8 name: "Cisco"
ID: 9 name: "Linksys"
ID: 10 name: "D-Link"
ID: 11 name: "Dell"
ID: 12 name: "Ericsson"
ID: 13 name: "LG"
ID: 14 name: "Fujitsu"
ID: 15 name: "Fitbit"
ID: 16 name: "Fortinet"
ID: 17 name: "OPPO"
ID: 18 name: "Hitachi"
ID: 19 name: "HTC"
ID: 20 name: "Huawei"
ID: 21 name: "HP"
ID: 22 name: "IBM"
ID: 23 name: "Juniper"
ID: 24 name: "Lenovo"
ID: 25 name: "Microsoft"
ID: 26 name: "Motorola"
ID: 27 name: "Netgear"
ID: 28 name: "Nokia"
ID: 29 name: "Nintendo"
ID: 30 name: "PaloAltoNetworks"
ID: 31 name: "Polycom"
ID: 32 name: "Samsung"
ID: 33 name: "Sharp"
ID: 34 name: "Sony"
ID: 35 name: "Toshiba"
ID: 36 name: "VMware"
ID: 37 name: "Vivo"
ID: 38 name: "Zyxel"
ID: 39 name: "ZTE"
```

### To view the MAC address ranges for a vendor:

```
# diagnose vendor-mac id 16
Vendor MAC: 16(Fortinet)
Version: 0000700021
Timestamp: 201908081432
Number of MAC ranges: 6
00:09:0f:00:00:00 - 00:09:0f:ff:ff:ff
04:d5:90:00:00:00 - 04:d5:90:ff:ff:ff
08:5b:0e:00:00:00 - 08:5b:0e:ff:ff:ff
70:4c:a5:00:00:00 - 70:4c:a5:ff:ff:ff
90:6c:ac:00:00:00 - 90:6c:ac:ff:ff:ff
e8:1c:ba:00:00:00 - e8:1c:ba:ff:ff:ff
```

### To query the vendor of a specific MAC address or range:

```
# diagnose vendor-mac match 00:09:0f:ff:ff:ff 48
Vendor MAC: 16(Fortinet), matched num: 1
```

**To use the vendor ID in a firewall policy:**

```
config firewall policy
  edit 9
    set name "policy_id_9"
    set uuid 6150cf30-308d-51e9-a7a3-bcbd05d61f93
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set vendor-mac 36 16
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set auto-asic-offload disable
    set nat enable
  next
end
```

Only packets whose source MAC address belong to Fortinet or VMware are passed by the policy.

## IPv6 MAC addresses and usage in firewall policies

Users can define IPv6 MAC addresses that can be applied to the following policies:

- Firewall
- Virtual wire pair
- ACL/DoS
- Central NAT
- NAT64
- Local-in

In FortiOS, you can configure a firewall address object with a singular MAC, wildcard MAC, multiple MACs, or a MAC range. In this example, a firewall policy is configured in a NAT mode VDOM with the IPv6 MAC address as a source address.



IPv6 MAC addresses cannot be used as destination addresses in VDOMs when in NAT operation mode.

---

**To configure IPv6 MAC addresses in a policy in the GUI:**

1. Create the MAC address:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. For *Category*, select *IPv6 Address*.
  - c. Enter an address name.
  - d. For *Type*, select *Device (MAC Address)*.

- e. Enter the the MAC address.

- f. Click OK.

2. Configure the policy:

- Go to *Policy & Objects > Firewall Policy* and click *Create New*.
- For *Source*, select the IPv6 MAC address object.
- Configure the other settings as needed.
- Click OK.

**To configure IPv6 MAC addresses in a policy in the CLI:**

1. Create the MAC address:

```
config firewall address6
  edit "test-ipv6-mac-addr-1"
    set type mac
    set macaddr 00:0c:29:b5:92:8d
  next
end
```

2. Configure the policy:

```
config firewall policy
  edit 2
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set srcaddr6 "test-ipv6-mac-addr-1" "2000-10-1-100-0"
    set dstaddr6 "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set auto-asic-offload disable
    set nat enable
  next
end
```

## Protocol options

Firewall policies contain a *Protocol Options* field that defines the parameters for handling protocol-specific traffic. Multiple protocol options profiles can be configured in FortiOS since the requirements may differ between policies. A single protocol options profile is applied per policy, but the profile can be used in multiple policies.

To create a protocol options profile, go to *Policy & Objects > Protocol Options*. The following settings can be configured.

### Log oversized files

Enable this option to log the occurrence of oversized files being processed. This does not change how they are processed. It only allows the FortiGate to log that they were either blocked or allowed through.

It is common practice to allow larger files through without antivirus processing. Monitor the logs for the frequency of oversized file processing to determine whether or not to alter the settings for treating oversized files. The threshold setting for oversized files and emails is located in the *Common Options* section.

### RPC over HTTP

This protocol is used by Microsoft Exchange Servers to perform virus scanning on emails that use RPC over HTTP.

### Protocol port mapping

To optimize the FortiGate's resources, the mapping and inspection of the following protocols can be enabled or disabled:

- |        |        |        |
|--------|--------|--------|
| • HTTP | • IMAP | • MAPI |
| • SMTP | • FTP  | • DNS  |
| • POP3 | • NNTP | • CIFS |

Each protocol has a default TCP port. The ports can be modified to inspect any port with flowing traffic. The packet headers indicate which protocol generated the packet.



Protocol port mapping only works with proxy-based inspection. Flow-based inspection inspects all ports regardless of the protocol port mapping configuration.

---

### Common options

The *Comfort Clients* and *Block Oversized File/Email* options apply to multiple protocols.

#### Comfort clients

When proxy-based antivirus scanning is enabled, the FortiGate buffers files as they are downloaded. Once the entire file is captured, the FortiGate begins scanning the file. The user must wait during the buffering and scanning procedure.



After the scan is completed and if no infection is found, the file is sent to the next step in the process flow. If the file is large, this part of the process can take some time. In some cases, enough time that some users may get impatient and cancel the download.

The *Comfort Clients* option mitigates this potential issue by feeding a trickle of data while waiting for the scan to complete. The user is aware that processing is taking place, and that there has not been a failure in the transmission. The slow transfer rate continues until the antivirus scan is complete. The transfer will proceed at full speed once the file is scanned successfully and does not contain any viruses.

If there is evidence of an infection, the FortiGate caches the URL and drops the connection. The client does not receive any notification of what happened because the download to the client has already started. Instead, the download stops and the user is left with a partially downloaded file. If the user tries to download the same file again within a short period of time, the cached URL is matched and the download is blocked. A notification is displayed that the download was blocked. The number of URLs in the cache is limited by the size of the cache.

Client comforting is available for HTTP and FTP traffic. If the FortiGate supports SSL content scanning and inspection, client comforting can be configured for HTTPS and FTPS traffic.



Buffering the entire file allows the FortiGate to eliminate the danger of missing an infection due to fragmentation because the file is reassembled before examination. This buffering is performed whenever the *Comfort Clients* option is disabled.

Client comforting can send unscanned and potentially infected content to the client, so only enable this option if you are prepared to accept this risk. Keeping the client comforting interval high and the amount low will reduce the amount of potentially infected data that is downloaded.

---

## Block oversized files and emails

This option is related to antivirus scanning. The FortiGate has a finite amount of resources to buffer and scan a file. If a large file (such as an ISO image or video file) is downloaded, this could overwhelm or exceed the FortiGate's memory, especially if other large files are being downloaded at the same time.

A threshold is assigned to identify an oversize file or email. The default is 10 MB. The range varies per model, and the minimum is 1 MB. Any file or email over this threshold will not be processed by policies applying the antivirus security profile.



If the FortiGate enters conserve mode on a regular basis, lowering the threshold can lessen the impact of processing the files on memory. This can increase risk, even though malware is more likely to be in smaller files.

---

## Web options

The *Chunked Bypass* option applies to traffic containing web protocols.

### Chunked bypass

Chunked bypass is a mechanism in HTTP 1.1 that allows a web server to start sending chunks of dynamically generated output in response to a request before actually knowing the actual size of the content. For dynamically generated

content, enabling chunked bypass speeds up the initial response to HTTP requests, but the content is not held in the proxy as an entire file before proceeding.

## Email options

The *Allow Fragmented Messages* and *Append Signature (SMTP)* options apply to email protocols.

### Allow fragmented messages

The specifications of RFC 2046 allow for the breaking up of emails and sending the fragments in parallel to be rebuilt and read at the other end by the mail server. It was originally designed to increase the performance over slower connections where larger email messages were involved. Feasibility of using this function depends on the mail configuration. Outside of Microsoft Outlook, not many email clients are set up to break up messages like this. The drawback of this feature is that if malware is broken up between multiple fragments of the message, there is a risk that it will not be detected by some antivirus configurations because all the code may not be present at the same time to identify the malware.

### Append signature

This option adds a plain text email signature to SMTP email messages as they pass through the FortiGate. The message maximum is 1023 characters.

This feature works best in an environment where there is some standardization of what goes into the senders' personal signatures so that there is no duplication or contradiction of information. For example:

- *This email should not be forwarded without prior approval.*
- *Please consider the environment before printing this email.*
- *For questions regarding purchasing our products, please call ...*

## Traffic shaping

A FortiGate provides quality of service (QoS) by applying bandwidth limits and prioritization to network traffic. Traffic shaping is one technique used by the FortiGate to provide QoS. A basic approach to traffic shaping is to prioritize higher priority traffic over lower priority traffic during periods of traffic congestion. This provides a stabilizing effect for important traffic while throttling less important traffic.

The FortiGate can be configured to deliver traffic shaping with policing or traffic shaping with queuing. The general difference between the two is as follows:

Technique	Description
Traffic shaping with policing	When traffic exceeds the configured bandwidth limits, traffic is dropped.
Traffic shaping with queuing	When traffic exceeds the configured bandwidth limits, traffic is delayed for transport until bandwidth frees up. Traffic may be dropped if the queues are full.

Policing and queuing can both prioritize traffic and deliver guaranteed bandwidth and maximum bandwidth by setting bandwidth limits. The implementation differs though, since queuing uses queues, and policing does not. In queuing,

before a packet egresses an interface, it is first enqueued to a queue using an algorithm such as RED or FIFO. The kernel dequeues the packet based on the HTB algorithm before sending it out. In policing, traffic simply drops if it is over the allocated bandwidth.

The following topics provide information about configuring traffic shaping:

- [Traffic shaping policies on page 1191](#)
- [Traffic shaping profiles on page 1194](#)
- [Traffic shapers on page 1204](#)
- [Global traffic prioritization on page 1216](#)
- [DSCP matching and DSCP marking on page 1219](#)
- [Examples on page 1223](#)

## Configuration methods

There are different methods to configure traffic shaping on the FortiGate. The following table lists the methods and their capabilities in order of preference. If all three methods are configured, the first will be preferred over the second, which is preferred over the third.

Method	Policing		Queuing
	Traffic prioritization	Guaranteed and maximum bandwidth limits	Traffic queuing
Traffic shaping profile *	Yes	Yes, based on percentage of outbandwidth	Yes
Traffic shaper	Yes	Yes, based on rate	No
Global traffic prioritization	Yes	No	No

\* Traffic shaping profiles are configured as either policing or queuing types. Queuing allows for additional options when configuring a shaping class entry.

The features of each method's implementation are slightly different. The following is a brief summary of the traffic policing features and the approach each method takes.

### Traffic prioritization

The FortiGate can place packets into different priority levels in order to prioritize certain traffic over others.

Method	Description
Traffic shaping profile	Traffic is placed into classes. A total of 30 classes are available. For each class, traffic can be configured into five priority levels.
Traffic shaper	Traffic can be prioritized into the high (2), medium (3), or low (4) levels. When traffic is below the guaranteed bandwidth of the shaper, the traffic is automatically applied the critical level (1).

Method	Description
Global traffic prioritization	Traffic is prioritized into high (2), medium (3), or low (4) based on ToS (type of service) or DSCP.

## Guaranteed and maximum bandwidth limits

The general purpose for configuring guaranteed bandwidth is to allocate a certain proportion of the total outbandwidth to guarantee transport for a certain type of traffic. This is configured and handled differently in each method.

A traffic shaping profile, when applied to an interface's egress shaping profile, can be configured to use up to 100% of the interface's configured bandwidth between all the classes. It does not matter what priority is configured in each class. The guaranteed bandwidth is always honored.

Traffic shapers, however, do not have a hard limit on the guaranteed bandwidth. Administrators need to be aware how much guaranteed bandwidth has been allocated to all their traffic shapers, so that they do not exceed the total outbandwidth of an interface. Traffic under the guaranteed bandwidth of a traffic shaper is given a priority of one. If the total traffic with priority one exceeds the total outbandwidth, traffic can be dropped.

The maximum bandwidth limit caps the maximum bandwidth that can be used. This is configured as a percentage of the outbandwidth in a traffic shaping profile. It is configured as a rate for traffic shapers.

## Configuring outbandwidth

Traffic shaping is generally configured for egress traffic leaving the FortiGate. Therefore, it is necessary for the interface outbandwidth to be defined for traffic prioritization to take place in all of the traffic shaping configuration methods. Interface outbandwidth is also needed when defining the guaranteed and maximum bandwidth in a traffic shaping profile.

For traffic shapers, configuring outbandwidth is not necessary to apply maximum bandwidth limits; however, outbandwidth is necessary for guaranteed bandwidth. Traffic under the guaranteed bandwidth limit on a traffic shaper is given priority 1. If outbandwidth is not configured, traffic prioritization does not take place and the priority is meaningless.

## Traffic shaping policy

Traffic shaping profiles and traffic shapers are methods of policing traffic. Traffic shaping policies are used to map traffic to a traffic shaper or assign them to a class.

A traffic shaping policy is a rule that matches traffic based on certain IP header fields and/or upper layer criteria. For example, it can match traffic based on source and destination IP, service, application, and URL category. One common use case is to match traffic based on the ToS or DS (differentiated services) field in the IP header. This allows Type of Service or Differentiated Services (DiffServ) tags to be read from traffic from a downstream device and prioritized accordingly on the FortiGate.


## DSCP matching and DSCP marking

DSCP matching and DSCP marking can be performed on a firewall shaping policy and a regular firewall policy. DSCP matching is used to match DSCP tags from ingress traffic, and DSCP marking is used to change the DSCP tag on egress traffic.

In a firewall shaping policy and regular firewall policy, use the `tos` and `tos-mask` fields to perform DSCP matching. Use the `diffserv-forward` and `diffserv-reverse` fields to perform DSCP marking.

## Traffic shaping policies

As mentioned in [Traffic shaping on page 1188](#), traffic shaping starts with the traffic shaping policy. Traffic shaping policies are used to map traffic to a traffic shaper or assign them to a class. Traffic is then shaped by the shaper or the shaping profile that is applied on an interface.

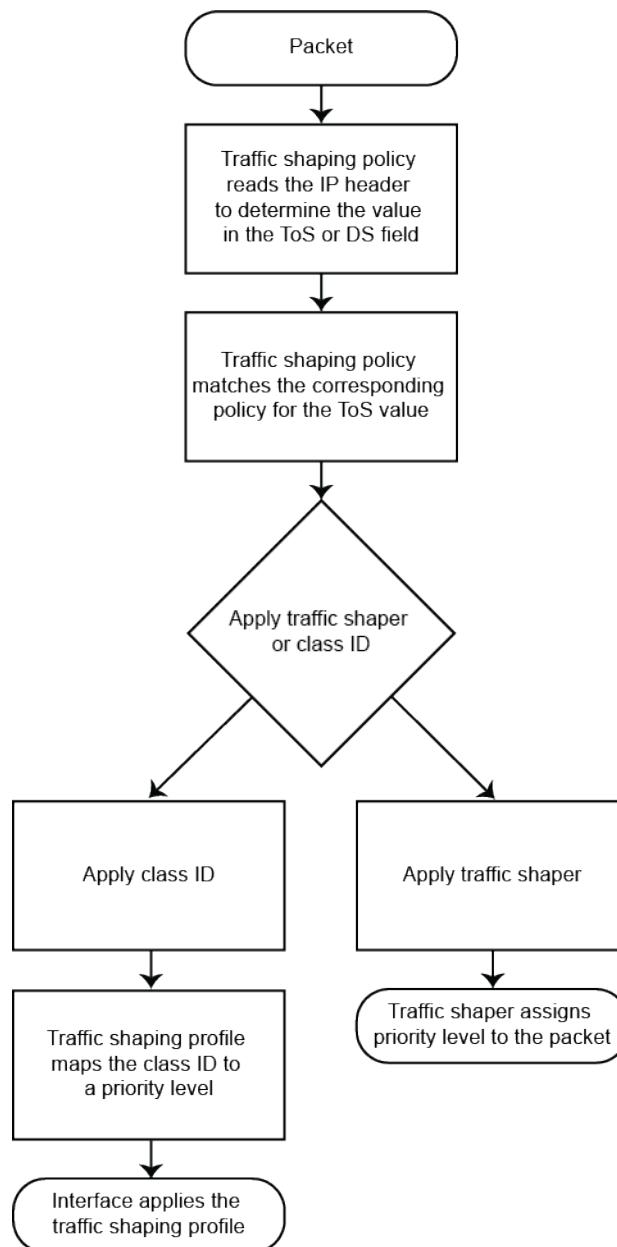

Traffic can also be shaped by applying traffic shapers directly on a firewall policy. However, this legacy approach can only be configured from the CLI, and is not a preferred method for applying traffic shaping. As the number of firewall

policies increases, managing shaping on each individual policy becomes increasingly difficult. For the same reason, it is also not recommended to mix the legacy approach with traffic shaping policies to avoid the added complexity.

## Overview

A traffic shaping policy is a rule that matches traffic based on certain IP header fields and/or upper layer criteria. When traffic hits the firewall, the FortiGate will first look up a firewall policy, and then match a shaping policy. The matching traffic will apply a traffic shaper, class ID, or assign a DSCP DiffServ tag to the outgoing traffic.

The traffic shaping policies must be placed in the correct order in the traffic shaping policy list page to obtain the desired results. Policies are matched from top-down, so the traffic shaping policies should be arranged in a sequence that places the more granular policies above general policies.

The policy can be configured by going to *Policy & Objects > Traffic Shaping* and selecting the *Traffic Shaping Policies* tab. If the menu does not display the traffic shaping settings, go to *System > Feature Visibility* and enable *Traffic Shaping*.

## Configuring traffic shaping policies

A traffic shaping policy can be split into two parts:

- Options used to match the traffic
- Options used to apply actions to the matched traffic

In the GUI, the options are configured in the *If Traffic Matches* and *Then* sections. In the CLI, all options are configured under `config firewall shaping-policy`. Some options can only be configured from the CLI.

The following options can be configured for traffic matching criteria:

GUI option	CLI option	Description
<i>Source</i>		
<i>Address</i>	<code>set srcaddr &lt;address_object&gt;</code>	Select the address object to match the source IP.
<i>User</i>	<code>set users &lt;user_object&gt;</code>	Select the user object to match the user authenticated for the session.
<i>Internet Service</i>	<pre>set internet-service-src enable set internet-service-src-name &lt;name&gt; set internet-service-src-group &lt;group&gt; set internet-service-src-custom &lt;custom&gt; set internet-service-src-custom-group &lt;custom_group&gt;</pre>	Select the internet service to match the source of the incoming traffic. Internet service currently cannot be used with source address.
<i>Destination</i>		

GUI option	CLI option	Description
<i>Address</i>	<code>set dstaddr &lt;address_object&gt;</code>	Select the address object to match the destination IP.
<i>Internet Service</i>	<code>set internet-service enable</code> <code>set internet-service-name &lt;name&gt;</code> <code>set internet-service-group &lt;group&gt;</code> <code>set internet-service-custom &lt;custom&gt;</code> <code>set internet-service-custom-group &lt;custom_group&gt;</code>	Select the internet service to match the destination of the incoming traffic. Internet service currently cannot be used with destination address and service.
<i>Schedule</i>	<code>set schedule &lt;schedule&gt;</code>	Enable to select a schedule (one-time, recurring, or group).
<i>Service</i>	<code>set service &lt;service&gt;</code>	Select the service or service group for the traffic.
<i>Application</i>		Application control must be enabled in the related firewall policy to learn the application of the traffic.
<i>Application</i>	<code>set application &lt;application&gt;</code>	Select the application to match the application of the traffic.
<i>Category</i>	<code>set app-category &lt;category&gt;</code>	Select the application category to match the application of the traffic.
<i>Group</i>	<code>set app-group &lt;groups&gt;</code>	Select the application group to match the application of the traffic.
<i>URL Category</i>	<code>set url-category &lt;category&gt;</code>	<p>Select the URL category to match the URL of the traffic.</p> <p>A web filter profile must be enabled in the related firewall policy to know the URL of the traffic (see <a href="#">Web filter on page 1314</a>).</p>
n/a	<code>set tos-mask &lt;hexadecimal_mask&gt;</code> <code>set tos &lt;value&gt;</code> <code>set tos-negate {enable   disable}</code>	<p>Specify the type of service (ToS) and mask to match.</p> <p>These options can only be configured in the CLI.</p>

The following options can be configured for actions to apply to the matched traffic:

GUI option	CLI option	Description
<i>Outgoing interface</i>	<code>set dstintf &lt;interface&gt;</code>	Select the destination interface that the traffic shaping applies to (required).
<i>Apply shaper</i>		

GUI option	CLI option	Description
<i>Shared shaper</i>	<code>set traffic-shaper &lt;shaper&gt;</code>	Select the shared shaper to be applied to traffic in the ingress-to-egress direction. For example, on traffic that egresses on the wan interface, the shaper is applied to upload or outbound traffic.
<i>Reverse shaper</i>	<code>set traffic-shaper-reverse &lt;shaper&gt;</code>	Select the reverse shaper to be applied to traffic in the egress-to-ingress direction. For example, on traffic that egresses on the wan interface, the shaper is applied to download or inbound traffic.
<i>Per-IP shaper</i>	<code>set per-ip-shaper &lt;shaper&gt;</code>	Select the per-IP shaper. Per-IP shapers affect downloads and uploads. The allotted bandwidth applies to each individual IP. In a shared shaper, the allotted bandwidth applies to all IPs.
<i>Assign shaping class ID</i>		
<i>Traffic shaping class ID</i>	<code>set class-id &lt;class&gt;</code>	Set the class ID to apply the matching traffic. Class IDs are further prioritized within a traffic shaping profile and applied to an interface.
n/a	<code>set diffserv-forward {enable   disable}</code> <code>set diffservcode-forward &lt;code&gt;</code> <code>set diffserv-reverse {enable   disable}</code> <code>set diffservcode-reverse &lt;code&gt;</code>	<p>Specify the settings to apply a DSCP tag to the forward or reverse traffic. The DiffServ code is in 6-bit binary format.</p> <p>These options can only be configured in the CLI.</p>

Traffic shapers and class IDs can be applied at the same time when configuring traffic shaping policies. However, to reduce the complexity, it is recommended to use one method over the other.

The following topics include examples with traffic shaping policies:

- [Interface-based traffic shaping profile on page 1223](#)
- [Shared traffic shaper on page 1204](#)
- [Per-IP traffic shaper on page 1209](#)

## Traffic shaping profiles

As mentioned in [Traffic shaping on page 1188](#), the three main methods of configuring traffic shaping are:

- Traffic shaping profiles
- Traffic shapers
- Global traffic prioritization



A traffic shaping profile allows traffic shaping to be configured with policing or queuing. Up to 30 classes can be defined, with prioritization and bandwidth limits configured for each class. When queuing is enabled, metrics can be configured for traffic queuing in each class.

## Traffic shaping with policing


At the most basic level, policing involves traffic prioritization and bandwidth limits. Traffic prioritization helps categorize traffic into different priority levels: low, medium, high, critical, and top. When bandwidth is limited, traffic with higher priority levels will take precedence over lower priority traffic. Traffic with lower priority levels that exceeds available bandwidth will be dropped. These levels are only applicable in the context of traffic shaping profiles and should not be confused with global traffic prioritization levels.

Bandwidth limits define the guaranteed and maximum bandwidth allotted to each traffic class. These limits are configured as a percentage of the outbandwidth, which is the outbound bandwidth configured on an interface.

Guaranteed bandwidth limits guarantee the minimum bandwidth that is allotted to a given class of traffic. The sum of all guaranteed bandwidth of all classes within a traffic shaping profile cannot exceed 100%. However, the sum of all guaranteed bandwidth does not need to add up to 100%. The guaranteed bandwidth is always respected, even if one class has lower priority than another.

Maximum bandwidth limits define the maximum percentage of the outbandwidth that a traffic class can use up. This value often will be 100%, given that when there is no other traffic going through other classes, you would want to fully utilize the bandwidth of the outbound link. Traffic throughput exceeding the maximum bandwidth will be dropped.

The following diagram illustrates ingress traffic and how the FortiGate assigns classes and bandwidth to each class.

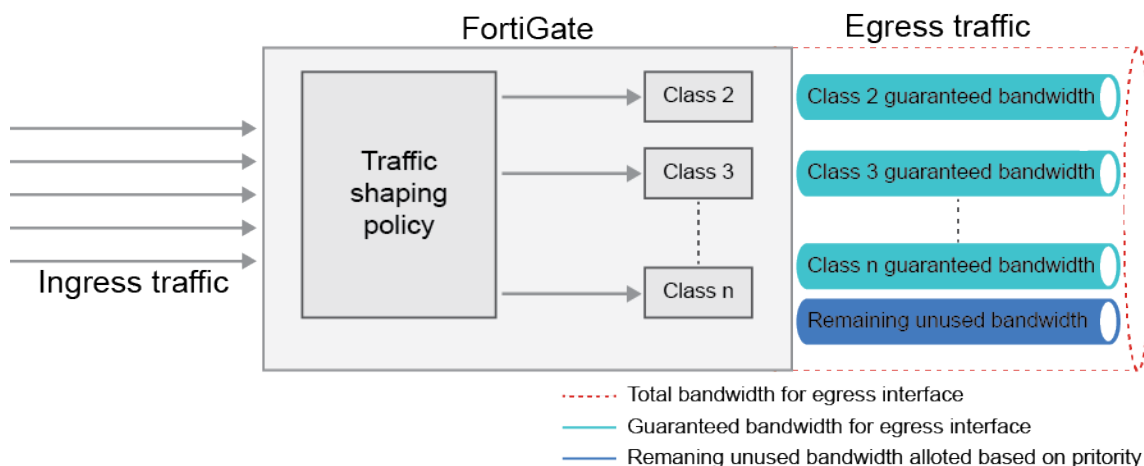

When comparing traffic shaping profiles and traffic shapers, it is important to remember that guaranteed and maximum bandwidth in a traffic shaping profile is a percentage of the outbandwidth, while guaranteed and maximum bandwidth in a traffic shaper is a rate (Kbps, Mbps, and so on). As long as the outbandwidth is true to its measurement, the bandwidth usage should not exceed the available bandwidth of a link when using a traffic shaping profile.

Congestion occurs when actual traffic surpasses the outbandwidth limit. At this point, traffic prioritization helps determine which traffic will be prioritized over others. First, the guaranteed bandwidth limit is allocated for each class. The left over bandwidth is allocated to traffic classes based on priority. The traffic classes with the highest priority can use as much of the remaining bandwidth as needed. Then, the remaining bandwidth can be allocated to classes at the next priority level, and so forth.


To see examples of applied traffic prioritization and bandwidth limits, see the debugs in [Verifying that the traffic is being shaped on page 1199](#).

## Traffic shaping with queuing

When traffic congestion occurs and if there is no queuing, then the excess packets are dropped. With queuing, when traffic exceeds the configured bandwidth limits, the traffic is delayed for transport until bandwidth frees up. Traffic may still be dropped if the queues are full.

In queuing, before a packet egresses an interface, it is first enqueued using an algorithm, such as random early detection (RED) or first in, first out (FIFO). The kernel then dequeues the packet based on the HTB algorithm before sending it out. Queuing can be configured per shaping profile, and it can be customized per class.

The following diagram shows how traffic policing differs from traffic queuing by comparing the bandwidth limit, projected bandwidth utilization, and actual bandwidth utilization.

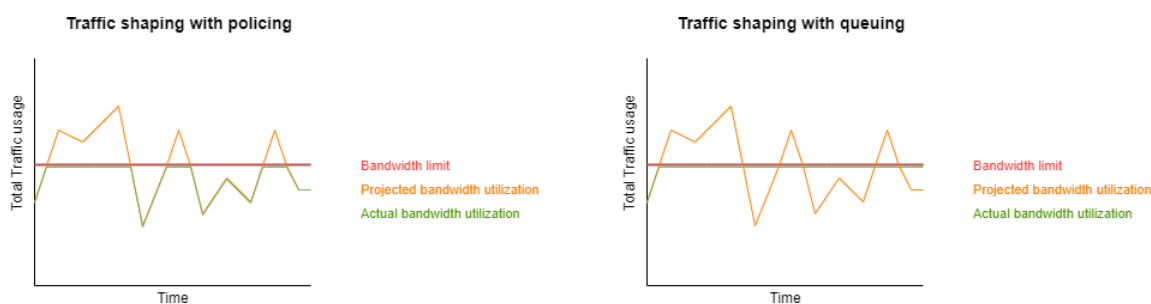

For more information about traffic shaping with queuing, see [Traffic shaping with queuing using a traffic shaping profile on page 1200](#).

## Configuring traffic shaping profiles

The main steps to configure traffic shaping are:

1. Configure the traffic shaping policy, and assign matched traffic to a class (see [Traffic shaping policies on page 1191](#)).
2. Configure the traffic shaping profile and apply traffic bandwidth, prioritization and/or queuing per class.
3. Configure the interface outbandwidth and apply an egress shaping profile to the interface.

### Configuring the traffic shaping profile

A traffic shaping profile consists of the class ID and the settings per class ID. It also defines the type of traffic shaping to apply (policing or queuing) and the default class ID for traffic that does not match any traffic shaping policies.

A class can be configured in the GUI as part of a traffic shaping profile or policy. In the CLI, a traffic class must be defined before it can be assigned within a traffic shaping profile. Class IDs range from 2 - 31, and they can be reused between different traffic shaping profiles.

When configuring a traffic shaping profile, the settings can be defined per class.

The following options can be configured for traffic shaping classes:

GUI option	CLI option	Description
<i>Default</i>	set default-class-id <class-id>	Set the default class ID. Each profile must have one default class ID. The default class ID can be changed at any time.
<i>Traffic shaping class ID</i>	set class-id <integer>	Set the class ID (2 - 31).
<i>Guaranteed bandwidth</i>	set guaranteed-bandwidth-percentage <integer>	Set the percentage of the outbandwidth that will be guaranteed for the class ID.
<i>Maximum bandwidth</i>	set maximum-bandwidth-percentage <integer>	Set the percentage of the outbandwidth that will be the maximum bandwidth for the class ID.
<i>Priority</i>	set priority {top   critical   high   medium   low}	Select the priority level for the class ID.

#### To configure a traffic shaping profile in the GUI:

1. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Profiles* tab, and click *Create New*.
2. Enter the profile name, and optionally enter a comment.
3. In the *Traffic Shaping Classes* section, click *Create New*.
4. Configure the traffic shaping class ID settings (*Traffic shaping class ID*, *Guaranteed bandwidth*, *Maximum bandwidth*, and *Priority*).
5. Click *OK*.
6. Create more shaping classes as needed (the total guaranteed bandwidth of all classes cannot exceed 100%).
7. Click *OK*.

#### To configure a traffic shaping profile in the CLI:

1. Configure the shaping class:

```
config firewall traffic-class
  edit <integer>
    set class-name <string>
  next
end
```

2. Configure the shaping profile:

```
config firewall shaping-profile
  edit <name>
    set type {policing | queuing}
    set default-class-id <class-id>
    config shaping-entries
      edit <id>
        set class-id <integer>
        set priority {top | critical | high | medium | low}
        set guaranteed-bandwidth-percentage <integer>
        set maximum-bandwidth-percentage <integer>
      next
    end
```

```

    next
end

```

## Configuring the interface outbandwidth

There are two settings that must be configured on an interface that has traffic shaping applied to egressing traffic: a traffic shaping profile must be assigned, and the outbound bandwidth must be configured.

Since traffic shaping is often configured on the WAN interface for egressing traffic, the outbound bandwidth is effectively the upstream bandwidth allowed by your ISP. On the FortiGate, it is possible to perform a speed test on interfaces assigned a WAN role assigned (see [Manual interface speedtest on page 710](#)). The speed test performs measurements against public cloud servers, and provides an accurate measurement of the upstream bandwidth. After the test is complete, the results can be used to populate the *Outbound bandwidth* field.

### To configure traffic shaping on an interface:

1. Go to *Network > Interfaces* and double-click an interface to edit it.
2. For interfaces assigned a WAN role, in the right-side of the screen, click *Execute speed test*.
3. When the test completes, click *OK* in the *Confirm* pane to apply the results to the estimated bandwidth. The speed test results are populated in the *Estimated bandwidth* fields for *kbps Upstream* and *kbps Downstream*.

The screenshot shows the 'Edit Interface' configuration window for a FortiGate. The interface is a Physical Interface with VRF ID 0 and Role WAN. The estimated bandwidth is 743334 kbps Upstream and 852382 kbps Downstream. The address is 172.16.151.87/255.255.255.0. The administrative access section shows various protocols enabled. The traffic shaping section shows the outbound shaping profile and bandwidth set to 0 kbps. On the right, the speed test results are displayed, showing upstream and downstream speeds in Mbps, measured on 2022/06/20 15:40:33. There is an 'Execute speed test' button.

4. In the *Traffic Shaping* section, enable *Outbound shaping profile* and select a profile.
5. Enable *Outbound bandwidth* and copy the *kbps Upstream* value from the speed test, or enter a custom value.
6. Click *OK*.

## Verifying that the traffic is being shaped

In this example, three traffic classes are defined in the traffic shaping profile assigned to port1. The outbandwidth configured on port1 is 1000 Kbps. Each class has an allocated-bandwidth, guaranteed-bandwidth, max-bandwidth, and current-bandwidth value.

- The `guaranteed-bandwidth` and `max-bandwidth` are rates that are converted from the percentage of outbandwidth configured for each class. For example, class-id 2 has 10% `guaranteed-bandwidth`, equivalent to 100 Kbps, and 100% `max-bandwidth` equivalent to 1000 Kbps.
- The `allocated-bandwidth` displays the real-time bandwidth allocation for the traffic class based on all available factors. This value changes as traffic demand changes.
- The `current-bandwidth` displays the real-time bandwidth usage detected for the traffic class.

### To verify that traffic is being shaped by the traffic shaping profile:

1. Enable debug flow to view the live traffic as it matches a traffic shaping policy:

```
# diagnose debug flow show function-name enable
# diagnose debug flow show iprope enable
# diagnose debug flow filter <filters>
# diagnose debug flow trace start <repeat_number>
# diagnose debug enable
```

The `iprope_shaping_check` function outputs the shaping policy matched for any given traffic:

```
...
id=20085 trace_id=21 func=iprope_shaping_check line=934 msg="in-[port3], out-[port1],
skb_flags=02000000, vid=0"
id=20085 trace_id=21 func=__iprope_check line=2277 msg="gnum-100015, check-
fffffffffa002a8fe"
id=20085 trace_id=21 func=__iprope_check_one_policy line=2029 msg="checked gnum-100015
policy-3, ret-matched, act-accept"
id=20085 trace_id=21 func=__iprope_check_one_policy line=2247 msg="policy-3 is matched,
act-accept"
id=20085 trace_id=21 func=__iprope_check line=2294 msg="gnum-100015 check result: ret-
matched, act-accept, flag-00000000, flag2-00000000"
```

2. Display the session list:

```
# diagnose sys session filter <filters>
# diagnose sys session list
```

Sessions that match a shaping policy will display `class_id` and `shaping_policy_id` fields:

```
...
session info: proto=6 proto_state=05 duration=32 expire=0 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=4 shaping_policy_id=3 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
```

3. Display the interface statistics:

```
# diagnose netlink interface list port1
if=port1 family=00 type=1 index=3 mtu=1500 link=0 master=0
ref=95 state=start present fw_flags=2001b800 flags=up broadcast run allmulti multicast
Qdisc=pfifo_fast hw_addr=52:54:00:7e:af:a6 broadcast_addr=ff:ff:ff:ff:ff:ff
inbandwidth=10000(kbps)          total_bytes=2098887K    drop_bytes=7854K
```

```

egress traffic control:
    bandwidth=1000 (kbps) lock_hit=241 default_class=3 n_active_class=3
    class-id=2      allocated-bandwidth=140 (kbps)    guaranteed-bandwidth=100 (kbps)
                   max-bandwidth=1000 (kbps)         current-bandwidth=147 (kbps)
                   priority=low    forwarded_bytes=8161K
                   dropped_packets=2032    dropped_bytes=3074K
    class-id=3      allocated-bandwidth=30 (kbps)     guaranteed-bandwidth=300 (kbps)
                   max-bandwidth=1000 (kbps)         current-bandwidth=10 (kbps)
                   priority=medium forwarded_bytes=501K
                   dropped_packets=1    dropped_bytes=1195
    class-id=4      allocated-bandwidth=830 (kbps)    guaranteed-bandwidth=500 (kbps)
                   max-bandwidth=1000 (kbps)         current-bandwidth=810 (kbps)
                   priority=high   forwarded_bytes=1393K
                   dropped_packets=379    dropped_bytes=572K
stat: rxp=8349728 txp=11101735 rxb=2216101183 txb=1394077978 rx=0 tx=0 rxd=0 txd=0
mc=0 collision=0 @ time=1654202868
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=95

```



If the debug output does not display egress traffic control by class and displays them by priority, it is likely that global traffic prioritization is configured. The global traffic prioritization settings must be disabled to view the preceding debug output (see [Global traffic prioritization on page 1216](#)).

## Traffic shaping with queuing using a traffic shaping profile

You can use the weighted random early detection (WRED) queuing function within traffic shaping.

This topic includes two parts:

- [Traffic shaping with queuing on page 1200](#)
- [Burst control in queuing mode on page 1201](#)

You cannot configure or view WRED in the GUI; you must use the CLI.



WRED is not supported when traffic is offloaded to an NPU.

## Traffic shaping with queuing

Traffic shaping has a queuing option. Use this option to fine-tune the queue by setting the profile queue size or performing random early drop (RED) according to queue usage.

This example shows setting the profile queue size limit to 5 so that the queue can contain a maximum of five packets and more packets are dropped.

### To set the profile queue size limit:

```

config firewall shaping-profile
edit "profile"

```

```

    set type queuing
    set default-class-id 31
    config shaping-entries
        edit 31
            set class-id 31
            set guaranteed-bandwidth-percentage 5
            set maximum-bandwidth-percentage 10
            set limit 5 <range from 5 to 10000; default: 1000>
        next
    end
next
end

```

This example shows performing RED according to queue usage by setting `red-probability`, `min`, and `max`. Setting `red-probability` to 10 means start to drop packets when queue usage reaches the `min` setting. When queue usage reaches the `max` setting, drop 10% of the packets.

- Level 1: when queue is less than `min` packets, drop 0% of packets.
- Level 2: when queue reaches `min` packets, start to drop packets.
- Level 3: when queue usage is between `min` and `max` packets, drop 0–10% of packets by proportion.
- Level 4: when queue (average queue size) is more than `max` packets, drop 100% of packets.

#### To set RED according to queue usage:

```

config firewall shaping-profile
    edit "profile"
        set type queuing
        set default-class-id 31
        config shaping-entries
            edit 31
                set class-id 31
                set guaranteed-bandwidth-percentage 5
                set maximum-bandwidth-percentage 10
                set red-probability 10 <range from 0 to 20; default: 0 no drop>
                set min 100 <range from 3 to 3000>
                set max 300 <range from 3 to 3000>
            next
        end
    next
end

```

#### To troubleshoot this function, use the following diagnose commands:

```

diagnose netlink intf-class list <intf>
diagnose netlink intf-qdisc list <intf>

```

### Burst control in queuing mode

In a hierarchical token bucket (HTB) algorithm, each traffic class has buckets to allow a burst of traffic. The maximum burst is determined by the bucket size `burst` (for guaranteed bandwidth) and `cburst` (for maximum bandwidth). The shaping profile has `burst-in-msec` and `cburst-in-msec` parameters for each shaping entry (`class id`) to control the bucket size.

This example uses the outbandwidth of the interface as 1 Mbps and the maximum bandwidth of class is 50%.

$\text{burst} = \text{burst-in-msec} * \text{guaranteed bandwidth} = 100 \text{ ms} \times 1 \text{ Mbps} \times 50\% = 50000 \text{ b} = 6250 \text{ B}$

$\text{cburst} = \text{cburst-in-msec} * \text{maximum bandwidth} = 200 \text{ ms} \times 1 \text{ Mbps} \times 50\% = 100000 \text{ b} = 12500 \text{ B}$

The following example sets `burst-in-msec` to 100 and `cburst-in-msec` to 200.

### To set burst control in queuing mode:

```
config firewall shaping-profile
  edit "profile"
    set type queuing
    set default-class-id 31
    config shaping-entries
      edit 31
        set class-id 31
        set guaranteed-bandwidth-percentage 5
        set maximum-bandwidth-percentage 50
        set burst-in-msec 100 <range from 0 to 2000>
        set cburst-in-msec 200 <range from 0 to 2000>
      next
    end
  next
end
```

## Example

### Enabling RED for FTP traffic from QA

This example shows how to enable RED for FTP traffic from QA. This example sets a maximum of 10% of the packets to be dropped when queue usage reaches the maximum value.

### To configure the firewall address:

```
config firewall address
  edit QA_team
    set subnet 10.1.100.0/24
  next
end
```

### To set the shaping policy to classify traffic into different class IDs:

```
config firewall shaping-policy
  edit 1
    set service HTTPS HTTP
    set dstintf port1
    set srcaddr QA_team
    set dstaddr all
    set class-id 10
  next
  edit 2
    set service FTP
    set dstintf port1
    set srcaddr QA_team
    set dstaddr all
    set class-id 20
  next
end
```



**To set the shaping policy to define the speed of each class ID:**

```
config firewall shaping-profile
  edit QA_team_profile
    set type queuing
    set default-class-id 30
    config shaping-entries
      edit 1
        set class-id 10
        set guaranteed-bandwidth-percentage 50
        set maximum-bandwidth-percentage 100
      next
      edit 2
        set class-id 20
        set guaranteed-bandwidth-percentage 30
        set maximum-bandwidth-percentage 60
        set red-probability 10
      next
      edit 3
        set class-id 30
        set guaranteed-bandwidth-percentage 20
        set maximum-bandwidth-percentage 50
      next
    end
  next
end
```

**To apply the shaping policy to the interface:**

```
config sys interface
  edit port1
    set outbandwidth 10000
    set egress-shaping-profile QA_team_profile
  next
end
```

**To use diagnose commands to troubleshoot:**

```
# diagnose netlink intf-class list port1
class htb 1:1 root rate 1250000Bps ceil 1250000Bps burst 1600B/8 mpu 0B overhead 0B cburst
1600B/8 mpu 0B overhead 0B level 7 buffer [00004e20] cbuffer [00004e20]
Sent 11709 bytes 69 pkt (dropped 0, overlimits 0 requeues 0)
rate 226Bps 2pps backlog 0B 0p
lended: 3 borrowed: 0 giants: 0
tokens: 18500 ctokens: 18500
class htb 1:10 parent 1:1 leaf 10: prio 1 quantum 62500 rate 625000Bps ceil 1250000Bps burst
1600B/8 mpu 0B overhead 0B cburst 1600B/8 mpu 0B overhead 0B level 0 buffer [00009c40]
cbuffer [00004e20]
Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
rate 0Bps 0pps backlog 0B 0p
lended: 0 borrowed: 0 giants: 0
tokens: 40000 ctokens: 20000
class htb 1:20 parent 1:1 leaf 20: prio 1 quantum 37500 rate 375000Bps ceil 750000Bps burst
1599B/8 mpu 0B overhead 0B cburst 1599B/8 mpu 0B overhead 0B level 0 buffer [0001046a]
cbuffer [00008235]
Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
```

```
rate 0Bps 0pps backlog 0B 0p
lended: 0 borrowed: 0 giants: 0
tokens: 66666 ctokens: 33333
class htb 1:30 parent 1:1 leaf 30: prio 1 quantum 25000 rate 250000Bps ceil 625000Bps burst
1600B/8 mpu 0B overhead 0B cburst 1600B/8 mpu 0B overhead 0B level 0 buffer [000186a0]
cbuffer [00009c40]
Sent 11709 bytes 69 pkt (dropped 0, overlimits 0 requeues 0)
rate 226Bps 2pps backlog 0B 0p
lended: 66 borrowed: 3 giants: 0
tokens: 92500 ctokens: 37000
class red 20:1 parent 20:0

# diagnose netlink intf-qdisc list port1
qdisc htb 1: root refcnt 5 r2q 10 default 30 direct_packets_stat 0 ver 3.17
Sent 18874 bytes 109 pkt (dropped 0, overlimits 5 requeues 0)
backlog 0B 0p
qdisc pfifo 10: parent 1:10 refcnt 1 limit 1000p
Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
backlog 0B 0p
qdisc red 20: parent 1:20 refcnt 1 limit 4000000B min 300000B max 1000000B ewma 9 Plog 23
Scell_log 20 flags 0
Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
backlog 0B 0p
marked 0 early 0 pdrop 0 other 0
qdisc pfifo 30: parent 1:30 refcnt 1 limit 1000p
Sent 18874 bytes 109 pkt (dropped 0, overlimits 0 requeues 0)
backlog 0B 0p
```

## Traffic shapers

The following topics provide more information about traffic shapers:

- [Shared traffic shaper on page 1204](#)
- [Per-IP traffic shaper on page 1209](#)
- [Changing traffic shaper bandwidth unit of measurement on page 1212](#)
- [Multi-stage DSCP marking and class ID in traffic shapers on page 1212](#)
- [Adding traffic shapers to multicast policies on page 1214](#)

### Shared traffic shaper

Shared traffic shaper is used in a firewall shaping policy to indicate the priority and guaranteed and maximum bandwidth for a specified type of traffic use.

The maximum bandwidth indicates the largest amount of traffic allowed when using the policy. You can set the maximum bandwidth to a value between 1 and 16776000 Kbps. The GUI displays an error if any value outside this range is used. If you want to allow unlimited bandwidth, use the CLI to enter a value of 0.

The guaranteed bandwidth ensures that there is a consistent reserved bandwidth available. When setting the guaranteed bandwidth, ensure that the value is significantly less than the interface's bandwidth capacity. Otherwise, the interface will allow very little or no other traffic to pass through, potentially causing unwanted latency.

In a shared traffic shaper, the administrator can prioritize certain traffic as high, medium, or low. FortiOS provides bandwidth to low priority connections only when high priority connections do not need the bandwidth. For example, you

should assign a high traffic priority to a policy for connecting a secure web server that needs to support e-commerce traffic. You should assign less important services a low priority.

When you configure a shared traffic shaper, you can apply bandwidth shaping per policy or for all policies. By default, a shared traffic shaper applies traffic shaping evenly to all policies that use the shared traffic shaper.

When configuring a per-policy traffic shaper, FortiOS applies the traffic shaping rules defined for each security policy individually. For example, if a per-policy traffic shaper is configured with a maximum bandwidth of 1000 Kbps, any security policies that have that traffic shaper enabled get 1000 Kbps of bandwidth each.

If a traffic shaper for all policies is configured with a maximum bandwidth of 1000 Kbps, all policies share the 1000 Kbps on a first-come, first-served basis.

The configuration is as follows:

```
config firewall shaper traffic-shaper
  edit "traffic_shaper_name"
    set per-policy enable
  next
end
```

The shared traffic shaper selected in the traffic shaping policy affects traffic in the direction defined in the policy. For example, if the source port is LAN and the destination is WAN1, the traffic shaping affects the flow in this direction only, affecting the outbound traffic's upload speed. You can define the traffic shaper for the policy in the opposite direction (reverse shaper) to affect the inbound traffic's download speed. In this example, that would be from WAN1 to LAN.

Only traffic through forward traffic shapers will be included in FortiView; reverse and per-IP shapers are not included.

Traffic shapers can be added to a multicast policy when multicast routing is enabled.

The following example shows how to apply different speeds to different types of service. The example configures two shared traffic shapers to use in two firewall shaping policies. One policy guarantees a speed of 10 Mbps for VoIP traffic. The other policy guarantees a speed of 1 Mbps for other traffic. In the example, FortiOS communicates with a PC using port10 and the Internet using port9.

### To configure shared traffic shapers in the GUI:

1. Create a firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Set the *Name* to *Internet Access*.
  - c. Set the *Incoming Interface* to *port10*.
  - d. Set the *Outgoing Interface* to *port9*.
  - e. Set the *Source* and *Destination* to *all*.
  - f. Set the *Schedule* to *always*.
  - g. Set the *Service* to *ALL*.
  - h. Click *OK*.
2. Create the shared traffic shapers:
  - a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shapers* tab, and click *Create New*.
  - b. Set the *Name* to *10Mbps*. This shaper is for VoIP traffic.
  - c. Set the *Traffic Priority* to *High*.
  - d. Enable *Max Bandwidth* and enter *20000*.

- e. Enable *Guaranteed Bandwidth* and enter *10000*.

- f. Click **OK**.
- g. Repeat the above steps to create another traffic shaper named *1Mbps* with the *Traffic Priority* set to *Low*, the *Max Bandwidth* set to *10000*, and the *Guaranteed Bandwidth* set to *1000*.
3. Create a firewall shaping policy:
- Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
  - Set the *Name* to *VoIP\_10Mbps\_High*. This policy is for VoIP traffic.
  - Set the *Source* and *Destination* to *all*.
  - Set the *Service* to all VoIP services.
  - Set the *Outgoing Interface* to *port9*.
  - Enable *Shared shaper* and select *10Mbps*.
  - Enable *Reverse shaper* and select *10Mbps*.
  - Click **OK**.
  - Repeat the above steps to create another firewall shaping policy named *Other\_1Mbps\_Low* for other traffic, with the *Source* and *Destination* set to *all*, *Service* set to *ALL*, *Outgoing Interface* set to *port9*, and *Shared shaper* and *Reverse shaper* set to *1Mbps*.

### To configure shared traffic shapers in the CLI:

1. Create a firewall policy:

```
config firewall policy
  edit 1
    set name "Internet Access"
    set srcintf "port10"
    set dstintf "port9"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set fsso disable
    set nat enable
  next
end
```

2. Create the shared traffic shapers:

```
config firewall shaper traffic-shaper
```

```

edit "10Mbps"
    set guaranteed-bandwidth 10000
    set maximum-bandwidth 20000
next
edit "1Mbps"
    set guaranteed-bandwidth 1000
    set maximum-bandwidth 10000
    set priority low
next
end

```

### 3. Create a firewall shaping policy:

```

config firewall shaping-policy
edit 1
    set name "VOIP_10Mbps_High"
    set service "H323" "IRC" "MS-SQL" "MYSQL" "RTSP" "SCCP" "SIP" "SIP-MSNmessenger"
    set dstintf "port9"
    set traffic-shaper "10Mbps"
    set traffic-shaper-reverse "10Mbps"
    set srcaddr "all"
    set dstaddr "all"
next
edit 2
    set name "Other_1Mbps_Low"
    set service "ALL"
    set dstintf "port9"
    set traffic-shaper "1Mbps"
    set traffic-shaper-reverse "1Mbps"
    set srcaddr "all"
    set dstaddr "all"
next
end

```

### To troubleshoot shared traffic shapers:

1. Check if specific traffic is attached to the correct traffic shaper. The example output shows the traffic attached to the 10Mbps and 1Mbps shapers:

```

# diagnose firewall iprope list 100015
policy index=1 uuid_idx=0 action=accept
flag (0):
shapers: orig=10Mbps (2/1280000/2560000)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=4 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
service(15):
[6:0x0:0/(1,65535)->(1720,1720)] helper:auto
[6:0x0:0/(1,65535)->(1503,1503)] helper:auto
[17:0x0:0/(1,65535)->(1719,1719)] helper:auto
[6:0x0:0/(1,65535)->(6660,6669)] helper:auto
[6:0x0:0/(1,65535)->(1433,1433)] helper:auto
[6:0x0:0/(1,65535)->(1434,1434)] helper:auto
[6:0x0:0/(1,65535)->(3306,3306)] helper:auto
[6:0x0:0/(1,65535)->(554,554)] helper:auto

```

```
[6:0x0:0/(1,65535)->(7070,7070)] helper:auto
[6:0x0:0/(1,65535)->(8554,8554)] helper:auto
[17:0x0:0/(1,65535)->(554,554)] helper:auto
[6:0x0:0/(1,65535)->(2000,2000)] helper:auto
[6:0x0:0/(1,65535)->(5060,5060)] helper:auto
[17:0x0:0/(1,65535)->(5060,5060)] helper:auto
[6:0x0:0/(1,65535)->(1863,1863)] helper:auto
```

```
policy index=2 uuid_idx=0 action=accept
flag (0):
shapers: orig=1Mbps(4/128000/1280000)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=4 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
service(1):
[0:0x0:0/(0,0)->(0,0)] helper:auto
```

2. Check if the correct traffic shaper is applied to the session. The example output shows that the 1Mbps shaper is applied to the session:

```
# diagnose sys session list
session info: proto=6 proto_state=01 duration=11 expire=3599 timeout=3600 flags=00000000
sockflag=00000000 sockport=0 av_idx=0 use=5
origin-shaper=1Mbps prio=4 guarantee 128000Bps max 1280000Bps traffic 1050Bps drops 0B
reply-shaper=
per_ip_shaper=
class_id=0 shaping_policy_id=2 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty npu npd os mif route_preserve
statistic(bytes/packets/allow_err): org=868/15/1 reply=752/10/1 tuples=2
tx speed(Bps/kbps): 76/0 rx speed(Bps/kbps): 66/0
origin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58241->172.16.200.55:21(172.16.200.1:58241)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58241(10.1.100.11:58241)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=4
serial=0003255f tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id = 00000000
dd_type=0 dd_mode=0
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: offload-denied helper
total session 1
```

3. Check the statuses of shared traffic shapers:

```
# diagnose firewall shaper traffic-shaper list
name 10Mbps
maximum-bandwidth 2500 KB/sec
guaranteed-bandwidth 1250 KB/sec
current-bandwidth 0 B/sec
priority 2
tos ff
packets dropped 0
```

```
bytes dropped 0

name 1Mbps
maximum-bandwidth 1250 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
tos ff
packets dropped 0
bytes dropped 0
```

## Per-IP traffic shaper

With per-IP traffic shaping, you can limit each IP address's behavior to avoid a situation where one user uses all of the available bandwidth. In addition to controlling the maximum bandwidth used per IP address, you can also define the maximum number of concurrent sessions for an IP address. For example, if you apply a per-IP shaper of 1 Mbps to your entire network, FortiOS allocates each user/IP address 1 Mbps of bandwidth. Even if the network consists of a single user, FortiOS allocates them 1 Mbps. If there are ten users, each user gets 1 Mbps of bandwidth, totaling 10 Mbps of outgoing traffic.

For shared shapers, all users share the set guaranteed and maximum bandwidths. For example, if you set a shared shaper for all PCs using an FTP service to 10 Mbps, all users uploading to the FTP server share the 10 Mbps.

Shared shapers affect upload speed. If you want to limit the download speed from the FTP server in the example, you must configure the shared shaper as a reverse shaper. Per-IP shapers apply the speed limit on both upload and download operations. Only traffic through forward traffic shapers will be included in FortiView; reverse and per-IP shapers are not included.

The following example shows how to apply a per-IP shaper to a traffic shaping policy. This shaper assigns each user a maximum bandwidth of 1 Mbps and allows each user to have a maximum of ten concurrent connections to the FTP server. In the example, FortiOS communicates with users using port10 and the FTP server using port9.

### To configure a per-IP traffic shaper in the GUI:

1. Create a firewall policy:
  - a. Go to *Policy & Objects > IPv4 Policy* and click *Create New*.
  - b. Set the *Name* to *FTP Access*.
  - c. Set the *Incoming Interface* to *port10*.
  - d. Set the *Outgoing Interface* to *port9*.
  - e. Set the *Source* to *all*.
  - f. Set the *Destination* to *FTP\_Server*.
  - g. Set the *Schedule* to *always*.
  - h. Set the *Service* to *ALL*.
  - i. Click *OK*.
2. Create the per-IP traffic shaper:
  - a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shapers* tab, and click *Create New*.
  - b. Set *Type* to *Per IP Shaper*.
  - c. Enter the *Name* (*FTP\_Max\_1M*). This shaper is for VoIP traffic.
  - d. Enable *Max Bandwidth* and enter *1000*.
  - e. Enable *Max Concurrent Connections* and enter *10*. This means that each user can have up to ten concurrent connections to the FTP server.

f. Click OK.

3. Create a firewall shaping policy:

- a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
- b. Enter the *Name* (*FTP speed 1M*).
- c. Set the *Source* to the addresses and users that require access to the FTP server.
- d. Set the *Destination* to *FTP\_Server*.
- e. Set the *Service* to *ALL*.
- f. Set the *Outgoing Interface* to *port9*.
- g. Enable *Per-IP shaper* and select *FTP\_Max\_1M*.
- h. Click OK.

### To configure a per-IP traffic shaper in the CLI:

1. Create a firewall policy:

```
config firewall policy
  edit 1
    set name "FTP Access"
    set srcintf "port10"
    set dstintf "port9"
    set srcaddr "all"
    set dstaddr "FTP_Server"
    set action accept
    set schedule "always"
    set service "ALL"
    set fsso disable
    set nat enable
  next
end
```

2. Create the per-IP traffic shaper:

```
config firewall shaper per-ip-shaper
  edit "FTP_Max_1M"
    set max-bandwidth 1000
    set max-concurrent-session 10
  next
end
```

3. Create a firewall shaping policy:

```
config firewall shaping-policy
  edit 1
```



```

        set name "FTP speed 1M"
        set service "ALL"
        set dstintf "port9"
        set per-ip-shaper "FTP_Max_1M"
        set srcaddr "PC1" "WinPC" "PC2"
        set dstaddr "FTP_Server"
    next
end

```

### To troubleshoot per-IP traffic shapers:

1. Check if specific traffic is attached to the correct traffic shaper. The example output shows the traffic attached to the FTP\_Max\_1M shaper:

```

# diagnose firewall iprope list 100015
policy index=3 uuid_idx=0 action=accept
flag (0):
shapers: per-ip=FTP_Max_1M
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=2 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(3): 10.1.100.11-10.1.100.11, uuid_idx=30, 10.1.100.143-10.1.100.143, uuid_idx=32,
          10.1.100.22-10.1.100.22, uuid_idx=31,
dest(1): 172.16.200.55-172.16.200.55, uuid_idx=89,
service(1):
          [0:0x0:0/(0,65535)->(0,65535)] helper:auto

```

2. Check if the correct traffic shaper is applied to the session. The example output shows that the FTP\_Max\_1M shaper is applied to the session:

```

# diagnose sys session list
session info: proto=6 proto_state=01 duration=36 expire=3567 timeout=3600 flags=00000000
             sockflag=00000000 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=FTP_Max_1M
class_id=0 shaping_policy_id=3 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty per_ip npu npd mif route_preserve
statistic(bytes/packets/allow_err): org=506/9/1 reply=416/6/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58275->172.16.200.55:21(172.16.200.1:58275)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58275(10.1.100.11:58275)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=0000211a tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id = 00000000
dd_type=0 dd_mode=0
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
          vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: offload-denied helper

```

3. Check the statuses of per-IP traffic shapers. The output should resemble the following:

```

# diagnose firewall shaper per-ip-shaper list
name FTP_Max_1M

```

```

maximum-bandwidth 125 KB/sec
maximum-concurrent-session 10
tos ff/ff
packets dropped 0
bytes dropped 0
addr=10.1.100.11 status: bps=0 ses=3

```

## Changing traffic shaper bandwidth unit of measurement

Bandwidth speeds are measured in kilobits per second (Kbps), and bytes that are sent and received are measured in megabytes (MB). In some cases, this can cause confusion depending on whether your ISP uses kilobits per second (Kbps), kilobytes per second (KBps), megabits per second (Mbps), or gigabits per second (Gbps).

You can change the unit of measurement for traffic shapers in the CLI.

### To change the bandwidth unit of measurement for a shared traffic shaper:

```

config firewall shaper traffic-shaper
    edit <traffic_shaper_name>
        set bandwidth-unit {kbps | mbps | gbps}
    next
end

```

### To change the bandwidth unit of measurement for a per-IP traffic shaper:

```

config firewall shaper per-ip-shaper
    edit <traffic_shaper_name>
        set bandwidth-unit {kbps | mbps | gbps}
    next
end

```

## Multi-stage DSCP marking and class ID in traffic shapers

Traffic shapers have a multi-stage method so that packets are marked with a different differentiated services code point (DSCP) and `class id` at different traffic speeds. Marking packets with a different DSCP code is for the next hop to classify the packets. The FortiGate benefits by marking packets with a different `class id`. Combined with the egress interface shaping profile, the FortiGate can handle the traffic differently according to its `class id`.

Rule	DSCP code	Class ID
speed < guarantee bandwidth	diffservcode	class id in shaping policy
guarantee bandwidth < speed < exceed bandwidth	exceed-dscp	exceed-class-id
exceed bandwidth < speed	maximum-dscp	exceed-class-id

This example sets the following parameters:

- When the current bandwidth is less than 50 Kbps, mark packets with `diffservcode 100000` and set `class id` to 10.
- When the current bandwidth is between 50 Kbps and 100 Kbps, mark packets with `exceed-dscp 111000` and set `exceed-class-id` to 20.

- When the current bandwidth is more than 100 Kbps, mark packets with `maximum-dscp 111111` and set `exceed-class-id` to 20.

**To set multi-stage DSCP marking and class ID in a traffic shaper:**

```
config firewall shaper traffic-shaper
  edit "50k-100k-150k"
    set guaranteed-bandwidth 50
    set maximum-bandwidth 150
    set diffserv enable
    set dscp-marking-method multi-stage
    set exceed-bandwidth 100
    set exceed-dscp 111000
    set exceed-class-id 20
    set maximum-dscp 111111
    set diffservcode 100000
  next
end

config firewall shaping-policy
  edit 1
    set service "ALL"
    set dstintf PORT2
    set srcaddr "all"
    set dstaddr "all"
    set class-id 10
  next
end
```

Traffic shapers also have an `overhead` option that defines the per-packet size overhead used in rate computation.

**To set the traffic shaper overhead option:**

```
config firewall shaper traffic-shaper
  edit "testing"
    set guaranteed-bandwidth 50
    set maximum-bandwidth 150
    set overhead 14 <range from 0 to 100>
  next
end
```

**Example**

This example shows how to mark QA traffic with a different DSCP according to real-time traffic speed.

**To configure the firewall address:**

```
config firewall address
  edit QA_team
    set subnet 10.1.100.0/24
  next
end
```

**To configure the firewall shaper traffic shaper:**

```
config firewall shaper traffic-shaper
  edit "500k-1000k-1500k"
    set guaranteed-bandwidth 500
    set maximum-bandwidth 1500
    set diffserv enable
    set dscp-marking-method multi-stage
    set exceed-bandwidth 1000
    set exceed-dscp 111000
    set maximum-dscp 111111
    set diffservcode 100000
  next
end

config firewall shaping-policy
  edit QA_team
    set service "ALL"
    set dstintf port1
    set traffic-shaper "500k-1000k-1500k"
    set traffic-shaper-reverse "500k-1000k-1500k"
    set srcaddr "QA_team"
    set dstaddr "all"
  next
end
```

**Adding traffic shapers to multicast policies**

When multicast routing is enabled, a traffic shaper can be added to a multicast policy.

Only a shared traffic shaper with the `per-policy` option disabled can be used. This is the default state of the `per-policy` option. The `auto-asic-offload` option must also be disabled on the multicast policy.




This feature is currently not supported on IPv6 multicast policies or on transparent mode VDOMs.

---

**Example**

In this example, a traffic shaper is applied to the multicast policy. A multicast flow sender sends the multicast data stream. The shaper attached to the multicast session is checked, and the shaping of the data stream is confirmed in the multicast session.

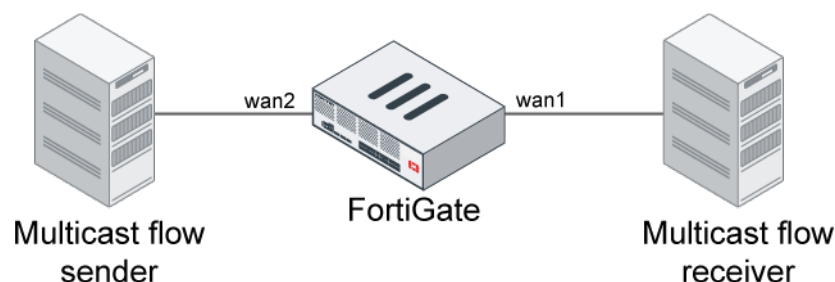

**To apply traffic shaping to a multicast policy:****1. Enable multicast routing on the VDOM:**

```
config router multicast
    set multicast-routing enable
    config pim-sm-global
        config rp-address
            edit 1
                set ip-address 10.1.100.10
            next
        end
    end
config interface
    edit "wan2"
        set pim-mode sparse-mode
    next
    edit "wan1"
        set pim-mode sparse-mode
    next
end
end
```

**2. Create a traffic shaper:**

```
config firewall shaper traffic-shaper
    edit "shaper128kbps-high"
        set guaranteed-bandwidth 128
        set maximum-bandwidth 128
        set per-policy disable
        set diffserv enable
        set diffservcode 010101
    next
end
```

**3. Apply the traffic shaper to the multicast policy and disable NPU offloading:**

```
config firewall multicast-policy
    edit 1
        set name "test_multicast-policy"
        set logtraffic enable
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set snat enable
        set auto-asic-offload disable
        set traffic-shaper "shaper128kbps-high"
    next
end
```

**4. Check the shaper and DSCP in the multicast session:**

```
# diagnose sys mcast-session list
session info: id=26 vf=0 proto=17 10.1.100.41.35537->230.0.0.1.7878
used=2 path=1 duration=118 expire=179 indev=18 pkts=119 bytes=64260
state=00000000:
session-npu-info: ipid/vlifid=0/0 vlanid/vtag_in=0/0 in_npuid=0 tae_index=0 qid=0
```

```
fwd_map=0x00000000
  path: log snat npu-deny nsaddr=172.16.200.10 policy=1, outdev=17, tos=0x15
        origin-shaper=shaper128kbps-high prio=2 tos=0x15 guarantee 16000Bps max
16000Bps traffic 620Bps drops 0pkt/0B
  Total 1 sessions
```

## Global traffic prioritization

Global traffic prioritization allows your traffic to be prioritized as high (2), medium (3), or low (4) based on ToS (type of service) or DSCP. When using ToS-based priority, integers 0 to 15 can be used, which correspond to the definitions of the ToS field values in RFC 1349. When using DSCP, values 0 to 63 can be used, which correspond to the six bits in the DSCP value.

The outbandwidth must be defined in order for global prioritization to take effect. When the outbandwidth is defined on an interface without an applied egress-shaping-profile, the interface has a total of five priority levels:

Priority level	Description
0	Top
1	Critical
2	High
3	Medium
4	Low

Priority level 0 is reserved for administrative and local out traffic. Priority level 1 is used for traffic that is below guaranteed bandwidth when using a traffic shaper.



Traffic shaper and traffic shaping profile configurations take precedence over global traffic prioritization.

## CLI commands

The following commands are used to configure the prioritization either by ToS or DSCP.

### To configure the traffic prioritization type and level:

```
config system global
  set traffic-priority {tos | dscp}
  set traffic-priority-level {high | medium | low}
end
```

### To configure the ToS-based priority table:

```
config system tos-based-priority
  edit <id>
    set tos <0-15>
    set priority (high | medium | low)
```

```
    next
end
```

**To configure the DSCP-based priority table:**

```
config system dscp-based-priority
    edit <id>
        set ds <0-63>
        set priority (high | medium | low)
    next
end
```

**To configure the interface outbandwidth:**

```
config system interface
    edit <name>
        set outbandwidth <bandwidth in kbps>
    next
end
```

## Example

In the following configuration, packets with DSCP markings of 1 are prioritized as high, and packets with DSCP markings of 2 are prioritized as medium. All the other traffic is prioritized as low. The outbandwidth on interface port3 is set to 1000 kbps.

**To configure DSCP-based traffic prioritization:****1. Configure DSCP-based prioritization in the global settings:**

```
config system global
    set traffic-priority dscp
    set traffic-priority-level low
end
```

**2. Configure the DSCP-based priority table:**

```
config system dscp-based-priority
    edit 1
        set ds 1
        set priority high
    next
    edit 2
        set ds 2
        set priority medium
    next
end
```

**3. Configure the outbandwidth on port3:**

```
config system interface
    edit "port3"
        set outbandwidth 1000
    next
end
```

## Verifying the traffic prioritization

When traffic exceeds the outbandwidth of 1000 kbps, traffic prioritization will take effect. Since the form of traffic shaping applied here is policing, excess packets above the outbandwidth are dropped.

In scenario 1, approximately 300 kbps of high priority traffic and 300 kbps of medium priority traffic passes through the FortiGate on port3.

### To debug the bandwidth allocation:

```
# diagnose netlink interface list port3
if=port3 family=00 type=1 index=5 mtu=1500 link=0 master=0
ref=35 state=start present fw_flags=3800 flags=up broadcast run allmulti multicast
Qdisc=pfifo_fast hw_addr=52:54:00:fb:81:0c broadcast_addr=ff:ff:ff:ff:ff:ff
outbandwidth=1000 (kbps)
      priority=0      allocated-bandwidth=0 (kbps)      total_bytes=9311K      drop_
bytes=197K
      priority=1      allocated-bandwidth=0 (kbps)      total_bytes=0      drop_bytes=0
priority=2      allocated-bandwidth=354 (kbps)      total_bytes=20407K      drop_
bytes=48K
      priority=3      allocated-bandwidth=354 (kbps)      total_bytes=7093K      drop_
bytes=1262K
      priority=4      allocated-bandwidth=290 (kbps)      total_bytes=266018K      drop_
bytes=7743K
stat: rxp=15450901 txp=25933756 rxb=5456860515 txb=17257309292 rxe=0 txe=0 rxd=0 txd=0 mc=0
collision=0 @ time=1629439926
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=35
```

High priority (2) traffic is allocated 354 kbps of bandwidth. Medium priority (3) traffic is also allocated 354 kbps of bandwidth. The remaining bandwidth is allocated to low priority (4) traffic.

In scenario 2, approximately 400 kbps of high priority traffic and 800 kbps of medium priority traffic passes through the FortiGate on port3.

### To debug the bandwidth allocation:

```
# diagnose netlink interface list port3
if=port3 family=00 type=1 index=5 mtu=1500 link=0 master=0
ref=36 state=start present fw_flags=3800 flags=up broadcast run allmulti multicast
Qdisc=pfifo_fast hw_addr=52:54:00:fb:81:0c broadcast_addr=ff:ff:ff:ff:ff:ff
outbandwidth=1000 (kbps)
      priority=0      allocated-bandwidth=7 (kbps)      total_bytes=9981K      drop_
bytes=240K
      priority=1      allocated-bandwidth=0 (kbps)      total_bytes=0      drop_bytes=0
priority=2      allocated-bandwidth=425 (kbps)      total_bytes=31478K      drop_
bytes=101K
      priority=3      allocated-bandwidth=567 (kbps)      total_bytes=12056K      drop_
bytes=1984K
      priority=4      allocated-bandwidth=0 (kbps)      total_bytes=266795K      drop_
bytes=7771K
stat: rxp=15461740 txp=25950805 rxb=5459688950 txb=17273940560 rxe=0 txe=0 rxd=0 txd=0 mc=0
collision=0 @ time=1629440553
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
```



```
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=36
```

High priority (2) traffic is allocated 425 kbps of bandwidth. Medium priority (3) traffic is allocated 567 kbps of bandwidth. Since the total bandwidth required exceeds 1000 kbps, the remaining medium priority (3) traffic is dropped. In comparing the successive debug outputs, the `drop_bytes` counter for medium priority (3) traffic gets bigger.

## DSCP matching and DSCP marking

This feature has three parts:

- [DSCP matching in firewall policies](#)
- [DSCP matching in firewall shaping policies](#)
- [DSCP marking in firewall shaping policies](#)

### DSCP matching in firewall policies

Traffic is allowed or blocked according to the Differentiated Services Code Point (DSCP) values in the incoming packets.

The following CLI variables are available in the `config firewall policy` command:

<code>tos-mask &lt;mask_value&gt;</code>	Non-zero bit positions are used for comparison. Zero bit positions are ignored (default = 0x00). This variable replaces the <code>dscp-match</code> variable.
<code>tos &lt;tos_value&gt;</code>	Type of Service (ToC) value that is used for comparison (default = 0x00). This variable is only available when <code>tos-mask</code> is not zero. This variable replaces the <code>dscp-value</code> variable.
<code>tos-negate {enable   disable}</code>	Enable/disable negated ToS match (default = disable). This variable is only available when <code>tos-mask</code> is not zero. This variable replaces the <code>dscp-negate</code> variable.

### DSCP matching in firewall shaping policies

Shaping is applied to the session or not according to the DSCP values in the incoming packets. The same logic and commands as in firewall policies are used.

### DSCP marking in firewall shaping policies


Traffic is allowed or blocked according to the DSCP values in the incoming packets. DSCP marking in firewall shaping policies uses the same logic and commands as in firewall policy and traffic-shaper.

When DSCP marking on `firewall shaper traffic-shaper`, `firewall shaping-policy`, and `firewall policy` all apply to the same session, `shaping-policy` overrides `policy`, and `shaper traffic-shaper` overrides both `shaping-policy` and `policy`.

The following CLI variables in `config firewall policy` are used to mark the packets:

<code>diffserv-forward {enable   disable}</code>	Enable/disable changing a packet's DiffServ values to the value specified in <code>diffservcode-forward</code> (default = disable).
<code>diffservcode-forward &lt;dscp_value&gt;</code>	The value that packet's DiffServ is set to (default = 000000). This variable is only available when <code>diffserv-forward</code> is enabled.
<code>diffserv-reverse {enable   disable}</code>	Enable/disable changing a packet's reverse (reply) DiffServ values to the value specified in <code>diffservcode-rev</code> (default = disable).
<code>diffservcode-rev &lt;dscp_ value&gt;</code>	The value that packet's reverse (reply) DiffServ is set to (default = 000000). This variable is only available when <code>diffserv-rev</code> is enabled.

## Examples

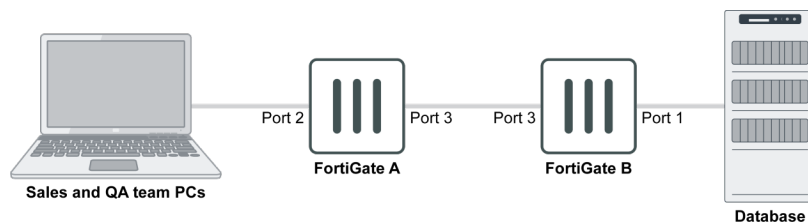

### Example 1

FortiGate A marks traffic from the sales and QA teams with different DSCP values. FortiGate B does DSCP matching, allowing only the sales team to access the database.

#### 1. Configure FortiGate A:

```

config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port3"
    set srcaddr "QA"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set diffserv-forward enable
    set diffservcode-forward 110000
    set nat enable
  next
  edit 5
    set srcintf "port2"
    set dstintf "port3"
    set srcaddr "Sales"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set diffserv-forward enable
    set diffservcode-forward 111011
    set nat enable

```

```
    next
end
```

## 2. Configure FortiGate B:

```
config firewall policy
    edit 2
        set srcintf "port3"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "Database"
        set action accept
        set schedule "always"
        set service "ALL"
        set tos-mask 0xf0
        set tos 0xe0
        set fsso disable
        set nat enable
    next
end
```

## Example 2

FortiGate A marks traffic from the sales and QA teams with different DSCP values. FortiGate B uses a firewall shaping policy to do the DSCP matching, limiting the connection speed of the sales team to the database to 10MB/s.

## 1. Configure FortiGate A:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "QA"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 110000
        set nat enable
    next
    edit 5
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "Sales"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 111011
        set nat enable
    next
end
```

## 2. Configure FortiGate B:

```
config firewall policy
  edit 2
    set srcintf "port3"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set nat enable
  next
end
config firewall shaper traffic-shaper
  edit "10MB/s"
    set guaranteed-bandwidth 60000
    set maximum-bandwidth 80000
  next
end
config firewall shaping-policy
  edit 1
    set service "ALL"
    set dstintf "port1"
    set tos-mask 0xf0
    set tos 0xe0
    set traffic-shaper "10MB/s"
    set srcaddr "all"
    set dstaddr "all"
  next
end
```

### Example 3

FortiGate A has a traffic shaping policy to mark traffic from the QA team with a DSCP value of 100000, while reverse traffic is marked with 000011.

## 1. Configure FortiGate A:

```
config firewall shaping-policy
  edit 1
    set name "QA Team 50MB"
    set service "ALL"
    set dstintf "port3"
    set traffic-shaper "50MB/s"
    set traffic-shaper-reverse "50MB/s"
    set diffserv-forward enable
    set diffserv-reverse enable
    set srcaddr "QA"
    set dstaddr "all"
    set diffservcode-forward 100000
    set diffservcode-rev 000011
  next
end
```

## Examples

This section includes the following traffic shaping configuration examples:

- [Interface-based traffic shaping profile on page 1223](#)
- [Interface-based traffic shaping with NP acceleration on page 1231](#)
- [QoS assignment and rate limiting for FortiSwitch quarantined VLANs on page 1232](#)
- [Ingress traffic shaping profile on page 1233](#)

### Interface-based traffic shaping profile

A traffic shaping policy can be used for interface-based traffic shaping by organizing traffic into 30 class IDs. The shaping profile defines the percentage of the interface bandwidth that is allocated to each class. Each traffic class ID is shaped to the assigned speed according to the outgoing bandwidth limit configured to the interface.

#### Traffic classification

A shaping policy classifies traffic and organizes it into different class IDs, based on matching criteria. For traffic matching a criteria, you can choose to put it into 30 different shaping classes, identified by class ID 2 to 31.

You must select an outgoing interface for the traffic. The shaping policy is only applied when the traffic goes to one of the selected outgoing interfaces.

Criterion	Description
<b>Source</b>	<ul style="list-style-type: none"> <li>• Address: match the source address of the traffic to the selected address or address group.</li> <li>• User: use the user credentials of the traffic to match the selected user or user group. At least one address, address group, or internet service must also be selected.</li> <li>• Internet service: match the traffic to the selected internet service. Internet services cannot be used if addresses or address or groups are used.</li> </ul>
<b>Destination</b>	<ul style="list-style-type: none"> <li>• Address: match the destination address of the traffic to the selected address or address group.</li> <li>• Internet service: match the traffic to the selected internet service. Internet services cannot be used if addresses or address or groups are used.</li> </ul>
<b>Schedule</b>	Match the current date and time to the selected schedule. You can select a one-time schedule, recurring schedule, or schedule group. This setting is optional.
<b>Service</b>	Match the service of the traffic to the selected service or service group.
<b>Application</b>	<p>Match the application of the traffic to the selected application, application category, or application group.</p> <p>Application control must be enabled in the related firewall policy to know the application of the traffic. See <a href="#">Application control on page 1395</a> for more information.</p>
<b>URL category</b>	<p>Match the URL of the traffic to the selected URL category.</p> <p>Web filter must be enabled in the related firewall policy to know the URL of the traffic. See <a href="#">Web filter on page 1314</a> for more information.</p>



When multiple items are selected in one criterion, it is considered a match when traffic matches any one of them.

## Traffic prioritization

Shaping profiles define how different shaping classes of traffic are prioritized. For each class, you can define three prioritization strategies: guaranteed bandwidth, maximum bandwidth, and priority.

For each shaping profile, a default shaping class must be defined. Traffic is prioritized based on the default shaping group in the following two circumstances:

- All traffic to the outgoing interface that does not match to any shaping policy
- Traffic with a shaping group that is not defined in a shaping profile


Prioritization strategy	Description
<b>Guaranteed bandwidth</b>	The percentage of the link speed that is reserved for the shaping group. The total guaranteed bandwidth for all shaping groups cannot exceed 100%.
<b>Maximum bandwidth</b>	The maximum percentage of the link speed that the shaping group can use.
<b>Priority</b>	The shaping class priority: top, critical, high, medium, or low. When groups are competing for bandwidth on the interface, the group with the higher priority wins.

## Applying a shaping profile to an interface

Traffic shaping is accomplished by configuring the outgoing bandwidth and outgoing shaping profile on an interface. The shaping profile uses the outgoing bandwidth of the interface as the maximum link speed, and it only works when the outgoing bandwidth is configured.

This example shows how to apply interface-based traffic shaping to web and file accessing traffic according to a schedule:

- The link speed of the wan1 interface is 10 Mb/s.
- File access can use up to 2 Mb/s from 8:00 AM to 6:00 PM.
- Web access can use 8 Mb/s from 8:00 AM to 6:00 PM.

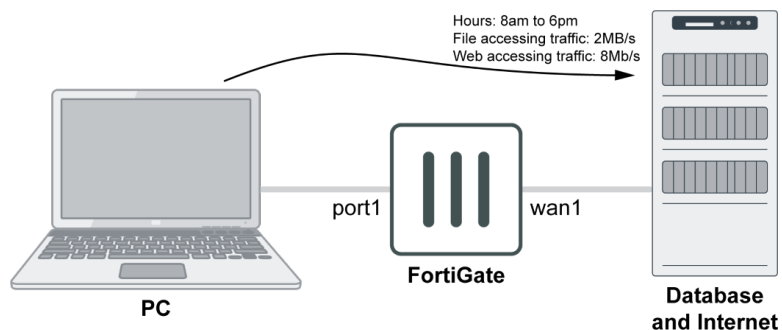

## Putting the traffic into shaping classes

### To create a recurring schedule in the GUI:

1. Go to *Policy & Objects > Schedules*.
2. Click *Create New > Schedule*.
3. Configure a recurring schedule called *Day\_Hours* for everyday from 8:00 AM to 6:00 PM.
4. Click *OK*.

### To create a traffic shaping policy and class ID for the web accessing traffic in the GUI:

1. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
2. Enter a name for the policy, such as *web\_access\_day\_hours*.
3. Enable *Schedule* and select the schedule you just created.
4. Set *Service* to web accessing services, such as *HTTP* and *HTTPS*.
5. Set *Action* to *Assign Shaping Class ID*, and *Outgoing interface* to *wan1*.
6. Click the *Traffic shaping class ID* drop down then click *Create*.
7. Enter an integer value for the *ID* (3) and a description for the *Name*, such as *Web Access*.
8. Click *OK*.
9. Select the class ID you just created for *Traffic shaping class ID*.

New Traffic Shaping Policy

IP Version: IPv4 IPv6

Name:

Status: Enabled Disabled

Comments:  48/255

If Traffic Matches:

Source:  + ✕

Destination:  + ✕

Schedule: Enabled  ▼

Service:  ✕  
 ✕  
+

Application: +

URL Category: +

Then:

Action: Apply Shaper Assign Shaping Class ID

Outgoing interface:  + ✕

Traffic shaping class ID:  ▼

Additional Information

API Preview

Documentation

Online Help Video Tutorials

OK Cancel

10. Configure the remaining settings as required.
11. Click *OK*.

### To create a traffic shaping policy and class ID for the file accessing traffic in the GUI:

1. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
2. Enter a name for the policy, such as *file\_access\_day\_hours*.

3. Enable *Schedule* and select the schedule you just created.
4. Set *Service* to file accessing services, such as *ASF3*, *FTP* and *SMB*.
5. Set *Action* to *Assign Shaping Class ID*, and *Outgoing interface* to *wan1*.
6. Click the *Traffic shaping class ID* drop down then click *Create*.
7. Enter an integer value for the *ID* (4) and a description for the *Name*, such as *File Access*.
8. Click *OK*.
9. Select the class ID you just created for *Traffic shaping class ID*.

10. Configure the remaining settings as required.
11. Click *OK*.

### To put the traffic into shaping classes in the CLI:

1. Create a recurring schedule:

```
config firewall schedule recurring
    edit "Day_Hours"
        set start 08:00
        set end 18:00
        set day sunday monday tuesday wednesday thursday friday saturday
    next
end
```

2. Create the traffic class IDs:

```
config firewall traffic-class
    edit 3
        set class-name "Web Access"
```



```
next
edit 4
    set class-name "File Access"
next
end
```

### 3. Create the web and file accessing traffic shaping policies:

```
config firewall shaping-policy
edit 2
    set name "web_access_day_hours"
    set comment "Limit web accessing traffic to 8Mb/s in day time"
    set service "HTTP" "HTTPS"
    set schedule "Day_Hours"
    set dstintf "wan1"
    set class-id 3
    set srcaddr "all"
    set dstaddr "all"
next
edit 3
    set name "file_access_day_hours"
    set comment "Limit file accessing traffic to 2Mb/s during the day"
    set service "AFS3" "FTP" "FTP_GET" "FTP_PUT" "NFS" "SAMBA" "SMB" "TFTP"
    set schedule "Day_Hours"
    set dstintf "wan1"
    set class-id 4
    set srcaddr "all"
    set dstaddr "all"
next
end
```

### Allocating bandwidth to the shaping classes

A traffic shaping profile defines the guaranteed and maximum bandwidths each class receives. In this example, file access can use up to 2 Mb/s and web access can use 8 Mb/s from 8:00 AM to 6:00 PM.

#### To create a traffic shaping profile using the GUI:

1. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Profiles* tab, and click *Create New*.
2. Enter a name for the profile, such as *Day\_Hours\_Profile*.
3. Configure a default traffic shaping class:
  - This class has a high priority, meaning that when the other classes have reached their guaranteed bandwidths, this default class will use the rest of the available bandwidth.
  - a. In the *Traffic Shaping Classes* table click *Create New*.
  - b. Click the *Traffic shaping class ID* drop down then click *Create*.
  - c. Enter a name for the class, such as *Default Access*.
  - d. Click *OK*.
  - e. Select the class ID you just created for *Traffic shaping class ID*.

- f. Configure the following settings, then click **OK**:

<b>Guaranteed bandwidth</b>	30
<b>Maximum bandwidth</b>	100
<b>Priority</b>	High

4. Configure a web accessing traffic shaping class:

When other types of traffic are competing for bandwidth, this class is guaranteed to 6 Mb/s, or 60% of the bandwidth.

- a. In the *Traffic Shaping Classes* table click *Create New*.
- b. Configure the following settings, then click **OK**:

<b>Traffic shaping class ID</b>	Web Access
<b>Guaranteed bandwidth</b>	60
<b>Maximum bandwidth</b>	80
<b>Priority</b>	Medium

5. Configure a file accessing traffic shaping class:

When other types of traffic are competing for bandwidth, this group is guaranteed to 1 Mb/s, or 10% of the bandwidth.

- a. In the *Traffic Shaping Classes* table click *Create New*.
- b. Configure the following settings, then click **OK**:

<b>Traffic shaping class ID</b>	File Access
<b>Guaranteed bandwidth</b>	10
<b>Maximum bandwidth</b>	20
<b>Priority</b>	Medium

Create Traffic Shaping Profile

Name

Day\_Hours\_Profile

Comments

Write a comment...

Traffic Shaping Classes

+ Create New

Edit

Delete

Set as Default

Search

Q

Default	Class ID	Guaranteed Bandwidth	Maximum Bandwidth	Priority
Yes	Default Access (2)	30%	100%	High
	Web Access (3)	60%	80%	Medium
	File Access (4)	10%	20%	Medium

Guaranteed Bandwidth Usage

Default Access (2)

Web Access (3)

File Access (4)

Not Allocated

FortiGate

FGDocs

Additional Information

API Preview

Documentation

[Online Help](#)
[Video Tutorials](#)

OK

Cancel

6. Click OK.

### To create a traffic shaping profile using the CLI:

```
config firewall shaping-profile
  edit "Day_Hours_Profile"
    set default-class-id 2
    config shaping-entries
      edit 1
        set class-id 2
        set guaranteed-bandwidth-percentage 30
        set maximum-bandwidth-percentage 100
      next
      edit 2
        set class-id 3
        set priority medium
        set guaranteed-bandwidth-percentage 60
        set maximum-bandwidth-percentage 80
      next
      edit 3
        set class-id 4
```

FortiOS 7.2.6 Administration Guide  
Fortinet Inc.

1229

```

        set priority medium
        set guaranteed-bandwidth-percentage 10
        set maximum-bandwidth-percentage 20
    next
end
next
end

```

## Defining the available bandwidth on an interface

In this example, the link speed of the wan1 interface is 10 Mb/s.

### To set the bandwidth of the wan1 interface in the GUI:

1. Go to *Network > Interfaces*.
2. Edit the wan1 interface.
3. Under Traffic Shaping, enable *Outbound shaping profile* and select the profile that you just created, *Day\_Hours\_Profile*.
4. Enable *Outbound Bandwidth* and set it to 10000 Kbps.

5. Click **OK**.

### To set the bandwidth of the wan1 interface in the CLI:

```

config system interface
    edit "wan1"
        set egress-shaping-profile "Day_Hours_Profile"
        set outbandwidth 10000
    next
end

```

## Diagnose commands

### To check that the specific traffic is put into the correct shaping group or class ID:

```
# diagnose firewall iprope list 100015
```

**To check the speed limit for each class ID on an interface:**

```
# diagnose netlink interface list wan1
```

**Interface-based traffic shaping with NP acceleration**

Interface-based traffic shaping with NP acceleration is supported on some devices.

An administrator configures the WAN interface's maximum outbound bandwidth and, based on that, creates a traffic shaping profile with a percentage based shaper. This allows for proper QoS and traffic shaping. VLAN interfaces are not supported.



This feature is supported on FortiGate 600E, 500E, 400E, and 300E models.

---

**To configure interface-based traffic shaping:**

1. Enable NPU offloading when doing interface-based traffic shaping according to the egress-shaping-profile:

```
config system npu
    set intf-shaping-offload enable
end
```

2. Configure shaping profiles:

```
config firewall shaping-profile
    edit "sdwan"
        set default-class-id 4
        config shaping-entries
            edit 1
                set class-id 4
                set guaranteed-bandwidth-percentage 3
                set maximum-bandwidth-percentage 5
            next
            edit 2
                set class-id 3
                set priority medium
                set guaranteed-bandwidth-percentage 50
                set maximum-bandwidth-percentage 100
            next
            edit 3
                set class-id 2
                set priority low
                set guaranteed-bandwidth-percentage 1
                set maximum-bandwidth-percentage 5
            next
        end
    next
end
```

The class number is limited to 16.

**3. Configure a traffic shaper and shaping policy:**

```
config firewall shaper traffic-shaper
    edit "Transactional"
        set priority medium
    next
end

config firewall shaping-policy
    edit 1
        set service "ALL"
        set dstintf "any"
        set traffic-shaper "Transactional"
        set class-id 3
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

**4. Apply the egress shaping profile on the interface:**

```
config system interface
    edit "port2"
        set vdom "root"
        set ip 10.1.100.23 255.255.255.0
        set allowaccess ping
        set type physical
        set outbandwidth 500
        set egress-shaping-profile "sdwan"
        set snmp-index 4
    next
end
```

**5. Configure a firewall policy:**

```
config firewall policy
    edit 3
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
    next
end
```

## QoS assignment and rate limiting for FortiSwitch quarantined VLANs

When devices are quarantined, they are isolated from the rest of the network. However, they can still impact the network if not controlled beyond isolation. A quarantined host, which offers heavy traffic, could congest the network and create a DOS-style reduction in service to authorized hosts.

Within the quarantined VLAN, two restrictions are available within the network:

- Traffic policing (also known as rate limiting)
- QoS (Quality of Service) assignment (also known as priority assignment)

Each quarantined host's traffic can be subject to rate limiting and priority adjustment. This reduces the impact that any quarantined host can have on authorized traffic on the network.

### To configure QoS assignment and rate limiting for quarantined VLANs:

1. Configure a traffic policy, or use the default "quarantine" policy:

```
config switch-controller traffic-policy
  edit "quarantine"
    set description "Rate control for quarantined traffic"
    set guaranteed-bandwidth 163840
    set guaranteed-burst 8192
    set maximum-burst 163840
    set cos-queue 0
  next
end
```

2. Configure an interface:

```
config system interface
  edit "qtn.aggr1"
    set vdom "root"
    set ip 10.254.254.254 255.255.255.0
    set description "Quarantine VLAN"
    set security-mode captive-portal
    set replacemsg-override-group "auth-intf-qtn.aggr1"
    set device-identification enable
    set snmp-index 30
    set switch-controller-access-vlan enable
    set switch-controller-traffic-policy "quarantine"
    set color 6
    set interface "aggr1"
    set vlanid 4093
  next
end
```

By default, switch-controller-traffic-policy is empty. You need to apply the necessary traffic policy (not only limited to "quarantine").

## Ingress traffic shaping profile

A traffic shaping profile can be applied to an interface for traffic in the ingress direction. Similar to an egress traffic shaping profile, the guaranteed bandwidth and priority of the profile will be respected when an interface receives inbound traffic. When congestion occurs, any remaining bandwidth will be allotted to classes based on priority.




Ingress traffic shaping does not support NPU offloading.

---

## Example

In this example, the port2 interface has a total inbound bandwidth of 100 Mbps. Traffic from certain clients to certain servers are assigned different classes.

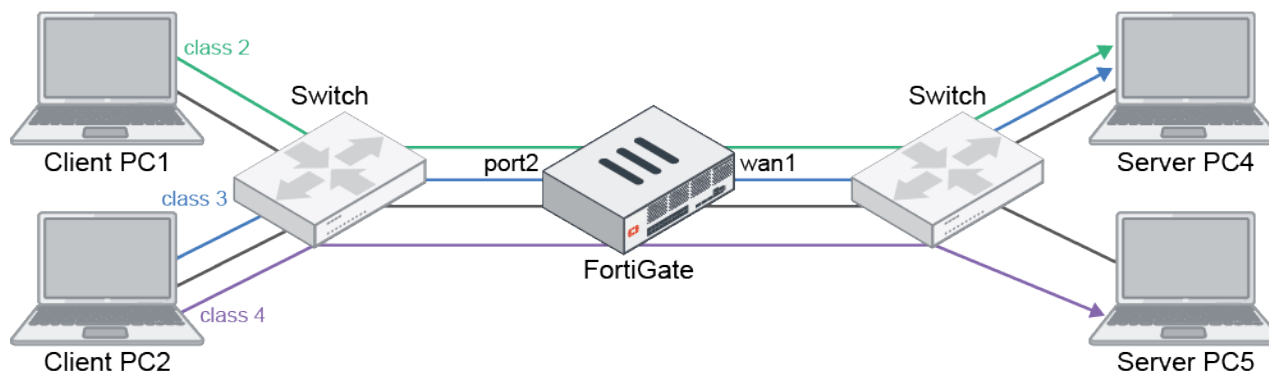

IPv6 traffic from any client PCs to server PCs is assigned class 5.

For each class, the priority, guaranteed bandwidth, and maximum bandwidth are as follows:

Class	Priority	Guaranteed bandwidth	Maximum bandwidth
2	Low	10%	60%
3	High	20%	100%
4	High	30%	100%
5	Medium	10%	50%

Bandwidth will first be allotted to each class according to its guaranteed bandwidth. Then remaining available bandwidth will be allotted to class 3 and 4 first based on their priority. The allocation will be proportional to their guaranteed bandwidth ratio.

### To configure ingress traffic shaping:

#### 1. Configure the client and server addresses:

```
config firewall address
  edit "pc1"
    set subnet 10.1.100.11 255.255.255.255
  next
  edit "pc2"
    set subnet 10.1.100.22 255.255.255.255
  next
  edit "pc4"
    set subnet 172.16.200.44 255.255.255.255
  next
  edit "pc5"
    set subnet 172.16.200.55 255.255.255.255
  next
end
```



**2. Configure the class IDs:**

```
config firewall traffic-class
  edit 2
    set class-name "class2"
  next
  edit 3
    set class-name "class3"
  next
  edit 4
    set class-name "class4"
  next
  edit 4
    set class-name "class5"
  next
end
```

**3. Configure traffic shaping policies to assign classes to each group of traffic.****a. Configure a policy to assign traffic from PC1 to PC4 in class 2:**

```
config firewall shaping-policy
  edit 1
    set name "shaping policy 1"
    set service "ALL"
    set dstintf "wan1"
    set class-id 2
    set srcaddr "pc1"
    set dstaddr "pc4"
  next
end
```

**b. Configure a policy to assign traffic from PC2 to PC4 in class 3:**

```
config firewall shaping-policy
  edit 2
    set name "shaping policy 2"
    set service "ALL"
    set dstintf "wan1"
    set class-id 3
    set srcaddr "pc2"
    set dstaddr "pc4"
  next
end
```

**c. Configure a policy to assign traffic from PC2 to PC5 in class 4:**

```
config firewall shaping-policy
  edit 3
    set name "shaping policy 3"
    set service "ALL"
    set dstintf "wan1"
    set class-id 4
    set srcaddr "pc2"
    set dstaddr "pc5"
  next
end
```

**d. Configure a policy to assign all IPv6 traffic to class 5:**

```
config firewall shaping-policy
  edit 4
    set name "shaping policy 4"
    set ip-version 6
    set service "ALL"
    set dstintf "wan1"
    set class-id 5
    set srcaddr6 "all"
    set dstaddr6 "all"
  next
end
```

**4. Configure a shaping profile to set the priority, and the guaranteed and maximum bandwidth percentages for each class:**

```
config firewall shaping-profile
  edit "ingShapeProfile"
    set default-class-id 2
    config shaping-entries
      edit 2
        set class-id 2
        set priority low
        set guaranteed-bandwidth-percentage 10
        set maximum-bandwidth-percentage 60
      next
      edit 3
        set class-id 3
        set guaranteed-bandwidth-percentage 20
        set maximum-bandwidth-percentage 100
      next
      edit 4
        set class-id 4
        set guaranteed-bandwidth-percentage 30
        set maximum-bandwidth-percentage 100
      next
      edit 5
        set class-id 5
        set priority medium
        set guaranteed-bandwidth-percentage 10
        set maximum-bandwidth-percentage 50
      next
    end
  next
end
```

**5. Configure the inbandwidth and apply the ingress shaping profile on port2:**

```
config system interface
  edit "port2"
    set ip 10.1.100.1 255.255.255.0
    set inbandwidth 100000
    set ingress-shaping-profile "ingShapeProfile"
  config ipv6
    set ip6-address 2000:10:1:100::1/64
  end
```

```

    next
end

```

Inbandwidth must be configured for traffic shaping to take effect.

6. Configure a firewall policy to allow traffic to go through. Since traffic shaping is for inbound traffic on port2, the policy is defined from port2 to wan1:

```

config firewall policy
    edit 2
        set srcintf "port2"
        set dstintf "wan1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end

```

NPU must be disabled by configuring `set auto-asic-offload disable`.

### Verifying that the traffic is being shaped

In each of the following cases, the server PCs (PC4 and PC5) are configured as iPerf servers. The client PCs (PC1 and PC2) are configured as iPerf clients. The client sends traffic to the server from the client to server direction, triggering inbound traffic shaping on the port2 interface. The inbound bandwidth on port2 is 100 Mbps.

#### Case 1: single stream, PC1 to PC4

Traffic is sent from PC1 to PC4. There is no other traffic. Traffic is marked with class ID 2 and allocated the maximum bandwidth 60 Mbps (60%).

```

# diagnose netlink interface list port2
if=port2 family=00 type=1 index=20 mtu=1500 link=0 master=0
ref=25 state=start present fw_flags=3800 flags=up broadcast run multicast
Qdisc=mq hw_addr=70:4c:a5:7d:d4:95 broadcast_addr=ff:ff:ff:ff:ff:ff
ingress traffic control:
    bandwidth=100000 (kbps) lock_hit=50 default_class=2 n_active_class=4
    class-id=2      allocated-bandwidth=60000 (kbps)      guaranteed-bandwidth=10000
(kbps)
    max-bandwidth=60000 (kbps)      current-bandwidth=60002 (kbps)
    priority=low      forwarded_bytes=58157K
    dropped_packets=94K      dropped_bytes=125385K
    class-id=5      allocated-bandwidth=1000 (kbps)      guaranteed-bandwidth=10000 (kbps)
    max-bandwidth=50000 (kbps)      current-bandwidth=0 (kbps)
    priority=medium      forwarded_bytes=0
    dropped_packets=0      dropped_bytes=0
    class-id=3      allocated-bandwidth=15000 (kbps)      guaranteed-bandwidth=20000
(kbps)
    max-bandwidth=100000 (kbps)      current-bandwidth=0 (kbps)
    priority=high      forwarded_bytes=0

```

```

dropped_packets=0      dropped_bytes=0
class-id=4             allocated-bandwidth=24000 (kbps)      guaranteed-bandwidth=30000
(kbps)
max-bandwidth=100000 (kbps)      current-bandwidth=0 (kbps)
priority=high      forwarded_bytes=0
dropped_packets=0      dropped_bytes=0
stat: rxp=173465879 txp=2430534 rxb=194665548609 txb=2767375732 rxe=0 txe=0 rxd=0 txd=0 mc=0
collision=0 @ time=1628814469
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=25

```

## Case 2: dual stream, PC1 to PC4, PC2 to PC4

Traffic is sent from both PC1 and PC2 to PC4. PC1 to PC4 traffic is marked with class ID 2 and low priority, and PC2 to PC4 traffic is marked with class ID 3 and high priority. Both class 2 and 3 will be allocated their guaranteed bandwidth first, using up 10% and 20% respectively. The remaining available bandwidth is used by class 3 since it has a higher priority. Class 2 uses around 10 Mbps, and class 3 uses around 90 Mbps.

```

# diagnose netlink interface list port2
if=port2 family=00 type=1 index=20 mtu=1500 link=0 master=0
ref=36 state=start present fw_flags=3800 flags=up broadcast run multicast
Qdisc=mq hw_addr=70:4c:a5:7d:d4:95 broadcast_addr=ff:ff:ff:ff:ff:ff
ingress traffic control:
    bandwidth=100000 (kbps) lock_hit=181 default_class=2 n_active_class=4
    class-id=2      allocated-bandwidth=10000 (kbps)      guaranteed-bandwidth=10000
(kbps)
max-bandwidth=60000 (kbps)      current-bandwidth=10001 (kbps)
priority=low      forwarded_bytes=1799482K
dropped_packets=5998K      dropped_bytes=7965553K
class-id=5      allocated-bandwidth=1000 (kbps)      guaranteed-bandwidth=1000 (kbps)
max-bandwidth=50000 (kbps)      current-bandwidth=0 (kbps)
priority=medium      forwarded_bytes=0
dropped_packets=0      dropped_bytes=0
class-id=3      allocated-bandwidth=88000 (kbps)      guaranteed-bandwidth=20000
(kbps)
max-bandwidth=100000 (kbps)      current-bandwidth=88000 (kbps)
priority=high      forwarded_bytes=345039K
dropped_packets=324K      dropped_bytes=430862K
class-id=4      allocated-bandwidth=1000 (kbps)      guaranteed-bandwidth=30000 (kbps)
max-bandwidth=100000 (kbps)      current-bandwidth=0 (kbps)
priority=high      forwarded_bytes=0
dropped_packets=0      dropped_bytes=0
stat: rxp=181269891 txp=2433428 rxb=205136511596 txb=2771214402 rxe=0 txe=0 rxd=0 txd=0 mc=0
collision=0 @ time=1628815849
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=36

```

## Case 3: multiple streams

Multiple streams of traffic are sent at the same time:

- PC1 to PC4 traffic is assigned class 2 with low priority, and a guaranteed bandwidth of 10 Mbps.
- PC2 to PC4 traffic is assigned class 3 with high priority, and a guaranteed bandwidth of 20 Mbps.
- PC2 to PC5 traffic is assigned class 4 with high priority, and a guaranteed bandwidth of 30 Mbps.

All classes will be allocated their guaranteed bandwidth first, using up 10 Mbps, 20 Mbps, and 30 Mbps respectively. The remaining available bandwidth (40 Mbps) is shared by class 3 and class 4 based on their guaranteed bandwidth ratio of 20:30.

- Class 3's share of the remaining 40 Mbps traffic =  $40 \times 20 / (20 + 30) = 16$  Mbps
- Class 4's share of the remaining 40 Mbps traffic =  $40 \times 30 / (20 + 30) = 24$  Mbps

Each class is allocated roughly the following bandwidth:

- Class 2: 10 Mbps
- Class 3: 20 Mbps + 16 Mbps = 36 Mbps
- Class 4: 30 Mbps + 24 Mbps = 54 Mbps

```
# diagnose netlink interface list port2
if=port2 family=00 type=1 index=20 mtu=1500 link=0 master=0
ref=27 state=start present fw_flags=3800 flags=up broadcast run multicast
Qdisc=mq hw_addr=70:4c:a5:7d:d4:95 broadcast_addr=ff:ff:ff:ff:ff:ff
ingress traffic control:
    bandwidth=100000 (kbps) lock_hit=148731 default_class=2 n_active_class=4
    class-id=2 allocated-bandwidth=10000 (kbps) guaranteed-bandwidth=10000
(kbps)
    max-bandwidth=60000 (kbps) current-bandwidth=10004 (kbps)
    priority=low forwarded_bytes=2267956K
    dropped_packets=10389K dropped_bytes=13796469K
    class-id=5 allocated-bandwidth=1000 (kbps) guaranteed-bandwidth=10000 (kbps)
    max-bandwidth=50000 (kbps) current-bandwidth=0 (kbps)
    priority=medium forwarded_bytes=0
    dropped_packets=0 dropped_bytes=0
    class-id=3 allocated-bandwidth=35000 (kbps) guaranteed-bandwidth=20000
(kbps)
    max-bandwidth=100000 (kbps) current-bandwidth=35729 (kbps)
    priority=high forwarded_bytes=2119502K
    dropped_packets=6020K dropped_bytes=7994926K
    class-id=4 allocated-bandwidth=54000 (kbps) guaranteed-bandwidth=30000
(kbps)
    max-bandwidth=100000 (kbps) current-bandwidth=53907 (kbps)
    priority=high forwarded_bytes=902415K
    dropped_packets=4141K dropped_bytes=5499248K
stat: rxp=197827723 txp=2433885 rxb=227356779526 txb=2771602657 rxe=0 txe=0 rxd=0 txd=0 mc=0
collision=0 @ time=1628816440
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
input_type=0 state=3 arp_entry=0 refcnt=27
```

## Internet Services

The following topics provide instructions on configuring policies with Internet Service:

- [Using Internet Service in a policy on page 1240](#)
- [Using custom Internet Service in policy on page 1244](#)
- [Using extension Internet Service in policy on page 1245](#)
- [Global IP address information database on page 1248](#)
- [IP reputation filtering on page 1250](#)
- [Internet service groups in policies on page 1251](#)
- [Allow creation of ISDB objects with regional information on page 1255](#)
- [Internet service customization on page 1257](#)
- [Look up IP address information from the Internet Service Database page on page 1258](#)
- [Internet Service Database on-demand mode on page 1259](#)

## Using Internet Service in a policy

This topic shows how to apply a predefined Internet Service entry into a policy.

The Internet Service Database is a comprehensive public IP address database that combines IP address range, IP owner, service port number, and IP security credibility. The data comes from the FortiGuard service system. Information is regularly added to this database, for example, geographic location, IP reputation, popularity & DNS, and so on. All this information helps users define Internet security more effectively. You can use the contents of the database as criteria for inclusion or exclusion in a policy.

From FortiOS version 5.6, Internet Service is included in the firewall policy. It can be applied to a policy only as a destination object. From version 6.0, Internet Service can be applied both as source and destination objects in a policy. You can also apply Internet Services to shaping policy.


There are three types of Internet Services you can apply to a firewall policy:

- Predefined Internet Services
- Custom Internet Services
- Extension Internet Services

## Sample IPv4 configuration

To apply a predefined Internet Service entry to a policy using the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Click in the *Destination* field.
3. In the *Select Entries* pane, click *Internet Service* and select *Google-Gmail*.

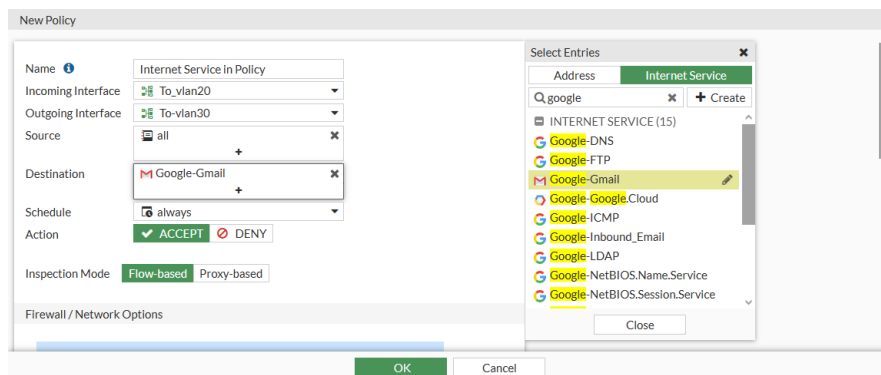

4. Configure the remaining fields as needed.
5. Click **OK**.

### To apply a predefined Internet Service entry to a policy in the CLI:

In the CLI, enable the `internet-service` first and then use its ID to apply the policy.

This example uses Google Gmail and its ID is 65646. Each Internet Service has a unique ID.

```
config firewall policy
  edit 9
    set name "Internet Service in Policy"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set internet-service enable
    set internet-service-id 65646
    set action accept
    set schedule "always"
    set utm-status enable
    set av-profile "g-default"
    set ssl-ssh-profile "certificate-inspection"
    set nat enable
  next
end
```

### To diagnose an Internet Service entry in the CLI:

```
# diagnose internet-service id-summary 65646
Version: 0000600096
Timestamp: 201902111802
Total number of IP ranges: 444727
Number of Groups: 7
Group(0), Singularity(20), Number of IP ranges(142740)
Group(1), Singularity(19), Number of IP ranges(1210)
Group(2), Singularity(16), Number of IP ranges(241)
Group(3), Singularity(15), Number of IP ranges(38723)
Group(4), Singularity(10), Number of IP ranges(142586)
Group(5), Singularity(8), Number of IP ranges(5336)
Group(6), Singularity(6), Number of IP ranges(113891)
Internet Service: 65646(Google.Gmail)
Number of IP range: 60
Number of IP numbers: 322845
Singularity: 15
Reputation: 5(Known and verified safe sites such as Gmail, Amazon, eBay, etc.)
Icon Id: 510
Second Level Domain: 53(gmail.com)
Direction: dst
Data source: isdb
```

## Result


Because the IP and services related to Google Gmail on the Internet are included in this Internet Service (65646), all traffic to Google Gmail is forwarded by this policy.

## Sample IPv6 configuration


In this example, the Google Gmail IPv6 ISDB address (ID 65646) is used as a destination in a firewall policy.

**To apply a predefined IPv6 Internet Service entry to a policy using the GUI:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. In the *Destination* field, click the + and select the *Internet Service* tab.
3. In the *IPV6 INTERNET SERVICE* section, select *Google Gmail*.

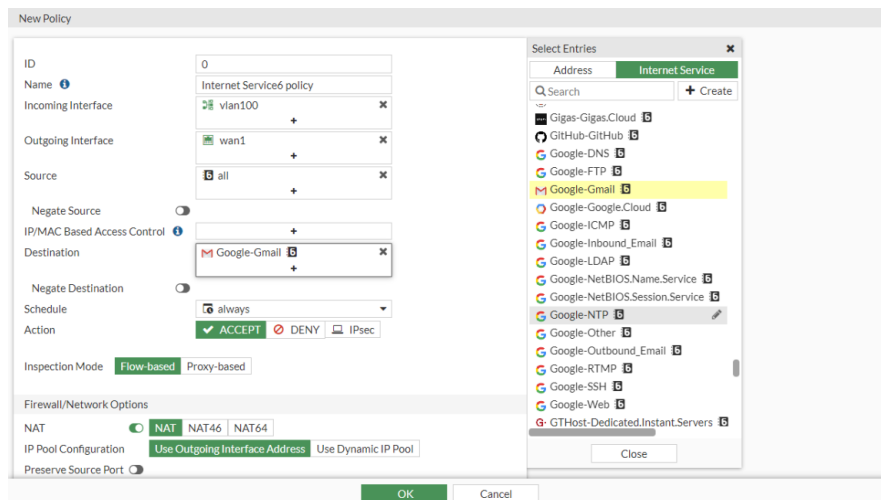

4. Optionally, hover over the *Google Gmail* and click *View/Edit Entries*. A pane appears that displays the IPv6 address ranges for this Internet Service.

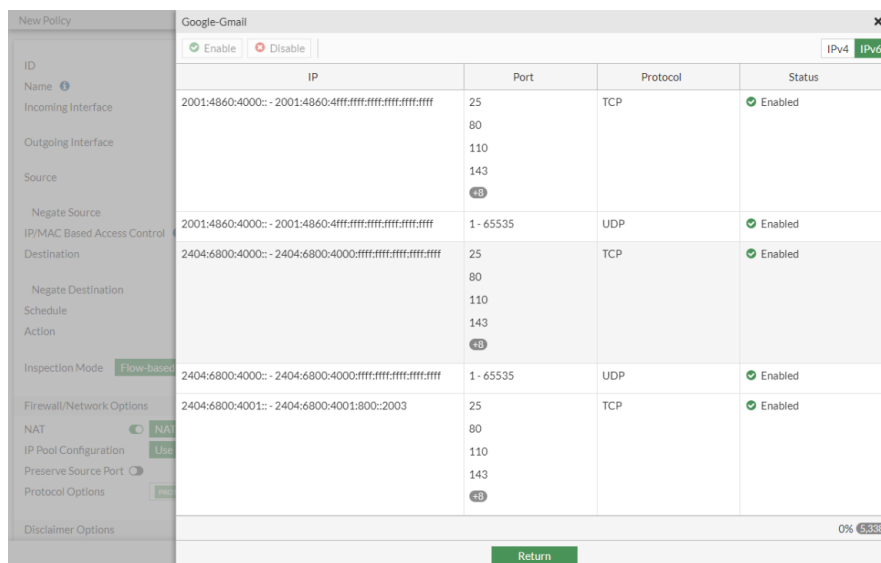

5. Click *Return* to close the pane.
6. Configure the other settings as needed.
7. Click *OK*.



**To apply a predefined IPv6 Internet Service entry to a policy using the CLI:**

```
config firewall policy
  edit 4
    set name "Internet Service6 policy"
    set srcintf "vlan100"
    set dstintf "wan1"
    set action accept
    set srcaddr6 "all"
    set internet-service6 enable
    set internet-service6-name "Google-Gmail"
    set schedule "always"
    set nat enable
  next
end
```

**To diagnose an IPv6 Internet Service entry in the CLI:**

```
# diagnose internet-service6 id-summary 65646

Version: 00007.02907
Timestamp: 202212161345
Total number of IP ranges: 36878
Number of Groups: 12
Group(0), Singularity(20), Number of IP ranges(60)
Group(1), Singularity(18), Number of IP ranges(12)
Group(2), Singularity(17), Number of IP ranges(2728)
Group(3), Singularity(16), Number of IP ranges(2812)
Group(4), Singularity(15), Number of IP ranges(4011)
Group(5), Singularity(10), Number of IP ranges(2345)
Group(6), Singularity(9), Number of IP ranges(14)
Group(7), Singularity(8), Number of IP ranges(1555)
Group(8), Singularity(7), Number of IP ranges(2704)
Group(9), Singularity(6), Number of IP ranges(7300)
Group(10), Singularity(5), Number of IP ranges(3154)
Group(11), Singularity(4), Number of IP ranges(10183)
Internet Service: 65646(Google-Gmail)
Number of IP ranges: 482
Singularity: 15
Icon Id: 510
Direction: both
Data source: isdb
Country: 32 36 56 76 124 152 158 203 208 246 250 276 344 348 356 372 376 380 392 404 458 484
        528 616 634 643 682 702 710 724 752 756 784 826 840
Region: 65535
City: 65535
```

**Result**

Because the IP and services related to Google Gmail on the Internet are included in this Internet Service (65646), all traffic to Google Gmail is forwarded by this policy.

## Using custom Internet Service in policy

Custom Internet Services can be created and used in firewall policies.

When creating a custom Internet Service, you must set following elements:

- IP or IP ranges
- Protocol number
- Port or port ranges
- Reputation

You must use CLI to create a custom Internet Service, except for geographic based services (see [Allow creation of ISDB objects with regional information on page 1255](#)).

### CLI syntax

```
config firewall internet-service-custom
  edit <name>
    set comment <comment>
    set reputation {1 | 2 | 3 | 4 | 5}
    config entry
      edit <ID>
        set protocol <protocol #>
        set dst <object_name>
        config port-range
          edit <ID>
            set start-port <port #>
            set end-port <port #>
          next
        end
      next
    end
  end
end
```

### Sample configuration

#### To configure a custom Internet Service:

```
config firewall internet-service-custom
  edit "test-isdb-1"
    set comment "Test Custom Internet Service"
    set reputation 4
    config entry
      edit 1
        set protocol 6
        config port-range
          edit 1
            set start-port 80
            set end-port 443
          next
        end
      set dst "10-1-100-0"
```

```
        next
        edit 2
            set protocol 6
            config port-range
                edit 1
                    set start-port 80
                    set end-port 80
                next
            end
            set dst "172-16-200-0"
        next
    end
next
end
```

**To apply a custom Internet Service into a policy:**

```
config firewall policy
    edit 1
        set name "Internet Service in Policy"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set internet-service enable
        set internet-service-id 65646
        set internet-service-custom "test-isdb-1"
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

**Result**

In addition to the IP address, IP address ranges, and services allowed by Google.Gmail, this policy also allows the traffic which access to 10.1.100.0/24 and TCP/80-443 and 172.16.200.0/24 and TCP/80.

## Using extension Internet Service in policy

Extension Internet Service lets you add custom or remove existing IP address and port ranges to an existing predefined Internet Service entries. Using an extension type Internet Service is actually editing a predefined type Internet Service entry and adding IP address and port ranges to it.

When creating an extension Internet Service and adding custom ranges, you must set following elements:

- IP or IP ranges
- Protocol number
- Port or port ranges

You must use CLI to add custom IP address and port entries into a predefined Internet Service.

You must use GUI to remove entries from a predefined Internet Service.

## Custom extension Internet Service CLI syntax

```
config firewall internet-service-extension
  edit <ID #>
    set comment <comment>
    config entry
      edit <ID #>
        set protocol <number #>
        set dst <object_name>
        config port-range
          edit <ID #>
            set start-port <number #>
            set end-port <number #>
          next
        end
      next
    end
  end
end
```


## Sample configuration

### To configure an extension Internet Service in the CLI:

```
config firewall internet-service-extension
  edit 65646
    set comment "Test Extension Internet Service 65646"
    config entry
      edit 1
        set protocol 6
        config port-range
          edit 1
            set start-port 80
            set end-port 443
          next
        end
        set dst "172-16-200-0"
      next
      edit 2
        set protocol 17
        config port-range
          edit 1
            set start-port 53
            set end-port 53
          next
        end
        set dst "10-1-100-0"
      next
    end
  next
end
```

**To remove IP address and port entries from an existing Internet Service in the GUI:**

1. Go to *Policy & Objects > Internet Service Database*.
2. Search for *Google-Gmail*.
3. Select *Google-Gmail* and click *Edit*.
4. In the gutter, click *View/Edit Entries*.
5. Select the *IP* entry that you need to remove and click *Disable*.

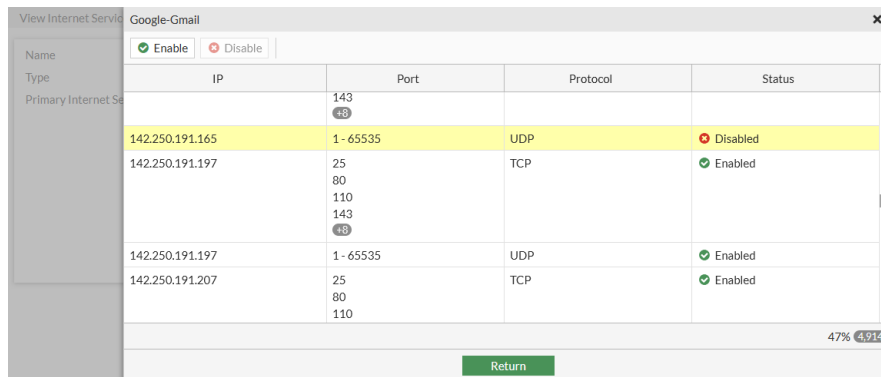

6. Click *Return* twice.

**To remove IP address and port entries from an existing Internet Service in the CLI:**

```
config firewall internet-service-extension
  edit 65646
    config disable-entry
      edit 1
        set protocol 17
        config port-range
          edit 1
            next
          end
        config ip-range
          edit 1
            set start-ip 142.250.191.165
            set end-ip 142.250.191.165
          next
        end
      next
    end
  next
end
next
end
```

**To apply an extension Internet Service into policy in the CLI:**

```
config firewall policy
  edit 9
    set name "Internet Service in Policy"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set internet-service enable
    set internet-service-id 65646
```

```
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

## Result

In addition to the IP addresses, IP address ranges, and services allowed by Google.Gmail, this policy also allows the traffic which accesses 10.1.100.0/24 and UDP/53 and 172.16.200.0/24 and TCP/80-443. At the same time, the traffic that accesses 2.20.183.160 is dropped because this IP address and port is disabled from Google.Gmail.

## Global IP address information database

The Internet Service and IP Reputation databases download details about public IP address, including: ownership, known services, geographic location, blocklisting information, and more. The details are available in drilldown information, tooltips, and other mechanisms in the FortiView and other pages.

The global IP address database is an integrated database containing all public IP addresses, and is implemented in the Internet Service Database.

### To view the owner of the IP address:

```
(global) # get firewall internet-service-owner ?
id      Internet Service owner ID.
1  Google
2  Facebook
3  Apple
4  Yahoo
5  Microsoft
.....
115  Cybozu
116  VNC
```

### To check for any known service running on an IP address:

```
(global) # diagnose internet-service info FG-traffic 6 80 8.8.8.8
Internet Service: 65537(Google.Web)
```

### To check GeoIP location and blocklist information:

```
(global) # diagnose internet-service id 65537 | grep 8.8.8.8
8.8.8.8-8.8.8.8 geo_id(11337) block list(0x0) proto(6) port(80 443)
8.8.8.8-8.8.8.8 geo_id(11337) block list(0x0) proto(17) port(443)
```

### To check a known malicious server:

```
(global) # diagnose internet-service id-summary 3080383
Version: 0000600096
Timestamp: 201902111802
```

```
Total number of IP ranges: 444727
Number of Groups: 7
Group(0), Singularity(20), Number of IP ranges(142740)
Group(1), Singularity(19), Number of IP ranges(1210)
Group(2), Singularity(16), Number of IP ranges(241)
Group(3), Singularity(15), Number of IP ranges(38723)
Group(4), Singularity(10), Number of IP ranges(142586)
Group(5), Singularity(8), Number of IP ranges(5336)
Group(6), Singularity(6), Number of IP ranges(113891)
Internet Service: 3080383(Botnet.C&C.Server)
Number of IP range: 111486
Number of IP numbers: 111486
Singularity: 20
Reputation: 1(Known malicious sites related to botnet servers, phishing sites, etc.)
Icon Id: 591
Second Level Domain: 1(other)
Direction: dst
Data source: irdb
```

### To check questionable usage:

```
(global) # diagnose internet-service id-summary 2818238
Version: 0000600096
Timestamp: 201902111802
Total number of IP ranges: 444727
Number of Groups: 7
Group(0), Singularity(20), Number of IP ranges(142740)
Group(1), Singularity(19), Number of IP ranges(1210)
Group(2), Singularity(16), Number of IP ranges(241)
Group(3), Singularity(15), Number of IP ranges(38723)
Group(4), Singularity(10), Number of IP ranges(142586)
Group(5), Singularity(8), Number of IP ranges(5336)
Group(6), Singularity(6), Number of IP ranges(113891)
Internet Service: 2818238(Tor.Relay.Node)
Number of IP range: 13718
Number of IP numbers: 13718
Singularity: 20
Reputation: 2(Sites providing high risk services such as TOR, proxy, P2P, etc.)
Icon Id: 43
Second Level Domain: 1(other)
Direction: dst
Data source: irdb
```

```
(global) # diagnose internet-service id-summary 2818243
Version: 0000600096
Timestamp: 201902111802
Total number of IP ranges: 444727
Number of Groups: 7
Group(0), Singularity(20), Number of IP ranges(142740)
Group(1), Singularity(19), Number of IP ranges(1210)
Group(2), Singularity(16), Number of IP ranges(241)
Group(3), Singularity(15), Number of IP ranges(38723)
Group(4), Singularity(10), Number of IP ranges(142586)
Group(5), Singularity(8), Number of IP ranges(5336)
Group(6), Singularity(6), Number of IP ranges(113891)
Internet Service: 2818243(Tor.Exit.Node)
```

```
Number of IP range: 1210
Number of IP numbers: 1210
Singularity: 19
Reputation: 2 (Sites providing high risk services such as TOR, proxy, P2P, etc.)
Icon Id: 43
Second Level Domain: 1 (other)
Direction: src
Data source: irdb
```

## IP reputation filtering

There are currently five reputation levels in the Internet Service Database (ISDB), and custom reputation levels can be defined in a custom internet service. You can configure firewall policies to filter traffic according to the desired reputation level. If the reputation level of either the source or destination IP address is equal to or greater than the level set in the policy, then the packet is forwarded, otherwise, the packet is dropped.

The five default reputation levels are:

1	Known malicious sites, such as phishing sites or sites related to botnet servers
2	High risk services sites, such as TOR, proxy, and P2P
3	Unverified sites
4	Reputable social media sites, such as Facebook and Twitter
5	Known and verified safe sites, such as Gmail, Amazon, and eBay

The default minimum reputation level in a policy is zero, meaning that the reputation filter is disabled.

For IP addresses that are not included in the ISDB, the default reputation level is three.

The default reputation direction is `destination`.

### Example 1

Packets from the source IP address with reputation levels three, four, or five will be forwarded by this policy.

#### To set the reputation level and direction in a policy using the CLI:

```
config firewall policy
  edit 1
    set srcintf "wan2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set reputation-minimum 3
    set reputation-direction source
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set auto-asic-offload disable
```



```
        set nat enable
    next
end
```

Packets from the source IP address with reputation levels three, four, or five will be forwarded by this policy.

## Example 2

This policy allows only outbound FTP traffic, if the destination server has a minimum reputation of 4.

### To set the reputation level and direction in a policy using the CLI:

```
config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "wan2"
        set srcaddr "all"
        set dstaddr "all"
        set reputation-minimum 4
        set reputation-direction destination
        set action accept
        set schedule "always"
        set service "FTP"
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end
```

## Internet service groups in policies

This feature provides support for Internet Service Groups in traffic shaping and firewall policies. Service groups can be used as the source and destination of the policy. Internet Service Groups are used as criteria to match traffic; the shaper will be applied when the traffic matches.


To use a group as a destination, `internet-service` must be enabled. To use a group as a source, `internet-service-src` must be enabled.

The following CLI variables are available in the `firewall policy` and `firewall shaping-policy` commands:

Variable	Description
<code>internet-service-group &lt;string&gt;</code>	Internet Service group name.
<code>internet-service-custom-group &lt;string&gt;</code>	Custom Internet Service group name.
<code>internet-service-src-group &lt;string&gt;</code>	Internet Service source group name.
<code>internet-service-src-custom-group &lt;string&gt;</code>	Custom Internet Service source group name.

## Examples

The following examples use the below topology.

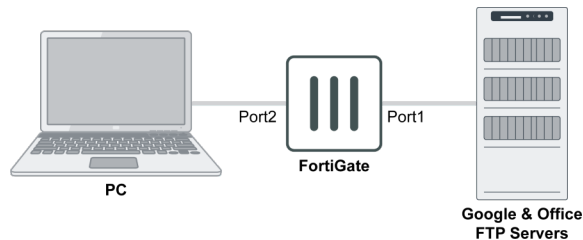

### Example 1

In this example, the PC is allowed to access Google, so all Google services are put into an Internet Service Group.

#### To configure access to Google services using an Internet Service Group using the CLI:

##### 1. Create a Service Group:

```

config firewall internet-service-group
    edit "Google_Group"
        set direction destination
        set member Google-Other Google-Web Google-ICMP Google-DNS Google-Outbound_Email
        Google-SSH Google-FTP Google-NTP Google-Inbound_Email Google-LDAP Google-
        NetBIOS.Session.Service Google-RTMP Google-NetBIOS.Name.Service Google-Google.Cloud
        Google-Gmail
    next
end
  
```


##### 2. Create a firewall policy to allow access to all Google Services from the PC:

```


config firewall policy
    edit 1
        set name "PC to Google"
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set internet-service enable
        set internet-service-group "Google_Group"
        set action accept
        set schedule "always"
        set fsso disable
        set nat enable
    next
end
  
```

#### To configure access to Google services using an Internet Service Group in the GUI:

1. On the FortiGate, create a Service Group using the CLI.
2. Go to *Policy & Objects > Firewall Policy*, and create a new policy.
3. Set the *Destination* as the just created Internet Service Group.

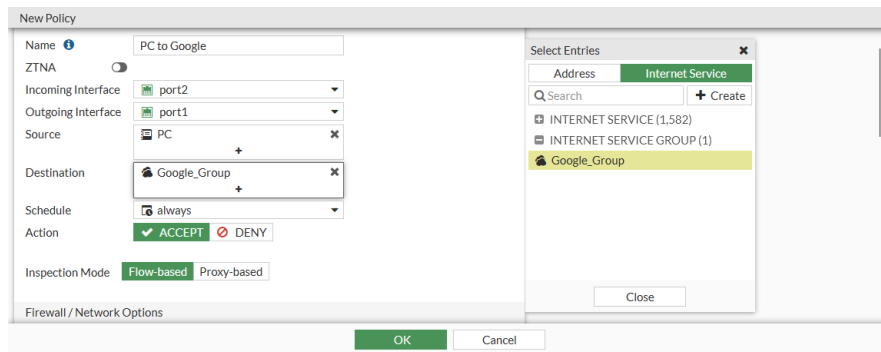

4. Configure the remaining options, then click **OK**.
5. Go to **Policy & Objects > Firewall Policy** and hover over the group to view a list of its members.

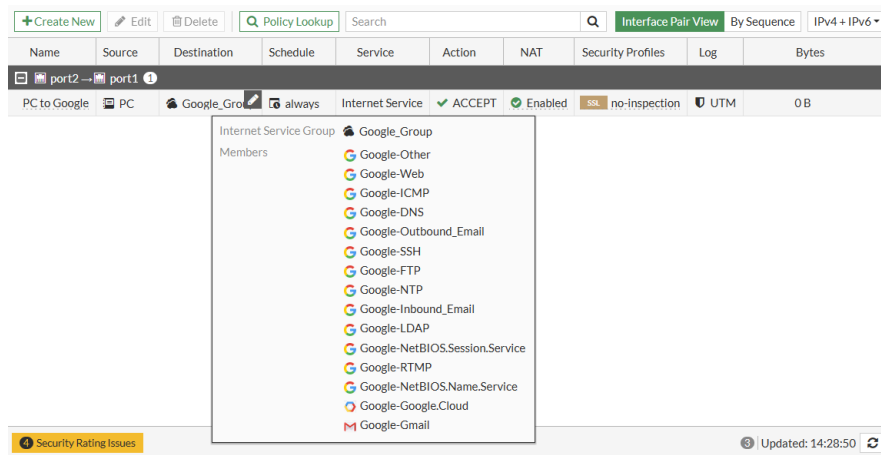

## Example 2

In this example, two office FTP servers are put into an Internet Custom Service Group, and the PC connection to the FTP servers is limited to 1Mbps.

**To put two FTP servers into a custom service group and limit the PC connection speed to them in the CLI:**

1. Create custom internet services for the internal FTP servers:

```
config firewall internet-service-custom
  edit "FTP_PM"
    config entry
      edit 1
        config port-range
          edit 1
            set start-port 21
            set end-port 21
          next
        end
        set dst "PM_Server"
      next
    end
  next
end
```

```
edit "FTP_QA"
  config entry
    edit 1
      config port-range
        edit 1
          set start-port 21
          set end-port 21
        next
      end
      set dst "QA_Server"
    next
  end
next
end
```

2. Create a custom internet server group and add the just created custom internet services to it:

```
config firewall internet-service-custom-group
  edit "Internal_FTP"
    set member "FTP_QA" "FTP_PM"
  next
end
```

3. Create a traffic shaper to limit the maximum bandwidth:

```
config firewall shaper traffic-shaper
  edit "Internal_FTP_Limit_1Mbps"
    set guaranteed-bandwidth 500
    set maximum-bandwidth 1000
    set priority medium
  next
end
```

4. Create a firewall shaping policy to limit the speed from the PC to the internal FTP servers:

```
config firewall shaping-policy
  edit 1
    set name "For Internal FTP"
    set internet-service enable
    set internet-service-custom-group "Internal_FTP"
    set dstintf "port1"
    set traffic-shaper "Internal_FTP_Limit_1Mbps"
    set traffic-shaper-reverse "Internal_FTP_Limit_1Mbps"
    set srcaddr "PC"
  next
end
```

**To put two FTP servers into a custom service group and limit the PC connection speed to the in the GUI:**

1. Create custom internet services for the internal FTP servers using the CLI.
2. Create a custom internet server group and add the just created custom internet services to it using the CLI.
3. Create a traffic shaper to limit the maximum bandwidth:
  - a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shapers* tab, and click *Create New*.
  - b. Enter a *Name* for the shaper, such as *Internal\_FTP\_Limit\_1Mbps*.
  - c. Set the *Traffic Priority* to *Medium*.
  - d. Enable *Max Bandwidth* and set it to *1000*.

- e. Enable *Guaranteed Bandwidth* and set it to 500.
  - f. Click OK.
4. Create a firewall shaping policy to limit the speed from the PC to the internal FTP servers:
    - a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policy* tab, and click *Create New*.
    - b. Set the *Destination* to the just created custom internet service group, and apply the just create traffic shaper.

The screenshot shows the 'New Traffic Shaping Policy' configuration window. In the 'If Traffic Matches' section, the Source is set to 'PC' and the Destination is set to 'Internal\_FTP'. The 'Then' section has the Action set to 'Apply Shaper' and the Outgoing Interface set to 'port1'. Both the Shared shaper and Reverse shaper are configured to 'Internal\_FTP\_Limit\_1Mbps'. A 'Select Entries' dialog is open on the right, displaying a list of internet services, with 'Internal\_FTP' highlighted.

- c. Configure the remaining options as shown, then click OK.

## Allow creation of ISDB objects with regional information

Geographic-based Internet Service Database (ISDB) objects allow users to define a country, region, and city. These objects can be used in firewall policies for more granular control over the location of the parent ISDB object. ISDB objects are now referenced in policies by name instead of ID.

### To apply a location-based ISDB object to a policy in the GUI:

1. Create the ISDB object:
  - a. Go to *Policy & Objects > Internet Service Database* and click *Create New > Geographic Based Internet Service*.
  - b. Configure the settings as required.

The screenshot shows the 'New Internet Service' configuration window. The Name is 'test-location-isdb-1', Type is 'Geographic Based', Primary Internet Service is 'Google-Other', Country/Region is 'United States', Region is 'California', and City is 'Sunnyvale'. The Primary Internet Service Name is 'Google-Other' and the Primary Internet Service ID is '65536'. The Direction is 'Destination'. There is a 'View/Edit Entries' button.


- c. Click OK.
2. View the IP ranges in the location-based internet service:
    - a. Go to *Policy & Objects > Internet Service Database*.
    - b. In the table, hover over the object created in step 1 and click *View/Edit Entries*. The list of IPs is displayed:

IP	Port	Protocol	Status
104.132.190.0 - 104.132.190.255	1 - 65535	TCP	Enabled
104.132.190.0 - 104.132.190.255	1 - 65535	UDP	Enabled
104.133.8.0 - 104.133.9.255	1 - 65535	TCP	Enabled
104.133.8.0 - 104.133.9.255	1 - 65535	UDP	Enabled
104.133.83.0 - 104.133.83.255	1 - 65535	TCP	Enabled
104.133.83.0 - 104.133.83.255	1 - 65535	UDP	Enabled

c. Click *Return*.

3. Add the ISDB object to a policy:

- Go to *Policy & Objects > Firewall Policy* and create a new policy or edit an existing one.
- For *Destination*, click *Internet Service* and select the ISDB object created in step 1.
- Configure the other settings as needed.

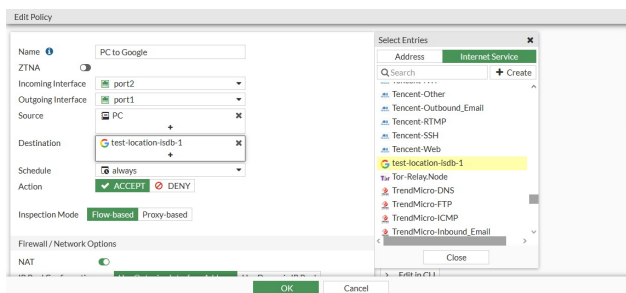

d. Click *OK*.

### To apply a location-based ISDB object to a policy in the CLI:

1. Create the ISDB object:

```
config firewall internet-service-name
edit "test-location-isdb-1"
set type location
set internet-service-id 65536
set country-id 840
set region-id 283
set city-id 23352
next
end
```

2. View the IP ranges in the location-based internet service:

```
# diagnose internet-service id 65536 | grep "country(840) region(283) city(23352)"
96.45.33.73-96.45.33.73 country(840) region(283) city(23352) blocklist(0x0) reputation
(4), domain(5) popularity(0) botnet(0) proto(6) port(1-65535)
96.45.33.73-96.45.33.73 country(840) region(283) city(23352) blocklist(0x0) reputation
(4), domain(5) popularity(0) botnet(0) proto(17) port(1-65535)
198.94.221.56-198.94.221.56 country(840) region(283) city(23352) blocklist(0x0)
reputation(4), domain(5) popularity(4) botnet(0) proto(6) port(1-65535)
198.94.221.56-198.94.221.56 country(840) region(283) city(23352) blocklist(0x0)
reputation(4), domain(5) popularity(4) botnet(0) proto(17) port(1-65535)
```

**3. Add the ISDB object to a policy:**

```

config firewall policy
  edit 3
    set name "PC to Google"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "PC"
    set internet-service enable
    set internet-service-name "test-location-isdb-1"
    set action accept
    set schedule "always"
    set logtraffic all
    set logtraffic-start enable
    set auto-asic-offload disable
    set nat enable
  next
end

```

**Internet service customization**

Internet Service Database (ISDB) entries can be tuned for their environments by adding custom ports and port ranges, as well as port mapping.



If you are in multi-VDOM mode, Internet service customization can only occur at the Global level and not in a VDOM. See [VDOM overview on page 2299](#) for more information.

---

**To add a custom port range:**

```

config firewall internet-service-addition
  edit 65646
    set comment "Add custom port-range:tcp/8080-8090 into 65646"
    config entry
      edit 1
        set protocol 6
        config port-range
          edit 1
            set start-port 8080
            set end-port 8090
          next
        end
      next
    end
  next
end

```

Warning: Configuration will only be applied after rebooting or using the 'execute internet-service refresh' command.

**To verify that the change was applied:**

```

# diagnose internet-service info FG-traffic 6 8080 2.20.183.160
Internet Service: 65646(Google.Gmail)

```

**To configure additional port mapping:**

```
config firewall internet-service-append
    set match-port 10
    set append-port 20
end
```

Warning: Configuration will only be applied after rebooting or using the 'execute internet-service refresh' command.

**Look up IP address information from the Internet Service Database page**

The *IP Address Lookup* button allows users to look up IP address information from the Internet Service Database and GeoIP Database. Returned IP address information includes the reverse IP address/domain lookup, location, reputation, and other internet service information.

**To look up IP address information:**

1. Go to *Policy & Objects > Internet Service Database*.
2. Click *IP Address Lookup*. The *IP Address Lookup* pane opens.
3. In the *IP Address Query* field, enter the IP address and press *Enter*.

Results of an IP address from the Internet Service Database:

The screenshot shows the 'IP Address Lookup' window. At the top, there's a search bar labeled 'IP Address Query' with the value '8.8.8.8'. Below this, the 'IP Address Details' section lists the following information:

- IP Address:** 8.8.8.8
- Owner:** Google
- Location:** Mountain View, California, United States
- Coordinates:** 37.386051 / -122.083847
- Reputation:** Unverified site
- Popularity:** ★★★★★


Below the details is the 'Internet Service Details' table:

ID	Reputation	Popularity
DNS-DoH_DoT	Unverified site	★★★★☆
Google-Web	Reputable site from social media	★★★★★
Google-ICMP		
Google-DNS		
Google-Outbound_Email		
Google-SSH		


A 'Close' button is located at the bottom right of the window.

Results of an IP address from the GeoIP Database:



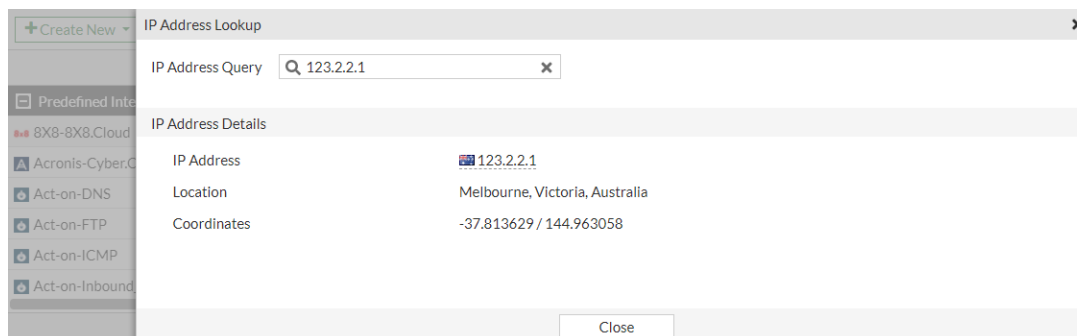

Results of an IPv6 address from the GeoIP Database:

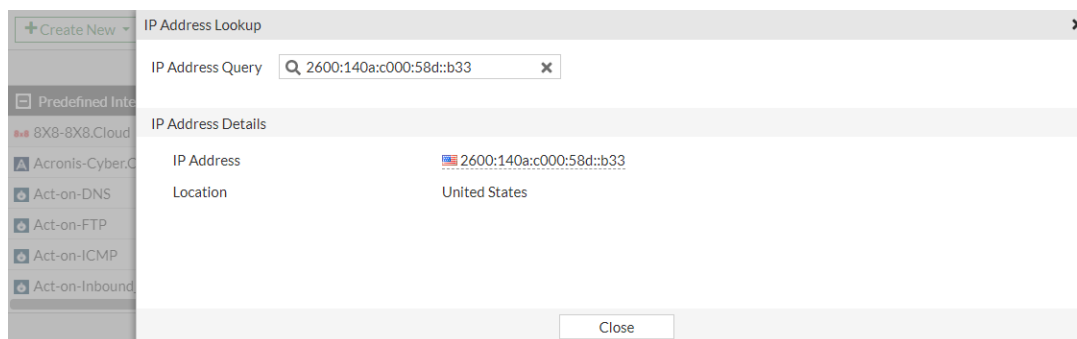

4. Click *Close*.

## Internet Service Database on-demand mode

Internet Service Database (ISDB) on-demand mode replaces the full-sized ISDB file with a much smaller file that is downloaded onto the flash drive. This file contains only the essential entries for Internet Services. When a service is used in a firewall policy, the FortiGate queries FortiGuard to download the IP addresses and stores them on the flash drive. The FortiGate also queries the local MAC Database (MADB) for corresponding MAC information. The content of the ISDB entries used in firewall policies persists through reboots.

### To enable ISDB (FFDB) on-demand mode:

1. Configure the global setting:

```
config system global
    set internet-service-database on-demand
end
```

All FFDB files are erased.

2. Verify that there are no ISDB (FFDB) files:

```
# diagnose autoupdate versions | grep Internet -A 6
Internet-service On-Demand Database
-----
Version: 0.00000
Contract Expiry Date: n/a
Last Updated using manual update on Mon Jan 1 00:00:00 2001
Last Update Attempt: n/a
Result: Updates Installed
```

Shortly after, the ISDB (FFDB) data structure is downloaded on the FortiGate. The following message appears in the debug messages:

```
do_ffsr_update[1567]-Starting Update FFDB ondemand:(not final retry)
```

3. Run diagnostics again to verify that the ISDB (FFDB) files are saved on the FortiGate flash drive:

```
# diagnose autoupdate versions | grep Internet -A 6
Internet-service On-Demand Database
-----
Version: 7.02950
Contract Expiry Date: n/a
Last Updated using manual update on Fri Jan 6 06:45:00 2023
Last Update Attempt: n/a
Result: Updates Installed
```

4. Since no services have been applied to a policy, the IP range and IP address values are blank in the the summary details. For example, check the summary details for ID 1245187, Fortinet DNS:

```
# diagnose internet-service id-summary 1245187
Version: 00007.02950
Timestamp: 202301060645
Total number of IP ranges: 3085
Number of Groups: 1
Group(0), Singularity(90), Number of IP ranges(3085)
Internet Service: 1245187(Fortinet-DNS)
Number of IP ranges: 0
Number of IP addresses: 0
Singularity: 0
Icon Id: 19
Direction: dst
Data source: isdb
Country:
Region:
City:
```

5. Apply the Fortinet DNS service in a firewall policy:

```
config firewall policy
  edit 1
    set name "FDNS"
    set srcintf "port1"
    set dstintf "wan1"
    set action accept
    set srcaddr "all"
    set internet-service enable
    set internet-service-name "Fortinet-DNS"
    set schedule "always"
    set nat enable
  next
end
```

6. Verify the summary details again for ID 1245187 (Fortinet DNS). There is now data for the IP range and IP address values:

```
# diagnose internet-service id-summary 1245187
Version: 00007.02951
Timestamp: 202301061144
Total number of IP ranges: 3558
```

```
Number of Groups: 2
Group(0), Singularity(90), Number of IP ranges(3078)
Group(1), Singularity(10), Number of IP ranges(480)
Internet Service: 1245187(Fortinet-DNS)
Number of IP ranges: 480
Number of IP addresses: 55242
Singularity: 10
Icon Id: 19
Direction: dst
Data source: isdb
Country: 12 32 36 40 56 124 158 170 203 222 250 276 320 332 344 356 360 372 380 392 458
484
      528 591 600 604 642 643 702 764 784 807 826 840
Region: 55 132 159 169 251 261 283 444 501 509 529 565 596 634 697 709 721 742 744 758
776 860
      1002 1056 1073 1151 1180 1190 1195 1216 1264 1280 1283 1284 1287 1290 1315 1319
1348 1363 1373 1380 1387
      1437 1457 1509 1536 1539 1660 1699 1740 1752 1776 1777 1826 1833 1874 1906 1965
2014 2028 2039 2060 2063
      2147 2206 65535
City: 615 679 818 1001 1106 1117 1180 1207 1330 1668 1986 2139 2812 2868 3380 3438 3485
3670 4276 4588 4622 4904
      5334 5549 5654 5827 6322 6325 6330 6355 6652 7844 9055 10199 10333 11420 12930
13426 13685 13769 14107 14813 15121
      15220 15507 15670 16347 16561 16564 16567 16631 17646 17746 17885 17975 17995
18071 18476 19066 19285 20784 21065 21092 21136
      21146 21266 21337 21779 21993 22292 22414 22912 23352 23367 23487 23574 23635
23871 23963 24076 24203 24298 24611 24955 25050
      25332 26854 27192 27350 28825 28866 65535
```

**To verify MAC vendor information:**

```
# diagnose vendor-mac id 1
Vendor MAC: 1(ASUS)
Version: 0000100146
Timestamp: 202301031100
Number of MAC ranges: 85
00:04:0f:00:00:00 - 00:04:0f:ff:ff:ff
00:0c:6e:00:00:00 - 00:0c:6e:ff:ff:ff
00:0e:a6:00:00:00 - 00:0e:a6:ff:ff:ff
...
```

# Security Profiles

This section contains information about configuring FortiGate security features, including:

- [Inspection modes on page 1262](#)
- [Antivirus on page 1269](#)
- [Web filter on page 1314](#)
- [Filtering based on YouTube channel on page 1359](#)
- [DNS filter on page 1366](#)
- [Application control on page 1395](#)
- [Intrusion prevention on page 1410](#)
- [File filter on page 1437](#)
- [Email filter on page 1445](#)
- [Data leak prevention on page 1460](#)
- [VoIP solutions on page 1485](#)
- [ICAP on page 1517](#)
- [Web application firewall on page 1526](#)
- [SSL & SSH Inspection on page 1528](#)
- [Custom signatures on page 1545](#)
- [Overrides on page 1556](#)
- [Profile groups on page 1570](#)



If you are unable to view a security profile feature, go to *System > Feature Visibility* to enable it.

---

## Inspection modes

FortiOS supports flow-based and proxy-based inspection in firewall policies. You can select the inspection mode when configuring a policy.

Flow-based inspection takes a snapshot of content packets and uses pattern matching to identify security threats in the content.

Proxy-based inspection reconstructs content that passes through the FortiGate and inspects the content for security threats.

Certain security profiles allows users to display flow-based or proxy-based feature sets.

Certain unused WAD proxy processes are not started by default on FortiGate models with 2 GB of RAM or less to reduce memory usage. These process will only start when relevant proxy features are configured, such as explicit proxies, transparent proxies, or ZTNA.

This following topics provide information about inspection modes for various security profile features:

- [Flow mode inspection \(default mode\) on page 1263](#)
- [Proxy mode inspection on page 1263](#)
- [Inspection mode feature comparison on page 1265](#)

## Flow mode inspection (default mode)

When a firewall policy's inspection mode is set to flow, traffic flowing through the policy will not be buffered by the FortiGate. Unlike proxy mode, the content payload passing through the policy will be inspected on a packet by packet basis with the very last packet held by the FortiGate until the scan returns a verdict. If a violation is detected in the traffic, a reset packet is issued to the receiver, which terminates the connection, and prevents the payload from being sent successfully.


Flow-based inspection identifies and blocks security threats in real time as they are identified. All applicable flow-based security modules are applied simultaneously in one single pass, using Direct Filter Approach (DFA) pattern matching to identify possible attacks or threats. Pattern matching is offloaded and accelerated by CP8 or CP9 processors.

Flow-based inspection typically requires lower processing resources than proxy-based inspection and does not change packets, unless a threat is found and packets are blocked.

### Use case

It is recommended to apply flow inspection to policies that prioritize traffic throughput, such as allowing connections to a streaming or file server.

For example, you have an application server that accepts connections from users for a daily quiz show app, HQ. Each HQ session sees 500,000+ participants, and speed is very important because participants have less than 10 seconds to answer the quiz show questions.

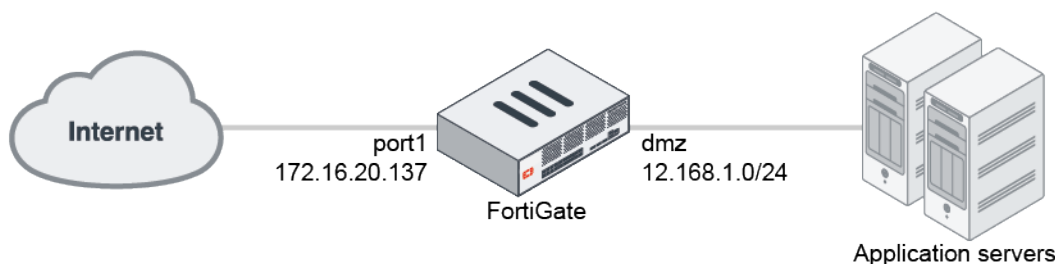

In this scenario, a flow inspection policy is recommended to prioritize throughput. The success of the application depends on providing reliable service for large numbers of concurrent users. The policy would include an IPS sensor to protect the server from external DOS attacks.

## Proxy mode inspection


When a firewall policy's inspection mode is set to proxy, traffic flowing through the policy will be buffered by the FortiGate for inspection. This means that the packets for a file, email message, or web page will be held by the FortiGate until the entire payload is inspected for violations (virus, spam, or malicious web links). After FortiOS finishes the inspection, the payload is either released to the destination (if the traffic is clean) or dropped and replaced with a replacement message (if the traffic contains violations).

To optimize inspection, the policy can be configured to block or ignore files or messages that exceed a certain size. To prevent the receiving end user from timing out, you can apply client comforting. This allows small portions of the payload to be sent while it is undergoing inspection.

Proxy mode provides the most thorough inspection of the traffic; however, its thoroughness sacrifices performance, making its throughput slower than that of a flow mode policy. Under normal traffic circumstances, the throughput difference between a proxy-based and flow-based policy is not significant.

### Use case 1


Your organization deals with sensitive data on a regular basis and a data leak would significantly harm your business. At the same time, you wish to protect your employees from malicious content, such as viruses and phishing emails, which could be used to gain access to your network and the sensitive data on your systems.

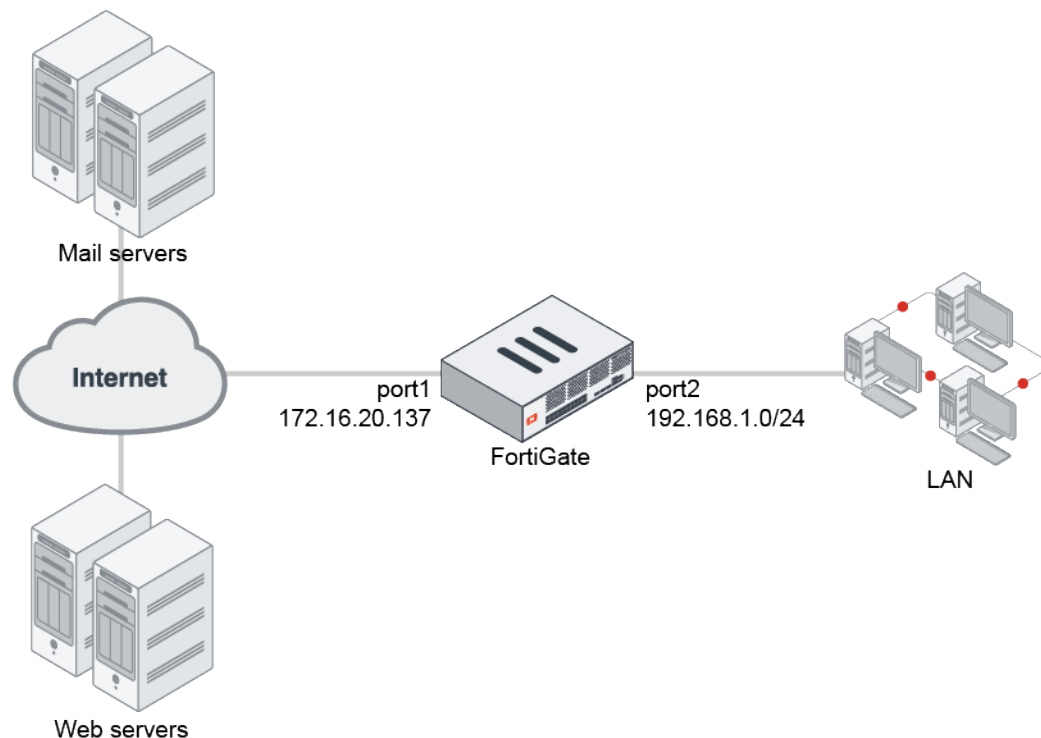

In this scenario, a proxy inspection policy is recommended to prioritize network security. You want traffic inspection to be as thorough as possible to avoid any data leaks from exiting the LAN and any malicious content from entering it. The policy would include antivirus, DLP, web, and email filters all operating in proxy mode.

## Use case 2

You have a corporate mail server in your domain that is used by your employees for everyday business activities. You want to protect your employees from phishing emails and viruses. At the same time, you want to also protect your web servers from external attacks.

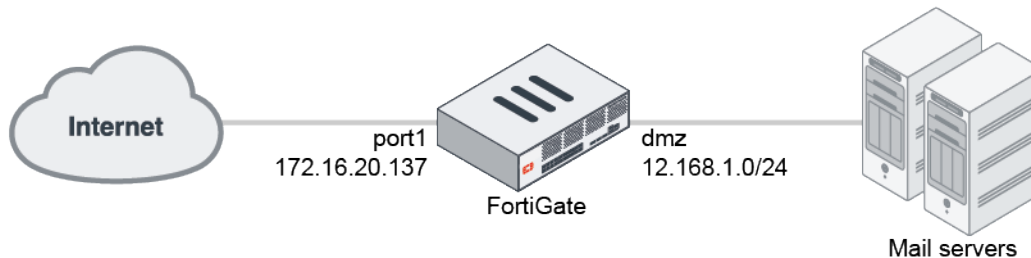

In this scenario, a proxy inspection policy is recommended to prioritize the safety of employee emails. Applying the antivirus and email filter in this mode allows you to filter out any malware and spam emails received by the mail servers via SMTP or MAPI. An IPS sensor would be used to prevent DOS attacks on the mail servers.

## Inspection mode feature comparison

The following table shows which UTM profile can be configured on a flow mode or proxy mode inspection policy.

Some UTM profiles are hidden in the GUI and can only be configured using the CLI. To configure profiles in a firewall policy in CLI, enable the `utm-status` setting.

Some profiles might have feature differences between flow-based and proxy-based Inspection. From the GUI and CLI, you can set the *Feature set* option to be *Flow-based* or *Proxy-based* to display only the settings for that mode.

UTM Profile	Flow Mode Inspection Policy		Proxy Mode Inspection Policy		Feature set option
	GUI	CLI	GUI	CLI	
AntiVirus	Yes	Yes	Yes	Yes	GUI/CLI
Web Filter	Yes	Yes	Yes	Yes	GUI/CLI
Video Filter	No	No	Yes	Yes	N/A
DNS Filter	Yes	Yes	Yes	Yes	N/A
Application Control	Yes	Yes	Yes	Yes	N/A
Intrusion Prevention System	Yes	Yes	Yes	Yes	N/A
File Filter	Yes	Yes	Yes	Yes	GUI/CLI
Email Filter	Yes	Yes	Yes	Yes	GUI/CLI
Data Leak Prevention	No	Yes	Yes	Yes	CLI
VoIP	Yes	Yes	Yes	Yes	N/A
ICAP	No	No	Yes	Yes	N/A
Web Application Firewall	No	No	Yes	Yes	N/A

UTM Profile	Flow Mode Inspection Policy		Proxy Mode Inspection Policy		Feature set option
	GUI	CLI	GUI	CLI	
SSL/SSH Inspection	Yes	Yes	Yes	Yes	N/A

The following sections outline differences between flow-based and proxy-based inspection for a security profile.

## Feature comparison between Antivirus inspection modes

The following table indicates which Antivirus features are supported by their designated scan modes.

Part1	Replacement Message	Content Disarm	Mobile Malware	Virus Outbreak	Sandbox Post-Transfer Scanning	Sandbox Inline Scanning	NAC Quarantine
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes*	No	Yes	Yes	Yes	No	Yes

\*IPS Engine caches the URL and a replacement message is presented after the second attempt.

Part 2	Archive Blocking	Emulator	Client Comforting	Infection Quarantine	Heuristics	Treat EXE as Virus
Proxy	Yes	Yes	Yes	Yes (1)	Yes	Yes (2)
Flow	Yes	Yes	No	Yes	Yes	Yes (2)

1. Only available on FortiGate models with HDD or when FortiAnalyzer or FortiGate Cloud is connected and enabled.
2. Only applies to inspection on IMAP, POP3, SMTP, and MAPI protocols.

Part 3	External Blocklist	EMS Threat Feed	AI/ML Based Detection	FortiNDR Inline Detection
Proxy	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	No



## Feature comparison between Web Filter inspection modes

The following table indicates which Web Filter features are supported by their designated inspection modes.

	FortiGuard Category-Based Filter	Category Usage Quota	Override Blocked Categories	Search Engines	Static URL Filter	Rating Option	Proxy Option	Web Profile Override
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes (1)	No	Yes (2)	No	Yes	Yes	Limited (3)	No

1. Local Category and Remote Category filters do not support the warning and authenticate actions.
2. Local Category and Remote Category filters cannot be overridden.
3. Only HTTP POST Action is supported.

## Feature comparison between Email Filter inspection modes

The following tables indicate which Email Filters are supported by the specified inspection modes for local filtering and FortiGuard-assisted filtering.

Local Filtering	Banned Word Check	Block/Allow List	HELO/ EHLO DNS Check	Return Address DNS Check	DNSBL/ ORBL Check	MIME Header Check
Proxy	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes	Yes	No	No	No	Yes

FortiGuard-Assisted Filtering	Phishing URL Check	Anti-Spam Block List Check	Submit Spam to FortiGuard	Spam Email Checksum Check	Spam URL Check
Proxy	Yes	Yes	Yes	Yes	Yes
Flow	No	No	No	No	No

## Feature comparison between DLP inspection modes

The following table indicates which DLP filters are supported by their designated inspection modes.

	Credit Card Filter	SSN Filter	Regex Filter	File-Type Filter	File-Pattern Filter	Fingerprint Filter	Watermark Filter	Encrypted Filter	File-Size Filter
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	Yes	Yes	No	No	Yes	Yes*

\*File-size filtering only works if file size is present in the protocol exchange.

## Proxy feature visibility in the GUI for low-end models

The `gui-proxy-inspection` setting under `config system settings` is enabled on most models except for low-end platforms with 2 GB of RAM or less. When this setting is disabled:

- Proxy-based only profiles such as *ICAP*, *Web Application Firewall*, *Video Filter*, and *Zero Trust Network Access* are disabled (grayed out) on the *System > Feature Visibility* page.
- The *Feature set* field is disabled on UTM profiles. Only flow-based features are shown.

Example AV profile:

- Firewall policy pages do not have option to select a *Flow-based* or *Proxy-based* inspection mode.
- Proxy-based UTM profiles cannot be selected within policy configurations or other areas.

Note the following exceptions:

- If the proxy feature set is enabled from the CLI or carried over from upgrading, it can be displayed in the GUI.
- If proxy-based inspection mode is enabled from the CLI or carried over from upgrading, it can be displayed in GUI firewall policy pages.

Example AV profile being edited from the *New Policy* page after upgrading:

The screenshot shows the 'Edit AntiVirus Profile' window. On the left is a sidebar with a tree view containing categories like Schedule, Service, Action, Inspection Mode, Firewall/Network, NAT, IP Pool Configuration, Preserve Source, Protocol Options, Security Profiles, AntiVirus, Web Filter, DNS Filter, Application Control, IPS, File Filter, and SSL Inspection. The 'AntiVirus' item is selected. The main area contains the following fields and options:

- Name:** test
- Comments:** Write a comment... (0/255 characters)
- AntiVirus scan:** A toggle switch is turned on. Below it are two buttons: 'Block' (highlighted in green) and 'Monitor'.
- Feature set:** Two buttons: 'Flow-based' and 'Proxy-based' (highlighted in green).
- Inspected Protocols:** A list of protocols with toggle switches:
  - HTTP: ☐
  - SMTP: ☐
  - POP3: ☐
  - IMAP: ☐
  - FTP: ☐
  - CIFS: ☐
  - MAPI: ☒ (with a red 'P' icon)
  - SSH: ☒ (with a red 'P' icon)
- APT Protection Options:**
  - Content Disarm and Reconstruction: ☒ (with a red 'P' icon)
  - Treat Windows executables in email attachments as viruses: ☐ (with an 'i' icon)
  - Send files to FortiSandbox for inspection: ☐ (with an 'i' icon)

At the bottom right are 'OK' and 'Cancel' buttons.

**To enable proxy features on low-end platforms:**

```
config system settings
    set gui-proxy-inspection enable
end
```

## Antivirus

FortiOS offers the unique ability to implement both flow-based and proxy-based antivirus concurrently, depending on the traffic type, users, and locations. Flow-based antivirus offers higher throughput performance.

FortiOS includes two preloaded antivirus profiles:

- *default*
- *wifi-default*

You can customize these profiles, or you can create your own to inspect certain protocols, remove viruses, analyze suspicious files with FortiSandbox, and apply botnet protection to network traffic. Once configured, you can add the antivirus profile to a firewall policy.



This functionality requires a subscription to FortiGuard Antivirus.

The following topics provide information about antivirus profiles:

- [Configuring an antivirus profile on page 1271](#)
- [Proxy mode stream-based scanning on page 1274](#)

- [Databases on page 1278](#)
- [Content disarm and reconstruction on page 1279](#)
- [FortiGuard outbreak prevention on page 1281](#)
- [External malware block list on page 1283](#)
- [Malware threat feed from EMS on page 1286](#)
- [Checking flow antivirus statistics on page 1288](#)
- [CIFS support on page 1290](#)
- [Using FortiSandbox post-transfer scanning with antivirus on page 1296](#)
- [Using FortiSandbox inline scanning with antivirus on page 1298](#)
- [FortiSandbox database on page 1308](#)
- [Using FortiNDR inline scanning with antivirus on page 1310](#)
- [Exempt list for files based on individual hash on page 1313](#)

## Protocol comparison between antivirus inspection modes

The following table indicates which protocols can be inspected by the designated antivirus scan modes.

	HTTP	FTP	IMAP	POP3	SMTP	NNTP	MAPI	CIFS	SSH
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes*	Yes
Flow	Yes	Yes	Yes	Yes	Yes	Yes	No	Yes	No

\* Proxy mode antivirus inspection on CIFS protocol has the following limitations:

- Cannot detect infections within some archive files.
- Cannot detect oversized files.

## Other antivirus differences between inspection modes

Starting from 6.4.0, the scan mode option is no longer available for flow-based AV.

This means that AV no longer exclusively uses the default or legacy scan modes when handling traffic on flow-based firewall policies. Instead, AV in flow-based policies uses a hybrid of the two scan modes. Flow AV may use a pre-filtering database for malware detection in some circumstances as opposed to the full AV signature database in others. The scan method is determined by the IPS engine algorithm that is based on the type of file being scanned. When handling oversized files in flow-based AV, the action can either be pass (default) or block. When the action is pass, IPS appends to-be-scan data into the AV scan buffer. If the appended file size exceeds the oversize-limit that is defined in the protocol option profile, then the AV session is cleared and the file is bypassed from AV scanning.

In contrast, proxy mode maintains the scan mode option, which can be toggled between default or legacy mode. In default mode, the WAD daemon receives the file and then decides if it can do an in-process scan of the file in simple AV configuration scenarios. If the file is in an oversized archive that is supported by the stream-based decompressor, then it is sent to stream-based scan for best effort inspection. Stream-based scan decompresses and scans the entire archive without archiving the file. If the file is not supported by stream-based scan, then it is buffered and then sent to the scanunit daemon for inspection on content that is under the oversize limit.

In legacy mode, stream-based scanning is disabled, so oversized archive files and files that cannot be handled by WAD in-process scan are buffered and sent to the scanunit daemon for processing.

## AI-based malware detection

The AV Engine AI malware detection model integrates into regular AV scanning to help detect potentially malicious Windows Portable Executables (PEs) in order to mitigate zero-day attacks. Previously, this type of detection was handled by heuristics that analyzed file behavior. With AV Engine AI, the module is trained by FortiGuard AV against many malware samples to identify file features that make up the malware. The AV Engine AI package can be downloaded by FortiOS via FortiGuard on devices with an active AV subscription. The `machine-learning-detection` setting is enabled by default at a per-VDOM level. Files detected by the AV Engine AI are identified with the W32/AI.Pallas.Suspicious virus signature.

### To configure machine learning-based malware detection:

```
config antivirus settings
    set machine-learning-detection {enable| monitor | disable}
end
```

## Configuring an antivirus profile

In an antivirus profile, the FortiGate can be configured to apply antivirus protection to HTTP, FTP, IMAP, POP3, SMTP, CIFS, and NNTP sessions. Proxy-based profiles also support MAPI and SSH. Antivirus inspection prevents potentially unwanted and malicious files from entering the network. Antivirus profiles include multiple different functions, such as scanning files for virus signatures, scanning for advanced persistent threats, checking external malware hash lists and threat feeds, and others. Malicious files can be blocked or monitored, and can be quarantined. Some antivirus profile options require a license and/or other Fortinet products. Some antivirus profile options can only be configured in the CLI (refer to the [FortiOS CLI Reference](#)).



The feature set setting (proxy or flow) in the antivirus profile must match the inspection mode setting (proxy or flow) in the associated firewall policy. For example, a flow-based antivirus profile must be used with a flow-based firewall policy.

### To configure an antivirus profile:

1. Go to *Security Profiles > AntiVirus* and click *Create New*.
2. Configure the following settings:

<i>Name</i>	Enter a unique name for the profile.
<i>Comments</i>	Enter a comment (optional).
<i>AntiVirus scan</i>	Enable one or more protocols for inspection, then enable <i>AntiVirus scan</i> for the selected protocols with a specified action. <ul style="list-style-type: none"> <li>• <i>Block</i>: block the malicious traffic.</li> <li>• <i>Monitor</i>: log malicious traffic and allow it to pass inspection.</li> </ul>
<i>Feature set</i>	Select the feature set for the profile. The feature set mode must match the inspection mode used in the associated firewall policy. <ul style="list-style-type: none"> <li>• <i>Flow-based</i></li> <li>• <i>Proxy-based</i></li> </ul>

	<p>Additional options are available in proxy-based mode and are identified in the GUI with a <i>P</i> icon. See <a href="#">Inspection mode feature comparison on page 1265</a> for more details.</p> <p>If the <i>Feature set</i> option is not visible, enter the following in the CLI:</p> <pre>config system settings     set gui-proxy-inspection enable end</pre>
<i>Inspected Protocols</i>	<p>Enable to inspect the protocol for session inspection: HTTP, SMTP, POP3, IMAP, FTP, and CIFS. Disabled protocols are not inspected.</p> <p>MAPI and SSH can be inspected in proxy-based mode.</p>
<i>APT Protection Options</i>	<p>This section includes options available with FortiGuard to mitigate advanced persistent threats (APT) in file-based attacks.</p>
<i>Content Disarm and Reconstruction</i>	<p>This option is available in proxy-based mode when at least one protocol is enabled for inspection and <i>AntiVirus scan</i> is enabled.</p> <p>Enable to allow the FortiGate to sanitize Microsoft Office documents and PDF files (including files in ZIP archives) by removing active content (disarm) without affecting the integrity of the textual content (reconstruction). See <a href="#">Content disarm and reconstruction on page 1279</a> for more details.</p>
<i>Allow transmission when an error occurs</i>	<p>Enable to allow traffic to pass when an inspection error occurs. Disable to block traffic when an inspection error occurs.</p>
<i>Original File Destination</i>	<p>Specify how to quarantine files processed by content disarm and reconstruction.</p> <ul style="list-style-type: none"> <li>• <i>FortiSandbox</i>: quarantine files on FortiSandbox. The FortiSandbox must be enabled. See <a href="#">Using FortiSandbox post-transfer scanning with antivirus on page 1296</a> for more details.</li> <li>• <i>File Quarantine</i>: quarantine files on FortiGate models with a hard disk.</li> <li>• <i>Discard</i>: discard suspicious files.</li> </ul>
<i>Treat Windows executables in email attachments as viruses</i>	<p>Enable to deem all Windows executable files located in email traffic as viruses.</p>
<i>Send Files to FortiSandbox for Inspection</i>	<p>Enable to send files to FortiSandbox for inspection. The FortiSandbox must be enabled.</p>
<i>Scan strategy</i>	<p>FortiSandbox scans files inline for flow-based mode (<i>Inline</i>) and after the file transfer is complete for proxy-based mode (<i>Post Transfer</i>). See <a href="#">Using FortiSandbox inline scanning with antivirus on page 1298</a> and <a href="#">Using FortiSandbox post-transfer scanning with antivirus on page 1296</a> for more details.</p>
<i>File types</i>	<p>Specify which files to FortiSandbox for inspection.</p> <ul style="list-style-type: none"> <li>• <i>Suspicious Files Only</i>: only send suspicious files to FortiSandbox for inspection.</li> <li>• <i>All Supported Files</i>: send all supported files to FortiSandbox for inspection.</li> </ul>

<i>Do not submit files matching types</i>	Click the + to exclude certain file types from being sent to FortiSandbox.
<i>Do not submit files matching file name patterns</i>	Click the + to enter a wildcard pattern to exclude files from being sent to FortiSandbox.
<i>Use FortiSandbox database</i>	Enable to use the signature database from FortiSandbox. The FortiSandbox must be enabled.
<i>Send files to FortiNDR for inspection</i>	This option is available in proxy-based mode when at least one protocol is enabled for inspection, <i>AntiVirus scan</i> is enabled, and FortiNDR is enabled. See <a href="#">Using FortiNDR inline scanning with antivirus on page 1310</a> for more details.
<i>Include mobile malware protection</i>	Enable to use the mobile malware protection database from FortiGuard for content scanning.
<i>Quarantine</i>	This option is available when at least one protocol is enabled for inspection and <i>AntiVirus scan</i> is enabled. Enable to quarantine infected files.
<i>Virus Outbreak Prevention</i>	This section includes options available with the FortiGuard Virus Outbreak Protection Service. A license is required to use these options. See <a href="#">FortiGuard outbreak prevention on page 1281</a> for more details.
<i>Use FortiGuard outbreak prevention database</i>	Enable to use the outbreak prevention database that is available with Advanced Malware Protection on FortiGuard. A license is required. <ul style="list-style-type: none"> <li>• <i>Block</i>: block the malicious traffic.</li> <li>• <i>Monitor</i>: log malicious traffic and allow it to pass inspection.</li> </ul>
<i>Use external malware block list</i>	Enable to use one or more external blocklist file hashes. See <a href="#">Malware hash threat feed on page 2939</a> for more details. <ul style="list-style-type: none"> <li>• <i>Block</i>: block the malicious traffic.</li> <li>• <i>Monitor</i>: log malicious traffic and allow it to pass inspection.</li> <li>• <i>All</i>: use all malware block lists.</li> <li>• <i>Specify</i>: select specific malware block lists.</li> </ul>
<i>Use EMS threat feed</i>	This option is available when at least one protocol is enabled for inspection and <i>AntiVirus scan</i> is enabled. Enable to use malware threat feeds from FortiClient EMS. A FortiClient EMS Fabric connector with EMS threat feed enabled is required. See <a href="#">Malware threat feed from EMS on page 1286</a> for more details.

3. Click OK.

## Protocol options

When applying an antivirus profile to a firewall policy, the protocol options profile defines parameters for handling protocol-specific traffic. These parameters affect functions such as the port mapping for inspecting each protocol, whether to log or block oversized files when performing AV scanning, enabling comfort client, and more. Protocol options

profiles are configured by going to *Policy & Objects > Protocol Options*, or in the CLI under `config firewall profile-protocol-options`. See [Protocol options on page 1186](#) for more information.

### Scan mode

In proxy-based antivirus profiles, the scan mode can be set to either default or legacy. This setting can only be configured in the CLI. See [Proxy mode stream-based scanning on page 1274](#) for more information.


#### To configure the scan mode:

```
config antivirus profile
  edit <name>
    set feature-set proxy
    set scan-mode {default | legacy}
  next
end
```

### Proxy mode stream-based scanning

In proxy mode, AV scanning is processed as follows:



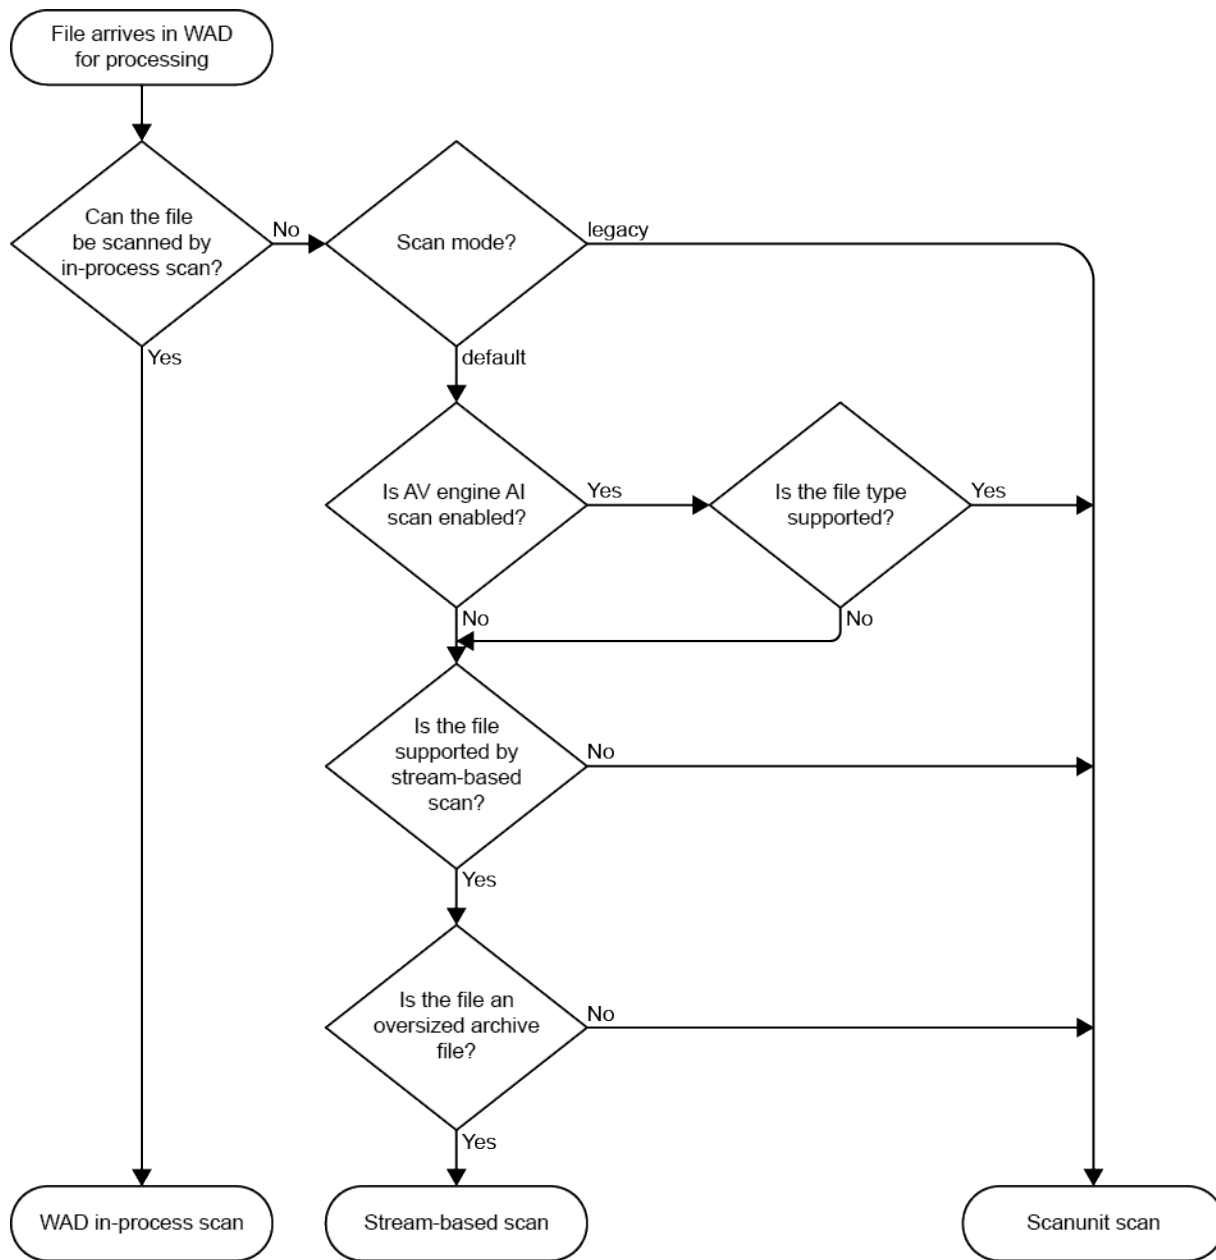

### Can the file be scanned by in-process scan?

- This is determined by the WAD daemon.
- In-process scan can be used for simple AV configurations to quickly scan a file without handing it off to another process.
- The following, more complex feature sets cannot be processed by in-process scan:
  - AV engine AI scan
  - DLP
  - Quarantine
  - FortiGuard outbreak prevention, external block list, and EMS threat feed
  - Content disarm

**Scan mode?**

- To configure the scan mode:

```
config antivirus profile
  edit <name>
    set feature-set proxy
    set scan-mode {default | legacy}
  next
end
```

default	Enable stream-based scanning (default).
legacy	Disable stream-based scanning.

**Is AV engine AI scan enabled?**

- When enabled, supported files (such as EXE, PDF, and MS Office) are forwarded to the scanunit scan.
- AV engine AI scan is enabled by default. To disable it:

```
config antivirus settings
  set machine-learning-detection disable
end
```

**Is the file supported by stream-based scan?**

- Stream-based scan supports the following archive file types: ZIP, GZIP, BZIP2, TAR, and ISO (ISO 9660).
- In FortiOS 7.0, stream-based scan is supported in HTTP(S), FTP(S), and SCP/SFTP.
- In FortiOS 6.4 and 6.2, stream-based scan is only supported in HTTP(S).
- Stream-based scan does not support HTTP POST.
- Stream-based scan is not supported when the following features are enabled:
  - DLP
  - Quarantine
  - FortiGuard outbreak prevention, external block list, and EMS threat feed
  - Content Disarm
- If a file is not supported, it is buffered and sent to scanunit for scanning.

**Is the file an oversized archive file?**

- An oversized archive file is a compressed file that is oversized according to the following setting:

```
config firewall profile-protocol-options
  edit <profile>
    config <protocol>
      set oversize-limit <size>
    end
  next
end
```

- If the file is not oversized, it is buffered and sent to scanunit for scanning.

## Notes

### Stream-based scans:

- Are performed with no oversize limits on a best effort basis.
- Can inspect the contents of large archive files without buffering the entire file.
- Decompress and scan the entire archive.
- Can cache infected scan results and clean the scan results (this is enabled by default):

```
config antivirus settings
    set cache-infection-result enable
    set cache-clean-result enable
end
```

### Legacy scan mode:

- Used to disable stream-based scanning for troubleshooting purposes.
- Limited by the oversize and uncompressed-oversize limits:

```
config firewall profile-protocol-options
    edit <profile>
        config <protocol>
            set oversize-limit <size>
            set uncompressed-oversize-limit <size>
        end
    next
end
```

## TCP windows

Some file transfer applications can negotiate large TCP windows. For example, WinSCP can negotiate an initial TCP window size of about 2 GB.

The TCP window options can be used to prevent overly large initial TCP window sizes, helping avoid channel flow control issues. It allows stream-based scan's flow control to limit peers from sending data that exceeds a policy's configured oversize limit.

### To configure TCP window size options:

```
config firewall profile-protocol-options
    edit <string>
        config {http | ftp | ssh | cifs}
            set stream-based-uncompressed-limit <integer>
            set tcp-window-type {auto-tuning | system | static | dynamic}
            set tcp-window-size <integer>
            set tcp-window-minimum <integer>
            set tcp-window-maximum <integer>
        end
    next
end
```

- |                           |  |
|---------------------------|--|
| {http   ftp   ssh   cifs} | <ul style="list-style-type: none"> <li>• http: Configure HTTP protocol options.</li> <li>• ftp: Configure FTP protocol options.</li> </ul> |
|---------------------------|--|

	<ul style="list-style-type: none"> <li>• <code>ssh</code>: Configure SFTP and SCP protocol options.</li> <li>• <code>cifs</code>: Configure CIFS protocol options.</li> </ul>
<code>stream-based-uncompressed-limit</code> <integer>	<p>The maximum stream-based uncompressed data size that will be scanned, in MB (default = 0 (unlimited)).</p> <p>Stream-based uncompressed used only under certain conditions.).</p>
<code>tcp-window-type</code> { <code>auto-tuning</code>   <code>system</code>   <code>static</code>   <code>dynamic</code> }	<p>The TCP window type to use for this protocol.</p> <ul style="list-style-type: none"> <li>• <code>auto-tuning</code>: Allow the system to auto-tune TCP window size (default).</li> <li>• <code>system</code>: Use the system default TCP window size for this protocol.</li> <li>• <code>static</code>: Manually specify the TCP window size.</li> <li>• <code>dynamic</code>: Vary the TCP window size based on available memory within the limits configured in <code>tcp-window-minimum</code> and <code>tcp-window-maximum</code>.</li> </ul>
<code>tcp-window-size</code> <integer>	<p>The TCP static window size (65536 - 33554432, default = 262144).</p> <p>This option is only available when <code>tcp-window-type</code> is <code>static</code>.</p>
<code>tcp-window-minimum</code> <integer>	<p>The minimum TCP dynamic window size (65536 - 1048576, default = 131072).</p> <p>This option is only available when <code>tcp-window-type</code> is <code>dynamic</code>.</p>
<code>tcp-window-maximum</code> <integer>	<p>The maximum TCP dynamic window size (1048576 - 33554432, default = 8388608).</p> <p>This option is only available when <code>tcp-window-type</code> is <code>dynamic</code>.</p>

## Databases

The antivirus scanning engine uses a virus signatures database to record the unique attributes of each infection. The antivirus scan searches for these signatures and when one is discovered, the FortiGate determines if the file is infected and takes action.

All FortiGates have the normal antivirus signature database. Some models have additional databases that you can use. The database you use depends on your network and security needs, and on your FortiGate model.

The extended virus definitions database is the default setting and provides comprehensive antivirus protection. Low-end FortiGate models cannot support the extreme database. The FortiGate 300D is the lowest model that supports the extreme database. All VMs support the extreme database. The `use-extreme-db` setting is only available on models that support the extreme database.

<b>Extended</b>	This is the default setting. This database includes currently spreading viruses, as determined by the FortiGuard Global Security Research Team, plus recent viruses that are no longer active. These viruses may have been spreading within the last year but have since nearly or completely disappeared.
<b>Extreme</b>	This includes the extended database, plus a large collection of zoo viruses. These are viruses that have not spread in a long time and are largely dormant. Some zoo viruses might rely on operating systems and hardware that are no longer widely used.

**To change the antivirus database:**

```
config antivirus settings
    set use-extreme-db {enable | disable}
end
```


## Content disarm and reconstruction

Content disarm and reconstruction (CDR) allows the FortiGate to sanitize Microsoft Office documents and PDF files (including those that are in ZIP archives) by removing active content, such as hyperlinks, embedded media, JavaScript, macros, and so on from the files (disarm) without affecting the integrity of its textual content (reconstruction). It allows network administrators to protect their users from malicious document files.

Files processed by CDR can be stored locally for quarantine on FortiAnalyzer, FortiSandbox, or FortiGate models with a hard disk. The original copies can also be obtained in the event of a false positive.

CDR is supported on HTTP, SMTP, POP3, and IMAP. Note that SMTP splice and client-comfort mode are not supported. CDR does not support flow-based inspection modes.

### Sample topology

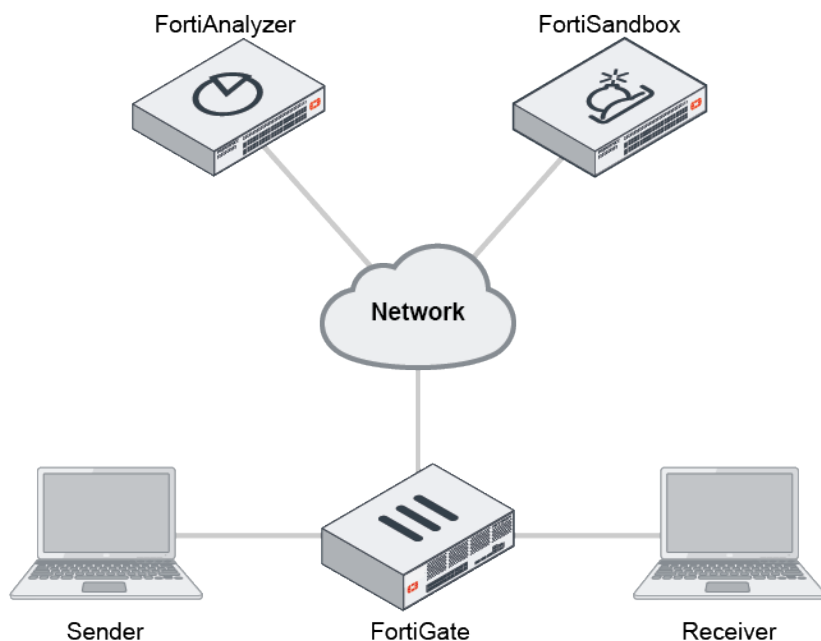

In this example, the a Microsoft Office document with an embedded hyperlink (that redirects to an external website) is sent to the receiver. When the user receives the file, the hyperlink in the document is deactivated.

**To configure CDR:**

1. Go to *Security Profiles > AntiVirus*.
2. Edit an antivirus profile, or create a new one.

3. Under *APT Protection Options*, enable *Content Disarm and Reconstruction*.

The screenshot shows the 'New AntiVirus Profile' configuration window. The 'Name' field is 'CDR'. The 'Comments' field is empty. The 'AntiVirus scan' is set to 'Block'. The 'Feature set' is 'Proxy-based'. Under 'Inspected Protocols', MAPI and SSH are disabled. Under 'APT Protection Options', 'Content Disarm and Reconstruction' is enabled with a red 'P' icon. The 'Original File Destination' is set to 'FortiSandbox'. Other options like 'Allow transmission when an error occurs', 'Treat Windows executables in email attachments as viruses', and 'Include mobile malware protection' are also visible.

4. Select a quarantine location from the available options:

FortiSandbox	Saves the original document file to a connected FortiSandbox.
File Quarantine	Saves the original document file to disk (if possible) or a connected FortiAnalyzer based on the FortiGate log settings ( <code>config log fortianalyzer setting</code> ).
Discard	The default setting, which discards the original document file.

5. Click **OK**.

**To edit the CDR detection parameters:**

By default, stripping of all active Microsoft Office and PDF content types are enabled. In this example, stripping macros in Microsoft Office documents will be disabled.

```
config antivirus profile
  edit av
    config content-disarm
      set office-macro disable
      set detect-only {enable | disable}
      set cover-page {enable | disable}
    end
  next
end
```

Where:

detect-only	Only detect disarmable files, do not alter content. Disabled by default.
cover-page	Attach a cover page to the file's content when the file has been processed by CDR. Enabled by default.

## FortiGuard outbreak prevention

FortiGuard Virus Outbreak Protection Service (VOS) allows the FortiGate antivirus database to be subsidized with third-party malware hash signatures curated by FortiGuard. The hash signatures are obtained from FortiGuard's Global Threat Intelligence database. The antivirus database queries FortiGuard with the hash of a scanned file. If FortiGuard returns a match, the scanned file is deemed to be malicious. Enabling the AV engine scan is not required to use this feature.

FortiGuard VOS can be used in both proxy-based and flow-based policy inspections across all supported protocols.



The FortiGate must be registered with a valid FortiGuard outbreak prevention license.

### To verify FortiGuard antivirus license information:

1. Go to **System > FortiGuard** and locate the **Outbreak Prevention** section in the table.

The screenshot shows the FortiGuard Distribution Network configuration page. The main section is 'License Information', which contains a table of entitlements and their status. The 'Outbreak Prevention' entitlement is listed as 'Licensed' with an expiration date of 2022/01/29. Below this table is a section for 'FortiGuard Updates' with options for scheduled updates (Every, Daily, Weekly, Automatic) and a section for 'FortiGuard Filter Rating Servers' showing the status of various services.

Entitlement	Status	Actions
FortiCare Support	Registered	
Virtual Machine	Valid (Expiration Date: 2022/01/28)	FortiGate VM License
Firmware & General Updates	Licensed (Expiration Date: 2022/01/29)	
Intrusion Prevention	Licensed (Expiration Date: 2022/01/29)	
AntiVirus	Licensed (Expiration Date: 2022/01/29)	
Web Filtering	Licensed (Expiration Date: 2022/01/29)	
Blocked Certificates	Version 1.00317	
Outbreak Prevention	Licensed (Expiration Date: 2022/01/29)	
SD-WAN Network Monitor	Licensed (Expiration Date: 2022/01/29)	
Security Rating	Licensed (Expiration Date: 2022/01/29)	
Industrial DB	Licensed (Expiration Date: 2022/01/29)	
FortiIPAM	Licensed (Expiration Date: 2022/01/29)	
IoT Detection Service	Licensed (Expiration Date: 2022/01/29)	
FortiGate Cloud	Not Activated	Activate

FortiGuard Updates  
Next Update: 2021/04/22 09:22:00  
Update Licenses & Definitions Now

Fortinet Service Communications

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiCloud Log	0 B
FortiGuard.com	1.69 MB
FortiGuard Download	55.79 MB
FortiGuard Query	144.79 kB
FortiGate Cloud Sandbox	0 B
OCVPN	0 B
SDNS	0 B
FortiToken Registration	0 B
SMS Service	0 B

FortiGuard Filter Rating Servers

Service	Status
Web Filter	173.243.140.16 11 ms
Outbreak Prevention	173.243.140.16 11 ms

Additional Information  
API Preview  
Edit in CLI  
Local Out Setting

2. See the instructions in the video, [How to Purchase or Renew FortiGuard Services](#), if required.

### To enable FortiGuard outbreak prevention:

1. Go to **Security Profiles > AntiVirus**.
2. Edit an antivirus profile, or create a new one.

3. Under *Virus Outbreak Protection*, enable *Use FortiGuard outbreak prevention database*.
4. Click **OK**.

#### To verify FortiGuard antivirus license information:

```
# diagnose debug rating
Locale      : english

Service     : Web-filter
Status      : Enable
License     : Contract

Service     : Antispam
Status      : Disable

Service     : Virus Outbreak Prevention
Status      : Enable
License     : Contract

--- Server List (Tue Feb 19 16:36:15 2019) ---
```

IP	Weight	RTT	Flags	TZ	Packets	Curr Lost	Total Lost
Updated Time							
192.168.100.185	-218	2	DI	-8	113	0	0 Tue Feb 19 16:35:55 2019

#### To enable all scanunit debug categories:

```
# diagnose sys scanunit debug all
Set meta-category: all(0xffffffff)
Enabled categories(0xffffffff): daemon job quarantine analytics outbreak-prevention dlp
antispam file-filter

# diagnose debug enable
# su 4739 open
su 4739 req vfid 1 id 1 ep 0 new request, size 313, policy id 1, policy type 0
su 4739 req vfid 1 id 1 ep 0 received; ack 1, data type: 0
su 4739 job 1 request info:
su 4739 job 1 client 10.1.100.11:39412 server 172.16.200.44:80
su 4739 job 1 object_name 'zhvo_test.com'
su 4739 file-typing NOT WANTED options 0x0 file_filter no
su 4739 enable databases 0b (core mmdb extended)
su 4739 job 1 begin http scan
su 4739 scan file 'zhvo_test.com' bytes 68
su 4739 job 1 outbreak-prevention scan, level 0, filename 'zhvo_test.com'
su 4739 scan result 0
su 4739 job 1 end http scan
su 4739 job 1 inc pending tasks (1)
su 4739 not wanted for analytics: analytics submission is disabled (m 0 r 0)
su 4739 job 1 suspend
su 4739 outbreak-prevention recv error
su 4739 ftgd avquery id 0 status 1
su 4739 job 1 outbreak-prevention infected entryid=0
su 4739 report AVQUERY infection priority 1
su 4739 insert infection AVQUERY SUCCEEDED loc (nil) off 0 sz 0 at index 0 total infections
1 error 0
```



```
su 4739 job 1 dec pending tasks 0
su 4739 job 1 send result
su 4739 job 1 close
su 4739 outbreak-prevention recv error
```

## External malware block list

The external malware block list allows users to add their own malware signatures in the form of MD5, SHA1, and SHA256 hashes. The FortiGate's antivirus database retrieves an external malware hash list from a remote server and polls the hash list every *n* minutes for updates. Enabling the AV engine scan is not required to use this feature.

The external malware block list can be used in both proxy-based and flow-based policy inspections, but it is not supported in AV quick scan mode.

Note that using different types of hashes simultaneously may slow down the performance of malware scanning. It is recommended to use one type of hash.

### To create the external block list:

#### 1. Create the malware hash list.

The malware hash list follows a strict format in order for its contents to be valid. Malware hash signature entries must be separated into each line. A valid signature needs to follow this format:

```
# MD5 Entry with hash description
aa67243f746e5d76f68ec809355ec234 md5_sample1

# SHA1 Entry with hash description
a57983cb39e25ab80d7d3dc05695dd0ee0e49766 sha1_sample2

# SHA256 Entry with hash description
ae9bc0b4c5639d977d720e4271da06b50f7c60d1e2070e9c75cc59ab30e49379 sha256_sample1

# Entry without hash description
0289b0d967cb7b1fb1451339c7b9818a621903090e0020366ab415c549212521

# Invalid entries
7688499dc71b932feb126347289c0b8a_md5_sample2
7614e98badca10b5e2d08f8664c519b7a906fbd5180ea5d04a82fce9796a4b87sha256_sample3
```

#### 2. Configure the external malware block list source:

- a. Go to *Security Fabric > External Connectors* and click *Create New*.
- b. Click *Malware Hash*.
- c. Configure the settings as needed. The URI must point to the malware hash list on the remote server.
- d. Click *OK*.

#### 3. To view entries inside the malware block list on the *External Connectors* page, hover over the malware hash card and click *View Entries*.

### To configure antivirus to use an external block list in the GUI:

1. Go to *Security Profiles > AntiVirus* and edit the antivirus profile.
2. In the *Virus Outbreak Prevention* section, enable *Use external malware block list* and click *Specify*.
3. Click the + in the field and select a threat feed.

#### 4. Optionally, enable *Quarantine*.

The screenshot shows the 'New AntiVirus Profile' configuration window in FortiGate. The profile is named 'Demo'. The 'AntiVirus scan' feature set is set to 'Proxy-based'. Under 'Inspected Protocols', HTTP, SMTP, POP3, IMAP, FTP, CIFS, and MAPI are enabled, while SSH is disabled. Under 'APT Protection Options', 'Quarantine' is enabled. Under 'Virus Outbreak Prevention', 'Use FortiGuard outbreak prevention database' and 'Use external malware block list' are enabled. The 'Specify' button for the external block list is highlighted, showing a list with 'malhash1'.

5. Configure the other settings as needed.

6. Click **OK**.

#### To configure antivirus to use an external block list in the CLI:

```
config antivirus profile
  edit "Demo"
    set feature-set proxy
    set mobile-malware-db enable
    config http
      set av-scan disable
      set outbreak-prevention block
      set external-blocklist block
      set quarantine enable
      set emulator enable
      set content-disarm disable
    end
    config ftp
      set av-scan disable
      set outbreak-prevention block
      set external-blocklist block
      set quarantine enable
      set emulator enable
    end
    config imap
      set av-scan monitor
      set outbreak-prevention block
      set external-blocklist block
      set quarantine enable
      set emulator enable
      set executables default
    end
  end
end
```

```
        set content-disarm disable
    end
    config pop3
        set av-scan monitor
        set outbreak-prevention block
        set external-blocklist block
        set quarantine enable
        set emulator enable
        set executables default
        set content-disarm disable
    end
    config smtp
        set av-scan monitor
        set outbreak-prevention block
        set external-blocklist block
        set quarantine enable
        set emulator enable
        set executables default
        set content-disarm disable
    end
    config mapi
        set av-scan monitor
        set outbreak-prevention block
        set external-blocklist block
        set quarantine enable
        set emulator enable
        set executables default
    end
    config nntp
        set av-scan disable
        set outbreak-prevention disable
        set external-blocklist disable
        set quarantine disable
        set emulator enable
    end
    config cifs
        set av-scan monitor
        set outbreak-prevention block
        set external-blocklist block
        set quarantine enable
        set emulator enable
    end
    config ssh
        set av-scan disable
        set outbreak-prevention disable
        set external-blocklist disable
        set quarantine disable
        set emulator enable
    end
    set outbreak-prevention-archive-scan enable
    set external-blocklist-enable-all disable
    set external-blocklist "malhash1"
    set av-virus-log enable
    set av-block-log enable
    set extended-log disable
    set scan-mode default
```

```
next
end
```

The quarantine setting is configured in each protocol (`set quarantine`). The malware threat feed is also specified (`set external-blocklist-enable-all disable`) to the threat connector, `malhash1` (`set external-blocklist "malhash1"`).

**To verify the scanunit daemon updated itself with the external hashes:**

```
# diagnose sys scanunit malware-list list
md5 'aa67243f746e5d76f68ec809355ec234' profile 'malhash1' description 'md5_sample1'
sha1 'a57983cb39e25ab80d7d3dc05695dd0ee0e49766' profile 'malhash1' description 'sha1_
sample2'
sha256 '0289b0d967cb7b1fb1451339c7b9818a621903090e0020366ab415c549212521' profile 'malhash1'
description ''
sha256 'ae9bc0b4c5639d977d720e4271da06b50f7c60d1e2070e9c75cc59ab30e49379' profile 'malhash1'
description 'sha256_sample1'
```

## Malware threat feed from EMS

A FortiGate can pull malware threat feeds from FortiClient EMS, which in turn receives malware hashes detected by FortiClients. The malware hash can be used in an antivirus profile when AV scanning is enabled with block or monitor actions. This feature is supported in proxy and flow mode.



If an external malware blocklist and the FortiGuard outbreak prevention database are also enabled in the antivirus profile, the checking order is: AV local database, EMS threat feed, external malware blocklist, FortiGuard outbreak prevention database. If the EMS threat feed and external malware blocklist contain the same hash value, then the EMS infection will be reported if both of them are blocked.

---

**To configure an EMS threat feed in an antivirus profile in the GUI:**

1. Enable the EMS threat feed:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
  - b. Enable *EMS threat feed*.
  - c. Configure the other settings if needed (see [Configuring FortiClient EMS on page 2604](#) for more details).
  - d. Click *OK*.
2. Create the antivirus profile:
  - a. Go to *Security Profiles > AntiVirus* and click *Create New*.
  - b. In the *Virus Outbreak Prevention* section, enable *Use EMS threat feed*.

## c. Configure the other settings as needed.

## d. Click OK.

## To configure an EMS threat feed in an antivirus profile in the CLI:

## 1. Enable the EMS threat feed:

```
config endpoint-control fctems
  edit "WIN10-EMS"
    set fortinetone-cloud-authentication disable
    set server "192.168.20.10"
    set https-port 443
    set source-ip 0.0.0.0
    set pull-sysinfo enable
    set pull-vulnerabilities enable
    set pull-avatars enable
    set pull-tags enable
    set pull-malware-hash enable
    unset capabilities
    set call-timeout 30
    set websocket-override disable
  next
end
```

## 2. Create the antivirus profile:

```
config antivirus profile
  edit "av"
    config http
      set av-scan block
    end
    config ftp
      set av-scan block
    end
  end
```

```
end
config imap
    set av-scan block
end
config pop3
    set av-scan block
end
config smtp
    set av-scan block
end
config cifs
    set av-scan block
end
set external-blocklist-enable-all enable
set ems-threat-feed enable
next
end
```

### Sample log

```
# execute log filter category utm-virus
# execute log display
```

```
1: date=2021-03-19 time=16:06:46 eventtime=1616195207055607417 tz="-0700" logid="0208008217"
type="utm" subtype="virus" eventtype="ems-threat-feed" level="notice" vd="vd1" policyid=1
msg="Detected by EMS threat feed." action="monitored" service="HTTPS" sessionid=1005
srcip=10.1.100.24 dstip=172.16.200.214 srcport=54674 dstport=443 srcintf="port2"
srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6 direction="incoming"
filename="creditcardSSN.pdf" quarskip="Quarantine-disabled" virus="Email scan" dtype="File
Hash" filehash="22466078c2d52dfd5ebbbd6c4207ddec6ac61aa82f960dc54cfbc83b8eb42ed1"
filehashsrc="test" url="https://172.16.200.214/hash/creditcardSSN.pdf" profile="av"
agent="curl/7.68.0" analyticssubmit="false" crscore=10 craction=2 crlevel="medium"

2: date=2021-03-19 time=16:06:13 eventtime=1616195173832494609 tz="-0700" logid="0208008216"
type="utm" subtype="virus" eventtype="ems-threat-feed" level="warning" vd="vd1" policyid=1
msg="Blocked by EMS threat feed." action="blocked" service="HTTPS" sessionid=898
srcip=10.1.100.24 dstip=172.16.200.214 srcport=54672 dstport=443 srcintf="port2"
srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6 direction="incoming"
filename="BouncingButton.pdf" quarskip="Quarantine-disabled" virus="Email scan" dtype="File
Hash" filehash="a601431acd5004c37bf8fd02fccfdacbb54b27c8648d1d41ad14fa3eaf8651d3"
filehashsrc="test" url="https://172.16.200.214/hash/BouncingButton.pdf" profile="av"
agent="curl/7.68.0" analyticssubmit="false" crscore=10 craction=2 crlevel="medium"
```

## Checking flow antivirus statistics

Two CLI commands are used for the antivirus statistics:

- `diagnose ips av stats show`
- `diagnose ips av stats clear`

SNMP uses an API to get the antivirus statistics.

**To check flow antivirus statistics:****1. Create an antivirus profile:**

```
config antivirus profile
  edit "av-test"
    config http
      set av-scan monitor
    end
    config ftp
      set av-scan block
      set quarantine enable
    end
  next
end
```

**2. Enable the profile in a firewall policy:**

```
config firewall policy
  edit 1
    set name "policy1"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set fsso disable
    set av-profile "av-test"
    set ssl-ssh-profile "custom-deep-inspection"
    set nat enable
  next
end
```

**3. On the client PC, download the EICAR Standard Anti-Virus Test File via HTTP.****4. Check the antivirus statistics on the FortiGate. Since the action is set to monitor for HTTP, HTTP virus detected increases by 1:**

```
# diagnose ips av stats show
AV stats:
HTTP virus detected: 1
HTTP virus blocked: 0
SMTP virus detected: 0
SMTP virus blocked: 0
POP3 virus detected: 0
POP3 virus blocked: 0
IMAP virus detected: 0
IMAP virus blocked: 0
NNTP virus detected: 0
NNTP virus blocked: 0
FTP virus detected: 0
FTP virus blocked: 0
SMB virus detected: 0
SMB virus blocked: 0
```

**5. On the client PC, download the EICAR file via FTP.**

6. Check the antivirus statistics on the FortiGate. Since quarantine is enabled for FTP, FTP virus detected and FTP virus blocked increase by 1:

```
# diagnose ips av stats show
AV stats:
HTTP virus detected: 1
HTTP virus blocked: 0
SMTP virus detected: 0
SMTP virus blocked: 0
POP3 virus detected: 0
POP3 virus blocked: 0
IMAP virus detected: 0
IMAP virus blocked: 0
NNTP virus detected: 0
NNTP virus blocked: 0
FTP virus detected: 1
FTP virus blocked: 1
SMB virus detected: 0
SMB virus blocked: 0
```

7. Check the antivirus statistics using an SNMP walk:

```
root:~# snmpwalk -c public -v 1 10.1.100.6 1.3.6.1.4.1.12356.101.8.2.1.1
iso.3.6.1.4.1.12356.101.8.2.1.1.1.1 = Counter32: 2 (fgAvVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.2.1 = Counter32: 1 (fgAvVirusBlocked)
iso.3.6.1.4.1.12356.101.8.2.1.1.3.1 = Counter32: 1 (fgAvHTPVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.4.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.5.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.6.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.7.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.8.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.9.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.10.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.11.1 = Counter32: 1 (fgAvFTPVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.12.1 = Counter32: 1 (fgAvFTPVirusBlocked)
iso.3.6.1.4.1.12356.101.8.2.1.1.13.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.14.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.15.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.16.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.17.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.18.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.19.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.20.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.21.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.22.1 = Counter32: 0
```

8. Optionally, reset the antivirus statistics to zero:

```
# diagnose ips av stats clear
```

## CIFS support

Antivirus scanning on Common Internet File System (CIFS) traffic is supported in flow-based and proxy-based inspection. The file filter profile handles the configuration of file filtering on CIFS. The antivirus profile handles the antivirus configuration for CIFS scanning.



File filtering for CIFS is performed by inspecting the first 4 KB of the file to identify the file's magic number. If a match occurs, CIFS file filtering prevents the CIFS command that contains that file from running. The file filter functions differently for un-encrypted and encrypted CIFS traffic:

- For un-encrypted CIFS traffic, the standalone file filter works in flow and proxy mode.
- For encrypted CIFS traffic, the CIFS profile must be enabled in the firewall policy because the SMB server's credential settings are still be configured in CIFS profile. Using the standalone file filter only works in proxy mode.

For a CIFS profile to be available for assignment in a policy, the policy must use proxy inspection mode. See [Proxy mode inspection on page 1263](#) for details. Note that in proxy inspection mode, special condition archive files (encrypted, corrupted, mailbomb, and so on) marked by the antivirus engine are blocked automatically.

Messages that are compressed with LZNT1, LZ77, and LZ77+Huffman algorithms can be scanned in proxy mode.

## Configure file-type filtering and antivirus scanning on CIFS traffic

**To configure file-type filtering and antivirus scanning on CIFS traffic:**

1. [Configure a CIFS domain controller on page 1291](#)
2. [Configure a CIFS profile on page 1291](#)
3. [Configure an antivirus profile on page 1293](#)

### Configure a CIFS domain controller

The domain controller must be configured when CIFS traffic is encrypted. The configuration tells the FortiGate the network location of the domain controller and the superuser credentials.

**To configure the CIFS domain controller:**

```
config user domain-controller
    edit "SERVER_NAME"
        set hostname "host"
        set domain-name "EXAMPLE.COM"
        set username "admin-super"
        set password "*****"
        set ip 172.16.201.40
    next
end
```

### Configure a CIFS profile

To create a CIFS profile, configure the server credential type and create a file filter profile.

#### Set the CIFS server credential type

The CIFS server credential type can be `none`, `credential-replication`, or `credential-keytab`.

##### **none**

The CIFS profile assumes the CIFS traffic is unencrypted. This is the default value.

```
config firewall profile-protocol-options
    edit "cifs"
```

```

        config cifs
            set server-credential-type none
        end
    next
end

```

### credential-replication

To decrypt CIFS traffic, FortiOS obtains the session key from the domain controller by logging in to the superuser account. The domain controller must be configured.

```

config firewall profile-protocol-options
    edit "cifs"
        config cifs
            set server-credential-type credential-replication
            set domain-controller "SERVER_NAME"
        end
    next
end

```

Variable	Description
domain-controller <string>	The previously configured domain to decrypt CIFS traffic for.

### credential-keytab

To decrypt CIFS traffic, FortiOS uses a series of keytab values. This method is used when the SMB connection is authenticated by Kerberos. Keytab entries must be configured, and are stored in FortiOS in plaintext.

```

config firewall profile-protocol-options
    edit "cifs"
        config cifs
            set server-credential-type credential-keytab
            config server-keytab
                edit "keytab1"
                    set keytab
"BQIAABFAAEAC0VYQU1QTEUuQ09NAAdleGFtcGx1AAAAVUmAlwBABIAILdV5P6NXT8RrTvapcMJQxDYCjRQid0Bzxh
wS9h0VgyM"
                next
            end
        end
    next
end

```

Variable	Description
keytab <keytab>	Base64 encoded keytab file containing the credentials of the server.

### Configure CIFS file filtering

Multiple rules can be added to a file filter profile. See [File filter on page 1437](#).

**To configure a file filter for CIFS traffic:**

```

config file-filter profile
  edit "cifs"
    set comment "block zip files on unencrypted cifs traffic"
    set feature-set flow
    set replacemsg-group ''
    set log enable
    config rules
      edit "rule1"
        set protocol cifs
        set action block
        set direction any
        set password-protected any
        set file-type zip
      next
    end
  next
end

```

Variable	Description
comment <string>	A brief comment describing the entry.
feature-set {flow   proxy}	Flow or proxy mode feature set (default = flow).
replacemsg-group <string>	Replacement message group.
log {enable   disable}	Enable/disable file filter logging (default = enable).
scan-archive-contents [enable   disable]	Enable/disable scanning of archive contents (default = enable).
protocol {http ftp smtp imap pop3 mapi cifs ssh}	Filter based on the specified protocol(s).
action {log-only   block}	The action to take for matched files: <ul style="list-style-type: none"> <li>log-only: Allow the content and write a log message (default).</li> <li>block: Block the content and write a log message.</li> </ul>
direction {incoming   outgoing   any}	Match files transmitted in the session's originating (incoming) and/or reply (outgoing) direction (default = any).
password-protected [yes   any]	Match only password-protected files (yes) or any file (default = any).
file-type <file_type>	The file types to be matched. See <a href="#">Supported file types on page 1443</a> for details.

**Configure an antivirus profile**

The antivirus profile handles the antivirus configuration for CIFS scanning.

**To configure an antivirus profile:**

```

config antivirus profile
  edit "av"
    ...
    config cifs
  end
end

```

```

        set av-scan {disable | block | monitor}
        set outbreak-prevention {disable | block | monitor}
        set external-blocklist {disable | block | monitor}
        set quarantine {enable | disable}
        set archive-block {encrypted corrupted partiallycorrupted multipart nested
mailbomb fileslimit timeout unhandled}
        set archive-log {encrypted corrupted partiallycorrupted multipart nested
mailbomb fileslimit timeout unhandled}
        set emulator {enable | disable}
    end
next
end

```

Variable	Description
av-scan	Enable antivirus scan service: <ul style="list-style-type: none"> <li>• <b>disable:</b> Disable (default).</li> <li>• <b>block:</b> Block the virus infected files.</li> <li>• <b>monitor:</b> Log the virus infected files.</li> </ul>
outbreak-prevention {disable   block   monitor}	Enable the virus outbreak prevention service: <ul style="list-style-type: none"> <li>• <b>disable:</b> Disable (default).</li> <li>• <b>block:</b> Block the matched files.</li> <li>• <b>monitor:</b> Log the matched files.</li> </ul>
external-blocklist {disable   block   monitor}	Enable the external blocklist: <ul style="list-style-type: none"> <li>• <b>disable:</b> Disable (default).</li> <li>• <b>block:</b> Block the matched files.</li> <li>• <b>monitor:</b> Log the matched files.</li> </ul>
quarantine {enable   disable}	Enable/disable quarantine for infected files (default = disable).
archive-block {encrypted corrupted partiallycorrupted multipart nested mailbomb fileslimit timeout unhandled}	Select the archive types to block: <ul style="list-style-type: none"> <li>• <b>encrypted:</b> Block encrypted archives.</li> <li>• <b>corrupted:</b> Block corrupted archives.</li> <li>• <b>partiallycorrupted:</b> Block partially corrupted archives.</li> <li>• <b>multipart:</b> Block multipart archives.</li> <li>• <b>nested:</b> Block nested archives.</li> <li>• <b>mailbomb:</b> Block mail bomb archives.</li> <li>• <b>fileslimit:</b> Block exceeded archive files limit.</li> <li>• <b>timeout:</b> Block scan timeout.</li> <li>• <b>unhandled:</b> Block archives that FortiOS cannot open.</li> </ul>
archive-log {encrypted corrupted partiallycorrupted multipart nested mailbomb fileslimit timeout unhandled}	Select the archive types to log: <ul style="list-style-type: none"> <li>• <b>encrypted:</b> Log encrypted archives.</li> <li>• <b>corrupted:</b> Log corrupted archives.</li> <li>• <b>partiallycorrupted:</b> Log partially corrupted archives.</li> <li>• <b>multipart:</b> Log multipart archives.</li> <li>• <b>nested:</b> Log nested archives.</li> <li>• <b>mailbomb:</b> Log mail bomb archives.</li> <li>• <b>fileslimit:</b> Log exceeded archive files limit.</li> <li>• <b>timeout:</b> Log scan timeout.</li> </ul>

Variable	Description
	<ul style="list-style-type: none"> <li>unhandled: Log archives that FortiOS cannot open.</li> </ul>
emulator {enable   disable}	Enable/disable the virus emulator (default = enable).

## Log samples

File-type detection events generated by CIFS profiles are logged in the `utm-cifs` log category. Antivirus detection over the CIFS protocol generates logs in the `utm-virus` category. See the [FortiOS Log Message Reference](#) for more information.

### Logs generated by CIFS profile file filter:

```
date=2019-03-28 time=10:39:19 logid="1800063001" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="notice" vd="vdom1" eventtime=1553794757 msg="File was detected by file
filter." direction="incoming" action="passthrough" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33372 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="1154"
filename="virus\\test.png" filtername="2" filetype="png"
```

```
date=2019-03-28 time=10:39:12 logid="1800063001" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="notice" vd="vdom1" eventtime=1553794751 msg="File was detected by file
filter." direction="incoming" action="passthrough" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33370 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="81975"
filename="virus\\screen.png" filtername="2" filetype="png"
```

```
date=2019-03-28 time=10:33:55 logid="1800063000" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="warning" vd="vdom1" eventtime=1553794434 msg="File was blocked by file
filter." direction="incoming" action="blocked" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33352 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="28432"
filename="filetypes\\mpnnotify.exe" filtername="3" filetype="exe"
```

```
date=2019-03-28 time=10:33:45 logid="1800063000" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="warning" vd="vdom1" eventtime=1553794424 msg="File was blocked by file
filter." direction="incoming" action="blocked" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33348 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="96528"
filename="filetypes\\winmine.exe" filtername="3" filetype="exe"
```

### Logs generated by AV profile for infections detected over CIFS:

```
date=2019-04-09 time=15:19:02 logid="0204008202" type="utm" subtype="virus"
eventtype="outbreak-prevention" level="warning" vd="vdom1" eventtime=1554848342519005401
msg="Blocked by Virus Outbreak Prevention service." action="blocked" service="SMB"
sessionid=177 srcip=10.1.100.11 dstip=172.16.200.44 srcport=37444 dstport=445 srcintf="wan2"
srcintfrole="wan" dstintf="wan1" dstintfrole="wan" policyid=1 proto=6 direction="incoming"
filename="outbreak\\zhvo_test.com" quarskip="File-was-not-quarantined."
virus="503e99fe40ee120c45bc9a30835e7256fff3e46a" dtype="File Hash"
filehash="503e99fe40ee120c45bc9a30835e7256fff3e46a" filehashsrc="fortiguard" profile="av"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

```
date=2019-04-09 time=15:18:59 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1554848339909808987 msg="File is
infected." action="blocked" service="SMB" sessionid=174 srcip=10.1.100.11
dstip=172.16.200.44 srcport=37442 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=6 direction="incoming"
filename="sample\\eicar.com" quarskip="File-was-not-quarantined." virus="EICAR_TEST_FILE"
dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172 profile="av"
analyticscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

## Using FortiSandbox post-transfer scanning with antivirus

Antivirus profiles can submit potential zero-day viruses to FortiSandbox for inspection. Based on FortiSandbox's analysis, the FortiGate can supplement its own antivirus database with FortiSandbox's threat intelligence to detect files determined as malicious or suspicious. This augments the FortiGate antivirus with zero-day detection.

FortiSandbox can be used with antivirus in both proxy-based and flow-based inspection modes. The FortiGate first examines the file for any known viruses. When a match is found, the file is tagged as known malware. If no match is found, the files are forwarded to FortiSandbox using the following options:

- *All Supported Files*: all files matching the file types defined in the scan profile of the FortiSandbox are forwarded.
- *Suspicious Files Only*: files classified by the antivirus as having any possibility of active content are forwarded to FortiSandbox. When using FortiGate Cloud Sandbox, we recommend selecting this option due to its submission limits.
- *None*: files are not forwarded to FortiSandbox.

For more information, see [Configuring sandboxing on page 2627](#).

### To enable FortiSandbox inspection in an antivirus profile:

1. Go to *Security Profiles > AntiVirus*.
2. Create, edit, or clone an antivirus profile.
3. In the *APT Protection Options* section, set *Send Files to FortiSandbox for Inspection* to either *Suspicious Files Only* or *All Supported Files*.
4. Optionally, for *Do not submit files matching types*, click the + to exclude certain file types from being sent to FortiSandbox.
5. Optionally, for *Do not submit files matching file name patterns*, click the + to enter a wildcard pattern to exclude files from being sent to FortiSandbox.

New AntiVirus Profile

APT Protection Options

Treat Windows executables in email attachments as viruses ☐

Send files to FortiSandbox for inspection ☒

Scan strategy

File types

Do not submit files matching types

Do not submit files matching file name patterns

Use FortiSandbox database ☒

Send files to FortiNDR for inspection ☐

Include mobile malware protection ☒

Quarantine ☐

Virus Outbreak Prevention ☐

Use FortiGuard outbreak prevention database ☐

Use external malware block list ☐

Use EMS threat feed ☐

FortiGate

[FG Docs](#)

Additional Information

[Online Help](#)

[Video Tutorials](#)

6. Enable *Use FortiSandbox Database*.

7. Click OK.

## FortiGate diagnostics

### To view the detection count:

```
# diagnose test application quarantined 7
Total: 0
```

Statistics:

```
vfid: 0, detected: 2, clean: 1252, risk_low: 6, risk_med: 2, risk_high: 1, limit_
reached:0
```

### To verify the address is configured correctly:

```
# diagnose test application quarantined 1
...
fortisandbox-fsb1 is enabled: analytics, realtime=yes, taskfull=no
addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no. ssl_opt=3, hmac_alg=0
...
```

### To run the diagnostics for real-time debugging:

```
# diagnose debug application quarantined -1
# diagnose debug enable
```

### To check the FortiGate Cloud server status:

```
# diagnose test application forticldd 3
...
Active APTServer status: up
```

**To view FortiGate Cloud Sandbox submission statistics for advanced debugging:**

```
# diagnose test application quarantined 2
```

## FortiSandbox diagnostics

**To run the OFTP debug for advanced debugging:**

```
# diagnose-debug device <client serial number>
```

## Using FortiSandbox inline scanning with antivirus

FortiSandbox inline scanning can be used in proxy inspection mode. When inline scanning is enabled, the client's file is held while it is sent to FortiSandbox for inspection. During this time, the FortiGate may apply client comforting (see [Protocol options on page 1186](#)). For example, leaking a certain amount of bytes at a certain time interval to the client. Once a verdict is returned, the appropriate action (allow or block) is performed on the held file. If there is an error connecting to the FortiSandbox or a timeout on the FortiSandbox scanning the file within the default 50 seconds, the file can be passed, logged, or blocked based on FortiGate's configuration. This feature is not supported on FortiSandbox Cloud. For more information, see [Configuring sandboxing on page 2627](#).

This topic describes how to configure the following:

- [FortiSandbox appliance inline scanning](#)
- [FortiGuard AI-Based Sandbox Service inline scanning](#)
- [FortiSandbox scanning error and timeout actions](#)

### FortiSandbox appliance inline scanning

Inline scanning requires a FortiSandbox appliance running version 4.2 or later, and the FortiSandbox must be reachable by port 4443. See [Understanding Inline Block feature](#) in the FortiSandbox Best Practices for more information.



FortiSandbox inline scanning is disabled by default. FortiSandbox inline scanning is best used in conjunction with AV engine scanning since there is a higher rate of detection by using both at the same time.

---

**To enable FortiSandbox inline scanning:**

```
config system fortisandbox
    set status enable
    set inline-scan {enable | disable}
    set server <fortisandbox_server_ip>
end
```

**To configure the FortiSandbox scanning options in an antivirus profile:**

```
config antivirus profile
    edit <name>
        set fortisandbox-mode {inline | analytics-suspicious | analytics-everything}
        set fortisandbox-error-action {ignore | log-only | block}
```



```



        set fortisandbox-timeout-action {ignore | log-only | block}
        set fortisandbox-max-upload <integer>
        config {http | ftp | imap | pop3 | smtp | mapi | cifs | ssh}
            set av-scan {disable | block | monitor}
            set fortisandbox {disable | block | monitor}
        end
    next
end

```





<pre> fortisandbox-mode {inline   analytics- suspicious   analytics- everything} </pre>	<p><b>Set the FortiSandbox scan mode:</b></p> <ul style="list-style-type: none"> <li>• <code>inline</code>: FortiSandbox inline scanning</li> <li>• <code>analytics-suspicious</code>: FortiSandbox post-transfer scanning; submit supported files if heuristics or other methods determine they are suspicious</li> <li>• <code>analytics-everything</code>: FortiSandbox post-transfer scanning; submit supported files and known infected files (default)</li> </ul>
<pre> fortisandbox-error-action {ignore   log-only   block} </pre>	<p><b>Set the action to take if FortiSandbox inline scanning encounters an error reaching the FortiSandbox:</b></p> <ul style="list-style-type: none"> <li>• <code>ignore</code>: take no action</li> <li>• <code>log-only</code>: log the FortiSandbox inline scan error, but allow the file (default)</li> <li>• <code>block</code>: block the file upon FortiSandbox inline scan error</li> </ul>
<pre> fortisandbox-timeout- action {ignore   log-only   block} </pre>	<p><b>Set the action to take if FortiSandbox inline scanning encounters a scan timeout:</b></p> <ul style="list-style-type: none"> <li>• <code>ignore</code>: take no action</li> <li>• <code>log-only</code>: log the FortiSandbox inline scan timeout, but allow the file (default)</li> <li>• <code>block</code>: block the file upon FortiSandbox inline scan timeout</li> </ul>
<pre> fortisandbox-max-upload &lt;integer&gt; </pre>	<p><b>Set the maximum size of files that can be uploaded to FortiSandbox (1 - 396, default = 10).</b></p>
<pre> av-scan {disable   block   monitor} </pre>	<p><b>Enable the antivirus scan service. Set to <code>block</code> or <code>monitor</code> to work with FortiSandbox (default = <code>disable</code>).</b></p>
<pre> fortisandbox {disable   block   monitor} </pre>	<p><b>Set the protocol level parameter for FortiSandbox file scanning:</b></p> <ul style="list-style-type: none"> <li>• <code>disable</code> (default), <code>block</code>, and <code>monitor</code> are available for inline scanning</li> <li>• <code>disable</code> (default) and <code>monitor</code> are available for post-transfer scanning</li> </ul>


## Basic configuration

This example assumes that *Inline Block Policy* is already enabled in FortiSandbox for the FortiGate with selected risk levels (see [FortiGate devices](#) in the FortiSandbox Administration Guide for more information). The inline block policy in this example blocks all risk levels: malicious, high risk, medium risk, and low risk.

Device Status	
Serial Number:	FG101FTK 
Hostname:	AV-FORTISANDBOX-NAT
IP:	2000:172:16:200::16
Status:	
Last Modified:	2021-08-10 15:53:10
Last Seen:	2022-03-23 14:56:08

Permissions & Policy	
Authorized:	<input checked="" type="checkbox"/> Last Changed 2021-08-10 15:53:10
New VDOMs/Domains Inherit Authorization:	<input checked="" type="checkbox"/>

Email Settings 	
Administrator Email:	
Send Notifications:	<input checked="" type="checkbox"/> 
Send PDF Reports:	<input checked="" type="checkbox"/> 

Inline Block Policy 	
All VDOMs:	<input checked="" type="checkbox"/>
Files with selected risk will be blocked:	
<input checked="" type="checkbox"/> Malicious <input checked="" type="checkbox"/> High Risk <input checked="" type="checkbox"/> Medium Risk <input checked="" type="checkbox"/> Low Risk	

### To configure FortiSandbox inline scanning in the GUI:

#### 1. Enable FortiSandbox inline scanning globally:

```
config system fortisandbox
    set status enable
    set inline-scan enable
    set server "172.18.70.76"
end
```

#### 2. Configure the antivirus profile:

- a. Go to *Security Profiles > AntiVirus* and click *Create New*.
- b. Set the *Feature set* to *Proxy-based*.
- c. Enable the protocols to inspect.
- d. Enable *AntiVirus scan* and set it to *Block*.
- e. Enable *Send files to FortiSandbox* for inspection and set the *Action* to *Block*. The *Scan strategy* appears as *Inline* because it was configured in the CLI.

f. Click OK.

### To configure FortiSandbox inline scanning in the CLI:

#### 1. Enable FortiSandbox inline scanning globally:

```
config system fortisandbox
    set status enable
    set inline-scan enable
    set server "172.18.70.76"
end
```

#### 2. Configure the antivirus profile:

```
config antivirus profile
    edit "Inline_scan_demo"
        set feature-set proxy
        set fortisandbox-mode inline
        config http
            set av-scan block
            set fortisandbox block
        end
        config ftp
            set av-scan block
            set fortisandbox block
        end
        config imap
            set av-scan block
            set fortisandbox block
        end
    end
```

 
```

end
config pop3
    set av-scan block
    set fortisandbox block
end
config smtp
    set av-scan block
    set fortisandbox block
end
config mapi
    set av-scan block
    set fortisandbox block
end
config cifs
    set av-scan block
    set fortisandbox block
end
config ssh
    set av-scan block
    set fortisandbox block
end
next
end

```

### To verify that infected files are blocked inline:

1. On a client, open a web browser and download an infected file.
2. The file is held while being scanned by FortiSandbox. Once FortiSandbox determines that file's risk level is not tolerated by the inline block policy, the FortiGate drops the connection and displays a replacement message that the file cannot be downloaded.



### High Security Alert

You are not permitted to download the file "skip\_vm.vxE" because it is infected with the virus "Trojan".

URL [http://172.16.200.184/sandbox/inline/skip\\_vm.vxE](http://172.16.200.184/sandbox/inline/skip_vm.vxE)  
 Quarantined File Name [disabled]  
 Reference URL <http://www.fortinet.com/ve?vn=Trojan>

3. In FortiOS, view the antivirus log.
  - In the GUI, go to *Log & Report > Security Events* and click the *AntiVirus* card.
  - In the CLI:

```

# execute log filter category 2
# execute log display
1 logs found.
1 logs returned.

```

```
1: date=2022-03-23 time=16:19:37 eventtime=1648077577156255080 tz="-0700"
```

```

logid="0210008232" type="utm" subtype="virus" eventtype="fortisandbox"
level="warning" vd="vdom1" policyid=1 poluuid="9170ca3e-aade-51ec-772b-1d31f135fe26"
policytype="policy" msg="Blocked by FortiSandbox." action="blocked" service="HTTP"
sessionid=10545 srcip=10.1.100.181 dstip=172.16.200.184 srcport=37046 dstport=80
srccountry="Reserved" dstcountry="Reserved" srcintf="port1" srcintfrole="undefined"
dstintf="port9" dstintfrole="undefined" srcuuid="5b426c60-aade-51ec-f020-b3d334ba18d3"
dstuuid="5b426c60-aade-51ec-f020-b3d334ba18d3" proto=6
direction="incoming" filename="skip_vm.vXE" quarskip="File-was-not-quarantined"
virus="Trojan" viruscat="Unknown" dtype="fortisandbox"
ref="http://www.fortinet.com/ve?vn=Trojan" virusid=0
url="http://172.16.200.184/sandbox/inline/skip_vm.vXE" profile="Inline_scan_demo"
agent="curl/7.68.0" httpmethod="GET" analyticssubmit="false" fsaaction="deny"
fsaseverity="high-risk" fsaverdict="block" fsafileid=0 fsafiletype="exe" crscore=50
craction=2 crlevel="critical"

```

## FortiGuard AI-Based Sandbox Service inline scanning


Inline scanning is supported when the FortiGate is licensed with the FortiGuard AI-Based Sandbox Service (FAIS). It works similar to inline scanning for the FortiSandbox appliance by holding a file up to 50 seconds for the verdict to be returned. Timed out scans can be set to block, log, or ignore. Inline scanning can be enabled from the GUI on the *Cloud Sandbox* configuration page.



Inline scanning is supported for FortiSandbox appliance, FortiNDR, and FAIS. On a FortiGate, only a single inline scanning type can be configured at a time.

### To configure FAIS inline scanning in the GUI:


1. Enable the FortiGate Cloud feature visibility:
  - a. Go to *System > Feature Visibility*.
  - b. In the *Additional Features* section, enable *FortiGate Cloud Sandbox*.
  - c. Click *Apply*.
2. Configure the *Sandbox* Fabric connector:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Sandbox* card.
  - b. In the *Settings* tab, set the *Type* to *FortiGate Cloud*.
  - c. Select a *Region*.
  - d. Enable *Inline scan*.

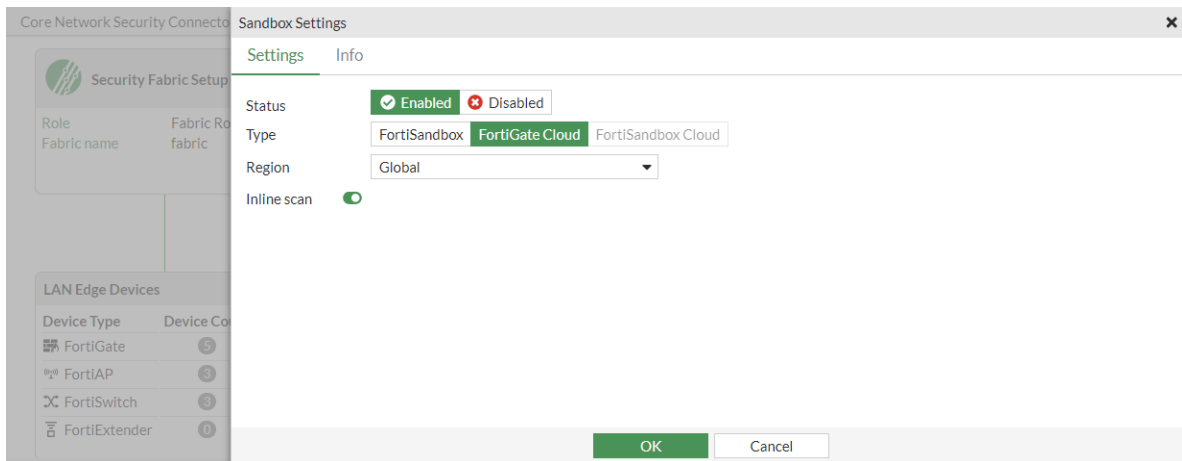

e. Click **OK**.

3. Configure the antivirus profile:

- a. Go to *Security Profiles > AntiVirus* and click *Create New*.
- b. Set the *Feature set* to *Proxy-based*.
- c. Enable the protocols to inspect.
- d. Enable *Send files to FortiSandbox* for inspection.
- e. Set the *Scan strategy* to *Inline*, and set the *Action* to *Block*.

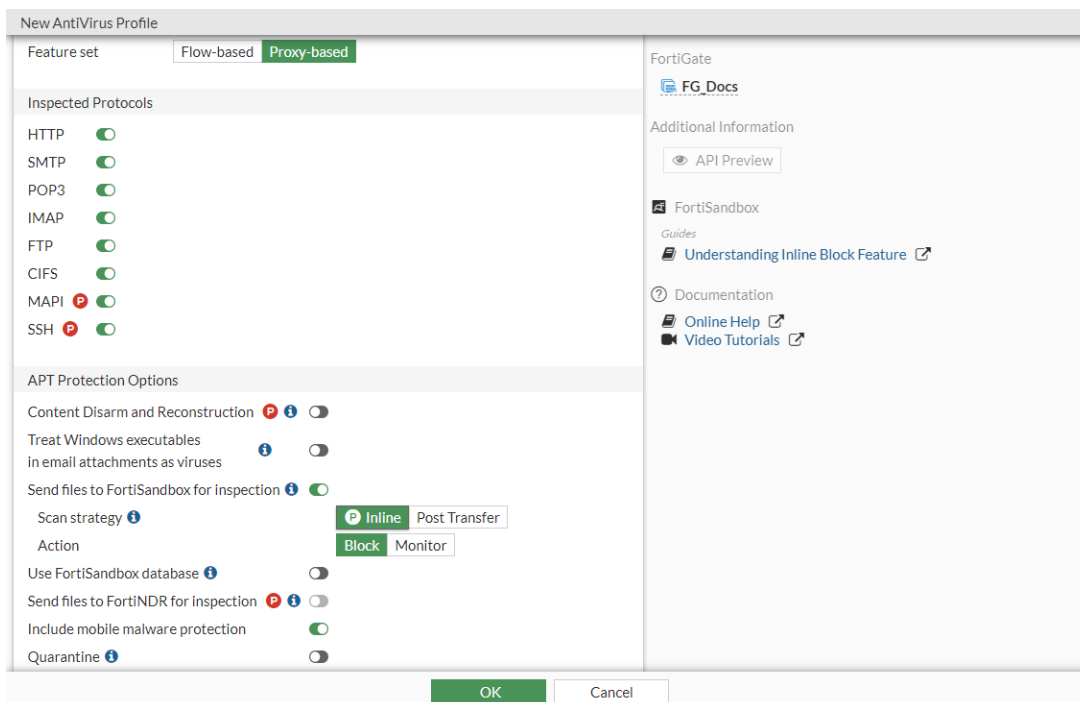

f. Click **OK**.

**To configure FAIS inline scanning in the CLI:****1. Disable FortiSandbox appliance and FortiSandbox Cloud:**

```
config system fortisandbox
    set status disable
end
```

**2. Configure FortiGate Cloud Sandbox:**

```
# execute forticloud-sandbox region
0 Global
1 Europe
2 Japan
3 US
Please select cloud sandbox region[0-3]:0
Cloud sandbox region is selected: Global
```

**3. Enable inline scanning for FortiGate Cloud:**

```
config system fortiguard
    set sandbox-region "Global"
    set sandbox-inline-scan enable
end
```

**4. Configure the antivirus profile:**

```
config antivirus profile
    edit "av"
        set feature-set proxy
        set fortisandbox-mode inline
        config http
            set fortisandbox block
        end
        config ftp
            set fortisandbox block
        end
        config imap
            set fortisandbox block
        end
        config pop3
            set fortisandbox block
        end
        config smtp
            set fortisandbox block
        end
        config mapi
            set fortisandbox block
        end
        config cifs
            set fortisandbox block
        end
        config ssh
            set fortisandbox block
        end
        set scan-mode default
    next
end
```

**To verify that infected files are blocked inline:**

1. On a client, open a web browser and download an infected file using HTTP.
2. The file is held while being scanned by FortiGate Cloud Sandbox. Once FortiGate Cloud Sandbox determines that file's risk level is not tolerated, the FortiGate drops the connection and displays a replacement message that the file cannot be downloaded.
3. Verify the antivirus log:

```
# execute log display
1 logs found.
1 logs returned.

1: date=2022-07-12 time=16:31:26 eventtime=1657668686245018328 tz="-0700"
logid="0210008232" type="utm" subtype="virus" eventtype="fortisandbox" level="warning"
vd="vdom1" policyid=1 poluid="54c06312-01fd-51ed-0db5-10c9586a0c2e" policytype="policy"
msg="Blocked by FortiSandbox." action="blocked" service="HTTP" sessionid=19934
srcip=10.1.100.191 dstip=172.16.200.194 srcport=51688 dstport=80 srccountry="Reserved"
dstcountry="Reserved" srcintf="port1" srcintfrole="undefined" dstintf="port9"
dstintfrole="undefined" srcuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0"
dstuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0" proto=6 direction="incoming"
filename="skip_vm.vxE" quarskip="Quarantine-disabled" virus="Unknown" viruscat="Trojan"
dtype="fortisandbox" ref="http://www.fortinet.com/ve?vn=Unknown" virusid=0
url="http://172.16.200.194/sandbox/inline/skip_vm.vxE" profile="av" agent="curl/7.68.0"
httpmethod="GET" analyticssubmit="false" fsaaction="deny" fsaverdict="block"
fsaseverity="high-risk" fsafileid=0 fsafiletype="exe" crscore=50 craction=2
crlevel="critical"
```

**To verify that infected files are monitored:**

1. Edit the antivirus profile to monitor files over HTTP:

```
config antivirus profile
  edit "av"
    set feature-set proxy
    set fortisandbox-mode inline
    config http
      set fortisandbox monitor
    end
  next
end
```

2. On a client, open a web browser and download an infected file using HTTP.
3. Verify the antivirus log:

```
# execute log display
1 logs found.
1 logs returned.

1: date=2022-07-12 time=16:34:25 eventtime=1657668865371976563 tz="-0700"
logid="0210008233" type="utm" subtype="virus" eventtype="fortisandbox" level="notice"
vd="vdom1" policyid=1 poluid="54c06312-01fd-51ed-0db5-10c9586a0c2e" policytype="policy"
msg="Detected by FortiSandbox." action="monitored" service="HTTP" sessionid=20002
srcip=10.1.100.191 dstip=172.16.200.194 srcport=51724 dstport=80 srccountry="Reserved"
dstcountry="Reserved" srcintf="port1" srcintfrole="undefined" dstintf="port9"
dstintfrole="undefined" srcuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0"
dstuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0" proto=6 direction="incoming"
```



```
filename="skip_vm.vxE" quarskip="Quarantine-disabled" virus="Unknown" viruscat="Trojan"
dtype="fortisandbox" ref="http://www.fortinet.com/ve?vn=Unknown" virusid=0
url="http://172.16.200.194/sandbox/inline/skip_vm.vxE" profile="av" agent="curl/7.68.0"
httpmethod="GET" analyticssubmit="false" fsaaction="deny" fsaverdict="block"
fsaseverity="high-risk" fsafileid=0 fsafiletype="exe" crscore=50 craction=2
crlevel="critical"
```

### To verify that infected files are blocked inline if a scan timeout occurs:

1. Edit the antivirus profile to block files over HTTP and when there is a scan timeout:

```
config antivirus profile
  edit "av"
    set feature-set proxy
    set fortisandbox-mode inline
    config http
      set fortisandbox block
    end
    set fortisandbox-timeout-action block
  next
end
```

2. On a client, open a web browser and download a large ZIP file (clean file).
3. When the scan timeout occurs, a replacement message appears that *The file "zipfile.zip" is still being scanned and will be released once complete. Please try the transfer again in a few minutes.*
4. Verify the antivirus log:

```
# execute log display
1 logs found.
1 logs returned.

1: date=2022-07-12 time=16:44:51 eventtime=1657669491697816069 tz="-0700"
logid="0210008236" type="utm" subtype="virus" eventtype="fortisandbox" level="warning"
vd="vdom1" policyid=1 poluuid="54c06312-01fd-51ed-0db5-10c9586a0c2e" policytype="policy"
msg="FortiSandbox scan timeout." action="blocked" service="HTTP" sessionid=20258
srcip=10.1.100.191 dstip=172.16.200.194 srcport=51830 dstport=80 srccountry="Reserved"
dstcountry="Reserved" srcintf="port1" srcintfrole="undefined" dstintf="port9"
dstintfrole="undefined" srcuuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0"
dstuuid="1cb467b6-01fd-51ed-8abf-72abd959c0d0" proto=6 direction="incoming"
filename="zipfile.zip" quarskip="Quarantine-disabled"
url="http://172.16.200.194/sandbox/zipfile.zip" profile="av" agent="curl/7.68.0"
httpmethod="GET" analyticssubmit="false" fsaaction="timeout" fsafileid=0 crscore=50
craction=2 crlevel="critical"
```

5. After a few minutes, download the ZIP file again.
6. When the scan is complete on the FortiSandbox side, the file is downloaded and no log is generated because the scan deemed that the file is clean.

## FortiSandbox scanning error and timeout actions

In this example, the HTTP protocol settings for `av-scan` and `fortisandbox` in the AV profile are both set to `block`. All files traversing HTTP in this configuration are scanned by the AV engine first, and then by FortiSandbox inline scanning for further file analysis. Based on the FortiSandbox results, FortiOS will take the appropriate action.

Files can be blocked if they contain a scan error or timeout. The scan timeout is configured in FortiSandbox and set to 50 seconds. If the file scan takes longer than 50 seconds, FortiSandbox returns a timeout to the FortiGate, and file is dropped with the current configuration. If a user tries to download the same file again, the cached result is provided by FortiSandbox to the FortiGate based on the previous file scan.

This example assumes FortiSandbox inline scanning has been configured globally. The FortiGate will block the file if there is an inline scanning error or timeout.

#### To configure the antivirus profile to block files if there is an inline scanning error or timeout:

```
config antivirus profile
  edit "av"
    set feature-set proxy
    set fortisandbox-mode inline
    config http
      set av-scan block
      set fortisandbox block
    end
    set fortisandbox-error-action block
    set fortisandbox-timeout-action block
  next
end
```

If the administrator decides to take more risk and scan all files traversing HTTP, but log or ignore an inline scanning error or timeout, the profile is modified as follows:

```
config antivirus profile
  edit "av"
    set fortisandbox-error-action {log-only | ignore}
    set fortisandbox-timeout-action {log-only | ignore}
  next
end
```

The AV engine is still used first, followed by FortiSandbox inline scanning. The FortiGate will log or ignore the file if there is an inline scanning error or timeout, and the file is allowed to pass through.

## FortiSandbox database

The *Use FortiSandbox database* setting in the Antivirus profile enables the FortiGate's antivirus engine to receive the latest malware signatures discovered by FortiSandbox that is stored inside FortiSandbox's malware database. By enabling *Use FortiSandbox database*, FortiGate uses these signatures from the malware database along with its existing antivirus signature database for scanning. The antivirus engine scan searches for the malware signature database and antivirus signature database in tandem to check for a match. Once a signature match is discovered, the FortiGate determines if the file is infected and takes action.

The malware signature database supplements the existing antivirus signature database on the FortiGate. This setting is useful if a FortiSandbox solution (either FortiGate Sandbox Cloud, FortiSandbox Cloud, or the FortiSandbox appliance) is deployed.

If you have multiple FortiGates deployed and FortiSandbox is in use, if *Use FortiSandbox database* is enabled in the Antivirus profile, it will enable all FortiGates to download the malware signature database from your FortiSandbox. This can prevent zero-day attacks discovered by the FortiSandbox. FortiSandbox can also be configured to submit its malware signature database with Fortinet Inc. Community by enabling the required *Contribute* settings under your scan profile. See [Scan Profile Advanced Tab](#) in the FortiSandbox Administration Guide for information on the scan profile.

FortiGuard labs later release the required submitted signatures in the form of Antivirus updates which can be downloaded by the FortiGates worldwide through FortiGuard updates. See [Configuring FortiGuard updates on page 2494](#).

#### To enable using the FortiSandbox database in an antivirus profile in the GUI:

1. Go to *Security Profile > AntiVirus*.
2. Select the default profile and click *Edit*.
3. Under the *APT Protection Options*, enable *Use FortiSandbox database*.
4. Click *OK* to save the changes.
5. Apply this default profile to the respective firewall policy.

#### To enable using the FortiSandbox database in an antivirus profile in the CLI:

```
config antivirus profile
  edit "default"
    set analytics-db enable
  next
end
```



It is best practice to keep the `analytics-db` enabled.

---

#### To use the antivirus profile in a firewall policy:

```
config firewall policy
  edit 1
    set name "policyid-1"
    set srcintf "lan"
    set dstintf "wan"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set ssl-ssh-profile "certificate-inspection"
    set av-profile "default"
    set nat enable
  next
end
```


Once the Antivirus profile is configured to use the FortiSandbox database and submit files to FortiSandbox, and the antivirus profile is used in a firewall policy, the sharing of malware database from the FortiSandbox to the FortiGate needs to be configured. For information on submitting files to FortiSandbox, see [Using FortiSandbox post-transfer scanning with antivirus on page 1296](#).

The configuration depends on the type of FortiSandbox in use. The table below shows key differences in configuration:

Type of FortiSandbox	Malware database sharing with the FortiGate
FortiSandbox Appliance/FortiSandbox VM (On-Premise)	Enabled using the Global network. See <a href="#">Global Network</a> in the FortiSandbox Administration Guide.
FortiSandbox Cloud (PaaS)	Enabled by default.
FortiGate Cloud Sandbox (SaaS)	Enabled by default.

## Using FortiNDR inline scanning with antivirus

FortiNDR (formerly FortiAI) can be used with antivirus profiles in proxy inspection mode (flow mode is currently not supported). FortiNDR inspects high-risk files and issues a verdict to the firewall based on how close the file features match those of malware. When enabled, FortiNDR can log, block, ignore, or monitor (allow) the file based on the verdict.

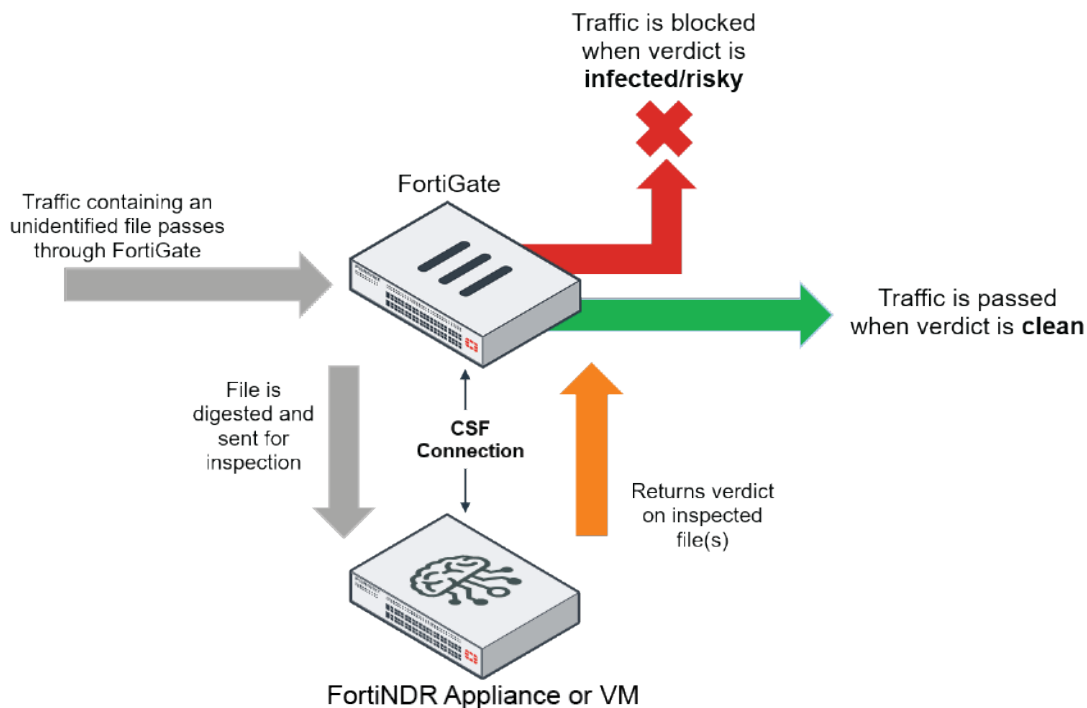

A licensed FortiNDR appliance with version 1.5.1 or later is required to use this feature.

### To configure FortiNDR inline inspection with an AV profile:

 
1. Configure FortiNDR to join a Security Fabric in FortiOS (see [Configuring FortiNDR on page 2635](#)).
2. In the FortiNDR CLI, enable inline inspection:

```
config system fortindr
    set status enable
end
```

**3. Configure an AV profile in FortiOS to use inline inspection and block detected infections:**

```
config antivirus profile
    edit "av"
        set feature-set proxy
        config http
            set fortindr block
        end
        config ftp
            set fortindr block
        end
        config imap
            set fortindr block
        end
        config pop3
            set fortindr block
        end
        config smtp
            set fortindr block
        end
        config mapi
            set fortindr block
        end
        config nntp
            set fortindr block
        end
        config cifs
            set fortindr block
        end
        config ssh
            set fortindr block
        end
    next
end
```

**4. Add the AV profile to a firewall policy. When potential infections are blocked by FortiNDR inline inspection, a replacement message appears (see [Replacement messages on page 2484](#) for more information). An infection blocked over HTTP looks similar to the following:**



## High Security Alert

You are not permitted to download the file "detected\_samples.zip" because it is infected with the virus "MSIL/Kryptik.KVH!tr".

URL [http://172.16.200.224/avengine\\_ai/detected\\_samples.zip](http://172.16.200.224/avengine_ai/detected_samples.zip)  
 Quarantined File Name [disabled]  
 Reference URL <http://www.fortinet.com/ve?vn=MSIL%2FKryptik.KVH%21tr>

## Sample log

```
date=2021-04-29 time=15:12:07 eventtime=1619734327633022960 tz="-0700" logid="0209008221"
type="utm" subtype="virus" eventtype="fortindr" level="notice" vd="vdom1" policyid=1
msg="Detected by FortiNDR." action="monitored" service="HTTP" sessionid=13312
srcip=10.1.100.221 dstip=172.16.200.224 srcport=50792 dstport=80 srcintf="wan2"
srcintfrole="wan" dstintf="wan1" dstintfrole="wan" proto=6 direction="incoming"
filename="detected_samples.zip" quarskip="File-was-not-quarantined"
virus="MSIL/Kryptik.KVH!tr" dtype="fortindr"
ref="http://www.fortinet.com/ve?vn=MSIL%2FKryptik.KVH%21tr" virusid=0
url="http://172.16.200.224/avengine_ai/detected_samples.zip" profile="av"
agent="curl/7.68.0" analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

## FortiNDR inline inspection with other AV inspection methods

The following inspection logic applies when FortiNDR inline inspection is enabled simultaneously with other AV inspection methods. The AV engine inspection and its verdict always takes precedence because of performance. The actual behavior depends on which inspected protocol is used.

### HTTP, FTP, SSH, and CIFS protocols:

1. AV engine scan; AV database and FortiSandbox database (if applicable).
  - a. FortiNDR inline inspection occurs simultaneously.
2. AV engine machine learning detection for WinPE PUPs (potentially unwanted programs).
  - a. FortiNDR inline inspection occurs simultaneously.
3. Outbreak prevention and external hash list resources.
  - a. FortiNDR inline inspection occurs simultaneously.



If any AV inspection method returns an infected verdict, the FortiNDR inspection is aborted.

**POP3, IMAP, SMTP, NNTP, and MAPI protocols:**

1. AV engine scan; AV database and FortiSandbox database (if applicable).
2. AV engine machine learning detection for WinPE PUPs (potentially unwanted programs).
  - a. FortiNDR inline inspection occurs simultaneously.
3. Outbreak prevention and external hash list resources.
  - a. FortiNDR inline inspection occurs simultaneously.



In an AV profile, use `set fortindr-error-action {log-only | block | ignore}` to configure the action to take if FortiNDR encounters an error.

**Accepted file types**

The following file types are sent to FortiNDR for inline inspection:

7Z	HTML	RTF
ARJ	JS	TAR
BZIP	LZH	VBA
BZIP2	LZW	VBS
CAB	MS Office documents (XML and non-	WinPE (EXE)
ELF	XML)	XZ
GZIP	PDF	ZIP
	RAR	

**Exempt list for files based on individual hash**

The antivirus exempt list allows users to exempt known safe files that happen to be incorrectly classified as malicious by the AV signature and AV engine scan. Users can specify file hashes in MD5, SHA1, or SHA256 for matching, which are applied at a per-VDOM level. When matched, the FortiGate ignores the AV scan verdict so that the corresponding UTM behavior defined in the AV profile is not performed.

```
config antivirus exempt-list
  edit <name>
    set hash-type {md5 | sha1 | sha256}
    set hash <string>
    set status {enable | disable}
  next
end
```



The exempt list does not apply to results from outbreak prevention, machine learning, FortiNDR, or FortiSandbox inline scans.

In this example, an antivirus exempt list is configured for the EICAR anti-malware test file. Although the antivirus profile is configured to block HTTP, the client is able to download the file.

**To configure an antivirus exempt list:****1. Configure the antivirus profile:**

```
config antivirus profile
  edit "av"
    set feature-set proxy
    config http
      set av-scan block
    end
  next
end
```

**2. Configure the antivirus exempt list:**

```
config antivirus exempt-list
  edit "test-hash"
    set comment "eicar.com"
    set hash-type md5
    set hash "44d88612fea8a8f36de82e1278abb02f"
    set status enable
  next
end
```

**3. Get a client to access <https://www.eicar.com/> and download the anti-malware test file.**

The FortiGate exempts the AV scan verdict and bypasses the file. The client can download the file and no replacement message is displayed.

## Web filter

Web filtering restricts or controls user access to web resources and can be applied to firewall policies using either policy-based or profile-based NGFW mode.

In FortiOS, there are three main components of web filtering:

- Web content filter: blocks web pages containing words or patterns that you specify.
- URL filter: uses URLs and URL patterns to block or exempt web pages from specific sources, or block malicious URLs discovered by FortiSandbox.
- FortiGuard Web Filtering service: provides many additional categories you can use to filter web traffic.

These components interact with each other to provide maximum control over what users on your network can view and protect your network from many internet content threats.

Web filters are applied in the following order:

1. URL filter
2. FortiGuard Web Filtering
3. Web content filter
4. Web script filter
5. Antivirus scanning

FortiOS includes three preloaded web filter profiles:



- *default*
- *monitor-all* (monitors and logs all URLs visited, flow-based)
- *wifi-default* (default configuration for offloading WiFi traffic)

You can customize these profiles, or you can create your own to manage network user access.



Some features of this functionality require a subscription to FortiGuard Web Filtering.

The following topics provide information about web filters:

- [URL filter on page 1315](#)
- [FortiGuard filter on page 1320](#)
- [Credential phishing prevention on page 1327](#)
- [Additional antiphishing settings on page 1329](#)
- [Usage quota on page 1332](#)
- [Web content filter on page 1335](#)
- [Advanced filters 1 on page 1338](#)
- [Advanced filters 2 on page 1341](#)
- [Web filter statistics on page 1345](#)
- [URL certificate blocklist on page 1346](#)
- [Websense Integrated Services Protocol on page 1346](#)
- [Inspecting HTTP3 traffic on page 1347](#)
- [Configuring web filter profiles with Hebrew domain names on page 1349](#)

## URL filter

The URL filter uses specific URLs with patterns containing text and regular expressions so the FortiGate can process the traffic based on the filter action (exempt, block, allow, monitor) and web pages that match the criteria. Once a URL filter is configured, it can be applied to a firewall policy.

The following filter types are available:

URL filter type	Description
<b>Simple</b>	The FortiGate tries to strictly match the full context. For example, if you enter <i>www.facebook.com</i> in the <i>URL</i> field, it only matches traffic with <i>www.facebook.com</i> . It won't match <i>facebook.com</i> or <i>message.facebook.com</i> . When the FortiGate finds a match, it performs the selected URL action.
<b>Regular expression/wildcard</b>	The FortiGate tries to match the pattern based on the rules of regular expressions or wildcards. For example, if you enter <i>*fa*</i> in the <i>URL</i> field, it matches all the content that has <i>fa</i> such as <i>www.facebook.com</i> , <i>message.facebook.com</i> , <i>fast.com</i> , and so on. When the FortiGate finds a match, it performs the selected URL action.

For more information, see the [URL Filter expressions](#) technical tip in the Knowledge Base.

The following actions are available:

URL filter action	Description
<b>Exempt</b>	The traffic is allowed to bypass the remaining FortiGuard web filters, web content filters, web script filters, antivirus scanning, and DLP proxy operations.
<b>Block</b>	The FortiGate denies or blocks attempts to access any URL that matches the URL pattern. A replacement message is displayed.
<b>Allow</b>	The traffic is passed to the remaining FortiGuard web filters, web content filters, web script filters, antivirus proxy operations, and DLP proxy operations. If the URL does not appear in the URL list, the traffic is permitted.
<b>Monitor</b>	The traffic is processed the same way as the <i>Allow</i> action. For the <i>Monitor</i> action, a log message is generated each time a matching traffic pattern is established.

The exempt URL filter action can be configured to bypass all or certain security profile operations. This setting can only be configured in the CLI.

If the action is set to exempt, use `set exempt` to select the security profile operations that exempt URLs skip.

```
config webfilter urlfilter
    edit <id>
        config entries
            edit <id>
                set action exempt
                set exempt {av web-content activex-java-cookie dlp fortiguard range-block
pass antiphish all}
            next
        end
    next
end
```

Option	Description
av	Antivirus scanning
web-content	Web filter content matching
activex-java-cookie	ActiveX, Java, and cookie filtering
dlp	DLP scanning
fortiguard	FortiGuard web filtering
range-block	Range block feature
pass	Pass single connection from all
antiphish	Antiphish credential checking
all	Exempt from all security profiles



These exempt options are not visible in the GUI. Setting the URL filter *Action* to *Exempt* will exempt URLs from all security profiles.

In the following example, a URL filter will be created to block the facebook.com URL using a wildcard.

## Configuring a URL filter in the GUI

### To create a URL filter for Facebook:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Static URL Filter* section, enable *URL Filter*.
3. Click *Create New*. The *New URL Filter* pane opens.
4. For *URL*, enter *\*facebook.com*, for *Type*, select *Wildcard*, and for *Action*, select *Block*.

New URL Filter

URL:

Type: Simple Regular Expression Wildcard

Action: Exempt Block Allow Monitor

Status: Enable Disable

OK Cancel

5. Click *OK*. The entry appears in the table.

Edit Web Filter Profile

Static URL Filter

Block invalid URLs ☐

URL Filter ☒

+ Create New Edit Delete Search

URL	Type	Action	Status
*facebook.com	Simple	Block	Enable

Block malicious URLs discovered by FortiSandbox ☐


Content Filter ☐

OK Cancel

6. Configure the other settings as needed.
7. Click *OK*.

### To apply the web filter profile to a firewall policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Edit a policy, or create a new one.
3. In the *Security Profiles* section, enable *Web Filter* and select the profile you created.
4. Set *SSL Inspection* to *certificate-inspection*.

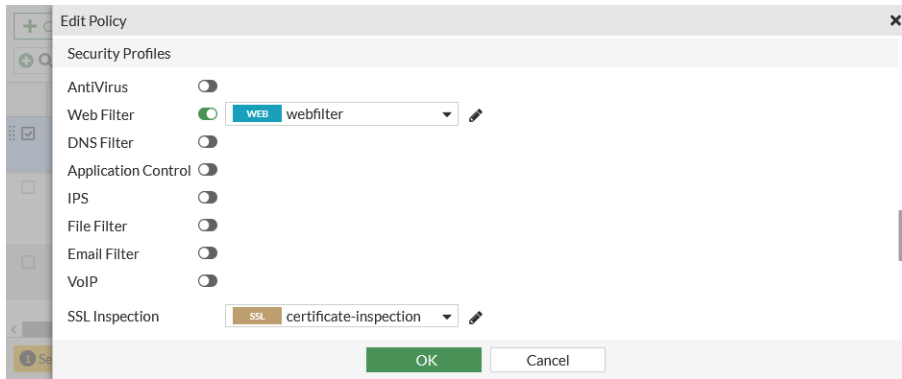

The *no-inspection* profile does not perform SSL inspection, so it should not be selected with other UTM profiles.

5. Configure the other settings as needed.
6. Click **OK**.

### Configuring a URL filter in the CLI

#### To create a URL filter for Facebook:

```
config webfilter urlfilter
  edit 1
    set name "webfilter"
    config entries
      edit 1
        set url "*facebook.com"
        set type wildcard
        set action block
      next
    end
  next
end
```

#### To apply the URL filter to a web filter profile:

```
config webfilter profile
  edit "webfilter"
    config web
      set urlfilter-table 1
    end
    config ftgd-wf
      ...
    end
  next
end
```

**To apply the web filter profile to a firewall policy:**

```

config firewall policy
  edit 1
    set name "WF"
    set srcintf "wan2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set logtraffic all
    set webfilter-profile "webfilter"
    set ssl-ssh-profile "certificate-inspection"
    set nat enable
  next
end

```

**Verifying the URL filter results**

Verify the URL filter results by going to a blocked website. For example, when you go to the Facebook website, the replacement message appears:



## FortiGuard Intrusion Prevention - Access Blocked

### Web Page Blocked

The page you have requested has been blocked because the URL is banned.

URL	https://www.facebook.com/facebook/
Description	
URL Source	Local URLfilter Block

**To customize the URL web page blocked message:**

1. Go to *System > Replacement Messages*.
2. In the *HTTP* section, select *URL Block Page* and click *Edit*.
3. Edit the HTML to customize the message. See [Replacement messages on page 2484](#) for more information.

**To check web filter logs in the GUI:**

1. Go to *Log & Report > Security Events*.
2. Click the *Web Filter* card name.

3. If there are a lot of log entries, click **Add Filter** and select **Event Type > urlfilter** to display logs generated by the URL filter.

Summary Logs						
<div> <div> <div></div> <div></div> </div> <div> <div>Web Filter</div> <div>FortiGate Cloud</div> <div>custom</div> <div>Details</div> </div> </div> <div> <div>Date/Time 2023-08-10 14:01:46 -&gt; 2023-08-10 15:01:...</div> <div>Search</div> </div>						
Date/Time	User	Source	Action	URL	Catego	Log Details
2023/08/10 15:01:24		1.1.1.2	Blocked	https://facebook.com/		<div> <div>Source</div> <div>Destination</div> <div> <div>Destination</div>157.240.3.35 <div>Destination Port</div>443 <div>Destination Country/Region</div>United States <div>Destination Interface</div>wan1 <div>Destination UUID</div>45eec070-e471-51ed-4b1c-930f37c5d882 <div>Hostname</div>facebook.com <div>URL</div>https://facebook.com/ </div> </div>
2023/08/10 15:01:23		1.1.1.2	Blocked	https://facebook.com/		
2023/08/10 15:01:21		1.1.1.2	Blocked	https://facebook.com/		
2023/08/10 15:01:08		1.1.1.2	Blocked	https://www.google.com...		
2023/08/10 15:00:09		1.1.1.2	Blocked	https://www.google.com...		
2023/08/10 14:59:31		1.1.1.2	Blocked	https://b.6sc.co/v1/beac...		
2023/08/10 14:59:27		1.1.1.2	Blocked	https://mail.google.com/...		
2023/08/10 14:59:10		1.1.1.2	Blocked	https://www.google.com...		
2023/08/10 14:58:10		1.1.1.2	Blocked	https://www.google.com...		
0% 502						

### To check web filter logs in the CLI:

```
# execute log filter category utm-webfilter
# execute log display
```

```
2: date=2023-08-11 time=12:28:05 eventtime=1691782085965056045 tz="-0700" logid="0315012544"
type="utm" subtype="webfilter" eventtype="urlfilter" level="warning" vd="root"
urlfilteridx=1 urlfilterlist="Auto-webfilter-urlfilter_7yh020s2b" policyid=1
poluuid="4a4b9d00-e471-51ed-71ec-cla3bc8f773c" policytype="policy" sessionid=4412
srcip=1.1.1.2 srcport=58642 srccountry="Australia" srcintf="internal7" srcintfrole="lan"
srcuuid="45eec070-e471-51ed-4b1c-930f37c5d882" dstip=157.240.3.35 dstport=443
dstcountry="United States" dstintf="wan1" dstintfrole="wan" dstuuid="45eec070-e471-51ed-
4b1c-930f37c5d882" proto=6 service="HTTPS" hostname="www.facebook.com" profile="webfilter"
action="blocked" reqtype="direct" url="https://www.facebook.com/" sentbyte=517 rcvbyte=0
direction="outgoing" urlsource="Local URLfilter Block" msg="URL was blocked because it is in
the URL filter list" crscore=30 craction=8 crlevel="high"
```

## FortiGuard filter

The FortiGuard filter enhances the web filter features by sorting billions of web pages into a wide range of categories that users can allow or block.

The FortiGuard Web Filtering service includes over 45 million individual website ratings that apply to more than two billion pages. When the FortiGuard filter is enabled in a web filter profile and applied to firewall policies, if a request for a web page appears in traffic controlled by one of the firewall policies, the URL is sent to the nearest FortiGuard server. The URL category or rating is returned. If the category is blocked, the FortiGate shows a replacement message in place of the requested page. If the category is not blocked, the page request is sent to the requested URL as normal.

To use this service, you must have a valid FortiGuard license.

The following actions are available:

FortiGuard web filter action	Description
<b>Allow</b>	Permit access to the sites in the category.
<b>Monitor</b>	Permit and log access to sites in the category. User quotas can be enabled for this option (see <a href="#">Usage quota on page 1332</a> ).
<b>Block</b>	Prevent access to the sites in the category. Users trying to access a blocked site see a replacement message indicating the site is blocked.
<b>Warning</b>	Display a message to the user allowing them to continue if they choose.
<b>Authenticate</b>	Require the user to authenticate with the FortiGate before allowing access to the category or category group.
<b>Disable</b>	Remove the category from the from the web filter profile. This option is only available for local or remote categories from the right-click menu.

## FortiGuard web filter categories

FortiGuard has many web filter categories, including two local categories and a special remote category. Refer to the following table for more information:

FortiGuard web filter category	Where to find more information
All URL categories	See <a href="#">Web Filter Categories</a> .
Local categories	See <a href="#">Web rating override on page 1556</a> .
Remote category	See <a href="#">Threat feeds on page 2921</a> .

The priority of categories is local category > external category > FortiGuard built-in category. If a URL is configured as a local category, it only follows the behavior of the local category and not the external or FortiGuard built-in category.

## Blocking a web category

The following example shows how to block a website based on its category. The Information Technology category (category 52) will be blocked.

### To block a category in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *FortiGuard category based filter* section, select *Information Technology*, then click *Block*.

49% 95

Name	Action
General Organizations	Allow
Business	Allow
Information and Computer Security	Allow
Government and Legal Organizations	Allow
Information Technology	Block
Armed Forces	Allow
Web Hosting	Allow
Secure Websites	Allow
Web-based Applications	Allow

3. Configure the remaining settings as needed.
4. Click **OK**.

### To block a category in the CLI:

```
config webfilter profile
  edit "webfilter"
    config ftgd-wf
      unset options
      config filters
        edit 1
          set category 52
          set action block
        next
      end
    end
  next
end
```

### To verify that the category is blocked:

1. Go to a website that belongs to the blocked category, such as [www.fortinet.com](https://www.fortinet.com).  
The page should be blocked and display a replacement message.



### FortiGuard Intrusion Prevention - Access Blocked

#### Web Page Blocked

You have tried to access a web page that is in violation of your Internet usage policy

Category Information Technology  
URL <https://www.fortinet.com/>

To have the rating of this web page re-evaluated [please click here](#)



### To view the log of a blocked website in the GUI:

1. Go to *Log & Report > Security Events*.
2. Click the *Web Filter* card name.
3. Select an entry with *blocked* in the *Action* column and click *Details*.

Add Filter						Details
Date/Time	User	Source	Action	URL	Category Description	Log Details
3 minutes ago		1.1.1.2	blocked	https://spocs.getpocket.com/spocs	Information Technology	<div>General</div> <div>Absolute Date/Time 2023/08/08 16:11:46</div> <div>Time 16:11:46</div> <div>Session ID 1048</div> <div>Virtual Domain root</div> <div>Source</div> <div>Destination</div> <div>IP 44.240.173.227</div> <div>Port 443</div> <div>Country/Region United States</div> <div>Destination Interface wan1</div> <div>Destination UUID 45eec070-e471-51ed-4b1c-930f37c5d882</div> <div>Hostname www.fortinet.com</div> <div>URL https://www.fortinet.com/</div>
3 minutes ago		1.1.1.2	blocked	https://getpocket.cdn.mozilla.net/v3/firefox/global-re...	Information Technology	
3 minutes ago		1.1.1.2	blocked	https://www.google-analytics.com/g/collect?v=2&amp...	Information Technology	
3 minutes ago		1.1.1.2	blocked	https://www.fortinet.com/	Information Technology	
4 minutes ago		1.1.1.2	blocked	http://detectportal.firefox.com/canonical.html	Information Technology	
4 minutes ago		1.1.1.2	blocked	http://detectportal.firefox.com/canonical.html	Information Technology	
4 minutes ago		1.1.1.2	blocked	http://detectportal.firefox.com/canonical.html	Information Technology	
4 minutes ago		1.1.1.2	blocked	http://detectportal.firefox.com/canonical.html	Information Technology	
4 minutes ago		1.1.1.2	blocked	http://detectportal.firefox.com/canonical.html	Information Technology	
5 minutes ago		1.1.1.2	blocked	https://gw.dr1.linkedin.ori.li/event	Information Technology	
5 minutes ago		1.1.1.2	blocked	https://dx.mountain.com/spx?dxver=4.0.0&shaid...	Information Technology	

### To view the log of a blocked website in the CLI:

```
# execute log filter category utm-webfilter
# execute log display
```

```
4: date=2023-08-08 time=16:11:46 eventtime=1691536306310528927 tz="-0700" logid="0316013056"
type="utm" subtype="webfilter" eventtype="ftgd_blk" level="warning" vd="root" policyid=1
poluid="4a4b9d00-e471-51ed-71ec-c1a3bc8f773c" policytype="policy" sessionid=1048
srcip=1.1.1.2 srcport=43218 srccountry="Australia" srcintf="internal7" srcintfrole="lan"
srcuid="45eec070-e471-51ed-4b1c-930f37c5d882" dstip=44.240.173.227 dstport=443
dstcountry="United States" dstintf="wan1" dstintfrole="wan" dstuid="45eec070-e471-51ed-
4b1c-930f37c5d882" proto=6 service="HTTPS" hostname="www.fortinet.com" profile="default"
action="blocked" reqtype="direct" url="https://www.fortinet.com/" sentbyte=684 rcvdbyte=0
direction="outgoing" msg="URL belongs to a denied category in policy" method="domain" cat=52
catdesc="Information Technology"
```

## Allowing users to override blocked categories

There is an option to allow users with valid credentials to override blocked categories.

### To allow users to override blocked categories in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. Enable *Allow users to override blocked categories*.
3. Enter information in the following fields:
  - *Groups that can override*
  - *Profile name*
  - *Switch applies to*
  - *Switch Duration*
4. Configure the other settings as needed.

5. Click **OK**.

### To allow users to override blocked categories in the CLI:

```
config webfilter profile
    edit "webfilter"
        set ovr-perm bannedword-override urlfilter-override fortiguard-wf-override
contenttype-check-override
        config override
            set ovr-user-group "radius_group"
            set profile "webfilter"
        end
        config ftgd-wf
            unset options
        end
    next
end
```

## Issuing a warning on a web category

The following example shows how to issue a warning when a user visits a website in a specific category (Information Technology, category 52).

### To configure a warning for a category in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *FortiGuard category based filter* section, select *Information Technology*, then click *Warning*.
3. Set the *Warning Interval*, then click **OK**.

The warning interval is the amount of time until the warning appears again after the user proceeds past it.

4. Configure the remaining settings as needed.
5. Click **OK**.

**To configure a warning for a category in the CLI:**

```
config webfilter profile
  edit "webfilter"
    config ftgd-wf
      unset options
      config filters
        edit 1
          set category 52
          set action warning
        next
      end
    end
  next
end
```

**To verify that the warning works:**

1. Go to a website that belongs to the category, such as [www.fortinet.com](http://www.fortinet.com).
2. On the warning page, click *Proceed* or *Go Back*.

**FortiGuard Intrusion Prevention -  
Access Blocked****Web Page Blocked**

You have tried to access a web page which is in violation of your Internet usage policy.

Category Information Technology

URL <https://www.fortinet.com/>

To have the rating of this web page re-evaluated [please click here](#)

Proceed

Go Back

## Authenticating a web category

The following example shows how to authenticate a website based on its category (Information Technology, category 52).

**To authenticate a category in the GUI:**

1. Go to *Security Profiles > Web Filter* and edit or create a new web filter profile.
2. In the *FortiGuard category based filter* section, select *Information Technology*, then click *Authenticate*.
3. Set the *Warning Interval* and select one or more user groups, then click *OK*.
4. Configure the remaining settings as needed.
5. Click *OK*.

**To authenticate a category in the CLI:**

```
config webfilter profile
  edit "webfilter"
    config ftgd-wf
      unset options
      config filters
        edit 1
          set category 52
          set action authenticate
          set auth-usr-grp "local_group"
        next
      end
    end
  next
end
```

**To verify that you have configured authentication:**

1. Go to a website that belongs to the category, such as [www.fortinet.com](http://www.fortinet.com).
2. On the warning page, click *Proceed*.

**FortiGuard Intrusion Prevention -  
Access Blocked****Web Page Blocked**

You have tried to access a web page which is in violation of your Internet usage policy

Category Information Technology

URL <https://www.fortinet.com/>

To have the rating of this web page re-evaluated [please click here](#)

[Proceed](#)

[Go Back](#)

3. Enter the username and password for the configured user group, then click *Continue*.

**FortiGuard Intrusion Prevention -  
Access Blocked****Web Filter Block Override**

Please contact your administrator to gain access to the web page.

Username

Password:

[Continue](#)

## Customizing the replacement message page

When the category action is *Block*, *Warning*, or *Authenticate*, you can customize the replacement message page that a user sees.

### To customize the replacement message page:

1. Go to *Security Profiles > Web Filter* and edit or create a new web filter profile.
2. In the *FortiGuard category based filter* section, right-click on a category and select *Customize*.
3. Select a *Replacement Message Group*. See [Replacement message groups on page 2488](#) for details.
4. Optionally, click *Edit FortiGuard Block Page* or *Edit FortiGuard Warning Page* to make modifications.
5. Click *Save*.
6. Configure the remaining settings as needed.
7. Click *OK*.

## Credential phishing prevention

When credential phishing prevention is enabled, the FortiGate scans for corporate credentials submitted to external websites and compares them to sensitive credentials stored in the corporate domain controller. Based on the configured antiphishing rules in proxy mode web filter profiles, the FortiGate will block the URL or alert the user if the credentials match ones that are stored on the corporate domain controller.

- The corporate domain controller must be configured in the `domain controller`.
- Credentials can be matched based on `sAMAccountName`, user principal name (UPN), or down-level logon name.
- The antiphishing profile defines the corporate domain controller, antiphishing check option, default action if no rules match, antiphishing status, and so on.
- Inspection entries in the profile define what action occurs when the submission request matches the specified FortiGuard categories.
- The profile scans for pre-defined and custom username and password fields in the HTTP request, such as `username`, `auth`, and `password`. You can evaluate custom fields by configuring custom patterns.
- The URL filter defines individual URLs that the antiphish action (block or log) is applied to when the URL submission request matches.



Web-based URL filter actions and FortiGuard category-based filtering have higher priority than antiphishing URL filter actions and FortiGuard filtering:

- If a request is blocked by the web-based URL filter or FortiGuard filter, there is no further antiphishing scanning. Antiphishing scanning only happens after the web-based URL filter and FortiGuard filters allow the traffic.
- If a submission matches an entry in the URL filter table that has an antiphishing action, the defined action is taken. No further FortiGuard category-based rules are applied.
- Like firewall rules, the URL filter table and FortiGuard category-based antiphishing rules use a top-down priority. The rule that matches first is the one that is used.

In this example, URLs that match FortiGuard category 37 (social networking) will be blocked and other categories will be logged.

**To configure credential phishing prevention:****1. Configure the corporate domain controller:**

```
config user domain-controller
  edit "win2016"
    set hostname "win2016"
    set domain-name "corpserver.local"
    set username "Administrator"
    set password *****
    set ip <server_ip>
  next
end
```

---



The hostname and the domain-name are case sensitive.

---

**2. Configure the antiphishing profile, which includes the FortiGuard category rule:**

```
config webfilter profile
  edit <profile-name>
    set feature-set proxy
    ...
    config web
      ...
    end
    config antiphish
      set status enable
      set domain-controller "win2016"
      set default-action block
      set check-uri enable
      set check-basic-auth enable
      set max-body-len 65536
      config inspection-entries
        edit "inspect-37"
          set fortiguard-category 37
          set action block
        next
        edit "inspect-others"
          set fortiguard-category all
          set action log
        next
      end
      config custom-patterns
        edit "customer-name"
          set category username
        next
        edit "customer-passwd"
          set category password
        next
      end
    end
    ...
    set web-antiphishing-log enable
```

```
    next
end
```

- `check-uri` enables support for scanning HTTP GET URI parameters.
- `check-basic-auth` enables support for scanning the HTTP basic authentication field.

### 3. Configure the URL filter to scan specific URLs.

The antiphish action is added to the URL filter table entry, and the URL filter is applied to the web filter profile:

```
config webfilter urlfilter
    edit 1
        set name "antiphish-table"
        config entries
            edit 1
                set url "www.example.com"
                set type simple
                set antiphish-action block
                set status enable
                set referrer-host ''
            next
        end
    next
end
config webfilter profile
    edit "<profile-name>"
        config web
            set urlfilter-table 1
        end
        ...
    next
end
```

### 4. Optionally, define custom patterns to scan fields other than the built-in username and password keywords:

```
config webfilter profile
    edit "<profile-name>"
        config custom-patterns
            edit "customer-name"
                set category username
            next
            edit "customer-passwd"
                set category password
            next
        end
    end
next
end
```

## Additional antiphishing settings

The following settings are available for antiphishing:

- [Enable DNS service lookup in the domain controller so that the domain controller IP does not need to be configured.](#)  
The DNS server will resolve the domain controller IP.
- [Specify a source IP or port for the fetching domain controller.](#)
- [Use an LDAP server as a credential source](#) (only the OpenLDAP server is supported).

- Block or log valid usernames regardless of password match.
- Use literal custom patterns type for username and password.
- Active Directory Lightweight Directory Services (AD LDS) support

## Configuration examples

### To enable DNS service lookup:

```
config user domain-controller
    edit "win2016"
        set ad-mode ds
        set dns-srv-lookup enable
        set hostname "win2016"
        set username "replicate"
        set password *****
        set domain-name "SMB2016.LAB"
    next
end
```

### To specify the source IP and port for the fetching domain controller:

```
config user domain-controller
    edit "win2016"
        set ad-mode ds
        set hostname "win2016"
        set username "replicate"
        set password *****
        set ip-address 172.18.52.188
        set source-ip-address 172.16.100.1
        set source-port 2000
        set domain-name "SMB2016.LAB"

    next
end
```

### To use an LDAP server as a credential store:

#### 1. Configure the LDAP server:

```
config user ldap
    edit "openldap"
        set server "172.18.60.214"
        set cnid "cn"
        set dn "dc=qafsso,dc=com"
        set type regular
        set username "cn=Manager,dc=qafsso,dc=com"
        set password *****
        set antiphish enable
        set password-attr "userPassword"
    next
end
```

#### 2. Configure the web filter profile:



```
config webfilter profile
  edit "webfilter"
    set feature-set proxy
    config ftgd-wf
      unset options
      config filters
        edit 1
          set action block
        next
      end
    end
    config antiphish
      set status enable
      config inspection-entries
        edit "cat34"
          set fortiguard-category 34
          set action block
        next
      end
      set authentication ldap
      set ldap "openldap"
    end
    set log-all-url enable
  next
end
```

**To configure username-only credential matching:**

```
config webfilter profile
  edit "webfilter"
    set feature-set proxy
    config ftgd-wf
      unset options
      ...
    end
    config antiphish
      set status enable
      set check-username-only enable
      config inspection-entries
        edit "cat34"
          set fortiguard-category 34
          set action block
        next
      end
      set domain-controller "win2016"
    end
    set log-all-url enable
  next
end
```

**To configure different custom pattern types for usernames and passwords:**

```
config webfilter profile
  edit "webfilter"
    set feature-set proxy
    config ftgd-wf
```

```
        unset options
        ...
    end
    config antiphish
        set status enable
        config inspection-entries
            edit "cat34"
                set fortiguard-category 34
                set action block
            next
        end
        config custom-patterns
            edit "qwer"
                set type literal
            next
            edit "[0-6]Dat*"
            next
            edit "dauw9"
                set category password
                set type literal
            next
            edit "[0-5]foo[1-4]"
                set category password
            next
        end
        set domain-controller "win2016"
    end
    set log-all-url enable
next
end
```

In this example, the `qwer` and `dauw9` entries use the literal type, while `[0-6]Dat*` and `[0-5]foo[1-4]` use the default regex type.

### To configure Active Directory in LDS mode:

```
config user domain-controller
    edit "win2016adlds"
        set hostname "win2016adlds"
        set username "foo"
        set password *****
        set ip-address 192.168.10.9
        set domain-name "adlds.local"
        set ad-mode lds
        set adlds-dn "CN=adlds1part1,DC=ADLDS,DC=COM"
        set adlds-ip-address 192.168.10.9
        set adlds-port 3890
    next
end
```

## Usage quota

In addition to using category and classification blocks and overrides to limit user access to URLs, you can set a daily quota by category, category group, or classification. Quotas allow access for a specified length of time or a specific

bandwidth, and are calculated separately for each user. Quotas are reset daily at midnight.

Quotas can be set for the *Monitor*, *Warning*, or *Authenticate* actions. Once the quota is reached, the traffic is blocked and the replacement message page displays.



Quotas are only available in proxy-based inspection mode.

## Configuring a quota

The following example shows how to set a time quota for the education category (category 30).

### To configure a quota in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. For *Feature set*, select *Proxy-based*.
3. In the *FortiGuard category based filter* section, scroll to the *General Interest - Personal* and click the + to expand the section.
4. Select *Education*, then click *Monitor*.

Edit Web Filter Profile

FortiGuard Category Based Filter

Pre-configured filters: Custom G PG-13 R

Allow Monitor Block Warning Authenticate

Name	Action
Brokerage and Trading	Allow
Games	Allow
Web-based Email	Allow
Entertainment	Allow
Arts and Culture	Allow
Education	Monitor
Health and Wellness	Allow
Job Search	Allow
Medicine	Allow
News and Media	Allow

20% 95

OK Cancel

5. In the *Category Usage Quota* section, click *Create New*.  
The *New/Edit Quota* pane opens.
6. In the *Category* field, select *Education*.
7. For the *Quota Type*, select *Time* and set the *Total quota* to 5 minutes.

Edit New/Edit Quota

Category: Education

Quota Type: Time Traffic

Total quota: 0 hour(s) 5 minute(s) 0 second(s)

OK Cancel

8. Click *OK*. The entry appears in the table.

Category Usage Quota

+ Create New Edit Delete

Category	Total quota
Education	5 minute(s)

OK Cancel

9. Configure the other settings as needed.
10. Click **OK**.

### To configure a quota in the CLI:

```
config webfilter profile
  edit "webfilter"
    config ftgd-wf
      unset options
      config filters
        edit 1
          set category 30
        next
      end
    config quota
      edit 1
        set category 30
        set type time
        set duration 5m
      next
    end
  end
next
end
```

### To verify the quota usage:

1. Go to a website that belongs to the education category, such <https://www.harvard.edu/>. You can view websites in that category at the moment.
2. In FortiOS, go to **Dashboard > FortiGuard Quota Monitor** to check the used and remaining time.

FortiGuard Quota

Reset Quota View Search

User	Used Traffic
1.1.1.2	0 B

Category Usage Quota

Profile

User 1.1.1.2

Web Filter Profile webfilter

Category	Used Quota	Remaining
Education	3 seconds	4 minutes and 57 seconds

Close

- When the quota reaches its limit, traffic is blocked and the replacement page displays.



## FortiGuard Intrusion Prevention - Access Blocked

### Web Page Blocked

Your daily quota for this category of web page has expired.

Category Education

URL <https://www.harvard.edu/>

To have the rating of this web page re-evaluated [please click here](#).

## Web content filter

You can control access to web content by blocking webpages containing specific words or patterns. This helps to prevent access to pages with questionable material. You can specify words, phrases, patterns, wildcards, and regular expressions to match content on webpages. You can use multiple web content filter lists and select the best one for each web filter profile.

The maximum number of web content patterns in a list depends on the model of the device. To find the maximum number of web content patterns allowed for a device, go to the Maximum Values Table (<https://docs.fortinet.com/max-value-table>). Select the software version and models, and click *Go*. Maximum values are displayed. In the *Search* box, enter *webfilter.content:entries* to find the maximum number.

When configuring a web content filter list, the following patterns are available:

Web content pattern type	Description
<b>Wildcard</b>	Use this setting to block or exempt one word or text strings of up to 80 characters. You can also use wildcard symbols such as ? or * to represent one or more characters. For example, a wildcard expression <i>forti*.com</i> matches <i>fortinet.com</i> and <i>fortiguard.com</i> . The * represents any character appearing any number of times.
<b>Regular expression</b>	Use this setting to block or exempt patterns of regular expressions that use some of the same symbols as wildcard expressions, but for different purposes. In regular expressions, * represents the character before the symbol. For example, <i>forti*.com</i> matches <i>fortiii.com</i> but not <i>fortinet.com</i> or <i>fortiice.com</i> . In this case, the symbol * represents <i>i</i> appearing any number of times.

## Content evaluation

The web content filter scans the content of every webpage that is accepted by a firewall policy. The system administrator can specify banned words and phrases and attach a numerical value (or score) to the importance of those words and

phrases. When the web content filter scan detects banned content, it adds the scores of banned words and phrases found on that page. If the sum is higher than a threshold set in the web filter profile, the FortiGate blocks the page.

The default score for web content filter is 10 and the default threshold is 10. This means that by default, a webpage is blocked by a single match. These settings can only be configured in the CLI.

Banned words or phrases are evaluated according to the following rules:

- The score for each word or phrase is counted only once, even if that word or phrase appears many times in the webpage.
- The score for any word in a phrase without quotation marks is counted.
- The score for a phrase in quotation marks is counted only if it appears exactly as written.

The following table is an example of how rules are applied to the webpage contents. For example, a webpage contains only this sentence:

*The score for each word or phrase is counted only once, even if that word or phrase appears many times in the webpage.*

Banned pattern	Assigned score	Score added to the sum for the entire page	Threshold score	Comment
word	20	20	20	Appears twice but is only counted once. The webpage is blocked.
word phrase	20	40	20	Each word appears twice but is only counted once, giving a total score of 40. The webpage is blocked.
word sentence	20	20	20	<i>word</i> appears twice and <i>sentence</i> does not appear, but since any word in a phrase without quotation marks is counted, the score for this pattern is 20. The webpage is blocked.
"word sentence"	20	0	20	This phrase does not appear exactly as written. The webpage is allowed.
"word or phrase"	20	20	20	This phrase appears twice but is only counted once. The webpage is blocked.

#### To configure a web content filter in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Static URL Filter* section, enable *Content Filter*.
3. Click *Create New*. The *New Web Content Filter* pane opens.
4. Configure the following settings:

Pattern Type	Regular Expression
Pattern	fortinet
Language	Western

Action	Block
Status	Enable

New Web Content Filter

Pattern Type

Wildcard Regular Expression

Pattern

fortinet

Language

Western

Action

Block Exempt

Status

Enable Disable

OK

Cancel

5. Click OK. The entry appears in the table.

Edit Web Filter Profile

Static URL Filter

Block invalid URLs

☐

URL Filter

☐

Block malicious URLs discovered by FortiSandbox

☐

Content Filter

☒

+ Create New

Edit

Delete

Pattern Type	Pattern	Language	Action	Status
Regular Expressi...	fortinet	Western	Block	Enable

OK

Cancel

6. Configure the other settings as needed.

7. Click OK.

### To configure a web content filter in the CLI:

1. Create the content (banned word) table:

```
config webfilter content
  edit 1
    set name "webfilter"
    config entries
      edit "fortinet"
        set pattern-type regexp
        set status enable
        set lang western
        set score 10
        set action block
      next
    next
  end
end
```


2. Apply the content table to the web filter profile:

```
config webfilter profile
  edit "webfilter"
    config web
```

```
        set bword-threshold 10
        set bword-table 1
    end
    config ftgd-wf
        unset options
    end
next
end
```

### To verify the content filter:

1. Go to a website with the word *fortinet*, such as [www.fortinet.com](http://www.fortinet.com).  
The website is blocked and a replacement page displays:

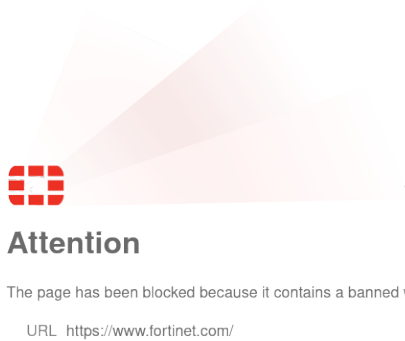

## Advanced filters 1

This topic gives examples of the following advanced filter features:

- [Block malicious URLs discovered by FortiSandbox on page 1338](#)
- [Allow websites when a rating error occurs on page 1339](#)
- [Rate URLs by domain and IP address on page 1339](#)
- [Block invalid URLs on page 1340](#)

### Block malicious URLs discovered by FortiSandbox


This setting blocks malicious URLs that FortiSandbox finds. Your FortiGate must be connected to a registered FortiSandbox.

For information on configuring FortiSandbox, see [Using FortiSandbox post-transfer scanning with antivirus on page 1296](#) and [Using FortiSandbox inline scanning with antivirus on page 1298](#).

### To block malicious URLs discovered by FortiSandbox in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Static URL Filter* section, enable *Block malicious URLs discovered by FortiSandbox*.



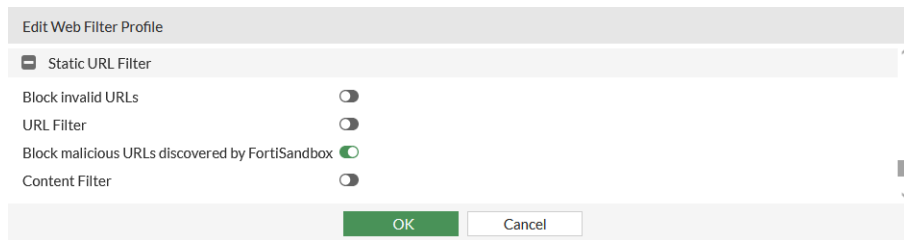

3. Click **OK**.

### To block malicious URLs discovered by FortiSandbox in the CLI:

```
config webfilter profile
  edit "webfilter"
    config web
      set blocklist enable
    end
  next
end
```

## Allow websites when a rating error occurs

If you do not have a FortiGuard license, but you have enabled services that need a FortiGuard license (such as FortiGuard filter), then you will get a rating error message.

Use this setting to allow access to websites that return a rating error from the FortiGuard Web Filter service.

### To allow websites with rating errors in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Rating Options* section, enable *Allow websites when a rating error occurs*.
3. Click **OK**.

### To allow websites with rating errors in the CLI:

```
config webfilter profile
  edit "webfilter"
    config ftgd-wf
      set options error-allow
    end
  next
end
```

## Rate URLs by domain and IP address

If you enable this setting, in addition to only sending domain information to FortiGuard for rating, the FortiGate always sends both the URL domain name and the TCP/IP packet's IP address (except for private IP addresses) to FortiGuard for the rating.

The FortiGuard server might return a different category of IP address and URL domain. If they are different, the FortiGate uses the rating weight of the IP address or domain name to determine the rating result and decision. This rating weight is hard-coded in FortiOS.

For example, if we use a spoof IP of Google as `www.irs.gov`, the FortiGate will send both the IP address and domain name to FortiGuard to get the rating. We get two different ratings: one is the search engine and portals that belong to the Google IP, the second is the government and legal organizations that belongs to `www.irs.gov`. Because the search engine and portals rating has a higher weight than government and legal organizations, the traffic is rated as search engine and portals.

### To rate URLs by domain and IP address in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Rating Options* section, enable *Rate URLs by domain and IP address*.
3. Click *OK*.

### To rate URLs by domain and IP address in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            set options rate-server-ip
        end
    next
end
```


## Block invalid URLs

Use this setting to block websites when their SSL certificate CN field does not contain a valid domain name.

This option also blocks URLs that contains spaces. If there is a space in the URL, it must be written as `%20` in the URL path.

### To block invalid URLs in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Static URL Filter* section, enable *Block invalid URLs*.

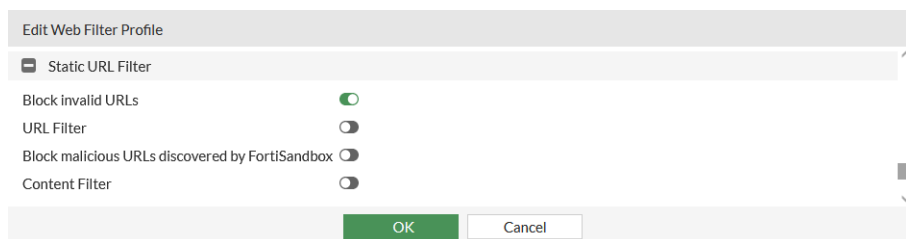

3. Click *OK*.

### To block invalid URLs in the CLI:

```
config webfilter profile
    edit "webfilter"
        set options block-invalid-url
    next
end
```

## Advanced filters 2

This topic gives examples of the following advanced filter features:

- [Safe search on page 1341](#)
- [Restrict YouTube access on page 1342](#)
- [Log all search keywords on page 1343](#)
- [Restrict Google account usage to specific domains on page 1343](#)
- [HTTP POST action on page 1344](#)
- [Remove Java applets, ActiveX, and cookies on page 1344](#)



These advanced filters are only available in proxy-based inspection mode.

### Safe search


This setting applies to popular search sites and prevents explicit websites and images from appearing in search results.

The supported search sites are:

- Google
- Yahoo
- Bing
- Yandex

#### To enable safe search in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Search Engines* section, enable *Enforce 'Safe Search' on Google, Yahoo!, Bing, Yandex*.

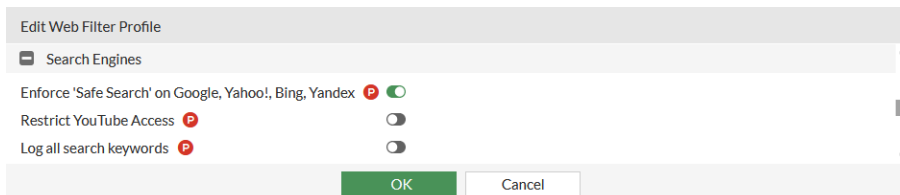

3. Click *OK*.

#### To enable safe search in the CLI:

```
config webfilter profile
  edit "webfilter"
    config web
      set safe-search url header
    end
  next
end
```


## Restrict YouTube access

The *Restrict YouTube access* setting in the video filter profile adds the HTTP header `YouTube-Restrict: Strict` or `YouTube-Restrict: Moderate` into the HTTP request when enabled. When YouTube reads this header, it applies the appropriate content restriction based on the selected mode. YouTube Restricted Mode is an optional setting that filters out potentially mature videos while leaving a large number of videos still available (see [Restrict YouTube content available to users](#) and [Manage your organization's YouTube settings](#) for more information). Google defines the restricted YouTube access modes as follows:

- **Strict Restricted YouTube access:** this setting is the most restrictive. Strict Restricted Mode does not block all videos, but works as a filter to screen out many videos based on an automated system, while leaving some videos still available for viewing.
- **Moderate Restricted YouTube access:** this setting is similar to Strict Restricted Mode but makes a much larger collection of videos available.

### To restrict YouTube access in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Search Engines* section, enable *Restrict YouTube Access* and select either *Strict* or *Moderate*.

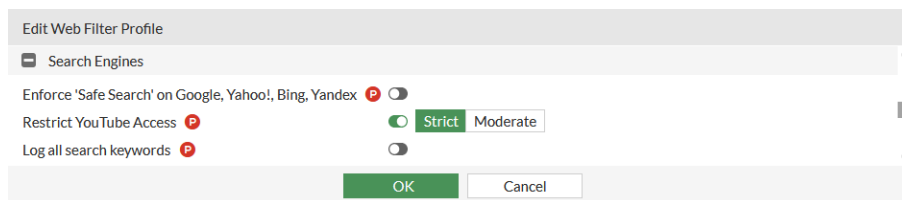

3. Click *OK*.

### To restrict YouTube access in the CLI:

```
config webfilter profile
  edit <name>
    config web
      set youtube-restrict {none | strict | moderate}
    end
  next
end
```

## Vimeo access

The file filter profile includes a setting to restrict Vimeo access, which can only be configured in the CLI.

### To restrict Vimeo access:

```
config webfilter profile
  edit <name>
    config web
      set vimeo-restrict {7 | 134}
    end
  next
end
```

```
vimeo-restrict {7 | 134}
```

Set the Vimeo restriction:

- 7: do not show mature content
- 134: do not show unrated and mature content

## Log all search keywords

Use this setting to log all search phrases.

### To enable logging search keywords in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Search Engines* section, enable *Log all search keywords*.
3. Click *OK*.

### To enable logging search keywords in the CLI:

```
config webfilter profile
  edit "webfilter"
    config web
      set log-search enable
    end
  next
end
```

## Restrict Google account usage to specific domains

Use this setting to block access to certain Google accounts and services, while allowing access to accounts with domains in the exception list.

### To enable Google account restriction:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Proxy Options* section, enable *Restrict Google account usage to specific domains*.
3. Click the + and enter the domains that Google can access, such as *www.fortinet.com*.

Edit Web Filter Profile

Proxy Options

Restrict Google account usage to specific domains P ON

Domain 1  +

HTTP POST Action Allow Block

Remove Java Applets P

Remove ActiveX P

Remove Cookies

OK Cancel

4. Click *OK*.

When you try to use Google services like Gmail, only traffic from the domain of *www.fortinet.com* can go through. Traffic from other domains is blocked.

## HTTP POST action

Use this setting to select the action to take with HTTP POST traffic. HTTP POST is the command used by the browser when you send information, such as a completed form or a file you are uploading to a web server. The action options are allow or block. The default is allow.

### To configure HTTP POST in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile.
2. In the *Proxy Options* section, for *HTTP POST Action*, select *Allow* or *Block*.
3. Click *OK*.

### To configure HTTP POST in the CLI:


```
config webfilter profile
  edit "webfilter"
    set post-action {normal | block}
    config ftgd-wf
      unset options
    end
  next
end
```

## Remove Java applets, ActiveX, and cookies

Web filter profiles have settings to filter Java applets, ActiveX, and cookies from web traffic. Note that if these filters are enabled, websites using Java applets, ActiveX, and cookies might not function properly.

### To enable these filters in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*, or edit an existing profile. and go to the *Proxy Options* section.
2. In the *Proxy Options* section, enabled the filters you want to use: *Remove Java Applets*, *Remove ActiveX*, or *Remove Cookies*.

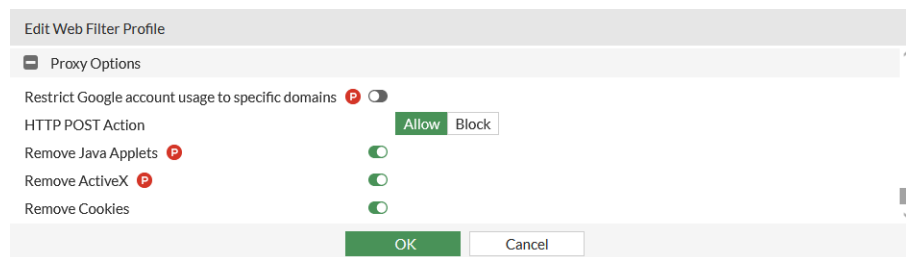

### To enable these filters in the CLI:

```
config webfilter profile
  edit "webfilter"
    set options {activexfilter cookiefilter javafilter}
    config ftgd-wf
      unset options
    end
  next
end
```

```
        end
    next
end
```

## Web filter statistics

FortiOS provides diagnostics commands to view web filter statistics reports, which are either proxy-based or flow-based. The commands are available in both VDOM and global command lines.

### Proxy-based web filter statistics report

Use the `diagnose wad filter vd {<VDOM> | global}` command to filter for per-VDOM or global statistics reports.

In the following example, there are two VDOMs (root and vdom1) using proxy-based policies that have web filter profiles enabled.

#### To view per-VDOM statistics reports:

```
(global) # diagnose wad filter vd root
Drop_unknown_session is enabled.

(global) # diagnose wad stats filter list
filtering of vdom root
  dlp                = 0
  content-type       = 0
  urls:
    examined = 6
    allowed  = 3
    blocked  = 0
    logged   = 0
    overridden = 0

(global) # diagnose wad filter vd vdom1
(global) # diagnose wad stats filter list
filtering of vdom vdom1
  dlp                = 0
  content-type       = 0
  urls:
    examined = 13
    allowed  = 2
    blocked  = 9
    logged   = 8
    overridden = 0

(global) # diagnose wad filter vd ALL
(global) # diagnose wad stats filter list
filtering of all accessible vdoms
  dlp                = 0
  content-type       = 0
  urls:
    examined = 19
    allowed  = 5
    blocked  = 9
```

```
logged = 8
overridden = 0
```

### Flow-based web filter statistics report

Use the `diagnose webfilter stats list {<VDOM> | global}` command to check the flow-based web filter statistics.

In the following example, the VDOM is using flow-based policies that have web filter profiles enabled.

#### To view web filter statistics:

```
# diagnose webfilter stats list root
Proxy/flow URL filter stats:
request:    9474
blocked:    8606
allowed:    868
overridden:0
logged:     8606
pending:    0
```

### URL certificate blocklist

As increasing numbers of malware have started to use SSL to attempt to bypass IPS, maintaining a fingerprint-based certificate blocklist is useful to block botnet communication that relies on SSL.

This feature adds a dynamic package that is distributed by FortiGuard and is part of the Web Filtering service. It is enabled by default for SSL/SSH profiles, and can be configured using the following CLI commands:

```
config vdom
  edit <vdom>
    config firewall ssl-ssh-profile
      edit "certificate-inspection"
        set block-blocklisted-certificates enable
      next
      edit "deep-inspection"
        set block-blocklisted-certificates enable
      next
    end
  next
end
```

### Websense Integrated Services Protocol

Websense Integrated Services Protocol (WISP) servers can be used server, which allows the FortiGate to send traffic to the third-party web filtering service for rating and approval checking.

When WISP is enabled, the FortiGate maintains a pool of TCP connections to the WISP server. The TCP connections are used to forward HTTP request information and log information to the WISP server and receive policy decisions.

When a WISP server is used in a web filter profile, in flow or proxy mode, the following web filter scanning priority sequence is used:



1. Local URL filter
2. Websense web filtering service
3. FortiGuard web filtering service

The following example uses a WISP server configured in a flow mode web filter profile.

**To use a WISP server in flow mode:**

1. Configure the WISP servers:

```
config web-proxy wisp
  edit "wisp1"
    set server-ip 10.2.3.4
  next
  edit "wisp2"
    set server-ip 10.2.3.5
  next
  edit "wisp3"
    set server-ip 192.168.1.2
  next
  edit "wisp4"
    set server-ip 192.168.3.4
  next
end
```

2. Configure the web filter profile:

```
config webfilter profile
  edit "webfilter_flowbase"
    set feature-set flow
    config ftgd-wf
      unset options
      config filters
        edit 64
          set category 64
          set action block
        next
      end
    end
    set wisp enable
    set wisp-servers "wisp1" "wisp2"
    set wisp-algorithm {primary-secondary | round-robin | auto-learning}
    set log-all-url enable
  next
end
```

## Inspecting HTTP3 traffic

HTTP/3 traffic can be inspected on the FortiGate in flow mode inspection.




When using Chrome, the browser may switch the HTTP/3 connection to HTTP/2 when deep inspection is applied, due to its sensitivity to delays caused by deep inspection.

---

## Example

In this example, a web filter profile is created to block the words *Welcome to aioquic*, which appear in a website that uses HTTP/3.

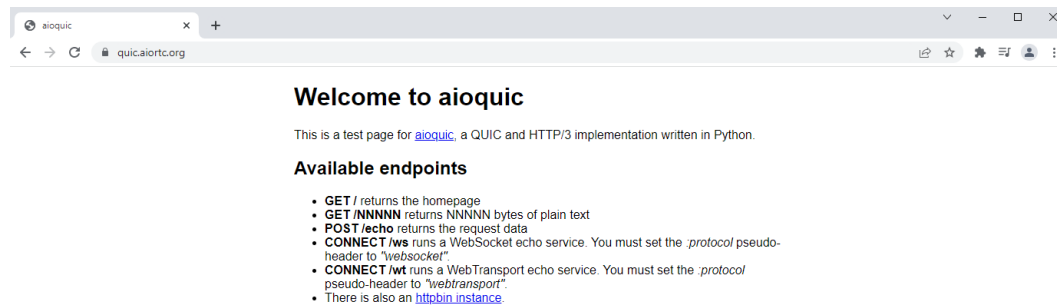

### To block content in HTTP/3 traffic:

#### 1. Configure the web filter banned word table:

```
config webfilter content
  edit 1
    set name "aioquic"
    config entries
      edit "Welcome to aioquic"
        set status enable
      next
    end
  next
end
```


#### 2. Apply the banned word table in the web filter profile:

```
config webfilter profile
  edit "flow-webfilter"
    config web
      set bword-table 1
    end
    config ftgd-wf
      unset options
    end
  next
end
```

#### 3. Configure the firewall policy:

```
config firewall policy
  edit 1
    set utm-status enable
    set ssl-ssh-profile "deep-inspection"
    set webfilter-profile "flow-webfilter"
    set logtraffic all
    set nat enable
  next
end
```

4. Access the website using a supported HTTP/3 client, such as Chrome or Firefox. The website is blocked by the FortiGate.

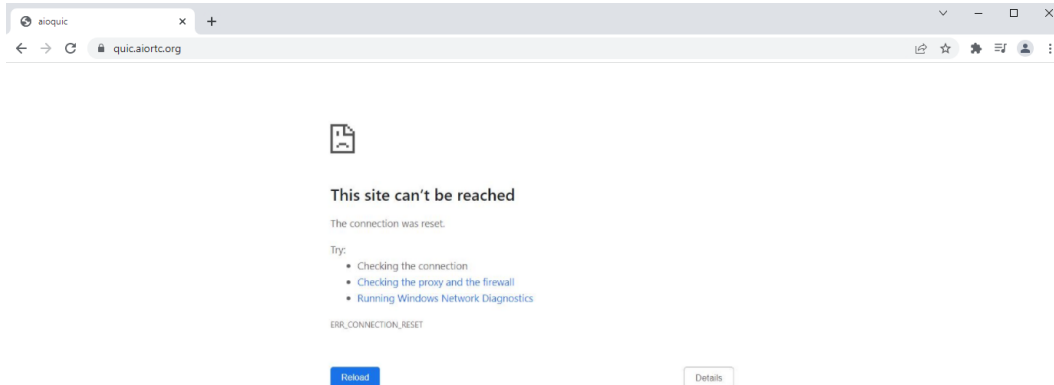

## Configuring web filter profiles with Hebrew domain names


The domain name URLs in web filter profiles can be configured with non-ASCII characters, such as in Hebrew. Any configured domain name in non-ASCII characters is encoded into Punycode format, then the domain name in Punycode format is used to match the domain name in the HTTP request for URL filtering purposes.

In the following example, a Hebrew URL (איגוד-האינטרנט.ישראל) is blocked in by a static URL filter. The URL translates to:

- xn----zhcbgfhe2aacg8fb5i.xn--4dbrk0ce in Punycode
- en.isoc.org.il in English

### To configure the web filter profile in the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*.
2. Enter a profile *Name*.
3. In the *Static URL Filter* section, enable *URL Filter* and click *Create New*.
4. Enter the Hebrew URL and set the *Action* to *Block*. The URL can be entered in Hebrew.

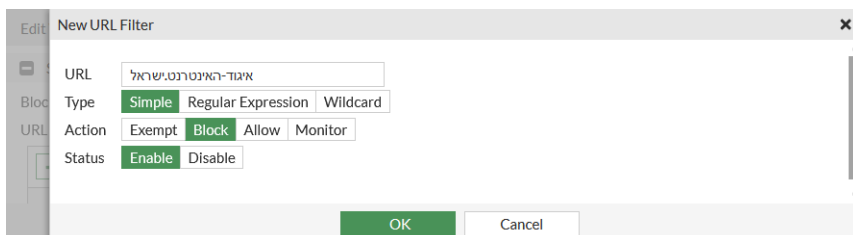

5. Click *OK* to save the filter. The URL appears in Hebrew in the URL filter table.

Edit Web Filter Profile

Static URL Filter

Block invalid URLs ☐

URL Filter ☒

URL	Type	Action	Status
איגוד האינטרנט ישראל	Simple	Block	Enable

Block malicious URLs discovered by FortiSandbox ☐

OK Cancel

6. Click OK to save the web filter profile.

7. Edit the web filter profile. The URL in the table has been converted by the FortiGate into Punycode.

Edit Web Filter Profile

Static URL Filter

Block invalid URLs ☐

URL Filter ☒

URL	Type	Action	Status
xn----zhcbgfhe2aacg8fb5i.xn--4dbrk0ce	Simple	Block	Enable

Block malicious URLs discovered by FortiSandbox ☐

OK Cancel



In the CLI, Punycode must be used to configure the Hebrew URL.

### To configure the web filter profile in the CLI:

```
config webfilter urlfilter
  edit 1
    set name "Auto-webfilter-urlfilter_0wedo5f1c"
    config entries
      edit 1
        set url "xn----zhcbgfhe2aacg8fb5i.xn--4dbrk0ce"
        set action block
      next
    end
  next
end
```

### To verify the configuration:

1. From a client, access the Hebrew URL over HTTPS. The website is blocked by the FortiGate.
2. The content of the replacement message displayed in the browser depends on the inspection mode.

- In flow mode (current configuration), the URL is displayed in Hebrew.



## FortiGuard Intrusion Prevention - Access Blocked

### Web Page Blocked

The page you have requested has been blocked because the URL is banned.

URL `https://איגוד-האינטרנט.ישראל/`  
 Description  
 URL Source Local URLfilter Block

- In proxy mode, the URL is displayed in Punycode.



## FortiGuard Intrusion Prevention - Access Blocked

### Web Page Blocked

The page you have requested has been blocked because the URL is banned.

URL `https://xn----zhcbgfne2aacg8fb5i.xn--4dbrk0ce/`  
 Description  
 URL Source Local URLfilter Block

### To verify the logs:

1. Go to *Log & Report > Security Events* and select the *Web Filter* card.
2. Select a log and click *Details*. The format of the *Hostname* and *URL* fields depends on the inspection mode.
  - In flow mode, the *Hostname* is displayed in Punycode with Hebrew in parentheses. The *URL* is displayed Punycode.

Summary						Logs
<div> <div> <div></div> <div></div> <div></div> </div> <div> <div>Search</div> <div></div> </div> </div> <div> <div>Web Filter</div> <div>Disk</div> <div>1 hour</div> <div>Details</div> </div>						
Date/Time	User	Source	Action	Hostname	URL	Log Details
2023/03/05 12:13:08		10.1.100.125	Blocked	xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c...	https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c...	
2023/03/05 12:13:08		10.1.100.125	Blocked	xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c...	https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c...	<div>Destination</div> <div> Destination 104.21.55.132  Destination Port 443  Destination Country/Region United States  Destination Interface port1  Destination UUID 1a656698-bb77-51ed-e76d-e1254f96b9ff  Hostname xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c... (אנו-האינטרנט.ישראל)  URL https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0c.../https://s#1488;s#1497;s#1490;s#1493;s#1491;s#1492;s#1488;s#1497;s#1504;s#1496;s#1512;s#1504;s#1496;s#1497;s#1513;s#1512;s#1488;s#1500/)  </div> <div>Application Control</div> <div> Protocol 2  6 </div>

When the log file is downloaded, the hostname in the raw file cannot be displayed. Paste the log into a text editor (such as Word or Notepad) to view the URL in Hebrew.

```
# execute log display
2 logs found.
2 logs returned.
```

```
1: date=2023-03-20 time=09:43:57 eventtime=1679330638045179264 tz="-0700"
logid="0315012544" type="utm" subtype="webfilter" eventtype="urlfilter"
level="warning" vd="vdom1" urlfilteridx=10 urlfilterlist="Hebrew-url" policyid=1
poluid="d0c84854-c736-51ed-d761-71527ca0b446" policytype="policy" sessionid=6987
srcip=10.1.100.125 srcport=54542 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9"
dstip=172.67.148.48 dstport=443 dstcountry="United States" dstintf="port1"
dstintfrole="undefined" dstuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9" proto=6
httpmethod="GET" service="HTTPS" hostname="ישראל.נט.ישראל" agent="Mozilla/5.0
(Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/110.0.0.0
Safari/537.36" profile="webfilter_flowbase" action="blocked" reftype="referral"
url="https://ישראל.נט.ישראל/פאבליק/פאבליק.נט.ישראל" referralurl="https://xn---
zhcbgfhe2aacg8fb5i.xn--4dbrk0c/" sentbyte=496 rcvbyte=0 direction="outgoing"
urlsource="Local URLfilter Block" msg="URL was blocked because it is in the URL
filter list" crscore=30 craction=8 crlevel="high"
```

```
2: date=2023-03-20 time=09:43:57 eventtime=1679330637755477060 tz="-0700"
logid="0315012544" type="utm" subtype="webfilter" eventtype="urlfilter"
level="warning" vd="vdom1" urlfilteridx=10 urlfilterlist="Hebrew-url" policyid=1
poluid="d0c84854-c736-51ed-d761-71527ca0b446" policytype="policy" sessionid=6982
srcip=10.1.100.125 srcport=54540 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9"
dstip=172.67.148.48 dstport=443 dstcountry="United States" dstintf="port1"
dstintfrole="undefined" dstuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9" proto=6
httpmethod="GET" service="HTTPS" hostname="ישראל.נט.ישראל" agent="Mozilla/5.0
(Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/110.0.0.0
Safari/537.36" profile="webfilter_flowbase" action="blocked" reftype="direct"
url="https://ישראל.נט.ישראל/פאבליק/פאבליק.נט.ישראל" sentbyte=546 rcvbyte=0 direction="outgoing"
urlsource="Local URLfilter Block" msg="URL was blocked because it is in the URL
filter list" crscore=30 craction=8 crlevel="high"
```

- In proxy mode, the *Hostname* is displayed in Hebrew with Punycode in parentheses. The *URL* is displayed Punycode.

Summary Logs					
Date/Time	User	Source	Action	Hostname	URL
2023/03/05 12:08:54		10.1.100.125	Blocked	אגוד-האינטרנט.ישראל (xn---zhcbgfhe2aa...	https://&#1488;&#1497;&#149...
2023/03/05 12:08:54		10.1.100.125	Blocked	אגוד-האינטרנט.ישראל (xn---zhcbgfhe2aa...	https://&#1488;&#1497;&#149...
2023/03/05 12:08:53		10.1.100.125	Passthrough	www.google.com	https://www.google.com/comple
2023/03/05 12:08:48		10.1.100.125	Passthrough	assets.msn.com	https://assets.msn.com/service/f
2023/03/05 12:08:48		10.1.100.125	Passthrough	assets.msn.com	https://assets.msn.com/service/f
2023/03/05 12:08:48		10.1.100.125	Passthrough	cdn.content.prod.cms.msn.com	http://cdn.content.prod.cms.msr
2023/03/05 12:08:48		10.1.100.125	Passthrough	cdn.content.prod.cms.msn.com	http://cdn.content.prod.cms.msr
2023/03/05 12:08:48		10.1.100.125	Passthrough	tile-service.weather.microsoft.com	http://tile-service.weather.micr

Log Details

Destination

Destination: 104.21.55.132  
Destination Port: 443  
Destination Country/Region: United States  
Destination Interface: port1  
Destination UUID: 1a656698-bb77-51ed-e76d-e1254f96b9ff

Application Control

Protocol: 6  
Service: HTTPS

When the log file is downloaded, the hostname in the raw file is displayed in Punycode.

```
# execute log display
2 logs found.
2 logs returned.
```

```
1: date=2023-03-20 time=09:38:44 eventtime=1679330324572766407 tz="-0700"
logid="0315012544" type="utm" subtype="webfilter" eventtype="urlfilter"
level="warning" vd="vdom1" urlfilteridx=1 urlfilterlist="Hebrew-url" policyid=1
poluid="d0c84854-c736-51ed-d761-71527ca0b446" policytype="policy" sessionid=6782
srcip=10.1.100.125 srcport=50527 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9"
dstip=104.21.55.132 dstport=443 dstcountry="United States" dstintf="port1"
dstintfrole="undefined" dstuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9" proto=6
httpmethod="GET" service="HTTPS" hostname="xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0ce"
agent="Mozilla/5.0 (Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like
Gecko) Chrome/110.0.0.0 Safari/537.36" profile="webfilter" action="blocked"
reqtype="referral" url="https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0ce/favicon.ico"
referralurl="https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0ce/" sentbyte=1402
rcvbyte=5473 direction="outgoing" urlsource="Local URLfilter Block" msg="URL was
blocked because it is in the URL filter list" crscore=30 craction=8 crlevel="high"
```

```
2: date=2023-03-20 time=09:38:44 eventtime=1679330324438504542 tz="-0700"
logid="0315012544" type="utm" subtype="webfilter" eventtype="urlfilter"
level="warning" vd="vdom1" urlfilteridx=1 urlfilterlist="Hebrew-url" policyid=1
poluid="d0c84854-c736-51ed-d761-71527ca0b446" policytype="policy" sessionid=6782
srcip=10.1.100.125 srcport=50527 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9"
dstip=104.21.55.132 dstport=443 dstcountry="United States" dstintf="port1"
dstintfrole="undefined" dstuuid="4074dca4-c736-51ed-0e0e-7a6b5ec6b7b9" proto=6
httpmethod="GET" service="HTTPS" hostname="xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0ce"
agent="Mozilla/5.0 (Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like
Gecko) Chrome/110.0.0.0 Safari/537.36" profile="webfilter" action="blocked"
reqtype="direct" url="https://xn---zhcbgfhe2aacg8fb5i.xn--4dbrk0ce/" sentbyte=1171
rcvbyte=4930 direction="outgoing" urlsource="Local URLfilter Block" msg="URL was
blocked because it is in the URL filter list" crscore=30 craction=8 crlevel="high"
```



If a FortiGuard category-based filter is configured in a web filter profile, the same behavior for replacement messages and logs applies based on the inspection mode.

---

## Video filter

The video filter profile can be used to filter YouTube videos based on FortiGuard categories or by channel ID for a more granular override of a single channel, user, or video. The video filter profile is currently supported in proxy-based policies and requires SSL deep inspection. The FortiGuard Video filtering service is based on a valid FortiGuard web filter license.

### Configuring a video filter profile

In the GUI, there are two main sections on the *New Video Filter Profile* page (*Security Profiles > Video Filter*), *FortiGuard Category Based Filter* and *Channel override list*.

When *FortiGuard Category Based Filter* is enabled, the various FortiGuard categories can be set to allow, monitor, or block videos in those categories. See [Filtering based on FortiGuard categories on page 1354](#) for a detailed example and explanation of how the WAD daemon inspects videos.

The YouTube *Channel override list* can be used to filter specific YouTube channels. When a video matches a YouTube channel, the video filter will take the corresponding action of allow, monitor, or block. See [Filtering based on YouTube channel on page 1359](#) for a detailed example.

By default, when the FortiGuard category-based filter and YouTube channel override are used together, a video will be blocked if it matches either category or YouTube channel and the action is set to block.

### Filtering based on FortiGuard categories

Video filtering is only proxy-based and uses the WAD daemon to inspect the video in four phases:

1. When the WAD receives a video query from a client, it extracts the video ID (`vid`) and tries to check the category and channel from the local cache.
2. If there is no match from the local cache, it connects to the FortiGuard video rating server to query the video category.
3. If the FortiGuard rating fails, it uses the `videofilter.youtube-key` to communicate with the Google API server to get its category and channel ID. This is the API query setting and it requires the user's own YouTube API key string. This configuration is optional.
4. If all steps fail to match the video, the WAD calls on the IPS engine to match the video ID and channel ID from the application signature database.




The FortiGuard anycast service must be enabled to use this feature.

---

In the following example, a new video filter profile is created to block the Knowledge category.



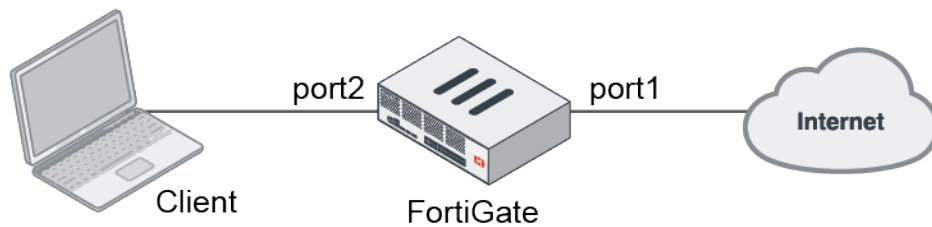

Many Google services use the QUIC protocol on UDP/443. FortiOS can detect and inspect QUIC traffic in HTTP3, so QUIC is not blocked by default in application control profiles. QUIC can be blocked manually (see [Blocking QUIC manually on page 1408](#)) in application control profiles, such as in scenarios where the traffic uses HTTP2 over QUIC. Blocking QUIC will cause the traffic to fall back to TCP/443 without QUIC, and the FortiGate can successfully inspect the traffic.

### To configure a video filter based on FortiGuard categories in the GUI:

1. Create the video filter profile:
  - a. Go to *Security Profiles > Video Filter* and click *Create New*.
  - b. Enter a name (*category\_filter*).
  - c. In the *FortiGuard Category Based Filter* section, set the *Knowledge* category *Action* to *Block*.
  - d. Click *OK*.
2. Create the firewall policy:
  - a. Enter the following:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port1
<b>Source</b>	All
<b>Destination</b>	All
<b>Service</b>	All
<b>Inspection Mode</b>	Proxy-based
<b>NAT</b>	Enable
<b>Video Filter</b>	Enable and select <i>category_filter</i>
<b>Application Control</b>	Enable and select <i>default</i>
<b>SSL Inspection</b>	deep-inspection
<b>Log Allowed Traffic</b>	All Sessions

- b. Configure the other settings as needed and click *OK*.

**To configure a video filter based on FortiGuard categories in the CLI:****1. Create the video filter profile:**

```
config videofilter profile
  edit "category_filter"
    config fortiguard-category
      edit 5
        set action block
        set category-id 4
        set log enable
      next
    end
  next
end
```

**2. Create the firewall policy:**

```
config firewall policy
  edit 10
    set name "client_yt_v4"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set ssl-ssh-profile "deep-inspection"
    set application-list "default"
    set videofilter-profile "category_filter"
    set logtraffic all
    set nat enable
  next
end
```

**To configure the YouTube API key (optional):**

```
config videofilter youtube-key
  edit 1
    set key *****
    set status enable
  next
end
```

**Verifying that the video is blocked**

When a user browses to YouTube and selects a video based in the Knowledge category, a replacement message will appear. This replacement message says the URL is blocked, and displays the URL of the YouTube video. On the FortiGate, verify the forward traffic and web filter logs.

### Sample forward traffic log

```
2: date=2021-04-27 time=15:27:13 eventtime=1619562433424944288 tz="-0700" logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="vdom1" srcip=10.1.100.11 srcport=60628
srcintf="port2" srcintfrole="undefined" dstip=172.217.3.206 dstport=443 dstintf="port1"
dstintfrole="undefined" srccountry="Reserved" dstcountry="United States" sessionid=8230
proto=6 action="client-rst" policyid=10 policytype="policy" poluuid="a5e991ba-a799-51eb-
4efe-ce32b9f70b75" policyname="client_yt_v4" service="HTTPS" trandisp="snat"
transip=172.16.200.1 transport=60628 duration=95 sentbyte=3546 rcvbyte=21653 sentpkt=24
rcvpkt=34 appcat="unscanned" wanin=2152 wanout=2290 lanin=2000 lanout=2000
utmaction="block" countweb=3 utmref=65532-0
```

### Sample web filter log

```
1: date=2021-04-27 time=15:25:37 eventtime=1619562338128550236 tz="-0700" logid="0347013664"
type="utm" subtype="webfilter" eventtype="videofilter-category" level="warning" vd="vdom1"
msg="Video category is blocked." policyid=10 sessionid=8230 srcip=10.1.100.11
dstip=172.217.3.206 srcport=60628 dstport=443 srcintf="port2" srcintfrole="undefined"
dstintf="port1" dstintfrole="undefined" proto=6 service="HTTPS" action="blocked"
videoinfosource="Cache" profile="category_filter" videoid="EAyo3_zJj5c" videocategoryid=4
hostname="www.youtube.com" url="https://www.youtube.com/watch?v=EAyo3_zJj5c"
```

## Troubleshooting and debugging

### To verify if the FortiGuard video filtering license is valid:

```
# get system fortiguard

fortiguard-anycast : enable
fortiguard-anycast-source: debug
protocol           : https
port               : 443
...
webfilter-license  : Contract
webfilter-expiration: Fri Dec 13 2030
...
videofilter-license : Contract
videofilter-expiration: Fri Dec 13 2030
```

The videofilter license should be synchronized with the webfilter license.

### To verify the WAD worker is running:

```
# diagnose test app wad 1000
Process [0]: WAD manager type=manager(0) pid=232 diagnosis=yes.
Process [1]: type=worker(2) index=0 pid=294 state=running
              diagnosis=no debug=enable valgrind=supported/disabled
...
Process [6]: type=YouTube-filter-cache-service(9) index=0 pid=290 state=running
              diagnosis=no debug=enable valgrind=unsupported/disabled
...
```

**To display and debug video filter cache:**

```
# diagnose test app wad ?
....
321: Display Video Filter Cache stats.
322: Reset Video Filter Cache stats.
323: Flush Video Filter Cache entries.
324: Display Video Filter module stats.
325: Request category list from Youtube API.
326: Display FTGD agent module stats.
327: Reset FTGD agent module stats.
328: Toggle Video Filter Cache Check.
329: Toggle Video Filter FTGD Query.
330: Toggle Video Filter API Check.
```

**To enable real-time WAD debugs:**

```
# diagnose wad debug enable level verbose
# diagnose wad debug enable category video
# diagnose debug enable
```

**Sample output**

```
[p:274][s:8754][r:186] wad_http_req_exec_video_filter_check(167): hreq=0x7f1184f288e0, check
video filter check videofilter
[p:274][s:8754][r:186] wad_vf_req_submit(1869): node=0x7f1186694640, ctx=0x7f118502d1f8,
youtube_channel_filter_id=0
[p:274][s:8754][r:186] wad_vf_match_pattern_cb(1551): ctx=0x7f118502d1f8 matched type video
[p:274][s:8754][r:186] wad_vf_extract_video_id(297): str='v=EAYo3_zJj5c', start='v=',
end='&'
[p:274][s:8754][r:186] wad_vf_extract_video_id(297): str='v=EAYo3_zJj5c', start='v=', end=''
[p:274][s:8754][r:186] wad_vf_extract_video_id(322): video-id: start=2, end=13
[p:274][s:8754][r:186] wad_vf_sync_task_trigger_async_task(1602): extracted vid=EAYo3_zJj5c
ctx=0x7f118502d1f8
[p:274][s:8754][r:186] wad_vf_sync_task_trigger_async_task(1622): video filter
ctx=0x7f118502d1f8 creates new task=0x7f118657e7a0
[p:274][s:8754][r:186] wad_vfc_client_lookup(159): oid=15194313278609724406
[p:274][s:8754][r:186] wad_vfc_core_lookup(277): youtube-filter-cache core(0x7f11864d2078)
found the item!
[p:274][s:8754][r:186] wad_vfc_client_lookup(174): local lookup: ret=0 result=hit, hit_
cnt=51
local hit item, item's value:
  oid=15194313278609724406
  vid="EAYo3_zJj5c"
  category="4"
  title="Youtube Data API V3 Video Search Example"
  channel="UCR6d0EiC3G4WA8-Rqji6a8g"
  desc(first 100 characters)="Youtube Data API V3 Video Search Example

Welcome Folks My name is Gautam and Welcome to Coding Shik....."
[p:274][s:8754][r:186] wad_vf_task_proc_cache_resp(1048): vf filter cache hit,
item=0x7f116dacc060
[p:274][s:8754][r:186] wad_vf_async_task_run(1491): end of async task ret=0
[p:274][s:8754][r:186] wad_vf_sync_task_proc_async_result(1686): task=0x7f118657e7a0
item=0x7f116dacc060
[p:274][s:8754][r:186] wad_vf_sync_task_proc_async_result(1721): ctx(0x7f118502d1f8) channel
```

```
UCR6d0EiC3G4WA8-Rqji6a8g not match
[p:274][s:8754][r:186] wad_vf_sync_task_proc_async_result(1733): ctx(0x7f118502d1f8)
category result is block
[p:274][s:8754][r:186] wad_vfc_client_add(230): oid=15194313278609724406
```

## Filtering based on YouTube channel

Video filtering can be configured to filter specific YouTube channels. When a video matches a YouTube channel, the video will take the corresponding action of allow, monitor, or block. Video filtering is only supported in proxy-based inspection mode, and deep inspection must be enabled in the firewall policy.

By default, when the FortiGuard category-based filter and YouTube channel override are used together, a video will be blocked if it matches either category or YouTube channel and the action is set to block.

The *Channel override list* allows the channel action to override the category action. A category can be blocked, but certain channels in that category can be allowed (see [Configuration with YouTube channel override](#)).



Videos are first filtered by channel action. If no match is found, then the category action is checked. If neither condition is met, the default action in the video filter profile is used.

## Identifying the YouTube channel ID

The following table lists how to identify the YouTube channel ID based on different YouTube video URLs formats:

Video URL	Channel ID
www.youtube.com/channel/<channel-id>	<channel-id> indicates the ID for the channel.
www.youtube.com/user/<user-id>	Open the page source and locate: <meta itemprop="channelId" content="<channel-id>"> <channel-id> indicates the channel ID for the user page.
www.youtube.com/watch?v=<string>	Open the page source and locate: <meta itemprop="channelId" content="<channel-id>"> <channel-id> indicates the channel ID for the video.

In a video filter profile, the default action is set to monitor when there is no match. Logging is enabled by default.

```
config videofilter profile
  edit <name>
    set default-action {block | monitor | allow}
    set log {enable | disable}
  next
end
```

## Basic configuration

In the following example, the Fortinet YouTube channel ID (UCJHo4AuVomwMRzgkA5DQEOA) is blocked, and the video filter is applied to a policy.

**To configure a video filter based on a YouTube channel in the GUI:**

1. Go to *Security Profiles > Video Filter* and click *Create New*.
2. In the *Channel override list* section, click *Create New*. The *New Channel Override Entry* pane opens.
  - a. Enter the *Channel ID* (UCJHo4AuVomwMRzgkA5DQEOA) and for *Action*, select *Block*.

- b. Click *OK*.
3. Click *OK*.
4. Configure the firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. For *Inspection Mode*, select *Proxy-based*.
  - c. Enable *Video Filter* and select the profile you created.
  - d. For *SSL Inspection*, select *deep-inspection*.

- e. Configure the other settings as needed and click *OK*.

## To configure a video filter based on a YouTube channel in the CLI:

### 1. Configure the channel filter:

```
config videofilter youtube-channel-filter
  edit 1
    set name "channel_filter"
    set log enable
    config entries
      edit 1
        set action block
        set channel-id "UCJHo4AuVomwMRzgkA5DQEOA"
      next
    end
  next
end
```

### 2. Configure the video filter profile:

```
config videofilter profile
  edit "channel_filter"
    set default-action monitor
    set log enable
    set youtube-channel-filter 1
  next
end
```

### 3. Configure the firewall policy:

```
config firewall policy
  edit 1
    set name "video-filter"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set ssl-ssh-profile "deep-inspection"
    set videofilter-profile "channel_filter"
    set nat disable
  next
end
```

## Configuration with YouTube channel override

In this example, all categories in the video filter are configured to be blocked. The YouTube channel filter list is configured with the action set to allow, which effectively creates an allowlist. The channel UCR6d0EiC3G4WA8-Rqji6a8g is allowed.

**To configure YouTube channel override in the GUI:**

1. Go to *Security Profiles > Video Filter* and click *Create New*.
2. In the *Channel override list* section, click *Create New*. The *New Channel Override Entry* pane opens.
  - a. Enter the *Channel ID* (UCJHo4AuVomwMRzgkA5DQEOA) and for *Action*, select *Allow*.
  - b. Click *OK*.
3. In the *FortiGuard Category Based Filter* section, set the *Action* for all categories to *Block*.
4. Click *OK*.
5. Configure the firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. For *Inspection Mode*, select *Proxy-based*.
  - c. Enable *Video Filter* and select the profile you created.
  - d. For *SSL Inspection*, select *deep-inspection*.
  - e. Configure the other settings as needed and click *OK*.

**To configure YouTube channel override in the CLI:**

1. Configure the YouTube channel filter:

```
config videofilter youtube-channel-filter
  edit 1
    set name "vf1"
    config entries
      edit 1
        set comment "https://www.youtube.com/watch_v=EAYo3_zJj5c"
        set action allow
        set channel-id "UCR6d0EiC3G4WA8-Rqji6a8g"
      next
    end
    set log enable
  next
end
```

2. Configure the video filter profile:

```
config videofilter profile
  edit "channel_filter_override"
    set default-action monitor
    set log enable
    set youtube-channel-filter 1
    config fortiguard-category
      config filters
        edit 1
          set action block
          set log enable
        next
        edit 2
          set action block
          set category-id 1
          set log enable
        next
        edit 3
          set action block
          set category-id 2
      next
    end
  end
```



```
        set log enable
    next
    edit 4
        set action block
        set category-id 3
        set log enable
    next
    edit 5
        set action block
        set category-id 4
        set log enable
    next
    edit 6
        set action block
        set category-id 5
        set log enable
    next
    edit 7
        set action block
        set category-id 6
        set log enable
    next
    edit 8
        set action block
        set category-id 7
        set log enable
    next
    edit 9
        set action block
        set category-id 8
        set log enable
    next
    edit 10
        set action block
        set category-id 9
        set log enable
    next
    edit 11
        set action block
        set category-id 10
        set log enable
    next
end
end
next
end
```

### 3. Configure the firewall policy:

```
config firewall policy
    edit 10
        set name "client_yt_v4"
        set srcintf "port2"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
```

```

set schedule "always"
set service "ALL"
set utm-status enable
set inspection-mode proxy
set ssl-ssh-profile "deep-inspection"
set videofilter-profile "channel_filter_override"
set logtraffic all
set nat enable

next
end

```

4. Verify the logs. The category action is set to `block` and the channel action is set to `allow`, so video access is allowed:

```

30: date=2023-05-03 time=16:38:41 eventtime=1683157121226033191 tz="-0700"
logid="0348013682" type="utm" subtype="webfilter" eventtype="videofilter-channel"
level="notice" vd="root" msg="Video channel is allowed." policyid=1 poluuid="e8b310ba-
914f-51ed-9014-7b2a116f29ad" sessionid=1971 srcip=172.20.120.13 dstip=142.251.33.78
srcport=63207 dstport=443 srcintf="port2" srcintfrole="undefined" dstintf="port3"
dstintfrole="wan" proto=6 httpmethod="POST" service="HTTPS" action="passthrough"
videoinfosource="Cache" profile="channel_filter_override" videoid="EAyo3_zJj5c"
videochannelid="UCR6d0EiC3G4WA8-Rqji6a8g" hostname="www.youtube.com" agent="Mozilla/5.0
(Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/112.0.0.0
Safari/537.36" referralurl="https://www.youtube.com/watch?v=EAyo3_zJj5c"
url="https://www.youtube.com/api/stats/qoe?fmt=135&afmt=251&cpn=RbyesMDI67aQvDBc&el=deta
ilpage&ns=yt&fexp=23983296%2C23986017%2C24004644%2C24007246%2C24080738%2C24135310%2C2421
9382%2C24255165%2C24406084%2C24415864%2C24416290%2C24433679%2C24437577%2C24439361%2C2444
9113%2C24468691%2C24494396%2C24499792%2C24514873%2C24516157%2C24519085%2C24532855%2C2453
7881%2C24550458%2C24559266%2C24691625%2C39323074&c1=528338113&seq=3&docid=EAyo3_
zJj5c&ei=VvBSZIBxI4_Ckgaa6aW4Dw&event=streamingstats&plid=AAx60ovFxSwqcWr-&cbr=Chrom"

```




If the category action is changed to `allow` and the channel action is changed to `block`, the video access would be blocked.

## Replacement messages displayed in blocked videos

When a user visits a video directly by a URL, a full page replacement message is displayed. When a user loads a video from the YouTube website (homepage or recommended videos), the page loads and the replacement message is displayed in the video frame. For more information about configuring video filters, see [Filtering based on FortiGuard categories on page 1354](#) and [Filtering based on YouTube channel on page 1359](#).


### Example 1: blocking the video based on the URL

In this example, the user entered the URL of a blocked channel ID in their browser. The replacement message is displayed in the browser (full page).

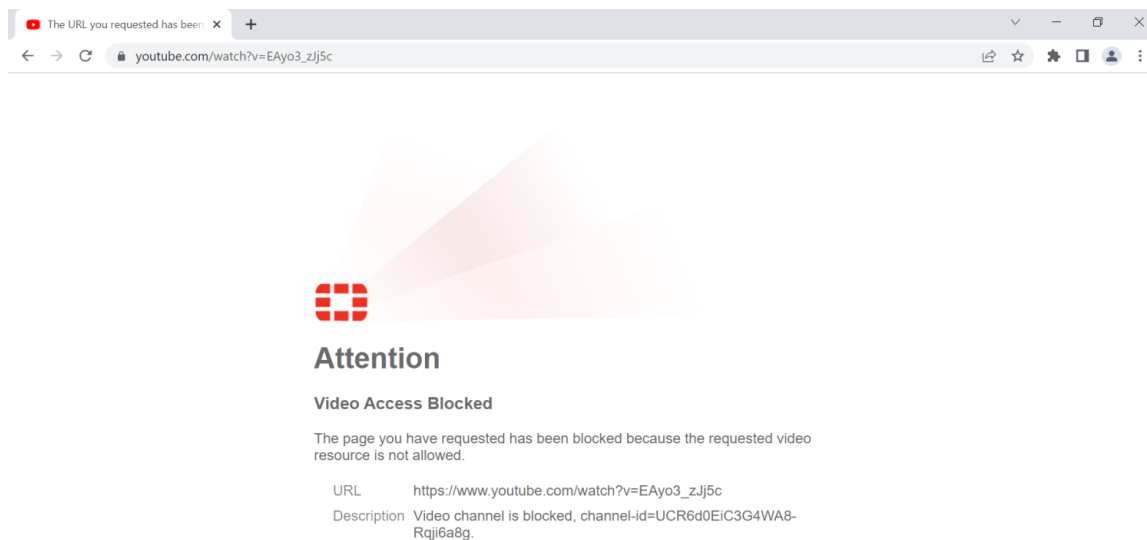


### Example 2: blocking the video based on channel ID on YouTube

In this example, the user visited a blocked channel ID on the YouTube website. The replacement message is displayed in the video frame.

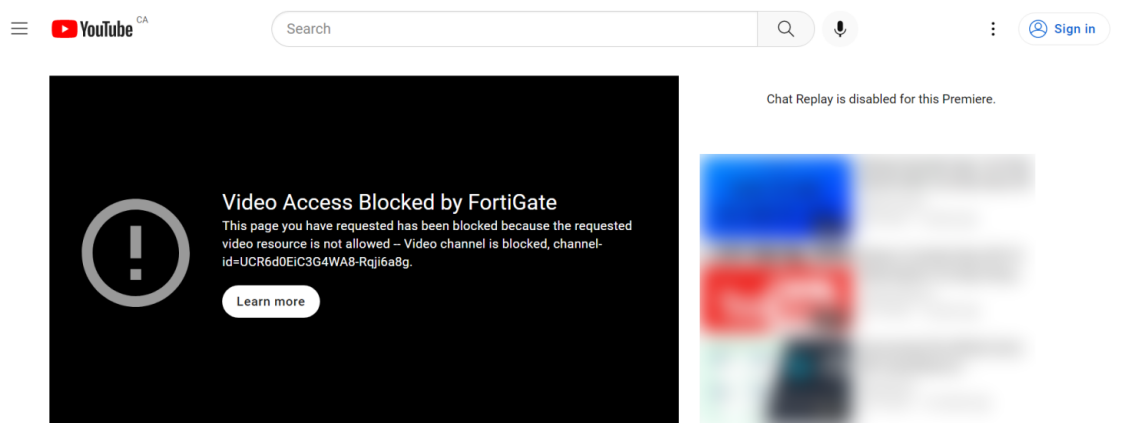

### Example 3: blocking the video based on FortiGuard category on YouTube

In this example, the user visited a video on the YouTube website that belongs to a blocked FortiGuard category. The replacement message is displayed in the video frame.

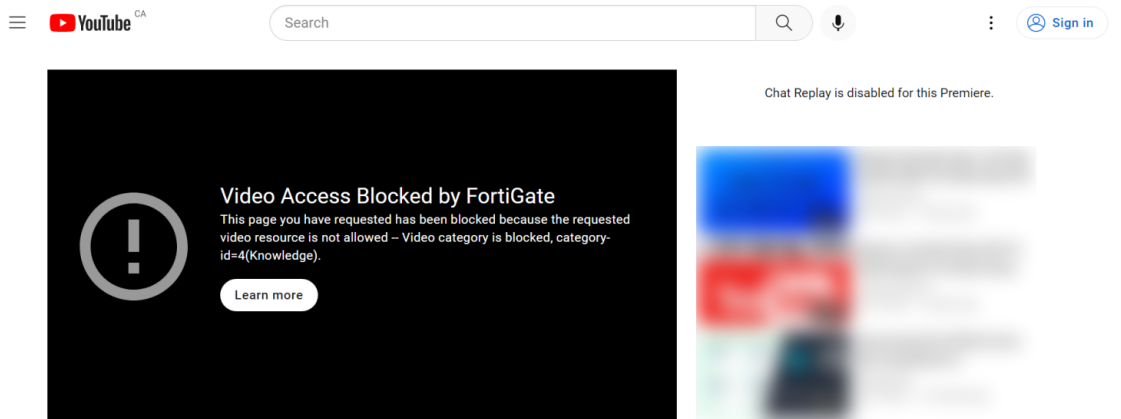

## DNS filter

You can apply DNS category filtering to control user access to web resources. You can customize the default profile, or create your own to manage network user access and apply it to a firewall policy, or you can add it to a DNS server on a FortiGate interface. For more information about configuring DNS, see [DNS on page 237](#).

When both a DNS and a web filter are configured on a firewall policy, the DNS filter takes precedence. If certificate inspection is also used, the web filter replacement message might be shown instead of the SDNS block page. If both filters are set to block, SSL inspection is set to certificate inspection, and the destination web traffic is HTTPS, then the client receives a redirect to the SDNS server, which is then blocked by the web filter because the redirect URL cannot pass the certificate inspection.

DNS filtering has the following features:

- FortiGuard Filtering: filters the DNS request based on the FortiGuard domain rating.
- Botnet C&C domain blocking: blocks the DNS request for the known botnet C&C domains.
- External dynamic category domain filtering: allows you to define your own domain category.
- DNS safe search: enforces Google, Bing, and YouTube safe addresses for parental controls.
- Local domain filter: allows you to define your own domain list to block or allow.
- External IP block list: allows you to define an IP block list to block resolved IPs that match this list.
- DNS translation: maps the resolved result to another IP that you define.



Some DNS filter features require a subscription to FortiGuard Web Filtering.

DNS filtering connects to the FortiGuard secure DNS server over anycast by default. For more information about this configuration, see [DNS over TLS and HTTPS on page 250](#).

The IPS engine handles the DNS filter in flow mode policies and queries the FortiGuard web filter server for FortiGuard categories. In proxy mode, the DNS proxy daemon handles the DNS filter and queries the FortiGuard SDNS server for FortiGuard categories. When a DNS filter profile is enabled in `config system dns-server`, the DNS proxy daemon handles the traffic.



DNS filter profiles cannot be used in firewall policies when the FortiGate is in NGFW policy-based mode; see [NGFW policy on page 1049](#) for more information. They can be used in the DNS server; see [FortiGate DNS server on page 242](#) for more information.

---



A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).

---

## DNS filter behavior in proxy mode

In cases where the DNS proxy daemon handles the DNS filter (described in the preceding section) and if DNS caching is enabled (this is the default setting), then the FortiGate will respond to subsequent DNS queries using the result in the DNS cache and will not forward these queries to a real DNS server.

There are two options to disable this behavior:

- Disable DNS caching globally.
- Remove the DNS filter profile from the proxy mode firewall policy or from the DNS server configured on a FortiGate interface.

### To disable DNS caching globally:

```
config system dns
    set dns-cache-limit 0
end
```



There will be a performance impact to DNS queries since each query will not be cached, and will be forwarded to a real DNS server.

---

## FortiGuard DNS rating service

DNS over TLS connections to the FortiGuard secure DNS server is supported. The CLI options are only available when `fortiguard-anycast` is enabled. DNS filtering connects to the FortiGuard secure DNS server over anycast by default.

### To configure DoT to the secure DNS server in the CLI:

```
config system fortiguard
    set fortiguard-anycast enable
    set fortiguard-anycast-source fortinet
    set anycast-sdns-server-ip 0.0.0.0
    set anycast-sdns-server-port 853
end
```

The following topics provide information about DNS filters:

- [Configuring a DNS filter profile on page 1368](#)
- [FortiGuard category-based DNS domain filtering on page 1372](#)
- [Botnet C&C domain blocking on page 1375](#)
- [DNS safe search on page 1378](#)
- [Local domain filter on page 1380](#)
- [DNS translation on page 1385](#)
- [Applying DNS filter to FortiGate DNS server on page 1388](#)
- [DNS inspection with DoT and DoH on page 1389](#)
- [Troubleshooting for DNS filter on page 1392](#)

## Configuring a DNS filter profile

A DNS filter profile contains settings that enable or disable various forms of DNS filtering, including:

- FortiGuard filtering
- Botnet C&C domain blocking
- DNS safe search
- External dynamic category domain filtering
- Local domain filter
- External IP block list
- DNS translation

Once a DNS filter is configured, it can be applied to a firewall policy, or on a FortiGate DNS server if one is configured. In the following basic example, a DNS filter is created and applied to a firewall policy to scan DNS queries that pass through the FortiGate.

### To configure a DNS filter profile in the GUI:

1. Go to *Security Profiles > DNS Filter* and click *Create New*, or edit an existing profile.
2. Configure the settings as needed.

<i>Name</i>	Enter a unique name for the profile.
<i>Comments</i>	Enter a comment (optional).
<i>Redirect botnet C&amp;C requests to Block Portal</i>	Enable to block botnet website access at the DNS name resolution stage. See <a href="#">Botnet C&amp;C domain blocking on page 1375</a> for more details.
<i>Enforce 'Safe Search' on Google, Bing, YouTube</i>	Enable to avoid explicit and inappropriate results in the Google, Bing, and YouTube search engines. See <a href="#">DNS safe search on page 1378</a> for more details.
<i>Restrict YouTube Access</i>	When <i>Enforce 'Safe Search' on Google, Bing, YouTube</i> is enabled, select either <i>Strict</i> or <i>Moderate</i> to restrict YouTube access by responding to DNS resolutions with CNAME restrict.youtube.com and restrictmoderate.youtube.com respectively.
<i>FortiGuard Category Based Filter</i>	Enable to use the FortiGuard domain rating database to inspect DNS traffic. A FortiGuard Web Filter license is required to use this option.

	Expand the category groups in the table to view and edit the FortiGuard category settings to <i>Allow</i> , <i>Monitor</i> , or <i>Redirect to Block Portal</i> . See <a href="#">FortiGuard category-based DNS domain filtering on page 1372</a> for more details.
<b>Static Domain Filter</b>	This section includes options related to the static domain filter.
<i>Domain Filter</i>	<p>Enable to define local static domain filters to allow or block specific domains. The local domain filter has a higher priority than the FortiGuard category-based domain filter.</p> <p>Click <i>Create New</i> in the table to add a domain filter and configure the following settings.</p> <ul style="list-style-type: none"> <li>• <i>Domain</i>: enter a domain.</li> <li>• <i>Type</i>: select <i>Simple</i>, <i>Reg. Expression</i>, or <i>Wildcard</i>.</li> <li>• <i>Action</i>: select <i>Redirect to Block Portal</i>, <i>Allow</i>, or <i>Monitor</i>.</li> <li>• <i>Status</i>: select <i>Enable</i> or <i>Disable</i>.</li> </ul> <p>See <a href="#">Local domain filter on page 1380</a> for more details.</p>
<i>External IP Block Lists</i>	Enable to add one or more external IP block lists. See <a href="#">IP address threat feed on page 2934</a> for more details.
<i>DNS Translation</i>	<p>Enable to translate a DNS resolved IP address to another IP address specified on a per-policy basis.</p> <p>Click <i>Create New</i> in the table to add a DNS translation and configure the following settings.</p> <ul style="list-style-type: none"> <li>• <i>Type</i>: select <i>IPv4</i> or <i>IPv6</i>.</li> <li>• <i>Original Destination</i>: enter the address of a host or subnet that you want translated. When a resolved address in a DNS response matches this destination, the FortiGate will replace the address with the address in <i>Translated Destination</i>.</li> <li>• <i>Translated Destination</i>: enter the address of a host or subnet that you want the resolved address to be translated to.</li> <li>• <i>Network Mask</i>: enter the netmask for the original and translated destination. If a single host is used for the original and translated destination, set the netmask to <i>255.255.255.255</i>.</li> <li>• <i>Status</i>: select <i>Enable</i> or <i>Disable</i>.</li> </ul> <p>Enabling DNS translation will override matching DNS responses with translated IPs. See <a href="#">DNS translation on page 1385</a> for more details.</p>
<b>Options</b>	This section includes other options related to the DNS filter.
<i>Redirect Portal IP</i>	<p>Set the IP address of the SDNS redirect portal. Select <i>Use FortiGuard Default</i>, or <i>Specify</i> and enter the IP address.</p> <p>When <i>FortiGuard Category Based Filter</i> categories are set to <i>Redirect to Block Portal</i>, the DNS response will use this IP address in its response to the client. If the client is accessing the domain on a web browser, they will be redirected to the block portal page on this address.</p>

*Allow DNS requests when a rating error occurs*

Enable to allow all domains when FortiGuard DNS servers fail, or they are unreachable from the FortiGate. When this happens, a log message is recorded in the DNS logs by default.


*Log all DNS queries and responses*

Enable to log all domains visited (detailed DNS logging).

3. Click **OK**.

### To apply a DNS filter profile to a policy in the GUI:

1. Go to **Policy & Objects > Firewall Policy** and click **Create New**, or edit an existing policy.
2. In the **Security Profiles** section, enable **DNS Filter** and select the DNS filter.

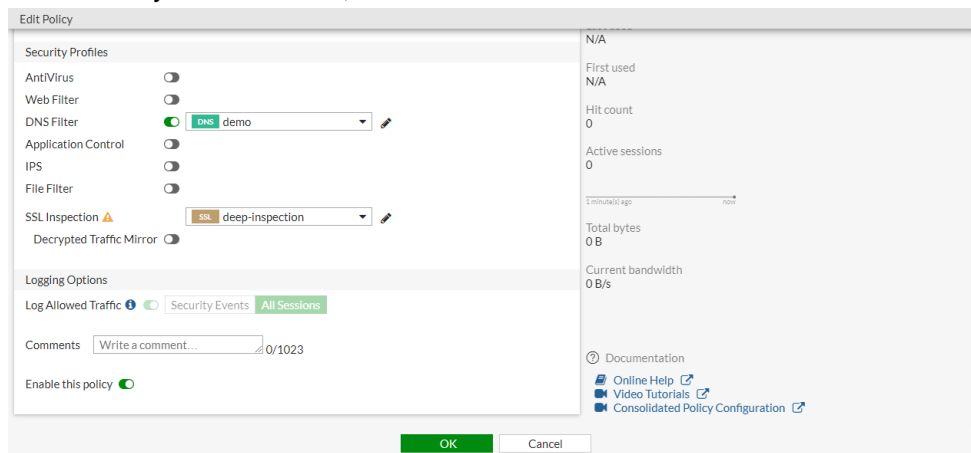

3. Configure the other settings as needed.
4. Click **OK**.

## CLI-only settings

The following DNS filter profile settings can only be configured in the CLI:

```
config dnsfilter profile
  edit <name>
    set block-action {block | redirect | block-servfail}
    set sdns-ftgd-err-log {enable | disable}
  next
end
```

```
block-action {block |
  redirect | block-
  servfail}
```

Set the action to take for blocked domains:

- **block**: return NXDOMAIN for blocked domains.
- **redirect**: redirect blocked domains to SDNS portal (default).
- **block-servfail**: return SERVFAIL for blocked domains.

When a FortiGuard or local domain filter category is set to *Redirect to Block Portal* in the GUI, the action is set to **block** in the CLI. By default, the **block-action** applied to a DNS profile is set to **redirect**.

```
sdns-ftgd-err-log {enable
  | disable}
```

Enable/disable FortiGuard SDNS rating error logging (default = enable).



**To configure a DNS filter profile in the CLI:**

```
config dnsfilter profile
  edit "demo"
    set comment ''
    config domain-filter
      unset domain-filter-table
    end
    config ftgd-dns
      set options error-allow
      config filters
        edit 2
          set category 2
          set action monitor
        next
        edit 7
          set category 7
          set action block
        next
        ...
        edit 22
          set category 0
          set action monitor
        next
      end
    end
    set log-all-domain enable
    set sdns-ftgd-err-log enable
    set sdns-domain-log enable
    set block-action redirect
    set block-botnet enable
    set safe-search enable
    set redirect-portal 93.184.216.34
    set youtube-restrict strict
  next
end
```

**To apply a DNS filter profile to a policy in the CLI:**

```
config firewall policy
  edit 1
    set name "Demo"
    set srcintf "port10"
    set dstintf "port9"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set logtraffic all
    set fsso disable
    set dnsfilter-profile "demo"
    set profile-protocol-options "default"
    set ssl-ssh-profile "deep-inspection"
```

```

    set nat enable
next
end

```

## FortiGuard category-based DNS domain filtering

You can use the FortiGuard category-based DNS domain filter to inspect DNS traffic. This makes use of FortiGuard's continuously updated domain rating database for more reliable protection.

A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).



The FortiGate must have a FortiGuard Web Filter license to use the FortiGuard category-based filter.

### To configure FortiGuard category-based DNS domain filtering in the GUI:

1. Go to *Security Profiles > DNS Filter* and click *Create New*, or edit an existing profile.
2. Enable *FortiGuard Category Based Filter*.
3. Select the category and then select *Allow*, *Monitor*, or *Redirect to Block Portal* for that category.
4. In the *Options* section, select a setting for *Redirect Portal IP*. Select either *Use FortiGuard Default* (208.91.112.55) or click *Specify* and enter another portal IP. The FortiGate will use the portal IP to replace the resolved IP in the DNS response packet.

New DNS Filter Profile

☒ FortiGuard Category Based Filter

☒ Allow ☐ Monitor ☐ Redirect to Block Portal

Name	Action
General Organizations	Allow
Business	Allow
Information and Computer Security	Allow
Government and Legal Organizations	Allow
Information Technology	Allow
Armed Forces	Allow
Web Hosting	Allow
Secure Websites	Allow
Web-based Applications	Allow
Charitable Organizations	Allow

Static Domain Filter

Domain Filter ☐

External IP Block Lists ☐

DNS Translation ☐

Options

Redirect Portal IP    
208.91.112.55

Allow DNS requests when a rating error occurs ☐

Log all DNS queries and responses ☐

5. Click **OK**.

**To configure FortiGuard category-based DNS domain filtering in the CLI:**

```

config dnsfilter profile
  edit "demo"
    set comment ''
    config domain-filter
      unset domain-filter-table
    end
    config ftgd-dns
      set options error-allow
      config filters
        edit 2
          set category 2
          set action monitor
        next
        edit 7
          set category 7
          set action monitor
        next
        ...
        edit 22
          set category 0
          set action monitor
        next
      end
    end
    set log-all-domain enable
    set sdns-ftgd-err-log enable
    set sdns-domain-log enable
    set block-action {redirect | block}
    set block-botnet enable
    set safe-search enable
    set redirect-portal 93.184.216.34
    set youtube-restrict strict
  next
end

```

**Verifying the logs**

From your internal network PC, use a command line tool, such as dig or nslookup, to do a DNS query for some domains. For example:

```

#dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 61252
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 13; ADDITIONAL: 11

;; QUESTION SECTION:
;; www.example.com.                IN      A

;; ANSWER SECTION:
www.example.com.      17164    IN      A      93.184.216.34

;; AUTHORITY SECTION:
com.                  20027    IN      NS      h.gtld-servers.net.
com.                  20027    IN      NS      i.gtld-servers.net.
com.                  20027    IN      NS      f.gtld-servers.net.

```

```

com.                20027    IN      NS      d.gtld-servers.net.
com.                20027    IN      NS      j.gtld-servers.net.
com.                20027    IN      NS      l.gtld-servers.net.
com.                20027    IN      NS      e.gtld-servers.net.
com.                20027    IN      NS      a.gtld-servers.net.
com.                20027    IN      NS      k.gtld-servers.net.
com.                20027    IN      NS      g.gtld-servers.net.
com.                20027    IN      NS      m.gtld-servers.net.
com.                20027    IN      NS      c.gtld-servers.net.
com.                20027    IN      NS      b.gtld-servers.net.

```

```
;; ADDITIONAL SECTION:
```

```

a.gtld-servers.net. 21999    IN      A       192.5.6.30
a.gtld-servers.net. 21999    IN      AAAA    2001:503:a83e::2:30
b.gtld-servers.net. 21997    IN      A       192.33.14.30
b.gtld-servers.net. 21997    IN      AAAA    2001:503:231d::2:30
c.gtld-servers.net. 21987    IN      A       192.26.92.30
c.gtld-servers.net. 20929    IN      AAAA    2001:503:83eb::30
d.gtld-servers.net. 3340     IN      A       192.31.80.30
d.gtld-servers.net. 3340     IN      AAAA    2001:500:856e::30
e.gtld-servers.net. 19334    IN      A       192.12.94.30
e.gtld-servers.net. 19334    IN      AAAA    2001:502:1ca1::30
f.gtld-servers.net. 3340     IN      A       192.35.51.30

```

```

;; Received 509 B
;; Time 2019-04-05 09:39:33 PDT
;; From 172.16.95.16@53 (UDP) in 3.8 ms

```

### To check the DNS filter log in the GUI:

1. Go to *Log & Report > Security Events*.
2. Click the *DNS Query* card name. There are logs for the DNS traffic that just passed through the FortiGate with the FortiGuard rating for the domain name.

Add Filter											Details
Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description	Domain Filter Index	#
2019/04/05 09:39:34	dns	10.1.100.18	www.example.com	A	1	Domain is monitored		52	Information Technology		1
2019/04/05 09:39:34	dns	10.1.100.18	www.example.com	A	1						2

### To check the DNS filter log in the CLI:

```
# execute log filter category utm-dns
```

```

# execute log display
2 logs found.
2 logs returned.

```

```

1: date=2019-04-05 time=09:39:34 logid="1501054802" type="utm" subtype="dns" eventtype="dns-response" level="notice" vd="vdom1" eventtime=1554482373 policyid=1 sessionid=50868
srcip=10.1.100.18 srcport=34308 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=17647
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="93.184.216.34" msg="Domain is monitored" action="pass" cat=52 catdesc="Information Technology"

```

```

2: date=2019-04-05 time=09:39:34 logid="1500054000" type="utm" subtype="dns" eventtype="dns-query" level="information" vd="vdom1" eventtime=1554482373 policyid=1 sessionid=50868
srcip=10.1.100.18 srcport=34308 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16

```

```
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=17647
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"
```

## Botnet C&C domain blocking

FortiGuard Service continually updates the botnet C&C domain list. The botnet C&C domain blocking feature can block the botnet website access at the DNS name resolving stage. This provides additional protection for your network.

A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).

### To configure botnet C&C domain blocking in the GUI:

1. Go to **Security Profiles > DNS Filter** and click **Create New**, or edit an existing profile.
2. Enable **Redirect botnet C&C requests to Block Portal**.
3. Optionally, click the **botnet package** link. The **Botnet C&C Domain Definitions** pane opens, which displays the latest list.

The screenshot shows the 'Edit DNS Filter Profile' window on the left and the 'Botnet C&C Domain Definitions' pane on the right.

**Edit DNS Filter Profile:**

- Name: demo
- Comments: Co
- Redirect botnet C&C requests to Block Portal: ☒
- Enforce 'Safe Search' on Google, Bing, YouTube: ☒
- Restrict YouTube Access: ☒
- FortiGuard Category Based Filter: ☒
- Buttons: Allow, Monitor, Block
- Categories and Actions:
 

Name	Action
Adult/Mature Content	15
Bandwidth Consuming	6
General Interest - Business	15
Finance and Banking	Allow
Search Engines and Portals	Allow
General Organizations	Allow
Business	Allow
Information and Computer Security	Allow
Government and Legal Organizations	Allow

**Botnet C&C Domain Definitions:**

Search	FQDN	
	oakbarrels-shop.co.uk	Other
	vpvgumqwcz.ws	Other
	fceueqmmfftetl.co.uk	Other
	shadyacresminis.bravepages.com	Other
	canind.co	Other
	safety.microsoft.com.cnknk.klf3htd7zgbdzbsln6qgm2vs.review	Other
	ouzgspmhcz.ws	Other
	kiggmy.cn	Other
	trastres.com	Other
	olyjune.com	Other
	service-limited-account.net	Other
	biostevia.co	Other
	vwxzgehdldl.cn	Other
	lgoibyslivy.co.uk	Other
	52uo5k3t73ypjje.91006j.bid	Other
	applecloud-support.com	Other
	amazon.de.de-amazon-nm01c.ru	Other
	nishkampolishsewakjatha.com	Other
	ufxifajbqssgc.co.uk	Other
	homeworksite.tk	Other
	bvxszehcfetwdkx.org	Other

4. Configure the other settings as needed.
5. Click **OK**.

### To configure botnet C&C domain blocking in the CLI:

```
config dnsfilter profile
edit "demo"
set comment ''
config domain-filter
unset domain-filter-table
end
config ftgd-dns
```

```

        set options error-allow
        config filters
            ...
        end
    end
    set log-all-domain enable
    set sdns-ftgd-err-log enable
    set sdns-domain-log enable
    set block-action block
    set block-botnet enable
    set safe-search enable
    set redirect-portal 208.91.112.55
    set youtube-restrict strict
next
end

```

## Verifying the logs

Select a botnet domain from that list. From your internal network PC, use a command line tool, such as dig or nslookup, to send a DNS query to traverse the FortiGate. For example:

```

#dig canind.co
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 997
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; canind.co.                IN      A

;; ANSWER SECTION:
canind.co.                60      IN      A      208.91.112.55

;; Received 43 B
;; Time 2019-04-05 09:55:21 PDT
;; From 172.16.95.16@53(UDP) in 0.3 ms

```

The botnet domain query was blocked and redirected to the portal IP (208.91.112.55) .

### To check the DNS filter log in the GUI:

1. Go to *Log & Report > Security Events*.
2. Click the *DNS Query* card name to view the DNS query blocked as a botnet domain.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/04 16:43:59	dns	10.1.100.18	canind.co	A	1	Domain was blocked by dns botnet C&C			
2019/04/04 16:43:59	dns	10.1.100.18	canind.co	A	1				

### To check the DNS filter log in the CLI:

```
(vdom1) # execute log filter category utm-dns
```

```

(vdom1) # execute log display
2 logs found.
2 logs returned.

```

```

1: date=2019-04-04 time=16:43:59 logid="1501054601" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554421439 policyid=1 sessionid=14135

```

```
srcip=10.1.100.18 srcport=57447 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=24339
qname="canind.co" qtype="A" qtypeval=1 qclass="IN" msg="Domain was blocked by dns botnet
C&C" action="redirect" botnetdomain="canind.co"
```

```
2: date=2019-04-04 time=16:43:59 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554421439 policyid=1 sessionid=14135
srcip=10.1.100.18 srcport=57447 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=24339
qname="canind.co" qtype="A" qtypeval=1 qclass="IN"
```

## Botnet C&C IPDB blocking

FortiOS also maintains a botnet C&C IP address database (IPDB). If a DNS query response IP address (resolved IP address) matches an entry inside the botnet IPDB, this DNS query is blocked by the DNS filter botnet C&C.

### To view the botnet IPDB list in the CLI:

```
(global) # diagnose sys botnet list 9000 10
9000. proto=TCP ip=103.228.28.166, port=80, rule_id=7630075, name_id=3, hits=0
9001. proto=TCP ip=5.9.32.166, port=481, rule_id=4146631, name_id=7, hits=0
9002. proto=TCP ip=91.89.44.166, port=80, rule_id=48, name_id=96, hits=0
9003. proto=TCP ip=46.211.46.166, port=80, rule_id=48, name_id=96, hits=0
9004. proto=TCP ip=77.52.52.166, port=80, rule_id=48, name_id=96, hits=0
9005. proto=TCP ip=98.25.53.166, port=80, rule_id=48, name_id=96, hits=0
9006. proto=TCP ip=70.120.67.166, port=80, rule_id=48, name_id=96, hits=0
9007. proto=TCP ip=85.253.77.166, port=80, rule_id=48, name_id=96, hits=0
9008. proto=TCP ip=193.106.81.166, port=80, rule_id=48, name_id=96, hits=0
9009. proto=TCP ip=58.13.84.166, port=80, rule_id=48, name_id=96, hits=0
```

Select an IP address from the IPDB list and use a reverse lookup service to find its corresponding domain name. From your internal network PC, use a command line tool, such as dig or nslookup, to query this domain and verify that it is blocked by the DNS filter botnet C&C. For example:

```
# dig cpe-98-25-53-166.sc.res.rr.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 35135
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; cpe-98-25-53-166.sc.res.rr.com.                IN      A

;; ANSWER SECTION:
cpe-98-25-53-166.sc.res.rr.com. 60      IN      A      208.91.112.55

;; Received 64 B
;; Time 2019-04-05 11:06:47 PDT
;; From 172.16.95.16@53(UDP) in 0.6 ms
```

Since the resolved IP address matches the botnet IPDB, the query was blocked and redirected to the portal IP (208.91.112.55).

## To check the DNS filter log in the GUI:

1. Go to *Log & Report > DNS Query* to view the DNS query blocked by botnet C&C IPDB.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/05 11:06:48	dns	10.1.100.18	cpe-98-25-53-166.sc.res.rr.com	A	1	Domain was blocked by dns botnet C&C			
2019/04/05 11:06:48	dns	10.1.100.18	cpe-98-25-53-166.sc.res.rr.com	A	1				

## To check the DNS filter log in the CLI:

```
(global) # execute log filter category utm-dns
```

```
(global) # execute log display
```

```
2 logs found.
```


```
2 logs returned.
```

```
1: date=2019-04-05 time=11:06:48 logid="1501054600" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554487606 policyid=1 sessionid=55232
srcip=10.1.100.18 srcport=60510 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=16265
qname="cpe-98-25-53-166.sc.res.rr.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="93.184.216.34" msg="Domain was blocked by dns botnet C&C" action="redirect"
botnetip=98.25.53.166
```

```
2: date=2019-04-05 time=11:06:48 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554487606 policyid=1 sessionid=55232
srcip=10.1.100.18 srcport=60510 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=16265
qname="cpe-98-25-53-166.sc.res.rr.com" qtype="A" qtypeval=1 qclass="IN"
```

## To check botnet activity:

1. Go to *Dashboard > Status* and locate the *Botnet Activity* widget.

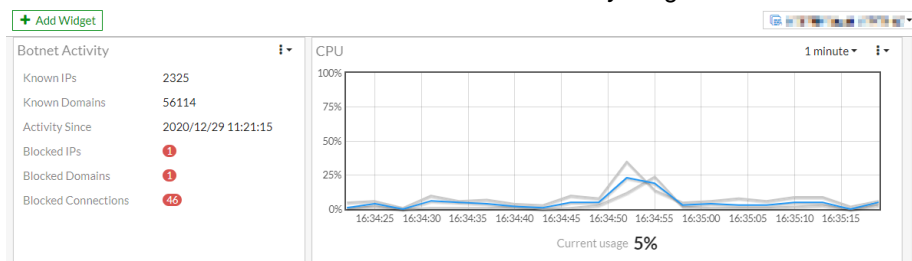

2. If you do not see the widget, click *Add Widget*, and add the *Botnet Activity* widget.

## DNS safe search

The DNS safe search option helps avoid explicit and inappropriate results in the Google, Bing, DuckDuckGo, Qwant, and YouTube search engines. The FortiGate responds with content filtered by the search engine.




For individual search engine safe search specifications, refer to the documentation for [Google](#), [Bing](#), [DuckDuckGo](#), [Qwant](#), and [YouTube](#).



A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).

### To configure safe search in the GUI:

1. Go to *Security Profiles > DNS Filter* and click *Create New*, or edit an existing profile.
2. Enable *Enforce 'Safe search' on Google, Bing, YouTube* (this setting also applies safe search on DuckDuckGo and Qwant).
3. For *Restrict YouTube Access*, click *Strict* or *Moderate*.

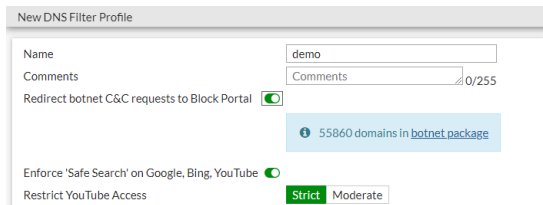

4. Configure the other settings as needed.
5. Click *OK*.

### To configure safe search in the CLI:

```
config dnsfilter profile
  edit "demo"
    config ftgd-dns
      set options error-allow
    config filters
      edit 2
        set category 2
      next
    ...
  end
end
set log-all-domain enable
set block-botnet enable
set safe-search enable
set youtube-restrict strict
next
end
```

### Verifying the logs

From your internal network PC, use a command line tool, such as dig or nslookup, and perform a DNS query on [www.bing.com](http://www.bing.com). For example:

```
# dig www.bing.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 46568
;; Flags: qr rd ra; QUERY: 1; ANSWER: 2; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.bing.com.                IN      A

;; ANSWER SECTION:
www.bing.com.                103     IN      CNAME    strict.bing.com
```

```
strict.bing.com.      103      IN      A      204.79.197.220
```

```
;; Received 67 B
;; Time 2019-04-05 14:34:52 PDT
;; From 172.16.95.16@53 (UDP) in 196.0 ms
```

The DNS query for `www.bing.com` returns with a CNAME `strict.bing.com`, and an A record for the CNAME. The user's web browser then connects to this address with the same search engine UI, but any explicit content search is filtered out.

### To check the DNS filter log in the GUI:

1. Go to *Log & Report > Security Events*.
2. Click the *DNS Query* card name.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/05 14:34:53	dns	10.1.100.18	www.bing.com	A	1	DNS Safe Search enforced		41	Search Engines and Portals
2019/04/05 14:34:53	dns	10.1.100.18	www.bing.com	A	1				

The DNS filter log in FortiOS shows a message of *DNS Safe Search enforced*.

### To check the DNS filter log in the CLI:

```
# execute log filter category utm-dns
# execute log display
2 logs found.
2 logs returned.
```

```
1: date=2019-04-05 time=14:34:53 logid="1501054804" type="utm" subtype="dns" eventtype="dns-response" level="notice" vd="vdom1" eventtime=1554500093 policyid=1 sessionid=65955
srcip=10.1.100.18 srcport=36575 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=59573
qname="www.bing.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="204.79.197.220" msg="DNS Safe Search enforced" action="pass" sscname="strict.bing.com" cat=41 catdesc="Search Engines and Portals"
```

```
2: date=2019-04-05 time=14:34:53 logid="1500054000" type="utm" subtype="dns" eventtype="dns-query" level="information" vd="vdom1" eventtime=1554500092 policyid=1 sessionid=65955
srcip=10.1.100.18 srcport=36575 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=59573
qname="www.bing.com" qtype="A" qtypeval=1 qclass="IN"
```

## Local domain filter

In addition to the FortiGuard category-based domain filter, you can define a local static domain filter to allow or block specific domains.

In a DNS filter profile, the local domain filter has a higher priority than FortiGuard category-based domain filter. DNS queries are scanned and matched first with the local domain filter.

- If the local domain filter list has no match, then the FortiGuard category-based domain filter is used. If a DNS query domain name rating belongs to the block category, the query is blocked and redirected. If the FortiGuard category-based filter has no match, then the original resolved IP address is returned to the client DNS resolver.
- If the local domain filter action is set to block and an entry matches, then that DNS query is blocked and redirected.
- If the local domain filter action is set to allow and an entry matches, it will skip the FortiGuard category-based domain filter and directly return to the client DNS resolver.

- If the local domain filter action is set to monitor and an entry matches, it will skip the FortiGuard category-based domain filter, directly return to the client DNS resolver, and log the resolution.

A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).

In this example, a DNS filter profile is configured and applied to a firewall policy running proxy-based inspection mode.

### To configure the local domain filter in the GUI:

1. Go to *Security Profiles > DNS Filter* and click *Create New*, or edit an existing profile.
2. Set *Name* to *demo*.
3. In the *Static Domain Filter* section, enable *Domain Filter*.
4. Click *Create New*. The *Create Domain Filter* pane opens.
5. Enter a domain, and select a *Type* and *Action*. This example has three filters:

Domain	Type	Action
www.fortinet.com	Simple	Allow
*.example.com	Wildcard	Redirect to Block Portal
google	Reg. Expression	Monitor

6. Click *OK*. The entry appears in the table.

Edit DNS Filter Profile

Static Domain Filter

Domain Filter ☒

[+ Create New](#) [Edit](#) [Delete](#)

Domain	Type	Action	Status
www.fortinet.com	simple	✓ Allow	✓ Enable
*.example.com	wildcard	✗ Redirect to Block Portal	✓ Enable
google	regex	👁 Monitor	✓ Enable

7. In the *FortiGuard Category Based Filter* table, set *General Interest - Business > Search Engines and Portals* to *Redirect to Block Portal*.
8. Configure the remaining settings as required.
9. Click *OK*.

### To apply the DNS filter to a policy-mode policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*, or edit an existing policy.
2. Configure the *Incoming Interface*, *Outgoing Interface*, *Source*, *Destination*, and *Service* as required.
3. Set *Inspection Mode* to *Proxy-based*.
4. Enable *DNS Filter* and select the *demo* filter.
5. Set *SSL Inspection* to *certificate-inspection*.
6. Configure the remaining settings as required.
7. Click *OK*.

**To configure the local domain filter in the CLI:**

```
config dnsfilter domain-filter
  edit 1
    set name "demo"
    set comment ''
    config entries
      edit 1
        set domain "www.fortinet.com"
        set type simple
        set action allow
        set status enable
      next
      edit 2
        set domain "*.example.com"
        set type wildcard
        set action block
        set status enable
      next
      edit 3
        set domain "google"
        set type regex
        set action monitor
        set status enable
      next
    end
  config domain-filter
    set domain-filter-table 1
  end
  config ftgd-dns
    config filters
      edit 23
        set category 41
        set action block
      next
    end
  end
next
end
```

Wildcard entries are converted to regular expressions by FortiOS. As a result, wildcards will match any suffix, as long as there is a word boundary following the search term.

For example:



```
config entries
  edit 1
    set domain "*.host"
    set type wildcard
  next
end
```

will match `wp36.host` and `wp36.host.pressdns.com`, but not `wp36.host123.pressdns.com`.

To avoid this, use an explicit regular expression search string:

```
config entries
  edit 1
    set domain "^.*\\.host$"
    set type regexp
  next
end
```

### To apply the DNS filter to a proxy-mode policy in the CLI:

```
config firewall policy
  edit 1
    set name "port3-port1"
    set srcintf "port3"
    set dstintf "port1"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set ssl-ssh-profile "certificate-inspection"
    set dnsfilter-profile "demo"
    set logtraffic all
    set nat enable
  next
end
```

## Testing and Verification

On a client computer, perform DNS lookup on the three domains:

Domain	DNS query result	Log
www.fortinet.com	Allowed. Resolved to correct IP.	None

Domain	DNS query result	Log
www.example.com	Blocked. Redirected to IP of block page.	Deny log
www.google.com	Allowed. Resolved to correct IP.	Allow log

### To check the DNS filter log in the GUI:

1. Go to *Log & Report > Security Events*.
2. Click the *DNS Query* card name to show the logs.

### To check the DNS filter log in the CLI:

```
# execute log display
71 logs found.
10 logs returned.
```

```
1: date=2022-08-17 time=18:16:50 eventtime=1660785410733825945 tz="-0700" logid="1501054401"
type="utm" subtype="dns" eventtype="dns-response" level="information" vd="root" policyid=3
poluid="6b80057c-1e76-51ed-c629-5fe117f24362" policytype="policy" sessionid=820031
srcip=192.168.0.10 srcport=52674 srccountry="Reserved" srcintf="port3" srcintfrole="lan"
dstip=8.8.8.8 dstport=53 dstcountry="United States" dstintf="port1" dstintfrole="wan"
proto=17 profile="demo" xid=4352 qname="www.google.com" qtype="AAAA" qtypeval=28 qclass="IN"
ipaddr="2607:f8b0:400a:803::2004" msg="Domain was allowed because it is in the domain-filter
list" action="pass" domainfilteridx=1 domainfilterlist="demo"
```

```
2: date=2022-08-17 time=18:16:50 eventtime=1660785410718697625 tz="-0700" logid="1501054401"
type="utm" subtype="dns" eventtype="dns-response" level="information" vd="root" policyid=3
poluid="6b80057c-1e76-51ed-c629-5fe117f24362" policytype="policy" sessionid=820030
srcip=192.168.0.10 srcport=52673 srccountry="Reserved" srcintf="port3" srcintfrole="lan"
dstip=8.8.8.8 dstport=53 dstcountry="United States" dstintf="port1" dstintfrole="wan"
proto=17 profile="demo" xid=4096 qname="www.google.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="172.217.14.228" msg="Domain was allowed because it is in the domain-filter list"
action="pass" domainfilteridx=1 domainfilterlist="demo"
```

```
3: date=2022-08-17 time=18:16:40 eventtime=1660785401007448812 tz="-0700" logid="1501054400"
type="utm" subtype="dns" eventtype="dns-response" level="warning" vd="root" policyid=3
poluid="6b80057c-1e76-51ed-c629-5fe117f24362" policytype="policy" sessionid=820019
srcip=192.168.0.10 srcport=59950 srccountry="Reserved" srcintf="port3" srcintfrole="lan"
dstip=8.8.8.8 dstport=53 dstcountry="United States" dstintf="port1" dstintfrole="wan"
proto=17 profile="demo" xid=3840 qname="www.example.com" qtype="AAAA" qtypeval=28
qclass="IN" ipaddr="2620:101:9000:53::55" msg="Domain was blocked because it is in the
domain-filter list" action="redirect" domainfilteridx=1 domainfilterlist="demo"
```

```
4: date=2022-08-17 time=18:16:40 eventtime=1660785401006872790 tz="-0700" logid="1501054400"
type="utm" subtype="dns" eventtype="dns-response" level="warning" vd="root" policyid=3
poluid="6b80057c-1e76-51ed-c629-5fe117f24362" policytype="policy" sessionid=820018
srcip=192.168.0.10 srcport=59949 srccountry="Reserved" srcintf="port3" srcintfrole="lan"
dstip=8.8.8.8 dstport=53 dstcountry="United States" dstintf="port1" dstintfrole="wan"
proto=17 profile="demo" xid=3584 qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="208.91.112.55" msg="Domain was blocked because it is in the domain-filter list"
action="redirect" domainfilteridx=1 domainfilterlist="demo"
```

## DNS translation

This setting allows you to translate a DNS resolved IP address to another IP address you specify on a per-policy basis.

For example, website A has a public address of 1.2.3.4. However, when your internal network users visit this website, you want them to connect to the internal host 192.168.3.4. You can use DNS translation to translate the DNS resolved address 1.2.3.4 to 192.168.3.4. Reverse use of DNS translation is also applicable. For example, if you want a public DNS query of your internal server to get a public IP address, then you can translate a DNS resolved private IP to a public IP address.

A DNS filter profile can be applied in a policy to scan DNS traffic traversing the FortiGate (see [Configuring a DNS filter profile on page 1368](#)), or applied on the DNS server interface (see [Applying DNS filter to FortiGate DNS server on page 1388](#)).

### Sample configuration

This configuration forces the DNS filter profile to translate 93.184.216.34 (www.example.com) to 192.168.3.4. When internal network users perform a DNS query for www.example.com, they do not get the original www.example.com IP address of 93.184.216.34. Instead, it is replaced with 192.168.3.4.

#### To configure DNS translation in the GUI:

1. Go to *Security Profiles > DNS Filter* and click *Create New*, or edit an existing profile.
2. In the *Static Domain Filter* section, enable *DNS Translation*.
3. Click *Create New*. The *New DNS Translation* pane opens.
4. Enter the *Original Destination* (the domain's original IP address), the *Translated Destination* IP address, and the *Network Mask*.

New DNS Translation

Original Destination	93.184.216.34
Translated Destination	192.168.3.4
Network Mask	255.255.255.255
Status	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

OK Cancel

5. Click *OK*. The entry appears in the table.

New DNS Filter Profile

Static Domain Filter

Domain Filter ☐

External IP Block Lists ☐

DNS Translation ☒

+ Create New Edit Delete Search

Original Destination	Translated Destination	Network Mask	Status
93.184.216.34	192.168.3.4	255.255.255.255	<input checked="" type="radio"/> Enable

Options

Redirect Portal IP ☒ Use FortiGuard Default ☐ Specify 208.91.112.55

Allow DNS requests when a rating error occurs ☐

Log all DNS queries and responses ☐

OK Cancel

6. Configure the other settings as needed.
7. Click OK.

### To configure DNS translation in the CLI:

```
config dnsfilter profile
  edit "demo"
    set comment ''
    ...
    config dns-translation
      edit 1
        set src 93.184.216.34
        set dst 192.168.3.4
        set netmask 255.255.255.255
      next
    end
    set redirect-portal 0.0.0.0
    set redirect-portal6 ::
    set youtube-restrict strict
  next
end
```

### To check DNS translation using a command line tool before DNS translation:

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 27030
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.                IN      A

;; ANSWER SECTION:
www.example.com.      33946   IN      A      93.184.216.34

;; AUTHORITY SECTION:
example.com.          18578   IN      NS      b.iana-servers.net.
example.com.          18578   IN      NS      a.iana-servers.net.

;; Received 97 B
;; Time 2019-04-08 10:47:26 PDT
;; From 172.16.95.16@53(UDP) in 0.5 ms
```

### To check DNS translation using a command line tool after DNS translation:

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 62060
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.                IN      A

;; ANSWER SECTION:
www.example.com.      32491   IN      A      192.168.3.4

;; AUTHORITY SECTION:
```



```
example.com.          17123   IN      NS      b.iana-servers.net.
example.com.          17123   IN      NS      a.iana-servers.net.
```

```
;; Received 97 B
;; Time 2019-04-08 11:11:41 PDT
;; From 172.16.95.16@53(UDP) in 0.5 ms
```

## DNS translation network mask

The following is an example of DNS translation that uses a network mask:

### To configure DNS translation in the CLI:

```
config dns-translation
    edit 1
        set src 93.184.216.34
        set dst 1.2.3.4
        set netmask 255.255.224.0
    next
end
```

### To check DNS translation using a command line tool after DNS translation:

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 6736
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.                IN      A

;; ANSWER SECTION:
www.example.com.          29322   IN      A      1.2.24.34

;; AUTHORITY SECTION:
example.com.              13954   IN      NS      a.iana-servers.net.
example.com.              13954   IN      NS      b.iana-servers.net.

;; Received 97 B
;; Time 2019-04-08 12:04:30 PDT
;; From 172.16.95.16@53(UDP) in 2.0 ms
```

The binary arithmetic to convert 93.184.216.34 to 1.2.3.4 with the subnet mask is as follows:

#### 1. AND src(Original IP) with negative netmask (93.184.216.34 & ~255.255.224.0):

```
01011101.10111000.11011000.00100010 93.184.216.34
00000000.00000000.00011111.11111111 ~255.255.224.0
----- &
00000000.00000000.00011000.00100010 0.0.24.34
```

#### 2. AND dst(Translated IP) with netmask:

```
00000001.00000010.00000011.00000100 1.2.3.4
11111111.11111111.11100000.00000000 255.255.224.0
----- &
00000001.00000010.00000000.00000000 1.2.0.0
```

#### 3. Final step 2 bitwise-OR 3:

```

00000000.00000000.00011000.00100010 0.0.24.34
00000001.00000010.00000000.00000000 1.2.0.0
-----
00000001.00000010.00011000.00100010 1.2.24.34

```

## Applying DNS filter to FortiGate DNS server

You can configure a FortiGate as a DNS server in your network. When you enable DNS service on a specific interface, the FortiGate will listen for DNS service on that interface.

Depending on the configuration, DNS service works in three modes: *Recursive*, *Non-Recursive*, or *Forward to System DNS* (server). For details on how to configure the FortiGate as a DNS server and configure the DNS database, see [FortiGate DNS server on page 242](#).

You can apply a DNS filter profile to *Recursive* and *Forward to System DNS* mode. This is the same as the FortiGate working as a transparent DNS proxy for DNS relay traffic.

### To configure DNS service in the GUI:

1. Go to *Network > DNS Servers* (if this option is not available, go to *System > Feature Visibility* and enable *DNS Database*).
2. In the *DNS Service on Interface* section, click *Create New* and select an *Interface* from the dropdown.
3. For *Mode*, select *Forward to System DNS*.
4. Enable *DNS Filter* and select a profile from the dropdown.

5. Click **OK**.

### To configure DNS service in the CLI:

```

config system dns-server
    edit "port10"
        set mode forward-only
        set dnsfilter-profile "demo"
    next
end

```

### To check DNS service with a DNS filter profile using a command line tool:

In this example, port10 is enabled as a DNS service with the DNS filter profile demo. The IP address of port10 is 10.1.100.5, and the DNS filter profile is configured to block category 52 (information technology). From your internal network PC, use a command line tool, such as dig or nslookup, to perform a DNS query. For example:

```

# dig @10.1.100.5 www.fortinet.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 52809
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

```

```
;; QUESTION SECTION:
;; www.fortinet.com.          IN      A

;; ANSWER SECTION:
www.fortinet.com.        60      IN      A      208.91.112.55


;; Received 50 B
;; Time 2019-04-08 14:36:34 PDT
;; From 10.1.100.5@53(UDP) in 13.6 ms
```

The relay DNS traffic was filtered based on the DNS filter profile configuration. It was blocked and redirected to the portal IP (208.91.112.55).

## DNS inspection with DoT and DoH

DNS over TLS (DoT) and DNS over HTTPS (DoH) are supported in DNS inspection. Prior to 7.0, DoT and DoH traffic silently passes through the DNS proxy. In 7.0, the WAD is able to handle DoT and DoH, and redirect DNS queries to the DNS proxy for further inspection.

In the following examples, the FortiGate inspects DNS queries made over DoT and DoH to a Cloudflare DNS server. The DNS filter profile blocks the education category.

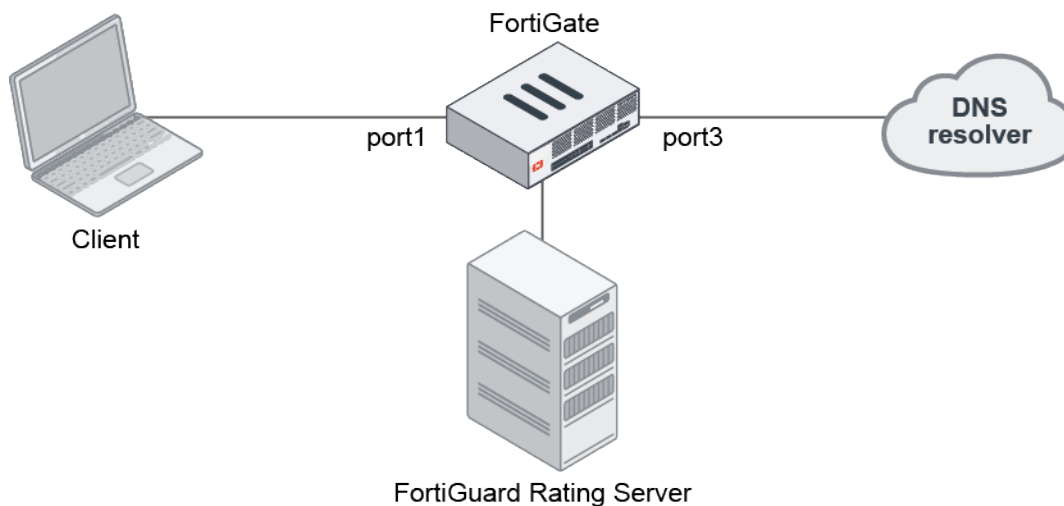

### To configure DNS inspection of DoT and DoH queries in the GUI:

1. Configure the SSL-SSH profile:
  - a. Go to *Security Profiles > SSL/SSH Inspection* and click *Create New*.
  - b. Set *Inspection method* to *Full SSL Inspection*. DoT and DoH can only be inspected using doing deep inspection.

- c. In the *Protocol Port Mapping* section, enable *DNS over TLS*.

- d. Configure the other settings as needed.

- e. Click **OK**.

2. Configure the DNS filter profile:

- a. Go to *Security Profiles > DNS Filter* and click *Create New*.

- b. Enable *Redirect botnet C&C requests to Block Portal*.

- c. Enable *FortiGuard Category Based Filter* and set the *Action* for the *Education* category to *Redirect to Block Portal*.

- d. Configure the other settings as needed.

- e. Click **OK**.

3. Configure the firewall policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.

- b. Enable *DNS Filter* and select the profile you created.

- c. For *SSL Inspection*, select the profile you created.

- d. Configure the other settings as needed.

- e. Click **OK**.

## To configure DNS inspection of DoT and DoH queries in the CLI:

1. Configure the SSL-SSH profile:

```
config firewall ssl-ssh-profile
  edit "ssl"
    config dot
      set status deep-inspection
      set client-certificate bypass
      set unsupported-ssl-cipher allow
      set unsupported-ssl-negotiation allow
```

```
        set expired-server-cert block
        set revoked-server-cert block
        set untrusted-server-cert allow
        set cert-validation-timeout allow
        set cert-validation-failure block
    end
next
end
```

## 2. Configure the DNS filter profile:

```
config dnsfilter profile
    edit "dnsfilter"
        config ftgd-dns
            config filters
                edit 1
                    set category 30
                    set action block
                next
            end
        end
        set block-botnet enable
    next
end
```

## 3. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
        set webfilter-profile "webfilter"
        set dnsfilter-profile "dnsfilter"
        set nat enable
    next
end
```

## Testing the connection

### To query DNS over TLS:

1. Send a DNS query over TLS to the Cloudflare server 1.1.1.1 (this example uses `kdig` on an Ubuntu client). The `www.ubc.ca` domain belongs to the education category:

```
~$ kdig -d @1.1.1.1 +tls-ca +tls-host=cloudflare-dns.com www.ubc.ca
;; DEBUG: Querying for owner(www.ubc.ca.), class(1), type(1), server(1.1.1.1), port
(853), protocol(TCP)
;; DEBUG: TLS, imported 128 system certificates
```

```
;; DEBUG: TLS, received certificate hierarchy:
;; DEBUG: #1, C=US,ST=California,L=San Francisco,O=Cloudflare\, Inc.,CN=cloudflare-
dns.com
;; DEBUG:      SHA-256 PIN: elpYCnCs9ZtkQBI4+cb2QtZcyO15UI9jMkSvbTsTad0=
;; DEBUG: #2, C=US,ST=California,L=Sunnyvale,O=Fortinet,OU=Certificate
Authority,CN=FG3H1E5818903681,EMAIL=support@fortinet.com
;; DEBUG:      SHA-256 PIN: s48VtdOD1NZfAG2g/92hMLhitU51qsP9pkHAUtTJ+f4=
;; DEBUG: TLS, skipping certificate PIN check
;; DEBUG: TLS, The certificate is trusted.
;; TLS session (TLS1.3)-(ECDHE-SECP256R1)-(ECDSA-SECP256R1-SHA256)-(AES-256-GCM)
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 56850
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.ubc.ca.                IN      A


;; ANSWER SECTION:
www.ubc.ca.                60      IN      A      208.91.112.55

;; Received 44 B
;; Time 2021-03-12 06:53:37 UTC
;; From 1.1.1.1@853(TCP) in 6.0 ms
```

In this query, the FortiGate inspects the DNS query to the Cloudflare DNS server. It replaces the result with the IP of the FortiGuard block page, which successfully blocks the query.

### To query DNS over HTTPS:

1. In your browser, enable DNS over HTTPS.
2. Go to [www.ubc.ca](https://www.ubc.ca). The website is redirected to the block page.

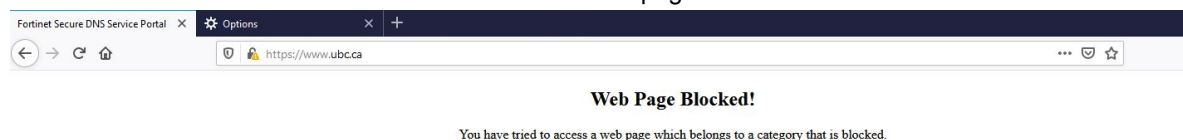

## Troubleshooting for DNS filter

If you have trouble with the DNS filter profile in your policy, start with the following troubleshooting steps:

- Check the connection between the FortiGate and FortiGuard DNS rating server (SDNS server).
- Check that the FortiGate has a valid FortiGuard web filter license.
- Check the FortiGate DNS filter configuration.

### Checking the connection between the FortiGate and FortiGuard SDNS server

You need to ensure the FortiGate can connect to the FortiGuard SDNS server. By default, the FortiGate uses DNS over TLS (DoT, TCP port 853) to connect to the SDNS server. See [DNS over TLS and HTTPS on page 250](#) for more information.

**To check the connection between the FortiGate and SDNS server:**

1. Verify the FortiGuard SDNS server information:

```
# diagnose test application dnsproxy 3
...
SDNS servers:
173.243.140.53:853 vrf=0 tz=-480 encrypt=dot req=0 to=0 res=0 rt=34 ready=1 timer=0
probe=0 failure=0 last_failed=0
```

The SDNS server IP address might be different depending on location (in this example, it is 173.243.140.53:853).

2. In the management VDOM, check the communication between the FortiGate and the SDNS server:

```
# execute ping 173.243.140.53
```

3. If FortiGuard is not reachable using anycast, configure the default FortiGuard SDNS (unicast) server (208.91.112.220):

```
config system fortiguard
    set fortiguard-anycast disable
    set sdns-server-ip "208.91.112.220"
end
```

4. Verify the list of SDNS servers again:

```
# diagnose test application dnsproxy 3
FGD_DNS_SERVICE_LICENSE:
server=208.91.112.220:53, expiry=2023-10-28, expired=0, type=2
server=83.231.212.53:53, expiry=2023-10-28, expired=0, type=2
```

The default FortiGuard SDNS server should work in most cases; however, you can switch to another server to see if it improves latency.



By default, DNS filtering connects to the FortiGuard secure DNS server over anycast and uses DoT (TCP port 853) when the default settings of `fortiguard-anycast enable` and `fortiguard-anycast-source fortinet` are configured. Disabling `fortiguard-anycast` will force the FortiGate to use cleartext (UDP port 53) instead of DoT (TCP port 853) in addition to disabling FortiGuard secure DNS over anycast.

## Checking the FortiGuard DNS rating service license

The FortiGuard DNS rating service shares the license with the FortiGuard web filter, so you must have a valid web filter license for the DNS rating service to work. While the license is shared, the DNS rating service uses a separate connection mechanism from the web filter rating.

**To check the DNS rating service license in the CLI:**

1. View the DNS settings:

```
# diagnose test application dnsproxy 3
```

2. Find the `FGD_DNS_SERVICE_LICENSE` line and check that the license has not expired:

```
FGD_DNS_SERVICE_LICENSE:
server=173.243.140.53:853, expiry=2023-10-28, expired=0, type=2
```

### 3. Find the `SDNS servers` line to view the functioning servers:

```
SDNS servers:
173.243.140.53:853 vrf=0 tz=-480 encrypt=dot req=0 to=0 res=0 rt=34 ready=1 timer=0
probe=0 failure=0 last_failed=0
```

## Checking the FortiGate DNS filter profile configuration

### To check the DNS filter profile configuration:

1. In FortiOS, create a local domain filter and set the *Action* to *Redirect to Block Portal* (see [Local domain filter on page 1380](#)).
2. Apply this DNS filter profile to the policy.
3. From the client PC, perform a DNS query on this domain. If you get the profile's redirected portal address, this means that the DNS filter profile works as expected.

## Additional troubleshooting

Use `diagnose test application dnsproxy <test level>` to troubleshoot further DNS proxy information, where:

Test level	Action
1	Clear DNS cache
2	Show statistics
3	Dump DNS setting
4	Reload FQDN
5	Requery FQDN
6	Dump FQDN
7	Dump DNS cache
8	Dump DNS database
9	Reload DNS database
10	Dump secure DNS policy/profile
11	Dump botnet domain
12	Reload secure DNS setting
13	Show hostname cache
14	Clear hostname cache
15	Show SDNS rating cache
16	Clear SDNS rating cache
17	Show DNS debug bit mask




Test level	Action
18	Show DNS debug object members
99	Restart the dnsproxy worker

### To debug DNS proxy details:

```
# diagnose debug application dnsproxy -1
# diagnose debug {enable | disable}
```

## Application control

FortiGate can recognize network traffic generated by a large number of applications. Application control sensors specify what action to take with the application traffic. Application control uses IPS protocol decoders that can analyze network traffic to detect application traffic, even if the traffic uses non-standard ports or protocols. Application control supports traffic detection using the HTTP protocol (versions 1.0, 1.1, and 2.0).

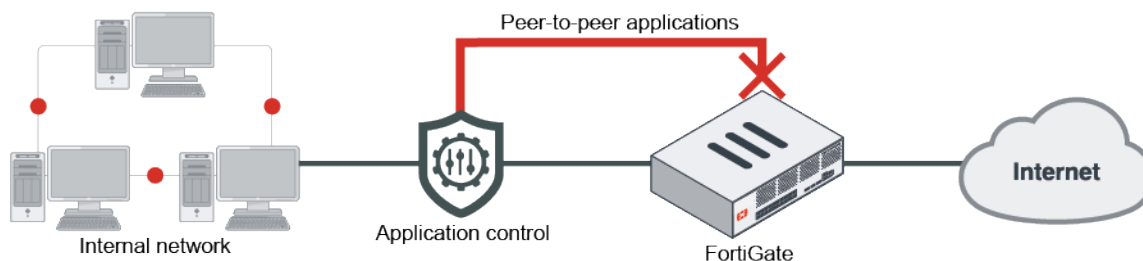

FortiOS includes three preloaded application sensors:

- *default* (monitors all applications)
- *wifi-default* (default configuration for offloading WiFi traffic)
- *block-high-risk*

You can customize these sensors, or you can create your own to log and manage the applications on your network.

Once configured, you can add the application sensor to a firewall policy.



This functionality requires a subscription to FortiGuard Application Control.

The following topics provide information about application control:

- [Configuring an application sensor on page 1396](#)
- [Basic category filters and overrides on page 1397](#)
- [Excluding signatures in application control profiles on page 1400](#)
- [Port enforcement check on page 1402](#)
- [Protocol enforcement on page 1402](#)
- [SSL-based application detection over decrypted traffic in a sandwich topology on page 1404](#)
- [Matching multiple parameters on application control signatures on page 1405](#)

- [Application signature dissector for DNP3 on page 1408](#)
- [Blocking QUIC manually on page 1408](#)

## Configuring an application sensor

FortiGate can recognize network traffic generated by a large number of applications using application control, which relies on IPS protocol decoders. Application sensors control what action is taken with application traffic.

### To configure an application sensor:

1. Go to *Security Profiles > Application Control* and click *Create New*.
2. Configure the following settings:

<i>Name</i>	Enter a unique name for the sensor.
<i>Comments</i>	Enter a comment (optional).
<i>Categories</i>	Configure the action to take on groups of signatures based on their category type. Applications belonging to the category trigger the configured action: monitor, allow, block, or quarantine. See <a href="#">Basic category filters and overrides on page 1397</a> for more information.
<i>Network Protocol Enforcement</i>	Enable/disable the enforcement of protocols over selected ports. See <a href="#">Protocol enforcement on page 1402</a> for more information.
<i>Application and Filter Overrides</i>	Configure multiple applications signatures with a dedicated action for a single sensor. Filters can be added based on the application category, behavior, popularity, protocol, risk, technology, or vendor subtype. For more information, see <ul style="list-style-type: none"> <li>• <a href="#">Configuring application and filter overrides on page 1398</a></li> <li>• <a href="#">Matching multiple parameters on application control signatures on page 1405</a></li> <li>• <a href="#">Blocking applications with custom signatures on page 1547</a></li> </ul>
<i>Block applications detected on non-default ports</i>	When enabled: <ul style="list-style-type: none"> <li>• For monitor and allow actions, applications will be blocked if detected on non-default ports (as defined in FortiGuard application signatures).</li> <li>• Block actions still block traffic for the application regardless of the port.</li> </ul> See <a href="#">Port enforcement check on page 1402</a> for more information.
<i>Allow and Log DNS Traffic</i>	Allow and log DNS application protocol signatures.
<i>Replacement Messages for HTTP-based Applications</i>	Enable/disable replacement messages for blocked applications. See <a href="#">Replacement messages on page 2484</a> for information about replacement messages.

3. Click *OK*.

## Basic category filters and overrides


When creating an application sensor, you can define the applications that you want to control. You can add applications and filters using categories, application overrides, and/or filter overrides with designated actions (monitor, allow, block, or quarantine).

Action	Description
<b>Monitor</b>	Passes the traffic and generates a log message.
<b>Allow</b>	Passes the traffic but does not generate a log message.
<b>Block</b>	Drops the detected traffic and generates a log message.
<b>Quarantine</b>	Blocks the traffic from an attacker IP address until the expiration time is reached and generates a log message.

For more information about application control logs, see [Security Events log page on page 2977](#).

### To configure category filters in the GUI:

1. Go to *Security Profiles > Application Control* and click *Create New*, or edit an existing sensor.
2. Under *Categories*, click the icon next to the category name to set the action or view the application signatures.

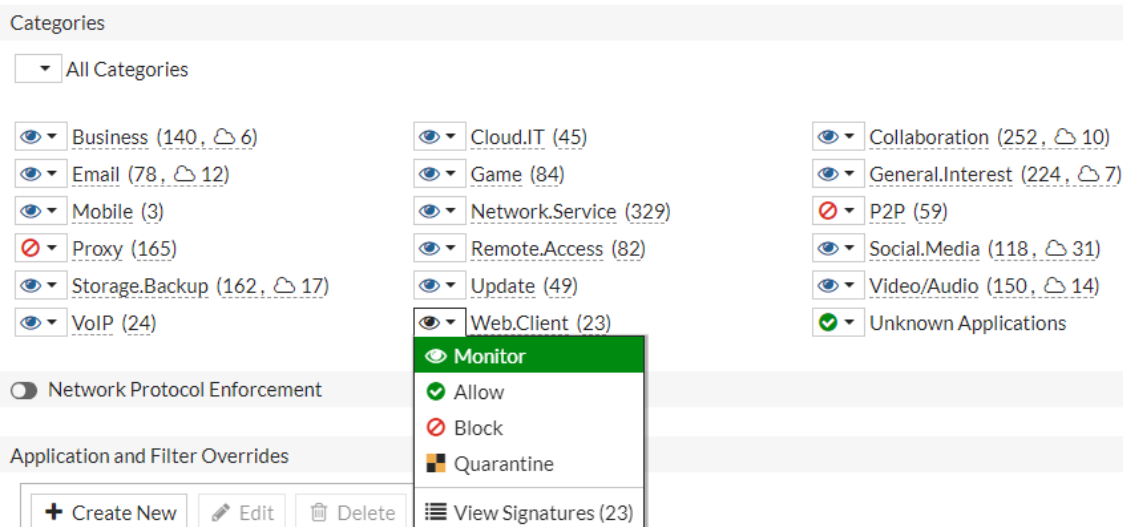

3. If you select the *Quarantine* action, the *Quarantine Duration* pane will open. Enter the duration values and click *OK*.

Quarantine Duration

Days:

Hours:

Minutes:

4. Click *OK*.

### To configure category filters in the CLI:

```
config application list
  edit <name>
    config entries
      edit <id>
        set category <id>
        set action {pass | block | reset}
        set quarantine {none | attacker}
        set quarantine-expiry <###d##h##m>
        set log {enable | disable}
      next
    end
  next
end
```

### Configuring application and filter overrides

Multiple application signatures can be added for one sensor with a designated action. Filters can be added based on behavior, application category, popularity, protocol, risk, technology, or vendor subtypes.

### To configure overrides in the GUI:


1. Go to *Security Profiles > Application Control* and click *Create New*, or edit an existing sensor.
2. In the *Application and Filter Overrides* table, click *Create New*.
3. Add an application:
  - a. For *Type*, select *Application*.
  - b. Select an *Action* from the dropdown.
  - c. In the *Search* box, enter an application name and press *Enter*.
  - d. In the search results, select desired the applications (you can select multiple applications) and click *Add Selected*.

The screenshot shows the 'Add New Override' dialog in the FortiOS GUI. The 'Type' is set to 'Application' and the 'Action' is 'Block'. The search results show a list of applications, including Facebook, Facebook.App, and various game and social media apps. The 'Add Selected' button is highlighted.

Name	Category	Technology	Popularity	Risk
Facebook	Social Media	Browser-Based	★★★★★	Low
Facebook.App	Social Media	Browser-Based	★★★★★	Low
Facebook.App_AngryBirds	Game	Browser-Based	★★★★★	Low
Facebook.App_AvengersAlli...	Game	Browser-Based	★★★★★	Low
Facebook.App_BubbleFairyl...	Game	Browser-Based	★★★★★	Low
Facebook.App_BubbleSafari...	Game	Browser-Based	★★★★★	Low
Facebook.App_CandyCrush...	Game	Browser-Based	★★★★★	Low
Facebook.App_CastleVille...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_CityVille...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_CriminalCase...	Game	Browser-Based	★★★★★	Low
Facebook.App_EmpiresAnd...	Game	Browser-Based	★★★★★	Low
Facebook.App_HappyLand...	Game	Browser-Based	★★★★★	Low
Facebook.App_IAmPlayr...	Game	Browser-Based	★★★★★	Low
Facebook.App_Kongregate...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_MafiaWars...	Game	Browser-Based	★★★★★	Low
Facebook.App_Miscrits...	Game	Browser-Based	★★★★★	Low
Facebook.App_MyTrib...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_NinjaSaga...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_PetRescueSa...	Game	Browser-Based	★★★★★	Low
Facebook.App_Playhappyf...	Game	Browser-Based	★★★★★	Low
Facebook.App_RestaurantCL...	Social Media	Browser-Based	★★★★★	Low
Facebook.App_SocialB...	Social Media	Browser-Based	★★★★★	Low

- e. Click *OK*.

4. Add a filter:
  - a. In the *Application and Filter Overrides* table, click *Create New*.
  - b. For *Type*, select *Filter*.
  - c. Select an *Action* from the dropdown.
  - d. In the *Filter* field, click the +. The *Select Entries* pane opens, and you can search based on filter subtypes. This example has excessive bandwidth (under behavior) and game (under application category).

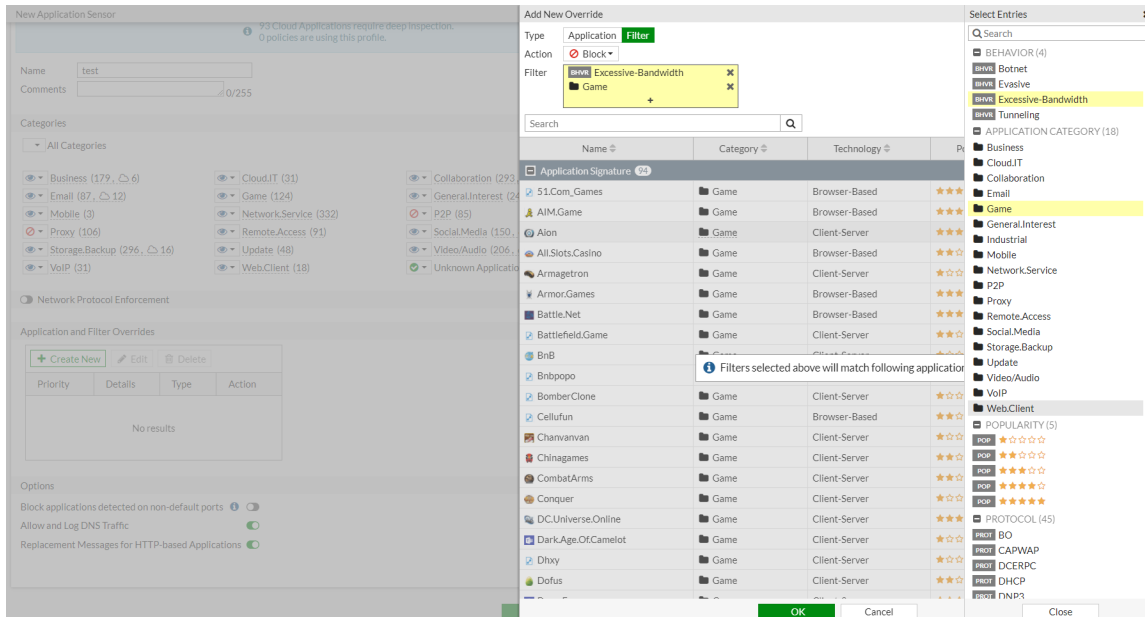

- e. Click OK.
5. Click OK.

### To configure overrides in the CLI:

```
config application list
  edit <name>
    config entries
      edit <id>
        set protocols <integer>
        set risk <integer>
        set vendor <id>
        set technology <id>
        set behavior <id>
        set popularity <integer>
        set action {pass | block | reset}
        set log {enable | disable}
      next
    end
  next
end
```

protocols <integer>      Application protocol filter (0 - 47, or all).

risk <integer>      Risk or impact of allowing traffic from this application to occur (1 - 5; low (1), elevated (2), medium (3), high (4), and critical (5)).

vendor <id>	Application vendor filter (0 - 25, or all).
technology <id>	Application technology filter: <ul style="list-style-type: none"> <li>• all</li> <li>• 0 (network-protocol)</li> <li>• 1 (browser-based)</li> <li>• 2 (client-server)</li> <li>• 4 (peer-to-peer)</li> </ul>
behavior <id>	Application behavior filter: <ul style="list-style-type: none"> <li>• all</li> <li>• 2 (botnet)</li> <li>• 3 (evasive)</li> <li>• 5 (excessive bandwidth)</li> <li>• 6 (tunneling)</li> <li>• 9 (cloud)</li> </ul>
popularity <integer>	Application popularity filter (1 - 5, from least to most popular).
action {pass   block   reset}	Pass/block traffic or reset the connection for traffic from this application (default = block).
log {enable   disable}	Enable/disable logging for this application list (default = enable).

## Excluding signatures in application control profiles

In an application control list, the exclusion option allows users to specify a list of applications they wish to exclude from an entry filtered by category, technology, or others. By excluding the signature, the application is no longer processed on the entry in which it is excluded, but may match subsequent entries that exist.

### To configure signature exclusion:

```
config application list
  edit <name>
    config entries
      edit <id>
        set category <id>
        set exclusion <application id>
        set action {pass | block | reset}
      next
    end
  next
end
```

## Sample configurations

In the following example, category 23 (social media) is blocked in the entries, and signature 34527 (Instagram) is excluded from this entry. Traffic to Instagram will pass because the signature is removed from entry 1 and the action of other-application-action is set to pass.

**To configure signature exclusion:**

```
config application list
  edit "test"
    set other-application-action pass
    set unknown-application-action pass
    set other-application-log enable
    set unknown-application-log enable
    config entries
      edit 1
        set category 23
        set exclusion 34527
        set action block
      next
    end
  next
end
```

In the following example, entry 1 is configured so that category 23 (social media) is set to pass and signature 34527 (Instagram) is excluded. In entry 2, application 34527 (Instagram) is blocked, so the traffic to Instagram will be blocked, even though it is excluded in entry 1. Traffic to other signatures in category 23, such as Facebook, will still pass.

**To configure signature exclusion:**

```
config application list
  edit "test"
    set other-application-action pass
    set unknown-application-action pass
    set other-application-log enable
    set unknown-application-log enable
    config entries
      edit 1
        set category 23
        set exclusion 34527
        set action pass
      next
      edit 2
        set application 34527
        set action block
      next
    end
  next
end
```

In the following example, an explicit proxy is behind the FortiGate with an excluded signature for 107347980 (Proxy.HTTP) and category 6 (proxy) is set to block. The client will allow normal proxy traffic to pass, but it will discard all proxy application traffic (such as KProxy, Tor, and so on).

**To configure signature exclusion:**

```
config application list
  edit "test"
    set other-application-action pass
    set unknown-application-action pass
    set other-application-log enable
    set unknown-application-log enable
```

```
        config entries
            edit 1
                set category 6
                set exclusion 107347980
                set action block
            next
        end
    next
end
```

## Port enforcement check

Most networking applications run on specific ports. For example, SSH runs on port 22, and Facebook runs on ports 80 and 443.

If the default network service is enabled in the application control profile, a port enforcement check is done at the application profile level, and any detected application signatures running on the non-standard TCP/IP port are blocked. This means that each allowed application runs on its default port.

### To configure port enforcement check:

```
config application list
    edit <name>
        set enforce-default-app-port enable
        config entries
            edit 1
                set application 15896
                set action pass
            next
        end
    next
end
```

For example, when applying this application control sensor, FTP traffic (application 15896) with the standard port (port 21) is allowed, while the non-standard port (port 2121) is blocked.

## Protocol enforcement

Protocol enforcement allows you to configure networking services (e.g. FTP, HTTP, HTTPS) on known ports (e.g. 21, 80, 443). For protocols that are not allowlisted under select ports, the IPS engine performs the violation action to block, allow, or monitor that traffic.

This feature can be used in the following scenarios:

- When one protocol dissector confirms the service of network traffic, protocol enforcement can check whether the confirmed service is allowlisted under the server port. If it is not allowlisted, the traffic is considered a violation and IPS can take the action specified in the configuration (block or monitor it).
- When there is no confirmed service for the network traffic, the traffic is considered a service violation if IPS dissectors rule out all of the services enforced under its server port.


In an applicable profile, a default network service list can be created to associate well known ports with accepted services.



In the following example, an application sensor is configured to enforce HTTP on port 80 (block), and DNS on port 53 (monitor).


### To configure protocol enforcement in the GUI:

1. Go to *Security Profiles > Application Control*.
2. Create a new application sensor or edit an existing one.
3. Enable *Network Protocol Enforcement*.  
Enforcement entries can be created, edited, or deleted to configure network services on certain ports and determine the violation action.
4. In the *Network Protocol Enforcement* table, click *Create New*.
5. Configure the entry for HTTP:
  - a. For *Port*, enter 80.
  - b. For *Enforced protocols*, select *HTTP*.
  - c. For *Violation action*, select *Block*.
  - d. Click *OK*.

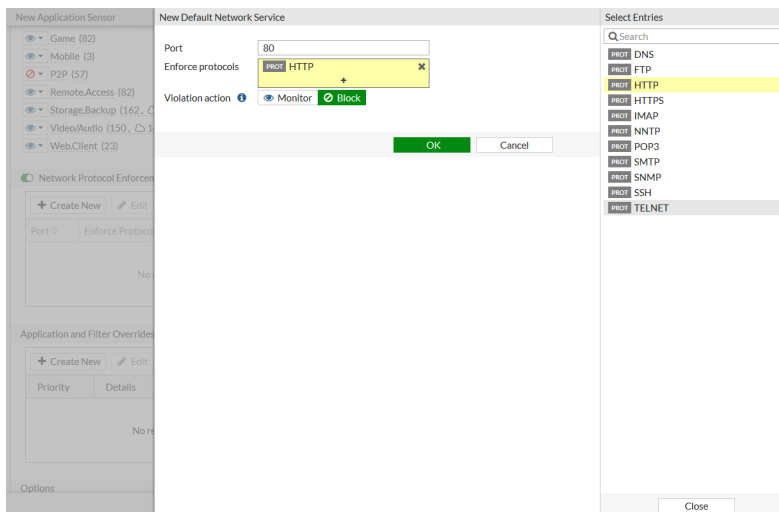

6. Configure the entry for DNS:
  - a. Click *Create New*, then for *Port*, enter 53.
  - b. For *Enforced protocols*, select *DNS*.
  - c. For *Violation action*, select *Monitor*.
  - d. Click *OK*.

The entries are displayed in the table.

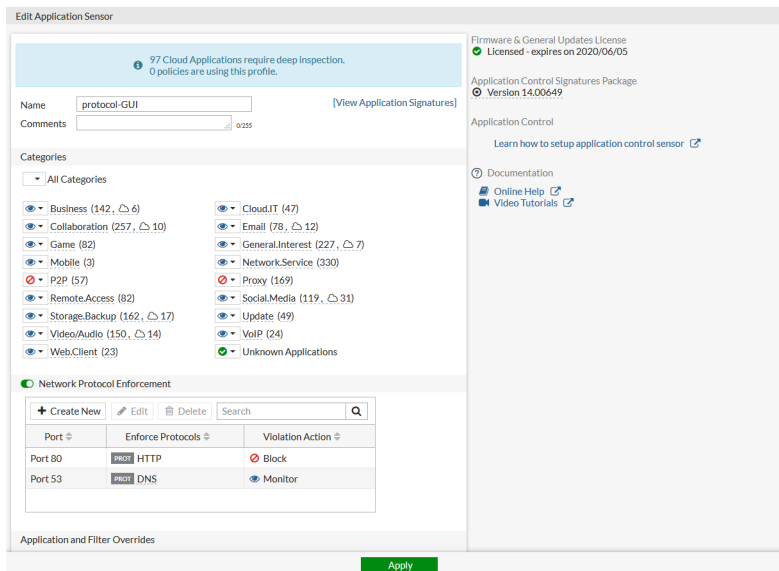


7. Click OK.

### To configure protocol enforcement in the CLI:

```
config application list
  edit "protocol-GUI"
    set other-application-log enable
    set control-default-network-services enable
    config default-network-services
      edit 1
        set port 80
        set services http
        set violation-action block
      next
      edit 2
        set port 53
        set services dns
        set violation-action monitor
      next
    end
  next
end
```

## SSL-based application detection over decrypted traffic in a sandwich topology

When a FortiGate is sandwiched between SSL encryption and decryption devices, the FortiGate can process the decrypted traffic that passes between those devices. This feature adds support for decrypted traffic in application control. In some pre-defined signatures, the signature is pre-marked with the *require\_ssl\_di* tag. The *force-inclusion-ssl-di-sigs* option under *application list* allows users to control the inspection of dissected traffic. When this option is enabled, the IPS engine forces the pre-marked SSL-based signatures to be applied to the decrypted traffic of the respective applications. In the following topology, SSL Proxy 1 handles the client connection and SSL Proxy 2 handles the server connection, leaving the content unencrypted as traffic passes through the FortiGate.

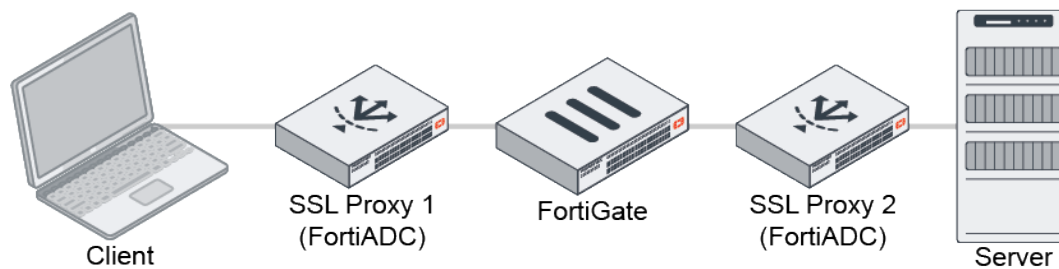

### To configure SSL-based application detection over decrypted traffic:

```

config application list
  edit "test"
    set force-inclusion-ssl-di-sigs {enable | disable}
  next
end

```

### Example pre-marked SSL-based signature:

```

F-SBID( --vuln_id 15722; --attack_id 42985; --name "Facebook_Chat"; --group im; --protocol tcp; --default_action pass; -
-revision 4446; --app_cat 23; --vendor 3; --technology 1; --behavior 9; --pop 4; --risk 2; --language "Multiple"; --weight 20;
--depend-on 15832; --depend-on 38468; --require_ssl_di "Yes"; --casi 1; --casi 8; --parent 15832; --app_port
"TCP/443"; --severity info; --status hidden; --service http; --flow from_client; --pattern "/pull?"; --context uri; --no_case; --
pattern ".facebook.com"; --context host; --no_case; --tag set, Tag.Facebook.Pull; --tag quiet; --scan-range 10m,all; --date
20190301;)

```



All signatures that include the *require\_ssl\_di* tag are pre-defined and cannot be customized.

## Matching multiple parameters on application control signatures

Application control signatures that support parameters (such as SCADA protocols) can have multiple parameters grouped together and matched at the same time. Multiple application parameter groups can be added to an override. Traffic will be flagged if it matches at least one parameter group.

This example uses the *Modbus\_Func05.Write.Single.Coil.Validation* signature. This is an industrial signature, so ensure that no signatures are excluded:

```

config ips global
  set exclude-signatures none
end

```

### To configure an application sensor with multiple parameters in the GUI:

1. Go to *Security Profiles > Application Control* and click *Create New*, or edit an existing sensor.
2. In the *Application and Filter Overrides* table, click *Create New*.
3. Search for *Modbus\_Func05.Write.Single.Coil.Validation* and press **Enter**. A gear icon beside the signature name indicates it has configurable application parameters.

4. In the search results, select *Modbus\_Func05.Write.Single.Coil.Validation* and click **Add Selected**.

The screenshot shows the 'Add New Override' dialog in the FortiGate Security Profiles configuration. The dialog has a 'Type' dropdown set to 'Application' and an 'Action' dropdown set to 'Block'. Below these, there are buttons for 'Add All Results', '+ Add Selected', and a search bar. The search results show a list of application signatures. The signature 'Modbus\_Func05.Write.Single.Coil.Validation' is selected and highlighted in yellow. The dialog also has 'OK' and 'Cancel' buttons at the bottom.


Name	Category	Technology	Popularity
IEC.60870.5.104.Information.Transfer.In.Validation	Industrial	Client-Server	☆☆☆☆
IEC.60870.5.104.Information.Transfer.Out.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func01.Read.Coils.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func02.Read.Discrete.Inputs.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func03.Read.Holding.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func04.Read.Input.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func05.Write.Single.Coil.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func06.Write.Single.Reg.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func15.Write.Multi.Coils.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func16.Write.Multi.Reg.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func22.Mask.Write.Reg.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func23.Read.Write.Multi.Reg.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func24.Read.FIFO.Queue.Validation	Industrial	Client-Server	☆☆☆☆
Modbus_Func43.ME14.Read.Device.ID.Code.Validation	Industrial	Client-Server	☆☆☆☆

5. Click the **Selected** tab. In the *Application Parameters* section, click **Create New**.

The screenshot shows the 'Add New Override' dialog in the FortiGate Security Profiles configuration. The dialog has a 'Type' dropdown set to 'Application' and an 'Action' dropdown set to 'Block'. Below these, there is a section for 'Application Parameters'. The 'Selected' tab is active, and the 'Create New' button is highlighted. The dialog also has 'OK' and 'Cancel' buttons at the bottom.

Name	Category	Technology	Popularity	Risk
Modbus_Func05.Write.Single.Coil.Validation	Industrial	Client-Server	☆☆☆☆	Low

## 6. Edit the parameter values as needed.

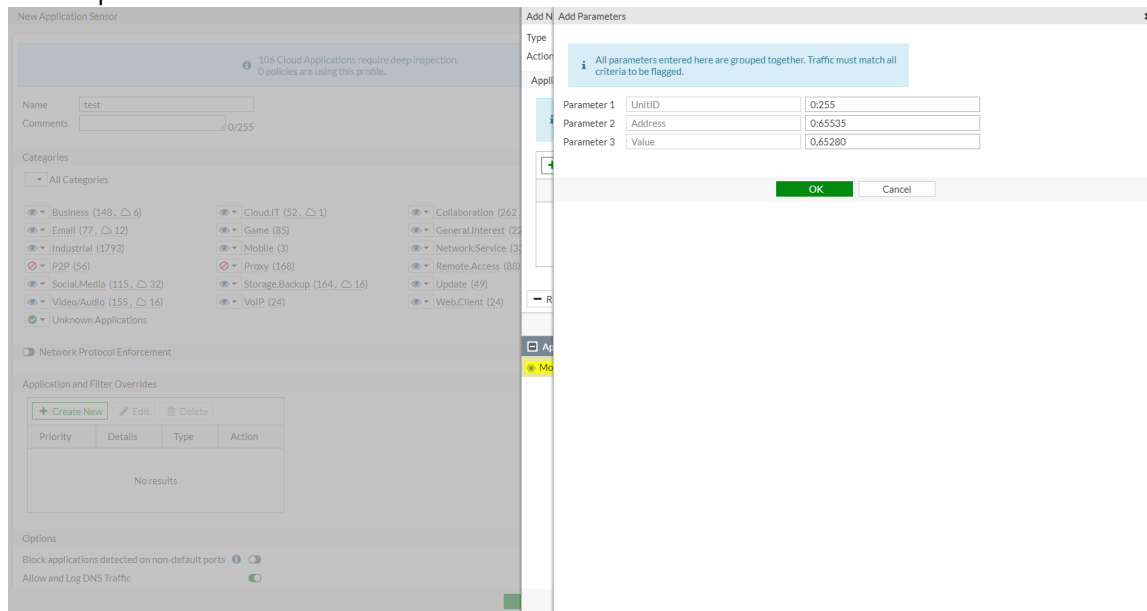

## 7. Click OK.

## 8. Add more signatures if needed.

## 9. Click OK.

## To configure an application sensor with multiple parameters in the CLI:

```
config application list
  edit "test"
    set other-application-log enable
    config entries
      edit 1
        set application 48885
        config parameters
          edit 1
            config members
              edit 1
                set name "UnitID"
                set value "0:255"
              next
              edit 2
                set name "Address"
                set value "0:65535"
              next
              edit 3
                set name "Value"
                set value "0,65280"
              next
            end
          next
        end
      next
    end
  next
edit 2
  set category 2 6
```

```
        next
    end
next
end
```

## Application signature dissector for DNP3

The DNP3 application signature dissector supports detecting DNP3 traffic that is encapsulated by the RealPort protocol (Net.CX). DNP3 is used in industrial solutions over serial ports, USB ports, printers, and so on. RealPort encapsulation allows transportation of the underlying protocols over TCP/IP. The FortiGate industrial signatures must be enabled to use RealPort.DNP3 signatures:

```
config ips global
    set exclude-signatures none
end
```

IPS engine version 7.0015 and later supports RealPort.DNP3 dissectors.

### Sample logs

```
119: date=2021-03-09 time=18:56:35 eventtime=1615344995698958507 tz="-0800"
logid="1059028704" type="utm" subtype="app-ctrl" eventtype="signature" level="information"
vd="vd1" appid=49890 srcip=10.1.100.191 dstip=172.16.200.159 srcport=43946 dstport=771
srcintf="port10" srcintfrole="undefined" dstintf="port9" dstintfrole="undefined" proto=6
service="RLDNP3" direction="incoming" policyid=1 sessionid=1204 applist="test" action="pass"
appcat="Industrial" app="RealPort.DNP3" incidentserialno=88083610 msg="Industrial:
RealPort.DNP3," apprisk="elevated"


1: date=2021-03-09 time=18:56:08 eventtime=1615344968811546102 tz="-0800" logid="1059028704"
type="utm" subtype="app-ctrl" eventtype="signature" level="information" vd="vd1" appid=49899
srcip=10.1.100.191 dstip=172.16.200.159 srcport=43946 dstport=771 srcintf="port10"
srcintfrole="undefined" dstintf="port9" dstintfrole="undefined" proto=6 service="RLDNP3"
direction="outgoing" policyid=1 sessionid=1204 applist="test" action="pass"
appcat="Industrial" app="RealPort.DNP3_Confirm" incidentserialno=88083404 msg="Industrial:
RealPort.DNP3_Confirm," clouduser="34 -> 34" filename="Null" apprisk="elevated"
cloudaction="others"
```

## Blocking QUIC manually


Blocking QUIC by default in the application control profile is no longer necessary since HTTP3 over QUIC is fully supported by FortiOS. Users can still select the QUIC application signature (40169) to manually block or monitor QUIC.

### To block the QUIC application signature in the GUI:

1. Go to *Security Profiles > Application Control* and click *Create New*.
2. Enter a name (*test*).
3. Add a filter override for the QUIC application signature:
  - a. In the *Application and Filter Overrides* section, click *Create New*. The *Add New Override* pane appears.
  - b. In the search box, enter *QUIC* and press *Enter*.
  - c. Select the *QUIC* entry and click *Add Selected*.

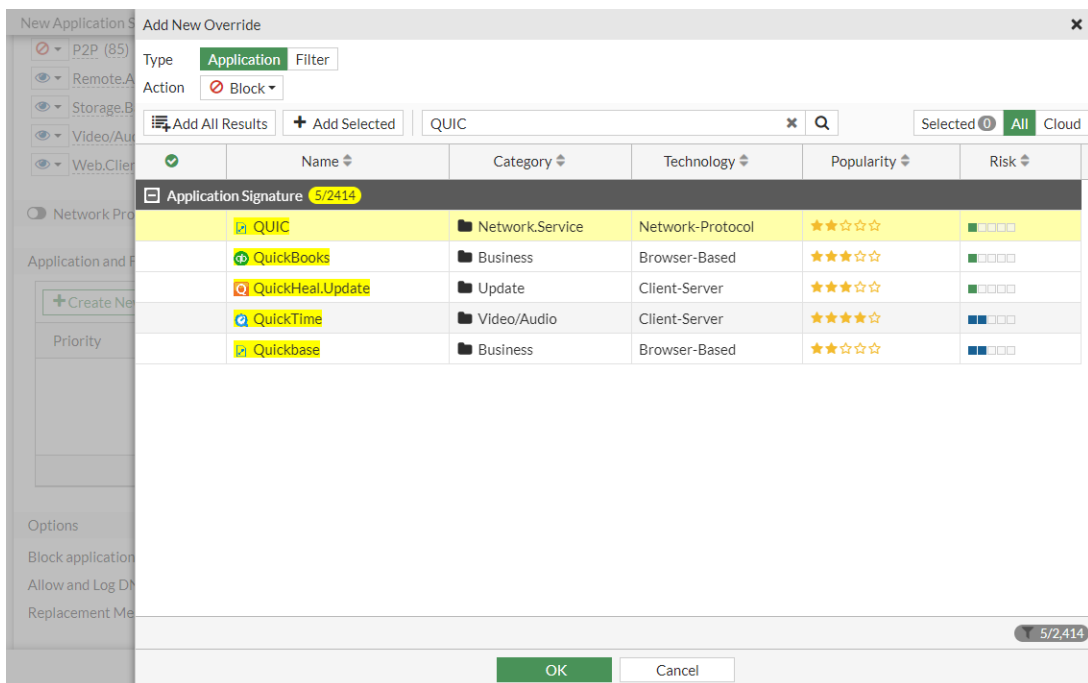

d. Click OK.

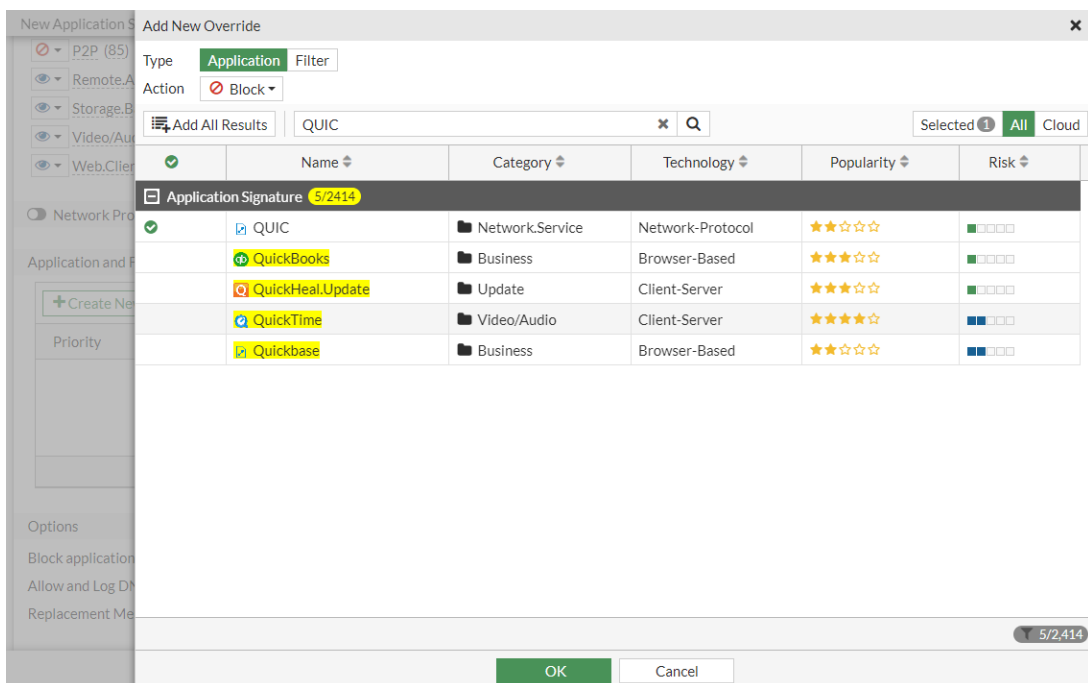

4. Configure the other sensor settings as needed.

5. Click OK.

#### To block the QUIC application signature in the CLI:

```
config application list
edit "test"
set other-application-log enable
```

```
config entries
  edit 1
    set application 40169
    set action block
    set log enable
  next
end
next
end
```

### Sample traffic log

```
1: date=2022-11-01 time=18:45:48 eventtime=1667353547840005082 tz="-0700" logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="vd1" srcip=10.1.100.141 srcport=60268
srcintf="port2" srcintfrole="undefined" dstip=142.250.217.98 dstport=443 dstintf="port1"
dstintfrole="undefined" srccountry="Reserved" dstcountry="United States" sessionid=2978
proto=17 action="accept" policyid=1 policytype="policy" poluuid="72a572a8-5a33-51ed-fa85-
db33d77e4804" policyname="test" service="udp/443" trandisp="snat" transip=172.16.200.1
transport=60268 appid=40169 app="QUIC" appcat="Network.Service" apprisk="low" applist="test"
appact="drop-session" duration=183 sentbyte=6390 rcvbyte=0 sentpkt=5 rcvpkt=0
utmaction="block" countapp=5 utmref=65535-1102
```

## Intrusion prevention

Intrusion Prevention System (IPS) detects network attacks and prevents threats from compromising the network, including protected devices. IPS can be in the form of a standalone appliance, or part of the feature set of a Next Generation Firewall (NGFW), such as FortiGate. IPS utilizes signatures, protocol decoders, heuristics (or behavioral monitoring), threat intelligence (such as FortiGuard Labs), and advanced threat detection in order to prevent exploitation of known and unknown zero-day threats. FortiGate IPS is even capable of performing deep packet inspection to scan encrypted payloads in order to detect and prevent threats from attackers.

Networks and devices are often exploited through vulnerabilities. Software vulnerabilities are one such example where a bug or inherent weakness in the code provides attackers an opportunity to gain access to the software. More severe vulnerabilities allow unauthorized access, data leakage, and execution of malicious code. Exploitation of these vulnerabilities can cause damage to the machine and infect others. While the best solution is to patch vulnerabilities as soon as patches are available, IPS signatures offer a solution to detect and block exploitation of many vulnerabilities before they enter the network.

### IPS signatures

Fortinet's solution combines industry-leading threat intelligence from FortiGuard Labs with the FortiGate NGFW to identify the latest threats and prevent them from entering your network. IPS signatures are one such method for delivering the latest protection. FortiGuard Labs uses AI and Machine Learning (ML) to analyze billions of events every day. The FortiGuard Labs research team also proactively performs threat research to discover new vulnerabilities and exploitation, and produces signatures to identify such threats. These IPS signatures are delivered to each FortiGate daily, so that the IPS engine is armed with the latest databases to match the latest threats.



## IPS sensors

A FortiGate IPS sensor is a collection of IPS signatures and filters that define the scope of what the IPS engine will scan when the IPS sensor is applied. An IPS sensor can have multiple sets of signatures and/or filters. A set of IPS signatures consists of manually selected signatures, while a set of IPS filters consists of filters based on signature attributes like target, severity, protocol, OS, and application. Each signature has predefined attributes and an action, such as block, allow, monitor (pass), quarantine, and reset. It is also possible to create custom IPS signatures to apply to an IPS sensor.

From the *Security Profiles > Intrusion Prevention* pane, you can create new IPS sensors and view a list of predefined sensors.

FortiOS includes the following predefined IPS sensors with associated predefined signatures:

Predefined IPS sensors	Description
all_default	Filters all predefined signatures, and sets action to the signature's default action.
all_default_pass	Filters all predefined signatures, and sets action to pass/monitor.
default	Filters all predefined signatures with severity of Critical/High/Medium. Sets action to signature's default action.
high_security	Filters all predefined signatures with severity of Critical/High/Medium, and sets action to Block. For Low severity signatures, sets action to signature's default action.
protect_client	Protects against client-side vulnerabilities by filtering on <code>Target=Client</code> . Sets action to signature's default action.
protect_email_server	Protects against email server-side vulnerabilities by filtering on <code>Target=Server</code> and <code>Protocol=IMAP, POP3 or SMTP</code> . Sets action to signature's default action.
protect_http_server	Protects against HTTP server-side vulnerabilities by filtering on <code>Target=Server</code> and <code>Protocol=HTTP</code> . Sets action to signature's default action.
wifi-default	Filters all predefined signatures with severity of Critical/High/Medium. Sets action to signature's default action. Used in profile for offloading WiFi traffic.

## DDoS attacks

Besides protecting against threats and exploitation of vulnerabilities, the IPS engine is also responsible for mitigating Denial of Service (DoS) attacks where attackers attempt to bring a service down by flooding the target with traffic from distributed systems. Using anomaly-based defense, FortiGate can detect a variety of L3 and L4 anomalies and take action against these attacks. This can be configured under IPv4 and IPv6 DoS Policies, which is discussed in detail under [DoS policy on page 1069](#).

This section contains the following topics:

- [Signature-based defense on page 1412](#)
- [Configuring an IPS sensor on page 1415](#)
- [IPS configuration options on page 1418](#)
- [IPS signature filter options on page 1423](#)

This section also provides the following examples about IPS sensors:

- [IPS with botnet C&C IP blocking on page 1426](#)
- [IPS signatures for the industrial security service on page 1431](#)
- [IPS sensor for IEC 61850 MMS protocol on page 1432](#)
- [SCTP filtering capabilities on page 1434](#)

## Signature-based defense

Signature-based defense is used against known attacks or vulnerability exploits. These often involve an attacker attempting to gain access to your network. The attacker must communicate with the host in an attempt to gain access, and this communication includes commands or sequences of commands and variables. The IPS signatures include these command sequences, allowing the FortiGate unit to detect and stop the attack.

This section describes the following components used in signature-based defense:

- [IPS signatures on page 1412](#)
- [Protocol decoders on page 1412](#)
- [IPS engine on page 1412](#)
- [IPS sensors on page 1413](#)
- [IPS filters on page 1414](#)
- [Custom and predefined signature entries on page 1414](#)
- [Policies on page 1415](#)

### IPS signatures

IPS signatures are the basis of signature-based intrusion prevention. Every attack can be reduced to a particular string of commands or a sequence of commands and variables. Signatures include this information, and FortiGate uses the information to detect and stop attacks.

Signatures also include characteristics about the attack they describe. These characteristics include the network protocol associated with the attack, the vulnerable operating system, and the vulnerable application.

To view the complete list of signatures, go to *Security Profiles > IPS Signatures*. The list of signatures includes predefined and custom signatures. You can hover over the name of the IPS signature to display a pop-up window that includes an ID number. You can click the ID number to display the FortiGuard page.

### Protocol decoders

Before examining network traffic for attacks, the IPS engine uses protocol decoders to identify each protocol appearing in the traffic. Attacks are protocol-specific, so your FortiGate unit conserves resources by looking for attacks only in the protocols used to transmit them. For example, the FortiGate unit will only examine HTTP traffic for the presence of a signature describing an HTTP attack.


### IPS engine

Once the protocol decoders separate the network traffic by protocol, the IPS engine examines the network traffic for the attack signatures by using IPS sensors.


## IPS sensors

The IPS engine does not examine network traffic for all signatures. The IPS engine examines network traffic for signatures specified in IPS sensors. You must first create an IPS sensor, and then you can specify what signatures the IPS sensor will use. You can add individual signatures to IPS sensors, or you can add filters to IPS sensors, and the filters automatically include the applicable signatures.

To view IPS sensors, go to *Security Profiles > Intrusion Prevention*. To create a new sensor, click *Create New*.

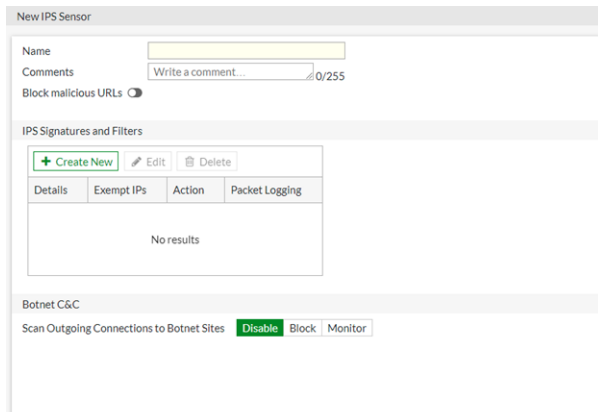

An IPS sensor is composed of IPS signatures and filters. Under *IPS Signatures and Filters*, click *Create New* to create a set of IPS signatures or a set of IPS filters.

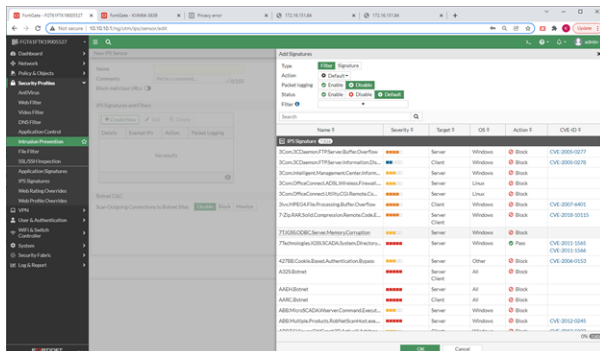

You can create IPS sensors for specific types of traffic, and then select the IPS sensors in firewall policies designed to handle the same type of traffic. For example, you can specify all of the web-server related signatures in an IPS sensor, and select the IPS sensor in a firewall policy that controls all traffic to and from a web server that is protected by the FortiGate unit.

The FortiGuard Service periodically adds new predefined signatures to counter new threats. New predefined signatures are automatically included in IPS sensors that are configured to use filters when the new signatures match existing filter specifications. For example, if you have an IPS sensor with a filter that includes all signatures for the Windows operating system, your filter will automatically incorporate new Windows signatures that the FortiGuard Service adds to the database.

IPS signature and filter entries are checked from top down. When a signature is found in a set of signatures or filters, the action defined for the signature is taken.

## IPS filters

IPS sensors can contain one or more IPS filters. A filter is a collection of signature attributes that you specify. The signatures that have all of the attributes specified in a filter are included in the IPS filter.

Following are the attribute groups:

- Target
- Severity
- Protocol
- OS
- Application



Starting in FortiOS 6.4.2, you can also filter by CVE ID or CVE pattern by using the CLI. See [FortiOS 6.4 New Features > IPS signature filter options](#).

When selecting multiple attributes within the same group, the selections are combined by using a logical **OR**. When selecting multiple attributes between attribute groups, each attribute group is combined by using a logical **AND**.

Once you select filters in the GUI, the filtered list of IPS signatures are displayed. Adjust your filters accordingly to construct a suitable list for your needs.

For example, if your FortiGate unit protects a Linux server running the Apache web server software, you could create a new filter to protect it. By setting OS filter attribute to *Linux*, and the filter attribute *Application* to *Apache*, the filter will include only the signatures that apply to both Linux and Apache. If you wanted to scan for all the Linux signatures and all the Apache signatures, you would create two filters, one for each.

To view the filters in an IPS sensor, go to *Security Profiles > Intrusion Prevention*, select the IPS sensor, and click *Edit*.

## Custom and predefined signature entries

Signature entries allow you to add individual, custom or predefined IPS signatures to an IPS sensor. If you need only one signature, or you want to manually select multiple signatures that don't fall into the criteria for an IPS filter, adding a signature entry to an IPS sensor is the easiest way. Signature entries are also the only way to include custom signatures in an IPS sensor.

Name	Severity	Target	OS	Action	CVE-ID
John-PC					
2Wire.Wireless.Router.XSRF.Password.Res...	High	Server	Linux	Block	CVE-2007-4387
3CX.Phone.System.VAD_Deploy.Arbitrary.F...	High	Server	Windows	Block	
3Com.3CDaemon.FTPServer.Buffer.Overfl...	High	Server	Windows	Block	CVE-2005-0277
3Com.3CDaemon.FTPServer.Information...	High	Client	Windows	Block	CVE-2005-0278
3Com.Intelligent.Management.Center.Infor...	High	Server	Windows	Block	
3Com.OfficeConnect.ADSL.Wireless.Firew...	High	Server	Linux	Block	
3Com.OfficeConnect.Utility.CGI.Remote.C...	High	Server	Linux	Block	
3D.Life.Player.WebPlayer.ActiveX.Control...	High	Client	Windows	Block	
3S-Pocketnet.VMS.ActiveX.Control.Buffer...	High	Client	Windows	Block	CVE-2014-9263

To select an individual signature, click a signature, and select *Add Selected*. The signature moves to the *Selected* list.

To select multiple signatures, use the *Search* bar to perform a keyword search, and then click *Add All Results* to move all entries to the *Selected* list.

## Overriding the default action

Each IPS signature comes with a default action such as *Block* and *Pass*. In some scenarios, you may want to override this action. You can override a set of IPS filter or signatures. By default, a set of IPS filter or signatures has an action of *Default*, which applies a signature's default action when the signature is matched. By changing the action, you can override the setting for all signatures within the filter or signature set.

## Policies

You must select an IPS sensor in a security policy or an interface policy to apply the IPS sensor to traffic. An IPS sensor that is not selected in a policy is not applied to network traffic.

## Configuring an IPS sensor

You can configure IPS sensors to be used in policies in the GUI.

### To configure an IPS sensor:

1. Go to *Security Profiles > Intrusion Prevention*.
2. Click *Create New*.
3. Configure the following settings:

<i>Name</i>	Enter a unique name for the sensor.
<i>Comments</i>	Enter a comment (optional).
<i>Block malicious URLs</i>	Enable to block malicious URLs based on a local malicious URL database on the FortiGate to assist in the detection of drive-by exploits. See <a href="#">Malicious URL database for drive-by exploits detection on page 1418</a> .
<i>IPS Signature and Filters</i>	Select a signature or filter to assign to the sensor. See <a href="#">Configuring signatures and filters on page 1416</a> .
<i>Botnet C&amp;C</i>	
<i>Scan Outgoing Connections to Botnet Sites</i>	Define the botnet scanning across traffic that matches the policy: <ul style="list-style-type: none"> <li>• <i>Disable</i>: Do not scan connections to botnet servers.</li> <li>• <i>Block</i>: Block connections to botnet servers.</li> <li>• <i>Monitor</i>: Log connections to botnet servers.</li> </ul> See <a href="#">IPS with botnet C&amp;C IP blocking on page 1426</a> .

4. Click *OK*.



For information on configuring IPS sensors in the CLI, see [IPS configuration options on page 1418](#).

## Configuring signatures and filters

Signatures and filters can be configured and added to IPS sensors. A filter is a collection of signature attributes. Any signatures that meet all of the attributes specified in a filter are automatically included in the IPS sensor. See [IPS signature filter options on page 1423](#).

### To configure a Signature entry of type Filter:

1. Go to *Security Profiles > Intrusion Prevention*.
2. Click *Create New*.
3. Configure the IPS sensor settings.
4. In *IPS Signatures and Filters*, click *Create New*. The *Add Signatures* pane is displayed.
5. Configure the settings as follows:

Type	Select Filter.
Action	Click the dropdown menu and select the action when a signature is triggered: <ul style="list-style-type: none"> <li>• <i>Allow</i>: Allow traffic to continue to its destination.</li> <li>• <i>Monitor</i>: Allow traffic to continue to its destination and log the activity.</li> <li>• <i>Block</i>: Drop traffic that matches the signature.</li> <li>• <i>Reset</i>: Reset the session whenever the signature is triggered.</li> <li>• <i>Default</i>: Use the default action of the signature. Search for the signature in the <i>IPS Signature</i> pane to view the default <i>Action</i>.</li> <li>• <i>Quarantine</i>: Block the matching traffic. Enable packet logging. Quarantine the attacker.</li> </ul>
Packet logging	Enable packet logging to save a copy of the packets when they match the signature. Packet copies can be analyzed later.
Status	Define the signature status: <ul style="list-style-type: none"> <li>• <i>Enable</i>: Enable the signature.</li> <li>• <i>Disable</i>: Disable the signature.</li> <li>• <i>Default</i>: Use the default status of the signature. Search for the signature in the <i>IPS Signature</i> pane to view the default <i>Status</i>.</li> </ul>
Filter	Select the + to open the <i>Select Entries</i> field and select filter entries. There are different entry categories: <ul style="list-style-type: none"> <li>• <i>Target</i>: Refers to the type of device targeted by the attack.</li> <li>• <i>Severity</i>: Refers to the level of the threat posed by the attack.</li> <li>• <i>Protocol</i>: Refers to the protocol that is the vector for the attack.</li> <li>• <i>OS</i>: Refers to the Operating System affected by the attack.</li> <li>• <i>Application</i>: Refers to the application affected by the attack.</li> </ul>

6. Select one or more signatures from the *IPS Signatures* pane.
7. Click *OK*. The signature is added to the IPS sensor.
8. Click *OK*.

Individual signatures, custom or predefined IPS signatures can be selected for an IPS sensor. If you need only one signature, or you want to manually select multiple signatures that don't fall into the criteria for an IPS filter, adding a signature entry to an IPS sensor is the easiest way.

### To configure a Signature entry of type Signature:

1. Go to *Security Profiles > Intrusion Prevention*.
2. Click *Create New*.
3. Configure the IPS sensor settings.
4. In *IPS Signatures and Filters*, click *Create New*. The *Add Signatures* pane is displayed.
5. Configure the settings as follows:

Type	Select Signature.
Action	Click the dropdown menu and select the action when a signature is triggered: <ul style="list-style-type: none"> <li>• <i>Allow</i>: Allow traffic to continue to its destination.</li> <li>• <i>Monitor</i>: Allow traffic to continue to its destination and log the activity.</li> <li>• <i>Block</i>: Drop traffic that matches the signature.</li> <li>• <i>Reset</i>: Reset the session whenever the signature is triggered.</li> <li>• <i>Default</i>: Use the default action of the signature. Search for the signature in the <i>IPS Signature</i> pane to view the default <i>Action</i>.</li> <li>• <i>Quarantine</i>: Block the matching traffic. Enable packet logging. Quarantine the attacker.</li> </ul>
Packet Logging	Enable packet logging to save a copy of the packets when they match the signature. Packet copies can be analyzed later.
Status	Define the signature status: <ul style="list-style-type: none"> <li>• <i>Enable</i>: Enable the signature.</li> <li>• <i>Disable</i>: Disable the signature.</li> <li>• <i>Default</i>: Use the default status of the signature. Search for the signature in the <i>IPS Signature</i> pane to view the default <i>Status</i>.</li> </ul>
Rate-based settings	
Default	Use the default rate-based settings.
Specify	Specify the rate-based settings: <ul style="list-style-type: none"> <li>• <i>Threshold</i>: Enter the threshold. See <a href="#">IPS signature rate count threshold on page 1419</a>.</li> <li>• <i>Duration (seconds)</i>: Enter the duration in seconds.</li> <li>• <i>Track By</i>: Select the tracking method as <i>Any</i>, <i>Source IP</i>, or <i>Destination IP</i>.</li> </ul>
Exempt IPs	Add IP addresses that are exempt from the signature rules. Click <i>Edit IP Exemptions</i> and click <i>Create New</i> . Edit the <i>Source IP/Netmask</i> and the <i>Destination IP/Netmask</i> to define the IP address for exemption. Click <i>OK</i> to add it to <i>Exempt IPs</i> .

6. Select one or more signatures from the *IPS Signatures* pane.

7. Click **OK**. The signature is added to the IPS sensor.
8. Click **OK**.

## IPS configuration options

Besides configuring an IPS filter or selecting IPS signatures for an IPS sensor, you can configure additional IPS options for each sensor or globally for all sensors. This topic introduces the following available configuration options:

- [Malicious URL database for drive-by exploits detection on page 1418](#)
- [IPS signature rate count threshold on page 1419](#)
- [Botnet C&C on page 1419](#)
- [Hardware acceleration for flow-based security profiles \(NTurbo and IPSA\) on page 1420](#)
- [Extended IPS database on page 1420](#)
- [IPS engine-count on page 1421](#)
- [Industrial signature database on page 1421](#)
- [Fail-open on page 1421](#)
- [IPS buffer size on page 1422](#)
- [Session count accuracy on page 1422](#)
- [Protocol decoders on page 1422](#)



To configure IPS sensors, signatures, and filters in the GUI, see [Configuring an IPS sensor on page 1415](#).

---

## Malicious URL database for drive-by exploits detection

This feature uses a local malicious URL database on the FortiGate to assist in detection of drive-by exploits, such as adware that allows automatic downloading of a malicious file when a page loads without the user's detection. The database contains all malicious URLs active in the last one month, and all drive-by exploit URLs active in the last three months. The number of URLs controlled are in the one million range.

This feature can be enabled from an IPS sensor in the GUI by going to *Security Profiles > Intrusion Prevention* and editing or creating an IPS Sensor, then enabling *Block malicious URLs*. See [Configuring an IPS sensor on page 1415](#).

### To enable the blocking of malicious URLs in the CLI:

```
config ips sensor
  edit <profile>
    set block-malicious-url {enable | disable}
  next
end
```



Blocking malicious URLs is not supported on some FortiGate models, such as FortiGate 51E, 50E, or 30E.

---



## IPS signature rate count threshold

You can use the IPS signature rate-based settings to specify a rate count threshold that must be met before the signature is triggered. A rate count threshold provides a more controlled recording of attack activity. For example, if multiple login attempts produce a failed result over a short period of time, then an alert would be sent and traffic might be blocked, which is a more manageable response than sending an alert every time a login fails.

This can be configured from the GUI by going to *Security Profiles > Intrusion Prevention*. Create or edit an IPS sensor. Within the sensor, edit the IPS signatures and filters. Only IPS signatures have the rate-based settings option. IPS filters do not. See [Configuring an IPS sensor on page 1415](#).

Some settings are only available in the CLI.

### To configure the IPS signature rate-based settings in the CLI:

```
config ips sensor
  edit <sensor>
    config entries
      edit <filter ID number>
        set rule <ids>
        set rate-count <integer>
        set rate-duration <integer>
        set rate-mode {continuous | periodical}
        set rate-track {none | src-ip | dest-ip | dhcp-client-mac | dns-domain}
      next
    end
  next
end
```

rule <ids>	The predefined or custom IPS signatures to add to the sensor.
rate-count <integer>	The count of the rate (0 - 65535, default = 0). The rate-count must be configured before the other rate settings can be set.
rate-duration <integer>	Duration of the rate, in seconds (0 - 65535, default = 60)
rate-mode {continuous   periodical}	How the count threshold is met. <ul style="list-style-type: none"> <li><b>continuous:</b> If the action is set to block, the action is engaged as soon as the rate-count is reached. For example, if the count is 10, the traffic would be blocked as soon as the signature is triggered 10 times. This is the default.</li> <li><b>periodical:</b> The FortiGate allows up to the value of the rate-count incidents where the signature is triggered during the rate-duration. For example, if the rate count is 100 and the duration is 60, the signature would need to be triggered 100 times in 60 seconds for the action to be engaged.</li> </ul>
rate-track {none   src-ip   dest-ip   dhcp-client-mac   dns-domain}	Track one of the protocol fields within the packet (default = none).

## Botnet C&C

See [IPS with botnet C&C IP blocking on page 1426](#) for information on configuring settings in the CLI.

## Hardware acceleration for flow-based security profiles (NTurbo and IPSA)

Some FortiGate models support a feature call NTurbo that can offload flow-based firewall sessions to network processors. See also [NTurbo offloads flow-based processing](#) in the Hardware Acceleration Guide. For IPSA enhanced pattern matching, see [IPSA offloads flow-based advanced pattern matching](#) in the Hardware Acceleration Guide.

Some FortiGate models also support offloading enhanced pattern matching for flow-based security profiles to CP8 or CP9 content processors.

### To configure NTurbo and IPSA:

```
config ips global
    set np-accel-mode {none | basic}
    set cp-accel-mode {none | basic | advanced}
end
```

If the `np-accel-mode` option is available, your FortiGate supports NTurbo. The `none` option disables NTurbo, and `basic` (the default) enables NTurbo.

If the `cp-accel-mode` option is available, your FortiGate supports IPSA. The `none` option disables IPSA, and `basic` enables basic IPSA, and `advanced` enables enhanced IPSA, which can offload more types of pattern matching than basic IPSA. The `advanced` option is only available on FortiGate models with two or more CP8 processors, or one or more CP9 processors.

## Extended IPS database

Some models have access to an extended IPS Database. Because the extended database may affect FortiGate performance, the extended database package may be disabled by default on some models, such as desktop models.

You can only enable the extended IPS database by using the CLI.

### To enable the extended IPS database:

```
config ips global
    set database extended
end
```

FortiGate models with the CP9 SPU receive the IPS full extended database, and the other physical FortiGate models receive a slim version of the extended database. The slim-extended database is a smaller version of the full extended database that contains top active IPS signatures. It is designed for customers who prefer performance.



Customers with non-CP9 SPU models need to upgrade to a CP9 SPU model (physical FortiGate) in order to get full IPS signature coverage. All FortiGate models 200 (E and F) and higher have a CP9 SPU.

See [Determining the content processor in your FortiGate unit](#) in the FortiOS Hardware Acceleration Guide to check if your device has a CP9 SPU.

---

FortiGate VMs with eight or more vCPUs can be configured to have a minimum of eight cores to be eligible to run the full extended database. Any FortiGate VM with less than eight cores will receive a slim version of the extended database.

## IPS engine-count

FortiGate units with multiple processors can run one or more IPS engine concurrently. The `engine-count` CLI command allows you to specify how many IPS engines to use at the same time.

### To specify the number of concurrent IPS engines running:

```
config ips global
    set engine-count <int>
end
```



The recommended and default setting is 0, which allows the FortiGate unit to determine the optimum number of IPS engines.

---

## Industrial signature database

Industrial signatures are defined to protect Industrial Control Systems (ICS), Operational Technology (OT) and SCADA systems, which are critical infrastructure used by manufacturing industries. An Industrial Security Service license is required to use this signature database. These signatures are excluded by default, but can be configured in the CLI.



Enabling the industrial signatures database may impact IPS performance, since this increases the number of signatures to scan. To optimize IPS performance, enable only IPS signature packages that are needed.

---

### To configure industrial signatures:

```
config ips global
    set exclude-signatures {none | industrial}
end
```

## Fail-open

A fail-open scenario is triggered when IPS raw socket buffer is full. Therefore IPS engine has no space in memory to create more sessions and needs to decide whether to drop the sessions or bypass the sessions without inspection.

### To enable fail-open mode:

```
config ips global
    set fail-open {enable | disable}
end
```

The default setting is `disable`, so sessions are dropped by IPS engine when the system enters fail-open mode.

When enabled, the IPS engine fails open, and it affects all protocols inspected by FortiOS IPS protocol decoders, including but not limited to HTTP, HTTPS, FTP, SMTP, POP3, IMAP, and so on. When the IPS engine fails open, traffic continues to flow without IPS scanning.



Sessions offloaded to Nturbo do not support fail-open. When Nturbo data path is overloaded, traffic is dropped regardless of fail-open setting.

---

## IPS buffer size

If system enters fail-open mode frequently, it is possible to increase the IPS socket buffer size to allow more data buffering, which reduces the chances of overloading the IPS engine. You can set the size of the IPS buffer.

### To set the socket buffer size:

```
config ips global
    set socket-size <int>
end
```

The default socket size and maximum configurable value varies by model. In short, socket-size determines how much data the kernel passes to the IPS engine each time the engine samples packets.

---



Take caution when modifying the default value. If the socket-size is too large, the higher memory used by the IPS engine may cause the system to enter conserve mode more frequently. If set too low, the system may enter IPS fail-open mode too frequently.

---

## Session count accuracy

The IPS engine can track the number of open session in two ways. An accurate count uses more resources than a less accurate heuristic count.

### To configure the IPS open session count mode:

```
config ips global
    set session-limit-mode {accurate | heuristic}
end
```

The default is `heuristic`.

## Protocol decoders

The FortiGate Intrusion Prevention system uses protocol decoders to identify the abnormal traffic patterns that do not meet the protocol requirements and standards. For example, the HTTP decoder monitors traffic to identify any HTTP packets that do not meet the HTTP protocol standards.

To change the ports a decoder examines, you must use the CLI.

### To configure protocol decoder ports:

```
config ips decoder dns_decoder
    config parameter "port_list"
        set value "100,200,300"
```

```
    end
end
```

In this example, the ports examined by the DNS decoder were changed from the default 53 to 100, 200, and 300.

You cannot assign specific ports to decoders that are set to *auto* by default. These decoders can detect their traffic on any port. Specifying individual ports is not necessary.

## IPS signature filter options

IPS signature filter options include hold time, CVE pattern, and IPS sensor attributes.

### Hold time

The hold time option allows you to set the amount of time that signatures are held after a FortiGuard IPS signature update per VDOM. During the holding period, the signature's mode is monitor. The new signatures are enabled after the hold time to avoid false positives.

The hold time can be from 0 days and 0 hours (default) up to 7 days, in the format `##d##h`.

#### To configure the amount of time to hold and monitor IPS signatures:

```
config system ips
    set signature-hold-time 3d12h
    set override-signature-hold-by-id enable
end
```

When a signature that is on hold is matched, the log will include the message `signature is on hold`:

```
date=2010-07-06 time=00:00:57 logid="0419016384" type="utm" subtype="ips"
eventtype="signature" level="alert" vd="vd1" eventtime=1278399657778481842 tz="-0700"
severity="info" srcip=10.1.100.22 srccountry="Reserved" dstip=172.16.200.55 srcintf="port13"
srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" sessionid=3620
action="detected" proto=6 service="HTTP" policyid=1 attack="Eicar.Virus.Test.File"
srcport=52170 dstport=80 hostname="172.16.200.55" url="/virus/eicar" direction="incoming"
attackid=29844 profile="test" ref="http://www.fortinet.com/ids/VID29844"
incidentserialno=25165825 msg="file_transfer: Eicar.Virus.Test.File, (signature is on hold)"
```

#### To view signatures being held by rule ID 29844 on the VDOM:

```
# diagnose ips signature on-hold vd1 29844
Rule: 29844, attack_id: 58886, last updated: 20170411
Rule: 29844, attack_id: 59517, last updated: 20170411
Rule: 29844, attack_id: 60105, last updated: 20170411
...
```

#### To view all help signatures on the VDOM:


```
# diagnose ips signature on-hold vd1
Rule: 17541, attack_id: 20899, last updated: 20140423
Rule: 17557, attack_id: 20934, last updated: 20140423
Rule: 17559, attack_id: 20932, last updated: 20140423
Rule: 17560, attack_id: 20933, last updated: 20140423
Rule: 17562, attack_id: 20928, last updated: 20170908
```

Rule: 17677, attack\_id: 21187, last updated: 20171106  
 Rule: 17713, attack\_id: 43756, last updated: 20140424  
 Rule: 17759, attack\_id: 21298, last updated: 20140423  
 ...


## Viewing on hold information in the GUI

On hold signatures are grayed out in the GUI with an hourglass icon beside the signature name. A tooltip displays the on hold expiry time and other details.

On the *Security Profiles > IPS Signatures* page, for example, the *Adobe.Reader.Annotations.api.setProps.Use.After.Free* signature is on hold. Hover over the grayed-out entry to view the tooltip, which includes the action and hold time expiry. On this page, all on hold signatures are displayed as on hold regardless of whether `override-signature-hold-by-id` is enabled.

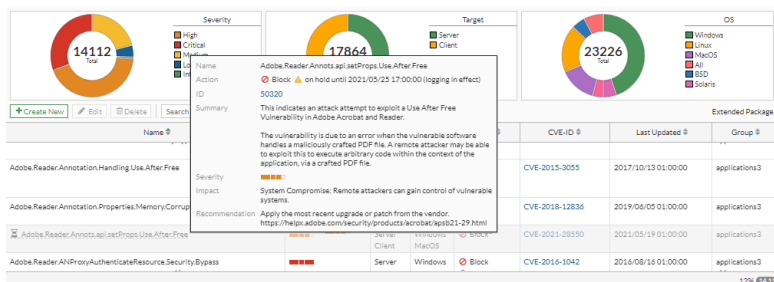

The same tooltip is available on the *Edit IPS Sensor (Security Profiles > Intrusion Prevention)* page when creating or editing the IPS signatures. In the *Add Signatures* pane when the *Type* is *Signature*, signatures on hold are only displayed as on hold if `override-signature-hold-by-id` is enabled.

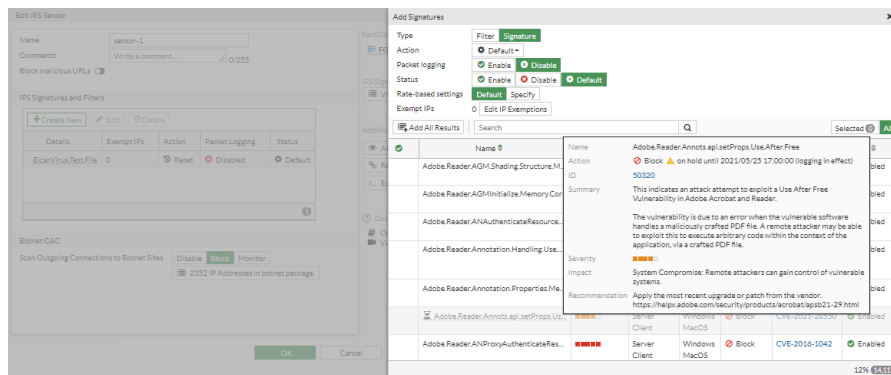

You can still use on hold signatures in an IPS sensor profile; however, the profile will not block matching traffic. It will monitor it instead (logging in effect) until the on hold time expires.

## CVE pattern

The CVE pattern option allows you to filter IPS signatures based on CVE IDs or with a CVE wildcard, ensuring that any signatures tagged with that CVE are automatically included.

**To configure CVE patterns for CVE-2010-0177 and all CVE-2017 CVEs:**

```

config ips sensor
  edit "cve"
    set comment "cve"
    config entries
      edit 1
        set cve "cve-2010-0177"
        set status enable
        set log-packet enable
        set action block
      next
      edit 2
        set cve "cve-2017"
        set action reset
      next
    end
  next
end

```

For example, the CVE of the IPS signature *Mozilla.Firefox.PluginArray.NsMimeType.Code.Execution* is CVE-2010-0177. This matches the CVE filter in the IPS sensor, so traffic is blocked and logged:

```

date=2020-07-13 time=15:44:56 logid="0419016384" type="utm" subtype="ips"
eventtype="signature" level="alert" vd="vd1" eventtime=1594593896666145871 tz="-0700"
severity="critical" srcip=10.1.100.22 srccountry="Reserved" dstip=172.16.200.55
srcintf="port2" srcintfrole="undefined" dstintf="port1" dstintfrole="undefined"
sessionid=1638 action="dropped" proto=6 service="HTTPS" policyid=1
attack="Mozilla.Firefox.PluginArray.NsMimeType.Code.Execution" srcport=58298 dstport=443
hostname="172.16.200.55" url="/Mozilla" direction="incoming" attackid=20853 profile="sensor-1"
ref="http://www.fortinet.com/ids/VID20853" incidentserialno=124780667 msg="web_client: Mozilla.Firefox.PluginArray.NsMimeType.Code.Execution," crscore=50 craction=4096
crlevel="critical"

```

**IPS sensor attributes**

When configuring IPS sensor profiles, IPS signatures can be filtered based on the attributes: default status, default action, vulnerability type, and the last update date. When monitoring the specific, filtered signatures, logs are not generated for other, irrelevant signatures.

This avoids generating a lot of false positives due to many signatures having the pass action, which is never logged.

**To configure filters in an IPS sensor profile:**

```

config ips sensor
  edit "test_default"
    config entries
      edit 1
        set default-action pass
        set default-status enable
        set vuln-type 12
        set last-modified before 2020/02/02
      next
    end
  end
end

```

```

    next
end

```

default-action {pass   block   all}	Filter by signatures' default actions (default = all).
default-status {enable   disable   all}	Filter by signatures' default statuses (default = all).
vuln-type <integer> ... <integer>	Filter by signatures' vulnerability types.
last-modified {before   after   between} <date> [end-date]	Filter by signatures' last modified date (default = before 00/00/00). The date format is yyyy/mm/dd. The year range is 2001 - 2050.

When the IPS profile is used in a firewall profile and then the EICAR virus test file signature is triggered, the signature matches the values set in the filter and logs are generated:

```

1:date=2022-02-15 time=14:07:03 eventtime=1644962823303491048 tz="-0800" logid="0419016384"
type="utm" subtype="ips" eventtype="signature" level="alert" vd="vd1" severity="info"
srcip=10.1.100.11 srccountry="Reserved" dstip=172.16.200.55 dstcountry="Reserved"
srcintf="port38" srcintfrole="undefined" dstintf="port37" dstintfrole="undefined"
sessionid=1171 action="detected" proto=6 service="HTTP" policyid=1 poluuid="623d2d28-8ea7-
51ec-00ef-7549685a77c2" policytype="policy" attack="Eicar.Virus.Test.File" srcport=47230
dstport=80 hostname="172.16.200.55" url="/virus/eicar" direction="incoming" attackid=29844
profile="test_default" ref="http://www.fortinet.com/ids/VID29844" incidentserialno=103809025
msg="file_transfer: Eicar.Virus.Test.File"

# get ips rule status | grep Eicar.Virus.Test.File -A 18
rule-name: "Eicar.Virus.Test.File"
rule-id: 29844
rev: 10.111
date: 1491926400
action: pass
status: enable
log: disable
log-packet: disable
severity: 0.info
service: TCP, HTTP, FTP, SMTP, POP3, IMAP, NNTP
location: server, client
os: All
application: Other
rate-count: 0
rate-duration: 0
rate-track: none
rate-mode: continuous
vuln_type: Anomaly

```

## IPS with botnet C&C IP blocking

The *Botnet C&C* section consolidates multiple botnet options in the IPS profile. This allows you to enable botnet blocking across all traffic that matches the policy by configuring one setting in the GUI, or by the `scan-botnet-connections` option in the CLI.



### To configure botnet C&C IP blocking in the GUI:

1. Go to *Security Profiles > Intrusion Prevention*, and click *Create New* to create a new IPS sensor, or double-click an existing IPS sensor to open it for editing.
2. Navigate to the *Botnet C&C* section.
3. For *Scan Outgoing Connections to Botnet Sites*, select *Block* or *Monitor*.

4. Configure the other settings as needed.
5. Click **OK** to save the IPS sensor.
6. Add the IPS sensor to a firewall policy.  
The IPS engine will scan outgoing connections to botnet sites. If you access a botnet IP address, an IPS log is generated for this attack.
7. Go to *Log & Report > Security Events* and click the *Intrusion Prevention* card to view the log.

### To configure botnet C&C IP blocking in the CLI:

```
config ips sensor
edit "Demo"
    set scan-botnet-connections {disable | block | monitor}
next
end
```



The `scan-botnet-connections` option is no longer available in the following CLI commands:

- `config firewall policy`
- `config firewall interface-policy`
- `config firewall proxy-policy`
- `config firewall sniffer`

### Sample log

```
# execute log filter category 4
# execute log display
1 logs found.
1 logs returned.
```

```
1: date=2022-04-28 time=16:18:34 eventtime=1651187914585406621 tz="-0700" logid="0422016400"
type="utm" subtype="ips" eventtype="botnet" level="warning" vd="vd1" msg="Botnet C&C
Communication." severity="critical" srcip=10.1.100.11 srccountry="Reserved"
dstip=2.58.149.169 srcintf="port13" srcintfrole="undefined" dstintf="port14"
dstintfrole="undefined" sessionid=894198 action="dropped" srcport=41798 dstport=80 proto=6
service="HTTP" policyid=1 profile="sensor-1" direction="outgoing" attack="Loki"
attackid=7630239 ref="http://www.fortinet.com/be?bid=7630239" crscore=50 craction=4
crlevel="critical"
```

## Botnet IPs and domains lists

To view botnet IPs and domains lists:

1. Go to *System > FortiGuard*.
2. Expand *License Information > Intrusion Prevention* to view *Botnet IPs* and *Botnet Domains* information.
3. Click *View List* for more details.

The screenshot displays the FortiGuard Distribution Network interface. The main section is titled "License Information" and contains a table with columns "Entitlementment" and "Status". The table lists various entitlements and their corresponding status, including "FortiCare Support", "Virtual Machine", "Firmware & General Updates", "Intrusion Prevention", "AntiVirus", "Web Filtering", "Outbreak Prevention", "SD-WAN Network Monitor", "Security Rating", "Industrial DB", "FortiPAM", "IoT Detection Service", and "FortiGate Cloud". The "Intrusion Prevention" section is expanded, showing a list of entitlements with their versions and expiration dates. The "Botnet IPs" and "Botnet Domains" sections are also visible, each with a "View List" button. The "FortiGuard Updates" section on the right shows the next update date and a button to "Update Licenses & Definitions Now". The "Fortinet Service Communications" section on the right shows a table of services and their traffic volume.

Entitlementment	Status
FortiCare Support	Registered
Virtual Machine	Valid (Expiration Date: 2021/10/02)
Firmware & General Updates	Licensed (Expiration Date: 2022/10/02)
Intrusion Prevention	Licensed (Expiration Date: 2022/10/02)
IPS Definitions	Version 17.00004
IPS Engine	Version 6.00064
Malicious URLs	Version 2.00896
Botnet IPs	Version 7.01307
Botnet Domains	Version 2.00670
AntiVirus	Licensed (Expiration Date: 2022/10/02)
Web Filtering	Licensed (Expiration Date: 2022/10/02)
Outbreak Prevention	Licensed (Expiration Date: 2022/10/02)
SD-WAN Network Monitor	Licensed (Expiration Date: 2022/10/02)
Security Rating	Licensed (Expiration Date: 2022/10/02)
Industrial DB	Licensed (Expiration Date: 2022/10/02)
FortiPAM	Licensed (Expiration Date: 2022/10/02)
IoT Detection Service	Licensed (Expiration Date: 2022/10/02)
FortiGate Cloud	Not Activated

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiCloud Log	0 B
FortiGuard.com	545.12 kB
FortiGuard Download	45.51 MB
FortiGuard Query	14.97 kB
FortiSandbox Cloud	0 B
OCVPN	0 B
SDNS	71.37 kB
FortiToken Registration	0 B
SMS Service	0 B

## Botnet C&C domain blocking

To block connections to botnet domains:

1. Go to *Security Profiles > DNS Filter*, and click *Create New*, or double-click an existing filter to open it for editing.
2. Enable *Redirect botnet C&C requests to Block Portal*.

Edit DNS Filter Profile

Name: default  
Comments: Default dns filtering. 22/255

Redirect botnet C&C requests to Block Portal: ☒

55225 domains in botnet package

Enforce 'Safe Search' on Google, Bing, YouTube: ☐

FortiGuard Category Based Filter

Allow Monitor Redirect to Block Portal

Name	Action
Adult/Mature Content (15)	15
Alternative Beliefs	Monitor
Abortion	Monitor
Other Adult Materials	Monitor
Advocacy Organizations	Monitor
Gambling	Monitor
Nudity and Risque	Monitor
Pornography	Monitor
Dating	Monitor

Static Domain Filter

Domain Filter: ☐  
External IP Block Lists: ☐  
DNS Translation: ☐

OK Cancel

3. Configure the other settings as needed.
4. Click *OK*.
5. Add the filter profile to a firewall policy.

## Botnet C&C URL blocking

To block malicious URLs:

1. Go to *Security Profiles > Intrusion Prevention*, and click *Create New*, or double-click an existing filter to open it for editing.

## 2. Enable *Block malicious URLs*.

FortiGate

IPS Signatures

View IPS Signatures

Documentation

Online Help

Video Tutorials


OK Cancel

3. Configure the other settings as needed.
4. Click **OK**.
5. Add the sensor to a firewall policy.

## Botnet C&C signature blocking

### To add IPS signatures to a sensor:

1. Go to *Security Profiles > Intrusion Prevention*, and click *Create New*, or double-click an existing sensor to open it for editing.
2. In the *IPS Signatures and Filters* section, click *Create New*. A list of available signatures appears.
3. For *Type*, select *Signature*. Select the signatures you want to include from the list.
4. Configure the other settings as needed.

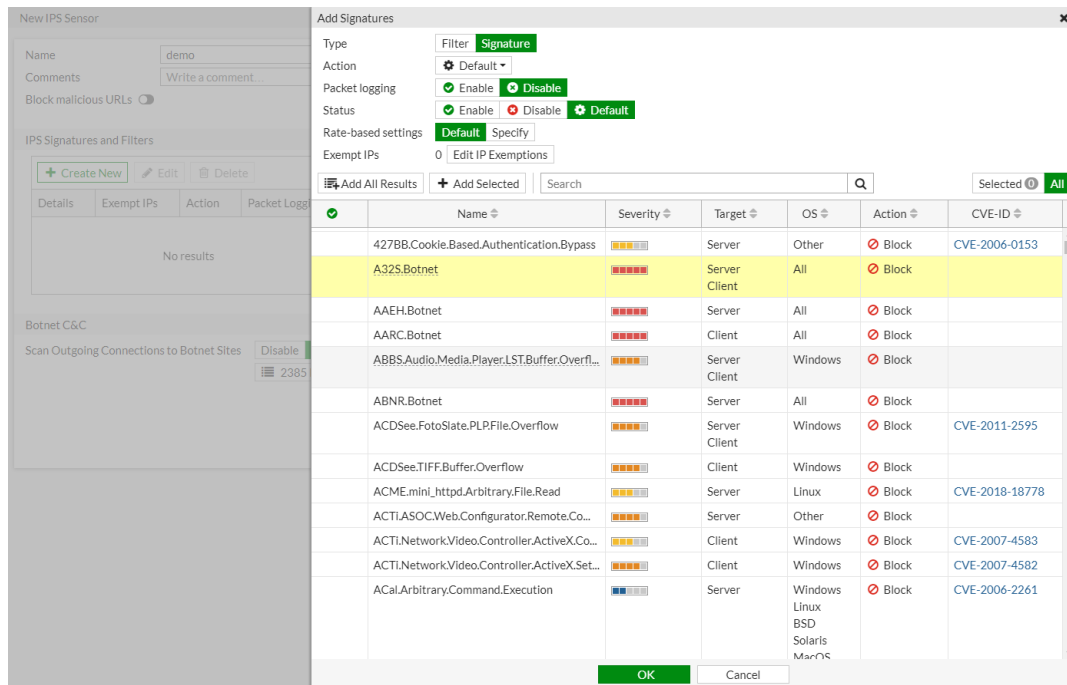5. Click **Add Selected**.6. Click **OK** to add the IPS signatures to the IPS sensor.7. Click **OK** to save the IPS sensor.

8. Add the sensor to a firewall policy to detect or block attacks that match the IPS signatures.

## IPS signatures for the industrial security service

The FortiGuard Industrial Security Service (ISS) includes both application control and intrusion prevention signatures for industrial applications and protocols. The industrial database attack definitions are only updated if the FortiGate has a valid ISS license and an IPS security profile is used in a policy.

By default, industrial signatures are excluded from the signature lists in the GUI.

### To verify that the FortiGate has a valid ISS license:

1. Go to *System > FortiGuard*.
2. In the *License Information* table, check the license status of *Industrial DB*.
3. Expand the *Industrial DB* entry to see the current *Industrial Attack Definitions* version.

### To force the industrial DB attack definitions to update:

1. Optionally, create an IPS profile:
  - a. Go to *Security Profiles > Intrusion Prevention* and click *Create New*.
  - b. Enter a name for the profile.
  - c. In the *IPS Signatures and Filters* table click *Create New*.
  - d. Click **OK**.
  - e. Click **OK**.

See [Intrusion prevention on page 1410](#) for more information.

2. Use the IPS profile in a policy:
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Edit an existing policy, or click *Create New* to create a new policy.
  - c. Under *Security Profiles*, enable *IPS* and select an IPS profile.
  - d. Configure the remaining settings as needed, then click *OK*.
3. Go to *System > FortiGuard* and either click *Update Licenses & Definitions Now*, or wait for the next automatic update. The update could take a few minutes.
4. Refresh the page, then check the *Industrial Attack Definitions* version to confirm that they have been updated.

### To make ISS IPS and application control signatures available in the GUI:

```
config ips global
    set exclude-signatures none
end
```

### To view the signatures in the GUI:


1. Go to *Security Profiles > Application Signatures* and search for *industrial* to find signatures that identify industrial protocols.
2. Go to *Security Profiles > IPS Signatures* to find signatures that detect networks attacks that target industrial assets.

## IPS sensor for IEC 61850 MMS protocol

IEC 61850 is a SCADA protocol whose services are mapped to a number of protocols, including MMS services. MMS/ICCP detection is supported in IPS. The purpose of the MMS dissectors is to identify every IEC 61850 service to distinguish different MMS/ICCP messages. IPS engine 6.0.12 and later support MMS dissectors.

The following scenarios are also supported:

- Multiple MMS PDUs are transferred in one TCP payload, and the IPS engine identifies individuals.
- An MMS message is split over multiple TCP segments, where MMS runs over COTP segments.
- ICCP/TASE.2 that also uses MMS transport (ISO transport over TCP for ICCP) is detected.

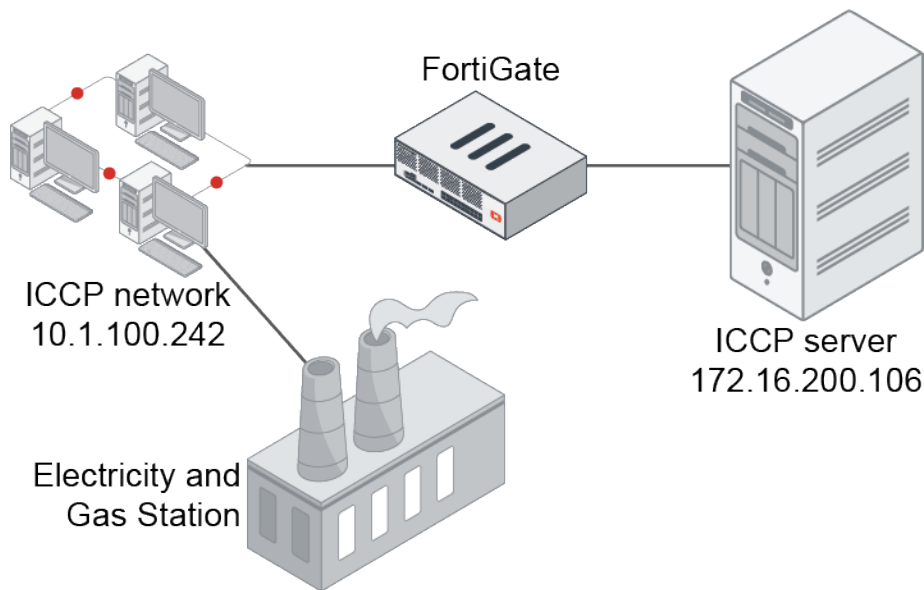

Industrial signatures must be enabled in the global IPS settings to receive MMS/ICCP signatures. By default, industrial signatures are excluded.

```
config ips global
    set exclude-signatures none
end
```

Below are some industrial signatures for MMS/ICCP messages that can be detected by the IPS engine. This is not an exhaustive list.

- MMS\_GetNameList.Request
- MMS\_GetNamedVariableListAttributes.Request
- MMS\_GetVariableAccessAttributes.Request
- MMS\_Identify.Request
- MMS\_Initiate.Request
- MMS\_Read.Request
- MMS\_Reset.Request
- ICCP\_Transfer.Reporting
- ICCP\_Create.Dataset
- ICCP\_Abort
- ICCP\_Start.Transfer.DSTransferSet
- ICCP\_Get.Dataset.Element.Values
- ICCP\_Get.Next.DSTransfer.Set.Value
- ICCP\_Delete.Dataset
- ICCP\_Start.Transfer.IMTransferSet

## Diagnose command

The COTP dissector adds support for identifying every MMS PDU, and let the IPS engine separate them, like the Modbus and IEC-104 services for example.

```
# diagnose ips debug enable all
# diagnose debug enable
```

```
[284@78]ips_17_dsct_processor: serial=8142 create: cotp
[284@78]ips_17_dsct_processor: serial=8142 create: iec104
[284@78]ips_17_dsct_processor: serial=8142 create: modbus
```

## Log samples

MMS dissectors can be triggered, and MMS/ICCP signatures can be monitored and logged.


### Log samples:

```
date=2020-03-26 time=15:51:10 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1585263070836106492 tz="-0700"
appid=43699 srcip=10.1.100.242 dstip=172.16.200.106 srcport=50963 dstport=102
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="tcp/26112" direction="outgoing" policyid=1 sessionid=2711 applist="test"
action="pass" appcat="Industrial" app="MMS_Read.Request" incidentserialno=376610508
msg="Industrial: MMS_Read.Request," apprisk="elevated"
```

```
date=2020-03-26 time=16:15:45 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1585091746264983273 tz="-0700"
appid=44684 srcip=10.1.100.242 dstip=172.16.200.106 srcport=41665 dstport=102
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="tcp/26112" direction="incoming" policyid=1 sessionid=194463 applist="test"
action="pass" appcat="Industrial" app="ICCP_Transfer.Reporting" incidentserialno=762763993
msg="Industrial: ICCP_Transfer.Reporting," apprisk="elevated"
```

## SCTP filtering capabilities

A Stream Control Transmission Protocol (SCTP) dissector and Payload Protocol Identifier (PPID) filter can be used to either terminate the SCTP session, or replace the offending data chunk with zeros to keep the client and server sequence numbers synchronized. The SCTP filter action can also pass the data chunk.

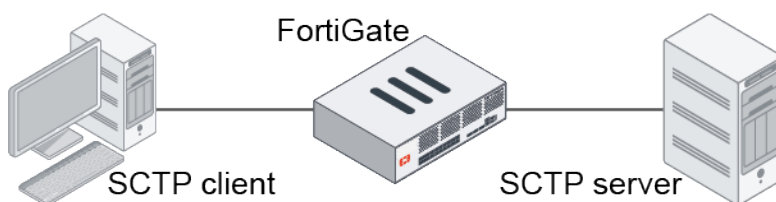

### To configure and test an SCTP filter:

1. Configure an SCTP filter profile that uses the reset action:

```
config sctp-filter profile
  edit "sctp"
    set comment "Demo profile"
    config ppid-filters
      edit 1
        set ppid 112233
        set action reset
        set comment "test chunk"
      next
    end
```



```

next
end

```


## 2. Use the SCTP filter profile in a firewall policy:

```


config firewall policy
edit 1
set name "1"
set srcintf "port38"
set dstintf "port37"
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set service "ALL"
set utm-status enable
set ssl-ssh-profile "new-deep-inspection"
set sctp-filter-profile "sctp"
set logtraffic all
next
end

```

## 3. On the SCTP client, confirm that the connection works and send a data chunk with PPID 112233.

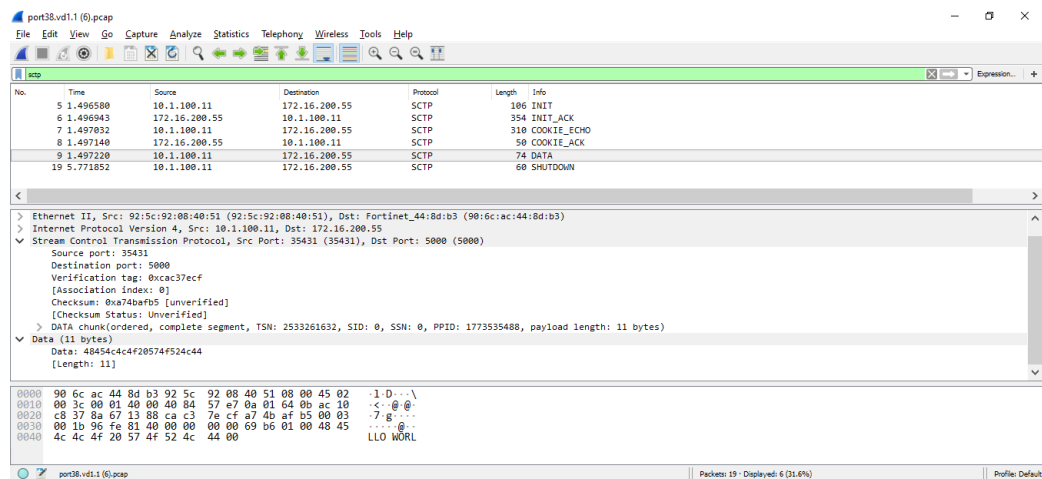

## 4. The IPS engine detects the data chunk. The PPID matches the PPID filter, and the filter action is reset, so the data chunk is not received on the server, and the session is terminated.

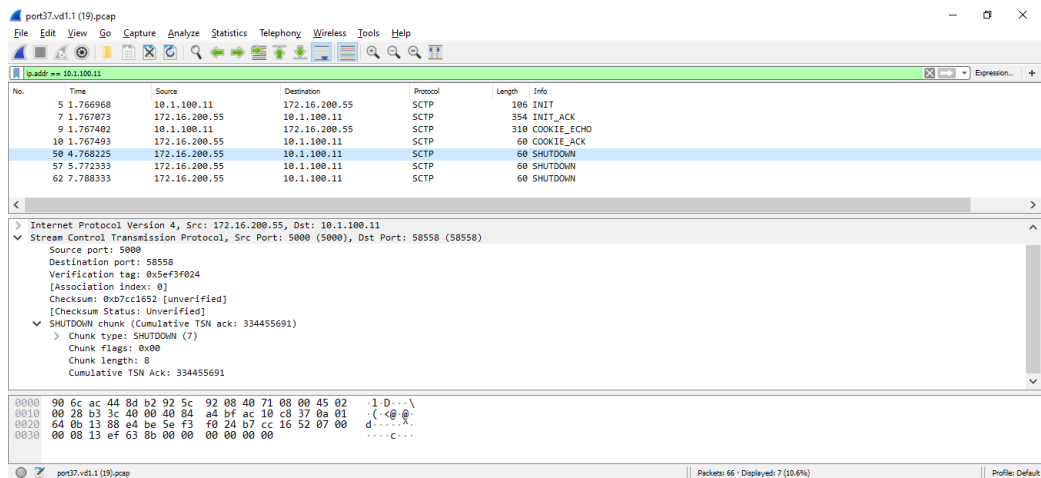


##### 5. Change the filter action to replace:

```
config sctp-filter profile
edit "sctp"
    config ppid-filters
        edit 1
            set action replace
        next
    end
next
end
```

##### 6. Resend the data chunk.

##### 7. The IPS engine detects the data chunk. The PPID matches the PPID filter, and the filter action is replace, so the data chunk is replaced with zeros.

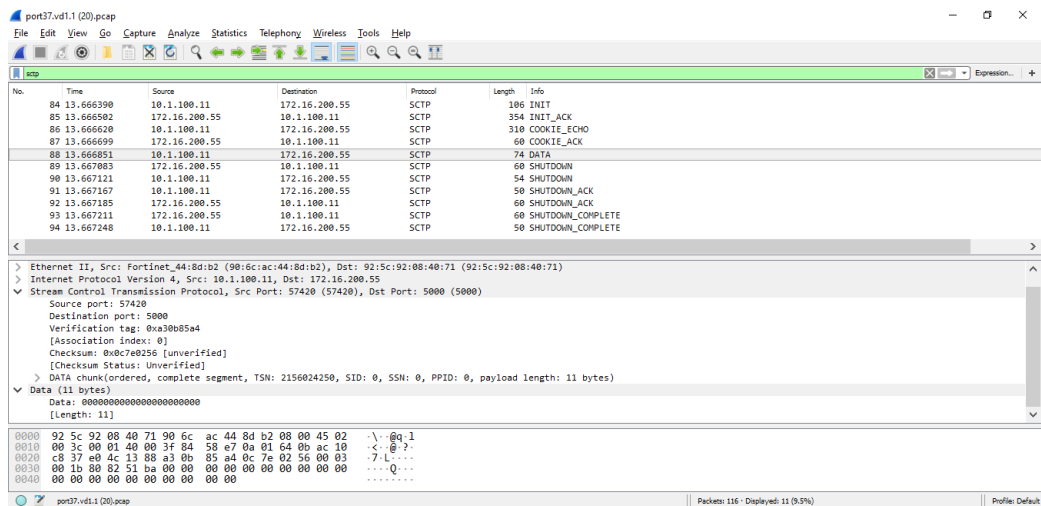

## File filter

A file filter can be configured to control the flow of different types of files passing through FortiGate. This is done by setting up rules that specify which file types are allowed or blocked. The file filter can be applied directly to firewall policies and supports various traffic protocols in proxy or flow mode. The feature set setting (proxy or flow) in the file filter profile must match the inspection mode setting (proxy or flow) in the associated firewall policy. For example, a flow-based file filter profile must be used with a flow-based firewall policy.



Prior to FortiOS 6.4.1, file filter was embedded in the web filter, email filter, SSH inspection, and CIFS profiles.

Protocol	Proxy mode	Flow mode
CIFS	Yes	Yes
FTP	Yes	Yes
HTTP	Yes	Yes
IMAP	Yes	Yes
MAPI	Yes	No
POP3	Yes	Yes
SMTP	Yes	Yes
SSH	Yes	No

File filtering is based only on the file type (file meta data) and not on file size or content. A DLP dictionary, sensor, and profile would need to be configured to block files based on size or content, such as SSN numbers, credit card numbers, or regular expressions (see [Basic DLP settings on page 1462](#) for more information).

The following options can be configured in a file filter profile:

GUI option	CLI option	Description
<b>Basic profile settings</b>		
<i>Name</i>	<code>name &lt;string&gt;</code>	Enter a unique name for the profile.
<i>Comments</i>	<code>comment &lt;var-string&gt;</code>	Enter a comment (optional).
<i>Scan archive contents</i>	<code>scan-archive-contents {enable   disable}</code>	Enable to scan archive contents.
<i>Feature set</i>	<code>feature-set {flow   proxy}</code>	Select the feature set for the profile. The feature set mode must match the inspection mode used in the associated firewall policy. <ul style="list-style-type: none"> <li>• <i>Flow-based</i></li> <li>• <i>Proxy-based</i></li> </ul>

GUI option	CLI option	Description
		<p>If the <i>Feature set</i> option is not visible in the GUI, enter the following in the CLI:</p> <pre>config system settings     set gui-proxy-inspection enable end</pre>
n/a	log {enable   disable}	Enable to use file filter logging. This setting is enabled by default.
n/a	extended-log {enable   disable}	Enable to use file filter extended logging. This setting is disabled by default.
n/a	replacemsg-group <string>	Set a replacement message group.
<b>File filter rule settings</b>		
<i>Name</i>	name <string>	Enter a unique name for the rule.
<i>Comments</i>	comment <var-string>	Enter a comment (optional).
<i>Protocols</i>	protocol {option1}, {option2}, ...	Set the protocols to apply to the rule. By default, all protocols are configured: CIFS, FTP, HTTP, IMAP, POP3, and SMTP in flow mode. Additionally, MAPI and SSH are configured by default in proxy mode.
<i>Traffic</i>	direction {incoming   outgoing   any}	<p>Set the traffic direction:</p> <ul style="list-style-type: none"> <li><i>Incoming</i>/incoming: match files transmitted in the session's reply direction.</li> <li><i>Outgoing</i>/outgoing: match files transmitted in the session's originating direction.</li> <li><i>Both</i>/any: match files transmitted in the session's originating and reply directions.</li> </ul>
<i>Password-protected only</i>	password-protected {yes   any}	Enable (yes) to match password-protected files. If the setting is not enabled, any file is matched.
<i>File types</i>	file-type <name1>, <name2>, ...	Select the file type. See <a href="#">Supported file types on page 1443</a> for the list of available options.
<i>Action</i>	action {log-only   block}	<p>Set the action to take for a matched file:</p> <ul style="list-style-type: none"> <li><i>Monitor</i>/log-only: allow the content and write a log message.</li> <li><i>Block</i>/block: block the content and write a log message.</li> </ul>

## Configuring a file filter profile

In this example, a flow-based file filter is created that has two rules.

- Rule 1: applied to HTTP, FTP, SMTP, IMAP, POP3, and CIFS to monitor any matched .NET, 7-Zip, ActiveMime, ARJ, ASPack, AVI, Base64, Windows batch, BinHex, BMP, Bzip, and Bzip2 files transmitted in the session's originating and reply directions.
- Rule 2: applied to HTTP, FTP, SMTP, IMAP, POP3, and CIFS to block any matched SIS, TAR, TIFF, torrent, UPX, UUE, WAV, WMA, ZAR archive, XZ, and ZIP files transmitted in the session's originating direction.

### To configure a file filter in the GUI:

1. Configure the filter profile:
  - a. Go to *Security Profiles > File Filter* and click *Create New*.
  - b. Enter a name.
  - c. Set the *Feature set* to *Flow-based*.
  - d. In the *Rules* table, click *Create New*.
  - e. Configure rule 1 as follows:

<b>Name</b>	r1
<b>Protocols</b>	HTTP, FTP, SMTP, IMAP, POP3, CIFS
<b>Traffic</b>	Both
<b>Password-protected only</b>	Deselect
<b>File types</b>	.net, 7z, activemime, arj, aspack, avi, base64, bat, binhex, bmp, bzip, bzip2
<b>Action</b>	Monitor

- f. Click *OK* to save the rule.
  - g. In the *Rules* table, click *Create New* and configure rule 2 as follows:

<b>Name</b>	r2
<b>Protocols</b>	HTTP, FTP, SMTP, IMAP, POP3, CIFS
<b>Traffic</b>	Outgoing
<b>Password-protected only</b>	Deselect
<b>File types</b>	sis, tar, tiff, torrent, upx, uue, wav, wma, xar, xz, zip
<b>Action</b>	Block

**Create New File Filter Rule**

Name: r2

Comments: Write a comment... 0/255

Protocols: CIFS, FTP, HTTP, IMAP, POP3, SMTP

Traffic: Incoming, **Outgoing**, Both

Match Files

Password-protected only: ☐

File types: sis, tar, tiff, torrent, upx, uue, wav, wma, xar, xz, zip

Action: ☐ Monitor, ☒ Block

OK Cancel

- h. Click OK to save the rule.
- i. Click OK to save the filter profile.

**New File Filter Profile**

Name: test

Comments: Write a comment... 0/255

Scan archive contents: ☒

Feature set: **Flow-based**, Proxy-based

Rules

Rule	Comments	Traffic	Protocols	Match Files	Action	File Types
r1		Both	CIFS FTP +4	Any	<input checked="" type="radio"/> Mon...	.net 7z +10
r2		Outgoing	CIFS FTP +4	Any	<input checked="" type="radio"/> Block	sis tar +9

OK Cancel

FortiGate

FGDocs

Additional Information

API Preview

References

Online Guides

Relevant Documentation

Video Tutorials

Hot Questions at FortiAnswers

Why am I able to download infected files with Deep Inspection, and AV and/or File Filter enabled?

2 Answers 0 Votes 898 Views

See More

2. Apply the filter to a policy:
  - a. Go to *Policy & Objects > Firewall Policy* and edit an existing policy or create a new one.
  - b. In the *Security Profiles* section, enable *File Filter*.
  - c. Select the filter from the dropdown box (*test*).
  - d. Configure the other settings as needed.
  - e. Click OK.

**To configure a file filter in the CLI:****1. Configure the file filter profile:**

```

config file-filter profile
    edit "test"
        set comment ''
        set feature-set flow
        set replacemsg-group ''
        set log enable
        set scan-archive-contents enable
        config rules
            edit "r1"
                set comment ''
                set protocol http ftp smtp imap pop3 cifs
                set action log-only
                set direction any
                set password-protected any
                set file-type ".net" "7z" "activemime" "arj" "aspack" "avi" "base64"
                "bat" "binhex" "bmp" "bzip" "bzip2"
            next
            edit "r2"
                set comment ''
                set protocol http ftp smtp imap pop3 cifs
                set action block
                set direction outgoing
                set password-protected any
                set file-type "sis" "tar" "tiff" "torrent" "upx" "uue" "wav" "wma" "xar"
                "xz" "zip"
            next
        end
    next
end

```

**2. Apply the filter to a policy:**

```

config firewall policy
    edit 1
        set name "filefilter-policy"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set file-filter-profile "test"
        set auto-asic-offload disable
        set np-acceleration disable
        set nat enable
    next
end

```

**To view file filter logs in the GUI:**

1. Go to *Log & Report > Security Events*.
2. Select the *File Filter* card.

**To view file filter logs in the CLI:**

```
# execute log filter category utm-file-filter
# execute log display
```

**Log samples**

```
date=2020-04-21 time=17:04:02 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513843211612684 tz="-0700"
policyid=1 sessionid=1751 srcip=10.1.100.22 srcport=57382 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=445 dstintf="port23"
dstintfrole="undefined" proto=6 service="CIFS" profile="filefilter" direction="incoming"
action="blocked" filtername="1" filename="sample\\putty.exe" filesize=454656 filetype="exe"
msg="File was blocked by file filter."
```

```
date=2020-04-21 time=17:03:54 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513834376811325 tz="-0700"
policyid=1 sessionid=1742 srcip=10.1.100.22 srcport=36754 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=22 dstintf="port23"
dstintfrole="undefined" proto=6 service="SSH" subservice="SCP" profile="filefilter"
direction="incoming" action="blocked" filtername="1" filename="test.pdf" filesize=571051
filetype="pdf" msg="File was blocked by file filter."
```

```
date=2020-04-21 time=17:00:30 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513630482716465 tz="-0700"
policyid=1 sessionid=1684 srcip=10.1.100.22 srcport=58524 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=143 dstintf="port23"
dstintfrole="undefined" proto=6 service="IMAP" profile="filefilter" direction="incoming"
action="blocked" from="pc4user1@qa.fortinet.com" to="pc4user2@qa.fortinet.com"
recipient="pc4user2" subject="QA Test" filtername="1" filename="test.JPG" filesize=48079
filetype="jpeg" msg="File was blocked by file filter."
```

```
date=2020-04-21 time=16:59:58 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513598866551739 tz="-0700"
policyid=1 sessionid=1674 srcip=10.1.100.22 srcport=39854 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=110 dstintf="port23"
dstintfrole="undefined" proto=6 service="POP3" profile="filefilter" direction="incoming"
action="blocked" from="pc4user1@qa.fortinet.com" to="pc4user2@qa.fortinet.com"
recipient="pc4user2" subject="QA Test" filtername="1" filename="test.JPG" filesize=48079
filetype="jpeg" msg="File was blocked by file filter."
```

```
date=2020-04-21 time=16:58:31 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513511516745955 tz="-0700"
policyid=1 sessionid=1619 srcip=10.1.100.22 srcport=53144 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=25 dstintf="port23"
dstintfrole="undefined" proto=6 service="SMTP" profile="filefilter" direction="outgoing"
action="blocked" from="pc4user1@qa.fortinet.com" to="pc4user2@qa.fortinet.com"
sender="pc4user1@qa.fortinet.com" recipient="pc4user2@qa.fortinet.com" subject="QA Test"
filtername="1" filename="test.PNG" filesize=65173 filetype="png" msg="File was blocked by
file filter."
```



```
date=2020-04-21 time=16:58:14 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1587513494608988795 tz="-0700"
policyid=1 sessionid=1605 srcip=10.1.100.22 srcport=43186 srcintf="port21"
srcintfrole="undefined" dstip=172.16.200.44 dstport=21 dstintf="port23"
dstintfrole="undefined" proto=6 service="FTP" profile="filefilter" direction="incoming"
action="blocked" filtername="1" filename="index.html" filesize=21 filetype="html" msg="File
was blocked by file filter."
```

## Supported file types

File filter allows the FortiGate to block files passing through based on file type based on the file's meta data only, and not on file size or file content. A DLP profile must be configured to block files based on size or content, such as SSN numbers, credit card numbers, or regexp.

The following file types are supported in file filter and DLP profiles:

Type	Description
.net	Match .NET files
7z	Match 7-Zip files
activemime	Match ActiveMime files
arj	Match ARJ compressed files
aspack	Match ASPack files
avi	Match AVI files
base64	Match Base64 files
bat	Match Windows batch files
binhex	Match BinHex files
bmp	Match BMP files
bzip	Match Bzip files
bzip2	Match Bzip2 files
cab	Match Windows CAB files
chm	Match Windows compiled HTML help files
class	Match CLASS files
cod	Match COD files
crx	Match Chrome extension files
dmg	Match Apple disk image files
elf	Match ELF files
exe	Match Windows executable files
flac	Match FLAC files

Type	Description
fsg	Match FSG files
gif	Match GIF files
gzip	Match Gzip files
hlp	Match Windows help files
hta	Match HTA files
html	Match HTML files
iso	Match ISO archive files
jad	Match JAD files
javascript	Match JavaScript files
jpeg	Match JPEG files
lzh	Match LZH compressed files
mach-o	Match Mach object files
mime	Match MIME files
mov	Match MOV files
mp3	Match MP3 files
mpeg	Match MPEG files
msi	Match Windows Installer MSI Bzip files
msoffice	Match MS-Office files. For example, DOC, XLS, PPT, and so on.
msofficex	Match MS-Office XML files. For example, DOCX, XLSX, PPTX, and so on.
pdf	Match PDF files
petite	Match Petite files
png	Match PNG files
rar	Match RAR archives
rm	Match RM files
sis	Match SIS files
tar	Match TAR files
tiff	Match TIFF files
torrent	Match torrent files
unknown*	Match unknown files
upx	Match UPX files

Type	Description
uue	Match UUE files
wav	Match WAV files
wma	Match WMA files
xar	Match XAR archive files
xz	Match XZ files
zip	Match ZIP files

\* This file type is only available in DLP profiles.

## Email filter

Email filters can be configured to perform spam detection and filtering. You can customize the default profile, or create your own and apply it to a firewall policy.



Two kinds of filtering can be defined in a single profile, and they will act independent of one another.

Filter options can be organized according to the source of the decision:

- Local options: the FortiGate qualifies the email based on local conditions, such as block/allowlists, banned words, or DNS checks using FortiGuard Antispam.
- FortiGuard-based options: the FortiGate qualifies the email based on the score or verdict returned from FortiGuard Antispam.
- Third-party options: the FortiGate qualifies the email based on information from a third-party source (like an ORB list).

Local and FortiGuard block/allowlists can be enabled and combined in a single profile. When combined, the local block/allowlist has a higher priority than the FortiGuard block list during a decision making process. For example, if a client IP address is blocklisted in the FortiGuard server, but you want to override this decision and allow the IP to pass through the filter, you can define the IP address or subnet in a local block/allowlist with the clear action. Because the information coming from the local list has a higher priority than the FortiGuard service, the email will be considered clean.



Some features of this functionality require a subscription to FortiGuard Antispam.

## Protocol comparison between email filter inspection modes

The following table indicates which email filters are supported by their designated inspection modes.

	SMTP	POP3	IMAP	MAPI
Proxy	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	No

The following topics provide information about email filter profiles:

- [Configuring an email filter profile on page 1446](#)
- [Local-based filters on page 1447](#)
- [FortiGuard-based filters on page 1454](#)
- [Third-party-based filters on page 1456](#)
- [Filtering order on page 1456](#)
- [Protocols and actions on page 1458](#)
- [Configuring webmail filtering on page 1459](#)

## Configuring an email filter profile

Email filters can be configured to perform spam detection and filtering.

### To configure an email filter profile:

1. Go to *Security Profiles > Email filter* and click *Create New*.
2. Configure the following settings:

<i>Name</i>	Enter a unique name for the profile.
<i>Comments</i>	Enter a comment (optional).
<i>Enable spam detection and filtering</i>	Enable/disable spam detection and filtering.
<i>Spam Detection by Protocol</i>	Configure settings for SMTP, POP3, IMAP, and MAPI protocols. See <a href="#">Protocols and actions on page 1458</a> and <a href="#">Filtering order on page 1456</a> for more information.
<i>FortiGuard Spam Filtering</i>	The FortiGate consults FortiGuard servers to help identify spammer IP address or emails, known phishing and spam URLs, known spam email checksums, and others. See <a href="#">FortiGuard-based filters on page 1454</a> for more information.
<i>Local Spam Filtering</i>	Enable and configure local spam filters. See <a href="#">Local-based filters on page 1447</a> for more information.

3. Click *OK*.

## Local-based filters

There are six types of local spam filters:

- [HELO DNS lookup](#)
- [Return email DNS check](#)
- [Block/allow list](#)
- [Banned words](#)\*
- [Trusted IP addresses](#)\*
- [MIME header](#)\*

\* These filters can only be configured in the CLI.



By default, HELO DNS and return email DNS checks are done before the block/allow list check. In some situations, such as when configuring a block/allow list to clear an email from performing further filtering, configure the following to give precedence to the block/allow list:

```
config emailfilter profile
  edit <name>
    config smtp
      set local-override enable
    next
  end
end
```



HELO DNS lookup and return email DNS checking are not supported while in flow-based inspection mode. See [Inspection mode feature comparison on page 1265](#).

## HELO DNS lookup

Whenever a client opens an SMTP session with a server, the client sends a HELO command with the client domain name. The FortiGate takes the domain name specified by the client in the HELO and performs a DNS lookup to determine if the domain exists. If the lookup fails, the FortiGate determines that any emails delivered during the SMTP session are spam. The HELO DNS lookup is only available for SMTP traffic.

## Return email DNS check

The FortiGate performs a DNS lookup on the return field. If no such record exists, the email is treated as spam. When return email DNS checking is enabled, the FortiGate takes the domain in the reply-to email address and reply-to domain, and checks the DNS servers to see if there is an A or MX record for the domain. If the domain does not exist, the FortiGate treats the email as spam.

## Block/allow list

Block/allow lists can be made from emails or IP subnets to forbid or allow them to send or receive emails. The following table summarizes the configurable options in a block/allow list.

Type	Description	Pattern	Action
<i>IP/Netmask and IPv6/Netmask</i>	<p>The FortiGate compares the IP address of the client delivering the email to the addresses in the IP address block/allow list specified in the email filter profile.</p> <p>If a match is found, the FortiGate takes the action configured for the matching block/allow list entry against all delivered email.</p> <p>By default the <code>hdrip</code> setting under <code>config smtp</code> is disabled. If enabled, the FortiGate checks all the IP addresses in the header of SMTP email against the specified IP address block/allow list.</p>	The filter is an IP address with a subnet mask.	<ul style="list-style-type: none"> <li>• <b>Mark as Reject:</b> the email is dropped before reaching its destination.</li> <li>• <b>Mark as Spam:</b> the email is allowed through, but it will be tagged with an indicator marking the email as spam.</li> <li>• <b>Mark as Clear:</b> the email is allowed to go through to its destination on the assumption that it is not spam.</li> </ul>
<i>Recipient Address</i>	The FortiGate compares the sender email address to the contents of the RCPT TO envelope header and To: mail header to the specified pattern. If a match is found, the FortiGate takes the action configured for the matching block/allow list entry.	<ul style="list-style-type: none"> <li>• <b>Wildcard:</b> the filter is an email address with a wildcard symbol in place of the variable characters (such as <code>*.example.com</code> or <code>fred@*.com</code>).</li> <li>• <b>Regular Expression:</b> the filter is a regular expression. For example, <code>^[a-z0-9-]+(\.[a-z0-9-]+)*@(example xample examp).com org net</code> can be used to filter based on a number of email domain name combinations.</li> </ul>	<ul style="list-style-type: none"> <li>• <b>Mark as Spam:</b> the email is allowed through, but it will be tagged with an indicator marking the email as spam.</li> <li>• <b>Mark as Clear:</b> the email is allowed to go through to its destination on the assumption that it is not spam.</li> </ul>
<i>Sender Address</i>	The FortiGate compares the sender email address to the contents of the MAIL FROM envelope header, From: mail header, and Sender: mail header to the specified pattern. If a match is found, the FortiGate takes the action configured for the matching block/allow list entry.		
<i>Subject</i>	The FortiGate compares the sender email address to the contents of the Subject: mail header to the specified pattern. If a match is found, the FortiGate takes the action configured for the matching block/allow list entry.		

## Banned words

When banned word checking is enabled, the FortiGate examines emails for words that appear in the banned word list specified in the email filter profile.

The banned word pattern can be either wildcard or Perl regular expression, which could include part of a word, a whole word, a phrase, multiple words, or multiple phrases.

Each time the banned word filter detects a pattern in an email, it adds the pattern score to the sum of scores for the message. The score is set when creating a new pattern to block content (`set score`). Higher scores indicate more offensive content. If the total score of the discovered banned words in the email exceeds the threshold value set in the email filter profile, then the FortiGate treats the email as spam. The score for each pattern is counted only once, even if that pattern appears many times in the email. The default score for banned word patterns is 10, and the default threshold in the email filter is 10. This means that by default, an email message is blocked by a single match.

For example, if the FortiGate scans an email containing only this sentence: "The score for each word or phrase is counted only once, even if that word or phrase appears many times in the email message." and the banned word list contains the following patterns:

Banned word pattern	Pattern type	Assigned score	Score added to sum for entire page	Comments
word	Wildcard	20	20	The pattern appears twice, but it is counted once.
word phrase	Wildcard	20	0	Both words appear in the email, but they do not appear together as specified in the pattern. There are no matches.
word*phrase	Wildcard	20	20	A match occurs as long as "word" appears before "phrase" regardless of what is in between them. The pattern appears twice, but it is counted once.
mail*age	Wildcard	20	20	This pattern is a match because "email message" appears in the email.

The email would be treated as spam if the banned word threshold is set to 60 or less.

### To apply a banned word filter to an email filter profile:

#### 1. Configure the banned words list:

```
config emailfilter bword
  edit 1
    set name "banned"
    config entries
      edit 23
        set pattern-type {wildcard | regexp}
        set pattern <string>
        set score <1 - 99999>
      next
    end
```

```

    next
end

```

## 2. Configure the email filter profile:

```

config emailfilter profile
    edit "myBannedWordsProfile"
        set spam-filtering enable
        set options bannedword
        set spam-bword-threshold <0 - 2147483647>
        set spam-bword-table 23
    next
end

```



Once a banned word list is configured in the CLI and applied to an email filter profile, some settings can be edited in the GUI for that particular email filter profile. A banned word profile can be selected, and its *Threshold* (spam-bword-threshold) can be edited.

## Trusted IP addresses

When the FortiGate creates a list of trusted IP addresses, any incoming email traffic from these IP address is exempt from having IP-based checks, such as DNSBL, RBL, FortiGuard Antispam service, or locally-defined IP block lists.

If the FortiGate sits behind a company's mail transfer units, it may be unnecessary to check email IP addresses because they are internal and trusted. In this case, only external IP addresses would be checked. In some cases, external IP addresses may be added to the list if they are known to not be spam sources.

### To configure a trusted IP address list:

#### 1. Define the IP address list:

```

config emailfilter iptrust
    edit 1
        set name "trustedIP"
        config entries
            edit 33
                set addr-type {ipv4 | ipv6}
                set ipv4-subnet <IPv4_classnet>
                set ipv6-subnet <IPv6_network>
            next
        end
    next
end

```

#### 2. Add the list to the email filter profile:

```

config emailfilter profile
    edit "email_filter_profile"
        set spam-iptrust-table 1
    next
end

```



## MIME header

This feature filters by the MIME header.

### To configure a MIME header check:

#### 1. Define the header content:

```
config emailfilter mheader
  edit 100
    set name "mheader"
    config entries
      edit 1
        set fieldname <string>
        set fieldbody <string>
        set pattern-type {wildcard | regexp}
        set action {spam | clear}
      next
    end
  next
end
```

#### 2. Add the header to the email filter profile:

```
config emailfilter profile
  edit "email_filter_profile"
    set options spamhdrcheck
    set spam-mheader-table 100
  next
end
```

## Configuring a local-based email filter

### To configure a local-based email filter in the GUI:

#### 1. Configure the email filter profile:

- a. Go to *Security Profiles > Email Filter* and click *Create New*, or edit an existing profile.
- b. Select a *Feature set* (*Proxy-based* is used in this example) and enable *Enable spam detection and filtering*.
- c. In the *Local Spam Filtering* section, enable the desired filters (*HELO DNS Lookup*, *Return Email DNS Check*, *Block/Allow List*).
- d. In the *Block/Allow List* table, click *Create New*. The *Create Anti-Spam Block/Allow List Entry* pane opens.
- e. Set the *Type* to *IP/Netmask* and enter an *IP/Netmask*.

f. Select an *Action*.

**Create Anti-Spam Block/Allow List Entry**

Name:

Comments:

Feature set:

Enable spam detection and filtering: ☒

Spam Detection by Protocol: ☐

FortiGuard Spam Filtering: ☐

Local Spam Filtering: ☐

HELO DNS Lookup: ☒

Return Email DNS Check: ☒

Block/Allow List: ☒

[+ Create New](#) [Edit](#)

Type	Pattern	Action	Status
IP/Netmask	10.1.100.0 255.255.255.0	Mark as Reject <b>Mark as Spam</b> Mark as Clear	<input checked="" type="checkbox"/>

**OK**

g. Click *OK* to save the block/allow list.

**New Email Filter Profile**

Name:

Comments:  0/255

Feature set:  **Proxy-based**

Enable spam detection and filtering: ☒

Spam Detection by Protocol: ☐

FortiGuard Spam Filtering: ☐

Local Spam Filtering: ☐

HELO DNS Lookup: ☒

Return Email DNS Check: ☒

Block/Allow List: ☒

[+ Create New](#) [Edit](#) [Delete](#)

Type	Pattern	Action	Status
IP/Netmask	10.1.100.0 255.255.255.0	Mark as Spam	<input checked="" type="checkbox"/> Enable

**OK**

**Additional Information**

[API Preview](#)

[Documentation](#)


[Online Help](#) [Video Tutorials](#)

h. Click *OK* save the email filter profile.

## 2. Configure the firewall policy:

- Go to *Policy & Objects > Firewall Policy* and click *Create New*, or edit an existing policy.
- Set the inspection-mode to *Proxy-based*.

- c. Enable the *Email Filter* option and select the previously created profile.

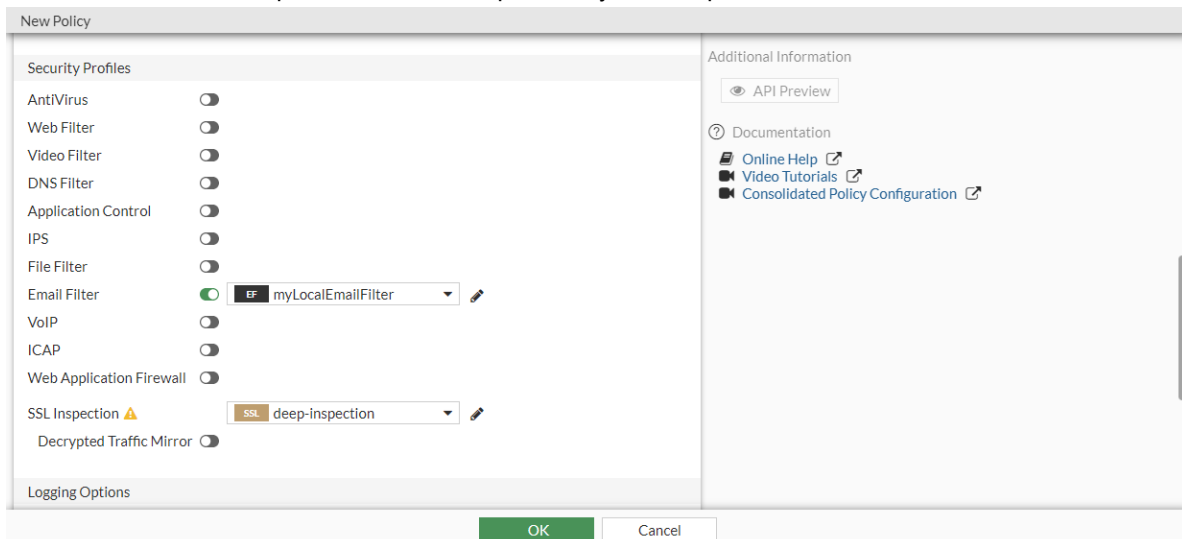

- d. Set *SSL Inspection* to a profile that has deep SSL inspection enabled.  
Deep inspection is required to filter SMTP, POP3, IMAP, or any SSL/TLS encapsulated protocol.
- e. Configure the other settings as needed.
- f. Click *OK*.

### To configure a local-based email filter in the CLI:

1. Configure a block/allow list:

```
config emailfilter block-allow-list
  edit 1
    set name "myBAL"
    config entries
      edit 1
        set status enable
        set type ip
        set action spam
        set addr-type ipv4
        set ip4-subnet 10.1.100.0 255.255.255.0
      next
    end
  next
end
```

2. Configure an email filter profile:

```
config emailfilter profile
  edit "myLocalEmailFilter"
    set spam-filtering enable
    set options spambal spamhelodns spamraddrdns
    config smtp
      set action tag
    end
    set spam-bal-table 1
  next
end
```

**3. Use the profile in a firewall policy:**

```
config firewall policy
  edit 1
    set inspection-mode proxy
    set ssl-ssh-profile "deep-inspection"
    set emailfilter-profile "myLocalEmailFilter"
  next
end
```

## FortiGuard-based filters

The FortiGate consults FortiGuard servers to help identify spammer IP address or emails, known phishing URLs, known spam URLs, known spam email checksums, and others. For more information, refer to the [FortiGuard](#) website.

There are five FortiGuard spam filtering options:

- [IP address check](#)
- [URL check](#)
- [Detect phishing URLs in email](#) (requires URL check to be enabled)
- [Email checksum check](#)
- [Spam submission](#)



FortiGuard-based filters are not supported while in flow-based inspection mode. See [Inspection mode feature comparison on page 1265](#).

---

### IP address check

The FortiGate queries the FortiGuard Antispam service to determine if the IP address of the client delivering the email is in the block list. If there is a match, the FortiGate treats delivered emails as spam.

### URL check

The FortiGate submits all URLs that appear in the email body to the FortiGuard service for checking. If a URL exists in the FortiGuard URL block list, the FortiGate treats the email as spam.

### Detect phishing URLs in email

The FortiGate submits all URL hyperlinks that appear in the email body to the FortiGuard service for checking. If a URL exists in the FortiGuard URL phishing list, the FortiGate removes the hyperlink from the message. The URL remains in place, but it is no longer a clickable hyperlink.

### Email checksum check

The FortiGate submits a checksum of each email to the FortiGuard service for checking. If a checksum exists in the FortiGuard checksum block list, the FortiGate treats the email as spam.

## Spam submission

Spam submission is a way to inform the FortiGuard Antispam service of non-spam messages incorrectly marked as spam. When enabled, the FortiGate adds a link to the end of every email marked as spam. Click the link to notify the FortiGuard Antispam service if an email is marked incorrectly.

## Configuring FortiGuard filters

To configure FortiGuard filters in the GUI:

1. Go to *Security Profiles > Email Filter* and click *Create New*.
2. Enable *Enable spam detection and filtering*.
3. In the *FortiGuard Spam Filtering* section, enable the following as needed:
  - *IP Address Check*
  - *URL Check*
  - *Detect Phishing URLs in Email*
  - *Email Checksum Check*
  - *Spam Submission*

Protocol	Spam Action	Tag Location	Tag Format
IMAP	Tag	Subject	Spam
POP3	Tag	Subject	Spam
SMTP	Discard	Subject	Spam

**FortiGuard Spam Filtering**

- IP Address Check ☒
- URL Check ☒
- Detect Phishing URLs in Email ☒
- Email Checksum Check ☒
- Spam Submission ☒

**Local Spam Filtering**

4. Click **OK**.

To configure FortiGuard filters in the CLI:

```
config emailfilter profile
  edit <name>
    set spam-filtering enable
    set options spamfsip spamfsurl spamfsphish spamfschksum spamfssubmit
  next
end
```

Option	Description
spamfsip	Check email IP addresses
spamfsurl	Check email content URLs
spamfsphish	Check email content phishing URLs
spamfschksum	Check email checksums
spamfssubmit	Add FortiGuard Antispam spam submission text

## Third-party-based filters

In addition to local and FortiGuard filters, FortiOS can leverage third-party sources, which are known as DNS-based blackhole lists (DNSBL) or Open Relay Behavior-modification Systems (ORBS). These are maintained lists of IP addresses that have been identified as associated with spamming.

The following example demonstrates how to configure a DNSBL. The `config emailfilter dnsbl` command is used to configure either DNSBL or ORBS.

### To configure a DNSBL:

1. Define the server to get the DNSBL list from:

```
config emailfilter dnsbl
  edit 100
    set name "dnsbl"
    config entries
      edit 1
        set status enable
        set server <IP address or server name>
        set action {reject | spam}
      next
    end
  next
end
```

2. Add the DNSBL list to an email filter profile:

```
config emailfilter profile
  edit "email_filter_profile"
    set options spamrbl
    set spam-rbl-table 100
  next
end
```

## Filtering order

The FortiGate checks for spam using various filtering techniques. The filtering order used by the FortiGate depends on which mail protocol is used.

Filters requiring a query to a server and a reply (FortiGuard Antispam service and DNSBL/ORDBL) are run simultaneously. To avoid delays, queries are sent while other filters are running. The first reply to trigger a spam action takes effect as soon as the reply is received.

Each spam filter passes the email to the next if no matches or problems are found. If the action in the filter is *Mark as Spam*, the FortiGate tags the email as spam according to the settings in the email filter profile. If the action in the filter is *Mark as Reject*, the email session is dropped. If the action in the filter is *Mark as Clear*, the email is exempt from any remaining filters. For SMTP and SMTPS, if the action is *Discard*, the email is discarded or dropped.

## SMTP and SMTPS spam filtering order

The FortiGate scans SMTP and SMTPS email for spam in a specific order, which depends on whether or not the local override feature is enabled. This feature is disabled by default, but enabling it gives priority to local spam filters.

You can enable local override (set `local-override`) in an email filter profile to override SMTP or SMTPS remote checks, which includes checks for IP RBL, IP FortiGuard AntiSpam, and HELO DNS with the locally defined antispam block and/or allow lists.



SMTPS spam filtering is available on FortiGates that support SSL content scanning and inspection.

### To configure local override of an antispam filter:

```
config emailfilter profile
  edit <name>
    set spam-filtering enable
    set options spambal spamfsip spamfsurl spamhelodns spamfsphish
    config smtp
      set local-override {enable | disable}
    end
    set spam-bal-table 1
  next
end
```

Local override disabled	Local override enabled
<ol style="list-style-type: none"> <li>1. HELO DNS lookup, last hop IP check against ORDBL</li> <li>2. Return email DNS check, FortiGuard email checksum check, FortiGuard URL check, FortiGuard IP address check, phishing URLs detection</li> <li>3. Last hop IP checks local block/allow list</li> <li>4. Envelope address checks local block/allow list</li> <li>5. Headers IPs local block/allow list</li> <li>6. Headers email address local block/allow list, MIME header checks based on local list of patterns (<code>mheader</code>)</li> <li>7. Banned words (subject first, then body) based on local block/allow list (<code>bword</code>)</li> </ol>	<ol style="list-style-type: none"> <li>1. Last hop IP checks local block/allow list</li> <li>2. Envelope address checks local block/allow list</li> <li>3. Headers IPs local block/allow list, MIME header checks based on local list of patterns (<code>mheader</code>)</li> <li>4. Headers email address local block/allow list</li> <li>5. Banned words (subject first, then body) based on local list of patterns (<code>bword</code>)</li> <li>6. HELO DNS lookup, last hop IP check against ORDBL</li> <li>7. Return email DNS check, FortiGuard email checksum check, FortiGuard URL check, FortiGuard IP address check, phishing URLs detection</li> </ol>

## IMAP, IMAPS, POP3, and POP3S spam filtering order

The FortiGate scans IMAP, IMAPS, POP3, and POP3S email for spam in the following order:

1. MIME headers check, email address block/allow list check
2. Banned word check on email subject
3. IP block/allow list check
4. Banned word check on email body
5. Return email DNS check, FortiGuard email checksum check, FortiGuard URL check, DNSBL and ORDBL checks



IMAPS and POP3S spam filtering are available on FortiGates that support SSL content scanning and inspection.

---

## Protocols and actions

In an email filter profile, there are options to configure settings for SMTP, POP3, IMAP, and MAPI protocols. For each protocol, you can set an action to either discard (block), tag, or pass the log for that protocol. The action options vary per protocol. For the tag action, the spam email can be tagged with configured text in the subject or header.



MAPI is only configurable in the CLI and with the proxy feature set.

---

### To configure protocols in an email filter:

```
config emailfilter profile
  edit <name>
    set feature-set {flow | proxy}
    set spam-filtering enable
    set options {bannedword spambal spamfsip spamfssubmit spamfschksum spamfsurl
spamhelodns spamraddrdns spamrbl spamhdrcheck spamfshish}
    config smtp
      set log-all {enable | disable}
      set action {pass | tag | discard}
      set tag-type {subject | header | spaminfo}
      set tag-msg <string>
      set hdrip {enable | disable}
      set local-override {enable | disable}
    end
    config imap
      set log-all {enable | disable}
      set action {pass | tag}
      set tag-type {subject | header | spaminfo}
      set tag-msg <string>
    end
    config pop3
      set log-all {enable | disable}
      set action {pass | tag}
```



```

        set tag-type {subject | header | spaminfo}
        set tag-msg <string>
    end
    config mapi
        set log-all {enable | disable}
        set action {pass | discard}
    end
next
end

```

options ...

The following options are available:

- bannedword: content block.
- spambal: block/allow list.
- spamfsip: email IP address FortiGuard antispam block list check.
- spamfssubmit: add FortiGuard antispam spam submission text.
- spamfschksum: email checksum FortiGuard antispam check.
- spamfsurl: email content URL FortiGuard antispam check.
- spamhelodns: email HELO/EHLO domain DNS check.
- spamraddrdns: email return address DNS check.
- spamrbl: email DNSBL and ORBL check.
- spamhdrcheck: email MIME header check.
- spamfsphish: email content phishing URL FortiGuard antispam check.

tag-type {subject |  
header | spaminfo}

Set the tag type:

- subject: prepend text to the spam email subject.
- header: append a user-defined MIME header to the spam email.
- spaminfo: append spam information to the spam email header.

tag-msg <string>

Subject text or header added to the spam email.

hdrrip {enable | disable}

Enable/disable SMTP email header IP checks for spamfsip, spamrbl, and spambal filters.

local-override {enable |  
disable}

Enable/disable local filter to override SMTP remote check result.

For more information, see [config emailfilter profile](#) in the FortiOS CLI Reference.

## Configuring webmail filtering

You can configure an email filter to detect and log emails sent by Gmail and Hotmail. These interfaces do not use standard email protocols (SMTP, POP3, or IMAP) and use HTTPS instead. However, you can still configure the email filter to detect emails that pass through the FortiGate.



The FortiGate only detects and logs the emails, it does not discard or tag them.

**To configure webmail filtering:**

```
config emailfilter profile
  edit <name>
    set spam-filtering enable
    config msn-hotmail
      set log-all enable
    end
    config gmail
      set log-all enable
    end
  next
end
```

## Data leak prevention

The FortiGate data leak prevention (DLP) system prevents sensitive data from leaving or entering your network by scanning for various patterns while inspecting traffic passing through the FortiGate. Data matching defined sensitive data patterns is blocked, logged, allowed, or quarantined when it passes through the FortiGate.

The DLP system is configured based on the following components:

Component	Description
Data type	Define the type of pattern that DLP is trying to match. For example, this can be a pre-defined type such as keyword, regex, hex, credit card, US social security number (SSN), or other patterns. You can also create custom data types.
Dictionary	A collection of data type entries. When selecting a data type such as keyword, regex or hex, define the pattern that you are looking for.
Sensor	Define which dictionaries to check. You can match any dictionary, all dictionaries, or a special logical combination of the dictionaries. It can also count the number of dictionary matches to trigger the sensor.
File pattern	Define groups of file patterns based on pre-defined file types, or define your own pattern to match the file name.
DLP profile	Define rules for matching a sensor based on a file type or a message, and the type of protocol being used. It also allows you to choose the action to allow, log, block, or quarantine the address.

A DLP profile selects one or more sensors, and applies the sensor's pattern matching against the file type or message that is passing through selected protocols. The profile can be applied to a firewall policy where the traffic will be inspected.

In the backend, DLP uses Hyperscan to perform a one-parse algorithm for scanning multiple patterns. This allows DLP to scale up without any performance downgrade.

## Protocol comparison between DLP inspection modes

The following table indicates which protocols can be inspected by DLP based on the specified inspection modes.

	HTTP	FTP	IMAP	POP3	SMTP	NNTP	MAPI	CIFS	SFTP/SCP
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	Yes	Yes	No	No	Yes	No

DLP can be configured in both the CLI and the GUI irrespective of firewall policy inspection mode.



To use DLP profiles in a flow-based firewall policy, `set feature-set flow` must be set from the CLI. See [Configuring DLP from the CLI on page 1463](#) for more information. DLP profiles can only be added to a flow-based firewall policy from the CLI.

## Archiving

DLP can archive some or all of the content that passes through the DLP system. There are two forms of DLP archiving.

- **Summary only:** a summary of all the activity detected by the profile is recorded. For example, when an email message is detected, the sender, recipient, message subject, and total size are recorded. When a user accesses a web browser, every URL that they visit is recorded.
- **Full:** detailed records of all the activity detected by the profile is recorded. For example, when an email message is detected, the message itself, including any attachments, is recorded. When a user accesses a web browser, every page that they visit is archived.

You can configure the type of archiving per protocol.

## Logging and blocking files by file name

Sometimes, file names are not accurately recorded in DLP logs, even though the files are blocked correctly based on the DLP profile. This is particularly apparent on cloud-based services, such as Google Drive or SharePoint.

For HTTP file uploads, some cloud services use proprietary encodings and APIs to transfer files and exchange metadata, instead of standard HTTP mechanisms, requiring custom handling of the proprietary API. If a cloud service changes the API without notice, the custom handling becomes outdated and file names might not be logged properly. Due to this, special consideration must be taken when using DLP to block files by file pattern. To block a specific file type, it is better to block by file type, and not by file name pattern.

The following topics provide information about DLP:

- [Basic DLP settings on page 1462](#)
- [Advanced DLP configurations on page 1465](#)
- [DLP examples on page 1467](#)
- [DLP fingerprinting on page 1481](#)

## Basic DLP settings

DLP settings can be configured for data types, dictionaries, sensors, file patterns, and profiles. This topic includes three examples that incorporate several DLP settings. DLP can be configured in both the CLI and the GUI irrespective of firewall policy inspection mode.



To use DLP profile in a flow-based firewall policy, `set feature-set flow` must be set from the CLI. See [Configuring DLP from the CLI on page 1463](#) for more information.

DLP profiles can only be added to a flow-based firewall policy from the CLI.

---

On the *Security Profiles > Data Leak Prevention* page, there are *Profiles*, *Sensors*, and *Dictionaries* tabs to configure those DLP settings. DLP profiles can be added to proxy-based firewall policies and proxy policies from the GUI.

---



If *Data Leak Prevention* is not visible in the tree menu, go to *System > Feature Visibility* and enable it.

---

This section breaks down the DLP configuration into a sequence of steps:

1. Configure the DLP dictionary:
    - A DLP dictionary is a collection of data type entries. See [DLP data type on page 1465](#) for more information.
  2. Configure the DLP sensor:
    - A DLP sensor defines which dictionary to check. It counts the number of dictionary matches to trigger the sensor.
  3. Configure the DLP profile:
    - A DLP profile allows for filtering by size and file type. See [DLP file pattern on page 1466](#) for custom file type.
  4. Add the DLP profile to a firewall policy.
- 



All the steps mentioned above should be configured in the exact order given for ease of configuration.

---

## Configuring DLP from the GUI

Use the following steps to configure DLP from the GUI.

### To configure a DLP dictionary:

1. Go to *Security Profiles > Data Leak Prevention*.
2. Select the *Dictionaries* tab and click *Create New*.
3. Enter a name.
4. In the *Dictionary Entries* section, click *Create New*.
5. Set the *Type* and click *OK*.
6. Click *OK* to save the dictionary.

**To configure a DLP sensor:**

1. Go to *Security Profiles > Data Leak Prevention*.
2. Select the *Sensors* tab and click *Create New*.
3. Enter a name.
4. In the *Sensors Entries* section, click *Create New*.
5. Select the *Dictionary* from the dropdown menu and click *OK*.
6. Click *OK* to save the sensor.

**To configure a DLP profile:**

1. Go to *Security Profiles > Data Leak Prevention*.
2. Select the *Profiles* tab and click *Create New*.
3. Enter a name.
4. In the *Rules* section, click *Create New*.
5. Configure the following settings:

<b>Name</b>	Filter name.
<b>Sensors</b>	Select DLP sensors.
<b>Severity</b>	Select the severity or threat level that matches this filter.
<b>Action</b>	Action to take with content that this DLP profile matches.
<b>Type</b>	Select whether to check the content of messages (an email message) or files (downloaded files or email attachments).
<b>File type</b>	Select the number of a DLP file pattern table to match.
<b>Protocol</b>	Check messages or files over one or more of these protocols.

6. Click *OK*.
7. Click *OK* to save the profile.

**To add the DLP profile to a firewall policy:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Set the *Inspection Mode* to *Proxy-based*.
4. In the *Security Profiles* section, enable *DLP Profile* and select the desired profile.
5. Configure the other settings as needed.
6. Click *OK*.

## Configuring DLP from the CLI

Use the following steps to configure DLP from the CLI.

**To configure a DLP dictionary:**

```
config dlp dictionary
  edit <name>
    config entries
      edit 1
        set type {credit-card | hex | keyword | mip-label | regex | ssn-us}
        set pattern <string>
        set repeat {enable | disable}
        set status {enable | disable}
      next
    end
  next
end
```

**To configure a DLP sensor:**

```
config dlp sensor
  edit <name>
    set match-type {match-all | match-any | match-eval}
    set eval <string>
    config entries
      edit <id>
        set dictionary <dlp_dictionary>
        set count <integer>
        set status {enable | disable}
      next
    end
  next
end
```

See [Evaluation by Logical relationship on page 1466](#) for more information about `match-eval`.

**To configure a DLP profile:**

```
config dlp profile
  edit <name>
    set feature-set {flow | proxy}
    config rule
      edit <id>
        set proto <protocol> <protocol> ...
        set sensor <dlp_sensor>
        set action {allow | log-only | block | quarantine-ip}
      next
    end
  next
end
```

**To add the DLP profile to a firewall policy:**

```
config firewall policy
  edit <id>
    set srcintf <interface>
    set dstintf <interface>
    set action accept
    set srcaddr <address>
```

```

        set dstaddr <address>
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set dlp-profile <string>
    next
end

```

See [DLP examples on page 1467](#) for sample configurations.

## Advanced DLP configurations

The following topic provides information on advanced DLP configurations.

### DLP data type

This configuration includes pre-defined data types to match for keyword, regex, hex, credit card, and social security number (SSN). Custom data types can be added.

```

config dlp data-type
    edit "keyword"
        set pattern "built-in"
    next
    edit "regex"
        set pattern "built-in"
    next
    edit "hex"
        set pattern "built-in"
    next
    edit "mip-label"
        set pattern "^[[:xdigit:]]{8}-[[:xdigit:]]{4}-[[:xdigit:]]{4}-[[:xdigit:]]{4}-[[:xdigit:]]{12}$"
        set transform "built-in"
    next
    edit "credit-card"
        set pattern "\\b([2-6]{1}\\d{3})[- ]?(\\d{4})[- ]?(\\d{2})[- ]?(\\d{2})[- ]?(\\d{2,4})\\b"
        set verify "built-in"
        set look-back 20
        set transform "\\b\\1[- ]?\\2[- ]?\\3[- ]?\\4[- ]?\\5\\b"
    next
    edit "ssn-us"
        set pattern "\\b(\\d{3})-(\\d{2})-(\\d{4})\\b"
        set verify "(?!-)"\\b(?!666|000|9\\d{2})\\d{3}-(?!00)\\d{2}-(?!0{4})\\d{4}\\b(?!-)"
        set look-back 12
        set transform "\\b\\1-\\2-\\3\\b"
    next
end

```

#### To add a custom DLP data type:

```

config dlp data-type
    edit <name>

```

```

        set pattern <string>
        set verify <string>
        set transform <string>
    next
end

```

pattern <string>	Enter a regular expression pattern string without a look around.
verify <string>	Enter a regular expression pattern string used to verify the data type.
transform <string>	Enter the template to transform user input to a pattern using the capture group from pattern.



To use "?" in a regex pattern, see [CLI basics on page 34](#). This method only supports direct console connection and SSH. It does not support the CLI console in the GUI.

## DLP file pattern

A DLP file pattern can block, allow, log, or quarantine a file based on the specified file type in the file filter list (see [Supported file types on page 1443](#)).

### To configure a DLP file pattern:

```

config dlp filepattern
    edit <id>
        set name <name>
        config entries
            edit <name>
                set filter-type {type | pattern}
                set file-type <file_type>
            next
        end
    next
end

```

## Evaluation by Logical relationship

Evaluation by Logical relationship is a powerful tool used to combine multiple dictionary entries to define an accurate DLP sensor using logical expression.

Syntax example:

1. set eval "dict(1) == 2"  
Match DLP sensor only when dictionary one match count is two.
2. set eval "(dict(1) + dict(2)) == 3"  
Match DLP sensor only when dictionary one and dictionary two combined match count is three.
3. set eval "(dict(1) == 2) && (dict(2) == 1)"  
Match DLP sensor only when dictionary one match count is equal to two and dictionary two match count is equal to one.



4. `set eval "(dict(1) == 2) || (dict(2) == 1)"`

Match DLP sensor only when dictionary one match count is equal to two or dictionary two match count is equal to one.

5. `set eval "dict(1) > dict(2)"`

Match DLP sensor only when dictionary one match count is greater than dictionary two match count.

See [Example 4: Block HTTPS upload traffic that includes Visa or Mastercard information using evaluation via logical expression on page 1477](#).

## DLP examples

This topic includes examples that incorporate several DLP settings:

- [Example 1: Block HTTPS upload traffic that includes credit card information on page 1467](#)
- [Example 2: Log FTP upload traffic with a specific pattern on page 1471](#)
- [Example 3: Block HTTPS downloads of EXE files and log HTTPS downloads of files larger than 500 KB on page 1476](#)
- [Example 4: Block HTTPS upload traffic that includes Visa or Mastercard information using evaluation via logical expression on page 1477](#)

### Example 1: Block HTTPS upload traffic that includes credit card information

This configuration will block HTTPS upload traffic that includes credit card information. The pre-defined data type for credit card is used in the dictionary.

#### To block HTTPS upload traffic that includes credit card information in the GUI:

1. Configure the DLP dictionary:
  - a. Go to *Security Profiles > Data Leak Prevention*, select the *Dictionaries* tab, and click *Create New*.
  - b. Enter a name (*dic-case1*).
  - c. In the *Dictionary Entries* section, click *Create New*.
  - d. Set the *Type* to *credit-card* and click *OK*.

New DLP Dictionary

New Entry

Type: credit-card

Repeats: ☐

Status: ☒ Enabled ☐ Disabled

OK Cancel

e. Click **OK** to save the dictionary.

2. Configure the DLP sensor:

- Go to **Security Profiles > Data Leak Prevention**, select the **Sensors** tab, and click **Create New**.
- Enter a name (*sensor-case1*).
- In the **Sensor Entries** section, click **Create New**.
- Set the **Dictionary** to *dic-case1* and click **OK**.

New DLP Sensor

New Entry

ID: 1

Dictionary: dic-case1

Count: 1

Status: ☒ Enabled ☐ Disabled

OK Cancel

e. Click **OK** to save the sensor.

3. Configure the DLP profile:

- Go to **Security Profiles > Data Leak Prevention**, select the **Profiles** tab, and click **Create New**.
- Enter a name (*profile-case1*).
- In the **Rules** section, click **Create New**.
- Configure the following settings:

<b>Name</b>	1
<b>Sensors</b>	sensor-case1
<b>Severity</b>	Medium
<b>Action</b>	Block
<b>Type</b>	File
<b>File type</b>	builtin-patterns
<b>Protocol</b>	HTTP-POST, HTTP-GET

The screenshot shows the 'New Rule' configuration window. The fields are as follows:

- Name:** 1
- Sensors:** sensor-case1
- Severity:** Medium
- Action:** Allow, Log Only, Block (selected), Quarantine IP Address
- Type:** File, Message
- File type:** builtin-patterns
- Protocol:**
  - ☐ SMTP
  - ☐ IMAP
  - ☒ HTTP-POST
  - ☐ NNTP
  - ☐ SSH
  - ☐ POP3
  - ☒ HTTP-GET
  - ☐ FTP
  - ☐ MAPI
  - ☐ CIFS

Buttons at the bottom: OK, Cancel.

- e. Click OK.
  - f. Click OK to save the profile.
4. Add the DLP profile to a firewall policy:
    - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
    - b. Set the *Inspection Mode* to *Proxy-based*.
    - c. In the *Security Profiles* section, enable *DLP Profile* and select *profile-case1*.
    - d. Configure the other settings as needed.
    - e. Click OK.

When a credit card is included in HTTP POST traffic, the file is blocked and a DLP log is generated.

#### To block HTTPS upload traffic that includes credit card information in the CLI:

1. Configure the DLP dictionary:

```
config dlp dictionary
  edit "dic-case1"
    config entries
      edit 1
        set type "credit-card"
      next
    end
  next
end
```

**2. Configure the DLP sensor:**

```
config dlp sensor
  edit "sensor-case1"
    config entries
      edit 1
        set dictionary "dic-case1"
      next
    end
  next
end
```

**3. Configure the DLP profile:**

```
config dlp profile
  edit "profile-case1"
    set feature-set proxy
    config rule
      edit 1
        set name "1"
        set proto http-get http-post
        set filter-by sensor
        set file-type 1
        set sensor "sensor-case1"
        set action block
      next
    end
  next
end
```

**4. Add the DLP profile to a firewall policy:**

```
config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set srcaddr6 "all"
    set dstaddr6 "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set profile-protocol-options "protocol"
    set ssl-ssh-profile "protocols"
    set dlp-profile "profile-case1"
    set nat enable
  next
end
```

When a credit card is included in HTTP POST traffic, a replacement message appears because it is blocked. A DLP log is generated.

## Sample log

From Windows, the following command can be used to generate a sample log, using the cURL tool to post data, which contains a sample credit card number:

```
# curl -k -d 4024007149133315 https://172.16.200.55/card.doc -o?

1: date=2022-10-26 time=11:25:01 eventtime=1666808700281057923 tz="-0700" logid="0954024576"
type="utm" subtype="dlp" eventtype="dlp" level="warning" vd="root" filteridx=1
filtername="1" dlpeextra="builtin-patterns;sensor-case1" filtertype="sensor" filtercat="file"
severity="medium" policyid=1 poluuid="891a526a-51cd-51ed-577a-6505bec88af9"
policytype="policy" sessionid=3905 epoch=2143297701 eventid=0 srcip=10.1.100.11
srcport=40370 srccountry="Reserved" srcintf="port2" srcintfrole="undefined"
srcuuid="502d2c8e-51cd-51ed-a24e-a091f4ff6fed" dstip=172.16.200.55 dstport=443
dstcountry="Reserved" dstintf="port1" dstintfrole="undefined" dstuuid="502d2c8e-51cd-51ed-
a24e-a091f4ff6fed" proto=6 service="HTTPS" filetype="msoffice" direction="outgoing"
action="block" hostname="172.16.200.55" url="https://172.16.200.55/card.doc"
agent="curl/7.83.1" httpmethod="POST" filename="card.doc" filesize=108 profile="profile-
case1"
```

## Example 2: Log FTP upload traffic with a specific pattern

This configuration will log FTP upload traffic with the following patterns:

- keyword = demo
- regex = demo(regex){1,5}
- hex = e6b58be8af95

The dictionary entries have repeat match enabled. The DLP sensor is set so this is repeated five times.

**To log FTP upload traffic that has specific keyword, regex, and hex patterns repeated for five times in the GUI:**

1. Configure the DLP dictionary with three entries:
  - a. Go to *Security Profiles > Data Leak Prevention*, select the *Dictionaries* tab, and click *Create New*.
  - b. Enter a name (*dic-case2*).
  - c. In the *Dictionary Entries* section, click *Create New*.
  - d. Set the *Type* to *keyword* and the *Pattern* to *demo*.
  - e. Enable *Repeats* and click *OK*.

New DLP Dictionary: New Entry

Name:

Comments:

Dictionary Entry:

Logical relationship:

+ Create New

Data Type:

Type: keyword

Pattern: demo

Case sensitive: ☐

Repeats: ☒

Status: ☒ Enabled ☐ Disabled

OK Cancel

f. Repeat these steps to add dictionary entries for the following (with *Repeats* enabled):

- i. Set the *Type* to *regex* and the *Pattern* to *demo(regex){1,5}*.
- ii. Set the *Type* to *hex* and the *Pattern* to *e6b58be8af95*.

New DLP Dictionary

Name: dic-case2

Comments:

Dictionary Entries

Logical relationship: ☒ Any ☐ All

+ Create New Edit Delete

Data Type	Status	Pattern	Repeats
keyword	Enable	demo	Enable
regex	Enable	demo(regex){1,5}	Enable
hex	Enable	e6b58be8af95	Enable

OK Cancel

Additional Information

API Preview

Online Guides

Relevant Documentation

Video Tutorials

FortiAnswers

Join the Discussion

g. Click *OK* to save the dictionary.

2. Configure the DLP sensor:

- a. Go to *Security Profiles > Data Leak Prevention*, select the *Sensors* tab, and click *Create New*.
- b. Enter a name (*sensor-case2*).
- c. In the *Sensor Entries* section, click *Create New*.
- d. Set the *Dictionary* to *dic-case2*, set the *Count* to 5, and click *OK*.

**New DLP Sensor** ✕

**New Entry**

ID:

Dictionary:

Count:

Status: ☒ Enabled ☐ Disabled

e. Click **OK** to save the sensor.

3. Configure the DLP profile:

- a. Go to **Security Profiles > Data Leak Prevention**, select the **Profiles** tab, and click **Create New**.
- b. Enter a name (*profile-case2*).
- c. In the **Rules** section, click **Create New**.
- d. Configure the following settings:

<b>Name</b>	<i>1</i>
<b>Sensors</b>	<i>sensor-case2</i>
<b>Severity</b>	<i>Medium</i>
<b>Action</b>	<i>Block</i>
<b>Type</b>	<i>File</i>
<b>File type</b>	<i>builtin-patterns</i>
<b>Protocol</b>	<i>FTP</i>

**DLP Profile** ✕

**New Rule**

Name:

Sensors:  ✕

Severity:

Action: ☒ Allow ☐ Log Only ☒ Block ☐ Quarantine IP Address

Type: ☒ File ☐ Message

File type:

Protocol: ☐ SMTP ☐ POP3 ☐ IMAP ☐ HTTP-GET ☐ HTTP-POST ☒ FTP ☐ NNTP ☐ MAPI ☐ SSH ☐ CIFS

- e. Click *OK*.
  - f. Click *OK* to save the profile.
4. Add the DLP profile to a firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Set the *Inspection Mode* to *Proxy-based*.
  - c. In the *Security Profiles* section, enable *DLP Profile* and select *profile-case2*.
  - d. Configure the other settings as needed.
  - e. Click *OK*.
5. Upload a Word document that contains "demo, demo, demo, demoregexregex," using FTP.  
A DLP log is generated after the FTP traffic passes.

**To log FTP upload traffic that has specific keyword, regex, and hex patterns repeated for five times in the CLI:**

1. Configure the DLP dictionary:

```
config dlp dictionary
  edit "dic-case2"
    config entries
      edit 1
        set type "keyword"
        set pattern "demo"
        set repeat enable
      next
      edit 2
        set type "regex"
        set pattern "demo(regex){1,5}"
        set repeat enable
      next
      edit 3
        set type "hex"
        set pattern "e6b58be8af95"
        set repeat enable
      next
    end
  next
end
```

2. Configure the DLP sensor:

```
config dlp sensor
  edit "sensor-case2"
    config entries
      edit 1
        set dictionary "dic-case2"
        set count 5
      next
    end
  next
end
```



**3. Configure the DLP profile:**

```

config dlp profile
    edit "profile-case2"
        set feature-set proxy
        config rule
            edit 1
                set proto ftp
                set filter-by sensor
                set file-type 1
                set sensor "sensor-case2"
                set action block
            next
        end
    next
end

```

**4. Add the DLP profile to a firewall policy:**

```

config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set dlp-profile "profile-case2"
        set nat enable
    next
end

```

- 5. Upload a Word document that contains "demo, demo, demo, demoregexregex," using FTP.**  
A DLP log is generated after the FTP traffic passes.

**Sample log**

```

1: date=2022-10-26 time=12:37:57 eventtime=1666813077679725858 tz="-0700"
logid="0954024576" type="utm" subtype="dlp" eventtype="dlp" level="warning" vd="root"
filteridx=1 filtername="1" dlpeextra="builtin-patterns;sensor-case2" filtertype="sensor"
filtercat="file" severity="medium" policyid=1 poluuid="891a526a-51cd-51ed-577a-
6505bec88af9" policytype="policy" sessionid=6267 epoch=909159520 eventid=0
srcip=10.1.100.11 srcport=52858 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="502d2c8e-51cd-51ed-a24e-a091f4ff6fed"
dstip=172.16.200.55 dstport=43411 dstcountry="Reserved" dstintf="port1"
dstintfrole="undefined" dstuuid="502d2c8e-51cd-51ed-a24e-a091f4ff6fed" proto=6
service="FTP" filetype="msoffice" direction="outgoing" action="block"
filename="realizedDoc.doc" filesize=26624 profile="profile-case2"

```

### Example 3: Block HTTPS downloads of EXE files and log HTTPS downloads of files larger than 500 KB

This configuration will block HTTPS downloads of EXE files and log HTTPS downloads of files larger than 500 KB.

#### To block HTTPS download of EXE files and log downloads larger than 500 KB:

1. Configure the DLP file pattern:

```
config dlp filepattern
  edit 3
    set name "case3-exe"
    config entries
      edit "exe"
        set filter-type type
        set file-type exe
      next
    end
  next
end
```

2. Configure the DLP profile:

```
config dlp profile
  edit "profile-case3-type-size"
    config rule
      edit 1
        set proto http-get
        set filter-by none
        set file-type 3
        set action block
      next
      edit 2
        set proto http-get
        set filter-by none
        set file-size 500
        set action log-only
      next
    end
  next
end
```

3. Add the DLP profile to a firewall policy:

```
config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set srcaddr6 "all"
    set dstaddr6 "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
```

```

set ssl-ssh-profile "custom-deep-inspection"
set dlp-profile "profile-case3-type-size"
set logtraffic all
set nat enable
next
end

```

- Download an EXE file using HTTPS. The download is blocked, a replacement message appears, and a DLP log is generated.

### Sample log

```

1: date=2022-02-15 time=11:54:29 eventtime=1644954869682887856 tz="-0800"
logid="0954024577" type="utm" subtype="dlp" eventtype="dlp" level="notice" vd="root"
filteridx=2 dlpextra="500 kB" filtertype="none" filtercat="file" severity="medium"
policyid=1 poluuid="905fb604-7ed4-51ec-0853-79e498591bf8" policytype="policy"
sessionid=12082 epoch=901683674 eventid=0 srcip=10.1.100.18 srcport=59520
srccountry="Reserved" srcintf="port2" srcintfrole="undefined" srcuuid="358d0f56-7ed4-51ec-50f7-a5e4525a641d"
dstip=51.81.186.201 dstport=443 dstcountry="United States"
dstintf="port1" dstintfrole="undefined" dstuuid="358d0f56-7ed4-51ec-50f7-a5e4525a641d"
proto=6 service="HTTPS" direction="incoming" action="log-only"
hostname="2.na.dl.wireshark.org" url="https://2.na.dl.wireshark.org/win64/Wireshark-win64-3.6.2.exe"
agent="curl/7.61.1" filename="Wireshark-win64-3.6.2.exe"
filesize=10502090 profile="profile-case3-type-size"

```


## Example 4: Block HTTPS upload traffic that includes Visa or Mastercard information using evaluation via logical expression

This example will allow users to create a subset of the existing DLP data type, *credit-card*. It can be very beneficial for an organization that wants to prevent only certain types of credit cards and not all.

This configuration will block HTTPS traffic that includes Visa or Mastercard information. Two dictionary entries with DLP data-type regex are created with custom patterns to match Visa and Mastercard numbers respectively, and a third dictionary entry is created with pre-defined data type *credit-card*. All three entries are used in the sensor using evaluation via logical expression to further supplement the detection.

In the CLI, evaluation via logical expression can be defined using the command `match-eval`. It is a tool used to combine multiple entries to define an accurate DLP sensor.

### Sample topology

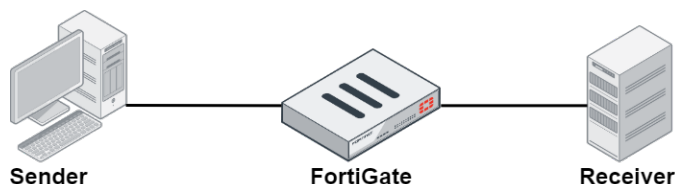

In this example, a Microsoft Office document with Visa credit card information is sent securely to the receiver using the HTTP POST method. The FortiGate intercepts the traffic using deep inspection and blocks the traffic as it matches the DLP profile configured on this FortiGate.

**To block HTTPS upload traffic that includes Visa or Mastercard credit card information in the GUI:**

1. Configure the DLP dictionary:
  - a. Go to *Security Profiles > Data Leak Prevention*, select the *Dictionaries* tab, and click *Create New*.
  - b. Create an entry for Visa:
    - i. Enter a name (*Finance\_Credit\_Card\_Visa*).
    - ii. In the *Dictionary Entries* section, click *Create New*.
    - iii. Set the *Type* to *regex*.
    - iv. Set *Pattern* to `4[0-9]{12}([0-9]{3})` and click *OK*.
    - v. Click *OK* to save the dictionary.
  - c. Create an entry for Mastercard:
    - i. Enter a name (*Finance\_Credit\_Card\_Mastercard*).
    - ii. In the *Dictionary Entries* section, click *Create New*.
    - iii. Set the *Type* to *regex*.
    - iv. Set *Pattern* to `(?:5[1-5][0-9]{2}|222[1-9]|22[3-9][0-9]|2[3-6][0-9]{2}|27[01][0-9]|2720)[0-9]{12}` and click *OK*.
    - v. Click *OK* to save the dictionary.
  - d. Create an entry for Credit Card:
    - i. Enter a name (*CC\_Number*).
    - ii. In the *Dictionary Entries* section, click *Create New*.
    - iii. Set the *Type* to *credit-card* and click *OK*.
    - iv. Click *OK* to save the dictionary.
2. Configure the DLP sensor:
  - a. Go to *Security Profiles > Data Leak Prevention*, select the *Sensors* tab, and click *Create New*.
  - b. Enter a name (*Finance\_Credit\_Card\_High*).
  - c. In the *Sensor Entries* section, click *Create New*.
  - d. Set the *Dictionary* to *Finance\_Credit\_Card\_Visa* and click *OK*.
  - e. Repeat the previous step twice to add *Finance\_Credit\_Card\_Mastercard* and *CC\_Number* in this order.
  - f. Click *OK* to save the sensor.
  - g. Edit the newly created sensor.
  - h. Set the *Logical relationship* to *Evaluate*.
    - i. In the *Evaluated by* field, enter `(dict(1) > 0 && dict(3) > 0) || (dict(2) > 0 && dict(3) > 0)`.
    - j. Click *OK* to save the sensor.



For the DLP sensor with the *Logical relationship* set to *Evaluate*, *Count* and *Status* of any sensor entry will be ignored.

---

3. Configure the DLP profile:
  - a. Go to *Security Profiles > Data Leak Prevention*, select the *Profiles* tab, and click *Create New*.
  - b. Enter a name (*cc-block*).
  - c. In the *Rules* section, click *Create New*.
  - d. Configure the following settings:

<b>Name</b>	<i>1</i>
<b>Sensors</b>	<i>Finance Credit Card High</i>
<b>Severity</b>	<i>Critical</i>
<b>Action</b>	<i>Block</i>
<b>Type</b>	<i>File</i>
<b>File type</b>	<i>builtin-patterns</i>
<b>Protocol</b>	<i>HTTP-POST, HTTP-GET</i>

- e. Click OK.
  - f. Click OK to save the profile.
4. Add the DLP profile to a firewall policy:
    - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
    - b. Set the *Inspection Mode* to *Proxy-based*.
    - c. In the *Security Profiles* section, enable *DLP Profile* and select *cc-block*.
    - d. Set *SSL Inspection* to *deep-inspection* to inspect HTTPS traffic.
    - e. Configure the other settings as needed.
    - f. Click OK.

When a Visa or Mastercard credit card is included in HTTP GET or POST traffic, the file is blocked and a DLP log is generated. See the [Sample log on page 1481](#) for details on how to test this configuration.

#### To block HTTPS upload traffic that includes Visa or Mastercard credit card information in the CLI:

1. Configure the DLP dictionary:

```
config dlp dictionary
  edit "Finance_Credit_Card_Visa"
    config entries
      edit 1
        set type "regex"
        set pattern "4[0-9]{12}([0-9]{3})"
        set repeat enable
        set comment "Visa"
      next
    end
  next
  edit "Finance_Credit_Card_Mastercard"
    config entries
      edit 1
        set type "regex"
        set pattern "(?:5[1-5][0-9]{2}|22[1-9]|22[3-9][0-9]|2[3-6][0-9]{2}|27[01][0-9]|2720)[0-9]{12}"
        set repeat enable
        set comment "Mastercard"
      next
    end
  next
  edit "CC_Number"
    config entries
```

```

        edit 1
            set type "credit-card"
        next
    end
next
end

```



To use "?" in a regex pattern, see [CLI basics on page 34](#). This method only supports direct console connection and SSH. It does not support the CLI console in the GUI.

## 2. Configure the DLP sensor:

```

config dlp sensor
    edit "Finance_Credit_Card_High"
        config entries
            edit 1
                set dictionary "Finance_Credit_Card_Visa"
            next
            edit 2
                set dictionary "Finance_Credit_Card_Mastercard"
            next
            edit 3
                set dictionary "CC_Number"
            next
        end
        set match-type match-eval
        set eval "(dict(1) > 0 && dict(3) > 0) || (dict(2) > 0 && dict(3) > 0)"
    next
end

```

## 3. Configure the DLP profile:

```

config dlp profile
    edit "cc_block"
        set feature-set proxy
        config rule
            edit 1
                set name "1"
                set severity critical
                set proto http-get http-post
                set filter-by sensor
                set file-type 1
                set sensor "Finance_Credit_Card_High"
                set action block
            next
        end
    next
end

```

## 4. Add the DLP profile to a firewall policy:

```

config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port3"
    
```

```
set action accept
set srcaddr "all"
set dstaddr "all"
set schedule "always"
set service "ALL"
set utm-status enable
set inspection-mode proxy
set ssl-ssh-profile "deep-inspection"
set dlp-profile "cc_block"
set nat enable
next
end
```

When a Visa or Mastercard credit card is included in HTTP GET or POST traffic, a replacement message appears because it is blocked. A DLP log is generated. See the [Sample log on page 1481](#) for details on how to test this configuration.

### Sample log

From Windows, the following command can be used to generate a sample log via HTTP POST traffic, using the cURL tool to post data, which contains a sample Visa credit card number:

```
# curl -k -d 4024007149133315 https://192.168.10.13/cc.doc -o?
```

```
1: date=2023-03-17 time=15:37:41 eventtime=1679092660998869199 tz="-0700" logid="0954024576"
type="utm" subtype="dlp" eventtype="dlp" level="warning" vd="root" filteridx=1
filtername="1" dlpeextra="builtin-patterns;Finance_Credit_Card_High" filtertype="sensor"
filtercat="file" severity="critical" policyid=1 poluuid="26540ed0-ae54-51ed-80eb-
89af8af4d53f" policytype="policy" sessionid=14854 epoch=570215534 eventid=0
srcip=172.20.120.13 srcport=58012 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="3342cb44-9140-51ed-5dbe-8e0787bedeec" dstip=192.168.10.13
dstport=443 dstcountry="Reserved" dstintf="port3" dstintfrole="wan" dstuuid="3342cb44-9140-
51ed-5dbe-8e0787bedeec" proto=6 service="HTTPS" filetype="msoffice" direction="incoming"
action="block" hostname="192.168.10.13" url="https://192.168.10.13/cc.doc"
agent="curl/7.83.1" httpmethod="POST" filename="cc.doc" filesize=12288 profile="cc-block"
```

## DLP fingerprinting

DLP fingerprinting can be used to detect sensitive data. The file that the DLP profile filters is uploaded and the FortiGate generates and stores a checksum fingerprint. The FortiGate generates a fingerprint for all the files that are detected in network traffic, and compares all the checksums stored in its database. If a match is found, the configured action is taken. Any type of file can be detected by DLP fingerprinting, and fingerprints can be saved for each revision of a file as it is updated.

Using fingerprinting requires:

1. [Selecting the files to be fingerprinted by targeting a document source.](#)
2. [Adding fingerprinting filters to DLP profiles.](#)
3. Adding the profiles to firewall policies that accept traffic that the fingerprinting will be applied on.



The document fingerprint feature requires a FortiGate that has internal storage.

---

**To configure a DLP fingerprint document:**

```

config dlp fp-doc-source
  edit <name>
    *set server-type samba
    *set server <string>
    set period {none | daily | weekly | monthly}
    set vdom {mgmt | current}
    set scan-subdirectories {enable | disable}
    set remove-deleted {enable | disable}
    set keep-modified {enable | disable}
    *set username <string>
    set password <password>
    set file-path <string>
    set file-pattern <string>
    *set sensitivity <Critical | Private | Warning>
    set tod-hour <integer>
    set tod-min <integer>
    set weekday {sunday | monday | tuesday | wednesday | thursday | friday | saturday}
    set date <integer>
  next
end

```

Parameters marked with an asterisk (\*) are mandatory and must be filled in.

Command	Description
server-type samba	Set the protocol used to communicate with document server. Only Samba (SMB) servers are supported.
server <string>	Enter the IPv4 or IPv6 address of the server.
period {none   daily   weekly   monthly}	Set the frequency that the FortiGate checks the server for new or changed files.
vdom {mgmt   current}	Enter the VDOM that can communicate with the file server.
scan-subdirectories {enable   disable}	Enable/disable scanning subdirectories to find files.
remove-deleted {enable   disable}	Enable/disable keeping the fingerprint database up to date when a file is deleted from the server.
keep-modified {enable   disable}	Enable/disable keeping the old fingerprint and adding a new one when a file is changed on the server.
username <string>	Enter the user name required to log into the file server.
password <password>	Enter the password required to log into the file server.
file-path <string>	Enter the path on the server to the fingerprint files.
file-pattern <string>	Enter the pattern for matching files on the server to be fingerprinted.
sensitivity <Critical   Private   Warning>	Set the sensitivity or threat level for matches with this fingerprint database.



Command	Description
<code>tod-hour &lt;integer&gt;</code>	Set the hour of the day. This option is only available when <code>period</code> is not <code>none</code> .
<code>tod-min &lt;integer&gt;</code>	Set the minute of the hour. This option is only available when <code>period</code> is not <code>none</code> .
<code>weekday {sunday   monday   tuesday   wednesday   thursday   friday   saturday}</code>	Set the day of the week. This option is only available when <code>period</code> is <code>weekly</code> .
<code>date &lt;integer&gt;</code>	Set the day of the month. This option is only available when <code>period</code> is <code>monthly</code> .

### To configure a DLP fingerprint profile:

```

config dlp profile
  edit <name>
    set feature-set proxy
    config rule
      edit <id>
        set proto {smtp | pop3 | imap | http-get | http-post | ftp | nntp | mapi |
ssh | cifs}
        set filter-by fingerprint
        set sensitivity {Critical | Private | Warning}
        set match-percentage <integer>
        set action {allow | log-only | block | ban | quarantine-ip}
      next
    end
  next
end

```

Command	Description
<code>proto {smtp   pop3   imap   http-get   http-post   ftp   nntp   mapi   ssh   cifs}</code>	Set the protocol to inspect.
<code>filter-by fingerprint</code>	Set to match against a fingerprint sensitivity.
<code>sensitivity {Critical   Private   Warning}</code>	Set the DLP file pattern sensitivity to match.
<code>match-percentage &lt;integer&gt;</code>	Set the percentage of the checksum required to match before the profile is triggered.
<code>action {allow   log-only   block   ban   quarantine-ip}</code>	Set the action to take with content that matches the DLP profile.

### View the DLP fingerprint database on the FortiGate

Use `diagnose test application dlpfingerprint <integer>` to display the fingerprint information that is on the FortiGate.

Integer	Function
1	Show the fingerprint daemon menu
2	Dump the database
3	Dump all files
5	Dump all chunks
6	Refresh all document sources in all VDOMs
7	Show the database file size and limit
9	Display statistics
10	Clear statistics
99	Restart this daemon

### To dump all fingerprinted files:

```
# diagnose test application dlpfingerprint 3
DLPFP diag_test_handler called
File DB:
```

```
-----
id, filename,                                vdom, archive, deleted, scanTime,  docSourceSrvr,
sensitivity, chunkCnt, reviseCnt,
1, /fingerprint/upload/1.txt,                vdom1, 0,      0,      1494868196,  1,      2,
1, 0,
2, /fingerprint/upload/30percentage.xls,      vdom1, 0,      0,      1356118250,  1,      2,
13, 0,
3, /fingerprint/upload/50.pdf,                vdom1, 0,      0,      1356118250,  1,      2,
122, 0,
4, /fingerprint/upload/50.pdf.tar.gz,        vdom1, 0,      0,      1356118250,  1,      2,
114, 0,
5, /fingerprint/upload/check-list_AL-SIP_HA.xls, vdom1, 0,      0,      1356118251,  1,
2, 32, 0,
6, /fingerprint/upload/clean.zip,            vdom1, 0,      0,      1356118251,  1,      2,
1, 0,
7, /fingerprint/upload/compare.doc,          vdom1, 0,      0,      1522097410,  1,      2,
18, 0,
8, /fingerprint/upload/dlpsensor-watermark.pdf, vdom1, 0,      0,      1356118250,  1,
2, 11, 0,
9, /fingerprint/upload/eicar.com,            vdom1, 0,      0,      1356118250,  1,      2,
1, 0,
10, /fingerprint/upload/eicar.zip,           vdom1, 0,      0,      1356118250,  1,      2,
1, 0,
11, /fingerprint/upload/EMAIL-CONTENT-ARCHIVE.ppt, vdom1, 0,      0,      1356118250,  1,
2, 11, 0,
12, /fingerprint/upload/encrypt.zip,          vdom1, 0,      0,      1356118250,  1,      2,
77, 0,
13, /fingerprint/upload/extension_7_8_1.crx,  vdom1, 0,      0,      1528751781,  1,
2, 2720, 0,
14, /fingerprint/upload/fingerprint.txt,      vdom1, 0,      0,      1498582679,  1,      2,
37, 0,
15, /fingerprint/upload/fingerprint90.txt,    vdom1, 0,      0,      1498582679,  1,      2,
37, 0,
16, /fingerprint/upload/fo2.pdf,             vdom1, 0,      0,      1450488049,  1,      2,
1, 0,
```

```

17, /fingerprint/upload/foo.doc,          vdom1, 0,      0,      1388538131, 1,      2,
9, 0,
18, /fingerprint/upload/fortiauto.pdf,     vdom1, 0,      0,      1356118251, 1,      2,
146, 0,
19, /fingerprint/upload/image.out,         vdom1, 0,      0,      1531802940, 1,      2,
5410, 0,
20, /fingerprint/upload/jon_file.txt,      vdom1, 0,      0,      1536596091, 1,      2,      1,
0,
21, /fingerprint/upload/machotest,         vdom1, 0,      0,      1528751955, 1,      2,
19, 0,
22, /fingerprint/upload/nntp-server.doc,   vdom1, 0,      0,      1356118250, 1,      2,
17, 0,
23, /fingerprint/upload/notepad++.exe,     vdom1, 0,      0,      1456090734, 1,      2,
1061, 0,
24, /fingerprint/upload/nppIExplorerShell.exe, vdom1, 0,      0,      1438559930, 1,
2, 5, 0,
25, /fingerprint/upload/NppShell_06.dll,   vdom1, 0,      0,      1456090736, 1,      2,
111, 0,
26, /fingerprint/upload/PowerCollections.chm, vdom1, 0,      0,      1533336889, 1,
2, 728, 0,
27, /fingerprint/upload/reflector.dmg,     vdom1, 0,      0,      1533336857, 1,      2,
21117, 0,
28, /fingerprint/upload/roxio.iso,         vdom1, 0,      0,      1517531765, 1,      2,
49251, 0,
29, /fingerprint/upload/SciLexer.dll,      vdom1, 0,      0,      1456090736, 1,      2,
541, 0,
30, /fingerprint/upload/screen.jpg,        vdom1, 0,      0,      1356118250, 1,      2,
55, 0,
31, /fingerprint/upload/Spec to integrate FASE into FortiOS.doc, vdom1, 0,      0,
1356118251, 1,      2,      31, 0,
32, /fingerprint/upload/subdirectory1/subdirectory2/subdirectory3/hibun.aea, vdom1, 0,
0, 1529019743, 1,      2,      1, 0,
33, /fingerprint/upload/test.pdf,          vdom1, 0,      0,      1356118250, 1,      2,
5, 0,
34, /fingerprint/upload/test.tar,          vdom1, 0,      0,      1356118251, 1,      2,
3, 0,
35, /fingerprint/upload/test.tar.gz,       vdom1, 0,      0,      1356118250, 1,      2,      1,
0,
36, /fingerprint/upload/test1.txt,         vdom1, 0,      0,      1540317547, 1,      2,
1, 0,
37, /fingerprint/upload/thousand-files.zip, vdom1, 0,      0,      1536611774, 1,      2,
241, 0,
38, /fingerprint/upload/Thumbs.db,         vdom1, 0,      0,      1445878135, 1,      2,
3, 0,
39, /fingerprint/upload/widget.pdf,        vdom1, 0,      0,      1356118251, 1,      2,
18, 0,
40, /fingerprint/upload/xx00-xx01.tar,     vdom1, 0,      0,      1356118250, 1,      2,      5,
0,
41, /fingerprint/upload/xx02-xx03.tar.gz,  vdom1, 0,      0,      1356118251, 1,      2,      1,
0,

```

## VoIP solutions

You can configure VoIP profiles to allow SIP and SCCP traffic and to protect your network from SIP- and SCCP-based attacks.

FortiOS includes two preloaded VoIP profiles:

- *default*
- *strict*

You can customize these profiles, or you can create your own and add them to firewall policies that allow VoIP.



VoIP profiles cannot be used NGFW policy-based mode. See [NGFW policy on page 1049](#) for more information.

The following topics provide information about VoIP profiles:

- [General use cases on page 1486](#)
- [NAT46 and NAT64 for SIP ALG on page 1490](#)
- [SIP message inspection and filtering on page 1498](#)
- [SIP ALG and SIP session helper on page 1503](#)
- [SIP pinholes on page 1508](#)
- [SIP over TLS on page 1510](#)
- [Voice VLAN auto-assignment on page 1512](#)
- [Scanning MSRP traffic on page 1513](#)

## General use cases


There are three scenarios in which the FortiOS session initiation protocol (SIP) solution is usually deployed:

1. The SIP server is in a private network that is protected from the internet by a FortiGate.
2. The SIP clients are in a private network that is protected from the internet by a FortiGate.
3. The SIP server is in a private network, such as a corporation's internal network or an ISP's network, that is protected from the internet by a FortiGate. The SIP clients are in a remote private network, such as a SOHO network, and behind a NAT device that is not aware of SIP applications.

The following VIP, NAT, and HNT examples show configurations for these common scenarios.

### VIP

A FortiGate with SIP Application Layer Gateway (ALG) or SIP session helper protects the SIP server from the internet, while SIP phones from the internet need to register to the SIP server and establish calls through it.

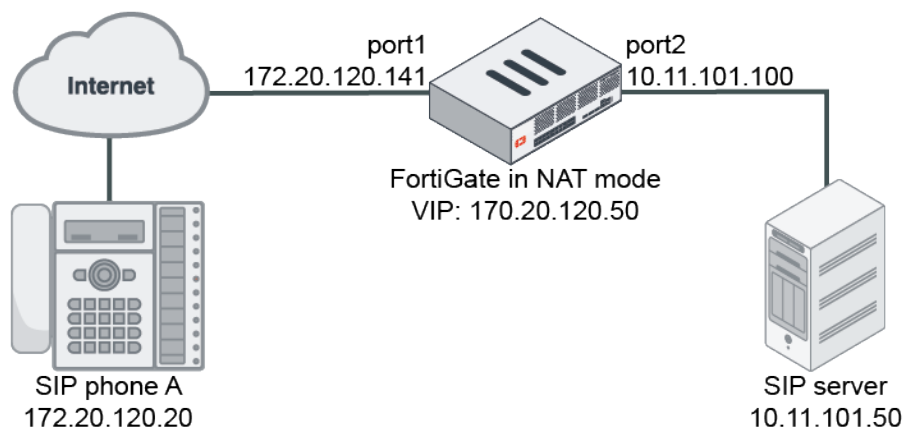

A VIP needs to be configured for the SIP server, and the VIP must be applied in a firewall policy for the phones to send REGISTER messages through the FortiGate from port1 to port2.

Only one firewall policy needs to be configured for all SIP phones on both the internet and private network to register to the SIP server through port1 and set up SIP calls. This example assumes either SIP ALG or SIP session helper is enabled.

**To configure the VIP for the SIP server:**

```
config firewall vip
  edit "VIP_for_SIP_Server"
    set extip 172.20.120.50
    set extintf "port1"
    set mappedip "10.11.101.50"
  next
end
```

**To configure the firewall policy:**

```
config firewall policy
  edit 1
    set srcintf "port1"
    set dstintf "port2"
    set srcaddr "all"
    set dstaddr "VIP_for_SIP_Server"
    set action accept
    set schedule "always"
    set service "SIP"
  next
end
```




Setting `service` to `SIP` and not `all` in the firewall policy can improve protection by restricting the data traffic passing through the FortiGate to the SIP call traffic only.

---

## NAT

A FortiGate with SIP ALG or SIP session helper protects the SIP phones and the internal network from the internet, while SIP phones in the internal network need to register to the SIP server installed on the internet and establish calls through it.

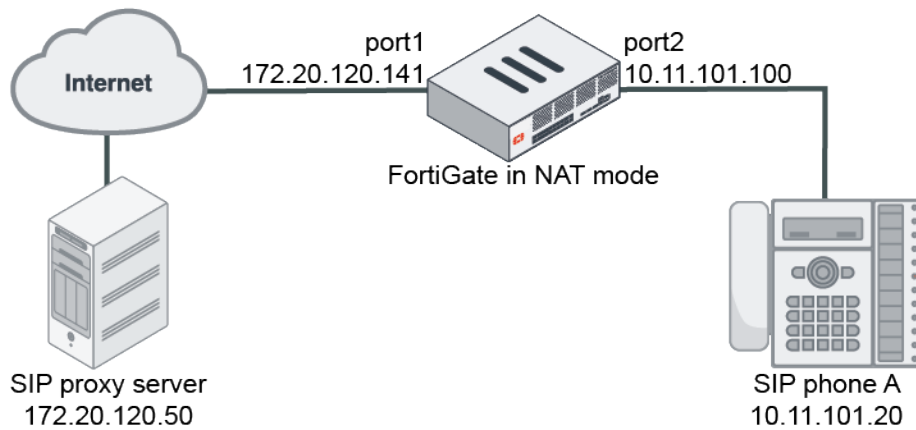

One firewall policy needs to be configured with NAT enabled for SIP phones to send REGISTER messages through the FortiGate from port2 to port1. This example assumes either SIP ALG or SIP session helper is enabled.


#### To configure the firewall policy:

```
config firewall policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "SIP"
    set nat enable
  next
end
```

## HNT

A FortiGate with SIP ALG protects the SIP server from the internet, while SIP phones are in remote private networks behind NAT devices that are not aware of the SIP application. This is only supported in proxy mode.

In this example, the SIP server is located in an ISP's service cloud that is protected by the FortiGate SIP ALG, and the SIP phones are installed in the home networks of the ISP's customers.

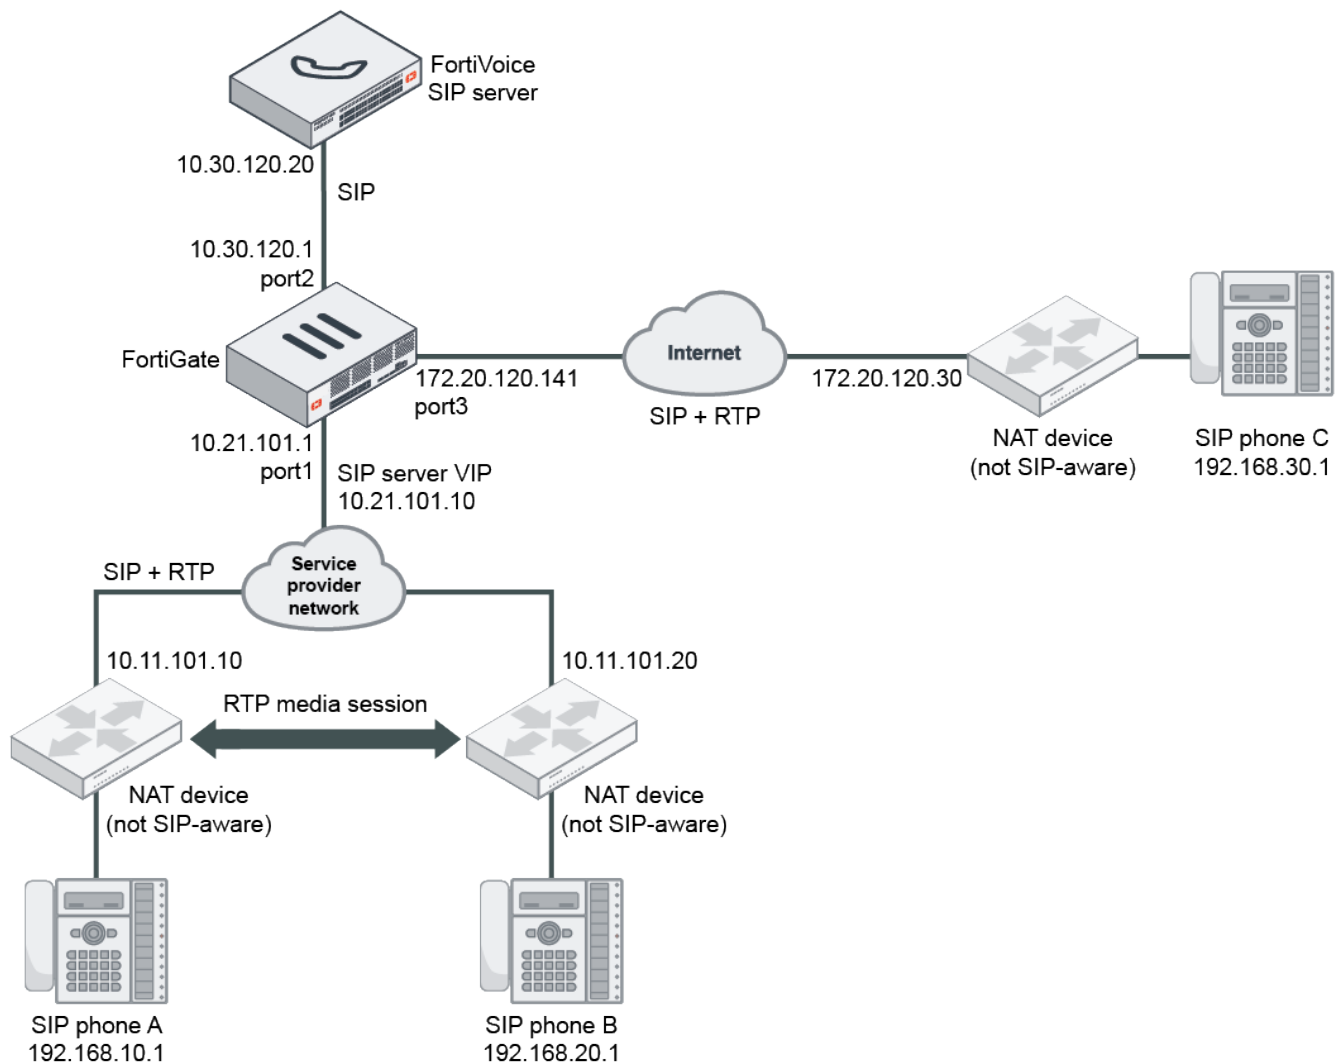

The SIP messages traversing the remote NAT devices might have their IP addresses translated by the NAT device at the network layer, but untranslated at the SIP application layer because those NAT devices are not aware of the SIP applications. This causes problems in a SIP session initiated process. Special configurations for the hosted NAT traversal (HNT) are required to resolve this issue.

**To configure the FortiGate with HNT support for SIP phones A and B to set up calls with each other:**

1. Identify port1 as the external interface:

```
config system interface
  edit "port1"
    set external enable
  next
end
```

2. Configure the VIP for the SIP server:

```
config firewall vip
  edit "VIP_for_SIP_Server"
    set extip 10.21.101.10
```

```

        set extintf "port1"
        set mappedip "10.30.120.20"
    next
end

```

### 3. Configure a VoIP profile with HNT enabled:

```

config voip profile
    edit "hnt"
        config sip
            set hosted-nat-traversal enable
            set hnt-restrict-source-ip enable
        end
    next
end

```



`hosted-nat-traversal` must be enabled. `hnt-restrict-source-ip` does not have to be enabled, but can be enabled to restrict the RTP packets' source IP to be the same as the SIP packets' source IP.

### 4. Apply the VoIP profile and VIP in a firewall policy for phone A and B to register and set up SIP calls through the FortiGate and SIP server:

```

config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "VIP_for_SIP_Server"
        set action accept
        set schedule "always"
        set service "SIP"
        set utm-status enable
        set voip-profile "hnt"
        set nat enable
    next
end

```



`nat` must be enabled in the firewall policy.


## NAT46 and NAT64 for SIP ALG

NAT46 and NAT64 are supported for SIP ALG. A mix of IPv4 and IPv6 networks can use SIP ALG, allowing for proper call handling.

### NAT46 example

In this example, SIP phones on the internal network use IPv4, and the SIP server on an external network uses IPv6. NAT46 is used with SIP ALG to allow for seamless communication. A VoIP profile, `sip`, has already been created.



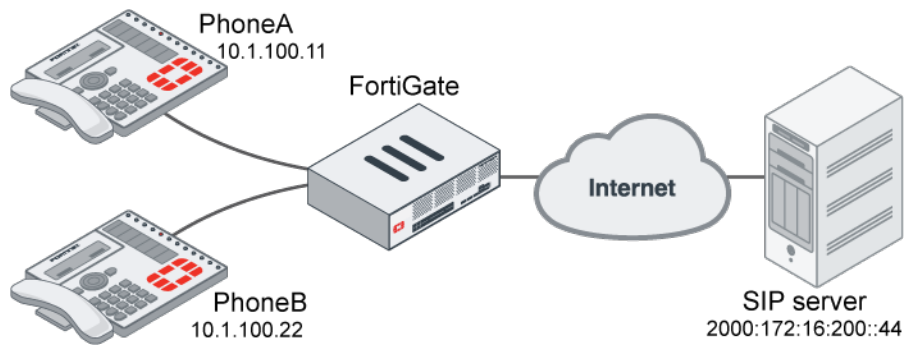

### To configure the FortiGate:

1. Configure a firewall VIP with NAT46 enabled:

```

config firewall vip
  edit "vip46_server_asterisk"
    set extip 10.1.100.100
    set nat44 disable
    set nat46 enable
    set extintf "port1"
    set ipv6-mappedip 2000:172:16:200::44
  next
end

```

2. Configure an IPv6 pool:

```

config firewall ippool6
  edit "client_server_nat46"
    set startip 2000:172:16:200::200
    set endip 2000:172:16:200::207
    set nat46 enable
  next
end

```

3. Configure a firewall policy:

```

config firewall policy
  edit 1
    set name "policy46-1"
    set srcintf "port1"
    set dstintf "port9"
    set action accept
    set nat46 enable
    set srcaddr "all"
    set dstaddr "vip46_server_asterisk"
    set srcaddr6 "all"
    set dstaddr6 "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set voip-profile "sip"
    set logtraffic all
    set auto-asic-offload disable
    set ippool enable
  next
end

```

```

        set poolname6 "client_server_nat46"
    next
end

```

## To check the SIP calls and session lists when the phones are registering to the SIP server:

### 1. View the SIP proxy SIP calls:

```

# diagnose sys sip-proxy calls
sip calls
vdom 3 (vdom1) vrf 0 call 7f64bf044b00
  call-id: 1513782757
  txn 7f64bf048f00 (REGISTER)
    cseq 2 dir 0 state 5 status 200 expiry 868 HA 0
    i_session: 7f64bf045e00 r_session: 7f64bf045e00
    register: present
    from: sip:2002@10.1.100.100
    to: sip:2002@10.1.100.100
    src: 10.1.100.22:5060
    dst: [2000:172:16:200::44]:5060

vdom 3 (vdom1) vrf 0 call 7f64bf076700
  call-id: 1490871789
  txn 7f64bf047a00 (REGISTER)
    cseq 2 dir 0 state 5 status 200 expiry 861 HA 0
    i_session: 7f64bf045000 r_session: 7f64bf045000
    register: present
    from: sip:2001@10.1.100.100
    to: sip:2001@10.1.100.100
    src: 10.1.100.11:5060
    dst: [2000:172:16:200::44]:5060

```

### 2. View the IPv4 session list:

```

# diagnose sys session list

origin->sink: org pre->post, reply pre->post dev=9->52/52->9 gwy=10.1.100.100/10.1.100.11
hook=pre dir=org act=noop 10.1.100.11:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.11:5060(0.0.0.0:0)
peer=2000:172:16:200::203:65476->2000:172:16:200::44:5060 naf=1
hook=pre dir=org act=noop 2000:172:16:200::203:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::203:65476(:::0)

origin->sink: org pre->post, reply pre->post dev=9->52/52->9 gwy=10.1.100.100/10.1.100.22
hook=pre dir=org act=noop 10.1.100.22:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.22:5060(0.0.0.0:0)
peer=2000:172:16:200::200:65476->2000:172:16:200::44:5060 naf=1
hook=pre dir=org act=noop 2000:172:16:200::200:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::200:65476(:::0)

```

### 3. View the IPv4 expectation session list:

```

# diagnose sys session list expectation

origin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.100:0->10.1.100.11:5060(0.0.0.0:0)
hook=pre dir=org act=noop 0.0.0.0:0->0.0.0.0:0(0.0.0.0:0)
peer=:::0->:::0 naf=2

```

```

origin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.100:0->10.1.100.22:5060(0.0.0.0:0)
hook=pre dir=org act=noop 0.0.0.0:0->0.0.0.0:0(0.0.0.0:0)
peer=:::0->:::0 naf=2

```

#### 4. View the IPv6 session list:

```

# diagnose sys session6 list

hook=pre dir=org act=noop 2000:172:16:200::203:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::203:65476(:::0)
peer=10.1.100.100:5060->10.1.100.11:5060 naf=2
hook=pre dir=org act=noop 10.1.100.11:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.11:5060(0.0.0.0:0)

hook=pre dir=org act=noop 2000:172:16:200::200:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::200:65476(:::0)
peer=10.1.100.100:5060->10.1.100.22:5060 naf=2
hook=pre dir=org act=noop 10.1.100.22:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.22:5060(0.0.0.0:0)

```

#### 5. View the IPv6 expectation session list:

```

# diagnose sys session6 list expectation

origin->sink: org pre->post, reply pre->post dev=17->0/52->0
hook=post dir=org act=noop 2000:172:16:200::44:0->2000:172:16:200::200:65476(:::0)
hook=pre dir=org act=noop :::0->:::0(:::0)
peer=10.1.100.100:0->10.1.100.22:5060 naf=1

origin->sink: org pre->post, reply pre->post dev=17->0/52->0
hook=post dir=org act=noop 2000:172:16:200::44:0->2000:172:16:200::203:65476(:::0)
hook=pre dir=org act=noop :::0->:::0(:::0)
peer=10.1.100.100:0->10.1.100.11:5060 naf=1

```

### To check the SIP calls and session lists when one phone is calling another phone:

#### 1. View the SIP proxy SIP calls:

```

# diagnose sys sip-proxy calls

sip calls
vdom 3 (vdom1) vrf 0 call 7f64bf057a00
  call-id: 217ac4733f80ac766c7e0f3a69d317a1@[2000:172:16:200::44]:5060
  txn 7f64bf038800 (INVITE)
    cseq 103 dir 1 state 11 status 200 expiry 252 HA 0
    i_session: 7f64bf036500 r_session: 7f64bf036500
    register: not-present
    contact[0]: factory 7f64bf057900/4 expectation 7f64bf02cf00/2 session
7f64bf036500
    contact[1]: factory 7f64bf057700/3 expectation 7f64bf02ca00/3 session
7f64bf036500
    from: sip:2001@[2000:172:16:200::44]
    to: sip:2002@[2000:172:16:200::200]:65476;o=10.1.100.22;line=28c59e086cac7c9
    src: [2000:172:16:200::44]:5060
    dst: 10.1.100.22:5060

```

```
vdom 3 (vdom1) vrf 0 call 7f64bf057a00
  call-id: 217ac4733f80ac766c7e0f3a69d317a1@[2000:172:16:200::44]:5060
  txn 7f64bf038100 (INVITE)
    cseq 102 dir 1 state 11 status 200 expiry 252 HA 0
    i_session: 7f64bf036500 r_session: 7f64bf036500
    register: not-present
    contact[0]: factory 7f64bf057900/4 expectation 7f64bf02cf00/2 session
7f64bf036500
    contact[1]: factory 7f64bf057700/3 expectation 7f64bf02ca00/3 session
7f64bf036500
    from: sip:2001@[2000:172:16:200::44]
    to: sip:2002@[2000:172:16:200::200]:65476;o=10.1.100.22;line=28c59e086cac7c9
    src: [2000:172:16:200::44]:5060
    dst: 10.1.100.22:5060

vdom 3 (vdom1) vrf 0 call 7f64bf057600
  call-id: 1876706695
  txn 7f64bf037300 (REGISTER)
    cseq 2 dir 0 state 5 status 200 expiry 856 HA 0
    i_session: 7f64bf036500 r_session: 7f64bf036500
    register: present
    from: sip:2002@10.1.100.100
    to: sip:2002@10.1.100.100
    src: 10.1.100.22:5060
    dst: [2000:172:16:200::44]:5060

vdom 3 (vdom1) vrf 0 call 7f64bf057400
  call-id: 1372246794
  txn 7f64bf035e00 (REGISTER)
    cseq 2 dir 0 state 5 status 200 expiry 853 HA 0
    i_session: 7f64bf035000 r_session: 7f64bf035000
    register: present
    from: sip:2001@10.1.100.100
    to: sip:2001@10.1.100.100
    src: 10.1.100.11:5060
    dst: [2000:172:16:200::44]:5060

vdom 3 (vdom1) vrf 0 call 7f64bf057800
  call-id: 16530657
  txn 7f64bf038f00 (INVITE)
    cseq 102 dir 1 state 11 status 200 expiry 252 HA 0
    i_session: 7f64bf035000 r_session: 7f64bf035000
    register: not-present
    contact[0]: factory 7f64bf057900/4 expectation 7f64bf02cc80/2 session
7f64bf035000
    contact[1]: factory 7f64bf057500/3 expectation 7f64bf02c780/3 session
7f64bf035000
    from: sip:2002@[2000:172:16:200::44]
    to: sip:2001@[2000:172:16:200::44]
    src: [2000:172:16:200::44]:5060
    dst: 10.1.100.11:5060

vdom 3 (vdom1) vrf 0 call 7f64bf057800
  call-id: 16530657
  txn 7f64bf037a00 (INVITE)
    cseq 21 dir 0 state 11 status 200 expiry 252 HA 0
```

```

i_session: 7f64bf035000 r_session: 7f64bf035000
register: not-present
contact[0]: factory 7f64bf057500/3 expectation 7f64bf02c780/3 session
7f64bf035000
contact[1]: factory 7f64bf057900/4 expectation 7f64bf02cc80/2 session
7f64bf035000
from: sip:2001@10.1.100.100
to: sip:2002@10.1.100.100
src: 10.1.100.11:5060
dst: [2000:172:16:200::44]:5060

```

## 2. View the IPv6 session list:

```

# diagnose sys session6 list

hook=pre dir=org act=noop 2000:172:16:200::203:17078->2000:172:16:200::44:17090(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:17090->2000:172:16:200::203:17078(:::0)
peer=10.1.100.100:17090->10.1.100.11:17078 naf=2

hook=pre dir=org act=noop 2000:172:16:200::200:17078->2000:172:16:200::44:17082(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:17082->2000:172:16:200::200:17078(:::0)
peer=10.1.100.100:17082->10.1.100.22:17078 naf=2
hook=pre dir=org act=noop 10.1.100.22:17078->10.1.100.100:17082(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:17082->10.1.100.22:17078(0.0.0.0:0)

hook=pre dir=org act=noop 2000:172:16:200::203:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::203:65476(:::0)
peer=10.1.100.100:5060->10.1.100.11:5060 naf=2
hook=pre dir=org act=noop 10.1.100.11:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.11:5060(0.0.0.0:0)

hook=pre dir=org act=noop 2000:172:16:200::200:65476->2000:172:16:200::44:5060(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::200:65476(:::0)
peer=10.1.100.100:5060->10.1.100.22:5060 naf=2
hook=pre dir=org act=noop 10.1.100.22:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.22:5060(0.0.0.0:0)

```

## 3. View the IPv6 expectation session list:

```

# diagnose sys session6 list expectation

hook=post dir=org act=noop 2000:172:16:200::44:0->2000:172:16:200::203:65476(:::0)
hook=pre dir=org act=noop :::0->:::0(:::0)
peer=10.1.100.100:0->10.1.100.11:5060 naf=1

```

## 4. View the IPv4 session list:

```

# diagnose sys session list

origin->sink: org pre->post, reply pre->post dev=9->52/52->9 gwy=10.1.100.100/10.1.100.22
hook=pre dir=org act=noop 10.1.100.22:17078->10.1.100.100:17082(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:17082->10.1.100.22:17078(0.0.0.0:0)
peer=2000:172:16:200::200:17078->2000:172:16:200::44:17082 naf=1
hook=pre dir=org act=noop 2000:172:16:200::200:17078->2000:172:16:200::44:17082(:::0)
hook=post dir=reply act=noop 2000:172:16:200::44:17082->2000:172:16:200::200:17078(:::0)

origin->sink: org pre->post, reply pre->post dev=9->52/52->9 gwy=10.1.100.100/10.1.100.22
hook=pre dir=org act=noop 10.1.100.22:5060->10.1.100.100:5060(0.0.0.0:0)

```

```
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.22:5060(0.0.0.0:0)
peer=2000:172:16:200::200:65476->2000:172:16:200::44:5060 naf=1
hook=pre dir=org act=noop 2000:172:16:200::200:65476->2000:172:16:200::44:5060(0.0.0.0:0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::200:65476(0.0.0.0:0)

orgin->sink: org pre->post, reply pre->post dev=9->52/52->9 gwy=10.1.100.100/10.1.100.11
hook=pre dir=org act=noop 10.1.100.11:5060->10.1.100.100:5060(0.0.0.0:0)
hook=post dir=reply act=noop 10.1.100.100:5060->10.1.100.11:5060(0.0.0.0:0)
peer=2000:172:16:200::203:65476->2000:172:16:200::44:5060 naf=1
hook=pre dir=org act=noop 2000:172:16:200::203:65476->2000:172:16:200::44:5060(0.0.0.0:0)
hook=post dir=reply act=noop 2000:172:16:200::44:5060->2000:172:16:200::203:65476(0.0.0.0:0)
```

##### 5. View the IPv4 expectation session list:

```
# diagnose sys session list expectation

orgin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.100:0->10.1.100.11:5060(0.0.0.0:0)
hook=pre dir=org act=noop 0.0.0.0:0->0.0.0.0:0(0.0.0.0:0)
peer:::0->:::0 naf=2

orgin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.100:0->10.1.100.22:17078(0.0.0.0:0)
peer:::0->:::0 naf=2

orgin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.100:0->10.1.100.22:17079(0.0.0.0:0)
peer:::0->:::0 naf=2

orgin->sink: org pre->post, reply pre->post dev=9->0/52->0 gwy=0.0.0.0/0.0.0.0
hook=post dir=org act=noop 10.1.100.22:0->10.1.100.100:17083(0.0.0.0:0)
peer=2000:172:16:200::200:17085->2000:172:16:200::44:17903 naf=1
```

## Log messages

When the phones are registering to the SIP server:


```
date=2022-02-17 time=16:44:47 eventtime=1645145087805236720 tz="-0800" logid="0814044032"
type="utm" subtype="voip" eventtype="voip" level="information" vd="vdom1" session_id=924
epoch=0 event_id=9 srcip=10.1.100.11 src_port=5060 dstip=2000:172:16:200::44 dst_port=5060
proto=17 src_int="port1" dst_int="port9" policy_id=1 profile="sip" voip_proto="sip"
kind="register" action="permit" status="authentication-required" duration=0 dir="session_
origin" call_id="1868762230" from="sip:2001@10.1.100.100" to="sip:2001@10.1.100.100"
```

When one phone is calling another phone:

```
date=2022-02-17 time=16:44:53 eventtime=1645145093351288241 tz="-0800" logid="0814044032"
type="utm" subtype="voip" eventtype="voip" level="information" vd="vdom1" session_id=924
epoch=0 event_id=11 srcip=10.1.100.11 src_port=5060 dstip=2000:172:16:200::44 dst_port=5060
proto=17 src_int="port1" dst_int="port9" policy_id=1 profile="sip" voip_proto="sip"
kind="call" action="permit" status="start" duration=0 dir="session_origin" call_
id="133636365" from="sip:2001@10.1.100.100" to="sip:2002@10.1.100.100"
```

## NAT64 example

In this example, SIP phones on the internal network use IPv6, and the SIP server on an external network uses IPv4. NAT64 is used with SIP ALG to allow for seamless communication. A VoIP profile, `sip`, has already been created.

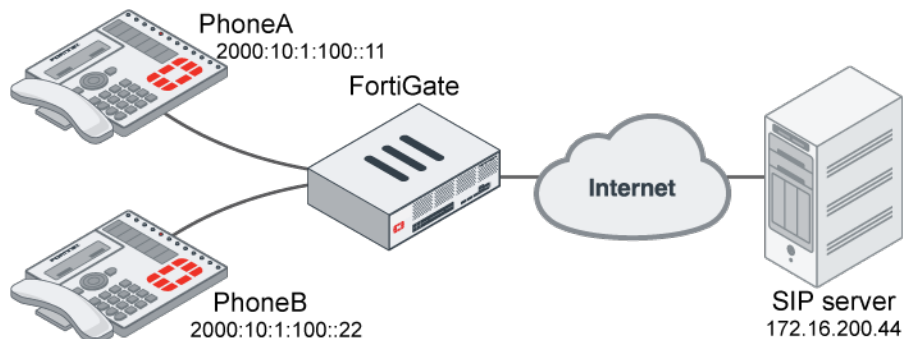

### To configure the FortiGate:

1. Configure a firewall VIP with NAT64 enabled:

```

config firewall vip
  edit "vip64-1-asterisk"
    set extip 2000:10:1:100::100
    set nat66 disable
    set nat64 enable
    set ipv4-mappedip 172.16.200.44
  next
end

```

2. Configure an IP pool:

```

config firewall ippool
  edit "client_server_nat46"
    set startip 172.16.200.2
    set endip 172.16.200.3
    set nat64 enable
  next
end

```

3. Configure a firewall policy:

```

config firewall policy
  edit 1
    set name "policy64-1"
    set srcintf "port1"
    set dstintf "port9"
    set action accept
    set nat64 enable
    set srcaddr "all"
    set dstaddr "all"
    set srcaddr6 "all"
    set dstaddr6 "vip64-1-asterisk"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
  
```

```

        set voip-profile "sip"
        set logtraffic all
        set auto-asic-offload disable
        set ippool enable
        set poolname "client_server_nat64"
    next
end

```

## SIP message inspection and filtering

There are two types of VoIP profiles that can be configured:

```

config voip profile
    edit <name>
        set feature-set {ips | voipd}
    next
end

```

`feature-set {ips | voipd}` Set the inspection feature set.

- `ips`: use the IPS Engine feature set for the `ips-voip-filter` firewall policy option.
- `voipd`: use the SIP ALG feature set for `voip-profile` firewall policy option.

SIP ALG provides users with security features to inspect and control SIP messages that are transported through the FortiGate, including:

- Verifying the SIP message syntax.
- Blocking particular types of SIP requests.
- Restricting the rate of particular SIP requests.

Proxy-based SIP ALG (`feature-set voipd`) is also able to handle features such as pin hole creation and NAT that flow-based SIP inspection cannot. Flow-based SIP (`feature-set ips`) can handle features such as MSRP decoding and scanning that proxy-based SIP ALG cannot.

The two VoIP profile types can be configured separately or at the same time on a firewall policy:

```

config firewall policy
    edit 1
        set voip-profile "voip_sip_alg"
        set ips-voip-filter "voip_sip_ips"
    next
end

```

Where:

- `voip-profile` can select a voip-profile with `feature-set voipd`.
- `ips-voip-filter` can select a voip-profile with `feature-set ips`.

The IPS-based VoIP profile (`ips-voip-filter`) allows flow-based SIP to complement SIP ALG while working together.



When both SIP ALG and SIP IPS are used and configured with same block rules, SIP IPS will take priority and do the blocking.






Unlike previous versions (7.0 and 7.2.0-7.2.4) where the firewall policy's inspection mode determines whether the SIP traffic is scanned by SIP ALG or flow-based SIP, the inspection mode does not matter in this version. A `voipd`-based VoIP profile will activate SIP ALG inspection, while an `ips`-based VoIP profile will activate IPS-based SIP inspection.

A `voip`-profile can be selected regardless of the `inspection-mode` used in the firewall policy.

For more information about the difference between SIP ALG and the SIP session helper, see [SIP ALG and SIP session helper on page 1503](#).

## Example

In this example, SIP ALG is required for pinhole creation, handling NAT, and controlling SIP messages that requires flow-based SIP. The administrator needs to configure two SIP profiles, one with each feature set (`voipd` and `ips`), and apply these SIP profiles in the same firewall policy.

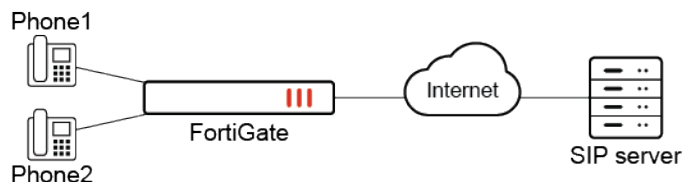

### To configure SIP ALG with SIP IPS:

#### 1. Configure the VoIP profiles:

```

config voip profile
  edit "voip_sip_alg"
    set feature-set voipd
    set comment "sip_alg_simple"
    config sip
      set log-violations enable
      set log-call-summary enable
    end
  next
  edit "voip_sip_ips"
    set feature-set ips
    set comment "ips_voip_blocking"
    config sip
      set block-invite enable
      set log-violations enable
    end
  next
end

```

#### 2. Configure the firewall policy:

```

config firewall policy
  edit 1
    set srcintf "port1"
    set dstintf "port9"
    set action accept
  
```

```
set srcaddr "all"
set dstaddr "all"
set srcaddr6 "all"
set dstaddr6 "all"
set schedule "always"
set service "ALL"
set utm-status enable
set inspection-mode proxy
set ips-sensor "g-default"
set voip-profile "voip_sip_alg"
set ips-voip-filter "voip_sip_ips"
set logtraffic all
set nat enable
next
end
```

## To verify the SIP proxy SIP calls:

### 1. Verify the register request:

```
# diagnose sys sip-proxy calls
sip calls
vdom 1 (vdom1) vrf 0 call 7f2b99828300
call-id: 619216389
txn 7f2b998ad600 (REGISTER)
cseq 2 dir 0 state 5 status 200 expiry 527 HA 0
i_session: 7f2b998aac00 r_session: 7f2b998aac00
register: present
from: sip:2001@172.16.200.44
to: sip:2001@172.16.200.44
src: 10.1.100.11:5060
dst: 172.16.200.44:5060
```

### 2. Verify the invite request:

```
# diagnose sys sip-proxy calls
sip calls
vdom 1 (vdom1) vrf 0 call 7f2b99828300
call-id: 619216389
txn 7f2b998ad600 (REGISTER)
cseq 2 dir 0 state 5 status 200 expiry 316 HA 0
i_session: 7f2b998aac00 r_session: 7f2b998aac00
register: present
from: sip:2001@172.16.200.44
to: sip:2001@172.16.200.44
src: 10.1.100.11:5060
dst: 172.16.200.44:5060
```

## Sample logs

### Register request:

```
date=2023-01-13 time=09:46:03 eventtime=1673631963477298677 tz="-0800" logid="0814044032"
type="utm" subtype="voip" eventtype="voip" level="information" vd="vdom1" session_id=17092
epoch=0 event_id=1 srcip=10.1.100.11 src_port=5060 dstip=172.16.200.44 dst_port=5060
proto=17 src_int="port1" dst_int="port9" policy_id=1 profile="voip_sip_alg" voip_proto="sip"
```

```
kind="register" action="permit" status="succeeded" duration=0 dir="session_origin" call_id="619216389" from="sip:2001@172.16.200.44" to="sip:2001@172.16.200.44"
```

**Invite request:**

```
date=2023-01-13 time=09:54:43 eventtime=1673632484065549240 tz="-0800" logid="0814044033"
type="utm" subtype="voip" eventtype="voip" level="notice" vd="vdom1" session_id=17092
epoch=0 event_id=0 srcip=10.1.100.11 src_port=5060 dstip=172.16.200.44 dst_port=5060
proto=17 src_int="port1" dst_int="port9" policy_id=1 profile="voip_sip_ips" voip_proto="sip"
kind="call" action="block" status="N/A" reason="block-request" duration=0 dir="session_reverse" message_type="request" request_name="INVITE" call_id="1967779864" count=0
from="<sip:2001@172.16.200.44>" to="<sip:2002@172.16.200.44>" attackid=50083
attack="SIP.Invite.Method"
```

## SIP message syntax inspection

For syntax verification, the following attributes are available for configuration in the VoIP profile to determine what action is taken when a specific syntax error or attack based on invalid syntax is detected. For example, the action can be set to pass or discard it.

```
malformed-request-line
malformed-header-via
malformed-header-from
malformed-header-to
malformed-header-call-id
malformed-header-cseq
malformed-header-rack
malformed-header-rseq
malformed-header-contact
malformed-header-record-route
malformed-header-route
malformed-header-expires
malformed-header-content-type
malformed-header-content-length
malformed-header-max-forwards
malformed-header-allow
malformed-header-p-asserted-identity
malformed-header-sdp-v
malformed-header-sdp-o
malformed-header-sdp-s
malformed-header-sdp-i
malformed-header-sdp-c
malformed-header-sdp-b
malformed-header-sdp-z
malformed-header-sdp-k
malformed-header-sdp-a
malformed-header-sdp-t
malformed-header-sdp-r
malformed-header-sdp-m
malformed-header-no-require*
malformed-header-no-proxy-require*
```

\* = only available in flow mode

## SIP message blocking

The following options are available in the VoIP profile to block SIP messages:

```
block-long-lines
block-unknown
block-ack
block-bye
block-cancel
block-info
block-invite
block-message
block-notify
block-options
block-prack
block-publish
block-refer
block-register
block-subscribe
block-update
block-geo-red-options**
```

\*\* = only available in proxy mode

## SIP message rate limiting

The rate of certain types of SIP requests that are passing through the SIP ALG can be restricted:

```
register-rate
invite-rate
subscribe-rate
message-rate
notify-rate
refer-rate
update-rate
options-rate
ack-rate
prack-rate
info-rate
publish-rate
bye-rate
cancel-rate
```

Additionally, flow-based SIP supports the following rate tracking features:

```
register-rate-track none
invite-rate-track none
subscribe-rate-track none
message-rate-track none
notify-rate-track none
refer-rate-track none
update-rate-track none
options-rate-track none
ack-rate-track none
prack-rate-track none
info-rate-track none
```

```
publish-rate-track none
bye-rate-track none
cancel-rate-track none
```

## Call-Id and Content-Type regex

When the `ips` VoIP profile feature set is selected, options for Call-Id and Content-Type header values can be configured.

```
config voip profile
  edit <name>
    config sip
      set call-id-regex <string>
      set call-id-regex <string>
    end
  next
end
```

<code>call-id-regex &lt;string&gt;</code>	Enter a validation PCRE regular expression for the Call-Id header value.
<code>call-id-regex &lt;string&gt;</code>	Enter a validation PCRE regular expression for the Content-Type header value.

## SIP ALG and SIP session helper

The SIP session helper is a high-performance solution that provides basic support for SIP calls passing through the FortiGate by opening SIP and RTP pinholes, and by performing NAT of the addresses in SIP messages.

SIP Application Layer Gateway (ALG) provides the same basic SIP support as the SIP session helper. In addition, SIP ALG provides a wide range of features that protect your network from SIP attacks, apply rate limiting to SIP sessions, check the syntax of SIP and SDP content of SIP messages, and provide detailed logging and reporting of SIP activity.

By default, all SIP traffic is processed by the SIP ALG. If the policy that accepts the SIP traffic includes a VoIP profile, the SIP traffic is processed by that profile. If the policy does not include a VoIP profile, the SIP traffic is processed by the SIP ALG using the default VoIP profile.

### To change between SIP ALG mode and SIP session helper mode:

```
config system settings
  set default-voip-alg-mode {proxy-based | kernel-helper-based}
end
```

<code>default-voip-alg-mode {proxy-based   kernel-helper-based}</code>	Set how the FortiGate handles VoIP traffic when a policy that accepts the traffic does not include a VoIP profile. <ul style="list-style-type: none"> <li><code>proxy-based</code>: use SIP ALG to process SIP traffic (default).</li> <li><code>kernel-helper-based</code>: use the SIP session helper to process SIP traffic.</li> </ul>
--	--

The `default-voip-alg-mode` setting works together with the VoIP profile configured in a firewall policy to determine whether SIP ALG, SIP ALG with IPS SIP, or the SIP session helper are used to process the SIP traffic. The following firewall policy settings correspond to the VoIP profiles (see also [SIP message inspection and filtering on page 1498](#)).

```
config firewall policy
  edit <id>
```

```

        set voip-profile <voipd-based_profile>
        set ips-voip-filter <ips-based_profile>
    next
end

```

The following table explains the results of configuring different combinations of the preceding settings.

Firewall policy setting		Default VoIP ALG mode setting	
voip-profile	ips-voip-filter	kernel-helper-based	proxy-based
Yes	Yes	SIP ALG + IPS SIP	SIP ALG + IPS SIP
Yes	No	SIP ALG	SIP ALG
No	Yes	SIP ALG + IPS SIP	SIP ALG + IPS SIP
No	No	SIP session helper	SIP ALG

## SIP ALG configurations

SIP ALG can be enabled in several ways. The following configuration examples demonstrate different settings.

### Example 1

In this example, a `voipd`-based profile is configured and applied to a firewall policy. The `default-voip-alg-mode` remains as the default setting (`proxy-based`).

#### To configure SIP ALG:

1. Configure the default VoIP ALG mode:

```

config system settings
    set default-voip-alg-mode proxy-based
end

```

2. Configure the VoIP profile:

```

config voip profile
    edit "sip-alg-profile"
        set feature-set voipd
        config sip
            set status enable
        end
    next
end

```

3. Configure the firewall policy:

```

config firewall policy
    edit 0
        set name "VoIP-Proxy"
        set utm-status enable
        set voip-profile "sip-alg-profile"
    next
end

```

## Example 2

In this example, the `default-voip-alg-mode` is set to `kernel-helper-based`. A VoIP profile (VoIP-Proxy) has SIP enabled and is applied to a firewall policy.

### To configure SIP ALG:

1. Configure the default VoIP ALG mode:

```
config system settings
    set default-voip-alg-mode kernel-helper-based
end
```

2. Configure the VoIP profile:

```
config voip profile
    edit "sip-alg-profile"
        set feature-set voipd
        config sip
            set status enable
        end
    next
end
```

3. Configure the firewall policy:

```
config firewall policy
    edit 0
        set name "VoIP-Proxy"
        set utm-status enable
        set voip-profile "sip-alg-profile"
    next
end
```

## Example 3

In this example, no VoIP profile is selected in the firewall policy. However, the `default-voip-alg-mode` is set to `proxy-based`. The default `voip-profile` is implicitly applied.

### To configure SIP ALG to implicitly use the default VoIP profile:

1. Configure the default VoIP ALG mode:

```
config system settings
    set default-voip-alg-mode proxy-based
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 0
        set name "VoIP-Proxy"
        set utm-status enable
        set voip-profile ""
    next
end
```

## SIP session helper configurations

In some instances, SIP providers may recommend that customers disable SIP ALG on their edge firewall. This is how you can disable SIP ALG and enable the SIP session helper.

### Example 1

In this example, the `default-voip-alg-mode` is set to `kernel-helper-based`, and a VoIP profile is not applied in a firewall policy. Session helper 13 is enabled by default.

#### To configure the SIP session helper:

1. Configure the default VoIP ALG mode:

```
config system settings
    set default-voip-alg-mode kernel-helper-based
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 0
        set name "VoIP-session-helper"
        set utm-status enable
        set voip-profile ""
    next
end
```

3. Configure the session helper:

```
config system session-helper
    edit 13
        set name sip
        set protocol 17
        set port 5060
    next
end
```

### Example 2

In this example, the `default-voip-alg-mode` is set to either `proxy-based` or `kernel-helper-based`. A VoIP profile that has SIP disabled is applied to the firewall policy.

#### To configure the SIP session helper:

1. Configure the default VoIP ALG mode:

```
config system settings
    set default-voip-alg-mode {proxy-based | kernel-helper-based}
end
```

2. Configure the VoIP profile:

```
config voip profile
    edit "sip-disabled-profile"
        set feature-set voipd
```



```
        config sip
            set status disable
        end
    next
end
```

**3. Configure the firewall policy:**

```
config firewall policy
    edit 0
        set name "VoIP-session-helper"
        set utm-status enable
        set voip-profile "sip-disabled-profile"
    next
end
```

**4. Configure the session helper:**

```
config system session-helper
    edit 13
        set name sip
        set protocol 17
        set port 5060
    next
end
```

### Example 3

In this example, the session helper is removed because the SIP provider suggests to disable SIP ALG and the session helper altogether.

**To remove the SIP session helper:****1. Configure the default VoIP ALG mode:**

```
config system settings
    set default-voip-alg-mode kernel-helper-based
end
```

**2. Configure the firewall policy:**

```
config firewall policy
    edit 0
        set name "VoIP-session-helper"
        set utm-status enable
        set voip-profile ""
    next
end
```

**3. Remove the session helper:**

```
config system session-helper
    delete 13
end
```

## Modifying the SIP port

Most SIP configurations use TCP or UDP port 5060 for SIP sessions and port 5061 for SIP SSL sessions. If your SIP network uses different ports for SIP sessions, the SIP port can be changed. You can also listen to two TCP and UDP ports .

### To change the SIP port:

```
config system settings
    set sip-tcp-port 5064
    set sip-udp-port 5065
    set sip-ssl-port 5066
end
```

### To listen to two TCP and UDP ports:

```
config system settings
    set sip-tcp-port 5060 5064
    set sip-udp-port 5061 5065
end
```

### To modify the SIP ports for the default SIP session helper:

```
config system session-helper
    edit 13
        set name sip
        set protocol 17
        set port 5065
    next
end
```

### To add a new session helper to listen on UDP and TCP 5064:

```
config system session-helper
    edit 0
        set name sip
        set port 5064
    next
end
```

## SIP pinholes

When SIP ALG processes a SIP call, it usually opens pinholes for SIP signaling and RTP/RTCP packets. NAT usually takes place during the process at both the network and SIP application layers. SIP ALG ensures that, with NAT happening, corresponding SIP and RTP/RTCP pinholes are created during the process when it is necessary for call sessions to be established through FortiOS devices.

By default, SIP ALG manages pinholes automatically, but some special configurations can be used to restrict the pinholes if required.

## SIP pinhole restriction

The `strict-register` attribute is enabled by default. When enabled, after a SIP endpoint registers to the SIP server through a firewall policy on the FortiGate, only the SIP messages sent from the same IP address as the SIP server are allowed to pass through the SIP pinhole that is created in the FortiGate to reach the SIP endpoints. If the attribute is disabled, SIP messages from any IP addresses can pass through the pinhole created after the registration.



SIP pinhole restriction is only supported by SIP ALG and in proxy mode.

### To configure registrar connection ability:

```
config voip profile
    edit <name>
        config sip
            set strict-register {enable | disable}
        end
    next
end
```

## RTP/RTCP pinhole restriction

The `nat-port-range` setting is used to specify a port range in the VoIP profile to restrict the NAT port range for Real-time Transport Protocol/Real-time Transport Control Protocol (RTP/RTCP) packets in a Session Initiation Protocol (SIP) call session that is handled by the SIP application layer gateway (ALG) in a FortiGate.

When NAT is enabled, or VIP is used in a firewall policy for SIP ALG to handle a SIP call session established through a FortiGate, the SIP ALG can perform NAT to translate the ports used for the RTP/RTCP packets when they are flowing through the device between the external and internal networks.

### To edit the translated port range for RTP/RTCP packets:

```
config voip profile
    edit <name>
        config sip
            set nat-port-range <start_port_number>-<end_port_number>
        end
    next
end
```


```
nat-port-range <start_
port_number>-<end_
port_number>
```

Enter the NAT port range (minimum port number = 5117, default = 5117-65535).

## Example

In this example, Phone 1 is in Subnet 1, and the SIP server and Phone 2 are in Subnet 2. All SIP signaling messages and RTP/RTCP packets go through the SIP server. The RTP/RTCP ports on Phone 1 are configured as 17078/17079.

The FortiGate administrator wants to use NAT for the port 17078/17079 to 30000/30001. If Phone 1 and Phone 2 are registered to the SIP server, and they establish a call session between them through the FortiGate and the SIP server, then the RTP/RTCP ports 17078/17079 of Phone 1 will be translated to ports 30000/30001. All RTP/RTCP packets going out of port2 have source ports of 30000/30001, and all RTP/RTCP packets going into port2 also have destination ports of 30000/30001.

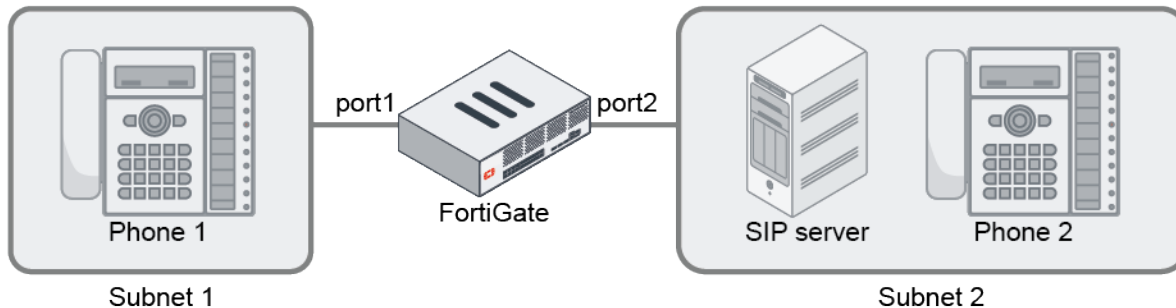

### To configure the custom port range:

#### 1. Edit the VoIP profile:

```

config voip profile
  edit "natPortRange"
    config sip
      set nat-port-range 30000-30001
    end
  next
end
  
```



It is best practice to configure the starting port as an even number and the ending port as an odd number.

#### 2. Configure the firewall policy:

```

config firewall policy
  edit 1
    set srcintf port1
    set dstintf port2
    set srcaddr all
    set dstaddr all
    set service SIP
    set action accept
    set schedule always
    set voip-profile natPortRange
    set nat enable
  next
end
  
```

## SIP over TLS

Some SIP phones and servers can communicate using TLS to encrypt the SIP signaling traffic. To allow SIP over TLS calls to pass through the FortiGate, the encrypted signaling traffic must be unencrypted and inspected. The FortiGate

SIP ALG intercepts, unencrypts, and inspects the SIP packets, which are then re-encrypted and forwarded to their destination.

The SIP ALG only supports full mode TLS. This means that the SIP traffic between SIP phones and the FortiGate, and between the FortiGate and the SIP server, is always encrypted. The highest TLS version supported by SIP ALG is TLS 1.2.

To enable SIP over TLS support, the SSL mode in the VoIP profile must be set to `full`. The SSL server and client certificates can be provisioned so that the FortiGate can use them to establish connections to SIP phones and servers, respectively.



This configuration is only supported in proxy mode.

---

### To configure SIP over TLS:

#### 1. Configure a VoIP profile with SSL enabled:

```
config voip profile
  edit "tls"
    config sip
      set ssl-mode full
      set ssl-client-certificate "ssl_client_cert"
      set ssl-server-certificate "ssl_server_cert"
    end
  next
end
```

The `ssl_server_cert`, `ssl_client_cert`, and key files can be generated using a certification tool, such as OpenSSL, and imported to the local certificate store of the FortiGate from *System > Certificates* in the GUI. Existing local certificates in the certificate store can also be used. As always for TLS connections, the certificates used must be verified and trusted at the other end of the connection when required.

For example, the CA certificate of the SIP server's certificate should be imported to the FortiGate as an external CA certification, so that the FortiGate can use it to verify the SIP server's certificate when setting up the TLS connection. The CA certificate configured as the `ssl_server_cert` should be installed as the trusted certificate on the SIP phones. The deployment of the certificates across the network depends on the SIP client and server devices that are used in the system.

#### 2. Apply the profile to the firewall policy:

```
config firewall policy
  edit 1
    set srcintf "port1"
    set dstintf "port2"
    set srcaddr "all"
    set dstaddr "vip_sip_server"
    set action accept
    set schedule "always"
    set service "SIP"
    set utm-status enable
    set voip-profile "tls"
  next
end
```

## Voice VLAN auto-assignment

You can leverage LLDP-MED to assign voice traffic to the desired voice VLAN. After detection and setup, the IP phone on the network is segmented to its own VLAN for policy, prioritization, and reporting. The LLDP reception capabilities in FortiOS include LLDP-MED assignment for voice, voice signaling, guest, guest voice signaling, softphone, video conferencing, streaming video, and video signaling.

You can configure VLAN auto-assignment using the following steps:

1. [Set up the VLAN for the voice device](#)
2. [Set up the DHCP server for the voice VLAN](#)
3. [Set up the LLDP network policy](#)
4. [Enable LLDP on the physical interface that the VLAN belongs to](#)
5. [Apply the LLDP network policy on the physical interface](#)
6. [Confirm that the VLAN was assigned](#)

### To set up the VLAN for the voice device:

```
config system interface
  edit "vlan_100"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
    set alias "voice_vlan"
    set device-identification enable
    set role lan
    set snmp-index 25
    set interface "port10"
    set vlanid 100
  next
end
```

### To set up the DHCP server for the voice VLAN:

```
config system dhcp server
  edit 1
    set dns-service default
    set default-gateway 192.168.1.99
    set netmask 255.255.255.0
    set interface "vlan_100"
    config ip-range
      edit 1
        set start-ip 192.168.1.110
        set end-ip 192.168.1.210
      next
    end
  next
end
```

### To set up the LLDP network policy:

```
config system lldp network-policy
  edit "1"
    config voice
      set status enable
```

```
        set tag dot1q
        set vlan 100
    end
next
end
```

**To enable LLDP on the physical interface that the VLAN belongs to:**

```
config system interface
    edit "port10"
        set vdom "root"
        set type physical
        set lldp-reception enable
        set lldp-transmission enable
        set snmp-index 14
    next
end
```

**To apply the LLDP network policy on the physical interface:**

```
config system interface
    edit "port10"
        set lldp-network-policy "1"
    next
end
```

**To confirm that the VLAN was assigned as expected:**

1. Connect an IP phone to the network.
2. Check the IP address on the phone.  
The IP address should belong to the voice VLAN.
3. Sniff on the FortiGate incoming interface to see if traffic from the IP phone has the desired VLAN tag.  
In this example, the voice traffic from the IP phone should be in VLAN 100.


## Scanning MSRP traffic

An MSRP (Message Session Relay Protocol) decoder in the IPS engine scans for IPS signatures against the application data. Malicious payload in the text message can be blocked. A VoIP profile using flow inspection mode must be configured in the firewall policy. An IPS profile must be configured in the firewall policy to inspect the payload.

```
config voip profile
    edit <name>
        set feature-set flow
        config msrp
            set status {enable | disable}
            set log-violations {enable | disable}
            set max-msg-size <integer>
            set max-msg-size-action {pass | block | reset | monitor}
        end
    next
end
```

<code>status {enable   disable}</code>	Enable/disable MSRP.
<code>log-violations {enable   disable}</code>	Enable/disable logging of MSRP violations.
<code>max-msg-size &lt;integer&gt;</code>	Maximum allowable MSRP message size, in bytes (0 - 65535, default = 0).
<code>max-msg-size-action {pass   block   reset   monitor}</code>	Action for violating maximum MSRP message size: <ul style="list-style-type: none"> <li>• pass: pass or allow matching traffic (default)</li> <li>• block: block or drop matching traffic</li> <li>• reset: reset sessions for matching traffic</li> <li>• monitor: pass and log matching traffic</li> </ul>

## Examples

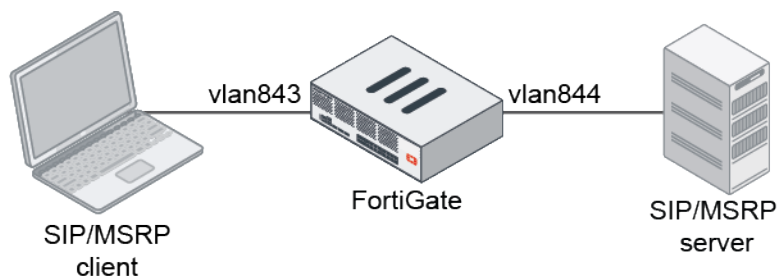

In this first example, MSRP messages larger than 10 bytes will be blocked. The client sends an oversized MSRP message to the server. Message Automation & Protocol Simulation (MAPS™) is used, and a client-server model was configured to use the software to send MSRP traffic from vlan843 (client) to vlan844 (server) with plain text placed in the message field. The software uses the content of the `MsrpInputMessage.txt` file located in the default folder, where anything in that file will be sent by MSRP. The following text is used:

GL's Message Automation & Protocol Simulation (MAPS™) is a protocol simulation and conformance test tool that supports a variety of protocols such as SIP, MEGACO, MGCP, SS7, ISDN, GSM, MAP, CAS, LTE, UMTS, SS7 SIGTRAN, ISDN SIGTRAN, SIP I, GSM AoIP, Diameter and others. This message automation tool covers solutions for both protocol simulation and protocol analysis. The application includes various test plans and test cases to support the testing of real-time entities. Along with automation capability, the application gives users the unlimited ability to edit messages and control scenarios (message sequences).

### To configure MSRP traffic scanning:

#### 1. Configure the VoIP profile:

```

config voip profile
  edit msrp_test
    set feature-set flow
    config msrp
      set status enable
      set log-violations enable
      set max-msg-size 10
      set max-msg-size-action block
    end
  next
end

```



**2. Configure the firewall policy:**

```

config firewall policy
  edit 1
    set name "vdom3"
    set srcintf "vlan843"
    set dstintf "vlan844"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set voip-profile "msrp_test"
    set logtraffic all
  next
end

```

**3. Verify the log:**

```

# execute log filter category 4
# execute log display
1 logs found.
1 logs returned.

```

```

1: date=2021-06-10 time=17:21:19 eventtime=1623370879840284165 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
vd="vdom3" severity="info" srcip=192.168.12.212 srccountry="Reserved"
dstip=192.168.12.213 srcintf="vlan843" srcintfrole="lan" dstintf="vlan844"
dstintfrole="lan" sessionid=27700 action="dropped" proto=6 service="MSRP" policyid=1
attack="MSRP.Max.Message.Size.Exceeded" srcport=20036 dstport=20036 direction="outgoing"
attackid=1000000 profile="g-default" ref="http://www.fortinet.com/ids/VID1000000"
incidentserialno=189792275 psrport=0 pdstport=0 msg="msrp_decoder:
MSRP.Max.Message.Size.Exceeded, msg_size=270 exceeds config maximum=10"

```

**4. In MAPS, verify that the call was terminated:**

The screenshot shows the MAPS (Message Automation Protocol Simulation) interface. The top part displays a table with call execution details. Below the table, there is a detailed call flow diagram showing the sequence of events between the MAPS client and the DUT (Device Under Test).

Sr No	Script Name	Profile	Call Info	Script Execution	Status	Events	Events Profile	Result	Total Iterations	Completed Iterations
1	SpRegistrationControl.gls	Profile0001	CGProScriptId:98-693436402-2281-7316	Start		None		Unknown	1	1
2	SpCallControl.gls	Profile0001	GLMAPS-113-693431911-2277-96208132-168-12-212	Start	Call Terminated	None		Pass	1	1

The call flow diagram shows the following sequence of events:

- MAPS sends INVITE to DUT at 11:32:33.127000.
- DUT sends 100 Trying to MAPS at 11:32:33.190000.
- DUT sends 180 Ringing to MAPS at 11:32:33.207000.
- DUT sends 200 OK to MAPS at 11:32:33.340000.
- DUT sends ACK to MAPS at 11:32:33.365000.
- DUT sends BYE to MAPS at 11:32:38.201000.
- DUT sends 200 OK to MAPS at 11:32:38.244000.

In this second example, malicious files will be blocked. The client sends an EICAR test sample to the server in an MSRP message. Message Automation & Protocol Simulation (MAPS™) is used, and a client-server model was configured to

use the software to send MSRP traffic from vlan843 (client) to vlan844 (server) with a plain text EICAR file containing a virus in the message field. The following text is used:

```
X5O!P%@AP[4\PZX54(P^)7CC)7}$EICAR-STANDARD-ANTIVIRUS-TEST-FILE!$H+H*
```

### To configure MSRP traffic scanning:

#### 1. Configure the VoIP profile:

```
config voip profile
  edit msrp_test
    set feature-set flow
    config msrp
      set status enable
      set log-violations enable
      set max-msg-size 0
      set max-msg-size-action pass
    end
  next
end
```

#### 2. Configure the IPS profile:

```
config ips sensor
  edit "msrp"
    set extended-log enable
    config entries
      edit 1
        set rule 7470 29844
        set status enable
        set action block
      next
    end
  next
end
```

#### 3. Configure the firewall policy:

```
config firewall policy
  edit 1
    set name "vdom3"
    set srcintf "vlan843"
    set dstintf "vlan844"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set ips-sensor "msrp"
    set voip-profile "msrp_test"
    set logtraffic all
  next
end
```

#### 4. Verify the log:

```
# execute log filter category 4
# execute log display
1 logs found.
1 logs returned.

1: date=2021-09-16 time=11:29:48 eventtime=1631816988947762597 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
vd="vdom3" severity="info" srcip=192.168.12.212 srccountry="Reserved"
dstip=192.168.12.213 srcintf="vlan843" srcintfrole="lan" dstintf="vlan844"
dstintfrole="lan" sessionid=41344 action="dropped" proto=6 service="MSRP" policyid=1
attack="Eicar.Virus.Test.File" srcport=20069 dstport=20069 direction="outgoing"
attackid=29844 profile="msrp" ref="http://www.fortinet.com/ids/VID29844"
incidentserialno=123731970 psrcport=0 pdstport=0 msg="file_transfer:
Eicar.Virus.Test.File,"
```

## ICAP

Internet Content Adaptation Protocol (ICAP) is an application layer protocol that is used to offload tasks from the firewall to separate, specialized servers. For more information see [RFC 3507](#).

ICAP profiles can only be applied to policies that use proxy-based inspection. If you enable ICAP in a policy, HTTP and HTTPS (if HTTPS inspection is supported) traffic that is intercepted by the policy is transferred to the ICAP server specified by the selected ICAP profile. Responses from the ICAP server are returned to the FortiGate, and then forwarded to their destination.



By default, *ICAP* is not visible in the GUI. See [Feature visibility on page 2515](#) for instructions on making it visible.



ICAP filter profiles cannot be used in NGFW policy-based mode. See [NGFW policy on page 1049](#) for more information.

---

#### To configure ICAP:

1. Set up your ICAP server.
2. On the FortiGate, add an ICAP server.
3. Create an ICAP profile.
4. Use the ICAP profile in a firewall policy that covers the traffic that needs to be offloaded to the ICAP server.

The following topics provide information about ICAP:

- [ICAP configuration example on page 1518](#)
- [ICAP response filtering on page 1520](#)
- [Secure ICAP clients on page 1522](#)
- [ICAP scanning with SCP and FTP on page 1523](#)

## TCP connection pool for connections to ICAP server

A TCP connection pool can maintain local-out TCP connections to the external ICAP server due to a backend update in FortiOS. TCP connections will not be terminated once data has been exchanged with the ICAP server, but instead are reused in the next ICAP session to maximize efficiency.

For example, consider a scenario where an ICAP profile is used as a UTM profile in an explicit web proxy policy, and a client visits web servers through this proxy policy.

Once the WAD is initialized, when a HTTP request is sent from the client to the server through the FortiGate with an ICAP profile applied to the matched proxy policy, a TCP connection is established between the FortiGate and the ICAP server to exchange data.

When an ICAP session is finished, the TCP connection is kept in the WAD connection pool. When another ICAP session needs to be established, the WAD will check if there are any idle connections available in the connection pool. If an idle connection is available, then it will be reused; otherwise, a new TCP connection is established for the ICAP session. This process can be checked in the WAD debug log.

## ICAP configuration example

In this example, the ICAP server performs proprietary content filtering on HTTP and HTTPS requests. If the content filter is unable to process a request, then the request is blocked. Streaming media is not considered by the filter, so it is allowed through and is not processed.

### To configure the ICAP setup in the GUI:

1. Add the ICAP server:
  - a. Go to *Security Profiles > ICAP Servers* and click *Create New*.
  - b. In the *Name* field, enter a name for the ICAP server, such as *content-filtration-server4*.
  - c. Select the *IP Version*.
  - d. In the *IP Address* field, enter the IP address of the ICAP server.
  - e. In the *Port* field, enter a new port number if required. The default value is *1344*.

- f. Click *OK*.



The maximum number of concurrent connections to ICAP server can be configured in the CLI (`set max-connections`). The default setting is 100 connections.

2. Create the ICAP profile:
  - a. Go to *Security Profiles > ICAP* and click *Create New*.
  - b. In the *Name* field, enter a name for the ICAP profile, such as *Prop-Content-Filtration*.
  - c. Enable *Request Processing* and set the following:
    - *Server*: select the ICAP server (*content-filtration-server4*).
    - *Path*: enter the path to the processing component on the server, such as */proprietary\_code/content-filter/*.

- *On Failure*: select *Error* to block the request. If the message cannot be processed, it will not be blocked.
- d. Enable *Response Processing* and set the following:
  - *Server*: select the ICAP server (*content-filtration-server4*).
  - *Path*: enter the path to the processing component on the server, such as */proprietary\_code/content-filter/*.
  - *On Failure*: select *Error* to block the request. If the message cannot be processed, it will not be blocked.
- e. Enable *Streaming Media Bypass* to not offload streaming media to the ICAP server.

f. Click **OK**.

3. Add the ICAP profile to a policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
- b. Set *Inspection Mode* to *Proxy-based*.
- c. Under *Security Profiles*, enable *ICAP* and select the ICAP server.

- d. Configure the other settings as needed.
- e. Click **OK**.

### To configure the ICAP setup in the CLI:

1. Add the ICAP server:

```
config icap server
  edit "content-filtration-server4"
    set ip-version 4
    set ip-address 172.16.100.55
    set port 1344
    set max-connections 200
  next
end
```

**2. Create the ICAP profile:**

```

config icap profile
    edit "Prop-Content-Filtration"
        set request enable
        set response enable
        set streaming-content-bypass enable
        set request-server "content-filtration-server4"
        set response-server "content-filtration-server4"
        set request-failure error
        set response-failure error
        set request-path "/proprietary_code/content-filter/"
        set response-path "/proprietary_code/content-filter/"
        set methods delete get head options post put trace other
    next
end

```

**3. Add the ICAP profile to a policy:**

```

config firewall policy
    edit 5
        set name "icap_filter3"
        set srcintf "virtual-wan-link"
        set dstintf "virtual-wan-link"
        set srcaddr "FABRIC_DEVICE"
        set dstaddr "FABRIC_DEVICE"
        set dstaddr-negate enable
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssl-ssh-profile "certificate-inspection"
        set icap-profile "Prop-Content-Filtration"
        set logtraffic disable
        set fsso disable
        set nat enable
    next
end

```

## ICAP response filtering

ICAP HTTP responses can be forwarded or bypassed based on the HTTP header value and status code.

When configuring the ICAP profile, if `response` is enabled, the `respmo-d-default-action` option can be configured:

- If `respmo-d-default-action` is set to `forward`, FortiGate will treat every HTTP response and send ICAP requests to the ICAP server.
- If `respmo-d-default-action` is set to `bypass`, FortiGate will only send ICAP requests if the HTTP response matches the defined rules, and the rule's action is set to `forward`.

When configuring a response rule:

- The `http-resp-status-code` option is configured to specific HTTP response codes. If the HTTP response has any one of the configured values, then the rule takes effect.
- Multiple header value matching groups can be configured. If the header value matches one of the groups, then the


rule takes effect.

- If both status codes and header values are specified in a rule, the response must match at least one of each.

The UTM ICAP log category is used for logging actions when FortiGate encounters errors with the ICAP server, such as no service, unreachable, error response code, or timeout. If an error occurs, a traffic log and an associated UTM ICAP log will be created.

## Example

The FortiGate acts as a gateway for the client PC and connects to a reachable ICAP server. The ICAP server can be in NAT, transparent, or proxy mode.

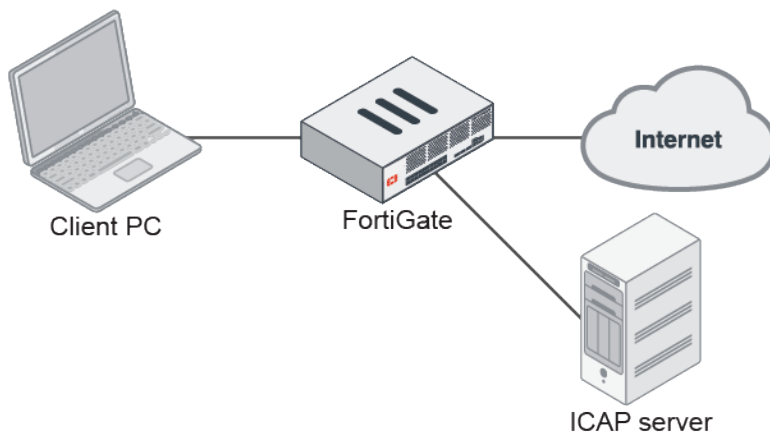

In this example, client request HTTP responses will be forwarded to the ICAP server from all hosts if they have an HTTP status code of 200, 301, or 302, and have `content-type: image/jpeg` in their header.

### To configure an ICAP profile with HTTP response rules:

```

config icap profile
  edit "icap_profile2"
    set request disable
    set response enable
    set streaming-content-bypass disable
    set preview disable
    set response-server "icap_server1"
    set response-failure error
    set response-path ''
    set methods delete get head options post put trace other
    set response-req-hdr disable
    set respmod-default-action bypass
  config respmod-forward-rules
    edit "rule2"
      set host "all"
      set action forward
      set http-resp-status-code 200 301 302
      config header-group
        edit 2
          set header-name "content-type"
          set header "image/jpeg"
        next
      next
    next
  next
end
  
```

```
        end
      next
    end
  next
end
```

### To view the logs if an error occurs:

#### 1. View the traffic log:

```
# execute log filter category 0
# execute log display
1 logs found.
1 logs returned.

1: date=2019-10-25 time=17:43:47 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1572050627037314464 tz="-0700" srcip=10.1.100.145
srcport=47968 srcintf="port1" srcintfrole="undefined" dstip=172.16.200.46 dstport=80
dstintf="port2" dstintfrole="undefined" poluuid="a4d5324e-f6c3-51e9-ce2d-f360994fb547"
sessionid=43549 proto=6 action="close" policyid=1 policytype="policy" service="HTTP"
dstcountry="Reserved" srccountry="Reserved"trandisp="snat" transip=172.16.200.1
transport=47968 duration=1 sentbyte=485 rcvbyte=398 sentpkt=6 rcvpkt=5
appcat="unscanned" wanin=478 wanout=165 lanin=165 lanout=165 utmaction="block"
counticap=1 crscore=5 craction=262144 crlevel="low" utmref=65532-0
```

#### 2. View the UTM ICAP log:

```
# execute log filter category 20
# execute log display
1 logs found.
1 logs returned.

1: date=2019-10-25 time=17:43:46 logid="2000060000" type="utm" subtype="icap"
eventtype="icap" level="warning" vd="vdom1" eventtime=1572050626010097145 tz="-0700"
msg="Request blocked due to ICAP server error" service="HTTP" srcip=10.1.100.145
dstip=172.16.200.46 srcport=47968 dstport=80 srcintf="port1" srcintfrole="undefined"
dstintf="port2" dstintfrole="undefined" policyid=1 sessionid=43549 proto=6
action="blocked" profile="icap_profile1" url="/icap_test/"
```

The logs show that the ICAP services stopped before the access. When the client tried to access HTTP and ICAP took effect, the FortiGate sent the ICAP request to the ICAP server and received an error. The client sees a *502 Bad Gateway* message, and FortiGate writes the two logs. In the GUI, the logged traffic is displayed as *Result: Deny: UTM Blocked*.

## Secure ICAP clients

A secure SSL connection from the FortiGate to the ICAP server can be configured as follows:

```
config icap server
  edit <name>
    set secure {enable | disable}
    set ssl-cert <certificate>
  next
end
```



**To configure a secure ICAP client:****1. Configure the ICAP server:**

```

config icap server
    edit "icap_server1"
        set ip-version 4
        set ip-address 192.168.10.2
        set port 11344
        set max-connections 100
        set secure enable
        set ssl-cert "ACCVRAIZ1"
    next
end

```



Port 11344 is the standard port for secure ICAP. This must be configured manually if the secure connection is enabled.

---

**2. Configure the ICAP profile:**

```

config icap profile
    edit "icap_profile1"
        set request enable
        set response enable
        set streaming-content-bypass enable
        set request-server "icap_server1"
        set response-server "icap_server1"
    next
end

```

**3. Configure the firewall policy:**

```

config firewall policy
    edit 1
        set utm-status enable
        set inspection-mode proxy
        set ssl-ssh-profile "protocols"
        set icap-profile "icap_profile1"
    next
end


```

## ICAP scanning with SCP and FTP

A FortiGate can forward files transferred by SCP and FTP to an ICAP server for further scanning. Previously, only HTTP and HTTPS were supported for ICAP forwarding.

### Example

The FortiGate used in this example is operating in transparent mode. The SSH client, 172.16.200.11, sends a file named `today` to the SSH server at 172.16.200.33 using SCP. Since SCP transfers are encrypted inside an SSH tunnel, for the FortiGate to scan the traffic, deep inspection must be enabled in the SSL SSH profile.

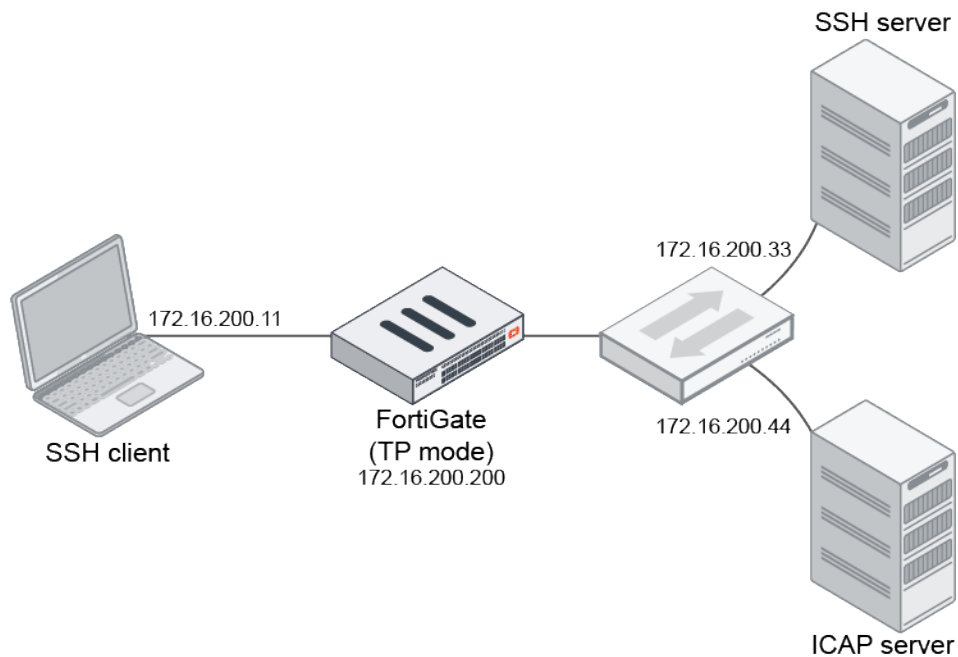

### To configure ICAP scanning with SCP:

#### 1. Configure the ICAP server settings:

```

config icap server
  edit "icap_server1"
    set ip-address 172.16.200.44
  next
end

```

#### 2. Configure the ICAP profile for SSH:

```

config icap profile
  edit "icap_profile1"
    set file-transfer ssh
    set file-transfer-server "icap_server1"
    set file-transfer-path "ssh_test"
  next
end

```

---

If the file transfer is over FTP, configure the profile as follows:



```

config icap profile
  edit "icap_profile1"
    set file-transfer ftp
    set streaming-content-bypass enable
    set file-transfer-server "icap_server1"
    set file-transfer-path "ftp_test"
  next
end

```

---

#### 3. Configure the SSL SSH profile:

```

config firewall ssl-ssh-profile
    edit "protocols"
        config ssh
            set ports 22
            set status deep-inspection
        end
    next
end

```

#### 4. Configure the firewall policy:

```

config firewall policy
    edit 1
        set name "ICAP"
        set srcintf "lan"
        set dstintf "mgmt"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set icap-profile "icap_profile1"
    next
end

```

#### To test the configuration:

1. On a Linux client, copy a file named `today` to the SSH server using SCP:

```
scp today fosqa@172.16.200.33:/home/fosqa/ssh_depot/
```

2. Capture a sniffer trace between the FortiGate and ICAP server, then verify the output from the ICAP protocol session.

- a. The client request and the file to be inspected:

```

ICap_client REQMOD:
172.016.200.200.13185-172.016.200.044.01344: REQMOD icap://172.16.200.44:1344/ssh_
test ICAP/1.0
Host: 172.16.200.44:1344
X-Client-IP: 172.16.200.11
X-Server-IP: 172.16.200.33
X-Authenticated-User: TG9jYWw6Ly9hbm9ueWlvdXM=
X-Authenticated-Groups: TG9jYWw6Ly9sb2Nhbm9ueWlvdXM=
User-Agent: FortiOS v7.2.0
Encapsulated: req-hdr=0, req-body=116

PUT /scp/today HTTP/1.1
Host: 172.16.200.11
Content-Type: application/octet-stream
Transfer-Encoding: chunked

1d
Tue Sep 20 04:01:50 UTC 2022

```

Where:

- X-Client-IP = the client sending the file
- X-Server-IP = the server receiving the file
- Tue Sep 20 04:01:50 UTC 2022 = the content of the file, which is in clear text after the FortiGate performs deep inspection

- b. The ICAP server response that the file is cleared and allowed to pass without modifications:

**ICap-server reply:**

```
172.016.200.044-172.016.200.13185: ICAP/1.0 200 OK
ISTag: "GreasySpoon-1.0.7-b03"
Host: 0.0.0.0:1344
Encapsulated: req-hdr=0, req-body=136
Connection: keep-alive
```

```
PUT /scp/today HTTP/1.1
```

**Host: 172.16.200.11**

Content-Type: application/octet-stream

Transfer-Encoding: chunked

Content-Length: 29

1d

**Tue Sep 20 04:01:50 UTC 2022**

3. On a Linux client, copy the file from the server locally using SCP:

```
scp fosqa@172.16.200.33:/home/fosqa/ssh_depot/today2/
```

4. Similar outputs are observed. The ICAP client request indicates that the file is copied from the SSH server:

```
PUT /scp/today2 HTTP/1.1
```

Host: 172.16.200.33

## Web application firewall

Web application firewall (WAF) profiles can detect and block known web application attacks. You can configure WAF profiles to use signatures and constraints to examine web traffic. You can also enforce an HTTP method policy, which controls the HTTP method that matches the specified pattern.

You can customize the default profile, or you can create your own profile to apply access rules and HTTP protocol constraints to traffic. You can apply WAF profiles to firewall policies when the inspection mode is set to proxy-based.



Web application firewall profiles cannot be used NGFW policy-based mode. See [NGFW policy on page 1049](#) for more information.

---

The following topic provides information about WAF profiles:

- [Protecting a server running web applications on page 1527](#)

## Protecting a server running web applications

You can use a web application firewall profile to protect a server that is running a web application, such as webmail.

Web application firewall profiles are created with a variety of options called signatures and constraints. Once these options are enabled, the action can be set to allow, monitor, or block. The severity can be set to high, medium, or low.


In the following example, the default profile will be targeted to block SQL injection attempts and generic attacks.



The web application firewall feature is only available when the policy inspection mode is proxy-based.

### To protect a server running web applications:

1. Enable the web application firewall:
  - a. Go to *System > Feature Visibility*.
  - b. Under *Security Features*, enable *Web Application Firewall*.
  - c. Click *Apply*.
2. Edit the default web application firewall profile (*Trojans* and *Known Exploits* are blocked by default):
  - a. Go to *Security Profiles > Web Application Firewall* and edit the *default* profile signature.
  - b. Select *SQL Injection (Extended)* and edit it so that it is enabled, the *Action* is set to *Block*, and the *Severity* is set to *High*.
  - c. Click *OK*.

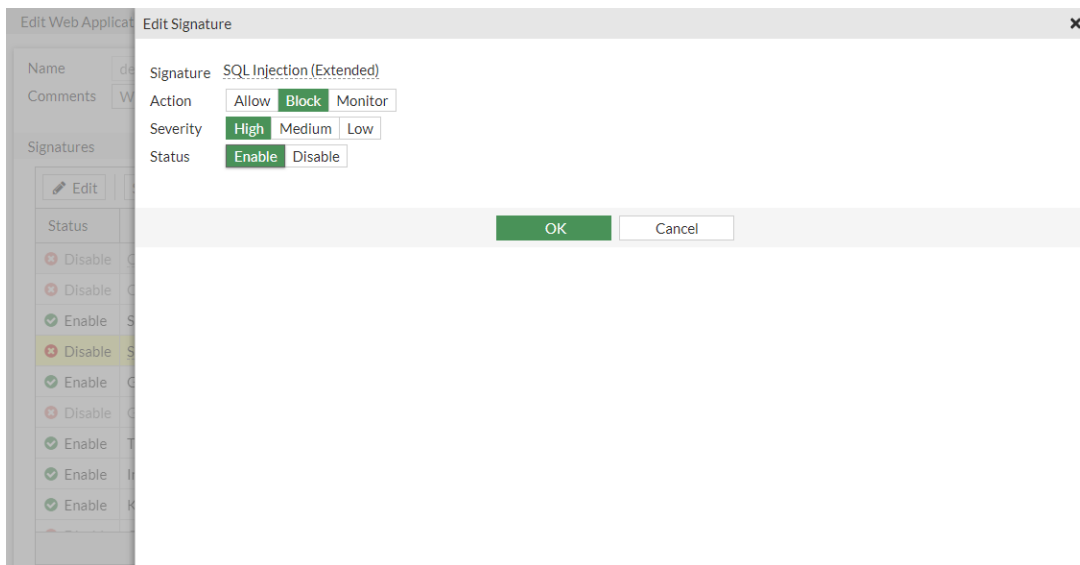

- d. Enable *Generic Attacks (Extended)* and edit it so that it is enabled, the *Action* is set to *Block*, and the *Severity* is set to *High*.

- e. Click OK.

FortiGate

FGDocs

Additional Information

API Preview

References

Edit in CLI

Documentation

Online Help

Video Tutorials

0/1023

Status	Signature	Action	Severity
Disable	Cross Site Scripting	Monitor	Low
Disable	Cross Site Scripting (Extended)	Monitor	Low
Enable	SQL Injection	Block	High
Enable	SQL Injection (Extended)	Block	High
Enable	Generic Attacks	Block	High
Enable	Generic Attacks(Extended)	Block	High
Enable	Trojans	Block	High
Enable	Information Disclosure	Monitor	Medium
Enable	Known Exploits	Block	High

0%

OK Cancel

 
- f. Click OK.

3. Apply the profile to a security policy:

- Go to *Policy & Objects > Firewall Policy* and edit the policy that allows access to the web server.
- For *Firewall / Network Options*, select the appropriate *Protocol Option*.
- For *Security Profiles*, enable *Web Application Firewall* and set it to use the *default* profile.
- Set the *SSL Inspection* to use the *deep-inspection* profile.
- Configure the other settings as needed.
- Click OK.

4. Verify that the web application firewall blocks traffic:

- Use the following URL to simulate an attack on your web server and substitute the IP address of your server:  
`http://<server IP>/index.php?username=1'%20or%20'1'%20=%20'1&password=1'%20or%20'1'%20=%20'1`  
 An error message appears, stating that the web application firewall has blocked the traffic:



## SSL & SSH Inspection

Secure Sockets Layer (SSL) content scanning and inspection allows you to apply antivirus scanning, web filtering, and email filtering to encrypted traffic. You can apply SSL inspection profiles to firewall policies.

FortiOS includes four preloaded SSL/SSH inspection profiles, three of which are read-only and can be cloned:

- certificate-inspection*
- deep-inspection*

- *no-inspection*

The *custom-deep-inspection* profile can be edited, or you can create your own SSL/SSH inspection profiles.

Deep inspection (also known as SSL/SSH inspection) is typically applied to outbound policies where destinations are unknown. Depending on your policy requirements, you can configure the following:

- Which CA certificate will be used to decrypt the SSL encrypted traffic
- Which SSL protocols will be inspected
- Which ports will be associated with which SSL protocols for inspection
- Whether or not to allow invalid SSL certificates
- Whether or not SSH traffic will be inspected
- Which addresses or web category allowlists can bypass SSL inspection

The following topics provide information about SSL & SSH Inspection:

- [Configuring an SSL/SSH inspection profile on page 1529](#)
- [Certificate inspection on page 1532](#)
- [Deep inspection on page 1533](#)
- [Protecting an SSL server on page 1536](#)
- [Handling SSL offloaded traffic from an external decryption device on page 1537](#)
- [SSH traffic file scanning on page 1539](#)
- [Redirect to WAD after handshake completion on page 1540](#)
- [HTTP/2 support in proxy mode SSL inspection on page 1541](#)
- [Define multiple certificates in an SSL profile in replace mode on page 1542](#)
- [Disabling the FortiGuard IP address rating on page 1544](#)

## Configuring an SSL/SSH inspection profile

The *custom-deep-inspection* profile can be edited or new SSL/SSH inspection profiles can be configured to be used in firewall policies.

### To configure an SSL/SSH inspection profile in the GUI:

1. Go to *Security Profiles > SSL/SSH Inspection* and click *Create New*.
2. Configure the following settings:

<i>Name</i>	Enter a unique name for the profile.
<i>Comments</i>	Enter a comment (optional).
<i>SSL Inspection Options</i>	
<i>Enable SSL Inspection of</i>	Enable SSL inspection of: <ul style="list-style-type: none"> <li>• <i>Multiple Clients Connecting to Multiple Servers</i>: Use this option for generic policies where the destination is unknown. This is normally used when inspecting outbound internet traffic. Other <i>SSL Inspection Options</i> become available to configure if this option is selected.</li> <li>• <i>Protecting SSL Server</i>: Use this option when setting up a profile customized for a specific SSL server with a specific certificate. Define the</li> </ul>

	certificate using the <i>Server certificate</i> field. See <a href="#">Protecting an SSL server on page 1536</a> for more information.
<i>Inspection method</i>	<p>Define the inspection method:</p> <ul style="list-style-type: none"> <li>• <i>SSL Certificate Inspection</i>: Only inspects the certificate, by way of the headers up to the SSL/TLS layer, and not the contents of the traffic. See <a href="#">Certificate inspection on page 1532</a>.</li> <li>• <i>Full SSL Inspection</i>: Inspects the SSL/TLS encrypted traffic payload. See <a href="#">Deep inspection on page 1533</a>.</li> </ul>
<i>CA certificate</i>	Use the dropdown menu to select one of the installed certificates for the inspection of the packets. Click <i>Download</i> to save the certificate.
<i>Blocked certificates</i>	Block or allow potentially malicious certificates. Select <i>View Blocked Certificates</i> for a detailed list of blocked certificates, including the listing reason and date.
<i>Untrusted SSL certificates</i>	<p>Configure the action to take when a server certificate is not issued by a trusted CA.</p> <ul style="list-style-type: none"> <li>• <i>Allow</i>: Allow the untrusted server certificate. This is the default value.</li> <li>• <i>Block</i>: Block the session.</li> <li>• <i>Ignore</i>: This option is for <i>Full SSL inspection</i> only. It re-signs the server certificate as trusted. When configured in the GUI for certificate inspection it has no effect and the setting is not saved.</li> </ul> <p>Click <i>View Trusted CAs List</i> to see a list of the factory bundled and user imported CAs that are trusted by the FortiGate.</p>
<i>Server certificate SNI check</i>	<p>Check the SNI in the hello message with the CN or SAN field in the returned server certificate:</p> <ul style="list-style-type: none"> <li>• <i>Enable</i>: If it is mismatched, use the CN in the server certificate for URL filtering.</li> <li>• <i>Strict</i>: If it is mismatched, close the connection.</li> <li>• <i>Disable</i>: Server certificate SNI check is disabled.</li> </ul>
<i>Enforce SSL cipher compliance</i>	Enable/disable SSL cipher compliance. This option is for <i>Full SSL inspection</i> only.
<i>Enforce SSL negotiation compliance</i>	Enable/disable SSL negotiation compliance. This option is for <i>Full SSL inspection</i> only.
<i>RPC over HTTPS</i>	Enable/disable inspection of Remote Procedure Calls (RPC) over HTTPS traffic. This option is for <i>Full SSL inspection</i> only.
<i>Protocol Port Mapping</i>	<p>Inspect all ports with the IPS engine by enabling <i>Inspect all ports</i>.</p> <p>If <i>Inspect all ports</i> is disabled, specify the port through which traffic will be inspected in the field next to the listed protocols. Traffic of that protocol going through any other port will not be inspected.</p>
<i>Exempt from SSL Inspection</i>	These options are for <i>Full SSL inspection</i> only. Use the menus in this section to specify any reputable websites, FortiGuard Web Categories, or addresses that will be exempt from SSL inspection:



- **Reputable Websites:** Enable this option to exempt any websites identified by FortiGuard as reputable.
- **Web Categories:** The categories of *Finance and Banking*, *Health and Wellness*, and *Personal Privacy* have been added by default. These categories are the most likely to have applications that will require a specific certificate.
- **Addresses:** These can be any of the address objects that have an interface of *any*.
- **Log SSL exemptions:** Enable this option to log all SSL exemptions.

See [Exempt web sites from deep inspection on page 1534](#) for more information.

#### SSH Inspection Options

##### SSH deep scan

Enable/disable SSH protocol packet deep scanning capabilities. *SSH port* will become available if *SSH deep scan* is enabled.

##### SSH port

Define what ports will search for SSH protocol packets:

- **Any:** Select this option to search all traffic regardless of service or TCP/IP port for packets that conform to the SSH protocol.
- **Specify:** Select this option and enter the port number to restrict the search for SSH protocol packets to the TCP/IP port number specified. This is not as comprehensive but it is easier on the performance of the firewall.

#### Common Options

##### Invalid SSL certificates

Allow or block the passing of traffic in invalid certificates. Additional common options that provide more granularity with actions for different types of invalid SSL certificates will become available if *Invalid SSL certificates* is set to *Custom*:

- **Expired certificates:** Action to take when the server certificate is expired. The default action is block.
- **Revoked certificates:** Action to take when the server certificate is revoked. The default action is block.
- **Validation timed-out certificates:** Action to take when the server certificate validation times out. For certificate inspection, the default action is allow. For deep inspection, the default action is Keep Untrusted & Allow.
- **Validation failed certificates:** Action to take when the server certificate validation fails. The default action is block.

For deep inspection, the above options have the following actions:

- **Keep Untrusted & Allow:** Allow the server certificate and keep it untrusted.
- **Block:** Block the certificate.
- **Trust & Allow:** Allow the server certificate and re-sign it as trusted.

##### Log SSL anomalies

Enable this feature to record and log traffic sessions containing invalid certificates.

By default, SSL anomalies logging is enabled. Logs are generated in the UTM log type under the SSL subtype when invalid certificates are detected.

### 3. Click OK.

## Certificate inspection

FortiGate supports certificate inspection. The default configuration has a built-in *certificate-inspection* profile which you can use directly. When you use certificate inspection, the FortiGate only inspects the headers up to the SSL/TLS layer.

If you do not want to deep scan for privacy reasons but you want to control web site access, you can use *certificate-inspection*.



When a firewall policy is in flow-based inspection mode, *SSL Certificate Inspection* does not validate the certificate. *Untrusted SSL certificates* and *Server Certificate SNI* checks are not performed. If these features are needed, use proxy-based inspection mode.

## Inspect non-standard HTTPS ports

The built-in *certificate-inspection* profile is read-only and only listens on port 443. If you want to make changes, you must create a new certificate inspection profile.

If you know the non-standard port that the web server uses, such as port 8443, you can add this port to the *HTTPS* field.

### To add a port to the inspection profile in the GUI:

1. Go to *Security Profiles > SSL/SSH Inspection*.
2. Create a new profile, or clone the default profile.
3. If you do not know what port is used in the HTTPS web server, under *Protocol Port Mapping* enable *Inspect All Ports*. If you know the port, such as port 8443, then set *HTTPS* to *443,8443*.

4. Configure the remaining setting as needed.
5. Click **OK**.

## Common options

Invalid SSL certificates can be blocked, allowed, or a different actions can be configured for the different invalid certificates types. See [Configuring an SSL/SSH inspection profile on page 1529](#).



When a firewall policy is in flow-based inspection mode, *SSL Certificate Inspection* does not validate the certificate. *Expired certificates* and *Revoked certificates* checks are not performed, and the *Validation timed-out certificates* and *Validation failed certificates* actions do not apply. If these features are needed, use proxy-based inspection mode.

## Deep inspection

You can configure address and web category allowlists to bypass SSL deep inspection.


### Reasons for using deep inspection

While Hypertext Transfer Protocol Secure (HTTPS) offers protection on the Internet by applying Secure Sockets Layer (SSL) encryption to web traffic, encrypted traffic can be used to get around your network's normal defenses.

For example, you might download a file containing a virus during an e-commerce session, or you might receive a phishing email containing a seemingly harmless download that, when launched, creates an encrypted session to a command and control (C&C) server and downloads malware onto your computer. Because the sessions in these attacks are encrypted, they might get past your network's security measures.

When you use deep inspection, the FortiGate impersonates the recipient of the originating SSL session, then decrypts and inspects the content to find threats and block them. It then re-encrypts the content and sends it to the real recipient.

Deep inspection not only protects you from attacks that use HTTPS, it also protects you from other commonly-used SSL-encrypted protocols such as SMTPS, POP3S, IMAPS, and FTPS.

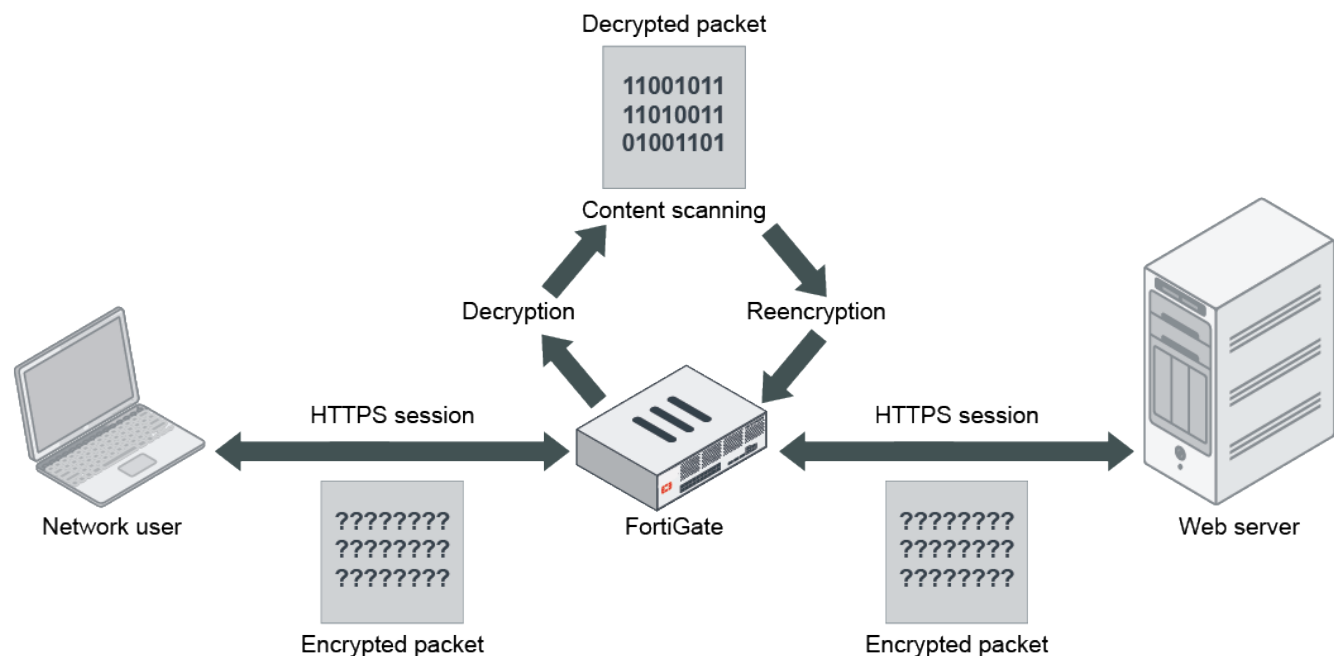

## Protocol port mapping

To optimize the FortiGate's resources, the mapping and inspection of the following protocols can be enabled or disabled:

- HTTPS
- SMTPS
- POP3S
- IMAPS
- FTPS
- DNS over TLS

Each protocol has a default TCP port. The ports can be modified to inspect any port with flowing traffic. The packet headers indicate which protocol generated the packet.



Protocol port mapping only works with proxy-based inspection. Flow-based inspection inspects all ports regardless of the protocol port mapping configuration.

---

## Browser messages when using deep inspection

When the FortiGate re-encrypts the content, it uses a stored certificate, such as *Fortinet\_CA\_SSL*, *Fortinet\_CA\_Untrusted*, or your own CA certificate that you uploaded.

Because there is no *Fortinet\_CA\_SSL* in the browser trusted CA list, the browser displays an untrusted certificate warning when it receives a FortiGate re-signed server certificate. To stop the warning messages, trust the FortiGate-trusted CA *Fortinet\_CA\_SSL* and import it into your browser.

If you still get messages about untrusted certificates after importing *Fortinet\_CA\_SSL* into your browser, it is due to *Fortinet\_CA\_Untrusted*. Never import the *Fortinet\_CA\_Untrusted* certificate into your browser.

### To import *Fortinet\_CA\_SSL* into your browser:

1. On the FortiGate, go to *Security Profiles > SSL/SSH Inspection* and edit the *deep-inspection* profile. The default *CA Certificate* is *Fortinet\_CA\_SSL*.
2. Click *Download* and save the certificate to the management computer.
3. On the client PC, use the *Certificate Import Wizard* to install the certificate into the *Trusted Root Certificate Authorities* store.  
If a security warning appears, select *Yes* to install the certificate.

## Exempt web sites from deep inspection

If you do not want to apply deep inspection for privacy or other reasons, you can exempt the session by address, category, or allowlist.

If you know the address of the server you want to exempt, you can exempt that address. You can exempt specific address type including IP address, IP address range, IP subnet, FQDN, wildcard-FQDN, and geography.

If you want to exempt all bank web sites, an easy way is to exempt the *Finance and Banking* category, which includes all finance and bank web sites identified in FortiGuard. For information about creating and using custom local and remote categories, see [Web rating override on page 1556](#) and [Threat feeds on page 2921](#).

If you want to exempt commonly trusted web sites, you can bypass the SSL allowlist in the SSL/SSH profile by enabling *Reputable websites*. The allowlist includes common web sites trusted by FortiGuard.

## SSL version support

There are two ways to limit which SSL versions deep inspection is applied to.

- In the global attributes:

```
config system global
    set strong-crypto enable
end
```

- In the protocol configuration of a deep inspection profile:

```
config firewall ssl-ssh-profile
    edit <name>
        config {ssl | https | ftps}
            set min-allowed-ssl-version {ssl-3.0 | tls-1.0 | tls-1.1 | tls-1.2 | tls-1.3}
        end
    next
end
```

Enabling `strong-crypto` in the global attributes sets the `min-allowed-ssl-version` to `tls-1.1` by default.

When a session is attempted using an SSL version below the minimum allowed version, the session can be blocked (default) or allowed.

### To configure the action based on the SSL version used being unsupported:

```
config firewall ssl-ssh-profile
    edit <name>
        config {ssl | https | ftps | imaps | pop3s | smtps | dot}
            set unsupported-ssl-version {allow | block}
        end
    next
end
```



Flow-based inspection does not support SSL version control.

## Protecting an SSL server

You typically use the FortiGate *Protecting SSL Server* profile as an inbound policy for clients on the internet that access the server through the internal side of the FortiGate.

*Protecting SSL Server* uses a server certificate to protect a single server.

You can use *Protecting SSL Server* if you do not want a client on the internet to directly access your internal server, and you want the FortiGate to simulate your real server.

**To upload a server certificate into FortiGate and use that certificate in the SSL/SSH inspection profile:**

1. Go to *System > Certificates*.
2. Select *Import > Local Certificate* and upload the certificate.
3. Go to *Security Profiles > SSL/SSH Inspection* and edit or create a new profile.
4. For *Enable SSL Inspection of*, select *Protecting SSL Server*.
5. For *Server Certificate*, click the + and select the local certificate you imported.

The screenshot shows the 'New SSL/SSH Inspection Profile' configuration window. The 'Name' field is set to 'Protecting server'. The 'Comments' field is empty. Under 'SSL Inspection Options', 'Enable SSL Inspection of' is set to 'Multiple Clients Connecting to Multiple Servers', and 'Protecting SSL Server' is selected. The 'Server certificate' dropdown shows 'test' selected. A 'Select Entries' dialog is open, showing a list of certificates with 'test' highlighted at the bottom. The dialog includes a search bar, a '+ Create' button, and a 'Close' button. The main window has 'OK' and 'Cancel' buttons at the bottom.

6. Click **OK**.

When you apply the *Protecting SSL Server* profile in a policy, the FortiGate will send the server certificate to the client as your server does.

## Handling SSL offloaded traffic from an external decryption device

In scenarios where the FortiGate is sandwiched between load-balancers and SSL processing is offloaded on the external load-balancers, the FortiGate can perform scanning on the unencrypted traffic by specifying the `ssl-offloaded` option in firewall `profile-protocol-options`. This option is supported in proxy and flow mode (previous versions only supported proxy mode).


If the FortiGate receives an AUTH TLS, PBSZ, or PROT command before receiving plain text traffic from a decrypted device, by default, it will expect encrypted traffic, determine that the traffic belongs to an abnormal protocol, and bypass the traffic.

When the `ssl-offloaded` command is enabled, the AUTH TLS command is ignored, and the traffic is treated as plain text rather than encrypted data. SSL decryption and encryption are performed by the external device.

### Sample topology

In this example, the FortiGate is between two FortiADCs and in SSL offload sandwich mode. The FortiGate receives plain text from ADC1 and forwards plain text to ADC2. There is no encrypted traffic passing through the FortiGate.

The client sends HTTPS traffic to ADC1, which then decrypts the traffic and sends HTTP to the FortiGate. The FortiGate forwards HTTP to ADC2, and the ADC2 re-encrypts the traffic to HTTPS.

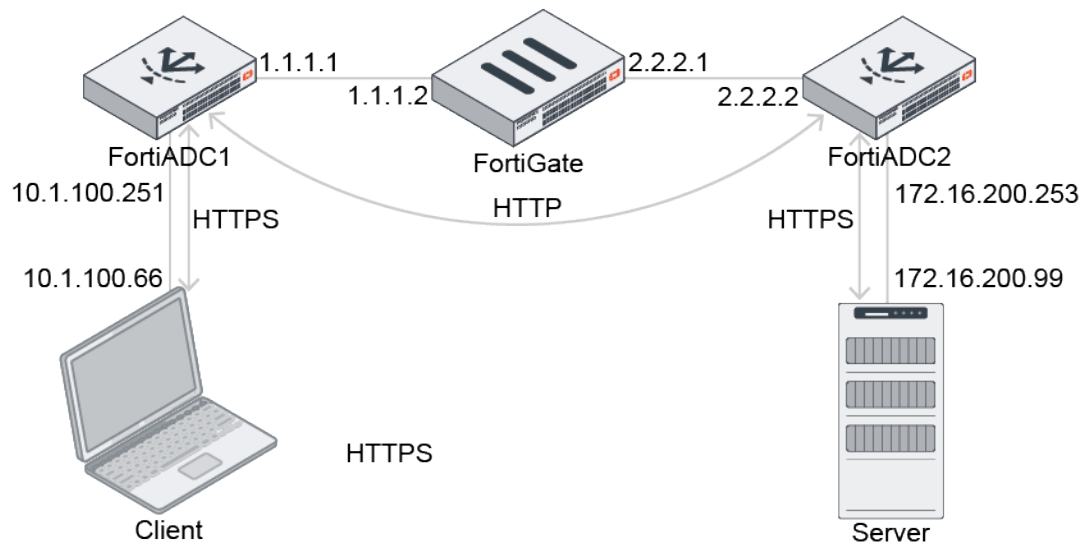

### To configure SSL offloading:

```
config firewall profile-protocol-options
  edit "default-clone"
    config http
      set ports 80
      unset options
      unset post-lang
      set ssl-offloaded yes
    end
    config ftp
      set ports 21
      set options splice
```

```

        set ssl-offloaded yes
    end
    config imap
        set ports 143
        set options fragmail
        set ssl-offloaded yes
    end
    config pop3
        set ports 110
        set options fragmail
        set ssl-offloaded yes
    end
    config smtp
        set ports 25
        set options fragmail splice
        set ssl-offloaded yes
    end
next
end

```

## Verifying the packet captures

The ADC1 incoming port capture shows that ADC1 receives HTTPS traffic:

No.	Time	Source	Destination	Protocol	Length	Info
20	8.538335	10.1.100.66	172.16.200.99	TCP	74	49818 → 443 [SYN] Seq=0 Win=64240 Len=0 MSS=1460 SACK_PERM=1 TSval=2672317962 TSecr=0 WS=128
21	8.538408	172.16.200.99	10.1.100.66	TCP	74	443 → 49818 [SYN, ACK] Seq=0 Ack=1 Win=28960 Len=0 MSS=1460 SACK_PERM=1 TSval=880725085 TSecr=2672317962 WS=512
22	8.538530	10.1.100.66	172.16.200.99	TCP	66	49818 → 443 [ACK] Seq=1 Ack=1 Win=64256 Len=0 TSval=2672317962 TSecr=880725085
23	8.544564	10.1.100.66	172.16.200.99	TLSv1.2	583	Client Hello
24	8.546120	172.16.200.99	10.1.100.66	TLSv1.2	1740	Server Hello, Certificate, Server Key Exchange, Server Hello Done
25	8.546279	10.1.100.66	172.16.200.99	TCP	66	49818 → 443 [ACK] Seq=518 Ack=1675 Win=63488 Len=0 TSval=2672317970 TSecr=880725093
26	8.547757	10.1.100.66	172.16.200.99	TLSv1.2	159	Client Key Exchange, Change Cipher Spec, Encrypted Handshake Message
27	8.547968	172.16.200.99	10.1.100.66	TLSv1.2	117	Change Cipher Spec, Encrypted Handshake Message
28	8.549545	10.1.100.66	172.16.200.99	TLSv1.2	172	Application Data
29	8.557688	172.16.200.99	10.1.100.66	TLSv1.2	418	Application Data
30	8.559656	10.1.100.66	172.16.200.99	TLSv1.2	97	Encrypted Alert
31	8.559730	172.16.200.99	10.1.100.66	TLSv1.2	97	Encrypted Alert

The ADC1 outgoing port capture shows that ADC1 decrypts traffic and forwards HTTP traffic to the FortiGate:

No.	Time	Source	Destination	Protocol	Length	Info
9	9.499689	10.1.100.66	172.16.200.99	TCP	74	61516 → 80 [SYN] Seq=0 Win=29200 Len=0 MSS=1460 SACK_PERM=1 TSval=361768736 TSecr=0 WS=512
10	9.500005	172.16.200.99	10.1.100.66	TCP	74	80 → 61516 [SYN, ACK] Seq=0 Ack=1 Win=28960 Len=0 MSS=1460 SACK_PERM=1 TSval=2517238757 TSecr=361768736 WS=512
11	9.500048	10.1.100.66	172.16.200.99	HTTP	143	GET / HTTP/1.1
12	9.507596	172.16.200.99	10.1.100.66	HTTP	389	HTTP/1.1 200 OK (text/html)
> Frame 9: 74 bytes on wire (592 bits), 74 bytes captured (592 bits) on interface 0 > Ethernet II, Src: Vmware_94:15:60 (00:0c:29:94:15:60), Dst: Vmware_9f:87:a3 (00:0c:29:9f:87:a3) > Internet Protocol Version 4, Src: 10.1.100.66, Dst: 172.16.200.99 > Transmission Control Protocol, Src Port: 61516, Dst Port: 80, Seq: 0, Len: 0						

The FortiGate's incoming and outgoing port captures show that HTTP traffic passes through the FortiGate:

No.	Time	Source	Destination	Protocol	Length	Info
5	4.524844	10.1.100.66	172.16.200.99	TCP	74	61516 → 80 [SYN] Seq=0 Win=29200 Len=0 MSS=1460 SACK_PERM=1 TSval=361768736 TSecr=0 WS=512
6	4.525094	172.16.200.99	10.1.100.66	TCP	74	80 → 61516 [SYN, ACK] Seq=0 Ack=1 Win=28960 Len=0 MSS=1460 SACK_PERM=1 TSval=2517238757 TSecr=361768736 WS=512
7	4.525194	10.1.100.66	172.16.200.99	HTTP	143	GET / HTTP/1.1
8	4.532691	172.16.200.99	10.1.100.66	HTTP	389	HTTP/1.1 200 OK (text/html)
> Frame 5: 74 bytes on wire (592 bits), 74 bytes captured (592 bits) on interface 0 > Ethernet II, Src: Vmware_94:15:60 (00:0c:29:94:15:60), Dst: Vmware_9f:87:a3 (00:0c:29:9f:87:a3) > Internet Protocol Version 4, Src: 10.1.100.66, Dst: 172.16.200.99 > Transmission Control Protocol, Src Port: 61516, Dst Port: 80, Seq: 0, Len: 0						
No.	Time	Source	Destination	Protocol	Length	Info
13	3.688108	2.2.2.1	172.16.200.99	TCP	74	61516 → 80 [SYN] Seq=0 Win=29200 Len=0 MSS=1460 SACK_PERM=1 TSval=361768736 TSecr=0 WS=512
14	3.688209	172.16.200.99	2.2.2.1	TCP	74	80 → 61516 [SYN, ACK] Seq=0 Ack=1 Win=28960 Len=0 MSS=1460 SACK_PERM=1 TSval=2517238757 TSecr=361768736 WS=512
15	3.688414	2.2.2.1	172.16.200.99	HTTP	143	GET / HTTP/1.1
16	3.695791	172.16.200.99	2.2.2.1	HTTP	389	HTTP/1.1 200 OK (text/html)
> Frame 13: 74 bytes on wire (592 bits), 74 bytes captured (592 bits) on interface 0 > Ethernet II, Src: Vmware_9f:87:ad (00:0c:29:9f:87:ad), Dst: Vmware_52:b2:91 (00:0c:29:52:b2:91) > Internet Protocol Version 4, Src: 2.2.2.1, Dst: 172.16.200.99 > Transmission Control Protocol, Src Port: 61516, Dst Port: 80, Seq: 0, Len: 0						

The ADC2 incoming port capture shows that the ADC2 receives HTTP traffic:



No.	Time	Source	Destination	Protocol	Length	Info
38	11.585717	2.2.2.1	172.16.200.99	TCP	74	61516 → 80 [SYN] Seq=0 Win=29200 Len=0 MSS=1460 SACK_PERM=1 TSval=361768736 TSecr=0 WS=512
39	11.585757	172.16.200.99	2.2.2.1	TCP	74	80 → 61516 [SYN, ACK] Seq=0 Ack=1 Win=28960 Len=0 MSS=1460 SACK_PERM=1 TSval=2517238757 TSecr=361768736 WS=512
40	11.586012	2.2.2.1	172.16.200.99	HTTP	143	GET / HTTP/1.1
41	11.593343	172.16.200.99	2.2.2.1	HTTP	389	HTTP/1.1 200 OK (text/html)

> Frame 38: 74 bytes on wire (592 bits), 74 bytes captured (592 bits)  
 > Ethernet II, Src: VMware\_9f:87:ad (00:0c:29:9f:87:ad), Dst: VMware\_52:b2:91 (00:0c:29:52:b2:91)  
 > Internet Protocol Version 4, Src: 2.2.2.1, Dst: 172.16.200.99  
 > Transmission Control Protocol, Src Port: 61516, Dst Port: 80, Seq: 0, Len: 0

The ADC2 outgoing port capture shows that ADC2 forwards HTTPS traffic to the server:

No.	Time	Source	Destination	Protocol	Length	Info
56	11.896674	2.2.2.1	172.16.200.99	TCP	74	57602 → 443 [SYN] Seq=0 Win=29200 Len=0 MSS=1460 SACK_PERM=1 TSval=1423415082 TSecr=0 WS=512
57	11.896813	172.16.200.99	2.2.2.1	TCP	74	443 → 57602 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=1140593656 TSecr=1423415082 WS=128
58	11.896841	2.2.2.1	172.16.200.99	TLSv1.2	258	Client Hello
59	11.896966	172.16.200.99	2.2.2.1	TCP	66	443 → 57602 [ACK] Seq=1 Ack=193 Win=65024 Len=0 TSval=1140593656 TSecr=1423415082
60	11.902562	172.16.200.99	2.2.2.1	TLSv1.2	1914	Server Hello
61	11.902572	172.16.200.99	2.2.2.1	TLSv1.2	669	Certificate, Server Key Exchange, Server Hello Done
62	11.902580	2.2.2.1	172.16.200.99	TCP	66	57602 → 443 [ACK] Seq=193 Ack=2052 Win=35328 Len=0 TSval=1423415088 TSecr=1140593661
63	11.903194	2.2.2.1	172.16.200.99	TLSv1.2	159	Client Key Exchange, Change Cipher Spec, Encrypted Handshake Message
64	11.903415	172.16.200.99	2.2.2.1	TLSv1.2	117	Change Cipher Spec, Encrypted Handshake Message
65	11.903491	2.2.2.1	172.16.200.99	TLSv1.2	172	Application Data
66	11.903752	172.16.200.99	2.2.2.1	TLSv1.2	418	Application Data

> Frame 58: 258 bytes on wire (2064 bits), 258 bytes captured (2064 bits)  
 > Ethernet II, Src: VMware\_52:b2:9b (00:0c:29:52:b2:9b), Dst: VMware\_e2:22:3b (00:0c:29:e2:22:3b)  
 > Internet Protocol Version 4, Src: 2.2.2.1, Dst: 172.16.200.99  
 > Transmission Control Protocol, Src Port: 57602, Dst Port: 443, Seq: 1, Ack: 1, Len: 192  
 > Transport Layer Security

## SSH traffic file scanning

FortiGates can buffer, scan, log, or block files sent over SSH traffic (SCP and SFTP) depending on the file size, type, or contents (such as viruses or sensitive content).



This feature is supported in proxy-based inspection mode. It is currently not supported in flow-based inspection mode.

You can configure the following SSH traffic settings in the CLI:

- Protocol options
- DLP profile
- Antivirus (profile and quarantine options)

### To configure SSH protocol options:

```
config firewall profile-protocol-options
  edit <name>
    config ssh
      set options {oversize clientcomfort servercomfort}
      set comfort-interval <1 - 900>
      set comfort-amount <1 - 65535>
      set oversize-limit <1 - 798>
      set uncompressed-oversize-limit <0 - 798>
      set uncompressed-nest-limit <2 - 100>
      set scan-bzip2 {enable | disable}
    end
  next
end
```

### To configure SCP block and log options:

```
config ssh-filter profile
  edit <name>
    set block scp
```

```
        set log scp
    next
end
```

**To configure the DLP profile:**

```
config dlp profile
    edit <name>
        set full-archive-proto ssh
        set summary-proto ssh
        config filter
            edit 1
                set proto ssh
            next
        end
    next
end
```

**To configure the antivirus profile options:**

```
config antivirus profile
    edit <name>
        config ssh
            set av-scan {disable | block | monitor}
            set outbreak-prevention {disable | block | monitor}
            set external-blocklist {disable | block | monitor}
            set fortindr {disable | block | monitor}
            set quarantine {enable | disable}
            set archive-block {encrypted corrupted partiallycorrupted multipart nested
mailbomb timeout unhandled}
            set archive-log {encrypted corrupted partiallycorrupted multipart nested
mailbomb timeout unhandled}
            set emulator {enable | disable}
        end
    next
end
```

**To configure the antivirus quarantine options:**

```
config antivirus quarantine
    set drop-infected ssh
    set store-infected ssh
    set drop-blocked ssh
    set store-blocked ssh
    set drop-machine-learning ssh
    set store-machine-learning ssh
end
```

## Redirect to WAD after handshake completion

In a proxy-based policy, the TCP connection is proxied by the FortiGate. A TCP three-way handshake can be established with the client even though the server did not complete the handshake.

This option uses IPS to handle the initial TCP three-way handshake. It rebuilds the sockets and redirects the session back to proxy only when the handshake with the server is established.

**To enable proxy after a TCP handshake in an SSL/SSH profile:**

```
config firewall ssl-ssh-profile
  edit "test"
    config https
      set ports 443
      set status certificate-inspection
      set proxy-after-tcp-handshake enable
    end
  next
end
```

**To enable proxy after a TCP handshake in protocol options:**

```
config firewall profile-protocol-options
  edit "test"
    config http
      set ports 80
      set proxy-after-tcp-handshake enable
      unset options
      unset post-lang
    end
  next
end
```

## HTTP/2 support in proxy mode SSL inspection

Security profiles in proxy mode can perform SSL inspection on HTTP/2 traffic that is secured by TLS 1.2 or 1.3 using the Application-Layer Protocol Negotiation (ALPN) extension.

**To set the ALPN support:**

```
config firewall ssl-ssh-profile
  edit <profile>
    set supported-alpn {all | http1-1 | http2 | none}
  next
end
```

all	The FortiGate forwards ALPN extensions that use either HTTP/2 or HTTP/1.1. This is the default value.
http1-1	The FortiGate only forwards ALPN extensions that use HTTP/1.1. If the ALPN extension uses HTTP/2, then the FortiGate strips the ALPN header from the Client Hello.
http2	The FortiGate only forwards ALPN extensions that use HTTP/2. If the ALPN extension uses HTTP/1.1, then the FortiGate strips the ALPN header from the Client Hello.
none	The FortiGate always strips the ALPN header from the Client Hello when forwarding.

For example, if `supported-alpn` is set to `http2`, but the extension uses HTTP/1.1, the ALPN header is stripped from the Client Hello:

- Incoming packet capture:

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	10.1.100.66	172.16.200.99	TCP	74	36872 → 443 [SYN] Seq=0 Win=64240 Len=0 MSS=1460 SACK_PERM=1 TSval=4183749215 TSecr=0 WS=128
2	4.99273346.8	172.16.200.99	10.1.100.66	TCP	74	443 → 36872 [SYN, ACK] Seq=0 Ack=1 Win=14480 Len=0 MSS=1460 SACK_PERM=1 TSval=119780 TSecr=4183749215 WS=128
3	4.99273346.8	10.1.100.66	172.16.200.99	TCP	66	36872 → 443 [ACK] Seq=1 Ack=1 Win=64256 Len=0 TSval=4183749215 TSecr=119780
9	4.99273346.8	10.1.100.66	172.16.200.99	TLSv1.3	583	Client Hello
10	4.99273346.8	172.16.200.99	10.1.100.66	TCP	66	443 → 36872 [ACK] Seq=1 Ack=518 Win=15616 Len=0 TSval=119781 TSecr=4183749221
22	4.99273346.7	172.16.200.99	10.1.100.66	TLSv1.3	1514	Server Hello, Change Cipher Spec, Application Data
23	4.99273346.7	172.16.200.99	10.1.100.66	TLSv1.3	1514	Application Data [TCP segment of a reassembled PDU]
24	4.99273346.7	172.16.200.99	10.1.100.66	TLSv1.3	207	Application Data, Application Data
25	4.99273346.7	172.16.200.99	10.1.100.66	TCP	66	36872 → 443 [ACK] Seq=518 Ack=3038 Win=63232 Len=0 TSval=4183749254 TSecr=119784
26	4.99273346.7	10.1.100.66	172.16.200.99	TLSv1.3	146	Change Cipher Spec, Application Data
27	4.99273346.7	172.16.200.99	10.1.100.66	TLSv1.3	1184	Application Data, Application Data

Random: b2c450d55faa118cf9e33059595676d223ed1a97b73b30c8...

Session ID Length: 32

Session ID: a40da749db80e8b2422446c850387c83716083ac8a8dda...

Cipher Suites Length: 62

Cipher Suites (31 suites)

Compression Methods Length: 1

Compression Methods (1 method)

Extensions Length: 373

Extension: ec\_point\_formats (len=4)

Extension: supported\_groups (len=12)

Extension: next\_protocol\_negotiation (len=0)

Extension: application\_layer\_protocol\_negotiation (len=11)

Type: application\_layer\_protocol\_negotiation (16)

Length: 11

ALPN Extension Length: 9

ALPN Protocol

ALPN string length: 8

ALPN Next Protocol: http/1.1

Extension: encrypt\_then\_mac (len=0)

Extension: extended\_master\_secret (len=0)

Extension: post\_handshake\_auth (len=0)

Extension: signature\_algorithms (len=48)

Extension: supported\_versions (len=9)

Extension: psk\_key\_exchange\_modes (len=2)

Extension: key\_share (len=38)

Extension: padding (len=201)

- Outgoing packet capture:

No.	Time	Source	Destination	Protocol	Length	Info
6	4.99273346.8	172.16.200.7	172.16.200.99	TCP	74	36872 → 443 [SYN] Seq=0 Win=14600 Len=0 MSS=1460 SACK_PERM=1 TSval=119781 TSecr=0 WS=512
7	4.99273346.8	172.16.200.99	172.16.200.7	TCP	74	443 → 36872 [SYN, ACK] Seq=0 Ack=1 Win=65160 Len=0 MSS=1460 SACK_PERM=1 TSval=2720210585 TSecr=119781 WS=128
8	4.99273346.8	172.16.200.7	172.16.200.99	TCP	66	36872 → 443 [ACK] Seq=1 Ack=1 Win=14848 Len=0 TSval=119781 TSecr=2720210585
11	4.99273346.8	172.16.200.7	172.16.200.99	TLSv1.3	343	Client Hello
12	4.99273346.8	172.16.200.99	172.16.200.7	TCP	66	443 → 36872 [ACK] Seq=1 Ack=278 Win=64896 Len=0 TSval=2720210589 TSecr=119781
13	4.99273346.8	172.16.200.99	172.16.200.7	TLSv1.3	1514	Server Hello, Change Cipher Spec, Application Data
14	4.99273346.8	172.16.200.7	172.16.200.99	TCP	66	36872 → 443 [ACK] Seq=278 Ack=1449 Win=17920 Len=0 TSval=119782 TSecr=2720210599
15	4.99273346.8	172.16.200.99	172.16.200.7	TLSv1.3	798	Application Data, Application Data, Application Data
16	4.99273346.8	172.16.200.99	172.16.200.7	TCP	66	36872 → 443 [ACK] Seq=278 Ack=2181 Win=20480 Len=0 TSval=119782 TSecr=2720210599
17	4.99273346.8	172.16.200.7	172.16.200.99	TLSv1.3	140	Application Data
18	4.99273346.8	172.16.200.99	172.16.200.7	TLSv1.3	337	Application Data

Ethernet II, Src: Fortinet\_45:cd:7c (70:4c:a5:45:cd:7c), Dst: 00:00:00:00:00:00 (00:00:00:00:00:00)

Internet Protocol Version 4, Src: 172.16.200.7, Dst: 172.16.200.99

Transmission Control Protocol, Src Port: 36872, Dst Port: 443, Seq: 1, Ack: 1, Len: 277

Transport Layer Security

TLSv1.3 Record Layer: Handshake Protocol: Client Hello

Content Type: Handshake (22)

Version: TLS 1.0 (0x0301)

Length: 272

Handshake Protocol: Client Hello

Handshake Type: Client Hello (1)

Length: 268

Version: TLS 1.2 (0x0303)

Random: fbf6d7fcd3143ec402d2e8f7909b4450d53b3ef615b6194...

Session ID Length: 32

Session ID: f351fd57e62a89ef351fd57e62a89ef351fd57e62a89e9...

Cipher Suites Length: 62

Cipher Suites (31 suites)

Compression Methods Length: 1

Compression Methods (1 method)

Extensions Length: 133

Extension: supported\_versions (len=9)

Extension: ec\_point\_formats (len=2)

Extension: supported\_groups (len=12)

Extension: signature\_algorithms (len=48)

Extension: extended\_master\_secret (len=0)


Extension: key\_share (len=38)

## Define multiple certificates in an SSL profile in replace mode

Multiple certificates can be defined in an SSL inspection profile in replace mode (*Protecting SSL Server*). This allows multiple sites to be deployed on the same protected server IP address, and inspection based on matching the SNI in the certificate.

When the FortiGate receives the client and server hello messages, it will compare the server name identification (SNI) and the common name (CN) with the certificate list in the SSL profile, and use the matched certificate as a replacement. If there is no matched server certificate in the list, then the first server certificate in the list is used as a replacement.

## Example

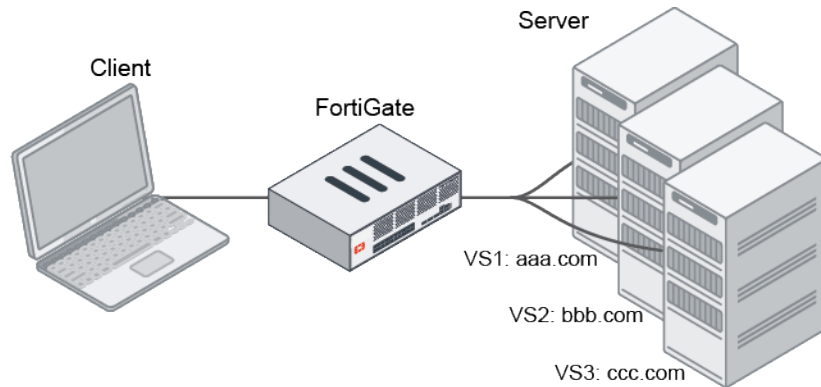

### To configure an SSL profile in replace mode with multiple certificates:


```
config firewall ssl-ssh-profile
  edit "multi-cert"
    set server-cert-mode replace
    set server-cert "bbb" "aaa"
  next
end
```

### To configure a policy that uses the SSL profile:


```
config firewall policy
  edit 1
    set name "multi-cert"
    set srcintf "port6"
    set dstintf "port11"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "multi-cert"
    set av-profile "default"
    set webfilter-profile "default"
    set logtraffic all
    set nat enable
  next
end
```

## Results

If the SNI matches the CN in the certificate list in the SSL profile, then the FortiGate uses the matched server certificate. In this example, when the client accesses *www.aaa.com*, the FortiGate will use the *aaa* certificate as a replacement.

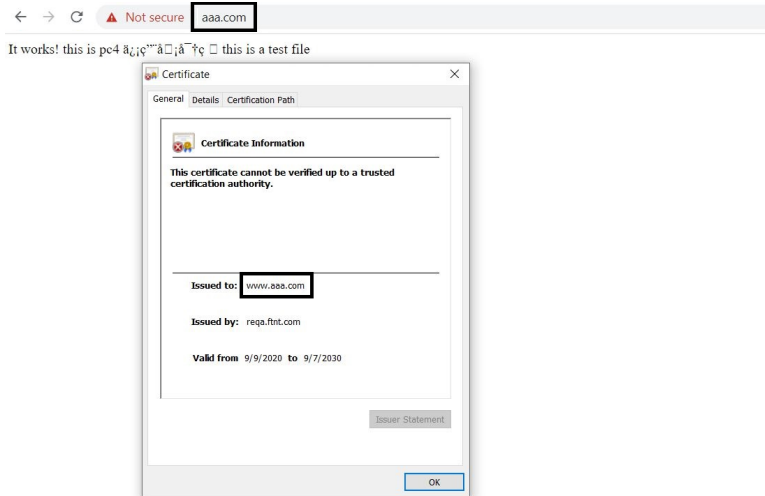

If the SNI does not match the CN in the certificate list in the SSL profile, then the FortiGate uses the first server certificate in the list. In this example, when the client accesses *www.ccc.com*, because there is no certificate for *www.ccc.com*, the FortiGate will use the *bbb* certificate as a replacement.

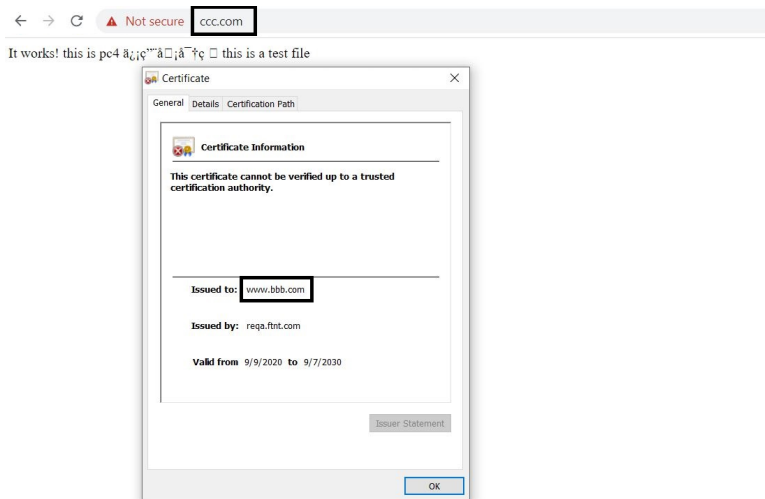

## Disabling the FortiGuard IP address rating

The FortiGuard IP address rating for SSL exemptions and proxy addresses can be disabled using the `ssl-exemption-ip-rating` and `address-ip-rating` options.

### To disable using the FortiGuard IP address rating for SSL exemptions:

```
config firewall ssl-ssh-profile
  edit <name>
    set ssl-exemption-ip-rating {enable | disable}
  next
end
```

**To disable using the FortiGuard IP address rating for proxy addresses:**

```
config firewall profile-protocol-options
  edit <name>
    config http
      set address-ip-rating {enable | disable}
    end
  next
end
```

The `ssl-exemption-ip-rating` and `address-ip-rating` options are enabled by default, so when both a website domain and its IP address return different categories after being rated by FortiGuard, the IP address category takes precedence when evaluating SSL exemptions associated with the SSL inspection profile and proxy addresses associated with the proxy protocol options profile. SSL exemptions and the `ssl-exemption-ip-rating` option work in both inspection modes (proxy and flow).

When the categories associated with the website domain and IP address are different, disabling the FortiGuard IP rating ensures that the FortiGuard domain category takes precedence when evaluating the preceding objects. For most websites, the domain category is valid when its IP address is unrated by FortiGuard. Since being unrated is considered as not having a category, the FortiGate uses the domain category as the website category.

A website might have an IP category that differs from its domain category. If they are different, the FortiGate uses the rating weight of the IP address or domain name to determine the rating result and decision. The rating weight is hard-coded in the FortiGate and depending on the relative category weights, the FortiGate may use the IP category instead of the website category. If the `ssl-exemption-ip-rating` option is disabled in the SSL inspection profile, then the FortiGate uses the domain category as the website category, which ensures SSL exemption operation as intended.

The `address-ip-rating` option in a proxy protocol options profile functions the same way as the `ssl-exemption-ip-rating` option. If the `address-ip-rating` option is disabled in a profile that is used in an explicit proxy policy that also uses a web filter profile, for HTTP or HTTPS traffic to a website that has different IP and domain categories and that matches the policy, the FortiGate will use the domain category when it evaluates categories for the web filter.

## Custom signatures

You can create the following custom signatures and apply them to firewall policies:

- Application group
- Application signature
- IPS signature

The following topic provides information about custom signatures:

- [Configuring custom signatures on page 1546](#)
- [Blocking applications with custom signatures on page 1547](#)
- [Filters for application control groups on page 1549](#)
- [Application groups in traffic shaping policies on page 1552](#)

## Configuring custom signatures

IPS signatures are the basis of signature-based intrusion prevention. Every attack can be reduced to a particular string of commands or a sequence of commands and variables. See [Intrusion prevention on page 1410](#) for more information.

An IPS signature identifies characteristics of a packet that are unique to an attack, such as the protocol type, an option/value pair within the payload, other special aspects of the payload, or specific application options. Custom IPS signatures can be created to block, monitor, or quarantine specific traffic that is not covered by the IPS definitions list. To view the IPS definitions list:

- Go to *Security Profiles > IPS Signatures*.
- Go to *Security Profiles > Intrusion Prevention*, edit an existing IPS sensor, and click *View IPS Signatures* in the right-hand pane.
- Go to *System > FortiGuard*, in the *License Information* table expand *Intrusion Prevention*, and in the *IPS Definitions* row click *Actions > View List*.

An application signature identifies characteristics of a packet that is unique to an application. Custom application signatures can be used in application control profiles to block traffic from specific applications that are not covered by the application control signatures list. To view the application control signatures list:

- Go to *Security Profiles > Application Signatures* and select the *Signature* view.
- Go to *Security Profiles > Application Control*, edit an existing application sensor, and click *View Application Signatures* in the right-hand pane.
- Go to *System > FortiGuard*, in the *License Information* table expand *Firmware & General Updates*, and in the *Application Control Signatures* row click *Actions > View List*.

Application groups can be created by selecting individual application, or by filtering by application category. The groups can then be used in firewall policies.

For information about the syntax for building IPS and application control signatures, see the [Custom IPS and Application Control Signature Syntax Guide](#)

### To make the application signatures settings visible in the GUI:

1. Go to *System > Feature Visibility*
2. In the *Security Features* section, enable *Application Control*.
3. Click *Apply*.

### To configure custom signatures:

1. Custom application and IPS signatures can be configured:
  - To configure custom application signatures, go to *Security Profiles > Application Signatures* and click *Create New > Custom Application Signature*. See [Blocking applications with custom signatures on page 1547](#) for an example.
  - To configure custom IPS signatures, go to *Security Profiles > IPS Signatures* and click *Create New*.



2. Configure the following settings:

<i>Name</i>	Enter a unique name for the signature.
<i>Comments</i>	Enter a comment (optional).
<i>Signature</i>	Enter the signature.

3. Click **OK**.

### To configure application groups:

1. Go to *Security Profiles > Application Signatures* and click *Create New > Application Group*.
2. Configure the following settings:

<i>Group Name</i>	Enter a unique name for the signature group.
<i>Type</i>	Set the application group type, either application ID or application filter. See <a href="#">Filters for application control groups on page 1549</a> for information about the available filters.
<i>Members</i>	Select the applications or filter to include in the group.
<i>Comments</i>	Enter a comment (optional).

3. Click **OK**.  
See [Application groups in traffic shaping policies on page 1552](#) for more information.

## Blocking applications with custom signatures

Custom signatures can be used in application control profiles to block web traffic from specific applications, such as out of support operating systems.

In this example, a custom signature is created to detect PCs running Windows NT 6.1 operating systems, including Windows 7 and Windows Server 2008 R2. The signature is added to an application control profile and the action is set to block. The profile is then used in a firewall policy so that web traffic matching the signature is blocked. The logs generated by this example can be used to help identify other computers that need to be blocked.

### To create the custom application signature:

1. Go to *Security Profiles > Application Signatures* and click *Create New > Custom Application Signature*.
2. Enter a name for the custom signature, such as *block\_nt\_6.1*.
3. Enter the *Signature*. In this example:

```
F-SBID( --attack_id 6483; --name "Windows.NT.6.1.Web.Surfing"; --default_action drop_session; --service HTTP; --protocol tcp; --app_cat 25; --flow from_client; --pattern !"FCT"; --pattern "Windows NT 6.1"; --no_case; --context header; --weight 40; )
```

This signature scans HTTP and HTTPS traffic that matches the pattern *Windows NT 6.1* in its header. For blocking older versions of Windows, such as Windows XP, you would use the pattern *Windows NT 5.1*. An attack ID is automatically generated when the signature is created.

New Application Signature

Name:

Comments:  0/63

Signature

```
F-SBID[ --name "Windows.NT.6.1.Web.Surfing"; --default_action drop_session; --service HTTP; --protocol tcp; --app_cat 25; --flow from_client; --pattern "!FCT"; --pattern "Windows NT 6.1"; --no_case; --context_header; --weight 40; ]
```

FortiGate

FGDocs

Documentation


Online Help

Video Tutorials

OK Cancel

4. Click **OK**.

The signature is included in the *Custom Application Signature* section of the signature list.

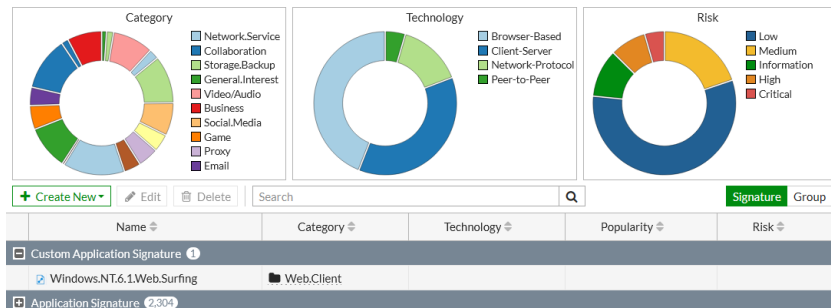

**To use the signature in an application control profile:**

- Go to *Security Profiles > Application Control*.
- Create a new profile, or edit an existing one.
- In the *Application and Filter Overrides* table, click *Create New*.
- Set *Type* to *Application* and *Action* to *Block*.
- Select the custom signature from the list, using the search feature if required, then click *Add Selected*.

Edit Application Add New Override

Type: ☐ Application ☐ Filter

Action: ☒ Block

Add All Results Remove Selected Search Selected All Cloud

Name	Category	Technology	Popularity	Risk
Custom Application Signature				
Windows.NT.6.1.Web.Surfing	Web.Client			
Application Signature (2,414)				
1kocun	Video/Audio	Client-Server	★★★★☆	★★★★
1und1.Mall	Email	Browser-Based	★★★★☆	★★★★

OK Cancel

6. Click **OK**.

The signature is added to the table.

7. Click **OK**.

**To add the application control profile to a firewall policy:**

- Go to *Policy & Objects > Firewall Policy*.
- Edit the policy that currently allows a connection from the internal network to the internet.
- In the *Security Profiles* section, enable *Application Control* and select the profile.


If deep inspection is not enabled, then only HTTP traffic will be scanned. To scan HTTPS traffic, set SSL Inspection

to a profile that includes deep inspection. See [SSL & SSH Inspection on page 1528](#) for more information.

4. Click OK.

## Results

When a PC running one of the affected operating systems tries to connect to the internet using a web browser, a replacement message is shown. For information on customizing replacement messages, see [Replacement messages on page 2484](#).

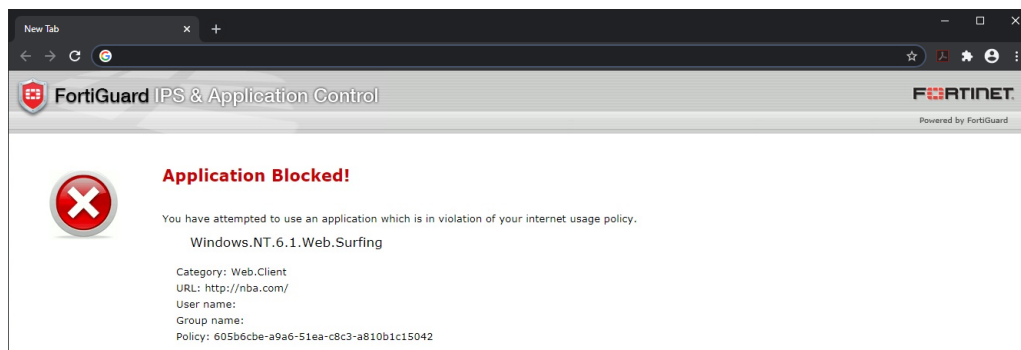

Go to **Log & Report > Security Events** to view the web traffic that is logged for the PC that is blocked by the application signature in the **Application Control** card.

Add Filter					Details	
Date/Time	Source	Destination	Application Name	Action	Log Details	
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block	<div><div>General</div><div>Date2020/10/07 Time12:59:09 Session ID8711756 Virtual Domainroot</div><div>Source</div><div>IP192.168.2.200 Source Port49833 Source Interfacelan User</div><div>Destination</div><div>IP34.213.106.51 Port80 Destination Interfacewifi Hostnamenba.com URL/favicon.ico</div><div>Application Control</div><div>Sensordefault Application NameWindows.NT.6.1.Web.Surfing ID6483 CategoryWeb.Client Riskundefined Protocol6 ServiceHTTP MessageWeb.Client: Windows.NT.6.1.Web.Surfing.</div><div>Action</div><div>Action block Policy 46</div><div>Security</div><div>Level</div><div>Cellular</div></div>	
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:11	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 13:00:06	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:59:09	192.168.2.200	34.213.106.51 (nba.com)	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:59:09	192.168.2.200	66.35.19.66 (www.fortiguard.com)	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:59:08	192.168.2.200	34.213.106.51 (nba.com)	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:58:04	192.168.2.200	66.35.19.66 (www.fortiguard.com)	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:58:03	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:58	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:52	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:47	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		
2020/10/07 12:57:44	192.168.2.200	10.10.10.1	Windows.NT.6.1.Web.Surfing	block		

## Filters for application control groups

When defining application groups in NGFW policy or profile mode, the following group filters are available: protocols, risk, vendor, technology, behavior, popularity, and category.

```

config application group
  edit <name>
    set type filter
    set protocols <integer>
    set risk <integer>
    set vendor <id>
    set technology <id>
    set behavior <id>
    set popularity <integer>
    set category <id>
  next
end

```

protocols <integer>	Application protocol filter (0 - 47, or all).
risk <integer>	Risk or impact of allowing traffic from this application to occur (1 - 5; low (1), elevated (2), medium (3), high (4), and critical (5)).
vendor <id>	Application vendor filter (0 - 25, or all).
technology <id>	Application technology filter: <ul style="list-style-type: none"> <li>• all</li> <li>• 0 (network-protocol)</li> <li>• 1 (browser-based)</li> <li>• 2 (client-server)</li> <li>• 4 (peer-to-peer)</li> </ul>
behavior <id>	Application behavior filter: <ul style="list-style-type: none"> <li>• all</li> <li>• 2 (botnet)</li> <li>• 3 (evasive)</li> <li>• 5 (excessive bandwidth)</li> <li>• 6 (tunneling)</li> <li>• 9 (cloud)</li> </ul>
popularity <integer>	Application popularity filter (1 - 5, from least to most popular).
category <id>	Application category filter: <ul style="list-style-type: none"> <li>• 2 (P2P)</li> <li>• 3 (VoIP)</li> <li>• 5 (video/audio)</li> <li>• 6 (proxy)</li> <li>• 7 (remote access)</li> <li>• 8 (game)</li> <li>• 12 (general interest)</li> <li>• 15 (network service)</li> <li>• 17 (update)</li> <li>• 21 (email)</li> <li>• 22 (storage backup)</li> <li>• 23 (social media)</li> <li>• 25 (web client)</li> </ul>

- 26 (industrial)
- 28 (collaboration)
- 29 (business)
- 30 (cloud IT)
- 31 (mobile)
- 32 (unknown applications)

## Sample configurations

In this example, a single filter (risk level 1) is configured in the application group in NGFW policy mode, so only signatures matching this filter will match the security policy.

### To configure the application group:

```
config application group
  edit "risk_1"
    set type filter
    set risk 1
  next
end
```

### To configure the security policy:

```
config firewall security-policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set status enable
    set schedule "always"
    set enforce-default-app-port disable
    set service "ALL"
    set app-group risk_1
    set logtraffic all
  next
end
```

In this example, the application group is configured so that only signatures matching both filters, category 5 (video/audio) and technology 1 (browser-based), will match the security policy. The application group can also be configured in a traffic shaping policy.

### To configure the application group:

```
config application group
  edit "two"
    set type filter
    set category 5
    set technology 1
  next
end
```

**To configure the security policy:**

```
config firewall security-policy
  edit 1
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set status enable
    set schedule "always"
    set enforce-default-app-port disable
    set service "ALL"
    set app-group two
    set logtraffic all
  next
end
```

**To configure the traffic shaping policy:**

```
config firewall shaping-policy
  edit 1
    set ip-version 4
    set service "ALL"
    set app-group two
    set dstintf port1
    set traffic-shaper "max-100"
    set traffic-shaper-reverse "max-100"
    set srcaddr "all"
    set dstaddr "all"
  next
end
```

## Application groups in traffic shaping policies

Application groups can be configured in traffic shaping policies. In this example, there are two traffic shaping policies:

- Policy 1 is for traffic related to cloud applications and has high priority.
- Policy 2 is for other traffic and has low priority.



At least one firewall policy must have application control enabled for the applications to match any policy traffic.

---

**To configure a traffic shaping policy to use an application group in the GUI:**

1. Configure an application group for cloud applications:
  - a. Go to *Security Profiles > Application Signatures*.
  - b. Click *Create New > Application Group*. The *New Application Group* page opens.
  - c. Enter a name for the group, and for *Type*, select *Application*.
  - d. Click the + to add the group the members.

New Application Group

Group Name: cloud app group

Type: Application Filter

Members:

- Amazon.AWS
- Amazon.AWS\_EC2
- Amazon.AWS\_S3
- Google.Cloud.Platform\_App.Engin
- Google.Cloud.Print

Comments: Write a comment... 0/255

FortiGate

FGDocs

Additional Information

API Preview

Documentation

Online Help

Video Tutorials

OK Cancel

- e. Click **OK**.
2. Create the shaping policy for the high priority cloud application traffic:
  - a. Go to *Policy & Objects > Traffic Shaping*, select the *Traffic Shaping Policies* tab, and click *Create New*.
  - b. Enter the following:

<b>Name</b>	For Cloud Traffic
<b>Source</b>	All
<b>Destination</b>	All
<b>Service</b>	All
<b>Application</b>	Add the <i>Cloud.IT</i> category and the <i>cloud app group</i> application group.
<b>Outgoing interface</b>	port1
<b>Shared shaper</b>	high-priority
<b>Reverse shaper</b>	high-priority

New Traffic Shaping Policy

Name: For Cloud Traffic  
Status: ☒ Enabled ☐ Disabled  
Comments: Write a comment... 0/255

If Traffic Matches:

Source: all  
Destination: all  
Schedule: ☐  
Service: ALL  
Application: Cloud.IT, cloud app group  
URL Category:

Then:

Action: ☒ Apply Shaper ☐ Assign Shaping Class ID  
Outgoing interface: port1  
Shared shaper: ☒ high-priority  
Reverse shaper: ☒ high-priority  
Per-IP shaper: ☐

Select Entries

Application Category Group  
Search + Create  
Application (2)  
cloud app group  
test

Close

OK Cancel

c. Click OK.

3. Create the shaping policy for the low priority other traffic:



- a. Click *Create New* and enter the following:

<b>Name</b>	For Other Traffic
<b>Source</b>	All
<b>Destination</b>	All
<b>Service</b>	All
<b>Outgoing interface</b>	port1
<b>Shared shaper</b>	low-priority
<b>Reverse shaper</b>	low-priority

New Traffic Shaping Policy

Name: For Other Traffic  
Status: ☒ Enabled ☐ Disabled  
Comments: Write a comment... 0/255

Additional Information  
[API Preview](#)  
[Documentation](#)  
[Online Help](#) [Video Tutorials](#)

If Traffic Matches:

Source: all

Destination: all

Schedule: ☐

Service: ALL

Application:

URL Category:

Then:

Action: ☒ Apply Shaper ☐ Assign Shaping Class ID

Outgoing interface: port1

Shared shaper: ☒ low-priority

Reverse shaper: ☒ low-priority

Per-IP shaper: ☐

OK Cancel

- b. Click **OK**.

### To configure a traffic shaping policy to use an application group in the CLI:

1. Configure an application group for cloud applications:

```
config application group
edit "cloud app group"
set application 27210 36740 35944 43296 33048
next
end
```

2. Create the shaping policies for the high priority cloud application traffic and low priority other traffic:

```
config firewall shaping-policy
edit 1
set name "For Cloud Traffic"
set service "ALL"
set app-category 30
```

```
        set app-group "cloud app group"
        set dstintf "port1"
        set traffic-shaper "high-priority"
        set traffic-shaper-reverse "high-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
    edit 2
        set name "For Other Traffic"
        set service "ALL"
        set dstintf "port1"
        set traffic-shaper "low-priority"
        set traffic-shaper-reverse "low-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

## Overrides

Web filter configuration can be separated into profile configuration and profile overrides.

You can also override web filter behavior based on the FortiGuard website categorization:

- Use alternate categories (web rating overrides): this method manually assigns a specific website to a different Fortinet category or a locally-created category.
- Use alternate profiles: configured users or IP addresses can use an alternative web filter profile when attempting to access blocked websites.



Some features of this functionality require a subscription to FortiGuard Web Filtering.

---

The following topics provide information about web overrides:

- [Web rating override on page 1556](#)
- [Using local and remote categories on page 1564](#)
- [Web profile override on page 1566](#)

### Web rating override

Web rating overrides allow you to apply a category override to a URL. This overrides the original FortiGuard category for the URL with either a different FortiGuard category, a custom local category, or a threat feed remote category.

If a URL is in multiple active categories, the order of precedence is local categories, then remote categories, and then FortiGuard categories.



Web rating override requires a FortiGuard license.

---

**To create a FortiGuard category override:**

1. Go to *Security Profiles > Web Rating Overrides* and click *Create New*.
2. Configure the following settings:

<b>URL</b>	Enter the URL to override.
<b>Lookup rating</b>	Select to view any current <i>Category</i> and <i>Sub-Category</i> ratings.
<b>Comments</b>	Enter a comment (optional).
<b>Override to</b>	
<b>Category</b>	Select a FortiGuard category, threat feed remote category, or a <i>Custom Category</i> .
<b>Sub-Category</b>	Select a sub-category to further define the rating. If <i>Custom Category</i> was selected for the <i>Category</i> , you can select from a list of categories you created.

3. Click **OK**.

**To create a custom local category override:**

1. Create a custom category :
  - a. Go to *Security Profiles > Web Rating Overrides*.
  - b. Click *Custom Categories*, then click *Create New*.
  - c. Configure the following settings:

<b>Name</b>	Enter a unique name for the category.
<b>Status</b>	Enable/disable the status of the category.

- d. Click **OK**.
2. Create a web rating override:
    - a. Go to *Security Profiles > Web Rating Overrides* and click *Create New*.

- b. Configure the following settings:

<i>URL</i>	Enter the URL to override.
<i>Lookup rating</i>	Select to view any current <i>Category</i> and <i>Sub-Category</i> ratings.
<i>Comments</i>	Enter a comment (optional).
<i>Override to</i>	
<i>Category</i>	Select <i>Custom Category</i> .
<i>Sub-Category</i>	Select the custom category that was just created.

- c. Click *OK*.

### To create a thread feed remote category override:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Enter a name for the threat feed. This will also be the name of the remote category.
4. Enter the *URI of external resource* that contains the list of URLs that will be overridden in this remote category.
5. Configure the remaining settings as needed, then click *OK*.

## Sub-category actions


After configuring category override rules, an override category must be active in a web filter profile for it to take effect. Whether a category is active or not depends on the override method and action:

Override method	Active category actions	Inactive category actions
FortiGuard categories	Monitor, Block, Warning, or Authenticate	Allow
Local categories	Allow, Monitor, Block, Warning, or Authenticate	Disable*
Remote categories	Allow, Monitor, Block, Warning, or Authenticate	Disable*

\*The *Disable* action is only available for local and remote categories by right clicking on the sub-category.

The *Allow* action in the GUI is different for FortiGuard categories compared to local and remote categories.

For local and remote categories, the *Allow* action in the GUI corresponds to the monitor action with logging disabled in the CLI:

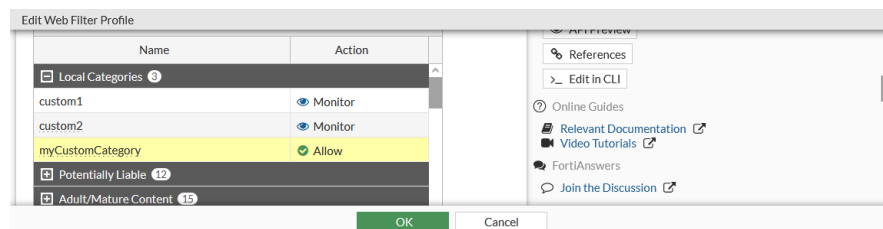


```

config webfilter profile
  edit <profile>
    config ftgd-wf
      config filters
        edit 142
          set category 142
          set action monitor
          set log disable
        next
      end
    end
  next
end

```

For FortiGuard categories, the *Allow* action in the GUI corresponds to no entry in the CLI:

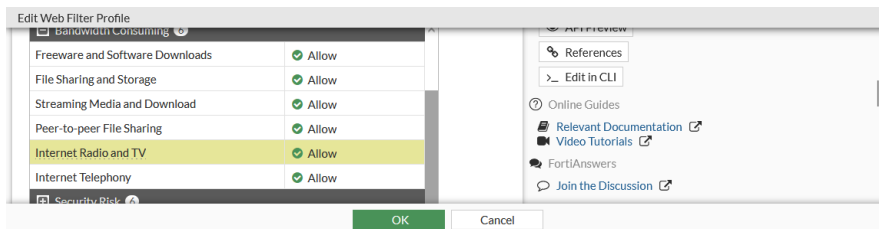

The *Internet Radio and TV* sub-category has ID number 75.

```

config webfilter profile
  edit <profile>
    config ftgd-wf
      config filters
        end
      end
    end
  next
end

```


This means that a FortiGuard category with the *Allow* action applied is effectively inactive, as there is no actual action specified in the CLI.

## Example 1: Override a FortiGuard category with another FortiGuard category

In this example, play.google.com is overridden from its original category, Freeware and Software Download (19), to the Advertising category (17). In the web filter profile, the Advertising category is set to *Block* and the Freeware and Software Download category is set to *Allow*.

### To configure a FortiGuard web rating override:

1. Go to *Security Profiles > Web Rating Overrides* and click *Create New*.
2. Enter the URL: play.google.com.
3. Optionally, click *Lookup rating* to see what its current rating is.
4. Set the *Category* and *Sub-Category* to an existing category that is different from the original category.

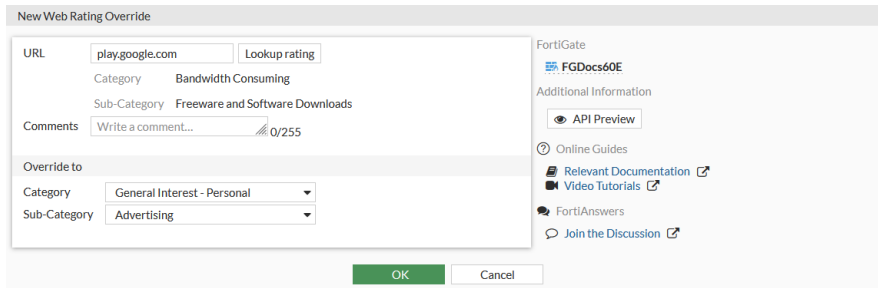

**New Web Rating Override**

URL:

Category:

Sub-Category:

Comments:  0/255

Override to:

Category:

Sub-Category:

FortiGate

FGDocs60E

Additional Information

Online Guides

[Relevant Documentation](#)

[Video Tutorials](#)


FortiAnswers

[Join the Discussion](#)

5. Click **OK**.

### To apply the category in a web filter profile:

1. Go to *Security Profiles > Web Filter* and create or edit a web filter profile. See [FortiGuard filter on page 1320](#) for more information.
2. Enable *FortiGuard category based filter*.
3. Set the action for the *Advertising* category in the *General Interest - Personal* group to *Block*.
4. Set the action for the *Freeware and Software Download* category in the *Bandwidth Consuming* group to *Allow*.

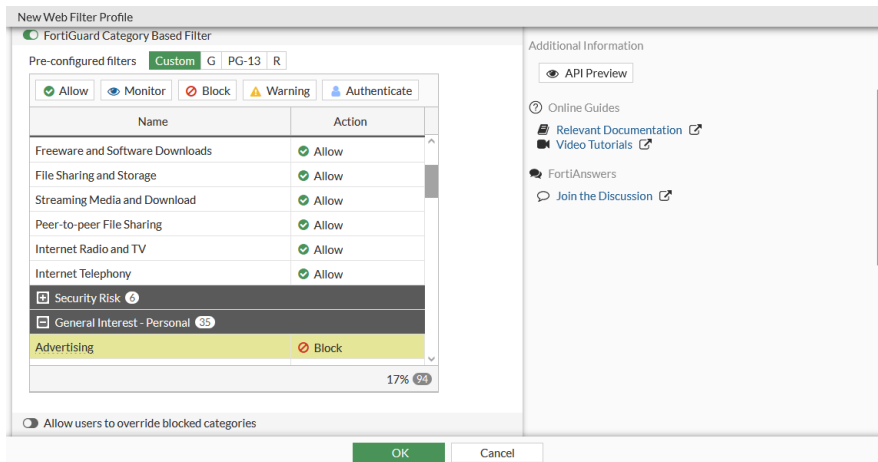

**New Web Filter Profile**

☒ FortiGuard Category Based Filter

Pre-configured filters:

Name	Action
Freeware and Software Downloads	<input checked="" type="button" value="Allow"/>
File Sharing and Storage	<input checked="" type="button" value="Allow"/>
Streaming Media and Download	<input checked="" type="button" value="Allow"/>
Peer-to-peer File Sharing	<input checked="" type="button" value="Allow"/>
Internet Radio and TV	<input checked="" type="button" value="Allow"/>
Internet Telephony	<input checked="" type="button" value="Allow"/>
Security Risk	<input checked="" type="button" value="Allow"/>
General Interest - Personal	<input checked="" type="button" value="Allow"/>
Advertising	<input checked="" type="button" value="Block"/>

17% 0/4

☐ Allow users to override blocked categories

Additional Information

Online Guides

[Relevant Documentation](#)

[Video Tutorials](#)


FortiAnswers

[Join the Discussion](#)

5. Configure the remaining settings required, then click **OK**.

### To apply the category in firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create or edit a policy.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *Web Filter* and select the profile that you just created.
4. Set *SSL Inspection* to *certificate-inspection* or *deep-inspection*.

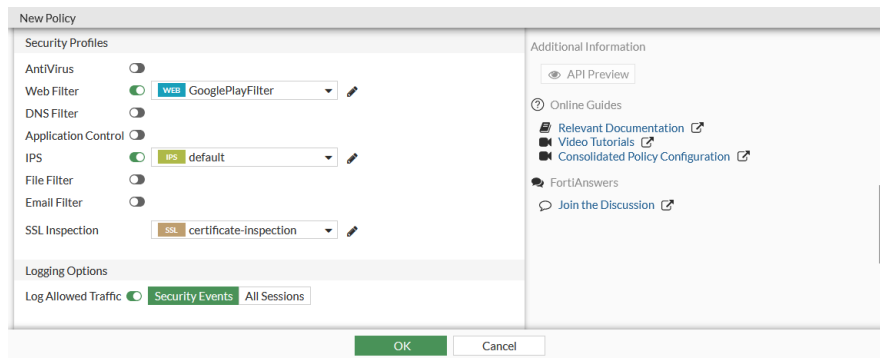

5. Enable *Log Allowed Traffic*.

6. Click **OK**.

### To test the filter:

1. From a Workstation behind the firewall, open a browser and browse to [play.google.com](https://play.google.com). The page will be blocked by the category override.



### FortiGuard Intrusion Prevention - Access Blocked

#### Web Page Blocked

You have tried to access a web page that is in violation of your Internet usage policy

Category Advertising

URL <https://play.google.com/>

To have the rating of this web page re-evaluated [please click here](#).

2. Go to **Log & Report > Security Events** and select **Web Filter**.

3. View the log details in the GUI, or download the log file:

```
date=2022-09-21 time=16:43:31 eventtime=1663803811966781540 tz="-0700"
logid="0316013056" type="utm" subtype="webfilter" eventtype="ftgd_blk" level="warning"
vd="root" policyid=2 sessionid=891040 srcip=192.168.2.8 srcport=50318 srcintf="port2"
srcintfrole="undefined" dstip=142.251.211.238 dstport=443 dstintf="port1"
dstintfrole="undefined" proto=6 service="HTTPS" hostname="play.google.com" profile="FGD-
Override-FGD-Flow" action="blocked" reftype="direct" url="https://play.google.com/"
sentbyte=517 rcvbyte=0 direction="outgoing" msg="URL belongs to a denied category in
policy" method="domain" cat=17 catdesc="Advertising"
```

## Example 2: Override a FortiGuard category with a remote category

In this example, [play.google.com](https://play.google.com) is added to an external URL category list and applied to a threat feed. In the web filter profile, the remote category is set to *Allow*, and the original FortiGuard category (Freeware and Software Download) is set to *Block*. Remote categories take precedence over FortiGuard categories, so the override action for the remote category will apply.

Delete the web rating override entry from example 1 for [play.google.com](https://play.google.com) before configuring this example.

### To configure a FortiGuard threat feed for remote category override:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Enter a name for the threat feed, such as *Custom-Remote-FGD*. This will be the name of the remote category.
4. Enter the *URI of external resource* that contains the list of URLs that will be overridden to this remote category. This list will contain one entry for *play.google.com*.

The screenshot shows the 'New External Connector' configuration window. On the left, under 'Threat Feeds', the 'FortiGuard Category' is selected. Below this, the 'Connector Settings' are configured: 'Status' is 'Enabled', 'Name' is 'Custom-Remote-FGD', 'Update method' is 'External Feed', 'URI of external resource' is 'https://10.10.10.10/Override\_URLs.txt', 'HTTP basic authentication' is 'Off', 'Refresh Rate' is '5 Minutes (1 - 43200)', and 'Comments' is '0/255'. On the right, the 'Additional Information' section lists various connectors and guides, including 'API Preview', 'Public SDN Connector Setup Guides', 'Amazon Web Services', 'Google Cloud Platform', 'Microsoft Azure', 'Oracle Cloud Infrastructure', 'Private SDN Connector Setup Guides', 'Cisco Application Centric Infrastructure', 'Nuage Virtualized Services Platform', 'OpenStack Connector', 'VMware NSX', 'Online Guides', 'Relevant Documentation', 'Video Tutorials', 'FortiAnswers', and 'Join the Discussion'.

5. Configure the remaining settings as needed, then click *OK*.

### To apply the category in a web filter profile:

1. Go to *Security Profiles > Web Filter* and create or edit a web filter profile. See [FortiGuard filter on page 1320](#) for more information.
2. Enable *FortiGuard category based filter*.
3. Set the action for the *Custom-Remote-FGD* category in the *Remote Categories* group to *Allow*.
4. Set the action for the *Freeware and Software Download* category in the *Bandwidth Consuming* group to *Block*.
5. Configure the remaining settings as required, then click *OK*.

### To apply the category in firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create or edit a policy.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *Web Filter* and select the profile that you just created.
4. Set *SSL Inspection* to *certificate-inspection* or *deep-inspection*.
5. Enable *Log Allowed Traffic*.
6. Click *OK*.

### To test the filter:

1. From a Workstation behind the firewall, open a browser and browse to *play.google.com*. The page will be allowed by the remote category override.
2. No logs are recorded because the *Allow* action is selected.



### Example 3 - Override a FortiGuard category with a custom local category

In this example, play.google.com is added to a custom local category. that is set to Monitor in the web filter profile. Local custom categories take precedence over both remote and FortiGuard categories, so the override action for the local category will apply.

#### To create a custom local category override:

1. Go to *Security Profiles > Web Rating Overrides*.
2. Click *Custom Categories*, then click *Create New*.
3. Enter a name for the category, such as *myCustomCategory*, and ensure the *Status* is set to *Enable*.
4. Click *OK*.

#### To create a web rating override for the custom local category:

1. Go to *Security Profiles > Web Rating Overrides* and click *Create New*.
2. Enter the URL to override.
3. For *Category*, select *Custom Categories* and for *Sub-Category* select *myCustomCategory*.

4. Click *OK*.

#### To apply the category in a web filter profile:

1. Go to *Security Profiles > Web Filter* and create or edit a web filter profile. See [FortiGuard filter on page 1320](#) for more information.
2. Enable *FortiGuard category based filter*.
3. Set the action for the *myCustomCategory* category in the *LocalCategories* group to *Monitor*.
4. The other actions can be left as they were at the end of example 2, *Custom-Remote-FGD* set to *Allow* and *Freeware and Software Download* set to *Block*.
5. Configure the remaining settings are required, then click *OK*.

#### To apply the category in firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create or edit a policy.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *Web Filter* and select the profile that you just created.
4. Set *SSL Inspection* to *certificate-inspection* or *deep-inspection*.
5. Enable *Log Allowed Traffic*.
6. Click *OK*.

**To test the filter:**

1. From a Workstation behind the firewall, open a browser and browse to play.google.com. The page will be allowed by the local category override.
2. Go to *Log & Report > Security Events* and select *Web Filter*.
3. View the log details in the GUI, or download the log file:

```
date=2022-09-21 time=17:17:00 eventtime=1663805820486294353 tz="-0700"
logid="0317013312" type="utm" subtype="webfilter" eventtype="ftgd_allow" level="notice"
vd="root" policyid=2 sessionid=893147 srcip=192.168.2.8 srcport=50417 srcintf="port2"
srcintfrole="undefined" dstip=142.251.211.238 dstport=443 dstintf="port1"
dstintfrole="undefined" proto=6 service="HTTPS" hostname="play.google.com" profile="FGD-
Override-FGD-Flow" action="passthrough" reftype="direct" url="https://play.google.com/"
sentbyte=517 rcvbyte=0 direction="outgoing" msg="URL belongs to an allowed category in
policy" method="domain" cat=142 catdesc="myCustomCategory"
```


## Using local and remote categories

For some functions, local and remote FortiGuard categories must be explicitly selected to apply. In [SSL/SSH inspection profiles](#), custom categories must be explicitly selected to be exempt from SSL inspection. In [Proxy addresses](#), custom categories must be explicitly selected as URL categories for them to apply. In both settings, if a URL is in multiple selected categories, the order of precedence is local categories, then remote categories, and then FortiGuard categories.

## SSL/SSH inspection profiles

**To use local and remote categories in an SSL/SSH inspection profile to exempt them from SSL inspection in the GUI:**

1. Go to *Security Profiles > SSL/SSH Inspection*.
2. Create a new profile or edit an existing one.
3. Ensure that *Inspection method* is *Full SSL Inspection*.
4. In the *Exempt from SSL Inspection* section, add the local and remote categories to the *Web categories* list .

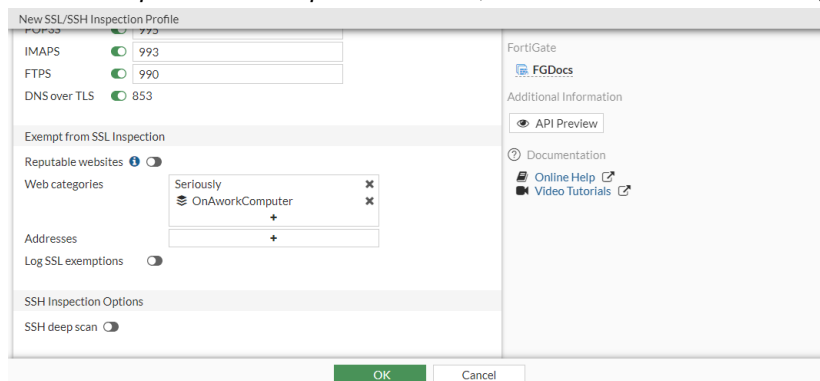

5. Configure the remaining settings as required, then click **OK**.

**To use local and remote categories in an SSL/SSH inspection profile to exempt them from SSL inspection in the CLI:**

```
config vdom
  edit root
    config firewall ssl-ssh-profile
      edit "SSL_Inspection"
        config https
          set ports 443
          set status deep-inspection
        end
        ...
        config ssl-exempt
          edit 1
            set fortiguard-category 140
          next
          edit 2
            set fortiguard-category 192
          next
        end
      next
    end
  next
end
```

## Proxy addresses

**To use local and remote categories in a proxy address in the GUI:**

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*, or edit an existing proxy address.
2. Set *Category* to *Proxy Address*.
3. Set *Type* to *URL Category*.
4. In the *URL Category*, add the local and remote categories.

5. Configure the remaining settings as required, then click **OK**.

**To use local and remote categories in a proxy address in the CLI:**

```
config vdom
  edit root
    config firewall proxy-address
      edit "proxy_override"
        set type category
        set host "all"
        set category 140 192
        set color 23
      next
    end
  next
end
```

## Web profile override

The following profile override methods are available:

- Administrative override
- Allow users to override blocked categories

### Administrative override

Administrators can grant temporary access to sites that are otherwise blocked by a web filter profile. You can grant temporary access to a user, user group, or source IP address. You can set the time limit by selecting a date and time. The default is 15 minutes.

When the administrative web profile override is enabled, a blocked access page or replacement message does not appear, and authentication is not required.

### Scope range

You can choose one of the following scope ranges:

- User: authentication for permission to override is based on whether or not the user is using a specific user account.
- User group: authentication for permission to override is based on whether or not the user account supplied as a credential is a member of the specified user group.
- Source IP: authentication for permission to override is based on the IP address of the computer that was used to authenticate. This would be used for computers that have multiple users. For example, if a user logs on to the computer, engages the override by using their credentials, and then logs off, anyone who logs on with an account on that computer would be using the alternate override web filter profile.



When you enter an IP address in the administrative override method, only individual IP addresses are allowed.

---

### Differences between IP and identity-based scope

Using the IP scope does not require using an identity-based policy.

When using the administrative override method and IP scope, you might not see a warning message when you change from using the original web filter profile to using the alternate profile. There is no requirement for credentials from the user so, if allowed, the page will just appear in the browser.

## Configuring a web profile administrative override

This example describes how to override the *webfilter* profile with the *webfilter\_new* profile.

### To configure web profile administrative override using the GUI:

1. Go to *Security Profiles > Web Profile Overrides* and click *Create New*.
2. Configure the administrative override:
  - a. For *Scope Range*, click *Source IP*.
  - b. In the *Source IP* field, enter the IP address for the client computer (*10.1.100.11* in this example).
  - c. In the *Original profile* dropdown, select *webfilter*.
  - d. In the *New profile* dropdown, select *webfilter\_new*.

In the *Expires* field, the default 15 minutes appears, which is the desired duration for this example.

3. Click *OK*.

### To configure web profile administrative override using the CLI:

```
config webfilter override
edit 1
    set status enable
    set scope ip
    set old-profile "webfilter"
    set new-profile "webfilter_new"
    set expires 2021/07/30 10:14:00
    set initiator "admin"
    set ip 10.1.100.11
next
end
```

## Allow users to override blocked categories

For both override methods, the scope ranges (for specified users, user groups, or IP addresses) allow sites blocked by web filtering profiles to be overridden for a specified length of time.

But there is a difference between the override methods when the users or user group scope ranges are selected. In both cases, you would need to apply the user or user group as source in the firewall policy. With administrative override, if you do not apply the source in the firewall policy, the traffic will not match the override and will be blocked by the original

profile. With the *Allow users to override blocked categories* setting, the traffic will also be blocked, but instead of displaying a blocking page, the following message appears:



## FortiGuard Intrusion Prevention - Access Blocked

### Web Filter Block Override

If you have been granted creation privileges by your administrator, you can enter your username and password here to gain immediate access to the blocked webpage. If you do not have these privileges, please contact your administrator to gain access to the webpage.

Only user-based overrides are allowed and you do not appear to be authenticated with the system. Please contact your administrator.

When you choose the user group scope, once one user overrides, it will affect the other users in the group when they attempt to override. For example, user1 and user2 both belong to the `local_user` group. Once user1 successfully overrides, this will generate an override entry for the `local_user` group instead of one specific user. This means that if user2 logs in from another PC, they can override transparently.

## Other features

Besides the scope, there are some other features in *Allow users to override blocked categories*.

## Apply to user groups

Individual users can not be selected. You can select one or more of the user groups recognized by the FortiGate. They can be local to the system or from a third party authentication device, such as an AD server through FSSO.

## Switch duration

Administrative override sets a specified time frame that is always used for that override. The available options are:

- *Predefined*: the value entered is the set duration (length of time in days, hours, or minutes) that the override will be in effect. If the duration variable is set to 15 minutes, the length of the override will always be 15 minutes. The option will be visible in the override message page, but the setting will be grayed out.
- *Ask*: the user has the option to set the override duration once it is engaged. The user can set the duration in terms of days, hours, or minutes.

## Creating a web profile users override

This example describes how to allow users in the `local_group` to override the `webfilter_new` profile.

### To allow users to override blocked categories using the GUI:

1. Go to *Security Profiles > Web Filter* and click *Create New*.
2. Enter a name for the profile.
3. Enable *Allow users to override blocked categories*.

## 4. Configure the web filter profile:

- Click the *Groups that can override* field, and select a group (*local\_group* in this example).
- Click the *Profile Name* field, and select the *webfilter\_new* profile.
- For the *Switch applies to* field, click *IP*.
- For the *Switch Duration* field, click *Predefined*. The default 15 minutes appears, which is the desired duration for this example.
- Configure the rest of the profile as needed.

## 5. Click OK.

## Using the ask feature

This option is only available in *Allow users to override blocked categories* is enabled. It configures the message page to have the user choose which scope they want to use. Normally on the message page, the scope options are grayed out and not editable. In the following example, the *Scope* is predefined with *IP*.

## Web Filter Block Override

If you have been granted override creation privileges by your administrator, you can enter your username and password here to gain immediate access to the blocked web-page. If you do not have these privileges, please contact your administrator to gain access to the web-page.

When the ask option is enabled (through the *Switch applies to* field in the GUI), the *Scope* dropdown is editable. Users can choose one of the following:

- User
- User group
- IP

### Web Filter Block Override

If you have been granted override creation privileges by your administrator, you can enter your username and password here to gain immediate access to the blocked web-page. If you do not have these privileges, please contact your administrator to gain access to the web-page.

Username:

Password:

Scope:

New Profile:

Duration:  (Minutes)



*User and User Group are only available when there is a user group in the firewall policy. You must specify a user group as a source in the firewall policy so the scope includes User and User Group; otherwise, only the IP option will be available.*

## Profile groups

Security profiles can be organized into groups. They are useful when there are multiple policies that use the same security profiles, helping save time and preventing missing profiles when configuring policies. When changes need to be made, only the group has to be changed and not the individual policies.

By default, *Security Profiles > Profile Groups* is not visible in the GUI. It can only be enabled using the CLI.

### To show profile groups in the GUI:

```
config system settings
    set gui-security-profile-group enable
end
```

### To configure a profile group in the GUI:

1. Go to *Security Profiles > Profile Groups* and click *Create New*.

2. Enter a name for the group.
3. Enable the required profile types and select the profile that will be included in the group.  
A *Protocol Option* must be selected.
4. Click *OK*.



**To configure a profile group in the CLI:**

```

config firewall profile-group
  edit <name>
    set application-list <string>
    set av-profile <string>
    set cifs-profile <string>
    set dlp-profile <string>
    set dnsfilter-profile <string>
    set emailfilter-profile <string>
    set file-filter-profile <string>
    set icap-profile <string>
    set ips-sensor <string>
    set profile-protocol-options <string>
    set sctp-filter-profile <string>
    set ssh-filter-profile <string>
    set ssl-ssh-profile <string>
    set videofilter-profile <string>
    set voip-profile <string>
    set waf-profile <string>
    set webfilter-profile <string>
  next
end

```


application-list <string>	Name of an existing application list.
av-profile <string>	Name of an existing antivirus profile.
cifs-profile <string>	Name of an existing CIFS profile.
dlp-profile <string>	Name of an existing DLP profile.
dnsfilter-profile <string>	Name of an existing DNS filter profile.
emailfilter-profile <string>	Name of an existing email filter profile.
file-filter-profile <string>	Name of an existing file-filter profile.
icap-profile <string>	Name of an existing ICAP profile.
ips-sensor <string>	Name of an existing IPS sensor profile.
profile-protocol-options <string>	Name of an existing protocol options profile (default = default).
sctp-filter-profile <string>	Name of an existing SCTP filter profile.
ssh-filter-profile <string>	Name of an existing SSH filter profile.
ssl-ssh-profile <string>	Name of an existing SSL SSH profile (default = certificate-inspection).
videofilter-profile <string>	Name of an existing video filter profile.
voip-profile <string>	Name of an existing VOIP profile.

waf-profile <string>	Name of an existing WAF profile.
webfilter-profile <string>	Name of an existing web filter profile.

### To use the profile group in a policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and edit an existing policy or create a new one.
2. In the *Security Profiles* section, enable *Use Security Profile Group* and select a group.

No individual profiles can be selected if using a profile group.

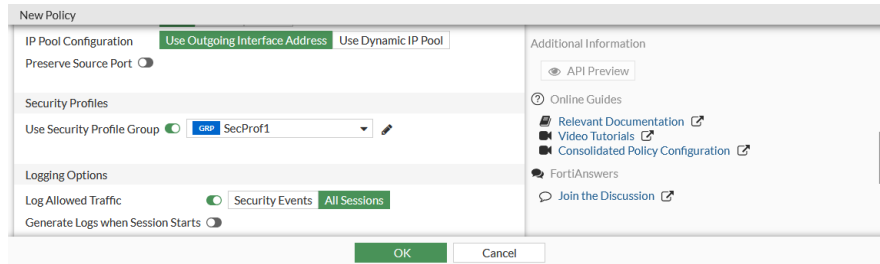

3. Click **OK**.

### To use the profile group in a policy in the CLI:

```
config firewall policy
  edit <policyid>
    set name <string>
    set srcintf <interface(s)>
    set dstintf <interface(s)>
    set action {accept | deny | ipsec}
    set srcaddr <address(es)>
    set dstaddr <address(es)>
    set schedule <schedule>
    set service <service(s)>
    set utm-status enable
    set profile-type group
    set profile-group <group>
  next
end
```

# VPN

Virtual Private Network (VPN) technology lets remote users connect to private computer networks to gain access to their resources in a secure way. For example, an employee traveling or working at home can use a VPN to securely access the office network through the Internet.

Instead of remotely logging into a private network using an unencrypted and unsecured Internet connection, using a VPN ensures that unauthorized parties cannot access the office network and cannot intercept information going between the employee and the office. Another common use of a VPN is to connect the private networks of multiple offices.

Fortinet offers VPN capabilities in the FortiGate Unified Threat Management (UTM) appliance and in the FortiClient Endpoint Security suite of applications. You can install a FortiGate unit on a private network and install FortiClient software on the user's computer. You can also use a FortiGate unit to connect to the private network instead of using FortiClient software.

The following sections provide information about VPN:

- [IPsec VPNs on page 1573](#)
- [SSL VPN on page 1876](#)

## IPsec VPNs

The following sections provide instructions on configuring IPsec VPN connections in FortiOS 7.2.6.

- [General IPsec VPN configuration on page 1573](#)
- [Site-to-site VPN on page 1603](#)
- [Remote access on page 1656](#)
- [Aggregate and redundant VPN on page 1700](#)
- [Overlay Controller VPN \(OCVPN\) on page 1744](#)
- [ADVPN on page 1775](#)
- [Fabric Overlay Orchestrator on page 1809](#)
- [Other VPN topics on page 1829](#)
- [VPN IPsec troubleshooting on page 1868](#)

## General IPsec VPN configuration

The following sections provide instructions on general IPsec VPN configurations:

- [Network topologies on page 1574](#)
- [Phase 1 configuration on page 1574](#)
- [Phase 2 configuration on page 1588](#)
- [VPN security policies on page 1592](#)
- [Blocking unwanted IKE negotiations and ESP packets with a local-in policy on page 1596](#)

- [Configurable IKE port on page 1597](#)
- [IPsec VPN IP address assignments on page 1600](#)

## Network topologies

The topology of your network will determine how remote peers and clients connect to the VPN and how VPN traffic is routed.

Topology	Description
Site-to-Site	Standard one-to-one VPN between two FortiGates. See <a href="#">Site-to-site VPN on page 1603</a> .
Hub and spoke/ADVPN	One central FortiGate (hub) has multiple VPNs to other remote FortiGates (spokes). In ADVPN, shortcuts can be created between spokes for direct communication. See <a href="#">ADVPN on page 1775</a> .
OCVPN	Fortinet's cloud based solution for automating VPN setup between devices registered to the same account. See <a href="#">Overlay Controller VPN (OCVPN) on page 1744</a> .
FortiClient dialup	Typically remote FortiClient dialup clients use dynamic IP addresses through NAT devices. The FortiGate acts as a dialup server allowing dialup VPN connections from multiple sources. See <a href="#">FortiClient as dialup client on page 1663</a> .
FortiGate dialup	Similar to site-to-site except one end is a dialup server and the other end is a dialup client. This facilitates scenarios in which the remote dialup end has a dynamic address, or does not have a public IP, possibly because it is behind NAT. See <a href="#">FortiGate as dialup client on page 1657</a> .
Aggregate VPN	Natively support aggregating multiple VPN tunnels to increase performance and provide redundancy over multiple links. See <a href="#">Packet distribution and redundancy for aggregate IPsec tunnels on page 1717</a> .
Redundant VPN	Options for supporting redundant and partially redundant IPsec VPNs, using route-based approaches. See <a href="#">Redundant hub and spoke VPN on page 1738</a> .
L2TP over IPsec	Configure VPN for Microsoft Windows dialup clients using the built in L2TP software. Users do not have to install any Fortinet software. See <a href="#">L2TP over IPsec on page 1681</a> .
GRE over IPsec	Legacy support for routers requiring point-to-point GRE over IPsec for tunneling. See <a href="#">GRE over IPsec on page 1619</a> .

## Phase 1 configuration

Phase 1 configuration primarily defines the parameters used in IKE (Internet Key Exchange) negotiation between the ends of the IPsec tunnel. The local end is the FortiGate interface that initiates the IKE negotiations. The remote end is the remote gateway that responds and exchanges messages with the initiator. Hence, they are sometimes referred to as the initiator and responder. The purpose of phase 1 is to secure a tunnel with one bi-directional IKE SA (security association) for negotiating IKE phase 2 parameters.

The `auto-negotiate` and `negotiation-timeout` commands control how the IKE negotiation is processed when there is no traffic, and the length of time that the FortiGate waits for negotiations to occur.

IPsec tunnels can be configured in the GUI using the *VPN Creation Wizard*. Go to *VPN > IPsec Wizard*. The wizard includes several templates (site-to-site, hub and spoke, remote access), but a custom tunnel can be configured with the following settings.



The IPsec phase 1 interface type cannot be changed after it is configured. This is due to the tunnel ID parameter (`tun_id`), which is used to match routes to IPsec tunnels to forward traffic. If the IPsec phase 1 interface type needs to be changed, a new interface must be configured.

<b>Name</b>	<p>Phase 1 definition name.</p> <p>The maximum length is 15 characters for an interface mode VPN and 35 characters for a policy-based VPN.</p> <p>For a policy-based VPN, the name normally reflects where the remote connection originates. For a route-based tunnel, the FortiGate also uses the name for the virtual IPsec interface that it creates automatically.</p>
<b>Network</b>	
<b>IP Version</b>	Protocol, either IPv4 or IPv6.
<b>Remote Gateway</b>	<p>Category of the remote connection:</p> <ul style="list-style-type: none"> <li>• <i>Static IP Address</i>: the remote peer has a static IP address.</li> <li>• <i>Dialup User</i>: one or more FortiClient or FortiGate dialup clients with dynamic IP addresses will connect to the FortiGate.</li> <li>• <i>Dynamic DNS</i>: a remote peer that has a domain name and subscribes to a dynamic DNS service will connect to the FortiGate.</li> </ul>
<b>IP Address</b>	The IP address of the remote peer. This option is only available when the <i>Remote Gateway</i> is <i>Static IP Address</i> .
<b>Dynamic DNS</b>	The domain name of the remote peer. This option is only available when the <i>Remote Gateway</i> is <i>Dynamic DNS</i> .
<b>Interface</b>	<p>The interface through which remote peers or dialup clients connect to the FortiGate. This option is only available in NAT mode.</p> <p>By default, the local VPN gateway IP address is the IP address of the interface that was selected (<i>Primary IP</i> in the <i>Local Gateway</i> field).</p>
<b>Local Gateway</b>	<p>IP address for the local end of the VPN tunnel (<i>Primary IP</i> is used by default):</p> <ul style="list-style-type: none"> <li>• <i>Secondary IP</i>: secondary address of the interface selected in the <i>Interface</i> field.</li> <li>• <i>Specify</i>: manually enter an address.</li> </ul> <p>Interface mode cannot be configured in a transparent mode VDOM.</p>
<b>Mode Config</b>	<p>This option is only available when the <i>Remote Gateway</i> is <i>Dialup User</i>.</p> <p>Configure the client IP address range, subnet mask/prefix length, DNS server, and split tunnel capability to automate remote client addressing.</p>

**NAT Traversal**

This option is only available when the *Remote Gateway* is *Static IP Address* or *Dynamic DNS*.

ESP (encapsulating security payload), the protocol for encrypting data in the VPN session, uses IP protocol 50 by default. However, it does not use any port numbers so when traversing a NAT device, the packets cannot be demultiplexed. Enabling NAT traversal encapsulates the ESP packet inside a UDP packet, thereby adding a unique source port to the packet. This allows the NAT device to map the packets to the correct session.

- *Enable*: a NAT device exists between the local FortiGate and the VPN peer or client. Outbound encrypted packets are wrapped inside a UDP IP header that contains a port number. The local FortiGate and the VPN peer or client must have the same NAT traversal setting (both selected or both cleared) to connect reliably. When in doubt, enable NAT traversal.
- *Disable*: disable the NAT traversal setting.
- *Forced*: the FortiGate will use a port value of zero when constructing the NAT discovery hash for the peer. This causes the peer to think it is behind a NAT device, and it will use UDP encapsulation for IPsec, even if no NAT is present. This approach maintains interoperability with any IPsec implementation that supports the NAT-T RFC.

**Keepalive Frequency**

Keepalive frequency setting. This option is only available when *NAT Traversal* is set to *Enable* or *Forced*. The NAT device between the VPN peers may remove the session when the VPN connection remains idle for too long.

The value represents an interval in seconds where the connection will be maintained with periodic keepalive packets. The keepalive interval must be smaller than the session lifetime value used by the NAT device.

The keepalive packet is a 138-byte ISAKMP exchange.

**Dead Peer Detection**

Reestablishes VPN tunnels on idle connections and cleans up dead IKE peers if required. This feature minimizes the traffic required to check if a VPN peer is available or unavailable (dead). The available options are:

- *Disable*: disable dead peer detection (DPD).
- *On Idle*: triggers DPD when IPsec is idle.
- *On Demand*: Passively sends DPD to reduce load on the firewall. Only triggers DPD when IPsec outbound packets are sent, but no reply is received from the peer. When there is no traffic and the last DPD-ACK has been received, IKE will not send DPDs periodically.

Notifications are received whenever a tunnel goes up or down, or to keep the tunnel connection open when no traffic is being generated inside the tunnel. For example, in scenarios where a dialup client or dynamic DNS peer connects from an IP address that changes periodically, traffic may be suspended while the IP address changes.

When *Dead Peer Detection* is selected, optionally specify a retry count and a retry interval using `dpd-retrycount` and `dpd-retryinterval`. See [Dead peer detection on page 1581](#).

<b>Forward Error Correction</b>	Enable on both ends of the tunnel to correct errors in data transmission by sending redundant data across the VPN.
<b>Device creation</b>	Advanced option. When enabled, a dynamic interface (network device) is created for each dialup tunnel.
<b>Aggregate member</b>	Advanced option. When enabled, the tunnel can be used as an aggregate member candidate.
<b>Authentication</b>	
<b>Method</b>	Either <i>Pre-shared Key</i> or <i>Signature</i> .
<b>Pre-shared Key</b>	The pre-shared key that the FortiGate will use to authenticate itself to the remote peer or dialup client during phase 1 negotiations. The same key must be defined at the remote peer or client. See <a href="#">Pre-shared key</a> .
<b>Certificate Name</b>	The server certificate that the FortiGate will use to authenticate itself to the remote peer or dialup client during phase 1 negotiations. See <a href="#">Digital certificates</a> .
<b>IKE Version</b>	Either 1 or 2. See <a href="#">Choosing IKE version 1 and 2 on page 1582</a> .
<b>Mode</b>	<p>This option is only available when IKEv1 is selected. The two available options are:</p> <ul style="list-style-type: none"> <li><i>Aggressive</i>: the phase 1 parameters are exchanged in a single message with unencrypted authentication information.</li> <li><i>Main (ID protection)</i>: the phase 1 parameters are exchanged in multiple rounds with encrypted authentication information.</li> </ul> <p>When the remote VPN peer has a dynamic IP address and is authenticated by a pre-shared key, you must select <i>Aggressive</i> mode if there is more than one dialup phase 1 configuration for the interface IP address.</p> <p>When the remote VPN peer has a dynamic IP address and is authenticated by a certificate, you must select <i>Aggressive</i> mode if there is more than one phase 1 configuration for the interface IP address and these phase 1 configurations use different proposals.</p>
<b>Peer Options</b>	Options to authenticate VPN peers or clients depending on the <i>Remote Gateway</i> and <i>Authentication Method</i> settings.
<b>Any peer ID</b>	<p>Accepts the local ID of any remote VPN peer or client. The FortiGate does not check identifiers (local IDs). <i>Mode</i> can be set to <i>Aggressive</i> or <i>Main</i>.</p> <p>This option can be used with digital certificate authentication, but for higher security, use <i>Peer certificate</i>.</p>
<b>Specific peer ID</b>	<p>This option is only available when <i>Aggressive Mode</i> is enabled. Enter the identifier that is used to authenticate the remote peer. The identifier must match the local ID configured by the remote peer's administrator.</p> <p>If the remote peer is a FortiGate, the identifier is specified in the <i>Local ID</i> field of the <i>Phase 1 Proposal</i> settings.</p> <p>If the remote peer is a FortiClient user, the identifier is specified in the <i>Local ID</i> field.</p>

In circumstances where multiple remote dialup VPN tunnels exist, each tunnel must have a peer ID set.

#### Peer certificate

Define the CA certificate used to authenticate the remote peer when the authentication mode is *Signature*.

If the FortiGate will act as a VPN client, and you are using security certificates for authentication, set the *Local ID* to the distinguished name (DN) of the local server certificate that the FortiGate unit will use for authentication purposes.

#### Peer ID from dialup group

Authenticate multiple FortiGate or FortiClient dialup clients that use unique identifiers and unique pre-shared keys (or unique pre-shared keys only) through the same VPN tunnel.

You must create a dialup user group for authentication purposes. Select the group from the list next to the *Peer ID from dialup group* option.

You must set *Mode* to *Aggressive* when the dialup clients use unique identifiers and unique pre-shared keys. If the dialup clients use unique pre-shared keys only, you can set *Mode* to *Main* if there is only one dialup Phase 1 configuration for this interface IP address.

#### Phase 1 Proposal

The encryption and authentication algorithms used to generate keys for the IKE SA.

There must be a minimum of one combination. The remote peer or client must be configured to use at least one of the proposals that you define.

#### Encryption

The following symmetric-key encryption algorithms are available:

- *DES*: Digital Encryption Standard, a 64-bit block algorithm that uses a 56-bit key.
- *3DES*: triple-DES; plain text is encrypted three times by three keys.
- *AES128*: Advanced Encryption Standard, a 128-bit block algorithm that uses a 128-bit key.
- *AES128GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 128-bit key. Only available for IKEv2.
- *AES192*: a 128-bit block algorithm that uses a 192-bit key.
- *AES256*: a 128-bit block algorithm that uses a 256-bit key.
- *AES256GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 256-bit key. Only available for IKEv2.
- *CHACHA20POLY1305*: a 128-bit block algorithm that uses a 128-bit key and a symmetric cipher. Only available for IKEv2. See also [HMAC settings](#).

#### Authentication

The following message digests that check the message authenticity during an encrypted session are available:

- *MD5*: message digest 5.
- *SHA1*: secure hash algorithm 1; a 160-bit message digest.
- *SHA256*: a 256-bit message digest.
- *SHA384*: a 384-bit message digest.
- *SHA512*: a 512-bit message digest.



	In IKEv2, encryption algorithms include authentication, but a PRF (pseudo random function) is still required ( <i>PRFSHA1</i> , <i>PRFSHA256</i> , <i>PRFSHA384</i> , <i>PRFSHA512</i> ). See also <a href="#">HMAC settings</a> .
<b>Diffie-Hellman Groups</b>	Asymmetric key algorithms used for public key cryptography. Select one or more from groups 1, 2, 5, and 14 through 32. At least one of the <i>Diffie-Hellman Groups</i> (DH) settings on the remote peer or client must match one the selections on the FortiGate. Failure to match one or more DH groups will result in failed negotiations.
<b>Key Lifetime</b>	The time (in seconds) that must pass before the IKE encryption key expires. When the key expires, a new key is generated without interrupting service. The keylife can be from 120 to 172 800 seconds.
<b>Local ID</b>	Optional setting. This value must match the peer ID value given for the remote VPN peer's <i>Peer Options</i> . <ul style="list-style-type: none"> <li>If the FortiGate will act as a VPN client and you are using peer IDs for authentication purposes, enter the identifier that the FortiGate will supply to the VPN server during the phase 1 exchange.</li> <li>If the FortiGate will act as a VPN client and you are using security certificates for authentication, select the distinguished name (DN) of the local server certificate that the FortiGate will use for authentication purposes.</li> </ul>
<b>XAUTH</b>	This option supports the authentication of dialup clients. It is only available for IKE version 1. <ul style="list-style-type: none"> <li><i>Disable</i>: do not use XAuth.</li> <li><i>Client</i>: available only if the <i>Remote Gateway</i> is set to <i>Static IP Address</i> or <i>Dynamic DNS</i>. If the FortiGate is a dialup client, enter the user name and password for the FortiGate to authenticate itself to the remote XAuth server.</li> <li><i>PAP Server</i>, <i>CHAP Server</i>, <i>Auto Server</i>: available only if <i>Remote Gateway</i> is set to <i>Dialup User</i>. Dialup clients authenticate as members of a dialup user group. A user group must be created first for the dialup clients that need access to the network behind the FortiGate.</li> </ul> <p>The FortiGate must be configured to forward authentication requests to an external RADIUS or LDAP authentication server.</p> <p>Select the server type based on the encryption method used between the FortiGate, the XAuth client, and the external authentication server. Then select the user group (<i>Inherit from policy</i> or <i>Choose</i>). See <a href="#">Using XAuth authentication on page 1586</a>.</p>
<b>Username</b>	User name used for authentication.
<b>Password</b>	Password used for authentication.

## Additional CLI configurations

The following phase 1 settings can be configured in the CLI:

**VXLAN over IPsec**

Packets with a VXLAN header are encapsulated within IPsec tunnel mode.

**To configure VXLAN over IPsec:**

```
config vpn ipsec phase1-interface/phase1
    edit ipsec
        set interface <name>
        set encapsulation vxlan/gre
        set encapsulation-address ike/ipv4/ipv6
        set encap-local-gw4 xxx.xxx.xxx.xxx
        set encap-remote-gw xxx.xxx.xxx.xxx
    next
end
```

**IPsec tunnel idle timer**

Define an idle timer for IPsec tunnels. When no traffic has passed through the tunnel for the configured `idle-timeout` value, the IPsec tunnel will be flushed.

**To configure IPsec tunnel idle timeout:**

```
config vpn ipsec phase1-interface
    edit p1
        set idle-timeout [enable | disable]
        set idle-timeoutinterval <integer> IPsec tunnel idle
        timeout in minutes (10 - 43200).
    next
end
```

**Monitor tunnel for failover**

Monitor a site-to-site tunnel to guarantee operational continuity if the primary tunnel fails. Configure the secondary phase 1 interface to monitor the primary interface.

**To configure the monitor:**

```
config vpn ipsec phase1-interface
    edit <secondary phase1-interface>
        set monitor <primary phase1-interface>
    next
end
```

**Passive mode**

Passive mode turns one side of the tunnel to be a responder only. It does not initiate VPN tunnels either by auto-negotiation, rekey, or traffic initiated behind the FortiGate.

**To configure passive mode:**

```
config vpn ipsec phase1-interface
    edit <example>
        set rekey {enable | disable}
        set passive-mode {enable | disable}
        set passive-tunnel-interface {enable | disable}
```

```

        next
    end

```

### Network ID

The network ID is a Fortinet-proprietary attribute that is used to select the correct phase 1 between IPsec peers, so that multiple IKEv2 tunnels can be established between the same local/remote gateway pairs.

In a dial-up VPN, `network-id` is in the first initiator message of an IKEv2 phase 1 negotiation. The responder (Hub) uses the `network-id` to match a phase 1 configuration with a matching `network-id`. The Hub can then differentiate multiple dial-up phase 1s that are bound to the same underlay interface and IP address. Without a `network-id`, the Hub cannot have multiple phase 1 dialup tunnels on the same interface.

In static phase 1 configurations, `network-id` is used with the pair of gateway IPs to negotiate the correct tunnel with a matching `network-id`. This allows IPsec peers to use the same pair of underlay IPs to establish multiple IPsec tunnels. Without it, only a single tunnel can be established over the same pair of underlay IPs.

#### To configure the network ID:

```

config vpn ipsec phase1-interface
    edit <example>
        set ike-version 2
        set network-overlay enable
        set network-id <integer>
    next
end

```

## Dead peer detection

By default, dead peer detection (DPD) sends probe messages every five seconds. If you are experiencing high network traffic, you can experiment with increasing the ping interval. However, longer intervals will require more traffic to detect dead peers, which will result in more traffic.



In a dynamic (dialup) connection, the *On Idle* option encourages dialup server configurations to more proactively delete tunnels if the peer is unavailable.

In the GUI, the dead peer detection option can be configured when defining phase 1 options. The following CLI commands support additional options for specifying a retry count and a retry interval.

For example, enter the following to configure DPD on the existing IPsec phase 1 configuration to use 15-second intervals and to wait for three missed attempts before declaring the peer dead and taking action.

#### To configure DPD:

```

config vpn ipsec phase1-interface
    edit <value>
        set dpd [disable | on-idle | on-demand]
        set dpd-retryinterval 15
    next
end

```

```
        set dpd-retrycount 3
    next
end
```

### DPD scalability

On a dialup server, if many VPN connections are idle, the increased DPD exchange could negatively impact the performance/load of the daemon. The `on-demand` option in the CLI triggers DPD when IPsec traffic is sent, but no reply is received from the peer.

When there is no traffic and the last DPD-ACK had been received, IKE will not send DPDs periodically. IKE will only send out DPDs if there are outgoing packets to send, but no inbound packets have since been received.

### HMAC settings

The FortiGate uses the HMAC based on the authentication proposal that is chosen in phase 1 or phase 2 of the IPsec configuration. Each proposal consists of the encryption-hash pair (such as `3des-sha256`). The FortiGate matches the most secure proposal to negotiate with the peer.

#### To view the chosen proposal and the HMAC hash used:

```
# diagnose vpn ike gateway list

vd: root/0
name: MPLS
version: 1
interface: port1 3
addr: 192.168.2.5:500 -> 10.10.10.1:500
tun_id: 10.10.10.1
virtual-interface-addr: 172.31.0.2 -> 172.31.0.1
created: 1015820s ago
IKE SA: created 1/13 established 1/13 time 10/1626/21010 ms
IPsec SA: created 1/24 established 1/24 time 0/11/30 ms

id/spi: 124 43b087dae99f7733/6a8473e58cd8990a
direction: responder
status: established 68693-68693s ago = 10ms
proposal: 3des-sha256
key: e0fa6ab8dc509b33-aa2cc549999b1823-c3cb9c337432646e
lifetime/rekey: 86400/17436
DPD sent/recvd: 000001e1/00000000
```

### Choosing IKE version 1 and 2

If you create a route-based VPN, you have the option of selecting IKE version 2. Otherwise, IKE version 1 is used.

IKEv2, defined in [RFC 4306](#), simplifies the negotiation process that creates the security association (SA).

If you select IKEv2:

- There is no choice in phase 1 of aggressive or main mode.
- Extended authentication (XAUTH) is not available.
- You can utilize EAP and MOBIKE.

## Repeated authentication in IKEv2

This feature provides the option to control whether a device requires its peer to re-authenticate or whether re-key is sufficient. It does not influence the re-authentication or re-key behavior of the device itself, which is controlled by the peer (the default being to re-key). This solution is in response to [RFC 4478](#). As described by the IETF, "the purpose of this is to limit the time that security associations (SAs) can be used by a third party who has gained control of the IPsec peer".

To configure IKE SA re-authentication:

```
config vpn ipsec phase1-interface
    edit p1
        set reauth [enable | disable]
    next
end
```

## IKEv2 quick crash detection

There is support for IKEv2 quick crash detection (QCD) as described in [RFC 6290](#).

RFC 6290 describes a method in which an IKE peer can quickly detect that the gateway peer it has and established an IKE session with has rebooted, crashed, or otherwise lost IKE state. When the gateway receives IKE messages or ESP packets with unknown IKE or IPsec SPIs, the IKEv2 protocol allows the gateway to send the peer an unprotected IKE message containing INVALID\_IKE\_SPI or INVALID\_SPI notification payloads.

RFC 6290 introduces the concept of a QCD token, which is generated from the IKE SPIs and a private QCD secret, and exchanged between peers during the protected IKE AUTH exchange.

### To configure QCD:

```
config system settings
    set ike-quick-crash-detect [enable | disable]
end
```

## IKEv1 quick crash detection

Based on the IKEv2 QCD feature previously described, IKEv1 QCD is implemented using a new IKE vendor ID (Fortinet Quick Crash Detection) so both endpoints must be FortiGates. The QCD token is sent in the phase 1 exchange and must be encrypted, so this is only implemented for IKEv1 in main mode (aggressive mode is not supported as there is no available AUTH message to include the token). Otherwise, the feature works the same as in IKEv2 (RFC 6290).

## IKEv1 fragmentation

UDP fragmentation can cause issues in IPsec when either the ISP or perimeter firewall(s) cannot pass or fragment the oversized UDP packets that occur when using a very large public security key (PSK). The result is that IPsec tunnels do not come up. The solution is IKE fragmentation.

For most configurations, enabling IKE fragmentation allows connections to automatically establish when they otherwise might have failed due to intermediate nodes dropping IKE messages containing large certificates, which typically push the packet size over 1500 bytes.

FortiOS will fragment a packet on sending if only all the following are true:

- Phase 1 contains `set fragmentation enable`.
- The packet is larger than the minimum MTU (576 for IPv4, 1280 for IPv6).
- The packet is being re-transmitted.

By default, IKE fragmentation is enabled.

#### To configure IKEv1 fragmentation:

```
config vpn ipsec phase1-interface
    edit 1
        set fragmentation [enable | disable]
    next
end
```

#### IKEv2 fragmentation

[RFC 7383](#) requires each fragment to be individually encrypted and authenticated. With IKEv2, a copy of the unencrypted payloads around for each outgoing packet would need to be kept in case the original single packet was never answered and would retry with fragments. With the following implementation, if the IKE payloads are greater than a configured threshold, the IKE packets are preemptively fragmented and encrypted.

#### To configure IKEv2 fragmentation:

```
config vpn ipsec phase1-interface
    edit ike
        set ike-version 2
        set fragmentation [enable|disable]
        set fragmentation-mtu <500-16000>
    next
end
```

#### IPsec global IKE embryonic limit

When trying to establish thousands of tunnels simultaneously, a situation can arise where new negotiations starve other SAs from progressing to an established state in IKEv2. The IKE daemon can prioritize established SAs, offload groups 20 and 21 to CP9, and optimize the default embryonic limits for mid- and high-end platforms. The IKE embryonic limit can be configured in the CLI.

```
config system ike
    set embryonic-limit <integer>
end
```

<code>embryonic-limit &lt;integer&gt;</code>	Set the maximum number of IPsec tunnels to negotiate simultaneously (50 - 20000, default = 1000).
--	---

#### To configure an IKE embryonic limit of 50:

```
config system ike
    set embryonic-limit 50
end
```

#### Pre-shared key vs digital certificates

A FortiGate can authenticate itself to remote peers or dialup clients using either a pre-shared key or a digital certificate.

## Pre-shared key

Using a pre-shared key is less secure than using certificates, especially if it is used alone, without requiring peer IDs or extended authentication (XAuth). There also needs to be a secure way to distribute the pre-shared key to the peers.

If you use pre-shared key authentication alone, all remote peers and dialup clients must be configured with the same pre-shared key. Optionally, you can configure remote peers and dialup clients with unique pre-shared keys. On the FortiGate, these are configured in user accounts, not in the phase 1 settings.

The pre-shared key must contain at least six printable characters and should be known by network administrators. For optimum protection against currently known attacks, the key must consist of a minimum of 16 randomly chosen alphanumeric characters. The limit is 128 characters.

If you authenticate the FortiGate using a pre-shared key, you can require remote peers or dialup clients to authenticate using peer IDs, but not client certificates.

### To authenticate the FortiGate using a pre-shared key:

1. Go to *VPN > IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network* section as needed.
3. Configure or edit the *Authentication* settings as follows:

Method	Pre-shared Key
<b>Pre-shared Key</b>	<string>
<b>IKE Version</b>	1 or 2
<b>Mode</b>	Aggressive or Main
<b>Peer Options</b>	Select an <i>Accept Type</i> and the corresponding peer. Options vary based on the <i>Remote Gateway</i> and <i>Authentication Method</i> settings in the <i>Network</i> section. <i>Peer Options</i> are only available in <i>Aggressive</i> mode.

4. For the *Phase 1 Proposal* section, keep the default settings unless changes are needed to meet your requirements.
5. Optionally, for authentication parameters for a dialup user group, define *XAUTH* parameters.
6. Click *OK*.

## Digital certificates

To authenticate the FortiGate using digital certificates, you must have the required certificates installed on the remote peer and on the FortiGate. The signed server certificate on one peer is validated by the presence of the root certificate installed on the other peer. If you use certificates to authenticate the FortiGate, you can also require the remote peers or dialup clients to authenticate using certificates. See [Site-to-site VPN with digital certificate on page 1608](#) for a detailed example.

### To authenticate the FortiGate using a digital certificate:

1. Go to *VPN > IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network* section as needed.

3. Configure or edit the *Authentication* settings as follows:

Method	Signature
<b>Certificate Name</b>	Select the certificate used to identify this FortiGate. If there are no imported certificates, use <i>Fortinet_Factory</i> .
<b>IKE Version</b>	1 or 2
<b>Mode</b>	<i>Aggressive</i> is recommended.
<b>Peer Options</b>	For <i>Accept Type</i> , select <i>Peer certificate</i> and select the peer and the CA certificate used to authenticate the peer. If the other end is using the Fortinet_Factory certificate, then use the <i>Fortinet_CA</i> certificate here.

4. For the *Phase 1 Proposal* section, keep the default settings unless changes are needed to meet your requirements.
5. Optionally, for authentication parameters for a dialup user group, define *XAUTH* parameters.
6. Click *OK*.

## Using XAuth authentication

Extended authentication (XAuth) increases security by requiring remote dialup client users to authenticate in a separate exchange at the end of phase 1. XAuth draws on existing FortiGate user group definitions and uses established authentication mechanisms such as PAP, CHAP, RADIUS, and LDAP to authenticate dialup clients. You can configure a FortiGate to function either as an XAuth server or client. If the server or client is attempting a connection using XAuth and the other end is not using XAuth, the failed connection attempts that are logged will not specify XAuth as the reason.

### XAuth server

A FortiGate can act as an XAuth server for dialup clients. When the phase 1 negotiation completes, the FortiGate challenges the user for a user name and password. It then forwards the user's credentials to an external RADIUS or LDAP server for verification.

If the user records on the RADIUS server have suitably configured Framed-IP-Address fields, you can assign client virtual IP addresses by XAuth instead of from a DHCP address range.

The authentication protocol you use for XAuth depends on the capabilities of the authentication server and the XAuth client:

- Select *PAP Server* whenever possible.
- You must select *PAP Server* for all implementations of LDAP and some implementations of Microsoft RADIUS.
- Select *Auto Server* when the authentication server supports *CHAP Server* but the XAuth client does not. The FortiGate will use PAP to communicate with the XAuth client and CHAP to communicate with the authentication server. You can also use *Auto Server* to allow multiple source interfaces to be defined in an IPsec/IKE policy.

Before you begin, create user accounts and user groups to identify the dialup clients that need to access the network behind the FortiGate dialup server. If password protection will be provided through an external RADIUS or LDAP server, you must configure the FortiGate dialup server to forward authentication requests to the authentication server.

### To configure XAuth to authenticate a dialup user group:

1. On the FortiGate dialup server, go to *VPN > IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network*, *Authentication*, and *Phase 1 Proposal* sections as needed.



3. In the *XAUTH* section, select the encryption method *Type* to use between the XAuth client, the FortiGate, and the authentication server.
4. For *User Group*:
  - a. Click *Inherit from policy* for multiple user groups defined in the IPsec/IKE policy, or
  - b. Click *Choose* and in the dropdown, select the user group that needs to access the private network behind the FortiGate.



Only one user group may be defined for *Auto Server*.

---

5. Click *OK*.
6. Create as many policies as needed, specifying the source user(s) and destination address.

### XAuth client

If the FortiGate acts as a dialup client, the remote peer, acting as an XAuth server, might require a username and password. You can configure the FortiGate as an XAuth client with its own username and password, which it provides when challenged.

#### To configure the FortiGate dialup client as an XAuth client:

1. On the FortiGate dialup client, go to *VPN > IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network*, *Authentication*, and *Phase 1 Proposal* sections as needed.
3. In the *XAUTH* section, for *Type*, select *Client*.
4. For *Username*, enter the FortiGate PAP, CHAP, RADIUS, or LDAP user name that the FortiGate XAuth server will compare to its records when the FortiGate XAuth client attempts to connect.
5. Enter the *Password* for the user name.
6. Click *OK*.

### Dynamic IPsec route control

You can add a route to a peer destination selector by using the `add-route` option, which is available for all dynamic IPsec phases 1 and 2, for both policy-based and route-based IPsec VPNs.

The `add-route` option adds a route to the FortiGate routing information base when the dynamic tunnel is negotiated. You can use the `distance` and `priority` options to set the distance and priority of this route. If this results in a route with the lowest distance, it is added to the FortiGate forwarding information base.

You can also enable `add-route` in any policy-based or route-based phase 2 configuration that is associated with a dynamic (dialup) phase 1. In phase 2, `add-route` can be enabled, disabled, or set to use the same route as phase 1.

The `add-route` option is enabled by default.

#### To configure add-route in phase 1:

```
config vpn ipsec
  edit <name>
    set type dynamic
    set add-route {enable | disable}
```

```

    next
end

```

### To configure add-route in phase 2:

```

config vpn ipsec {phase2 | phase2-interface}
    edit <name>
        set add-route {phase1 | enable | disable}
    next
end

```

### Blocking IPsec SA negotiation

For interface-based IPsec, IPsec SA negotiation blocking can only be removed if the peer offers a wildcard selector. If a wildcard selector is offered, then the wildcard route will be added to the routing table with the distance/priority value configured in phase 1. If that is the route with the lowest distance, it will be installed into the forwarding information base.

In this scenario, it is important to ensure that the distance value configured for phase 1 is set appropriately.

## Phase 2 configuration

After phase 1 negotiations end successfully, phase 2 begins. In Phase 2, the VPN peer or client and the FortiGate exchange keys again to establish a secure communication channel. The phase 2 proposal parameters select the encryption and authentication algorithms needed to generate keys for protecting the implementation details of security associations (SAs). The keys are generated automatically using a Diffie-Hellman algorithm.

The basic phase 2 settings associate IPsec phase 2 parameters with the phase 1 configuration that specifies the remote end point of the VPN tunnel. In most cases, you need to configure only basic Phase 2 settings.

Some settings can be configured in the CLI. The following options are available in the *VPN Creation Wizard* after the tunnel is created:

New Phase 2	
<b>Name</b>	Phase 2 definition name.
<b>Local Address</b>	<p>A value of 0.0.0.0/0 means all IP addresses behind the local VPN peer. Add a specific address or range to allow traffic from and to only this local address.</p> <p>See <a href="#">Quick mode selectors on page 1590</a>.</p>
<b>Remote Address</b>	<p>Enter the destination IP address that corresponds to the recipients or network behind the remote VPN peer. A value of 0.0.0.0/0 means all IP addresses behind the remote VPN peer.</p> <p>See <a href="#">Quick mode selectors on page 1590</a>.</p>
<b>Advanced</b>	Select the encryption and authentication algorithms that will be proposed to the remote VPN peer. To establish a VPN connection, at least one of the proposals specified must match the configuration on the remote peer.
<b>Encryption</b>	<p>The following symmetric-key encryption algorithms are available:</p> <ul style="list-style-type: none"> <li><i>NULL</i>: do not use an encryption algorithm.</li> <li><i>DES</i>: Digital Encryption Standard, a 64-bit block algorithm that uses a</li> </ul>

56-bit key.

- *3DES*: triple-DES; plain text is encrypted three times by three keys.
- *AES128*: Advanced Encryption Standard, a 128-bit block algorithm that uses a 128-bit key.
- *AES128GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 128-bit key. Only available for IKEv2.
- *AES192*: a 128-bit block algorithm that uses a 192-bit key.
- *AES256*: a 128-bit block algorithm that uses a 256-bit key.
- *AES256GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 256-bit key. Only available for IKEv2.
- *CHACHA20POLY1305*: a 128-bit block algorithm that uses a 128-bit key and a symmetric cipher. Only available for IKEv2.

See [ChaCha20 and Poly1305 AEAD cipher on page 1592](#), [AES-GCM for IKEv2 phase 1 on page 1592](#), and [HMAC settings](#).

#### Authentication

The following message digests that check the message authenticity during an encrypted session are available:

- *NULL*: do not use a message digest.
- *MD5*: message digest 5.
- *SHA1*: secure hash algorithm 1; a 160-bit message digest.
- *SHA256*: a 256-bit message digest.
- *SHA384*: a 384-bit message digest.
- *SHA512*: a 512-bit message digest.

See also [HMAC settings](#).

#### Enable Replay Detection

Replay attacks occur when an unauthorized party intercepts a series of IPsec packets and replays them back into the tunnel.

Replay detection allows the FortiGate to check all IPsec packets to see if they have been received before. If any encrypted packets arrive out of order, the FortiGate discards them.

Note that 64-bit extended sequence numbers (as described in RFC 4303, RFC 4304 as an addition to IKEv1, and RFC 5996 for IKEv2) are supported for IPsec when replay detection is enabled.

#### Enable Perfect Forward Secrecy (PFS)

Perfect forward secrecy (PFS) improves security by forcing a new Diffie-Hellman exchange whenever keylife expires.

#### Diffie-Hellman Group

Asymmetric key algorithms used for public key cryptography.

Select one or more from groups 1, 2, 5, and 14 through 32. At least one of the *Diffie-Hellman Groups* (DH) settings on the remote peer or client must match one the selections on the FortiGate. Failure to match one or more DH groups will result in failed negotiations.

#### Local Port

Enter the port number that the local VPN peer uses to transport traffic related to the specified service (protocol number). The range is from 0 to 65535. To specify all ports, select *All*, or enter 0.

<b>Remote Port</b>	Enter the port number that the remote VPN peer uses to transport traffic related to the specified service (protocol number). To specify all ports, select <i>All</i> , or enter 0.
<b>Protocol</b>	Enter the IP protocol number of the service. To specify all services, select <i>All</i> , or enter 0.
<b>Auto-negotiate</b>	Select this option for the tunnel to be automatically renegotiated when the it expires. See <a href="#">Auto-negotiate on page 1591</a> .
<b>Autokey Keep Alive</b>	Select this option for the tunnel to remain active when no data is being processed.
<b>Key Lifetime</b>	<p>Select the method for determining when the phase 2 key expires:</p> <ul style="list-style-type: none"> <li>• <i>Seconds</i></li> <li>• <i>Kilobytes</i></li> <li>• <i>Both</i></li> </ul> <p>Enter a corresponding value for <i>Seconds</i> and/or <i>Kilobytes</i> in the text boxes. If <i>Both</i> is selected, the key expires when either the time has passed or the number of kilobytes have been processed.</p>

## Quick mode selectors

Quick mode selectors determine which IP addresses can perform IKE negotiations to establish a tunnel. By only allowing authorized IP addresses access to the VPN tunnel, the network is more secure.

The default settings are as broad as possible: any IP address or configured address object using any protocol on any port.



While the dropdown menus for specifying an address also show address groups, the use of address groups may not be supported on a remote endpoint device that is not a FortiGate.

When configuring a quick mode selector for *Local Address* and *Remote Address*, valid options include IPv4 and IPv6 single addresses, subnets, or ranges.

There are some configurations that require specific selectors:

- The VPN peer is a third-party device that uses specific phase2 selectors.
- The FortiGate connects as a dialup client to another FortiGate, in which case (usually) you must specify a local IP address, IP address range, or subnet. However, this is not required if you are using dynamic routing and `mode-cfg`.

With FortiOS VPNs, your network has multiple layers of security, with quick mode selectors being an important line of defense:

- Routes guide traffic from one IP address to another.
- Phase 1 and phase 2 connection settings ensure there is a valid remote end point for the VPN tunnel that agrees on the encryption and parameters.
- Quick mode selectors allow IKE negotiations only for allowed peers.
- Security policies control which IP addresses can connect to the VPN.
- Security policies also control what protocols are allowed over the VPN along with any bandwidth limiting.

If you are editing an existing phase 2 configuration, the local address and remote address fields are unavailable if the tunnel has been configured to use firewall addresses as selectors. This option exists only in the CLI.

## Using the add-route option

Consider using the `add-route` option to add a route to a peer destination selector in phase 2 to automatically match the settings in phase 1.

### To configure add-route:

```
config vpn ipsec {phase2 | phase2-interface}
    edit <name>
        set add-route {phase1 | enable | disable}
    next
end
```

## Auto-negotiate

By default, the phase 2 security association (SA) is not negotiated until a peer attempts to send data. The triggering packet and some subsequent packets are dropped until the SA is established. Applications normally resend this data, so there is no loss, but there might be a noticeable delay in response to the user.

If the tunnel goes down, the auto-negotiate feature (when enabled) attempts to re-establish the tunnel. Auto-negotiate initiates the phase 2 SA negotiation automatically, repeating every five seconds until the SA is established.

Automatically establishing the SA can be important for a dialup peer. It ensures that the VPN tunnel is available for peers at the server end to initiate traffic to the dialup peer. Otherwise, the VPN tunnel does not exist until the dialup peer initiates traffic.

### To configure auto-negotiate:

```
config vpn ipsec phase2
    edit <phase2_name>
        set auto-negotiate enable
    next
end
```

## Installing dynamic selectors via auto-negotiate

The IPsec SA connect message generated is used to install dynamic selectors. These selectors can be installed via the auto-negotiate mechanism. When phase 2 has `auto-negotiate` enabled, and phase 1 has `mesh-selector-type` set to `subnet`, a new dynamic selector will be installed for each combination of source and destination subnets. Each dynamic selector will inherit the auto-negotiate option from the template selector and begin SA negotiation. Phase 2 selector sources from dialup clients will all establish SAs without traffic being initiated from the client subnets to the hub.

## DHCP

The `dhcp-ipsec` option lets the FortiGate assign VIP addresses to FortiClient dialup clients through a DHCP server or relay. This option is only available if the remote gateway in the phase 1 configuration is set to dialup user, and it only works in policy-based VPNs.

With `dhcp-ipsec`, the FortiGate dialup server acts as a proxy for FortiClient dialup clients that have VIP addresses on the subnet of the private network behind the FortiGate. In this case, the FortiGate dialup server acts as a proxy on the

local private network for the FortiClient dialup client. A host on the network behind the dialup server issues an ARP request, corresponding to the device MAC address of the FortiClient host (when a remote server sends an ARP to the local FortiClient dialup client). The FortiGate then answers the ARP request on behalf of the FortiClient host, and then forwards the associated traffic to the FortiClient host through the tunnel.

Acting as a proxy prevents the VIP address assigned to the FortiClient dialup client from causing possible ARP broadcast problems—the normal and VIP addresses can confuse some network switches when two addresses have the same MAC address.

## ChaCha20 and Poly1305 AEAD cipher

In IKEv2 to support [RFC 7634](#), the ChaCha20 and Poly1305 crypto algorithms can be used together as a combined mode AEAD cipher (like AES-GCM) in the `crypto_ftnt` cipher in `cipher_chacha20poly1305.c`:

```
config vpn ipsec phase2-interface
    edit <name>
        set phase1name <name>
        set proposal chacha20poly1305
    next
end
```

## AES-GCM for IKEv2 phase 1


In IKEv2 to support [RFC 5282](#), the AEAD algorithm AES-GCM supports 128- and 256-bit variants:

```
config vpn ipsec phase2-interface
    edit <name>
        set phase1name <name>
        set proposal [aes128gcm | aes256gcm]
    next
end
```

## VPN security policies

This section explains how to specify the source and destination IP addresses of traffic transmitted through an IPsec VPN, and how to define appropriate security policies.

## Topology

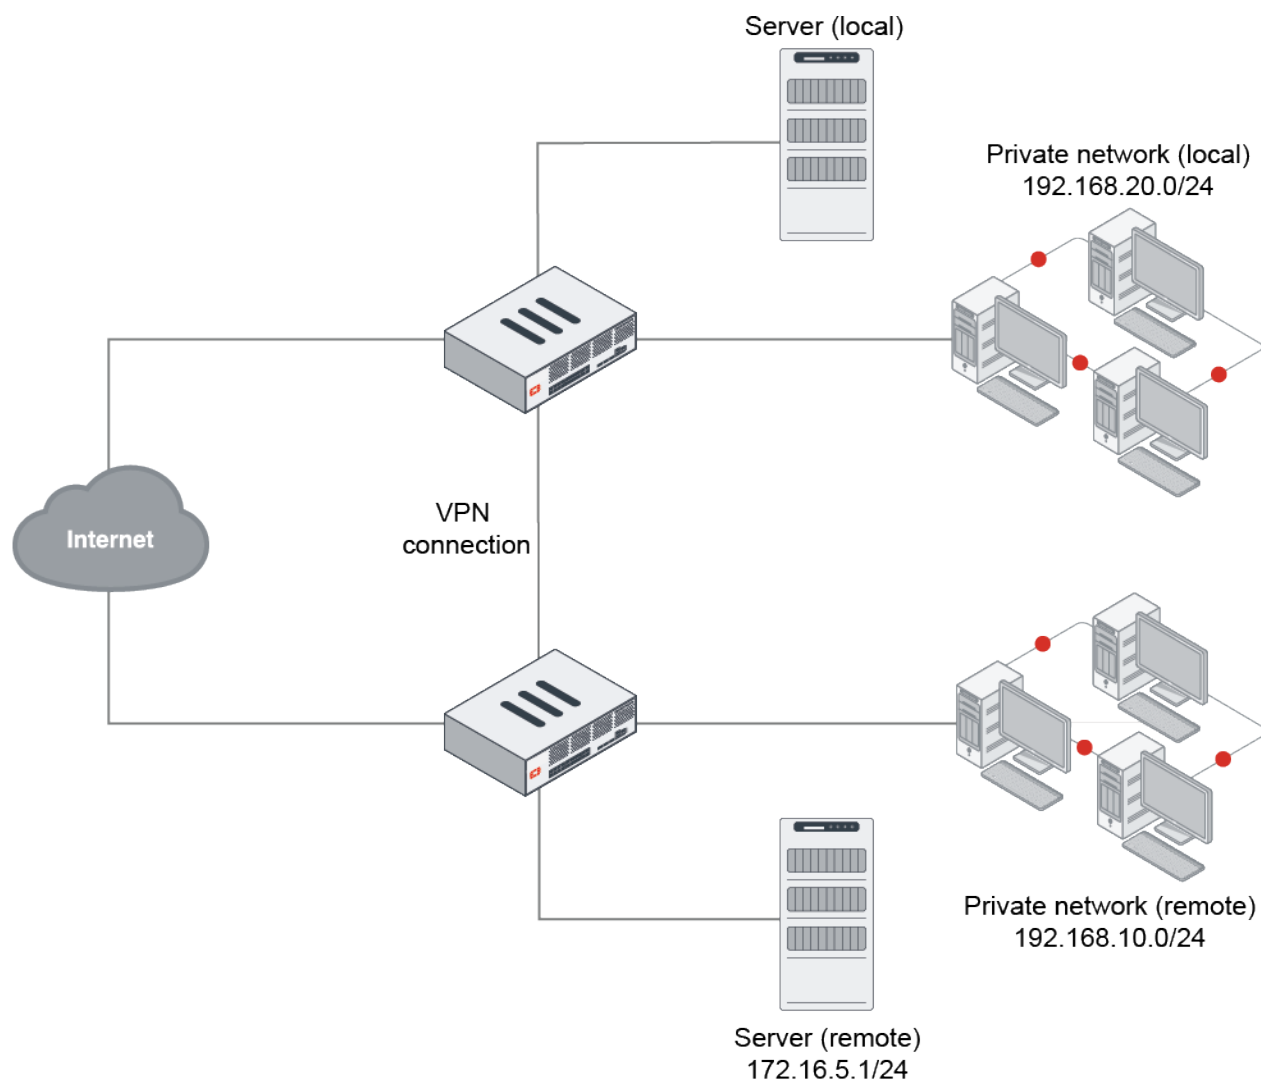

## Defining policy addresses

In a gateway-to-gateway, hub-and-spoke, dynamic DNS, redundant tunnel, or transparent configuration, you need to define a policy address for the private IP address of the network behind the remote VPN peer (for example, 192.168.10.0/255.255.255.0 or 192.168.10.0/24).

In a peer-to-peer configuration, you need to define a policy address for the private IP address of a server or host behind the remote VPN peer (for example, 172.16.5.1/255.255.255.255, 172.16.5.1/32, or 172.16.5.1).

For a FortiGate dialup server in a dialup-client or internet-browsing configuration, the source IP should reflect the IP addresses of the dialup clients:

## Defining security policies

Policy-based and route-based VPNs require different security policies.

- A policy-based VPN requires an IPsec policy. You specify the interface to the private network, the interface to the remote peer and the VPN tunnel. A single policy can enable traffic inbound, outbound, or in both directions.
- A route-based VPN requires an accept policy for each direction. For the source and destination interfaces, you specify the interface to the private network and the virtual IPsec interface (phase 1 configuration) of the VPN. The IPsec interface is the destination interface for the outbound policy and the source interface for the inbound policy. One security policy must be configured for each direction of each VPN interface.



If the policy that grants the VPN connection is limited to certain services, DHCP must be included, otherwise the client will not be able to retrieve a lease from the FortiGate's (IPsec) DHCP server because the DHCP request (coming out of the tunnel) will be blocked.

---

## Policy-based VPN

An IPsec policy enables the transmission and reception of encrypted packets, specifies the permitted direction of VPN traffic, and selects the VPN tunnel. In most cases, a single policy is needed to control both inbound and outbound IP traffic through a VPN tunnel. For a detailed example, see [Policy-based IPsec tunnel on page 1624](#). Be aware of the following before creating an IPsec policy.

## Allow traffic to be initiated from the remote site

Policies specify which IP addresses can initiate a tunnel. By default, traffic from the local private network initiates the tunnel. When the *Allow traffic to be initiated from the remote site* option is selected, traffic from a dialup client, or a computer on a remote network, initiates the tunnel. Both can be enabled at the same time for bi-directional initiation of the tunnel.

## Outbound and inbound NAT

When a FortiGate operates in NAT mode, you can enable inbound or outbound NAT. Outbound NAT may be performed on outbound encrypted packets or IP packets in order to change their source address before they are sent through the tunnel. Inbound NAT is performed to intercept and decrypt emerging IP packets from the tunnel.

By default, these options are not selected in security policies and can only be set through the CLI.

## Defining multiple IPsec policies for the same tunnel

You must define at least one IPsec policy for each VPN tunnel. If the same remote server or client requires access to more than one network behind a local FortiGate, the FortiGate must be configured with an IPsec policy for each network. Multiple policies may be required to configure redundant connections to a remote destination or control access to different services at different times.

To ensure a secure connection, the FortiGate must evaluate policies with *Action* set to *IPsec* before *ACCEPT* and *DENY*. Because the FortiGate unit reads policies starting at the top of the list, you must move all IPsec policies to the top of the list, and be sure to reorder your multiple IPsec policies that apply to the tunnel so that specific constraints can be evaluated before general constraints. If you create two equivalent IPsec policies for two different tunnels, the system will select the correct policy based on the specified source and destination addresses.





Adding multiple IPsec policies for the same VPN tunnel can cause conflicts if the policies specify similar source and destination addresses, but have different settings for the same service. When policies overlap in this manner, the system may apply the wrong IPsec policy or the tunnel may fail.

## Route-based VPN

When you define a route-based VPN, you create a virtual IPsec interface on the physical interface that connects to the remote peer. You create ordinary accept policies to enable traffic between the IPsec interface and the interface that connects to the private network. This makes configuration simpler than for policy-based VPNs.

### To configure policies for a route-based VPN:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* and define an *ACCEPT* policy to permit communication between the local private network and the private network behind the remote peer and enter these settings in particular:

<b>Name</b>	Enter a name for the security policy.
<b>Incoming Interface</b>	Select the interface that connects to the private network behind this FortiGate.
<b>Outgoing Interface</b>	Select the IPsec interface you configured.
<b>Source</b>	Select the address name you defined for the private network behind this FortiGate.
<b>Destination</b>	Select the address name you defined for the private network behind the remote peer.
<b>Action</b>	Select <i>ACCEPT</i> .
<b>NAT</b>	Disable <i>NAT</i> .

3. Click *OK*.  
To permit the remote client to initiate communication, you need to define a security policy for communication in that direction.
4. Click *Create New* and enter these settings in particular:

<b>Name</b>	Enter a name for the security policy.
<b>Incoming Interface</b>	Select the IPsec interface you configured.
<b>Outgoing Interface</b>	Select the interface that connects to the private network behind this FortiGate.
<b>Source</b>	Select the address name you defined for the private network behind the remote peer.
<b>Destination</b>	Select the address name you defined for the private network behind this FortiGate.
<b>Action</b>	Select <i>ACCEPT</i> .
<b>NAT</b>	Disable <i>NAT</i> .

5. Click *OK*.

## Blocking unwanted IKE negotiations and ESP packets with a local-in policy

It is not unusual to receive IPsec connection attempts or malicious IKE packets from all over the internet. Malicious parties use these probes to try to establish an IPsec tunnel in order to gain access to your private network. A good way to prevent this is to use local-in policies to deny such traffic.

Sometimes there are malicious attempts using crafted invalid ESP packets. These invalid attempts are automatically blocked by the FOS IPsec local-in handler when it checks the SPI value against the SAs of existing tunnels. The IPsec local-in handler processes the packet instead of the firewall's local-in handler. So when these attempts are blocked, you will notice an `unknown SPI` message in your VPN logs instead of being silently blocked by your local-in policy. These log messages are rate limited.

### Sample log and alert email

Message meets Alert condition

```
date=2020-08-11 time=09:28:40 devname=toSite1 devid=FGT60Fxxxxxxxxx logid="0101037131"
type="event" subtype="vpn" level="error" vd="root" eventtime=1597163320747963100 tz="-0700"
logdesc="IPsec ESP" msg="IPsec ESP" action="error" remip=131.62.25.102 locip=192.157.116.88
remport=40601 locport=500 outintf="wan1" cookies="N/A" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=N/A vpntunnel="N/A" status="esp_error" error_
num="Received ESP packet with unknown SPI." spi="f6c9e2x1" seq="02000400"
```

The ESP packet handling process has the detection of unknown ESP packets enabled by default. You can disable the detection of unknown ESP packets using the `detect-unknown-esp` command.

### To configure unknown ESP packet detection:

```
config system settings
    set detect-unknown-esp {enable | disable}
end
```

Note that invalid SPIs may not always indicate malicious activity. For example, the SPI may not match during rekey, or when one unit flushes its tunnel SAs. Administrators should collect as much information as possible before making a conclusion.

### To block undesirable IPsec connection attempts and IKE packets using a local-in policy:

#### 1. Configure an address group that excludes legitimate IPs:

```
config firewall addrgrp
    edit "All_exceptions"
        set member "all"
        set exclude enable
        set exclude-member "remote-vpn"
    next
end
```

#### 2. Create a local-in policy that blocks IKE traffic from the address group:

```
config firewall local-in-policy
    edit 1
        set intf "wan1"
        set srcaddr "All_exceptions"
        set dstaddr "all"
        set service "IKE"
```

```

        set schedule "always"
    next
end

```



The default action is deny.

### 3. Verify the traffic blocked by the local-in policy:

```

# diagnose debug flow filter dport 500
# diagnose debug flow trace start 10
# diagnose debug enable

id=20085 trace_id=290 func=print_pkt_detail line=5588 msg="vd-root:0 received a packet
(proto=17, 10.10.10.13:500->10.10.10.1:500) from wan1. "
id=20085 trace_id=290 func=init_ip_session_common line=5760 msg="allocate a new session-
003442e7"
id=20085 trace_id=290 func=vf_ip_route_input_common line=2598 msg="find a route:
flag=84000000 gw=10.10.10.1 via root"
id=20085 trace_id=290 func=fw_local_in_handler line=430 msg="iprope_in_check() check
failed on policy 1, drop"

```

## Configurable IKE port

Some ISPs block UDP port 500 or UDP port 4500, preventing an IPsec VPN from being negotiated and established. To accommodate this, the IKE port can be changed.

### To set the IKE port:

```

config system settings
    set ike-port <integer>
end

```

ike-port

UDP port for IKE/IPsec traffic (1024 - 65535, default = 500).

## Example 1: site-to-site VPN without NAT

In this example, the IKE port is set to 6000 on the two site-to-site VPN gateways. There is no NAT between the VPN gateways, but the ISP has blocked UDP port 500. A site-to-site VPN is established using the defined IKE port.

### To set the IKE port:

```

config system settings
    set ike-port 6000
end

```

## To configure and check the site-to-site VPN:

### 1. Configure the phase1 and phase2 interfaces:

```
config vpn ipsec phase1-interface
    edit "s2s"
        set interface "port27"
        set ike-version 2
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128gcm-prfsha256 aes256gcm-prfsha384
        set wizard-type static-fortigate
        set remote-gw 11.101.1.1
        set psksecret *****
    next
end
config vpn ipsec phase2-interface
    edit "s2s"
        set phase1name "s2s"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        set src-addr-type name
        set dst-addr-type name
        set src-name "s2s_local"
        set dst-name "s2s_remote"
    next
end
```

### 2. Check the IKE gateway list and confirm that the specified port is used:

```
# diagnose vpn ike gateway list

vd: root/0
name: s2s
version: 2
interface: port27 17
addr: 173.1.1.1:6000 -> 11.101.1.1:6000
tun_id: 11.101.1.1
remote_location: 0.0.0.0
created: 194s ago
PPK: no
IKE SA: created 1/2 established 1/2 time 0/4500/9000 ms
IPsec SA: created 1/2 established 1/2 time 0/4500/9000 ms
...
```

### 3. Check the VPN tunnel list:

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=s2s ver=2 serial=1 173.1.1.1:6000->11.101.1.1:6000 tun_id=11.101.1.1 dst_mtu=1500
dpd-link=on remote_location=0.0.0.0 weight=1
bound_if=17 lgwy=static/1 tun=tunnel/15 mode=auto/1 encaps=none/520 options[0208]=npu
frag-rfc run_state=0 accept_traffic=1 overlay_id=0
...
```

## Example 2: dialup VPN with NAT

In this example, the IKE port is set to 5000 on the VPN gateway and the dialup peer. The dialup peer is behind NAT, so NAT traversal (NAT-T) is used. The ISP blocks both UDP port 500 and UDP port 4500. The VPN connection is initiated on UDP port 5000 from the dialup VPN client and remains on port 5000 since NAT-T floating to 4500 is only required when the IKE port is 500.

### To set the IKE port:

```
config system settings
    set ike-port 5000
end
```

### To configure and check the dialup VPN with NAT:

#### 1. Configure the phase1 and phase2 interfaces:

```
config vpn ipsec phase1-interface
    edit "server"
        set type dynamic
        set interface "port27"
        set ike-version 2
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128gcm-prfsha256 aes256gcm-prfsha384
        chacha20poly1305-prfsha256
        set dpd on-idle
        set wizard-type static-fortigate
        set psksecret *****
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "server"
        set phase1name "server"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set src-addr-type name
        set dst-addr-type name
        set src-name "server_local"
        set dst-name "server_remote"
    next
end
```

#### 2. Check the IKE gateway list and confirm that the specified port is used:

```
# diagnose vpn ike gateway list

vd: root/0
name: server_0
version: 2
interface: port27 17
addr: 173.1.1.1:5000 -> 173.1.1.2:65416
tun_id: 173.1.1.2
remote_location: 0.0.0.0
created: 90s ago
```

```

nat: peer
PPK: no
IKE SA: created 1/1  established 1/1  time 0/0/0 ms
IPsec SA: created 1/1  established 1/1  time 0/0/0 ms
...

```

### 3. Check the VPN tunnel list:

```


# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=server_0 ver=2 serial=a 173.1.1.1:5000->173.1.1.2:65416 tun_id=173.1.1.2 dst_
mtu=1500 dpd-link=on remote_location=0.0.0.0 weight=1
bound_if=17 lgwy=static/1 tun=tunnel/15 mode=dial_inst/3 encap=none/904 options
[0388]=npu rgwy-chg rport-chg frag-rfc run_state=0 accept_traffic=1 overlay_id=0
...

```

## IPsec VPN IP address assignments

When a user disconnects from a VPN tunnel, it is not always desirable for the released IP address to be used immediately. In IPsec VPN, IP addresses can be held for the specified delay interval before being released back into the pool for assignment. The first-available address assignment method is still used.

### Example

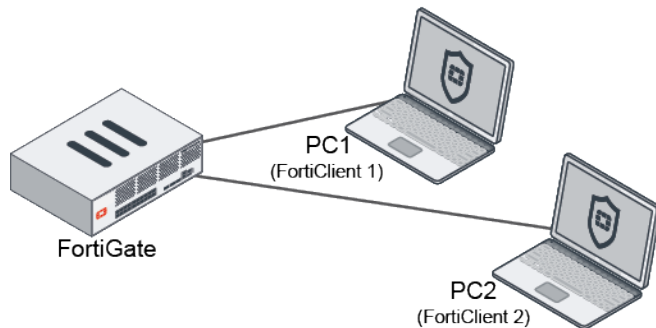

In this example, two PCs connect to the VPN. The IP address reuse delay interval is used to prevent a released address from being reused for at least four minutes. After the interval elapses, the IP address becomes available to clients again. Dual stack address assignment (both IPv4 and IPv6) is used.

### To configure IPsec VPN with an IP address reuse delay interval:

1. Configure the IPsec phase1 interface, setting the IP address reuse delay interval to 240 seconds:

```

config vpn ipsec phase1-interface
  edit "FCT"
    set type dynamic
    set interface "port27"
    set mode aggressive
    set peertype any
    set net-device disable
    set mode-cfg enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set wizard-type dialup-forticlient

```

```

        set xauthtype auto
        set authusrgrp "local-group"
        set ipv4-start-ip 10.20.1.1
        set ipv4-end-ip 10.20.1.100
        set dns-mode auto
        set ipv4-split-include "FCT_split"
        set ipv6-start-ip 2001::1
        set ipv6-end-ip 2001::2
        set ip-delay-interval 240
        set save-password enable
        set psksecret *****
    next
end

```

## 2. Configure the IPsec phase2 interface:

```

config vpn ipsec phase2-interface
    edit "FCT"
        set phaselname "FCT"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
    edit "FCT6"
        set phaselname "FCT"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set src-addr-type subnet6
        set dst-addr-type subnet6
    next
end

```

## To test the results:

### 1. Connect to the VPN with FortiClient 1 on PC1 then check the assigned IP address:

```

# diagnose vpn ike gateway list

vd: root/0
name: FCT_0
version: 1
interface: port27 17
addr: 173.1.1.1:4500 -> 173.1.1.2:60417
tun_id: 173.1.1.2
remote_location: 0.0.0.0
virtual-interface-addr: 169.254.1.1 -> 169.254.1.1
created: 14s ago
xauth-user: userc
2FA: no
FortiClient UID: 7C0897D80C8E4B6DAC775DD6B0F93BAA
assigned IPv4 address: 10.20.1.1/255.255.255.255
assigned IPv6 address: 2001::1/128
nat: peer
IKE SA: created 1/1 established 1/1 time 100/100/100 ms
IPsec SA: created 2/2 established 2/2 time 0/5/10 ms

id/spi: 2 66140ba3e38b9b07/b64668f110ca4a48
direction: responder

```

```

status: established 14-14s ago = 100ms
proposal: aes256-sha256
key: 356637ee6e9a9cb5-fade432c09efb8aa-54be307fc1eeab5-6e4b9ef19f98d5fa
lifetime/rekey: 86400/86115
DPD sent/recvd: 00000000/00000394

```

2. Disconnect FortiClient 1 and connect with FortiClient 2. The IP address assigned to FortiClient 1 is not released to the pool, and a different IP address is assigned to FortiClient 2:

```

# diagnose vpn ike gateway list

vd: root/0
name: FCT_0
version: 1
interface: port27 17
addr: 173.1.1.1:4500 -> 173.1.1.2:64916
tun_id: 173.1.1.2
remote_location: 0.0.0.0
virtual-interface-addr: 169.254.1.1 -> 169.254.1.1
created: 6s ago
xauth-user: usera
2FA: no
FortiClient UID: EAF90E297393456AB546A041066C0720
assigned IPv4 address: 10.20.1.2/255.255.255.255
assigned IPv6 address: 2001::2/128
nat: peer
IKE SA: created 1/1 established 1/1 time 110/110/110 ms
IPsec SA: created 2/2 established 2/2 time 0/5/10 ms

id/spi: 3 b25141d5a915e67e/b32decdb8cf98318
direction: responder
status: established 6-6s ago = 110ms
proposal: aes256-sha256
key: 374ab753f3207ea0-83496b5cb24b5a8d-c51da1fd505cf3a4-727884839897808a
lifetime/rekey: 86400/86123
DPD sent/recvd: 00000000/00000453

```

3. Wait for 240 seconds, then disconnect and reconnect FortiClient 2. The IP address previously assigned to FortiClient 1 has been released back to the pool, and is assigned to FortiClient 2:

```

# diagnose vpn ike gateway list

vd: root/0
name: FCT_0
version: 1
interface: port27 17
addr: 173.1.1.1:4500 -> 173.1.1.2:64916
tun_id: 173.1.1.2
remote_location: 0.0.0.0
virtual-interface-addr: 169.254.1.1 -> 169.254.1.1
created: 20s ago
xauth-user: usera
2FA: no
FortiClient UID: EAF90E297393456AB546A041066C0720
assigned IPv4 address: 10.20.1.1/255.255.255.255
assigned IPv6 address: 2001::1/128
nat: peer

```



```
IKE SA: created 1/1  established 1/1  time 100/100/100 ms
IPsec SA: created 2/2  established 2/2  time 0/0/0 ms
```

```
id/spi: 4 fb1fbad0c12f5476/aa06a2de76964f63
direction: responder
status: established 20-20s ago = 100ms
proposal: aes256-sha256
key: af43f1bb876dc79c-16448592fe608dc3-f251746d71b2c35d-c848e8c03bf738e9
lifetime/rekey: 86400/86109
DPD sent/rcv: 00000000/000000a9
```



Instead of waiting for 240 seconds, you can instead use the `diagnose vpn ike gateway flush` command to release the previously used IP addresses back into the pool.

## Site-to-site VPN

A site-to-site VPN connection lets branch offices use the Internet to access the main office's intranet. A site-to-site VPN allows offices in multiple, fixed locations to establish secure connections with each other over a public network such as the Internet.

The following sections provide instructions for configuring site-to-site VPNs:

- [FortiGate-to-FortiGate on page 1603](#)
- [FortiGate-to-third-party on page 1631](#)


### FortiGate-to-FortiGate

This section contains the following topics about FortiGate-to-FortiGate VPN configurations:

- [Basic site-to-site VPN with pre-shared key on page 1603](#)
- [Site-to-site VPN with digital certificate on page 1608](#)
- [Site-to-site VPN with overlapping subnets on page 1615](#)
- [GRE over IPsec on page 1619](#)
- [Policy-based IPsec tunnel on page 1624](#)

#### Basic site-to-site VPN with pre-shared key

This is a sample configuration of IPsec VPN authenticating a remote FortiGate peer with a pre-shared key.

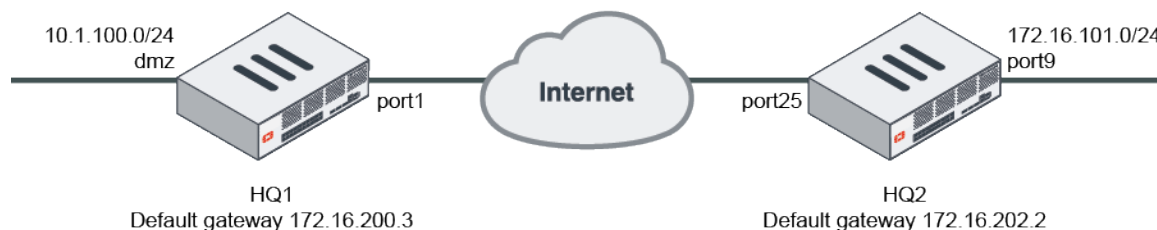

**To configure IPsec VPN authenticating a remote FortiGate peer with a pre-shared key in the GUI:**

1. Configure the HQ1 FortiGate.
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *No NAT Between Sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. For the IP address, enter *172.16.202.1*.
    - iii. For *Outgoing interface*, enter *port1*.
    - iv. For *Authentication Method*, select *Pre-shared Key*.
    - v. In the *Pre-shared Key* field, enter *sample* as the key.
    - vi. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the local interface.
    - ii. Configure the *Local Subnets* as *10.1.100.0*.
    - iii. Configure the *Remote Subnets* as *172.16.101.0*.
    - iv. Click *Create*.
2. Configure the HQ2 FortiGate.
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *No NAT Between Sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. For the IP address, enter *172.16.2001*.
    - iii. For *Outgoing interface*, enter *port25*.
    - iv. For *Authentication Method*, select *Pre-shared Key*.
    - v. In the *Pre-shared Key* field, enter *sample* as the key.
    - vi. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the local interface.
    - ii. Configure *Local Subnets* as *172.16.101.0*.
    - iii. Configure the *Remote Subnets* as *10.1.100.0*.
    - iv. Click *Create*.

**To configure IPsec VPN authenticating a remote FortiGate peer with a pre-shared key using the CLI:**

1. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. The IPsec tunnel is established over the WAN interface.

**a. Configure HQ1.**

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 172.16.200.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.200.3
    set device "port1"
  next
end
```

**b. Configure HQ2.**

```
config system interface
  edit "port25"
    set vdom "root"
    set ip 172.16.202.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.202.2
    set device "port25"
  next
end
```

**2. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.****a. Configure HQ1.**

```
config system interface
  edit "dmz"
    set vdom "root"
    set ip 10.1.100.1 255.255.255.0
  next
end
```

**b. Configure HQ2.**

```
config system interface
  edit "port9"
    set vdom "root"
    set ip 172.16.101.1 255.255.255.0
  next
end
```

**3. Configure the IPsec phase1-interface.****a. Configure HQ1.**

```
config vpn ipsec phase1-interface
  edit "to_HQ2"
    set interface "port1"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
```

```

        set remote-gw 172.16.202.1
        set psksecret sample
    next
end

```

**b. Configure HQ2.**

```

config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface "port25"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set psksecret sample
    next
end

```

**4. Configure the IPsec phase2-interface.**

**a. Configure HQ1.**

```

config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

**b. Configure HQ2.**

```

config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

**5. Configure the static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.**

**a. Configure HQ1.**

```

config router static
    edit 2
        set dst 172.16.101.0 255.255.255.0
        set device "to_HQ2"
    next
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end

```

**b. Configure HQ2.**

```
config router static
  edit 2
    set dst 10.1.100.0 255.255.255.0
    set device "to_HQ1"
  next
  edit 3
    set dst 10.1.100.0 255.255.255.0
    set blackhole enable
    set distance 254
  next
end
```

**6. Configure two firewall policies to allow bidirectional IPsec traffic flow over the IPsec VPN tunnel.****a. Configure HQ1.**

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ2"
    set dstintf "dmz"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "dmz"
    set dstintf "to_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end
```

**b. Configure HQ2.**

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ1"
    set dstintf "port9"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "port9"
    set dstintf "to_HQ1"
    set srcaddr "172.16.101.0"
```

```

        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

7. Run **diagnose commands**. The **diagnose debug application ike -1** command is the key to troubleshoot why the IPsec tunnel failed to establish. If the PSK failed to match, the following error shows up in the debug output:

```

ike 0:to_HQ2:15037: parse error
ike 0:to_HQ2:15037: probable pre-shared secret mismatch'

```

The following commands are useful to check IPsec phase1/phase2 interface status.

- a. Run the **diagnose vpn ike gateway list** command on HQ1. The system should return the following:

```

vd: root/0
name: to_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 5s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 2/2 established 2/2 time 0/0/0 ms
id/spi: 12 6e8d0532e7fe8d84/3694ac323138a024
direction: responder
status: established 5-5s ago = 0ms
proposal: aes128-sha256
key: b3efb46d0d385aff-7bb9ee241362ee8d
lifetime/rekey: 86400/86124
DPD sent/recvd: 00000000/00000000

```

- b. Run the **diagnose vpn tunnel list** command on HQ1. The system should return the following:


```

list all ipsec tunnel in vd 0
name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfcaccept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=7 olast=87 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42927/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=42930/43200
dec: spi=ef9ca700 esp=aes key=16 a2c6584bf654d4f956497b3436f1cfc7
ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0

```

## Site-to-site VPN with digital certificate

This is a sample configuration of IPsec VPN authenticating a remote FortiGate peer with a certificate. The certificate on one peer is validated by the presence of the CA certificate installed on the other peer.

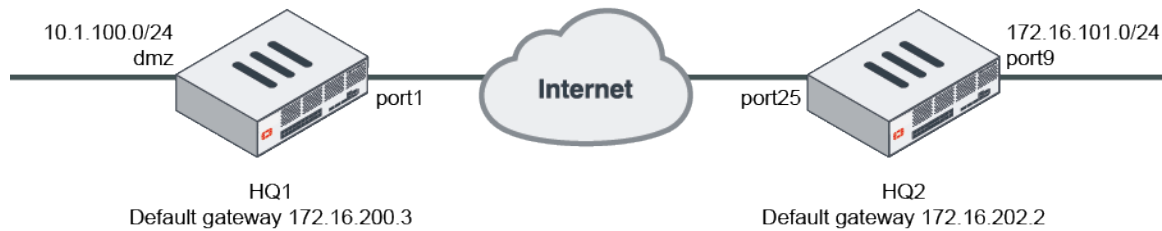

**To configure IPsec VPN authenticating a remote FortiGate peer with a digital certificate in the GUI:**

1. Import the certificate.
2. Configure user peers.
3. Configure the HQ1 FortiGate.
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *No NAT Between Sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. For the IP address, enter *172.16.202.1*.
    - iii. For *Outgoing interface*, enter *port1*.
    - iv. For *Authentication Method*, select *Signature*.
    - v. In the *Certificate name* field, select the imported certificate.
    - vi. From the *Peer Certificate CA* dropdown list, select the desired peer CA certificate.
    - vii. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the local interface.
    - ii. Configure the *Local Subnets* as *10.1.100.0*.
    - iii. Configure the *Remote Subnets* as *172.16.101.0*.
    - iv. Click *Create*.
4. Configure the HQ2 FortiGate.
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *No NAT Between Sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. For the IP address, enter *172.16.200.1*.
    - iii. For *Outgoing interface*, enter *port25*.
    - iv. For *Authentication Method*, select *Signature*.
    - v. In the *Certificate name* field, select the imported certificate.

- vi. From the *Peer Certificate CA* dropdown list, select the peer CA certificate.
- vii. Click *Next*.
- c. Configure the following settings for *Policy & Routing*:
  - i. From the *Local Interface* dropdown menu, select the local interface.
  - ii. Configure *Local Subnets* as *172.16.101.0*.
  - iii. Configure the *Remote Subnets* as *10.1.100.0*.
  - iv. Click *Create*.

**To configure IPsec VPN authenticating a remote FortiGate peer with a digital certificate using the CLI:**

1. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. The IPsec tunnel is established over the WAN interface.

**a. Configure HQ1.**

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 172.16.200.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.200.3
    set device "port1"
  next
end
```

**b. Configure HQ2.**

```
config system interface
  edit "port25"
    set vdom "root"
    set ip 172.16.202.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.202.2
    set device "port25"
  next
end
```

2. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.

**a. Configure HQ1.**

```
config system interface
  edit "dmz"
    set vdom "root"
    set ip 10.1.100.1 255.255.255.0
  next
end
```



**b. Configure HQ2.**

```
config system interface
  edit "port9"
    set vdom "root"
    set ip 172.16.101.1 255.255.255.0
  next
end
```

- 3. Configure the import certificate and its CA certificate information.** The certificate and its CA certificate must be imported on the remote peer FortiGate and on the primary FortiGate before configuring IPsec VPN tunnels. If the built-in Fortinet\_Factory certificate and the Fortinet\_CA CA certificate are used for authentication, you can skip this step.

**a. Configure HQ1.**

```
config vpn certificate local
  edit "test1"
    ...
    set range global
  next
end
config vpn certificate ca
  edit "CA_Cert_1"
    ...
    set range global
  next
end
```

**b. Configure HQ2.**

```
config vpn certificate local
  edit "test2"
    ...
    set range global
  next
end
config vpn certificate ca
  edit "CA_Cert_1"
    ...
    set range global
  next
end
```

- 4. Configure the peer user.** The peer user is used in the IPsec VPN tunnel peer setting to authenticate the remote peer FortiGate.

**a. If not using the built-in Fortinet\_Factory certificate and Fortinet\_CA CA certificate, do the following:****i. Configure HQ1.**

```
config user peer
  edit "peer1"
    set ca "CA_Cert_1"
  next
end
```

**ii. Configure HQ2.**

```
config user peer
  edit "peer2"
    set ca "CA_Cert_1"
```

```
    next
end
```

- b.** If the built-in Fortinet\_Factory certificate and Fortinet\_CA CA certificate are used for authentication, the peer user must be configured based on Fortinet\_CA.

**i.** Configure HQ1.

```
config user peer
    edit "peer1"
        set ca "Fortinet_CA"
    next
end
```

**ii.** Configure HQ2.

```
config user peer
    edit "peer2"
        set ca "Fortinet_CA"
    next
end
```

**5.** Configure the IPsec phase1-interface.

**a.** Configure HQ1.

```
config vpn ipsec phase1-interface
    edit "to_HQ2"
        set interface "port1"
        set authmethod signature
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set certificate "test1"
        set peer "peer1"
    next
end
```

**b.** Configure HQ2.

```
config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface "port25"
        set authmethod signature
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set certificate "test2"
        set peer "peer2"
    next
end
```

**6.** Configure the IPsec phase2-interface.

**a.** Configure HQ1.

```
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phasename "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
```

```

    next
end

```

**b. Configure HQ2.**

```

config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

- 7. Configure the static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.**

**a. Configure HQ1.**

```

config router static
    edit 2
        set dst 172.16.101.0 255.255.255.0
        set device "to_HQ2"
    next
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end

```

**b. Configure HQ2.**

```

config router static
    edit 2
        set dst 10.1.100.0 255.255.255.0
        set device "to_HQ1"
    next
    edit 3
        set dst 10.1.100.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end

```

- 8. Configure two firewall policies to allow bidirectional IPsec traffic flow over the IPsec VPN tunnel.**

**a. Configure HQ1.**

```

config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next

```

```

edit 2
    set name "outbound"
    set srcintf "dmz"
    set dstintf "to_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
end

```

**b. Configure HQ2.**

```

config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "outbound"
        set srcintf "port9"
        set dstintf "to_HQ1"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

- 9. Run diagnose commands.** The diagnose debug application ike -1 command is the key to troubleshoot why the IPsec tunnel failed to establish. If the remote FortiGate certificate cannot be validated, the following error shows up in the debug output:

```
ike 0: to_HQ2:15314: certificate validation failed
```

The following commands are useful to check IPsec phase1/phase2 interface status.

- a. Run the diagnose vpn ike gateway list command on HQ1.** The system should return the following:

```

vd: root/0
name: to_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 7s ago
peer-id: C = CA, ST = BC, L = Burnaby, O = Fortinet, OU = QA, CN = test2
peer-id-auth: yes
IKE SA: created 1/1 established 1/1 time 70/70/70 ms
IPsec SA: created 1/1 established 1/1 time 80/80/80 ms
id/spi: 15326 295be407fbddfc13/7a5a52afa56adf14 direction: initiator status:

```

```
established 7-7s ago = 70ms proposal: aes128-sha256 key: 4aa06dbee359a4c7-
43570710864bcf7b lifetime/rekey: 86400/86092 DPD sent/recvd: 00000000/00000000 peer-
id: C = CA, ST = BC, L = Burnaby, O = Fortinet, OU = QA, CN = test2
```

- b. Run the `diagnose vpn tunnel list` command on HQ1. The system should return the following:


```
list all ipsec tunnel in vd 0
name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.200.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfcaccept_traffic=1
proxyid_num=1 child_num=0 refcnt=14 ilast=19 olast=179 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vpn-f proto=0 sa=1 ref=2 serial=1 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42717/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=42897/43200
dec: spi=72e87de7 esp=aes key=16 8b2b93e0c149d6f22b1c0b96ea450e6c
ah=sha1 key=20 facc655e5f33beb7c2b12e718a6d55413ce3efa2
enc: spi=5c52c865 esp=aes key=16 8d0c4e4adbf2338beed569b2b3205ece
ah=sha1 key=20 553331628612480ab6d7d563a00e2a967ebabdd
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```

## Site-to-site VPN with overlapping subnets

This is a sample configuration of IPsec VPN to allow transparent communication between two overlapping networks that are located behind different FortiGates using a route-based tunnel with source and destination NAT.

In the following topology, both FortiGates (HQ and Branch) use 192.168.1.0/24 as their internal network, but both networks need to be able to communicate to each other through the IPsec tunnel.

New virtual subnets of equal size must be configured and used for all communication between the two overlapping subnets. The devices on both local networks do not need to change their IP addresses. However, the devices and users must use the new subnet range of the remote network to communicate across the tunnel.

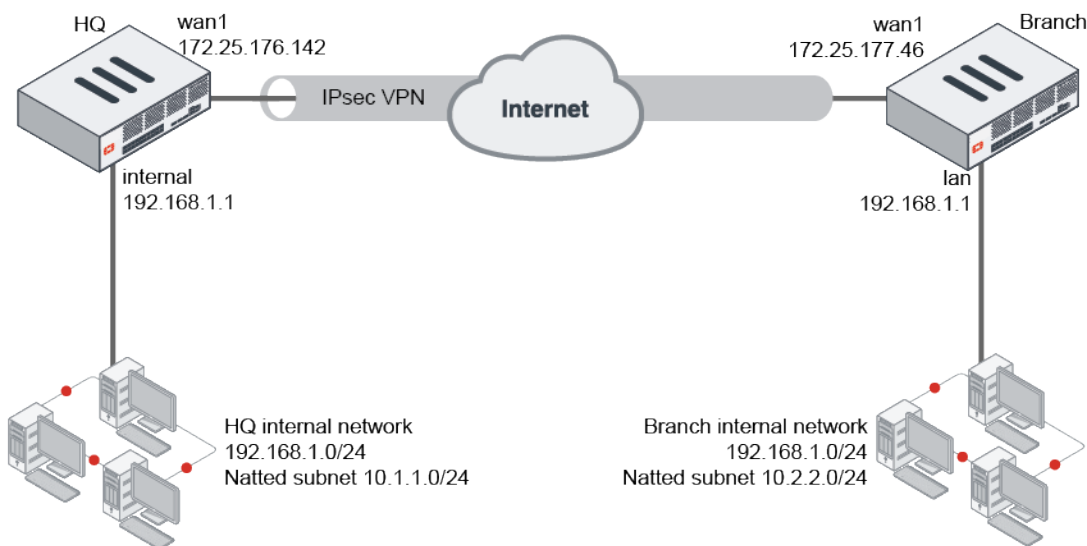

## Configuring the HQ FortiGate

### To configure IPsec VPN:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. Enter the name *VPN-to-Branch* and click *Next*.
3. For the *IP Address*, enter the Branch public IP address (*172.25.177.46*), and for *Interface*, select the HQ WAN interface (*wan1*).
4. For *Pre-shared Key*, enter a secure key. You will use the same key when configuring IPsec VPN on the Branch FortiGate.
5. In the *Phase 2 Selectors* section, enter the subnets for the *Local Address* (*10.1.1.0/24*) and *Remote Address* (*10.2.2.0/24*).
6. Optionally, expand *Advanced* and enable *Auto-negotiate*.
7. Click *OK*.

### To configure the static routes:

1. Go to *Network > Static Routes* and click *Create New*.
2. In the *Destination* field, enter the remote address subnet (*10.2.2.0/24*).
3. For *Interface*, select the VPN tunnel you just created, *VPN-to-Branch*.
4. Click *OK*.
5. Create another route with the same *Destination*, but change the *Administrative Distance* to *200* and for *Interface*, select *Blackhole*. This is a best practice for route-based IPsec VPN tunnels because it ensures traffic for the remote FortiGate's subnet is not sent using the default route in the event that the IPsec tunnel goes down.

### To configure the address objects:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. For *Name*, enter *HQ-original*.
3. For *IP/Netmask*, enter the original LAN subnet of HQ (*192.168.1.0/24*).
4. For *Interface*, select the LAN-side interface (*internal*).
5. Click *OK*.
6. Create another address object named *Branch-new*, but for *IP/Netmask*, enter the new LAN subnet of Branch (*10.2.2.0/24*), and select the VPN interface (*VPN-to-Branch*).

### To configure the IP pool:

1. Go to *Policy & Objects > IP Pools* and click *Create New*.
2. For *Name*, enter *HQ-new*.
3. For *Type*, select *Fixed Port Range*.
4. Enter the *External IP address/range* (*10.1.1.1 – 10.1.1.254*, the new HQ subnet) and *Internal IP Range* (*192.168.1.1 – 192.168.1.254*, the original HQ subnet).
5. Click *OK*.

### To configure the VIP:

1. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
2. For *Name*, enter *HQ-new-to-original*.
3. For *Interface*, select the VPN interface (*VPN-to-Branch*).

4. Enter the *External IP address/range* (10.1.1.1 – 10.1.1.254, the new HQ subnet) and *Map to IPv4 address/range* (192.168.1.1 – 192.168.1.254, the original HQ subnet).
5. Click OK.

#### To configure the firewall policy for traffic from HQ to Branch:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. For *Name*, enter *From-HQ-to-Branch*.
3. For *Incoming Interface*, select the LAN-side interface (*internal*).
4. For *Outgoing Interface*, select the VPN tunnel interface (*VPN-to-Branch*).
5. For *Source*, select *HQ-original*.
6. For *Destination*, select *Branch-new*.
7. For *Service*, select *ALL*.
8. Enable *NAT*.
9. Select *Use Dynamic IP Pool* and select the *HQ-new* IP pool.
10. Click OK.

#### To configure the firewall policy for traffic from Branch to HQ:

1. Click *Create New* and for *Name*, enter *From-Branch-to HQ*.
2. For *Incoming Interface*, select the VPN tunnel interface (*VPN-to-Branch*).
3. For *Outgoing Interface*, select the LAN-side interface (*internal*).
4. For *Source*, select *Branch-new*.
5. For *Destination*, select the *HQ-new-to-original* VIP.
6. For *Service*, select *ALL*.
7. Disable *NAT*.
8. Click OK.

## Configuring the Branch FortiGate

#### To configure IPsec VPN:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. Enter the name *VPN-to-HQ* and click *Next*.
3. For the *IP Address*, enter the HQ public IP address (172.25.176.142), and for *Interface*, select the Branch WAN interface (*wan1*).
4. For *Pre-shared Key*, enter the matching secure key used in the *VPN-to-Branch* tunnel.
5. In the *Phase 2 Selectors* section, enter the subnets for the *Local Address* (10.2.2.0/24) and *Remote Address* (10.1.1.0/24).
6. Optionally, expand *Advanced* and enable *Auto-negotiate*.
7. Click OK.

#### To configure the static routes:

1. Go to *Network > Static Routes* and click *Create New*.
2. In the *Destination* field, enter the remote address subnet (10.1.1.0/24).
3. For *Interface*, select the VPN tunnel you just created, *VPN-to-HQ*.
4. Click OK.

5. Create another route with the same *Destination*, but change the *Administrative Distance* to 200 and for *Interface*, select *Blackhole*.

**To configure the address objects:**

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. For *Name*, enter *Branch-original*.
3. For *IP/Netmask*, enter the original LAN subnet of Branch (192.168.1.0/24).
4. For *Interface*, select the LAN-side interface (*lan*).
5. Click *OK*.
6. Create another address object named *HQ-new*, but for *IP/Netmask*, enter the new LAN subnet of HQ (10.1.1.0/24), and select the VPN interface (*VPN-to-HQ*).

**To configure the IP pool:**

1. Go to *Policy & Objects > IP Pools* and click *Create New*.
2. For *Name*, enter *Branch-new*.
3. For *Type*, select *Fixed Port Range*.
4. Enter the *External IP address/range* (10.2.2.1 – 10.2.2.254, the new Branch subnet) and *Internal IP Range* (192.168.1.1 – 192.168.1.254, the original Branch subnet).
5. Click *OK*.

**To configure the VIP:**

1. Go to *Policy & Objects > Virtual IPs* and click *Create New > Virtual IP*.
2. For *Name*, enter *Branch-new-to-original*.
3. For *Interface*, select the VPN interface (*VPN-to-HQ*).
4. Enter the *External IP address/range* (10.2.2.1 – 10.2.2.254, the new Branch subnet) and *Map to IPv4 address/range* (192.168.1.1 – 192.168.1.254, the original Branch subnet).
5. Click *OK*.

**To configure the firewall policy for traffic from Branch to HQ:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. For *Name*, enter *From-Branch-to-HQ*.
3. For *Incoming Interface*, select the LAN-side interface (*lan*).
4. For *Outgoing Interface*, select the VPN tunnel interface (*VPN-to-HQ*).
5. For *Source*, select *Branch-original*.
6. For *Destination*, select *HQ-new*.
7. For *Service*, select *ALL*.
8. Enable *NAT*.
9. Select *Use Dynamic IP Pool* and select the *Branch-new* IP pool.
10. Click *OK*.

**To configure the firewall policy for traffic from HQ to Branch:**

1. Click *Create New* and for *Name*, enter *From-HQ-to-Branch*.
2. For *Incoming Interface*, select the VPN tunnel interface (*VPN-to-HQ*).



3. For *Outgoing Interface*, select the LAN-side interface (*lan*).
4. For *Source*, select *HQ-new*.
5. For *Destination*, select the *Branch-new-to-original* VIP.
6. For *Service*, select *ALL*.
7. Disable *NAT*.
8. Click *OK*.

#### To verify the communication across the tunnel:

1. Go to *Dashboard > Network* and click the *IPsec* widget to expand to full screen view. The tunnels should be up on both FortiGates. If you did not enable *Auto-negotiate* in the IPsec VPN settings, you may have to select the tunnel and click *Bring Up*.
2. From a PC on the HQ network, ping a PC on the Branch network using the new IP for the Branch PC. The ping should be successful.

```
C:\Users\jheadley>ping 10.2.2.98

Pinging 10.2.2.98 with 32 bytes of data:
Reply from 10.2.2.98: bytes=32 time=7ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62


Ping statistics for 10.2.2.98:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 7ms, Average = 2ms
```

3. From a PC on the Branch network, ping a PC on the HQ network using the new IP for the HQ PC. The ping should be successful.

```
[Johns-MacBook-Air:~ John$ ping 10.1.1.12
PING 10.1.1.12 (10.1.1.12): 56 data bytes
64 bytes from 10.1.1.12: icmp_seq=0 ttl=126 time=1.912 ms
64 bytes from 10.1.1.12: icmp_seq=1 ttl=126 time=1.743 ms
64 bytes from 10.1.1.12: icmp_seq=2 ttl=126 time=1.403 ms
64 bytes from 10.1.1.12: icmp_seq=3 ttl=126 time=1.425 ms
^C
--- 10.1.1.12 ping statistics ---
4 packets transmitted, 4 packets received, 0.0% packet loss
round-trip min/avg/max/stddev = 1.403/1.621/1.912/0.215 ms
```

## GRE over IPsec

This is an example of GRE over an IPsec tunnel using a static route over GRE tunnel and `tunnel-mode` in the `phase2-interface` settings.

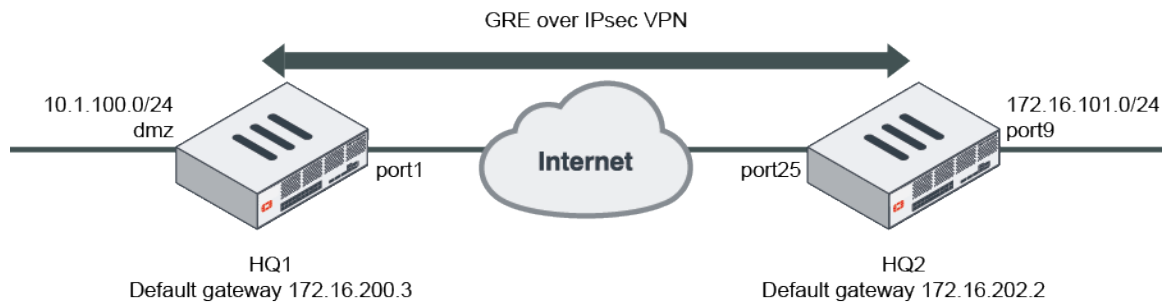

### To configure GRE over an IPsec tunnel:

1. Enable subnet overlapping at both HQ1 and HQ2.

```
config system settings
    set allow-subnet-overlap enable
end
```

2. Configure the WAN interface and static route.

#### a. HQ1.

```
config system interface
    edit "port1"
        set ip 172.16.200.1 255.255.255.0
    next
    edit "dmz"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.3
        set device "port1"
    next
end
```

#### b. HQ2.

```
config system interface
    edit "port25"
        set ip 172.16.202.1 255.255.255.0
    next
    edit "port9"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
end
```

**3. Configure IPsec phase1-interface and phase2-interface.****a. HQ1.**

```
config vpn ipsec phase1-interface
    edit "greipsec"
        set interface "port1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "greipsec"
        set phase1name "greipsec"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set protocol 47
    next
end
```

**b. HQ2.**

```
config vpn ipsec phase1-interface
    edit "greipsec"
        set interface "port25"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "greipsec"
        set phase1name "greipsec"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set protocol 47
    next
end
```

**4. Configure IPsec tunnel interface IP address.****a. HQ1.**

```
config system interface
    edit "greipsec"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.2 255.255.255.255
    next
end
```

**b. HQ2.**

```
config system interface
    edit "greipsec"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.1 255.255.255.255
```

```
    next
end
```

## 5. Configure the GRE tunnel.

### a. HQ1.

```
config system gre-tunnel
    edit "gre_to_HQ2"
        set interface "greipsec"
        set remote-gw 10.10.10.2
        set local-gw 10.10.10.1
    next
end
```

### b. HQ2.

```
config system gre-tunnel
    edit "gre_to_HQ1"
        set interface "greipsec"
        set remote-gw 10.10.10.1
        set local-gw 10.10.10.2
    next
end
```

## 6. Configure the firewall policy.

### a. HQ1.

```
config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "gre_to_HQ2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set srcintf "gre_to_HQ2"
        set dstintf "dmz"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 3
        set srcintf "greipsec"
        set dstintf "greipsec"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

**b. HQ2.**

```

config firewall policy
  edit 1
    set srcintf "port9"
    set dstintf "gre_to_HQ1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set srcintf "gre_to_HQ1"
    set dstintf "port9"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 3
    set srcintf "greipsec"
    set dstintf "greipsec"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end

```

**7. Configure the static route.****a. HQ1.**

```

config router static
  edit 2
    set dst 172.16.101.0 255.255.255.0
    set device "gre_to_HQ2"
  next
end

```

**b. HQ2.**

```

config router static
  edit 2
    set dst 10.1.100.0 255.255.255.0
    set device "gre_to_HQ1"
  next
end

```

**To view the VPN tunnel list on HQ1:**

```

diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=greipsec ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/16 options[0010]=create_dev

```

```

proxyid_num=1 child_num=0 refcnt=12 ilast=19 olast=861 ad=/0
stat: rxp=347 txp=476 rxb=58296 txb=51408
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=8
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=greipsecc proto=47 sa=1 ref=2 serial=2
src: 47:0.0.0.0/0.0.0.0:0
dst: 47:0.0.0.0/0.0.0.0:0
SA: ref=3 options=10226 type=00 soft=0 mtu=1438 expire=41689/0B replaywin=2048
seqno=15c esn=0 replaywin_lastseq=0000015c itn=0
life: type=01 bytes=0/0 timeout=42898/43200
dec: spi=9897bd09 esp=aes key=16 5a60e67bf68379309715bd83931680bf
ah=sha1 key=20 ff35a329056d0d506c0bfc17ef269978a4a57dd3
enc: spi=e362f336 esp=aes key=16 5574acd8587c5751a88950e1bf8fbf57
ah=sha1 key=20 d57ec76ac3c543ac89b2e4d0545518aa2d06669b
dec:pkts/bytes=347/37476, enc:pkts/bytes=347/58296

```

### To view the static routing table on HQ1:

```


get router info routing-table static
Routing table for VRF=0
S*      0.0.0.0/0 [10/0] via 172.16.200.3, port1
S       172.16.101.0/24 [10/0] is directly connected, gre_to_HQ2

```

## Policy-based IPsec tunnel

This is an example of policy-based IPsec tunnel using site-to-site VPN between branch and HQ. HQ is the IPsec concentrator.

### Sample topology

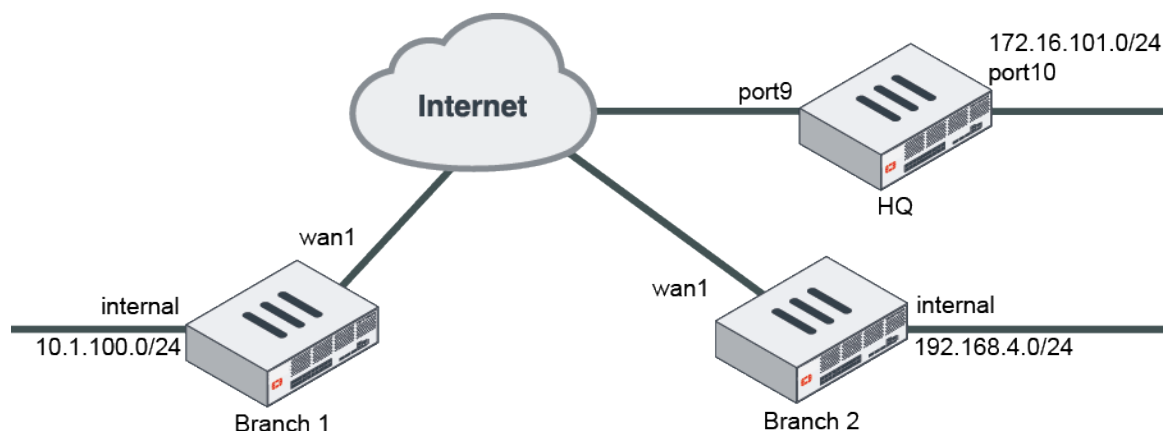

### Sample configuration

To configure a policy-based IPsec tunnel using the GUI:

- [Configure the IPsec VPN at HQ.](#)
- [Configure the IPsec concentrator at HQ.](#)
- [Configure the firewall policy at HQ.](#)
- [Configure IPsec VPN at branch 1.](#)
- [Configure the firewall policy at branch 1.](#)

- [Configure IPsec VPN at branch 2.](#)
- [Configure the firewall policy at branch 2.](#)

**To configure the IPsec VPN at HQ:**

1. Go to *VPN > IPsec Wizard* to set up branch 1.
  - a. Enter a *VPN Name*. In this example, *to\_branch1*.
  - b. For *Template Type*, click *Custom*. Click *Next*.
  - c. Uncheck *Enable IPsec Interface Mode*.
  - d. For *Remote Gateway*, select *Static IP Address*.
  - e. Enter IP address, in this example, *15.1.1.2*.
  - f. For *Interface*, select *port9*.
  - g. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
  - h. Click *OK*.
2. Go to *VPN > IPsec Wizard* to set up branch 2.
  - a. Enter a *VPN Name*. In this example, *to\_branch2*.
  - b. For *Template Type*, click *Custom*. Click *Next*.
  - c. Uncheck *Enable IPsec Interface Mode*.
  - d. For *Remote Gateway*, select *Static IP Address*.
  - e. Enter IP address, in this example, *13.1.1.2*.
  - f. For *Interface*, select *port9*.
  - g. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
  - h. Click *OK*.

**To configure the IPsec concentrator at HQ:**

1. Go to *VPN > IPsec Concentrator* and click *Create New*.
2. Enter a name. In this example, *branch*.
3. Add the *Members to\_branch1* and *to\_branch2*.
4. Click *OK*.

**To configure the firewall policy at HQ:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Enter a policy *Name*.
3. For *Incoming Interface*, select *port10*.
4. For *Outgoing Interface*, select *port9*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.
6. Select the *VPN Tunnel*, in this example, *Branch1/Branch2*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

**To configure IPsec VPN at branch 1:**

1. Go to *VPN > IPsec Wizard* to set up branch 1.
2. Enter a VPN name. In this example, *to\_HQ*.
3. For *Template Type*, click *Custom*. Click *Next*.

4. Uncheck *Enable IPsec Interface Mode*.
5. For *Remote Gateway*, select *Static IP Address*.
6. Enter IP address, in this example, *22.1.1.1*.
7. For *Interface*, select *wan1*.
8. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
9. Click *OK*.

#### **To configure the firewall policy at branch 1:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Enter a policy *Name*.
3. Choose the *Incoming Interface*, in this example, *internal*.
4. Choose the *Outgoing Interface*, in this example, *wan1*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.
6. Select the *VPN Tunnel*, in this example, *Branch1/Branch2*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

#### **To configure IPsec VPN at branch 2:**

1. Go to *VPN > IPsec Wizard* to set up branch 1.
2. Enter a VPN name. In this example, *to\_HQ*.
3. For *Template Type*, click *Custom*. Click *Next*.
4. Uncheck *Enable IPsec Interface Mode*.
5. For *Remote Gateway*, select *Static IP Address*.
6. Enter IP address, in this example, *22.1.1.1*.
7. For *Interface*, select *wan1*.
8. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
9. Click *OK*.

#### **To configure the firewall policy at branch 2:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Enter a policy *Name*.
3. Choose the *Incoming Interface*, in this example, *internal*.
4. Choose the *Outgoing Interface*, in this example, *wan1*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.
6. Select the *VPN Tunnel*, in this example, *to\_HQ*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

#### **To configure a policy-based IPsec tunnel using the CLI:**

1. Configure the HQ WAN interface and static route.

```
config system interface
  edit "port9"
    set alias "WAN"
```



```

        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end

```

## 2. Configure the HQ IPsec phase1 and phase2.

```

config vpn ipsec phase1
    edit "to_branch1"
        set interface "port9"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 15.1.1.2
        set psksecret sample
    next
    edit "to_branch2"
        set interface "port9"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 13.1.1.2
        set psksecret sample
    next
end
config vpn ipsec phase2
    edit "to_branch1"
        set phase1name "to_branch1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
    edit "to_branch2"
        set phase1name "to_branch2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end

```

## 3. Configure the firewall policy at HQ.

```

config firewall policy
    edit 1
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "10.1.100.0"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
    next
end

```

```
        set vpntunnel "to_branch1"
    next
    edit 2
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "192.168.4.0"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_branch2"
    next
end
```

#### 4. Configure the IPsec concentrator at HQ.

```
config vpn ipsec concentrator
    edit "branch"
        set member "to_branch1" "to_branch2"
    next
end
```

#### 5. Configure the branch WAN interface and static route.

##### a. For branch 1.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 15.1.1.1
        set device "wan1"
    next
end
```

##### b. For branch 2.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 13.1.1.1
        set device "wan1"
```

```
    next
end
```

**6. Configure the branch IPsec phase1 and phase2.**

**a. For branch 1.**

```
config vpn ipsec phase1
    edit "to_HQ"
        set interface "wan1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 22.1.1.1
        set psksecret sample
    next
end
config vpn ipsec phase2
    edit "to_HQ"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end
```

**b. For branch 2.**

```
config vpn ipsec phase1
    edit "to_HQ"
        set interface "wan1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 22.1.1.1
        set psksecret sample
    next
end
config vpn ipsec phase2
    edit "to_HQ"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end
```

**7. Configure the branch firewall policy.**

**a. For branch 1.**

```
config firewall policy
    edit 1
        set srcintf "internal"
        set dstintf "wan1"
        set srcaddr "10.1.100.0"
        set dstaddr "all"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_HQ"
    next
end
```

**b. For branch 2.**

```

config firewall policy
  edit 1
    set srcintf "internal"
    set dstintf "wan1"
    set srcaddr "192.168.4.0"
    set dstaddr "all"
    set action ipsec
    set schedule "always"
    set service "ALL"
    set inbound enable
    set vpntunnel "to_HQ"
  next
end

```

**To view the IPsec VPN tunnel list at HQ:**

```

# diagnose vpn tunnel list

list all ipsec tunnel in vd 0
----
name=to_branch1 ver=1 serial=4 22.1.1.1:0->15.1.1.2:0 tun_id=15.1.1.2
bound_if=42 lgwy=static/1 tun=tunnel/1 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=8 ilast=0 olast=0 ad=/0
stat: rxp=305409 txp=41985 rxb=47218630 txb=2130108
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_branch1 proto=0 sa=1 ref=3 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=6 options=10226 type=00 soft=0 mtu=1438 expire=42604/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000680 itn=0
  life: type=01 bytes=0/0 timeout=42932/43200
  dec: spi=ca646442 esp=aes key=16 58c91d4463968ddcccc4fd97de90a4b8
    ah=sha1 key=20 c9176fe2fbc82ef7e726be9ad4af83eb1b55580a
  enc: spi=747c10c4 esp=aes key=16 7cf0f75b784f697bc7f6d8b4bb8a83c1
    ah=sha1 key=20 cdddc376a86f5ca0149346604a59af07a33b11c5
  dec:pkts/bytes=1664/16310, enc:pkts/bytes=0/16354
  npu_flag=03 npu_rgw=15.1.1.2 npu_lgwy=22.1.1.1 npu_selid=3 dec_npuid=2 enc_npuid=2
----
name=to_branch2 ver=1 serial=5 22.1.1.1:0->13.1.1.2:0 tun_id=13.1.1.2
bound_if=42 lgwy=static/1 tun=tunnel/1 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=7 ilast=2 olast=43228 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_branch2 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=10226 type=00 soft=0 mtu=1280 expire=40489/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=ca646441 esp=aes key=16 57ab680d29d4aad4e373579fb50e9909
    ah=sha1 key=20 12a2bc703d2615d917ff544eaff75a6d2c17f1fe
  enc: spi=f9cfff61 esp=aes key=16 3d64da9feb893874e007babce0229259
    ah=sha1 key=20 f92a3ad5e56cb8e89c47af4dac10bf4b4bebf16

```

```
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0  
npu_flag=00 npu_rgwy=13.1.1.2 npu_lgwy=22.1.1.1 npu_selid=4 dec_npuid=0 enc_npuid=0
```

### To view the IPsec VPN concentrator at HQ:

```
# diagnose vpn concentrator list  
  
list all ipsec concentrator in vd 0  
name=branch ref=3 tuns=2 flags=0
```

## FortiGate-to-third-party

This section contains the following topics about FortiGate-to-third-party VPN configurations:

- [IKEv2 IPsec site-to-site VPN to an AWS VPN gateway on page 1631](#)
- [IPsec VPN to Azure with virtual network gateway on page 1637](#)
- [IPsec VPN to an Azure with virtual WAN on page 1646](#)
- [IPSec VPN between a FortiGate and a Cisco ASA with multiple subnets on page 1650](#)
- [Cisco GRE-over-IPsec VPN on page 1650](#)

### IKEv2 IPsec site-to-site VPN to an AWS VPN gateway

This is a sample configuration of an IPsec site-to-site VPN connection between an on-premise FortiGate and an AWS virtual private cloud (VPC).

AWS uses unique identifiers to manipulate a VPN connection's configuration. Each VPN connection is assigned an identifier and is associated with two other identifiers: the customer gateway ID for the FortiGate and virtual private gateway ID.

This example includes the following IDs:

- VPN connection ID: vpn-07e988ccc1d46f749
- Customer gateway ID: cgw-0440c1aebcd2f418a
- Virtual private gateway ID

This example assumes that you have configured VPC-related settings in the AWS management portal as described in [Create a Secure Connection using AWS VPC](#).

This example includes creating and configuring two tunnels. You must configure both tunnels on your FortiGate.

### To configure IKEv2 IPsec site-to-site VPN to an AWS VPN gateway:

1. Configure the first VPN tunnel:
  - a. [Configure Internet Key Exchange \(IKE\)](#).
  - b. [Configure IPsec](#).
  - c. [Configure the tunnel interface](#).
  - d. [Configure border gateway protocol \(BGP\)](#).
  - e. [Configure firewall policies](#).
2. Configure the second VPN tunnel:
  - a. [Configure Internet Key Exchange \(IKE\)](#).
  - b. [Configure IPsec](#).
  - c. [Configure the tunnel interface](#).

- d. [Configure BGP.](#)
- e. [Configure firewall policies.](#)

### To configure IKE for the first VPN tunnel:

A policy is established for the supported ISAKMP encryption, authentication, Diffie-Hellman (DH), lifetime, and key parameters. These sample configurations fulfill the minimum requirements for AES128, SHA1, and DH Group 2. Category VPN connections in the GovCloud AWS region have a minimum requirement of AES128, SHA2, and DH Group 14. To take advantage of AES256, SHA256, or other DH groups such as 14-18, 22, 23, and 24, you must modify these sample configuration files. Higher parameters are only available for VPNs of category "VPN", not for "VPN-Classic".

Your FortiGate's external interface's address must be static. Your FortiGate may reside behind a device performing NAT. To ensure NAT traversal can function, you must adjust your firewall rules to unblock UDP port 4500. If not behind NAT, it is recommended to disable NAT traversal.

Begin configuration in the root VDOM. The interface name must be shorter than 15 characters. It is best if the name is shorter than 12 characters. IPsec dead peer detection (DPD) causes periodic messages to be sent to ensure a security association remains operational.

```
config vpn ipsec phase1-interface
  edit vpn-07e988cccd46f749-0
    set interface "wan1"
    set dpd enable
    set local-gw 35.170.66.108
    set dhgrp 2
    set proposal aes128-sha1
    set keylife 28800
    set remote-gw 3.214.239.164
    set psksecret iCelks0UOob8z4SYMRM6zlx.rU2C3jth
    set dpd-retryinterval 10
  next
end
```

### To configure IPsec for the first VPN tunnel:

The IPsec transform set defines the encryption, authentication, and IPsec mode parameters.

```
config vpn ipsec phase2-interface
  edit "vpn-07e988cccd46f749-0"
    set phase1name "vpn-07e988cccd46f749-0"
    set proposal aes128-sha1
    set dhgrp 2
    set pfs enable
    set keylifeseconds 3600
  next
end
```

### To configure the tunnel interface for the first VPN tunnel:

You must configure a tunnel interface as the logical interface associated with the tunnel. All traffic routed to the tunnel interface must be encrypted and transmitted to the VPC. Similarly, traffic from the VPC will be logically received on this interface.

You must configure the interface's address with your FortiGate's address. If the address changes, you must recreate the FortiGate and VPN connection with Amazon VPC.

The `tcp-mss` option causes the router to reduce the TCP packets' maximum segment size to prevent packet fragmentation.

```
config system interface
  edit "vpn-07e988ccc1d46f749-0"
    set vdom "root"
    set ip 169.254.45.90 255.255.255.255
    set allowaccess ping
    set type tunnel
    set tcp-mss 1379
    set remote-ip 169.254.45.89
    set mtu 1427
    set interface "wan1"
  next
end
```

### To configure BGP for the first VPN tunnel:

BGP is used within the tunnel to exchange prefixes between the virtual private gateway and your FortiGate. The virtual private gateway announces the prefix according to your VPC.

The local BGP autonomous system number (ASN) (65000) is configured as part of your FortiGate. If you must change the ASN, you must recreate the FortiGate and VPN connection with AWS.

Your FortiGate may announce a default route (0.0.0.0/0) to AWS. This is done using a prefix list and route map in FortiOS.

```
config router bgp
  set as 65000
  config neighbor
    edit 169.254.45.89
      set remote-as 64512
    end
  end
end
config router bgp
  config neighbor
    edit 169.254.45.89
      set capability-default-originate enable
    end
  end
end
config router prefix-list
  edit "default_route"
    config rule
      edit 1
        set prefix 0.0.0.0 0.0.0.0
      next
    end
  end
end
config router route-map
  edit "routemap1"
    config rule
      edit 1
```

```

        set match-ip-address "default_route"
    next
end
next
end

```

To advertise additional prefixes to the Amazon VPC, add these prefixes to the network statement and identify the prefix you want to advertise. Ensure that the prefix is present in the routing table of the device with a valid next-hop. If you want to advertise 192.168.0.0/16 to Amazon, you would do the following:

```

config router bgp
config network
    edit 1
        set prefix 192.168.0.0 255.255.0.0
    next
end

```

### To configure firewall policies for the first VPN tunnel:

Create a firewall policy permitting traffic from your local subnet to the VPC subnet, and vice-versa.

This example policy permits all traffic from the local subnet to the VPC. First, view all existing policies using the `show firewall policy` command. Then, create a new firewall policy starting with the next available policy ID. In this example, running `show firewall policy` displayed policies 1, 2, 3, and 4, so you would proceed to create policy 5.

```

config firewall policy
    edit 5
        set srcintf "vpn-07e988cccd46f749-0"
        set dstintf internal
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ANY
    next
end
config firewall policy
    edit 5
        set srcintf internal
        set dstintf "vpn-07e988cccd46f749-0"
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ANY
    next
end

```

### To configure IKE for the second VPN tunnel:

A policy is established for the supported ISAKMP encryption, authentication, DH, lifetime, and key parameters. These sample configurations fulfill the minimum requirements for AES128, SHA1, and DH Group 2. Category VPN connections in the GovCloud AWS region have a minimum requirement of AES128, SHA2, and DH Group 14. To take advantage of AES256, SHA256, or other DH groups such as 14-18, 22, 23, and 24, you must modify these sample configuration files. Higher parameters are only available for VPNs of category "VPN", not for "VPN-Classic".



Your FortiGate's external interface's address must be static. Your FortiGate may reside behind a device performing NAT. To ensure NAT traversal can function, you must adjust your firewall rules to unblock UDP port 4500. If not behind NAT, it is recommended to disable NAT traversal.

Begin configuration in the root VDOM. The interface name must be shorter than 15 characters. It is best if the name is shorter than 12 characters. IPsec DPD causes periodic messages to be sent to ensure a security association remains operational.

```
config vpn ipsec phase1-interface
  edit vpn-07e988cccl46f749-1
    set interface "wan1"
    set dpd enable
    set local-gw 35.170.66.108
    set dhgrp 2
    set proposal aes128-sha1
    set keylife 28800
    set remote-gw 100.25.187.58
    set psksecret IjFzyDneUtDdAT4RNmQ85apUG3y4Akre
    set dpd-retryinterval 10
  next
end
```

### **To configure IPsec for the second VPN tunnel:**

The IPsec transform set defines the encryption, authentication, and IPsec mode parameters.

```
config vpn ipsec phase2-interface
  edit "vpn-07e988cccl46f749-1"
    set phase1name "vpn-07e988cccl46f749-1"
    set proposal aes128-sha1
    set dhgrp 2
    set pfs enable
    set keylifeseconds 3600
  next
end
```

### **To configure the tunnel interface for the second VPN tunnel:**

You must configure a tunnel interface as the logical interface associated with the tunnel. All traffic routed to the tunnel interface must be encrypted and transmitted to the VPC. Similarly, traffic from the VPC will be logically received on this interface.

You must configure the interface's address with your FortiGate's address. If the address changes, you must recreate the FortiGate and VPN connection with Amazon VPC.

The `tcp-mss` option causes the router to reduce the TCP packets' maximum segment size to prevent packet fragmentation.

```
config system interface
  edit "vpn-07e988cccl46f749-1"
    set vdom "root"
    set ip 169.254.44.162 255.255.255.255
    set allowaccess ping
    set type tunnel
    set tcp-mss 1379
    set remote-ip 169.254.44.161
    set mtu 1427
    set interface "wan1"
```

```
    next
end
```

### To configure BGP for the second VPN tunnel:

BGP is used within the tunnel to exchange prefixes between the virtual private gateway and your FortiGate. The virtual private gateway announces the prefix according to your VPC.

The local BGP ASN (65000) is configured as part of your FortiGate. If you must change the ASN, you must recreate the FortiGate and VPN connection with AWS.

Your FortiGate may announce a default route (0.0.0.0/0) to AWS. This is done using a prefix list and route map in FortiOS.

```
config router bgp
    set as 65000
    config neighbor
        edit 169.254.44.161
            set remote-as 64512
        end
    end
config router bgp
    config neighbor
        edit 169.254.44.161
            set capability-default-originate enable
        end
    end
config router prefix-list
    edit "default_route"
        config rule
            edit 1
                set prefix 0.0.0.0 0.0.0.0
            next
        end
    end
end
config router route-map
    edit "routemap1"
        config rule
            edit 1
                set match-ip-address "default_route"
            next
        end
    next
end
```

To advertise additional prefixes to the Amazon VPC, add these prefixes to the network statement and identify the prefix you want to advertise. Ensure that the prefix is present in the routing table of the device with a valid next-hop. If you want to advertise 192.168.0.0/16 to Amazon, you would do the following:

```
config router bgp
config network
    edit 1
        set prefix 192.168.0.0 255.255.0.0
    next
end
```

**To configure firewall policies for the second VPN tunnel:**

Create a firewall policy permitting traffic from your local subnet to the VPC subnet, and vice-versa.

This example policy permits all traffic from the local subnet to the VPC. First, view all existing policies using the `show firewall policy` command. Then, create a new firewall policy starting with the next available policy ID. In this example, running `show firewall policy` displayed policies 1, 2, 3, 4, and 5, so you would proceed to create policy 6.

```
config firewall policy
  edit 6
    set srcintf "vpn-07e988cccd46f749-1"
    set dstintf internal
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ANY
  next
end
config firewall policy
  edit 6
    set srcintf internal
    set dstintf "vpn-07e988cccd46f749-1"
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ANY
  next
end
```


**IPsec VPN to Azure with virtual network gateway**

This example shows how to configure a site-to-site IPsec VPN tunnel to Microsoft Azure. It shows how to configure a tunnel between each site, avoiding overlapping subnets, so that a secure tunnel can be established.

**Prerequisites**

- A FortiGate with an Internet-facing IP address
- A valid Microsoft Azure account

## Sample topology

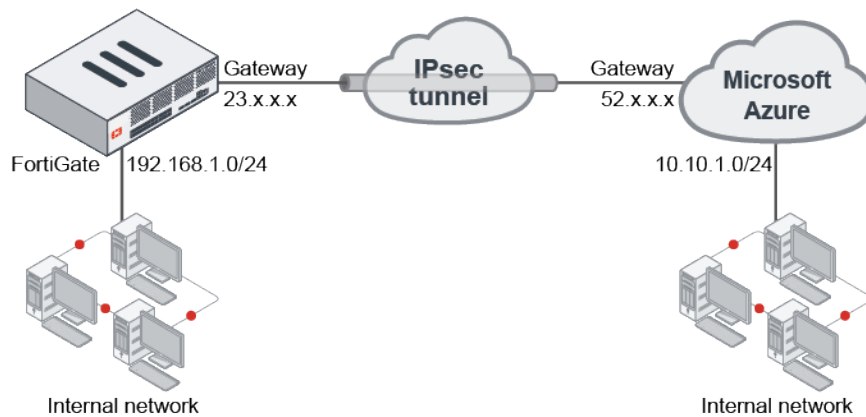

## Sample configuration


This sample configuration shows how to:

1. [Configure an Azure virtual network](#)
2. [Specify the Azure DNS server](#)
3. [Configure the Azure virtual network gateway](#)
4. [Configure the Azure local network gateway](#)
5. [Configure the FortiGate tunnel](#)
6. [Create the Azure firewall object](#)
7. [Create the FortiGate firewall policies](#)
8. [Create the FortiGate static route](#)
9. [Create the Azure site-to-site VPN connection](#)
10. [Check the results](#)

### To configure an Azure virtual network:

1. Log in to Azure and click *New*.
2. In *Search the Marketplace*, type *Virtual network*.

3. Click *Virtual network* to open the *Virtual network* pane.

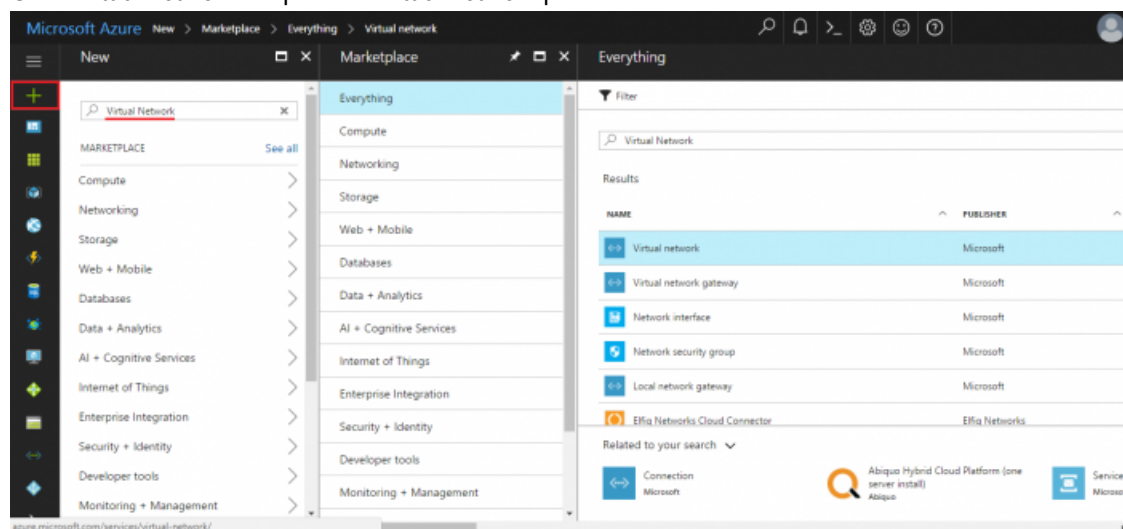

4. At the bottom of the *Virtual network* pane, click the *Select a deployment model* dropdown list and select *Resource Manager*.
5. Click *Create*.

**Virtual network**  
 Microsoft

Create a logically isolated section in Microsoft Azure with this networking service. You can securely connect it to your on-premises datacenter or a single client machine using an IPsec connection. Virtual Networks make it easy for you to take advantage of the scalable, on-demand infrastructure of Azure while providing connectivity to data and applications on-premises, including systems running on Windows Server, mainframes, and UNIX.

Use Virtual Network to:

- Extend your datacenter
- Build distributed applications
- Remotely debug your applications

PUBLISHER	Microsoft
USEFUL LINKS	<a href="#">Service overview</a>
	<a href="#">Documentation</a>
	<a href="#">Pricing</a>

Select a deployment model ⓘ  
 Resource Manager ▼

**Create**

6. On the *Create virtual network* pane, enter your virtual network settings, and click *Create*.

**Create virtual network**

\* Name  
kleroux\_VPN ✓

\* Address space ⓘ  
10.10.0.0/16 ✓  
10.10.0.0 - 10.10.255.255 (65536 addresses)

\* Subnet name  
default

\* Subnet address range ⓘ  
10.10.0.0/24 ✓  
10.10.0.0 - 10.10.0.255 (256 addresses)

\* Subscription  
Free Trial ▼

\* Resource group ⓘ  
☒ Create new ☐ Use existing  
techdocs ✓

\* Location  
Canada East ▼

**Create**

### To specify the Azure DNS server:

1. Open the virtual network you just created.
2. Click *DNS servers* to open the *DNS servers* pane.
3. Enter the IP address of the DNS server and click *Save*.

**kleroux\_VPN - DNS servers**  
Virtual network

Search (Ctrl+*/*)

**Save** **Discard**

Virtual machines within this virtual network must be restarted to utilize the updated DNS server settings.


DNS servers ⓘ  
☐ Default  
(Azure-provided)  
☒ Custom

8.8.8.8 ...

Add... ...

### To configure the Azure virtual network gateway:


1. In the portal dashboard, go to *New*.
2. Search for *Virtual Network Gateway* and click it to open the *Virtual network gateway* pane.

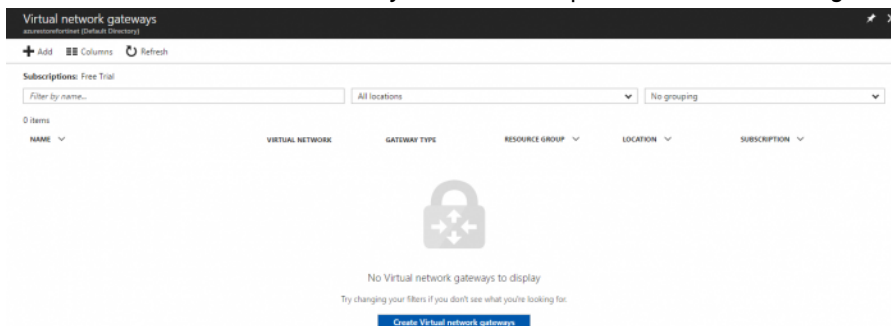

3. Click *Create Virtual network gateways* and enter the settings for your virtual network gateway.


4. If needed, create a Public IP address.

5. Click *Create*.  
Creating the virtual network gateway might take some time. When the provisioning is done, you'll receive a notification.

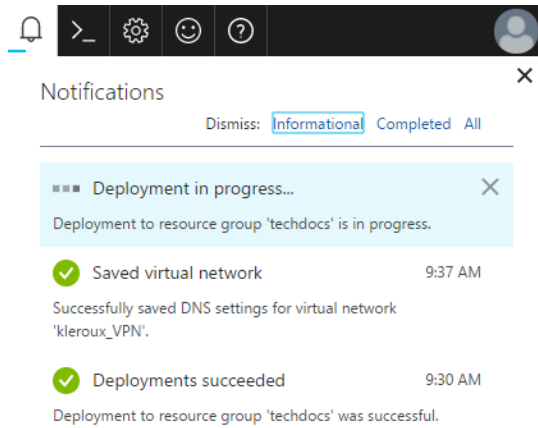


### To configure the Azure local network gateway:

1. In the portal dashboard, click *All resources*.
2. Click *Add* and then click *See all*.

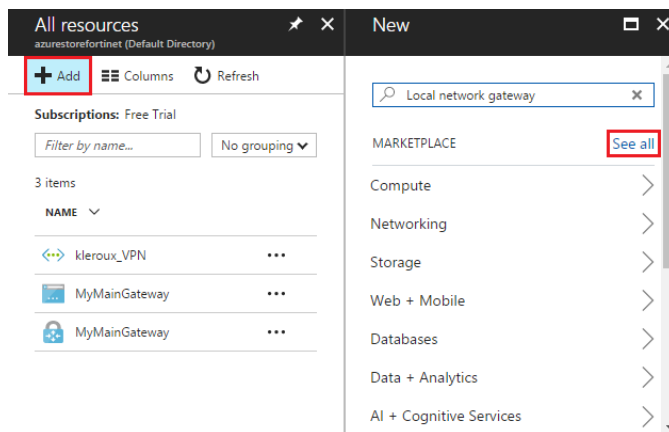

3. In the *Everything* pane, search for *Local network gateway* and then click *Create local network gateway*.

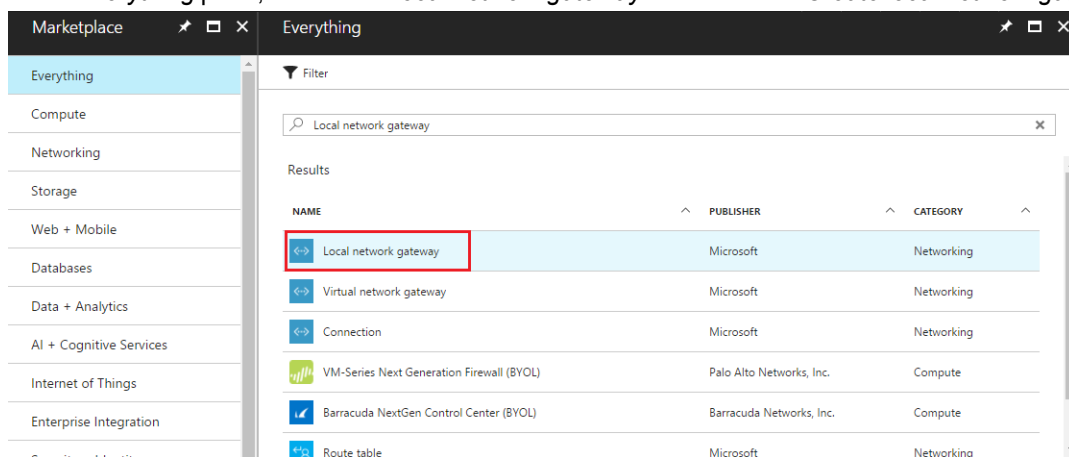



- For the *IP address*, enter the local network gateway IP address, that is, the FortiGate's external IP address.

**Create local network gateway** [icon] [X]

\* Name  
MyVirtualNetworkLocalNet ✓

\* IP address ⓘ  
24 [red box] ✓

Address space ⓘ  
192.168.1.0/24 ...  
Add additional address range ...

\* Subscription  
Free Trial ▼

\* Resource group ⓘ  
☐ Create new ☒ Use existing  
techdocs ▼

\* Location  
Canada East ▼

☐ Pin to dashboard

**Create** [Automation options](#)

- Set the remaining values for your local network gateway and click *Create*.

### To configure the FortiGate tunnel:

- In the FortiGate, go to *VPN > IP Wizard*.
- Enter a *Name* for the tunnel, click *Custom*, and then click *Next*.
- Configure the *Network* settings.
  - For *Remote Gateway*, select *Static IP Address* and enter the IP address provided by Azure.
  - For *Interface*, select *wan1*.
  - For *NAT Traversal*, select *Disable*,
  - For *Dead Peer Detection*, select *On Idle*.
  - In the *Authentication* section, select
- Configure the *Authentication* settings.
  - For *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
  - For *IKE*, select *2*.
- Configure the *Phase 1 Proposal* settings.
  - Set the Encryption and Authentication combination to the three supported encryption algorithm combinations accepted by Azure.
    - AES256 and SHA1
    - 3DES and SHA1

- AES256 and SHA256
  - b. For *Diffie-Hellman Groups*, select 2.
  - c. Set *Key Lifetime (seconds)* to 28800.
6. In *Phase 2 Selectors*, expand the *Advanced* section to configure the *Phase 2 Proposal* settings.
- a. Set the Encryption and Authentication combinations:
    - AES256 and SHA1
    - 3DES and SHA1
    - AES256 and SHA256
  - b. Uncheck *Enable Perfect Forward Secrecy (PFS)*.
  - c. Set *Key Lifetime (seconds)* to 27000.
7. Click OK.

**To create the Azure firewall object:**

1. In the FortiGate, go to *Policy & Objects > Addresses*.
2. Create a firewall object for the Azure VPN tunnel.

**To create the FortiGate firewall policies:**

1. In the FortiGate, go to *Policy & Objects > Firewall Policy*.
2. Create a policy for the site-to-site connection that allows outgoing traffic.
  - a. Set the *Source* address and *Destination* address using the firewall objects you just created.
  - b. Disable NAT.
3. Create another policy that allows incoming traffic.
  - a. For this policy, reverse the *Source* address and *Destination* address.
4. We recommend limiting the TCP maximum segment size (MSS) being sent and received so as to avoid packet drops and fragmentation.

To do this, use the following CLI commands on both policies.


```
config firewall policy
  edit <policy-id>
    set tcp-mss-sender 1350
    set tcp-mss-receiver 1350
  next
end
```

**To create the FortiGate static route:**

1. In the FortiGate, go to *Network > Static Routes*.
2. Create an IPv4 Static Route that forces outgoing traffic going to Azure to go through the route-based tunnel.
3. Set the *Administrative Distance* to a value lower than the existing default route value.

### To create the Azure site-to-site VPN connection:

1. In the Azure portal, locate and select your virtual network gateway.
2. In the *Settings* pane, click *Connections* and then click *Add*.

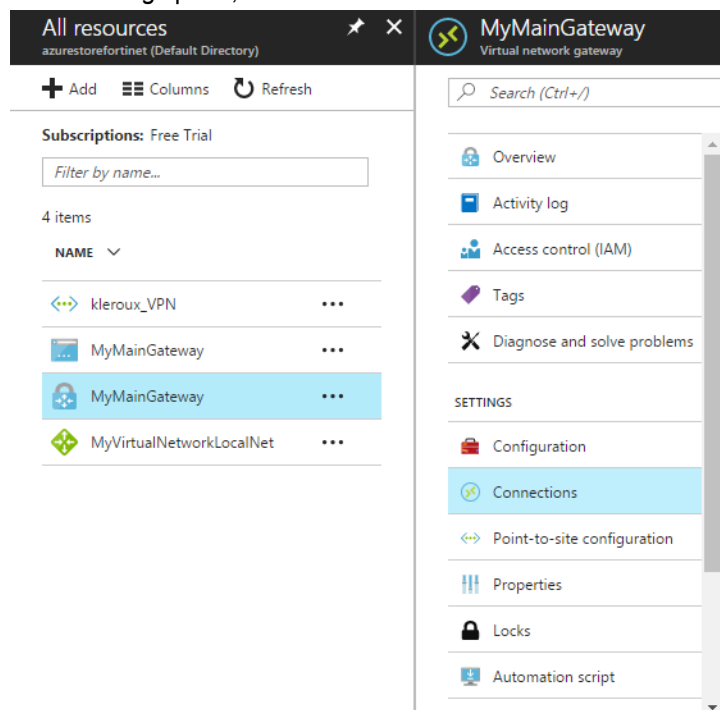


3. Enter the settings for your connection. Ensure the *Shared Key (PSK)* matches the *Pre-shared Key* for the FortiGate tunnel.

### To check the results:

1. In the FortiGate, go to *Monitor > IPsec Monitor* and check that the tunnel is up. If the tunnel is down, right-click the tunnel and select *Bring Up*.
2. In the FortiGate, go to *Log & Report > System Events*.
  - a. Select an event card to view more information and verify the connection.

3. In the Azure portal dashboard, click *All resources* and locate your virtual network gateway.
  - a. In your virtual network gateway pane, click *Connections* to see the status of each connection.

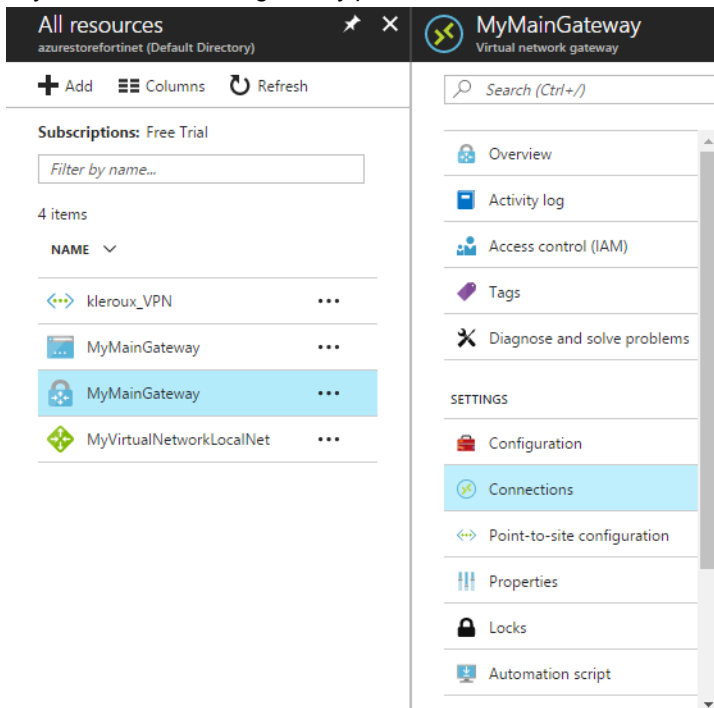

- b. Click a connection to open the *Essentials* pane to view more information about that connection.
    - If the connection is successful, the *Status* shows *Connected*.
    - See the *ingress* and *egress* bytes to confirm traffic flowing through the tunnel.

## IPsec VPN to an Azure with virtual WAN

This is a sample configuration of an IPsec site-to-site VPN connection between an on-premise FortiGate and an Azure virtual network (VNet). This example uses Azure virtual WAN (vWAN) to establish the VPN connection.



- Azure must use IPsec v2 for this configuration.
- Azure uses overlapped subnet IP addresses for the IPsec interfaces.

### To configure IKEv2 IPsec site-to-site VPN to an Azure VPN gateway:

1. In the Azure management portal, configure vWAN-related settings as described in [Tutorial: Create a Site-to-Site connection using Azure Virtual WAN](#).

If a custom BGP IP address is configured on Azure's vWAN, such as 169.254.21.6 and 169.254.21.7, you must configure the FortiGate `remote-IP` to the corresponding *Custom BGP IP Address* value. If a custom BGP IP address is not configured, FortiGate `remote-IPs` should point to the *Default BGP IP Address* value.

2. Download the VPN configuration. The following shows an example VPN configuration:

```
[ {"configurationVersion":{"LastUpdatedTime":"2019-07-16T22:16:28.0409002Z","Version":"be5c5787-b903-43b1-a237-49eae1b373e4"},"vpnSiteConfiguration":{"Name":"toaws","IPAddress":"3.220.252.93","BgpSetting":
```

```
{
  "Asn": 7225,
  "BgpPeeringAddress": "169.254.24.25",
  "PeerWeight": 32768,
  "LinkName": "toaws",
  "vpnSiteConnections": [
    {
      "hubConfiguration": {
        "AddressSpace": "10.1.0.0/16",
        "Region": "West US",
        "ConnectedSubnets": [
          "10.2.0.0/16"
        ],
        "gatewayConfiguration": {
          "IpAddresses": [
            {
              "Instance0": "52.180.90.47",
              "Instance1": "52.180.89.94"
            }
          ],
          "BgpSetting": {
            "Asn": 65515,
            "BgpPeeringAddresses": [
              {
                "Instance0": "10.1.0.7",
                "Instance1": "10.1.0.6",
                "PeerWeight": 0
              }
            ],
            "connectionConfiguration": {
              "IsBgpEnabled": true,
              "PSK": "Fortinet123#",
              "IPsecParameters": {
                "SADataSizeInKilobytes": 102400000,
                "SALifeTimeInSeconds": 3600
              }
            }
          }
        }
      }
    ]
  ]
}
```

**3. Configure the following on the FortiGate. Note for set proposal, you can select from several proposals.**

```
config vpn ipsec phase1-interface
  edit "toazure1"
    set interface "port1"
    set ike-version 2
    set keylife 28800
    set peertype any
    set proposal aes256-shal
    set dhgrp 2
    set remote-gw 52.180.90.47
    set psksecret *****
  next
edit "toazure2"
  set interface "port1"
  set ike-version 2
  set keylife 28800
  set peertype any
  set proposal aes256-shal
  set dhgrp 2
  set remote-gw 52.180.89.94
  set psksecret *****
next
end
config vpn ipsec phase2-interface
  edit "toazure1"
    set phasename "toazure1"
    set proposal aes256-shal
    set dhgrp 2
    set keylifeseconds 3600
  next
edit "toazure2"
  set phasename "toazure2"
  set proposal aes256-shal
  set dhgrp 2
  set keylifeseconds 3600
next
end
config system settings
  set allow-subnet-overlap enable
end
config system interface
  edit "toazure1"
    set vdom "root"
    set ip 169.254.24.25 255.255.255.255
    set type tunnel
    set remote-ip 10.1.0.7 255.255.255.255
    set snmp-index 4
    set interface "port1"
```

```

next
edit "toazure2"
    set vdom "root"
    set ip 169.254.24.25 255.255.255.255
    set type tunnel
    set remote-ip 10.1.0.6 255.255.255.255
    set snmp-index 5
    set interface "port1"
next
end
config router bgp
    set as 7225
    set router-id 169.254.24.25
    config neighbor
        edit "10.1.0.7"
            set remote-as 65515
        next
        edit "10.1.0.6"
            set remote-as 65515
        next
    end
    config network
        edit 1
            set prefix 172.30.101.0 255.255.255.0
        next
    end
    config redistribute "connected"
        set status enable
    end
    config redistribute "rip"
    end
    config redistribute "ospf"
    end
    config redistribute "static"
    end
    config redistribute "isis"
    end
    config redistribute6 "connected"
    end
    config redistribute6 "rip"
    end
    config redistribute6 "ospf"
    end
    config redistribute6 "static"
    end
    config redistribute6 "isis"
    end
end

```

4. Run `diagnose vpn tunnel list`. If the configuration was successful, the output should resemble the following:

```

name=toazure1 ver=2 serial=3 172.30.1.83:4500->52.180.90.47:4500 tun_id=52.180.90.47
bound_if=3 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=15 ilast=16 olast=36 ad=/0
stat: rxp=41 txp=41 rxb=5104 txb=2209
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1

```

```

natt: mode=keepalive draft=0 interval=10 remote_port=4500
proxyid=toazure1 proto=0 sa=1 ref=2 serial=4
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=8926 expire=2463/0B replaywin=2048
      seqno=2a esn=0 replaywin_lastseq=00000029 itn=0
  life: type=01 bytes=0/0 timeout=3300/3600
  dec: spi=c13f7928 esp=aes key=32
009a86bb0d6f5fee66af7b8232c8c0f22e6ec5c61ba19c93569bd0cd115910a9
  ah=sha1 key=20 f05bfeb0060afa89d4afdfac35960a8a7a4d4856
  enc: spi=b40a6c70 esp=aes key=32
a1e361075267ba72b39924c5e6c766fd0b08e0548476de2792ee72057fe60d1d
  ah=sha1 key=20 b1d24bedb0eb8fbd26de3e7c0b0a3a799548f52f
  dec:pkts/bytes=41/2186, enc:pkts/bytes=41/5120
-----
name=toazure2 ver=2 serial=4 172.30.1.83:4500->52.180.89.94:4500 tun_id=52.180.89.94
bound_if=3 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=16 ilast=16 olast=16 ad=/0
stat: rxp=40 txp=40 rxb=4928 txb=2135
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=keepalive draft=0 interval=10 remote_port=4500
proxyid=toazure2 proto=0 sa=1 ref=2 serial=4
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10626 type=00 soft=0 mtu=8926 expire=2427/0B replaywin=2048
      seqno=29 esn=0 replaywin_lastseq=00000028 itn=0
  life: type=01 bytes=0/0 timeout=3299/3600
  dec: spi=c13f791d esp=aes key=32
759898cbb7faf448116b1fb0fb6d2f0eb99621ea6ed8dd4417ffdb901eb82be
  ah=sha1 key=20 533ec5dc8a1910221e7742b12f9de1b41205622c
  enc: spi=67934bfe esp=aes key=32
9b5710bfb4ba784722241ec371ba8066629febcd75da6f8471915bdeb874ca80
  ah=sha1 key=20 5099fed7edac2b960294094fla8188ab42f34d7b
  dec:pkts/bytes=40/2087, enc:pkts/bytes=40/4976

```

Routing table for VRF=0

Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP  
O - OSPF, IA - OSPF inter area  
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2  
E1 - OSPF external type 1, E2 - OSPF external type 2  
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area  
\* - candidate default

```

S*    0.0.0.0/0 [5/0] via 172.30.1.1, port1
B     10.1.0.0/16 [20/0] via 10.1.0.6, toazure2, 00:15:01
C     10.1.0.6/32 is directly connected, toazure2
C     10.1.0.7/32 is directly connected, toazure1
B     10.2.0.0/16 [20/0] via 10.1.0.6, toazure2, 00:15:01
C     169.254.24.25/32 is directly connected, toazure1
           is directly connected, toazure2
C     172.30.1.0/24 is directly connected, port1
C     172.30.101.0/24 is directly connected, port2

```

## IPSec VPN between a FortiGate and a Cisco ASA with multiple subnets

When a Cisco ASA unit has multiple subnets configured, multiple phase 2 tunnels must be created on the FortiGate to allocate to each subnet (rather than having multiple subnets on one phase 2 tunnel).

The FortiGate uses the same SPI value to bring up the phase 2 negotiation for all of the subnets, while the Cisco ASA expects different SPI values for each of its configured subnets. Using multiple phase 2 tunnels on the FortiGate creates different SPI values for each subnet.

### To configure multiple phase 2 interfaces in route-based mode:

```
config vpn ipsec phase2-interface
  edit "First subnet"
    set phase1name "VPN to Cisco"
    set src-subnet 192.168.227.253 255.255.255.255
    set dst-subnet 10.142.0.0 255.255.254.0
  next
  edit "Second subnet"
    set phase1name "VPN to Cisco"
    set src-subnet 192.168.227.253 255.255.255.255
    set dst-subnet 10.143.0.0 255.255.254.0
  next
end
```

### To configure multiple phase 2 interfaces in policy-based mode:

```
config vpn ipsec phase2
  edit "First subnet"
    set phase1name "VPN to Cisco"
    set src-subnet 192.168.227.253 255.255.255.255
    set dst-subnet 10.142.0.0 255.255.254.0
  next
  edit "Second subnet"
    set phase1name "VPN to Cisco"
    set src-subnet 192.168.227.253 255.255.255.255
    set dst-subnet 10.143.0.0 255.255.254.0
  next
end
```


## Cisco GRE-over-IPsec VPN

This is a sample configuration of a FortiGate VPN that is compatible with Cisco-style VPNs that use GRE in an IPsec tunnel. Cisco products with VPN support often use the GRE protocol tunnel over IPsec encryption. Cisco VPNs can use either transport mode or tunnel mode IPsec.

### Topology

In this example, LAN1 users are provided with access to LAN2.



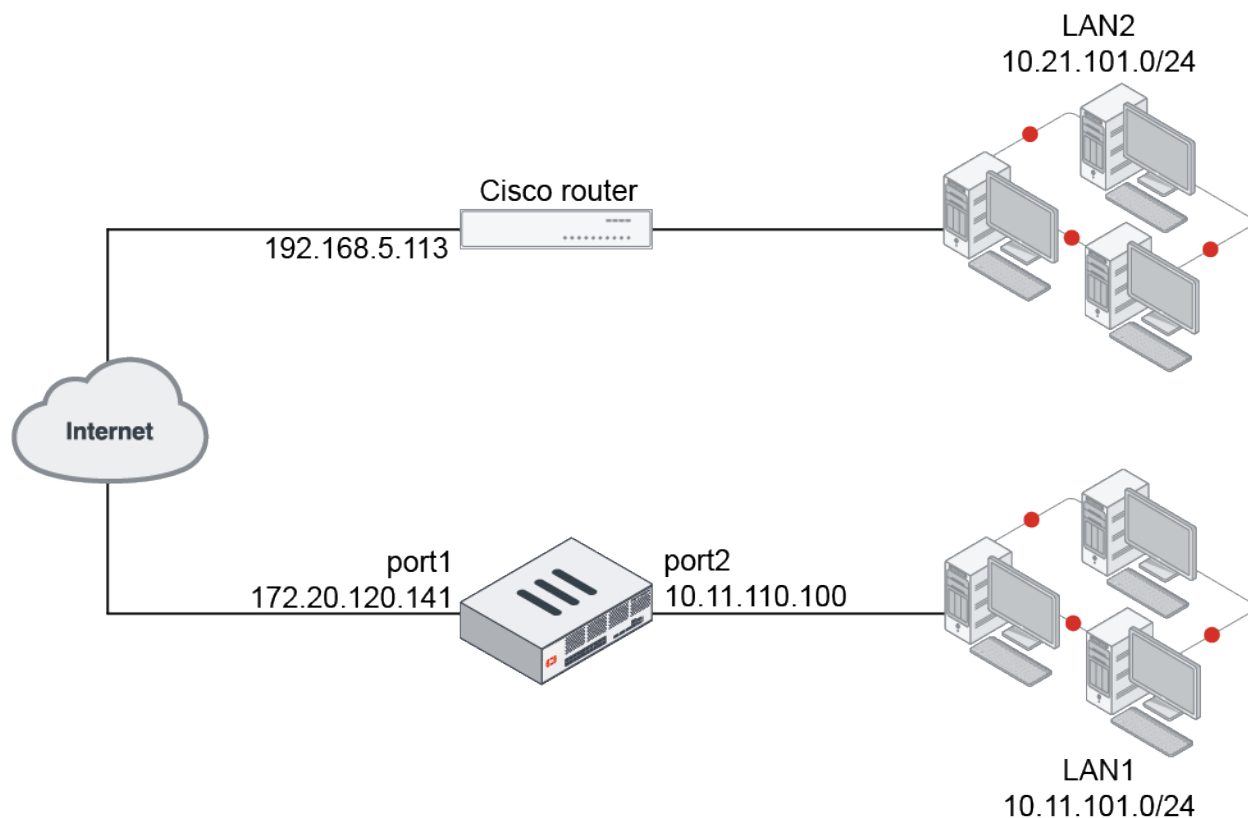

## Configuring the FortiGate

There are five steps to configure GRE-over-IPsec with a FortiGate and Cisco router:

1. [Enable overlapping subnets.](#)
2. [Configure a route-based IPsec VPN on the external interface.](#)
3. [Configure a GRE tunnel on the virtual IPsec interface.](#)
4. [Configure security policies.](#)
5. [Configure the static route.](#)

## Enabling overlapping subnets

Overlapping subnets are required because the IPsec and GRE tunnels will use the same addresses. By default, each FortiGate network interface must be on a separate network. This configuration assigns an IPsec tunnel endpoint and the external interface to the same network.

### To enable overlapping subnets:

```
config system settings
    set allow-subnet-overlap enable
next
end
```

## Configuring a route-based IPsec VPN

A route-based VPN that use encryption and authentication algorithms compatible with the Cisco router is required. Pre-shared key authentication is used in this configuration.

### To configure route-based IPsec in the GUI:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. Enter the tunnel name (*tocisco*) and click *Next*.
3. Enter the following:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	Cisco router public interface (192.168.5.113)
<b>Interface</b>	FortiGate public interface (172.20.120.141)
<b>Authentication Method</b>	Pre-shared Key
<b>Pre-shared Key</b>	Entry must match the pre-shared key on the Cisco router
<b>Mode</b>	Main (ID Protection)
<b>Phase 1 Proposal</b>	3DES-SHA1, AES128-SHA1 (at least one proposal must match the settings on the Cisco router)
<b>Local Address</b>	GRE local tunnel endpoint IP address (172.20.120.141)
<b>Remote Address</b>	GRE remote tunnel endpoint IP address (192.168.5.113)
<b>Phase 2 Proposal</b>	3DES-MD5 (at least one proposal must match the settings on the Cisco router)
<b>Local Port</b>	0
<b>Remote Port</b>	0
<b>Protocol</b>	47

4. Click *OK*.
5. If the Cisco router is configured to use transport mode IPsec, configure transport mode on the FortiGate:

```
config vpn phase2-interface
  edit tocisco_p2
    set encapsulation transport-mode
  next
end
```

### To configure route-based IPsec in the CLI:

```
config vpn ipsec phase1-interface
  edit tocisco
    set interface port1
    set proposal 3des-sha1 aes128-sha1
    set remote-gw 192.168.5.113
    set psksecret xxxxxxxxxxxxxxxxx
  next
end
```

```
config vpn ipsec phase2-interface
  edit tocisco_p2
    set phase1name tocisco
    set proposal 3des-md5
    set encapsulation [tunnel-mode | transport-mode]
    set protocol 47
    set src-addr-type ip
    set dst-start-ip 192.168.5.113
    set src-start-ip 172.20.120.141
  next
end
```

**To add the IPsec tunnel end addresses:**

```
config system interface
  edit tocisco
    set ip 172.20.120.141 255.255.255.255
    set remote-ip 192.168.5.113
  next
end
```

## Configuring the GRE tunnel

The local gateway and remote gateway addresses must match the local and remote gateways of the IPsec tunnel. The GRE tunnel runs between the virtual IPsec public interface on the FortiGate unit and the Cisco router.

**To configure the GRE tunnel:**

```
config system gre-tunnel
  edit gre1
    set interface tocisco
    set local-gw 172.20.120.141
    set remote-gw 192.168.5.113
    set keepalive-interval <integer>
    set keepalive-failtimes <integer>
  next
end
```

The Cisco router configuration requires an address for its end of the GRE tunnel, so you need to add the tunnel end addresses.

**To add the tunnel end addresses:**

```
config system interface
  edit gre1
    set ip 10.0.1.1 255.255.255.255
    set remote-ip 10.0.1.2
  next
end
```

## Configuring the security policies

Two sets of security policies are required:

- Policies to allow traffic to pass in both directions between the GRE virtual interface and the IPsec virtual interface.
- Policies to allow traffic to pass in both directions between the protected network interface and the GRE virtual interface.

### To configure security policies in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Enter the following to allow traffic between the protected network and the GRE tunnel:

<b>Name</b>	LANtoGRE
<b>Incoming Interface</b>	Interface that connects to the private network behind the FortiGate (port2)
<b>Outgoing Interface</b>	GRE tunnel virtual interface (gre1)
<b>Source</b>	All
<b>Destination</b>	All
<b>Action</b>	ACCEPT
<b>NAT</b>	Disable

3. Click *OK*.
4. Create a new policy and enter the following to allow traffic between the GRE tunnel and the protected network:

<b>Name</b>	GREtoLAN
<b>Incoming Interface</b>	GRE tunnel virtual interface (gre1)
<b>Outgoing Interface</b>	Interface that connects to the private network behind the FortiGate (port2)
<b>Source</b>	All
<b>Destination</b>	All
<b>Action</b>	ACCEPT
<b>NAT</b>	Disable

5. Click *OK*.
6. Create a new policy and enter the following to allow traffic between the GRE virtual interface and the IPsec virtual interface:

<b>Name</b>	GREtoIPsec
<b>Incoming Interface</b>	GRE tunnel virtual interface (gre1)
<b>Outgoing Interface</b>	Virtual IPsec interface (tocisco)
<b>Source</b>	All
<b>Destination</b>	All
<b>Action</b>	ACCEPT
<b>NAT</b>	Disable

7. Click *OK*.

8. Create a new policy and enter the following to allow traffic between the IPsec virtual interface and the GRE virtual interface:

<b>Name</b>	IPsectoGRE
<b>Incoming Interface</b>	Virtual IPsec interface (tocisco)
<b>Outgoing Interface</b>	GRE tunnel virtual interface (gre1)
<b>Source</b>	All
<b>Destination</b>	All
<b>Action</b>	ACCEPT
<b>NAT</b>	Disable

9. Click OK.

### To configure security policies in the CLI:

```
config firewall policy
  edit 1
    set name LANtoGRE
    set srcintf port2
    set dstintf gre1
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
  edit 2
    set name GREtoLAN
    set srcintf gre1
    set dstintf port2
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
  edit 3
    set name GREtoIPsec
    set srcintf gre1
    set dstintf tocisco
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
  edit 4
    set name IPsectoGRE
    set srcintf tocisco
    set dstintf gre1
    set srcaddr all
    set dstaddr all
```

```

        set action accept
        set schedule always
        set service ALL
    next
end

```

## Configuring routing

to direct traffic destined for the network behind the Cisco router into the GRE-over-IPsec tunnel. Traffic destined for the network behind the Cisco router must be routed to the GRE tunnel. To do this, create a static route

### To create the static route in the GUI:

1. Go to *Network > Static Routes* and click *Create New*.
2. Enter the following:

<b>Destination</b>	IP and netmask for the network behind the Cisco router (10.21.101.0 255.255.255.0)
<b>Interface</b>	GRE tunnel virtual interface (gre1)
<b>Administrative Distance</b>	Leave the default setting

3. Click *OK*.

### To create the static route in the CLI:

```

config router static
    edit 0
        set device gre1
        set dst 10.21.101.0 255.255.255.0
    next
end

```

## Configuring the Cisco router

For more information, refer to [Configuring and verifying a GRE over IPsec tunnel](#) in the Fortinet Knowledge Base.

## Remote access

Remote access lets users connect to the Internet using a dialup connection over traditional POTS or ISDN telephone lines. Virtual private network (VPN) protocols are used to secure these private connections.


The following topics provide instructions on configuring remote access:

- [FortiGate as dialup client on page 1657](#)
- [FortiClient as dialup client on page 1663](#)
- [Add FortiToken multi-factor authentication on page 1667](#)
- [Add LDAP user authentication on page 1668](#)
- [iOS device as dialup client on page 1669](#)
- [IKE Mode Config clients on page 1673](#)
- [IPsec VPN with external DHCP service on page 1678](#)

- [L2TP over IPsec on page 1681](#)
- [Tunneled Internet browsing on page 1685](#)
- [Dialup IPsec VPN with certificate authentication on page 1691](#)
- [Restricting VPN access to rogue/non-compliant devices with Security Fabric](#)

## FortiGate as dialup client

This is a sample configuration of dialup IPsec VPN and the dialup client. In this example, a branch office FortiGate connects via dialup IPsec VPN to the HQ FortiGate.

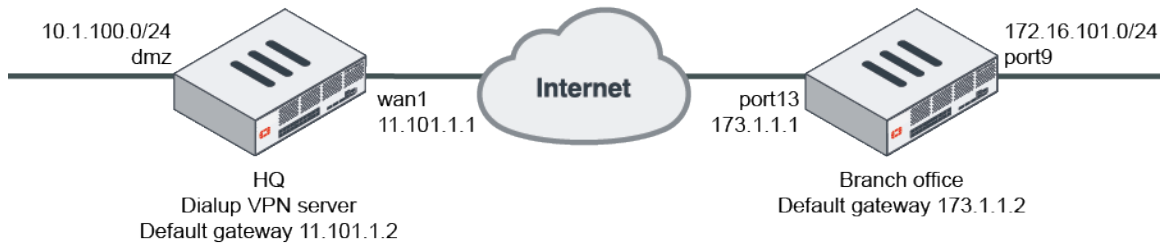

You can configure dialup IPsec VPN with FortiGate as the dialup client using the [GUI](#) or [CLI](#).

### To configure IPsec VPN with FortiGate as the dialup client in the GUI:

1. Configure the dialup VPN server FortiGate:
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *The remote site is behind NAT*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Incoming Interface*, select the incoming interface.
    - ii. For *Authentication Method*, select *Pre-shared Key*.
    - iii. In the *Pre-shared Key* field, enter *your-psk* as the key.
    - iv. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the local interface.
    - ii. Configure the *Local Subnets* as *10.1.100.0/24*.
    - iii. Configure the *Remote Subnets* as *172.16.101.0/24*.
    - iv. Click *Create*.
2. Configure the dialup VPN client FortiGate:
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *This site is behind NAT*.
    - v. Click *Next*.

- b. Configure the following settings for *Authentication*:
  - i. For *IP Address*, enter *11.101.1.1*.
  - ii. For *Outgoing Interface*, select *port13*.
  - iii. For *Authentication Method*, select *Pre-shared Key*.
  - iv. In the *Pre-shared Key* field, enter *your-psk* as the key.
  - v. Click *Next*.
- c. Configure the following settings for *Policy & Routing*:
  - i. From the *Local Interface* dropdown menu, select the local interface. In this example, it is *port9*.
  - ii. Configure the *Local Subnets* as *172.16.101.0*.
  - iii. Configure the *Remote Subnets* as *10.1.100.0*.
  - iv. Click *Create*.

### To configure IPsec VPN with FortiGate as the dialup client in the CLI:

1. In the CLI, configure the user, user group, and firewall address. Only the HQ dialup server FortiGate needs this configuration. The address is an IP pool to assign an IP address for the dialup client FortiGate.

```
config user local
    edit "vpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
config firewall address
    edit "client_range"
        set type iprange
        set start-ip 10.10.10.1
        set end-ip 10.10.10.200
    next
end
```

2. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

- a. Configure the HQ FortiGate.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 11.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 11.101.1.2
        set device "wan1"
    next
end
```



**b. Configure the branch office FortiGate.**

```
config system interface
    edit "port13"
        set vdom "root"
        set ip 173.1.1.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 173.1.1.2
        set device "port13"
    next
end
```

**3. Configure the internal interface and protected subnet. The internal interface connects to the internal network. Traffic from this interface will route out the IPsec VPN tunnel.****a. Configure the HQ FortiGate.**

```
config system interface
    edit "dmz"
        set vdom "root"
        set ip 10.1.100.1 255.255.255.0
    next
end
config firewall address
    edit "10.1.100.0"
        set subnet 10.1.100.0 255.255.255.0
    next
end
```

**b. Configure the branch office FortiGate.**

```
config system interface
    edit "port9"
        set vdom "root"
        set ip 172.16.101.1 255.255.255.0
    next
end
config firewall address
    edit "172.16.101.0"
        set subnet 172.16.101.0 255.255.255.0
    next
end
```

**4. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.****a. Configure the HQ FortiGate.**

```
config vpn ipsec phase1-interface
    edit "for_Branch"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype any
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
```

```

        set dpd on-idle
        set xauthtype auto
        set authusrgrp "vpngroup"
        set net-device enable
        set assign-ip-from name
        set dns-mode auto
        set ipv4-split-include "10.1.100.0"
        set ipv4-name "client_range"
        set save-password enable
        set psksecret sample
        set dpd-retryinterval 60
    next
end

```

**b. Configure the branch office FortiGate.**

```

config vpn ipsec phase1-interface
    edit "to_HQ"
        set interface "port13"
        set mode aggressive
        set peertype any
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set xauthtype client
        set authusr "vpnuser1"
        set authpasswd vpnuser1-password
        set remote-gw 11.101.1.1
        set psksecret sample
    next
end

```

**5. Configure the IPsec phase2-interface.**

**a. Configure the HQ FortiGate:**

```

config vpn ipsec phase2-interface
    edit "for_Branch_p2"
        set phase1 name "for_Branch"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end

```

**b. Configure the branch office FortiGate.**

```

config vpn ipsec phase2-interface
    edit "to_HQ_p2"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end

```

**6. Configure the static routes on the branch office FortiGate. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.**

```

config router static
    edit 2

```

```

        set dst 10.1.100.0 255.255.255.0
        set device "to_HQ"
    next
    edit 3
        set dst 10.1.100.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end

```

7. Configure the firewall policy to allow the branch office to HQ network flow over the IPsec tunnel. This configuration only supports traffic from the branch office FortiGate to the HQ FortiGate. Traffic is dropped from the HQ FortiGate to the branch office FortiGate.

- a. Configure the HQ FortiGate.

```

config firewall policy
    edit 1
        set name "inbound"
        set srcintf "for_Branch"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

- b. Configure the branch office FortiGate.

```

config firewall policy
    edit 1
        set name "outbound"
        set srcintf "port9"
        set dstintf "to_HQ"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

8. Run diagnose commands to check the IPsec phase1/phase2 interface status. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.

- a. Run the `diagnose vpn ike gateway list` command on the HQ FortiGate. The system should return the following:

```

vd: root/0
name: for_Branch_0
version: 1
interface: wan1 5
addr: 11.101.1.1:500 -> 173.1.1.1:500
created: 1972s ago
xauth-user: vpnuser1
assigned IPv4 address: 10.10.10.1/255.255.255.252
IKE SA: created 1/1 established 1/1 time 10/10/10 ms

```

```

IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 184 5b1c59fab2029e43/bf517e686d3943d2
direction: responder
status: established 1972-1972s ago = 10ms
proposal: aes128-sha256
key: 8046488e92499247-fbbb4f6dfa4952d0
lifetime/rekey: 86400/84157
DPD sent/recvd: 00000020/00000000

```

- b. Run the `diagnose vpn tunnel list` command on the HQ FortiGate. The system should return the following:**

```

list all ipsec tunnel in vd 0
name=for_Branch_0 ver=1 serial=9 11.101.1.1:0->173.1.1.1:0 tun_id=173.1.1.1
bound_if=5 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/208 options
[00d0]=create_dev no-sysctlrgwy-chg
parent=for_Branch index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=8 olast=8 ad=/0
stat: rxp=8 txp=8 rxb=1216 txb=672
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=31
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=for_Branch_p2 proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:0.0.0.0-255.255.255.255:0
SA: ref=3 options=226 type=00 soft=0 mtu=1438 expire=41297/0B replaywin=2048 seqno=9
esn=0 replaywin_lastseq=00000009 itn=0
life: type=01 bytes=0/0 timeout=43190/43200
dec: spi=747c10c6 esp=aes key=16 278c2430e09e74f1e229108f906603b0
ah=sha1 key=20 21dad76b008d1e8b8e53148a2fcdb013a277974a
enc: spi=ca646448 esp=aes key=16 b7801d125804e3610a556da7caefd765
ah=sha1 key=20 a70164c3094327058bd84c1a0c954ca439709206
dec:pkts/bytes=8/672, enc:pkts/bytes=8/1216

name=for_Branchver=1 serial=6 11.101.1.1:0->0.0.0.0:0 tun_id=1.0.0.0
bound_if=5 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/16 options[0010]=create_
dev
proxyid_num=0 child_num=1 refcnt=14 ilast=8523 olast=8523 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0

```

- c. Run the `diagnose vpn ike gateway list` command on the branch office FortiGate. The system should return the following:**

```

vd: root/0
name: to_HQ
version: 1
interface: port13 42
addr: 173.1.1.1:500 -> 11.101.1.1:500
created: 2016s ago
assigned IPv4 address: 10.10.10.1/255.255.255.252
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 93 5b1c59fab2029e43/bf517e686d3943d2
direction: initiator
status: established 2016-2016s ago = 0ms
proposal: aes128-sha256

```


```
key: 8046488e92499247-fbbb4f6dfa4952d0
lifetime/rekey: 86400/84083
DPD sent/recvd: 00000000/00000020
```

- d. Run the `diagnose vpn tunnel list` command on the branch office FortiGate. The system should return the following:

```
list all ipsec tunnel in vd 0
name=to_HQver=1 serial=7 173.1.1.1:0->11.101.1.1:0 tun_id=11.101.1.1
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encaps=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=13 ilast=18 olast=58 ad=/0
stat: rxp=1 txp=2 rxb=152 txb=168
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=10226 type=00 soft=0 mtu=1438 expire=41015/0B replaywin=2048
seqno=3 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=42898/43200
dec: spi=ca646448 esp=aes key=16 b7801d125804e3610a556da7caefd765
ah=sha1 key=20 a70164c3094327058bd84c1a0c954ca439709206
enc: spi=747c10c6 esp=aes key=16 278c2430e09e74f1e229108f906603b0
ah=sha1 key=20 21dad76b008d1e8b8e53148a2fcbd013a277974a
dec:pkts/bytes=1/84, enc:pkts/bytes=2/304
npu_flag=03 npu_rgw=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=5 dec_npuid=2 enc_
npuid=2
```

## FortiClient as dialup client

This is a sample configuration of dialup IPsec VPN with FortiClient as the dialup client.

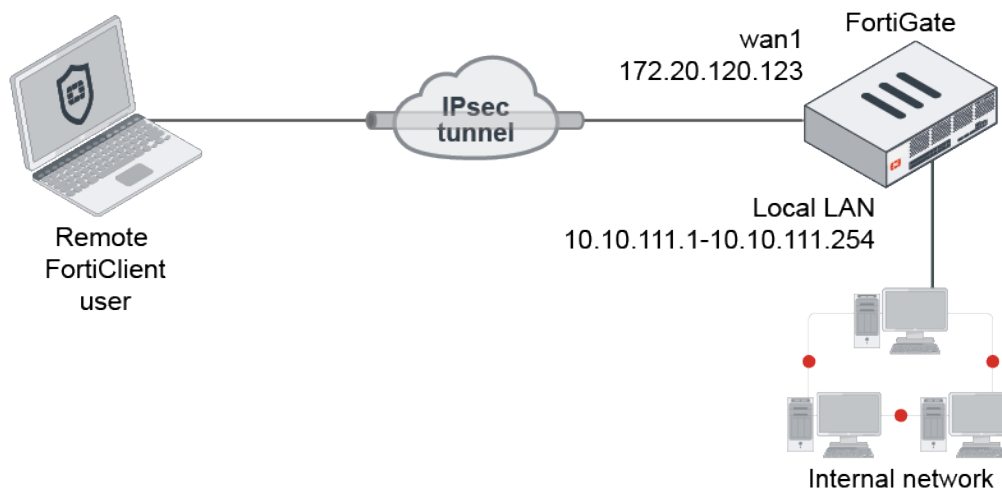

You can configure dialup IPsec VPN with FortiClient as the dialup client using the GUI or CLI.

If multiple dialup IPsec VPNs are defined for the same dialup server interface, each phase1 configuration must define a unique peer ID to distinguish the tunnel that the remote client is connecting to. When a client connects, the first IKE message that is in aggressive mode contains the client's local ID. FortiGate matches the local ID to the dialup tunnel referencing the same Peer ID, and the connection continues with that tunnel.

**To configure IPsec VPN with FortiClient as the dialup client on the GUI:**

1. Configure a user and user group.
  - a. Go to *User & Authentication > User Definition* to create a local user *vpnuser1*.
  - b. Go to *User & Authentication > User Groups* to create a group *vpngroup* with the member *vpnuser1*.
2. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
  - a. Enter a VPN name.
  - b. For *Template Type*, select *Remote Access*.
  - c. For *Remote Device Type*, select *Client-based > FortiClient*.
  - d. Click *Next*.
3. Configure the following settings for *Authentication*:
  - a. For *Incoming Interface*, select *wan1*.
  - b. For *Authentication Method*, select *Pre-shared Key*.
  - c. In the *Pre-shared Key* field, enter *your-psk* as the key.
  - d. From the *User Group* dropdown list, select *vpngroup*.
  - e. Click *Next*.
4. Configure the following settings for *Policy & Routing*:
  - a. From the *Local Interface* dropdown menu, select *lan*.
  - b. Configure the *Local Address* as *local\_network*.
  - c. Configure the *Client Address Range* as *10.10.2.1-10.10.2.200*.
  - d. Keep the default values for the *Subnet Mask*, *DNS Server*, *Enable IPv4 Split tunnel*, and *Allow Endpoint Registration*.
  - e. Click *Next*.
5. Adjust the *Client Options* as needed, then click *Create*.
6. Optionally, define a unique Peer ID in the phase1 configuration:
  - a. Go to *VPN > IPsec Tunnels* and edit the just created tunnel.
  - b. Click *Convert To Custom Tunnel*.
  - c. In the *Authentication* section, click *Edit*.
  - d. Under *Peer Options*, set *Accept Types* to *Specific peer ID*.
  - e. In the *Peer ID* field, enter a unique ID, such as *dialup1*.
  - f. Click *OK*.

**To configure IPsec VPN with FortiClient as the dialup client using the CLI:**

1. In the CLI, configure the user and group.

```
config user local
    edit "vpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
```

2. Configure the internal interface. The LAN interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel. Creating an address group for the protected network behind this

FortiGate causes traffic to this network group to go through the IPsec tunnel.

```
config system interface
    edit "lan"
        set vdom "root"
        set ip 10.10.111.1 255.255.255.0
    next
end
config firewall address
    edit "local_subnet_1"
        set subnet 10.10.111.0 255.255.255.0
    next
    edit "local_subnet_2"
        set subnet 10.10.112.0 255.255.255.0
    next
end
config firewall addrgrp
    edit "local_network"
        set member "local_subnet_1" "local_subnet_2"
    next
end
```

3. Configure the WAN interface. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

4. Configure the client address pool. You must create a firewall address to assign an IP address to a client from the address pool.

```
config firewall address
    edit "client_range"
        set type iprange
        set comment "VPN client range"
        set start-ip 10.10.2.1
        set end-ip 10.10.2.200
    next
end
```

5. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.

```
config vpn ipsec phase1-interface
    edit "for_client"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype one
        set peerid "dialup1"
        set net-device enable
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set xauthtype auto
```

```

        set authusrgrp "vpngroup"
        set assign-ip-from name
        set ipv4-name "client_range"
        set dns-mode auto
        set ipv4-split-include "local_network"
        set save-password enable
        set psksecret your-psk
        set dpd-retryinterval 60
    next
end

```

## 6. Configure the IPsec phase2-interface.

```

config vpn ipsec phase2-interface
    edit "for_client"
        set phase1name "for_client"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end

```

## 7. Configure the firewall policy to allow client traffic flow over the IPsec VPN tunnel.

```

config firewall policy
    edit 1
        set name "inbound"
        set srcintf "for_client"
        set dstintf "lan"
        set srcaddr "client_range"
        set dstaddr "local_network"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

## To configure FortiClient:

1. In FortiClient, go to *Remote Access* and click *Add a new connection*.
2. Set the *VPN* to *IPsec VPN* and the *Remote Gateway* to the FortiGate IP address.
3. Set the *Authentication Method* to *Pre-Shared Key* and enter the key.
4. Expand *Advanced Settings > Phase 1* and in the *Local ID* field, enter *dialup1*.
5. Configure remaining settings as needed, then click *Save*.
6. Select the VPN, enter the username and password, then select *Connect*.

## Diagnose the connection

Run `diagnose` commands to check the IPsec phase1/phase2 interface status. The `diagnose debug application ike -l` command is the key to troubleshoot why the IPsec tunnel failed to establish.

1. Run the `diagnose vpn ike gateway list` command. The system should return the following:

```

vd: root/0
name: for_client_0
version: 1
interface: port1 15

```



```

addr: 172.20.120.123:4500 ->172.20.120.254:64916
created: 37s ago
xauth-user: vpnuser1
assigned IPv4 address: 10.10.1.1/255.255.255.255
nat: me peer
IKE SA: created 1/1 established 1/1 time 10/10/10 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 1 b40a32d878d5e262/8bba553563a498f4
direction: responder
status: established 37-37s ago = 10ms
proposal: aes256-sha256
key: f4ad7ec3a4fcfd09-787e2e9b7bceb9a7-0dfa183240d838ba-41539863e5378381
lifetime/rekey: 86400/86092
DPD sent/recvd: 00000000/00000a0e

```

## 2. Run the diagnose vpn tunnel list command. The system should return the following:

```

list all ipsec tunnel in vd 0
=
=
name=for_client_0 ver=1 serial=3 172.20.120.123:4500->172.20.120.254:64916 tun_
id=172.20.120.254
bound_if=15 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/984 options
[03d8]=npucrate_dev no-sysctlrgwy-chgrport-chg frag-rfcaccept_traffic=1
parent=for_client index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=3 olast=3 ad=/0
stat: rxp=1 txp=0 rxb=16402 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=for_client proto=0 sa=1 ref=2 serial=1 add-route
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:10.10.1.1-10.10.1.1:0
SA: ref=4 options=2a6 type=00 soft=0 mtu=1422 expire=42867/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000001 itn=0
life: type=01 bytes=0/0 timeout=43189/43200
dec: spi=36274d14 esp=aes key=16 e518b84b3c3b667b79f2e61c64a225a6
ah=sha1 key=20 9ccea544ed042fda800c4fe5d3fd9d8b811984a
enc: spi=8b154deb esp=aes key=16 9d50f004b45c122e4e9fb7af085c457c
ah=sha1 key=20 f1d90b2a311049e23be34967008239637b50a328
dec:pkts/bytes=1/16330, enc:pkts/bytes=0/0
npu_flag=02 npu_rgwy=172.20.120.254 npu_lgwy=172.20.120.123npu_selid=0 dec_npuid=2 enc_
npuid=0
name=for_clientver=1 serial=2 172.20.120.123:0->0.0.0.0:0
bound_if=15 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/536 options
[0218]=npucrate_dev frag-rfcaccept_traffic=1
proxyid_num=0 child_num=1 refcnt=11 ilast=350 olast=350 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0

```

## Add FortiToken multi-factor authentication

This configuration adds multi-factor authentication (MFA) to the FortiClient dialup VPN configuration ([FortiClient as dialup client on page 1663](#)). It uses one of the two free mobile FortiTokens that is already installed on the FortiGate.

### To configure MFA using the GUI:

1. Edit the user:
  - a. Go to *User & Authentication > User Definition* and edit local user *vpnuser1*.
  - b. Enable *Two-factor Authentication*.
  - c. For *Authentication Type*, click *FortiToken* and select one mobile *Token* from the list.
  - d. Enter the user's *Email Address*.
  - e. Enable *Send Activation Code* and select *Email*.
  - f. Click *Next* and click *Submit*.
2. Activate the mobile token.
  - a. When a FortiToken is added to user *vpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

### To configure MFA using the CLI:

1. Edit the user and user group:

```
config user local
  edit "vpnuser1"
    set type password
    set two-factor fortitoken
    set fortitoken <select mobile token for the option list>
    set email-to <user's email address>
    set passwd <user's password>
  next
end
```

2. Activate the mobile token.
  - a. When a FortiToken is added to user *vpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

## Add LDAP user authentication

This configuration adds LDAP user authentication to the FortiClient dialup VPN configuration ([FortiClient as dialup client on page 1663](#)). You must have already generated and exported a CA certificate from your AD server.

### To configure LDAP user authentication using the GUI:

1. Import the CA certificate into FortiGate:
  - a. Go to *System > Certificates*.  
If the *Certificates* option is not visible, enable it in *Feature Visibility*. See [Feature visibility on page 2515](#) for details.
  - b. Click *Import > CA Certificate*.
  - c. Set *Type* to *File*.
  - d. Click *Upload* then find and select the certificate file.
  - e. Click *OK*.  
The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.

- f. Optionally, rename the system generated `CA_Cert_1` to something more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

2. Configure the LDAP user:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Set *Name* to *ldaps-server* and specify *Server IP/Name*.
  - c. Specify *Common Name Identifier* and *Distinguished Name*.
  - d. Set *Bind Type* to *Regular*.
  - e. Specify *Username* and *Password*.
  - f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
  - g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
  - h. Click *OK*.
3. Add the LDAP user to the user group:
  - a. Go to *User & Authentication > User Groups* and edit the *vpngroup* group.
  - b. In *Remote Groups*, click *Add* to add the *ldaps-server* remote server.
  - c. Click *OK*.

#### To configure LDAP user authentication using the CLI:

1. Import the CA certificate using the GUI.
2. Configure the LDAP user:


```
config user ldap
    edit "ldaps-server"
        set server "172.20.120.161"
        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password *****
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
    next
end
```

3. Add the LDAP user to the user group:

```
config user group
    edit "vpngroup"
        append member "ldaps-server"
    next
end
```

## iOS device as dialup client

This is a sample configuration of dialup IPsec VPN with an iPhone or iPad as the dialup client.

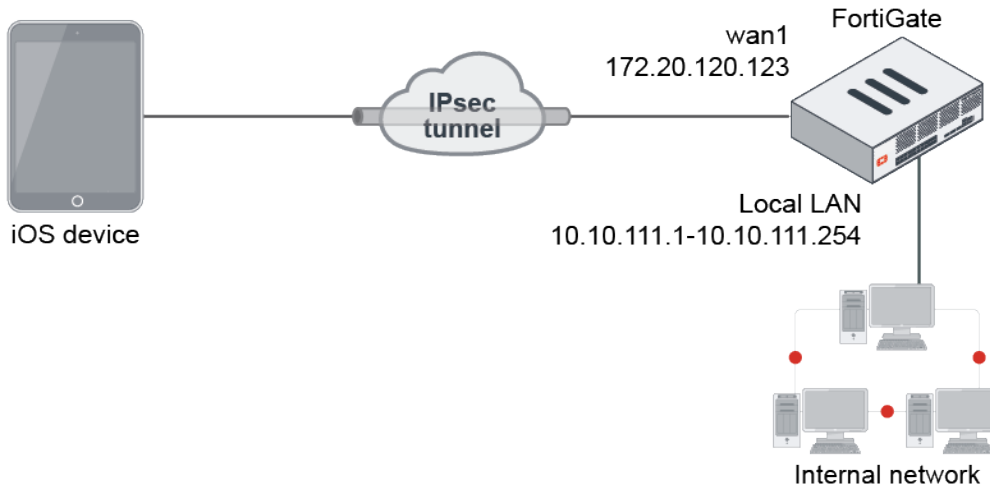

You can configure dialup IPsec VPN with an iOS device as the dialup client using the [GUI](#) or [CLI](#).

### To configure IPsec VPN with an iOS device as the dialup client on the GUI:

- Go to **VPN > IPsec Wizard** and configure the following settings for **VPN Setup**:
  - Enter a VPN name.
  - For **Template Type**, select *Remote Access*.
  - For **Remote Device Type**, select *Native > iOS Native*.
  - For **NAT Configuration**, set *No NAT Between Sites*.
  - Click **Next**.
- Configure the following settings for **Authentication**:
  - For **Incoming Interface**, select *wan1*.
  - For **Authentication Method**, select *Pre-shared Key*.
  - In the **Pre-shared Key** field, enter *your-psk* as the key.
  - From the **User Group** dropdown list, select *vpngroup*.
  - Deselect *Require 'Group Name' on VPN client*.
  - Click **Next**.
- Configure the following settings for **Policy & Routing**:
  - From the **Local Interface** dropdown menu, select *lan*.
  - Configure the **Local Address** as *local\_network*.
  - Configure the **Client Address Range** as *10.10.2.1-10.10.2.200*.
  - Keep the default values for the **Subnet Mask**, **DNS Server**, and **Enable IPv4 Split tunnel**.
  - Click **Create**.

### To configure IPsec VPN with an iOS device as the dialup client using the CLI:

- In the CLI, configure the user and group.

```
config user local
  edit "vpnuser1"
    set type password
    set passwd your-password
  next
end
```

```
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
```

2. Configure the internal interface. The LAN interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel. Creating an address group for the protected network behind this FortiGate causes traffic to this network group to go through the IPsec tunnel.

```
config system interface
    edit "lan"
        set vdom "root"
        set ip 10.10.111.1 255.255.255.0
    next
end
```

```
config firewall address
    edit "local_subnet_1"
        set ip 10.10.111.0 255.255.255.0
    next
end
```

```
config firewall address
    edit "local_subnet_2"
        set ip 10.10.112.0 255.255.255.0
    next
end
```

```
config firewall addrgrp
    edit "local_network"
        set member "local_subnet_1" "local_subnet_2"
    next
end
```

3. Configure the WAN interface. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

4. Configure the client address pool. You must create a firewall address to assign an IP address to a client from the address pool.

```
config firewall address
    edit "client_range"
        set type iprange
        set comment "VPN client range"
        set start-ip 10.10.2.1
        set end-ip 10.10.2.200
    next
end
```

5. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.

```

config vpn ipsec phase1-interface
  edit "for_ios_p1"
    set type dynamic
    set interface "wan1"
    set peertype any
    set net-device enable
    set mode-cfg enable
    set proposal aes256-sha256 aes256-md5 aes256-sha1
    set dpd on-idle
    set dhgrp 14 5 2
    set xauthtype auto
    set authusrgrp "vpngroup"
    set assign-ip-from name
    set ipv4-name "client_range"
    set dns-mode auto
    set ipv4-split-include "local_network"
    set psksecret your-psk
    set dpd-retryinterval 60
  next
end

```

**6. Configure the IPsec phase2-interface.**

```

config vpn ipsec phase2-interface
  edit "for_ios_p2"
    set phase1name "for_ios_p1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    set pfs disable
    set keepalive enable
  next
end

```

**7. Configure the firewall policy to allow client traffic flow over the IPsec VPN tunnel.**

```

config firewall policy
  edit 1
    set name "ios_vpn"
    set srcintf "for_ios_p1"
    set dstintf "lan"
    set srcaddr "ios_range"
    set dstaddr "local_network"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end

```

**8. Configure the iOS device.**

- a. In the iOS device, go to *Settings > General > VPN* and select *Add VPN Configuration*.
  - b. Set the *Type* to *IPsec* and enter a *Description*. Set the *Server* to the FortiGate's Internet-facing interface, and enter the username in *Account*. Enter the user password, the preshared IPsec VPN secret, then select *Done*.
  - c. Ensure that the IPsec VPN configuration is highlighted (indicated by a checkmark), and select the *Not Connected* button. The IPsec VPN connects with the user's credentials and secret. The status changes to *Connected*, and a VPN icon appears at the top of the screen.
- 9. Run `diagnose` commands to check the IPsec phase1/phase2 interface status.** The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.

- a. Run the `diagnose vpn ike gateway list` command. The system should return the following:

```
vd: root/0
name: for_ios_pl_0
version: 1
interface: port1 15
addr: 172.20.120.123:4500 -> 172.20.120.254:64916
created: 17s ago
xauth-user: ul
assigned IPv4 address: 10.10.2.1/255.255.255.255
nat: me peer
IKE SA: created 1/1 established 1/1 time 150/150/150 ms
IPsec SA: created 1/1 established 1/1 time 10/10/10 ms
id/spi: 2 3c844e13c75591bf/80c2db92c8d3f602 direction: responder status: established
17-17s ago = 150ms proposal: aes256-sha256 key: 0032ea5ee160d775-51f3bf1f9909101b-
b89c7b5a77a07784-2c92cf9c921801ac lifetime/rekey: 3600/3312 DPD sent/recvd:
00000000/00000000
```

- b. Run the `diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0
=
=
name=for_ios_pl_0 ver=1 serial=172.20.120.123:4500->172.20.120.254:64916 tun_
id=172.20.120.254
bound_if=15 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/984 options
[03d8]=npu create_dev no-sysctl rgwy-chg rport-chg frag-rfc accept_traffic=1
parent=for_ios_pl index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=23 olast=23 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=for_ios_pl proto=0 sa=1 ref=2 serial=1 add-route
src: 0:10.10.111.0-10.10.111.255:0 dst: 0:10.10.2.1-10.10.2.1:0 SA: ref=3 options=a7
type=00 soft=0 mtu=1422 expire=3564/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=3587/3600 dec: spi=36274d15 esp=aes key=32
5a599d796f8114c83d6589284f036fc33bdf4456541e2154b4ac2217b6aec869
ah=sha1 key=20 f1efdeb77d6f856a8dd3a30cbc23cb0f8a3e0340
enc: spi=00b0d9ab esp=aes key=32
e9232d7a1c4f390fd09f8409c2d85f80362d940c08c73f245908ab1ac3af322f
ah=sha1 key=20 a3890d6c5320756291cad85026d3a78fd42a1b42
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0 npu_flag=00 npu_rgwy=172.20.120.254 npu_
lgwy=172.20.120.123 npu_selid=1 dec_npuid=0 enc_npuid=0
```

## IKE Mode Config clients

IKE Mode Config is an alternative to DHCP over IPsec. It allows dialup VPN clients to obtain virtual IP address, network, and DNS configurations amongst others from the VPN server. A FortiGate can be configured as either an IKE Mode Config server or client.

IKE Mode Config can configure the host IP address, domain, DNS addresses, and WINS addresses. IPsec parameters such as gateway address, encryption, and authentication algorithms must be configured. Several network equipment vendors support IKE Mode Config.

An IKE Mode Config server or client is configured using `config vpn ipsec phase1-interface` and involves the following parameters:

Parameter	Description
ike-version {1   2}	IKE v1 is the default for FortiGate IPsec VPNs. IKE Mode Config is also compatible with IKE v2.
mode-cfg {enable   disable}	Enable/disable IKE Mode Config.
type {static   dynamic   ddns}	If you set <code>type</code> to <code>dynamic</code> , an IKE Mode Config server is created. The other settings create an IKE Mode Config client.
assign-ip {enable   disable}	Enable to request an IP address from the server. This configuration is for IKE Mode Config clients only.
interface <interface_name>	Specify the physical, aggregate, or VLAN interface to which the IPsec tunnel will be bound.
proposal <encryption_combination>	The encryption and authentication settings that the client will accept.
ip-version {4   6}	By default, IPsec VPNs use IPv4 addressing.
ipv4-split-include <string> ipv6-split-include <string>	Mode Config server configuration. Applicable to IKEv1 and IKEv2. Specify the firewall address or address group that represents the subnets that the clients will have access to. This information is sent to the clients so that default traffic should not flow over the IPsec tunnel except for the specified subnets.
split-include-service <string>	Mode Config server configuration. Applicable to IKEv1 and IKEv2. Specify the service or service group that represents the services that the clients will have access to. This information is sent to the clients so that default traffic should not flow over the IPsec tunnel except for the specified services.
ipv4-split-exclude <string> ipv6-split-exclude <string>	Specify the subnets that should not be accessed over the IPsec tunnel. This information is sent to the clients so that all default traffic should flow over the IPsec tunnel except for the specified subnets. See <a href="#">Split-exclude in IKEv1</a> .

## Creating an IKE Mode Config client

In this example, the FortiGate connects to a VPN gateway with a static IP address that can be reached through port 1. Only the port, gateway, and proposal information needs to be configured. All other configuration information will come from the IKE Mode Config server.

### To configure an IKE Mode Config client:

```
config vpn ipsec phase1-interface
    edit vpn1
        set ip-version 4
        set type static
        set remote-gw <gw_address>
        set interface port1
        set proposal 3des-sha1 aes128-sha1
        set mode-cfg enable
```



```
        set assign-ip enable
    next
end
```

### Split-exclude in IKEv1

The `split-exclude` option specifies that default traffic flows over the IPsec tunnel except for specified subnets. This is the opposite of `split-include`, which specifies that default traffic should not flow over the IPsec tunnel except for specified subnets. The `split-include` and `split-exclude` options can be specified at the same time.

#### To configure split-exclude:

```
config vpn ipsec phase1-interface
    edit <name>
        set ike-version 1
        set type dynamic
        set mode-cfg enable
        set ipv4-split-exclude <string>
        set ipv6-split-exclude <string>
    next
end
```

## Creating an IKE Mode Config server

#### To configure IKE Mode config settings, the following must be configured first :

```
config vpn ipsec phase1-interface
    edit "vpn-p1"
        set type dynamic
        set interface <interface_name>
        set ike-version < 1 | 2 >
        set mode-cfg enable
        set proposal <encryption_combination>
        set ip-version < 4 | 6 >
    next
end
```

In this example, the FortiGate assigns IKE Mode Config clients addresses in the range of 10.11.101.160 - 10.11.101.180. DNS and WINS server addresses are also provided. The public interface of the FortiGate unit is port1.

When IKE Mode-Configuration is enabled, multiple server IPs can be defined in IPsec phase 1.

The `ipv4-split-include` parameter specifies a firewall address (`OfficeLAN`), which represents the networks that the clients will have access to. This destination IP address information is sent to the clients.

#### To configure an IKE Mode Config server:

```
config vpn ipsec phase1-interface
    edit "vpn-p1"
        set type dynamic
        set interface "wan1"
        set xauthtype auto
        set mode aggressive
        set mode-cfg enable
```

```
set proposal 3des-sha1 aes128-sha1
set dpd disable
set dhgrp 2
set authusrgrp "FG-Group1"
set ipv4-start-ip 10.10.10.10
set ipv4-end-ip 10.10.10.20
set ipv4-dns-server1 1.1.1.1
set ipv4-dns-server2 2.2.2.2
set ipv4-dns-server3 3.3.3.3
set ipv4-wins-server1 4.4.4.4
set ipv4-wins-server2 5.5.5.5
set domain "fgt1c-domain"
set banner "fgt111C-banner"
set backup-gateway "100.100.100.1" "host1.com" "host2"
set ipv4-split-include OfficeLAN
next
end
```

## Assigning IP addresses

Once the basic configuration is enabled, you can configure IP address assignment for clients, as well as DNS and WINS server assignments. Usually you will want to assign IP addresses to clients. The easiest way is to assign addresses from a specific range, similar to a DHCP server.

### To assign an IP from an address range:

```
config vpn ipsec phase1-interface
edit vpn1
set ip-version 4
set assign-ip enable
set assign-ip-from range
set ipv4-start-ip <range_start>
set ipv4-end-ip <range_end>
set ipv4-netmask <netmask>
next
end
```

### To assign an IP from a named firewall address or group:

```
config vpn ipsec phase1-interface
edit vpn1
set type dynamic
set assign-ip-from name
set ipv4-name <name>
set ipv6-name <name>
next
end
```

## RADIUS server

If the client is authenticated by a RADIUS server, you can obtain the user's IP address assignment from the Framed-IP-Address attribute. The user must be authenticated using XAuth.

The users must be authenticated by a RADIUS server and assigned to the FortiGate user group `<grp_name>`. Since the IP address is not static, type is set to dynamic and `mode-cfg` is enabled. With IKE Mode Config, compatible clients can configure themselves with settings provided by the FortiGate.

**To assign an IP from a RADIUS server:**

```
config vpn ipsec phase1-interface
    edit vpn1
        set type dynamic
        set mode-cfg enable
        set assign-ip enable
        set assign-ip-from usrgroup
        set xauthtype auto
        set authusrgroup <grp_name>
    next
end
```

**DHCP server**

IKE Mode Config can use a remote DHCP server to assign the client IP addresses. Up to eight server addresses can be selected for either IPv4 or IPv6. The DHCP proxy must be enabled first.

**To assign an IP from a DHCP server:**

```
config system settings
    set dhcp-proxy enable
    set dhcp-server-ip <address>
    set dhcp6-server-ip <address>
end

config vpn ipsec phase1-interface
    edit vpn1
        set mode-cfg enable
        set assign-ip-from dhcp
    next
end
```

**Certificate groups**

IKE certificate groups consisting of up to four RSA certificates can be used in IKE phase 1. Since CA and local certificates are global, the IKE daemon loads them once for all VDOMs and indexes them into trees based on subject and public key hash (for CA certificates), or certificate name (for local certificates). Certificates are linked together based on the issuer, and certificate chains are built by traversing these links. This reduces the need to keep multiple copies of certificates that could exist in multiple chains.

**To configure the IKE local ID:**

```
config vpn certificate local
    edit <name>
        set ike-localid <string>
        set ike-localid-type {asn1dn | fqdn}
    next
end
```

## Split-exclude in IKEv1

The `split-exclude` setting specifies that default traffic flows over the IPsec tunnel except for specified subnets. This is the opposite of `split-include`, which specifies that default traffic should not flow over the IPsec tunnel except for specified subnets. The `split-include` and `split-exclude` settings can be specified at the same time.


### To configure split-exclude:

```
config vpn ipsec phase1-interface
    edit <name>
        set ike-version 1
        set type dynamic
        set mode-cfg enable
        set ipv4-split-exclude <string>
        set ipv6-split-exclude <string>
    next
end
```

## IPsec VPN with external DHCP service

You can use an external DHCP server to assign IP addresses to your IPsec VPN clients. This is a common scenario found in enterprises where all DHCP leases need to be managed centrally.

In this example, the DHCP server assigns IP addresses in the range of 172.16.6.100 to 172.16.6.120. The server is attached to internal2 on the FortiGate and has an IP address of 192.168.3.70.

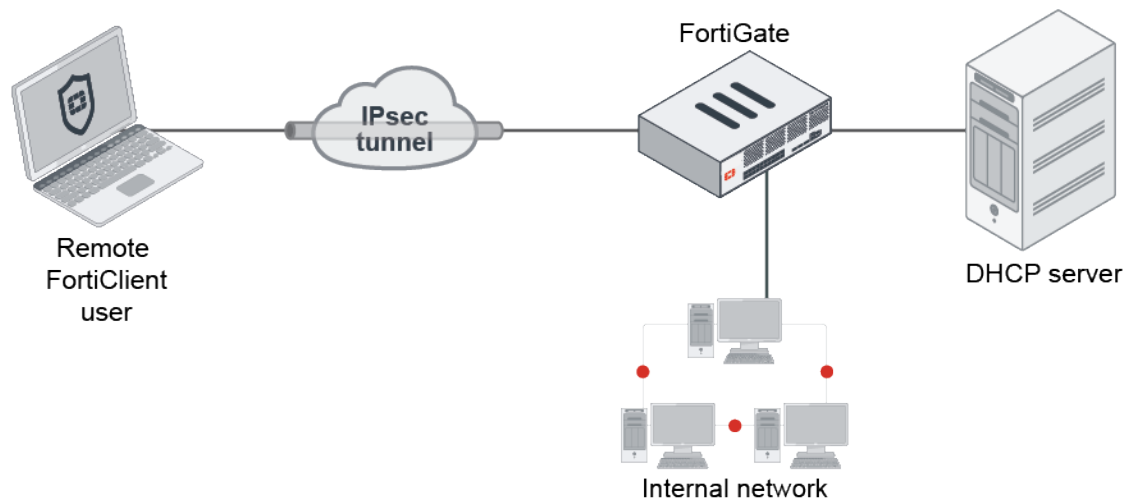

### To configure a DHCP server to assign IP addresses to IPsec VPN clients:

1. Create a user group for remote users:
  - a. Go to *User & Authentication > User Definition* and click *Create New*.
  - b. For *User Type*, select *Local User*.
  - c. Complete the wizard, and click *Submit*.
  - d. Go to *User & Authentication > User Groups* and click *Create New..*
  - e. Create a *Firewall* user group for your remote users.

- f. For *Members*, add the user you just created.
  - g. Click OK.
2. Add a firewall address for the local network and IPsec VPN client range:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Create a new *Subnet* address for the LAN, including the IP mask and local interface (*internal2*).
  - c. Click OK.
  - d. Create a new *IP Range* address for the IPsec VPN client range (172.16.6.100–172.16.6.120).
  - e. Click OK.
3. Configure the IPsec VPN using a VPN tunnel in the CLI:

```
config vpn ipsec phase1-interface
    edit "dhcp_vpn"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set dhgrp 5
        set xauthtype auto
        set authusrgrp "ipsecvpn"
        set psksecret *****
        set dpd-retryinterval 60
    next
end


config vpn ipsec phase2-interface
    edit "toclient"
        set phase1name "dhcp_vpn"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set dhgrp 5
        set dhcp-ipsec enable
    next
end
```

4. Configure the IPsec VPN interface:
  - a. Go to *Network > Interfaces* and edit the newly created IPsec VPN interface.
  - b. Enable the *DHCP Server*.
  - c. Expand *Advanced* and change the *Mode* to *Relay*.
  - d. Enter the external DHCP server IP address (192.168.3.70).
  - e. Change the *Type* to *IPsec*.
  - f. Click OK.
5. Create a security policy for access to the local network:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Configure the following parameters:
    - i. Set the *Incoming Interface* to the tunnel interface created in step 3 (*dhcp\_vpn*).
    - ii. Set the *Outgoing Interface* (*internal2*).
    - iii. Set the *Source* to the IPsec VPN client range defined in step 2 (*ipsecvpn\_range*).
    - iv. Set the *Destination* to the subnet address defined in step 2 (*Local LAN*).
    - v. Set the *Service* to *ALL*.

c. Click OK.

6. Configure FortiClient:

a. In FortiClient, go to *REMOTE ACCESS > Add a new connection*.

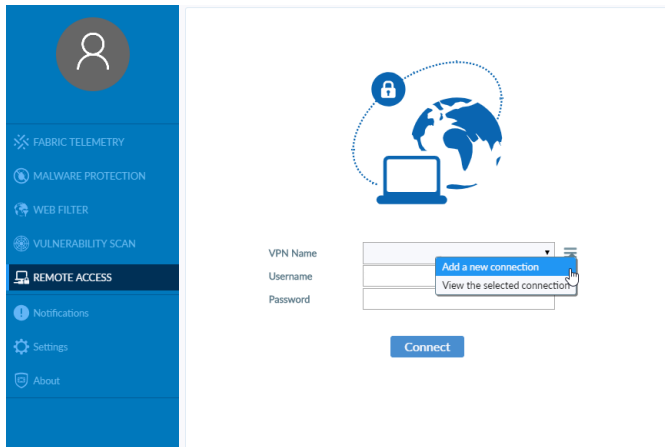


b. Configure the following parameters:

- i. Set the *VPN* type to *IPsec VPN*.
- ii. Enter a connection name.
- iii. Set the *Remote Gateway* to the FortiGate external IP address.
- iv. Set the *Authentication Method* to *Pre-shared key* and enter the key below.
- v. Expand the *Advanced Settings > VPN Settings* and for *Options*, select *DHCP over IPsec*.
- vi. Click *Save*.



c. Select the new connection, and enter the user name and password.

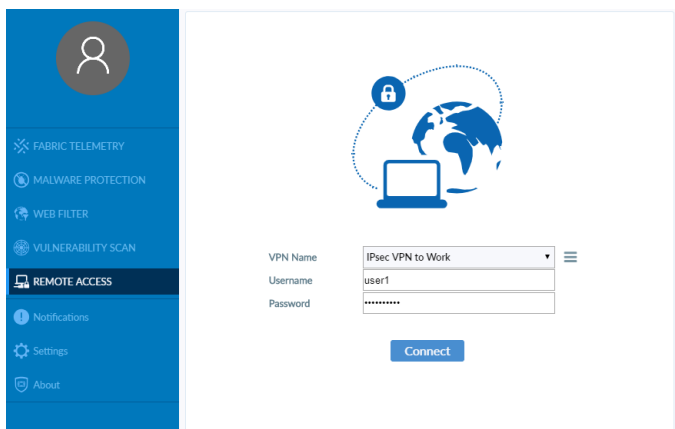d. Click *Connect*.

Once the connection is established, the external DHCP server assigns the user an IP address and FortiClient displays the connection status, including the IP address, connection duration, and bytes sent and received.


## Verification

1. In FortiOS, go to *Monitor > IPsec Monitor* and verify that the tunnel *Status* is *Up*.
2. Go to *Log & Report > Forward Traffic* and verify the *Sent / Received* column displays the traffic flow through the tunnel.

## L2TP over IPsec

This is an example of L2TP over IPsec.

This example uses a locally defined user for authentication, a Windows PC or Android tablet as the client, and `net-device` is set to enable in the `phase1-interface` settings. If `net-device` is set to disable, only one device can establish an L2TP over IPsec tunnel behind the same NAT device.

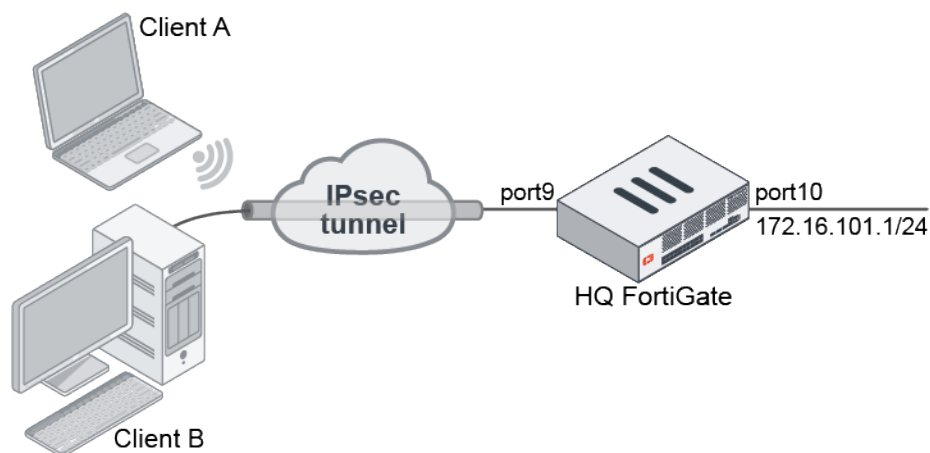

### To configure L2TP over an IPsec tunnel using the GUI:

1. Go to *VPN > IPsec Wizard*.
2. Enter a *VPN Name*. In this example, *L2tpoIPsec*.

3. Configure the following settings for *VPN Setup*:
  - a. For *Template Type*, select *Remote Access*.
  - b. For *Remote Device Type*, select *Native* and *Windows Native*.
  - c. Click *Next*.
4. Configure the following settings for *Authentication*:
  - a. For *Incoming Interface*, select *port9*.
  - b. For *Authentication Method*, select *Pre-shared Key*.
  - c. In the *Pre-shared Key* field, enter *your-psk* as the key.
  - d. For *User Group*, select *L2tpusergroup*
  - e. Click *Next*.
5. Configure the following settings for *Policy & Routing*:
  - a. From the *Local Interface* dropdown menu, select *port10*.
  - b. Configure the *Local Address* as *172.16.101.0*.
  - c. Configure the *Client Address Range* as *10.10.10.1-10.10.10.100*.
  - d. Leave the *Subnet Mask* at its default value.
  - e. Click *Create*.

#### To configure L2TP over an IPsec tunnel using the CLI:

1. Configure the WAN interface and static route on HQ.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure IPsec phase1-interface and phase2-interface on HQ.

```
config vpn ipsec phase1-interface
    edit "L2tpoIPsec"
        set type dynamic
        set interface "port9"
        set peertype any
        set proposal aes256-md5 3des-sha1 aes192-sha1
        set dpd on-idle
        set dhgrp 2
        set net-device enable
        set psksecret sample
        set dpd-retryinterval 60
    next
end
```



```
config vpn ipsec phase2-interface
    edit "L2tpoIPsec"
        set phase1name "L2tpoIPsec"
        set proposal aes256-md5 3des-sha1 aes192-sha1
        set pfs disable
        set encapsulation transport-mode
        set l2tp enable
    next
end
```

### 3. Configure a user and user group on HQ.

```
config user local
    edit "usera"
        set type password
        set passwd usera
    next
end
config user group
    edit "L2tpusergroup"
        set member "usera"
    next
end
```

### 4. Configure L2TP on HQ.

```
config vpn l2tp
    set status enable
    set eip 10.10.10.100
    set sip 10.10.10.1
    set usrgrp "L2tpusergroup"
end
```

### 5. Configure a firewall address that is applied in L2TP settings to assign IP addresses to clients once the L2TP tunnel is established.

```
config firewall address
    edit "L2TPclients"
        set type iprange
        set start-ip 10.10.10.1
        set end-ip 10.10.10.100
    next
end
```

### 6. Configure a firewall policy.

```
config firewall policy
    edit 1
        set name "Bridge_IPsec_port9_for_l2tp negotiation"
        set srcintf "L2tpoIPsec"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "L2TP"
    next
    edit 2
        set srcintf "L2tpoIPsec"
```

```

        set dstintf "port10"
        set srcaddr "L2TPclients"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To view the VPN tunnel list on HQ:

```
# diagnose vpn tunnel list
```

```
list all ipsec tunnel in vd 0
```

```
----
```

```

name=L2tpoIPsec_0 ver=1 serial=8 22.1.1.1:0->10.1.100.15:0 tun_id=10.10.100.15
bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/216 options[00d8]=npu
create_dev no-sysctl rgwy-chg
parent=L2tpoIPsec index=0
proxyid_num=1 child_num=0 refcnt=13 ilast=0 olast=0 ad=/0
stat: rxp=470 txp=267 rxb=57192 txb=12679
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=L2tpoIPsec proto=17 sa=1 ref=3 serial=1 transport-mode add-route
src: 17:22.1.1.1-22.1.1.1:1701
dst: 17:10.1.100.15-10.1.100.15:0
SA: ref=3 options=1a6 type=00 soft=0 mtu=1470 expire=2339/0B replaywin=2048
seqno=10c esn=0 replaywin_lastseq=000001d6 itn=0
life: type=01 bytes=0/0 timeout=3585/3600
dec: spi=ca646443 esp=3des key=24 af62a0fffe85d3d534b5bfba29307aafc8bfda5c3f4650dc
ah=sha1 key=20 89b4b67688bed9be49fb86449bb83f8c8d8d7432
enc: spi=700d28a0 esp=3des key=24 5f68906eca8d37d853814188b9e29ac4913420a9c87362c9
ah=sha1 key=20 d37f901ffd0e6ee1e4fdccbec7fdcc7ad44f0a0a
dec:pkts/bytes=470/31698, enc:pkts/bytes=267/21744
npu_flag=00 npu_rgwy=10.1.100.15 npu_lgwy=22.1.1.1 npu_selid=6 dec_npuid=0 enc_npuid=0
----
```

```

name=L2tpoIPsec_1 ver=1 serial=a 22.1.1.1:4500->22.1.1.2:64916 tun_id=22.1.1.2
bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/472 options[01d8]=npu
create_dev no-sysctl rgwy-chg rport-chg
parent=L2tpoIPsec index=1
proxyid_num=1 child_num=0 refcnt=17 ilast=2 olast=2 ad=/0
stat: rxp=5 txp=4 rxb=592 txb=249
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=L2tpoIPsec proto=17 sa=1 ref=3 serial=1 transport-mode add-route
src: 17:22.1.1.1-22.1.1.1:1701
dst: 17:22.1.1.2-22.1.1.2:0
SA: ref=3 options=1a6 type=00 soft=0 mtu=1454 expire=28786/0B replaywin=2048
seqno=5 esn=0 replaywin_lastseq=00000005 itn=0
life: type=01 bytes=0/0 timeout=28790/28800
dec: spi=ca646446 esp=aes key=32
ea60dfbad709b3c63917c3b7299520ff7606756ca15d2eb7cbff349b6562172e
ah=md5 key=16 2f2acfff0b556935d0aab8fc5725c8ec
enc: spi=0b514df2 esp=aes key=32
a8a92c2ed0e1fd7b6e405d8a6b9eb3be5eff573d80be3f830ce694917d634196

```

```

    ah=md5 key=16 e426c33a7fe9041bdc5ce802760e8a3d
dec:pkts/bytes=5/245, enc:pkts/bytes=4/464
npu_flag=00 npu_rgwy=22.1.1.2 npu_lgwy=22.1.1.1 npu_selid=8 dec_npuid=0 enc_npuid=0

```

### To view the L2TP VPN status:

```


# diagnose debug enable
# diagnose vpn l2tp status
----
----

HQ # Num of tunnels: 2
----
Tunnel ID = 1 (local id), 42 (remote id) to 10.1.100.15:1701
    control_seq_num = 2, control_rec_seq_num = 4,
    last recv pkt = 2
Call ID = 1 (local id), 1 (remote id), serno = 0, dev=ppp1,
    assigned ip = 10.10.10.2
    data_seq_num = 0,
    tx = 152 bytes (2), rx= 21179 bytes (205)
Tunnel ID = 3 (local id), 34183 (remote id) to 22.1.1.2:58825
    control_seq_num = 2, control_rec_seq_num = 4,
    last recv pkt = 2
Call ID = 3 (local id), 18820 (remote id), serno = 2032472593, dev=ppp2,
    assigned ip = 10.10.10.3
    data_seq_num = 0,
    tx = 152 bytes (2), rx= 0 bytes (0)
----
--VD 0: Startip = 10.10.10.1, Endip = 10.10.10.100
    enforce-ipsec = false
----

```

## Tunneled Internet browsing

This is a sample configuration of tunneled internet browsing using a dialup VPN. To centralize network management and control, all branch office traffic is tunneled to HQ, including Internet browsing.

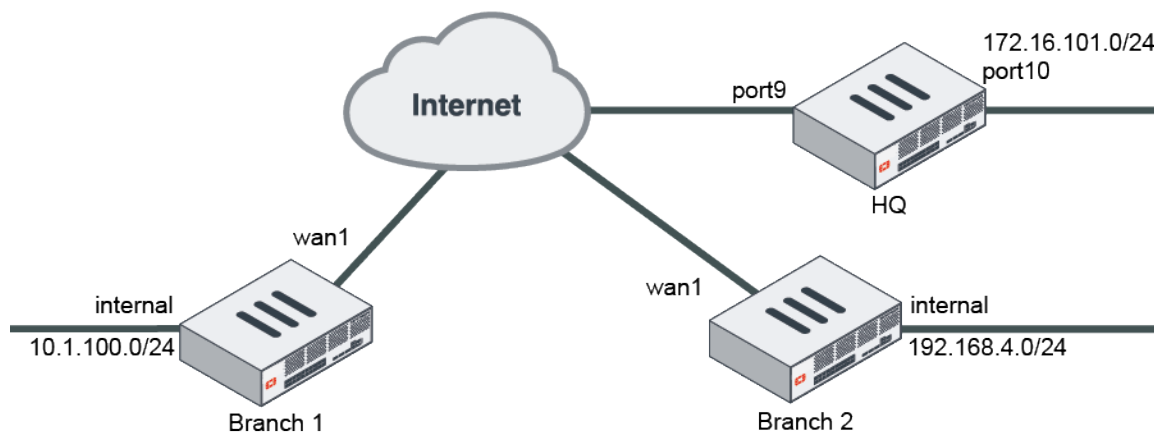

**To configure a dialup VPN to tunnel Internet browsing using the GUI:**

1. Configure the dialup VPN server FortiGate at HQ:
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name, in this example, *HQ*.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *The remote site is behind NAT*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Incoming Interface*, select *port9*.
    - ii. For *Authentication Method*, select *Pre-shared Key*.
    - iii. In the *Pre-shared Key* field, enter *sample* as the key.
    - iv. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select *port10*.
    - ii. Configure the *Local Subnets* as *172.16.101.0*.
    - iii. Configure the *Remote Subnets* as *0.0.0.0/0*.
    - iv. For *Internet Access*, select *Share Local*.
    - v. For *Shared WAN*, select *port9*.
    - vi. Click *Create*.
2. Configure the dialup VPN client FortiGate at a branch:
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name, in this example, *Branch1* or *Branch2*.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, select *The remote site is behind NAT*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *IP Address*, select *Remote Device* and enter *22.1.1.1*.
    - ii. For *Outgoing Interface*, select *wan1*.
    - iii. For *Authentication Method*, select *Pre-shared Key*.
    - iv. In the *Pre-shared Key* field, enter *sample* as the key.
    - v. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select *internal*.
    - ii. Configure the *Local Subnets* as *10.1.100.0/192.1684.0*.
    - iii. Configure the *Remote Subnets* as *0.0.0.0/0*.
    - iv. For *Internet Access*, select *Use Remote*.
    - v. Configure the *Local Gateway* to *15.1.1.1/13.1.1.1*.
    - vi. Click *Create*.

**To configure a dialup VPN to tunnel Internet browsing using the CLI:****1. Configure the WAN interface and static route on the FortiGate at HQ.**

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

**2. Configure IPsec phase1-interface and phase2-interface configuration at HQ.**

```
config vpn ipsec phase1-interface
    edit "HQ"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set psksecret sample
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "HQ"
        set phase1name "HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end
```

**3. Configure the firewall policy at HQ.**

```
config firewall policy
    edit 1
        set srcintf "HQ"
        set dstintf "port9" "port10"
        set srcaddr "10.1.100.0" "192.168.4.0"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

**4. Configure the WAN interface and static route on the FortiGate at the branches.****a. Branch1.**

```
config system interface
  edit "wan1"
    set ip 15.1.1.2 255.255.255.0
  next
  edit "internal"
    set ip 10.1.100.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 15.1.1.1
    set device "wan1"
  next
end
```

**b. Branch2.**

```
config system interface
  edit "wan1"
    set ip 13.1.1.2 255.255.255.0
  next
  edit "internal"
    set ip 192.168.4.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 13.1.1.1
    set device "wan1"
  next
end
```

**5. Configure IPsec phase1-interface and phase2-interface configuration at the branches.****a. Branch1.**

```
config vpn ipsec phase1-interface
  edit "branch1"
    set interface "wan1"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set dpd on-idle
    set remote-gw 22.1.1.1
    set psksecret sample
    set dpd-retryinterval 5
  next
end
config vpn ipsec phase2-interface
  edit "branch1"
    set phasename "branch1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
    aes256gcm chacha20poly1305
    set auto-negotiate enable
    set src-subnet 10.1.100.0 255.255.255.0
```

```

    next
end

```

**b. Branch2.**

```

config vpn ipsec phase1-interface
    edit "branch2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "branch2"
        set phase1name "branch2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 192.168.4.0 255.255.255.0
    next
end

```

**6. Configure the firewall policy at the branches.**

**a. Branch1.**

```

config firewall policy
    edit 1
        set name "outbound"
        set srcintf "internal"
        set dstintf "branch1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound"
        set srcintf "branch1"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**b. Branch2.**

```

config firewall policy
    edit 1
        set name "outbound"

```

```

        set srcintf "internal"
        set dstintf "branch2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
edit 2
    set name "inbound"
    set srcintf "branch2"
    set dstintf "internal"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
next
end

```

## 7. Configure the static routes at the branches.

### a. Branch1.

```

config router static
edit 2
    set dst 22.1.1.1/32
    set gateway 15.1.1.1
    set device "wan1"
    set distance 1
next
edit 3
    set device "branch1"
    set distance 5
next
end

```

### b. Branch2.

```

config router static
edit 2
    set dst 22.1.1.1/32
    set gateway 13.1.1.1
    set device "wan1"
    set distance 1
next
edit 3
    set device "branch2"
    set distance 5
next
end

```

## 8. Optionally, view the VPN tunnel list on a branch with the `diagnose vpn tunnel list` command:

```

list all ipsec tunnel in vd 0
----
name=branch1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encaps=none/536 options[0218]=npu create_
dev frag-rfc accept_traffic=1

```



```

proxyid_num=1 child_num=1 refcnt=19 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=1661 rxb=65470 txb=167314
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2986
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=branch1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=697/0B replaywin=1024
seqno=13a esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=2368/2400
dec: spi=c53a8f7e esp=aes key=16 ecee0cd48664d903d3d6822b1f902fd2
ah=sha1 key=20 2440a189126c222093ca9acd8b37127285f1f8a7
enc: spi=6e3636fe esp=aes key=16 fdad20bcc96f74ae9885e824d3efa29d
ah=sha1 key=20 70c0891c769ad8007ealf31a39978ffbc73242d0
dec:pkts/bytes=0/16348, enc:pkts/bytes=313/55962
npu_flag=03 npu_rgw=22.1.1.1 npu_lgw=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1

```

9. Optionally, view static routing table on a branch with the `get router info routing-table static` command:

```

Routing table for VRF=0
S*      0.0.0.0/0 [5/0] is directly connected, branch1
S*      22.1.1.1/32 [1/0] via 15.1.1.1, wan1

```

## Dialup IPsec VPN with certificate authentication

In a dialup IPsec VPN setup, a company may choose to use X.509 certificates as their authentication solution for remote users. This method includes the option to verify the remote user using a user certificate, instead of a username and password. This method can be simpler for end users.

Administrators need to issue unique user certificates to each user for remote access management. The user certificate can be verified by the subject field, common name, or the principal name in the Subject Alternative Name (SAN) field.

### Subject field verification

This is the basic method that verifies the subject string defined in the PKI user setting matches a substring in the subject field of the user certificate. For example:

```

config user peer
  edit "tgerber"
    set ca "CA_Cert_2"
    set subject "CN=tgerber"
  next
end

```

### Common name verification

In this method, administrators can define the CN string to match the common name (CN) in the subject field of the certificate. For example:

```

config user peer
  edit "tgerber"
    set ca "CA_Cert_2"
    set cn "tgerber"


```

```

    next
end

```

The matching certificate looks like the following:

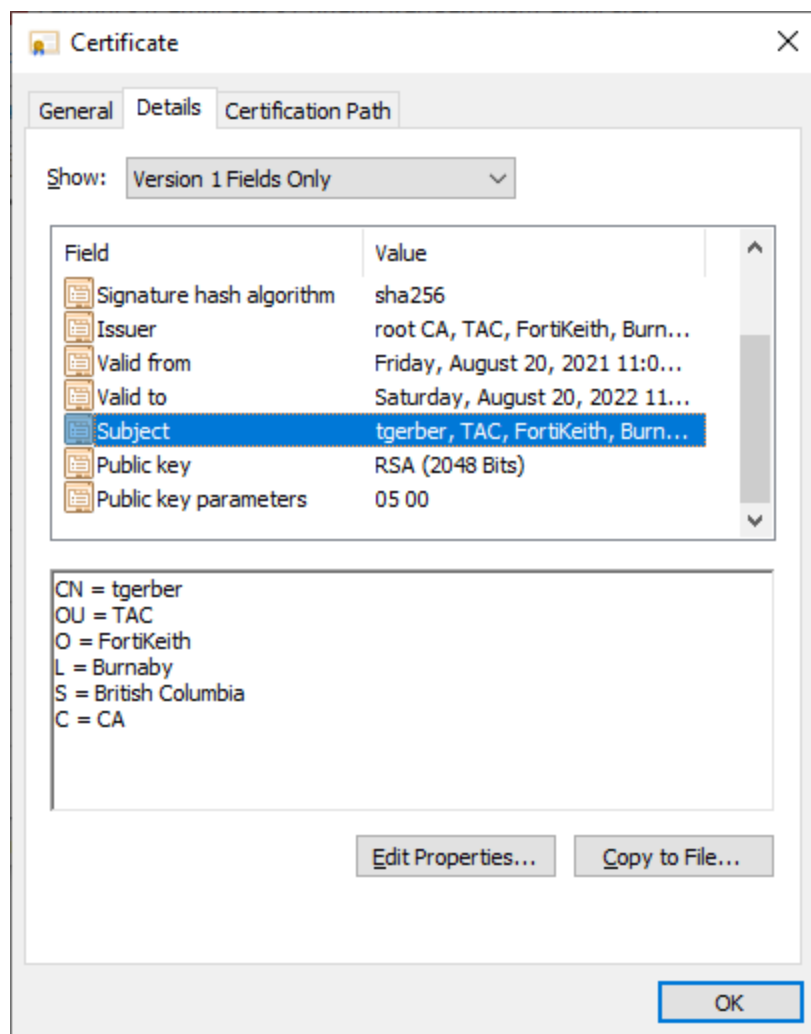

A PKI user must be created on the FortiGate for each remote user that connects to the VPN with a unique user certificate.

### Principal name with LDAP integration


In this method, the PKI user setting references an LDAP server. When `ldap-mode` is set to `principal-name`, the UPN in the user certificate's SAN field is used to look up the user in the LDAP directory. If a match is found, then authentication succeeds. For example:

```

config user peer
    edit "ldap-peer"
        set ca "CA_Cert_2"
        set ldap-server "WIN2K16-KLHOME-LDAPS"
        set ldap-mode principal-name
    next
end

```

The matching certificate looks like the following:

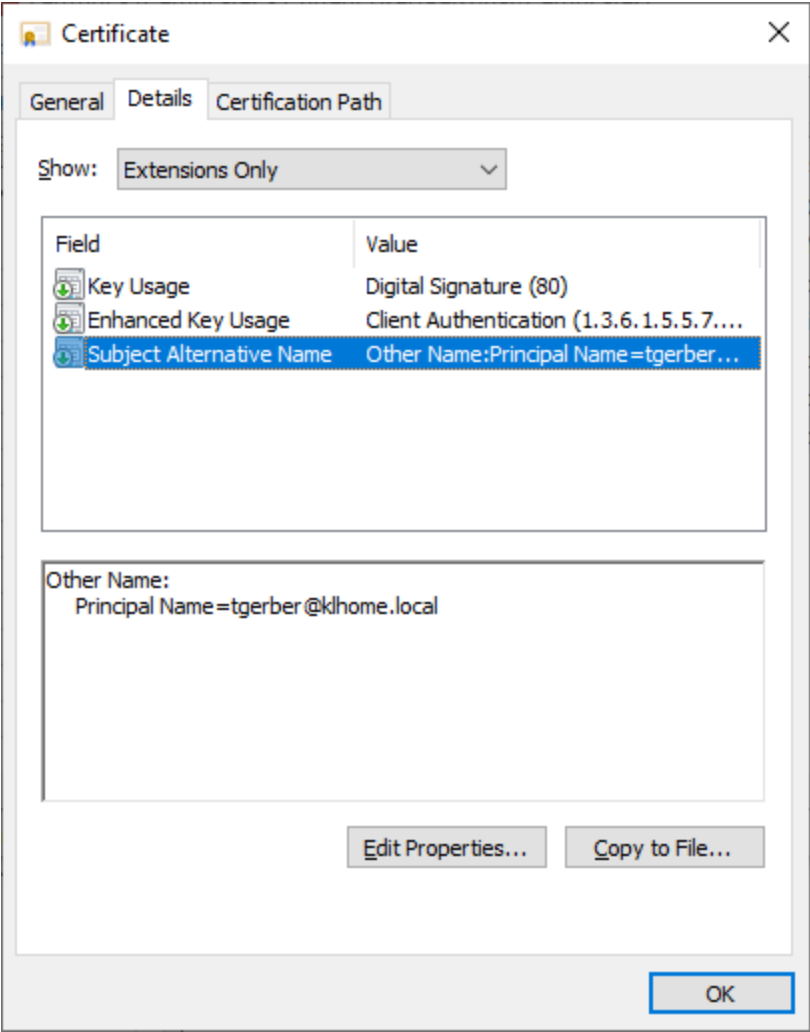

This method is more scalable because only one PKI user needs to be created on the FortiGate. Remote users connect with their unique user certificate that are matched against users in the LDAP server.

Certificate management


Dialup IPsec VPN with certificate authentication requires careful certificate management planning. Assuming that a company's private certificate authority (CA) is used to generate and sign all the certificates, the following certificates are needed:

Certificate type	Description
Server certificate	The server certificate is used to identify the FortiGate IPsec dialup gateway. A CSR can be generated on the FortiGate and signed by the CA, or the CA can generate the private and public keys and export the certificate package to the FortiGate.

Certificate type	Description
User certificate	The user certificate is generated and signed by the CA with unique CNs in the subject field and/or unique Principal Names in the SAN field. They are used to identify the user that is connecting to the VPN. User certificates must be installed on client machines.
CA certificate	The root CA certificate, and any subordinate CA that signed the actual user and server certificates, must be imported into the FortiGate and client machines. The CA certificate is used to verify the certificate chain of the server and user certificates.

## Example

In this example, a dialup IPsec VPN tunnel is configured with certificate authentication using the subject field verification method and the LDAP integration method.

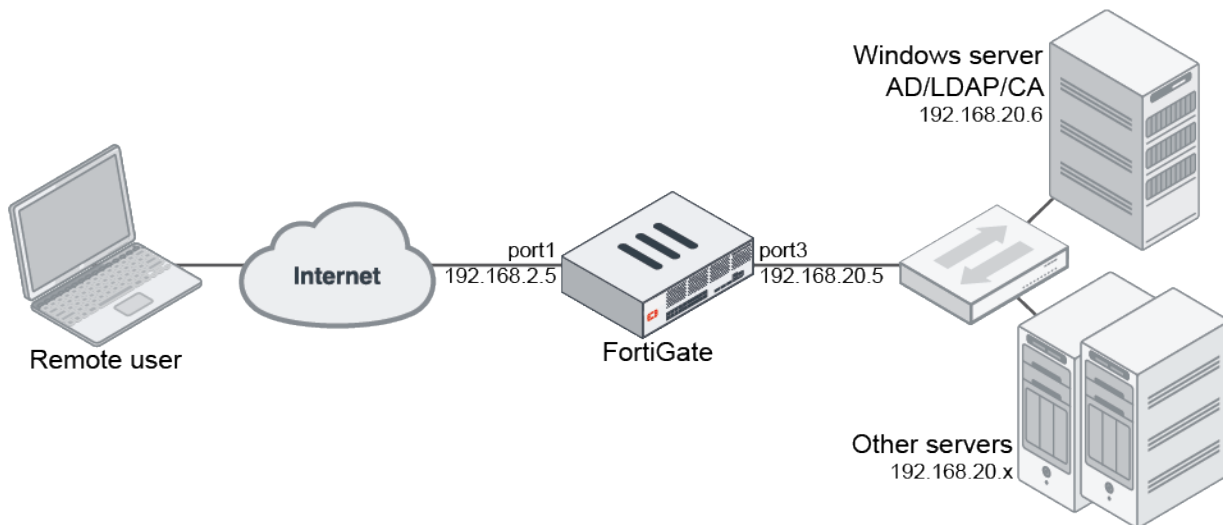

The company CA, named root CA, signs all the server and user certificates. The user, tgerber@klhome.local, has a user certificate signed by root CA installed on their endpoint. The corresponding user account is also present under the company's Active Directory.

There are five major steps to configure this example:

1. [Importing the certificates](#)
2. [Configuring user authentication](#)
3. [Configuring the VPN](#)
4. [Configuring FortiClient and the endpoints](#)
5. [Testing and verifying the certificate authentication](#)

## Importing the certificates

The server certificate and CA certificate need to be imported into the FortiGate.

**To import the server certificate:**

1. Go to *System > Certificates* and select *Import > Local Certificate*.
2. For *Type*, select *PKCS #12 Certificate*.
3. Upload the key file exported from the CA and enter the password.
4. Click *OK*. The certificate now appears in the *Local Certificate* section.

**To import the CA certificate:**

1. Go to *System > Certificates* and select *Import > CA Certificate*.
2. For *Type*, select *File*.
3. Upload the CA certificate (usually a .CRT file). This certificate only contains the public key.
4. Click *OK*. The certificate now appears in the *Remote CA Certificate* section.



If any subordinate CA is involved in signing the certificates, you need to import its certificate.

---

**Configuring user authentication**

FortiGate PKI users do not appear in the GUI until at least one PKI user has been created in the CLI. The following instructions create the PKI users in the CLI.

**To configure PKI users for subject field verification:**

1. Create the PKI user and choose the CA certificate that was imported (if the certificate was signed by a subordinate CA, choose the subordinate CA's certificate):

```
config user peer
  edit "tgerber"
    set ca "CA_Cert_2"
    set subject "CN=tgerber"
  next
end
```

For an example of CN field matching, see [Common name verification](#).

2. Create additional users as needed.
3. Place the users into a peer group:

```
config user peergrp
  edit "pki-users"
    set member "tgerber" <user> ... <user>
  next
end
```

**To configure PKI users for LDAP integration:**

1. Configure the LDAP server that users connect to for authentication:

```
config user ldap
  edit "WIN2K16-KLHOME-LDAPS"
    set server "192.168.20.6"
```

```

        set cnid "sAMAccountName"
        set dn "dc=KLHOME,dc=local"
        set type regular
        set username "KLHOME\\Administrator"
        set password *****
        set secure ldaps
        set ca-cert "CA_Cert_1"
        set port 636
    next
end

```

**2. Configure the PKI user to reference the LDAP server using the CA certificate that was imported:**

```

config user peer
    edit "ldap-peer"
        set ca "CA_Cert_2"
        set ldap-server "WIN2K16-KLHOME-LDAPS"
        set ldap-mode principal-name
    next
end

```

**3. Place the user into a peer group:**

```

config user peergrp
    edit "pki-ldap"
        set member "ldap-peer"
    next
end

```

## Configuring the VPN

To configure the VPN, the address objects must be defined first so they can be used in the VPN and policy configurations. In this example, the VPN is configured in custom mode to define the authentication settings.

### To configure the address objects:

1. Create the address range for the dialup clients:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. For *Name*, enter *remote-user-range*.
  - c. For *Type*, select *IP Range* and enter *172.18.200.10-172.18.200.99* in the *IP Range* field.
  - d. Click *OK*.
2. Create the address subnet for the destination 192.168.20.0/24:
  - a. Click *Create New > Address*.
  - b. For *Name*, enter *192.168.20.0*.
  - c. For *Type*, select *Subnet* and enter *192.168.20.0/24* in the *IP/Netmask* field.
  - d. Click *OK*.

### To configure the IPsec dialup tunnel:

1. Go to *VPN > IPsec Tunnels* and click *Create New > IPsec Tunnel*.
2. Enter a name for the tunnel, *Dialup-cert\_0*.
3. For *Template type*, select *Custom* then click *Next*.

4. In the *Network* section, enter the following:

<b>Remote Gateway</b>	<i>Dialup User</i>
<b>Interface</b>	<i>port1</i>
<b>Mode Config</b>	Enable
<b>Assign IP From</b>	<i>Range</i>
<b>IPv4 mode config &gt; Client Address Range</b>	<i>172.18.200.10-172.18.200.99</i>
<b>Enable IPv4 Split Tunnel</b>	Enable
<b>Accessible Networks</b>	<i>192.168.20.0</i>

5. In the *Authentication* section, enter the following:

<b>Method</b>	<i>Signature</i>
<b>Certificate Name</b>	Select the server certificate that was imported.
<b>Mode</b>	<i>Aggressive</i>
<b>Peer Options &gt; Accept Types</b>	<i>Peer certificate group</i>
<b>Peer Options &gt; Peer certificate group</b>	Select the group based on the preferred method: <ul style="list-style-type: none"> <li>• For subject verification, select <i>pki-users</i>.</li> <li>• For LDAP integration, select <i>pki-ldap</i>.</li> </ul>

When IKEv1 is used, aggressive mode should be selected so that the connecting endpoint will provide its peer ID in the first message of the IKE exchange. The peer identifier allows the FortiGate to match the correct tunnel when multiple dialup tunnels are defined.

6. For *Phase 2 Selectors*, leave the local and remote selectors as *0.0.0.0/0.0.0.0*.  
 7. Click *OK*.

#### To configure the firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following:

<b>Name</b>	Enter a policy name.
<b>Incoming interface</b>	<i>Dialup-cert_0</i>
<b>Outgoing Interface</b>	<i>port3</i>
<b>Source</b>	<i>remote-user-range</i>
<b>Destination</b>	<i>192.168.20.0</i>
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>ALL</i>
<b>Action</b>	<i>ACCEPT</i>

3. Configure the other settings as needed.
4. Click OK.


### Configuring FortiClient and the endpoints

The following example is configured on a Windows PC with FortiClient 7.0.0. Other configurations may differ slightly.


The user certificate and CA certificate must be installed on the endpoint device. They may be pushed by the administrator through group policies or another method. This example assumes that the user certificate and CA certificate are already installed on the endpoint.

#### To verify the user and CA certificates:

1. Open the Windows certificate manager (certmgr):
  - a. In the Control Panel, type *Manage user certificate* in the search box.
  - b. Click the result, *Manage user certificates*.
2. Go to *Personal > Certificate*. The user certificate should be listed.

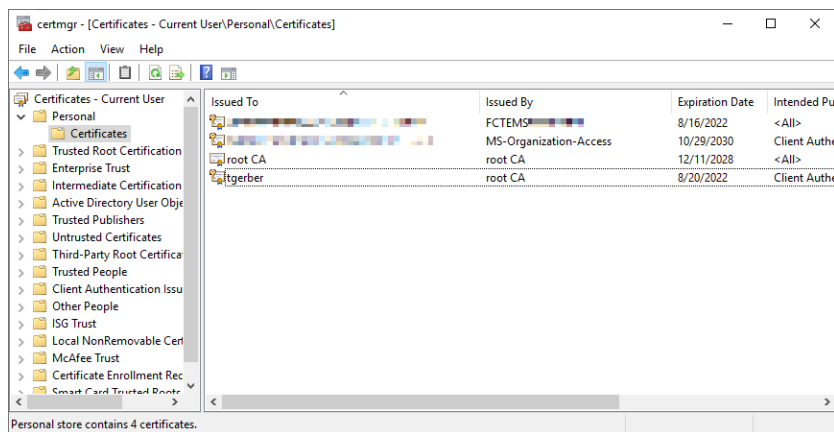

3. Go to *Trusted Root Certification Authorities > Certificates*. The company CA certificate should be listed.

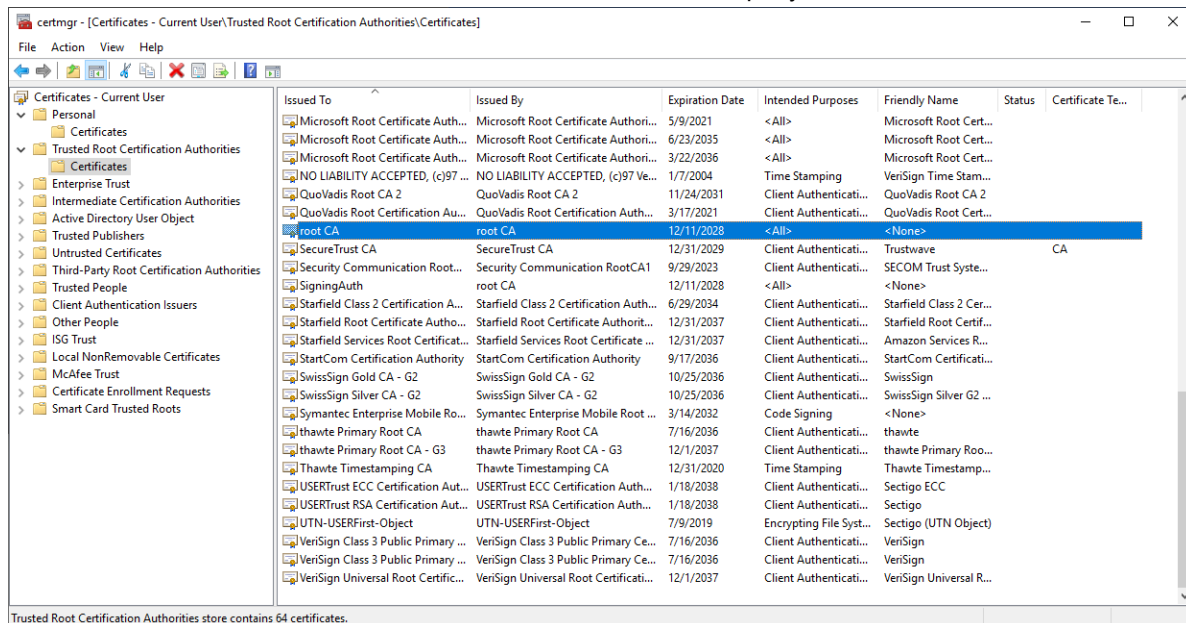



### To configure the FortiClient endpoint settings:

- In FortiClient, click the *Remote Access* tab and add a new connection:
  - If there are no existing connections, click *Configure VPN*.
  - If there are existing connections, click the menu icon and select *Add a new connection*.
- Configure the following:

<b>VPN</b>	<i>IPsec VPN</i>
<b>Connection Name</b>	<i>Dialup-cert_0</i>
<b>Remote Gateway</b>	<i>192.168.2.5</i>
<b>Authentication Method</b>	<i>X.509 Certificate</i> Select the user certificate, <i>tgerber/root CA</i> , from the dropdown.
<b>Authentication (XAuth)</b>	<i>Disable</i>

- Click **Save**.

### Testing and verifying the certificate authentication

- On the client PC, open FortiClient and click the *Remote Access* tab.
- Select the VPN tunnel, *Dialup-cert\_0*, and click *Connect*.  
If the connection is successful, a FortiClient pop-up will appear briefly indicating that the IKE negotiation succeeded. The *Remote Access* window now displays *VPN Connected* and the associated VPN tunnel details.
- On the FortiGate, go to *Dashboard > Network* and locate the *IPsec* widget to view the VPN tunnel monitor. Click the widget to expand to full view.  
The widget displays tunnel information, including the *Peer ID* containing the subject field of the user certificate.

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
Dialup-cert_0	192.168.2.1	C = CA, ST = British Columbia, L = Burnaby, O = FortiKeith, OU = TAC, CN = tgerber	448 B	0 B	✓ Dialup-cert_0	✓ Dialup-cert
MPLS	10.10.10.1		4.28 GB	5.93 GB	✓ MPLS	✓ MPLS
vpn2Site1	192.168.2.1		0 B	0 B	✓ vpn2Site1	✗ vpn2Site1

- Go to *Log & Report > System Events* and select the *VPN Events* card. Several tunnel related logs are recorded.
- The same logs can be viewed in the CLI:

```
# execute log filter category 1
# execute log filter field subtype vpn
# execute log display
7: date=2021-08-23 time=15:53:08 eventtime=1629759188862005740 tz="-0700"
logid="0101037138" type="event" subtype="vpn" level="notice" vd="root" logdesc="IPsec
connection status changed" msg="IPsec connection status change" action="tunnel-up"
remip=192.168.2.1 locip=192.168.2.5 remport=64916 locport=4500 outintf="port1"
cookies="19f05ebc8c2f7a0d/7716190005538db5" user="C = CA, ST = British Columbia, L =
Burnaby, O = FortiKeith, OU = TAC, CN = tgerber" group="pki-ldap" useralt="C = CA, ST =
British Columbia, L = Burnaby, O = FortiKeith, OU = TAC, CN = tgerber" xauthuser="N/A"
xauthgroup="N/A" assignip=172.18.200.10 vpntunnel="Dialup-cert_0" tunnelip=172.18.200.10
tunnelid=3418215253 tunneltype="ipsec" duration=0 sentbyte=0 rcvdbyte=0 nextstat=0
```

6. If any issues arise during the connection, run the following debug commands to troubleshoot the issue:

```
# diagnose debug application ike -1
# diagnose debug application fnbamd -1
# diagnose debug enable
```

## Aggregate and redundant VPN


The following topics provide instructions on configuring aggregate and redundant VPNs:

- [Manual redundant VPN configuration on page 1700](#)
- [OSPF with IPsec VPN for network redundancy on page 1704](#)
- [IPsec VPN in an HA environment on page 1711](#)
- [Packet distribution and redundancy for aggregate IPsec tunnels on page 1717](#)
- [Packet distribution for aggregate dial-up IPsec tunnels using location ID on page 1728](#)
- [Packet distribution for aggregate static IPsec tunnels in SD-WAN on page 1732](#)
- [Packet distribution for aggregate IPsec tunnels using weighted round robin on page 1737](#)
- [Redundant hub and spoke VPN on page 1738](#)

### Manual redundant VPN configuration

A FortiGate with two interfaces connected to the internet can be configured to support redundant VPNs to the same remote peer. Four distinct paths are possible for VPN traffic from end to end. If the primary connection fails, the FortiGate can establish a VPN using the other connection.

## Topology

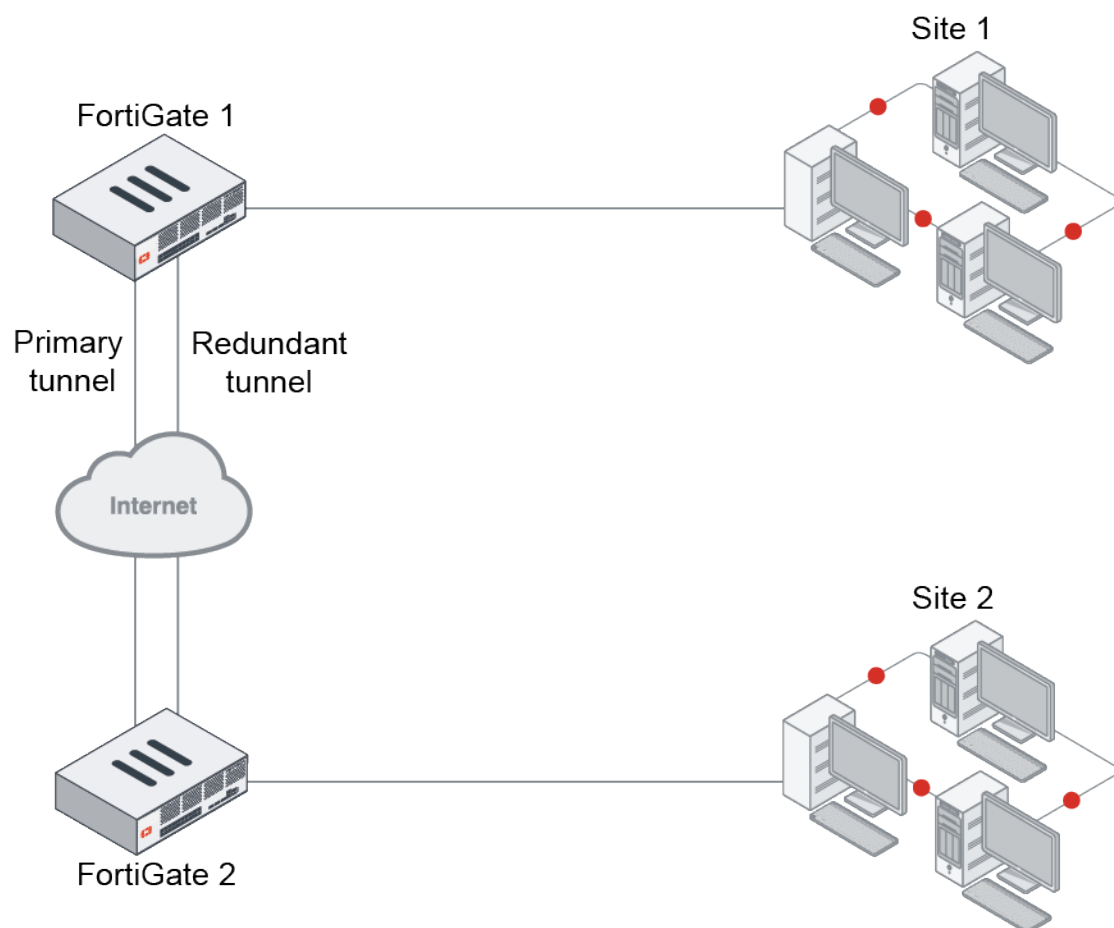

The redundant configuration in this example uses route-based VPNs. The FortiGates must operate in NAT mode and use auto-keying.

This example assumes the redundant VPNs are essentially equal in cost and capability. When the original VPN returns to service, traffic continues to use the replacement VPN until the replacement VPN fails. If the redundant VPN uses more expensive facilities, only use it as a backup while the main VPN is down.

A redundant configuration for each VPN peer includes:

- One phase 1 configuration for each path between the two peers with dead peer detection enabled
- One phase 2 definition for each phase 1 configuration
- One static route for each IPsec interface with different distance values to prioritize the routes
- Two firewall policies per IPsec interface, one for each direction of traffic

### To configure the phase 1 and phase 2 VPN settings:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. Enter the tunnel name and click *Next*.

3. Enter the following phase 1 settings for path 1:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	Enter the IP address of the primary interface of the remote peer.
<b>Interface</b>	Select the primary public interface of this peer.
<b>Dead Peer Detection</b>	On-Demand

4. Configure the remaining phase 1 and phase 2 settings as needed.
5. Click **OK**.
6. Repeat these steps for the remaining paths.
  - a. Path 2:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	Enter the IP address of the secondary interface of the remote peer.
<b>Interface</b>	Select the primary public interface of this peer.
<b>Dead Peer Detection</b>	On-Demand

- b. Path 3:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	Enter the IP address of the primary interface of the remote peer.
<b>Interface</b>	Select the secondary public interface of this peer.
<b>Dead Peer Detection</b>	On-Demand

- c. Path 4:

<b>Remote Gateway</b>	Static IP Address
<b>IP Address</b>	Enter the IP address of the secondary interface of the remote peer.
<b>Interface</b>	Select the secondary public interface of this peer.
<b>Dead Peer Detection</b>	On-Demand

#### To configure the static routes:

1. Go to *Network > Static Routes* and click *Create New*.
2. In the *Destination* field, enter the subnet of the private network.
3. For *Interface*, select one of the IPsec interfaces on the local peer.
4. Enter a value for *Administrative Distance*.
5. Click **OK**.
6. Repeat these steps for the three remaining paths, and enter different values for *Administrative Distance* to prioritize the paths.

**To configure the firewall policies:**

1. Create the policies for the local primary interface:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Enter the following:

<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	Select the local interface to the internal (private) network.
<b>Outgoing Interface</b>	Select one of the virtual IPsec interfaces.
<b>Source</b>	All
<b>Destination</b>	All
<b>Schedule</b>	Always
<b>Service</b>	All
<b>Action</b>	ACCEPT

- c. Click *OK*.
- d. Click *Create New* and configure the policy for the other direction of traffic:

<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	Select one of the virtual IPsec interfaces.
<b>Outgoing Interface</b>	Select the local interface to the internal (private) network.
<b>Source</b>	All
<b>Destination</b>	All
<b>Schedule</b>	Always
<b>Service</b>	All
<b>Action</b>	ACCEPT

- e. In the policy list, drag the VPN policies above any other policies with similar source and destination addresses.
2. Repeat these steps to create the policies for the three remaining paths.

**Creating a backup IPsec interface**

A route-based VPN can be configured to act as a backup IPsec interface when the main VPN is out of service. This can only be configured in the CLI.

The backup feature works on interfaces with static addresses that have dead peer detection enabled. The `monitor` option creates a backup VPN for the specified phase 1 configuration.

**To create a backup IPsec interface:**

```
config vpn ipsec phase1-interface
edit main_vpn
set dpd on-demand
set interface port1
```


```

        set nattraversal enable
        set psksecret *****
        set remote-gw 192.168.10.8
        set type static
    next
    edit backup_vpn
        set dpd on-demand
        set interface port2
        set monitor main_vpn
        set nattraversal enable
        set psksecret *****
        set remote-gw 192.168.10.8
        set type static
    next
end

```

## OSPF with IPsec VPN for network redundancy

This is a sample configuration of using OSPF with IPsec VPN to set up network redundancy. Route selection is based on OSPF cost calculation. You can configure ECMP or primary/secondary routes by adjusting OSPF path cost.

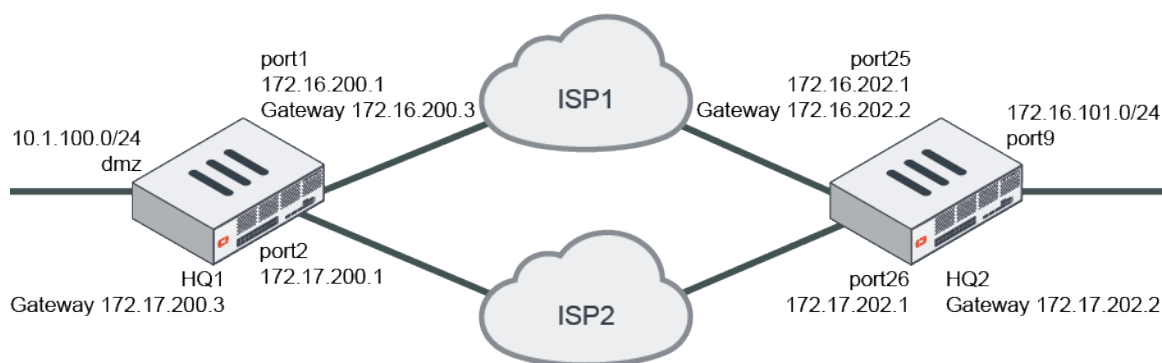

Because the GUI can only complete part of the configuration, we recommend using the CLI.

### To configure OSPF with IPsec VPN to achieve network redundancy using the CLI:

#### 1. Configure the WAN interface and static route.

Each FortiGate has two WAN interfaces connected to different ISPs. The ISP1 link is for the primary FortiGate and the ISP2 link is for the secondary FortiGate.

##### a. Configure HQ1.

```

config system interface
    edit "port1"
        set alias to_ISP1
        set ip 172.16.200.1 255.255.255.0
    next
    edit "port2"
        set alias to_ISP2
        set ip 172.17.200.1 255.255.255.0
    next
end
config router static
    edit 1

```

```

        set gateway 172.16.200.3
        set device "port1"
    next
    edit 2
        set gateway 172.17.200.3
        set device "port2"
        set priority 100
    next
end

```

**b. Configure HQ2.**

```

config system interface
    edit "port25"
        set alias to_ISP1
        set ip 172.16.202.1 255.255.255.0
    next
    edit "port26"
        set alias to_ISP2
        set ip 172.17.202.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
    edit 2
        set gateway 172.17.202.2
        set device "port26"
        set priority 100
    next
end

```

## 2. Configure the internal (protected subnet) interface.

### a. Configure HQ1.

```

config system interface
    edit "dmz"
        set ip 10.1.100.1 255.255.255.0
    next
end

```

### b. Configure HQ2.

```

config system interface
    edit "port9"
        set ip 172.16.101.1 255.255.255.0
    next
end

```

## 3. Configure IPsec phase1-interface and phase-2 interface. On each FortiGate, configure two IPsec tunnels: a primary and a secondary.

### a. Configure HQ1.

```

config vpn ipsec phase1-interface
    edit "pri_HQ2"
        set interface "port1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set psksecret sample1
    next
end

```

```

next
edit "sec_HQ2"
    set interface "port2"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.17.202.1
    set psksecret sample2
next
end
config vpn ipsec phase2-interface
edit "pri_HQ2"
    set phaselname "pri_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    set auto-negotiate enable
next
edit "sec_HQ2"
    set phaselname "sec_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    set auto-negotiate enable
next
end

```

**b. Configure HQ2.**

```

config vpn ipsec phase1-interface
edit "pri_HQ1"
    set interface "port25"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.200.1
    set psksecret sample1
next
edit "sec_HQ1"
    set interface "port26"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.17.200.1
    set psksecret sample2
next
end
config vpn ipsec phase2-interface
edit "pri_HQ1"
    set phaselname "pri_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    set auto-negotiate enable
next
edit "sec_HQ1"
    set phaselname "sec_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    set auto-negotiate enable
next
end

```



**4. Configure an inbound and outbound firewall policy for each IPsec tunnel.****a. Configure HQ1.**

```
config firewall policy
edit 1
    set name "pri_inbound"
    set srcintf "pri_HQ2"
    set dstintf "dmz"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
edit 2
    set name "pri_outbound"
    set srcintf "dmz"
    set dstintf "pri_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
edit 3
    set name "sec_inbound"
    set srcintf "sec_HQ2"
    set dstintf "dmz"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
edit 4
    set name "sec_outbound"
    set srcintf "dmz"
    set dstintf "sec_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
end
```

**b. Configure HQ2.**

```
config firewall policy
edit 1
    set name "pri_inbound"
    set srcintf "pri_HQ1"
    set dstintf "port9"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
```

```

edit 2
    set name "pri_outbound"
    set srcintf "port9"
    set dstintf "pri_HQ1"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
edit 3
    set name "sec_inbound"
    set srcintf "sec_HQ1"
    set dstintf "port9"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
edit 4
    set name "sec_outbound"
    set srcintf "port9"
    set dstintf "sec_HQ1"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
end

```

**5. Assign an IP address to the IPsec tunnel interface.**

**a. Configure HQ1.**

```

config system interface
    edit "pri_HQ2"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.2 255.255.255.255
    next
    edit "sec_HQ2"
        set ip 10.10.11.1 255.255.255.255
        set remote-ip 10.10.11.2 255.255.255.255
    next
end

```

**b. Configure HQ2.**

```

config system interface
    edit "pri_HQ1"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.1 255.255.255.255
    next
    edit "sec_HQ1"
        set ip 10.10.11.2 255.255.255.255
        set remote-ip 10.10.11.1 255.255.255.255
    next
end

```

**6. Configure OSPF.****a. Configure HQ1.**

```
config router ospf
  set router-id 1.1.1.1
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "pri_HQ2"
      set interface "pri_HQ2"
      set cost 10
      set network-type point-to-point
    next
    edit "sec_HQ2"
      set interface "sec_HQ2"
      set cost 20
      set network-type point-to-point
    next
  end
  config network
    edit 1
      set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
      set prefix 10.10.11.0 255.255.255.0
    next
    edit 3
      set prefix 10.1.100.0 255.255.255.0
    next
  end
end
```

**b. Configure HQ2.**

```
config router ospf
  set router-id 2.2.2.2
  config area
    edit 0.0.0.0
    next
  end
  config ospf-interface
    edit "pri_HQ1"
      set interface "pri_HQ1"
      set cost 10
      set network-type point-to-point
    next
    edit "sec_HQ1"
      set interface "sec_HQ1"
      set cost 20
      set network-type point-to-point
    next
  end
  config network
    edit 1
      set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
```

```

        set prefix 10.10.11.0 255.255.255.0
    next
    edit 3
        set prefix 172.16.101.0 255.255.255.0
    next
end
end

```

### To check VPN and OSPF states using diagnose and get commands:

1. Run the HQ1 # diagnose vpn ike gateway list command. The system should return the following:

```

vd: root/0
name: pri_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
virtual-interface-addr: 10.10.10.1 -> 10.10.10.2
created: 1024s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/3 established 1/2 time 0/5/10 ms
    id/spi: 45 d184777257b4e692/e2432f834aaf5658 direction: responder status: established
        1024-1024s ago = 0ms proposal: aes128-sha256 key: 9ed41fb06c983344-
        189538046f5ad204 lifetime/rekey: 86400/85105 DPD sent/recv: 00000003/00000000
    vd: root/0
name: sec_HQ2
version: 1
interface: port2 12
addr: 172.17.200.1:500 -> 172.17.202.1:500
virtual-interface-addr: 10.10.11.1 -> 10.10.11.2
created: 346s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/1 established 1/1 time 0/10/15 ms
    id/spi: 48 d909ed68636blea5/163015e73ea050b8 direction: initiator status: established
        0-0s ago = 0ms proposal: aes128-sha256 key: b9e93c156bdf4562-29db9fbafa256152
        lifetime/rekey: 86400/86099 DPD sent/recv: 00000000/00000000

```

2. Run the HQ1 # diagnose vpn tunnel list command. The system should return the following:

```

list all ipsec tunnel in vd 0
name=pri_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
    frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=14 ilast=2 olast=2 ad=/0
stat: rxp=102 txp=105 rxb=14064 txb=7816
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=3
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=pri_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
    src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
        soft=0 mtu=1438 expire=42254/0B replaywin=2048
        seqno=6a esn=0 replaywin_lastseq=00000067 itn=0
    life: type=01 bytes=0/0 timeout=42932/43200 dec: spi=1071b4ee esp=aes key=16
        032036b24a4ec88da63896b86f3a01db
        ah=sha1 key=20 3962933e24c8da21c65c13bc2c6345d643199cdf
    enc: spi=ec89b7e3 esp=aes key=16 92b1d85ef91faf695fca05843dd91626
        ah=sha1 key=20 2de99d1376506313d9f32df6873902cf6c08e454
    dec:pkts/bytes=102/7164, enc:pkts/bytes=105/14936
name=sec_HQ2 ver=1 serial=2 172.17.200.1:0->172.17.202.1:0 tun_id=172.17.202.1
bound_if=12 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
    frag-rfc accept_traffic=1

```

```

proxyid_num=1 child_num=0 refcnt=14 ilast=3 olast=0 ad=/0
stat: rxp=110 txp=114 rxb=15152 txb=8428
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=3
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=sec_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
soft=0 mtu=1438 expire=42927/0B replaywin=2048
seqno=2 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=42931/43200 dec: spi=1071b4ef esp=aes key=16
bcdcabdb7d1c7c695d1f2e0f5441700a
ah=sha1 key=20 e7a0034589f82eb1af41efd59d0b2565fef8d5da
enc: spi=ec89b7e4 esp=aes key=16 234240b69e61f6bdee2b4cdec0f33bea
ah=sha1 key=20 f9d4744a84d91e5ce05f5984737c2a691a3627e8
dec:pkts/bytes=1/68, enc:pkts/bytes=1/136

```

3. Run the HQ1 # get router info ospf neighbor command. The system should return the following:

```

OSPF process 0, VRF 0:
Neighbor ID Pri State Dead Time Address Interface
2.2.2.2 1. Full/ - 00:00:37 10.10.10.2 pri_HQ2
2.2.2.2 1. Full/ - 00:00:32 10.10.11.2 sec_HQ2

```

4. Run the HQ1 # get router info routing-table ospf command. The system should return the following:

```

Routing table for VRF=0
O 172.16.101.0/24 [110/20] via 10.10.10.2, pri_HQ2 , 00:03:21

```

In case the primary tunnel is down after route convergence.

5. Run the HQ1 # get router info routing-table ospf command. The system should return the following:

```

Routing table for VRF=0
O 172.16.101.0/24 [110/110] via 10.10.11.2, sec_HQ2 , 00:00:01


```

## IPsec VPN in an HA environment

This is a sample configuration of site-to-site IPsec VPN in an HA environment.

For this example, set up HA as described in the HA topics. When setting up HA, enable the following options to ensure IPsec VPN traffic is not interrupted during an HA failover:

- session-pickup under HA settings.
- ha-sync-esp-seqno under IPsec phase1-interface settings.

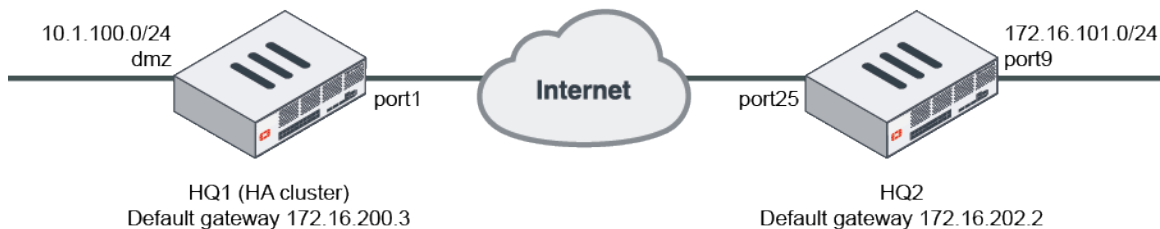

You can configure IPsec VPN in an HA environment using the [GUI](#) or [CLI](#).

In this example, the VPN name for HQ1 is "to\_HQ2", and the VPN name for HQ2 is "to\_HQ1".

**To configure IPsec VPN in an HA environment in the GUI:**

1. Set up IPsec VPN on HQ1 (the HA cluster):
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, set *No NAT between sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. In the *IP address* field, enter *172.16.202.1*.
    - iii. For *Outgoing Interface*, select *port1*.
    - iv. For *Authentication Method*, select *Pre-shared Key*.
    - v. In the *Pre-shared Key* field, enter an example key.
    - vi. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the local interface.
    - ii. Configure the *Local Subnets* as *10.1.100.0/24*.
    - iii. Configure the *Remote Subnets* as *172.16.101.0/24*.
    - iv. Click *Create*.
2. Set up IPsec VPN on HQ2:
  - a. Go to *VPN > IPsec Wizard* and configure the following settings for *VPN Setup*:
    - i. Enter a VPN name.
    - ii. For *Template Type*, select *Site to Site*.
    - iii. For *Remote Device Type*, select *FortiGate*.
    - iv. For *NAT Configuration*, set *No NAT between sites*.
    - v. Click *Next*.
  - b. Configure the following settings for *Authentication*:
    - i. For *Remote Device*, select *IP Address*.
    - ii. In the *IP address* field, enter *172.16.200.1*.
    - iii. For *Outgoing Interface*, select *port13*.
    - iv. For *Authentication Method*, select *Pre-shared Key*.
    - v. In the *Pre-shared Key* field, enter an example key.
    - vi. Click *Next*.
  - c. Configure the following settings for *Policy & Routing*:
    - i. From the *Local Interface* dropdown menu, select the desired local interface. In this example, it is *port9*.
    - ii. Configure the *Local Subnets* as *172.16.101.0*.
    - iii. Configure the *Remote Subnets* as *10.1.100.0*.
    - iv. Click *Create*.

**To configure IPsec VPN in an HA environment using the CLI:**

1. Configure HA. In this example, two FortiGates work in active-passive mode. The HA heartbeat interfaces are WAN1 and WAN2:

```
config system ha
```

```

set group-name "FGT-HA"
set mode a-p
set password sample
set hbdev "wan1" 50 "wan2" 50
set session-pickup enable
set priority 200
set override-wait-time 10
end

```

2. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

- a. Configure HQ1:

```

config system interface
  edit "port1"
    set vdom "root"
    set ip 172.16.200.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.200.3
    set device "port1"
  next
end

```

- b. Configure HQ2:

```

config system interface
  edit "port25"
    set vdom "root"
    set ip 172.16.202.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.202.2
    set device "port25"
  next
end

```

3. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.

- a. Configure HQ1:

```

config system interface
  edit "dmz"
    set vdom "root"
    set ip 10.1.100.1 255.255.255.0
  next
end

```

- b. Configure HQ2:

```

config system interface
  edit "port9"
    set vdom "root"
    set ip 172.16.101.1 255.255.255.0
  next
end

```

4. Configure the IPsec phase1-interface. This example uses PSK as the authentication method. You can also use signature authentication.

**a. Configure HQ1:**

```

config vpn ipsec phase1-interface
  edit "to_HQ2"
    set interface "port1"
    set peertype any
    set net-device enable
    set ha-sync-esp-seqno enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.202.1
    set psksecret sample
  next
end

```

**b. Configure HQ2:**

```

config vpn ipsec phase1-interface
  edit "to_HQ1"
    set interface "port25"
    set peertype any
    set net-device enable
    set ha-sync-esp-seqno enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.200.1
    set psksecret sample
  next
end

```

**5. Configure the IPsec phase2-interface:****a. Configure HQ1:**

```

config vpn ipsec phase2-interface
  edit "to_HQ2"
    set phase1name "to_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
      aes256gcm chacha20poly1305
    set auto-negotiate enable
  next
end

```

**b. Configure HQ2:**

```

config vpn ipsec phase2-interface
  edit "to_HQ1"
    set phase1name "to_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
      aes256gcm chacha20poly1305
    set auto-negotiate enable
  next
end

```

**6. Configure static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure IPsec traffic does not match the default route when the IPsec tunnel is down.****a. Configure HQ1:**

```

config router static
  edit 2
    set dst 172.16.101.0 255.255.255.0
    set device "to_HQ2"
  next
  edit 3
    set dst 172.16.101.0 255.255.255.0
    set blackhole enable
    set distance 254
  next
end

```



```
end
```

**b. Configure HQ2:**

```
config router static
  edit 2
    set dst 10.1.100.0 255.255.255.0
    set device "to_HQ1"
  next
  edit 3
    set dst 10.1.100.0 255.255.255.0
    set blackhole enable
    set distance 254
  next
end
```

**7. Configure two firewall policies to allow bi-directional IPsec traffic flow over the IPsec tunnel:**

**a. Configure HQ1:**

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ2"
    set dstintf "dmz"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "dmz"
    set dstintf "to_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end
```

**b. Configure HQ2:**

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ1"
    set dstintf "port9"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "port9"
    set dstintf "to_HQ1"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
```

```

        set schedule "always"
        set service "ALL"
    next
end

```

8. Use the following diagnose commands to check IPsec phase1/phase2 interface status including the sequence number on the secondary FortiGate. The diagnose debug application ike -1 command is the key to troubleshoot why the IPsec tunnel failed to establish.

- a. Run the HQ1 # diagnose vpn ike gateway list command. The system should return the following:

```

vd: root/0
name: to_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 5s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 2/2 established 2/2 time 0/0/0 ms
  id/spi: 12 6e8d0532e7fe8d84/3694ac323138a024 direction: responder status:
    established 5-5s ago = 0ms proposal: aes128-sha256 key: b3efb46d0d385aff-
    7bb9ee241362ee8d lifetime/rekey: 86400/86124 DPD sent/recvd: 00000000/00000000

```

- b. Run the HQ1 # diagnose vpn tunnel list command. The system should return the following:

```
list all ipsec tunnel in vd 0
```

```

name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
  dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=7 olast=87 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
  soft=0 mtu=1438 expire=42927/0B replaywin=2048
  seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
  life: type=01 bytes=0/0 timeout=42930/43200 dec: spi=ef9ca700 esp=aes key=16
    a2c6584bf654d4f956497b3436f1cfc7
    ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
  enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
    ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0

```

ESP seqno synced to primary FortiGate every five minutes, and big gap between primary and secondary to ensure that no packet is dropped after HA failover caused by tcp-replay. Check ESP sequence number synced on secondary FortiGate.

- c. Run the HQ1 # execute ha manage 0 admin command.

- d. Run the HQ1-Sec # diagnose vpn tunnel list command. The system should return the following:

```
list all ipsec tunnel in vd 0
```

```

name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
  dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=13 olast=274 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate

```

```

src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=27 type=00
soft=0 mtu=1280 expire=42740/0B replaywin=2048
seqno=47868c01 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=42930/43200 dec: spi=ef9ca700 esp=aes key=16
a2c6584bf654d4f956497b3436f1cfc7
ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0

```


## Packet distribution and redundancy for aggregate IPsec tunnels

This is a sample configuration of a multiple site-to-site IPsec VPN that uses an IPsec aggregate interface to set up redundancy and traffic load-balancing. The VPN tunnel interfaces must have `net-device` disabled in order to be members of the IPsec aggregate.

Each FortiGate has two WAN interfaces connected to different ISPs. OSPF runs over the IPsec aggregate in this configuration.

The supported load balancing algorithms are: L3, L4, round-robin (default), weighted round-robin, and redundant. The first four options allow traffic to be load-balanced, while the last option (redundant) uses the first tunnel that is up for all traffic.

Dynamic routing can run on the aggregate interface, and it can be a member interface in SD-WAN (not shown in this configuration).

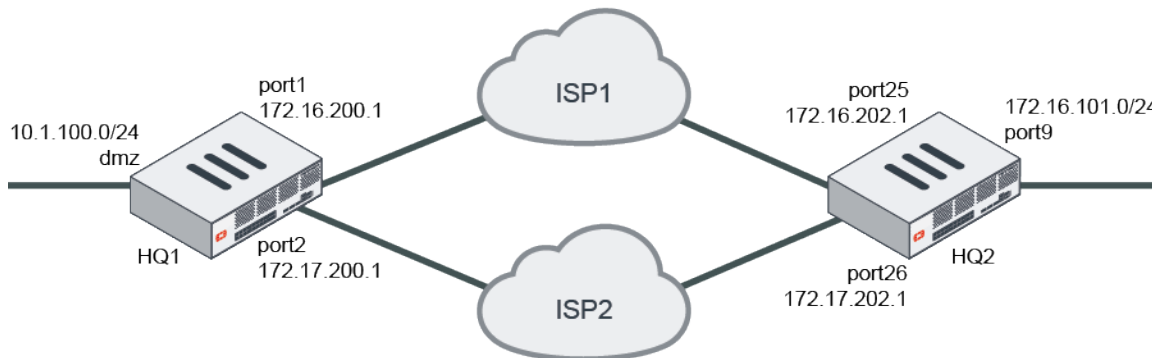

## Configuring the HQ1 FortiGate in the GUI

There are five steps to configure the FortiGate:

1. [Create the IPsec tunnels.](#)
2. [Create the IPsec aggregate.](#)
3. [Configure the firewall policies.](#)
4. [Configure the aggregate VPN interface IPs.](#)
5. [Configure OSPF.](#)

### To create the IPsec tunnels:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. For *Name*, enter `pri_HQ2` and click *Next*.
3. Enter the following:

<b>Phase 1</b>	
IP Address	172.16.202.1
Interface	port1
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
<b>Phase 2</b>	
Auto-negotiate	Enable

4. Configure the other settings as needed.
5. Click **OK**.
6. Create another tunnel named `sec_HQ2` with the following settings:

<b>Phase 1</b>	
IP Address	172.17.202.1
Interface	port2
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
<b>Phase 2</b>	
Auto-negotiate	Enable

#### To create the IPsec aggregate:

1. Go to **VPN > IPsec Tunnels** and click **Create New > IPsec Aggregate**.
2. For **Name**, enter `agg_HQ2`.
3. Select a load balancing algorithm.
4. From the **Tunnel** dropdown, select the tunnels that you created previously (`pri_HQ2` and `sec_HQ2`). If required, enter weights for each tunnel.
5. Click **OK**.

**To configure the firewall policies:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Create an inbound traffic policy with the following settings:

Name	inbound
Incoming Interface	agg_HQ2
Outgoing Interface	dmz
Source	172.16.101.0
Destination	10.1.100.0
Schedule	always
Action	ACCEPT
Service	ALL

3. Click *OK*.
4. Create an outbound traffic policy with the following settings:

Name	outbound
Incoming Interface	dmz
Outgoing Interface	agg_HQ2
Source	10.1.100.0
Destination	172.16.101.0
Schedule	always
Action	ACCEPT
Service	ALL

**To configure the aggregate VPN interface IPs:**

1. Go to *Network > Interfaces* and edit *agg\_HQ2*.
2. For *IP*, enter 10.10.10.1.
3. For *Remote IP/Netmask*, enter 10.10.10.2 255.255.255.255.
4. Click *OK*.

**To configure OSPF:**

1. Go to *Network > OSPF*.
2. For *Router ID*, enter 1.1.1.1.
3. In the *Areas* table, click *Create New*.
  - a. For *Area ID*, enter 0.0.0.0.
  - b. Click *OK*.

4. In the *Networks* table, click *Create New*.
  - a. Set the *Area* to *0.0.0.0*.
  - b. For *IP/Netmask*, enter *10.1.100.0/24*.
  - c. Click *OK*.
  - d. Click *Create New*.
  - e. For *IP/Netmask*, enter *10.10.10.0/24*.
  - f. Click *OK*.
5. Click *Apply*.

## Configuring the HQ2 FortiGate in the GUI

There are five steps to configure the FortiGate:

1. [Create the IPsec tunnels](#).
2. [Create the IPsec aggregate](#).
3. [Configure the firewall policies](#).
4. [Configure the aggregate VPN interface IPs](#).
5. [Configure OSPF](#).

### To create the IPsec tunnels:

1. Go to *VPN > IPsec Wizard* and select the *Custom* template.
2. For *Name*, enter *pri\_HQ1* and click *Next*.
3. Enter the following:

#### Phase 1

IP Address	172.16.200.1
Interface	port25
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID

#### Phase 2

Auto-negotiate	Enable
----------------	--------

4. Configure the other settings as needed.
5. Click *OK*.
6. Create another tunnel named *sec\_HQ1* with the following settings:

#### Phase 1

IP Address	172.17.200.1
Interface	port26
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
<b>Phase 2</b>	
Auto-negotiate	Enable

### To create the IPsec aggregate:

1. Go to *VPN > IPsec Tunnels* and click *Create New > IPsec Aggregate*.
2. For *Name*, enter *agg\_HQ1*.
3. Select a load balancing algorithm.
4. From the *Tunnel* dropdown, select the tunnels that you created previously (*pri\_HQ1* and *sec\_HQ1*). If required, enter weights for each tunnel.
5. Click *OK*.

### To configure the firewall policies:

1. Go to *Policy & Objects > Firewall Policy*.
2. Create an inbound traffic policy with the following settings:

Name	inbound
Incoming Interface	agg_HQ1
Outgoing Interface	port9
Source	10.1.100.0
Destination	172.16.101.0
Schedule	always
Action	ACCEPT
Service	ALL

3. Click *OK*.
4. Create an outbound traffic policy with the following settings:

Name	outbound
Incoming Interface	port9

Outgoing Interface	agg_HQ1
Source	172.16.101.0
Destination	10.1.100.0
Schedule	always
Action	ACCEPT
Service	ALL

#### To configure the aggregate VPN interface IPs:

1. Go to *Network > Interfaces* and edit *agg\_HQ1*.
2. For *IP*, enter 10.10.10.2.
3. For *Remote IP/Netmask*, enter 10.10.10.1 255.255.255.255.
4. Click *OK*.

#### To configure OSPF:

1. Go to *Network > OSPF*.
2. For *Router ID*, enter 2.2.2.2.
3. In the *Areas* table, click *Create New*.
  - a. For *Area ID*, enter 0.0.0.0.
  - b. Click *OK*.
4. In the *Networks* table, click *Create New*.
  - a. Set the *Area* to 0.0.0.0.
  - b. For *IP/Netmask*, enter 172.16.101.0/24.
  - c. Click *OK*.
  - d. Click *Create New*.
  - e. For *IP/Netmask*, enter 10.10.10.0/24.
  - f. Click *OK*.
5. Click *Apply*.

### Monitoring the traffic in the GUI

#### To monitor the traffic:

1. Go to *Dashboard > Network*, hover over the *IPsec* widget, then click *Expand to Full Screen*.
2. Expand the aggregate tunnel in the table to view statistics for each aggregate member.

### Configuring the HQ1 FortiGate in the CLI

There are six steps to configure the FortiGate:

1. [Configure the interfaces.](#)
2. [Configure two IPsec phase 1 and phase 2 interfaces.](#)
3. [Configure the IPsec aggregate.](#)
4. [Configure the firewall policies.](#)



5. [Configure the aggregate VPN interface IPs.](#)
6. [Configure OSPF.](#)

**To configure the interfaces:**

1. Configure port1, port2, and dmz as shown in the topology diagram.

**To configure two IPsec phase 1 and phase 2 interfaces:**

```
config vpn ipsec phase1-interface
  edit "pri_HQ2"
    set interface "port1"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.202.1
    set psksecret sample1
  next
  edit "sec_HQ2"
    set interface "port2"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.17.202.1
    set psksecret sample2
  next
end
config vpn ipsec phase2-interface
  edit "pri_HQ2"
    set phase1name "pri_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
      chacha20poly1305
    set auto-negotiate enable
  next
  edit "sec_HQ2"
    set phase1name "sec_HQ2"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
      chacha20poly1305
    set auto-negotiate enable
  next
end
```

**To configure the IPsec aggregate:**

```
config system ipsec-aggregate
  edit "agg_HQ2"
    set member "pri_HQ2" "sec_HQ2"
  next
end
```

**To configure the firewall policies:**

```
config firewall policy
  edit 1
```

```
        set name "inbound"
        set srcintf "agg_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
edit 2
    set name "outbound"
    set srcintf "dmz"
    set dstintf "agg_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
end
```

**To configure the aggregate VPN interface IPs:**

```
config system interface
edit "agg_HQ2"
    set ip 10.10.10.1 255.255.255.255
    set remote-ip 10.10.10.2 255.255.255.255
next
end
```

**To configure OSPF:**

```
config router ospf
    set router-id 1.1.1.1
    config area
        edit 0.0.0.0
        next
    end
    config network
        edit 1
            set prefix 10.1.100.0 255.255.255.0
        next
        edit 2
            set prefix 10.10.10.0 255.255.255.0
        next
    end
end
```

**Configuring the HQ2 FortiGate in the CLI**

There are six steps to configure the FortiGate:

1. [Configure the interfaces.](#)
2. [Configure two IPsec phase 1 and phase 2 interfaces.](#)
3. [Configure the IPsec aggregate.](#)
4. [Configure the firewall policies.](#)

5. [Configure the aggregate VPN interface IPs.](#)
6. [Configure OSPF.](#)

**To configure the interfaces:**

1. Configure port25, port26, and port9 as shown in the topology diagram.

**To configure two IPsec phase 1 and phase 2 interfaces:**

```
config vpn ipsec phase1-interface
  edit "pri_HQ1"
    set interface "port25"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.200.1
    set psksecret sample1
  next
  edit "sec_HQ1"
    set interface "port26"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.17.200.1
    set psksecret sample2
  next
end
config vpn ipsec phase2-interface
  edit "pri_HQ1"
    set phaselname "pri_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
      chacha20poly1305
    set auto-negotiate enable
  next
  edit "sec_HQ1"
    set phaselname "sec_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
      chacha20poly1305
    set auto-negotiate enable
  next
end
```

**To configure the IPsec aggregate:**

```
config system ipsec-aggregate
  edit "agg_HQ1"
    set member "pri_HQ1" "sec_HQ1"
  next
end
```

**To configure the firewall policies:**

```
config firewall policy
  edit 1
```

```
        set name "inbound"
        set srcintf "agg_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
edit 2
    set name "outbound"
    set srcintf "port9"
    set dstintf "agg_HQ1"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
next
end
```

**To configure the aggregate VPN interface IPs:**

```
config system interface
    edit "agg_HQ1"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.1 255.255.255.255
    next
end
```

**To configure OSPF:**

```
config router ospf
    set router-id 2.2.2.2
    config area
        edit 0.0.0.0
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
        edit 2
            set prefix 10.10.10.0 255.255.255.0
        next
    end
end
```

**Monitoring the traffic in the CLI****To view debugging information:**

1. Verify the status of the phase 1 IKE SAs:  
# diagnose vpn ike gateway list  
vd: root/0

```

name: pri_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
tun_id: 172.16.202.1
created: 1520s ago
IKE SA: created 1/2 established 1/1 time 10/10/10 ms
IPsec SA: created 2/2 established 1/1 time 0/0/0 ms
    id/spi: 173 dcdede154681579b/e32f4c48c4349fc0 direction: responder status: established
        1498-1498s ago = 10ms proposal: aes128-sha256 key: d7230a68d7b83def-
        588b94495cfa9d38 lifetime/rekey: 86400/84631 DPD sent/recvd: 0000000d/00000006
vd: root/0
name: sec_HQ2
version: 1
interface: port2 12
addr: 172.17.200.1:500 -> 172.17.202.1:500
created: 1520s ago
IKE SA: created 1/2 established 1/1 time 10/10/10 ms
IPsec SA: created 2/2 established 1/1 time 0/0/0 ms
    id/spi: 174 a567bd7bf02a04b5/4251b6254660aee2 direction: responder status: established
        1498-1498s ago = 10ms proposal: aes128-sha256 key: 9f44f500c28d8de6-
        febaae9d1e6a164c lifetime/rekey: 86400/84631 DPD sent/recvd: 00000008/0000000c

```

## 2. Verify the phase 2 IPsec tunnel SAs:

```

# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
name=sec_HQ2 ver=1 serial=2 172.17.200.1:0->172.17.202.1:0 tun_id=172.17.202.1
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/512 options[0200]=frag-rfc
run_state=1 accept_traffic=1
proxyid_num=1 child_num=0 refcnt=7 ilast=5 olast=5 ad=/0
stat: rxp=39 txp=40 rxb=5448 txb=2732
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=15
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=sec_HQ2 proto=0 sa=1 ref=2 serial=2 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
soft=0 mtu=1438 expire=41230/0B replaywin=2048
seqno=29 esn=0 replaywin_lastseq=00000028 itn=0
life: type=01 bytes=0/0 timeout=42899/43200 dec: spi=1071b4f9 esp=aes key=16
    1f4dbb78bea8e97650b52d8170b5ece7
    ah=sha1 key=20 cd9bf2de0f49296cf489dd915d7baf6d78bc8f12
enc: spi=ec89b7ee esp=aes key=16 0546efecd0d1b9ba5944f635896e4404
    ah=sha1 key=20 34599bc7dc25e1ce63ac9615bd50928ce0667dc8
dec:pkts/bytes=39/2796, enc:pkts/bytes=40/5456
name=pri_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/512 options[0200]=frag-rfc
run_state=1 accept_traffic=1
proxyid_num=1 child_num=0 refcnt=5 ilast=15 olast=15 ad=/0
stat: rxp=38 txp=39 rxb=5152 txb=2768
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=20
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=pri_HQ2 proto=0 sa=1 ref=2 serial=2 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
soft=0 mtu=1438 expire=41231/0B replaywin=2048
seqno=28 esn=0 replaywin_lastseq=00000027 itn=0
life: type=01 bytes=0/0 timeout=42900/43200 dec: spi=1071b4f8 esp=aes key=16
    142cce377b3432ba41e64128ade6848c
    ah=sha1 key=20 20e64947e2397123f561584321adc0e7aa0c342d
enc: spi=ec89b7ed esp=aes key=16 2ec13622fd60dacce3d28ebe5fe7ab14

```

```

ah=sha1 key=20 c1787497508a87f40c73c0db0e835c70b3c3f42d
dec:pkts/bytes=38/2568, enc:pkts/bytes=39/5432

```

### 3. Debug the IPsec aggregation list:

```

# diagnose sys ipsec-aggregate list
agg_HQ2 algo=RR member=2 run_tally=2
members:
  pri_HQ2
  sec_HQ2

```

### 4. Verify the OSPF neighbor information:

```

# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID Pri State Dead Time Address Interface
2.2.2.2 1. Full/ - 00:00:34 10.10.10.2 agg1_HQ2

```

### 5. Verify the OSPF routing table:

```

# get router info routing-table ospf
Routing table for VRF=0
O 172.16.101.0/24 [110/20] via 10.10.10.2, agg1_HQ2 , 00:18:43

```

## Packet distribution for aggregate dial-up IPsec tunnels using location ID


To support per-packet load balancing on aggregate dial-up IPsec tunnels between sites, each spoke must be configured with a location ID. On the hub, per-packet load balancing is performed on the tunnels in the IPsec aggregate that have the same location ID.

Multiple dial-up VPN tunnels from the same location can be aggregated on the VPN hub and load balanced based on the configured load balance algorithm.

IPsec traffic cannot be offloaded to the NPU.

### Example

In this example, an IPsec aggregate tunnel is formed between two dial-up IPsec tunnels in order to support per-packet load balancing.

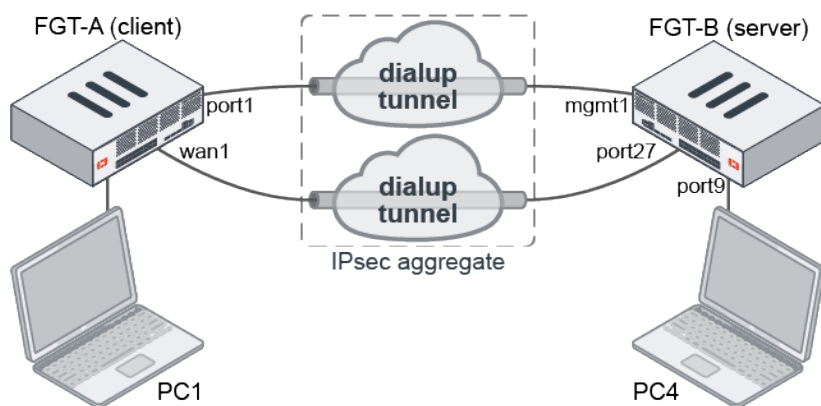

**To configure the client FortiGate (FGT-A):****1. Configure the IPsec tunnels:**

```
config vpn ipsec phase1-interface
    edit "client1"
        set interface "port1"
        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.4
        set psksecret *****
    next
    edit "client2"
        set interface "wan1"
        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 173.1.1.1
        set psksecret *****
    next
end
```

**2. Configure an aggregate of the IPsec tunnels:**

```
config system ipsec-aggregate
    edit "aggl"
        set member "client1" "client2"
    next
end
```

**3. Configure the location ID:**

```
config system settings
    set location-id 1.1.1.1
end
```

**To configure the server FortiGate (FGT-B):****1. Configure the IPsec tunnels:**

```
config vpn ipsec phase1-interface
    edit "server1"
        set type dynamic
        set interface "mgmt1"
        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set psksecret *****
        set dpd-retryinterval 60
    next
    edit "server2"
        set type dynamic
        set interface "port27"
```

```

        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set psksecret *****
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "server1"
        set phase1name "server1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
    edit "server2"
        set phase1name "server2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end

```

## 2. Configure an aggregate of the IPsec tunnels:

```

config system ipsec-aggregate
    edit "server"
        set member "server1" "server2"
    next
end

```

## 3. Configure a firewall policy:

```

config firewall policy
    edit 1
        set srcintf "server"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

## To check the IPsec tunnel and aggregate state:

### 1. List all of the VPN tunnels:

```

FGDocs # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=server1 ver=1 serial=1 172.16.200.4:500->0.0.0.0:500 tun_id=1.0.0.0 dst_mtu=0 dpd-
link=on remote_location=0.0.0.0 weight=1
bound_if=4 lgwy=static/1 tun=tunnel/15 mode=dialup/2 encap=none/4616 options[1208]=npu
frag-rfc accept_traffic=1 overlay_id=0

proxyid_num=0 child_num=2 refcnt=4 ilast=14210 olast=14210 ad=/0
stat: rxp=798921 txp=819074 rxb=121435992 txb=68802216

```



```

dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
-----
name=server2 ver=1 serial=2 173.1.1.1:500->0.0.0.0:500 tun_id=2.0.0.0 dst_mtu=0 dpd-
link=on remote_location=0.0.0.0 weight=1
bound_if=17 lgwy=static/1 tun=tunnel/15 mode=dialup/2 encap=none/4616 options[1208]=npu
frag-rfc accept_traffic=1 overlay_id=0

proxyid_num=0 child_num=1 refcnt=3 ilast=14177 olast=14177 ad=/0
stat: rxp=836484 txp=819111 rxb=137429352 txb=80046050
dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
-----
name=server1_0 ver=1 serial=8 172.16.200.4:500->172.16.200.1:500 tun_id=172.16.200.1
dst_mtu=1500 dpd-link=on remote_location=1.1.1.1 weight=1
bound_if=4 lgwy=static/1 tun=tunnel/15 mode=dial_inst/3 encap=none/4744 options
[1288]=npu rgwy-chg frag-rfc run_state=0 accept_traffic=1 overlay_id=0

parent=server1 index=0
proxyid_num=1 child_num=0 refcnt=5 ilast=45 olast=45 ad=/0
stat: rxp=17176 txp=17176 rxb=2610752 txb=1442784
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=12
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=server1 proto=0 sa=1 ref=2 serial=1 add-route
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:10.1.100.0-10.1.100.255:0
SA: ref=3 options=2a6 type=00 soft=0 mtu=1438 expire=42342/0B replaywin=2048
seqno=4319 esn=0 replaywin_lastseq=00004319 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=43186/43200
dec: spi=0aef2a07 esp=aes key=16 12738c8a1db02c23bfed73eb3615a5a1
ah=sha1 key=20 0f3edd28e3165d184292b4cd397a6edeef9d20dc
enc: spi=2cb75665 esp=aes key=16 982b418e40f0bb18b89916d8c92270c0
ah=sha1 key=20 08cbf9bf78a968af5cd7647dfa2a0db066389929
dec:pkts/bytes=17176/1442784, enc:pkts/bytes=17176/2610752
npu_flag=00 npu_rgwy=172.16.200.1 npu_lgwy=172.16.200.4 npu_selid=6 dec_npuid=0 enc_
npuid=0
-----
name=server1_1 ver=1 serial=a 172.16.200.4:500->172.16.200.3:500 tun_id=172.16.200.3
dst_mtu=0 dpd-link=on remote_location=2.2.2.2 weight=1
bound_if=4 lgwy=static/1 tun=tunnel/15 mode=dial_inst/3 encap=none/4744 options
[1288]=npu rgwy-chg frag-rfc run_state=0 accept_traffic=1 overlay_id=0

parent=server1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=27 olast=27 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=server1 proto=0 sa=1 ref=2 serial=1 add-route
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:0.0.0.0-255.255.255.255:0
SA: ref=3 options=2a6 type=00 soft=0 mtu=1280 expire=43167/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=43187/43200
dec: spi=0aef2a0a esp=aes key=16 4b7a17ba9d239e4ae5fe95ec100fca8b

```

```

    ah=sha1 key=20 7d3e058088f21e0c4f1c13c297293f06c8b592e7
enc: spi=7e961809 esp=aes key=16 ecd1aa8657c5a509662aed45002d3990
    ah=sha1 key=20 d159e06c1cf0ded18a4e4ac86cbe5aa0315c21c9
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
    npu_flag=00 npu_rgw=172.16.200.3 npu_lgw=172.16.200.4 npu_selid=9 dec_npuid=0 enc_
npuid=0
-----
name=server2_0 ver=1 serial=7 173.1.1.1:500->11.101.1.1:500 tun_id=11.101.1.1 dst_
mtu=1500 dpd-link=on remote_location=1.1.1.1 weight=1
bound_if=17 lgwy=static/1 tun=tunnel/15 mode=dial_inst/3 encap=none/4744 options
[1288]=npu rgwy-chg frag-rfc run_state=0 accept_traffic=1 overlay_id=0

parent=server2 index=0
proxyid_num=1 child_num=0 refcnt=5 ilast=45 olast=45 ad=/0
stat: rxp=16001 txp=17179 rxb=2113664 txb=1594824
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=12
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=server2 proto=0 sa=1 ref=2 serial=1 add-route
    src: 0:0.0.0.0-255.255.255.255:0
    dst: 0:10.1.100.0-10.1.100.255:0
    SA: ref=6 options=2a6 type=00 soft=0 mtu=1438 expire=42342/0B replaywin=2048
        seqno=431a esn=0 replaywin_lastseq=00003e80 itn=0 qat=0 hash_search_len=1
    life: type=01 bytes=0/0 timeout=43185/43200
    dec: spi=0aef2a08 esp=aes key=16 394d4e444e90ccb5184e744d49aabe3c
        ah=sha1 key=20 faabea35c2b9b847461cbd263c4856cfb679f342
    enc: spi=2cb75666 esp=aes key=16 0b3a2fbac4d5610670843fa1925d1207
        ah=sha1 key=20 97e99beff3d8f61a8638f6ef887006a9c323acd4
    dec:pkts/bytes=16001/2113596, enc:pkts/bytes=17179/2762792
    npu_flag=03 npu_rgw=11.101.1.1 npu_lgw=173.1.1.1 npu_selid=7 dec_npuid=1 enc_npuid=1

```


## 2. List the IPsec aggregate members:

```

# diagnose sys ipsec-aggregate list
server
members(3):
    server1_1
    server1_0
    server2_0

```

## 3. In the GUI, go to *Dashboard > Network* and expand the *IPsec* widget to review the traffic distributed over the aggregate members:

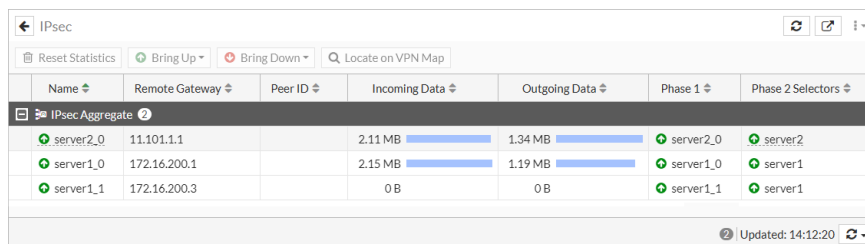


Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
server2_0	11.101.1.1		2.11 MB	1.34 MB	server2_0	server2
server1_0	172.16.200.1		2.15 MB	1.19 MB	server1_0	server1
server1_1	172.16.200.3		0 B	0 B	server1_1	server1

## Packet distribution for aggregate static IPsec tunnels in SD-WAN

This is a sample configuration of aggregating IPsec tunnels by using per-packet load-balancing.

For example, a customer has two ISP connections, wan1 and wan2. On each FortiGate, two IPsec VPN interfaces are created. Next, an `ipsec-aggregate` interface is created and added as an SD-WAN member.

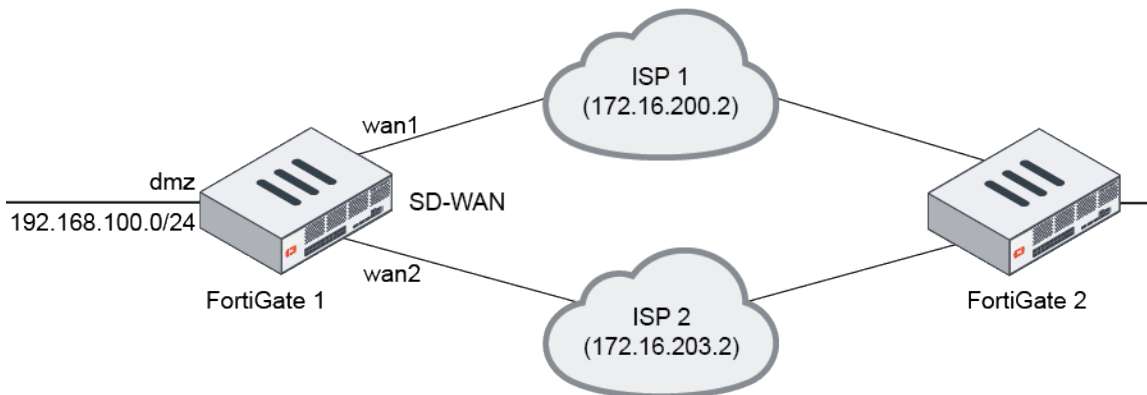

## Configuring FortiGate 1

### To create two IPsec VPN interfaces:

```

config vpn ipsec phase1-interface
  edit "vd1-p1"
    set interface "wan1"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes256-sha256
    set dhgrp 14
    set remote-gw 172.16.201.2
    set psksecret ftnt1234
  next
  edit "vd1-p2"
    set interface "wan2"
    set peertype any
    set net-device disable
    set aggregate-member enable
    set proposal aes256-sha256
    set dhgrp 14
    set remote-gw 172.16.202.2
    set psksecret ftnt1234
  next
end

config vpn ipsec phase2-interface
  edit "vd1-p1"
    set phase1name "vd1-p1"
  next
  edit "vd1-p2"
    set phase1name "vd1-p2"
  next
end

```

### To create an IPsec aggregate interface:

```

config system ipsec-aggregate
  edit "agg1"
    set member "vd1-p1" "vd1-p2"
  end
end

```

```
        set algorithm L3
    next
end

config system interface
    edit "aggl"
        set vdom "root"
        set ip 172.16.11.1 255.255.255.255
        set allowaccess ping
        set remote-ip 172.16.11.2 255.255.255.255
    end
end
```

**To configure the firewall policy:**

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

**To configure SD-WAN:**

```
config system sdwan
    set status enable
    config members
        edit 1
            set interface "aggl"
            set gateway 172.16.11.2
        next
    end
end
```

## Configuring FortiGate 2

**To create two IPsec VPN interfaces:**

```
config vpn ipsec phase1-interface
    edit "vd2-p1"
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.200.1
        set psksecret ftnt1234
    next
    edit "vd2-p2"
```

```
        set interface "wan2"
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.203.1
        set psksecret ftnt1234
    next
end

config vpn ipsec phase2-interface
    edit "vd2-p1"
        set phaselname "vd2-p1"
    next
    edit "vd2-p2"
        set phaselname "vd2-p2"
    next
end
```

**To create an IPsec aggregate interface:**

```
config system ipsec-aggregate
    edit "agg2"
        set member "vd2-p1" "vd2-p2"
        set algorithm L3
    next
end

config system interface
    edit "agg2"
        set vdom "root"
        set ip 172.16.11.2 255.255.255.255
        set allowaccess ping
        set remote-ip 172.16.11.1 255.255.255.255
    next
end
```

**To configure the firewall policy:**

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

**To configure SD-WAN:**

```

config system sdwan
    set status enable
    config members
        edit 1
            set interface "agg2"
            set gateway 172.16.11.1
        next
    end
end

```

**Related diagnose commands****To display aggregate IPsec members:**

```

# diagnose sys ipsec-aggregate list
agg1 algo=L3 member=2 run_tally=2
members:
    vd1-p1
    vd1-p2

```

**To check the VPN status:**

```

# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vd1-p1 ver=1 serial=2 172.16.200.1:0->172.16.201.2:0 tun_id=172.16.201.2 dst_mtu=0
bound_if=10 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/520 options[0208]=npu frag-rfc
run_state=1 accept_traffic=0

proxyid_num=1 child_num=0 refcnt=5 ilast=15 olast=676 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd1-p1 proto=0 sa=0 ref=1 serial=1
    src: 0:0.0.0.0/0.0.0.0:0
    dst: 0:0.0.0.0/0.0.0.0:0
-----
name=vd1-p2 ver=1 serial=3 172.16.203.1:0->172.16.202.2:0 tun_id=172.16.202.2 dst_mtu=1500
bound_if=28 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/520 options[0208]=npu frag-rfc
run_state=1 accept_traffic=1

proxyid_num=1 child_num=0 refcnt=12 ilast=1 olast=1 ad=/0
stat: rxp=1 txp=1686 rxb=16602 txb=111717
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd1-p2 proto=0 sa=1 ref=9 serial=1
    src: 0:0.0.0.0/0.0.0.0:0
    dst: 0:0.0.0.0/0.0.0.0:0
    SA: ref=4 options=10226 type=00 soft=0 mtu=1438 expire=42164/0B replaywin=2048
        seqno=697 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
    life: type=01 bytes=0/0 timeout=42902/43200
    dec: spi=f6ae9f83 esp=aes key=16 f6855c72295e3c5c49646530e6b96002
        ah=sha1 key=20 f983430d6c161d0a4cd9007c7ae057f1ff011334


```

```
enc: spi=8c72bala esp=aes key=16 6330f8c532a6ca5c5765f6a9a6034427
ah=sha1 key=20 e5fe385ed5f0f6a33f1d507601b15743a8c70187
dec:pkts/bytes=1/16536, enc:pkts/bytes=1686/223872
npu_flag=02 npu_rgwy=172.16.202.2 npu_lgwy=172.16.203.1 npu_selid=2 dec_npuid=1 enc_
npuid=0
```

## Packet distribution for aggregate IPsec tunnels using weighted round robin

A weighted round robin algorithm can be used for IPsec aggregate tunnels to distribute traffic by the weight of each member tunnel.

In this example, the FortiGate has two IPsec tunnels put into IPsec aggregate. Traffic is distributed among the members, with one third over *tunnel1*, and two thirds over *tunnel2*. To achieve this, the weighted round robin algorithm is selected, *tunnel1* is assigned a weight of 10, and *tunnel2* is assigned a weight of 20.

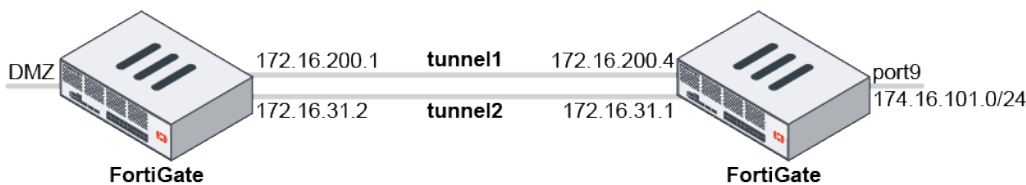

### To create the IPsec aggregate in the GUI:

1. Go to **VPN > IPsec Tunnels** and click **Create New > IPsec Tunnel**.
2. Complete the wizard to create the *tunnel1* and *tunnel2* custom IPsec tunnels. Ensure that *Aggregate member* is *Enabled* for each tunnel under the **Network > Advanced** section.
3. Go to **VPN > IPsec Tunnels** and click **Create New > IPsec Aggregate**.
4. Enter a name for the aggregate, such as *agg1*, and ensure that *Algorithm* is *Weighted Round Robin*.
5. Add *tunnel1* as an aggregate members, and set *Weight* to 10.
6. Add *tunnel2* as a second aggregate members, and set its *Weight* to 20.

7. Click **OK**.

8. To view and monitor the aggregate tunnel statistics, go to the *IPsec* widget on the *Network* dashboard.

The screenshot shows the IPsec widget interface. At the top, there are buttons for 'Reset Statistics', 'Bring Up', 'Bring Down', and 'Locate on VPN Map'. Below these are tabs for 'Name', 'Remote Gateway', 'Peer ID', 'Incoming Data', 'Outgoing Data', 'Phase 1', and 'Phase 2 Selectors'. The 'Incoming Data' tab is selected, showing a table of aggregate statistics for 'agg1'.

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
agg1						
tunnel1	172.16.200.1		3.07 MB	36.83 MB	tunnel1	tunnel1
tunnel2	172.16.31.2		6.16 MB	73.66 MB	tunnel2	tunnel2

### To create the IPsec aggregate in the CLI:

1. Create the *tunnel1* and *tunnel2* custom IPsec tunnels with aggregate-member enabled and aggregate-weight set for both tunnels:

```
config vpn ipsec phase1-interface
    edit "tunnel1"
        ...
        set aggregate-member enable
        set aggregate-weight 10
        ...
    next
    edit "tunnel2"
        ...
        set aggregate-member enable
        set aggregate-weight 20
        ...
    next
end
```

2. Create the IPsec aggregate:

```
config system ipsec-aggregate
    edit "agg1"
        set member "tunnel1" "tunnel2"
        set algorithm weighted-round-robin
    next
end
```


## Redundant hub and spoke VPN

A redundant hub and spoke configuration allows VPN connections to radiate from a central FortiGate unit (the hub) to multiple remote peers (the spokes). Traffic can pass between private networks behind the hub and private networks behind the remote peers. Traffic can also pass between remote peer private networks through the hub.

This is a sample configuration of hub and spoke IPsec VPN. The following applies for this scenario:

- The spokes have two WAN interfaces and two IPsec VPN tunnels for redundancy.
- The secondary VPN tunnel is up only when the primary tunnel is down by dead peer detection.



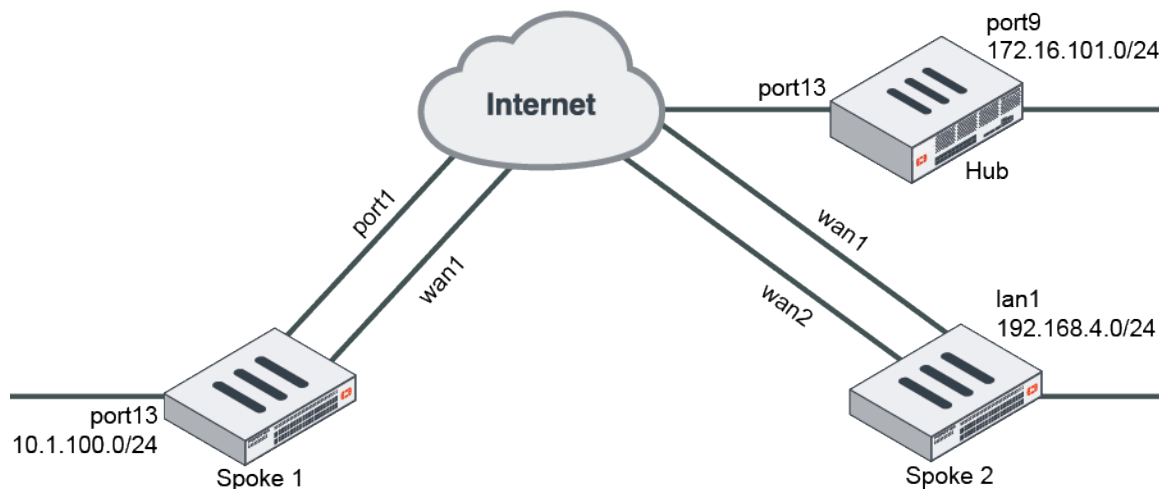

Because the GUI can only complete part of the configuration, we recommend using the CLI.

### To configure redundant hub and spoke VPN using the FortiOS CLI:

#### 1. Configure the hub.

##### a. Configure the WAN, internal interface, and static route.

```

config system interface
  edit "port13"
    set alias "WAN"
    set ip 172.16.202.1 255.255.255.0
  next
  edit "port9"
    set alias "Internal"
    set ip 172.16.101.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.202.2
    set device "port13"
  next
end

```

##### b. Configure the IPsec phase1-interface and phase2-interface.

```

config vpn ipsec phase1-interface
  edit "hub"
    set type dynamic
    set interface "port13"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set dpd on-idle
    set psksecret sample
    set dpd-retryinterval 60
  next
end
config vpn ipsec phase2-interface
  edit "hub"
    set phase1name "hub"
  next
end

```

```

        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
        aes256gcm chacha20poly1305
    next
end

```

**c. Configure the firewall policy.**

```

config firewall policy
    edit 1
        set name "spoke-hub"
        set srcintf "hub"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke-spoke"
        set srcintf "hub"
        set dstintf "hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**2. Configure the spokes.**

**a. Configure the WAN, internal interface, and static route.**

**i. Configure Spoke1.**

```

config system interface
    edit "port1"
        set ip 172.16.200.1 255.255.255.0
    next
    edit "wan1"
        set mode dhcp
        set distance 10
        set priority 100
    next
    edit "dmz"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.2
        set device "port1"
    next
end

```

**ii. Configure Spoke2.**

```

config system interface
    edit "wan1"
        set ip 172.16.200.3 255.255.255.0
    next
    edit "wan2"
        set mode dhcp

```

```

        set distance 10
        set priority 100
    next
    edit "lan1"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.2
        set device "wan1"
    next
end

```

**b. Configure IPsec phase1-interface and phase2-interface.**

**i. Configure Spoke1.**

```

config vpn ipsec phase1-interface
    edit "primary"
        set interface "port1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set psksecret sample
    next
    edit "secondary"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set monitor "primary"
        set psksecret sample
    next
end
config vpn ipsec phase2-interface
    edit "primary"
        set phasename "primary"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
            aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 10.1.100.0 255.255.255.0
    next
    edit "secondary"
        set phasename "secondary"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
            aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 10.1.100.0 255.255.255.0
    next
end

```

**ii. Configure Spoke2.**

```

config vpn ipsec phase1-interface
    edit "primary"
        set interface "wan1"
        set peertype any
        set net-device enable

```

```

        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set psksecret sample
        next
    edit "secondary"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set monitor "primary"
        set psksecret sample
        next
end
config vpn ipsec phase2-interface
    edit "primary"
        set phasename "primary"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
            aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 192.168.4.0 255.255.255.0
    next
    edit "secondary"
        set phasename "secondary"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
            aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 192.168.4.0 255.255.255.0
    next
end

```

**c. Configure the firewall policy.**

**i. Configure Spoke1.**

```

config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "primary" "secondary"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**ii. Configure Spoke2.**

```

config firewall policy
    edit 1
        set srcintf "lan1"
        set dstintf "primary" "secondary"
        set srcaddr "192.168.4.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**d. Configure the static route.****i. Configure Spoke1.**

```

config router static
edit 3
set dst 172.16.101.0 255.255.255.0
set distance 1
set device "primary"
next
edit 4
set dst 172.16.101.0 255.255.255.0
set distance 3
set device "secondary"
next
end

```

**ii. Configure Spoke2.**

```

config router static
edit 3
set dst 172.16.101.0 255.255.255.0
set distance 1
set device "primary"
next
edit 4
set dst 172.16.101.0 255.255.255.0
set distance 3
set device "secondary"
next
end

```

**3. Run diagnose and get commands.****a. Run the Spoke1 # diagnose vpn tunnel list command. The system should return the following:**

```

name=primary ver=1 serial=1 172.16.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=15 ilast=0 olast=0 ad=/0
stat: rxp=1879 txp=1881 rxb=225480 txb=112860
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=primary proto=0 sa=1 ref=2 serial=2 auto-negotiate
src: 0:10.1.100.0/255.255.255.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227
type=00 soft=0 mtu=1438 expire=41002/0B replaywin=2048
seqno=758 esn=0 replaywin_lastseq=00000758 itn=0
life: type=01 bytes=0/0 timeout=42901/43200 dec: spi=0908732f esp=aes key=16
20770dfe67ea22dd8ec32c44d84ef4d5
ah=sha1 key=20 edc89fc2ec06309ba13de95e7e486f9b795b8707
enc: spi=a1d9eed1 esp=aes key=16 8eeea2526fba062e680d941083c8b5d1
ah=sha1 key=20 f0f5deaf88b2a69046c3154e9f751739b3f411f5
dec:pkts/bytes=1879/112740, enc:pkts/bytes=1879/225480
name=secondary ver=1 serial=2 172.17.200.1:0->172.16.202.1:0 tun_id=172.16.202.1
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfc accept_traffic=0
proxyid_num=1 child_num=0 refcnt=10 ilast=1892 olast=1892 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=secondary proto=0 sa=0 ref=2 serial=2 auto-negotiate
src: 0:10.1.100.0/255.255.255.0:0 dst: 0:0.0.0.0/0.0.0.0:0

```

- b. Run the `Spoke1 # get router info routing-table static` command. The system should return the following:

```
Routing table for VRF=0
.....
S 172.16.101.0/24 [1/0] is directly connected, primary
```

## Overlay Controller VPN (OCVPN)

Overlay Controller VPN (OCVPN) is a cloud based solution to simplify IPsec VPN setup. When OCVPN is enabled, IPsec phase1-interfaces, phase2-interfaces, static routes, and firewall policies are generated automatically on all FortiGates that belong to the same community network. A community network is defined as all FortiGates registered to FortiCare using the same FortiCare account.

If the network topology changes on any FortiGates in the community (such as changing a public IP address in DHCP mode, adding or removing protected subnets, failing over in dual WAN), the IPsec-related configuration for all devices is updated with Cloud assistance in self-learning mode. No intervention is required.

The following topics provide instructions on configuring OCVPN:

- [Full mesh OCVPN on page 1744](#)
- [Hub-spoke OCVPN with ADVPN shortcut on page 1749](#)
- [Hub-spoke OCVPN with inter-overlay source NAT on page 1753](#)
- [OCVPN portal on page 1757](#)
- [SD-WAN integration with OCVPN on page 797](#)
- [Allow FortiClient to join OCVPN on page 1758](#)
- [Troubleshooting OCVPN on page 1762](#)

### Full mesh OCVPN

This example shows how to configure a full mesh Overlay Controller VPN (OCVPN), establishing full mesh IPsec tunnels between all of the FortiGates.

#### License

- Free license: Three devices full mesh, 10 overlays, 16 subnets per overlay.
- Full License: Maximum of 16 devices, 10 overlays, 16 subnets per overlay.

#### Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.

#### Restrictions


- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

## Terminology

<b>Poll-interval</b>	How often FortiGate tries to fetch OCVPN-related data from OCVPN Cloud.
<b>Role</b>	The device OCVPN role of spoke, primary-hub, or secondary-hub.
<b>Overlay</b>	Defines network overlays and bind to subnets.
<b>Subnet</b>	Internal network subnet (IPsec protected subnet). Traffic to or from this subnet enters the IPsec tunnel encrypted by IPsec SA.

## Sample topology

The following example shows three FortiGate units registered on FortiCare using the same FortiCare account. Each FortiGate unit has one internal subnet, and no NAT exists between the units.

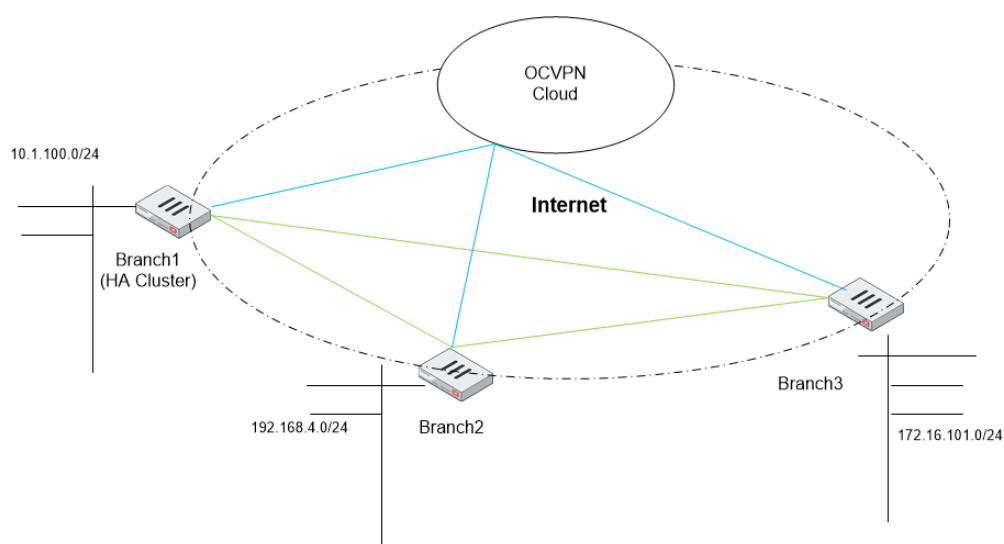

## Sample configuration

The following overlays and subnets are used:

- Branch1:
  - Overlay name: QA. Local subnets: 10.1.100.0/24
  - Overlay name: PM. Local subnets: 10.2.100.0/24
- Branch2:
  - Overlay name: QA. Local interfaces: lan1
  - Overlay name: PM. Local interfaces: lan2
- Branch3:
  - Overlay name: QA. Local subnets: 172.16.101.0/24
  - Overlay name: PM. Local subnets: 172.16.102.0/24



The overlay names on each device must be the same for local and remote selector pairs to be negotiated.

### To register FortiGates on FortiCare:

1. Go to *System > FortiGuard*.
2. In the *License Information* section, click *Login to FortiCare*. The registration pane opens.
3. Enter the required information (email address, password, country/region, reseller).
4. Optionally, enable *Sign in to FortiGate Cloud using the same account*.
5. Click *OK*.

### To enable OCVPN in the GUI:

1. Go to *VPN > Overlay Controller VPN*.
2. Create the first overlay by setting the following options:
  - a. For *Status*, click *Enabled*.
  - b. For *Role*, click *Spoke*.
  - c. In the *Overlays* section, click *Create New* to create a network overlay.

**Overlay Controller VPN**

FortiCare support: Registered

Status: **Enabled** Disabled

Registration status: Registered

Service status: Up (Last succeeded: 2019/03/08 09:51:31)

Topology: Dual-Hub-Spoke

Role: **Spoke** Primary Hub Secondary Hub

Auto-discovery shortcuts: On

**Overlays**

Overlay Name	Local Subnets	Local Interfaces
QA	10.1.100.0/24	
PM	10.2.100.0/24	

**Cloud Members**

Overlay Name	Remote Gateway	Remote Subnets	Assign IP
primary-hub (Primary Hub)			
secondary-hub (Secondary Hub)			
spoke1 (Spoke)			
QA	172.16.200.1	10.1.100.0/24	
PM	172.16.200.1	10.2.100.0/24	
spoke2 (Spoke)			

**New Overlay**

Name: HR

Local subnets: 10.3.100.0/24

Local interfaces: +

OK Cancel

3. Specify the *Name*, *Local subnets*, and/or *Local interfaces*.  
The local subnet must be routable and interfaces must have IP addresses.



4. Click **OK**.

**Overlay Controller VPN**

FortiCare support ✓ Registered

Status ➕ Enabled ✖ Disabled

Registration status ✓ Registered

Service status ➕ Up (Last succeeded: 2019/03/07 16:34:00)

Topology Full-Mesh

Role Spoke Primary Hub Secondary Hub

Auto-discovery shortcuts 🔍

---

**Overlays**

+ Create New ✎ Edit 🗑 Delete Search Q

Overlay Name	Local Subnets	Local Interfaces
QA	10.1.100.0/24	
PM	10.2.100.0/24	

---

**Cloud Members**

🔄 Refresh Search Q

Overlay Name	Remote Gateway	Remote Subnets
<span>+</span> branch2 (Spoke) ②		
<span>+</span> <span>📄</span> branch1 (Spoke) ②		
<span>+</span> branch3 (Spoke) ②		

Apply

5. Click **Apply** to commit the configuration.

6. Repeat this procedure to create all the overlays.

**To enable OCVPN in the CLI:**

## 1. Configure Branch1:

```

config vpn ocvpn
  set status enable
  set multipath disable
  config overlays
    edit 1
      set name "QA"
      config subnets
        edit 1
          set subnet 10.1.100.0 255.255.255.0
        next
      end
    next
  edit 2
    set name "PM"
    config subnets
      edit 1
        set subnet 10.2.100.0 255.255.255.0
      next
    end
  next
end

```

```
    end
end
```

## 2. Configure Branch2:

```
config vpn ocvpn
    set status enable
    set multipath disable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set type interface
                    set interface "lan1"
                next
            end
        next
    edit 2
        set name "PM"
        config subnets
            edit 1
                set type interface
                set interface "lan2"
            next
        end
    next
end
end
```

## 3. Configure Branch3:

```
config vpn ocvpn
    set status enable
    set multipath disable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 172.16.101.0 255.255.255.0
                next
            end
        next
    edit 1
        set name "PM"
        config subnets
            edit 1
                set subnet 172.16.102.0 255.255.255.0
            next
        end
    next
end
end
```

## Hub-spoke OCVPN with ADVPN shortcut

This topic shows a sample configuration of a hub-spoke One-Click VPN (OCVPN) with an Auto Discovery VPN (ADVPN) shortcut. OCVPN automatically detects the network topology based on members' information. To form a hub-spoke OCVPN, at least one device must announce its role as the primary hub, another device can work as the secondary hub (for redundancy), while others function as spokes.

### License

- Free license: Hub-spoke network topology not supported.
- Full license: Maximum of 2 hubs, 10 overlays, 64 subnets per overlay; 1024 spokes, 10 overlays, 16 subnets per overlay.

### Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.


### Restrictions

- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

### OCVPN device roles

- Primary hub.
- Secondary hub.
- Spoke (OCVPN default role).

### Sample topology

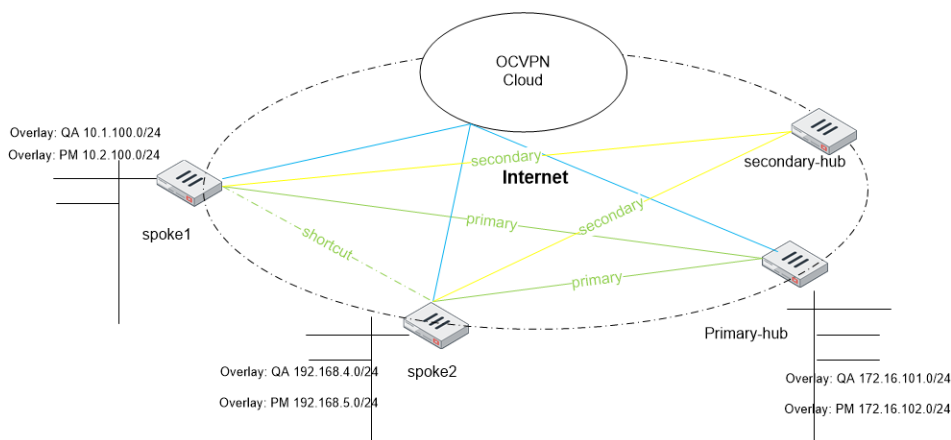

## Sample configuration

The steps below use the following overlays and subnets for the sample configuration:

- Primary hub:
  - Overlay name: QA. Local subnets: 172.16.101.0/24
  - Overlay name: PM. Local subnets: 172.16.102.0/24
- Secondary hub:
  - Overlays are synced from primary hub.
- Spoke1:
  - Overlay name: QA. Local subnets: 10.1.100.0/24
  - Overlay name: PM. Local subnets: 10.2.100.0/24
- Spoke2:
  - Overlay name: QA. Local interfaces: lan1
  - Overlay name: PM. Local interfaces: lan2




The overlay names on each device must be the same for local and remote selector pairs to be negotiated.

### To register FortiGates on FortiCare:

1. Go to *System > FortiGuard*.
2. In the *License Information* section, click *Login to FortiCare*. The registration pane opens.
3. Enter the required information (email address, password, country/region, reseller).
4. Optionally, enable *Sign in to FortiGate Cloud using the same account*.
5. Click *OK*.

### To enable hub-spoke OCVPN in the GUI:

1. Go to *VPN > Overlay Controller VPN*.
2. Configure the OCVPN primary hub by setting the following options:
  - a. For *Status*, click *Enabled*.
  - b. For *Role*, click *Primary Hub*.
  - c. In the *Overlays* section, click *Create New* to create a network overlay.

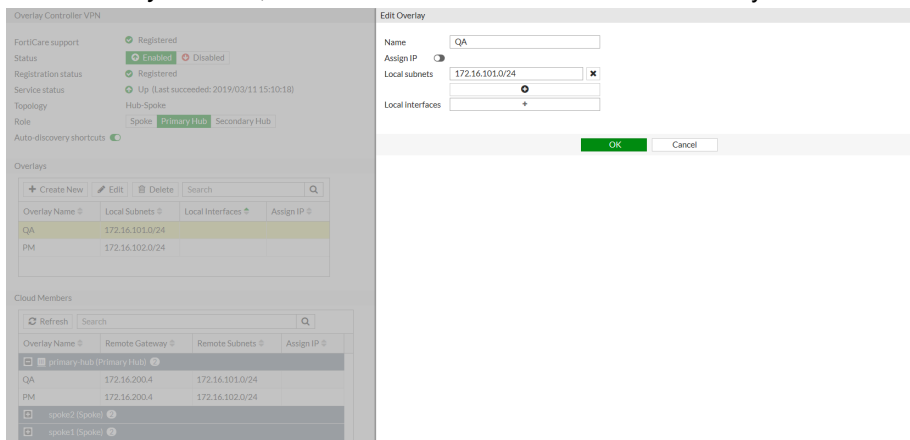

- d. Specify the *Name*, *Local subnets*, and/or *Local interfaces*. Then click *OK*.
- e. Click *Apply* to commit the configuration.

Overlay Controller VPN

FortiCare support: Registered

Status: ● Enabled ● Disabled

Registration status: Registered

Service status: ● Up (Last succeeded: 2019/03/07 17:23:49)

Topology: Dual-Hub-Spoke

Role: Spoke Primary Hub Secondary Hub

Auto-discovery shortcuts: ●

---

Overlays

[+ Create New](#) [Edit](#) [Delete](#)

Overlay Name	Local Subnets	Local Interfaces	Assign IP
QA	172.16.101.0/24		
PM	172.16.102.0/24		

---

Cloud Members

[Refresh](#)

Overlay Name	Remote Gateway	Remote Subnets	Assign IP
<span style="background-color: #28a745; color: white;">primary-hub (Primary Hub)</span>			
<span style="background-color: #6c757d; color: white;">secondary-hub (Secondary Hub)</span>			
<span style="background-color: #6c757d; color: white;">spoke1 (Spoke)</span>			
<span style="background-color: #6c757d; color: white;">spoke2 (Spoke)</span>			

Apply

3. Configure the OCVPN secondary hub:
 

Overlays are synced from the primary hub and cannot be defined in the secondary hub.

  - a. In the *Overlay Controller VPN* pane, select *Secondary Hub* for the *Role*.
  - b. Select *Apply* to commit the configuration.

Overlay Controller VPN

FortiCare support: Registered

Status: ● Enabled ● Disabled

Registration status: Registered

Service status: ● Up (Last succeeded: 2019/03/07 17:44:29)

Topology: Dual-Hub-Spoke

Role: Spoke Primary Hub Secondary Hub

Auto-discovery shortcuts: ●

---

Cloud Members

[Refresh](#)

Overlay Name	Remote Gateway	Remote Subnets	Assign IP
<span style="background-color: #28a745; color: white;">primary-hub (Primary Hub)</span>			
<span style="background-color: #28a745; color: white;">secondary-hub (Secondary Hub)</span>			
QA	172.16.200.2	172.16.101.0/24	
PM	172.16.200.2	172.16.102.0/24	
<span style="background-color: #6c757d; color: white;">spoke1 (Spoke)</span>			
<span style="background-color: #6c757d; color: white;">spoke2 (Spoke)</span>			

Apply

4. Configure the OCVPN spokes:
  - a. In the *Overlay Controller VPN* pane, select *Spoke* for the *Role*.
  - b. In the *Overlays* section, click *Create New* to create a network overlay.
  - c. Specify the *Name*, *Local subnets*, and/or *Local interfaces*.  
The local subnet must be routable and interfaces must have IP addresses.

- d. Click **OK** and then click **Apply** to commit the configuration.

Overlay Controller VPN

FortiCare support: Registered

Status: **Enabled** **Disabled**

Registration status: Registered

Service status: Up (Last succeeded: 2019/03/07 17:48:53)

Topology: Dual-Hub-Spoke

Role: **Spoke** Primary Hub Secondary Hub

Auto-discovery shortcuts: **On**

Overlays

Overlay Name	Local Subnets	Local Interfaces
QA	10.1.100.0/24	
PM	10.2.100.0/24	

Cloud Members

Overlay Name	Remote Gateway	Remote Subnets	Assign IP
primary-hub (Primary Hub)			
secondary-hub (Secondary Hub)			
spoke1 (Spoke)			
QA	172.16.200.1	10.1.100.0/24	
PM	172.16.200.1	10.2.100.0/24	
spoke2 (Spoke)			

**Apply**

## To enable hub-spoke OCVPN in the CLI:

1. Configure the OCVPN primary hub:

```
config vpn ocvpn
    set status enable
    set role primary-hub
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 172.16.101.0 255.255.255.0
                next
            end
        next
        edit 2
            set name "PM"
            config subnets
                edit 1
                    set subnet 172.16.102.0 255.255.255.0
                next
            end
        next
    end
end
```

2. Configure the OCVPN secondary hub:

```
config vpn ocvpn
    set status enable
    set role secondary-hub
end
```

3. Configure the OCVPN spoke1:

```
config vpn ocvpn
    set status enable
    config overlays
```

```

        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 10.1.100.0 255.255.255.0
                next
            end
        next
    edit 2
        set name "PM"
        config subnets
            edit 1
                set subnet 10.2.100.0 255.255.255.0
            next
        end
    next
end
end

```

#### 4. Configure the OCVPN spoke2:

```

config vpn ocvpn
    set status enable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 192.168.4.0 255.255.255.0
                next
            end
        next
    edit 2
        set name "PM"
        config subnets
            edit 1
                set subnet 192.168.5.0 255.255.255.0
            next
        end
    next
end
end

```

## Hub-spoke OCVPN with inter-overlay source NAT

This topic shows a sample configuration of hub-spoke OCVPN with inter-overlay source NAT. OCVPN isolates traffic between overlays by default. With NAT enabled on spokes and `assign-ip` enabled on hub, you can have inter-overlay communication.

Inter-overlay communication means devices from any source addresses and any source interfaces can communicate with any devices in overlays' subnets when the overlay option `assign-ip` is enabled.

You must first disable `auto-discovery` before you can enable NAT.

## License

- Free license: Hub-spoke network topology not supported.
- Full License: Maximum of 2 hubs, 10 overlays, 64 subnets per overlay; 1024 spokes, 10 overlays, 16 subnets per overlay.

## Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.


## Restrictions

- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

## OCVPN device roles

- Primary hub.
- Secondary hub.
- Spoke (OCVPN default role).

## Sample topology

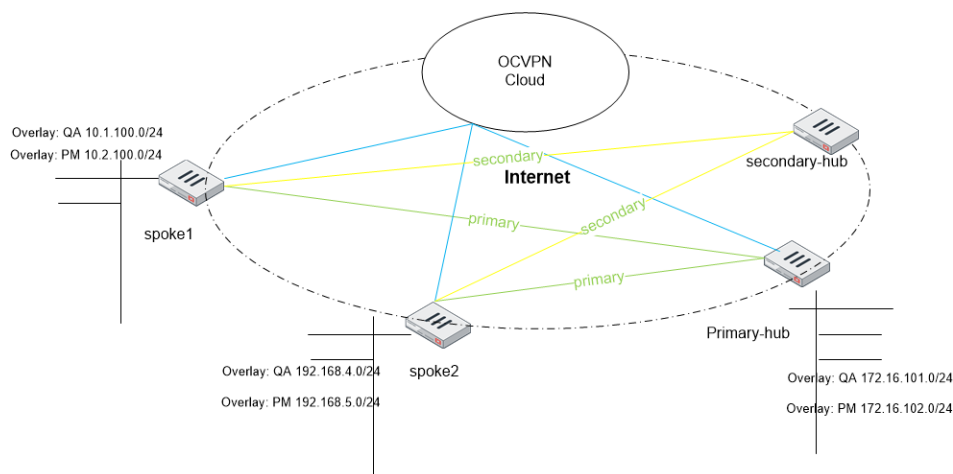

## Sample configuration

You can only configure this feature using the CLI.



The overlay names on each device must be the same for local and remote selector pairs to be negotiated.



**To enable inter-overlay source NAT in the CLI:****1. Configure the primary hub, enable overlay QA, and configure assign-ip and IP range:**

```
config vpn ocvpn
    set status enable
    set role primary-hub
    config overlays
        edit 1
            set name "QA"
            set assign-ip enable
            set ipv4-start-ip 172.16.101.100
            set ipv4-end-ip 172.16.101.200
            config subnets
                edit 1
                    set subnet 172.16.101.0 255.255.255.0
                next
            end
        next
    edit 2
        set name "PM"
        set assign-ip enable
        config subnets
            edit 1
                set subnet 172.16.102.0 255.255.255.0
            next
        end
    next
end
end
```

**2. Configure the secondary hub:**

```
config vpn ocvpn
    set status enable
    set role secondary-hub
end
```

**3. Configure spoke1 and enable NAT on the spoke:**

```
config vpn ocvpn
    set status enable
    set auto-discovery disable
    set nat enable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 10.1.100.0 255.255.255.0
                next
            end
        next
    edit 2
        set name "PM"
        config subnets
            edit 1
                set subnet 10.2.100.0 255.255.255.0
```

```
        next
      end
    next
  end
end
```

#### 4. Configure spoke2 and enable NAT on the spoke:


```
config vpn ocvpn
  set status enable
  set auto-discovery disable
  set nat enable
  config overlays
    edit 1
      set name "QA"
      config subnets
        edit 1
          set subnet 192.168.4.0 255.255.255.0
        next
      end
    next
    edit 2
      set name "PM"
      config subnets
        edit 1
          set subnet 192.168.5.0 255.255.255.0
        next
      end
    next
  end
end
```

#### A firewall policy with NAT is generated on the spoke:

```
edit 9
  set name "_OCVPN2-1.1_nat"
  set uuid 3f7a84b8-3d36-51e9-ee97-8f418c91e666
  set srcintf "any"
  set dstintf "_OCVPN2-1.1"
  set srcaddr "all"
  set dstaddr "_OCVPN2-1.1_remote_networks"
  set action accept
  set schedule "always"
  set service "ALL"
  set comments "Generated by OCVPN Cloud Service."
  set nat enable
next
```

## OCVPN portal

When you log into the OCVPN portal, the OCVPN license type and device information display. The device information includes the device serial number, OCVPN role, hostname, public IP address, port number, and overlays.

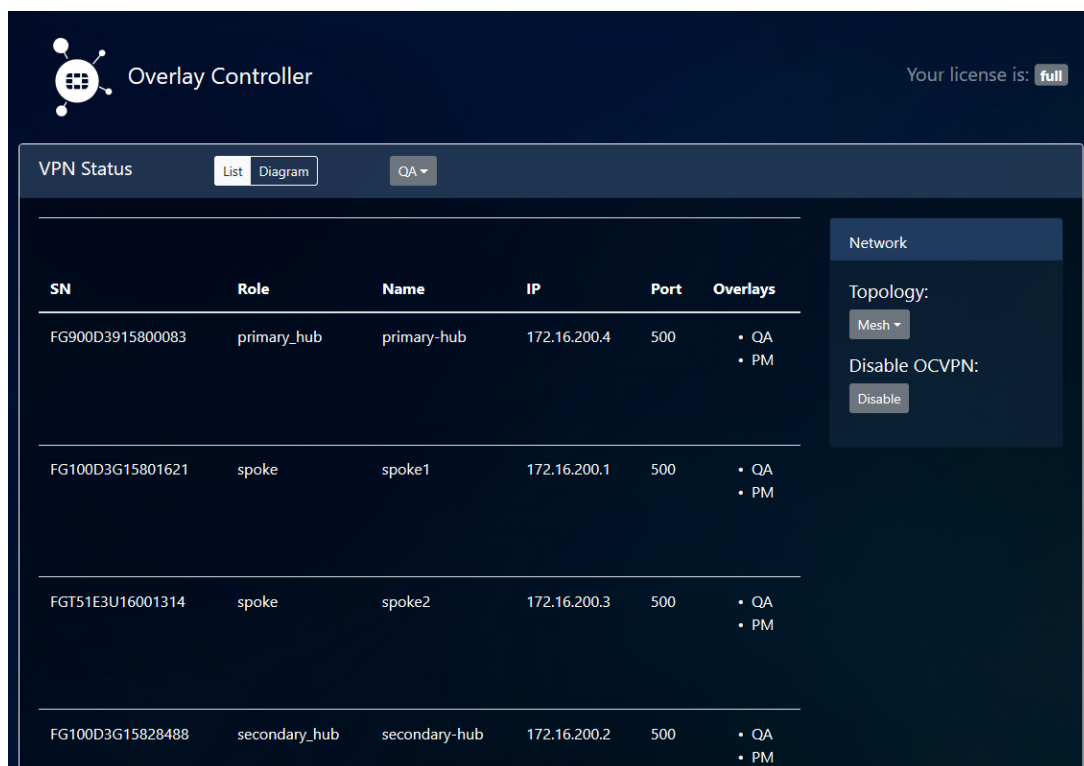

Overlay Controller

Your license is: **full**

VPN Status List Diagram QA


SN	Role	Name	IP	Port	Overlays
FG900D3915800083	primary_hub	primary-hub	172.16.200.4	500	• QA • PM
FG100D3G15801621	spoke	spoke1	172.16.200.1	500	• QA • PM
FGT51E3U16001314	spoke	spoke2	172.16.200.3	500	• QA • PM
FG100D3G15828488	secondary_hub	secondary-hub	172.16.200.2	500	• QA • PM

Network

Topology:  
Mesh

Disable OCVPN:  
Disable

You can unregister an OCVPN device from the OCVPN portal under *Device* on the right pane.

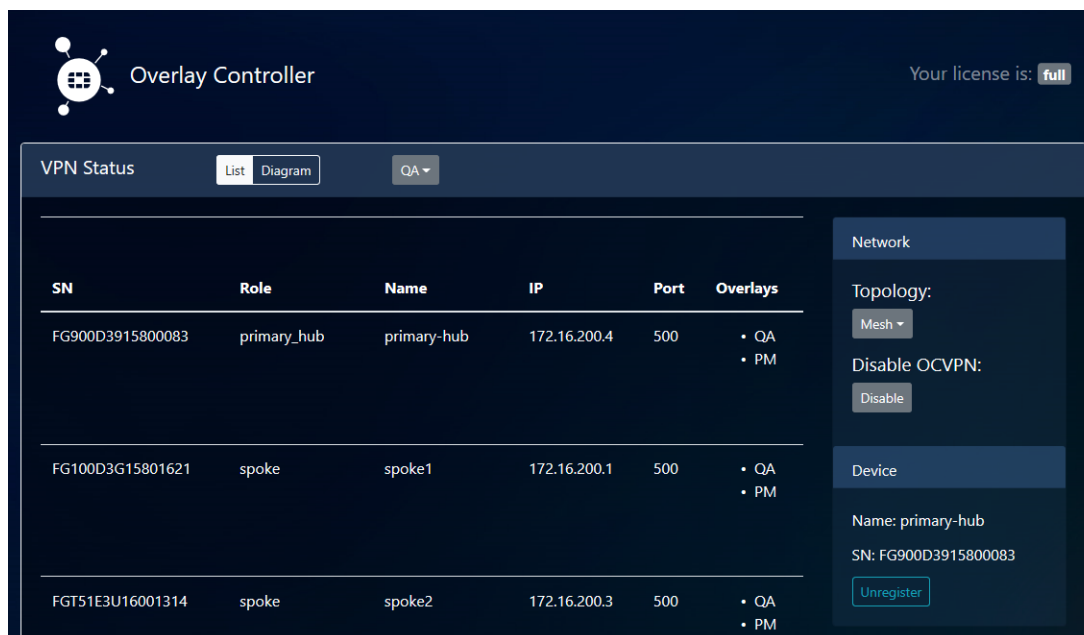

Overlay Controller

Your license is: **full**

VPN Status List Diagram QA

SN	Role	Name	IP	Port	Overlays
FG900D3915800083	primary_hub	primary-hub	172.16.200.4	500	• QA • PM
FG100D3G15801621	spoke	spoke1	172.16.200.1	500	• QA • PM
FGT51E3U16001314	spoke	spoke2	172.16.200.3	500	• QA • PM

Network


Topology:  
Mesh

Disable OCVPN:  
Disable

Device


Name: primary-hub  
SN: FG900D3915800083  
Unregister

Use the OCVPN *Diagram* to show the OCVPN network topology.

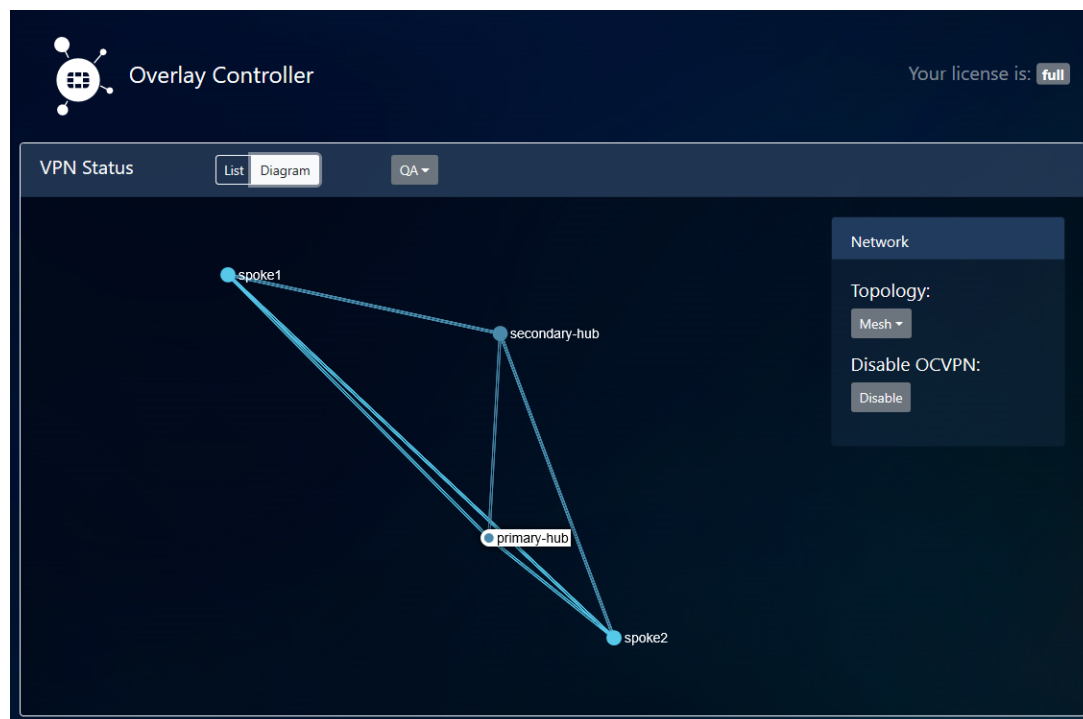


## Allow FortiClient to join OCVPN

Administrators can configure remote access for FortiClient within an OCVPN hub. This provides simple configurations to allow a user group access to an overlay network.

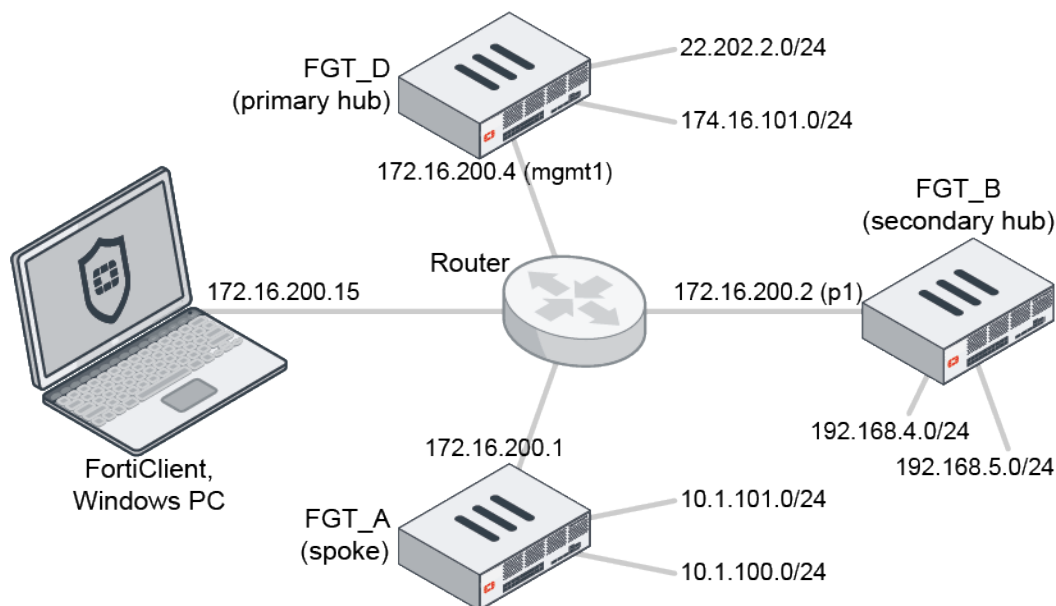

## To configure remote FortiClient access to an OCVPN hub in the GUI:

1. On the primary hub, configure the users and user groups required for the FortiClient dialup user authentication and authorization. In this example, there are two user groups (*dev\_grp* and *qa\_grp*).
2. Go to *VPN > Overlay Controller VPN* and in the *Overlays* section, click *Create New*.
3. Enter a name and the local subnet (174.16.101.0/24 for *dev* and 22.202.2.0/24 for *qa*).
4. Enable *FortiClient Access*.
5. In the *Access Rules* section, click *Create New*.
6. Enter a name, and select the authentication groups and overlays. The authentication groups will be used by the IPsec phase 1 interface for authentication, and by firewall policies for authorization. The overlay allows access to the resource.
7. Click *OK*.
8. Create more rules if needed.
9. Click *Apply*.

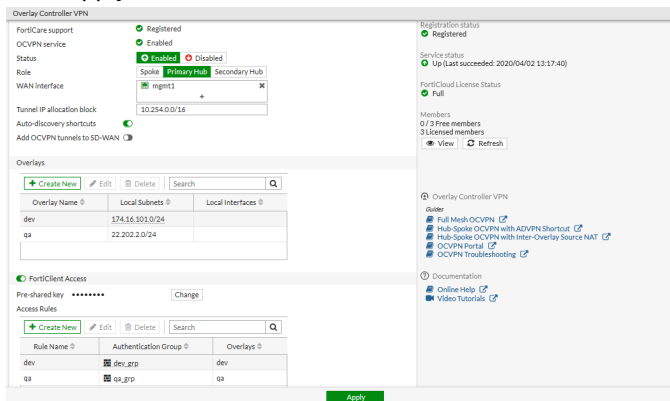

## To view the tunnel status and activity in the GUI:

1. Go to *Dashboard > Network*.
2. Click the *IPsec* widget to expand to full screen view.

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
OCVPN0_0	172.16.200.1	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = ...	244.63 KB	117.63 KB	OCVPN0_0	OCVPN0a
OCVPN_FCT0_0	172.16.200.15		12.91 KB	480 B	OCVPN_FCT0_0	OCVPN_FCT0

## To configure remote FortiClient access to an OCVPN hub in the CLI:

```
config vpn ocvpn
  set status enable
  set role primary-hub
  set wan-interface "mgmt1"
  set ip-allocation-block 10.254.0.0 255.255.0.0
  config overlays
    edit "dev"
      config subnets
        edit 1
          set subnet 174.16.101.0 255.255.255.0
        next
      end
    next
  next
```

```

        edit "qa"
            config subnets
                edit 1
                    set subnet 22.202.2.0 255.255.255.0
                next
            end
        next
    end
    config forticlient-access
        set status enable
        set psksecret xxxxxxxxxxxx
        config auth-groups
            edit "dev"
                set auth-group "dev_grp"
                set overlays "dev"
            next
            edit "qa"
                set auth-group "qa_grp"
                set overlays "qa"
            next
        end
    end
end

```

### To view the tunnel status and activity in the CLI:

```
# diagnose vpn ike gateway list
```

```

vd: root/0
name: _OCVPN_FCT0_0
version: 1
interface: mgmt1 4
addr: 172.16.200.4:4500 -> 172.16.200.15:64916
tun_id: 172.16.200.15
created: 110s ago
xauth-user: usera
groups:
    dev_grp 1
assigned IPv4 address: 10.254.128.1/255.255.255.255
nat: peer
IKE SA: created 1/1 established 1/1 time 20/20/20 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms

id/spi: 72 1ccd2abf2d981123/fd8da107f9e4d312
direction: responder
status: established 110-110s ago = 20ms
proposal: aes256-sha256
key: 105a0291b0c05219-3decdf78938a7bea-78943651e1720536-625114d66e46f668
lifetime/rekey: 86400/86019
DPD sent/recvd: 00000000/00000af3

```

### To view data on the PC running FortiClient:

```

C:\ route print
=====

```

## IPv4 Route Table

## Active Routes:

Network	Destination	Netmask	Gateway	Interface	Metric
	0.0.0.0	0.0.0.0	10.1.100.5	10.1.100.13	281
	<b>10.1.100.0</b>	<b>255.255.255.0</b>	<b>10.254.128.2</b>	<b>10.254.128.1</b>	<b>1</b>
10.1.100.13	255.255.255.255		On-link	10.1.100.13	281
	<b>10.1.101.0</b>	<b>255.255.255.0</b>	<b>10.254.128.2</b>	<b>10.254.128.1</b>	<b>1</b>
10.6.30.0	255.255.255.0		On-link	10.6.30.13	281
10.6.30.13	255.255.255.255		On-link	10.6.30.13	281
10.6.30.255	255.255.255.255		On-link	10.6.30.13	281
10.254.0.0	255.255.0.0		10.254.128.2	10.254.128.1	1
10.254.128.1	255.255.255.255		On-link	10.254.128.1	257
	<b>22.202.2.0</b>	<b>255.255.255.0</b>	<b>10.254.128.2</b>	<b>10.254.128.1</b>	<b>1</b>
127.0.0.0	255.0.0.0		On-link	127.0.0.1	331
127.0.0.1	255.255.255.255		On-link	127.0.0.1	331
127.255.255.255	255.255.255.255		On-link	127.0.0.1	331
172.16.200.4	255.255.255.255		10.1.100.5	10.1.100.13	25
	<b>174.16.101.0</b>	<b>255.255.255.0</b>	<b>10.254.128.2</b>	<b>10.254.128.1</b>	<b>1</b>
224.0.0.0	240.0.0.0		On-link	127.0.0.1	331
224.0.0.0	240.0.0.0		On-link	10.254.128.1	257
224.0.0.0	240.0.0.0		On-link	10.6.30.13	281
224.0.0.0	240.0.0.0		On-link	10.1.100.13	281
255.255.255.255	255.255.255.255		On-link	127.0.0.1	331
255.255.255.255	255.255.255.255		On-link	10.254.128.1	257
255.255.255.255	255.255.255.255		On-link	10.6.30.13	281
255.255.255.255	255.255.255.255		On-link	10.1.100.13	281

## Persistent Routes:

Network	Address	Netmask	Gateway	Address	Metric
	0.0.0.0	0.0.0.0	10.1.100.5		Default

The PC can access the *dev* resource overlay, but not *qa*:

```
C:\Users\tester>ping 174.16.101.44
```

Pinging 174.16.101.44 with 32 bytes of data:

```
Reply from 174.16.101.44: bytes=32 time=1ms TTL=63
Reply from 174.16.101.44: bytes=32 time=1ms TTL=63
Reply from 174.16.101.44: bytes=32 time=1ms TTL=63
Reply from 174.16.101.44: bytes=32 time=1ms TTL=63
```

Ping statistics for 174.16.101.44:

```
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 1ms, Maximum = 1ms, Average = 1ms
```

```
C:\Users\tester>ping 22.202.2.2
```

Pinging 22.202.2.2 with 32 bytes of data:

```
Request timed out.
Request timed out.
Request timed out.
Request timed out.
```

Ping statistics for 22.202.2.2:

```
Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
```

## Troubleshooting OCVPN

This document includes troubleshooting steps for the following OCVPN network topologies:

- Full mesh OCVPN.
- Hub-spoke OCVPN with ADVPN shortcut.
- Hub-spoke OCVPN with inter-overlay source NAT.

For OCVPN configurations in other network topologies, see the other OCVPN topics.

### Troubleshooting full mesh network topology

- **Branch\_1#**diagnose vpn ocvpn status

```
Current State      : Registered
Topology          : Full-Mesh
Role              : Spoke
Server Status     : Up
Registration time  : Thu Feb 28 18:42:25 2019
Update time       : Thu Feb 28 15:57:18 2019
Poll time         : Fri Mar 1 15:02:28 2019
```

- **Branch\_1#**diagnose vpn ocvpn show-meta

```
Topology :: auto
License  :: full
Members  :: 3
Max-free :: 3
```

- **Branch\_1#**diagnose vpn ocvpn show-overlays

```
QA
PM
```

- **Branch\_1#**diagnose vpn ocvpn show-members

```
Member: { "SN": "FG100D3G15801621", "IPv4": "172.16.200.1", "port": "500", "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"10.2.100.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "FortiGate-
100D", "topology_role": "spoke" }
Member: { "SN": "FG900D3915800083", "IPv4": "172.16.200.4", "port": "500", "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "Branch3",
"topology_role": "spoke" }
Member: { "SN": "FGT51E3U16001314", "IPv4": "172.16.200.199", "port": "500", "slot":
1002, "overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\255.255.255.0" ],
"ip_range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "Branch2",
"topology_role": "spoke" }
```

- **Branch\_1#**diagnose vpn tunnel list

```
list all ipsec tunnel in vd 0
-----
name=_OCVPN2-3.1 ver=2 serial=4 172.16.200.1:0->172.16.200.199:0 tun_id=172.16.200.199
dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
```



```

frag-rfc accept_traffic=1

proxyid_num=2 child_num=0 refcnt=13 ilast=7 olast=0 ad=/0
stat: rxp=0 txp=7 rxb=0 txb=588
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=6
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-3.1 proto=0 sa=1 ref=2 serial=8 auto-negotiate
  src: 0:10.1.100.0-10.1.100.255:0
  dst: 0:192.168.4.0-192.168.4.255:0
  SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42923/0B replaywin=2048
    seqno=8 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=c34bb752 esp=aes key=16 3c5ceeff3cac1eaa2702b5ccb713ab9b
    ah=sha1 key=20 5903e358b3d8938ee64f0412887a0fe741ccb105
  enc: spi=b5bd4fel esp=aes key=16 8ae97a8abe24dae725d614d2a6efdc0
    ah=sha1 key=20 9ec200d9c0cef9e1b7cf76e05dbf344c70f53214
  dec:pkts/bytes=0/0, enc:pkts/bytes=7/1064
proxyid=_OCVPN2-3.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-4.1 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=19 olast=19 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-4.1 proto=0 sa=1 ref=2 serial=7 auto-negotiate
  src: 0:10.1.100.0-10.1.100.255:0
  dst: 0:172.16.101.0-172.16.101.255:0
  SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42911/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=c34bb750 esp=aes key=16 8c9844a8bcd3fda6c7bd8a4f2ec81ef1
    ah=sha1 key=20 680c7144346f5b52126cbad9f325821b048c7192
  enc: spi=f2d1f2d4 esp=aes key=16 f9625fc8590152829eb39eecab3a3999
    ah=sha1 key=20 5df8447416da541fa54dde9fa3e5c35fbfc4723f
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-4.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-3.2 ver=2 serial=3 172.16.200.1:0->172.16.200.199:0 tun_id=172.16.200.199
dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=6 olast=6 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-3.2 proto=0 sa=1 ref=2 serial=8 auto-negotiate
  src: 0:10.2.100.0-10.2.100.255:0

```

```

dst: 0:192.168.5.0-192.168.5.255:0
SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42923/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42930/43200
dec: spi=c34bb753 esp=aes key=16 58ddfad9a3699f1c49f3a9f369145c28
    ah=sha1 key=20 e749c7e6a7aaff119707c792eb73cd975127873b
enc: spi=b5bd4fe2 esp=aes key=16 8f2366e653f5f9ad6587belce1905764
    ah=sha1 key=20 5347bf24e51219d483c0f7b058eceab202026204
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-3.2 proto=0 sa=0 ref=2 serial=1 auto-negotiate
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-4.2 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-4.2 proto=0 sa=1 ref=2 serial=7 auto-negotiate
src: 0:10.2.100.0-10.2.100.255:0
dst: 0:172.16.102.0-172.16.102.255:0
SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42905/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42927/43200
dec: spi=c34bb751 esp=aes key=16 41449ee5ea43d3e1f80df05fc632cd44
    ah=sha1 key=20 3ca2aealc8764f35ccf987cdeca7cf6eb54331fb
enc: spi=f2d1f2d5 esp=aes key=16 9010dd57e502c6296b27a4649a45a6ba
    ah=sha1 key=20 caf86a176ce04464221543f15fc3c63fc573b8ee
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-4.2 proto=0 sa=0 ref=2 serial=1 auto-negotiate
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0

```

- Branch\_1#get router info routing-table all

```

Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-3.2
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-4.1
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-4.2
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-3.1

```

## Troubleshooting hub-spoke with ADVPN shortcut

- Primary-Hub #diagnose vpn ocvpn status

```
Current State      : Registered
Topology          : Dual-Hub-Spoke
Role              : Primary-Hub
Server Status     : Up
Registration time  : Sat Mar  2 11:31:54 2019
Poll time         : Sat Mar  2 11:46:02 2019
```

- Spoke1 #diagnose vpn ocvpn status

```
Current State      : Registered
Topology          : Dual-Hub-Spoke
Role              : Spoke
Server Status     : Up
Registration time  : Sat Mar  2 11:41:22 2019
Poll time         : Sat Mar  2 11:46:44 2019
```

- Primary-Hub #diagnose vpn ocvpn show-members

```
Member: { "sn": "FG900D3915800083", "ip_v4": "172.16.200.4", "port": 500, "slot": 0,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Primary-
Hub", "topology_role": "primary_hub", "eap": "disable", "auto_discovery": "enable" }
Member: { "sn": "FG100D3G15828488", "ip_v4": "172.16.200.2", "port": 500, "slot": 1,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Secondary-
Hub", "topology_role": "secondary_hub", "eap": "disable", "auto_discovery": "enable" }
Member: { "sn": "FG100D3G15801621", "ip_v4": "172.16.200.1", "port": 500, "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"10.2.100.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke1",
"topology_role": "spoke" }
Member: { "sn": "FGT51E3U16001314", "ip_v4": "172.16.200.3", "port": 500, "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke2",
"topology_role": "spoke" }
```

- Primary-Hub #diagnose vpn ocvpn show-meta

```
Topology :: auto
License  :: full
Members  :: 4
Max-free :: 3
```

- Primary-Hub #diagnose vpn ocvpn show-overlays

```
QA
PM
```

- Spoke1 #diagnose vpn tunnel list

```
list all ipsec tunnel in vd 0
-----
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
```

```
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=34 rxb=152 txb=2856
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=46
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
src: 0:10.1.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42895/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec: spi=048477c7 esp=aes key=16 240e064c0f1c980ca31980b9e7605c9d
ah=sha1 key=20 6ff022cbebc4ff4c5de62eefb2e6180c40a3adb2
enc: spi=dfcffa86 esp=aes key=16 862208de164a02af377756c2bcabd588
ah=sha1 key=20 af6e54781fd42d7a2ba2119ec95d0f95629c8448
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=934 olast=934 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:10.1.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=12 olast=12 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=46
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42895/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec: spi=048477c8 esp=aes key=16 701ec608767f4988b76c2f662464e654
ah=sha1 key=20 93c65d106dc610d7ee3f04487f08601a9e00ffdd
enc: spi=dfcffa87 esp=aes key=16 02b2d04dce3d81ebab69e128d45cb7ca
ah=sha1 key=20 4a9283847f852c83a75691fad44d07d8409a2267
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
```

```
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0
```

```
proxyid_num=1 child_num=0 refcnt=10 ilast=934 olast=934 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
```

- **Spoke1 #get router info routing-table all**

```
Routing table for VRF=0
```

```
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
```

```
O - OSPF, IA - OSPF inter area
```

```
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
```

```
E1 - OSPF external type 1, E2 - OSPF external type 2
```

```
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
```

```
* - candidate default
```

```
S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1
```

- **Generate traffic from spoke1 to spoke2 to trigger the ADVPN shortcut and check the VPN tunnel and routing-table again on spoke1.**

```
branch1 # diagnose vpn tunnel list
```

```
list all ipsec tunnel in vd 0
```

```
-----
name=_OCVPN2-0.0_0 ver=2 serial=a 172.16.200.1:0->172.16.200.3:0 tun_id=172.16.200.3
dst_mtu=1500
```

```
bound_if=11 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/720 options
[02d0]=create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1
```

```
parent=_OCVPN2-0.0 index=0
proxyid_num=1 child_num=0 refcnt=14 ilast=0 olast=0 ad=r/2
stat: rxp=7 txp=7 rxb=1064 txb=588
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate add-route adr
src: 0:10.1.100.0-10.1.100.255:0
dst: 0:192.168.4.0-192.168.4.255:0
SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=43180/0B replaywin=2048
seqno=8 esn=0 replaywin_lastseq=00000008 itn=0 qat=0
life: type=01 bytes=0/0 timeout=43187/43200
dec: spi=048477c9 esp=aes key=16 27c35d53793013ef24cf887561e9f313
ah=sha1 key=20 2c8cfd328c3b29104db0ca74a00c6063f46cafe4
enc: spi=fb9e13fd esp=aes key=16 9d0d3bf6c84b7ddaf9d9196fe74002ed
```

```
ah=sha1 key=20 d1f541db787dea384c6a4df16fc228abeb7ae334
dec:pkts/bytes=7/588, enc:pkts/bytes=7/1064
-----
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=1 child_num=1 refcnt=12 ilast=7 olast=7 ad=r/2
stat: rxp=2 txp=35 rxb=304 txb=2940
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=65
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
src: 0:10.1.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42500/0B replaywin=2048
seqno=2 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec: spi=048477c7 esp=aes key=16 240e064c0f1c980ca31980b9e7605c9d
ah=sha1 key=20 6ff022cbebc4ff4c5de62eefb2e6180c40a3adb2
enc: spi=dfcffa86 esp=aes key=16 862208de164a02af377756c2bcabd588
ah=sha1 key=20 af6e54781fd42d7a2ba2119ec95d0f95629c8448
dec:pkts/bytes=1/84, enc:pkts/bytes=1/152
-----
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=1328 olast=1328 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:10.1.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=5 olast=5 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=66
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42500/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
life: type=01 bytes=0/0 timeout=42901/43200
dec: spi=048477c8 esp=aes key=16 701ec608767f4988b76c2f662464e654
ah=sha1 key=20 93c65d106dc610d7ee3f04487f08601a9e00ffdd
enc: spi=dfcffa87 esp=aes key=16 02b2d04dce3d81ebab69e128d45cb7ca
ah=sha1 key=20 4a9283847f852c83a75691fad44d07d8409a2267
```

```

dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=1328 olast=1328 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0

Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [15/0] via 172.16.200.3, _OCVPN2-0.0_0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1

```

- Simulate the primary hub being unavailable where all spokes' dialup VPN tunnels will switch to the secondary hub, to check VPN tunnel status and routing-table.

```

list all ipsec tunnel in vd 0
-----
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=25 olast=25 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=82
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:10.1.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

```

```
proxyid_num=1 child_num=0 refcnt=11 ilast=14 olast=14 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=9
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42723/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=048477cd esp=aes key=16 9bb363a32378b5897cd42890c92df811
    ah=sha1 key=20 2ed40583b9544e37867349b4adc7c013024d7e17
  enc: spi=f345fb42 esp=aes key=16 3ea31dff3310b245700a131db4565851
    ah=sha1 key=20 522862dfb232514b845e436133b148da0e67b7c4
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=19 olast=19 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=83
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=12 olast=12 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=9
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42728/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42902/43200
  dec: spi=048477cf esp=aes key=16 b6f0ca7564abcd8559b5b0ebb3fd04c1
    ah=sha1 key=20 4130d040554b39daca72adac7583b9cc83cce3c8
  enc: spi=f345fb43 esp=aes key=16 727582f20fcedff884ba693ed2164bcd
    ah=sha1 key=20 b0a625803fde701ed9d28d256079e908954b7fc8
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0

Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
```



E1 - OSPF external type 1, E2 - OSPF external type 2  
 i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area  
 \* - candidate default

```
S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [21/0] is directly connected, _OCVPN2-1.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [21/0] is directly connected, _OCVPN2-1.0
S       192.168.4.0/24 [21/0] is directly connected, _OCVPN2-1.0
S       192.168.5.0/24 [21/0] is directly connected, _OCVPN2-1.1
```

## Troubleshooting hub-spoke with inter-overlay source NAT

- Primary-Hub#diagnose vpn ocvpn status

```
Current State      : Registered
Topology          : Dual-Hub-Spoke
Role              : Primary-Hub
Server Status     : Up
Registration time  : Sat Mar  2 11:31:54 2019
Update time       : Sat Mar  2 13:57:05 2019
Poll time         : Sat Mar  2 14:03:31 2019
```

- Spoke1#diagnose vpn ocvpn status

```
Current State      : Registered
Topology          : Dual-Hub-Spoke
Role              : Spoke
Server Status     : Up
Registration time  : Sat Mar  2 13:58:01 2019
Poll time         : Sat Mar  2 14:04:22 2019
```

- Primary-Hub#diagnose vpn ocvpn show-members

```
Member: { "sn": "FG900D3915800083", "ip_v4": "172.16.200.4", "port": 500, "slot": 0,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\255.255.255.0" ], "ip_
range": "172.16.101.100-172.16.101.200" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\255.255.255.0" ], "ip_range": "172.16.102.100-172.16.102.200" } ],
"name": "Primary-Hub", "topology_role": "primary_hub", "eap": "disable", "auto_
discovery": "enable" }
Member: { "sn": "FG100D3G15828488", "ip_v4": "172.16.200.2", "port": 500, "slot": 1,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Secondary-
Hub", "topology_role": "secondary_hub", "eap": "disable", "auto_discovery": "enable" }
Member: { "sn": "FGT51E3U16001314", "ip_v4": "172.16.200.3", "port": 500, "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke2",
"topology_role": "spoke" }
Member: { "sn": "FG100D3G15801621", "ip_v4": "172.16.200.1", "port": 500, "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
```

```
"10.2.100.0\255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke1",
"topology_role": "spoke" }
```

- **Primary-Hub#**diagnose vpn ocvpn show-meta

```
Topology :: auto
License  :: full
Members  :: 4
Max-free :: 3
```

- **Primary-Hub#**diagnose vpn ocvpn show-overlays

```
QA
PM
```

- **Spoke1#**diagnose vpn tunnel list

```
list all ipsec tunnel in vd 0
-----
name=_OCVPN2-0.0 ver=2 serial=c 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=3 child_num=0 refcnt=13 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=29
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42299/0B replaywin=2048
      seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42899/43200
  dec: spi=0484795d esp=aes key=16 10eeb76fadd49f00c333350d83509095
      ah=sha1 key=20 971bde5dcfca7e52fd1573cb3489e9c855f6154e
  enc: spi=dfcffffaa esp=aes key=16 d07a4dd683ee093af2dca9485aa436eb
      ah=sha1 key=20 65369be35d5ecad8cae63557318419cd6005c230
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.0_nat proto=0 sa=1 ref=2 serial=3 auto-negotiate
  src: 0:172.16.101.101-172.16.101.101:0
  dst: 0:0.0.0.0-255.255.255.255:0
  SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42303/0B replaywin=2048
      seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=04847961 esp=aes key=16 eal81036b02e8bc8711fb520b3e98a60
      ah=sha1 key=20 b3c449d96d5d3f090975087a62447f6918ce7930
  enc: spi=dfcffffaac esp=aes key=16 f7ea5e42e9443698e6b8b32161ace40e
      ah=sha1 key=20 a7e36dd1ec0bdb6eff0aa66e442707427400c700
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.0_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-1.0 ver=2 serial=e 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1
```

```
proxyid_num=2 child_num=0 refcnt=10 ilast=599 olast=599 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
proxyid=_OCVPN2-1.0_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-0.1 ver=2 serial=b 172.16.200.1:0->172.16.200.4:0 tun_id=172.16.200.4 dst_
mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=3 child_num=0 refcnt=13 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=29
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42297/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42897/43200
  dec: spi=0484795e esp=aes key=16 106eaa95a2be64b566e7d1ca0aa88f6a
    ah=sha1 key=20 5ddd4b7070b03d5a31931d41db06ff96e7bc542
  enc: spi=dfc4ffaab esp=aes key=16 29c774dbd7e54464ee298c381e71a94e
    ah=sha1 key=20 c3da7372789c0a53b3752e69baabala42d798820
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.1_nat proto=0 sa=1 ref=2 serial=3 auto-negotiate
  src: 0:172.16.102.101-172.16.102.101:0
  dst: 0:0.0.0.0-255.255.255.255:0
  SA: ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42307/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42902/43200
  dec: spi=04847962 esp=aes key=16 b7daa5807cfa86906592a012a9d2478f
    ah=sha1 key=20 39c8bb4c9e3f1e9e451f22c58a172ff01155055d
  enc: spi=dfc4ffaad esp=aes key=16 2ecc644def4cebe6b0c4b7729da43d8e
    ah=sha1 key=20 469c6f319e83bd73468f55d430566afcd6215138
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.1_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----
name=_OCVPN2-1.1 ver=2 serial=d 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 dst_
mtu=0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc accept_traffic=1

proxyid_num=2 child_num=0 refcnt=10 ilast=599 olast=599 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
```

```

proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
src: 0:10.2.100.0/255.255.255.0:0
dst: 0:0.0.0.0/0.0.0.0:0
proxyid=_OCVPN2-1.1_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0

```

- **Spoke1 #get router info routing-table all**

```

Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default

```

```

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.101.101/32 is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.0
C       172.16.102.101/32 is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1

```

- **Spoke1 #show firewall policy**

```

.....

```

```

edit 9
set name "_OCVPN2-1.1_nat"
set uuid 3f7a84b8-3d36-51e9-ee97-8f418c91e666
set srcintf "any"
set dstintf "_OCVPN2-1.1"
set srcaddr "all"
set dstaddr "_OCVPN2-1.1_remote_networks"
set action accept
set schedule "always"
set service "ALL"
set comments "Generated by OCVPN Cloud Service."
set nat enable
next
edit 12
set name "_OCVPN2-1.0_nat"
set uuid 3fafec98-3d36-51e9-80c0-5d99325bad83
set srcintf "any"
set dstintf "_OCVPN2-1.0"
set srcaddr "all"
set dstaddr "_OCVPN2-1.0_remote_networks"
set action accept
set schedule "always"
set service "ALL"

```

```
    set comments "Generated by OCVPN Cloud Service."  
    set nat enable  
next  
.....
```

## ADVPN

Auto-Discovery VPN (ADVPN) allows the central hub to dynamically inform spokes about a better path for traffic between two spokes.

The following topics provide instructions on configuring ADVPN:


- [IPsec VPN wizard hub-and-spoke ADVPN support on page 1775](#)
- [ADVPN with BGP as the routing protocol on page 1779](#)
- [ADVPN with OSPF as the routing protocol on page 1788](#)
- [ADVPN with RIP as the routing protocol on page 1797](#)
- [UDP hole punching for spokes behind NAT on page 1806](#)

### IPsec VPN wizard hub-and-spoke ADVPN support

When using the IPsec VPN wizard to create a hub and spoke VPN, multiple local interfaces can be selected. At the end of the wizard, changes can be reviewed, real-time updates can be made to the local address group and tunnel interface, and easy configuration keys can be copied for configuring the spokes.

When editing a VPN tunnel, the Hub & Spoke Topology section provides access to the easy configuration keys for the spokes, and allows you to add more spokes.

This example shows the configuration of a hub with two spokes.

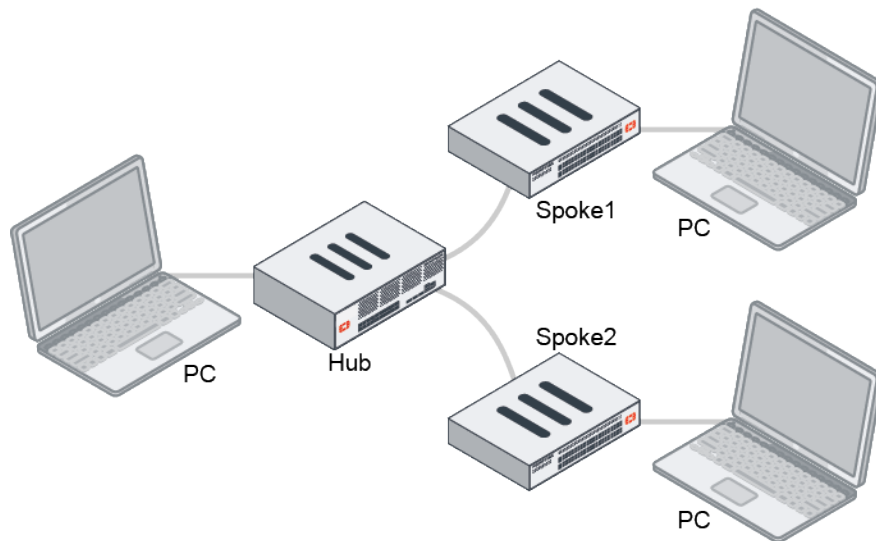

**To configure the hub:**

1. Go to *VPN > IPsec Wizard*.
2. Go through the steps of the wizard:
  - a. *VPN Setup*:

<b>Name</b>	hub
<b>Template Type</b>	Hub-and-Spoke
<b>Role</b>	Hub

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Tunnel Interface 4 Policy & Routing 5 Review Settings

Name: hub

Template type: Site to Site **Hub-and-Spoke** Remote Access Custom

The Hub-and-Spoke VPN will be set up using auto-discovery with BGP as the routing protocol.

Role: **Hub** Spoke

< Back Next > Cancel

- b. *Authentication*:

<b>Incoming Interface</b>	port1
<b>Authentication method</b>	Pre-shared Key
<b>Pre-shared key</b>	<key>

- c. *Tunnel Interface*:

<b>Tunnel IP</b>	10.10.1.1
<b>Remote IP/netmask</b>	10.10.1.2/24

- d. *Policy & Routing*:

Multiple local interfaces and subnets can be configured.

<b>Local AS</b>	65400
<b>Local interface</b>	port3 port4
<b>Local subnets</b>	174.16.101.0/24 173.1.1.0/24
<b>Spoke #1 tunnel IP</b>	10.10.1.3
<b>Spoke #2 tunnel IP</b>	10.10.1.4

VPN Creation Wizard

VPN Setup Authentication Tunnel Interface **Policy & Routing** Review Settings

Local AS: 65400

Local interface: port3, port4

Local subnets: 174.16.101.0/24, 173.1.1.0/24

Spoke #1 tunnel IP: 10.10.1.3

Spoke #2 tunnel IP: 10.10.1.4

Hub-and-Spoke - FortiGate (Hub)

< Back Next > Cancel

e. **Review Settings:**

Confirm that the settings look correct, then click *Create*.

3. The summary shows details about the set up hub:

- The *Local address group* and *Tunnel interface* can be edited directly on this page.
- Spoke easy configuration keys can be used to quickly configure the spokes.

VPN Creation Wizard

VPN Setup Authentication Tunnel Interface **Policy & Routing** Review Settings

The VPN has been set up

Object Summary

Phase 1 interface: hub

Local address group: hub\_local (Edit)

Phase 2 interface: hub

Tunnel interface: hub (Edit)

Remote to local policies: vpn\_hub\_spoke2hub\_0 (1), vpn\_hub\_spoke2hub\_1 (2)

Local to remote policies: vpn\_hub\_spoke2spoke\_0 (3)

BGP route: bgp

Spoke Easy Configuration

These configuration key(s) are meant for one-time use to automatically configure some of the VPN tunnel settings on your spoke FortiGates.

Spoke #1: eyJodWJhYXRid2F5SXAiOiIxOTli

Spoke #2: eyJodWJhYXRid2F5SXAiOiIxOTli

Add Another Show Tunnel List

4. Click *Show Tunnel List* to go to *VPN > IPsec Tunnels*.

5. Edit the VPN tunnel to add more spokes and to copy the spokes' easy configuration keys.

Edit VPN Tunnel

Phase 2 Selectors

Local Address	Remote Address
hub 0.0.0.0/0.0.0.0	0.0.0.0/0.0.0.0

Hub & Spoke Topology

Number	Tunnel IP	AS
1	10.10.1.3	65400
2	10.10.1.4	65400

Spoke Easy Configuration

These configuration key(s) are meant for one-time use to automatically configure some of the VPN tunnel settings on your spoke FortiGates.

Spoke #1: eyJodWJhYXRid2F5SXAiOiIxOTliMT

Spoke #2: eyJodWJhYXRid2F5SXAiOiIxOTliMT

FortiGate

FGVMDocs

IPsec VPNs

Guides

- IPsec VPN Cookbook Recipes
- VPN Setup on FortiClient
- Configuring an IPsec VPN Connection

Documentation

- Online Help
- Video Tutorials

OK Cancel

### To configure the spokes:

1. Go to *VPN > IPsec Wizard*.
2. On the *VPN Setup* page of the wizard, enter the following:

<b>Name</b>	spoke1
<b>Template Type</b>	Hub-and-Spoke
<b>Role</b>	Spoke

3. In the *Easy configuration key* field, paste the *Spoke #1* key from the hub FortiGate, click *Apply*, then click *Next*.

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Tunnel Interface 4 Policy & Routing 5 Review Settings

Name spoke1

Template type Site to Site Hub-and-Spoke Remote Access Custom

The Hub-and-Spoke VPN will be set up using auto-discovery with BGP as the routing protocol.

Role Hub Spoke

Easy configuration key XAI0IxxMC4xMC4xLjMlMlQ== Apply

Hub-and-Spoke - FortiGate (Spoke)

< Back Next > Cancel

4. Adjust the *Authentication* settings as required, enter the *Pre-shared key*, then click *Next*.
5. Adjust the *Tunnel Interface* settings as required, then click *Next*.
6. Configure the *Policy & Routing* settings, then click *Next*:

<b>Local interface</b>	wan2
<b>Local subnets</b>	10.1.100.0/24

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Tunnel Interface 4 Policy & Routing 5 Review Settings

Local AS 65400

Local interface wan2

Local subnets 10.1.100.0/24

Hub #1 tunnel IP 10.10.1.1 Change

Hub-and-Spoke - FortiGate (Spoke)

< Back Next > Cancel

7. Review the settings, then click *Create*.
8. The summary shows details about the set up spoke. The *Local address group* and *Tunnel interface* can be edited directly on this page.
9. Follow the same steps to configure the second spoke.

### To check that the tunnels are created and working:

1. On the hub FortiGate, go to *Dashboard > Network* and expand the IPsec widget. The tunnels to the spokes are established.



IPsec						
<a href="#">Reset Statistics</a> <a href="#">Bring Up</a> <a href="#">Bring Down</a> <a href="#">Locate on VPN Map</a>						
Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
<b>Hub-and-Spoke - FortiGate (Hub)</b>						
hub_0	172.16.200.1		10.97 kB	5.34 kB	hub_0	hub
hub_1	172.16.200.3		3.51 kB	1.81 kB	hub_1	hub


- On a spoke, go to *Dashboard > Network* and expand the IPsec widget. The tunnel to the hub and the spoke to spoke shortcut are established.

IPsec						
<a href="#">Reset Statistics</a> <a href="#">Bring Up</a> <a href="#">Bring Down</a> <a href="#">Locate on VPN Map</a>						
Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
<b>Hub-and-Spoke - FortiGate (Spoke)</b>						
spoke1	172.16.200.4		120 B	5.19 kB	spoke1	spoke1
spoke1_0	172.16.200.3		1.85 MB	1.07 MB	spoke1_0	spoke1

## ADVPN with BGP as the routing protocol

This is a sample configuration of ADVPN with BGP as the routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device disable` must be run.
- IBGP must be used between the hub and spoke FortiGates.
- `bgp neighbor-group/neighbor-range` must be reused.

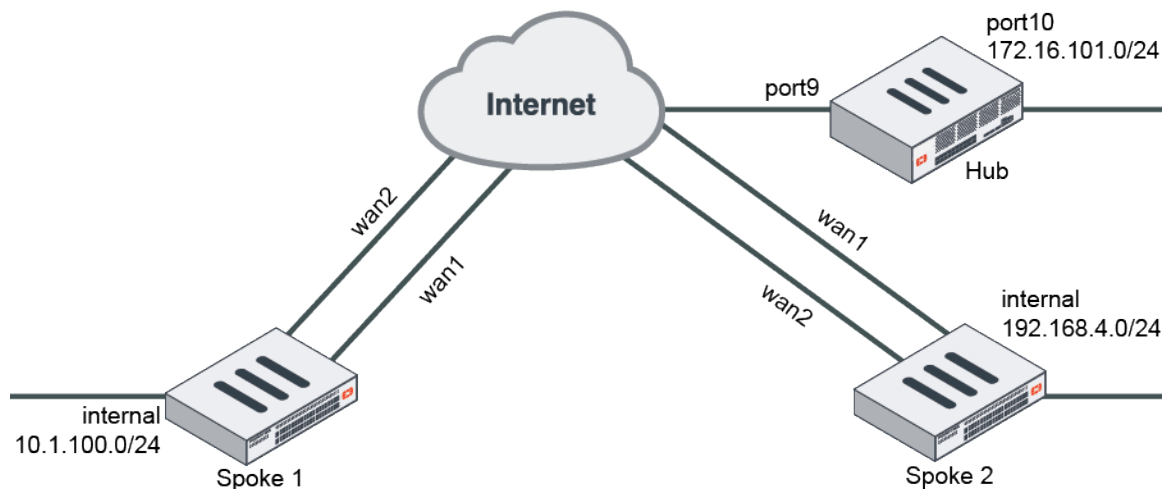

### To configure ADVPN with BGP as the routing protocol using the CLI:

- Configure hub FortiGate WAN interface, internal interface, and a static route:

```

config system interface
  edit "port9"
    set alias "WAN"
    set ip 22.1.1.1 255.255.255.0
  next
  edit "port10"
    set alias "Internal"
    set ip 172.16.101.1 255.255.255.0
end
  
```

```

    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end

```

## 2. Configure the hub FortiGate:

### a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface:

```

config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
3des-sha256
    next
end

```



When `net-device` is disabled, a tunnel ID is generated for each dynamic tunnel. This ID, in the form of an IP address, is used as the gateway in the route entry to that tunnel. The `tunnel-search` option is removed in FortiOS 7.0.0 and later.

---

### b. Configure the hub FortiGate firewall policy:

```

config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"

```

```

        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**c. Configure the hub FortiGate's IPsec tunnel interface IP address:**

```

config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
    next
end

```

**d. Configure the hub FortiGate's BGP:**

```

config router bgp
    set as 65412
    config neighbor-group
        edit "advpn"
            set link-down-failover enable
            set remote-as 65412
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.10.0 255.255.255.0
            set neighbor-group "advpn"
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
    end
end

```

**3. Configure the spoke FortiGates:**

**a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes:**

**i. Configure Spoke1:**

```

config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 12.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0

```

```

        next
    end
    config router static
        edit 1
            set gateway 12.1.1.1
            set device "wan2"
            set distance 15
        next
        edit 2
            set gateway 15.1.1.1
            set device "wan1"
        next
    end
end

```

## ii. Configure the Spoke2:

```

config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 17.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 17.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 13.1.1.1
        set device "wan1"
    next
end

```

## b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface:

### i. Configure Spoke1:

```

config vpn ipsec phase1-interface
    edit "spoke1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
end

```

```
edit "spoke1_backup"
    set interface "wan2"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set add-route disable
    set dpd on-idle
    set auto-discovery-receiver enable
    set remote-gw 22.1.1.1
    set monitor "spoke1"
    set psksecret sample
    set dpd-retryinterval 5
next
end
config vpn ipsec phase2-interface
    edit "spoke1"
        set phase1name "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1_backup"
        set phase1name "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

## ii. Configure Spoke2:

```
config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
```

```

end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

**c. Configure the spoke FortiGates' firewall policies:**

**i. Configure Spoke1:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke1" "spoke1_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke1" "spoke1_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**ii. Configure Spoke2:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"

```

```
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

**d. Configure the spoke FortiGates' tunnel interface IP addresses:**

**i. Configure Spoke1:**

```
config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

**ii. Configure Spoke2:**

```
config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

**e. Configure the spoke FortiGates' BGP:**

**i. Configure Spoke1:**

```
config router bgp
    set as 65412
    config neighbor
        edit "10.10.10.254"
            set advertisement-interval 1
            set link-down-failover enable
            set remote-as 65412
        next
    end
    config network
        edit 1
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
```

**ii. Configure Spoke2:**

```

config router bgp
  set as 65412
  config neighbor
    edit "10.10.10.254"
      set advertisement-interval 1
      set link-down-failover enable
      set remote-as 65412
    next
  end
config network
  edit 1
    set prefix 192.168.4.0 255.255.255.0
  next
end
end

```

**4. Run diagnose and get commands on Spoke1 to check VPN and BGP states:**

**a. Run the diagnose vpn tunnel list command on Spoke1. The system should return the following:**

```

list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=1 olast=1 ad=r/2
stat: rxp=1 txp=160 rxb=16428 txb=8969
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=628
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=6 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=1225/0B replaywin=1024
    seqno=al esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2369/2400
  dec: spi=c53a8f5b esp=aes key=16 cbe88682ad896a69290027b6dd8f7162
    ah=sha1 key=20 7bb704b388f83783ac76c2ab0b6c9f7dcf78e93b
  enc: spi=6e3633fc esp=aes key=16 1a0da3f4deed3d16becc9dda57537355
    ah=sha1 key=20 368544044bd9b82592d72476ff93d5055056da8d
  dec:pkts/bytes=1/16364, enc:pkts/bytes=160/19168
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0

```

**b. Run the get router info bgp summary command on Spoke1. The system should return the following:**



```

BGP router identifier 7.7.7.7, local AS number 65412
BGP table version is 2
1 BGP AS-PATH entries
0 BGP community entries

```

```

Neighbor          V      AS [[QualityAssurance62/MsgRcvd]]
[[QualityAssurance62/MsgSent]] [[QualityAssurance62/TblVer]] InQ OutQ Up/Down
State/PfxRcd
10.10.10.254      1.      65412      143      142      1.      1.      1.
00:24:45          2

```

```
Total number of neighbors 1
```

- c. Run the `get router info routing-table bgp` command on Spoke1. The system should return the following:

```

Routing table for VRF=0
B      172.16.101.0/24 [200/0] via 10.10.10.254, spoke1, 00:23:57
B      192.168.4.0/24 [200/0] via 10.10.10.254, spoke1, 00:22:03

```

- d. Generate traffic between the spokes and check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```

list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=268 rxb=16428 txb=31243
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=714
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=6 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=345/0B replaywin=1024
seqno=10d esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=2369/2400
dec: spi=c53a8f5b esp=aes key=16 cbe88682ad896a69290027b6dd8f7162
ah=sha1 key=20 7bb704b388f83783ac76c2ab0b6c9f7dcf78e93b
enc: spi=6e3633fc esp=aes key=16 1a0da3f4deed3d16becc9dda57537355
ah=sha1 key=20 368544044bd9b82592d72476ff93d5055056da8d
dec:pkts/bytes=1/16364, enc:pkts/bytes=268/48320
npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=8 olast=8 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0

```

```

-----
name=spoke1_0 ver=1 serial=9 15.1.1.2:4500->13.1.1.2:4500 tun_id=13.1.1.2
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1

parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=17 ilast=4 olast=4 ad=r/2
stat: rxp=1 txp=100 rxb=112 txb=4686
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=231
natt: mode=keepalive draft=32 interval=10 remote_port=4500
proxyid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=447/0B replaywin=1024
seqno=65 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=2368/2400
dec: spi=c53a8f5c esp=aes key=16 73fd9869547475db78851e6c057ad9b7
ah=sha1 key=20 6ad3a5b1028f6b33c82ba494a370f13c7f462635
enc: spi=79cb0f2b esp=aes key=16 52ab0acdc830d58c00e5956a6484654a
ah=sha1 key=20 baa82aba4106dc60618f6fe95570728656799239
dec:pkts/bytes=1/46, enc:pkts/bytes=100/11568
npu_flag=03 npu_rgwy=13.1.1.2 npu_lgwy=15.1.1.2 npu_selid=5 dec_npuid=1 enc_npuid=1

```

- e. Run the `get router info routing-table bgp` command. The system should return the following:

```


Routing table for VRF=0
B      172.16.101.0/24 [200/0] via 10.10.10.254, spoke1, 00:23:57
B      192.168.4.0/24 [200/0] via 10.10.10.3, spoke1_0 , 00:22:03

```

## ADVPN with OSPF as the routing protocol

This is a sample configuration of ADVPN with OSPF as the routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device enable` must be run.
- OSPF must be used between the hub and spoke FortiGates.

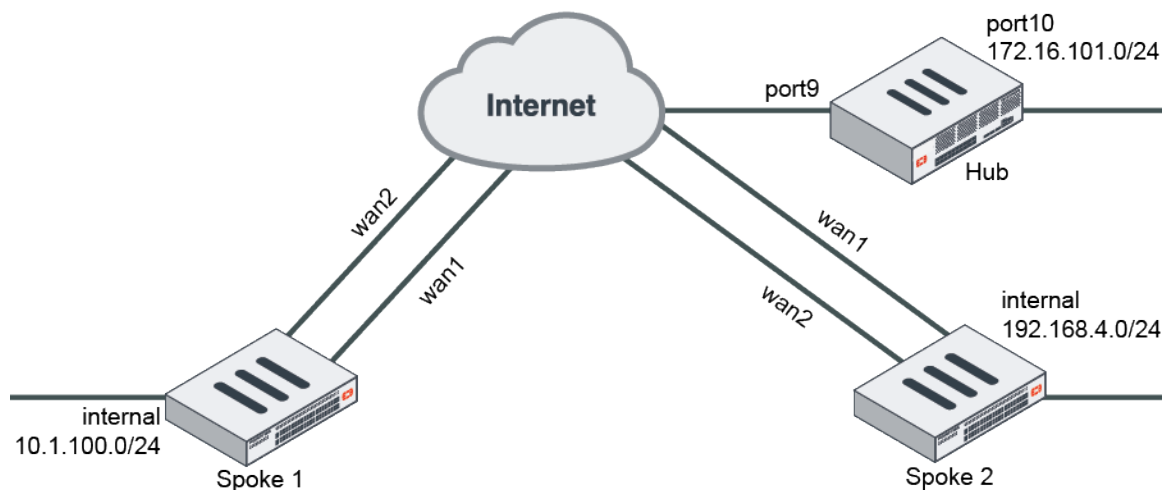

## To configure ADVPN with OSPF as the routing protocol using the CLI:

### 1. Configure hub FortiGate's WAN, internal interface, and static route:

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

### 2. Configure the hub FortiGate:

#### a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface:

```
config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
        3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
        3des-sha256
    next
end
```



When `net-device` is disabled, a tunnel ID is generated for each dynamic tunnel. This ID, in the form of an IP address, is used as the gateway in the route entry to that tunnel. The `tunnel-search` option is removed in FortiOS 7.0.0 and later.

#### b. Configure the hub FortiGate firewall policy:

```
config firewall policy
    edit 1
        set name "spoke2hub"
```

```
        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"
        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

**c. Configure the hub FortiGate's IPsec tunnel interface IP address:**

```
config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
    next
end
```

**d. Configure the hub FortiGate's OSPF:**

```
config router ospf
    set router-id 1.1.1.1
    config area
        edit 0.0.0.0
    next
end
config network
    edit 1
        set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
        set prefix 172.16.101.0 255.255.255.0
    next
end
end
```

**3. Configure the spoke FortiGates:**

**a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes:**

**i. Configure Spoke1:**

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "wan2"
```

```

        set alias "secondary_WAN"
        set ip 12.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 12.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 15.1.1.1
        set device "wan1"
    next
end

```

## ii. Configure the Spoke2:

```

config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 17.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 17.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 13.1.1.1
        set device "wan1"
    next
end

```

## b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface:

### i. Configure Spoke1:

```

config vpn ipsec phase1-interface
    edit "spoke1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
    next
end

```

```

        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke1"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1"
        set phasename "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1_backup"
        set phasename "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

## ii. Configure Spoke2:

```

config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
    next
end

```

```

        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

**c. Configure the spoke FortiGates' firewall policies:**

**i. Configure Spoke1:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke1" "spoke1_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke1" "spoke1_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**ii. Configure Spoke2:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
    next
end

```

```

        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**d. Configure the spoke FortiGates' tunnel interface IP addresses:**

**i. Configure Spoke1:**

```

config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end

```

**ii. Configure Spoke2:**

```

config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end

```

**e. Configure the spoke FortiGates' OSPF:**

**i. Configure Spoke1:**

```

config router ospf
    set router-id 7.7.7.7
    config area
        edit 0.0.0.0
    next
end
config network
    edit 1
        set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
        set prefix 10.1.100.0 255.255.255.0
    next

```



```

    end
end

```

## ii. Configure Spoke2:

```

config router ospf
    set router-id 8.8.8.8
    config area
        edit 0.0.0.0
        next
    end
config network
    edit 1
        set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
        set prefix 192.168.4.0 255.255.255.0
    next
end
end

```

## 4. Run diagnose and get commands on Spoke1 to check VPN and OSPF states:

### a. Run the diagnose vpn tunnel list command on Spoke1. The system should return the following:

```

list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxid_num=1 child_num=1 refcnt=19 ilast=5 olast=2 ad=r/2
stat: rxp=1 txp=263 rxb=16452 txb=32854
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2283
natt: mode=none draft=0 interval=0 remote_port=0
proxid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=1057/0B replaywin=1024
seqno=108 esn=0 replaywin_lastseq=00000003 itn=0
life: type=01 bytes=0/0 timeout=2371/2400
dec: spi=c53a8f78 esp=aes key=16 7cc50c5c9df1751f6497a4ad764c5e9a
ah=sha1 key=20 269292ddbf7309a6fc05871e63ed8a5297b5c9a1
enc: spi=6e363612 esp=aes key=16 42bd49bcd1e85cf74a24d97f10eb601
ah=sha1 key=20 13964f166aad48790c2e551d6df165d7489f524b
dec:pkts/bytes=1/16394, enc:pkts/bytes=263/50096
npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxid_num=1 child_num=0 refcnt=11 ilast=8 olast=8 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr

```

```
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
```

- b. Run the `get router info ospf neighbor` command on Spoke1. The system should return the following:**

```
OSPF process 0, VRF 0: Neighbor ID Pri State Dead Time Address Interface 8.8.8.8 1.
Full/ - 00:00:35 10.10.10.254 spoke1 1.1.1.1 1. Full/ - 00:00:35 10.10.10.254 spoke1
```

- c. Run the `get router info routing-table ospf` command on Spoke1. The system should return the following:**

```
Routing table for VRF=0
O      172.16.101.0/24 [110/110] via 10.10.10.254, spoke1, 00:23:23
O      192.168.4.0/24   [110/110] via 10.10.10.254, spoke1, 00:22:35
```

- d. Generate traffic between the spokes, then check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:**

```
list all ipsec tunnel in vd 0
----
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=313 rxb=16452 txb=35912
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2303
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=3 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=782/0B replaywin=1024
seqno=13a esn=0 replaywin_lastseq=00000003 itn=0
life: type=01 bytes=0/0 timeout=2371/2400
dec: spi=c53a8f78 esp=aes key=16 7cc50c5c9df1751f6497a4ad764c5e9a
ah=sha1 key=20 269292ddb7f309a6fc05871e63ed8a5297b5c9a1
enc: spi=6e363612 esp=aes key=16 42bd49bcd1e85cf74a24d97f10eb601
ah=sha1 key=20 13964f166aad48790c2e551d6df165d7489f524b
dec:pkts/bytes=1/16394, enc:pkts/bytes=313/56432
npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=13 olast=13 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
----
name=spoke1_0 ver=1 serial=e 15.1.1.2:4500->13.1.1.2:4500 tun_id=13.1.1.2
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1
```

```

parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=19 ilast=4 olast=2 ad=r/2
stat: rxp=641 txp=1254 rxb=278648 txb=161536
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=184
natt: mode=keepalive draft=32 interval=10 remote_port=4500
proxyid=spoke1_backup proto=0 sa=1 ref=10 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=922/0B replaywin=1024
seqno=452 esn=0 replaywin_lastseq=00000280 itn=0
life: type=01 bytes=0/0 timeout=2370/2400
dec: spi=c53a8f79 esp=aes key=16 324f8cf840ba6722cc7abbba46b34e0e
ah=sha1 key=20 a40e9aac596b95c4cd83a7f6372916a5ef5aa505
enc: spi=ef3327b5 esp=aes key=16 5909d6066b303de4520d2b5ae2db1b61
ah=sha1 key=20 1a42f5625b5a335d8d5282fe83b5d6c6ff26b2a4
dec:pkts/bytes=641/278568, enc:pkts/bytes=1254/178586
npu_flag=03 npu_rgw=13.1.1.2 npu_lgw=15.1.1.2 npu_selid=a dec_npuid=1 enc_npuid=1

```

- e. Run the `get router info routing-table ospf` command. The system should return the following:

```


Routing table for VRF=0
O      172.16.101.0/24 [110/110] via 10.10.10.254, spoke1, 00:27:14
O      192.168.4.0/24 [110/110] via 10.10.10.3, spoke1_0, 00:26:26

```

## ADVPN with RIP as the routing protocol

This is a sample configuration of ADVPN with RIP as routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device disable` must be run.
- RIP must be used between the hub and spoke FortiGates.
- `split-horizon-status enable` must be run on the hub FortiGate.

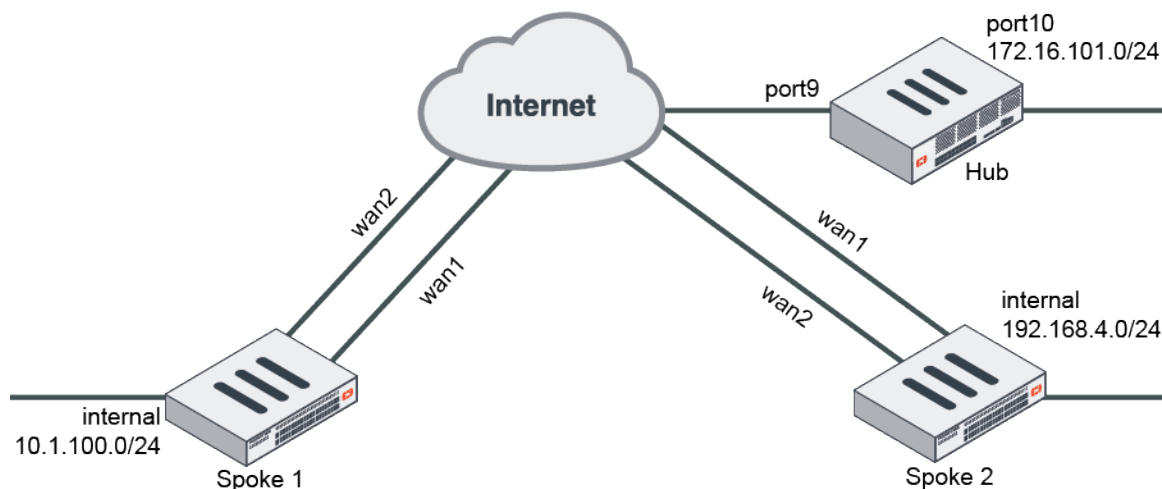

## To configure ADVPN with RIP as the routing protocol using the CLI:

1. In the CLI, configure hub FortiGate's WAN, internal interface, and static route:

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure the hub FortiGate:

- a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface:

```
config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
        3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
        3des-sha256
    next
end
```



When `net-device` is disabled, a tunnel ID is generated for each dynamic tunnel. This ID, in the form of an IP address, is used as the gateway in the route entry to that tunnel. The `tunnel-search` option is removed in FortiOS 7.0.0 and later.

---

- b. Configure the hub FortiGate firewall policy:

```
config firewall policy
    edit 1
        set name "spoke2hub"
```

```

        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"
        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**c. Configure the hub FortiGate's IPsec tunnel interface IP address:**

```

config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
    next
end

```

**d. Configure the hub FortiGate's RIP:**

```

config router rip
    set default-information-originate enable
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 172.16.101.0 255.255.255.0
        next
    end
    config interface
        edit "advpn-hub"
            set split-horizon-status disable
        next
    end
end

```

**3. Configure the spoke FortiGates:**

**a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes:**

**i. Configure Spoke1:**

```

config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next

```

```

edit "wan2"
    set alias "secondary_WAN"
    set ip 12.1.1.2 255.255.255.0
next
edit "internal"
    set ip 10.1.100.1 255.255.255.0
next
end
config router static
edit 1
    set gateway 12.1.1.1
    set device "wan2"
    set distance 15
next
edit 2
    set gateway 15.1.1.1
    set device "wan1"
next
end

```

## ii. Configure the Spoke2:

```

config system interface
edit "wan1"
    set alias "primary_WAN"
    set ip 13.1.1.2 255.255.255.0
next
edit "wan2"
    set alias "secondary_WAN"
    set ip 17.1.1.2 255.255.255.0
next
edit "internal"
    set ip 192.168.4.1 255.255.255.0
next
end
config router static
edit 1
    set gateway 17.1.1.1
    set device "wan2"
    set distance 15
next
edit 2
    set gateway 13.1.1.1
    set device "wan1"
next
end

```

## b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface:

### i. Configure Spoke1:

```

config vpn ipsec phase1-interface
edit "spoke1"
    set interface "wan1"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set add-route disable

```

```

        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke1"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1"
        set phaselname "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1_backup"
        set phaselname "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

## ii. Configure Spoke2:

```

config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
    next
end

```

```

        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end

```

**c. Configure the spoke FortiGates' firewall policies:**

**i. Configure Spoke1:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke1" "spoke1_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke1" "spoke1_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**ii. Configure Spoke2:**

```

config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
    next
end

```



```

        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

**d. Configure the spoke FortiGates' tunnel interface IP addresses:**

**i. Configure Spoke1:**

```

config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end

```

**ii. Configure Spoke2:**

```

config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end

```

**e. Configure the spoke FortiGates' RIP:**

**i. Configure Spoke1:**

```

config router rip
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end

```

**ii. Configure Spoke2:**

```

config router rip
  config network
    edit 1
      set prefix 10.10.10.0 255.255.255.0
    next
    edit 2
      set prefix 192.168.4.0 255.255.255.0
    next
  end
end

```

#### 4. Run diagnose and get commands on Spoke1:

- a. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```

list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxyid_num=1 child_num=1 refcnt=17 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=87 rxb=200 txb=6208
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=1040
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=7 options=1a227 type=00 soft=0 mtu=1438 expire=1793/0B replaywin=1024
     seqno=57 esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2370/2400
  dec: spi=c53a8f60 esp=aes key=16 6b54e32d54d039196a74d96e96d1cf14
     ah=sha1 key=20 e4903474614eafc96eda6400a3a5e88bbcb26a7f
  enc: spi=6e36349d esp=aes key=16 914a40a7993eda75c4dea2f42905f27d
     ah=sha1 key=20 8040eb08342edea2dae5eee058fd054a46688267
  dec:pkts/bytes=1/132, enc:pkts/bytes=86/11696
  npu_flag=03 npu_rgw=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0

```

- b. Run the `get router info rip database` command on Spoke1. The system should return the following:

Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,  
C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP

Network	Next Hop	Metric From	If	Time
Rc 10.1.100.0/24		1.		internal
Rc 10.10.10.2/32		1.		spoke1

```

R 172.16.101.0/24      10.10.10.254      1. 10.10.10.254      spoke1 02:28
R 192.168.4.0/24      10.10.10.254      1. 10.10.10.254      spoke1 02:44

```

- c. Run the `get router info routing-table rip` command on Spoke1. The system should return the following:

```

Routing table for VRF=0
R      172.16.101.0/24 [120/2] via 10.10.10.254, spoke1, 00:08:38
R      192.168.4.0/24 [120/3] via 10.10.10.254, spoke1, 00:08:38

```

- d. Generate traffic between the spokes, then check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```

list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=1

proxyid_num=1 child_num=0 refcnt=19 ilast=3 olast=3 ad=r/2
stat: rxp=1 txp=78 rxb=200 txb=5546
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=1039
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA: ref=7 options=1a227 type=00 soft=0 mtu=1438 expire=1807/0B replaywin=1024
      seqno=4e esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2370/2400
  dec: spi=c53a8f60 esp=aes key=16 6b54e32d54d039196a74d96e96d1cf14
      ah=sha1 key=20 e4903474614eafc96eda6400a3a5e88bbcb26a7f
  enc: spi=6e36349d esp=aes key=16 914a40a7993eda75c4dea2f42905f27d
      ah=sha1 key=20 8040eb08342ede2dae5eee058fd054a46688267
  dec:pkts/bytes=1/132, enc:pkts/bytes=77/10456
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0 tun_id=22.1.1.1
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=20 olast=20 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
----
name=spoke1_0 ver=1 serial=a 15.1.1.2:4500->13.1.1.2:4500 tun_id=13.1.1.2
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc accept_traffic=1

parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=20 ilast=2 olast=0 ad=r/2
stat: rxp=1 txp=7 rxb=112 txb=480
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=4500

```

```

proxyid=spoke1 proto=0 sa=1 ref=8 serial=1 auto-negotiate adr
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=2358/0B replaywin=1024
seqno=8 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=2367/2400
dec: spi=c53a8f61 esp=aes key=16 c66aa7ae9657068108ed47c048ff56b6
ah=sha1 key=20 60661c68e20bbc913c2564ade85e01ea3769e703
enc: spi=79cb0f30 esp=aes key=16 bf6c898c2e1c64baaa679ed5d79c3b58
ah=sha1 key=20 146ca78be6c34eedb9cd66cc328216e08682ecb1
dec:pkts/bytes=1/46, enc:pkts/bytes=7/992
npu_flag=03 npu_rgw=13.1.1.2 npu_lgw=15.1.1.2 npu_selid=6 dec_npuid=1 enc_npuid=1

```

- e. Run the `get router info routing-table rip` command. The system should return the following:

```


Routing table for VRF=0
R      172.16.101.0/24 [120/2] via 10.10.10.254, spoke1, 00:09:04
R      192.168.4.0/24 [120/2] via 10.10.10.3, spoke1_0, 00:00:02

```

## UDP hole punching for spokes behind NAT

UDP hole punching allows ADVPN shortcuts to be established through a UDP hole on a NAT device. The NAT device must support RFC 4787 Endpoint-Independent Mapping.

In the following example, device 10.1.100.11 behind Spoke1 needs to reach device 192.168.4.33 behind Spoke2. Spoke1 and Spoke2 are behind NAT devices and have established IPsec tunnels to the Hub. The hole punching creates a shortcut between Spoke1 and Spoke2 that bypasses the Hub.

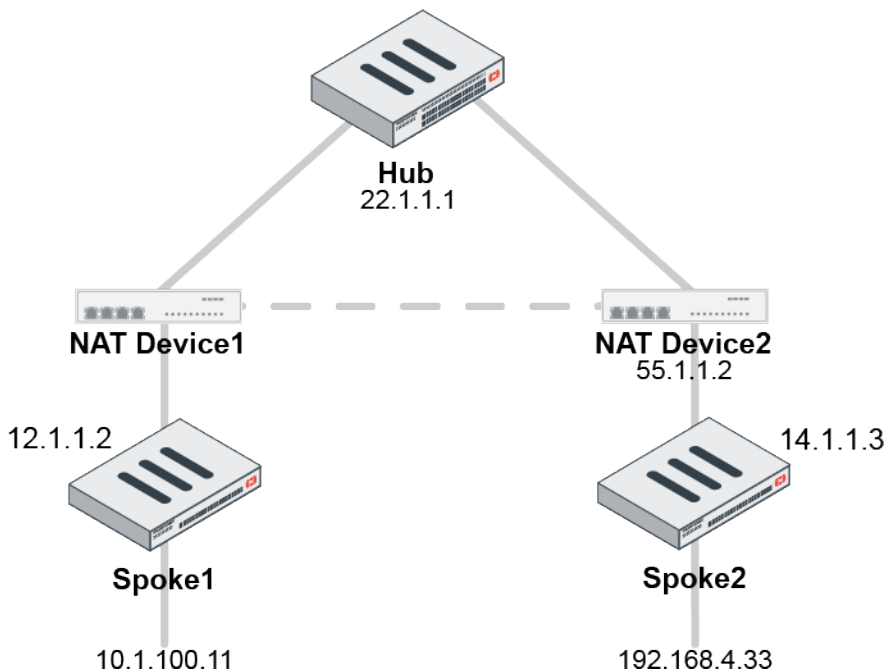

To verify the ADVPN shortcut is established between both spokes behind NAT:

```

# diagnose debug enable
# diagnose debug application ike -1
ike 0: comes 22.1.1.1:4500->12.1.1.2:4500,ifindex=6....

```

```

ike 0: IKEv1 exchange=Informational id=3c10fb6a76f1e264/6c7b397100dffc63:58ac7c02 len=204
ike 0:toHub1:35: notify msg received: SHORTCUT-OFFER
ike 0:toHub1: shortcut-offer 10.1.100.11->192.168.4.33 psk 64 ppk 0 ver 1 mode 0
ike 0 looking up shortcut by addr 192.168.4.33, name toHub1
ike 0:toHub1: send shortcut-query 1438189781753480593 d3fdd1bfb94caee/0000000000000000
12.1.1.2 10.1.100.11->192.168.4.33 psk 64 ttl 32 nat 1 ver 1 mode 0
ike 0:toHub1:35: sent IKE msg (SHORTCUT-QUERY): 12.1.1.2:4500->22.1.1.1:4500, len=236,
id=3c10fb6a76f1e264/6c7b397100dffc63:12e263f7
ike 0: comes 22.1.1.1:4500->12.1.1.2:4500,ifindex=6....
ike 0: IKEv1 exchange=Informational id=3c10fb6a76f1e264/6c7b397100dffc63:4976elac len=236
ike 0:toHub1:35: notify msg received: SHORTCUT-REPLY
ike 0:toHub1: recv shortcut-reply 1438189781753480593 d3fdd1bfb94caee/16aleb5b0f37ee23
14.1.1.3 to 10.1.100.11 psk 64 ppk 0 ver 1 mode 0 nat 55.1.1.2:64916
ike 0:toHub1: iif 22 192.168.4.33->10.1.100.11 route lookup oif 21
ike 0:toHub1: shortcut-reply received from 55.1.1.2:64916, local-nat=yes, peer-nat=yes
ike 0:toHub1: NAT hole punching to peer at 55.1.1.2:64916
ike 0:toHub1: created connection: 0x5e71f58 6 12.1.1.2->55.1.1.2:64916.
<==55.1.1.2:64916 this is UDP hole of NAT device
ike 0:toHub1: adding new dynamic tunnel for 55.1.1.2:64916
ike 0:toHub1_0: added new dynamic tunnel for 55.1.1.2:64916
ike 0:toHub1_0:48: initiator: main mode is sending 1st message...
ike 0:toHub1_0:48: cookie d3fdd1bfb94caee/16aleb5b0f37ee23
ike 0:toHub1_0:48: sent IKE msg (ident_i1send): 12.1.1.2:4500->55.1.1.2:64916, len=632,
id=d3fdd1bfb94caee/16aleb5b0f37ee23
ike 0: comes 55.1.1.2:64916->12.1.1.2:4500,ifindex=6....
ike 0: IKEv1 exchange=Identity Protection id=d3fdd1bfb94caee/16aleb5b0f37ee23 len=252
ike 0:toHub1_0:48: initiator: main mode get 1st response...
...
ike 0:toHub1_0:48: negotiation result
ike 0:toHub1_0:48: proposal id = 1:
ike 0:toHub1_0:48:   protocol id = ISAKMP:
ike 0:toHub1_0:48:   trans_id = KEY_IKE.
ike 0:toHub1_0:48:   encapsulation = IKE/none
ike 0:toHub1_0:48:   type=OAKLEY_ENCRYPT_ALG, val=AES_CBC, key-len=128
ike 0:toHub1_0:48:   type=OAKLEY_HASH_ALG, val=SHA2_256.
ike 0:toHub1_0:48:   type=AUTH_METHOD, val=PRESHARED_KEY.
ike 0:toHub1_0:48:   type=OAKLEY_GROUP, val=MODP2048.
ike 0:toHub1_0:48: ISAKMP SA lifetime=86400
ike 0:toHub1_0:48: sent IKE msg (ident_i2send): 12.1.1.2:4500->55.1.1.2:64916, len=380,
id=d3fdd1bfb94caee/16aleb5b0f37ee23
ike 0: comes 55.1.1.2:64916->12.1.1.2:4500,ifindex=6....
ike 0: IKEv1 exchange=Identity Protection id=d3fdd1bfb94caee/16aleb5b0f37ee23 len=380
ike 0:toHub1_0:48: initiator: main mode get 2nd response...
...
ike 0:toHub1_0:48: add INITIAL-CONTACT
ike 0:toHub1_0:48: add INTERFACE-ADDR4 10.10.1.100
ike 0:toHub1_0:48: sent IKE msg (ident_i3send): 12.1.1.2:4500->55.1.1.2:64916, len=140,
id=d3fdd1bfb94caee/16aleb5b0f37ee23
ike 0: comes 55.1.1.2:64916->12.1.1.2:4500,ifindex=6....
ike 0: IKEv1 exchange=Identity Protection id=d3fdd1bfb94caee/16aleb5b0f37ee23 len=124
ike 0:toHub1_0:48: initiator: main mode get 3rd response...
ike 0:toHub1_0:48: received pl notify type INTERFACE-ADDR4
ike 0:toHub1_0:48: INTERFACE-ADDR4 10.10.1.102
ike 0:toHub1_0:48: peer identifier IPV4_ADDR 14.1.1.3

```

```

ike 0:toHub1_0:48: PSK authentication succeeded
ike 0:toHub1_0:48: authentication OK
ike 0:toHub1_0:48: established IKE SA d3fdd1bfbc94caee/16aleb5b0f37ee23
ike 0:toHub1_0:48: auto-discovery receiver
ike 0:toHub1_0:48: auto-discovery 2
ike 0:toHub1_0: add R/32 route 10.10.1.102 via 10.10.1.102, intf=toHub1(22)
ike 0:toHub1_0: add peer route 10.10.1.102
ike 0:toHub1: schedule auto-negotiate
ike 0:toHub1_0:48: no pending Quick-Mode negotiations
ike 0:toHub1_0:toHub1: IPsec SA connect 6 12.1.1.2->55.1.1.2:64916
ike 0:toHub1_0:toHub1: using existing connection
ike 0:toHub1_0:toHub1: traffic triggered, serial=1 1:10.1.100.11:2048->1:192.168.4.33:0
ike 0:toHub1:toHub1: config found
ike 0:toHub1_0:toHub1: IPsec SA connect 6 12.1.1.2->55.1.1.2:64916 negotiating
ike 0:toHub1_0:48: cookie d3fdd1bfbc94caee/16aleb5b0f37ee23:8465e467
ike 0:toHub1_0:48:toHub1:109: natt flags 0x1f, encmode 1->3
ike 0:toHub1_0:48:toHub1:109: initiator selectors 0 0:0.0.0.0/0.0.0.0:0-
>0:0.0.0.0/0.0.0.0:0:0
ike 0:toHub1_0:48: sent IKE msg (quick_i1send): 12.1.1.2:4500->55.1.1.2:64916, len=620,
id=d3fdd1bfbc94caee/16aleb5b0f37ee23:8465e467
ike 0: comes 55.1.1.2:64916->12.1.1.2:4500,ifindex=6....
ike 0: IKEv1 exchange=Quick id=d3fdd1bfbc94caee/16aleb5b0f37ee23:8465e467 len=444
ike 0:toHub1_0:48:toHub1:109: responder selectors 0:0.0.0.0/0.0.0.0:0->0:0.0.0.0/0.0.0.0:0
ike 0:toHub1_0:48:toHub1:109: my proposal:
...
...
ike 0:toHub1_0:48:toHub1:109: add IPsec SA: SPIs=79654cf1/5e9936a5
ike 0:toHub1_0:48:toHub1:109: IPsec SA dec spi 79654cf1 key
16:5E21180992B8892DE5142E1F53ABD29E auth 20:49AA4AE14994A39A138392AC517B6E79D98CA673
ike 0:toHub1_0:48:toHub1:109: IPsec SA enc spi 5e9936a5 key
16:BE16B8EF4E75F7B3CF97A1D58D996890 auth 20:2F46B57CAC6F3185BB182F9280312263325F6BAF
ike 0:toHub1_0:48:toHub1:109: added IPsec SA: SPIs=79654cf1/5e9936a5
ike 0:toHub1_0:48:toHub1:109: sending SNMP tunnel UP trapp

```

### To verify the spoke-to-spoke IPsec phase 1 tunnel shortcut is established:

```

# diagnose vpn ike gateway list
vd: root/0
name: toHub1
version: 1
interface: wan2 6
addr: 12.1.1.2:4500 -> 22.1.1.1:4500
tun_id: 22.1.1.1
created: 503s ago
assigned IPv4 address: 10.10.1.100/255.255.255.0
nat: me
auto-discovery: 2 receiver
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/3 established 1/3 time 0/0/0 ms

id/spi: 35 3c10fb6a76f1e264/6c7b397100dffc63
direction: initiator
status: established 503-503s ago = 0ms
proposal: aes128-sha256
key: 7fca86063ea2e72f-4efea6f1bec23948
lifetime/rekey: 86400/85596

```

```
DPD sent/recv: 00000000/00000000

vd: root/0
name: toHub1_0
version: 1
interface: wan2 6
addr: 12.1.1.2:4500 -> 55.1.1.2:64916
created: 208s ago
nat: me peer
auto-discovery: 2 receiver
IKE SA: created 1/1 established 1/1 time 20/20/20 ms
IPsec SA: created 1/1 established 1/1 time 10/10/10 ms

id/spi: 48 d3fdd1bfb9c94caee/16a1eb5b0f37ee23
direction: initiator
status: established 208-208s ago = 20ms
proposal: aes128-sha256
key: 9bcac400d8e14e11-fffde33eaa3a8263
lifetime/rekey: 86400/85891
DPD sent/recv: 0000000a/00000000
```

## Fabric Overlay Orchestrator

The Fabric Overlay Orchestrator feature is an easy-to-use GUI wizard that simplifies the process of configuring a self-orchestrated SD-WAN overlay within a single Security Fabric. This feature is self-orchestrated since no additional tool or device, aside from the FortiGate devices themselves, is required to orchestrate this configuration. An SD-WAN overlay configuration consists of IPsec and BGP configuration settings.

Currently, the Fabric Overlay Orchestrator supports a single hub architecture and builds upon an existing Security Fabric configuration. This feature configures the root FortiGate as the SD-WAN overlay hub and the downstream first-level FortiGates as the spokes.

After configuring the Fabric Overlay, you can complete the SD-WAN deployment by configuring SD-WAN rules.



If you cannot view the *VPN > Fabric Overlay Orchestrator* tree menu, configure the FortiGate as a root or a downstream device in the Security Fabric. See [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more details.

---



The Fabric Overlay Orchestrator does not work when VDOM mode is enabled.

---

This section contains the following topics:

- [Prerequisites on page 1809](#)
- [Network topology on page 1810](#)
- [Using the Fabric Overlay Orchestrator on page 1811](#)

## Prerequisites

Create a single Fortinet Security Fabric with the following components:

- A root FortiGate and one or more downstream FortiGates all running FortiOS 7.2.4 or later
- A FortiAnalyzer, or cloud logging using FortiAnalyzer Cloud or FortiGate Cloud
  - For FortiGate Cloud, all downstream devices must belong to the same FortiCloud account


For more information about configuring these components, see [Configuring the root FortiGate and downstream FortiGates on page 2583](#), [Configuring FortiAnalyzer on page 2593](#), and [Configuring cloud logging on page 2596](#) in the Security Fabric chapter.



The Fabric Overlay Orchestrator does not work when VDOM mode is enabled.

## Network topology

The Fabric Overlay Orchestrator supports configuring an overlay for the following example hub and spoke topology using ADVPN and a single hub.

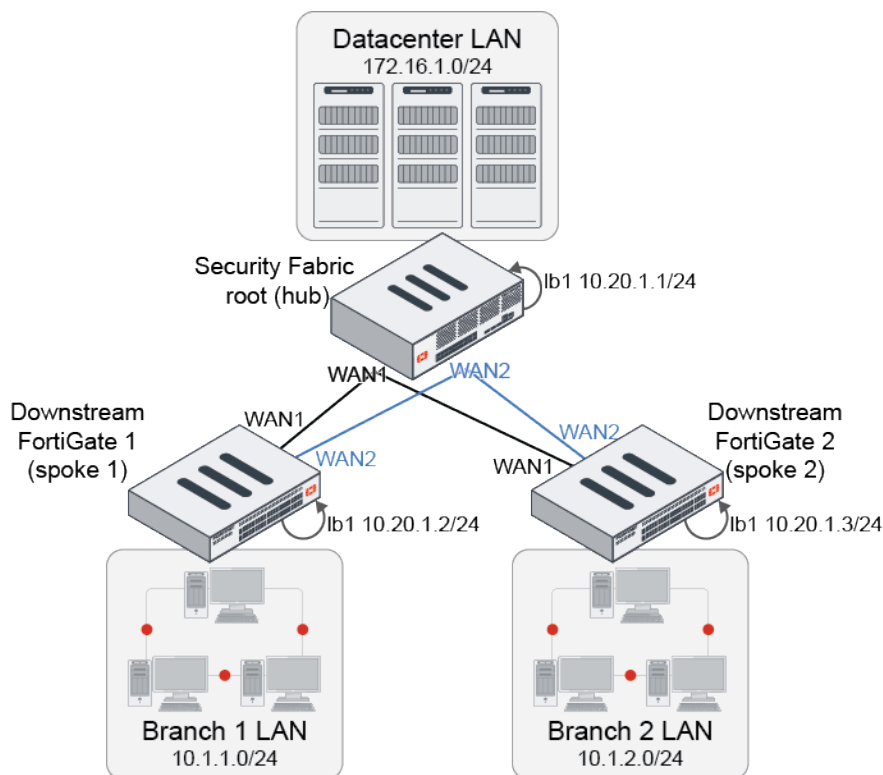

This topology corresponds to the [single datacenter \(active-passive gateway\)](#) design using the [IPsec overlay](#) design of one-to-one overlay mapping per underlay. For more details on these topics, see the [SD-WAN Architectures for Enterprise](#) guide.

In this topology, the datacenter FortiGate (Security Fabric root FortiGate) is the hub, and the branch FortiGates (Security Fabric downstream FortiGates) are the spokes. Each FortiGate has a distinctly defined LAN subnet and loopback interface (lb1) with an IP address within the 10.20.1.0/24 subnet.

The Fabric Overlay Orchestrator creates loopbacks to act as health check servers that are always up, and they can be accessed by adjacent Fabric devices. When configuring the policy creation option of either automatic or health check on



the hub, the Fabric Overlay Orchestrator configures performance SLAs from the hub to the health check servers on 10.20.1.2 and 10.20.1.3 corresponding to the spoke 1 and spoke 2 FortiGates respectively. Likewise, when the Fabric Overlay Orchestrator runs on each spoke, it creates a performance SLA to the hub using its loopback address of 10.20.1.1.

Instead of using loopbacks, any business-critical applications and resources connected to the LAN of each device can be used as health check servers for performance SLAs.

## Using the Fabric Overlay Orchestrator



If you cannot view the *VPN > Fabric Overlay Orchestrator* tree menu, configure the FortiGate as a root or a downstream device in the Security Fabric. See [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more details.



The Fabric Overlay Orchestrator does not work when VDOM mode is enabled.

The following steps should be used to configure a self-orchestrated SD-WAN overlay within a single Security Fabric. These steps must be followed in order, and assume that the prerequisites and network topology are in place.

1. [Configure the root FortiGate using the Fabric Overlay Orchestrator.](#)
2. [Configure one or more downstream FortiGates using the Fabric Overlay Orchestrator.](#)
3. [Configure an overlay on the spoke for an additional incoming interface on the hub \(if applicable\).](#)
4. [Verify the firewall policies on the hub FortiGate.](#)
5. [Verify the Fabric Overlay created by the Fabric Overlay Orchestrator:](#)
  - a. [Verify the IPsec VPN tunnels on the hub FortiGate.](#)
  - b. [Verify BGP routing on the hub FortiGate.](#)
  - c. [Verify the performance SLAs on the hub FortiGate.](#)
  - d. [Verify the firewall policies on a spoke FortiGate.](#)
  - e. [Verify the IPsec VPN tunnels on a spoke FortiGate.](#)
  - f. [Verify BGP routing on a spoke FortiGate.](#)
  - g. [Verify the performance SLAs on a spoke FortiGate.](#)
  - h. [Verify the spoke-to-spoke ADVPN communication.](#)
6. [Configure SD-WAN rules on the hub FortiGate.](#)
7. [Configure SD-WAN rules on the spoke FortiGates.](#)

When configuring the root and downstream FortiGates, the Fabric Overlay Orchestrator configures the following settings in the background:

- IPsec overlay configuration (hub and spoke ADVPN tunnels)
- BGP configuration
- Policy routing
- SD-WAN zones
- SD-WAN performance SLAs

The FortiGate's role in the SD-WAN overlay is automatically determined by its role in the Security Fabric. The Fabric root will be the hub, and any first-level downstream devices from the Fabric root will be spokes.

After using the Fabric Overlay Orchestrator on all FortiGates and verifying the overlay settings, complete the SD-WAN deployment configuration using steps 3 (if applicable), and steps 6 and 7. See [SD-WAN rules on page 686](#) for more information.

## Creating firewall policies

The Fabric Overlay Orchestrator can create firewall policies to allow all traffic through the SD-WAN overlay, or firewall policies to just allow health check traffic through it instead. When the Fabric Overlay Orchestrator is enabled on the root FortiGate, there are three *Policy creation* options:

- *Automatic*: automatically create policies for the loopback interface and tunnel overlays.
- *Health check*: automatically create a policy for the loopback interface so the SD-WAN health checks are functional.
- *Manual*: no policies are automatically created.



The *Automatic* policy creation option creates wildcard allow policies for the tunnel overlays. For some cases, these policies do not provide the necessary granularity to restrict overlay traffic to specific subnets or hosts.



When the Fabric Overlay Orchestrator is configured on a device, changing the policy creation rule will create new policies based on the rule, but it will not delete existing policies. Deleting existing policies must be performed manually.

---

## Configuring the root FortiGate using the Fabric Overlay Orchestrator

**To configure the root FortiGate using the Fabric Overlay Orchestrator:**

1. Go to *VPN > Fabric Overlay Orchestrator*.
2. Set the *Status* to *Enabled*. The *Role* is automatically selected based on the FortiGate's role in the Security Fabric. Ensure that *Hub* is selected. The Fabric root must always be the hub.
3. Set *Policy creation* to *Automatic*.

Fabric Overlay Orchestrator

1 Status 2 Overlay 3 Local Network 4 Summary

Status ☒ Enabled ☐ Disabled

Role ☒ Hub ☐ Spoke

Policy creation [?](#) ☒ Automatic  
Automatically creates policies for the loopback interface and tunnel overlays.

☐ Health check  
Automatically creates a policy for the loopback interface so SD-WAN health checks are functional.

☐ Manual  
No policies are created automatically.

Orchestration

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

Topology

HUB  
Branch2  
Branch1

Additional Information

[API Preview](#)

[Edit in CLI](#)

Online Guides

[Relevant Documentation](#)

[Video Tutorials](#)

Hot Questions at FortiAnswers

[Join the Discussion](#)

Next Cancel

4. Click *Next*. The *Overlay* settings appear.
5. Select one or more interfaces as the *Incoming interface* or the underlay link over which the VPN overlay will be built (two incoming interfaces are selected in this example).
6. Enter the *Pre-shared key*.

Fabric Overlay Orchestrator

1 Status 2 Overlay 3 Local Network 4 Summary

1 Configure interfaces to use in the VPN overlay.

Incoming interface ☐ WAN1 (port1) ☒ WAN2 (port2)

Pre-shared key

Orchestration

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

Topology

HUB  
Branch2  
Branch1

Additional Information

[API Preview](#)

[Edit in CLI](#)

Online Guides

[Relevant Documentation](#)

[Video Tutorials](#)

Hot Questions at FortiAnswers

[Join the Discussion](#)

Back Next Cancel

7. Click *Next*. The *Local Network* settings appear.
8. Configure routing and local subnets to share the following with the VPN network:

**BGP AS**

Optional setting to configure the BGP AS number. By default, this is set to 65400.

**Loopback address block**

Optional setting to configure the loopback IP address. By default, this is set to 10.20.1.1/255.255.255.0.

**Shared interfaces**

Select the interface of the local network to share with the VPN network.

Fabric Overlay Orchestrator

✓ ✓ 3 4  
 Status Overlay Local Network Summary

1 Configure routing and local subnets to share with the VPN network.

BGP AS: 65400

Loopback address block: 10.20.1.1/24

Shared interfaces: Internal (port3)

Back Next Cancel

Orchestration

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

Topology

HUB  
Branch2  
Branch1

Additional Information

API Preview  
Edit in CLI

Online Guides

Relevant Documentation  
Video Tutorials

Hot Questions at FortiAnswers  
Join the Discussion

9. Click **Next**. The **Summary** page appears.

10. Review the settings, then click **Apply**.

Fabric Overlay Orchestrator

✓ ✓ ✓ 4  
 Status Overlay Local Network Summary

Status

Status: ✓ Enabled

Role: ⚙️ Hub

Policy creation: Automatic

Overlay

Incoming interface: WAN1 (port1)  
WAN2 (port2)

Local Network

BGP AS: 65400

Loopback address block: 10.20.1.1/24

Shared subnets: 172.16.1.0/30

Back Apply Cancel

Orchestration

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

Topology

HUB  
Branch2  
Branch1

Additional Information

API Preview  
Edit in CLI

Online Guides

Relevant Documentation  
Video Tutorials

Hot Questions at FortiAnswers  
Join the Discussion

An updated **Summary** page appears with all the settings.

Fabric Overlay Orchestrator

**Status**

Status: Enabled  
 Role: Hub  
 Policy creation: Automatic  
 SD-WAN zone: fabric\_vpn\_sdwan

**Overlay**

Incoming interface

Interfaces	Policy	Phase 1 Interface	Remote Gateway
WAN1 (port1)	Fabric_overlay_0	fabric_vpn_1	0.0.0.0
WAN2 (port2)	Fabric_overlay_1	fabric_vpn_2	0.0.0.0

2

**Local Network**

BGP AS: 65400  
 Loopback interface: F\_Hub\_loop  
 Shared subnets

Subnet	Policies	Address
10.20.1.1/32	fabric_vpn_1_in	fabric_vpn_10.20.1.1_255.255.255.255_1
172.16.1.0/30	fabric_vpn_0_out fabric_vpn_0_in	fabric_vpn_172.16.1.0_255.255.255.252_1

Return

**Orchestration**

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

**Topology**

**Additional Information**

[API Preview](#)  
[Edit in CLI](#)  
[Online Guides](#)  
[Relevant Documentation](#)  
[Video Tutorials](#)  
[Hot Questions at FortiAnswers](#)  
[Join the Discussion](#)

Note the following settings in this example:

SD-WAN zone	Located in the <i>Status</i> section: <i>fabric_vpn_sdwan</i> .
VPN tunnels	Located in the <i>Overlay</i> section in the <i>Incoming interface</i> table under the <i>Phase 1 Interface</i> column: <i>fabric_vpn1</i> and <i>fabric_vpn2</i> .
BGP	Located in the <i>Local Network</i> section. The <i>BGP AS</i> is 65400. The <i>Shared subnets</i> are 10.20.1.1/32 and 172.16.1.0/30.
Loopback interface	Located in the <i>Local Network</i> section: <i>F_Hub_loop</i> .
Firewall policies	Located in two sections: <ul style="list-style-type: none"> <li><i>Overlay</i> section in the <i>Incoming interface</i> table under the <i>Policy</i> column: <i>Fabric_overlay_0</i> and <i>Fabric_overlay_1</i></li> <li><i>Local Network</i> section in the <i>Shared subnets</i> table under the <i>Policies</i> column: <i>fabric_vpn_1_in</i>, <i>fabric_vpn_0_out</i>, and <i>fabric_vpn_0_in</i></li> </ul>

## Configuring a downstream FortiGate using the Fabric Overlay Orchestrator

To configure a downstream FortiGate using the Fabric Overlay Orchestrator:

1. Go to *VPN > Fabric Overlay Orchestrator*.
2. Set the *Status* to *Enabled*. The *Role* is automatically selected based on the FortiGate's role in the Security Fabric. Ensure that *Spoke* is selected. Only downstream first-level FortiGates can be spokes.

3. Click *Next*. The *Local Network* settings appear.
4. Configure the routing and local subnets to share with the VPN network in the following fields:


### Shared interfaces

Select the interface of the local network to share with the VPN network.

5. Click *Next*. As the downstream FortiGate updates, a *Configuring spoke Fabric VPN from root FortiGate* message appears. The *Summary* page appears once the update is complete.

The screenshot shows the 'Fabric Overlay Orchestrator' interface. At the top, a progress bar indicates three steps: 'Status' (completed with a green checkmark), 'Local Network' (completed with a green checkmark), and 'Summary' (active step, indicated by a green circle with the number 3). Below the progress bar, the 'Status' section shows 'Status' as 'Enabled' with a green checkmark and 'Role' as 'Spoke' with a gear icon. The 'Local Network' section shows 'Shared subnets' as '10.1.1.0/24'. On the right side, the 'Orchestration' section explains that the orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. It lists the objects created automatically: Firewall addresses, BGP neighbors, Firewall policies, SD-WAN performance SLAs, SD-WAN zone, and Hub-and-Spoke ADVPN tunnels. Below this, the 'Topology' section shows a diagram with a central 'HUB' connected to 'Branch1' and 'Branch2'. The 'Additional Information' section includes links for 'API Preview', 'Edit in CLI', 'Online Guides', 'Relevant Documentation', 'Video Tutorials', 'Hot Questions at FortiAnswers', and 'Join the Discussion'. At the bottom, there are 'Back', 'Apply', and 'Cancel' buttons.

6. Review the settings, then click *Apply*.  
An updated *Summary* page appears with all the settings.

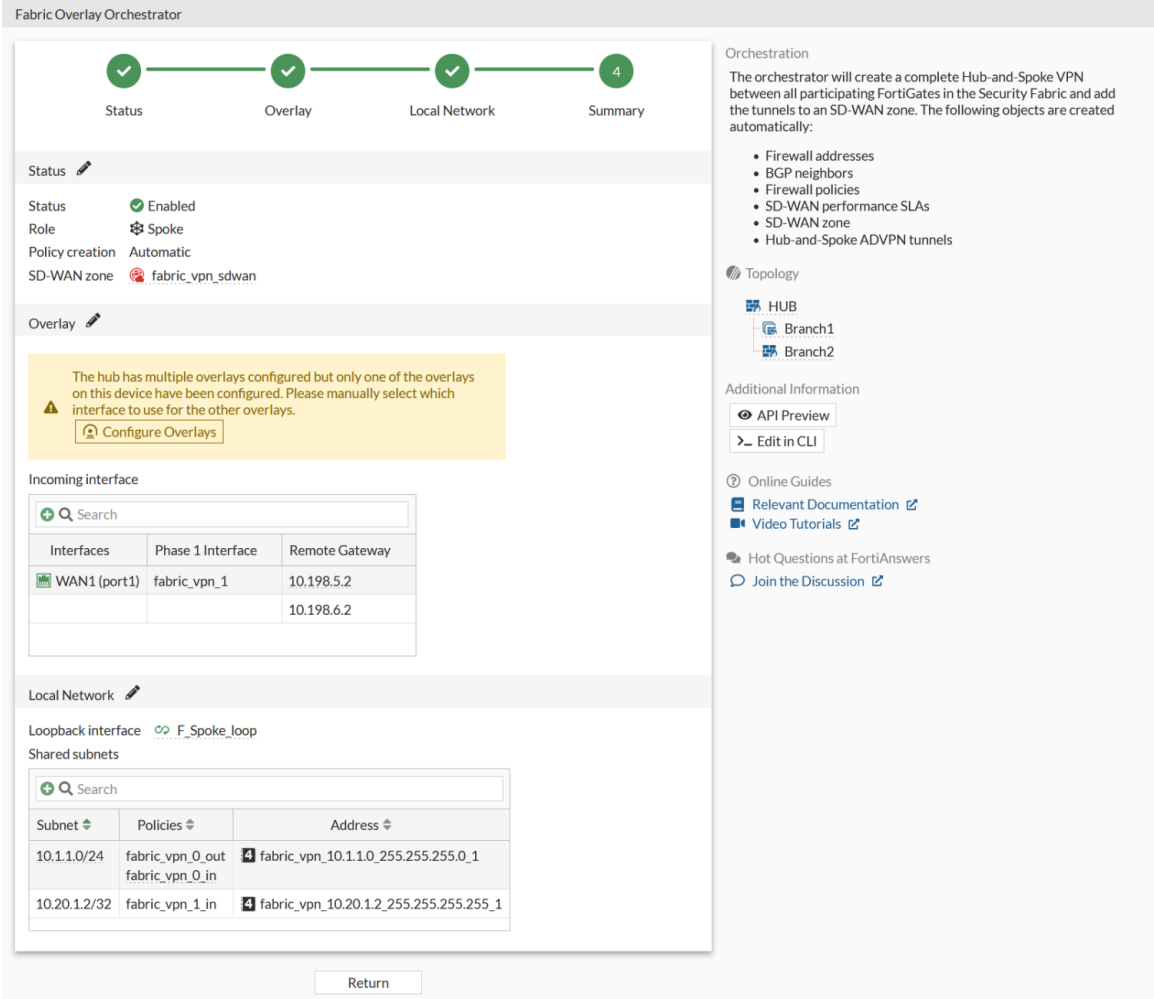

Note the following settings in this example:

SD-WAN zone	Located in the <i>Status</i> section: <i>fabric_vpn_sdwan</i> .
VPN tunnels	Located in the <i>Overlay</i> section in the <i>Incoming interface</i> table under the <i>Phase 1 Interface</i> column: <i>fabric_vpn1</i> .
BGP	Located in the <i>Local Network</i> section. The <i>BGP AS</i> is <i>65400</i> . The <i>Shared subnets</i> are <i>10.1.1.0/24</i> and <i>10.20.1.2/32</i> .
Loopback interface	Located in the <i>Local Network</i> section: <i>F_Hub_loop</i> .
Firewall policies	Located in the <i>Local Network</i> section in the <i>Shared subnets</i> table under the <i>Policies</i> column: <i>fabric_vpn_0_out</i> , <i>fabric_vpn_0_in</i> , and <i>fabric_vpn_1_in</i> .

The loopback IP addresses for the branches are generated based on the index number of the trusted device in the root FortiGate's Security Fabric (HUB) configuration.

```
config system csf
  set status enable
  set group-name "fabric"
  config trusted-list
    edit "FGVM02TM22000001"
```



```

        set serial "FGVM02TM22000001"
        set index 1
    next
    edit "FGVM02TM22000002"
        set serial "FGVM02TM22000002"
        set index 2
    next
end
end


```

For example, if Branch1 (index 1) is the first FortiGate and Branch2 (index 2) is the second FortiGate authorized on the root FortiGate, the loopback addresses are generated as follows:

- Branch1 loopback IP: 10.20.1.2
- Branch2 loopback IP: 10.20.1.3


## Configuring an overlay on the spoke for an additional incoming interface on the hub

 A hub typically includes two incoming interfaces, but additional interfaces can be configured if needed. On downstream devices, the following warning is displayed on the *Fabric Overlay Orchestrator* page that *The hub has multiple overlays configured but only one of the overlays on this device have been configured. Please manually select which interface to use for the other overlays.*



### To configure an additional incoming interface on a spoke:

1. Go to **VPN > Fabric Overlay Orchestrator**.
2. Click **Configure Overlays** in the warning box.
3. Navigate to the **Overlay** section, click the + in the **Incoming interface** field, and select **WAN2 (port2)** to add it to the overlay.

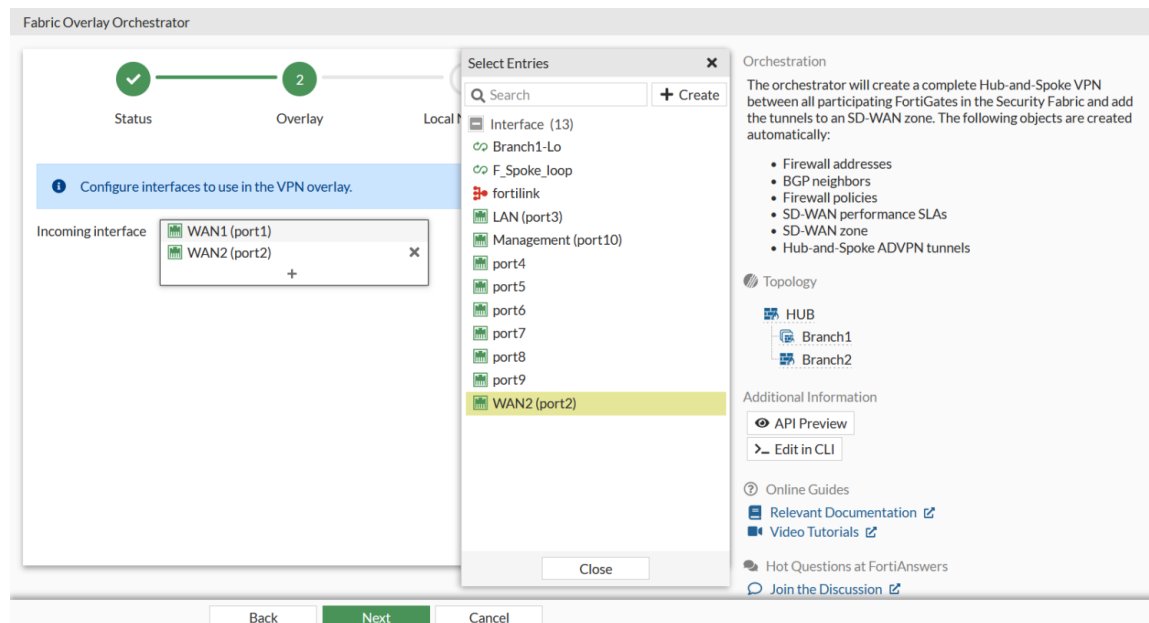

4. Click *Next*, then complete the remaining steps in the GUI wizard. On the *Summary* page, the additional interface *WAN2 (port2)* appears in the *Incoming interfaces* table.

Fabric Overlay Orchestrator

Progress: Status (✓) — Overlay (✓) — Local Network (✓) — Summary (4)

**Status**

Status: ✓ Enabled  
 Role: ⚙️ Spoke  
 Policy creation: Automatic  
 SD-WAN zone: 🌐 fabric\_vpn\_sdwan

**Overlay**

Incoming interface

Interfaces	Phase 1 Interface	Remote Gateway
WAN1 (port1)	fabric_vpn_1	10.198.5.2
WAN2 (port2)	fabric_vpn_2	10.198.6.2

**Local Network**

Loopback interface: 🔄 F\_Spoke\_loop

Shared subnets

Subnet	Policies	Address
10.1.1.0/24	fabric_vpn_0_out fabric_vpn_0_in	<span>🔑</span> fabric_vpn_10.1.1.0_255.255.255.0_1
10.20.1.2/32	fabric_vpn_1_in	<span>🔑</span> fabric_vpn_10.20.1.2_255.255.255.255_1

**Orchestration**

The orchestrator will create a complete Hub-and-Spoke VPN between all participating FortiGates in the Security Fabric and add the tunnels to an SD-WAN zone. The following objects are created automatically:

- Firewall addresses
- BGP neighbors
- Firewall policies
- SD-WAN performance SLAs
- SD-WAN zone
- Hub-and-Spoke ADVPN tunnels

**Topology**

HUB  
 Branch1  
 Branch2

**Additional Information**

[API Preview](#)  
[Edit in CLI](#)

[Online Guides](#)  
[Relevant Documentation](#)  
[Video Tutorials](#)

[Hot Questions at FortiAnswers](#)  
[Join the Discussion](#)

[Return](#)

## Verifying the firewall policies on the hub FortiGate

Different policies are created on the hub FortiGate based on the *Policy creation* setting in the Fabric Overlay Orchestrator configuration (*Automatic*, *Health check*, or *Manual*).

### Automatic

Go to *Policy & Objects > Firewall Policy* to verify that wildcard firewall policies have been configured on the hub FortiGate. This Fabric Overlay Orchestrator configuration example uses automatic policy creation, and the following firewall policies are configured:

<a href="#">+ Create New</a>	<a href="#">Edit</a>	<a href="#">Delete</a>	<a href="#">Policy lookup</a>	Search	<a href="#">Export</a>	<a href="#">Interface Pair View</a>	<a href="#">By Sequence</a>
Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles
fabric_vpn_sdwan → F_Hub_loop 1							
fabric_vpn_1_in	all	fabric_vpn_10.20.1.1_255.255.255.255_1	always	ALL	ACCEPT	Disabled	SSL no-inspection
fabric_vpn_sdwan → fabric_vpn_sdwan 2							
Fabric_overlay_0	all	all	always	ALL	ACCEPT	Disabled	SSL no-inspection
Fabric_overlay_1	all	all	always	ALL	ACCEPT	Disabled	SSL no-inspection
fabric_vpn_sdwan → Internal (port3) 1							
fabric_vpn_0_in	all	fabric_vpn_172.16.1.0_255.255.255.25...	always	ALL	ACCEPT	Disabled	SSL no-inspection
Internal (port3) → fabric_vpn_sdwan 1							
fabric_vpn_0_out	fabric_vpn_172.16.1.0_255.255.255.25...	all	always	ALL	ACCEPT	Disabled	SSL no-inspection
Implicit 1							
Security Rating Issues							
Updated: 00:24:13							



The *Automatic* policy creation option creates wildcard allow policies for the tunnel overlays. For some cases, these policies do not provide the necessary granularity to restrict overlay traffic to specific subnets or hosts.

## Health check

Go to *Policy & Objects > Firewall Policy* to verify that a single firewall policy allowing health check traffic to the hub's loopback has been configured on the hub FortiGate. For example:

Create New

Edit

Delete

Policy lookup

Search

Q

Export

Interface Pair View

By Sequence

Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
fabric_vpn_sdwan → F_Hub_loop 1									
fabric_vpn_0_in	all	fabric_vpn_10.20.1.1_255.255.255.255_1	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	0 B
fabric_vpn_sdwan → fabric_vpn_sdwan 2									
Implicit 1									

Security Rating Issues

Updated: 13:48:07

## Manual

Go to *Policy & Objects > Firewall Policy* to verify that no firewall policies have been created by the Fabric Overlay Orchestrator. If desired, firewall policies must be manually configured on the hub FortiGate to allow traffic to the loopback interface for health checks and the overlays.

## Verifying the Fabric Overlay created by the Fabric Overlay Orchestrator

### To verify the IPsec VPN tunnels on the hub:

1. Go to *Dashboard > Network* and click the *IPsec* widget to expand it.
2. Verify that there are two tunnels established for each phase 1 interface.

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
fabric_vpn_1_0	10.198.1.2	fabric_member_1	103.90 kB	104.76 kB	fabric_vpn_1_0	fabric_vpn_1
fabric_vpn_1_1	10.198.3.2	fabric_member_2	53.22 kB	53.42 kB	fabric_vpn_1_1	fabric_vpn_1
fabric_vpn_2_0	10.198.2.2	fabric_member_1	82.80 kB	81.68 kB	fabric_vpn_2_0	fabric_vpn_2
fabric_vpn_2_1	10.198.4.2	fabric_member_2	21.73 kB	21.93 kB	fabric_vpn_2_1	fabric_vpn_2

The naming convention < tunnel\_name > \_ < number > indicates the relative order in which the tunnels were established:

<i>fabric_vpn_1_0</i>	VPN tunnel listening on the hub's WAN1 incoming interface; established with spoke 1 using its WAN1 interface
<i>fabric_vpn_1_1</i>	VPN tunnel listening on the hub's WAN1 incoming interface; established with spoke 2 using its WAN1 interface
<i>fabric_vpn_2_0</i>	VPN tunnel listening on the hub's WAN2 incoming interface; established with spoke 1 using its WAN2 interface
<i>fabric_vpn_2_1</i>	VPN tunnel listening on the hub's WAN2 incoming interface; established with spoke 2 using its WAN2 interface

### Verify the BGP routing on the hub:

#### 1. In the CLI, check the BGP peering status:

```
HUB # get router info bgp summary

VRF 0 BGP router identifier 10.20.1.1, local AS number 65400
BGP table version is 11
1 BGP AS-PATH entries
0 BGP community entries
Next peer check timer due in 43 seconds

Neighbor    V      AS MsgRcvd MsgSent  TblVer  InQ  OutQ  Up/Down  State/PfxRcd
10.10.10.1  4      65400    23     27      11    0    0 00:09:28      2
10.10.10.2  4      65400    16     16      11    0    0 00:06:36      2
10.10.11.1  4      65400    14     20      11    0    0 00:09:22      2
10.10.11.2  4      65400     7     11      11    0    0 00:03:22      2

Total number of neighbors 4
```

#### 2. Check the BGP advertised routes:

```
HUB # get router info bgp neighbors 10.10.10.1 advertised-routes
VRF 0 BGP table version is 11, local router ID is 10.20.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

Network          Next Hop          Metric      LocPrf  Weight  RouteTag  Path
*>i10.1.1.0/24    10.10.11.1        100         0        0      0 i <- /2>
```

```

*>i10.1.2.0/24      10.10.11.2      100      0      0 i <-/2>
*>i10.1.2.0/24      10.10.10.2      100      0      0 i <-/1>
*>i10.10.10.0/24     10.10.10.253    100 32768    0 i <-/1>
*>i10.10.11.0/24     10.10.10.253    100 32768    0 i <-/1>
*>i10.20.1.1/32      10.10.10.253    100 32768    0 i <-/1>
*>i10.20.1.2/32      10.10.11.1      100      0      0 i <-/2>
*>i10.20.1.3/32      10.10.11.2      100      0      0 i <-/2>
*>i10.20.1.3/32      10.10.10.2      100      0      0 i <-/1>
*>i172.16.1.0/30     10.10.10.253    100 32768    0 i <-/1>

```


Total number of prefixes 10

3. In the GUI, go to *Dashboard > Network* and click the *Routing* widget to expand it.
4. In the dropdown, select *BGP Neighbors*.

Neighbor IP	Local IP	Remote AS	State	Admin Status
10.10.10.1	10.10.10.253	65400	Established	Enabled
10.10.10.2	10.10.10.253	65400	Established	Enabled
10.10.11.1	10.10.11.253	65400	Established	Enabled
10.10.11.2	10.10.11.253	65400	Established	Enabled

### To verify the performance SLAs on the hub:


1. Go to *Network > SD-WAN* and select the *Performance SLAs* tab.
2. Verify that the performance SLAs are automatically created for each spoke. The performance SLA naming uses the serial number of the spoke FortiGate. There are two new entries.

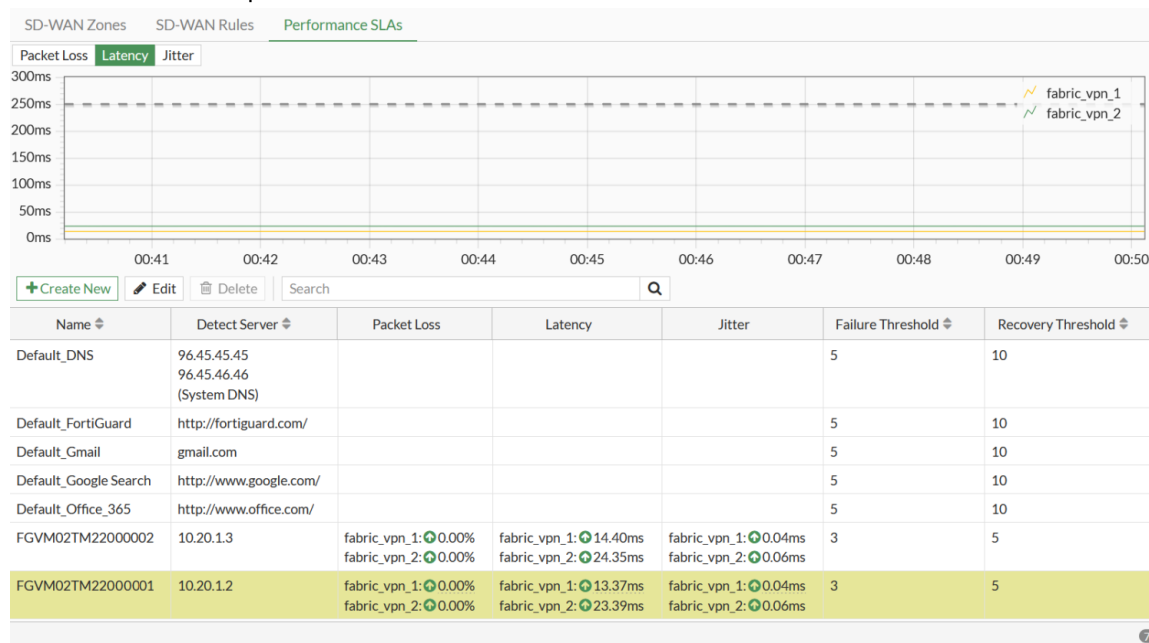

## To verify the firewall policies on a spoke FortiGate:

Different policies are created on the spoke FortiGates based on the hub's *Policy creation* setting in the Fabric Overlay Orchestrator configuration (*Automatic*, *Health check*, or *Manual*). The *Automatic* setting is used in this example.

1. Go to *Policy & Objects > Firewall Policy*.
2. Verify that wildcard firewall policies have been configured.

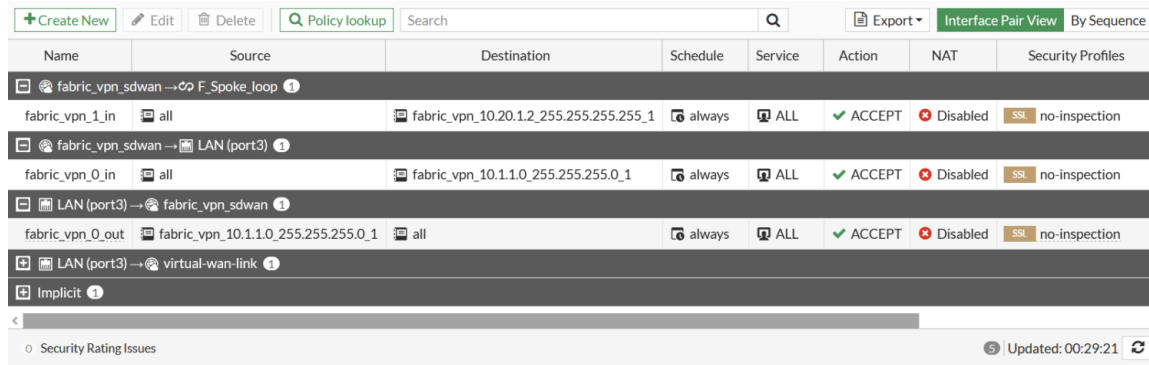


Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles
fabric_vpn_sdwan → F_Spoke_loop							
fabric_vpn_1_in	all	fabric_vpn_10.20.1.2_255.255.255.255_1	always	ALL	ACCEPT	Disabled	SSL no-inspection
fabric_vpn_sdwan → LAN (port3)							
fabric_vpn_0_in	all	fabric_vpn_10.1.1.0_255.255.255.0_1	always	ALL	ACCEPT	Disabled	SSL no-inspection
LAN (port3) → fabric_vpn_sdwan							
fabric_vpn_0_out	fabric_vpn_10.1.1.0_255.255.255.0_1	all	always	ALL	ACCEPT	Disabled	SSL no-inspection
LAN (port3) → virtual-wan-link							
Implicit							



The *Automatic* policy creation option creates wildcard allow policies for the tunnel overlays. For some cases, these policies do not provide the necessary granularity to restrict overlay traffic to specific subnets or hosts.

If the hub's *Policy creation* setting is *Health Check*, a single firewall policy that allows health check traffic to the spoke's loopback should be configured on the spoke FortiGates:

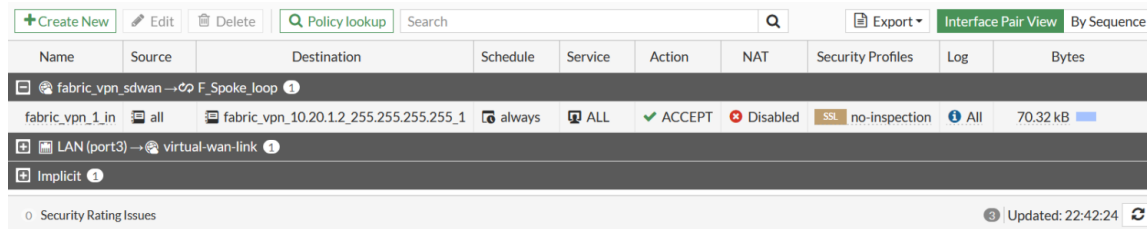

Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
fabric_vpn_sdwan → F_Spoke_loop									
fabric_vpn_1_in	all	fabric_vpn_10.20.1.2_255.255.255.255_1	always	ALL	ACCEPT	Disabled	SSL no-inspection	All	70.32 kB
LAN (port3) → virtual-wan-link									
Implicit									

If the hub's *Policy creation* setting is *Manual*, there should be no new policies created by the Fabric Overlay Orchestrator. If desired, firewall policies must be manually configured on the spoke FortiGates to allow traffic to the loopback interface for health checks and the overlays.

## To verify the IPsec VPN tunnels on a spoke:

1. Go to *Dashboard > Network* and click the *IPsec* widget to expand it.
2. Verify the IPsec tunnels that go back to the hub.

+ Add Widget

IPsec

Reset Statistics Bring Up Bring Down Locate on VPN Map Show Matching Logs

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
Custom 2						
fabric_vpn_1	10.198.5.2		238.81 kB	237.95 kB	fabric_vpn_1	fabric_vpn_1
fabric_vpn_2	10.198.6.2		215.60 kB	216.73 kB	fabric_vpn_2	fabric_vpn_2

Updated: 00:50:52

### To verify BGP routing on a spoke:

1. In the CLI, check the BGP peering status:

```
Branch1 # get router info bgp summary
```

```
VRF 0 BGP router identifier 10.20.1.2, local AS number 65400
BGP table version is 5
1 BGP AS-PATH entries
0 BGP community entries
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
10.10.10.253	4	65400	41	37	4	0	0	00:23:39	8
10.10.11.253	4	65400	38	34	4	0	0	00:23:33	8

Total number of neighbors 2

2. Check the BGP advertised routes:

```
Branch1 # get router info bgp neighbors 10.10.10.253 advertised-routes
VRF 0 BGP table version is 5, local router ID is 10.20.1.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

Network	Next Hop	Metric	LocPrf	Weight	RouteTag	Path
*>i10.1.1.0/24	10.10.10.1		100	32768	0 i	<0/->
*>i10.20.1.2/32	10.10.10.1		100	32768	0 i	<0/->

Total number of prefixes 2

3. In the GUI, go to *Dashboard > Network* and click the *Routing* widget to expand it.
4. In the dropdown, select *BGP Neighbors*.

+ Add Widget

Routing

Soft reset View Search


BGP Neighbors

Neighbor IP	Local IP	Remote AS	State	Admin Status
IPv4 2				
10.10.10.253	10.10.10.1	65400	Established	Enabled
10.10.11.253	10.10.11.1	65400	Established	Enabled

Updated: 00:52:01

### To verify the performance SLAs on a spoke:

1. Go to *Network > SD-WAN* and select the *Performance SLAs* tab.
2. Verify that the performance SLA is automatically created for the hub FortiGate. There is a new entry (*FABRIC\_VPN\_HUB*).

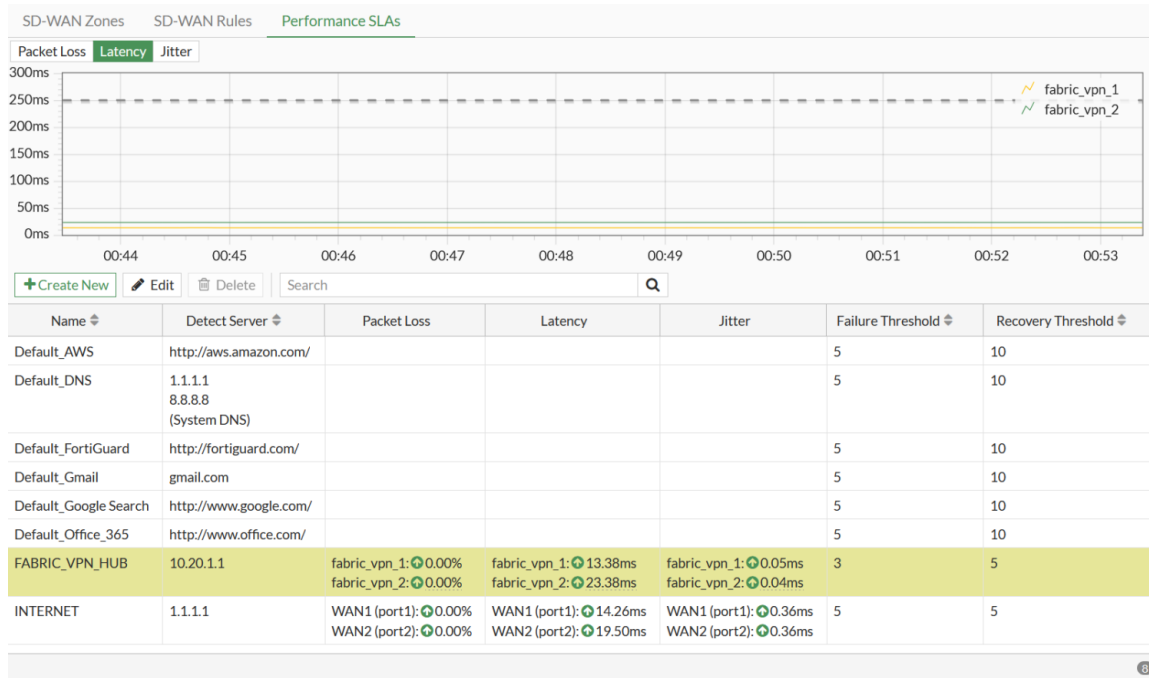

### To verify the spoke-to-spoke ADVPN communication:

1. From Branch1, ping Branch2 (10.20.1.3):

```
Branch1 # exec ping-options source 10.20.1.2
Branch1 # exec ping 10.20.1.3
PING 10.20.1.3 (10.20.1.3): 56 data bytes
64 bytes from 10.20.1.3: icmp_seq=0 ttl=254 time=27.7 ms
64 bytes from 10.20.1.3: icmp_seq=2 ttl=255 time=17.4 ms
64 bytes from 10.20.1.3: icmp_seq=3 ttl=255 time=17.5 ms
64 bytes from 10.20.1.3: icmp_seq=4 ttl=255 time=17.4 ms

--- 10.20.1.3 ping statistics ---
5 packets transmitted, 4 packets received, 20% packet loss
round-trip min/avg/max = 17.4/20.0/27.7 ms
```

2. Verify the IPsec tunnel summary.

- In the CLI, enter the following:

```
Branch1 # get vpn ipsec tunnel summary
'fabric_vpn_1_0' 10.198.3.2:0 selectors(total,up): 1/1 rx(pkt,err): 25/0 tx
(pkt,err): 26/2
'fabric_vpn_1' 10.198.5.2:0 selectors(total,up): 1/1 rx(pkt,err): 8032/0 tx
(pkt,err): 8022/2
'fabric_vpn_2' 10.198.6.2:0 selectors(total,up): 1/1 rx(pkt,err): 7462/0 tx
(pkt,err): 7478/1
```

The fabric\_vpn\_1\_0 tunnel was created for spoke 1-to-spoke 2 communication.



- In the GUI, go to *Dashboard > Network* and click the *IPsec* widget to expand it.

+ Add Widget


IPsec

Reset Statistics Bring Up Bring Down Locate on VPN Map Show Matching Logs

Name	Remote Gateway	Peer ID	Incoming Data	Outgoing Data	Phase 1	Phase 2 Selectors
Custom						
fabric_vpn_1	10.198.5.2		330.46 kB	329.60 kB	fabric_vpn_1	fabric_vpn_1
fabric_vpn_1_0	10.198.3.2	fabric_member_2	4.09 kB	4.18 kB	fabric_vpn_1_0	fabric_vpn_1
fabric_vpn_2	10.198.6.2		306.70 kB	307.81 kB	fabric_vpn_2	fabric_vpn_2

Updated: 01:00:14

- Verify that the performance SLA was updated. Go to *Network > SD-WAN* and select the *Performance SLAs* tab.

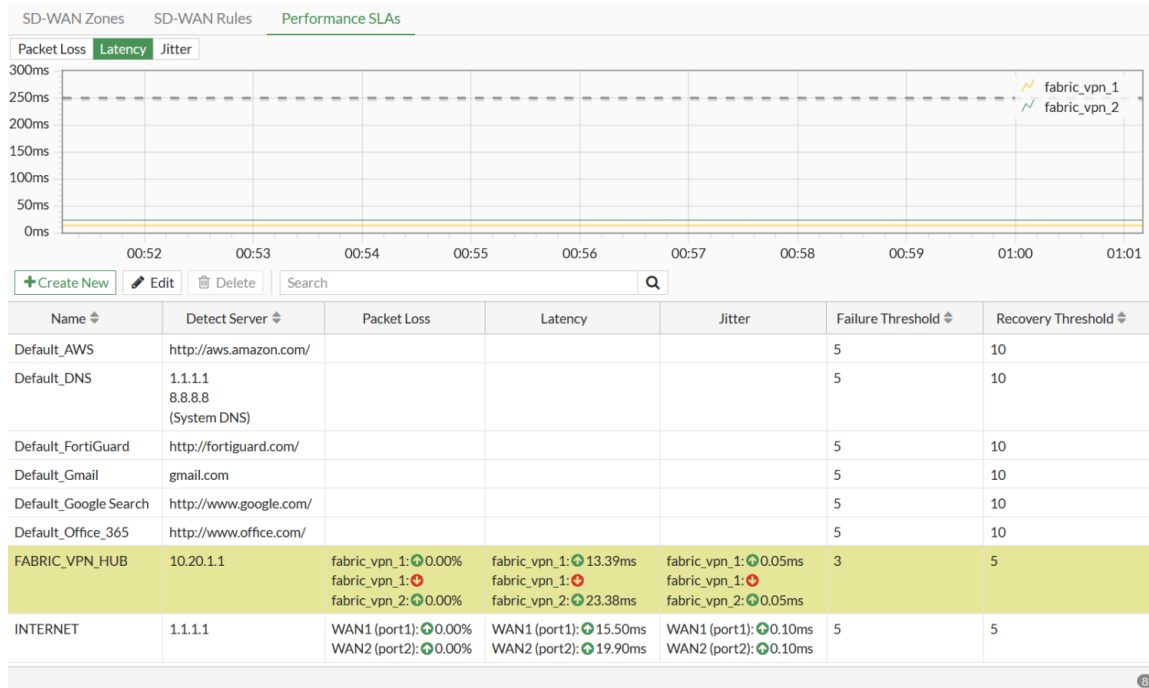

The first performance SLA, *fabric\_vpn\_1*, that corresponds to the spoke-to-hub VPN tunnel is shown as up. The second one, *fabric\_vpn\_1* that corresponds to the spoke-to-spoke VPN tunnel (*fabric\_vpn\_1\_0*) is shown as down since 10.20.1.1 is the IP address corresponding to the hub's loopback interface that is not present on another spoke.

## Configuring SD-WAN rules on the hub FortiGate

On the hub, the Fabric Overlay Orchestrator automatically creates a performance SLA that corresponds to each spoke FortiGate using the serial number as the name of the performance SLA. SD-WAN rules must be configured on the hub FortiGate to direct traffic to each of the spokes using these performance SLAs.

### To configure SD-WAN rules on the hub FortiGate:

- Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
- Enter a name (such as *Hub-To-Br1*).
- In the *Source* section, set the *Address* to the local subnet of the hub.
- Configure the following in the *Destination* section:

- a. Set the *Address* to the local subnet of the spoke. If an address object does not exist yet, click *Create* in the slide-out pane and configure the address.
  - b. Set the *Protocol number* as needed (default = *ANY*).
5. Configure the following in the *Outgoing Interfaces* section:
  - a. Set the *Interface selection strategy* to *Lowest cost (SLA)*.
  - b. Set the *Interface preference* to the SD-WAN members.
  - c. Set *Required SLA target* to the corresponding performance SLA created by the Fabric Overlay Orchestrator for this the spoke. The name is based on the spoke FortiGate's serial number (*FGVM0XXX00000000 #1*).
6. Click *OK*.
7. Repeat these steps for the other spoke. Ensure the *Name* is unique, and that the *Destination* address corresponds to the local subnet behind the spoke.



If you need to disable the Fabric Overlay Orchestrator on the hub FortiGate by setting the *Status* to *Disabled*, you must first delete any SD-WAN rules on the hub FortiGate created using this procedure to ensure the added configuration does not block the clean-up process.

## Configuring SD-WAN rules on the spoke FortiGates

On each spoke, the Fabric Overlay Orchestrator automatically creates a performance SLA that corresponds to the hub FortiGate. An SD-WAN rule must be configured on the spoke FortiGates to direct traffic to the hub FortiGate using this performance SLA.

### To configure an SD-WAN rule on a spoke FortiGate:

1. Go to *Network > SD-WAN*, select the *SD-WAN Rules* tab, and click *Create New*.
2. Enter a name (such as *LAN-to-HUB*).
3. In the *Source* section, set the *Address* to the local subnet of the spoke.
4. Configure the following in the *Destination* section:
  - a. Set the *Address* to the local subnet of the hub. If an address object does not exist yet, click *Create* in the slide-out pane and configure the address.
  - b. Set the *Protocol number* as needed (default = *ANY*).
5. Configure the following in the *Outgoing Interfaces* section:
  - a. Set the *Interface selection strategy* to *Lowest cost (SLA)*.
  - b. Set the *Interface preference* to the SD-WAN members.
  - c. Set *Required SLA target* to the corresponding performance SLA created by the Fabric Overlay Orchestrator, which is named *FABRIC\_VPN\_HUB#1* by default.
6. Click *OK*.



If you need to disable the Fabric Overlay Orchestrator on a spoke FortiGate by setting the *Status* to *Disabled*, you must first delete any SD-WAN rules on the spoke FortiGate created using this procedure to ensure the added configuration does not block the clean-up process.

## Other VPN topics

The following topics provide instructions on configuring other VPN topics.

- [VPN and ASIC offload on page 1829](#)
- [Encryption algorithms on page 1839](#)
- [Fragmenting IP packets before IPsec encapsulation on page 1846](#)
- [Configure DSCP for IPsec tunnels on page 1847](#)
- [Defining gateway IP addresses in IPsec with mode-config and DHCP on page 1849](#)
- [FQDN support for remote gateways on page 1850](#)
- [Windows IKEv2 native VPN with user certificate on page 1852](#)
- [IPsec IKE load balancing based on FortiSASE account information on page 1865](#)

## VPN and ASIC offload

This topic provides a brief introduction to VPN traffic offloading.

### IPsec traffic processed by NPU

1. Check the device ASIC information. For example, a FortiGate 900D has an NP6 and a CP8.

```
# get hardware status
Model name: [[QualityAssurance62/FortiGate]]-900D
ASIC version: CP8
ASIC SRAM: 64M
CPU: Intel(R) Xeon(R) CPU E3-1225 v3 @ 3.20GHz
Number of CPUs: 4
RAM: 16065 MB
Compact Flash: 1925 MB /dev/sda
Hard disk: 244198 MB /dev/sdb
USB Flash: not available
Network Card chipset: [[QualityAssurance62/FortiASIC]] NP6 Adapter (rev.)
```

2. Check port to NPU mapping.

```
# diagnose npu np6 port-list
Chip   XAUI Ports           Max   Cross-chip
                        Speed offloading
----
np6_0  0
      1.   port17           1G    Yes
      1.   port18           1G    Yes
      1.   port19           1G    Yes
      1.   port20           1G    Yes
      1.   port21           1G    Yes
      1.   port22           1G    Yes
      1.   port23           1G    Yes
      1.   port24           1G    Yes
      1.   port27           1G    Yes
      1.   port28           1G    Yes
      1.   port25           1G    Yes
      1.   port26           1G    Yes
      1.   port31           1G    Yes
```

```

1.    port32          1G    Yes
1.    port29          1G    Yes
1.    port30          1G    Yes
1.    portB           10G   Yes
1.
----
np6_1 0
1.    port1           1G    Yes
1.    port2           1G    Yes
1.    port3           1G    Yes
1.    port4           1G    Yes
1.    port5           1G    Yes
1.    port6           1G    Yes
1.    port7           1G    Yes
1.    port8           1G    Yes
1.    port11          1G    Yes
1.    port12          1G    Yes
1.    port9           1G    Yes
1.    port10          1G    Yes
1.    port15          1G    Yes
1.    port16          1G    Yes
1.    port13          1G    Yes
1.    port14          1G    Yes
1.    portA           10G   Yes
1.
----

```

**3. Configure the option in IPsec phase1 settings to control NPU encrypt/decrypt IPsec packets (enabled by default).**

```

config vpn ipsec phase1/phase1-interface
    edit "vpn_name"
        set npu-offload enable/disable
    next
end

```

**4. Check NPU offloading. The NPU encrypted/decrypted counter should tick. The `npu_flag 03` flag means that the traffic processed by the NPU is bi-directional.**

```

# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0 tun_id=11.101.1.1
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=14 ilast=2 olast=2 ad=/0
stat: rxp=12231 txp=12617 rxb=1316052 txb=674314
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=4 serial=7
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=10626 type=00 soft=0 mtu=1438 expire=42921/0B replaywin=2048
seqno=802 esn=0 replaywin_lastseq=00000680 itn=0
life: type=01 bytes=0/0 timeout=42930/43200
dec: spi=e313ac46 esp=aes key=16 0dcb52642eed18b852b5c65a7dc62958
    ah=md5 key=16 c61d9fe60242b9a30e60b1d01da77660
enc: spi=706ffe03 esp=aes key=16 6ad98c204fa70545dbf3d2e33fb7b529
    ah=md5 key=16 dcc3b866da155ef73c0aba15ec530e2e

```

```
dec:pkts/bytes=1665/16352, enc:pkts/bytes=2051/16826
npu_flag=03 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=6 dec_npuid=2 enc_npuid=2
```

```
FGT_900D # diagnose vpn ipsec st
```

```
All ipsec crypto devices in use:
```

```
NP6_0:
```

```
Encryption (encrypted/decrypted)
```

null	: 0	1.
des	: 0	1.
3des	: 0	1.
aes	: 0	1.
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.

```
Integrity (generated/validated)
```

null	: 0	1.
md5	: 0	1.
sha1	: 0	1.
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

```
NP6_1:
```

```
Encryption (encrypted/decrypted)
```

null	: 14976	15357
des	: 0	1.
3des	: 0	1.
aes	: 1664	2047
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.

```
Integrity (generated/validated)
```

null	: 0	1.
md5	: 1664	2047
sha1	: 14976	15357
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

```
NPU Host Offloading:
```

```
Encryption (encrypted/decrypted)
```

null	: 3	1.
des	: 0	1.
3des	: 0	1.
aes	: 3	1.
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.

```
Integrity (generated/validated)
```

null	: 0	1.
md5	: 3	1.
sha1	: 3	1.
sha256	: 0	1.

```

        sha384          : 0          1.
        sha512          : 0          1.

CP8:
  Encryption (encrypted/decrypted)
    null              : 1          1.
    des               : 0          1.
    3des              : 0          1.
    aes               : 1          1.
    aes-gcm           : 0          1.
    aria              : 0          1.
    seed              : 0          1.
    chacha20poly1305 : 0          1.
  Integrity (generated/validated)
    null              : 0          1.
    md5               : 1          1.
    sha1              : 1          1.
    sha256            : 0          1.
    sha384            : 0          1.
    sha512            : 0          1.

SOFTWARE:
  Encryption (encrypted/decrypted)
    null              : 0          1.
    des               : 0          1.
    3des              : 0          1.
    aes               : 0          1.
    aes-gcm           : 29882      29882
    aria              : 21688      21688
    seed              : 153774     153774
    chacha20poly1305 : 29521      29521
  Integrity (generated/validated)
    null              : 59403      59403
    md5               : 0          1.
    sha1              : 175462     175462
    sha256            : 0          1.
    sha384            : 0          1.
    sha512            : 0          1.

```

5. If traffic cannot be offloaded by the NPU, the CP will try to encrypt/decrypt the IPsec packets.

## IPsec traffic processed by CP

1. Check the NPU flag and CP counter.

```

# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0 tun_id=11.101.1.1
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=13 ilast=0 olast=0 ad=/0
stat: rxp=8418 txp=8418 rxb=1251248 txb=685896
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=3 serial=7
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0

```

```

SA:  ref=3 options=10226 type=00 soft=0 mtu=1438 expire=42037/0B replaywin=2048
     seqno=20e3 esn=0 replaywin_lastseq=000020e3 itn=0
life: type=01 bytes=0/0 timeout=42928/43200
dec:  spi=e313ac48 esp=aes key=16 393770842f926266530db6e43e21c4f8
     ah=md5 key=16 b2e4e025e8910e95c1745e7855479cca
enc:  spi=706ffe05 esp=aes key=16 7ef749610335f9f50e252023926de29e
     ah=md5 key=16 0b81e4d835919ab2b8ba8edbd01aec9d
dec:pkts/bytes=8418/685896, enc:pkts/bytes=8418/1251248
npu_flag=00 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=6 dec_npuid=0 enc_npuid=0

```

FGT-D # diagnose vpn ipsec status

All ipsec crypto devices in use:

NP6\_0:

```

Encryption (encrypted/decrypted)
null           : 0                1.
des            : 0                1.
3des           : 0                1.
aes            : 0                1.
aes-gcm        : 0                1.
aria           : 0                1.
seed           : 0                1.
chacha20poly1305 : 0            1.
Integrity (generated/validated)
null           : 0                1.
md5            : 0                1.
sha1           : 0                1.
sha256         : 0                1.
sha384         : 0                1.
sha512         : 0                1.

```

NP6\_1:

```

Encryption (encrypted/decrypted)
null           : 14976            15357
des            : 0                1.
3des           : 0                1.
aes            : 1664             2047
aes-gcm        : 0                1.
aria           : 0                1.
seed           : 0                1.
chacha20poly1305 : 0            1.
Integrity (generated/validated)
null           : 0                1.
md5            : 1664             2047
sha1           : 14976            15357
sha256         : 0                1.
sha384         : 0                1.
sha512         : 0                1.

```

NPU Host Offloading:

```

Encryption (encrypted/decrypted)
null           : 3                1.
des            : 0                1.
3des           : 0                1.
aes            : 3                1.
aes-gcm        : 0                1.
aria           : 0                1.

```

```

        seed                : 0                1.
        chacha20poly1305    : 0                1.
    Integrity (generated/validated)
        null                : 0                1.
        md5                  : 3                1.
        sha1                 : 3                1.
        sha256               : 0                1.
        sha384               : 0                1.
        sha512               : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null                : 1                1.
        des                  : 0                1.
        3des                 : 0                1.
        aes                  : 8499            8499
        aes-gcm              : 0                1.
        aria                 : 0                1.
        seed                 : 0                1.
        chacha20poly1305    : 0                1.
    Integrity (generated/validated)
        null                : 0                1.
        md5                  : 8499            8499
        sha1                 : 1                1.
        sha256               : 0                1.
        sha384               : 0                1.
        sha512               : 0                1.

SOFTWARE:
    Encryption (encrypted/decrypted)
        null                : 0                1.
        des                  : 0                1.
        3des                 : 0                1.
        aes                  : 0                1.
        aes-gcm              : 29882           29882
        aria                 : 21688           21688
        seed                 : 153774          153774
        chacha20poly1305    : 29521           29521
    Integrity (generated/validated)
        null                : 59403           59403
        md5                  : 0                1.
        sha1                 : 175462          175462
        sha256               : 0                1.
        sha384               : 0                1.
        sha512               : 0                1.

```

2. Two options are used to control if the CP processes packets. If disabled, packets are processed by the CPU.

```

config system global
    set ipsec-asic-offload disable
    set ipsec-hmac-offload disable
end

```



## IPsec traffic processed by CPU

IPsec traffic might be processed by the CPU for the following reasons:

- Some low end models do not have NPUs.
- NPU offloading and CP IPsec traffic processing manually disabled.
- Some types of proposals - SEED, ARIA, chacha20poly1305 - are not supported by the NPU or CP.
- NPU flag set to 00 and software encrypt/decrypt counter ticked.

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
```

```
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0 tun_id=11.101.1.1
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=14 ilast=0 olast=0 ad=/0
stat: rxp=12162 txp=12162 rxb=1691412 txb=1008216
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=4 serial=8
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10602 type=00 soft=0 mtu=1453 expire=42903/0B replaywin=2048
      seqno=2d70 esn=0 replaywin_lastseq=00002d70 itn=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=e313ac4d esp=chacha20poly1305 key=36
812d1178784c1130d1586606e44e1b9ab157e31a09edbed583be1e9cc82e8c9f2655a2cf
  ah=null key=0
  enc: spi=706ffe0a esp=chacha20poly1305 key=36
f2727e001e2243549b140f1614ae3df82243adb070e60c33911f461b389b05a7a642e11a
  ah=null key=0
  dec:pkts/bytes=11631/976356, enc:pkts/bytes=11631/1627692
  npu_flag=00 npu_rgw=11.101.1.1 npu_lgw=173.1.1.1 npu_selid=7 dec_npuid=0 enc_npuid=0
```

```
FGT_900D # diagnose vpn ipsec status
All ipsec crypto devices in use:
NP6_0:
  Encryption (encrypted/decrypted)
    null          : 0          1.
    des           : 0          1.
    3des          : 0          1.
    aes           : 0          1.
    aes-gcm       : 0          1.
    aria          : 0          1.
    seed          : 0          1.
    chacha20poly1305 : 0        1.
  Integrity (generated/validated)
    null          : 0          1.
    md5           : 0          1.
    sha1          : 0          1.
    sha256        : 0          1.
    sha384        : 0          1.
    sha512        : 0          1.
```

```
NP6_1:
  Encryption (encrypted/decrypted)
    null          : 14976      15357
```

des	: 0	1.
3des	: 0	1.
aes	: 1664	2047
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.
Integrity (generated/validated)		
null	: 0	1.
md5	: 1664	2047
sha1	: 14976	15357
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## NPU Host Offloading:

Encryption (encrypted/decrypted)		
null	: 3	1.
des	: 0	1.
3des	: 0	1.
aes	: 3	1.
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.
Integrity (generated/validated)		
null	: 0	1.
md5	: 3	1.
sha1	: 3	1.
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## CP8:

Encryption (encrypted/decrypted)		
null	: 1	1.
des	: 0	1.
3des	: 0	1.
aes	: 8865	8865
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.
Integrity (generated/validated)		
null	: 0	1.
md5	: 8865	8865
sha1	: 1	1.
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## SOFTWARE:

Encryption (encrypted/decrypted)		
null	: 0	1.
des	: 0	1.
3des	: 0	1.

aes	: 531	531
aes-gcm	: 29882	29882
aria	: 21688	21688
seed	: 153774	153774
chacha20poly1305	: 41156	41156
Integrity (generated/validated)		
null	: 71038	71038
md5	: 531	531
sha1	: 175462	175462
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## Disable automatic ASIC offloading

When `auto-asic-offload` is set to `disable` in the firewall policy, traffic is not offloaded and the NPU hosting counter is ticked.

```
# diagnose vpn ipsec status
All ipsec crypto devices in use:
NP6_0:
  Encryption (encrypted/decrypted)
    null          : 0          1.
    des           : 0          1.
    3des          : 0          1.
    aes           : 0          1.
    aes-gcm       : 0          1.
    aria          : 0          1.
    seed         : 0          1.
    chacha20poly1305 : 0      1.
  Integrity (generated/validated)
    null          : 0          1.
    md5           : 0          1.
    sha1          : 0          1.
    sha256        : 0          1.
    sha384        : 0          1.
    sha512        : 0          1.

NP6_1:
  Encryption (encrypted/decrypted)
    null          : 14976      15357
    des           : 0          1.
    3des          : 0          1.
    aes           : 110080     2175
    aes-gcm       : 0          1.
    aria          : 0          1.
    seed         : 0          1.
    chacha20poly1305 : 0      1.
  Integrity (generated/validated)
    null          : 0          1.
    md5           : 110080     2175
    sha1          : 14976      15357
    sha256        : 0          1.
    sha384        : 0          1.
    sha512        : 0          1.
```

## NPU Host Offloading:

## Encryption (encrypted/decrypted)

null	: 3	1.
des	: 0	1.
3des	: 0	1.
aes	: 111090	1.
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.

## Integrity (generated/validated)

null	: 0	1.
md5	: 111090	1.
sha1	: 3	1.
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## CP8:

## Encryption (encrypted/decrypted)

null	: 1	1.
des	: 0	1.
3des	: 0	1.
aes	: 8865	8865
aes-gcm	: 0	1.
aria	: 0	1.
seed	: 0	1.
chacha20poly1305	: 0	1.

## Integrity (generated/validated)

null	: 0	1.
md5	: 8865	8865
sha1	: 1	1.
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## SOFTWARE:

## Encryption (encrypted/decrypted)

null	: 0	1.
des	: 0	1.
3des	: 0	1.
aes	: 539	539
aes-gcm	: 29882	29882
aria	: 21688	21688
seed	: 153774	153774
chacha20poly1305	: 41259	41259

## Integrity (generated/validated)

null	: 71141	71141
md5	: 539	539
sha1	: 175462	175462
sha256	: 0	1.
sha384	: 0	1.
sha512	: 0	1.

## Encryption algorithms

This topic provides a brief introduction to IPsec phase 1 and phase 2 encryption algorithms and includes the following sections:

- [IKEv1 phase 1 encryption algorithm](#)
- [IKEv1 phase 2 encryption algorithm](#)
- [IKEv2 phase 1 encryption algorithm](#)
- [IKEv2 phase 2 encryption algorithm](#)
- [HMAC settings](#)

### IKEv1 phase 1 encryption algorithm

The default encryption algorithm is:

`aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1`

DES is a symmetric-key algorithm, which means the same key is used for encrypting and decrypting data. FortiOS supports:

- `des-md5`
- `des-sha1`
- `des-sha256`
- `des-sha384`
- `des-sha512`

3DES applies the DES algorithm three times to each data. FortiOS supports:

- `3des-md5`
- `3des-sha1`
- `3des-sha256`
- `3des-sha384`
- `3des-sha512`

AES is a symmetric-key algorithm with different key lengths (128, 192, and 256 bits). FortiOS supports:

- `aes128-md5`
- `aes128-sha1`
- `aes128-sha256`
- `aes128-sha384`
- `aes128-sha512`
- `aes192-md5`
- `aes192-sha1`
- `aes192-sha256`
- `aes192-sha384`
- `aes192-sha512`
- `aes256-md5`
- `aes256-sha1`
- `aes256-sha256`
- `aes256-sha384`
- `aes256-sha512`

The ARIA algorithm is based on AES with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

SEED is a symmetric-key algorithm. FortiOS supports:

- seed128-md5
- seed128-sha1
- seed128-sha256
- seed128-sha384
- seed128-sha512

Suite-B is a set of AES encryption with ICV in GCM mode. IPsec traffic can be offloaded on NP6X Lite and NP7 platforms. They cannot be offloaded on other NP6 processors and below. CP9 supports Suite-B offloading, otherwise packets are encrypted and decrypted by software. FortiOS supports:

- suite-b-gcm-128
- suite-b-gcm-256

See [Network processors \(NP6, NP6X Lite, NP6 Lite, and NP4\)](#) and [CP9, CP9X Lite, and CP9 Lite capabilities](#) in the Hardware Acceleration guide for more information.

## **IKEv1 phase 2 encryption algorithm**

The default encryption algorithm is:

```
aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm chacha20poly1305
```

With null encryption, IPsec traffic can offload NPU/CP. FortiOS supports:

- null-md5
- null-sha1
- null-sha256
- null-sha384
- null-sha512

With the DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- des-null
- des-md5

- des-sha1
- des-sha256
- des-sha384
- des-sha512

With the 3DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- 3des-null
- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

With the AES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- aes128-null
- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384
- aes128-sha512
- aes192-null
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-null
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512

With the AESGCM encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aes128gcm
- aes256gcm

With the chacha20poly1305 encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- chacha20poly1305

With the ARIA encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aria128-null
- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512

- aria192-null
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-null
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the SEED encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- seed-null
- seed-md5
- seed-sha1
- seed-sha256
- seed-sha384
- seed-sha512

### IKEv2 phase 1 encryption algorithm

The default encryption algorithm is:

```
aes128-sha256 aes256-sha256 aes128gcm-prfsha256 aes256gcm-prfsha384 chacha20poly1305-  
prfsha256
```

DES is a symmetric-key algorithm, which means the same key is used for encrypting and decrypting data. FortiOS supports:

- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

3DES applies the DES algorithm three times to each data. FortiOS supports:

- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

AES is a symmetric-key algorithm with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384



- aes128-sha512
- aes128gcm-prfsha1
- aes128gcm-prfsha256
- aes128gcm-prfsha384
- aes128gcm-prfsha512
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512
- aes256gcm-prfsha1
- aes256gcm-prfsha256
- aes256gcm-prfsha384
- aes256gcm-prfsha512

The ARIA algorithm is based on AES with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the chacha20poly1305 encryption algorithm, FortiOS supports:

- chacha20poly1305-prfsha1
- chacha20poly1305-prfsha256
- chacha20poly1305-prfsha384
- chacha20poly1305-prfsha512

SEED is a symmetric-key algorithm. FortiOS supports:

- seed128-md5
- seed128-sha1

- seed128-sha256
- seed128-sha384
- seed128-sha512

Suite-B is a set of AES encryption with ICV in GCM mode. IPsec traffic can be offloaded on NP6XLite and NP7 platforms. They cannot be offloaded on other NP6 processors and below. CP9 supports Suite-B offloading, otherwise packets are encrypted and decrypted by software. FortiOS supports:

- suite-b-gcm-128
- suite-b-gcm-256

See [Network processors \(NP6, NP6XLite, NP6Lite, and NP4\)](#) and [CP9, CP9XLite, and CP9Lite capabilities](#) in the Hardware Acceleration guide for more information.

## IKEv2 phase 2 encryption algorithm

The default encryption algorithm is:

```
aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm chacha20poly1305
```

With null encryption, IPsec traffic can offload NPU/CP. FortiOS supports:

- null-md5
- null-sha1
- null-sha256
- null-sha384
- null-sha512

With the DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- des-null
- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

With the 3DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- 3des-null
- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

With the AES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- aes128-null
- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384
- aes128-sha512

- aes192-null
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-null
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512

With the AESGCM encryption algorithm, IPsec traffic **cannot** offload NPU. CP9 supports AESGCM offloading. FortiOS supports:

- aes128gcm
- aes256gcm

With the chacha20poly1305 encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- chacha20poly1305

With the ARIA encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aria128-null
- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-null
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-null
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the SEED encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- seed-null
- seed-md5
- seed-sha1
- seed-sha256

- seed-sha384
- seed-sha512

## HMAC settings

The FortiGate uses the HMAC based on the authentication proposal that is chosen in phase 1 or phase 2 of the IPsec configuration. Each proposal consists of the encryption-hash pair (such as 3des-sha256). The FortiGate matches the most secure proposal to negotiate with the peer.

### To view the chosen proposal and the HMAC hash used:

```
# diagnose vpn ike gateway list

vd: root/0
name: MPLS
version: 1
interface: port1 3
addr: 192.168.2.5:500 -> 10.10.10.1:500
tun_id: 10.10.10.1
virtual-interface-addr: 172.31.0.2 -> 172.31.0.1
created: 1015820s ago
IKE SA: created 1/13 established 1/13 time 10/1626/21010 ms
IPsec SA: created 1/24 established 1/24 time 0/11/30 ms

id/spi: 124 43b087dae99f7733/6a8473e58cd8990a
direction: responder
status: established 68693-68693s ago = 10ms
proposal: 3des-sha256
key: e0fa6ab8dc509b33-aa2cc549999b1823-c3cb9c337432646e
lifetime/rekey: 86400/17436
DPD sent/recv: 000001e1/00000000
```

## Fragmenting IP packets before IPsec encapsulation

The `ip-fragmentation` command controls packet fragmentation before IPsec encapsulation, which can benefit packet loss in some environments.

The following options are available for the `ip-fragmentation` variable.

Option	Description
pre-encapsulation	Fragment before IPsec encapsulation.
post-encapsulation (default value)	Fragment after IPsec encapsulation (RFC compliant).

### To configure packet fragmentation using the CLI:

```
config vpn ipsec phase1-interface
edit "demo"
    set interface "port1"
    set authmethod signature
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
```

```

set ip-fragmentation pre-encapsulation
set remote-gw 172.16.200.4
set certificate "Fortinet_Factory"
next
end

```


## Configure DSCP for IPsec tunnels

Configuring the differentiated services (DiffServ) code in phase2 of an IPsec tunnel allows the tag to be applied to the Encapsulating Security Payload (ESP) packet.

- If `diffserv` is disabled in the IPsec phase2 configuration, then the ESP packets' DSCP value is copied from the inner IP packet DSCP.
- If `diffserv` is enabled in the IPsec phase2 configuration, then ESP packets' DSCP value is set to the configured value.



Offloading traffic to the NPU must be disabled for the tunnel.

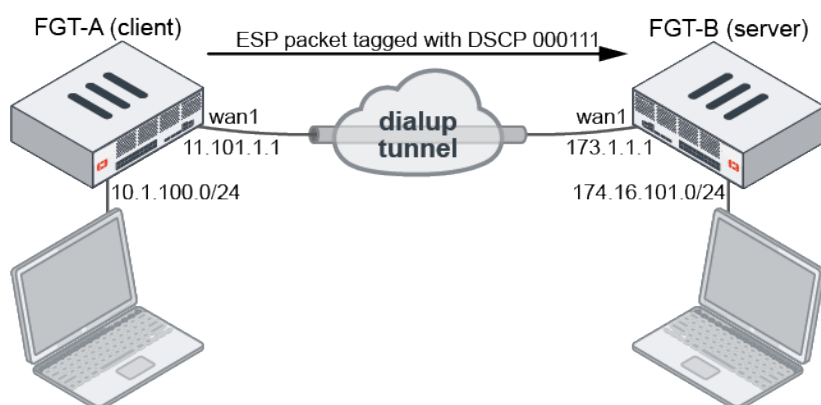

In this example, NPU offloading is disabled, `diffserv` is enabled, and the `diffserv` code is set to 000111 on FGT-A. Only one side of the tunnel needs to have `diffserv` enabled.

### To configure IPsec on FGT-A:

#### 1. Configure the phase1-interface:

```

config vpn ipsec phase1-interface
edit "s2s"
set interface "wan1"
set peertype any
set net-device disable
set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
set npu-offload disable
set dhgrp 14 5
set wizard-type static-fortigate
set remote-gw 173.1.1.1
set psksecret *****

```

```

    next
end

```

## 2. Configure the phase2-interface:

```

config vpn ipsec phase2-interface
    edit "s2s"
        set phase1name "s2s"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set dhgrp 14 5
        set diffserv enable
        set diffservcode 000111
        set src-addr-type name
        set dst-addr-type name
        set src-name "s2s_local"
        set dst-name "s2s_remote"
    next
end

```

## 3. Check the state of the IPsec tunnel:

```

FGT-A # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=s2s ver=1 serial=1 11.101.1.1:0->173.1.1.1:0 tun_id=173.1.1.1 dst_mtu=1500
bound_if=17 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/512 options[0200]=frag-rfc
run_state=0 accept_traffic=1 overlay_id=0

proxyid_num=1 child_num=0 refcnt=11 ilast=12 olast=2978 ad=/0
stat: rxp=4 txp=4 rxb=608 txb=336
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=s2s proto=0 sa=1 ref=2 serial=2 dscp
    src: 0:10.1.100.0/255.255.255.0:0
    dst: 0:174.16.101.0/255.255.255.0:0
    SA: ref=3 options=110226 type=00 soft=0 mtu=1438 expire=39916/0B replaywin=2048
        seqno=5 esn=0 replaywin_lastseq=00000005 itn=0 qat=0 hash_search_len=1
    life: type=01 bytes=0/0 timeout=42899/43200
    dec: spi=a41f202e esp=aes key=16 8a02875b80b884d961af227fe8b5cdee
        ah=sha1 key=20 fc9760b79e79dbb0ef630ec0c5dca74777976208
    enc: spi=431bce1e esp=aes key=16 851117af24212da89e466d8bea9632bb
        ah=sha1 key=20 0807cc0af2dc4ea049a6b1a4af410ccc71e2156d
    dec:pkts/bytes=4/336, enc:pkts/bytes=4/608
    npu_flag=00 npu_rgwy=173.1.1.1 npu_lgwy=11.101.1.1 npu_selid=1 dec_npuid=0 enc_npuid=0
run_tally=1

```

## 4. Use a packet analyzer, or sniffer, to check the ESP packets:

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	11.101.1.1	173.1.1.1	ESP	166	ESP (SPI=0x431bce1e)
2	0.000041	173.1.1.1	11.101.1.1	ESP	166	ESP (SPI=0xa41f202e)
3	1.000361	11.101.1.1	173.1.1.1	ESP	166	ESP (SPI=0x431bce1e)
4	1.001073	173.1.1.1	11.101.1.1	ESP	166	ESP (SPI=0xa41f202e)
5	1.999801	11.101.1.1	173.1.1.1	ESP	166	ESP (SPI=0x431bce1e)
6	2.000513	173.1.1.1	11.101.1.1	ESP	166	ESP (SPI=0xa41f202e)
7	3.000212	11.101.1.1	173.1.1.1	ESP	166	ESP (SPI=0x431bce1e)

```


> Frame 1: 166 bytes on wire (1328 bits), 166 bytes captured (1328 bits)
> Ethernet II, Src: Fortinet_12:6a:24 (70:4c:a5:12:6a:24), Dst: Fortinet_eb:c8:82 (08:5b:0e:eb:c8:82)
▼ Internet Protocol Version 4, Src: 11.101.1.1, Dst: 173.1.1.1
    0100 .... = Version: 4
    .... 0101 = Header Length: 20 bytes (5)
    ▼ Differentiated Services Field: 0x1c (DSCP: Unknown, ECT: Not-ECT)
        0001 11.. = Differentiated Services Codepoint: Unknown (7)
            .... 000 = Explicit Congestion Notification: Not ECN-Capable Transport (0)
    Total Length: 152
    Identification: 0x0500 (1280)
    > Flags: 0x0000
    Fragment offset: 0
    Time to live: 62
    Protocol: Encap Security Payload (50)
    Header checksum: 0xbcb0 [validation disabled]
    [Header checksum status: Unverified]
    Source: 11.101.1.1
    Destination: 173.1.1.1
    > Encapsulating Security Payload
  
```

## Defining gateway IP addresses in IPsec with mode-config and DHCP

For an IPsec tunnel, the gateway IP address (giaddr) can be defined on a DHCP relay agent. Both IPv4 and IPv6 addresses are supported. An IPsec tunnel with mode-config and DHCP relay cannot specify a DHCP subnet range to the DHCP server.

The DHCP server assigns an IP address based on the giaddr set on the IPsec phase1 interface and sends an offer to this subnet. The DHCP server must have a route to the specified subnet giaddr.

### Example

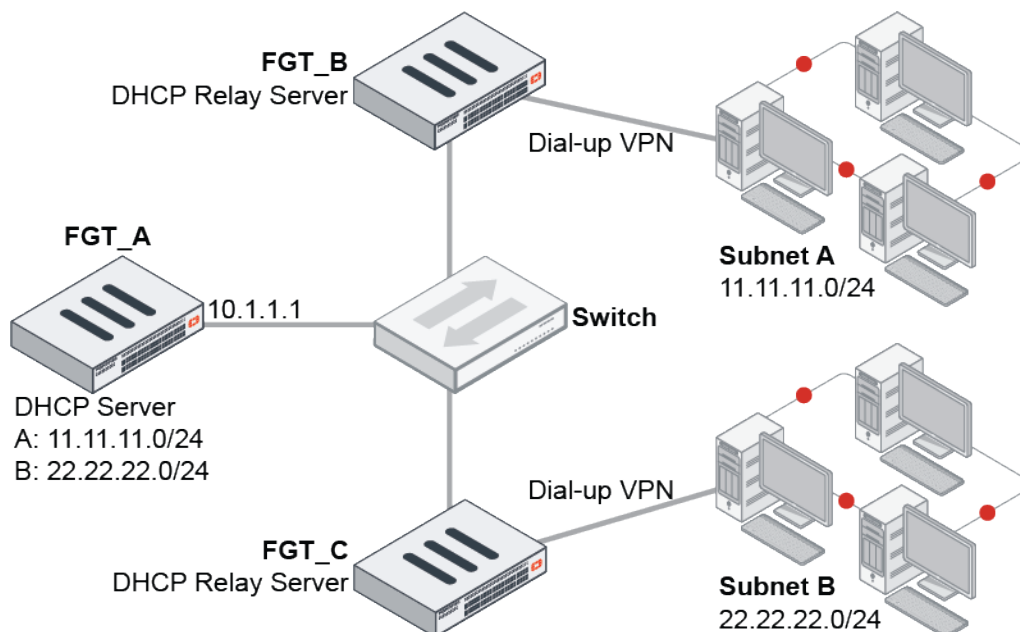

## To define the gateway IP address on the DHCP relay server:

### 1. Configure the VPN IPsec phase1 interface:

```
config vpn ipsec phase1-interface
  edit "ipv4"
    set type dynamic
    set interface "port2"
    set peertype any
    set net-device disable
    set mode-cfg enable
    set proposal des-md5 des-shal
    set dpd on-idle
    set dhgrp 5
    set assign-ip-from dhcp
    set dhcp-ra-giaddr 11.11.11.1
    set psksecret *****
    set dpd-retryinterval 60
  next
end
```

IPv6 could also be configured:

```
config vpn ipsec phase1-interface
  edit "ipv6"
    set type dynamic
    set interface "port2"
    set peertype any
    set net-device disable
    set mode-cfg enable
    set proposal des-md5 des-shal
    set dpd on-idle
    set dhgrp 5
    set assign-ip-from dhcp
    set dhcp6-ra-linkaddr 2000:11:11:11::1
    set psksecret *****
    set dpd-retryinterval 60
  next
end
```

### 2. Enable DHCP proxy and configure the DHCP server IP address:

```
config system settings
  set dhcp-proxy enable
  set dhcp-server-ip "10.1.1.1"
end
```

### 3. Repeat the above steps for FGT\_C and subnet B.

## FQDN support for remote gateways

FortiGate supports FQDN when defining an IPsec remote gateway with a dynamically assigned IPv6 address. When FortiGate attempts to connect to the IPv6 device, FQDN will resolve the IPv6 address even when the address changes.

Using FQDN to configure the remote gateway is useful when the remote end has a dynamic IPv6 address assigned by their ISP or DHCPv6 server.



**To set the VPN to DDNS and configure FQDN:**

```

config vpn ipsec phase1-interface
    edit "ddns6"
        set type ddns
        set interface "aggl"
        set ip-version 6
        set ike-version 2
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128gcm-prfsha256 aes256gcm-prfsha384
chacha20poly1305-prfsha256
        set dpd on-idle
        set remotegw-ddns "rgwa61.vpnlab.org"
        set psksecret *****
    next
end

config vpn ipsec phase2-interface
    edit "ddns6"
        set phaselname "ddns6"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
chacha20poly1305
        set src-addr-type subnet6
        set dst-addr-type subnet6
        set src-subnet6 2003:1:1:1::/64
    next
end

```

**FQDN resolves the IPv6 address**

```

# diagnose test application dnsproxy 7

vfid=0, name=rgwa61.vpnlab.org, ttl=3600:3547:1747
    2003:33:1:1::22 (ttl=3600)

```

**FortiGate uses FQDN to connect to the IPv6 device**

```

# diagnose vpn tunnel list name ddns6
list ipsec tunnel by names in vd 0
-----
name=ddns6 ver=2 serial=2 2003:33:1:1::1:0->2003:33:1:1::22:0 dst_mtu=1500
bound_if=32 lgwy=static/1 tun=intf/0 mode=auto/1 encaps=none/520 options[0208]=npu frag-rfc
run_state=0 accept_traffic=1 overlay_id=0

proxyid_num=1 child_num=0 refcnt=10 ilast=9 olast=9 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=72340
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=ddns6 proto=0 sa=1 ref=2 serial=1
    src: 0:2003:1:1:1::/64:0
    dst: 0:::/0:0
    SA: ref=3 options=10226 type=00 soft=0 mtu=1422 expire=42680/0B replaywin=2048
        seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0 hash_search_len=1
    life: type=01 bytes=0/0 timeout=42901/43200
    dec: spi=ac7a5718 esp=aes key=16 9976b66280cc49f500d8edca093e03fb

```

```

    ah=sha1 key=20 4d94d76fc18df5a180c52e0a6cd5f430fde48fe8
enc: spi=7ab888ec esp=aes key=16 841a95d3ee5ea5108a2ba269b74998d1
    ah=sha1 key=20 ed0b52d27776e30149ee36af4fd4626681c2a3a1
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
    npu_flag=00 npu_rgw=2003:33:1:1::22 npu_lgw=2003:33:1:1::1 npu_selid=0 dec_npuid=0 enc_
npuid=0
run_tally=1

```

### The tunnel can still connect to the FQDN address when the IPv6 address changes

```

# diagnose debug application ike -1
# diagnose debug enable
ike 0:ddns6: set oper down
ike 0:ddns6: carrier down
ike shrank heap by 159744 bytes
ike 0: cache rebuild start
ike 0:ddns6: sending DNS request for remote peer rgwa61.vpnlab.org
ike 0: send IPv6 DNS query : rgwa61.vpnlab.org
ike 0: cache rebuild done
ike 0:ddns6: remote IPv6 DDNS gateway is empty, retry to resolve it
ike 0: DNS response received for remote gateway rgwa61.vpnlab.org
ike 0: DNS rgwa61.vpnlab.org -> 2003:33:1:1::33
ike 2:test:46932: could not send IKE Packet(P1_RETRANSMIT):50.1.1.1:500->50.1.1.2:500,
len=716: error 101:Network is unreachable
ike 0:ddns6: remote IPv6 DDNS gateway is empty, retry to resolve it
ike 0:ddns6: 'rgwa61.vpnlab.org' resolved to 2003:33:1:1::33
ike 0: cache rebuild start
ike 0:ddns6: local:2003:33:1:1::1, remote:2003:33:1:1::33
ike 0:ddns6: cached as static-ddns.
ike 0: cache rebuild done
ike 0:ddns6: auto-negotiate connection
ike 0:ddns6: created connection: 0x155aa510 32 2003:33:1:1::1->2003:33:1:1::33:500.

.....
.....
ike 0:ddns6:46933:ddn6:47779: add IPsec SA: SPIs=ac7a5719/7ab888ed
ike 0:ddns6:46933:ddn6:47779: IPsec SA dec spi ac7a5719 key
16:0F27F1D1D02496F90D15A30E2C032678 auth 20:46564E0E86A054374B31E58F95E4458340121BCE
ike 0:ddns6:46933:ddn6:47779: IPsec SA enc spi 7ab888ed key
16:926B12908EE670E1A5DDA6AD8E96607B auth 20:42BF438DC90867B837B0490EAB08E329AB62CBE3
ike 0:ddns6:46933:ddn6:47779: added IPsec SA: SPIs=ac7a5719/7ab888ed
ike 0:ddns6:46933:ddn6:47779: sending SNMP tunnel UP trap
ike 0:ddns6: carrier up

```


### Windows IKEv2 native VPN with user certificate

In this example, IKEv2 with Extensible Authentication Protocol – Transport Layer Security (EAP-TLS) using mutual certificate authentication is configured. Mutual certificate authentication means that both the client and server use certificates to identify themselves. EAP uses RADIUS, which is handled by the Network Policy Server (NPS) on the Windows server. Certificates are generated and distributed through Active Directory Certificate Services (AD CS). An additional certificate is used to identify the IPsec gateway.

This example assumes that the following Windows server roles are installed and available:

- NPS (RADIUS)
- AD CS with a generated CA
- Group Policy Management
- DNS server

It is also assumed that a connection is established between the NPS and FortiGate, and a DNS entry exists for the NPS that the FortiGate can resolve.

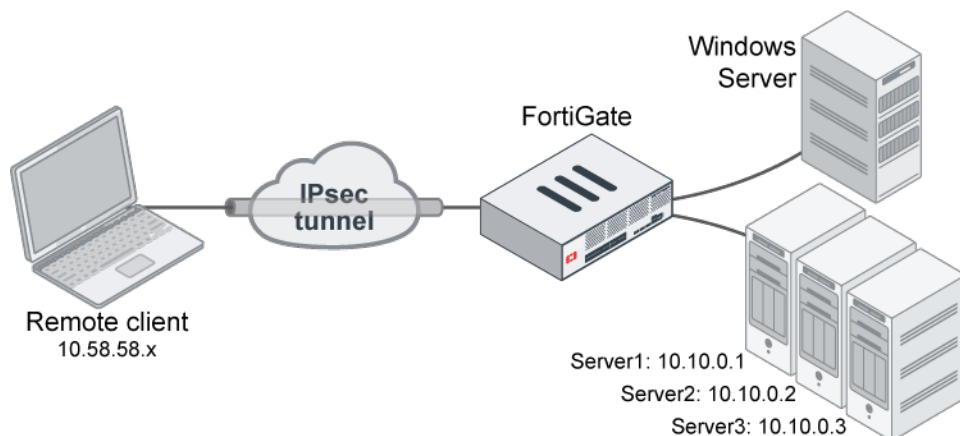

## Certificates

The following certificates are required:

- CA certificate for EAP-TLS to sign the client and server certificates.  
The CA certificate must be able to sign other certificates. It is created after AD CSs CA role installation. It is named lab-local-CA, as lab.local is the domain that is used in this example. The CA certificate is automatically installed on the server that is hosting the AD CS role. In this example, that server is also hosting the NPS and DNS server.  
The *Key Usage* specifies *Certificate Signing*.
- Client certificate for EAP-TLS used by the windows client.  
The client certificate is stored in the personal user certificate store and is used to authenticate the user. The certificate has *Client Authentication* and a SAN of the user's FQDN, and is signed by the CA. The CA is stored in *Current User > Trusted Root Certification Authorities*.
- Server certificate for EAP-TLS used by the server providing RADIUS authentication.  
The NPS certificate must be in the hosting server's certificate store so that the NPS can access it. It has *Server Authentication* and a SAN DNS name to match the server's IP address. The user must use the FQDN to connect to the VPN. If the IP address that the name resolves to is used, the certificate will not be considered valid.
- VPN certificate used to identify the FortiGate dialup gateway.  
The VPN certificate and private key are installed to the FortiGate using a CSR generated by the FortiGate

## Configure the Windows server

The Windows server includes AD-CS, a RADIUS server, and a DNS server.

After the AD CS role has been installed and configured, the CA is ready to sign certificates.

Users and groups are defined first. The groups are configured to automatically receive certificates and relay membership to the FortiGate for granular access control through group matching in policies.

RADIUS is used to authorize connecting users. The RADIUS server returns users' groups with the access-accept response, to indicate to the FortiGate what groups the users belong to.

#### To create security groups and users:

1. Open *Active Directory Users and Computers*.
2. Create two groups, *Group1* and *Group2*.
3. Create two users, *User1* and *User2*.
4. Add *User1* to *Group1* and *User2* to *Group2*.

#### To create a certificate template to enable automatic enrollment for the user groups:

1. Open *Certificate Authority*.
2. In the navigation pane, expand the new CA, right-click *Certificate Template* and click *Manage*.
3. Configure a new certificate template:
  - a. Right-click the *User* template and click *Duplicate Template*.
  - b. On the *General* tab, enter a *Template display name*, such as *User Auto Enroll*.
  - c. Enable *Publish certificate in Active Directory* and *Do not automatically reenroll...*

Properties of New Template

Subject Name    Server    Issuance Requirements

Superseded Templates    Extensions    Security

Compatibility    General    Request Handling    Cryptography    Key Attestation

Template display name:  
User Auto Enroll

Template name:  
UserAutoEnroll

Validity period: 1 years    Renewal period: 6 weeks

☒ Publish certificate in Active Directory

☒ Do not automatically reenroll if a duplicate certificate exists in Active Directory


OK    Cancel    Apply    Help

- d. Configure the remaining settings as required, then go to the *Request Handling* tab.
- e. Disable *Allow private key to be exported* and select *Enroll subject without requiring any user input*.
- f. On the *Security* tab, in *Group or user name*, click *Add*.
- g. Add *Group1* and *Group2*.
- h. Select each group and, under *Permissions*, enable *Read*, *Enroll*, and *Autoenroll*.
- i. On the *Extensions* tab, click *Application Policies* then click *Edit*.
- j. Remove all of the policies expect for *Client Authentication*.
- k. Click *OK* then close the *Certificate Templates* console.

4. In the navigation pane, right-click *Certificate Template* and click *New > Certificate Template to Issue*.
5. Select the new certificate template, *User Auto Enroll*, then click *OK*.

**To create a group policy to enable automatic enrollment:**

1. Open the *Group Policy Management* console.
2. In the navigation pane, go to *Forest:lab.local > Domains > lab.local*, and then click *Group Policy Objects*.
3. Click *Action*, and then click *New*.
4. Set a *Name* for the new GPO then click *OK*.
5. Right-click the new GPO and click *Edit*.
6. In the *Group Policy Management Editor* navigation pane, go to *User configuration > Windows Settings > Security Settings > Public Key Policies*.
7. In the content pane, double-click *Certificate Services Client - Auto-Enrollment*.
8. Set *Configuration Model* to *Enabled*.
9. Enable *Renew expired certificates...* and *Update certificates....*

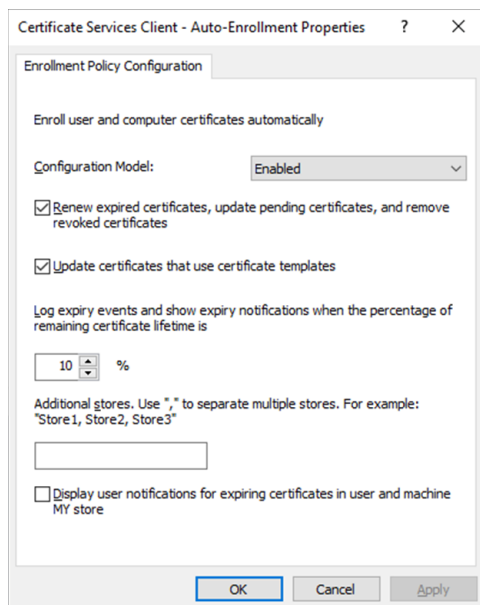

10. Click *OK*.

**To verify that users are receiving certificates:**

1. Log into an endpoint with a domain user.
2. On the server, open Certification Authority.
3. Expand the CA and select *Issued Certificates*.
4. Verify that the user logged into the endpoint is listed under *Requested Name*. You can also check the local user certificate store on the endpoint.

**To generate and sign a CSR and import the signed certificate to the FortiGate:**

1. On the FortiGate and go to *System > Certificates* and click *Create/Import > Generate CSR*.
2. Configure the CSR:

<b>Certificate Name</b>	vpn.lab.local
<b>ID Type</b>	Domain Name
<b>Domain Name</b>	vpn.lab.local
<b>Subject Alternative Name</b>	DNS:vpn.lab.local


3. Configure the remaining settings as required, then click *OK*.
4. Download the CSR to a location that is accessible to the CA server, in this example: C:\CSR\
5. Sign the CSR with the previously created CA:
  - a. Open the command prompt as an administrator and enter the following:
 

```
certreq -submit -attrib "CertificateTemplate:WebServer" C:\CSR\vpn.lab.local.csr
```


The *Certification Authority List* window opens.
  - b. Select the CA and click *OK*.
  - c. Save the signed certificate with a .cer file extension to a location that is accessible from the FortiGate.
6. Import the signed certificate to the FortiGate:
  - a. On the FortiGate, go to *System > Certificates* and click *Create/Import > Certificate*.
  - b. Click *Import Certificate*.
  - c. Set *Type* to *Local Certificate*.
  - d. Click *Upload* and locate and select the signed certificate
  - e. Click *Create* then click *OK*.

#### To configure network policies on the RADIUS server:

1. Open the *Network Policy Server* and, in the console tree, expand *Policies*.
2. Right-click on *Network Policies* and click *New*.
3. Enter a *Policy name*, such as *VPN-Group1*, then click *Next*.
4. Under *Condition description* click *Add*:
  - a. Select *User Groups*, then click *Add*.
  - b. Click *Add Groups*.
  - c. Enter the group name, *Group1*, click *Check Names* to confirm the group.
  - d. Click *OK* in both windows.
5. Click *Next*.
6. Make sure that *Access granted* is selected, then click *Next*.
7. On the *Configure Authentication Methods* page, click *Add* and add the EAP type *Microsoft: Smart Card or other certificate*.
8. Edit the EAP type, select the previously generated certificate, then click *OK*.

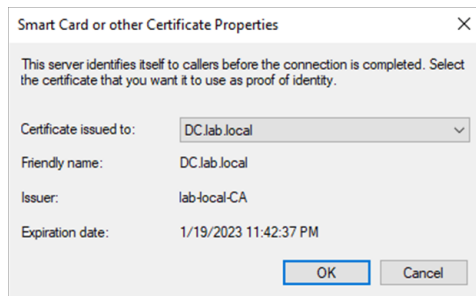


9. Deselect all of the *Less secure authentication methods* then click *Next*.
10. Configure constraints as needed, then click *Next*.
11. On the *Configure Settings* page, under *RADIUS Attributes*, select *Vendor Specific*, then click *Add*:
  - a. In the *Attributes* list, select *Vendor-Specific*, then click *Add*.

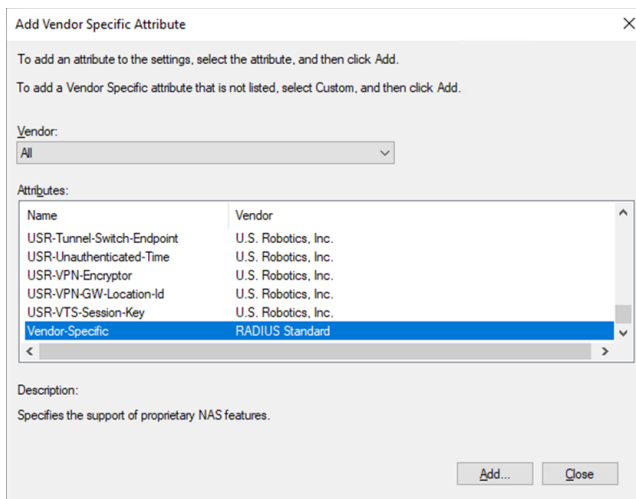

- b. In the *Attribute Information* window, click *Add*.
- c. In the *Vendor-Specific Attribute Information* window, enter the *Vendor Code*, 12356, and select *Yes. It conforms*.
- d. Click *Configure Attribute* and configure the following:

Vendor-assigned attribute number	1
Attribute format	String
Attribute value	Group

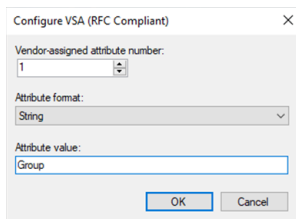

- e. Click *OK* on all three windows and on the *Add Vendor Specific Attribute* window click *Close*.
12. Click *Next*.
13. On the *Completing New Network Policy* page, review the configuration, then click *Finish*.

14. Duplicate the policy for *Group2*, and call the new policy *VPN-Group2*.
15. Reorder the policies so that *VPN-Group1* and *VPN-Group2* are one and two in the processing order.

#### To add the FortiGate as a RADIUS client:

1. Open the *Network Policy Server* and, in the console tree, expand *RADIUS Clients and Servers*.
2. Right-click on *RADIUS Clients* and click *New*.
3. Add the FortiGate as a RADIUS client:

<b>Friendly name</b>	FGT1
<b>Address</b>	10.0.1.1
<b>Shared Secret</b>	Manually enter the shared secret.

New RADIUS Client

Settings Advanced

☒ Enable this RADIUS client

☐ Select an existing template:

Name and Address

Friendly name: FGT1

Address (IP or DNS): 10.0.1.1 Verify...

Shared Secret

Select an existing Shared Secrets template: None

To manually type a shared secret, click Manual. To automatically generate a shared secret, click Generate. You must configure the RADIUS client with the same shared secret entered here. Shared secrets are case-sensitive.

☒ Manual ☐ Generate

Shared secret: .....

Confirm shared secret: .....

OK Cancel

4. Click *OK*.

#### To create a DNS entry for the VPN connection:

1. Open the *DNS Manager*.
2. Go to *DC > Forward Lookup Zones* and select *lab.local*.
3. Right click in the content pane and select *New Host (A or AAAA)*.
4. Enter the VPN name. The FQDN should be auto-filled with *vpn.lab.local*.



**New Host** [X]

Name (uses parent domain name if blank):  
vpn

Fully qualified domain name (FQDN):  
vpn.lab.local.

IP address:  
192.168.1.99

☐ Create associated pointer (PTR) record

☐ Allow any authenticated user to update DNS records with the same owner name

[Add Host] [Cancel]

5. Enter an IP address.
6. Click *Add Host*.

## Configure the FortiGate

An IPsec VPN tunnel is configured to connect to the NPS (RADIUS) server for EAP authentication. For information about IPsec VPN, see [IPsec VPNs on page 1573](#).

A RADIUS server is added to relay VPN authentication requests to the NPS server. For information about RADIUS servers, see [RADIUS servers on page 2092](#).

Three groups are created that point to the RADIUS server for authentication: one group each for user group *Group1*, user group *Group2*, and the remote server. For information about groups, see [User groups on page 2065](#).

Three firewall policies are created to test the functionality of the three user groups (see [Policies on page 1035](#)):

- Policy 1 allows VPN clients to communicate with each other.
- Policy 2 allows VPN clients in the *Group1* user group to communicate with *Server1* and *Server3*.
- Policy 3 allows VPN clients in the *Group2* user group to communicate with *Server1* and *Server2*.

### To configure IPsec VPN in the GUI:

1. Go to *VPN > IPsec Wizard*.
2. Enter a name for the VPN, such as *VPN1*.
3. Set *Template type* to *Custom*, then click *Next*.
4. In the *Network* section, configure the following:

<b>Remote Gateway</b>	Dialup User
<b>Interface</b>	port1
<b>Mode Config</b>	Enable
<b>Assign IP From</b>	Range
<b>Client Address Range</b>	10.58.58.1-10.58.58.10
<b>DNS Server</b>	192.168.1.100
<b>Enable IPv4 Split Tunnel</b>	Enable

<b>Accessible Networks</b>	Select the networks that VPN users will have access to.
----------------------------	---

5. In the *Authentication* section, configure the following:

<b>Method</b>	Signature
<b>Certificate Name</b>	vpn.lab.local
<b>Version</b>	2
<b>Accept Types</b>	Any peer ID

6. In the *Phase 1 Proposal* section, configure the following:

<b>Encryption / Authentication</b>	AES128 / SHA256
<b>Encryption / Authentication</b>	AES256 / SHA256
<b>Encryption / Authentication</b>	AES128 / SHA1
<b>Diffie-Hellman Groups</b>	14, 5, 2
<b>Local ID</b>	vpn.lab.local

7. In the *Phase 2 Selectors* section, configure the following:

<b>Local Address</b>	Named Address - all
<b>Remote Address</b>	Named Address - all
<b>Encryption / Authentication</b>	AES128 / SHA256
<b>Encryption / Authentication</b>	AES256 / SHA256
<b>Encryption / Authentication</b>	AES128 / SHA1
<b>Enable Perfect Forward Secrecy (PFS)</b>	Disable
<b>Autokey Keep Alive</b>	Enable

8. Enable EAP settings in the CLI:

```
config vpn ipsec phase1-interface
    edit VPN1
        set eap enable
        set eap-identity send-request
    next
end
```

#### To configure IPsec VPN in the CLI:

```
config vpn ipsec phase1-interface
    edit "VPN1"
        set type dynamic
        set interface "port1"
        set ike-version 2
        set authmethod signature
        set peertype any
```

```

        set net-device disable
        set mode-cfg enable
        set ipv4-dns-server1 192.168.1.100
        set proposal aes128-sha256 aes256-sha256 aes128-sha1
        set localid "vpn.lab.local"
        set dpd on-idle
        set dhgrp 14 5 2
        set eap enable
        set eap-identity send-request
        set certificate "vpn.lab.local"
        set ipv4-start-ip 10.58.58.1
        set ipv4-end-ip 10.58.58.10
        set ipv4-split-include "10/8_net"
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "VPN1"
        set phase1name "VPN1"
        set proposal aes128-sha256 aes256-sha256 aes128-sha1
        set pfs disable
        set keepalive enable
        set src-addr-type name
        set dst-addr-type name
        set src-name "all"
        set dst-name "all"
    next
end

```

### To add the RADIUS server in the GUI:

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Enter a name for the server, such as *NPS*.
3. Enter the *Primary Server IP/Name* and *Secret*.  
The *Test User Credentials* option will not work, as it does not use certificates for the test.
4. Click *OK*.

### To add the RADIUS server in the CLI:

```

config user radius
    edit "NPS"
        set server <ip>
        set secret *****
    next
end

```

### To configure the user groups in the GUI:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Enter a name for the group, such as *Group1*.
3. In the *Remote Groups* table, click *Add*:
  - a. Set *Remote Server* to the just created RADIUS server, *NPS*.
  - b. Set *Groups* to *Specify* and enter *Group1*.

- c. Click *OK*.
4. Click *OK*.
5. Create a second group called *Group2* with the same *Remote Server* and *Group Name* set to *Group2*.
6. Create a third group called *RADIUS* with the same *Remote Server* but no *Group Name*.

#### To configure the user groups in the CLI:

```
config user group
  edit "Group1"
    set member "NPS"
    config match
      edit 1
        set server-name "NPS"
        set group-name "Group1"
      next
    end
  next
  edit "Group2"
    set member "NPS"
    config match
      edit 1
        set server-name "NPS"
        set group-name "Group2"
      next
    end
  next
  edit "RADIUS"
    set member "NPS"
  next
end
```

#### To configure the policies in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure policy 1:

<b>Name</b>	VPN-VPN
<b>Incoming Interface</b>	VPN1
<b>Outgoing Interface</b>	VPN1
<b>Source</b>	all, RADIUS
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>NAT</b>	Disable

3. Click *OK*.
4. Click *Create New* again and configure policy 2:

<b>Name</b>	VPN Group1
<b>Incoming Interface</b>	VPN1
<b>Outgoing Interface</b>	Server1, Server3
<b>Source</b>	all, Group1
<b>Destination</b>	10.10.0.1, 10.10.0.3
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>NAT</b>	Disable

5. Click *OK*.

6. Click *Create New* again and configure policy 3:

<b>Name</b>	VPN Group2
<b>Incoming Interface</b>	VPN1
<b>Outgoing Interface</b>	Server1, Server2
<b>Source</b>	all, Group2
<b>Destination</b>	10.10.0.1, 10.10.0.2
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>NAT</b>	Disable

7. Click *OK*.

### To configure the policies in the CLI:

```
config firewall policy
  edit 1
    set name "VPN-VPN"
    set srcintf "VPN1"
    set dstintf "VPN1"
    set action accept
    set srcaddr "all" "RADIUS"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set nat disable
  next
  edit 2
    set name "VPN Group1"
    set srcintf "VPN1"
    set dstintf "Server1" "Server3"
    set action accept
    set srcaddr "all" "Group1"
    set dstaddr "10.10.0.1" "10.10.0.3"
    set schedule "always"
```

```

        set service "ALL"
        set nat disable
    next
    edit 3
        set name "VPN Group2"
        set srcintf "VPN1"
        set dstintf "Server1" "Server2"
        set action accept
        set srcaddr "all" "Group2"
        set dstaddr "10.10.0.1" "10.10.0.2"
        set schedule "always"
        set service "ALL"
        set nat disable
    next
end

```

## Configure the Windows client

The configuration is done on a Windows 10 Enterprise endpoint.

### To add VPN connection and configure a VPN interface:

1. Open the *Settings* page and go to *Network & Internet > VPN*.
2. Click *Add a VPN connection*.
3. Configure the following:

<b>VPN provider</b>	Windows (built-in)
<b>Connection name</b>	vpn.lab.local
<b>Server name or address</b>	vpn.lab.local
<b>VPN type</b>	IKEv2
<b>Type of sign-in info</b>	Certificate

Add a VPN connection

VPN provider  
Windows (built-in) ▼

Connection name  
vpn.lab.local

Server name or address  
vpn.lab.local

VPN type  
IKEv2 ▼

Type of sign-in info  
Certificate ▼


User name (optional)  
[Empty field]

Password (optional)  
[Empty field]

☐ Remember my sign-in info

Save Cancel

4. Click **Save**.
5. Go to **Network & Internet > Status** and, under **Advanced network settings**, click **Change adapter options**.
6. Select the VPN connection then click **Change settings of this connection**, or right-click on the connection and select **Properties**:
  - a. Go to the **Settings** tab and, in the **Authentication** section, click **Properties**.
  - b. Select **Use a certificate on this computer** and enable **Use simple certification selection**.
  - c. Enable **Verify the server's identity by validating the certificate**.
  - d. Optionally, enable **Connect to these servers** and enter your NPS server's FQDN, in this case **DC.lab.local**.
  - e. In the **Trusted Root Certificate Authorities** list, select the CA **lab-local-CA**.

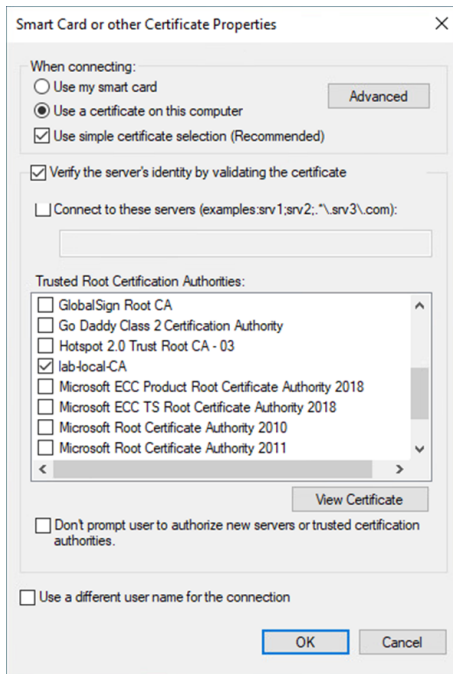

- f. Click **OK**, then click **OK** again.

### To test the connection:

1. Log in to the Windows endpoint as user1.
2. Open the network settings and connect to the **vpn.lab.local** VPN.
3. Ping each of the three servers to confirm that you can connect to server1 (10.10.0.1) and server3 (10.10.0.3), but not server2 (10.10.0.2).
4. Log out of the Windows endpoint, then log back in as user2.
5. Open the network settings and connect to the **vpn.lab.local** VPN.
6. Ping each of the three servers to confirm that you can connect to server1 (10.10.0.1) and server2 (10.10.0.2), but not server3 (10.10.0.3).

## IPsec IKE load balancing based on FortiSASE account information

The FortiGate device ID is carried by the IKEv2 message NOTIFY payload when it is configured.

```


config vpn ipsec phase1-interface
    edit <name>
        set dev-id-notification enable
        set dev-id <string>
    next
end

```

This device ID configuration is required when the FortiGate is configured as a secure edge LAN extension for FortiSASE. It allows FortiSASE to distribute IKE/IPsec traffic according to the FortiGate device ID to achieve load balancing.

## Example

In this example, a FortiGate SD-WAN is configured, which acts as a secure edge. FortiSASE ensures secure internet access for users in the local network behind the FortiGate and allows other FortiSASE remote users with secure private access to private resources behind the FortiGate.

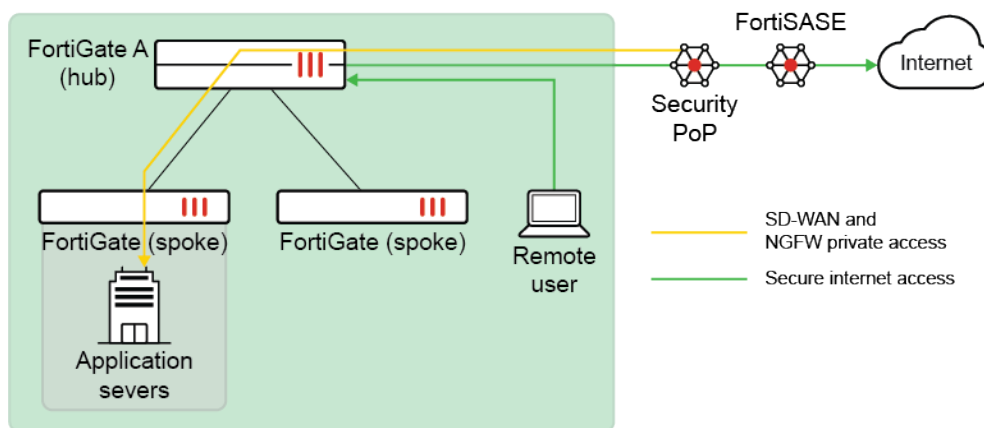

### To configure FortiGate A (FGT-A):

#### 1. Configure the IPsec phase 1 settings:

```

config vpn ipsec phase1-interface
    edit "ul-port1"
        set interface "port1"
        set ike-version 2
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set localid "peerid-UNshTWcLQ22UNWqk0UwYtCQntVhujrxAdyMG0qRsGVkx9mM8ksdaRZOF"
        set dpd on-idle
        set comments "[FGCONN] Do NOT edit. Automatically generated by extension controller."
        set dev-id-notification enable
        set dev-id "FGT_A"
        set remote-gw 172.16.200.2
        set psksecret *****
    next
end

```

#### 2. Verify that the IPsec tunnel is established:



```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 3
-----
name=ul-port1 ver=2 serial=3 172.16.200.1:0->172.16.200.2:0 tun_id=172.16.200.2 tun_
id6=:172.16.200.2 dst_mtu=1500 dpd-link=on weight=1
bound_if=19 lgwy=static/1 tun=intf mode=auto/1 encap=none/552 options[0228]=npu frag-rfc
run_state=0 role=primary accept_traffic=1 overlay_id=0

proxyid_num=1 child_num=0 refcnt=4 ilast=0 olast=0 ad=/0
stat: rxp=2689 txp=7115 rxb=278520 txb=617095
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=ul-port1 proto=0 sa=1 ref=3 serial=1
src: 0:10.252.0.2-10.252.0.2:0
dst: 0:10.252.0.1-10.252.0.1:0
SA: ref=6 options=10226 type=00 soft=0 mtu=1438 expire=41281/0B replaywin=2048
seqno=1bca esn=0 replaywin_lastseq=00000a80 qat=0 rekey=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=42897/43200
dec: spi=acflf0fc esp=aes key=16 97d75ba10fbc904f14ce4a4caf8b4148
ah=sha1 key=20 4ab706602068f9590314c4b16f53130a8011f410
enc: spi=ca8de50b esp=aes key=16 8185ec9d2ecbb1d157663a6c199fc998
ah=sha1 key=20 9430df55054152ab88e7372a322aad8f87688614
dec:pkts/bytes=2690/278560, enc:pkts/bytes=14227/1632503
npu_flag=03 npu_rgwy=172.16.200.2 npu_lgwy=172.16.200.1 npu_selid=2 dec_npuid=2 enc_
npuid=2
run_tally=0
```

3. Perform a packet capture of IPsec traffic (Wireshark is used in this example) and locate the initiator request IKE packet's NOTIFY message (type 61699).

Apply a display filter ... <Ctrl-/>							Expression...
No.	Time	Source	Destination	Protocol	Length	Info	
1	0.000000	172.16.200.1	172.16.200.2	ISAKMP	126	INFORMATIONAL MID=02 Initiator Request	
2	0.000096	172.16.200.2	172.16.200.1	ISAKMP	126	INFORMATIONAL MID=02 Responder Response	
3	0.020463	172.16.200.1	172.16.200.2	ISAKMP	664	IKE_SA_INIT MID=00 Initiator Request	
4	0.020868	172.16.200.2	172.16.200.1	ISAKMP	470	IKE_SA_INIT MID=00 Responder Response	
5	0.021471	172.16.200.1	172.16.200.2	ISAKMP	590	IKE_AUTH MID=01 Initiator Request	
6	0.022052	172.16.200.2	172.16.200.1	ISAKMP	334	IKE_AUTH MID=01 Responder Response	

Message ID: 0x00000000
Length: 618
▼ Payload: Security Association (33)
Next payload: Key Exchange (34)
0... .. = Critical Bit: Not Critical
.000 0000 = Reserved: 0x00
Payload length: 212
> Payload: Proposal (2) # 1
> Payload: Proposal (2) # 2
> Payload: Proposal (2) # 3
> Payload: Proposal (2) # 4
> Payload: Key Exchange (34)
> Payload: Nonce (40)
▼ Payload: Notify (41) - Private Use - STATUS TYPES
Next payload: Notify (41)
0... .. = Critical Bit: Not Critical
.000 0000 = Reserved: 0x00
Payload length: 14
Protocol ID: RESERVED (0)
SPI Size: 0
Notify Message Type: Private Use - STATUS TYPES (61699)
Notification DATA: 4647545f4100
▼ Payload: Notify (41) - NAT_DETECTION_SOURCE_IP
Next payload: Notify (41)
0... .. = Critical Bit: Not Critical
.000 0000 = Reserved: 0x00

0140	4e 75 28 3c fc c2 48 73 a1 57 31 9e d6 41 41 ea	Nu(<<<Hs -W1-AA
0150	90 f7 cb 4c d7 eb 13 6c 54 11 45 e2 77 9a 21 e7	...L...l T-E-w!-
0160	49 47 b2 bb dc e0 b6 1f 11 bb 0a 15 21 34 4c 28	IG.....14L(
0170	3f 7b 59 cd 5f 2f 42 2b fd 04 b0 79 f4 87 2e ca	{Y-W/B+ ...y...
0180	29 d1 60 f2 f3 1e 54 86 d5 b7 c1 24 50 63 16 a3	)...T...\$Pc...
0190	4e fd 4a ad ce 92 f2 b3 b2 13 4c b9 a6 b1 71 ae	N-J.....L...q
01a0	04 3a 0e 1e 32 f0 1d 75 26 0f 74 e8 14 7d b9 0e	...2...u &t...}
01b0	99 5e dd b4 4a 03 ea 80 b7 22 94 af 34 c7 48 11	...2... "...4.H
01c0	df ec 3d 9b f1 e6 8e 06 b2 aa ab 32 c5 c5 ca 84	...2....
01d0	54 0c c2 3f a2 e9 a2 d2 fa dd 4a 94 48 46 f3 05	T...?....-J-HF+
01e0	99 12 7b 0b d3 7d 6a 5b 65 d7 79 86 c8 bc 99 21	...-]...[ e-y....l
01f0	d9 c8 63 99 5a 15 4e 8d 79 50 c4 c6 d5 72 79 bf	...c-Z-W...yP...ry
0200	e7 4c a3 47 f2 64 d5 36 81 9d 9b 11 64 18 8d 9a	...L-G-d-6 ...d...
0210	4d a5 a3 e9 2b 26 37 06 60 4f a0 6d 37 af a8 43	M...+&7...O-m7...C
0220	66 33 6f 1f db 25 29 00 00 24 f9 79 d6 20 29 94	f3o...%)...\$-y...)
0230	2a fb cc 73 36 b2 08 b7 90 95 04 49 4f 7d cc 80	*...s6... ..IO)...
0240	ef 31 ee ba 0d f3 b4 de fd 7c 29 00 00 0e 00 00	...1..... )......
0250	f1 03 46 47 54 5f 41 00 29 00 00 1c 00 00 40 04	...FGT_A... )....@
0260	7a ec 24 c8 e1 d5 a8 ba c3 cf da 1c 40 0d 0a 6c	z-\$.....@...1
0270	db 6b 1d 1e 29 00 00 1c 00 00 40 05 e1 5a 55 68	...k... )....@...ZUh
0280	d4 5c 7f c0 46 51 dd e6 f0 ac ec 85 72 0a 0c 33	...FQ... ..-...3
0290	00 00 00 00 00 00 40 2e	.....@.

## VPN IPsec troubleshooting

See the following IPsec troubleshooting examples:

- [Understanding VPN related logs](#)
- [IPsec related diagnose commands on page 1870](#)

## Understanding VPN related logs

This section provides some IPsec log samples.

### IPsec phase1 negotiating

```

logid="0101037127" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="Progress IPsec phase 1" msg="progress IPsec phase 1" action="negotiate"
remip=11.101.1.1

locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="e41eeecb2c92b337/0000000000000000" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=N/A vpntunnel="to_HQ" status="success" init="local"
mode="aggressive" dir="outbound" stage=1 role="initiator" result="OK"

```

**IPsec phase1 negotiated**

```

logid="0101037127" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="Progress IPsec phase 1" msg="progress IPsec phase 1" action="negotiate"
remip=11.101.1.1

locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="e41eeecb2c92b337/1230131a28eb4e73" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=N/A vpntunnel="to_HQ" status="success" init="local"

mode="aggressive" dir="outbound" stage=2 role="initiator" result="DONE"

```

**IPsec phase1 tunnel up**

```

logid="0101037138" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec connection status changed" msg="IPsec connection status change"
action="tunnel-up" remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" tunnelip=N/A tunnelid=1530910918
tunneltype="ipsec" duration=0 sentbyte=0 rcvdbyte=0 nextstat=0

```

**IPsec phase2 negotiate**

```

logid="0101037129" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="Progress IPsec phase 2" msg="progress IPsec phase 2" action="negotiate"
remip=11.101.1.1

locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" status="success" init="local"

mode="quick" dir="outbound" stage=1 role="initiator" result="OK"

```

**IPsec phase2 tunnel up**

```

logid="0101037139" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec phase 2 status changed" msg="IPsec phase 2 status change" action="phase2-up"

remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ"

phase2_name="to_HQ"

```

**IPsec phase2 sa install**

```

logid="0101037133" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec SA installed" msg="install IPsec SA" action="install_sa" remip=11.101.1.1
locip=173.1.1.1

remport=500 locport=500 outintf="port13" cookies="5b1c59fab2029e43/bf517e686d3943d2"
user="N/A" group="N/A" xauthuser="N/A" xauthgroup="N/A" assignip=11.11.11.1
vpntunnel="to_HQ" role="initiator" in_spi="ca646448" out_spi="747c10c6"

```

**IPsec tunnel statistics**

```

logid="0101037141" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544131118
logdesc="IPsec tunnel statistics" msg="IPsec tunnel statistics" action="tunnel-stats"

```

```
remip=10.1.100.15 locip=172.16.200.4 remport=500 locport=500 outintf="mgmt1"
cookies="3539884dbd8f3567/c32e4c1beca91b36"

user="N/A" group="N/A" xauthuser="N/A" xauthgroup="N/A" assignip=N/A
vpntunnel="L2tpoIPsec_0" tunnelip=10.1.100.15 tunnelid=1530910802 tunneltype="ipsec"
duration=6231 sentbyte=57343 rcvdbyte=142640 nextstat=60
```

### IPsec phase2 tunnel down

```
logid="0101037138" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="IPsec connection status changed" msg="IPsec connection status change"
action="tunnel-down" remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500
outintf="port13" cookies="30820aa390687e39/886e72bf5461fb8d" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" tunnelip=N/A
tunnelid=1530910786 tunneltype="ipsec" duration=6425 sentbyte=504 rcvdbyte=152 nextstat=0
```

### IPsec phase1 sa deleted

```
logid="0101037134" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="IPsec phase 1 SA deleted" msg="delete IPsec phase 1 SA" action="delete_phase1_sa"
remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="30820aa390687e39/886e72bf5461fb8d" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ"
```

## IPsec related diagnose commands

This section provides IPsec related diagnose commands.

- **Daemon IKE summary information list:** `diagnose vpn ike status`

```
connection: 2/50
IKE SA: created 2/51 established 2/9 times 0/13/40 ms
IPsec SA: created 1/13 established 1/7 times 0/8/30 ms
```

- **IPsec phase1 interface status:** `diagnose vpn ike gateway list`

```
vd: root/0
name: tofgtc
version: 1
interface: port13 42
addr: 173.1.1.1:500 -> 172.16.200.3:500
created: 4313s ago
IKE SA: created 1/1 established 1/1 time 10/10/10 ms
IPsec SA: created 0/0
```

```
id/spi: 92 5639f7f8a5dc54c0/809a6c9bbd266a4b
direction: initiator
status: established 4313-4313s ago = 10ms
proposal: aes128-sha256
key: 74aa3d63d88e10ea-8alc73b296b06578
lifetime/rekey: 86400/81786
DPD sent/recvd: 00000000/00000000
```

```
vd: root/0
name: to_HQ
version: 1
```

```

interface: port13 42
addr: 173.1.1.1:500 -> 11.101.1.1:500
created: 1013s ago
assigned IPv4 address: 11.11.11.1/255.255.255.252
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms

```

```

id/spi: 95 255791bd30c749f4/c2505db65210258b
direction: initiator
status: established 1013-1013s ago = 0ms
proposal: aes128-sha256
key: bb101b9127ed5844-1582fd614d5a8a33
lifetime/rekey: 86400/85086
DPD sent/recvd: 00000000/00000010

```

- **IPsec phase2 tunnel status:** diagnose vpn tunnel list

```
list all ipsec tunnel in vd 0
```

```
----
```

```

nname=L2tpoIPsec ver=1 serial=6 172.16.200.4:0->0.0.0.0:0 tun_id=0.0.0.0
bound_if=4 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/24 options[0018]=npu
create_dev
proxyid_num=0 child_num=0 refcnt=10 ilast=13544 olast=13544 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
----
```

```

name=to_HQ ver=1 serial=7 173.1.1.1:0->11.101.1.1:0 tun_id=11.101.1.1
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=13 ilast=10 olast=1112 ad=/0
stat: rxp=1 txp=4 rxb=152 txb=336
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=5
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=10226 type=00 soft=0 mtu=1438 expire=41773/0B replaywin=2048
seqno=5 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=42900/43200
dec: spi=ca64644a esp=aes key=16 6cc873fdef91337a6cf9b6948972c90f
ah=sha1 key=20 e576dbe3ff92605931e5670ad57763c50c7dc73a
enc: spi=747c10c8 esp=aes key=16 5060ad8d0da6824204e3596c0bd762f4
ah=sha1 key=20 52965cbd5b6ad95212fc825929d26c0401948abe
dec:pkts/bytes=1/84, enc:pkts/bytes=4/608
npu_flag=03 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=5 dec_npuid=2 enc_npuid=2

```

- **Packets encrypted/decrypted counter:** diagnose vpn ipsec status

```
All ipsec crypto devices in use:
```

```
NP6_0:
```

```
Encryption (encrypted/decrypted)
```

null	: 0	1.
des	: 0	1.
3des	: 0	1.
aes	: 0	1.
aes-gcm	: 0	1.

```

        aria                : 0                1.
        seed                : 0                1.
        chacha20poly1305    : 0                1.
    Integrity (generated/validated)
        null                : 0                1.
        md5                 : 0                1.
        sha1                : 0                1.
        sha256              : 0                1.
        sha384              : 0                1.
        sha512              : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null                : 0                1.
        des                 : 0                1.
        3des                : 0                1.
        aes                 : 337152          46069
        aes-gcm             : 0                1.
        aria                : 0                1.
        seed                : 0                1.
        chacha20poly1305    : 0                1.
    Integrity (generated/validated)
        null                : 0                1.
        md5                 : 0                1.
        sha1                : 337152          46069
        sha256              : 0                1.
        sha384              : 0                1.
        sha512              : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null                : 0                1.
        des                 : 0                1.
        3des                : 0                1.
        aes                 : 38              1.
        aes-gcm             : 0                1.
        aria                : 0                1.
        seed                : 0                1.
        chacha20poly1305    : 0                1.
    Integrity (generated/validated)
        null                : 0                1.
        md5                 : 0                1.
        sha1                : 38              1.
        sha256              : 0                1.
        sha384              : 0                1.
        sha512              : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null                : 0                1.
        des                 : 0                1.
        3des                : 1337           1582
        aes                 : 71             11426
        aes-gcm             : 0                1.
        aria                : 0                1.
        seed                : 0                1.

```

```

chacha20poly1305 : 0          1.
Integrity (generated/validated)
null              : 0          1.
md5               : 48         28
sha1              : 1360       12980
sha256            : 0          1.
sha384            : 0          1.
sha512            : 0          1.

```

## SOFTWARE:

```

Encryption (encrypted/decrypted)
null              : 0          1.
des               : 0          1.
3des              : 0          1.
aes               : 0          1.
aes-gcm           : 0          1.
aria              : 0          1.
seed              : 0          1.
chacha20poly1305 : 0          1.
Integrity (generated/validated)
null              : 0          1.
md5               : 0          1.
sha1              : 0          1.
sha256            : 0          1.
sha384            : 0          1.
sha512            : 0          1.

```

- diagnose debug application ike -1
  - diagnose vpn ike log-filter dst-addr4 11.101.1.1
  - diagnose vpn ike log-filter src-addr4 173.1.1.1

```

# ike 0:to_HQ:101: initiator: aggressive mode is sending 1st message...
ike 0:to_HQ:101: cookie dff03f1d4820222a/0000000000000000
ike 0:to_HQ:101: sent IKE msg (agg_ilsend): 173.1.1.1:500->11.101.1.1:500, len=912,
id=df03f1d4820222a/0000000000000000
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Aggressive id=df03f1d4820222a/6c2caf4dcf5bab75 len=624
ike 0:to_HQ:101: initiator: aggressive mode get 1st response...
ike 0:to_HQ:101: VID RFC 3947 4A131C81070358455C5728F20E95452F
ike 0:to_HQ:101: VID DPD AFCAD71368A1F1C96B8696FC77570100
ike 0:to_HQ:101: DPD negotiated
ike 0:to_HQ:101: VID draft-ietf-ipsra-isakmp-xauth-06.txt 09002689DFD6B712
ike 0:to_HQ:101: VID CISCO-UNITY 12F5F28C457168A9702D9FE274CC0204
ike 0:to_HQ:101: peer supports UNITY
ike 0:to_HQ:101: VID FORTIGATE 8299031757A36082C6A621DE00000000
ike 0:to_HQ:101: peer is [[QualityAssurance62/FortiGate]]/FortiOS (v0 b0)
ike 0:to_HQ:101: VID FRAGMENTATION 4048B7D56EBCE88525E7DE7F00D6C2D3
ike 0:to_HQ:101: VID FRAGMENTATION 4048B7D56EBCE88525E7DE7F00D6C2D3C0000000
ike 0:to_HQ:101: peer identifier IPV4_ADDR 11.101.1.1
ike 0:to_HQ:101: negotiation result
ike 0:to_HQ:101: proposal id = 1:
ike 0:to_HQ:101:   protocol id = ISAKMP:
ike 0:to_HQ:101:   trans_id = KEY_IKE.
ike 0:to_HQ:101:   encapsulation = IKE/none
ike 0:to_HQ:101:   type=OAKLEY_ENCRYPT_ALG, val=AES_CBC, key-len=128
ike 0:to_HQ:101:   type=OAKLEY_HASH_ALG, val=SHA2_256.

```

```
ike 0:to_HQ:101:          type=AUTH_METHOD, val=PRESHARED_KEY_XAUTH_I.
ike 0:to_HQ:101:          type=OAKLEY_GROUP, val=MODP2048.
ike 0:to_HQ:101: ISAKMP SA lifetime=86400
ike 0:to_HQ:101: received NAT-D payload type 20
ike 0:to_HQ:101: received NAT-D payload type 20
ike 0:to_HQ:101: selected NAT-T version: RFC 3947
ike 0:to_HQ:101: NAT not detected
ike 0:to_HQ:101: ISAKMP SA dff03f1d4820222a/6c2caf4dcf5bab75 key
16:D81CAE6B2500435BFF195491E80148F3
ike 0:to_HQ:101: PSK authentication succeeded
ike 0:to_HQ:101: authentication OK
ike 0:to_HQ:101: add INITIAL-CONTACT
ike 0:to_HQ:101: sent IKE msg (agg_i2send): 173.1.1.1:500->11.101.1.1:500, len=172,
id=df03f1d4820222a/6c2caf4dcf5bab75
ike 0:to_HQ:101: established IKE SA dff03f1d4820222a/6c2caf4dcf5bab75
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=df03f1d4820222a/6c2caf4dcf5bab75:97d88fb4 len=92
ike 0:to_HQ:101: mode-cfg type 16521 request 0:
ike 0:to_HQ:101: mode-cfg type 16522 request 0:
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=108,
id=df03f1d4820222a/6c2caf4dcf5bab75:97d88fb4
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=df03f1d4820222a/6c2caf4dcf5bab75:3724f295 len=92
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=92,
id=df03f1d4820222a/6c2caf4dcf5bab75:3724f295
ike 0:to_HQ:101: initiating mode-cfg pull from peer
ike 0:to_HQ:101: mode-cfg request APPLICATION_VERSION
ike 0:to_HQ:101: mode-cfg request INTERNAL_IP4_ADDRESS
ike 0:to_HQ:101: mode-cfg request INTERNAL_IP4_NETMASK
ike 0:to_HQ:101: mode-cfg request UNITY_SPLIT_INCLUDE
ike 0:to_HQ:101: mode-cfg request UNITY_PFS
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=140,
id=df03f1d4820222a/6c2caf4dcf5bab75:3bca961f
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=df03f1d4820222a/6c2caf4dcf5bab75:3bca961f len=172
ike 0:to_HQ:101: mode-cfg type 1 response 4:0B0B0B01
ike 0:to_HQ:101: mode-cfg received INTERNAL_IP4_ADDRESS 11.11.11.1
ike 0:to_HQ:101: mode-cfg type 2 response 4:FFFFFFFC
ike 0:to_HQ:101: mode-cfg received INTERNAL_IP4_NETMASK 255.255.255.252
ike 0:to_HQ:101: mode-cfg received UNITY_PFS 1
ike 0:to_HQ:101: mode-cfg type 28676 response
28:0A016400FFFFFFF0000000000000A016500FFFFFFF000000000000000
ike 0:to_HQ:101: mode-cfg received UNITY_SPLIT_INCLUDE 0 10.1.100.0/255.255.255.0:0
local port 0
ike 0:to_HQ:101: mode-cfg received UNITY_SPLIT_INCLUDE 0 10.1.101.0/255.255.255.0:0
local port 0
ike 0:to_HQ:101: mode-cfg received APPLICATION_VERSION 'FortiGate-100D
v6.0.3,build0200,181009 (GA)'
ike 0:to_HQ: mode-cfg add 11.11.11.1/255.255.255.252 to 'to_HQ'/58
ike 0:to_HQ: set oper up
ike 0:to_HQ: schedule auto-negotiate
ike 0:to_HQ:101: no pending Quick-Mode negotiations
ike shrank heap by 159744 bytes
ike 0:to_HQ:to_HQ: IPsec SA connect 42 173.1.1.1->11.101.1.1:0
ike 0:to_HQ:to_HQ: using existing connection
```



```

# ike 0:to_HQ:to_HQ: config found
ike 0:to_HQ:to_HQ: IPsec SA connect 42 173.1.1.1->11.101.1.1:500 negotiating
ike 0:to_HQ:101: cookie dff03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
ike 0:to_HQ:101:to_HQ:259: initiator selectors 0 0:0.0.0.0/0.0.0.0:0:0->0:0.0.0.0/0.0.0.0:0:0
ike 0:to_HQ:101: sent IKE msg (quick_ilsend): 173.1.1.1:500->11.101.1.1:500, len=620,
id=df03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Quick id=df03f1d4820222a/6c2caf4dcf5bab75:32f4cc01 len=444
ike 0:to_HQ:101:to_HQ:259: responder selectors 0:0.0.0.0/0.0.0.0:0->0:0.0.0.0/0.0.0.0:0:0
ike 0:to_HQ:101:to_HQ:259: my proposal:
ike 0:to_HQ:101:to_HQ:259: proposal id = 1:
ike 0:to_HQ:101:to_HQ:259:   protocol id = IPSEC_ESP:
ike 0:to_HQ:101:to_HQ:259:   PFS DH group = 14
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=SHA1
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_CBC (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=SHA1
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=SHA2_256
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_CBC (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=SHA2_256
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_GCM_16 (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_GCM_16 (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_CHACHA20_POLY1305 (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259: incoming proposal:
ike 0:to_HQ:101:to_HQ:259: proposal id = 1:
ike 0:to_HQ:101:to_HQ:259:   protocol id = IPSEC_ESP:
ike 0:to_HQ:101:to_HQ:259:   PFS DH group = 14
ike 0:to_HQ:101:to_HQ:259:   trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:   encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:   type = AUTH_ALG, val=SHA1
ike 0:to_HQ: schedule auto-negotiate
ike 0:to_HQ:101:to_HQ:259: replay protection enabled
ike 0:to_HQ:101:to_HQ:259: SA life soft seconds=42902.
ike 0:to_HQ:101:to_HQ:259: SA life hard seconds=43200.
ike 0:to_HQ:101:to_HQ:259: IPsec SA selectors #src=1 #dst=1
ike 0:to_HQ:101:to_HQ:259: src 0 4 0:0.0.0.0/0.0.0.0:0
ike 0:to_HQ:101:to_HQ:259: dst 0 4 0:0.0.0.0/0.0.0.0:0
ike 0:to_HQ:101:to_HQ:259: add IPsec SA: SPIs=ca64644b/747c10c9
ike 0:to_HQ:101:to_HQ:259: IPsec SA dec spi ca64644b key
16:D5C60F1A3951B288CE4DEC7E04D2119D auth 20:F872A7A26964208A9AA368A31AEFA3DB3F3780BC
ike 0:to_HQ:101:to_HQ:259: IPsec SA enc spi 747c10c9 key
16:97952E1594F718128D9D7B09400856EA auth 20:4D5E5BC45A9D5A9A4631E911932F5650A4639A37
ike 0:to_HQ:101:to_HQ:259: added IPsec SA: SPIs=ca64644b/747c10c9
ike 0:to_HQ:101:to_HQ:259: sending SNMP tunnel UP trap

```

```
ike 0:to_HQ:101: sent IKE msg (quick_i2send): 173.1.1.1:500->11.101.1.1:500, len=76,  
id=df03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
```

## SSL VPN

The following topics provide information about SSL VPN in FortiOS 7.2.6.

- [SSL VPN best practices on page 1876](#)
- [SSL VPN quick start on page 1879](#)
- [SSL VPN tunnel mode on page 1886](#)
- [SSL VPN web mode on page 1896](#)
- [SSL VPN authentication on page 1913](#)
- [SSL VPN to IPsec VPN on page 2004](#)
- [SSL VPN protocols on page 2011](#)
- [Configuring OS and host check on page 2014](#)
- [FortiGate as SSL VPN Client on page 2020](#)
- [Dual stack IPv4 and IPv6 support for SSL VPN on page 2029](#)
- [Disable the clipboard in SSL VPN web mode RDP connections on page 2040](#)
- [SSL VPN IP address assignments on page 2045](#)
- [Using SSL VPN interfaces in zones on page 2047](#)
- [SSL VPN troubleshooting on page 2050](#)
- [Restricting VPN access to rogue/non-compliant devices with Security Fabric](#)

## SSL VPN best practices

Securing remote access to network resources is a critical part of security operations. SSL VPN allows administrators to configure, administer, and deploy a remote access strategy for their remote workers. When not in use, SSL VPN can be disabled.

Choosing the correct mode of operation and applying the proper levels of security are integral to providing optimal performance and user experience, and keeping your user data safe.

The below guidelines outline selecting the correct SSL VPN mode for your deployment and employing best practices to ensure that your data are protected.

Information about SSL VPN throughput and maximum concurrent users is available on your device's datasheet; see [Next-Generation Firewalls Models and Specifications](#).

### Tunnel mode

In tunnel mode, the SSL VPN client encrypts all traffic from the remote client computer and sends it to the FortiGate through an SSL VPN tunnel over the HTTPS link between the user and the FortiGate.

The FortiGate establishes a tunnel with the client, and assigns a virtual IP (VIP) address to the client from a range reserved addresses. While the underlying protocols are different, the outcome is very similar to a IPsec VPN tunnel. All client traffic is encrypted, allowing the users and networks to exchange a wide range of traffic, regardless of the application or protocols.

Use this mode if you require:

- A wide range of applications and protocols to be accessed by the remote client.
- No proxying is done by the FortiGate.
- Straightforward configuration and administration, as traffic is controlled by firewall policies.
- A transparent experience for the end user. For example, a user that needs to RDP to their server only requires a tunnel connection; they can then use the usual client application, like Windows Remote Desktop, to connect.

Full tunneling forces all traffic to pass through the FortiGate (see [SSL VPN full tunnel for remote user on page 1886](#)). Split tunneling only routes traffic to the designated network through the FortiGate (see [SSL VPN split tunnel for remote user on page 1879](#)).

## Limitations

Tunnel mode requires that the [FortiClient VPN](#) client be installed on the remote end. The standalone FortiClient VPN client is free to use, and can accommodate SSL VPN and IPsec VPN tunnels. For supported operating systems, see the [FortiClient Technical Specifications](#).

## Web mode

Web-only mode provides clientless network access using a web browser with built-in SSL encryption. Users authenticate to FortiGate's SSL VPN Web Portal, which provides access to network services and resources, including HTTP/HTTPS, Telnet, FTP, SMB/CIFS, VNC, RDP, and SSH. When a user starts a connection to a server from the web portal, FortiOS proxies this communication with the server. All communication between the FortiGate and the user continues to be over HTTPS, regardless of the service that is being accessed.

The clipboard can be disabled for SSL VPN web mode RDP/VNC connections, see [Disable the clipboard in SSL VPN web mode RDP connections on page 2040](#).

Use this mode if you require:

- A clientless solution in which all remote services are access through a web portal.
- Tight control over the contents of the web portal.
- Limited services provided to the remote users.

## Limitations

- Multiple applications and protocols are not supported.
- VNC and RDP access might have limitations, such as certain shortcut keys not being supported.
- In some configurations RDP can consume a significant amount of memory and CPU time.
- Firewall performance might decrease as remote usage increases.
- Highly customized web pages might not render correctly.

## Security best practices

### Integrate with authentication servers

For networks with many users, integrate your user configuration with existing authentication servers through LDAP, RADIUS, or FortiAuthenticator.

By integrating with existing authentication servers, such as Windows AD, there is a lower change of making mistakes when configuring local users and user groups. Your administration effort is also reduces.

See [SSL VPN with LDAP user authentication on page 1914](#) for more information.

## Use a non-factory SSL certificate for the SSL VPN portal

Your certificate should identify your domain so that a remote user can recognize the identity of the server or portal that they are accessing through a trusted CA.

The default Fortinet factory self-signed certificates are provided to simplify initial installation and testing. If you use these certificates you are vulnerable to man-in-the-middle attacks, where an attacker spoofs your certificate, compromises your connection, and steals your personal information. It is highly recommended that you purchase a server certificate from a trusted CA to allow remote users to connect to SSL VPN with confidence. See [Procuring and importing a signed SSL certificate on page 2534](#) for more information.

Enabling the *Do not Warn Invalid Server Certificate* option on the client disables the certificate warning message, potentially allowing users to accidentally connect to untrusted servers. Disabling invalid server certificate warnings is not recommended.

## Use multi-factor authentication

Multi-factor authentication (MFA) ensures that the end-user is who they claim to be by requiring at least two factors - a piece of information that the user knows (password), and an asset that the user has (OTP). A third factor, something a user is (fingerprint or face), may be enabled as well. [FortiToken Mobile](#) is typically used for MFA.

FortiGate comes with two free FortiTokens, and more can be purchased from the [FortiToken Mobile iOS app](#) or through Fortinet partners.

See [SSL VPN with FortiToken mobile push authentication on page 1943](#) for more information.

2FA, a subset of MFA, can also be set up with email tokens. See [Email Two-Factor Authentication on FortiGate](#) for information.

## Deploy user certificates for remote SSL VPN users

This method of 2FA uses a user certificate as the second authentication factor. This is more secure, as it identifies the end user using a certificate. The configuration and administration of this solution is significantly more complicated, and requires administrators with advanced knowledge of the FortiGate and certificate deployment.

See [SSL VPN with certificate authentication on page 1925](#) for more information.

## Define your minimum supported TLS version and cipher suites

Minimum and maximum supported TLS version can be configured in the FortiGate CLI. The cipher algorithm can also be customized.

See [How to control the SSL version and cipher suite for SSL VPN](#) for more information.

## Properly administer firewall policies and profiles against only the access level required for the remote user

Users do not all require the same access. Access should only be granted after careful considerations. Typically, users are placed in groups, and each group is allowed access to limited resources.

Using SSL VPN realms simplifies defining the control structure for mapping users and groups to the appropriate resources.

See [SSL VPN multi-realm on page 1991](#) for more information.

## Disable SSL VPN

After the SSL VPN settings have been configured, SSL VPN can be disabled when not in use.

### To disable SSL VPN in the GUI:

1. Go to *VPN > SSL-VPN Settings*.
2. Disable *Enable SSL-VPN*.
3. Click *Apply*.

### To disable SSL VPN in the CLI:

```
config vpn ssl settings
    set status disable
end
```

## SSL VPN quick start


The following topics provide introductory instructions on configuring SSL VPN:

- [SSL VPN split tunnel for remote user on page 1879](#)
- [Connecting from FortiClient VPN client on page 1882](#)
- [Set up FortiToken multi-factor authentication on page 1884](#)
- [Connecting from FortiClient with FortiToken on page 1885](#)

## SSL VPN split tunnel for remote user

This is a sample configuration of remote users accessing the corporate network and internet through an SSL VPN by tunnel mode using FortiClient but accessing the Internet without going through the SSL VPN tunnel.

### Sample topology

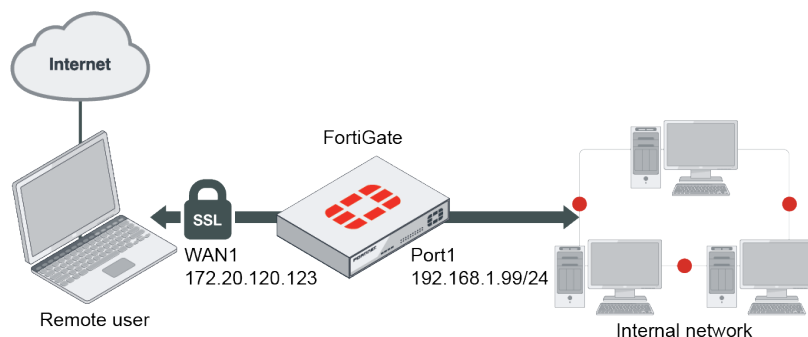

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot explicitly use an FQDN or an address group that includes an FQDN. To use an FQDN, leave the routing address blank and apply the FQDN as the destination address of the firewall policy.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click *OK*.
  - e. Go to *Policy & Objects > Address* and create an address for internal subnet *192.168.1.0*.
2. Configure user and user group.
  - a. Go to *User & Authentication > User Definition* to create a local user *sslvpnuser1*.
  - b. Go to *User & Authentication > User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to create a tunnel mode only portal *my-split-tunnel-portal*.
  - b. Enable *Tunnel Mode* and select one of the *Split tunneling* settings. See [Split tunneling settings on page 1895](#) for more information.
  - c. Select *Routing Address Override* to define the destination network (usually the corporate network) that will be routed through the tunnel.



Leave *Routing Address Override* undefined to use the destination in the respective firewall policies.

- d. Select *Source IP Pools* for users to acquire an IP address when connecting to the portal. There is always a default pool available if you do not create your own.
4. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. For *Listen on Interface(s)*, select *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Choose a certificate for *Server Certificate*. The default is *Fortinet\_Factory*.
  - e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-split-tunnel-portal*.
5. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn split tunnel access*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Choose an *Outgoing Interface*. In this example, *port1*.
  - e. Set the *Source* to *all* and group to *sslvpngroup*.

- f. In this example, the *Destination* is *all*.
- g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
- h. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure user and user group.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "sslvpnuser1"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "my-split-tunnel-portal"
        set tunnel-mode enable
        set split-tunneling enable
        set split-tunneling-routing-address "192.168.1.0"
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
    next
end
```

## 5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "my-split-tunnel-portal"
        next
    next
end
```

## 6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client.

```
config firewall policy
    edit 1
        set name "sslvpn split tunnel access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

## Connecting from FortiClient VPN client


For FortiGate administrators, a free version of FortiClient VPN is available which supports basic IPsec and SSL VPN and does not require registration with EMS. This version does not include central management, technical support, or some advanced features.

### Downloading and installing the standalone FortiClient VPN client

You can download the free VPN client from [FNDN](#) or [FortiClient.com](#).

When the free VPN client is run for the first time, it displays a disclaimer. You cannot configure or create a VPN connection until you accept the disclaimer and click *I accept*:




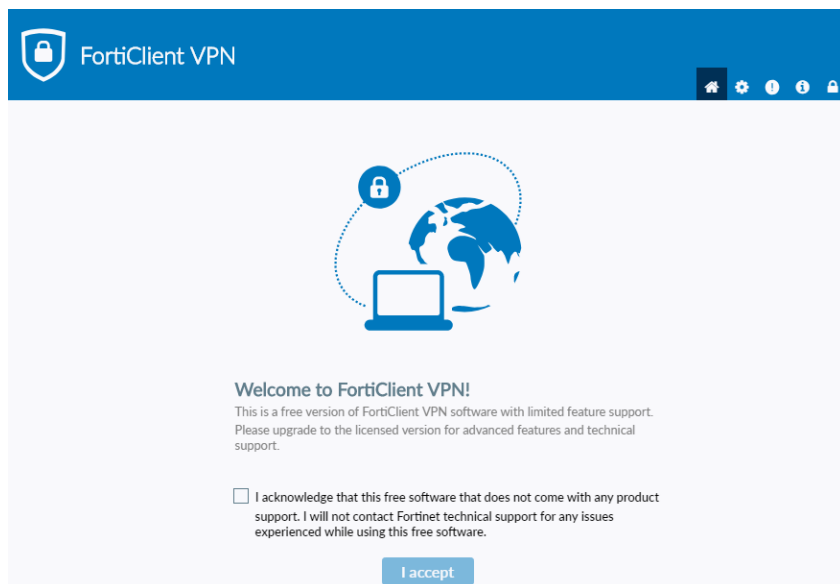

## Configuring an SSL VPN connection

### To configure an SSL VPN connection:

1. On the *Remote Access* tab, click on the settings icon and then *Add a New Connection*.

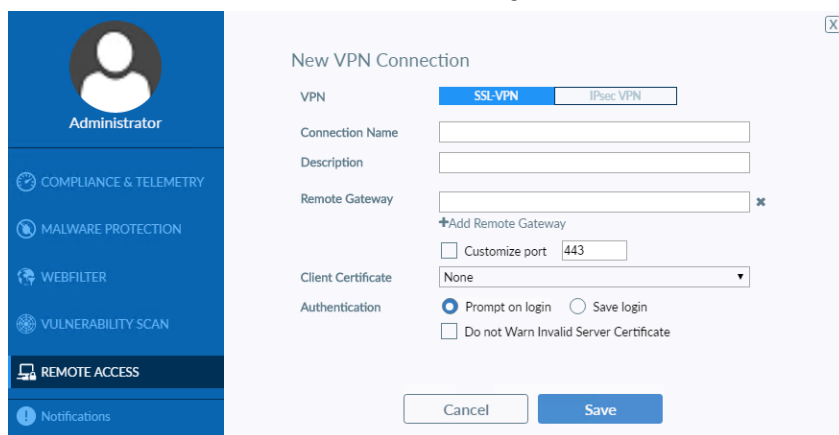

2. Select *SSL-VPN*, then configure the following settings:

<b>Connection Name</b>	SSLVPNtoHQ
<b>Description</b>	(Optional)
<b>Remote Gateway</b>	172.20.120.123
<b>Customize port</b>	10443
<b>Client Certificate</b>	Select <i>Prompt on connect</i> or the certificate from the dropdown list.
<b>Authentication</b>	Select <i>Prompt on login</i> for a prompt on the connection screen

3. Click *Save* to save the VPN connection.

## Connecting to SSL VPN

### To connect to SSL VPN:

1. On the *Remote Access* tab, select the VPN connection from the dropdown list.  
Optionally, you can right-click the FortiTray icon in the system tray and select a VPN configuration to connect.
2. Enter your username and password.
3. Click the *Connect* button.
4. After connecting, you can now browse your remote network. Traffic to 192.168.1.0 goes through the tunnel, while other traffic goes through the local gateway. FortiClient displays the connection status, duration, and other relevant information.
5. Click the *Disconnect* button when you are ready to terminate the VPN session.

## Checking the SSL VPN connection

### To check the SSL VPN connection using the GUI:

1. On the FortiGate, go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
2. On the FortiGate, go to *Log & Report > Forward Traffic* to view the details of the SSL entry.

### To check the tunnel log in using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
  Index   User           Auth Type   Timeout   From           HTTP in/out   HTTPS in/out
  0       sslvpnuser1    1 (1)      291       10.1.100.254   0/0           0/0

SSL VPN sessions:
  Index   User           Source IP   Duration   I/O Bytes      Tunnel/Dest IP
  0       sslvpnuser1    10.1.100.254  9          22099/43228    10.212.134.200
```

## Set up FortiToken multi-factor authentication

This configuration adds multi-factor authentication (MFA) to the split tunnel configuration ([SSL VPN split tunnel for remote user on page 1879](#)). It uses one of the two free mobile FortiTokens that is already installed on the FortiGate.

### To configure MFA using the GUI:

1. Configure a user and user group:
  - a. Go to *User & Authentication > User Definition* and edit local user *sslvpnuser1*.
  - b. Enable *Two-factor Authentication*.
  - c. For *Authentication Type*, click *FortiToken* and select one mobile *Token* from the list.
  - d. Enter the user's *Email Address*.
  - e. Enable *Send Activation Code* and select *Email*.
  - f. Click *Next* and click *Submit*.
2. Activate the mobile token.  
When a FortiToken is added to user *sslvpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

## To configure MFA using the CLI:

### 1. Configure a user and user group:

```
config user local
  edit "sslvpnuser1"
    set type password
    set two-factor fortitoken
    set fortitoken <select mobile token for the option list>
    set email-to <user's email address>
    set passwd <user's password>
  next
end
config user group
  edit "sslvpngroup"
    set member "sslvpnuser1"
  next
end
```


### 2. Activate the mobile token.

When a FortiToken is added to user *sslvpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.


## Connecting from FortiClient with FortiToken

### To activate your FortiToken:


1. On your device, open FortiToken Mobile. If this is your first time opening the application, it may prompt you to create a PIN for secure access to the application and tokens.

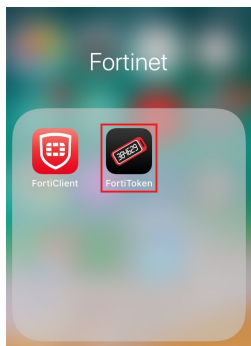

 2. You should have received your notification via email, select + and use the device camera to scan the token QR code in your email.



3. FortiToken Mobile provisions and activates your token and generates token codes immediately. To view the OTP's digits, select the eye icon. After you open the application, FortiToken Mobile generates a new six-digit OTP every 30 seconds.

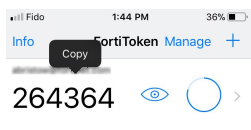

**To connect to SSL VPN:**

1. On the *Remote Access* tab, select the VPN connection from the dropdown list.  
Optionally, you can right-click the FortiTray icon in the system tray and select a VPN configuration to connect.
2. Enter your username and password.
3. Click the *Connect* button.
4. A Token field will appear, prompting you for the FortiToken code. Enter the FortiToken code from your Mobile device.
5. After connecting, you can now browse your remote network. Traffic to 192.168.1.0 goes through the tunnel, while other traffic goes through the local gateway. FortiClient displays the connection status, duration, and other relevant information.
6. Click the *Disconnect* button when you are ready to terminate the VPN session.

## SSL VPN tunnel mode


The following topics provide instructions on configuring SSL VPN tunnel mode:

- [SSL VPN full tunnel for remote user](#)
- [SSL VPN tunnel mode host check](#)
- [SSL VPN split DNS on page 1893](#)
- [Split tunneling settings on page 1895](#)

### SSL VPN full tunnel for remote user

This is a sample configuration of remote users accessing the corporate network and internet through an SSL VPN by tunnel mode using FortiClient.

#### Sample topology

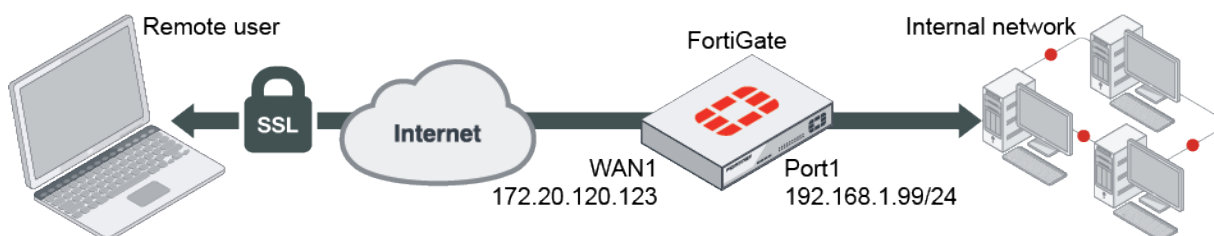

#### Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

**To configure SSL VPN using the GUI:**

1. Configure the interface and firewall address:
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.

- c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
2. Configure user and user group:
  - a. Go to *User & Authentication > User Definition* to create a local user *sslvpnuser1*.
  - b. Go to *User & Authentication > User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal:
  - a. Go to *VPN > SSL-VPN Portals* to create a tunnel mode only portal *my-full-tunnel-portal*.
  - b. Disable *Split Tunneling*.
4. Configure SSL VPN settings:
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. For *Listen on Interface(s)*, select *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Choose a certificate for *Server Certificate*. The default is *Fortinet\_Factory*.
  - e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-full-tunnel-portal*.
5. Configure SSL VPN firewall policies to allow remote user to access the internal network:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Set *Name* to *sslvpn tunnel mode access*.
  - c. Set *Incoming Interface* to *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set *Outgoing Interface* to *port1*.
  - e. Set the *Source Address* to *all* and *User* to *sslvpngroup*.
  - f. Set *Destination* to *all*, *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - g. Click OK.
  - h. Click *Create New*.
  - i. Set *Name* to *sslvpn tunnel mode outgoing*.
  - j. Configure the same settings as the previous policy, except set *Outgoing Interface* to *wan1*.
  - k. Click OK.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure the internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
```

**3. Configure user and user group.**

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "sslvpnuser1"
    next
end
```

**4. Configure SSL VPN web portal and predefine RDP bookmark for windows server.**

```
config vpn ssl web portal
    edit "my-full-tunnel-portal"
        set tunnel-mode enable
        set split-tunneling disable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
    next
end
```

**5. Configure SSL VPN settings.**

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "my-full-tunnel-portal"
        next
    end
end
```

**6. Configure SSL VPN firewall policies to allow remote user to access the internal network. Traffic is dropped from internal to remote client.**

```
config firewall policy
    edit 1
        set name "sslvpn tunnel mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
```

```

        set name "sslvpn tunnel mode outgoing"
        set srcintf "ssl.root"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```


### To see the results:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection:
  - Set *VPN Type* to *SSL VPN*.
  - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Use the credentials you've set up to connect to the SSL VPN tunnel.
7. After connection, all traffic except the local subnet will go through the tunnel *FGT*.
8. Go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
9. On the FortiGate, go to *Log & Report > Forward Traffic* and view the details for the SSL entry.

## SSL VPN tunnel mode host check

This is a sample configuration of remote users accessing the corporate network through an SSL VPN by tunnel mode using FortiClient with AV host check.

### Sample topology

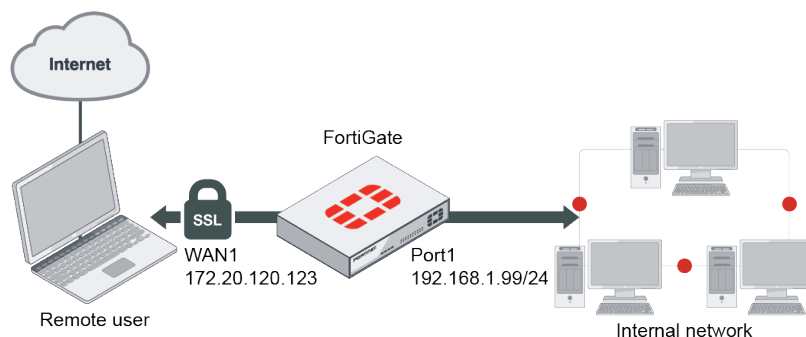

### Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot explicitly use an FQDN or an address group that includes an FQDN. To use an FQDN, leave the routing address blank and apply the FQDN as the destination address of the firewall policy.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
  - a. Go to *User & Authentication > User Definition* to create a local user *sslvpnuser1*.
  - b. Go to *User & Authentication > User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to create a tunnel mode only portal *my-split-tunnel-portal*.
  - b. Enable *Tunnel Mode* and select one of the *Split tunneling* settings. See [Split tunneling settings on page 1895](#) for more information.
  - c. Select *Routing Address Override*.
  - d. Select *Source IP Pools* for users to acquire an IP address when connecting to the portal. There is always a default pool available if you do not create your own.
4. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. For *Listen on Interface(s)*, select *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Choose a certificate for *Server Certificate*.



It is **HIGHLY** recommended that you acquire a signed certificate for your installation. Please review the [SSL VPN best practices on page 1876](#) and learn how to [Procuring and importing a signed SSL certificate on page 2534](#).

- e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-split-tunnel-portal*.
5. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn tunnel access with av check*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Choose an *Outgoing Interface*. In this example, *port1*.
  - e. Set the *Source* to *all* and group to *sslvpngroup*.
  - f. In this example, the *Destination* is *all*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Click OK.
6. Use CLI to configure SSL VPN web portal to enable the host to check for compliant antivirus software on the user's computer.



```
config vpn ssl web portal
  edit my-split-tunnel-access
    set host-check av
  next
end
```

### To configure SSL VPN using the CLI:

#### 1. Configure the interface and firewall address.

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
  next
end
```

#### 2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
  next
end

config firewall address
  edit "192.168.1.0"
    set subnet 192.168.1.0 255.255.255.0
  next
end
```

#### 3. Configure user and user group.

```
config user local
  edit "sslvpnuser1"
    set type password
    set passwd your-password
  next
end

config user group
  edit "sslvpngroup"
    set member "vpnuser1"
  next
end
```

#### 4. Configure SSL VPN web portal.

```
config vpn ssl web portal
  edit "my-split-tunnel-portal"
    set tunnel-mode enable
    set split-tunneling enable
    set split-tunneling-routing-address "192.168.1.0"
    set ip-pools "SSLVPN_TUNNEL_ADDR1"
  next
end
```

## 5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "my-split-tunnel-portal"
        next
    end
end
```

## 6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

## 7. Configure SSL VPN web portal to enable the host to check for compliant antivirus software on the user's computer:

```
config vpn ssl web portal
    edit my-split-tunnel-access
        set host-check av
    next
end
```

### To see the results:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection:
  - Set *VPN Type* to *SSL VPN*.
  - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Use the credentials you've set up to connect to the SSL VPN tunnel.  
If the user's computer has antivirus software, a connection is established; otherwise FortiClient shows a compliance warning.
7. After connection, traffic to *192.168.1.0* goes through the tunnel. Other traffic goes through local gateway.

8. On the FortiGate, go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
9. On the FortiGate, go to *Log & Report > Forward Traffic* and view the details for the SSL entry.

## SSL VPN split DNS

SSL VPN clients in tunnel mode can enable the following settings to split DNS traffic:

- Resolve DNS requests for a specific domain, or suffix, using specific DNS servers.
- Resolve all other DNS requests using a DNS server configured in the SSL VPN settings. This DNS server can be the same as the client system DNS server, or another DNS server.

Administrators typically configure SSL VPN clients to use DNS servers that are behind the FortiGate on the internal network. This will require DNS traffic to traverse the SSL VPN tunnel.

### Configuring SSL VPN DNS servers to use DNS suffixes

The `dns-suffix` setting under `config vpn ssl settings` is used to specify domains for SSL VPN DNS servers in the tunnel mode configuration. This setting can only be configured in the CLI.

The DNS servers and suffixes configured under `config vpn ssl settings` have a global scope, and apply only to SSL VPN portals that do not have their own DNS server configuration.

#### To configure DNS servers for all SSL VPN portals:

```
config vpn ssl settings
    set dns-suffix domain1.com
    set dns-server1 10.10.10.10
    set dns-server2 10.10.10.11
end
```

SSL VPN portals configured with their own DNS servers and suffixes under `config vpn ssl web portal override` the settings configured under `config vpn ssl settings`.

#### To configure DNS servers for a specific SSL VPN portal in split tunnel mode:

```
config vpn ssl web portal
    edit "full-access"
        set dns-suffix domain2.com
        set dns-server1 10.10.10.12
        set dns-server2 10.10.10.13
        set split-tunneling enable
    next
end
```



Only DNS requests that match DNS suffixes use the DNS servers configured in the VPN. Due to iOS limitations, the DNS suffixes are not used for searching as in Windows. Using short (non-FQDN) names may not be possible.


### Configuring SSL VPN DNS servers for tunnel mode using DNS split tunneling

The DNS split tunneling setting can be used to configure domains that apply to a specific SSL VPN portal by specifying primary and secondary DNS servers to be used to resolve specific suffixes. This setting can be configured in the GUI

and CLI. In the following example, DNS split tunneling is configured on the default tunnel-access portal with two DNS entries.


### To configure DNS split tunneling in the GUI:

1. Go to **VPN > SSL-VPN Portals** and double-click *tunnel-access* to edit the portal.
2. In the *Tunnel Mode Client Options* section, enable *DNS Split Tunneling*.
3. In the *Split DNS* table, click *Create New*. The *New DNS Entry* pane opens.
4. Configure the first DNS entry:
  - a. For *Domains*, enter *domain1.com*.
  - b. Set the *Primary DNS Server* to *10.10.10.10*.
  - c. Set the *Secondary DNS Server* to *10.10.10.11*.

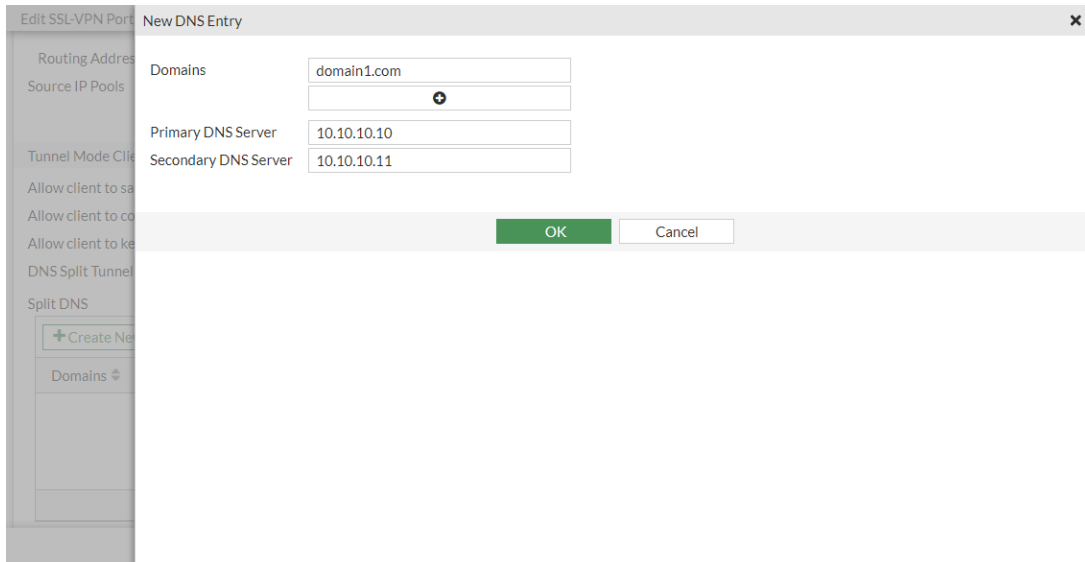

- d. Click *OK*.
5. Configure the second DNS entry:
    - a. Click *Create New*.
    - b. For *Domains*, enter *domain2.com*.
    - c. Set the *Primary DNS Server* to *10.10.10.12*.
    - d. Set the *Secondary DNS Server* to *10.10.10.13*.

e. Click OK.

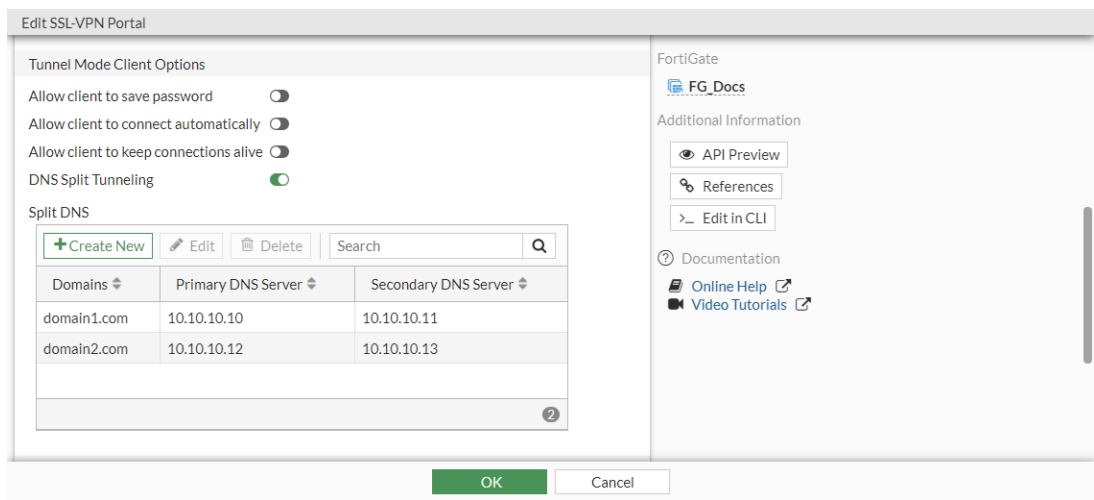

6. Click OK to save the portal settings.

**To configure DNS split tunneling in the CLI:**

```
config vpn ssl web portal
  edit "tunnel-access"
    set dns-suffix "domain0.com"
    set dns-server1 10.10.10.8
    set dns-server2 10.10.10.9
    set split-tunneling enable
    config split-dns
      edit 1
        set domains "domain1.com"
        set dns-server1 10.10.10.10
        set dns-server2 10.10.10.11
      next
      edit 2
        set domains "domain2.com"
        set dns-server1 10.10.10.12
        set dns-server2 10.10.10.13
      next
    end
  next
end
```

**Split tunneling settings**

SSL VPN clients in tunnel mode can choose between the following settings to split the traffic:

Option	Description
<i>Tunnel mode</i>	<ul style="list-style-type: none"><li><i>Disabled</i>: All client traffic will be directed over the SSL-VPN tunnel.</li><li><i>Enabled Based on Policy Destination</i>: Only client traffic in which the destination matches the destination of the configured firewall policies will be directed over the SSL-VPN tunnel.</li></ul>

Option	Description
	<ul style="list-style-type: none"> <li>• <i>Enabled for Trusted Destinations</i>: Only client traffic which does not match explicitly trusted destination will be directed over the SSL-VPN tunnel.</li> </ul>

### To configure split tunneling in the GUI:

1. Go to *VPN > SSL-VPN Portals*.
2. Click *Create New* or *Edit* an existing portal.
3. Enable *Tunnel Mode* and select one of the *Split tunneling* settings.
4. Select *Routing Address Override* to define the destination network (usually the corporate network) that will be routed through the tunnel.



Leave *Routing Address Override* undefined to use the destination in the respective firewall policies.

5. Select *Source IP Pools* for users to acquire an IP address when connecting to the portal. There is always a default pool available if you do not create your own.
6. Configure other necessary parameters as required.
7. Click *OK*.

### To configure split tunneling in the CLI:

```
config vpn ssl web portal
  edit "tunnel-access"
    set tunnel-mode enable
    set split-tunneling {enable | disable}
    set split-tunneling-routing-negate {enable | disable}
    set split-tunneling-routing-address <name1> <name2> ...
    set ip-pools <name1> <name2> ...
  next
end
```



The command `split-tunneling-routing-negate` is only available on the CLI after `split-tunneling` is enabled.

`split-tunneling-routing-negate` is disabled by default and corresponds to the *Enabled Based on Policy Destination* option on the GUI.

`split-tunneling-routing-negate enable` corresponds to the *Enabled for Trusted Destinations* option on the GUI.


## SSL VPN web mode

A user must have valid username and password credentials to log in to an SSL VPN web portal in addition to other multi-factor authentication components that may be configured, such as FortiTokens.

Web-only mode provides clientless network access using a web browser with built-in SSL encryption. Use this mode if you require:

- A clientless solution where all remote services are accessed through a web portal
- Tight control over the contents of the web portal
- Limited services provided to the remote users

After logging in, the web portal page appears:

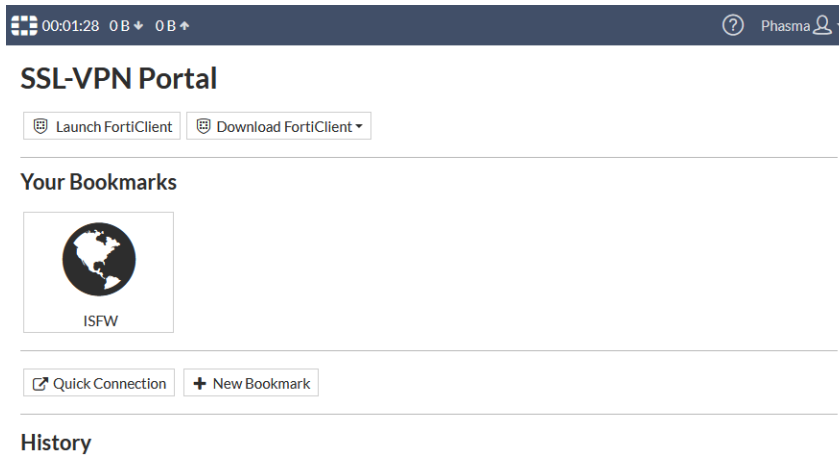

A web portal includes the following features:

- The session information is displayed in the left corner of the top banner. This includes the elapsed time since logging in, and the volume of inbound and outbound HTTP and HTTPS traffic.
- The *Launch FortiClient* button appears if FortiClient is installed. Clicking the button opens the FortiClient *Remote Access* tab, but FortiClient does not automatically create a VPN connection based on the web mode connection information.
- The *Download FortiClient* button provides access to download the FortiClient application for various operating systems.
- The *Bookmarks* widget includes links to network resources (administrator-defined bookmarks), and users can create their own bookmarks.
- The *Quick Connection* button enables a connection to network resources without using or creating a bookmark.

The following topics provide information about SSL VPN web mode:

- [Web portal configurations on page 1897](#)
- [Quick Connection tool on page 1901](#)
- [SSL VPN bookmarks on page 1902](#)
- [SSL VPN web mode for remote user on page 1904](#)
- [Customizing the RDP display size on page 1908](#)
- [Showing the SSL VPN portal login page in the browser's language on page 1911](#)

## Web portal configurations

An SSL VPN web portal enables users to access network resources through a secure channel using a web browser. System administrators can configure log in privileges for users and which network resources are available to these users. The portal configuration determines what the user sees when they log in to the portal. Both system administrators and the users have the ability to customize the SSL VPN portal.

There are three predefined default web portal configurations available:

- full-access: connecting clients can either access protected resources through the SSL VPN web portal, or use FortiClient to connect through tunnel mode.
- tunnel-access: connecting clients can only access protected resources with FortiClient connecting through tunnel mode.
- web-access: connecting clients can only access protected resources through the SSL VPN web portal.

Custom web portals can also be configured.

### To configure a custom web portal:

1. Go to *VPN > SSL-VPN Portals* and click *Create New*.
2. Configure the following settings as needed:

GUI option	Description
<i>Name</i>	Enter the portal name.
<i>Limit Users to One SSL-VPN Connection at a Time</i>	This option is disabled by default. When enabled, once a user logs in to the portal, they cannot go to another system and log in with the same credentials again.
<i>Tunnel Mode</i>	
<i>Split tunneling</i>	There are three options: <ul style="list-style-type: none"> <li>• <i>Disabled</i>: all client traffic will be directed over the SSL VPN tunnel.</li> <li>• <i>Enabled Based on Policy Destination</i>: only client traffic where the destination matches the destination of the configured firewall policies will be directed over the SSL VPN tunnel.</li> <li>• <i>Enabled for Trusted Destinations</i>: only client traffic that does not match explicitly trusted destinations will be directed over the SSL VPN tunnel.</li> </ul>
<i>Routing Address Override</i>	When <i>Split tunneling</i> is set to <i>Enabled Based on Policy Destination</i> , the IPv4 firewall address selected overrides the firewall policy destination addresses to control split tunnel access.  When <i>Split tunneling</i> is set to <i>Enabled for Trusted Destinations</i> , the IPv4 firewall address selected becomes a trusted destination that will not be tunneled through SSL VPN. All other destinations will be tunneled through SSL VPN.
<i>Source IP Pools</i>	Select an IP pool for users to acquire an IP address when connecting to the portal.
<i>IPv6 Tunnel Mode</i>	When enabled, these settings determine how tunnel mode clients are assigned IPv6 addresses.
<i>IPv6 split tunneling</i>	The same three options are available as in <i>Tunnel Mode</i> .



GUI option	Description
<i>IPv6 Routing Address Override</i>	<p>When <i>Split tunneling</i> is set to <i>Enabled Based on Policy Destination</i>, the IPv6 firewall address selected overrides the firewall policy destination addresses to control split tunnel access.</p> <p>When <i>Split tunneling</i> is set to <i>Enabled for Trusted Destinations</i>, the IPv6 firewall address selected becomes a trusted destination that will not be tunneled through SSL VPN. All other destinations will be tunneled through SSL VPN.</p>
<i>Source IPv6 Pools</i>	Select an IP pool for users to acquire an IP address when connecting to the portal.
<i>Tunnel Mode Client Options</i>	The following options affect how FortiClient behaves when connected to the VPN tunnel.
<i>Allow client to save password</i>	When enabled and if the user selects this option, their password is stored on their computer and will automatically populate each time they connect to the VPN.
<i>Allow client to connect automatically</i>	When enabled and if the user selects this option, when FortiClient launches (such as after a reboot or system start up), FortiClient will automatically attempt to connect to the VPN.
<i>Allow client to keep connections alive</i>	When enabled and if the user selects this option, FortiClient will try to reconnect once it detects that the VPN connection is unexpectedly down (not manually disconnected by the user).
<i>DNS Split Tunneling</i>	When enabled, the <i>Split DNS</i> table is visible, where new DNS entries can be created. See <a href="#">SSL VPN split DNS on page 1893</a> for more details.
<i>Host Check</i>	When enabled, the type of host checking performed on endpoints can be configured (see <a href="#">Configuring OS and host check on page 2014</a> ).
<i>Type</i>	<p>There are three options:</p> <ul style="list-style-type: none"> <li>• <i>Realtime AntiVirus</i>: check for antivirus software recognized by the Windows Security Center.</li> <li>• <i>Firewall</i>: check for firewall software recognized by the Windows Security Center.</li> <li>• <i>Enable both</i>: check for antivirus and firewall software recognized by the Windows Security Center.</li> </ul>

GUI option	Description
<i>Restrict to Specific OS Versions</i>	When enabled, access to certain operating systems can be denied or forced to check for an update. By default, all operating systems in the table are allowed (see <a href="#">Configuring OS and host check on page 2014</a> ).
<i>Web Mode</i>	Enable this option to configure the web portal settings.
<i>Portal Message</i>	Enter a message that appears at the top of the web portal screen (default = <i>SSL-VPN Portal</i> ).
<i>Theme</i>	Select a color theme from the dropdown.
<i>Show Session Information</i>	Enable to display session information in the top banner of the web portal (username, amount of time logged in, and traffic statistics).
<i>Show Connection Launcher</i>	Enable to display the <i>Quick Connection</i> button.
<i>Show Login History</i>	Enable to display the user's login history ( <i>History</i> ).
<i>User Bookmarks</i>	Enable to allow users to add their own bookmarks ( <i>New Bookmark</i> ).
<i>Rewrite Content IP/UI/</i>	Enable contents rewrite for URIs containing IP-address/ui/.
<i>RDP/VNC clipboard</i>	Enable to support RDP/VPC clipboard functionality.
<i>Predefined Bookmarks</i>	Use the table to create and edit predefined bookmarks. See <a href="#">To create a predefined administrator bookmark in FortiOS: on page 1904</a> for more details.
<i>FortiClient Download</i>	Enable this option to display the <i>Download FortiClient</i> button.
<i>Download Method</i>	Select either <i>Direct</i> or <i>SSL-VPN Proxy</i> as the method to download FortiClient.
<i>Customize Download Location</i>	Enable to configure a custom download location for <i>Windows</i> or <i>Mac</i> .

### 3. Click OK.



By default, the browser's language preference is automatically detected and used by the SSL VPN portal login page. The system language can still be used by changing the settings on the *SSL-VPN Settings* page of the GUI, or disabling browser-language detection in the CLI. See [Showing the SSL VPN portal login page in the browser's language on page 1911](#) for more details.

## Quick Connection tool

The Quick Connection tool allows a user to connect to a resource when it is not a predefined bookmark. The tool allows the user to specify the type of server and the URL or IP address of the host.

### To connect to a resource:

1. Select the connection type.
2. Enter the required information, such as the IP address or URL of the host.
3. Click *Launch*.



In a VNC session, to send Ctrl+Alt+Del, press *F8* then select *Send Ctrl-Alt-Delete*.

## RDP sessions



Some Windows servers require that a specific security be set for RDP sessions, as opposed to the standard RDP encryption security. For example, Windows 10 requires that TLS be used.

You can specify a location option if the remote computer does not use the same keyboard layout as your computer by appending it to the *Host* field using the following format: `<IP address> -m <locale>`

The available options are:

ar	Arabic	fr-be	Belgian French	no	Norwegian
da	Danish	fr-ca	Canadian French	pl	Polish
de	German	fr-ch	Swiss French	pt	Portuguese
de-ch	Swiss German	hr	Croatian	pt-br	Brazilian Portuguese
en-gb	British English	hu	Hungarian	ru	Russian

en-uk	UK English	it	Italian	sl	Slovenian
en-us	US English	ja	Japanese	sv	Sudanese
es	Spanish	lt	Lithuanian	tk	Turkmen
fi	Finnish	lv	Latvian	tr	Turkish
fr	French	mk	Macedonian		

## SSL VPN bookmarks

The *Bookmarks* widget displays bookmarks configured by administrators and users. Administrator bookmarks cannot be edited, and they are configured in FortiOS. Users can add, edit, and delete their own bookmarks within the web portal.


The FortiGate forwards client requests to servers on the internet or internal network. To use the web portal applications, add the URL, IP address, or name of the server application to the *Bookmarks* list. Once a bookmark is created, click the bookmark icon to initiate a session.

00:01:28 0 B + 0 B + ? Phasma

### SSL-VPN Portal

Launch FortiClient
Download FortiClient

#### Your Bookmarks


  
ISFW

Quick Connection
+ New Bookmark

#### History

2022/08/12 17:40:49	192.168.2.1	5 minute(s) and 7 second(s)
2022/08/12 17:25:08	192.168.2.1	12 minute(s) and 11 second(s)
2022/08/12 14:08:51	192.168.2.1	5 minute(s) and 37 second(s)
2022/08/12 14:07:41	192.168.2.1	36 second(s)
2022/08/12 13:30:42	192.168.2.1	5 minute(s) and 10 second(s)



To access a destination without adding a bookmark to the *Your Bookmarks* list, use the Quick Connection tool. See [Quick Connection tool on page 1901](#) for more details.

## Configuring bookmarks

The following table summarizes which options can be configured based on the bookmark type in the SSL VPN web portal:

Setting	HTTP/ HTTPS	FTP	SMB	SFTP	RDP	VNC	SSH	Telnet
URL	✓							
Folder		✓	✓	✓				
Host					✓	✓	✓	✓
Domain			✓					
Port					✓	✓		
Description	✓	✓	✓	✓	✓	✓	✓	✓
Password						✓		
SSO Credentials	✓	✓	✓	✓				
SSL-VPN Login	✓	✓	✓	✓				
SSO Form Data	✓							
Form Key	✓							
Form Value	✓							
Alternative	✓	✓	✓	✓				
Username	✓	✓	✓	✓				
Password	✓	✓	✓	✓				
Use SSL-VPN Credentials					✓			
Username					✓			
Password					✓			
Color Depth Per Pixel*					✓			
Screen Width*					✓			
Screen Height*					✓			
Keyboard Layout					✓			
Security					✓			
Preconnection ID					✓			
Preconnection Blob					✓			
Load Balancing Information					✓			
Restricted Admin Mode					✓			

\* = This setting can only be configured by an administrator.

**To create a user bookmark in the web portal:**

1. In the *Your Bookmarks* section, click *New Bookmark*.
2. Enter a *Name*.
3. Select a bookmark type and configure the type-based settings.
4. Click *Save*.

**To create a predefined administrator bookmark in FortiOS:**

1. Go to *VPN > SSL-VPN Portals* and double-click a portal to edit it.
2. In the *Predefined Bookmarks* table, click *Create New*. The *New Bookmark* pane appears.
3. Enter a *Name*.
4. Select a bookmark type and configure the type-based settings.
5. Click *OK* to save the bookmark settings.
6. Click *OK* to save the portal settings.

## Configuring group-based SSL VPN bookmarks

Administrators can add bookmarks for users in the same user group. SSL VPN will only output the matched group name entry to the client. This setting can only be configured in the CLI.

**To add bookmarks for users in the same user group:**

1. Enable group bookmarks in the web portal settings:

```
config vpn ssl web portal
  edit <name>
    set user-group-bookmark enable
  next
end
```


2. Configure the user group bookmark:

```
config vpn ssl web user-group-bookmark
  edit <name>
    config bookmarks
      edit <name>
        ...
      next
    end
  next
end
```

## SSL VPN web mode for remote user

This is a sample configuration of remote users accessing the corporate network through an SSL VPN by web mode using a web browser.

## Sample topology

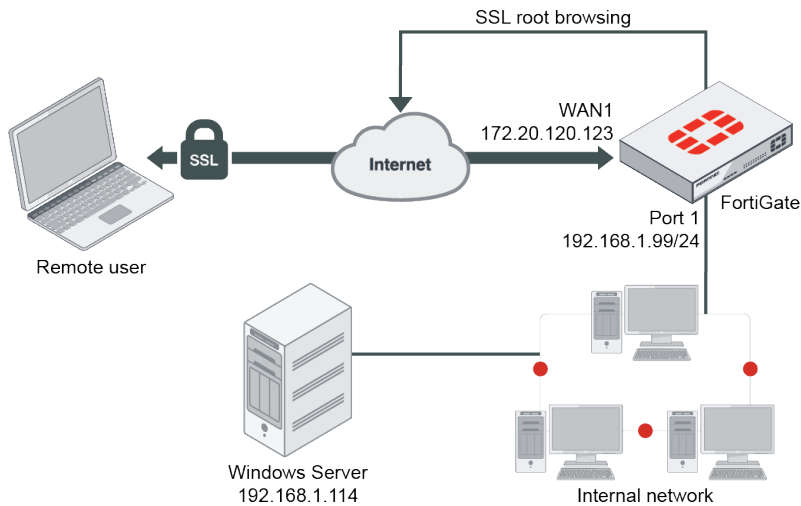

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click *OK*.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
  - a. Go to *User & Authentication > User Definition* to create a local user *sslvpnuser1*.
  - b. Go to *User & Authentication > User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to create a web mode only portal *my-web-portal*.
  - b. Set *Predefined Bookmarks for Windows server* to type *RDP*.
4. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. For *Listen on Interface(s)*, select *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Choose a certificate for *Server Certificate*.



It is **HIGHLY** recommended that you acquire a signed certificate for your installation. Please review the [SSL VPN best practices on page 1876](#) and learn how to [Procuring and importing a signed SSL certificate on page 2534](#).

- e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *web-access*.
- f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-Web-portal*.

5. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn web mode access*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Choose an *Outgoing Interface*. In this example, *port1*.
  - e. Set the *Source* to *all* and group to *sslvpngroup*.
  - f. In this example, the *Destination* is the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
  next
end
```

2. Configure the internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
  next
end

config firewall address
  edit "192.168.1.0"
    set subnet 192.168.1.0 255.255.255.0
  next
end
```

3. Configure user and user group.

```
config user local
  edit "sslvpnuser1"
    set type password
    set passwd your-password
  next
end

config user group
  edit "sslvpngroup"
    set member "vpnuser1"
  next
end
```

4. Configure SSL VPN web portal and predefine RDP bookmark for windows server.

```
config vpn ssl web portal
  edit "my-web-portal"
    set web-mode enable
    config bookmark-group
```



```

        edit "gui-bookmarks"
        config bookmarks
        edit "Windows Server"
        set apptype rdp
        set host "192.168.1.114"
        set port 3389
        set logon-user "your-windows-server-user-name"
        set logon-password your-windows-server-password
        next
    end
next
end
next
end

```

##### 5. Configure SSL VPN settings.

```

config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
        set groups "sslvpngroup"
        set portal "my-web-portal"
        next
    end
end

```

##### 6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client

```

config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end

```

##### To see the results:

1. In a web browser, log into the portal <https://172.20.120.123:10443> using the credentials you've set up.
2. In the portal with the predefined bookmark, select the bookmark to begin an RDP session. If there are no predefined bookmarks, the Quick Connection tool can be used; see [Quick Connection tool on page 1901](#) for more information.
3. Go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
4. Go to *Log & Report > Forward Traffic* to view the details for the SSL entry.

## Customizing the RDP display size

The RDP display size (width and height settings) can be customized for SSL VPN web mode when creating a new connection or bookmark. Administrators can also specify the display size when preconfiguring bookmarks.

### To configure the default window dimensions in an RDP web portal:


```
config vpn ssl web portal
  edit <name>
    set default-window-width <integer>
    set default-window-height <integer>
  next
end
```

default-window-width <integer>	Set the default RDP screen width, in pixels (0 - 65535, default = 1024).
default-window-height <integer>	Set the default RDP screen height, in pixels (0 - 65535, default = 768).

### Example

In this example, a user has a monitor with a resolution of 1920 × 1080. The user creates two bookmarks for RDP servers with different resolutions:

- Windows 7: 1360 × 768
- Ubuntu 20.04: 800 × 600

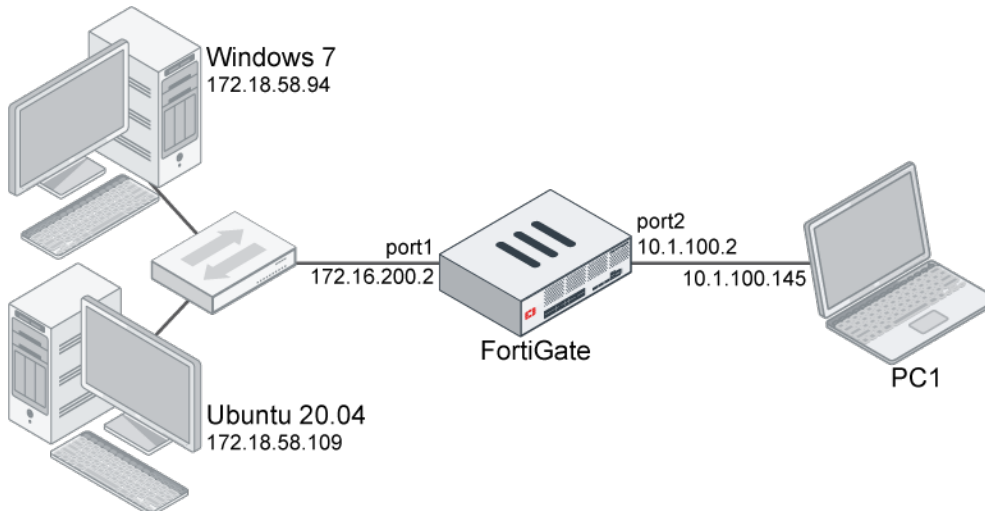

### To customize the RDP bookmark display size:

1. Log in to the SSL VPN web portal.
2. Create a new RDP bookmark (+ *New Bookmark*), or hover over an existing bookmark and click the edit (pencil) icon.

### 3. Set the *Screen Width* and *Screen Height* fields as required.

#### a. Windows 7: 1360 width and 768 height.

The screenshot shows the 'Edit Bookmark' configuration page in FortiOS. The bookmark is named 'RDP\_win7' and is configured for RDP. The host is '172.18.58.94' and the port is '3389'. The screen width is set to '1360' and the screen height is set to '768'. The keyboard layout is 'English, United States' and the security is 'Standard RDP encryption'. The 'Use SSL-VPN Credentials' option is disabled. The 'Save' button is highlighted in red.

Protocol	FTP	RDP	SSH
HTTP/HTTPS	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
SMB/CIFS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SFTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Telnet	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Name: RDP\_win7  
 Host: 172.18.58.94  
 Port: 3389  
 Description:  
 Use SSL-VPN Credentials: ☐  
 Username: fosqa  
 Password:   
 Color Depth Per Pixel: 32bits per pixel.  
 Screen Width: 1360  
 Screen Height: 768  
 Keyboard Layout: English, United States.  
 Security: Standard RDP encryption.  
 Send Preconnection ID: ☐  
 Load Balancing Information:  
 Restricted Admin Mode: ☐

Save Cancel

#### b. Ubuntu 20.04: 800 width and 600 height.

The screenshot shows the 'Edit Bookmark' configuration page in FortiOS. The bookmark is named 'RDP\_ubuntu' and is configured for RDP. The host is '172.18.58.109' and the port is '3389'. The screen width is set to '800' and the screen height is set to '600'. The keyboard layout is 'English, United States' and the security is 'Standard RDP encryption'. The 'Use SSL-VPN Credentials' option is disabled. The 'Save' button is highlighted in red.

Protocol	FTP	RDP	SSH
HTTP/HTTPS	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
SMB/CIFS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SFTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Telnet	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Name: RDP\_ubuntu  
 Host: 172.18.58.109  
 Port: 3389  
 Description:  
 Use SSL-VPN Credentials: ☐  
 Username: auto  
 Password:   
 Color Depth Per Pixel: 32bits per pixel.  
 Screen Width: 800  
 Screen Height: 600  
 Keyboard Layout: English, United States.  
 Security: Standard RDP encryption.  
 Send Preconnection ID: ☐  
 Load Balancing Information:  
 Restricted Admin Mode: ☐


Save Cancel

### 4. Click **Save**.


### Verification:

When the user connects to the RDP servers using the bookmarks, the customized screen resolutions are applied regardless of the client PC's screen resolution (1920 × 1080).

Windows 7:

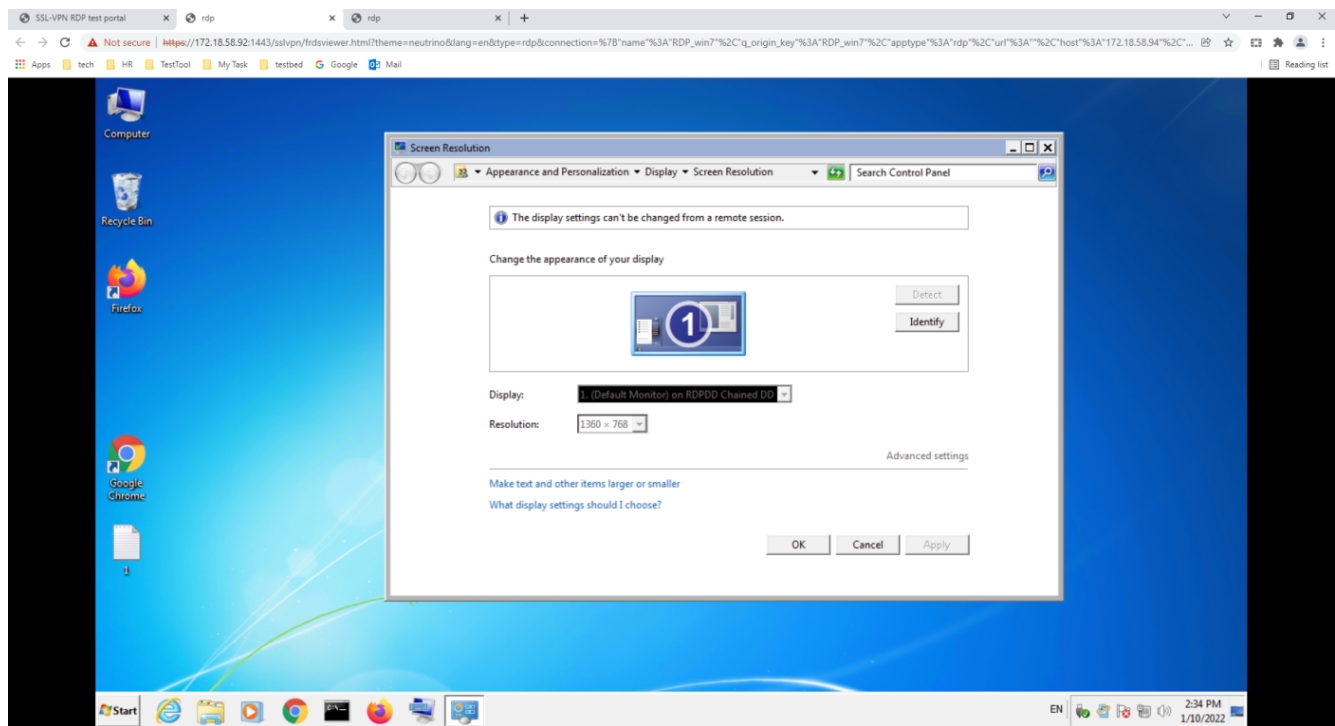

Ubuntu 20.04:

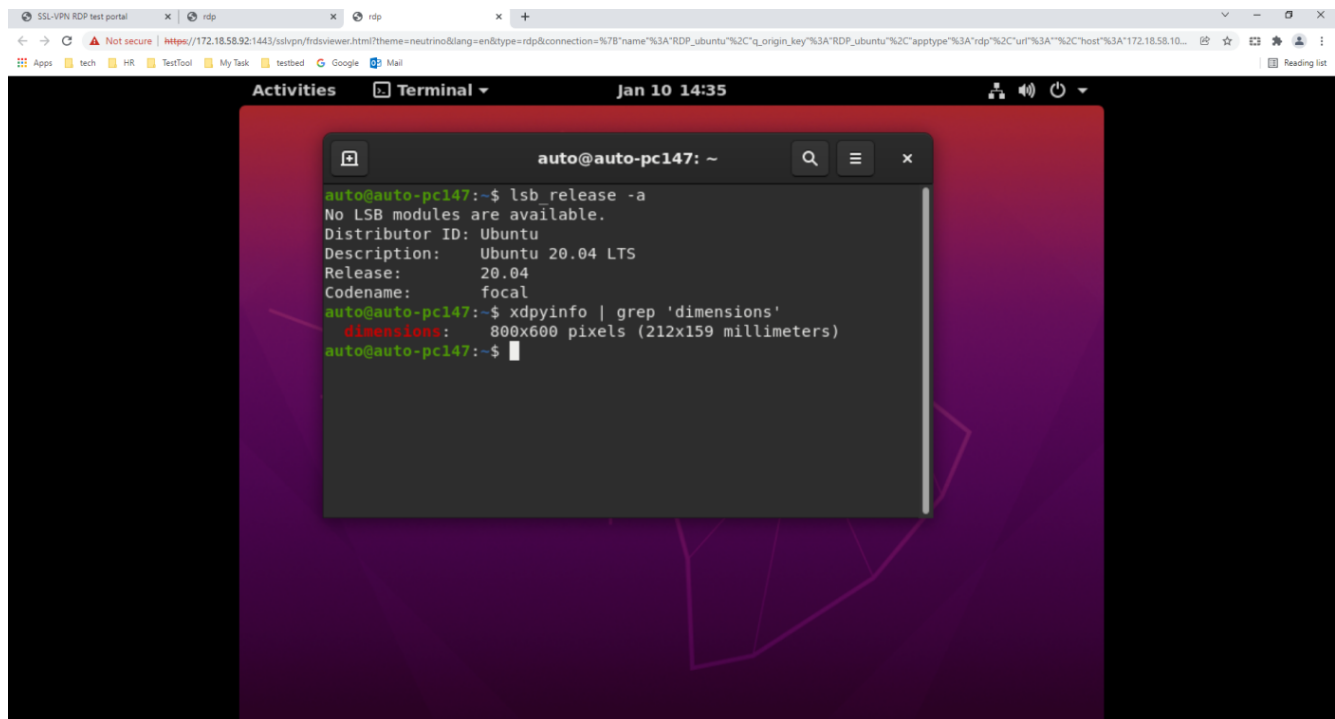

**To view the bookmarks created by the user:**

```
show vpn ssl web user-bookmark
config vpn ssl web user-bookmark
```

```

edit "rdp_user#"
  config bookmarks
    edit "RDP_win7"
      set apptype rdp
      set host "172.18.58.94"
      set port 3389
      set logon-user "fosqa"
      set logon-password *****
      set color-depth 32
      set width 1360
      set height 768
    next
    edit "RDP_ubuntu"
      set apptype rdp
      set host "172.18.58.109"
      set port 3389
      set logon-user "auto"
      set logon-password *****
      set color-depth 32
      set width 800
      set height 600
    next
  end
end

```


## Showing the SSL VPN portal login page in the browser's language

By default, the browser's language preference is automatically detected and used by the SSL VPN portal login page. The system language can still be used by changing the settings on the *SSL-VPN Settings* page of the GUI, or disabling `browser-language-detection` in the CLI:

```

config vpn ssl settings
  set browser-language-detection disable
end

```

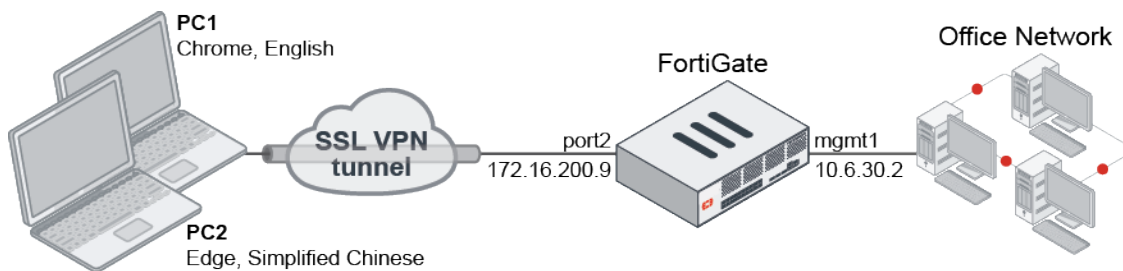

In this example, the `sslvpnadmin` user account is used for SSL VPN connections on the *testportal1* SSL VPN portal. The account is shared by users from different countries that use different browsers and different languages in their browsers. The user on PC1 uses Chrome in English, and the user on PC2 uses Edge in Simplified Chinese. When a user logs in to the SSL VPN web portal, all of the pages are shown in the same language as their browser.


## To configure the SSL VPN portal to use the client's browser language:

### 1. Configure the SSL VPN portal:

- a. Go to **VPN > SSL-VPN Portals** and edit the SSL VPN portal.

For information about configuring SSL VPN portals, see [SSL VPN on page 1876](#).

- b. Enable **Web Mode**.

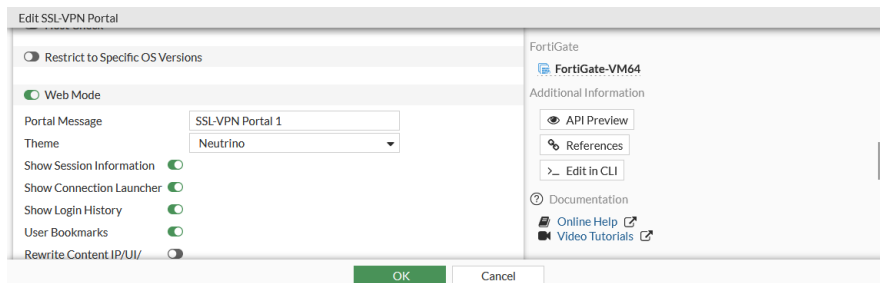


- c. Click **OK**.

### 2. Set the language preference:

- a. Go to **VPN > SSL-VPN Settings**.

- b. Under **Web Mode Settings**, set **Language** to **Browser Preference**.

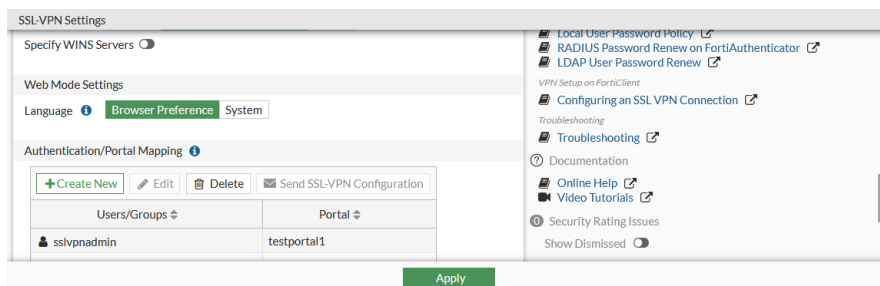

- c. Click **Apply**.


### 3. Add the `sslvpnadmin` user to the policy used by the SSL VPN portal.


Name	Source	Destination	Schedule	Service	Action	NAT	Security Profiles	Log	Bytes
SSL-VPN tunnel interface (sslroot) -> port2									
sslvpn1	sslvpnadmin	all	always	ALL	ACCEPT	Enabled	SSL no-inspection	All	0 B
Implicit									
Implicit Deny	all	all	always	ALL	DENY			Disabled	0 B

0 Security Rating Issues Updated: 12:00:34

### 4. Confirm that the configuration works:

- When the user on PC1 logs in to the SSL VPN portal using Chrome in English, all of the pages are shown in English.

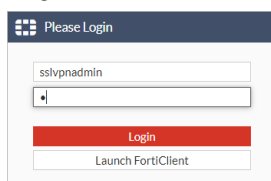

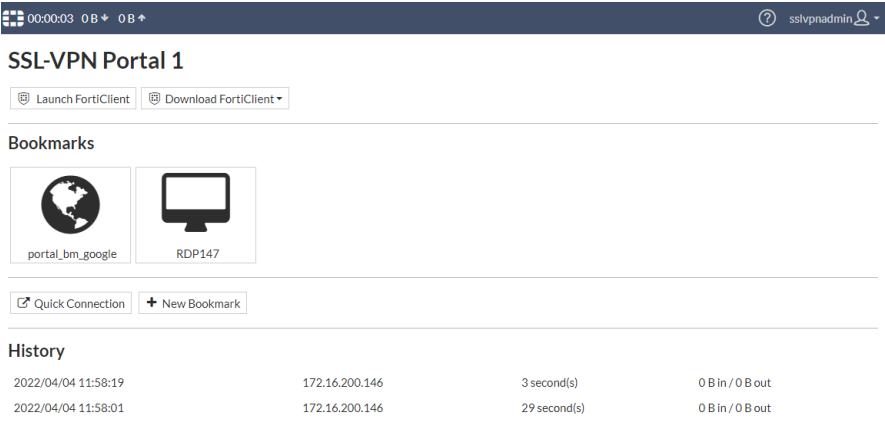

- When the user on PC2 logs in to the SSL VPN portal using Edge in Simplified Chinese, all of the pages are shown in Simplified Chinese.



## SSL VPN authentication

The following topics provide instructions on configuring SSL VPN authentication:

- [SSL VPN with LDAP user authentication on page 1914](#)
- [SSL VPN with LDAP user password renew on page 1919](#)

- [SSL VPN with certificate authentication on page 1925](#)
- [SSL VPN with LDAP-integrated certificate authentication on page 1930](#)
- [SSL VPN for remote users with MFA and user sensitivity on page 1936](#)
- [SSL VPN with FortiToken mobile push authentication on page 1943](#)
- [SSL VPN with RADIUS on FortiAuthenticator on page 1949](#)
- [SSL VPN with RADIUS and FortiToken mobile push on FortiAuthenticator on page 1953](#)
- [SSL VPN with RADIUS password renew on FortiAuthenticator on page 1958](#)
- [SSL VPN with RADIUS on Windows NPS on page 1962](#)
- [SSL VPN with multiple RADIUS servers on page 1967](#)
- [SSL VPN with local user password policy on page 1976](#)
- [Dynamic address support for SSL VPN policies on page 1982](#)
- [SSL VPN multi-realm on page 1991](#)
- [NAS-IP support per SSL-VPN realm on page 1996](#)
- [SSL VPN with Okta as SAML IdP on page 1998](#)
- [SSL VPN with Azure AD SSO integration on page 2004](#)


## SSL VPN with LDAP user authentication

This is a sample configuration of SSL VPN for LDAP users. In this example, the LDAP server is a Windows 2012 AD server. A user *ldu1* is configured on Windows 2012 AD server.

You must have generated and exported a CA certificate from the AD server and then have imported it as an external CA certificate into the FortiGate.



## Sample topology

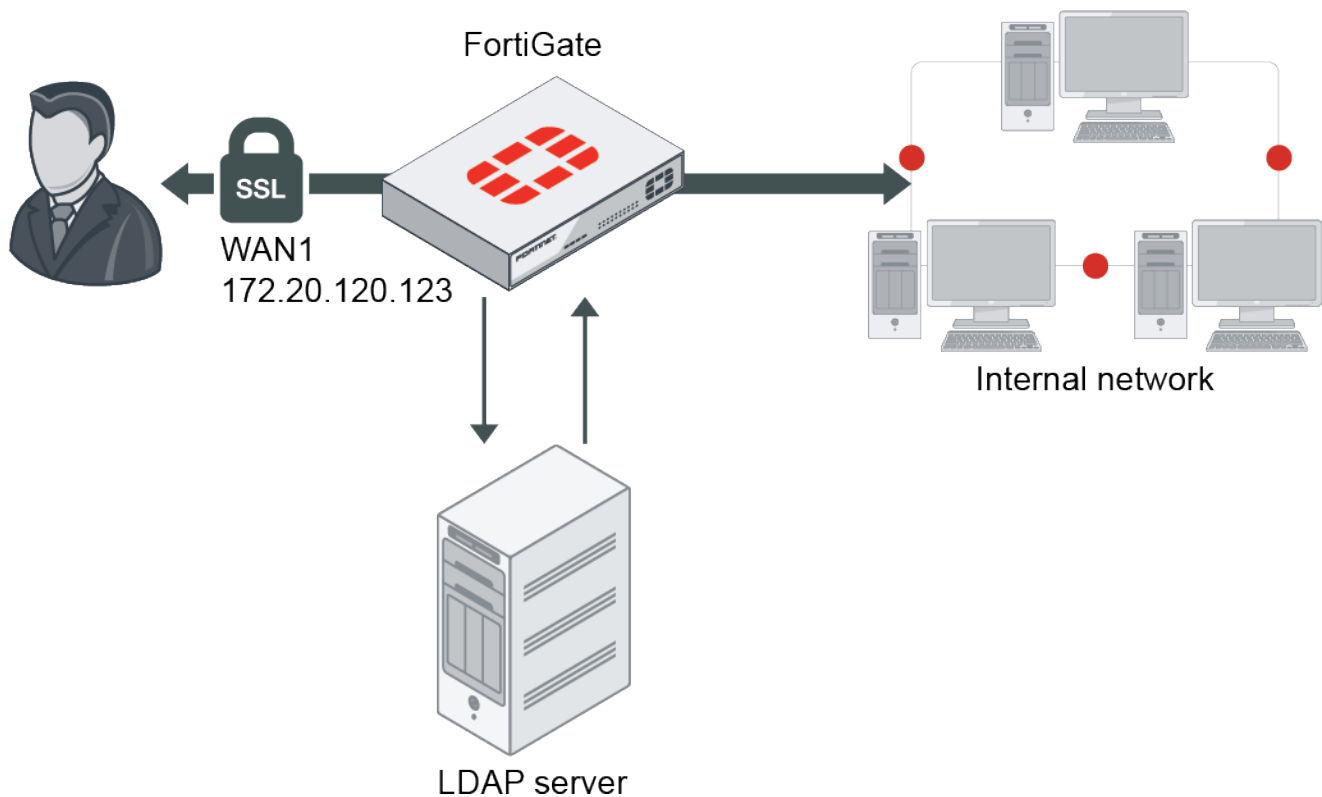

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network:
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Import CA certificate into FortiGate:
  - a. Go to *System > Features Visibility* and ensure *Certificates* is enabled.
  - b. Go to *System > Certificates* and select *Import > CA Certificate*.
  - c. Select *Local PC* and then select the certificate file.  
The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.
  - d. If you want, you can use CLI commands to rename the system-generated *CA\_Cert\_1* to be more descriptive:

```
config vpn certificate ca
  rename CA_Cert_1 to LDAPS-CA
end
```

3. Configure the LDAP user:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Specify *Name* and *Server IP/Name*.
  - c. Specify *Common Name Identifier* and *Distinguished Name*.
  - d. Set *Bind Type* to *Regular*.
  - e. Specify *Username* and *Password*.
  - f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
  - g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
4. Configure user group:
  - a. Go to *User & Authentication > User Groups* to create a user group.
  - b. Enter a *Name*.
  - c. In *Remote Groups*, click *Add* to add *ldaps-server*.
5. Configure SSL VPN web portal:
  - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
  - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
6. Configure SSL VPN settings:
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. Select the *Listen on Interface(s)*, in this example, *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Set *Server Certificate* to the authentication certificate.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *ldaps-group* mapping portal *full-access*.
7. Configure SSL VPN firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Source Address* to *all* and *Source User* to *ldaps-group*.
  - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
  - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Enable *NAT*.
  - i. Configure any remaining firewall and security options as desired.
  - j. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

**2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network:**

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

**3. Import CA certificate into FortiGate:**

- a. Go to *System > Features Visibility* and ensure *Certificates* is enabled.
- b. Go to *System > Certificates* and select *Import > CA Certificate*.
- c. Select *Local PC* and then select the certificate file.  
The CA certificate now appears in the list of *External CA Certificates*. In the example, it is called *CA\_Cert\_1*.
- d. If you want, you can use CLI commands to rename the system-generated *CA\_Cert\_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

**4. Configure the LDAP server:**

```
config user ldap
    edit "ldaps-server"
        set server "172.20.120.161"
        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password *****
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
    next
end
```

**5. Configure user group:**

```
config user group
    edit "ldaps-group"
        set member "ldaps-server"
    next
end
```

**6. Configure SSL VPN web portal:**

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    end
```

```
        next
    end
```

## 7. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "ldaps-group"
            set portal "full-access"
        next
    end
end
```

## 8. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "ldaps-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Enter the *Idu1* user credentials, then click *Login*.
3. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
  - c. Select *Customize Port* and set it to *10443*.
4. Save your settings.
5. Log in using the *Idu1* credentials.

**To check the SSL VPN connection using the GUI:**

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > System Events* and select the *VPN Events* card to view the details of the SSL VPN connection event log.
3. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

**To check the web portal login using the CLI:**

```
# get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	ldu1	1(1)	229	10.1.100.254	0/0	0/0

```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
-------	------	-----------	----------	-----------	----------------

**To check the tunnel login using the CLI:**

```
# get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	ldu1	1(1)	291	10.1.100.254	0/0	0/0

```
SSL VPN sessions:
```


Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	ldu1	10.1.100.254	9	22099/43228	10.212.134.200

**SSL VPN with LDAP user password renew**

This is a sample configuration of SSL VPN for LDAP users with *Force Password Change on next logon*. In this example, the LDAP server is a Windows 2012 AD server. A user *ldu1* is configured on Windows 2012 AD server with *Force password change on next logon*.

You must have generated and exported a CA certificate from the AD server and then have imported it as an external CA certificate into the FortiGate.

## Sample topology

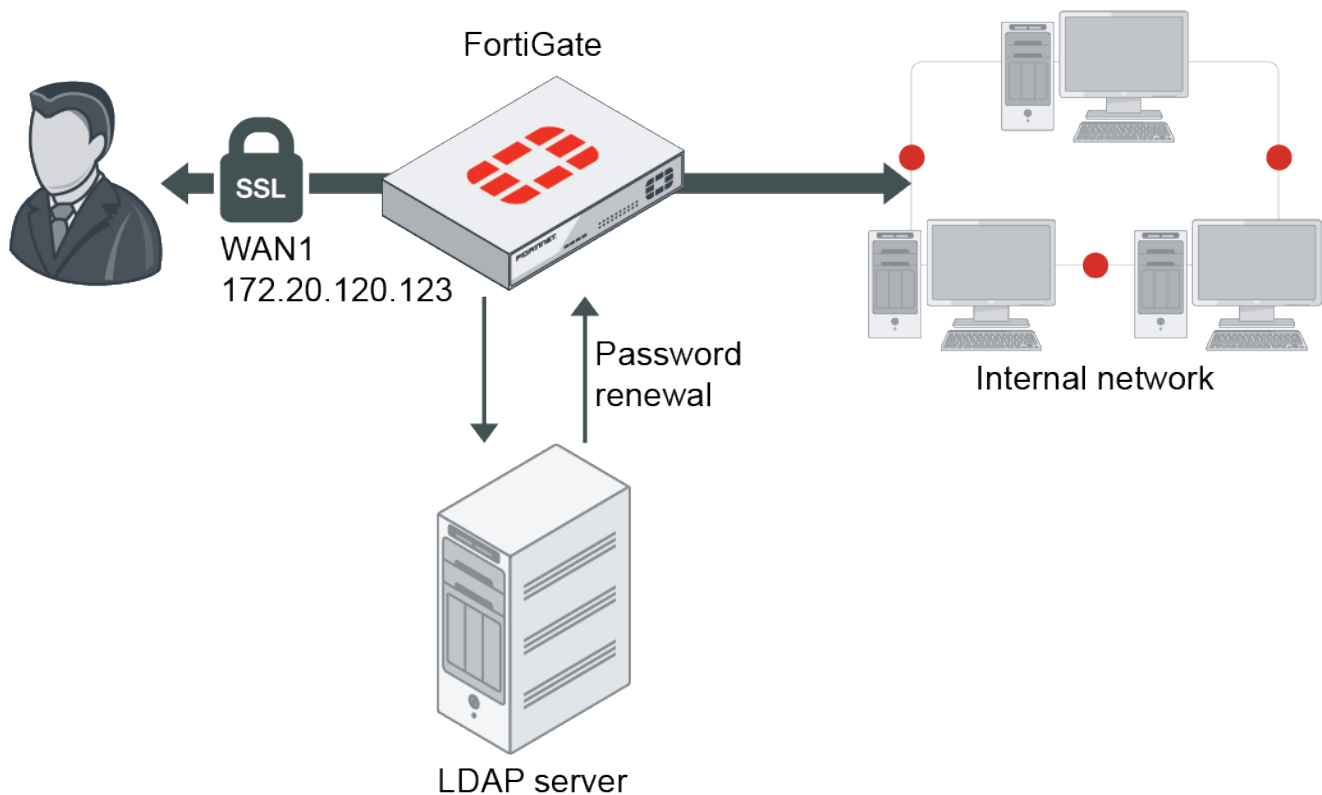

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Import CA certificate into FortiGate:
  - a. Go to *System > Features Visibility* and ensure *Certificates* is enabled.
  - b. Go to *System > Certificates* and select *Import > CA Certificate*.
  - c. Select *Local PC* and then select the certificate file.  
The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.
  - d. If you want, you can use CLI commands to rename the system-generated *CA\_Cert\_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

### 3. Configure the LDAP user:



The LDAP user must either be an administrator, or have the proper permissions delegated to it, to be able to change passwords of other registered users on the LDAP server.

- a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
- b. Specify *Name* and *Server IP/Name*.
- c. Specify *Common Name Identifier* and *Distinguished Name*.
- d. Set *Bind Type* to *Regular*.
- e. Specify *Username* and *Password*.
- f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
- g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
- h. To enable the `password-renew` option, use these CLI commands.

```
config user ldap
    edit "ldaps-server"
        set password-expiry-warning enable
        set password-renewal enable
    next
end
```

### 4. Configure user group:

- a. Go to *User & Authentication > User Groups* to create a user group.
- b. Enter a *Name*.
- c. In *Remote Groups*, click *Add* to add *ldaps-server*.

### 5. Configure SSL VPN web portal:

- a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
- b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.

### 6. Configure SSL VPN settings:

- a. Go to *VPN > SSL-VPN Settings*.
- b. Select the *Listen on Interface(s)*, in this example, *wan1*.
- c. Set *Listen on Port* to *10443*.
- d. Set *Server Certificate* to the authentication certificate.
- e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
- f. Create new *Authentication/Portal Mapping* for group *ldaps-group* mapping portal *full-access*.

### 7. Configure SSL VPN firewall policy:

- a. Go to *Policy & Objects > Firewall Policy*.
- b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
- c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
- d. Set the *Source Address* to *all* and *Source User* to *ldaps-group*.

- e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
- f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
- g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
- h. Enable *NAT*.
- i. Configure any remaining firewall and security options as desired.
- j. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
  next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network:

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
  next
end

config firewall address
  edit "192.168.1.0"
    set subnet 192.168.1.0 255.255.255.0
  next
end
```

3. Import CA certificate into FortiGate:

- a. Go to *System > Features Visibility* and ensure *Certificates* is enabled.
- b. Go to *System > Certificates* and select *Import > CA Certificate*.
- c. Select *Local PC* and then select the certificate file.  
The CA certificate now appears in the list of *External CA Certificates*. In the example, it is called *CA\_Cert\_1*.
- d. If you want, you can use CLI commands to rename the system-generated *CA\_Cert\_1* to be more descriptive:

```
config vpn certificate ca
  rename CA_Cert_1 to LDAPS-CA
end
```

4. Configure the LDAP server:



The LDAP user must either be an administrator, or have the proper permissions delegated to it, to be able to change passwords of other registered users on the LDAP server.

---

```
config user ldap
  edit "ldaps-server"
    set server "172.20.120.161"
```



```

        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password *****
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
        set password-expiry-warning enable
        set password-renewal enable
    next
end

```

##### 5. Configure user group:

```

config user group
    edit "ldaps-group"
        set member "ldaps-server"
    next
end

```

##### 6. Configure SSL VPN web portal:

```

config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end

```

##### 7. Configure SSL VPN settings:

```

config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "ldaps-group"
            set portal "full-access"
        next
    end
end

```

##### 8. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```

config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "ldaps-group"
    end

```

```

        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the *ldu1* credentials.  
Use a user that is configured on FortiAuthenticator with *Force password change on next login*.
3. Click *Login*. You are prompted to enter a new password. The prompt will timeout after 90 seconds.
4. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
  - c. Select *Customize Port* and set it to *10443*.
4. Save your settings.
5. Log in using the *ldu1* credentials.  
You are prompted to enter a new password. The prompt will timeout after 90 seconds.

### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > System Events* and select the *VPN Events* card to view the details of the SSL VPN connection event log.
3. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

### To check the web portal login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index  User    Auth Type    Timeout  From           HTTP in/out  HTTPS in/out
  ----  -
  0      ldu1    1(1)         229      10.1.100.254   0/0          0/0

SSL VPN sessions:
  Index  User    Source IP    Duration    I/O Bytes    Tunnel/Dest IP
  ----  -

```

### To check the tunnel login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index  User    Auth Type    Timeout  From           HTTP in/out  HTTPS in/out
  ----  -
  0      ldu1    1(1)         291      10.1.100.254   0/0          0/0

```

SSL VPN sessions:

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	ldul	10.1.100.254	9	22099/43228	10.212.134.200

## SSL VPN with certificate authentication

This is an example configuration of SSL VPN that requires users to authenticate using a client certificate. The client certificate is issued by the company Certificate Authority (CA). Each user is issued a certificate with their username in the subject.

There are two ways to configure certificate authentication:

1. [Using PKI users](#)
2. [Configuring the SSL VPN settings to require a client certificate](#)


In this example, the server and client certificates are signed by the same Certificate Authority (CA).



Self-signed certificates are provided by default to simplify initial installation and testing. It is **HIGHLY** recommended that you acquire a signed certificate for your installation.

Continuing to use these certificates can result in your connection being compromised, allowing attackers to steal your information, such as credit card details.

For more information, please review the [Use a non-factory SSL certificate for the SSL VPN portal on page 1878](#) and learn how to [Procuring and importing a signed SSL certificate on page 2534](#).

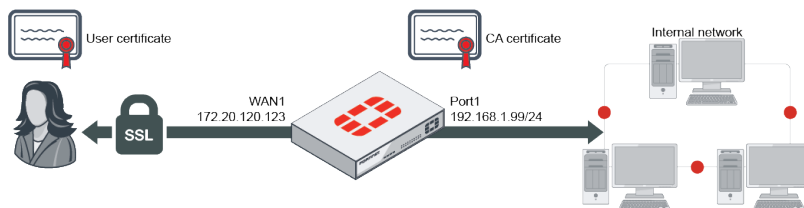

### Using PKI users

When using PKI users, the FortiGate authenticates the user based on their identity in the subject or the common name on the certificate. The certificate must be signed by a CA that is known by the FortiGate, either through the default CA certificates or through importing a CA certificate.

The user can either match a static subject or common name defined in the PKI user settings, or match an LDAP user in the LDAP server defined in the PKI user settings. Multi-factor authentication can also be enabled with the password as the second factor.

### Configuring the SSL VPN settings to require a client certificate

Using this method, the user is authenticated based on their regular username and password, but SSL VPN will still require an additional certificate check. The client certificate only needs to be signed by a known CA in order to pass authentication.

This method can be configured by enabling *Require Client Certificate* (`reqclientcert`) in the SSL-VPN settings.

## Configuration

In the following example, SSL VPN users are authenticated using the first method. A PKI user is configured with multi-factor authentication.

Pre-requisites:

- The CA has already issued a client certificate to the user.
- The CA has issued a server certificate for the FortiGate's SSL VPN portal.
- The CA certificate is available to be imported on the FortiGate.

### To configure SSL VPN in the GUI:

1. Install the server certificate. The server certificate allows the clients to authenticate the server and to encrypt the SSL VPN traffic.

- a. Go to *System > Feature Visibility* and ensure *Certificates* is enabled.
- b. Go to *System > Certificates* and select *Import > Local Certificate*.
  - Set *Type* to *Certificate*.
  - Choose the *Certificate file* and the *Key file* for your certificate, and enter the *Password*.
  - If required, you can change the *Certificate Name*.

The server certificate now appears in the list of *Certificates*.

2. Install the CA certificate.

The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users.

- a. Go to *System > Certificates* and select *Import > CA Certificate*.
- b. Select *Local PC* and then select the certificate file.

The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.

3. Configure PKI users and a user group.

To use certificate authentication, use the CLI to create PKI users.

```
config user peer
  edit pki01
    set ca CA_Cert_1
    set subject "CN=User01"
  next
end
```

Ensure that the subject matches the name of the user certificate. In this example, *User01*.

4. After you have create a PKI user, a new menu is added to the GUI:

- a. Go to *User & Authentication > PKI* to see the new user.
- b. Edit the user account.
- c. Enable *Two-factor authentication* and set a password for the account.
- d. Go to *User & Authentication > User Groups* and create a group called *sslvpngroup*.
- e. Add the PKI user *pki01* to the group.

5. Configure SSL VPN web portal.

- a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.

This portal supports both web and tunnel mode.
- b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.

6. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings* and enable SSL-VPN.
  - b. Set the *Listen on Interface(s)* to *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Set *Server Certificate* to the local certificate that was imported.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
7. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
  - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
  - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Enable *NAT*.
  - i. Configure any remaining firewall and security options as needed.
  - j. Click *OK*.

### To configure SSL VPN in the CLI:

1. Configure the protected subnet:

```
config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

2. Install the server certificate:

The server certificate allows the clients to authenticate the server and to encrypt the SSL VPN traffic. While it is easier to install the server certificate in the GUI, the CLI can be used to import a p12 certificate from a TFTP server. To import a p12 certificate, put the certificate *server\_certificate.p12* on your TFTP server, then run following command on the FortiGate:

```
execute vpn certificate local import tftp server_certificate.p12 <your tftp_server> p12
<your password for PKCS12 file>
```

To check that the server certificate is installed:

```
show vpn certificate local server_certificate
```

3. Install the CA certificate:

The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users. While it is easier to install the CA certificate from GUI, the CLI can be used to import a CA certificates from a TFTP server.

To import a CA certificate, put the CA certificate on your TFTP server, then run following command on the FortiGate:

```
execute vpn certificate ca import tftp <your CA certificate name> <your tftp server>
```

To check that a new CA certificate is installed:

```
show vpn certificate ca
```

#### 4. Configure PKI users and a user group:

```
config user peer
  edit pki01
    set ca CA_Cert_1
    set subject "CN=User01"
    set two-factor enable
    set passwd *****
  next
end

config user group
  edit "sslvpngroup"
    set member "pki01"
  next
end
```

#### 5. Configure SSL VPN web portal:

```
config vpn ssl web portal
  edit "full-access"
    set tunnel-mode enable
    set web-mode enable
    set ip-pools "SSLVPN_TUNNEL_ADDR1"
    set split-tunneling disable
  next
end
```

#### 6. Configure SSL VPN settings:

```
config vpn ssl settings
  set servercert "server_certificate"
  set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
  set source-interface "wan1"
  set source-address "all"
  set default-portal "web-access"
  config authentication-rule
    edit 1
      set groups "sslvpngroup"
      set portal "full-access"
    next
  end
end
```

#### 7. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```
config firewall policy
  edit 1
    set name "sslvpn web mode access"
    set srcintf "ssl.root"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "192.168.1.0"
    set groups "sslvpngroup"
    set action accept
    set schedule "always"
```

```
        set service "ALL"
        set nat enable
    next
end
```

## Installation

To use the user certificate, you must first install it on the user's PC. When the user tries to authenticate, the user certificate is checked against the CA certificate to verify that they match.

Every user should have a unique user certificate. This allows you to distinguish each user and revoke a specific user's certificate, such as if a user no longer has VPN access.

### To install the user certificate on Windows 7, 8, and 10:

1. Double-click the certificate file to open the *Import Wizard*.
2. Use the *Import Wizard* to import the certificate into the *Personal store* of the current user.

### To install the user certificate on Mac OS X:

1. Open the certificate file, to open *Keychain Access*.
2. Double-click the certificate.
3. Expand *Trust* and select *Always Trust*.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection.
  - Set *VPN Type* to *SSL VPN*.
  - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Enable *Client Certificate* and select the authentication certificate.
6. Save your settings.
7. Use the credentials you've set up to connect to the SSL VPN tunnel.  
If the certificate is correct, you can connect.

### To see the results of web portal:

1. In a web browser, log into the portal *http://172.20.120.123:10443*.  
A message requests a certificate for authentication.
2. Select the user certificate.
3. Enter your user credentials.  
If the certificate is correct, you can connect to the SSL VPN web portal.

### To check the SSL VPN connection using the GUI:

1. Go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
2. Go to *Log & Report > System Events* and select the *VPN Events* card to view the details for the SSL connection log.

**To check the SSL VPN connection using the CLI:**

```
get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	pki01,cn=User01		1 (1)	229	10.1.100.254	0/0
1	pki01,cn=User01		1 (1)	291	10.1.100.254	0/0

```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	pki01,cn=User01		10.1.100.254	9	22099/43228

**SSL VPN with LDAP-integrated certificate authentication**

This is a sample configuration of SSL VPN that requires users to authenticate using a certificate with LDAP UserPrincipalName checking.

This sample uses Windows 2012R2 Active Directory acting as both the user certificate issuer, the certificate authority, and the LDAP server.




When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).



## Sample topology

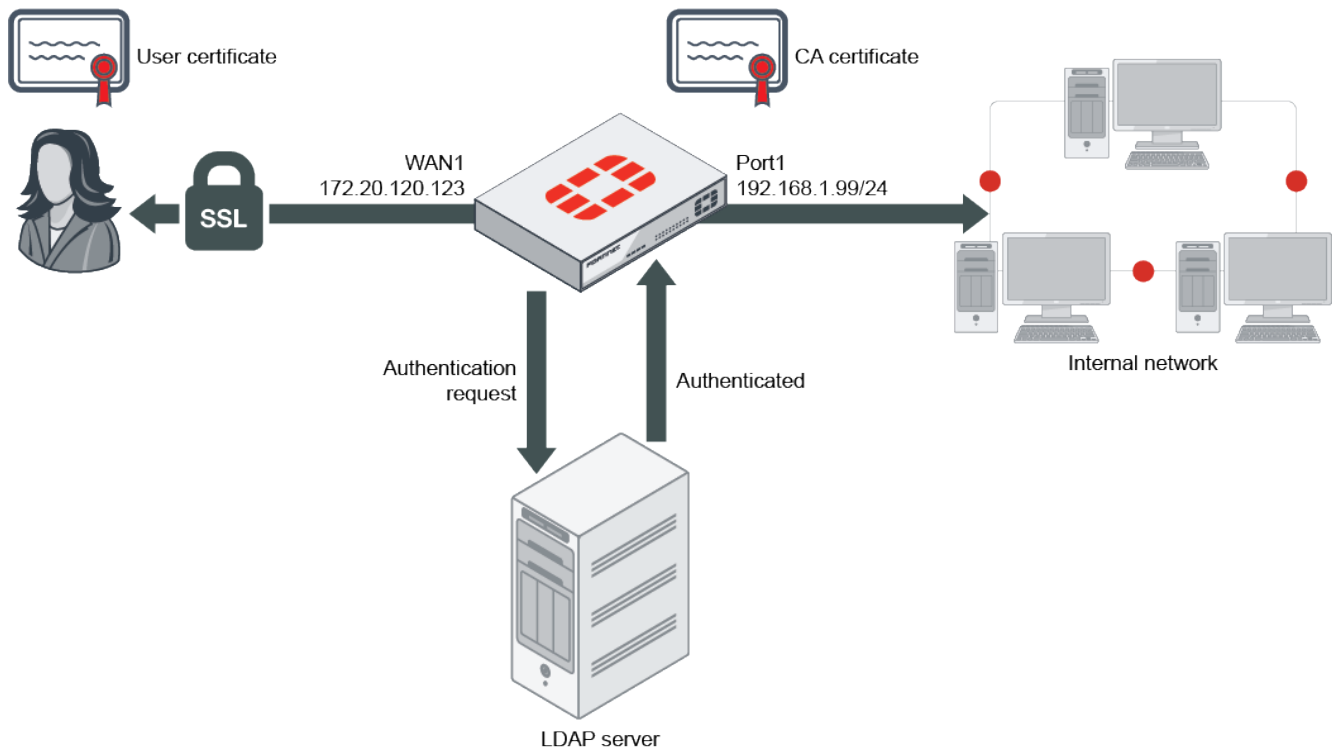

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

In this sample, the *User Principal Name* is included in the subject name of the issued certificate. This is the user field we use to search LDAP in the connection attempt.

To use the user certificate, you must first install it on the user's PC. When the user tries to authenticate, the user certificate is checked against the CA certificate to verify that they match.

Every user should have a unique user certificate. This allows you to distinguish each user and revoke a specific user's certificate, such as if a user no longer has VPN access.

### To install the server certificate:

The server certificate is used for authentication and for encrypting SSL VPN traffic.

1. Go to *System > Feature Visibility* and ensure *Certificates* is enabled.
2. Go to *System > Certificates* and select *Import > Local Certificate*.
3. Set *Type* to *Certificate*.
4. Choose the *Certificate file* and the *Key file* for your certificate, and enter the *Password*.
5. If required, change the *Certificate Name*.

The server certificate now appears in the list of *Certificates*.

### To install the CA certificate:

The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users.

1. Go to *System > Certificates* and select *Import > CA Certificate*.
2. Select *Local PC* and then select the certificate file.

The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Configure the LDAP server:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Specify *Name* and *Server IP/Name*.
  - c. Set *Distinguished Name* to *dc=fortinet-fsso,dc=com*.
  - d. Set *Bind Type* to *Regular*.
  - e. Set *Username* to *cn=admin,ou=testing,dc=fortinet-fsso,dc=com*.
  - f. Set *Password*.
  - g. Click OK.

3. Configure PKI users and a user group:

To use certificate authentication, use the CLI to create PKI users.

```
config user peer
    edit user1
        set ca CA_Cert_1
        set ldap-server "ldap-AD"
        set ldap-mode principal-name
    next
end
```

When you have create a PKI user, a new menu is added to the GUI:

- a. Go to *User & Authentication > PKI* to see the new user.
  - b. Go to *User & Authentication > User > User Groups* and create a group *sslvpn-group*.
  - c. Add the PKI peer object you created as a local member of the group.
  - d. Add a remote group on the LDAP server and select the group of interest.  
You need these users to be members using the LDAP browser window.
4. Configure SSL VPN web portal:
  - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
  - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
5. Configure SSL VPN settings:
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. Select the *Listen on Interface(s)*, in this example, *wan1*.

- c. Set *Listen on Port* to 10443.
  - d. Set *Server Certificate* to the authentication certificate.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpn-group* mapping portal *full-access*.
6. Configure SSL VPN firewall policy:
- a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Source Address* to *all* and *Source User* to *sslvpn-group*.
  - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
  - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Enable NAT.
  - i. Configure any remaining firewall and security options as desired.
  - j. Click OK.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure the LDAP server:

```
config user ldap
    edit "ldap-AD"
        set server "172.18.60.206"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=admin,ou=testing,dc=fortinet-fsso,dc=com"
        set password ldap-server-password
```

```
    next
end
```

#### 4. Configure PKI users and a user group:

```
config user peer
    edit user1
        set ca CA_Cert_1
        set ldap-server "ldap-AD"
        set ldap-mode principal-name
    next
end

config user group
    edit "sslvpn-group"
        set member "ldap-AD" "user1"
        config match
            edit 1
                set server-name "ldap-AD"
                set group-name "CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM"
            next
        end
    next
end
```

#### 5. Configure SSL VPN web portal:

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

#### 6. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpn-group"
            set portal "full-access"
        next
    end
end
```

#### 7. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
```

```

        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpn-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection.
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
  - c. Select *Customize Port* and set it to *10443*.
  - d. Enable *Client Certificate* and select the authentication certificate.
4. Save your settings.  
Connecting to the VPN only requires the user's certificate. It does not require username or password.

### To see the results of web portal:

1. In a web browser, log into the portal *http://172.20.120.123:10443*.  
A message requests a certificate for authentication.
2. Select the user certificate.  
You can connect to the SSL VPN web portal.

### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > VPN Events* to view the details of the SSL VPN connection event log.
3. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

### To check the SSL VPN connection using the CLI:

Below is a sample output of `diagnose debug application fnbamd -1` while the user connects. This is a shortened output sample of a few locations to show the important parts. This sample shows lookups to find the group memberships (three groups total) of the user and that the correct group being found results in a match.

```

[1148] fnbamd_ldap_recv-Response len: 16, svr: 172.18.60.206
[829] fnbamd_ldap_parse_response-Got one MESSAGE. ID:4, type:search-result
[864] fnbamd_ldap_parse_response-ret=0
[1386] __fnbamd_ldap_primary_grp_next-Auth accepted
[910] __ldap_rxtx-Change state to 'Done'
[843] __ldap_rxtx-state 23(Done)
[925] fnbamd_ldap_send-sending 7 bytes to 172.18.60.206
[937] fnbamd_ldap_send-Request is sent. ID 5
[753] __ldap_stop-svr 'ldap-AD'
[53] ldap_dn_list_del_all-Del CN=test3,OU=Testing,DC=Fortinet-FSSO,DC=COM
[399] ldap_copy_grp_list-copied CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM

```

```
[399] ldap_copy_grp_list-copied CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM
[2088] fnbamd_auth_cert_check-Matching group 'sslvpn-group'
[2007] __match_ldap_group-Matching server 'ldap-AD' - 'ldap-AD'
[2015] __match_ldap_group-Matching group 'CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM' -
'CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM'
[2091] fnbamd_auth_cert_check-Group 'sslvpn-group' matched
[2120] fnbamd_auth_cert_result-Result for ldap svr[0] 'ldap-AD' is SUCCESS
[2126] fnbamd_auth_cert_result-matched user 'test3', matched group 'sslvpn-group'
```

You can also use `diagnose firewall auth list` to validate that a firewall user entry exists for the SSL VPN user and is part of the right groups.


## SSL VPN for remote users with MFA and user sensitivity

By default, remote LDAP and RADIUS user names are case sensitive. When a remote user object is applied to SSL VPN authentication, the user must type the exact case that is used in the user definition on the FortiGate.

Case sensitivity and accents can be ignored by disabling the `username-sensitivity` CLI command, allowing the remote user object to match any case or accents that the end user types in.

In this example, a remote user is configured with multi-factor authentication (MFA). The user group includes the LDAP user and server, and is applied to SSL VPN authentication and the policy.

### Topology

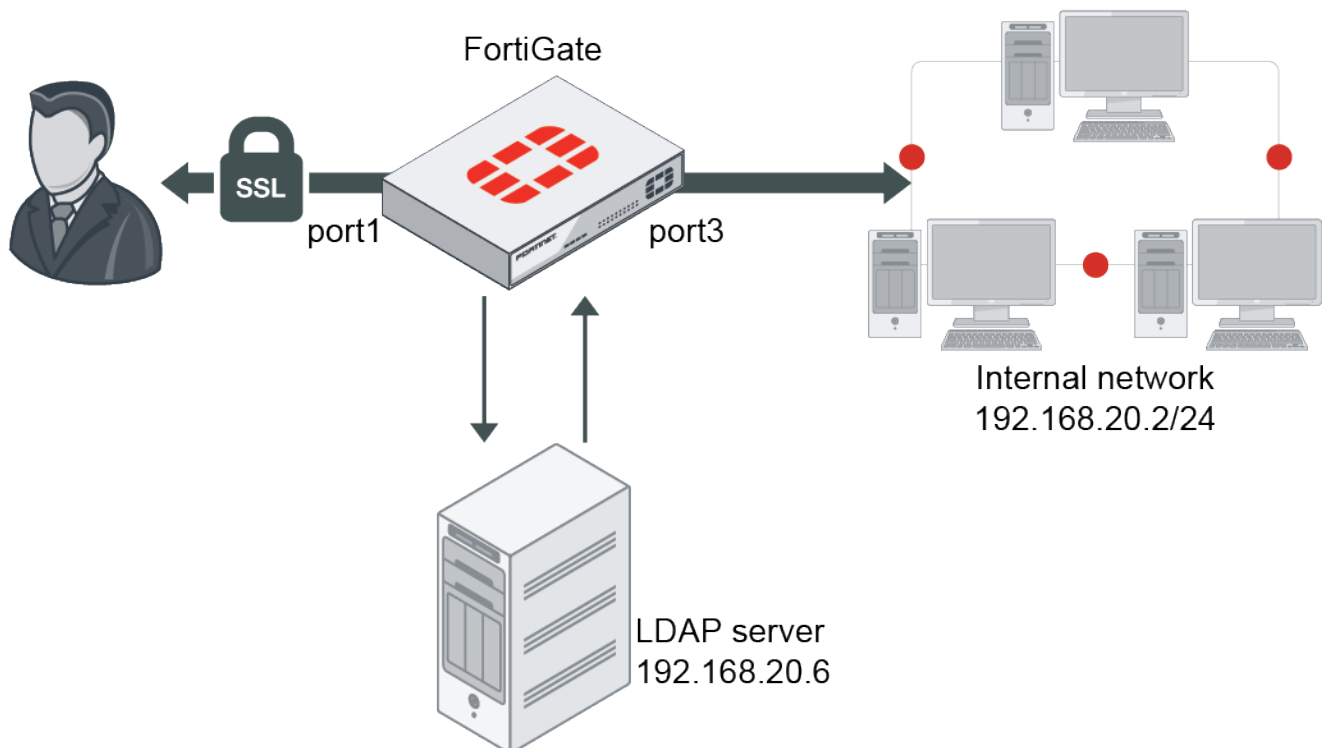

## Example configuration

### To configure the LDAP server:

1. Generate and export a CA certificate from the AD server .
2. Import the CA certificate into FortiGate:
  - a. Go to *System > Features Visibility* and ensure *Certificates* is enabled.
  - b. Go to *System > Certificates* and select *Import > CA Certificate*.
  - c. Select *Local PC* and then select the certificate file.  
The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA\_Cert\_1*.
  - d. If you want, you can use CLI commands to rename the system-generated *CA\_Cert\_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

3. Configure the LDAP user:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Configure the following options for this example:

<b>Name</b>	WIN2K16-KLHOME
<b>Server IP/Name</b>	192.168.20.6
<b>Server Port</b>	636
<b>Common Name Identifier</b>	sAMAccountName
<b>Distinguished Name</b>	dc=KLHOME,dc=local
<b>Bind Type</b>	Regular
<b>Username</b>	KLHOME\Administrator
<b>Password</b>	*****
<b>Secure Connection</b>	Enable
<b>Protocol</b>	LDAPS
<b>Certificate</b>	CA_Cert_1 This is the CA certificate that you imported in step 2.

The screenshot shows the 'Edit LDAP Server' configuration window in FortiGate. The configuration is as follows:


- Name:** WIN2K16-KLHOME
- Server IP/Name:** 192.168.20.6
- Server Port:** 636
- Common Name Identifier:** sAMAccountName
- Distinguished Name:** dc=KLHOME,dc=local
- Bind Type:** Regular
- Username:** KLHOME\Administrator
- Password:** \*\*\*\*\*
- Secure Connection:** ☒
- Protocol:** LDAPS
- Certificate:** CA\_Cert\_1

Buttons at the bottom: OK, Cancel. On the right sidebar: FortiGate, FGDocs, Documentation, Online Help, Video Tutorials.


- c. Click OK.

### To configure an LDAP user with MFA:

1. Go to *User & Authentication > User Definition* and click *Create New*.
2. Select *Remote LDAP User*, then click *Next*.
3. Select the just created LDAP server, then click *Next*.

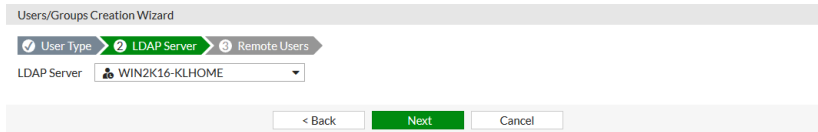

4. Right click to add the selected user, then click *Submit*.
5. Edit the user that you just created.  
The username will be pulled from the LDAP server with the same case as it has on the server.
6. Set the *Email Address* to the address that FortiGate will send the FortiToken to.
7. Enable *Two-factor Authentication*.
8. Set *Authentication Type* to *FortiToken*.
9. Set *Token* to a FortiToken device. See for more information.

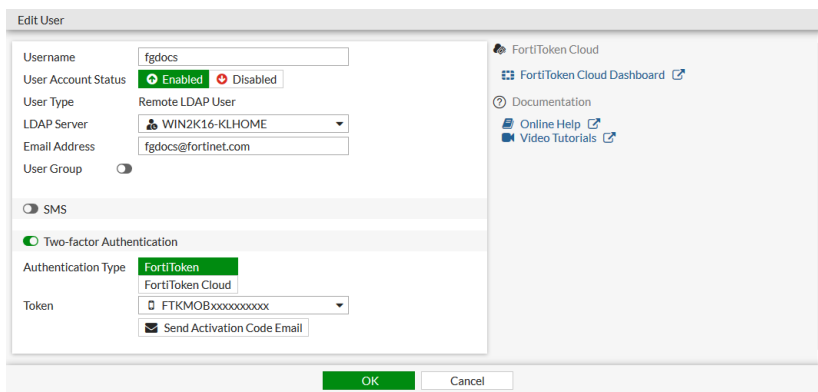

10. Click OK.

### To disable case and accent sensitivity on the remote user:

This can only be configured in the CLI.

```
config user local
  edit "fgdocs"
    set type ldap
    set two-factor fortitoken
    set fortitoken "FTKMOBxxxxxxxx"
    set email-to "fgdocs@fortinet.com"
    set username-sensitivity disable
    set ldap-server "WIN2K16-KLHOME"
  next
end
```

### To configure a user group with the remote user and the LDAP server:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Set the *Name* to *LDAP-USERGRP*.



3. Set *Members* to the just created remote user.
4. In the *Remote Groups* table, click *Add*:
  - a. Set *Remote Server* to the LDAP server.
  - b. Set the group or groups that apply, and right click to add them.
  - c. Click *OK*.

New User Group

Name: LDAP-USERGRP

Type: Firewall

Members: fgdocs

Remote Groups

+ Add Edit Delete

Remote Server	Group Name
WIN2K16-KLHOME	

OK Cancel

5. Click *OK*.

#### To apply the user group to the SSL VPN portal:

1. Go to *VPN > SSL-VPN Settings*.
2. In the *Authentication/Portal Mapping* table, click *Create New*.
  - a. Set *Users/Groups* to the just created user group.
  - b. Configure the remaining settings as required.
  - c. Click *OK*.

SSL-VPN Settings

Authentication/Portal Mapping

+ Create New Edit Delete

Users/Groups	Realm	Portal
LDAP-USERGRP	/	tunnel-access
All Other Users/Groups	/	full-access

Apply

3. Click *Apply*.

#### To apply the user group to a firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the following:

<b>Name</b>	SSLVPNtoInternal
<b>Incoming Interface</b>	SSL-VPN tunnel interface (ssl.root)
<b>Outgoing Interface</b>	port3
<b>Source</b>	Address - SSLVPN_TUNNEL_ADDR1 User - LDAP-USERGRP

<b>Destination</b>	The address of the internal network. In this case: 192.168.20.0.
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT
<b>NAT</b>	Enabled

3. Configuring the remaining settings as required.
4. Click OK.

### To configure this example in the CLI:

1. Configure the LDAP server:

```
config user ldap
    edit "WIN2K16-KLHOME"
        set server "192.168.20.6"
        set cnid "sAMAccountName"
        set dn "dc=KLHOME,dc=local"
        set type regular
        set username "KLHOME\\Administrator"
        set password *****
        set secure ldaps
        set ca-cert "CA_Cert_1"
        set port 636
    next
end
```

2. Configure an LDAP user with MFA and disable case and accent sensitivity on the remote user:

```
config user local
    edit "fgdocs"
        set type ldap
        set two-factor fortitoken
        set fortitoken "FTKMOBxxxxxxxxxx"
        set email-to "fgdocs@fortinet.com"
```

```

        set username-sensitivity disable
        set ldap-server "WIN2K16-KLHOME"
    next
end

```

### 3. Configure a user group with the remote user and the LDAP server:

```

config user group
    edit "LDAP-USERGRP"
        set member "fgdocs" "WIN2K16-KLHOME"
    next
end

```

### 4. Apply the user group to the SSL VPN portal:

```

config vpn ssl settings
    set servercert <server certificate>
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "port1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "LDAP-USERGRP"
            set portal "full-access"
        next
    end
end

```

### 5. Apply the user group to a firewall policy:

```

config firewall policy
    edit 5
        set name "SSLVPNtoInternal"
        set srcintf "ssl.root"
        set dstintf "port3"
        set srcaddr "SSLVPN_TUNNEL_ADDR1"
        set dstaddr "192.168.20.0"
        set action accept
        set schedule "always"
        set service "ALL"
        set groups "LDAP-USERGRP"
        set nat enable
    next
end

```

## Verification

### To setup the VPN connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface.
  - c. If required, set the *Customize Port*.
4. Save your settings.

**To test the connection with case sensitivity disabled:**

1. Connect to the VPN:
  - a. Log in to the tunnel with the username, using the same case that it is on the FortiGate.
  - b. When prompted, enter your FortiToken code.  
You should now be connected.

2. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index   User      Group   Auth Type      Timeout      From      HTTP in/out  HTTPS
in/out
  0       fgdocs    LDAP-US  LDAP-USGRP     16(1)       289       192.168.2.202 0/0
0/0

SSL VPN sessions:
  Index   User      Group   Source IP      Duration      I/O Bytes      Tunnel/Dest IP
  0       fgdocs    LDAP-US  192.168.2.202  192.168.2.202 45           99883/5572
10.212.134.200
```

3. Disconnect from the VPN connection.
4. Reconnect to the VPN:
  - a. Log in to the tunnel with the username, using a different case than on the FortiGate.
  - b. When prompted, enter your FortiToken code.  
You should now be connected.
5. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index   User      Group   Auth Type      Timeout      From      HTTP in/out  HTTPS
in/out
  0       FGDOCS    LDAP-US  LDAP-USGRP     16(1)       289       192.168.2.202 0/0
0/0

SSL VPN sessions:
  Index   User      Group   Source IP      Duration      I/O Bytes      Tunnel/Dest IP
  0       FGDOCS    LDAP-US  192.168.2.202  192.168.2.202 45           99883/5572
10.212.134.200
```

In both cases, the remote user is matched against the remote LDAP user object and prompted for multi-factor authentication.

**To test the connection with case and accent sensitivity enabled:**

1. Enable case and accent sensitivity for the user:

```
config user local
  edit "fgdocs"
    set username-sensitivity enable
  next
end
```

## 2. Connect to the VPN

- a. Log in to the tunnel with the username, using the same case that it is on the FortiGate.
- b. When prompted, enter your FortiToken code.  
You should now be connected.

## 3. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index  User      Group  Auth Type  Timeout  From  HTTP in/out  HTTPS
in/out
  0      fgdocs    LDAP-USERGRP  16(1)    289      192.168.2.202 0/0
0/0

SSL VPN sessions:
  Index  User      Group  Source IP  Duration  I/O Bytes  Tunnel/Dest IP
0      fgdocs    LDAP-USERGRP  192.168.2.202  45      99883/5572
10.212.134.200
```

## 1. Disconnect from the VPN connection.

## 2. Reconnect to the VPN:

- a. Log in to the tunnel with the username, using a different case than on the FortiGate.  
You will not be prompted for your FortiToken code. You should now be connected.

## 3. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
  Index  User      Group  Auth Type  Timeout  From  HTTP in/out  HTTPS
in/out
  0      FGdocs    LDAP-USERGRP  16(1)    289      192.168.2.202 0/0
0/0


SSL VPN sessions:
  Index  User      Group  Source IP  Duration  I/O Bytes  Tunnel/Dest IP
0      FGdocs    LDAP-USERGRP  192.168.2.202  45      99883/5572
10.212.134.200
```

In this case, the user is allowed to log in without a FortiToken code because the entered user name did not match the name defined on the remote LDAP user object. Authentication continues to be evaluated against the LDAP server though, which is not case sensitive.

## SSL VPN with FortiToken mobile push authentication

This is a sample configuration of SSL VPN that uses FortiToken mobile push two-factor authentication. If you enable push notifications, users can accept or deny the authentication request.

## Sample topology

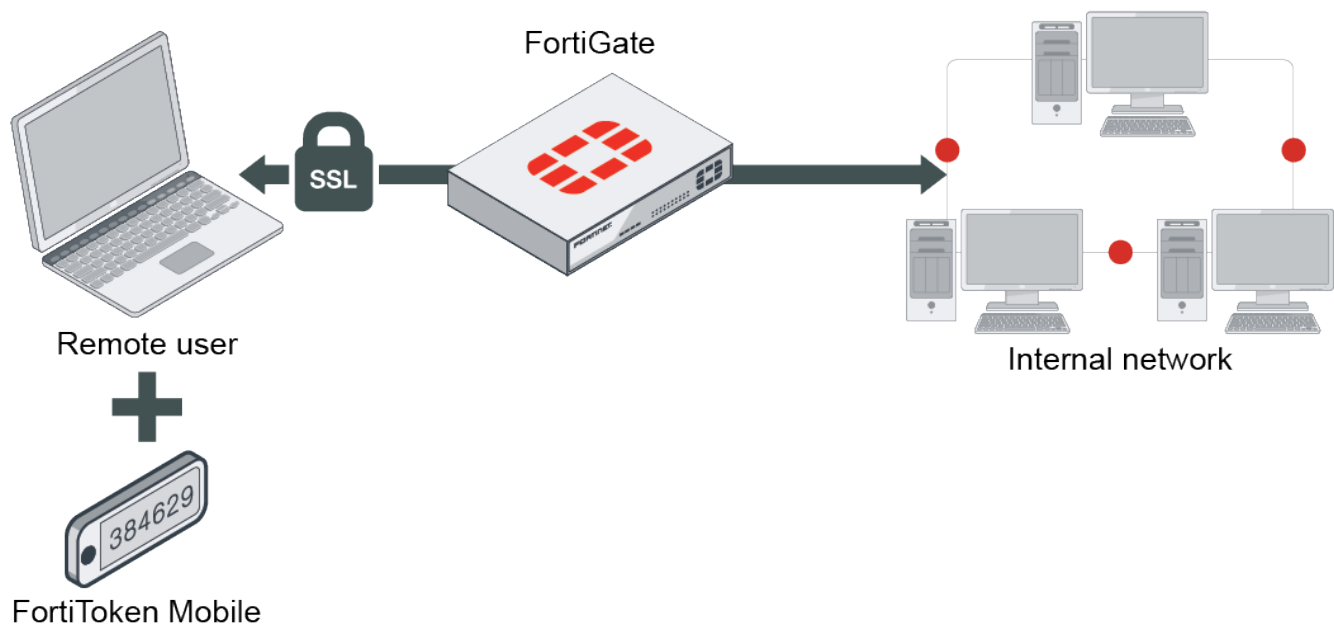

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Register FortiGate for FortiCare Support:  
To add or download a mobile token on FortiGate, FortiGate must be registered for FortiCare Support. If your FortiGate is registered, skip this step.
  - a. Go to *Dashboard > Licenses*.
  - b. Hover the pointer on *FortiCare Support* to check if FortiCare registered. If not, click it and select *Register*.
3. Add FortiToken mobile to FortiGate:  
If your FortiGate has FortiToken installed, skip this step.
  - a. Go to *User & Authentication > FortiTokens* and click *Create New*.
  - b. Select *Mobile Token* and type in *Activation Code*.
  - c. Every FortiGate has two free mobile tokens. Go to *User & Authentication > FortiTokens* and click *Import Free Trial Tokens*.
4. Enable FortiToken mobile push:  
To use FTM-push authentication, use CLI to enable FTM-Push on the FortiGate.

- a. Ensure `server-ip` is reachable from the Internet and enter the following CLI commands:

```
config system ftm-push
    set server-ip 172.20.120.123
    set status enable
end
```

- b. Go to *Network > Interfaces*.
  - c. Edit the *wan1* interface.
  - d. Under *Administrative Access > IPv4*, select *FTM*.
  - e. Click *OK*.
5. Configure user and user group:
    - a. Go to *User & Authentication > User Definition* to create a local user *sslvpnuser1*.
    - b. Enter the user's *Email Address*.
    - c. Enable *Two-factor Authentication* and select one mobile *Token* from the list,
    - d. Enable *Send Activation Code* and select *Email*.
    - e. Click *Next* and click *Submit*.
    - f. Go to *User & Authentication > User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
  6. Activate the mobile token:
    - a. When the user *sslvpnuser1* is created, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.
  7. Configure SSL VPN web portal:
    - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
    - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
  8. Configure SSL VPN settings:
    - a. Go to *VPN > SSL-VPN Settings*.
    - b. Select the *Listen on Interface(s)*, in this example, *wan1*.
    - c. Set *Listen on Port* to *10443*.
    - d. Set *Server Certificate* to the authentication certificate.
    - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
    - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
  9. Configure SSL VPN firewall policy:
    - a. Go to *Policy & Objects > Firewall Policy*.
    - b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
    - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
    - d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
    - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
    - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
    - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
    - h. Enable *NAT*.
    - i. Configure any remaining firewall and security options as desired.
    - j. Click *OK*.

**To configure SSL VPN using the CLI:****1. Configure the interface and firewall address.**

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
  next
end
```

**2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.**

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
  next
end

config firewall address
  edit "192.168.1.0"
    set subnet 192.168.1.0 255.255.255.0
  next
end
```

**3. Register FortiGate for FortiCare Support.**

To add or download a mobile token on FortiGate, FortiGate must be registered for FortiCare Support. If your FortiGate is registered, skip this step.

```
diagnose forticare direct-registration product-registration -a "your account@xxx.com" -p
"your password" -T "Your Country/Region" -R "Your Reseller" -e 1
```

**4. Add FortiToken mobile to FortiGate:**

```
execute fortitoken-mobile import <your FTM code>
```

If your FortiGate has FortiToken installed, skip this step.

Every FortiGate has two free mobile Tokens. You can download the free token.

```
execute fortitoken-mobile import 0000-0000-0000-0000-0000
```

**5. Enable FortiToken mobile push:**

- a.** To use FTM-push authentication, ensure `server-ip` is reachable from the Internet and enable FTM-push in the FortiGate:

```
config system ftm-push
  set server-ip 172.20.120.123
  set status enable
end
```

- b.** Enable FTM service on WAN interface:

```
config system interface
  edit "wan1"
    append allowaccess ftm
  next
end
```



**6. Configure user and user group:**

```
config user local
    edit "sslvpnuser1"
        set type password
        set two-factor fortitoken
        set fortitoken <select mobile token for the option list>
        set email-to <user's email address>
        set passwd <user's password>
    next
end
config user group
    edit "sslvpngroup"
        set member "sslvpnuser1"
    next
end
```

**7. Activate the mobile token.**

When the user *sslvpnuser1* is created, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

**8. Configure SSL VPN web portal:**

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

**9. Configure SSL VPN settings:**

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

**10. Configure one SSL VPN firewall policy to allow remote user to access the internal network:**

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
```

```

        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the `sslvpnuser1` credentials.  
The FortiGate pushes a login request notification through the FortiToken mobile application.
3. Check your mobile device and select *Approve*.  
When the authentication is approved, `sslvpnuser1` is logged into the SSL VPN portal.
4. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, `172.20.120.123`.
  - c. Select *Customize Port* and set it to `10443`.
4. Save your settings.
5. Log in using the `sslvpnuser1` credentials and click *FTM Push*.  
The FortiGate pushes a login request notification through the FortiToken mobile application.
6. Check your mobile device and select *Approve*.  
When the authentication is approved, `sslvpnuser1` is logged into the SSL VPN tunnel.

### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

### To check the web portal login using the CLI:

```

get vpn ssl monitor
SSL VPN Login Users:
  Index   User           Auth Type   Timeout   From           HTTP in/out   HTTPS in/out
  0       sslvpnuser1    1 (1)      229      10.1.100.254   0/0           0/0

```

```

SSL VPN sessions:
  Index   User           Source IP    Duration      I/O Bytes      Tunnel/Dest IP

```

### To check the tunnel login using the CLI:

```

get vpn ssl monitor
SSL VPN Login Users:
  Index   User           Auth Type   Timeout   From           HTTP in/out   HTTPS in/out
  0       sslvpnuser1    1 (1)      291      10.1.100.254   0/0           0/0

```


SSL VPN sessions:

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	sslvpnuser1	10.1.100.254	9	22099/43228	10.212.134.200

## SSL VPN with RADIUS on FortiAuthenticator

This is a sample configuration of SSL VPN that uses FortiAuthenticator as a RADIUS authentication server.

### Sample topology

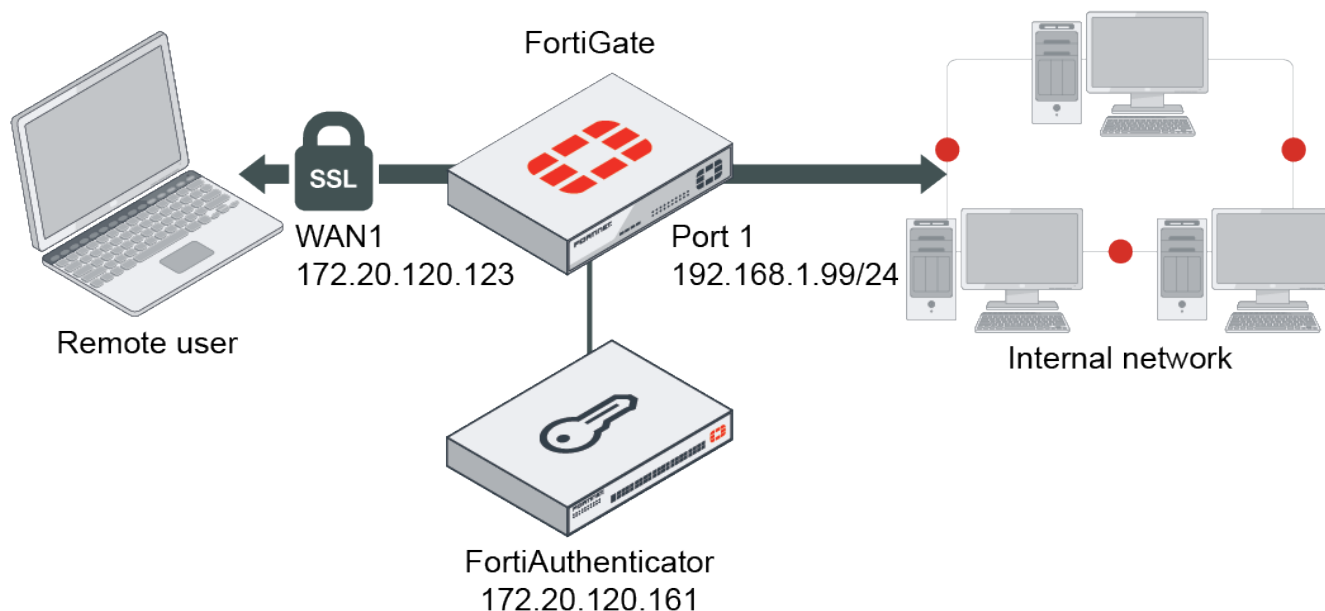

### Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

#### To configure FortiAuthenticator using the GUI:

- Create a user on the FortiAuthenticator.
  - On the FortiAuthenticator, go to *Authentication > User Management > Local Users* to create a user *sslvpnuser1*.
  - Enable *Allow RADIUS authentication* and click *OK* to access additional settings.
  - Go to *Authentication > User Management > User Groups* to create a group *sslvpngroup*.
  - Add *sslvpnuser1* to the group by moving the user from *Available users* to *Selected users*.
- Create the RADIUS client (FortiGate) on the FortiAuthenticator.
  - On the FortiAuthenticator, go to *Authentication > RADIUS Service > Clients* to add the FortiGate as a RADIUS client (*OfficeServer*).
  - Enter the FortiGate IP address and set a *Secret*.  
The secret is a pre-shared secure password that the FortiGate uses to authenticate to the FortiAuthenticator.
  - Set *Realms* to *local | Local users*.

**To configure SSL VPN using the GUI:**

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Addresses* and create an address for internal subnet *192.168.1.0*.
2. Create a RADIUS user and user group .
  - a. On the FortiGate, go to *User & Authentication > RADIUS Servers* to create a user to connect to the RADIUS server (FortiAuthenticator).
  - b. For *Name*, use *FAC-RADIUS*.
  - c. Enter the IP address of the FortiAuthenticator, and enter the *Secret* created above.
  - d. Click *Test Connectivity* to ensure you can connect to the RADIUS server.
  - e. Select *Test User Credentials* and enter the credentials for *sslvpnuser1*.  
The FortiGate can now connect to the FortiAuthenticator as the RADIUS client.
  - f. Go to *User & Authentication > User Groups* and click *Create New* to map authenticated remote users to a user group on the FortiGate.
  - g. For *Name*, use *SSLVPNGroup*.
  - h. In *Remote Groups*, click *Add*.
  - i. In the *Remote Server* dropdown list, select *FAC-RADIUS*.
  - j. Leave the *Groups* field blank.
3. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
  - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
4. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. Select the *Listen on Interface(s)*, in this example, *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Set *Server Certificate* to the authentication certificate.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
5. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
  - c. *Incoming Interface* must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example: *port1*.
  - e. Set the *Source > Address* to *all* and *Source > User* to *sslvpngroup*.
  - f. Set *Destination > Address* to the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Enable NAT.
  - i. Configure the remaining options as required.
  - j. Click OK.

**To configure SSL VPN using the CLI:****1. Configure the interface and firewall address.**

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

**2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.**

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

**3. Create a RADIUS user and user group.**

```
config user radius
    edit "FAC-RADIUS"
        set server "172.20.120.161"
        set secret <FAC client secret>
    next
end

config user group
    edit "sslvpngroup"
        set member "FAC-RADIUS"
    next
end
```

**4. Configure SSL VPN web portal.**

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

**5. Configure SSL VPN settings.**

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
```

```

config authentication-rule
    edit 1
        set groups "sslvpngroup"
        set portal "full-access"
    next
end
end

```

**6. Configure one SSL VPN firewall policy to allow remote user to access the internal network.**

```

config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

**To see the results of web portal:**

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the *sslvpnuser1* credentials.
3. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

**To see the results of tunnel connection:**

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection.
  - Set the connection name.
  - Set *Remote Gateway* to *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *sslvpnuser1* credentials and check that you are logged into the SSL VPN tunnel.

**To check the SSL VPN connection using the GUI:**

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

**To check the web portal login using the CLI:**

```

get vpn ssl monitor
SSL VPN Login Users:

```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	sslvpnuser1	1 (1)	229	10.1.100.254	0/0	0/0

SSL VPN sessions:

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
-------	------	-----------	----------	-----------	----------------

**To check the tunnel login using the CLI:**

```
get vpn ssl monitor
```

SSL VPN Login Users:

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	sslvpnuser1	1(1)	291	10.1.100.254	0/0	0/0


SSL VPN sessions:

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	sslvpnuser1	10.1.100.254	9	22099/43228	10.212.134.200

## SSL VPN with RADIUS and FortiToken mobile push on FortiAuthenticator

This is a sample configuration of SSL VPN that uses FortiAuthenticator as a RADIUS authentication server and FortiToken mobile push two-factor authentication. If you enable push notifications, users can accept or deny the authentication request.

### Sample topology

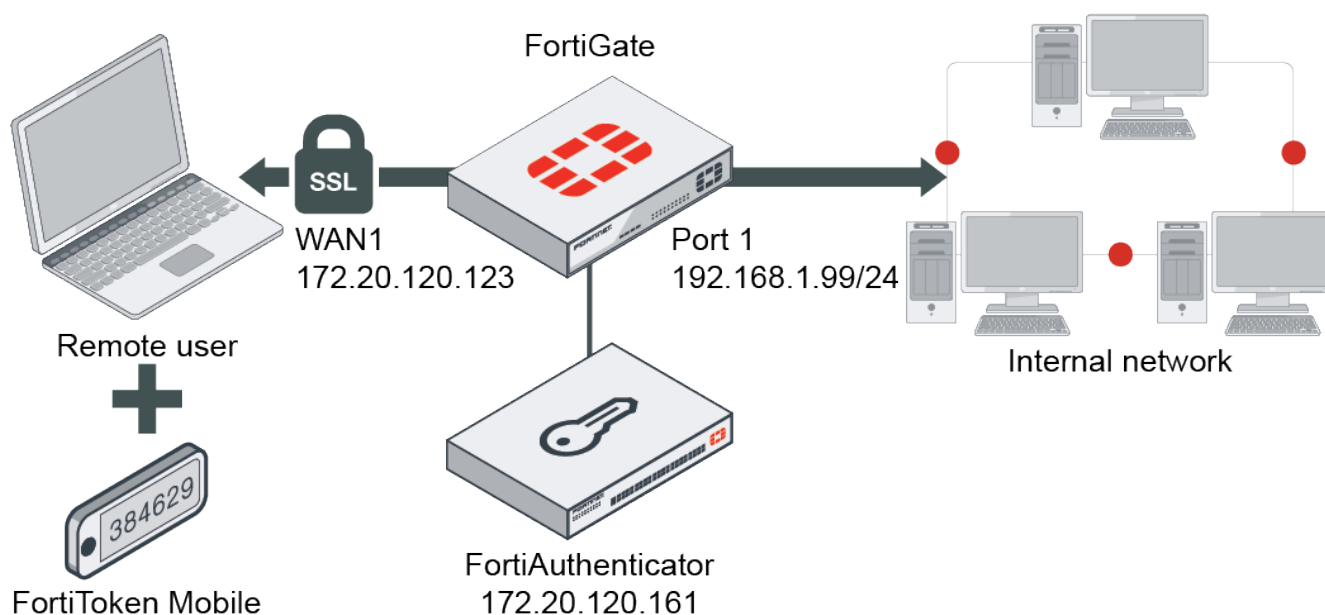

### Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure FortiAuthenticator using the GUI:

1. On the FortiAuthenticator, go to *System > Administration > System Access* and configure a *Public IP/FQDN* for *FortiToken Mobile*. If the FortiAuthenticator is behind a firewall, the public IP/FQDN will be an IP/port forwarding rule directed to one of the FortiAuthenticator interfaces. The interface that receives the approve/deny FTM push responses must have the *FortiToken Mobile API* service enabled.
2. Add a FortiToken mobile license on the FortiAuthenticator:
  - a. Go to *Authentication > User Management > FortiTokens*.
  - b. Click *Create New*.
  - c. Set *Token type* to *FortiToken Mobile* and enter the *FortiToken Activation codes*.
3. Create the RADIUS client (FortiGate) on the FortiAuthenticator:
  - a. Go to *Authentication > RADIUS Service > Clients* to add the FortiGate as a RADIUS client (*OfficeServer*).
  - b. Enter the FortiGate IP address and set a *Secret*.  
The secret is a pre-shared secure password that the FortiGate uses to authenticate to the FortiAuthenticator.
  - c. Set *Authentication method* to *Enforce two-factor authentication*.
  - d. Select *Enable FortiToken Mobile push notifications authentication*.
  - e. Set *Realms* to *local | Local users*.
4. Create a user and assign FortiToken mobile to the user on the FortiAuthenticator:
  - a. Go to *Authentication > User Management > Local Users* to create a user *sslvpnuser1*.
  - b. Enable *Allow RADIUS authentication* and click *OK* to access additional settings.
  - c. Enable *Token-based authentication* and select to deliver the token code by *FortiToken*.
  - d. Select the FortiToken added from the FortiToken Mobile dropdown menu.
  - e. Set *Delivery method* to *Email* and fill in the *User Information* section.
  - f. Go to *Authentication > User Management > User Groups* to create a group *sslvpngroup*.
  - g. Add *sslvpnuser1* to the group by moving the user from *Available users* to *Selected users*.
5. Install the FortiToken mobile application on your Android or iOS smartphone.  
The FortiAuthenticator sends the FortiToken mobile activation to the user's email address.
6. Activate the FortiToken mobile through the FortiToken mobile application by entering the activation code or scanning the QR code.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click *OK*.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Create a RADIUS user and user group:
  - a. On the FortiGate, go to *User & Authentication > RADIUS Servers* to create a user to connect to the RADIUS server (FortiAuthenticator).
  - b. For *Name*, use *FAC-RADIUS*.
  - c. Enter the IP address of the FortiAuthenticator, and enter the *Secret* created above.
  - d. Click *Test Connectivity* to ensure you can connect to the RADIUS server.
  - e. Select *Test User Credentials* and enter the credentials for *sslvpnuser1*.  
The FortiGate can now connect to the FortiAuthenticator as the RADIUS client.



- f. Go to *User & Authentication > User Groups* and click *Create New* to map authenticated remote users to a user group on the FortiGate.
  - g. For *Name*, use *SSLVPNGroup*.
  - h. In *Remote Groups*, click *Add*.
  - i. In the *Remote Server* dropdown list, select *FAC-RADIUS*.
  - j. Leave the *Groups* field blank.
3. Configure SSL VPN web portal:
  - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
  - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
4. Configure SSL VPN settings:
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. Select the *Listen on Interface(s)*, in this example, *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Set *Server Certificate* to the authentication certificate.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
5. Configure SSL VPN firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
  - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example: *port1*.
  - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
  - g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - h. Enable *NAT*.
  - i. Configure any remaining firewall and security options as desired.
  - j. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
```

```
        next
    end

    config firewall address
        edit "192.168.1.0"
            set subnet 192.168.1.0 255.255.255.0
        next
    end
```

### 3. Create a RADIUS user and user group:

```
config user radius
    edit "FAC-RADIUS"
        set server "172.20.120.161"
        set secret <FAC client secret>
    next
end

config user group
    edit "sslvpngroup"
        set member "FAC-RADIUS"
    next
end
```

### 4. Configure SSL VPN web portal:

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

### 5. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

### 6. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
```

```

        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the *sslvpnuser1* credentials.  
The FortiAuthenticator pushes a login request notification through the FortiToken Mobile application.
3. Check your mobile device and select *Approve*.  
When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN portal.
4. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example: *172.20.120.123*.
  - c. Select *Customize Port* and set it to *10443*.
4. Save your settings.
5. Log in using the *sslvpnuser1* credentials and click *FTM Push*.  
The FortiAuthenticator pushes a login request notification through the FortiToken Mobile application.
6. Check your mobile device and select *Approve*.  
When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN tunnel.

### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

### To check the web portal login using the CLI:

```

get vpn ssl monitor
SSL VPN Login Users:
  Index   User           Auth Type   Timeout   From           HTTP in/out   HTTPS in/out
  0       sslvpnuser1    1 (1)      229       10.1.100.254   0/0           0/0

SSL VPN sessions:
  Index   User           Source IP   Duration      I/O Bytes      Tunnel/Dest IP

```

### To check the tunnel login on CLI:

```
get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	sslvpnuser1	1 (1)	291	10.1.100.254	0/0	0/0


```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	sslvpnuser1	10.1.100.254	9	22099/43228	10.212.134.200

## SSL VPN with RADIUS password renew on FortiAuthenticator

This is a sample configuration of SSL VPN for RADIUS users with *Force Password Change on next login*. In this example, the RADIUS server is a FortiAuthenticator. A user *test1* is configured on FortiAuthenticator with *Force password change on next login*.

### Sample topology

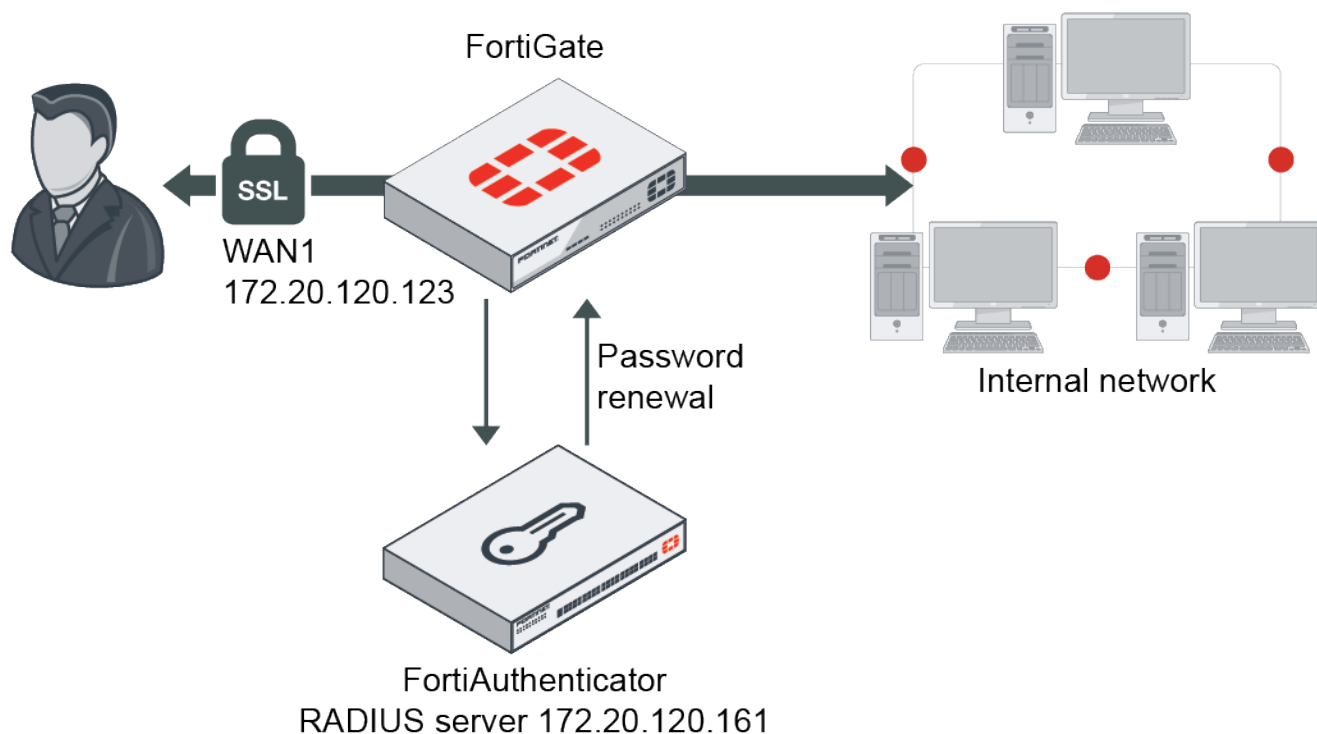

### Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click *OK*.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Create a RADIUS user.
  - a. Go to *User & Authentication > RADIUS Servers* to create a user.
  - b. Set *Authentication method* to *MS-CHAP-v2*.
  - c. Enter the *IP/Name* and *Secret*.
  - d. Click *Create*.  
Password renewal only works with the MS-CHAP-v2 authentication method.
  - e. To enable the `password-renew` option, use these CLI commands.
 

```
config user radius
  edit "fac"
    set server "172.20.120.161"
    set secret <fac radius password>
    set auth-type ms_chap_v2
    set password-renewal enable
  next
end
```
3. Configure user group.
  - a. Go to *User & Authentication > User Groups* to create a user group.
  - b. For the *Name*, enter *fac-group*.
  - c. In *Remote Groups*, click *Add* to add *Remote Server* you just created.
4. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
  - b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
5. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. Select the *Listen on Interface(s)*, in this example, *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Set *Server Certificate* to the authentication certificate.
  - e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
  - f. Create new *Authentication/Portal Mapping* for group *fac-group* mapping portal *full-access*.
6. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
  - c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - d. Set the *Source Address* to *all* and *Source User* to *fac-group*.
  - e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
  - f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.

- g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
- h. Enable *NAT*.
- i. Configure any remaining firewall and security options as desired.
- j. Click *OK*.

### To configure SSL VPN using the CLI:

#### 1. Configure the interface and firewall address.

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
  next
end
```

#### 2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
  edit "port1"
    set vdom "root"
    set ip 192.168.1.99 255.255.255.0
  next
end

config firewall address
  edit "192.168.1.0"
    set subnet 192.168.1.0 255.255.255.0
  next
end
```

#### 3. Configure the RADIUS server.

```
config user radius
  edit "fac"
    set server "172.18.58.107"
    set secret <fac radius password>
    set auth-type ms_chap_v2
    set password-renewal enable
  next
end
```

#### 4. Configure user group.

```
config user group
  edit "fac-group"
    set member "fac"
  next
end
```

#### 5. Configure SSL VPN web portal.

```
config vpn ssl web portal
  edit "full-access"
    set tunnel-mode enable
    set web-mode enable
    set ip-pools "SSLVPN_TUNNEL_ADDR1"
    set split-tunneling disable
```

```

    next
end

```

## 6. Configure SSL VPN settings.

```

config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "fac-group"
            set portal "full-access"
        next
    end
end

```

## 7. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```

config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "fac-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the *test1* credentials.  
Use a user which is configured on FortiAuthenticator with *Force password change on next logon*.
3. Click *Login*. You are prompted to enter a new password.
4. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.
3. Add a new connection.
  - Set the connection name.
  - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.

- Log in using the *test1* credentials.  
You are prompted to enter a new password.

#### To check the SSL VPN connection using the GUI:

- Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
- Go to *Log & Report > System Events* and select the *VPN Events* card to view the details of the SSL VPN connection event log.
- Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

#### To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
  Index   User    Auth Type    Timeout    From           HTTP in/out    HTTPS in/out
  0       test1   1(1)         229        10.1.100.254   0/0            0/0

SSL VPN sessions:
  Index   User    Source IP      Duration      I/O Bytes      Tunnel/Dest IP
```

#### To check the tunnel login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
  Index   User    Auth Type    Timeout    From           HTTP in/out    HTTPS in/out
  0       test1   1(1)         291        10.1.100.254   0/0            0/0

SSL VPN sessions:
  Index   User    Source IP      Duration      I/O Bytes      Tunnel/Dest IP
  0       test1   10.1.100.254   9            22099/43228    10.212.134.200
```


## SSL VPN with RADIUS on Windows NPS

This is an example configuration of SSL VPN that uses Windows Network Policy Server (NPS) as a RADIUS authentication server.

The NPS must already be configured to accept the FortiGate as a RADIUS client and the choice of authentication method, such as MS-CHAPv2. A shared key must also have been created.



## Example

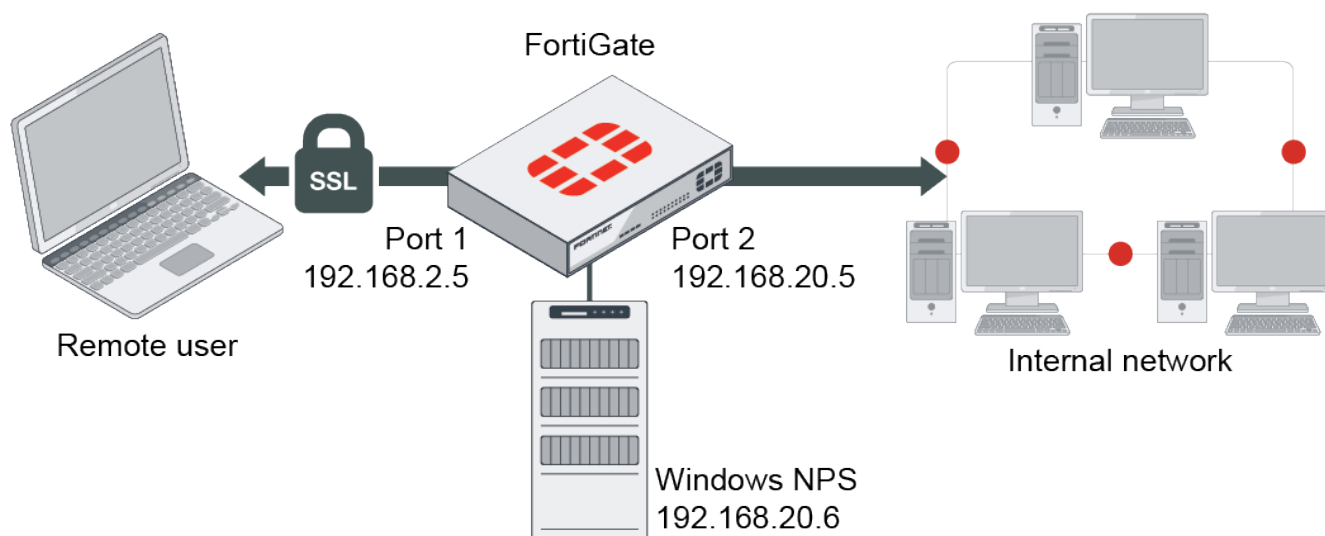

The user is connecting from their PC to the FortiGate's port1 interface. RADIUS authentication occurs between the FortiGate and the Windows NPS, and the SSL-VPN connection is established once the authentication is successful.

### Configure SSL-VPN with RADIUS on Windows NPS in the GUI

#### To configure the internal and external interfaces:

1. Go to *Network > Interfaces*
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click *OK*.

#### To create a firewall address:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*
4. Set *IP/Netmask* to *192.168.20.0/24*.
5. Click *OK*.

#### To add the RADIUS server:

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Set *Name* to *rad-server*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.

6. Optionally, click *Test User Credentials* to test user credentials. Testing from the GUI is limited to PAP.

7. Click **OK**.

### To configure a user group:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Set *Name* to *rad-group*.
3. Under *Remote Groups*, click *Add* and add the *rad-server*.

4. Click **OK**.


### To configure SSL VPN settings:

1. Go to *VPN > SSL-VPN Settings*.
2. Select the *Listen on Interface(s)*, in this example, *port1*.
3. Set *Listen on Port* to *10443*.
4. If you have a server certificate, set *Server Certificate* to the authentication certificate.
5. Under *Authentication/Portal Mapping*:
  - a. Edit *All Other Users/Groups* and set *Portal* to *web-access*.
  - b. Click *Create New* and create a mapping for the *rad-group* user group with *Portal* set to *full-access*.

- c. Click **OK**.
6. Click **Apply**.

### To configure an SSL VPN firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Set the policy name, in this example, *sslvpn-radius*.
3. Set *Incoming Interface* to *SSL-VPN tunnel interface(ssl.root)*.
4. Set *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port2*.
5. Set the *Source > Address* to *all* and *Source > User* to *rad-group*.
6. Set *Destination > Address* to the internal protected subnet *192.168.20.0*.
7. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
8. Enable NAT.

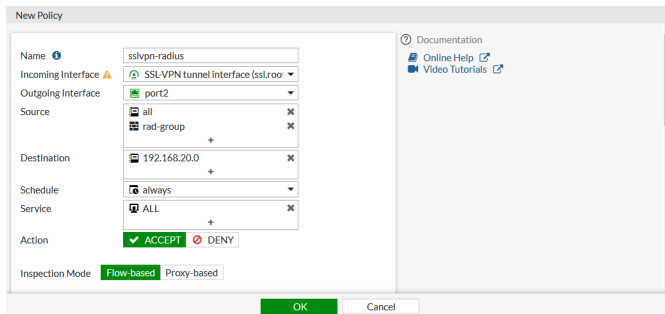

9. Configure the remaining options as required.
10. Click OK.

### Configure SSL-VPN with RADIUS on Windows NPS in the CLI

#### To configure SSL VPN using the CLI:

1. Configure the internal and external interfaces:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.2.5 255.255.255.0
        set alias internal
    next
    edit "port2"
        set vdom "root"
        set ip 192.168.20.5 255.255.255.0
        set alias external
    next
end
```

2. Configure the firewall address:

```
config firewall address
    edit "192.168.20.0"
        set subnet 192.168.20.0 255.255.255.0
    next
end
```

**3. Add the RADIUS server:**

```
config user radius
    edit "rad-server"
        set server "192.168.20.6"
        set secret *****
    next
end
```

**4. Create a user group and add the RADIUS server to it:**

```
config user group
    edit "rad-group"
        set member "rad-server"
    next
end
```

**5. Configure SSL VPN settings:**

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "port1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "rad-group"
            set portal "full-access"
        next
    end
end
```

**6. Configure an SSL VPN firewall policy to allow remote user to access the internal network.**

```
config firewall policy
    edit 1
        set name "sslvpn-radius"
        set srcintf "ssl.root"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "192.168.20.0"
        set groups "rad-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

**Results****To connect with FortiClient in tunnel mode:**

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access > Configure VPN*.

3. Add a new connection:
  - a. Set the connection name.
  - b. Set *Remote Gateway* to *192.168.2.5*.
  - c. Select *Customize Port* and set it to *10443*.
4. Save your settings.
5. Log in using the RADIUS user credentials.

#### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > System Events* and select the *VPN Events* card to view the details of the SSL VPN connection event log.
3. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

#### To check the login using the CLI:

```
# get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Group	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	radkeith		rad-group	2 (1)	295	192.168.2.202	0/0 0/0

```
SSL VPN sessions:
```

Index	User	Group	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	radkeith		rad-group	192.168.2.202	18	28502/4966

```
10.212.134.200
```

## SSL VPN with multiple RADIUS servers


When configuring two or more RADIUS servers, you can configure a Primary and Secondary server within the same RADIUS server configurations for backup purposes. You can also configure multiple RADIUS servers within the same User Group to service the access request at the same time.



A tertiary server can be configured in the CLI.

---

## Sample topology

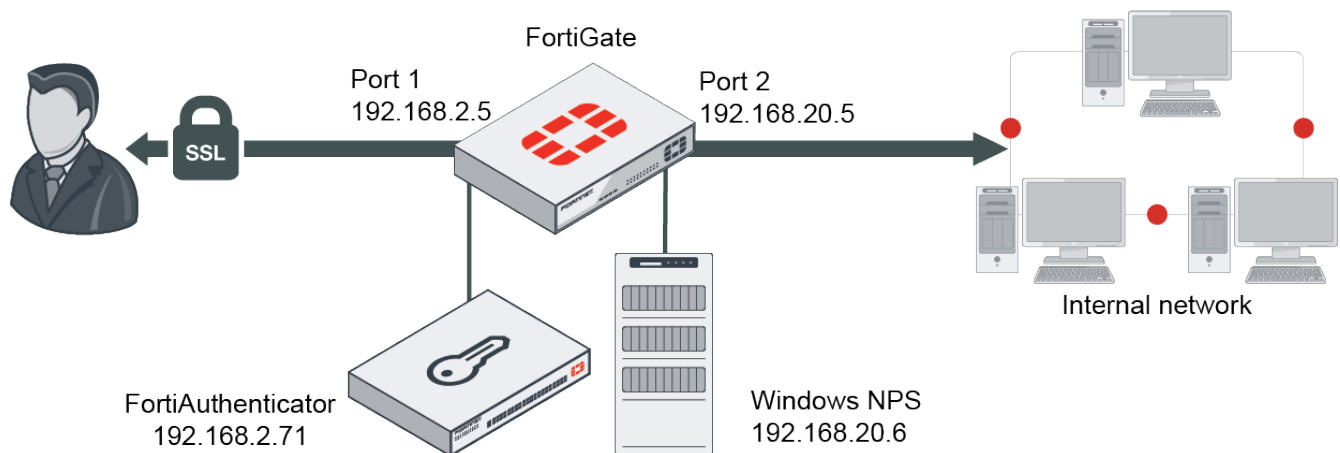

## Sample configurations

- [Configure a Primary and Secondary server for backup on page 1968](#)
- [Authenticating to two RADIUS servers concurrently on page 1972](#)

### Configure a Primary and Secondary server for backup

When you define a Primary and Secondary RADIUS server, the access request will always be sent to the Primary server first. If the request is denied with an Access-Reject, then the user authentication fails. However, if there is no response from the Primary server after another attempt, the access request will be sent to the Secondary server.

In this example, you will use a Windows NPS server as the Primary server and a FortiAuthenticator as the Secondary server. It is assumed that users are synchronized between the two servers.

#### To configure the internal and external interfaces:

1. Go to *Network > Interfaces*.
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click *OK*.

#### To create a firewall address:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*.
4. Set *IP/Netmask* to *192.168.20.0/24*.
5. Click *OK*.

#### To add the RADIUS servers:

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Set *Name* to *PrimarySecondary*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.

4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. Under *Secondary Server*, set *IP/Name* to *192.168.2.71* and *Secret* to the shared secret configured on the RADIUS server.
7. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
8. Click *OK*.

#### To configure the user group:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. In the *Name* field, enter *PrimarySecondaryGroup*.
3. In the *Remote Groups* area, click *Add*, and from the *Remote Server* dropdown, select *PrimarySecondary*.
4. Click *OK*, and then click *OK* again.

#### To configure the SSL VPN settings:

1. Go to *VPN > SSL-VPN Settings*.
2. From the *Listen on Interface(s)* dropdown select *port1*.
3. In the *Listen on Port* field enter *10443*.
4. Optionally, from the *Server Certificate* dropdown, select the authentication certificate if you have one for this SSL VPN portal.
5. Under *Authentication/Portal Mapping*, set the default portal web-access.
  - a. Select *All Other Users/Groups* and click *Edit*.
  - b. From the *Portal* dropdown, select *web-access*.
  - c. Click *OK*.
6. Create a web portal for *PrimarySecondaryGroup*.
  - a. Under *Authentication/Portal Mapping*, click *Create New*.
  - b. Click *Users/Groups* and select *PrimarySecondaryGroup*.
  - c. From the *Portal* dropdown, select *full-access*.
  - d. Click *OK*.

#### To configure SSL VPN firewall policy:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* to create a new policy, or double-click an existing policy to edit it and configure the following settings:

<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	<i>SSL-VPN tunnel interface (ssl.root)</i>
<b>Outgoing interface</b>	Set to the local network interface so that the remote user can access the internal network. For this example, select <i>port3</i> .
<b>Source</b>	In the <i>Address</i> tab, select <i>SSLVPN_TUNNEL_ADDR1</i> In the <i>User</i> tab, select <i>PrimarySecondaryGroup</i>

<b>Destination</b>	Select the internal protected subnet <i>192.168.20.0</i> .
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>All</i>
<b>Action</b>	<i>Accept</i>
<b>NAT</b>	<i>Enable</i>

3. Configure any remaining firewall and security options as required.
4. Click **OK**.

### To configure SSL VPN using the CLI:

1. Configure the internal interface and firewall address:

```
config system interface
  edit "port3"
    set vdom "root"
    set ip 192.168.20.5 255.255.255.0
    set alias "internal"
  next
end
config firewall address
  edit "192.168.20.0"
    set uuid cc41eec2-9645-51ea-d481-5c5317f865d0
    set subnet 192.168.20.0 255.255.255.0
  next
end
```

2. Configure the RADIUS server:

```
config user radius
  edit "PrimarySecondary"
    set server "192.168.20.6"
    set secret <secret>
    set secondary-server "192.168.2.71"
    set secondary-secret <secret>
  next
end
```

3. Add the RADIUS user to the user group:

```
config user group
  edit "PrimarySecondaryGroup"
    set member "PrimarySecondary "
  next
end
```

4. Configure SSL VPN settings:

```
config vpn ssl settings
  set servercert "server_certificate"
  set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
  set source-interface "port1"
  set source-address "all"
  set default-portal "web-access"
  config authentication-rule
    edit 1
      set groups "PrimarySecondaryGroup "
      set portal "full-access"
    next
```



```
end
end
```

**5. Configure one SSL VPN firewall policy to allow remote users to access the internal network:**

```
config firewall policy
edit 1
set name "sslvpn-radius"
set srcintf "ssl.root"
set dstintf "port3"
set srcaddr "all"
set dstaddr "192.168.20.0"
set groups "PrimarySecondaryGroup"
set action accept
set schedule "always"
set service "ALL"
set nat enable
next
end
```

**To verify the connection:**

User *radkeith* is a member of both the NPS server and the FAC server.

When the Primary server is up, it will connect to the SSL VPN tunnel using FortiClient.

```
# diagnose sniffer packet any 'port 1812' 4 0 1
interfaces=[any]
filters=[port 1812]
2020-05-15 16:26:50.838453 port3 out 192.168.20.5.2374 -> 192.168.20.6.1812: udp 118
2020-05-15 16:26:50.883166 port3 in 192.168.20.6.1812 -> 192.168.20.5.2374: udp 20
2020-05-15 16:26:50.883374 port3 out 192.168.20.5.2374 -> 192.168.20.6.1812: udp 182
2020-05-15 16:26:50.884683 port3 in 192.168.20.6.1812 -> 192.168.20.5.2374: udp 228
```

The access request is sent to the Primary NPS server 192.168.20.6, and the connection is successful.

```
# get vpn ssl monitor
SSL VPN Login Users:
```

Index in/out	User HTTPS in/out	Group	Auth Type	Timeout	From	HTTP
0 0/0	radkeith 0/0	PrimarySecondaryGroup	2(1)	285	192.168.2.202	

SSL VPN sessions:

Index Tunnel/Dest IP	User	Group	Source IP	Duration	I/O Bytes
0 10.212.134.200	radkeith	PrimarySecondaryGroup	192.168.2.202	62	132477/4966

When the Primary server is down, and the Secondary server is up, the connection is made to the SSLVPN tunnel again:

```
# diagnose sniffer packet any 'port 1812' 4 0 1
interfaces=[any]
filters=[port 1812]
2020-05-15 16:31:23.016875 port3 out 192.168.20.5.7989 -> 192.168.20.6.1812: udp 118
2020-05-15 16:31:28.019470 port3 out 192.168.20.5.7989 -> 192.168.20.6.1812: udp 118
2020-05-15 16:31:30.011874 port1 out 192.168.2.5.23848 -> 192.168.2.71.1812: udp 118
2020-05-15 16:31:30.087564 port1 in 192.168.2.71.1812 -> 192.168.2.5.23848: udp 20
```

Access request is sent to the Primary NPS server 192.168.20.6, but there was no response. RADIUS authentication falls through to the Secondary FortiAuthenticator 192.168.2.71, and the authentication was accepted. The VPN connection is established.

```
# get vpn ssl monitor
```

SSL VPN Login Users:

Index in/out	User HTTPS in/out	Group	Auth Type	Timeout	From	HTTP
0 0/0	radkeith 0/0	PrimarySecondaryGroup	2(1)	287	192.168.2.202	

SSL VPN sessions:

Index	User Tunnel/Dest IP	Group	Source IP	Duration	I/O Bytes
0	radkeith 10.212.134.200	PrimarySecondaryGroup	192.168.2.202	48	53544/4966

## Authenticating to two RADIUS servers concurrently

There are times where users are located on separate RADIUS servers. This may be the case when migrating from an old server to a new one for example. In this scenario, a Windows NPS server and a FortiAuthenticator are configured in the same User Group. The access-request is sent to both servers concurrently. If FortiGate receives an access-accept from either server, authentication is successful.

### To configure the internal and external interfaces:

1. Go to *Network > Interfaces*.
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click **OK**.

### To create a firewall address:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*.
4. Set *IP/Netmask* to *192.168.20.0/24*.
5. Click **OK**.

### To configure the first RADIUS server:

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Set *Name* to *win2k16*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. Click **OK**.

**To configure the second RADIUS server:**

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Set *Name* to *fac*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.2.71* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. Click *OK*.

**To configure the user group:**

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. In the *Name* field, enter *dualPrimaryGroup*.
3. In the *Remote Groups* area, click *Add*, and from the *Remote Server* dropdown, select *fac*.
4. Click *Add* again. From the *Remote Server* dropdown select *win2k16* and click *OK*.
5. Click *OK*, and then click *OK* again.

**To configure the SSL VPN settings:**

1. Go to *VPN > SSL-VPN Settings*.
2. From the *Listen on Interface(s)* dropdown select *port1*.
3. In the *Listen on Port* field enter *10443*.
4. Optionally, from the *Server Certificate* dropdown, select the authentication certificate if you have one for this SSL VPN portal.
5. Under *Authentication/Portal Mapping*, set the default portal web-access.
  - a. Select *All Other Users/Groups* and click *Edit*.
  - b. From the *Portal* dropdown, select *web-access*.
  - c. Click *OK*.
6. Create a web portal for *PrimarySecondaryGroup*.
  - a. Under *Authentication/Portal Mapping*, click *Create New*.
  - b. Click *Users/Groups* and select *dualPrimaryGroup*.
  - c. From the *Portal* dropdown, select *full-access*.
  - d. Click *OK*.

**To configure SSL VPN firewall policy:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* to create a new policy, or double-click an existing policy to edit it.

<b>Name</b>	Enter a name for the policy.
<b>Incoming Interface</b>	<i>SSL-VPN tunnel interface (ssl.root)</i>
<b>Outgoing interface</b>	Set to the local network interface so that the remote user can access the internal network. For this example, select <i>port3</i> .
<b>Source</b>	In the <i>Address</i> tab, select <i>SSLVPN_TUNNEL_ADDR1</i>

	In the <i>User</i> tab, select <i>dualPrimaryGroup</i>
<b>Destination</b>	Select the internal protected subnet <i>192.168.20.0</i> .
<b>Schedule</b>	<i>always</i>
<b>Service</b>	<i>All</i>
<b>Action</b>	<i>Accept</i>
<b>NAT</b>	<i>Enable</i>

3. Configure any remaining firewall and security options as required.
4. Click *OK*.

### To configure SSL VPN using the CLI:

1. Configure the internal interface and firewall address:

```
config system interface
  edit "port3"
    set vdom "root"
    set ip 192.168.20.5 255.255.255.0
    set alias "internal"
  next
end
config firewall address
  edit "192.168.20.0"
    set uuid cc41eec2-9645-51ea-d481-5c5317f865d0
    set subnet 192.168.20.0 255.255.255.0
  next
end
```

2. Configure the RADIUS server:

```
config user radius
  edit "win2k16"
    set server "192.168.20.6"
    set secret <secret>
  next
  edit "fac"
    set server "192.168.2.71"
    set secret <secret>
  next
end
```

3. Add the RADIUS user to the user group:

```
config user group
  edit "dualPrimaryGroup"
    set member "win2k16" "fac"
  next
end
```

4. Configure SSL VPN settings:

```
config vpn ssl settings
  set servercert "server_certificate"
  set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
  set source-interface "port1"
  set source-address "all"
  set default-portal "web-access"
  config authentication-rule
```

```

        edit 1
            set groups "dualPrimaryGroup"
            set portal "full-access"
        next
    end
end

```

**5. Configure one SSL VPN firewall policy to allow remote users to access the internal network:**

```

config firewall policy
    edit 1
        set name "sslvpn-radius"
        set srcintf "ssl.root"
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "192.168.20.0"
        set groups "dualPrimaryGroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

**To verify the connection:**

User *fackeith* is a member of the FortiAuthenticator server only.

User *radkeith* is a member of both the NPS server and the FortiAuthenticator server, but has different passwords on each server.

**Case 1: Connect to the SSLVPN tunnel using FortiClient with user FacAdmin:**

```

# diagnose sniffer packet any 'port 1812' 4 0 1
interfaces=[any]
filters=[port 1812]
2020-05-15 17:21:31.217985 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 118
2020-05-15 17:21:31.218091 port1 out 192.168.2.5.11490 -> 192.168.2.71.1812: udp 118
2020-05-15 17:21:31.219314 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 20 <--
    access-reject
2020-05-15 17:21:31.219519 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 182
2020-05-15 17:21:31.220219 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 42
2020-05-15 17:21:31.220325 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 119
2020-05-15 17:21:31.220801 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 20
2020-05-15 17:21:31.236009 port1 in 192.168.2.71.1812 -> 192.168.2.5.11490: udp 20 <--
    access-accept

```

Access is denied by the NPS server because the user does not exist. However, access is accepted by FortiAuthenticator. The end result is the authentication is successful.

```

# get vpn ssl monitor
SSL VPN Login Users:

```

Index	User	Group	Auth Type	Timeout	From	HTTP
in/out	HTTPS	in/out				
0	fackeith	dualPrimaryGroup	2(1)	292	192.168.2.202	0/0

```

SSL VPN sessions:

```

Index Tunnel/Dest IP	User	Group	Source IP	Duration	I/O Bytes
0 10.212.134.200	fackeith	dualPrimaryGroup	192.168.2.202	149	70236/4966

## Case 2: Connect to the SSLVPN tunnel using FortiClient with user radkeith:

```
# diagnose sniffer packet any 'port 1812' 4 0 l
interfaces=[any]
filters=[port 1812]
2020-05-15 17:26:07.335791 port1 out 192.168.2.5.17988 -> 192.168.2.71.1812: udp 118
2020-05-15 17:26:07.335911 port3 out 192.168.20.5.17988 -> 192.168.20.6.1812: udp 118
2020-05-15 17:26:07.337659 port3 in 192.168.20.6.1812 -> 192.168.20.5.17988: udp 20 <--
access-accept
2020-05-15 17:26:07.337914 port3 out 192.168.20.5.17988 -> 192.168.20.6.1812: udp 182
2020-05-15 17:26:07.339451 port3 in 192.168.20.6.1812 -> 192.168.20.5.17988: udp 228
2020-05-15 17:26:08.352597 port1 in 192.168.2.71.1812 -> 192.168.2.5.17988: udp 20 <--
access-reject
```

There is a password mismatch for this user on the Secondary RADIUS server. However, even though the authentication was rejected by FortiAuthenticator, it was accepted by Windows NPS. Therefore, the end result is authentication successful.

```
# get vpn ssl monitor
SSL VPN Login Users:
```

Index in/out	User HTTPS	Group in/out	Auth Type	Timeout	From	HTTP
0 0/0	radkeith	dualPrimaryGroup	2(1)	290	192.168.2.202	0/0

SSL VPN sessions:

Index Tunnel/Dest IP	User	Group	Source IP	Duration	I/O Bytes
0 10.212.134.200	radkeith	dualPrimaryGroup	192.168.2.202	142	64875/4966


## SSL VPN with local user password policy

This is a sample configuration of SSL VPN for users with passwords that expire after two days. Users are warned after one day about the password expiring. The password policy can be applied to any local user password. The password policy cannot be applied to a user group or a local remote user such as LDAP/RADIUS/TACACS+.

In FortiOS 6.2, users are warned after one day about the password expiring and have one day to renew it. If the password expires, the user cannot renew the password and must contact the administrator for assistance.

In FortiOS 6.0/5.6, users are warned after one day about the password expiring and have to renew it. If the password expires, the user can still renew the password.

## Sample topology

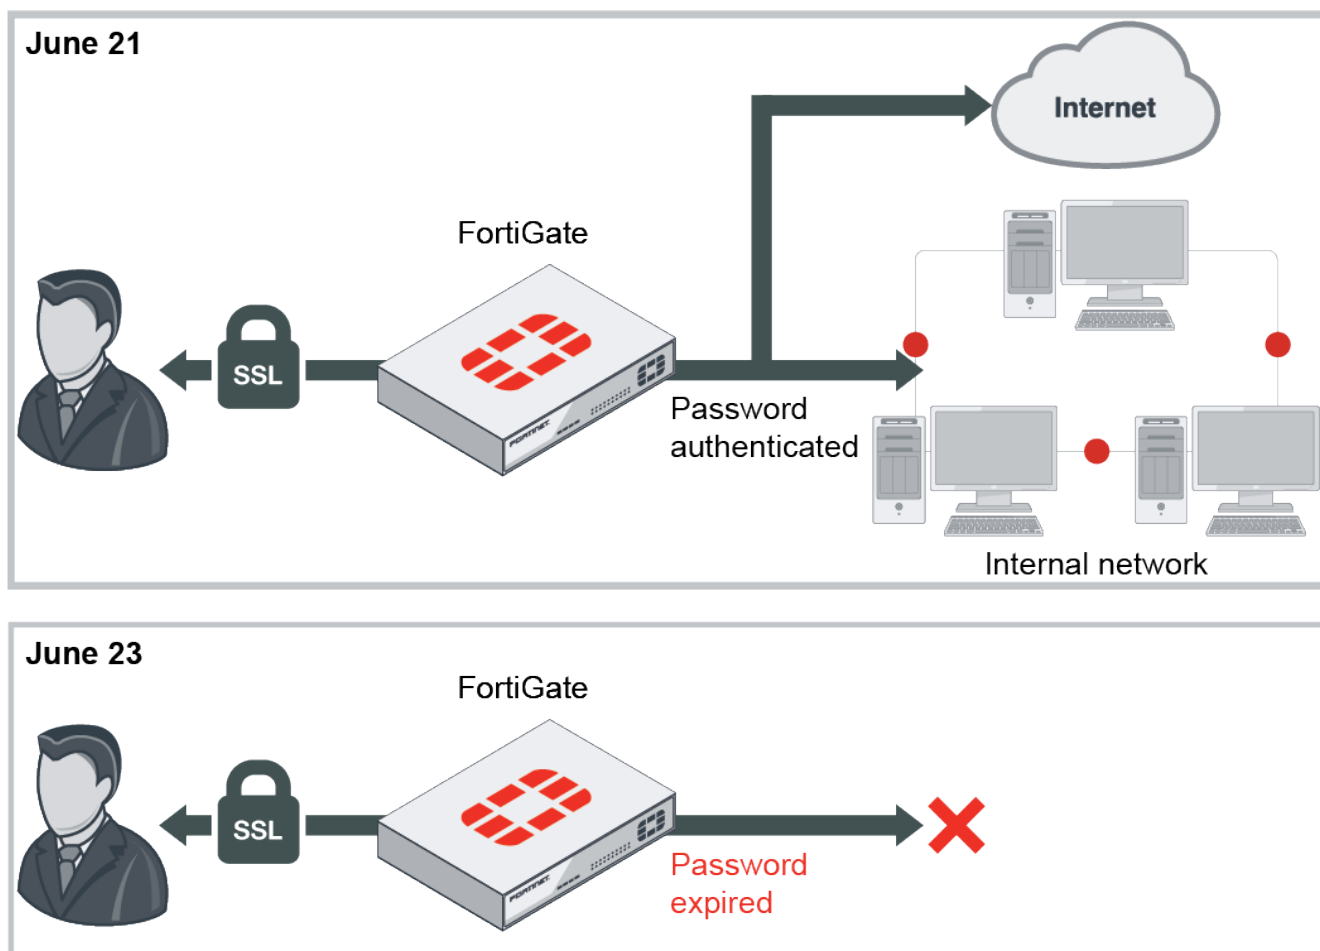

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
  - a. Go to *User & Authentication > User Definition* to create a local user.
  - b. Go to *User & Authentication > User Groups* to create a user group and add that local user to it.

### 3. Configure and assign the password policy using the CLI.

- a. Configure a password policy that includes an expiry date and warning time. The default start time for the password is the time the user was created.

```
config user password-policy
  edit "pwpolicy1"
    set expire-days 2
    set warn-days 1
  next
end
```

- b. Assign the password policy to the user you just created.

```
config user local
  edit "sslvpnuser1"
    set type password
    set passwd-policy "pwpolicy1"
  next
end
```

### 4. Configure SSL VPN web portal.

- a. Go to *VPN > SSL-VPN Portals* to edit the *full-access* portal.  
This portal supports both web and tunnel mode.
- b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.

### 5. Configure SSL VPN settings.

- a. Go to *VPN > SSL-VPN Settings*.
- b. Select the *Listen on Interface(s)*, in this example, *wan1*.
- c. Set *Listen on Port* to *10443*.
- d. Set *Server Certificate* to the authentication certificate.
- e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
- f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.

### 6. Configure SSL VPN firewall policy.

- a. Go to *Policy & Objects > Firewall Policy*.
- b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
- c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
- d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
- e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
- f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
- g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
- h. Enable NAT.
- i. Configure any remaining firewall and security options as desired.
- j. Click OK.

### To configure SSL VPN using the CLI:

#### 1. Configure the interface and firewall address.

```
config system interface
  edit "wan1"
    set vdom "root"
    set ip 172.20.120.123 255.255.255.0
```



```
    next
end
```

**2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.**

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

**3. Configure user and user group.**

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "vpnuser1"
    next
end
```

**4. Configure and assign the password policy.**

- a. Configure a password policy that includes an expiry date and warning time. The default start time for the password is the time the user was created.**

```
config user password-policy
    edit "pwpolicy1"
        set expire-days 2
        set warn-days 1
    next
end
```

- b. Assign the password policy to the user you just created.**

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd-policy "pwpolicy1"
    next
end
```

**5. Configure SSL VPN web portal.**

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
```

```

        next
    end

```

## 6. Configure SSL VPN settings.

```

config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end

```

## 7. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```

config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

### To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal <http://172.20.120.123:10443>.
2. Log in using the `sslvpnuser1` credentials.  
When the warning time is reached, the user is prompted to enter a new password.  
In FortiOS 6.2, when the password expires, the user cannot renew the password and must contact the administrator.  
In FortiOS 6.0/5.6, when the password expires, the user can still renew the password.
3. On the FortiGate, go to *Dashboard* > *Network* and expand the *SSL-VPN* widget to verify the user's connection.

### To see the results of tunnel connection:

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
  - Set the connection name.
  - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, `172.20.120.123`.
4. Select *Customize Port* and set it to `10443`.

5. Save your settings.
6. Log in using the `sslvpnuser1` credentials.  
When the warning time is reached, the user is prompted to enter a new password.

#### To check the SSL VPN connection using the GUI:

1. Go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the user's connection.
2. Go to *Log & Report > Forward Traffic* to view the details of the SSL VPN traffic.

#### To check that login failed due to password expired on GUI:

1. Go to *Log & Report > System Events* and select the *VPN Events* card to see the SSL VPN alert labeled `ssl-login-fail`.
2. Click *Details* to see the log details about the *Reason* `sslvpn_login_password_expired`.

#### To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	sslvpnuser1	1(1)	229	10.1.100.254	0/0	0/0

```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
-------	------	-----------	----------	-----------	----------------

#### To check the tunnel login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	sslvpnuser1	1(1)	291	10.1.100.254	0/0	0/0

```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	sslvpnuser1	10.1.100.254	9	22099/43228	10.212.134.200

#### To check the FortiOS 6.2 login password expired event log:


```
FG201E4Q17901354 # execute log filter category event
FG201E4Q17901354 # execute log filter field subtype vpn
FG201E4Q17901354 # execute log filter field action ssl-login-fail

FG201E4Q17901354 # execute log display
1: date=2019-02-15 time=10:57:56 logid="0101039426" type="event" subtype="vpn" level="alert"
vd="root" eventtime=1550257076 logdesc="SSL VPN login fail" action="ssl-login-fail"
tunneltype="ssl-web" tunnelid=0 remip=10.1.100.254 user="u1" group="g1" dst_host="N/A"
reason="sslvpn_login_password_expired" msg="SSL user failed to logged in"
```


## Dynamic address support for SSL VPN policies

Dynamic SSO user groups can be used in place of address objects when configuring SSL VPN policies. This allows dynamic IP addresses to be used in SSL VPN policies. A remote user group can be used for authentication while an FSSO group is separately used for authorization. Using a dummy policy for remote user authentication and a policy for FSSO group authorization, FSSO can be used with SSL VPN tunnels.

This image shows the authentication and authorization flow:

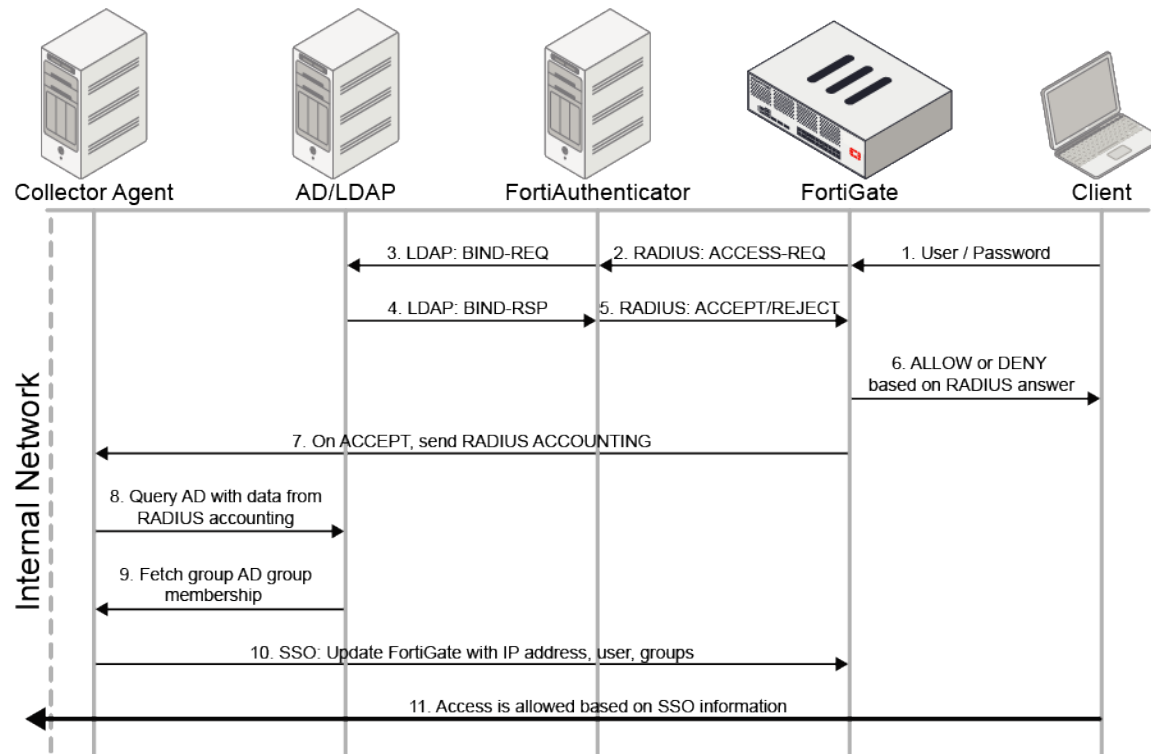

In this example, FortiAuthenticator is used as a RADIUS server. It uses a remote AD/LDAP server for authentication, then returns the authentication results to the FortiGate. This allows the client to have a dynamic IP address after successful authentication.

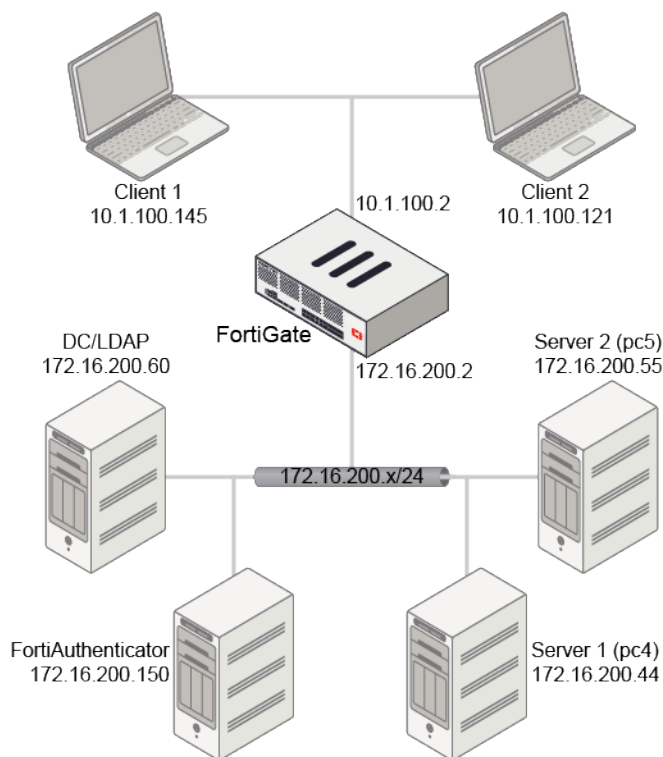


First, on the LDAP server, create two users each in their own group, *user142* in group *pc\_group1*, and *user143* in group *pc\_group2*.

## Configure the FortiAuthenticator

**To add a remote LDAP server and users on the FortiAuthenticator:**

1. Go to *Authentication > Remote Auth. Servers > LDAP*.
2. Click *Create New*.
3. Set the following:
  - *Name*: *ad\_ldap\_60*
  - *Primary server name/IP*: *172.16.200.60*
  - *Base distinguished name*: *dc=fsso-qa,dc=com*
  - *Bind type*: *Regular*
  - *Username*: *cn=administrator,cn=User*
  - *Password*: *<enter a password>*
4. Click *OK*.
5. Edit the new LDAP server.
6. Import the remote LDAP users.
7. Edit each user to confirm that they have the RADIUS attribute *Acct-Interim-Interval*. This attribute is used by

FortiGate to send interim update account messages to the RADIUS server.

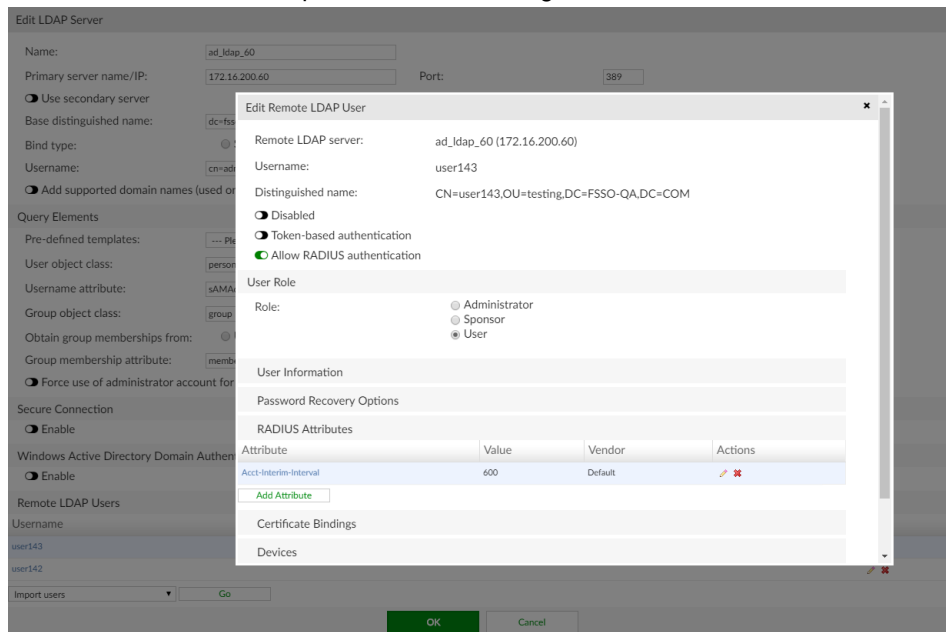

**To create a RADIUS client for FortiGate as a remote authentication server:**


1. Go to *Authentication > RADIUS Service > Clients*.
2. Click *Create New*.
3. Set the following:
  - *Name*: `fsso_ldap`
  - *Client address*: *Range* `172.16.200.1~172.16.200.10`
  - *Secret*: <enter a password>
4. In the *Realms* table, set the realm to the LDAP server that was just added: `ad_ldap_60`.
5. Click *OK*.  
FortiAuthenticator can now be used as a RADIUS server, and the authentication credentials all come from the DC/LDAP server.

## Fortinet Single Sign-On Collector Agent

**To configure the Fortinet Single Sign-On Collector Agent:**

1. Select *Require authenticated connection from FortiGate* and enter a *Password*.
2. Click *Advanced Settings*.
3. Select the *RADIUS Accounting* tab.

4. Select *Enable RADIUS accounting server* and set the *Shared secret*.

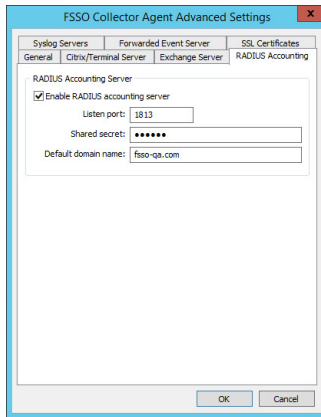

5. Click *OK*, then click *Save&close*.

The collector agent can now accept accounting requests from FortiGate, and retrieve the IP addresses and usernames of SSL VPN client from the FortiGate with accounting request messages.

## Configure the FortiGate

### To configure the FortiGate in the CLI:

1. Create a Fortinet Single Sign-On Agent fabric connector:

```
config user fsso
  edit "AD_CollectAgent"
    set server "172.16.200.60"
    set password 123456
  next
end
```

2. Add the RADIUS server:

```
config user radius
  edit "rad150"
    set server "172.16.200.150"
    set secret 123456
    set acct-interim-interval 600
    config accounting-server
      edit 1
        set status enable
        set server "172.16.200.60"
        set secret 123456
      next
    next
  end
next
end
```

3. Create a user group for the RADIUS server:

```
config user group
  edit "rad_group"
    set member "rad150"
  next
end
```

**4. Create user groups for each of the FSSO groups:**

```

config user group
    edit "fsso_group1"
        set group-type fsso-service
        set member "CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM"
    next
    edit "fsso_group2"
        set group-type fsso-service
        set member "CN=PC_GROUP2,OU=TESTING,DC=FSSO-QA,DC=COM"
    next
end

```

**5. Create an SSL VPN portal and assign the RADIUS user group to it:**

```

config vpn ssl web portal
    edit "testportal"
        set tunnel-mode enable
        set ipv6-tunnel-mode enable
        set web-mode enable
        ...
    next
end
config vpn ssl settings
    ...
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "rad_group"
            set portal "testportal"
        next
    end
end

```

**6. Create firewall addresses:**

```

config firewall address
    edit "none"
        set subnet 0.0.0.0 255.255.255.255
    next
    edit "pc4"
        set subnet 172.16.200.44 255.255.255.255
    next
    edit "pc5"
        set subnet 172.16.200.55 255.255.255.255
    next
end

```

**7. Create one dummy policy for authentication only, and two normal policies for authorization:**

```

config firewall policy
    edit 1
        set name "sslvpn_authentication"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "none"
        set action accept
        set schedule "always"
    next

```



```
        set service "ALL"
        set logtraffic all
        set groups "rad_group"
        set nat enable
    next
    edit 3
        set name "sslvpn_authorization1"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "pc4"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set groups "fsso_group1"
        set nat enable
    next
    edit 4
        set name "sslvpn_authorization2"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "pc5"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set groups "fsso_group2"
        set nat enable
    next
end
```

**To create an FSSO agent fabric connector in the GUI:**

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.
3. Click *FSSO Agent on Windows AD*.

4. Enter the name and *Primary FSSO agent* information.

5. Click *Apply & Refresh*.

The FSSO groups are retrieved from the collector agent.

**To add the RADIUS server in the GUI:**

1. Go to *User & Authentication > RADIUS Servers*.
2. Click *Create New*.
3. Enter a name for the server.
4. Enter the *IP/Name* and *Secret* for the primary server.
5. Click *Test Connectivity* to ensure that there is a successful connection.

6. Click *OK*.

7. Configure an accounting server with the following CLI command:

```
config user radius
  edit rad150
    set acct-interim-interval 600
    config accounting-server
      edit 1
        set status enable
        set server 172.16.200.60
        set secret *****
      next
    end
  next
end
```

**To create a user group for the RADIUS server in the GUI:**

1. Go to *User & Authentication > User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set the *Type* to *Firewall*.
4. Add the RADIUS server as a remote group.

The screenshot shows the 'New User Group' configuration window in the FortiGate GUI. The 'Name' field is populated with 'rad\_group'. The 'Type' dropdown menu is open, showing 'Firewall' as the selected option, with other options including 'Fortinet Single Sign-On (FSSO)', 'RADIUS Single Sign-On (RSSO)', and 'Guest'. Below the 'Type' field is a 'Members' field with a '+' button. The 'Remote Groups' section contains a table with one entry: 'rad150'. The right sidebar provides additional information and links, including 'FortiGate', 'FGDocs', 'API Preview', 'Documentation', 'Online Help', and 'Video Tutorials'. At the bottom of the window are 'OK' and 'Cancel' buttons.

5. Click *OK*.

**To create user groups for each of the FSSO groups in the GUI:**

1. Go to *User & Authentication > User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set the *Type* to *Fortinet Single Sign-On (FSSO)*.
4. Add PC\_GROUP1 as a member:  
CN=PC\_GROUP1, OU=TESTING, DC=FSSO-QA, DC=COM
5. Click *OK*.
6. Add a second user group with PC\_GROUP2 as a member:  
CN=PC\_GROUP1, OU=TESTING, DC=FSSO-QA, DC=COM
7. Click *OK*.

**To create an SSL VPN portal and assign the RADIUS user group to it in the GUI:**

1. Go to *VPN > SSL VPN Portals*.
2. Click *Create New*.
3. Configure the portal, then click *OK*.
4. Go to *VPN > SSL VPN Settings*.
5. Configure the required settings.
6. Create an *Authentication/Portal Mapping* table entry:
  - a. Click *Create New*.
  - b. Set *User/Groups* to *rad\_group*.
  - c. Set *Portal* to *testportal*.
  - d. Click *OK*.
7. Click *OK*.

**To create policies for authentication and authorization in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Configure a dummy policy for authentication. Set the destination to *none* so that traffic is not allowed through the FortiGate, and add *rad\_group* as a source.
3. Configure two authorization policies, with the FSSO groups as sources.

**Confirmation**

On *Client 1*, log in to FortiClient using *user142*. Traffic can go to *pc4* (172.16.200.44), but cannot go to *pc5* (172.16.200.55).

On *Client 2*, log in to FortiClient using *user143*. Traffic can go to *pc5* (172.16.200.55), but cannot go to *pc4* (172.16.200.44).

On the FortiGate, check the authenticated users list and the SSL VPN status:

```
# diagnose firewall auth list
```

```
10.212.134.200, USER142
  type: fsso, id: 0, duration: 173, idled: 173
  server: AD_CollectAgent
  packets: in 0 out 0, bytes: in 0 out 0
  user_id: 16777229
  group_id: 3 33554434
  group_name: fsso_group1 CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM

10.212.134.200, user142
  type: fw, id: 0, duration: 174, idled: 174
  expire: 259026, allow-idle: 259200
  flag(80): sslvpn
  server: rad150
  packets: in 0 out 0, bytes: in 0 out 0
  group_id: 4
  group_name: rad_group

10.212.134.201, USER143
  type: fsso, id: 0, duration: 78, idled: 78
  server: AD_CollectAgent
```

```

packets: in 0 out 0, bytes: in 0 out 0
group_id: 1 33554435
group_name: fsso_group2 CN=PC_GROUP2,OU=TESTING,DC=FSSO-QA,DC=COM

```

```

10.212.134.201, user143
type: fw, id: 0, duration: 79, idled: 79
expire: 259121, allow-idle: 259200
flag(80): sslvpn
server: rad150
packets: in 0 out 0, bytes: in 0 out 0
group_id: 4
group_name: rad_group

```

```
----- 4 listed, 0 filtered -----
```

```
# get vpn ssl monitor
```

```
SSL VPN Login Users:
```

Index	User	Auth Type	Timeout	From	HTTP in/out	HTTPS in/out
0	user142	2 (1)	600	10.1.100.145	0/0	0/0
1	user143	2 (1)	592	10.1.100.254	0/0	0/0


```
SSL VPN sessions:
```

Index	User	Source IP	Duration	I/O Bytes	Tunnel/Dest IP
0	user142	10.1.100.145	104	32190/16480	10.212.134.200
1	user143	10.1.100.254	11	4007/4966	10.212.134.201

## SSL VPN multi-realm

This sample shows how to create a multi-realm SSL VPN that provides different portals for different user groups.

### Sample topology

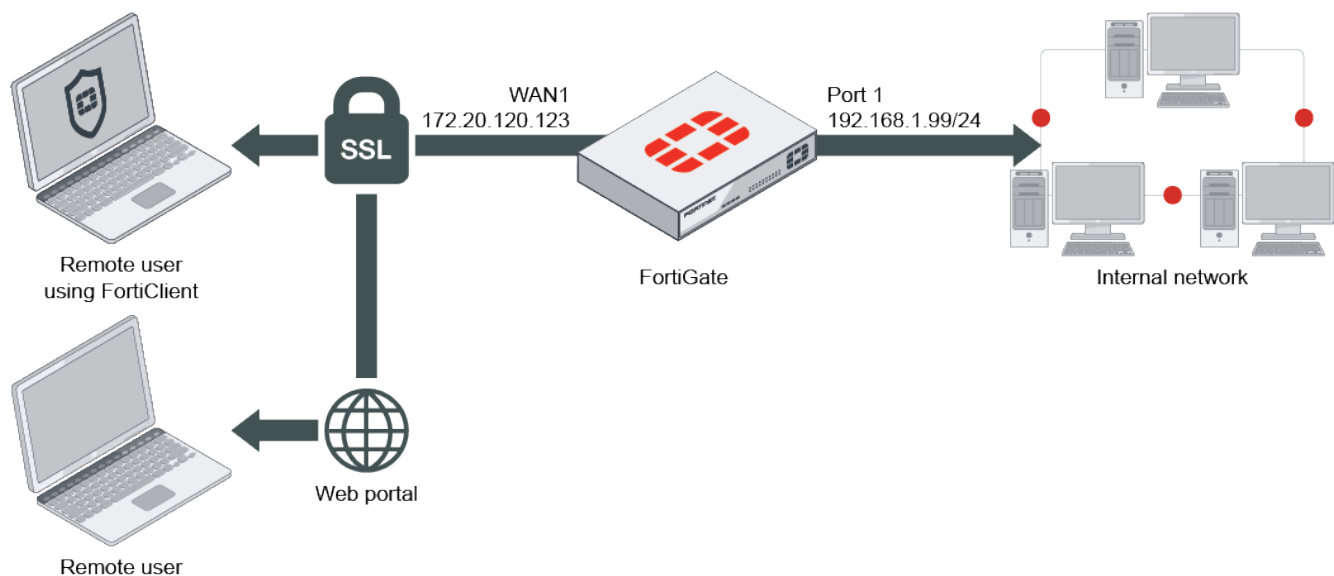

## Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot explicitly use an FQDN or an address group that includes an FQDN. To use an FQDN, leave the routing address blank and apply the FQDN as the destination address of the firewall policy.

### To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
  - a. Go to *Network > Interfaces* and edit the *wan1* interface.
  - b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
  - c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
  - d. Click OK.
  - e. Go to *Policy & Objects > Address* and create an address for internet *QA\_subnet* with subnet *192.168.1.0/24* and *HR\_subnet* with subnet *10.1.100.0/24*.
2. Configure user and user group.
  - a. Go to *User & Authentication > User Definition* to create local users *qa-user1* and *hr-user1*.
  - b. Go to *User & Authentication > User Groups* to create separate user groups for web-only and full-access portals:
    - *QA\_group* with member *qa-user1*.
    - *HR\_group* with the member *hr-user1*.
3. Configure SSL VPN web portal.
  - a. Go to *VPN > SSL-VPN Portals* to create portal *qa-tunnel*.
  - b. Enable *Tunnel Mode*.
  - c. Create a portal *hr-web* with *Web Mode* enabled.
4. Configure SSL VPN realms.
  - a. Go to *System > Feature Visibility* to enable *SSL-VPN Realms*.
  - b. Go to *VPN > SSL-VPN Realms* to create realms for *qa* and *hr*.
  - c. (Optional) To access each realm with FQDN instead of the default URLs *https://172.20.120.123:10443/hr* and *https://172.20.120.123:10443/qa*, you can configure a virtual-host for the realm in the CLI.

```
config vpn ssl web realm
  edit hr
    set virtual-host hr.mydomain.com
  next
  edit qa
    set virtual-host qa.mydomain.com
  next
end
```

Where *mydomain.com* is the name of your domain. Ensure FQDN resolves to the FortiGate wan1 interface and that your certificate is a wildcard certificate.

5. Configure SSL VPN settings.
  - a. Go to *VPN > SSL-VPN Settings*.
  - b. For *Listen on Interface(s)*, select *wan1*.
  - c. Set *Listen on Port* to *10443*.
  - d. Choose a certificate for *Server Certificate*. The default is *Fortinet\_Factory*.

- e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *web-access*.
- f. Create new *Authentication/Portal Mapping* for group *QA\_group* mapping portal *qa-tunnel*.
- g. Specify the realm *qa*.
- h. Add another entry for group *HR\_group* mapping portal *hr-web*.
- i. Specify the realm *hr*.
- 6. Configure SSL VPN firewall policy.
  - a. Go to *Policy & Objects > Firewall Policy*.
  - b. Create a firewall policy for QA access.
  - c. Fill in the firewall policy name. In this example, *QA sslvpn tunnel mode access*.
  - d. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - e. Choose an *Outgoing Interface*. In this example, *port1*.
  - f. Set the *Source* to *all* and group to *QA\_group*.
  - g. In this example, the *Destination* is the internal protected subnet *QA\_subnet*.
  - h. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - i. Click OK.
  - j. Create a firewall policy for HR access.
  - k. Fill in the firewall policy name. In this example, *HR sslvpn web mode access*.
  - l. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
  - m. Choose an *Outgoing Interface*. In this example, *port1*.
  - n. Set the *Source* to *all* and group to *HR\_group*.
  - o. In this example, the *Destination* is the internal protected subnet *HR\_subnet*.
  - p. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
  - q. Click OK.

### To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "QA_subnet"
        set subnet 192.168.1.0 255.255.255.0
    next
    edit "HR_subnet"
        set subnet 10.1.100.0 255.255.255.0
```

```
    next
end
```

### 3. Configure user and user group.

```
config user local
    edit "qa_user1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "QA_group"
        set member "qa_user1"
    next
end

config user local
    edit "hr_user1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "HR_group"
        set member "hr_user1"
    next
end
```

### 4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "qa-tunnel"
        set tunnel-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling enable
        set split-tunneling-routing-address "QA_subnet"
    next
end

config vpn ssl web portal
    edit "hr-web"
        set web-mode enable
    next
end
```

### 5. Configure SSL VPN realms.

```
config vpn ssl web realm
    edit hr
        set virtual-host hr.mydomain.com
    next
    edit qa
        set virtual-host qa.mydomain.com
    next
end
```

The `set virtual-host` setting is optional. For example:

```
config vpn ssl web realm
    edit hr
    next
```



```
    edit qa
    next
end
```

## 6. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "QA_group"
            set portal "qa-tunnel"
            set realm qa
        next
        edit 2
            set groups "HR_group"
            set portal "hr-web"
            set realm hr
        next
    end
end
```

## 7. Configure two SSL VPN firewall policies to allow remote QA user to access internal QA network and HR user to access HR network.

```
config firewall policy
    edit 1
        set name "QA sslvpn tunnel access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "QA_subnet"
        set groups "QA_group"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "HR sslvpn web access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "HR_subnet"
        set groups "HR_group"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

**To see the results for QA user:**

1. Download FortiClient from [www.forticlient.com](http://www.forticlient.com).
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection.
  - Set *VPN Type* to *SSL VPN*.
  - Set *Remote Gateway* to `https://172.20.120.123:10443/qa.`
  - If a virtual-host is specified, use the FQDN defined for the realm (`qa.mydomain.com`).
4. Select *Customize Port* and set it to `10443`.
5. Save your settings.
6. Use the credentials you've set up to connect to the SSL VPN tunnel.  
If the user's computer has antivirus software, a connection is established; otherwise FortiClient shows a compliance warning.
7. After connection, traffic to subnet `192.168.1.0` goes through the tunnel.
8. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the list of SSL users.
9. On the FortiGate, go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
10. On the FortiGate, go to *Log & Report > Forward Traffic* and view the details of the traffic.


**To see the results for HR user:**

1. In a web browser, log into the portal `https://172.20.120.123:10443/hr` using the credentials you've set up.
2. Alternatively, if a virtual-host is specified, use the FQDN defined for the realm (`hr.mydomain.com`).
3. On the FortiGate, go to *Dashboard > Network* and expand the *SSL-VPN* widget to verify the list of SSL users.
4. Go to *Log & Report > Forward Traffic* and view the details of the traffic.

## NAS-IP support per SSL-VPN realm

For RADIUS authentication and authorization, the RADIUS client (the FortiGate) passes the username, password, and NAS-IP to the RADIUS server in its access request. The RADIUS server authenticates and authorizes based on this information. Each RADIUS server can be configured with multiple NAS-IPs for authenticating different groups and NAS clients.

On the FortiGate, configuring the NAS-IP in the realm settings overrides the RADIUS server setting, allowing multiple NAS-IPs to be mapped to the same RADIUS server.

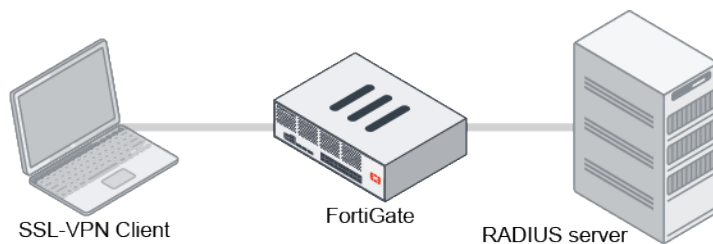

In this example, the user wants to present one FortiGate VDOM with different NAS-IPs to a single RADIUS server based on specific rules.

## To configure the SSL-VPN to use the NAS-IP in the realm settings:

### 1. Configure a RADIUS user and add it to a group:

```
config user radius
  edit "fac150"
    set server "172.16.200.150"
    set secret *****
    set nas-ip 172.16.200.2
  config accounting-server
    edit 1
      set status enable
      set server "172.16.200.150"
      set secret *****
    next
  end
next
end
config user group
  edit "radgrp"
    set member "fac150"
  next
end
```

### 2. Configure a realm for the user with a different NAS-IP:

```
config vpn ssl web realm
  edit "realm1"
    set login-page '.....'
    set radius-server "fac150"
    set nas-ip 10.1.100.2
  next
end
```

### 3. Configure SSL-VPN with an authentication rule that includes the user group and the realm:

```
config vpn ssl settings
  ...
  config authentication-rule
    edit 1
      set groupd "radgrp"
      set portal "testportal1"
      set realm "realm1"
    next
  end
end
```

### 4. Create a firewall policy:

```
config firewall policy
  edit 1
    set name "sslvpn1"
    ...
    set srcintf "ssl.vdom1"
    set groups "radgrp"
  next
end
```

Because the RADIUS server and NAS-IP are specified in realm1, its NAS-IP is used for authentication.

port1.vdom1.1 (52).pcap

File Edit View Go Capture Analyze Statistics Telephony Wireless Tools Help

Apply a display filter: <Ctrl>/>

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	172.16.200.2	172.16.200.150	RADIUS	244	Access-Request id=53
2	0.023546	172.16.200.150	172.16.200.2	RADIUS	258	Access-Accept id=53
3	0.023898	172.16.200.2	172.16.200.150	RADIUS	167	Accounting-Request id=54
4	0.024161	172.16.200.150	172.16.200.2	RADIUS	62	Accounting-Response id=54
5	6.273833	172.16.200.2	172.16.200.150	RADIUS	179	Accounting-Request id=55
6	6.274259	172.16.200.150	172.16.200.2	RADIUS	62	Accounting-Response id=55
7	21.926931	172.16.200.2	172.16.200.44	RADIUS	179	Access-Request id=56
8	21.927204	172.16.200.44	172.16.200.2	RADIUS	95	Access-Accept id=56
9	333.783964	172.16.200.2	172.16.200.150	RADIUS	244	Access-Request id=57
10	333.727478	172.16.200.150	172.16.200.2	RADIUS	258	Access-Accept id=57
11	333.727796	172.16.200.2	172.16.200.150	RADIUS	167	Accounting-Request id=58
12	333.728064	172.16.200.150	172.16.200.2	RADIUS	62	Accounting-Response id=58
13	339.945653	172.16.200.2	172.16.200.150	RADIUS	179	Accounting-Request id=59
14	339.945964	172.16.200.150	172.16.200.2	RADIUS	62	Accounting-Response id=59

▼ RADIUS Protocol


Code: Access-Request (1)  
 Packet Identifier: 0x35 (53)  
 Length: 202  
 Authenticator: 4e08c9ef837dc2cd217e21f41fda81cc  
 [The response to this request is in frame 2]

▼ Attribute Value Pairs

- > AVP: t=NAS-Identifier(32) l=18 val=F04H1E5819900552
- > AVP: t=User-Name(1) l=6 val=fac3
- > AVP: t=Vendor-Specific(26) l=58 vnd=Microsoft(311)
- > AVP: t=Vendor-Specific(26) l=24 vnd=Microsoft(311)
- > AVP: t=NAS-IP-Address(4) l=6 val=10.1.100.2

## SSL VPN with Okta as SAML IdP

In this configuration, the FortiGate acts as a SAML service provider (SP) requesting authentication from Okta, which acts as a SAML identity provider (IdP). The following shows the topology in this configuration:

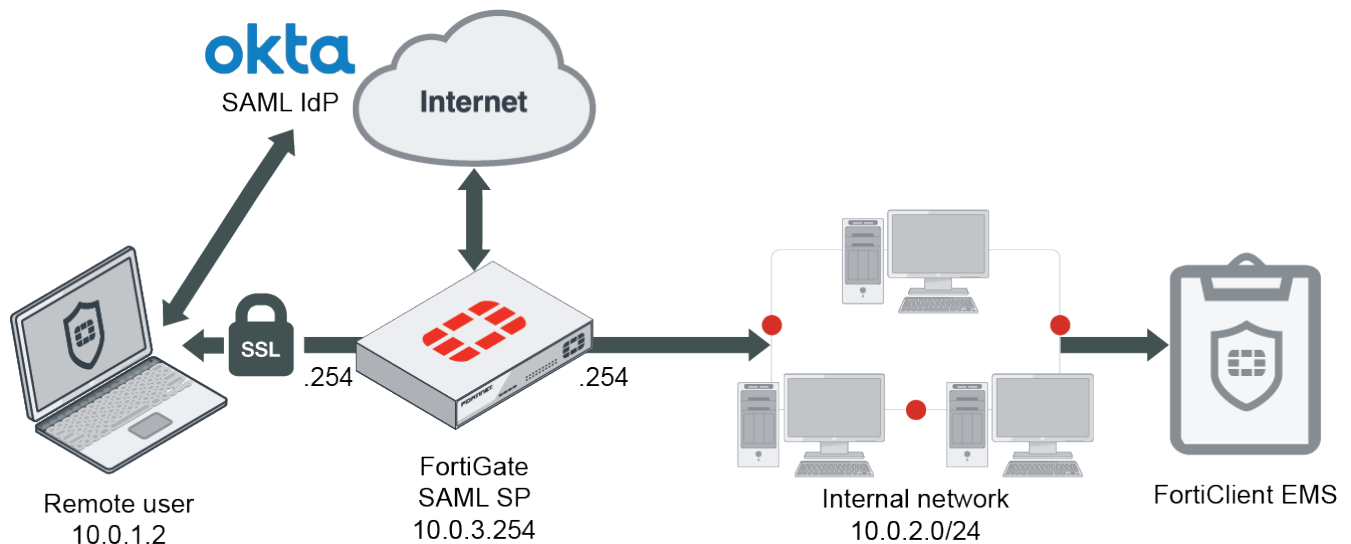

The authentication process is as follows in this deployment:

1. The user initiates an SSL VPN request to the FortiGate.
2. The FortiGate sends the browser POST redirect to FortiClient.
3. FortiClient redirects the SAML authentication request to Okta.
4. The user authenticates with Okta using their credentials.
5. Okta sends a SAML assertion that contains the user and group authentication in a POST redirect to the SSL VPN login page.
6. FortiClient sends the redirected Okta request that contains the SAML assertion to the FortiGate.
7. The FortiGate consumes the assertion and provides the user with access to resources based on the defined firewall security policy.

The example assumes that you already have an Okta account. This example uses users locally defined within the Okta directory and does not include LDAP mapping. The instructions describe the steps that you take if using the free Okta developer edition.

### To configure Okta for SSL VPN with FortiOS:

1. Log in to the Okta portal as the registered admin user.
2. Add the FortiGate application:
  - a. Go to *Applications*.
  - b. Click *Applications*, then click *Create App Integration*.
  - c. Click *SAML 2.0*, then *Next*.
  - d. Configure SAML settings:
    - i. Proceed through the application creation wizard. In the *Single sign on URL* field, enter `https://<FortiGate IP address>:<port>/remote/saml/login/`. In this example, it is `https://10.0.3.254:10443/remote/saml/login/`.
    - ii. Enable *Use this for Recipient URL and Destination URL*.
    - iii. In the *Audience URI (SP Entity ID)* field, enter the `https://<FortiGate IP address>:<port>/remote/saml/metadata/`. In this example, it is `https://10.0.3.254:10443/remote/saml/metadata/`.
    - iv. Click *Download Okta Certificate* to download the Okta certificate to your machine. You will provide this certificate to the FortiGate.
    - v. Click *Show Advanced Settings*. From the *Response* dropdown list, select *Signed*.
    - vi. From the *Assertion Signature* dropdown list, select *Signed*.
    - vii. In the *Single Logout URL* field, enter `https://<FortiGate IP address>:<port>/remote/saml/logout/`. In this example, it is `https://10.0.3.254:10443/remote/saml/logout/`.
    - viii. In the *SP Issuer* field, enter `https://<FortiGate IP address>:<port>/remote/saml/metadata/`. In this example, it is `https://10.0.3.254:10443/remote/saml/metadata/`.
    - ix. In the *Signature Certificate* field, first download the Fortinet\_Factory certificate by logging into FortiOS, going to *System > Local Certificate*, then browsing to and uploading the FortiGate certificate. Okta uses

this to authenticate the SAML SP.

The screenshot shows a configuration page for SAML. The following fields are highlighted with red boxes:

- Response**: Signed
- Assertion Signature**: Signed
- Signature Algorithm**: RSA-SHA256
- Digest Algorithm**: SHA256
- Assertion Encryption**: Unencrypted
- Enable Single Logout**: ☒ Allow application to initiate Single Logout
- Single Logout URL**: https://10.0.3.254:10443/remote/saml/logout/
- SP Issuer**: https://10.0.3.254:10443/remote/saml/metadata/
- Signature Certificate**: Fortinet\_Factory.cer (with a Browse button)
- Assertion Inline Hook**: None (disabled)
- Authentication context class**: PasswordProtectedTransport
- Honor Force Authentication**: Yes
- SAML Issuer ID**: http://www.okta.com/\${org.externalKey}

- e. Under **ATTRIBUTE STATEMENTS** and **GROUP ATTRIBUTE STATEMENTS**, define attribute mappings for Okta to use in SAML assertion. In this example, the following is entered as a attribute statement and a group attribute statement, respectively:

- username, with value user.login
- group, with *Matches regex* filter

The screenshot shows two sections for defining attribute mappings:

**ATTRIBUTE STATEMENTS (OPTIONAL)**

Name	Name format (optional)	Value
username	Basic	user.login

**GROUP ATTRIBUTE STATEMENTS (OPTIONAL)**

Name	Name format (optional)	Filter
group	Basic	Matches regex

- f. On the *Feedback* step, select *I'm an Okta customer adding an internal app*.
  - g. Select *This is an internal app that we have created*.
  - h. Click *Finish*.
3. Go to *Directory > People*.
  4. Click *Add Person*.

5. Enter the person's details as desired. Click **Save**.

6. Add a group:
- Go to *Directory > Groups*.
  - Click *Add Group*.
  - Enter the desired name, then click *Add Group*. In this example, the name is corporate-saml.
  - Select the newly added group, then click *Assign People*.
  - Add the person that you created as a member of the new group. Click **Save**.
7. Assign the group to the FortiGate application:
- Go to *Applications > FortiGate application > Assignments*.
  - From the *Assign* dropdown list, select *Assign to Groups*.
  - Assign the group that you created to the FortiGate application.
8. To view the SAML setup instructions, do the following:
- Click the newly created application's name.
  - Click *Sign On*.
  - Go to *View SAML Setup Instructions*. Note down the *Identity Provider Single Sign-On URL*, *Identity Provider Single Logout URL*, and *Identity Provider Issuer* values.
9. Download the Okta certificate and upload it to FortiOS:
- From *View SAML Setup Instructions*, download the certificate.
  - In FortiOS, go to *System > Certificates*.
  - From the *Create/Import* dropdown list, select *Remote Certificate*.
  - Click *Upload* and upload the downloaded Okta certificate.

### To configure the FortiGate:

1. Configure the FortiGate SP to be a SAML user:
- ```
config user saml
```

```

edit "okta-idp"
  set cert "Fortinet_Factory"
  set entity-id "https://10.0.3.254:10443/remote/saml/metadata/"
  set single-sign-on-url "https://10.0.3.254:10443/remote/saml/login"
  set single-logout-url "https://10.0.3.254:10443/remote/saml/logout"
  set idp-entity-id "http://www.okta.com/exk103foxaa8gk5qy4x7"
  set idp-single-sign-on-url "https://fortinet01.okta.com/app/fortinetorg878484_
    fortigate_1/exk103foxaa8gk5qy4x7/sso/saml"
  set idp-single-logout-url "https://fortinet01.okta.com/app/fortinetorg878484_
    fortigate_1/exk103foxaa8gk5qy4x7/slo/saml"
  set idp-cert "Okta-IDP_Certificate"
  set user-name "username"
  set group-name "group"
next
end

```

2. Configure user group assertion on Okta as part of the SAML assertion attributes. It is important that the group attribute value received is locally matched with the `group-name` value:



```

config user group
  edit "corporate-saml"
    set member "okta-idp"
    config match
      edit 1
        set server-name "okta-idp"
        set group-name "corporate-saml"
      next
    end
  next
end

```

3. Go to **VPN > SSL-VPN Settings**. Configure VPN settings as desired. When testing the VPN solution, starting with a web-based configuration, then moving to a tunnel-based configuration is recommended. Web-based testing can help in troubleshooting.

Authentication/Portal Mapping ⓘ

| <a href="#">+ Create New</a>                                                                       | <a href="#">Edit</a> | <a href="#">Delete</a> | <a href="#">Send SSL-VPN Configuration</a> |
|----------------------------------------------------------------------------------------------------|----------------------|------------------------|--------------------------------------------|
| Users/Groups ⇅                                                                                     | Realm ⇅              | Portal ⇅               |                                            |
|  corporate-saml | /                    | full-access            |                                            |
|  sslvpn_group   | /                    | full-access            |                                            |
| All Other Users/Groups                                                                             | /                    | full-access            |                                            |

4. Configure a local or RADIUS user as a backup. This setting also provides a login web user with a choice of local or SSO login.
5. Go to **Policy and Objects > Firewall Policies**. Configure a policy as desired.
6. Increase the global authentication timeout period to allow users to fill in their credentials in time. The default timeout is five seconds:

```

config system global
  set remoteauthtimeout 60
end

```

### To configure EMS:

1. In EMS, go to **Endpoint Profiles > Manage Profiles**. Edit a VPN profile.
2. Under **VPN Tunnels**, click **Add Tunnel**.
3. In the **Remote Gateway** field, enter the FortiGate IP address. In this example, it is 10.0.3.254.



4. In the *Port* field, enter the port number. In this example, it is 10443.

Creating VPN Tunnel

Changes to this VPN tunnel will not be saved until the profile is saved.

**Basic Settings**

Split Tunnel

Application Based

Advanced Settings

On Connect Script

On Disconnect Script

Name

okta-saml

Cannot contain the characters <~>.\*

Type

SSL VPN IPsec VPN

Remote Gateway

10.0.3.254

Port

10443

☐ Require Certificate


☒ Prompt for Username

Add Tunnel Cancel

5. In *Advanced Settings*, enable *Enable SAML Login*.
6. Click *Add Tunnel*.
7. Save the profile.
8. After the policy synchronizes to the endpoint, the *SAML Login* button is visible on the Remote Access tab in FortiClient.

#### To test the configuration:

1. You will first test web-based SSL VPN authentication using Firefox with the SAML tracer plugin enabled. Install the [SAML-tracer plugin](#) to Firefox.
2. In Firefox, go to the FortiOS SSL VPN login page. In this example, this is <https://10.0.3.254:10443>.
3. Open the SAML tracer.
4. The browser redirects to the Okta SAML login page. Enter the Okta credentials, then click *Sign in*.
5. Upon successful authentication, the browser redirects to the authenticated SSL VPN page. If authentication does not succeed, review the SAML tracer to confirm the SAML assertion attributes that are passed during the authentication session. Select the POST message with the SAML information. On the SAML tab, confirm the username and group attributes.

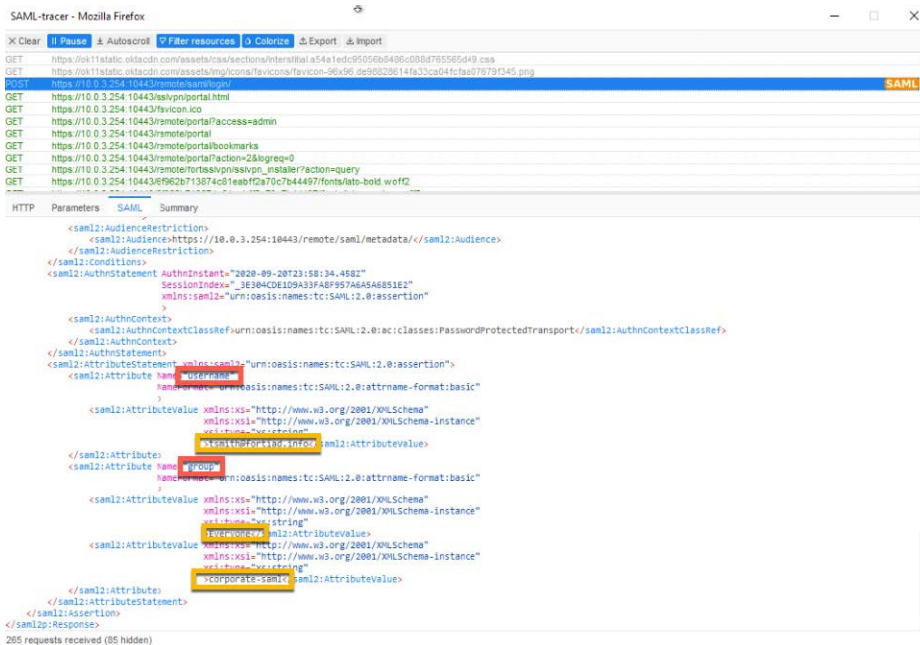

6. To test tunnel mode, go to the *Remote Access* tab in FortiClient. Click the *SAML Login* button.
7. A FortiAuthenticator web login page opens within FortiClient. Enter the Okta credentials, then log in to connect to the VPN tunnel.

### To troubleshoot the configuration:

You can view FortiOS event logs in *Log & Report > Events* to verify successful authentication and user group allocation.

You can also run the diagnose debug application samld -1 command to verify that the SAML IdP sent the correct information. The following shows example output for this scenario:

```
saml_send_common_reply [123]: Attr: 17, 27, 'saml:NameID'
saml_send_common_reply [120]: Attr: 10, 33, 'username' 'tsmith@fortiad.info'
saml_send_common_reply [120]: Attr: 10, 19, 'group' 'Everyone'
saml_send_common_reply [120]: Attr: 10, 25, 'group' 'corporate-saml'
saml_send_common_reply [123]: Attr: 11, 1124, 'https://forcli.net/okta.com/app/fortinetorg878484_fortigate_1/ek103foxaabgk5qy4x7/slo/saml?SAMLRequest=FZLNauMw
FIX3fQjFavFyN0G6b1XFA280wG120cyahJ1ru8ieH08ZBjthONyHOSnB8v3t0d1qcb5X2BdvG%2BMOAP9zo4wDnsLx70FLH1QZ2B91sNC9r1LoPGon9YP91rETH09wHAMF%2F1D%2B19nAVyPTfak2psVOU1
h2HonzbJTMf5yiaap2e650DeSNXLSPT19TDHr81FtX0dAPV60qg20y7guluw2B20yn1QvwiZkyW71L10gdpnrcLk6x0yHoc2VgYemq7700eX210msjRUD7NysugOnLrzcZ1Sh0MaZHSW%7K2F1ULu4BHpU5s
p19d2mK2F1v4mzcmVJ1G5q0UvThPaU0ehmHLV0bXN081X92N4WPU517U28C31R8eseeexnpak091yq8wX2Bd0Z214ypSILQVnyfY9ggbnwd3s1u2B29mnXsyc127ys3Fock32F88u93IUcT657nmSmVUKktU
Nio3W3FP9TdhX2FrxX2FyneAA3X0D308R8e1ay5tate-magic3Dd070F471cbcd4c485igA1g-http3A32F2Fwww.w3.org2F2000X2F09X2Fxmldsig%23rsa-sha1Signature-VscX2fkoJycugCvttw1BZd
C1%2FK7xkmymkhYehq93uM0y3eVrAF3XQ%2Fugc2nv8%2Fq5Eq166cL9R7dpGSHIrBo1zo8WY9qp3QuuX2BaB0REDRGrzxTnmZCakaNRY48HnMyscPEcaqB%2FnpVbsU8pdPz20qSeyqFwg7IwHu95%2FAjgPZp
vAtYhexF45maYMeNRDp10F8H3y409tkgC34L6X1X2B2FeX2Bo5fuxRPNT66Wdncuv1B9vJ8T5ZF2ZuK1UXJEQgAkD9%2FzrCryLQ70CrhF1Csxb0eIGRSCRWR42Quaghh2J1QVUatSB%2B5zF9BhgKwMYK%2Fq
VY1Unu1Tyx5OnYF5exHCYvg%3D0X3D
```

## SSL VPN with Azure AD SSO integration

You can use SAML single sign on to authenticate against Azure Active Directory with SSL VPN SAML user via tunnel and web modes. See:

- [Configuring SAML SSO login for SSL VPN with Azure AD acting as SAML IdP](#)
- [Tutorial: Azure AD SSO integration with FortiGate SSL VPN](#)


## SSL VPN to IPsec VPN

This is a sample configuration of site-to-site IPsec VPN that allows access to the remote endpoint via SSL VPN.

This example uses a pre-existing user group, a tunnel mode SSL VPN with split tunneling, and a route-based IPsec VPN between two FortiGate devices. All sessions must start from the SSL VPN interface.

If you want sessions to start from the FGT\_2 subnet, you need more policies. Also, if the remote subnet is beyond FGT\_2 (if there are multiple hops), you need to include the SSL VPN subnet in those routers as well.

## Sample topology

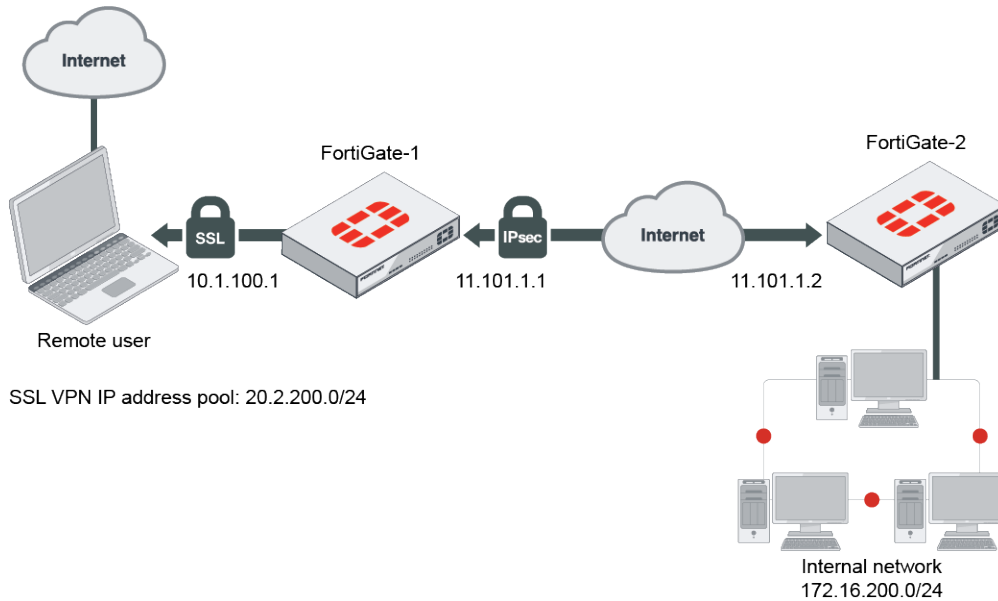

## Sample configuration

To configure the site-to-site IPsec VPN on FGT\_1:

1. Go to *VPN > IPsec Wizard*.
2. In the *VPN Setup* pane:
  - a. Specify the VPN connection *Name* as *to\_FGT\_2*.
  - b. Select *Site to Site*.

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Policy & Routing 4 Review Settings

Name: to\_FGT\_2

Template type: Site to Site | Hub-and-Spoke | Remote Access | Custom

NAT configuration: No NAT between sites  
This site is behind NAT  
The remote site is behind NAT

Remote device type: FortiGate | Cisco

Site to Site - FortiGate

< Back Next > Cancel

- c. Click *Next*.
3. In the *Authentication* pane:
  - a. Enter the *IP Address* to the Internet-facing interface.
  - b. For *Authentication Method*, click *Pre-shared Key* and enter the *Pre-shared Key*.

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Policy & Routing 4 Review Settings

Remote device: **IP Address** Dynamic DNS

Remote IP address: 11.101.1.2

Outgoing Interface: port1

Authentication method: **Pre-shared Key** Signature

Pre-shared key: .....

Site to Site - FortiGate

< Back Next > Cancel

c. Click *Next*.

4. In the *Policy & Routing* pane:

- a. Set the *Local Interface* to the internal interface.
- b. Set the *Local Subnets* to include the internal and SSL VPN subnets for FGT\_1.
- c. Set *Remote Subnets* to include the internal subnet for FGT\_2.

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Policy & Routing 4 Review Settings

Local interface: port2

Local subnets: 10.1.100.0/24, 20.1.200.0/24

Remote Subnets: 172.16.200.0/24

Internet Access: **None** Share Local Use Remote

Site to Site - FortiGate

< Back Next > Cancel

d. Click *Next*.

VPN Creation Wizard

1 VPN Setup 2 Authentication 3 Policy & Routing 4 Review Settings

The following settings should be reviewed prior to creating the VPN.


Object Summary

|                          |                     |
|--------------------------|---------------------|
| Phase 1 Interface        | to_FGT_2            |
| Local address group      | to_FGT_2_local      |
| Remote address group     | to_FGT_2_remote     |
| Phase 2 Interface        | to_FGT_2            |
| Static route             | static              |
| Blackhole route          | static              |
| Local to remote policies | vpn_to_FGT_2_local  |
| Remote to local policies | vpn_to_FGT_2_remote |

< Back Create Cancel

5. Review the VPN settings and click *Create*.

A confirmation screen shows a summary of the configuration including the firewall address groups for both the local and remote subnets, static routes, and security policies.

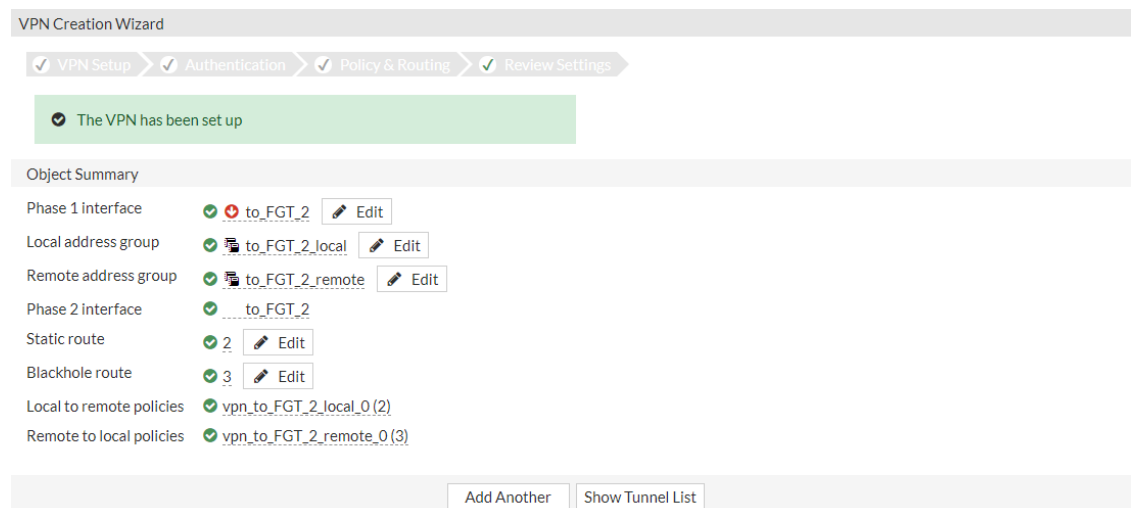

### To configure SSL VPN settings:

1. Go to *VPN > SSL-VPN Settings*.
2. Set *Listen on Interface(s)* to *wan1*.
3. To avoid port conflicts, set *Listen on Port* to *10443*.
4. Set *Restrict Access* to *Allow access from any host*.
5. In the Tunnel Mode Client Settings section, select *Specify custom IP ranges* and include the SSL VPN subnet range created by the *IPsec Wizard*.
6. In the *Authentication/Portal Mapping* section, add the *VPN user group* to the *tunnel-access Portal*. Set *All Other Users/Groups* to the *web-access Portal*.

SSL-VPN Settings

Connection Settings ⓘ

Enable SSL-VPN ☒

Listen on Interface(s)

Listen on Port

Web mode access will be listening at <https://192.168.0.120:1443>

Redirect HTTP to SSL-VPN ☐

Restrict Access ☒ Allow access from any host Limit access to specific hosts

Idle Logout ☒

Inactive For  Seconds

Server Certificate

You are using a default built-in certificate, which will not be able to verify your server's domain name (your users will see a warning). Let's Encrypt can be used to easily generate a trusted certificate if you do not have one. To do this simply import a new local certificate and select type "Automated". [Click here to learn more](#)

Require Client Certificate ☐

Tunnel Mode Client Settings ⓘ

Address Range  Specify custom IP ranges

IP Ranges

DNS Server  Specify

Specify WINS Servers ☐

Authentication/Portal Mapping ⓘ

[+ Create New](#) [Edit](#) [Delete](#) [Send SSL-VPN Configuration](#)

| Users/Groups ⇅         | Portal ⇅      |
|------------------------|---------------|
| VPN user group         | tunnel-access |
| All Other Users/Groups | web-access    |

Apply

Additional Information

[API Preview](#)

[Edit in CLI](#)

SSL VPN Setup Guides

Web Mode

[Web Mode for Remote User](#)

Tunnel Mode

[Full Tunnel for Remote User](#)

[Split Tunnel for Remote User](#)

[Tunnel Mode Host Check](#)

Multi-Realm

[Multi-Realm](#)

Authentication

[Certificate Authentication](#)

[LDAP-Integrated Certificate Authentication](#)

[FortiToken Mobile Push Authentication](#)

[RADIUS on FortiAuthenticator](#)

[RADIUS and FortiToken Mobile Push on FortiAuthenticator](#)

[Local User Password Policy](#)

[RADIUS Password Renew on FortiAuthenticator](#)

[LDAP User Password Renew](#)

VPN Setup on FortiClient

[Configuring an SSL VPN Connection](#)

Troubleshooting

[Troubleshooting](#)

Documentation

[Online Help](#)

[Video Tutorials](#)

Security Rating Issues

Show Dismissed ☐




It is **HIGHLY** recommended that you acquire a signed certificate for your installation. Please review the [SSL VPN best practices on page 1876](#) and learn how to [Procuring and importing a signed SSL certificate on page 2534](#).

7. Click *Apply*.

### To configure SSL VPN portal:


1. Go to *VPN > SSL-VPN Portals*.
2. Select *tunnel-access* and click *Edit*.
3. Turn on *Enable Split Tunneling* so that only traffic intended for the local or remote networks flow through FGT\_1 and follows corporate security profiles.
4. For *Routing Address*, add the local and remote IPsec VPN subnets created by the *IPsec Wizard*.
5. For *Source IP Pools*, add the SSL VPN subnet range created by the *IPsec Wizard*.

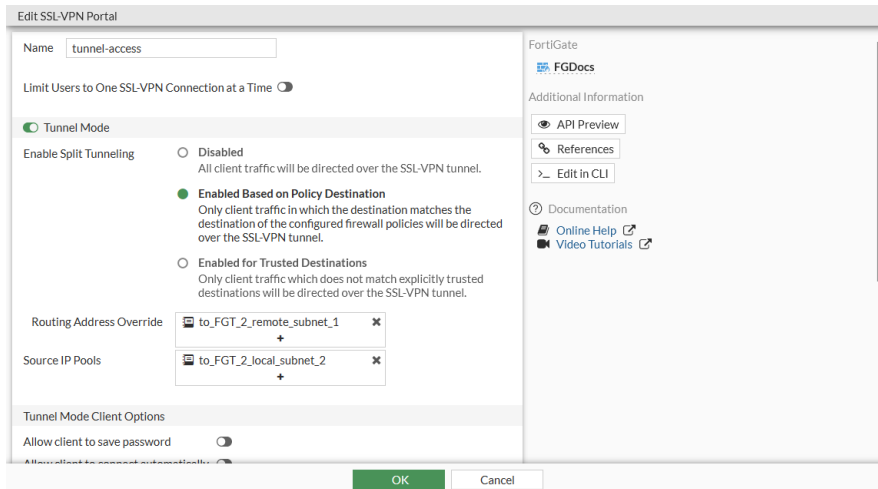

6. Click **OK**.

### To add policies to FGT\_1:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New* to create a policy that allows SSL VPN users access to the IPsec VPN tunnel.
3. For *Incoming Interface*, select *ssl.root*.
4. For *Outgoing Interface*, select the IPsec tunnel interface *to\_FGT\_2*.
5. Set the *Source* to *all* and the *VPN user group*.
6. Set *Destination* to the remote IPsec VPN subnet.
7. Specify the *Schedule*.
8. Set the *Service* to *ALL*.
9. In the *Firewall/Network Options* section, disable *NAT*.

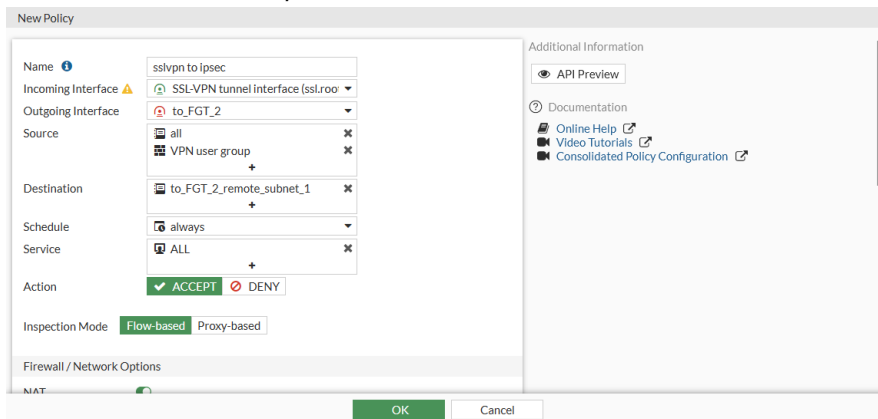

10. Click **OK**.

### To configure the site-to-site IPsec VPN on FGT\_2:


1. Go to *VPN > IPsec Wizard*.
2. In the *VPN Setup* pane:
  - a. Specify the VPN connection *Name* as *to\_FGT\_1*.
  - b. Select *Site to Site*.

- c. Click *Next*.
3. In the *Authentication* pane:
  - a. Enter the *IP Address* to the Internet-facing interface.
  - b. For *Authentication Method*, click *Pre-shared Key* and enter the *Pre-shared Key* of the FGT\_1.
  - c. Click *Next*.
4. In the *Policy & Routing* pane:
  - a. Set the *Local Interface* to the internal interface.
  - b. Set the *Local Subnets* to include the internal and SSL VPN subnets for FGT\_2.
  - c. Set *Remote Subnets* to include the internal subnet for FGT\_1.
  - d. Click *Create*.


A confirmation screen shows a summary of the configuration including the firewall address groups for both the local and remote subnets, static routes, and security policies.

### To check the results:

1. Go to *Dashboard > Network* and click the *IPsec* widget to expand to full screen view.
2. Select the tunnel and click *Bring Up*.

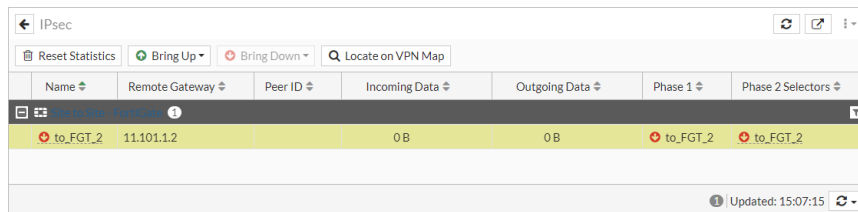

3. Verify that the *Status* changes to *Up*.
4. Configure the SSL VPN connection on the user's FortiClient and connect to the tunnel.

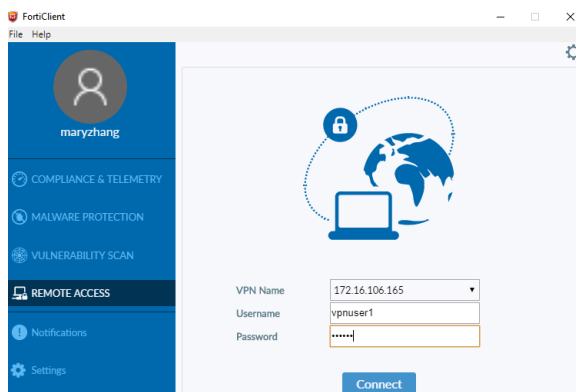

5. On the user's computer, send a ping through the tunnel to the remote endpoint to confirm access:

```
C:\>ping 172.16.200.55
```

```
Pinging 172.16.200.55 with 32 bytes of data:
Replay from 172.16.200.55: bytes=32 times=2ms TTL=62
Replay from 172.16.200.55: bytes=32 times=1ms TTL=62
Replay from 172.16.200.55: bytes=32 times=1ms TTL=62
Replay from 172.16.200.55: bytes=32 times=1ms TTL=62
```

```
Ping statistics for 172.16.200.55:
```



```
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),  
Approximate round trip time in milli-seconds:  
Minimum = 1ms, Maximum = 2ms, Average = 1ms
```

6. In FortiOS, go to the following pages for further verification:
  - a. Go to *Dashboard > Network* and click the *Routing* widget to verify the IPsec and SSL VPNs are added.
  - b. Go to *VPN > SSL-VPN Clients* to verify the connected users.
  - c. Go to *VPN > VPN Location Map* to view the connection activity.
  - d. Go to *Log & Report > System Events* and select the *VPN Events* card to view tunnel statistics.
  - e. Go to *Dashboard > FortiView Policies* to view the policy usage.

## Troubleshooting

**To troubleshoot on FGT\_1, use the following CLI commands:**

```
diagnose debug reset  
diagnose debug flow show function-name enable  
diagnose debug flow show iprope enable  
diagnose debug flow filter addr 172.16.200.55  
diagnose debug flow filter proto 1  
diagnose debug flow trace start 2  
diagnose debug enable
```

**To troubleshoot using ping:**

1. Send a ping through the SSL VPN tunnel to 172.16.200.55 and analyze the output of the debug.
2. Disable the debug output with: `diagnose debug disable`.

If traffic is entering the correct VPN tunnel on FGT\_1, then run the same commands on FGT\_2 to check whether the traffic is reaching the correct tunnel. If it is reaching the correct tunnel, confirm that the SSL VPN tunnel range is configured in the remote side quick mode selectors.

**To troubleshoot using a sniffer command:**

```
diagnose sniff packet any "host 172.16.200.44 and icmp" 4
```

**To troubleshoot IPsec VPN issues, use the following commands on either FortiGate:**

```
diagnose debug reset  
diagnose vpn ike gateway clear  
diagnose debug application ike -1  
diagnose debug enable
```

## SSL VPN protocols

The following topics provide information about SSL VPN protocols:

- [TLS 1.3 support on page 2012](#)
- [SMBv2 support on page 2012](#)
- [DTLS support on page 2013](#)

## TLS 1.3 support

FortiOS supports TLS 1.3 for SSL VPN.



TLS 1.3 support requires IPS engine 4.205 or later and endpoints running FortiClient 6.2.0 or later.

### To establish a client SSL VPN connection with TLS 1.3 to the FortiGate:

1. Enable TLS 1.3 support using the CLI:
 

```
config vpn ssl setting
    set ssl-max-proto-ver tls1-3
    set ssl-min-proto-ver tls1-3
end
```
2. Configure the SSL VPN settings (see [SSL VPN full tunnel for remote user on page 1886](#)).
3. Configure the firewall policy (see [Firewall policy on page 1036](#)).
4. For Linux clients, ensure OpenSSL 1.1.1a is installed:
  - a. Run the following commands in the Linux client terminal:
 

```
root@PC1:~/tools# openssl
OpenSSL> version
```

 If OpenSSL 1.1.1a is installed, the system displays a response like the following:
 

```
OpenSSL 1.1.1a 20 Nov 2018
```
5. For Linux clients, use OpenSSL with the TLS 1.3 option to connect to SSL VPN:
  - a. Run the following command in the Linux client terminal:
 

```
#openssl s_client -connect 10.1.100.10:10443 -tls1_3
```
6. Ensure the SSL VPN connection is established with TLS 1.3 using the CLI:
 

```
# diagnose debug application sslvpn -1
# diagnose debug enable
```

 The system displays a response like the following:
 

```
[207:root:1d]SSL established: TLSv1.3 TLS_AES_256_GCM_SHA384
```

### Deep inspection (flow-based)

FortiOS supports TLS 1.3 for policies that have the following security profiles applied:

- Web filter profile with flow-based inspection mode enabled.
- Deep inspection SSL/SSH inspection profile.

For example, when a client attempts to access a website that supports TLS 1.3, FortiOS sends the traffic to the IPS engine. The IPS engine then decodes TLS 1.3 and the client is able to access the website.

## SMBv2 support

On all FortiGate models, SMBv2 is enabled by default for SSL VPN. Client PCs can access the SMBv2 server using SSL VPN web-only mode.

## To configure SMBv2:

1. Set the minimum and maximum SMB versions.

```
config vpn ssl web portal
    edit portal-name
        set smb-min-version smbv2
        set smb-max-version smbv3
    next
end
```

2. Configure the SSL VPN settings (see [SSL VPN full tunnel for remote user on page 1886](#)).
3. Configure the firewall policy (see [Firewall policy on page 1036](#)).
4. Connect to the SSL VPN web portal and create an SMB bookmark for the SMBv2 server.
5. Click the bookmark to connect to the SMBv2 server.
6. On the FortiGate, use package capture to verify that SMBv2 works:

|   |                 |               |               |      |                                 |
|---|-----------------|---------------|---------------|------|---------------------------------|
| 8 | -440785802.3... | 172.16.200.10 | 172.16.200.44 | SMB2 | 252 Negotiate Protocol Request  |
| 9 | -440785802.3... | 172.16.200.44 | 172.16.200.10 | SMB2 | 338 Negotiate Protocol Response |

## DTLS support

FortiOS Datagram Transport Layer Security (DTLS) allows SSL VPN to encrypt traffic using TLS and uses UDP as the transport layer instead of TCP. This avoids retransmission problems that can occur with TCP-in-TCP.

### To establish a client SSL VPN connection with DTLS to the FortiGate:

1. Enable the DTLS tunnel in the CLI:

```
config vpn ssl setting
    set dtls-tunnel enable
end
```

2. Configure the SSL VPN settings (see [SSL VPN full tunnel for remote user on page 1886](#)).
3. Configure the firewall policy (see [Firewall policy on page 1036](#)).
4. In FortiClient, use the *Preferred DTLS Tunnel* option to connect to SSL VPN with DTLS:
  - a. Go to *Settings* and expand the *VPN Options* section.
  - b. Enable *Preferred DTLS Tunnel*.



FortiClient 5.4.0 to 5.4.3 uses DTLS by default. FortiClient 5.4.4 and later uses normal TLS, regardless of the DTLS setting on the FortiGate.

- c. Click *Save*.

5. In FortiOS, run diagnostics to ensure the SSL VPN connection is established with DTLS:

```
# diagnose debug application sslvpn -1
# diagnose debug enable
```

The system displays a response like the following:

```
[304:vdom1:7]DTLS established: DTLSv1 ECDHE-RSA-AES256-GCM-SHA384
```

## Configuring OS and host check

Beyond the basics of setting up the SSL VPN, you can configure a number of other options that can help to ensure your internal network is secure and can limit the possibility of attacks and viruses entering the network from an outside source. These include verifying OS and performing host checks on software running on the remote device.

### Verifying remote user OS

To verify that remote users are using devices with up-to-date Operating Systems to connect to your network, you can configure a host check for Windows and Mac OS. You can configure an OS host check for specific OS versions, such as Windows 7, 8.1, 10, and 11.

#### To configure an OS host check for specific OS versions:

1. Go to *VPN > SSL-VPN*.
2. Click *Create New*.
3. Enable *Restrict to Specific OS Versions*.
4. Select an OS version and click *Edit* to change the action.
5. Select the action:
  - *Allow*: The selected OS version is allowed to connect. This is the default action.
  - *Block*: The selected OS version is not allowed to connect.
  - *Check up to date*: Specify a *Tolerance* and *Latest patch level* that is allowed for the selected OS version.
6. Click *OK*.
7. Configure other parameters as needed.
8. Click *OK*.

### Host check

Host check verifies whether the client device has AntiVirus, firewall, both, or other custom security software enabled on their Windows device. Admins may also define their own custom host check software, which supports Windows and Mac OS. See [Creating a custom host check list on page 2016](#).



*Host Check* is only available for SSL VPN tunnel mode.

---

#### To configure host checking:

1. Go to *VPN > SSL-VPN Portal*.
2. Click *Create New*.
3. Enable *Host Check*.
4. Set the *Type*:
  - *Realtime AntiVirus*: Checks that AntiVirus software recognized by Windows Security Center is enabled.
  - *Firewall*: Checks that firewall software recognized by Windows Security Center is enabled.

- *Enable both*: Checks that both *Realtime AntiVirus* and *Firewall* are enabled.
- *Custom*: Not configurable from the GUI. See CLI settings below.

5. Configure other parameters as needed.

6. Click OK.

You can configure the full-access portal to perform a custom host check for FortiClient Host Security AV and firewall software.

### To configure custom host checking:

```
config vpn ssl web portal
    edit full-access
        set host-check custom
        set host-check-policy FortiClient-AV FortiClient-FW
    next
end
```



Many other security software can also be configured. Use `set host-check-policy ?` to see a list of software.

---

## Replacing the host check error message

You can add your own host security check error message using either the GUI or the CLI. The default message reads:

```
Your PC does not meet the host checking requirements set by the firewall. Please try again
in a few minutes. If the issue persists check that your OS version meets the minimum
requirements, that your antivirus and firewall applications are installed and running
properly, and that you have the correct network interface.
```

### To replace the host check error message in the GUI:

1. Go to *System > Replacement Messages*.
2. Select *Extended View* in the upper right corner.
3. Scroll down to *SSL-VPN* and select *Hostcheck Error Message*.
4. Click *Edit*. The *Hostcheck Error Message* pane opens.
5. Edit the text in the right-hand column.
6. Click *Save*.



If you are unhappy with the new message, you can restore the message to its default by selecting *Restore Defaults* instead of *Save*.

---

## MAC address check

Aside from OS and Host check, FortiGate can also perform a MAC address check on the remote host.

### To configure a MAC address check on the remote host in the CLI:

```
config vpn ssl web portal
  edit <portal_name>
    set mac-addr-check enable
    config mac-addr-check-rule
      edit <rule_name>
        set mac-addr-list <address> [address]
        set mac-addr-mask <mask between 1-48>
      next
    end
    set set mac-addr-action {allow | deny}
  next
end
```

## Creating a custom host check list

You can add your own software requirements to the host check list using the CLI. Host integrity checking is only possible with client computers running Microsoft Windows platforms.

### To add software requirements to the host check list:

```
config vpn ssl web host-check-software
  edit <software_name>
    set os-type {windows | macos}
    set type {av | fw}
    set version <version_number>
    set guid <guid_value>
    config check-item-list
      edit <ID>
        set action {require | deny}
        set type {file | registry | process}
        set target <target string>
        set version <version string>
        set md5s <hex string>
      next
    end
  next
end
```

If known, enter the Globally Unique Identifier (GUID) for the host check application. Windows uses GUIDs to identify applications in the Windows Registry. The GUID can be found in the Windows registry in the `HKEY_CLASSES_ROOT` section.

To obtain the exact versioning, in Windows, right-click on the .EXE file of the application and select *Properties*, then select the *Version* tab.

## Example: Tunnel Mode Host Check - Registry Key Check

The following example configuration checks if a required registry key is present on a Windows device.

```
config vpn ssl web host-check-software
  edit <computer_name>
    config check-item-list
      edit 1
```

```

        set target "HKEY_LOCAL_
MACHINE\\SYSTEM\\CurrentControlSet\\Control\\ComputerName\\ActiveComputerName:ComputerName=W
INXP32SP3B62"
        set type registry
    next
end
next
end

```

### Example: Tunnel Mode Host Check - Application Running Check

The following example configuration checks if a required application is installed and/or running:

```

config vpn ssl web host-check-software
    edit "calc"
        config check-item-list
            edit 1
                set target "calc.exe"
                set type process
            next
        end
    next
end

```

### Example: Mac OS host check and process check

The `os-type` option is available under `vpn ssl web host-check-software`; if `os-type` is `macos`, then `type`, `version` and `guid` are hidden. Furthermore, `type` in `check-item-list` can only be set to `file` or `process`.

```

config vpn ssl web portal
    edit <portal_name>
        set os-check enable
        config os-check-list macos-bigsur-11
            set action {allow | deny | check-up-to-date}
            set tolerance <value>
            set latest-patch-level <value>
        end
    next
end
config vpn ssl web host-check-software
    edit <name>
        set os-type macos
        config check-item-list
            edit <name>
                set type process
                set target <target process>
            next
        end
    next
end

```

### Example: Configuring Windows OS Check with patch version

The Windows patch check enables you to define the minimum Windows version and patch level allowed when connecting to the SSL VPN portal. When the user attempts to connect to the web portal, FortiOS performs a query on the

version of Windows the user has installed. If it does not match the minimum requirement, the connection is denied. The Windows patch check is configured in the CLI.

To specify the acceptable patch level, you set the `latest-patch-level` and the `tolerance`. The lowest acceptable patch level is `latest-patch-level` minus `tolerance`. In this case, *latest-patch-level* is three and *tolerance* is one, so two is the lowest acceptable patch level.

### To configure OS check:

```
config vpn ssl web portal
  edit <portal_name>
    set os-check enable
    config os-check-list <windows OS version>
      set action {allow | check-up-to-date | deny}
      set latest-patch-level {disable | 0 - 65535}
      set tolerance <tolerance_num>
    end
  next
end
```

### Example: Host check for Windows firewall

The Windows built-in firewall does not have a GUID in `root\securitycenter` or `root\securitycenter2`, but you can use a registry value to detect the firewall status.

If Windows firewall is on, the following registry value will be set to one:

- **KeyName:** HKEY\_LOCAL\_MACHINE\SYSTEM\CurrentControlSet\Services\SharedAccess\Parameters\FirewallPolicy\StandardProfile
- **ValueName:** EnableFirewall

In FortiOS, use the `registry-value-check` feature to define the Windows firewall software.

### To define the Windows firewall software:

```
config vpn ssl web host-check-software
  edit "Microsoft-Windows-Firewall"
    set type fw
    config check-item-list
      edit 1
        set target
        "HKLM\\SYSTEM\\CurrentControlSet\\Services\\SharedAccess\\Parameters\\FirewallPolicy\\StandardProfile:EnableFirewall==1"
        set type registry
      next
      edit 2
        set target
        "HKLM\\SYSTEM\\CurrentControlSet\\Services\\SharedAccess\\Parameters\\FirewallPolicy\\PublicProfile:EnableFirewall==1"
        set type registry
      next
      edit 3
        set target
        "HKLM\\SYSTEM\\CurrentControlSet\\Services\\SharedAccess\\Parameters\\FirewallPolicy\\DomainProfile:EnableFirewall==1"
        set type registry
    end
  next
end
```



```

        next
    end
next
end
config vpn ssl web portal
    edit <portal_name>
        set host-check custom
        set host-check-policy Microsoft-Windows-Firewall
    next
end

```

## Troubleshooting

To troubleshoot OS and host check, enable the following real-time debugs from the CLI:

```

# diagnose debug app sslvpn -1
# diagnose debug enable

```

From the remote client, connect to SSL VPN. Look for debug output similar to the following:

```
[263:root:3cca1]host check result:4 0100,10.0.19042,74:78:27:4d:81:93|84:1b:77:3a:95:84
```

To interpret the above output:

| Field                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| host check result: 4                | <p>This is the hex number of portal's host check value:</p> <ul style="list-style-type: none"> <li>0: None</li> <li>1: Check antivirus</li> <li>2: Check firewall</li> <li>3: Check antivirus and firewall</li> <li>4: Custom check</li> </ul>                                                                                                                                                                                                                                    |
| 0100                                | <p>The 4 bytes shows the result of host check checking in the FortiGate Settings. Position counts from left to right, zero to three:</p> <ul style="list-style-type: none"> <li>Position zero means result of third party firewall.</li> <li>Position one means result of third party antivirus.</li> <li>Position two means result of FortiClient firewall.</li> <li>Position three means result of FortiClient antivirus.</li> </ul> <p>0 means not in use. 1 means in use.</p> |
| 10.0.19042                          | This is the OS version.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 74:78:27:4d:81:93 84:1b:77:3a:95:84 | <p>The MAC address of the client machine's network interface, that is used for the mac address check. Multiple MAC address are separately by ' '.</p>                                                                                                                                                                                                                                                                                                                             |

## FortiGate as SSL VPN Client

The FortiGate can be configured as an SSL VPN client, using an *SSL-VPN Tunnel* interface type. When an SSL VPN client connection is established, the client dynamically adds a route to the subnets that are returned by the SSL VPN server. Policies can be defined to allow users that are behind the client to be tunneled through SSL VPN to destinations on the SSL VPN server.

FortiOS can be configured as an SSL VPN server that allows IP-level connectivity in tunnel mode, and can act as an SSL VPN client that uses the protocol used by the FortiOS SSL VPN server. This allows hub-and-spoke topologies to be configured with FortiGates as both the SSL VPN hub and spokes.

For an IP-level VPN between a device and a VPN server, this can be useful to avoid issues caused by intermediate devices, such as:

- ESP packets being blocked.
- UDP ports 500 or 4500 being blocked.
- Fragments being dropped, causing IKE negotiation that uses large certificates to fail if the peer does not support IKE fragmentation.

If the client specified destination is *all*, a default route is effectively dynamically created on the SSL VPN client, and the new default route is added to the existing default route in the form of ECMP. Some examples how to configure routing are:


- To make all traffic default to the SSL VPN server and still have a route to the server's listening interface, on the SSL VPN client set a lower distance for the default route that is learned from the server.
- To include both default routes in the routing table, with the route learned from the SSL VPN server taking priority, on the SSL VPN client set a lower distance for the route learned from the server. If the distance is already zero, then increase the priority on the default route.
- To avoid a default being learned on the SSL VPN client, on the SSL VPN server define a specific destination.

### Example

In this example, the home FortiGate (FGT-A) is configured as an SSL VPN client, and the company FortiGate (FGT-B) is configured as an SSL VPN server. After FGT-A connects to FGT-B, the devices that are connected to FGT-A can access the resources behind FGT-B.

The SSL VPN server has a custom server certificate defined, and the SSL VPN client user uses PSK and a PKI client certificate to authenticate. The FortiGates must have the proper CA certificate installed to verify the certificate chain to the root CA that signed the certificate.

Split tunneling is used so that only the destination addresses defined in the server's firewall policies are routed to the server, and all other traffic is connected directly to the internet.

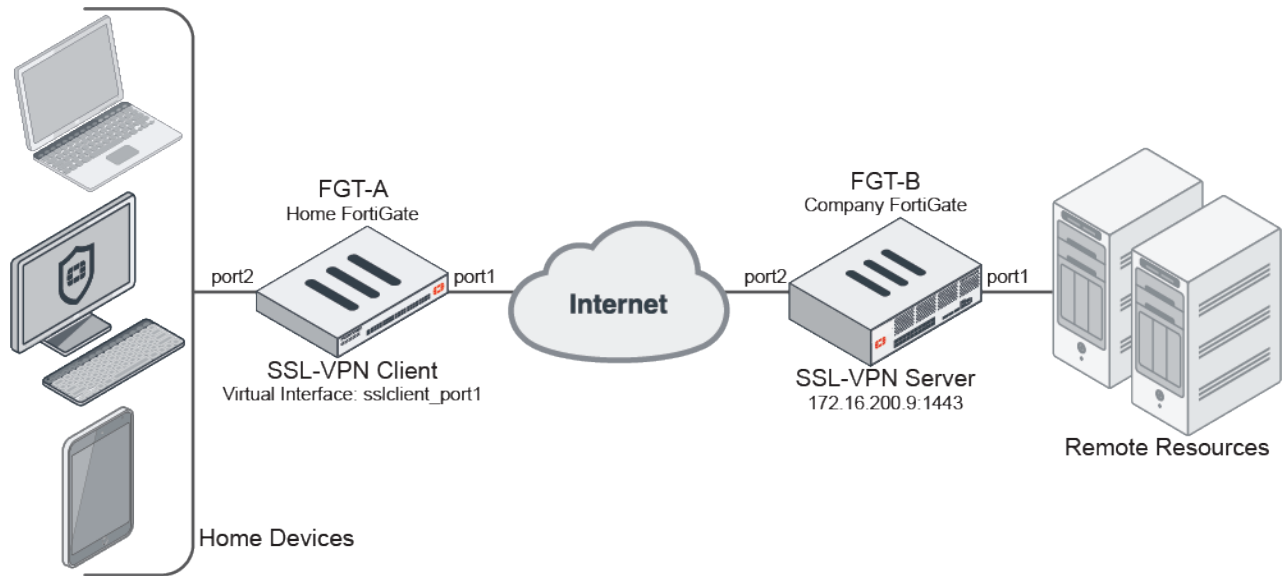

## Configure the SSL VPN server

### To create a local user in the GUI:

1. Go to *User & Authentication > User Definition* and click *Create New*.
2. Use the wizard to create a local user named *client2*.

### To create a PKI user in the GUI:



The PKI menu is only available in the GUI after a PKI user has been created using the CLI, and a CN can only be configured in the CLI.

1. Go to *User & Authentication > PKI* and click *Create New*.
2. Set the *Name* to *pki*.
3. Set *CA* to the CA certificate that is used to verify the client certificate.

4. Click *OK*.
5. In the CLI, specify the CN that must be matched. If no CN is specified, then any certificate that is signed by the CA will be valid and matched.

```
config user peer
  edit "pki"
    set cn "*.fos.automation.com"
```

```

    next
end

```

### To create an SSL VPN portal in the GUI:

1. Go to *VPN > SSL-VPN Portals* and click *Create New*.
2. Set the *Name* to *testportal2*.
3. Set *Enable Split Tunneling* to *Enabled Based on Policy Destination*.
4. Set *Source IP Pools* to *SSLVPN\_TUNNEL\_ADDR1*.
5. Click *OK*.

### To configure SSL VPN settings in the GUI:

1. Go to *VPN > SSL-VPN Settings* and enable *Enable SSL-VPN*.
2. Set *Listen on Interface(s)* to *port2*.
3. Set *Listen on Port* to *1443*.
4. Set *Server Certificate* to *fgt\_gui\_automation*.
5. In the *Authentication/Portal Mapping* table click *Create New*:
  - a. Set *Users/Groups* to *client2*.
  - b. Set *Portal* to *testportal2*.
  - c. Click *OK*.
6. Click *OK*.
7. In the CLI, enable SSL VPN client certificate restrictive and set the user peer to *pki*:

```

config vpn ssl settings
    config authentication-rule
        edit 1
            set client-cert enable
            set user-peer "pki"
        next
    end
end

```

### To create a firewall address in the GUI:

1. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
2. Set the *Name* to *bing.com*.
3. Set *Type* to *FQDN*.
4. Set *FQDN* to *www.bing.com*.
5. Click *OK*.

### To create a firewall policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the policy:

| Name | sslvpn2 |
|------|---------|
|      |         |

|                           |                                                                                                                                                                                                                                       |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Incoming Interface</b> | <i>SSL-VPN tunnel interface (ssl.root)</i>                                                                                                                                                                                            |
| <b>Outgoing Interface</b> | <i>port1</i>                                                                                                                                                                                                                          |
| <b>Source</b>             | <i>Address: all</i><br><i>User: client2</i>                                                                                                                                                                                           |
| <b>Destination</b>        | <i>bing.com: This FQDN resolves to 13.107.21.200 and 204.79.197.200. Traffic to these addresses is directed to the SSL VPN, while other traffic is routed to the remote devices' default adapters or interfaces.</i><br><i>mantis</i> |
| <b>Schedule</b>           | <i>always</i>                                                                                                                                                                                                                         |
| <b>Service</b>            | <i>ALL</i>                                                                                                                                                                                                                            |
| <b>Action</b>             | <i>Accept</i>                                                                                                                                                                                                                         |

3. Click **OK**.

### To configure the SSL VPN server (FGT-B) in the CLI:

1. Create a local user:

```
config user local
    edit "client2"
        set passwd *****
    next
end
```

2. Create a PKI user:

```
config user peer
    edit "pki"
        set ca "CA_Cert_3"
        set cn "*.fos.automation.com"
    next
end
```

3. Create a new SSL VPN portal:

```
config vpn ssl web portal
    edit "testportal2"
        set tunnel-mode enable
        set ipv6-tunnel-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling enable
        set ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
        set ipv6-split-tunneling enable
        ....
    next
end
```

4. Configure SSL VPN settings, including the authentication rule for user mapping:

```
config vpn ssl settings
    set ssl-min-proto-ver tls1-1
    set servercert "fgt_gui_automation"
```

```

set auth-timeout 0
set login-attempt-limit 10
set login-timeout 180
set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
set dns-suffix "sslvpn.com"
set port 1443
set source-interface "port2"
set source-address "all"
set source-address6 "all"
set default-portal "testportal1"
config authentication-rule
    edit 1
        set users "client2"
        set portal "testportal2"
        set client-cert enable
        set user-peer "pki"
    next
end
end

```

5. Create a firewall address and policy. The destination addresses used in the policy are routed to the SSL VPN server.

```

config firewall address
    edit "bing.com"
        set type fqdn
        set fqdn "www.bing.com"
    next
end

config firewall policy
    edit 2
        set name "sslvpn2"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "mantis" "bing.com"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
        set users "client2"
    next
end

```

## Configure the SSL VPN client

To create a PKI user in the GUI:



The PKI menu is only available in the GUI after a PKI user has been created using the CLI, and a CN can only be configured in the CLI.

1. Go to *User & Authentication > PKI* and click *Create New*.
2. Set the *Name* to *fgt\_gui\_automation*.
3. Set *CA* to the CA certificate. The CA certificate allows the FortiGate to complete the certificate chain and verify the server's certificate, and is assumed to already be installed on the FortiGate.
4. Click *OK*.
5. In the CLI, specify the CN of the certificate on the SSL VPN server:

```
config user peer
    edit "fgt_gui_automation"
        set cn "*.fos.automation.com"
    next
end
```

### To create an SSL VPN client and virtual interface in the GUI:

1. Go to *VPN > SSL-VPN Clients* and click *Create New*.
2. Expand the *Interface* drop down and click *Create* to create a new virtual interface:
  - a. Set the *Name* to *sslclient\_port1*.
  - b. Set *Interface* to *port1*.
  - c. Under *Administrative Access*, select *HTTPS* and *PING*.

The screenshot shows the 'New SSL-VPN Client' configuration window in the FortiGate GUI. The left sidebar lists various configuration options: Name, Interface, Server, Port, Username, Pre-shared Key, Client Certificate, Peer, Administrative Dist, Priority, Status, and Comments. The main panel is titled 'New Interface' and contains the following fields and options:

- Name:** sslclient\_port1
- Alias:** (empty)
- Type:** SSL-VPN Tunnel
- Interface:** port1
- Role:** LAN
- Administrative Access:**
  - IPv4:** ☒ HTTPS, ☒ HTTP, ☐ PING, ☐ FMG-Access, ☐ SSH, ☐ SNMP, ☐ FTM, ☐ RADIUS Accounting, ☐ Security Fabric Connection
- Traffic Shaping:** Outbound shaping profile (disabled)
- Miscellaneous:**
  - Comments:** (empty)
  - Status:** Enabled (green circle), Disabled (red circle)

At the bottom of the window are 'OK' and 'Cancel' buttons.

- d. Click *OK*.

## 3. Configure the SSL VPN client:

|                                |                                                                                                                                                                                                               |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                    | <i>sslclientTo9</i>                                                                                                                                                                                           |
| <b>Interface</b>               | <i>sslclient_port1</i>                                                                                                                                                                                        |
| <b>Server</b>                  | <i>172.16.200.9</i>                                                                                                                                                                                           |
| <b>Port</b>                    | <i>1443</i>                                                                                                                                                                                                   |
| <b>Username</b>                | <i>client2</i>                                                                                                                                                                                                |
| <b>Pre-shared Key</b>          | <i>*****</i>                                                                                                                                                                                                  |
| <b>Client Certificate</b>      | <i>fgtb_gui_automation</i><br>This is the local certificate that is used to identify this client, and is assumed to already be installed on the FortiGate. The SSL VPN server requires it for authentication. |
| <b>Peer</b>                    | <i>fgt_gui_automation</i>                                                                                                                                                                                     |
| <b>Administrative Distance</b> | Configure as needed.                                                                                                                                                                                          |
| <b>Priority</b>                | Configure as needed.                                                                                                                                                                                          |
| <b>Status</b>                  | Enabled                                                                                                                                                                                                       |

## 4. Click OK.

**To create a firewall policy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Configure the policy:

|                           |                                |
|---------------------------|--------------------------------|
| <b>Name</b>               | <i>policy_to_sslvpn_tunnel</i> |
| <b>Incoming Interface</b> | <i>port2</i>                   |
| <b>Outgoing Interface</b> | <i>sslclient_port1</i>         |
| <b>Source</b>             | <i>all</i>                     |
| <b>Destination</b>        | <i>all</i>                     |
| <b>Schedule</b>           | <i>always</i>                  |
| <b>Service</b>            | <i>ALL</i>                     |
| <b>Action</b>             | <i>Accept</i>                  |

## 3. Click OK.

**To configure the SSL VPN client (FGT-A) in the CLI:**

1. Create the PKI user. Use the CA that signed the certificate *fgt\_gui\_automation*, and the CN of that certificate on the SSL VPN server.

```
config user peer
    edit "fgt_gui_automation"
```



```

        set ca "GUI_CA"
        set cn "*.fos.automation.com"
    next
end

```

## 2. Create the SSL interface that is used for the SSL VPN connection:

```

config system interface
    edit "sslclient_port1"
        set vdom "vdom1"
        set allowaccess ping https
        set type ssl
        set role lan
        set snmp-index 46
        set interface "port1"
    next
end

```

## 3. Create the SSL VPN client to use the PKI user and the client certificate *fgtb\_gui\_automation*:

```

config vpn ssl client
    edit "sslclientTo9"
        set interface "sslclient_port1"
        set user "client2"
        set psk 123456
        set peer "fgt_gui_automation"
        set server "172.16.200.9"
        set port 1443
        set certificate "fgtb_gui_automation"
    next
end

```

## 4. Create a firewall policy:

```

config firewall policy
    edit 1
        set name "policy_to_sslvpn_tunnel"
        set srcintf "port2"
        set dstintf "sslclient_port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

```

## Verification

After the tunnel is established, the route to 13.107.21.200 and 204.79.197.200 on FGT-A connects through the SSL VPN virtual interface *sslclient\_port1*.

### To check the routing table details:

```

(vdom1) # get router info routing-table details
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP

```

```

O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default

```

Routing table for VRF=0

```

S* 0.0.0.0/0 [10/0] via 172.16.200.254, port1
C 10.0.1.0/24 is directly connected, link_11
C 10.1.100.0/24 is directly connected, port2
   is directly connected, port2
C 10.212.134.200/32 is directly connected, sslclient_port1
S 13.107.21.200/32 [10/0] is directly connected, sslclient_port1
C 172.16.200.0/24 is directly connected, port1
S 192.168.100.126/32 [10/0] is directly connected, sslclient_port1
S 204.79.197.200/32 [10/0] is directly connected, sslclient_port1

```

### To check the added routing for an IPv6 tunnel:

```


(vdom1) # get router info6 routing-table database
IPv6 Routing Table
Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF,
       IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, B - BGP
       > - selected route, * - FIB route, p - stale info
Timers: Uptime

S  *> ::/0 [10/0] via 2000:172:16:200::254, port1, 00:00:01, [1024/0]
   *> [10/0] via ::, sslclient_port1, 00:00:01, [1024/0]
C  *> ::1/128 via ::, vdom1, 03:26:35
C  *> 2000:10:0:1::/64 via ::, link_11, 03:26:35
C  *> 2000:10:1:100::/64 via ::, port2, 03:26:35
C  *> 2000:172:16:200::/64 via ::, port1, 03:26:35
C  *> 2001:1::1:100/128 via ::, sslclient_port1, 00:00:01
C  *> fe80::/64 via ::, port2, 03:26:35

```

### To check the connection in the GUI:

1. On the SSL VPN server FortiGate (FGT-B), go to *Dashboard > Network* and expand the *SSL-VPN* widget.

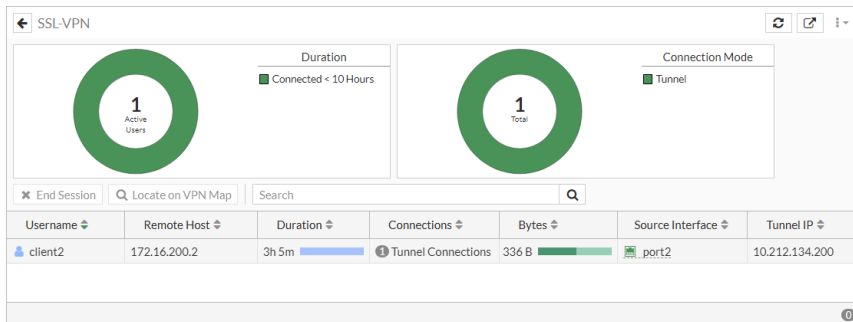

2. On the SSL VPN client FortiGate (FGT-A), go to *VPN > SSL-VPN Clients* to see the tunnel list.


## Dual stack IPv4 and IPv6 support for SSL VPN

Dual stack IPv4 and IPv6 support for SSL VPN servers and clients enables a client to establish a dual stack tunnel to allow both IPv4 and IPv6 traffic to pass through. FortiGate SSL VPN clients also support dual stack, which allows it to establish dual stack tunnels with other FortiGates.

Users connecting in web mode can connect to the web portal over IPv4 or IPv6. They can access bookmarks in either IPv4 or IPv6, depending on the preferred DNS setting of the web portal.

### Example

In this example, FortiGate B works as an SSL VPN server with dual stack enabled. A test portal is configured to support tunnel mode and web mode SSL VPN.

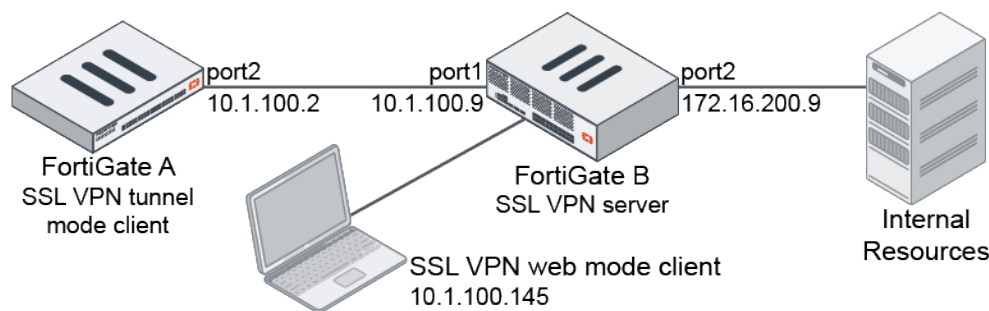

FortiGate A is an SSL VPN client that connects to FortiGate B to establish an SSL VPN tunnel connection. It attempts to access [www.bing.com](http://www.bing.com) and [www.apple.com](http://www.apple.com) via separate IPv4 and IPv6 connections. Two addresses are configured on FortiGate B:

- *bing.com* uses IPv4 FQDN and resolves to 13.107.21.200 and 204.79.197.200.
- *apple\_v6* uses IPv6 FQDN and resolves to 2600:140a:c000:385::1aca and 2600:140a:c000:398::1aca.

The server certificate used is `fgt_gui_automation`, and the CN is `*.fos.automation.com`.

A PC serves as a client to connect to FortiGate B in SSL VPN web mode. The PC can connect to the SSL VPN server over IPv4 or IPv6. Based on the preferred DNS setting, it will access the destination website over IPv4 or IPv6.



Dual stack tunnel mode support requires a supported client. In 7.0.0, a FortiGate in SSL VPN client mode can support dual stack tunnels. FortiClient 7.0.1 and later releases support dual stack.

### To configure an SSL VPN server in tunnel and web mode with dual stack support in the GUI:

1. Create a local user:
  - a. Go to *User & Authentication > User Definition* and click *Create New*. The *Users/Groups Creation Wizard* opens.
  - b. Set the *User Type* to *Local User* and click *Next*.
  - c. Enter the *Username* (*client2*) and password, then click *Next*.
  - d. Optionally, configure the contact information and click *Next*.
  - e. Click *Submit*.
2. Configure the addresses:

- a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
- b. Enter the following for the IPv4 address:

| Category | Address      |
|----------|--------------|
| Name     | bing.com     |
| Type     | FQDN         |
| FQDN     | www.bing.com |

- c. Click *OK*.
- d. Click *Create New > Address* and enter the following for the IPv6 address:

| Category | IPv6 Address  |
|----------|---------------|
| Name     | apple_v6      |
| Type     | FQDN          |
| FQDN     | www.apple.com |

- e. Click *OK*.
3. Configure the SSL VPN portal:
    - a. Go to *VPN > SSL-VPN Portals* and click *Create New*.
    - b. Enter a name (*testportal1*).
    - c. Enable *Tunnel Mode* and for *Enable Split Tunneling*, select *Enable Based on Policy Destination*.
    - d. For *Source IP Pools*, add *SSLVPN\_TUNNEL\_ADDR1*.
    - e. Enable *IPv6 Tunnel Mode* and for *Enable Split Tunneling*, select *Enable Based on Policy Destination*.
    - f. For *Source IP Pools*, add *SSLVPN\_TUNNEL\_IPv6\_ADDR1*.
    - g. Enable *Enable Web Mode*.

New SSL-VPN Portal

Name:

Limit Users to One SSL-VPN Connection at a Time: ☐

**Tunnel Mode**

Enable Split Tunneling

- ☐ Disabled  
All client traffic will be directed over the SSL-VPN tunnel.
- ☒ **Enabled Based on Policy Destination**  
Only client traffic in which the destination matches the destination of the configured firewall policies will be directed over the SSL-VPN tunnel.
- ☐ Enabled for Trusted Destinations  
Only client traffic which does not match explicitly trusted destinations will be directed over the SSL-VPN tunnel.

Routing Address Override:

Source IP Pools:

**IPv6 Tunnel Mode**

Enable IPv6 Split Tunneling

- ☐ Disabled  
All client traffic will be directed over the SSL-VPN tunnel.
- ☒ **Enabled Based on Policy Destination**  
Only client traffic in which the destination matches the destination of the configured firewall policies will be directed over the SSL-VPN tunnel.
- ☐ Enabled for Trusted Destinations  
Only client traffic which does not match explicitly trusted destinations will be directed over the SSL-VPN tunnel.

IPv6 Routing Address Override:

Source IPv6 Pools:

FortiGate

FGDocs

Additional Information

API Preview

Documentation

Online Help

Video Tutorials

OK Cancel

h. Click OK.

4. Configure the SSL VPN settings:

- a. Go to *VPN > SSL-VPN Settings* and configure the following:

|                                      |                                                                          |
|--------------------------------------|--------------------------------------------------------------------------|
| <b>Listen on Interface(s)</b>        | port1                                                                    |
| <b>Listen on Port</b>                | 1443                                                                     |
| <b>Restrict Access</b>               | Allow access from any host                                               |
| <b>Server Certificate</b>            | fgt_gui_automation                                                       |
| <b>Address Range</b>                 | Automatically assign addresses                                           |
| <b>DNS Server</b>                    | Same as client system DNS                                                |
| <b>Authentication/Portal Mapping</b> | Edit the <i>All Other Users/Groups</i> entry to use <i>testportal1</i> . |

- b. Click *Apply*.
- c. Enable dual stack in the CLI:

```
config vpn ssl settings
    set dual-stack-mode enable
end
```

5. Configure the firewall policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
- b. Enter the following:

|                           |          |
|---------------------------|----------|
| <b>Name</b>               | sslvpn   |
| <b>Incoming Interface</b> | ssl.root |

|                           |                                 |
|---------------------------|---------------------------------|
| <b>Outgoing Interface</b> | port2                           |
| <b>Source</b>             | all (IPv4), all (IPv6), client2 |
| <b>Destination</b>        | bing.com, apple_v6              |
| <b>Schedule</b>           | Always                          |
| <b>Service</b>            | All                             |
| <b>NAT</b>                | Enabled                         |

- c. Click OK.

### To configure FortiGate A as an SSL VPN client in the GUI:

1. Create a peer to verify the server certificate:



The PKI menu is only available in the GUI (*User & Authentication > PKI*) after a PKI user has been created using the CLI, and a CN can only be configured in the CLI.  
If the CA is not known or is public, import the CA that signed the server certificate.

- a. Go to *User & Authentication > PKI* and click *Create New*.
- b. Set the *Name* to *fgt\_gui\_automation*.
- c. Set *CA* to the CA certificate that is used to verify the server certificate.
- d. Click OK.
- e. In the CLI, specify the CN that must be matched:

```
config user peer
  edit "fgt_gui_automation"
    set ca "GUI_CA"
    set cn "*.fos.automation.com"
  next
end
```

2. Configure the SSL VPN client:

- a. Go to *VPN > SSL-VPN Clients* and click *Create New*.
- b. In the *Interface* dropdown, click *Create*.
  - i. Enter a Name (*sslclient\_port2*).
  - ii. Set *Interface* to *port2*.
  - iii. Set *Role* to *LAN*.

- iv. Click OK.
- c. Configure the SSL VPN client:


|                       |                                                                                                                           |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>           | sslclientTo9                                                                                                              |
| <b>Interface</b>      | sslclient_port2                                                                                                           |
| <b>Server</b>         | Either IPv4 address <i>10.1.100.9</i> or IPv6 address <i>2000:10:1:100::9</i> can be used and will have the same results. |
| <b>Port</b>           | 1443                                                                                                                      |
| <b>Username</b>       | client2                                                                                                                   |
| <b>Pre-shared Key</b> | *****                                                                                                                     |
| <b>Peer</b>           | fgt_gui_automation                                                                                                        |
| <b>Status</b>         | Enabled                                                                                                                   |

- d. Click OK.

### To configure FortiClient and connect to the VPN:

1. On the *Remote Access* tab and click *Configure VPN*, or if other connections have already been configured, click the sandwich icon and select *Add a new connection*.
2. Set *Connection Name* to *FGT2500E*, and *Remote Gateway* to *10.1.100.9*.
3. Enable *Customize port* and enter the port number *1443*.
4. Set *Username* to *client2*.
5. Enable *Enable Dual-stack IPv6/IPv6 address*.



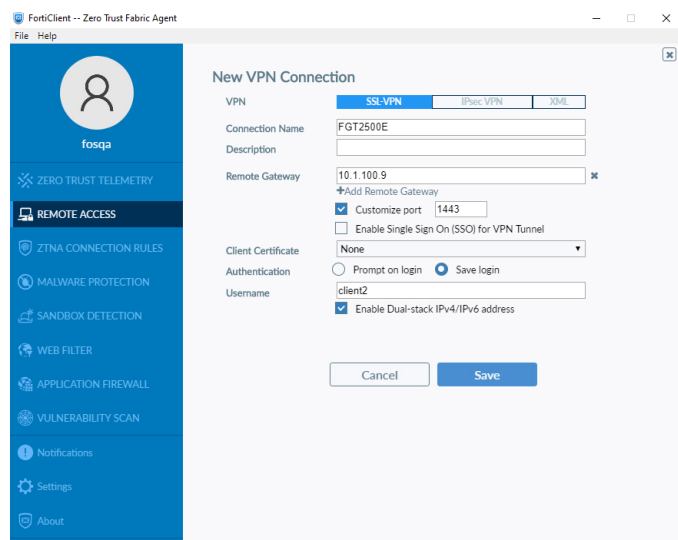

6. Click **Save**.
7. Enter the password, then click **Connect**.

**To configure an SSL VPN server in tunnel and web mode with dual stack support in the CLI:**

1. Create a local user:

```
config user local
  edit "client1"
    set type password
    set passwd *****
  next
end
```

2. Configure the addresses:

```
config firewall address
  edit "bing.com"
    set type fqdn
    set fqdn "www.bing.com"
  next
end

config firewall address6
  edit "apple_v6"
    set type fqdn
    set fqdn "www.apple.com"
  next
end
```

3. Configure the SSL VPN portal:

```
config vpn ssl web portal
  edit "testportal1"
    set tunnel-mode enable
    set ipv6-tunnel-mode enable
    set web-mode enable
    set ip-pools "SSLVPN_TUNNEL_ADDR1"
    set ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
```

```

        set split-tunneling enable
        set ipv6-split-tunneling enable
    next
end

```

#### 4. Configure the SSL VPN settings:

```

config vpn ssl settings
    set servercert "fgt_gui_automation"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set port 1443
    set source-interface "port1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "testportal1"
    set dual-stack-mode enable
end

```

#### 5. Configure the firewall policy:

```

config firewall policy
    edit 1
        set name "sslvpn"
        set srcintf "ssl.root"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "bing.com"
        set srcaddr6 "all"
        set dstaddr6 "apple_v6"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
        set users "client2"
    next
end

```

### To configure FortiGate A as an SSL VPN client in the CLI:

#### 1. Create a peer to verify the server certificate:

```

config user peer
    edit "fgt_gui_automation"
        set ca "GUI_CA"
        set cn "*.fos.automation.com"
    next
end

```

#### 2. Configure the interface:

```

config system interface
    edit "sslclient_port2"
        set vdom "vdom1"
        set type ssl
        set role lan
        set snmp-index 46
        set interface "port2"
    next
end

```

```

    next
end

```

3. Configure the SSL VPN client. Either IPv4 address 10.1.100.9 or IPv6 address 2000:10:1:100::9 can be used and will have the same results:

```


config vpn ssl client
    edit "sslclientTo9"
        set interface "sslclient_port2"
        set user "client2"
        set psk *****
        set peer "fgt_gui_automation"
        set server {10.1.100.9 | 2000:10:1:100::9}
        set port 1443
    next
end

```

## Testing dual stack with tunnel mode

To verify the SSL VPN tunnel connection in the GUI:

1. On FortiGate B, go to *Dashboard > Network*.
2. Expand the *SSL-VPN* widget.

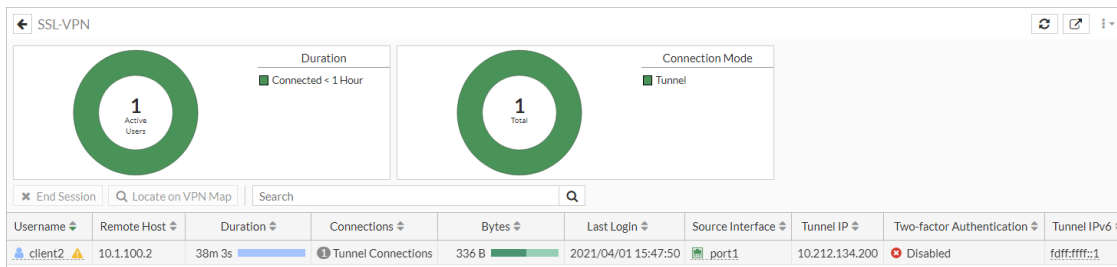

To verify the SSL VPN tunnel connection in the CLI:

1. On FortiGate B, verify that the client is assigned with both IPv4 and IPv6 addresses:

```

(root) # get vpn ssl monitor
SSL VPN Login Users:
  Index  User   Group  Auth Type  Timeout  Auth-Timeout  From  HTTP
in/out  HTTPS in/out  Two-factor Auth
0       client2      1 (1)      292      2147483647  10.1.100.2
0/0     0/0      0

SSL VPN sessions:
  Index  User   Group  Source IP  Duration  I/O Bytes  Tunnel/Dest IP
0       client2      10.1.100.2  5427      1756/1772  10.212.134.200,fdff:ffff::1

```

2. On FortiGate A, verify the routing tables.
  - a. IPv4 with resolved addresses for www.bing.com:

```

(vdom1) # get router info routing-table database
...
Routing table for VRF=0

```

```

S    *> 0.0.0.0/0 [10/0] via 172.16.200.254, port1
C    *> 10.0.1.0/24 is directly connected, link_11
C    *> 10.1.100.0/24 is directly connected, port2
C    *> 10.212.134.200/32 is directly connected, sslclient_port2
S    *> 13.107.21.200/32 [10/0] is directly connected, sslclient_port2
C    *> 172.16.200.0/24 is directly connected, port1
S    *> 204.79.197.200/32 [10/0] is directly connected, sslclient_port2

```

**b. IPv6 with resolved addresses for www.apple.com:**

```

(vdom1) # get router info6 routing-table database
...
S    *> ::/0 [10/0] via 2000:172:16:200::254, port1, 01:57:23, [1024/0]
C    *> ::1/128 via ::, vdom1, 06:12:54
C    *> 2000:10:0:1::/64 via ::, link_11, 06:12:54
C    *> 2000:10:1:100::/64 via ::, port2, 06:12:54
C    *> 2000:172:16:200::/64 via ::, port1, 06:12:54
S    *> 2600:140a:c000:385::1aca/128 [10/0] via ::, sslclient_port2, 01:33:08,
[1024/0]
S    *> 2600:140a:c000:398::1aca/128 [10/0] via ::, sslclient_port2, 01:33:08,
[1024/0]
C    *> fdff:ffff::/120 via ::, sslclient_port2, 01:33:08
C    *> fe80::/64 via ::, port2, 06:12:54

```

**To test the address connections using ping:**

**1. On FortiGate A, ping www.bing.com using IPv4 ping:**

```

# execute ping www.bing.com
PING www-bing-com.dual-a-0001.a-msedge.net (13.107.21.200): 56 data bytes
64 bytes from 13.107.21.200: icmp_seq=0 ttl=117 time=1.8 ms
...

```

**2. On FortiGate B, sniff for IPv4 ICMP packets and observe the results:**

```

# diagnose sniffer packet any icmp 4
interfaces=[any]
filters=[icmp]
9.675101 ssl.root in 10.212.134.200 -> 13.107.21.200: icmp: echo request
9.675219 port2 out 172.16.200.9 -> 13.107.21.200: icmp: echo request
9.676698 port2 in 13.107.21.200 -> 172.16.200.9: icmp: echo reply
9.676708 ssl.root out 13.107.21.200 -> 10.212.134.200: icmp: echo reply
...

```

**3. On FortiGate A, ping www.apple.com using IPv6 ping:**

```

# execute ping6 www.apple.com
PING www.apple.com (2600:140a:c000:385::1aca): 56 data bytes
64 bytes from 2600:140a:c000:385::1aca: icmp_seq=1 ttl=52 time=1.88 ms
...

```

**4. On FortiGate B, sniff for IPv6 ICMP packets and observe the results:**

```

# diagnose sniffer packet any icmp6 4
interfaces=[any]
filters=[icmp6]
3.564296 ssl.root in fdff:fff::1 -> 2600:140a:c000:385::1aca: icmp6: echo request seq 1
3.564435 port2 out 2000:172:16:200::9 -> 2600:140a:c000:385::1aca: icmp6: echo request
seq 1

```

```

3.565929 port2 in 2600:140a:c000:385::1aca -> 2000:172:16:200::9: icmp6: echo reply seq
1 [flowlabel 0x1fdfff]
3.565953 ssl.root out 2600:140a:c000:385::1aca -> fdff:fff::1: icmp6: echo reply seq 1
[flowlabel 0x1fdfff]
...

```

## Testing dual stack with web mode

In SSL VPN web mode, users can access both IPv4 and IPv6 bookmarks in the portal. The attribute, `prefer-ipv6-dns` can be enabled to prefer querying IPv6 DNS first, or disabled to prefer querying IPv4.

### To test an IPv4 connection to the web portal and access [www.bing.com](http://www.bing.com) over IPv6:


1. On FortiGate B, prioritize resolving IPv6 addresses:

```

config vpn ssl web portal
  edit "testportal1"
    set prefer-ipv6-dns enable
  next
end

```

2. Log in to the web portal in the browser over the IPv4 address 10.1.100.9.
3. Create a new HTTP/HTTPS bookmark named *bing* for the URL [www.bing.com](http://www.bing.com).
4. Click the *bing* bookmark. The bing page will open over IPv6.

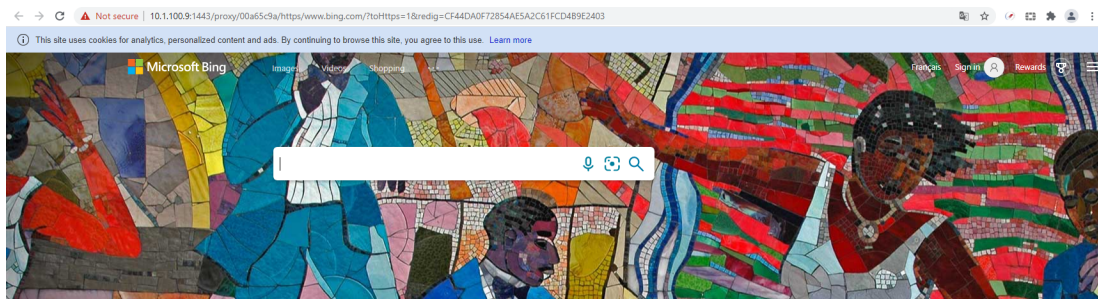

### To test an IPv6 connection to the web portal and access [www.apple.com](http://www.apple.com) over IPv4:

1. On FortiGate B, prioritize resolving IPv4 addresses:


```

config vpn ssl web portal
  edit "testportal1"
    set prefer-ipv6-dns disable
  next
end

```

2. Log in to the web portal in the browser over the IPv6 address [2000:10:1:100::9].
3. Create a new HTTP/HTTPS bookmark named *apple* for the URL [www.apple.com](http://www.apple.com).

- Click the *apple* bookmark. The apple page will open over IPv4.

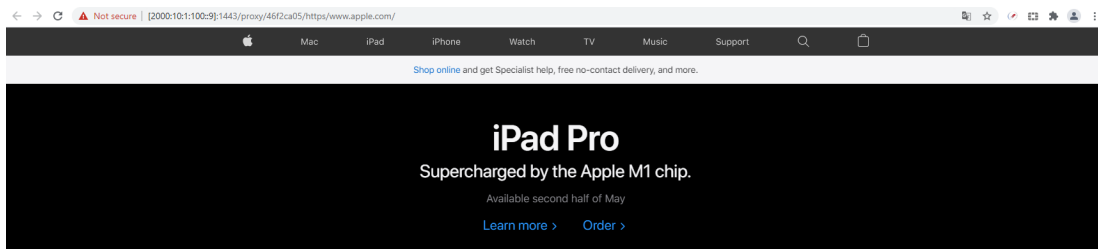


## Disable the clipboard in SSL VPN web mode RDP connections

In web portal profiles, the clipboard can be disabled for SSL VPN web mode RDP/VNC connections. User will not be able to copy and paste content to or from the internal server.


### Example

In this example, two groups of users are using SSL VPN web mode to access internal servers with RDP/VNC. One group is allowed to copy and paste content to and from the internal server using the clipboard, while the other is not.

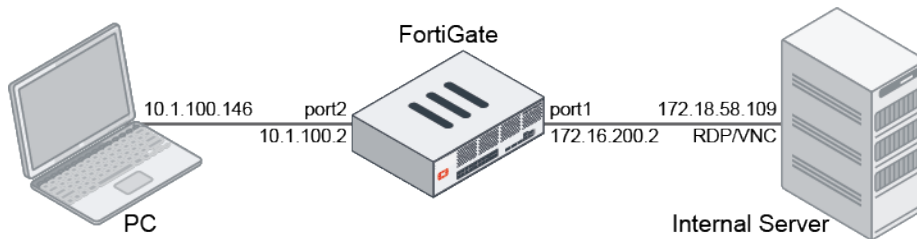

### To configure the SSL VPN portals in the GUI:

- Go to *VPN > SSL-VPN Portals* and click *Create New*.
- Enter a name for the portal, such as *testportal1*.
- Enable *Enable Web Mode* and enable *RDP/VNC clipboard* to allow copying and pasting.
- Configure the remaining settings as needed.

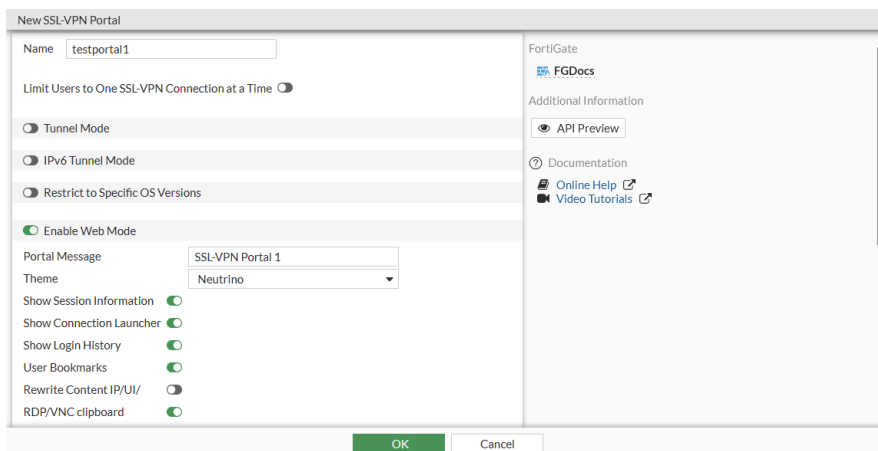

- Click *OK*.

6. Click *Create New* again.
7. Enter a name for the portal, such as *testportal2*.
8. Enable *Enable Web Mode* and disable *RDP/VNC clipboard* to prevent copying and pasting.
9. Configure the remaining settings as needed.

10. Click *OK*.

#### To configure the SSL VPN settings in the GUI:

1. Go to *VPN > SSL-VPN Settings*.
2. Set *Listen on Interface* to port2.
3. In the *Authentication/Portal Mapping* table, add the users to each of the portals:
  - a. Click *Create New*.
  - b. Set *Users/Groups* to *u1* and *Portal* to *testportal1*.
  - c. Click *OK*, then click *Create New* again.
  - d. Set *Users/Groups* to *u2* and *Portal* to *testportal2*.
  - e. Click *OK*.
4. Configure the remaining settings as needed.

| Users/Groups           | Portal        |
|------------------------|---------------|
| u1                     | testportal1   |
| u2                     | testportal2   |
| All Other Users/Groups | tunnel-access |

5. Click *Apply*.

### To configure a firewall policy for SSL VPN in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Set a name for the policy, such as *policy\_to\_sslvpn\_tunnel*.
3. Set *Incoming Interface* to the SSL VPN tunnel interface and *Outgoing Interface* to port1.
4. Set *Source* to the users, *u1* and *u2*, and all addresses.
5. Set *Destination* to all addresses.
6. Set *Schedule* to *always*, *Service* to *All*, and *Action* to *Accept*.
7. Configure the remaining settings as needed.
8. Click *OK*.

### To test the if the users can use the clipboard:

1. On the PC, open a web browser and log in to the web portal as user *u1*.
2. Access the internal server using RDP/VNC.

00:01:06 0B 2.04 kB u1

< Edit Bookmark


HTTP/HTTPS FTP RDP SSH  
SMB/CIFS VNC Telnet  
SFTP

Name: RDP109  
Host: 172.18.58.109  
Port: 3389  
Description:


Use SSL-VPN Credentials ☒  
Username: auto  
Password: .....  
Color Depth Per Pixel: 32bits per pixel.  
Keyboard Layout: English, United States.  
Security: Standard RDP encryption.  
Send Preconnection ID ☒  
Load Balancing Information:  
Restricted Admin Mode ☒

Save Cancel


3. The clipboard is available and you can copy and paste content to and from the remote server.

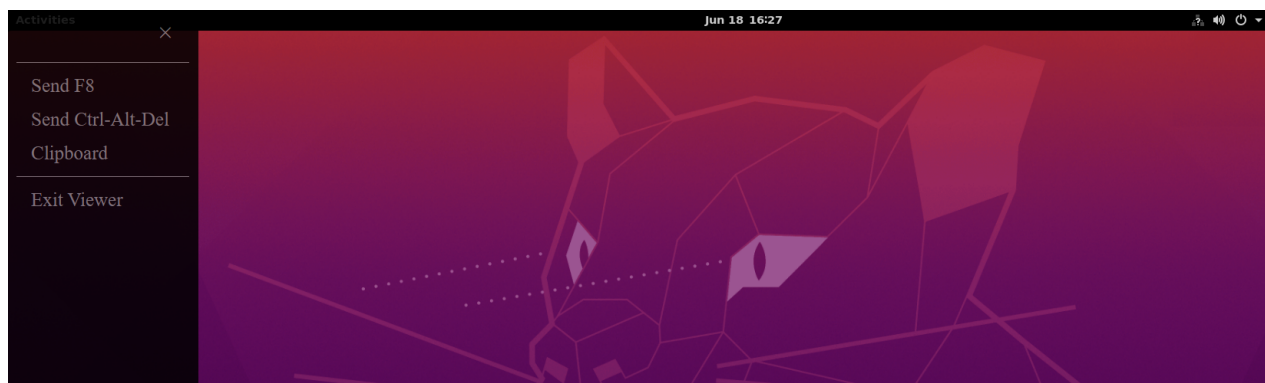



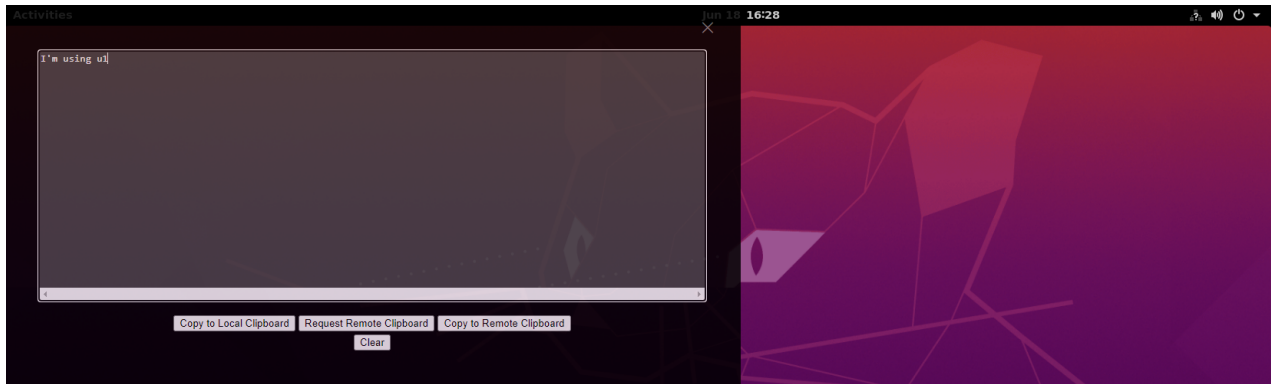

4. Log out of the web portal, then log back in as user *u2* and access the internal server using RDP/VNC. The clipboard is disabled.

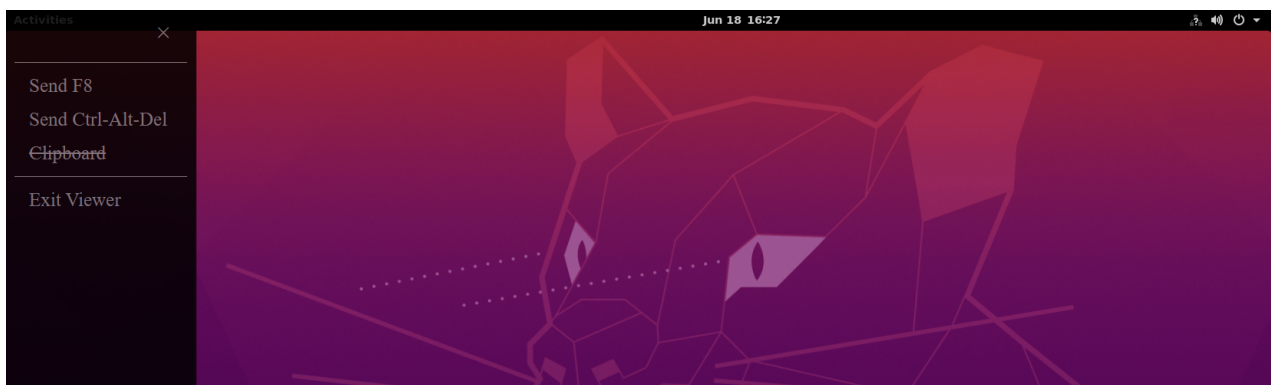

### To configure the SSL-VPN portals and settings in the CLI:

1. Configure the SSL VPN portals:

```
config vpn ssl web portal
    edit "testportal1"
        set web-mode enable
        set clipboard enable
        ...
    next
    edit "testportal2"
        set web-mode enable
        set clipboard disable
        ...
    next
end
```

2. Configure the SSL VPN settings:

```
config vpn ssl settings
    set port 1443
    set source-interface "port2"
    set source-address "all"
    set source-address6 "all"
    set default-portal "tunnel-access"
    config authentication-rule
        edit 1
```

```

        set users "u1"
        set portal "testportal1"
    next
    edit 2
        set users "u2"
        set portal "testportal2"
    next
end
end
end

```

### 3. Configure a firewall policy for SSL VPN:

```

config firewall policy
    edit 1
        set name "policy_to_sslvpn_tunnel"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set nat enable
        set users "u1" "u2"
    next
end

```

### 4. On the PC, open a web browser, log in to the web portal as user *u1*, access the internal server using RDP/VNC, and use the clipboard.

### 5. Check the SSL VPN session monitor:

```

# get vpn ssl monitor
SSL-VPN Login Users:

```

| Index  | User  | Group  | Auth Type  | Timeout | Auth-Timeout | From | HTTP    |
|--------|-------|--------|------------|---------|--------------|------|---------|
| in/out | HTTPS | in/out | Two-factor | Auth    |              |      |         |
| 0      | u1    |        | 1(1)       | N/A     | 10.1.100.146 | 0/0  | 0/364 0 |

```

SSL-VPN sessions:

```

| Index | User | Group | Source IP    | Duration | I/O Bytes | Tunnel/Dest IP    |
|-------|------|-------|--------------|----------|-----------|-------------------|
| 0     | u1   |       | 10.1.100.146 | 64       | 0/700     | RDP 172.18.58.109 |

### 6. On the PC, open a web browser, log in to the web portal as user *u2*, access the internal server using RDP/VNC, and note that the clipboard is not available.

### 7. Check the SSL VPN session monitor:

```

# get vpn ssl monitor
SSL-VPN Login Users:

```

| Index  | User  | Group  | Auth Type  | Timeout | Auth-Timeout | From | HTTP     |
|--------|-------|--------|------------|---------|--------------|------|----------|
| in/out | HTTPS | in/out | Two-factor | Auth    |              |      |          |
| 0      | u2    |        | 1(1)       | N/A     | 10.1.100.146 | 0/0  | 0/2681 0 |

```

SSL-VPN sessions:


```

| Index | User | Group | Source IP    | Duration | I/O Bytes | Tunnel/Dest IP    |
|-------|------|-------|--------------|----------|-----------|-------------------|
| 0     | u2   |       | 10.1.100.146 | 7        | 0/553     | RDP 172.18.58.109 |

## SSL VPN IP address assignments

When a user disconnects from a VPN tunnel, it is not always desirable for the released IP address to be used immediately. In SSL VPN, IP addresses can be assigned from the pool in a round robin fashion, instead of the default first-available address method.

### Example

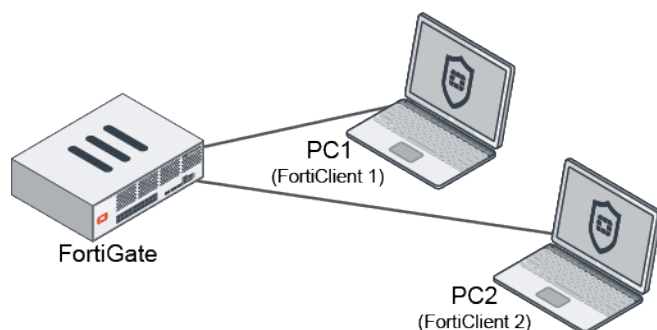

In this example, two PCs connect to the VPN. SSL VPN is configured to use round robin IP address assignment. Dual stack address assignment (both IPv4 and IPv6) is used.

After a tunnel is disconnected, freeing a low IP address, the next client that connects gets the next address in the round robin instead of the lowest address.

### To configure SSL VPN with round robin and dual stack:

#### 1. Create IPv4 and IPv6 address ranges:

```
config firewall address
    edit "sslvpn_ipv4_pool"
        set type iprange
        set start-ip 173.10.1.1
        set end-ip 173.10.1.3
    next
end

config firewall address6
    edit "sslvpn_ipv6_pool"
        set type iprange
        set start-ip 2000::ad0a:101
        set end-ip 2000::ad0a:103
    next
end
```

#### 2. Set the address ranges as IP pools in the SSL VPN settings:

```
config vpn ssl settings
    set tunnel-ip-pools "sslvpn_ipv4_pool"
    set tunnel-ipv6-pools "sslvpn_ipv6_pool"
end
```

When round-robin is used, any address pools defined in the web portal are ignored and the tunnel IPv4 and IPv6 pool addresses in the SSL VPN settings are used. Only one set of IP pool addresses can be applied.

**3. Enable round-robin and dual stack in the SSL VPN settings:**

```
config vpn ssl settings
    set dual-stack-mode enable
    set tunnel-addr-assigned-method round-robin
end
```

By default, the IP pool assignment follows the first available rule.

**4. Create two users and assign them to an SSL VPN policy:**

```
config user local
    edit "u1"
        set type password
        set passwd *****
    next
    edit "u2"
        set type password
        set passwd *****
    next
end

config firewall policy
    edit 1
        set name "sslvpn"
        set srcintf "ssl.vdom1"
        set dstintf "link_11" "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set nat enable
        set users "u1" "u2"
    next
end
```

**To test the results:**

**1. Log in to the SSL VPN on PC1 using user u1 and then check its assigned IP address:**

```
# get vpn ssl monitor
SSL-VPN Login Users:
```

| Index  | User  | Group  | Auth Type  | Timeout | Auth-Timeout | From | HTTP  |
|--------|-------|--------|------------|---------|--------------|------|-------|
| in/out | HTTPS | in/out | Two-factor | Auth    |              |      |       |
| 0      | u1    |        | 1 (1)      | N/A     | 10.1.100.145 | 0/0  | 0/0 0 |

```
SSL-VPN sessions:
```

| Index | User | Group | Source IP    | Duration | I/O Bytes   | Tunnel/Dest IP |
|-------|------|-------|--------------|----------|-------------|----------------|
| 0     | u1   |       | 10.1.100.145 | 13       | 49935/35251 |                |

**173.10.1.1,2000::ad0a:101**

**2. Log in to the SSL VPN on PC1 using user u2 and then check its assigned IP address:**

```
# get vpn ssl monitor
```

```
SSL-VPN Login Users:
```

| Index  | User  | Group  | Auth Type  | Timeout | Auth-Timeout | From | HTTP |
|--------|-------|--------|------------|---------|--------------|------|------|
| in/out | HTTPS | in/out | Two-factor | Auth    |              |      |      |
| 0      | u1    |        | 1 (1)      | N/A     | 10.1.100.145 | 0/0  | 0    |
| 1      | u2    |        | 1 (1)      | N/A     | 10.1.100.254 | 0/0  | 0    |

```
SSL-VPN sessions:
```

| Index                     | User | Group | Source IP    | Duration | I/O Bytes   | Tunnel/Dest IP |
|---------------------------|------|-------|--------------|----------|-------------|----------------|
| 0                         | u1   |       | 10.1.100.145 | 44       | 90126/70405 |                |
| 173.10.1.1,2000::ad0a:101 |      |       |              |          |             |                |
| 1                         | u2   |       | 10.1.100.254 | 10       | 10563/8158  |                |
| 173.10.1.2,2000::ad0a:102 |      |       |              |          |             |                |

3. Log user u1 off of PC1, then log them back in and check that the assigned IP address is not the same as was previously assigned:

```
# get vpn ssl monitor
```

```
SSL-VPN Login Users:
```

| Index  | User  | Group  | Auth Type  | Timeout | Auth-Timeout | From | HTTP |
|--------|-------|--------|------------|---------|--------------|------|------|
| in/out | HTTPS | in/out | Two-factor | Auth    |              |      |      |
| 0      | u1    |        | 1 (1)      | N/A     | 10.1.100.145 | 0/0  | 0    |
| 1      | u2    |        | 1 (1)      | N/A     | 10.1.100.254 | 0/0  | 0    |

```
SSL-VPN sessions:
```


| Index                     | User | Group | Source IP    | Duration | I/O Bytes   | Tunnel/Dest IP |
|---------------------------|------|-------|--------------|----------|-------------|----------------|
| 0                         | u1   |       | 10.1.100.145 | 10       | 50992/41159 |                |
| 173.10.1.3,2000::ad0a:103 |      |       |              |          |             |                |
| 1                         | u2   |       | 10.1.100.254 | 43       | 30374/21860 |                |
| 173.10.1.2,2000::ad0a:102 |      |       |              |          |             |                |

## Using SSL VPN interfaces in zones

SSL VPN interfaces can be used in zones, simplifying firewall policy configuration in some scenarios.


### Example

In this example, a zone is created that includes a physical interface (port4) and an SSL VPN interface. The zone is used as the source interface in a firewall policy. PC1 is used for regular access with a firewall policy, and PC2 uses the SSL VPN for access.

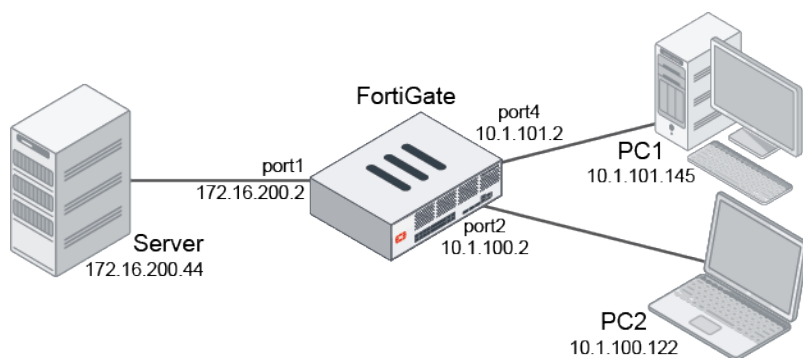

### To create a zone that includes the port4 and ssl.root interfaces in the GUI:


1. Go to *Network > Interfaces* and click *Create New > Zone*.
2. Set the name of the zone, such as *zone\_sslvpn\_and\_port4*.
3. Add *port4* and *ssl.root* to the *Interface members*.

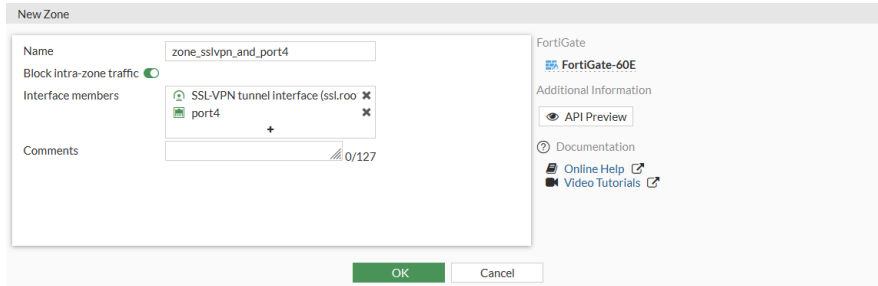

4. Click *OK*.

### To configure SSL VPN settings in the GUI:

1. Go to *VPN > SSL-VPN Settings*.
2. Set *Listen on Interface(s)* to *port2*.
3. Set *Listen on Port* to *1443*.
4. Select a *Server Certificate* (*fgt\_gui\_automation* is used in this example).
5. Configure the remaining settings as required.

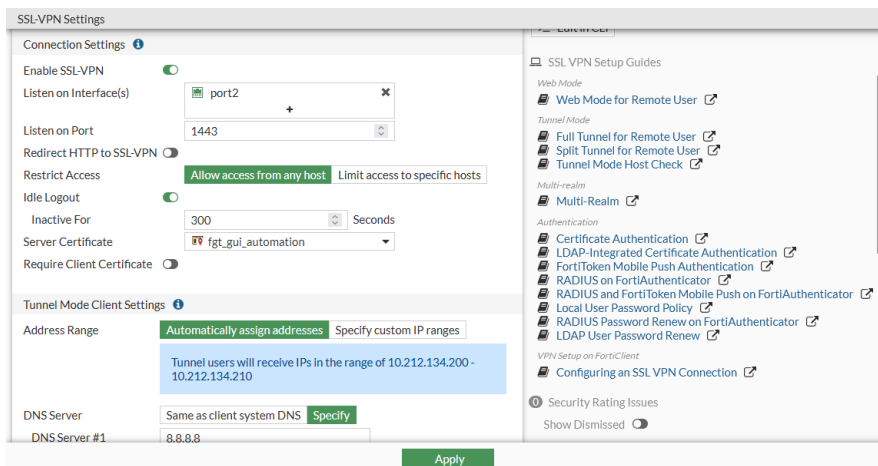

6. Click *Apply*.

### To configure a firewall policy with the zone as the source interface in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Set the policy name, such as *policy\_to\_sslvpn\_tunnel*.
3. Set *Incoming Interface* to *zone\_sslvpn\_and\_port4*.
4. Set *Outgoing Interface* to *port1*.
5. Configure the remaining settings as required.

6. Click OK.

### To configure the zone, SSL VPN, and policy in the CLI:

1. Create a zone that includes the port4 and ssl.root interfaces:

```
config system zone
    edit "zone_sslvpn_and_port4"
        set interface "port4" "ssl.root"
    next
end
```

2. Configure SSL VPN settings with port2 as the source interface:

```
config vpn ssl settings
    set servercert "fgt_gui_automation"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set dns-server1 8.8.8.8
    set dns-server2 8.8.4.4
    set port 1443
    set source-interface "port2"
    set source-address "all"
    set source-address6 "all"
    set default-portal "web-access"
end
```

3. Configure a firewall policy with the zone as the source interface:


```
config firewall policy
    edit 2
        set name "policy_to_sslvpn_tunnel"
        set srcintf "zone_sslvpn_and_port4"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
        set users "u1"
```

next  
end

### To test the configuration:

1. On PC1, open a browser and try to access the server at 172.16.200.44.


You are redirected to the authentication page.

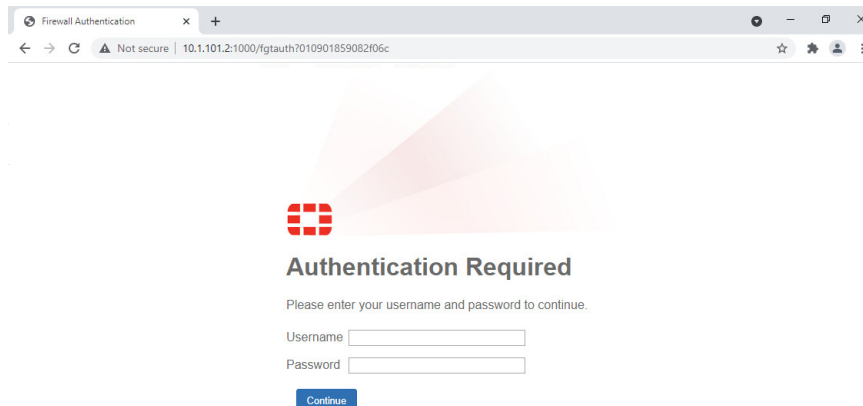

2. Enter the *Username* and *Password*, then click *Continue*.


You are redirected back to the server.

3. On PC2, access the SSL VPN web portal.

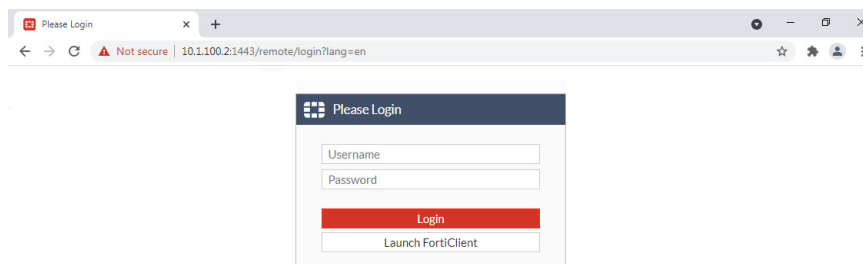

4. Enter the *Username* and *Password*, then click *Login*.

5. Access the server using the bookmark.

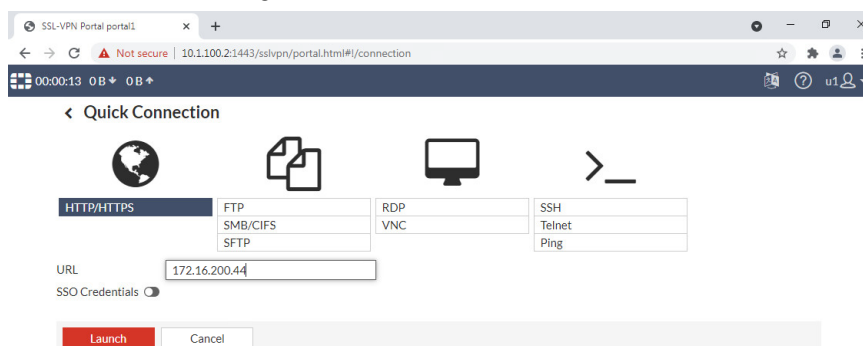

## SSL VPN troubleshooting

The following topics provide information about SSL VPN troubleshooting:



- [Debug commands on page 2051](#)
- [Troubleshooting common issues on page 2051](#)

## Debug commands

### SSL VPN debug command

Use the following diagnose commands to identify SSL VPN issues. These commands enable debugging of SSL VPN with a debug level of -1 for detailed results.

```
diagnose debug application sslvpn -1
diagnose debug enable
```

The CLI displays debug output similar to the following:

```
FGT60C3G10002814 # [282:root]SSL state:before/accept initialization (172.20.120.12)
[282:root]SSL state:SSLv3 read client hello A (172.20.120.12)
[282:root]SSL state:SSLv3 write server hello A (172.20.120.12)
[282:root]SSL state:SSLv3 write change cipher spec A (172.20.120.12)
[282:root]SSL state:SSLv3 write finished B (172.20.120.12)
[282:root]SSL state:SSLv3 flush data (172.20.120.12)
[282:root]SSL state:SSLv3 read finished A:system lib(172.20.120.12)
[282:root]SSL state:SSLv3 read finished A (172.20.120.12)
[282:root]SSL state:SSL negotiation finished successfully (172.20.120.12)
[282:root]SSL established: DHE-RSA-AES256-SHA SSLv3 Kx=DH Au=RSA Enc=AES(256) Mac=SHA1
```

### To disable the debug:

```
diagnose debug disable
diagnose debug reset
```

### Remote user authentication debug command

Use the following diagnose commands to identify remote user authentication issues.

```
diagnose debug application fnbamd -1
diagnose debug reset
```

## Troubleshooting common issues

### To troubleshoot getting no response from the SSL VPN URL:

1. Go to *VPN > SSL-VPN Settings*.
  - a. Confirm that SSL VPN is enabled.
  - b. Check the SSL VPN port assignment.
  - c. Check the *Restrict Access* setting to ensure the host you are connecting from is allowed.
2. Go to *Policy > Firewall Policy*.
  - a. Check that the policy for SSL VPN traffic is configured correctly.
  - b. Check the URL you are attempting to connect to. It should follow this pattern:

```
https://<FortiGate IP>:<Port>
```

- c. Check that you are using the correct port number in the URL. Ensure FortiGate is reachable from the computer.

```
ping <FortiGate IP>
```

- d. Check the browser has *TLS 1.1*, *TLS 1.2*, and *TLS 1.3* enabled.

#### To troubleshoot FortiGate connection issues:

1. Check the Release Notes to ensure that the FortiClient version is compatible with your version of FortiOS.
2. FortiClient uses IE security setting, In IE *Internet options* > *Advanced* > *Security*, check that *Use TLS 1.1* and *Use TLS 1.2* are enabled.
3. Check that SSL VPN *ip-pools* has free IPs to sign out. The default *ip-poolsSSLVPN\_TUNNEL\_ADDR1* has 10 IP addresses.
4. Export and check FortiClient debug logs.
  - a. Go to *File* > *Settings*.
  - b. In the *Logging* section, enable *Export logs*.
  - c. Set the *Log Level* to *Debug* and select *Clear logs*.
  - d. Try to connect to the VPN.
  - e. When you get a connection error, select *Export logs*.

#### To troubleshoot SSL VPN hanging or disconnecting at 98%:

1. A new SSL VPN driver was added to FortiClient 5.6.0 and later to resolve SSL VPN connection issues. If your FortiOS version is compatible, upgrade to use one of these versions.
2. Latency or poor network connectivity can cause the login timeout on the FortiGate. In FortiOS 5.6.0 and later, use the following commands to allow a user to increase the SSL VPN login timeout setting.

```
config vpn ssl settings
  set login-timeout 180 (default is 30)
  set dtls-hello-timeout 60 (default is 10)
end
```

#### To troubleshoot tunnel mode connections shutting down after a few seconds:

This might occur if there are multiple interfaces connected to the Internet, for example, SD-WAN. This can cause the session to become “dirty”. To allow multiple interfaces to connect, use the following CLI commands.

If you are using a FortiOS 6.0.1 or later:

```
config system interface
  edit <name>
    set preserve-session-route enable
  next
end
```

If you are using a FortiOS 6.0.0 or earlier:

```
config vpn ssl settings
  set route-source-interface enable
end
```

#### To troubleshoot users being assigned to the wrong IP range:

1. Go to *VPN* > *SSL-VPN Portals* and *VPN* > *SSL-VPN Settings* and ensure the same *IP Pool* is used in both places. Using the same *IP Pool* prevents conflicts. If there is a conflict, the portal settings are used.

**To troubleshoot slow SSL VPN throughput:**

Many factors can contribute to slow throughput.

This recommendation tries to improve throughput by using the FortiOS Datagram Transport Layer Security (DTLS) tunnel option, available in FortiOS 5.4 and above.

DTLS allows SSL VPN to encrypt traffic using TLS and uses UDP as the transport layer instead of TCP. This avoids retransmission problems that can occur with TCP-in-TCP.

FortiClient 5.4.0 to 5.4.3 uses DTLS by default. FortiClient 5.4.4 and later uses normal TLS, regardless of the DTLS setting on the FortiGate.

To use DTLS with FortiClient:

1. Go to *File > Settings* and enable *Preferred DTLS Tunnel*.

To enable DTLS tunnel on FortiGate, use the following CLI commands:

```
config vpn ssl settings
    set dtls-tunnel enable
end
```

# User & Authentication

In *User & Authentication*, you can control network access for different users and devices in your network. FortiGate authentication controls system access by user group. By assigning individual users to the appropriate user groups you can control each user's access to network resources. You can define local users and peer users on the FortiGate unit. You can also define user accounts on remote authentication servers and connect them to FortiOS.



When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

You can control network access for different device types in your network by doing the following:

- Identifying and monitoring the types of devices connecting to your network
- Using MAC address based access control to allow or deny individual devices
- Using Telemetry data received from FortiClient endpoints to construct a policy to deny access to endpoints with known vulnerabilities or to quarantine compromised endpoints

The following sections provide information about users and devices:

- [Endpoint control and compliance on page 2055](#)
- [User definition and groups on page 2063](#)
- [LDAP servers on page 2076](#)
- [RADIUS servers on page 2092](#)
- [TACACS+ servers on page 2124](#)
- [SAML on page 2126](#)
- [Authentication settings on page 2153](#)
- [FortiTokens on page 2155](#)
- [PKI on page 2177](#)
- [Configuring the maximum log in attempts and lockout period on page 2177](#)
- [Configuring firewall authentication on page 2185](#)
- [FSSO on page 2191](#)
- [Authentication policy extensions on page 2201](#)
- [Configuring the FortiGate to act as an 802.1X supplicant on page 2202](#)
- [Include usernames in logs on page 2204](#)

## Endpoint control and compliance

The section contains the following topics:

- [Per-policy disclaimer messages on page 2055](#)
- [Compliance on page 2057](#)
- [FortiGuard distribution of updated Apple certificates on page 2059](#)
- [Integrate user information from EMS and Exchange connectors in the user store on page 2060](#)

### Per-policy disclaimer messages

FortiOS supports a customizable captive portal to direct users to install or enable required software.

Per-policy custom disclaimers in each VDOM are supported. For example, you may want to configure three firewall policies, each of which matches traffic from endpoints with different FortiClient statuses:

| Endpoint status                                                                        | FortiOS behavior                                                                                                     |
|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Endpoint does not have FortiClient installed.                                          | Traffic matches a firewall policy that displays an in-browser warning to install FortiClient from the provided link. |
| Endpoint has FortiClient installed, registered to EMS, and connected to the FortiGate. | Traffic matches a dynamic firewall policy which allows the endpoint to reach its destination via this policy.        |
| Endpoint is deregistered from EMS and disconnected from the FortiGate.                 | Traffic matches another dynamic firewall policy that displays warning to register FortiClient to EMS.                |

The [replacement message groups](#) and policy disclaimer settings must be enabled.

#### To enable per-policy disclaimer messages in the GUI:

1. Go to *System > Feature Visibility*.
2. Enable *Replacement Message Groups* and *Policy Disclaimer*.
3. Click *Apply*.

#### To enable per-policy disclaimer messages in the CLI:


```
config system global
    set gui-replacement-message-groups enable
end

config system settings
    set gui-policy-disclaimer enable
end
```

#### To configure per-policy disclaimers in the GUI:

1. Ensure the per-policy disclaimer messages option is enabled.
2. Go to *Policy & Objects > Firewall Policy*.
3. Edit the policy that applies when an endpoint does not have FortiClient installed.
4. Under *Disclaimer Options*, enable *Display Disclaimer* and *Customize Messages*.

5. Add a replacement message group:
  - a. Select an existing replacement message group from the dropdown and click *Edit Disclaimer Message*.
  - b. Click *Create*, enter a name, and click *OK*. Select the replacement message group and click *Edit Disclaimer Message*.

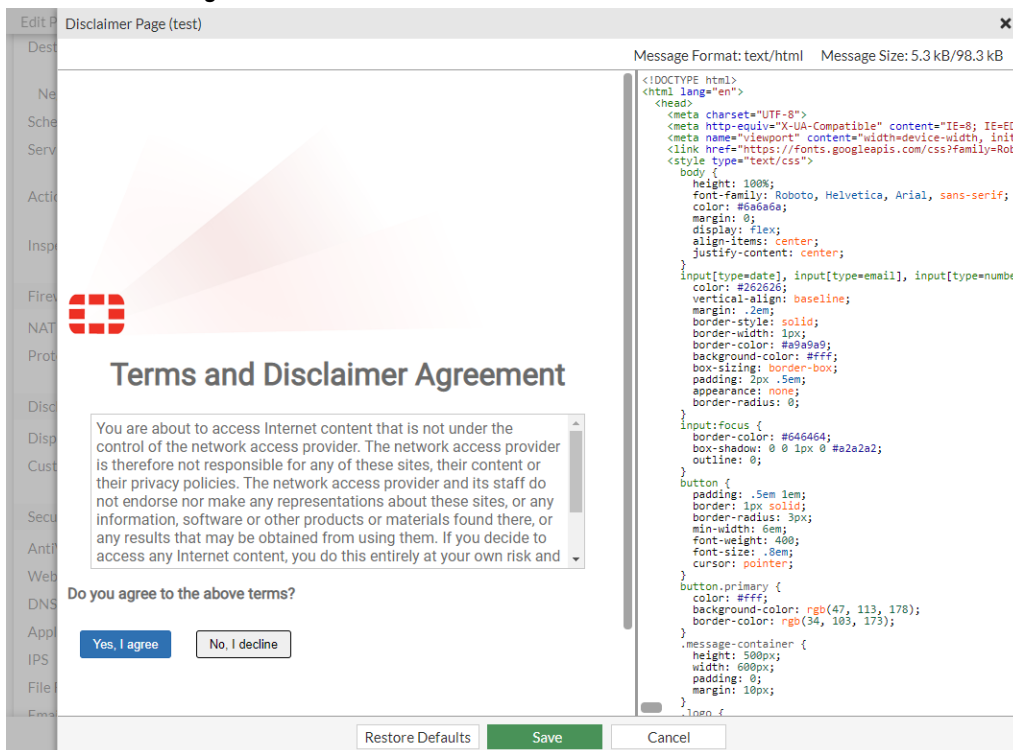

6. Edit the message to warn users to install FortiClient, and provide the FortiClient download link.
7. Click **Save**.
8. Repeat the above steps for each policy that requires a custom disclaimer message.

### To configure per-policy disclaimers in the CLI:

```
config firewall policy
  edit 1
    set name "111"
    set srcintf "port12"
    set dstintf "port11"
    set srcaddr "all"
    set dstaddr "pc155_address"
    set action accept
    set schedule "always"
    set service "ALL"
    set wso disable
    set groups "ems_03_group"
    set disclaimer enable
    set replacemsg-override-group "test"
    set nat enable
  next
  edit 4
    set name "44"
    set srcintf "port12"
```

```
set dstintf "port11"
set srcaddr "all"
set dstaddr "pc5-address"
set action accept
set schedule "always"
set service "ALL"
set wso disable
set groups "ems_03_group"
set disclaimer enable
set replacemsg-override-group "test2"
set nat enable
next
edit 6
set name "66"
set srcintf "port12"
set dstintf "port11"
set srcaddr "all"
set dstaddr "all"
set status disable
set schedule "always"
set service "ALL"
set logtraffic all
set fsso disable
set block-notification enable
set replacemsg-override-group "endpoint-override"
next
end
```

## Compliance

The following topics provide information about compliance in FortiOS.

- [FortiGate VM unique certificate on page 2057](#)
- [Running a file system check automatically on page 2058](#)

### FortiGate VM unique certificate

To safeguard against certificate compromise, FortiGate VM and FortiAnalyzer VM use the same deployment model as FortiManager VM where the license file contains a unique certificate tied to the serial number of the virtual device.

A hardware appliance usually comes with a BIOS certificate with a unique serial number that identifies the hardware appliance. This built-in BIOS certificate is different from a firmware certificate. A firmware certificate is distributed in all appliances with the same firmware version.

Using a BIOS certificate with a built-in serial number provides a high trust level for the other side in X.509 authentication.

Since a VM appliance has no BIOS certificate, a signed VM license can provide an equivalent of a BIOS certificate. The VM license assigns a serial number in the BIOS equivalent certificate. This gives the certificate an abstract access ability, which is similar to a BIOS certificate with the same high trust level.



This feature is only supported in new, registered VM licenses.

---

## Sample configurations

Depending on the firmware version and VM license, the common name (CN) on the certificate will be configured differently.

| License | Firmware       |                    |                    |                    |
|---------|----------------|--------------------|--------------------|--------------------|
|         | 6.0            | 6.2                | 6.4                | 7.0                |
| 6.0     | CN = FortiGate | CN = FortiGate     | CN = FortiGate     | CN = FortiGate     |
| 6.2     | CN = FortiGate | CN = serial number | CN = serial number | CN = serial number |
| 6.4     | CN = FortiGate | CN = serial number | CN = serial number | CN = serial number |
| 7.0     | CN = FortiGate | CN = serial number | CN = serial number | CN = serial number |

### To view validated certificates:

1. Go to *System > Certificates*.
2. Double-click on a VM certificate. There are two VM certificates:
  - *Fortinet\_Factory*
  - *Fortinet\_Factory\_Backup*
 The *Certificate Detail Information* window displays.

## Running a file system check automatically

There is an option in FortiOS to enable automatic file system checks if the FortiGate shuts down ungracefully.

By default, the automatic file system check is disabled. When an administrator logs in after an ungraceful shutdown, a warning message appears advising them to manually run a file system check. A warning also appears in the CLI:

```
WARNING: File System Check Recommended! Unsafe reboot may have caused inconsistency in disk
drive.
It is strongly recommended that you check file system consistency before proceeding.
Please run 'execute disk scan 17'
Note: The device will reboot and scan during startup. This may take up to an hour
```

### Enabling automatic file system checks


You can enable automatic file system checks in both the GUI and CLI.

#### To enable automatic file system checks in the GUI:

1. Go to *System > Settings*.
2. In the *Start Up Settings* section, enable *Auto file system check*.



### 3. Click *Apply*.

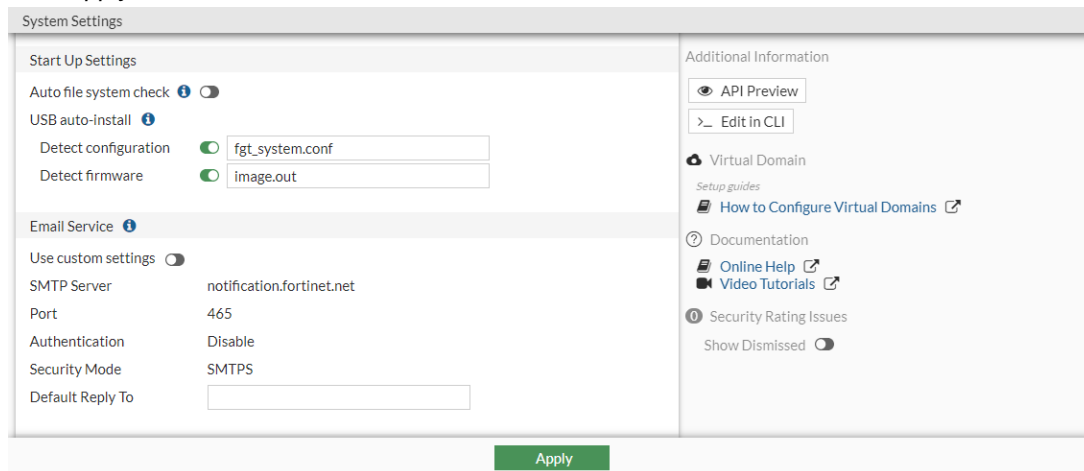

#### To enable automatic file system checks using the CLI:

```
config system global
    set autorun-log-fsck enable
end
```

## FortiGuard distribution of updated Apple certificates

Push notifications for iPhone (for the purpose of two-factor authentication) require a TLS server certificate to authenticate to Apple. As this certificate is only valid for one year, a service extension allows FortiGuard to distribute updated TLS server certificates to FortiGate when needed.

FortiGuard update service updates local Apple push notification TLS server certificates when the local certificate is expired. FortiGuard update service also reinstalls certificates when the certificates are lost.

You can verify that the feature is working on the FortiGate by using the CLI shell.

#### To verify certificate updates:

##### 1. Using FortiOS CLI shell, verify that all certificates are installed:

```
/data/etc/apns # ls -al
drwxr-xr-x  2 0      0      Tue Jan 15 08:42:39 2019    1024 .
drwxr-xr-x 12 0      0      Tue Jan 15 08:45:00 2019    2048 ..
-rw-r--r--  1 0      0      Sat Jan 12 00:06:30 2019    2377 apn-dev-cert.pem
-rw-r--r--  1 0      0      Sat Jan 12 00:06:30 2019    1859 apn-dev-key.pem
-rw-r--r--  1 0      0      Sat Jan 12 00:06:30 2019    8964 apn-dis-cert.pem
-rw-r--r--  1 0      0      Sat Jan 12 00:06:30 2019    4482 apn-dis-key.pem
```

##### 2. Rename all current Apple certificates.

Apple push notification no longer works after you rename the certificates.

```
/data/etc/apns # mv apn-dis-cert.pem apn-dis-cert.pem.save
/data/etc/apns # mv apn-dev-key.pem apn-dev-key.pem.save
/data/etc/apns # mv apn-dev-cert.pem apn-dev-cert.pem.save
/data/etc/apns # mv apn-dis-key.pem apn-dis-key.pem.save
/data/etc/apns # ls -al
```

```

drwxr-xr-x  2 0 0  Tue Jan 15 08:51:15 2019  1024 .
drwxr-xr-x 12 0 0  Tue Jan 15 08:45:00 2019  2048 ..
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  2377 apn-dev-cert.pem.save
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  1859 apn-dev-key.pem.save
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  8964 apn-dis-cert.pem.save
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  4482 apn-dis-key.pem.save

```

### 3. Run a FortiGuard update, and verify that all certificates are installed again:

```

/data/etc/apns # ls -al
drwxr-xr-x  2 0 0  Tue Jan 15 08:56:20 2019  1024 .
drwxr-xr-x 12 0 0  Tue Jan 15 08:56:15 2019  2048 ..
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  2377 apn-dev-cert.pem.save
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  1859 apn-dev-key.pem.save
-rw-r--r--  1 0 0  Tue Jan 15 08:56:20 2019  2167 apn-dis-cert.pem <-- downloaded
from FortiGuard
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  8964 apn-dis-cert.pem.save
-rw-r--r--  1 0 0  Tue Jan 15 08:56:20 2019  1704 apn-dis-key.pem <-- downloaded
from FortiGuard
-rw-r--r--  1 0 0  Sat Jan 12 00:06:30 2019  4482 apn-dis-key.pem.save
-rw-r--r--  1 0 0  Tue Jan 15 08:56:20 2019    41 apn-version.dat <-- downloaded
from FortiGuard
/data/etc/apns #


```

## Integrate user information from EMS and Exchange connectors in the user store

When a FortiClient endpoint is managed by EMS, logged in user and domain information is shared with FortiOS through the EMS connector. This information can be joined with the Exchange connector to produce more complete user information in the user store.

The `diagnose user-device-store device memory list` command displays detailed device information.

## Sample topology

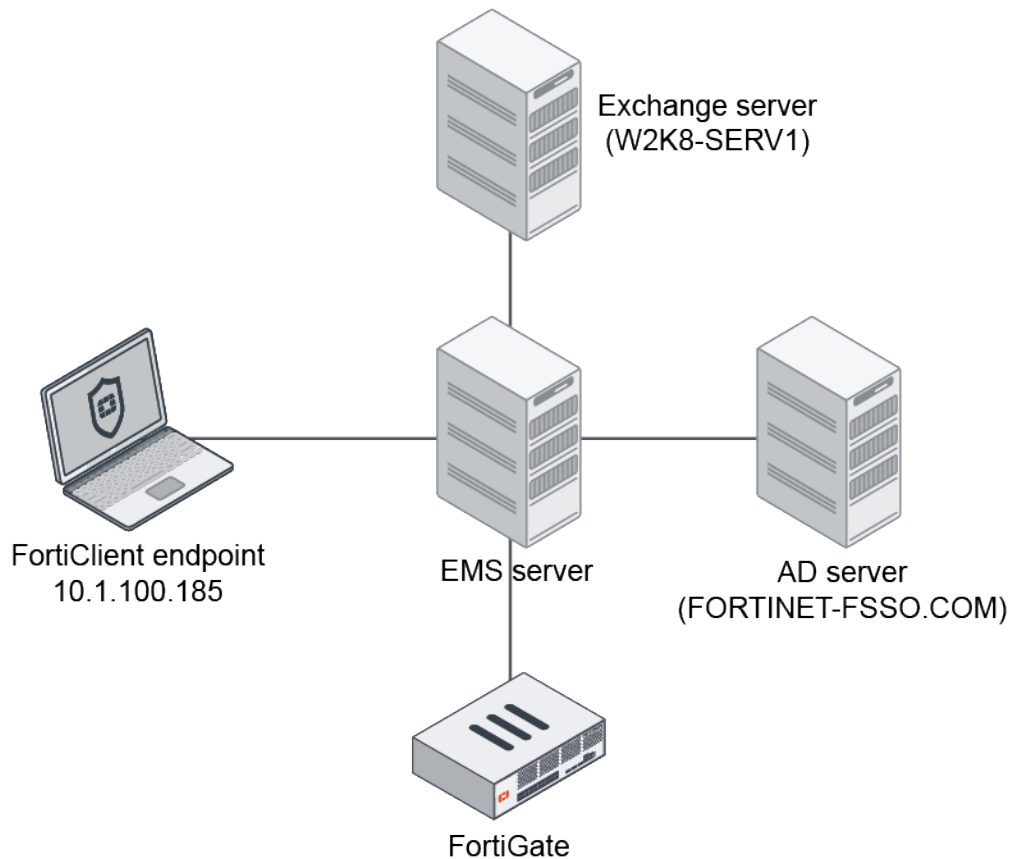

In this example, the FortiClient PC user (test1) logs on to the AD domain (FORTINET-FSSO.COM), which is also the same domain as the Exchange server. The user information is pushed to the EMS server that the user is registered to. The FortiGate synchronizes the information from EMS, and at the same time looks up the user on the Exchange server under the Exchange connector. If the user exists on the Exchange server, additional information is fetched. These details are combined in the user store, which is visible in the *FortiClient* widget in the *Status* dashboard.

### To configure the Exchange server:

```
config user exchange
  edit "exchange-140"
    set server-name "W2K8-SERV1"
    set domain-name "FORTINET-FSSO.COM"
    set username "Administrator"
    set password *****
  next
end
```

### To configure the EMS server:

```
config endpoint-control fctems
  edit "ems133"
    set server "172.18.62.12"
    set certificate-fingerprint "4F:A6:76:E2:00:4F:A6:76:E2:00:4F:A6:76:E2:00:E0"
```

```
    next
end
```

**To view the user information in the GUI:**

1. Go to *Dashboard > Status*.
2. In the *FortiClient* widget, hover over a device or user name to view the information.

**To view the user information in the CLI:**

```
# diagnose user-device-store device memory list
...
Record #13:
    device_info
        'ipv4_address' = '10.1.100.185'
        'mac' = '00:0c:29:11:5b:6b'
        'hardware_vendor' = 'VMware'
        'vdom' = 'root'
        'os_name' = 'Microsoft'
        'os_version' = 'Windows 7 Professional Edition, 32-bit Service Pack 1
(build 7601)'
        'hostname' = 'win7-5'
        'unauth_user' = 'Administrator'
        'last_seen' = '1611356490'
        'host_src' = 'forticlient'
        'user_info_src' = 'forticlient'
        'is_forticlient_endpoint' = 'true'
        'unjoined_forticlient_endpoint' = 'false'
        'is_forticlient_unauth_user' = 'true'
        'avatar_source' = 'OS'
        'domain' = 'Fortinet-FSSO.COM'
        'forticlient_id' = '*****'
        'forticlient_username' = 'Administrator'
        'forticlient_version' = '6.4.2'
        'on_net' = 'true'
        'quarantined_on_forticlient' = 'false'
        'vuln_count' = '0'
        'vuln_count_critical' = '0'
        'vuln_count_high' = '0'
        'vuln_count_info' = '0'
        'vuln_count_low' = '0'
        'vuln_count_medium' = '0'
        'is_online' = 'true'
    interface_info
        'ipv4_address' = '10.1.100.185'
        'mac' = '00:0c:29:11:5b:6b'
        'master_mac' = '00:0c:29:11:5b:6b'
        'detected_interface' = 'port10'
        'last_seen' = '1611356490'
        'is_master_device' = 'true'
        'is_detected_interface_role_wan' = 'false'
        'detected_interface_fortitelemetry' = 'true'
        'forticlient_gateway_interface' = 'port10'
        'on_net' = 'true'
        'is_online' = 'true'
```

## User definition and groups

FortiGate authentication controls system access by user groups. By assigning individual users to the appropriate user groups, this controls each user's access to network resources. The user groups members are user accounts, of which there are several types. Local and peer users are defined in FortiOS. User accounts can also be defined on remote authentication servers.

This section contains information about configuring the following:

- [Users on page 2063](#)
- [User groups on page 2065](#)
- [Retail environment guest access on page 2072](#)
- [User and user group timeouts on page 2075](#)

For information about configuring authentication servers, see the [LDAP servers on page 2076](#), [RADIUS servers on page 2092](#), [TACACS+ servers on page 2124](#), and [SAML on page 2126](#) sections.

### Users

A user is a user account consisting of a username, password, and sometimes other information, that is configured in FortiOS or on an external authentication server. There are several types of user accounts with slightly different methods of authentication.

| User type   | Authentication method                                                                                                                                                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local       | The username and password must match a user account stored in FortiOS. Authentication is done by a firewall policy.                                                                                                                                                                                                                                                   |
| Remote      | Remote users consist of usernames defined in FortiOS that are authenticated by a remote server. For example, RADIUS, TACACS+, LDAP, or FortiNAC. The server must be configured in FortiOS before creating a user.                                                                                                                                                     |
| FSSO        | Users on a Microsoft Windows, Citrix, or Novell network can use their network authentication to access resources through the FortiGate. Access is controlled through FSSO user groups, which contain Windows, Citrix, or Novell user groups as members. The FSSO agent must be configured in FortiOS before creating a user (see <a href="#">FSSO on page 2191</a> ). |
| PKI or peer | A PKI or peer user is a digital certificate holder that authenticates using a client certificate. No password is required, unless two-factor authentication is enabled.<br><br>In the GUI, the <i>User &amp; Authentication &gt; PKI</i> menu is only available after a PKI user is configured in the CLI (see <a href="#">Configuring a PKI user on page 2177</a> ). |

Some user types have an option to enable multi-factor authentication using FortiToken or FortiToken Cloud. In some cases, the user must be defined first, and then can be edited to add multi-factor authentication. See [FortiTokens on page 2155](#) for more information.

#### To create a user:

1. Go to User Authentication > User Definition and click Create New. The *Users/Groups Creation Wizard* appears.
2. Select a *User Type* and click *Next*.

### 3. The remaining wizard steps depend on the user type:

- **Local User:**

- Enter a *Username* and *Password*, then click *Next*.
- Optionally, enable *Two-factor Authentication* and configure the following:

|                            |                                                       |
|----------------------------|-------------------------------------------------------|
| <b>Authentication Type</b> | Select <i>FortiToken Cloud</i> or <i>FortiToken</i> . |
| <b>Token</b>               | If using FortiToken to authenticate, select a token.  |
| <b>Email Address</b>       | Enter an email address.                               |
| <b>SMS</b>                 | Enable to send an SMS message to activate the token.  |
| <b>Country Dial Code</b>   | Select the country code.                              |
| <b>Phone Number</b>        | Enter a phone number.                                 |

- Click *Next*, then click *Submit*.

- **Remote LDAP User:**

- Select an *LDAP Server*, then click *Next*.
- Select the users to add from the LDAP server. If the user ID matches an existing configured username, it cannot be added.

Users/Groups Creation Wizard

✓ User Type > ✓ LDAP Server > ③ Remote Users

Custom LDAP filter: (objectClass=\*) Apply

Hide unselectable entries: ☐

dc=lab,dc=local

Add All Results Search

| ID            | Name            |
|---------------|-----------------|
| Administrator | Administrator   |
| amartin       | Angel Martin    |
| ckei          | Cameron Keith   |
| dshrute       | Dwight Shrute   |
| Guest         | Guest           |
| jhalpert      | Jim Halpert     |
| kkapoor       | Kelly Kapoor    |
| kmalone       | Kevin Malone    |
| krbtgt        | krbtgt          |
| omartinez     | Oscar Martinez  |
| shudson       | Stanley Hudson  |
| tfhenderson   | Toby Flenderson |
| tpacker       | Todd Packer     |

< Back Submit Cancel

FortiExplorer  
Manage your devices on iOS or Android. iOS users can also manage FortiToken Cloud subscriptions.  
[Get the app](#)

Documentation  
[Online Help](#)  
[Video Tutorials](#)

- Click *Submit*.

- **Remote RADIUS User and Remote TACACS+ User:**

- Enter a *Username* and select the server.
- Click *Next*.
- Optionally, enable *Two-factor Authentication* and configure the settings as needed.
- Click *Next*, then click *Submit*.

- *FSSO*:
  - i. Select an *FSSO Agent*, click the + to add *AD Groups*, then click *Next*.
  - ii. Select an FSSO group to add the *AD Groups* to. If an FSSO group already exists (see [Configuring FSSO user groups on page 2069](#)), click *Choose Existing* and select the group. Otherwise, click *Create New*, enter a name, and click *OK*.
  - iii. Click *Submit*.

## User groups

A user group is a list of user identities. A user identity can be a:

- Local user account (username/password) stored on the FortiGate
- Remote user account (password stored on a RADIUS, LDAP, or TACACS+ server)
- PKI user account with a digital client authentication certificate stored on the FortiGate
- RADIUS, LDAP, or TACACS+ server, optionally specifying particular user groups on that server
- User group defined on an FSSO server

User groups provide the ability to combine users that require the same permissions so they can be referenced at once, which enables consistency in configurations. User groups allow for remote servers to be referenced by leveraging the pre-existing user accounts, instead of redefining them on the FortiGate.

For example, when a new employee joins a department, they can be added to their respective group, whether in the remote authentication server or local group, and be subject to the same access as their colleagues in the same department. In FortiOS, user groups can be used when configuring firewall policies, traffic shaping policies, proxy policies, SSL VPN portals, IPsec VPN XAUTH, ZTNA, wireless networks (SSIDs), web filtering profiles, identity-based routing, and system administrators with remote authentication.

In most cases, the FortiGate authenticates users by requesting their username and password. The FortiGate checks local user accounts first. If a match is not found, the FortiGate checks the RADIUS, LDAP, or TACACS+ servers that belong to the user group. Authentication succeeds when a matching username and password are found. If the user belongs to multiple groups on a server, those groups will also be matched.

Four types of user groups can be configured:

- [Firewall](#)
- [FSSO](#)
- [RSSO](#)
- [Guest](#)

## Configuring firewall user groups


Firewall user groups are used locally as part of authentication. For example, when a firewall policy allows access only to specified user groups, users must authenticate before matching the policy. If the user authenticates successfully and is a member of one of the permitted groups, the policy is applied to the user. A firewall user group may contain local users (defined locally or authenticated remotely), PKI users, or authentication servers.

There are two options to add users in a firewall group configuration: members or remote groups. Members are the individual users who have been defined in FortiOS. Remote groups are remote server that users may authenticate to. One or more user groups can be specified within that server to limit which users can authenticate to the firewall user group. Both options may be used at the same time. The FortiGate attempts to authenticate users in the members list first, and then the remote groups if the initial authentication does not succeed.

When adding remote groups to user groups, FortiTokens cannot be applied to the users. To use remote authentication servers and FortiToken for multi-factor authentication, a remote user type must be created and then added as a user group member.

The following user group configuration examples have local members and a remote authentication server user group. There are two LDAP users, but the principle applies to other remote authentication server types.

Both LDAP users (shudson and tflenderson) belong to the primary group, Domain Users. The user, shudson belongs to the Sales group; tflenderson belongs to the HR group.

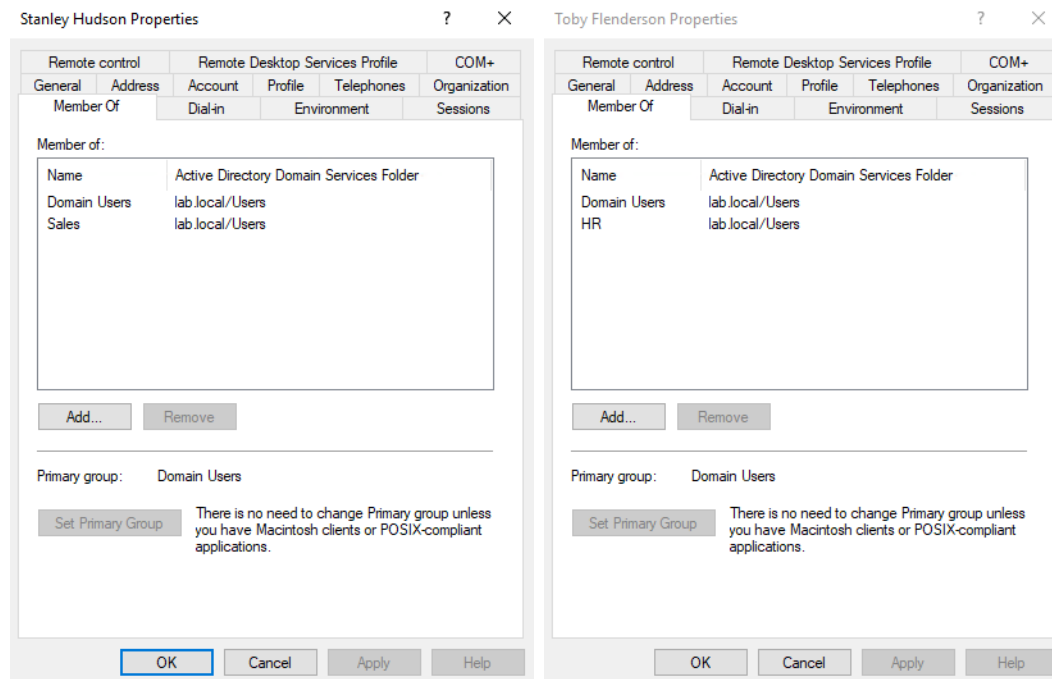

### Example 1: Adding multiple remote groups to a user group


In this example, two remote groups (HR and Sales) are added to a firewall group called SSL\_VPN\_ACCESS.

#### To add multiple remote groups to a user group:

1. Go to *User & Authentication > User Groups* and click *Create New*. *Firewall* is selected as the default *Type*.
2. Enter the group name, *SSL\_VPN\_ACCESS*.
3. In the *Remote Groups Section*, click *Add*.
4. Set *Remote Server* to the LDAP server (*ldap*).
5. In the *Groups* table, select *Sales*, then right-click and select *Add Selected*.




6. Select **HR**, then right-click and select **Add Selected**.

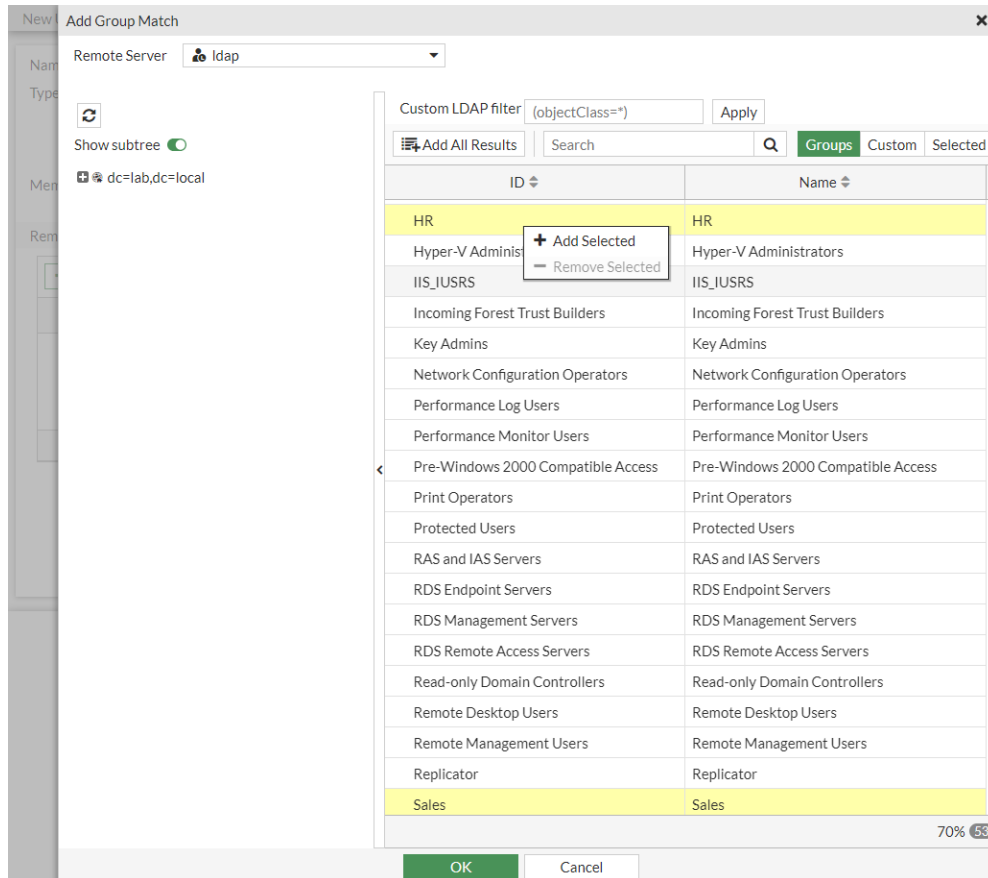

7. Click **OK**.

Both user group paths are specified under the **Group Name**.

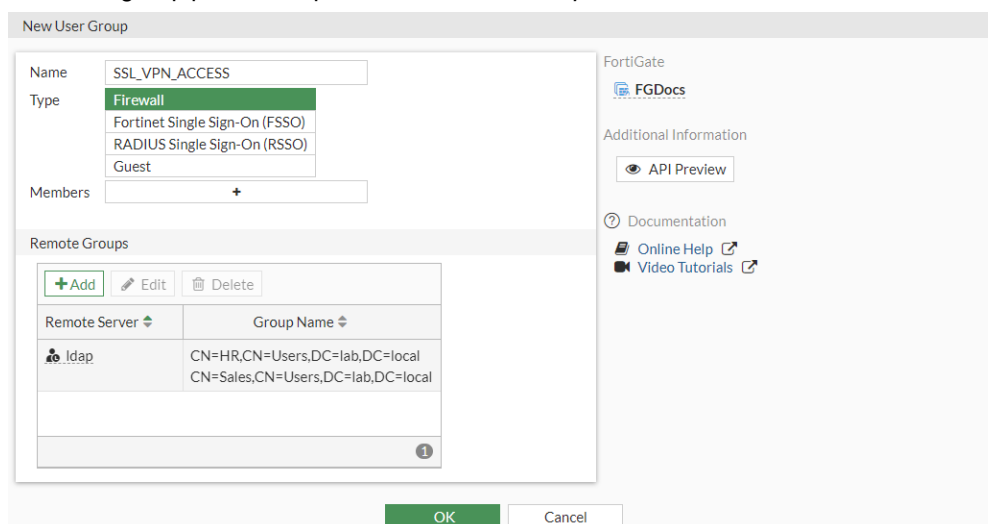

8. Click **OK**.

In this configuration, shudson and tflenderson would be able to authenticate to this group.

## Example 2: combining remote groups and local users in a user group

In this example, the firewall group (SSL\_VPN\_ACCESS) is configured to contain the HR remote group and a local LDAP user (shudson) with multi-factor authentication.

| <a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Clone</a> <a href="#">Delete</a> <input type="text" value="Search"/> |      |                           |        |         |      |
|------------------------------------------------------------------------------------------------------------------------------------|------|---------------------------|--------|---------|------|
| Name                                                                                                                               | Type | Two-factor Authentication | Groups | Status  | Ref. |
| shudson                                                                                                                            | LDAP | FTKMOB                    |        | Enabled | 0    |
| Administrator                                                                                                                      | LDAP |                           |        | Enabled | 0    |
| Guest                                                                                                                              | LDAP |                           |        | Enabled | 1    |
| Mandrews                                                                                                                           | LDAP |                           |        | Enabled | 0    |

### To combine remote groups and local users in a user group:

1. Go to *User & Authentication > User Groups* and click *Create New*. *Firewall* is selected as the default *Type*.
2. Enter the group name, *SSL\_VPN\_ACCESS*.
3. In the *Remote Groups* Section, click *Add*.
4. Set *Remote Server* to the LDAP server (*ldap*).
5. In the *Groups* table, select *HR*, then right-click and select *Add Selected*.
6. Click *OK*.
7. In the *Members* field, click the + and add *shudson*.

8. Click *OK*.  
In this configuration, shudson, tflenderson, and any members of the HR LDAP group would be able to authenticate to the user group. Other users in the Sales group are not allowed.

## Example 3: adding a user as a member and their group as a remote groups

This example uses a combination of the previous examples. The HR and Sales groups are added as remote groups similar to example 1. The local LDAP user, shudson (using a FortiToken), from example 2 is added as a group member.



This example is for demonstration only. It may cause unwanted results, so this configuration is not advised.

### To add a user as a member and their group as a remote groups:

1. Refer to [example 1](#) to configure the two remote groups.
2. In the *Members* field, click the + and add *shudson*.

3. Click *OK*.

One unwanted scenario from this configuration is that a user might be able to bypass multi-factor authentication on LDAP by changing the username case (see the related [PSIRT](#) advisory). By default, the username of the remote LDAP user is case sensitive. This means the username has to match what is configured (*shudson*). If a user types *sHudson*, for example, this will not match the user *shudson*, so it falls through to remote group authentication. It will match the Sales group in this example. To prevent this, disable username case sensitivity (see [SSL VPN for remote users with MFA and user sensitivity on page 1936](#) for more details).

### To disable case sensitivity on the remote user:

```
config user local
  edit <name>
    set type ldap
    set two-factor fortitoken
    set fortitoken "FTKMOBxxxxxxxxxxx"
    set email-to <email_address>
    set username-sensitivity disable
    set ldap-server <server_name>
  next
end
```

There is another unwanted scenario from this configuration than can occur to bypass multi-factor authentication. The LDAP server, *ldap*, has a user named *shudson*. Another LDAP server, *ldap2*, also has a user named *shudson*, but with a different password. If the *ldap* and *ldap2* servers are added to the user group in addition to the remote *shudson* user, if a user tries to log in using *shudson* and the password on the *ldap2* server, they would be able to bypass multi-factor authentication.

## Configuring FSSO user groups

FSSO user groups contain only Windows, Citrix, and Novell network users. Information about these user groups and their member logon activities are provided by the corresponding FSSO connector. See the [FSSO on page 2191](#) section for more information.

## Configuring RSSO user groups

RADIUS single sign-on user groups leverage a RADIUS server to authenticate connecting users. This requires users to log in to their computer using their RADIUS account. The FortiGate does not interact with the remote RADIUS server. It only monitors RADIUS accounting records that the server forwards (originating from the RADIUS client). These records include the user IP address and user group. See [RADIUS single sign-on agent on page 2914](#) for more information.

## Configuring guest user groups

In some scenarios, an administrator might need to create temporary user accounts with a defined expiry time to access network resources. For example, if there is a large conference and many attendees require temporary network access for a few days. *Guest Management* can be used to combine many guest users into a group. Many guest accounts can be created at once using randomly-generated user IDs and passwords.

A guest group must be configured first. The guest user account user ID can be an email address, a randomly generated string, or an ID that is assigned by the administrator. The password can be assigned by the administrator or randomly generated. The guest group configuration determines the fields that are provided when creating guest user accounts in *Guest Management*.

### To create a guest user group:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Enter a name, and set the *Type* to *Guest*.

## 3. Configure the following:

|                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Batch Guest Account Creation</b> | Create multiple accounts automatically. When enabled: <ul style="list-style-type: none"> <li>• The user ID and password are automatically generated.</li> <li>• The accounts only have user ID, password, and expiration fields. The expiration field is editable in the GUI in the <i>Start Countdown</i> and <i>Time</i> settings.</li> <li>• An administrator can print the account information.</li> <li>• Users do not receive an email or SMS notification.</li> </ul> |
| <b>User ID</b>                      | Select one of the following: <ul style="list-style-type: none"> <li>• <i>Email</i>: use the user's email address</li> <li>• <i>Auto Generate</i>: FortiOS creates a random user ID</li> <li>• <i>Specify</i>: the administrator assigns a user ID</li> </ul>                                                                                                                                                                                                                 |
| <b>Maximum Accounts</b>             | Enable to set a maximum number of guest accounts that can be created for this group (disabled = unlimited).                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Guest Details</b>                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Enable Name</b>                  | If enabled, the user form has a field to enter a name.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Enable Email</b>                 | If enabled, the user is notified by email.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Enable SMS</b>                   | If enabled, the user is notified by SMS.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Password</b>                     | Select one of the following: <ul style="list-style-type: none"> <li>• <i>Auto Generate</i>: FortiOS creates a random password</li> <li>• <i>Specify</i>: the administrator assigns a password</li> </ul> If the setting is disabled, no password is used.                                                                                                                                                                                                                    |
| <b>Sponsor</b>                      | If enabled, the user form has a field to enter a sponsor ( <i>Optional</i> ). Select <i>Required</i> if the sponsor field is mandatory.                                                                                                                                                                                                                                                                                                                                      |
| <b>Company</b>                      | If enabled, the user form has a field to enter a company ( <i>Optional</i> ). Select <i>Required</i> if the company field is mandatory.                                                                                                                                                                                                                                                                                                                                      |
| <b>Expiration</b>                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Start Countdown</b>              | Select one of the following: <ul style="list-style-type: none"> <li>• <i>On Account Creation</i>: the countdown starts from the time the account is created</li> <li>• <i>After First Login</i>: the countdown starts from the time the first time the user logs in</li> </ul>                                                                                                                                                                                               |
| <b>Time</b>                         | Set the expiry time. There are fields to enter values for <i>Days</i> , <i>Hours</i> , <i>Minutes</i> , and <i>Seconds</i> .                                                                                                                                                                                                                                                                                                                                                 |

## 4. Click OK.

**To manually create a guest user account:**

1. Go to *User & User & Authentication > Guest Management*.
2. If more than one guest user group is configured, select the group from the dropdown beside the search box.

3. Click *Create New* and enter the information in the *Create User* pane. The fields are based on the guest group configuration. Optional fields can be left blank, such as *Sponsor* in this example.

4. Click *OK*.

**To automatically create multiple guest user accounts:**

1. Go to *User & User & Authentication > Guest Management*.
2. If more than one guest user group is configured, select the group from the dropdown beside the search box. The group must have *Batch Guest Account Creation* enabled.
3. Click *Create New > Multiple Users* and enter the *Number of Accounts*.
4. Optionally, edit the *Expiration* date and time.

5. Click *OK*.

## Retail environment guest access

Businesses such as coffee shops provide free Internet access for customers. In this scenario, you do not need to configure guest management, as customers can access the WiFi access point without logon credentials.

However, consider that the business wants to contact customers with promotional offers to encourage future patronage. You can configure an email collection portal to collect customer email addresses for this purpose. You can configure a firewall policy to grant network access only to users who provide a valid email address. The first time a customer's device

attempts WiFi connection, FortiOS requests an email address, which it validates. The customers' subsequent connections go directly to the Internet without interruption.

This configuration consists of the following steps:

1. [Creating an email collection portal on page 2073](#)
2. [Creating a firewall policy on page 2073](#)
3. [Checking for collected emails on page 2074](#)

## Creating an email collection portal

The customer's first contact with your network is a captive portal that presents a webpage requesting an email address. When FortiOS has validated the email address, the customer's device MAC address is added to the collected emails device group.

This example modifies the freewifi WiFi interface to present an email collection captive portal.

### To configure the freewifi SSID to use an email collection portal in the GUI:

1. Enable email collection:
  - a. Go to *System > Feature Visibility*.
  - b. In the *Additional Features* section, enable *Email Collection*.
  - c. Click *Apply*.
2. Edit the freewifi SSID:
  - a. Go to *WiFi & Switch Controller > SSIDs* and edit the *freewifi* SSID.
  - b. In the *Security Mode Settings* section, set the *Security mode* to *Captive Portal*.
  - c. Set the *Portal type* to *Email Collection*.
  - d. Click *OK*.

### To configure the freewifi SSID to use an email collection portal in the CLI:

```
config wireless-controller vap
    edit freewifi
        set security captive-portal
        set portal-type email-collect
    next
end
```

## Creating a firewall policy

You must configure a firewall policy that allows traffic to flow from the WiFi SSID to the internet interface only for members of the collected emails device group. This policy must be listed first. Unknown devices are not members of the collected emails device group, so they do not match the policy.

### To create a firewall policy:

```
config firewall policy
    edit 3
        set srcintf "freewifi"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
```


```

        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
        set email-collect enable
    next
end

```

## Checking for collected emails

When a WiFi user connects to the freewifi SSID, they are presented with a captive portal to enter their email address.

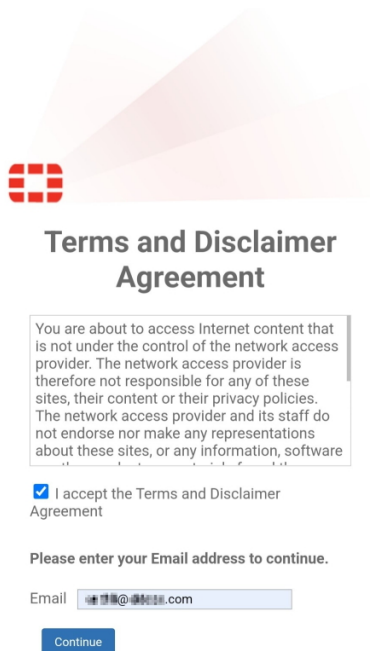

Once the user enters their email and clicks *Continue*, they will have access to the Internet. The collected emails can be verified in FortiOS.

### To check for collected emails in the GUI:

1. Go to *Dashboard > Users & Devices* and click *Add Widget*.
2. In the *User & Authentication* section, select *Collected Email* and click *Add Widget*.
3. Click *Close*.
4. Click the *Collected Email* to expand to full view. The list of emails is displayed.

[+ Add Widget](#)

| Collected Email     | Duration | IP Address | Traffic Volume                 | Time Left |
|---------------------|----------|------------|--------------------------------|-----------|
| example@example.com | 14m 30s  |            | 5.12 MB <div><div></div></div> | 9d 23h    |

Updated: 16:24:39

5. Optionally, click *Export* to export the data as a CSV or JSON file.



**To check for collected emails in the CLI:**

```
# diagnose firewall auth mac list

72:4d:e1:**:**:**, admin@fortinet.com
    type: email, id: 0, duration: 937, idled: 19
    expire: 863980, allow-idle: 864000
    flag(1000): src_idle
    packets: in 4753 out 4592, bytes: in 2662403 out 2458644

----- 1 listed, 0 filtered -----
```

## User and user group timeouts

Authenticated user groups can have timeout values per group in addition to FortiGate-wide timeouts. Three types of group timeouts can be configured: idle, hard, and session. These are in addition to any external timeouts, such as those on RADIUS servers.

**To configure the timeout type for authenticated users:**

```
config user setting
    set auth-timeout-type {idle-timeout | hard-timeout | new-session}
    set auth-timeout <integer>
end
```

Timeouts are measured in minutes (1 - 1440, default = 5). If VDOMs are enabled, the global level `auth-timeout user` setting is the default all VDOMs inherit.

| Timeout type | Description                                                                                                                                                                                                                                                                                                                                                                          |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Idle         | This is the default setting. The idle timer starts when a user initiates a session. As long as data is transferred in this session, the timer continually resets. If the data flow stops, the timer is allowed to advance until it reaches its limit. When the user has been idle for too long, the user must re-authenticate before traffic is allowed to continue in that session. |
| Hard         | The hard timer starts when a user initiates a session. When the timeout is reached, all the sessions for that user must be re-authenticated. This timeout is not affected by any events.                                                                                                                                                                                             |
| Session      | The session timer starts when a user initiates a session. When the timeout is reached, existing sessions may continue. New sessions are not allowed until the user re-authenticates. This timeout is not affected by any events.                                                                                                                                                     |

**To configure the authentication timeout for a user group:**

```
config user group
    edit <name>
        set authtimeout <integer>
    next
end
```

Timeouts are measured in minutes (0 - 43200). A value of zero (the default) means the global timeout is used.



If a user belongs to multiple RADIUS groups, the group `authtimeout` values are ignored. The global `auth-timeout` value is used instead (under `config user setting`).

## LDAP servers

The following topics provide information about LDAP servers:

- [Configuring an LDAP server on page 2076](#)
- [Enabling Active Directory recursive search on page 2079](#)
- [Configuring LDAP dial-in using a member attribute on page 2080](#)
- [Configuring wildcard admin accounts on page 2081](#)
- [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#)
- [Tracking users in each Active Directory LDAP group on page 2084](#)
- [Tracking rolling historical records of LDAP user logins on page 2087](#)
- [Configuring client certificate authentication on the LDAP server on page 2090](#)

## Configuring an LDAP server

FortiOS can be configured to use an LDAP server for authentication.



When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See relevant LDAPS information in this topic and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

### To configure an LDAP server on the FortiGate:

1. Go to *User & Authentication > LDAP Servers*.
2. Click *Create New*.
3. Configure the following:

|                       |                                                                                                          |
|-----------------------|----------------------------------------------------------------------------------------------------------|
| <b>Name</b>           | This connection name is for reference within the FortiGate only.                                         |
| <b>Server IP/Name</b> | LDAP server IP address or FQDN resolvable by the FortiGate.                                              |
| <b>Server Port</b>    | By default, LDAP uses port 389 and LDAPS uses 636. Use this field to specify a custom port if necessary. |

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Common Name Identifier</b> | <p>Attribute field of the object in LDAP that the FortiGate uses to identify the connecting user. The identifier is case sensitive. Common attributes are:</p> <ul style="list-style-type: none"><li>• <i>cn</i> (Common Name)</li><li>• <i>sAMAccountName</i> (SAMAccountName)</li><li>• <i>uid</i> (User ID)</li></ul>                                                                                                                                                                                                                                                                   |
| <b>Distinguished Name</b>     | <p>Used to look up user account entries on the LDAP server. It reflects the hierarchy of LDAP database object classes above the CN identifier in which you are doing the lookup.</p> <p>Enter <i>dc=COMPANY,dc=com</i> to specify the root of the domain to include all objects.</p> <p>Enter <i>ou=VPN-Users,dc=COMPANY,dc=com</i> to look up users under a specific organization unit.</p>                                                                                                                                                                                               |
| <b>Exchange server</b>        | <p>Enable to specify the exchange server connector to collect information about authenticated users from a corporate exchange server. See <a href="#">Exchange Server connector on page 2917</a> for more details.</p>                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Bind Type</b>              | <p>Select one of the following options:</p> <ul style="list-style-type: none"><li>• <i>Simple</i>: bind using simple password authentication using the client name. The LDAP server only looks up against the distinguished name (DN), but does not search on the subtree.</li><li>• <i>Anonymous</i>: bind using an anonymous user, and search starting from the DN and recurse over the subtrees. Many LDAP servers do not allow this.</li><li>• <i>Regular</i>: bind using the username and password provided, and search starting from the DN and recurse over the subtrees.</li></ul> |
| <b>Username</b>               | <p>If using regular bind, enter a username with sufficient privileges to access the LDAP server. The following formats are supported:</p> <ul style="list-style-type: none"><li>• <i>username\administrator</i></li><li>• <i>administrator@domain</i></li><li>• <i>cn=administrator,cn=users,dc=domain,dc=com</i></li></ul>                                                                                                                                                                                                                                                                |
| <b>Password</b>               | <p>If using regular bind, enter the password associated with the username.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Secure Connection</b>      | <p>Enable to apply security to the LDAP connection through STARTTLS or LDAPS.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Protocol</b>               | <p>If <i>Secure Connection</i> is enabled, select <i>STARTTLS</i> or <i>LDAPS</i>. Selecting <i>STARTTLS</i> changes the port to 389 and selecting <i>LDAPS</i> changes the port to 636.</p>                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Certificate</b>            | <p>Enable and select the certificate so the FortiGate will only accept a certificate from the LDAP server that is signed by this CA.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Server identity check</b>  | <p>Enable to verify the server domain or IP address against the server certificate. This option is enabled by default and it is recommended to leave it enabled for a secure configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                            |



When specifying a secure connection, there are some considerations for the certificate used by LDAP to secure the connection. The FortiGate checks the certificate presented by the LDAP server for the IP address or FQDN as specified in the *Server IP/Name* field with the following logic:

- If there is a Subject Alternative Name (SAN), it will ignore any Common Name (CN) value and look for a match in any of the SAN fields.
- If there is no SAN, it will check the CN for a match.

4. Optionally, click *Test User Credentials* to ensure that the account has sufficient access rights.
5. Click *OK*.  
The FortiGate checks the connection and updates the *Connection Status*.

#### To configure a secure connection to the LDAP server in the GUI:

1. Go to *User & Authentication > LDAP Servers*.
2. Click *Create New*.
3. Configure the following:

|                               |                                                                                                                                                                                                         |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                   | LDAP-fortiad                                                                                                                                                                                            |
| <b>Server IP/Name</b>         | 10.88.0.1                                                                                                                                                                                               |
| <b>Server Port</b>            | 636                                                                                                                                                                                                     |
| <b>Common Name Identifier</b> | sAMAccountName                                                                                                                                                                                          |
| <b>Distinguished Name</b>     | dc=fortiad,dc=info                                                                                                                                                                                      |
| <b>Exchange server</b>        | Disabled                                                                                                                                                                                                |
| <b>Bind Type</b>              | Regular<br>Enter the <i>Username</i> and <i>Password</i> for LDAP binding and lookup.                                                                                                                   |
| <b>Secure Connection</b>      | Enabled <ul style="list-style-type: none"> <li>• Set <i>Protocol</i> to <i>LDAPS</i>.</li> <li>• Enable <i>Certificate</i> and select the CA certificate to validate the server certificate.</li> </ul> |
| <b>Server identity check</b>  | Optionally, enable to verify the domain name or IP address against the server certificate.                                                                                                              |

4. Click *Test Connectivity* to verify the connection to the server.
5. Click *OK*.

### To configure a secure connection to the LDAP server in the CLI:

```
config user ldap
  edit "LDAP-fortiad"
    set server "10.88.0.1"
    set cnid "sAMAccountName"
    set dn "dc=fortiad,dc=info"
    set type regular
    set username "fortiad\Administrator"
    set password <password>
    set secure ldaps
    set ca-cert "CA_Cert_1"
    set port 636
  next
end
```

## Enabling Active Directory recursive search

By default, nested groups (groups that are members of other groups) are not searched in Windows Active Directory (AD) LDAP servers because this can slow down the group membership search. There is an option in FortiOS to enable the searching of nested groups for user group memberships on AD LDAP servers.



This option is not available for other LDAP servers, such as OpenLDAP-based servers.

The default behavior does not include nested groups:

```
config user ldap
  edit "ldap-ad"
    set server "10.1.100.131"
    set cnid "cn"
    set dn "dc=fortinet-fsso,dc=com"
    set type regular
    set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
```

```

        set password XXXXXXXXXXXXXXXXXXXXXXXX
    next
end

```

The default search results only show groups that have the user as member, and no groups that have groups as members:

```

diagnose test authserver ldap ldap-ad nuser nuser
    authenticate 'nuser' against 'ldap-ad' succeeded!
    Group membership(s) - CN=nested3,OU=Testing,DC=Fortinet-FSSO,DC=COM
                        CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM

```

### To enable recursive search to include nested groups in the results:

```

config user ldap
    edit "ldap-ad"
        set server "10.1.100.131"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password XXXXXXXXXXXXXXXXXXXXXXXX
        set search-type recursive
    next
end

```

The search results now include groups that have other groups as members:

```

diagnose test authserver ldap ldap-ad nuser nuser
    authenticate 'nuser' against 'ldap-ad' succeeded!
    Group membership(s) - CN=nested3,OU=Testing,DC=Fortinet-FSSO,DC=COM
                        CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM
                        CN=nested2,OU=Testing,DC=Fortinet-FSSO,DC=COM
                        CN=nested1,OU=Testing,DC=Fortinet-FSSO,DC=COM

```

The group nested3 is a member of the group nested2, which is a member of the group nested1.

## Configuring LDAP dial-in using a member attribute

In this configuration, users defined in Microsoft AD can set up a VPN connection based on an attribute that is set to *TRUE*, instead of their user group. You can activate the *Allow Dialin* property in AD user properties, which sets the *msNPAllowDialin* attribute to *TRUE*. You can use this procedure for other member attributes as your system requires.

This configuration consists of the following steps:

1. Ensure that the AD server has the *msNPAllowDialin* attribute set to *TRUE* for the desired users.
2. [Configure user LDAP member attribute settings.](#)
3. [Configure LDAP group settings.](#)
4. [Ensure that you configured the settings correctly.](#)

### To configure user LDAP member attribute settings:

```

config user ldap
    edit "ldap_server"
        set server "192.168.201.3"
        set cnid "sAMAccountName"

```

```
set dn "DC=fortilabanz,DC=com,DC=au"
set type regular
set username "fortigate@sample.com"
set password *****
set member-attr "msNPAllowDialin"
next
end
```

### To configure LDAP group settings:

```
config user group
edit "ldap_grp"
set member "ldap_server"
config match
edit 1
set server-name "ldap_server"
set group-name "TRUE"
next
end
next
end
```

### To ensure that you configured the settings correctly:

Users that are members of the `ldap_grp` user group should be able to authenticate. The following shows sample diagnose debug output when the Allow Dial-in attribute is set to TRUE:

```
get_member_of_groups-Get the memberOf groups.
get_member_of_groups- attr='msNPAllowDialin', found 1 values
get_member_of_groups-val[0]='TRUE'
fnbamd_ldap_get_result-Auth accepted
fnbamd_ldap_get_result-Going to DONE state res=0
fnbamd_auth_poll_ldap-Result for ldap svr 192.168.201.3 is SUCCESS
fnbamd_auth_poll_ldap-Passed group matching
```

If the attribute is not set to TRUE but is expected, you may see the following output:

```
get_member_of_groups-Get the memberOf groups.
get_member_of_groups- attr='msNPAllowDialin', found 1 values
get_member_of_groups-val[0]='FALSE'
fnbamd_ldap_get_result-Auth accepted
fnbamd_ldap_get_result-Going to DONE state res=0
fnbamd_auth_poll_ldap-Result for ldap svr 192.168.201.3 is SUCCESS
fnbamd_auth_poll_ldap-Failed group matching
```

The difference between the two outputs is the last line, which shows passed or failed depending on whether the member attribute is set to the expected value.

## Configuring wildcard admin accounts

To avoid setting up individual admin accounts in FortiOS, you can configure an admin account with the wildcard option enabled, allowing multiple remote admin accounts to match one local admin account. This way, multiple LDAP admin accounts can use one FortiOS admin account.

Benefits include:

- Fast configuration of the FortiOS admin account to work with your LDAP network, saving effort and avoiding potential errors incurred when setting up multiple admin accounts
- Reduced ongoing maintenance. As long as LDAP users belong to the same group and you do not modify the wildcard admin account in FortiOS, you do not need to configure changes on the LDAP accounts. If you add or remove a user from the LDAP group, you do not need to perform changes in FortiOS.

Potential issues include:

- Multiple users may be logged in to the same account simultaneously. This may cause issues if both users make changes simultaneously.
- Security is reduced since multiple users have login access to the same account, as opposed to an account for each user.

Wildcard admin configuration also applies to RADIUS. If configuring for RADIUS, configure the RADIUS server and RADIUS user group instead of LDAP. When using the GUI, wildcard admin is the only remote admin account that does not require you to enter a password on account creation. That password is normally used when the remote authentication server is unavailable during authentication.

This example uses default values where possible. If a specific value is not mentioned, the example sets it to its default value.



When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials. To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).

---



You can configure an admin account in Active Directory for LDAP authentication to allow an admin to perform lookups and reset passwords without being a member of the Account Operators or Domain Administrators built-in groups. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

---

### To configure the LDAP server:

The important parts of this configuration are the username and group lines. The username is the domain administrator account. The group binding allows only the GRP group access.

This example uses an example domain name. Configure as appropriate for your own network.

```
config user ldap
  edit "ldap_server"
    set server "192.168.201.3"
    set cnid "sAMAccountName"
    set dn "DC=example,DC=com,DC=au"
    set type regular
    set username "CN=Administrator,CN=Users,DC=example,DC=COM"
    set password *
    set group-member-check group-object
    set group-object-filter (&
      (objectcategory=group)member="CN=GRP,OU=training,DC=example,DC=COM") )
  next
end
```



**To configure the user group and add the LDAP server:**

```
config user group
  edit "ldap_grp"
    set member "ldap_server"
    config match
      edit 1
        set server-name "ldap_server"
        set group-name "CN=GRP,OU=training,DC=example,DC=COM"
      next
    end
  next
end
end
end
end
```

**To configure the wildcard admin account:**

```
config system admin
  edit "test"
    set remote-auth enable
    set accprofile "super_admin"
    set wildcard enable
    set remote-group "ldap_grp"
  next
end
```

## Configuring least privileges for LDAP admin account authentication in Active Directory

An administrator should only have sufficient privileges for their role. In the case of LDAP admin bind, you can configure an admin account in Active Directory for LDAP authentication to allow an admin to perform lookups and reset passwords without being a member of the Account Operators or Domain Administrators built-in groups.

For information about Active Directory, see the [product documentation](#).

**To configure account privileges for LDAP authentication in Active Directory:**

1. In the *Active Directory Users and Computers* administrative console, right-click the Organizational Unit (OU) or the top-level domain you want to configure and select *Delegate Control*.
2. In the *Delegation of Control Wizard* dialog, click *Next*.
3. In the *Users or Groups* dialog, click *Add...* and search Active Directory for the users or groups.
4. Click *OK* and then click *Next*.
5. In the *Tasks to Delegate* dialog, select *Create a custom task to delegate* and click *Next*.
6. Select *Only the following objects in the folder* and scroll to the bottom of the list. Select *User objects* and click *Next*.
7. In the *Permissions* dialog, select *General*.
8. From the *Permissions* list, select the following:
  - *Change password*
  - *Reset password*
9. Clear the *General* checkbox and select *Property-specific*.

10. From the *Permissions* list, select the following:


- *Write lockoutTime*
- *Read lockoutTime*
- *Write pwdLastSet*
- *Read pwdLastSet*
- *Write UserAccountControl*
- *Read UserAccountControl*

11. Click *Next* and click *Finish*.

## Tracking users in each Active Directory LDAP group

When LDAP users log on through firewall authentication, the active users per Active Directory LDAP group is counted and displayed in the *Firewall Users* widget and the CLI.

### Example

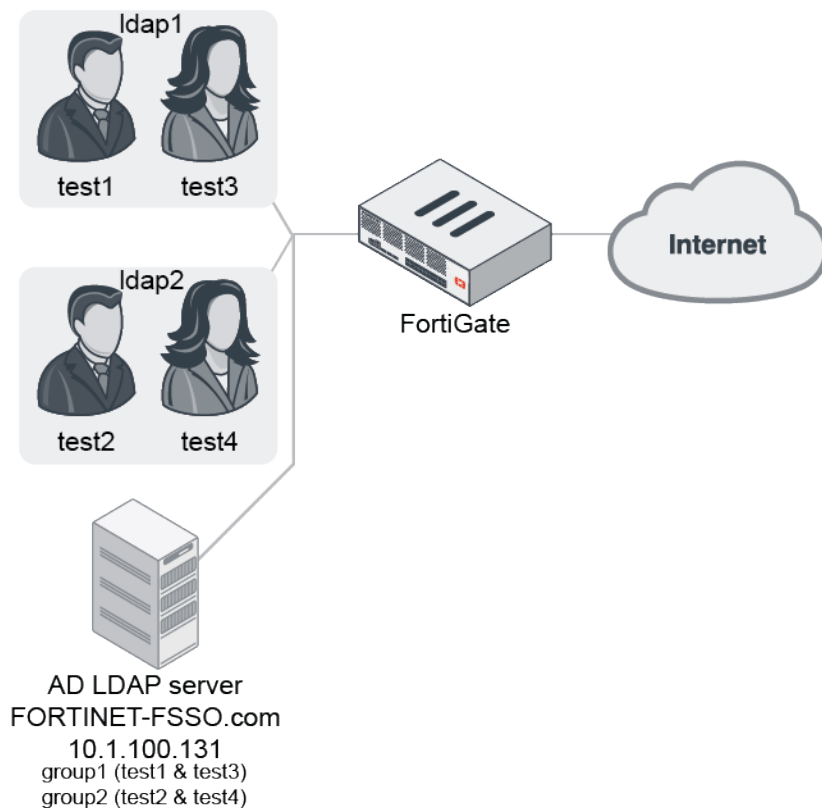


The Active Directory LDAP server, FORTINET-FSSO.com, is configured with two groups that contain two users each: group1 consists of users test1 and test3; group2 consists of users test2 and test4.

**To configure AD LDAP user groups in the GUI:**

1. Configure the Active Directory LDAP server, FORTINET-FSSO:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Enter the following:


|                           |                                                          |
|---------------------------|----------------------------------------------------------|
| <b>Name</b>               | <i>FORTINET-FSSO</i>                                     |
| <b>Server IP/Name</b>     | <i>10.1.100.131</i>                                      |
| <b>Distinguished Name</b> | <i>dc=FORTINET-FSSO,dc=com</i>                           |
| <b>Bind Type</b>          | <i>Regular</i>                                           |
| <b>Username</b>           | <i>cn=administrator,cn=users,dc=FORTINET-FSSO,dc=com</i> |
| <b>Password</b>           | Enter the password.                                      |

- c. Click OK.
2. Configure the LDAP user groups:
  - a. Go to *User & Authentication > User Groups* and click *Create New*.
  - b. Enter the name, *ldap1*.
  - c. In the *Remote Groups* table, click *Add*. The *Add Group Match* pane opens.
  - d. For *Remote Server*, select *FORTINET-FSSO*.
  - e. In the search box, enter *group1*, and select the result in the table.
  - f. Click OK.

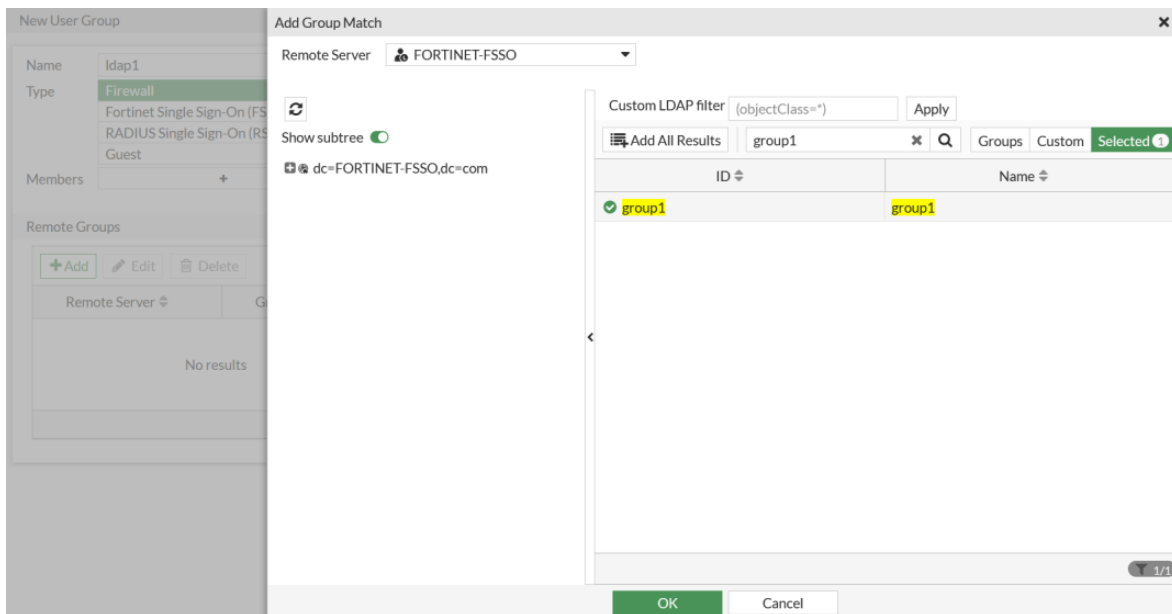


- g. Repeat these steps to configure *ldap2* with the FORTINET-FSSO *group2*.
  - h. Click OK.
3. Configure a firewall policy with both LDAP groups:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. For *Source*, select *ldap1* and *ldap2*.
  - c. Configure the other settings as needed.
  - d. Click OK.


4. Get users test1 and test2 to log in.
5. In FortiOS, go to *Dashboard > Users & Devices* and click the *Firewall Users* widget to expand to full screen view. Hover over a group in the *User Group* donut chart to view how many users are logged on from that group, and the number of users as a percentage of all logged on users. The chart shows that two users are logged in.

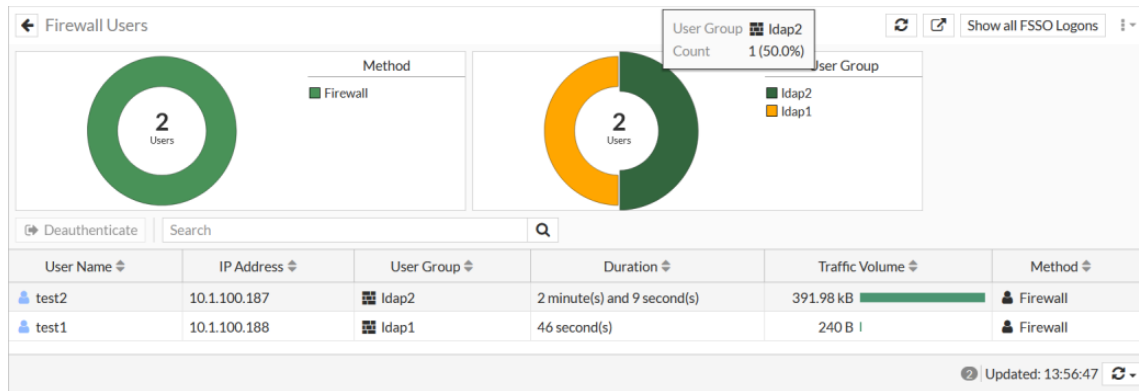

6. Get users test3 and test4 to log in, and refresh the *Firewall Users* widget. Each LDAP group has two users logged in, with a total of four active users.

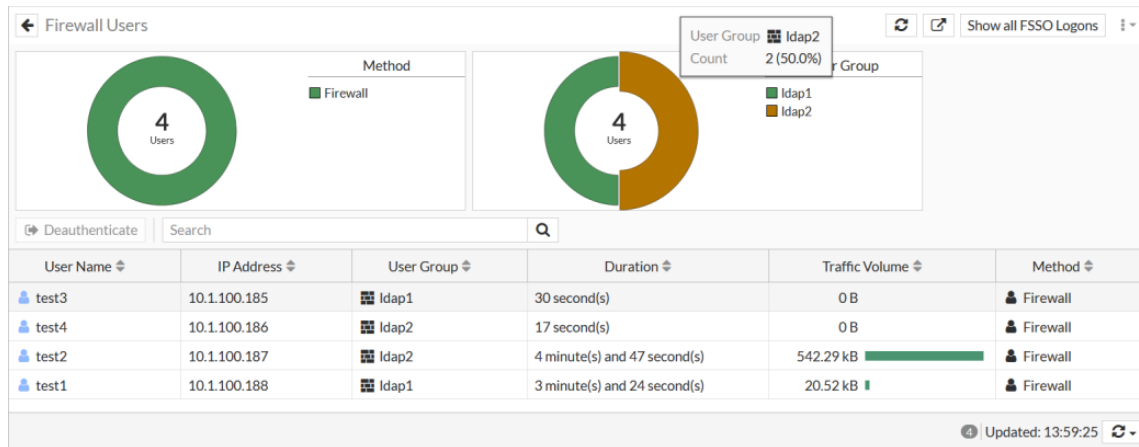

7. Get user test2 to log out, and refresh the *Firewall Users* widget. There is a total of three active users, and the Idap2 group only has one user that is logged in.

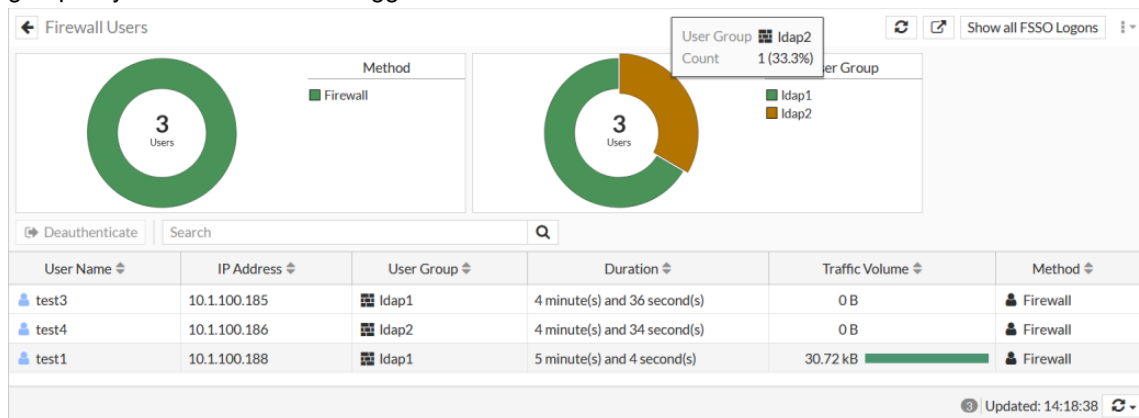

**To verify the user group count in the CLI:**

```
# diagnose user-device-store user-count list <integer>
# diagnose user-device-store user-count query <FQDN of AD group>
```

## Tracking rolling historical records of LDAP user logins

Authenticated LDAP users can be tracked by logging the users' group memberships, logon timestamps, and logout timestamps into local files on a log disk over a rolling four-week period. The historical records can be queried from the CLI. This feature is only enabled on FortiGate models with a log disk.


**To view active user logged information:**

```
# diagnose user-device-store user-stats query <yyyy-mm-dd> <range_in_days>
```

### Example

In this example, the FortiGate is configured with an explicit web proxy and an LDAP server. When an LDAP user is authenticated by an IP-based authentication method in WAD, the WAD user is considered to be in an active logon status. This WAD user is listed in the `diagnose wad user list` output. If the user is removed from WAD as an authenticated, such as when the IP-based authentication expires, then the user is considered to become inactive (logout status). The user is no longer listed in the `diagnose wad user list` output.

The WAD user's group membership information and their logon and logout timestamps are written into local files on the FortiGate's disk. There is one log file for each day, and the FortiGate can maintain up to 28 log files over a rolling period of 28 days (four weeks). This means after 28 days with 28 files stored, on the 29th day, the first file will be removed and a new file will be created for the 29th day.

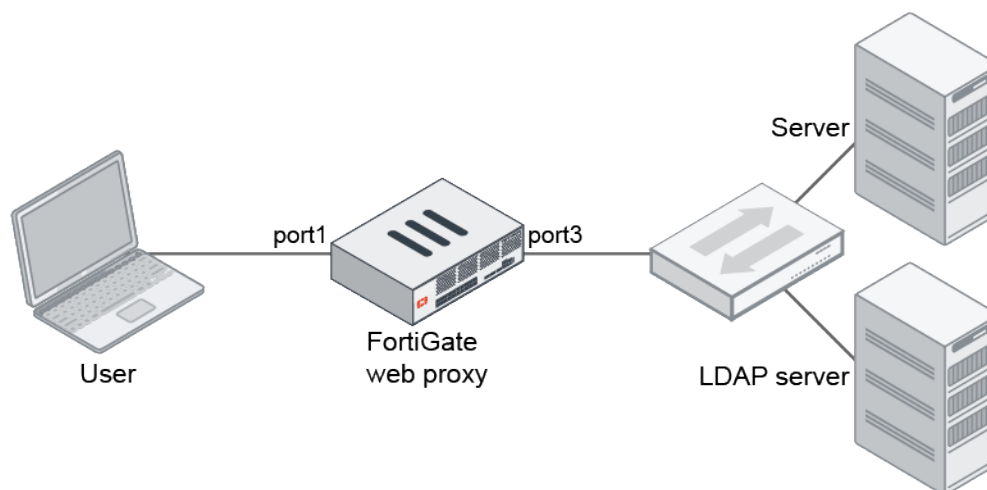

This feature works on other configurations such as firewall authentication, transparent web proxy, ZTNA, and SSL VPN where an LDAP server is used.

---

**To configure the FortiGate:****1. Enable the explicit web proxy on port1:**

```
config system interface
  edit "port1"
    set explicit-web-proxy enable
    set explicit-ftp-proxy enable
    set snmp-index 3
  next
end
```

**2. Configure the LDAP server:**

```
config user ldap
  edit "ldap-test"
    set server "172.16.200.98"
    set cnid "cn"
    set dn "dc=fortinetqa,dc=local"
    set type regular
    set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
    set password *****
  next
end
```

**3. Configure the authentication scheme:**

```
config authentication scheme
  edit "basic-ldap"
    set method basic
    set user-database "ldap-test"
  next
end
```

**4. Configure the authentication rule:**

```
config authentication rule
  edit "basic-ldap"
    set srcaddr "all"
    set active-auth-method "basic-ldap"
    set web-portal disable
  next
end
```

**5. Configure the user group:**

```
config user group
  edit "ldap-group"
    set member "ldap" "ldap-test"
  next
end
```

**6. Configure the proxy policy:**

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "port3"
    set srcaddr "all"
    set dstaddr "all"
```

```
        set service "web"
        set action accept
        set schedule "always"
        set groups "ldap-group"
        set utm-status enable
        set ssl-ssh-profile "deep-custom"
        set av-profile "av"
    next
end
```

When users pass through the explicit proxy and log in and out through LDAP, their login and logout records will be logged to the disk.

In this example, there are two LDAP users, test1 and test3, with the following activity:

1. test3 logs on at 22:30:22 on February 23, 2022, then logs out at 22:31:09 on the same day.
2. test1 logs on at 23:55:02 on February 23, 2022, then logs out at 00:05:02 on February 24, 2022.
3. test3 logs on at 16:29:44 on February 24, 2022, then logs out at 16:39:44 on the same day.

The logon and logout timestamp information, and the group membership information for users test1 and test3 will be logged into two local files on the log disk.

### To view the active user logged information for two days back from February 24, 2022:

```
# diagnose user-device-store user-stats query 2022-02-24 2
```

Record #0:

```
'username' = 'test3'
'groupname' = 'CN=Domain Admins,CN=Users,DC=FORTINETQA,DC=local'
'groupname' = 'CN=FSSO,OU=QA,DC=FORTINETQA,DC=local'
'logon' = '2022-02-23 22:30:22'
'logout' = '2022-02-23 22:31:09'
```

Record #1:

```
'username' = 'test1'
'groupname' = 'CN=Domain Admins,CN=Users,DC=FORTINETQA,DC=local'
'groupname' = 'CN=FSSO,OU=QA,DC=FORTINETQA,DC=local'
'groupname' = 'CN=mytest-grp,OU=QA,DC=FORTINETQA,DC=local'
'logon' = '2022-02-23 23:55:02'
```

Record #2:

```
'username' = 'test1'
'groupname' = 'CN=Domain Admins,CN=Users,DC=FORTINETQA,DC=local'
'groupname' = 'CN=FSSO,OU=QA,DC=FORTINETQA,DC=local'
'groupname' = 'CN=mytest-grp,OU=QA,DC=FORTINETQA,DC=local'
'logon' = '2022-02-23 23:55:02'
'logout' = '2022-02-24 00:05:02'
```

Record #3:

```
'username' = 'test3'
'groupname' = 'CN=Domain Admins,CN=Users,DC=FORTINETQA,DC=local'
'groupname' = 'CN=FSSO,OU=QA,DC=FORTINETQA,DC=local'
'logon' = '2022-02-24 16:29:44'
'logout' = '2022-02-24 16:39:44'
```

Returned 4 records.

There is one record (logon) for test1 on 2022-02-23 because they remained active after midnight (until 00:05:02).  
There is another record for 2022-02-24 with logon and logout timestamps for test1.

## Configuring client certificate authentication on the LDAP server


Administrators can configure a FortiGate client certificate in the LDAP server configuration when the FortiGate connects to an LDAPS server that requires client certificate authentication.

```
config user ldap
  edit <ldap_server>
    set client-cert-auth {enable | disable}
    set client-cert <source>
  next
end
```

### Example

In this example, the FortiGate is configured as an explicit web proxy. It connects to the Windows AD server through LDAPS, where the Windows server requires a client certificate to connect. The client certificate is configured in the CLI.

The endpoint PC connecting to the web server will first need to authenticate to the explicit web proxy before accessing the server.

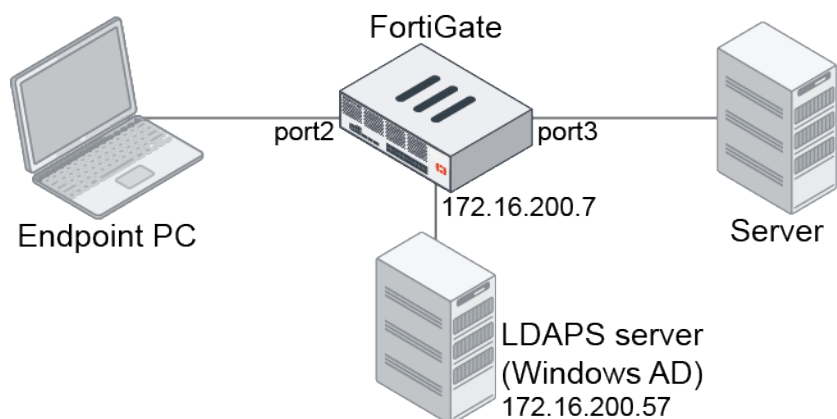

While this example demonstrates an LDAP client certificate for an explicit proxy configuration, LDAP client certificates can be used in firewall authentication, transparent proxy, ZTNA, and where ever LDAP configurations are used on the FortiGate.

#### To configure a client certificate on the LDAP server:

1. Enable the explicit web proxy on port2:

```
config system interface
  edit "port2"
    set explicit-web-proxy enable
  next
end
```

2. Upload the client certificate to the FortiGate:



```
config vpn certificate local
  edit "Zach"
    set password *****
    set private-key <private key>
    set certificate <certificate>
  next
end
```

### 3. Configure the LDAP server settings:

```
config user ldap
  edit "ldaps"
    set server "172.16.200.57"
    set server-identity-check disable
    set cnid "CN"
    set dn "CN=Users,DC=ftnt,DC=com"
    set secure ldaps
    set port 636
    set client-cert-auth enable
    set client-cert "Zach"
  next
end
```

### 4. Configure the authentication scheme:

```
config authentication scheme
  edit "1"
    set method basic
    set user-database "ldaps"
  next
end
```

### 5. Configure the authentication rule:

```
config authentication rule
  edit "1"
    set srcintf "port2"
    set srcaddr "all"
    set dstaddr "all"
    set active-auth-method "1"
  next
end
```

### 6. Configure the user group:

```
config user group
  edit "test"
    set member "ldaps"
  next
end
```

### 7. Configure the proxy policy with the user group:

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "port3"
    set srcaddr "all"
    set dstaddr "all"
```

```

set service "webproxy"
set action accept
set schedule "always"
set srcaddr6 "all"
set dstaddr6 "all"
set groups "test"
set utm-status enable
set ssl-ssh-profile "deep-inspection-clone"
set av-profile "av"

next
end

```

## Testing and verification

When traffic from the endpoint PC matches a policy and triggers authentication, the FortiGate starts the LDAPS TLS connection handshake with the Windows AD. The LDAPS server requests a client certificate to identify the FortiGate as a client. The FortiGate provides a configured client certificate, issued to zach.com, to the LDAPS server.

The following communication between the FortiGate and the LDAPS server shows the client certificate is sent by the FortiGate:

| No. | Time     | Source        | Destination   | Protocol | Length | Info                                                                                      |
|-----|----------|---------------|---------------|----------|--------|-------------------------------------------------------------------------------------------|
| 21  | 9.090726 | 172.16.200.7  | 172.16.200.57 | TCP      | 74     | 3626 → 636 [SYN] Seq=0 Win=14600 Len=0 MSS=1460 SACK_PERM=1 TSval=5627777 TSecr=0 WS=1024 |
| 22  | 9.090888 | 172.16.200.57 | 172.16.200.7  | TCP      | 66     | 636 → 3626 [SYN, ACK] Seq=0 Ack=1 Win=65535 Len=0 MSS=1460 WS=256 SACK_PERM=1             |
| 23  | 9.090902 | 172.16.200.7  | 172.16.200.57 | TCP      | 54     | 3626 → 636 [ACK] Seq=1 Ack=1 Win=15360 Len=0                                              |
| 24  | 9.091120 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 476    | Client Hello                                                                              |
| 25  | 9.092927 | 172.16.200.57 | 172.16.200.7  | TCP      | 1514   | 636 → 3626 [ACK] Seq=1 Ack=423 Win=2102272 Len=1460 [TCP segment of a reassembled PDU]    |
| 26  | 9.092934 | 172.16.200.7  | 172.16.200.57 | TCP      | 54     | 3626 → 636 [ACK] Seq=423 Ack=1461 Win=18432 Len=0                                         |
| 27  | 9.092936 | 172.16.200.57 | 172.16.200.7  | TLSv1.2  | 576    | Server Hello, Certificate, Server Key Exchange, Certificate Request, Server Hello Done    |
| 28  | 9.092943 | 172.16.200.7  | 172.16.200.57 | TCP      | 54     | 3626 → 636 [ACK] Seq=423 Ack=1983 Win=20480 Len=0                                         |
| 29  | 9.101835 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 1514   | Certificate                                                                               |
| 30  | 9.101839 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 660    | Client Key Exchange, Certificate Verify, Change Cipher Spec, Encrypted Handshake Message  |
| 31  | 9.101954 | 172.16.200.57 | 172.16.200.7  | TCP      | 54     | 636 → 3626 [ACK] Seq=1983 Ack=2489 Win=2102272 Len=0                                      |
| 32  | 9.103345 | 172.16.200.57 | 172.16.200.7  | TLSv1.2  | 105    | Change Cipher Spec, Encrypted Handshake Message                                           |
| 33  | 9.103450 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 112    | Application Data                                                                          |
| 34  | 9.104280 | 172.16.200.57 | 172.16.200.7  | TLSv1.2  | 105    | Application Data                                                                          |
| 35  | 9.104348 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 152    | Application Data                                                                          |
| 36  | 9.104541 | 172.16.200.57 | 172.16.200.7  | TLSv1.2  | 162    | Application Data                                                                          |
| 37  | 9.104580 | 172.16.200.7  | 172.16.200.57 | TLSv1.2  | 170    | Application Data                                                                          |

Handshake Protocol: Certificate

Handshake Type: Certificate (11)

Length: 1374

Certificates Length: 1371

Certificates (1371 bytes)

Certificate Length: 1368

Certificate: 308205543082033ca003020102020114300d06092a864886f70d01010b05003062310b30\_ (id-at-commonName=zach.com,id-at-organizationalUnitName=Zach,id-at-organizationName=Zach,id-at-localityName=8i)

signedCertificate

version: v3 (2)

serialNumber: 0x14

signature (sha256WithRSAEncryption)

issuer: rdnSequence (0)

validity

subject: rdnSequence (0)

subjectPublicKeyInfo

extensions: 2 items

algorithmIdentifier (sha256WithRSAEncryption)

padding: 0

encrypted: 2f61dff751b6e71c15337891127a4cc6d094efd31228daf1b568442dbd820559fa55cd6\_

## RADIUS servers

Remote Authentication and Dial-In User Service (RADIUS) is a broadly supported client-server protocol that provides centralized authentication, authorization, and accounting functions. RADIUS clients are built into gateways that allow access to networks such a VPN server, network access server (NAS), and a network switch or firewall that uses authentication.

RADIUS servers use UDP packets to communicate with the RADIUS clients on the network to authenticate users before allowing them access to the network, authorize access to resources by appropriate users, and account or bill for those resources that are used. RADIUS servers are currently defined by [RFC 2865](#) (RADIUS) and [RFC 2866](#) (RADIUS Accounting), and listen on either UDP ports 1812 (authentication) and 1813 (accounting), or ports 1645 (authentication) and 1646 (accounting) requests. RADIUS servers exist for all major operating systems.

The RADIUS server must be configured to accept the FortiGate as a client so it can use the authentication and accounting functions of the RADIUS server.

RADIUS authentication with a FortiGate requires the following:

- Configuring one or more RADIUS server profiles on the FortiGate.
- Assigning the RADIUS server profile to a user or user group.
- Applying the user or user group to a firewall policy.

RADIUS authentication can be applied to many FortiGate functions, such as firewall authentication, SSL and IPsec VPNs, administrator profiles, ZTNA, explicit proxy, wireless, 802.1X, and more.

The RADIUS server uses a shared secret key with MD5 hashing to encrypt information passed between RADIUS servers and clients. Typically, only user credentials are encrypted. Additional security can be configured through IPsec tunnels by placing the RADIUS server behind another VPN gateway.

The following topics provide more information about RADIUS servers:

- [Configuring a RADIUS server on page 2093](#)
- [Using multiple RADIUS servers on page 2094](#)
- [RADIUS AVPs and VSAs on page 2097](#)
- [Restricting RADIUS user groups to match selective users on the RADIUS server on page 2099](#)
- [Configuring RADIUS SSO authentication on page 2101](#)
- [RSA ACE \(SecurID\) servers on page 2107](#)
- [Support for Okta RADIUS attributes filter-Id and class on page 2111](#)
- [Sending multiple RADIUS attribute values in a single RADIUS Access-Request on page 2113](#)
- [Traffic shaping based on dynamic RADIUS VSAs on page 2113](#)
- [RADIUS Termination-Action AVP in wired and wireless scenarios on page 2120](#)

## Configuring a RADIUS server

A RADIUS server can be configured in the GUI by going to *User & Authentication > RADIUS Servers*, or in the CLI under `config user radius`.

### Basic configuration

The following table summarizes the common RADIUS settings that can be configured in the GUI and CLI.

| GUI field                    | CLI setting                                                           | Description                                                                                                                                                                                                                                                 |
|------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Name</i>                  | <code>edit &lt;name&gt;</code>                                        | Define the RADIUS server object within FortiOS.                                                                                                                                                                                                             |
| <i>Authentication method</i> | <code>set auth-type {auto   ms_chap_v2   ms_chap   chap   pap}</code> | Specify the authentication method, or select <b>Default</b> / <code>auto</code> to negotiate PAP, MSCHAP_v2, and CHAP in that order.                                                                                                                        |
| <i>NAS IP</i>                | <code>set nas-ip &lt;IPv4_address&gt;</code>                          | Optional setting, also known as Calling-Station-Id. Specify the IP address the FortiGate uses to communicate with the RADIUS server. If left unconfigured, the FortiGate will use the IP address of the interface that communicates with the RADIUS server. |

| GUI field                          | CLI setting                                       | Description                                                                                                                                                                         |
|------------------------------------|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Include in every user group</i> | <code>set all-usergroup {enable   disable}</code> | Optional setting to add the RADIUS server to each user group.<br>This allows each user group to try and authenticate users against the RADIUS server if local authentication fails. |
| <b>Primary Server</b>              |                                                   |                                                                                                                                                                                     |
| <i>IP/Name</i>                     | <code>set server &lt;string&gt;</code>            | Enter the IP address or resolvable FQDN of the RADIUS server.                                                                                                                       |
| <i>Secret</i>                      | <code>set secret &lt;password&gt;</code>          | Enter the password used to connect to the RADIUS server.                                                                                                                            |

There is an option in the GUI to configure a second server, and a third server can be configured in the CLI (see [Using multiple RADIUS servers on page 2094](#)).

## Advanced settings

Advanced settings for RADIUS servers can be configured in the CLI. The following are some commonly used settings.

### To edit the port used to connect with the RADIUS server:

```
config system global
    set radius-port <integer>
end
```

### To edit the default setting for password encoding and username case sensitivity:

```
config user radius
    edit <name>
        set password-encoding {auto | ISO-8859-1}
        set username-case-sensitive {enable | disable}
    next
end
```

|                                                         |                                                                                                                                                                                         |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>password-encoding {auto   ISO-8859-1}</code>      | Set the password encoding to use the original encoding or ISO-8859-1 (default = auto). The <code>auth-type</code> must be <code>auto</code> or <code>pap</code> to change this setting. |
| <code>username-case-sensitive {enable   disable}</code> | Enable/disable case sensitive usernames (default = disable).                                                                                                                            |

## Using multiple RADIUS servers

There are several ways to implement multiple RADIUS servers, and each has a different effect on user authentication. The three main options available are:

- [Add a second \(or third\) RADIUS server in the same profile.](#)
- [Add a second RADIUS server profile, and add both to the same user group.](#)
- [Use two RADIUS server profiles for two user groups \(one for each\).](#)

## Adding a second server in a RADIUS profile

A second RADIUS server can be configured in the same RADIUS profile so in the event the first RADIUS server does not respond, the second server can be checked. If the first RADIUS server responds with an Access-Reject, no further servers are queried.

**To add a second server in a RADIUS profile:**

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Enter the following:

|                              |                                                          |
|------------------------------|----------------------------------------------------------|
| <b>Name</b>                  | <i>RADIUS_with_2ndary</i>                                |
| <b>Authentication method</b> | <i>Default</i>                                           |
| <b>Primary Server</b>        |                                                          |
| <b>IP/Name</b>               | <i>1.1.1.1</i>                                           |
| <b>Secret</b>                | Enter the password used to connect to the RADIUS server. |
| <b>Secondary Server</b>      |                                                          |
| <b>IP/Name</b>               | <i>2.2.2.2</i>                                           |
| <b>Secret</b>                | Enter the password used to connect to the RADIUS server. |

The screenshot shows the 'New RADIUS Server' configuration window. The 'Name' field is set to 'RADIUS\_with\_2ndary'. The 'Authentication method' is set to 'Default'. The 'NAS IP' field is empty. The 'Include in every user group' checkbox is unchecked. The 'Primary Server' section has 'IP/Name' set to '1.1.1.1' and 'Secret' masked with dots. The 'Secondary Server' section has 'IP/Name' set to '2.2.2.2' and 'Secret' masked with dots. There are buttons for 'Test Connectivity' and 'Test User Credentials' for both servers. On the right side, there are links for 'API Preview', 'Documentation', 'Online Help', and 'Video Tutorials'. At the bottom, there are 'OK' and 'Cancel' buttons.

3. Click **OK**.

## Adding two RADIUS server profiles in the same user group

When two separate RADIUS profiles are added to a user group, the FortiGate sends an Access-Request simultaneously to both RADIUS servers, and authentication succeeds if either server sends back an Access-Accept. This example includes the settings from the previous example where one or more of the RADIUS server profiles has a secondary

server configured. In this case, the secondary server in the *RADIUS\_with\_2ndary* profile, 2.2.2.2, is only checked if the primary server of this profile times out and the *fac\_radius\_server* profile does not return an Access-Accept.

#### To add two RADIUS server profiles in the same user group:

1. Go to *User & Authentication > RADIUS Servers*, click *Create New*, and configure the RADIUS servers as needed (refer to the [previous example](#)).
2. Go to *User & Authentication > User Groups* and click *Create New*.
3. Enter the following:

|             |                     |
|-------------|---------------------|
| <b>Name</b> | <i>RADIUS_GROUP</i> |
| <b>Type</b> | <i>Firewall</i>     |

4. In the *Remote Groups* table, click *Add*.
5. Select *RADIUS\_with\_2ndary* and click *OK*.
6. Click *Add*, select *fac\_radius\_server*, then click *OK*.

The screenshot shows the 'New User Group' configuration window. The 'Name' field is 'RADIUS\_GROUP' and the 'Type' is 'Firewall'. The 'Members' field is empty. The 'Remote Groups' table shows two entries: 'RADIUS\_with\_2ndary' and 'fac\_radius\_server'. The 'Add' button is highlighted in green. The 'OK' button is also highlighted in green.

7. Click *OK*.

## Using separate RADIUS server profiles for separate user groups

In this example, the FortiGate first evaluates if the user belongs to the first listed group (*radius\_group*) in the policy. If the user fails to authenticate to this group, then the FortiGate checks if the user can successfully authenticate to the second user group (*radius\_group\_2*). Refer to the first and second examples for detailed instructions.

#### To use separate RADIUS server profiles for separate user groups:

1. Configure the RADIUS server profiles:
  - a. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
  - b. Configure two RADIUS servers, *fac\_radius\_server* and *RADIUS\_with\_2ndary*, as needed (refer to the [previous example](#)).

## 2. Configure the firewall groups:

- a. Go to *User & Authentication > User Groups* and click *Create New*.
- b. Configure two firewall groups, one named *radius\_group* with remote server member *fac\_radius\_server*, and one named *radius\_group\_2* with remote server member *RADIUS\_with\_2ndary* (refer to the [previous example](#)).

| Group Name     | Group Type | Members            | Ref. |
|----------------|------------|--------------------|------|
| radius_group   | Firewall   | fac_radius_server  | 1    |
| radius_group_2 | Firewall   | RADIUS_with_2ndary | 1    |

## 3. Configure the firewall policy:

- a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
- b. For *Source*, click *User* then select *radius\_group* and *radius\_group\_2*. Click *Address* and select *LAN address*.
- c. Configure the other settings as needed.
- d. Click *OK*.

| Name       | From      | To  | Source                                        | Destination | Schedule | Service | Action   | NAT       |
|------------|-----------|-----|-----------------------------------------------|-------------|----------|---------|----------|-----------|
| LAN to WAN | LAN (LAN) | WAN | radius_group<br>radius_group_2<br>LAN address | all         | always   | ALL     | ✓ ACCEPT | ✓ Enabled |

## RADIUS AVPs and VSAs

This topic describes RADIUS Attribute Value Pairs (AVPs) and Vendor-Specific Attributes (VSAs).

### AVPs

RADIUS packets include a set of AVPs to identify information about the user, their location, and other information. The IETF defined a set of 255 standard attributes, which are well known and come in the form of Type, Length, Value (for more details, refer to [RFC 2865](#)). Of the standard 255, the FortiGate sends the following RADIUS attributes:

| RADIUS attribute number | Name              | Description                                                                                                                                                                          |
|-------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                       | User-Name         | Name of the user being authenticated by the RADIUS server.                                                                                                                           |
| 4                       | NAS-IP-Address    | IP address of the network access server (NAS) that is requesting authentication. The NAS is the FortiGate.                                                                           |
| 8                       | Framed-IP-Address | IP address to be configured for the user, by sending the IP address of a user to the RADIUS server in the Access-Request packet.                                                     |
| 25                      | Class             | Used in accounting packets and requests for firewall, WiFi, and proxy authentication. The attribute is returned in the Access-Accept message and is added to all accounting packets. |
| 26                      | Fortinet-VSA      | See <a href="#">VSAs</a> .                                                                                                                                                           |
| 32                      | NAS-Identifier    | Identifier or IP address of the NAS that is requesting authentication. The NAS is the FortiGate.                                                                                     |
| 42                      | Acct-Input-Octets | Number of octets received from the port over the course of this service being provided. Used to charge the user for the amount of traffic they used.                                 |

| RADIUS attribute number | Name               | Description                                                                                                                                                                                                                                       |
|-------------------------|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 43                      | Acct-Output-Octets | Number of octets sent to the port while delivering this service. Used to charge the user for the amount of traffic they used.                                                                                                                     |
| 44                      | Acct-Session-Id    | Unique number assigned to each start and stop record to make it easy to match them, and to eliminate duplicate records.                                                                                                                           |
| 55                      | Event-Timestamp    | Records the time that the event occurred on the NAS. The timestamp is measured in seconds since January 1, 1970 00:00 UTC. Before the Event-Timestamp attribute can be sent in a packet, make sure that the correct time is set on the FortiGate. |

## VSAs

Some vendors want or need to send attributes that do not match any of the defined IETF attributes. This can be accomplished by using RADIUS attribute type 26, which allows a vendor to encapsulate their own specific attributes in this standard AVP.

In order to support VSAs, the RADIUS server requires a dictionary to define the VSAs. This dictionary is typically supplied by the client or server vendor.

The Fortinet RADIUS vendor ID is 12356 and contains the following attributes:

| Attribute name                      | Attribute number | Attribute value format |
|-------------------------------------|------------------|------------------------|
| Fortinet-Group-Name                 | 1                | String                 |
| Fortinet-Client-IP-Address          | 2                | IP address             |
| Fortinet-Vdom-Name*                 | 3                | String                 |
| Fortinet-Client-IPv6-Address        | 4                | Octets                 |
| Fortinet-Interface-Name             | 5                | String                 |
| Fortinet-Access-Profile             | 6                | String                 |
| Fortinet-SSID                       | 7                | String                 |
| Fortinet-AP-Name                    | 8                | String                 |
| Fortinet-FAC-Auth-Status            | 11               | String                 |
| Fortinet-FAC-Token-ID               | 12               | String                 |
| Fortinet-FAC-Challenge-Code         | 15               | String                 |
| Fortinet-Webfilter-Category-Allow   | 16               | String                 |
| Fortinet-Webfilter-Category-Block   | 17               | Octets                 |
| Fortinet-Webfilter-Category-Monitor | 18               | Octets                 |
| Fortinet-AppCtrl-Category-Allow     | 19               | Octets                 |




| Attribute name                         | Attribute number | Attribute value format |
|----------------------------------------|------------------|------------------------|
| Fortinet-AppCtrl-Category-Block        | 20               | Octets                 |
| Fortinet-AppCtrl-Risk-Allow            | 21               | Octets                 |
| Fortinet-AppCtrl-Risk-Block            | 22               | Octets                 |
| Fortinet-WirelessController-Device-MAC | 23               | Ether                  |
| Fortinet-WirelessController-WTP-ID     | 24               | String                 |
| Fortinet-WirelessController-Assoc-Time | 25               | Date                   |
| Fortinet-FortiWAN-AVPair               | 26               | String                 |
| Fortinet-FDD-Access-Profile            | 30               | String                 |
| Fortinet-FDD-Trusted-Hosts             | 31               | String                 |
| Fortinet-FDD-SPP-Name                  | 32               | String                 |
| Fortinet-FDD-Is-System-Admin           | 33               | String                 |
| Fortinet-FDD-Is-SPP-Admin              | 34               | String                 |
| Fortinet-FDD-SPP-Policy-Group          | 35               | String                 |
| Fortinet-FDD-Allow-API-Access          | 36               | String                 |
| Fortinet-Fpc-User-Role                 | 40               | String                 |
| Fortinet-Tenant-Identification         | 41               | String                 |
| Fortinet-Host-Port-AVPair              | 42               | String                 |

\* For Fortinet-Vdom-Name, users can be tied to a specific VDOM on the FortiGate. Refer to the documentation provided by your RADIUS server for configuration details.

## Restricting RADIUS user groups to match selective users on the RADIUS server


When a user group is configured in FortiOS to authenticate against a RADIUS server, it will allow any valid user account on the RADIUS server to match that user group. Sometimes you might want to specify which users on the RADIUS server should match a particular user group on the FortiGate. This can be accomplished using the RADIUS attribute value pair (AVP) 26, known as a Vendor-Specific Attribute (VSA). This attribute allows the Fortinet-Group-Name VSA to be included in the RADIUS response. In FortiOS, the user group must be configured to specifically match this group.

In the following example, a RADIUS [Network Policy Server \(NPS\)](#) has been configured to have the Fortinet-Group-Name be *IT*, and assumes that the user group, *RADIUS\_IT* has been created, which authenticates to the *RADIUS\_NPS* server.

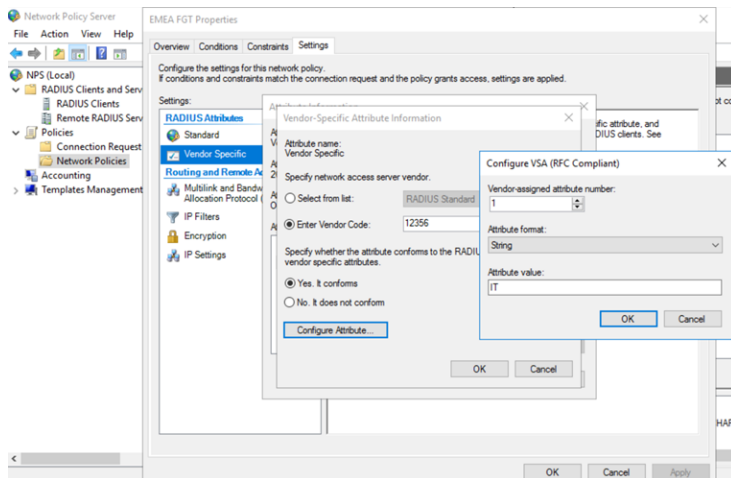

### To configure specific group matching in the GUI:

1. Go to *User & Authentication > User Groups* and edit the *RADIUS\_IT* group.
2. In the *Remote Groups* table, select the *RADIUS\_NPS* server and click *Edit*. The *Add Group Match* pane opens.
3. For *Groups*, select *Specify* and enter the group name configured on the RADIUS server (*IT*).
4. Click *OK*.

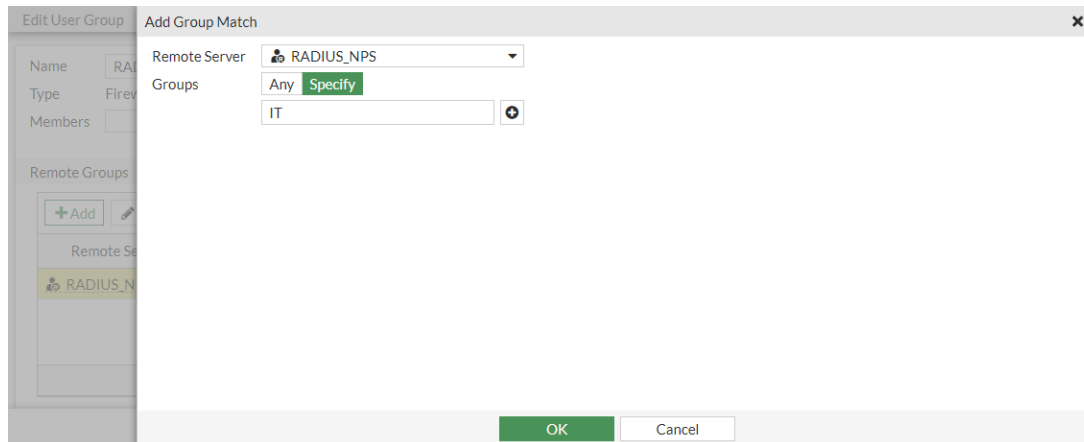

5. Click *OK*.

### To configure specific group matching in the CLI:

```
config user group
  edit "RADIUS_IT"
    set member "RADIUS_NPS"
    config match
      edit 1
        set server-name "RADIUS_NPS"
        set group-name "IT"
      next
    end
  next
end
```



To change the matching back to any group, under `config match`, enter `delete 1`. Changing the `group-name` to "Any" will cause the FortiGate to match the Fortinet-Group-Name with the literal string, Any.


## Configuring RADIUS SSO authentication

A common RADIUS SSO (RSSO) topology involves a medium-sized company network of users connecting to the Internet through the FortiGate and authenticating with a RADIUS server. The following describes how to configure FortiOS for this scenario. The example makes the following assumptions:

- VDOMs are not enabled.
- The `super_admin` account is used for all FortiGate configuration.
- A RADIUS server is installed on a server or FortiAuthenticator and uses default attributes.
- BGP is used for any dynamic routing.
- You have configured authentication event logging under *Log & Report*.

Example.com has an office with 20 users on the internal network who need access to the Internet. The office network is protected by a FortiGate-60C with access to the Internet through the wan1 interface, the user network on the internal interface, and all servers are on the DMZ interface. This includes an Ubuntu sever running FreeRADIUS. This example configures two users:

| User        | Account            |
|-------------|--------------------|
| Pat Lee     | plee@example.com   |
| Kelly Green | kgreen@example.com |

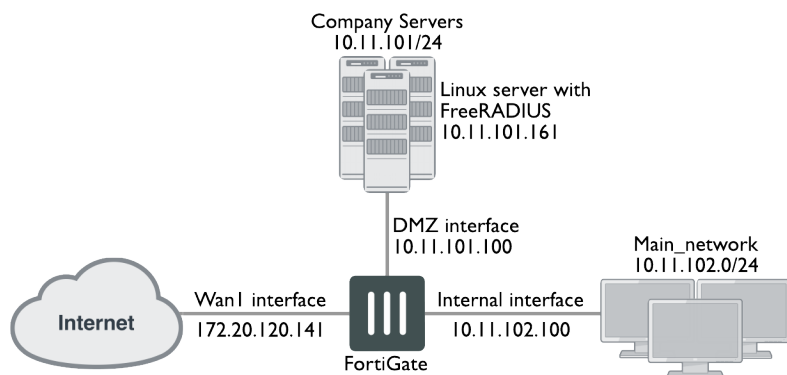

Configuring this example consists of the following steps:

1. [Configure RADIUS.](#)
2. [Configure FortiGate interfaces.](#)
3. [Configure a RSSO agent.](#)
4. [Create a RSSO user group.](#)
5. [Configure security policies.](#)
6. [Test the configuration.](#)

**To configure RADIUS:**

Configuring RADIUS includes configuring a RADIUS server such as FreeRADIUS on user's computers and configuring users in the system. In this example, Pat and Kelly belong to the `example.com_employees` group. After completing the configuration, you must start the RADIUS daemon. The users have a RADIUS client installed on their PCs that allow them to authenticate through the RADIUS server.

For any problems installing FreeRADIUS, see the [FreeRADIUS documentation](#).

**To configure FortiGate interfaces:**

You must define a DHCP server for the internal network, as this network type typically uses DHCP. The `wan1` and `dmz` interfaces are assigned static IP addresses and do not need a DHCP server. The following table shows the FortiGate interfaces used in this example:

| Interface | Subnet         | Act as DHCP server | Devices                         |
|-----------|----------------|--------------------|---------------------------------|
| wan1      | 172.20.120.141 | No                 | Internet service provider       |
| dmz       | 10.11.101.100  | No                 | Servers including RADIUS server |
| internal  | 10.11.102.100  | Yes: x.x.x.110-250 | Internal user network           |

1. Go to *Network > Interfaces*.
2. Edit wan1:

|                              |                              |
|------------------------------|------------------------------|
| <b>Alias</b>                 | Internet                     |
| <b>Addressing Mode</b>       | Manual                       |
| <b>IP/Network Mask</b>       | 172.20.120.141/255.255.255.0 |
| <b>Administrative Access</b> | HTTPS, SSH                   |
| <b>Enable DHCP Server</b>    | Not selected                 |
| <b>Comments</b>              | Internet                     |
| <b>Administrative Status</b> | Up                           |

3. Click *OK*.
4. Edit dmz:

|                                              |                             |
|----------------------------------------------|-----------------------------|
| <b>Alias</b>                                 | Servers                     |
| <b>Addressing Mode</b>                       | Manual                      |
| <b>IP/Network Mask</b>                       | 10.11.101.100/255.255.255.0 |
| <b>Administrative Access</b>                 | HTTPS, SSH, PING, SNMP      |
| <b>Enable DHCP Server</b>                    | Not selected                |
| <b>Listen for RADIUS Accounting Messages</b> | Select                      |

|                              |         |
|------------------------------|---------|
| <b>Comments</b>              | Servers |
| <b>Administrative Status</b> | Up      |

- Click *OK*.
- Edit internal:

|                              |                               |
|------------------------------|-------------------------------|
| <b>Alias</b>                 | Internal network              |
| <b>Addressing Mode</b>       | Manual                        |
| <b>IP/Network Mask</b>       | 10.11.102.100/255.255.255.0   |
| <b>Administrative Access</b> | HTTPS, SSH, PING              |
| <b>Enable DHCP Server</b>    | Select                        |
| <b>Address Range</b>         | 10.11.102.110 - 10.11.102.250 |
| <b>Netmask</b>               | 255.255.255.0                 |
| <b>Default Gateway</b>       | Same as Interface IP          |
| <b>Comments</b>              | Internal network              |
| <b>Administrative Status</b> | Up                            |

#### To create a RADIUS SSO agent:

- Go to *Security Fabric > External Connectors*.
- Click *Create New*.
- Under *Endpoint/Identity*, select *RADIUS Single Sign-On Agent*.
- Enable *Use RADIUS Shared Secret*. Enter the RADIUS server's shared secret.
- Enable *Send RADIUS Responses*. Click *OK*.

#### To create a RADIUS SSO user group:

- Go to *User & Authentication > User Groups*.
- Click *Create New*.
- For *Type*, select *RADIUS Single Sign-On (RSSO)*.
- In *RADIUS Attribute Value*, enter the name of the RADIUS user group that this local user group represents.
- Click *OK*.

### Configuring security policies

The following security policies are required for RADIUS SSO:

| Sequence Number | From     | To   | Type       | Schedule       | Description                        |
|-----------------|----------|------|------------|----------------|------------------------------------|
| 1               | internal | wan1 | RADIUS SSO | Business hours | Authenticate outgoing user traffic |

| Sequence Number | From     | To   | Type    | Schedule | Description                                                   |
|-----------------|----------|------|---------|----------|---------------------------------------------------------------|
| 2               | internal | wan1 | Regular | Always   | Allow essential network services and VoIP                     |
| 3               | dmz      | wan1 | Regular | Always   | Allow servers to access the Internet                          |
| 4               | internal | dmz  | Regular | Always   | Allow users to access servers                                 |
| 5               | any      | any  | Deny    | Always   | Implicit policy denying all traffic that has not been matched |

You must place the RADIUS SSO policy at the top of the policy list so that it is matched first. The only exception to this is if you have a policy to deny access to a list of banned users. In this case, you must put that policy at the top so that the RADIUS SSO does not mistakenly match a banned user or IP address.

You must configure lists before creating security policies.

### Schedule

You must configure a business\_hours schedule. You can configure a standard Monday to Friday 8 AM to 5 PM schedule, or whatever days and hours covers standard work hours at the company.

### Address groups

You must configure the following address groups:

| Name             | Interface | Address range included         |
|------------------|-----------|--------------------------------|
| internal_network | internal  | 10.11.102.110 to 10.11.102.250 |
| company_servers  | dmz       | 10.11.101.110 to 10.11.101.250 |

### Service groups

You must configure the service groups. The services listed are suggestions and you may include more or less as required:

| Name                       | Interface | Description of services to be included                                                                                                               |
|----------------------------|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| essential_network_services | internal  | Any network protocols required for normal network operation such as DNS, NTP, BGP                                                                    |
| essential_server_services  | dmz       | All the protocols required by the company servers such as BGP, HTTP, HTTPS, FTP, IMAP, POP3, SMTP, IKE, SQL, MYSQL, NTP, TRACEROUTE, SOCKs, and SNMP |

| Name          | Interface | Description of services to be included                   |
|---------------|-----------|----------------------------------------------------------|
| user_services | internal  | Any protocols required by users such as HTTP, HTTPS, FTP |

The following security policy configurations are basic and only include logging and default AV and IPS. These policies allow or deny access to non-RADIUS SSO traffic. These are essential as network services including DNS, NTP, and FortiGuard require access to the Internet.

#### To configure security policies:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Configure the policy as follows, then click *OK*:

|                            |                            |
|----------------------------|----------------------------|
| <b>Incoming Interface</b>  | Internal                   |
| <b>Source Address</b>      | internal_network           |
| <b>Outgoing Interface</b>  | wan1                       |
| <b>Destination Address</b> | all                        |
| <b>Schedule</b>            | always                     |
| <b>Service</b>             | essential_network_services |
| <b>Action</b>              | ACCEPT                     |
| <b>NAT</b>                 | ON                         |
| <b>Security Profiles</b>   | ON: AntiVirus, IPS         |
| <b>Log Allowed Traffic</b> | ON                         |
| <b>Comments</b>            | Essential network services |

4. Click *Create New*, and configure the new policy as follows, then click *OK*:

|                            |                           |
|----------------------------|---------------------------|
| <b>Incoming Interface</b>  | dmz                       |
| <b>Source Address</b>      | company_servers           |
| <b>Outgoing Interface</b>  | wan1                      |
| <b>Destination Address</b> | all                       |
| <b>Schedule</b>            | always                    |
| <b>Service</b>             | essential_server_services |
| <b>Action</b>              | ACCEPT                    |
| <b>NAT</b>                 | ON                        |
| <b>Security Profiles</b>   | ON: AntiVirus, IPS        |

|                            |                                        |
|----------------------------|----------------------------------------|
| <b>Log Allowed Traffic</b> | enable                                 |
| <b>Comments</b>            | Company servers accessing the Internet |

5. Click *Create New*, and configure the new policy as follows, then click *OK*:

|                            |                        |
|----------------------------|------------------------|
| <b>Incoming Interface</b>  | Internal               |
| <b>Source Address</b>      | internal_network       |
| <b>Outgoing Interface</b>  | dmz                    |
| <b>Destination Address</b> | company_servers        |
| <b>Schedule</b>            | always                 |
| <b>Service</b>             | all                    |
| <b>Action</b>              | ACCEPT                 |
| <b>NAT</b>                 | ON                     |
| <b>Security Profiles</b>   | ON: AntiVirus, IPS     |
| <b>Log Allowed Traffic</b> | enable                 |
| <b>Comments</b>            | Access company servers |

6. Click *Create New*, and configure the RADIUS SSO policy as follows, then click *OK*. This policy allows access for members of specific RADIUS groups.

|                            |                                                                                             |
|----------------------------|---------------------------------------------------------------------------------------------|
| <b>Incoming Interface</b>  | Internal                                                                                    |
| <b>Source Address</b>      | internal_network                                                                            |
| <b>Source User(s)</b>      | Select the user groups that you created for RSSO.                                           |
| <b>Outgoing Interface</b>  | wan1                                                                                        |
| <b>Destination Address</b> | all                                                                                         |
| <b>Schedule</b>            | business_hours                                                                              |
| <b>Service</b>             | ALL                                                                                         |
| <b>Action</b>              | ACCEPT                                                                                      |
| <b>NAT</b>                 | ON                                                                                          |
| <b>Security Profiles</b>   | ON: AntiVirus, Web Filter, IPS, and Email Filter. In each case, select the default profile. |


7. Place the RSSO policy higher in the security policy list than more general policies for the same interfaces. Click *OK*.

### To test the configuration:

Once configured, a user only needs to log in to their PC using their RADIUS account. After that, when they attempt to access the Internet, the FortiGate uses their session information to get their RADIUS information. Once the user is verified, they can access the website.



1. The user logs on to their PC and tries to access the Internet.
2. The FortiGate contacts the RADIUS server for the user's information. Once confirmed, the user can access the Internet. Each step generates logs that enable you to verify that each step succeeded.
3. If a step does not succeed, confirm that your configuration is correct.

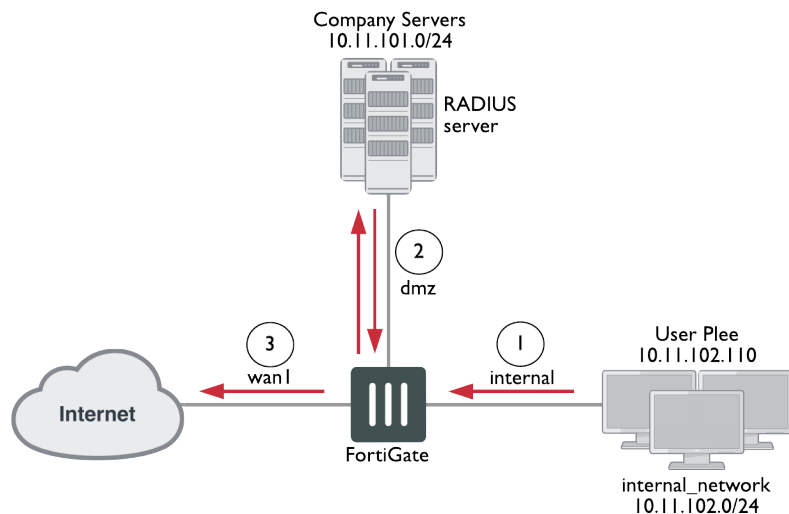

## RSA ACE (SecurID) servers

SecurID is a two-factor system produced by the company RSA that uses one-time password (OTP) authentication. This system consists of the following:

- Portable tokens that users carry
- RSA ACE/Server
- Agent host (the FortiGate)

When using SecurID, users carry a small device or "token" that generates and displays a pseudo-random password. According to RSA, each SecurID authenticator token has a unique 64-bit symmetric key that is combined with a powerful algorithm to generate a new code every 60 seconds. The token is time-synchronized with the SecurID RSA ACE/Server.

The RSA ACE/Server is the SecurID system's management component. It stores and validates the information about the SecurID tokens allowed on your network. Alternately, the server can be an RSA SecurID 130 appliance.

The agent host is the server on your network. In this case, this is the FortiGate, which intercepts user logon attempts. The agent host gathers the user ID and password entered from the SecurID token and sends the information to the RSA ACE/Server for validation. If valid, the RSA ACE/Server returns a reply indicating that it is a valid logon and FortiOS allows the user access to the network resources specified in the associated security policy.

Configuring SecurID with FortiOS consists of the following:

1. Configure the RSA and RADIUS servers to work with each other. See RSA server documentation.
2. Do one of the following:
  - a. [Configure the RSA SecurID 130 appliance.](#)
  - b. [Configure the FortiGate as an agent host on the RSA ACE/Server.](#)
3. [Configure the RADIUS server in FortiOS.](#)
4. [Create a SecurID user group.](#)

5. [Create a SecurID user.](#)
6. [Configure authentication with SecurID.](#)

The following instructions are based on RSA ACE/Server 5.1 and RSA SecurID 130 appliance. They assume that you have successfully completed all external RSA and RADIUS server configuration.

In this example, the RSA server is on the internal network and has an IP address of 192.128.100.000. The FortiOS internal interface address is 192.168.100.3. The RADIUS shared secret is fortinet123, and the RADIUS server is at IP address 192.168.100.202.

#### To configure the RSA SecurID 130 appliance:

1. Log on to the SecurID IMS console.
2. Go to *RADIUS > RADIUS clients*, then select *Add New*.

| RADIUS Client Basics        |                                                                             |
|-----------------------------|-----------------------------------------------------------------------------|
| <b>Client Name</b>          | FortiGate                                                                   |
| <b>Associated RSA Agent</b> | FortiGate                                                                   |
| RADIUS Client Settings      |                                                                             |
| <b>IP Address</b>           | Enter the FortiOS internal interface. In this example, it is 192.168.100.3. |
| <b>Make / Model</b>         | Select <i>Standard Radius</i> .                                             |
| <b>Shared Secret</b>        | Enter the RADIUS shared secret. In this example, it is fortinet123.         |
| <b>Accounting</b>           | Leave unselected.                                                           |
| <b>Client Status</b>        | Leave unselected.                                                           |

3. Configure your FortiGate as a SecurID client:
4. Click *Save*.

#### To configure the FortiGate as an agent host on the RSA ACE/Server:

1. On the RSA ACE/Server, go to *Start > Programs > RSA ACE/Server*, then *Database Administration - Host Mode*.
2. From the *Agent Host* menu, select *Add Agent Host*.
3. Configure the following:

|                        |                                                                             |
|------------------------|-----------------------------------------------------------------------------|
| <b>Name</b>            | FortiGate                                                                   |
| <b>Network Address</b> | Enter the FortiOS internal interface. In this example, it is 192.168.100.3. |
| <b>Secondary Nodes</b> | You can optionally enter other IP addresses that resolve to the FortiGate.  |

For more information, see the RSA ACE/Server documentation.

#### To configure the RADIUS server in FortiOS:

1. Go to *User & Authentication > RADIUS Servers*, then click *Create New*.
2. Configure the following:

|                              |                                                                                                                                |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                  | RSA                                                                                                                            |
| <b>Authentication method</b> | Select <i>Default</i> .                                                                                                        |
| <b>Primary Server</b>        |                                                                                                                                |
| <b>IP/Name</b>               | 192.168.100.102. You can click <i>Test</i> to ensure the IP address is correct and that FortiOS can contact the RADIUS server. |
| <b>Secret</b>                | fortinet123                                                                                                                    |

3. Click *OK*.

#### To create a SecurID user group:

1. Go to *User & Authentication > User Groups*. Click *Create New*.
2. Configure the following:

|             |           |
|-------------|-----------|
| <b>Name</b> | RSA_group |
| <b>Type</b> | Firewall  |

3. In *Remote Groups*, click *Add*, then select the RSA server.
4. Click *OK*.

#### To create a SecurID user:

1. Go to *User & Authentication > User Definition*. Click *Create New*.
2. Configure the following:

|                      |                                            |
|----------------------|--------------------------------------------|
| <b>User Type</b>     | Remote RADIUS User                         |
| <b>Type</b>          | wloman                                     |
| <b>RADIUS Server</b> | RSA                                        |
| <b>Contact Info</b>  | (Optional) Enter email or SMS information. |
| <b>User Group</b>    | RSA_group                                  |

3. Click *Create*.

You can test the configuration by entering the `diagnose test authserver radius RSA auto wloman 111111111` command. The series of 1s is the OTP that your RSA SecurID token generates that you enter for access.

### Configuring authentication with SecurID

You can use the SecurID user group in several FortiOS features that authenticate by user group:

- [Security policy on page 2110](#)
- [IPsec VPN XAuth on page 2110](#)
- [PPTP VPN on page 2110](#)
- SSL VPN

Unless stated otherwise, the following examples use default values.

## Security policy

The example creates a security policy that allows HTTP, FTP, and POP3 traffic from the internal interface to WAN1. If these interfaces are not available in FortiOS, substitute other similar interfaces.

### To configure a security policy with SecurID authentication:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Configure the following:

|                            |                                                                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Incoming Interface</b>  | internal                                                                                                                                                             |
| <b>Source Address</b>      | all                                                                                                                                                                  |
| <b>Source User(s)</b>      | RSA_group                                                                                                                                                            |
| <b>Outgoing Interface</b>  | wan1                                                                                                                                                                 |
| <b>Destination Address</b> | all                                                                                                                                                                  |
| <b>Schedule</b>            | always                                                                                                                                                               |
| <b>Service</b>             | HTTP, FTP, POP3                                                                                                                                                      |
| <b>Action</b>              | ACCEPT                                                                                                                                                               |
| <b>NAT</b>                 | On                                                                                                                                                                   |
| <b>Shared Shaper</b>       | If you want to limit traffic or guarantee minimum bandwidth for traffic that uses the SecurID security policy, enable and use the default shaper, guarantee-100kbps. |
| <b>Log Allowed Traffic</b> | Enable if you want to generate usage reports on traffic that this policy has authenticated.                                                                          |

4. Click *OK*.

## IPsec VPN XAuth

In *VPN > IPsec Wizard*, select the SecurID user group on the *Authentication* page. The SecurID user group members must enter their SecurID code to authenticate.

## PPTP VPN

When configuring PPTP in the CLI, set `usrgrp` to the SecurID user group.

## SSL VPN

You must map the SecurID user group to the portal that will serve SecurID users and include the SecurID user group in the security policy's *Source User(s)* field.

**To map the SecurID group to an SSL VPN portal:**


1. Go to *VPN > SSL-VPN Settings*.
2. Under *Authentication/Portal Mapping*, click *Create New*.
3. Configure the following:

|                     |                            |
|---------------------|----------------------------|
| <b>Users/Groups</b> | RSA_group                  |
| <b>Portal</b>       | Select the desired portal. |

4. Click *OK*.

**Support for Okta RADIUS attributes filter-Id and class**

RADIUS user group membership information can be returned in the filter-Id (11) and class (25) attributes in RADIUS Access-Accept messages. The group membership information can be used for group matching in FortiGate user groups in firewall policies and for FortiGate wildcard administrators with remote RADIUS authentication.

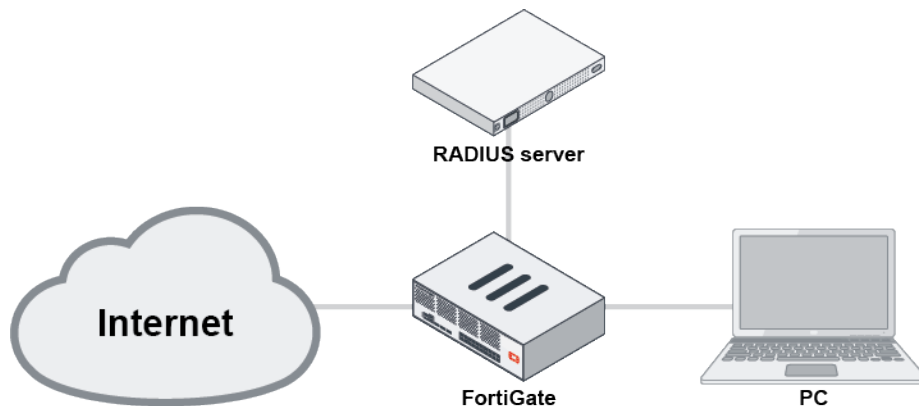

In this example, a FortiAuthenticator is used as the RADIUS server. A local RADIUS user on the FortiAuthenticator is configured with two groups in the filter-Id attribute: *okta-group1* and *okta-group2*.

**To create the RADIUS user and set the attribute type to override group information:**

```

config user radius
  edit "FAC193"
    set server "10.1.100.189"
    set secret *****
    set group-override-attr-type filter-Id
  next
end

```

FortiOS will only use the configured filter-Id attribute, even if the RADIUS server sends group names in both class and filter-id attributes. To return group membership information from the class attribute instead, set *group-override-attr-type* to *class*.

**To configure group match in the user group:**

1. Go to *User & Authentication > User Groups*.
2. Click *Create New*.

3. Enter a name for the group, and set *Type* to *Firewall*.
4. In the *Remote Groups* table, click *Add*.
5. Set *Remote Server* to the just created RADIUS server, *FAC193*.
6. Set *Groups* to *Specify*, and enter the group name, *okta-group2*. The string must match the group name configured on the RADIUS server for the filter-Id attribute.

The screenshot shows the 'Add Group Match' dialog box. In the background, the 'New User Group' form is visible with 'Name' set to 'radius' and 'Type' set to 'Firewall'. The 'Add Group Match' dialog has 'Remote Server' set to 'FAC193' and 'Groups' set to 'Specify' with 'okta-group2' entered. At the bottom are 'OK' and 'Cancel' buttons.

7. Click *OK*.  
The remote server is added to the *Remote Groups* table.
8. Click *OK*.
9. Add the new user group to a firewall policy and generate traffic on the client PC that requires firewall authentication, such as connecting to an external web server.
10. After authentication, on the FortiGate, verify that traffic is authorized in the traffic log:
  - a. Go to *Log & Report > Forward Traffic*.
  - b. Verify that the traffic was authorized.

**To use the remote user group with group match in a system wildcard administrator configuration:**

1. Go to *System > Administrators*.
2. Edit an existing administrator, or create a new one.
3. Set *Type* to *Match all users in a remote server group*.
4. Set *Remote User Group* to the remote server.

The screenshot shows the 'New Administrator' form. The 'Type' dropdown is set to 'Match all users in a remote server group'. The 'Remote User Group' dropdown is set to 'radius'. The 'User Group' dropdown is set to 'radius'. At the bottom are 'OK' and 'Cancel' buttons.

5. Configure the remaining settings as required.
6. Click *OK*.
7. Log in to the FortiGate using the remote user credentials on the RADIUS server.  
If the correct group name is returned in the filter-Id attribute, administrative access is allowed.

## Sending multiple RADIUS attribute values in a single RADIUS Access-Request

A managed FortiSwitch can be configured to send multiple RADIUS attribute values in a single RADIUS Access-Request. This option is configured per RADIUS user, and is set to `none` by default.

The available service type options are:

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| login                   | User should be connected to a host.                                                |
| framed                  | User use Framed Protocol.                                                          |
| callback-login          | User disconnected and called back.                                                 |
| callback-framed         | User disconnected and called back, then a Framed Protocol.                         |
| outbound                | User granted access to outgoing devices.                                           |
| administrative          | User granted access to the administrative unsigned interface.                      |
| nas-prompt              | User provided a command prompt on the NAS.                                         |
| authenticate-only       | Authentication requested, and no authentication information needs to be returned.  |
| callback-nas-prompt     | User disconnected and called back, then provided a command prompt.                 |
| call-check              | Used by the NAS in an Access-Request packet, Access-Accept to answer the call.     |
| callback-administrative | User disconnected and called back, granted access to the admin unsigned interface. |

**To configure a managed FortiSwitch to the RADIUS attributes login, framed, and authenticate-only all at the same time:**

```
config user radius
    edit "Radius_Server"
        set switch-controller-service-type login framed authenticate-only
        ....
    next
end
```


## Traffic shaping based on dynamic RADIUS VSAs

A FortiGate can use the WISPr-Bandwidth-Max-Down and WISPr-Bandwidth-Max-Up dynamic RADIUS VSAs (vendor-specific attributes) to control the traffic rates permitted for a certain device. The FortiGate can apply different traffic shaping to different users who authenticate with RADIUS based on the returned RADIUS VSA values. When the same user logs in from an additional device, the RADIUS server will send a CoA (change of authorization) message to update the bandwidth values to  $1/N$  of the total values, where  $N$  is the number of logged in devices from the same user.



This feature is not supported on NP hardware. NP offloading is automatically disabled on the policy if this feature is enabled.


When a user logs in to two devices through RADIUS authentication. The authentication and authorization flow is as follows:

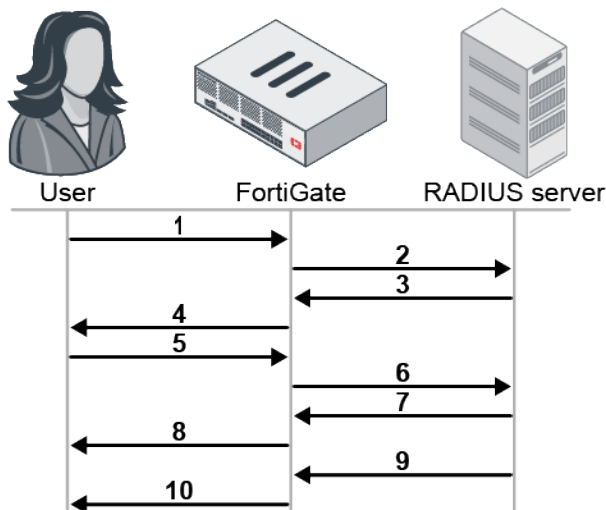

1. The user logs in to a device and the authentication is sent to the FortiGate.
2. The FortiGate sends the Access-Request message to the RADIUS server.
3. The RADIUS server sends the Access-Accept message to the FortiGate. The server also returns the WISPr-Bandwidth-Max-Up and WISPr-Bandwidth-Max-Down VSAs.
4. Based on the VSA values, the FortiGate applies traffic shaping for the upload and download speeds based on its IP.
5. The user logs in to a second device and the authentication is sent to the FortiGate.
6. The FortiGate sends the Access-Request message to the RADIUS server.
7. The RADIUS server sends the Access-Accept message to the FortiGate. The server also returns the WISPr-Bandwidth-Max-Up and WISPr-Bandwidth-Max-Down VSAs at half the value from the first device.
8. Based on the VSA values, the FortiGate applies traffic shaping for the upload and download speeds on the second device based on its IP.
9. The RADIUS server sends a CoA message and returns WISPr-Bandwidth-Max-Up and WISPr-Bandwidth-Max-Down VSAs for the first device at half the value.
10. Based on the VSA values, the FortiGate updates traffic shaping for the upload and download speeds on the first device based on its IP.

## Example

In this example, the FortiGate is configured to dynamically shape user traffic based on the WISPr-Bandwidth-Max-Up and WISPr-Bandwidth-Max-Down VSAs returned by the RADIUS server when the user logs in through firewall authentication.

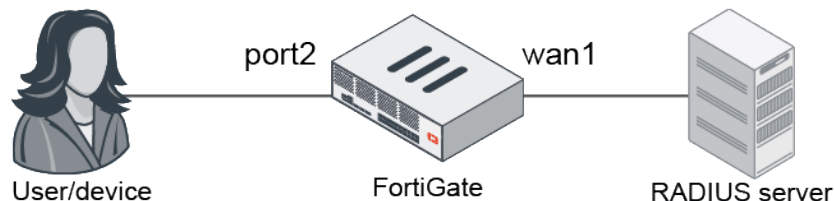



**To configure traffic shaping based on dynamic RADIUS VSAs:**

1. Configure the RADIUS server users file to identify WISPr-Bandwidth-Max-Up and WISPr-Bandwidth-Max-Down:



The WISPr-Bandwidth is measured in bps, and the FortiOS dynamic shaper is measured in Bps.

---

```
WISPr-Bandwidth-Max-Up = 1004857,
WISPr-Bandwidth-Max-Down = 504857,
```

2. In FortiOS, configure the RADIUS server:

```
config user radius
  edit "rad1"
    set server "172.16.200.44"
    set secret *****
    set radius-coa enable
    set acct-all-servers enable
    config accounting-server
      edit 1
        set status enable
        set server "172.16.200.44"
        set secret *****
      next
    end
  next
end
```

3. Configure the RADIUS user group:

```
config user group
  edit "group_radius"
    set member "rad1"
  next
end
```

4. Configure the firewall policy with dynamic shaping and the RADIUS group:

```
config firewall policy
  edit 2
    set srcintf "port2"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set srcaddr6 "all6"
    set dstaddr6 "all6"
    set action accept
    set schedule "always"
    set service "ALL"
    set dynamic-shaping enable
    set groups "group_radius"
    set nat enable
  next
end
```

## Verification

After a client PC is authenticated by the RADIUS server, dynamic shaping is applied to the client based on the IP address.

Use the following commands to monitor the dynamic shaper:

```
# diagnose firewall shaper dynamic-shaper stats
# diagnose firewall shaper dynamic-shaper list {ip | ipv6 | user} <address or username>
```

### Use case 1

User1 is paying for rate plan A that limits their maximum bandwidth to 10 Mbps download and 5 Mbps upload. User2 is paying for rate plan B that limits their maximum bandwidth to 5 Mbps download and 5 Mbps upload. The speeds in both plans are provided by best effort, so there is no guaranteed minimum bandwidth.

User1 logs in to pc1 with RADIUS authentication and IP-based dynamic shaping is applied. User2 logs in to pc2 with RADIUS authentication and IP-based dynamic shaping is applied.

#### To verify the dynamic shaping:

##### 1. On pc1, verify the bandwidth and transfer speed:

```
root@pc1:~# iperf -c 172.16.200.44 -u -t 25 -b 20M
-----
Client connecting to 172.16.200.44, UDP port 5001
Sending 1470 byte datagrams
UDP buffer size: 208 KByte (default)
-----
[ 3] local 10.1.100.11 port 50510 connected with 172.16.200.44 port 5001
[ ID] Interval      Transfer      Bandwidth
[ 3] 0.0-25.0 sec  59.6 MBytes  20.0 Mbits/sec
[ 3] Sent 42518 datagrams
[ 3] Server Report:
[ 3] 0.0-25.3 sec  30.1 MBytes  9.99 Mbits/sec  15.651 ms 21058/42518 (50%)
```

##### 2. On pc2, verify the bandwidth and transfer speed:

```
root@pc2:~# iperf -c 172.16.200.44 -u -t 25 -b 20M
-----
Client connecting to 172.16.200.44, UDP port 5001
Sending 1470 byte datagrams
UDP buffer size: 208 KByte (default)
-----
[ 3] local 10.1.100.22 port 52814 connected with 172.16.200.44 port 5001
[ ID] Interval      Transfer      Bandwidth
[ 3] 0.0-25.0 sec  59.6 MBytes  20.0 Mbits/sec
[ 3] Sent 42518 datagrams
[ 3] Server Report:
[ 3] 0.0-25.3 sec  15.1 MBytes  5.03 Mbits/sec  15.652 ms 31710/42514 (75%)
```

##### 3. In FortiOS, check the authentication list:

```
# diagnose firewall auth list
10.1.100.11, test-shaper1
src_mac: **:**:**:**:**:**
```

```

        type: fw, id: 0, duration: 38, idled: 16
        expire: 562
        flag(814): hard radius no_idle
        server: rad1
        packets: in 8207 out 3999, bytes: in 12306164 out 226963
        group_id: 3
        group_name: group_radius
10.1.100.22, test-shaper2
        src_mac: **:**:**:**:**:**
        type: fw, id: 0, duration: 24, idled: 24
        expire: 156, max-life: 35976
        flag(814): hard radius no_idle
        server: rad1
        packets: in 0 out 5, bytes: in 0 out 300
        group_id: 3
        group_name: group_radius
----- 2 listed, 0 filtered -----

```

#### 4. Check the dynamic shaper list:

```

# diagnose firewall shaper dynamic-shaper list
addr: 10.1.100.11
bandwidth(original/reply): 1250000 Bps/625000 Bps
current bandwidth(original/reply): 1237072 Bps/0 Bps
allow packets(original/reply): 38524/14
allow bytes(original/reply): 55270378/11285
drop packets(original/reply): 10136/0
drop bytes(original/reply): 13516198/0
life: 441
idle: 0/40
idle time limit: 600 s

addr: 10.1.100.22
bandwidth(original/reply): 625000 Bps/625000 Bps
current bandwidth(original/reply): 622909 Bps/0 Bps
allow packets(original/reply): 3232/3
allow bytes(original/reply): 4841536/243
drop packets(original/reply): 2753/0
drop bytes(original/reply): 4123994/0
life: 10
idle: 0/10
idle time limit: 36000 s

```

#### 5. Check the session list:

```

# diagnose sys session list
session info: proto=6 proto_state=05 duration=3 expire=116 timeout=3600 flags=00000004
socktype=4 sockport=10001 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/0
state=redir log local may_dirty auth dst-vis f00 dynamic_shaping
statistic(bytes/packets/allow_err): org=0/0/0 reply=638/4/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 185/1
orgin->sink: org pre->post, reply pre->post dev=20->17/17->20 gwy=172.16.200.44/0.0.0.0
hook=pre dir=org act=noop 10.1.100.22:35561->172.16.200.44:80(0.0.0.0:0)

```

```

hook=post dir=reply act=noop 172.16.200.44:80->10.1.100.22:35561(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=**:**:**:**:**:** dst_mac=**:**:**:**:**:**
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=1
serial=0005994d tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason:  redir-to-av auth disabled-by-policy

session info: proto=6 proto_state=05 duration=122 expire=38 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
user=test-shaper1 auth_server=rad1 state=log may_dirty authed f00 dynamic_shaping acct-
ext
statistic(bytes/packets/allow_err): org=383611/6604/1 reply=26382470/17592/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=20->17/17->20 gwy=172.16.200.44/10.2.2.1
hook=post dir=org act=snat 10.1.100.11:54140->172.16.200.44:80(172.16.200.2:54140)
hook=pre dir=reply act=dnat 172.16.200.44:80->172.16.200.2:54140(10.1.100.11:54140)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=**:**:**:**:**:** dst_mac=**:**:**:**:**:**
misc=0 policy_id=2 auth_info=3 chk_client_info=0 vd=1
serial=000598c5 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000001 no_offload
no_ofld_reason:  disabled-by-policy
total session 2

```

## 6. Check the policy traffic:

```

# diagnose firewall iprope list 100004
policy index=2 uuid_idx=60 action=accept
flag (8052128): redir auth nat nids_raw master use_src pol_stats
flag2 (4030): fw wso resolve_sso
flag3 (200000b0): !sp link-local best-route dynamic-shaping
schedule(always)
cos_fwd=255 cos_rev=255
group=00100004 av=00004e20 au=00000003 split=00000000
host=1 chk_client_info=0x1 app_list=0 ips_view=0
misc=0
zone(1): 20 -> zone(1): 17
source(1): 0.0.0.0-255.255.255.255, uuid_idx=32,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=32,
user group(1): 3
service(1):
    [0:0x0:0/(0,65535)->(0,65535)] helper:auto

```

## Use case 2

A user logs in to a device (pc1, 10.1.100.11 ) and has a maximum bandwidth of 10 Mbps download and 5 Mbps upload. The same user logs in to a second device (pc2, 10.1.100.22) and the RADIUS server sends a CoA request with the

WISPr-Bandwidth-Max to pc1. The maximum bandwidth on pc1 changes to 5 Mbps download and 2.5Mbps upload. On pc2, the maximum bandwidth is also 5 Mbps download and 2.5Mbps upload.

When the user logs out from pc1, the RADIUS server sends CoA request with the new WISPr-Bandwidth-Max for pc2. The FortiGate updates the authentication user list and dynamic shaper for pc2. The maximum bandwidth on pc2 changes to 10 Mbps download and 5 Mbps upload.

### To verify the dynamic shaping:

#### 1. Check the dynamic shaper list after the user logs in to pc1:

```
# diagnose firewall shaper dynamic-shaper list
addr: 10.1.100.11
bandwidth(original/reply): 1250000 Bps/625000 Bps
current bandwidth(original/reply): 0 Bps/0 Bps
allow packets(original/reply): 0/3
allow bytes(original/reply): 0/243
drop packets(original/reply): 0/0
drop bytes(original/reply): 0/0
life: 491
idle: 4/4
idle time limit: 86400 s
```

#### 2. Check the dynamic shaper list after the user logs in to pc2:

```
# diagnose firewall shaper dynamic-shaper list
addr: 10.1.100.11
bandwidth(original/reply): 625000 Bps/312500 Bps
current bandwidth(original/reply): 0 Bps/0 Bps
allow packets(original/reply): 0/0
allow bytes(original/reply): 0/0
drop packets(original/reply): 0/0
drop bytes(original/reply): 0/0
life: 652
idle: 5/5
idle time limit: 600 s
```

```
addr: 10.1.100.22
bandwidth(original/reply): 625000 Bps/312500 Bps
current bandwidth(original/reply): 0 Bps/0 Bps
allow packets(original/reply): 0/3
allow bytes(original/reply): 0/243
drop packets(original/reply): 0/0
drop bytes(original/reply): 0/0
life: 3
idle: 3/3
idle time limit: 86400 s
```

#### 3. Check the authentication list:

```
# diagnose firewall auth list
10.1.100.11, test
src_mac: **:**:**:**:*:**
type: fw, id: 0, duration: 171, idled: 11
expire: 589, max-life: 589
flag(814): hard radius no_idle
server: rad1
packets: in 0 out 0, bytes: in 0 out 0
```

```

        group_id: 15
        group_name: group_radius
10.1.100.22, test
        src_mac: **:***:***:***:***:***
        type: fw, id: 0, duration: 9, idled: 9
        expire: 86391
        flag(814): hard radius no_idle
        server: rad1
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 15
        group_name: group_radius
----- 2 listed, 0 filtered -----

```

#### 4. Check the dynamic shaper list after the user logs out from pc1:

```

# diagnose firewall shaper dynamic-shaper list
addr: 10.1.100.22
bandwidth(original/reply): 1250000 Bps/625000 Bps
current bandwidth(original/reply): 0 Bps/0 Bps
allow packets(original/reply): 0/0
allow bytes(original/reply): 0/0
drop packets(original/reply): 0/0
drop bytes(original/reply): 0/0
life: 414
idle: 9/9
idle time limit: 600 s

```

#### 5. Check the authentication list again:

```

# diagnose firewall auth list
10.1.100.22, test
        src_mac: **:***:***:***:***:***
        type: fw, id: 0, duration: 453, idled: 49
        expire: 551, max-life: 551
        flag(814): hard radius no_idle
        server: rad1
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 15
        group_name: group_radius
----- 1 listed, 0 filtered -----

```

## RADIUS Termination-Action AVP in wired and wireless scenarios

When authenticating with RADIUS in a wired or wireless scenario, the FortiGate can support proper handling of the Termination-Action AVP.


In a wired scenario, a hardware switch configured with 802.1X security authentication can read the Termination-Action attribute value from the RADIUS Access-Accept response. If the Termination-Action is 1, the FortiGate will initiate re-authentication when the session time has expired. During re-authentication, the port stays authorized. If the Termination-Action is 0, the session will be terminated.

In a wireless scenario, when a virtual AP is configured with WPA2-Enterprise security with RADIUS and has CoA enabled, it processes the RADIUS CoA request immediately upon receiving it and re-authenticates when the Termination-Action is 1.

## Wired example

This example has a FortiGate configured with a hardware switch with two ports: port3 and port5. The hardware switch is enabled with 802.1X security and assigned to a RADIUS user group. Upon a successful authentication, the RADIUS server responds with an Access-Accept containing the authentication Session-Timeout and Termination-Action attributes. In this example, the Termination-Action value is 1, which informs the client to re-authenticate when the session time expires. During this time, the FortiGate keeps the client/port authorized while it initiates the re-authentication with the RADIUS server.

The message exchange is as follows:

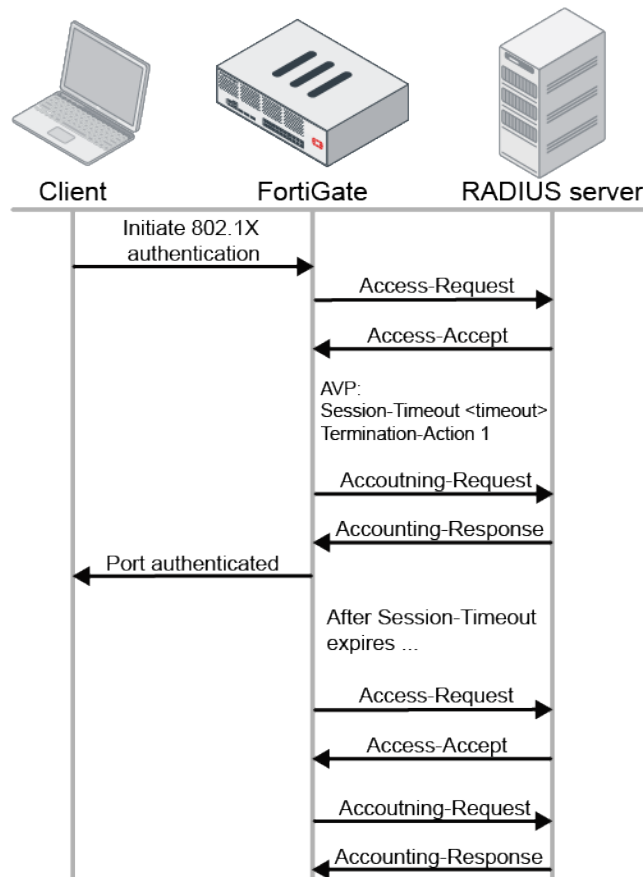

### To configure the RADIUS server and the FortiGate to handle the Termination-Action AVP:

1. On the RADIUS server, configure the Termination-Action AVP with the value `RADIUS-Request (1)` to indicate that re-authentication should occur upon expiration of the Session-Time.
2. On the FortiGate, configure the RADIUS server:

```

config user radius
  edit "rad1"
    set server "172.18.60.203"
    set secret ENC *****
    set radius-coa enable
    config accounting-server
      edit 1
        set status enable
    end
  end
end
  
```

```
        set server "172.18.60.203"
        set secret ENC *****
    next
end
next
end
```

### 3. Configure the RADIUS user group:

```
config user group
    edit "group_radius"
        set member "rad1"
    next
end
```

### 4. Configure the hardware switch with 802.1X enabled.

#### a. Configure the virtual switch settings:

```
config system virtual-switch
    edit hw2
        set physical-switch "sw0"
        config port
            edit port3
            next
            edit port5
            next
        end
    next
end
```

#### b. Configure the interface settings:

```
config system interface
    edit hw2
        set vdom vdom1
        set ip 6.6.6.1 255.255.255.0
        set allowaccess ping https ssh
        set stp enable
        set security-mode 802.1X
        set security-groups "group_radius"
    next
end
```

```
WARNING: Changing 802.1X could interrupt network connectivity on affected interfaces.
Do you want to continue? (y/n)y
```

### 5. On the client device, initiate 802.1X authentication, then verify that the switch port shows as authorized:

```
# diagnose sys 802-1x status
Virtual switch 'hw2' (default mode) 802.1x member status:
    port3: Link up, 802.1X state: unauthorized
    port5: Link up, 802.1X state: authorized
```

### 6. After successful authentication, wait for the session to timeout.

### 7. The FortiGate will keep the 802.1X port authenticated, and initiate re-authentication with the same Acct-Session-Id to the RADIUS server. The 802.1X status of the port remains unchanged:

```
# diagnose sys 802-1x status
Virtual switch 'hw2' (default mode) 802.1x member status:
```




```
port3: Link up, 802.1X state: unauthorized
port5: Link up, 802.1X state: authorized
```

## Wireless example

In this example, a virtual AP is configured with WPA2-Enterprise security with RADIUS and has CoA enabled. After a wireless user authenticates and connects to the wireless SSID, the RADIUS server triggers a CoA event with AVPs Session-timeout and a Termination-Action of 1. This signals the FortiGate to trigger re-authentication of the client, which the client immediately performs to stay connected to the wireless SSID.

The message exchange is as follows:

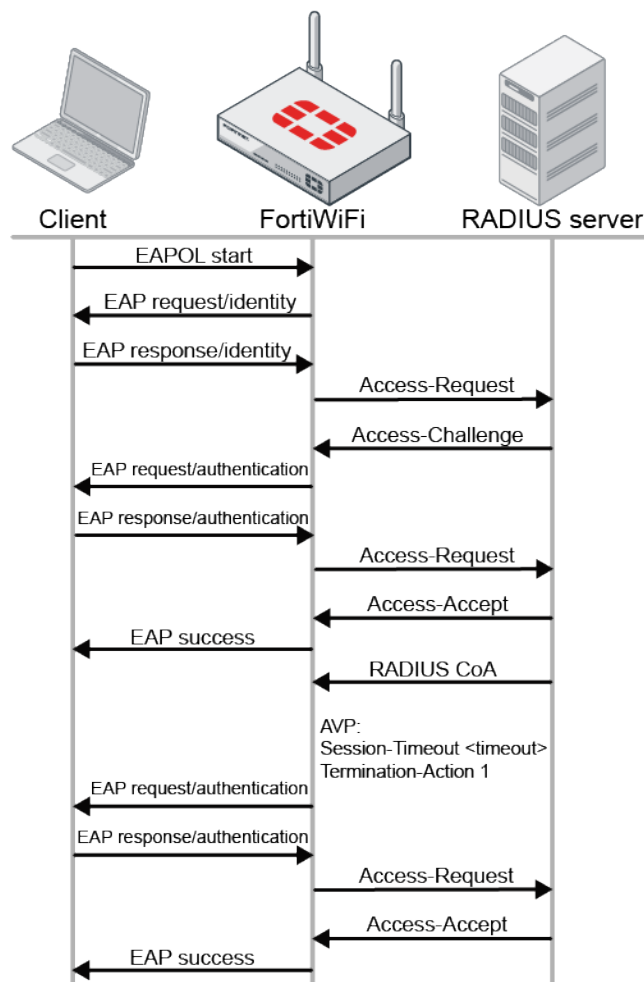

### To configure the FortiGate to handle the Termination-Action AVP:

#### 1. Configure the RADIUS server:

```
config user radius
  edit "peap"
    set server "172.16.200.55"
    set secret *****
    set radius-coa enable
```

```

    next
end

```

## 2. Configure the VAP:

```

config wireless-controller vap
    edit "wifi"
        set ssid "FWF-60E-coa"
        set security wpa2-only-enterprise
        set auth radius
        set radius-server "peap"
        set schedule "always"
    next
end

```

## 3. Verify that the wireless station connects to the SSID:

```

# diagnose wireless-controller wlap -d sta online
vf=0 wtp=1 rId=1 wlan=wifi vlan_id=0 ip=10.10.80.2 ip6=: mac=**:**:**:**:**:** vci=
host=wifi-qa-01 user=test1 group=group1 signal=-28 noise=-95 idle=1 bw=0 use=6 chan=149
radio_type=11AC security=wpa2_only_enterprise mpsk= encrypt=aes cp_authed=no online=yes
mimo=2

```

## 4. From the RADIUS server, manually trigger a RADIUS CoA event.

### a. RADIUS CoA sent to the FortiGate:

```

Sent CoA-Request Id 7 from 0.0.0.0:54158 to 172.16.200.201:3799 length 39
User-Name = "test1"
Session-Timeout = 120
Termination-Action = RADIUS-Request

```

### b. RADIUS CoA-ACK received from the FortiGate:

```

Received CoA-ACK Id 7 from 172.16.200.201:3799 to 0.0.0.0:0 length 44
Event-Timestamp = "Jan  5 2022 14:43:12 PST"
Message-Authenticator = 0x3311ba3b763d68da653ab34351b0308

```

## 5. On the wireless station console, verify that the re-authentication happens immediately:

```

root@wifi-qa-01:/home/wpa-test# wlan1: CTRL-EVENT-EAP-STARTED EAP authentication started
wlan1: CTRL-EVENT-EAP-PROPOSED-METHOD vendor=0 method=25
wlan1: CTRL-EVENT-EAP-METHOD EAP vendor 0 method 25 (PEAP) selected
EAP-TLV: TLV Result - Success - EAP-TLV/Phase2 Completed
wlan1: CTRL-EVENT-EAP-SUCCESS EAP authentication completed successfully
wlan1: PMKSA-CACHE-REMOVED **:**:**:**:**:** 0
wlan1: PMKSA-CACHE-ADDED **:**:**:**:**:** 0
wlan1: WPA: Key negotiation completed with **:**:**:**:**:** [PTK=CCMP GTK=CCMP]

```

# TACACS+ servers

TACACS+ is a remote authentication protocol that provides access control for routers, network access servers, and other network devices through one or more centralized servers.

FortiOS sends the following proprietary TACACS+ attributes to the TACACS+ server during authorization requests:

| Attribute      | Description                                              |
|----------------|----------------------------------------------------------|
| service=<name> | User must be authorized to access the specified service. |
| memberof       | Group that the user belongs to.                          |
| admin_prof     | Administrator profile (admin access only).               |



Only `memberof` and `admin_prof` attributes are parsed in authentication replies.

You can configure up to ten remote TACACS+ servers in FortiOS. You must configure at least one server before you can configure remote users.



A TACACS+ server must first be added in the CLI to make the option visible in the GUI.

### To configure TACACS+ authentication in the CLI:

#### 1. Configure the TACACS+ server entry:

```
config user tacacs+
  edit "TACACS-SERVER"
    set server <IP address>
    set key <string>
    set authen-type ascii
    set source-ip <IP address>
  next
end
```

#### 2. Configure the remote user group:

```
config user group
  edit "TACACS-GROUP"
    set group-type firewall
    set member "TACACS-SERVER"
  next
end
```

#### 3. Configure the remote user:

```
config system admin
  edit TACACS-USER
    set remote-auth enable
    set accprofile "super_admin"
    set vdom "root"
    set wildcard enable
    set remote-group "TACACS-GROUP"
  next
end
```

**To configure a TACACS+ server in the GUI:**

1. Go to *User & Authentication > TACACS+ Servers*.
2. Click *Create New*.
3. Configure the following settings:

|                            |                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                | Enter the TACACS+ server name.                                                                                                   |
| <b>Authentication Type</b> | Select the authentication type used for the TACACS+ server.<br>Selecting <i>Auto</i> tries PAP, MSCHAP, and CHAP, in that order. |
| <b>Server IP/Name</b>      | Enter the domain name or IP address for the primary server.                                                                      |
| <b>Server Secret</b>       | Enter the key to access the primary server.                                                                                      |

4. Click *OK*.

## SAML

The following topics provide information about SAML:

- [Outbound firewall authentication for a SAML user on page 2126](#)
- [SSL VPN with FortiAuthenticator as a SAML IdP on page 2128](#)
- [Using a browser as an external user-agent for SAML authentication in an SSL VPN connection on page 2128](#)
- [SAML authentication in a proxy policy on page 2132](#)
- [Configuring SAML SSO in the GUI on page 2136](#)
- [Outbound firewall authentication with Azure AD as a SAML IdP on page 2142](#)

### Outbound firewall authentication for a SAML user


When you configure a FortiGate as a service provider (SP), you can create an authentication profile that uses SAML for firewall authentication.



You must use the identity provider's (IdP) remote certificate on the SPs.

---

The following example uses a FortiGate as an SP and FortiAuthenticator as the IdP server:

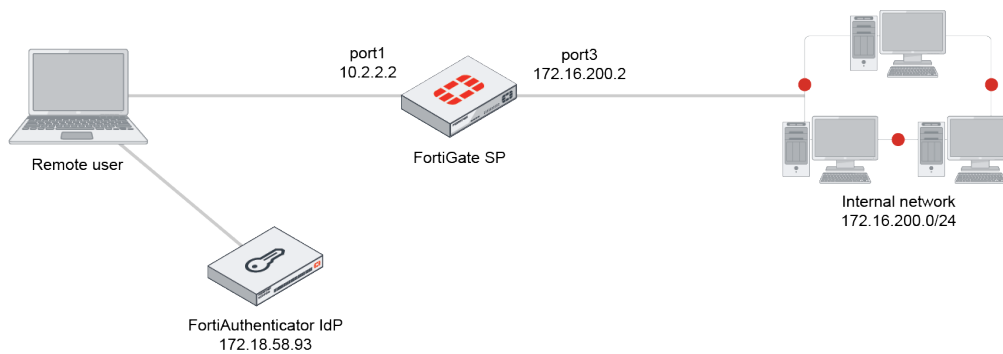

### To configure firewall authentication:

#### 1. Configure the FortiGate SP to be a SAML user:

```
config user saml
  edit "fac-firewall"
    set entity-id "http://10.2.2.2:1000/saml/metadata/"
    set single-sign-on-url "https://10.2.2.2:1003/saml/login/"
    set single-logout-url "https://10.2.2.2:1003/saml/logout/"
    set idp-entity-id "http://172.18.58.93:443/saml-idp/bbbbbbb/metadata/"
    set idp-single-sign-on-url "https://172.18.58.93:443/saml-idp/bbbbbbb/login/"
    set idp-single-logout-url "https://172.18.58.93:443/saml-idp/bbbbbbb/logout/"
    set idp-cert "REMOTE_Cert_3"
    set user-name "username"
    set group-name "group"
  next
end
```

#### 2. Add the SAML user to the user group (optionally, you can configure group matching):


```
config user group
  edit "saml_firewall"
    set member "fac-firewall"
    config match
      edit 1
        set server-name "fac-firewall"
        set group-name "user_group1"
      next
    end
  next
end
```

#### 3. Add the SAML user group to a firewall policy:

```
config firewall policy
  edit 2
    set srcintf "port3"
    set dstintf "port1"
    set srcaddr "all"
    set dstaddr "pc4"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set fsso disable
```

```
set groups "saml_firewall" "group_local"
set users "first"
set nat enable
next
end
```

4. Configure the FortiAuthenticator IdP as needed.
5. Run HTTP/HTTPS authentication for a remote user. The SAML login page appears:

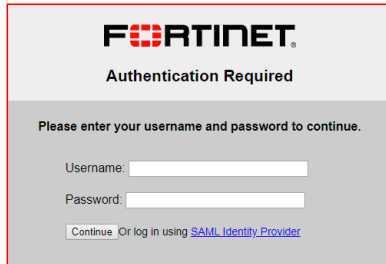

## SSL VPN with FortiAuthenticator as a SAML IdP

A FortiGate can act as a SAML service provider (SP) that requests authentication from a FortiAuthenticator, which acts as a SAML identity provider (IdP). The FortiAuthenticator connects to the Windows AD using LDAP to authenticate user requests. The FortiAuthenticator also acts as a root CA to sign certificates for the SP, IdP, and SSL VPN portal.

For a detailed example configuration, see the [FortiGate SSL VPN with FortiAuthenticator as SAML IdP](#) section in the FortiAuthenticator Cookbook.

## Using a browser as an external user-agent for SAML authentication in an SSL VPN connection


FortiClient can use a browser as an external user-agent to perform SAML authentication for SSL VPN tunnel mode, instead of the FortiClient embedded log in window. If a user has already done SAML authentication in the default browser, they do not need to authenticate again in the FortiClient built-in browser. FortiClient 7.0.1 and later is required.

The following CLI is used to set the SAML local redirect port on the FortiClient endpoint after successful SAML authentication:

```
config vpn ssl settings
    set saml-redirect-port <port>
end
```

### Example

In this example, a user wants to use their default browser to connect to IdP for SAML authentication, without needing to separately authenticate in the FortiClient built-in browser. After authenticating in the browser, FortiClient obtains the authentication cookie directly from the browser.

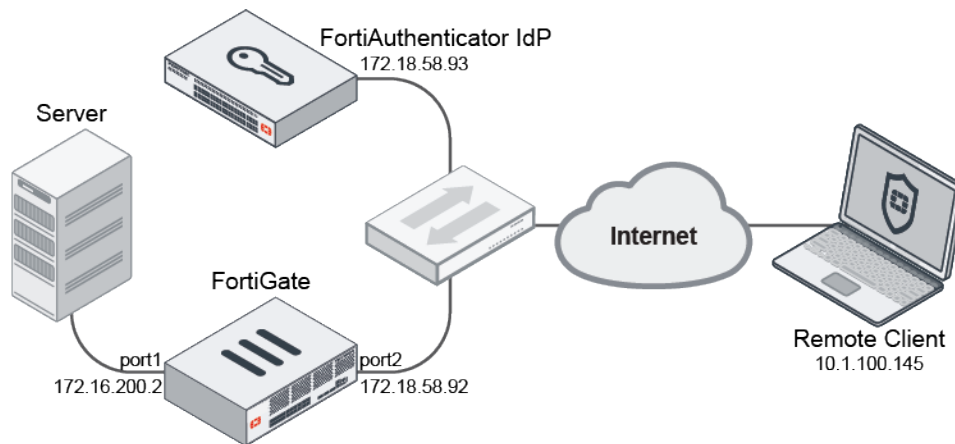

The authentication process proceeds as follows:

1. The remote client uses FortiClient to connect to the FortiGate SSL VPN on 172.16.58.92:1443 with the *Use external browser as user-agent for saml user authentication* option enabled.
2. The SSL VPN redirects FortiClient to complete SAML authentication using the Identity Provider (IdP).
3. FortiClient opens the default browser to authenticate the IdP server.
4. After a successful authentication, the browser redirects to localhost:<port>, where the port is defined by the `saml-redirect-port` variable on the FortiGate.
5. FortiClient reads the authentication ID passed by the successful authentication, then requests that the SAML authentication process continues on the FortiGate with this ID.
6. The FortiGate continues with the remaining SSL-VPN host-check and other steps until it receives the authentication cookie. It then allow the SSL VPN user to connect using tunnel mode.

### To configure the VPN:

1. Configure a SAML user:

```

config user saml
  edit "sul"
    set cert "fgt_gui_automation"
    set entity-id "http://172.18.58.92:1443/remote/saml/metadata/"
    set single-sign-on-url "https://172.18.58.92:1443/remote/saml/login/"
    set single-logout-url "https://172.18.58.92:1443/remote/saml/logout/"
    set idp-entity-id "http://172.18.58.93:443/saml-idp/222222/metadata/"
    set idp-single-sign-on-url "https://172.18.58.93:443/saml-idp/222222/login/"
    set idp-single-logout-url "https://172.18.58.93:443/saml-idp/222222/logout/"
    set idp-cert "REMOTE_Cert_1"
    set user-name "Username"
    set group-name "Groupname"
    set digest-method sha1
  next
end

```

2. Add the SAML user to a user group:

```

config user group
  edit "saml_grp"
    set member "sul"
  end
end

```

```
    next
end
```

### 3. Create an SSL VPN web portal:

```
config vpn ssl web portal
    edit "testportal1"
        set tunnel-mode enable
        set ipv6-tunnel-mode enable
        set web-mode enable
        ...
    next
end
```

### 4. Configure the SSL VPN:

```
config vpn ssl settings
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set port 1443
    set source-interface "port2"
    set source-address "all"
    set source-address6 "all"
    set default-portal "testportal1"
    ...
end
```

### 5. Configure a firewall policy for the SSL VPN and assign the SAML group and a local user to it:

```
config firewall policy
    edit 1
        set name "policy_to_sslvpn_tunnel"
        set srcintf "ssl.root"
        set dstintf "port1"
        set action accept
        set srcaddr "all"
        set dstaddr "all"
        set srcaddr6 "all"
        set dstaddr6 "all"
        set schedule "always"
        set service "ALL"
        set nat enable
        set groups "saml_grp"
        set users "u1"
    next
end
```

### 6. Enable the SAML redirect port:

```
config vpn ssl settings
    set saml-redirect-port 8020
end
```


## To connect to the VPN using FortiClient:

### 1. Configure the SSL VPN connection:

- a. Open FortiClient and go to the *Remote Access* tab and click *Configure VPN*.
- b. Enter a name for the connection.




- c. Set the *Remote Gateway* to the FortiGate port 172.18.58.92.
- d. Enable *Customize port* and set the port to 1443.
- e. Enable *Enable Single Sign On (SSO) for VPN Tunnel* and *Use external browser as user-agent for saml user authentication*.

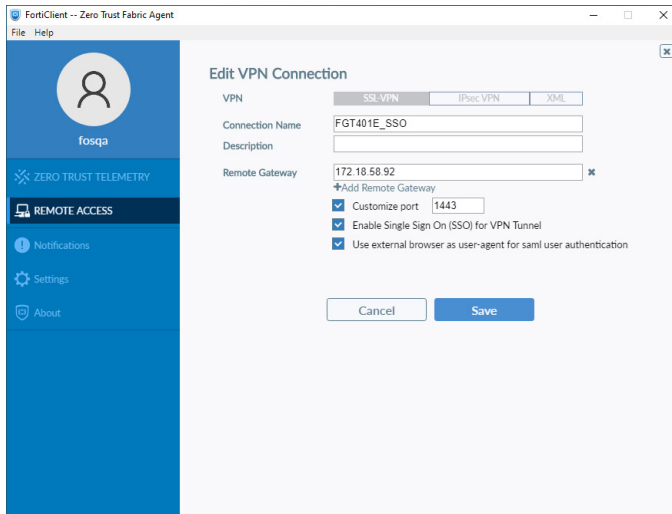

- f. Click **Save**.


2. On the *Remote Access* tab select the *FGT401E\_SSO* VPN connection from the dropdown list.
3. Click **SAML Login**.

The default browser opens to the IdP authentication page.

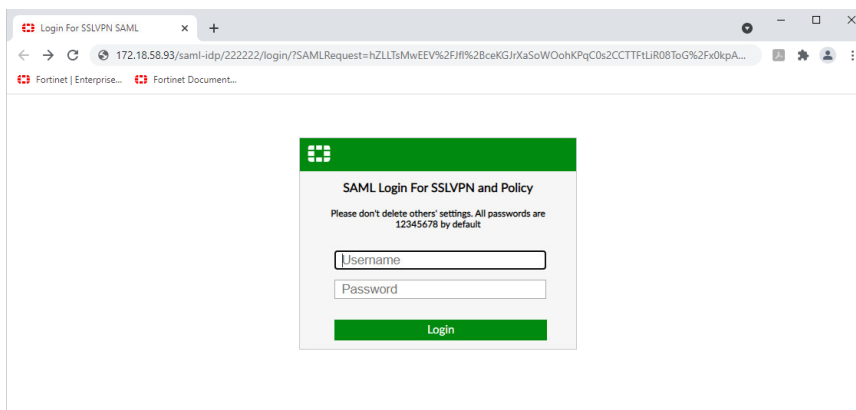

4. Enter the username and password, then click **Login**.

The authenticated result is sent back to FortiClient and the connection is established.

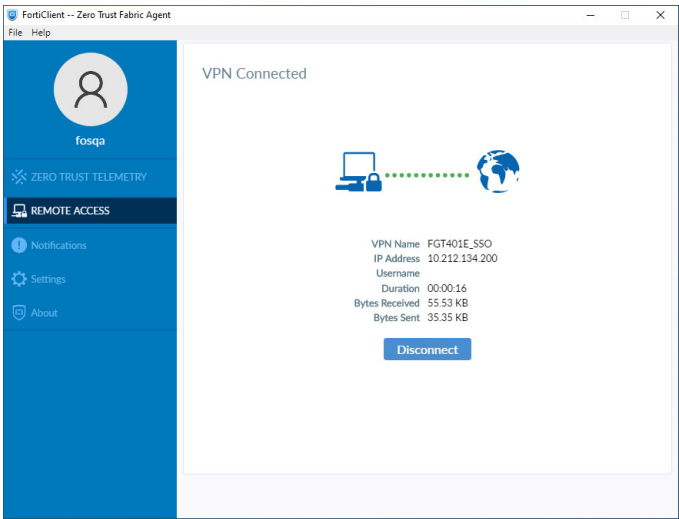

**To check the connection on the FortiGate:**

```
# get vpn ssl monitor
SSL-VPN Login Users:
  Index  User    Group   Auth Type      Timeout      Auth-Timeout  From      HTTP in/out
  HTTPS in/out   Two-factor Auth
  1      fac3    saml_grp 256(1)          N/A          10.1.100.254  0/0       0/0       0

SSL-VPN sessions:
  Index  User    Group   Source IP      Duration      I/O Bytes      Tunnel/Dest IP
  0      fac3    saml_grp 10.1.100.254   5             9990/8449
10.212.134.200,fdff:ffff::1


# diagnose firewall auth list

10.212.134.200, fac3
  type: fw, id: 0, duration: 6, idled: 0
  expire: 259199, allow-idle: 259200
  flag(80): sslvpn
  server: sul
  packets: in 28 out 28, bytes: in 23042 out 8561
  group_id: 5
  group_name: saml_grp
```

**SAML authentication in a proxy policy**


SAML user authentication can be used in explicit web proxies and transparent web proxies with the FortiGate acting as a SAML SP. SAML can be used as an authentication method for an authentication scheme that requires using a captive portal.

## Topology

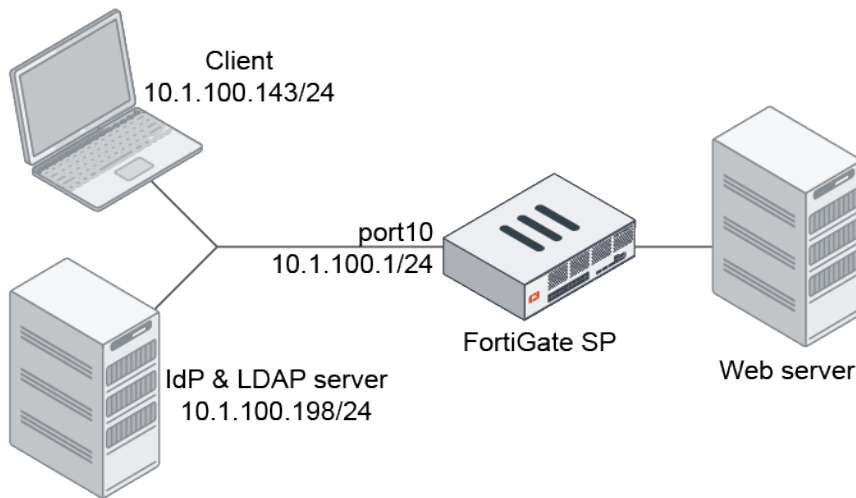

In this configuration, SAML authentication is used with an explicit web proxy. The IdP is a Windows 2016 server configured with ADFS. The LDAP and IdP servers are on the same server. The LDAP server is used as the user backend for the IdP to perform authentication; however, they are not required to be on the same server.

The authentication and authorization flow is as follows:

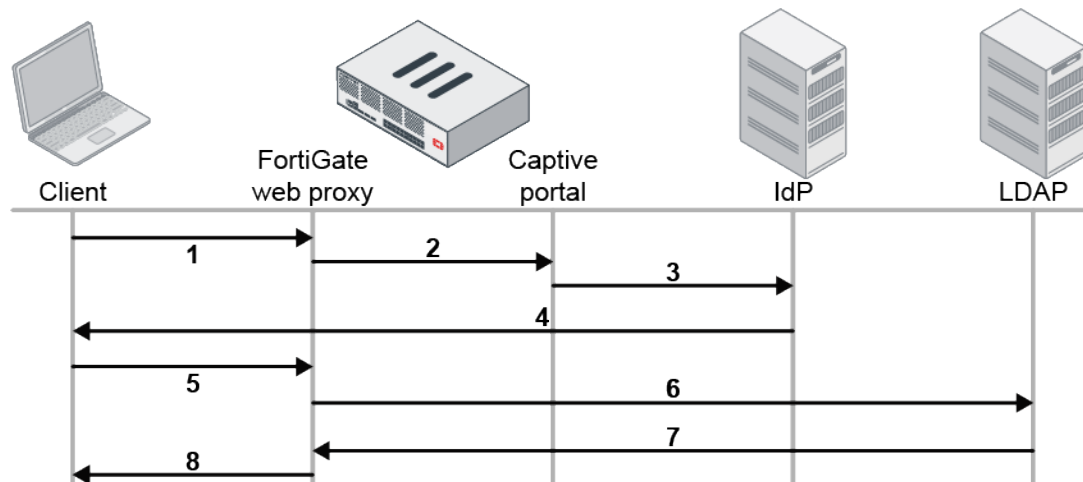

1. The client opens a browser and visits <https://www.google.com>.
2. The browser is redirected by the web proxy the captive portal.
3. The request is redirected to the IdP's sign-in page.
4. If the user signs in, the IdP authenticates the user and sends back a SAML assertion message to the user's browser with the user group information.
5. The browser forwards the SAML assertion response as a HTTP POST to the FortiGate SAML assertion consumer service URL (<https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/login/>).
6. If the FortiGate authentication scheme has a user database configured, the FortiGate will query the LDAP server for the user group information and ignore the user group information from the SAML message.
7. The user group information is returned. The FortiGate matches the user group information against the LDAP group in the proxy policy group settings. If there is a match, the request is authorized and the proxy policy is matched.
8. If all policy criteria match successfully, then the webpage is returned to the client.

**To configure SAML authentication with an explicit web proxy:****1. Enable the web proxy:**

```
config web-proxy explicit
    set status enable
    set http-incoming-port 8080
end
```

**2. Enable the proxy captive portal:**

```
config system interface
    edit "port10"
        set vdom "vdom1"
        set ip 10.1.100.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
        set type physical
        set explicit-web-proxy enable
        set explicit-ftp-proxy enable
        set proxy-captive-portal enable
        set snmp-index 12
    next
end
```

**3. Configure the LDAP server:**

```
config user ldap
    edit "ldap-10.1.100.198"
        set server "10.1.100.198"
        set cnid "cn"
        set dn "dc=myqalab,dc=local"
        set type regular
        set username "cn=fosqal,cn=users,dc=myqalab,dc=local"
        set password *****
        set group-search-base "dc=myqalab,dc=local"
    next
end
```

**4. Configure the user group:**

```
config user group
    edit "ldap-group-saml"
        set member "ldap-10.1.100.198"
    next
end
```

**5. Configure SAML:**

```
config user saml
    edit "saml_user"
        set cert "Fortinet_CA_SSL"
        set entity-id "https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/metadata/"
        set single-sign-on-url "https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/login/"
        set single-logout-url "https://fgt9.myqalab.local:7831/XX/YY/ZZ/saml/logout/"
        set idp-entity-id "http://MYQALAB.LOCAL/adfs/services/trust"
        set idp-single-sign-on-url "https://myqalab.local/adfs/ls"
        set idp-single-logout-url "https://myqalab.local/adfs/ls"
        set idp-cert "REMOTE_Cert_4"
        set digest-method sha256
    end
```

```
        set adfs-claim enable
        set user-claim-type name
        set group-claim-type group
    next
end
```

#### 6. Configure the authentication scheme, rule, and setting:

```
config authentication scheme
    edit "saml"
        set method saml
        set saml-server "saml_user"
        set user-database "ldap-10.1.100.198"
    next
end


config authentication rule
    edit "saml"
        set srcaddr "all"
        set active-auth-method "saml"
    next
end

config authentication setting
    set captive-portal "fgt9.myqalab.local"
end
```

#### 7. Configure the proxy policy:

```
config firewall proxy-policy
    edit 3
        set proxy explicit-web
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set service "webproxy"
        set action accept
        set schedule "always"
        set logtraffic all
        set groups "ldap-group-saml"
        set utm-status enable
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "deep-custom"
        set av-profile "av"
    next
end
```

When a user goes to [www.google.com](http://www.google.com) in a browser that is configured to use the FortiGate as a proxy, the IdP sign-in page appears.

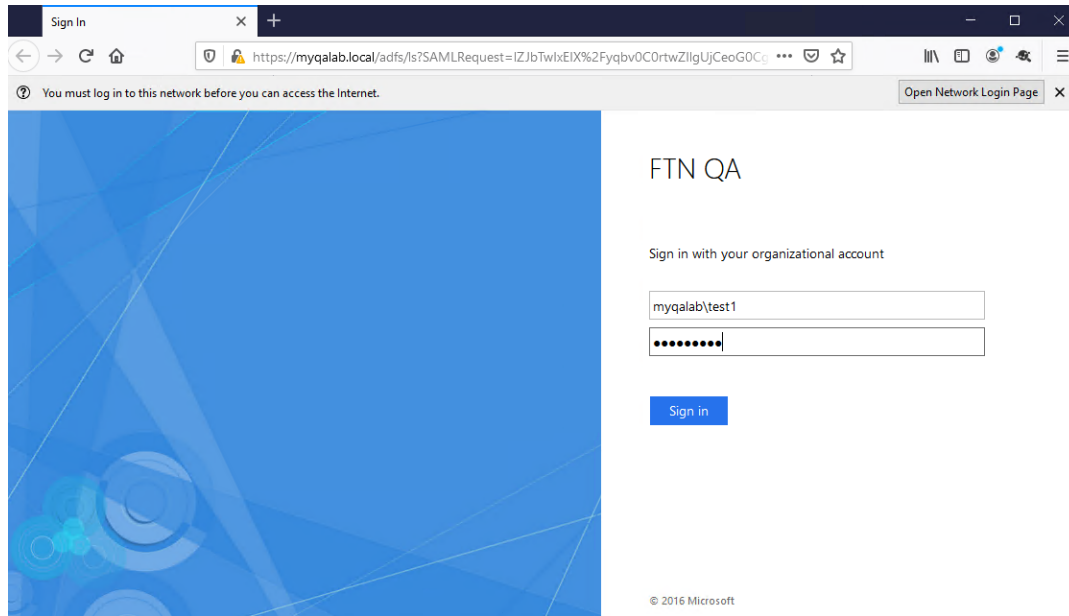


### Sample log

```
7: date=2021-03-16 time=21:11:19 eventtime=1615954279072391030 tz="-0700" logid="0000000010"
type="traffic" subtype="forward" level="notice" vd="vdom1" srcip=10.1.100.143 srcport=53544
srcintf="port10" srcintfrole="undefined" dstcountry="United States" srccountry="Reserved"
dstip=173.194.219.99 dstport=443 dstintf="port9" dstintfrole="undefined"
sessionid=1751272387 service="HTTPS" wanoptapptype="web-proxy" proto=6 action="accept"
policyid=3 policytype="proxy-policy" poluuid="052ae158-7d40-51eb-c1d8-19235c4500c2"
trandisp="snat" transip=172.16.200.1 transport=14844 duration=268 user="test1@MYQALAB.local"
group="ldap-group-saml" authserver="ldap-10.1.100.198" wanin=345633 rcvdbyte=345633
wanout=13013 lanin=5098 sentbyte=5098 lanout=340778 appcat="unscanned"
```

## Configuring SAML SSO in the GUI

SAML single sign-on can be configured in the GUI under *User & Authentication > User Groups*. The GUI wizard helps generate the service provider (SP) URLs based on the supplied SP address. The SAML object that is created can be selected when defining new user groups.

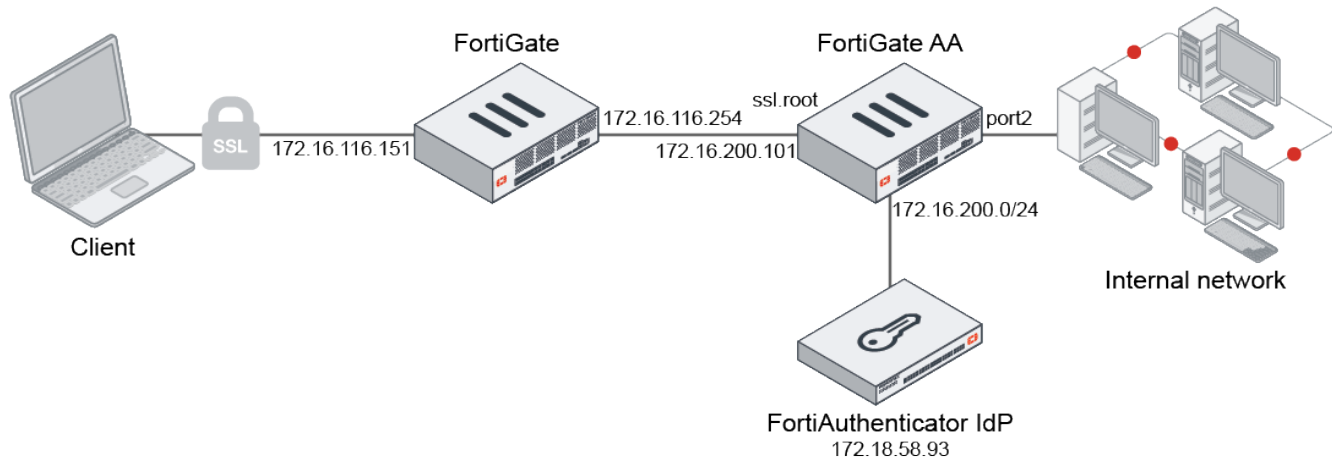

In this example, FortiGate AA is the inside firewall (172.16.200.101). The other FortiGate is the outside firewall that only does port forwarding from 172.16.116.151:55443 to 172.16.200.101:443. FortiGate AA is configured to allow full SSL VPN access to the network in port2. This SSL VPN portal allows users from the user group *saml\_grp* and SAML server *saml\_test* to log in. In this topology, a FortiAuthenticator acts as the SAML identity provider (IdP), while the FortiGate is the SAML SP. External users are directed to the FortiAuthenticator IdP login URL to authenticate. For more information about configuring a FortiAuthenticator as an IdP, see [Service providers](#).

The FortiAuthenticator in this example has the following configuration:

The screenshot displays the FortiAuthenticator VM configuration interface, specifically the 'Edit SAML Service Provider' page. The left sidebar shows the navigation menu with 'Authentication' expanded and 'SAML IdP' selected. The main configuration area is divided into several sections:

- General:** Contains fields for 'IdP address' (172.18.58.93:443), 'SP name' (FGT501E-kw), 'IdP prefix' (43211234), 'IdP entity id' (http://172.18.58.93:443/saml-idp/43211234/metadata/), 'IdP single sign-on URL' (https://172.18.58.93:443/saml-idp/43211234/login/), 'IdP single logout URL' (https://172.18.58.93:443/saml-idp/43211234/logout/), 'Server certificate' (Default-Server-Certificate), and 'IdP signing algorithm' (http://www.w3.org/2000/09/xmldsig#rsa-sha1). There are checkboxes for 'Support IdP-initiated assertion response' and 'Participate in single logout'.
- SP Metadata:** Includes an 'Import SP metadata' button, 'SP entity ID' (http://172.16.116.151:55443/remote/saml/metadata/), 'SP ACS (login) URL' (https://172.16.116.151:55443/remote/saml/login/), and 'SP SLS (logout) URL' (https://172.16.116.151:55443/remote/saml/logout/). There is an 'Alternative ACS URLs' button and a checkbox for 'SAML request must be signed by SP'.
- Authentication:** Features a 'Authentication method' section with radio buttons for 'Mandatory password and OTP', 'Every configured password and OTP factors' (selected), 'Password-only', 'OTP-only', 'FIDO-only', and 'Password and FIDO'. There is also an 'Adaptive Authentication' section with a 'Configure subnets' button and an 'Application name for FTM push notification' field. A checkbox for 'Use FIDO-only authentication if requested by the SP' is present.
- Assertion Attribute Configuration:** Includes 'Subject NameID' (Username), 'Format' (urn:oasis:names:tc:SAML:2.0:nameid-format:unspecified), and a checkbox for 'Include realm name in subject NameID'.
- Assertion Attributes:** A table for defining assertion attributes. It shows two entries: one for 'users' with 'User attribute' as 'Username', and another for 'Groupname' with 'User attribute' as 'Group'. There is an 'Add Assertion Attribute' button.
- Debugging Options:** A section at the bottom for debugging.

### To configure FortiGate AA as an SP:

1. Create a new SAML server entry:
  - a. Go to *User & Authentication > Single Sign-On* and click *Create New*. The single-sign on wizard opens.
  - b. Enter a name (*saml\_test*). The other fields will automatically populate based on the FortiGate's WAN IP and port.





New Single Sign-On


1 ————— 2


Name

SP address

SP address 

SP entity ID  

SP single sign-on URL  

SP single logout URL  

SP certificate ☐

**Next**



Click the icon beside the *SP entity ID*, *SP single sign-on URL*, and *SP single logout URL* fields to copy the text.

- c. Click **Next**.
- d. Enter the FortiAuthenticator IdP details:

|                        |                  |
|------------------------|------------------|
| <b>IdP address</b>     | 172.18.58.93:443 |
| <b>Prefix</b>          | 43211234         |
| <b>IdP certificate</b> | REMOTE_Cert_1    |

- e. Enter the additional SAML attributes that will be used to verify authentication attempts:

|                                          |          |
|------------------------------------------|----------|
| <b>Attribute used to identify users</b>  | Username |
| <b>Attribute used to identify groups</b> | Group    |

The IdP must be configured to include these attributes in the SAML attribute statement. In FortiAuthenticator, this is configured in the *Assertion Attributes* section.

New Single Sign-On

✓ ————— 2

IdP Details

Log into your Identity Provider platform to find the following information.

IdP type: **Fortinet Product** Custom

IdP address: 172.18.58.93:443

Prefix: 43211234

IdP certificate: REMOTE\_Cert\_1

Additional SAML Attributes

The FortiGate will look for these attributes to verify authentication attempts. Configure your Identity Provider to include them in the SAML Attribute Statement.

Attribute used to identify users: Username

Attribute used to identify groups: Group

Back Submit Cancel

f. Click **Submit**.

The following is created in the backend:

```
config user saml
  edit "saml_test"
    set cert "fgt_gui_automation"
    set entity-id "http://172.16.116.151:55443/remote/saml/metadata/"
    set single-sign-on-url "https://172.16.116.151:55443/remote/saml/login/"
    set single-logout-url "https://172.16.116.151:55443/remote/saml/logout/"
    set idp-entity-id "http://172.18.58.93:443/saml-idp/43211234/metadata/"
    set idp-single-sign-on-url "https://172.18.58.93:443/saml-idp/43211234/login/"
    set idp-single-logout-url "https://172.18.58.93:443/saml-idp/43211234/logout/"
    set idp-cert "REMOTE_Cert_1"
    set user-name "Username"
    set group-name "Group"
    set digest-method sha1
  next
end
```

2. Create the SAML group:

- a. Go to *User & Authentication > User Groups* and click *Create New*.
- b. Enter a name, *saml\_grp*.
- c. In the *Remote Groups* table, click *Add*.

- d. In the *Remote Server* dropdown, select *saml\_test* and click *OK*.

New User Group

Name: saml\_grp

Type: Firewall

Members: +

Remote Groups

| Remote Server | Group Name |
|---------------|------------|
| saml_test     |            |

OK Cancel

- e. Click *OK*.

The following is created in the backend:

```
config user group
  edit "saml_grp"
    set member "saml_test"
  next
end
```

3. Add the SAML group in the SSL VPN settings:

- Go to *VPN > SSL-VPN Settings*.
- In the *Authentication/Portal Mapping* table, click *Create New*.
- For *Users/Groups*, click the + and select *saml\_grp*.
- Select the *Portal* (*testportal1*).
- Click *OK*.

SSL-VPN Settings

New Authentication/Portal Mapping

Users/Groups: saml\_grp

Portal: testportal1

OK Cancel

- f. Click *Apply*.
4. Configure the firewall policy:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Enter the following:

|                           |                          |
|---------------------------|--------------------------|
| <b>Incoming Interface</b> | ssl.root                 |
| <b>Outgoing Interface</b> | port2                    |
| <b>Source</b>             | all, saml_grp, saml_test |

- c. Configure the other settings as needed.
- d. Click *OK*.
5. On the client, log in with SAML using the SSL VPN web portal.




If you are using FortiClient for tunnel mode access, enable *Enable Single Sign On (SSO) for VPN Tunnel* in the *SSL-VPN* connection settings to use the SAML log in. See [Configuring an SSL VPN](#) connection for more information.

6. In FortiOS, go to *Dashboard > Network* and click the *SSL-VPN* widget to expand to full view and verify the connection information.

## Outbound firewall authentication with Azure AD as a SAML IdP

In this example, users are managed through Microsoft Azure Active Directory (AD). The FortiGate is configured for SSO firewall authentication for outbound traffic, with authentication performed by the Azure AD as a SAML identity provider (IdP).

The SAML interaction occurs as follows:

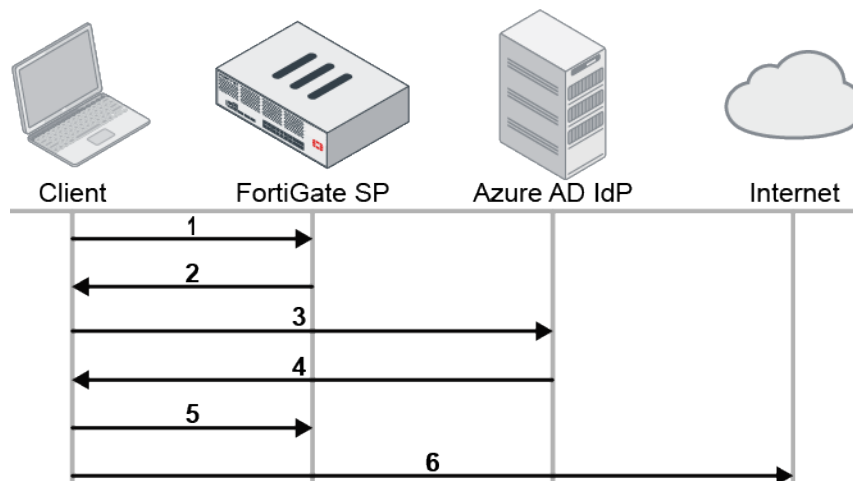


1. The user initiates web traffic to the internet.
2. The FortiGate redirects to the local captive portal port (default is 1003), then redirects the user to the SAML IdP.
3. The user connects to the Microsoft log in page for the SAML authentication request.
4. The SAML IdP sends the SAML assertion containing the user and group.

5. The browser forwards the SAML assertion to the SAML SP.
6. If the user and group are allowed by the FortiGate, the user is allowed to access the internet.

In this example environment, a user is added in the Azure AD belonging to the security group called Firewall.

- Username: John Locus
- User login: jlocus@azure.kldocs.com
- Group: Firewall (ID 62b699ce-4f80-48c0-846e-c1dfde2dc667)

The goal is to allow users in the Firewall group to access the internet after passing firewall authentication.

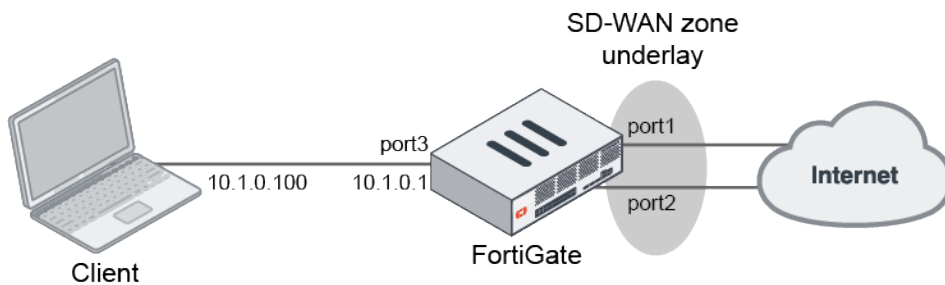

## Configuring the Azure AD

The following Azure AD configuration demonstrates how to add the FortiGate as an enterprise non-gallery application. This application provides SAML SSO connectivity to the Azure AD IdP. Some steps are performed concurrently on the FortiGate.



This example is configured with an Azure AD free-tier directory. There may be limitations to managing users in Azure in this tier that are not limited in other tiers. Consult the [Microsoft Azure AD](#) documentation for more information.

There are three steps to configure the Azure AD:

1. [Create a new enterprise application.](#)
2. [Configure the SAML SSO settings on the application and FortiGate.](#)
3. [Assign Azure AD users and groups to the application.](#)

### To create a new enterprise application:

1. Log in to the Azure portal.
2. In the Azure portal menu, click *Azure Active Directory*.
3. In the left-side menu go *Manage > Enterprise applications*.
4. Click *New application*.

Microsoft Azure

Search resources, services, and docs (G+)

Home > Enterprise applications

Enterprise applications | All applications

Default Directory - Azure Active Directory

Overview

Overview

Diagnose and solve problems

Manage

All applications

Application proxy

User settings

+ New application

Columns

Preview features

Got feedback?

Try out the new Enterprise Apps search preview! Click to enable the preview. →

View, filter, and search applications in your organization that are set up to use your Azure AD tenant as their Identity Provider. [Learn more.](#)

Application type: Enterprise Applications

Applications status: Any

Application visibility: Any

Apply

Reset

First 50 shown, to search all of your applications, enter a display name or the application ID.

Name

Homepage URL

Object ID

### 5. Click *Create your own application*.

Microsoft Azure

Search resources, services, and docs (G+)

Home > Enterprise applications >

Browse Azure AD Gallery

+ Create your own application

Request new gallery app

Got feedback?

You're in the new and improved app gallery experience. Click here to switch back to the legacy app gallery experience. →

Search application

Single Sign-on : All

User Account Management : All

Categories : All

### 6. Enter a name for the application (*SAML-FW-Auth*) and select *Integrate any other application you don't find in the gallery (Non-gallery)*.

Create your own application

Got feedback?

What's the name of your app?

SAML-FW-Auth

What are you looking to do with your application?

☐ Configure Application Proxy for secure remote access to an on-premises application

☐ Register an application to integrate with Azure AD (App you're developing)

☒ Integrate any other application you don't find in the gallery (Non-gallery)


### 7. Click *Create*.

### To configure the SAML SSO settings on the application and FortiGate:



This procedure requires going back and forth between Azure and the FortiGate GUI. Leave the FortiGate GUI open for the entire procedure.

1. On the *Enterprise Application Overview* page, go to *Manage > Single sign-on* and select *SAML* as the single sign-on method.

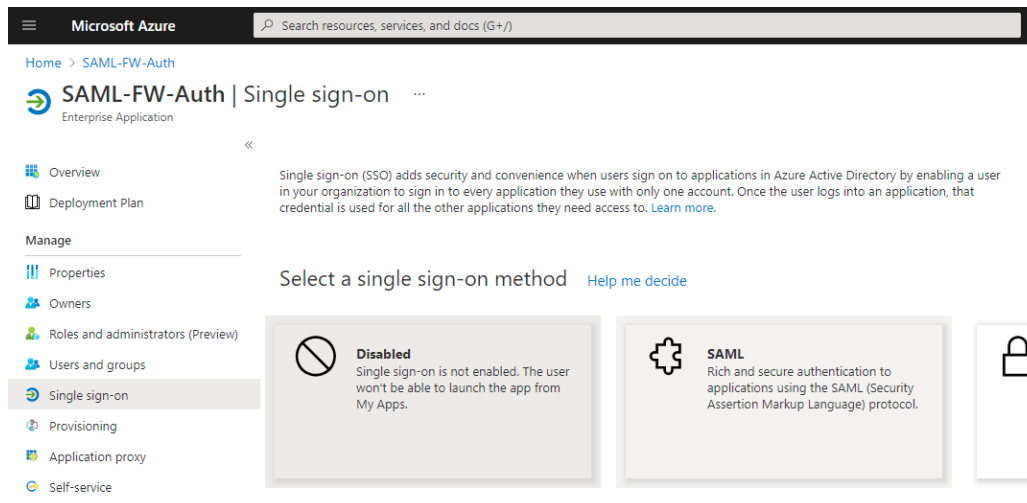

2. The *Basic SAML Configuration* section in Azure describes the SAML SP entity and links that Azure will reference. Configure these settings on the FortiGate by creating a new SAML server object and defining the SP address. The SP (IP or FQDN) address should be accessible by the user who is authenticating against the firewall. The port used should match the port used by the FortiGate firewall authentication captive portal. By default, this is port 1003 for HTTPS. A captive portal does not need to be configured separately.
  - a. Go to *User & Authentication > Single Sign-On* and click *Create New*.
  - b. Enter a *Name* for the SAML object, *Azure-AD-SAML*.
  - c. Enter the *SP address*, *10.1.0.1:1003*. The three SP URLs are automatically populated.

3. In Azure on the *Set up Single Sign-On with SAML* page, copy the following URLs from the FortiGate to the *Basic SAML Configuration* section:

| From FortiGate                                                             | To Azure field                                        |
|----------------------------------------------------------------------------|-------------------------------------------------------|
| <i>SP entity ID</i><br>(http://10.1.0.1:1003/remote/saml/metadata/)        | <i>Identifier (Entity ID)</i> , set to <i>Default</i> |
| <i>SP single sign-on URL</i><br>(https://10.1.0.1:1003/remote/saml/login/) | <i>Reply URL</i> and <i>Sign on URL</i>               |
| <i>SP single logout URL</i><br>(https://10.1.0.1:1003/remote/saml/logout/) | <i>Logout URL</i>                                     |

4. Click **Save**.

| Basic SAML Configuration                   |                                             |
|--------------------------------------------|---------------------------------------------|
| Identifier (Entity ID)                     | https://10.1.0.1:1003/remote/saml/metadata/ |
| Reply URL (Assertion Consumer Service URL) | https://10.1.0.1:1003/remote/saml/login/    |
| Sign on URL                                | https://10.1.0.1:1003/remote/saml/login/    |
| Relay State                                | Optional                                    |
| Logout Url                                 | https://10.1.0.1:1003/remote/saml/logout/   |

5. Under the **SAML Signing Certificate** section, download the Base64 certificate.

| SAML Signing Certificate    |                                                     |
|-----------------------------|-----------------------------------------------------|
| Status                      | Active                                              |
| Thumbprint                  | 977B10F89D1C087E3105564B1D31809D2478E8CD            |
| Expiration                  | 2/6/2026, 9:00:39 AM                                |
| Notification Email          | tacbc_ftnt@outlook.com                              |
| App Federation Metadata Url | https://login.microsoftonline.com/d7cf19c6-620c-... |
| Certificate (Base64)        | <a href="#">Download</a>                            |
| Certificate (Raw)           | <a href="#">Download</a>                            |
| Federation Metadata XML     | <a href="#">Download</a>                            |

## 6. Import the certificate from Azure on the FortiGate as the IdP certificate:

- Go to **System > Certificates** and click **Create/Import > Remote Certificate**.
- Upload the certificate from Azure and click **OK**. The new certificate appears under the **Remote Certificate** section with the name **REMOTE\_Cert\_(N)**.
- Optionally, rename the certificate in the CLI to give it a more recognizable name:

```
config vpn certificate remote
    rename REMOTE_Cert_3 to AZURE_AD_SAML_FW
end
```

7. In the **Set up <application name>** section, copy the URLs from Azure to the FortiGate in the **IdP Details** section:

| Set up SAML-FW-Auth                                             |                                                                                     |
|-----------------------------------------------------------------|-------------------------------------------------------------------------------------|
| You'll need to configure the application to link with Azure AD. |                                                                                     |
| Login URL                                                       | <a href="https://login.microsoftonline.com/">https://login.microsoftonline.com/</a> |
| Azure AD Identifier                                             | <a href="https://sts.windows.net/">https://sts.windows.net/</a>                     |
| Logout URL                                                      | <a href="https://login.microsoftonline.com/">https://login.microsoftonline.com/</a> |
| <a href="#">View step-by-step instructions</a>                  |                                                                                     |

- On the FortiGate, click **Next**.
- For **IdP type**, select **Custom** and copy the following from Azure to the corresponding field:

| From Azure          | To FortiGate field     |
|---------------------|------------------------|
| Azure AD Identifier | IdP entity ID          |
| Login URL           | IdP single sign-on URL |
| Logout URL          | IdP single logout URL  |

- For **IdP certificate**, select the remote certificate imported earlier.
8. In Azure, edit the **User Attributes & Claims** section. The attributes are returned in the SAML assertion, which the FortiGate uses to verify the user and group. Configuring group matching is optional.
- Click **Add new claim**, name it **username**, and set the **Source attribute** to **user.displayname**. The source attribute can be any of the related username fields. The value of the username returned to the FortiGate will be used in logs and monitors to identify the user.
  - Click **Save**.
  - Click **Add a group claim** and in the **Group Claims** pane, select **All groups**.



- d. In *Advanced Options*, select *Customize the name of the group claim*. Set the name to *group*.

**Group Claims** ×  
Manage the group claims used by Azure AD to populate SAML tokens issued to your app

Which groups associated with the user should be returned in the claim?

☐ None  
☒ All groups  
☐ Security groups  
☐ Directory roles  
☐ Groups assigned to the application

Source attribute \*  
Group ID

**Advanced options**

☒ Customize the name of the group claim

Name (required)  
group

Namespace (optional)

☐ Emit groups as role claims ⓘ

- e. Click **Save**. The *User Attributes & Claims* section displays the update settings.

User Attributes & Claims Edit

|                        |                        |
|------------------------|------------------------|
| givenname              | user.givenname         |
| surname                | user.surname           |
| emailaddress           | user.mail              |
| name                   | user.userprincipalname |
| username               | user.displayname       |
| group                  | user.groups            |
| Unique User Identifier | user.userprincipalname |

9. On the FortiGate, update the *Additional SAML Attributes* section with the username and group created in Azure:
- For *Attribute used to identify users*, enter *username*.
  - For *Attribute used to identify groups*, enter *group*.

New Single Sign-On

IdP Details

Log into your Identity Provider platform to find the following information.

IdP type: Fortinet Product Custom

IdP entity ID:

IdP single sign-on URL:

IdP single logout URL:

IdP certificate:

Additional SAML Attributes

The FortiGate will look for these attributes to verify authentication attempts. Configure your Identity Provider to include them in the SAML Attribute Statement.

Attribute used to identify users:

Attribute used to identify groups:

Back Submit Cancel

c. Click *Submit*.

### To assign Azure AD users and groups to the application:

1. In Azure, go to *Manage > Users and groups* and click *Add user/group*.
2. Click *Users* to select the users or groups (*John Locus* is selected in this example).
3. Click *Assign* to add the assignment.

Microsoft Azure

Search resources, services, and docs (G+)

Home > Default Directory > Enterprise applications > SAML-FW-Auth

SAML-FW-Auth | Users and groups

Enterprise Application

Deployment Plan

Manage

Properties

Owners

Roles and administrators (Preview)

Users and groups

Single sign-on

+ Add user/group Edit Remove Update Credentials Columns Got feedback?

The application will appear for assigned users within My Apps. Set 'visible to users?' to no in properties to prevent this. →

First 200 shown, to search all users & groups, enter a display name.

| Display Name                        | Object Type | Role assigned |
|-------------------------------------|-------------|---------------|
| <input type="checkbox"/> John Locus | User        | User          |


## Configuring the FortiGate

The user group, user authentication settings, and firewall policies must be configured on the FortiGate.

### Configuring the user group

A user group named *Azure-FW-Auth* is created with the member *Azure-AD-SAML*.

Configuring group matching is optional, and the *Object ID* from Azure is needed for the `config match` settings. In the Azure default directory, go to *Manage > Groups* and locate the *Object ID* for the *Firewall* group.

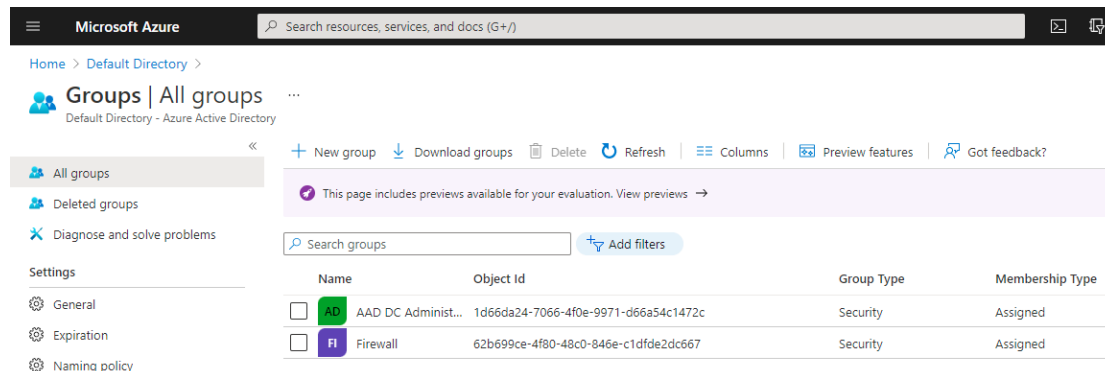

### To configure the user group:

```
config user group
    edit "Azure-FW-Auth"
        set member "Azure-AD-SAML"
        config match
            edit 1
                set server-name "Azure-AD-SAML"
                set group-name "62b699ce-4f80-48c0-846e-c1dfde2dc667"
            next
        end
    next
end
```

### Configuring the user authentication setting

When a user initiates traffic, the FortiGate will redirect the user to the firewall authentication captive portal before redirecting them to the SAML IdP portal. After the SAML IdP responds with the SAML assertion, the user is again redirected to the firewall authentication captive portal. If the firewall portal's certificate is not trusted by the user, they will receive a certificate warning. Use a custom certificate that the user trusts to avoid the certificate warning.

### To configure a custom certificate:

1. Go to *User & Authentication > Authentication Settings*.
2. For *Certificate*, select the custom certificate. The custom certificate's SAN field should have the FQDN or IP from the SP URL.

Alternatively, assigning a CA certificate allows the FortiGate to automatically generate and sign a certificate for the portal page. This will override any assigned server certificate. In this example, the built-in Fortinet\_CA\_SSL is used.

### To assign a CA certificate:

1. Edit the user setting:

```
config user setting
    set auth-ca-cert "Fortinet_CA_SSL"
end
```

2. Go to *System > Certificates* and download the certificate.
3. Install the certificate into the client's certificate store.

## Configuring the firewall policies

Firewall policies must be configured to apply user authentication and still allow users behind the FortiGate to access the Microsoft log in portal without authentication.

### To configure the firewall policies:

1. Configure a policy to allow traffic to the Microsoft Azure internet service:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. Enter the following:

|                            |                                                 |
|----------------------------|-------------------------------------------------|
| <b>Name</b>                | <i>LAN-to-AuthPortal</i>                        |
| <b>Incoming Interface</b>  | <i>port3</i>                                    |
| <b>Outgoing Interface</b>  | <i>Underlay</i>                                 |
| <b>Source</b>              | <i>all</i>                                      |
| <b>Destination</b>         | <i>Microsoft-Azure (under Internet Service)</i> |
| <b>Schedule</b>            | <i>always</i>                                   |
| <b>Service</b>             | <i>ALL</i>                                      |
| <b>Action</b>              | <i>ACCEPT</i>                                   |
| <b>NAT</b>                 | Enable and select <i>NAT</i> .                  |
| <b>Log Allowed Traffic</b> | Enable and select <i>All Sessions</i> .         |

- c. Configure the other settings as needed.
  - d. Click *OK*.
2. Configure a policy to apply user authentication:

- a. Click *Create New* and enter the following:

|                            |                                         |
|----------------------------|-----------------------------------------|
| <b>Name</b>                | <i>LAN-auth-policy</i>                  |
| <b>Incoming Interface</b>  | <i>port3</i>                            |
| <b>Outgoing Interface</b>  | <i>Underlay</i>                         |
| <b>Source</b>              | <i>all, Azure-FW-Auth</i>               |
| <b>Destination</b>         | <i>all</i>                              |
| <b>Schedule</b>            | <i>always</i>                           |
| <b>Service</b>             | <i>ALL</i>                              |
| <b>Action</b>              | <i>ACCEPT</i>                           |
| <b>NAT</b>                 | Enable and select <i>NAT</i> .          |
| <b>Log Allowed Traffic</b> | Enable and select <i>All Sessions</i> . |


- b. Configure the other settings as needed.  
c. Click OK.

## Connecting from the client

When the client connects to the internet from a browser, they will be redirected to the Microsoft log in page to authenticate against the Azure AD. The FortiGate's authentication portal certificate should be installed on the client.

### To connect from the client:

1. On the client, open a browser (such as Firefox) and go to a website. The user is redirected to the Microsoft log in page.
2. Enter the user credentials.

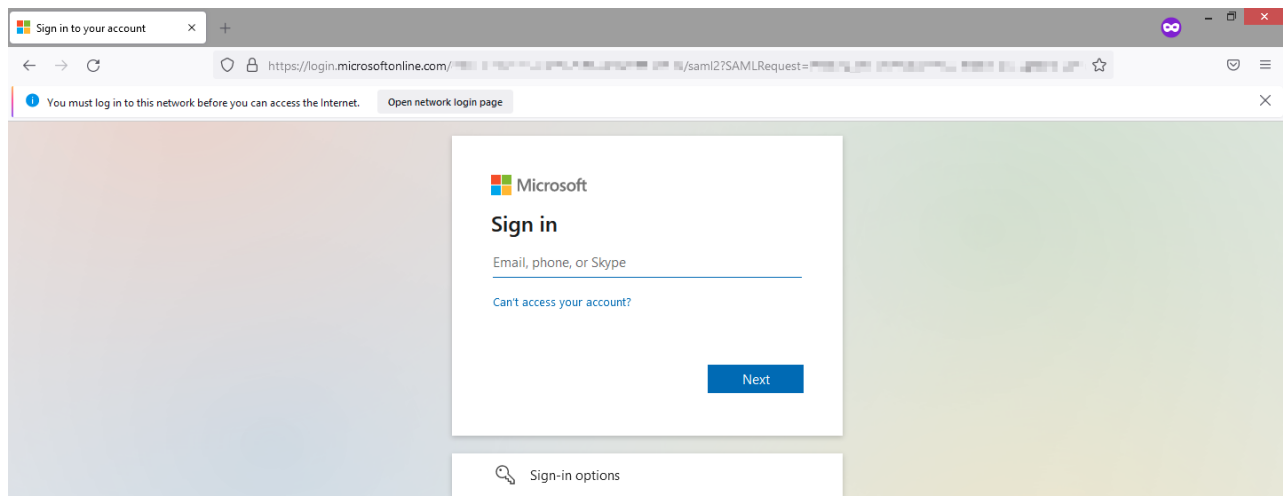

3. If the log in attempt is successful, the user is allowed to access the internet

## Viewing logs and diagnostics

To verify user logins, go to the *Dashboard > Users & Devices > Firewall Users* widget, or enter the following in the CLI:

```
# diagnose firewall auth list
10.1.0.100, John Locus
    src_mac: 02:09:0f:00:03:03
    type: fw, id: 0, duration: 152, idled: 7
    expire: 292, allow-idle: 300
    server: Azure-AD-SAML
    packets: in 2097 out 932, bytes: in 2208241 out 143741
    group_id: 2
    group_name: Azure-FW-Auth
----- 1 listed, 0 filtered -----
```

To verify user login logs, go to *Log & Report > System Events* and select the *User Events* card, or enter the following in the CLI:


```
# execute log filter category event
# execute log filter field subtype user
# execute log display
17 logs found.
10 logs returned.
7: date=2021-09-30 time=09:49:25 eventtime=1633020565577584390 tz="-0700" logid="0102043039"
type="event" subtype="user" level="notice" vd="root" logdesc="Authentication logon"
srcip=10.1.0.100 user="John Locus" authserver="Azure-AD-SAML" action="auth-logon"
status="logon" msg="User John Locus added to auth logon"

8: date=2021-09-30 time=09:49:25 eventtime=1633020565577075629 tz="-0700" logid="0102043008"
type="event" subtype="user" level="notice" vd="root" logdesc="Authentication success"
srcip=10.1.0.100 dstip=10.1.0.1 policyid=11 interface="port3" user="John Locus"
group="Azure-FW-Auth" authproto="HTTPS(10.1.0.100)" action="authentication" status="success"
reason="N/A" msg="User John Locus succeeded in authentication"
```

If user authentication is successful in Azure AD, but their group does not match the one defined in the FortiGate user group, the user will receive a *Firewall Authentication Failed* message in the browser. A log is also recorded:

```
# execute log filter category event
# execute log filter field subtype user
# execute log display
1: date=2021-09-30 time=10:39:35 eventtime=1633023575381139214 tz="-0700" logid="0102043009"
type="event" subtype="user" level="notice" vd="root" logdesc="Authentication failed"
srcip=10.1.0.100 dstip=10.1.0.1 policyid=11 interface="port3" user="Adam Thompson"
group="N/A" authproto="HTTPS(10.1.0.100)" action="authentication" status="failure"
reason="No matched SAML user or group name in auth resp" msg="User Adam Thompson failed in authentication"
```

If a user receives the following error message, this means the user is not assigned to the enterprise application *SAML-FW-Auth* in Azure.

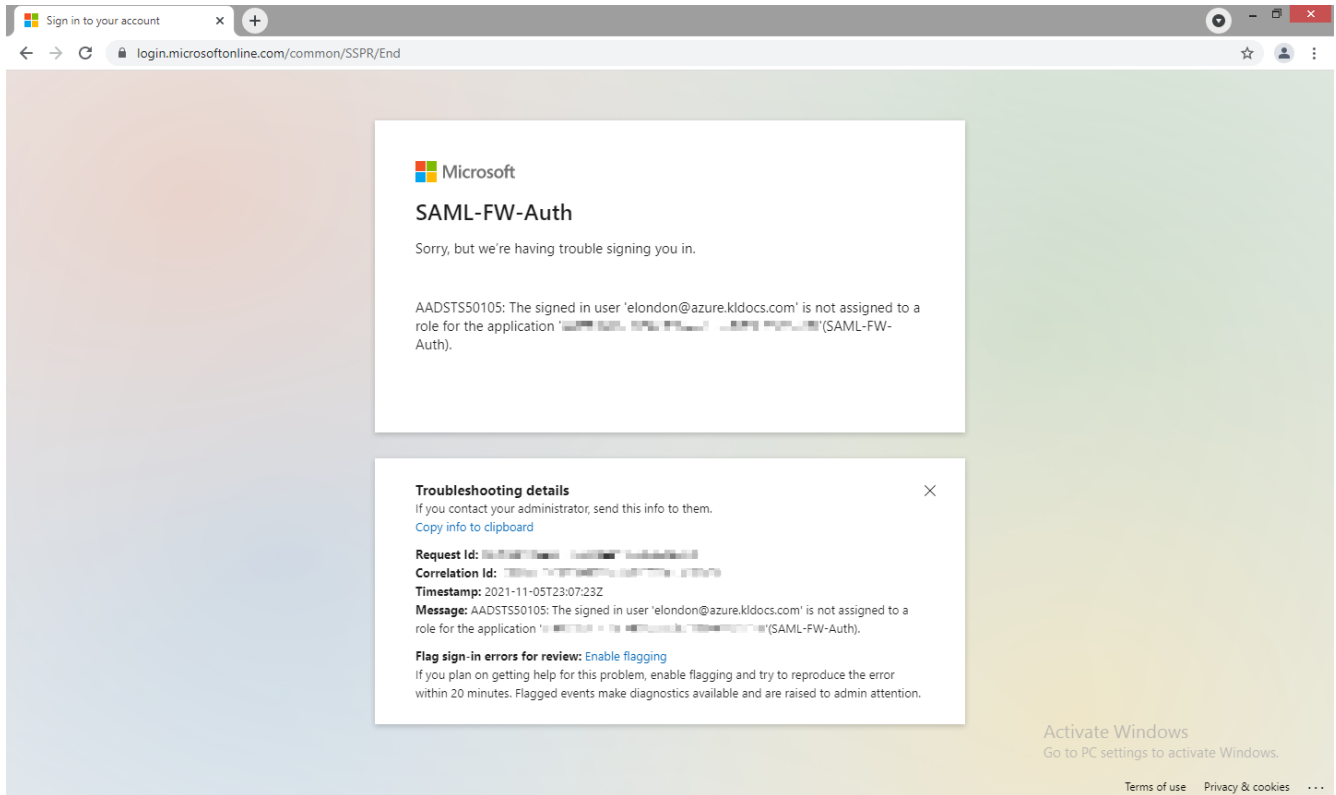

### To troubleshoot SAML issues:

```
# diagnose debug application samld -1
# diagnose debug enable
```

## Authentication settings

You can configure general authentication settings, including timeout, protocol support, and certificates.



You cannot customize FTP and Telnet authentication replacement messages.

**To configure authentication settings using the GUI:**

1. Go to *User & Authentication > Authentication Settings*.
2. Configure the following settings:

| Setting                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Authentication Timeout | Enter the desired timeout in minutes. You can enter a number between 1 and 1440 (24 hours). The authentication timeout controls how long an authenticated connection can be idle before the user must reauthenticate. The default value is 5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Protocol Support       | <p>Select the protocols to challenge during firewall user authentication. When you enable user authentication within a security policy, the authentication challenge is normally issued for any of four protocols, depending on the connection protocol:</p> <ul style="list-style-type: none"> <li>• HTTP (you can set this to redirect to HTTPS)</li> <li>• HTTPS</li> <li>• FTP</li> <li>• Telnet</li> </ul> <p>The protocols selected here control which protocols support the authentication challenge. Users must connect with a supported protocol first so they can subsequently connect with other protocols. If HTTPS is selected as a protocol support method, it allows the user to authenticate with a customized local certificate.</p> <p>When you enable user authentication within a security policy, FortiOS challenges the security policy user to authenticate. For user ID and password authentication, the user must provide their username and password. For certificate authentication (HTTPS or HTTP redirected to HTTPS only), you can install customized certificates on the unit and the user can also install customized certificates on their browser. Otherwise, users see a warning message and must accept a default Fortinet certificate. The network user's web browser may deem the default certificate invalid.</p> |
| Certificate            | If using HTTPS protocol support, select the local certificate to use for authentication. This is available only if <i>HTTPS</i> and/or <i>Redirect HTTP Challenge to a Secure Channel (HTTPS)</i> are selected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

**To configure authentication settings using the CLI:**

```
config user setting
  set auth-timeout 5
  set auth-type ftp http https telnet
  set auth-cert Fortinet_Factory
end
```



## FortiTokens

FortiTokens are security tokens used as part of a multi-factor authentication (MFA) system on FortiGate and FortiAuthenticator. A security token is a 6-digit or 8-digit (configurable) one-time password (OTP) that is used to authenticate one's identity electronically as a prerequisite for accessing network resources. FortiToken is available as either a mobile or a physical (hard) token. Mobile tokens can be purchased as a license, or consumed with points as part of the FortiToken Cloud service.

FortiToken Mobile and physical FortiTokens store their encryption seeds on the cloud. FortiToken Mobile seeds are generated dynamically when the token is provisioned. They are always encrypted whether in motion or at rest.

You can only register FortiTokens to a single FortiGate or FortiAuthenticator for security purposes. This prevents malicious third parties from making fraudulent requests to hijack your FortiTokens by registering them on another FortiGate or FortiAuthenticator. If re-registering a FortiToken Mobile or Hard Token on another FortiGate is required, you must contact [Fortinet Customer Support](#).

Common usage for FortiTokens includes:

- Applying MFA to a VPN dialup user connecting to the corporate network
- Applying MFA to FortiGate administrators
- Applying MFA to firewall authentication and captive portal authentication



The MFA process commonly involves:

- **Something you know:** User password
- **Something you have:** The FortiToken OTP

A third factor of authentication is added to the authentication process:

- **Something you are:** Your fingerprint or face

To enable the third factor, refer to the [Activating FortiToken Mobile on a mobile phone on page 2159](#) section.


---

### The following illustrates the FortiToken MFA process:

1. The user attempts to access a network resource.
2. FortiOS matches the traffic to an authentication security policy and prompts the user for their username and password.
3. The user enters their username and password.
4. FortiOS verifies their credentials. If valid, it prompts the user for the FortiToken code.
5. The user views the current code on their FortiToken. They enter the code at the prompt.
6. FortiOS verifies the FortiToken code. If valid, it allows the user access to network resources.

### If the FortiToken has drifted, the following must take place for the FortiToken to resynchronize with FortiOS:

1. FortiOS prompts the user to enter a second code to confirm.
2. The user gets the next code from the FortiToken. They enter the code at the prompt.
3. FortiOS uses both codes to update its clock to match the FortiToken.

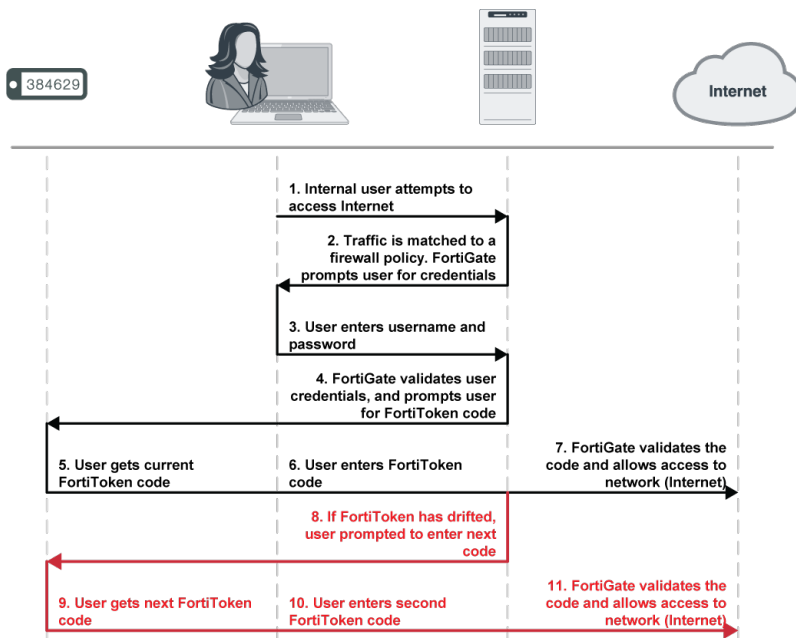

This section includes the following topics to quickly get started with FortiTokens:

- [FortiToken Mobile quick start on page 2156](#)
- [FortiToken Cloud on page 2164](#)
- [Registering hard tokens on page 2164](#)
- [Managing FortiTokens on page 2166](#)
- [FortiToken Mobile Push on page 2168](#)
- [Synchronizing LDAP Active Directory users to FortiToken Cloud using the two-factor filter on page 2170](#)
- [Troubleshooting and diagnosis on page 2173](#)

## FortiToken Mobile quick start

FortiToken Mobile is an OATH compliant, event- and time-based one-time password (OTP) generator for mobile devices. It provides an easy and flexible way to deploy and provision FortiTokens to your end users through mobile devices. FortiToken Mobile produces its OTP codes in an application that you can download onto your Android or iOS mobile device without the need for a physical token.

You can download the free FortiToken Mobile application for Android from the [Google Play Store](#), and for iOS from the [Apple App Store](#).

This section focuses on quickly getting started and setting up FortiToken Mobile for use on a FortiGate:

- [Registering FortiToken Mobile on page 2157](#)
- [Provisioning FortiToken Mobile on page 2158](#)
- [Activating FortiToken Mobile on a mobile phone on page 2159](#)
- [Applying multi-factor authentication on page 2163](#)

## Registering FortiToken Mobile

To deploy FortiToken Mobile for your end users, you must first register the tokens on your FortiGate. After registering the tokens, you can assign them to your end users.

Each FortiGate comes with two free FortiToken Mobile tokens. These tokens should appear under *User & Authentication > FortiTokens*. If no tokens appear, you may import them. Ensure that your FortiGate is registered and has internet access to connect to the FortiToken servers to import the tokens.

### To import FortiTokens from the FortiGate GUI:

1. Go to *User & Authentication > FortiTokens*.
2. Click the *Import Free Trial Tokens* icon at the top. The two free tokens are imported.

### To import FortiTokens from the FortiGate CLI:

```
# execute fortitoken-mobile import 0000-0000-0000-0000-0000
# show user fortitoken
```



If only one free token appears, you can first delete that token and then follow the procedure to import the two free tokens from either the GUI or the CLI.

---

If you have the FortiToken Mobile redemption certificate, you can register FortiToken Mobile on a FortiGate.

### To register FortiToken Mobile from the FortiGate GUI:

1. Go to *User & Authentication > FortiTokens* and click *Create New*. The *New FortiToken* dialog appears.
2. For the *Type* field, select *Mobile Token*.
3. Locate the 20-digit code on the redemption certificate and type it in the *Activation Code* field.
4. Click *OK*. The token is successfully registered.



If you attempt to add invalid FortiToken serial numbers, there is no error message. FortiOS does not add invalid serial numbers to the list.

---

### To register FortiToken Mobile from the FortiGate CLI:

```
# execute fortitoken-mobile import <20-digit activation code>
# show user fortitoken
```



FortiToken Mobile stores its encryption seeds on the cloud. You can only register it to a single FortiGate or FortiAuthenticator.

---

## Provisioning FortiToken Mobile

Once registered, FortiTokens need to be provisioned for users before they can be activated. In this example, you will provision a mobile token for a local user. Similar steps can be taken to assign FortiTokens to other types of users.

### To create a local user and assign a FortiToken in the FortiGate GUI:

1. Go to *User & Authentication > User Definition*, and click *Create New*. The *Users/Groups Creation Wizard* appears.
2. In the *User Type* tab, select *Local User*, and click *Next*.

Users/Groups Creation Wizard

1 User Type 2 Login Credentials 3 Contact Info 4 Extra Info

Local User

Remote RADIUS User

Remote TACACS+ User

Remote LDAP User

FSSO

FortiClient EMS User

FortiNAC User

< Back Next Cancel

3. In the *Login Credentials* tab, enter a *Username* and *Password* for the user, and click *Next*.

Users/Groups Creation Wizard

1 User Type 2 Login Credentials 3 Contact Info 4 Extra Info

Username

Password

< Back Next Cancel

4. In the *Contact Info* tab:
  - a. Enable the *Two-factor Authentication* toggle.
  - b. Select *FortiToken* for *Authentication Type*.
  - c. Select a *Token* to assign to the user from the drop-down list.
  - d. Enter the user's email address in the *Email Address* field. This is the email where the user will receive the QR code for activation of the FortiToken.
  - e. Click *Next*.

Users/Groups Creation Wizard

1 User Type 2 Login Credentials 3 Contact Info 4 Extra Info

☒ Two-factor Authentication

Authentication Type

FortiToken

Token

Email Address

SMS ☐

< Back Next Cancel

5. In the *Extra Info* tab, make sure the *User Account Status* field is set to *Enabled*. You can also optionally assign the user to a user group by enabling the *User Group* toggle.

Users/Groups Creation Wizard

☒ User Type
 ☒ Login Credentials
 ☒ Contact Info
 ☒ 4 Extra Info

User Account Status ☒ Enabled ☐ Disabled

User Group ☐

6. Click *Submit*. An activation code should be sent to the created user by email or SMS, depending upon the delivery method configured above.



FortiGate has the *Email Service* setting configured using the server *notifications.fortinet.net* by default. To see configuration, go to *System > Settings > Email Service*.

The activation code expires if not activated within the 3-day time period by default. However, the expiry time period is configurable.

#### To configure the time period (in hours) for FortiToken Mobile, using the CLI:

```
config system global
  set two-factor-ftm-expiry <1-168>
end
```



To resend the email or SMS with the activation code, refer to the [Managing FortiTokens on page 2166](#) section.

## Activating FortiToken Mobile on a mobile phone

After your system administrator provisions your token, you receive a notification with an activation code and expiry date via SMS or email. If you do not activate your token by the expiry date, you must contact your system administrator so that they can reassign your token for activation.


Platforms that support FortiToken Mobile:

| Platform                                                                                                                                                                                                                                                                          | Device and firmware support                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| iOS                                                                                                                                                                                                                                                                               | iPhone, iPad, and iPod Touch with iOS 6.0 and later.                     |
| Android                                                                                                                                                                                                                                                                           | Phones and tablets with Android Jellybean 4.1 and later.                 |
| Windows                                                                                                                                                                                                                                                                           | Windows 10 (desktop and mobile), Windows Phone 8.1, and Windows Phone 8. |
| <div style="display: flex; align-items: center;"> <div> <p>FortiToken is a Windows Universal Platform (UWP) application. To download FortiToken for Windows 10 desktop and mobile platforms, see <a href="#">FortiToken for Windows on the Microsoft Store</a>.</p> </div> </div> |                                                                          |


The following instructions describe procedures when using FortiToken Mobile for iOS on an iPhone. Procedures may vary depending on your device and firmware.

**To activate FortiToken Mobile on iOS:**

1. On your iOS device, tap on the FortiToken application icon to open the application. If this is your first time opening the application, it may prompt you to create a PIN for secure access to the application and tokens.

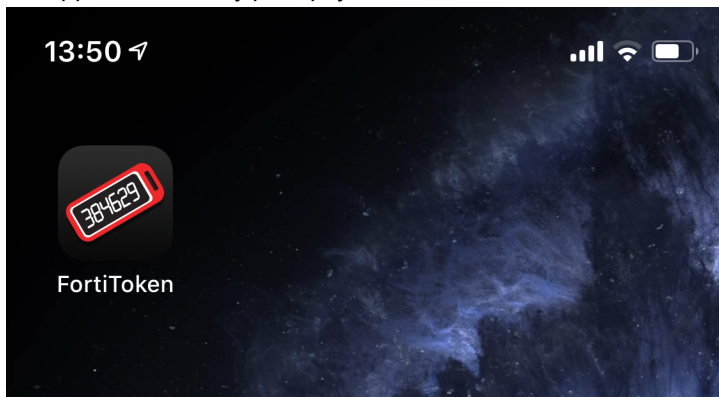


2. Tap on the + icon. The *Scan Barcode* screen appears.

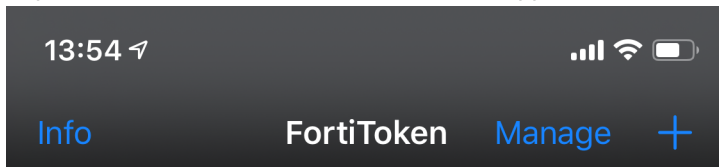


3. If you received the QR code via email, locate and scan the QR code in your email.

**OR**


If you received the activation key via SMS, tap on *Enter Manually* at the bottom of the screen, and tap on *Fortinet*.

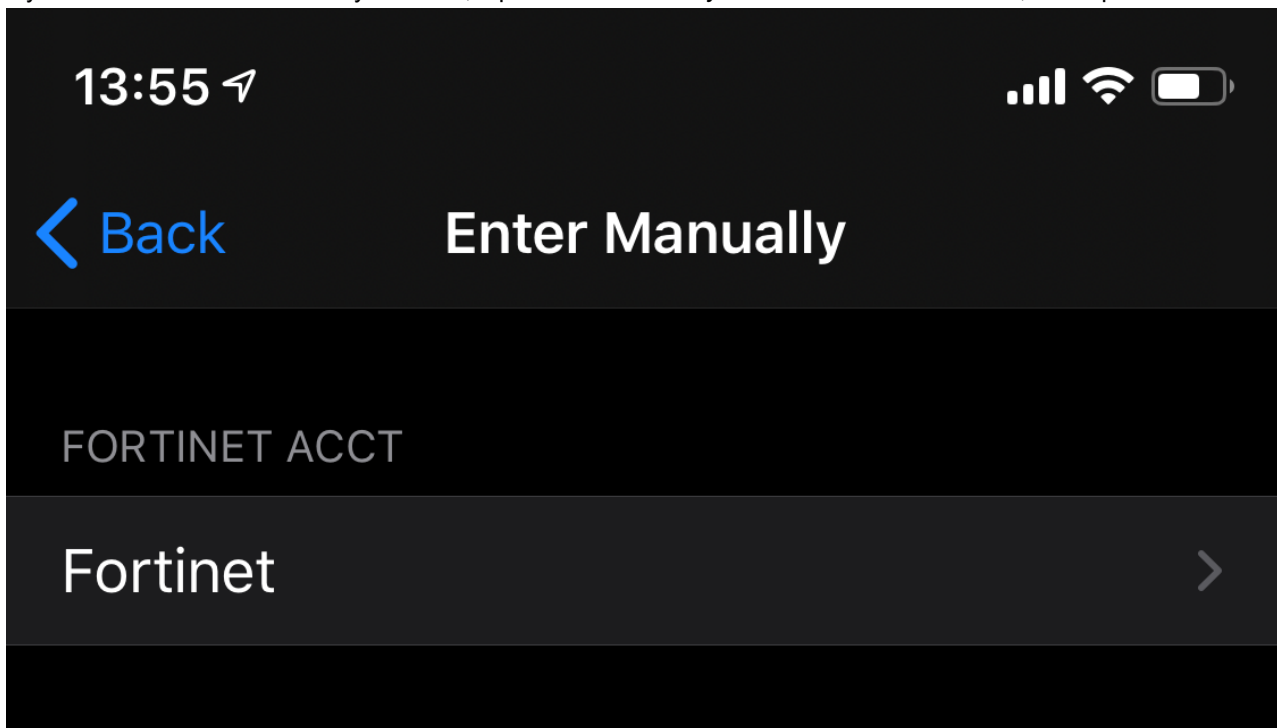

Enter your email address in the *Name* field, the activation key in the *Key* field, and tap *Done*.

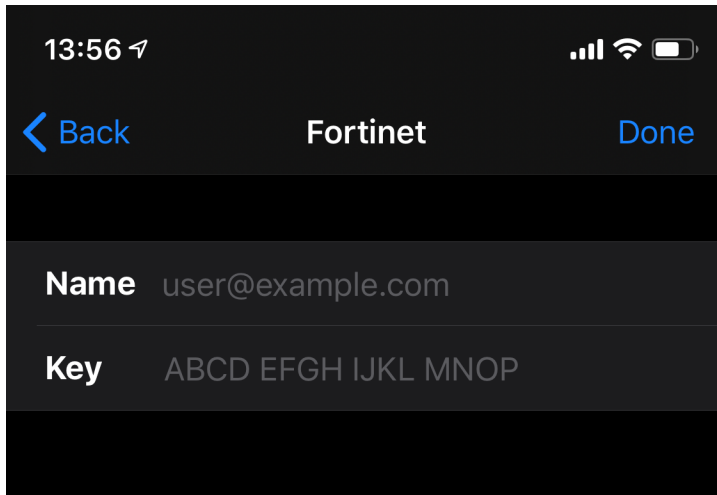

4. FortiToken Mobile activates your token, and starts generating OTP digits immediately. To view or hide the OTP digits, tap the eye icon.

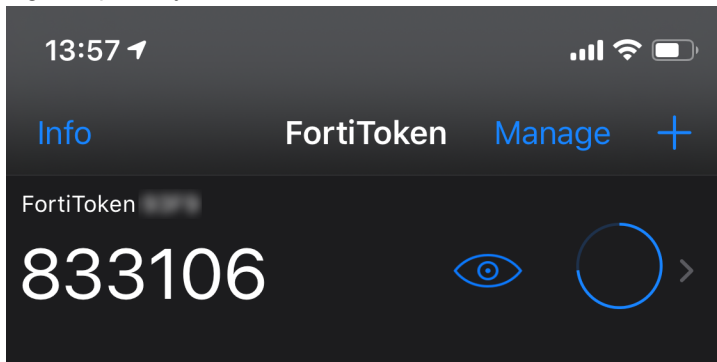


After you open the application, FortiToken Mobile generates a new 6-digit OTP every 30 seconds. All configured tokens display on the application homescreen.


The FortiToken Mobile activation process described above caters to the MFA process that involves two factors (password and OTP) of the authentication process. A third factor (fingerprint or face) can be enabled as well.

#### To enable *Touch/Face ID* on iOS for FortiToken Mobile:


1. Open the FortiToken application and tap on *Info*.

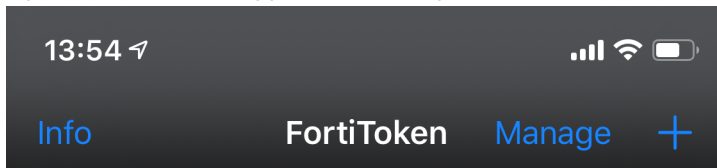

2. Tap on *Touch/Face ID & PIN*.

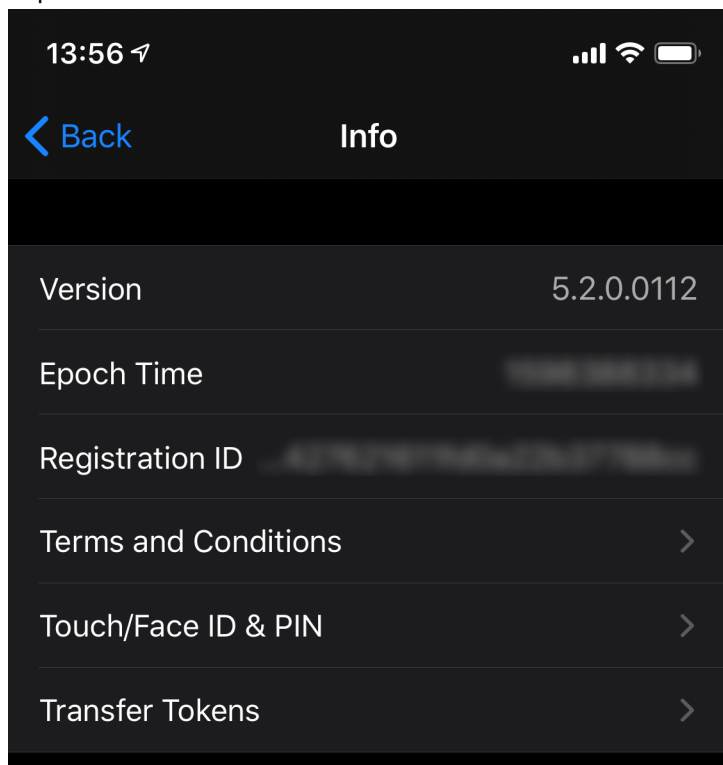


3. Enable and set up a 4-digit *PIN* for the application. The *PIN* is required to be enabled before you can enable *Touch/Face ID*.

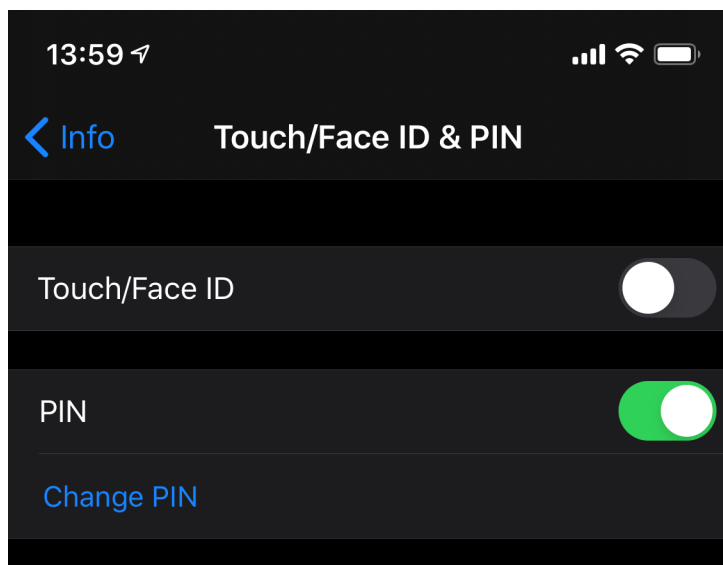




4. Enable *Touch/Face ID*.

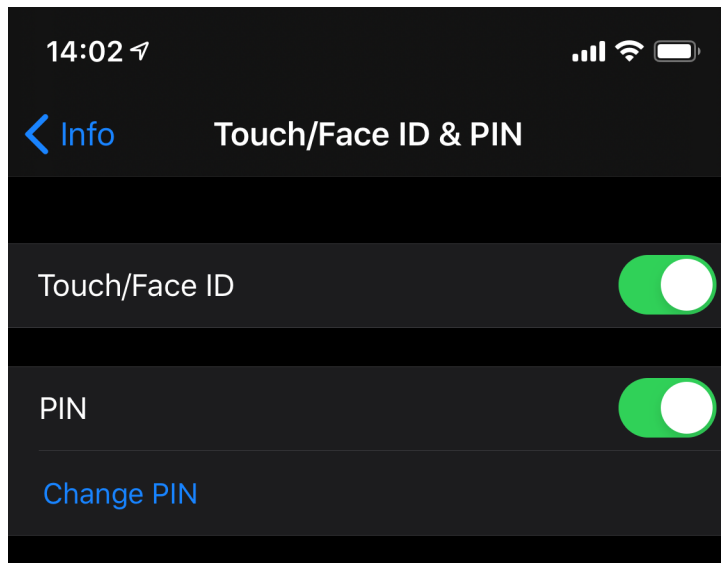

You cannot enable *Touch/Face ID* for FortiToken if *Touch/Face ID* is not set up and enabled for device unlock (*iPhone Unlock* in this case) on iOS. You must first set up and enable *Touch/Face ID* from *Settings* on your iOS device.

5. When prompted by iOS, allow the FortiToken application to use *Touch/Face ID* by tapping on *OK* in the prompt.

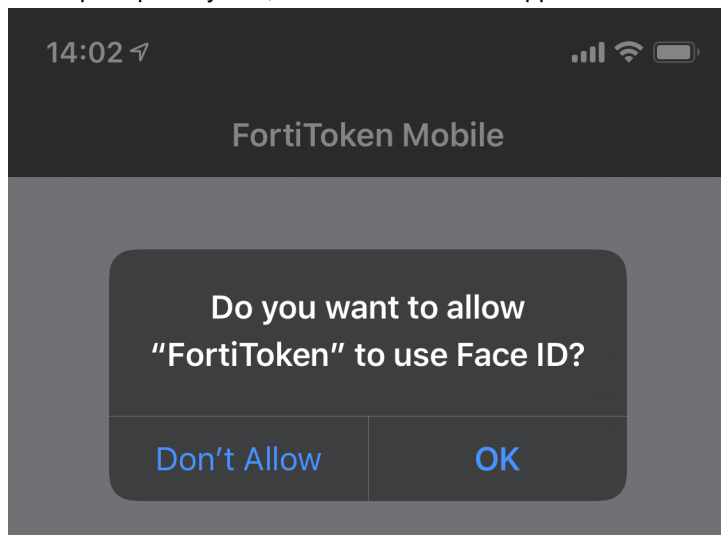

## Applying multi-factor authentication

Multi-factor authentication (MFA) may also be set up for SSL VPN users, administrators, firewall policy, wireless users, and so on. The following topics explain more about how you may use the newly created user in such scenarios:

- MFA for SSL VPN: [Set up FortiToken multi-factor authentication on page 1884](#)
- MFA for IPsec VPN: [Add FortiToken multi-factor authentication on page 1667](#)
- MFA for Administrators: [Administrator account options on page 2222](#)
- [MFA with Captive Portal](#)

- [MFA for wireless users via Captive Portal](#)
- [Configuring firewall authentication on page 2185](#)

## FortiToken Cloud

FortiToken Cloud is an Identity and Access Management as a Service (IDaaS) cloud service offering by Fortinet. It enables FortiGate and FortiAuthenticator customers to add MFA for their respective users, through the use of Mobile tokens or Hard tokens. It protects local and remote administrators as well as firewall and VPN users.

For information, see [Getting started—FGT-FTC users](#) in the [FortiToken Cloud Administration Guide](#).

## Registering hard tokens

Registering FortiTokens consists of the following steps:

1. [Adding FortiTokens to FortiOS](#).
2. [Activating FortiTokens](#).
3. [Associating FortiTokens with user accounts](#).


### Adding FortiTokens to FortiOS

You can add FortiTokens to FortiOS in the following ways:

- [Add FortiToken serial numbers using the GUI](#)
- [Add FortiToken serial numbers using the CLI](#)
- [Import FortiTokens using a serial number or seed file using the GUI](#)

#### To manually add single hard token to FortiOS using the GUI:

1. Go to *User & Authentication > FortiTokens*.
2. Click *Create New*.
3. For *Type*, select *Hard Token*.
4. In the *Serial Number* field, enter one or more FortiToken serial numbers.
5. Click *OK*.

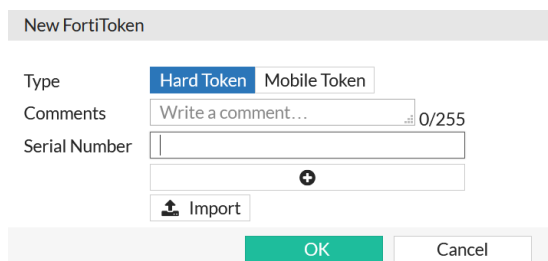

#### To add multiple FortiTokens to FortiOS using the CLI:

```
config user fortitoken
  edit <serial_number>
  next
  edit <serial_number2>
  next
```

end

### To import multiple FortiTokens to FortiOS using the GUI:

1. Go to *User & Authentication > FortiTokens*.
2. Click *Create New*.
3. For *Type*, select *Hard Token*.
4. Click *Import*. The *Import Tokens* section slides in on the screen.

5. Select *Serial Number File*.



Seed files are only used with FortiToken-200CD. These are special hardware tokens that come with FortiToken seeds on a CD. See the [FortiToken Comprehensive Guide](#) for details.

6. Click *Upload*.
7. Browse to the file's location on your local machine, select the file, then click *OK*.
8. Click *OK*.

## Activating FortiTokens

You must activate the FortiTokens before starting to use them. FortiOS requires connection to FortiGuard servers for FortiToken activation. During activation, FortiOS queries FortiGuard servers about each token's validity. Each token can only be used on a single FortiGate or FortiAuthenticator. If tokens are already registered, they are deemed invalid for re-activation on another device. FortiOS encrypts the serial number and information before sending for added security.

### To activate a FortiToken using the GUI:

1. Go to *User & Authentication > FortiTokens*.
2. Select the desired FortiTokens that have an *Available* status.
3. Click *Activate* from the menu above.
4. Click *Refresh*. The selected FortiTokens are activated.

### To activate a FortiToken using the CLI:

```
config user fortitoken
  edit <token_serial_num>
    set status activate
  next
end
```

## Associating FortiTokens with user accounts

You can associate FortiTokens with local user or administrator accounts.

### To associate a FortiToken to a local user account using the GUI:

1. Ensure that you have successfully added your FortiToken serial number to FortiOS and that its status is *Available*.
2. Go to *User & Authentication > User Definition*. Edit the desired user account.
3. Enable *Two-factor Authentication*.
4. From the *Token* dropdown list, select the desired FortiToken serial number.
5. In the *Email Address* field, enter the user's email address.
6. Click *OK*.

### To associate a FortiToken to a local user account using the CLI:

```
config user local
  edit <username>
    set type password
    set passwd "myPassword"
    set two-factor fortitoken
    set fortitoken <serial_number>
    set email-to "username@example.com"
    set status enable
  next
end
```



Before you can use a new FortiToken, you may need to synchronize it due to clock drift.

---

To associate a FortiToken to an administrator account, refer to the [Administrator account options on page 2222](#) section.

## Managing FortiTokens

This section focuses on the following:

- [Resending an activation email on page 2166](#)
- [Locking/unlocking FortiTokens on page 2167](#)
- [Managing FortiTokens drift on page 2167](#)
- [Deactivating FortiTokens on page 2167](#)
- [Moving FortiTokens to another device on page 2168](#)

### Resending an activation email

#### To resend an activation email/SMS for a mobile token on a FortiGate:

1. Go to *User & Authentication > User Definition* and edit the user.
2. Click *Send Activation Code Email* from the *Two-factor Authentication* section.

## Locking/unlocking FortiTokens

### To change FortiToken status to active or to lock:

```
config user fortitoken
  edit <token_serial_num>
    set status <active | lock>
  next
end
```

A user attempting to log in using a locked FortiToken cannot successfully authenticate.

## Managing FortiTokens drift

### If the FortiToken has drifted, the following must take place for the FortiToken to resynchronize with FortiOS:

1. FortiOS prompts the user to enter a second code to confirm.
2. The user gets the next code from the FortiToken. They enter the code at the prompt.
3. FortiOS uses both codes to update its clock to match the FortiToken.

If you still experience clock drift, it may be the result of incorrect time settings on your mobile device. If so, make sure that the mobile device clock is accurate by confirming the network time and the correct timezone.

If the device clock is set correctly, the issue could be the result of the FortiGate and FortiTokens being initialized prior to setting an NTP server. This will result in a time difference that is too large to correct with the synchronize function. To avoid this, selected Tokens can be manually drift adjusted.

### To show current drift and status for each FortiToken:

```
diagnose fortitoken info
FORTITOKEN DRIFT STATUS
FTK200XXXXXXXXC 0 token already activated, and seed won't be returned
FTK200XXXXXXXXE 0 token already activated, and seed won't be returned
FTKMOBXXXXXXXXA 0 provisioned
FTKMOBXXXXXXXX4 0 new
Total activated token: 0
Total global activated token: 0
Token server status: reachable
```

This command lists the serial number and drift for each configured FortiToken. You can check if it is necessary to synchronize the FortiGate and any particular FortiTokens.

### To adjust Mobile FortiToken for drift:

```
# execute fortitoken sync <FortiToken_ID> <token_code1> <next_token_code2>
```

## Deactivating FortiTokens

### To deactivate FortiToken on a FortiGate:

1. Go to *User & Authentication > User Definition*.
2. Select and edit the user for which you want to deactivate the token.
3. Disable the *Two-factor Authentication* toggle.

4. Click **OK**. The token will be removed from the user's *Two-factor Authentication* column. The user will also be removed from the token's *User* column under *User & Authentication > FortiTokens*.

### Moving FortiTokens to another device

FortiTokens can only be activated on a single FortiGate or FortiAuthenticator. To move FortiTokens to another device, you would first have to reset the registered FortiTokens on a device and then reactivate them on another device.

To reset Hard tokens registered to a FortiGate appliance (non-VM model), you can reset all hardware FTK200 tokens from the [Support Portal](#), or during RMA transfer. See the [Migrating users and FortiTokens to another FortiGate](#) KB article, for more information.



The above process will reset all Hard tokens and you cannot select individual tokens to reset.

---

To reset FortiToken Mobile, a single Hard token, a Hard token registered to a VM, and so on, an administrator must contact Customer Support and/or open a ticket on the [Support Portal](#).

Once reset, the FortiTokens can be activated on another FortiGate or FortiAuthenticator.


### FortiToken Mobile Push

FortiToken Mobile Push allows authentication requests to be sent as push notifications to the end user's FortiToken Mobile application.

The FortiToken Mobile push service operates as follows:

1. FortiGate sends a DNS query to the FortiToken Mobile Push proxy server (*push.fortinet.com*).
2. FortiGate connects to the proxy server via an encrypted connection over TCP/443.
3. The proxy server handles the notification request by making a TLS connection with either Apple (for iOS) or Google (for Android) notification servers. Notification data may include the recipient, session, FortiGate callback IP and port, and so on.
4. The notification service from either Apple or Google notifies the user's mobile device of the push request.
5. The FortiToken Mobile application on the user's mobile displays a prompt for the user to either *Approve* or *Deny* the

request.

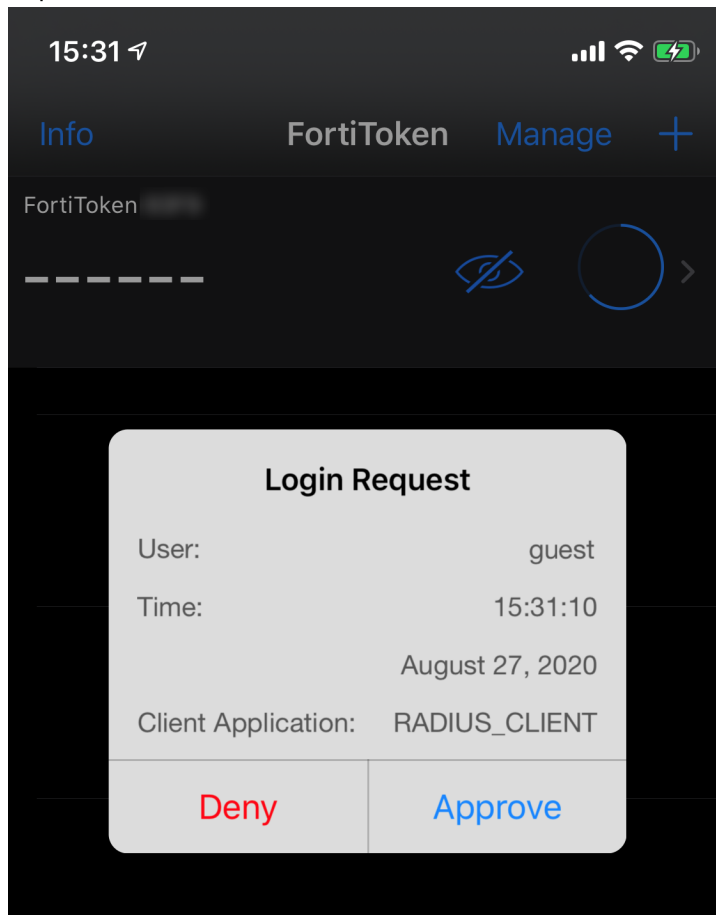

### To configure FortiToken Mobile push services using the CLI:

```
config system ftm-push
  set status enable
  set server-ip <ip-address>
  set server-port [1-65535]
end
```

The default server port is 4433.

The server IP address is the public IP address of the FortiOS interface that FortiToken Mobile calls back to. FortiOS uses this IP address for incoming FortiToken Mobile calls.

If an SSL VPN user authenticates with their token, then logs out and attempts to reauthenticate within a minute, a *Please wait x seconds to login again* message displays. This replaces a previous error/permission denied message. The *x* value depends on the calculation of how much time is left in the current time step.

```
config system interface
  edit "guest"
    set allowaccess ftm
  next
end
```



FortiOS supports FortiAuthenticator-initiated FortiToken Mobile Push notifications for users attempting to authenticate through an SSL VPN and/or RADIUS server (with FortiAuthenticator as the RADIUS server).

## Synchronizing LDAP Active Directory users to FortiToken Cloud using the two-factor filter

To synchronize Active Directory users and apply two-factor authentication using FortiToken Cloud, two-factor authentication can be enabled in the `user ldap` object definition in FortiOS. By default, FortiOS retrieves all Active Directory users in the LDAP server with a valid email or mobile number (`mail` and `mobile` attributes), and synchronizes the users to FortiToken Cloud. Users are then created on FortiToken Cloud and activation is sent out using email or SMS.

Two-factor filters can be used to reduce the number of the Active Directory users returned, and only synchronize the users who meet the filter criteria.

```
config user ldap
  edit <name>
    set dn <string>
    set two-factor {disable | fortitoken-cloud}
    set two-factor-filter <string>
  next
end
```

|                                                      |                                                                                                                                                                                                                              |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>dn &lt;string&gt;</code>                       | Set the distinguished name used to look up entries on the LDAP server. The search for users and groups starts here based on what is defined.                                                                                 |
| <code>two-factor {disable   fortitoken-cloud}</code> | Enable/disable two-factor authentication: <ul style="list-style-type: none"> <li><code>disable</code>: disable two-factor authentication</li> <li><code>fortitoken-cloud</code>: use the FortiToken Cloud service</li> </ul> |
| <code>two-factor-filter &lt;string&gt;</code>        | Set the filter used to synchronize users to FortiToken Cloud.                                                                                                                                                                |



When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

## Two-factor filter examples

In the following examples, a `user ldap` object is defined to connect to an Active Directory on a Windows server. The search will begin in the root of the `fortinet-fsso.com` directory.



**To configure a default LDAP server configuration without a two-factor filter:**

```
config user ldap
    edit "ad-ldap-auth"
        set server <ip_address>
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set two-factor fortitoken-cloud
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password *****
    next
end
```

When a two-factor filter is not used, all users in the Active Directory with a valid email or mobile number will be retrieved.

**Example 1: specific users and email address with wildcard**

With this two-factor-filter, users under fortinet-fsso.com that have oliver\* in their username and \*fortinet\* in their email will be matched.

```
config user ldap
    edit "ad-ldap-auth"
        set two-factor-filter "(&(SAMAccountName=oliver*) (mail=*fortinet*))"
    next
end
```

**Example 2: all users with matching email**

With this two-factor-filter, all users under fortinet-fsso.com with \*fortinet\* in their email will be matched.

```
config user ldap
    edit "ad-ldap-auth"
        set two-factor-filter "(&(SAMAccountName=*) (mail=*fortinet*))"
    next
end
```

**Example 3: all users in a group**

With this two-factor-filter, all users within the group fortinet-fsso.com > Testing > ftc-users will be matched.

```
config user ldap
    edit "ad-ldap-auth"
        set two-factor-filter "(&(objectCategory=Person) (sAMAccountName=*) ( memberOf=cn=ftc-
users,ou=Testing,dc=fortinet-fsso,DC=com))"
    next
end
```

**Example configuration**

In this example, Active Directory users are configured to be synchronized to FortiToken Cloud. The same two-factor filter is used from [example 1](#) and searches the Active Directory for users named oliver\* with email \*fortinet\*.

Before configuring the FortiGate:

1. Gather the information to connect to the Active Directory server through LDAP. Include all necessary fields, such as the server IP, port, CN name identifier, DN for the start of the search, bind type, and username associated with a regular bind.
2. Consider the users or groups that require two-factor authentication and should be synchronized. If necessary, group the users under the same group in the Active Directory.
3. If using a two-factor filter, formulate the `two-factor-filter` string to limit the match. For this example, `(&(SAMAccountName=oliver*)(mail=*fortinet*))`.
4. Test the filter by using the FortiOS CLI to perform a quick LDAP search:

```
# diagnose test authserver ldap-search <server_ip> 389 "ou=Testing,dc=fortinet-
fsso,DC=com" cn Administrator@fortinet-fsso.com PASSWORD 0 '(&(SAMAccountName=oliver*)
(mail=*fortinet*))' 2
```

```
searching 'ou=Testing,dc=fortinet-fsso,DC=com, cn=cn' on 10.1.100.131:389 for
(Administrator@fortinet-fsso.com, PASSWORD), secure(0), filter((&
(SAMAccountName=oliver*)(mail=*fortinet*))), flag(0x2), page_no(0)...
CN=oliver2022,OU=Testing,DC=Fortinet-FSSO,DC=COM (oliver2022, 0 entries)
```

The user, `oliver2022`, was found.

5. Estimate how many users will be retrieved, and ensure that the FortiToken Cloud account has enough user licenses to support the number of users.

### To configure Active Directory users to be synchronized to FortiToken Cloud:

1. Configure the user LDAP settings:

```
config user ldap
    edit "ad-ldap-auth"
        set server "10.1.100.131"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set two-factor fortitoken-cloud
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password *****
        set two-factor-filter "(&(SAMAccountName=oliver*)(mail=*fortinet*))"
    next
end
```

2. In the background, the FortiGate FAS daemon scans the LDAP server for users to be synchronized based on the two-factor filter pattern, but will not send them to the FortiToken Cloud server yet. Optionally, verify the users that are retrieved from the Active Directory based on the filter:

```
# diagnose fortitoken-cloud debug enable
# diagnose debug enable
# diagnose fortitoken-cloud sync
...
fas_sync_ftc[2788]: Sending packet to FTC server: "IP-of-FTC-server" Port: 8686
(length:444)
fas_sync_ftc[2792]: FTC User Sync Packet(length:444):
POST /api/v1/user_sync HTTP/1.1
Host: ftc.fortinet.com
Connection: keep-alive
User-Agent: FortiGate-401E v7.0.6,build****
Content-Type: application/json
```

Content-Length: 246

```
{ "users": [ { "username": "oliver2022", "vdom": "vdom1", "email": "o****@fortinet.com", "mobile_
number": "XXXXXXXXXX", "user_
data": 1, "action": "create" } ], "sn": "FG4H1E5819900000", "cluster_members": [
"FG4H1E5819900000" ], "group_name": "FGT400D", "group_id": "0" }
```

Reminder: User sync packet not actually sent out because of diagnose purpose!

As expected, only the user that matches the current filter is returned.

### 3. Manually trigger the synchronization process with FortiToken Cloud:

```
# execute fortitoken-cloud sync
```

The user is added to FortiToken Cloud, and an activation email or SMS message is sent to the user.

### 4. In FortiToken Cloud, go to *Users* to verify that the user was added.

| Username       | Status | MFA Method | Token SN   | Notification Method | Email              | Mobile Phone | Auth Client Count | Create Date           |
|----------------|--------|------------|------------|---------------------|--------------------|--------------|-------------------|-----------------------|
| oliver2022     | ✓      | FTM        | FTC1A5JQJ0 | Email               | o****@fortinet.com |              | 1                 | 5/24/2022, 9:27:05 AM |
| Fssu-user1     | ✓      | FTM        | FTCWGUSJGU | Email               | o****@fortinet.com |              | 1                 | 5/24/2022, 9:27:03 AM |
| admin          | ✓      | FTM        | FTCBXC00F0 | Email               | o****@fortinet.com |              | 1                 | 5/18/2022, 2:18:07 PM |
| test6          | ✓      | FTM        | FTCE4GFH5X | Email               | o****@hotmail.com  |              | 1                 | 5/18/2022, 2:18:07 PM |
| test3          | ✓      | FTM        | FTC4S2TJWA | Email               | o****@fortinet.com |              | 1                 | 5/18/2022, 2:18:06 PM |
| test4          | ✓      | FTM        | FTCTON3KGE | Email               | o****@fortinet.com |              | 2                 | 5/5/2022, 9:27:18 AM  |
| ftm-mig-local1 | ✓      | FTM        | FTKM082276 | Email               | o****@fortinet.com |              | 1                 | 2/3/2022, 2:07:35 PM  |
| ftm            | ✓      | FTM        | FTKM082174 | Email               | o****@fortinet.com |              | 1                 | 1/26/2022, 9:58:29 AM |
| ftm-mig1       | ✓      | FTM        | FTC4NQ19AH | Email               | o****@fortinet.com |              | 1                 | 1/24/2022, 3:24:41 PM |

If the activation email was sent, but user has not downloaded and activated the mobile token yet, a pending symbol appears in the *Status* column (such as for the *admin*, *test6*, and *test3* users).

### 5. In FortiOS, add the `ad-ldap-auth` object in a user group. The user group can be used for VPN, firewall authentication, and so on.



The `ldap user` object should not be used in remote LDAP user groups that require group matching because it is not supported.

## Troubleshooting and diagnosis

This section contains some common scenarios for FortiTokens troubleshooting and diagnosis:

- [FortiToken Statuses on page 2174](#)
- [Recovering trial FortiTokens on page 2174](#)
- [Recovering lost Administrator FortiTokens on page 2175](#)
- [SSL VPN with multi-factor authentication expiry timers on page 2176](#)

## FortiToken Statuses

When troubleshooting FortiToken issues, it is important to understand different FortiToken statuses. FortiToken status may be retrieved either from the CLI or the GUI, with a slightly different naming convention.

Before you begin, verify that the FortiGate has Internet connectivity and is also connected to both the FortiGuard and registration servers:

```
# execute ping fds1.fortinet.com
# execute ping directregistration.fortinet.com
# execute ping globalftm.fortinet.net
```



The `globalftm.fortinet.net` server is the Fortinet Anycast server added in FortiOS 6.4.2.

If there are connectivity issues, retrieving FortiToken statuses or performing FortiToken activation could fail. Therefore, troubleshoot connectivity issues before continuing.

### To retrieve FortiToken statuses:

- In the CLI:  
# `diagnose fortitoken info`
- In the GUI:  
Go to *User & Authentication > FortiTokens*.

Various FortiToken statuses in either the CLI or the GUI may be described as follows:

| CLI                                                 | GUI              | Description                                                                                                                                                                                                                       |
|-----------------------------------------------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| new                                                 | <i>Available</i> | Newly added, not pending, not activated, not yet assigned.                                                                                                                                                                        |
| active                                              | <i>Assigned</i>  | Assigned to a user, hardware token.                                                                                                                                                                                               |
| provisioning                                        | <i>Pending</i>   | Assigned to a user and waiting for activation on the FortiToken Mobile app.                                                                                                                                                       |
| provisioned                                         | <i>Assigned</i>  | Assigned to user and activated on the FortiToken Mobile app.                                                                                                                                                                      |
| provision timeout                                   |                  | Token provided to user but not activated on the FortiToken Mobile app. To fix, the token needs to be re-provisioned and activated in time.                                                                                        |
| token already activated, and seed won't be returned | <i>Error</i>     | Token is locked by FortiGuard FDS. The hardware token was already activated on another device and locked by FDS.                                                                                                                  |
| locked                                              |                  | Either manually locked by an Administrator ( <code>set status lock</code> ), or locked automatically, for example, when the token is unassigned and the FortiCare FTM provisioning server was unreachable to process that change. |

## Recovering trial FortiTokens

You can recover trial FortiTokens if deleted from a FortiGate, or if stuck in a state where it is not possible to provision to a user.

When a token is stuck in an unusual state or with errors, delete the FortiTokens from the unit and proceed to recover trial FortiTokens.

### To recover trial tokens via the GUI:

1. Go to *User & Authentication > FortiTokens*.
2. Click the *Import Free Trial Tokens* button at the top. The two free trial tokens are recovered.

### To recover trial tokens via the CLI:

```
# execute fortitoken-mobile import 0000-0000-0000-0000-0000
```



- Before attempting to recover the trial tokens, both the tokens should be deleted from the unit first.
- If VDOMs are enabled, trial tokens are in the management VDOM (`root` by default).

### Following error codes might come up in the CLI:

- If the device is not registered:  

```
# execute fortitoken-mobile import 0000-0000-0000-0000-0000
import fortitoken license error: -7571
```
- If the serial number format is incorrect:  

```
# execute fortitoken-mobile import 0000-0000-0000-0000-00
import fortitoken license error: -7566
```

## Recovering lost Administrator FortiTokens

If an Administrator loses their FortiToken or the FortiToken is not working, they will not be able to log into the admin console through the GUI or the CLI. If there is another Administrator that can log into the device, they may be able to reset the two-factor settings configured for the first Administrator, or create a new Admin user for them. Note that a *super\_admin* user will be able to edit other admin user settings, but a *prof\_admin* user will not be able to edit *super\_admin* settings.

In the case where there are no other administrators configured, the only option is to flash format the device and reload a backup config file. You must have console access to the device in order to format and flash the device. It is recommended to be physically on site to perform this operation.

Before formatting the device, verify that you have a backup config file. You may or may not have the latest config file backed up, though you should consider using a backed up config file, and reconfigure the rest of the recent changes manually. Otherwise, you may need to configure your device starting from the default factory settings.

### To recover lost Administrator FortiTokens:

1. If you have a backed up config file:
  - a. Open the config file and search for the specific admin user. For representational purposes we will use `Test` in our example.
 

```
# edit "Test"
  set accprofile "super_admin"
  set vdom "root"
  set two-factor fortitoken
  set fortitoken "FTKXXXXXXXXXX"
  set email-to "admin@email.com"
```

```
    set password *****
  next
end
```

- b. Once you find the settings for the Test user, delete the fortitoken-related settings:

```
# edit "Test"
  set accprofile "super_admin"
  set vdom "root"
  set password *****
  next
end
```

2. Format the boot device during a maintenance window and reload the firmware image using instructions in the [Formatting and loading FortiGate firmware image using TFTP](#) KB article.
3. Once the reload is complete, log into the admin console from the GUI using the default admin user credentials, and go to *Configuration > Restore* from the top right corner to reload your config file created in Step 1 above.
4. Once the FortiGate reboots and your configuration is restored, you can log in with your admin user credentials.

## SSL VPN with multi-factor authentication expiry timers

When SSL VPN is configured with multi-factor authentication (MFA), sometimes you may require a longer token expiry time than the default 60 seconds.

### To configure token expiry timers using the CLI:

```
config system global
  set two-factor-ftk-expiry <number of seconds>
  set two-factor-ftm-expiry <number of seconds>
  set two-factor-sms-expiry <number of seconds>
  set two-factor-fac-expiry <number of seconds>
  set two-factor-email-expiry <number of seconds>
end
```

These timers apply to the tokens themselves and remain valid for as long as configured above. However, SSL VPN does not necessarily accept tokens for the entire duration they are valid. To ensure SSLVPN accepts the token for longer durations, you need to configure the remote authentication timeout setting accordingly.

### To configure the remote authentication timeout:

```
config system global
  set remoteauthtimeout <1-300 seconds>
end
```

SSL VPN waits for a maximum of five minutes for a valid token code to be provided before closing down the connection, even if the token code is valid for longer.



The `remoteauthtimeout` setting shows how long SSL VPN waits not only for a valid token to be provided before closing down the connection, but also for other remote authentication like LDAP, RADIUS, and so on.

---

## Configuring the maximum log in attempts and lockout period

Failed log in attempts can indicate malicious attempts to gain access to your network. To prevent this security risk, you can limit the number of failed log in attempts. After the configured maximum number of failed log in attempts is reached, access to the account is blocked for the configured lockout period.

### To configure number of maximum log in attempts:

This example sets the maximum number of log in attempts to five.

```
config user setting
    set auth-lockout-threshold 5
end
```

### To configure the lockout period in seconds:

This example sets the lockout period to five minutes (300 seconds).

```
config user setting
    set auth-lockout-duration 300
end
```

## PKI

The following topics include information about public key infrastructure (PKI):

- [Configuring a PKI user on page 2177](#)
- [Using the SAN field for LDAP-integrated certificate authentication on page 2181](#)
- [SSL VPN with certificate authentication on page 1925](#)
- [SSL VPN with LDAP-integrated certificate authentication on page 1930](#)

## Configuring a PKI user

PKI users are users who are identified by a digital certificate they hold. Defining a PKI user in FortiOS specifies:


- Which CA certificate to use to validate the user's certificate
- The field and value of the user's certificate that FortiOS will check to verify a user

These peer users can then be used in a FortiGate user group, or as a peer certificate group used for IPsec VPN configurations that accept RSA certificate authentication.


### Example X.509 certificate

The following certificate demonstrates which FortiGate settings can be used to match on different fields.

Subject:

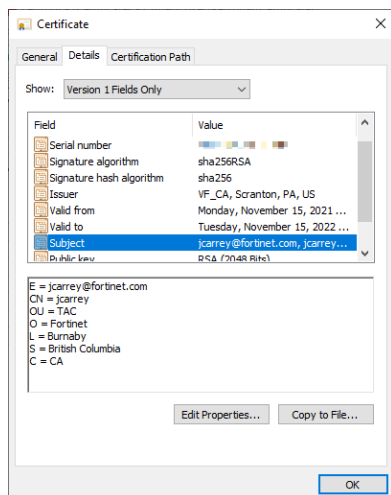

### Subject Alternative Name:

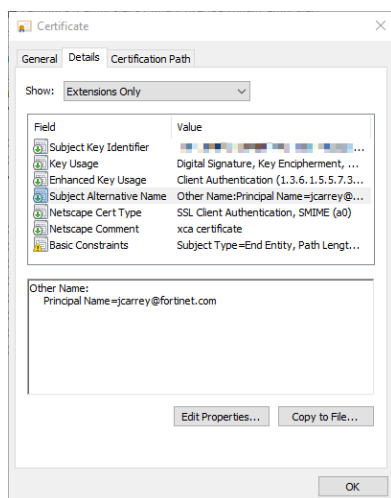

### Certification path:





**To configure a PKI user:**

```

config user peer
  edit <name>
    set ca <string>
    set mandatory-ca-verify {enable | disable}
    set subject <string>
    set cn <string>
    set cn-type {string | email | FQDN | ipv4 | ipv6}
    set ldap-server <string>
    set ldap-username <string>
    set ldap-password <string>
    set ldap-mode {password | principal-name}
  next
end

```

|                                               |                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ca <string>                                   | Specify which certificate on the FortiGate is used to validate the client's certificate. This can be any CA in the client's certificate chain. You may need to upload a CA certificate to the FortiGate specifically to identify PKI peer users (see <a href="#">CA certificate on page 2527</a> ).                                               |
| mandatory-ca-verify<br>{enable   disable}     | Control the action if the CA certificate used to sign the client's certificate is not installed on the FortiGate (default = enable). Disabling this setting makes the FortiGate consider any certificate presented by the peer as valid.<br><br>In the example certificate, the certification path shows that VF_CA signed jcarrey's certificate. |
| subject <string>                              | Enter the peer certificate name constraints.                                                                                                                                                                                                                                                                                                      |
| cn <string>                                   | Enter the peer certificate common name.                                                                                                                                                                                                                                                                                                           |
| cn-type {string   email   FQDN   ipv4   ipv6} | Set the peer certificate common name type: string, email, FQDN, IPv4 address, or IPv6 address. See <a href="#">CN on page 2180</a> for more details.                                                                                                                                                                                              |
| ldap-server <string>                          | Enter the name of an LDAP server defined under <code>config user ldap</code> for performing client access rights checks. See <a href="#">LDAP servers on page 2076</a> for more details.                                                                                                                                                          |
| ldap-mode {password   principal-name}         | Set the mode for LDAP peer authentication, either by password or principal name (default = password). See <a href="#">LDAP on page 2181</a> for more details.                                                                                                                                                                                     |
| ldap-username <string>                        | Enter the username for the LDAP server bind when the LDAP mode is password.                                                                                                                                                                                                                                                                       |
| ldap-password <string>                        | Enter the password for the LDAP server bind when the LDAP mode is password.                                                                                                                                                                                                                                                                       |

**Identifying users based on their client certificate**

When the client's certificate is valid, or `mandatory-ca-verify` is disabled, the FortiGate can then inspect the certificate to check specific fields for matching values. There are three ways of specifying which certificate field to verify: by subject, CN, or LDAP. All string comparisons are case sensitive.

## Subject

This basic method verifies that the subject string defined in the PKI user setting matches a value or substring in the subject field of the user certificate. Further matching is controlled in the following VPN certificate settings.

```
config vpn certificate setting
    set subject-match {substring | value}
    set subject-set {superset | subset}
    set cn-match {substring | value}
    set cn-allow-multi {enable | disable}
end
```

```
subject-match {substring
| value}
```

Control how to do relative distinguished name (RDN) value matching with the certificate subject name:

- **substring:** find a match if any string in the certificate subject name matches the name being searched for (such as `set subject jcarrey`).
- **value:** find a match if any attribute value string in a certificate subject name is an exact match with the name being searched for (such as `set subject "OU=TAC"` or `set subject "C=CA, CN=jcarrey, OU=TAC"`).

```
set subject-set {superset
| subset}
```

Control how to do RDN value matching with the certificate subject name:

- **superset:** a certificate only passes verification if it contains all the RDNs defined in the subject settings (such as `set subject "E = jcarrey@fortinet.com, CN = jcarrey, OU = TAC, O = Fortinet, L = Burnaby, S = British Columbia, C = CA"`).
- **subset:** a certificate passes verification if the RDN is a subset of the certificate subject (such as `set subject "CN = jcarrey, OU = TAC"`).

```
cn-match {substring |
value}
```

Control how to do CN value matching with the certificate subject name:

- **substring:** find a match if any string in the certificate subject name matches the name being searched for.
- **value:** find a match if any attribute value string in a certificate subject name is an exact match with the name being searched for.

```
cn-allow-multi {enable |
disable}
```

Enable/disable allowing multiple CN entries with the certificate subject name (default = enable).

## CN

Common name (CN) certificate verification compares the CN in the subject field with the configured string (such as `set cn "jcarrey"`). The following logic is used when configuring different CN types:

| Type   | Action                                                                                                                         |
|--------|--------------------------------------------------------------------------------------------------------------------------------|
| string | Based on the <code>cn-match</code> setting, perform a substring or exact match in the certificate subject.                     |
| email  | Look for a match in the certificate subject.                                                                                   |
| FQDN   | Look for a match in the certificate subject, then compare the mapped IP and client IP. The FQDN is only retrieved from the CN. |

| Type | Action                                                            |
|------|-------------------------------------------------------------------|
| ipv4 | Look for a match in the certificate subject, then compare the IP. |
| ipv6 | Look for a match in the certificate subject, then compare the IP. |

The CN type also controls the format checking of the CN string. In this example, if the CN type is set to email, the CN must be in email format (`set cn "jcarrey@fortinet.com"`).

## LDAP

LDAP-integrated user authentication allows the FortiGate to check the connecting user against an LDAP server in two ways: through a username and password, or the certificate's principal name. The `password` method requires the username and password of each authenticating user to be entered, so it is not recommended when configuring PKI users. The `principal-name` method is recommended.

The UPN in the user certificate's Subject Alternative Name (SAN) field is used to look up the user in the LDAP directory. The SAN in the certificate for UPN matching can be the UPN on the AD LDAP server (default), RFC 822 Name (corporate email address), or DNS name. If a match is found, then authentication succeeds. This type of configuration scales well since only one PKI user needs to be created on the FortiGate. Connecting clients use their unique user certificate to match within the configured LDAP server. See [Using the SAN field for LDAP-integrated certificate authentication on page 2181](#) for an example.

## Using the SAN field for LDAP-integrated certificate authentication

Certificate-based authentication against Active Directory LDAP (AD LDAP) supports the UserPrincipalName (UPN), RFC 822 Name (corporate email address) defined in the SAN extension of the certificate, and the DNS defined in the user certificate as the unique identifier in the Subject Alternative Name (SAN) field for peer user certificates.

```
config user ldap
    edit <name>
        set account-key-upn-san {othername | rfc822name | dnsname}
    next
end
```

```
account-key-upn-san
{othername |
 rfc822name |
 dnsname}
```

Define the SAN in the certificate for UserPrincipalName matching:

- othername: match to UserPrincipalName (UPN) on AD LDAP server (default)
- rfc822name: match to RFC 822 email address
- dnsname: match to DNS name

The LDAP server configurations are applied to the user peer configuration when the PKI user is configured.

```
config user peer
    edit <name>
        set ca <string>
        set cn <string>
        set ldap-server <string>
        set ldap-mode principal-name
    next
end
```

When a user authenticates to the FortiGate for an administrative log in, SSL VPN, IPsec dialup, or firewall authentication using a user certificate, it presents a signed certificate issued by a trusted CA to the FortiGate. The following sequence of events occurs as the FortiGate processes the certificate for authentication:

1. The FortiGate verifies if the certificate is issued by a trusted CA. If the CA is not a public CA, ensure that the CA certificate is uploaded and trusted by the FortiGate, and is applied to the user peer configurations (`set ca <string>`).
2. The FortiGate verifies that the CN field of the certificate matches the CN specified in the user peer configurations (`set cn <string>`).
3. If the user peer configuration has `ldap-server` configured and the `ldap-mode` is set to `principal-name`, the FortiGate uses the unique identifier in the certificate to authenticate against the LDAP server.
  - a. If `set account-key-upn-san othername` is configured (the default setting), the FortiGate uses the UPN in the certificate's SAN field to authenticate against LDAP.
  - b. If `set account-key-upn-san rfc822name` is configured, the FortiGate uses the RFC 822 Name in the certificate's SAN field to authenticate against LDAP.
  - c. If `set account-key-upn-san dnsname` is configured, the FortiGate uses the DNS name in the certificate to authenticate against LDAP.
4. By default, the FortiGate tries to match the UserPrincipalName (UPN) attribute on the AD LDAP. If this needs to be changed to another field, configure the `account-key-filter` setting on the LDAP configuration:

```
config user ldap
  edit <name>
    set account-key-filter <string>
  next
end
```




When configuring an LDAP connection to an Active Directory server, an administrator must provide Active Directory user credentials.

- To secure this connection, use LDAPS on both the Active Directory server and FortiGate. See [Configuring an LDAP server on page 2076](#) and [Configuring client certificate authentication on the LDAP server on page 2090](#).
- Apply the principle of least privilege. For the LDAP regular bind operation, do not use credentials that provide full administrative access to the Windows server when using credentials. See [Configuring least privileges for LDAP admin account authentication in Active Directory on page 2083](#).

## Example

In this example, a user certificate is issued by a customer's CA to a user. The user uses this certificate to authenticate to the SSL VPN web portal. The administrator decides to use the RFC 822 Name in the SAN field to authenticate against their corporate AD LDAP. The Active Directory attribute to check against the RFC 822 Name field is the mail attribute.

User certificate information:

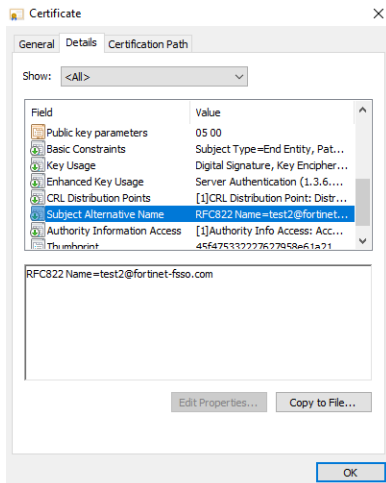

The configuration used in this example assumes the following:

- The CA certificate has already been uploaded to the FortiGate.
- The SSL VPN configurations have already been configured, pending the assignment of the PKI user group.

### To configure the authentication settings:

#### 1. Configure the LDAP server:

```
config user ldap
    edit "ad-ldap-peer-user"
        set server "10.1.100.131"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password ENC XXXXXXXXXXXXXXXXXXXX
        set password-renewal enable
        set account-key-upn-san rfc822name
        set account-key-filter "(&(mail=%s)(!(UserAccountControl:1.2.840.113556.1.4.803:=2)))"
    next
end
```

By default, the `account-key-filter` filters on the UPN attribute uses the following string: `(&(userPrincipalName=%s)(!(UserAccountControl:1.2.840.113556.1.4.803:=2)))`.

- `(userPrincipalName=%s)` matches the UPN attribute on the AD LDAP.
- `(!(UserAccountControl:1.2.840.113556.1.4.803:=2))` filters out inactive and locked AD accounts.

#### 2. Configure the local peer user:

```
config user peer
    edit "peer-RFC822-name"
        set ca "CA_Cert_2"
        set cn "test2"
        set ldap-server "ad-ldap-peer-user"
        set ldap-mode principal-name
    next
end
```

**3. Configure the firewall user group for SSL VPN authentication:**

```
config user group
    edit "vpn-group"
        set member "peer-RFC822-name"
    next
end
```

**4. Apply the user group to the SSL VPN configuration and firewall policy.****Verification**

When the SSL VPN user authenticates in a browser, the FortiOS fnbamd daemon first validates the certificate supplied by the user. If the certificate check is successful, the information in the SAN field of the user certificate is used to find a matching user record on the AD LDAP.

**To verify the configuration:**

```
# diagnose debug app fnbamd -l
# diagnose debug enable
```

The output includes the following information.

- Validate the certificate:

```
...
__check_crl-***CERTIFICATE IS GOOD***
[567] fnbamd_cert_verify-Issuer found: CA_Cert_2 (SSL_DPI opt 1)
[500] fnbamd_cert_verify-Following cert chain depth 1
[675] fnbamd_cert_check_group_list-checking group with name 'vpn-group'
[490] __check_add_peer-check 'peer-RFC822-name'
[366] peer_subject_cn_check-Cert subject 'C = CA, ST = BC, L = Burnaby, CN = test2'
[294] __RDN_match-Checking 'CN' val 'test2' -- match.
[404] peer_subject_cn_check-CN is good.
```

- Bind to LDAP and try to match the content of the SAN in the user certificate with the user record in the AD LDAP:


```
...
__cert_ldap_query-LDAP query, idx 0
[448] __cert_ldap_query-UPN = 'test2@fortinet-fsso.com'
[1717] fnbamd_ldap_init-search filter is: (&(mail=test2@fortinet-fsso.com)(!(UserAccountControl:1.2.840.113556.1.4.803:=2)))
```

- Confirm the successful match:

```
...
__cert_ldap_query_cb-LDAP ret=0, server='ad-ldap-peer-user', req_id=269178889
[388] __cert_ldap_query_cb-Matched peer 'peer-RFC822-name'
...
[1066] fnbamd_cert_auth_copy_cert_status-req_id=269178889
[1074] fnbamd_cert_auth_copy_cert_status-Matched peer user 'peer-RFC822-name'
[833] fnbamd_cert_check_matched_groups-checking group with name 'vpn-group'
[895] fnbamd_cert_check_matched_groups-matched
[1193] fnbamd_cert_auth_copy_cert_status-Cert st 290, req_id=269178889
[209] fnbamd_comm_send_result-Sending result 0 (nid 672) for req 269178889, len=2155
```

## Configuring firewall authentication

In this example, a Windows network is connected to the FortiGate on port 2, and another LAN, Network\_1, is connected on port 3.

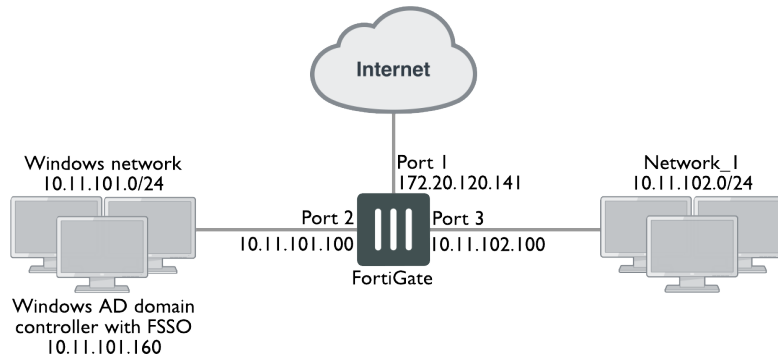

All Windows network users authenticate when they log on to their network. Engineering and Sales groups members can access the Internet without reentering their authentication credentials. The example assumes that you have already installed and configured FSSO on the domain controller.

LAN users who belong to the Internet\_users group can access the Internet after entering their username and password. The example shows two users: User1, authenticated by a password stored in FortiOS; and User 2, authenticated on an external authentication server. Both users are local users since you create the user accounts in FortiOS.

1. [Create a locally authenticated user account.](#)
2. [Create a RADIUS-authenticated user account.](#)
3. [Create an FSSO user group.](#)
4. [Create a firewall user group.](#)
5. [Define policy addresses.](#)
6. [Create security policies.](#)

## Creating a locally authenticated user account

User1 is authenticated by a password stored in FortiOS.

**To create a locally authenticated user account in the GUI:**

1. Go to *User & Authentication > User Definition* and click *Create New*.
2. Configure the following settings:

|                     |                 |
|---------------------|-----------------|
| User Type           | Local User      |
| User Name           | User1           |
| Password            | hardtoguess1@@1 |
| User Account Status | Enabled         |

3. Click *Submit*.

**To create a locally authenticated user account in the CLI:**

```
config user local
  edit user1
    set type password
    set passwd hardtougness1@@1
  next
end
```

## Creating a RADIUS-authenticated user account

You must first configure FortiOS to access the external authentication server, then create the user account.

**To create a RADIUS-authenticated user account in the GUI:**

1. Go to *User & Authentication > RADIUS Servers* and click *Create New*.
2. Configure the following settings:

|                       |              |
|-----------------------|--------------|
| Name                  | OurRADIUSsrv |
| Authentication method | Default      |
| <b>Primary Server</b> |              |
| IP/Name               | 10.11.101.15 |
| Secret                | OurSecret    |

3. Click *OK*.
4. Go to *User & Authentication > User Definition* and click *Create New*.
5. Configure the following settings:

|                     |                    |
|---------------------|--------------------|
| User Type           | Remote RADIUS User |
| User Name           | User2              |
| RADIUS Server       | OurRADIUSsrv       |
| User Account Status | Enabled            |

6. Click *Submit*.

**To create a RADIUS-authenticated user account in the CLI:**

```
config user radius
  edit OurRADIUSsrv
    set server 10.11.102.15
    set secret OurSecret
    set auth-type auto
  next
end
config user local
  edit User2
    set name User2
    set type radius
    set radius-server OurRADIUSsrv
```



next  
end

## Creating an FSSO user group

This example assumes that you have already set up FSSO on the Windows network and that it used advanced mode, meaning that it uses LDAP to access user group information. You must do the following:

- Configure LDAP access to the Windows AD global catalog
- Specify the collector agent that sends user log in information to FortiOS
- Select Windows user groups to monitor
- Select and add the Engineering and Sales groups to an FSSO user group

### To create an FSSO user group in the GUI:

1. Configure LDAP for FSSO:
  - a. Go to *User & Authentication > LDAP Servers* and click *Create New*.
  - b. Configure the following settings:

|                    |                                                    |
|--------------------|----------------------------------------------------|
| Name               | ADserver                                           |
| Server Name / IP   | 10.11.101.160                                      |
| Distinguished Name | dc=office,dc=example,dc=com                        |
| Bind Type          | Regular                                            |
| Username           | cn=FSSO_Admin,cn=users,dc=office,dc=example,dc=com |
| Password           | Enter a secure password.                           |
  - c. Leave other fields as-is. Click *OK*.
2. Specify the collector agent for FSSO;
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. Under *Endpoint/Identity*, select *FSSO Agent on Windows AD*.

## c. Configure the following settings:

|                                |                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name                           | Enter the Windows AD server name. This name appears in the Windows AD server list when you create user groups. In this example, the name is WinGroups.                                                                                                                                                                                       |
| Server IP/Name                 | Enter the IP address or name of the server where the agent is installed. The maximum name length is 63 characters. In this example, the IP address is 10.11.101.160.                                                                                                                                                                         |
| Password                       | Enter the password of the server where the agent is installed. You only need to enter a password for the collector agent if you configured the agent to require authenticated access.<br><br>If the TCP port used for FSSO is not the default, 8000, you can run the <code>config user fsso</code> command to change the setting in the CLI. |
| Collector Agent AD access mode | Advanced                                                                                                                                                                                                                                                                                                                                     |
| LDAP Server                    | Select the previously configured LDAP server. In this example, it is ADserver.                                                                                                                                                                                                                                                               |
| User/Groups/Organization Units | Select the users, groups, and OUs to monitor.                                                                                                                                                                                                                                                                                                |

## d. Click OK.

## 3. Create the FSSO\_Internet\_users user group:

- a. Go to *User & Authentication > User Groups* and click *Create New*.
- b. Configure the following settings:

|         |                                |
|---------|--------------------------------|
| Name    | FSSO_Internet_users            |
| Type    | Fortinet Single Sign-On (FSSO) |
| Members | Engineering, Sales             |

## c. Click OK.

**To create an FSSO user group in the CLI:**

```

config user ldap
  edit "ADserver"
    set server "10.11.101.160"
    set dn "cn=users,dc=office,dc=example,dc=com"
    set type regular
    set username "cn=administrator,cn=users,dc=office,dc=example,dc=com"
    set password set_a_secure_password
  next
end
config user fsso
  edit "WinGroups"
    set ldap-server "ADserver"
    set password *****
    set server "10.11.101.160"
  next
end

```

```
config user group
edit FSSO_Internet_users
set group-type fsso-service
set member CN=Engineering,cn=users,dc=office,dc=example,dc=com
        CN=Sales,cn=users,dc=office,dc=example,dc=com
next
end
```

## Creating a firewall user group

This example shows a firewall user group with only two users. You can add additional members.

### To create a firewall user group in the GUI:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Configure the following settings:

|         |                |
|---------|----------------|
| Name    | Internet_users |
| Type    | Firewall       |
| Members | User1, User2   |

3. Click *OK*.

### To create a firewall user group in the CLI:

```
config user group
edit Internet_users
set group-type firewall
set member User1 User2
next
end
```

## Defining policy addresses

### To define policy addresses:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Configure the following settings:

|            |                |
|------------|----------------|
| Name       | Internal_net   |
| Type       | Subnet         |
| IP/Netmask | 10.11.102.0/24 |
| Interface  | Port 3         |

4. Click *OK*.
5. Create another new address by repeating steps 2-4 using the following settings:

|            |                |
|------------|----------------|
| Name       | Windows_net    |
| Type       | Subnet         |
| IP/Netmask | 10.11.101.0/24 |
| Interface  | Port 2         |

## Creating security policies

You must create two security policies: one for the firewall group connecting through port 3, and one for the FSSO group connecting through port 2.

### To create security policies using the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Configure the following settings:

|                     |                                              |
|---------------------|----------------------------------------------|
| Incoming Interface  | Port2                                        |
| Source Address      | Windows_net                                  |
| Source User(s)      | FSSO_Internet_users                          |
| Outgoing Interface  | Port1                                        |
| Destination Address | all                                          |
| Schedule            | always                                       |
| Service             | ALL                                          |
| NAT                 | Enabled.                                     |
| Security Profiles   | You can enable security profiles as desired. |

4. Click *OK*.

5. Create another new policy by repeating steps 2-4 using the following settings:

|                     |                                              |
|---------------------|----------------------------------------------|
| Incoming Interface  | Port3                                        |
| Source Address      | Internal_net                                 |
| Source User(s)      | Internet_users                               |
| Outgoing Interface  | Port1                                        |
| Destination Address | all                                          |
| Schedule            | always                                       |
| Service             | ALL                                          |
| NAT                 | Enabled.                                     |
| Security Profiles   | You can enable security profiles as desired. |

6. Click OK.

**To create security policies using the CLI:**

```
config firewall policy
  edit 0
    set srcintf port2
    set dstintf port1
    set srcaddr Windows_net
    set dstaddr all
    set action accept
    set groups FSSO_Internet_users
    set schedule always
    set service ANY
    set nat enable
  next
end
config firewall policy
  edit 0
    set srcintf port3
    set dstintf port1
    set srcaddr internal_net
    set dstaddr all
    set action accept
    set schedule always
    set groups Internet_users
    set service ANY
    set nat enable
  next
end
```

## FSSO

FortiOS can provide single sign-on capabilities to Windows AD, Citrix, VMware Horizon, Novell eDirectory, and Microsoft Exchange users with the help of agent software installed on these networks. The agent software sends information

about user logons to the FortiGate unit. With user information such as IP address and user group memberships from the network, FortiGate security policies can allow authenticated network access to users who belong to the appropriate user groups without requesting their credentials again.

Fortinet Single Sign-On (FSSO), through agents installed on the network, monitors user logons and passes that information to the FortiGate unit. When a user logs on at a workstation in a monitored domain, FSSO:

- Detects the logon event and records the workstation name, domain, and user,
- Resolves the workstation name to an IP address,
- Determines which user groups the user belongs to,
- Sends the user logon information, including IP address and groups list, to the FortiGate unit, and
- Creates one or more log entries on the FortiGate unit for this logon event as appropriate.

When the user tries to access network resources, the FortiGate unit selects the appropriate security policy for the destination. If the user belongs to one of the permitted user groups associated with that policy then the connection is allowed, otherwise the connection is denied.

### Agent-based FSSO

Several different FSSO agents can be used in an FSSO implementation:

- Domain Controller (DC) agent
- eDirectory agent
- Citrix/Terminal Server (TS) agent
- Collector Agent

Consult the latest [FortiOS Release Notes](#) for operating system compatibility information.

#### Domain Controller agent

The Domain Controller (DC) agent must be installed on every domain controller when you use DC Agent mode. The DC agents monitor user logon events and pass the information to the Collector agent, which stores the information and sends it to the FortiGate unit.

#### eDirectory agent

The eDirectory agent is installed on a Novell network to monitor user logons and send the required information to the FortiGate unit. It functions much like the Collector agent on a Windows AD domain controller. The agent can obtain information from the Novell eDirectory using either the Novell API or LDAP.

#### Terminal Server agent

The Terminal Server (TS) agent can be installed on a Citrix, VMware Horizon 7.4, or Windows Terminal Server to monitor user logons in real time. It functions much like the DC Agent on a Windows AD domain controller.

#### Collector agent

The Collector Agent (CA) is installed as a service on a server in the Windows AD network to monitor user logons and send the required information to the FortiGate unit. The Collector agent can collect information from a DC agent (Windows AD) and TS agent (Citrix or VMware Horizon Terminal Server).

In a Windows AD network, the Collector agent can optionally obtain logon information by polling the AD domain controllers. In this case, DC agents are not needed.

The CA is responsible for DNS lookups, group verification, workstation checks, and updating FortiGates on logon records. The FSSO CA sends Domain Local Security Group and Global Security Group information to FortiGate units. The CA communicates with the FortiGate over TCP port 8000 and it listens on UDP port 8002 for updates from the DC agents.

The FortiGate device can have up to five CAs configured for redundancy. If the first CA on the list is unreachable, the next is attempted, and so on down the list until one is contacted.

All DC agents must point to the correct CA port number and IP address on domains with multiple DCs.



A FortiAuthenticator device can act much like a CA, collecting Windows AD user logon information and sending it to the FortiGate device. It is particularly useful in large installations with several FortiGate units. For more information, see the [FortiAuthenticator Administration Guide](#).

---

## Agentless FSSO

For Windows AD networks, FortiGate devices can also provide SSO capability by directly polling Windows Security Event log entries on Windows DC for user log in information. This configuration does not require a CA or DC agent.

## FortiGate configuration

To configure FSSO on a FortiGate, go to *Security Fabric > External Connectors*.

When creating a new connector, several options for connectors are available under Endpoint/Identity:

- [Fortinet single sign-on agent on page 2906](#)  
For most FSSO Agent-based deployments, this connector option will be used. Specify either Collector Agent or Local as User Group Source to collect user groups from the Collector Agent, or to match users to user groups from a LDAP server.
- [Poll Active Directory server on page 2907](#)  
This connection option directly polls Windows Security Event log entries on Windows DC for user log in information.
- [RADIUS single sign-on agent on page 2914](#)  
FortiGate can authenticate users who have authenticated on a remote RADIUS server by monitoring the RADIUS accounting records forwarded by the RADIUS server to the FortiGate.
- [Exchange Server connector on page 2917](#)  
FortiGate collects information about authenticated users from corporate Microsoft Exchange Servers.
- [Symantec endpoint connector on page 2908](#)  
This connector uses client IP information from Symantec Endpoint Protection Manager (SEPM) to assign dynamic IP addresses on FortiOS.  
Since FSSO is commonly associated with Agent-based FSSO and Agentless FSSO, this chapter will primarily focus on the first two Security Fabric External Connector options.

## FSSO polling connector agent installation

This topic gives an example of configuring a local FSSO agent on the FortiGate. The agent actively pools Windows Security Event log entries on Windows Domain Controller (DC) for user log in information. The FSSO user groups can then be used in a firewall policy.

This method does not require any additional software components, and all the configuration can be done on the FortiGate.

### To configure a local FSSO agent on the FortiGate:

1. [Configure an LDAP server on the FortiGate on page 2194](#)
2. [Configure a local FSSO polling connector on page 2194](#)
3. [Add the FSSO groups to a policy on page 2195](#)


## Configure an LDAP server on the FortiGate

Refer to [Configuring an LDAP server on page 2076](#). The connection must be successful before configuring the FSSO polling connector.

## Configure a local FSSO polling connector

### To configure a local FSSO polling connector:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Endpoint/Identity* section, select *Poll Active Directory Server*.
3. Fill in the required information.
4. For *LDAP Server*, select the server you just created.
5. Configure the group settings:
  - a. For *Users/Groups*, click *Edit*. The structure of the LDAP tree is shown in the *Users/Groups* window.
  - b. Click the *Groups* tab.
  - c. Select the required groups, right-click on them, and select *Add Selected*. Multiple groups can be selected at one time by holding the CTRL or SHIFT keys. The groups list can be filtered or searched to limit the number of groups that are displayed.
  - d. Click the *Selected* tab and verify that the required groups are listed. To remove a group, right-click and select *Remove Selected*.
  - e. Click *OK* to save the group settings.
6. Click *OK* to save the connector settings.
7. Go back to *Security Fabric > External Connectors*.
8. There should be two new connectors:

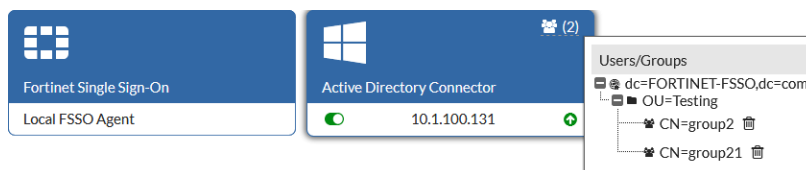

- The *Local FSSO Agent* is the backend process that is automatically created when the first FSSO polling connector is created.



- The *Active Directory Connector* is the front end connector that can be configured by FortiGate administrators.

To verify the configuration, hover the cursor over the top right corner of the connector; a popup window will show the currently selected groups. A successful connection is also shown by a green up arrow in the lower right corner of the connector.

If you need to get log in information from multiple DCs, then you must configure other Active Directory connectors for each additional DC to be monitored.

## Add the FSSO groups to a policy

FSSO groups can be used in a policy by either adding them to the policy directly, or by adding them to a local user group and then adding the group to a policy.

### To add the FSSO groups to a local user group:

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Enter a name for the group in the *Name* field.
3. Set the *Type* to *Fortinet Single Sign-On (FSSO)*.
4. In the *Members* field, click the **+** and add the FSSO groups.

5. Click **OK**.
6. Add the local FSSO group to a policy.

### To add the FSSO groups directly to a firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. In the *Source* field, click the **+**. In the *Select Entries* pane, select the *User* tab.
3. Select the FSSO groups.
4. Configure the remaining settings as required.
5. Click **OK**.

## Troubleshooting

**If an authenticated AD user cannot access the internet or pass the firewall policy, verify the local FSSO user list:**

```
# diagnose debug authd fsso list
----FSSO logons----
IP: 10.1.100.188 User: test2 Groups: CN=group2,OU=Testing,DC=Fortinet-FSSO,DC=COM
Workstation: MemberOf: CN=group2,OU=Testing,DC=Fortinet-FSSO,DC=COM
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----
```

1. Check that the group in *MemberOf* is allowed by the policy.
2. If the expected AD user is not in list, but other users are, it means that either:
  - The FortiGate missed the log in event, which can happen if many users log in at the same time, or
  - The user's workstation is unable to connect to the DC, and is currently logged in with cached credentials, so there is no entry in the DC security event log.
3. If there are no users in the local FSSO user list:

- a. Ensure that the local FSSO agent is working correctly:

```
# diagnose debug enable
# diagnose debug authd fsso server-status
```

| Server Name                      | Connection Status | Version         | Address   |
|----------------------------------|-------------------|-----------------|-----------|
| -----                            | -----             | -----           | -----     |
| FGT_A (vdom1) # Local FSSO Agent | connected         | FSAE server 1.1 | 127.0.0.1 |

The connection status must be connected.

- b. Verify the Active Directory connection status:

```
# diagnose debug fsso-polling detail 1
AD Server Status (connected):
ID=1, name(10.1.100.131),ip=10.1.100.131,source(security),users(0)
port=auto username=Administrator
read log eof=1, latest logon timestamp: Fri Jul 26 10:36:20 2019
```

```
polling frequency: every 10 second(s) success(274), fail(0)
LDAP query: success(0), fail(0)
LDAP max group query period(seconds): 0
LDAP status: connected
```

```
Group Filter: CN=group2,OU=Testing,DC=Fortinet-
FSSO,DC=com+CN=group21,OU=Testing,DC=Fortinet-FSSO,DC=COM
```

If the polling frequency shows successes and failures, that indicates sporadic network problems or a very busy DC. If it indicates no successes or failures, then incorrect credentials could be the issue.

If the LDAP status is connected, then the FortiGate can access the configured LDAP server. This is required for AD group membership lookup of authenticated users because the Windows Security Event log does not include group membership information. The FortiGate sends an LDAP search for group membership of authenticated users to the configured LDAP server.

FortiGate adds authenticated users to the local FSSO user list only if the group membership is one of the groups in *Group Filter*.

4. If necessary, capture the output of the local FortiGate daemon that polls Windows Security Event logs:

```
# diagnose debug application fssod -1
```

This output contains a lot of detailed information which can be captured to a text file.

## Limitations

- NTLM based authentication is not supported.
- If there are a large number of user log ins at the same time, the FSSO daemon may miss some. Consider using FSSO agent mode if this will be an issue. See [Public and private SDN connectors on page 2836](#) for information.
- The FSSO daemon does not support all of the security log events that are supported by other FSSO scenarios. For example, only Kerberos log in events 4768 and 4769 are supported.


## FSSO using Syslog as source

This example describes how to configure Fortinet Single Sign-On (FSSO) agent on Windows using syslog as the source and a custom syslog matching rule.

The FSSO collector agent must be build 0291 or later, and in advanced mode (see [How to switch FSSO operation mode from Standard Mode to Advanced Mode](#)).


### To configure the FSSO agent on Windows:

1. Open the FSSO agent on Windows.
2. Click *Advanced Settings*.
3. Go to the *Syslog Source List* tab.
4. Select *Enable this feature*.
5. Set *Syslog Listening Port*, or use the default port.

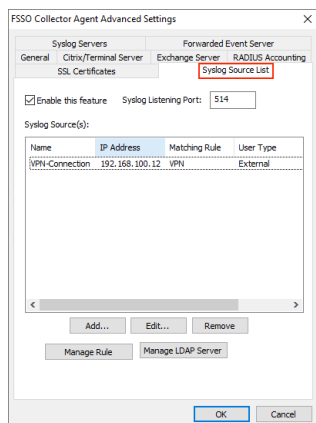

6. Click *Manage Rule*.
7. Create a new syslog rule:
  - a. Click *Add*.
  - b. Configure the rule:

|                              |                                 |
|------------------------------|---------------------------------|
| <b>Trigger</b>               | 722051                          |
| <b>Logon</b>                 | assigned to session             |
| <b>Username Field</b>        | User <{{:username}}>            |
| <b>Client IPv4 Field</b>     | IPv4 Address <{{:client_ip}}>   |
| <b>Client IPv6 Field</b>     | IPv6 Address <{{:client_ipv6}}> |
| <b>Group Field</b>           | Group <{{:group}}>              |
| <b>Groups List Separator</b> | ,                               |

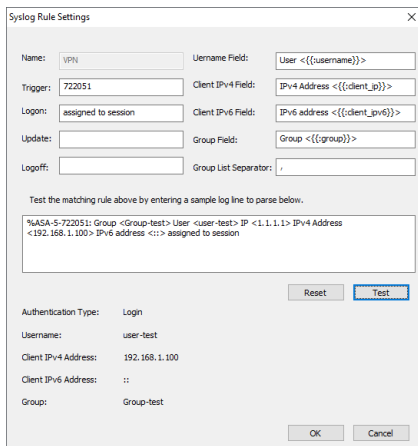

The Syslog Rule Settings dialog box contains the following fields and options:

- Name:** VPN
- Username Field:** User <{{username}}>
- Trigger:** 722051
- Client IPv4 Field:** IPv4 Address <{{client\_ip}}>
- Logon:** assigned to session
- Client IPv6 Field:** IPv6 address <{{client\_ipv6}}>
- Update:** (empty)
- Group Field:** Group <{{group}}>
- Logoff:** (empty)
- Group List Separator:** (empty)

Test the matching rule above by entering a sample log line to parse below.

```
%ASA-5-722051: Group <Group-test> User <user-test> IP <1.1.1.1> IPv4 Address <192.168.1.100> IPv6 address <::> assigned to session
```

Buttons: Reset, Test

Authentication Type: Login

Username: user-test

Client IPv4 Address: 192.168.1.100

Client IPv6 Address: ::

Group: Group-test

Buttons: OK, Cancel

c. To test the rule, enter a sample log line, then click *Test*.


d. Click *OK*.

8. Create a new syslog source:

a. On the *Advanced Settings* window, click *Add*.

b. Configure the source:

|                      |                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>          | <i>VPN-Connection</i>                                                                                                                                                                                                                                                                                                                              |
| <b>IP Address</b>    | <i>192.168.100.12</i>                                                                                                                                                                                                                                                                                                                              |
| <b>Matching Rule</b> | <i>VPN</i>                                                                                                                                                                                                                                                                                                                                         |
| <b>User Type</b>     | <p><i>External:</i> Users are not defined on the CA and user groups come from the source.</p> <p><i>Remote User:</i> Users are defined on a remote LDAP server and user groups are retrieved from the specified LDAP server. Any group from the syslog messages are ignored. See <a href="#">Connect to a remote LDAP server on page 2198</a>.</p> |

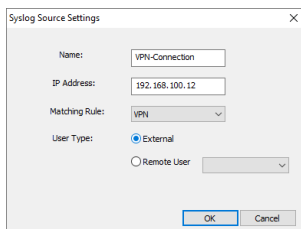

The Syslog Source Settings dialog box contains the following fields and options:

- Name:** VPN-Connection
- IP Address:** 192.168.100.12
- Matching Rule:** VPN
- User Type:**
  - ☒ External
  - ☐ Remote User

Buttons: OK, Cancel

c. Click *OK*.


9. Click *OK*.

## Connect to a remote LDAP server

This section describes how to connect to a remote LDAP server to match the user identity from the syslog server with an LDAP server.

**To connect to a remote LDAP server:**


1. Open the FSSO agent on Windows.
2. Click *Advanced Settings*.
3. Go to the *Syslog Source List* tab.
4. Click *Manage LDAP Server*.
5. Click *Add* and configure the LDAP server settings:

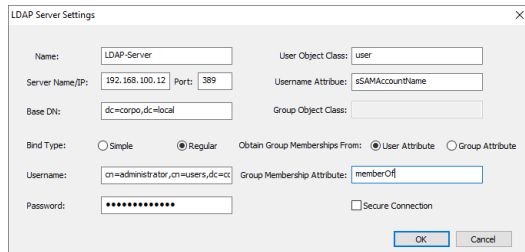

The LDAP Server Settings dialog box contains the following fields and options:

- Name:** LDAP-Server
- Server Name/IP:** 192.168.100.12
- Port:** 389
- Base DN:** dc=corpo,dc=local
- User Object Class:** user
- Username Attribute:** sAMAccountName
- Group Object Class:**
- Bind Type:** ☒ Regular (Other options: Simple)
- Obtain Group Memberships From:** ☒ User Attribute (Other option: Group Attribute)
- Username:** cn=admin,dc=corpo,dc=local
- Group Membership Attribute:** memberOf
- Password:** (masked with asterisks)
- Secure Connection:** ☐
- Buttons:** OK, Cancel

6. Click *OK*.
7. Select the syslog source and click *Edit*.

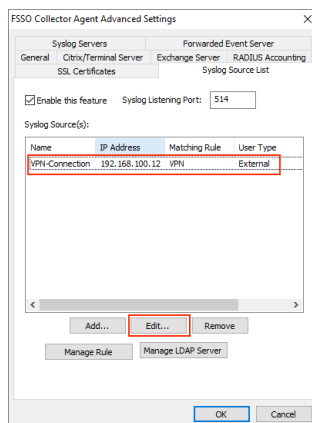


The FSSO Collector Agent Advanced Settings dialog box shows the Syslog Source List tab with the following details:

- Enable this feature:** ☒
- Syslog Listening Port:** 514
- Syslog Source(s):**

| Name           | IP Address     | Matching Rule | User Type |
|----------------|----------------|---------------|-----------|
| VPN-Connection | 192.168.100.12 | VPN           | External  |
- Buttons:** Add..., Edit... (highlighted), Remove, Manage Rule, Manage LDAP Server
- Bottom Buttons:** OK, Cancel

8. Set *User Type* to *Remote User*, and select the LDAP server from the drop-down list.

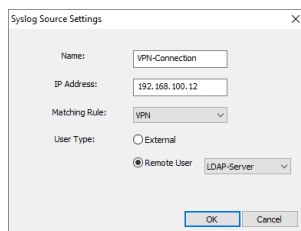

The Syslog Source Settings dialog box for the VPN-Connection source shows the following configuration:

- Name:** VPN-Connection
- IP Address:** 192.168.100.12
- Matching Rule:** VPN
- User Type:** ☒ Remote User (Other option: External)
- LDAP Server:** LDAP-Server (selected from a dropdown)
- Buttons:** OK, Cancel

9. Click *OK*.

## Configuring the FSSO timeout when the collector agent connection fails

The `login-timeout` option is used to manage how long authenticated FSSO users on the FortiGate will remain on the list of authenticated FSSO users when a network connection to the collector agent is lost.

```
config user fsso
  edit <name>
    set server <string>
```


```

    set password <string>
    set logon-timeout <integer>
next
end

```

logon-timeout <integer> Enter the interval to keep logons after the FSSO server is down, in minutes (1 - 2880, default = 5).

## Example

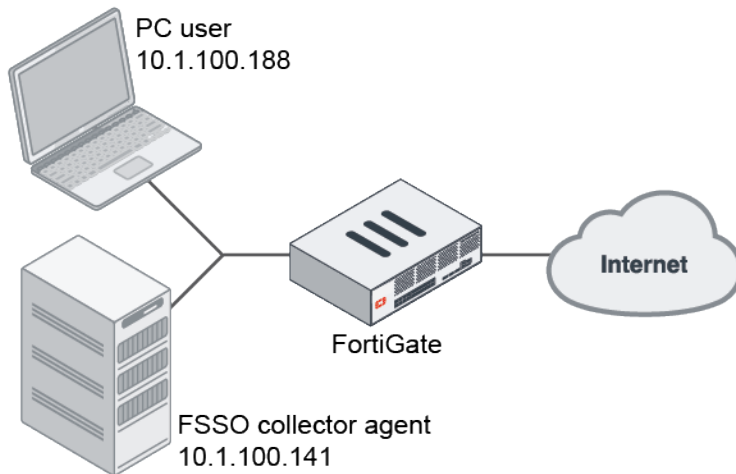

In this example, the logon timeout is set for four minutes.

### To configure the FSSO logon timeout:

1. Set the timeout value:

```

config user fsso
  edit "ad"
    set server "10.1.100.141"
    set password *****
    set logon-timeout 4
  next
end

```

2. Log on to a PC with a valid FSSO user account.
3. Enable real-time debugging and check for authd polling collector agent information. During this time, the connection to the collector agent is lost:

```

# diagnose debug enable
# diagnose debug application authd -1
# diagnose debug application fssod -1
2021-06-10 16:20:41 authd_timer_run: 2 expired
2021-06-10 16:20:41 authd_epoll_work: timeout 39970
2021-06-10 16:20:46 fsae_io_ctx_process_msg[ad]: received heartbeat 100031
2021-06-10 16:20:46 authd_epoll_work: timeout 1690
2021-06-10 16:20:47 authd_timer_run: 1 expired
2021-06-10 16:20:47 authd_epoll_work: timeout 39990
2021-06-10 16:20:56 fsae_io_ctx_process_msg[ad]: received heartbeat 100032

```

```

2021-06-10 16:20:56 authd_epoll_work: timeout 31550
2021-06-10 16:21:00 _event_error[ad]: error occurred in epoll_in: Success
2021-06-10 16:21:00 disconnect_server_only[ad]: disconnecting
2021-06-10 16:21:00 authd_timer_run: 1 expired
2021-06-10 16:21:00 authd_epoll_work: timeout 9620

```

4. After about three minutes, check that the FSSO user is still in the list of authenticated users and can connect to the internet:

```

# diagnose firewall auth 1
10.1.100.188, TEST1
    type: fssso, id: 0, duration: 229, idled: 229
    server: ad
    packets: in 0 out 0, bytes: in 0 out 0
    user_id: 16777219
    group_id: 3 33554433
    group_name: ad CN=GROUP1,OU=TESTING,DC=FORTINET-FSSO,DC=COM

----- 1 listed, 0 filtered -----

```

5. After four minutes, check the debugs again. Note that the FSSO users are cleared:

```

...
2021-06-10 16:24:57 authd_timer_run: 3 expired
2021-06-10 16:24:57 authd_epoll_work: timeout 60000
2021-06-10 16:24:59 [fsae_db_logoff:248]: vfid 0, ip 10.1.100.188, id(0), port_range_sz(0)
2021-06-10 16:24:59 [authd_fp_notify_logoff:444]: vfid 0, ip 10.1.100.188, id 0
2021-06-10 16:24:59 [authd_fp_on_user_logoff:412]: vfid 0, ip 10.1.100.188
2021-06-10 16:24:59 [authd_fp_on_user_logoff:412]: vfid 0, ip 10.1.100.188
2021-06-10 16:24:59 [authd_fp_on_user_logoff:412]: vfid 0, ip 10.1.100.188
2021-06-10 16:24:59 [authd_fpc_on_msg:545]: code 0, type 132, len 28 seq 0
2021-06-10 16:24:59 [authd_fp_on_user_logoff:412]: vfid 0, ip 10.1.100.188
2021-06-10 16:24:59 authd_epoll_work: timeout 21990

# diagnose firewall auth 1

----- 0 listed, 0 filtered -----

```

After the connection to the collector agent is restored, all users remain in the list of authenticated users and are synchronized to the FortiGate. The users do not need to log in again for authentication.

## Authentication policy extensions

By default, unauthenticated traffic is permitted to fall to the next policy. This means that unauthenticated users are only forced to authenticate against a policy when there are no other matching policies. To avoid this, you can force authentication to always take place.

### To set that authentication requirement:

```

config user setting
    set auth-on-demand {always | implicitly}
end

```

Where:

|                                   |                                                                                                                                  |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <code>always</code>               | Always trigger firewall authentication on demand.                                                                                |
| <code>implicitly (default)</code> | Implicitly trigger firewall authentication on demand. This is the default setting (and the behavior in FortiOS 6.0 and earlier). |

In the following example, authentication is required; traffic that would otherwise be allowed by the second policy is instead blocked by the first policy.

#### To use forced authentication:

```
config user setting
    set auth-on-demand always
end

config firewall policy
    edit 1
        set name "QA to Database"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "QA_subnet"
        set dstaddr "Database"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set groups "qa_group"
        set nat enable
    next
    edit 2
        set name "QA to Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "QA_subnet"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set nat enable
    next
end
```

## Configuring the FortiGate to act as an 802.1X supplicant

The FortiGate can be configured to act as a 802.1X supplicant. The settings can be enabled on the network interface in the CLI. The EAP authentication method can be either PEAP or TLS using a user certificate.

```
config system interface
    edit <interface>
        set eap-supplicant {enable | disable}
        set eap-method {peap | tls}
        set eap-identity <identity>
        set eap-password <password>
    end
```




```

        set eap-ca-cert <CA_cert>
        set eap-user-cert <user_cert>
    next
end

```

## Example

In this example, the FortiGate connects to an L3 switch that is not physically secured. All devices that connect to the internet must be authenticated with 802.1X by either a username and password (PEAP), or a user certificate (TLS). Configuration examples for both EAP authentication methods on port33 are shown.

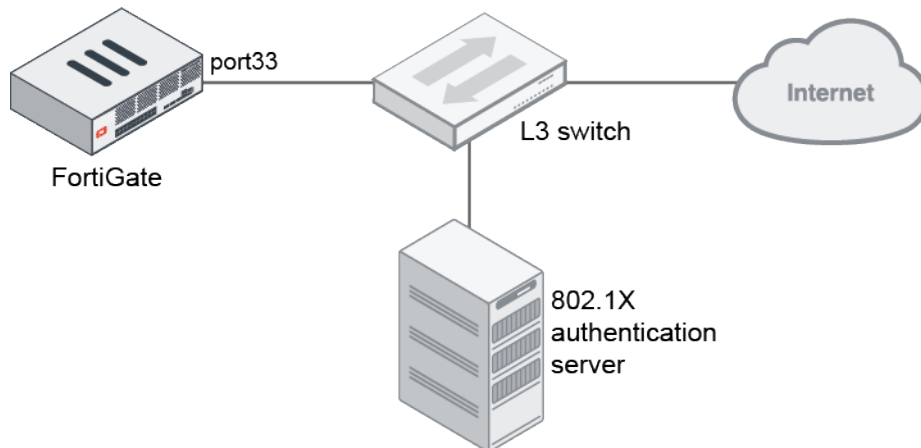

### To configure EAP authentication with PEAP:

#### 1. Configure the interface:

```

config system interface
    edit "port33"
        set vdom "vdom1"
        set ip 7.7.7.2 255.255.255.0
        set allowaccess ping https ssh snmp http telnet fgfm radius-acct probe-response
    fabric
        set stpforward enable
        set type physical
        set snmp-index 42
        set eap-supPLICant enable
        set eap-method peap
        set eap-identity "test1"
        set eap-password *****
    next
end

```

#### 2. Verify the interface's PEAP authentication details:

```

# diagnose test app eap_supp 2
Interface: port33
status:Authorized
method: PEAP
identity: test1
ca_cert:

```

```
client_cert:
private_key:
last_eapol_src =70:4c:a5:3b:0b:c6
```

Traffic is able to pass because the status is authorized.

## To configure EAP authentication with TLS:

### 1. Configure the interface:

```
config system interface
    edit "port33"
        set vdom "vdom1"
        set ip 7.7.7.2 255.255.255.0
        set allowaccess ping https ssh snmp http telnet fgfm radius-acct probe-response
    fabric
        set stpforward enable
        set type physical
        set snmp-index 42
        set eap-supPLICant enable
        set eap-method tls
        set eap-identity "test2@fortiqa.net"
        set eap-ca-cert "root_G_CA_Cert_1.cer"
        set eap-user-cert "root_eap_client_global.cer"
    next
end
```

### 2. Verify the interface's TLS authentication details:

```
# diagnose test application eap_supp 2
Interface: port33
status:Authorized
method: TLS
identity: test2@fortiqa.net
ca_cert: /etc/cert/ca/root_G_CA_Cert_1.cer
client_cert: /etc/cert/local/root_eap_client_global.cer
private_key: /etc/cert/local/root_eap_client_global.key
last_eapol_src =70:4c:a5:3b:0b:c6
```

Traffic is able to pass because the status is authorized.

## Include usernames in logs

Usernames can be included in logs, instead of just IP addresses. The benefits of doing this include:

- FortiOS monitors and FortiAnalyzer reports display usernames instead of IP addresses, allowing you to quickly determine who the information pertains to. Without the usernames, it is difficult to correlate the IP addresses with specific users.
- User activity can be correlated across multiple IP addresses.  
For example, if DHCP is used a user might receive different IP addresses every day, making it difficult to track a specific user by specifying an IP address as the match criterion.


In this example, a collector agent (CA) is installed on a Windows machine to poll a domain controller (DC) agent (see [FSSO on page 2191](#) for more information). On the FortiGate, an external connector to the CA is configured to

receives user groups from the DC agent. The received group or groups are used in a policy, and some examples of the usernames in logs, monitors, and reports are shown.

## Install and configure FSSO Agent

### To download the FSSO agent:

1. Sign in to your [FortiCloud account](#).
2. Go to *Support > Firmware Download* and select the *Download* tab.
3. Browse to the appropriate directory for the version of the FSSO agent that you need to download.

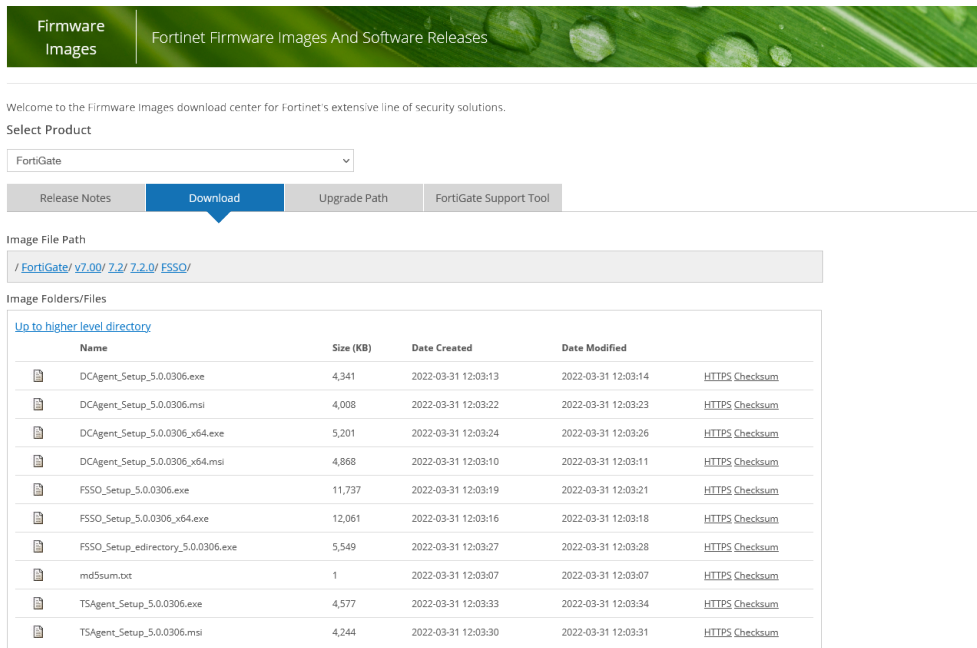

Welcome to the Firmware Images download center for Fortinet's extensive line of security solutions.

Select Product

FortiGate

Release Notes Download Upgrade Path FortiGate Support Tool

Image File Path

/ FortiGate/ v7.00/ 7.2/ 7.2.0/ FSSO/

Image Folders/Files


[Up to higher level directory](#)

| Name                               | Size (KB) | Date Created        | Date Modified       |                                |
|------------------------------------|-----------|---------------------|---------------------|--------------------------------|
| DCAgent_Setup_5.0.0306.exe         | 4,341     | 2022-03-31 12:03:13 | 2022-03-31 12:03:14 | <a href="#">HTTPS Checksum</a> |
| DCAgent_Setup_5.0.0306.msi         | 4,008     | 2022-03-31 12:03:22 | 2022-03-31 12:03:23 | <a href="#">HTTPS Checksum</a> |
| DCAgent_Setup_5.0.0306_x64.exe     | 5,201     | 2022-03-31 12:03:24 | 2022-03-31 12:03:26 | <a href="#">HTTPS Checksum</a> |
| DCAgent_Setup_5.0.0306_x64.msi     | 4,868     | 2022-03-31 12:03:10 | 2022-03-31 12:03:11 | <a href="#">HTTPS Checksum</a> |
| FSSO_Setup_5.0.0306.exe            | 11,737    | 2022-03-31 12:03:19 | 2022-03-31 12:03:21 | <a href="#">HTTPS Checksum</a> |
| FSSO_Setup_5.0.0306_x64.exe        | 12,061    | 2022-03-31 12:03:16 | 2022-03-31 12:03:18 | <a href="#">HTTPS Checksum</a> |
| FSSO_Setup_edirectory_5.0.0306.exe | 5,549     | 2022-03-31 12:03:27 | 2022-03-31 12:03:28 | <a href="#">HTTPS Checksum</a> |
| md5sum.txt                         | 1         | 2022-03-31 12:03:07 | 2022-03-31 12:03:07 | <a href="#">HTTPS Checksum</a> |
| TSAgent_Setup_5.0.0306.exe         | 4,577     | 2022-03-31 12:03:33 | 2022-03-31 12:03:34 | <a href="#">HTTPS Checksum</a> |
| TSAgent_Setup_5.0.0306.msi         | 4,244     | 2022-03-31 12:03:30 | 2022-03-31 12:03:31 | <a href="#">HTTPS Checksum</a> |

4. Click *HTTPS* to download the appropriate *FSSO\_Setup* file.

### To install the FSSO agent:

1. Run the *FSSO\_Setup* file with administrator privileges.
2. Click *Next*, accept the terms of the license agreement, and click *Next* again.
3. Select the installation directory, or use the default location, then click *Next*.
4. Enter the User Name and Password, then click *Next*.

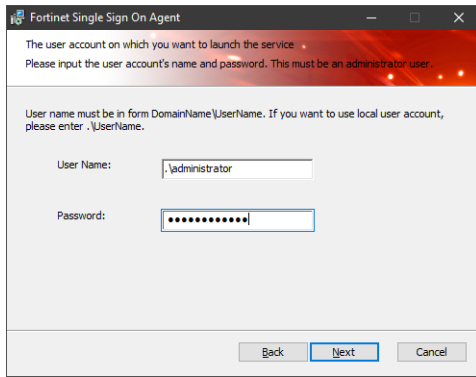

Fortinet Single Sign On Agent

The user account on which you want to launch the service. Please input the user account's name and password. This must be an administrator user.


User name must be in form DomainName\UserName. If you want to use local user account, please enter .\UserName.

User Name: .\administrator

Password: [masked]

Back Next Cancel

- On the *Install Options*, select *Advanced*, then click *Next*.

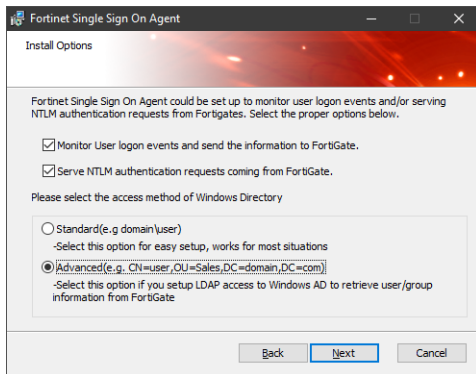

Fortinet Single Sign On Agent

Install Options

Fortinet Single Sign On Agent could be set up to monitor user login events and/or serving NTLM authentication requests from FortiGate. Select the proper options below.

☒ Monitor User login events and send the information to FortiGate.

☒ Serve NTLM authentication requests coming from FortiGate.


Please select the access method of Windows Directory

☐ Standard(e.g domain\user)  
-Select this option for easy setup, works for most situations

☒ Advanced(e.g. CN=user,OU=Sales,DC=domain,DC=com)  
-Select this option if you setup LDAP access to Windows AD to retrieve user/group information from FortiGate

Back Next Cancel

- Click *Install*.
- After the FSSO Agent installs, run *Install DC Agent*.
- Update the Collector Agent IP address and listening port as needed, then click *Next*.

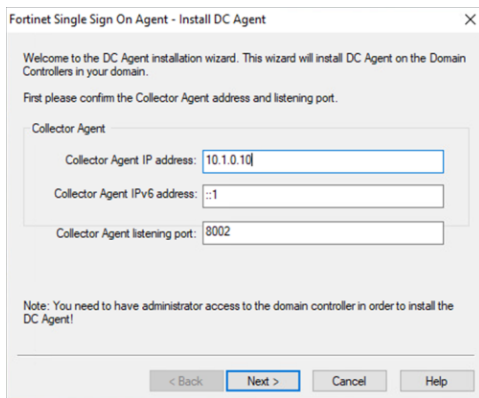

Fortinet Single Sign On Agent - Install DC Agent

Welcome to the DC Agent installation wizard. This wizard will install DC Agent on the Domain Controllers in your domain.

First please confirm the Collector Agent address and listening port.

Collector Agent

Collector Agent IP address: 10.1.0.10


Collector Agent IPv6 address: ::1

Collector Agent listening port: 8002

Note: You need to have administrator access to the domain controller in order to install the DC Agent!

< Back Next > Cancel Help


- Select the domain, in this example *LAB:lab.local*, then click *Next*.
- Set the *Working Mode* to *DC Agent Mode*, then click *Next* to install the agent.

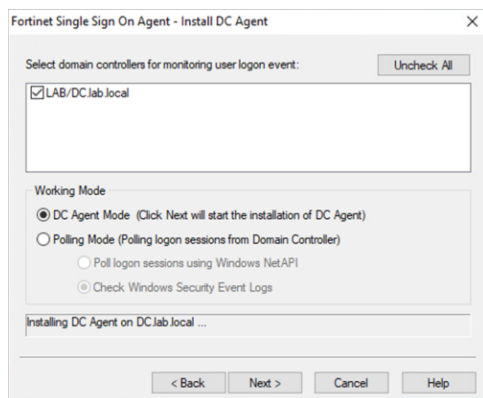

11. After the DC agent mode installation finishes, Reboot the DC to complete the setup.

### To configure the FSSO agent:

1. Open the FSSO agent.
2. Enable *Require authentication from FortiGate* and enter a password for FortiGate authentication.

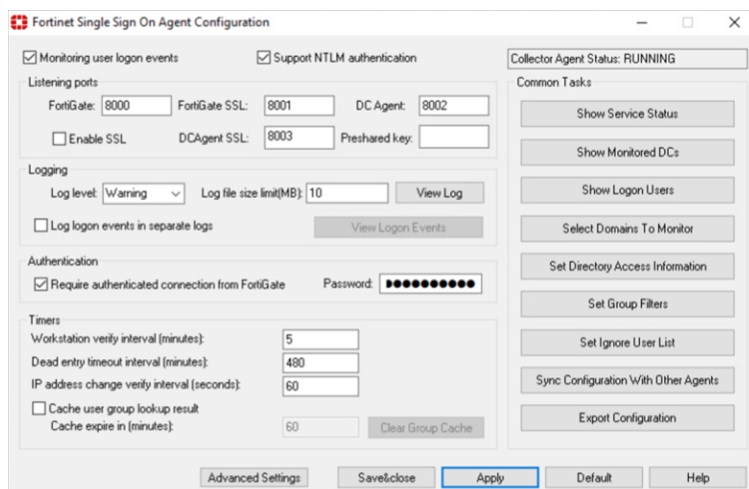

3. Click *Set Group Filters*, and create a default group filter to limit the groups that are sent to the FortiGate.
4. Click *Save&close*.

## Configure the FortiGate

Create an external connector to the FSSO agent to receive the AD user groups. Add the user group or groups as the source in a firewall policy to include usernames in traffic logs. Enable security profiles, such as web filter or antivirus, in the policy to include the usernames in UTM logs.


Event logs include usernames when the log is created for a user action or interaction, such as logging in or an SSL VPN connection.

**To create an external connector:**


1. On the FortiGate, go to *Security Fabric > External Connectors*.
2. Click *Create New* and select *FSSO Agent on Windows AD*.
3. Set the *Primary FSSO agent* to the previously configured *Collector Agent IP address* and authentication password.

4. Click *OK*

The connector shows a green arrow when the connection is established, and a number in the top right indicating the number of AD groups received from the DC agent. Edit the connector to view the user groups.

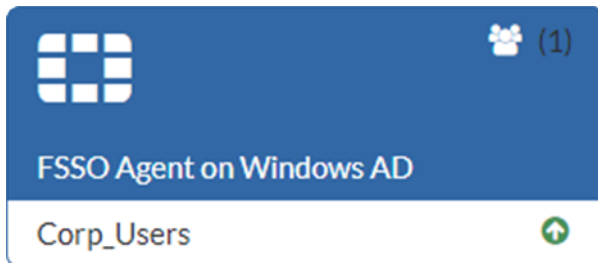**To configure a policy with an imported user group and web filter in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Edit an existing policy, or create a new one. See [Firewall policy on page 1036](#) for information.
3. Add the FSSO groups or groups as sources:
  - a. Click in the *Source* field.
  - b. Select the *User* tab.
  - c. Select the group or groups.

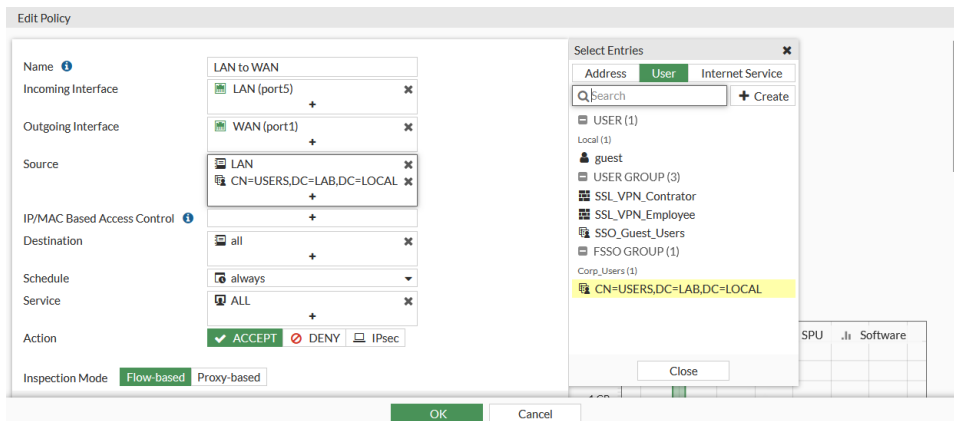

d. Click *Close*.

4. Under *Security Profiles*, enable *Web Filter* and select a profile that monitors or blocks traffic, such as the *monitor-all* profile. See [Web filter on page 1314](#) for information.
5. Click *OK*.

### To configure a policy with an imported user group and web filter in the CLI:

```
config firewall policy
  edit 0
    set name "LAN to WAN"
    set srcintf "port5"
    set dstintf "port1"
    set action accept
    set srcaddr "LAN"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set webfilter-profile "monitor-all"
    set logtraffic all
    set nat enable
    set fsso-groups "CN=USERS,DC=LAB,DC=LOCAL"
  next
end
```

## Log, monitor, and report examples

For more information about logs, see the [FortiOS Log Message Reference](#).

### Traffic logs:

Without a web filter profile applied:

```
date=2022-05-24 time=13:50:47 eventtime=1653425447661722283 tz="-0700" logid="0000000015"
type="traffic" subtype="forward" level="notice" vd="root" srcip=10.1.0.11 identifier=0
srcintf="port5" srcintfrole="lan" dstip=192.168.2.200 dstintf="port1" dstintfrole="wan"
srccountry="Reserved" dstcountry="Reserved" sessionid=708558 proto=1 action="start"
policyid=15 policytype="policy" poluuid="5bf426fe-794b-51ec-dedf-4318a843c5b5"
```

```
policyname="LAN to WAN" user="USER2" authserver="Corp_Users" service="PING" trandisp="snat"  
transip=192.168.2.99 transport=0 duration=0 sentbyte=0 rcvdbyte=0 sentpkt=0 rcvdpkt=0  
appcat="unscanned"
```

With a web filter profile applied:

```
date=2022-05-25 time=12:16:54 id=7101754911016091650 itime=2022-05-25 12:16:07 euid=1039  
epid=1037 dsteuid=3 dstepid=101 type=traffic subtype=forward level=notice action=close  
utmaction=allow policyid=15 sessionid=683 srcip=10.1.0.11 dstip=104.26.1.188  
transip=192.168.2.99 srcport=64494 dstport=443 transport=64494 trandisp=snat duration=7  
proto=6 sentbyte=1855 rcvdbyte=18631 sentpkt=16 rcvdpkt=21 logid=0000000013 user=USER2  
group=CN=USERS,DC=LAB,DC=LOCAL service=HTTPS app=HTTPS appcat=unscanned srcintfrole=lan  
dstintfrole=wan srcserver=0 policytype=policy eventtime=1653506215490475553 countweb=1  
poluid=5bf426fe-794b-51ec-dedf-4318a843c5b5 srcmac=00:0c:29:5e:f5:25  
mastersrcmac=00:0c:29:5e:f5:25 srchwvendor=VMware srchwversion=Workstation pro  
srcfamily=Virtual Machine srcswversion=10 devtype=Server osname=Windows srccountry=Reserved  
dstcountry=United States srcintf=port5 dstintf=port1 authserver=Corp_Users policyname=LAN to  
WAN hostname=www.yellow.com catdesc=Reference tz=-0700 devid=FGVM01TM22000459 vd=root  
dtime=2022-05-25 12:16:54 itime_t=1653506167
```

### UTM log:

```
date=2022-05-25 time=12:16:46 id=7101754876656353280 itime=2022-05-25 12:15:59 euid=1039  
epid=1037 dsteuid=3 dstepid=101 type=utm subtype=webfilter level=notice action=passthrough  
sessionid=683 policyid=15 srcip=10.1.0.11 dstip=104.26.1.188 srcport=64494 dstport=443  
proto=6 cat=39 logid=0317013312 service=HTTPS user=USER2 group=CN=USERS,DC=LAB,DC=LOCAL  
eventtime=1653506207694977460 sentbyte=548 rcvdbyte=0 srcintfrole=lan dstintfrole=wan  
direction=outgoing method=domain reqtype=direct url=https://www.yellow.com/  
hostname=www.yellow.com profile=default catdesc=Reference eventtype=ftgd_allow srcintf=port5  
dstintf=port1 authserver=Corp_Users msg=URL belongs to an allowed category in policy tz=-  
0700 srcuid=41cad638-794b-51ec-a8c9-8128712cb495 dstuid=e1067f08-8e38-51eb-4b07-  
64f219140388 policytype=policy srccountry=Reserved dstcountry=United States  
poluid=5bf426fe-794b-51ec-dedf-4318a843c5b5 devid=FGVM01TM22000459 vd=root dtime=2022-05-25  
12:16:46 itime_t=1653506159
```


### Event log:

```
date=2019-05-13 time=11:20:54 logid="0100032001" type="event" subtype="system"  
level="information" vd="vdom1" eventtime=1557771654587081441 logdesc="Admin login  
successful" sn="1557771654" user="admin" ui="ssh(172.16.1.1)" method="ssh"  
srcip=172.16.200.254 dstip=172.16.200.2 action="login" status="success" reason="none"  
profile="super_admin" msg="Administrator admin logged in successfully from ssh  
(172.16.200.254) "
```

### FortiOS monitors:

The *FortiView Web Sites by Bytes* monitor shows a list of visited websites. Double click a specific domain (or manually create a filter), such as *microsoft.com*, to see a breakdown of the usernames and IP addresses that visited that domain. See [Monitors on page 118](#) for more information.



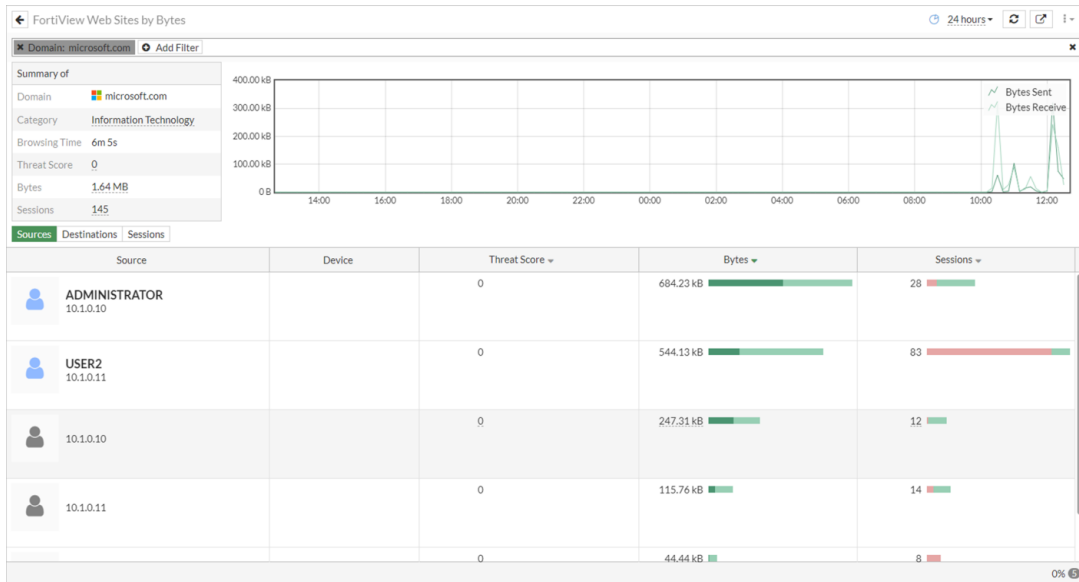

### FortiAnalyzer reports:

The *User Detailed Browsing Log* report requires a username or IP address to run. If a username is used, the report includes logs related to that user regardless of their IP address. For example, the following report shows two source IP addresses:

FORTINET

User: USER2

Source IP: 10.1.0.11, 10.1.0.222

Hostname (MAC): 00:0c:29:5e:f5:25, LAB, PC1


Source Interface: port5

Devices: FGVM01TM22000459

#### Copy of Detailed Web Browsing Log

| #  | Timestamp           | Category                     | Website                             | Action | Bytes     |
|----|---------------------|------------------------------|-------------------------------------|--------|-----------|
| 1  | 2022-05-25 13:05:50 | Information Technology       | edgedl.me.gvt1.com                  | allow  | 10.82 MB  |
| 2  | 2022-05-25 12:39:02 | Sports                       | bdata-producedclips.mlb.com         | allow  | 6.44 MB   |
| 3  | 2022-05-25 12:39:00 | Streaming Media and Download | rr8---sn-uxa0n-t8gl.googlevideo.com | allow  | 3.22 MB   |
| 4  | 2022-05-25 13:02:07 | Personal Vehicles            | www.dodge.com                       | allow  | 3.10 MB   |
| 5  | 2022-05-25 12:16:54 | Reference                    | www.yellow.com                      | allow  | 2.97 MB   |
| 6  | 2022-05-25 12:39:02 | Sports                       | builds.mlbstatic.com                | allow  | 2.92 MB   |
| 7  | 2022-05-25 13:01:47 | Business                     | www.ford.com                        | allow  | 1.44 MB   |
| 8  | 2022-05-25 12:39:02 | Sports                       | www.mlbstatic.com                   | allow  | 1.20 MB   |
| 9  | 2022-05-25 13:05:44 | Information Technology       | www.googletagmanager.com            | allow  | 1.10 MB   |
| 10 | 2022-05-25 12:39:02 | Search Engines and Portals   | ampcid.google.com                   | allow  | 914.17 KB |
| 11 | 2022-05-25 12:39:01 | Sports                       | ca.global.nba.com                   | allow  | 802.94 KB |
| 12 | 2022-05-25 12:39:02 | Information                  | imasdk.googleapis.com               | allow  | 715.34 KB |

The *Web Usage* report includes all usernames and IP addresses that match the specified conditions, like most visited categories.

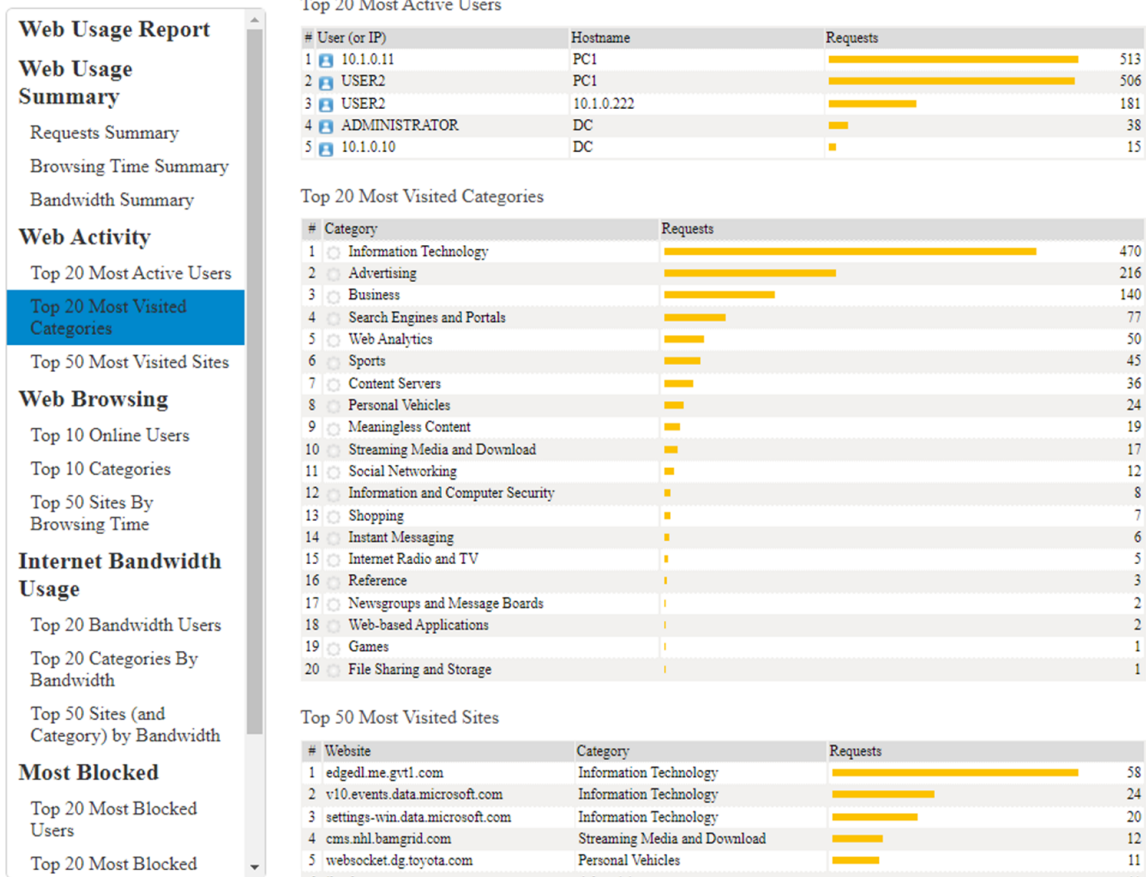

See [Reports](#) in the [FortiAnalyzer Administration guide](#) for more information.

# Wireless configuration

See the [FortiWiFi and FortiAP Configuration Guide](#).

# Switch Controller

Use the Switch Controller function, also known as FortiLink, to remotely manage FortiSwitch units. In the commonly-used layer 2 scenario, the FortiGate that is acting as a switch controller is connected to distribution FortiSwitch units. The distribution FortiSwitch units are in the top tier of stacks of FortiSwitch units and connected downwards with Convergent or Access layer FortiSwitch units. To leverage CAPWAP and the Fortinet proprietary FortiLink protocol, set up data and control planes between the FortiGate and FortiSwitch units.

FortiLink allows administrators to create and manage different VLANs, and apply the full-fledged security functions of FortiOS to them, such as 802.1X authentication and firewall policies. Most of the security control capabilities on the FortiGate are extended to the edge of the entire network, combining FortiGate, FortiSwitch, and FortiAP devices, and providing secure, seamless, and unified access control to users.

See [FortiSwitch devices managed by FortiOS](#).

# System

This topic contains information about FortiGate administration and system configuration that you can do after installing the FortiGate in your network.

## Basic system settings

### Administrators

By default, FortiGate has an administrator account with the username *admin* and no password. See [Administrators on page 2218](#) for more information.

### Administrator profiles

An administrator profile defines what the administrator can see and do on the FortiGate. See [Administrator profiles on page 2241](#) for more information.

### Password policy

Set up a password policy to enforce password criteria and change frequency. See [Password policy on page 2232](#) for more information.

### Interfaces

Physical and virtual interface allow traffic to flow between internal networks, and between the internet and internal networks. See [Interfaces on page 147](#) for more information.

## Advanced system settings

### SNMP

The simple network management protocol (SNMP) allows you to monitor hardware on your network. See [SNMP on page 2475](#) for more information.

### DHCP server

You can configure one or more DHCP servers on any FortiGate interface. See [DHCP servers and relays on page 331](#) for more information.

## **VDOM**

You can use virtual domains (VDOMs) to divide a FortiGate into multiple virtual devices that function independently. See [Virtual Domains on page 2299](#) for more information.

## **High availability**

You can configure multiple FortiGate devices, including private and public cloud VMs, in HA mode. See [High Availability on page 2338](#) for more information.

## **Certificates**

You can manage certificates on the FortiGate. See [Certificates on page 2515](#) for more information.

# **Operating modes**

A FortiGate or VDOM (in multi-vdom mode) can operate in either NAT/route mode or transparent mode.

## **NAT/route mode**


The FortiGate or VDOM is installed as a gateway or router between multiple networks, such as a private network and the internet. One function of NAT/route mode is to allow the FortiGate to hide the IP addresses on the private network using NAT. NAT/route mode can also be used to connect to multiple ISPs in an SD-WAN setup, and to route traffic between different networks. .

By default, new VDOMs are set to NAT/route operation mode.

## **Transparent mode**

The FortiGate or VDOM operates in layer 2 to forward traffic between network devices such as routers, firewalls, and switches. For example, it can be installed inline between a router and a switch to perform security scanning without changing the network topology or modifying the IP addresses. When you add a FortiGate that is in transparent mode to a network, it only needs to be provided with a management IP address in order to access the device. It is recommended that a dedicated interface is used to connect to the management network in transparent mode.

The following topology is an example of a transparent mode FortiGate inserted inline between a router and a switch:

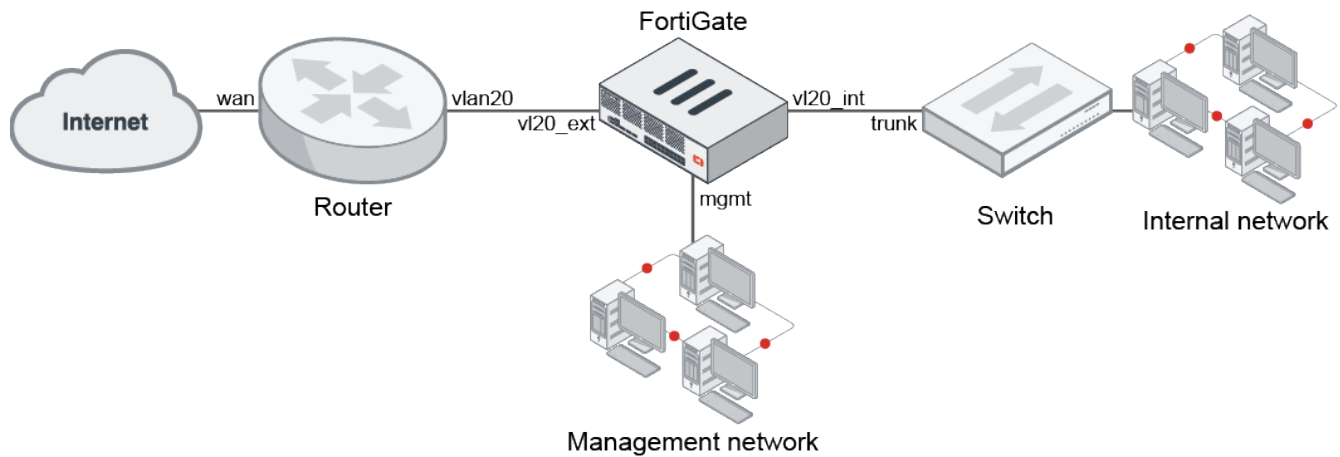

Using transparent mode VDOMs is recommended when multiple VLANs pass through the FortiGate. Otherwise, they must be separated into different forwarding domains within the same VDOM.

## Changing modes

The following is a sample configuration for changing from NAT/route operation mode to transparent operation mode in the CLI:

```
config system settings
    set opmode transparent
    set manageip <IP_address>
    set gateway <gateway_address>
end
```



The gateway setting is optional. However, once the operation mode is changed from NAT/route to transparent, the gateway configuration is found under the static router settings:

```
config router static
    edit <seq-num>
        set gateway <IP_address>
    next
end
```

The following is a sample configuration for changing from transparent operation to NAT/route operation mode in the CLI:

```
config system settings
    set opmode nat
    set ip <IP_address>
    set device <interface>
    set gateway <gateway_address>
end
```

The IP and device settings are mandatory. Once the operation mode is changed from transparent to NAT/route, the IP address configuration is found under the corresponding interface settings:

```
config system interface
    edit <interface>
        set ip <IP_address>
    next
end
```



The gateway setting is optional. However, once the operation mode is changed, the gateway configuration is found under the static router settings:

```
config router static
    edit <seq-num>
        set gateway <IP_address>
        device <interface>
    next
end
```

---

## Administrators

By default, FortiGate has an administrator account with the username *admin* and no password. To prevent unauthorized access to the FortiGate, this account must be protected with a password. Additional administrators can be added for various functions, each with a unique username, password, and set of access privileges.

The following topics provide information about administrators:

- [Local authentication on page 2218](#)
- [Remote authentication for administrators on page 2219](#)
- [Administrator account options on page 2222](#)
- [REST API administrator on page 2224](#)
- [SSO administrators on page 2226](#)
- [FortiCloud SSO on page 2226](#)
- [Allowing the FortiGate to override FortiCloud SSO administrator user permissions on page 2227](#)
- [Password policy on page 2232](#)
- [Public key SSH access on page 2234](#)
- [Restricting SSH and Telnet jump host capabilities on page 2235](#)
- [Remote administrators with TACACS VSA attributes on page 2236](#)

## Local authentication

By default, FortiGate has one super admin named *admin*. You can create more administrator accounts with different privileges.



**To create an administrator account in the GUI:**

1. Go to *System > Administrators*.
2. Select *Create New > Administrator*.
3. Specify the *Username*.



Do not use the characters < > ( ) # " ' in the administrator username.  
Using these characters in an administrator username might have a cross site scripting (XSS) vulnerability.

---

4. Set *Type* to *Local User*.
5. Set the password and other fields.
6. Click *OK*.

**To create an administrator account in the CLI:**

```
config system admin
  edit <admin_name>
    set accprofile <profile_name>
    set vdom <vdom_name>
    set password <password for this admin>
  next
end
```

## Remote authentication for administrators

Administrators can use remote authentication, such as LDAP, RADIUS, and TACACS+ to connect to the FortiGate.

Configuring remote authentication with an LDAP server is shown. For more information about configuring LDAP, see [Configuring an LDAP server on page 2076](#).

For information about configuring RADIUS or TACACS+ servers, see [Configuring a RADIUS server on page 2093](#) and [TACACS+ servers on page 2124](#). To use a RADIUS or TACACS+ server for remote authentication, configure the server, and then add it to the user group instead of the LDAP server.

Local logins can also be restricted when remote authentication servers are available, see [Restricting logins from local administrator accounts when remote servers are available on page 2222](#).

Configuring remote authentication for administrators using LDAP includes the following steps:

1. [Configuring the LDAP server on page 2219](#)
2. [Adding the LDAP server to a user group on page 2220](#)
3. [Configuring the administrator account on page 2220](#)

### Configuring the LDAP server

**To configure the LDAP server in the GUI:**

1. Go to *User & Authentication > LDAP Servers* and click *Create New*.
2. Enter the server *Name* and *Server IP/Name*.

3. Enter the *Common Name Identifier* and *Distinguished Name*.
4. Set the *Bind Type* to *Regular* and enter the *Username* and *Password*.
5. Click *OK*.

**To configure the LDAP server in the CLI:**

```
config user ldap
  edit <name>
    set server <server_ip>
    set cnid "cn"
    set dn "dc=XYZ,dc=fortinet,dc=COM"
    set type regular
    set username "cn=Administrator,dc=XYA, dc=COM"
    set password <password>
  next
end
```

## Adding the LDAP server to a user group

After configuring the LDAP server, create a user group that includes that LDAP server.

**To create a user group in the GUI:**

1. Go to *User & Authentication > User Groups* and click *Create New*.
2. Enter a *Name* for the group.
3. In the *Remote groups* section, select *Create New*.
4. Select the *Remote Server* from the dropdown list.
5. Click *OK*.

**To create a user group in the CLI:**

```
config user group
  edit <name>
    set member <ldap_server_name>
  next
end
```

## Configuring the administrator account

After configuring the LDAP server and adding it to a user group, create a new administrator. For this administrator, instead of entering a password, use the new user group for authentication.

A remote authentication server can allow authentication of either a single user or any user from a specified group.

Public key infrastructure (PKI) administrator authentication requires a PKI user instead of a remote server. For information about creating a PKI user, see [Configuring a PKI user on page 2177](#).

**To create an administrator to match a single user in the GUI:**

1. Go to *System > Administrators* and click *Create New > Administrator*.
2. Specify the *Username*.  
This username is used when the administrator logs in, and is what FortiOS sends to the remote authentication server for authorization.
3. Set *Type* to *Match a user on a remote server group*.
4. In *Remote User Group*, select the user group that you created.
5. Select an *Administrator Profile*.
6. Enter a *Backup Password*, to be used if the remote authentication server is unreachable.
7. Click *OK*.

**To create an administrator match a single user in the CLI:**

```
config system admin
  edit <name>
    set remote-auth enable
    set accprofile super_admin
    set remote-group <ldap_group_name>
    set password *****
  next
end
```

**To create an administrator to match all users in a remote server group in the GUI:**

1. Go to *System > Administrators* and click *Create New > Administrator*.
2. Specify the *Username*.  
This username is only used to identify this administrator group. Administrators can log in with any username in the remote user group.
3. Set *Type* to *Match all users in a remote server group*.
4. In *Remote User Group*, select the user group that you created.
5. Select an *Administrator Profile*.
6. Click *OK*.

**To create an administrator to match all users in a remote server group in the CLI:**

```
config system admin
  edit <name>
    set remote-auth enable
    set accprofile super_admin
    set wildcard enable
    set remote-group <ldap_group_name>
  next
end
```

**To create an administrator that uses a PKI group in the GUI:**

1. Go to *System > Administrators* and click *Create New > Administrator*.
2. Specify the *Username*.
3. Set *Type* to *Use public key infrastructure (PKI) group*.

4. In *Remote User Group*, select the user group that you created.
5. Select an *Administrator Profile*.
6. Click *OK*.

**To create an administrator that uses a PKI group in the CLI:**

```
config system admin
  edit <name>
    set remote-auth enable
    set accprofile super_admin
    set peer-group <pki_group_name>
  next
end
```

## Restricting logins from local administrator accounts when remote servers are available

Logins from local administrator accounts can be restricted when remote servers are available. When enabled, FortiOS will check if all of the remote servers used by administrators are down before allowing a local administrator to log in. This option is applied globally, and is disabled by default.

**To restrict local administrator authentication when a remote authentication server available:**

```
config system global
  set admin-restrict-local enable
end
```

## Administrator account options

Options to further define the access and abilities of an administrator account include:

- [Multi-factor authentication on page 2222](#)
- [Restricting logins to trusted hosts on page 2224](#)
- [Restricting administrators to guest account provisioning on page 2224](#)
- [Global and VDOM administrators on page 2224](#)

## Multi-factor authentication

Multi-factor authentication (MFA) requires authenticating administrators to supply more than one factor to identify themselves in addition to their password, such as a FortiToken.



Before enabling MFA, it is recommended that you create second administrator account that is configured to guarantee administrator access to the FortiGate if you are unable to authenticate on the main account for any reason.

---

Multi-factor authentication options include:

- [FortiToken](#)
- [FortiToken Cloud](#)

- [Email](#)
- [SMS](#)

## FortiToken

### To associate a FortiToken to an administrator account using the GUI:

1. Ensure that you have successfully added your FortiToken serial number to FortiOS and that its status is *Available*.
2. Go to *System > Administrators*. Edit the admin account. This example assumes that the account is fully configured except for MFA.
3. Enable *Two-factor Authentication* and for *Authentication Type*, select *FortiToken*.
4. From the *Token* dropdown list, select the FortiToken serial number.
5. In the *Email Address* field, enter the administrator's email address.
6. Click *OK*.



For a mobile token, click *Send Activation Code* to send the activation code to the configured email address. The admin uses this code to activate their mobile token. You must have configured an email service in *System > Settings* to send the activation code.

---

### To associate a FortiToken to an administrator account using the CLI:

```
config system admin
  edit <username>
    set password "myPassword"
    set two-factor fortitoken
    set fortitoken <serial_number>
    set email-to "username@example.com"
  next
end
```

The `fortitoken` keyword is not visible until you select `fortitoken` for the `two-factor` option.

---



Before you can use a new FortiToken, you may need to synchronize it due to clock drift.

---

## FortiToken Cloud

FortiToken Cloud is an Identity and Access Management as a Service (IDaaS) cloud service provided by Fortinet. It enables FortiGate and FortiAuthenticator customers to add MFA for their users using Mobile or Hard tokens.

For more information, see [Getting started—FGT-FTC users](#) in the [FortiToken Cloud Administration Guide](#).

## Email

Enter an email address to send an MFA code to that address.

## SMS

Enable *SMS* then select the *Country Dial Code* and enter the *Phone Number* (`sms-phone` in the CLI) to send an MFA code to.

SMS messages can also be sent to the FortiGuard SMS server or a custom server.

```
config system admin
    edit "admin"
        ...
        set sms-server {fortiguard | custom}
        set sms-server-custom <string>
        ...
    next
end
```

## Restricting logins to trusted hosts

Administrator accounts can be configured to only be accessible to a user using a trusted host. You can set a specific IP address for the trusted host, or use a subnet. Up to ten trusted hosts can be specified for an administrator.

When trusted hosts are defined for all of the administrators on the FortiGate, the administrative access on each interface will be restricted to the trusted hosts that are defined for the administrator, except for ping. If ping is enabled on an interface, it works regardless of the trusted hosts.

## Restricting administrators to guest account provisioning

To simplify guest account creation, an administrator account can be created exclusively for guest user management. This allows new accounts to be created without requiring full administrative access to FortiOS.

When enabling this option, a guest group must be specified for the administrator to provision new accounts to. See [Configuring guest user groups on page 2070](#) for information about creating such a group.

## Global and VDOM administrators

When a FortiGate is in multi VDOM mode, it can be managed by either global or per-VDOM administrators. Each type of administrator will have a different view of the GUI that corresponds to their role. For more information, see [Administrator roles and views on page 2301](#).

For information about configuring per-VDOM administrators, see [Create per-VDOM administrators on page 2307](#).

## REST API administrator

REST API administrator accounts are used for automated configuration, backup creation, and monitoring of the FortiGate.

For more information about the REST API, see the [Fortinet Development Network \(FNDN\)](#). Note that an account is required to access the FNDN.



Only an administrator with the *super\_admin* profile can create a REST API administrator by using the GUI or CLI.

### To create a REST API administrator in the GUI:

1. Go to *System > Administrators*.
2. Select *Create New > REST API Admin*.
3. Configure the administrator:

|                              |                                                                                                                                                                                                                                                                                                                         |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Username</i>              | The username of the administrator.<br>Do not use the characters < > ( ) # " ' in the administrator username.<br>Using these characters in an administrator username might have a cross site scripting (XSS) vulnerability.                                                                                              |
| <i>Administrator Profile</i> | Where permissions for the REST API administrator are defined.<br>A REST API administrator should have the minimum permissions required to complete the request.                                                                                                                                                         |
| <i>PKI Group</i>             | Certificate matching is supported as an extra layer of security. Both the client certificate and token must match to be granted access to the API.                                                                                                                                                                      |
| <i>CORS Allow Origin</i>     | Cross Origin Resource Sharing (CORS) allows third-party web apps to make API requests to the FortiGate using the token.                                                                                                                                                                                                 |
| <i>Trusted Hosts</i>         | The following can be used to restrict access to FortiGate API: <ul style="list-style-type: none"> <li>• Multiple trusted hosts/subnets can be configured</li> <li>• IPv6 hosts are supported</li> <li>• Allow all (0.0.0.0/0) is not allowed</li> </ul> You need your <i>Source Address</i> to create the trusted host. |

4. Click **OK**.  
An API token is generated. Make note of the token, as it is only shown once.

### To create a REST API administrator in the CLI:

1. Create the REST API administrator:

```
config system api-user
  edit "api-admin"
    set comments <string>
    set api-key *****
    set accprofile "API profile"
    set vdom "root"
    config trusthost
      edit 1
        set ipv4-trusthost <class_ip&net_netmask>
      next
      ...
    end
```

```

    next
end

```

## 2. Generate the API token:

```
# execute api-user generate-key <API username>
```

Make note of the token, as it is only shown once.



By default, The SSO administrator account can only be assigned the *admin\_no\_access* or *super\_admin\_readonly* profile. You can define a new administrator profile with the required permissions for the account. For example, you could use a specific API user to query the FortiGate for just their own status. In that case, the profile would be configured as read-only.

## SSO administrators

SSO administrators are automatically created when the FortiGate acts as a SAML service provider (SP) with *SAML Single Sign-On* enabled in the Security Fabric settings.

On the system login page, an administrator can log in with their username and password against the root FortiGate acting as the identity provider (IdP) in the Security Fabric. After the first successful log in, this user is added to the administrators table (*System > Administrators* under *Single Sign-On Administrator*). The default profile selected is based on the SP settings (*Default admin profile*). See [Configuring a downstream FortiGate as an SP on page 2709](#) for more information.

SSO administrators can be manually configured in FortiOS.

### To manually configure an SSO administrator in the GUI:

1. Go to *System > Administrators* and click *Create New > SSO Admin*.
2. Enter the username.
3. Select an administrator profile.
4. Click *OK*.

### To manually configure an SSO administrator in the CLI:

```

config system sso-admin
    edit <name>
        set accprofile <profile>
        set vdom <vdom>
    next
end

```

## FortiCloud SSO

By default, the FortiGate is configured to allow administrators to log in using FortiCloud single sign-on. Both IAM and non-IAM users on the FortiCloud support portal are supported. Non-IAM users must be the FortiCloud account that the FortiGate is registered to.



### To configure an IAM user in FortiCloud:

1. Log in to your FortiCloud account at [support.fortinet.com](https://support.fortinet.com).
2. Select *Services > IAM*.
3. See the [FortiCloud Identity & Access Management \(IAM\)](#) guide for more information.

### To manually enable FortiCloud single sign-on in the GUI:


1. Log in to the FortiGate and go to *System > Settings*.
2. In the *Administration Settings* section, enable *Allow administrative login using FortiCloud SSO*.
3. Click *Apply*.

### To manually enable FortiCloud single sign-on in the CLI:

```
config system global
    set admin-forticloud-ss0-login {enable | disable}
end
```


### To log in to the FortiGate with the FortiCloud user:

1. Go to the FortiGate log in screen.

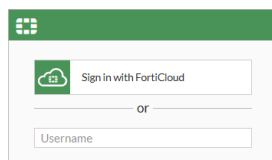

2. Click *Sign in with FortiCloud*. The FortiCloud log in page opens.
3. Enter the FortiCloud account credentials and click *Login*.

You are logged in to the FortiOS GUI. The SSO username is shown in the top right corner of the GUI.

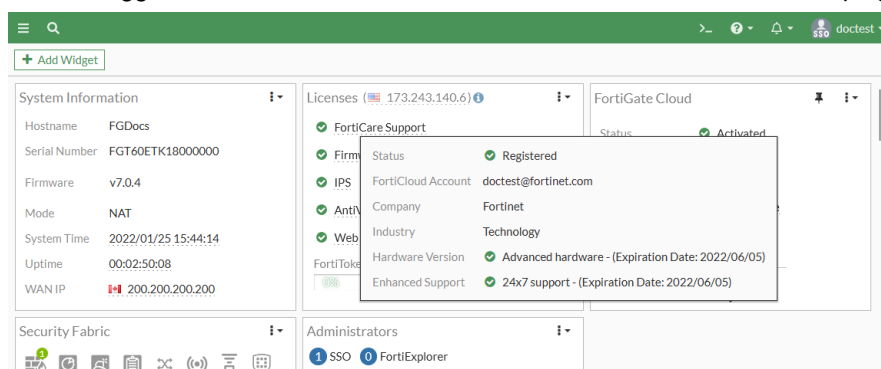


## Allowing the FortiGate to override FortiCloud SSO administrator user permissions

The FortiGate can allow single sign-on (SSO) from FortiCloud and FortiCloud IAM users with administrator profiles inherited from FortiCloud or overridden locally by the FortiGate. Similarly, users accessing the FortiGate remotely from FortiGate Cloud can have their permissions inherited or overridden by the FortiGate.

### To enable FortiCloud SSO in the GUI:

1. Go to *System > Settings*.
2. In the *Single Sign-On* section, enable *FortiCloud SSO*.
3. Set the default *Administrator profile* to assign: *Inherit from FortiCloud*, or *Specify* and select a profile from the dropdown.

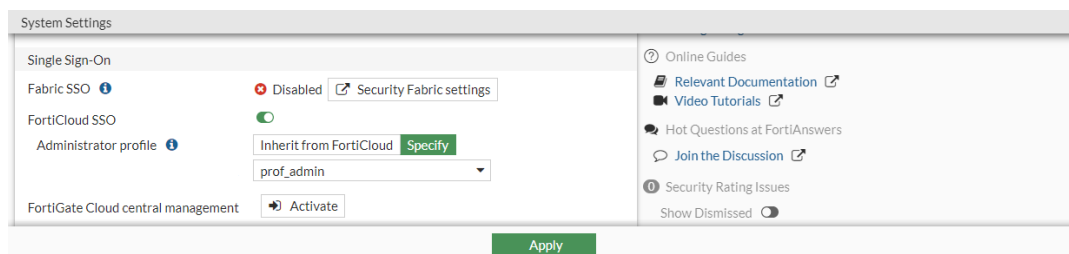

4. Click *Apply*.

### To enable FortiCloud SSO in the CLI:

```
config system global
    set admin-forticloud-sso-login enable
    set admin-forticloud-sso-default-profile <profile>
end
```

The following administrator profiles are assigned based on the inherited or overwritten permissions:

| User type                         | Inherited from FortiCloud/FortiGate Cloud                                                                                                                                                                                                                                                                                                                                                                          | Specify            |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| FortiCloud                        | Uses the super_admin profile.                                                                                                                                                                                                                                                                                                                                                                                      | Local user profile |
| FortiCloud IAM                    | Is based on the IAM permission profile's FortiOS SSO portal settings: <ul style="list-style-type: none"> <li>• If <i>Access</i> is disabled = no access</li> <li>• If <i>Access</i> is enabled and the <i>Access Type</i> is set to <i>SuperAdmin</i> = super_admin profile</li> <li>• If <i>Access</i> is enabled and the <i>Access Type</i> is set to <i>Read Only</i> = super_admin_readonly profile</li> </ul> | Local user profile |
| FortiGate Cloud subscription tier | Uses the super_admin profile.                                                                                                                                                                                                                                                                                                                                                                                      | Local user profile |
| FortiGate Cloud free tier         | Has read-only access.                                                                                                                                                                                                                                                                                                                                                                                              | Cannot override    |

This topic includes four use case examples:

- [Example 1: specifying permissions for a FortiCloud SSO user](#)
- [Example 2: inheriting FortiCloud permissions for a FortiCloud SSO user](#)
- [Example 3: specifying a local user profile for a FortiCloud IAM user](#)
- [Example 4: accessing a FortiGate remotely from FortiGate Cloud](#)


## Example 1: specifying permissions for a FortiCloud SSO user

In this example, a FortiCloud SSO user is configured to override permissions and use the `prof_admin` profile, which is a local read-only profile.

### To configure the FortiCloud SSO user:

1. Go to *System > Settings*.
2. In the *Single Sign-On* section, enable *FortiCloud SSO*.
3. Set *Administrator profile* to *Specify*, and select *prof\_admin*. The FortiCloud SSO user will be created upon the first login.
4. Get the user to log in to the FortiGate:
  - a. On the FortiOS login screen, click *Sign in with FortiCloud*. The FortiCloud log in page opens.
  - b. Click *Email Login*.
  - c. Enter the FortiCloud account credentials and click *Log In*.

The new SSO user is created.

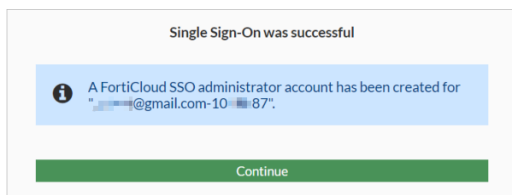

Since the profile has read-only access, the SSO user can only view items (such as interfaces) and cannot edit them.

| Name                      | Type               | Members | IP/Netmask               | Transceiver(s) | Administrative Access              | DHCP Clients | DHCP Ranges               |
|---------------------------|--------------------|---------|--------------------------|----------------|------------------------------------|--------------|---------------------------|
| <b>802.3ad Aggregate</b>  |                    |         |                          |                |                                    |              |                           |
| fortilink                 | 802.3ad Aggregate  |         | Dedicated to FortiSwitch |                | PING<br>Security Fabric Connection |              | 10.255.1.2-10.255.1.254   |
| <b>Physical Interface</b> |                    |         |                          |                |                                    |              |                           |
| ha                        | Physical Interface |         | 0.0.0.0/0.0.0.0          |                |                                    |              |                           |
| mgmt                      | Physical Interface |         | 10.6.30.2/255.255.255.0  |                | PING<br>HTTPS<br>SSH<br>FMG-Access |              | 192.168.1.110-192.168.1.2 |
| port1                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |                |                                    |              |                           |
| port2                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |                |                                    |              |                           |
| port3                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |                |                                    |              |                           |
| port4                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |                |                                    |              |                           |

## Example 2: inheriting FortiCloud permissions for a FortiCloud SSO user

In this example, a local administrator changes the permissions of an existing FortiCloud SSO user (created in the previous example) to *Inherit from FortiCloud*, which means the `super_admin` profile will be used.

### To configure the existing SSO user:

1. Go to *System > Administrators* and edit the user in the *FortiCloud SSO Administrator* section (\*\*\*\*\*@gmail.com).
2. Set *Administrator profile* to *Inherit from FortiCloud*.

Username: j.x.ftnt@gmail.com-1038287

Administrator profile: **Inherit from FortiCloud** Specify

Additional Information

API Preview

Edit in CLI

Online Guides

Relevant Documentation

Video Tutorials

Hot Questions at FortiAnswers

How to configure WSSO for WPA2-Enterprise Login with NPS?

1 Answers 0 Votes 184 Views

Why are my SWG SSO users seeing certificates signed by a Fortinet CA when Deep Inspection is disabled?

1 Answers 0 Votes 131 Views

See More

OK Cancel

3. Click **OK**.
4. Get the user to log in to the FortiGate. Since the profile changed to *super\_admin*, they can modify items (such as interfaces).

| Name                      | Type               | Members | IP/Netmask               | Transeiver(s) | Administrative Access              | DHCP Clients | DHCP Ranges               |
|---------------------------|--------------------|---------|--------------------------|---------------|------------------------------------|--------------|---------------------------|
| <b>802.3ad Aggregate</b>  |                    |         |                          |               |                                    |              |                           |
| fortilink                 | 802.3ad Aggregate  |         | Dedicated to FortiSwitch |               | PING<br>Security Fabric Connection |              | 10.255.1.2-10.255.1.254   |
| <b>Physical Interface</b> |                    |         |                          |               |                                    |              |                           |
| ha                        | Physical Interface |         | 0.0.0.0/0.0.0.0          |               |                                    |              |                           |
| mgmt                      | Physical Interface |         | 10.6.30.2/255.255.255.0  |               | PING<br>HTTPS<br>SSH<br>FMG-Access |              | 192.168.1.110-192.168.1.2 |
| port1                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |               |                                    |              |                           |
| port2                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |               |                                    |              |                           |
| port3                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |               |                                    |              |                           |
| port4                     | Physical Interface |         | 0.0.0.0/0.0.0.0          |               |                                    |              |                           |


### Example 3: specifying a local user profile for a FortiCloud IAM user

In this example, a FortiCloud IAM user is configured to have read-only SSO access based on the settings in the FortiOS SSO portal. Once the FortiCloud IAM user logs in, an administrator with *super\_admin* access changes the permission of the IAM user to have *super\_admin* access.

This example assumes the *FortiOS* SSO portal has already been added to the IAM permission profile. See [Creating a permission profile](#) and [Managing permission profiles](#) in the Identity & Access Management (IAM) Guide for more information about configuring permission profiles in FortiCloud.


### To configure the FortiCloud IAM user:

1. In FortiCloud, configure the permission profile:
  - a. Go to *Services > IAM*, then click *Permission Profiles*.
  - b. Select a profile and click *Edit*.
  - c. In the *FortiOS SSO* portal, enable *Access*. Set the *Access Type* to *Read Only*.

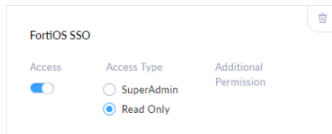

- d. Click *Update*.
2. Get the user to log in to the FortiGate:
  - a. On the FortiOS login screen, click *Sign in with FortiCloud*. The FortiCloud log in page opens.
  - b. Click *IAM Login*.
  - c. Enter the IAM account credentials and click *Log In*.

The new SSO user is created with a `super_admin_readonly` profile.

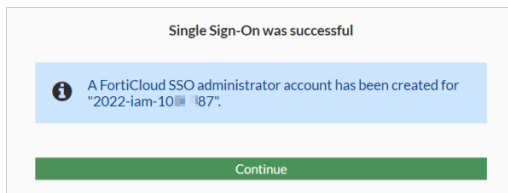

3. Update the IAM user permission to have `super_admin` access:
  - a. Log in to the FortiGate with a `super_admin` administrator account.
  - b. Go to *System > Administrators* and edit the IAM user (2022).
  - c. Set *Administrator profile* to *Specify* and select *super\_admin*.
  - d. Click *OK*.
4. Get the user to log in to the FortiGate again. Since the profile changed to `super_admin`, they can modify items.

### Example 4: accessing a FortiGate remotely from FortiGate Cloud

In this example, a FortiGate Cloud user with a paid subscription accesses the FortiGate remotely from FortiGate Cloud. When the user logs in with SSO, the profile has `super_admin` access. After the FortiGate Cloud user logs in, an administrator with `super_admin` access changes the permission of the FortiGate Cloud user to have `prof_admin` (read-only) access.




FortiGate Cloud must be accessed from a FortiGate Cloud 2.0 portal (also called FortiGate Cloud Premium) in order to have remote access using the FortiGate Cloud proxy. See [Getting started with FortiGate Cloud 2.0](#) for more details.

### To access a FortiGate remotely from FortiGate Cloud:

1. Log in to the FortiGate Cloud 2.0 portal.
2. Go to *Inventory > Asset List*. Select the desired FortiGate, then click *Remote Access*.

FortiGate Cloud accesses the FortiGate using the FortiGate Cloud proxy and creates a super\_admin user. The FortiOS interface is displayed in the current browser window.

3. Log out of FortiGate Cloud.
4. Update the FortiGate Cloud user permission to have prof\_admin access:
  - a. Log in to the FortiGate with a super\_admin administrator account.
  - b. Go to *System > Administrators* and edit the user in the *FortiGate Cloud SSO Administrator* section (\*\*\*\*\*@gmail.com).
  - c. Set *Administrator profile* to *Specify* and select *prof\_admin*.
  - d. Click OK.
5. Log in to the FortiGate Cloud 2.0 portal and access the FortiGate remotely again. Since the profile changed to prof\_admin, they can only view items (such as interfaces).

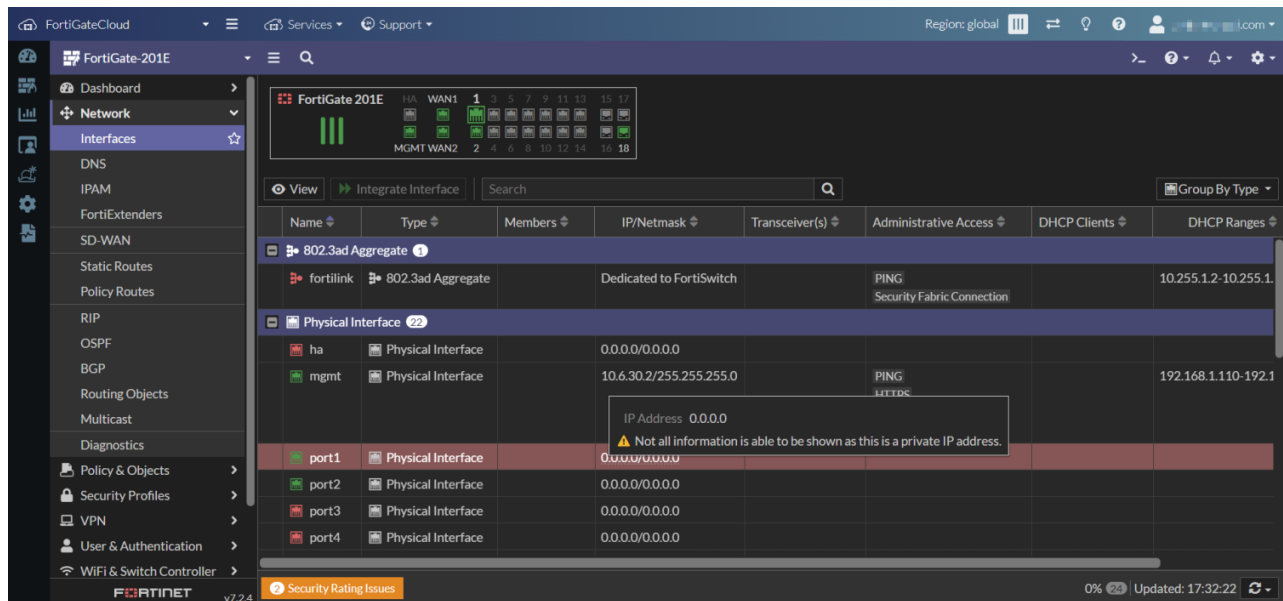

## Password policy

Brute force password software can launch more than just dictionary attacks. It can discover common passwords where a letter is replaced by a number. For example, if `passw0rd` is used as a password, it can be cracked.

Using secure passwords is vital for preventing unauthorized access to your FortiGate. When changing the password, consider the following to ensure better security:

- Do not use passwords that are obvious, such as the company name, administrator names, or other obvious words or phrases.
- Use numbers in place of letters, for example: `passw0rd`.
- Administrator passwords can be up to 64 characters.
- Include a mixture of numbers, symbols, and upper and lower case letters.
- Use multiple words together, or possibly even a sentence, for example: `correcthorsebatterystaple`.
- Use a password generator.
- Change the password regularly and always make the new password unique and not a variation of the existing password. for example, do not change from `password` to `password1`.

- Make note of the password and store it in a safe place away from the management computer, in case you forget it; or ensure at least two people know the password in the event one person becomes unavailable. Alternatively, have two different admin logins.

FortiGate allows you to create a password policy for administrators and IPsec pre-shared keys. With this policy, you can enforce regular changes and specific criteria for a password policy, including:

- The minimum length, between 8 and 64 characters.
- If the password must contain uppercase (A, B, C) and/or lowercase (a, b, c) characters.
- If the password must contain numbers (1, 2, 3).
- If the password must contain special or non-alphanumeric characters: !, @, #, \$, %, ^, &, \*, (, and )
- Where the password applies (admin or IPsec or both).
- The duration of the password before a new one must be specified.
- The minimum number of unique characters that a new password must include.

If you add a password policy or change the requirements on an existing policy, the next time that administrator logs into the FortiGate, the administrator is prompted to update the password to meet the new requirements before proceeding to log in.

For information about setting passwords, see [Default administrator password on page 2273](#).

### To create a system password policy the GUI:

1. Go to *System > Settings*.
2. In the *Password Policy* section, change the *Password scope* to *Admin*, *IPsec*, or *Both*.
3. Configure the password policy options.

The screenshot shows the 'System Settings' page in the FortiGate GUI. The 'Password Policy' section is active. Under 'Password scope', the 'Admin' tab is selected. The 'Minimum length' is set to 8 and 'Minimum number of new characters' is set to 6. The 'Character requirements', 'Allow password reuse', and 'Password expiration' checkboxes are all checked. In the 'View Settings' section, 'Language' is set to English, 'Theme' is set to Jade, and 'Date/Time display' is set to FortiGate timezone. An 'Apply' button is located at the bottom of the settings area.

4. Click *Apply*.

### To create a system password policy the CLI:

```
config system password-policy
  set status {enable | disable}
  set apply-to {admin-password | ipsec-preshared-key}
  set minimum-length <8-128>
  set min-lower-case-letter <0-128>
  set min-upper-case-letter <0-128>
  set min-non-alphanumeric <0-128>
  set min-number <0-128>
  set min-change-characters <0-128>
  set expire-status {enable | disable}
  set expire-day <1-999>
```

```

    set reuse-password {enable | disable}
end

```

## Public key SSH access

Public-private key pairs can be used to authenticate administrators connecting to the CLI using an SSH client. These keys can be RSA, ECDSA, or EdDSA.

Weigh the pros and cons of using key-pair authentication, versus passwords, when considering their use:

|             | Key-pair                                                       | Password                                                                                      |
|-------------|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| <b>Pros</b> | More secure (higher complexity)                                | Easy to remember                                                                              |
|             | Restricts logon to hosts that have the private key             | Easy to update                                                                                |
|             | Never sent to the FortiGate                                    | Can log in from any system                                                                    |
|             | Can add a password in addition to the key                      |                                                                                               |
| <b>Cons</b> | More complex to implement                                      | Might be guessable or brute forced                                                            |
|             | The private key is only as secure as the system storing it     | Could be reused and compromised on another system                                             |
|             | More complicated to train users and administrators to use keys | Might be stored in plain text on an authenticating device (This does not apply to FortiGates) |
|             |                                                                | Can be phished or observed if written down                                                    |

Key-pair authentication is often implemented when connecting to the FortiGate without any human interaction, such as when using a script. The script can leverage existing mechanisms to secure private keys, instead of trying to develop a way to securely store a username and password.

## Generating the key pair

Key pairs can be generated and added in multiple different ways. This example shows generating a key pair using *PuTTY Key Generator* and adding the private key to the endpoint using *PuTTY Pageant*.

### To create the key pair using PuTTY:

1. [Download](#) and install PuTTY.
2. Run *PuTTYgen.exe*.
3. Set *Type of key to generate* to *RSA*, *ECDSA*, or *EdDSA*.
4. Click *Generate*, then move the mouse cursor around in the blank space to generate randomness while the keys are generated.
5. Save both the public and private keys. Optionally, a key passphrase can be entered to protect the private key.



### To add the public key to the FortiGate:

1. Delete the *Key comment*, then copy the public key from the *PuTTY Key Generator*.

Conversely, you can also open the saved public key in Notepad, remove the line breaks from the key, then remove extraneous lines:

```
---- BEGIN SSH2 PUBLIC KEY ----
Comment: "rsa-key-2022XXXX"

---- END SSH2 PUBLIC KEY ----
```

2. Add the key to the FortiGate:

```
config system admin
  edit <admin>
    set ssh-public-key1 "<key_type> <key_value>"
  next
end
```

 
Where <key\_value> is the copied key, and <key\_type> depends on the type of key that was generated:

|       |                                                                   |
|-------|-------------------------------------------------------------------|
| RSA   | ssh-rsa                                                           |
| ECDSA | ecdsa-sha2-nistp256<br>ecdsa-sha2-nistp384<br>ecdsa-sha2-nistp521 |
| EdDSA | ssh-ed25519                                                       |

### To add the private key to the endpoint:

1. Open *PuTTY Pageant*.
2. Click *Add Key* or *Add Key (encrypted)* and select the previously saved private key.
3. Click *Close*.

You can now log in to the FortiGate on an SSH connection without using a password.



If using PuTTY, the username can be entered under *Connection > Data* in the *Auto-login username* field.



The generated keys can also be used in a certificate to authenticate with the FortiGate. See [Administrative access using certificates on page 2541](#) for information about generating and using certificates for administrative authentication.

## Restricting SSH and Telnet jump host capabilities

Jump hosts are used to access devices in separate security zones, such as the internet and an internal network. Administrator access profiles can be configured to prevent administrators from using the FortiGate as a jump host for SSH and Telnet connections.

**To configure permission to execute SSH or Telnet commands in an access profile:**

```

config system accprofile
  edit <name>
    set system-execute-ssh {enable | disable}
    set system-execute-telnet {enable | disable}
  next
end

```

**To block SSH and Telnet connections for an administrator:****1. Disable permission to execute SSH or Telnet commands in an administrator access profile:**

```

config system accprofile
  edit "test_accprofile"
    set system-execute-ssh disable
    set system-execute-telnet disable
  next
end

```

**2. Configure an administrator in the profile:**

```

config system admin
  edit "admin1"
    set accprofile "test_accprofile"
    set vdom "root"
    set password *****
  next
end

```

**3. Log in as the new administrator, and attempt to connect to another host using SSH or Telnet:**

```

# execute ssh root@172.16.200.55
You are not entitled to run the command.
Command fail. Return code -37

# execute ssh6 root@2000:172:16:200::55
You are not entitled to run the command.
Command fail. Return code -37

# execute telnet 172.16.200.55
You are not entitled to run the command.
Command fail. Return code -37

```

## Remote administrators with TACACS VSA attributes

Vendor-Specific Attributes (VSAs) can be used with TACACS authentication and authorization in wildcard system administrator access to FortiGates from browsers and SSH. The `memberof` VSA can be used in remote TACACS user group for group matching. The `vdom` VSA returned from TACACS can be used to overwrite the VDOM in the `system admin` settings. The `admin_prof` VSA returned from TACACS can be used to overwrite the `accprofile` in the `system admin` settings.

## Example

In this example, a FortiGate is configured with multiple VDOMs, and the root acts as the management VDOM. Administrators attempt to log in with SSH or HTTPS through each VDOM.

Using the VSA values for the `vdom` and `admin_prof` attributes returned from the TACACS server, the FortiGate can allow access only to the VDOMs returned with the permissions from the corresponding administrator profile. If no VSA values are returned from TACACS, then the FortiGate uses the default values under the `config system admin` settings.

The TACACS server settings are configured as follows:

```
user = admin-all-vdom {
    default service = permit
    member = sys_admin_all_vdom
    ...
}
user = admin-vdom1 {
    default service = permit
    member = sys_admin_vdom1
    ...
}
group = sys_admin_all_vdom {
    default service = permit
    service = fortigate {
        memberof = group3
        admin_prof = admin_all_vdom
    }
}
group = sys_admin_vdom1 {
    default service = permit
    service = fortigate {
        memberof = group3
        admin_prof = admin_vdom1
        vdom = vdom1
    }
}
```

For multiple VDOMs, each VDOM must be specified in a separate field. For example, for access to vdom1 and vdom2:


```
vdom = vdom1
vdom = vdom2
```



Some TACACS servers, such as Linux TACACS servers, may only return the last VDOM specified.

---

The authentication process is as follows:

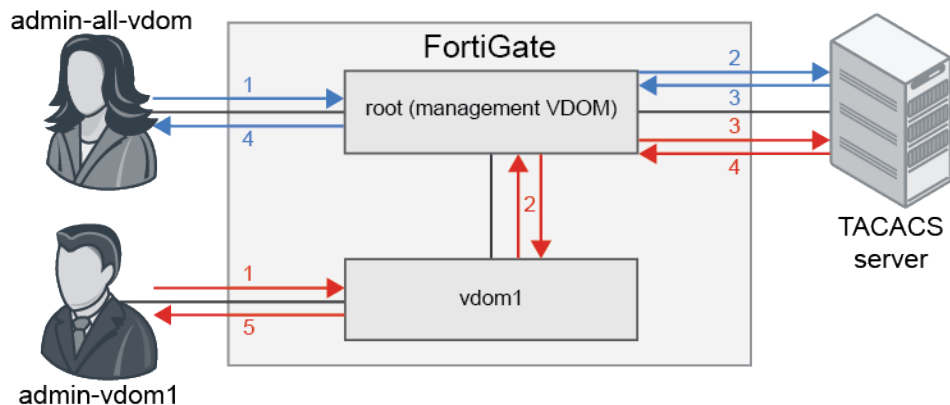

### Authentication for admin-all-vdom:

1. The administrator attempts to log in to the FortiGate over the remote TACACS user group, `remote-tacacs`.
2. The FortiGate sends an authorization request to the TACACS server.
3. TACACS authenticates the admin-all-vdom user. The user matches the `sys_admin_all_vdom` TACACS group. TACACS returns following VSA values:
  - `memberof = group3`
  - `admin_prof = admin_all_vdom`
4. The FortiGate authenticates and authorizes the user based on the returned `memberof` group. The `admin_prof` value overwrites the `accprofile` setting configured under `system admin`. Since no other VDOM VSA is returned, the FortiGate matches the user to the default VDOM configured under `system admin`, which is `admin_no_access`.

### Authentication for admin-vdom1:

1. The administrator attempts to log in to the FortiGate over the remote TACACS user group, `remote-tacacs`.
2. vdom1 forwards the request to the management VDOM, which is the root.
3. The FortiGate sends an authorization request to the TACACS server through the management VDOM.
4. TACACS authenticates the admin-vdom1 user. The user matches the `sys_admin_vdom1` TACACS group. TACACS returns following VSA values:
  - `memberof = group3`
  - `admin_prof = admin_vdom1`
  - `vdom = vdom1`
5. The FortiGate authenticates and authorizes the user based on the returned `memberof` group. The other VSA values overwrite the `accprofile` and VDOM settings configured under `system admin`. The user is only allowed to access vdom1 with the administrative permissions allowed for `admin_vdom1`.

### To configure the FortiGate:

1. Create two system administrator profiles.
  - a. Configure `admin_vdom1` who has read-write access to vdom1 (except for firewall policies) and is restricted from using `diagnose` commands in the CLI:

```
config system accprofile
  edit "admin_vdom1"
    set secfabgrp read-write
    set ftviewgrp read-write
```

```
        set authgrp read-write
        set fwgrp custom
        set system-diagnostics disable
        config fwgrp-permission
            set policy read
            set address read
            set service read
            set schedule read
            set others read
        end
    next
end
```

- b. Configure admin\_all\_vdom who has read-write access to all VDOMs, but not with super\_admin permissions:

```
config system accprofile
    edit "admin_all_vdom"
        set secfabgrp read-write
        set ftviewgrp read-write
        set authgrp read-write
        set sysgrp read
        set netgrp read-write
        set loggrp read-write
        set fwgrp read-write
        set vpngrp read
        set utmgrp read
        set wanoptgrp read
        set wifi read
    next
end
```

## 2. Configure the TACACS server:

```
config user tacacs+
    edit "tac1"
        set server "10.1.100.34"
        set key XXXXXXXXXXXXX
        set authorization enable
    next
end
```

## 3. Configure the remote TACACS group with group matching:

```
config user group
    edit "remote-tacacs"
        set member "tac1"
        config match
            edit 1
                set server-name "tac1"
                set group-name "group3"
            next
        end
    next
end
```

## 4. Configure the wildcard administrative user assigned to the remote TACACS group:

```
config system admin
    edit "remote-admin"
```

```


set remote-auth enable
set accprofile "admin_no_access"
set vdom "root" "vdom1"
set wildcard enable
set remote-group "remote-tacacs"
set accprofile-override enable
set vdom-override enable
next
end

```

## To verify the configuration:


1. Log in as admin-vdom1 using a browser and SSH. The following behavior is expected:

- The user can only access vdom1 (returned by TACACS in the vdom VSA).
- The user can view firewall policies, but they cannot not create new policies.
- The user cannot run `diagnose debug application` commands in the PuTTY SSH session.

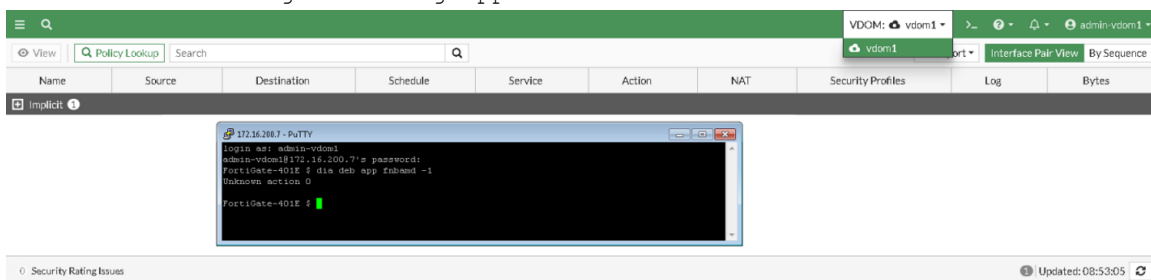

2. Log in as admin\_all\_vdom using a browser and SSH. The following behavior is expected:

- The user has no VSA VDOM configured on the TACACS server, so the default setting in the `system admin` configuration should apply. The user can access the root and vdom1 VDOMs.
- The user has no access to `system global` in the CLI, and the prompt symbol is a `$` instead of a `#`.

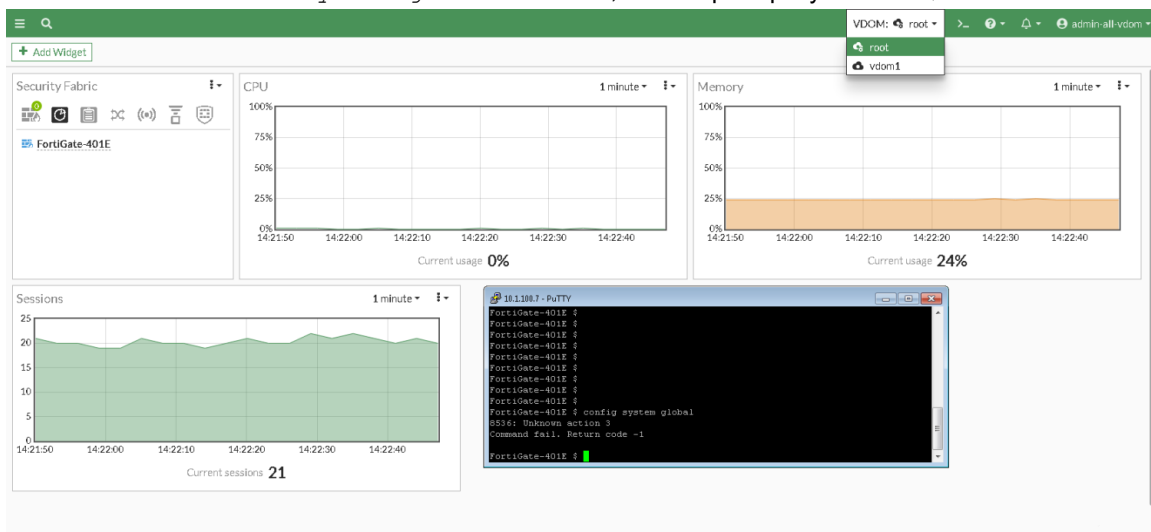

## Administrator profiles

Administrator profiles define what the administrator can do when logged into the FortiGate. When you set up an administrator account, you also assign an administrator profile which dictates what the administrator sees. Depending on the nature of the administrator's work, access level or seniority, you can allow them to view and configure as much or as little as is required. Access to CLI diagnose commands can also be disabled for global and VDOM level administrators.

By default, the FortiGate has an *admin* administrator account that uses the *super\_admin* profile.

### super\_admin profile

This profile has access to all components of FortiOS, including the ability to add and remove other system administrators. For certain administrative functions, such as backing up and restoring the configuration, *super\_admin* access is required. To ensure that there is always a method to administer the FortiGate, the *super\_admin* profile cannot be deleted or modified.



Lower level administrator profiles cannot backup or restore the FortiOS configuration.

---

The *super\_admin* profile is used by the default *admin* account. It is recommended that you add a password and rename this account once you have set up your FortiGate. In order to rename the default account, a second *admin* account is required.

## Creating customized profiles

### To create a profile in the GUI:

1. Go to *System > Admin Profiles* and click *Create New*.
2. Configure the following settings:
  - Name
  - Access permissions
  - Usage of CLI diagnose commands
  - Override idle timeout
3. Click *OK*.

### To create a profile in the CLI:

```
config system accprofile
  edit <name>
    set secfabgrp {none | read | read-write}
    set ftviewgrp {none | read | read-write}
    set authgrp {none | read | read-write}
    set sysgrp {none | read | read-write | custom}
    set netgrp {none | read | read-write | custom}
    set loggrp {none | read | read-write | custom}
```

```
        set fwgrp {none | read | read-write | custom}
        set vpngrp {none | read | read-write}
        set utmgrp {none | read | read-write | custom}
        set wanoptgrp {none | read | read-write}
        set wifi {none | read | read-write}
        set admintimeout-override {enable | disable}
        set system-diagnostics {enable | disable}
    next
end
```

## Displaying execute commands for custom system permissions

A custom access profile can have customized system permissions. In this example, a profile is created for maintenance read access, and the profile is applied to a new system administrator account. Once the administrator logs in, they can view the available execute commands by entering `execute ?` in the CLI.

### To create the profile:

#### 1. Configure the access profile:

```
config system accprofile
    edit "mnt test"
        set sysgrp custom
        config sysgrp-permission
            set mnt read
        end
    next
end
```

#### 2. Configure the system administrator account:

```
config system admin
    edit "mnt"
        set accprofile "mnt test"
        set vdom "root"
        set password *****
    next
end
```

### To display the list of the execute commands:

```
$ execute ?
backup                backup
fctems                fctems
ping                  PING command.
ping-options          ping-options
ping6                 PINGv6 command. [Take 0-100 arg(s)]
ping6-options         ping6-options
ssh-options           SSH options.
ssh6-options          IPv6 SSH options.
telnet-options        telnet-options
traceroute            Traceroute {IP|hostname}.
traceroute-options    traceroute-options
tracert6              Traceroute for IPv6. [Take 0-32 arg(s)]
usb-device            usb-device
```



|                    |                     |
|--------------------|---------------------|
| usb-disk           | usb-disk            |
| vm-license-options | VM license options. |

---



The output will vary based on the FortiGate model. A FortiGate VM is used in this example. For more information about using the CLI, see [CLI basics on page 34](#).

---

## Editing profiles

### To edit a profile in the GUI:

1. Go to *System > Admin Profiles*.
2. Select the profile to be edited and click *Edit*.
3. Make the required changes.
4. Click *OK* to save any changes.

### To edit a profile in the CLI:

```
config system accprofile
  edit "sample"
    set secfabgrp read
  next
end
```

## Deleting profiles

### To delete a profile in the GUI:

1. Go to *System > Admin Profiles*.
2. Select the profile to be deleted and click *Delete*.
3. Click *OK*.

### To delete a profile in the CLI:

```
config system accprofile
  delete "sample"
end
```

## Fabric Management

The *Fabric Management* page allows administrators to manage the firmware running on each FortiGate, FortiAP, and FortiSwitch in the Security Fabric, and to authorize and register these Fabric devices.

The *Fabric Management* page displays a summary of devices in the Security Fabric that includes:

- Total number of devices in the Fortinet Security Fabric and the types of devices
- Upgrade status

- Device name
- Device status
- Registration status
- Firmware version and maturity level
- Upgrade status

From the *Fabric Management* page, administrators can perform the following actions:

|                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Upgrade        | <p>Use to upgrade firmware for the selected device.</p> <p>The <i>Upgrade</i> option uses released firmware images from FortiGuard. Alternately you can download a firmware file from the <a href="#">Fortinet Customer Service &amp; Support</a> website, and upload it for the upgrade process.</p> <p>See <a href="#">Upgrading individual device firmware on page 2248</a> and <a href="#">Upgrading individual device firmware by following the upgrade path (federated update) on page 2249</a>.</p>         |
| Fabric Upgrade | <p>Use to upgrade firmware for the root FortiGate as well as all Fabric devices. You can also use this option to upgrade firmware for a non-Security Fabric FortiGate with managed FortiSwitch and FortiAP devices.</p> <p>The <i>Fabric Upgrade</i> option uses released firmware images from FortiGuard.</p> <p>See <a href="#">Upgrading all device firmware on page 2251</a> and <a href="#">Upgrading all device firmware by following the upgrade path (federated update) on page 2253</a>.</p>              |
| Register       | <p>Use the <i>Register</i> option to register a selected device to FortiCare.</p> <p>The FortiGate, and then its service contract, must be registered to have full access to <a href="#">Fortinet Customer Service and Support</a>, and <a href="#">FortiGuard</a> services. The FortiGate can be registered in either the FortiGate GUI or the FortiCloud support portal. The service contract can be registered from the FortiCloud support portal.</p> <p>See also <a href="#">Registration on page 57</a>.</p> |
| Authorization  | <p>Use the <i>Authorization</i> option to authorize, deauthorize, or reject the selected device.</p> <p>See <a href="#">Authorizing devices on page 2258</a>.</p>                                                                                                                                                                                                                                                                                                                                                  |

Before you upgrade FortiGate firmware, it is recommended to learn about firmware updates and firmware maturity levels. See [About firmware installations on page 2245](#) and [Firmware maturity levels on page 2245](#).

This section also includes the following topics:

- [Enabling automatic firmware updates on page 2256](#)
- [Firmware upgrade notifications on page 2261](#)
- [Downloading a firmware image on page 2262](#)
- [Testing a firmware version on page 2262](#)
- [Installing firmware from system reboot on page 2264](#)
- [Restoring from a USB drive on page 2266](#)
- [Using controlled upgrades on page 2267](#)
- [Downgrading individual device firmware on page 2267](#)
- [Downloading the EOS support package for supported Fabric devices on page 2269](#)

## About firmware installations

Fortinet periodically updates the FortiGate firmware to include new features and resolve important issues. After you have registered your FortiGate unit, firmware updates are available from FortiGuard and from the [Fortinet Customer Service & Support](#) website.

Installing a new firmware image replaces the current antivirus and attack definitions, along with the definitions included with the firmware release that is being installing. After you install new firmware, make sure that the antivirus and attack definitions are up to date.



It is recommended to back up your configuration before making any firmware changes. You will be prompted to back up your configuration as part of the upgrade process. See also [Configuration backups on page 67](#).

---

Before you install any new firmware, follow the below steps:

1. Understand the maturity level of the current and target firmware releases to help you determine whether to upgrade. See [Firmware maturity levels on page 2245](#).
2. Review the [Release Notes](#) for a new firmware release.
3. Review the [Supported Upgrade Paths](#).
4. Download a copy of the currently installed firmware, in case you need to revert to it. See [Downloading a firmware image on page 2262](#) and [Downgrading individual device firmware on page 2267](#) for details.
5. Have a plan in place in case there is a critical failure, such as the FortiGate not coming back online after the update. This could include having console access to the device ([Connecting to the CLI on page 31](#)), ensuring that your TFTP server is working ([Installing firmware from system reboot on page 2264](#)), and preparing a USB drive ([Restoring from a USB drive on page 2266](#)).
6. Back up the current configuration, including local certificates. The upgrade process prompts you to back up the current configuration. See also [Configuration backups on page 67](#) for details.
7. Test the new firmware until you are satisfied that it applies to your configuration. See [Testing a firmware version on page 2262](#) and [Using controlled upgrades on page 2267](#) for details.

Installing new firmware without reviewing release notes or testing the firmware may result in changes to settings and unexpected issues.



Only FortiGate admin users and administrators whose access profiles contain system read and write privileges can change the FortiGate firmware.

---

## Firmware maturity levels

Starting with FortiOS 7.2.0, released FortiOS firmware images use tags to indicate the following maturity levels:

- The *Feature* tag indicates that the firmware release includes new features.
- The *Mature* tag indicates that the firmware release includes no new, major features. Mature firmware will contain bug fixes and vulnerability patches where applicable.


Administrators can use the tags to identify the maturity level of the current firmware in the GUI or CLI.

Administrators can view the maturity level of each firmware image that is available for upgrade on the *Fabric Management* page. When upgrading from mature firmware to feature firmware, a warning message is displayed.


**To view maturity levels for firmware in the GUI:**

1. Go to *Dashboard > Status*. The *Firmware* field in the *System Information* widget displays the version with build number and either *(Mature)* or *(Feature)*.


The following is an example of firmware with the *(Mature)* tag:

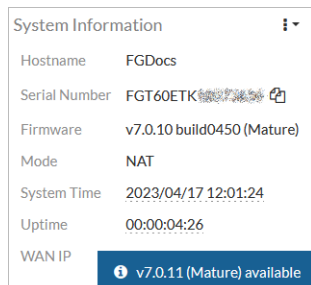

The following is an example of firmware with the *(Feature)* tag:

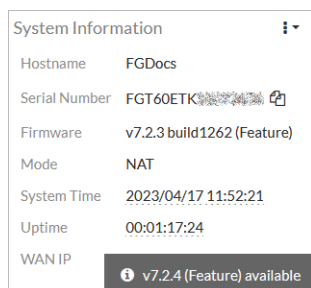


2. Go to *System > Fabric Management*. The *Firmware Version* column displays the version with build number and either *(Mature)* or *(Feature)*.

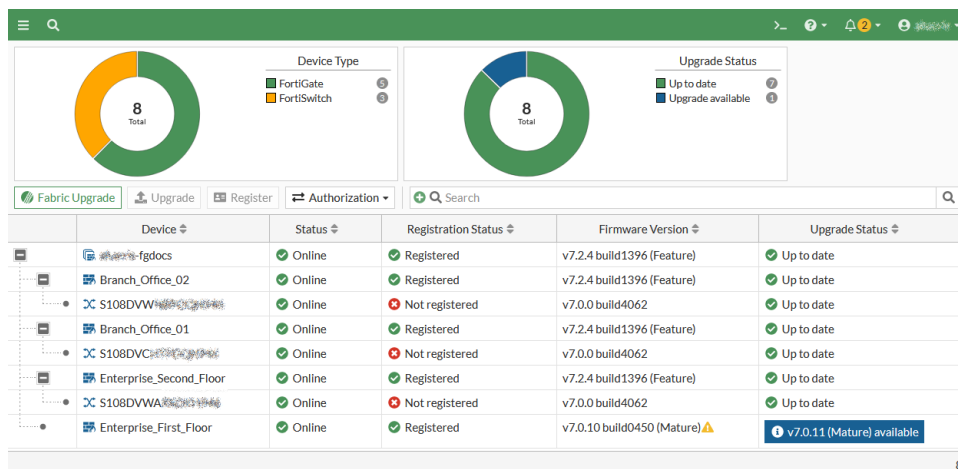


3. Select a device and click *Upgrade*. The *FortiGate Upgrade* pane is displayed.

- Click the *Latest* tab to view the latest available firmware version with its maturity level.

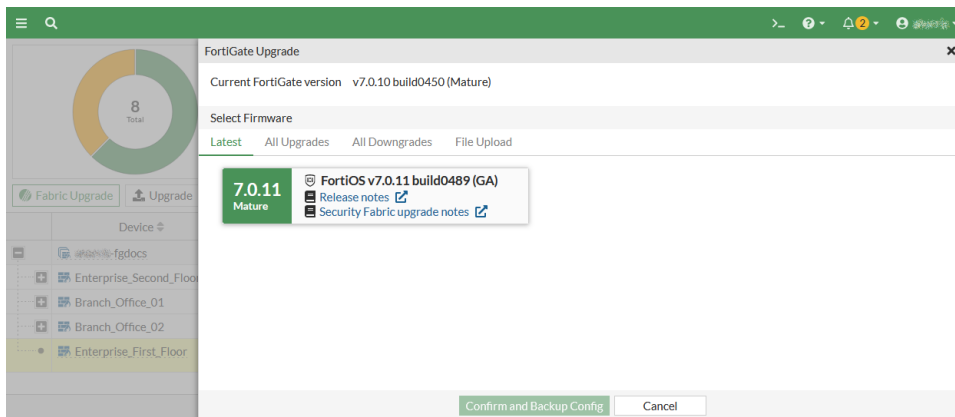


- Click the *All Upgrades* tab to view all available firmware versions and their maturity levels.

A gray box around the version number and the label *Feature* identifies feature firmware version. A green box around the version with the label *Mature* identifies a mature firmware version.

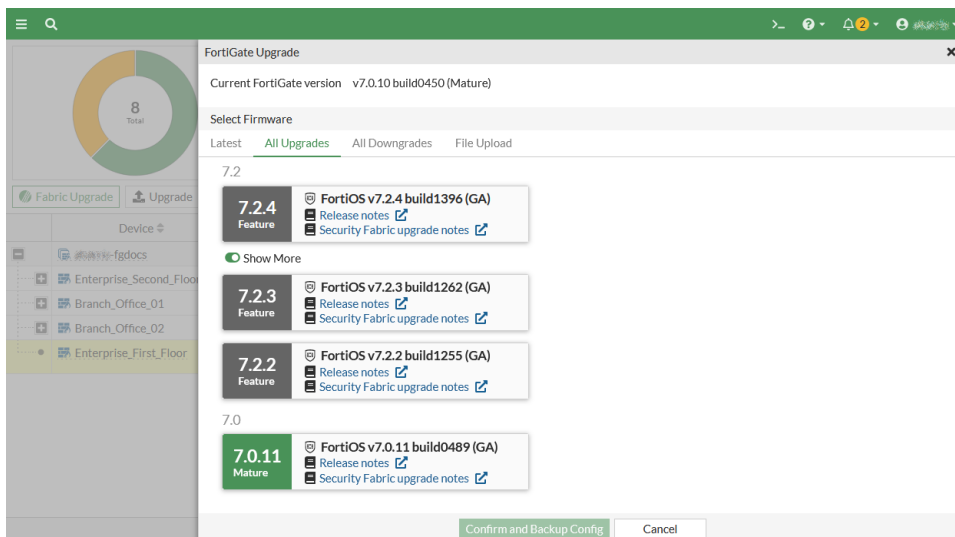

- Select a version and click *Confirm and Backup Config*.

When the firmware version is a feature release, a warning is displayed; click *Confirm Switch to Feature Maturity*.

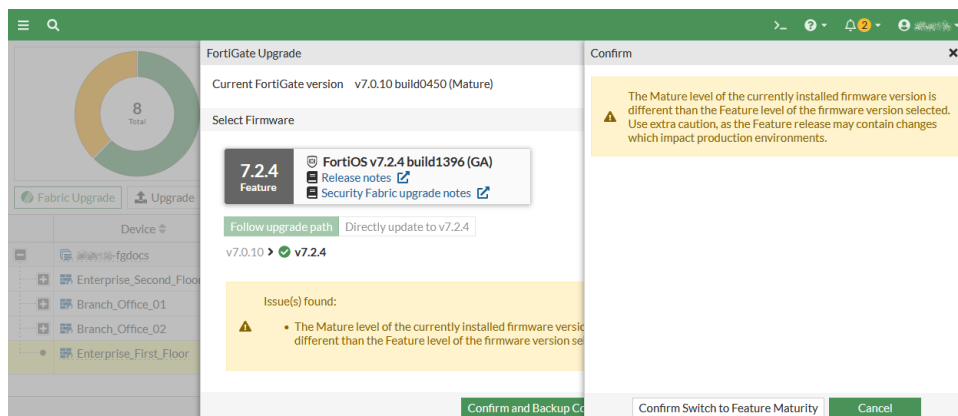

**To view maturity levels for firmware in the CLI:**

In this example, the `Version` field includes `.F` to indicate that the maturity level is feature:

```
# get system status
Version: FortiWiFi-81F-2R-POE v7.2.4,build1396,230131 (GA.F)
...
```

In this example, the `Version` field includes `.M` to indicate that the maturity level is mature:

```
# get system status
Version: FortiWiFi-81F-2R-POE v7.0.10,build0450,230221 (GA.M)
...
```

## Upgrading individual device firmware

**To upgrade individual device firmware in the GUI:**

1. Log into the FortiGate GUI as the admin administrative user.
2. Go to *System > Fabric Management*.
3. Select the FortiGate, and click *Upgrade*. The *FortiGate Upgrade* pane opens.
4. Click the following tabs to view the available firmware:

|                     |                                                                                                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Latest</i>       | Displays the latest, available firmware from FortiGuard.                                                                                                                                                                            |
| <i>All Upgrades</i> | Displays all available firmware from FortiGuard.                                                                                                                                                                                    |
| <i>File Upload</i>  | Click the <i>File Upload</i> tab to upload a firmware file that you previously downloaded from the <a href="#">Fortinet Customer Service &amp; Support</a> website. See <a href="#">Downloading a firmware image on page 2262</a> . |

5. Select a firmware version and click *Confirm and Backup Config*.  
If you are upgrading from a mature to a feature firmware version, the *Confirm* pane opens with a warning message.
6. Review the warning, and click *Confirm* to continue. A warning message is displayed.
7. Click *Continue* to initiate the upgrade.  
The FortiGate unit backs up the current configuration to the management computer, uploads the firmware image file, upgrades to the new firmware version, and restarts. This process takes a few minutes.

**To upgrade individual device firmware in the CLI:**

1. Make sure that the TFTP server is running.
2. Copy the new firmware image file to the root directory of the TFTP server.
3. Log in to the CLI.
4. Ping the TFTP server to ensure that the FortiGate can connect to it:  
`execute ping <tftp_ipv4>`
5. Enter the following command to copy the firmware image from the TFTP server to the FortiGate unit:  
`execute restore image tftp <filename> <tftp_ipv4>`

The FortiGate unit responds with the message:

```
This operation will replace the current firmware version!
Do you want to continue? (y/n)
```

6. Type `y`. The FortiGate unit uploads the firmware image file, verifies the signature of the firmware image, and determines the firmware maturity level.

When you are upgrading to a feature firmware image, you are asked to confirm whether to continue with the upgrade.

When you proceed with the upgrade, the upgrade image is installed and FortiGate restarts. This process takes a few minutes.

```
Please wait...
Connect to tftp server 172.16.200.55 ...
#####
Get image from tftp server OK.
Verifying the signature of the firmware image.

Warning: Upgrading to an image with Feature maturity notation.
Image file uploaded is marked as a Feature image, are you sure you want to upgrade?
Do you want to continue? (y/n)y
Please confirm again. Are you sure you want to upgrade using uploaded file?
Do you want to continue? (y/n)y
Checking new firmware integrity ... pass
Please wait for system to restart.
Firmware upgrade in progress ...
Done.
The system is going down NOW !!
```


7. Reconnect to the CLI.
8. Update the antivirus and attack definitions:  
`execute update-now`

## Upgrading individual device firmware by following the upgrade path (federated update)

When upgrading a FortiGate to firmware that requires multiple builds in the upgrade path, FortiGate can follow the upgrade path to complete the upgrade automatically. This process is sometimes called a *federated update*. A federated update can be performed immediately or during a scheduled time.

### To upgrade individual device firmware by following the upgrade path in the GUI:


1. Log into the FortiGate GUI as the admin administrative user.
2. Go to *System > Fabric Management*. The *Firmware Version* column displays the version and either (*Feature*) or (*Mature*).
3. Select the FortiGate, and click *Upgrade*. The *FortiGate Upgrade* pane opens.
4. Click *All Upgrades*. The available firmware versions are displayed.  
 In this example, the firmware is available for 7.2 and 7.0.

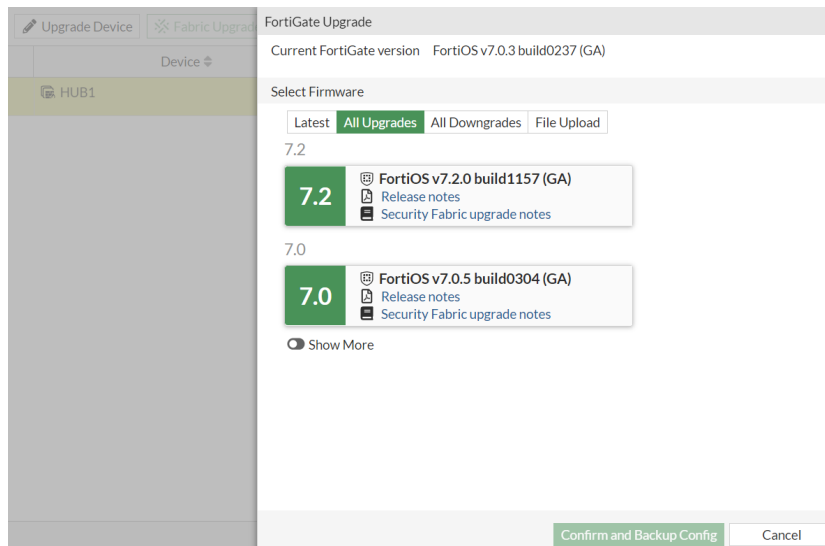

5. Select the target firmware, and view the upgrade options.


You can instruct FortiOS to follow the upgrade path (referred to as a federated upgrade) or upgrade directly to the selected firmware version.

In this example, the target firmware is *7.2.0 build 1157(GA)*, and *Follow upgrade path* is selected. According to the upgrade path, the device can be automatically upgraded to *v7.0.5*, but not all the way to *7.2.0*.

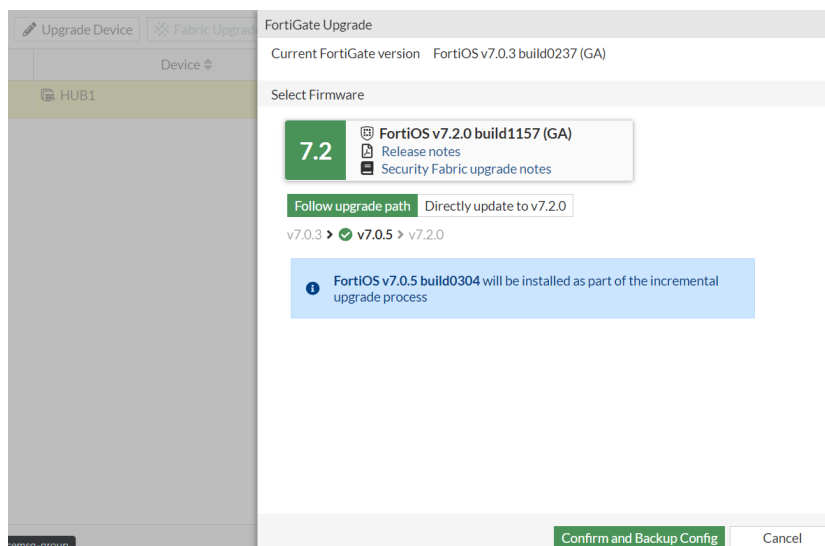



- In the following example, the *Directly update to v7.2.0* option is selected.

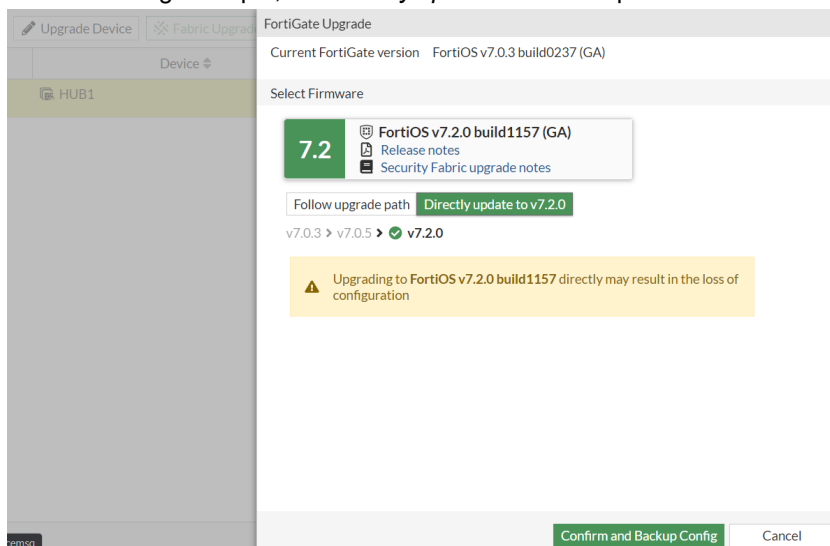

- Select *Follow upgrade path*, and click *Confirm and Backup Config*. A warning message is displayed.
- Click *Continue* to initiate the upgrade.  
The FortiGate unit backs up the current configuration to the management computer, uploads the firmware image file, upgrades to the new firmware version, and restarts. This process takes a few minutes.

## Upgrading all device firmware

Use the *Fabric Upgrade* process to select a firmware version from FortiGuard for the FortiGate. When part of a Security Fabric, the select target firmware is for the root FortiGate.

The target firmware version is used to automatically upgrade firmware for all FortiGate, FortiAP, and FortiSwitch devices. Fabric members or managed devices download the chosen firmware directly from FortiGuard.

A *Fabric Upgrade* can be performed immediately or during a scheduled time.

### To upgrade all device firmware:

- Log into the FortiGate GUI as the admin administrative user.
- Go to *System > Fabric Management* and click *Fabric Upgrade*. The *Fabric Upgrade* pane opens, and the following tabs are available:

|                     |                                                          |
|---------------------|----------------------------------------------------------|
| <i>Latest</i>       | Displays the latest, available firmware from FortiGuard. |
| <i>All Upgrades</i> | Displays all available firmware from FortiGuard.         |

- Select *Latest* or *All Upgrades*, select a target firmware version, and then click *Next*.  
In this example, *All Upgrades* is selected.

4. Select an upgrade schedule, either *Immediate* or *Custom*. If using *Custom*, enter an upgrade date and time (*Custom* is used in this example).




In a custom upgrade, the configuration backups are saved when the administrator schedules the upgrade. If the scheduled upgrade occurs after further configuration changes are made, the latest changes will not be saved in a new backup configuration file.

5. Click *Next* and review the update schedule. For FortiSwitch, a message appears because no firmware upgrade is currently available.

| Device                  | Firmware                                      |
|-------------------------|-----------------------------------------------|
| Enterprise_First_Floor  | Upgrade to v7.2.0                             |
| Enterprise_Second_Floor | Upgrade to v7.2.0                             |
| S108DVWA9XDVG54         | No firmware upgrade available for this device |

'Back', 'Confirm and Backup Config', and 'Cancel' buttons are at the bottom.

6. Click *Confirm and Backup Config*. The pane goes into a loading state to wait for all FortiGate configurations to save. Once completed, the pane closes and the device list refreshes to reflect the latest changes.

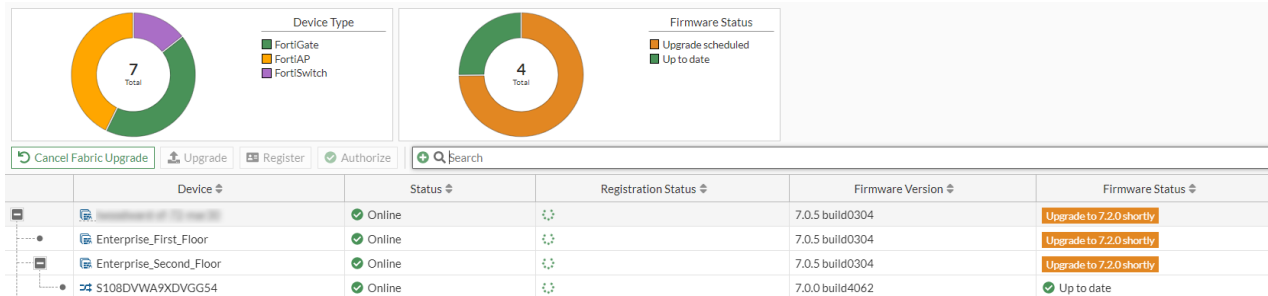

## Upgrading all device firmware by following the upgrade path (federated update)

When performing a Fabric upgrade or non-Fabric upgrade under *System > Fabric Management* and choosing a firmware that requires multiple builds in the upgrade path, the FortiGate can follow the upgrade path to complete the upgrade automatically. This process is sometimes called a *federated update*. A federated update can be performed immediately or during a scheduled time.




To demonstrate the functionality of this feature, this example uses FortiGates that are running and upgrading to fictitious build numbers.

FortiAPs and FortiSwitches currently cannot follow the upgrade path. They upgrade directly to the target version.


### Example

In this example, the Security Fabric consists of a root FortiGate (FGT\_101E) and a downstream FortiGate (GA\_A\_1). The FortiGates are currently running FortiOS 7.2.1 (build 0510). The administrator wants to upgrade the firmware to version 7.4.0 (build 0810). When upgrading the firmware on the *Fabric Management* page, the FortiGate is able to display the upgrade path, 7.2.1 > 7.2.2 > 7.4.0, and perform all of the upgrades in sequence (with multiple reboots).

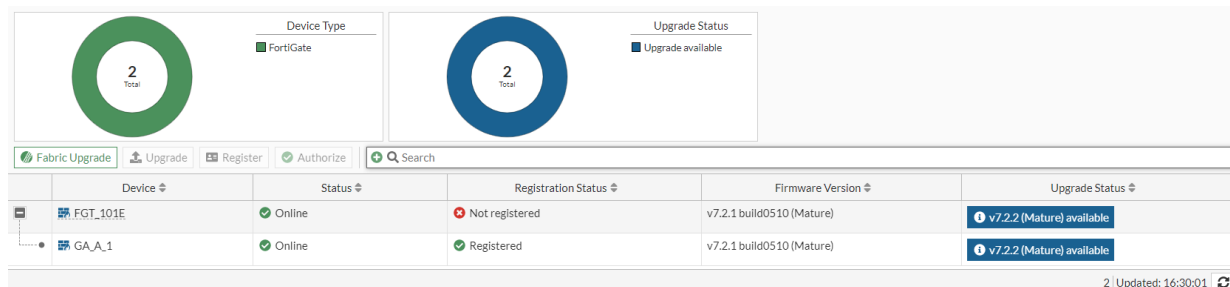


## To upgrade the FortiGate firmware:


1. Go to **System > Fabric Management** and click **Fabric Upgrade**. The **Fabric Upgrade** pane opens.
2. In the **Select Firmware** section, select **All Upgrades**.

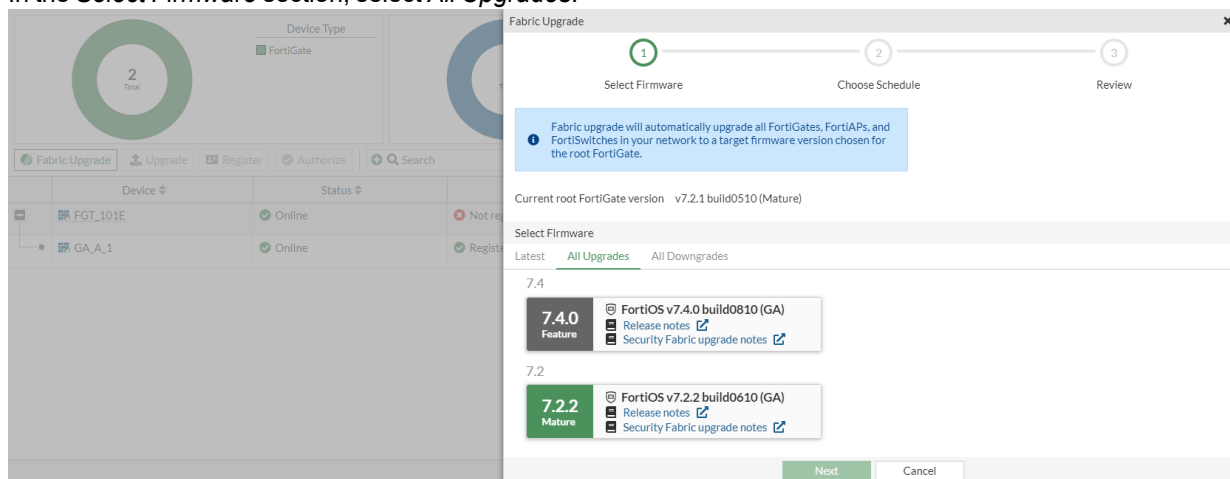


3. Select the 7.4.0 version. Upgrade options appear.
4. Select **Follow upgrade path**. The upgrade path is displayed: **v7.2.1 > v7.2.2 > v7.4.0**.

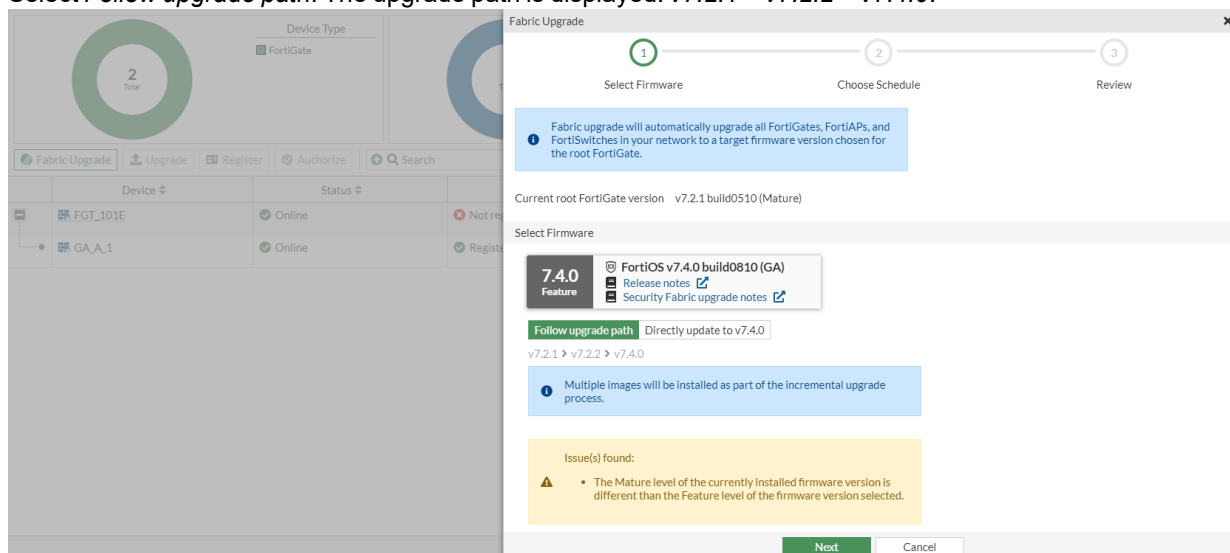


- If **Directly upgrade to v7.4.0** is selected, a warning message appears that this may result in the loss of configuration.

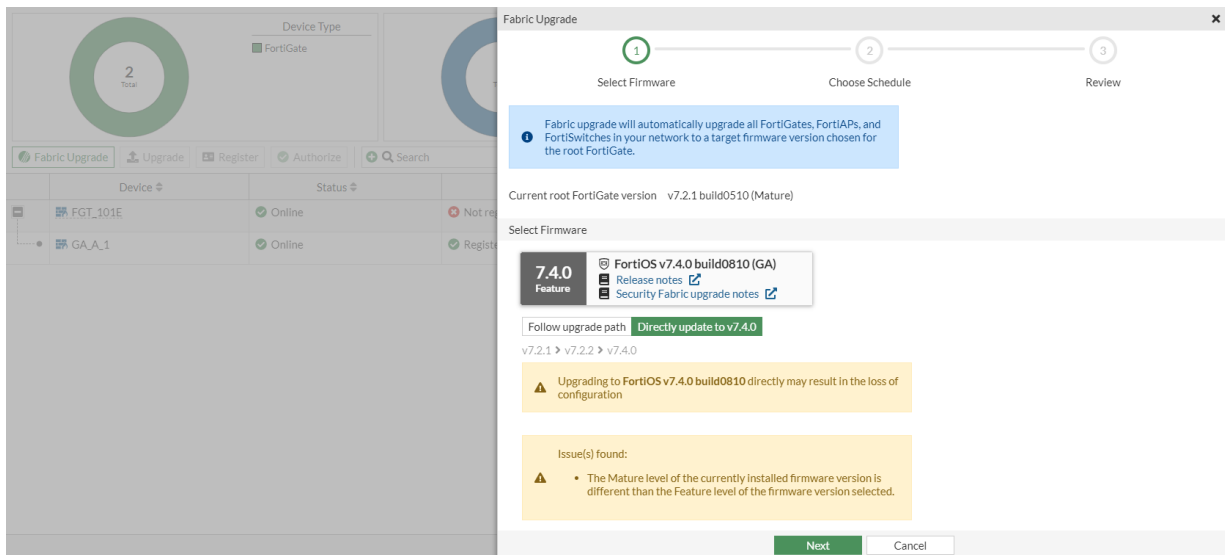


5. Click **Next**.
6. Select an upgrade schedule, either *Immediate* or *Custom*. If using *Custom*, enter an upgrade date and time. (*Custom* is used in this example.)

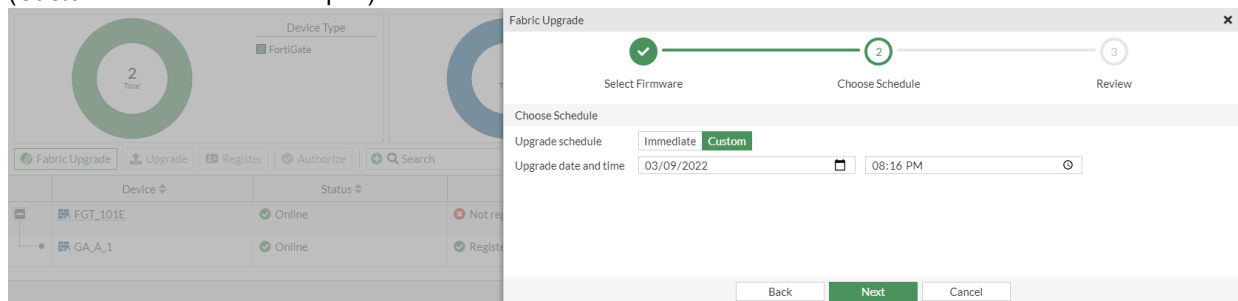


7. Click **Next** and review the update schedule.
8. Click **Confirm and Backup Config**.

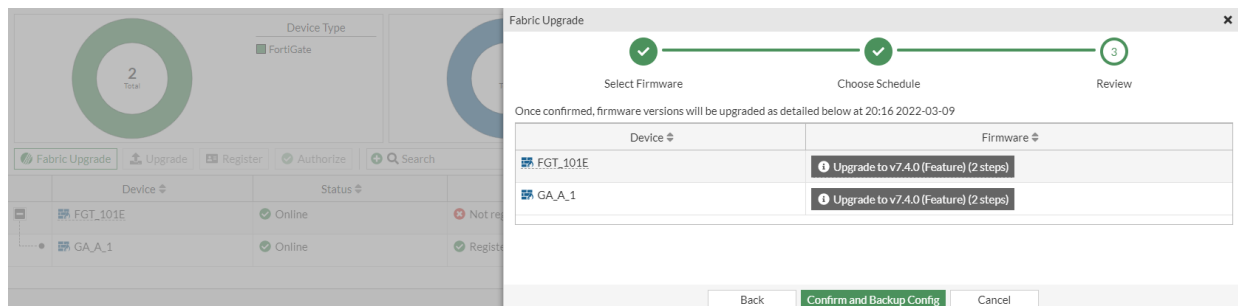

The *Upgrade Status* for both FortiGates indicated when the scheduled upgrade will take place. In this example, the first upgrade in the path is to version 7.2.2. The FortiGates will reboot and then upgrade to 7.4.0 as per the upgrade path.

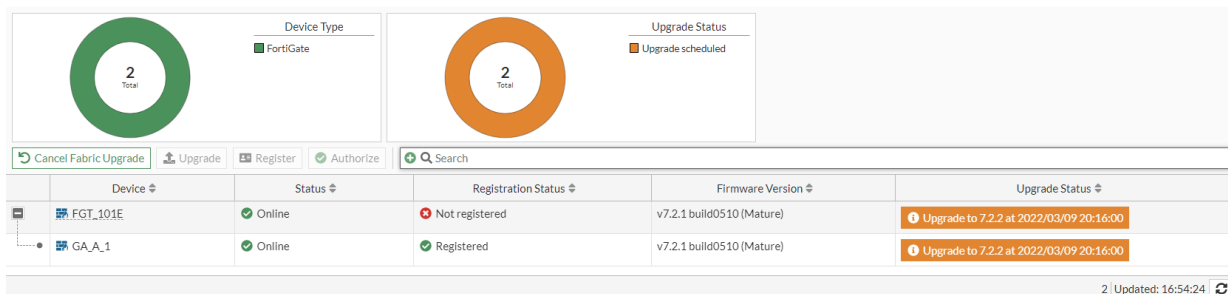

Once the upgrades are complete and both FortiGates are running the desired firmware (7.4.0), the *Upgrade Status* changes to *Up to date*.

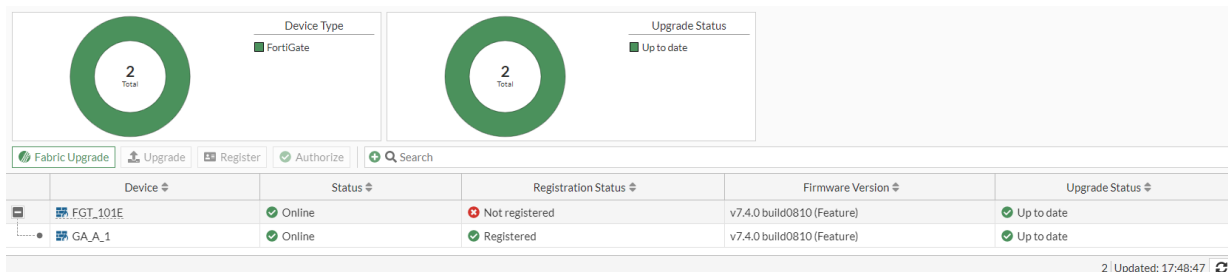

## CLI commands

The following options are available in `execute federated-upgrade <option>`:

| Option                  | Description                                         |
|-------------------------|-----------------------------------------------------|
| <code>cancel</code>     | Cancel the currently configured upgrade.            |
| <code>initialize</code> | Set up a federated upgrade.                         |
| <code>status</code>     | Show the current status of a federated upgrade.     |
| <code>restart</code>    | Restart the currently configured federated upgrade. |



The `config system federated-upgrade` command is read-only. Attempting to configure federated upgrade using the `config` command will show the following error message:

Federated upgrade cannot be configured directly.  
Please use 'execute federated-upgrade ...' to configure.

## Enabling automatic firmware updates

The `auto-firmware-upgrade` option can be enabled to automatically update firmware based on the FortiGuard upgrade path. When enabled, the FortiGate will look for an upgrade path and perform an upgrade at a time within the time period specified by the administrator. The upgrade will only be performed on a patch within the same major release version.

```

config system fortiguard
    set auto-firmware-upgrade {enable | disable}
    set auto-firmware-upgrade-day {sunday monday tuesday wednesday thursday friday saturday}
    set auto-firmware-upgrade-start-hour <integer>
    set auto-firmware-upgrade-end-hour <integer>
end

```

|                                                                                                  |                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| auto-firmware-upgrade<br>{enable   disable}                                                      | Enable/disable automatic patch-level firmware upgrade from FortiGuard.                                                                                                                                                                                                                                                  |
| auto-firmware-upgrade-day<br>{sunday monday<br>tuesday wednesday<br>thursday friday<br>saturday} | Enter the allowed day or days of the week to start the automatic patch-level firmware upgrade from FortiGuard.                                                                                                                                                                                                          |
| auto-firmware-upgrade-<br>start-hour <integer>                                                   | Set the start time of the designated time window for the automatic patch-level firmware upgrade from FortiGuard (in hours, 0 - 23, default = 2). The actual upgrade time is randomly selected in the time window.                                                                                                       |
| auto-firmware-upgrade-<br>end-hour <integer>                                                     | Set the end time of the designated time window for the automatic patch-level firmware upgrade from FortiGuard (in hours, 0 - 23, default = 4). When this value it is smaller than the start time, it will be treated as the same time in the next day. The actual upgrade time is randomly selected in the time window. |

## Example

### To configure automatic firmware upgrades using the default schedule:

```

config system fortiguard
    set auto-firmware-upgrade enable
    set auto-firmware-upgrade-day sunday monday tuesday wednesday thursday friday saturday
    set auto-firmware-upgrade-start-hour 2
    set auto-firmware-upgrade-end-hour 4
end

```

### Sample event log after enabling this option with a certain schedule:

```

date=2022-07-12 time=10:41:52 eventtime=1657647712247415816 tz="-0700" logid="0100032263"
type="event" subtype="system" level="notice" vd="vdom1" logdesc="Automatic firmware upgrade
schedule changed" user="system" msg="System patch-level auto-upgrade scheduled at local time
Wed Jul 13 02:18:36 2022, looking for patch-level upgrade only."

```

### Performing the upgrade:

At the scheduled upgrade time, the FortiGate (forticld daemon) will only try to upgrade to the latest patch in the same <major.minor> version in the image upgrade matrix.

For example, the following new releases are available in FortiGuard (fictitious build numbers are used to demonstrate the functionality of this feature):

```

FGTPlatform=FG201E|FGTCurrVersion=7.0.6|FGTCurrBuildNum=0366|FGTUpgVersion=7.2.2|FGTUpgBuild
Num=1602|BaselineVersion=DISABLE

```

```

FGTPlatform=FG201E|FGTCurrVersion=7.2.1|FGTCurrBuildNum=1224|FGTUpgVersion=7.2.2|FGTUpgBuild
Num=1602|BaselineVersion=DISABLE

```

**Sample log event log after a successful upgrade:**

```
date=2022-06-22 time=11:16:38 eventtime=1655921798859111708 tz="-0700" logid="0100032202"
type="event" subtype="system" level="critical" vd="root" logdesc="Image restored"
ui="forticldd" action="restore-image" status="success" msg="User restored the image from
forticldd (v7.2.1,build1224 -> v7.2.2,build1602) "
```

**Other scenarios**

If `auto-firmware-upgrade` is changed to be disabled, the FortiGate (forticldd daemon) will not perform a scheduled upgrade.

**Sample event log after disabling automatic firmware upgrades:**

```
date=2022-06-22 time=10:31:25 eventtime=1655919085881435255 tz="-0700" logid="0100032263"
type="event" subtype="system" level="notice" vd="root" logdesc="Automatic firmware upgrade
schedule changed" user="system" msg="System patch-level auto-upgrade disabled."
```

If there is no upgrade image on the server, the forticldd daemon will reschedule the update to the next available time.

**Sample debug output:**


```
[874] sch_auto_update_done: No newer build found in the current major release.
[805] fds_schedule_auto_fmwr_upgrade: trace
[844] fds_schedule_auto_fmwr_upgrade: Automatic firmware upgrade is scheduled at (Local) Wed
Jun 1 15:52:30 2022
```

**Sample event log after rescheduling the update:**

```
date=2022-06-22 time=12:31:17 eventtime=1655926278277347987 tz="-0700" logid="0100032263"
type="event" subtype="system" level="notice" vd="root" logdesc="Automatic firmware upgrade
schedule changed" user="system" msg="System patch-level auto-upgrade scheduled at local time
Thu Jun 23 12:40:21 2022, looking for patch-level upgrade only."
```


**Authorizing devices**

If there are any notifications in the top banner dropdown for unauthorized devices or devices that require authorization, clicking the notification redirects the user to the *System > Fabric Management* page. In this example, two devices require authorization.

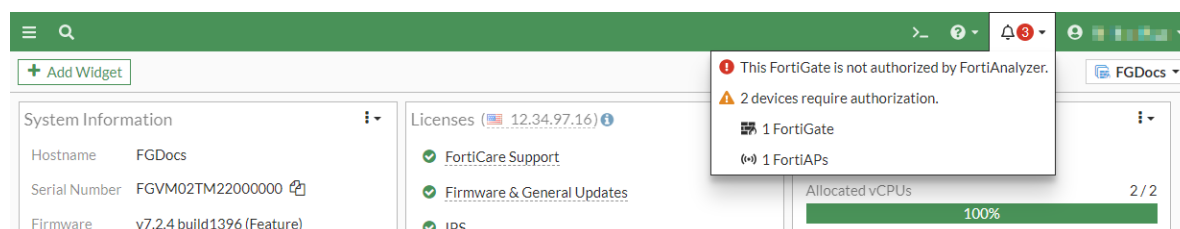


On the *Fabric Management* page, the unauthorized devices (a downstream FortiGate and a FortiAP) are grayed out, and their status is *Unauthorized*.



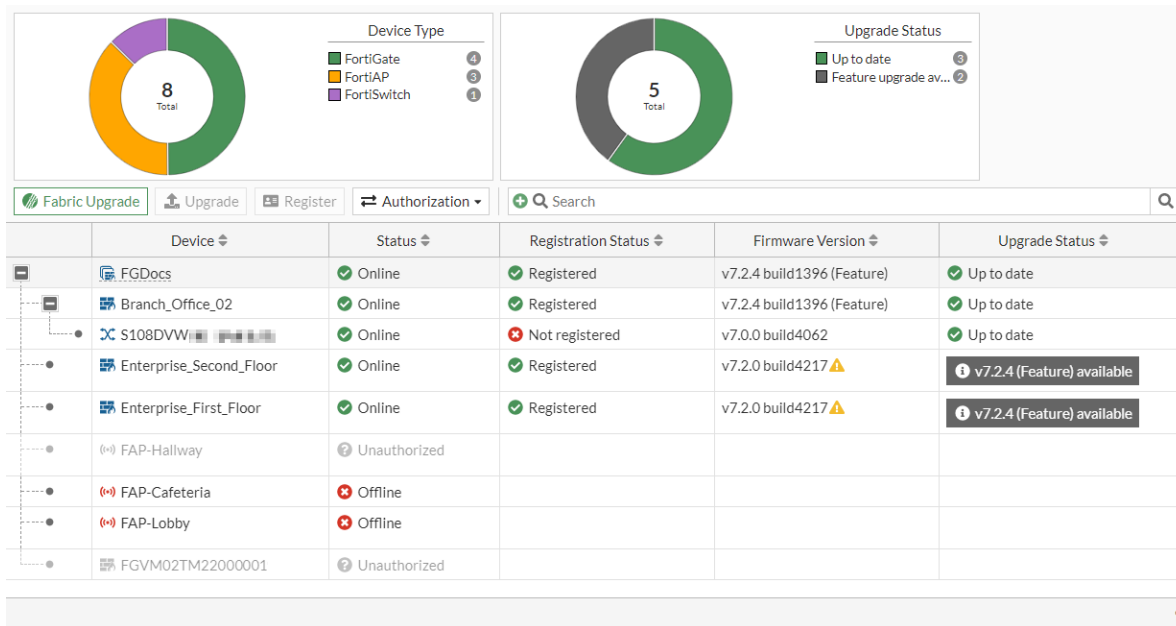


To authorize a Security Fabric device from the Fabric Management page:


1. Go to *System > Fabric Management*, and select an unauthorized device.
2. Click *Authorization > Authorize* (below the donut charts), or right-click and select *Authorization > Authorize*.

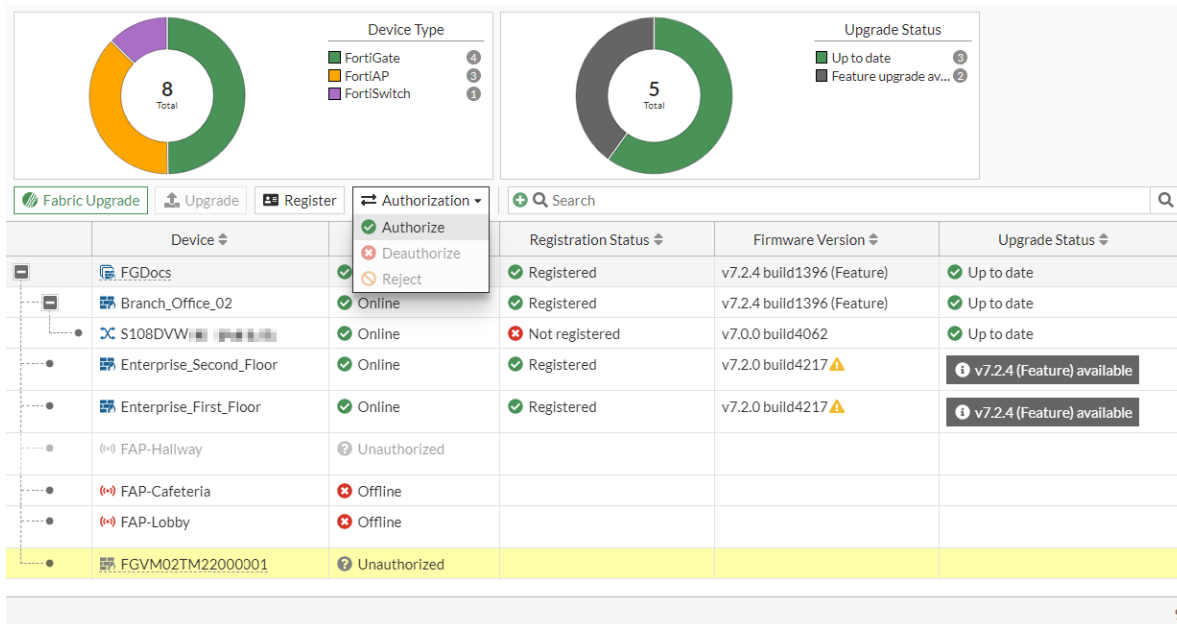

A notification appears in the bottom-right corner once the device is authorized.

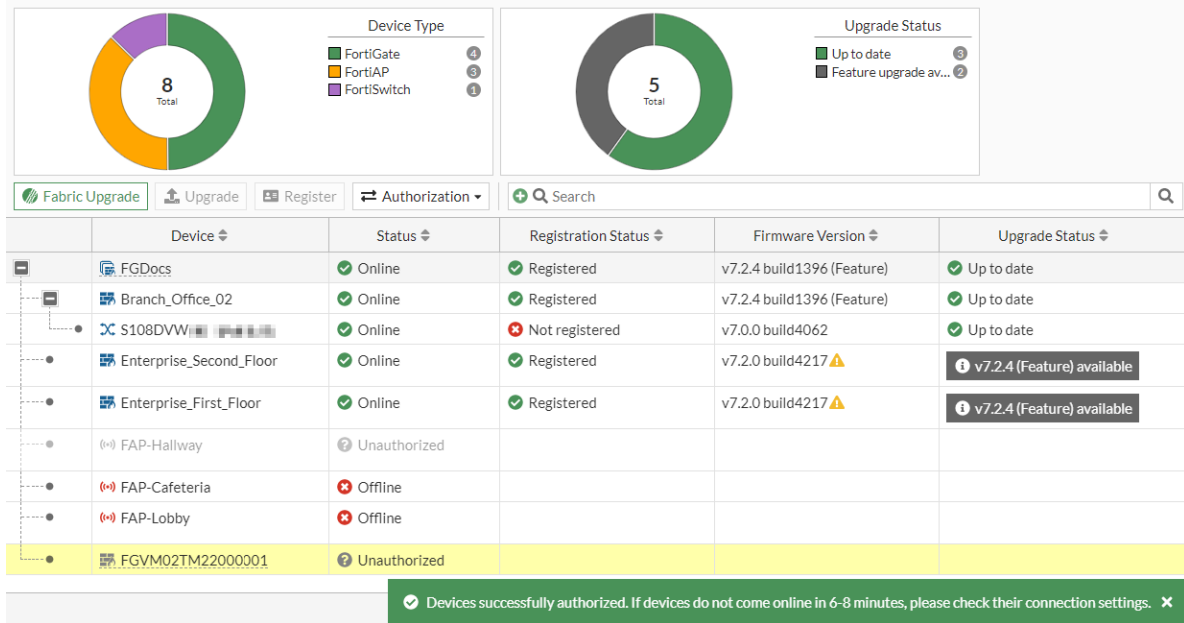

3. Click the subsequent notification to refresh the page. The device's status is now **Online**.

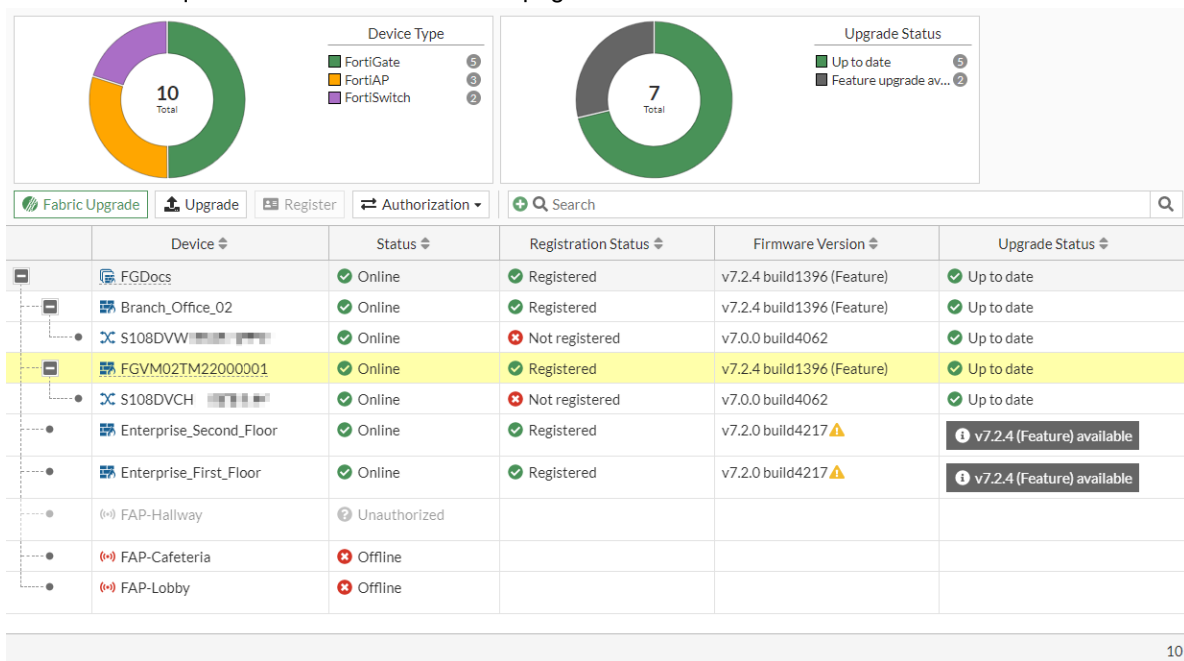

### To deauthorize a Security Fabric device from the Fabric Management page:

1. Go to the *System > Fabric Management* page, and select a device.
2. Click *Authorization > Deauthorize* (below the donut charts), or right-click and select *Authorization > Deauthorize*.

The screenshot displays the FortiGate Fabric Management interface. At the top, there are two donut charts: 'Device Type' showing 10 total devices (5 FortiGate, 3 FortiAP, 2 FortiSwitch) and 'Upgrade Status' showing 7 total devices (Up to date, Feature upgrade available). Below the charts is a navigation bar with tabs: Fabric Upgrade, Upgrade, Register, and Authorization. A search bar is also present. The main table lists devices with columns for Device, Status, Registration Status, Firmware Version, and Upgrade Status. A context menu is open over the device 'FGVM02TM22000001', showing options: Upgrade, Register, Authorization, Authorize, Deauthorize, and Reject. The 'Deauthorize' option is highlighted. The table also shows other devices like 'Branch\_Office\_02', 'S108DVW', 'S108DVCH', 'Enterprise\_Second\_Floor', 'Enterprise\_First\_Floor', 'FAP-Hallway', 'FAP-Cafeteria', and 'FAP-Lobby'.

| Device                  | Status       | Registration Status | Firmware Version           | Upgrade Status             |
|-------------------------|--------------|---------------------|----------------------------|----------------------------|
| FGDocs                  | Online       | Registered          | v7.2.4 build1396 (Feature) | Up to date                 |
| Branch_Office_02        | Online       | Registered          | v7.2.4 build1396 (Feature) | Up to date                 |
| S108DVW                 | Online       | Not registered      | v7.0.0 build4062           | Up to date                 |
| FGVM02TM22000001        | Online       | Registered          | v7.2.4 build1396 (Feature) | Up to date                 |
| S108DVCH                | Online       | Registered          | v7.0.0 build4062           | Up to date                 |
| Enterprise_Second_Floor | Online       | Registered          | v7.2.0 build4217           | v7.2.4 (Feature) available |
| Enterprise_First_Floor  | Online       | Registered          | v7.2.0 build4217           | v7.2.4 (Feature) available |
| FAP-Hallway             | Unauthorized |                     |                            |                            |
| FAP-Cafeteria           | Offline      |                     |                            |                            |
| FAP-Lobby               | Offline      |                     |                            |                            |

3. Click the subsequent notification to refresh the page.

## Firmware upgrade notifications


FortiGates with a firmware upgrade license that are connected to FortiGuard display upgrade notifications in the setup window, banner, and FortiGuard menu. The firmware notifications are enabled by default.

### To configure firmware notifications in the CLI:


```
config system global
    set gui-firmware-upgrade-warning {enable | disable}
end
```

### To use the firmware upgrade notifications in the GUI:

1. When you log in to FortiGate, the *FortiGate Setup* window includes an *Upgrade firmware* step. Click *Begin*.

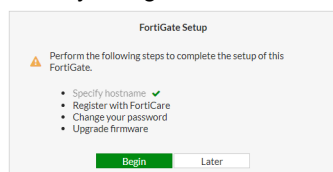

- Follow the steps in the *Setup Progress*, then click *Review Firmware Upgrade*.

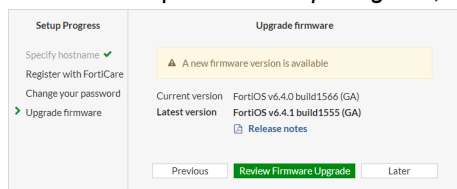

The *System > Fabric Management* page opens.

- Notifications appear below the *Notification* icon in the banner, and beside *Fabric Management* in the tree menu.

## Downloading a firmware image

Firmware images for all FortiGate units are available on the [Fortinet Customer Service & Support](#) website.

### To download firmware:

- Log into the support site with your user name and password.
- Go to *Support > Firmware Download*.  
A list of Release Notes is shown. If you have not already done so, download and review the Release Notes for the firmware version that you are upgrading your FortiGate unit to.
- Select the *Download* tab.
- Navigate to the folder for the firmware version that you are upgrading to.
- Find your device model on the list. FortiWiFi devices have file names that start with *FWF*.
- Click *HTTPS* in the far right column to download the firmware image to your computer.



Firmware can also be downloaded using FTP, but as FTP is not an encrypted file transferring protocol, HTTPS downloading is recommended.



Security levels are pre-configured on the BIOS. See [BIOS-level signature and file integrity checking on page 2549](#) and [Real-time file system integrity checking on page 2553](#) for more information.

## Testing a firmware version

The integrity of firmware images downloaded from Fortinet's support portal can be verified using a file checksum. A file checksum that does not match the expected value indicates a corrupt file. The corruption could be caused by errors in transfer or by file modification. A list of expected checksum values for each build of released code is available on Fortinet's support portal.

Image integrity is also verified when the FortiGate is booting up. This integrity check is done through a cyclic redundancy check (CRC). If the CRC fails, the FortiGate unit will encounter an error during the boot process.

Firmware images are signed and the signature is attached to the code as it is built. When upgrading an image, the running OS will generate a signature and compare it with the signature attached to the image. If the signatures do not match, the new OS will not load.

## Testing before installation

FortiOS lets you test a new firmware image by installing the firmware image from a system reboot and saving it to system memory. After completing this procedure, the FortiGate unit operates using the new firmware image with the current configuration. The new firmware image is not permanently installed. The next time the FortiGate unit restarts, it operates with the originally installed firmware image using the current configuration. If the new firmware image operates successfully, you can install it permanently using the procedure explained in [Upgrading individual device firmware](#).

For this procedure, you must install a TFTP server that you can connect to from the FortiGate internal interface. The TFTP server should be on the same subnet as the internal interface.

### To test the new firmware version:

1. Connect to the CLI using an RJ-45 to USB (or DB-9) or null modem cable.
2. Ensure that the TFTP server is running.
3. Copy the new firmware image file to the root directory on the TFTP server.
4. Ensure that the FortiGate unit can connect to the TFTP server using the `execute ping` command.
5. Restart the FortiGate unit: `execute reboot`. The following message is shown:  

```
This operation will reboot the system!
Do you want to continue? (y/n)
```
6. Type `y`. As the FortiGate unit starts, a series of system startup messages appears.
7. When the following messages appears:  

```
Press any key to display configuration menu.....
```

 Immediately press any key to interrupt the system startup.  
 You have only three seconds to press any key. If you do not press a key during this time, the FortiGate will reboot, and you will have to log in and repeat the `execute reboot` command.  
 If you successfully interrupt the startup process, the following messages appears:  

```
[G]: Get firmware image from TFTP server.
[F]: Format boot device.
[B]: Boot with backup firmware and set as default
[C]: Configuration and information
[Q]: Quit menu and continue to boot with default firmware.
[H]: Display this list of options.
Enter G, F, Q, or H:
```
8. Type `G` to get the new firmware image from the TFTP server. The following message appears: `Enter TFTP server address [192.168.1.168]:`
9. Type the address of the TFTP server, then press `Enter`. The following message appears: `Enter Local Address [192.168.1.188]:`
10. Type the IP address of the FortiGate unit to connect to the TFTP server.



The IP address must be on the same network as the TFTP server.  
 Make sure that you do not enter the IP address of another device on this network.

The following message appears:

```
Enter File Name [image.out]:
```

11. Enter the firmware image file name then press `Enter`. The TFTP server uploads the firmware image file to the FortiGate unit and the following message appears:  

```
Save as Default firmware/Backup firmware/Run image without saving: [D/B/R]
```

12. Type *R*. The FortiGate image is installed to system memory and the FortiGate unit starts running the new firmware image, but with its current configuration.

Test the new firmware image as required. When done testing, reboot the FortiGate unit, and the it will resume using the firmware that was running before you installed the test firmware.

## Installing firmware from system reboot

In the event that the firmware upgrade does not load properly and the FortiGate unit will not boot, or continuously reboots, it is best to perform a fresh install of the firmware from a reboot using the CLI. If configured, the firmware can also be automatically installed from a USB drive; see [Restoring from a USB drive on page 2266](#) for details.

This procedure installs a firmware image and resets the FortiGate unit to factory default settings. You can use this procedure to upgrade to a new firmware version, revert to an older firmware version, or re-install the current firmware.

To use this procedure, you must connect to the CLI using the FortiGate console port and a RJ-45 to USB (or DB-9), or null modem cable. You must also install a TFTP server that you can connect to from the FortiGate internal interface. The TFTP server should be on the same subnet as the internal interface.

Before beginning this procedure, ensure that you backup the FortiGate unit configuration. See [Configuration backups on page 67](#) for details. If you are reverting to a previous FortiOS version, you might not be able to restore the previous configuration from the backup configuration file.

Installing firmware replaces your current antivirus and attack definitions, along with the definitions included with the firmware release you are installing. After you install new firmware, make sure that antivirus and attack definitions are up to date.

### To install firmware from a system reboot:

1. Connect to the CLI using the RJ-45 to USB (or DB-9) or null modem cable.
2. Ensure that the TFTP server is running.
3. Copy the new firmware image file to the root directory of the TFTP server.
4. Ensure that the FortiGate unit can connect to the TFTP server using the `execute ping` command.
5. Restart the FortiGate unit: `execute reboot`. The following message is shown:
 

```
This operation will reboot the system!
Do you want to continue? (y/n)
```
6. Type *y*. As the FortiGate unit starts, a series of system startup messages appears.
7. When the following messages appears:

```
Press any key to display configuration menu.....
```

Immediately press any key to interrupt the system startup.

You have only three seconds to press any key. If you do not press a key during this time, the FortiGate will reboot, and you will have to log in and repeat the `execute reboot` command.

If you successfully interrupt the startup process, the following messages appears:

```
[C]: Configure TFTP parameters.
[R]: Review TFTP parameters.
[T]: Initiate TFTP firmware transfer.
[F]: Format boot device.
[I]: System information.
[B]: Boot with backup firmware and set as default.
[Q]: Quit menu and continue to boot.
[H]: Display this list of options.
```

Enter C,R,T,F,I,B,Q, or H:

8. If necessary, type **C** to configure the TFTP parameters, then type **Q** to return to the previous menu:

```
[P]: Set firmware download port.
[D]: Set DHCP mode.
[I]: Set local IP address.
[S]: Set local subnet mask.
[G]: Set local gateway.
[V]: Set local VLAN ID.
[T]: Set remote TFTP server IP address.
[F]: Set firmware file name.
[E]: Reset TFTP parameters to factory defaults.
[R]: Review TFTP parameters.
[N]: Diagnose networking(ping).
[Q]: Quit this menu.
[H]: Display this list of options.
```

Enter P,D,I,S,G,V,T,F,E,R,N,Q, or H:



The IP address must be on the same network as the TFTP server.  
Make sure that you do not enter the IP address of another device on this network.

---

9. Type **T** get the new firmware image from the TFTP server.  
The FortiGate unit loads the firmware.
10. Save the firmware as the default (**D**) or backup (**B**) firmware image, or run the image without saving it (**R**).  
The FortiGate unit installs the new firmware image and restarts. The installation might take a few minutes to complete.

## Factory resetting the FortiGate when the password is lost

For security reasons, users who lose their password must have physical access to the FortiGate and perform a TFTP restore of the firmware in order to regain access to the FortiGate. They will not have access to the current running configurations through the FortiGate. Configurations will be reset to the factory default once the firmware is reloaded. This process requires a connection to the TFTP server where the firmware image is stored.

### To restore the FortiGate:



This procedure may vary depending on whether the FortiGate is a physical appliance or a VM.

---

1. Connect to the console port.
2. Ensure you can see the FortiGate prompt from the console terminal.
3. Physically power off the device, then power on the device.
4. Boot into the boot menu by pressing a key when prompted.
5. Follow the steps in the [previous procedure](#) to reload the firmware. Configurations will be reset to the factory default

once the firmware is installed.

6. Once the firmware reload is complete, log in to the FortiGate to reconfigure the settings.

It is recommended to preform regular configuration backups and to store the backup on a secure server (see [Configuration changes](#) in the FortiOS Best Practices for more details). In the event that a password is lost, the configuration backup can be used to restore a configuration after the user completes the firmware installation process. This assumes the user knows the password from the previous backed up configuration. If the user does not know the password, they can still reload the configuration if it is not encrypted.

The following procedure describes how to edit an unencrypted backup configuration file so that the administrator password can be replaced before restoring the file.

#### To edit the configuration file when a password is lost:

1. Locate the line in the configuration file where `config system admin` is defined.
2. Edit an administrator account with an `accprofile` set to `super_admin`. This will ensure you can log in and perform any operations afterward.
3. Locate the line with `set password ENC xxxxxx`, and edit it to set a temporary new password in clear text (such as `set password cleartextpassword`).
4. Reload the configuration file.
5. Log in to the console using the temporary password, and then change the password.



The configuration backup allows the administrator to confirm the firmware that the FortiGate is running, so the same firmware can be restored. This information is listed in the first line of the configuration: `config-version=FGT61F-7.2.4-FW-build1396-230131:opmode=0:vdom=0:user=admin.`

## Restoring from a USB drive

The FortiGate firmware can be manually restored from a USB drive, or installed automatically from a USB drive after a reboot.

#### To restore the firmware from a USB drive:

1. Copy the firmware file to the root directory on the USB drive.
2. Connect the USB drive to the USB port of the FortiGate device.
3. Connect to the FortiGate CLI using the RJ-45 to USB (or DB-9) or null modem cable.
4. Enter the following command:

```
execute restore image usb <filename>
```

The FortiGate unit responds with the following message:

```
This operation will replace the current firmware version! Do you want to continue?
(y/n)
```

5. Type `y`. The FortiGate unit restores the firmware and restarts. This process takes a few minutes.
6. Update the antivirus and attack definitions:

```
execute update-now
```



**To install firmware automatically from a USB drive:**

1. Go to *System > Settings*.
2. In the *Start Up Settings* section, enable *Detect firmware* and enter the name of the firmware file.
3. Copy the firmware file to the root directory on the USB drive.
4. Connect the USB drive to the USB port of the FortiGate device.
5. Reboot the FortiGate device.

## Using controlled upgrades

Using a controlled upgrade, you can upload a new version of the FortiOS firmware to a separate partition in the FortiGate memory for later upgrade. The FortiGate unit can be configured so that when it is rebooted, it will automatically load the new firmware. Using this option, you can stage multiple FortiGate units to upgrade simultaneously using FortiManager or a script.

**To load the firmware for later installation:**

```
execute restore secondary-image {ftp | tftp | usb} <filename_str>
```

**To set the FortiGate unit so that when it reboots, the new firmware is loaded:**

```
execute set-next-reboot {primary | secondary}
```

where {primary | secondary} is the partition with the preloaded firmware.

## Downgrading individual device firmware



Downgrading the firmware is not recommended.


---

This procedure downgrades the FortiGate to a previous firmware version. After downgrading, you may be unable to restore the backup configuration.

**To downgrade to a previous firmware version in the GUI:**

1. Log into the FortiGate GUI as the admin administrative user.
2. Go to *System > Fabric Management*. The *Firmware Version* column displays the version and either *(Feature)* or *(Mature)*.

3. Select the FortiGate, and click *Upgrade*. The *FortiGate Upgrade* pane opens.

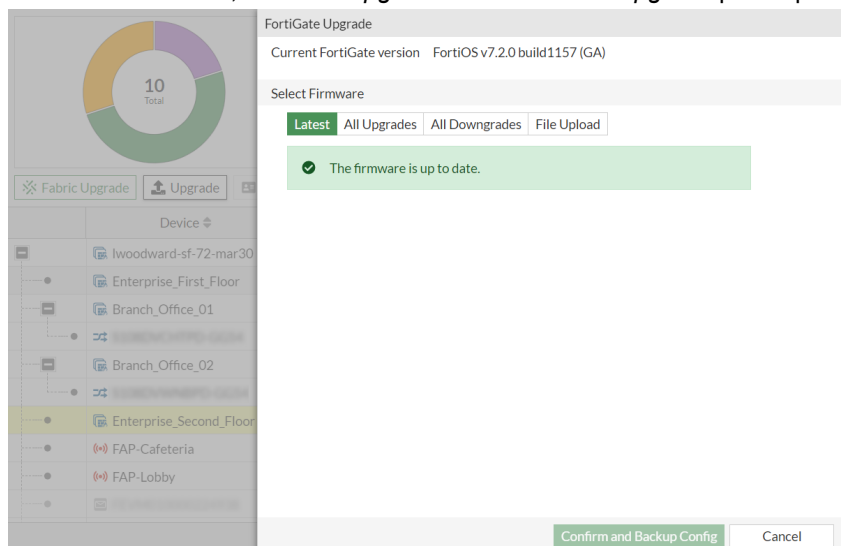

4. Click one of the following tabs to select a downgrade method:

#### *All Downgrades*


Click the *All Downgrades* tab to view and select all firmware versions that are available from FortiGuard for downgrade.

#### *File Upload*

Click the *File Upload* tab to upload a firmware file that you previously downloaded from the [Fortinet Customer Service & Support](#) website.

- See [Downloading a firmware image on page 2262](#).

In this example, the *All Downgrades* tab is selected.

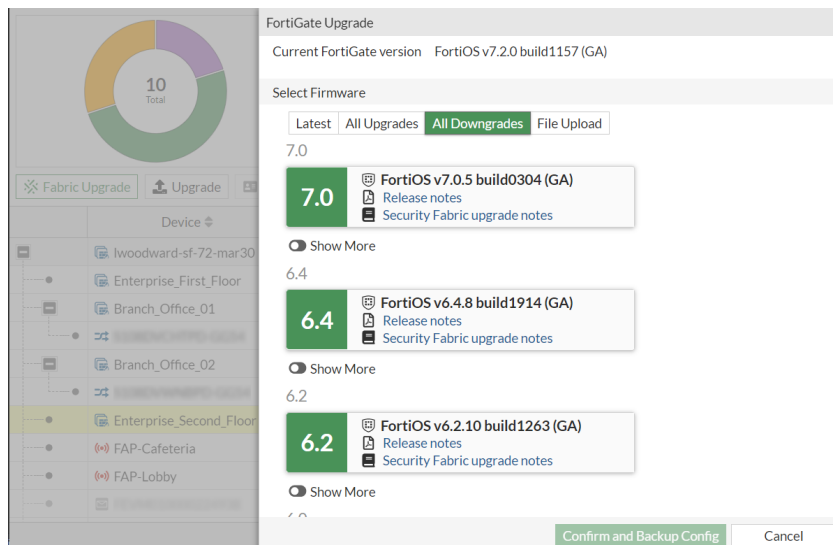

5. Select a firmware version and click *Confirm and Backup Config*. A warning message is displayed.

6. Click *Continue* to continue with the downgrade.

The FortiGate unit backs up the current configuration to the management computer, uploads the firmware image file, downgrades to the firmware version, and restarts. This process takes a few minutes.

**To downgrade to a previous firmware version in the CLI:**

1. Make sure that the TFTP server is running.
2. Copy the new firmware image file to the root directory of the TFTP server.
3. Log into the CLI.
4. Ping the TFTP server to ensure that the FortiGate can connect to it:  

```
execute ping <tftp_ipv4>
```
5. Enter the following command to copy the firmware image from the TFTP server to the FortiGate unit:  

```
execute restore image tftp <filename> <tftp_ipv4>
```

The FortiGate unit responds with the message:

```
This operation will replace the current firmware version!
Do you want to continue? (y/n)
```
6. Type `y`. The FortiGate unit uploads the firmware image file, then a message similar to the following is shown:  

```
Get image from tftp server OK.
Check image OK.
This operation will downgrade the current firmware version!
Do you want to continue? (y/n)
```
7. Type `y`. The FortiGate unit downgrades to the old firmware version and restarts. This process takes a few minutes.
8. Reconnect to the CLI.
9. Update the antivirus and attack definitions:  

```
execute update-now
```

## Downloading the EOS support package for supported Fabric devices

FortiGates, FortiSwitches, FortiAPs, and FortiExtenders can download an EOS (end of support) package automatically from FortiGuard during the bootup process or by using manual commands. Based on the downloaded EOS package files, when a device passes the EOS date, a warning message is displayed in the device's tooltip. The device is also highlighted in the following GUI locations:

- *System > Firmware & Registration* page
- *Security Fabric > Physical Topology* and *Logical Topology* pages
- *Security Fabric > Security Rating* page
- *Dashboard > Status > Security Fabric* widget
- *Dashboard > Status > System Information* widget

## FortiGuard updates

The EOS packages can be downloaded automatically from FortiGuard, but they can also be downloaded manually.

**To manually download the EOS package from the FortiGuard server:**

```
# diagnose fortiguard-resources update <product>-end-of-support
```

| Product                  | Description                               |
|--------------------------|-------------------------------------------|
| fortigate-end-of-support | FortiGate product life cycle information. |


| Product                      | Description                                   |
|------------------------------|-----------------------------------------------|
| fortiswitch-end-of-support   | FortiSwitch product life cycle information.   |
| fortiap-end-of-support       | FortiAP product life cycle information.       |
| fortiextender-end-of-support | FortiExtender product life cycle information. |



In the event the EOS package files are not downloaded due to a connection issue, use `diag fortiguard-resources update <product>-end-of-support` to download the package files.


## GUI warnings

On the *System > Firmware & Registration* page, devices that have reached EOS are highlighted in red, and their *Status* is *EOS - Unable to upgrade*.

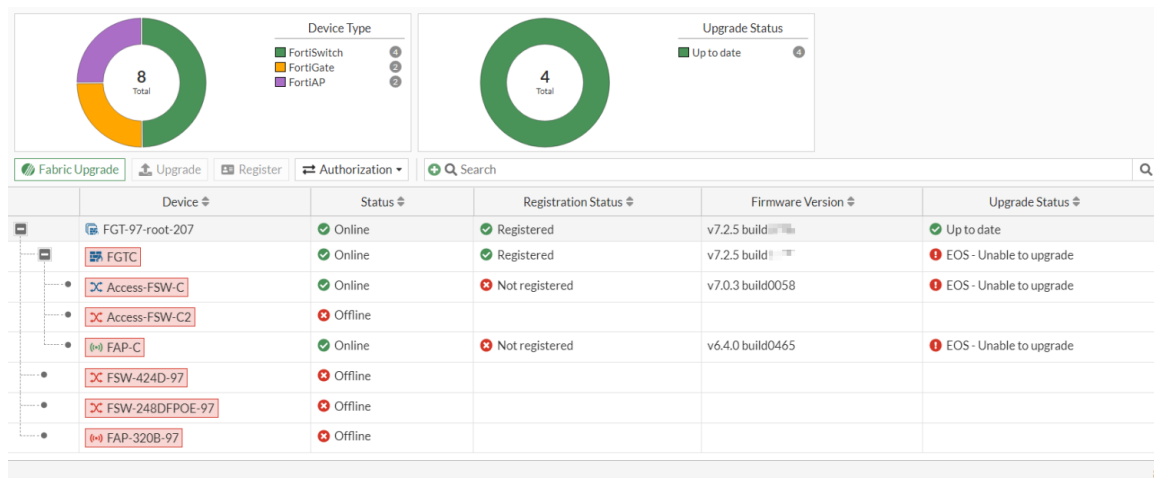


Hover over a device name to view the tooltip, which includes an EOS warning.


- Sample FortiGate tooltip:

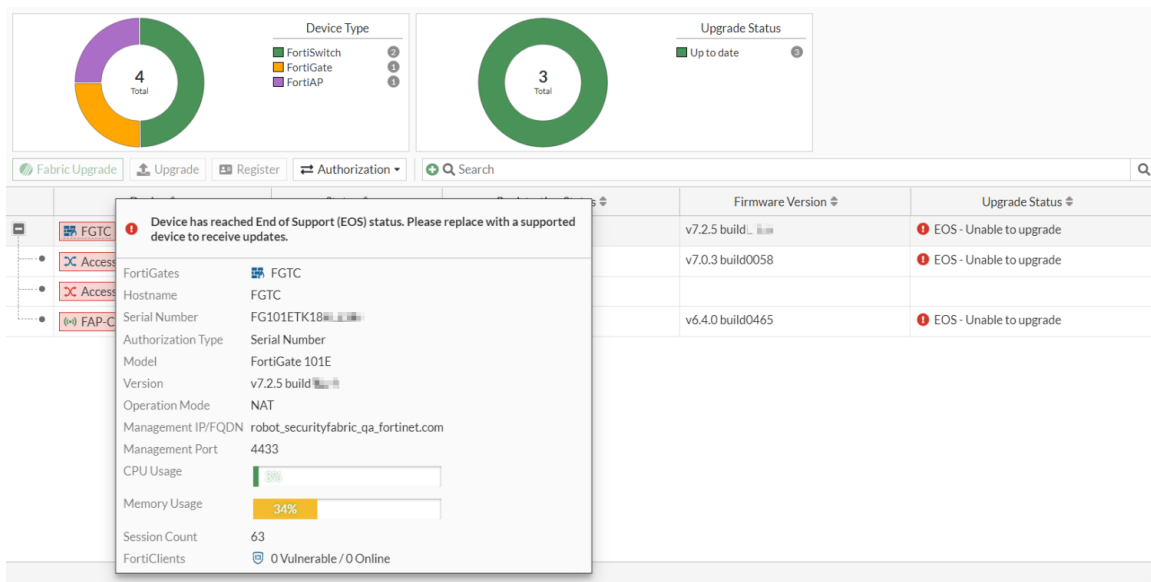

- Sample FortiSwitch tooltip:

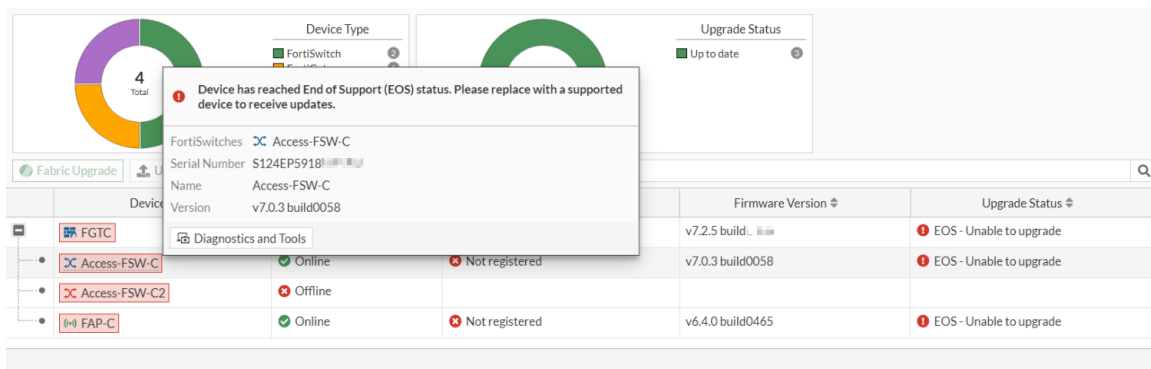


- Sample FortiAP tooltip:

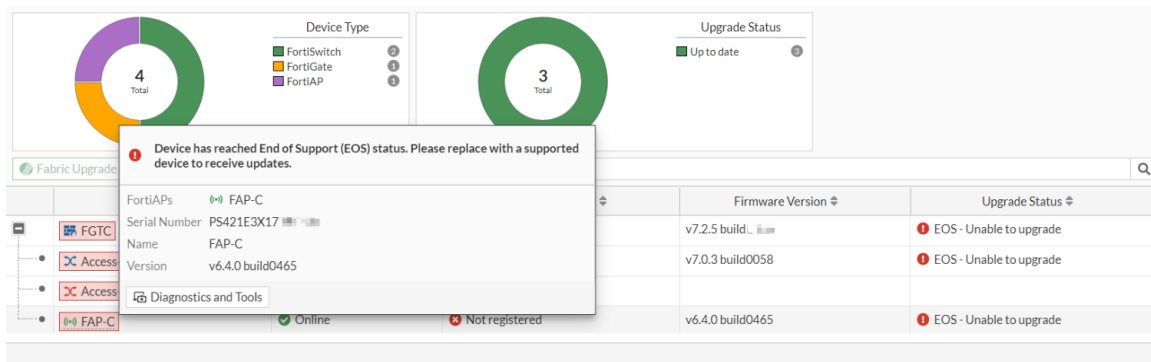


On the *Security Fabric > Physical Topology* and *Logical Topology* pages, devices that have reached EOS are highlighted in red. The device tooltips also include an EOS warning.


- Sample *Security Fabric > Physical Topology* page with tooltip:

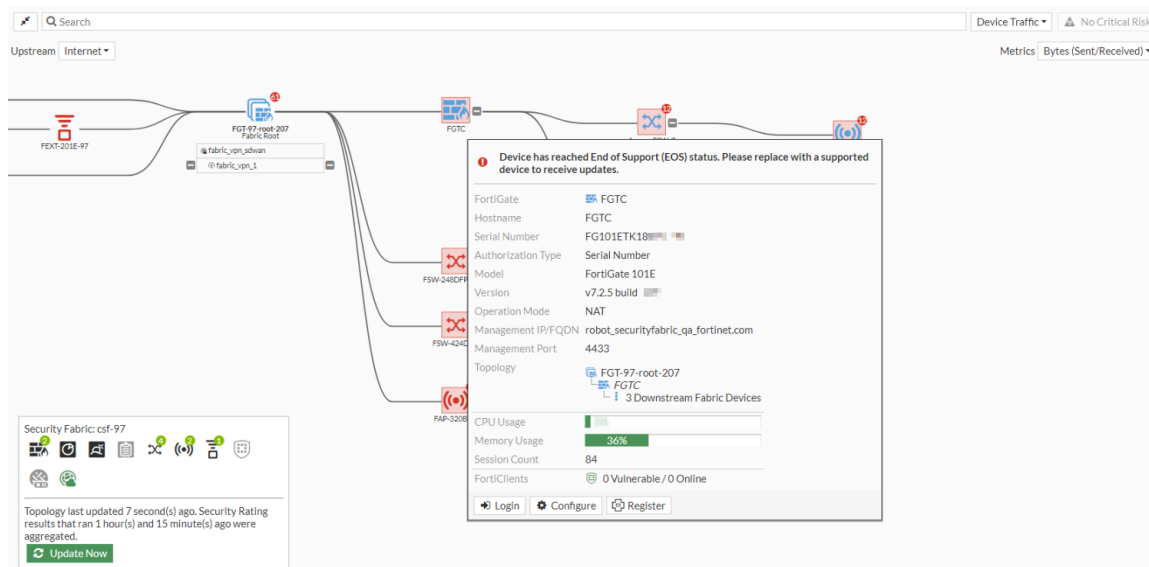


- Sample *Security Fabric > Logical Topology* page with tooltip:

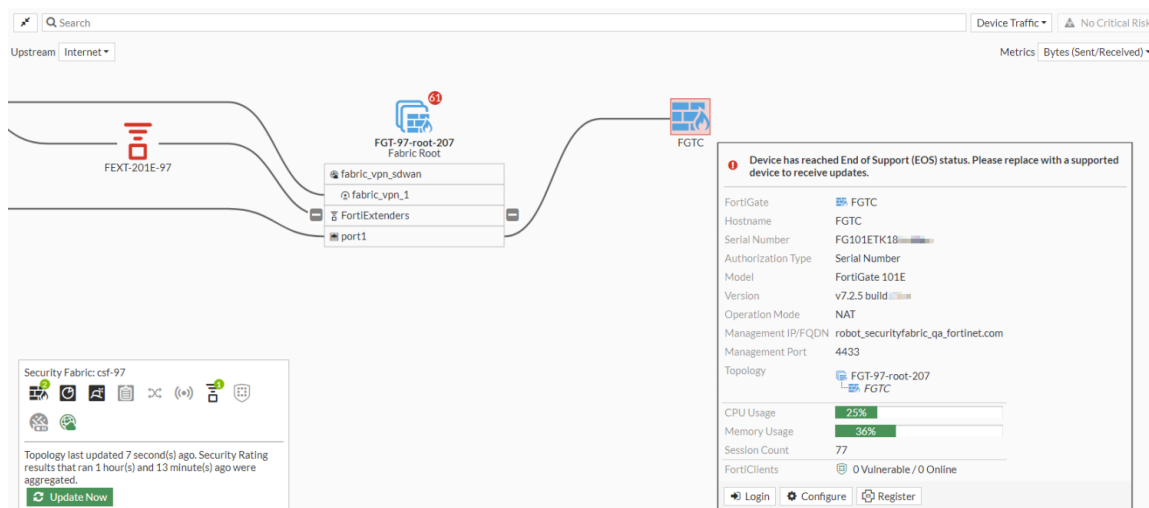

In the *Dashboard > Status > Security Fabric* widget, devices that have reached EOS are highlighted in red.

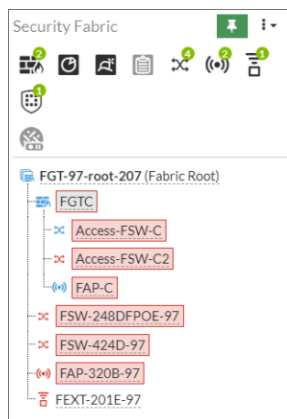

The *Dashboard > Status > System Information* widget includes a warning at the bottom of the widget that the *Device has reached EOS status*.

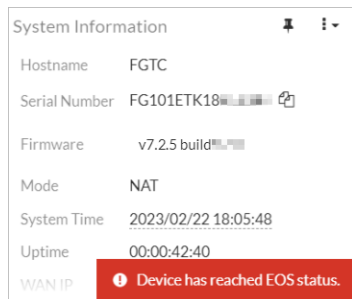

## Settings

The default administrator password should be configured immediately after the FortiGate is installed, see [Default administrator password on page 2273](#).

After that, there are several system settings that should also be configured in *System > Settings*:

- [Changing the host name on page 2275](#)
- [Setting the system time on page 2275](#)
- [Configuring ports on page 2279](#)
- [Setting the idle timeout time on page 2280](#)
- [Setting the password policy on page 2280](#)
- [Changing the view settings on page 2280](#)
- [Setting the administrator password retries and lockout time on page 2281](#)
- [TLS configuration on page 2281](#)
- [Controlling return path with auxiliary session on page 2282](#)
- [Email alerts on page 2286](#)
- [Using configuration save mode on page 2291](#)
- [Trusted platform module support on page 2292](#)
- [Configuring the persistency for a banned IP list on page 2294](#)
- [Using the default certificate for HTTPS administrative access on page 2295](#)

## Default administrator password

By default, your FortiGate has an administrator account set up with the username `admin` and no password. In order to prevent unauthorized access to the FortiGate, it is highly recommended that you add a password to this account.



Adding a password to the *admin* administrator is mandatory. You will be prompted to configure it the first time you log in to the FortiGate using that account, after a factory reset, and after a new image installation.

## To change the default password in the GUI:

1. Go to *System > Administrators*.
2. Edit the *admin* account.
3. Click *Change Password*.
4. If applicable, enter the current password in the *Old Password* field.
5. Enter a password in the *New Password* field, then enter it again in the *Confirm Password* field.

If the password does not conform to the password policy, an error is shown:

The screenshot shows the 'Edit Password' dialog box. At the top, a yellow warning banner states: 'Changing the password of the current administrator account will require you to login again.' Below this, the 'Username' field is set to 'admin'. The 'Old Password' field contains a single dot. The 'New Password' field contains eight dots and is highlighted with a red border. A red error message below it reads: 'The password must conform to the system password policy.' The 'Confirm Password' field is empty. Below the fields, a section titled 'Password must conform to the following rules:' lists two rules: 'Minimum length' and 'Minimum number of new characters'. At the bottom are 'OK' and 'Cancel' buttons.

If the password conforms to the password policy, no error message is shown:

This screenshot is identical to the previous one, but without the red error message. The 'New Password' field now contains eight dots, and the 'Confirm Password' field also contains eight dots. The 'OK' button is highlighted in green.

6. Click *OK*.

## To change the default password in the CLI:

```
config system admin
edit admin
    set password <old password> <old password>
New password must conform to the password policy enforced on this device:
minimum-length=8; the new password must have at least 1 unique character(s) which don't
exist in the old password.; must not be same as last two passwords

node_check_object fail! for password *

value parse error before '*'
Command fail. Return code -49

    set password <new password> <old password>
next
end
```





It is also recommended that you change the user name of this account; however, since you cannot change the user name of an account that is currently in use, a second administrator account must be created in order to do this.

## Changing the host name

The FortiGate host name is shown in the *Hostname* field in the *System Information* widget on a dashboard, as the command prompt in the CLI, as the SNMP system name, as the device name on FortiGate Cloud, and other places. If the FortiGate is in an HA cluster, use a unique host name to distinguish it from the other devices in the cluster.

An administrator requires *System > Configuration* read/write access to edit the host name. See [Administrator profiles on page 2241](#) for details.

### To change the host name in the GUI:

1. Go to *System > Settings*.
2. In the *Host name* field, enter a new name.
3. Click *Apply*.

### To change the host name in the CLI:

```
config system global
    set hostname <hostname>
end
```

## Setting the system time

You can either manually set the FortiOS system time, or configure the device to automatically keep its system time correct by synchronizing with a Network Time Protocol (NTP) or Precision Time Protocol (PTP) server.

Daylight savings time is enabled by default, and can only be configured in the CLI.



For many features to work, including scheduling, logging, and SSL-dependent features, the FortiOS system time must be accurate.

### To configure the date and time in the GUI:

1. Go to *System > Settings*.
2. In the *System Time* section, configure the following settings to either manually set the time or use an NTP server:

|                  |                                                                                          |
|------------------|------------------------------------------------------------------------------------------|
| <b>Time Zone</b> | Select a time zone from the list. This should be the time zone that the FortiGate is in. |
| <b>Set Time</b>  | Select either <i>NTP</i> , <i>PTP</i> , or <i>Manual settings</i> .                      |
| <b>NTP</b>       | To use an NTP server other than FortiGuard, the CLI must be used.                        |

|                                         |                                                                                                                                                                                                                                                                                       |
|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                         | In the <i>Sync interval</i> field, enter how often, in minutes, that the device synchronizes its time with the NTP server.                                                                                                                                                            |
| <b>PTP</b>                              | <ul style="list-style-type: none"> <li>• Set the <i>Mode</i> to <i>Multicast</i> or <i>Hybrid</i>.</li> <li>• Select the <i>Delay mechanism</i>: <i>E2E</i> or <i>P2P</i>.</li> <li>• Set the <i>Request interval</i>, in seconds.</li> <li>• Select the <i>Interface</i>.</li> </ul> |
| <b>Manual settings</b>                  | Manually enter the <i>Date</i> , and <i>Time</i> .                                                                                                                                                                                                                                    |
| <b>Setup device as local NTP server</b> | <p>Enable to configure the FortiGate as a local NTP server. This option is not available if <i>Set Time</i> is <i>PTP</i>.</p> <p>In the <i>Listen on Interfaces</i> field, set the interface or interfaces that the FortiGate will listen for NTP requests on.</p>                   |

3. Click *Apply*.

### To configure the date and time in the CLI:

1. Configure the timezone and daylight savings time:

```
config system global
    set timezone <integer>
    set dst {enable | disable}
end
```

2. Either manually configure the date and time, or configure an NTP or PTP server:

- Manual:

```
execute date <yyyy-mm-dd>
execute time <hh:mm:ss>
```

- NTP server:

```
config system ntp
    set ntpsync enable
    set type {fortiguard | custom}
    set syncinterval <integer>
    set source-ip <ip_address>
    set source-ip6 <ip6_address>
    set server-mode {enable | disable}
    set interface <interface>
    set authentication {enable | disable}
    set key-type {MD5 | SHA1}
    set key <password>
    set key-id <integer>
    config ntpserver
        edit <server_id>
            set server <ip_address or hostname>
            set ntpv3 {enable | disable}
            set authentication {enable | disable}
            set interface-select-method {auto | sdwan | specify}
            set key <password>
            set key-id <integer>
        next
    end
```

```

    end
end

```

- **PTP server:**

```

config system ptp
    set status enable
    set mode {multicast | hybrid}
    set delay-mechanism {E2E | P2P}
    set request-interval <integer>
    set interface <string>
end

```

## SHA-1 authentication support (for NTPv4)

SHA-1 authentication support allows the NTP client to verify that servers are known and trusted and not intruders masquerading (accidentally or intentionally) as legitimate servers. In cryptography, SHA-1 is a cryptographic hash algorithmic function.



SHA-1 authentication support is only available for NTP clients, not NTP servers.

### To configure authentication on a FortiGate NTP client:

```

config system ntp
    set ntpsync enable
    set type custom
    set syncinterval 1
    config ntpserver
        edit "883502"
            set server "10.1.100.11"
            set authentication enable
            set key *****
            set key-id 1
        next
    end
end

```

| Command                           | Description                                                             |
|-----------------------------------|-------------------------------------------------------------------------|
| authentication <enable   disable> | Enable/disable MD5/SHA1 authentication (default = disable).             |
| key <passwd>                      | Key for MD5/SHA1 authentication. Enter a password value.                |
| key-id <integer>                  | Key ID for authentication. Enter an integer value from 0 to 4294967295. |

### To confirm that NTP authentication is set up correctly:

```

# diagnose sys ntp status
synchronized: yes, ntpsync: enabled, server-mode: disabled
ipv4 server(10.1.100.11) 10.1.100.11 -- reachable(0xff) S:4 T:6 selected
server-version=4, stratum=3

```

If NTP authentication is set up correctly, the server version is equal to 4.

## PTPv2

Precision time protocol (PTP) is used to synchronize network clocks. It is best suited to situations where time accuracy is of the utmost importance, as it supports accuracy in the sub-microsecond range. Conversely, NTP accuracy is in the range of milliseconds or tens of milliseconds.


The following CLI commands are available:

```
config system ptp
    set status {enable | disable}
    set mode {multicast | hybrid}
    set delay-mechanism {E2E | P2P}
    set request-interval <integer>
    set interface <interface>
end
```

| Command                     | Description                                                                                                                 |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| status {enable   disable}   | Enable or disable the FortiGate system time by synchronizing with a PTP server (default = disable).                         |
| mode {multicast   hybrid}   | Use multicast or hybrid transmission (default = multicast).                                                                 |
| delay-mechanism {E2E   P2P} | Use end-to-end (E2E) or peer-to-peer (P2P) delay detection (default = E2E).                                                 |
| request-interval <integer>  | The logarithmic mean interval between the delay request messages sent by the client to the server in seconds (default = 1). |
| interface <interface>       | The interface that the PTP client will reply through.                                                                       |

### Sample configuration

This example uses the following topology:

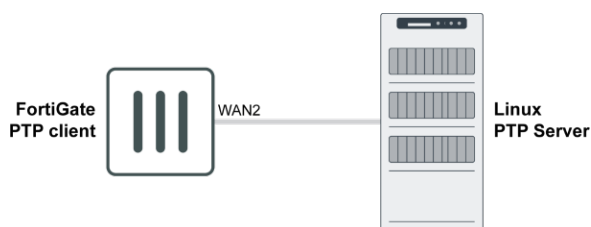

**To configure a FortiGate to act as a PTP client that synchronizes itself with a Linux PTP server:**

1. Enable debug messages:

```
# diagnose debug application ptpd -1
```

This command will provide details to debug the PTP communication with the server.

2. Check the system date:

```
# execute date
current date is: 2021-04-01
```

**3. Configure PTP in global mode:**

```
config system ptp
    set status enable
    set interface wan2
end
```

**4. Check the system date again after synchronization with the PTP server:**

```
# execute date
current date is: 2021-04-27
```

## Configuring ports

To improve security, the default ports for administrative connections to the FortiGate can be changed. Port numbers must be unique. If a conflict exists with a particular port, a warning message is shown.

When connecting to the FortiGate after a port has been changed, the port number be included, for example:  
`https://192.168.1.99:100.`

**To configure the ports in the GUI:**

1. Go to *System > Settings*.
2. In the *Administration Settings* section, set the HTTP, HTTPS, SSH, and Telnet ports.
3. Enable *Redirect to HTTPS* to prevent HTTP from being used by administrators.
4. Click *Apply*.

**To configure the ports in the CLI:**

```
config system global
    set admin-port <port>
    set admin-sport <port>
    set admin-https-redirect {enable | disable}
    set admin-ssh-port <port>
    set admin-telnet-port <port>
end
```

## Custom default service port range

The default service port range can be customized using the following CLI command:

```
config system global
    set default-service-source-port <port range>
end
```

Where `<port range>` is the new default service port range, that can have a minimum value of 0 and a maximum value up to 65535. The default value is 1 to 65535.



This change effects the TCP/UDP protocol.

---

## Setting the idle timeout time

The idle timeout period is the amount of time that an administrator will stay logged in to the GUI without any activity. This is to prevent someone from accessing the FortiGate if the management PC is left unattended. By default, it is set to five minutes.



A setting of higher than 15 minutes will have a negative effect on a security rating score. See [Security rating on page 2723](#) for more information.

### To change the idle timeout in the GUI:

1. Go to *System > Settings*.
2. In the *Administration Settings* section, set the *Idle timeout* to up to 480 minutes.
3. Click *Apply*.

### To change the idle timeout in the CLI:

```
config system global
    set admintimeout <1-480>
end
```

## Setting the password policy

A password policy can be created for administrators and IPsec pre-shared keys. See [Password policy on page 2232](#) for information.

## Changing the view settings

The view settings change the look and language of the FortiOS GUI.

### To change the view settings in the GUI:

1. Go to *System > Settings*.
2. In the *View Settings* section, configure the following settings:

|                          |                                                                                                                                |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Language</b>          | Set the GUI language: <i>English, French, Spanish, Portuguese, Japanese, Traditional Chinese, Simplified Chinese, Korean</i> . |
| <b>Theme</b>             | Set the theme color: <i>Jade, Neutrino, Mariner, Graphite, Melongene, Retro, Dark Matter, Onyx, or Eclipse</i> .               |
| <b>Date/Time Display</b> | Set the date and time to display using the FortiGate's or the browser's timezone.                                              |
| <b>NGFW Mode</b>         | Set the NGFW mode to either <i>Profile-based</i> (default) or <i>Policy-based</i> .                                            |
| <b>Central SNAT</b>      | Optionally, enable central SNAT. This option is only available in <i>Profile-based</i> mode.                                   |

### 3. Click *Apply*.

#### To change the view settings in the CLI:

```
config system global
    set language {english | french | spanish | portuguese | japanese | trach | simch |
korean}
    set gui-theme {jade | neutrino | mariner | graphite | melongene | retro | dark-matter |
onyx | eclipse}
    set gui-date-time-source {system | browser}
end

config system settings
    set ngfw-mode {profile-based | policy-based}
    set central-nat {enable | disable}
end
```

## Setting the administrator password retries and lockout time

By default, the number password retry attempts is set to three, allowing the administrator a maximum of three attempts at logging in to their account before they are locked out for a set amount of time (by default, 60 seconds).

The number of attempts and the default wait time before the administrator can try to enter a password again can be configured using the CLI.

A maximum of ten retry attempts can be configured, and the lockout period can be 1 to 2147483647 seconds (over 68 years). The higher the retry attempts, the higher the risk that someone might be able to guess the password.

#### To configure the lockout options:

```
config system global
    set admin-lockout-threshold <failed_attempts>
    set admin-lockout-duration <seconds>
end
```

For example, to set the number of retry attempts to 1, and the lockout time to 5 minutes:

```
config system global
    set admin-lockout-threshold 1
    set admin-lockout-duration 300
end
```



If the time span between the first failed log in attempt and the lockout threshold failed attempt is less than lockout time, the lockout will be triggered.

---

## TLS configuration

The minimum TLS version that is used for local out connections from the FortiGate can be configured in the CLI:

```
config system global
    set ssl-min-proto-version {SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2 | TLSv1-3}
end
```

By default, the minimum version is TLSv1.2. The FortiGate will try to negotiate a connection using the configured version or higher. If the server that FortiGate is connecting to does not support the version, then the connection will not be made. Some FortiCloud and FortiGuard services do not support TLSv1.3.

Minimum SSL/TLS versions can also be configured individually for the following settings, not all of which support TLSv1.3:

| Setting             | CLI                              |
|---------------------|----------------------------------|
| Email server        | config system email-server       |
| Certificate         | config vpn certificate setting   |
| FortiSandbox        | config system fortisandbox       |
| FortiGuard          | config log fortiguard setting    |
| FortiAnalyzer       | config log fortianalyzer setting |
| Syslog              | config log syslogd setting       |
| User Authentication | config user setting              |
| LDAP server         | config user ldap                 |
| POP3 server         | config user pop3                 |
| Exchange server     | config user exchange             |

A minimum (`ssl-min-proto-ver`) and a maximum (`ssl-max-proto-ver`) version can be configured for SSL VPN. See [TLS 1.3 support on page 2012](#)

## Controlling return path with auxiliary session

When multiple incoming or outgoing interfaces are used in ECMP or for load balancing, changes to routing, incoming, or return traffic interfaces impacts how an existing sessions handles the traffic. Auxiliary sessions can be used to handle these changes to traffic patterns.



- In FortiOS 6.0 and earlier, the auxiliary session feature is not supported.
- In FortiOS 6.2.0 to 6.2.2, the auxiliary session feature is permanently enabled.
- In FortiOS 6.2.3 and later, the auxiliary session feature is disabled by default, and can be enabled if required.

### To enable or disable the auxiliary session feature:


```
config system settings
    set auxiliary-session {enable | disable*}
end
```





When enabling auxiliary sessions, consider the impact of routing in both traffic directions. In topologies such as SD-WAN hub and spoke or ADVPN deployments, the symmetry of the return traffic is important for maintaining the stability of the session. It is expected that the spoke selects the outbound interface and path, and the other nodes obey and reply symmetrically. It is recommended to disable auxiliary in these scenarios, and others where incoming and return traffic symmetry is expected.

## Scenarios

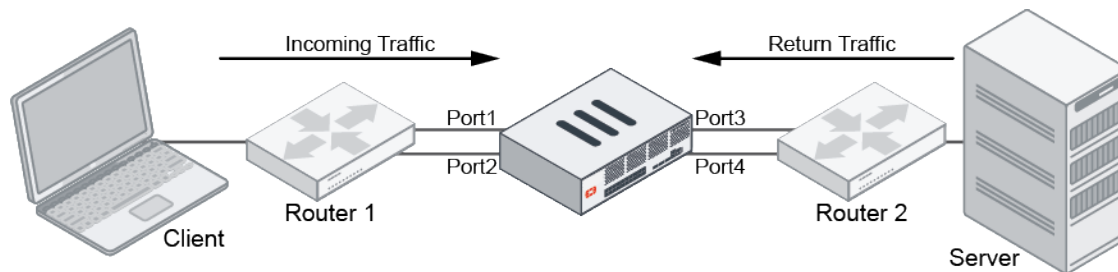

Incoming traffic is from the client to the server. Return traffic is from the server to the client.

### Scenario 1 - Return traffic returns on the original outgoing interface

In this scenario, a session is established between port1 and port3. When the return traffic hits port3:

#### Auxiliary sessions disabled:

The reply to the client egresses on the original incoming interface, port1. If policy routes or SD-WAN rules are configured, the next hop gateway is applied if the output device is the same as the original incoming interface.

#### Auxiliary sessions enabled:

The reply to the client egresses on the best route in the routing table:

- If the best route is port1, then it will egress on port1.
- If the best route is port2, then it will egress on port2.

If policy routes or SD-WAN rules are configured, they must be matched to determine the egress interface. If both are configured, policy routes have higher priority.

### Scenario 2 - Return traffic returns on an interfaces other than the original outgoing interfaces

In this scenario, a session is established between port1 and port3. When the return traffic hits port4:

#### Auxiliary sessions disabled:

- The session is dirtied and then gets refreshed, and interfaces on the session are updated.
- If there is a high traffic volume or flapping between the interfaces, the CPU usage increases.

**Auxiliary sessions enabled:**

An auxiliary session is created for the existing session, and traffic returns to the client as normal on the auxiliary session.

**Scenario 3 - Incoming traffic enters on an interfaces other than the original incoming interfaces**

In this scenario, a session is established between port1 and port3. When the incoming traffic hits port2:

**Auxiliary sessions disabled:**

The session is dirtied and then gets refreshed, and interfaces on the session are updated.

**Auxiliary sessions enabled:**

An auxiliary session is created for the existing session, and traffic is forwarded to the server as normal on the auxiliary session.

**Scenario 4 - the routing table is changed**

In this scenario, a session has been established between port1 and port3, when a new route on port4 is updated as the route to the server.

**Auxiliary sessions disabled:**

As long as there is a route to the destination, the session will not be dirtied or refreshed. Even though there is a better route, traffic continues on the original path between port1 and port3.

**Auxiliary sessions enabled:**

The session is dirtied and then gets refreshed, and interfaces on the session are updated.

**Effect on NPU offloading sessions**

When the auxiliary session feature is disabled, there is always one session. If the incoming or return interface changes, the FortiGate marks the session as dirty and updates the session's interfaces. This cannot be done by the NPU, so the session is not offloaded to the NPU, and is processed by the CPU instead. If Equal-Cost Multi-Path (ECMP) causes the interface to keep changing, then it will use significant CPU resources.

When the auxiliary session feature is enabled and the incoming or return interface changes, it creates an auxiliary session, and all traffic can continue to be processed by the NPU.

**Verification**

When an auxiliary, or reflect, session is created, it will appear as a reflect session below the existing session:

```
# diagnose sys session list
session info: proto=17 proto_state=00 duration=111 expire=175 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
```

```

class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=131/4/1 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=36->38/38->36 gwy=10.1.2.3/0.0.0.0
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b11 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0016/0x0000
vlifid=142/0, vtag_in=0x0016/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
no_ofld_reason:
reflect info 0:
dev=37->38/38->37
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0017/0x0000
vlifid=142/0, vtag_in=0x0017/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
total reflect session num: 1
total session 1

```

When a session is dirtied, a dirty flag is added to it:

```

# diagnose sys session list
session info: proto=17 proto_state=00 duration=28 expire=152 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=dirty may_dirty npu
statistic(bytes/packets/allow_err): org=68/2/1 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 2/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=0->0/0->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58 dst_mac=02:6c:ac:5c:c6:f9
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b2c tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000400
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:
total session 1

```

When an auxiliary session is created, NPU offloading will continue in the reflect session:

```

# diagnose sys session list
session info: proto=17 proto_state=01 duration=169 expire=129 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4

```

```

origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=131/4/1 reply=66/2/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=36->38/38->36 gwy=10.1.2.3/172.17.2.1
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b11 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x000c00
npu info: flag=0x91/0x81, offload=8/8, ips_offload=0/0, epid=129/142, ipid=142/128,
vlan=0x0016/0x0016
vlfid=142/128, vtag_in=0x0016/0x0016 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=4/4
reflect info 0:
dev=37->38/38->37
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0017/0x0000
vlfid=142/0, vtag_in=0x0017/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
total reflect session num: 1
total session 1

```

## Email alerts

Alert emails are used to notify administrators about events on the FortiGate device, allowing a quick response to any issues.

There are two methods that can be used to configure email alerts:

- [Automation stitches on page 2287](#)
- [Alert emails on page 2290](#)

The FortiGate has a default SMTP server, notification.fortinet.net, that provides secure mail service with SMTPS. It is used for all emails that are sent by the FortiGate, including alert emails, automation stitch emails, and FortiToken Mobile activations. You can also configure a custom email service.

### To configure a custom email service in the GUI:

1. Go to *System > Settings*.
2. In the *Email Service* section, enable *Use custom settings*.
3. Configure the following settings:

|                    |                                                                                                                        |
|--------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>SMTP Server</b> | If required, select <i>Specify</i> and enter the address or name of the SMTP server, such as <i>smtp.example.com</i> . |
| <b>Port</b>        | If required, select <i>Specify</i> and enter a specific port number. The default is port 465.                          |

**Authentication**

If required by the email server, enable authentication. If enabled, enter the *Username* and *Password*.

**Security Mode**

Set the security mode: *None*, *SMTPS*, or *STARTTLS*.

**Default Reply To**

Optionally, enter the reply to email address, such as *noreply@example.com*. This address will override the from address that is configured for an alert email.

If *SMTP Server* is set to *Default*, the *Default Reply To* field is hidden and cannot be configured, and the default address is set to *DoNotReply@notification.fortinet.net*. This ensures that default SMTP server can work correctly.

The screenshot shows the 'System Settings' window for 'Email Service'. It includes a sidebar with links like 'Relevant Documentation', 'Video Tutorials', 'FortiAnswers', 'Join the Discussion', and 'Security Rating Issues'. The main configuration area has the following settings: 'Use custom settings' is checked; 'SMTP Server' is set to 'smtp.fortinet.net' with a 'Specify' button; 'Port' is set to '465' with a 'Specify' button; 'Authentication' is checked; 'Username' is 'fortigate'; 'Password' is masked with dots; 'Security Mode' is 'SMTPS'; 'Default Reply To' is 'noreply@example.com'. A 'Debug Logs' section is at the bottom left, and an 'Apply' button is at the bottom right.

4. Click *Apply*.

### To configure a custom email service in the CLI:

```
config system email-server
  set server "smtp.fortinet.net"
  set reply-to "noreply@example.com"
  set port 465
  set authenticate enable
  set username "fortigate"
  set password *****
  set security smtps
end
```



If server is set to `notification.fortinet.net`, the `reply-to` command is hidden and cannot be configured, and the default reply to address is set to `DoNotReply@notification.fortinet.net`. This ensures that default SMTP server can work correctly.

## Automation stitches

Automation stitches can be configured to send emails based on a variety of triggers, giving you control over the events that cause an alert, and who gets alerted. For more information, see [Automation stitches on page 2735](#).

In this example, the default mail service sends an email to two recipients when an Admin login failed event occurs or there is a configuration change.

### To configure the automation stitch in the GUI:

1. On the root FortiGate, go to *Security Fabric > Automation* and click *Create New*.
2. Enter a name for the stitch, such as *Admin Fail*.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *FortiOS Event Log*.
  - c. Enter a name for the trigger, such as *Admin Fail*.
  - d. Click in the *Event* field, and in the slide out pane, search for and select *Admin login failed*.

The screenshot shows the 'Create New Automation Trigger' window. On the left is a sidebar with a 'Stitch' section containing a green plus icon. The main area is titled 'FortiOS Event Log' with a subtitle 'A specified FortiOS event log ID has occurred.' and a 'CHANGE TYPE' link. Below this, there are input fields for 'Name' (containing 'Admin Fail') and 'Description' (empty, with a character count of 0/255). A section titled 'FortiOS Event Log' contains an 'Event' dropdown menu with 'Admin login failed' selected, and a 'Field filter(s)' field with a plus icon. At the bottom are 'OK' and 'Cancel' buttons.

- e. Click *OK*.
  - f. Select the trigger in the list and click *Apply*.
4. Configure the action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Email*.
  - c. Configure the following settings:

|                |                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>    | Enter a name for the action, such as <i>Admin Fail_email</i> .                                                         |
| <b>To</b>      | Enter the two email recipients' addresses, such as <i>admin@example.com</i> and <i>manager@example.com</i> .           |
| <b>Subject</b> | Enter an subject, such as <i>Admin log in failed</i> .                                                                 |
| <b>Body</b>    | Edit as required. By default, the email body will include all the fields from the log event that triggered the stitch. |

**Create New Automation Action**

**Email** Send a custom email to the specified recipient(s). CHANGE TYPE

Name: Admin Fail\_email

Minimum interval: 0 second(s)

Description: 0/255

Email

To: admin@example.com, manager@example.com

Subject: Admin log in failed

Body: %%log%%

Replacement message: ☐

OK Cancel

d. Click **OK**.

e. Select the action in the list and click *Apply*.

5. Click **OK**.

6. Create a second stitch with *Configuration Change* as the trigger, and an email action with a different subject line (such as *Configuration Change Detected*).

### To configure the automation stitch in the CLI:

1. Create the automation triggers:

```
config system automation-trigger
  edit "Admin Fail"
    set event-type event-log
    set logid 32002
  next
  edit "Config Change"
    set event-type config-change
  next
end
```

2. Create automation actions to send the email messages:

```
config system automation-action
  edit "Admin Fail_email"
    set action-type email
    set email-to "admin@example.com" "manager@example.com"
    set email-subject "Admin log in failed"
  next
  edit "Config Change_email"
    set action-type email
    set email-to "admin@example.com" "manager@example.com"
    set email-subject "Configuration Change Detected"
  next
end
```

3. Create the automation stitches:

```
config system automation-stitch
  edit "Admin Fail"
    set trigger "Admin Fail"
```

```
    config actions
        edit 1
            set action "Admin Fail_email"
            set required enable
        next
    end
next
edit "Config Change"
    set trigger "Config Change"
    config actions
        edit 1
            set action "Config Change_email"
            set required enable
        next
    end
next
end
```

## Alert emails

When configuring an alert email, you can define the threshold when an issue becomes critical and requires attention. When the threshold is reached, an email is sent to up to three recipients on the configured schedule to notify them of the issue.

Alert email messages can be configured in the CLI. For more information on the available CLI commands, see [Configure alert email settings](#).



Alert email messages (under `config alertemail setting`) cannot monitor and notify users of the current logging status or the status of the `miglogd` daemon. In the event that the `miglogd` daemon is unresponsive, alert email messages cannot be triggered.

---

IPS, SSH, violation traffic, antivirus, and web filter logs are supported as triggers in automation stitches. For more information, see [Event log category triggers on page 2763](#).

In this example, the FortiGate is configured to send email messages to two addresses, `admin@example.com` and `manager@example.com`, every two minutes when multiple intrusions, administrator log in or out events, or configuration changes occur.


### To configure an alert email:

```
config alertemail setting
    set username fortigate@example.com
    set mailto1 admin@example.com
    set mailto2 manager@example.com
    set filter-mode category
    set email-interval 2
    set IPS-logs enable
    set configuration-changes-logs enable
    set admin-login-logs enable
end
```



## Using configuration save mode


Administrators can use configuration save mode set to *Manual* to implement strict change control by requiring changes to be manually committed to the flash. To configure the setting in the GUI, go to *System > Settings*.

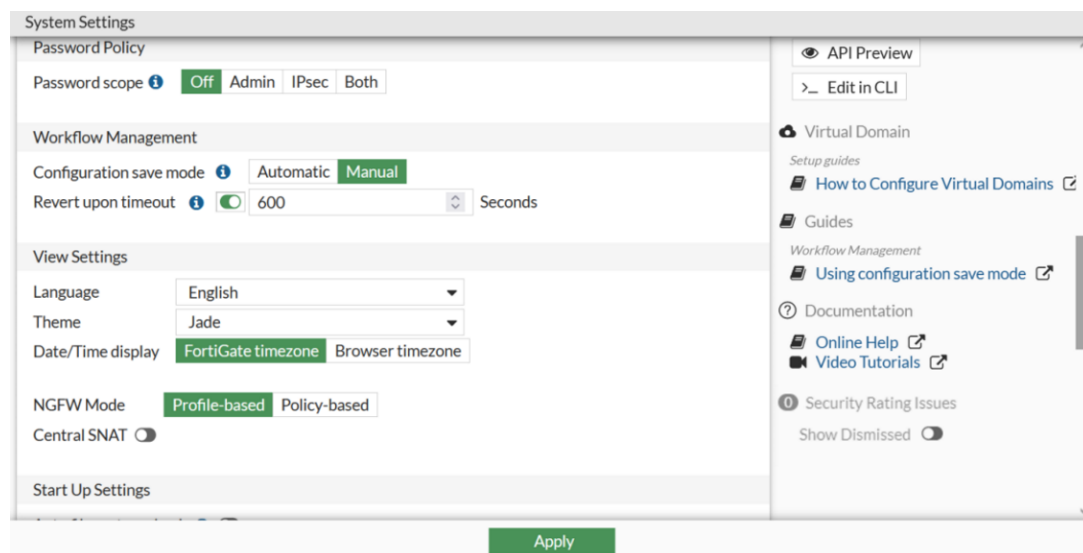


When *Configuration save mode* is set to *Automatic* (default), configuration changes are automatically saved to both memory and flash.

When *Configuration save mode* is set to *Manual*, configuration changes are saved to memory, but not to flash. The changes take effect immediately, but must be manually saved to flash. Unsaved changes are reverted when the device is rebooted. If *Revert upon timeout* is enabled, the system might be unresponsive for a short time after the configured timeout while it reverts the changes back to the previous save point. Prior to the timeout expiring, a pop-up warning gives you the option to postpone reverting the configuration by one minute, revert the configuration immediately, or save the configuration changes.

In *Manual* mode, a warning is shown in the banner when there are unsaved changes. Click the warning to save, view, or revert the changes. When *Reboot and revert changes* is clicked, the system might be unresponsive for a short time while it reverts the changes back to the previous save point.

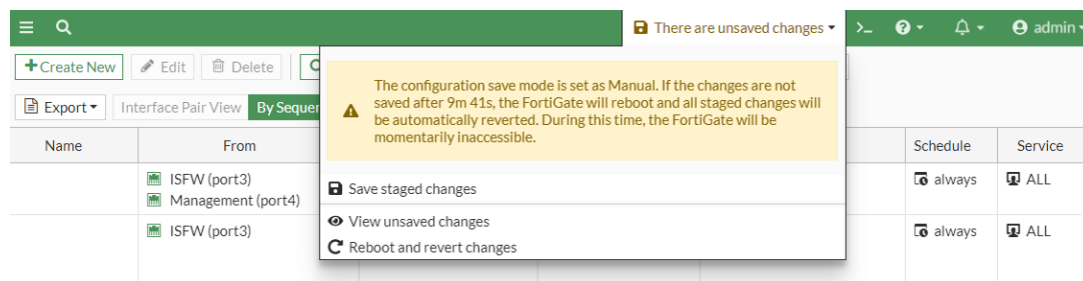

Clicking *View Unsaved Changes* opens a pane highlighting the changes that have not been committed.

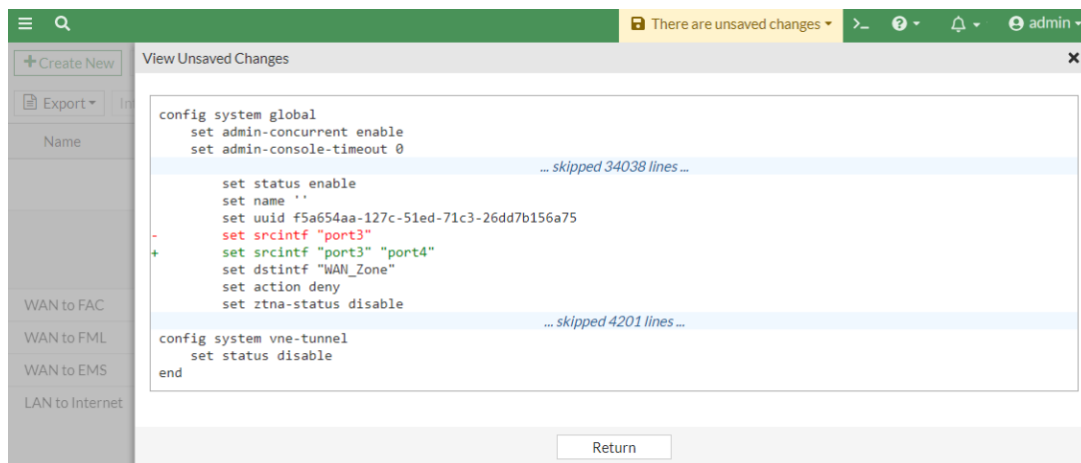

This feature is also available in the CLI:

```
config system global
    set cfg-save {automatic | manual | revert}
    set cfg-revert-timeout <integer>
end
# execute cfg {reload | save}
```

## Trusted platform module support

On supported FortiGate hardware devices, the Trusted Platform Module (TPM) can be used to protect your password and key against malicious software and phishing attacks. The dedicated module hardens the FortiGate by generating, storing, and authenticating cryptographic keys. To help prevent tampering, the chip is soldered on the motherboard to reduce the risk of data transaction interceptions from attackers.

By default, the TPM is disabled. To enable it, you must set the 32 hexadecimal digit master-encryption-password which encrypts sensitive data on the FortiGate using AES128-CBC. With the password, TPM generates a 2048-bit primary key to secure the master-encryption-password through RSA-2048 encryption. The master-encryption-password protects the data. The primary key protects the master-encryption-password.



The TPM module does not encrypt the disk drive of eligible FortiGates.

The primary key binds the encrypted configuration file to a specific FortiGate unit and never leaves the TPM. When backing up the configuration, the TPM uses the primary key to encrypt the master-encryption-password in the configuration file. When restoring a configuration that includes a TPM protected master-encryption-password:

- If TPM is disabled, then the configuration cannot be restored.
- If TPM is enabled but has a different master-encryption-password than the configuration file, then the configuration cannot be restored.
- If TPM is enabled and the master-encryption-password is the same in the configuration file, then the configuration can be restored.

For information on backing up and restoring the configuration, see [Configuration backups on page 67](#).

Passwords and keys that can be encrypted by the master-encryption-key include:

- Alert email user's password
- BGP and other routing related configurations
- External resource
- FortiGuard proxy password
- FortiToken/FortiToken Mobile's seed
- HA password
- IPsec pre-shared key
- Link Monitor, server side password
- Local certificate's private key
- Local, LDAP, RADIUS, FSSO, and other user category related passwords
- Modem/PPPoE
- NST password
- NTP Password
- SDN connector, server side password
- SNMP
- Wireless Security related password



In HA configurations, each cluster member must use the same master-encryption-key so that the HA cluster can form and its members can synchronize their configurations.

---

### To check if your FortiGate device has a TPM:

Verify all the following commands exist. Otherwise, the platform does not support it.

```
# diagnose hardware test info
List of test cases:
    bios: sysid
    bios: checksum
    bios: license
    bios: detect

# diagnose hardware deviceinfo tpm
TPM capability information of fixed properties:
=====
TPM_PT_FAMILY_INDICATOR: 2.0
TPM_PT_LEVEL: 0
TPM_PT_REVISION: 138
TPM_PT_DAY_OF_YEAR: 8
TPM_PT_YEAR: 2018
TPM_PT_MANUFACTURER: NTC
# diagnose hardware test tpm
===== Fortinet Hardware Test Report =====
TPM
TPM Device Detection..... PASS
===== Fortinet Hardware Test PASSED =====
# diagnose tpm
get-property Get TPM properties. [Take 0-1 arg(s)]
get-var-property Get TPM var properties.
read-clock Read TPM internal clock.
```

```
shutdown-prepare Prepare for TPM power cycle.
selftest Perform self tests.
generate-random-number Generate a 4-byte random number
SHA-1 HASH a sequence of num with SHA-1 algo
SHA-256 HASH a sequence of num with SHA-256 algo
```

### To enable TPM and input the master-encryption-password:

```
config system global
    set private-data-encryption enable
end
Please type your private data encryption key (32 hexadecimal numbers):
*****
Please re-enter your private data encryption key (32 hexadecimal numbers) again:
*****
Your private data encryption key is accepted.
```

## Configuring the persistency for a banned IP list

The `banned-ip-persistency` option configures whether the banned IP list persists through a power cycle.

```
config firewall global
    set banned-ip-persistency {disabled | permanent-only | all}
end
```

```
banned-ip-persistency
{disabled |
permanent-only |
all}
```

Set the persistency of banned IPs across power cycling:

- `disabled`: no entries are kept across power cycling (default).
- `permanent-only`: only permanent IP bans are kept across power cycling.
- `all`: all IP bans are kept across power cycling.

The banned IP list is created from quarantining. For example, when quarantining is enabled for IPS, application control, and DDoS. Permanent quarantining can be added manually using `diagnose user banned-ip add src4`.

The `diagnose user quarantine <parameter>` command has changed to `diagnose user banned-ip <parameter>`.

### Example 1: keep all banned IPs across power cycling

When `banned-ip-persistency` is set to `all`, all the banned IPs are saved after a reboot. In this example, an application control security profile with quarantining is already configured. After traffic is generated that triggers the quarantine rule, a quarantine list is generated.

#### To view the list of banned IPs:

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
10.1.100.12      Tue Jul  5 18:01:05 2022 Tue Jul  5 18:21:05 2022 APP
```

After a reboot, the banned IP list is the same:

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
10.1.100.12      Tue Jul  5 18:01:05 2022 Tue Jul  5 18:21:05 2022 APP
```

## Example 2: keep only permanent banned IPs across power cycling

When `banned-ip-persistency` is set to `permanent-only`, only banned IPs with an indefinite expiry time are saved after a reboot. The permanent IP ban was already configured for 10.1.100.11 using `diagnose user banned-ip add src4 10.1.100.11 0 ips`.

### To view the list of banned IPs:

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
10.1.100.12      Tue Jul  5 18:01:05 2022 Tue Jul  5 18:21:05 2022 APP
10.1.100.11      Tue Jul  5 18:06:35 2022 indefinite          IPS
```

After a reboot, only 10.1.100.11 remains in the banned IP list:

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
10.1.100.11      Tue Jul  5 18:06:35 2022 indefinite          IPS
```

## Using the default certificate for HTTPS administrative access

By default, the FortiGate uses the certificate named `Fortinet_GUI_Server` for HTTPS administrative access. This certificate is generated and signed by the built-in `Fortinet_CA_SSL` certificate, which dynamically updates the SAN field of the `Fortinet_GUI_Server` certificate with the IP addresses of all interfaces enabled for HTTPS. After installing the `Fortinet_CA_SSL` CA certificate on a PC, administrators can access the FortiGate GUI through a browser without any warnings.

### How the certificate works

The `Fortinet_GUI_Server` certificate is generated by the built-in certificate authority (CA) with the `Fortinet_CA_SSL` certificate, which is unique to each FortiGate. This CA certificate is also used in SSL deep inspection. When the `Fortinet_GUI_Server` certificate is generated, the SAN (Subject Alternative Name) extension field is populated with the IP addresses of all physical and logical (VLAN, loopback, and so on) interfaces enabled for HTTPS. It is also populated with the management IP address whenever this field is an IP address and not an FQDN. If there are any changes to the IP addresses on the interface or management IP, the `Fortinet_GUI_Server` certificate is updated and regenerated with the new IP. If the `Fortinet_CA_SSL` certificate itself is updated, the `Fortinet_GUI_Server` certificate is regenerated.

Because the root CA is not a public CA, the `Fortinet_CA_SSL` CA certificate must be installed in the trusted certificate store on the client PC in order for the trusted certificate chain to be recognized by a browser. This certificate can be downloaded from the FortiGate in several ways.



The `Fortinet_GUI_Server` certificate can only be used for HTTPS administrative access. It cannot be used anywhere else.

### Example

The HTTPS server certificate can be configured in the GUI or CLI.

**To configure the HTTPS server certificate in the GUI:**

1. On an administrative PC, log in to the FortiGate GUI and go to *System > Settings*.
2. In the *Administration Settings* section, set the *HTTPS server certificate* to *Fortinet\_GUI\_Server*.
3. Download the Fortinet\_CA\_SSL certificate using one of the following methods:
  - On the *System > Settings* page, click *Download HTTPS CA certificate* (below the *HTTPS server certificate* option).
  - Go to *System > Certificates*. In the *Local CA Certificate* section, select *Fortinet\_CA\_SSL*, and click *Download*.
  - Go to *Dashboard > Status*. In the *Administrator* widget, click *Download HTTPS CA certificate*.
4. Install the certificate in the PC's trusted certificate store. Refer to your OS documentation if needed.
5. Reload the FortiGate GUI. The browser now trusts the certificate and does not display a certificate warning.
6. If you are connecting to the FortiGate over DNAT or port forwarding, the certificate needs to add the NATed management IP into the SAN field so that the browser does not display a warning about an invalid CN. Configure the management IP in the global settings:

```
config system global
    set management-ip <IP_address>
end
```

**To configure the HTTPS server certificate in the CLI:**

1. Configure the HTTPS server certificate:

```
config system global
    set admin-server-cert Fortinet_GUI_Server
end
```


2. Download the Fortinet\_CA\_SSL certificate on the administrative PC through TFTP:

```
# execute vpn certificate local export tftp Fortinet_CA_SSL cer <file_name> <server_IP>


Done.
```

**To verify the connection:**

1. Access the FortiGate from a browser and verify the certificate information. For example, in Chrome:
  - a. In the left side of the address bar, click the icon to view the site information.
  - b. Click *Certificate*.
  - c. Click the *Details* tab.
  - d. Locate the *Subject Alternative Name* (SAN) field, and note the IP addresses that are listed (1.1.1.1).

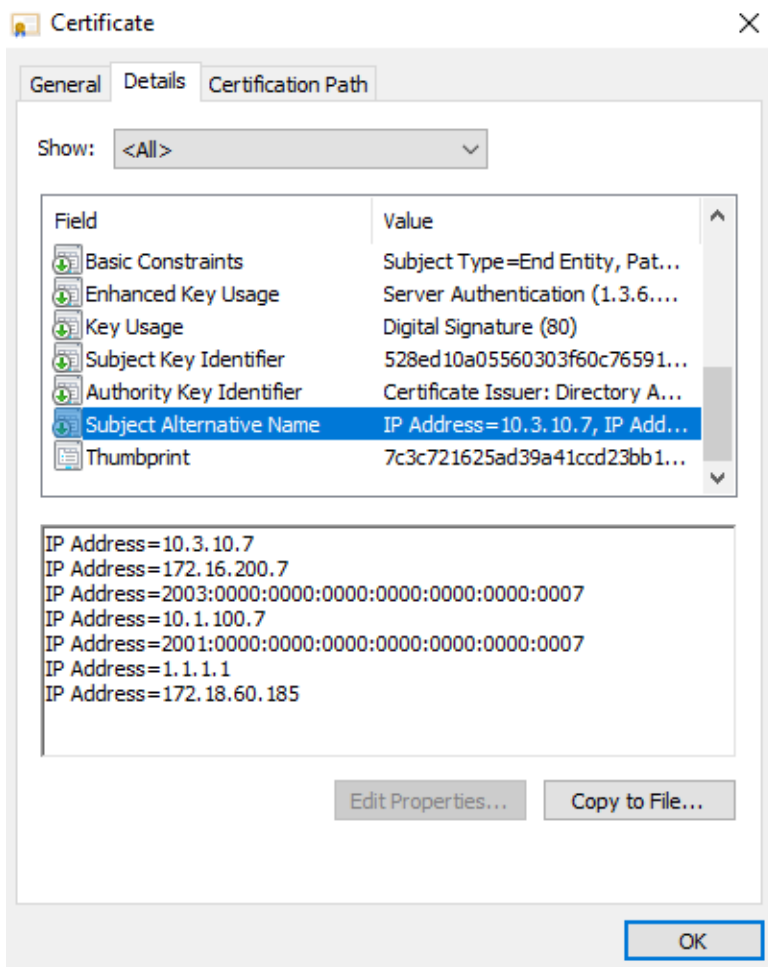

- e. Click OK.
2. In FortiOS, change one of the interface addresses. In this example, the port11 address is changed from 1.1.1.1 to 3.3.3.3.
3. Reload the browser and review the certificate information again. The IP 1.1.1.1 in the SAN field is updated to 3.3.3.3.

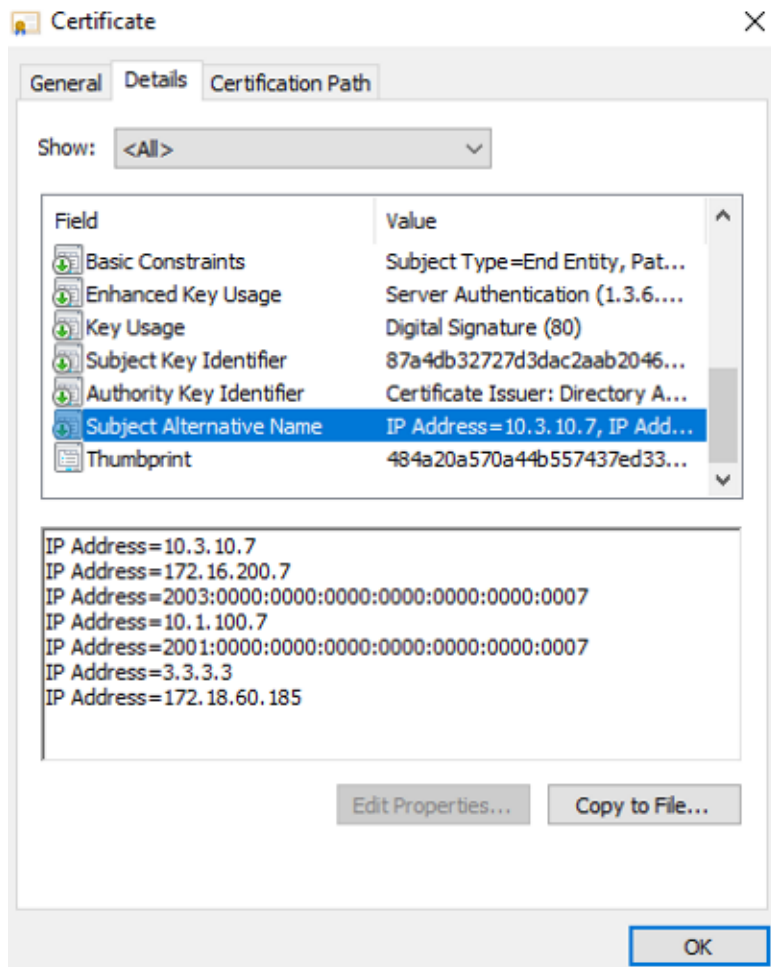

4. In FortiOS, go to *System > Certificates* and double-click *Fortinet\_GUI\_Server* to view the *Certificate Details*.
5. At the bottom of the pane, the *X509v3 Subject Alternative Name* field displays the IP addresses from the certificate.
6. Verify the logs when the certificate is regenerated:

```
# execute log filter category 1
# execute log display
12 logs found.
10 logs returned.

1: date=2022-06-23 time=09:11:44 eventtime=1656000704674434910 tz="-0700"
logid="0100022205" type="event" subtype="system" level="information" vd="root"
logdesc="Certificate succeed to auto-generate" user="system" action="certificate-
generate" status="successful" name="Fortinet_GUI_Server" msg="Successfully generated GUI
management cert"

2: date=2022-06-23 time=09:11:44 eventtime=1656000704674432668 tz="-0700"
logid="0101041986" type="event" subtype="vpn" level="information" vd="root"
logdesc="Certificate regenerated" action="info" user="N/A" ui="forticron"
name="Fortinet_GUI_Server" msg="A certificate is regenerated" cert-type="Local"
status="success"

3: date=2022-06-23 time=09:11:31 eventtime=1656000691825397831 tz="-0700"
logid="0100044547" type="event" subtype="system" level="information" vd="root"
logdesc="Object attribute configured" user="admin" ui="ssh(172.16.200.254)"
```



```
action="Edit" cfgtid=35782662 cfgpath="system.interface" cfgobj="port11" cfgattr="ip  
[1.1.1.1 255.255.255.0->3.3.3.3 255.255.255.0]" msg="Edit system.interface port11"
```

## Virtual Domains

Virtual Domains (VDOMs) are used to divide a FortiGate into two or more virtual units that function independently. VDOMs can provide separate security policies and, in NAT mode, completely separate configurations for routing and VPN services for each connected network.

Multiple VDOMs can be created and managed as independent units in multi VDOM mode.

By default, most FortiGate units support 10 VDOMs, and many FortiGate models support purchasing a license key to increase the maximum number. Some exceptions may apply.

The following topics provide an overview of VDOM concepts, topologies, best practices, and the general configurations involved when working with multi VDOM mode:

- [VDOM overview on page 2299](#)
- [General configurations on page 2304](#)
- [Backing up and restoring configurations in multi VDOM mode on page 2312](#)

The following topics provide examples of configuring VDOMs:

- [Inter-VDOM routing configuration example: Internet access on page 2315](#)
- [Inter-VDOM routing configuration example: Partial-mesh VDOMs on page 2324](#)

## VDOM overview

The following sections provide conceptual information on VDOMs:

- [Multi VDOM mode on page 2299](#)
- [Global settings on page 2300](#)
- [Global and per-VDOM resources on page 2300](#)
- [Management VDOM on page 2300](#)
- [VDOM types on page 2300](#)
- [Administrator roles and views on page 2301](#)
- [Inter-VDOM routing on page 2301](#)

The following sections provide information on methods of VDOM configuration:

- [Topologies on page 2301](#)
- [Best practices on page 2303](#)

## Multi VDOM mode

In multi VDOM mode, the FortiGate can have multiple VDOMs that function as independent units. When multi VDOM mode is first enabled, all VDOM configurations will move to the root VDOM by default. The root VDOM cannot be deleted, and remains in the configuration even if it is not processing any traffic. New VDOMs can be created, up to the VDOM limit allowable on your device.

## Global settings

Global settings are configured outside of a VDOM. They effect the entire FortiGate, and include settings such as interfaces, firmware, DNS, some logging and sandboxing options, and so on. Global settings should only be changed by top level administrators.

## Global and per-VDOM resources

Global and per-VDOM resources can be configured when the FortiGate is in multi VDOM mode. Global resources apply to resources that are shared by the whole FortiGate, while per-VDOM resources are specific to each VDOM.

By default, all per-VDOM resource settings are set to have no limits. This means that any single VDOM can use all of the FortiGate device's resources. This could deprive other VDOMs of the resources that they require, to the point that could be unable to function. We recommend setting maximum values on the resources that are vital to you.

## Management VDOM

The management VDOM refers to the specific role that must be designated to one of the VDOMs. By default, the root VDOM is the management VDOM, and management-related services such as FortiGuard updates and other local out (self-originating) traffic such as logs to remote servers originate from the management VDOM. The management VDOM cannot be deleted. See [Management VDOM on page 2305](#) for configuration details.

## VDOM types

When a FortiGate is in multi VDOM mode, a VDOM can be configured as an *Admin*, *Traffic*, or LAN extension type VDOM.

When the VDOM type is set to *Admin*, the VDOM is used to administer and manage the FortiGate. Usually, the *Admin* VDOM resides in a management network which is only accessible by administrators. Global and VDOM administrators can log in to the FortiGate using SSH, HTTPS, and so on but traffic cannot pass through this *Admin* VDOM. A FortiGate does not need to have an *Admin* VDOM and, at most, there can only be one *Admin* VDOM per FortiGate.

When VDOM type is set to *Traffic*, the VDOM can pass traffic like a regular firewall. Most VDOMs will be *Traffic* type VDOMs. Network interfaces on a *Traffic* VDOM can also enable SSH, HTTPS, and so on for administrative and management purposes.

In general, an *Admin* VDOM has a subset of a *Traffic* VDOM's capabilities. See [Configure an administrative VDOM type on page 2308](#) for configuration details.

A LAN extension mode VDOM allows a remote FortiGate to provide remote connectivity to a local FortiGate over a backhaul connection. It can only be configured in the CLI. See [FortiGate LAN extension on page 611](#) for details.



FortiGate-VM supports having at least two VDOMs; one that supports an administrative VDOM and another that supports a traffic VDOM.

---

## Administrator roles and views

When a FortiGate has been configured in multi VDOM mode, the device can be managed by global administrators and per-VDOM administrators. Each type of administrator will have a different view of the GUI in multi VDOM mode which corresponds to their role.

### Global administrators

Global administrators have complete visibility and access because the scope of their role is to manage the entire physical FortiGate device. An example of a global administrator is an administrator working for a managed security services provider (MSSP) providing the FortiGate as a multi-tenant environment to its clients.

When global administrators log into the GUI, from the *VDOM: Global* view they will see all pages for global settings shared between VDOMs, and VDOM-specific settings.

To create a global administrator that has access to all VDOMs and access to global settings, it must be created at the global level and must use the *super\_admin* administrator profile.

See [Administrator profiles on page 2241](#) and [Local authentication on page 2218](#) for configuration details.

### VDOM administrators

VDOM administrators will be unable to view global settings or VDOMs not assigned to them because the scope of their role is restricted to managing specific VDOMs only. An example of a VDOM administrator is the administrator working for a company which is a client, or tenant, of an MSSP's multi-tenant FortiGate.

When VDOM administrators log into the GUI, from the *VDOM:<VDOM>* view they will see pages for settings specific to the VDOM they have been configured to administer such as interfaces, routes, firewall policies, and security profiles.

See [Create per-VDOM administrators on page 2307](#) for configuration details.

## Inter-VDOM routing

VDOM links are virtual interfaces that allow VDOMs to communicate internally without using additional physical interfaces. A VDOM link contains a pair of interfaces, each one connected to a VDOM to form each end of the inter-VDOM connection. Inter-VDOM routing can be configured in order to communicate between one VDOM to another.


When VDOMs are configured on your FortiGate unit, configuring inter-VDOM routing and VDOM links is similar to creating a VLAN interface. VDOM links can be managed in either the CLI or in the network interface list in the GUI.

See [Inter-VDOM routing configuration example: Internet access on page 2315](#) for more information.

## Topologies


These are the main configuration types in multi VDOM mode:

## Independent VDOMs

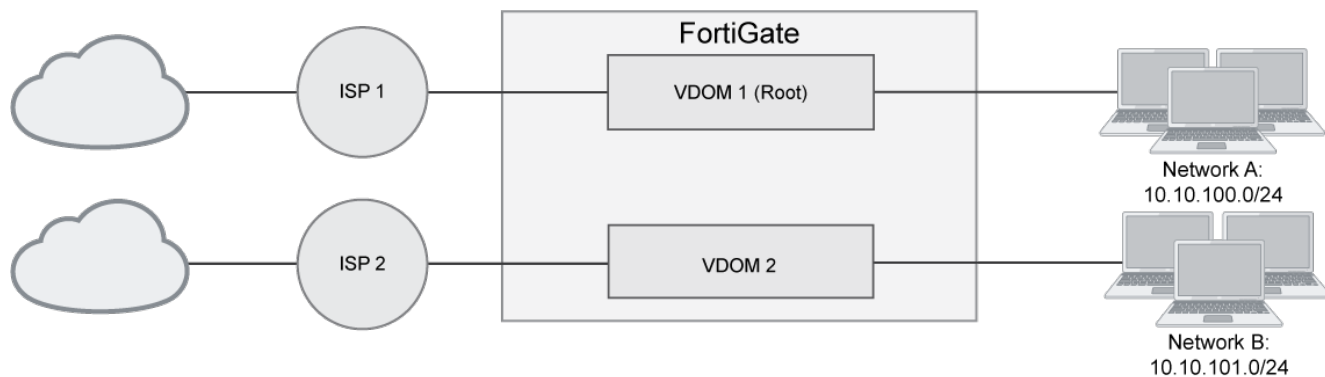

Multiple, completely separate VDOMs are created. Any VDOM can be the management VDOM, as long as it has Internet access to connect to FortiGuard services and other management resources. There are no inter-VDOM links, and each VDOM is independently managed.


## Internet access VDOM

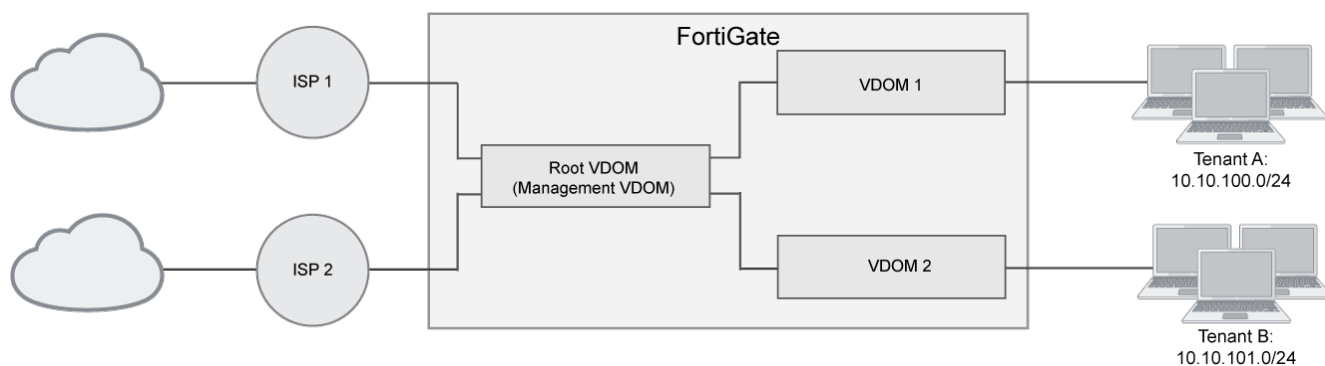

In the Internet access VDOM configuration, Internet access is provided primarily by a single VDOM; for example, the management VDOM (depicted as root VDOM in the preceding diagram). Each tenant connects to the management VDOM via an inter-VDOM link. The management VDOM has complete control over Internet access, including the types of traffic that are allowed in both directions. This can improve security, as there is only one point of ingress and egress.

There is no communication between the other VDOMs.

## Meshed VDOMs

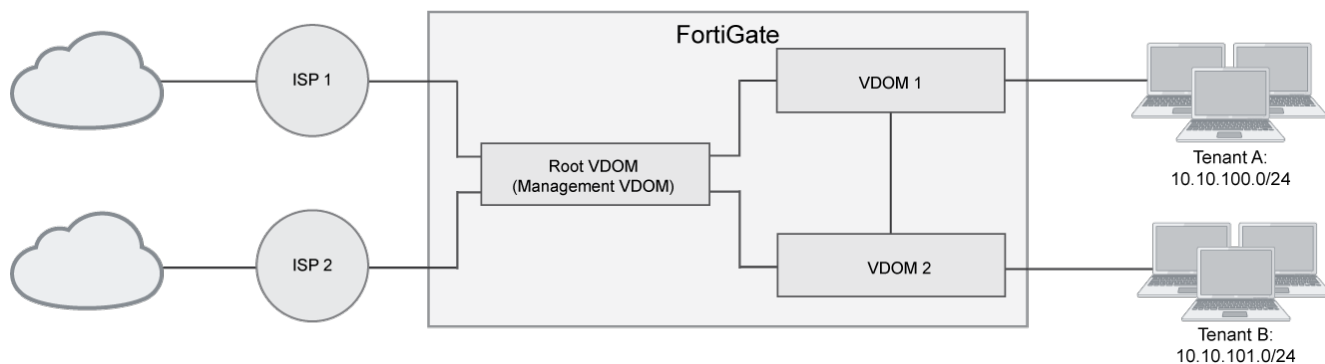


VDOMs can communicate with inter-VDOM links. In full-mesh configurations, all the VDOMs are interconnected. In partial-mesh configurations, only some of the VDOMs are interconnected.

In this configuration, inter-vmom links between tenants are created by the global administrator, but each tenant controls the firewall policies to allow access to other tenants.

See [Inter-VDOM routing on page 2309](#) and [Inter-VDOM routing configuration example: Internet access on page 2315](#) for configuration details.

## Administrative VDOM on a management network

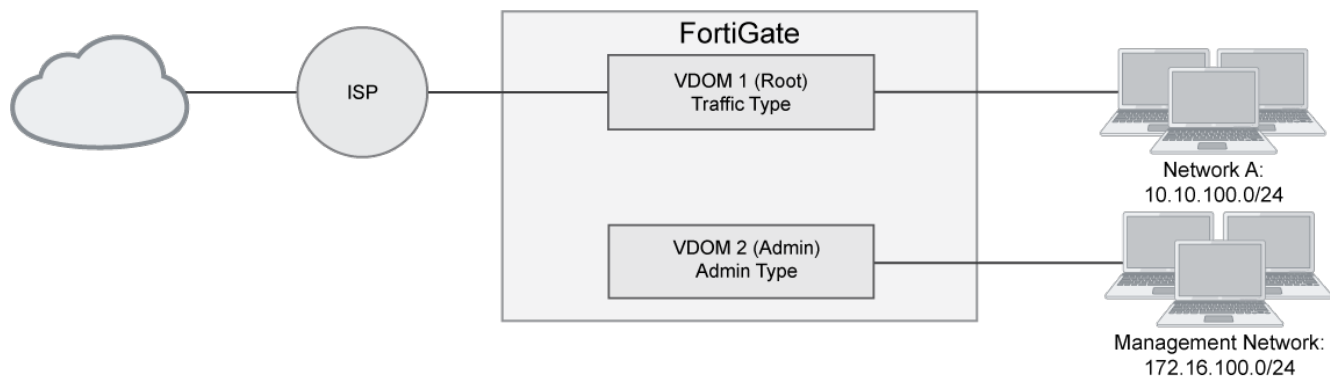

The administrative VDOM type can be used to limit administrative access to the FortiGate using SSH, HTTPS and so on to administrators working from a management network. Administrators may be limited to management settings or may have global privileges to access other VDOMs. The user or tenant network (depicted as Network A in the diagram) uses a traffic type VDOM, which allows traffic to pass through it like a regular firewall and allows configuration of firewall-related settings. This configuration can improve security if the management network is a closed network and administrative access is not enabled on any interfaces on the traffic VDOM.

## Best practices

VDOMs can provide separate firewall policies and, in NAT mode, completely separate configurations for routing and VPN services for each connected network or organization. This section provides a list of best practices for configuring VDOMs.

### Per-VDOM resource setting

All per-VDOM resource settings are set to no limit by default. To ensure proper functionality of all VDOMs, it is recommended that you set some maximum values for the most vital resources. See [Global and per-VDOM resources on page 2306](#) for configuration details.

### Virtual domains in NAT mode

Once the virtual domains have been enabled and one or more VDOMs have been created, they must be configured. The following steps provide a general overview of the configuration process.

#### To configure VDOMs:

1. Change the management virtual domain.
2. Configure FortiGate interfaces for your VDOMs in NAT mode.

3. Configure VDOM routing.
4. Configure security policies for VDOMs in NAT mode.
5. Configure UTM profiles for VDOMs in NAT mode.
6. Test the configuration.



While you may not require all of the steps for your network topology, it is recommended that you perform them in the order given.

---

See [General configurations on page 2304](#) for configuration details.

## Virtual clustering

Virtual clustering is an extension of FGCP HA that provides failover protection between two instances of one or more VDOMs operating on two FortiGates that are in a virtual cluster. A standard virtual cluster consists of FortiGates that are operating in active-passive HA mode with multiple VDOMs enabled. See [HA virtual cluster setup on page 2358](#) for more details.

Typically, virtual clustering is configured with override enabled and uses device priorities to distribute traffic between the primary and secondary FortiGates.

If you decide to disable override for clustering, as a result of persistent renegotiating, you should disable it for both cluster units.

## General configurations

VDOMs can be configured in the GUI and the CLI. To ensure that no VDOMs are accidentally configured in the CLI, prompts can be enabled. These prompts will display to ask for confirmation that the VDOM is meant to be configured in the CLI.

### To configure confirmation prompts:

```
config system global
    set edit-vdom-prompt enable
end
```

The following topics provide information on general VDOM configurations:

- [Enable multi VDOM mode on page 2305](#)
- [Management VDOM on page 2305](#)
- [Global and per-VDOM resources on page 2306](#)
- [Create per-VDOM administrators on page 2307](#)
- [Configure an administrative VDOM type on page 2308](#)
- [Assign interfaces to a VDOM on page 2309](#)
- [Inter-VDOM routing on page 2309](#)
- [Allow FortiGuard services and updates to initiate from a traffic VDOM on page 2310](#)

## Enable multi VDOM mode

Enable multi VDOM mode and create the VDOMs in the GUI and CLI.

---



On FortiGate 90 series models and lower, VDOMs can only be enabled using the CLI.

---

### To enable VDOMs in the GUI:

1. Go to *System > Settings*.
2. In the *System Operation Settings* sections, enable *Virtual Domains*.
3. Click *OK*.

### To enable VDOMs in the CLI:

```
config system global
    set vdom-mode multi-vdom
end
```

You will be logged out of the device when the VDOM mode is enabled.

## Management VDOM

By default, the management VDOM is *root*. The management VDOM can be manually assigned from the GUI or the CLI.

### To assign the management VDOM in the GUI:

1. In the *Global VDOM*, go to *System > VDOM*.
2. Select the VDOM you want to assign as the management VDOM.
3. Click *Switch Management*.
4. Click *OK*.

### To assign the management VDOM in the CLI:

```
config global
    config system global
        set management-vdom <vdom>
    end
end
```



Only one management VDOM can exist at a time. It is strongly recommended that the management VDOM have Internet access otherwise management-related services, such as FortiGuard updates and queries, will not work.

---

## Global and per-VDOM resources

Global resources apply to resources that are shared by the whole FortiGate, while per-VDOM resources are specific to each VDOM.

### To configure global resources:

1. In the *Global* VDOM, go to *System > Global Resources*.
2. Enable the resource's override in the *Override Maximum* column, then enter the override value.

Global Resources

[Reset All](#)

| Resource                        | Current Usage | Default Maximum | Override Maximum                              |
|---------------------------------|---------------|-----------------|-----------------------------------------------|
| Active Sessions                 | 0% (12)       | No Limit Set    | <input type="checkbox"/>                      |
| <b>Policy &amp; Objects</b>     |               |                 |                                               |
| Firewall Policies               | 0% (0)        | 21024           | <input checked="" type="checkbox"/> 20512     |
| Firewall Addresses              | 0% (41)       | 11024           | <input type="checkbox"/>                      |
| Firewall Address Groups         | 0% (4)        | 5000            | <input type="checkbox"/>                      |
| Firewall Custom Services        | 0% (174)      | No Limit Set    | <input type="checkbox"/>                      |
| Firewall Service Groups         | 0% (8)        | No Limit Set    | <input type="checkbox"/>                      |
| Firewall One-time Schedules     | 0% (0)        | No Limit Set    | <input type="checkbox"/>                      |
| Firewall Recurring Schedules    | 0% (4)        | No Limit Set    | <input type="checkbox"/>                      |
| <b>User &amp; Device</b>        |               |                 |                                               |
| User                            | 0% (0)        | No Limit Set    | <input checked="" type="checkbox"/> 715827883 |
| User Groups                     | 0% (1)        | No Limit Set    | <input type="checkbox"/>                      |
| Concurrent Explicit Proxy Users | 0% (0)        | 1000            | <input type="checkbox"/>                      |
| <b>VPN</b>                      |               |                 |                                               |
| SSL-VPN                         | 0% (0)        | No Limit Set    | <input type="checkbox"/>                      |
| VPN IPsec Phase1 Tunnels        | 0% (0)        | 200             | <input checked="" type="checkbox"/> 190       |
| VPN IPsec Phase2 Tunnels        | 0% (0)        | 200             | <input checked="" type="checkbox"/> 190       |

[Apply](#)

3. Click *Apply*.  
To reset all of the override values, click *Reset All*.

### To configure per-VDOM resources:

1. In the *Global* VDOM, go to *System > VDOM*.
2. Select the VDOM whose resources need to be configured and click *Edit*.
3. Enable the resource's override in the *Override Maximum* column, then enter the override value.
4. Optionally, enter a value in the *Guaranteed* column.



Virtual Domain: root

NGFW Mode: **Profile-based** Policy-based

Central SNAT: ☐

Comments:

Reset All

| Resource                | Current Usage | Global Maximum | Override Maximum                         | Guaranteed           |
|-------------------------|---------------|----------------|------------------------------------------|----------------------|
| Active Sessions         | (23)          | No Limit Set   | <input type="checkbox"/>                 | <input type="text"/> |
| <b>Log &amp; Report</b> |               |                |                                          |                      |
| Log Disk Quota (MiB)    | (0)           | No Limit Set   | <input checked="" type="checkbox"/> 5039 | 2520                 |

OK Cancel

Additional Information

API Preview

References

Edit in CLI

Documentation

Online Help

Video Tutorials

How to Purchase and Renew VDOM Licenses

5. Click **OK**.

To reset all of the override values, click *Reset All*.

## Create per-VDOM administrators

Per-VDOM administrators can be created that can access only the administrative or traffic VDOM. These administrators must use either the *prof\_admin* administrator profile, or a custom profile.

A per-VDOM administrator can only access the FortiGate through a network interface that is assigned to the VDOM that they are assigned to. The interface must also be configured to allow management access. They can also connect to the FortiGate using the console port.

To assign an administrator to multiple VDOMs, they must be created at the global level. When creating an administrator at the VDOM level, the *super\_admin* administrator profile cannot be used.

### To create a per-VDOM administrator in the GUI:

1. On the FortiGate, connect to the *Global* VDOM.
2. Go to *System > Administrators* and click *Create New > Administrator*.
3. Fill in the required information, setting the *Type* as *Local User*.
4. In the *Virtual Domains* field, add the VDOM that the administrator will be assigned to, and if necessary, remove the other VDOM from the list.

New Administrator

Username: PJFry

Type: **Local User**

Match a user on a remote server group

Match all users in a remote server group

Use public key infrastructure (PKI) group

Password:

Confirm Password:

Comments: Write a comment... 0/255

Administrator profile: prof\_admin

Virtual Domains: FG-traffic

OK Cancel

Select Entries

Search

FG-traffic

root

Close

5. Click **OK**.

**To create a per-VDOM administrator using the CLI:**

```

config global
  config system admin
    edit <name>
      set vdom <VDOM_name>
      set password <password>
      set accprofile <admin_profile>
      ...
    next
  end
end

```

**Configure an administrative VDOM type**


Individual VDOMs can be configured as an administrative type in multi VDOM mode.



Only one administrative VDOM can exist at a time and cannot be set on a FortiWifi. A VDOM cannot be an administrative type and in transparent mode at the same time.

**To configure an administrative VDOM in the GUI:**

1. Go to *System > VDOM*.
2. Click *Create New*.
3. Enter a *Virtual Domain* name and set the *Type* to *Admin*.
4. Click *OK*.

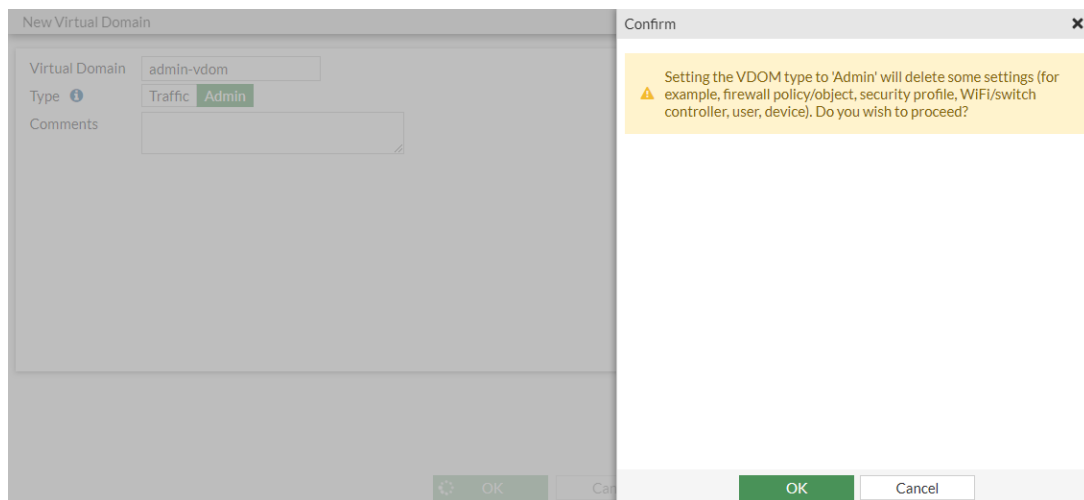

5. Click *OK* in the confirmation pane. The administrative VDOM is created.

**To configure the VDOM type in the CLI:**

```

config system settings
  set vdom-type {traffic | admin}
end

```

## Assign interfaces to a VDOM

An interface can only be assigned to one of the VDOMs. An interface cannot be moved if it is referenced in an existing configuration.



In the GUI, the interface list *Ref.* column shows if the interface is referenced in an existing configuration, and allows you to quickly access and edit those references.

### To assign an interface to a VDOM in the GUI:

1. In the *Global* VDOM, go to *Network > Interfaces*.
2. Select the interface that will be assigned to a VDOM and click *Edit*.
3. Select the VDOM that the interface will be assigned to from the *Virtual Domain* list.

4. Click **OK**.

### To assign an interface to a VDOM using the CLI:

```
config global
  config system interface
    edit <interface>
      set vdom <VDOM_name>
    next
  end
end
```

## Inter-VDOM routing

VDOM links allow VDOMs to communicate internally without using additional physical interfaces.



A VDOM link cannot share the same name as a VDOM.



VDOM link does not support traffic offload. If you want to use traffic offload, use NPU-VDOM-LINK. See [Configuring inter-VDOM link acceleration with NP6 processors](#) in the Hardware Acceleration guide for details.

### To configure a VDOM link in the GUI:

1. In the *Global VDOM*, go to *Network > Interfaces*.
2. Click *Create New > VDOM Link*.
3. Configure the fields, including the *Name*, *Virtual Domain*, IP information, *Administrative Access*, and so on, then click *OK*.



By default, VDOM links are created as point-to-point (ppp) links. If required, the link type can be changed in the CLI.

For example, when running OSPF in IPv6, a link-local address is required in order to communicate with OSPF neighbors. For a VDOM link to obtain a link-local address, its type must be set to `ethernet`.

### To configure a VDOM link in the CLI:

```
config global
    config system vdom-link
        edit "<vdom-link-name>"
            set type {ppp | ethernet}
        next
    end
    config system interface
        edit "<vdom-link-name0>"
            set vdom "<VDOM Name>"
            set type vdom-link
        next
        edit "<vdom-link-name1>"
            set vdom "<VDOM Name>"
            set type vdom-link
        next
    end
end
```

### To delete a VDOM link in the GUI:


1. In the *Global VDOM*, go to *Network > Interfaces*.
2. Select a *VDOM Link* and click *Delete*.

### To delete a VDOM link in the CLI:

```
config global
    config system vdom-link
        delete <VDOM-LINK-Name>
    end
end
```

## Allow FortiGuard services and updates to initiate from a traffic VDOM

In multi VDOM mode, users can choose from which VDOM FortiGuard services and updates are initiated from, instead of being locked to the management VDOM. This allows deployment scenarios where the management VDOM resides in a closed management network.

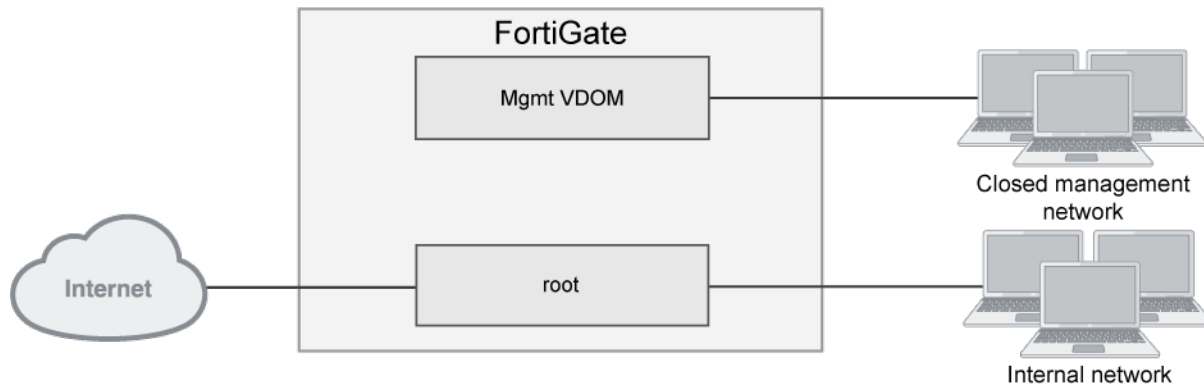

When the management VDOM resides in a closed network, it does not have internet access. FortiGuard services (FortiGuard updates, web filters, DNS proxy, DDNS, and so on) must be configured in a VDOM with Internet access in order to work. Therefore, in the example above, change the FortiGuard settings to initiate from the root VDOM.

### To configure FortiGuard services on a traffic VDOM:

1. Set up a traffic VDOM for FortiGuard services:

```
config global
    config system fortiguard
        set vdom "root"
    end
end
```

2. Ensure the traffic VDOM has the correct gateway to reach the internet:

```
config vdom
    edit root
        config router static
            edit 1
                set gateway 172.16.200.254
                set device "wan1"
            next
        end
    next
end
```

3. Configure the DNS servers to ensure the FortiGuard services can resolve the server name through the traffic VDOM:

```
config vdom
    edit root
        config system vdom-dns
            set vdom-dns enable
            set primary 208.91.112.53
            set secondary 208.91.112.52
        end
    next
end
```

## Backing up and restoring configurations in multi VDOM mode

When a FortiGate is in multi VDOM mode, the configuration can be backed up or restored using the GUI or the CLI. Back up and restoration permissions depend on the VDOM administrator when in multi VDOM mode:

- A global *super\_admin* can back up and restore the global configuration or the configuration of a specific VDOM.
- A VDOM administrator of one VDOM can only back up and restore the configuration of the current VDOM.
- A VDOM administrator of multiple VDOMs can back up and restore the configuration of multiple VDOMs.

### To back up the configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Backup*.
2. Select *VDOM* for the *Scope*. The *VDOM* dropdown menu is displayed.
3. Select the VDOM you want to back up.
4. Direct the backup to your *Local PC* or to a *USB Disk*.
5. Enable *Encryption*.



This is recommended to secure your backup configurations and prevent unauthorized parties from reloading your configuration.

---

6. Enter a password, and enter it again to confirm it. This password will be required to restore the configuration.
7. Click *OK*.
8. When prompted, select a location on the PC or USB disk to save the configuration file. The configuration file will have a *.conf* extension.

### To restore the FortiGate configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Restore*.
2. Select *VDOM* for the *Scope*. The *VDOM* dropdown menu is displayed.
3. Select the VDOM that you want to restore the configuration for.
4. Identify the source of the configuration file to be restored: your *Local PC* or a *USB Disk*.  
The *USB Disk* option will not be available if no USB drive is inserted in the USB port. You can restore from the FortiManager using the CLI.
5. Click *Upload*, locate the configuration file, and click *Open*.



Confirm that the configuration file you are uploading is for the same VDOM selected from the dropdown menu.

---

6. Enter the password if required.
7. Click *OK*.

## Backing up configurations in the CLI

Configuration backups can be performed in the CLI using the `execute backup` commands. If you are backing up a VDOM configuration instead of the global configuration, first enter the commands:

```
config vdom
  edit <vdom_name>
```

Configurations can be backed up in FortiOS and YAML format.

Configuration files can be backed up to various locations depending on the command:

- **flash:** Backup the configuration file to the flash drive.
- **ftp:** Backup the configuration file to an FTP server.
- **sftp:** Backup the configuration file to a SFTP server.
- **tftp:** Backup the configuration file to a TFTP server.
- **usb:** Backup the configuration file to an external USB drive.

| Command                      | Description                                                                                                                                                                                                                 |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| # execute backup config      | Back up the configuration in FortiOS format.<br>Backup your configuration file to: <ul style="list-style-type: none"> <li>• flash</li> <li>• ftp</li> <li>• sftp</li> <li>• tftp</li> <li>• usb</li> </ul>                  |
| # execute backup full-config | Backup the configuration, including backups of default configuration settings.<br>Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• sftp</li> <li>• tftp</li> <li>• usb</li> </ul> |
| # execute backup yaml-config | Backup the configuration in YAML format.<br>Backup your configuration file to: <ul style="list-style-type: none"> <li>• ftp</li> <li>• tftp</li> </ul>                                                                      |

### To back up the configuration in FortiOS format using the CLI:

For FTP, note that port number and username are optional depending on the FTP site:

```
config vdom
  edit <vdom_name>
    execute backup config ftp <backup_filename> <ftp_server>[:<ftp_port>] [<user_name>]
    [<password>] [<backup_password>]
```

or for TFTP:

```
config vdom
  edit <vdom_name>
    execute backup config tftp <backup_filename> <tftp_servers> [<backup_password>]
```

or for SFTP:

```
config vdom
  edit <vdom_name>
    execute backup config sftp <backup_filename> <sftp_server>[:<sftp_port>] <user>
    <password> [<backup_password>]
```

or for an external USB:

```
config vdom
  edit <vdom_name>
    execute backup config usb <backup_filename> [<backup_password>]
```

### To back up the configuration in YAML format using the CLI:

For FTP:

```
config vdom
  edit <vdom_name>
    execute backup yaml-config ftp <file_path> <ftp_server>[:<port>] [<user_name>] [<FTP
password>]
```

or for TFTP:

```
config vdom
  edit <vdom_name>
    execute backup yaml-config tftp <file_path> <tftp_server>
```

## Restoring configurations in the CLI

Restoring configurations can be performed in the CLI using the `execute restore` command. If you are restoring a VDOM configuration instead of the global configuration, first enter the commands:

```
config vdom
  edit <vdom_name>
```

When restoring a VDOM configuration, ensure that the configuration file is for the correct VDOM specified.

| Command                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| # <code>execute restore config</code> | <p>Restore a configuration that is in FortiOS or YAML format.</p> <p>Configurations can be loaded from:</p> <ul style="list-style-type: none"> <li><code>dhcp</code>: Load the configuration through DHCP.</li> <li><code>flash</code>: Load the configuration file from flash to firewall.</li> <li><code>ftp</code>: Load the configuration file from an FTP server.</li> <li><code>tftp</code>: Load the configuration from a TFTP server.</li> <li><code>usb</code>: Load the configuration file from an external USB disk to firewall.</li> </ul> |

### To restore the FortiGate configuration in FortiOS or YAML format using the CLI:

For FTP, note that port number and username are optional depending on the FTP site:

```
config vdom
  edit <vdom_name>
    execute restore config ftp <file_path> <ftp_server>[:<port>] [<user_name>] [<FTP
password>] [<password>]
```

or for TFTP:



```
config vdom
  edit <vdom_name>
    execute restore config tftp <file_name> <tftp_server> [<password>]
```

or for DHCP:

```
config vdom
  edit <vdom_name>
    execute restore config dhcp <port> [<VLAN_ID>]
```

or for flash:

```
config vdom
  edit <vdom_name>
    execute restore config flash <revision_ID>
```


or for an external USB:

```
config vdom
  edit <vdom_name>
    execute restore config usb <file_name> [<password>]
```

## Inter-VDOM routing configuration example: Internet access

This example shows how to configure a FortiGate unit to use inter-VDOM routing to route outgoing traffic from individual VDOMs to a root VDOM with Internet access. See [Inter-VDOM routing on page 2309](#) for more information.

Two departments of a company, Accounting and Sales, are connected to one FortiGate. The company uses a single ISP to connect to the Internet. This is an example of the Internet access configuration. See [Topologies on page 2301](#) for details.

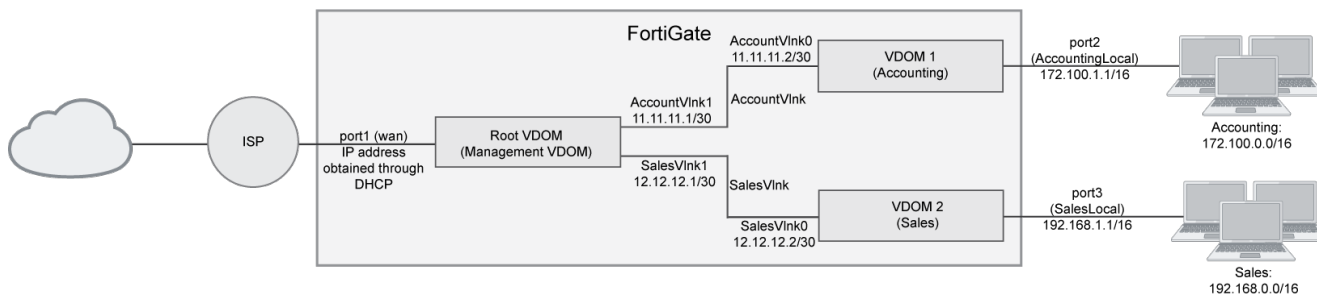

This example assumes that the interfaces of the FortiGate have already been configured with the IP addresses depicted in the preceding diagram.

### General steps for this example

This example includes the following general steps. We recommend following the steps in the order below:

1. [Enable multi VDOM mode and create the VDOMs on page 2316](#)
2. [Assign interfaces to VDOMs on page 2316](#)
3. [Configure the VDOM links on page 2317](#)
4. [Configure inter-VDOM routing on page 2318](#)
5. [Configure the firewall policies on page 2319](#)
6. [Test the configuration on page 2321](#)

This example demonstrates how to configure these steps first using the GUI and then, at the end of the section, using the CLI. See [Configuration with the CLI on page 2321](#) for details.

## Enable multi VDOM mode and create the VDOMs

Create the Accounting and Sales VDOMs.

### To enable VDOMs in the GUI:

1. Go to *System > Settings*.
2. In the *System Operation Settings* section, enable *Virtual Domains*.
3. Click *OK*.



On FortiGate 90 series models and lower, VDOMs can only be enabled using the CLI.

### To create the Sales and Accounting VDOMs in the GUI:

1. In the *Global VDOM*, go to *System > VDOM*.
2. Click *Create New*.
3. In the *Virtual Domain* field, enter *Sales*.

4. If required, set the *NGFW Mode*. If the *NGFW Mode* is *Profile-based*, *Central SNAT* can be enabled.
5. Click *OK* to create the VDOM.
6. Repeat the above steps for *Accounting*.

## Assign interfaces to VDOMs

This example uses three interfaces on the FortiGate unit: port2 (AccountingLocal), port3 (SalesLocal), and port1 (WAN). Port2 and port3 interfaces each have a department's network connected. Port1 is for all traffic to and from the Internet and uses DHCP to configure its IP address, which is common with many ISPs.

### To assign interfaces to VDOMs in the GUI:

1. In the *Global VDOM*, go to *Network > Interfaces*.
2. Select *port2* and click *Edit*.
3. From the *Virtual domain* list, select *Accounting*.

4. Click **OK**.
5. Repeat the preceding steps to assign *port3* to the *Sales* VDOM.
6. Repeat the preceding steps to assign *port1* to the *root* VDOM.

## Configure the VDOM links

To complete the connection between each VDOM and the management VDOM, add the two VDOM links. One pair is the Accounting – management link and the other is the Sales – management link. Each side of these links will be assigned IP addresses since they will be handy in configuring inter-VDOM routing in the next step.

### To configure the Accounting and management VDOM link in the GUI:

1. In the *Global* VDOM, go to *Network > Interfaces*.
2. Select *Create New > VDOM Link*.
3. Enter the following information:

| Name                         | AccountVlnk                      |
|------------------------------|----------------------------------|
| <b>Interface 0</b>           |                                  |
| <b>Virtual Domain</b>        | Accounting                       |
| <b>IP/Netmask</b>            | 11.11.11.2/255.255.255.252       |
| <b>Administrative Access</b> | HTTPS, PING, SSH                 |
| <b>Comment</b>               | Accounting side of the VDOM link |
| <b>Interface 1</b>           |                                  |
| <b>Virtual Domain</b>        | root                             |
| <b>IP/Netmask</b>            | 11.11.11.1/255.255.255.252       |
| <b>Administrative Access</b> | HTTPS, PING, SSH                 |
| <b>Comment</b>               | Management side of the VDOM link |

4. Click **OK**.

### To configure the Sales and management VDOM link in the GUI:

1. In the *Global* VDOM, go to *Network > Interfaces*.
2. Select *Create New > VDOM link*.
3. Enter the following information:

|                              |                                  |
|------------------------------|----------------------------------|
| <b>Name</b>                  | SalesVlnk                        |
| <b>Interface 0</b>           |                                  |
| <b>Virtual Domain</b>        | Sales                            |
| <b>IP/Netmask</b>            | 12.12.12.2/255.255.255.252       |
| <b>Administrative Access</b> | HTTPS, PING, SSH                 |
| <b>Comment</b>               | Accounting side of the VDOM link |
| <b>Interface 1</b>           |                                  |
| <b>Virtual Domain</b>        | root                             |
| <b>IP/Netmask</b>            | 12.12.12.1/255.255.255.252       |
| <b>Administrative Access</b> | HTTPS, PING, SSH                 |
| <b>Comment</b>               | Management side of the VDOM link |

4. Click *OK*.

### Configure inter-VDOM routing

A default static route can be configured on each VDOM to provide Internet access. In other words, this static route would provide inter-VDOM routing between each department VDOM and the root VDOM.

For this static route, these settings are used:

- Default Gateway: IP address of the management side of the VDOM link
  - Accounting VDOM: 11.11.11.1
  - Sales VDOM: 12.12.12.1
- Interface: Interface on the department VDOM side of the VDOM link
  - Accounting VDOM: AccountVlnk0
  - Sales VDOM: SalesVlnk0
- IP address: 0.0.0.0/0.0.0.0 (default)

### To configure the default static route to the Internet in the Accounting VDOM:

1. In the *Accounting* VDOM, go to *Network > Static Routes*.
2. Click on *Create New* and select the version you need.

3. Enter the following information:

|                                |                 |
|--------------------------------|-----------------|
| <b>Destination</b>             | Subnet          |
| <b>IP address</b>              | 0.0.0.0/0.0.0.0 |
| <b>Gateway</b>                 | 11.11.11.1      |
| <b>Interface</b>               | AccountVlink0   |
| <b>Administrative Distance</b> | 10              |

4. Click **OK**.

#### To configure the default static route to the Internet in the Sales VDOM:

1. In the *Sales* VDOM, go to *Network > Static Routes*.
2. Click on *Create New* and select the version you need.
3. Enter the following information:

|                                |                 |
|--------------------------------|-----------------|
| <b>Destination</b>             | Subnet          |
| <b>IP address</b>              | 0.0.0.0/0.0.0.0 |
| <b>Gateway</b>                 | 12.12.12.1      |
| <b>Interface</b>               | SalesVlink0     |
| <b>Administrative Distance</b> | 10              |

4. Click **OK**.

### Configure the firewall policies

With the VDOMs, physical interfaces, VDOM links, and static routes configured, the firewall must now be configured to allow the proper traffic. Firewalls are configured per-VDOM, and firewall objects and routes must be created for each VDOM separately.

#### To configure the firewall policies from AccountingLocal to Internet in the GUI:

1. In the *Accounting* VDOM, go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter the following information:

|                           |                             |
|---------------------------|-----------------------------|
| <b>Name</b>               | Account-Local-to-Management |
| <b>Incoming Interface</b> | port2                       |
| <b>Outgoing Interface</b> | AccountVlink0               |
| <b>Source</b>             | All                         |
| <b>Destination</b>        | All                         |
| <b>Schedule</b>           | always                      |

|                |         |
|----------------|---------|
| <b>Service</b> | ALL     |
| <b>Action</b>  | ACCEPT  |
| <b>NAT</b>     | enabled |

4. Click *OK*.
5. In the *root* VDOM, go to *Policy & Objects > Firewall Policy*.
6. Click *Create New*.
7. Enter the following information:

|                           |                          |
|---------------------------|--------------------------|
| <b>Name</b>               | Account-VDOM-to-Internet |
| <b>Incoming Interface</b> | AccountVInk1             |
| <b>Outgoing Interface</b> | port1                    |
| <b>Source</b>             | All                      |
| <b>Destination</b>        | All                      |
| <b>Schedule</b>           | always                   |
| <b>Service</b>            | ALL                      |
| <b>Action</b>             | ACCEPT                   |
| <b>NAT</b>                | enabled                  |

8. Click *OK*.

#### To configure the firewall policies from SalesLocal to Internet in the GUI:

1. In the *Sales* VDOM, go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter the following information:

|                           |                           |
|---------------------------|---------------------------|
| <b>Name</b>               | Sales-Local-to-Management |
| <b>Incoming Interface</b> | port3                     |
| <b>Outgoing Interface</b> | SalesVInk0                |
| <b>Source</b>             | All                       |
| <b>Destination</b>        | All                       |
| <b>Schedule</b>           | always                    |
| <b>Service</b>            | ALL                       |
| <b>Action</b>             | ACCEPT                    |
| <b>NAT</b>                | enabled                   |

4. Click *OK*.
5. In the *root* VDOM, go to *Policy & Objects > Firewall Policy*.
6. Click *Create New*.

7. Enter the following information:

|                           |                        |
|---------------------------|------------------------|
| <b>Name</b>               | Sales-VDOM-to-Internet |
| <b>Incoming Interface</b> | SalesVlnk1             |
| <b>Outgoing Interface</b> | port1                  |
| <b>Source</b>             | All                    |
| <b>Destination</b>        | All                    |
| <b>Schedule</b>           | always                 |
| <b>Service</b>            | ALL                    |
| <b>Action</b>             | ACCEPT                 |
| <b>NAT</b>                | enabled                |

8. Click OK.

## Test the configuration

When the inter-VDOM routing has been configured, test the configuration to confirm proper operation. Testing connectivity ensures that physical networking connections, FortiGate unit interface configurations, and firewall policies are properly configured.

The easiest way to test connectivity is to use the `ping` and `traceroute` commands on hosts in the Accounting and Sales networks, respectively, to confirm the connectivity of different routes on the network. Test connectivity with hosts connected to port2 (AccountingLocal) in the Accounting VDOM to the internet and hosts connected to port3 (SalesLocal) in the Sales VDOM to the internet.

## Configuration with the CLI

The example can also be configured in the CLI.

### To configure inter-VDOM routing in the CLI:

1. Enable multi VDOM mode:

```
config system global
    set vdom-mode multi-vdom
end
```

You will be logged out of the device when VDOM mode is enabled.

2. Create the Sales and Accounting VDOMs:

```
config vdom
    edit Accounting
    next
    edit Sales
    next
end
```

3. Assign interfaces to the VDOMs:

```
config global
  config system interface
    edit port2
      set vdom Accounting
    next
    edit port3
      set vdom Sales
    next
    edit port1
      set vdom root
    next
  end
end
```

#### 4. Configure the Accounting and management VDOM link:

```
config global
  config system vdom-link
    edit AccountVlnk
      next
    end
  config system interface
    edit AccountVlnk0
      set vdom Accounting
      set ip 11.11.11.2 255.255.255.252
      set allowaccess https ping ssh
      set description "Accounting side of the VDOM link"
    next
    edit AccountVlnk1
      set vdom root
      set ip 11.11.11.1 255.255.255.252
      set allowaccess https ping ssh
      set description "Management side of the VDOM link"
    next
  end
end
```

#### 5. Configure the Sales and management VDOM link:

```
config global
  config system vdom-link
    edit SalesVlnk
      next
    end
  config system interface
    edit SalesVlnk0
      set vdom Sales
      set ip 12.12.12.2 255.255.255.252
      set allowaccess https ping ssh
      set description "Sales side of the VDOM link"
    next
    edit SalesVlnk1
      set vdom root
      set ip 12.12.12.1 255.255.255.252
      set allowaccess https ping ssh
      set description "Management side of the VDOM link"
    next
  end
end
```



```
    end
end
```

**6. Configure the default static route to the Internet in the Accounting VDOM:**

```
config vdom
    edit Accounting
        config router static
            edit 1
                set gateway 11.11.11.1
                set device "AccountVlnk0"
            next
        end
    end
end
```

**7. Configure the default static route to the Internet in the Sales VDOM:**

```
config vdom
    edit Sales
        config router static
            edit 1
                set gateway 12.12.12.1
                set device "SalesVlnk0"
            next
        end
    end
end
```

**8. Configure the firewall policies from AccountingLocal to the Internet:**

```
config vdom
    edit Accounting
        config firewall policy
            edit 1
                set name "Accounting-Local-to-Management"
                set srcintf port2
                set dstintf AccountVlnk0
                set srcaddr all
                set dstaddr all
                set action accept
                set schedule always
                set service ALL
                set nat enable
            next
        end
    next
    edit root
        config firewall policy
            edit 2
                set name "Accounting-VDOM-to-Internet"
                set srcintf AccountVlnk1
                set dstintf port1
                set srcaddr all
                set dstaddr all
                set action accept
                set schedule always
                set service ALL
                set nat enable
            next
        end
    end
end
```

```
        end
    next
end
```

**9. Configure the firewall policies from SalesLocal to the Internet:**


```
config vdom
    edit Sales
        config firewall policy
            edit 3
                set name "Sales-local-to-Management"
                set srcintf port3
                set dstintf SalesVlnk0
                set srcaddr all
                set dstaddr all
                set action accept
                set schedule always
                set service ALL
                set nat enable
            next
        end
    next
edit root
    config firewall policy
        edit 4
            set name "Sales-VDOM-to-Internet"
            set srcintf SalesVlnk1
            set dstintf port1
            set srcaddr all
            set dstaddr all
            set action accept
            set schedule always
            set service ALL
            set nat enable
        next
    end
next
end
```

## Inter-VDOM routing configuration example: Partial-mesh VDOMs

This example shows how to configure a FortiGate unit to use inter-VDOM routing to route traffic between an internal network and FTP server that are each behind separate VDOMs. See [Inter-VDOM routing on page 2309](#) for more information.

The following example shows how to configure per-VDOM settings, such as operation mode, routing, and firewall policies, in a network that includes the following VDOMs:

- VDOM-A: allows the internal network to access the Internet.
- VDOM-B: allows external connections to an FTP server.
- root: the management VDOM.

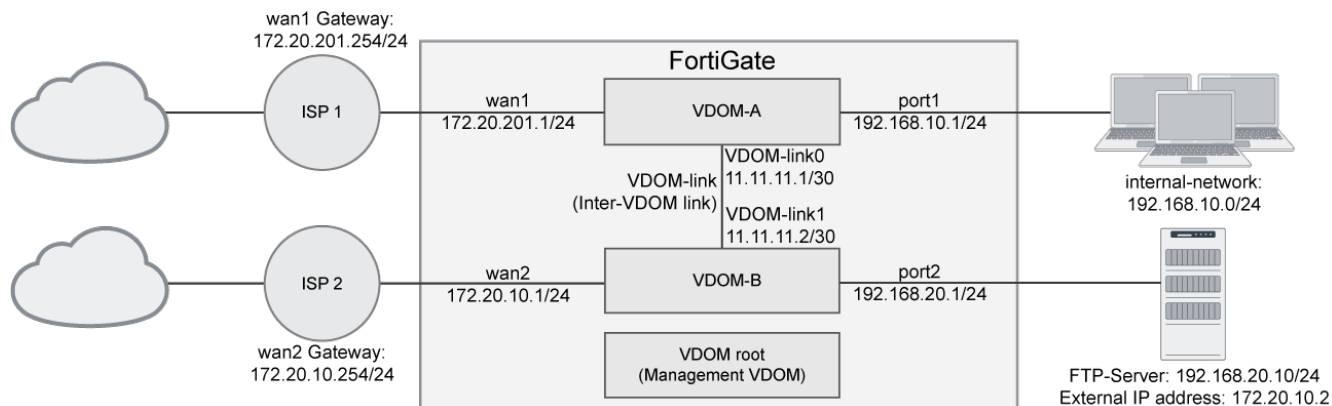

You can use VDOMs in either NAT or transparent mode on the same FortiGate. By default, VDOMs operate in NAT mode. In this example, both VDOM-A and VDOM-B use NAT mode. An inter-VDOM link is created and inter-VDOM routes configured to allow users on the internal network to access the FTP server.

This is an example of the partial-mesh VDOMs configuration since only VDOM-A is connected to VDOM-B but neither of those VDOMs are connected to the root VDOM. See [Topologies on page 2301](#) for details.

This example assumes that the interfaces of the FortiGate have already been configured with the IP addresses depicted in the preceding diagram.

## General steps for this example

This configuration requires the following general steps:

1. [Enable Multi VDOM mode and create the VDOMs on page 2325](#)
2. [Assign interfaces to VDOMs on page 2326](#)
3. [Configure VDOM-A on page 2327](#)
4. [Configure VDOM-B on page 2328](#)
5. [Configure the VDOM link on page 2330](#)
6. [Configure inter-VDOM routing on page 2330](#)
7. [Configure firewall policies using the VDOM link on page 2332](#)

This example demonstrates how to configure these steps first using the GUI and then, at the end of the section, using the CLI. See [Configuration with the CLI on page 2333](#) for details.

## Enable Multi VDOM mode and create the VDOMs

Multi VDOM mode can be enabled in the GUI or CLI. Enabling it does not require a reboot, but does log you out of the device. The current configuration is assigned to the root VDOM.



On FortiGate 90 series models and lower, VDOMs can only be enabled using the CLI.

### To enable multi VDOM mode in the GUI:

1. On the FortiGate, go to *System > Settings*.
2. In the *System Operation Settings* section, enable *Virtual Domains*.
3. Click *OK*.

### To create the VDOMs in the GUI:

1. In the *Global VDOM*, go to *System > VDOM*.  
Click *Create New*.
2. In the *Virtual Domain* field, enter *VDOM-A*.

3. If required, set the *NGFW Mode*. If the *NGFW Mode* is *Profile-based*, *Central SNAT* can be enabled.
4. Click *OK* to create the VDOM.
5. Repeat the above steps for *VDOM-B*.

## Assign interfaces to VDOMs

This example uses three interfaces on the FortiGate unit: port1 (internal network), port2 (FTP server), wan1 (WAN link for VDOM-A), and wan2 (WAN link for VDOM-B). The port1 and port2 interfaces are connected to the internal network and FTP server, respectively. The wan1 and wan2 interfaces are static assigned with IP addresses and default gateways provided by the ISPs for those WAN links.

### To assign interfaces to VDOMs in the GUI:

1. In the *Global VDOM*, go to *Network > Interfaces*.
2. Select *port1* and click *Edit*.
3. From the *Virtual domain* list, select *VDOM-A*.

4. Click *OK*.
5. Repeat the preceding steps to assign *port2* to *VDOM-B*.
6. Repeat the preceding steps to assign *wan1* to *VDOM-A*.
7. Repeat the preceding steps to assign *wan2* to *VDOM-B*.

## Configure VDOM-A

VDOM-A allows connections from devices on the internal network to the Internet. WAN1 and port1 are assigned to this VDOM.

The per-VDOM configuration for VDOM-A includes the following:

- A firewall address for the internal network
- A static route to the ISP gateway
- A firewall policy allowing the internal network to access the Internet

All procedures in this section require you to connect to VDOM-A, either using a global or per-VDOM administrator account.

### To add the firewall addresses in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Enter the following information:

|                   |                            |
|-------------------|----------------------------|
| <b>Name</b>       | internal-network           |
| <b>Type</b>       | Subnet                     |
| <b>IP/Netmask</b> | 192.168.10.0/255.255.255.0 |
| <b>Interface</b>  | port1                      |

4. Click *OK*.

### To add a default route in the GUI:

1. Go to *Network > Static Routes* and create a new route.
2. Enter the following information:

|                                |                 |
|--------------------------------|-----------------|
| <b>Destination</b>             | Subnet          |
| <b>IP address</b>              | 0.0.0.0/0.0.0.0 |
| <b>Gateway</b>                 | 172.20.201.254  |
| <b>Interface</b>               | wan1            |
| <b>Administrative Distance</b> | 10              |

3. Click *OK*.

**To add the firewall policy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter the following information:

|                           |                  |
|---------------------------|------------------|
| <b>Name</b>               | VDOM-A-Internet  |
| <b>Incoming Interface</b> | port1            |
| <b>Outgoing Interface</b> | wan1             |
| <b>Source</b>             | internal-network |
| <b>Destination</b>        | all              |
| <b>Schedule</b>           | always           |
| <b>Service</b>            | ALL              |
| <b>Action</b>             | ACCEPT           |
| <b>NAT</b>                | enabled          |

4. Click *OK*.

**Configure VDOM-B**

VDOM-B allows external connections to reach an internal FTP server. WAN2 and port2 are assigned to this VDOM.

The per-VDOM configuration for VDOM-B includes the following:

- A firewall address for the FTP server
- A virtual IP address for the FTP server
- A static route to the ISP gateway
- A firewall policy allowing external traffic to reach the FTP server

The procedures described above require you to connect to VDOM-B, either using a global or per-VDOM administrator account.

**To add the firewall addresses in the GUI:**

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Enter the following information:

|                   |                              |
|-------------------|------------------------------|
| <b>Name</b>       | FTP-server                   |
| <b>Type</b>       | Subnet                       |
| <b>IP/Netmask</b> | 192.168.10.0/255.255.255.255 |
| <b>Interface</b>  | port2                        |

4. Click *OK*.

**To add the virtual IP address in the GUI:**

1. Go to *Policy & Objects > Virtual IPs*.
2. Click *Create New > Virtual IP*.
3. Enter the following information:

|                                  |                |
|----------------------------------|----------------|
| <b>Name</b>                      | FTP-server-VIP |
| <b>Interface</b>                 | wan2           |
| <b>External IP address/range</b> | 172.20.10.2    |
| <b>Map To</b>                    | 192.168.20.10  |

4. Click *OK*.

**To add a default route in the GUI:**

1. Go to *Network > Static Routes* and create a new route.
2. Enter the following information:

|                                |                 |
|--------------------------------|-----------------|
| <b>Destination</b>             | Subnet          |
| <b>IP address</b>              | 0.0.0.0/0.0.0.0 |
| <b>Gateway</b>                 | 172.20.201.254  |
| <b>Interface</b>               | wan2            |
| <b>Administrative Distance</b> | 10              |

3. Click *OK*.

**To add the firewall policy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter the following information:

|                           |                |
|---------------------------|----------------|
| <b>Name</b>               | Access-server  |
| <b>Incoming Interface</b> | wan2           |
| <b>Outgoing Interface</b> | port2          |
| <b>Source</b>             | all            |
| <b>Destination</b>        | FTP-server-VIP |
| <b>Schedule</b>           | always         |
| <b>Service</b>            | FTP            |
| <b>Action</b>             | ACCEPT         |
| <b>NAT</b>                | enabled        |

4. Click *OK*.

## Configure the VDOM link

The VDOM link allows connections from VDOM-A to VDOM-B. The VDOM link interface configured in this step will be used for inter-VDOM routing.

This step requires you to connect to the global VDOM using a global administrator account.

### To add the VDOM link in the GUI:

1. In the *Global* VDOM, go to *Network > Interfaces*.
2. Create *New > VDOM link*.
3. Enter the following information:

|                       |                            |
|-----------------------|----------------------------|
| <b>Name</b>           | VDOM-link                  |
| <b>Interface 0</b>    |                            |
| <b>Virtual Domain</b> | VDOM-A                     |
| <b>IP/Netmask</b>     | 11.11.11.1/255.255.255.252 |
| <b>Interface 1</b>    |                            |
| <b>Virtual Domain</b> | VDOM-B                     |
| <b>IP/Netmask</b>     | 11.11.11.2/255.255.255.252 |

4. Click *OK*.

## Configure inter-VDOM routing

Inter-VDOM routing allows users on the internal network to route traffic to the FTP server through the FortiGate.

The configuration of inter-VDOM routing includes the following:

- Firewall addresses for the FTP server on VDOM-A and for the internal network on VDOM-B
- Inter-VDOM routing using static routes for the FTP server on VDOM-A and for the internal network on VDOM-B
- Policies allowing traffic using the VDOM link

The procedures described above require you to connect to both VDOM-A and VDOM-B, either using a global or per-VDOM administrator account.

### To add the firewall address on VDOM-A in the GUI:

1. In the *VDOM-A* VDOM, go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.



3. Enter the following information:

|                                   |                  |
|-----------------------------------|------------------|
| <b>Name</b>                       | FTP-server       |
| <b>Type</b>                       | Subnet           |
| <b>IP/Netmask</b>                 | 192.168.20.10/32 |
| <b>Interface</b>                  | VDOM-link2       |
| <b>Static route configuration</b> | enabled          |

4. Click *OK*.

**To add the static route on VDOM-A in the GUI:**

1. Connect to *VDOM-A*.
2. Go to *Network > Static Routes* and create a new route.
3. Enter the following information:

|                      |               |
|----------------------|---------------|
| <b>Destination</b>   | Named Address |
| <b>Named Address</b> | FTP-server    |
| <b>Gateway</b>       | 11.11.11.2    |
| <b>Interface</b>     | VDOM-link0    |

4. Click *OK*.

**To add the firewall address on VDOM-B in the GUI:**

1. In the *VDOM-B* VDOM, go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Enter the following information:

|                                   |                  |
|-----------------------------------|------------------|
| <b>Name</b>                       | internal-network |
| <b>Type</b>                       | Subnet           |
| <b>IP/Netmask</b>                 | 192.168.10.0/24  |
| <b>Interface</b>                  | VDOM-link1       |
| <b>Static route configuration</b> | enabled          |

4. Click *OK*.

**To add the static route on VDOM-B in the GUI:**

1. In the *VDOM-B* VDOM, go to *Network > Static Routes* and create a new route.
2. Enter the following information:

|                    |               |
|--------------------|---------------|
| <b>Destination</b> | Named Address |
|--------------------|---------------|

|                      |                  |
|----------------------|------------------|
| <b>Named Address</b> | internal-network |
| <b>Gateway</b>       | 11.11.11.1       |
| <b>Interface</b>     | VDOM-link1       |

3. Click *OK*.

### Configure firewall policies using the VDOM link

Firewall policies using the VDOM link allows users on the internal network to access the FTP server through the FortiGate.

Configuring policies allowing traffic using the VDOM link require you to connect to both VDOM-A and VDOM-B, respectively, either using a global or per-VDOM administrator account.

#### To add the firewall policy on VDOM-A in the GUI:

1. In the *VDOM-A* VDOM, go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Enter the following information:

|                           |                   |
|---------------------------|-------------------|
| <b>Name</b>               | Access-FTP-server |
| <b>Incoming Interface</b> | port1             |
| <b>Outgoing Interface</b> | VDOM-link0        |
| <b>Source</b>             | internal-network  |
| <b>Destination</b>        | FTP-server        |
| <b>Schedule</b>           | always            |
| <b>Service</b>            | FTP               |
| <b>Action</b>             | ACCEPT            |
| <b>NAT</b>                | disabled          |

4. Click *OK*.

#### To add the firewall policy on VDOM-B in the GUI:

1. In the *VDOM-B* VDOM, go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.

3. Enter the following information:

|                           |                        |
|---------------------------|------------------------|
| <b>Name</b>               | Internal-server-access |
| <b>Incoming Interface</b> | VDOM-link1             |
| <b>Outgoing Interface</b> | port2                  |
| <b>Source</b>             | internal-network       |
| <b>Destination</b>        | FTP-server             |
| <b>Schedule</b>           | always                 |
| <b>Service</b>            | FTP                    |
| <b>Action</b>             | ACCEPT                 |
| <b>NAT</b>                | disabled               |

4. Click OK.

## Configuration with the CLI

The example can also be configured in the CLI.

### To configure the two VDOMs:

1. Enable multi VDOM mode:

```
config system global
    set vdom-mode multi-vdom
end
```

You will be logged out of the device when VDOM mode is enabled.

2. Create the VDOMs:

```
config vdom
    edit VDOM-A
    next
    edit VDOM-B
    next
end
```

3. Assign interfaces to the VDOMs:

```
config global
    config system interface
        edit port1
            set vdom VDOM-A
        next
        edit port2
            set vdom VDOM-B
        next
        edit wan1
            set vdom VDOM-A
        next
        edit wan2
```

```
        set vdom VDOM-B
    next
end
end
```

**4. Add the firewall addresses to VDOM-A:**

```
config vdom
    edit VDOM-A
        config firewall address
            edit internal-network
                set associated-interface port1
                set subnet 192.168.10.0 255.255.255.0
            next
        end
    next
end
```

**5. Add a default route to VDOM-A:**

```
config vdom
    edit VDOM-A
        config router static
            edit 0
                set gateway 172.20.201.254
                set device wan1
            next
        end
    next
end
```

**6. Add the firewall policy to VDOM-A:**

```
config vdom
    edit VDOM-A
        config firewall policy
            edit 1
                set name "VDOM-A-Internet"
                set srcintf "port1"
                set dstintf "wan1"
                set srcaddr "internal-network"
                set dstaddr "all"
                set action accept
                set schedule "always"
                set service "ALL"
                set nat enable
            next
        end
    next
end
```

**7. Add the firewall addresses to VDOM-B:**

```
config vdom
    edit VDOM-B
        config firewall address
            edit FTP-server
                set associated-interface port2
                set subnet 192.168.20.10 255.255.255.255
```

```
        next
    end
    next
end
```

**8. Add the virtual IP address to VDOM-B:**

```
config vdom
    edit VDOM-B
        config firewall vip
            edit FTP-server-VIP
                set extip 172.20.10.2
                set extintf wan2
                set mappedip 192.168.20.10
            next
        end
    next
end
```

**9. Add a default route to VDOM-B:**

```
config vdom
    edit VDOM-B
        config router static
            edit 0
                set gateway 172.20.10.254
                set device wan2
            next
        end
    next
end
```

**10. Add the firewall policy to VDOM-B:**

```
config vdom
    edit VDOM-B
        config firewall policy
            edit 1
                set name "Access-server"
                set srcintf "wan2"
                set dstintf "port2"
                set srcaddr "all"
                set dstaddr "FTP-server-VIP"
                set action accept
                set schedule "always"
                set service "FTP"
                set nat enable
            next
        end
    next
end
```

**To configure the VDOM link:****1. Configure the VDOM link:**

```
config global
    config system vdom-link
```

```
        edit "VDM-link"
        next
    end
    config system interface
        edit VDM-link0
            set vdom VDM-A
            set ip 11.11.11.1 255.255.255.252
            set allowaccess https ping ssh
            set description "VDM-A side of the VDM link"
        next
        edit VDM-link1
            set vdom VDM-B
            set ip 11.11.11.2 255.255.255.252
            set allowaccess https ping ssh
            set description "VDM-A side of the VDM link"
        next
    end
end
```

## 2. Configure the firewall addresses on VDM-A:

```
config vdom
    edit VDM-A
        config firewall address
            edit "FTP-server"
                set associated-interface "VDM-link0"
                set allow-routing enable
                set subnet 192.168.20.10 255.255.255.255
            next
        end
    next
end
```

## 3. Add the firewall policy to VDM-B:

```
config vdom
    edit VDM-B
        config firewall policy
            edit 1
                set name "Access-server"
                set srcintf "wan2"
                set dstintf "port2"
                set srcaddr "all"
                set dstaddr "FTP-server-VIP"
                set action accept
                set schedule "always"
                set service "FTP"
                set nat enable
            next
        end
    next
end
```

## 4. Add the static route on VDM-A:

```
config vdom
    edit VDM-A
        config router static
```

```
        edit 0
            set device VDOM-link0
            set dstaddr FTP-server
            set gateway 11.11.11.2
        next
    end
next
end
```

**5. Configure the firewall addresses on VDOM-B:**

```
config vdom
    edit VDOM-B
        config firewall address
            edit internal-network
                set associated-interface VDOM-link1
                set allow-routing enable
                set subnet 192.168.10.0 255.255.255.0
            next
        end
    next
end
```

**6. Add the static route on VDOM-B:**

```
config vdom
    edit VDOM-B
        config router static
            edit 0
                set device VDOM-link1
                set dstaddr internal-network
                set gateway 11.11.11.1
            next
        end
    next
end
```

**7. Add the security policy on VDOM-A:**

```
config vdom
    edit VDOM-A
        config firewall policy
            edit 0
                set name Access-FTP-server
                set srcintf port1
                set dstintf VDOM-link0
                set srcaddr internal-network
                set dstaddr FTP-server
                set action accept
                set schedule always
                set service FTP
            next
        end
    next
end
```

**8. Add the firewall policy on VDOM-B:**

```
config vdom
  edit VDOM-B
    config firewall policy
      edit 0
        set name Internal-server-access
        set srcintf VDOM-link1
        set dstintf port2
        set srcaddr internal-network
        set dstaddr FTP-server
        set action accept
        set schedule always
        set service FTP
      next
    end
  next
end
```

## High Availability

Whether your FortiGate is used as a security gateway, an internal segmentation firewall, in the cloud, or in an MSSP environment, as long as there is critical traffic passing through it, there is risk of it being a single point of failure. Physical outages can occur due to power failures, physical link failures, transceiver failures, or power supply failures. Non-physical outages can be caused by routing, resource issues, or kernel panic.

Network outages cause disruptions to business operations, downtime, and frustration for users and in some situations may have financial setbacks. In designing your network and architecture, it is important to weigh the risks and consequences associated with unexpected outages.

There are many ways to build redundancy and resiliency. In a switching network, you can accomplish this by adding redundant links and switches in partial or full mesh topologies. Using redundant and aggregate links, you can avoid a single link failure causing a network to go down. Using SD-WAN, you can build redundant and intelligent WAN load balancing and failover architectures.

FortiGate HA offers several solutions for adding redundancy in the case where a failure occurs on the FortiGate, or is detected by the FortiGate through monitored links, routes, and other health checks. These solutions support fast failover to avoid lengthy network outages and disruptions to your traffic.

## FortiGate Clustering Protocol (FGCP)

FGCP provides a solution for two key requirements of critical enterprise networking components: enhanced reliability and increased performance. Enhanced reliability is achieved through device failover protection, link failover protection, and remote link failover protection. Session failover protection for most IPv4 and IPv6 sessions also contributes to enhanced reliability. Increased performance is achieved through active-active HA load balancing.

## FortiGate Session Life Support Protocol (FGSP)

In a network that already includes load balancing (either with load balancers or routers) for traffic redundancy, two entities (either standalone FortiGates or FGCP clusters) can be integrated into the load balancing configuration using the FortiGate Session Life Support Protocol (FGSP). The external load balancers or routers can distribute sessions among



the FortiGates and the FGSP performs session synchronization of IPv4 and IPv6 TCP, SCTP, UDP, ICMP, expectation, and NAT sessions to keep the session tables of both entities synchronized. In the event of a failure, the load balancer can detect the failed unit and failover the sessions to other active members to continue processing the traffic.

## VRRP

FortiGates can function as primary or backup Virtual Router Redundancy Protocol (VRRP) routers. The FortiGates can quickly and easily integrate into a network that has already deployed VRRP. A FortiGate can be integrated into a VRRP group with any third-party VRRP devices, and VRRP can provide redundancy between multiple FortiGates. FortiOS supports VRRP version 2 and 3.


The following topics provide more information about each HA solution and other HA related topics:

- [FGCP on page 2339](#)
- [FGSP on page 2407](#)
- [Standalone configuration synchronization on page 2458](#)
- [VRRP on page 2463](#)

## FGCP

High availability (HA) is usually required in a system where there is high demand for little downtime. There are usually hot-swaps, backup routes, or standby backup units and as soon as the active entity fails, backup entities will start functioning. This results in minimal interruption for the users.

The FortiGate Clustering Protocol (FGCP) is a proprietary HA solution whereby FortiGates can find other member FortiGates to negotiate and create a cluster. A FortiGate HA cluster consists of at least two FortiGates (members) configured for HA operation. All FortiGates in the cluster must be the same model and have the same firmware installed. Cluster members must also have the same hardware configuration (such as the same number of hard disks). All cluster members share the same configurations except for their host name and priority in the HA settings. The cluster works like a device but always has a hot backup device.

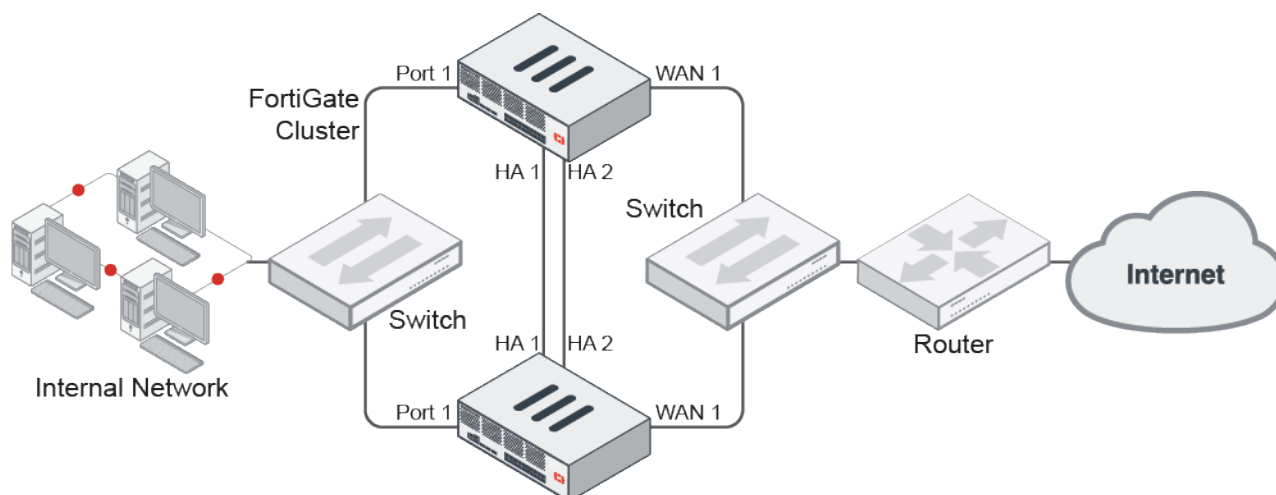

### Critical cluster components

The following are critical components in an HA cluster:

- Identical heartbeat connections and interfaces: members will use this to communicate with each other. In general, a two-member cluster is most common. We recommend double back-to-back heartbeat connections (as demonstrated in the topology).
- Identical connections for internal and external interfaces: we recommend similar connections from each member to the switches for the cluster to function properly (as demonstrated in the topology).



The HA heartbeat interface communicates with each unit in the cluster using the same heartbeat interface for each member.

For example, if port1 and port2 are the heartbeat interfaces for the HA cluster, then in a cluster consisting of two members:

- port1 of the primary FortiGate should be connected to port1 of the secondary FortiGate.
- port2 of the primary FortiGate should be connected to port2 of the secondary FortiGate.

## General operation

The following are best practices for general cluster operation:

- Ensure that heartbeat communication is present (see [HA heartbeat interface on page 2344](#)).
- Enable the session synchronization option in daily operation (see [FGSP basic peer setup on page 2409](#)).
- Monitor traffic flowing in and out of the interfaces.

## Failover

FGCP provides failover protection in the following scenarios:

- The active device loses power.
- A monitored interface loses a connection.

After failover occurs, the user will not notice any difference, except that the active device has changed. See [Failover protection on page 2341](#) for more information.

## Synchronizing the configuration

FGCP uses a combination of incremental and periodic synchronization to make sure that the configuration of all cluster units is synchronized to that of the primary unit.

The following settings are not synchronized between cluster units:

- The FortiGate host name
- GUI Dashboard widgets
- HA override
- HA device priority
- The virtual cluster priority
- The HA priority setting for a ping server (or dead gateway detection) configuration
- The system interface settings of the HA reserved management interface
- The HA default route for the reserved management interface, set using the `ha-mgmt-interface-gateway` option of the `config system ha` command

Most subscriptions and licenses are not synchronized, as each FortiGate must be licensed individually. FortiToken Mobile is an exception; they are registered to the primary unit and synchronized to the secondary units.

The primary unit synchronizes all other configuration settings, including the other HA configuration settings.

All synchronization activity takes place over the HA heartbeat link using TCP/703 and UDP/703 packets.

The following topics provide more information about FGCP:

- [Failover protection on page 2341](#)
- [HA heartbeat interface on page 2344](#)
- [Unicast HA heartbeat on page 2352](#)
- [HA active-passive cluster setup on page 2352](#)
- [HA active-active cluster setup on page 2354](#)
- [HA and load balancing on page 2356](#)
- [HA virtual cluster setup on page 2358](#)
- [Check HA synchronization status on page 2364](#)
- [Out-of-band management with reserved management interfaces on page 2367](#)
- [In-band management on page 2373](#)
- [Upgrading FortiGates in an HA cluster on page 2374](#)
- [Distributed HA clusters on page 2374](#)
- [HA between remote sites over managed FortiSwitches on page 2376](#)
- [HA using a hardware switch to replace a physical switch on page 2380](#)
- [VDOM exceptions on page 2382](#)
- [Override FortiAnalyzer and syslog server settings on page 2384](#)
- [Routing NetFlow data over the HA management interface on page 2388](#)
- [Force HA failover for testing and demonstrations on page 2390](#)
- [Disabling stateful SCTP inspection on page 2392](#)
- [Resume IPS scanning of ICCP traffic after HA failover on page 2393](#)
- [Querying autoscale clusters for FortiGate VM on page 2396](#)
- [Cluster virtual MAC addresses on page 2397](#)
- [Abbreviated TLS handshake after HA failover on page 2401](#)
- [Session synchronization during HA failover for ZTNA proxy sessions on page 2403](#)
- [Troubleshoot an HA formation on page 2405](#)

## Failover protection

The FortiGate Clustering Protocol (FGCP) provides failover protection, meaning that a cluster can provide FortiGate services even when one of the devices in the cluster encounters a problem that would result in the complete loss of connectivity for a stand-alone FortiGate unit. Failover protection provides a backup mechanism that can be used to reduce the risk of unexpected downtime, especially in mission-critical environments.

FGCP supports failover protection in four ways:

1. If a link fails.
2. If a device loses power.
3. If an SSD fails.
4. If memory utilization exceeds the threshold for a specified amount of time.

When session-pickup is enabled in the HA settings, existing TCP session are kept, and users on the network are not impacted by downtime as the traffic can be passed without reestablishing the sessions.

## When and how the failover happens

### 1. Link fails

Before triggering a failover when a link fails, the administrator must ensure that monitor interfaces are configured. Normally, the internal interface that connects to the internal network, and an outgoing interface for traffic to the internet or outside the network, should be monitored. Any of those links going down will trigger a failover.

### 2. Loss of power for active unit

When an active (primary) unit loses power, a backup (secondary) unit automatically becomes the active, and the impact on traffic is minimal. There are no settings for this kind of fail over.

### 3. SSD failure

An HA failover can be triggered by an SSD failure.

#### To enable an SSD failure triggering HA fail over:

```
config system ha
    set ssd-failover enable
end
```

### 4. Memory utilization

An HA failover can be triggered when memory utilization exceeds the threshold for a specific amount of time.

Memory utilization is checked at the configured sample rate (`memory-failover-sample-rate`). If the utilization is above the threshold (`memory-failover-threshold`) every time that it is sampled for the entire monitor period (`memory-failover-monitor-period`), then a failover is triggered.

If the FortiGate meets the memory utilization conditions to cause failover, but the last memory triggered failover happened within the timeout period (`memory-failover-flip-timeout`), then the failover does not occur. Other HA cluster members can still trigger memory based failovers if they meet the criteria and have not already failed within the timeout period.

After a memory based failover from FortiGate A to FortiGate B, if the memory usage on FortiGate A goes down below the threshold but the memory usage on FortiGate B is still below the threshold, then a failover is triggered, and FortiGate A becomes the primary device.

When you disable memory based failover, a new HA primary selection occurs to determine the primary device.

#### To configure memory based HA failover:

```
config system ha
    set memory-based-failover {enable | disable}
    set memory-failover-threshold <integer>
    set memory-failover-monitor-period <integer>
    set memory-failover-sample-rate <integer>
    set memory-failover-flip-timeout <integer>
end
```


|                                                          |                                                                                                                                          |
|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <code>memory-based-failover</code><br>{enable   disable} | Enable/disable memory based failover (default = disable).                                                                                |
| <code>memory-failover-threshold</code><br><integer>      | The memory usage threshold to trigger a memory based failover, in percentage (0 - 95, 0 = use the conserve mode threshold, default = 0). |
| <code>memory-failover-monitor-period</code><br><integer> | The duration of the high memory usage before a memory based failover is triggered, in seconds (1 - 300, default = 60).                   |
| <code>memory-failover-sample-rate</code><br><integer>    | The rate at which memory usage is sampled in order to measure memory usage, in seconds (1 - 60, default = 1).                            |
| <code>memory-failover-flip-timeout</code><br><integer>   | The time to wait between subsequent memory based failovers, in minutes (6 - 2147483647, default = 6).                                    |

## Configuring HA failover time

On supported models, the HA heartbeat interval unit can be changed from the 100ms default to 10ms. This allows for a failover time of less than 50ms, depending on the configuration and the network.

```
config system ha
    set hb-interval-in-milliseconds {100ms | 10ms}
end
```

In this example, the HA heartbeat interval unit is changed from 100ms to 10ms. As the default heartbeat interval is two, this means that a heartbeat is sent every 20ms. The number of lost heartbeats that signal a failure is also changed to two. So, after two consecutive heartbeats are lost, a failover will be detected in 40ms.

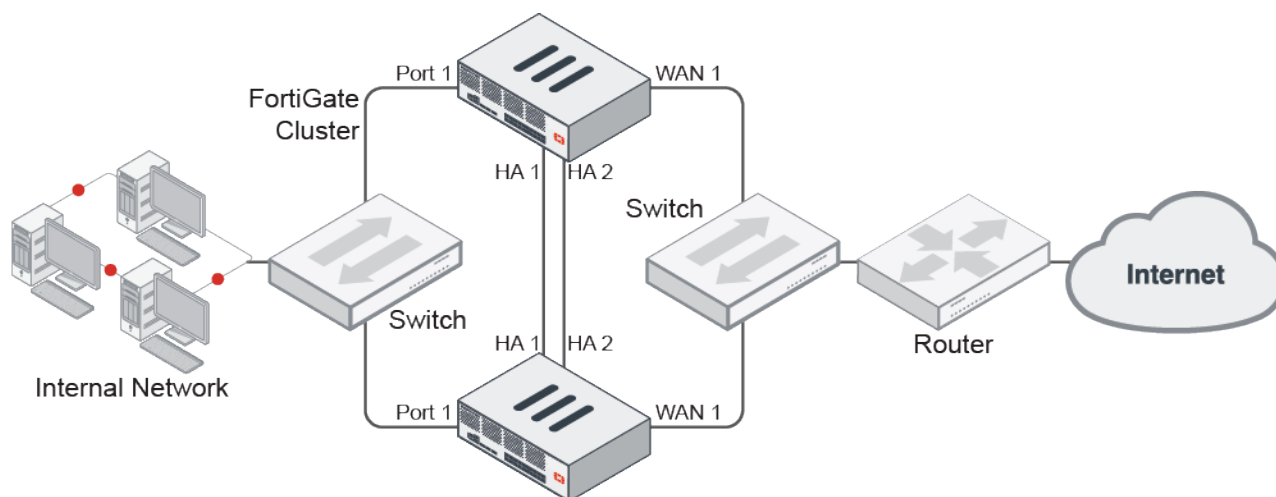

### To configure the HA failover time:

```
config system ha
    set group-id 240
    set group-name "300D"
    set mode a-p
    set hbdev "port3" 50 "port5" 100
    set hb-interval 2
    set hb-interval-in-milliseconds 10ms
    set hb-lost-threshold 2
    set override enable
```

```
set priority 200
end
```

## HA heartbeat interface

The HA heartbeat allows cluster units to communicate with each other. The heartbeat consists of hello packets that are sent at regular intervals by the heartbeat interface of all cluster units. The hello packets describe the state of the cluster unit (including communication sessions) and are used by other cluster units to keep the cluster synchronized. While the cluster is operating, the HA heartbeat confirms that all cluster units are functioning normally.

HA heartbeat packets are Layer 2 Ethernet frames that use EtherType values of 0x8890 and 0x8891 rather than 0x0800 for normal 802.3 IP packets. The default time interval between HA heartbeats is 200 ms.

As a best practice, it is recommended to isolate the heartbeat devices from the user networks by connecting the heartbeat devices to a dedicated switch that is not connected to any network. The heartbeat packets contain sensitive information about the cluster configuration and may use a considerable amount of network bandwidth. If the cluster consists of two FortiGates, connect the heartbeat device interfaces back-to-back using a crossover cable. If there are more than two FortiGates, each heartbeat interface should be connected to a dedicated switch. For example, in a four-member HA cluster with two heartbeat interfaces, there would be two switches (one switch dedicated to each interface).

Upon starting up, a FortiGate configured for HA broadcasts HA heartbeat hello packets from its HA heartbeat interface to find other FortiGates configured to operate in HA mode. If two or more FortiGates operating in HA mode connect with each other, they compare HA configurations (mode, password, and group ID). If the HA configurations match, then the units negotiate to form a cluster.



The HA heartbeat interface communicates with each unit in the cluster using the same heartbeat interface for each member.

For example, if port1 and port2 are the heartbeat interfaces for the HA cluster, then in a cluster consisting of two members:

- port1 of the primary FortiGate should be connected to port1 of the secondary FortiGate.
- port2 of the primary FortiGate should be connected to port2 of the secondary FortiGate.

## Configuring an HA heartbeat interface

A heartbeat interface is an Ethernet network interface in a cluster that is used by the FGCP for HA heartbeat communications between cluster units.

By default, two interfaces are configured to be heartbeat interfaces on most FortiGate models. The heartbeat interface configuration can be changed to select an additional or different heartbeat interface. It is possible to select only one heartbeat interface; however, this is not a recommended configuration (see [Split brain scenario on page 2345](#)).

Another important setting in the HA configuration is the heartbeat interface priority. In all cases, the heartbeat interface with the highest priority is used for all HA heartbeat communication. If the interface fails or becomes disconnected, then the selected heartbeat interface with the next highest priority handles all HA heartbeat communication.

If more than one heartbeat interface has the same priority, the heartbeat interface with the highest priority that is also highest in the heartbeat interface list is used for all HA heartbeat communication. If this interface fails or becomes disconnected, then the selected heartbeat interface with the highest priority that is next highest in the list handles all heartbeat communication (see [Selecting heartbeat packets and interfaces on page 2346](#)).

The default heartbeat interface configuration sets the priority of both heartbeat interfaces to 50, and the range is 0 to 512. When selecting a new heartbeat interface, the default priority is 0. The higher the number, the higher the priority.

In most cases, the default heartbeat interface configuration can be maintained as long the heartbeat interfaces are connected. Configuring HA heartbeat interfaces is the same for virtual clustering and for standard HA clustering. Up to eight heartbeat interface can be selected. This limit only applies to FortiGates with more than eight physical interfaces.



Heartbeat communications can be enabled on physical interfaces, but not on switch ports, VLAN subinterfaces, IPsec VPN interfaces, redundant interfaces, or 802.3ad aggregate interfaces.

### To change the heartbeat interfaces in the GUI:

1. Go to *System > HA* and select a *Mode*.
2. Click the + in the *Heartbeat interfaces* field to select an interface.
3. Click *OK*.

### To configure two interfaces as heartbeat interfaces with the same priority in the CLI:

```
config system ha
    set hbdev port4 150 port5 150
end
```

In this example, port4 and port5 are configured as the HA heartbeat interfaces and they both have a priority of 150.

### To configure two interfaces as heartbeat interfaces with different priorities in the CLI:

```
config system ha
    set hbdev port4 100 port1 50
end
```

In this example, port4 and port1 are configured as the HA heartbeat interfaces. The priority for port4 is higher (100) than port1 (50), so port4 is the preferred HA heartbeat interface.

### Split brain scenario

At least one heartbeat interface must be selected for the HA cluster to function correctly. This interface must be connected to all the units in the cluster. If heartbeat communication is interrupted and cannot fail over to a second heartbeat interface, then the cluster units will not be able to communicate with each other and more than one cluster unit may become a primary unit. As a result, the cluster stops functioning normally because multiple devices on the network may be operating as primary units with the same IP and MAC addresses creating a split brain scenario. See [Split brain scenario: on page 2406](#) for more information.

### Sharing heartbeat interfaces with traffic ports

HA heartbeat and data traffic is supported on the same cluster interface. In NAT mode, if the heartbeat interfaces are used for processing network traffic, then the interface can be assigned any IP address. The IP address does not affect HA heartbeat traffic.

In transparent mode, the heartbeat interface can be connected to the network with management access enabled on the same interface. A management connection would then be established to the interface using the transparent mode management IP address. This configuration does not affect HA heartbeat traffic.

While these configurations are allowable, they are not recommended. When possible, use dedicated interfaces for heartbeat traffic.

## Selecting heartbeat packets and interfaces

HA heartbeat hello packets are sent constantly by all of the enabled heartbeat interfaces. Using these hello packets, each cluster unit confirms that the other cluster units are still operating. The FGCP selects one of the heartbeat interfaces to be used for communication between the cluster units. This interface is used for heartbeat communication and is based on the linkfail states of the heartbeat interfaces, the heartbeat interface priority, and the interface index. The connected heartbeat interface with the highest priority is selected for heartbeat communication.

If more than one connected heartbeat interface has the highest priority, then the FGCP selects the heartbeat interface with the lowest interface index. The interface index order is visible in the CLI by running the `diagnose netlink interface list` command.

If the interface that is processing heartbeat traffic fails or becomes disconnected, the FGCP uses the same criteria to select another heartbeat interface for heartbeat communication. If the original heartbeat interface is fixed or reconnected, the FGCP selects this interface again for heartbeat communication.

The HA heartbeat interface communicates cluster session information, synchronizes the cluster configuration, synchronizes the cluster kernel routing table, and reports individual cluster member statuses. The HA heartbeat constantly communicates HA status information to make sure that the cluster is operating properly.

## Modifying heartbeat timing

The heartbeat interval and heartbeat lost threshold are two variables that dictate the length of time one cluster unit will wait before determining a peer is dead.

```
config system ha
    set hb-interval <integer>
    set hb-interval-in-milliseconds {100 | 10}
    set hb-lost-threshold <integer>
end
```

|                                                     |                                                                                                                   |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| <code>hb-interval &lt;integer&gt;</code>            | Set the time between sending heartbeat packets; increase to reduce false positives (1 - 20, default = 2).         |
| <code>hb-interval-in-milliseconds {100   10}</code> | Set the number of milliseconds for each heartbeat interval (100 or 10, default = 100).                            |
| <code>hb-lost-threshold &lt;integer&gt;</code>      | Set the number of lost heartbeats to signal a failure; increase to reduce false positives (1 - 60, default = 20). |

Heartbeats are sent out every  $2 \times 100$  ms, and it takes 20 consecutive lost heartbeats for a cluster member to be detected as dead. Therefore, it takes by default  $2 \times 100$  ms  $\times$  20 = 4000 ms, or 4 seconds, for a failure to be detected.

Sub-second heartbeat failure detection can be achieved by lowering the interval and threshold or lowering the heartbeat interval unit of measurement from 100 ms to 10 ms.

If the primary unit does not receive a heartbeat packet from a subordinate unit before the heartbeat threshold expires, the primary unit assumes that the subordinate unit has failed.

If a subordinate unit does not receive a heartbeat packet from the primary unit before the heartbeat threshold expires, the subordinate unit assumes that the primary unit has failed. The subordinate unit then begins negotiating to become the new primary unit.

The HA heartbeat packets consume more bandwidth if the heartbeat interval is short. But if the heartbeat interval is very long, the cluster is not as sensitive to topology and other network changes. Therefore, gauge your settings based on the



amount of traffic and CPU usage sustainable by the cluster units versus the tolerance for an outage when the primary unit fails. Avoid using the heartbeat interfaces as traffic ports to prevent congesting the interfaces.

## Changing the time to wait in the hello state

The hello state hold down time is the number of seconds that a cluster unit waits before changing from hello state to work state. After a failure or when starting up, cluster units operate in the hello state to send and receive heartbeat packets so that all the cluster units can find each other and form a cluster. A cluster unit should change from the hello state to work state after it finds all the other FortiGate units to form a cluster with.

If all cluster units cannot find each other during the hello state, then some cluster units may join the cluster after it has formed. This can cause disruptions to the cluster and affect how it operates. A delay could occur if the cluster units are located at different sites or if communication is delayed between the heartbeat interfaces. If delays occur, increase the cluster units wait time in the hello state.

```
config system ha
    set hello-holddown <integer>
end
```

|                                             |                                                                                                    |
|---------------------------------------------|----------------------------------------------------------------------------------------------------|
| <code>hello-holddown &lt;integer&gt;</code> | Set the time to wait before changing from hello to work state, in seconds (5 - 300, default = 20). |
|---------------------------------------------|----------------------------------------------------------------------------------------------------|

## Configuring HA heartbeat encryption and authentication

HA heartbeat encryption and authentication to encrypt and authenticate HA heartbeat packets can be enabled. HA heartbeat packets should be encrypted and authenticated if the cluster interfaces that send HA heartbeat packets are also connected to the networks. HA heartbeat encryption and authentication are disabled by default. Note that enabling these settings could reduce cluster performance.

```
config system ha
    set authentication {enable | disable}
    set encryption {enable | disable}
end
```

If HA heartbeat packets are not encrypted, the cluster password and changes to the cluster configuration could be exposed. An attacker may be able to sniff HA packets to get cluster information. Enabling HA heartbeat message authentication prevents an attacker from creating false HA heartbeat messages. False HA heartbeat messages could affect the stability of the cluster.

HA authentication and encryption uses AES-128 for encryption and SHA1 for authentication. Heartbeat messages are encrypted and encapsulated in ESP packets for transfer in an IPsec tunnel between the cluster members.

## Heartbeat bandwidth requirements

The majority of the traffic processed by the HA heartbeat interface is session synchronization traffic. Other heartbeat interface traffic required to synchronize IPsec states, IPsec keys, routing tables, configuration changes, and so on is usually negligible.

The amount of traffic required for session synchronization depends on the connections per second (CPS) that the cluster is processing, since only new sessions (and session table updates) need to be synchronized.

Another factor to consider is that if session pickup is enabled, the traffic on the heartbeat interface surges during a failover or when a unit joins or re-joins the cluster. When one of these events occurs, the entire session table needs to be

synchronized. Lower throughput HA heartbeat interfaces may increase failover time if they cannot handle the higher demand during these events.

The amount of heartbeat traffic can also be reduced by:

- Turning off session pickup if it is not needed
- Enabling `session-pickup-delay` to reduce the number of sessions that are synchronized
- Using the `session-sync-dev` option to move session synchronization traffic off of the heartbeat link

## Heartbeat packet EtherTypes

Normal 802.3 IP packets have an EtherType field value of 0x0800. EtherType values other than 0x0800 are understood as Layer 2 frames rather than IP packets.

HA heartbeat packets use the following EtherTypes:

| Field value | Function                                           | Description                                                                                                                                                                                                                                                                |
|-------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0x8890      | Heartbeat                                          | Heartbeat packets are used by cluster units to find other cluster units, and to verify the status of other cluster units while the cluster is operating.<br>Use the <code>ha-eth-type</code> option to change the EtherType.                                               |
| 0x8891      | Traffic redistribution from primary to subordinate | These are used when the HA primary needs to redistribute traffic packets and the corresponding session information to the subordinate units in A-A mode.<br>Use the <code>hc-eth-type</code> option to change the EtherType.                                               |
| 0x8892      | Session synchronization                            | Session synchronization uses the heartbeat interfaces for communication, unless session synchronization devices are specified. See <a href="#">Session synchronization on page 2348</a> for more information.                                                              |
| 0x8893      | HA Telnet sessions (configuration synchronization) | The Telnet sessions are used to synchronize the cluster configurations, and to connect from one cluster unit's CLI to another when an administrator uses the <code>execute ha manage</code> command.<br>Use the <code>l2ep-eth-type</code> option to change the EtherType. |

## Session synchronization

Since large amounts of session synchronization traffic can increase network congestion, it is recommended to keep this traffic off of the network and separate from the HA heartbeat interfaces by using dedicated connections for it. The interfaces are configured in the `session-sync-dev` setting.

The session synchronization device interfaces must be connected together by directly using the appropriate cable or using switches. If one of the interfaces becomes disconnected, then the cluster uses the remaining interfaces for session synchronization. If all the session synchronization interfaces become disconnected, then session synchronization reverts to using the HA heartbeat link.

All session synchronization traffic is between the primary unit and each subordinate unit. Session synchronization always uses UDP/708, but this will be encapsulated differently depending on the `session-sync-dev` setting. If

`session-sync-dev` is specified, the packets will use 0x8892 and will exit over the mentioned port. If `session-sync-dev` is not specified, the packets will use 0x8893 and will exit the heartbeat port.

Session synchronization packets are typically processed by a single CPU core because all source and destination MAC addresses of the L2 frames are the same. Hashing based on the L2 addresses maps the processing of the frames to the same core. When large amounts of session synchronization traffic must be processed, enable the `sync-packet-balance` setting to distribute the processing to more cores. This effectively uses a larger set of MAC addresses for the hashing to map to multiple cores.

## Troubleshooting heartbeat packets

Understanding the different types of heartbeat packets will ease troubleshooting. Heartbeat packets are recognized as Layer 2 frames. The switches and routers on the heartbeat network that connect to heartbeat interfaces must be configured to allow them to pass through. If Layer 2 frames are dropped by these network devices, then the heartbeat traffic will not be allowed between the cluster units.

For example, some third-party network equipment may not allow EtherType 0x8893. The unit can still be found in the HA cluster, but you would be unable to run `execute ha manage` to manage the other unit. Use the following settings to change the EtherTypes of the HA heartbeat packets, if they require changing them for the traffic to be forwarded on the connected switch.

```
config system ha
    set ha-eth-type <hex_value>
    set hc-eth-type <hex_value>
    set l2ep-eth-type <hex_value>
end
```

### To change the EtherType values of the heartbeat and HA Telnet session packets:

```
config system ha
    set ha-eth-type 8895
    set l2ep-eth-type 889f
end
```

For troubleshooting issues with packets sent or received on the HA heartbeat ports, use the following diagnostic command to sniff the traffic by EtherType.

```
# diagnose sniffer packet any 'ether proto <EtherType_in_hex>' 6 0 1
```

### To sniff the traffic on EtherType 0x8890:

```
# diagnose sniffer packet any 'ether proto 0x8890' 6 0 1
Using Original Sniffing Mode
interfaces=[any]
filters=[ether proto 0x8890]
2022-10-19 16:22:26.512813 port5 out Ether type 0x8890 printer hasn't been added to sniffer.
0x0000  0000 0000 0000 000c 293b e61c 8890 5201      .....);....R.
0x0010  020c 6e65 7700 0000 0000 0000 0000 0000      ..new.....
0x0020  0000 0000 0000 0000 0000 0000 0000 0000      .....
0x0030  0000 0000 0700 0000 0000 0000 0000 8738      .....8
0x0040  0100 706f 7274 3500 0000 0000 0000 0000      ..port5.....
0x0050  0000 0300 843d 4647 564d 3034 544d 3232      .....=FGVM04TM22
0x0060  3030 3236 3338 0b00 0100 000c 0001 00c8      002001.....
0x0070  0d00 0100 000e 0004 0009 0000 000f 0004      .....
0x0080  0000 0000 0010 0004 0000 0000 0011 0004      .....
```

```

0x0090 0000 0000 0012 0004 0001 0000 0028 0000 .....(..
0x00a0 002b 0002 000a 002c 0002 000a 0038 0008 .+.....,.....8..
0x00b0 00c0 0300 0000 0000 0037 0004 0000 0000 .....7.....
0x00c0 003c 0030 0030 2704 175f 0858 9d4f 5611 .<.0.0'..._X.OV.
0x00d0 2005 6310 b1b0 be14 e029 1f5b 61fd 5b49 ..c.....).[a.[I
0x00e0 7cad bed4 ecaf 05bd 70c3 2adc 4fa0 6ab7 |.....p.*.O.j.
0x00f0 4d5d 1df7 4f3d 000c 0007 0000 0002 0000 M]..O=.....
0x0100 0085 0400 003e 0001 0000 4000 0400 0000 .....>....@.....
0x0110 0000 3f00 2400 0000 0000 0000 0000 0000 ..?.$.....
0x0120 0000 0000 0000 0000 0000 0000 0000 0000 .....
0x0130 0000 0000 0000 0000 0000 3300 0400 0000 .....3.....
0x0140 0000 2a00 7200 0a00 789c edcc 290e c250 ..*.r...x...)..P
0x0150 1440 d19f d420 5068 3449 5dcb d009 8b66 .@....Ph4I]....f
0x0160 2b34 8435 b302 3401 9e22 6f05 15e7 c82b +4.5..4.."o....+
0x0170 ee7c bb3f daf2 675d 9f9f af6a fee6 7dce .|.?.g]...j...}.
0x0180 efc8 879c 5791 8f39 6f22 9f72 de46 ee72 ....W..9o".r.F.r
0x0190 de45 ee73 6eca 2f0f 394f 91c7 9c2f 3169 .E.sn./..90.../li
0x01a0 9b94 af55 0100 0000 0000 0000 0000 0000 ...U.....
0x01b0 0058 ac0f 0096 24af 0000 0000 .X....$.....

```

2022-10-19 16:22:26.545236 port5 in Ether type 0x8890 printer hasn't been added to sniffer.


```

0x0000 ffff ffff ffff 000c 29ca ba5d 8890 5201 .....)]..R.
0x0010 020c 6e65 7700 0000 0000 0000 0000 0000 ..new.....
0x0020 0000 0000 0000 0000 0000 0000 0000 0000 .....
0x0030 0000 0000 0700 0000 0000 0000 0000 8738 .....8
0x0040 0100 706f 7274 3500 0000 0000 0000 0000 ..port5.....
0x0050 0000 0300 d221 4647 564d 3034 544d 3232 .....!FGVM04TM22
0x0060 3030 3236 3339 0b00 0100 000c 0001 0080 002002.....
0x0070 0d00 0100 000e 0004 0000 0000 000f 0004 .....
0x0080 0000 0000 0010 0004 0000 0000 0011 0004 .....
0x0090 0000 0000 0012 0004 0000 0000 0028 0000 .....(..
0x00a0 002b 0002 000a 002c 0002 000a 0038 0008 .+.....,.....8..
0x00b0 00e6 0400 0000 0000 0037 0004 0000 0000 .....7.....
0x00c0 003c 0030 0029 6d7e 3407 2d31 c00f 42b3 .<.0.)m~4.-1..B.
0x00d0 59b6 17cb 4be7 d043 a158 e74c 5841 c821 Y...K...C.X.LXA.!
0x00e0 7843 b598 c95d 3dcf 81a9 bc8b b304 53f3 xC...]=.....S.
0x00f0 17b6 3cd5 a83d 000c 0007 0000 0002 0000 ..<..=.....
0x0100 0085 0400 0040 0004 0000 0000 003f 0024 .....@.....?.$
0x0110 0000 0000 0000 0000 0000 0000 0000 0000 .....
0x0120 0000 0000 0000 0000 0000 0000 0000 0000 .....
0x0130 0000 0000 0033 0004 0000 0000 002a 0073 .....3.....*.s
0x0140 000a 0078 9ced cc21 1282 5014 40d1 3f43 ...x...!..P.@.?C
0x0150 7523 3651 414c 66b2 994c 1419 9bd9 ec7e u#6QALf..L.....~
0x0160 5c82 ab52 5e72 de0a 0ce7 c41b ee74 996f \..R^r.....t.o
0x0170 75f9 b15a bf5f 4d35 7df3 36e7 53e4 5dce u..Z.._M5}.6.S.].
0x0180 7de4 7dce e7c8 4dce 43e4 36e7 31f2 21e7 }.}...M.C.6.1.!.
0x0190 6b59 7297 f33d f231 e747 4cea 4dca cfaa kYr..=.1.GL.M...
0x01a0 0000 0000 0000 0000 0000 0000 00fc ad0f .....
0x01b0 c16c 2917 0000 0000 .l).....

```

## Interface IP addresses

An FGCP cluster communicates heartbeat packets using Layer 2 frames over the physical heartbeat interface, but it also communicates other synchronization traffic, logs, and locally generated traffic from subordinate devices over Layer 3 IP packets. Additional virtual interfaces are created in the hidden vsys\_ha VDOM, which need to be addressed with IPv4 addresses.

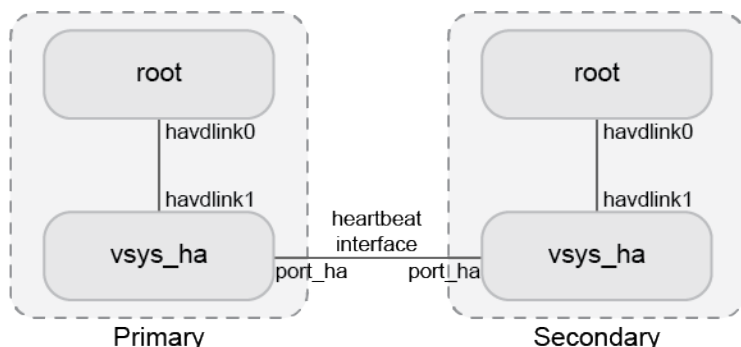

The FGCP uses link-local IPv4 addresses (see [RFC 3927](#)) in the 169.254.0.x range for the virtual HA heartbeat interface (port\_ha) and for the inter-VDOM link interfaces between the vsys\_ha and management VDOM. When members join an HA cluster, each member's heartbeat interface (port\_ha) is assigned an IP address from the range of 169.254.0.1 to 169.254.0.63/26. HA inter-VDOM link interfaces (havdlink0 and havdlink1) are assigned IP address from the range of 169.254.0.65 to 169.254.0.66/26.

The IP address that is assigned to a virtual heartbeat interface depends on the serial number priority of the member. Higher serial numbers have a higher priority, and therefore a lower serialno\_prio number, for example:

```
# diagnose sys ha status
...
FGVM08TM20002002:      Secondary, serialno_prio=0, usr_priority=128, hostname=FGVM08TM20002002
FGVM08TM19003001:      Primary, serialno_prio=1, usr_priority=128, hostname=FGVM08TM19003001
```

The member with serialno\_prio=0 is assigned IP address 169.254.0.1, serialno\_prio=1 is assigned 169.254.0.2, and so forth.

#### To view the HA heartbeat interface IP address of the primary unit:

```
# get system ha status
...
vcluster 1: work 169.254.0.2
...
```

#### To view all the assigned IP addresses of a device:

```
# diagnose ip address list
IP=172.16.151.84->172.16.151.84/255.255.255.0 index=3 devname=port1
IP=192.168.2.204->192.168.2.204/255.255.255.0 index=6 devname=port2
IP=10.10.10.1->10.10.10.1/255.255.255.0 index=9 devname=port3
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=13 devname=root
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=16 devname=vsys_ha
IP=169.254.0.2->169.254.0.2/255.255.255.192 index=17 devname=port_ha
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=18 devname=vsys_fgfm
IP=169.254.0.65->169.254.0.65/255.255.255.192 index=19 devname=havdlink0
IP=169.254.0.66->169.254.0.66/255.255.255.192 index=20 devname=havdlink1
```

When generating traffic from a subordinate unit, traffic will be routed to the primary unit's port\_ha virtual heartbeat interface. From there, if traffic is destined to another network, the traffic is routed from the vsys\_ha VDOM to the management VDOM by the havdlink interfaces.

Use the `execute traceroute` command on the subordinate unit to display HA heartbeat IP addresses and the HA inter-VDOM link IP addresses.

**To trace the route to an IP address on a subordinate unit:**

```
# execute ha manage 1
# execute traceroute 172.20.20.10
traceroute to 172.20.20.10 (172.20.20.10), 32 hops max, 72 byte packets
 1 169.254.0.1 0 ms 0 ms 0 ms
 2 169.254.0.66 0 ms 0 ms 0 ms
 3 172.20.20.10 0 ms 0 ms 0 ms
```

**To run a sniffer trace on the primary unit to view the traffic flow:**

```
# diagnose sniffer packet any 'net 169.254.0.0/24' 4 0 1
```

## Unicast HA heartbeat

In virtual machine (VM) and cloud environments that do not support heartbeat communication with Layer 2 Ethernet frames (see [HA heartbeat interface on page 2344](#)), you can set up a Layer 3 unicast HA heartbeat when configuring HA. This consists of enabling the feature and adding a peer IP address. The peer IP address is the IP address of the HA heartbeat interface of the other FortiGate VM in the HA cluster.

Unicast HA is only supported between two FortiGate VMs in active-passive (A-P) mode. The heartbeat interfaces must be connected to the same network, and the IP addresses must be added to these interfaces.

In the following example, unicast HA heartbeat is enabled over the port3 interface.

**To enable unicast HA heartbeat in the GUI:**

1. Go to *System > HA*.
2. Enable *Unicast Heartbeat* and enter the *Peer IP*, such as *172.30.3.12*.
3. Click *OK*.


**To enable unicast HA heartbeat in the CLI:**

```
config system ha
    set hbdev port3 50
    set unicast-hb enable
    set unicast-hb-peerip 172.30.3.12
end
```

## HA active-passive cluster setup

An HA Active-Passive (A-P) cluster can be set up using the GUI or CLI.

This example uses the following network topology:

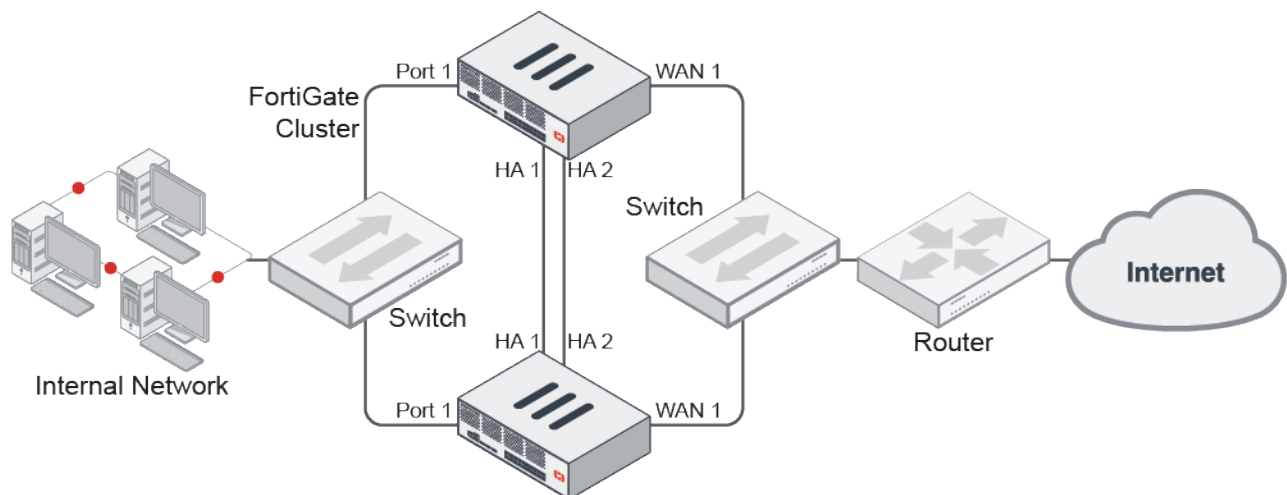

### To set up an HA A-P cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Go to *System* > *HA* and set the following options:

|                      |                 |
|----------------------|-----------------|
| Mode                 | Active-Passive  |
| Device priority      | 128 or higher   |
| Group name           | Example_cluster |
| Heartbeat interfaces | ha1 and ha2     |

Except for the device priority, these settings must be the same on all FortiGates in the cluster.

The screenshot shows the 'High Availability' configuration page in the FortiGate GUI. The 'Mode' is set to 'Active-Passive'. The 'Device priority' is set to 128. The 'Group name' is 'Example\_cluster'. The 'Heartbeat interfaces' are 'ha1' and 'ha2'. The 'Heartbeat Interface Priority' for both 'ha1' and 'ha2' is set to 50. The 'Additional Information' section on the right provides links to guides and documentation for HA setup.

4. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
5. Click **OK**.  
The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.
6. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat steps 1 to 5, omitting setting the device priority, to join the cluster.

### To set up an HA A-P cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Change the hostname of the FortiGate:

```
config system global
    set hostname Example1_host
end
```

Changing the host name makes it easier to identify individual cluster units in the cluster operations.

4. Enable HA:

```
config system ha
    set mode a-p
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

5. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
6. Repeat steps 1 to 5 on the other FortiGate devices to join the cluster, giving each device a unique hostname.


### HA active-active cluster setup

An HA Active-Active (A-A) cluster can be set up using the GUI or CLI.



FGCP in Active-Active mode cannot load balance any sessions that traverse NPU VDOM links or regular VDOM links. If Active-Active session load balancing between VDOMs is required, use an external router to handle the inter-VDOM routing.

This example uses the following network topology:

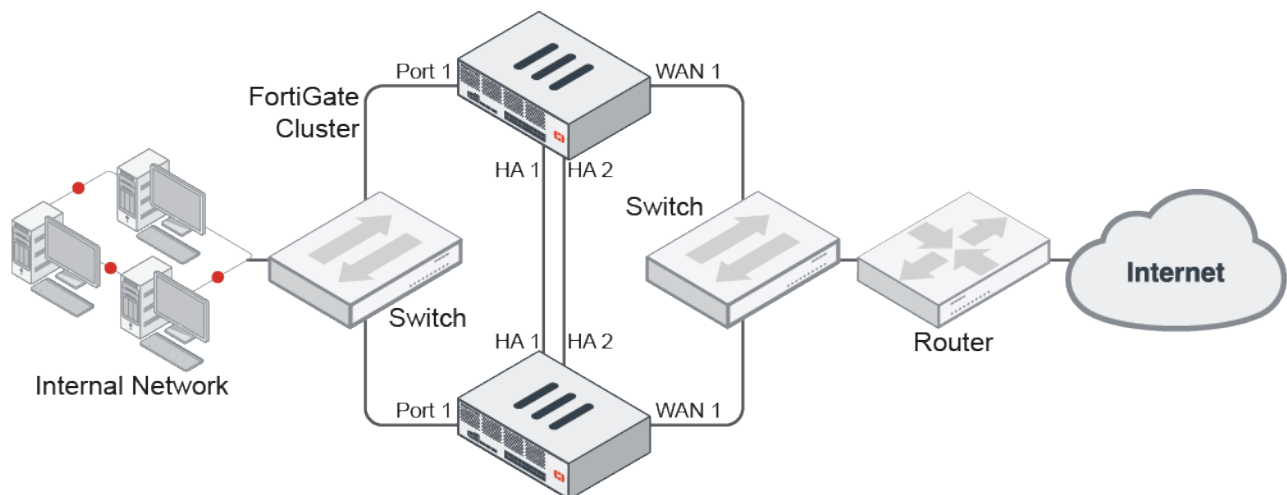

### To set up an HA A-A cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.



3. Go to **System > HA** and set the following options:

|                      |                 |
|----------------------|-----------------|
| Mode                 | Active-Active   |
| Device priority      | 128 or higher   |
| Group name           | Example_cluster |
| Heartbeat interfaces | ha1 and ha2     |

Except for the device priority, these settings must be the same on all FortiGates in the cluster.

4. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
5. Click **OK**.  
The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.
6. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat steps 1 to 5, omitting setting the device priority, to join the cluster.

### To set up an HA A-A cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Change the hostname of the FortiGate:

```
config system global
    set hostname Example1_host
end
```

Changing the host name makes it easier to identify individual cluster units in the cluster operations.

4. Enable HA:

```
config system ha
    set mode a-a
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

5. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
6. Repeat steps 1 to 5 on the other FortiGate devices to join the cluster.

## HA and load balancing

FGCP active-active HA uses a technique similar to unicast load balancing where the primary unit is associated with the cluster HA virtual MAC addresses and cluster IP addresses. The primary unit is the only cluster unit that receives packets sent to the cluster. The primary unit uses a load balancing schedule to distribute sessions to all cluster units (including the primary unit). Subordinate unit interfaces retain their actual MAC addresses, and the primary unit communicates with the subordinate units using these MAC addresses. Packets exiting the subordinate units proceed directly to their destination and do not pass through the primary unit.

By default, active-active HA load balancing distributes proxy-based security profile processing to all cluster units. Proxy-based security profile processing is CPU and memory-intensive, so FGCP load balancing may result in higher throughput because resource-intensive processing is distributed among all cluster units.

The following proxy-based security profile processing is load balanced:

- Virus scanning
- Web filtering
- Email filtering
- Data leak prevention (DLP) of HTTP, FTP, IMAP, IMAPS, POP3, POP3S, SMTP, SMTPS, IM, and NNTP sessions accepted by firewall policies

Other features enabled in firewall policies such as endpoint security, traffic shaping, and authentication have no effect on active-active load balancing.

The `load-balance-all` option can be enabled to have the primary unit load balance all TCP sessions. Load balancing TCP sessions increases overhead and may actually reduce performance. This setting is disabled by default.

### To configure TCP session load balancing:

```
config system ha
    set load-balance-all {enable | disable}
end
```



NP6 and NP7 processors can offload and accelerate load balancing. See [NP session offloading in HA active-active configuration](#) for more information.

---

During active-active HA load balancing, the primary unit uses the configured load balancing schedule to determine which cluster unit will process a session. The primary unit stores the load balancing information for each load balanced session in the cluster load balancing session table. Using the information in this table, the primary unit can then forward all of the remaining packets in each session to the appropriate cluster unit. The load balancing session table is synchronized among all cluster units.

ICMP, multicast, and broadcast sessions are never load balanced and are always processed by the primary unit. The following sessions are only processed by the primary unit:

- IPS
- Application control
- Flow-based virus scanning
- Flow-based web filtering
- Flow-based DLP
- Flow-based email filtering

- VoIP
- IM
- P2P
- IPsec VPN
- SSL VPN
- HTTP multiplexing
- SSL offloading
- WAN optimization
- Explicit web proxy
- WCCP

In addition to load balancing, active-active HA provides the same session, device, and link failover protection as active-passive HA. If the primary unit fails, a subordinate unit becomes the primary unit and resumes operating the cluster. Active-active HA maintains as many load balanced sessions as possible after a failover by continuing to process the load balanced sessions that were being processed by the cluster units that are still operating.

## Load balancing schedules

The load balancing schedule controls how the primary unit distributes packets to all cluster units.

### To configure the load balancing schedule:

```
config system ha
    set schedule {none | leastconnection | round-robin | weight-round-robin | random | ip |
ipport}
end
```

The following table outlines the load balancing schedule options.

| Schedule             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| None                 | <p>Use no load balancing. Select this option when the cluster interfaces are connected to load balancing switches.</p> <p>The primary unit does not load balance traffic, and the subordinate units process incoming traffic that does not come from the primary unit.</p> <p>For all other load balancing schedules, all traffic is received first by the primary unit and then forwarded to the subordinate units. The subordinate units only receive and process packets sent from the primary unit.</p> |
| Least connection     | Distribute network traffic to the cluster unit currently processing the fewest connections.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Round robin          | Distribute network traffic to the next available cluster unit.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Weighted round robin | <p>This is similar to round robin, but weighted values are assigned to each cluster unit based on their capacity and how many connections they are currently processing.</p> <p>For example, the primary unit should have a lower weighted value because it handles scheduling and forwards traffic. Weighted round robin distributes traffic more evenly because units that are not processing traffic will be more likely to receive new connections than units that are very busy.</p>                   |

| Schedule | Description                                                                                                                           |
|----------|---------------------------------------------------------------------------------------------------------------------------------------|
| Random   | Randomly distribute traffic to cluster units.                                                                                         |
| IP       | Distribute traffic to cluster units based on the source and destination IP of the packet.                                             |
| IP port  | Distribute traffic to cluster units based on based on the source IP, source port, destination IP, and destination port of the packet. |

Once a packet has been propagated to a subordinate unit, all packets are part of that same communication session are propagated to that same subordinate unit. Traffic is distributed according to the communication session, not just an individual packet.

Any subordinate unit that receives a forwarded packet processes it without applying load balancing. Note that subordinate units are still considered to be active because they perform routing, virus scanning, and other tasks on their share of the traffic. Active subordinate units share their session and link status information with all cluster units. Active subordinate units do not make load balancing decisions.

The primary unit is responsible for the load balancing process, and still performs other FortiGate tasks. Depending on the load balancing schedule used, the primary unit may assign itself a smaller share of the total load.

### Active-active failover

If a subordinate unit fails, the primary unit redistributes the sessions that the subordinate was processing among the remaining active cluster members. If the primary unit fails, the subordinate units negotiate to select a new primary unit. The new primary unit continues to distribute packets among the remaining active cluster units.

Failover works in a similar way if the cluster consists of only two units. If the primary unit fails, the subordinate unit negotiates and becomes the new primary unit. If the subordinate unit fails, the primary unit processes all traffic. In both cases, the single remaining unit continues to function as a primary unit, maintaining the HA virtual MAC address for all of its interfaces.

### HTTPS sessions and active-active load balancing

Active-active HA does not load balance HTTPS sessions that have SSL deep packet scanning enabled. This is to prevent HTTPS web filtering problems. The FortiGate identifies HTTPS sessions as all sessions received on the HTTPS TCP port. The default HTTPS port is 443. If the HTTPS port is changed in the SSL/SSH inspection profile applied in the firewall policy, FGCP stops load balancing all sessions that use the custom HTTPS port.

HTTPS traffic passing through a firewall policy that does not have UTM enabled, or has UTM enabled without deep inspection, can still be load balanced when `load-balance-all` is enabled.

### HA virtual cluster setup

Virtual clustering is an extension of FGCP HA to allow multiple clusters to be formed between your HA members. In effect, each cluster consists of the same HA members, with the option to prioritize different members as the primary unit. Each cluster operates as its on active-passive FGCP HA cluster, with different virtual domains residing in the virtual cluster. The following custom settings can be configured per cluster:

```
config system ha
    set vcluster-status enable
    config vcluster
```

```


edit <id>
  set override {enable | disable}
  set priority <integer>
  set vdom <vdom_1>, ... [vdom_n]
  set monitor <interface_1>, ... [interface_n]
  set pingserver-monitor-interface <interface_1>, ... [interface_n]
next
end
end

```

|                                                               |                                                                                                  |
|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| override {enable   disable}                                   | Enable/disable override and increase the priority of the unit that should always be the primary. |
| priority <integer>                                            | Increase the priority to select the primary unit (0 - 255, default = 128).                       |
| vdom <vdom_1>, ... [vdom_n]                                   | Set the virtual domains in the virtual cluster.                                                  |
| monitor <interface_1>, ... [interface_n]                      | Set the interfaces to check for port monitoring (or link failure).                               |
| pingserver-monitor-interface <interface_1>, ... [interface_n] | Set the interfaces to check for remote IP monitoring.                                            |

Active-passive virtual clustering uses VDOM partitioning to send traffic for some VDOMs to the primary FortiGate and traffic for other VDOMs to the secondary FortiGates. Traffic distribution between FortiGates can potentially improve throughput. If a failure occurs and only one FortiGate continues to operate, all traffic fails over to that FortiGate, similar to normal HA. If the failed FortiGates rejoin the cluster, the configured traffic distribution is restored.


In an active-passive virtual cluster of two FortiGates, the primary and secondary FortiGates share traffic processing according to the VDOM partitioning configuration. The following is an example of two virtual clusters, with each member acting as primary for different vclusters.

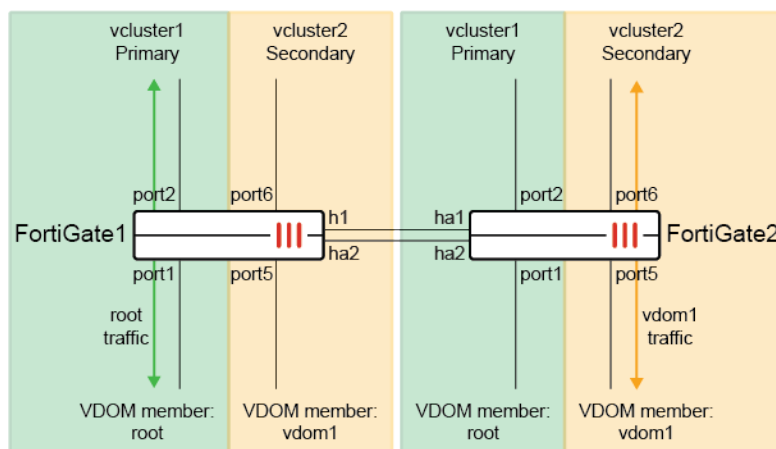

If you add a third or fourth FortiGate, the primary and first secondary FortiGate process all traffic and the other one or two FortiGates operate in standby mode. If the primary or first secondary FortiGate fails, one of the other FortiGates becomes the new primary or secondary FortiGate and begins processing traffic.

For better load balancing, it is recommended to have as many vclusters as there are HA members. This way, each HA member can be a primary unit for each cluster, thereby processing traffic while standing by for the other vcluster as

secondary. The following is an example of four FortiGates in an FGCP cluster, with four vclusters and four VDOMs. Each FortiGate is the primary unit for a vcluster and actively processes traffic as the primary member.

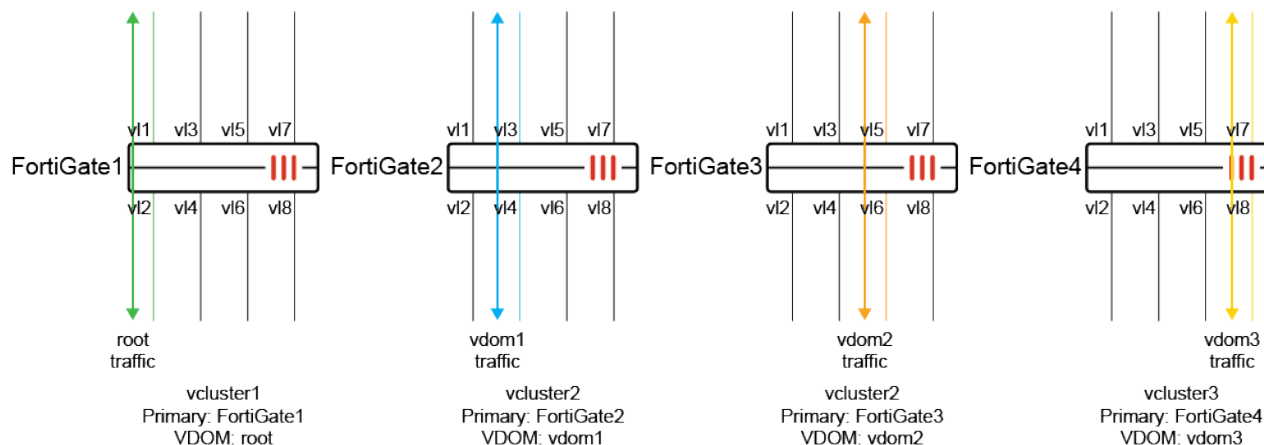

## Virtual clustering and heartbeat interfaces

The HA heartbeat provides the same HA services in a virtual clustering configuration as in a standard HA configuration. One set of HA heartbeat interfaces provides HA heartbeat services for all of the VDOMs in the cluster. You do not have to add a heartbeat interface for each VDOM.

## Special considerations for NPU-based VLANs in a virtual cluster

In an FGCP cluster, the primary FortiGate uses virtual MAC addresses when forwarding traffic, and the secondary uses the physical MAC addresses when forwarding traffic. In a virtual cluster, packets are sent with the cluster's virtual MAC addresses. However, in the case of NPU offloading on a non-root VDOM, traffic that leaves an NPU-based VLAN will use the physical MAC address of its parent interface rather than the virtual MAC address. If this behavior is not desired, disable `auto-asic-offload` in the firewall policy where the VLAN interface is used.

## Support up to 30 virtual clusters

FortiOS supports up to 30 virtual clusters, which allows more VDOMs to be spread across different virtual clusters without overlapping. Each virtual cluster supports its own failover conditions. Prior to 7.2.0, only two virtual clusters were supported.

When configuring virtual clusters, the `group-id` is limited to a value from 0 to 7. If the HA `group-id` is greater than 7, use the command line first to change the `group-id` before enabling virtual clusters.


```
config system ha
    set group-id <integer>
end
```



When upgrading from 7.0 or earlier, old virtual clusters will be lost if the `group-id` is larger than 7.

## Basic configuration

This example shows a virtual cluster configuration consisting of two FortiGates. The virtual cluster has two VDOMs, root and eng\_vdm.

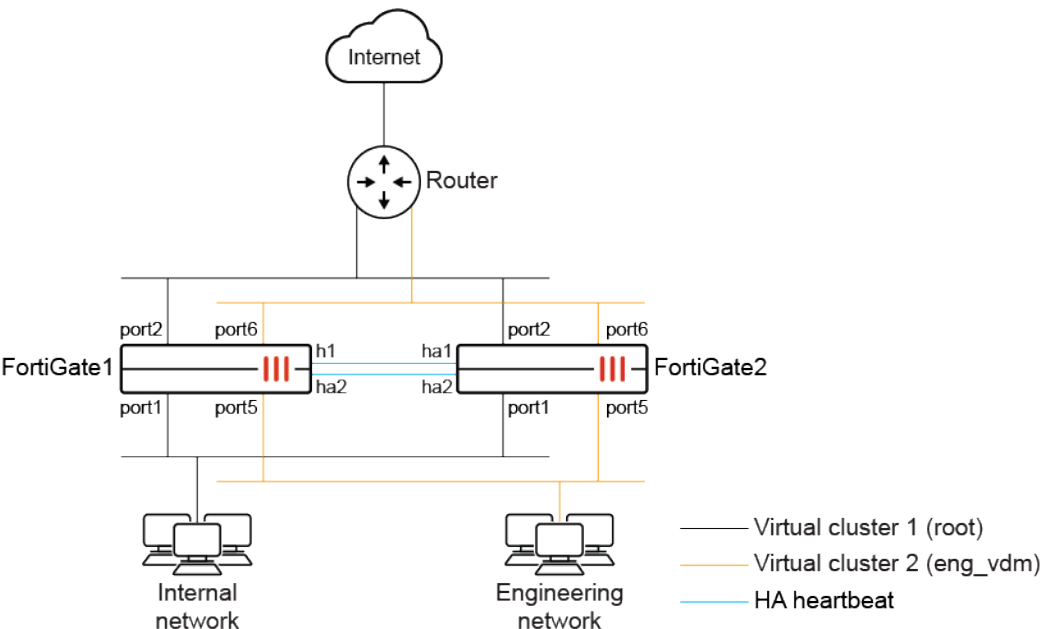

The root VDOM can only be associated with virtual cluster 1.  
The VDOM that is assigned as the management VDOM can also only be associated with virtual cluster 1.

### To set up an HA virtual cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Configure a regular A-P cluster:
  - a. Log in to one of the FortiGates.
  - b. Go to *System > HA* and set the following options:

|                      |                 |
|----------------------|-----------------|
| Mode                 | Active-Passive  |
| Device priority      | 128 or higher   |
| Group name           | Example_cluster |
| Heartbeat interfaces | ha1 and ha2     |

Except for the device priority, these settings must be the same on all FortiGates in the cluster.

- c. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
- d. Click OK.

The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.
- e. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat step 2 (omitting setting the device priority) to join the cluster.

3. On the primary FortiGate, go to *System > Settings* and enable *Virtual Domains*.
4. Click *Apply*. You will be logged out of the FortiGate.
5. Log back in to the FortiGate, and ensure that you are in the global VDOM.
6. Create the eng\_vdm VDOM:
  - a. Go to *System > VDOM* and click *Create New*. The *New Virtual Domain* pane opens.
  - b. Enter the name in the *Virtual Domain* field, then click *OK*.
7. Implement a virtual cluster by moving the new VDOM to virtual cluster 2:
  - a. Go to *System > HA* and enable *VDOM Partitioning*.
  - b. In the table, click *Create New*. The *New Virtual Cluster* pane opens.
  - c. Click the + and add the eng\_vdm VDOM.
  - d. Click *OK* to save the virtual cluster.

The screenshot shows the 'High Availability' configuration page. Under 'Heartbeat interfaces', 'ha1' and 'ha2' are listed. The 'Heartbeat Interface Priority' section shows sliders for 'ha1' and 'ha2' both set to 50. The 'Management Interface Reservation' option is disabled. The 'VDOM Partitioning' option is enabled. Below it is a table with columns: Virtual Cluster, Override, Priority, VDOM, and Monitor Interfaces. The table has two rows: row 1 with Virtual Cluster 1, Override (disabled), Priority 128, VDOM root, and Monitor Interfaces; row 2 with Virtual Cluster 2, Override (disabled), Priority 128, VDOM eng\_vdm, and Monitor Interfaces. At the bottom, the 'Unicast Heartbeat' option is disabled. 'OK' and 'Cancel' buttons are at the bottom right.

| Virtual Cluster | Override | Priority | VDOM    | Monitor Interfaces |
|-----------------|----------|----------|---------|--------------------|
| 1               |          | 128      | root    |                    |
| 2               |          | 128      | eng_vdm |                    |

- e. Click *OK* to save the HA configuration.

### To set up an HA virtual cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Configure a regular A-P cluster. See [HA active-passive cluster setup on page 2352](#).
3. Enable VDOMs:

```
config system global
    set vdom-mode multi-vdom
end
```

You will be logged out of the FortiGate.

4. Create the eng\_vdm VDOM:

```
config vdom
    edit eng_vdm
    next
end
```



### 5. Reconfigure the HA settings to be a virtual cluster:

```
config system ha
    set vcluster-status enable
    config vcluster
        edit 1
            set vdom root
            set override disable
        next
        edit 2
            set vdom eng_vdm
            set override disable
        next
    end
end
```

## Configuration with 30 virtual clusters

In this example, there are 30 customers managed by an MSSP on an HA cluster, and each customer VDOM needs to failover independently of other customer VDOMs. Each customer is assigned to a different virtual cluster with its own virtual cluster configurations. This may include different monitored interfaces, ping servers, and priority for the primary and secondary cluster members. Each virtual cluster will fail over according to their own virtual cluster configurations.

This example assumes an A-P cluster and VDOMs have already been configured. See [HA active-passive cluster setup on page 2352](#) and [Virtual Domains on page 2299](#) for more information.

For each virtual cluster, this example assumes that unit 1 has an HA priority of 200, while unit 2 has an HA priority of 100. By default, unit 1 will be the primary cluster member of all the virtual clusters.

### To configure multiple virtual clusters in the GUI:

1. Go to *System > HA* and enable *VDOM Partitioning*.
2. Create a virtual cluster:
  - a. In the table, click *Create New*. The *New Virtual Cluster* pane opens.
  - b. Set the *Device priority* to 200.
  - c. Click the + and add the *Virtual domains*.
  - d. Optionally, click the + and add the *Monitor interfaces*.
  - e. Click *OK*.
3. Repeat step 2 to create the remaining virtual clusters.
4. Click *OK* to save the HA configuration. The *HA* page summary displays the multiple virtual clusters, each with a *Primary* and *Secondary* HA member.
5. Edit the priority settings for the secondary members to be 100:
  - a. Select the *Secondary* member in the table, and click *Edit*.
  - b. Set the *Priority* to 100.
  - c. Click *OK*.
6. Repeat step 5 for the remaining secondary members.

## To configure multiple virtual clusters in the CLI:

### 1. Configure the primary FortiGate:

```
config system ha
    set vcluster-status enable
    config vcluster
        edit 1
            set override disable
            set priority 200
            set vdom "vdom1"
        next
        edit 2
            set override disable
            set priority 200
            set vdom "vdom2"
        next
        ...
        edit 30
            set override disable
            set priority 200
            set vdom "vdom30"
        next
    end
end
```

### 2. Configure the secondary FortiGate:

```
config system ha
    set vcluster-status enable
    config vcluster
        edit 1
            set override disable
            set priority 100
            set vdom "vdom1"
        next
        edit 2
            set override disable
            set priority 100
            set vdom "vdom2"
        next
        ...
        edit 30
            set override disable
            set priority 100
            set vdom "vdom30"
        next
    end
end
```

## Check HA synchronization status

The HA synchronization status can be viewed in the GUI through either a widget on the *Dashboard* or on the *System > HA* page. It can also be confirmed through the CLI. When a cluster is out of synchronization, administrators should correct the issue as soon as possible as it affects the configuration integrity and can cause issues to occur.

When units are out of synchronization in an HA cluster, the GUI will compare the HA checksums and display the tables that caused HA to be out of synchronization. This can be visualized on the HA monitor page and in the HA status widget.

## HA synchronization status in the GUI

Following HA setup, the *HA Status* widget can be added to the *Dashboard* that shows the HA synchronization statuses of the members.

A green checkmark is shown next to each member that is in synchronization.

HA Status ⌵

ModeActive-Passive

Groupdocs

Primary✔ FGDocs-P

Secondary✔ FGDocs-S

Uptime00:00:48:11

State Changed00:00:08:05

A member that is out of synchronization is highlighted in red. Hover the cursor over the unsynchronized device to see the tables that are out of synchronization and the checksum values.

HA Status ⌵

ModeActive-Passive

Groupdocs

Primary✔ FGDocs-P

Secondary✖ FGDocs-S

Uptime00:01:40:39

State Changed00:01:00:33

Status❗ Not Synchronized

Serial NumberFGVMEVXXXXXXXXXX5

Checksumced2f41c5127efe2081bc01375f8328a

Table(s) Out of Syncfirewall.ippool

You can also go to *System > HA* to see the synchronization statuses of the members. A member that is out of synchronization will have a red icon next to its name. Hover the cursor over the unsynchronized device to see the tables that are out of synchronization and the checksum values.

Synchronized:

FortiGate VM64 1 3 5 7 9 11 13 15 17 19 21 23

✔

FGDocs-P (Primary)

FortiGate VM64 1 3 5 7 9 11 13 15 17 19 21 23

✔

FGDocs-S (Secondary)

Refresh Edit Remove device from HA cluster

| Status                      | Priority | Hostname | Serial No.        | Role      | Uptime  | Sessions | Throughput |
|-----------------------------|----------|----------|-------------------|-----------|---------|----------|------------|
| <span>✔</span> Synchronized | 128      | FGDocs-P | FGVMEVXXXXXXXXXX5 | Primary   | 48m 40s | 19       | 48.00 kbps |
| <span>✔</span> Synchronized | 128      | FGDocs-S | FGVMEVXXXXXXXXXX6 | Secondary | 48m 39s | 10       | 35.00 kbps |

Unsynchronized:

FortiGate VM64 1 3 5 7 9 11 13 15 17 19 21 23

✔

FGDocs-P (Primary)

FortiGate VM64 1 3 5 7 9 11 13 15 17 19 21 23

✖

FGDocs-S (Secondary)

Refresh Edit

1 Table Out of Sync - FGDocs-S (Primary) vs. FGDocs-P (Secondary)

| Status                          | Table           | FGDocs-S (Primary)               | FGDocs-P (Secondary)             | Sessions | Throughput |
|---------------------------------|-----------------|----------------------------------|----------------------------------|----------|------------|
| <span>✔</span> Synchronized     | firewall.ippool | 5873dd45edd01f09c1ef2e7819369e8e | b0d2d291ca1e7f0db913cb40fa501c0d | 12       | 46.00 kbps |
| <span>❗</span> Not Synchronized |                 | 128 FGDocs-S FGVMEVXXXXXXXXXX5   | Secondary 1m 55m                 | 8        | 48.00 kbps |

## HA synchronization status in the CLI

In the CLI, run the `get system ha status` command to see if the cluster is in synchronization. The synchronization status is reported under *Configuration Status*.

When both members are in synchronization:

```
# get system ha status
HA Health Status: OK
Model: FortiGate-VM64
Mode: HA A-P
Group Name: docs
Group ID: 0
Debug: 0
Cluster Uptime: 0 days 0:52:39
Cluster state change time: 2021-04-29 13:17:03
Primary selected using:
  <2021/04/29 13:17:03> FGVMEV0000000002 is selected as the primary because its uptime is
  larger than peer member FGVMEV7000000005.
  <2021/04/29 12:37:17> FGVMEV0000000002 is selected as the primary because it's the only
  member in the cluster.
ses_pickup: disable
override: disable
Configuration Status:
  FGVMEV0000000002(updated 3 seconds ago): in-sync
  FGVMEV7000000005(updated 2 seconds ago): in-sync
System Usage stats:
  FGVMEV0000000002(updated 3 seconds ago):
    sessions=9, average-cpu-user/nice/system/idle=1%/0%/0%/99%, memory=66%
  FGVMEV7000000005(updated 2 seconds ago):
    sessions=0, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=65%
HBDEV stats:
  FGVMEV0000000002(updated 3 seconds ago):
    port2: physical/1000auto, up, rx-bytes/packets/dropped/errors=7698164/22719/0/0,
    tx=7815947/23756/0/0
    port4: physical/1000auto, up, rx-bytes/packets/dropped/errors=714501/1749/0/0,
    tx=724254/1763/0/0
  FGVMEV7000000005(updated 2 seconds ago):
    port2: physical/1000auto, up, rx-bytes/packets/dropped/errors=7819515/23764/0/0,
    tx=7697305/22724/0/0
    port4: physical/1000auto, up, rx-bytes/packets/dropped/errors=726500/1766/0/0,
    tx=714129/1751/0/0
MONDEV stats:
  FGVMEVYKXTDJDJN932(updated 3 seconds ago):
    port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=4610/15/0/0,
    tx=1224/21/0/0
  FGVMEV7000000005(updated 2 seconds ago):
    port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=1200/20/0/0,
    tx=630/10/0/0
Primary      : FGDocs-P          , FGVMEV0000000002, HA cluster index = 0
Secondary    : FGDocs-S          , FGVMEV7000000005, HA cluster index = 1
number of vcluster: 1
vcluster 1: work 169.254.0.1
Primary: FGVMEV0000000002, HA operating index = 0
Secondary: FGVMEV7000000005, HA operating index = 1
```

When one of the members is out of synchronization:

```

# get system ha status
HA Health Status: OK
Model: FortiGate-VM64
Mode: HA A-P
Group Name: docs
Group ID: 0
Debug: 0
Cluster Uptime: 0 days 2:24:46
Cluster state change time: 2021-04-29 13:17:03
Primary selected using:
    <2021/04/29 13:17:03> FGVMEV0000000002 is selected as the primary because its uptime is
larger than peer member FGVMEV7000000005.
    <2021/04/29 12:37:17> FGVMEV0000000002 is selected as the primary because it's the only
member in the cluster.
ses_pickup: disable
override: disable
Configuration Status:
    FGVMEV0000000002(updated 0 seconds ago): in-sync
    FGVMEV7000000005(updated 3 seconds ago): out-of-sync
System Usage stats:
    FGVMEV0000000002(updated 0 seconds ago):
        sessions=11, average-cpu-user/nice/system/idle=1%/0%/0%/99%, memory=67%
    FGVMEV7000000005(updated 3 seconds ago):
        sessions=0, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=65%
HBDEV stats:
    FGVMEV0000000002(updated 0 seconds ago):
        port2: physical/1000auto, up, rx-bytes/packets/dropped/errors=22257271/64684/0/0,
tx=24404848/69893/0/0
        port4: physical/1000auto, up, rx-bytes/packets/dropped/errors=12026623/29407/0/0,
tx=12200664/29417/0/0
    FGVMEV7000000005(updated 3 seconds ago):
        port2: physical/1000auto, up, rx-bytes/packets/dropped/errors=24401109/69877/0/0,
tx=22245634/64666/0/0
        port4: physical/1000auto, up, rx-bytes/packets/dropped/errors=12195025/29401/0/0,
tx=12018480/29390/0/0
MONDEV stats:
    FGVMEV0000000002(updated 0 seconds ago):
        port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=4610/15/0/0,
tx=1224/21/0/0
    FGVMEV7000000005(updated 3 seconds ago):
        port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=1200/20/0/0,
tx=630/10/0/0
Primary      : FGDocs-P          , FGVMEV0000000002, HA cluster index = 0
Secondary    : FGDocs-S          , FGVMEV7000000005, HA cluster index = 1
number of vcluster: 1
vcluster 1: work 169.254.0.1
Primary: FGVMEV0000000002, HA operating index = 0
Secondary: FGVMEV7000000005, HA operating index = 1

```

## Out-of-band management with reserved management interfaces

As part of an HA configuration, you can reserve up to four management interfaces to provide direct management access to all cluster units. For each reserved management interface, you can configure a different IP address, administrative access, and other interface settings, for each cluster unit. By connecting these interfaces to your network, you can separately manage each cluster unit from different IP addresses.

- Reserved management interfaces provide direct management access to each cluster unit, and give each cluster unit a different identity on your network. This simplifies using external services, such as SNMP, to monitor separate cluster units.
- Reserved management interfaces are not assigned HA virtual MAC addresses. They retain the permanent hardware address of the physical interface, unless you manually change it using the `config system interface` command.
- Reserved management interfaces and their IP addresses should not be used for managing a cluster using FortiManager. To manage a FortiGate HA cluster with FortiManager, use the IP address of one of the cluster unit interfaces.
- Configuration changes to a reserved management interface are not synchronized to other cluster units. Other configuration changes are automatically synchronized to all cluster units.



You can configure an in-band management interface for a cluster unit. See [In-band management on page 2373](#) for information. In-band management does not reserve the interface exclusively for HA management.

---

## Management interface

Enable HTTPS or HTTP administrative access on the reserved management interfaces to connect to the GUI of each cluster unit. On secondary units, the GUI has the same features as the primary unit, except for unit specific information, for example:

- The System Information widget on the Status dashboard shows the secondary unit's serial number.
- In the cluster members list at *System > HA*, you can change the HA configuration of the unit that you are logged into. You can only change the host name and device priority of the primary and other secondary units.
- The system events logs show logs for the device that you are logged into. Use the HA device drop down to view the log messages for other cluster units, including the primary unit.

Enable SSH administrative access on the reserved management interfaces to connect to the CLI of each cluster unit. The CLI prompt includes the host of the cluster unit that you are connected to. Use the `execute ha manage` command to connect to other cluster unit CLIs.

Enable SNMP administrative access on a reserved management interface to use SNMP to monitor each cluster unit using the interface's IP address. Direct management of cluster members must also be enabled, see [Configuration examples on page 2369](#).

Reserved management interfaces are available in both NAT and transparent mode, and when the cluster is operating with multiple VDOMs.

## FortiCloud, FortiSandbox, and other management services

By default, management services such as FortiCloud, FortiSandbox, SNMP, remote logging, and remote authentication, use a cluster interface. This means that communication from each cluster unit will come from a cluster interface of the primary unit, and not from the individual cluster unit's interface.

You can configure HA reserved management interfaces to be used for communication with management services by enabling the `ha-direct` option. This separates management traffic for each cluster unit, and allows each unit to be individually managed. This is especially useful when cluster units are in different physical locations.

The following management features will then use the HA reserved management interface:

- Remote logging, including syslog, FortiAnalyzer, and FortiCloud
- Remote authentication and certificate verification
- Communication with FortiSandbox
- Netflow and sflow, see [Routing NetFlow data over the HA management interface on page 2388](#) for information.
- SNMP queries and traps

Syntax for HA reserved management interfaces is as follows:


```
config system ha
    set ha-direct enable
    set ha-mgmt-status enable
    config ha-mgmt-interfaces
        edit 1
            set interface <interface>
            set dst <destination IP>
            set gateway <IPv4 gateway>
            set gateway6 <IPv6 gateway>
        next
    end
end
```



The `ha-direct` option is a pre-requisite for allowing communication on each HA reserved management interface for various management services listed above. Once enabled, all `source-ip` settings will be unset from log related, netflow and sflow management services. SNMP requires `ha-direct` to be configured under SNMP settings only. See below for more configuration options.

## Configuration examples

The configuration examples below will use the following topology:

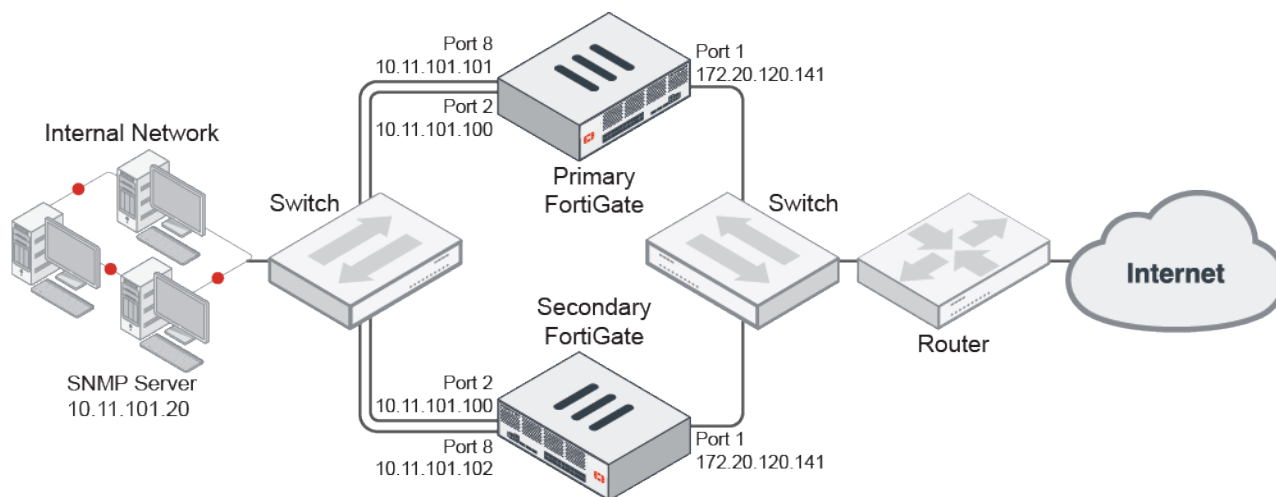

Two FortiGate units are already operating in a cluster. On each unit, port8 is connected to the internal network through a switch and configured as an out-of-band reserved management interface.



Configuration changes to the reserved management interface are not synchronized to other cluster units.

### Administrative access and default route for HA management interface

To configure the primary unit's reserved management interface, configure an IP address and management access on port8. Then, configure the necessary HA settings to enable the HA reserved management interface and its route. To configure the secondary unit's reserved management interface, access the unit's CLI through the primary unit, and configure an IP address, management access on port8, and the necessary HA settings. Configuration changes to the reserved management interface are not synchronized to other cluster units.

#### To configure the primary unit reserved management interface to allow HTTPS, SSH, and ICMP access:

1. From a computer on the internal network, connect to the CLI at 10.11.101.100 on port2.
2. Change the port8 IP address and management access:

```
config system interface
  edit port8
    set ip 10.11.101.101/24
    set allowaccess https ping ssh
  next
end
```

3. Configure the HA settings for the HA reserved management interface by defining a default route to route to the gateway 10.11.101.2:

```
config system ha
  set ha-mgmt-status enable
  config ha-mgmt-interfaces
    edit 1
      set interface port8
      set gateway 10.11.101.2
    next
  end
end
```

You can now log into the primary unit's GUI by browsing to <https://10.11.101.101>. You can also log into the primary unit's CLI by using an SSH client to connect to 10.11.101.101.

#### To configure secondary unit reserved management interfaces to allow HTTPS, SSH, and ICMP access:

1. From a computer on the internal network, connect to the primary unit's CLI.
2. Connect to the secondary unit with the following command:

```
execute ha manage <unit id> <username> <password>
```

3. Change the port8 IP address and management access:

```
config system interface
  edit port8
    set ip 10.11.101.102/24
    set allowaccess https ping ssh
```



```
    next
end
exit
```

4. Configure the HA settings for the HA reserved management interface by defining a default route to route to the gateway 10.11.101.2:

```
config system ha
    set ha-mgmt-status enable
    config ha-mgmt-interfaces
        edit 1
            set interface port8
            set gateway 10.11.101.2
        next
    end
end
```

You can now log into the secondary unit's GUI by browsing to <https://10.11.101.102>. You can also log into the secondary unit's CLI by using an SSH client to connect to 10.11.101.102.

## SNMP monitoring

The SNMP server can get status information from the cluster members. To use the reserved management interfaces, you must add at least one HA direct management host to an SNMP community. If the SNMP configuration includes SNMP users with user names and passwords, HA direct management must be enabled for the users.

### To configure the cluster for SNMP management using the reserved management interfaces in the CLI:

1. Allow SNMP on port8 on both primary and secondary units:

```
config system interface
    edit port8
        append allowaccess snmp
    next
end
```

2. Add an SNMP community with a host for the reserved management interface of each cluster member. The host includes the IP address of the SNMP server.

```
config system snmp community
    edit 1
        set name "Community"
        config hosts
            edit 1
                set ip 10.11.101.20 255.255.255.255
                set ha-direct enable
            next
        end
    next
end
```



Enabling `ha-direct` in a non-HA environment will make SNMP unusable.

---

**3. Add an SNMP user for the reserved management interface:**

```
config system snmp user
    edit "1"
        set notify-hosts 10.11.101.20
        set ha-direct enable
    next
end
```



The SNMP configuration is synchronized to all cluster units.

---

**To get CPU, memory, and network usage information from the SNMP manager for each cluster unit using the reserved management IP addresses:**

1. Connect to the SNMP manager CLI.
2. Get resource usage information for the primary unit using the MIB fields:

```
snmpget -v2c -c Community 10.11.101.101 fgHaStatsCpuUsage
snmpget -v2c -c Community 10.11.101.101 fgHaStatsMemUsage
snmpget -v2c -c Community 10.11.101.101 fgHaStatsNetUsage
```

3. Get resource usage information for the primary unit using the OIDs:

```
snmpget -v2c -c Community 10.11.101.101 1.3.6.1.4.1.12356.101.13.2.1.1.3.1
snmpget -v2c -c Community 10.11.101.101 1.3.6.1.4.1.12356.101.13.2.1.1.4.1
snmpget -v2c -c Community 10.11.101.101 1.3.6.1.4.1.12356.101.13.2.1.1.5.1
```

4. Get resource usage information for the secondary unit using the MIB fields:

```
snmpget -v2c -c Community 10.11.101.102 fgHaStatsCpuUsage
snmpget -v2c -c Community 10.11.101.102 fgHaStatsMemUsage
snmpget -v2c -c Community 10.11.101.102 fgHaStatsNetUsage
```

5. Get resource usage information for the primary unit using the OIDs:

```
snmpget -v2c -c Community 10.11.101.102 1.3.6.1.4.1.12356.101.13.2.1.1.3.1
snmpget -v2c -c Community 10.11.101.102 1.3.6.1.4.1.12356.101.13.2.1.1.4.1
snmpget -v2c -c Community 10.11.101.102 1.3.6.1.4.1.12356.101.13.2.1.1.5.1
```

## Firewall local-in policies for the reserved management interface

Enabling `ha-mgmt-intf-only` applies the local-in policy only to the VDOM that contains the reserved management interface. The incoming interface is set to match any interface in the VDOM.

**To add local-in policies for the reserved management interface:**

```
config firewall local-in-policy
    edit 0
        set ha-mgmt-intf-only enable
        set intf any
        set srcaddr internal-net
        set dstaddr mgmt-int
        set action accept
        set service HTTPS
```

```
        set schedule weekdays
    next
end
```

## NTP over reserved management interfaces

When NTP is enabled in an HA cluster, the primary unit will always be the unit to contact the NTP server and synchronize system time to the secondary units over the HA heartbeat interface. However, in the event that the primary should contact the NTP server over the HA reserved management interface, then the `ha-direct` option should be enabled under the `config system ha` settings.

```
config system interface
    edit port5
        set ip 172.16.79.46 255.255.255.0
    next
end

config system ha
    set group-name FGT-HA
    set mode a-p
    set ha-mgmt-status enable
    config ha-mgmt-interfaces
        edit 1
            set interface port5
            set gateway 172.16.79.1
        next
    end
    set ha-direct enable
end

config system ntp
    set ntpsync enable
    set syncinterval 5
end
```

## In-band management

In-band management IP addresses are an alternative to reserved HA management interfaces, and do not require reserving an interface exclusively for management access. They can be added to multiple interfaces on each cluster unit.

The in-band management IP address is accessible from the network that the cluster interface is connected to. It should be in the same subnet as the interface that you are adding it to. It cannot be in the same subnet as other interface IP addresses.

In-band management interfaces support ping, HTTP, HTTPS, and SNMP administrative access options.

Primary and secondary units can respond on the management IP to traffic from different networks by using the routing table. The secondary unit uses the kernel routing table synchronized from the primary to route the traffic.



In-band management IP address configuration is not synchronized to other cluster units.

---

**To add an in-band management IP address to port23 with HTTPS, SSH, and SNMP access:**

```
config system interface
    edit port23
        set management-ip 172.25.12.5/24
        set allowaccess https ssh snmp
    next
end
```

## Upgrading FortiGates in an HA cluster

You can upgrade the firmware on an HA cluster in the same way as on a standalone FortiGate. During a firmware upgrade, the cluster upgrades the primary unit and all of the subordinate units to the new firmware image.



Before upgrading a cluster, back up your configuration ([Configuration backups on page 67](#)), schedule a maintenance window, and make sure that you are using a supported upgrade path (<https://docs.fortinet.com/upgrade-tool>).

### Uninterrupted upgrade

An uninterrupted upgrade occurs without interrupting communication in the physical or virtual cluster.

To upgrade the cluster firmware without interrupting communication, use the following steps. These steps are transparent to the user and the network, and might result in the cluster selecting a new primary unit.

1. The administrator uploads a new firmware image using the GUI or CLI. See [Upgrading individual device firmware on page 2248](#) for details.
2. The firmware is upgraded on all of the subordinate units.
3. A new primary unit is selected from the upgraded subordinates.
4. The firmware is upgraded on the former primary unit.
5. Primary unit selection occurs, according to the standard primary unit selection process.

If all of the subordinate units crash or otherwise stop responding during the upgrade process, the primary unit will continue to operate normally, and will not be upgraded until at least one subordinate rejoins the cluster.

### Interrupted upgrade

An interrupted upgrade upgrades all cluster members at the same time. This takes less time than an uninterrupted upgrade, but it interrupts communication in the cluster. Interrupted upgrade is disabled by default.

**To enable interrupted upgrade:**

```
config system ha
    set uninterruptible-upgrade disable
end
```


## Distributed HA clusters

FGCP HA supports cluster units installed in different physical locations to achieve geo-redundancy. This may be desirable in large enterprises that deploy multiple data centers and network infrastructure to prevent interruptions

caused by downtime in one location or region. Distributed clusters (or geographically distributed clusters) can have cluster units in different rooms in the same building, different buildings in the same location, or different geographical regions (cities, countries, or continents). When disruption is detected in one location, traffic can be routed to another location and failed over to the HA unit in the same cluster to prevent major downtime.

Just like any FGCP HA cluster, distributed clusters require heartbeat communication between cluster units over a Layer 2 network. In a distributed cluster, this heartbeat communication can take place over a dedicated lease-line, MPLS, or other L2 WAN solutions. Most Data Center Interconnect (DCI) or MPLS-based solutions that support Layer 2 extensions between the remote data centers should also support HA heartbeat communication between the FortiGates in the distributed locations.

For more information about FGCP HA heartbeats, see [HA heartbeat interface on page 2344](#).

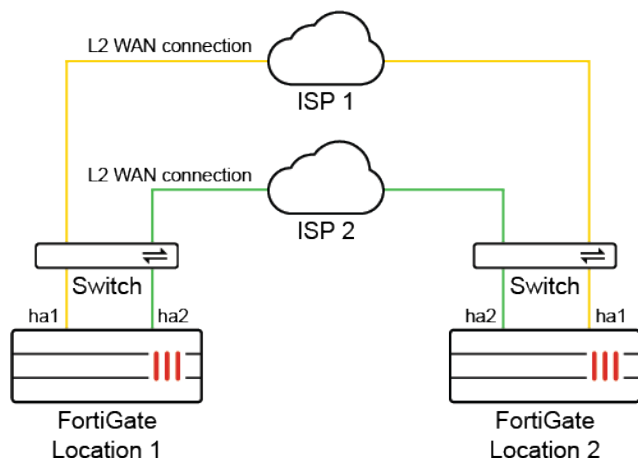

Because of the possible distance between the cluster members, it may take longer for heartbeat packets to be transmitted between cluster units. If the time it takes and the possible latency and packet losses cause the configured heartbeat lost threshold to be exceeded, then a split brain scenario can occur (see [Split brain scenario](#)).

To avoid this, you can increase the heartbeat interval (the time between the sending of heartbeat packets) so that the cluster expects extra time between heartbeat packets. A general rule is to configure the failover time to be longer than the maximum latency. You could also increase the `hb-lost-threshold`, which is the number of lost heartbeats to signal a failure, in order to tolerate losing more heartbeat packets if the network connection is less reliable.

### To configure the heartbeat interval and lost threshold:

```
config system ha
    set hb-interval <integer>
    set hb-lost-threshold <integer>
end
```

A longer interval and threshold can lead to slower failover time, and a shorter interval and threshold may lead to false positives. Therefore, these settings should be fine-tuned based on individual network scenarios. Additional options include:


- Using multiple heartbeat interfaces and different link paths for heartbeat packets to optimize HA heartbeat communication.
- Configuring QoS on the links used for HA heartbeat traffic to make sure heartbeat communication has the highest priority.

For information about changing the heartbeat interval and other heartbeat related settings, see [Modifying heartbeat timing](#).

## HA between remote sites over managed FortiSwitches

In a multi-site FortiGate HA topology that uses managed FortiSwitches in a multi-chassis link aggregation group (MCLAG) to connect between sites, HA heartbeat signals can be sent through the switch layer of the FortiSwitches, instead of through back-to-back links between the heartbeat interfaces. This means that two fiber connections can be used, instead of four (two back-to-back heartbeat fiber connections and two connections for the FortiSwitches). The FortiSwitches can be different models, but must all support MCLAG and be running version 6.4.2 or later.

This example shows how to configure heartbeat VLANs to assign to the access ports that the heartbeat interfaces connect to, passing over the trunk between the FortiSwitches on the two sites.

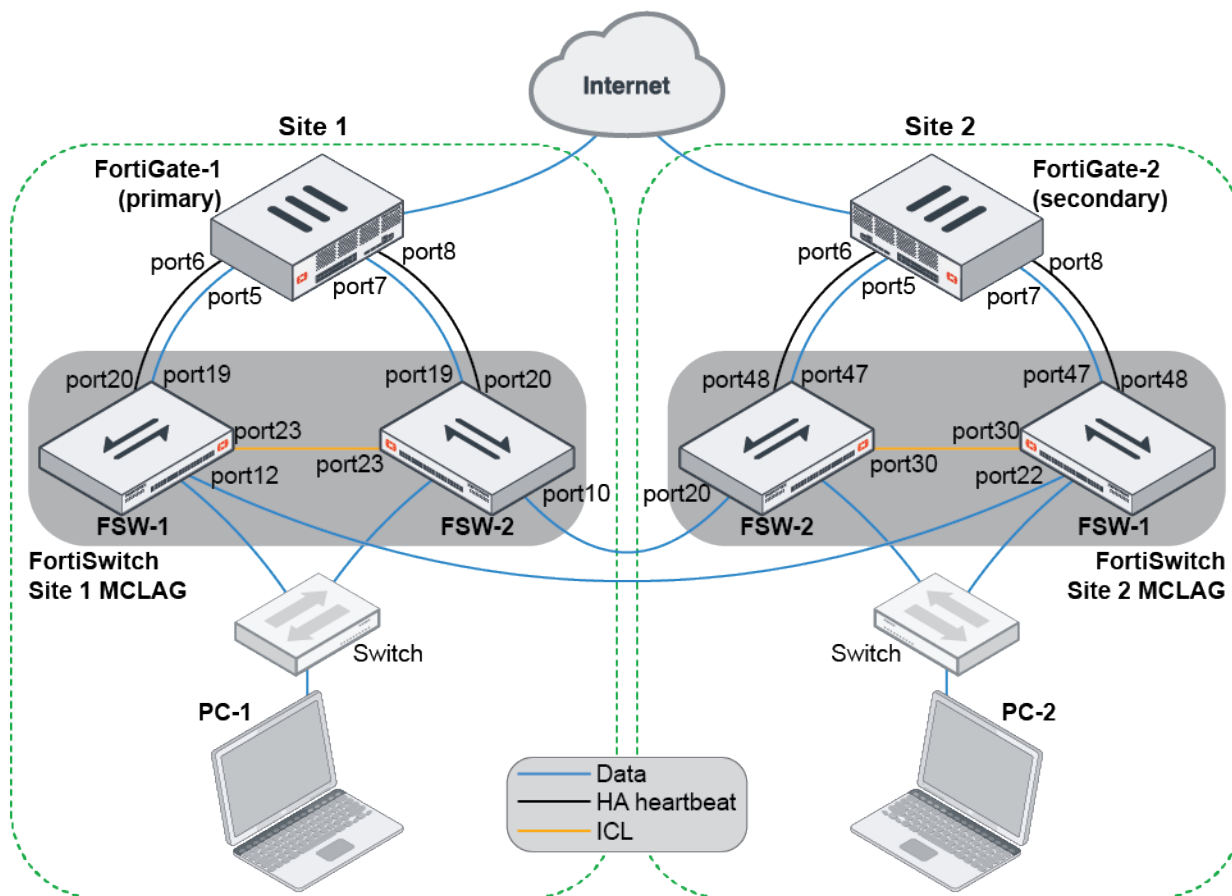

FortiGate HA is with two FortiGates in separate locations and the switch layer connection between the FortiSwitches is used for the heartbeat signal.

### To configure the example:

1. Disconnect the physical connections between Site 1 and Site 2:
  - Disconnect the cable on Site 1 FWS-1 port 12.
  - Disconnect the cable on Site 1 FWS-2 port 10.
2. Configure Site 1:

- a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiLink Interface* and configure FortiLink:

**Edit FortiLink Interface**

Name: fortilink  
 Alias:   
 Type: FortiLink (802.3ad Aggregate)  
 VRF ID: 0  
 Interface members: port5, port7  
 Address: IP/Netmask: 169.254.1.1/255.255.255.0  
 Connected devices: 2 FortiSwitch(es)  
 Automatically authorize devices: ☐  
 FortiLink split interface: ☐  
 IoT scanning: ☐  
 DHCP Server: ☒ Enabled  
 DHCP status: Enabled  
 Address range: 169.254.1.2-169.254.1.254  
 Netmask: 255.255.255.0  
 Default gateway: Same as Interface IP  
 Apply

- b. Go to *System* > *HA* and configure HA:
- Set the heartbeat ports to the ports that are connected to FortiSwitch.
  - Adjust the priority and enable override so that this FortiGate becomes the primary.

**High Availability**

Mode: Active-Passive  
 Device priority: 200  
 Cluster Settings: Group name: test, Password: \*\*\*\*\*  
 Session pickup: ☐  
 Monitor interfaces: port6, port8  
 Heartbeat interfaces: port6, port8  
 Heartbeat Interface Priority: port6: 50, port8: 50  
 Management Interface Reservation: ☐  
 Unicast Heartbeat: ☐  
 OK Cancel

- c. Go to *WiFi & Switch Controller* > *FortiSwitch VLANs* and create switch VLANs that are dedicated to each FortiGate HA heartbeat interface between the two FortiGates: Heartbeat VLAN 1000 and Heartbeat VLAN 1100.

**New Interface**

Name: HeartBeat  
 Alias:   
 Type: VLAN  
 Interface: fortilink  
 VLAN ID: 1000  
 VRF ID: 0  
 Color:   
 Role: LAN  
 Address: Addressing mode: Manual, DHCP, Auto-managed by FortiPAM, PPPoE  
 IP/Netmask: 0.0.0.0/0.0.0.0  
 Create address object matching subnet: ☒  
 Name: HeartBeat address  
 Destination: 0.0.0.0/0.0.0.0  
 OK Cancel

- d. Assign the native VLAN of the switch ports that are connected to the heartbeat ports to the created VLAN. Each HA heartbeat should be in its own VLAN.
- Go to *WiFi & Switch Controller > FortiSwitch Ports*.
  - In the *Native VLAN* column for the heartbeat port that is connected to FSW-1, click the edit icon and select the *Heartbeat VLAN*.

| + Create New        |       | Edit        | Delete                              | Search            |               |     | Port               | Trunk | Faceplates |
|---------------------|-------|-------------|-------------------------------------|-------------------|---------------|-----|--------------------|-------|------------|
| Port                | Trunk | Access Mode | Enabled Features                    | Native VLAN       | Allowed VLANs | PoE | Device Information |       |            |
| S248DN3X17000000 52 |       |             |                                     |                   |               |     |                    |       |            |
| port10              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port11              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port12              |       | Normal      | Edge Port<br>Spanning Tree Protocol | FS000000000000000 |               |     |                    |       |            |
| port13              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port14              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port15              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port16              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port17              |       | Normal      | Edge Port<br>Spanning Tree Protocol | S248EPTF18000000  |               |     |                    |       |            |
| port18              |       | Normal      | Edge Port<br>Spanning Tree Protocol | default           | quarantine    |     |                    |       |            |
| port19              |       | Normal      | Edge Port<br>Spanning Tree Protocol | FGT3HD9999000000  |               |     |                    |       |            |
| port20              |       | Normal      | Edge Port<br>Spanning Tree Protocol | Heartbeat         | quarantine    |     |                    |       |            |

- In the *Native VLAN* column for the heartbeat port that is connected to FSW-2, click the edit icon and select the *Heartbeat2 VLAN*.
- e. On each FortiSwitch, enable MCLAG-ICL on the trunk port:

```
config switch trunk
  edit D243Z17000032-0
    set mclag-icl enable
  next
end
```

- Configure Site 2 the same as Site 1, except set the HA priority so that the FortiGate becomes the secondary.
- Disconnect the physical connections for FortiGate HA and FortiLink interfaces on Site 2:
  - Disconnect the cable on Site 2 FSW-1 ports 47 and 48.
  - Disconnect the cable on Site 2 FSW-2 ports 47 and 48.
- Connect cables between the FortiSwitch MCLAG in Site 1 and Site 2:
  - Connect a cable from Site 1 FSW-1 port 12 to Site 2 FSW-1 port 22.
  - Connect a cable from Site 1 FSW-2 port 10 to Site 2 FSW-2 port 20.
- On all of the FortiSwitches, configure the `auto-isl-port-group`. The group must match on both sides.
  - Site 1 FSW-1:
 

Set `members` to the port that is connected to Site 2 FSW-1:

```
config switch auto-isl-port-group
  edit 1
    set members port12
  next
end
```

- Site 1 FSW-2:
 

Set `members` to the port that is connected to Site 1 FSW-1:



```

config switch auto-isrl-port-group
  edit 1
    set members port22
  next
end

```

**c. Site 2 FSW-1:**

Set members to the port that is connected to Site 2 FSW-2:

```

config switch auto-isrl-port-group
  edit 1
    set members port10
  next
end

```

**d. Site 2 FSW-2:**

Set members to the port that is connected to Site 1 FSW-2:

```

config switch auto-isrl-port-group
  edit 1
    set members port20
  next
end


```

7. Connect the FortiGate HA and FortiLink interface connections on Site 2.

8. Configure a firewall policy and route for traffic so that the client can reach the internet.

9. Wait for HA to finish synchronizing and for all of the FortiSwitches to come online, then on FortiGate-1, go to *WiFi & Switch Controller > Managed FortiSwitches* and select the Topology view from the drop-down on the right.

The page should look similar to the following:

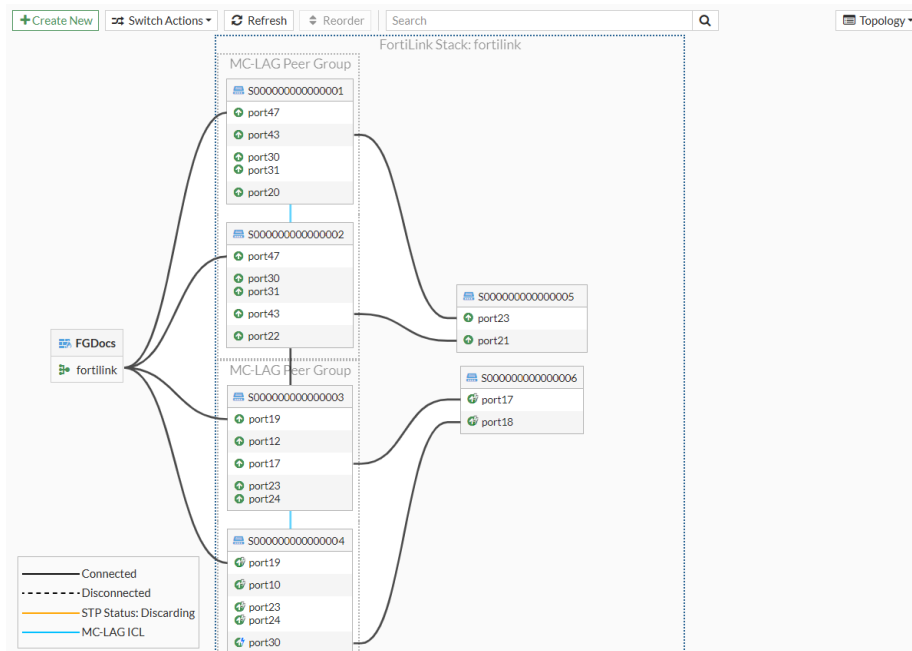

### To test the configuration to confirm what happens when there is a failover:

1. On both PC-1 and PC-2, access the internet and monitor traffic. The traffic should be going through the primary FortiGate.
2. Perform a continuous ping to an outside IP address, then reboot any one of the FortiSwitches. Traffic from both Site 1 and Site 2 to the internet should be recovered in approximately five seconds.
3. Perform a continuous ping to an outside IP address, then force an HA failover (see [Force HA failover for testing and demonstrations on page 2390](#)). Traffic from both Site 1 and Site 2 to the internet should be recovered in approximately five seconds.
4. After an HA failover, on the new primary FortiGate, go to *WiFi & Switch Controller > Managed FortiSwitch*. The switch layer tiering will be changed so that the directly connected FortiSwitches are at the top of the topology.

## HA using a hardware switch to replace a physical switch

An HA cluster can be deployed without physical switches connecting the traffic interfaces on the primary and secondary members. This setup may be desirable in certain environments where the network infrastructure must be kept to a bare minimum.


Generally, using a hardware switch to replace a physical switch is not recommended, as it offers no redundancy or interface monitoring.

- If one FortiGate loses power, all of the clients connected to that FortiGate device cannot go to another device until that FortiGate recovers.
- A hardware switch cannot be used as a monitor interface in HA. Any incoming or outgoing link failures on hardware member interfaces will not trigger failover; this can affect traffic.

Therefore, assess your environment thoroughly before applying this solution.

## Examples

The examples use the following topology:

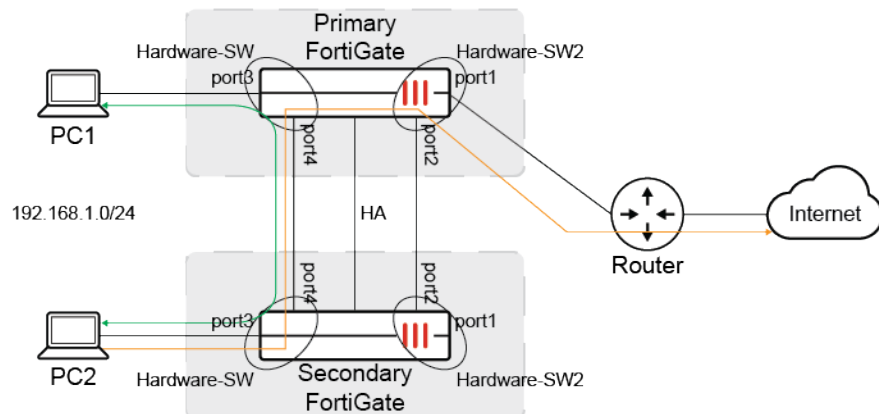

## Traffic between hardware switches

When using Hardware switch in HA environment, a client device connected to the hardware switch on the primary FortiGate can communicate with client devices connected to the hardware switch on secondary FortiGates as long as

there is a direct connection between the two switches.

### To configure the FortiGate devices:

1. Connect the LAN side of the FortiGate cluster as shown in the topology diagram.
2. On each FortiGate, configure HA:

```
config system ha
  set mode a-a
  set group-name Example_cluster
  set hbdev ha1 10 ha2 20
end
```

3. On the primary FortiGate, configure the hardware switch:

```
config system virtual-switch
  edit Hardware-SW
    set physical-switch sw0
    config port
      edit port3
      next
      edit port4
      next
    end
  next
end
```

4. On each FortiGate, configure the IP addresses on the hardware switches:

```
config system interface
  edit Hardware-SW
    set ip 192.168.10.1 255.255.255.0
    set allowaccess ping ssh http https
  next
end
```

After configuring the hardware switches, PC1 and PC2 can now communicate with each other.

## Traffic passes through FortiGate

If client device needs to send traffic through the FortiGate, additional firewall configuration on the FortiGate is required.

All traffic from the hardware switches on either the primary or secondary FortiGate reaches the primary FortiGate first. The traffic is then directed according to the HA mode and firewall configuration.

On the WAN side, in order for both HA members to reach the upstream router without connecting to a switch, a hardware switch must be configured with a direct connection between the cluster members.

### To configure the FortiGate devices:

1. Connect the WAN side of the FortiGate cluster as shown in the topology diagram.
2. On the primary FortiGate, configure another hardware switch for the WAN connection:

```
config system virtual-switch
  edit Hardware-SW2
    set physical-switch sw0
  config port
```

```
        edit port1
        next
        edit port2
        next
    end
next
end
```

**3. On each FortiGate, configure the IP addresses on the hardware switch:**

```
config system interface
    edit Hardware-SW2
        set ip 172.16.200.1 255.255.255.0
        set allowaccess ping ssh http https
    next
end
```

**4. On each FortiGate, configure a firewall policy:**

```
config firewall policy
    edit 1
        set srcintf Hardware-SW
        set dstintf Hardware-SW2
        set srcaddr all
        set dstaddr all
        set service ALL
        set action accept
        set schedule always
        set nat enable
    next
end
```

**5. On each FortiGate, configure a static route:**

```
config router static
    edit 1
        set device Hardware-SW2
        set gateway 172.16.200.254
    next
end
```

Traffic from PC1 and PC2 can now reach destinations outside of the FortiGate cluster.

## VDOM exceptions

VDOM exceptions are settings that can be selected for specific VDOMs or all VDOMs that are not synchronized to other HA members. This can be required when cluster members are not in the same physical location, subnets, or availability zones in a cloud environment.

Some examples of possible use cases include:

- You use different source IP addresses for FortiAnalyzer logging from each cluster member. See [Override FortiAnalyzer and syslog server settings on page 2384](#) for more information.
- You need to keep management interfaces that have specific VIPs or local subnets that cannot transfer from being synchronized.
- In a unicast HA cluster in the cloud, you use NAT with different IP pools in different subnets, so IP pools must be exempt.

When a VDOM exception is configured, the object will not be synchronized between the primary and secondary devices when the HA forms. Different options can be configured for every object.

When VDOM mode is disabled, the configured object is excluded for the entire device. To define a scope, VDOM mode must be enabled and the object must be configurable in a VDOM.

VDOM exceptions are synchronized to other HA cluster members.

### To configure VDOM exceptions:

```
config global
    config system vdom-exception
        edit 1
            set object <object name>
            set scope {all* | inclusive | exclusive}
            set vdom <vdom name>
        next
    end
end
```

|        |                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| object | The name of the configuration object that can be configured independently for some or all of the VDOMs.<br>See <a href="#">Objects on page 2383</a> for a list of available settings and resources.                                                                                                                                                                                              |
| scope  | Determine if the specified object is configured independently for all VDOMs or a subset of VDOMs. <ul style="list-style-type: none"> <li>all: Configure the object independently on all VDOMs.</li> <li>inclusive: Configure the object independently only on the specified VDOMs.</li> <li>exclusive: Configure the object independently on all of the VDOMs that are not specified.</li> </ul> |
| vdom   | The names of the VDOMs that are included or excluded.                                                                                                                                                                                                                                                                                                                                            |

## Objects

The following settings and resources can be exempt from synchronization in an HA cluster:

|                                          |                             |
|------------------------------------------|-----------------------------|
| log.fortianalyzer.setting                | user.radius                 |
| log.fortianalyzer.override-setting       | system.interface*           |
| log.fortianalyzer2.setting               | vpn.ipsec.phase1-interface* |
| log.fortianalyzer2.override-setting      | vpn.ipsec.phase2-interface* |
| log.fortianalyzer3.setting               | router.bgp*                 |
| log.fortianalyzer3.override-setting      | router.route-map*           |
| log.fortianalyzer-cloud.setting          | router.prefix-list*         |
| log.fortianalyzer-cloud.override-setting | firewall.ippool*            |
| log.syslogd.setting                      | firewall.ippool6*           |
| log.syslogd.override-setting             | router.static*              |
| log.syslogd2.setting                     | router.static6*             |
| log.syslogd2.override-setting            | firewall.vip*               |


|                               |                 |
|-------------------------------|-----------------|
| log.syslogd3.setting          | firewall.vip6*  |
| log.syslogd3.override-setting | system.sdwan*   |
| log.syslogd4.setting          | system.saml*    |
| log.syslogd4.override-setting | router.policy*  |
| system.central-management     | router.policy6* |
| system.csf                    |                 |

\* This setting can only be configured on cloud VMs.

## Override FortiAnalyzer and syslog server settings

In an HA cluster, secondary devices can be configured to use different FortiAnalyzer devices and syslog servers than the primary device. VDOMs can also override global syslog server settings.

### Configure a different syslog server on a secondary HA device

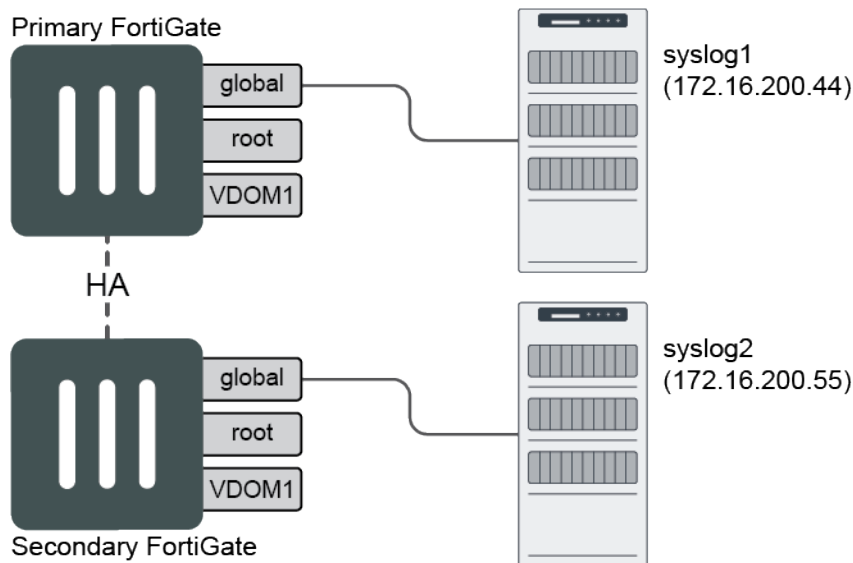

#### To configure the primary HA device:

1. Configure a global syslog server:

```
config global
    config log syslog setting
        set status enable
        set server 172.16.200.44
        set facility local6
        set format default
    end
end
```

2. Set up a VDOM exception to enable setting the global syslog server on the secondary HA device:

```
config global
    config system vdom-exception
```

```

        edit 1
            set object log.syslogd.setting
        next
    end
end

```

### To configure the secondary HA device:

#### 1. Configure a global syslog server:

```

config global
    config log syslogd setting
        set status enable
        set server 172.16.200.55
        set facility local5
    end
end

```

#### 2. After the primary and secondary device synchronize, generate logs on the secondary device.

### To confirm that logs are been sent to the syslog server configured on the secondary device:

#### 1. On the primary device, retrieve the following packet capture from the secondary device's syslog server:


```

# diagnose sniffer packet any "host 172.16.200.55" 6
interfaces=[any]
filters=[host 172.16.200.55]

266.859494 port2 out 172.16.200.2.7434 -> 172.16.200.55.514: udp 278
0x0000  0000 0000 0000 0009 0f09 0004 0800 4500      .....E.
0x0010  0132 f3c7 0000 4011 9d98 ac10 c802 ac10      .2....@.....
0x0020  c837 1d0a 0202 011e 4b05 3c31 3734 3e64      .7.....K.<174>d
0x0030  6174 653d 3230 3230 2d30 332d 3134 2074      ate=2020-03-14.t
0x0040  696d 653d 3132 3a30 303a 3035 2064 6576      ime=12:00:05.dev
0x0050  6e61 6d65 3d22 466f 7274 6947 6174 652d      name="FGT-81E-Sl
0x0060  3831 455f 4122 2064 6576 6964 3d22 4647      ave-A".devId="FG
0x0070  5438 3145 3451 3136 3030 3030 3438 2220      T81E4Q16000048".
0x0080  6c6f 6769 643d 2230 3130 3030 3230 3032      logId="010002002
0x0090  3722 2074 7970 653d 2265 7665 6e74 2220      7".type="event".
0x00a0  7375 6274 7970 653d 2273 7973 7465 6d22      subtype="system"
0x00b0  206c 6576 656c 3d22 696e 666f 726d 6174      .level="informat
0x00c0  696f 6e22 2076 643d 2276 646f 6d31 2220      ion".vd="vdom1".
0x00d0  6576 656e 7474 696d 653d 3135 3834 3231      eventtime=158421
0x00e0  3234 3035 3835 3938 3335 3639 3120 747a      2405859835691.tz
0x00f0  3d22 2d30 3730 3022 206c 6f67 6465 7363      ="-0700".logdesc
0x0100  3d22 4f75 7464 6174 6564 2072 6570 6f72      ="Outdated.repor
0x0110  7420 6669 6c65 7320 6465 6c65 7465 6422      t.files.deleted"
0x0120  206d 7367 3d22 4465 6c65 7465 2031 206f      .msg="Delete.1.o
0x0130  6c64 2072 6570 6f72 7420 6669 6c65 7322      ld.report.files"

```

## Configure a different syslog server in the root VDOM on a secondary HA device

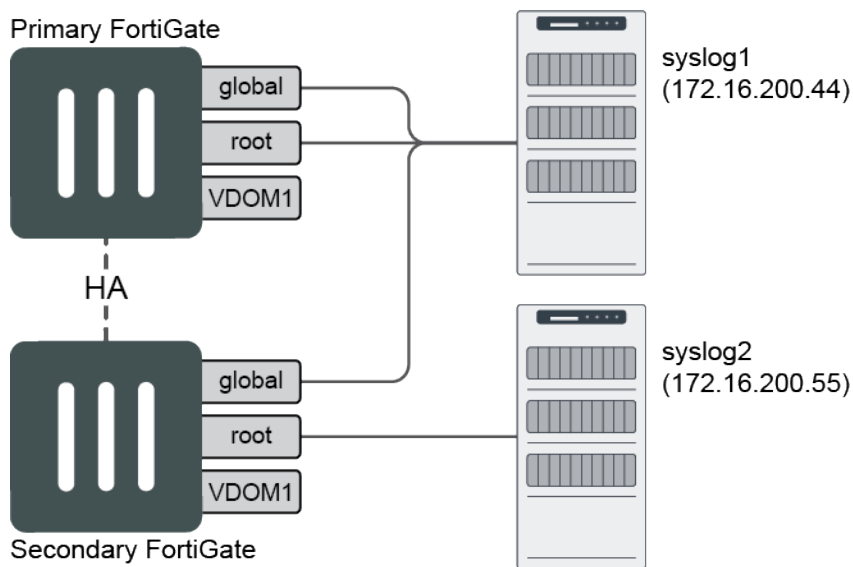

### To configure the primary HA device:

#### 1. Configure a global syslog server:

```
config global
    config log syslog setting
        set status enable
        set server 172.16.200.44
        set facility local6
        set format default
    end
end
```

#### 2. Set up a VDOM exception to enable syslog-override in the secondary HA device root VDOM:

```
config global
    config system vdom-exception
        edit 1
            set object log.syslogd.override-setting
            set scope inclusive
            set vdom root
        next
    end
end
```

#### 3. In the VDOM, enable syslog-override in the log settings, and set up the override syslog server:

```
config root
    config log setting
        set syslog-override enable
    end
    config log syslog override-setting
        set status enable
        set server 172.16.200.44
        set facility local6
        set format default
    end
end
```



```

    end
end

```

After `syslog-override` is enabled, an override syslog server must be configured, as logs will not be sent to the global syslog server.

### To configure the secondary HA device:

1. Configure an override syslog server in the root VDOM:

```

config root
    config log syslogd override-setting
        set status enable
        set server 172.16.200.55
        set facility local5
        set format default
    end
end

```

2. After the primary and secondary device synchronize, generate logs in the root VDOM on the secondary device.

### To confirm that logs are been sent to the syslog server configured for the root VDOM on the secondary device:

1. On the primary device, retrieve the following packet capture from the syslog server configured in the root VDOM on the secondary device:

```

# diagnose sniffer packet any "host 172.16.200.55" 6
interfaces=[any]
filters=[host 172.16.200.55]

156.759696 port2 out 172.16.200.2.1165 -> 172.16.200.55.514: udp 277
0x0000  0000 0000 0000 0009 0f09 0004 0800 4500      .....E.
0x0010  0131 f398 0000 4011 9dc8 ac10 c802 ac10      .1....@.....
0x0020  c837 048d 0202 011d af5f 3c31 3734 3e64      .7....._<174>d
0x0030  6174 653d 3230 3230 2d30 332d 3134 2074      ate=2020-03-14.t
0x0040  696d 653d 3131 3a33 353a 3035 2064 6576      ime=11:35:05.dev
0x0050  6e61 6d65 3d22 466f 7274 6947 6174 652d      name="FGT-81E-Sl
0x0060  3831 455f 4122 2064 6576 6964 3d22 4647      ave-A".devId="FG
0x0070  5438 3145 3451 3136 3030 3030 3438 2220      T81E4Q16000048".
0x0080  6c6f 6769 643d 2230 3130 3030 3230 3032      logId="010002002
0x0090  3722 2074 7970 653d 2265 7665 6e74 2220      7".type="event".
0x00a0  7375 6274 7970 653d 2273 7973 7465 6d22      subtype="system"
0x00b0  206c 6576 656c 3d22 696e 666f 726d 6174      .level="informat
0x00c0  696f 6e22 2076 643d 2272 6f6f 7422 2065      ion".vd="root".e
0x00d0  7665 6e74 7469 6d65 3d31 3538 3432 3130      venttime=1584210
0x00e0  3930 3537 3539 3334 3132 3632 2074 7a3d      905759341262.tz=
0x00f0  222d 3037 3030 2220 6c6f 6764 6573 633d      "-0700".logdesc=
0x0100  224f 7574 6461 7465 6420 7265 706f 7274      "Outdated.report
0x0110  2066 696c 6573 2064 656c 6574 6564 2220      .files.deleted".
0x0120  6d73 673d 2244 656c 6574 6520 3220 6f6c      msg="Delete.2.ol
0x0130  6420 7265 706f 7274 2066 696c 6573 22      d.report.files"

```

## Routing NetFlow data over the HA management interface

In an HA environment, the `ha-direct` option allows data from services such as syslog, FortiAnalyzer, SNMP, and NetFlow to be routed over the outgoing interface.

The following example shows how NetFlow data can be routed over the HA management interface `mgmt1`.

### To route NetFlow data over the HA management interface:

1. On the primary unit (FortiGate A), configure the HA and `mgmt1` interface settings:

```
(global) # config system ha
    set group-name "test-ha"
    set mode a-p
    set password *****
    set hbdev "port6" 50
    set hb-interval 4
    set hb-lost-threshold 10
    set session-pickup enable
    set ha-mgmt-status enable
    config ha-mgmt-interfaces
        edit 1
            set interface "mgmt1"
        next
    end
    set override enable
    set priority 200
    set ha-direct enable
end

(global) # config system interface
    edit "mgmt1"
        set ip 10.6.30.111 255.255.255.0
        set allowaccess ping https ssh http telnet fgfm
        set type physical
        set dedicated-to management
        set role lan
        set snmp-index 1
    next
end
```

2. On the secondary unit (FortiGate B), configure the HA and `mgmt1` interface settings:

```
(global) # config system ha
    set group-name "test-ha"
    set mode a-p
    set password *****
    set hbdev "port6" 50
    set hb-interval 4
    set hb-lost-threshold 10
    set session-pickup enable
    set ha-mgmt-status enable
    config ha-mgmt-interfaces
        edit 1
            set interface "mgmt1"
        next
    end
```

```

        set override enable
        set priority 100
        set ha-direct enable
    end

(global) # config system interface
    edit "mgmt1"
        set ip 10.6.30.112 255.255.255.0
        set allowaccess ping https ssh http telnet fgfm
        set type physical
        set dedicated-to management
        set role lan
        set snmp-index 1
    next
end

```

**3. On the primary unit (FortiGate A), configure the NetFlow setting:**

```

(global) # config system netflow
    set collector-ip 10.6.30.59
end

```

**4. Verify that NetFlow uses the mgmt1 IP:**

```

(global) # diagnose test application sflowd 3

```

**5. Verify that the NetFlow packets are being sent by the mgmt1 IP:**

```

(vdom1) # diagnose sniffer packet any 'udp and port 2055' 4
interfaces=[any]
filters=[udp and port 2055]
8.397265 mgmt1 out 10.6.30.111.1992 -> 10.6.30.59.2055: udp 60
23.392175 mgmt1 out 10.6.30.111.1992 -> 10.6.30.59.2055: udp 188
23.392189 mgmt1 out 10.6.30.111.1992 -> 10.6.30.59.2055: udp 60
...
3 packets received by filter
0 packets dropped by kernel

```

**6. On the secondary device (FortiGate B), change the priority so that it becomes the primary:**

```

(global) # config system ha
    set priority 250
end

```

**7. Verify the NetFlow status on FortiGate A, which is using the new primary's mgmt1 IP:**

```

(global) # diagnose test application sflowd 3

```

**8. Verify that the NetFlow packets use the new source IP on FortiGate B:**

```

(vdom1) # diagnose sniffer packet any 'udp and port 2055' 4
interfaces=[any]
filters=[udp and port 2055]
7.579574 mgmt1 out 10.6.30.112.3579 -> 10.6.30.59.2055: udp 60
22.581830 mgmt1 out 10.6.30.112.3579 -> 10.6.30.59.2055: udp 60
29.038336 mgmt1 out 10.6.30.112.3579 -> 10.6.30.59.2055: udp 1140
^C
3 packets received by filter
0 packets dropped by kernel

```

## Force HA failover for testing and demonstrations



This command should only be used for testing, troubleshooting, maintenance, and demonstrations.

Do not use it in a live production environment outside of an active maintenance window.

HA failover can be forced on an HA primary device. The device will stay in a failover state (secondary) regardless of the conditions. The only way to remove the failover status is by manually turning it off.

### Syntax

```
execute ha failover set <cluster_id>
execute ha failover unset <cluster_id>
```

| Variable     | Description                                                                                                                    |
|--------------|--------------------------------------------------------------------------------------------------------------------------------|
| <cluster_id> | The cluster ID is 1 for any cluster that is not in virtual cluster mode, and can be 1 or 2 if virtual cluster mode is enabled. |

### Example

#### To manually force an HA failover:

```
# execute ha failover set 1
Caution: This command will trigger an HA failover.
It is intended for testing purposes.
Do you want to continue? (y/n)y
```

#### To view the failover status:

```
# execute ha failover status
failover status: set
```

#### To view the system status of a device in forced HA failover:

```
# get system ha status
HA Health Status: OK
Model: FortiGate-300D
Group Name:
Group ID: 240
Debug: 0
Cluster Uptime: 0 days 2:11:46
Cluster state change time: 2020-03-12 17:38:04
Primary selected using:
<2020/03/12 17:38:04> FGT3HD3914800153 is selected as the primary because EXE_FAIL_OVER
flag is set on peer member FGT3HD3914800069.
<2020/03/12 15:27:26> FGT3HD3914800069 is selected as the primary because it has the
largest value of override priority.
ses_pickup: disable
override: enable
Configuration Status:
FGT3HD3914800069(updated 4 seconds ago): in-sync
```

```

FGT3HD3914800153(updated 3 seconds ago): in-sync
System Usage stats:
  FGT3HD3914800069(updated 4 seconds ago):
    sessions=5, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=30%
  FGT3HD3914800153(updated 3 seconds ago):
    sessions=41, average-cpu-user/nice/system/idle=0%/0%/0%/99%, memory=30%
HBDEV stats:
  FGT3HD3914800069(updated 4 seconds ago):
    port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=15914162/42929/0/0,
tx=15681840/39505/0/0
    port5: physical/1000auto, up, rx-bytes/packets/dropped/errors=17670346/52854/0/0,
tx=20198409/54692/0/0
  FGT3HD3914800153(updated 3 seconds ago):
    port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=16636700/45544/0/0,
tx=15529791/39512/0/0
    port5: physical/1000auto, up, rx-bytes/packets/dropped/errors=20199928/54699/0/0,
tx=17672146/52862/0/0
Secondary: FortiGate-300D , FGT3HD3914800069, HA cluster index = 1
Primary: FortiGate-300D , FGT3HD3914800153, HA cluster index = 0
number of vcluster: 1
vcluster 1: standby 169.254.0.1
Secondary: FGT3HD3914800069, HA operating index = 1
Primary: FGT3HD3914800153, HA operating index = 0

```

### To stop the failover status:

```

# execute ha failover unset 1
Caution: This command may trigger an HA failover.
It is intended for testing purposes.
Do you want to continue? (y/n)y

```

### To view the system status of a device after forced HA failover is disabled:

```

# get system ha status
HA Health Status: OK
Model: FortiGate-300D
Mode: HA A-P
Group Name:
Group ID: 240
Debug: 0
Cluster Uptime: 0 days 2:14:55
Cluster state change time: 2020-03-12 17:42:17
Primary selected using:
  <2020/03/12 17:42:17> FGT3HD3914800069 is selected as the primary because it has the
largest value of override priority.
  <2020/03/12 17:38:04> FGT3HD3914800153 is selected as the primary because EXE_FAIL_OVER
flag is set on peer member FGT3HD3914800069.
  <2020/03/12 15:27:26> FGT3HD3914800069 is selected as the primary because it has the
largest value of override priority.
ses_pickup: disable
override: enable
Configuration Status:
  FGT3HD3914800069(updated 3 seconds ago): in-sync
  FGT3HD3914800153(updated 2 seconds ago): in-sync
System Usage stats:
  FGT3HD3914800069(updated 3 seconds ago):

```

```

    sessions=0, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=30%
FGT3HD3914800153(updated 2 seconds ago):
    sessions=38, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=30%
HBDEV stats:
    FGT3HD3914800069(updated 3 seconds ago):
        port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=16302442/43964/0/0,
tx=16053848/40454/0/0
        port5: physical/1000auto, up, rx-bytes/packets/dropped/errors=18161941/54088/0/0,
tx=20615650/55877/0/0
    FGT3HD3914800153(updated 2 seconds ago):
        port3: physical/1000auto, up, rx-bytes/packets/dropped/errors=17033009/46641/0/0,
tx=15907891/40462/0/0
        port5: physical/1000auto, up, rx-bytes/packets/dropped/errors=20617180/55881/0/0,
tx=18163135/54091/0/0
Primary: FortiGate-300D , FGT3HD3914800069, HA cluster index = 1
Secondary: FortiGate-300D , FGT3HD3914800153, HA cluster index = 0
number of vcluster: 1
vcluster 1: work 169.254.0.2
Primary: FGT3HD3914800069, HA operating index = 0
Secondary: FGT3HD3914800153, HA operating index = 1

```

## Disabling stateful SCTP inspection

There is an option in FortiOS to disable stateful SCTP inspection. This option is useful when FortiGates are deployed in a high availability (HA) cluster that uses the FortiGate Clustering Protocol (FGCP) and virtual clustering in a multihoming topology. In this configuration, the primary stream control transmission protocol (SCTP) path traverses the primary FortiGate node by using its active VDOM (for example, VDOM1), and the backup SCTP path traverses the other passive FortiGate node by using its active VDOM (for example, VDOM2).

When stateful SCTP inspection is enabled, SCTP heartbeat traffic fails by means of the backup path because the primary path goes through a different platform and VDOM. Since there is no state sharing between VDOMs, the passive FortiGate is unaware of the original SCTP session and drops the heartbeats because of no associated sessions. When stateful SCTP inspection is disabled, the passive node permits the SCTP heartbeats to pass.


When set to `enable`, SCTP session creation without SCTP INIT is enabled. When set to `disable`, SCTP session creation without SCTP INIT is disabled (this is the default setting):

```

config system settings
    set sctp-session-without-init {enable | disable}
end

```

The following is an example topology and scenario:

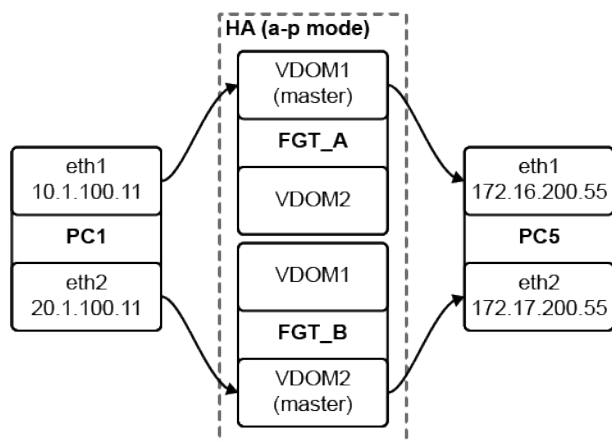

In this example, FGT\_A and FGT\_B are in HA a-p mode with two virtual clusters. Two primaries exist on different FortiGate units. PC1 eth1 can access PC5 eth1 through VDOM1, and PC1 eth2 can access PC5 eth2 through VDOM2.

On PC5, to listen for an SCTP connection:

```
sctp_darn -H 172.16.200.55 -B 172.17.200.55 -P 2500 -l
```

On PC1, to start an SCTP connection:

```
sctp_darn -H 10.1.100.11 -B 20.1.100.11 -P 2600 -c 172.16.200.55 -c 172.17.200.55 -p 2500 -s
```

An SCTP four-way handshake is on one VDOM, and a session is created on that VDOM. With the default configuration, there is no session on any other VDOM, and the heartbeat on another path (another VDOM) is dropped. After enabling `sctp-session-without-init`, the other VDOM creates the session when it receives the heartbeat, and the heartbeat is forwarded:

```
config system settings
  set sctp-session-without-init enable
end
```

## Resume IPS scanning of ICCP traffic after HA failover

After HA failover occurs, the IPS engine will resume processing ICCP sessions and keep the traffic going on the new primary unit. `session-pickup` must be enabled in an active-passive cluster to pick up the ICCP sessions.

### Example

The following example uses an active-passive cluster. See [HA active-passive cluster setup on page 2352](#) for more information.

#### To configure HA:

```
config system ha
  set group-name "HA-APP"
  set mode a-p
  set password *****
  set hbdev "port3" 100
  set session-pickup enable
  set override enable
end
```

## Session states before failover

When HA is working, the ICCP session information is stored in the HA session cache on the secondary FortiGate.

### To verify the HA session cache on the secondary FortiGate:

```
# diagnose ips share list
HA Session Cache
client=10.1.100.178:57218 server=172.16.200.177:102
service=39, ignore_app_after=0, last_app=76919, buffer_len=32
stock tags: nr=981, hash=e68dc8120970448
custom tags: nr=0, hash=1a49b996b6a42aa2
tags [count=2]: s-737, s-828,
```

The ICCP session information can be found in the IPS session list and the session table on the primary FortiGate.

### To verify the IPS session information on the primary FortiGate:

```
# diagnose ips session list
SESSION id:1 serial:35487 proto:6 group:6 age:134 idle:1 flag:0x800012a6
feature:0x4 encap:0 ignore:0,0 ignore_after:204800,0
tunnel:0 children:0 flag:..s-....-....
C-10.1.100.178:57218, S-172.16.200.177:102
state: C-ESTABLISHED/13749/0/0/0/0, S-ESTABLISHED/48951/0/0/0/0 pause:0, paws:0
expire: 3599
app: unknown:0 last:44684 unknown-size:0
cnfm: cotp
set: cotp
asm: cotp
```

### To verify the system information on the primary FortiGate:

```
# diagnose sys session list
session info: proto=6 proto_state=11 duration=209 expire=3585 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=5
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty ndr npu syn_ses app_valid
statistic(bytes/packets/allow_err): org=11980/104/1 reply=57028/164/1 tuples=3
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=10->9/9->10 gwy=172.16.200.177/10.1.100.178
hook=post dir=org act=snat 10.1.100.178:57218->172.16.200.177:102(172.16.200.4:57218)
hook=pre dir=reply act=dnat 172.16.200.177:102->172.16.200.4:57218(10.1.100.178:57218)
hook=post dir=reply act=noop 172.16.200.177:102->10.1.100.178:57218(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=1
serial=00008a9f tos=ff/ff app_list=2003 app=44684 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
npu_state=0x003c94 ips_offload
npu info: flag=0x81/0x81, offload=8/8, ips_offload=1/1, epid=71/71, ipid=134/132,
vlan=0x0000/0x0000
vlifid=134/132, vtag_in=0x0000/0x0000 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=10/10
```



**Sample log on current primary FortiGate:**

```
# execute log display
304 logs found.
10 logs returned.
28.8% of logs has been searched.

1: date=2021-06-04 time=16:54:40 eventtime=1622850881110547135 tz="-0700" logid="1059028704"
type="utm" subtype="app-ctrl" eventtype="signature" level="information" vd="vd1" appid=44684
srcip=10.1.100.178 dstip=172.16.200.177 srcport=57218 dstport=102 srcintf="port2"
srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6 service="tcp/102"
direction="incoming" policyid=2 sessionid=35487 applist="test" action="pass"
appcat="Industrial" app="ICCP_Transfer.Reporting" incidentserialno=61868187 msg="Industrial:
ICCP_Transfer.Reporting," apprisk="elevated"
```

**Session states after failover**

After HA failover, the IPS engine on the new primary picks up the related ICCP sessions and continues passing the traffic. The HA session cache disappears on the new primary. The ICCP session now appears on the IPS session list and session table on the new primary.

**To verify the IPS session information on the new primary FortiGate:**

```
# diagnose ips session list
SESSION id:1 serial:35487 proto:6 group:6 age:90 idle:2 flag:0x820012a3
    feature:0x4 encap:0 ignore:1,0 ignore_after:204800,0
    tunnel:0 children:0 flag:....-....-..i.
C-10.1.100.178:57218, S-172.16.200.177:102
state: C-ESTABLISHED/9114/0/0/0/0, S-ESTABLISHED/0/0/0/0/0 pause:0, paws:0
expire: 28
app: unknown:0 last:44684 unknown-size:0
```

The server and client IPs, ports, and protocols remain the same.

**To verify the system information on the primary FortiGate:**

```
# diagnose sys session list
session info: proto=6 proto_state=11 duration=569 expire=3577 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=5
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty ndr npu syn_ses app_valid
statistic(bytes/packets/allow_err): org=38629/308/1 reply=160484/483/1 tuples=3
tx speed(Bps/kbps): 158/1 rx speed(Bps/kbps): 1139/9
orgin->sink: org pre->post, reply pre->post dev=10->9/9->10 gwy=172.16.200.177/10.1.100.178
hook=post dir=org act=snat 10.1.100.178:57218->172.16.200.177:102(172.16.200.4:57218)
hook=pre dir=reply act=dnat 172.16.200.177:102->172.16.200.4:57218(10.1.100.178:57218)
hook=post dir=reply act=noop 172.16.200.177:102->10.1.100.178:57218(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=2 auth_info=0 chk_client_info=0 vd=1
serial=00008a9f tos=ff/ff app_list=2003 app=44684 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpd_b_link_id=00000000 rpd_b_svc_id=0 ngfwid=n/a
```

```
npu_state=0x003c94 ips_offload
npu info: flag=0x81/0x81, offload=8/8, ips_offload=1/1, epid=71/71, ipid=134/132,
vlan=0x0000/0x0000
vlifid=134/132, vtag_in=0x0000/0x0000 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=10/10
```

The server and client IPs, ports, and NPU state remain the same.

### Sample log on new primary FortiGate:

```
# execute log display
653 logs found.
10 logs returned.
65.8% of logs has been searched.

1: date=2021-06-04 time=17:05:20 eventtime=1622851521364635480 tz="-0700" logid="1059028704"
type="utm" subtype="app-ctrl" eventtype="signature" level="information" vd="vd1" appid=44684
srcip=10.1.100.178 dstip=172.16.200.177 srcport=57218 dstport=102 srcintf="port2"
srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6 service="tcp/102"
direction="incoming" policyid=2 sessionid=35487 applist="test" action="pass"
appcat="Industrial" app="ICCP_Transfer.Reporting" incidentserialno=198181218
msg="Industrial: ICCP_Transfer.Reporting," apprisk="elevated"
```

## Querying autoscale clusters for FortiGate VM

When a FortiGate VM secondary device is added to a cluster, the new secondary member can query the cluster about its autoscale environment. FortiManager can then run this query on the new secondary member to update its autoscale record.

### To view cluster information from a secondary member:

```
# diagnose sys ha checksum autoscale-cluster
```

### Cluster information sample

### Sample cloud topology:

```
FGT_BYOL; primary; 10.0.0.6; FGVM04TM000000066
FGT_BYOL; secondary; 10.0.0.7; FGVM00000000056
FGT_PAYG; secondary; 10.0.0.4; FGTAZ000000000CD
FGT_PAYG; secondary; 10.0.0.5; FGTAZ0000000003D
```

From the secondary device, you can see cluster checksums and the primary device:

```
# diagnose sys ha checksum autoscale-cluster
===== FGTAZ000000000CD =====
is_autoscale_master()=0
debugzone
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
checksum
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
===== FGVM04TM000000066 =====
```

```

is_autoscale_master()=1
debugzone
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
checksum
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
===== FGVM00000000056 =====
is_autoscale_master()=0
debugzone
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
checksum
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
===== FGTAZ0000000003D =====
is_autoscale_master()=0
debugzone
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff
checksum
global: 56 49 b3 02 f2 b7 5b 82 ec 2d c2 1a ff 80 8c 79
root: bf 18 cf 83 1e 04 c3 04 4c e4 66 bc 38 fe 3a dc
all: 77 06 d0 89 6e 06 c0 86 17 98 53 72 33 85 ae ff

```

### To get ha sync information from the secondary device:

```

# get test hasync 50
autoscale_count=69. current_jiffies=41235125
  10.0.0.6, timeo=31430, serial_no=FGVM04TM19001766
  10.0.0.7, timeo=31430, serial_no=FGVM04TM19008156
  10.0.0.5, timeo=31430, serial_no=FGTAZR7UZRKKNR3D

```

## Cluster virtual MAC addresses

In a cluster, the FGCP assigns virtual MAC addresses (VMACs) to each primary device interface. HA uses VMAC addresses so that if a failover occurs, the new primary device interfaces will have the same VMAC addresses and IP addresses as the failed primary device. As a result, most network equipment will identify the new primary device as the same device as the failed primary device and still be able to communicate with the cluster.

If a cluster is operating in NAT mode, the FGCP assigns a different VMAC address to each primary device interface. VLAN subinterfaces are assigned the same VMAC address as the physical interface that the VLAN subinterface is added to. Redundant or 802.3ad aggregate interfaces are assigned the VMAC address of the first interface in the redundant or aggregate list.

If a cluster is operating in transparent mode, the FGCP assigns a VMAC address to the primary device's management IP address. Since you can connect to the management IP address from any interface, all FortiGate interfaces appear to have the same VMAC address.

The MAC address of a reserved management interface does not change to a VMAC address; it keeps its original MAC address.



Subordinate device MAC addresses do not change. Use `diagnose hardware deviceinfo nic <interface>` on the subordinate device to display the MAC addresses of each interface.

A MAC address conflict can occur when two clusters are operating on the same network using the same group ID (see [Diagnosing packet loss](#)). It is recommended that each cluster in the same network and broadcast domain uses a unique group ID.

## Failover

When the new primary device is selected after a failover, the primary device sends gratuitous ARP packets to update the devices connected to the cluster interfaces (usually layer 2 switches) with the VMAC addresses. This is sometimes called using gratuitous ARP packets (or GARP packets) to train the network. The gratuitous ARP packets sent from the primary unit are intended to make sure that the layer 2 switch forwarding databases (FDBs) are updated as quickly as possible.

Sending gratuitous ARP packets is not a requirement because connected devices will eventually learn of the new ports to forward the packets to. However, many network switches will update their FDBs more quickly after a failover if the new primary device sends gratuitous ARP packets.

## Configuring ARP packet settings

The following settings can be configured.

```
config system ha
    set arps <integer>
    set arps-interval <integer>
    set gratuitous-arps {enable | disable}
    set link-failed-signal {enable | disable}
end
```

|                                                    |                                                                                                                                                            |
|----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>arps &lt;integer&gt;</code>                  | Set the number of gratuitous ARPs; lower the value to reduce traffic, and increase the value to reduce failover time (1 - 60, default = 5).                |
| <code>arps-interval &lt;integer&gt;</code>         | Set the time between gratuitous ARPs; lower the value to reduce failover time, and increase the value to reduce traffic, in seconds (1 - 20, default = 8). |
| <code>gratuitous-arps {enable   disable}</code>    | Enable/disable gratuitous ARPs (default = enable).                                                                                                         |
| <code>link-failed-signal {enable   disable}</code> | Enable/disable shutting down all interfaces for one second after a failover. Use if gratuitous ARPs do not update the network (default = disable).         |

If you disable sending gratuitous ARP packets, it is recommended to enable the `link-failed-signal` setting. The `link-failed-signal` alerts the connected switches of a failed link, which triggers them to react immediately to the changes.

For more information about gratuitous ARP packets see [RFC 826](#) and [RFC 3927](#).

## Determining VMAC addresses

A VMAC address is determined based on following formula:

`<group-prefix>:<group-id_hex>:(<vcluster_integer> + <idx>)`

The `<group-prefix>` is determined by the following set of group IDs:

- Set 1: group IDs 0 - 255: group prefix 00:09:0f:09
- Set 2: group IDs 256 - 511: group prefix e0:23:ff:fc
- Set 3: group IDs 512 - 767: group prefix e0:23:ff:fd
- Set 4: group IDs 768 - 1023: group prefix e0:23:ff:fe

The `<group-id_hex>` is determined by the group ID % 256, converted to hexadecimal. For example:

| Group ID                | Hexadecimal ID |
|-------------------------|----------------|
| 0: $0 \% 256 = 0$       | 00             |
| 255: $255 \% 256 = 255$ | ff             |
| 256: $256 \% 256 = 0$   | 00             |
| 511: $511 \% 256 = 255$ | ff             |
| 512: $512 \% 256 = 0$   | 00             |
| ...                     | ...            |

The `<vcluster_integer>` is 00 for virtual cluster 1, and 20 for virtual cluster 2. If VDOMs are not enabled, HA sets the virtual cluster to 1 and by default all interfaces are in the root VDOM. Including virtual cluster and VDOM factors in the VMAC address formula means that the same formula can be used whether or not VDOMs and virtual clustering are enabled.

The `<idx>` is the index number of the interface. Interfaces are numbered from 0 to x (where x is the number of interfaces). Interfaces are numbered according to their map order. The first interface has an index of 0. The second interface in the list has an index of 1, and so on.

The following table compares the VMAC addresses for interfaces with an unchanged HA group ID (0) with VDOMs not enabled and interfaces when the group ID is changed to 34:

| Interface | VMAC address with unchanged group ID (0) | VMAC address with changed group ID (34) |
|-----------|------------------------------------------|-----------------------------------------|
| port5     | 00-09-0f-09-00-0a                        | 00-09-0f-09-22-0a                       |
| port6     | 00-09-0f-09-00-0b                        | 00-09-0f-09-22-0b                       |
| port7     | 00-09-0f-09-00-0c                        | 00-09-0f-09-22-0c                       |
| port8     | 00-09-0f-09-00-0d                        | 00-09-0f-09-22-0d                       |

Using the same interfaces, a cluster with VDOMs is enabled and the group ID changes to 35. The root VDOM contains port5 and port6 (virtual cluster 1), and vdom\_1 contains port7 and port8 (virtual cluster 2). The interfaces have the following VMAC addresses:

| Interface | VMAC address with group ID 35 |
|-----------|-------------------------------|
| port5     | 00-09-0f-09-23-0a             |
| port6     | 00-09-0f-09-23-0b             |
| port7     | 00-09-0f-09-23-2c             |
| port8     | 00-09-0f-09-23-2d             |

## Displaying VMAC addresses

Each FortiGate physical interface has two MAC addresses: the permanent and current hardware addresses. The permanent hardware address cannot be changed, as it is the actual MAC address of the interface hardware. The current hardware address can be changed, as it is the address seen by the network.

### To change the current hardware address on a FortiGate not operating in HA:

```
config system interface
    edit <name>
        set macaddr <address>
    next
end
```


In an operating cluster, the current hardware address of each cluster device interface is changed to the HA virtual MAC address by the FGCP. The `macaddr` option is not available for a functioning cluster.

### To display MAC addresses on a FortiGate operating in HA:

```
# diagnose hardware deviceinfo nic port1
...
Current_HWaddr 00:09:0f:09:ff:02
Permanent_HWaddr 08:5b:0e:72:3b:b2
```

## Diagnosing packet loss

A network can experience packet loss when two FortiGate HA clusters are deployed in the same broadcast domain due to MAC address conflicts. You can resolve the MAC address conflict by changing the HA group ID (or cluster ID) configuration of the two clusters.

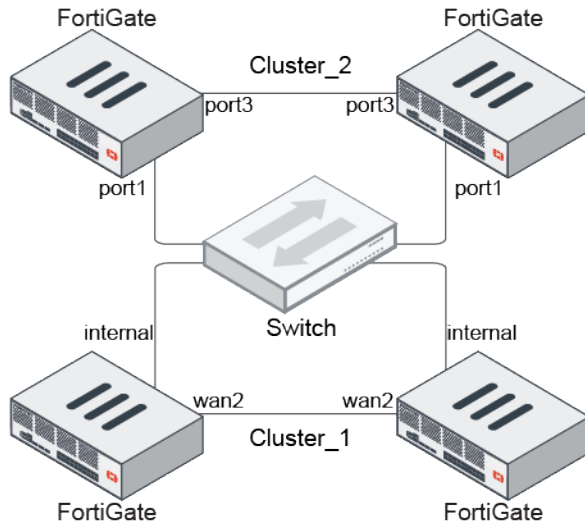

You can diagnose packet loss by pinging from one cluster to the other, or by pinging both of the clusters from a device within the broadcast domain.

#### To check for a MAC address conflict in a HA cluster:

1. On Cluster\_1 and Cluster\_2, check the VMAC address (`Current_HWaddr`) used in an interface on the primary device:

```
# diagnose hardware deviceinfo nic <interface>
```

If the group prefix and group hexadecimal ID are identical, there will be MAC address conflicts.

2. Change one of the clusters to use a different group ID:

```
config system ha
    set group-id <integer>
end
```

### Abbreviated TLS handshake after HA failover

TLS sessions that pass through an HA A-A or A-P cluster can use an abbreviated TLS handshake instead of a full TLS handshake upon failover from a primary HA unit to a secondary HA unit. This reduces session pickup delays by reducing the time needed to renegotiate the TLS session, given that the TLS session ticket can be re-used.


To accomplish this, FortiOS uses the web proxy global `ssl-ca-cert` to generate the key used in the TLS session ticket:

```
config web-proxy global
    set ssl-ca-cert "Fortinet_CA_SSL"
end
```

The certificate can be synchronized to the secondary HA unit, which allows the secondary unit to generate the same session key for a TLS session. When a TLS session reconnects after HA failover using the same session ticket as the first session, the new primary unit is able to generate the same key matching that session ticket and allow an abbreviated handshake.

## Example

In this example, OpenSSL is used to create a TLS session between the client and the server through the primary FortiGate. The session ticket is outputted and saved. Upon failover, the same session ticket is reused to create a TLS session through the new primary unit. Because the new primary unit uses the same certificate to generate the key for the TLS session ticket, it allows the connection to be made using an abbreviated TLS handshake.

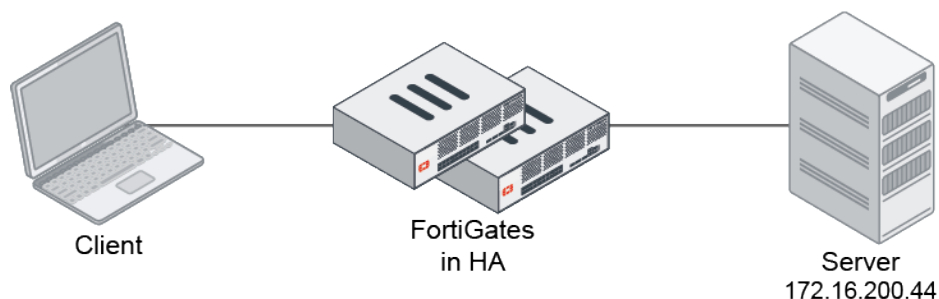

This example is for demonstration purposes only. In a normal failover, TLS sessions from clients will automatically be able to re-establish using an abbreviated handshake through the new primary unit.

### To verify if an abbreviated TLS handshake is used after HA failover:

1. On the client using OpenSSL, open a new session to 172.16.200.44:443 and output the session ticket to a file called aaa.txt. This session will pass through the current HA primary unit:

```
# openssl s_client -connect 172.16.200.44:443 -sess_out aaa.txt
```

2. Fail over the primary unit to the secondary unit. The HA secondary unit starts handling the traffic.
3. On the client, try connecting to 172.16.200.44:443 using the same saved session ticket as before (aaa.txt):

```
# openssl s_client -connect 172.16.200.44:443 -sess_in aaa.txt
```

4. Verify whether the session succeeds in using the original session ticket:

```

Reused, TLSv1.3, Cipher is TLS_AES_256_GCM_SHA384
Server public key is 4096 bit
Secure Renegotiation IS NOT supported
Compression: NONE
Expansion: NONE
No ALPN negotiated
Early data was not sent
Verify return code: 19 (self signed certificate in certificate chain)
...
  
```

If the session is established using the same ticket, **Reused, TLSv1.3, Cipher is <name>** is displayed. If session is established using a new ticket, **New, TLSv1.3, Cipher is <name>** is displayed.

The new primary is able to use the web proxy global `ssl-ca-cert` to generate the same key as the old primary that was used in the session ticket. So, the second TLS connection that reuses the TLS session ticket from the first session can complete an abbreviated TLS handshake.




## Session synchronization during HA failover for ZTNA proxy sessions

User information and TLS sessions are synchronized between HA members for ZTNA proxy sessions. When a failover occurs, the new primary unit will continue allowing sessions from the logged in users without asking for the client certificate and re-authentication again.

### Example

In this example, a FortiGate HA pair is acting as a ZTNA access proxy. Clients that are trying to access the web server on qa.test.com are proxied by the ZTNA access proxy. Remote clients must be registered to the EMS server, and pass a client certificate check and user authentication in order to connect. Upon HA member failure, a failover occurs and the new primary unit will continue to allow connections without requesting client certificate check and user authentication for existing users and devices.

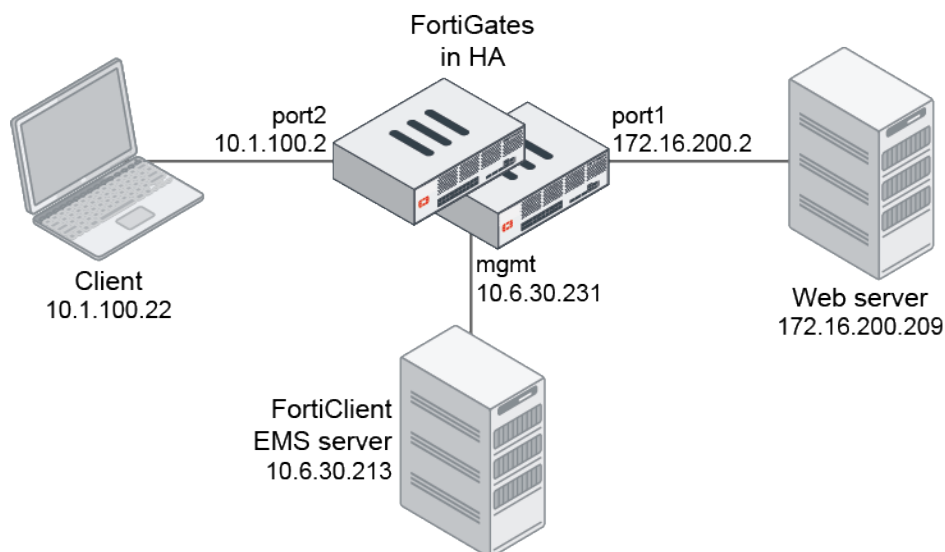

This example assumes ZTNA and EMS server settings are already configured.


### To configure the HA settings:

```

config system ha
    set group-name "501E"
    set mode a-p
    set password "*****"
    set hbdev "ha" 0
    set session-pickup enable
    set override disable
    set monitor "port1" "port2"
end
  
```

### To verify that the proxy sessions are synchronized between HA members:

1. On the client, access the web server. The ZTNA access proxy challenges the user for a client certificate and user authentication.

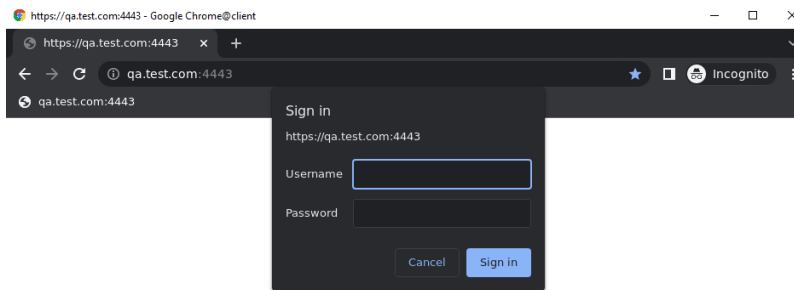

2. On the primary FortiGate, verify that the user information and TLS sessions are synchronized between HA members.

- a. Verify the list of proxy users:

```
501E-primary # diagnose wad user list
ID: 1, VDOM: root, IPv4: 10.1.100.22
  user name   : localuser1
  worker      : 0
  duration    : 8
  auth_type   : IP
  auth_method : Basic
  pol_id      : 1
  g_id        : 0
  user_based  : 1
  expire      : 597
LAN:
  bytes_in=2093 bytes_out=5753
WAN:
  bytes_in=2024 bytes_out=1235
```

- b. Apply a filter to WAD debug to diagnose the wad informer process:

```
501E-primary # diagnose test application wad 2400
Set diagnosis process: type=informer index=0 pid=305
```

- c. Show the user cache from the WAD informer. Verify that the localuser1 entry exists:

```
501E-primary # diagnose test application wad 110
users:
[1]   localuser1@10.1.100.22:0 upn_domain= from:worker worker:6 vf:0 ref:1 stale=0
ntlm:0, has_fsae:0, guest:0
      user_node:(0x7fe18dcf0048) user:1[max=65536](0x7fe18dd08048) ip:1
(0x7fe18dd00048) scheme:0 outofsync:0(0) id:1
...
```

- d. Verify using WAD real-time debugs on the secondary FortiGate. The user information is synchronized to the secondary FortiGate:

```
501E-secondary # diagnose wad debug enable category all
501E-secondary # diagnose wad debug enable level verbose
501E-secondary # diagnose debug enable
[I] [p:296]          wad_proc_informer_ha_dgram_on_read:2811 Got HA msg: type=0,
sizeof(msg)=8, dlen=80, sz=88
[I] [p:296]          wad_proc_informer_on_ha_user_add :1493 reader:
ip=10.1.100.22:45852 vf=0 seq=0 grp_type=0 scheme=0 is_ntlm=0 has_fsae=0 concur_
user=65536 domain=''
[I] [p:296]          wad_informer_update_user_ext      :782
ip=10.1.100.22:45852 name=localuser1 from=worker
```

```
[I][p:296] wad_informer_find_user_ip_entries :621 find=false(1) vf=0
ip=10.1.100.22:45852 pr=(nil)
mapping user_node:0x7fc1c84dd048, user_ip:0x7fc1c84ed048(0), user:0x7fc1c84f5048(0).
```

### 3. Verify the user cache from the WAD informer:

```
501E-secondary # diagnose test application wad 110
users:
[1] localuser1@10.1.100.22:0 upn_domain= from:worker worker:-126 vf:0 ref:1 stale=0
ntlm:0, has_fsae:0, guest:0
      user_node:(0x7fa3eb07d048) user:1[max=65536](0x7fa3eb095048) ip:1
(0x7fa3eb08d048) scheme:0 outofsync:0(0) id:7
...
```

If the client tries to access the web server again after failover occurs, the client certificate check and authentication prompt does not appear. ZTNA allows the traffic to pass.

The ZTNA logs for both FortiGates contain the same user information.

#### Primary FortiGate log:

```
1: date=2022-03-23 time=11:49:57 eventtime=1648061397548444970 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.1.100.22 srcname="client"
srcport=45826 srcintf="port2" srcintfrole="lan" dstcountry="Reserved" srccountry="Reserved"
dstip=172.16.200.209 dstport=443 dstintf="port1" dstintfrole="lan" sessionid=4786
service="HTTPS" proto=6 action="accept" policyid=1 policytype="proxy-policy"
poluid="ea7a8a04-a56e-51ec-9d7b-90d24b3a28e9" policyname="ztna" duration=5
user="localuser1" gatewayid=1 vip="ztna" accessproxy="ztna"
clientdeviceid="EF73C831C3FE4FF195A5B2030B*****" clientdevicetags="FCTEMS8821000000_all_
registered_clients/MAC_FCTEMS8821000000_all_registered_clients/FCTEMS8821000000_ZT_FILE_
CERTFILE" wanin=2024 rcvdbyte=2024 wanout=1325 lanin=1511 sentbyte=1511 lanout=1075
fctuid="EF73C831C3FE4FF195A5B2030B*****" unauthuser="fosqa" unauthusersource="forticlient"
appcat="unscanned"
```

#### Secondary FortiGate log:

```
1: date=2022-03-23 time=11:55:01 eventtime=1648061701628425041 tz="-0700" logid="0005000024"
type="traffic" subtype="ztna" level="notice" vd="root" srcip=10.1.100.22 srcname="client"
srcport=45830 srcintf="port2" srcintfrole="lan" dstcountry="Reserved" srccountry="Reserved"
dstip=172.16.200.209 dstport=443 dstintf="port1" dstintfrole="lan" sessionid=676
service="HTTPS" proto=6 action="accept" policyid=1 policytype="proxy-policy"
poluid="ea7a8a04-a56e-51ec-9d7b-90d24b3a28e9" policyname="ztna" duration=5
user="localuser1" gatewayid=1 vip="ztna" accessproxy="ztna"
clientdeviceid="EF73C831C3FE4FF195A5B2030B*****" clientdevicetags="FCTEMS8821000000_all_
registered_clients/MAC_FCTEMS8821000000_all_registered_clients/FCTEMS8821000000_ZT_FILE_
CERTFILE" wanin=2024 rcvdbyte=2024 wanout=1325 lanin=1511 sentbyte=1511 lanout=1075
fctuid="EF73C831C3FE4FF195A5B2030B*****" unauthuser="fosqa" unauthusersource="forticlient"
appcat="unscanned"
```

## Troubleshoot an HA formation

The following are requirements for setting up an HA cluster or FGSP peers.

Cluster members must have:

- The same model.
- The same hardware configuration.

- The same connections.
- The same generation.



The requirement to have the same generation is done as a best practice as it avoids issues that can occur later on. If you are unsure if the FortiGates are from the same generation, please contact customer service.

---

## Troubleshooting common HA formation errors

### One member keeps shutting down during HA setup (hard drive failure):

If one member has a hard drive failure but the other does not, the one with the hard drive failure will be shut down during HA setup. In this case, RMA the member to resolve the issue.

### Split brain scenario:

A split brain scenario occurs when two or more members of a cluster cannot communicate with each other on the heartbeat interface, causing each member to think it is the primary. As a result, each member assumes the primary HA role and applies the same IP and virtual MAC addresses on its interfaces. This causes IP and MAC conflicts on the network, and causes flapping on L2 devices when they learn the same MAC address on ports connected to different FortiGates.

A split brain scenario is usually caused by a complete lost of the heartbeat link or links. This can be a physical connectivity issue, or less commonly, something blocking the heartbeat packets between the HA members. Another cause is congestion and latency in the heartbeat links that exceeds the heartbeat lost intervals and thresholds.

The following are common symptoms of a split brain scenario:

- The connections to the FortiGates in the cluster work intermittently when trying to connect with administrative access.
- Sessions cannot be established through the FortiGate, and the traffic drops.
- When logging in to the FortiGates using the console, `get system ha status` shows each FortiGate as the primary.

To resolve a split brain scenario:

- Be physically on-site with the FortiGates (recommended). If this is not possible, connect to the FortiGates using console access.
- Identify the heartbeat ports, and verify that they are physically connected and up.
- Verify that heartbeat packets are being sent and received on the heartbeat ports.
- Verify that the HA configurations match between the HA members. The HA mode, group-name, group-id, and password settings should be the same. Different group-id values will result in different virtual MAC addresses, which might not cause a MAC conflict. However, an IP conflict can still occur.
- If everything seems to be in working order, run `get system ha status` to verify that HA has formed successfully.

To avoid a split brain scenario:

- In a two-member HA configuration, use back-to-back links for heartbeat interface instead of connecting through a switch.
- Use redundant HA heartbeat interfaces.

- In a configuration where members are in different locations, ensure the heartbeat lost intervals and thresholds are longer than the possible latency in the links.

## FGSP


Standalone FortiGates or FGCP clusters can be integrated into the load balancing configuration using the FortiGate Session Life Support Protocol (FGSP) in a network where traffic is load balanced by an upstream load balancer and scanned by downstream FortiGates. FGSP can perform session synchronization of IPv4 and IPv6 TCP, SCTP, UDP, ICMP, expectation, and NAT sessions to keep the session tables synchronized on all entities. If one of the FortiGates fails, the upstream load balancer should detect the failed member and stop distributing sessions to it. Session failover occurs and active sessions fail over to the peers that are still operating. Traffic continues to flow on the new peer without data loss because the sessions are synchronized.

The FortiGates in FGSP operate as peers that process traffic and synchronize sessions. An FGSP deployment can include two to 16 standalone FortiGates, or two to 16 FortiGate FGCP clusters of two members each. Adding more FortiGates increases the CPU and memory required to keep all of the FortiGates synchronized, and it increases network synchronization traffic. Exceeding the numbers of members is not recommended and may reduce overall performance. By default, FGSP synchronizes all IPv4 and IPv6 TCP sessions, and IPsec tunnels. You can optionally add filters to control which sessions are synchronized, such as synchronizing packets from specific source and destination addresses, source and destination interfaces, or services.



FGSP is also compatible with FortiGate VRRP.

FGSP is primarily used instead of FGCP when external load balancers are part of the topology, and they are responsible for distributing traffic amongst the downstream FortiGates. FGSP provides the means to synchronize sessions between the FortiGate peers without needing a primary member to distribute the sessions like in FGCP active-active mode. If the external load balancers direct all sessions to one peer, the effect is similar to active-passive FGCP HA. If external load balancers balance traffic to both peers, the effect is similar to active-active FGCP HA. The load balancers should be configured so that all packets for any given session are processed by the same peer, including return packets whenever possible.

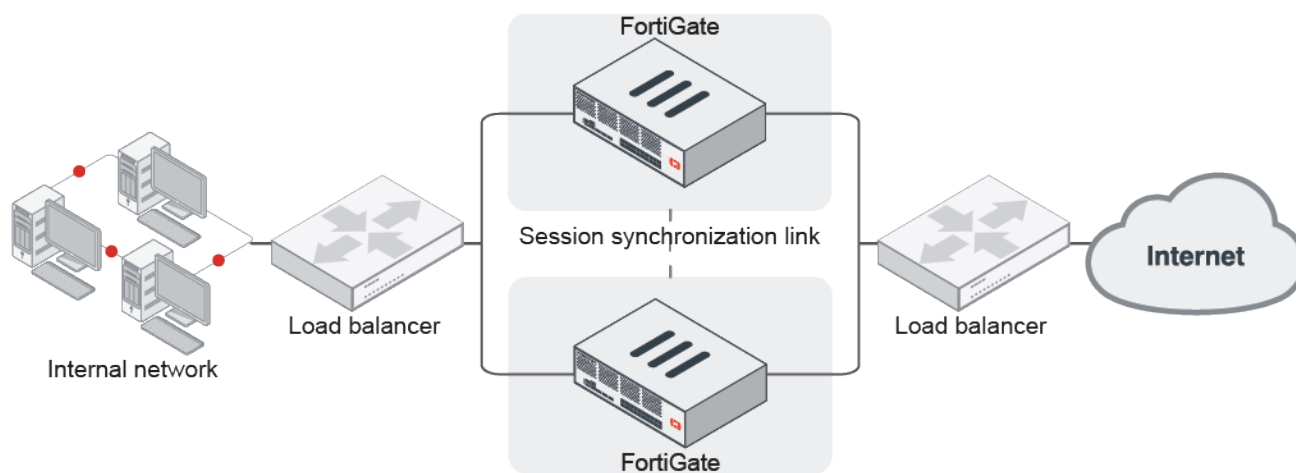

## Session pickup

Session pickup is an optional setting that can be enabled to synchronize connectionless (UDP and ICMP) sessions, expectation sessions, and NAT sessions. If session pickup is not enabled, the FGSP does not share session tables for the particular session type, and sessions do not resume after a failover. All sessions are interrupted by the failover and must be re-established at the application level. Many protocols can successfully restart sessions with little, or no, loss of data. Others may not recover as easily. Enable session pickup for sessions that may be difficult to reestablish. Since session pickup requires FortiGate memory and CPU resources, only enable this feature for sessions that need to synchronize.

## Session synchronization link

The session synchronization link is an optional configuration that allows peers to synchronize sessions over a dedicated interface instead of the interface in which the peer IP is routed. In this configuration, communications occur over L2 instead of L3. Configuring session synchronization links is recommended when you want to minimize traffic over the peering interface when there are many sessions that need to be synchronized.

## Expectation sessions

FortiOS session helpers keep track of the communication of layer 7 protocols, such as FTP and SIP, that have control sessions and expectation sessions. The control sessions establish the link between the server and client, and negotiate the ports and protocols that will be used for data communications. The session helpers then create expectation sessions through the FortiGate for the ports and protocols negotiated by the control session.

The expectation sessions are the sessions that actually communicate data. For FTP, the expectation sessions transmit files being uploaded or downloaded. For SIP, the expectation sessions transmit voice and video data. Expectation sessions usually have a timeout value of 30 seconds. If the communication from the server is not initiated within 30 seconds, the expectation session times out and traffic will be denied.

By default, FGSP does not synchronize expectation sessions; if a failover occurs, the sessions will have to be restarted.

### To synchronize expectation sessions so they continue after a failover:

```
config system ha
    set session-pickup enable
    set session-pickup-expectation enable
end
```

## NAT session synchronization

NAT sessions are not synchronized by default. You can enable NAT session synchronization by entering the following command:

```
config system ha
    set session-pickup enable
    set session-pickup-nat enable
end
```

After a failover with this configuration, all sessions that include the IP addresses of interfaces on the failed FortiGate unit will have nowhere to go since the IP addresses of the failed FortiGate unit will no longer be on the network. If you want

NAT sessions to resume after a failover you should not configure NAT to use the destination interface IP address, since the FGSP FortiGate units have different IP addresses. To avoid this issue, you should use IP pools with the type set to overload (which is the default IP pool type), as shown in this example:

```
config firewall ippool
    edit FGSP-pool
        set type overload
        set startip 172.20.120.10
        set endip 172.20.120.20
    next
end
```

In NAT mode, only sessions for route mode security policies are synchronized. FGSP is also available for FortiGate units or virtual domains operating in transparent mode. Only sessions for normal transparent mode policies are synchronized.

The following topics provide more information about FGSP:

- [FGSP basic peer setup on page 2409](#)
- [Synchronizing sessions between FGCP clusters on page 2413](#)
- [Session synchronization interfaces in FGSP on page 2415](#)
- [UTM inspection on asymmetric traffic in FGSP on page 2417](#)
- [UTM inspection on asymmetric traffic on L3 on page 2419](#)
- [Encryption for L3 on asymmetric traffic in FGSP on page 2421](#)
- [Optimizing FGSP session synchronization and redundancy on page 2421](#)
- [Firmware upgrades in FGSP on page 2427](#)
- [FGSP session synchronization between different FortiGate models or firmware versions on page 2427](#)
- [Applying the session synchronization filter only between FGSP peers in an FGCP over FGSP topology on page 2429](#)
- [FGSP static site-to-site IPsec VPN setup on page 2435](#)
- [FGSP per-tunnel failover for IPsec on page 2437](#)
- [FGCP over FGSP per-tunnel failover for IPsec on page 2443](#)
- [Allow IPsec DPD in FGSP members to support failovers on page 2452](#)

## FGSP basic peer setup

The FortiGate Session Life Support Protocol (FGSP) is a proprietary HA solution for only sharing sessions between entities based on peer-to-peer communications. The entities could be standalone FortiGates or an FGCP cluster. Sessions are load balanced by an upstream load balancer. Each peer will synchronize its sessions with the other peers so that if a failure occurs, sessions will continue to flow as the load balancer redirects the traffic to the other peers.

### Basic requirements and limitations

In most production environments, the following requirements should be met:


- The peers are FortiGates of the same model.
- The peers are running the same firmware version.
- There are 2 to 16 standalone FortiGates, or 2 to 16 FortiGate FGCP clusters of two members each.

Two FortiGates must have similar capabilities so that data structures used in session synchronization will match, and are capable of delivering similar performance. Therefore, the same model and firmware version is highly recommended for

most production deployments. The limitation on the number of FortiGates in FGSP also ensures that session synchronization will occur smoothly.

## Example

This example uses two peer FortiGates. The load balancer is configured to send all sessions to Peer\_1, and if Peer\_1 fails, all traffic is sent to Peer\_2.

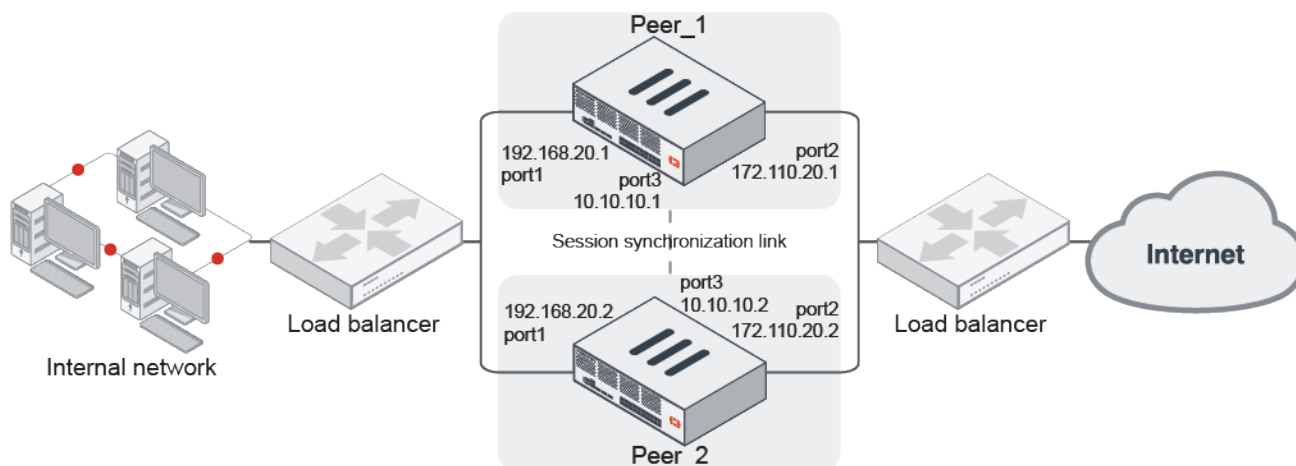

### To configure a basic FGSP peer setup:

These instructions assume that all FortiGates have been factory reset.

1. Make all the necessary connections as shown in the topology diagram.
2. On Peer\_1, configure the peer IP in which this device will peer with:

```

config system standalone-cluster
    config cluster-peer
        edit 1
            set peerip 10.10.10.2
        next
    end
    set standalone-group-id 1
    set group-member-id 1
end
  
```

If there are multiple peer IPs from the same peer, enter them as separate entries. If there are multiple peers, enter the IP of each peer in separate entries. See [Optimizing FGSP session synchronization and redundancy on page 2421](#) for an example.

Sessions by default will be synchronized over layer 3 on the interface in which the current unit connects to the peer's IP.

3. On Peer\_2, configure session synchronization:

```

config system standalone-cluster
    config cluster-peer
        edit 1
            set peerip 10.10.10.1
        next
    end
    set standalone-group-id 1
  
```



```
    set group-member-id 2
end
```

4. Configure identical firewall policies on each peer, such as for traffic going from the same incoming interface (port1) to the outgoing interface (port2).

**To test the FGSP peer setup:**

1. Initiate TCP traffic (like HTTP access) to go through Peer\_1.
2. Check the session information:

```
# diagnose sys session filter src <IP_address>

# diagnose sys session list
```

3. Enter the same commands on Peer\_2 to verify if the same session information appears.

**Optional filters**

Filters can be added to synchronize certain types of sessions that meet the filter criteria.

**To add filters for session synchronization:**

```
config system standalone-cluster
  config cluster-peer
    edit <id>
      config session-sync-filter
        set srcintf <interface>
        set dstintf <interface>
        set srcaddr <IPv4_address>
        set dstaddr <IPv4_address>
        set srcaddr6 <IPv6_address>
        set dstaddr6 <IPv6_address>
      end
    next
  end
end
```

**Filter examples****To synchronize only sessions with a particular source subnet:**

```
config system standalone-cluster
  config cluster-peer
    edit 1
      config session-sync-filter
        set srcaddr 192.168.20.0/24
      end
    next
  end
end
```

**To synchronize only sessions with a particular source address range:**

```
config system standalone-cluster
  config cluster-peer
    edit 1
      config session-sync-filter
        set srcaddr 192.168.20.10 192.168.20.20
      end
    next
  end
end
```

**To synchronize only sessions with a particular destination address range:**

```
config system standalone-cluster
  config cluster-peer
    edit 1
      config session-sync-filter
        set dstaddr6 2001:db8:0:2::/64
      end
    next
  end
end
```

## Session pickup

You can enable this setting to synchronize connectionless (UDP and ICMP) sessions, expectation sessions, and NAT sessions. If session pickup is not enabled, the FGSP does not share session tables for the particular session type, and sessions do not resume after a failover.

**To enable UDP and ICMP session synchronization:**

```
config system ha
  set session-pickup enable
  set session-pickup-connectionless enable
end
```

## Session synchronization

You can specify interfaces used to synchronize sessions in L2 instead of L3 using the `session-sync-dev` setting. For more information about using session synchronization, see [Session synchronization interfaces in FGSP on page 2415](#).

**To configure session synchronization over redundant L2 connections:**

```
config system standalone-cluster
  set session-sync-dev <interface 1> [<interface 2>] ... [<interface n>]
end
```

## VDOM synchronization

When multi-VDOM mode is enabled, you can specify the peer VDOM and the synchronized VDOMs. The peer VDOM contains the session synchronization link interface on the peer unit. The synchronized VDOMs' sessions are synchronized using this session synchronization configuration.

**To synchronize between VDOMs:**

```
config system standalone-cluster
  config cluster-peer
    edit 1
      set peerip <IP address>
      set peervd <vdom>
      set syncvd <vdom 1> [<vdom 2>] ... [<vdom n>]
    next
  end
end
```

**Configuring unique group and member ID**

FGSP can function between standalone FortiGates or between FGCP clusters. In either case, peers should use different group ID and member ID to uniquely identify each member. This allows each member to actively process traffic without any conflict.

To configure FGSP peering between standalone FortiGates, follow the steps under [To configure a basic FGSP peer setup](#).

**To configure FGSP peering between different FGCP clusters:**

These instructions assume Peer\_1 and Peer\_2 are in cluster 1, and Peer\_3 and Peer\_4 are in cluster 2.

1. On Peer\_1, configure the first group ID:

```
config system standalone-cluster
  set standalone-group-id 1
  set group-member-id 1
end
```

2. On Peer\_2, configure the same group ID but a different member ID:

```
config system standalone-cluster
  set standalone-group-id 1
  set group-member-id 2
end
```

3. On Peer\_3, configure the second group ID:


```
config system standalone-cluster
  set standalone-group-id 2
  set group-member-id 1
end
```

4. On Peer\_4, configure the same group ID but a different member ID:

```
config system standalone-cluster
  set standalone-group-id 2
  set group-member-id 2
end
```

**Synchronizing sessions between FGCP clusters**

Synchronizing sessions between FGCP clusters is useful when data centers in different locations are used for load balancing, and traffic must be shared and flow freely based on demand.

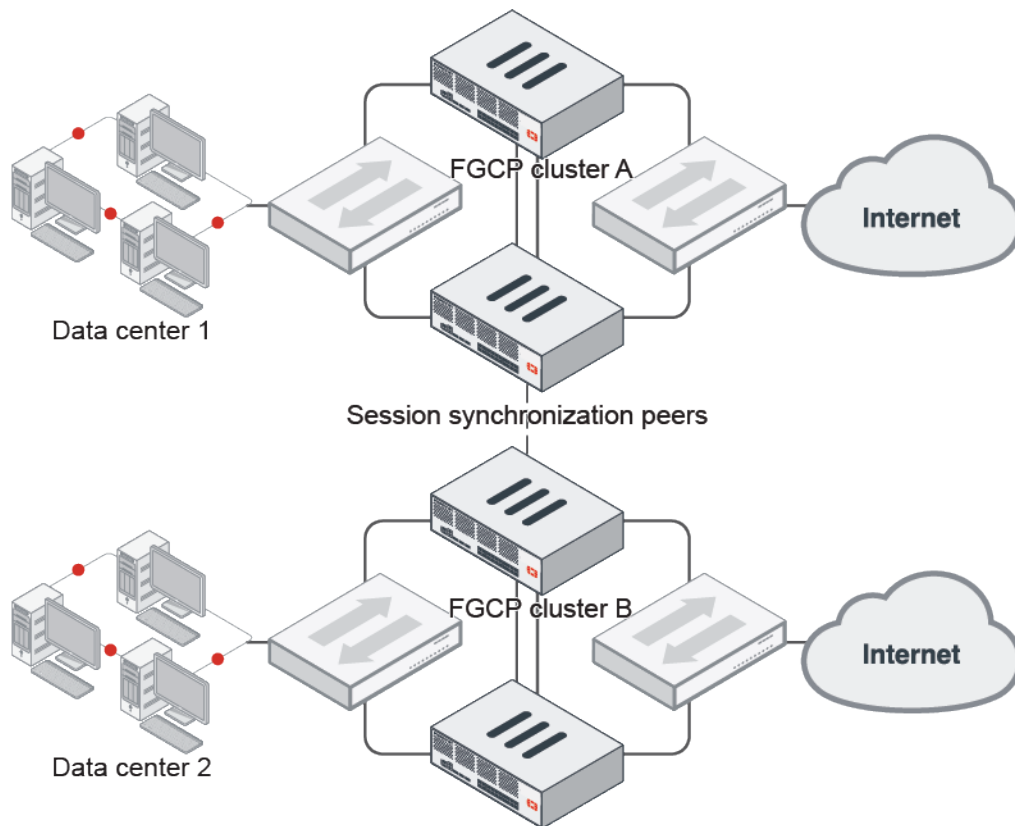

There are some limitations when synchronizing sessions between FGCP clusters:

- All FortiGates must have the same model and generation, hardware configuration, and FortiOS version.
- A total of 16 clusters can share sessions.

### To configure session synchronization between two clusters:

1. Configure the two clusters (see [HA active-passive cluster setup on page 2352](#) or [HA active-active cluster setup on page 2354](#)).
2. On cluster A, configure the peer IP for the interface:

```
config system interface
    edit "port5"
        set vdom "root"
        set ip 10.10.10.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
    next
end
```

In this example, cluster A uses port5 and its IP address, 10.10.10.1, is reachable from another cluster.

3. On cluster A, configure FGSP, including cluster and session synchronization:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 0
    set session-sync-dev <interface>
    config cluster-peer
        edit 1
```

```

        set peerip 10.10.10.2
    next
end
end

```

The `standalone-group-id` must match between FGSP members. The `group-member-id` is unique for each FGSP cluster. `session-sync-dev` is an optional command to specify the interfaces to sync sessions.

**4. On cluster B, configure the peer IP for the interface:**

```

config system interface
    edit "port5"
        set vdom "root"
        set ip 10.10.10.2 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
    next
end

```

In this example, cluster B uses `port5` and its IP address, 10.10.10.2, is reachable from another cluster.

**5. On cluster B, configure FGSP, including cluster and session synchronization:**

```

config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 1
    set session-sync-dev <interface>
    config cluster-peer
        edit 1
            set peerip 10.10.10.1
        next
    end
end

```

## Session synchronization interfaces in FGSP

When peering over FGSP, by default, the FortiGates or FGCP clusters share information over L3 between the interfaces that are configured with Peer IP addresses. When a session synchronization interface is configured and FGSP peers are directly connected on this interface, then session synchronization is done over L2, only falling back to L3 if the session synchronization interface becomes unavailable.

When FGSP peers are formed between standalone FortiGates, the session synchronization process is performed by the kernel with UDP encapsulation. When using a FGSP session synchronization interface, the synchronization process is also offloaded to the kernel, albeit more efficiently without the UDP encapsulation. Therefore, a fast, dedicated, and stable L2 connection is recommended for the session synchronization interface between the FGSP peers. For redundancy, multiple synchronization interfaces can be configured. The session synchronization interface or interfaces should always be the same on each FGSP peer.

**To configure session-sync interfaces:**

```

config system standalone-cluster
    set session-sync-dev <interface 1> [<interface 2>] ... [<interface n>]
    set layer2-connection {available | unavailable}
    set encryption {enable | disable}
end

```

The `layer2-connection` setting is for forwarded traffic between FGSP peers. Set it to `available` if the peer interface user for traffic forwarding is directly connected and supports L2 forwarding. See [UTM inspection on asymmetric traffic in FGSP on page 2417](#) for more information.

## Session synchronization in FGCP over FGSP

To provide full redundancy, FGCP clusters can be used in FGSP peering. This is called FGCP over FGSP. In these complex environments, as well as in high performance, low latency data centers, using the FGCP session synchronization interface is recommended, as it offloads the session synchronization process to the kernel.

### To offload the session synchronization process to the kernel and synchronize sessions using connected interfaces directly:


```
config system ha
    set session-sync-dev <interface 1> [<interface 2>] ... [<interface n>]
end
```

This is optimal when any of the following conditions apply:


- The session rate is high.
- Low network latency is required.
- There is a complex environment with FGCP clusters synchronizing over FGSP using L3 only in the presence of asymmetric traffic.

Configuring the FGCP `session-sync-dev` effectively offloads the session synchronization from the `sessionsync` daemon into the kernel and reduces the session synchronization latency.

The following topology uses multiple session synchronization interfaces with a full mesh backbone to prevent any single point of failure.

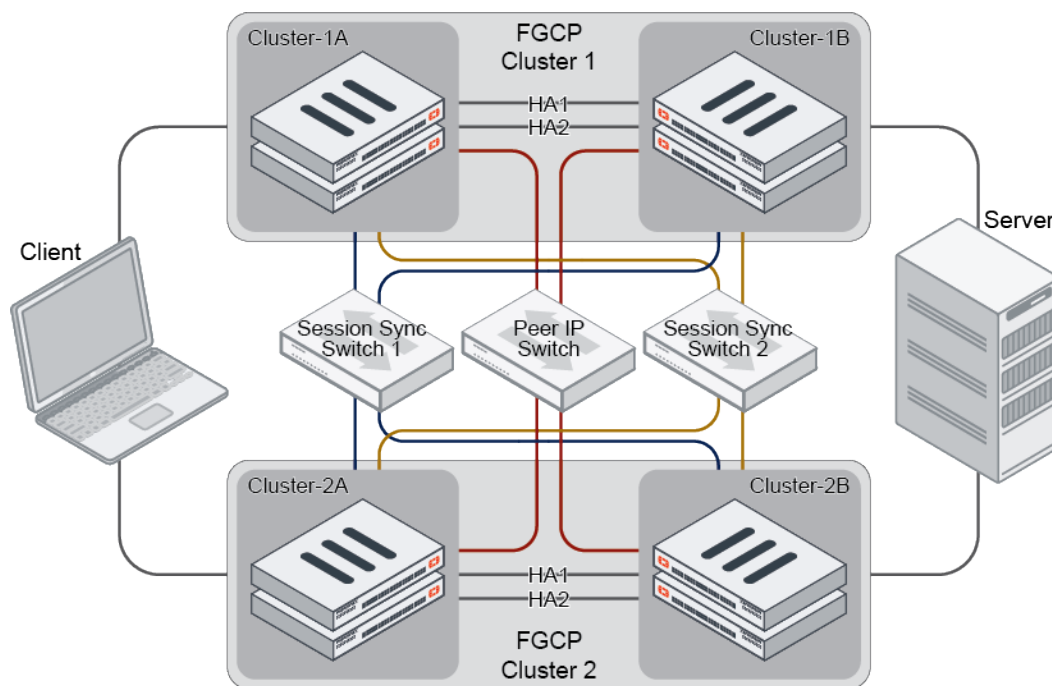

The state diagram summarizes the session synchronization of a TCP session. It assumes that the session is connected over FGCP Cluster 1 and processed entirely by the primary unit, Cluster-1A.

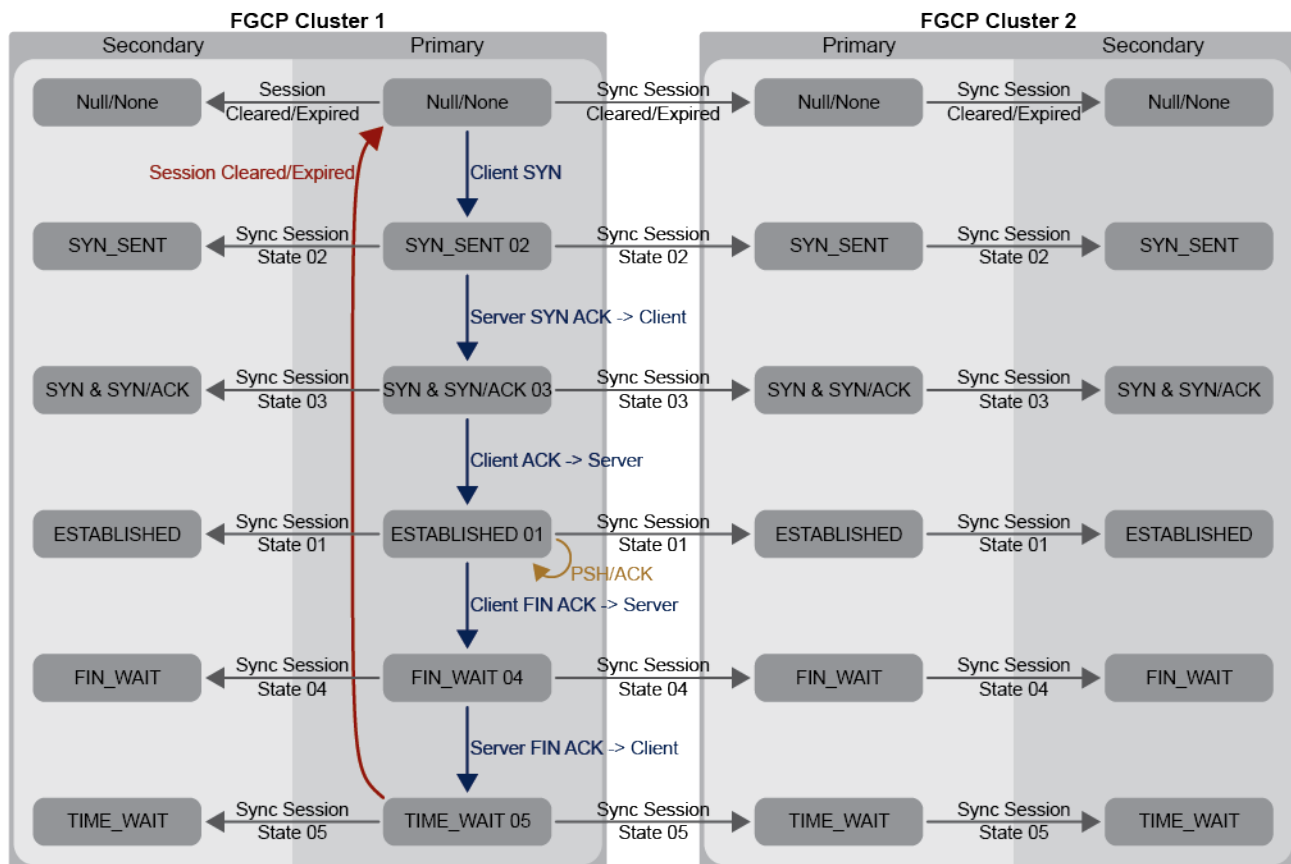

1. The session starts with the Client SYN packet.
2. As the session is established, Cluster-1A synchronizes the session with Cluster-1B over the heartbeat interface, and with Cluster-2A over the session synchronization interface.
3. Cluster-2A then synchronizes the session with Cluster-2B over its heartbeat interface.
4. The process then repeats as it transitions to different states.

### Session synchronization if links fail

In the previous topology, if any single session synchronization link fails on the primary member of each cluster, session synchronization will continue on the second link from the pair of session synchronization interfaces.

If the second link on the primary member of the same cluster then fails, L2 session synchronization over the session synchronization interface stops, and synchronization fails over to L3 between the peer IP links.

If the Peer IP link then fails, the FGSP peers are effectively disconnected, and no session synchronization will occur.


### UTM inspection on asymmetric traffic in FGSP

When traffic passes asymmetrically through FGSP peers, UTM inspection can be supported by always forwarding traffic back to the session owner for processing. The session owner is the FortiGate that receives the first packet of the session.

In this example, traffic from the internal network first hits FGT\_1, but the return traffic is routed to FGT\_2. Consequently, traffic bounces from FGT\_2 port1 to FGT\_1 port1 using FGT\_1's MAC address. Traffic is then inspected by FGT\_1.

This example requires the following settings:

- The internal and outgoing interfaces of both FortiGates in the FGSP pair are in the same subnet.
- Both peers have layer 2 access with each other.

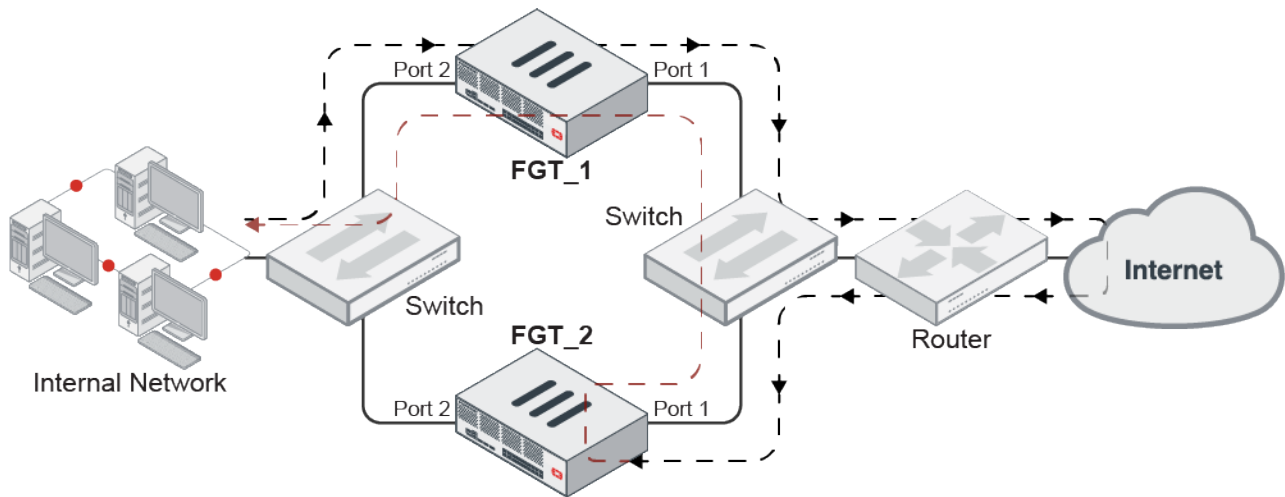

### To configure FTG\_1:

1. Configure FGSP cluster attributes, including setting the peer IP to the IP address of FGT\_2:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 0
    set layer2-connection available
    unset session-sync-dev
    config cluster-peer
        edit 1
            set peerip 10.2.2.2
        next
    end
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "default"
        set logtraffic all
        set nat enable
    next
end
```



## To configure FTG\_2:

1. Configure FGSP cluster attributes, including setting the peer IP to the IP address of FGT\_1:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 1
    set layer2-connection available
    unset session-sync-dev
    config cluster-peer
        edit 1
            set peerip 10.2.2.1
        next
    end
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "default"
        set logtraffic all
        set nat enable
    next
end
```

## Results

Capture packets on FGT\_2 to see that traffic bounced from FGT\_2 to FGT\_1 over the traffic interface.


```
FGT_2 # diagnose sniffer packet any 'host 10.1.100.15 and host 172.6.200.55' 4
interfaces=[any]
filters=[host 10.1.100.15 and host 172.16.200.55]
91.803816 port1 in 172.16.200.55.80 -> 10.1.100.15.40008: syn 2572073713 ack 261949279
92.800480 port1 in 172.16.200.55.80 -> 10.1.100.15.40008: syn 2572073713 ack 261949279
92.800486 port1 out 172.16.200.55.80 -> 10.1.100.15.40008: syn 2572073713 ack 261949279
92.800816 port1 in 172.16.200.55.80 -> 10.1.100.15.40008: syn 2572073713 ack 261949279
92.800818 port1 out 172.16.200.55.80 -> 10.1.100.15.40008: syn 2572073713 ack 261949279
```

## UTM inspection on asymmetric traffic on L3

When traffic passes asymmetrically through FGSP peers, UTM inspection can be supported by always forwarding traffic back to the session owner for processing. The session owner is the FortiGate that receives the first packet of the session.

For networks where L2 connectivity is not available, such as cloud environments, traffic bound for the session owner are forwarded through the peer interface using a UDP connection.

In this example, traffic from the internal network first hits FGT\_1, but the return traffic is routed to FGT\_2. Consequently, return traffic is packed and sent from FGT\_2 to FGT\_1 using UDP encapsulation between two peer interfaces (port 3). Traffic is then inspected by FGT\_1.

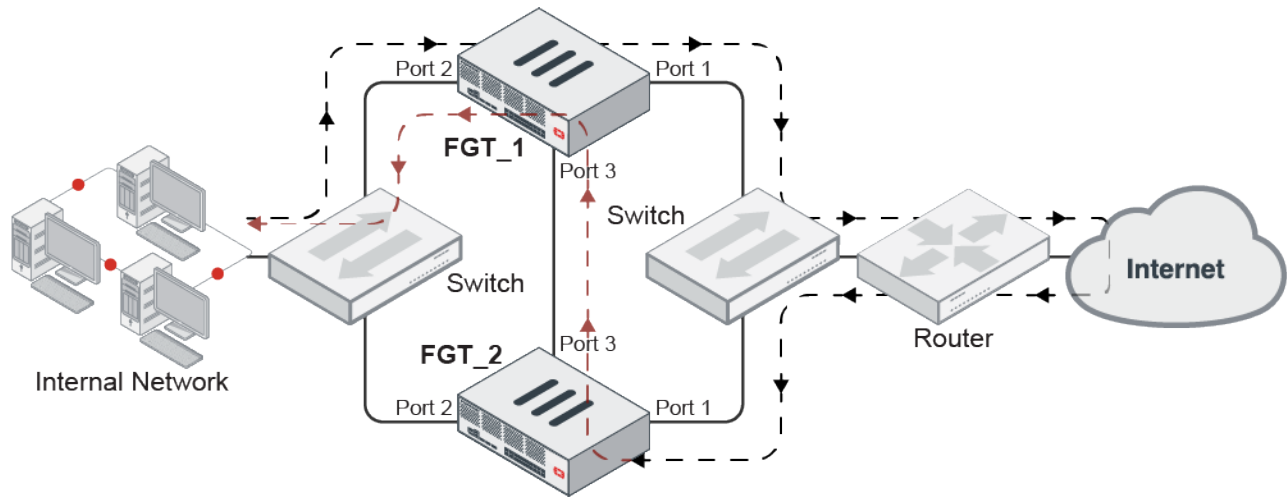

### To configure FTG\_1:

1. Configure FGSP cluster attributes, including setting the peer IP to the IP address of FGT\_2:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 0
    set layer2-connection unavailable
    unset session-sync-dev
    config cluster-peer
        edit 1
            set peerip 10.2.2.2
        next
    end
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "default"
        set logtraffic all
        set nat enable
    next
end
```

### To configure FTG\_2:

1. Configure FGSP cluster attributes, including setting the peer IP to the IP address of FGT\_1:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 1
    set layer2-connection unavailable
    unset session-sync-dev
    config cluster-peer
        edit 1
            set peerip 10.2.2.1
        next
    end
end
```

2. Configure the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "default"
        set logtraffic all
        set nat enable
    next
end
```

## Encryption for L3 on asymmetric traffic in FGSP

In scenarios where asymmetric routing between FGSP members occurs, the return traffic can be encrypted and routed back to the session owner on Layer 3 (L3).

### To encrypt L3 traffic in FGSP:

1. Run the following on both FortiGates:


```
config system standalone-cluster
    set encryption enable
    set psksecret xxxxxxxxxx
end
```

## Optimizing FGSP session synchronization and redundancy

In this example where standalone FortiGates are peered in FGSP, using `session-sync-dev` optimizes session synchronization as it eliminates UDP encapsulation and offloads session synchronization processing to the kernel. FGSP session synchronization can be supported to handle heavy loads.

For more information about session synchronization, see [Session synchronization interfaces in FGSP on page 2415](#).

## Topology

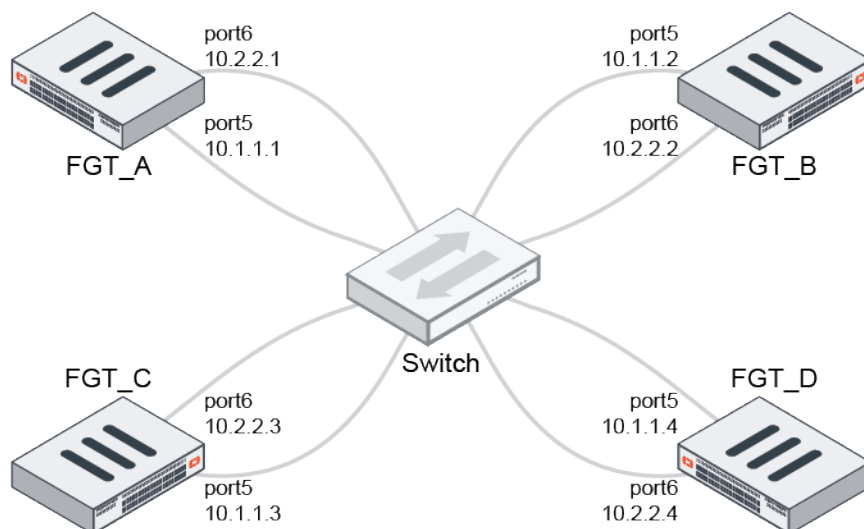

In this topology, there are three FGSP peer groups for each FortiGate. Sessions are synchronized between each FortiGate and its peer groups. Redundancy is achieved by using two dedicated session sync device links for each peer setup. There are a total of six peer IPs for each session synchronization device link in each FGSP peer. When one link is fails, session synchronization is not affected.

For optimization, `sync-packet-balance` is enabled to distribute synchronization packets processing to multiple CPUs. The session synchronization process is offloaded to the kernel, and sessions are synchronized over layer 2 over the connected interfaces (`set session-sync-dev "port5" "port6"`). Jumbo frame MTU 9216 is configured on each session synchronization device link to reduce the number of packets; however, setting MTU to 9216 is entirely optional.

### To configure FGT\_A:

#### 1. Configure HA:

```
config system ha
    set sync-packet-balance enable
    set session-pickup enable
    set session-pickup-connectionless enable
    set session-pickup-expectation enable
    set session-pickup-nat enable
end
```

#### 2. Configure the layer 2 session synchronization links:

```
config system standalone-cluster
    set session-sync-dev "port5" "port6"
end
```

#### 3. Configure the session TTL default timeout:

```
config system session-ttl
    set default 300
end
```

**4. Configure the interfaces:**

```
config system interface
  edit port5
    set ip 10.1.1.1/24
    set mtu-override enable
    set mtu 9216
  next
  edit port6
    set ip 10.2.2.1/24
    set mtu-override enable
    set mtu 9216
  next
end
```

**5. Configure FGSP session synchronization:**

```
config system standalone-cluster
  config cluster-peer
    edit 1
      set peerip 10.1.1.2
    next
    edit 2
      set peerip 10.2.2.2
    next
    edit 3
      set peerip 10.1.1.3
    next
    edit 4
      set peerip 10.2.2.3
    next
    edit 5
      set peerip 10.1.1.4
    next
    edit 6
      set peerip 10.2.2.4
    next
  end
end
```

**To configure FGT\_B:****1. Configure HA:**

```
config system ha
  set sync-packet-balance enable
  set session-pickup enable
  set session-pickup-connectionless enable
  set session-pickup-expectation enable
  set session-pickup-nat enable
end
```

**2. Configure the layer 2 session synchronization links:**

```
config system standalone-cluster
  set session-sync-dev "port5" "port6"
end
```

**3. Configure the session TTL default timeout:**

```
config system session-ttl
    set default 300
end
```

**4. Configure the interfaces:**

```
config system interface
    edit port5
        set ip 10.1.1.2/24
        set mtu-override enable
        set mtu 9216
    next
    edit port6
        set ip 10.2.2.2/24
        set mtu-override enable
        set mtu 9216
    next
end
```

**5. Configure FGSP session synchronization:**

```
config system standalone-cluster
    config cluster-peer
        edit 1
            set peerip 10.1.1.1
        next
        edit 2
            set peerip 10.2.2.1
        next
        edit 3
            set peerip 10.1.1.3
        next
        edit 4
            set peerip 10.2.2.3
        next
        edit 5
            set peerip 10.1.1.4
        next
        edit 6
            set peerip 10.2.2.4
        next
    end
end
```

**To configure FGT\_C:****1. Configure HA:**

```
config system ha
    set sync-packet-balance enable
    set session-pickup enable
    set session-pickup-connectionless enable
    set session-pickup-expectation enable
    set session-pickup-nat enable
end
```

**2. Configure the layer 2 session synchronization links:**

```
config system standalone-cluster
    set session-sync-dev "port5" "port6"
end
```

**3. Configure the session TTL default timeout:**

```
config system session-ttl
    set default 300
end
```

**4. Configure the interfaces:**

```
config system interface
    edit port5
        set ip 10.1.1.3/24
        set mtu-override enable
    set mtu 9216
    next
    edit port6
        set ip 10.2.2.3/24
        set mtu-override enable
        set mtu 9216
    next
end
```

**5. Configure FGSP session synchronization:**

```
config system standalone-cluster
    config cluster-peer
        edit 1
            set peerip 10.1.1.1
        next
        edit 2
            set peerip 10.2.2.1
        next
        edit 3
            set peerip 10.1.1.2
        next
        edit 4
            set peerip 10.2.2.2
        next
        edit 5
            set peerip 10.1.1.4
        next
        edit 6
            set peerip 10.2.2.4
        next
    end
end
```

**To configure FGT\_D:****1. Configure HA:**

```
config system ha
    set sync-packet-balance enable
    set session-pickup enable
```

```
        set session-pickup-connectionless enable
        set session-pickup-expectation enable
        set session-pickup-nat enable
    end
```

**2. Configure the layer 2 session synchronization links:**

```
config system standalone-cluster
    set session-sync-dev "port5" "port6"
end
```

**3. Configure the session TTL default timeout:**

```
config system session-ttl
    set default 300
end
```

**4. Configure the interfaces:**

```
config system interface
    edit port5
        set ip 10.1.1.4/24
        set mtu-override enable
        set mtu 9216
    next
    edit port6
        set ip 10.2.2.4/24
        set mtu-override enable
        set mtu 9216
    next
end
```

**5. Configure FGSP session synchronization:**

```
config system standalone-cluster
    config cluster-peer
        edit 1
            set peerip 10.1.1.1
        next
        edit 2
            set peerip 10.2.2.1
        next
        edit 3
            set peerip 10.1.1.2
        next
        edit 4
            set peerip 10.2.2.2
        next
        edit 5
            set peerip 10.1.1.3
        next
        edit 6
            set peerip 10.2.2.3
        next
    end
end
```



## Firmware upgrades in FGSP

The following steps are recommended to upgrade the firmware of FortiGates in an FGSP deployment. Follow these steps whether or not you have enabled standalone configuration synchronization.

This example FGSP deployment has two FortiGates, FGT-1 and FGT-2.

### To upgrade the firmware in an FGSP deployment:

1. Switch all traffic to FGT-1:
  - a. Configure the load balancer or router that distributes traffic between the FortiGates to send all traffic to FGT-1.
2. Disconnect FGT-2 from the network.

Make sure to also disconnect the interfaces that allow heartbeat and synchronization communication with FGT-1. This is to prevent FGT-2 from communicating with FGT-1.
3. Upgrade the firmware on FGT-2.
4. Reconnect the traffic interfaces on FGT-2, but not the interfaces used for heartbeat and synchronization communication with FGT-1.
5. Switch all traffic to the newly upgraded FGT-2:
  - a. Configure the load balancer or router that distributes traffic between the FortiGates to send all traffic to FGT-2.
6. Upgrade the firmware on FGT-1 (while heartbeat and synchronization communication with FGT-2 remains disconnected).
7. Reconnect the FGT-2 interfaces that allow heartbeat and synchronization communication between FGT-1 and FGT-2.
8. Restore the original traffic distribution between FGT-1 and FGT-2:
  - a. Configure the load balancer or router to distribute traffic to both FortiGates in the FGSP deployment.

## FGSP session synchronization between different FortiGate models or firmware versions

FGSP HA deployments are generally meant for interoperating between FortiGates with the same model and firmware version. However, situations may arise where individual members or FGCP clusters running over FGSP use different models or firmware versions. For example, to avoid downtime while upgrading the members, some FGSP members or clusters may be upgraded first and then re-join the FGSP peers after a successful upgrade. Or while performing maintenance, sessions may need to be offloaded to a temporary member or FGCP cluster of a different model.

Being able to perform FGSP session synchronization between members of different models or firmware versions is helpful to transition the traffic smoothly and causes minimal disruptions. This topic outlines requirements to be aware of before assessing whether FGSP session synchronization may work between members with different models or firmware versions.

### Different FortiGate models

The general guideline is to only use FortiGate models in a similar tier and family. Vastly different models have different performance and capabilities, which may not be compatible. The goal is for two models to have similar capabilities so that data structures used in session synchronization will match, and are capable of delivering similar performance.

When considering FGSP session synchronization between two FortiGates, ensure that:

- The FortiGates use the same 32-bit kernel or 64-bit kernel.
- The FortiGates use the same type of CPU (such as ARM or x86).

- For network interfaces:
  - The same type of physical interface should be used on each member.
  - The physical interfaces should be capable of the same speeds.
- The device memory should be similar in size. If the FortiGates have vastly different memory sizes, their performance may be different if one device supports more sessions than the other.
- The configurations related to session tables should match. For example, the logical names used in firewall policies, IPsec interface names, VDOM names, firewall policy tables, and so on.



Virtual clusters and asymmetric routing are not supported.

---

### Different firmware versions

When operating in FGSP, the firmware needs to have compatible data structures and session synchronization packet headers. The firmware is generally able to handle different data structures between old and new FortiOS sessions. Session synchronization packets are typically the same between versions.

Note the following exceptions and guidelines when assessing FGSP session synchronization compatibility between different firmware versions:

- FortiOS 7.0.2 added support for widening the HA virtual MAC address range. This change updated the session synchronization packet header structure.
  - FortiGates running 7.0.2 or later, and FortiGates running 7.0.1 or earlier will not accept session synchronization packets from each other.
- If the traffic uses a new feature only available in a newer FortiOS version, it may not work when synchronized to an older FortiOS version.
  - For example, PFCP (Packet Forwarding Control Protocol) support was added in 7.0.1, and a PFCP profile name was added to the sessions. When the sessions are synchronized to an older firmware version, the PFCP profile name will be lost and the sessions will not be able to handle the traffic as they would in 7.0.1.
- FortiOS 7.2.1 added `group-id` into the protocol header. This means that FortiGates running 7.2.1 and later cannot perform session synchronization with FortiGates running earlier versions.

### Session synchronization interfaces

Session synchronization between FGSP members uses an L3 connection over the peer IP by default.

Session synchronization between FGSP members uses an L2 connection when a session synchronization interface (`session-sync-dev`) is used. The synchronization process is also offloaded to the kernel.



FGSP is also compatible with FortiGate VRRP.

---

## Applying the session synchronization filter only between FGSP peers in an FGCP over FGSP topology


When the session synchronization filter is applied on FGSP, the filter will only affect sessions synchronized between the FGSP peers. When virtual clustering is used, sessions synchronized between each virtual cluster can also be synchronized to FGSP peers. All peers' `syncvd` must be in the same HA virtual cluster.

### Example


In this example, there is a simplified configuration where there is no router or load balancer performing balancing between the FGSP peers, but it demonstrates the following:

- When sessions pass through FGCP A-P Cluster 1, all sessions are synchronized between the FGT\_A and FGT\_B regardless of the session synchronization filter.
- Session synchronization between the FGSP peers (FGCP A-P Cluster 1 and 2) only occurs for the service specified in the filter, which is HTTP/80.
- The preceding behavior is applicable when virtual clustering is configured. This example focuses on vdom2, which belongs to vcluster2. FGT\_A is the primary for vcluster2.

Each FGSP A-P cluster is connected on ha as the FGCP cluster heartbeat device. The FGSP peers are connected on mgmt over 10.1.1.1-2/24.

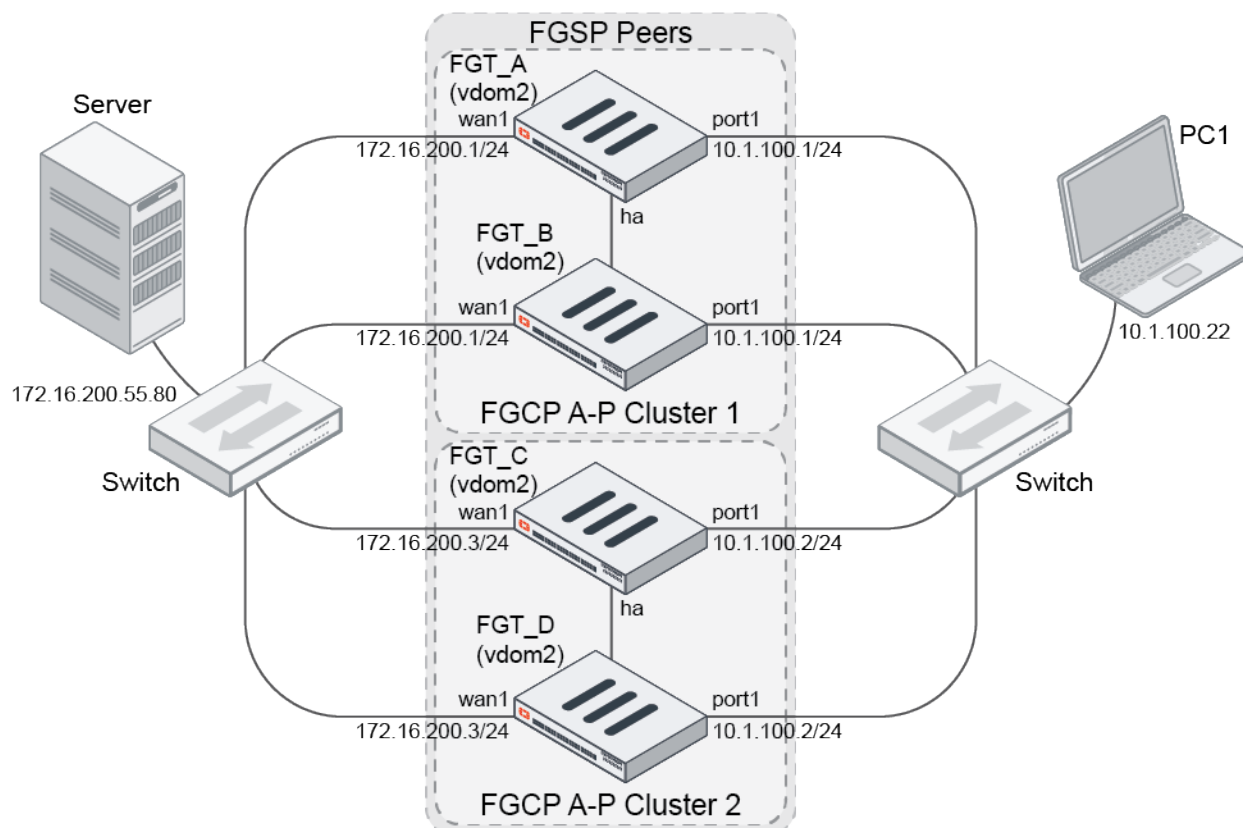

Virtual clustering between FGT\_A and FGT\_B:

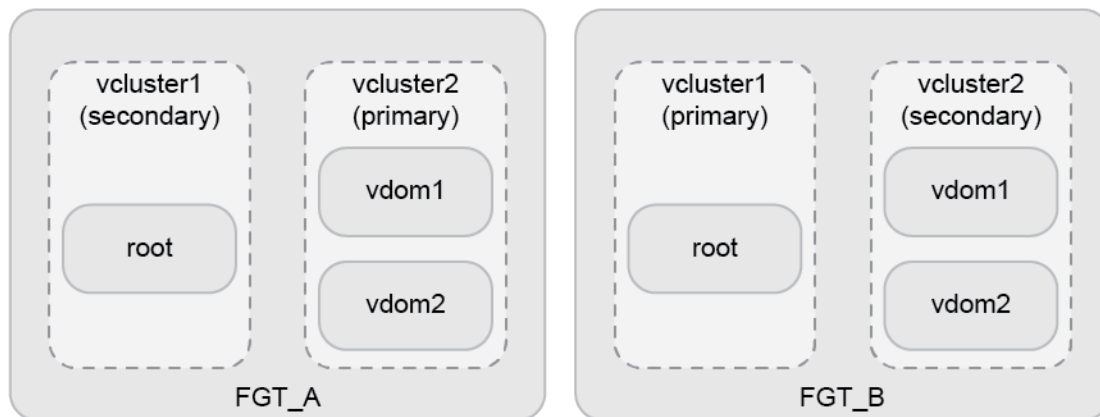

| Interface | FGT_A                         | FGT_B           | FGT_C                         | FGT_D           |
|-----------|-------------------------------|-----------------|-------------------------------|-----------------|
| wan1      | 172.16.200.1/24               | 172.16.200.1/24 | 172.16.200.3/24               | 172.16.200.3/24 |
| port1     | 10.1.100.1/24                 | 10.1.100.1/24   | 10.1.100.2/24                 | 10.1.100.2/24   |
| mgmt      | 10.1.1.1/24                   | 10.1.1.1/24     | 10.1.1.2/24                   | 10.1.1.2/24     |
| ha        | FGCP cluster heartbeat device |                 | FGCP cluster heartbeat device |                 |

### To configure the HA clusters:

1. Configure FGCP A-P Cluster 1 (use the same configuration for FGT\_A and FGT\_B):

```
config system ha
    set group-id 146
    set group-name "FGT_HA1"
    set mode a-p
    set hbdev "wan2" 100 "ha" 50
    set session-pickup enable
    set session-pickup-nat enable
    set vcluster-status enable
    config vcluster
        edit 1
            set override enable
            set priority 25
            set monitor "wan1" "port1"
            set vdom "root"
        next
        edit 2
            set override disable
            set priority 150
            set monitor "wan1"
            set vdom "vdom2" "vdom1"
        next
    end
end
```

2. Configure FGCP A-P Cluster 2 (use the same configuration for FGT\_C and FGT\_D):

```
config system ha
    set group-id 200
```

```
set group-name "FGT_HA2"
set mode a-p
set hbdev "wan2" 100 "ha" 50
set session-pickup enable
set session-pickup-nat enable
set vcluster-status enable
config vcluster
  edit 1
    set override enable
    set priority 120
    set monitor "wan1" "port1"
    set vdom "root"
  next
  edit 2
    set override disable
    set priority 150
    set monitor "wan1"
    set vdom "vdom2" "vdom1"
  next
end
end
```

## To configure the FGSP peers:

### 1. Configure FGT\_A:

```
config system standalone-cluster
  set standalone-group-id 1
  set group-member-id 1
  config cluster-peer
    edit 1
      set peervd "vdom2"
      set peerip 10.1.1.2
      set syncvd "vdom2"
      config session-sync-filter
        config custom-service
          edit 1
            set dst-port-range 80-80
          next
        end
      end
    next
  end
end
```

The configuration is automatically synchronized to FGT\_B.

### 2. Configure FGT\_C:

```
config system standalone-cluster
  set standalone-group-id 1
  set group-member-id 2
  config cluster-peer
    edit 1
      set peervd "vdom2"
      set peerip 10.1.1.1
      set syncvd "vdom2"
```

```

        config session-sync-filter
        config custom-service
        edit 1
            set dst-port-range 80-80
        next
    end
end
next
end
end

```

The configuration is automatically synchronized to FGT\_D.

### To verify the configuration:

#### 1. Verify the FGSP peer information on Cluster 1:

```

FGT_A (global) # diagnose sys ha fgsp-zone
Local standalone-member-id: 1
FGSP peer_num = 1
    peer[1]: standalone-member-id=2, IP=10.1.1.2, vd=vdom2, prio=1

```

#### 2. Verify the FGSP peer information on Cluster 2:

```

FGT_C (global) # diagnose sys ha fgsp-zone
Local standalone-member-id: 1
FGSP peer_num = 1
    peer[1]: standalone-member-id=1, IP=10.1.1.1, vd=vdom2, prio=1

```

#### 3. Initiate two sessions, HTTP and SSH.

#### 4. Verify that the HTTP session is synchronized from Cluster 1 to Cluster 2.

##### a. Verify the session list of vdom2 on FGT\_A:

```

FGT_A (vdom2) # diagnose sys session list

session info: proto=6 proto_state=01 duration=693 expire=3593 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty npu synced f00
statistic(bytes/packets/allow_err): org=87531/1678/1 reply=7413876/6043/1 tuples=2
tx speed(Bps/kbps): 134/1 rx speed(Bps/kbps): 11357/90
origin->sink: org pre->post, reply pre->post dev=11->7/7->11
gwy=172.16.200.55/10.1.100.22
hook=post dir=org act=snat 10.1.100.22:44260->172.16.200.55:80(172.16.200.1:44260)
hook=pre dir=reply act=dnat 172.16.200.55:80->172.16.200.1:44260(10.1.100.22:44260)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uuid_idx=579 auth_info=0 chk_client_info=0 vd=2
serial=000a79df tos=ff/ff app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x4000c00 ofld=0 ofld=R
npu info: flag=0x81/0x81, offload=8/8, ips_offload=0/0, epid=66/70, ipid=70/66,
vlan=0x0000/0x0000
vlifid=70/66, vtag_in=0x0000/0x0000 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=1/0

```

```

session info: proto=6 proto_state=01 duration=326 expire=3589 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log may_dirty npu synced f00
statistic(bytes/packets/allow_err): org=4721/41/1 reply=5681/36/1 tuples=2
tx speed(Bps/kbps): 14/0 rx speed(Bps/kbps): 17/0
origin->sink: org pre->post, reply pre->post dev=11->7/7->11
gwy=172.16.200.55/10.1.100.22
hook=post dir=org act=snat 10.1.100.22:50234->172.16.200.55:22(172.16.200.1:50234)
hook=pre dir=reply act=dnat 172.16.200.55:22->172.16.200.1:50234(10.1.100.22:50234)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uid_idx=579 auth_info=0 chk_client_info=0 vd=2
serial=000a7d90 tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000c00 ofld=0 ofld=R
npu info: flag=0x81/0x81, offload=8/8, ips_offload=0/0, epid=66/70, ipid=70/66,
vlan=0x0000/0x0000
vlifid=70/66, vtag_in=0x0000/0x0000 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=6/6
total session 2

```

**b. Verify the session list of vdom2 on FGT\_B:**

```
FGT_B (vdom2) # diagnose sys session list
```

```

session info: proto=6 proto_state=01 duration=736 expire=3100 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log dirty may_dirty npu f00 syn_ses
statistic(bytes/packets/allow_err): org=0/0/0 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=11->7/7->11 gwy=0.0.0.0/0.0.0.0
hook=post dir=org act=snat 10.1.100.22:44260->172.16.200.55:80(172.16.200.1:44260)
hook=pre dir=reply act=dnat 172.16.200.55:80->172.16.200.1:44260(10.1.100.22:44260)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uid_idx=0 auth_info=0 chk_client_info=0 vd=2
serial=000a79df tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:

```

```

session info: proto=6 proto_state=01 duration=369 expire=3230 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log dirty may_dirty npu f00 syn_ses
statistic(bytes/packets/allow_err): org=0/0/0 reply=0/0/0 tuples=2

```

```

tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=11->7/7->11 gwy=0.0.0.0/0.0.0.0
hook=post dir=org act=snat 10.1.100.22:50234->172.16.200.55:22(172.16.200.1:50234)
hook=pre dir=reply act=dnat 172.16.200.55:22->172.16.200.1:50234(10.1.100.22:50234)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uid_idx=0 auth_info=0 chk_client_info=0 vd=2
serial=000a7d90 tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:
total session 2

```

**c. Verify the session list of vdom2 on FGT\_C:**

```

FGT_C (vdom2) # diagnose sys session filter dst 172.16.200.55
FGT_C (vdom2) # diagnose sys session filter src 10.1.100.22
FGT_C (vdom2) # diagnose sys session list

session info: proto=6 proto_state=01 duration=837 expire=2762 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log dirty may_dirty npu f00 syn_ses
statistic(bytes/packets/allow_err): org=0/0/0 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=11->7/7->11 gwy=0.0.0.0/0.0.0.0
hook=post dir=org act=snat 10.1.100.22:44260->172.16.200.55:80(172.16.200.1:44260)
hook=pre dir=reply act=dnat 172.16.200.55:80->172.16.200.1:44260(10.1.100.22:44260)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uid_idx=0 auth_info=0 chk_client_info=0 vd=2
serial=000a79df tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id=00000000 ngfwid=n/a
npu_state=0x4000000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:
total session 1

```

**d. Verify the session list of vdom2 on FGT\_D:**

```

FGT-D (vdom2) # diagnose sys session filter dst 172.16.200.55
FGT-D (vdom2) # diagnose sys session filter src 10.1.100.22
FGT-D (vdom2) # diagnose sys session list

session info: proto=6 proto_state=01 duration=902 expire=2697 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=1:0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=log dirty may_dirty npu f00 syn_ses
statistic(bytes/packets/allow_err): org=0/0/0 reply=0/0/0 tuples=2

```



```

tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
origin->sink: org pre->post, reply pre->post dev=11->7/7->11 gwy=0.0.0.0/0.0.0.0
hook=post dir=org act=snat 10.1.100.22:44260->172.16.200.55:80(172.16.200.1:44260)
hook=pre dir=reply act=dnat 172.16.200.55:80->172.16.200.1:44260(10.1.100.22:44260)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=7 pol_uid_idx=0 auth_info=0 chk_client_info=0 vd=2
serial=000a79df tos=ff/ff app_list=0 app=0 url_cat=0
rpd_b_link_id=00000000 ngfwid=n/a
npu_state=0x4000000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:
total session 1

```



Session synchronization filters are designed to be configured symmetrically on all of the FGSP peers. In cases where the filters are configured asymmetrically, note the following differences:

- In an FGCP over FGSP topology, session filtering will be applied on the FGSP peer that has the filtering configured and is receiving the session synchronization.
- In an FGSP topology between standalone peers, the filtering will be applied on the FGSP peer that has the filtering configured and is sending out the session synchronization.

## FGSP static site-to-site IPsec VPN setup

When configuring static site-to-site IPsec VPN between FGSP FortiGates and a remote gateway, the FGSP peers must have the `passive-mode` setting enabled in the `vpn ipsec phase1-interface` configuration to function as an IPsec responder. This is a required configuration in this setup. If the FGSP peers act as initiators for tunnel setup when `passive-mode` is disabled and both FGSP peers initiate the tunnel with the same gateway IP, the remote IPsec gateway will be unable to process this, and the tunnel negotiation will fail. Likewise, when a failover occurs in FGSP and a new peer begins to initiate tunnel traffic, the remote IPsec gateway will be unable to handle the traffic initiated from the new peer.


Enabling `passive-mode` ensures the FGSP peers only respond to tunnel initiations from the remote IPsec gateway and do not initiate tunnel negotiations. This way, the preceding situations will not occur.

For dynamic tunnel configuration examples on FGSP peers, see the following topics:

- [FGSP per-tunnel failover for IPsec on page 2437](#)
- [FGCP over FGSP per-tunnel failover for IPsec on page 2443](#)
- [Allow IPsec DPD in FGSP members to support failovers on page 2452](#)

## Example

In this example, the FGSP peer has a loopback interface (Lo1) configured with the same IP address (192.168.202.31/32). All other interface IP addresses are different between the peers.

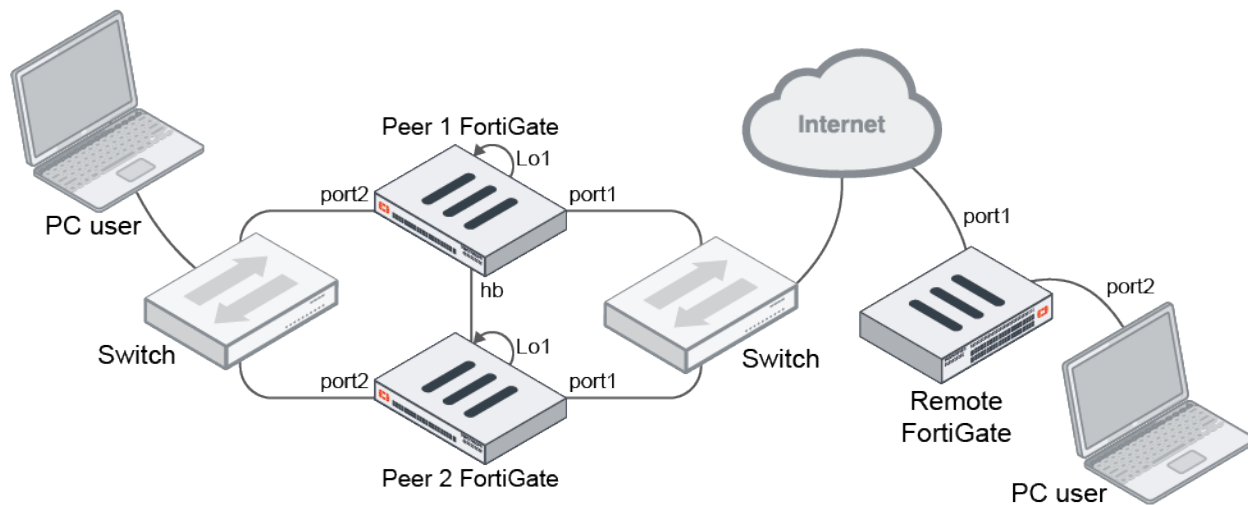

### To configure IPsec on the FGSP peer FortiGates:

#### 1. Configure the phase 1 settings:

```
config vpn ipsec phase1-interface
  edit "IPsec"
    set type static
    set set interface "port1"
    set ike-version 2
    set local-gw 192.168.202.31
    set net-device disable
    set proposal aes256-sha256
    set dhgrp 14
    set passive-mode enable
    set remote-gw 10.10.100.100
  next
end
```

#### 2. Configure the phase 2 settings:

```
config vpn ipsec phase2-interface
  edit "IPSec"
    set phaselname "IPsec"
    set proposal aes256-sha256
    set dhgrp 14
  next
end
```

### To configure IPsec on the remote FortiGate:

#### 1. Configure the phase 1 settings:

```
config vpn ipsec phase1-interface
  edit "IPsec"
    set type static
    set set interface "port1"
    set ike-version 2
    set net-device disable
    set proposal aes256-sha256
```

```
        set dhgrp 14
        set remote-gw 192.168.202.31
    next
end
```

## 2. Configure the phase 2 settings:

```
config vpn ipsec phase2-interface
    edit "IPSec"
        set phaselname "IPsec"
        set proposal aes256-sha256
        set dhgrp 14
    next
end
```

## FGSP per-tunnel failover for IPsec


During FGSP per-tunnel failover for IPsec, the same IPsec dialup server configured on each FGSP member may establish tunnels with dialup clients as the primary gateway. The IPsec SAs are synchronized to all other FGSP peers that have FGSP synchronization for IPsec enabled. Other FGSP members may establish a tunnel with other clients on the same dialup server and synchronize their SAs to other peers.

Upon the failure of the FGSP member that is the primary gateway for a tunnel, the upstream router will fail over the tunnel traffic to another FGSP member. The other FGSP member will move from standby to the primary gateway for that tunnel and continue to forward traffic.

```
config vpn ipsec phase1-interface
    edit <name>
        set fgsp-sync {enable | disable}
    next
end
```

## Example

In this example, the FGSP peers are connected on port4 over 172.31.1.1-4/24. Each peer has a loopback interface, lb1, with the same IP address. This loopback interface is used as the local gateway on each of the phase 1 connections to avoid each FGSP member having different IPs on port2. The DC Router uses ECMP to distribute traffic to each FGSP peer. It is assumed that the networking addresses are already configured properly.

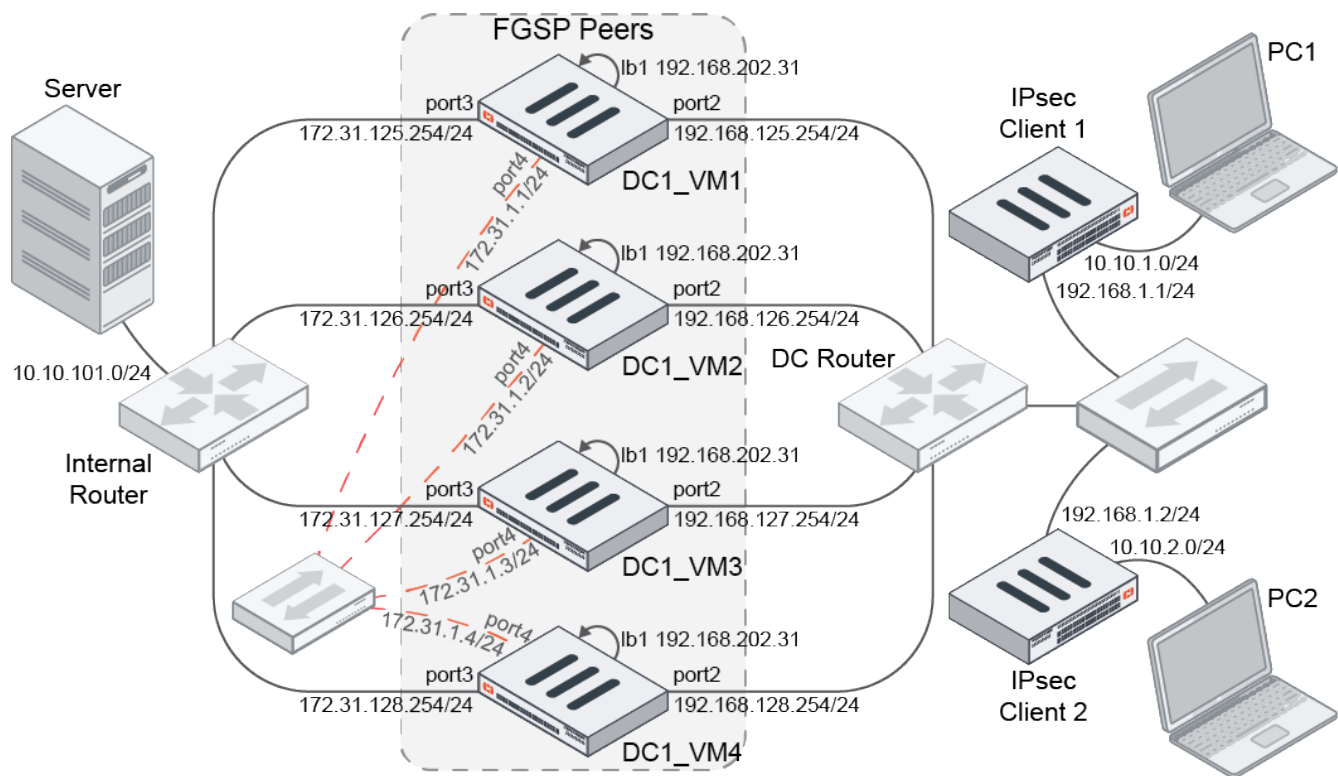

| Interface/setting | DC1_VM1            | DC1_VM2            | DC1_VM3            | DC1_VM4            |
|-------------------|--------------------|--------------------|--------------------|--------------------|
| port2             | 192.168.125.254/24 | 192.168.126.254/24 | 192.168.127.254/24 | 192.168.128.254/24 |
| port3             | 172.31.125.254/24  | 172.31.126.254/24  | 172.31.127.254/24  | 172.31.128.254/24  |
| port4             | 172.31.1.1/24      | 172.31.1.2/24      | 172.31.1.3/24      | 172.31.1.4/24      |
| lb1               | 192.168.202.31/32  | 192.168.202.31/32  | 192.168.202.31/32  | 192.168.202.31/32  |
| fgsp-sync         | Enabled            | Enabled            | Enabled            | Disabled           |

Out of the four FGSP peers, DC1\_VM1, DC1\_VM2, and DC1\_VM3 have `fgsp-sync` enabled in their IPsec phase 1 configurations. This allows the three FGSP members to synchronize IPsec SAs as clients establish dialup tunnels to them individually. DC1\_VM4, which does not have `fgsp-sync` configured, will not participate in synchronizing IPsec SAs or establishing tunnels. The DC Router uses ECMP to route traffic to the destination 192.168.202.31 through each of the participating FGSP peers.

In a larger scale there may be many more IPsec dialup clients connecting, with each eligible FGSP peer being the primary gateway for a set of dialup tunnels, and is in standby for the rest of the tunnels. If an FGSP peer fails, traffic will fail over to other peers, and these peers will become primary gateways for the respective dialup tunnels.

#### To configure the FGSP peers (DC1\_VM1):



The following steps are to configure DC1\_VM1. The other peers have similar configurations based on the preceding table. In the `config vpn ipsec phase1-interface` settings, all peers should have the same local gateway external interface (192.168.202.31).

### 1. Configure the FGSP settings:

```
config system standalone-cluster
    set standalone-group-id 1
    set group-member-id 1
    config cluster-peer
        edit 1
            set peerip 172.31.1.2
        next
        edit 2
            set peerip 172.31.1.3
        next
        edit 3
            set peerip 172.31.1.4
        next
    end
end
```

### 2. Configure the VPN tunnel phase 1 settings:

```
config vpn ipsec phase1-interface
    edit "vpn1"
        set type dynamic
        set interface "port2"
        set ike-version 2
        set local-gw 192.168.202.31
        set keylife 90000
        set peertype one
        set net-device disable
        set proposal aes128-sha1
        set dpd on-idle
        set dhgrp 2
        set fgsp-sync enable
        set nattraversal disable
        set peerid "Nokia_Peer"
        set psksecret xxxxx
        set dpd-retryinterval 60
    next
end
```

### 3. Configure the VPN tunnel phase 2 settings:

```
config vpn ipsec phase2-interface
    edit "vpn1"
        set phase1name "vpn1"
        set proposal aes128-sha1
        set keylifeseconds 10800
    next
end
```

### To verify the configuration:

#### 1. Once the FGSP members establish peering with each other, verify the standalone peers on DC1\_VM1:

```
DC1_VM1 # diagnose sys ha standalone-peers
Group=1, ID=1
Detected-peers=3
Kernel standalone-peers: num=3.
```

```
peer0: vfid=0, peerip:port = 172.31.1.2:708, standalone_id=2
    session-type: send=0, recv=0
    packet-type: send=0, recv=0
peer1: vfid=0, peerip:port = 172.31.1.3:708, standalone_id=3
    session-type: send=0, recv=0
    packet-type: send=0, recv=0
peer2: vfid=0, peerip:port = 172.31.1.4:708, standalone_id=4
    session-type: send=0, recv=0
    packet-type: send=0, recv=0
Kernel standalone dev_base:
    standalone_id=0:
    standalone_id=1:
        phyindex=0: mac=00:0c:29:22:00:6b, linkfail=1
        phyindex=1: mac=00:0c:29:22:00:75, linkfail=1
        phyindex=2: mac=00:0c:29:22:00:7f, linkfail=1
        phyindex=3: mac=00:0c:29:22:00:89, linkfail=1
        phyindex=4: mac=00:0c:29:22:00:93, linkfail=1
        phyindex=5: mac=00:0c:29:22:00:9d, linkfail=1
        phyindex=6: mac=00:0c:29:22:00:a7, linkfail=1
        phyindex=7: mac=00:0c:29:22:00:b1, linkfail=1
        phyindex=8: mac=00:0c:29:22:00:bb, linkfail=1
        phyindex=9: mac=00:0c:29:22:00:c5, linkfail=1
    standalone_id=2:
        phyindex=0: mac=00:0c:29:06:4e:d6, linkfail=1
        phyindex=1: mac=00:0c:29:06:4e:e0, linkfail=1
        phyindex=2: mac=00:0c:29:06:4e:ea, linkfail=1
        phyindex=3: mac=00:0c:29:06:4e:f4, linkfail=1
        phyindex=4: mac=00:0c:29:06:4e:fe, linkfail=1
        phyindex=5: mac=00:0c:29:06:4e:08, linkfail=1
        phyindex=6: mac=00:0c:29:06:4e:12, linkfail=1
        phyindex=7: mac=00:0c:29:06:4e:1c, linkfail=1
        phyindex=8: mac=00:0c:29:06:4e:26, linkfail=1
        phyindex=9: mac=00:0c:29:06:4e:30, linkfail=1
    standalone_id=3:
        phyindex=0: mac=00:0c:29:70:b9:6c, linkfail=1
        phyindex=1: mac=00:0c:29:70:b9:76, linkfail=1
        phyindex=2: mac=00:0c:29:70:b9:80, linkfail=1
        phyindex=3: mac=00:0c:29:70:b9:8a, linkfail=1
        phyindex=4: mac=00:0c:29:70:b9:94, linkfail=1
        phyindex=5: mac=00:0c:29:70:b9:9e, linkfail=1
        phyindex=6: mac=00:0c:29:70:b9:a8, linkfail=1
        phyindex=7: mac=00:0c:29:70:b9:b2, linkfail=1
        phyindex=8: mac=00:0c:29:70:b9:bc, linkfail=1
        phyindex=9: mac=00:0c:29:70:b9:c6, linkfail=1
    standalone_id=4:
        phyindex=0: mac=00:0c:29:5c:d3:23, linkfail=1
        phyindex=1: mac=00:0c:29:5c:d3:2d, linkfail=1
        phyindex=2: mac=00:0c:29:5c:d3:37, linkfail=1
        phyindex=3: mac=00:0c:29:5c:d3:41, linkfail=1
        phyindex=4: mac=00:0c:29:5c:d3:4b, linkfail=1
        phyindex=5: mac=00:0c:29:5c:d3:55, linkfail=1
        phyindex=6: mac=00:0c:29:5c:d3:5f, linkfail=1
        phyindex=7: mac=00:0c:29:5c:d3:69, linkfail=1
        phyindex=8: mac=00:0c:29:5c:d3:73, linkfail=1
        phyindex=9: mac=00:0c:29:5c:d3:7d, linkfail=1
    standalone_id=5:
```

```
...
standalone_id=15:
```

2. Initiate a dialup tunnel connection from the IPsec Client 2 FortiGate (192.168.1.2).
3. Verify the tunnel list for vpn1\_1 on each peer. The output shows the bi-directional SAs for that particular tunnel are synchronized to all participating FGSP peers.
  - a. DC1\_VM1:

```
DC1_VM1 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0
-----
name=vpn1_1 ver=2 serial=a4 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8840 options
[2288]=npu rgwy-chg frag-rfc run_state=0 role=sync-primary accept_traffic=1 overlay_
id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=6 olast=6 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=20
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=3 add-route
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=682 type=00 soft=0 mtu=1438 expire=10480/0B replaywin=2048
    seqno=1 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_len=1
  life: type=01 bytes=0/0 timeout=10788/10800
  dec: spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
    ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
  enc: spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
    ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=192.168.1.2 npu_lgwy=192.168.202.31 npu_selid=b2 dec_npuid=0
  enc_npuid=0
```

- b. DC1\_VM2:

```
DC1_VM2 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0
-----
name=vpn1_1 ver=2 serial=a3 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=43063501 olast=43063501 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=3 add-route
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
```

```

SA:  ref=3 options=682 type=00 soft=0 mtu=1280 expire=10466/0B replaywin=2048
     seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
life: type=01 bytes=0/0 timeout=10788/10800
dec:  spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
     ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
enc:  spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
     ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
npu_flag=00 npu_rgw=192.168.1.2 npu_lgw=192.168.202.31 npu_selid=ab dec_npuid=0
enc_npuid=0

```

#### c. DC1\_VM3:

```

DC1_VM3 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0
-----
name=vpn1_1 ver=2 serial=ac 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=43063499 olast=43063499 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=2 add-route
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:10.10.1.0-10.10.1.255:0
SA:  ref=3 options=682 type=00 soft=0 mtu=1280 expire=10462/0B replaywin=2048
     seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
life: type=01 bytes=0/0 timeout=10788/10800
dec:  spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
     ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
enc:  spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
     ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
npu_flag=00 npu_rgw=192.168.1.2 npu_lgw=192.168.202.31 npu_selid=b4 dec_npuid=0
enc_npuid=0

```

#### d. DC1\_VM4:

```

DC1_VM4 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0

```

The IPsec tunnel `role=sync-primary` on DC1\_VM1 indicates that the IPsec tunnel was established on the FortiGate and traffic is being forwarded. On DC1\_VM2 and DC1\_VM3, the IPsec tunnel `role=standby` indicates that they are synchronized from the FGSP peer and are in standby for traffic forwarding.

The IPsec SAs do not synchronize to DC1\_VM4 because `fgsp-sync` is disabled.

- When a failure occurs on DC1\_VM1, the tunnel traffic will fail over to either DC1\_VM2 or DC1\_VM3. Its tunnel role will become `role=sync-primary`.




## FGCP over FGSP per-tunnel failover for IPsec

For additional redundancy, an FGCP cluster on one site may form FGSP peering with FGCP clusters on other sites. The FGCP over FGSP peers can still synchronize IPsec SAs and act as the primary gateway for individual tunnels for the same dialup servers. When failover happens within an FGCP cluster, tunnel traffic will failover to the other FGCP cluster member. When an FGCP cluster fails, tunnel traffic will failover to the other FGSP peer.

### Example

In this example, each FGCP A-P cluster is connected on port4 as the heartbeat interface. The FGSP peers are connected on port5 over 172.31.2.1-2/24. Each FGSP peer and FGCP cluster has a loopback interface, lb1, with the same IP address. This loopback interface is used as the local gateway on each of the phase 1 connections to avoid each FGSP member having different IPs on port2. The DC Router uses ECMP to distribute traffic to each FGSP peer. It is assumed that the networking addresses are already configured properly.

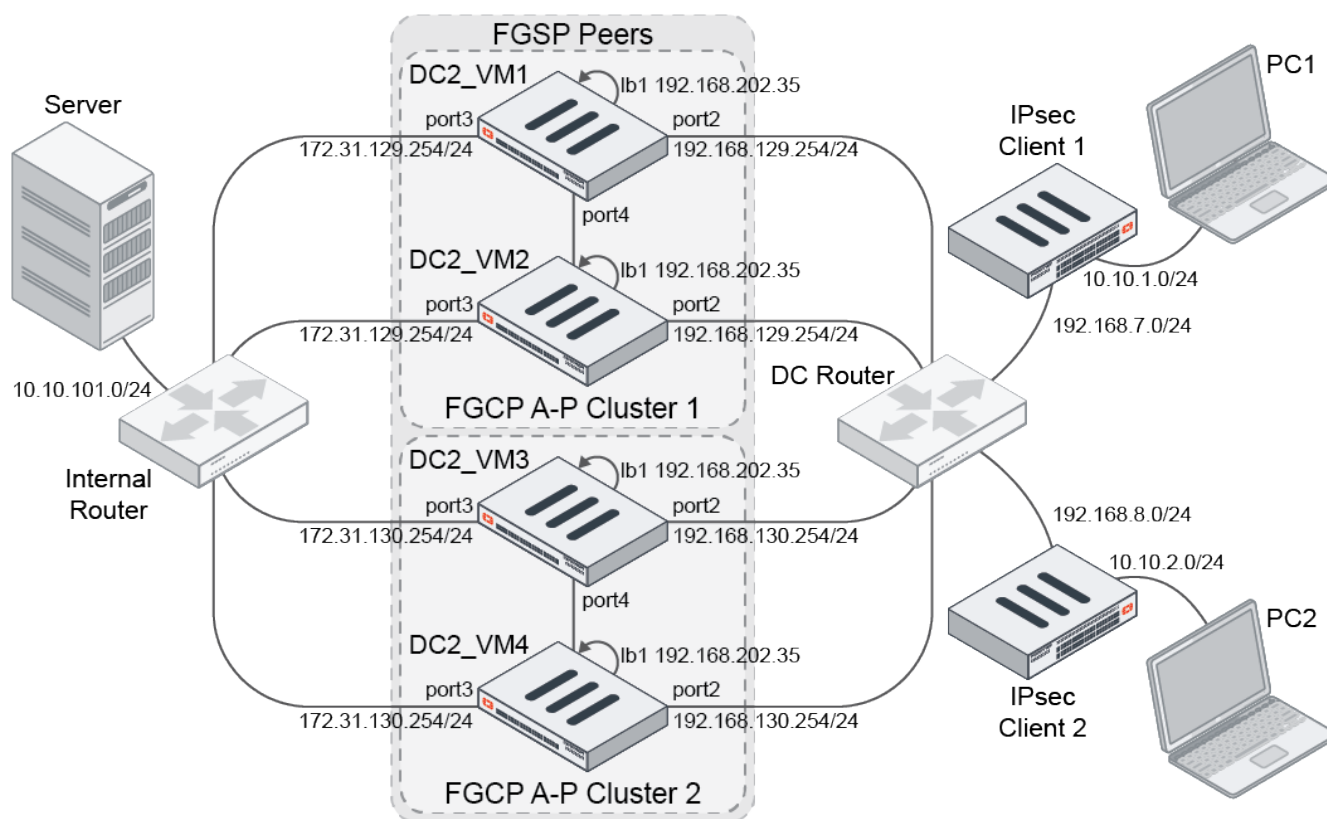

| Interface/setting | DC2_VM1                     | DC2_VM2                     | DC2_VM3                     | DC2_VM4                     |
|-------------------|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
| port2             | 192.168.129.254/24          | 192.168.129.254/24          | 192.168.130.254/24          | 192.168.130.254/24          |
| port3             | 172.31.129.254/24           | 172.31.129.254/24           | 172.31.130.254/24           | 172.31.130.254/24           |
| port4             | FGCP HA heartbeat interface | FGCP HA heartbeat interface | FGCP HA heartbeat interface | FGCP HA heartbeat interface |
| port5             | 172.31.2.1/24               | 172.31.2.1/24               | 172.31.2.2/24               | 172.31.2.2/24               |

| Interface/setting | DC2_VM1           | DC2_VM2           | DC2_VM3           | DC2_VM4           |
|-------------------|-------------------|-------------------|-------------------|-------------------|
| lb1               | 192.168.202.35/32 | 192.168.202.35/32 | 192.168.202.35/32 | 192.168.205.35/32 |
| fgsp-sync         | Enabled           | Enabled           | Enabled           | Enabled           |

There are two pairs of FGCP A-P HA clusters that form FGSP peering with each other. This is a typical FGCP over FGSP configuration used in large enterprises and service provider environments where high redundancy is needed. Each cluster uses the same loopback address for the local gateway. The DC Router uses ECMP to route traffic to the destination 192.168.202.31 through each of the participating FGSP peers.

In a larger scale there may be many more members in the FGCP clusters, more FGSP peers, and more IPsec dialup clients connecting. Each eligible FGSP peer will be the primary gateway for a set of dialup tunnels, and is in standby for the rest of the tunnels. When the FGCP cluster is configured in A-P mode, the tunnels will be established on the primary unit and synchronized to the standby unit.

The following configurations and example demonstrates PC1 initiating traffic to the Server. First, a dialup tunnel is formed between FortiGate IPsec Client 1 and DC2\_VM1, which allows traffic to go through. IPsec SAs are synchronized to the FGCP standby unit, and to the FGSP peer. Upon failure of DC2\_VM1, DC2\_VM2 takes over as the primary of the HA cluster, and assumes the primary role for the failover tunnels.

If both DC2\_VM1 and DC2\_VM2 fail, the tunnels that were formed on this FGSP peer will now be re-routed to the other FGSP peer. The primary FGCP cluster member, DC2\_VM3, will now pick up the tunnel traffic and assume the primary role for the failover tunnels.

### To configure the HA clusters:

1. Configure FGCP A-P Cluster 1 (use the same configuration for DC2\_VM1 and DC2\_VM2):

```
config system ha
    set group-id 1
    set group-name "DC2_VM12"
    set mode a-p
    set password *****
    set hbdev "port4" 50
    set session-pickup enable
    set uninterruptible-upgrade disable
    set override disable
    set priority 100
end
```

2. Configure FGCP A-P Cluster 2 (use the same configuration for DC2\_VM3 and DC2\_VM4):

```
config system ha
    set group-id 2
    set group-name "DC2_VM34"
    set mode a-p
    set password *****
    set hbdev "port4" 50
    set session-pickup enable
    set uninterruptible-upgrade disable
    set override disable
    set priority 100
end
```

**To configure the FGSP peers:****1. Configure DC2\_VM1:**

```
config system standalone-cluster
    set standalone-group-id 2
    set group-member-id 1
    config cluster-peer
        edit 1
            set peerip 172.31.2.2
        next
    end
end
```

The configuration is automatically synchronized to DC2\_VM2.

**2. Configure DC2\_VM3:**

```
config system standalone-cluster
    set standalone-group-id 2
    set group-member-id 2
    config cluster-peer
        edit 1
            set peerip 172.31.2.1
        next
    end
end
```

The configuration is automatically synchronized to DC2\_VM4.

**3. To configure the IPsec VPN settings (use the same configuration for DC2\_VM1 and DC2\_VM3).****a. Configure the VPN tunnel phase 1 settings:**

```
config vpn ipsec phase1-interface
    edit "vpn1"
        set type dynamic
        set interface "port2"
        set ike-version 2
        set local-gw 192.168.202.35
        set keylife 90000
        set peertype one
        set net-device disable
        set proposal aes128-sha1
        set add-route disable
        set dpd on-idle
        set dhgrp 2
        set fgsp-sync enable
        set nattraversal disable
        set peerid "Nokia_Peer"
        set psksecret *****
        set dpd-retryinterval 60
    next
end
```

**b. Configure the VPN tunnel phase 2 settings:**

```
config vpn ipsec phase2-interface
    edit "vpn1"
        set phase1name "vpn1"
```

```

        set proposal aes128-sha1
        set keylifeseconds 10800
    next
end

```

### To verify the configuration:

#### 1. The FGCP HA cluster and the FGSP peering have formed. Verify the respective HA statuses.

##### a. Verify the FGCP cluster status on DC2\_VM1:

```

DC2_VM1 # diagnose sys ha status

HA information
Statistics
    traffic.local = s:0 p:439253 b:89121494
    traffic.total = s:0 p:440309 b:89242174
    activity.ha_id_changes = 2
    activity.fdb = c:0 q:0

Model=80006, Mode=2 Group=1 Debug=0
nvcluster=1, ses_pickup=1, delay=0

[Debug_Zone HA information]
HA group member information: is_manage_primary=1.
FGVM02TM22000002:      Primary, serialno_prio=0, usr_priority=100, hostname=DC2_VM2
FGVM02TM22000001:      Secondary, serialno_prio=1, usr_priority=200, hostname=DC2_VM1

[Kernel HA information]
vcluster 1, state=work, primary_ip=169.254.0.1, primary_id=0
FGVM02TM22000002:      Primary, ha_prio/o_ha_prio=0/0
FGVM02TM22000001:      Secondary, ha_prio/o_ha_prio=1/1

```

##### b. Verify the FGSP peering status on DC2\_VM1:

```

DC2_VM1 # diagnose sys ha standalone-peers
Group=2, ID=1
Detected-peers=1
Kernel standalone-peers: num=1.
peer0: vfid=0, peerip:port = 172.31.2.2:708, standalone_id=2
    session-type: send=3, recv=4
    packet-type: send=0, recv=0
Kernel standalone dev_base:
    standalone_id=0:
    standalone_id=1:
        phyindex=0: mac=00:0c:29:fc:a3:17, linkfail=1
        phyindex=1: mac=00:0c:29:fc:a3:21, linkfail=1
        phyindex=2: mac=00:0c:29:fc:a3:2b, linkfail=1
        phyindex=3: mac=00:0c:29:fc:a3:35, linkfail=1
        phyindex=4: mac=00:0c:29:fc:a3:3f, linkfail=1
        phyindex=5: mac=00:0c:29:fc:a3:49, linkfail=1
        phyindex=6: mac=00:0c:29:fc:a3:53, linkfail=1
        phyindex=7: mac=00:0c:29:fc:a3:5d, linkfail=1
        phyindex=8: mac=00:0c:29:fc:a3:67, linkfail=1
        phyindex=9: mac=00:0c:29:fc:a3:71, linkfail=1
    standalone_id=2:
        phyindex=0: mac=00:09:0f:09:02:00, linkfail=1

```

```

phyindex=1: mac=00:09:0f:09:02:01, linkfail=1
phyindex=2: mac=00:09:0f:09:02:02, linkfail=1
phyindex=3: mac=00:09:0f:09:02:03, linkfail=1
phyindex=4: mac=00:09:0f:09:02:04, linkfail=1
phyindex=5: mac=00:09:0f:09:02:05, linkfail=1
phyindex=6: mac=00:09:0f:09:02:06, linkfail=1
phyindex=7: mac=00:09:0f:09:02:07, linkfail=1
phyindex=8: mac=00:09:0f:09:02:08, linkfail=1
phyindex=9: mac=00:09:0f:09:02:09, linkfail=1
standalone_id=3:
...
standalone_id=15:

```

**c. Verify the FGCP cluster status on DC2\_VM3:**

```

DC2_VM3 # diagnose sys ha status
HA information
Statistics
    traffic.local = s:0 p:443999 b:89037989
    traffic.total = s:0 p:445048 b:89157373
    activity.ha_id_changes = 2
    activity.fdb = c:0 q:0

Model=80006, Mode=2 Group=2 Debug=0
nvcluster=1, ses_pickup=1, delay=0

[Debug_Zone HA information]
HA group member information: is_manage_primary=1.
FGVM02TM22000004: Primary, serialno_prio=0, usr_priority=100, hostname=DC2_VM4
FGVM02TM22000003: Secondary, serialno_prio=1, usr_priority=200, hostname=DC2_VM3

[Kernel HA information]
vcluster 1, state=work, primary_ip=169.254.0.1, primary_id=0
FGVM02TM22000004: Primary, ha_prio/o_ha_prio=0/0
FGVM02TM22000003: Secondary, ha_prio/o_ha_prio=1/1

```

**d. Verify the FGSP peering status on DC2\_VM3:**

```

DC2_VM3 # diagnose sys ha standalone-peers
Group=2, ID=2
Detected-peers=1
Kernel standalone-peers: num=1.
peer0: vfid=0, peerip:port = 172.31.2.1:708, standalone_id=1
    session-type: send=2, recv=6
    packet-type: send=0, recv=0
Kernel standalone dev_base:
    standalone_id=0:
    standalone_id=1:
        phyindex=0: mac=00:09:0f:09:01:00, linkfail=1
        phyindex=1: mac=00:09:0f:09:01:01, linkfail=1
        phyindex=2: mac=00:09:0f:09:01:02, linkfail=1
        phyindex=3: mac=00:09:0f:09:01:03, linkfail=1
        phyindex=4: mac=00:09:0f:09:01:04, linkfail=1
        phyindex=5: mac=00:09:0f:09:01:05, linkfail=1
        phyindex=6: mac=00:09:0f:09:01:06, linkfail=1
        phyindex=7: mac=00:09:0f:09:01:07, linkfail=1
        phyindex=8: mac=00:09:0f:09:01:08, linkfail=1
        phyindex=9: mac=00:09:0f:09:01:09, linkfail=1

```

```

standalone_id=2:
    phyindex=0: mac=00:0c:29:bb:77:af, linkfail=1
    phyindex=1: mac=00:0c:29:bb:77:b9, linkfail=1
    phyindex=2: mac=00:0c:29:bb:77:c3, linkfail=1
    phyindex=3: mac=00:0c:29:bb:77:cd, linkfail=1
    phyindex=4: mac=00:0c:29:bb:77:d7, linkfail=1
    phyindex=5: mac=00:0c:29:bb:77:e1, linkfail=1
    phyindex=6: mac=00:0c:29:bb:77:eb, linkfail=1
    phyindex=7: mac=00:0c:29:bb:77:f5, linkfail=1
    phyindex=8: mac=00:0c:29:bb:77:ff, linkfail=1
    phyindex=9: mac=00:0c:29:bb:77:09, linkfail=1
standalone_id=3:
...
standalone_id=15:

```

2. Initiate traffic from PC1 to the Server. This initiates a tunnel from the IPsec Client 1 FortiGate to DC2\_VM1.

3. Verify the tunnel list for vpn1\_1 on each peer.

a. DC2\_VM1:

```

DC2_VM1 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
id6::10.0.0.4 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8840 options
[2288]=npu rgwy-chg frag-rfc run_state=0 role=sync-primary accept_traffic=1 overlay_
id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=41 olast=41 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=156
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:10.10.1.0-10.10.1.255:0
SA: ref=3 options=602 type=00 soft=0 mtu=1438 expire=1424/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_len=1
life: type=01 bytes=0/0 timeout=10791/10800
dec: spi=37f426a1 esp=aes key=16 3671c9303b6295fc73b11765811bdf96
ah=sha1 key=20 41b98cb541dc9c76311ddec4b23584ee35d31915
enc: spi=10aa4d3a esp=aes key=16 cc8529ee16de6e4ac42b0ce506d7cdd1
ah=sha1 key=20 0c2d9edd0fdbe45942cf718ac2ebb4d59c2760c6
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
npu_flag=00 npu_rgwy=192.168.7.2 npu_lgwy=192.168.202.35 npu_selid=1c dec_npuid=0
enc_npuid=0

```

b. DC2\_VM2:

```

DC2_VM2 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
id6::10.0.0.4 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options

```

```
[2208]=npu frag-rfc  run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=42975898 olast=42975898 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA:  ref=3 options=602 type=00 soft=0 mtu=1280 expire=1325/0B replaywin=2048
      seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
  life: type=01 bytes=0/0 timeout=10791/10800
  dec: spi=37f426a1 esp=aes key=16 3671c9303b6295fc73b11765811bdf96
      ah=sha1 key=20 41b98cb541dc9c76311ddec4b23584ee35d31915
  enc: spi=10aa4d3a esp=aes key=16 cc8529ee16de6e4ac42b0ce506d7cdd1
      ah=sha1 key=20 0c2d9edd0fdbe45942cf718ac2ebb4d59c2760c6
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgw=192.168.7.2 npu_lgw=192.168.202.35 npu_selid=1c dec_npuid=0
  enc_npuid=0
```

#### c. DC2\_VM3:

```
DC2_VM3 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
id6:::10.0.0.4 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc  run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=42975982 olast=42975982 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA:  ref=3 options=602 type=00 soft=0 mtu=1280 expire=1215/0B replaywin=2048
      seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
  life: type=01 bytes=0/0 timeout=10791/10800
  dec: spi=37f426a1 esp=aes key=16 3671c9303b6295fc73b11765811bdf96
      ah=sha1 key=20 41b98cb541dc9c76311ddec4b23584ee35d31915
  enc: spi=10aa4d3a esp=aes key=16 cc8529ee16de6e4ac42b0ce506d7cdd1
      ah=sha1 key=20 0c2d9edd0fdbe45942cf718ac2ebb4d59c2760c6
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgw=192.168.7.2 npu_lgw=192.168.202.35 npu_selid=1c dec_npuid=0
  enc_npuid=0
```

#### d. DC2\_VM4:

```
DC2_VM4 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
```

```

-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
id6=:10.0.0.4 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=42975768 olast=42975768 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=602 type=00 soft=0 mtu=1280 expire=1433/0B replaywin=2048
    seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
  life: type=01 bytes=0/0 timeout=10791/10800
  dec: spi=37f426a1 esp=aes key=16 3671c9303b6295fc73b11765811bdf96
    ah=sha1 key=20 41b98cb541dc9c76311dddec4b23584ee35d31915
  enc: spi=10aa4d3a esp=aes key=16 cc8529ee16de6e4ac42b0ce506d7cdd1
    ah=sha1 key=20 0c2d9edd0fdbe45942cf718ac2ebb4d59c2760c6
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=192.168.7.2 npu_lgwy=192.168.202.35 npu_selid=1c dec_npuid=0
  enc_npuid=0

```

The IPsec tunnel `role=sync-primary` on DC2\_VM1 indicates that it is being used to carry IPsec traffic. On DC2\_VM2, DC2\_VM3, and DC2\_VM4, the IPsec tunnel `role=standby` indicates that they are in standby for traffic forwarding.

### To test failover scenarios:

#### 1. Verify the sniffer trace on DC2\_VM1 before FGCP HA failover:

```

DC2_VM1 # diagnose sniffer packet any icmp 4
Using Original Sniffing Mode
interfaces=[any]
filters=[icmp]
0.171753 vpn1 in 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.171763 port3 out 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.171941 port3 in 10.10.101.2 -> 10.10.1.2: icmp: echo reply
0.171947 vpn1 out 10.10.101.2 -> 10.10.1.2: icmp: echo reply

```

Traffic passes through DC2\_VM1.

#### 2. Reboot the primary FortiGate, DC2\_VM1.

#### 3. Verify the sniffer trace on DC2\_VM2 after FGCP HA failover:

```

DC2_VM2 # diagnose sniffer packet any icmp 4
Using Original Sniffing Mode
interfaces=[any]
filters=[icmp]
0.111107 vpn1 in 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.111118 port3 out 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.111293 port3 in 10.10.101.2 -> 10.10.1.2: icmp: echo reply
0.111298 vpn1 out 10.10.101.2 -> 10.10.1.2: icmp: echo reply

```



```
^C
16 packets received by filter
0 packets dropped by kernel
```

Traffic passes through DC2\_VM2.

#### 4. Verify the tunnel list for vpn1\_1 on DC2\_VM2:

```
DC2_VM2 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
id6=:10.0.0.4 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8840 options[2288]=npu
rgwy-chg frag-rfc run_state=0 role=sync-primary accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=0 olast=0 ad=/0
stat: rxp=58 txp=31 rxb=4872 txb=2604
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=169
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=3 serial=3
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=602 type=00 soft=0 mtu=1438 expire=10730/0B replaywin=2048
    seqno=20 esn=0 replaywin_lastseq=0000003b qat=0 rekey=0 hash_search_len=1
  life: type=01 bytes=0/0 timeout=10790/10800
  dec: spi=37f426c1 esp=aes key=16 ef61b49078b6ab3e00a4d3a048d779f5
    ah=sha1 key=20 ee2e8de9c522d89b6481c37faa73a7bb54163645
  enc: spi=10aa4d58 esp=aes key=16 4cb95f12657ca8e269b9f8a25f9b19c1
    ah=sha1 key=20 326744c4e5b4a0758397725464593d94ba9390dc
  dec:pkts/bytes=116/9744, enc:pkts/bytes=62/7316
  npu_flag=00 npu_rgwy=192.168.7.2 npu_lgwy=192.168.202.35 npu_selid=1e dec_npuid=0 enc_
  npuid=0
```

The role has changed to role=sync-primary.

#### 5. Shut down DC2\_VM1 and the DC2\_VM2 IPsec uplink interface.

#### 6. Verify the sniffer trace on DC2\_VM3. As expected, traffic now passes through DC2\_VM3:

```
DC2_VM3 # diagnose sniffer packet any icmp 4
Using Original Sniffing Mode
interfaces=[any]
filters=[icmp]
0.165088 vpn1 in 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.165102 port3 out 10.10.1.2 -> 10.10.101.2: icmp: echo request
0.165294 port3 in 10.10.101.2 -> 10.10.1.2: icmp: echo reply
0.165301 vpn1 out 10.10.101.2 -> 10.10.1.2: icmp: echo reply
^C
14 packets received by filter
0 packets dropped by kernel
```

#### 7. Verify the tunnel list for vpn1\_1 on DC2\_VM3:

```
DC2_VM3 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
-----
name=vpn1_1 ver=2 serial=4 192.168.202.35:0->192.168.7.2:0 tun_id=192.168.7.2 tun_
```

```

id6::10.0.0.4 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options[2208]=npu
frag-rfc run_state=0 role=sync-primary accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=5 ilast=0 olast=0 ad=/0
stat: rxp=53 txp=53 rxb=4452 txb=4452
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=3 serial=3
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=602 type=00 soft=0 mtu=1438 expire=10347/0B replaywin=2048
    seqno=10000155 esn=0 replaywin_lastseq=000001b0 qat=0 rekey=0 hash_search_len=1
  life: type=01 bytes=0/0 timeout=10790/10800
  dec: spi=37f426c1 esp=aes key=16 ef61b49078b6ab3e00a4d3a048d779f5
    ah=sha1 key=20 ee2e8de9c522d89b6481c37faa73a7bb54163645
  enc: spi=10aa4d58 esp=aes key=16 4cb95f12657ca8e269b9f8a25f9b19c1
    ah=sha1 key=20 326744c4e5b4a0758397725464593d94ba9390dc
  dec:pkts/bytes=88/7392, enc:pkts/bytes=88/10384
  npu_flag=00 npu_rgwy=192.168.7.2 npu_lgwy=192.168.202.35 npu_selid=1e dec_npuid=0 enc_
  npuid=0

```


The role has changed to `role=sync-primary`.

## Allow IPsec DPD in FGSP members to support failovers

In conjunction with support for [FGSP per-tunnel failover for IPsec on page 2437](#), configuring DPD (dead peer detection) on an FGSP member is permitted. This allows a failed FGSP member to send out DPD probes during failover to detect unreachable remote peers and to flush the corresponding tunnels.

### Example

In this example, using the same configuration as in [FGSP per-tunnel failover for IPsec on page 2437](#), a tunnel can be established from one of the remote IPsec clients to one of the FGSP members (DC1\_VM1). DPD can be set to `on-idle`, with a configured `dpd-retryinterval` of 60 seconds. When a client disappears, whether it is due to remote client failures or server-side routing failures, the FGSP member or gateway (DC1\_VM1) will send out DPD probes for detection. Once the three iterations are complete and no responses are detected, the FGSP member will flush the tunnel and remove any routing to that peer.

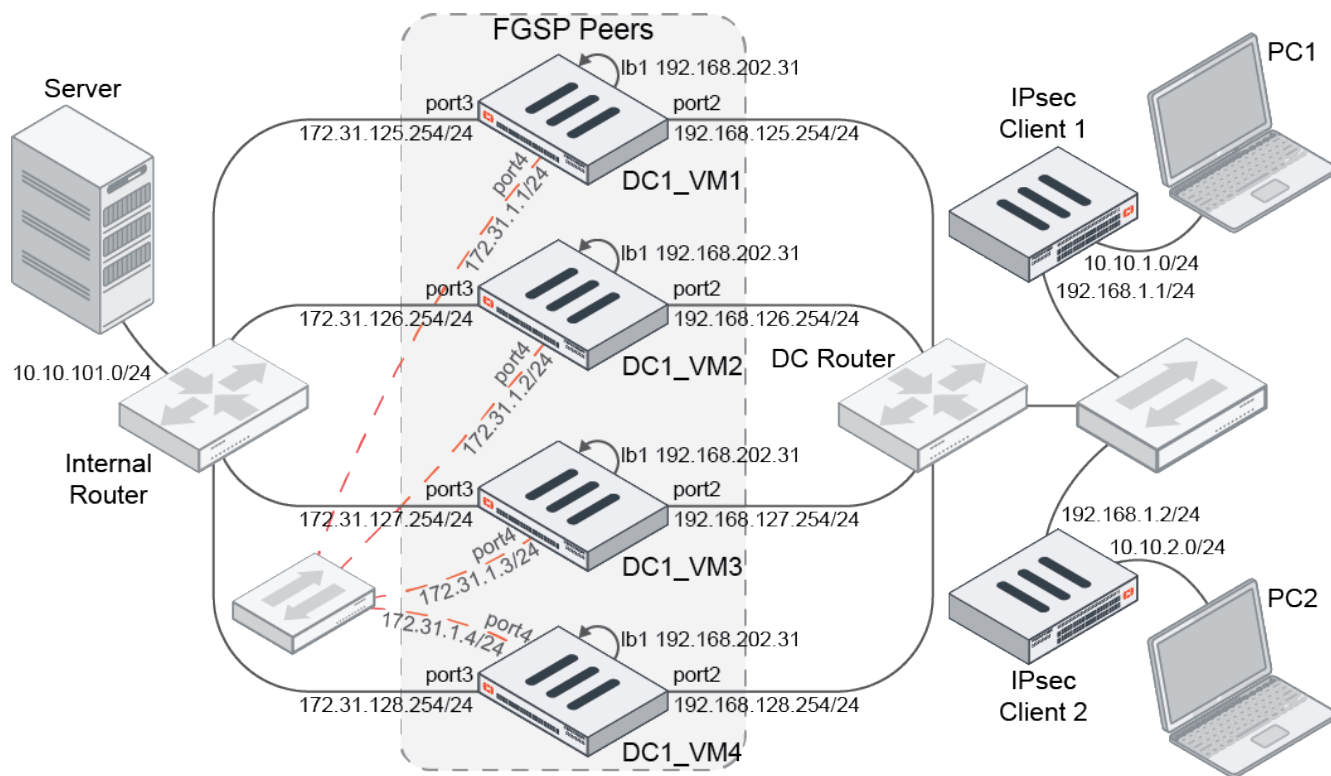

| Interface/setting | DC1_VM1            | DC1_VM2            | DC1_VM3            | DC1_VM4            |
|-------------------|--------------------|--------------------|--------------------|--------------------|
| port2             | 192.168.125.254/24 | 192.168.126.254/24 | 192.168.127.254/24 | 192.168.128.254/24 |
| port3             | 172.31.125.254/24  | 172.31.126.254/24  | 172.31.127.254/24  | 172.31.128.254/24  |
| port4             | 172.31.1.1/24      | 172.31.1.2/24      | 172.31.1.3/24      | 172.31.1.4/24      |
| lb1               | 192.168.202.31/32  | 192.168.202.31/32  | 192.168.202.31/32  | 192.168.202.31/32  |
| fgsp-sync         | Enabled            | Enabled            | Enabled            | Disabled           |

### To configure the FGSP peers (DC1\_VM1):



The following steps are to configure DC1\_VM1. The other peers have similar configurations based on the preceding table. In the `config vpn ipsec phase1-interface` settings, all peers should have the same local gateway external interface (192.168.202.31). For DC1\_VM4, `fgsp-sync` is disabled in the VPN tunnel phase 1 settings.

#### 1. Configure the FGSP settings:

```
config system standalone-cluster
  set standalone-group-id 1
  set group-member-id 1
  config cluster-peer
    edit 1
      set peerip 172.31.1.2
    next
```

```
        edit 2
            set peerip 172.31.1.3
        next
        edit 3
            set peerip 172.31.1.4
        next
    end
end
```

## 2. Configure the VPN tunnel phase 1 settings:

```
config vpn ipsec phase1-interface
    edit "vpn1"
        set type dynamic
        set interface "port2"
        set ike-version 2
        set local-gw 192.168.202.31
        set keylife 90000
        set peertype one
        set net-device disable
        set proposal aes128-sha1
        set dpd on-idle
        set dhgrp 2
        set fgsp-sync enable
        set nat traversal disable
        set peerid "Nokia_Peer"
        set psksecret xxxxx
        set dpd-retryinterval 60
    next
end
```

## 3. Configure the VPN tunnel phase 2 settings:

```
config vpn ipsec phase2-interface
    edit "vpn1"
        set phase1name "vpn1"
        set proposal aes128-sha1
        set keylifeseconds 10800
    next
end
```

## To verify the configuration:

### 1. Once the FGSP members establish peering with each other, verify the standalone peers on DC1\_VM1:

```
DC1_VM1 # diagnose sys ha standalone-peers
Group=1, ID=1
Detected-peers=3
Kernel standalone-peers: num=3.
peer0: vfid=0, peerip:port = 172.31.1.2:708, standalone_id=2
    session-type: send=0, rcv=0
    packet-type: send=0, rcv=0
peer1: vfid=0, peerip:port = 172.31.1.3:708, standalone_id=3
    session-type: send=0, rcv=0
    packet-type: send=0, rcv=0
peer2: vfid=0, peerip:port = 172.31.1.4:708, standalone_id=4
    session-type: send=0, rcv=0
    packet-type: send=0, rcv=0
```

```

Kernel standalone dev_base:
  standalone_id=0:
  standalone_id=1:
    phyindex=0: mac=00:0c:29:22:00:6b, linkfail=1
    phyindex=1: mac=00:0c:29:22:00:75, linkfail=1
    phyindex=2: mac=00:0c:29:22:00:7f, linkfail=1
    phyindex=3: mac=00:0c:29:22:00:89, linkfail=1
    phyindex=4: mac=00:0c:29:22:00:93, linkfail=1
    phyindex=5: mac=00:0c:29:22:00:9d, linkfail=1
    phyindex=6: mac=00:0c:29:22:00:a7, linkfail=1
    phyindex=7: mac=00:0c:29:22:00:b1, linkfail=1
    phyindex=8: mac=00:0c:29:22:00:bb, linkfail=1
    phyindex=9: mac=00:0c:29:22:00:c5, linkfail=1
  standalone_id=2:
    phyindex=0: mac=00:0c:29:06:4e:d6, linkfail=1
    phyindex=1: mac=00:0c:29:06:4e:e0, linkfail=1
    phyindex=2: mac=00:0c:29:06:4e:ea, linkfail=1
    phyindex=3: mac=00:0c:29:06:4e:f4, linkfail=1
    phyindex=4: mac=00:0c:29:06:4e:fe, linkfail=1
    phyindex=5: mac=00:0c:29:06:4e:08, linkfail=1
    phyindex=6: mac=00:0c:29:06:4e:12, linkfail=1
    phyindex=7: mac=00:0c:29:06:4e:1c, linkfail=1
    phyindex=8: mac=00:0c:29:06:4e:26, linkfail=1
    phyindex=9: mac=00:0c:29:06:4e:30, linkfail=1
  standalone_id=3:
    phyindex=0: mac=00:0c:29:70:b9:6c, linkfail=1
    phyindex=1: mac=00:0c:29:70:b9:76, linkfail=1
    phyindex=2: mac=00:0c:29:70:b9:80, linkfail=1
    phyindex=3: mac=00:0c:29:70:b9:8a, linkfail=1
    phyindex=4: mac=00:0c:29:70:b9:94, linkfail=1
    phyindex=5: mac=00:0c:29:70:b9:9e, linkfail=1
    phyindex=6: mac=00:0c:29:70:b9:a8, linkfail=1
    phyindex=7: mac=00:0c:29:70:b9:b2, linkfail=1
    phyindex=8: mac=00:0c:29:70:b9:bc, linkfail=1
    phyindex=9: mac=00:0c:29:70:b9:c6, linkfail=1
  standalone_id=4:
    phyindex=0: mac=00:0c:29:5c:d3:23, linkfail=1
    phyindex=1: mac=00:0c:29:5c:d3:2d, linkfail=1
    phyindex=2: mac=00:0c:29:5c:d3:37, linkfail=1
    phyindex=3: mac=00:0c:29:5c:d3:41, linkfail=1
    phyindex=4: mac=00:0c:29:5c:d3:4b, linkfail=1
    phyindex=5: mac=00:0c:29:5c:d3:55, linkfail=1
    phyindex=6: mac=00:0c:29:5c:d3:5f, linkfail=1
    phyindex=7: mac=00:0c:29:5c:d3:69, linkfail=1
    phyindex=8: mac=00:0c:29:5c:d3:73, linkfail=1
    phyindex=9: mac=00:0c:29:5c:d3:7d, linkfail=1
  standalone_id=5:
  ...
  standalone_id=15:

```

2. Initiate a dialup tunnel connection from the IPsec Client 2 FortiGate (192.168.1.2).

3. Verify the tunnel list for vpn1\_1 on each peer.

a. DC1\_VM1:

```

DC1_VM1 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0

```

```

-----
name=vpn1_1 ver=2 serial=a4 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=1500 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8840 options
[2288]=npu rgwy-chg frag-rfc run_state=0 role=sync-primary accept_traffic=1 overlay_
id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=6 olast=6 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=20
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=3 add-route
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=682 type=00 soft=0 mtu=1438 expire=10480/0B replaywin=2048
      seqno=1 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_len=1
  life: type=01 bytes=0/0 timeout=10788/10800
  dec: spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
      ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
  enc: spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
      ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=192.168.1.2 npu_lgwy=192.168.202.31 npu_selid=b2 dec_npuid=0
  enc_npuid=0

```

#### b. DC1\_VM2:

```

DC1_VM2 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0
-----
name=vpn1_1 ver=2 serial=a3 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=43063501 olast=43063501 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=3 add-route
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=682 type=00 soft=0 mtu=1280 expire=10466/0B replaywin=2048
      seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
  life: type=01 bytes=0/0 timeout=10788/10800
  dec: spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
      ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
  enc: spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
      ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=192.168.1.2 npu_lgwy=192.168.202.31 npu_selid=ab dec_npuid=0
  enc_npuid=0

```

## c. DC1\_VM3:

```

DC1_VM3 # diagnose vpn tunnel list name vpn1_1
list ipsec tunnel by names in vd 0
-----
name=vpn1_1 ver=2 serial=ac 192.168.202.31:0->192.168.1.2:0 tun_id=192.168.1.2 tun_
id6=:10.0.0.15 dst_mtu=0 dpd-link=on weight=1
bound_if=6 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/8712 options
[2208]=npu frag-rfc run_state=0 role=standby accept_traffic=1 overlay_id=0

parent=vpn1 index=1
proxyid_num=1 child_num=0 refcnt=6 ilast=43063499 olast=43063499 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec: egress=0 ingress=0
proxyid=vpn1 proto=0 sa=1 ref=2 serial=2 add-route
  src: 0:0.0.0.0-255.255.255.255:0
  dst: 0:10.10.1.0-10.10.1.255:0
  SA: ref=3 options=682 type=00 soft=0 mtu=1280 expire=10462/0B replaywin=2048
    seqno=10000001 esn=0 replaywin_lastseq=00000000 qat=0 rekey=0 hash_search_
len=1
  life: type=01 bytes=0/0 timeout=10788/10800
  dec: spi=a575b631 esp=aes key=16 5de449f75c7d70258f4972506dd164e2
    ah=sha1 key=20 7e65d641be6bc52655619ff542c67c61713de523
  enc: spi=10aa45b0 esp=aes key=16 65ad3b4849386deb4f3028079a657257
    ah=sha1 key=20 b5f1e1c6786f69482b5d271347a69a0cbb83ed58
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=192.168.1.2 npu_lgwy=192.168.202.31 npu_selid=b4 dec_npuid=0
  enc_npuid=0

```

4. When a shut down occurs on the VPN client to vpn1\_2, verify the IKE debug messages on DC1\_VM2. There are three iterations of DPD probes:

```

DC1_VM2 # diagnose debug enable
DC1_VM2 # diagnose debug application ike -1
...
ike 0:vpn1_2: link is idle 6 192.168.202.31->192.168.4.2:0 dpd=1 seqno=72 rr=0
ike 0:vpn1_2:171: send IKEv2 DPD probe, seqno 114
ike 0:vpn1_2:158: sending NOTIFY msg
ike 0:vpn1_2:171:158: send informational
ike 0:vpn1_2:171: sent IKE msg (INFORMATIONAL): 192.168.202.31:500->192.168.4.2:500,
len=76, vrf=0, id=87458c81a3be17f9/c8db7d3f2c70e638:00000004
ike 0: comes 192.168.1.2:500->192.168.202.31:500,ifindex=6,vrf=0...
ike 0:vpn1_2: link is idle 6 192.168.202.31->192.168.4.2:0 dpd=1 seqno=72 rr=0
ike 0:vpn1_2:171: send IKEv2 DPD probe, seqno 114
ike 0:vpn1_2:158: sending NOTIFY msg
ike 0:vpn1_2:171:158: send informational
ike 0:vpn1_2:171: sent IKE msg (INFORMATIONAL): 192.168.202.31:500->192.168.4.2:500,
len=76, vrf=0, id=87458c81a3be17f9/c8db7d3f2c70e638:00000004
ike 0: comes 192.168.1.2:500->192.168.202.31:500,ifindex=6,vrf=0....
ike 0:vpn1_2: link is idle 6 192.168.202.31->192.168.4.2:0 dpd=1 seqno=72 rr=0
ike 0:vpn1_2:171: send IKEv2 DPD probe, seqno 114
ike 0: comes 192.168.1.2:500->192.168.202.31:500,ifindex=6,vrf=0....
ike 0:vpn1_2:171: 87458c81a3be17f9/c8db7d3f2c70e638 negotiation of IKE SA failed due to
retry timeout
ike 0:vpn1_2:171: expiring IKE SA 87458c81a3be17f9/c8db7d3f2c70e638

```

```

ike 0:vpn1_2: deleting
ike 0:vpn1_2: flushing
ike 0:vpn1_2: deleting IPsec SA with SPI 85700354
ike 0:vpn1_2:vpn1: deleted IPsec SA with SPI 85700354, SA count: 0
ike 0:vpn1_2: sending SNMP tunnel DOWN trap for vpn1
ike 0:vpn1_2: sending tunnel down event for addr 10.10.4.0
ike 0:vpn1_2:vpn1: delete
ike 0:vpn1:152: del route 10.10.4.0/255.255.255.0 tunnel 192.168.4.2 oif vpn1(21) metric
15 priority 1
ike 0:vpn1_2: flushed
ike 0:vpn1_2:171: HA send IKE SA del 87458c81a3be17f9/c8db7d3f2c70e638
ike 0:vpn1_2:171:159: send informational
ike 0:vpn1_2:171: sent IKE msg (INFORMATIONAL): 192.168.202.31:500->192.168.4.2:500,
len=76, vrf=0, id=87458c81a3be17f9/c8db7d3f2c70e638:00000005
ike 0:vpn1_2: delete dynamic
ike 0:vpn1_2: deleted

```

## Standalone configuration synchronization

You can configure synchronization from one standalone FortiGate to another standalone FortiGate (`standalone-config-sync`). With the exception of some configurations that do not sync (settings that identify the FortiGate to the network), the rest of the configurations are synced, such as firewall policies, firewall addresses, and UTM profiles.

This option is useful in situations when you need to set up FGSP peers, or when you want to quickly deploy several FortiGates with the same configurations. You can set up `standalone-config-sync` for multiple members.



`standalone-config-sync` is an independent feature and should be used with caution as there are some limitations. We recommend disabling it once the configurations have been synced over.

### Limitations

When standalone configuration synchronization is enabled, there are some limitations, including but not limited to the following:


- Network interruptions occur during firmware upgrades: when upgrading the firmware, all members in the `standalone-config-sync` group are upgraded simultaneously. This creates downtime if the FortiGates are the only outgoing gateway in the network. We recommend disabling the option before upgrading firmware.
- Some unwanted configurations might be synced: the current design and implementation of `standalone-config-sync` is based on requirements from specific customers. Thus, some users may find that unwanted parts of the configurations are synced. Should this occur, we recommend disabling the option and modifying those configurations manually.
- The wrong primary device might be selected accidentally: `standalone-config-sync` is derived from the HA primary unit selection mechanism. All members in the group will join the selection process in the same way as the HA cluster selection process. It is important to select the correct device as the primary, otherwise the wrong device could be selected and existing configurations could be overwritten.

### Setting up standalone configuration synchronization

Two or more standalone FortiGates should be connected to each other with one or more heartbeat interfaces, either back-to-back or via a switch. In the following example, the device supplying the configurations is called "conf-prim," and



the devices receiving the configurations are called "conf-secos."

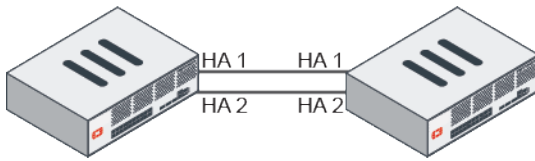

### To set up standalone configuration synchronization:

1. Configure the conf-prim device for the group:

```
config system ha
    set hbdev ha1 50 ha2 100
    set priority 255
    set override enable
    set standalone-config-sync enable
end
```

2. Configure the conf-prim device as needed to be functional.

3. Configure the other group members as conf-secos:

```
config system ha
    set standalone-config-sync enable
end
```

4. Wait 10–15 minutes for the configurations to sync over.

5. Verify the synchronization status:

```
# get system ha status
path=system, objname=ha, tablename=(null), size=5912
HA Health Status:
    WARNING: FG201E4Q17900771 has hbdev down;
    WARNING: FG201ETK19900991 has hbdev down;
Model: FortiGate-201E
Mode: ConfigSync
Group Name:
Group ID: 0
Debug: 0
Cluster Uptime: 0 days 0:0:51
Cluster state change time: 2019-09-03 17:46:07
Primary selected using:
    <2019/09/03 17:46:07> FG201ETK19900991 is selected as the primary because it has the
largest value of override priority.
ses_pickup: disable
override: disable
Configuration Status:
    FG201E4Q17900771(updated 3 seconds ago): out-of-sync
    FG201ETK19900991(updated 1 seconds ago): in-sync
System Usage stats:
    FG201E4Q17900771(updated 3 seconds ago):
        sessions=1, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=16%
    FG201ETK19900991(updated 1 seconds ago):
        sessions=1, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=16%
HBDEV stats:
    FG201E4Q17900771(updated 3 seconds ago):
        wan2: physical/1000auto, up, rx-bytes/packets/dropped/errors=114918/266/0/0,
```

```

tx=76752/178/0/0
  ha: physical/00, down, rx-bytes/packets/dropped/errors=0/0/0/0, tx=0/0/0/0
  FG201ETK19900991(updated 1 seconds ago):
    wan2: physical/1000auto, up, rx-bytes/packets/dropped/errors=83024/192/0/0,
tx=120216/278/0/0
  ha: physical/00, down, rx-bytes/packets/dropped/errors=0/0/0/0, tx=0/0/0/0
Secondary: FortiGate-201E, FG201E4Q17900771, HA cluster index = 1
Primary: FortiGate-201E, FG201ETK19900991, HA cluster index = 0
number of vcluster: 1
vcluster 1: work 169.254.0.1
Secondary: FG201E4Q17900771, HA operating index = 1
Primary: FG201ETK19900991, HA operating index = 0

```

If all members are `in-sync`, this means all members share the same configurations, except those that should not be synced. If any members are `out-of-sync`, this means the member failed to sync with the primary device.



Debugging is similar when a cluster is out of sync.

The following topic provides more information about standalone configuration synchronization:


- [Layer 3 unicast standalone configuration synchronization on page 2460](#)

## Layer 3 unicast standalone configuration synchronization

Unicast standalone configuration synchronization is supported on layer 3, allowing peers to be synchronized in cloud environments that do not support layer 2 networking. Configuring a unicast gateway allows peers to be in different subnets.

### Example

In this example, two FortiGates in different subnets are connected through a unicast gateway. Both cluster members use the same port for the heartbeat interface.

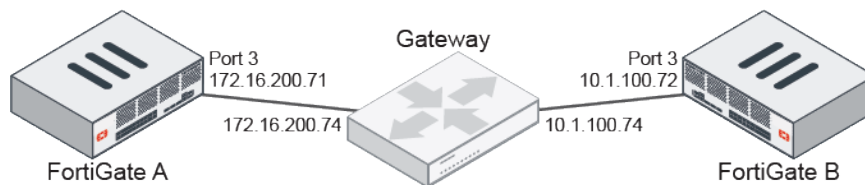

### To configure unicast synchronization between peers:

#### 1. Configure FortiGate A:

```

config system ha
  set group-name "testcs"
  set hbdev "port3" 50
  set standalone-config-sync enable
  config unicast-peers
    edit 1
      set peer-ip 10.1.100.72

```

```
        next
    end
    set override enable
    set priority 200
    set unicast-status enable
    set unicast-gateway 172.16.200.74
end
```

## 2. Configure FortiGate B:

```
config system ha
    set group-name "testcs"
    set hbdev "port3" 50
    set standalone-config-sync enable
    config unicast-peers
        edit 1
            set peer-ip 172.16.200.71
        next
    end
    set override enable
    set priority 100
    set unicast-status enable
    set unicast-gateway 10.1.100.74
end
```

## 3. Check the HA status on FortiGate A:

```
# get system ha status
HA Health Status: OK
Model: FortiGate-VM64
Mode: ConfigSync
Group Name: testcs
Group ID: 0
Debug: 0
Cluster Uptime: 2 days 3:40:25
Cluster state change time: 2021-03-08 12:00:38
Primary selected using:
    <2021/03/08 12:00:38> FGVMSLTM00000001 is selected as the primary because its
override priority is larger than peer member FGVMSLTM00000002.
    <2021/03/06 11:50:35> FGVMSLTM00000001 is selected as the primary because it's the
only member in the cluster.
ses_pickup: disable
override: enable
Configuration Status:
    FGVMSLTM21000151(updated 5 seconds ago): in-sync
    FGVMSLTM21000152(updated 5 seconds ago): in-sync
System Usage stats:
    FGVMSLTM21000151(updated 5 seconds ago):
        sessions=7, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=24%
    FGVMSLTM21000152(updated 5 seconds ago):
        sessions=5, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=23%
HBDEV stats:
    FGVMSLTM21000151(updated 5 seconds ago):
        port3: physical/1000auto, up, rx-
bytes/packets/dropped/errors=466060007/1049137/0/0, tx=429538329/953028/0/0
    FGVMSLTM21000152(updated 5 seconds ago):
        port3: physical/1000auto, up, rx-
```

```

bytes/packets/dropped/errors=48805199/85441/0/0, tx=33470286/81425/0/0
Primary      : FGT-71          , FGVMSLTM00000001, HA cluster index = 1
Secondary    : FGT-72          , FGVMSLTM00000002, HA cluster index = 0
number of vcluster: 1
vcluster 1: work 0.0.0.0
Primary: FGVMSLTM00000001, HA operating index = 0
Secondary: FGVMSLTM00000002, HA operating index = 1

```

#### 4. Check the HA checksums on FortiGate A:

```

# diagnose sys ha checksum cluster

===== FGVMSLTM00000001 =====

is_manage_primary()=1, is_root_primary()=1
debugzone
global: 4f 2c a2 04 07 57 46 c4 47 28 ca d2 5a c5 98 ee
root: 16 af 5d a4 ac cf a5 4b b7 22 93 ce f9 02 68 bc
all: 6e 28 7f 8a 74 f7 37 43 8f 32 73 68 1e d6 ca cd

checksum
global: 4f 2c a2 04 07 57 46 c4 47 28 ca d2 5a c5 98 ee
root: 16 af 5d a4 ac cf a5 4b b7 22 93 ce f9 02 68 bc
all: 6e 28 7f 8a 74 f7 37 43 8f 32 73 68 1e d6 ca cd

===== FGVMSLTM00000002 =====

is_manage_primary()=0, is_root_primary()=1
debugzone
global: 4f 2c a2 04 07 57 46 c4 47 28 ca d2 5a c5 98 ee
root: 16 af 5d a4 ac cf a5 4b b7 22 93 ce f9 02 68 bc
all: 6e 28 7f 8a 74 f7 37 43 8f 32 73 68 1e d6 ca cd

checksum
global: 4f 2c a2 04 07 57 46 c4 47 28 ca d2 5a c5 98 ee
root: 16 af 5d a4 ac cf a5 4b b7 22 93 ce f9 02 68 bc
all: 6e 28 7f 8a 74 f7 37 43 8f 32 73 68 1e d6 ca cd

```

#### 5. Verify that configuration changes on the primary FortiGate are synchronized to the secondary FortiGate:

##### a. Adjust the administrator timeout value on FortiGate A:

```

config system global
    set admintimeout 100
end

```

##### b. Check the debug messages on FortiGate B:

```

# diagnose debug cli 7
Debug messages will be on for 30 minutes.

# diagnose debug enable

create pid=15639, clictxno=0, last=1615246288
0: conf sys global
0: set admintimeout 100
0: end

```

## VRRP

A Virtual Router Redundancy Protocol (VRRP) configuration can be used as a high availability solution to ensure that a network maintains connectivity with the internet (or with other networks) even if the default router for the network fails. If a router or a FortiGate fails, all traffic to this device transparently fails over to another router or FortiGate that takes over the role of the failed device. If the failed device is restored, it will take over processing the network traffic.


FortiOS supports VRRP versions 2 and 3. VRRP domains can be created, which can include multiple FortiGates and other VRRP-compatible routers. Different FortiGate models can be added to the same VRRP domain.

FortiOS supports IPv4 and IPv6 VRRP, so IPv4 and IPv6 VRRP virtual routers can be added to the same interface. FortiGates can quickly and easily integrate into a network that has already deployed VRRP.

### Basic VRRP configuration

The most common VRRP application is to provide redundant default routers between an internal network and the internet. The default routers can be FortiGates or any routers that support VRRP.

Two or more FortiGate interfaces or routers must be configured with the same virtual router ID and IP address so they can automatically join the same VRRP domain. Priorities must be assigned to each FortiGate interface or router in the VRRP domain. All of the routers in the VRRP domain should have different priorities. One FortiGate interface or router must have the highest priority to become the primary router. The other FortiGates or routers in the domain are assigned lower priorities and become backups. If the primary router fails, VRRP automatically fails over to the router in the domain with the next highest priority.

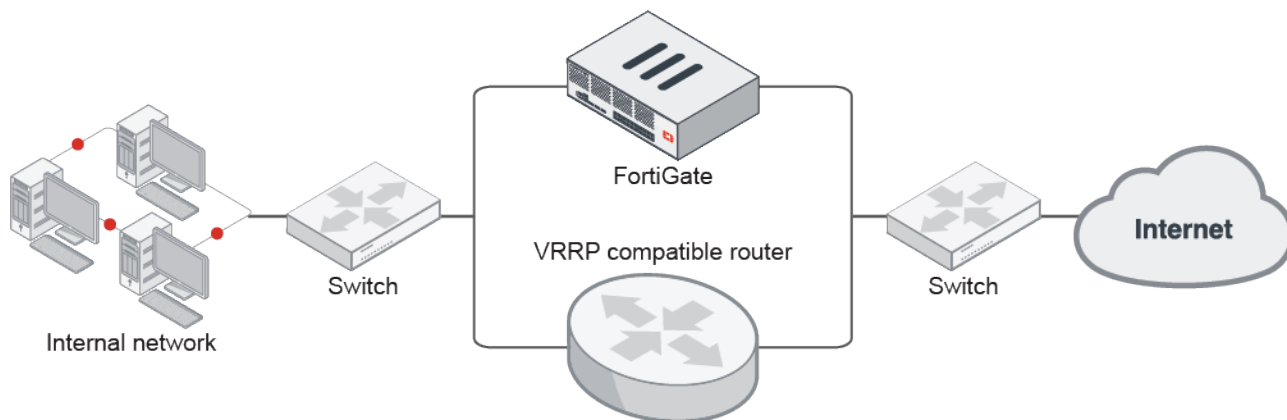

#### To configure VRRP:

1. Add a virtual VRRP router to the internal interface of each FortiGate and/or router. This adds the FortiGates and routers to the same VRRP domain.
2. Set the VRRP IP address of the domain to the internal network default gateway IP address.
3. Set the priorities.

See [Adding IPv4 and IPv6 virtual routers to an interface on page 2464](#) [Single-domain VRRP example on page 2471](#), and [Multi-domain VRRP example on page 2472](#) for configuration examples.

During normal operations, all traffic from the internal network to the internet passes through the primary VRRP router. The primary router also sends VRRP advertisement messages to the backup routers. A backup router will not attempt to become a primary router while receiving these messages. If the primary router fails, the backup router with the highest

priority becomes the new primary router after a short delay. All packets sent to the default route are now sent to the new primary router. If the new primary router is a FortiGate, the network continues to benefit from FortiOS security features. If the new primary router is just a router, traffic continues to flow, but FortiOS security features are unavailable until the FortiGate is back online.

If the backup router is a FortiGate, during a VRRP failover as the FortiGate begins operating as the new primary router, it will not have session information for all of the failed over in-progress sessions. So, it would normally not be able to forward in-progress session traffic.

## Adding IPv4 and IPv6 virtual routers to an interface

This topic describes how to add IPv4 and IPv6 virtual routers to an interface. VRRP can only be configured on physical or VLAN interfaces. VRRP cannot be configured on hardware switch interfaces where multiple physical interfaces are combined into a hardware switch interface.

### IPv4 virtual router

In this example, an IPv4 VRRP router is added to port10 on the FortiGate. The VRRP virtual router has a virtual router ID of 200, uses IP address 10.31.101.200, and has a priority of 255. Since this is the highest priority in the configuration, this interface is configured to be the primary router of the VRRP domain.

#### To configure the interface settings:

```
config system interface
  edit port10
    config vrrp
      edit 200
        set vrip 10.31.101.200
        set priority 255
      next
    end
  next
end
```

### IPv6 virtual router

In this example, an IPv6 VRRP router is added to port20 on the FortiGate. The VRRP virtual router has a virtual router ID of 220, uses IP address 2001:db8:1::12, and has a priority of 255. Since this is the highest priority in the configuration, this interface is configured to be the primary router of the VRRP domain.

#### To configure the interface settings:

```
config system interface
  edit port20
    config ipv6
      set vrip6_link_local <IPv6_address>
    config vrrp6
      edit 220
        set vrip 2001:db8:1::12
        set priority 255
      next
    end
  end
```

```
        end
    next
end
```

## VRRP failover

VRRP routers in a VRRP domain periodically send VRRP advertisement messages to all routers in the domain to maintain one router as the primary router and the others as backup routers. The primary router has the highest priority. If the backup routers stop receiving these packets from the primary router, the backup router with the highest priority becomes the new primary router.

The primary router stops sending VRRP advertisement messages if it fails or becomes disconnected. Up to two VRRP destination addresses can be configured to be monitored by the primary router. As a best practice, the destination addresses should be remote addresses. If the primary router is unable to connect to these destination addresses, it stops sending VRRP advertisement messages, and the backup router with the highest priority becomes the primary router.

### To configure IPv4 VRRP with two destination addresses for monitoring:

```
config system interface
    edit port14
        config vrrp
            edit 12
                set vrdst 10.10.10.20 10.20.20.10
            next
        end
    next
end
```

### To configure IPv6 VRRP with one destination address for monitoring:

```
config system interface
    edit port23
        config ipv6
            config vrrp6
                edit 223
                    set vrdst 2001:db8:1::12
                next
            end
        end
    next
end
```

## IPv4 VRRP active failover

The `vrdst-priority` option can be used to reduce IPv4 VRRP failover times. This option causes the primary router to actively signal to the backup routers when the primary router cannot reach its configured destination addresses. The primary router sends a lower priority for itself in the VRRP advertisement messages. The backup router with the highest priority becomes the new primary router and takes over traffic processing.

In this example, the primary router is configured to have a priority of 255, so it should always become the primary router. The `vrdst-priority` is set to 10. If the primary router cannot connect to the 10.10.10.1 destination address, then the primary router informs the VRRP group that its priority is now 10.

**To set the priority of the virtual router when the destination address is unreachable:**

```
config system interface
  edit port10
    config vrrp
      edit 12
        set vrip 10.31.101.200
        set priority 255
        set vrdest 10.10.10.1
        set vrdest-priority 10
      next
    end
  next
end
```

**IPv4 VIP and IP pool failover**

The `proxy-arp` option can be used to map VIPs and IP pool address ranges to each router's VMAC (virtual MAC). After failover, the IP or ranges configured in the VRRP settings are routed to the new primary router's VMAC. In this example, a single IP and an address range are added for proxy ARP.

**To configure the IP addresses for proxy ARP:**

```
config system interface
  edit port5
    set vrrp-virtual-mac enable
    config vrrp
      edit 1
        config proxy-arp
          edit 1
            set ip 192.168.62.100-192.168.62.200
          next
          edit 2
            set ip 192.168.62.225
          next
        end
      next
    end
  next
end
```

**Changing the advertisement message interval**

By default, VRRP advertisement messages are sent once every second. The frequency can be changed with the `adv-interval` option to change the frequency of sending these messages (1 - 255 seconds).

The `adv-interval` also affects the period of time that a backup VRRP router waits before assuming the primary router has failed. The waiting period is three times the `adv-interval`. For example, if the `adv-interval` is set to 5, then the backup router waits for up to 15 seconds to receive a VRRP advertisement from the current primary router before taking over the role as the primary router.



**To configure IPv4 VRRP to send advertisement messages every 10 seconds:**

```
config system interface
  edit port14
    config vrrp
      edit 12
        set adv-interval 10
      next
    end
  next
end
```

**To configure IPv6 VRRP to send advertisement messages every 20 seconds:**

```
config system interface
  edit port23
    config ipv6
      config vrrp6
        edit 223
          set adv-interval 20
        next
      end
    next
  end
end
```

**Changing the VRRP startup time**

The VRRP startup time is the time a backup or primary VRRP router waits before sending or receiving VRRP advertisements before potentially changing state (`start-time` in seconds, 1 - 255, default = 3). This timer is mainly visible when VRRP-monitored interfaces become up after previously been down. When this occurs, the device will wait for the time period before considering, and potentially changing its status.

There are some instances when the advertisement messages might be delayed. For example, some switches with spanning tree enabled may delay some of the advertisement message packets. If backup routers are attempting to become primary routers even though the primary router has not failed, extend the start time to ensure that the backup routers wait long enough for the advertisement messages.

**To configure the IPv4 VRRP startup time to 10 seconds:**

```
config system interface
  edit port14
    config vrrp
      edit 12
        set start-time 10
      next
    end
  next
end
```

**To configure the IPv6 VRRP startup time to 15 seconds:**

```
config system interface
  edit port23
    config ipv6
```

```
        config vrrp6
            edit 223
                set start-time 15
            next
        end
    next
end
```

## VRRP groups

If VRRP routers are added to multiple interfaces of the same FortiGate, each router will be in a different VRRP domain. If one of the VRRP routers fails, it is useful if all of the VRRP routers added to the FortiGate also fail.

VRRP can only check the routers' status in a single VRRP domain and cannot track the status of routers in other domains. For multiple VRRP domains on a single FortiGate, only one can switch to being a backup, and the others remain operating normally. Using VRRP groups resolves this issue.

All the VRRP virtual routers on the FortiGate can be added to a VRRP group. If one of the virtual routers in a VRRP group switches to the backup, the VRRP group forces all members to switch to backups. All VRRP traffic being processed by the FortiGate fails over to other devices in the network.



The status of the virtual routers in a VRRP group only changes when one or more of the virtual routers in the group changes status. A VRRP group should not be used to manually change the status of the virtual routers in the group.

---

### To configure two IPv4 VRRP routers in a VRRP group:

```
config system interface
    edit port10
        config vrrp
            edit 200
                set vrip 10.31.101.200
                set priority 255
                set vrgrp 10
            next
        end
    next
    edit port20
        config vrrp
            edit 100
                set vrip 10.23.1.223
                set priority 20
                set vrgrp 10
            next
        end
    next
end
```

### To configure two IPv6 VRRP routers in a VRRP group:

```
config system interface
    edit port11
        config ipv6
```

```

        set vrip6_link_local <IPv6_address>
    config vrrp6
        edit 220
            set vrip 2001:db8:1::12
            set priority 255
            set vrgrp 90
        next
    end
end
next
edit port12
    config ipv6
        set vrip6_link_local <IPv6_address>
        config vrrp6
            edit 220
                set vrip 2001:db8:1::14
                set priority 100
                set vrgrp 90
            next
        end
    end
next
end

```

## VRRP virtual MACs

The VRRP virtual MAC address (or virtual router MAC address) is a shared MAC address adopted by the primary router. If the primary router fails, the same virtual MAC address is picked up by the new primary router, allowing all devices on the network to transparently connect to the default route using the same virtual MAC address. This feature must be enabled on all members in a VRRP domain.

Each VRRP router has its own virtual MAC address. The last part octet is based on the VRRP router ID using the following format:

00-00-5E-00-01-<VRID\_hex>

Where <VRID\_hex> is the VRRP router ID in hexadecimal format in internet standard bit-order. For more information about virtual MAC formatting, see [RFC 3768](#).

For example:

- If the VRRP router ID is 10, then the virtual MAC is 00-00-5E-00-01-0a.
- If the VRRP router ID is 200, then the virtual MAC is 00-00-5E-00-01-c8.

If the VRRP virtual MAC address feature is disabled (the default setting), the VRRP domain uses the MAC address of the primary router. On a FortiGate VRRP virtual router, this is the MAC address of the FortiGate interface that the VRRP router is added to. If the primary fails, when the new primary takes over, it sends gratuitous ARPs to associate the VRRP router IP address with the MAC address of the new primary (or the FortiGate interface that became the new primary).

When a VRRP virtual MAC address is enabled, the new primary uses the same MAC address as the old primary.

Since devices on the LAN do not have to learn a new MAC address for a new VRRP router in the event of a failover, this feature can improve network efficiency, especially in large and complex networks.

**To enable virtual MAC addresses in IPv4 VRRP:**

```
config system interface
  edit <name>
    set vrrp-virtual-mac enable
  next
end
```

**To enable virtual MAC addresses in IPv6 VRRP:**

```
config system interface
  edit <name>
    config ipv6
      set vrrp-virtual-mac6 enable
    end
  next
end
```

## Preempt mode

When preempt mode is enabled (the default setting), a higher priority backup router can preempt a lower priority primary router. This can happen if the primary router fails, the backup router becomes the primary router, and the failed primary router restarts. Since the restarted router has a higher priority, if preempt mode is enabled, the restarted router replaces the current primary router becoming the new primary router. If preempt mode is disabled, a restarted router that has a higher priority would not take over as the primary router.



Based on [RFC 3768 Section 5.3.4](#), "The priority value for the VRRP router that owns the IP address(es) associated with the virtual router MUST be 255 (decimal). VRRP routers backing up a virtual router MUST use priority values between 1-254 (decimal)."

Therefore, in cases where preempt mode is disabled, but the priority is set to 255, the restarted unit will take over as the primary router.

**To configure preempt mode in IPv4 VRRP:**

```
config system interface
  edit <name>
    config vrrp
      edit <vrid>
        set preempt {enable | disable}
      next
    end
  next
end
```

**To configure preempt mode in IPv6 VRRP:**

```
config system interface
  edit <name>
    config ipv6
      config vrrp6
        edit <vrid>
          set preempt {enable | disable}
        end
      end
    end
  next
end
```


```

        next
    end
end
next
end

```

## Single-domain VRRP example

This example consists of a VRRP domain with two FortiGates that connect an internal network to the internet. The FortiGate port2 interfaces connect to the internal network, and a VRRP virtual router is added to each port2 interface with VRRP virtual MAC addresses enabled. The internal network default route is 10.31.101.120. Each FortiGate port2 interface has an IP address that is different from the virtual router IP address. Since `vrrp-virtual-mac` is enabled, upon failover, the new primary VRRP router will use the same VMAC as the previous router.

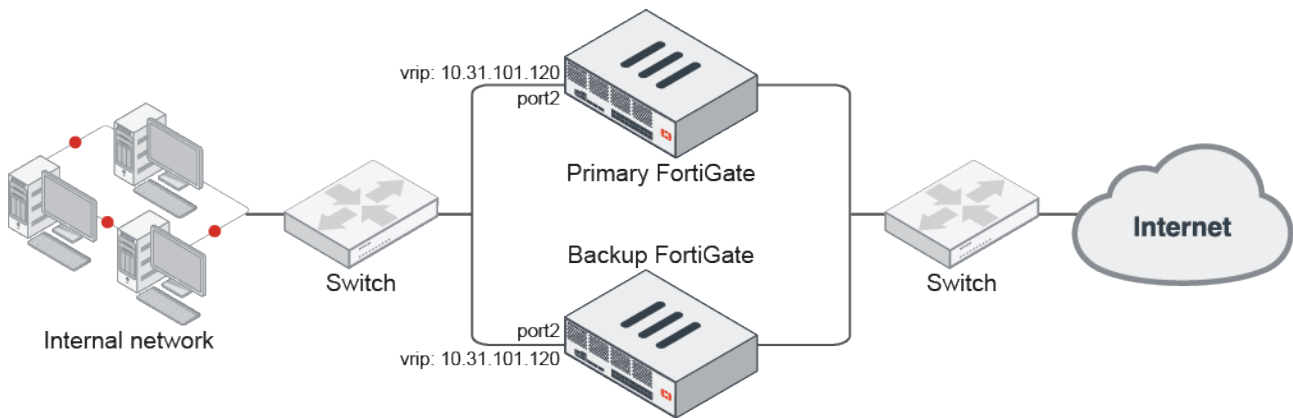

### To configure the primary FortiGate:

```

config system interface
    edit port2
        set vrrp-virtual-mac enable
        config vrrp
            edit 5
                set vrip 10.31.101.120
                set priority 255
            next
        end
    next
end

```

### To configure the backup FortiGate:

```

config system interface
    edit port2
        set vrrp-virtual-mac enable
        config vrrp
            edit 5
                set vrip 10.31.101.120
                set priority 50
            next
        end
    end
end

```

```

next
end


```

## Multi-domain VRRP example

This example consists of two VRRP domains, and both FortiGates participate in the domains that connect an internal network to the internet. One FortiGate is the primary router of one domain and the other FortiGate is the primary router of the other domain. The network distributes traffic between two different default routes (10.31.101.120 and 10.31.101.130). One VRRP domain is configured with one of the default route IP addresses and the other VRRP domain gets the other default route IP address. During normal operation, both FortiGates process traffic, and the VRRP domains are used to load balance the traffic between the two FortiGates.

If one of the FortiGates fails, the remaining FortiGate becomes the primary router of both VRRP domains. The network sends all traffic for both default routes to this FortiGate. The result is a configuration that (under normal operational load) balances traffic between two FortiGates, but if one of the FortiGates fails, all traffic fails over to the FortiGate that is still operating.

VRRP virtual MAC address are enabled on both FortiGates' port2 interfaces so that the VRRP domains use their VRRP virtual MAC addresses.

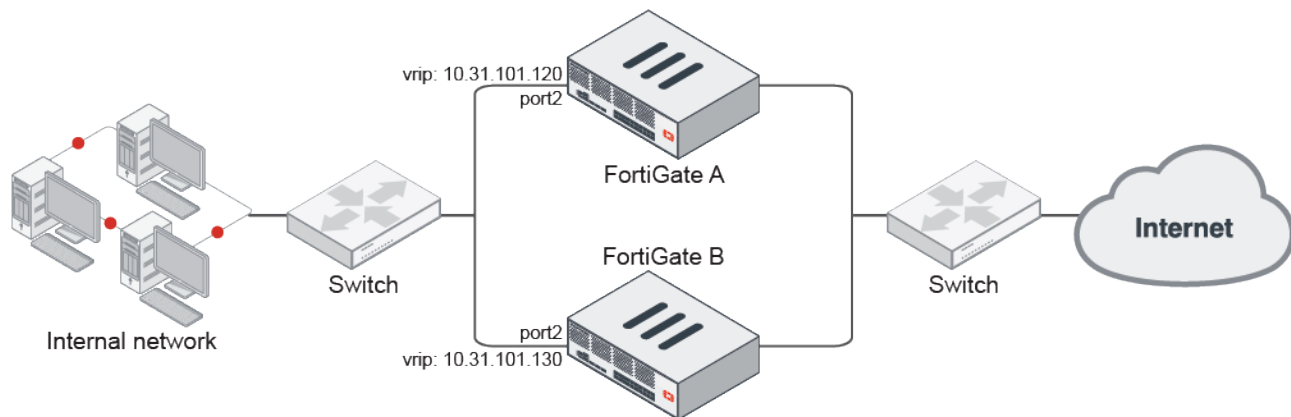

| Device      | VRRP primary      |     |          | VRRP backup       |     |          |
|-------------|-------------------|-----|----------|-------------------|-----|----------|
|             | Virtual router IP | ID  | Priority | Virtual router IP | ID  | Priority |
| FortiGate A | 10.31.101.120     | 50  | 255      | 10.31.101.130     | 100 | 50       |
| FortiGate B | 10.31.101.130     | 100 | 255      | 10.31.101.120     | 50  | 50       |

### To configure FortiGate A:

```

config system interface
    edit port2
        set vrrp-virtual-mac enable
    config vrrp
        edit 50
            set vrip 10.31.101.120
            set priority 255
        next
        edit 100
            set vrip 10.31.101.130

```

```

        set priority 50
    next
end
next
end

```

### To configure FortiGate B:


```

config system interface
    edit port2
        set vrrp-virtual-mac enable
        config vrrp
            edit 50
                set vrip 10.31.101.120
                set priority 50
            next
            edit 100
                set vrip 10.31.101.130
                set priority 255
            next
        end
    next
end

```

## VRRP on EMAC-VLAN interfaces

Virtual Router Redundancy Protocol (VRRP) can be configured on EMAC-VLAN interfaces.

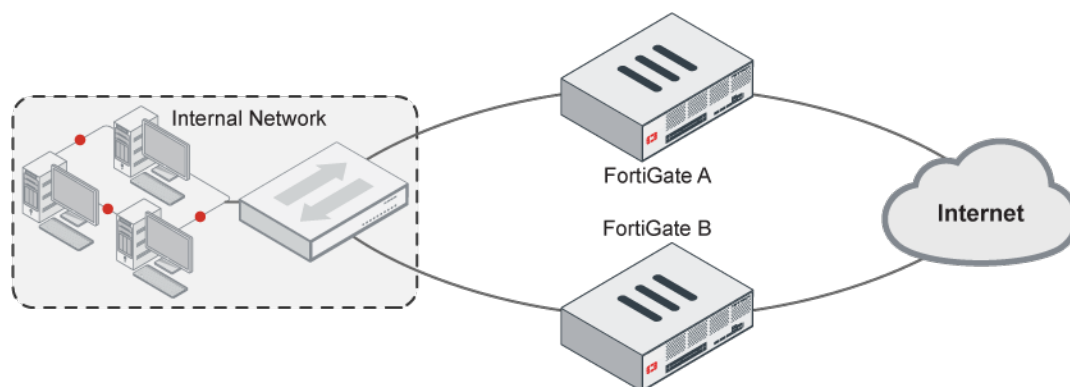

### To configure the interfaces:

#### 1. Configure FortiGate A:

```

config system interface
    edit "emac"
        set vdom "root"
        set ip 172.16.209.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet fgfm
        set type emac-vlan
        set vrrp-virtual-mac enable
        config vrrp
            edit 1

```

```
        set vrip 172.16.209.111
        set priority 200
    next
end
set snmp-index 61
set interface "port1"
next
end
```

## 2. Configure FortiGate B:

```
config system interface
    edit "emac"
        set vdom "root"
        set ip 172.16.209.2 255.255.255.0
        set allowaccess ping https ssh snmp http telnet fgfm
        set type emac-vlan
        set vrrp-virtual-mac enable
        config vrrp
            edit 1
                set vrip 172.16.209.111
                set priority 222
            next
        end
        set snmp-index 32
        set interface "port1"
    next
end
```

### Check the VRRP information on the FortiGates:

Because FortiGate B has a higher priority, it is the primary device and FortiGate A is the backup.

#### 1. FortiGate A:

```
# get router info vrrp
Interface: emac, primary IP address: 172.16.209.1
UseVMAC: 1, SoftSW: 0, EmacVlan: 1 BrPortIdx: 0, PromiscCount: 0
HA mode: primary (0:0:1) VRRP master number: 0
VRID: 1 version: 2
vrip: 172.16.209.111, priority: 200 (200,0), state: BACKUP
adv_interval: 1, preempt: 1, ignore_dft: 0 start_time: 3
master_adv_interval: 100, accept: 1
vrmac: 00:00:5e:00:01:01
vrdst:
vrgrp: 0
```

#### 2. FortiGate B:

```
# get router info vrrp
Interface: emac, primary IP address: 172.16.209.2
UseVMAC: 1, SoftSW: 0, EmacVlan: 1 BrPortIdx: 0, PromiscCount: 1
HA mode: primary (0:0:1) VRRP master number: 1
VRID: 1 version: 2
vrip: 172.16.209.111, priority: 222 (222,0), state: PRIMARY
adv_interval: 1, preempt: 1, ignore_dft: 0 start_time: 3
master_adv_interval: 100, accept: 1
vrmac: 00:00:5e:00:01:01
```



```
vrdst:  
vrgrp: 0
```

## SNMP

SNMP enables you to monitor hardware on your network. You can configure the hardware, such as the FortiGate SNMP agent, to report system information and send traps (alarms or event messages) to SNMP managers. SNMP traps alert you to events that happen, such as when a log disk is full or a virus is detected.

The FortiGate SNMP implementation is read-only. SNMP v1/v2c, and v3 compliant SNMP managers have read-only access to FortiGate system information through queries, and can receive trap messages from the FortiGate unit.

- [Interface access on page 2475](#)
- [MIB files on page 2476](#)
- [SNMP agent on page 2476](#)
- [SNMP v1/v2c communities on page 2477](#)
- [SNMP v3 users on page 2478](#)
- [Access control for SNMP on page 2480](#)
- [Important SNMP traps on page 2482](#)
- [SNMP traps and query for monitoring DHCP pool on page 2483](#)

### Interface access

Before a remote SNMP manager can connect to the FortiGate SNMP agent, you must configure one or more FortiGate interfaces to accept SNMP connections.

#### To configure a FortiGate interface to accept SNMP connections in the GUI:

1. Go to *Network > Interfaces*.
2. Edit the interface.
3. In the *Administrative Access* options, enable *SNMP*.
4. Click *OK*.

#### To configure a FortiGate interface to accept SNMP connections in the CLI:

```
config system interface  
  edit <interface>  
    append allowaccess snmp  
    set snmp-index <integer>  
    config ipv6  
      append ip6-allowaccess snmp  
    end  
  next  
end
```

## MIB files

The FortiGate SNMP agent supports Fortinet proprietary MIBs, as well as the parts of RFC 2665 and RFC 1213 that apply to FortiGate unit configuration.

Your SNMP manager may already include standard and private MIBs in a compiled database that is ready to use. You must add the Fortinet proprietary MIBs to this database to have access to Fortinet specific information.

| MIB file or RFC              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FORTINET-CORE-MIB.mib        | The Fortinet core MIB includes all system configuration and trap information that is common to all Fortinet products.<br>Your SNMP manager requires this information to monitor Fortinet device settings and receive traps from the FortiGate SNMP agent.                                                                                                                                                                                          |
| FORTINET-FORTIGATE-MIB.mib   | The FortiGate MIB includes all system configuration information and trap information that is specific to FortiGate units.<br>Your SNMP manager requires this information to monitor FortiGate settings and receive traps from the FortiGate SNMP agent.                                                                                                                                                                                            |
| RFC-1213 (MIB II)            | The FortiGate SNMP agent supports MIB II groups with the following exceptions: <ul style="list-style-type: none"><li>• No support for the EGP group from MIB II (RFC 1213, section 3.11 and 6.10).</li><li>• Protocol statistics returned for MIB II groups (IP/ICMP/TCP/UDP/etc.) do not accurately capture all Fortinet traffic activity. More accurate information can be obtained from the information reported by the Fortinet MIB.</li></ul> |
| RFC-2665 (Ethernet-like MIB) | The FortiGate SNMP agent supports Ethernet-like MIB information.<br>FortiGate SNMP does not support for the dot3Tests and dot3Errors groups.                                                                                                                                                                                                                                                                                                       |

### To download the MIB files:

1. Go to *System > SNMP*.
2. Click *Download FortiGate MIB File* and save the file to the management computer.
3. Click *Download Fortinet Core MIB File* and save the file to the management computer.

## SNMP agent

The SNMP agent sends SNMP traps originating on the FortiGate to an external monitoring SNMP manager defined in a SNMP community. The SNMP manager can monitor the FortiGate system to determine if it is operating properly, or if any critical events occurring.

The description, location, and contact information for this FortiGate system will be part of the information that the SNMP manager receives. This information is useful if the SNMP manager is monitoring many devices, and enables faster responses when the FortiGate system requires attention.

### To configure the SNMP agent in the GUI:

1. Go to *System > SNMP*.
2. Enable *SNMP Agent*.
3. Enter a description of the agent.

4. Enter the location of the FortiGate unit.
5. Enter a contact or administrator for the SNMP Agent or FortiGate unit.
6. Click *Apply*.

### To configure the SNMP agent in the CLI:

```
config system snmp sysinfo
    set status enable
    set description <string>
    set contact-info <string>
    set location <string>
end
```

## SNMP v1/v2c communities

An SNMP community is a grouping of equipment for network administration purposes. A single device can belong to multiple communities.

You must add an SNMP community to the FortiGate so that the SNMP manager can receive traps and system information. Up to three communities can be added.

### To create a n SNMP v1/v2c community in the GUI:

1. Go to *System > SNMP*.
2. In the *SNMP v1/v2c* table, click *Create New*.

3. Enter a *Community Name* and enable the community.
4. In the *Hosts* section, enter the *IP Address* and select the *Host Type* for each SNMP manager.
5. In the *Queries* section, enable or disable v1 and v2c queries, then enter the port numbers that the SNMP managers in this community use for them.

6. In the *Traps* section, enable or disable v1 and v2c traps, then enter the local and remote port numbers that the SNMP managers in this community use for them.
7. In the *SNMP Events* section, enable or disable the events that activate traps in this community.
8. Click *OK*.

**To create a n SNMP v1/v2c community in the CLI:**

```
config system snmp community
  edit 2
    set name <string>
    set status {enable | disable}
    config hosts
      edit <host_id>
        set ip <ip/mask>
        set source-ip <class_ip>
        set ha-direct {enable | disable}
        set host-type {any | query | trap}
      next
    end
    set query-v1-port <port_number>
    set query-v1-status {enable | disable}
    set query-v2c-port <port_number>
    set query-v2c-status {enable | disable}
    set trap-v1-lport <port_number>
    set trap-v1-rport <port_number>
    set trap-v1-status {enable | disable}
    set trap-v2c-lport <port_number>
    set trap-v2c-rport <port_number>
    set trap-v2c-status {enable | disable}
    set events <events>
  next
end
```

## SNMP v3 users

Authentication is used to ensure the identity of users. Privacy allows for encryption of SNMP v3 messages to ensure confidentiality of data. These protocols provide a higher level of security than is available in SNMP v1 and v2c, which use community strings for security. Both authentication and privacy are optional.

### To create a n SNMP v3 user in the GUI:

1. Go to *System > SNMP*.
2. In the *SNMP v3* table, click *Create New*.

3. Enter a *User Name* and enable the user.
4. In the *Security Level* section, configure the security level:
  - *No Authentication*: No authentication or encryption.
  - *Authentication*: Select the authentication algorithm and password.
  - *Authentication and Private*: Select both the authentication and encryption algorithms and password.
5. In the *Hosts* section, enter the *IP Address* for each SNMP manager.
6. In the *Queries* section, enable or disable queries, then enter the port number that the SNMP managers use for them.
7. In the *Traps* section, enable or disable traps, then enter the local and remote port numbers that the SNMP managers use for them.
8. In the *SNMP Events* section, enable or disable the events that activate traps.
9. Click *OK*.

### To create an SNMP v3 user in the CLI:

```
config system snmp user
  edit <user>
    set status {enable | disable}
    set trap-status {enable | disable}
    set trap-lport <port_number>
    set trap-rport <port_number>
    set queries {enable | disable}
    set query-port <port_number>
    set notify-hosts <class_ip> ... <class_ip>
    set source-ip <class_ip>
    set ha-direct {enable | disable}
    set events <events>
```

```

        set security-level {no-auth-no-priv | auth-no-priv | auth-priv}
        set auth-proto {md5 | sha | sha224 | sha256 | sha384 | sha512}
        set auth-pwd <password>
        set priv-proto {aes | des | aes256 | aes256cisco}
        set priv-pwd <password>
    next
end

```

## Access control for SNMP

Administrators can provide access control to SNMP users and communities based on restricting a MIB view to specific OID subtrees. They can also define access based on the VDOM. This allows multi-tenant FortiGate deployments to provide restricted access per VDOM.

- MIB view access control allows the SNMP clients to query specific OIDs that are filtered by the MIB view settings.
- VDOM access control allows the SNMP clients to query data from specific VDOMs that are filtered by the VDOM settings.

When access control is enabled, the users can only access the information that is allowed by the access control, and all other information is inaccessible. Administrators have granular control, and can easily restrict specific information based on access control.

### To configure MIB views:

```

config system snmp mib-view
    edit <name>
        set include <OIDs>
        set exclude <OIDs>
    next
end

```

|                |                                                                                           |
|----------------|-------------------------------------------------------------------------------------------|
| include <OIDs> | Enter the OID subtrees to be included in the view. A maximum of 16 subtrees can be added. |
| exclude <OIDs> | Enter the OID subtrees to be excluded in the view. A maximum of 64 subtrees can be added. |

### To configure access control based on MIB views and VDOMs for SNMP users and communities:

```

config system snmp user
    edit <user>
        set mib-view <view>
        set vdoms <vdoms>
    next
end

config system snmp community
    edit <community>
        set mib-view <view>
        set vdoms <vdoms>
    next
end

```

|                 |                                       |
|-----------------|---------------------------------------|
| mib-view <view> | Set the SNMP access control MIB view. |
| vdoms <vdoms>   | Set the SNMP access control VDOMs.    |

## Example

In this example, two MIB views are created and, with VDOMs, used to control access for SNMP users and communities.

### To configure access control for SNMP users and communities:

#### 1. Configure two MIB views:

```
config system snmp mib-view
  edit "view1"
    set include "1.3.6.1.2"
  next
  edit "view2"
    set include "1.3.6.1.2.1"
    set exclude "1.3.6.1.2.1.2.1" "1.3.6.1.2.1.4.31" "1.3.6.1.2.1.1.9.1"
  next
end
```

#### 2. Add the MIB view and VDOM restrictions to SNMP users:

```
config system snmp user
  edit "v3user"
    set mib-view "view1"
  next
  edit "v3user1"
    set vdom "vdom1"
  next
  edit "v3user2"
    set mib-view "view1"
    set vdoms "root" "vdom1"
  next
end
```

#### 3. Add the MIB view and VDOM restrictions to SNMP communities:

```
config system snmp community
  edit 1
    set name "REGR-SYS"
    set vdoms "vdom1"
  next
  edit 2
    set name "REGR-SYS1"
    set mib-view "view2"
  next
  edit 3
    set name "REGR-SYS2"
    set mib-view "view1"
    set vdoms "root" "vdom1"
  next
end
```

## Important SNMP traps

### Link Down and Link Up traps

This trap is sent when a FortiGate port either goes down or is brought up.

For example, the following traps are generated when the state of port34 is set to down using `set status down`, and then brought up using `set status up`:

```
NET-SNMP version 5.7.3 2019-01-31 14:11:48 10.1.100.1(via UDP: [10.1.100.1]:162->
[10.1.100.11]:162) TRAP, SNMP v1, community REGR-SYS SNMPv2-MIB::snmpTraps Link Down Trap
(0) Uptime: 0:14:44.95 IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER:
down(2) IF-MIB::ifOperStatus.42 = INTEGER: down(2) FORTINET-CORE-MIB::fnSysSerial.0 =
STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE

2019-01-31 14:11:48 <UNKNOWN> [UDP: [10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-
MIB::sysUpTimeInstance = Timeticks: (88495) 0:14:44.95 SNMPv2-MIB::snmpTrapOID.0 = OID: IF-
MIB::linkDown IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER: down(2)
IF-MIB::ifOperStatus.42 = INTEGER: down(2) FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE 2019-01-31 14:12:01
10.1.100.1(via UDP: [10.1.100.1]:162->[10.1.100.11]:162) TRAP, SNMP v1, community REGR-SYS
SNMPv2-MIB::snmpTraps Link Up Trap (0) Uptime: 0:14:57.98 IF-MIB::ifIndex.42 = INTEGER: 42
IF-MIB::ifAdminStatus.42 = INTEGER: up(1) IF-MIB::ifOperStatus.42 = INTEGER: up(1) FORTINET-
CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING:
FortiGate-140D-POE

2019-01-31 14:12:01 <UNKNOWN> [UDP: [10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-
MIB::sysUpTimeInstance = Timeticks: (89798) 0:14:57.98 SNMPv2-MIB::snmpTrapOID.0 = OID: IF-
MIB::linkUp IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER: up(1) IF-
MIB::ifOperStatus.42 = INTEGER: up(1) FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE
```

### fgFmTrapIfChange trap

This trap is sent when any changes are detected on the interface. The change can be very simple, such as giving an IPV4 address.

For example, the user has given the IP address of 1.2.3.4/24 to port 1 and the EMS Manager has detected the following trap:

```
DISMAN-EXPRESSION-MIB::sysUpTimeInstance = Timeticks: (7975058) 22:09:10.58 SNMPv2-
MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-MIB::fgFmTrapIfChange FORTINET-CORE-
MIB::fnSysSerial.0 = STRING: FG140P3G15800330 IF-MIB::ifName.45 = STRING: port1 FORTINET-
FORTIGATE-MIB::fgManIfIp.0 = IpAddress: 1.2.3.4 FORTINET-FORTIGATE-MIB::fgManIfMask.0 =
IpAddress: 255.255.255.0 FORTINET-FORTIGATE-MIB::fgManIfIp6.0 = STRING: 0:0:0:0:0:0:0:0
```

### entConfigChange trap

The change to the interface in the previous example has also triggered the *ConfChange Trap* which is sent along with the *fgFmTrapIfChange* trap:

```
2018-11-15 09:30:23 FGT_A [UDP: [172.16.200.1]:162->[172.16.200.55]:162]: DISMAN-EXPRESSION-
MIB::sysUpTimeInstance = Timeticks: (8035097) 22:19:10.97 SNMPv2-MIB::snmpTrapOID.0 = OID:
ENTITY-MIB::entConfigChange
```



## fgTrapDeviceNew trap

This trap is triggered when a new device, like a FortiSwitch, is connected to the FortiGate.

For example, the following scenario has given the device a new trap for adding FortiAP on a PoE interface a FortiGate 140D-POE. The trap has important information about the device name, device MAC address, and when it was last seen.

```
2018-11-15 11:17:43 UDP/IPv6: [2000:172:16:200::1]:162 [UDP/IPv6: [2000:172:16:200::1]:162]:
DISMAN-EXPRESSION-MIB::sysUpTimeInstance = Timeticks: (520817) 1:26:48.17 SNMPv2-
MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-MIB::fgTrapDeviceNew FORTINET-CORE-
MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FGT_A IF-
MIB::ifIndex.0 = INTEGER: 0 FORTINET-FORTIGATE-MIB::fgVdEntIndex.0 = INTEGER: 0 FORTINET-
FORTIGATE-MIB::fgDeviceCreated.0 = Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceLastSeen.0 =
Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceMacAddress.0 = STRING: 90:6c:ac:f9:97:a0
```

```
2018-11-15 11:17:43 FGT_A [UDP: [172.16.200.1]:162->[172.16.200.55]:162]: DISMAN-EXPRESSION-
MIB::sysUpTimeInstance = Timeticks: (520817) 1:26:48.17 SNMPv2-MIB::snmpTrapOID.0 = OID:
FORTINET-FORTIGATE-MIB::fgTrapDeviceNew FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FGT_A IF-MIB::ifIndex.0 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fgVdEntIndex.0 = INTEGER: 0 FORTINET-FORTIGATE-
MIB::fgDeviceCreated.0 = Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceLastSeen.0 = Gauge32: 5
FORTINET-FORTIGATE-MIB::fgDeviceMacAddress.0 = STRING: 90:6c:ac:f9:97:a0
```

## fgTrapAvOversize trap

The fgTrapAvOversize trap is generated when the antivirus scanner detects an oversized file:

```
019-01-31 13:22:04 10.1.100.1(via UDP: [10.1.100.1]:162->[10.1.100.11]:162) TRAP, SNMP v1,
community REGR-SYS FORTINET-FORTIGATE-MIB::fgt140P Enterprise Specific Trap (602) Uptime: 1
day, 3:41:10.31 FORTINET-CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-
MIB::sysName.0 = STRING: FortiGate-140D-POE 2019-01-31 13:22:29 <UNKNOWN> [UDP:
[10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-MIB::sysUpTimeInstance = Timeticks:
(9967031) 1 day, 3:41:10.31 SNMPv2-MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-
MIB::fgTrapAvOversize FORTINET-CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-
MIB::sysName.0 = STRING: FortiGate-140D-POE
```

## SNMP traps and query for monitoring DHCP pool

The SNMP DHCP event contains three traps and one query.

Traps are sent when:


- DHCP server IP pool usage reaches 90%
- DHCP server detect an IP address that is already in use
- DHCP client receives DHCP NAK

SNMP queries are accepted for DHCP lease usage information (OID = 1.3.6.1.4.1.12356.101.23). The query result is based on the leased out percentage.

**To enable the SNMP DHCP event in the GUI:**

1. Go to *System > SNMP*.
2. Click *Create New* in either the *SNMP v1/v2c* table or *SNMP v3* table, or edit an existing community or user.
3. Configure the settings as required.

4. In the *SNMP Events* list, enable *DHCP addresses at limit*.

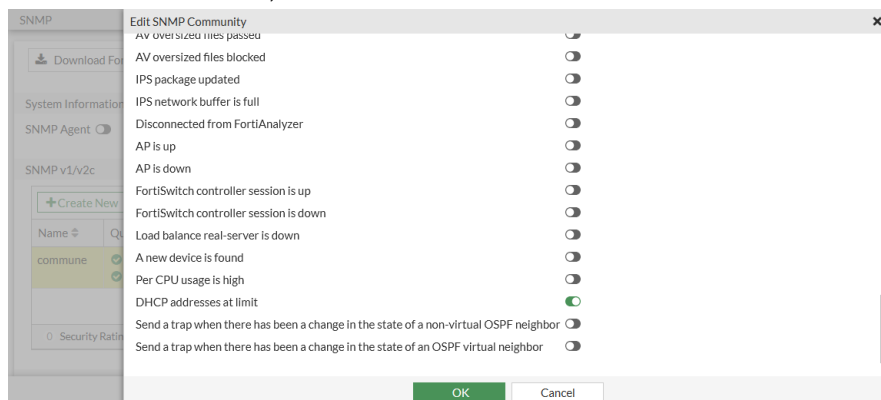

5. Click **OK**.

**To enable the SNMP DHCP event in the CLI:**

```
config system snmp community
  edit 1
    set name "REGR-SYS"
    config hosts
      edit 1
        set ip 10.1.100.11 255.255.255.255
      next
      edit 2
        set ip 172.16.200.55 255.255.255.255
      next
    end
    set events dhcp
  next
end

config system snmp user
  edit "1"
    set notify-hosts 172.10.1.0 172.20.1.0
    set events dhcp
    set security-level auth-priv
    set auth-proto sha384
    set auth-pwd *****
    set priv-proto aes256
    set priv-pwd *****
  next
end
```

## Replacement messages

FortiOS has replacement messages that are HTML and text files. These messages can be customized to meet user requirements. The content can be modified, and images can be added.

## Modifying replacement messages

The *Replacement Messages* page has two views. *Simple View* (the default view) shows the most commonly used replacement messages. *Extended View* shows the entire list and all replacement message categories.

### To modify a replacement message in the GUI:

1. Go to *System > Replacement Messages*.
2. Select a replacement message and click *Edit*.

If the message you want to edit is not visible, click *Extended View* in the upper right-hand corner of the top menu.

| Name                                                              | Description                                                        | Modified |
|-------------------------------------------------------------------|--------------------------------------------------------------------|----------|
| Sender Address Block Message                                      |                                                                    |          |
| replacement text for emails blocked due to blocked sender address |                                                                    |          |
| SSL-VPN                                                           |                                                                    |          |
| Hostcheck Error Message                                           | Replacement text for hostcheck error message                       |          |
| SSL-VPN Limit Page                                                | Replacement HTML for SSL-VPN connection limit exceeded page        |          |
| SSL-VPN Login Page                                                | Replacement HTML for SSL-VPN login page                            |          |
| SSL-VPN Portal Header                                             | Replacement HTML for SSL-VPN portal page header                    |          |
| SSL-VPN Provision User Email                                      | Replacement HTML for SSL-VPN provision user email template         |          |
| SSL-VPN Provision User SMS                                        | Replacement text for SSL-VPN provision user SMS template           |          |
| Traffic Quota                                                     |                                                                    |          |
| Traffic Quota Limit Exceeded Page                                 | Replacement HTML for traffic quota limit exceeded block page       |          |
| Web-proxy                                                         |                                                                    |          |
| Web-proxy Authentication Failed Page                              | Replacement HTML for web-proxy authentication failed page          |          |
| Web-proxy Authorization Group Query Failed Page                   | Replacement HTML for web-proxy authorization group query failed... |          |
| Web-proxy Block Page                                              | Replacement HTML for web-proxy block page                          |          |
| Web-proxy Challenge Page                                          | Replacement HTML for web-proxy authentication required block...    |          |
| Web-proxy HTTP Error Page                                         | Replacement HTML for web-proxy HTTP error page                     |          |
| Web-proxy IP Blackout Page                                        | Replacement HTML for web-proxy IP Blackout page                    |          |
| Web-proxy User Limit Page                                         | Replacement HTML for web-proxy user limit block page               |          |

3. Edit the HTML code.

The message is visible on the left alongside the HTML code on the right. The message view updates in real-time as you edit the content.

When adding a variable to the code, right-click and select *Insert Tag* or type `%%` to view a list of the available variables, or start typing the variable name then press *Enter* or *TAB* to auto-complete the variable name.

Message Format: text/html Message Size: 3.7 kB/32.8 kB

```

<div class="text-scrollable">
  <div class="text-centered">
    <div class="text-container">
      <div class="flex-container">
        <div class="flex-container.column">
          <div class="flex-direction.column">
            <div class="text">
              Traffic blocked because of
              exceeded session quota
            </div>
            <div class="text">
              Traffic has been blocked because the per IP shaper session quota
              has been exceeded. Please contact the system administrator.
            </div>
            <div class="text">
              Quota: 2097000
            </div>
          </div>
        </div>
      </div>
    </div>
  </div>
</div>

```

Restore Defaults Save Cancel

4. Click *Save*.



Click *Restore Defaults* to return to the original message and code base.

### To modify a replacement message in the CLI:

For example, to modify the *Traffic Quota Limit Exceeded Page* message:

```
config system replacemsg traffic-quota "per-ip-shaper-block"
  set buffer "<html>
<head>
  <title>
    Traffic Quota Control
  </title>
</head>
<body>
  <font size=2>
    <table width=\"100%\">
      <tr>
        <td bgcolor=#3300cc align=\"center\" colspan=2>
          <font color=#ffffff>
            <b>
              Traffic blocked because exceeded session quota
            </b>
          </font>
        </td>
      </tr>
    </table>
    <br>
    <br>
    Traffic blocked because it exceeded the per IP shaper session quota. Please contact
the system administrator.
    <br>
    %%QUOTA_INFO%%
    <br>
    <br>
    <hr>
  </font>
</body>
</html>"
  set header http
  set format html
end
```

## Replacement message images

Images can be added to replacement messages on:

- Disclaimer pages
- Login pages
- Declined disclaimer pages
- Login failed pages

- Login challenge pages
- Keepalive pages



The supported image formats are GIF, JPEG, TIFF, and PNG. The maximum file size supported is 24 KB.

## Adding images to replacement messages

To add images to replacement messages in the GUI:

1. Go to *System > Replacement Messages*.
2. In the top menu, click *Manage Images*.
3. Click *Create New*.
4. Enter a name for the image.
5. Click *Upload Image* and locate the file.

6. Click *OK*.

The file is now visible in the list.

Name	Image
Bulb	
Caution	
Fortinet Logo	
Fortinet Logo Grey	
Fortinet Logo White	
Tools	

7. Return to the replacement message list and edit a message.
8. Right-click in the message code where you want to add the image, and select *Insert Image*.
9. Select the image from the list then press *Enter*, or double-click on the image to add it to the message.
10. Click *Save*.

### To add images to replacement messages in the CLI:

#### 1. Add the image to the FortiGate:

```
config system replacemsg-image
    edit <image_name>
        set image-type {gif | jpg | tiff | png}
        set image-base64 <string>
    next
end
```

#### 2. Edit the replacement message, and include %%IMAGE:<image name>%% in the code to add the image.

## Replacement message groups

Replacement message groups allow users to customize replacement messages for individual policies and profiles.

There are two types of replacement message groups:

Type	Usage	Customizable categories
utm	Used with UTM settings in firewall policies.	<ul style="list-style-type: none"> <li>• admin</li> <li>• alertmail</li> <li>• custom-message</li> <li>• fortiguard-wf</li> <li>• ftp</li> <li>• http</li> <li>• icap</li> <li>• mail</li> <li>• nac-quar</li> <li>• spam</li> <li>• sslvpn</li> <li>• traffic-quota</li> <li>• utm</li> <li>• webproxy</li> </ul>
auth	Used with authentication pages in firewall policies.	<ul style="list-style-type: none"> <li>• auth</li> <li>• webproxy</li> </ul>

The messages added to a group do not need to be customized. The message body content, header type, and format will use the default values if not customized.

### To make replacement message groups visible in the GUI:

```
config system settings
    set gui-replacement-message-groups enable
end
```

In the following example, two replacement message groups are created. The UTM message group includes custom mail-related messages and is assigned to an email filter profile. The authentication message group has a custom authentication success message that is applied to a proxy-based firewall policy that has an assigned email filter profile.

## To create replacement message groups in the GUI:

1. Create the *Security* replacement message group:
  - a. Go to *System > Replacement Message Groups*.
  - b. Click *Create New*.
  - c. For *Name*, enter *newutm*.
  - d. In the *Comments* field, enter *UTM message group*.
  - e. For *Group Type*, select *Security*.
  - f. Click *OK*.

New Replacement Message Group

Name: newutm

Comments: UTM message group 17/255

Group Type: Security Authentication

FortiGate

FGDocs

Additional Information

API Preview

Edit in CLI

Documentation

Online Help

Video Tutorials

OK Cancel

2. Customize the replacement messages in the *newutm* group:
  - a. Go to *System > Replacement Message Groups*.
  - b. Edit the *newutm* group.
  - c. Select the *Partial Email Block Message*.

Partial Email Block Message (newutm)

Message Format: text/plain Message Size: 37 B/32.8 kB

Fragmented emails are blocked, sorry.

Fragmented emails are blocked, sorry.

Restore Defaults Save Cancel

- d. Edit the message and click *Save*.
  - e. Select the *ASE Block Message*.
  - f. Edit the message and click *Save*.
3. Create the *Authentication* replacement message group:
  - a. Go to *System > Replacement Message Groups*.
  - b. Click *Create New*.
  - c. For *Name*, enter *newauth*.
  - d. In the *Comments* field, enter *Authentication message group*.
  - e. For *Group Type*, select *Authentication*.
  - f. Click *OK*.

New Replacement Message Group

Name: newauth

Comments: Authentication message group 28/255

Group Type: Security Authentication

FortiGate

FGDocs

Additional Information

API Preview

Edit in CLI

Documentation

Online Help

Video Tutorials

OK Cancel

**4. Apply the *newutm* replacement message group to an email filter profile in the CLI:**

```
config emailfilter profile
  edit "newmsgs"
    set replacemsg-group "newutm"
  next
end
```

**5. Apply the *newauth* replacement message group and the email filter profile to a firewall policy in the CLI:**

```
config firewall policy
  edit 1
    ...
    set replacemsg-override-group "newauth"
    set inspection-mode proxy
    set emailfilter-profile "newmsgs"
    ...
  next
end
```

**To create replacement message groups in the CLI:****1. Create the replacement message groups:**

```
config system replacemsg-group
  edit "newutm"
    set comment "UTM message group"
    set group-type utm
    config mail
      edit "partial"
        set buffer "Fragmented emails are blocked, sorry."
      next
    end
    config spam
      edit "smtp-spam-ase"
        set buffer "This message has been blocked because ASE reports it as
spam. You\'re welcome."
      next
    end
  next
  edit "newauth"
    set comment 'Authentication message group'
    set group-type auth
    config auth
      edit "auth-success-msg"
        set buffer "Welcome to the firewall. Your authentication has been
accepted, please reconnect."
      next
    end
  next
end
```

**2. Apply the message group to the email filter:**

```
config emailfilter profile
  edit "newmsgs"
    set replacemsg-group "newutm"
```



```
    next
end
```

**3. Apply the email filter and message group to the policy:**

```
config firewall policy
    edit 1
        ...
        set replacemsg-override-group "newauth"
        set inspection-mode proxy
        set emailfilter-profile "newmsgs"
        ...
    next
end
```

## FortiGuard

FortiGuard services comprise of signature packages and querying services that provide content, web and device security. It is delivered via various types of FortiGuard servers that are part of the FortiGuard Distribution Network (FDN).

FortiGuard service subscriptions can be purchased and registered to your FortiGate unit. The FortiGate must be connected to the Internet in order to automatically connect to the FDN to validate the license and download FDN updates or perform real-time queries.

To view FDN support contract information, go to *System > FortiGuard*. The *License Information* table shows the status of your FortiGate's entitlements and breaks down the status of each service.


The following topics contain more information:

- [Anycast on page 2492](#)
- [Connection and OCSP stapling on page 2492](#)
- [Configuring FortiGuard updates on page 2494](#)
- [Configuring a proxy server for FortiGuard updates on page 2494](#)
- [Manual updates on page 2495](#)
- [Automatic updates on page 2496](#)
- [Scheduled updates on page 2497](#)
- [Sending malware statistics to FortiGuard on page 2498](#)
- [Update server location on page 2499](#)
- [Filtering on page 2500](#)
- [Online security tools on page 2501](#)
- [Anycast and unicast services on page 2501](#)
- [Using FortiManager as a local FortiGuard server on page 2502](#)
- [Cloud service communication statistics on page 2503](#)
- [IoT detection service on page 2505](#)
- [FortiAP query to FortiGuard IoT service to determine device details on page 2508](#)
- [FortiGate Cloud / FDN communication through an explicit proxy on page 2508](#)
- [FDS-only ISDB package in firmware images on page 2510](#)
- [Licensing in air-gap environments on page 2511](#)
- [License expiration on page 2513](#)

## Anycast

FortiGuard servers use Anycast addresses in order to optimize and distribute traffic across many servers. Anycast is the default access mode for FortiGates when connecting to FortiGuard which by default utilizes HTTPS and port 443.

Each type of FortiGuard servers and services have a FortiGuard domain name that resolves to a single Anycast IP address. Regardless of where the FortiGate is located, the resolution is still the same. Fortinet maintains the network in the background to ensure routes to the FortiGuard servers are optimized. In the below diagram, several servers have the same Anycast IP, but the FortiGate will connect to the one with the least hops.

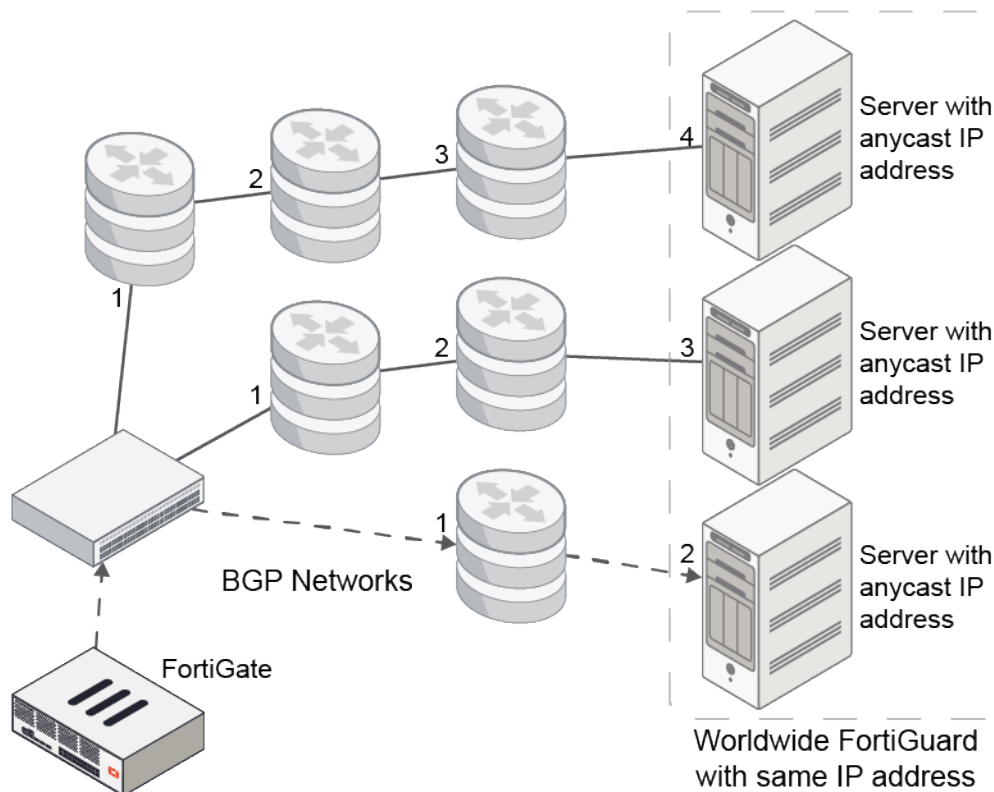


## Connection and OCSP stapling

When the FortiGate connects to a FortiGuard server, it is important for it to validate the server is indeed a real FortiGuard server. Hence, FortiGuard servers provide the following security:

- The domain name of each FortiGuard service is the common name in that service's certificate, which is signed by a third-party intermediate CA.
- The FortiGuard server also applies Online Certificate Status Protocol (OCSP) stapling check, in which it attaches a time-stamped OCSP status of the server certificate from the OCSP server to the TLS response.

This ensures FortiGate can validate the FortiGuard server certificate efficiently during the TLS handshake.

The following illustrates the connection process:

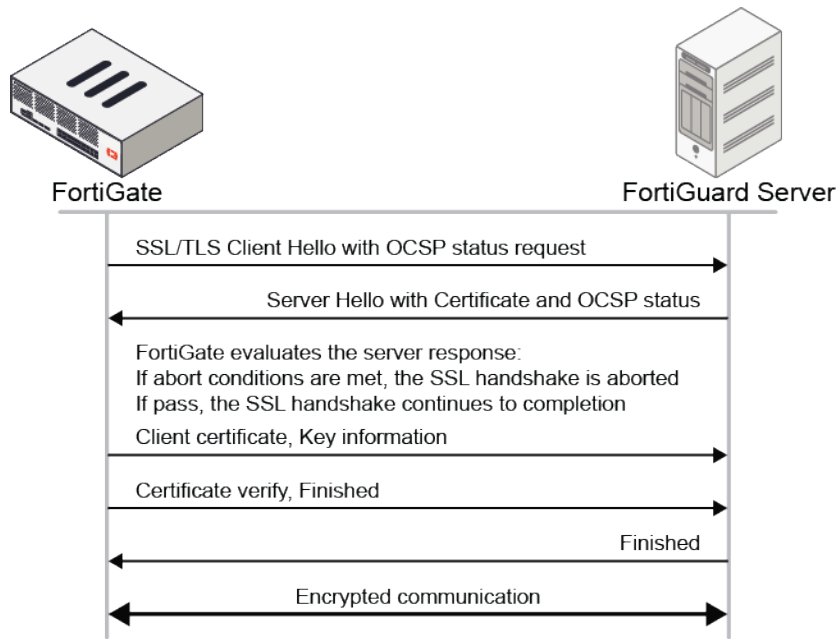

FortiGate will only complete the TLS handshake with an anycast server when abort conditions are not met. Abort conditions include:

- The CN in the server's certificate does not match the domain name resolved from the DNS.
- The OCSP status is revoked or unknown.
- The issuer-CA is revoked by the root-CA.

To configure the anycast FortiGuard access mode:

```
config system fortiguard
    set fortiguard-anycast enable
end
```

If FortiGuard is not reachable via Anycast, choose between the following options to work around this issue:

**1. Switch to other Anycast servers:**

```
config system fortiguard
    set fortiguard-anycast enable
    set fortiguard-anycast-source aws
end
```

**2. Disable Anycast and use HTTPS:**

```
config system fortiguard
    set fortiguard-anycast disable
    set protocol https
    set port 8888
end
```

**3. Disable Anycast and use UDP:**

```
config system fortiguard
    set fortiguard-anycast disable
    set protocol udp
    set port 53
end
```

## Configuring FortiGuard updates

To configure FortiGuard updates:

1. Go to *System > FortiGuard*
2. Scroll down to the *FortiGuard Updates* section.
3. Configure the options for connecting and downloading definition files:

### Immediately download updates

The option can be enabled on 2U and larger hardware models when the FortiGuard servers are connected in anycast mode.

The FortiGate forms a secure, persistent connection with FortiGuard to get notifications of new updates through an HTTPS connection. The FortiGate uses the `fds_notify` daemon to wait for the notification, then makes another connection to the FortiGuard server to download the updates.

### Scheduled Updates

Enable to schedule updates to be sent to the FortiGate at the specified time or automatically. See [Scheduled updates on page 2497](#) and [Automatic updates on page 2496](#).

### Improve IPS quality

Enable to send information to the FortiGuard servers when an attack occurs. This can help keep the FortiGuard database current as attacks evolve, and improve IPS signatures.

### Use extended IPS signature package

Enable to use the extended IPS database, that includes protection from legacy attacks, along with the regular IPS database that protects against the latest common and in-the-wild attacks.

### AntiVirus PUP/PUA

Enable antivirus grayware checks for potentially unwanted applications.

### Update server location

The FortiGuard update server location. See [Update server location on page 2499](#) for details.

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiCloud Log	715.61 kB
FortiGuard.com	3.10 MB
FortiGuard Download	57.22 MB
FortiGuard Query	51.16 kB
FortiGate Cloud Sandbox	0 B
OCVPN	0 B
SDNS	0 B
FortiToken Registration	0 B
SMS Service	0 B

4. Click *Apply*.

## Configuring a proxy server for FortiGuard updates

You can configure FortiOS to use a proxy server to connect to the FortiGuard Distribution Network (FDN).



Proxy tunneling is supported only for registration, AV, and IPS updates. For FortiGate virtual machines, proxy tunneling can also be used for license validation. For web filtering or spam filtering, UDP protocol is used on ports 53 or 8888. UDP protocol traffic cannot be directed over a proxy server, even if you are using versions of FortiOS that support web filtering over port 443.

Consider the following before configuring FortiOS to use a proxy server to connect to FDN:

- FortiOS connects to the proxy server using the HTTP CONNECT method. For information about the HTTP CONNECT method, see [RFC 2616](#).
- The proxy server must not inspect the HTTPS traffic used for FortiOS communication.
- FortiOS sends to the proxy server an HTTP CONNECT request that specifies the IP address and port required for the FDN connection. Authentication information is optional for the request.
- FortiOS or the proxy server must be configured to use DNS servers that resolve the addresses of FDN servers to support AV and IPS updates.
- The proxy server establishes the connection to FDN and passes information between FortiOS and FDN.

Use the following syntax to configure a proxy server in the CLI:

```
config system autoupdate tunneling
    set address <proxy_address>
    set port <proxy_port>
    set username <username>
    set password <password>
    set status {enable | disable}
end
```

In the following example, a proxy server with IP address 10.1.1.1 is configured to listen on port TCP/3128 without authentication.

#### To configure a proxy server:

```
config system autoupdate tunneling
    set address 10.1.1.1
    set port 3128
    set status enable
end
```

In a closed network without direct internet connection for web filtering or spam filtering, you can use FortiManager as a FortiGuard server. FortiManager supports proxy for both updates and rating, and FortiOS retrieves its updates and ratings through FortiManager. See [Using FortiManager as a local FortiGuard server on page 2502](#).


## Manual updates

When needed, FortiGuard Distribution Network (FDN) updates can be manually uploaded.

#### To manually update the signature definitions files:

1. Log in to the [Fortinet Support](#) website.
2. Go to *Support > Service Updates*.
3. Select your *OS Version* from the dropdown list.

4. Locate your device in the table, and download the signature definitions files.
5. On the FortiGate, go to *System > FortiGuard*.
6. In the *License Information* table, locate and expand the definitions that you are updating.
7. From the *Actions* menu in the rightmost column, select *Upgrade Database*.
8. In the pane that opens, click *Upload*, locate the downloaded definitions file on your computer, then click *Open*. The download may take a few minutes to complete.

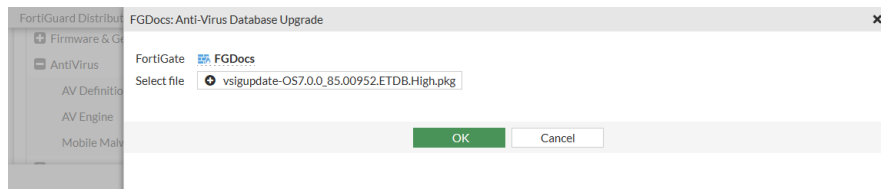

9. Click *OK*.

## AV and IPS manual updates

### To execute the update:

```
# execute restore ips tftp nids-720-19.261.pkg 172.16.200.55
```

### To verify the manual AV and IPS package updates:

```
# diagnose debug app updated -1
# diagnose debug enable
```



Security levels are pre-configured on the BIOS. See [BIOS-level signature and file integrity checking on page 2549](#) and [Real-time file system integrity checking on page 2553](#) for more information.


## Automatic updates

The default auto-update schedule for FortiGuard packages is automatic. The update interval is calculated based on the model and percentage of valid subscriptions, within one hour.

For example, if a FortiGate 501E has 78% valid contracts, then based on this device model, the update schedule is calculated to be every 10 minutes. If you verify the system event logs (ID 0100041000), they are generated approximately every 10 minutes.

### To configure automatic updates in the GUI:

1. Go to *System > FortiGuard*
2. In the *FortiGuard Updates* section, enable *Scheduled Updates* and select *Automatic*.

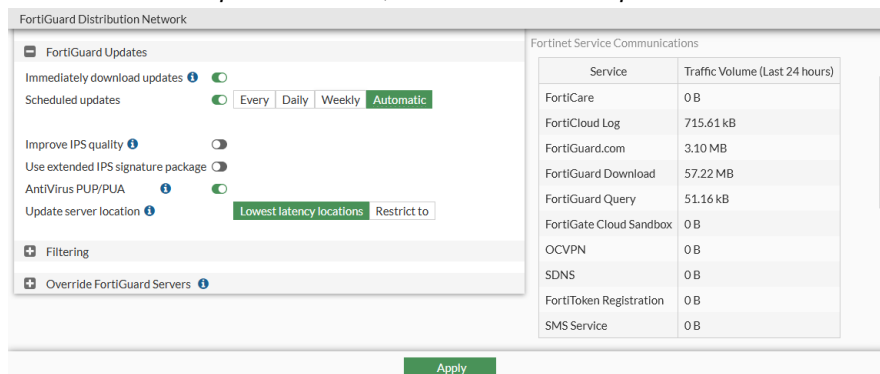

3. Click *Apply*.

### To configure scheduled updates in the CLI:

```
config system autoupdate schedule
    set status enable
    set frequency automatic
end
```

## Scheduled updates

Scheduling updates ensures that the virus and IPS definitions are downloaded to your FortiGate on a regular basis.

Updating definitions can cause a brief disruption in traffic that is currently being scanned while the FortiGate unit applies the new signature database. Updates should be scheduled during off-peak hours when network usage is at a minimum to ensure that network activity will not be affected by downloading the definitions files.



A schedule of once a week means any urgent updates will not be pushed until the scheduled time. If an urgent update is required, click the *Update Licenses & Definitions Now* button to manually update the definitions.

### To configure scheduled updates in the GUI:

1. Go to *System > FortiGuard*
2. In the *FortiGuard Updates* section, enable *Scheduled Updates*.

### 3. Configure the update schedule:

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiCloud Log	715.61 kB
FortiGuard.com	3.10 MB
FortiGuard Download	57.22 MB
FortiGuard Query	51.16 kB
FortiGate Cloud Sandbox	0 B
OCVPN	0 B
SDNS	0 B
FortiToken Registration	0 B
SMS Service	0 B

### 4. Click *Apply*.

### To configure scheduled updates in the CLI:

```
config system autoupdate schedule
    set status enable
    set frequency {every | daily | weekly}
    set time <hh:mm>
    set day <day_of_week>
end
```

## Sending malware statistics to FortiGuard

FortiGate devices periodically send encrypted antivirus, IPS, botnet IP list, and application control statistics to FortiGuard. Included with these data is the IP address and serial number of the FortiGate, and the country that it is in. This information is never shared with external parties, [Fortinet Privacy Policy](#).

The malware statistics are used to improve various aspects of FortiGate malware protection. For example, antivirus data allow FortiGuard to determine what viruses are currently active. Signatures for those viruses are kept in the Active AV Signature Database that is used by multiple Fortinet products. Inactive virus signatures are moved to the Extended AV Signature Database (see [Configuring FortiGuard updates on page 2494](#)). When events for inactive viruses start appearing in the malware data, the signatures are moved back into the AV Signature Database.

The FortiGate and FortiGuard servers go through a 2-way SSL/TLS 1.2 authentication before any data is transmitted. The certificates used in this process must be trusted by each other and signed by the Fortinet CA server.

The FortiGate only accepts data from authorized FortiGuard servers. Fortinet products use DNS to find FortiGuard servers and periodically update their FortiGate server list. All other servers are provided by a list that is updated through the encrypted channel.

Malware statistics are accumulated and sent every 60 minutes by default.

To configure sharing this information, use the following CLI command:

```
config system global
    set fds-statistics {enable | disable}
    set fds-statistics-period <minutes>
end
```





The submission of malware data is in accordance with the [Fortinet Privacy Policy](#).

There is no sensitive or personal information included in these submissions. Only malware statistics are sent.

Fortinet uses the malware statistics collected in this manner to improve the performance of the FortiGate services and to display statistics on the [Fortinet Support](#) website for customers registered FortiGate devices.

Fortinet may also publish or share statistics or results derived from this malware data with various audiences. The malware statistics shared in this way do not include any customer data.

## Update server location

Administrators can specify the location of the FortiGuard update server used by FortiGate. You can set the location to only servers in the USA, only servers in the European Union (EU), or to servers with the lowest latency.

In EU locations, it can be required that certain traffic is only handled by servers located in the EU. By setting the update server location to EU only, the FortiGate will use EU domains to resolve to EU servers for FortiGuard traffic to update, URL rating, and IoT servers.


Server location	Anycast domain name	Non-Anycast FQDN addresses
EU only	euupdate.fortinet.net euguardservice.fortinet.net	
US only	usupdate.fortinet.net usguardservice.fortinet.net	usupdate.fortiguard.net UDP: usservice.fortiguard.net HTTPS: ussecurewf.fortiguard.net
Lowest latency (automatic)	globalupdate.fortinet.net globalguardservice.fortinet.net	update.fortiguard.net UDP: service.fortiguard.net HTTPS: securewf.fortiguard.net

On hardware FortiGate devices, the default is *Lowest latency locations*. On VM devices, the default is *US only*.

### To configure the update server location in the GUI:

1. Go to *System > FortiGuard*
2. In the *FortiGuard Updates* section, set *Update server location* to *Lowest latency locations* or *Restrict to*.

3. If *Restrict to* is selected, choose *US only* or *EU only*.

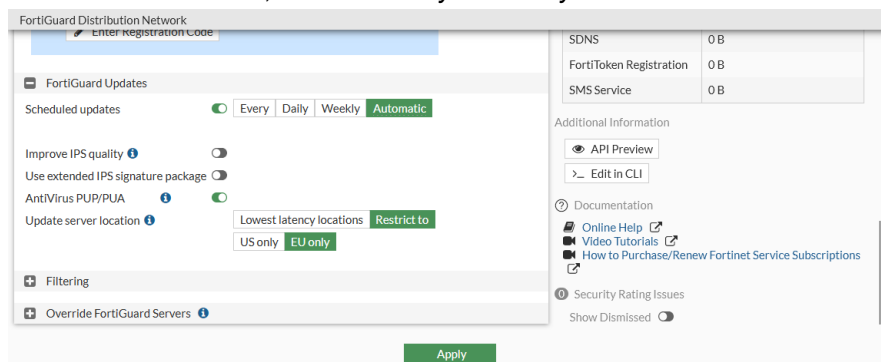

4. Click *Apply*.

#### To configure the update server location in the CLI:

```
config system fortiguard
    set update-server-location {automatic | usa | eu}
end
```

## Filtering

Web filtering is used to block access to harmful, inappropriate, and dangerous web sites (see [FortiGuard filter on page 1320](#)).

Email filtering is used to detect and block spam messages (see [FortiGuard-based filters on page 1454](#)).

#### To configure filtering in the GUI:

1. Go to *System > FortiGuard*
2. Scroll down to the *Filtering* section.
3. Configure the settings as needed:

<b>Web Filter Cache</b>	Enable/disable web filter cache, and set the amount of time that the FortiGate will store a blocked IP address or URL locally. After the time expires, the FortiGate contacts the FDN to verify the address.
<b>Email Filter Cache</b>	Enable/disable email filter cache, and set the amount of time that the FortiGate will store an email address locally.
<b>FortiGuard filtering services</b>	The protocol and port used to contact the FortiGuard servers. These options can be changed in the CLI.
<b>Filtering service availability</b>	The status of the filtering service. Click <i>Test Connectivity</i> if the filtering service is not available.
<b>Request re-evaluation of a URL's category</b>	Click to re-evaluate a URL category rating on the FortiGuard web filter service.

4. Click *Apply*.

### To configure filtering in the CLI:

```
config system fortiguard
    set protocol {https | udp}
    set port {443 | 53 | 8888}
    set antispam-force-off {enable | disable}
    set antispam-cache {enable | disable}
    set antispam-cache-ttl <integer>
    set antispam-cache-mpercent <percent>
    set antispam-timeout <integer>
    set webfilter-force-off {enable | disable}
    set webfilter-cache {enable | disable}
    set webfilter-cache-ttl <integer>
    set webfilter-timeout <integer>
end
```



When anycast is enabled (by default) the protocol is HTTPS and the port is 443.

## Online security tools

FortiGuard Labs provides a number of online security tools, including but not limited to:

- **URL lookup**

Enter a website address to see if it has been rated and what category and classification it is filed as. If you find a site that has been wrongly categorized, use this page to request that the site be re-evaluated:

<https://www.fortiguard.com/webfilter>

- **Threat Encyclopedia**

Browse FortiGuard Labs extensive encyclopedia of threats. Search for viruses, botnet C&C, IPS, endpoint vulnerabilities, and mobile malware: <https://www.fortiguard.com/encyclopedia>

- **Application Control**

Browse FortiGuard Labs extensive encyclopedia of applications: <https://www.fortiguard.com/appcontrol>

## Anycast and unicast services

The following services are accessed by FortiGate:

Service	Non-Anycast FQDN addresses	Anycast Domain name
FortiGuard Object download	update.fortiguard.net	globalupdate.fortinet.net
Querying service (web-filtering, anti-spam ratings) over HTTPS	securewf.fortiguard.net	globalguardservice.fortinet.net
Querying service (web-filtering, anti-spam ratings) over UDP	service.fortiguard.net	Service only in Unicast
Device info Collection	Service only in Anycast	globaldevcollect.fortinet.net
Device info Query	Service only in Anycast	globaldevquery.fortinet.net
FortiGate Cloud logging	logctrl1.fortinet.com	globallogctrl.fortinet.net
FortiGate Cloud management	mgrctrl1.fortinet.com	globalmgrctrl.fortinet.net
FortiGate Cloud messaging	msgctrl1.fortinet.com	globalmsgctrl.fortinet.net
FortiGate Cloud sandbox	aptctrl1.fortinet.com	globalaptctrl.fortinet.net
Product API used by OCVPN registration and GUI icon download	productapi.fortinet.net	globalproductapi.fortinet.net
FortiCare registration	directregistration.fortinet.com	globalregistration.fortinet.net
Secure DNS	sdns.fortinet.net	globalsdns.fortinet.net
FortiCloud FortiClient	forticlient.fortinet.net	globalfctupdate.fortinet.net
FortiMobile Tokens	directregistration.fortinet.com	globalftm.fortinet.net
EMS cloud	forticlient-emsproxy.forticloud.com	Service only in Unicast
DDNS	ddns.fortinet.net	globalddns.fortinet.net
GeoIP	gip.fortinet.net	globalgip.fortinet.net
IP blacklist	ipbl.fortinet.net	N/A

## Using FortiManager as a local FortiGuard server

FortiManager can provide a local FortiGuard server with port 443 access.

Anycast FortiGuard settings force the rating process to use port 443, even with an override server. Using a unique address in the same subnet as the FortiManager access IP address, the FortiManager can provide local FortiGuard updates and rating access with a dedicated IP address and port 443.

### To use a FortiManager as a local FortiGuard server in the GUI:

1. Go to *System > FortiGuard*
2. In the *Override FortiGuard Servers* table, click *Create New*. The *Create New Override FortiGuard Server* pane opens.
3. Select the server address type: *IPv4*, *IPv6*, or *FQDN*.
4. Enter the FortiManager address in the *Address* field.
5. Select the type of server: *AntiVirus & IPS Updates*, *Filtering*, or *Both*.

6. Click **OK**.

7. Click **Create New** again to add a second override FortiManager for filtering.

8. Click **OK**, then click **Apply**.

### To use a FortiManager as a local FortiGuard server in the CLI:

```
config system central-management
  set type fortimanager
  set fmg "172.18.37.148"
  config server-list
    edit 1
      set server-type update
      set server-address 172.18.37.150
    next
    edit 2
      set server-type rating
      set server-address 172.18.37.149
    next
  end
  set fmg-update-port 443
  set include-default-servers enable
end
```

When `fmg-update-port` is set to 443, the update process will use port 443 to connect to the override update server, which is the local FortiGuard server in the FortiManager. If this is not set, the update process will use port 8890, and the server address setting has to be the FortiManager access IP address. Override FortiGuard services come from the server list that is the local FortiGuard server in the FortiManager, and use the traditional, non-OCSP TLS handshake. If override servers in the FortiManager are not available, the default FortiGuard servers are connected, and the anycast OCSP TLS handshake is used.

## Cloud service communication statistics

Fortinet service communications statistics are displayed on the *FortiGuard* page. The statistics correspond with the output from `diagnose sys service-communication`. The traffic volume values in the GUI are the sums of data from the last 24 hours.

## To view Fortinet service communications statistics:

### 1. Go to *System > FortiGuard*.

The *Fortinet Service Communications* statistics are displayed on the right side of the screen:

FortiGuard Distribution Network

**License Information**

Entitlement	Status	Actions
FortiCare Support	Registered	
Virtual Machine	Valid (Expiration Date: 2022/07/26)	FortiGate VM License
Firmware & General Updates	Licensed (Expiration Date: 2022/07/26)	
Intrusion Prevention	Licensed (Expiration Date: 2022/07/26)	
AntiVirus	Licensed (Expiration Date: 2022/07/26)	
Web Filtering	Licensed (Expiration Date: 2022/07/26)	
Outbreak Prevention	Licensed (Expiration Date: 2022/07/26)	
SD-WAN Network Monitor	Licensed (Expiration Date: 2022/07/26)	
Security Rating	Licensed (Expiration Date: 2022/07/26)	
Industrial DB	Licensed (Expiration Date: 2022/07/26)	
FortiPAM	Licensed (Expiration Date: 2022/07/26)	
IoT Detection Service	Licensed (Expiration Date: 2022/07/26)	
FortiGate Cloud	Not Activated	Activate

FortiCare support contracts can be activated here and applied directly to this FortiGate.  
Enter Registration Code

**FortiGuard Updates**

Next Update: 2022/04/07 13:13:00  
Update Licenses & Definitions Now

**Manual Update**

Upload License File

**Fortinet Service Communications**

Service	Traffic Volume (Last 24 hours)
FortiCare	0B
FortiGate Cloud Log	0B
FortiGuard.com	2.16 MB
FortiGuard Download	42.30 MB
FortiGuard Query	14.85 kB
FortiGate Cloud Sandbox	0B
OCVPN	0B
SDNS	0B
FortiToken Registration	0B
SMS Service	0B

**Additional Information**

API Preview  
Edit in CLI  
Local Out Setting  
Documentation

Apply

### 2. Enter the following CLI command:

```
# diagnose sys service-communication
FortiCare:
The last 1 hour(in bytes):  0 0 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0
The last 7 days(in bytes):  0 0 0 0 0 0 0
FortiGuard Download:
The last 1 hour(in bytes):  0 0 0 336 1992 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0 2328 6752 4450632 0 33696 0 5666528 0 49712 0 28840 0
29840 0 4185832 0 31488 0 76424 0 4226808 0 173880
The last 7 days(in bytes):  14454160 14985496 9532184 0 0 0 0
FortiGuard Query:
The last 1 hour(in bytes):  0 0 0 372 1107 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0 1479 4828 929 0 929 0 929 0 929 0 929 0 1858 0 929
0 1858 0 1858 0 929
The last 7 days(in bytes):  13739 15793 13624 0 0 0 0
FortiCloud Log:
The last 1 hour(in bytes):  0 343 563 899 1014 405 0 0 0 570 405 0
The last 24 hours(in bytes): 0 4535 6004 2184 684 1906 1938 680 861 1933 685 1020 687
1772 693 978 1023 1574 1195 697 1035 1323 1020 678
The last 7 days(in bytes):  26560 26136 0 0 0 0 0
FortiSandbox Cloud:
The last 1 hour(in bytes):  0 0 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0
The last 7 days(in bytes):  0 0 0 0 0 0 0
FortiGuard.com:
The last 1 hour(in bytes):  0 0 122162 123544 122162 244324 0 0 0 0 0 0
The last 24 hours(in bytes): 0 612192 532887 1939 1143 122162 44924 5039 0 125091 43096
1939 0 123305 43090 1939 0 123305 43096 1939 0 122162 42478 4930
The last 7 days(in bytes):  1658746 1347340 1421746 0 0 0 0
```

```
OCVPN Service:
The last 1 hour(in bytes):  1044 9382 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 1044 9382 0
The last 7 days(in bytes):  10426 0 0 0 0 0 0
SDNS Service:
The last 1 hour(in bytes):  0 0 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0
The last 7 days(in bytes):  0 0 0 0 0 0 0
FortiToken Registration:
The last 1 hour(in bytes):  0 0 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0
The last 7 days(in bytes):  0 0 0 0 0 0 0
SMS Service:
The last 1 hour(in bytes):  0 0 0 0 0 0 0 0 0 0 0 0
The last 24 hours(in bytes): 0
The last 7 days(in bytes):  0 0 0 0 0 0 0
```

## IoT detection service

Internet of Things (IoT) detection is a subscription service that allows FortiGate to detect unknown devices in FortiGuard that are not detected by the local Device Database (CIDB). When the service is activated, FortiGate can send device information to the FortiGuard collection server. When a new device is detected, FortiGate queries the results from the FortiGuard query for more information about the device.

This feature requires an IoT Detection Service license.

### FortiGate device requirements:


The FortiGate device must be:

- Registered with FortiCare
- Connected to an anycast FortiGuard server

### How the service works:

1. Enable Device Detection on an interface.
2. FortiGate uses the interface to detect device traffic flow.
3. Upon detecting traffic from an unknown device, FortiGate sends the device data to the FortiGuard collection server.
4. The collection server returns data about the new device to the FortiGuard query server.
5. If the device signature does not appear in the local Device Database (CIDB) or some fields are not complete, FortiGate queries FortiGuard for more information about the device.

To view the latest device information in the GUI, go to *Dashboard > Users & Devices* and expand the *Device Inventory* widget.

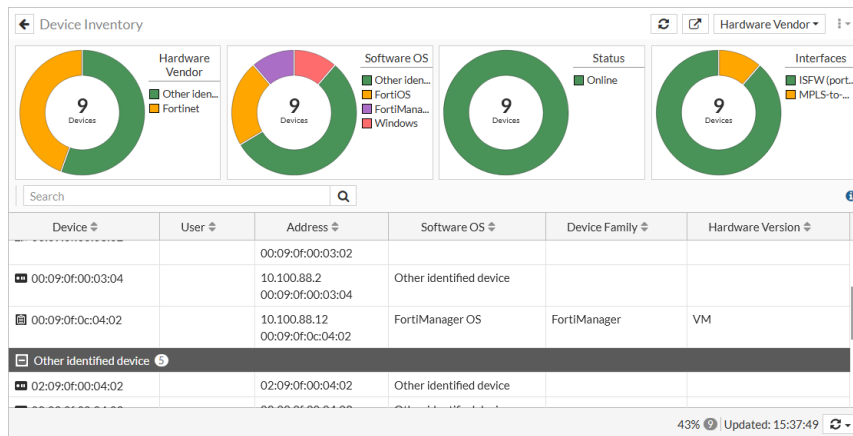

### To debug the daemon in the CLI:

1. Disable the local device database in order to force all queries to go to FortiGuard.

```
# diagnose cid sigs disable
```

2. Enable iotd debugs:

```
# diagnose debug application iotd -1
# diagnose debug enable
```

FortiGate sends the device data to the FortiGuard collection server:

```
# [iotd] rcv request from caller size:61
[iotd] service:collect hostname: ip: fd:-1 request tlv_len:41
[iotd] txt(.....y...w.....Jasons-iPhone6....579=23..)
[iotd] hex
(02010007017903060f77fc0203000e4a61736f6e732d6950686f6e6536020400083537393d32330cff)
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip: fd:-1 got server
hostname
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip:173.243.138.29 fd:-1
got server ip
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip:173.243.138.29 fd:13
socket created
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip:173.243.138.29 fd:13
connecting
[iotd] fd:13 monitor event:pollout
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip:173.243.138.29 fd:13
build req packet
[iotd] service:collect hostname:globaldevcollect.fortinet.net ip:173.243.138.29 fd:13
collect resp:1(pending)
```

The FortiGuard collection server returns new device data to the FortiGuard query server:

```
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 got
query resp
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 id:0
total_len:48 header_len:16 tlv_len:32 confidence:100 mac:f8:87:f1:1f:ab:95
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:32 type:1 len:6
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 got
tlv category:'Mobile'
```



```
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:24 type:2 len:6
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 got
tlv sub_category:'Mobile'
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:16 type:3 len:5
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 got
tlv vendor:'Apple'
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:9 type:4 len:0
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:7 type:5 len:3
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 got
tlv os:'iOS'
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17
remaining_len:2 type:6 len:0
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 send
query response to caller size:48
[iotd] txt(.....d0 ...Mobile..Mobile..Apple....iOS..)
[iotd] hex
(f887f11fab950000000000006430200001064d6f62696c6502064d6f62696c6503054170706c65040005036
94f530600)
[iotd] service:query hostname:globaldevquery.fortinet.net ip:173.243.140.16 fd:17 read
resp:0(good)
```

### 3. The query returns the device information including the information source (src fortiguard).

```
# diagnose user device list
vd root/0 f8:87:f1:1f:ab:95 gen 26 req OUA/34
created 503s gen 23 seen 102s lan gen 7
ip 192.168.1.110 src arp
hardware vendor 'Apple' src fortiguard id 0 weight 100
type 'Mobile' src fortiguard id 0 weight 100
family 'Mobile' src fortiguard id 0 weight 100
os 'iOS' src fortiguard id 0 weight 100
host 'Jasons-iPhone6' src dhcp
```

## Using FortiManager as an override server for IoT query services

FortiGate can use FortiManager as an override server for IoT query services. The FortiManager must be running 7.2.1 or later.

All IoT daemon query and collected data can be sent to a FortiManager, instead of directly to FortiGuard. This is useful when there are strict policies controlling the kind of traffic that can go to the internet.

### To send all IoT daemon query and collected data to a FortiManager:

```
config system central-management
  config server-list
    edit 1
      set server-type iot-query iot-collect
      set server-address <x.x.x.x>
    next
  end
end
```

```
server-type iot-query
            iot-collect

server-address <x.x.x.x>
```

Set the FortiGuard service types:

- `iot-query`: IoT query server.
- `iot-collect`: IoT device collection server.

Enter the IPv4 address of the FortiManager.

## FortiAP query to FortiGuard IoT service to determine device details

A FortiAP collects packets from devices and queries FortiGuard with the help of the FortiGate. Device detection results are reported back to the FortiGate where this information is displayed. Querying the FortiGuard service requires an IoT Detection Service license.

The following attributes can be configured in `wireless-controller` setting:

Attribute	Description
<code>device-weight &lt;integer&gt;</code>	Set the device upper limit of confidence (0 - 255, default = 1, 0 = disable).
<code>device-holdoff &lt;integer&gt;</code>	Set the device lower limit of creation time, in minutes (0 - 60, default = 5).
<code>device-idle &lt;integer&gt;</code>	Set the device upper limit of idle time, in minutes (0 - 14400, default = 1440).

### To query the FortiGuard IoT service:

```
config wireless-controller setting
...
set device-weight 1
set device-holdoff 5
set device-idle 1440
...
end


# diagnose user device list
vd root/0 54:27:1e:e6:26:3d gen 89 req OUA/34
created 70s gen 86 seen 2s port29 gen 28
ip 10.29.1.214 src mac
hardware vendor 'Asustek compute' src fortiguard id 0 weight 21
type 'Home & Office' src fortiguard id 0 weight 21
family 'Computer' src fortiguard id 0 weight 21
os 'Linux' src dhcp id 822 weight 128
host 'test-wifi' src dhcp
```

## FortiGate Cloud / FDN communication through an explicit proxy

Explicit proxy communication to FortiGate Cloud and FortiGuard servers from FortiGate is enabled. A proxy server can be configured in the FortiGuard settings so that all FortiGuard connections under the `forticldd` process can be established through the proxy server.



Not all FortiGuard services are supported by these proxy settings. For example, web filter service traffic to FortiGuard will not be directed to the configured proxy.

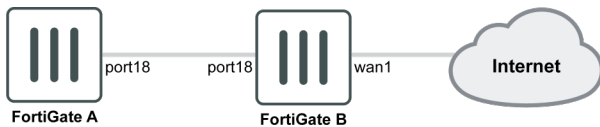

**To configure a proxy server and communicate with FortiGate Cloud through it:**

**1. Configure FortiGate B as a proxy server:**

```
config firewall proxy-policy
  edit 1
    set proxy explicit-web
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set service "webproxy"
    set action accept
    set schedule "always"
    set logtraffic all
    set users "guest1"
  next
end
config user local
  edit "guest1"
    set type password
    set passwd 123456
  next
end
config authentication scheme
  edit "local-basic"
    set method basic
    set user-database "local-user-db"
  next
end
config authentication rule
  edit "local-basic-rule"
    set srcaddr "all"
    set ip-based disable
    set active-auth-method "local-basic"
  next
end
```

**2. Configure a firewall policy on FortiGate B to allow FortiGate A to get DNS resolution:**

```
config firewall policy
  edit 1
    set name "dns"
    set srcintf "port18"
    set dstintf "wan1"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "DNS"
    set fsso disable
    set nat enable
```

```

    next
end

```

### 3. Configure the FortiGuard proxy settings on FortiGate A:

```

config system fortiguard
    set proxy-server-ip 10.2.2.2
    set proxy-server-port 8080
    set proxy-username "guest1"
    set proxy-password 123456
end

```

### 4. On FortiGate A, log in to FortiGate Cloud to activate the logging service:

```
execute fortiguard-log login <username> <password>
```

### 5. On FortiGate A, view the `forticldd` debug message to see the connection to the log controller through the proxy server:

```
# diagnose test application forticldd 1
```

## FDS-only ISDB package in firmware images

FortiOS firmware images include Fortinet objects in the built-in Internet Service Database (ISDB).

```

# diagnose firewall internet-service list
List internet service in kernel(global):
Internet Service Database Kernel Table: size 14974 bytes, Entry size 5844 bytes, number of
index entries 165 number of IP range entries 0

Group(0): Weight(15), number of entries(162)
.....

```

This lightweight ISDB package allows firewall rules and policy routes that use ISDB to access FortiGuard servers to continue working after upgrading FortiOS. For example, the following policy will work after an upgrade:

```

config firewall policy
    edit 440
        set name "Fortinet Updates"
        set srcintf "port25"
        set dstintf "port1"
        set srcaddr "FortiAnalyzer" "FortiAuthenticator" "Tesla Management Interface"
        "BackupFortinet" "SipFW" "ConnectVPNMgrt"
        set internet-service enable
        set internet-service-id 1245187 1245326 1245324 1245325 1245193 1245192 1245190
        1245185
        set action accept
        set schedule "always"
        set logtraffic all
        set fsso disable
    next
end

```

After the FortiGate reboots after a firmware update, an automatic update will run in five minutes so that the FortiGate can get the ISDB, whether or not scheduled update is enabled.

```
# diagnose autoupdate versions | grep Internet -A 6
```

Internet-service Full Database

-----

Version: 7.02217 signed

Contract Expiry Date: n/a

Last Updated using manual update on Thu Mar 10 12:06:58 2022

Last Update Attempt: Thu Mar 10 12:07:27 2022

## Licensing in air-gap environments

In the Operational Technology industry, industrial equipment is critical and must not be connected to the internet. However, the equipment is still required to be protected by a firewall in this air-gap environment. Without a gateway to FortiGuard in air-gap environments, FortiGuard packages, such as AntiVirus and IPS, must be manually uploaded to the FortiGate. FortiGate licenses can be downloaded from FortiCloud and uploaded manually to the FortiGate.



Manual licensing for air-gap environments is supported only on FortiGate hardware appliances, for both rugged and non-rugged models running FortiOS 7.2.0 or later. Manual licensing is currently not supported on FortiGate virtual machine (VM) appliances.

### To manually upload FortiGate licenses in the GUI:

1. Register the FortiGuard license on FortiCloud. See [Registration](#) in the FortiOS Administration Guide for more information.
2. Download the product entitlement file in FortiCloud:
  - a. Go to *Products > Product List*.
  - b. Select the serial number of the FortiGate. The product page opens.
  - c. In the *License & Key* section, click *Get The License File*. The file downloads to your device in the format FG201E\*\*\*\*\*ProductEntitlement.lic.
3. In FortiOS, go to *System > FortiGuard*. Currently, the status for all services is *Pending*.

The screenshot displays the FortiGuard Distribution Network interface. On the left, the 'License Information' section shows a table of services and their status:

Entitlement	Status
FortiCare Support	Pending
Firmware & General Updates	Pending
AntiVirus	Pending
Web Filtering	Pending
Outbreak Prevention	Pending
SD-WAN Network Monitor	Pending
Security Rating	Pending
Industrial DB	Pending
FortiPAM	Pending
IoT Detection Service	Pending
FortiGate Cloud	Not Activated

At the bottom of this table is an 'Activate' button. To the right, the 'FortiGuard Updates' section shows the next update time as 2022/03/07 15:26:00, with buttons for 'Update Licenses & Definitions Now' and 'Upload License File'. A red error message states 'Unable to connect to FortiGuard servers.' Below this, the 'Fortinet Service Communications' table shows traffic volume for various services:

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiGate Cloud Log	0 B
FortiGuard.com	0 B
FortiGuard Download	0 B
FortiGuard Query	0 B

An 'Apply' button is located at the bottom center of the interface.

4. Click *Upload License File*. The file explorer opens.
5. Navigate to the product entitlement file and click *Open*.

The license file uploads to the FortiGate. Once the upload is complete, the FortiGate shows that it is registered and licensed.

The screenshot shows the FortiGuard Distribution Network interface. On the left, the 'License Information' section displays a table of entitlements and their status. On the right, the 'FortiGuard Updates' section shows the next update time and buttons to update licenses and definitions. Below this, a red error message states 'Unable to connect to FortiGuard servers.' and a table of Fortinet Service Communications shows traffic volume for various services.

Entitlement	Status	Actions
FortiCare Support	Registered	
Firmware & General Updates	Licensed (Expiration Date: 2023/05/14)	
AntiVirus	Licensed (Expiration Date: 2023/05/14)	
Web Filtering	Licensed (Expiration Date: 2023/05/14)	
Outbreak Prevention	Licensed (Expiration Date: 2023/05/14)	
SD-WAN Network Monitor	Licensed (Expiration Date: 2023/05/14)	
Security Rating	Licensed (Expiration Date: 2023/05/14)	
Industrial DB	Licensed (Expiration Date: 2023/05/14)	
FortiIPAM	Licensed (Expiration Date: 2023/05/14)	
IoT Detection Service	Licensed (Expiration Date: 2023/05/14)	
FortiGate Cloud	Not Activated	Activate

FortiGuard Updates  
Next Update: 2022/03/07 15:26:00  
Update Licenses & Definitions Now  
Manual Update  
Upload License File

Unable to connect to FortiGuard servers.

Fortinet Service Communications

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiGate Cloud Log	0 B
FortiGuard.com	0 B
FortiGuard Download	0 B
FortiGuard Query	0 B
FortiGate Cloud Sandbox	0 B

Apply

6. Click *Apply*.

### To manually upgrade the AntiVirus Database in the GUI:

- Download the static upgrade file from FortiCloud:
  - Go to [support.fortinet.com](https://support.fortinet.com).
  - Go to *Download > Download FortiGuard Service Updates > FortiGate*.
  - Select the FortiOS version from the *OS Version* dropdown.
  - Select the file from the appropriate FortiGate product model section. The file downloads to your device.
- In FortiOS, go to *System > FortiGuard* and expand the *AntiVirus* section to view the current licenses.

The screenshot shows the FortiGuard Distribution Network interface with the 'AntiVirus' section expanded. The 'License Information' table now includes details for the AntiVirus license, such as the version and the 'Upgrade Database' button. The 'FortiGuard Updates' section and the 'Fortinet Service Communications' table remain the same.

Entitlement	Status	Actions
FortiCare Support	Registered	
Firmware & General Updates	Licensed (Expiration Date: 2023/05/14)	
AntiVirus	Licensed (Expiration Date: 2023/05/14)	
AI Malware Detection Model	Version 0.00000	
AV Definitions	Version 1.00000	Upgrade Database
AV Engine	Version 6.00266	
Mobile Malware	Version 0.00000	
Web Filtering	Licensed (Expiration Date: 2023/05/14)	
Outbreak Prevention	Licensed (Expiration Date: 2023/05/14)	
SD-WAN Network Monitor	Licensed (Expiration Date: 2023/05/14)	
Security Rating	Licensed (Expiration Date: 2023/05/14)	

FortiGuard Updates  
Next Update: 2022/03/07 16:27:00  
Update Licenses & Definitions Now  
Manual Update  
Upload License File

Unable to connect to FortiGuard servers.

Fortinet Service Communications

Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiGate Cloud Log	0 B
FortiGuard.com	0 B
FortiGuard Download	0 B
FortiGuard Query	0 B

Apply

- Click *Upgrade Database*. The *Anti-Virus Database Upgrade* pane opens.
- Click *Upload*. The file explorer opens.
- Navigate to the static upgrade file and click *Open*.
- Click *OK*.

7. Click *Apply*.

The AntiVirus Database is upgraded.

**To manually upload FortiGate licenses in the CLI:**

```
# execute restore manual-license {ftp | tftp} <license file name> <server> [args]
```

## License expiration

The FortiGate will still function as a firewall if any or all of the FortiGuard licenses are expired. Valid FortiGuard licenses are required to receive database and signature updates, and to perform real-time or near-real-time security lookups to detect and quickly adjust your security posture for newly discovered attacks.



FortiGuard services are designed to be continuous. Any lapses in the service will require coverage back to the contract expiration date. For more information, see [FortiCare/FortiGuard Renewal Continuous Service Policy](#).

License type	Expiration impact
Firmware & General Update	<p>Application Control, Device &amp; OS Identification, and Internet Service Database Definitions continue to work, but the databases are not updated and no new signatures are added.</p> <p>For example, if application control is used in a firewall policy that has an internet service applied to the source or destination addresses, then the policy will continue to inspect matching traffic using the FortiGate's existing application control signatures and ISDB definitions.</p> <p>Application control, device and OS detection, and internet service database are included in the base services that are included with all FortiCare support contracts. See <a href="#">FortiGuard Security Services</a> for details.</p>
Intrusion Prevention	<p>IPS scanning continues to work, but the IPS databases are not updated and no new signatures are added.</p> <p>For example, if an IPS sensor with <i>Block malicious URLs</i> enabled is used in a firewall policy, then the policy will continue to inspect matching traffic using the FortiGate's existing IPS signatures and malicious URLs database.</p> <p>An active IPS license is critical for stopping sophisticated and zero-day attacks, as FortiGuard IPS provides near-real-time intelligence with thousands of intrusion prevention rules to detect and block known and zero-day threats.</p> <p>For more information, see <a href="#">Intrusion prevention on page 1410</a>.</p>
Botnet IPs/Domains	<p>IPS sensors and DNS Filter profiles with Botnet C&amp;C configured continue to work, but the Botnet IPs and Botnet Domain databases are not updated and no new signatures are added.</p> <p>While Botnet IPs and Domain are listed in the Intrusion Prevention category, they are actually part of the Firmware &amp; General Updates contract.</p> <p>For more information, see <a href="#">Botnet C&amp;C domain blocking on page 1375</a> and <a href="#">IPS with botnet C&amp;C IP blocking on page 1426</a>.</p>

License type	Expiration impact
AntiVirus	<p>Antivirus scanning continues to work, but the antivirus database is not updated and no new signatures are added.</p> <p>For more information, see <a href="#">Antivirus on page 1269</a>.</p>
Web and DNS Filtering	<p>Category-based Web and DNS filtering stops working, as URLs and domains are sent to FortiGuard in real-time to determine the category.</p> <p>By default, all web and DNS traffic is dropped. If allowing website or DNS requests when a rating error occurs is enabled, then all web and DNS traffic passes through without filtering.</p> <p>If static URL or domain filtering is applied in a filter profile, those filters continue to work.</p> <p>Configurations where only specific URLs and domains are allowed and all others are blocked continue to work, but this is not a scalable solution blocking websites or performing category filtering.</p> <p>For more information, see <a href="#">FortiGuard filter on page 1320</a> and <a href="#">FortiGuard category-based DNS domain filtering on page 1372</a>.</p>
Email Filtering	<p>Spam filtering stops working, as it queries the FortiGuard spam filtering server in real-time to check spammer IP addresses and emails (except those that are locally configured), phishing URLs, spam URLs, spam email checksums, and spam submissions. Anti-spam signatures are not updated.</p> <p>Profile options based on local spam filtering continue to work.</p> <p>For more information, see <a href="#">Email filter on page 1445</a>.</p>
Outbreak Prevention	<p>Outbreak prevention stops working, as it uses real-time lookups to the FortiGuard Global Threat Intelligence database.</p> <p>For more information, see <a href="#">FortiGuard outbreak prevention on page 1281</a>.</p>
Security Rating	<p>The security rating check stops working.</p> <p>Security Rating licenses are required to run security rating checks across all of the devices in the Security Fabric. They allow rating scores to be submitted to and received from FortiGuard for network ranking. Without security rating checks, critical vulnerabilities and configuration weaknesses in the Security Fabric cannot be identified, and best practice recommendations cannot be implemented.</p> <p>For more information, see <a href="#">Security rating on page 2723</a>.</p>
Industrial DB	<p>Industry Security Service (ISS) signatures continue to work, but the database attack definitions are not updated and no new signatures are added.</p> <p>ISS includes application control and IPS signatures for industrial applications and protocols.</p> <p>For example, if an IPS sensor enabled with ISS signatures is used in a firewall policy, then the policy will continue to inspect matching traffic using the FortiGate's existing industrial database IPS signatures.</p> <p>For more information, see <a href="#">Industrial signature database on page 1421</a>.</p>



## Feature visibility

Feature visibility is used to control which features are visible in the GUI. This allows features that are not in use to be hidden. Some features are also invisible by default and must be made visible before they can be configured in the GUI.

The visibility of a feature does not affect its functionality or configuration. Invisible features can still be configured using the CLI.

### To change the visibility of features:

1. Go to *System > Feature Visibility*.
2. Change the visibility of the features as required.  
For information about what settings each option affects, click on the + icon to the right of the feature name.  
Changes are listed on the right side of the content pane.
3. Click *Apply*.

## Certificates

FortiOS leverages certificates in multiple areas, such as VPNs, administrative access, and deep packet inspection. This section contains topics about uploading certificates and provides examples of how certificates may be used to encrypt and decrypt communications, and represent the identity of the FortiGate. This section assumes the reader has a high level understanding of the public key infrastructure (PKI) system, particularly how entities leverage trusted certificate authorities (CAs) to verify the authenticating party, and how public and private certificate keys work to secure communications.

The certificates feature is hidden by default in FortiOS. In the GUI, go to *System > Feature Visibility* and enable *Certificates*.

For additional capabilities and enhanced certificate management, please review the FortiAuthenticator [Administration Guide](#) and [Cookbook](#).

The following topics provide information about certificates:

- [Automatically provision a certificate on page 2516](#)
- [Generate a new certificate on page 2520](#)
- [Regenerate default certificates on page 2521](#)
- [Import a certificate on page 2522](#)
- [Generate a CSR on page 2524](#)
- [CA certificate on page 2527](#)
- [Remote certificate on page 2527](#)
- [Certificate revocation list on page 2528](#)
- [Export a certificate on page 2528](#)
- [Uploading certificates using an API on page 2529](#)

The following topics provide examples of how to use certificates:

- [Procuring and importing a signed SSL certificate on page 2534](#)
- [Microsoft CA deep packet inspection on page 2536](#)

- [Administrative access using certificates on page 2541](#)
- [Creating certificates with XCA on page 2541](#)
- [Site-to-site VPN with digital certificate on page 1608](#)
- [Configuring FortiClient EMS on page 2604](#)
- [SSL VPN with certificate authentication on page 1925](#)
- [SSL VPN with LDAP-integrated certificate authentication on page 1930](#)
- [Configuring certificates for SAML SSO on page 2711](#)
- [Protecting an SSL server on page 1536](#)
- [Using the default certificate for HTTPS administrative access on page 2295](#)

## Automatically provision a certificate

The Automated Certificate Management Environment (ACME), as defined in [RFC 8555](#), is used by the public Let's Encrypt certificate authority (<https://letsencrypt.org>) to provide free SSL server certificates. The FortiGate can be configured to use certificates that are managed by Let's Encrypt, and other certificate management services, that use the ACME protocol. The server certificates can be used for secure administrator log in to the FortiGate.

- The FortiGate must have a public IP address and a hostname in DNS (FQDN) that resolves to the public IP address.
- The configured ACME interface must be public facing so that the FortiGate can listen for ACME update requests. It must not have any VIPs, or port forwarding on port 80 (HTTP) or 443 (HTTPS).
- The Subject Alternative Name (SAN) field is automatically filled with the FortiGate DNS hostname. It cannot be edited, wildcards cannot be used, and multiple SANs cannot be added.



ACME certificates do not support loopback interfaces.

---

This example shows how to import an ACME certificate from Let's Encrypt, and use it for secured remote administrator access to the FortiGate.

## To generate a certificate using ACME and Let's Encrypt:


1. Go to **System > Certificates** and click **Create/Import > Certificate**.

2. Click **Use Let's Encrypt**.
3. Set **Certificate name** to an appropriate name for the certificate. This is what is referenced when using the certificate in FortiGate configurations.
4. Set **Domain** to the public FQDN of the FortiGate.
5. Set **Email** to a valid email address. The email is not used during the enrollment process.

6. Click **Create**.
7. Set the **ACME interface**, on which the ACME client will listen for challenges in order to provision and renew certificates. The challenge is how the certificate signing request is validated by Let's Encrypt.

8. Click **OK**. Let's Encrypt provisions the certificate and the certificate is added to the certificate list in the **Local Certificates** section.

9. Click **View Details** to verify that the FortiGate's FQDN is in the certificate's *Subject: Common Name (CN)*.

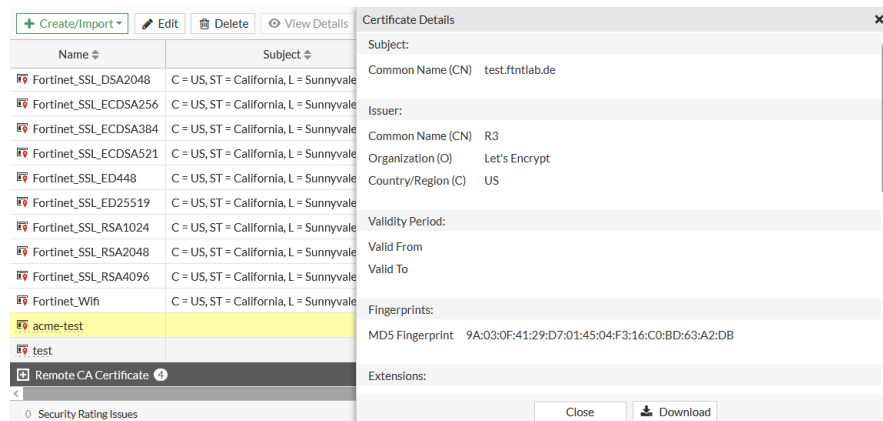

### To import an ACME certificate in the CLI:

1. Set the interface that the FortiGate communicates with Let's Encrypt on:

```
config system acme
    set interface "port1"
end
```

2. Make sure that the FortiGate can contact the Let's Encrypt enrollment server:

```
# execute ping acme-v02.api.letsencrypt.org
PING ca80a1adb12a4fbdac5ffcbc944e9a61.pacloudflare.com (172.65.32.248): 56 data bytes
64 bytes from 172.65.32.248: icmp_seq=0 ttl=60 time=2.0 ms
64 bytes from 172.65.32.248: icmp_seq=1 ttl=60 time=1.7 ms
64 bytes from 172.65.32.248: icmp_seq=2 ttl=60 time=1.7 ms
64 bytes from 172.65.32.248: icmp_seq=3 ttl=60 time=2.1 ms
64 bytes from 172.65.32.248: icmp_seq=4 ttl=60 time=2.0 ms

--- ca80a1adb12a4fbdac5ffcbc944e9a61.pacloudflare.com ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.7/1.9/2.1 ms
```

3. Configure the local certificate request:

```
config vpn certificate local
    edit "acme-test"
        set enroll-protocol acme2
        set acme-domain "test.ftntlab.de"
        set acme-email "techdoc@fortinet.com"
    next
By enabling this feature you declare that you agree to the Terms of Service at
https://acme-v02.api.letsencrypt.org/directory
Do you want to continue? (y/n)y
end
```

4. Verify that the enrollment was successful:

```
# get vpn certificate local details acme-test
path=vpn.certificate, objname=local, tablename=(null), size=2632
== [ acme-test ]
    Name:          acme-test
```

```
Subject:      CN = test.ftntlab.de
Issuer:       C = US, O = Let's Encrypt, CN = R3
Valid from:   2021-03-11 17:43:04 GMT
Valid to:     2021-06-09 17:43:04 GMT
Fingerprint: 9A:03:0F:41:29:D7:01:45:04:F3:16:C0:BD:63:A2:DB
Serial Num:   03:d3:55:80:d2:e9:01:b4:ca:80:3f:2e:fc:24:65:ad:7c:0c
```

ACME details:

Status: The certificate for the managed domain has been renewed successfully and can be used (valid since Thu, 11 Mar 2021 17:43:04 GMT).


Staging status: Nothing in staging

**5. Check the ACME client full status log for the CN domain:**

```
# diagnose sys acme status-full test.ftntlab.de
{
  "name": "test.ftntlab.de",
  "finished": true,
  "notified": false,
  "last-run": "Thu, 11 Mar 2021 18:43:02 GMT",
  "valid-from": "Thu, 11 Mar 2021 17:43:04 GMT",
  "errors": 0,
  "last": {
    "status": 0,
    "detail": "The certificate for the managed domain has been renewed successfully and
can be used (valid since Thu, 11 Mar 2021 17:43:04 GMT). A graceful server restart now
is recommended.",
    "valid-from": "Thu, 11 Mar 2021 17:43:04 GMT"
  },
  "log": {
    "entries": [
      {
        "when": "Thu, 11 Mar 2021 18:43:05 GMT",
        "type": "message-renewed"
      },
      ...
      {
        "when": "Thu, 11 Mar 2021 18:43:02 GMT",
        "type": "starting"
      }
    ]
  }
}
```

**To exchange the default FortiGate administration server certificate for the new public Let's Encrypt server certificate in the GUI:**

1. Go to *System > Settings*.
2. Set *HTTPS server certificate* to the new certificate.

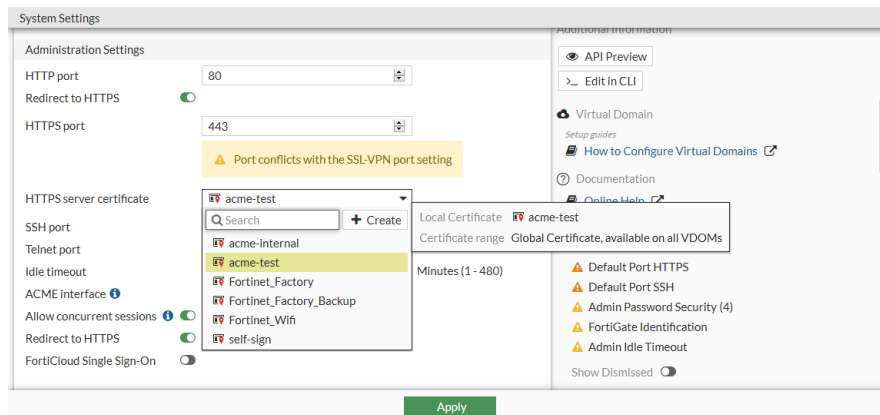

3. Click *Apply*.
4. Log in to the FortiGate using an administrator account from any internet browser. There should be no warnings related to non-trusted certificates, and the certificate path should be valid.

### To exchange the default FortiGate administration server certificate for the new public Let's Encrypt server certificate in the CLI:

```
config system global
    set admin-server-cert "acme-test"
end
```

When you log in to the FortiGate using an administrator account there should be no warnings related to non-trusted certificates, and the certificate path should be valid.

## Generate a new certificate

The FortiGate can generate a certificate using a pre-loaded, self-signed CA certificate: *Fortinet\_CA\_SSL*, instead of generating a CSR and providing it to a CA for signing. It is recommended that a server certificate from a well-known and trusted CA is used.

### To generate a new certificate:

1. Go to *System > Certificates* and select *Create/Import > Certificate*.
2. Click *Generate Certificate*.
3. Set *Certificate name* to the name of the certificate. This is what is referenced when using the certificate in FortiGate configurations.
4. Set the *Common name* (CN) for the certificate. The common name should match the FQDN or IP of the primary SSL-VPN interface.
5. Optionally, set the *Subject alternative name*.
6. Click *Download CA Certificate* to download the CA certificate so that it can be installed or imported to all the machines that need to trust this certificate.

**Create Certificate**

Choose Method    Certificate Details    Create Certificate    Review

**Generate New Certificate**

Certificate authority: Fortinet\_CA\_SSL

Certificate name: self-created-certificate

Common name: Branch1.domain.local

*The common name should match the FQDN or IP of the primary SSL-VPN interface.*

Subject alternative name:

**Update Your List of Trusted Certificate Authorities**

Fortinet\_CA\_SSL is a local CA certificate. To avoid certificate warnings, you must download it and install it on each client machine.

[Download CA Certificate](#)

**Create**    Back    Cancel

7. Click **Create**.

8. After the certificate is created, click **Download Certificate** to download the certificate. Click **View Details** to review the certificate details.

**Create Certificate**

Choose Method    Certificate Details    Create Certificate    Review

**Generate New Certificate**

*Certificate self-created-certificate has been generated.*

[Download Certificate](#)    [View Details](#)

**Update Your List of Trusted Certificate Authorities**

Fortinet\_CA\_SSL is a local CA certificate. To avoid certificate warnings, you must download it and install it on each client machine.

[Download CA Certificate](#)

**OK**

9. Click **OK**.

## Regenerate default certificates

The FortiGate includes default certificates that are generated the first time that the FortiGate is booted up. In some circumstances, it can be necessary to regenerate these certificates, such as when they are nearing expiry, or if the key becomes compromised.

### To regenerate default certificates:

```
# execute vpn certificate local generate default-gui-mgmt-cert
# execute vpn certificate local generate default-ssl-ca
# execute vpn certificate local generate default-ssl-ca-untrusted
# execute vpn certificate local generate default-ssl-key-certs
# execute vpn certificate local generate default-ssl-serv-key
```

default-gui-mgmt-cert	Regenerate the default GUI management admin-server (Fortinet_GUI_Server) certificate.
default-ssl-ca	Regenerate the default CA certificate (Fortinet_CA_SSL) used by SSL Inspection.
default-ssl-ca-untrusted	Regenerate the default untrusted CA certificate (Fortinet_CA_Untrusted) used by SSL Inspection.
default-ssl-key-certs	Regenerate the default RSA, DSA, ECDSA, and EdDSA key certificates for SSL resign: <ul style="list-style-type: none"> <li>• Fortinet_SSL_DSA1024</li> <li>• Fortinet_SSL_DSA2048</li> <li>• Fortinet_SSL_ECDSA256</li> <li>• Fortinet_SSL_ECDSA384</li> <li>• Fortinet_SSL_ECDSA521</li> <li>• Fortinet_SSL_ED448</li> <li>• Fortinet_SSL_ED25519</li> <li>• Fortinet_SSL_RSA1024</li> <li>• Fortinet_SSL_RSA2048</li> <li>• Fortinet_SSL_RSA4096</li> </ul>
default-ssl-serv-key	Regenerate the default server key (Fortinet_SSL) used by SSL Inspection.

## Import a certificate

You can upload a certificate to the FortiGate that was generated on its own. This is typical of wildcard certificates (\*.domain.tld) where the same certificate is used across multiple devices (FGT.domain.tld, FAZ.domain.tld, and so on), but can also be used for individual certificates as long as the information provided to the signing CA matches that of the FortiGate.

Any certificate uploaded to a VDOM is only accessible to that VDOM. Any certificate uploaded to the Global VDOM is globally accessible by all VDOMs.

A signed certificate that is created using a CSR that was generated by the FortiGate does not include a private key, and can be imported to the FortiGate from a the management computer or a TFTP file server.

There are three options:

- [Local certificate on page 2522](#)
- [PKCS #12 certificate on page 2523](#)
- [Certificate on page 2523](#)


### Local certificate

This option allows you to upload a single file and no key. Use it when you have created a CSR on the FortiGate ([Generate a CSR on page 2524](#)), as the key is generated as part of the CSR process and remains on the FortiGate. You must upload a .CER file.



**To import a local certificate in the GUI:**

1. Go to *System > Certificates* and select *Create/Import > Certificate*.
2. Click *Import Certificate*.
3. Set *Type* to *Local Certificate*.
4. Click *Upload*, and locate the certificate on the management computer.

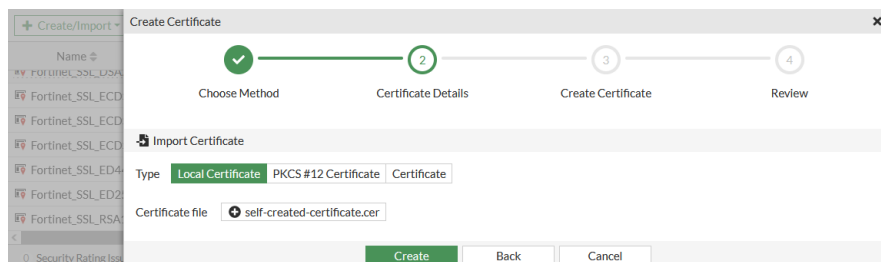

5. Click *Create*, then click *OK* on the confirmation page.

**To import a local certificate in the CLI:**

```
execute vpn certificate local import tftp <filename> <tftp_IP> cer
```

**PKCS #12 certificate**

This option takes a specific certificate file type that contains the private key. The certificate is encrypted and a password must be supplied with the certificate file. PKCS #12 certificates are .PFX files.

**To import a PKCS #12 certificate in the GUI:**

1. Go to *System > Certificates* and select *Create/Import > Certificate*.
2. Click *Import Certificate*.
3. Set *Type* to *PKCS #12 Certificate*.
4. Click *Upload*, and locate the certificate on the management computer.
5. Enter the password, then confirm the password.
6. Optionally, customize the *Certificate name*.
7. Click *Create*, then click *OK* on the confirmation page.

**To import a PKCS #12 certificate in the CLI:**

```
execute vpn certificate local import tftp <filename> <tftp_IP> p12 <password>
```

**Certificate**

This option is intended for certificates that were generated without using the FortiGate's CSR. Because the certificate private key is being uploaded, a password is required. This option is similar to PKCS #12 certificate, but the certificate and key file are separate files, usually .CER and .PEM files.

### To import a certificate in the GUI:

1. Go to *System > Certificates* and select *Create/Import > Certificate*.
2. Click *Import Certificate*.
3. Set *Type* to *Certificate*.
4. In the *Certificate* field, click *Upload*, and locate the certificate on the management computer.
5. In the *Key file* field, click *Upload*, and locate the key file on the management computer.
6. Enter the password, then confirm the password.

7. Optionally, customize the *Certificate name*.
8. Click *Create*, then click *OK* on the confirmation page.

### To import a certificate that requires a private key to a VDOM, or when VDOMs are disabled:

```
config vpn certificate {local | ca | remote | ocsf-server | crl}
```

Refer to the FortiOS CLI Reference for detailed options for each certificate type ([local](#), [CA](#), [remote](#), [OSCP server](#), [CRL](#)).

### To import a global certificate that requires a private key when VDOMs are enabled:

```
config certificate {local | ca | remote | crl}
```

This command is only available when VDOMs are enabled. For details, see the [FortiOS CLI Reference](#).

## Generate a CSR

Certificate signing requests (CSRs) are used to generate a certificate which is then signed by a CA to create a chain of trust. The CSR includes details about the FortiGate and its public key. A CSR is not strictly necessary; some CAs allow you to provide the details of the FortiGate manually, but a CSR helps streamline the process.

## To generate a CSR in the GUI:

1. Go to *System > Certificates* and select *Create/Import > Generate CSR*.

2. Enter the following information:

<b>Certificate Name</b>	Enter the certificate name; this is how it will appear in the <i>Local Certificates</i> list.
<b>Subject Information</b>	Specify an ID type: host IP address, domain name (FQDN), or email address.
<b>Optional Information</b>	Although listed as optional, we recommended entering the information for each field in this section. If you are generating a CSR for a third-party CA, you need to insure that these values reflect those listed for your company or organization at said certificate authority. If you are generating a certificate for a Microsoft CA, you need to check with the administrator regarding these values.
<b>Organization Unit</b>	Enter the name of the organizational unit under which the certificate will be issued.
<b>Organization</b>	Enter the overall name of the organization.
<b>Locality(City)</b>	Enter the city where the SSL certificate is located.
<b>State / Province</b>	Some issuers will reject a CSR that has an abbreviated state or province, so enter the full name of the state or province.
<b>Country / Region</b>	Enable the option and select the country from the dropdown.
<b>E-Mail</b>	Enter the email address of the technical contact for the SSL certificate that is being requested.
<b>Subject Alternative Name</b>	This field allows multiple domains to be used in an SSL certificate. Select from email addresses, IP addresses, URIs, DNS names, and so on.

<b>Password for private key</b>	If supplied, this is used as an encryption password for the private key file.
<b>Key Type</b>	Select <i>RSA</i> or <i>Elliptic Curve</i> .
<b>Key Size</b>	When <i>Key Type</i> is <i>RSA</i> , select 1024, 1536, 2048, or 4096 for bit-size/strength. We recommend using at least 2048 if your CA can issue certificates of that size.
<b>Curve Name</b>	When <i>Key Type</i> is <i>Elliptic Curve</i> , select the elliptic curve type: secp256r1, secp384r1, or secp521r1.
<b>Enrollment Method</b>	<p>Select one of the following methods that determines how the CSR will be signed.</p> <ul style="list-style-type: none"> <li> <b>File Based:</b> this will generate a certificate in the certificate menu under <i>Local Certificate</i>, which differs from the existing ones because it has no <i>Subject</i>, <i>Comments</i>, <i>Issuer</i>, or <i>Expires</i> values in the table. It will also show a <i>Pending</i> status because it is only a CSR at the moment and cannot function as a certificate just yet. You can download the CSR to provide to a CA for signing. If you open the CSR file, it should look similar to this: <pre>-----BEGIN CERTIFICATE REQUEST----- MIIC7jCCAdYCAQAwwZUxCzAJBgNVBAYT (... )HEKjDX+Hg== -----END CERTIFICATE REQUEST-----</pre> <p>Next, the CSR file is supplied to a CA for signing and the returned file from the CA should be in .CER format. This file is then uploaded to the FortiGate by going to <i>System &gt; Certificates &gt; Import &gt; Local Certificate</i> and uploading the CER file.</p> </li> <li> <b>Online SCEP:</b> the Simple Certificate Enrollment Protocol (SCEP) allows devices to enroll for a certificate by using a URL and a password. The SCEP server works as a proxy to forward the FortiGate's request to the CA and returns the result to the FortiGate (setting up an SCEP server is beyond the scope of this topic). Once the request is approved by the SCEP server, the FortiGate will have a signed certificate containing the details provided in the CSR. </li> </ul>

### 3. Click OK.

The CSR generated, and can be downloaded from the local certificate list.

### To generate a CSR in the CLI:

```
# execute vpn certificate local generate cmp <certificate_name> <key_size> <server> <path>
<server_certificate> <auth_certificate> <user> <password> <subject> [SANs] [source_IP]

# execute vpn certificate local generate ec <certificate_name> <curve_name> <subject>
<country> <state/province> <city> <organization> <OU> <email> [SANs] [options]

# execute vpn certificate local generate rsa <certificate_name> <key_size> <subject>
<country> <state/province> <city> <organization> <OU> <email> [SANs] [options]
```

cmp

Generate a certificate request over CMPv2.

ec	Generate an elliptic curve certificate request.
rsa	Generate a RSA certificate request.

## CA certificate

FortiGates come with many CA certificates from well-known certificate authorities pre-installed, just as most modern operating systems like Windows and MacOS. Use this option to add private CA certificates to the FortiGate so that certificates signed by this private CA are trusted by the FortiGate.

For example, a private CA can be used when two FortiGates are establishing a site-to-site VPN tunnel using a certificate not signed by a public or trustworthy CA, or for your LDAPS connection to your corporate AD server that also uses a certificate signed with a private CA in your domain. It is very common to upload a private CA when using PKI user authentication, since most PKI user certificates will be signed by an internal CA.

### To import a CA certificate in the GUI:

1. Go to *System > Certificates* and select *Create/Import > CA Certificate*.
2. Set the *Type* to *Online SCEP* or *File*.
  - *Online SCEP*: Enter the *URL of the SCEP server* and optionally, the *Optional CA Identifier*. The FortiGate contacts an SCEP server to request the CA certificate.
  - *File*: Upload the CA certificate file directly from the management computer.
3. Click *OK*.

### To import a CA certificate in the CLI:

```
# execute vpn certificate ca import auto <CA_server> [identifier] [source_ip] [fingerprint]
# execute vpn certificate ca import bundle <filename> <tftp_IP>
# execute vpn certificate ca import tftp <filename> <server_address>
# execute vpn certificate ems_ca import tftp <filename> <server_address>
```

auto	Import CA certificate via SCEP.
bundle	Import certificate bundle from a TFTP server.
tftp	Import CA certificate from a TFTP server.

## Remote certificate

Remote certificates are public certificates and contain only the public key. They are used to identify a remote device. For example, when configuring your FortiGate for SAML authentication with the FortiGate as an identity provider (IdP), you can optionally specify the service provider (SP) certificate. However, when configuring your FortiGate as a SP, you must specify the certificate used by the IdP. Both these certificates can be uploaded to the FortiGate as a remote certificate, since the private key is not necessary for its implementation.

**To upload a remote certificate in the GUI:**

1. Go to *System > Certificates* and select *Create/Import > Remote Certificate*.
2. Upload the remote certificate file directly from the management computer.
3. Click **OK**.

**To upload a remote certificate in the CLI:**


```
# execute vpn certificate remote import tftp <file_name> <server_address>
```

## Certificate revocation list

Because it is not possible to recall a certificate, the certificate revocation list (CRL) details certificates signed by valid CAs that should no longer be trusted. Certificates may be revoked for many reasons, such as if the certificate was issued erroneously or if the private key of a valid certificate has been compromised.

**To import a CRL in the GUI:**

1. Go to *System > Certificates* and select *Create/Import > CA Certificate*.
2. Set the *Import Method* to *File Based* or *Online Updating*.
  - *File Based*: Upload the CRL file directly from the management computer. CAs publish files containing the list of certificates that should no longer be trusted.
  - *Online Updating*: This is the preferred method to keep the list of revoked certificates up to date. Configure the protocols as required.
    - *HTTP*: Enter the *URL of the HTTP server*.
    - *LDAP*: Select the *LDAP Server* and enter the *Username* and *Password*.
    - *SCEP*: Select the *Certificate* and enter the *URL of the SCEP server*.

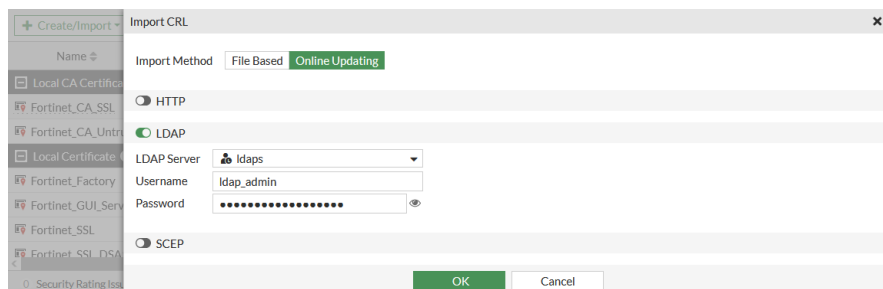

3. Click **OK**.

**To import a CRL in the CLI:**

```
# execute vpn certificate crl import auto <CRL_name>
```

## Export a certificate

Certificates can be downloaded to the management computer in the GUI and exported to a TFTP server in the CLI.

**To back up a certificate in the GUI:**

1. Go to *System > Certificates*.
2. Select the certificate from the list.
3. Click *Download*.
4. Save the file to the management computer.

**To export the certificate in the CLI:**

```
# execute vpn certificate ca export tftp <certificate_name> <filename> <tftp_IP>

# execute vpn certificate local export tftp <certificate_name> <file_type> <filename> <tftp_server>

# execute vpn certificate remote export tftp <certificate_name> <filename> <tftp_server>
```

## Uploading certificates using an API

There are several API methods to upload a certificate based on the type and purpose of the certificate. The parameters of each method are available options, and some methods do not require all parameters to upload the certificate.

When uploading a certificate to the FortiGate using API, the certificate must be provided to the FortiGate in Base64 encoding. You must create a REST API user to authenticate to the FortiGate and use the generated API token in the request.

### **api/v2/monitor/vpn-certificate/ca/import**

```
{
  "import_method": "[file|scep]",
  "scep_url": "string",
  "scep_ca_id": "string",
  "scope": "[vdom*|global]",
  "file_content": "string"
}
```

### **api/v2/monitor/vpn-certificate/crl/import**

```
{
  "scope": "[vdom*|global]",
  "file_content": "string"
}
```

### **api/v2/monitor/vpn-certificate/local/import**

```
{
  "type": "[local|pkcs12|regular]",
  "certname": "string",
  "password": "string",
  "key_file_content": "string",
  "scope": "[vdom*|global]",
  "acme-domain": "string",
  "acme-email": "string",
  "acme-ca-url": "string",
}
```

```

    "acme-rsa-key-size": 0,
    "acme-renew-window": 0,
    "file_content": "string"
}

```

### api/v2/monitor/vpn-certificate/remote/import

```

{
  "scope": "[vdom*|global]",
  "file_content": "string"
}

```

### api/v2/monitor/vpn-certificate/csr/generate

```

{
  "certname": "string",
  "subject": "string",
  "keytype": "[rsa|ec]",
  "keysize": [1024|1536|2048|4096],
  "curvename": "[secp256r1|secp384r1|secp521r1]",
  "orgunits": [
    "string"
  ],
  "org": "string",
  "city": "string",
  "state": "string",
  "countrycode": "string",
  "email": "string",
  "sub_alt_name": "string",
  "password": "string",
  "scep_url": "string",
  "scep_password": "string",
  "scope": "[vdom*|global]"
}

```

## Example

In this example, a PKCS 12 certificate is uploaded as a local certificate using Postman as the API client. PowerShell is used for the Base64 encoding.

### To upload a PKCS 12 certificate using an API:

1. In PowerShell , encode the PKCS 12 certificate to Base64:

```

cd C:\users\username\desktop
$pkcs12cert = get-content 'C:\users\path\to\certificate\certificatename.p12' -Encoding
Byte
[System.Convert]::ToBase64String($pkcs12cert) | Out-File 'base12encodedcert.txt'


```

These three lines of code do the following:


- a. Changes to working directory to the location where the encoded certificate will be created. In this example, it is the desktop.
- b. Creates a variable called `pkcs12cert` and defines it as the certificate file by specifying the full path to the certificate.




- c. Creates a text file called `base12encodedcert` at the location specified in the first step. You will copy and paste the contents of this as `file_content` later in Postman.
2. Generate an API token on the FortiGate by creating a REST API user. See [Generate an API token](#) on the Fortinet Developer Network. A [subscription to the Fortinet Developer Network](#) is required to view this topic.
3. Open Postman and create a new request:
  - a. Click the **+**.
  - b. Click the *Authorization* tab and in the *Type* dropdown, select *API Key*.
  - c. For *Key*, enter `access_token` and enter the *Value* for the API user.
  - d. For *Add to*, select *Query Params*.

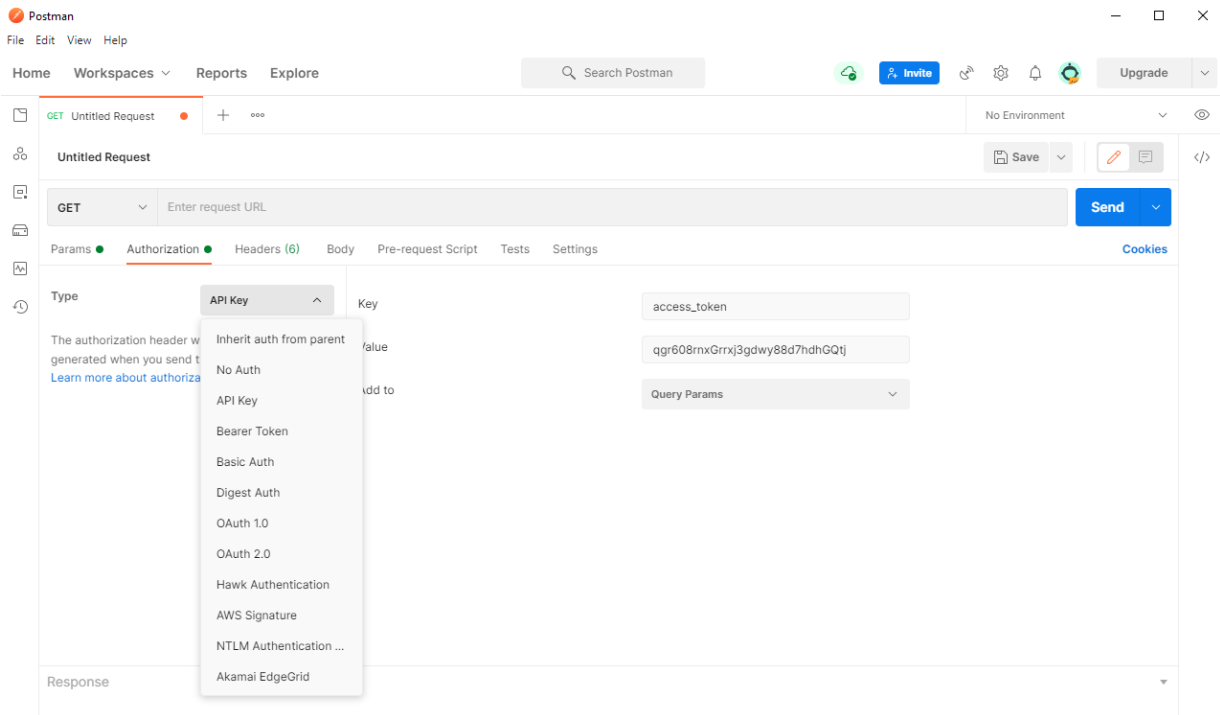


- - 
  - 
  4. In the HTTP request dropdown, change the request from *GET* to *POST*, and enter the FortiGate's IP address and the URL of the API call.
  5. Click the *Body* tab, and copy and paste the API parameters.

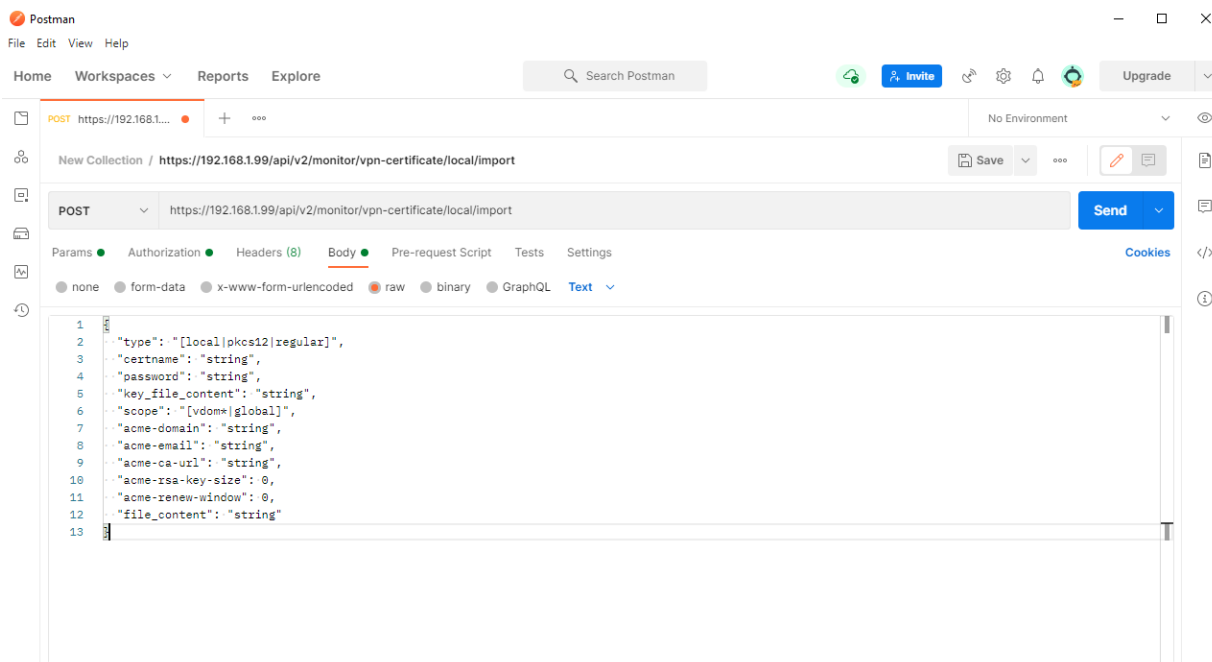

6. Remove unnecessary parameters (ACME related parameters and `key_file_content`) and enter the correct settings for your certificate. Copy and paste the contents of the file generated by PowerShell earlier into `file_content`.

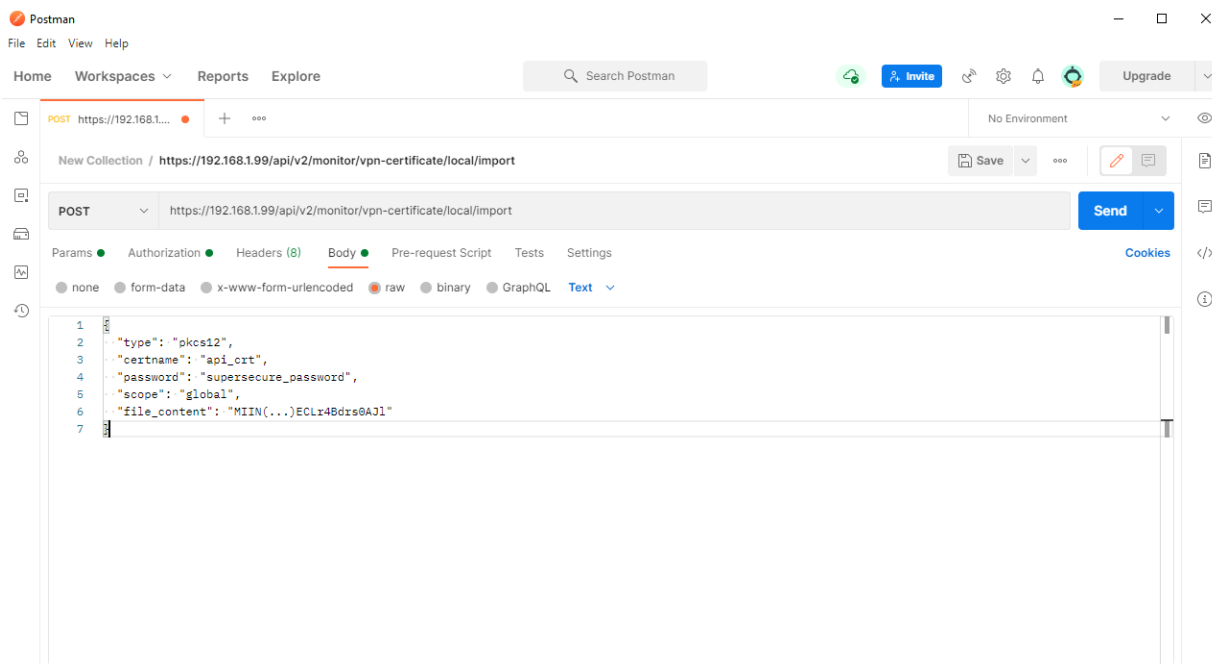

7. Click **Send**. The lower window will return the results.

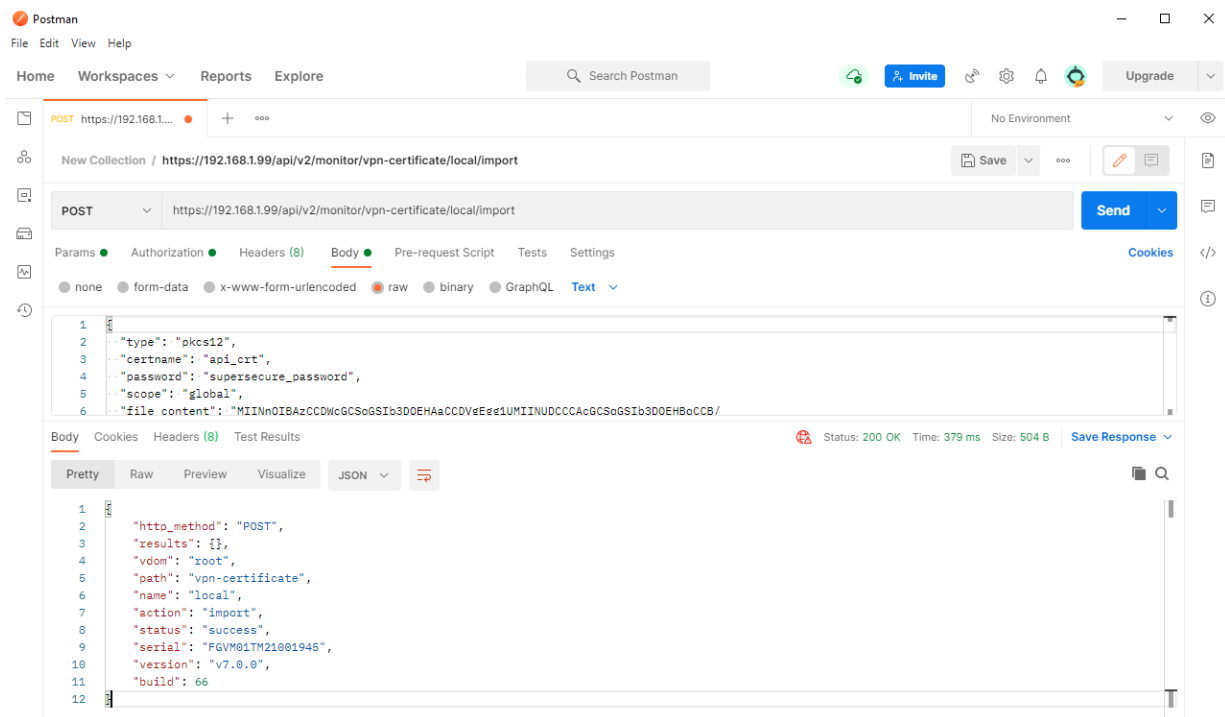

8. In FortiOS, go to **System > Certificates** and verify that the uploaded certificate is shown in the table (*api.crt*).

<div><div>Create/Import</div><div>Edit</div><div>Delete</div><div>View Details</div><div>Download</div><div>Search</div></div>					
Name	Subject	Comments	Issuer	Expires	Status
Local CA Certificate 2					
Local Certificate 16					
Fortinet_Factory	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2056/01/18 20:14:07	Valid
Fortinet_Factory_Backup	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2038/01/18 20:14:07	Valid
Fortinet_SSL	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:56	Valid
Fortinet_SSL_DSA1024	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:51	Valid
Fortinet_SSL_DSA2048	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:55	Valid
Fortinet_SSL_ECDSA256	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:50	Valid
Fortinet_SSL_ECDSA384	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:50	Valid
Fortinet_SSL_ECDSA521	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:50	Valid
Fortinet_SSL_ED448	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:50	Valid
Fortinet_SSL_ED25519	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:50	Valid
Fortinet_SSL_RSA1024	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:54	Valid
Fortinet_SSL_RSA2048	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:55	Valid
Fortinet_SSL_RSA4096	C = US, ST = California, L = Sunnyvale, O = Fortinet, OU = FortiGate, CN = ...	This certificate is embedded in the hardware at the factory and is unique ...	Fortinet	2023/06/29 14:04:59	Valid
Fortinet_Wifi	C = US, ST = California, L = Sunnyvale, O = "Fortinet, Inc.", CN = auth-cert...	This certificate is embedded in the firmware and is the same on every unit...	DigiCert Inc	2021/12/25 16:59:59	Valid
api.crt	CN = monitor_API		lab	2022/06/29 16:39:44	Valid
Remote CA Certificate 0					
Remote Certificate 1					

To debug using the HTTPS daemon:

```

# diagnose debug reset
# diagnose debug enable
# diagnose debug application httpsd -1
<output>
# diagnose debug disable

```

## Procuring and importing a signed SSL certificate

A signed SSL certificate can be used when configuring SSL VPN, for administrator GUI access, and for other functions that require a certificate.



Before creating a certificate, you must have a registered domain. With a valid FortiGuard subscription, FortiDDNS can be used to register a domain; see [DDNS on page 245](#) for more information.

---

Follow these instructions to purchase, import, and use a signed SSL certificate:

- [Obtain, setup, and download an SSL certificate package from a certificate authority](#)
- [Generate a CSR](#)
- [Import the signed certificate into your FortiGate](#)
- [Configure your FortiGate to use the signed certificate](#)

### Obtain, setup, and download an SSL certificate package from a certificate authority

SSL certificate packages can be purchased from any Certificate Authority (CA), such as [DigiCert](#), [GoDaddy](#), or [GlobalSign](#).



[Let's Encrypt](#) can be used to generate a free, trusted SSL certificate. See [Automatically provision a certificate on page 2516](#) for more information.

---



A third party CA might not sign a certificate with an intranet name or IP address. For details, see [Can I request a certificate for an intranet name or IP address?](#)

---

The process for purchasing, setting up, and downloading a certificate will vary depending on the CA that is used, and if a CSR must be generated on the FortiGate.

#### To purchase a certificate package:

1. Create an account with your chosen vendor, or use the account that you used to purchase your domain.
2. Locate the SSL Certificates page.
3. Purchase a basic SSL certificate for domain validation only. If required, a more secure SSL certificate can be purchased.
4. If required, load the CSR, either by uploading the text file or copying and pasting the contents into the requisite text box. See [Generate a CSR on page 2535](#) for information on generating the CSR on the FortiGate.
5. If required, set the server type to *Other*.
6. Verify the certificate per the requirements of the CA.
7. Download the signed certificate to your computer.
8. Import the signed certificate into your FortiGate; see [Import the signed certificate into your FortiGate on page 2535](#).

## Generate a CSR

Some CAs can auto-generate the CSR during the signing process, or provide tools for creating CSRs. If necessary, a CSR can be created in your FortiGate device's GUI.

### To generate a CSR on your FortiGate:

1. Go to *System > Certificates* and select *Create/Import > Generate CSR*.
2. Configure the CSR:
  - Ensure that the certificate has a unique name.
  - Set the *ID Type* to *Domain Name* and enter a *Domain Name*.
  - An email address is required.
  - Ensure that the *Key Size* is set to *2048 Bit*.
  - Set the *Enrollment Method* to *File Based*.
3. Click *OK*.  
The CSR will be added to the certificate list with a status of *PENDING*.
4. In the certificate list, select the new CSR then click *Download* to save the CSR to your computer.  
The CSR file can be opened in any text editor, and will resemble the following:

```
-----BEGIN CERTIFICATE REQUEST-----
MIICuTCCAaECAQAwSzEcmBoGA1UEAxMTZm9ydGlzc2x2cG5kZW1vLmNvbTEmMCkG
CSqGSIb3DQEJARYcZm9ydGlzc2x2cG5kZW1vQGZvcnRpbmV0LmNvbTCCASIwDQYJ
KoZIhvcNAQEBBQADggEPADCCAQoCggEBAMtnpNoR20NH2+UEX/NsyCmZhQqc4af3
Belu9iOoNbo9Fk42gw47r71moAN+1jTL/Tcp3hRhXtpgoI7Zh3vjZnBbD2wwU8Ow
U7dlh5MULyMehR9r4T6OAJ14KbKPt5u90r5SpIb6mM1OIKvzMncuRS66rW1St0KP
mp/f6QjpjMrthnyJkCeJgyTA1YwWNuT9BcO6PTkxBqVMLaRP6TUH6He9uhOx1Cj/
5tzvSdAozZIr2moMieQy0lNd6oQcgpDzaB9QN41+cZOlUXRCMPoH7E4KUe3/Gnis
+NMDQ8rIBijvWCXrKj20wb6sUEjAGJkcXlqVHWYCKWXl6OwejmC4ipkCAwEAAAp
MCcGCSqGSIb3DQEJJDjEaMBgwCQYDVR0TBAIwADALBgNVHQ8EBAMCBaAwDQYJKoZI
hvcNAQELBQADggEBAJkhtz2BPIKeHH9HcJKnfBKL+a6vu1l+1sW+YqnyD+3oR9ec
0eCmLnPxxyxsVel/tRsUg4DTfmooLNDhOjgFMsWxAGUQgrDH2k87cw6kiDAPCqv1
b+hFPNKZQSD09+HXAvOpXrMlrw5YdSaoRnau6Q02yUIYennKTizFIscghlmk4FSe
mb12DhPF+QyDdCGDgtqnQbfx1DC0WmDcmxwa/0ZktoQhheEbYgJ2O714TMqOxs/q
AZgwJ1SNGBALLA2AxkIRUMKUteDdXz0QE8xNrVZpLTbWCNIpYJdRRqSd5C1w2VF4
CFgugTjFaJ13kYmBimeMRQsFtjLV5AxN+bUUsnQ=
-----END CERTIFICATE REQUEST-----
```

## Import the signed certificate into your FortiGate

### To import the signed certificate into your FortiGate:

1. Unzip the file downloaded from the CA.  
There should be two CRT files: a CA certificate with *bundle* in the file name, and a local certificate.
2. Import the local certificate:
  - a. Go to *System > Certificates* and select *Create/Import > Certificate*.
  - b. Click *Import Certificate*.
  - c. Set *Type* to *Local Certificate*, upload the local certificate file, then click *Create*. See [Local certificate on page 2522](#) for more information.  
The status of the certificate will change from *PENDING* to *OK*.

**3. Import the CA certificate:**

- a. Go to *System > Certificates* and select *Create/Import > CA Certificate*.
- b. Set the *Type* to *File*, upload the CA certificate file, then click *OK*. See [CA certificate on page 2527](#) for more information.

The CA certificate will be listed in the *CA Certificates* section of the certificates list.

## Configure your FortiGate to use the signed certificate

After the signed certificates have been imported, you can use it when configuring SSL VPN, for administrator GUI access, and for other functions that require a certificate.

**To configure your FortiGate to use the signed certificate for SSL VPN:**

1. Go to *VPN > SSL-VPN Settings*.
2. Set *Server Certificate* to the new certificate.
3. Configure other settings as needed.
4. Click *Apply*.

For more information on configuring SSL VPN, see [SSL VPN on page 1876](#) and the [Setup SSL VPN](#) video in the Fortinet Video Library.

**To configure using the certificate for administrator GUI access in the CLI:**

```
config system global
    set admin-server-cert fortisslvpndemo
end
```

**To change the certificate that is used for administrator GUI access in the GUI:**

1. Go to *System > Settings*.
2. In the *Administration Settings* section, change *HTTPS server certificate* as needed.
3. Click *Apply*. You will be logged out of FortiOS.

## Microsoft CA deep packet inspection

In most production environments, you want to use a certificate issued by your own PKI for deep packet inspection (DPI).

An existing Microsoft root CA can be used to issue a subordinate CA (sub CA) certificate that is installed as a DPI certificate on the FortiGate.

Complete the following steps to create your own sub CA certificate and use it for DPI:

1. [Create a Microsoft sub CA certificate](#)
2. [Export the certificate and private key](#)
3. [Import the certificate and private key into the FortiGate](#)
4. [Configure a firewall policy for DPI](#)
5. [Verify that the sub CA certificate is being used for DPI](#)

The FortiGate firewall uses information in the original web server certificate, then issues a new certificate signed by the Microsoft DPI certificate. The FortiGate then sends this certificate with the issuing DPI certificate to the client's web browser when the SSL session is being established.

The browser verifies that the certificate was issued by a valid CA, then looks for the issuing CA of the Microsoft DPI certificate in its local trusted root CA store to complete the path to trusted root CA.

The Microsoft CA root certificate is normally deployed to all client PCs in the Windows domain, so the client can complete the certificate path up to a trusted root CA. The FortiGate now controls and can inspect the two HTTPS sessions: one with the external web server, and one with the client PC.


## Create a Microsoft sub CA certificate

A Microsoft sub CA certificate can be created on a Microsoft CA server, or remotely using a web browser.


Creating a certificate remotely requires that the web enrollment option is configured on the Microsoft CA server. Remote certificate requests require HTTPS; requests are not allowed with HTTP.

### To create a Microsoft sub CA certificate remotely:

1. Open a web browser and go to one of the following URLs:
  - <https://<FQDN-CA-server>/CertSrv>
  - <https://<IP-CA-server>/CertSrv>.
2. Log in to a domain administrator account that has web enrollment rights.

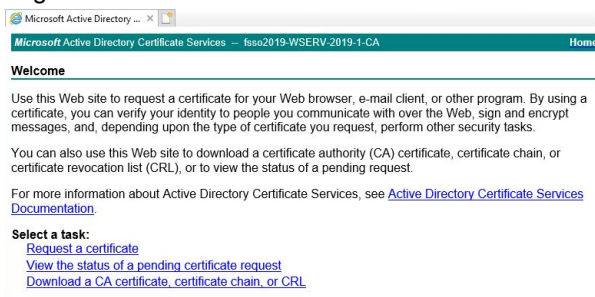

3. Click *Request a certificate*.
4. Click *advanced certificate request*.

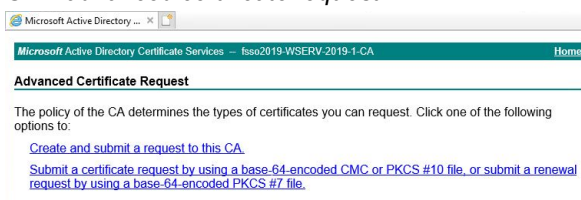

5. Click *Create and submit a request to this CA*, then click *Yes* in the *Web Access Confirmation* warning.
6. For the *Certificate Template*, select *Subordinate Certification Authority*.
7. Enable *Mark keys as exportable*.

8. Fill out the remaining information according to your security policy.


The screenshot shows the 'Advanced Certificate Request' window in the Microsoft Active Directory Certificate Services console. The window is titled 'Microsoft Active Directory Certificate Services - fso2019-WSERV-2019-1-CA'. The 'Certificate Template' dropdown is set to 'Subordinate Certification Authority'. Under 'Identifying Information For Offline Template', the fields are filled with: Name: fso2019-subc, E-Mail: support@fso2019.com, Company: MyCompany, Department: , City: Burnaby, State: BC, and Country/Region: CA. Under 'Key Options', 'Create new key set' is selected, CSP is 'Microsoft Enhanced Cryptographic Provider v1.0', Key Usage is 'Signature', Key Size is '2048', 'Automatic key container name' is selected, 'Mark keys as exportable' is checked, and 'Enable strong private key protection' is unchecked. Under 'Additional Options', 'Request Format' is set to 'PKCS10'.

9. Submit the request.
10. Click *Yes* in the *Web Access Confirmation* warning.
11. Click *Install this certificate*.
- The certificate and private key are located in the current user's certificate store.

## Export the certificate and private key

To export the certificate and private key:


1. Open the Microsoft Management Console (MMC) and add the *Certificate Snap-in*.
2. Go to the user's certificate store to locate the sub CA certificate that you just installed.

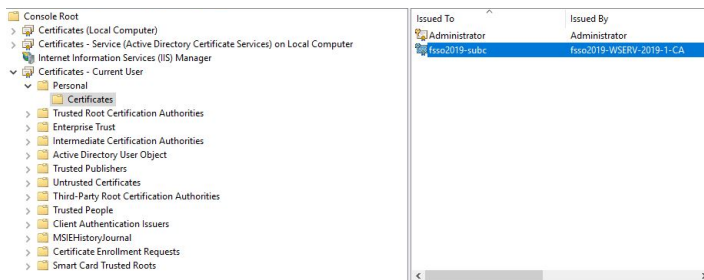

3. Right-click the certificate and select *All Tasks > Export*.
4. Click *Next* to start the *Microsoft Certificate Export Wizard*.
5. Follow the steps in the wizard:
  - When asked, select *Yes, export the private key*.
  - Only the PKCS #12 (.PFX) format is available, and it requires a password.
  - When selecting the encryption type, select *TripleDES-SHA1* if you are using an older version of FortiOS (5.6.9).



and earlier). Otherwise, select *AES256-SHA256*.

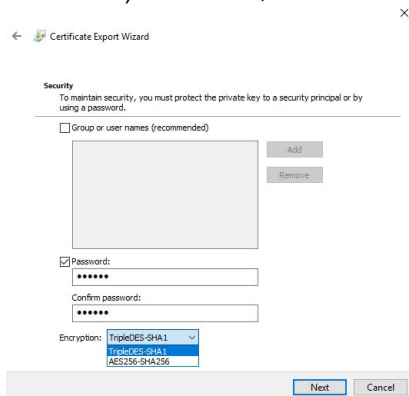

6. Complete the wizard, and save the DPI certificate to a local folder.


## Import the certificate and private key into the FortiGate

The certificate can be imported from the local computer using the GUI, or from a TFTP server using the CLI.

After importing the certificate, you can view it in the GUI to verify that it was successfully imported.

### To import the certificate and private key into the FortiGate in the GUI:

1. Go to *System > Certificates* and select *Create/Import > Certificate*.
2. Click *Import Certificate*.
3. Set *Type* to *PKCS #12 Certificate*.
4. Click *Upload*, and locate the certificate on the management computer.
5. Enter the password, then confirm the password.
6. Optionally, customize the *Certificate name*.

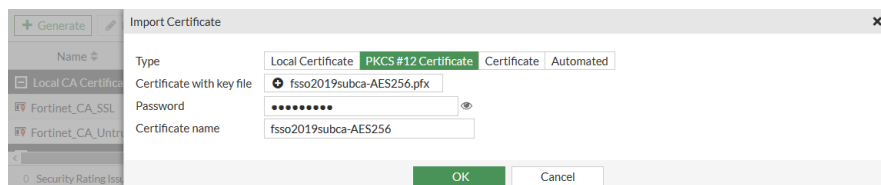

7. Click *OK*.

### To import the certificate and private key into the FortiGate in the CLI:

```
execute vpn certificate local import tftp fsso2019subca-AES256.pfx <tftp_IP> p12 <password>
```

### To verify that the certificate was imported:

1. Go to *System > Certificates*.
2. Locate the newly imported certificate in the table.
3. Select the certificate and click *View Details* to view the certificate details.

## Configure a firewall policy for DPI

The certificate is used in an SSL/SSH inspection profile that is then used in a firewall policy.

### To configure a firewall policy for DPI:

1. Go to *Security Profiles > SSL/SSH Inspection* and click *Create New*.
2. Configure the inspection profile, selecting the new certificate

3. Click *Apply*.
4. Go to *Policy & Objects > Firewall Policy*.
5. Create a new policy, or edit an existing policy.
6. In the *SSL Inspection* field, select the new SSL inspection profile.

7. Configure the remaining settings as needed.
8. Click *OK*.

## Verify that the sub CA certificate is being used for DPI

You can verify that the certificate is being used for resigning web server certificates when a user connects to an external HTTPS website.

**To verify that the certificate is being used:**

1. On a client PC that is behind the FortiGate, go to an external HTTPS website.  
When connecting to the website, no certificate warning should be shown.
2. In your web browser, view the certificate and certificate path.  
The methods for doing this vary depending on the browser. See your browsers documentation for information.

## Administrative access using certificates

Certificates can be used for administrative authentication.

Generated key pairs can also be used for this authentication. See [Public key SSH access on page 2234](#) for information about generating a key pair.

**To log in to the FortiGate with a certificate private key:**

1. On the PC, generate a certificate.
2. In FortiOS, import the PEM file for the remote certificate:

```
# execute vpn certificate remote import tftp certificate.pem 172.16.200.55
```

3. Display the imported remote certificate:

```
config certificate remote
  edit "REMOTE_Cert_1"
  next
end
```

4. Apply the remote certificate to the administrative user:

```
config system admin
  edit "admin1"
    set accprofile "prof_admin"
    set vdom "root"
    set ssh-certificate "REMOTE_Cert_1"
    set password *****
  next
end
```

5. On the PC, verify that the administrator can log in to the FortiGate with the SSH certificate:

```
root@PC05:~# ssh -i certificate-private.pem admin1@172.16.200.1
FortiGate-101F $ get system status
Version: FortiGate-101F v7.0.2,build0234,211019 (GA)
```

## Creating certificates with XCA

This topic explains how to generate various certificates to be used in conjunction with a FortiGate, including:

- CA certificate
  - Signing server and client certificates
  - Issuing subordinate CAs for deep inspection

- Server certificate
  - SSL/TLS web administration authentication
  - VPN authentication
  - Internal SSL server protection
- Client certificate
  - End user authentication for SSL or IPsec VPN

XCA is an x509 certificate generation tool that handles RSA, DSA, and EC keys, as well as certificate signing requests (PKCS #10) and CRLs.



There are several options for generating and managing certificates. This topic covers basic certificate generation for XCA. It is not a comprehensive guide to its application and does not explore all options available when generating a certificate.

---

## Creating the XCA database

Before creating any certificates, you must create an XCA database to group the certificates in. You should use a different database for each PKI you create.

### To create the database:

1. Go to *File > New Database*.
2. Select a directory to store the created certificates and keys.
3. Enter a name. The provided password encrypts the private keys and is used to access the XCA database in the future.

The remaining procedures in this topic assume you are using this XCA database.

## Creating a CA certificate

A CA certificate marks the root of a certificate chain. If this CA certificate is trusted by an end entity, any certificates signed by the CA certificate are also trusted.

**To create a CA certificate:**

1. Click the *Certificates* tab, then click *New Certificate*.
2. Edit the *Source* tab:
  - a. Set *Template for the new certificate* to *[default] CA*.
  - b. Click *Apply extensions*.

The screenshot shows the 'Create x509 Certificate' dialog box with the following settings:

- Signing request:**
  - ☐ Sign this Certificate signing request
  - ☒ Copy extensions from the request
  - ☐ Modify subject of the request
- Signing:**
  - ☒ Create a self signed certificate
  - ☐ Use this Certificate for signing
- Signature algorithm:** SHA 256
- Template for the new certificate:** [default] CA

Buttons at the bottom: OK, Cancel, Help. A button labeled 'Apply extensions' is highlighted in the 'Template for the new certificate' section.

3. Edit the *Subject* tab:
  - a. Enter an *Internal Name* to reference this certificate within XCA.
  - b. Enter a *commonName*.
  - c. Optionally, click *Add* to add other distinguished name fields.
  - d. Since this XCA database does not contain any keys yet, click *Generate a new key*. The *Private key* field is now

populated.

4. Optionally, edit the *Extensions* tab:
  - a. Adjust the *Time range* if needed.
  - b. Click *Apply*.
5. Click *OK*.

## Issuing a subordinate CA certificate for deep inspection

Subordinate CA certificates are similar to CA certificates because they are used to sign other certificates to establish trust of the signed certificate's content. This trust of the signed certificate is only valid if the subordinate CA is also trusted by the client.

When performing deep inspection on a FortiGate, the FortiGate proxies the connection between the endpoint and the server. This is done transparently so that the end user believes they are communicating with the server, and the server with the client. To do this, when the webpage is requested by a client, the FortiGate must present a certificate that matches the requested website and is trusted by the client.

The certificate presented by the FortiGate is generated on-demand to match the requested website and is signed by this subordinate CA to establish trust with the requesting endpoint. The subordinate CA must be installed on the FortiGate (with the private key) and on the client device (without the private key).

A subordinate CA is used in place of a CA so that it may be revoked as necessary. This is critical since the subordinate CA's private key is exported and becomes susceptible of being compromised. If the CA private key becomes compromised, you would be forced to re-create your entire PKI with a new root CA because root CAs cannot be revoked. See [Microsoft CA deep packet inspection on page 2536](#) for more information about using subordinate CA certificates.

### To issue a subordinate CA certificate for deep inspection:

1. Click the *Certificates* tab, then click *New Certificate*.
2. Edit the *Source* tab:
  - a. Set *Use this Certificate for signing* to the CA created previously.
  - b. Set *Template for the new certificate* to *[default] CA*.
  - c. Click *Apply extensions*.
3. Edit the *Subject* tab:
  - a. Enter an *Internal Name* to reference this certificate within XCA.
  - b. Enter a *commonName*.
  - c. Optionally, click *Add* to add other distinguished name fields.
  - d. Click *Generate a new key* to create a new private key for the subordinate CA.

The screenshot shows the 'Create x509 Certificate' dialog box with the 'Subject' tab selected. The 'Internal Name' field contains 'VF\_sub\_CA'. The 'Distinguished name' section includes fields for 'countryName' (US), 'stateOrProvinceName' (PA), 'localityName' (Scranton), and 'commonName' (VF\_sub\_CA). The 'Private key' section shows 'VF\_sub\_CA (RSA:2048 bit)' selected, with the 'Generate a new key' button highlighted. The 'Add' and 'Delete' buttons are also visible in the 'Distinguished name' section.

4. Optionally, edit the *Extensions* tab:
  - a. Adjust the *Time range* if needed.
  - b. Click *Apply*.
5. Click *OK*.

## Creating a server host certificate

When a CA signs a host certificate, that CA is vouching for the credentials in the certificate. These credentials are what identifies the host.

Some endpoints can generate a certificate signing request (CSR). A CSR is a certificate outline that specifies the details of the endpoint, including its public key. This allows the CA to review the details and sign the request if they are true. This request is then returned or uploaded to the generating endpoint to be used.

Since some endpoints cannot generate their own CSR, you can create the certificate manually in XCA. If you already have a CSR, use the *Certificate signing requests* tab to import and then sign it.

**To create a server host certificate:**


1. Click the *Certificates* tab, then click *New Certificate*.
2. Edit the *Source* tab:
  - a. Set *Template for the new certificate* to *[default] TLS\_server*.
  - b. Click *Apply extensions*.
  - c. In the *Signing* section, select *Use this Certificate for signing* and select the subordinate CA certificate.
3. Edit the *Subject* tab:
  - a. Enter an *Internal Name* to reference this certificate within XCA.
  - b. Enter the distinguished name fields as needed.
  - c. Click *Generate a new key*.

The screenshot shows the 'Create x509 Certificate' dialog box with the 'Subject' tab selected. The 'Internal Name' field contains 'HQ\_FGT'. The 'Distinguished name' section includes fields for 'countryName' (US), 'stateOrProvinceName' (PA), 'commonName' (HQ\_FGT), 'localityName' (Scranton), and 'organizationName'. The 'Private key' section shows 'HQ\_FGT (RSA:2048 bit)' selected, with a 'Generate a new key' button. The 'Add' and 'Delete' buttons are also visible in the 'Extensions' section.

4. Edit the *Extensions* tab:
  - a. For *X509v3 Subject Alternative Name*, enter *email:user@domain.tld*.
5. Click *OK*.



6. Click the *Certificates* tab to view the certificate.

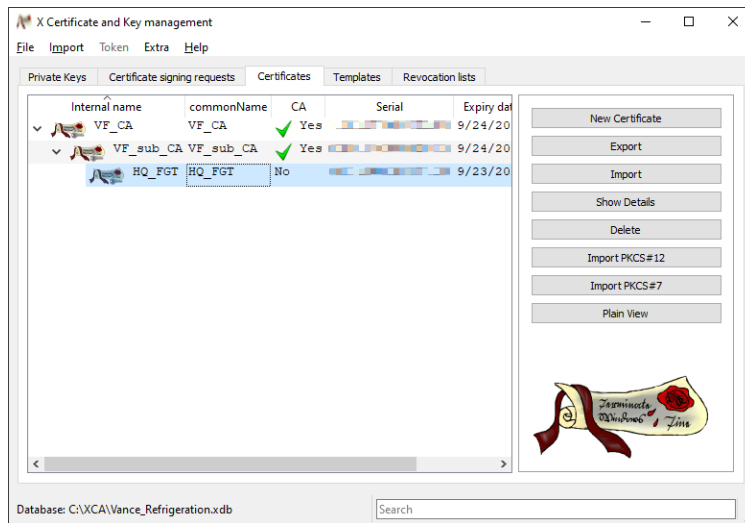

This certificate may be used to identify an SSL or TLS server by uploading the certificate and key pair to the server, such as when the FortiGate presents the administrative webpage or for SSL VPN authentication (see [Configure your FortiGate to use the signed certificate on page 2536](#)). Another use case for a server host certificate is to enable SSL server protection so the FortiGate simulates the real server and brokers the connection (see [Protecting an SSL server on page 1536](#)).

## Creating a client host certificate

A client host certificate is used to identify an end entity in a more secure way than a username and password. Once the client host certificate is generated, see [SSL VPN with certificate authentication on page 1925](#) for more information about using the certificate.

### To create a client host certificate:

1. Click the *Certificates* tab, then click *New Certificate*.
2. Edit the *Source* tab:
  - a. In the *Signing* section, select *Use this Certificate for signing* and select the CA or subordinate CA.
  - b. Set *Template for the new certificate* to *[default] TLS\_client*.
  - c. Click *Apply extensions*.
3. Edit the *Subject* tab:
  - a. Enter an *Internal Name* to reference this certificate within XCA.
  - b. Enter the distinguished name fields as needed.

- c. Click *Generate a new key*.

4. Click **OK**.
5. Click the **Certificates** tab. The FortiGate and client certificates are listed under the signing CA certificate and are ready to be exported.

6. Select a certificate and click **Export**.
7. Enter the file name and select an export format.
8. Click **OK**.

## Certificate formats

Certificate file formats indicate what is contained in the file, how it is formatted, and how it is encoded. See [Import a certificate on page 2522](#) for more information about which formats the FortiGate expects for a given certificate type.

## Security

The following topics provide information about security:

- [BIOS-level signature and file integrity checking on page 2549](#)
- [Real-time file system integrity checking on page 2553](#)

### BIOS-level signature and file integrity checking

The BIOS-level signature and integrity checking has been enhanced by enforcing each FortiOS GA firmware image, AV engine file, and IPS engine file to be dually-signed by the Fortinet CA and a third-party CA. The BIOS verifies that each file matches their secure hash as indicated by their certificates. Users are warned when there is a failed integrity check, and the system may be prevented from booting depending on the severity and the BIOS security level.

Signature checking occurs when the FortiOS firmware, AV, and IPS engine files are uploaded. This allows the FortiGate to warn users of potential risks involved with uploading an unauthenticated file.

The outcome of the signature and integrity check depends on the security level configured in BIOS and the certificate authority that signed the file.

The following table summarizes the use cases and the potential outcome based on the security level.

Use case	Certificate signed by		Outcome based on security level		
	Fortinet CA	Third-party CA	Level 2	Level 1	Level 0
GA-Certified (GA firmware, Beta firmware, Top3 final builds)	Yes	Yes	Accept	Accept	Accept
Non-GA certified (Special builds: Top3 and NPI quick builds)	Yes	No	Warning	Accept	Accept
Interim and Dev builds, or unknown build	No	Yes or No	Reject	Warning	Accept

The security levels on the BIOS are:

- Level 2: in order to operate normally, FortiOS requires all file signatures to match their secure checksums as indicated on both Fortinet and third-party CA signed certificates.
  - If a file has a Fortinet CA signed certificate but no third-party signed certificates, then FortiOS can still run but displays a warning in the GUI and CLI.
  - If a file has no valid certificate signed by the Fortinet CA, then FortiOS is not allowed to run.
- Level 1: in order to operate normally, FortiOS only requires all file signatures to match their secure checksums as indicated on the Fortinet CA signed certificate.
  - If a file has no valid certificate signed by the Fortinet CA, then FortiOS can still run but displays a warning in the GUI and CLI.
- Level 0 (not recommended): FortiOS does not perform code verification.

On FortiGates without supported BIOS security levels, the device acts like security level 1. For example, on a FortiGate-VM that does not have BIOS, the security level is defaulted to level 1.

### To verify the BIOS security level:

```
# get system status
Version: FortiGate-101F v7.2.5,build1517,230606 (GA.F)
Security Level: 2
Firmware Signature: certified
```

The following examples outline the different use cases when upgrading firmware and AV files on a FortiGate model that supports BIOS security levels, and a FortiGate model that does not support BIOS security levels.

For more information, see the [Fabric Management on page 2243](#) section and [Manual updates on page 2495](#).

## Upgrading on a device with BIOS security levels

The following use cases are applicable when upgrading firmware on a FortiGate with BIOS security levels. Firmware is upgraded using the *System > Fabric Management* page. In the following examples, the FortiOS version is upgraded from 7.2.4 to 7.2.5 and interim build numbers are used to demonstrate the functionality of this feature on a FortiGate 101F.

### Level 2

When upgrading with a dually-signed firmware image, FortiOS verifies the certificates and accepts the image. The following CLI output shows the messages displayed when a FortiGate is upgraded.

```
FortiGate_101F (global) # get system status
Version: FortiGate-101F v7.2.4,build1396,230131 (GA.F)
Firmware Signature: certified
Virus-DB: 1.00000(2018-04-09 18:07)
...
FortiGate_101F (global) # Image verification OK!
Firmware upgrade in progress ...

Done.

The system is going down NOW !!

Please stand by while rebooting the system.
Restarting system.
...

System is starting...

The config file may contain errors.
Please see details by the command 'diagnose debug config-error-log read'.

FortiGate_101F login: admin
Password:
Welcome!

FortiGate_101F (global) # get system status
Version: FortiGate-101F v7.2.5,build1517,230606 (GA.F)
```

Security Level: 2  
Firmware Signature: certified

When upgrading with an unsigned firmware image in the GUI, FortiOS is unable to verify the certificates and rejects the image. A notification is displayed that *This firmware image didn't pass the signature verification*.

 Image upgrade failed. This firmware image didn't pass the signature verification. 

When uploading a dually-signed IPS engine file on the *System > FortiGuard* page, FortiOS verifies the certificates and accepts the file. A notification is displayed (*Successfully upgraded database*).

 Successfully upgraded database 


When uploading an unsigned IPS engine file on the *System > FortiGuard* page, FortiOS is unable to verify the certificates and rejects the file. A notification is displayed that the device *Failed to upgrade database*.

 Failed to upgrade database 


## Level 1

When upgrading with a dually-signed firmware image, FortiOS verifies the certificates and accepts the image. No warning is displayed during the upgrade, or while the system is running in 7.2.5.

When upgrading with an unsigned firmware image in the GUI, FortiOS is unable to verify the certificates and the image fails verification. The upgrade will still occur. However, during the upgrade process, a warning dialog is displayed indicating that *This firmware failed signature validation*. The user can click *Continue* to upgrade the firmware.

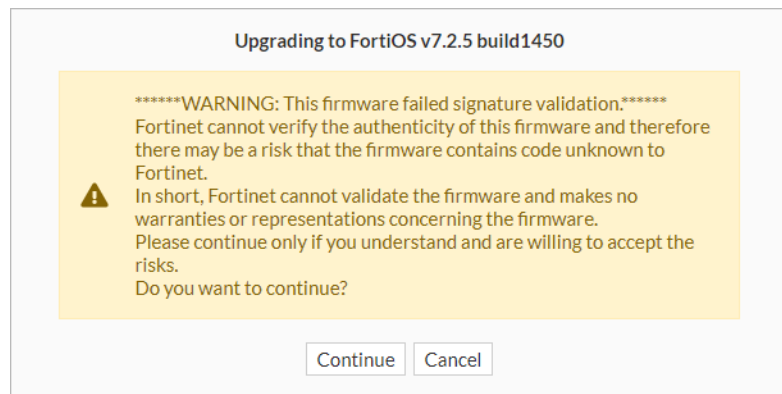


When the user logs in to the FortiGate running 7.2.5, a warning dialog is displayed indicating that the *Installed Firmware is Not Signed by Fortinet*. The user can click *I Understand The Risk* to log in.

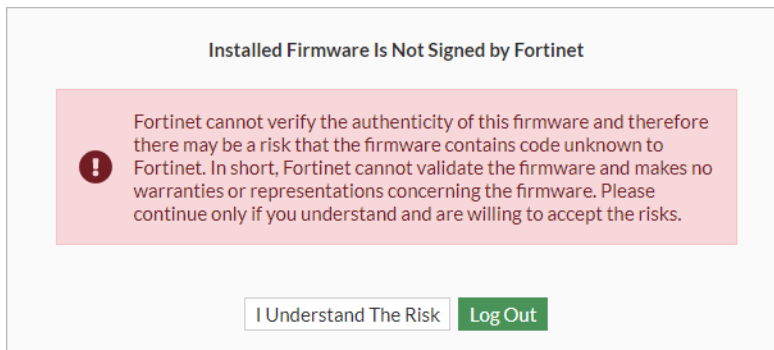


When the FortiGate is running unsigned firmware, warnings appear in the GUI and CLI.

 - Top banner: the unsigned firmware version is highlighted in red. Hovering over the unsigned firmware version displays a tooltip that the *Installed firmware is not signed by Fortinet*.




- **Dashboard > Status > System Information** widget: the unsigned firmware version is highlighted in red. Hovering over the unsigned firmware version displays a tooltip that the *Installed firmware is not signed by Fortinet*.

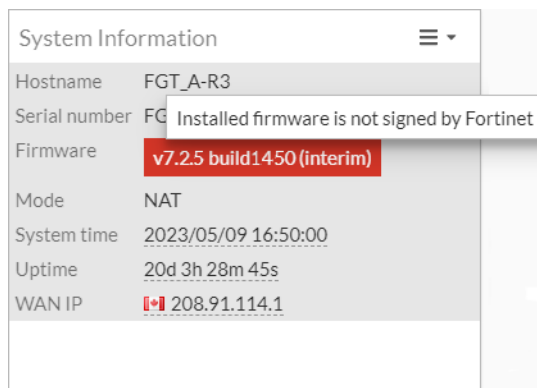

- Enter the following in the CLI to verify the firmware status:

```
# get system status
Version: FortiGate-VM64 v7.2.5,build1450,221120 (interim)
Security Level: 1
Firmware Signature: un-certified
Virus-DB: 91.03113(2023-05-09 15:26)
```

When running uploading an unsigned IPS engine file on the **System > FortiGuard** page, FortiOS is unable to verify the certificates and the file fails verification. A warning dialog is displayed indicating that *This package file has no signature for validation*, but the user can click **OK** to use the file.

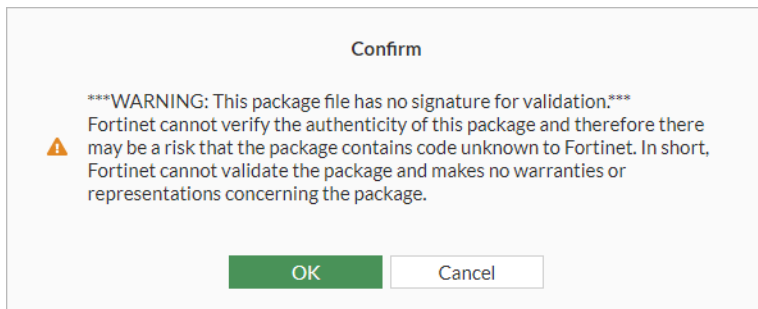

## Level 0

When upgrading with a dually-signed firmware image, FortiOS verifies the certificates and accepts the image. No verification is performed.

When upgrading with an unsigned firmware image in the GUI, FortiOS does not verify the certificates. No warnings are displayed that the firmware is unverified.

## Upgrading on a device without BIOS security levels

The following use cases are applicable when upgrading firmware and AV files on a FortiGate without BIOS security levels. Firmware is upgraded using the *System > Fabric Management* page, and AV files are upgraded using the *System > FortiGuard* page. A FortiGate 60E is used in these examples and acts like it has security level 1.

When upgrading from 7.2.4 to 7.2.5 with a dually-signed firmware image, FortiOS verifies the certificates and accepts the image.

When upgrading from 7.2.4 to 7.2.5 with an unsigned firmware image in the GUI, FortiOS is unable to verify the certificates and the image fails verification. A warning dialog is displayed indicating that *This firmware failed signature validation*, but the user can click *Continue* to use the firmware.

When running 7.2.5 and uploading an unsigned AV engine file on the *System > FortiGuard* page, FortiOS is unable to verify the certificates and the file fails verification. A warning dialog is displayed indicating that *This package file has no signature for validation*, but the user can click *OK* to use the file.

## Real-time file system integrity checking

Real-time file system integrity checking has two main purposes:

- Prevent unauthorized modification of important binaries.
- Detect unauthorized binaries and prevent them from running.

## How it works

When the FortiGate boots, the system performs a BIOS level integrity check on important internal files, the AV engine file, and the IPS engine file. These files are signed by the process described in [BIOS-level signature and file integrity checking on page 2549](#), and the BIOS verifies their signature against their certificates.

Once these files are verified to be authentic, the BIOS can boot the root filesystem and other executables and libraries. Once loaded, real-time protection begins. The important executables and binaries are protected from write access and

any modifications. It also blocks the kernel from loading any modules. Any unauthorized loading of modules is blocked. If violations are found, logs are triggered.

A hash of all executable binaries and libraries is taken and stored in memory. If there is a hash mismatch when attempting to run a binary, that binary is blocked from running, and the system is rebooted. A log will be generated with ID 20234.

If there is a missing hash when attempting to run a binary, then the system is rebooted. A log will be generated with ID 20223.

The system also runs a periodic check to verify the integrity of important binaries and AV and IPS engines.

## Log summary

The following logs are recorded when specific actions take place.

Log	Description
20230 - LOG_ID_SYS_SECURITY_WRITE_VIOLATION 432	The root filesystem is read only. Any modification triggers this log.
20231 - LOG_ID_SYS_SECURITY_HARDLINK_VIOLATION 432	An attacker trying to replace symlink triggers this log.
20232 - LOG_ID_SYS_SECURITY_LOAD_MODULE_VIOLATION 433	Only the kernel can load modules. Any unusual loading of modules triggers this log.
20233 - LOG_ID_SYS_SECURITY_FILE_HASH_MISSING 434	File hashes are generated for legitimate files during bootup. If a hash cannot be found, the file may be suspicious as it could be a new routine inserted by an attacker. The binary is blocked.
20234 - LOG_ID_SYS_SECURITY_FILE_HASH_MISMATCH 434	File hashes are generated for legitimate files during bootup. If a hash does not match when the file is exercised, it is an indication that it could have been modified by an attacker. The system is rebooted.

## Detection examples

### Example 1: system reboots due to mismatched hash

```
fos_ima: fos_process_appraise 110: Executable File(/bin/node) doesn't match previous hash,
it has been changed
Restarting system.
```

...

```
fos_ima: fos_process_appraise 110: Executable File(/lib/libc.so.6) doesn't match previous
hash, it has been changed
Restarting system.
```

...

Logs similar to the following are captured:



```
date="2023-06-16" time="12:01:44" id=7245222014288399309 bid=471609558 dvid=6533
itime=1686909705 euid=3 epid=3 dsteuid=3 dstepid=3 logver=604132092 logid="0100020234"
type="event" subtype="system" level="alert" msg="Hash of executable file(/bin/init) doesn't
match the previous." logdesc="Integrity check of Run/loading Executable File failed without
Integrity measure" severity="alert" eventtime=1686909705825483706 tz="+0200"
devid="xxxxxxxx" vd="root" devname="xxxxxxxx"
```

```
date="2023-06-15" time="09:57:54" id=7244819017507013700 bid=470303007 dvid=1431
itime=1686815875 euid=3 epid=3 dsteuid=3 dstepid=3 logver=604132092 logid="0100020234"
type="event" subtype="system" level="alert" msg="Hash of executable file(/lib/libc.so.6)
doesn't match the previous." logdesc="Integrity check of Run/loading Executable File failed
without Integrity measure" severity="alert" eventtime=1686815874936267770 tz="+0200" devid="
xxxxxxxx " vd="root" devname=" xxxxxxxx"
```

## Example 2: suspected compromise due to an observed indicator of compromise (IoC)

```
fos_ima: fos_process_appraise 99: Suspicious Executable File(/data2/libcrashpad.so) is
missing hash
...
fos_ima: fos_process_appraise 99: Suspicious Executable File(/data2/flatkc_info) is missing
hash
...
```

No logs are found.

## Corrective action

In the previous examples where a mismatched or missing hash occurs, alert technical support straight away so that they may gather information to start a forensic analysis with our internal PSIRT team. There are two possible outcomes:

1. The firewall is reporting a false positive, in which a bug causes a mismatched or missing hash.  
Once verified by technical support, the corrective action may be to upgrade to a newer build where the bug is fixed.
2. An actual compromise has occurred, or is occurring.  
The system could be blocking an offending binary that causes the system to malfunction, or the system could reboot to protect itself from compromise.

In either case, contact technical support for further forensic analysis. If an IoC is detected and it is determined that the persistent threat resides on the FortiGate, a reflash and reload of the firmware may be recommended.

## Configuration scripts

Configuration scripts are text files that contain CLI command sequences. They can be created using a text editor or copied from a CLI console, either manually or using the *Record CLI Script* function.

Scripts can be used to run the same task on multiple devices. For example, if your devices use the same security policies, you can enter or record the commands to create those policies in a script, and then run the script on each device. You could also create the policies in the GUI, and then copy and paste the CLI commands from the *CLI Console* using the *show* command.

If the FortiGate is managed by FortiManager, scripts can be uploaded to FortiManager and then run on any other FortiGates that are managed by that FortiManager. See [Scripts](#) in the [FortiManager Administration Guide](#).



A comment line in a script starts with the number sign (#). Comments are not executed.

### To run a script using the GUI:

1. Click on your username and select *Configuration > Scripts*.
2. Click *Run Script*.
3. Select the text file containing the script on your management computer, then click *OK*.  
The script runs immediately, and the *Script Execution History* table is updated, showing if the script ran successfully.

Run Script	Delete	Search	Q
Name	Result	Time	
Local			
Retro.txt	Success	2021/05/04 15:33:21	
ReplicmtMsgGroups.txt	Success	2021/05/04 15:33:08	
GetSystemStatus.txt	Success	2021/05/04 15:32:57	

## Workspace mode

Workspace mode allows administrators to make a batch of changes that are not implemented until the transaction is committed. Prior to committing, the changes can be reverted or edited as needed without impacting current operations.

When an object is edited in workspace mode it is locked, preventing other administrators from editing that object. A warning message will be shown to let the administrator know that the object is currently being configured in another transaction.

All administrators can use workspace mode; their permissions in workspace mode are the same as defined in their account profile.

A workspace mode transaction times out after five minutes if there is no activity. When a transaction times out, all changes are discarded. A warning message will be shown to let the administrator know that a timeout is imminent, or has already happened:

```
config transaction id=1 will expire in 30 seconds
config transaction id=1 will expire in 20 seconds
config transaction id=1 will expire in 10 seconds
config transaction id=1 has expired
```

The following commands are not changeable in a workspace transaction:

```
config system console
config system resource-limits
config system elbc
config system global
  set split-port
  set vdom-admin
  set management-vdom
  set wireless-mode
  set internal-switch-mode
```

```
end
config system settings
    set opmode
end
config system npu
config system np6
config system wireless
    set mode
end
config system vdom-property
config system storage
```

The `execute batch` command cannot be used in or to start workspace mode.

### To use workspace mode:

**1. Start workspace mode:**

```
execute config-transaction
```

Once in workspace mode, the administrator can make configuration changes, all of which are made in a local CLI process that is not viewable by other processes.

**2. Commit configuration changes:**

```
execute config-transaction commit
```

After performing the commit, the changes are available for all other processes, and are also made in the kernel.

**3. Abort configuration changes:**

```
execute config-transaction abort
```

If changes are aborted, no changes are made to the current configuration or the kernel.

### Diagnose commands

```
diagnose sys config-transaction show txn-meta
```

Show config transaction meta information. For example:

```
# diagnose sys config-transaction show txn-meta
txn_next_id=8, txn_nr=2
```

```
diagnose sys config-transaction show txn-info
```

Show config transaction information. For example:

```
# diagnose sys config-transaction show txn-info
current_jiffies=680372

txn_id=6, expire_jiffies=706104, clicmd_fpath='/dev/cmdb/txn/6_EiLl9G.conf'
txn_id=7, expire_jiffies=707427, clicmd_fpath='/dev/cmdb/txn/7_UXK6wY.conf'
```

```
diagnose sys config-transaction show txn-entity
```

Show config transaction entity. For example:

```
# diagnose sys config-transaction show txn-entity
vd='global', cli-node-oid=37(system.vdom), txn_id=7. location: fileid=0, storeid=0,
pgnr=0, pgidx=0
vd='global', cli-node-oid=46(system.interface), txn_id=7. location: fileid=3,
storeid=0, pgnr=0, pgidx=0
```

```
diagnose sys config-transaction show txn-lock
```

Show transaction lock status. For example:

```
# diagnose sys config-transaction show txn-lock
type=-1, refcnt=0, value=256, pid=128
```

```
diagnose sys config-transaction status
```

Show the transaction status in the current CLI.

## Custom languages

Custom languages can be uploaded and used for SSL VPN web portals. Custom languages must be enabled before they can be added in the GUI.

### To enable custom languages:

```
config system global
    set gui-custom-language enable
end
```

### To configure a custom language in the GUI:

1. Go to *System > Custom Languages* and click *Create New*.
2. Enter the name of the language.
3. Optionally, enter a comment.
4. Click *Upload* and upload the language JSON file from your management computer.

5. Click *OK*.

### To configure a language in an SSL VPN web portal in the GUI:

1. Go to *VPN > SSL-VPN Portals*.
2. Edit an existing portal, or click *Create New* to create a new one.
3. Enable *Enable Web Mode*, then select the language from the *Language* field.

4. Click *OK*.

**To configure a custom language in the CLI:**

```
config system custom-language
    edit <language>
        set filename <file>
    next
end
```

**To configure a language in an SSL VPN web portal in the GUI:**

```
config vpn ssl web portal
    edit <portal>
        set web-mode enable
        set custom-lang <language>
    next
end
```

## RAID

Most FortiGate devices with multiple disk drives (SSD or HDD) can be configured to use RAID.



Enabling or disabling RAID, and changing the RAID level, erases all data on the log disk and reboots the device.

**To verify that the FortiGate has multiple disks:**

- List disk devices and partitions:

```
# execute disk list

Disk SSD1 ref: 255 223.6GiB type: SSD [ATA INTEL SSDSC2KB24] dev: /dev/sda
    partition ref: 1 220.1GiB, 219.0GiB free mounted: Y label: LOGUSEDXA707476A dev:
/dev/sda1 start: 2048

Disk SSD2 ref: 16 223.6GiB type: SSD [ATA INTEL SSDSC2KB24] dev: /dev/sdb
    partition ref: 17 62.7GiB, 62.4GiB free mounted: Y label: WANOPTXX1FEBBFA1 dev:
/dev/sdb1 start: 2048
    partition ref: 18 63.7GiB, 63.7GiB free mounted: N label: dev: /dev/sdb2 start:
133625856
    partition ref: 19 85.0GiB, 85.0GiB free mounted: N label: dev: /dev/sdb3 start:
267249664
```

- Display information about all of the disks:

```
# diagnose hardware deviceinfo disk

Disk SSD1 ref: 255 223.6GiB type: SSD [ATA INTEL SSDSC2KB24] dev: /dev/sda
    partition ref: 1 220.1GiB, 219.0GiB free mounted: Y label: LOGUSEDXA707476A dev:
/dev/sda1 start: 2048

Disk SSD2 ref: 16 223.6GiB type: SSD [ATA INTEL SSDSC2KB24] dev: /dev/sdb
```

```
partition ref: 17 62.7GiB, 62.4GiB free mounted: Y label: WANOPTXX1FEBBFA1 dev:
/dev/sdb1 start: 2048
partition ref: 18 63.7GiB, 63.7GiB free mounted: N label: dev: /dev/sdb2 start:
133625856
partition ref: 19 85.0GiB, 85.0GiB free mounted: N label: dev: /dev/sdb3 start:
267249664

Disk SYSTEM(boot) 14.9GiB type: SSD [ATA 16GB SATA Flash] dev: /dev/sdc
partition 247.0MiB, 155.0MiB free mounted: N label: dev: /dev/sdc1(boot) start: 1
partition 247.0MiB, 154.0MiB free mounted: Y label: dev: /dev/sdc2(boot) start: 524289
partition ref: 35 14.2GiB, 14.0GiB free mounted: Y label: dev: /dev/sdc3 start:
1048577

Disk USB-6(user-usb) ref: 48 28.6GiB type: USB [SanDisk Ultra] dev: /dev/sdd
<<<<<===this info for usb disk because i have usb disk on FGT301E
partition ref: 49 28.6GiB, 28.6GiB free mounted: Y label: dev: /dev/sdd1 start: 0

Total available disks: 4
Max SSD disks: 2 Available storage disks: 2
```

### To check the RAID status:

- RAID enabled:

```
# execute disk raid status
RAID Level: Raid-1
RAID Status: OK (Background-Synchronizing) (9%)
RAID Size: 239GB

Disk 1: OK Used 228GB
Disk 2: OK Used 228GB
```

- RAID disabled:

```
# execute disk raid status
RAID Level: Unavailable
RAID Status: Unavailable
RAID Size: 0GB

Disk 1: OK Not-Used 228GB
Disk 2: OK Not-Used 228GB
```

### To enable RAID:

```
# execute disk raid enable
This will erase all data on the log disk, and system will reboot!
Do you want to continue? (y/n)y

Dependent storage SSD2 removed.
Dependent storage SSD1 removed.
Raid-0 created with 2 disks.

Performing raid on the requested disk(s) and rebooting, please wait.. .

Configuring raid...
- unmounting /data2 : ok
- unmounting /var/log : ok
```

```
- unmounting /usb : ok
- unmounting /var/storage/SSD2-WANOPTXX0EA0EF17 : ok
```

```
Formatting the disk...
- unmounting /usb : ok
Formatting /dev/md0 ... done
```

The system is going down NOW !!

Please stand by while rebooting the system.  
Restarting system.

### To rebuild the RAID:

```
# execute disk raid rebuild
```

### To rebuild the RAID to another level:

#### 1. Check the supported RAID levels:

```
# execute disk raid rebuild-level
<RAID level> supported: Raid-0, Raid-1
```

#### 2. Rebuild the RAID to the required level:

```
# execute disk raid rebuild-level Raid-1
This will erase all data on the log disk, and system will reboot!
Do you want to continue? (y/n)y
```

```
Dependent storage RAID removed.
Raid-1 created with 2 disks.
```

Performing raid on the requested disk(s) and rebooting, please wait...

```
Configuring raid...
- unmounting /data2 : ok
- unmounting /var/log : ok
- unmounting /usb : ok
```

```
Formatting the disk...
- unmounting /usb : ok
Formatting /dev/md0 ... done
```

The system is going down NOW !!

Please stand by while rebooting the system.  
Restarting system.

### To disable RAID:

```
# execute disk raid disable
This will erase all data on the log disk, and system will reboot!
Do you want to continue? (y/n)y
```

```
Dependent storage RAID removed.
```

Performing format on the requested disk(s) and rebooting, please wait...

Configuring raid...

- unmounting /data2 : ok
- unmounting /var/log : ok
- unmounting /usb : ok

Formatting the disk...

Partitioning and formatting /dev/sda label LOGUSEDX3D36836D ... done

Partitioning and formatting /dev/sdb label WANOPTXX1FEBBFA1 ...

Sending request for partno=0 start=2048 stop=133624230

Sending request for partno=1 start=133625856 stop=267248460

Sending request for partno=2 start=267249664 stop=445414150

done

The system is going down NOW !!

Please stand by while rebooting the system.

Restarting system.

FortiGate-301E (11:11-04.30.2018)

.

Reading boot image 3017355 bytes.

Initializing firewall...

System is starting...

## FortiGate encryption algorithm cipher suites

FortiGates use SSL/TLS encryption for HTTPS and SSH administrative access, and SSL VPN remote access. When establishing an SSL/TLS or SSH connection, you can control the encryption level and the ciphers that are used in order to control the security level.

### HTTPS access

HTTP administrative access encryption is controlled using the following commands:

```
config system global
    set strong-crypto {enable | disable}
    set admin-https-ssl-versions {tlsv1-1 tlsv1-2 tlsv1-3}
    set admin-https-ssl-ciphersuites {<cipher_1> ... <cipher_n>}
    set admin-https-ssl-banned-ciphers {<cipher_1> ... <cipher_n>}
end
```

When strong encryption is enabled, only TLS 1.2 and TLS 1.3 are allowed. If strong encryption is then disabled, TLS 1.1 has to be manually enabled.

Setting `admin-https-ssl-ciphersuites` controls which cipher suites are offered in TLS 1.3. TLS 1.2 and lower are not affected by this command. To disable all TLS 1.3 cipher suites, remove TLS1-3 from `admin-https-ssl-versions`.

Setting `admin-https-ssl-banned-ciphers` controls which cipher technologies will not be offered for TLS 1.2 and lower.



Specific cipher suites are supported by each TLS version:

TLS version	Supported cipher suites	
TLS 1.1 <sup>1</sup>	ECDHE-RSA-AES256-SHA <sup>1</sup>	AES256-SHA <sup>1</sup>
	ECDHE-RSA-AES128-SHA <sup>1</sup>	AES128-SHA <sup>1</sup>
TLS 1.2	ECDHE-RSA-AES256-GCM-SHA384	AES256-GCM-SHA384 <sup>1</sup>
	ECDHE-RSA-AES128-GCM-SHA256	AES128-GCM-SHA256 <sup>1</sup>
	ECDHE-RSA-CHACHA20-POLY1305	AES256-SHA256
	ECDHE-RSA-AES256-SHA384	AES128-SHA256
	ECDHE-RSA-AES128-SHA256	AES256-SHA <sup>1</sup>
	ECDHE-RSA-AES256-SHA <sup>1</sup>	AES128-SHA <sup>1</sup>
	ECDHE-RSA-AES128-SHA <sup>1</sup>	
TLS 1.3	TLS-AES-128-GCM-SHA256	TLS-AES-128-CCM-8-SHA256
	TLS-AES-256-GCM-SHA384	TLS-CHACHA20-POLY1305-SHA256
	TLS-AES-128-CCM-SHA256	

<sup>1</sup> Disabled if strong encryption (`strong-crypto`) is enabled.

## SSH access

SSH access encryption is controlled using the following command:

```
config system global
    set admin-ssh-vl {enable | disable}
    set strong-crypto {enable | disable}
    set ssh-enc-algo <algo_1> [<algo_2> ... <algo_n>]
    set ssh-kex-algo <algo_1> [<algo_2> ... <algo_n>]
    set ssh-mac-algo <algo_1> [<algo_2> ... <algo_n>]
end
```

The algorithms available when configuring `set ssh-enc-algo` are affected by `set strong-crypto` as follows:

Strong encryption setting	Supported ciphers	
Enabled	chacha20-poly1305@openssh.com	aes256-ctr
	aes256-gcm@openssh.com	

Strong encryption setting	Supported ciphers	
Disabled	chacha20-poly1305@openssh.com	aes128-ctr
	aes192-ctr	aes256-ctr
	arcfour256	arcfour128
	aes128-cbc	3des-cbc
	blowfish-cbc	cast128-cbc
	aes192-cbc	aes256-cbc
	arcfour	rijndael-cbc@lysator.liu.se
	aes128-gcm@openssh.com	aes256-gcm@openssh.com

The following options are available for the `ssh-kex-algo` algorithm based on the strong encryption setting:

Strong encryption setting	Supported ciphers	
Enabled	diffie-hellman-group-exchange-sha256	curve25519-sha256@libssh.org
	ecdh-sha2-nistp256	ecdh-sha2-nistp384
	ecdh-sha2-nistp521	
Disabled	diffie-hellman-group14-sha1	diffie-hellman-group-exchange-sha1
	diffie-hellman-group-exchange-sha256	curve25519-sha256@libssh.org
	ecdh-sha2-nistp256	ecdh-sha2-nistp384
	ecdh-sha2-nistp521	

The following options are available for the `ssh-mac-algo` algorithm based on the strong encryption setting:

Strong encryption setting	Supported ciphers	
Enabled	hmac-sha2-256	hmac-sha2-256-etm@openssh.com
	hmac-sha2-512	hmac-sha2-512-etm@openssh.com

Strong encryption setting	Supported ciphers	
Disabled	hmac-md5	hmac-md5-etm@openssh.com
	hmac-md5-96	hmac-md5-96-etm@openssh.com
	hmac-sha1	hmac-sha1-etm@openssh.com
	hmac-sha2-256	hmac-sha2-256-etm@openssh.com
	hmac-sha2-512	hmac-sha2-512-etm@openssh.com
	hmac-ripemd160	hmac-ripemd160@openssh.com
	hmac-ripemd160-etm@openssh.com	umac-64@openssh.com
	umac-128@openssh.com	umac-64-etm@openssh.com
	umac-128-etm@openssh.com	

## SSL VPN

For SSL VPN connections, the TLS versions and cipher suites are controlled using the following commands:

```
config vpn ssl setting
    set algorithm {high | medium | low}
    set ssl-max-proto-ver {tls1-0 | tls1-1 | tls1-2 | tls1-3}
    set ssl-min-proto-ver {tls1-0 | tls1-1 | tls1-2 | tls1-3}
    set ciphersuite {TLS-AES-128-GCM-SHA256 TLS-AES-256-GCM-SHA384 TLS-CHACHA20-POLY1305-
    SHA256 TLS-AES-128-CCM-SHA256 TLS-AES-128-CCM-8-SHA256}
end
```



Only cipher suites supported by TLS 1.3 can be set using the `set ciphersuite` command.

When the SSL VPN security level (`algorithm`) is set to high, only high levels are allowed. When it is set to medium, high and medium levels are allowed. When it is set to low, any level is allowed.

The strong encryption (`strong-crypto`) command has no effect on the SSL VPN encryption level or ciphers.

Specific cipher suites are supported by each TLS version:

TLS version	Supported cipher suites	
TLS 1.0	ECDHE-RSA-AES256-SHA	DHE-RSA-CAMELLIA128-SHA
	DHE-RSA-AES256-SHA	AES128-SHA
	DHE-RSA-CAMELLIA256-SHA	SEED-SHA <sup>1</sup>
	AES256-SHA	CAMELLIA128-SHA
	CAMELLIA256-SHA	ECDHE-RSA-DES-CBC3-SHA <sup>1*</sup>
	ECDHE-RSA-AES128-SHA	EDH-RSA-DES-CBC3-SHA <sup>1*</sup>
	DHE-RSA-AES128-SHA <sup>1</sup>	DES-CBC3-SHA <sup>1*</sup>
	DHE-RSA-SEED-SHA	
TLS 1.1	ECDHE-RSA-AES256-SHA	DHE-RSA-CAMELLIA128-SHA
	DHE-RSA-AES256-SHA	AES128-SHA
	DHE-RSA-CAMELLIA256-SHA	SEED-SHA <sup>1</sup>
	AES256-SHA	CAMELLIA128-SHA
	CAMELLIA256-SHA	ECDHE-RSA-DES-CBC3-SHA <sup>1*</sup>
	ECDHE-RSA-AES128-SHA	EDH-RSA-DES-CBC3-SHA <sup>1*</sup>
	DHE-RSA-AES128-SHA	DES-CBC3-SHA <sup>1*</sup>
	DHE-RSA-SEED-SHA <sup>1</sup>	

TLS version	Supported cipher suites	
TLS 1.2	ECDHE-RSA-AES256-GCM-SHA384	ECDHE-RSA-AES128-SHA
	ECDHE-RSA-AES256-SHA384	DHE-RSA-AES128-GCM-SHA256
	ECDHE-RSA-AES256-SHA	DHE-RSA-AES128-CCM8
	DHE-RSA-AES256-GCM-SHA384	DHE-RSA-AES128-CCM
	ECDHE-RSA-CHACHA20-POLY1305	AES128-CCM8
	DHE-RSA-CHACHA20-POLY1305	AES128-CCM
	DHE-RSA-AES256-CCM8	DHE-RSA-AES128-SHA256
	DHE-RSA-AES256-CCM	DHE-RSA-AES128-SHA
	DHE-RSA-AES256-SHA256	ECDHE-RSA-CAMELLIA128-SHA256
	DHE-RSA-AES256-SHA	DHE-RSA-CAMELLIA128-SHA256
	ECDHE-RSA-CAMELLIA256-SHA384	DHE-RSA-SEED-SHA <sup>1</sup>
	DHE-RSA-CAMELLIA256-SHA256	DHE-RSA-CAMELLIA128-SHA
	DHE-RSA-CAMELLIA256-SHA	AES128-GCM-SHA256
	AES256-GCM-SHA384	AES128-SHA256
	AES256-CCM8	AES128-SHA
	AES256-CCM	CAMELLIA128-SHA256
	AES256-SHA256	SEED-SHA <sup>1</sup>
	AES256-SHA	CAMELLIA128-SHA
	CAMELLIA256-SHA256	ARIA128-GCM-SHA256
	CAMELLIA256-SHA	DHE-RSA-ARIA128-GCM-SHA256
	ARIA256-GCM-SHA384	ECDHE-ARIA128-GCM-SHA256
	DHE-RSA-ARIA256-GCM-SHA384	ECDHE-RSA-AES256-GCM-SHA384
	ECDHE-ARIA256-GCM-SHA384	ECDHE-RSA-DES-CBC3-SHA <sup>1*</sup>
	ECDHE-RSA-AES128-GCM-SHA256	EDH-RSA-DES-CBC3-SHA <sup>1*</sup>
	ECDHE-RSA-AES128-SHA256	DES-CBC3-SHA <sup>1*</sup>
TLS 1.3	TLS_AES_256_GCM_SHA384	TLS_AES_128_CCM_SHA256
	TLS_CHACHA20_POLY1305_SHA256	TLS_AES_128_CCM_8_SHA256
	TLS_AES_128_GCM_SHA256	

<sup>1</sup> This cipher is not available when the SSL VPN security level (*algorithm*) is set to high.

\* This cipher is not available when the SSL VPN security level (*algorithm*) is set to medium.

## Additional features

Security hardening for other FortiOS features can also be achieved by managing the encryption level or ciphers. See [SSL algorithm security level on page 2569](#) for more information about different levels of security.



An asterisk (\*) represents the default values for each feature.

---

Some of these features are described next.

### WAN optimization

For WAN optimization tunnel connections, the encryption algorithm is controlled using the following commands:

```
config wanopt settings
    set tunnel-ssl-algorithm {high* | medium | low}
end
```

### Explicit FTP proxy

For explicit FTP proxy, the encryption algorithm is controlled using the following commands:

```
config ftp-proxy explicit
    set ssl-algorithm { high* | medium | low}
end
```

### Explicit web proxy

For explicit web proxy, the encryption algorithm is controlled using the following commands:

```
config web-proxy explicit
    set ssl-algorithm {high | medium | low*}
end
```

### SSL Server

For SSL server, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config firewall ssl-server
    edit <name>
        set ssl-algorithm {high* |medium | low}
        set ssl-max-version {tls-1.0* |tls-1.1 | tls-1.2 | tls-1.3}
        set ssl-min-version {tls-1.0 |tls-1.1 | tls-1.2 | tls-1.3*}
    next
end
```

### VIP

For VIP, the TLS versions and the encryption algorithm are controlled using the following commands:

```

config firewall vip
    set ssl-max-version {ssl-3.0|tls-1.1 | tls1-2 | tls-1.3* | client}
    set ssl-min-version {ssl-3.0|tls-1.1* | tls1-2 | tls-1.3 | client}
    set ssl-algorithm {high* | medium | low | custom}
    config ssl-cipher-suites
        edit <priority>
            set cipher {TLS-AES-128-GCM-SHA256 | TLS-AES-256-GCM-SHA384|...}
            set versions {option1}, {option2}, ...
        next
    end
    set ssl-server-max-version [ssl-3.0|tls-1.1 | tls1-2 | tls-1.3 | client*]
    set ssl-server-min-version [ssl-3.0|tls-1.1 | tls1-2 | tls-1.3 | client*]

    set ssl-server-algorithm {high | medium | low | custom | client* }
    config ssl-server-cipher-suites
        edit <priority>
            set cipher {TLS-AES-128-GCM-SHA256 | TLS-AES-256-GCM-SHA384|...}
            set versions {option1}, {option2}, ...
        next
    end
next
end

```



The commands `config ssl-server-cipher-suites` and `config ssl-cipher-suites` are only available when `set ssl-algorithm` and `set ssl-server-algorithm` are set to `custom`. It is recommended to exercise caution when manually configuring cipher suites, as selecting a cipher with an incompatible version may result in unexpected issues.

## VoIP

For VoIP, the TLS versions and the encryption algorithm are controlled using the following commands:

```

config voip profile
    edit <name>
        config sip
            set ssl-algorithm {high* |medium | low}
            set ssl-max-version {ssl-3.0 | tls-1.0* |tls-1.1 | tls-1.2 | tls-1.3}
            set ssl-min-version {ssl-3.0 | tls-1.0 |tls-1.1 | tls-1.2 | tls-1.3*}
        next
    end

```

## SSL algorithm security level

Option	Description
high	High encryption. Allow only AES and ChaCha.
medium	Medium encryption. Allow AES, ChaCha, 3DES, and RC4.
low	Low encryption. Allow AES, ChaCha, 3DES, RC4, and DES.

Option	Description
*custom	Custom encryption. Use <code>ssl-server-cipher-suites</code> to select the cipher suites that are allowed.
*client	Use the same encryption algorithms for both client and server sessions.



The SSL algorithm security levels marked with an asterisk (\*) are not supported across different FortiOS features.

## Other Products

The security level of communication to and from FortiOS can be managed by controlling the encryption level and ciphers used. See [Encryption algorithm security level on page 2571](#) for more information about different levels of security.



An asterisk (\*) represents the default value for each product.

Some products that commonly interact with the FortiGate device are listed next.

### syslog server

For syslog server, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config log syslogd setting
    set enc-algorithm {high-medium | high | low | disable*}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2}
end
config log syslogd override-setting
    set enc-algorithm {high-medium | high | low | disable*}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2}
end
```



The command `ssl-min-proto-version` set to default means that the system global setting will be followed.

### FortiCloud

For logging to FortiCloud, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config log fortiguard setting
    set enc-algorithm {high-medium | high* | low}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2}
end
```



## FortiAnalyzer Cloud

For FortiAnalyzer Cloud, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config log fortianalyzer-cloud setting
    set enc-algorithm {high-medium | high* | low}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2 | TLSv1-3}
end
```

## FortiAnalyzer

For FortiAnalyzer, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config log fortianalyzer setting
    set enc-algorithm {high-medium | high* | low}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2 | TLSv1-3}
end
config log fortianalyzer override-setting
    set enc-algorithm {high-medium | high* | low}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2 | TLSv1-3}
end
```

## FortiSandbox

For FortiSandbox, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config system fortisandbox
    set enc-algorithm {default* | high | low}
    set ssl-min-proto-version {default* | SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2}
end
```

## FortiManager

For central management, the TLS versions and the encryption algorithm are controlled using the following commands:

```
config system central-management
    set enc-algorithm {default | high* | low}
end
```

## Encryption algorithm security level

Option	Description
*high-medium/ default	SSL communication with high and medium encryption algorithms.
high	SSL communication with high encryption algorithm
low	SSL communication with low encryption algorithms.
*disable	Disable SSL communication.



Encryption algorithm security levels marked with an asterisk (\*) are not supported across different products.

## Conserve mode

Each FortiGate model has a specific amount of memory that is shared by all operations. If most or all of that memory is in use, system operations can be affected in unexpected ways. To control how FortiOS functions when the available memory is very low, FortiOS enters conserve mode. This causes functions, such as antivirus scanning, to change how they operate to reduce the functionality and conserve memory without compromising security.

Three memory thresholds can be configured:

```
config system global
    set memory-use-threshold-extreme <integer>
    set memory-use-threshold-green <integer>
    set memory-use-threshold-red <integer>
end
```

memory-use-threshold-extreme <integer>	The threshold at which memory usage is considered extreme and new sessions are dropped, in percent of total RAM (70 - 97, default = 95).
memory-use-threshold-green <integer>	The threshold at which memory usage forces the FortiGate to leave conserve mode, in percent of total RAM (70 - 97, default = 82).
memory-use-threshold-red <integer>	The threshold at which memory usage forces the FortiGate to enter conserve mode, in percent of total RAM (70 - 97, default = 88).

## Proxy inspection in conserve mode

The FortiGate's proxy-based inspection behavior while in conserve mode is configured with the antivirus failopen command.

```
config system global
    set av-failopen {pass | off | one-shot}
end
```

pass	<p>This is the default settings.</p> <p>Bypass the antivirus proxy and allow traffic to continue to its destination. Because traffic bypasses the proxy, security profiles that require the antivirus proxy are also bypassed. Security profiles that do not use the antivirus proxy continue to function normally.</p> <p>Use this setting when access is more important than security while the issue is resolved.</p>
off	<p>Force the FortiGate to stop all traffic that uses the antivirus proxy. New sessions are blocked, but active sessions continue to be processed normally unless they request more memory and are then terminated.</p>

If a security policy is configured to use antivirus scanning, then the traffic that it permits is blocked while in conserve mode. So, a policy with only IPS scanning enabled will continue normally, but a policy with both IPS and antivirus scanning is blocked because antivirus scanning requires the antivirus proxy.

Use this setting when security is more important than access while the issue is resolved.

one-shot

Continue to bypass the antivirus proxy after the FortiGate is out of conserve mode, until the failopen setting is changed or the FortiGate is restarted.

## Flow inspection in conserve mode

 
The FortiGate's flow-based inspection behavior while in conserve mode is configured with the IPS failopen command.

```
config ips global
    set fail-open {enable | disable}
end
```

- When disabled (default), the IPS engine drops all new sessions that require flow-based inspection.
- When enabled, the IPS engine does not perform any scans and allows new packets.

## Diagnostics

When in conserve mode, FortiOS generates conserve mode log messages and SNMP traps, and a conserve mode banner is shown in the GUI.



### To view current information about memory conservation status:

```
# diagnose hardware sysinfo conserve
memory conserve mode:                on
total RAM:                          997 MB
memory used:                         735 MB    73% of total RAM
memory freeable:                     173 MB    17% of total RAM
memory used + freeable threshold extreme: 947 MB    95% of total RAM
memory used threshold red:           877 MB    88% of total RAM
memory used threshold green:         817 MB    82% of total RAM
```

### To view logs:

1. Go to *Log & Report > System Events* in the GUI.
2. If historical FortiView is enabled, select the *Logs* tab.
3. If the GUI is unresponsive due to high memory usage, making the logs inaccessible, they can be viewed in the CLI:

```
# execute log filter category 1
# execute log display

1: date=2022-11-02 time=16:58:37 eventtime=1667433517502192693 tz="-0700"
logid="0100022011" type="event" subtype="system" level="critical" vd="root"
```

```
logdesc="Memory conserve mode entered" service="kernel" conserve="on" total=997 MB  
used=707 MB red="877 MB" green="698 MB" msg="Kernel enters memory conserve mode"
```

**To view the crash log in the CLI:**

```
# diagnose debug crashlog read
```

```
1: 2022-10-27 14:22:36 service=kernel conserve=on total="997 MB" used="720 MB" red="877 MB"  
2: 2022-10-27 14:22:36 green="817 MB" msg="Kernel enters memory conserve mode"
```

## Using APIs

Administrators can use API calls to a FortiGate to:

- Retrieve, create, update, and delete configuration settings
- Retrieve system logs and statistics
- Perform basic administrative actions, such as a reboot or shut down through programming scripts.

## Token-based authentication

There are two types of authentication used to make API calls on the FortiGate: session-based and token-based.

Token-based authentication requires the administrator to generate a token, which is then included in each API request for authentication. A token is automatically generated when a new API administrator is created in FortiOS.



Once the API administrator is created and the token displays, there is no way for the FortiGate to provide this token again. Ensure you record the token, and store it in a safe location; otherwise, you will have to generate a new token.

---

## Creating the API administrator and generating the API token

When creating an API administrator, it is best practice to provide this account (and the associated token) with the minimum permissions required to complete the function. For example, if you only plan to use API calls to retrieve statistics or information from the FortiGate, the account should have read permissions.



The API administrator account used in this topic's examples has full permissions strictly to illustrate various call types and does not adhere to the preceding recommendation.

---

See [REST API administrator on page 2224](#) for detailed steps to create a REST API administrator.

## Making an API call to retrieve information from the FortiGate

The newly created API token is used to query the FortiGate for all firewall addresses. Many applications can be used for this query, and this example uses a web browser to demonstrate the functionality.

## General API call

One of the simplest API calls is `api/v2/cmdb/firewall/address`, which returns all information about all firewall addresses.

### To make a general API call:

1. Open the web browser.
2. In the address bar, enter `https://<FortiGate_address>/api/v2/cmdb/firewall/address/?access_token=<API_token>`.
3. The browser displays the output similar to the following (output shortened for brevity):

```
{
  "http_method": "GET",
  "revision": "124.0.206.9538334086041268915.1559577065",
  "results": [
    {
      "q_origin_key": "AD-Server",
      "name": "AD-Server",
      "uuid": "*****-*****-*****-*****-*****",
      "subnet": "10.100.77.240 255.255.255.255",
      "type": "ipmask",
      "start-mac": "00:00:00:00:00:00",
      "end-mac": "00:00:00:00:00:00",
      "start-ip": "10.100.77.240",
      "end-ip": "255.255.255.255",
      "fqdn": "",
      "country": "",
      "wildcard-fqdn": "",
      "cache-ttl": 0,
      "wildcard": "10.100.99.240 255.255.255.255",
      "sdn": "",
      "interface": "",
      "tenant": "",
      "organization": "",
      "epg-name": "",
      "subnet-name": "",
      "sdn-tag": "",
      "policy-group": "",
      "comment": "",
      "visibility": "enable",
      "associated-interface": "",
      "color": 0,
      "filter": "",
      "sdn-addr-type": "private",
      "obj-id": "",
      "list": [
      ],
      "tagging": [
      ],
      "allow-routing": "disable"
    },
    {
      "q_origin_key": "AWS-us-east-1a",
      "name": "AWS-us-east-1a",

```

```
"uuid":"*****-****-****-****-*****",
```

## Formatting an API call

Since a general API call for address objects returns a large amount of information, it may be beneficial to format the API call to display certain information using the `format` parameter. In this example, the `format` parameter is used to display the name and comment for each firewall address.

### To use the format parameter in an API call:

1. Open the web browser.
2. In the address bar, enter `https://<FortiGate_address>/api/v2/cmdb/firewall/address/?access_token=<API_token>&format=name|comment`.
3. The browser displays the output similar to the following:

```
{
  "http_method": "GET",
  "revision": "160.0.206.9538334086041268915.1559577065",
  "results": [
    {
      "q_origin_key": "AD-Server",
      "name": "AD-Server",
      "comment": ""
    },
    {
      "q_origin_key": "AWS-us-east-1a",
      "name": "AWS-us-east-1a",
      "comment": ""
    },
    {
      "q_origin_key": "AWS-us-east-1b",
      "name": "AWS-us-east-1b",
      "comment": ""
    },
  ],
}
```

## Filtering an API call

The filter parameter can be used to specify a field and a keyword to limit what results match and are returned by a call. In this example, the preceding call is used with a filter to return only names and comments for address objects with the word `Sales` in the name.

### To use the filter parameter in an API call:

1. Open the web browser.
2. In the address bar, enter `https://<FortiGate_address>/api/v2/cmdb/firewall/address/?access_token=<API_token>&format=name|comment&filter=name=@Sales`.
3. The browser displays the output similar to the following:

```
{
  "http_method": "GET",
```

```
"revision":"196.0.206.9538334086041268915.1559577065",
"results":[
  {
    "q_origin_key":"Sales Network",
    "name":"Sales Network",
    "comment":""
  },
  {
    "q_origin_key":"Sales-Portal",
    "name":"Sales-Portal",
    "comment":""
  }
],
"vdom":"root",
"path":"firewall",
"name":"address",
"status":"success",
"http_status":200,
"serial":"*****",
"version":"v6.2.0",
"build":866
}
```

For a complete list of API calls, see the [Fortinet Development Network \(FNDN\)](#). A [subscription](#) is required to access the FNDN.

# Fortinet Security Fabric

The Fortinet Security Fabric provides an intelligent architecture that interconnects discrete security solutions into an integrated whole to detect, monitor, block, and remediate attacks across the entire attack surface. It delivers broad protection and visibility into every network segment and device, be they hardware, virtual, or cloud based.

- The physical topology view shows all connected devices, including access layer devices. The logical topology view shows information about the interfaces that each device is connected to.
- Security rating checks analyze the Security Fabric deployment to identify potential vulnerabilities and highlight best practices to improve the network configuration, deploy new hardware and software, and increase visibility and control of the network.
- Fabric connectors provide integration with multiple SDN, cloud, and partner technology platforms to automate the process of managing dynamic security updates without manual intervention.
- Automation pairs an event trigger with one or more actions to monitor the network and take the designated actions automatically when the Security Fabric detects a threat.



As part of improvements to reducing memory usage, FortiGate models with 2 GB RAM cannot be the root of the Security Fabric topology or any mid-tier part of the topology. They can only be configured as downstream devices in a Security Fabric or standalone devices.  
The affected models are the FortiGate 40F, 60E, and 60F series devices and their variants.

## Components



As part of improvements to reducing memory usage, FortiGate models with 2 GB RAM cannot be the root of the Security Fabric topology or any mid-tier part of the topology. They can only be configured as downstream devices in a Security Fabric or standalone devices.  
The affected models are the FortiGate 40F, 60E, and 60F series devices and their variants.

The Fortinet Security Fabric consists of different components that work together to secure you network.

The following devices are required to create a Security Fabric:

Device	Description
FortiGate	FortiGates are the core of the Security Fabric and can have one of the following roles: <ul style="list-style-type: none"><li>• <b>Root:</b> the root FortiGate is the main component in the Security Fabric. It is typically located on the edge of the network and connects the internal devices and networks to the internet through your ISP. From the root FortiGate, you can see information about the entire Security Fabric on the <i>Physical</i> and <i>Logical Topology</i> pages in the GUI.</li><li>• <b>Downstream:</b> after a root FortiGate is installed, all other FortiGate devices in the Security Fabric act as Internal Segmentation Firewalls (ISFWs), located at strategic points in your internal network, rather than on the network edge. This allows extra security measures to be taken around key network components, such as servers that</li></ul>



Device	Description
	<p>contain valuable intellectual property. ISFW FortiGates create network visibility by sending traffic and information about the devices that are connected to them to the root FortiGate.</p> <p>See <a href="#">Configuring the root FortiGate and downstream FortiGates on page 2583</a> for more information about adding FortiGate devices in the Security Fabric.</p> <p>FortiGate documentation: <a href="https://docs.fortinet.com/product/fortigate">https://docs.fortinet.com/product/fortigate</a></p>
<b>FortiAnalyzer*</b>	<p>FortiAnalyzer gives you increased visibility into your network, centralized monitoring, and awareness of threats, events, and network activity by collecting and correlating logs from all Security Fabric devices. This gives you a deeper and more comprehensive view across the entire Security Fabric.</p> <p>See <a href="#">Configuring FortiAnalyzer on page 2593</a> for more information about adding FortiAnalyzer devices in the Security Fabric.</p> <p>FortiAnalyzer documentation: <a href="https://docs.fortinet.com/product/fortianalyzer">https://docs.fortinet.com/product/fortianalyzer</a></p>
<b>Cloud Logging*</b>	<p>There are two options for cloud logging: FortiAnalyzer Cloud and FortiGate Cloud. Either can be used to enable the Security Fabric root device; however, if using FortiGate Cloud, all downstream devices must belong to the same FortiCloud account.</p> <p>See <a href="#">Configuring cloud logging on page 2596</a> for more information about configuring a Security Fabric with FortiGate Cloud.</p> <p>FortiGate Cloud documentation: <a href="https://docs.fortinet.com/product/fortigate-cloud">https://docs.fortinet.com/product/fortigate-cloud</a></p>

\* FortiAnalyzer or Cloud Logging is a required component for the Security Fabric. Either FortiAnalyzer, FortiAnalyzer Cloud, or FortiGate Cloud can be used to met this requirement.

The following devices are recommended:

Device	Description
<b>FortiClient</b>	<p>FortiClient adds endpoint control to devices that are located in the Security Fabric, allowing only traffic from compliant devices to flow through the FortiGate. FortiClient compliance profiles are applied by the first FortiGate that a device's traffic flows through. Device registration and on-net status information for a device that is running FortiClient appears only on the FortiGate that applies the FortiClient profile to that device.</p> <p>FortiClient documentation: <a href="https://docs.fortinet.com/product/forticlient">https://docs.fortinet.com/product/forticlient</a></p>
<b>FortiClient EMS</b>	<p>FortiClient EMS is used in the Security Fabric to provide visibility across your network, securely share information, and assign security profiles to endpoints.</p> <p>See <a href="#">Configuring FortiClient EMS on page 2604</a> for more information about adding FortiClient EMS devices in the Security Fabric.</p> <p>FortiClient EMS documentation: <a href="https://docs.fortinet.com/product/forticlient">https://docs.fortinet.com/product/forticlient</a></p>
<b>FortiAP</b>	<p>Add FortiAP devices to extend the Security Fabric to your wireless devices. Devices connected to a FortiAP appear in the Physical and Logical Topology pages in the Security Fabric menu.</p> <p>See <a href="#">Configuring LAN edge devices on page 2622</a> for more information about adding FortiAP devices in the Security Fabric.</p> <p>FortiAP documentation: <a href="https://docs.fortinet.com/product/fortiap">https://docs.fortinet.com/product/fortiap</a></p>

Device	Description
<b>FortiSwitch</b>	<p>A FortiSwitch can be added to the Security Fabric when it is managed by a FortiGate that is in the Security Fabric with the FortiLink protocol, and connected to an interface with <i>Security Fabric Connection</i> enabled. FortiSwitch ports to become logical extensions of the FortiGate. Devices connected to the FortiSwitch appear in the Physical and Logical Topology pages in the Security Fabric menu, and security features, such as FortiClient compliance profiles, are applied to them.</p> <p>See <a href="#">Configuring LAN edge devices on page 2622</a> for more information about adding FortiSwitch devices in the Security Fabric.</p> <p>FortiSwitch documentation: <a href="https://docs.fortinet.com/product/fortiswitch">https://docs.fortinet.com/product/fortiswitch</a></p>
<b>FortiExtender</b>	<p>FortiExtender cellular gateways provide ultra-fast LTE and 5G wireless to connect and scale any WAN edge.</p> <p>See <a href="#">Configuring LAN edge devices on page 2622</a> for more information about adding FortiExtender devices in the Security Fabric.</p> <p>FortiExtender documentation: <a href="https://docs.fortinet.com/product/fortiextender">https://docs.fortinet.com/product/fortiextender</a></p>
<b>FortiManager</b>	<p>Add FortiManager to simplify the network management of devices in the Security Fabric by centralizing management access in a single device. This allows you to easily control the deployment of security policies, FortiGuard content security updates, firmware revisions, and individual configurations for devices in the Security Fabric.</p> <p>See <a href="#">Configuring central management on page 2623</a> for more information about adding FortiManager devices in the Security Fabric.</p> <p>FortiManager documentation: <a href="https://docs.fortinet.com/product/fortimanager">https://docs.fortinet.com/product/fortimanager</a></p>
<b>FortiSandbox</b>	<p>Add FortiSandbox to your Security Fabric to improve security with sandbox inspection. Sandbox integration allows FortiGate devices in the Security Fabric to automatically receive signature updates from FortiSandbox and add the originating URL of any malicious file to a blocked URL list.</p> <p>See <a href="#">Configuring sandboxing on page 2627</a> for more information about adding FortiSandbox devices in the Security Fabric.</p> <p>FortiSandbox documentation: <a href="https://docs.fortinet.com/product/fortisandbox">https://docs.fortinet.com/product/fortisandbox</a></p>
<b>FortiADC</b>	<p>FortiADC devices optimize the availability, user experience, and scalability of enterprise application delivery. They enable fast, secure, and intelligent acceleration and distribution of even the most demanding enterprise applications.</p> <p>FortiADC documentation: <a href="https://docs.fortinet.com/product/fortiadc">https://docs.fortinet.com/product/fortiadc</a></p>
<b>FortiDDoS</b>	<p>FortiDDoS is a Network Behavior Anomaly (NBA) prevention system that detects and blocks attacks that intend to disrupt network service by overutilizing server resources.</p> <p>FortiDDoS documentation: <a href="https://docs.fortinet.com/product/fortiddos">https://docs.fortinet.com/product/fortiddos</a></p>
<b>FortiDeceptor</b>	<p>FortiDeceptor automatically lays out a layer of decoys and lures, which helps conceal sensitive and critical assets behind a fabricated deception surface to confuse and redirect attackers while revealing their presence on your network.</p> <p>See <a href="#">Configuring FortiDeceptor on page 2638</a> for more information about adding FortiDeceptor devices in the Security Fabric.</p> <p>FortiDeceptor documentation: <a href="https://docs.fortinet.com/product/fortideceptor">https://docs.fortinet.com/product/fortideceptor</a></p>

Device	Description
<b>FortiMail</b>	<p>FortiMail antispam processing helps offload from other devices in the Security Fabric that would typically carry out this process.</p> <p>See <a href="#">Configuring FortiMail on page 2640</a> for more information about adding FortiMail devices in the Security Fabric.</p> <p>FortiMail documentation: <a href="https://docs.fortinet.com/product/fortimail">https://docs.fortinet.com/product/fortimail</a></p>
<b>FortiMonitor</b>	<p>FortiMonitor is a holistic, SaaS-based digital experience and network performance monitoring solution. It facilitates deep analysis of both network health metrics and application performance to identify potential problem areas that impact user access.</p> <p>See <a href="#">Configuring FortiMonitor on page 2642</a> for more information about adding FortiMonitor devices in the Security Fabric.</p> <p>FortiMonitor documentation: <a href="https://docs.fortinet.com/product/fortimonitor">https://docs.fortinet.com/product/fortimonitor</a></p>
<b>FortiNAC</b>	<p>FortiNAC provides visibility to all administrators to see everything connected to their network, and the ability to control those devices and users, including dynamic, automated responses.</p> <p>See <a href="#">Configuring FortiNAC on page 2644</a> for more information about adding FortiNAC devices in the Security Fabric.</p> <p>FortiNAC documentation: <a href="https://docs.fortinet.com/product/fortinac">https://docs.fortinet.com/product/fortinac</a></p>
<b>FortiNDR</b>	<p>FortiNDR (formerly FortiAI) uses artificial neural networks (ANN) that can deliver sub-second malware detection and a verdict. Add FortiNDR to your Security Fabric to automatically quarantine attacks.</p> <p>See <a href="#">Configuring FortiNDR on page 2635</a> for more information about adding FortiNDR devices in the Security Fabric.</p> <p>FortiNDR documentation: <a href="https://docs.fortinet.com/product/fortindr">https://docs.fortinet.com/product/fortindr</a></p>
<b>FortiPolicy</b>	<p>FortiPolicy is a containerized security platform that implements and automates security orchestration with full-flow inspection and segmented and microsegmented policy enforcement while auto-scaling to accommodate infrastructure changes.</p> <p>See <a href="#">Configuring FortiPolicy on page 2655</a> for more information about adding FortiPolicy devices in the Security Fabric.</p> <p>FortiPolicy documentation: <a href="https://docs.fortinet.com/product/fortipolicy">https://docs.fortinet.com/product/fortipolicy</a></p>
<b>FortiTester</b>	<p>FortiTester can be used for performance testing and validating network security infrastructure and services. It provides a comprehensive range of application test cases to evaluate equipment and right-size infrastructure.</p> <p>See <a href="#">Configuring FortiTester on page 2646</a> for more information about adding FortiTester devices in the Security Fabric.</p> <p>FortiTester documentation: <a href="https://docs.fortinet.com/product/fortitester">https://docs.fortinet.com/product/fortitester</a></p>
<b>FortiWeb</b>	<p>FortiWeb defends the application attack surface from attacks that target application exploits. You can also configure FortiWeb to apply web application firewall features, virus scanning, and web filtering to HTTP traffic to help offload from other devices in the Security Fabric that would typically carry out these processes.</p> <p>See <a href="#">Configuring FortiWeb on page 2653</a> for more information about adding FortiWeb devices in the Security Fabric.</p> <p>FortiWeb documentation: <a href="https://docs.fortinet.com/product/fortiweb">https://docs.fortinet.com/product/fortiweb</a></p>

Device	Description
<b>FortiWLC</b>	FortiWLC delivers seamless mobility and superior reliability with optimized client distribution and channel utilization. Both single and multi channel deployment options are supported, maximizing efficiency to make the most of available wireless spectrum. FortiWLC documentation: <a href="https://docs.fortinet.com/product/wireless-controller">https://docs.fortinet.com/product/wireless-controller</a>
<b>FortiVoice</b>	FortiVoice includes integrated high-definition voice, conferencing, and fax capabilities that enables organizations to communicate and collaborate easily and securely. See <a href="#">Configuring FortiVoice on page 2649</a> for more information about adding FortiVoice devices in the Security Fabric. FortiVoice documentation: <a href="https://docs.fortinet.com/product/fortivoice-enterprise">https://docs.fortinet.com/product/fortivoice-enterprise</a>
<b>Other Fortinet products</b>	Other Fortinet products can be added to the Security Fabric, including FortiAuthenticator, FortiToken, FortiCache, and FortiSIEM. Documentation: <a href="https://docs.fortinet.com/">https://docs.fortinet.com/</a>
<b>Third-party products</b>	Third-party products that belong to the <a href="#">Fortinet Fabric-Ready Partner Program</a> can be added to the Security Fabric.

## Security Fabric connectors

This section contains information about how to configure the following devices as part of the Fortinet Security Fabric:

- [Configuring the root FortiGate and downstream FortiGates](#)
- [Configuring logging and analytics on page 2592](#)
  - [Configuring FortiAnalyzer on page 2593](#)
  - [Configuring cloud logging on page 2596](#)
- [Configuring FortiClient EMS on page 2604](#)
- [Synchronizing FortiClient ZTNA tags on page 2619](#)
- [Configuring LAN edge devices on page 2622](#)
- [Configuring central management on page 2623](#)
- [Configuring sandboxing on page 2627](#)
- [Configuring supported connectors on page 2634](#)
  - [Configuring FortiNDR on page 2635](#)
  - [Configuring FortiDeceptor on page 2638](#)
  - [Configuring FortiMail on page 2640](#)
  - [Configuring FortiMonitor on page 2642](#)
  - [Configuring FortiNAC on page 2644](#)
  - [Configuring FortiTester on page 2646](#)
  - [Configuring FortiVoice on page 2649](#)
  - [Configuring FortiWeb on page 2653](#)
  - [Configuring FortiPolicy on page 2655](#)

## System requirements

To set up the Security Fabric, the devices that you want to include must meet the Product Integration and Support requirements in the [FortiOS Release Notes](#).

Some features of the Security Fabric are only available in certain firmware versions and models. Not all FortiGate models can run the FortiGuard Security Rating Service if they are the root FortiGate in a Security Fabric. For more information, see the Special Notices in the [FortiOS Release Notes](#).

## Prerequisites

- If devices are not already installed in your network, complete basic installation and configuration tasks by following the instructions in the device documentation.
- FortiGate devices must be operating in NAT mode.

## Configuring the root FortiGate and downstream FortiGates

The following procedures include configuration steps for a typical Security Fabric implementation, where the edge FortiGate is the root FortiGate with other FortiGates that are downstream from the root FortiGate.

For information about the recommended number of downstream FortiGates, see the [FortiOS Best Practices](#).



As part of improvements to reducing memory usage, FortiGate models with 2 GB RAM cannot be the root of the Security Fabric topology or any mid-tier part of the topology. They can only be configured as downstream devices in a Security Fabric or standalone devices.

The affected models are the FortiGate 40F, 60E, and 60F series devices and their variants.

---

## Prerequisite

- The FortiGates must be operating in NAT mode.

## Configuring the root FortiGate

The edge FortiGate is typically configured as the root FortiGate, as this allows you to view the full topology of the Security Fabric from the top down. The following steps describe how to add the FortiGate to serve as the root device.

### To configure the root FortiGate:

1. On the root FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. Select the *Settings* tab, and set the *Security Fabric role* to *Serve as Fabric Root*.
3. Enter a *Fabric name*.
4. Ensure *Allow other Security Fabric devices to join* is enabled.
5. Select the interfaces that will be listening for device join requests. Enabling an interface here has the same effect as going to *Network > Interfaces*, editing an interface, and enabling *Security Fabric Connection* under *Administrative Access*.

6. Optionally, enable *Allow downstream device REST API access* to allow access to the REST API of the root FortiGate for API requests coming from downstream Security Fabric devices. This option must be enabled to use certain supported devices (such as [FortiDeceptor](#) and [FortiMonitor](#)) and the [Fabric event](#) trigger.
7. Click **OK**.

## Using the root FortiGate with disk to store historic user and device information

This backend implementation allows the root FortiGate in a Security Fabric to store historic user and device information in a database on its disk. This will allow administrators to visualize users and devices over a period of time.

The daemon, `user_info_history`, stores this data on the disk. The information source for the historical data will be the `user_info` daemon, which would be recorded on the disk when `user_info` notifies `user_info_history` that a user has logged out or the device is no longer connected.

## Adding downstream devices

Downstream device serial numbers can be pre-authorized from the root FortiGate, or allowed to join by request. New authorization requests include the device serial number, IP address, and HA members. HA members can include up to four serial numbers and is used to ensure that, in the event of a fail over, the secondary FortiGate is still authorized. A downstream device's certificate can also be used to authorize the device by uploading the certificate to the root FortiGate.

The *LAN Edge Devices* card on the *Fabric Connectors* page displays a summary about the FortiGates, FortiAPs, FortiSwitches, and FortiExtenders in the Fabric. Information about the device type, number of devices, and number of

unregistered and unauthorized devices is displayed. If there are devices that do not have a green checkmark in the *Status* column, hover over the status message to view the tooltip with required action. In this example, there is a downstream FortiGate that require authorization. The tooltip includes a link to the *System > Fabric Management* page to authorize the FortiGates.

Core Network Security Connectors

**Security Fabric Setup**  
 Role: Fabric Root  
 Fabric name: fabric

**Logging & Analytics**  
 FortiAnalyzer Cloud Logging: Enabled Disabled

**FortiClient EMS**  
 EMS IP address: Enabled 10.100.88.5

LAN Edge Devices

Device Type	Device Count	Status
FortiGate	5	1 device require authorization
FortiAP	3	3 devices not registered
FortiSwitch	2	2 devices not registered
FortiExtender	0	None configured

Go to the Fabric Management page to authorize your FortiGate and handle any other device related concerns.  
[Fabric Management](#)

Security Fabric Connectors

**Central Management**  
 Type: FortiGate Cloud  
 Status: Enabled

**Sandbox**  
 Type: FortiSandbox  
 Status: Enabled

**Supported Connectors**

The *Supported Connectors* card displays the icons of different Fortinet devices that support full Security Fabric integration. See [Configuring supported connectors on page 2634](#) for more information about configuring supported Fabric connectors.

## Pre-authorizing the downstream FortiGate

When a downstream Fortinet device's serial number or certificate is added to the trusted list on the root FortiGate, the device can join the Security Fabric as soon as it connects. After the new device is authorized, connected FortiAP and FortiSwitch devices are automatically included in the topology, where they can be authorized with one click.

The interface that connects to the downstream FortiGate must have *Security Fabric Connection* enabled.

### To pre-authorize a FortiGate:

1. On the root FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. In the *Settings* tab, locate the *Device authorization* field and click *Edit*. The *Device Authorization* window opens.
3. Click *Create New* to add a new device for pre-authorization.
4. Enter the device name in the *Name* field.
5. Select the *Authorization type*, either *Serial Number* or *Certificate*.
6. If *Certificate* is selected, click *Browse* to upload the downstream device's certificate from the management computer.

Create Device Authorization

Name: FGVMM000000000000

Authorization type: Serial Number Certificate

Certificate: Browse View


Action: Accept Deny

OK Cancel

7. Set the *Action* to *Accept*.
8. Click *OK* and add more devices as required.
9. Click *OK*.

### To configure a downstream FortiGate to connect to an upstream FortiGate:

1. Configure the downstream FortiGate:
  - a. On the downstream FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.
  - c. Enter the IP address of the root FortiGate in the *Upstream FortiGate IP/FQDN* field.
  - d. Click *OK*.
2. On the root FortiGate, go to *Security Fabric > Physical Topology* and verify that the downstream FortiGate that you added appears in the Security Fabric topology.

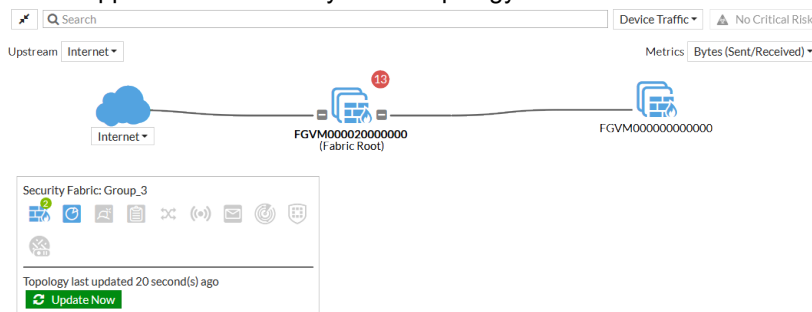

## Authorizing a downstream FortiGate

When you log in to an unauthorized downstream FortiGate, the log in prompt includes the option to authorize the device on the root FortiGate.

### To authorize a downstream FortiGate:

1. Log in to the unauthorized, downstream device.

Setup Progress

Specify Hostname ✓

Register with FortiCare ✓

Change Your Password ✓

Dashboard Setup ✓

> Fabric Setup

Fabric Setup

Connect this FortiGate to the detected Security Fabric via an upstream FortiGate.

Upstream FortiGate: 10.100.88.1 (FGT-Root)

Join Existing Fabric: Device not authorized.

Review authorization on root FortiGate


Review Fabric Settings Later

2. In the *Fabric Setup* step, click *Review authorization on root FortiGate*.  
A pop-up window opens to a log in screen for the root FortiGate.






3. Enter the log in credentials for the root FortiGate, then click *Login*.  
A list of pending authorizations is shown.

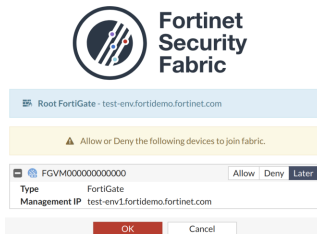

4. Select *Allow* and then click *OK* to authorize the downstream FortiGate. You can also select *Deny* to reject the authorization, or *Later* to postpone the decision to the next time that you log in.  
When authorization is allowed, the pop-up window closes, and the log in prompt shows that the downstream FortiGate has been authorized.

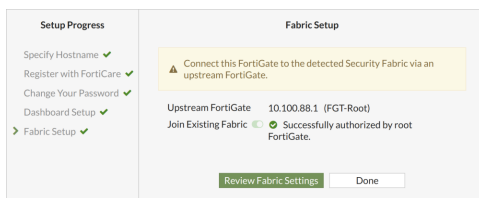


5. Click *Done* to log in to the downstream FortiGate.

## Triggering authorization from the GUI

A downstream device can be authorized in the root FortiGate's GUI by using the *Fabric Management* page (see [Authorizing devices on page 2258](#) for more information) or the *Security Fabric* widget. In this example, a downstream FortiGate is authorized using both GUI options.

### To authorize a downstream FortiGate from the Fabric Management page:

1. Go to *System > Fabric Management*.
2. Select the unauthorized device and click *Authorization > Authorize*.

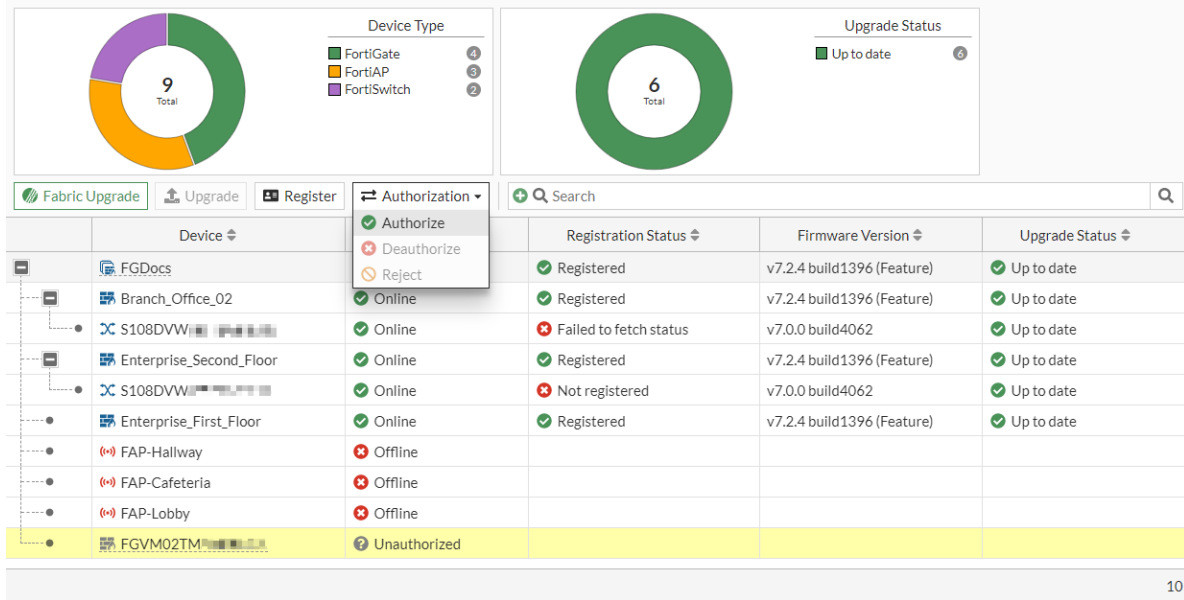


A notification appears in the bottom-right corner once the device is authorized.


3. Refresh the page. The FortiGate's status is now *Online*.

### To authorize a downstream FortiGate from the Security Fabric widget:

1. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
2. Select the highlighted device in the topology tree.
3. Click *Authorize*.

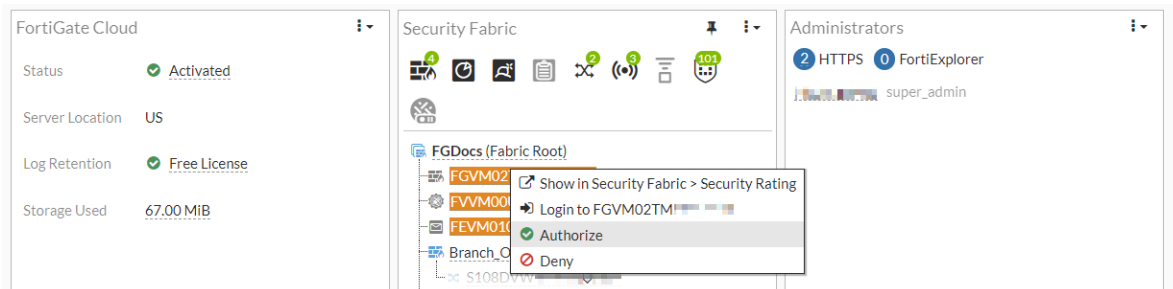

The *Device Registration* pane opens, and the *Device* field displays the serial number.

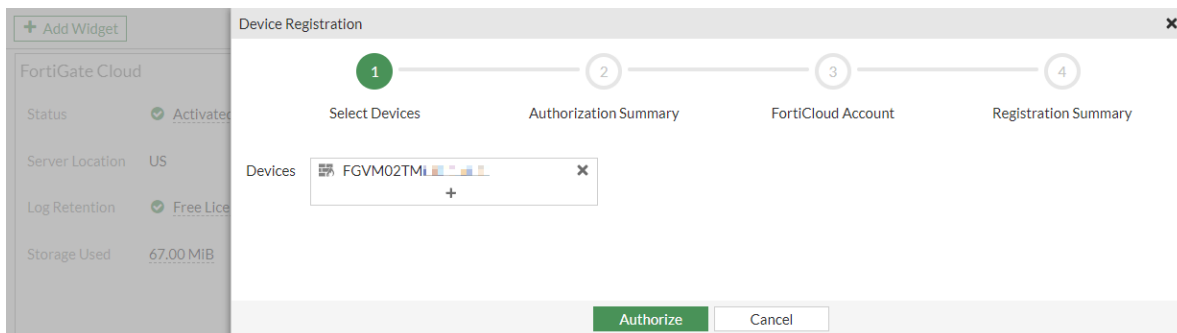

4. Click *Authorize*.
5. Once the process is complete, the *Authorization Summary* page appears and the *Status* is *Online*.

Device Registration

1 2 3 4

Select Devices Authorization Summary FortiCloud Account Registration Summary

Name	Serial	Model	Type	Status	Registration	FortiCloud Account
FGVM02TM	FGVM02TM	FGVM02		Online	Registered	@fortinet.com

Close

6. Click *Close*.

## Registering the downstream devices to FortiCloud

In this example, a downstream FortiGate has just been authorized, but it is not registered to a FortiCloud account. A device can be registered on the root FortiGate to a FortiCloud account.

### To register the downstream FortiGate from the root:

- Log in to the root and select the device using one of the following locations:
  - Go to *System > Fabric Management*, select a device, and click *Register*.
  - Go to *Dashboard > Status*, locate the *Security Fabric* widget, select a device in the topology tree, and click *Register*.

The *Device Registration* pane opens.

- Click *Register*.

Device Registration

1 2 3

Registration Status FortiCloud Account Registration Summary

Name	Serial	Model	Type	Status	Registration	FortiCloud Account
Branch_Office_01	FGVM02TM	FGVM02	FortiGate	Online	Not Registered Refresh	

Register Close

- Enter the required information (password, country/region, reseller, and end-user type).

Device Registration

1 2 3

Registration Status FortiCloud Account Registration Summary

Email: @fortinet.com

Password:

[Forgot your password?](#)

Country/Region:

Reseller:

End-user type: ☒ Non-government ☐ Government

Submit Cancel

4. Click *Submit*. The *Registration Summary* pane opens.
5. Click *Close*.



You can use IPAM to automatically assign subnets to downstream FortiGate's to prevent duplicate IP addresses from overlapping within the same Security Fabric. See [Configure IPAM locally on the FortiGate on page 155](#).

## Deauthorizing a device

A device can be deauthorized to remove it from the Security Fabric in the root FortiGate's GUI by using the *Fabric Management* page (see [Authorizing devices on page 2258](#) for more information) or the *Security Fabric* widget.

### To deauthorize a device from the Fabric Management page:

1. Go to *System > Fabric Management*.
2. Select the unauthorized device and click *Authorization > Deauthorize*.


Device	Registration Status	Firmware Version	Upgrade Status
FGDocs	Registered	v7.2.4 build1396 (Feature)	Up to date
Branch_Office_01	Registered	v7.2.4 build1396 (Feature)	Up to date
S108DVC	Not registered	v7.0.0 build4062	Up to date
Branch_Office_02	Registered	v7.2.4 build1396 (Feature)	Up to date
S108DVW	Not registered	v7.0.0 build4062	Up to date
Enterprise_Second_Floor	Registered	v7.2.4 build1396 (Feature)	Up to date
S108DVW	Not registered	v7.0.0 build4062	Up to date
Enterprise_First_Floor	Registered	v7.2.4 build1396 (Feature)	Up to date
FAP-Hallway	Offline		
FAP-Cafeteria	Offline		
FAP-Lobby	Offline		

A notification appears in the bottom-right corner once the device is deauthorized.

3. Refresh the page. The FortiGate's status is now *Unauthorized*.

### To deauthorize a device from the Security Fabric widget:

1. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
2. Select the a device in the topology tree.
3. Click *Deauthorize*.

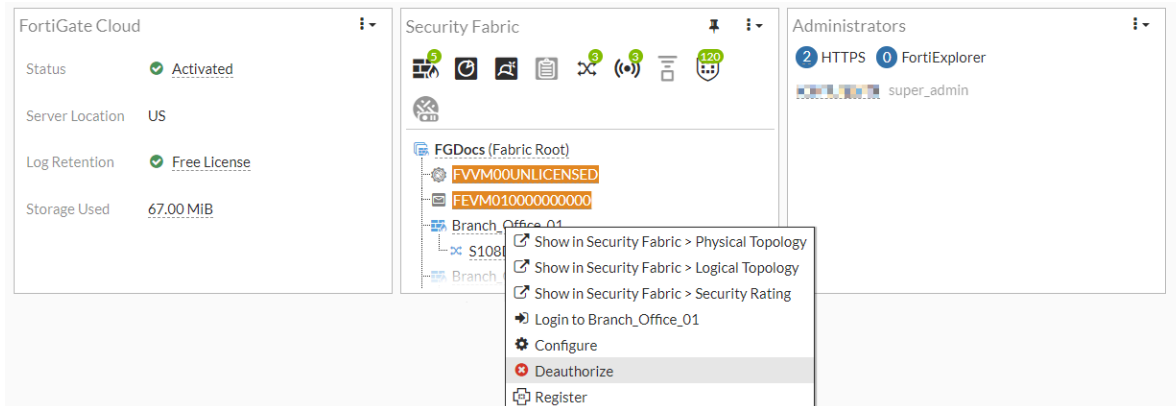

A notification appears in the bottom-right corner once the device is deauthorized.

4. Refresh the page to update the topology tree. The device appears at the top of the tree and is highlighted since it is deauthorized.

After a device is deauthorized, the serial number is saved in a trusted list that can be viewed in the CLI using the `show system csf` command. For example, this result shows a deauthorized FortiSwitch:

```
show system csf
config system csf
  set status enable
  set group-name "Office-Security-Fabric"
  set group-password *****
  config trusted-list
    edit "FGT6HD391800000"
  next
    edit "S248DF3X1700000"
      set action deny
    next
  end
end
```

## CLI commands

Use the following commands to view, accept, and deny authorization requests, to view upstream and downstream devices, and to list or test Fabric devices:

Command	Description
<code>diagnose sys csf authorization pending-list</code>	View pending authorization requests on the root FortiGate.
<code>diagnose sys csf authorization accept &lt;serial number&gt;</code>	Authorize a device to join the Security Fabric.
<code>diagnose sys csf authorization deny &lt;serial number&gt;</code>	Deny a device from joining the Security Fabric.
<code>diagnose sys csf downstream</code>	Show connected downstream devices.

Command	Description
<code>diagnose sys csf upstream</code>	Show connected upstream devices.
<code>diagnose sys csf fabric-device list</code>	List all known Fabric devices.

## Desynchronizing settings

By default, the settings for FortiAnalyzer logging, central management, sandbox inspection, and FortiClient EMS are synchronized between all FortiGates in the Security Fabric.

### To disable automatic synchronization:

```
config system csf
    set configuration-sync local
end
```

## Configuring logging and analytics

FortiAnalyzer or Cloud Logging is a required component for the Security Fabric. Either FortiAnalyzer, FortiAnalyzer Cloud, or FortiGate Cloud can be used to met this requirement. These settings are configured on the *Logging & Analytics* card on the *Security Fabric > Fabric Connectors* page. If there are multiple services enrolled on the FortiGate, the preference is: FortiAnalyzer Cloud logging, FortiAnalyzer logging, then FortiGate Cloud logging.

The following topics provide more information about configuring the logging and analytics connector:

- [Configuring FortiAnalyzer on page 2593](#)
- [Configuring cloud logging on page 2596](#)


## Logs Sent daily chart for remote logging sources

The *Logs Sent* widget displays a chart for a select remote logging source (FortiAnalyzer, FortiGate Cloud, and FortiAnalyzer Cloud). Once configured, the same data is available on the *FortiAnalyzer* and *Cloud Logging* tabs of the *Logging & Analytics* card.

### To add the Logs Sent widget:


1. Go to *Dashboard > Status* and click *Add Widget*.
2. In the *Resource Usage* section, click the + beside *Logs Sent*.
3. Select a *Logging Source* (*FortiAnalyzer*, *FortiGate Cloud*, or *FortiAnalyzer Cloud*). *FortiAnalyzer* is used in this example.

- Click **Add Widget** and click **Close**. The *FortiAnalyzer Logs Sent Daily* widget is displayed in the dashboard.

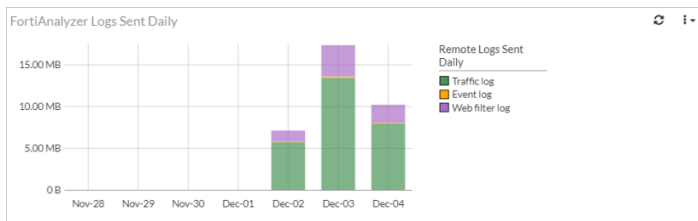

### To view the chart on the Logging & Analytics card:

- Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card. The *Logging Settings* pane is displayed.
- In the *Settings* tab, click either *FortiAnalyzer* or *Cloud Logging* to view the *Remote Logs Sent Daily* chart. *FortiAnalyzer Cloud* is used in this example.

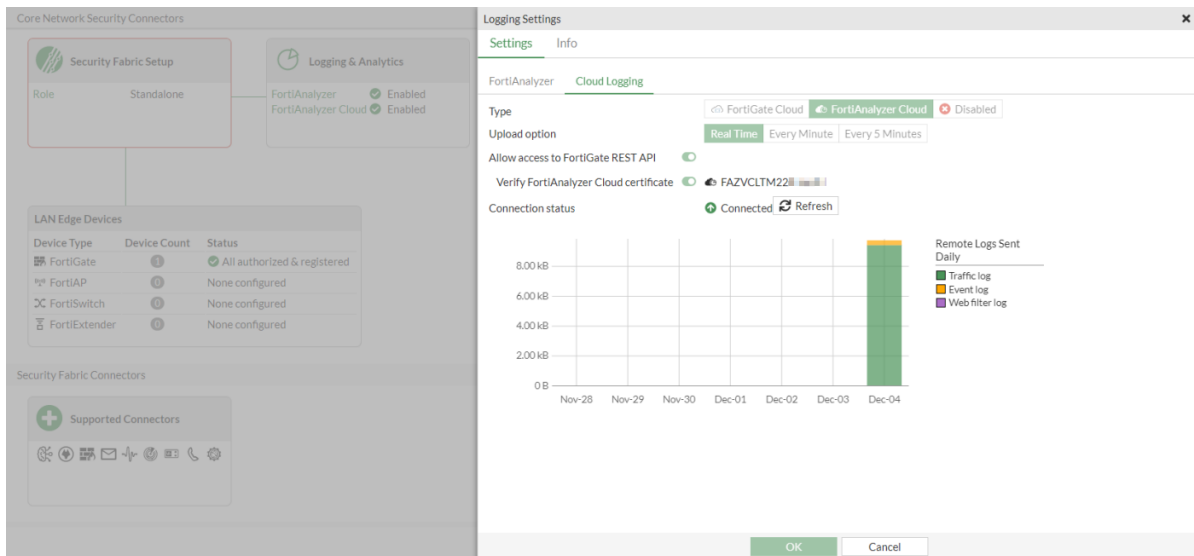

- Click **OK** to close the pane.

## Configuring FortiAnalyzer

FortiAnalyzer allows the Security Fabric to show historical data for the Security Fabric topology and logs for the entire Security Fabric. For more information about using FortiAnalyzer, see the [FortiAnalyzer Administration Guide](#).

### To authorize a FortiAnalyzer in the Security Fabric:

- In FortiAnalyzer, configure the authorization address and port:
  - Go to *System Settings > Admin > Admin Settings*.
  - In the *Fabric Authorization* section, enter an *Authorization Address* and *Authorization Port*. This is used to access the FortiAnalyzer login screen.

**Admin Settings**

Password Policy ☐ OFF

**Fabric Authorization** ⓘ

Authorization Address

Authorization Port

**Apply**

c. Click **Apply**.

2. In FortiOS, go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
3. Select the **Settings** tab, select the **FortiAnalyzer** tab, and set the **Status** to *Enabled*.
4. Enter the FortiAnalyzer IP in the **Server** field.
5. Optionally, configure the remaining log settings:

#### *Upload option*

Select the frequency of log uploads to the remote device:

- *Real Time*: logs are sent to the remote device in real time.
- *Every Minute*: logs are sent to the remote device once every minute. This option is unavailable if the Security Fabric connection is configured.
- *Every 5 Minutes*: logs are sent to the remote device once every five minutes. This is the default option. This option is unavailable if the Security Fabric connection is configured.
- *store-and-upload*: store logs to a local disk before uploading to FortiAnalyzer or FortiManager at a scheduled time. This option is only available in the CLI.

#### *Allow access to FortiGate REST API*

Define access to FortiGate REST API:

- *Enable*: the REST API accesses the FortiGate topology and shares data and results.
- *Disable*: the REST API does not share data and results.

#### *Verify FortiAnalyzer certificate*

Define the FortiAnalyzer certificate verification process:

- *Enable*: the FortiGate will verify the FortiAnalyzer serial number against the FortiAnalyzer certificate. When verified, the serial number is stored in the FortiGate configuration.
- *Disable*: the FortiGate will not verify the FortiAnalyzer certificate against the serial number.



6. Click **OK**. The FortiAnalyzer *Connection status* is *Unauthorized*.

Core Network Security Connecto

Logging Settings

Settings Info

FortiAnalyzer Cloud Logging

Status ☒ Enabled ☒ Disabled

Server 10.6.30.106

Connection status ☒ Unauthorized

Refresh Authorize

Upload option Real Time Every Minute Every 5 Minutes

Allow access to FortiGate REST API ☒

Verify FortiAnalyzer certificate ☒

FortiAnalyzer Status

Log queued 41695

Failed logs 0

OK Cancel

7. Click **Authorize**. You are redirected to a login screen.
8. Enter the username and password, then click **Login**.

▲ Not secure | 172.16.116.221:2443/fabric-authorization?opener\_id=FGVMSLTM21000284



FortiAnalyzer-VM64

Username


Password

Login

The authorization dialog opens.


9. Select *Approve* and click *OK* to authorize the FortiGate.

▲ Not secure | 172.16.116.221:2443/p/fabric-approval/


**Fortinet  
Security  
Fabric**

Select an action for the following unregistered devices.

Root-F-HA\_FGVMSL
10.6.30.6

Model	FortiGate-VM64
Management Mode	Logging Only
Serial Number	FGVMSLTM- 
Firmware Version	FortiGate 7.2.4 (GA)

10. In FortiOS, refresh the *FortiAnalyzer* page. The *Connection status* is *Authorized*.

Core Network Security Connecto

Security Fabric Setup

Role Fabric name Fabric Co

LAN Edge Devices

Device Type	Device Co
FortiGate	5
FortiAP	3
FortiSwitch	3
FortiExtender	0

Security Fabric Connectors

Logging Settings

Settings Info

FortiAnalyzer Cloud Logging


Status ✔ Enabled ✖ Disabled

Server

Connection status ➕ Authorized

Upload option Real Time Every Minute Every 5 Minutes

Allow access to FortiGate REST API ☒

Verify FortiAnalyzer certificate ☒ FAZVMSLM-

FortiAnalyzer Status

Log queued 42921

Failed logs 0



FortiGates with a FortiAnalyzer Cloud license can send all logs to FortiAnalyzer Cloud.

## Configuring cloud logging

There are two options available in the *Cloud Logging* tab of the *Logging & Analytics* connector card: *FortiGate Cloud* and *FortiAnalyzer Cloud*. If there are multiple services enrolled on the FortiGate, the preference is: FortiAnalyzer Cloud logging, FortiAnalyzer logging, then FortiGate Cloud logging.

This topic covers the following cloud logging aspects:

- [Configuring FortiGate Cloud](#)
  - [Registration and activation](#)
  - [Enabling logging to FortiGate Cloud](#)
  - [Logging into the FortiGate Cloud portal](#)
  - [Configuring a Security Fabric with FortiGate Cloud logging](#)
  - [Cloud sandboxing](#)
- [Configuring FortiAnalyzer Cloud](#)

## Configuring FortiGate Cloud

FortiGate Cloud is a hosted security management and log retention service for FortiGate devices. It provides centralized reporting, traffic analysis, configuration management, and log retention without the need for additional hardware or software.

FortiGate Cloud offers a wide range of features:

- **Simplified central management**

FortiGate Cloud provides a central GUI to manage individual or aggregated FortiGate and FortiWiFi devices. Adding a device to the FortiGate Cloud management subscription is straightforward. FortiGate Cloud has detailed traffic and application visibility across the whole network.
- **Hosted log retention with large default storage allocated**

Log retention is an integral part of any security and compliance program, but administering a separate storage system is onerous. FortiGate Cloud takes care of this automatically and stores the valuable log information in the cloud. Different types of logs can be stored, including Traffic, System Events, Web, Applications, and Security Events.
- **Monitoring and alerting in real time**

Network availability is critical to a good end-user experience. FortiGate Cloud enables you to monitor your FortiGate network in real time with different alerting mechanisms to pinpoint potential issues. Alerting mechanisms can be delivered via email.
- **Customized or pre-configured reporting and analysis tools**

Reporting and analysis are your eyes and ears into your network's health and security. Pre-configured reports are available, as well as custom reports that can be tailored to your specific reporting and compliance requirements. The reports can be emailed as PDFs, and can cover different time periods.
- **Maintain important configuration information uniformly**

The correct configuration of the devices within your network is essential for maintaining optimum performance and security posture. In addition, maintaining the correct firmware (operating system) level allows you to take advantage of the latest features.
- **Service security**

All communication (including log information) between the devices and the cloud is encrypted. Redundant data centers are always used to give the service high availability. Operational security measures have been put in place to make sure your data is secure — only you can view or retrieve it.

For more information, refer to the [FortiGate Cloud documentation](#).

## Registration and activation



Before you can activate a FortiGate Cloud account, you must register your device first.

---

FortiGate Cloud accounts can be registered manually through the FortiGate Cloud website, <https://www.forticloud.com>, or you can easily register and activate your account directly from your FortiGate.

### To activate your FortiGate Cloud account:

1. On your device, go to *Dashboard > Status*.
2. In the *FortiGate Cloud* widget, click the *Not Activated > Activate* button in the *Status* field.
3. A pane will open asking you to register your FortiGate Cloud account. Click *Create Account*, enter your information, view and accept the terms and conditions, and then click *OK*.
4. A second dialogue window opens, asking you to enter your information to confirm your account. This sends a confirmation email to your registered email. The dashboard widget then updates to show that confirmation is required.
5. Open your email, and follow the confirmation link it contains.  
A FortiGate Cloud page will open, stating that your account has been confirmed. The *Activation Pending* message on the dashboard will change to state the type of account you have, and will provide a link to the FortiGate Cloud portal.

### Enabling logging to FortiGate Cloud

#### To enable logging to FortiGate Cloud:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
2. Select the *Settings* tab, select the *Cloud Logging* tab, and set the *Type* to *FortiGate Cloud*.
3. Select an upload option:
  - *Real Time*: logs are sent to the cloud device in real time.
  - *Every Minute*: logs are sent to the cloud device once every minute.
  - *Every 5 Minutes*: logs are sent to the cloud device once every five minutes (default).



If the Security Fabric connection is configured, only the *Real Time* option is available.

---

4. Click *OK*.

### Logging into the FortiGate Cloud portal

Once logging has been configured and you have registered your account, you can log into the FortiGate Cloud portal and begin viewing your logging results. There are two methods to reach the FortiGate Cloud portal:

- If you have direct network access to the FortiGate:
  - a. Go to *Dashboard > Status*.
  - b. In the *FortiGate Cloud* widget, in the *Status* field, click *Activated > Launch Portal*, or, in the *Licenses* widget, click *FortiCare Support > Launch Portal*.
- If you do not have access to the FortiGate's interface, visit the FortiGate Cloud website (<https://www.forticloud.com>) and log in remotely, using your email and password. It will ask you to confirm the FortiGate Cloud account you are connecting to and then you will be granted access.


## Configuring a Security Fabric with FortiGate Cloud logging

A Security Fabric can be created on the root device using FortiGate Cloud for cloud logging. When the FortiCloud account enforcement is enabled (by default), members joining the Fabric must be registered to the same FortiCloud account. Devices that are not activated with FortiCloud are also allowed.


For example, the root FortiGate (FGT\_10\_101F) is configured with FortiGate Cloud logging. In the Security Fabric settings, the *FortiCloud account enforcement* option is enabled by default. The downstream FortiGate, FGT-F-VM, with the same FortiCloud account ID is able to join the Fabric.

### To configure a Security Fabric with FortiCloud logging in the GUI:

1. Configure the Security Fabric settings on the root FortiGate (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)). The *FortiCloud account enforcement* setting is enabled by default.

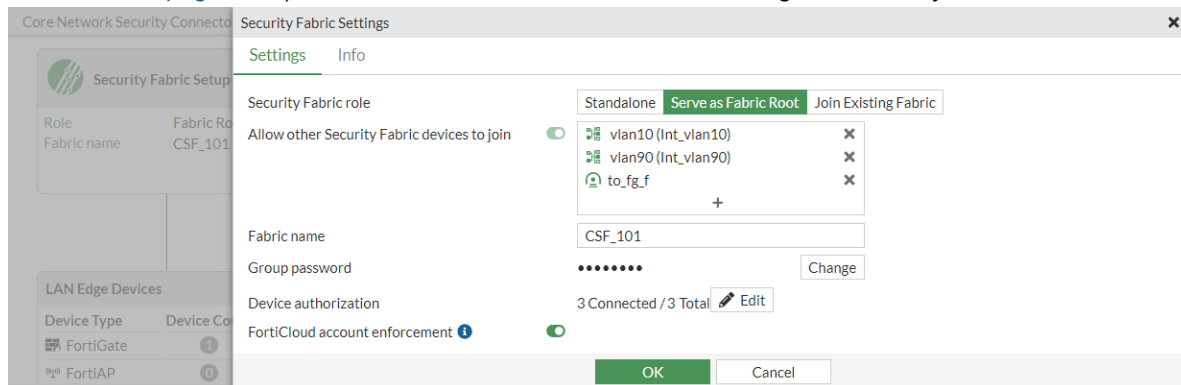

2. Configure FortiCloud logging on the root FortiGate:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
  - b. Select the *Settings* tab, select the *Cloud Logging* tab, and set the *Type* to *FortiGate Cloud*.

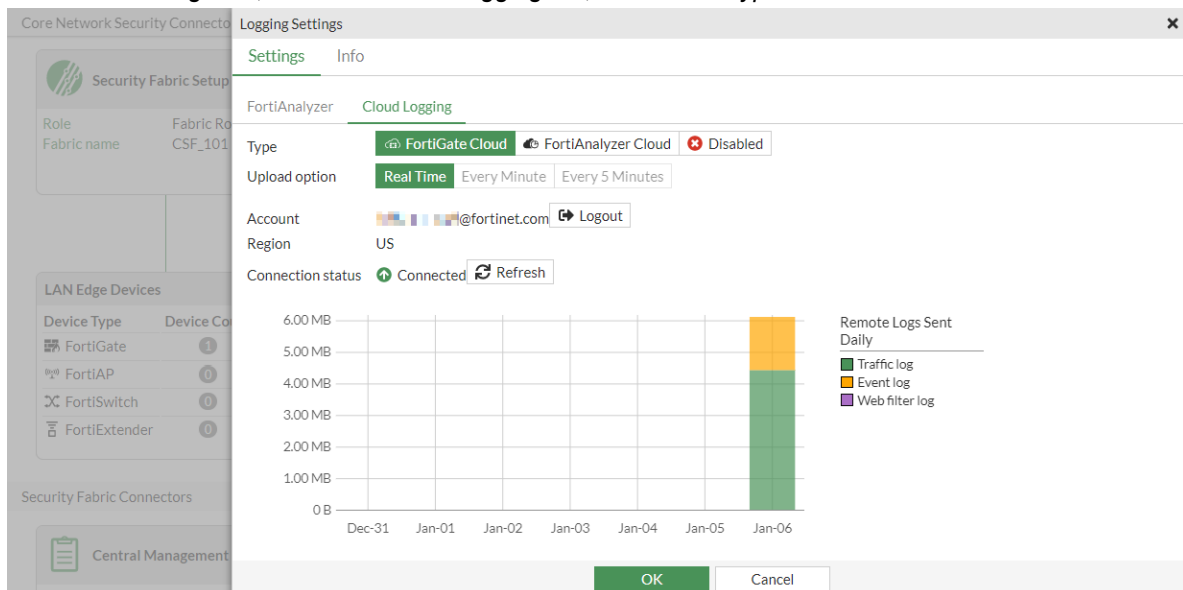

- c. Click **OK**.
3. Configure the FGT-F-VM to join the Security Fabric:
    - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
    - b. Select the *Settings* tab, and set the *Security Fabric role* to *Join Existing Fabric*.

- c. Click **OK**. The FortiGate is authorized and successfully joins the Security Fabric.
4. Check the FortiCloud logging settings:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
  - b. Select the *Settings* tab, select the *Cloud Logging* tab. The settings are automatically retrieved from the root FortiGate and the *Account* is the same.

### To configure a Security Fabric with FortiCloud logging in the CLI:

```
config log fortiguard setting
    set status enable
    set upload-option realtime
end
```

The FortiCloud account enforcement setting is enabled by default in the Security Fabric settings:

```
show system csf
config system csf
    set status enable
    set group-name "CSF_101"
    set forticloud-account-enforcement enable
end
```

### Cloud sandboxing

FortiGate Cloud can be used for automated sample tracking, or sandboxing, for files from a FortiGate. This allows suspicious files to be sent to be inspected without risking network security. If the file exhibits risky behavior, or is found to contain a virus, a new virus signature is created and added to the FortiGuard antivirus signature database.

See [Configuring sandboxing on page 2627](#) for instructions to configure FortiGate Cloud Sandbox. Sandboxing results are shown on the *Sandbox* tab in the FortiGate Cloud portal.

### Configuring FortiAnalyzer Cloud

FortiAnalyzer Cloud differs from FortiAnalyzer in the following ways:

- You cannot enable FortiAnalyzer Cloud in `vdom override-setting` when global FortiAnalyzer Cloud is disabled.
- You must use the CLI to retrieve and display logs sent to FortiAnalyzer Cloud. The FortiOS GUI is not supported.
- You cannot enable FortiAnalyzer Cloud and FortiGate Cloud at the same time.

For more information, see [Licensing](#) in the FortiAnalyzer Cloud Deployment Guide.

In the *Security Fabric > Fabric Connectors > Logging & Analytics* card settings, *FortiAnalyzer Cloud* is grayed out when you do not have a FortiAnalyzer Cloud entitlement. When you have a FortiAnalyzer Cloud entitlement, *FortiAnalyzer Cloud* is available and you can authenticate by the certificate.

In FortiAnalyzer Cloud, you can view logs from FortiOS in the *Event > All Types* page.

#	Date/Time	Level	Device ID	Action	Message	User	User Interface
1	10:52:45	alert	FGSH1E5800000000		Configuration is changed in the admin session	admin	ssh(10.6.30.254)
2	05-01-18:00	alert	FGSH1E5800000000		Configuration is changed in the admin session	admin	ssh(10.6.30.254)
3	05-01-18:00	alert	FGSH1E5800000000		Configuration is changed in the admin session	admin	ssh(10.6.30.254)
4	05-01-17:57	alert	FGSH1E5800000000	login	Administrator did login failed from https(10...	ddd	https(10.6.30.254)
5	05-01-17:57	information	FGSH1E5800000000	Edit	Edit log.fortianalyzer-cloud.filter	admin	ssh(10.6.30.254)
6	05-01-17:56	information	FGSH1E5800000000	Edit	Edit log.setting	admin	ssh(10.6.30.254)
7	05-01-17:56	notice	FGSH1E5800000000	connect	Connected to FortiAnalyzer.fortianalyzer.for...		
8	05-01-17:55	alert	FGSH1E5800000000	login	Administrator ccc login failed from https(10.6...	ccc	https(10.6.30.254)
9	05-01-17:55	alert	FGSH1E5800000000	login	Administrator bbb login failed from https(10.6...	bbb	https(10.6.30.254)
10	05-01-17:53	notice	FGSH1E5800000000	login	Administrator aaa login failed from https(10.6...	aaa	https(10.6.30.254)
11	05-01-17:53	information	FGSH1E5800000000	Edit	Edit log.fortianalyzer-cloud.override-filter	admin	ssh(10.6.30.254)
12	05-01-17:53	information	FGSH1E5800000000	logout	Administrator admin timed out on https(10.6...	admin	https(10.6.30.254)
13	05-01-17:53	notice	FGSH1E5800000000	perf-stats	Performance statistics: average CPU 0, mem...		
14	05-01-17:53	information	FGSH1E5800000000		Delete 1 old report files		
15	05-01-17:51	notice	FGSH1E5800000000	connect	Connected to FortiAnalyzer.fortianalyzer.for...		
16	05-01-17:48	notice	FGSH1E5800000000	perf-stats	Performance statistics: average CPU 0, mem...		
17	05-01-17:48	information	FGSH1E5800000000		Delete 1 old report files		
18	05-01-17:48	information	FGSH1E5800000000		Delete 2 old report files		
19	05-01-17:45	information	FGSH1E5800000000	login	Administrator admin logged in successfully fr...	admin	https(10.6.30.254)
20	05-01-17:45	notice	FGSH1E5800000000	connect	Connected to FortiAnalyzer.fortianalyzer.for...		
21	05-01-17:20	information	FGSH1E5800000000		Delete 1 old report files		
22	05-01-17:21	information	FGSH1E5800000000	Edit	Edit log.setting	admin	ssh(10.6.30.254)
23	05-01-17:20	information	FGSH1E5800000000	login	Administrator admin logged in successfully fr...	admin	https(10.6.30.254)
24	05-01-17:20	information	FGSH1E5800000000	login	Administrator admin logged in successfully fr...	admin	ssh(10.6.30.254)
25	05-01-17:20	information	FGSH1E5800000000		FS22403214000736 Discovered	Switch-Controller	fortilinkd
26	05-01-17:20	notice	FGSH1E5800000000	connect	Connected to FortiAnalyzer.fortianalyzer.for...		
27	05-01-17:18	information	FGSH1E5800000000	Edit	Edit system.admin.admin	admin	ssh(10.6.30.254)
28	05-01-17:18	information	FGSH1E5800000000	Edit	Edit log.fortianalyzer-cloud.setting	admin	GUI(10.6.30.254)
29	05-01-17:18	notice	FGSH1E5800000000	connect	Connected to FortiAnalyzer.fortianalyzer.for...		
30	05-01-17:16	information	FGSH1E5800000000	login	Administrator admin logged in successfully fr...	admin	https(10.6.30.254)
31	05-01-17:14	notice	FGSH1E5800000000		The ntp daemon adjusted time from Wed Ma...	Fortilink-FS22403214000736	

## To configure FortiAnalyzer Cloud logging in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
2. Select the *Settings* tab, select the *Cloud Logging* tab, and set the *Type* to *FortiAnalyzer Cloud*.
3. Optionally, configure the remaining log settings:

### Upload option

Select the frequency of log uploads to the remote device:

- **Real Time:** logs are sent to the remote device in real time.
- **Every Minute:** logs are sent to the remote device once every minute. This option is unavailable if the Security Fabric connection is configured.
- **Every 5 Minutes:** logs are sent to the remote device once every five minutes. This is the default option. This option is unavailable if the Security Fabric connection is configured.

### Allow access to FortiGate REST API

Define access to FortiGate REST API:


- **Enable:** the REST API accesses the FortiGate topology and shares data and results.
- **Disable:** the REST API does not share data and results.

### Verify FortiAnalyzer Cloud certificate


Define the FortiAnalyzer Cloud certificate verification process:

- **Enable:** the FortiGate will verify the FortiAnalyzer Cloud serial number against the FortiAnalyzer certificate. When verified, the serial number is stored in the FortiGate configuration.
- **Disable:** the FortiGate will not verify the FortiAnalyzer Cloud certificate against the serial number.

4. Click **OK**. A prompt appears to verify the FortiAnalyzer Cloud serial number.

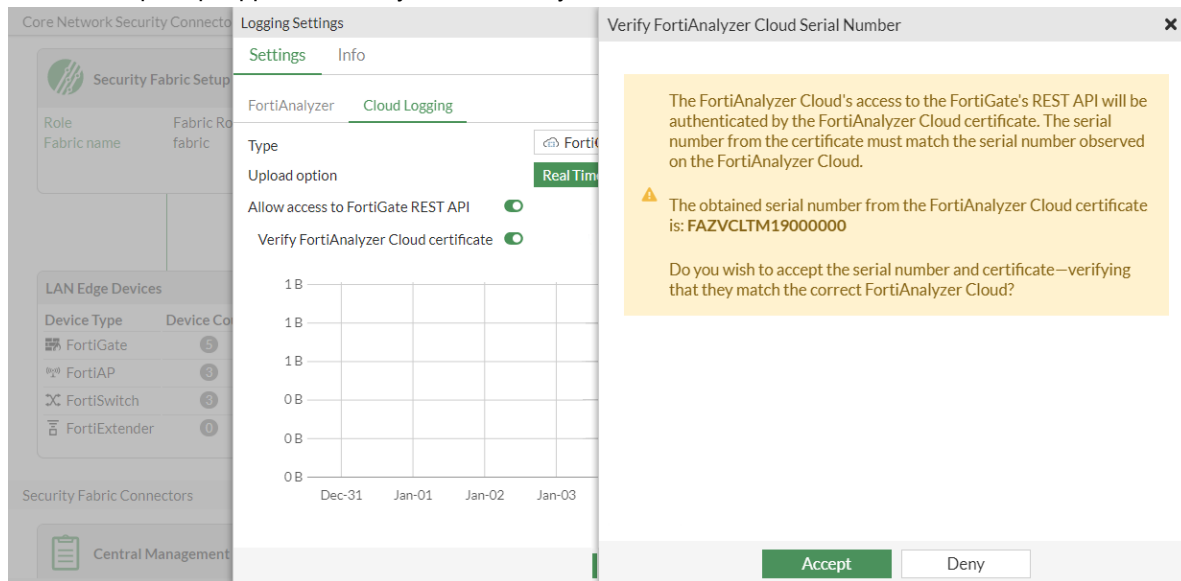

5. Click **Accept**.
6. The verified FortiAnalyzer Cloud certificate appears in the settings.

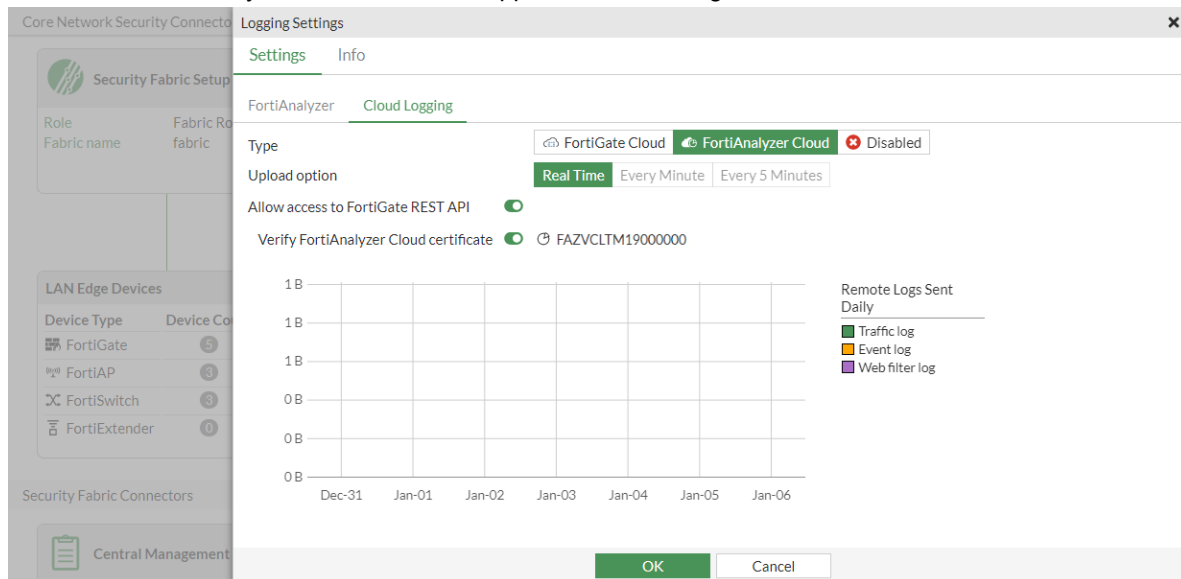

### To enable FortiAnalyzer Cloud logging in the CLI:

1. Configure the FortiAnalyzer Cloud settings:

```
config log fortianalyzer-cloud setting
  set status enable
  set ips-archive disable
  set certificate-verification enable
  set serial "FAZVCLTM19000000"
  set access-config enable
  set enc-algorithm high
  set ssl-min-proto-version default
```



```
    set conn-timeout 10
    set monitor-keepalive-period 5
    set monitor-failure-retry-period 5
    set upload-option realtime
end
```

**2. Configure the FortiAnalyzer Cloud filters:**

```
config log fortianalyzer-cloud filter
    set severity information
    set forward-traffic disable
    set local-traffic disable
    set multicast-traffic disable
    set sniffer-traffic disable
    set anomaly disable
    set voip disable
    set dlp-archive disable
end
```

**To disable FortiAnalyzer Cloud logging for a specific VDOM in the CLI:**

**1. Enable override FortiAnalyzer in the general log settings:**

```
config log setting
    set faz-override enable
end
```

**2. Disable the override FortiAnalyzer Cloud setting:**

```
config log fortianalyzer-cloud override-setting
    set status disable
end
```

**To set FortiAnalyzer Cloud logging to filter for a specific VDOM in the CLI:**

**1. Enable override FortiAnalyzer in the general log settings:**

```
config log setting
    set faz-override enable
end
```

**2. Enable the override FortiAnalyzer Cloud setting:**

```
config log fortianalyzer-cloud override-setting
    set status enable
end
```

**3. Configure the override filters for FortiAnalyzer Cloud:**

```
config log fortianalyzer-cloud override-filter
    set severity information
    set forward-traffic disable
    set local-traffic disable
    set multicast-traffic disable
    set sniffer-traffic disable
    set anomaly disable
    set voip disable
    set dlp-archive disable
end
```

**To display FortiAnalyzer Cloud logs in the CLI:**

```
# execute log filter device fortianalyzer-cloud
# execute log filter category event
# execute log display
```

**Sample log**

```
date=2019-05-01 time=17:57:45 idseq=60796052214644736 bid=100926 dvid=1027 itime="2019-05-01
17:57:48" euid=3 epid=3 dsteuid=0 dstepid=3 logver=602000890 logid=0100032002 type="event"
subtype="system" level="alert" srcip=10.6.30.254 dstip=10.6.30.9 action="login"
msg="Administrator ddd login failed from https(10.6.30.254) because of invalid user name"
logdesc="Admin login failed" sn="0" user="ddd" ui="https(10.6.30.254)" status="failed"
reason="name_invalid" method="https" eventtime=1556758666274548325 devid="FG5H1E5818900000"
vd="root" dtime="2019-05-01 17:57:45" itime_t=1556758668 devname="FortiGate-501E"

date=2019-05-01 time=17:57:21 idseq=60796052214644736 bid=100926 dvid=1027 itime="2019-05-01
17:57:23" euid=3 epid=3 dsteuid=0 dstepid=3 logver=602000890 logid=0100044546 type="event"
subtype="system" level="information" action="Edit" msg="Edit log.fortianalyzer-cloud.filter
" logdesc="Attribute configured" user="admin" ui="ssh(10.6.30.254)" cfgtid=164757536
cfgpath="log.fortianalyzer-cloud.filter" cfgattr="severity[information->critical]"
eventtime=1556758642413367644 devid="FG5H1E5818900000" vd="root" dtime="2019-05-01 17:57:21"
itime_t=1556758643 devname="FortiGate-501E"
```


## Configuring FortiClient EMS

The FortiGate Security Fabric root device can link to FortiClient Endpoint Management System (EMS) and FortiClient EMS Cloud (a cloud-based EMS solution) for endpoint connectors and automation. Up to seven EMS servers can be added to the Security Fabric, including a FortiClient EMS Cloud server. EMS settings are synchronized between all fabric members.

To enable cloud-based EMS services, the FortiGate must be registered to FortiCloud with an appropriate user account. The following examples presume that the EMS certificate has already been configured.


**To add an on-premise FortiClient EMS server to the Security Fabric in the GUI:**

1. On the root FortiGate, go to *System > Feature Visibility* and enable *Endpoint Control*.
2. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
3. In the Settings tab, set the *Type* to *FortiClient EMS*.
4. Optionally, enable *EMS Threat Feed*. See [Malware threat feed from EMS on page 1286](#) for more information about using this setting in an AV profile.
5. Enter a name and IP address or FQDN. When connecting to a multitenancy-enabled EMS, Fabric connectors must use an FQDN to connect to EMS, where the FQDN hostname matches a site name in EMS (including "Default"). The following are examples of FQDNs to provide when configuring the connector to connect to the default site and to a site named SiteA, respectively: default.ems.yourcompany.com, sitea.ems.yourcompany.com. See [Multitenancy](#).
6. Click *OK*.  
A window appears to verify the EMS server certificate:

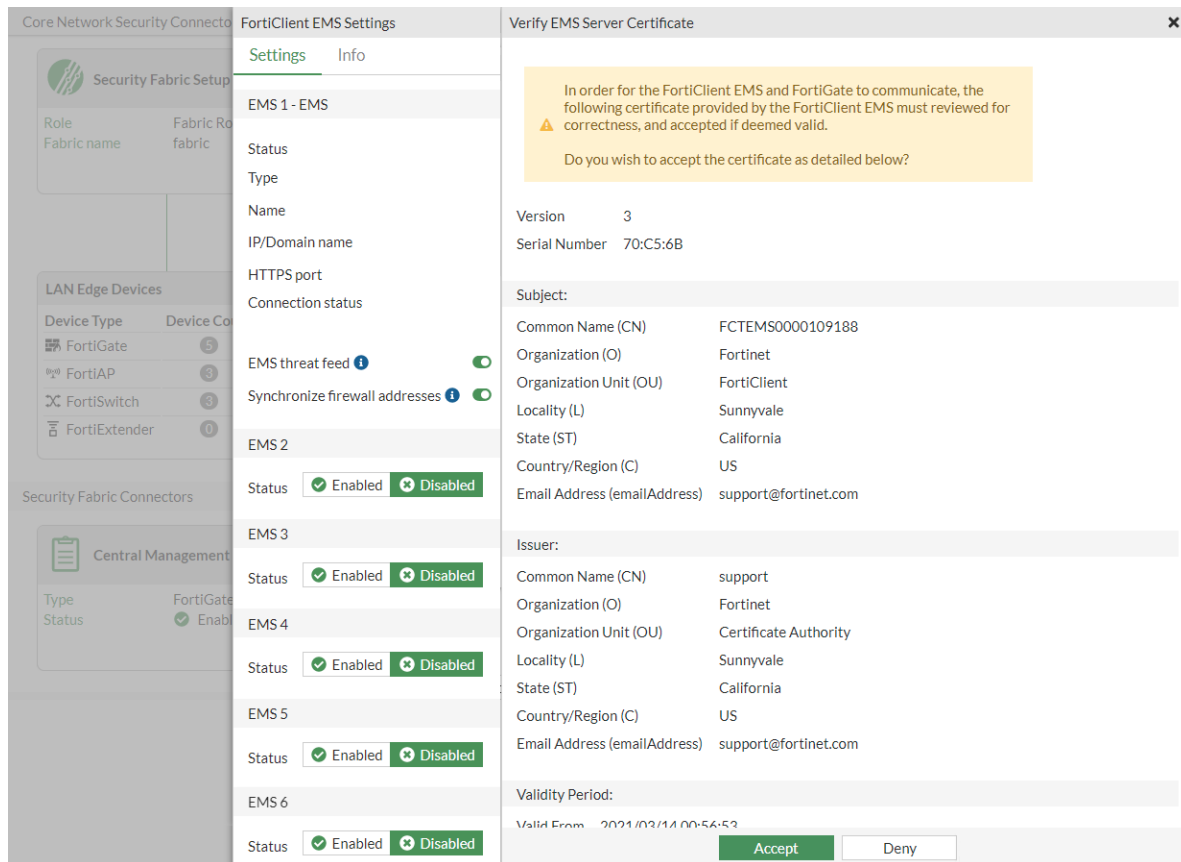

**7. Click *Accept*.**

The *Connection status* is now *Connected*:

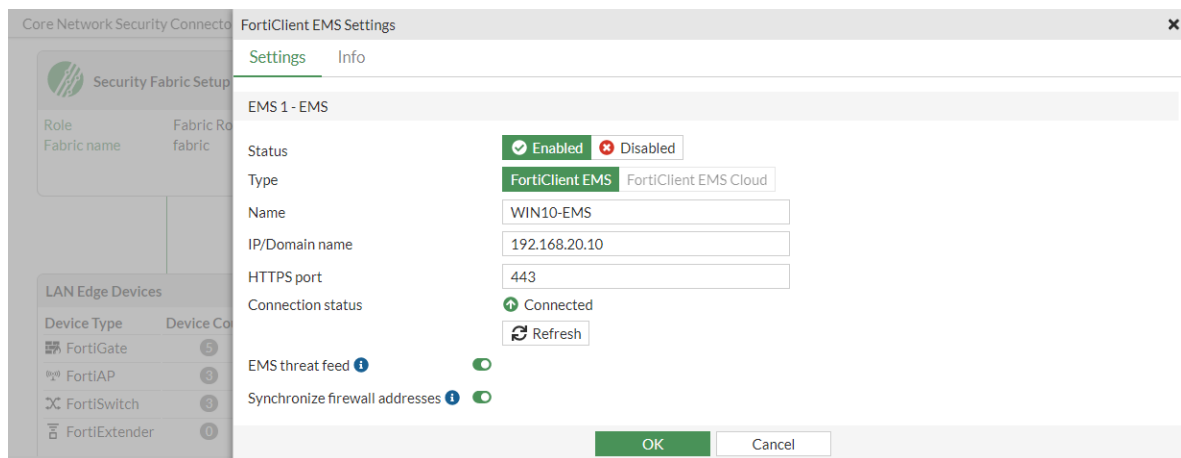

**8. If the device is not authorized, log in to the FortiClient EMS to authorize the FortiGate under *Administration > Fabric Devices*.**

**To add a FortiClient EMS Cloud server to the Security Fabric in the GUI:**

FortiClient EMS Cloud can only be configured when the FortiGate is registered to FortiCloud and the EMS Cloud entitlement is verified.

If the FortiCloud account does not pass the FortiClient EMS Cloud entitlement check, the option is not selectable in the FortiClient EMS connector settings.

1. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
2. In the Settings tab, set the *Type* to *FortiClient EMS Cloud*.
3. Enter a name.
4. Click *OK*.  
A window appears to verify the EMS server certificate.
5. Click *Accept*.  
The *Connection status* is now *Connected*.

**To test connectivity with the EMS server:**

1. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
2. In the *Connection status* section, click *Refresh*.

**To add an on-premise FortiClient EMS server to the Security Fabric in the CLI:**

```
config endpoint-control fcems
  edit {1 | 2 | 3 | 4 | 5}
    set status {enable | disable}
    set name <string>
    set server <ip_address>
    set certificate <string>
    set https-port <integer>
    set source-ip <ip_address>
  next
end
```

The `https-port` is the EMS HTTPS access port number, and the `source-ip` is the REST API call source IP address.

**To add a FortiClient EMS Cloud server to the Security Fabric in the CLI:**

```
config endpoint-control fcems
  edit {1 | 2 | 3 | 4 | 5}
    set status {enable | disable}
    set name <string>
    set fortinetone-cloud-authentication enable
    set certificate <string>
  next
end
```

**To verify the EMS Cloud entitlement in the CLI:**

```
# diagnose test update info
```

**To verify an EMS certificate in the CLI:**

```
# execute fctems verify ems137
```

```
Subject:      C = CA, ST = bc, L = burnaby, O = devqa, OU = top3, CN =
sys169.qa.fortinet.cm, emailAddress = xxxxx@xxxxxxxxxxx.xxx
```

```
Issuer:      CN = 155-sub1.fortinet.com
```

```
Valid from:   2017-12-05 00:37:57 GMT
```

```
Valid to:     2027-12-02 18:08:13 GMT
```

```
Fingerprint: D3:7A:1B:84:CC:B7:5C:F0:A5:73:3D:BB:ED:21:F2:E0
```

```
Root CA:      No
```

```
Version:      3
```

```
Serial Num:
```

```
01:86:a2
```

```
Extensions:
```

```
Name:         X509v3 Basic Constraints
```

```
Critical: yes
```

```
Content:
```

```
CA:FALSE
```

```
Name:         X509v3 Subject Key Identifier
```

```
Critical: no
```

```
Content:
```

```
35:B0:E2:62:AF:9A:7A:E6:A6:8E:AD:CB:A4:CF:4D:7A:DE:27:39:A4
```

```
Name:         X509v3 Authority Key Identifier
```

```
Critical: no
```

```
Content:
```

```
keyid:66:54:0F:78:78:91:F2:E4:08:BB:80:2C:F6:BC:01:8E:3F:47:43:B1
```

```
DirName:/C=CA/ST=bc/L=burnaby/O=devqa/OU=top3/CN=fac155.fortinet.com/emailAddress=xyguo@fortinet.com
```

```
serial:01:86:A4
```

```
Name:         X509v3 Subject Alternative Name
```

```
Critical: no
```

```
Content:
```

```
DNS:sys169.qa.fortinet.cm
```

```
Name:         X509v3 Key Usage
```

```
Critical: no
```

```
Content:
```

```
Digital Signature, Non Repudiation, Key Encipherment, Data Encipherment, Key Agreement, Certificate Sign, CRL Sign, Encipher Only, Decipher Only
```

```
Name:         X509v3 Extended Key Usage
```

```
Critical: no
```

```
Content:
```

```
TLS Web Server Authentication, TLS Web Client Authentication
```

 
```
EMS configuration needs user to confirm server certificate.
```

```
Do you wish to add the above certificate to trusted remote certificates? (y/n)y
```

## Troubleshooting

### Certificate not trusted

When configuring a new connection to an EMS server, the certificate might not be trusted.



When you click *Authorize*, a warning displays: *The server certificate cannot be authenticated with installed CA certificates. Please install its CA certificates on this FortiGate.*


In the CLI, an error message displays when you try to verify the certificate:

```
# execute fctems verify Win2K16-EMS
certificate not configured/verified: 2
Could not verify server certificate based on current certificate authorities.
Error 1--92-60-0 in get SN call: EMS Certificate is not signed by a known CA.
```

The default FortiClient EMS certificate that is used for the SDN connection is signed by the CA certificate that is saved on the Windows server when FortiClient EMS is first installed. You can manually export and install it on the FortiGate.

#### To manually export and install the certificate on to the FortiGate:

- Export the EMS certificate on the server that EMS is installed on:
  - On the Windows server that EMS is installed on, go to *Settings > Manage computer certificates*.
  - In the certificate management module, go to *Trusted Root Certification Authorities > Certificates*.
  - Right click on the certificate issued by FortiClient Enterprise Management Server and select *All Tasks > Export*.
  - The *Certificate Export Wizard* opens. Click *Next*.
  - Select *Base-64 encoded X.509*, then click *Next*.

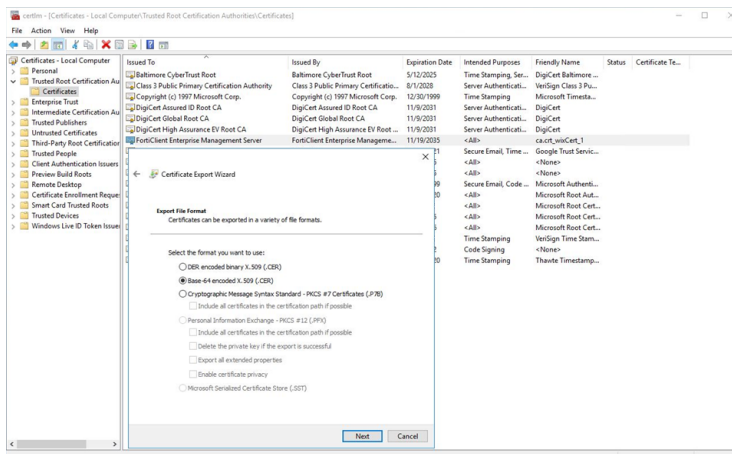

- Enter a file name for the certificate and click *Browse* to select the folder where it will be located, then click *Next*.
  - Review the settings, then click *Finish*. The certificate is downloaded to the specified folder.
- On the FortiGate, import the certificate:
    - Go to *System > Certificate*. By default, the *Certificate* option is not visible, see [Feature visibility on page 2515](#) for information.
    - Click *Import > CA Certificate*.

- c. Set *Type* to *File*, and click *Upload* to import the certificate from the management computer.
  - d. Click *OK*. The imported certificate is shown in the *Remote CA Certificate* section of the certificate table.
3. Try to authorize the certificate on the FortiGate:
- a. Go to *Security Fabric > Fabric Connectors* and edit the FortiClient EMS connector. The connection status should now say that the certificate is not authorized.
  - b. Click *Authorize*. The following warning is shown:



The warning can also be seen in the CLI:

```
# execute fctems verify Win2K16-EMS
failure in certificate configuration/verification: -4
Could not verify EMS. Error 1--94-0-401 in get SN call: Authentication denied.
```

- 4. Authorize the FortiGate on EMS:
  - a. Log in to the EMS server console and go to *Administration > Fabric Devices*.
  - b. Select the serial number of the FortiGate device, then click *Authorize*.
- 5. Try to authorize the certificate on the FortiGate again:
  - a. On the FortiGate, go to *Security Fabric > Fabric Connectors* and edit the *FortiClient EMS* card.
  - b. Click *Refresh*.
  - c. When presented with the EMS server certificate, click *Accept* to accept the certificate. Your connection should now be successful and authorized.
  - d. Click *OK*.

## Using EMS silent approval in the Security Fabric

FortiClient EMS with Fabric authorization and silent approval capabilities can approve the root FortiGate in a Security Fabric once, and then silently approve remaining downstream FortiGates in the Fabric. Similarly in an HA scenario, an approval only needs to be made once to the HA primary unit. The remaining cluster members are approved silently.

### To use EMS silent approval:

- 1. Configure the EMS entry on the root FortiGate or HA primary:

```
config endpoint-control fctems
  edit "ems139"
    set fortinetone-cloud-authentication disable
    set server "172.16.200.139"
    set https-port 443
    set source-ip 0.0.0.0
    set pull-sysinfo enable
    set pull-vulnerabilities enable
    set pull-avatars enable
    set pull-tags enable
    set pull-malware-hash enable
    unset capabilities
    set call-timeout 30
```

```

        set websocket-override disable
    next
end

```

When the entry is created, the capabilities are unset by default.

## 2. Authenticate the FortiGate with EMS:

```

# execute fctems verify ems_139
...

```

The FortiGate will enable the Fabric authorization and silent approval based on the EMS supported capabilities.

```

config endpoint-control fctems
    edit "ems139"
        set server "172.18.62.12"
        set capabilities fabric-auth silent-approval websocket
    next
end

```

3. Configure a downstream device in the Security Fabric (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more details). The downstream device will be silently approved.
4. Configure a secondary device in an HA system (see [HA active-passive cluster setup on page 2352](#) and [HA active-active cluster setup on page 2354](#) for more details). The secondary device will be silently approved.

## Allowing deep inspection certificates to be synchronized to EMS and distributed to FortiClient

On FortiClient EMS versions that support `push CA certs` capability, the FortiGate will push CA certificates used in SSL deep inspection (see [Deep inspection on page 1533](#) for more details) to the EMS server. On the EMS server, the CA certificates can be selected in the managed endpoint profiles so they can be installed on managed endpoints. FortiClient EMS 7.0.1 and later is required to use this feature.

### To configure deep inspection certificate synchronization to EMS:

#### 1. Configure the EMS Fabric connector:

```

config endpoint-control fctems
    edit "ems138"
        set fortinetone-cloud-authentication disable
        set server "172.16.200.138"
        set https-port 443
        set source-ip 0.0.0.0
        set pull-sysinfo enable
        set pull-vulnerabilities enable
        set pull-avatars enable
        set pull-tags enable
        set pull-malware-hash enable
        set capabilities fabric-auth silent-approval websocket websocket-malware push-
ca-certs
        set call-timeout 30
        set websocket-override disable
        set preserve-ssl-session disable
    next
end

```



## 2. Apply the certificate to an SSL/SSH profile for deep inspection:

```
config firewall ssl-ssh-profile
  edit "deep-inspection"
    set comment "Read-only deep inspection profile."
    config https
      set ports 443
      set status deep-inspection
    end
    ...
    set server-cert-mode re-sign
    set caname "Fortinet_CA_SSL"
    set untrusted-caname "Fortinet_CA_Untrusted"
  next
end
```


The default deep inspection profile, CA certificate, and untrusted CA certificates are used in this example.

## 3. Configure the firewall policy:

```
config firewall policy
  edit 1
    set name "deep-inspection"
    set srcintf "port14"
    set dstintf "port13"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set ssl-ssh-profile "deep-inspection"
    set av-profile "default"
    set nat enable
  next
end
```

## 4. In EMS, verify that the CA certificate was pushed to EMS:

### a. Go to *Endpoint Policy & Components > CA Certificates*.

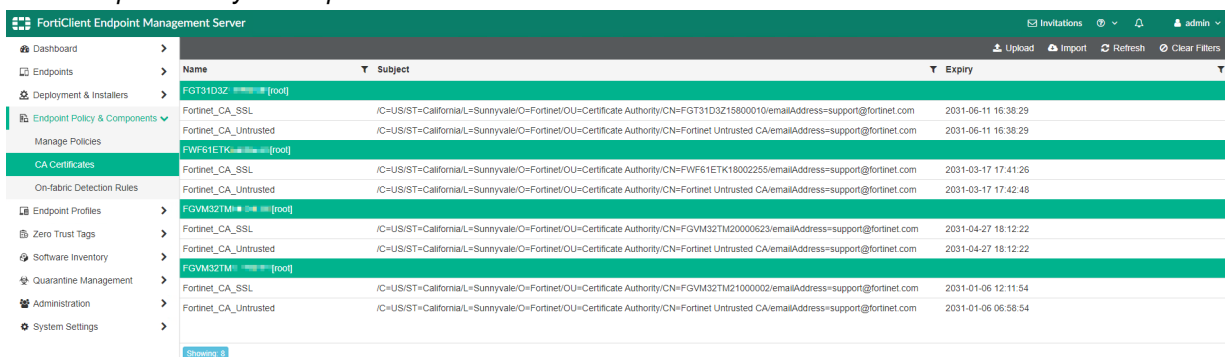


Name	Subject	Expiry
FGT31D3Z	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=FGT31D3Z15800010/emailAddress=support@fortinet.com	2031-06-11 16:38:29
Fortinet_CA_SSL	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet CA/emailAddress=support@fortinet.com	2031-06-11 16:38:29
Fortinet_CA_Untrusted	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet Untrusted CA/emailAddress=support@fortinet.com	2031-06-11 16:38:29
FWF61ETK	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=FWF61ETK18002255/emailAddress=support@fortinet.com	2031-03-17 17:41:26
Fortinet_CA_SSL	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet CA/emailAddress=support@fortinet.com	2031-03-17 17:42:48
Fortinet_CA_Untrusted	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet Untrusted CA/emailAddress=support@fortinet.com	2031-03-17 17:42:48
FGVM32TM	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=FGVM32TM20000623/emailAddress=support@fortinet.com	2031-04-27 18:12:22
Fortinet_CA_SSL	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet CA/emailAddress=support@fortinet.com	2031-04-27 18:12:22
Fortinet_CA_Untrusted	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet Untrusted CA/emailAddress=support@fortinet.com	2031-04-27 18:12:22
FGVM32TM	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=FGVM32TM21000002/emailAddress=support@fortinet.com	2031-01-06 12:11:54
Fortinet_CA_SSL	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet CA/emailAddress=support@fortinet.com	2031-01-06 06:58:54
Fortinet_CA_Untrusted	/C=US/ST=California/L=Sunnyvale/O=Fortinet/OU=Certificate Authority/CN=Fortinet Untrusted CA/emailAddress=support@fortinet.com	2031-01-06 06:58:54

### b. Verify the certificate table to see that the EMS server received the CA certification from the different FortiGates.

## 5. Select the CA certificate in the endpoint profile:

- Go to *Endpoint Profiles > Manage Profiles* and edit a profile. The default profile is used in this example.
- Click *Advanced* in the top right corner and click the *System Settings* tab.

- c. In the *Other* section, enable *Install CA Certificate on Client* and select the *Fortinet\_CA\_SSL* certificate for the desired endpoint.

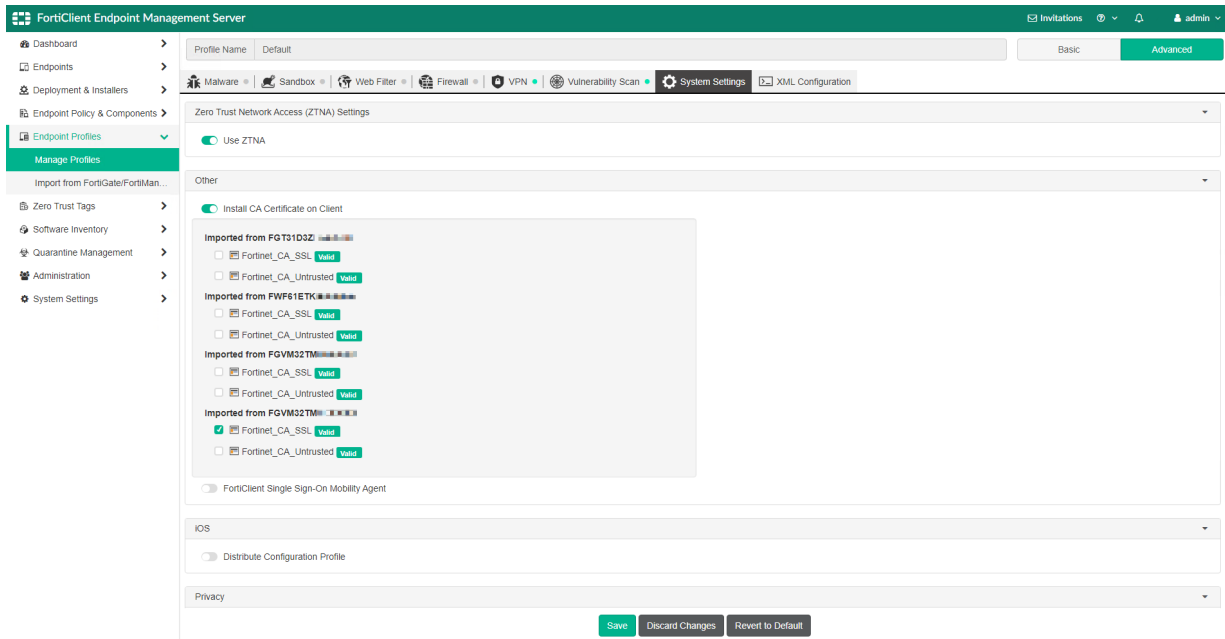


- d. Click **Save**.

Once the FortiClient endpoint is registered, it receives the CA certificate. When the FortiClient endpoint tries to access the internet through the FortiGate with the firewall policy that has deep inspection, no warning message is displayed. The server certificate is trusted with the installed CA certificate to complete the certificate chain.

## Verification

Before configuring deep inspection certificate synchronization, a warning message is displayed when a FortiClient endpoint accesses the internet through the FortiGate with the firewall policy that has deep inspection. The FortiClient certificate store does not have the FortiGate's CA that is used in the deep inspection SSL/SSH profile.


For example, accessing <https://www.facebook.com> in Chrome shows a warning. In the address bar, clicking *Not secure* > *Certificate* opens the *Certificate* dialog, which indicates that *Windows does not have enough information to verify the certificate*.

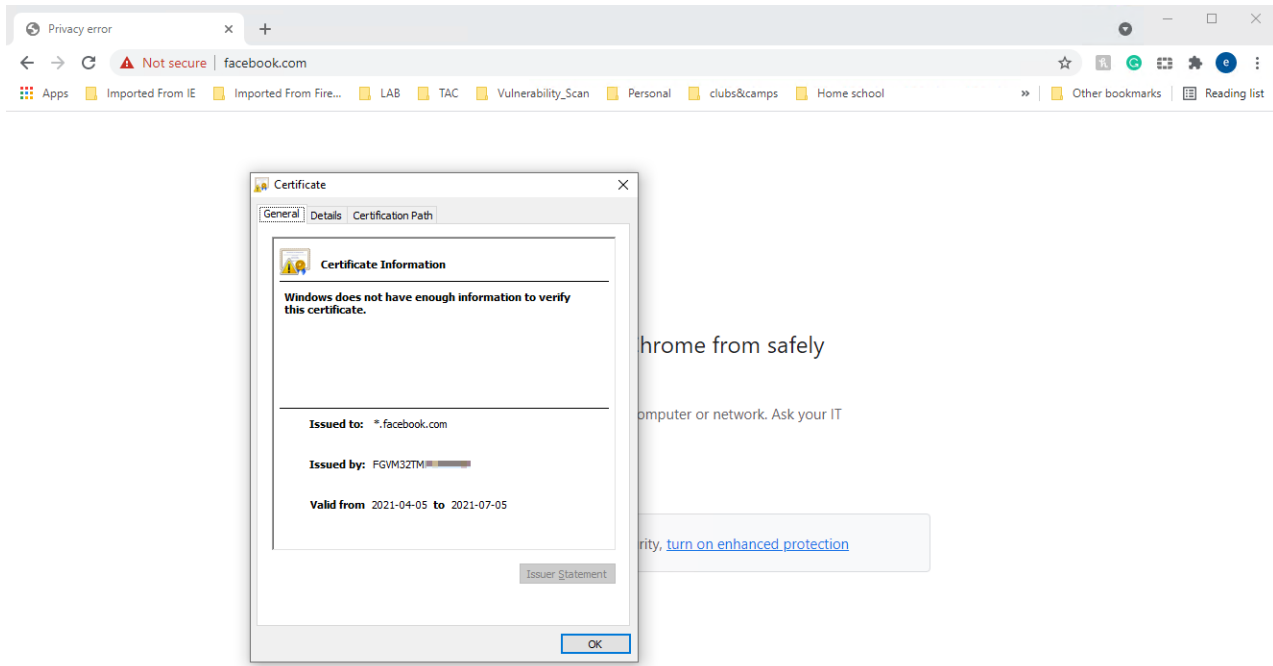

After the EMS profile is pushed to FortiClient endpoint, the expected FortiGate's certificate is shown in its certificate store.


**To verify the deep inspection certificate synchronization:**

1. In Chrome, go to *Settings > Privacy and security* and open *Manage certificates*.
2. Click the *Trusted Root Certification Authorities* tab. The FortiGate's certificate appears in the list.

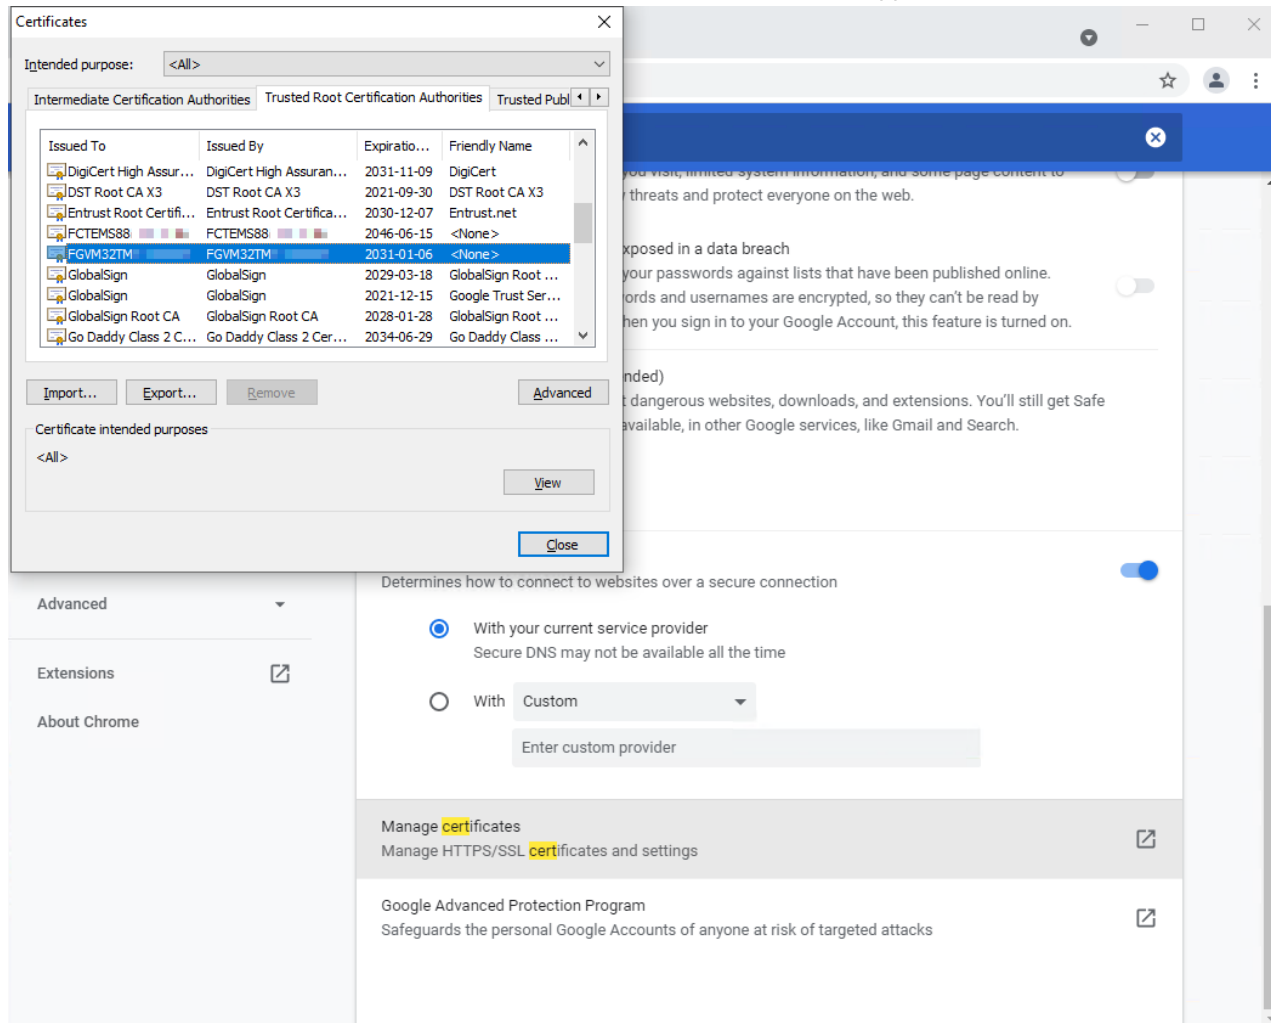

3. On the FortiClient endpoint using Chrome, go to <https://www.facebook.com>. The website is displayed.

4. In the address bar, click the padlock, then click *Certificate*. The dialog displays the valid certificate information.

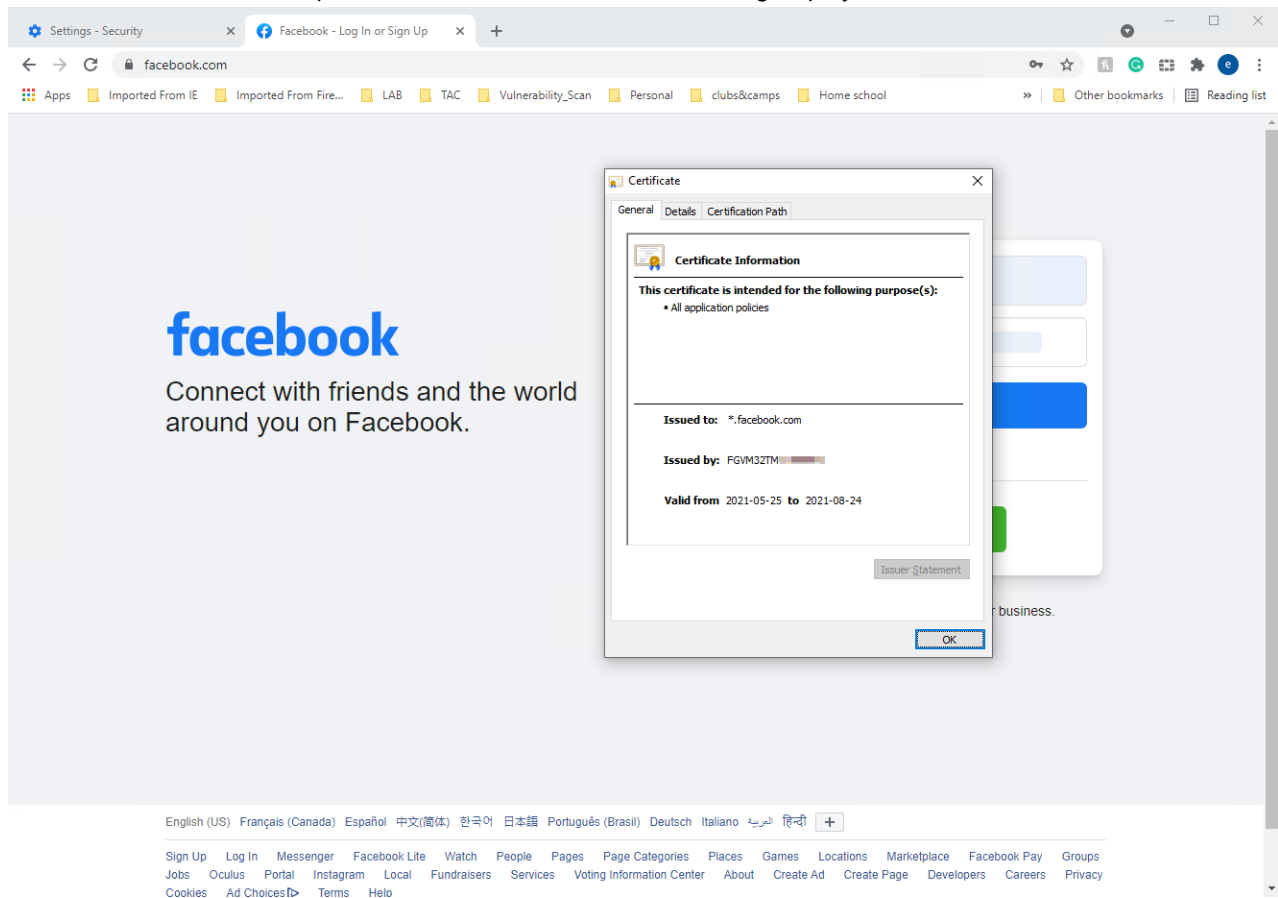

## Diagnostics

Use the diagnose endpoint `fcitems json deep-inspect-cert-sync` command in FortiOS to verify the certificate information. In the following example, there are multiple VDOMs with FortiGates in HA mode.

### To verify the primary FortiGate:

```
FGT_EC_Primary (global) # diagnose endpoint fcitems json deep-inspect-cert-sync
JSON:
"""
{
  "fortigates": [
    "FG2K5E39169*****",
    "FG2K5E39169*****"
  ],
  "vdoms": [
    {
      "vdom": "root",
      "certs": [
        {
          "name": "Fortinet_CA_SSL",
          "cert": "-----BEGIN CERTIFICATE-----\nMIID5jCCAs6g...Sfu+Q8zE8Crmt6L1X\ /bv+q\n---
--END CERTIFICATE-----\n"
```

```

    },
    {
        "name": "Fortinet_CA_Untrusted",
        "cert": "-----BEGIN CERTIFICATE-----\\nMIID8DCCAtig...3zBbfzP+nVUpC\\nZDPRZA==\\n---
---END CERTIFICATE-----"
    }
]
},
{
    "vdom": "vdom1",
    "certs": [
        {
            "name": "Fortinet_CA_SSL",
            "cert": "-----BEGIN CERTIFICATE-----\\nMIID5jCCAs6g...Sfu+Q8zE8Crmt6L1X\\n/bv+q\\n---
---END CERTIFICATE-----\\n"
        },
        {
            "name": "Fortinet_CA_Untrusted",
            "cert": "-----BEGIN CERTIFICATE-----\\nMIID8DCCAtig...3zBbfzP+nVUpC\\nZDPRZA==\\n---
---END CERTIFICATE-----"
        }
    ]
}
}
"""

```

**To verify the secondary FortiGate:**

```
FGT_EC_Secondary(global) # diagnose endpoint fctems json deep-inspect-cert-sync
JSON:
"""
{
  "fortigates":[
    "FG2K5E39169*****",
    "FG2K5E39169*****"
  ],
  "vdoms":[
    {
      "vdom":"root",
      "certs":[
        {
          "name":"Fortinet_CA_SSL",
          "cert":"-----BEGIN CERTIFICATE-----\nMIID5jCCAs6g...Sfu+Q8zE8Crmt6L1X\ /bv+q\n---
--END CERTIFICATE-----\n"
        },
        {
          "name":"Fortinet_CA_Untrusted",
          "cert":"-----BEGIN CERTIFICATE-----\nMIID8DCCAtig...3zBbfzP+nVUpC\ \nZDPRZA==\n---
---END CERTIFICATE-----"
        }
      ]
    },
    {
      "vdom":"vdom1",
      "certs":[
```

```

    {
        "name": "Fortinet_CA_SSL",
        "cert": "-----BEGIN CERTIFICATE-----\nMIID5jCCAs6g...Sfu+Q8zE8Crmt6L1X\ /bv+q\ \n---
--END CERTIFICATE-----\n"
    },
    {
        "name": "Fortinet_CA_Untrusted",
        "cert": "-----BEGIN CERTIFICATE-----\nMIID8DCCAtig...3zBbfzP+nVUpC\ \nZDPRZA==\n---
---END CERTIFICATE-----"
    }
]
}
]
}
}
""

```

## Allowing FortiClient EMS connectors to trust EMS server certificate renewals based on the CN field

When a FortiGate establishes a Fabric connection with FortiClient EMS, the FortiGate must trust the CA that signed the server certificate. Upon the approval of the EMS certificate, the FortiGate saves the CN field and will trust future certificates that are signed by the same CA and have the same CN field. This allows EMS servers to update their certificates at regular intervals without requiring re-authorization on the FortiGate side, as long as the CN field matches. This prevents interruptions to the EMS Fabric connection when a certificate is updated. Previously, upon the user's approval of the certificate, the certificate fingerprint was saved on the FortiGate, and this required the FortiGate to re-authorize the EMS connection each time the server certificate is updated.

```

config endpoint-control fctems
    edit <id>
        set trust-ca-cn {enable | disable}
    next
end

```

This feature is supported for EMS on-premise and cloud connections, and is the default setting. To authorize based on the certificate fingerprint, disable the `trust-ca-cn` setting. If the setting is changed back to be enabled at a later time, the user will have to re-approve the EMS certificate.

### To configure the EMS Fabric connector to trust EMS server certificate renewals based on the CN field:

```

config endpoint-control fctems
    edit 1
        set status enable
        set name "ems133"
        set dirty-reason none
        set fortinetone-cloud-authentication disable
        set server "172.18.62.35"
        set https-port 443
        set serial-number "FCTEMS8822000000"
        set tenant-id "00000000000000000000000000000000"
        set source-ip 0.0.0.0
        set pull-sysinfo enable
        set pull-vulnerabilities enable
        set pull-avatars enable
        set pull-tags enable
    end
end

```

```

        set pull-malware-hash enable
        set capabilities fabric-auth silent-approval websocket websocket-malware push-ca-
certs common-tags-api tenant-id
        set call-timeout 30
        set out-of-sync-threshold 180
        set websocket-override disable
        set preserve-ssl-session disable
        set interface-select-method auto
        set trust-ca-cn enable
    next
end

```

### To verify the configuration:

1. Download the FortiGate configuration file.
2. Verify the `ca-cn-info` entry, which lists the trusted CA certificate information. In this example, `ems133` connector has `trust-ca-cn` enabled and `ems138` connector has `trust-ca-cn` disabled. For `ems138`, the `ca-cn-info` entry does not appear, and there is a `certificate-fingerprint` field instead:

```

config endpoint-control fctems
    edit 1
        set status enable
        set name "ems133"
        set server "172.18.62.35"
        set serial-number "FCTEMS8822000000"
        set tenant-id "00000000000000000000000000000000"
        set capabilities fabric-auth silent-approval websocket websocket-malware push-
ca-certs common-tags-api tenant-id
        set ca-cn-info "C = CA, ST = BC, L = VANCOUVER, O = FTNT, OU = ReleaseQA, CN =
Release_QA, emailAddress = *****@fortinet.comRelease_QA"
    next
    edit 2
        set status enable
        set name "ems138"
        set server "172.18.62.18"
        set serial-number "FCTEMS8821000000"
        set tenant-id "00000000000000000000000000000000"
        set capabilities fabric-auth silent-approval websocket websocket-malware push-
ca-certs common-tags-api tenant-id
        set certificate-fingerprint
"18:51:76:67:EB:4C:31:A1:51:3F:74:F7:8E:1D:47:5C:18:0F:FE:45:DF:52:91:52:37:0B:27:E7:F1:
85:5B:01:8C:7D:FB:2D:C7:D2:CC:FE:4A:E3:0E:A9:2A:1C:27:4D:D2:A6:C5:87:B8:97:98:57:75:10:1
5:28:EF:A2:23:7C"
        set trust-ca-cn disable
    next
    ...
end

```

3. Run diagnostics to view the certificate information:

```

# diagnose test application fcnacd 96
ems_id 1, certificate authority and common name: C = CA, ST = BC, L = VANCOUVER, O =
FTNT, OU = ReleaseQA, CN = Release_QA, emailAddress = *****@fortinet.comRelease_QA
ems_id 1, fingerprint_sha512:
ems_id 2, certificate authority and common name:
ems_id 2, fingerprint_sha512:

```



```
18:51:76:67:EB:4C:31:A1:51:3F:74:F7:8E:1D:47:5C:18:0F:FE:45:DF:52:91:52:37:0B:27:E7:F1:8
5:5B:01:8C:7D:FB:2D:C7:D2:CC:FE:4A:E3:0E:A9:2A:1C:27:4D:D2:A6:C5:87:B8:97:98:57:75:10:15
:28:EF:A2:23:7C
```

## Synchronizing FortiClient ZTNA tags

ZTNA tags (formerly FortiClient EMS tags in FortiOS 6.4 and earlier) are tags synchronized from FortiClient EMS as dynamic address objects on the FortiGate. FortiClient EMS uses zero-trust tagging rules to automatically tag managed endpoints based on various attributes detected by the FortiClient. When the FortiGate establishes a connection with the FortiClient EMS server via the EMS Fabric connector, it pulls zero-trust tags containing device IP and MAC addresses and converts them to read-only dynamic address objects. It also establishes a persistent WebSocket connection to monitor for changes in zero-trust tags, which keeps the device information current. These ZTNA tags can then be used in ZTNA rules, firewall rules, and NAC policies to perform security posture checks. ZTNA tags are displayed in the *Device Inventory* widget, *FortiClient* widget, and *Asset Identity Center* page.


When using WebSocket, EMS pushes notifications to the corresponding FortiGate when there are updates to tags or other monitored attributes. The FortiGate then fetches the updated information using the REST API over TCP/8013. When WebSocket is not used (due to an override or unsupported EMS version), updates are triggered on demand from the FortiGate side over the REST API.

If the WebSocket capability is detected, the capabilities setting will automatically display the WebSocket option. You can use the `diagnose test application fcnacd 2` command to view the status of the WebSocket connection.


In the following example, the FortiGate connects to and retrieves ZTNA tags from a FortiClient EMS configured with tagging rules. It is assumed that zero-trust tags and rules are already created on the FortiClient EMS. For more information, see the [Zero Trust Tags](#) section of the EMS Administration Guide.

### To verify zero-trust tags in FortiClient EMS:

1. Go to *Zero Trust Tags > Zero Trust Tagging Rules* to view the tags.

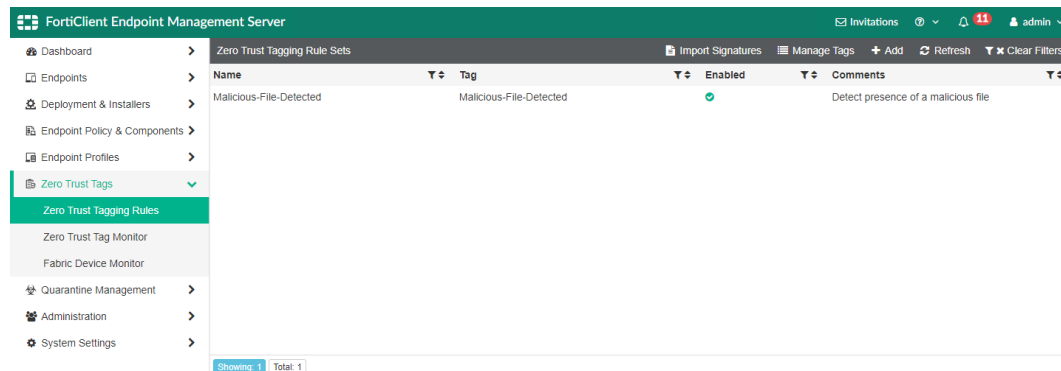


2. Go to *Zero Trust Tags > Zero Trust Tag Monitor* to view the registered users who match the defined tag.

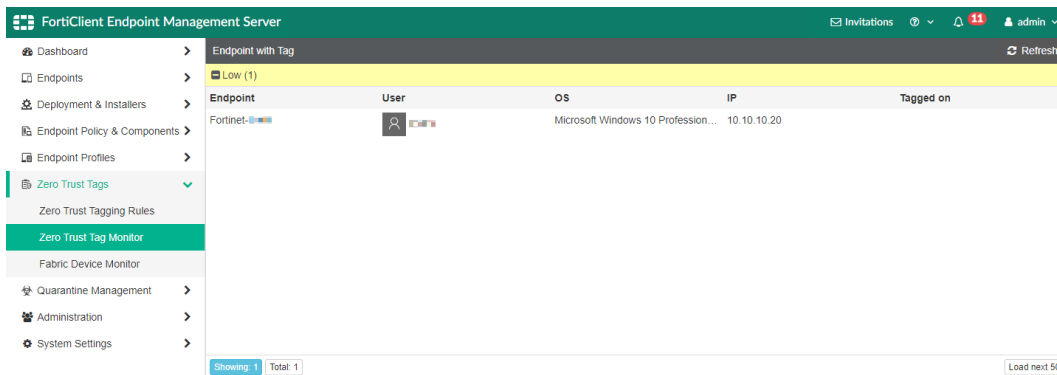

### To configure the EMS Fabric connector to synchronize ZTNA tags in the GUI:

1. Configure the EMS Fabric connector:
  - a. On the root FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *FortiClient EMS* card.
  - b. In the *Settings* tab, set the *Status* to *Enabled*.
  - c. Enable *Synchronize firewall addresses*.

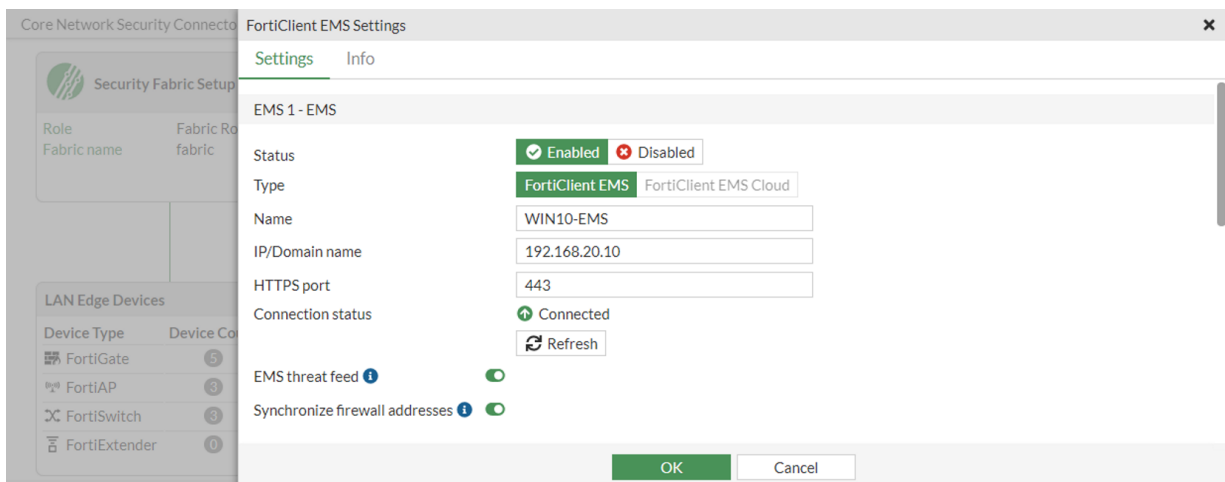

- d. Configure the other settings as needed and validate the certificate.
  - e. Click OK.
2. Enable ZTNA:
  - a. Go to *System > Feature Visibility* and enable *Zero Trust Network Access*.
  - b. Click *Apply*.
3. Go to *Policy & Objects > ZTNA* and select the *ZTNA Tags* tab. You will see the ZTNA IP and ZTNA MAC tags

synchronized from the FortiClient EMS.

ZTNA Rules   ZTNA Servers   ZTNA Tags			
<a href="#">+ Create New Group</a> <a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Search</a>			
Name	Details	Comments	Ref.
<b>ZTNA IP Tag</b>			
Zero-day Detections			0
Medium			0
Malicious-File-Detected			2
Low			4
IOC Suspicious			0
High			0
FCTEMS_ALL_FORTICLOUD_SERVERS			0
Critical			1
all_registered_clients			1
<b>ZTNA MAC Tag</b>			
Zero-day Detections			0
Medium			0
Malicious-File-Detected			0
Low			0
IOC Suspicious			0
High			0
Critical			0
all_registered_clients			0
<b>ZTNA Tag Group</b>			
grp_ems138	all_registered_clients Critical		0

## To configure the EMS Fabric connector to synchronize ZTNA tags in the CLI:

### 1. Configure the EMS Fabric connector on the root FortiGate:

```
config endpoint-control fctems
  edit 1
    set status enable
    set name "WIN10-EMS"
    set server "192.168.20.10"
    set https-port 443
    set pull-sysinfo enable
    set pull-vulnerabilities enable
    set pull-avatars enable
    set pull-tags enable
    set pull-malware-hash enable
    set capabilities fabric-auth silent-approval websocket
  next
end
```

### 2. Verify which IPs the dynamic firewall address resolves to:

```
# diagnose firewall dynamic list
List all dynamic addresses:
FCTEMS0000100000_all_registered_clients: ID(51)
  ADDR(172.17.194.209)
  ADDR(10.10.10.20)
...

FCTEMS0000100000_Low: ID(78)
  ADDR(172.17.194.209)
  ADDR(10.10.10.20)
...

FCTEMS0000100000_Malicious-File-Detected: ID(190)
```

ADDR (172.17.194.209)

ADDR (10.10.10.20)

...



When running the FortiGate in multi VDOM mode, by default, EMS is configured in the global VDOM. All ZTNA tags synchronized with the globally configured EMS are shared by all VDOMs.

## Configuring LAN edge devices

The *LAN Edge Devices* connector card displays a summary about the FortiGates, FortiAPs, FortiSwitches, and FortiExtenders in the Security Fabric. Information about the device type, number of devices, and number of unregistered and unauthorized devices is displayed. If there are devices that do not have a green checkmark in the *Status* column, hover over the status message to view the tooltip with required action. In this example, there are FortiAPs and FortiSwitches that are not registered. The tooltip includes a link to the *System > Fabric Management* page to register or authorize the devices. The tooltip for FortiExtenders includes a link to the *Network > FortiExtenders > Managed FortiExtenders* page to register or authorize the devices.

### Core Network Security Connectors

Security Fabric Setup		Logging & Analytics		FortiClient EMS	
Role	Fabric Root	FortiAnalyzer	Enabled	EMS	Enabled
Fabric name	fabric	Cloud Logging	Disabled	IP address	10.100.88.5

LAN Edge Devices		
Device Type	Device Count	Status
FortiGate	5	All authorized & registered
FortiAP	3	3 devices not registered
FortiSwitch	3	3 devices not registered
FortiExtender	0	None configured

Go to the Fabric Management page to register your FortiAP and handle any other device related concerns.  
[Fabric Management](#)



If the default `auto-auth-extension-device` settings on the FortiAP or FortiSwitch have been modified, manual authorization in the Security Fabric may not be required.

For more information about configuring FortiAPs, see [Configuring the FortiGate interface to manage FortiAP units](#) and [Discovering, authorizing, and deauthorizing FortiAP units](#).


For more information about configuring FortiSwitches, see [Discovering, authorizing, and deauthorizing FortiSwitch units](#).

For more information about configuring FortiExtenders, see [Adding a FortiExtender on page 472](#) and [FortiExtender and FortiGate integration](#).


The following example shows how to register a FortiSwitch that has been authorized to join the Security Fabric. The procedure is similar for FortiAPs and FortiExtenders. If the device requires authorization, refer to [Authorizing devices on page 2258](#).

### To register a FortiSwitch:

1. Connect the device to the root FortiGate.
2. On the root FortiGate, go to *System > Fabric Management*. (Use the same page for a FortiAP, or *Network > FortiExtenders > Managed FortiExtenders* for a FortiExtender.)
3. Select the unregistered device and click *Register*.

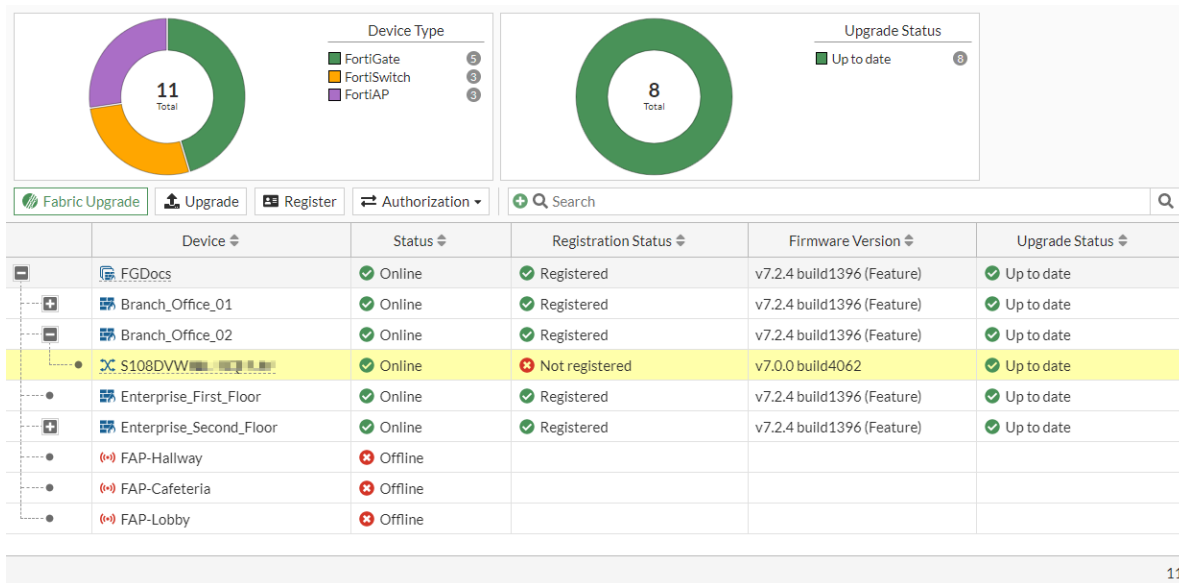

The *Device Registration* pane opens and the FortiGate verifies the registration information.

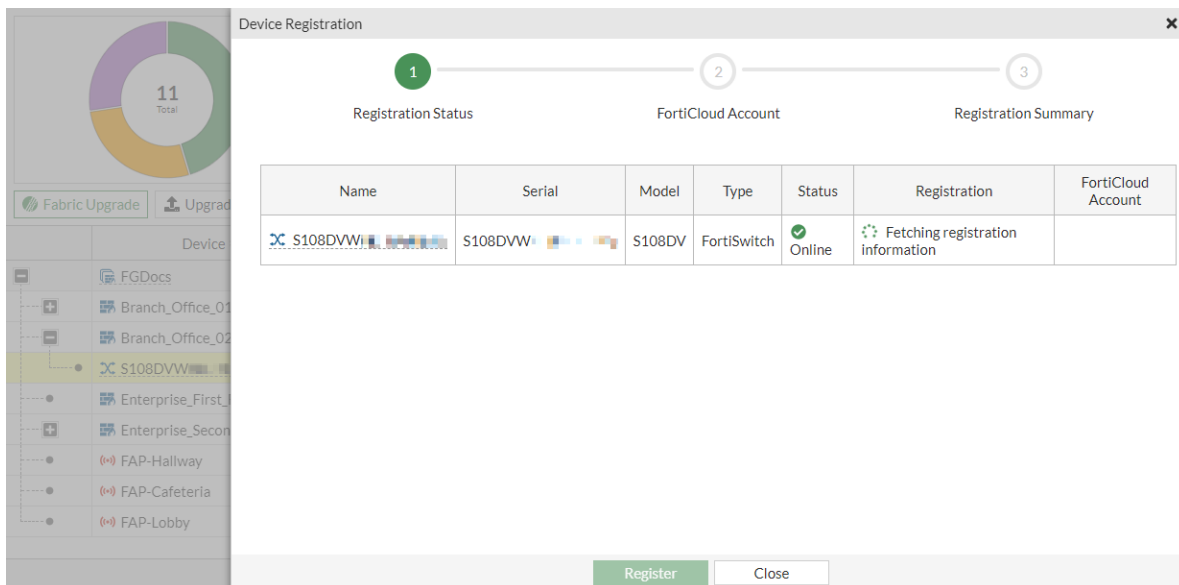

4. Once the registration process is complete, click *Close*.

## Configuring central management

The *Central Management* Fabric connector card on the root FortiGate is used to configure the FortiManager settings, which includes on-premises FortiManager, FortiGate Cloud, and FortiManager Cloud. After the *Central Management*

connector is configured, it automatically synchronizes with any connected downstream devices.

This topic covers the following central management aspects:

- [Configuring FortiManager](#)
- [Configuring FortiManager Cloud](#)

## Configuring FortiManager

Once the *Central Management* Fabric connector is configured, the root FortiGate pushes this configuration to downstream FortiGates. FortiManager provides remote management of FortiGate devices over TCP port 541. The FortiManager must have internet access for it to join the Security Fabric.

Once configured, the FortiGate can receive antivirus and IPS updates, and allows remote management through FortiManager or the FortiGate Cloud service. The FortiGate management option must be enabled so that the FortiGate can accept management updates to its firmware and FortiGuard services.


Adding a FortiManager device to the Security Fabric requires the following steps in FortiOS, which can be completed in the GUI or CLI:

- Specify the FortiManager IP address or domain name.
- Approve the FortiManager serial number that is returned by the provided IP address or domain name.

After completing the steps in FortiOS, go to FortiManager to complete the process by authorizing the FortiGate.


### To add a FortiManager to the Security Fabric in the GUI:

1. On the root FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *Central Management* card.
2. In the *Settings* tab, set the *Status* to *Enabled*.
3. Set the *Type* to *On-Premises*.

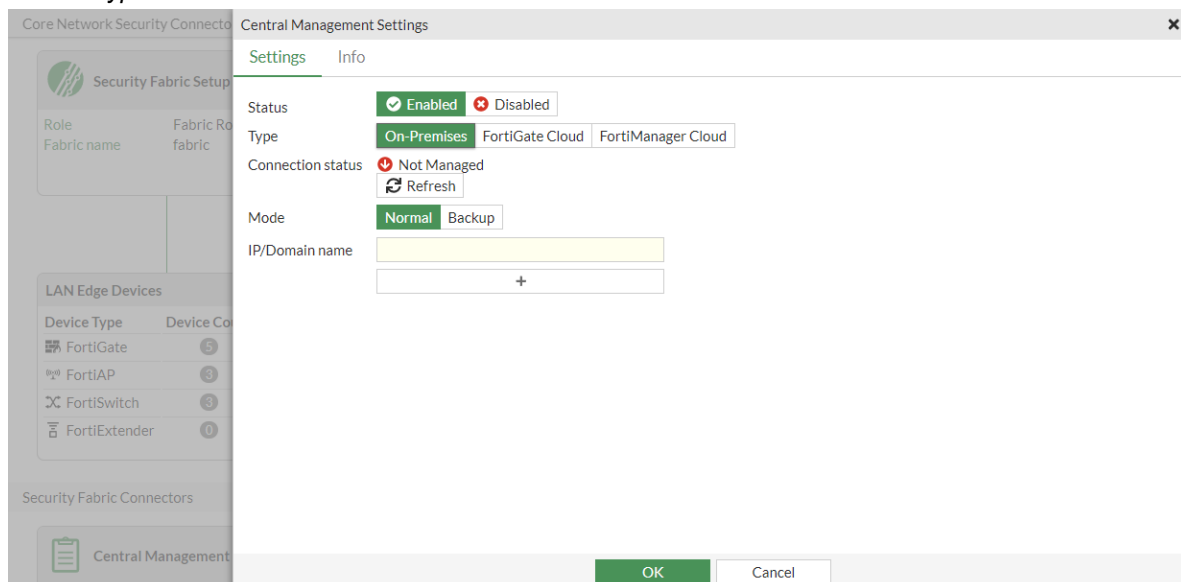

4. Enter the *IP/Domain Name* of the FortiManager.
5. Click *OK*.

The *Request Sent & Received* pane opens.

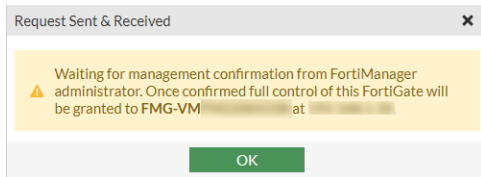

6. Review the serial number, and click **OK**.
7. Go to FortiManager and authorize the FortiGate. See [Authorizing the FortiGate in FortiManager on page 2625](#).

### To add a FortiManager to the Security Fabric in the CLI:

1. Enter the FortiManager connection information:

```
config system central-management
    set type fortimanager
    set fmg {<IP_address> | <Domain name>}
end
```

2. Approve the returned FortiManager serial number.

When configuring the FortiManager connection from the CLI, no prompt is available to approve the returned FortiManager serial number. Enter the following:

```
# execute central-mgmt <fmg-serial-no> <PSK>
```



If you have not previously configured a model device in FortiManager and leveraged a pre-shared key for registration, you can enter any character for the PSK field in the `execute central-mgmt` command.

3. Go to FortiManager and authorize the FortiGate. See [Authorizing the FortiGate in FortiManager on page 2625](#).

## Authorizing the FortiGate in FortiManager

After completing the GUI or CLI steps in FortiOS, go to FortiManager to authorize the FortiGate to complete the process.

### To authorize the FortiGate in FortiManager:

1. On FortiManager, go to *Device Manager* and find the FortiGate in the *Unauthorized Devices* list. The unauthorized device list is located in the root ADOM, regardless of the firmware version of the root ADOM or FortiOS.
2. Select the FortiGate device or devices, and click *Authorize* in the toolbar.
3. In the *Authorize Device* pop-up, adjust the device names as needed, select the appropriate ADOM (if applicable), and click **OK**.

For more information about using FortiManager, see the [FortiManager Administration Guide](#).

## Configuring FortiManager Cloud

This cloud-based SaaS management service is available through FortiManager. This service is included in FortiCloud accounts with a FortiManager Cloud account level subscription (ALCI).

## Configuring a per-device license


Once the FortiGate has acquired a contract named *FortiManager Cloud*, FortiCloud creates a cloud-based FortiManager instance under the user account. You can launch the portal for the cloud-based FortiManager from FortiCloud, and its URL starts with the User ID.

You can use a FortiGate with a contract for *FortiManager Cloud* to configure central management by using the FQDN of *fortimanager.forticloud.com*. A FortiGate-FortiManager tunnel is established between FortiGate and the FortiManager instance.

After the tunnel is established, you can execute FortiManager functions from the cloud-based FortiManager portal.

### To configure FortiManager Cloud central management:

1. Enable FortiManager Cloud.
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Central Management* card.
  - b. In the *Settings* tab, set the *Status* to *Enabled*.
  - c. Set the *Type* to *FortiManager Cloud*.

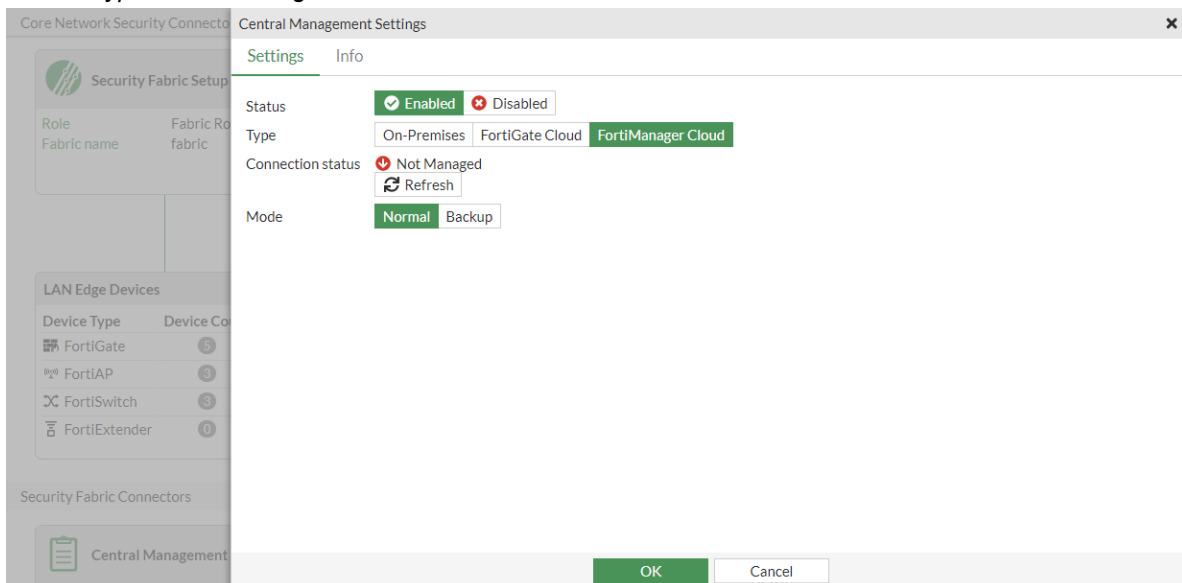

- d. Click **OK**.



The *FortiManager Cloud* button can only be selected if you have a FortiManager Cloud product entitlement.

2. In the FortiManager Cloud instance, go to *Device Manager* and authorize the FortiGate. See [Authorizing devices](#) for more information.

When using the FortiGate to enable FortiManager Cloud, the FortiGate appears as an unauthorized device. After authorizing the FortiGate, it becomes a managed device.

1 Devices Total	0 Devices Connection Down	0 Devices Device Config Modified	0 Devices Policy Package Modified
<div> <span>Edit</span> <span>Delete</span> <span>Import Policy</span> <span>Install</span> <span>More</span> <span>Column Settings</span> </div>			
Device Name	Config Status	Policy Package Status	CLI Template Status
FG101E4Q17004236	Synchronized	Never installed	FortiGate 7.0.0,build0066 (GA)



In FortiOS, the *Security Fabric > Fabric Connectors* page now displays green arrow in the *Central Management* card because FortiManager Cloud is registered.

## Diagnostics

### To verify the contract information:

```
# diagnose test update info contract
...
System contracts:
...
Account contracts:
    FMGC,Thu Dec  2 16:00:00 2021
...
```

### To verify the FortiManager Cloud instance has launched and the FortiGate is registered:

```
# diagnose fdsm central-mgmt-status
Connection status: Up
Registration status: Registered
```

## Configuring sandboxing

The Security Fabric supports the following FortiSandbox deployments.

Type	Description	Requirements
FortiGate Cloud Sandbox	Files are sent to Fortinet's Cloud Sandbox cluster for processing.	<ul style="list-style-type: none"> <li>The FortiGate must have a valid AV license.</li> <li>The FortiCloud account provides access to a portal to view submissions. This is not required for the Security Fabric.</li> </ul>
FortiSandbox Cloud	Files are sent to a dedicated FortiCloud hosted instance of FortiSandbox for processing.	<ul style="list-style-type: none"> <li>FortiCloud premium license</li> <li>FortiSandbox Cloud entitlement</li> <li>The FortiGate and FortiCloud license are registered to the same account.</li> </ul>
FortiSandbox appliance	Files are sent to a physical appliance or VM, typically residing on premise, for processing.	<ul style="list-style-type: none"> <li>None</li> </ul>

To apply sandboxing in a Security Fabric, connect one of the FortiSandbox deployments, then configure an antivirus profile to submit files for dynamic analysis. The submission results supplement the AV signatures on the FortiGate. FortiSandbox inspection can also be used in web filter profiles.

In a Security Fabric environment, sandbox settings are configured on the root FortiGate. Once configured, the root FortiGate pushes the settings to other FortiGates in the Security Fabric.

## FortiGate Cloud Sandbox

FortiGate Cloud Sandbox allows users to take advantage of FortiSandbox features without having to purchase, operate, and maintain a physical appliance. It also allows you to control the region where your traffic is sent to for analysis. This allows you to meet your country's compliance needs regarding data storage locations.

Users are not required to have a FortiCloud account to use FortiGate Sandbox Cloud.

The submission to the cloud with a valid FortiGuard Antivirus (AVDB) license is rate limited per FortiGate model. Refer to the Service Description for details. For those without any AVDB license, the submission is limited to only 100 per day.

To configure FortiGate Cloud Sandbox, you must first activate the connection from the CLI. Note that FortiGate Cloud Sandbox is decoupled from FortiGate Cloud logging, so you do not need to have a FortiCloud account or have cloud logging enabled.

### To activate the FortiGate Cloud Sandbox connection:

```
# execute forticloud-sandbox region
0 Europe
1 Global
2 Japan
3 US
Please select cloud sandbox region[0-3]:3
```

After a region is selected, the following configuration is added:


```
config system fortiguard
    set sandbox-region {0 | 1 | 2 | 3}
end
```



Alternatively, using the `execute forticloud-sandbox update` command also works.

### To obtain or renew a FortiGuard antivirus license:


1. See the [How to Purchase or Renew FortiGuard Services](#) video for FortiGuard antivirus license purchase instructions.
2. Once a FortiGuard license is purchased and activated, users are provided with a paid FortiSandbox Cloud license.
  - a. Go to *Dashboard > Status* to view the FortiSandbox Cloud license indicator.

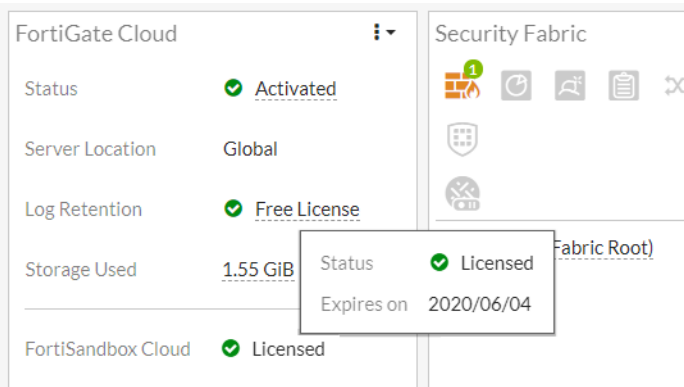

- b. Alternatively, go to *System > FortiGuard* to view the FortiSandbox Cloud license indicator.

**To enable FortiGate Cloud Sandbox in the GUI:**

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Sandbox* card.
2. In the *Settings* tab, set the *Status* to *Enabled*.
3. Set the *Type* to *FortiGate Cloud*.
4. Select a *Region* from the dropdown.

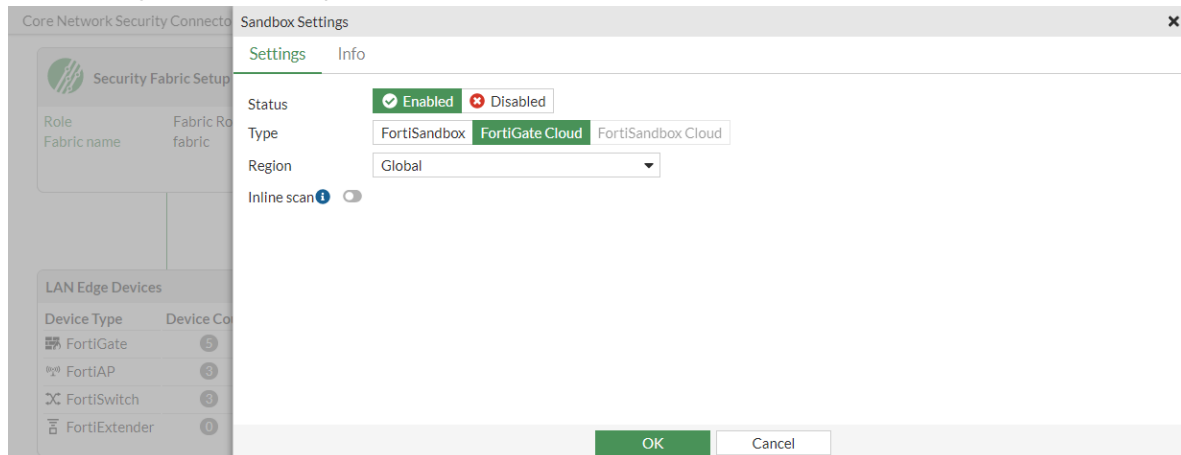

5. Click **OK**.

**FortiSandbox Cloud**

FortiSandbox Cloud offers more features and better detection capability. Connecting to FortiSandbox Cloud will automatically use the cloud user ID of the FortiGate to connect to the dedicated FortiSandbox Cloud instance. The FortiGate automatically detects if there is a valid entitlement.


The following items are required to initialize FortiSandbox Cloud:

- A FortiCloud premium account.
- A valid FortiSandbox Cloud contract on the FortiGate. To view contract information in the CLI, enter `diagnose test update info`. The `User ID` at the end of the output shows FortiCloud which FortiSandbox Cloud account the FortiGate is connected to.
- A provisioned FortiSandbox Cloud. See [Deploying FortiSandbox Cloud](#) for information.

**To configure FortiSandbox Cloud in the GUI:**

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Sandbox* card.
2. In the *Settings* tab, set the *Status* to *Enabled*.

### 3. Set the *Type* to *FortiSandbox Cloud*.

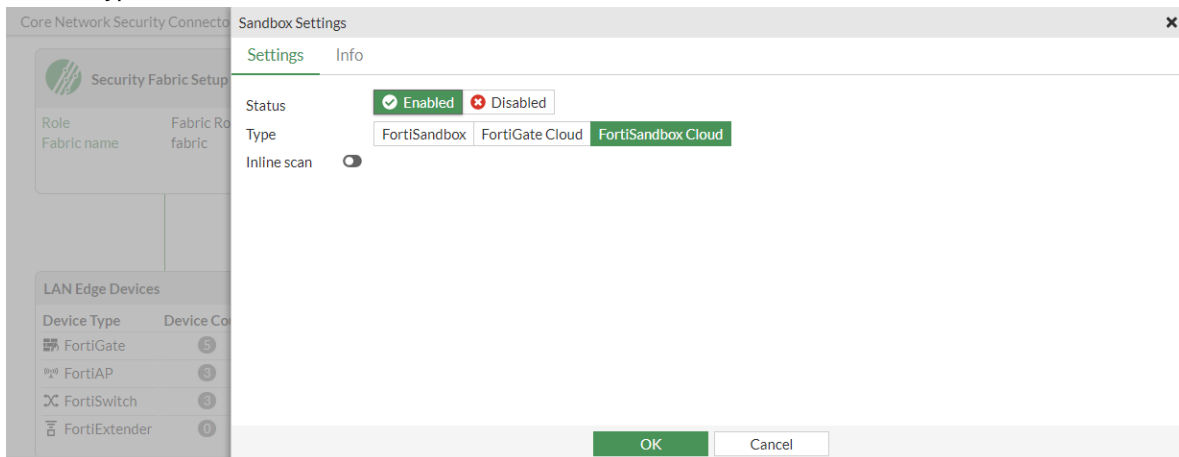

If the *FortiSandbox Cloud* option is grayed out or not visible, enter the following in the CLI:

```
config system global
    set gui-fortigate-cloud-sandbox enable
end
```

### 4. Click *OK*.

#### To configure FortiSandbox Cloud in the CLI:

```
config system fortisandbox
    set status enable
    set forticloud enable
    set server <string>
end
```

If the FortiGate does not detect the proper entitlement, a warning is displayed and the CLI configuration will not save.

If the FortiSandbox Cloud is running version 4.0.0 and later, the FortiGate will automatically connect to [fortisandboxcloud.com](https://fortisandboxcloud.com), and then discover the specific region and server to connect to based on which region the customer selected to deploy their FortiSandbox Cloud instance. The FortiGate must have a FortiCloud premium account license and a FortiSandbox Cloud VM license for this functionality.

## FortiSandbox appliance

FortiSandbox appliance is the on-premise option for a full featured FortiSandbox. Connecting to a FortiSandbox appliance requires that Cloud Sandbox is disabled.

#### To enable FortiSandbox appliance in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Sandbox* card.
2. In the *Settings* tab, set the *Status* to *Enabled*.

3. In the **Server** field, enter the FortiSandbox device's IP address.

The screenshot shows the 'Sandbox Settings' dialog in the FortiGate GUI. The 'Settings' tab is active. The 'Status' is set to 'Enabled' (indicated by a green checkmark). The 'Type' is set to 'FortiSandbox'. The 'Server' field contains the IP address '10.100.88.13'. The 'Notifier email' field is empty. The 'Inline scan' checkbox is checked. There are 'OK' and 'Cancel' buttons at the bottom right.

4. Optionally, enter a *Notifier email*.
5. Click **OK**.

### To enable FortiSandbox appliance in the CLI:

```
config system fortisandbox
    set status enable
    set forticloud disable
    set server <address>
end
```

## Authorizing the FortiGate from FortiSandbox Cloud and a FortiSandbox appliance

Once the FortiGate makes a connection to the FortiSandbox Cloud or appliance, the FortiGate must be authorized.

### To authorize a FortiGate from FortiSandbox:

1. In the FortiSandbox GUI, go to *Scan Input > Device* in 3.2 or *Security Fabric > Device* in 4.0.
2. Search using the FortiGate serial number to locate the FortiGate. In the *Auth* column, click the link icon to authorize the FortiGate.
3. Repeat this step to authorize the VDOMs if required.

Device Name	Serial	Malicious	High	Medium	Low	Clean	Others	Mal Pkg	URL Pkg	Auth	Limit	Status	
FGT_PROXY	FG101E4Q17000000	0	0	0	0	0	0	3.1821	3.606				
FGT_PROXYvdom1	FG101E4Q17000000	0	0	0	0	0	0	3.1821	3.606				

The link icon changes from an open to a closed link, which indicates that the FortiGate is authorized.

Device Name	Serial	Malicious	High	Medium	Low	Clean	Others	Mal Pkg	URL Pkg	Auth	Limit	Status	
FGT_PROXY	FG101E4Q17000000	0	0	0	0	0	0	3.1821	3.606				
FGT_PROXYvdom1	FG101E4Q17000000	0	0	0	0	0	0	3.1821	3.606				

4. In the FortiGate GUI, go to *Security Fabric > Fabric Connectors* and double-click the *FortiSandbox* card.
5. Click *Test connectivity*. The FortiGate is now authorized and the status displays as *Connected*.

## Antivirus profiles

An antivirus profile must be configured to send files to the sandbox. Once submitted, sandbox inspection is performed on the file to detect malicious activities. The FortiGate can use the dynamic malware detection database from the sandbox to supplement the AV signature database. See [Using FortiSandbox post-transfer scanning with antivirus on page 1296](#) for more information.

FortiSandbox inline scanning is supported on FortiSandbox appliances in proxy inspection mode. When inline scanning is enabled, the client's file is held while it is sent to FortiSandbox for inspection. Once a verdict is returned, the appropriate action is performed on the held file. If there is an error or timeout on the FortiSandbox, the FortiGate's configuration determines what to do with the held file. See [Using FortiSandbox inline scanning with antivirus on page 1298](#) for more information.



Inline scanning requires a FortiSandbox appliance running version 4.2 later, or FortiGate Sandbox Cloud (SaaS). This feature is not supported on FortiSandbox Cloud (PaaS).

## Web filter profiles

Sandbox inspection can be used in web filter profiles. The FortiGate uses URL threat detection database from the sandbox to block malicious URLs. See [Block malicious URLs discovered by FortiSandbox on page 1338](#) for more information.

## Top FortiSandbox Files FortiView monitor

In the *Top FortiSandbox Files* FortiView monitor, users can select a submitted file and drill down to view its static and dynamic file analysis. The full FortiSandbox report can be downloaded in PDF format. This feature works with FortiGate Cloud Sandbox, FortiSandbox Cloud, and FortiSandbox appliance. FortiSandbox must be running version 3.2.1 and later.

### Prerequisites:

1. Add FortiSandbox to the Security Fabric.
2. Configure an AV profile with *Send files to FortiSandbox for inspection* enabled (see [Using FortiSandbox post-transfer scanning with antivirus on page 1296](#)).
3. Configure a firewall policy with the AV profile that allows traffic to the internet.
4. Add the *Top FortiSandbox Files* FortiView monitor (see [Adding FortiView monitors on page 120](#)).
5. On a client PC, attempt to download a suspicious file.

### To view the FortiSandbox analysis and download the PDF:

1. Go to *Dashboard > Top FortiSandbox Files*. The entry appears in the table, but the analysis is not available yet.

Add Filter					
Status	File Name	Source	Submitted	Checksum	Analysis Available
Pending	fsa_downloader_9d8f5b.exe	192.168.4.44	2022/03/14 14:55:45	23562fa650052dbc55b3afe62475bc65f70307ed14c59bf714f965b94b9d8f5b	No

2. After about five to ten minutes, refresh the table. The analysis is available.

Top FortiSandbox Files by Submitted

1 hour

Add Filter

Status	File Name	Source	Submitted	Checksum	Analysis Available
High Severity	fsa_downloader_9d8f5b.exe	192.168.4.44	2022/03/14 14:55:45	23562fa650052dbc55b3afe62475bc65f70307ed14c59bf7f4f965b94b9d8f5b	Yes

3. Select the entry, then right-click and select *Drill Down to Details*.
4. In the dropdown, select *Static File Analysis* to view the static file analysis.

Top FortiSandbox Files by Submitted

Add Filter

Static File Analysis

Summary of

File Name fsa\_downloader\_9d8f5b.exe

Verdict **High Severity**

File Size 4.10 kB

Created 2019/01/29 09:04:41

Type exe

FortiGate FortiGate-601E

Download full report

Details

Suspicious Actions

5. In the dropdown, select the client device to view the dynamic file analysis.

Top FortiSandbox Files by Submitted

Add Filter

WIN7X64VM

Summary of

File Name fsa\_downloader\_9d8f5b.exe

Verdict **High Severity**

Detected 2022/03/14 21:51:02

Detect OS Microsoft Windows 7 Professional Service Pack 1 (build 7601), 64-bit

File Size 4.10 kB

Created 2019/01/29 09:04:41

Type exe

FortiGate FortiGate-601E

Download full report

Details

Suspicious Actions

6. Click *Download full report* to download the detailed PDF report. The reports contains FortiSandbox job information, detailed file information, static analysis results, and dynamic analysis results.

PDF reports are downloaded on-demand and only 10 are kept in memory by default. PDFs are deleted from memory after 24 hours.


### To change the maximum number of PDFs kept in memory:

```
# diagnose test analytics-pdf-report max <integer>
```


The range is 1 - 10, and the default is 10. After the FortiGate is restarted, this value will revert to the default.

## Configuring supported connectors

The *Supported Connectors* card displays the icons of different Fortinet devices that support full Security Fabric integration. Supported connectors do not have separate connector settings within FortiOS. Clicking the *Supported Connectors* card displays a list of cards with compatible device names.

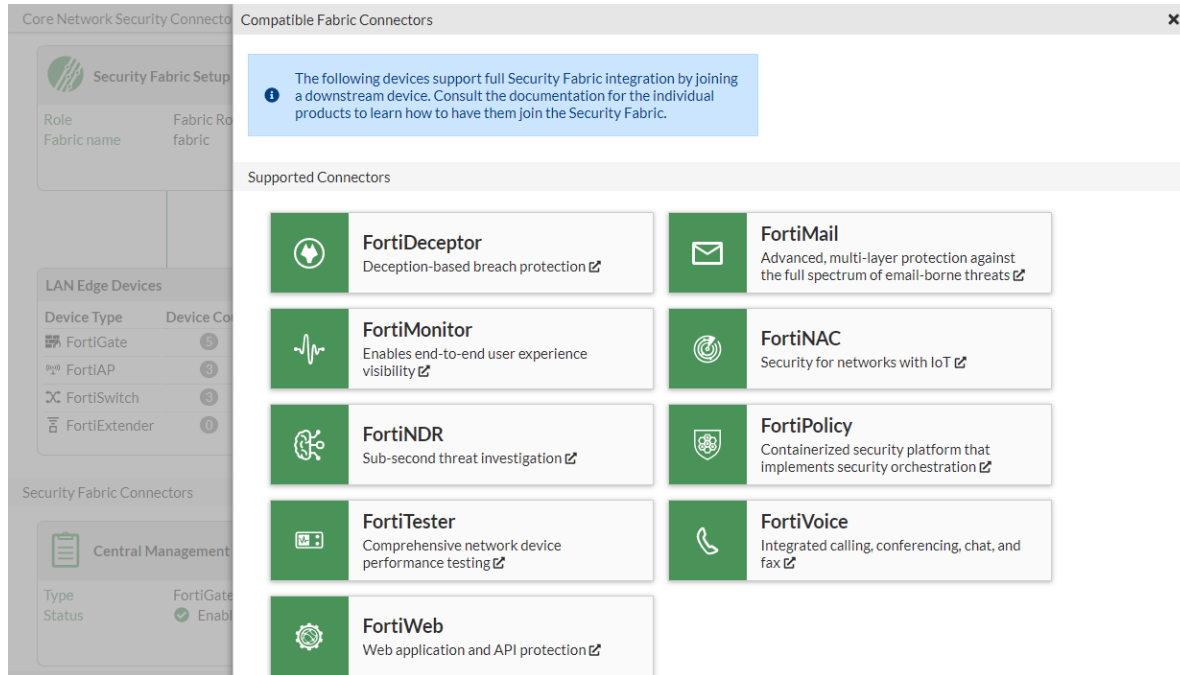

Clicking a device name card links to documentation that explains how to configure it in the Security Fabric. Once the device is configured, it can be authorized in FortiOS through the *Security Fabric* widget or by clicking the link in the notification center drop dropdown. The *Security Fabric* widget authorization method is used in this section.

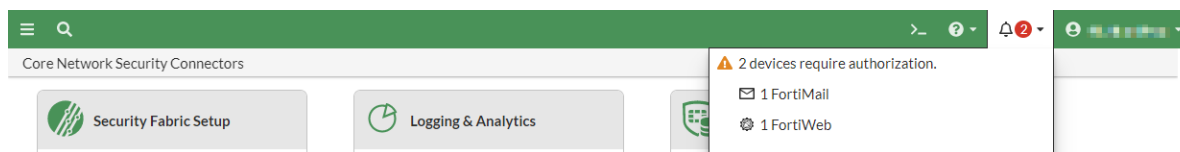

This section contains information about how to configure the following devices as part of the Fortinet Security Fabric:

- [Configuring FortiNDR on page 2635](#)
- [Configuring FortiDeceptor on page 2638](#)
- [Configuring FortiMail on page 2640](#)
- [Configuring FortiMonitor on page 2642](#)
- [Configuring FortiNAC on page 2644](#)
- [Configuring FortiTester on page 2646](#)
- [Configuring FortiVoice on page 2649](#)
- [Configuring FortiWeb on page 2653](#)
- [Configuring FortiPolicy on page 2655](#)




## Configuring FortiNDR

FortiNDR (formerly FortiAI) can be added to the Security Fabric so it appears in the topology views and the dashboard widgets.


### To add FortiNDR to the Security Fabric in the GUI:

1. Enable the Security Fabric and configure the interface to allow other Security Fabric devices to join (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)).
2. Install the FortiNDR appliance and activate the product with a valid license (see [Registering products](#) in the Asset Management Guide). A license file is provided after the product is registered.
3. In FortiNDR, go to *System > FortiGuard* and verify that the pre-trained models (engines) are up to date. Refer to the [FortiGuard website](#) for the latest FortiNDR ANN versions.

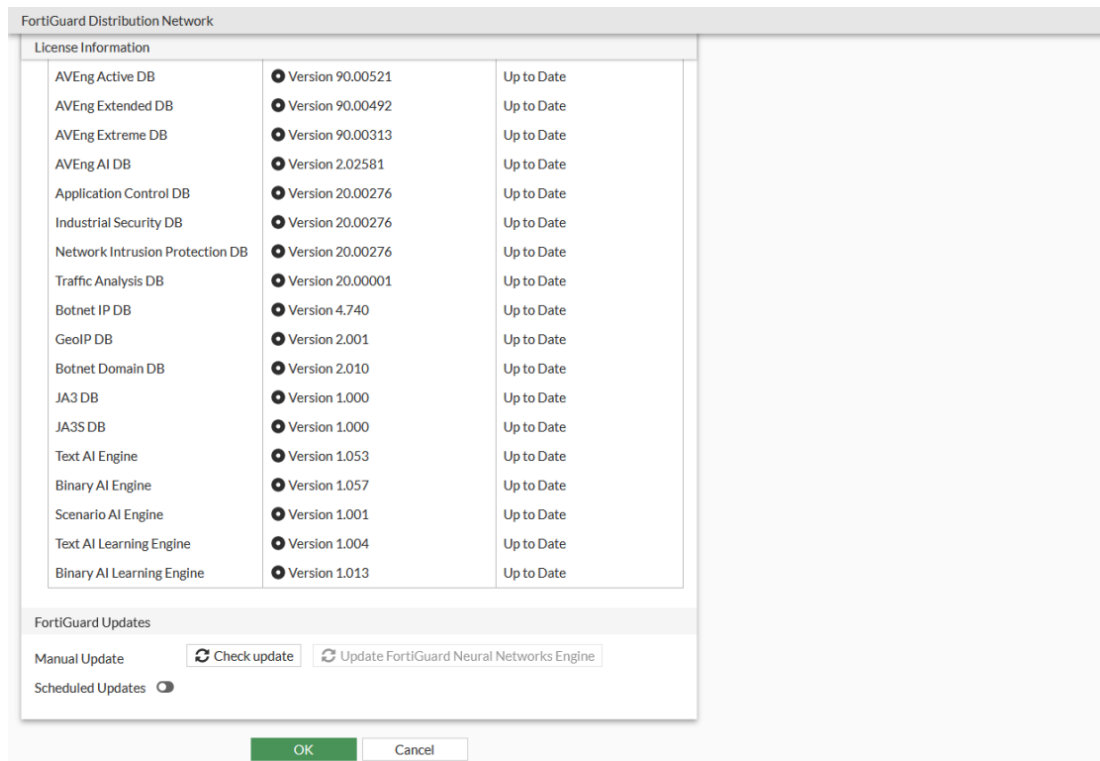

4. Configure and authorize the FortiGate in the FortiNDR GUI to join the Security Fabric:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric* card.
  - b. Click the toggle to *Enable Security Fabric*.

- c. Enter the IP addresses for the root FortiGate and the FortiNDR.

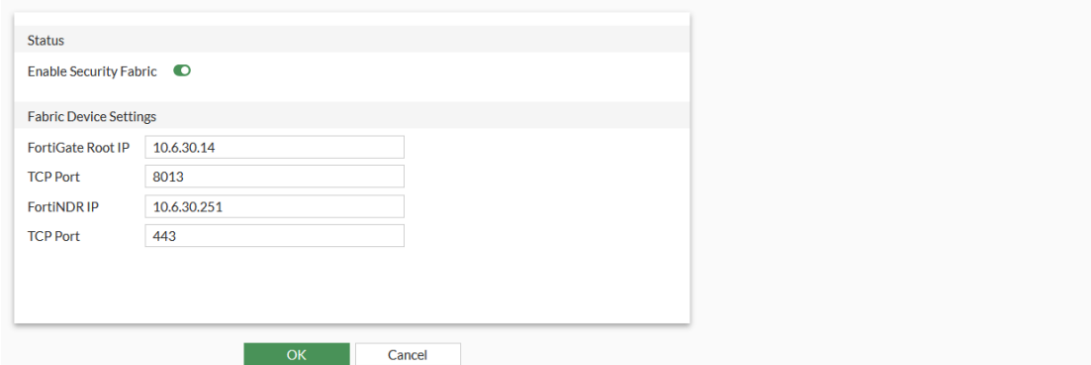

The screenshot shows a configuration window titled "Status" with a sub-section "Fabric Device Settings". The "Enable Security Fabric" toggle is turned on. The settings are as follows:


Field	Value
FortiGate Root IP	10.6.30.14
TCP Port	8013
FortiNDR IP	10.6.30.251
TCP Port	443

At the bottom of the dialog are "OK" and "Cancel" buttons.


- d. Click OK. The FortiNDR is now authorized.

5. Authorize the FortiNDR in FortiOS:

- Go to *Dashboard > Status* and locate the *Security Fabric* widget.
- Click the highlighted unauthorized FortiNDR.
- Select *Authorize*.

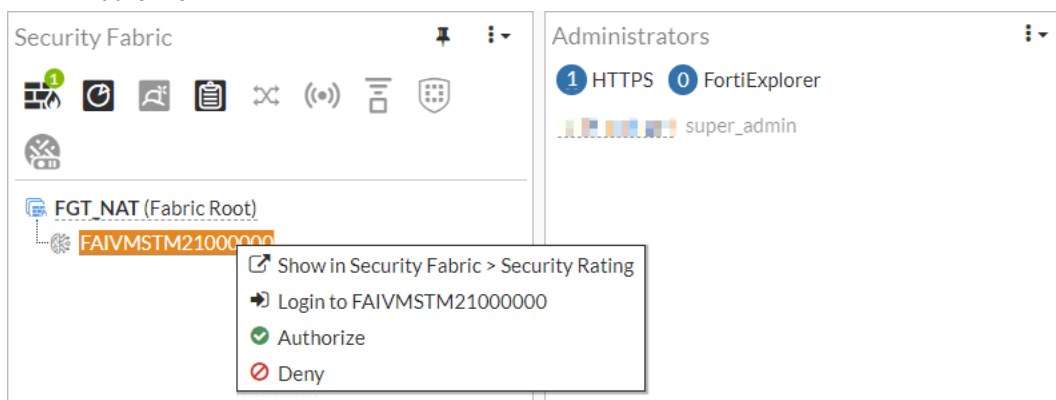

- d. Click **Accept** to verify the device certificate.

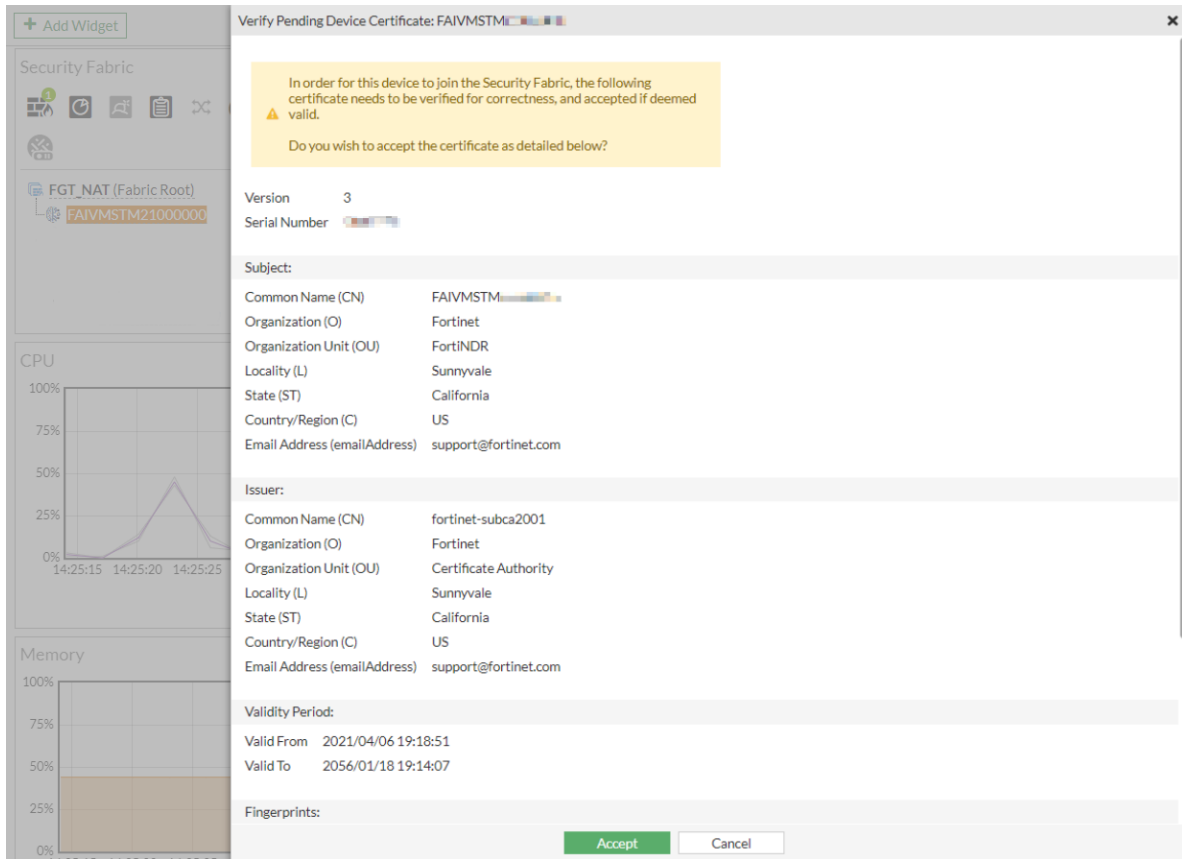

6. Go to **Security Fabric > Physical Topology** or **Security Fabric > Logical Topology** to view more information.

### To add FortiNDR to the Security Fabric in the CLI:

1. Configure the interface to allow other Security Fabric devices to join:

```
config system interface
  edit "port1"
    ...
    set allowaccess ping https ssh http fgfm fabric
    ...
  next
end
```

2. Enable the Security Fabric:

```
config system csf
  set status enable
  set group-name "fabric-ai"
end
```

3. In FortiNDR, configure the device to join the Security Fabric:

```
config system csf
  set status enable
  set upstream-ip 10.6.30.14
```

```

    set management-ip 10.6.30.251
end

```

#### 4. Authorize the FortiNDR in FortiOS:

```

config system csf
    set status enable
    set group-name "fabric-ai"
    config trusted-list
        edit "FAIVMSTM21000000"
            set authorization-type certificate
            set certificate "*****"
        next
    end
end

```

## Configuring FortiDeceptor


FortiDeceptor can be added to the Security Fabric so it appears in the topology views and the dashboard widgets.

### To add FortiDeceptor to the Security Fabric in the GUI:


1. Enable the Security Fabric (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more details) with the following settings:
  - a. Configure the interface to allow other Security Fabric devices to join.
  - b. Enable *Allow downstream device REST API access* so the FortiDeceptor can communicate with the FortiGate, and select an *Administrator profile*. The minimum permission required for the selected *Administrator profile* is *Read/Write for User & Device* (set authgrp read-write).
2. In FortiDeceptor, integrate the device:
  - a. Go to *Fabric > Integration Devices*.
  - b. Click *Quarantine Integration With New Device*.
  - c. Click the toggle to enable the device.
  - d. For *Upstream IP Address*, enter the root FortiGate's management IP address.

The screenshot shows the FortiDeceptor GUI. At the top, there's a 'Fabric Upstream' section with a toggle switch for 'Enabled' (currently off), an 'Upstream IP Address' field (172.17.48.246), a 'Port' field (8013), and an 'Authorization Status' message: 'The device is waiting to be authorized by upstream. [FGT81ETK18000000]'. Below this are 'Apply' and 'Cancel' buttons. Underneath is a table titled '+ Quarantine Integration With New Device'. The table has columns: Action, Enabled, Status, Name, Appliance, Integrate Meth..., Severi..., and Detail. The table is currently empty, with a message 'No records found.' at the bottom.


- e. Click *Apply*.
3. Authorize the FortiDeceptor in FortiOS:
    - a. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
    - b. Click the highlighted unauthorized FortiDeceptor .

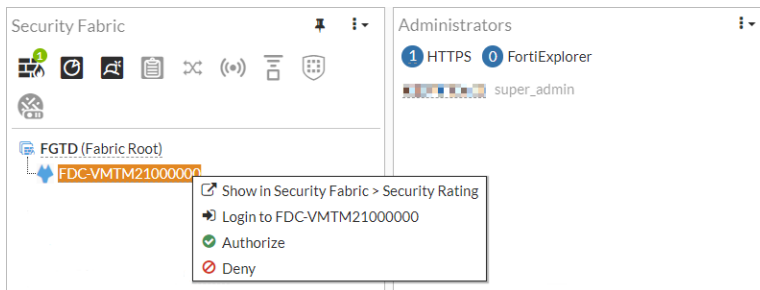c. Select *Authorize*.

4. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology* to view more information.  
Physical topology view:

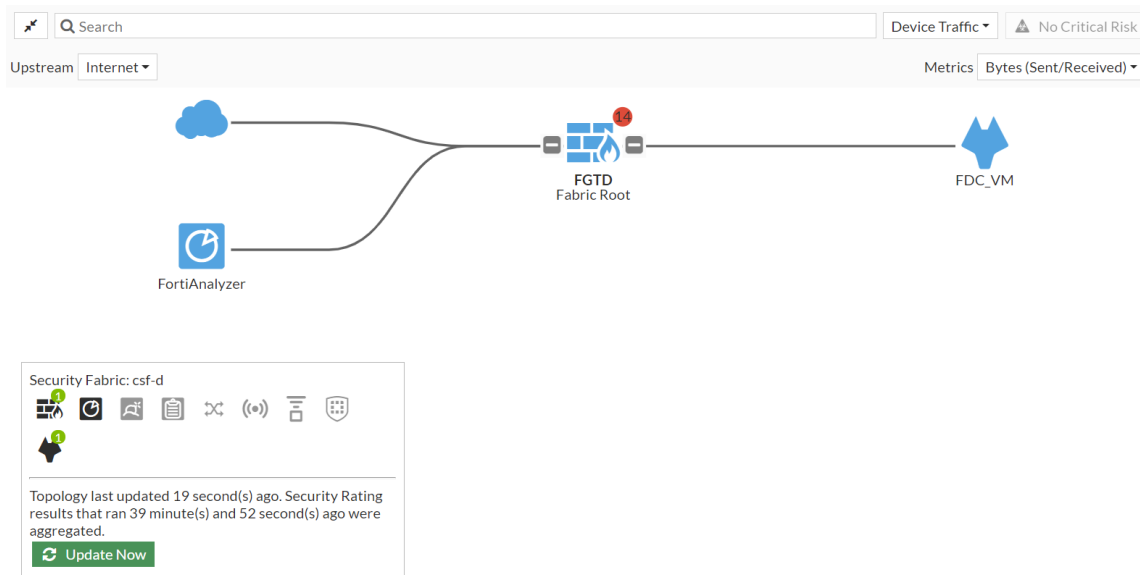

## Logical topology view:

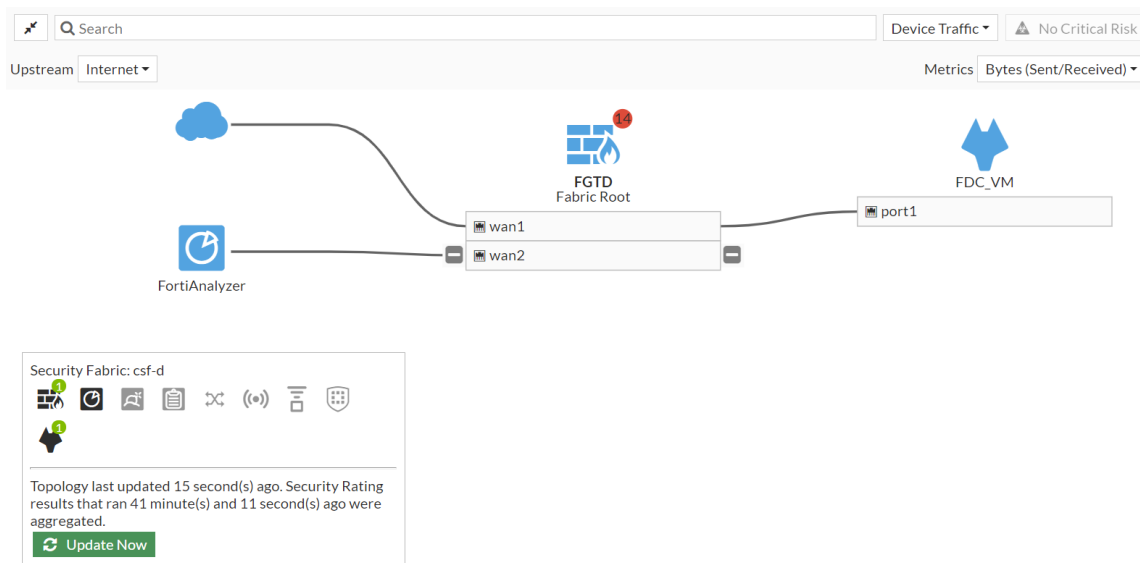

**To add FortiDeceptor to the Security Fabric in the CLI:**

1. Configure the interface to allow other Security Fabric devices to join:

```
config system interface
    edit "wan1"
        ...
        set allowaccess ping https ssh snmp http fabric
        ...
    next
end
```

2. Enable the Security Fabric:

```
config system csf
    set status enable
    set group-name "csf-d"
    set downstream-access enable
    set downstream-accprofile "super_admin"
end
```

3. In FortiDeceptor, integrate the device:

- a. Go to *Fabric > Integration Devices*.
- b. Click *Quarantine Integration With New Device*.
- c. Click the toggle to enable the device.
- d. For *Upstream IP Address*, enter the root FortiGate's management IP address.
- e. Click *Apply*.

4. Authorize the FortiDeceptor in FortiOS:

```
config system csf
    set status enable
    set group-name "csf-d"
    config trusted-list
        edit "FDC-VM21000000"
            set serial "FDC-VM21000000"
        next
    end
end
```

**Configuring FortiMail**

FortiMail can be authorized into the Security Fabric using either the gutter on the *Fabric Connectors* page, or by pre-authorizing using the FortiMail serial number or certificate.

**To join the Security Fabric from FortiMail:**


1. Go to *System > Customization* and click the *Corporate Security Fabric* tab (or the *Corporate Security Fabric* tab in FortiMail 6.4.2 and earlier).
2. Click the toggle to enable the Fabric.
3. Enter the *Upstream IP Address* (root FortiGate) and the *Management IP* of the FortiMail.
4. Click *Apply*.

## Authorizing using FortiOS

If the FortiMail was added to the Security Fabric but not pre-authorized, you can authorize it in FortiOS on the *Security Fabric* widget.

### To authorize FortiMail:

1. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
2. Click the highlighted unauthorized FortiMail.
3. Select *Authorize*.

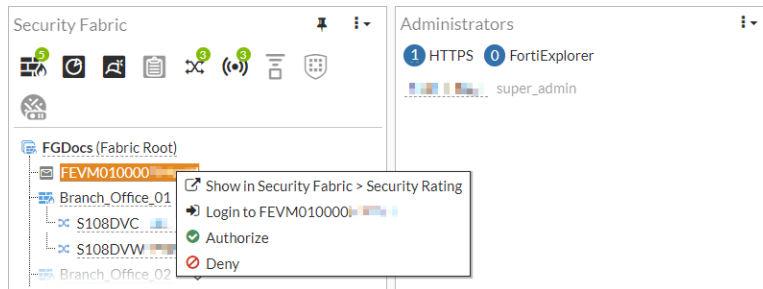


4. Verify the certificate is correct, then click *Accept*.

## Pre-authorizing using the FortiMail certificate

FortiMail can be pre-authorized using its serial number or certificate. When you pre-authorize, the FortiMail can join at any time, and you will not need to authorize it FortiOS. In this example, FortiMail is pre-authorized using a certificate.


### To pre-authorize FortiMail using a third-party or default certificate:

1. Log in to FortiMail.
2. Download the certificate. For example, in Chrome:
  - a. In the left side of the address bar, click the icon to view the site information.
  - b. Click *Certificate*.
  - c. Click the *Details* tab, then click *Copy to File*.

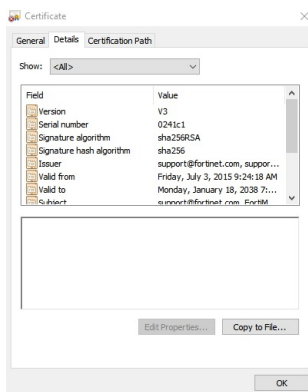


- d. The *Certificate Export Wizard* opens. Click *Next* to continue.

- e. For the file format, select *Base-64 encoded X.509 (.CER)*, then click *Next*.

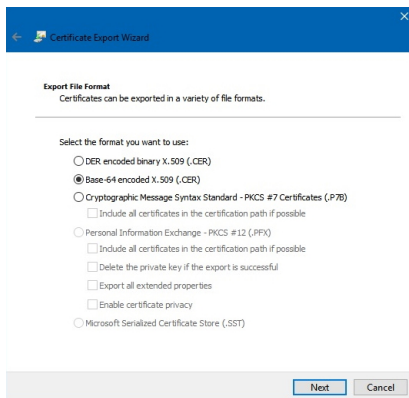

- f. Browse to the folder location and enter a file name, then click *Next*.
- g. Click *Finish*, then click *OK* to close the dialog box.
3. In FortiOS, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
4. Beside *Device authorization*, click *Edit > Create New* and configure the following:
- Enter the FortiMail serial number.
  - Set the *Authorization type* to *Serial Number*.
  - Click *Browse* to upload the .CER file you saved previously.

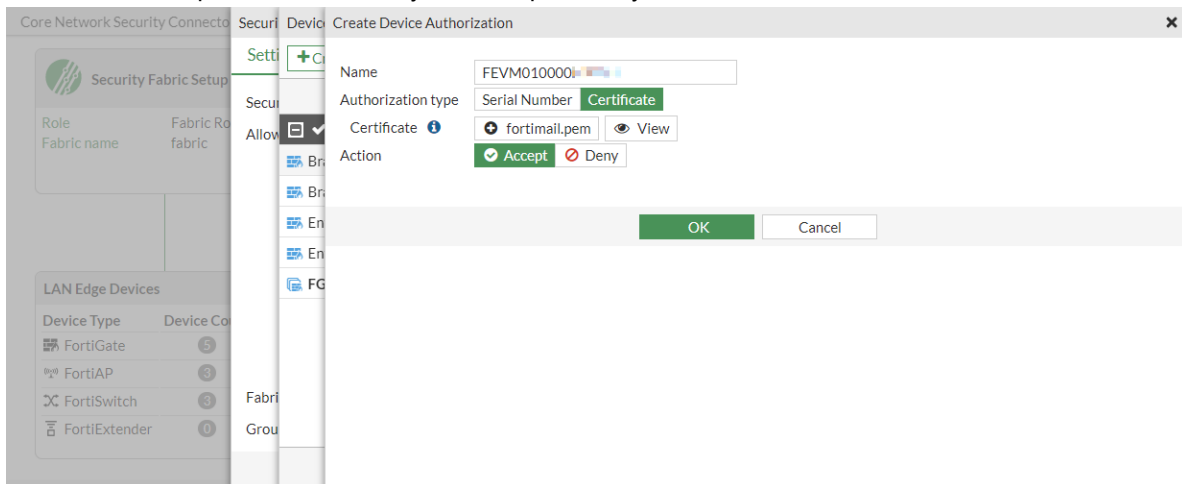

- d. Click *OK*.

## Configuring FortiMonitor

FortiMonitor can be added to the Security Fabric. When a FortiMonitor joins the Security Fabric and is authorized, it appears in the Fabric topology pages.

### To add FortiMonitor to the Security Fabric:

- Enable the Security Fabric (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)) with the following settings:
  - Configure the interface to allow other Security Fabric devices to join.
  - Enable *Allow downstream device REST API access* and select an *Administrator profile*.



2. In FortiMonitor, start configuring the device to join the Security Fabric (see [Enable Security Fabric monitoring](#) for detailed instructions):
  - a. Complete the *Discovery Details* page.

**Fortinet Fabric Device**

Discovery Details | Discover & Select | Configure | Organize | Review & Finish

\* Indicates a required field

Discovery Type \* ☒ New ☐ Existing

FortiOS Version \* ☒ 7.0 and above ☐ 6.x and below (coming soon)

Root Device IP/FQDN \*

Fabric API Port \*


Serial Number \*

Requirements: FortiOS 7.0 and above


- \* IP/FQDN of your root device. The IP should be exposed to our cloud environment.
- \* Serial Number of your root device.

Cancel Continue to Discover & Select >


3. Authorize the FortiMonitor in FortiOS:
  - a. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
  - b. In the topology tree, click the highlighted FortiMonitor and select *Authorize*.

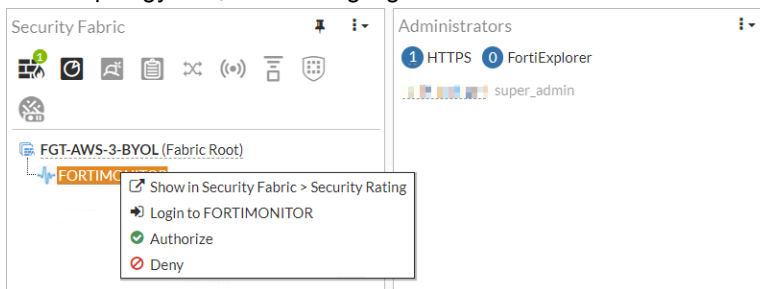

4. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology* to view more information. Physical topology view:

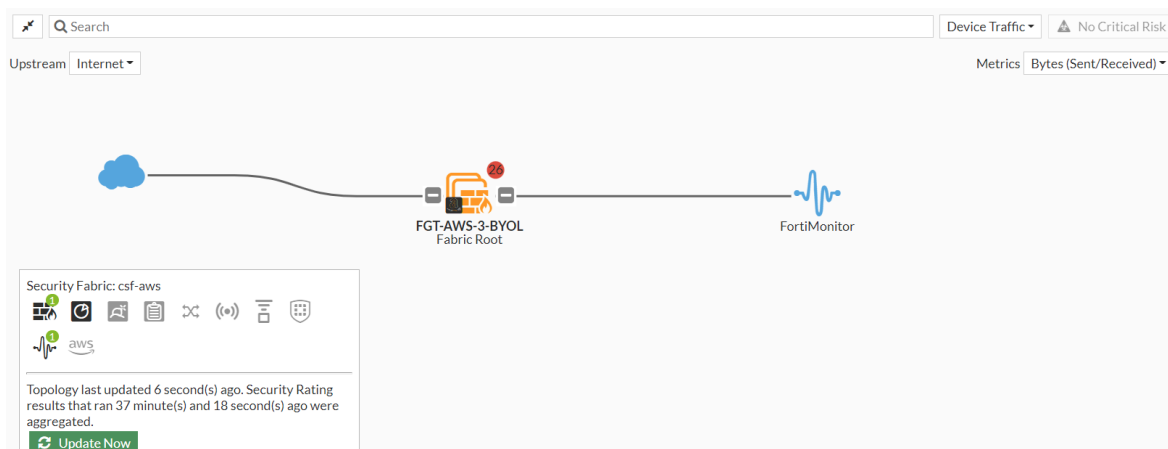

Logical topology view:

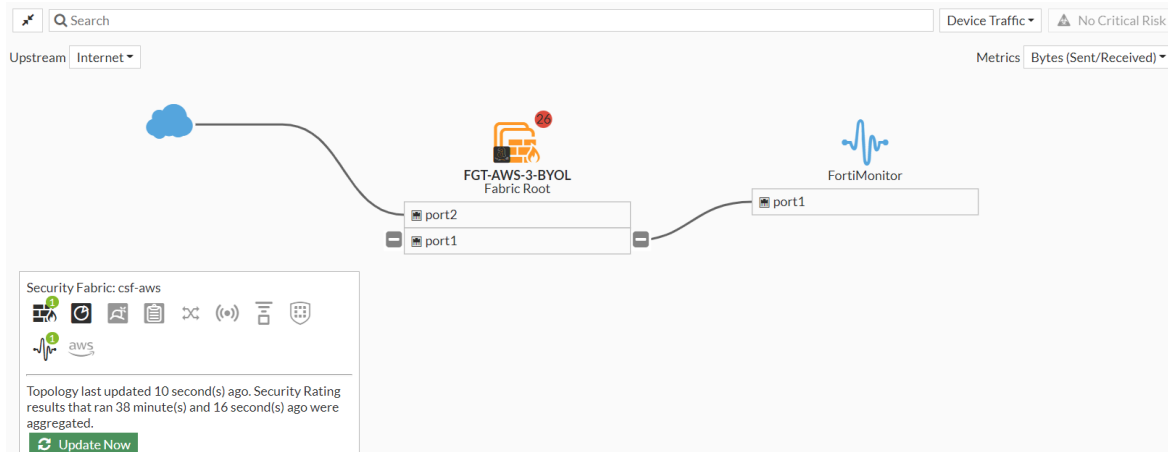

5. In FortiMonitor, complete the device configuration (see [Enable Security Fabric monitoring](#) for detailed instructions).

## Configuring FortiNAC

A FortiNAC device can be added to the Security Fabric on the root FortiGate. After the device has been added and authorized, you can log in to the FortiNAC from the FortiGate topology views.



Adding a FortiNAC to the Security Fabric requires a FortiNAC with a license issued in the year 2020 or later that includes an additional certificate. The device cannot be added if it has an older license. Use the `licensetool` in the FortiNAC CLI to determine if your license includes the additional certificate.

The FortiNAC tags connector under *Security Fabric > Fabric Connectors* has been deprecated. It was replaced with a REST API (in FortiNAC and FortiOS) that is used by FortiNAC to send user logon and logoff information to the FortiGate. The FortiNAC tag dynamic firewall address type is used to store the device IP, FortiNAC firewall tags, and FortiNAC group information sent from FortiNAC by the REST API when user logon and logoff events are registered (see [FortiNAC tag dynamic address on page 1178](#) for more information).



For upgrade support, the FSSO FortiNAC user type can still be configured in the CLI.


### To add a FortiNAC to the Security Fabric:

1. On the FortiNAC, configure telemetry and input the IP address of the root FortiGate. See [Security Fabric Connection](#) in the *FortiNAC Administration Guide* for more information.
2. On the root FortiGate, authorize the FortiNAC.
3. Verify the connection status in the topology views.

### To authorize the FortiNAC on the root FortiGate in the GUI:

1. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
2. Click the highlighted unauthorized FortiNAC.

### 3. Select *Authorize*.

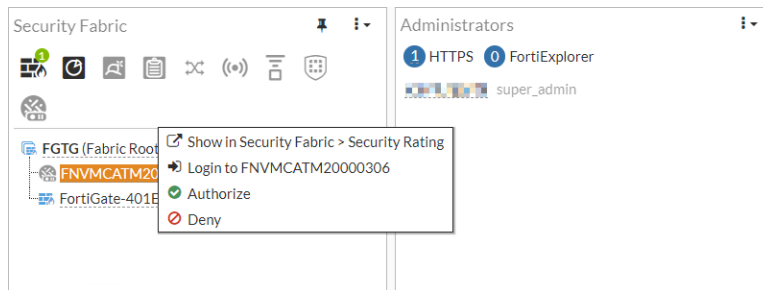


Optionally, you can also deny authorization to the FortiNAC to remove it from the list.

### To authorize the FortiNAC on the root FortiGate in the CLI:


```
config system csf
  config trusted-list
    edit "FNVMCATM20000306"
      set action accept
    next
  end
end
```

### To verify the connection status:

1. After the FortiNAC is authorized, go to *Security Fabric > Physical Topology* and confirm that it is included in the topology.

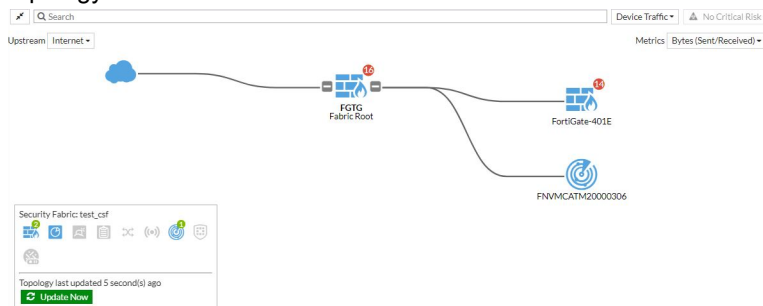

2. Go to *Security Fabric > Logical Topology* and confirm the FortiNAC is also displayed there.

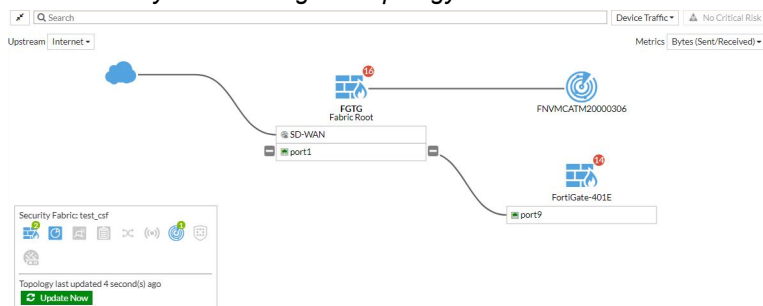

3. Run the following command in the CLI to view information about the FortiNAC device's status:

```
# diagnose sys csf downstream-devices fortinac
{
  "path": "FG5H1E5818900126:FNVMCATM20000306",
  "mgmt_ip_str": "10.1.100.197",
```


```

"mgmt_port":0,
"admin_port":8443,
"serial":"FNVMCATM20000306",
"host_name":"adnac",
"device_type":"fortinac",
"upstream_intf":"port2",
"upstream_serial":"FG5H1E5818900126",
"is_discovered":true,
"ip_str":"10.1.100.197",
"downstream_intf":"eth0",
"authorizer":"FG5H1E5818900126",
"idx":1
}

```

### To log in to the FortiNAC from the FortiGate:

1. On the FortiGate, go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology*.
2. Click on the FortiNAC and select *Login to <serial\_number>*.

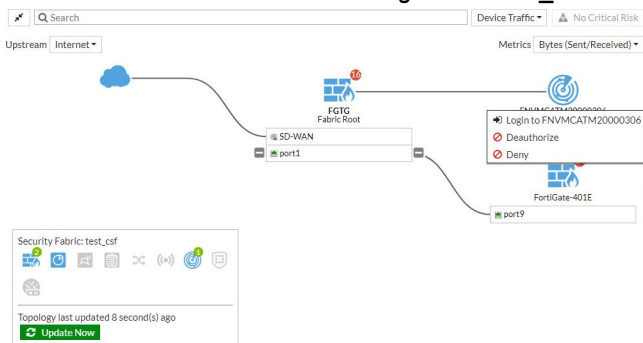

A new tab will open to the FortiNAC log in page.


3. Enter the username and password to log in to the FortiNAC.

## Configuring FortiTester

FortiTester can be added to the Security Fabric and authorized from the Security Fabric topology views. Once added, the FortiTester will appear in the *Security Fabric* widget on the dashboard. A FortiTester can be added to the dashboard as a Fabric device widget.

### To add FortiTester to the Security Fabric in the GUI:

1. Enable the Security Fabric and configure the interface to allow other Security Fabric devices to join (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)).
2. In FortiTester, enable the Security Fabric:
  - a. Go to *System Settings > Security Fabric > Settings*.
  - b. Click the toggle to enable the device (*Enable Security Fabric*).

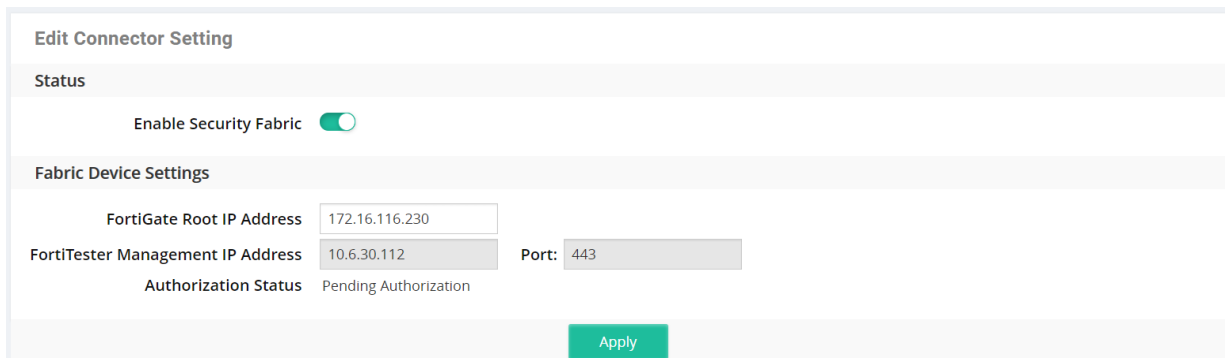c. Enter the *FortiGate Root IP Address*.


**Edit Connector Setting**

**Status**

Enable Security Fabric ☒

**Fabric Device Settings**

FortiGate Root IP Address: 172.16.116.230

FortiTester Management IP Address: 10.6.30.112 Port: 443


Authorization Status: Pending Authorization

Apply


d. Click *Apply*.

## 3. Authorize the FortiTester in FortiOS:


- a. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
- b. Click the highlighted unauthorized FortiTester.
- c. Select *Authorize*.

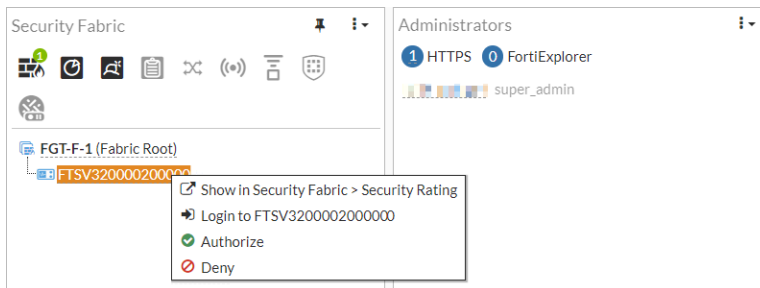4. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology* to view more information.

Physical topology view:

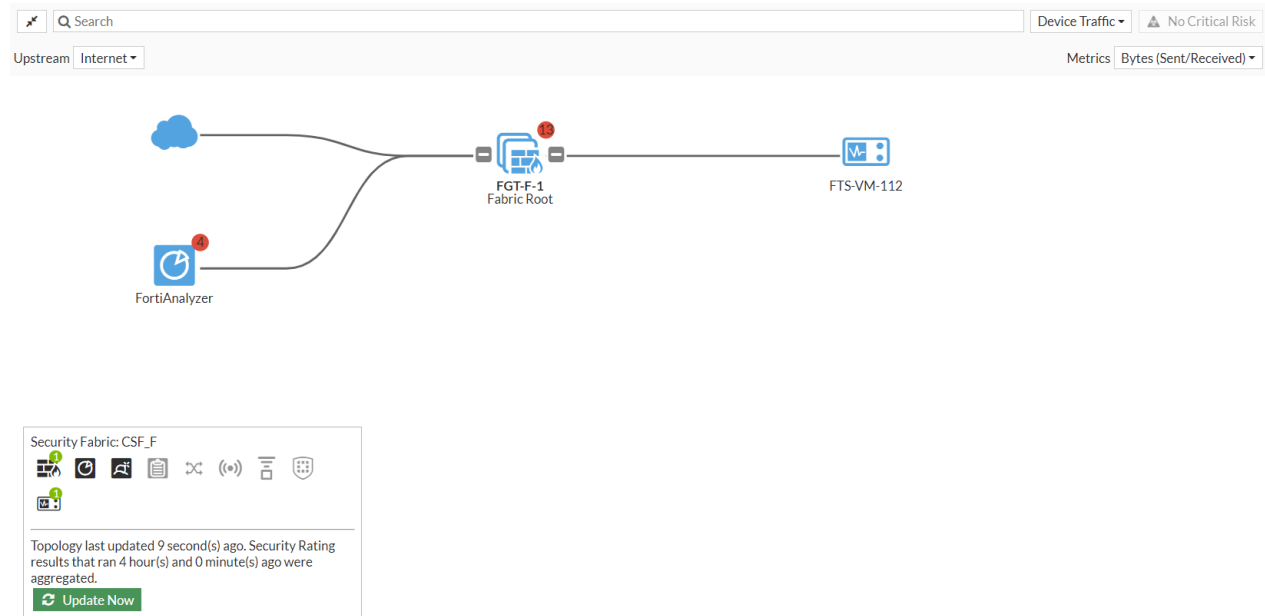

Logical topology view:

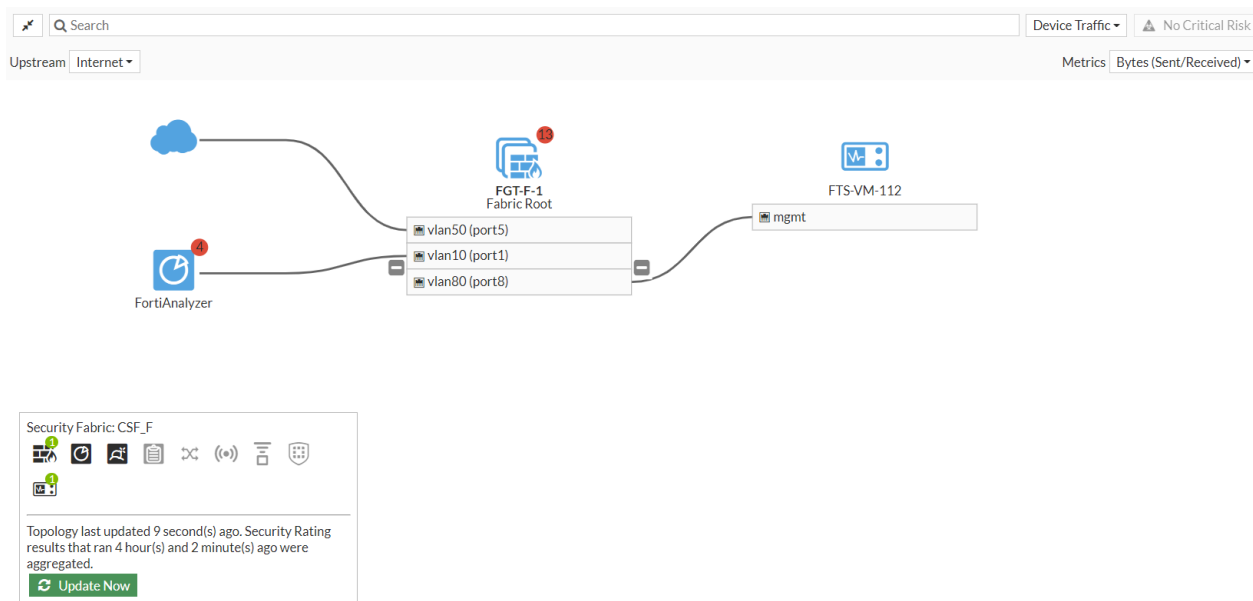

### To add FortiTester to the Security Fabric in the CLI:

1. Configure the interface to allow other Security Fabric devices to join:

```
config system interface
    edit "port8"
        ...
        set allowaccess ping https ssh http fgfm fabric
        ...
    next
end
```

2. Enable the Security Fabric:

```
config system csf
    set status enable
    set group-name "CSF_F"
end
```

3. In FortiTester, enable the Security Fabric:

```
config system csf
    set ip 172.16.116.230
    set port 8013
    set status enable
end
```

4. Authorize the FortiTester in FortiOS:

```
config system csf
    set status enable
    set group-name "CSF_F"
    config trusted-list
        edit "FTSV320000200000"
            set authorization-type certificate
            set certificate "*****"
        next
    end
```

```
end
end
```


## Configuring FortiVoice

A FortiVoice can be added to the Security Fabric on the root FortiGate. Once the FortiVoice is added and authorized, you can log in to the device from the Security Fabric topology pages. A FortiVoice can be authorized in FortiOS, or can be pre-authorized with its serial number or certificate. A FortiVoice can be added to the dashboard as a Fabric device widget.


## Authorizing using the FortiOS GUI

**To authorize a FortiVoice to join the Security Fabric:**

1. On the FortiVoice, enable the Security Fabric. See [Enabling Security Fabric](#) in the FortiVoice Phone System Administration Guide.
2. On the root FortiGate, go to *Dashboard > Status* and locate the *Security Fabric* widget. The FortiVoice is highlighted in the topology list.
3. Click the highlighted FortiVoice and select *Authorize*.

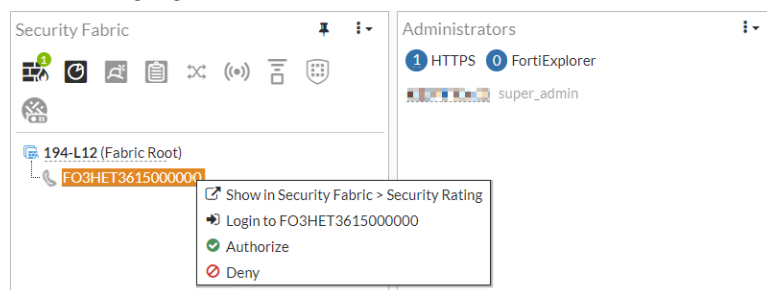

4. Verify that the certificate is correct, then click *Accept*.

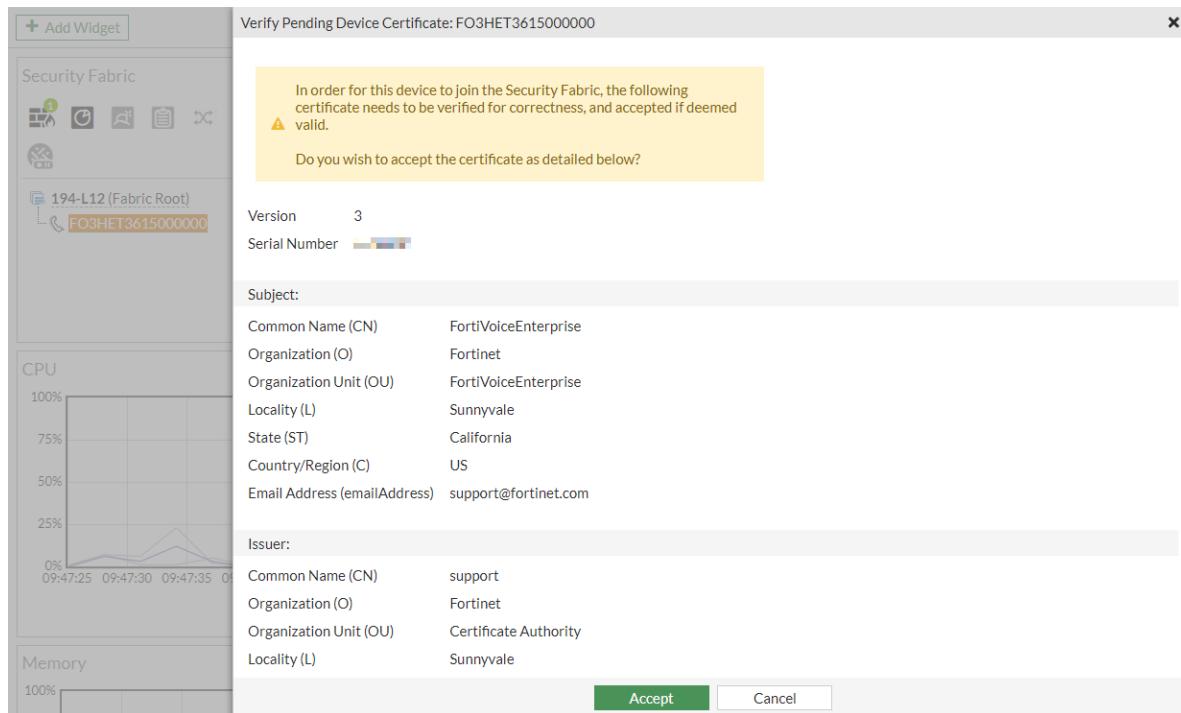


## Pre-authorizing using the FortiVoice certificate

A FortiVoice can be pre-authorized using its serial number or certificate. When pre-authorizing, the FortiVoice can join at any time, and it will not need to be authorized in FortiOS. In the following example, the FortiVoice is pre-authorized using a certificate.


### To pre-authorize a FortiVoice using a third-party or default certificate in the GUI:

1. Log in to the FortiVoice.
2. Download the certificate. For example, in Chrome:
  - a. In the left side of the address bar, click the icon to view the site information.
  - b. Click *Certificate*.
  - c. In the *Certificate* window, click the *Details* tab, then click *Copy to File*.



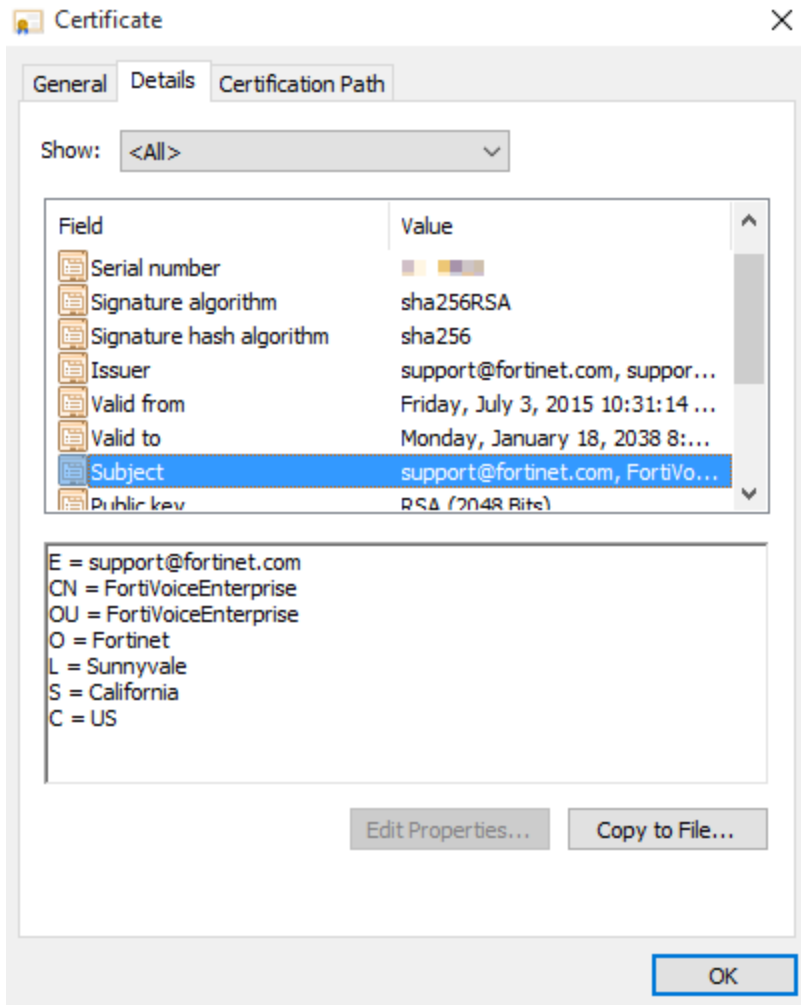


- d. The *Certificate Export Wizard* opens. Click *Next*.
- e. Set the format to *Base-64 encoded X.509 (.CER)*, then click *Next*.

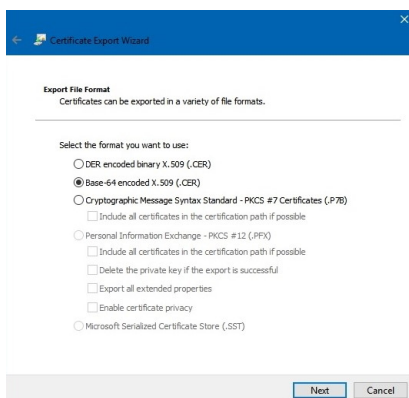

- f. Browse to the folder location, enter a file name, then click *Next*.
  - g. Click *Finish*, then click *OK* to close the wizard.
3. In FortiOS, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  4. Beside *Device authorization*, click *Edit*.

5. Click **Create New** and enter the following:
  - a. In the **Name** field, enter the FortiVoice serial number.
  - b. Set the **Authorization type** to **Certificate**.
  - c. Upload the .CER file.

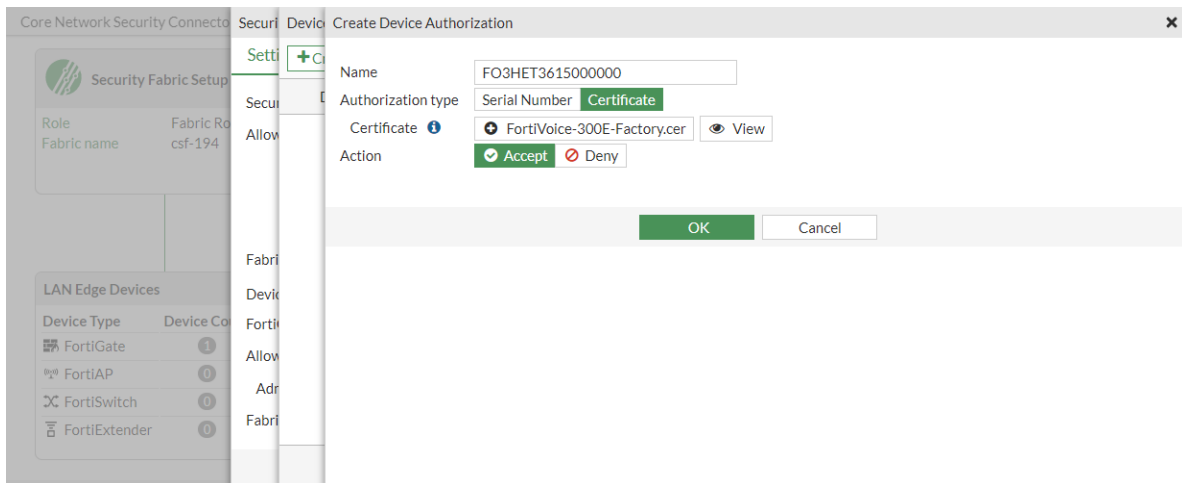


- d. Click **OK**, then close the *Device authorization* pane.

#### To pre-authorize a FortiVoice using a third-party or default certificate in the CLI:


```
config system csf
  config trusted-list
    edit "FOV-300E"
      set action accept
      set authorization-type certificate
      set certificate "-----BEGIN CERTIFICATE-----
...
<encrypted_certificate_data>
...
-----END CERTIFICATE-----"
    next
  end
end
```

#### To verify the connection status:

1. After the FortiVoice is authorized, go to *Security Fabric > Physical Topology* and confirm that it is included in the topology.

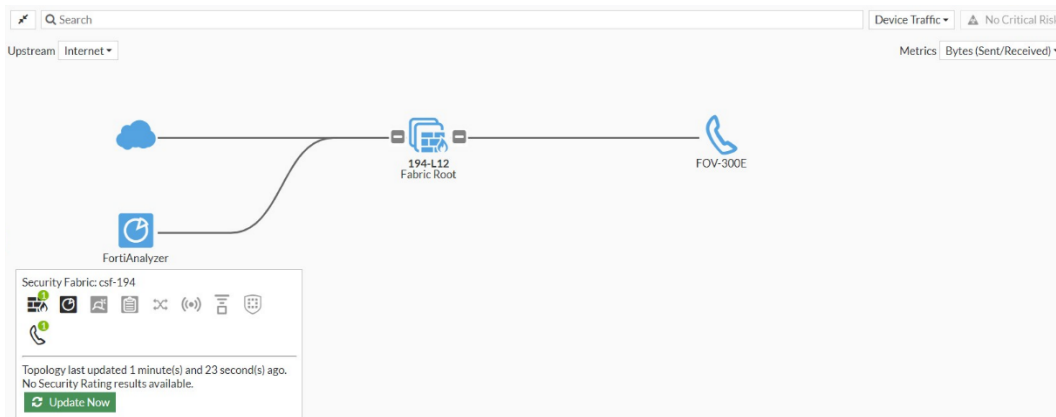

2. Go to *Security Fabric > Logical Topology* and confirm the FortiVoice is also displayed there.

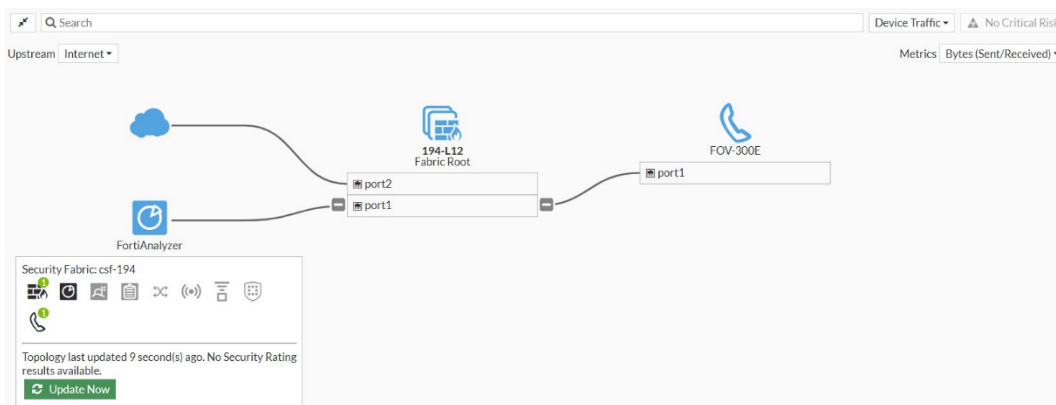

### To log in to the device using a topology page:

1. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology*.
2. Click on the FortiVoice and select *Login to <serial\_number>*.

## Configuring FortiWeb

A FortiWeb can be configured to join a Security Fabric through the root or downstream FortiGate. There are two methods to add a FortiWeb to the Security Fabric:

- Trigger the authorization on the FortiWeb side and authorize from the FortiOS side.
- Pre-authorize the FortiWeb from the FortiOS side.

Once the FortiWeb joins the Fabric, the following features are available:

- View the FortiWeb on topology pages.
- Create a dashboard Fabric Device widget to view FortiWeb data.
- Configure single sign-on using SAML.

### Triggering the authorization in FortiWeb

In this example, a FortiWeb triggers the authorization process, and then the device is approved in FortiOS. This is example assumes the Security Fabric has already been configured.

### To trigger the Security Fabric authorization in FortiWeb:


1. Edit the FortiGate *Fabric Connector* settings in FortiWeb (see [Fabric Connector: Single Sign On with FortiGate](#)). The *Connection Status* is currently *Authorize pending*.
2. In FortiOS, go to *Dashboard > Status* and locate the *Security Fabric* widget.
3. Click the highlighted unauthorized FortiWeb and select *Authorize*.
4. Verify that the certificate is correct, then click *Accept*.
5. In FortiWeb, verify that the FortiGate *Connection Status* is now *Authorized*.

### Pre-authorizing the FortiWeb in FortiOS


In this example, a FortiWeb is pre-authorized on the root FortiGate using certificate authorization. This example assumes the Security Fabric has already been configured.

### To authorize a FortiWeb to join the Security Fabric in FortiOS:


1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. Beside *Device authorization*, click *Edit*. The *Device authorization* pane opens.
3. Add the FortiWeb:
  - a. Click *Create New* and enter a device name.
  - b. For *Authorization type*, select *Certificate*.
  - c. Click *Browse* to upload the certificate.
  - d. For *Action*, select *Accept*.
  - e. Click *OK*. The FortiWeb appears in the table.

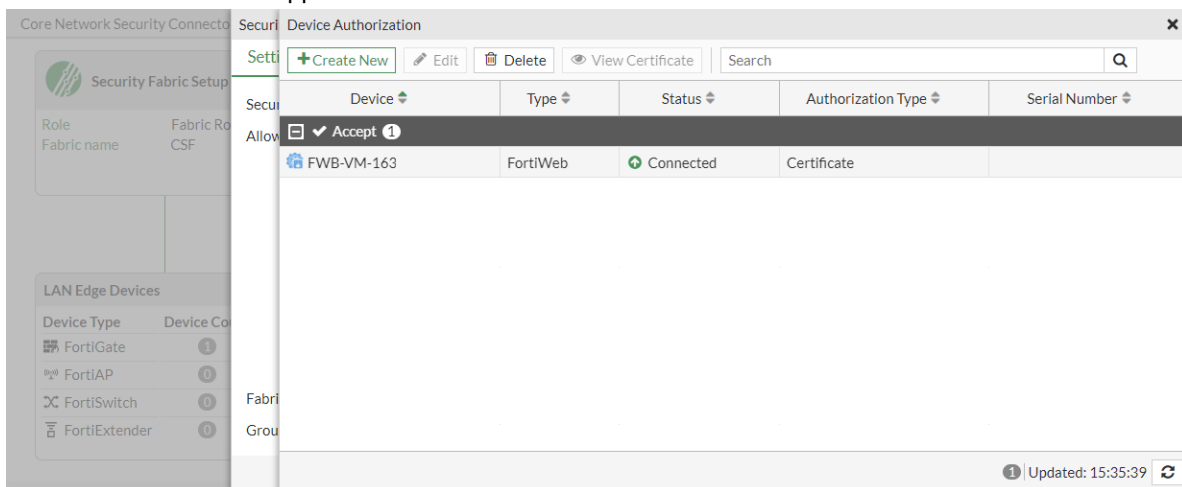

4. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology* to view more information.  
Physical topology view:

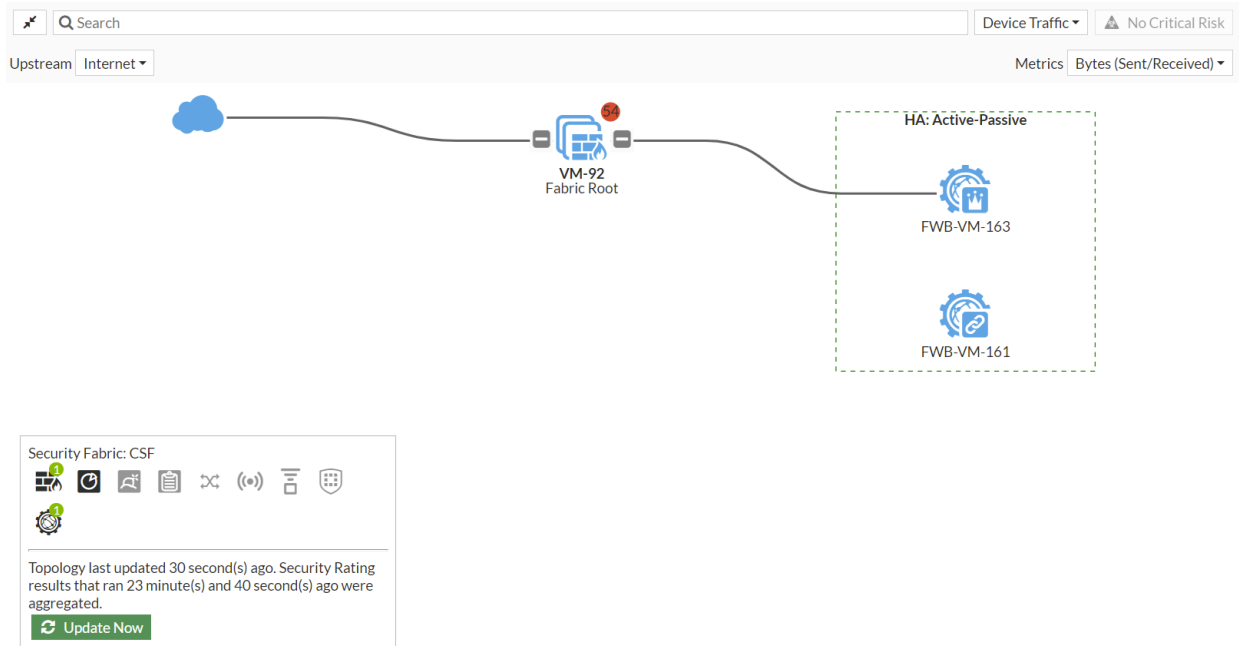

### Logical topology view:

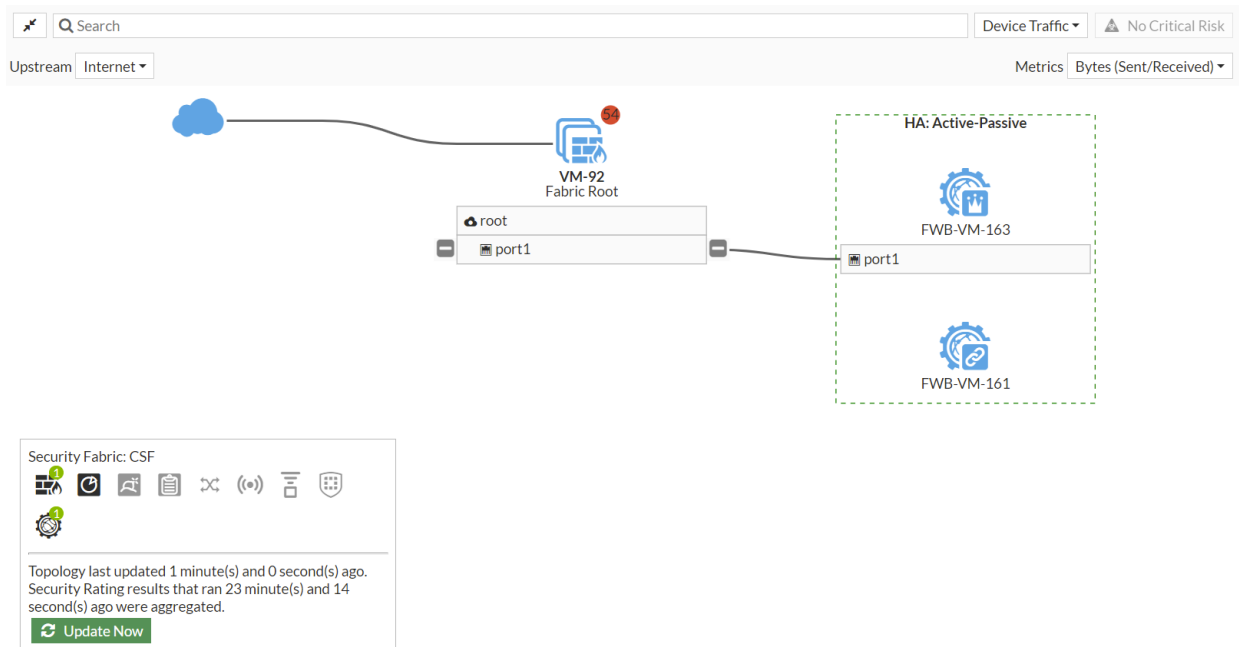


## Configuring FortiPolicy


FortiPolicy can be added to the Security Fabric. When FortiPolicy joins the Security Fabric and is authorized in the *Security Fabric* widget, it appears in the Fabric topology pages. A FortiGate can grant permission to FortiPolicy to perform firewall address and policy changes.

## To add FortiPolicy to the Security Fabric:


1. Enable the Security Fabric (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)) with the following settings:
  - a. Configure the interface to allow other Security Fabric devices to join.
  - b. Enable *Allow downstream device REST API access* and select an *Administrator profile*.
2. In FortiPolicy, edit the Security Fabric settings (this example assumes a root FortiGate has already been configured, see [Creating a fabric connector](#) in the FortiPolicy Administration Guide):
  - a. Go to *Configuration > Security Fabric* and select *Edit current security fabric settings*.
  - b. Enter the root FortiGate's IP address.
  - c. Set the *Port* (the default is 8013).
  - d. Select a FortiPolicy security policy.

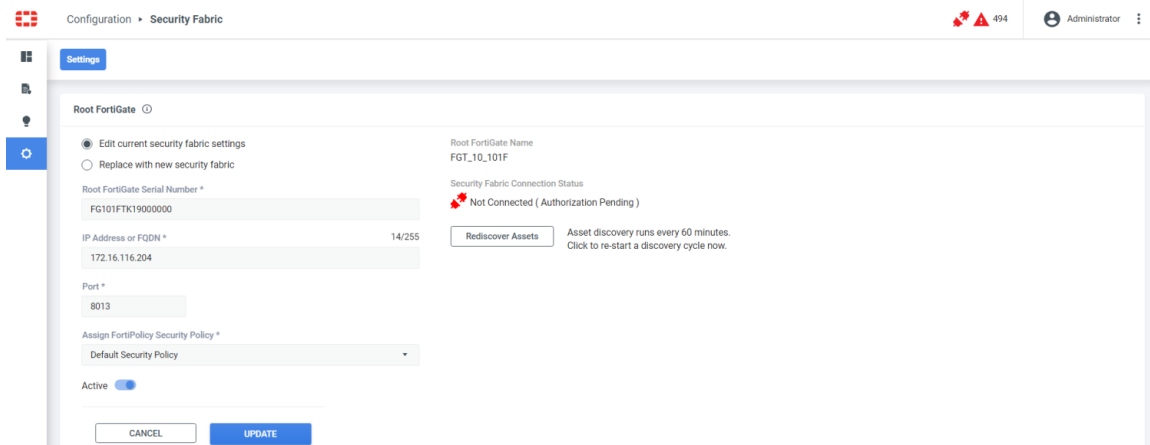


- e. Click *UPDATE*. The connection status is *Not Connected (Authorization Pending)*.
3. Authorize the FortiPolicy in FortiOS:
    - a. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
    - b. In the topology tree, click the highlighted FortiPolicy and select *Authorize*. The *Device Registration* pane opens.
    - c. Click *Authorize*.

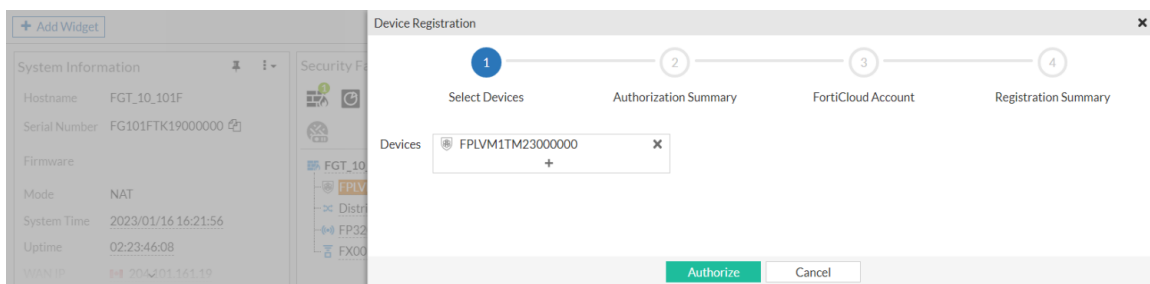


- d. Click *Accept* to verify the device certificate.

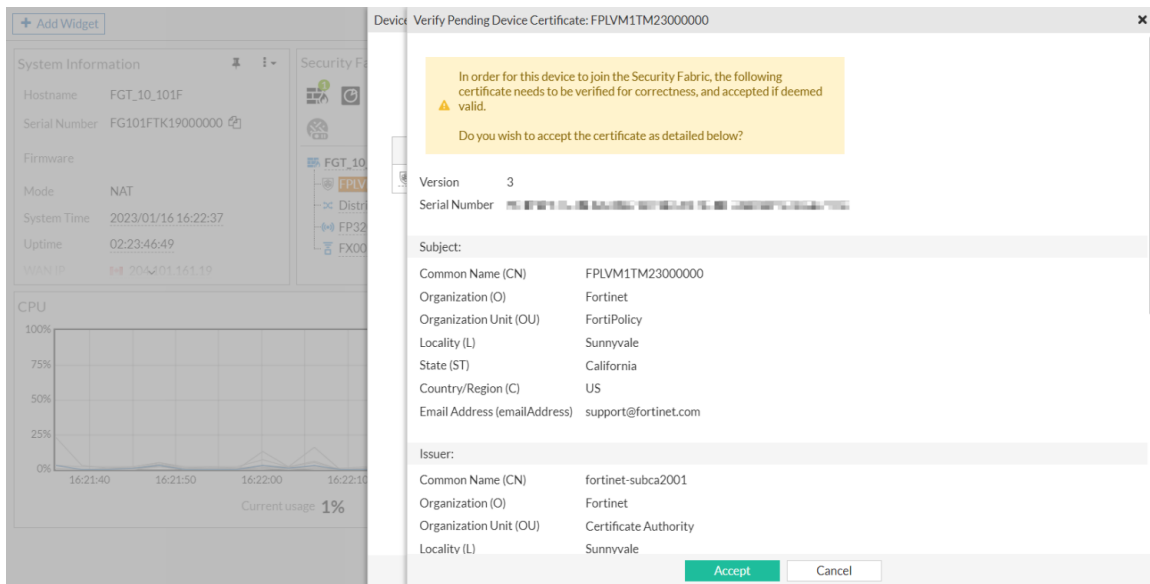

- e. Once the FortiPolicy is registered, click *Close*.

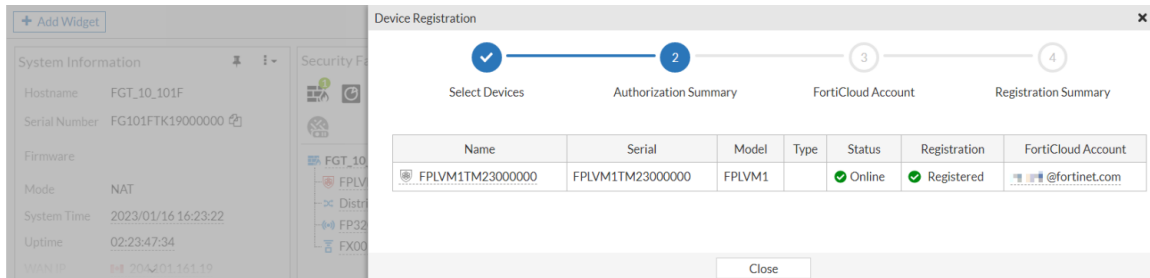

4. In FortiPolicy, refresh the *Configuration > Security Fabric* page. and verify that the connection status is *Connected (Authorized)*.

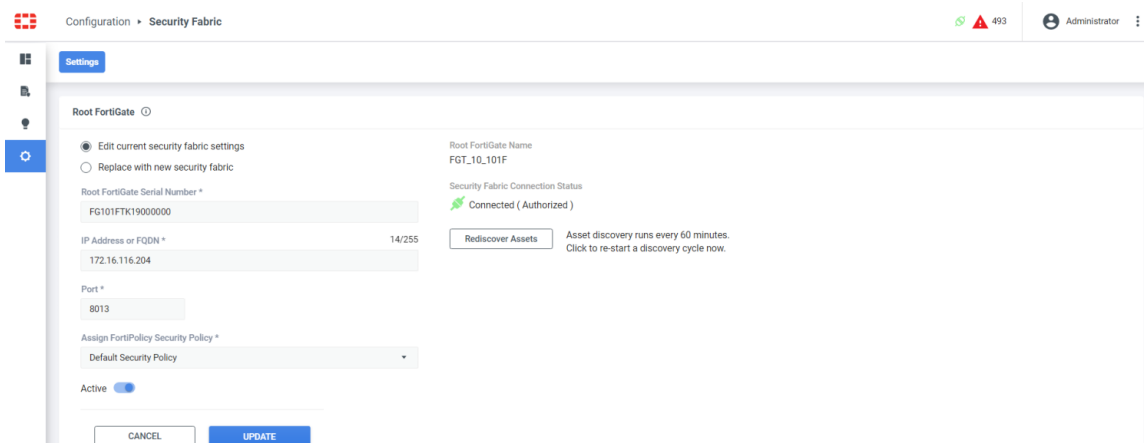


5. In FortiOS, grant FortiPolicy write access permission in the CLI:


```
config system csf
config fabric-connector
edit "FPLVM1TM23000000"
set configuration-write-access enable
next
```

end  
end

6. Go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology* to view more information.  
Physical topology view:

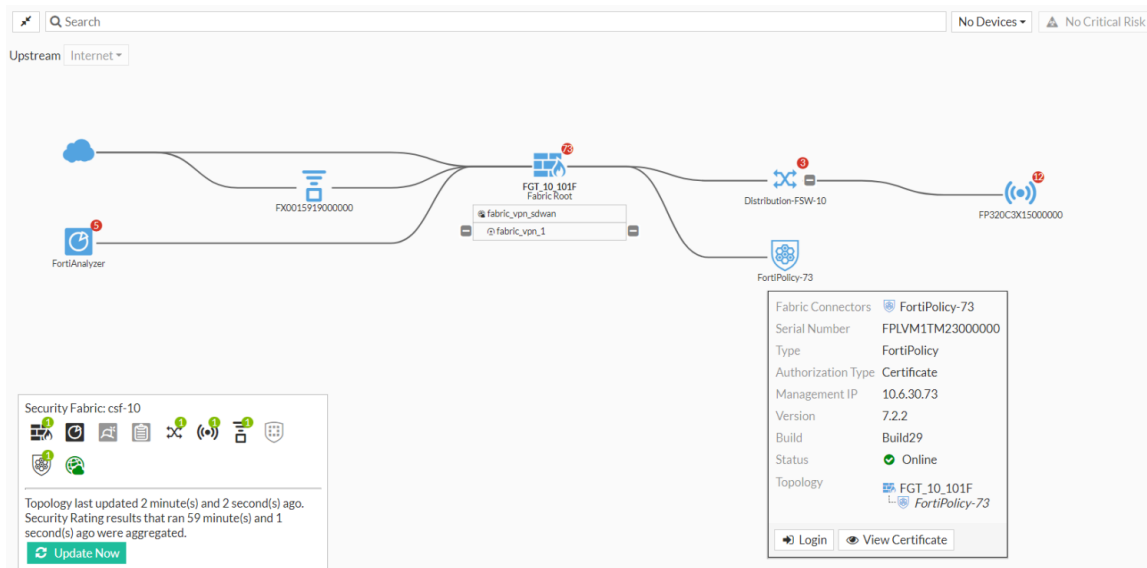


Logical topology view:

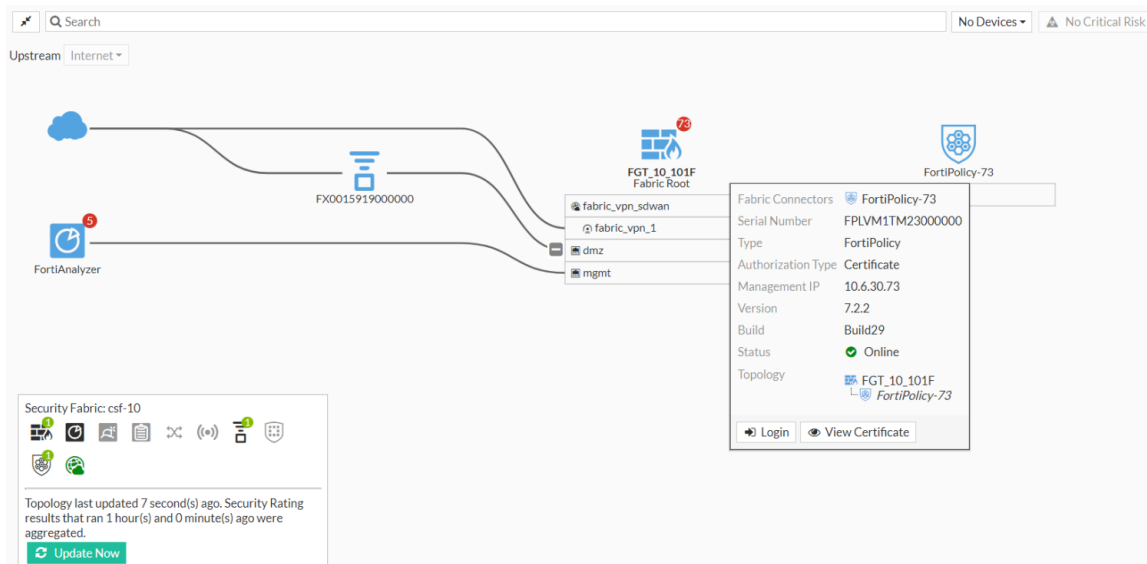




## To deploy firewall policies from FortiPolicy to the root FortiGate:

1. Create a policy in FortiPolicy (see [Customizing policies](#) in the FortiPolicy Administration Guide).

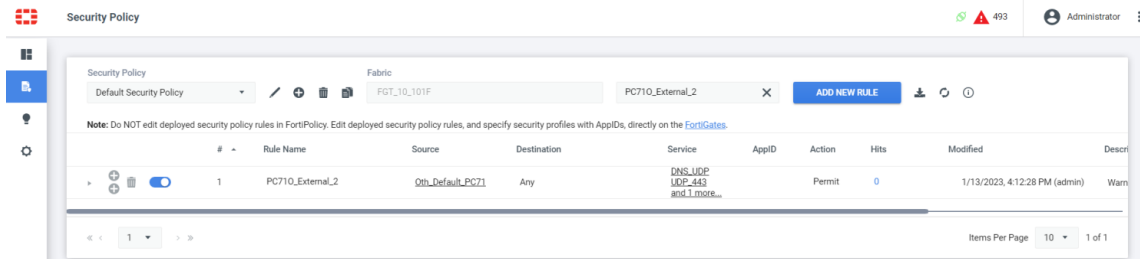


In this example, a default security policy rule called *PC710\_External\_2* is created. Since the FortiPolicy is integrated in the Security Fabric, it will use the REST API to push the static policy, dynamic firewall objects, and service objects to the root FortiGate.


2. In FortiOS, go to *Policy & Objects > Firewall Policy* to view the policy named *PC710\_External\_2*.

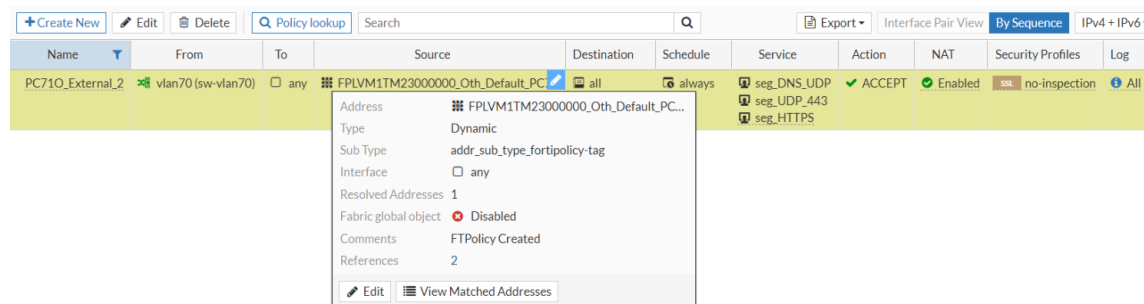

 3. Go to *Policy & Objects > Addresses* to view the dynamic firewall address associated with the policy (*FPLVM1TM23000000\_Oth\_Default\_PC71*).



4. Go to *Policy & Objects > Services* to view the service objects associated with the policy (*seg\_DNS\_UDP*, *seg\_UDP\_443*, *seg\_HTTPS*, and *seg\_TCP\_8013*).

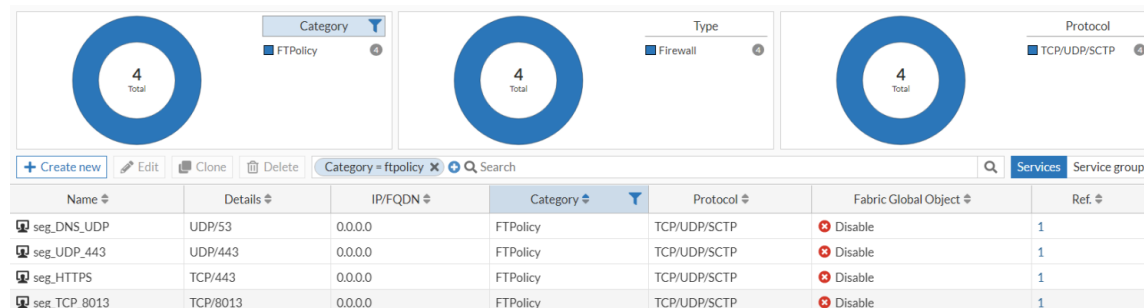

## Using the Security Fabric

The following topics provide information about using and deploying the Security Fabric:

- [Dashboard widgets on page 2660](#)
- [Topology on page 2662](#)
- [Asset Identity Center page on page 2668](#)
- [WebSocket for Security Fabric events on page 2676](#)
- [Deploying the Security Fabric on page 2677](#)
- [Deploying the Security Fabric in a multi-VDOM environment on page 2685](#)
- [Other Security Fabric topics on page 2690](#)


## Dashboard widgets

Security Fabric widgets can be added to FortiGate dashboards, including:

- [Security Fabric status on page 2660](#)
- [Fabric Device on page 2661](#)
- [FortiGate Cloud on page 2661](#)

## Security Fabric status

The Security Fabric status widget shows a summary of the devices in the Security Fabric.

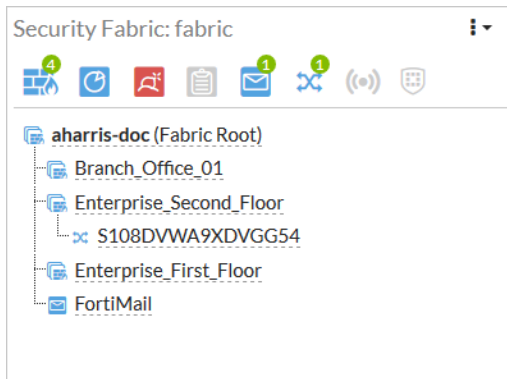

Hover the cursor over the top icons to view pop-ups showing the statuses of the devices in the fabric.

The device tree shows devices that are connected, or could be connected, to your Security Fabric, according to the following color scheme:

- Blue: connected to the network
- Gray: not configured or not detected
- Red: no longer connected or not authorized

Hover over a device in the tree to view details about the device, such as its serial number, operation mode, IP address, CPU and memory usage, and others, depending on the device type.


Unauthorized FortiAP and FortiSwitch devices are highlighted in the list, and can be authorized by clicking on the device name.

## Fabric Device

A Fabric Device widget shows statistics and system information about the selected fabric device. Widgets can be added for various Fabric devices including FortiMail, FortiNDR (formerly FortiAI), and FortiDeceptor.


For a FortiMail device, the widget can show:

- Mail Statistics: a chart of the total messages and total spam messages over time.
- Statistics Summary: a pie chart summarizes mail statistics.
- System Information: The FortiMail System Information widget
- System Usage: System usage information, such as CPU, memory, and disk usage, as well as the number of active sessions.

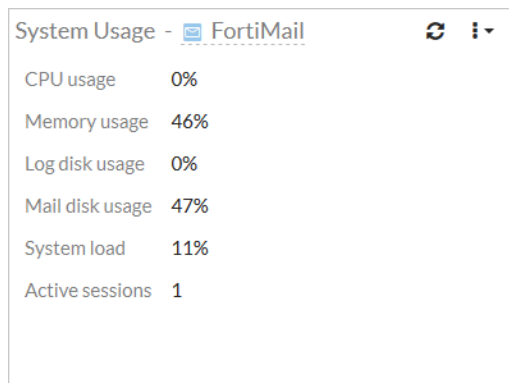

## FortiGate Cloud

The FortiGate Cloud widget shows the FortiGate Cloud status and information. If your account is not activated, you can activate it from the widget.

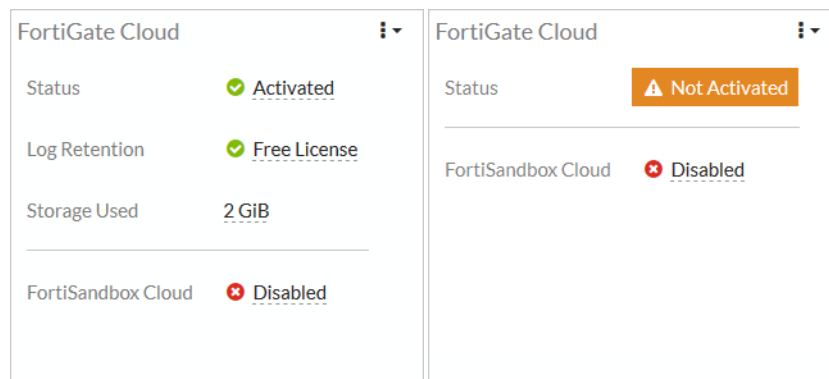

### To activate your FortiGate Cloud account:

1. Click on the *Not Activated* button and select *Activate*. The *Activate FortiGate Cloud* pane opens.
2. If you already have an account:
  - a. Fill in your email address, password, country or region, and reseller.
  - b. Click *OK*.

3. If you are creating an account:
  - a. In the *FortiCloud* field select *Create Account*.
  - b. Fill in all of the required information.
  - c. Click *OK*.

## Topology

The full Security Fabric topology can be viewed on the root FortiGate. Downstream FortiGate devices' topology views do not include upstream devices.

The *Physical Topology* page shows the physical structure of your network, including all connected devices and the connections between them. The *Logical Topology* page shows information about the interfaces that connect devices to the Security Fabric.

In both topology pages, you can use filtering and sorting options to control the information that is shown. Hover the cursor over a device icon, port number, or endpoint to open a tooltip that shows information about that specific device, port, or endpoint. Right-click on a device to log into, configure, or deauthorize it. Right-click on an endpoint to perform various tasks, such as drilling down for more details in FortiView, quarantining the host, and banning the IP address.

The small number that might be shown in the top right corner of a device icon is the number of security ratings recommendations or warnings for that device. The circle color indicates the severity of the highest security rating check that failed. Clicking it opens the *Security Rating* page. See [Security rating on page 2723](#) for more information.


## Views

From the dropdown list beside the search bar, select one of the following views:


- *Device Traffic*: organize devices by traffic.
- *Device Count*: organize devices by the number of devices connected to it.
- *Device Operating System*: organize devices by operating system.
- *Device Hardware Vendor*: organize devices by hardware vendor.
- *Risk*: only include devices that have endpoints with medium, high, or critical risk values of the specified type: *All*, *Compromised Host*, *Vulnerability*, or *Threat Score*.
- *No Devices*: do not show endpoints.

## Endpoint groups

The *Device Traffic* and *Device Count* views display endpoint groups as donut charts, with the total number of endpoints in the group in the center of the chart. Each sector of the donut chart represents a different endpoint operating system.

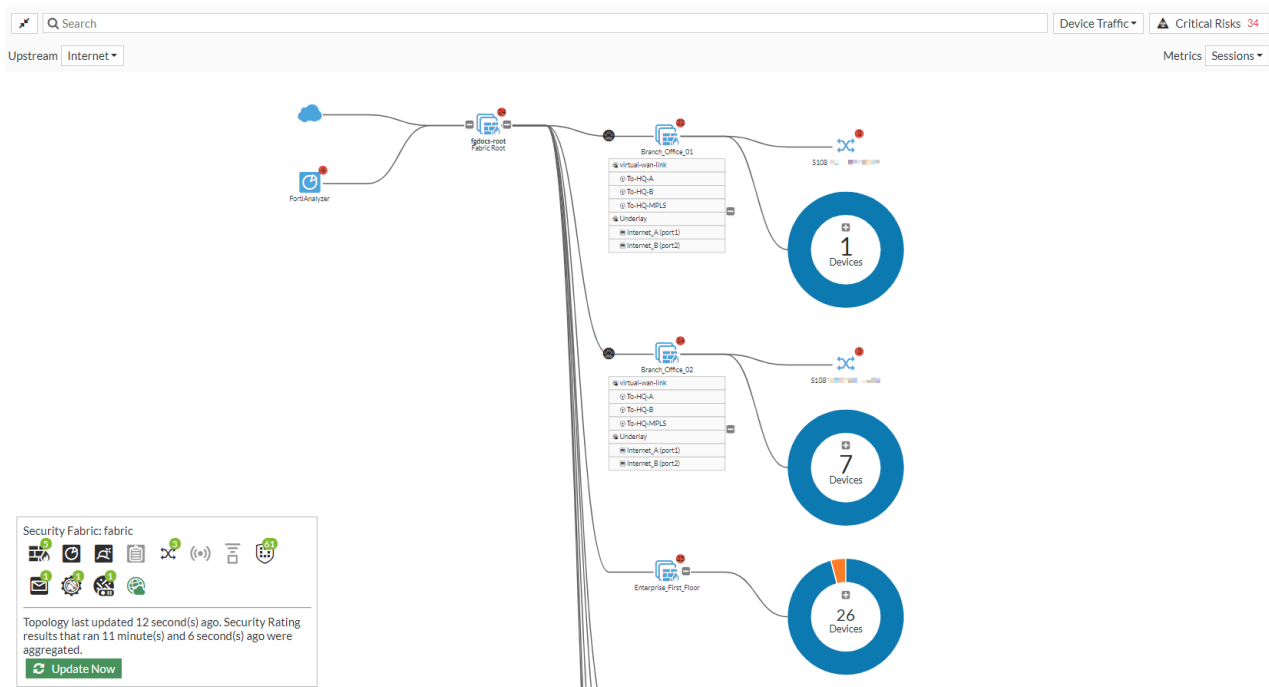

To zoom in on a donut chart, click any chart sector. Each sector represents a different endpoint OS. Hovering over each sector allows you to see the OS that the sector represents and the number of endpoints that have that OS installed.

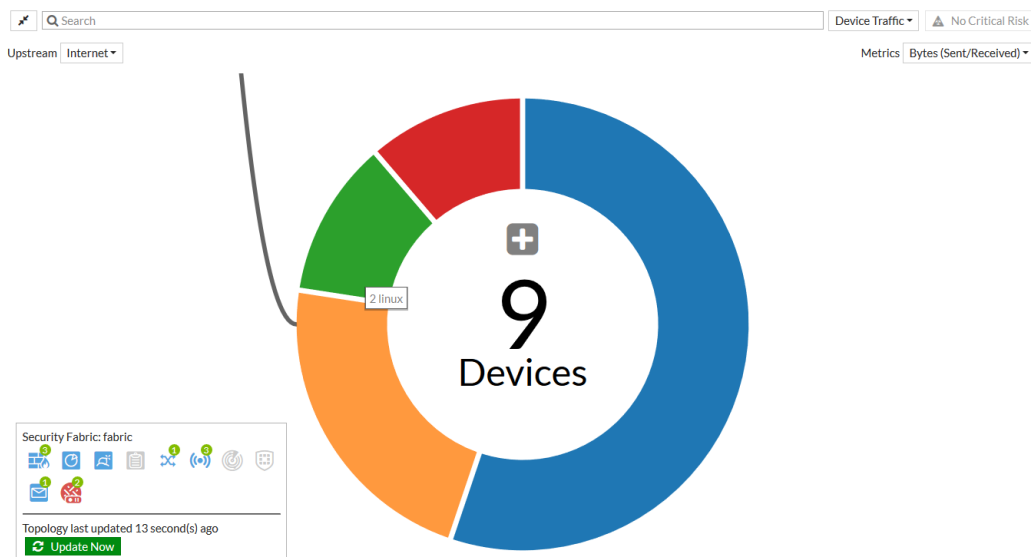

In this example, the endpoint group contains a total of nine endpoints, with the following OSes installed:

Donut sector color	OS	Number of endpoints
Orange	Linux	2
Green	FortiMail	1
Red	FortiManager	1
Blue	Other	5

To view the endpoint group in a bubble pack display, click the + button in the center of the donut chart. You can view each individual endpoint in the bubble pack view.

## FortiAP and FortiSwitch devices

Newly discovered FortiAP and FortiSwitch devices are initially shown in the topologies with gray icons to indicate that they have not been authorized. To authorize a device, click on the device icon or name and select *Authorize*. Once authorized, the device icon will turn blue.


Right-click on an authorized FortiAP device to *Deauthorize* or *Restart* the device. Right-click on a FortiSwitch device to *Deauthorize*, *Restart*, or *Upgrade* the device, or to *Connect to the CLI*.

FortiAP and FortiSwitch links are enhanced to show link aggregation groups for the inter-switch link (ISL-LAG). To differentiate them from physical links, ISL-LAG links are shown with a thicker line. The endpoint circles can also be used as a reference to identify ISL-LAG groups that have more than two links.


## Managed clients connected over a VPN

When managed clients are connected over a VPN, EMS collects user information about these registered clients, such as the VPN connection information. The FortiGate can synchronize this user information from EMS and display it in the logical topology view to provide a detailed picture of clients and their associated VPN interfaces.

Client using an IPsec VPN interface:

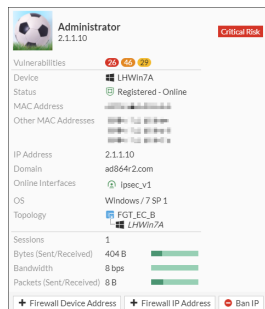


Client using an SSL VPN interface:

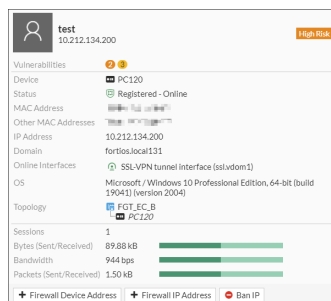

## Critical risks

Click the *Critical Risks* button to see a list of endpoints that are deemed critical risks, organized by threat severity. These are the red endpoints in the current topology view.

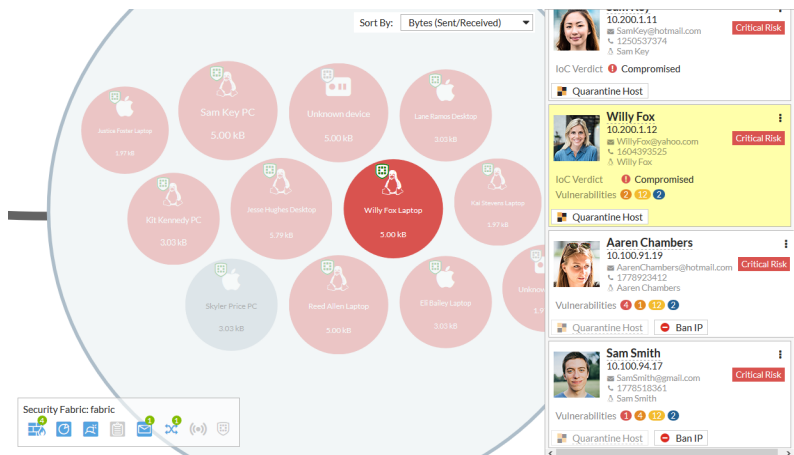

For each endpoint, the user's photo, name, IP address, email address, and phone number are shown. The number of vulnerabilities of each severity is shown, and if the IoC verdict is that the endpoint is compromised.

If applicable, the endpoint's host can be quarantined (click *Quarantine Host*) or their IP address can be banned (click *Ban IP*).


The dropdown menu also provides options to drill down to more information on compromised hosts or endpoint vulnerabilities.

## Consolidated risk view

The consolidated *Risk* view mode displays different risks within the Security Fabric topology. You can use the *Risk* view mode to filter threats by *Compromised Hosts*, *Vulnerability*, and *Threat Score*.


**To access the consolidated risk view mode:**

1. On one of the topology pages, in the view option dropdown list beside the search bar, select *Risk*.

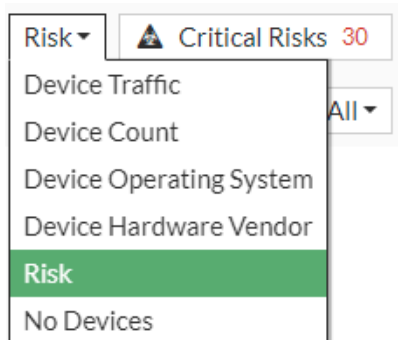

2. Select one of the following options from the *Risk Type* dropdown menu:
  - a. *All*
  - b. *Compromised Hosts*
  - c. *Vulnerability*
  - d. *Threat Score*
3. When devices fit into the risk metric, they will appear in the endpoint groups. Click the + in the endpoint group to

display the devices in a bubble chart.

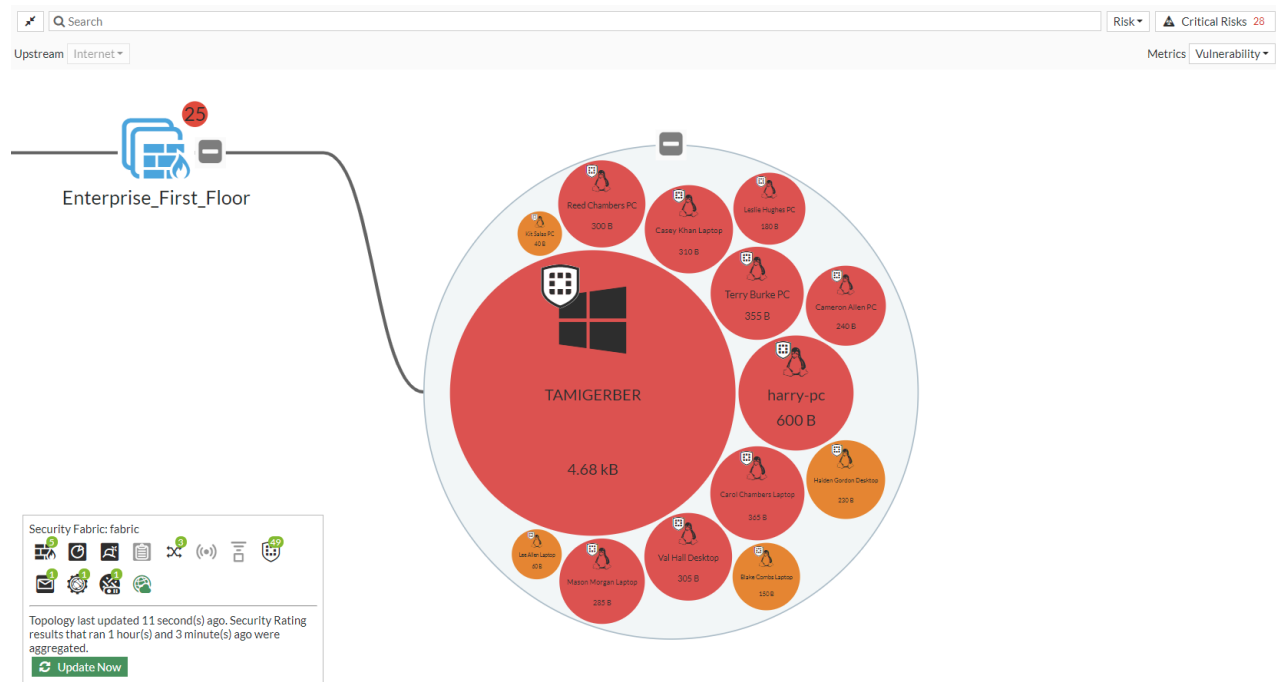


## Viewing and controlling network risks in topology view

On the physical and logical topology pages, you can view and control compromised hosts. Compromised hosts behind a FortiSwitch or FortiAP can be quarantined.

### To view a compromised endpoint host:

1. Test that FortiGate detects a compromised endpoint host by opening a browser on the endpoint host and entering a malicious website URL. The browser displays a *Web Page Blocked!* warning and does not allow access to the website.
2. On the root FortiGate, go to *Security Fabric > Physical Topology* or *Security Fabric > Logical Topology*. Expand the endpoint group connected to a FortiSwitch or FortiAP. The endpoint host connected to the switch is highlighted in red. Mouse over the endpoint host to view a tooltip that shows the IoC verdict. The endpoint host is compromised.



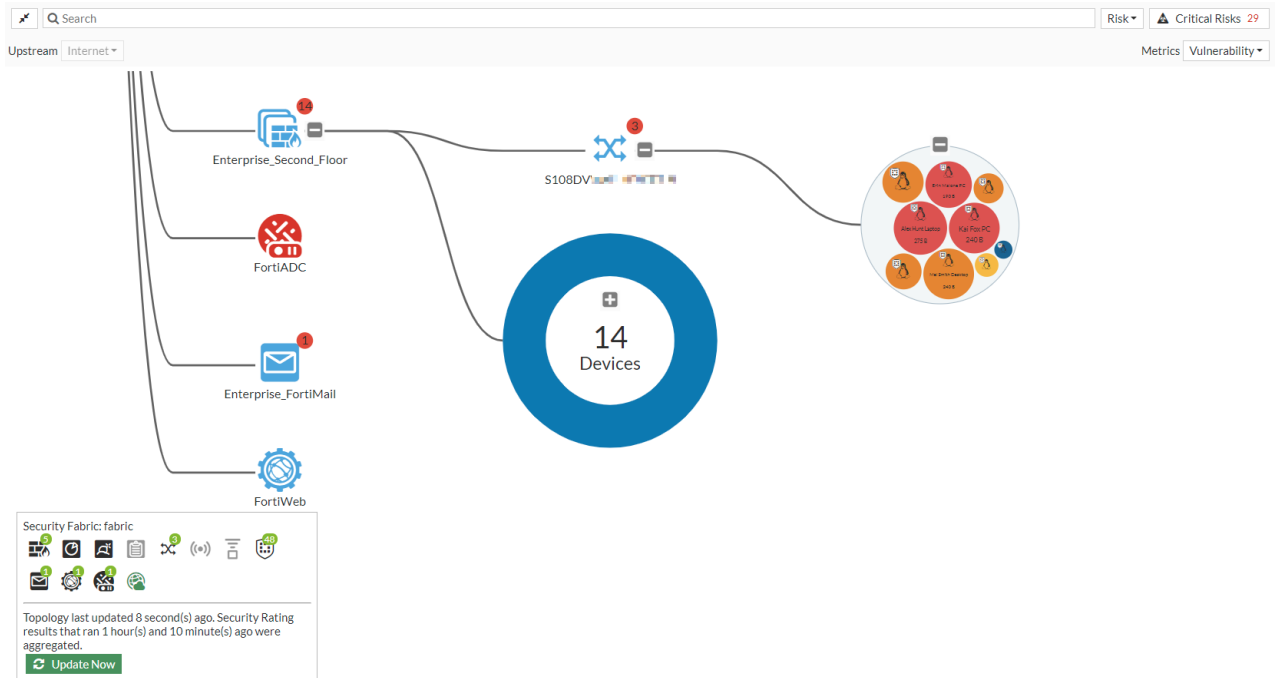

### To quarantine a compromised endpoint host:

1. On the *Physical Topology* or *Logical Topology* page, right-click the endpoint host and select *Quarantine Host*. A dialog displays the FortiGate, host MAC address, and description of the host to be quarantined. Quarantine entries for each MAC address will be created on the FortiGate that the FortiSwitch or FortiAP is connected to.
2. Click *OK*.
3. Go to *Dashboard > User & Devices* and click the *Quarantine* widget to expand it.
4. In the top-right corner, use the dropdown to select the FortiGate in which this host was quarantined. In this example, it is the *Enterprise\_Second\_Floor* FortiGate.

+ Add Widget

Enterprise\_Second\_Floor

Quarantine

Source

Administrative

1 Total

Device

qtn.mac

1 Total

Delete Remove All Search

Details	Device	Source	Expires	Description
Quarantined	qtn.mac	Administrative	Never	manual-qtn Hostname: Erin Malone PC

Updated: 18:39:38

5. On the endpoint host, open a browser and visit a website such as <https://www.fortinet.com/>. If the website cannot be accessed, this confirms that the endpoint host is quarantined.

### To show the quarantined device from the CLI:

1. Log in to the downstream device where the host was quarantined (*Enterprise\_Second\_Floor*).
2. Enter the following show command:

```

Enterprise_Second_Floor # show user quarantine
config user quarantine
    set firewall-groups "QuarantinedDevices"
    config targets
        edit "Erin Malone PC"
            set description "Manually quarantined"
            config macs
                edit **:**:**:**:**:**
                    set description "manual-qtn Hostname: Erin Malone PC"
                next
            end
        next
    end
end
end
end

```

## Asset Identity Center page

The *Asset Identity Center* page unifies information from detected addresses, devices, and users into a single page, while building a data structure to store the user and device information in the backend. *Asset* view groups information by *Device*, while *Identity* view groups information by *User*. Hover over a device or a user in the GUI to perform different actions relevant to the object, such as adding a firewall device address, adding an IP address, banning the IP, quarantining the host, and more.

### To view the Asset Identity Center page:



1. Go to *Security Fabric > Asset Identity Center*.
2. Click *Asset* to view information by device. The default columns are *Device*, *Software OS*, *Hardware*, *FortiClient User*, *User*, *Status*, *IoT Vulnerabilities*, *Endpoint Vulnerabilities*, *Endpoint Tags*, and *Last Seen*. The optional columns are *Address*, *Firewall Address*, *Hostname*, *IP Address*, and *Server*.

<div> <div> <div></div> <div>Search</div> </div> <div> <div>Latest</div> <div>Asset</div> <div>Identity</div> </div> </div>							
Device	Software OS	Hardware	FortiClient User	User	Status	Vulnerabilities	Endpoint Tags
Skylar Khan PC	Linux	Other identi...	<b>Skylar Khan</b> 10.2.0.10 SkylarKhan@... Skylar Khan		Registered - Online	8 7	Low all_registered_clients
Haideen Bryant ...	Linux	Other identi...	<b>Haideen Bryant</b> 10.2.0.14 HaideenBryant@... Haideen Bryant		Registered - Online	1 2	Low all_registered_clients
Y-BRANCH-02...	Linux	Sony	<b>Cameron Burch</b> 10.2.0.2 CameronBurch@... Cameron Burch		Registered - Online	2 3	Low all_registered_clients
Gabby Watts PC	Linux	Other identi...	<b>Gabby Watts</b> 10.2.0.18 GabbyWatts@... Gabby Watts		Registered - Online	1 4 9 1	Low all_registered_clients
Y-BRANCH-02...	Linux	Apple	<b>Kit Fox</b> 10.2.0.8 KitFox@... Kit Fox		Registered - Offline	3 3 1	Low all_registered_clients
Y-BRANCH-02...	Linux	Intel	<b>Silver Doyle</b> 10.2.0.13 SilverDoyle@...		Registered - Online	1 6 5	Low all_registered_clients
							0% 51

3. Click *Identity* to view information by user. The default columns are *User*, *Device*, and *Properties*. The optional columns are *IP Address*, *Logoff Time*, and *Logon Time*.

Q Search						1 hour	Asset	Identity
User	Device	Properties	IP Address	Logoff Time	Logon Time			
qa1	PC17	IP Address = 10.6.30.17 MAC address =	10.6.30.17		2021/09/20 16:12:21			
test1	PC72 PC17	IP Address = 192.168.7.72 MAC address =	192.168.7.72		2021/09/20 16:14:24			

Each view has a dropdown option to view the information within different time frames (*Latest*, *1 hour*, *24 hours*, and *7 days*). Vulnerability information is displayed when applicable. The page displays user and device relationships, such as which users are logged in to multiple devices or if multiple users are logged in to single devices.

🔄 🔍 Search									Latest ▾	Asset	Identity
Device	Software OS	Hardware	FortiClient User	User	Status	Vulnerabilities	Last Seen	Address	Hostname	IP address	
🖥️ PC72	Microsoft	Other Identified device	 fosqa 10.6.30.72	👤 test1	🟢 Registered - Online - On-Net	🔴 19 🔴 20 🟡 1 🔵 2	5 minutes ago	10.6.30.72 192.168.7.72 2000:192:168:7::72	PC72	10.6.30.72	
🖥️ PC17	Microsoft	Other Identified device	 fosqa 10.6.30.17	👤 test1	🟢 Registered - Online - On-Net	🔴 19 🔴 20 🟡 1 🔵 2	4 minutes ago	10.6.30.17	PC17	10.6.30.17	

IP Address == 10.6.30.17 X Q Search						7 days	Asset	Identity
User	Device	Properties	IP Address	Logoff Time	Logon Time			
qa1	PC17	IP Address = 10.6.30.17 MAC address =	10.6.30.17		2021/09/20 16:12:21			
test1	PC72 PC17	IP Address = 192.168.7.72 & 10.6.30.17 MAC address =	192.168.7.72 10.6.30.17	2021/09/20 16:11:23	2021/09/20 15:49:18			

4. Hover over a device in the list to view the tooltip and possible actions. In this example, the available actions are add firewall device address, add firewall IP address, and ban the IP.

Q Search								Latest	Asset	Identity
Device	Software OS	Hardware	FortiClient User	User	Status	Vulnerabilities	Endpoint Tags			
Skylar Khan PC	Linux	Other identi...	Skylar Khan		Registered - Online	8 7	Low all_registered_clients			
Haideen Bryant...					Registered - Online	1 2	Low all_registered_clients			
Y-BRANCH-02...					Registered - Online	2 3	Low all_registered_clients			
Gabby Watts PC					Registered - Online	1 4 9 1	Low all_registered_clients			
Y-BRANCH-02...					Registered - Offline	3 3 1	Low all_registered_clients			
Y-BRANCH-02...	Linux	Intel	Silver Doyle		Registered - Online	1 6 5	Low all_registered_clients			

Skylar Khan  
10.2.0.10  
SkylarKhan@...l.com  
Skylar Khan

Detected Device: Skylar Khan PC  
Status: Registered - Online  
Hostname: Skylar Khan PC  
MAC Address:   
IP Address: 10.2.0.10  
Interface: B02\_LAN (port3)  
Online Interfaces: B02\_LAN (port3)  
OS: Linux / LUBUNTU 14.0.4  
Endpoint Tags: Low all\_registered\_clients  
Vulnerabilities: 8 7  
FortiClient User: Skylar Khan

+ Firewall Device Address + Firewall IP Address - Ban IP

0% 51

## Diagnostics for the unified user device store

The following options are available for `diagnose user-device-store unified <option>`:

Option	Description
<code>device-memory-query</code>	Get device records and associated user records from memory.
<code>device-query</code>	Get device records and associated user records from memory and disk.
<code>user-memory-query</code>	Get user records and associated device records from memory.
<code>user-query</code>	Get user records and associated device records from memory and disk.
<code>re-query</code>	Retrieve query by <code>&lt;query-id&gt;</code> <code>&lt;iteration-start&gt;</code> <code>&lt;iteration-count&gt;</code> (takes 0-3 arguments).
<code>list</code>	List unified queries.
<code>clear</code>	Delete all unified queries.
<code>dump</code>	Dump unified query stats by <code>&lt;query-id&gt;</code> (takes 0-1 arguments).
<code>delete</code>	Delete unified query by <code>&lt;query-id&gt;</code> (takes 0-1 arguments).
<code>stats</code>	Get statistics for unified queries.
<code>debug</code>	Enable/disable debug logs for unified queries.

## IoT devices

IoT device information (such as the device name, software OS, hardware vendor, status, known IoT vulnerabilities, IP address, hostname, time last seen, port, and VLAN) can be viewed on the *Asset Identity Center* page's *Asset* list view.

Hovering over the vulnerabilities count in the *IoT Vulnerabilities* column displays a *View IoT Vulnerabilities* tooltip, which opens the *View IoT Vulnerabilities* table that includes the *Vulnerability ID*, *Type*, *Severity*, *Reference*, *Description*, and *Patch Signature ID*. Each entry in the *Reference* column includes the CVE number and a link to the CVE details.

The following settings are required to display IoT devices:

1. The FortiGate must have a valid IoT Detection Service license.
2. Device detection must be configured on a LAN interface used by IoT devices.

### To configure device detection in the GUI:

- a. Go to *Network > Interfaces* and edit a LAN interface.
- b. Enable *Device detection*.
- c. Click *OK*.

### To configure device detection in the CLI:

```
config system interface
    edit <name>
        set device-identification enable
```

next  
end

3. Configure a firewall policy with an application control sensor.

To view IoT asset vulnerabilities in the GUI:

1. Go to *Security Fabric > Asset Identity Center*. Ensure the *Asset* list view is selected.
2. Select a device with IoT vulnerabilities.

Search								
Latest Asset Identity								
Device	Software OS	Hardware	IoT Vulnerabilities	FortiClient User	User	Status	Endpoint Vulnerabilities	Endpoint Tags
	Android		2 1			Online		
	Other identified device	Other identified device				Online		
RingCamMini-8a	Other identified device	Ring / IP Camera / Indoor Camera				Online		
	Windows	Dell / Computer				Online		
DESKTOP-1111111	Windows	Dell / Computer				Online		
	FortiOS	Fortinet / Firewall / FortiGate-61E				Online		

3. Hover over the *IoT Vulnerabilities* count to view the tooltip and click *View IoT Vulnerabilities*. A table with the list of vulnerabilities and related information for the device is displayed, including the CVE references and descriptions.

Search

Device

Software OS

Android

Other identified device

Other identified device

Windows

Windows

FortiOS

Ring /

Dell / C

Dell / C

Fortine

View IoT Vulnerabilities for

Search

Vulnerability ID

Type

Severity

Reference

Description

Patch Signature

IoT Application: Google Chrome 60.0.3112.32

10

48970

Buffer Errors

[CVE-2021-37974](#)

Use after free in Safebrowsing in Google ...

48971

Buffer Errors

[CVE-2021-37975](#)

Use after free in V8 in Google Chrome pri...

48973

Buffer Errors

[CVE-2021-37977](#)

Use after free in Garbage Collection in Go...

48974

Buffer Errors

[CVE-2021-37978](#)

Heap buffer overflow in Blink in Google C...

94102

Other

[CVE-2011-0472](#)

Google Chrome before 8.0.552.237 and C...

94104

Buffer Errors

[CVE-2011-0475](#)

Use-after-free vulnerability in Google Chr...

94105

Buffer Errors

[CVE-2011-0475](#)

Use-after-free vulnerability in Google Chr...

94106

Buffer Errors

[CVE-2011-0479](#)

Google Chrome before 8.0.552.237 and C...

94107

Buffer Errors

[CVE-2011-0479](#)

Google Chrome before 8.0.552.237 and C...

48972

Improper Authentication

[CVE-2021-37976](#)

Inappropriate implementation in Memory...

Close

4. Click a hyperlink in the *Reference* column to view more information about the CVE, or click *Close*.

**To view IoT asset vulnerabilities in the CLI:**

```
# diagnose user-device-store device memory list
...
    device_info
        'ipv4_address' = '10.20.80.10'
        'mac' = '**:**:**:**:**:**'
        ...
        'vdom' = 'root'
        'os_name' = 'Android'
        'hostname' = '*****'
        'last_seen' = '1670540312'
        'host_src' = 'dhcp'
        'unjoined_forticlient_endpoint' = 'false'
        'is_online' = 'true'
        'active_start_time' = '1670536763'
        ...
        'dhcp_lease_status' = 'leased'
        'dhcp_lease_expire' = '1671141562'
        'dhcp_lease_reserved' = 'false'
        'dhcp_server_id' = '10'
        'is_fortiguard_src' = 'false'
        'purdue_level' = '3'
        'iot_vuln_count' = '10'
    ...

    iot_info
        'vendor' = 'Google'
        'product' = 'Chrome'
        'version-min' = '60.0.3112.32'
        'validity' = 'true'
    iot_vulnerability
        'vulnerability_id' = '48970'
        'severity' = '3'
        'type' = 'Buffer Errors'
        'description' = 'Use after free in Safebrowsing in Google Chrome prior to
94.0.4606.71 allowed a remote attacker who had compromised the renderer process to
potentially exploit heap corruption via a crafted HTML page.'
        'references' = 'CVE-2021-37974'
        'date_added' = '2022-07-27 17:52:34.987194'
        'date_updated' = '2022-07-27 17:52:34.987220'
    ...

    iot_vulnerability
        'vulnerability_id' = '94107'
        'severity' = '3'
        'type' = 'Buffer Errors'
        'description' = 'Google Chrome before 8.0.552.237 and Chrome OS before
8.0.552.344 do not properly interact with extensions, which allows remote attackers to cause
a denial of service via a crafted extension that triggers an uninitialized pointer.'
        'references' = 'CVE-2011-0479'
        'date_added' = '2022-09-20 18:23:54.961465'
        'date_updated' = '2022-09-20 18:23:54.961481'
```

## OT asset visibility and network topology

When the *Operational Technology (OT)* feature is enabled, tabs are added in the *Asset Identity Center* page to view the OT asset list and OT network topology using Purdue Levels. This feature is available regardless of whether a Security Fabric is enabled.

### To enable the OT features in the GUI:


1. Go to *System > Feature Visibility*.
2. In the *Additional Features* section, enable *Operational Technology (OT)*.
3. Click *Apply*.





### To enable the OT features in the CLI:

```
config system settings
    set gui-ot enable
end
```

Once enabled, the *Security Fabric > Asset Identity Center* page displays an *Asset Identity List* tab and an *OT View* tab.

  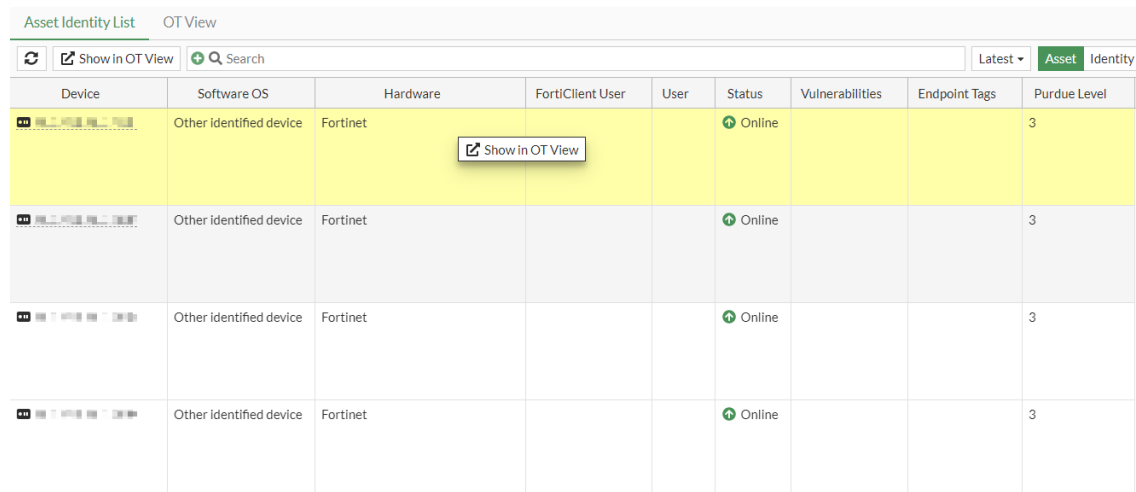- The *Asset Identity List* tab includes a configurable *Purdue Level* column and a *Show in OT View* option for selected devices in the table.




Device	Software OS	Hardware	FortiClient User	User	Status	Vulnerabilities	Endpoint Tags	Purdue Level
	Other identified device	Fortinet			Online			3
	Other identified device	Fortinet			Online			3
	Other identified device	Fortinet			Online			3
	Other identified device	Fortinet			Online			3

- The *OT View* tab shows a topology of detected components and connections mapped to Purdue Levels. The default view is locked, but devices can be dragged and dropped to other Purdue Levels if the view is unlocked.

FortiGates and managed FortiSwitches are statically assigned Purdue Level 2 and cannot be changed. Other detected devices are assigned Purdue Level 3 by default and can be changed (except to level S, 0, or external).

The following diagram lists the Purdue Levels based on OT network topologies:

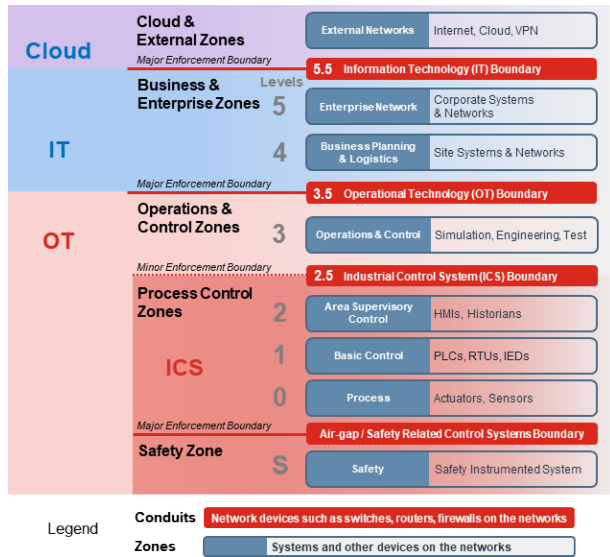

### To change the Purdue Level in the Asset Identity List tab:

- Go to *Security Fabric > Asset Identity Center* and select the *Asset Identity List* tab.
- Add the *Purdue Level* column to the table:
  - Hover over the table header and click the gear icon (*Configure Table*).
  - Select *Purdue Level*.
  - Click *Apply*.
- Select a device and hover over the *Purdue Level* value.
- Click the pencil icon to edit the level.
- Select a value from the dropdown.

Asset Identity List OT View

Latest Asset Identity

Device	Software OS	Hardware	FortiClient User	User	Status	Purdue Level	Vulnerabilities	Endpoint Tags
Other identified device	Other identified device				Online	3		
Other identified device	Other identified device				Online	3		
ARBUTUS	Windows	Other identified device			Online	3.5		
Y-MPLS-ROUTER	Other identified device	Other identified device			Online	3		


- Click *Apply*.

### To change the Purdue Level in the OT View tab:


- Go to *Security Fabric > Asset Identity Center* and select the *OT View* tab.
- Click *Unlock View*.



### 3. Select a device.

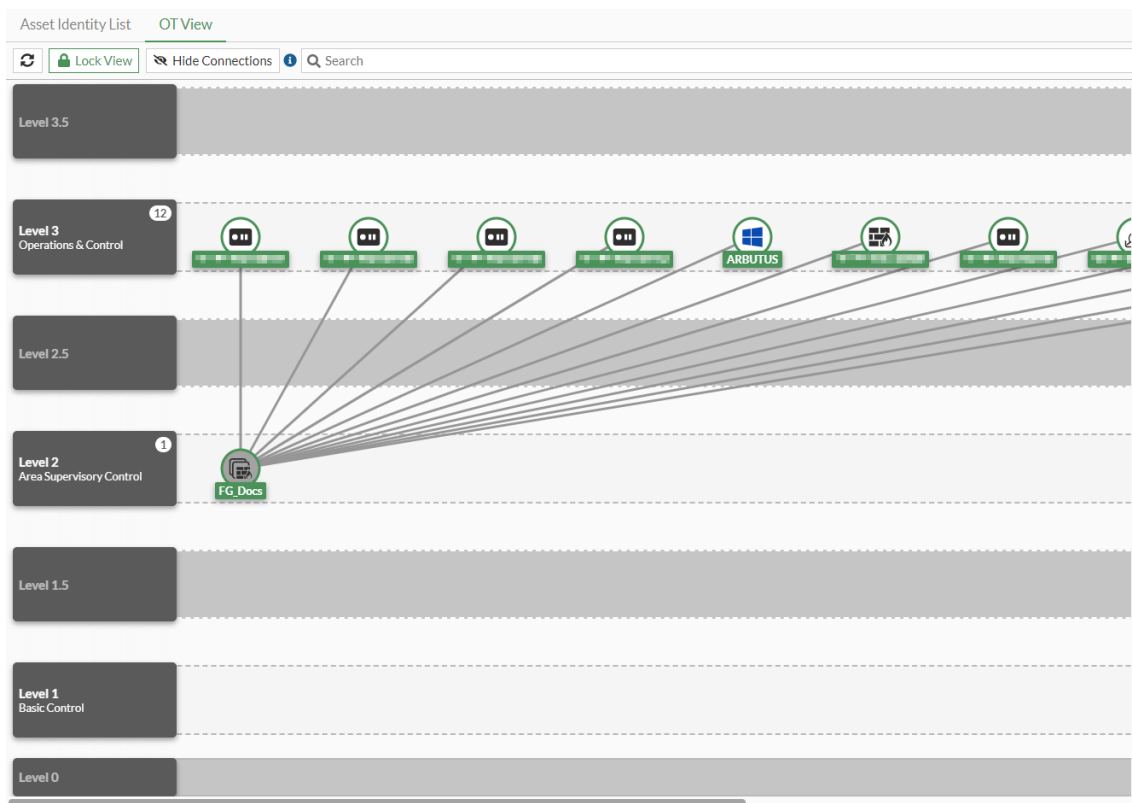

### 4. Drag the device icon to another level row.

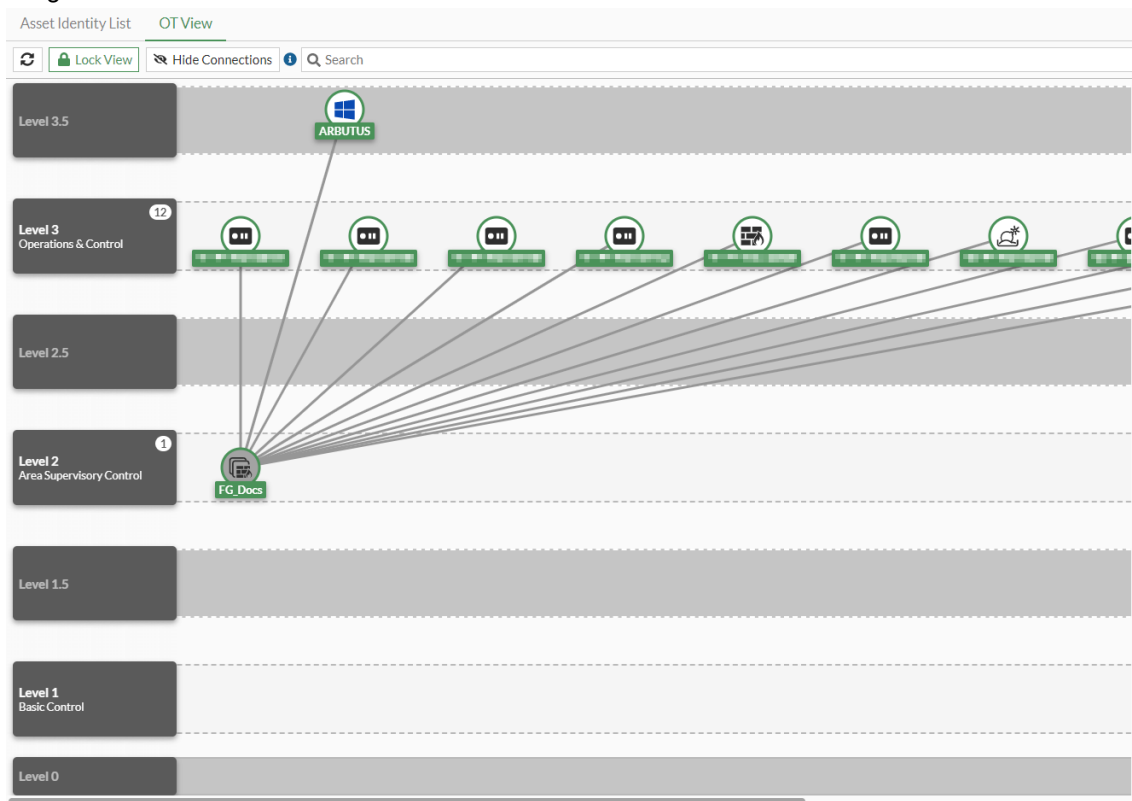

- Optionally, click *Lock View* to revert to the locked view.

### To change the Purdue Level in the CLI:

```
# diagnose user-device-store device memory ot-purdue-set <mac> <ip> <level>
```

mac	Enter the MAC address of the device.
ip	Enter the IPv4 address of the device.
level	Enter the Purdue Level: 1, 1.5, 2, 2.5, 3, 3.5, 4, 5, 5.5.

## WebSocket for Security Fabric events

With the WebSocket for Security Fabric events, subscribers to the WebSocket (such as the *Fabric Management* page) are updated upon new Fabric events and alert users to reload the page.

### Example


#### To deauthorize a downstream FortiGate:

- Go to *System > Fabric Management* and select a downstream FortiGate in the table.
- Right-click on the device and select *Authorization > Deauthorize*.


The screenshot displays the FortiGate Fabric Management interface. At the top, there are two donut charts: 'Device Type' showing 11 total devices (5 FortiGate, 3 FortiSwitch, 3 FortiAP) and 'Upgrade Status' showing 8 total devices (all 'Up to date'). Below these are buttons for 'Fabric Upgrade', 'Upgrade', 'Register', and 'Authorization'. A search bar is also present. The main table lists devices with columns for Device, Status, Registration Status, Firmware Version, and Upgrade Status. A right-click context menu is open over the 'Branch\_Off' device, showing options: Upgrade, Register, Authorization, Deauthorize (highlighted), and Reject. The table shows 11 devices in total.

Device	Status	Registration Status	Firmware Version	Upgrade Status
FGDocs	Online	Registered	v7.2.4 build1396 (Feature)	Up to date
Branch_Office_02	Online	Registered	v7.2.4 build1396 (Feature)	Up to date
Enterprise_Second_Floor	Online	Registered	v7.2.4 build1396 (Feature)	Up to date
Enterprise_...	Online	Registered	v7.2.4 build1396 (Feature)	Up to date
Branch_Off	Online	Registered	v7.2.4 build1396 (Feature)	Up to date

3. An alert appears in the bottom-right corner of the page. Click *Reload Now* to refresh the page.

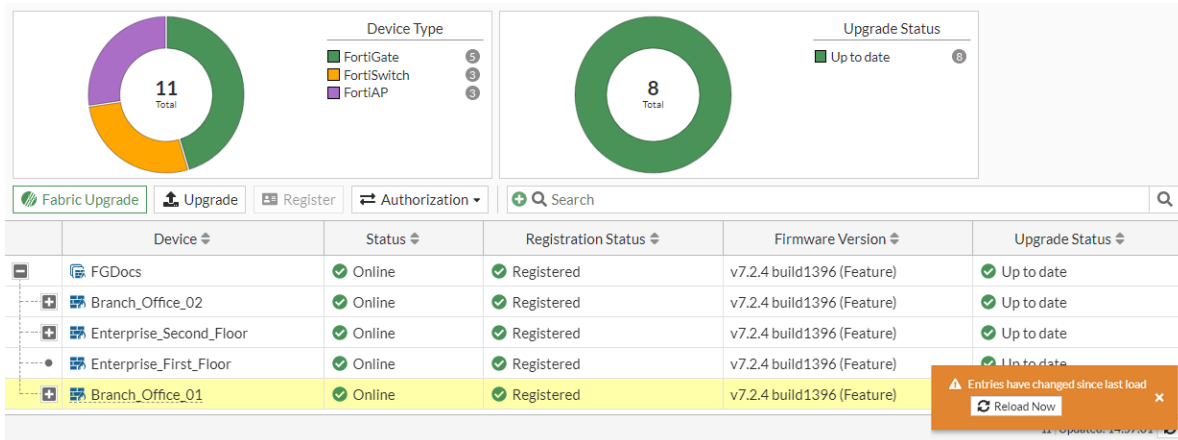


The deauthorized FortiGate's status is now listed as *Unauthorized*.

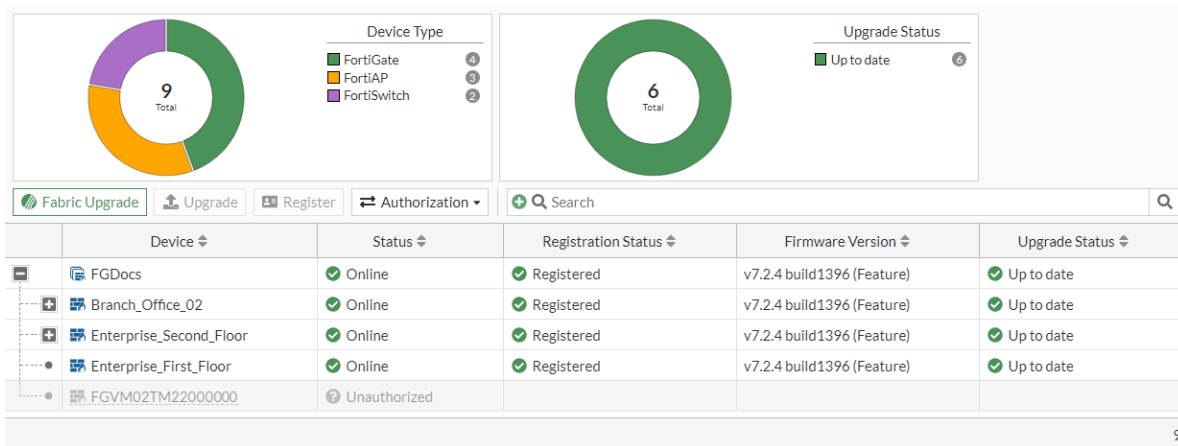

## Deploying the Security Fabric

This topic provides an example of deploying Security Fabric with three downstream FortiGates connecting to one root FortiGate. To deploy a Security Fabric, you need a FortiAnalyzer running firmware version 6.2 or later.

The following shows a sample network topology with three downstream FortiGates (Accounting, Marketing, and Sales) connected to the root FortiGate (Edge).

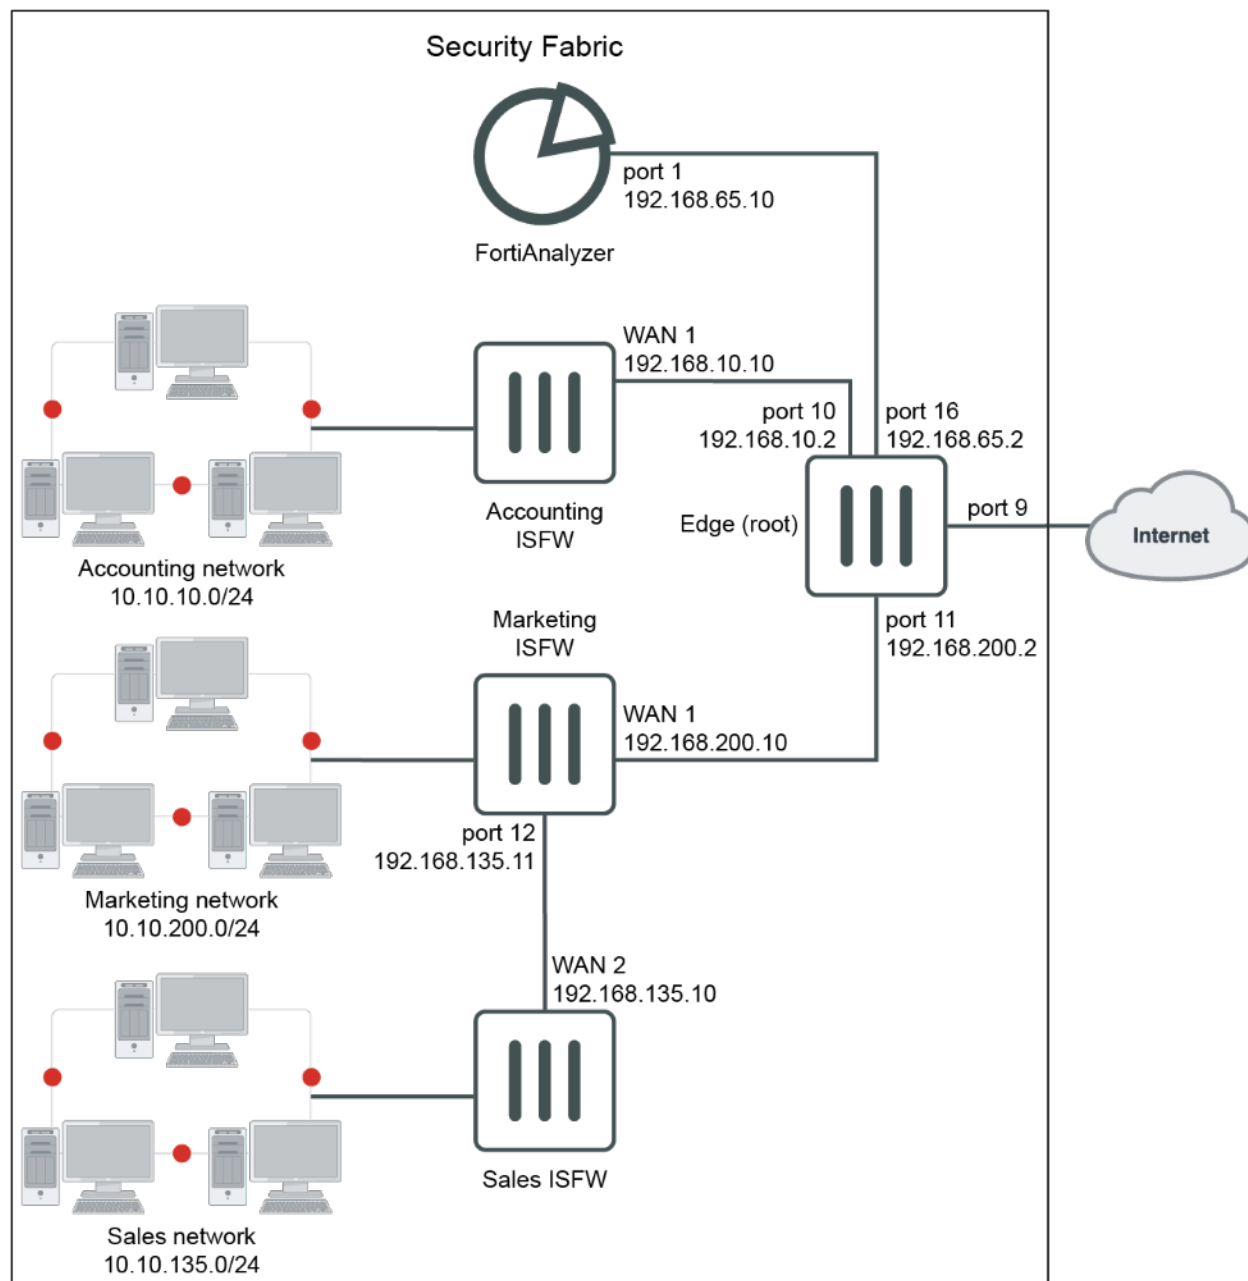

### To configure the root FortiGate (Edge):

1. Configure the interfaces:
  - a. Go to *Network > Interfaces*.
  - b. Edit *port16*:
    - Set *Role* to *DMZ*.
    - For the interface connected to FortiAnalyzer, set the *IP/Network Mask* to *192.168.65.2/255.255.255.0*

- c. Edit *port10*:
  - Set *Role* to *LAN*.
  - For the interface connected to the downstream FortiGate (Accounting), set the *IP/Network Mask* to *192.168.10.2/255.255.255.0*
- d. Edit *port11*:
  - Set *Role* to *LAN*.
  - For the interface connected to the downstream FortiGate (Marketing), set the *IP/Network Mask* to *192.168.200.2/255.255.255.0*
2. Configure the Security Fabric settings:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. Select the *Settings* tab, and set the *Security Fabric role* to *Serve as Fabric Root*.
  - c. Enter a *Fabric name*, such as *Office-Security-Fabric*.
  - d. Ensure *Allow other Security Fabric devices to join* is enabled and add *port10* and *port11*.
  - e. Click *OK*.
3. Configure the FortiAnalyzer logging settings:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
  - b. Select the *Settings* tab, select the *FortiAnalyzer* tab, and set the *Status* to *Enabled*.
  - c. Enter the FortiAnalyzer IP in the *Server* field (*192.168.65.10*). The *Upload option* is automatically set to *Real Time*.
  - d. Click *Refresh*.

A warning message indicates that the FortiGate is not authorized on the FortiAnalyzer. The authorization is configured in a later step on the FortiAnalyzer.
  - e. Click *OK*. The FortiAnalyzer serial number is verified.
4. Create the address objects to use in the firewall policies:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*.
    - Set *Name* to *FAZ-addr*.
    - Set *Type* to *Subnet*.
    - Set *Subnet/IP Range* to *192.168.65.10/32*.
    - Set *Interface* to *any*.
  - c. Click *OK*.
  - d. Click *Create New*.
    - Set *Name* to *Accounting*.
    - Set *Type* to *Subnet*.
    - Set *Subnet/IP Range* to *192.168.10.10/32*.
    - Set *Interface* to *any*.
  - e. Click *OK*.
5. Create a policy to allow the downstream FortiGate (Accounting) to access the FortiAnalyzer:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
    - Set the *Name* to *Accounting-to-FAZ*.
    - Set *srcintf* to *port10*.
    - Set *dstintf* to *port16*.
    - Set *srcaddr* to *Accounting-addr*.
    - Set *dstaddr* to *FAZ-addr*.
    - Set *Action* to *Accept*.
    - Set *Schedule* to *Always*.

- Set *Service* to *All*.
  - Enable *NAT*.
  - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.
- b. Click *OK*.
6. Create a policy to allow the two downstream FortiGates (Marketing and Sales) to access the FortiAnalyzer:
- a. In the root FortiGate (Edge), go to *Policy & Objects > Addresses* and click *Create New*.
- Set *Name* to *Marketing-addr*.
  - Set *Type* to *Subnet*.
  - Set *Subnet/IP Range* to *192.168.200.10/32*.
  - Set *Interface* to *any*.
- b. Click *OK*.
- c. In the root FortiGate (Edge), go to *Policy & Objects > Firewall Policy* and click *Create New*.
- Set *Name* to *Marketing-to-FAZ*.
  - Set *srcintf* to *port11*.
  - Set *dstintf* to *port16*.
  - Set *srcaddr* to *Marketing-addr*.
  - Set *dstaddr* to *FAZ-addr*.
  - Set *Action* to *Accept*.
  - Set *Schedule* to *Always*.
  - Set *Service* to *All*.
  - Enable *NAT*.
  - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.
- d. Click *OK*.

### To configure the downstream FortiGate (Accounting):

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit interface *wan1*:
    - Set *Role* to *WAN*.
    - For the interface connected to root, set the *IP/Network Mask* to *192.168.10.10/255.255.255.0*
2. Configure the default static route to connect to the root FortiGate (Edge):
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *wan1*.
    - Set *Gateway Address* to *192.168.10.2*.
  - b. Click *OK*.
3. Configure the Security Fabric:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.  
FortiAnalyzer automatically enables logging. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Accounting) connects to the root FortiGate (Edge).
  - c. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.10.2* set in the previous step.
  - d. Disable *Allow other Security Fabric devices to join*, because there is no downstream FortiGate connecting to it.
  - e. Click *OK*.

**To configure the downstream FortiGate (Marketing):**

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit *port12*:
    - Set *Role* to *LAN*.
    - For the interface connected to the downstream FortiGate (Sales), set the *IP/Network Mask* to *192.168.135.11/255.255.255.0*.
  - c. Edit *wan1*:
    - Set *Role* to *WAN*.
    - For the interface connected to the root FortiGate (Edge), set the *IP/Network Mask* to *192.168.200.10/255.255.255.0*.
2. Configure the default static route to connect to the root FortiGate (Edge):
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *wan1*.
    - Set *Gateway Address* to *192.168.200.2*.
  - b. Click *OK*.
3. Configure the Security Fabric:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.

FortiAnalyzer automatically enables logging. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Marketing) connects to the root FortiGate (Edge).
  - c. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.200.2* set in the previous step.
  - d. Enable *Allow other Security Fabric devices to join* and add *port12*.
  - e. Click *OK*.
4. Create the address objects to use in the firewall policies:
  - a. Go to *Policy & Objects > Addresses* and click *Create New*.
    - Set *Name* to *FAZ-addr*.
    - Set *Type* to *Subnet*.
    - Set *Subnet/IP Range* to *192.168.65.10/32*.
    - Set *Interface* to *any*.
  - b. Click *OK*.
  - c. Click *Create New*.
    - Set *Name* to *Sales-addr*.
    - Set *Type* to *Subnet*.
    - Set *Subnet/IP Range* to *192.168.135.10/32*.
    - Set *Interface* to *any*.
  - d. Click *OK*.
5. Create a policy to allow another downstream FortiGate (Sales) going through FortiGate (Marketing) to access the FortiAnalyzer:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
    - Set *Name* to *Sales-to-FAZ*.
    - Set *srcintf* to *port12*.
    - Set *dstintf* to *wan1*.

- Set *srcaddr* to *Sales-addr*.
  - Set *dstaddr* to *FAZ-addr*.
  - Set *Action* to *Accept*.
  - Set *Schedule* to *Always*.
  - Set *Service* to *All*.
  - Enable *NAT*.
  - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.
- b. Click **OK**.

### To configure the downstream FortiGate (Accounting):

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit interface *wan1*:
    - Set *Role* to *WAN*.
    - For the interface connected to root, set the *IP/Network Mask* to *192.168.10.10/255.255.255.0*
2. Configure the default static route to connect to the root FortiGate (Edge):
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *wan1*.
    - Set *Gateway Address* to *192.168.10.2*.
  - b. Click **OK**.
3. Configure the Security Fabric:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.

FortiAnalyzer automatically enables logging. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Accounting) connects to the root FortiGate (Edge).
  - c. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.10.2* set in the previous step.
  - d. Disable *Allow other Security Fabric devices to join*, because there is no downstream FortiGate connecting to it.
  - e. Click **OK**.

### To configure the downstream FortiGate (Sales):

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit *wan2*:
    - Set *Role* to *WAN*.
    - For the interface connected to the upstream FortiGate (Marketing), set the *IP/Network Mask* to *192.168.135.10/255.255.255.0*.
2. Configure the default static route to connect to the upstream FortiGate (Marketing):
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *wan2*.
    - Set *Gateway Address* to *192.168.135.11*.
  - b. Click **OK**.



**3. Configure the Security Fabric:**

- a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
- b. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.  
FortiAnalyzer automatically enables logging. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Sales) connects to the root FortiGate (Edge).
- c. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.135.11* set in the previous step.
- d. Disable *Allow other Security Fabric devices to join*, because there is no downstream FortiGate connecting to it.
- e. Click *OK*.

**To authorize downstream FortiGates (Accounting, Marketing, and Sales) on the root FortiGate (Edge):**


1. In the root FortiGate (Edge), go to *System > Fabric Management*.  
The table highlights two connected FortiGates with their serial numbers that are unauthorized.
2. Select the unauthorized device and click *Authorization > Authorize*.  
After they are authorized, the two downstream FortiGates (Accounting and Marketing) appear in the *Security Fabric* widget. This means that the two downstream FortiGates (Accounting and Marketing) have successfully joined the Security Fabric.
3. The table now highlights the Sales FortiGate with the serial number that is connected to the downstream Marketing FortiGate that is unauthorized.
4. Select the highlighted FortiGate and click *Authorization > Authorize*.  
After it is authorized, the downstream FortiGate (Sales) appears in the *Topology* tree in the *Security Fabric* widget. This means that the downstream FortiGates (Sales) has successfully joined the Security Fabric.

**To use FortiAnalyzer to authorize all the Security Fabric FortiGates:**


1. Authorize all the Security Fabric FortiGates on the FortiAnalyzer side:
  - a. On the FortiAnalyzer, go to *System Settings > Network > All Interfaces*.
  - b. Edit *port1* and set *IP Address/Netmask* to *192.168.65.10/255.255.255.0*.
  - c. Go to *Device Manager > Unauthorized*. All of the FortiGates are listed as unauthorized.
    - i. Select all the FortiGates and select *Authorize*. The FortiGates are now listed as authorized.  
After a moment, a warning icon appears beside the root FortiGate (Edge) because the FortiAnalyzer needs administrative access to the root FortiGate (Edge) in the Security Fabric.
    - ii. Click the warning icon and enter the admin username and password of the root FortiGate (Edge).
2. Check FortiAnalyzer status on all the Security Fabric FortiGates:
  - a. On each FortiGate, go to *Security Fabric > Fabric Connectors* and double-click the *FortiAnalyzer Logging* card.
  - b. Check that *Storage usage* information is shown.

**To check Security Fabric deployment result:**


1. On FortiGate (Edge), go to *Dashboard > Status*.  
The *Security Fabric* widget displays all the FortiGates in the Security Fabric.

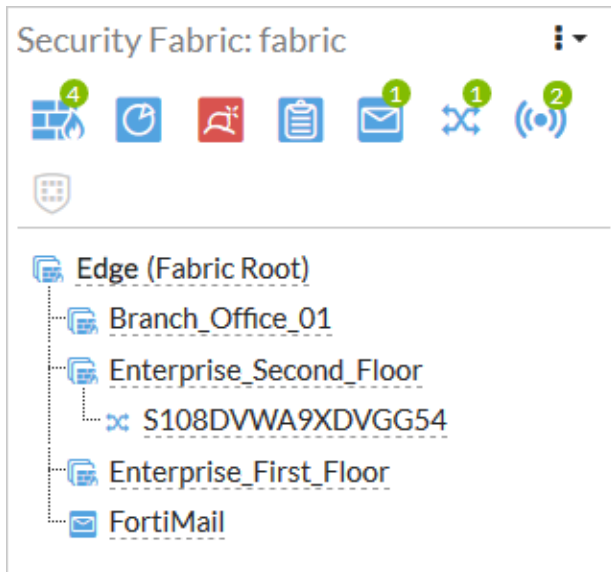

2. On FortiGate (Edge), go to *Security Fabric > Physical Topology*.  
This page shows a visualization of access layer devices in the Security Fabric.

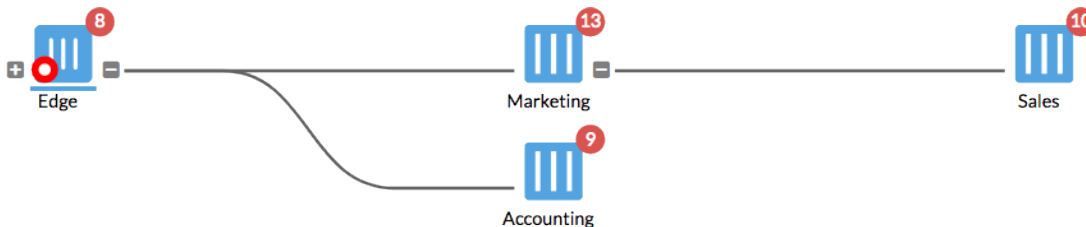

3. On FortiGate (Edge), go to *Security Fabric > Physical Topology*.  
This dashboard shows information about the interfaces of each device in the Security Fabric.

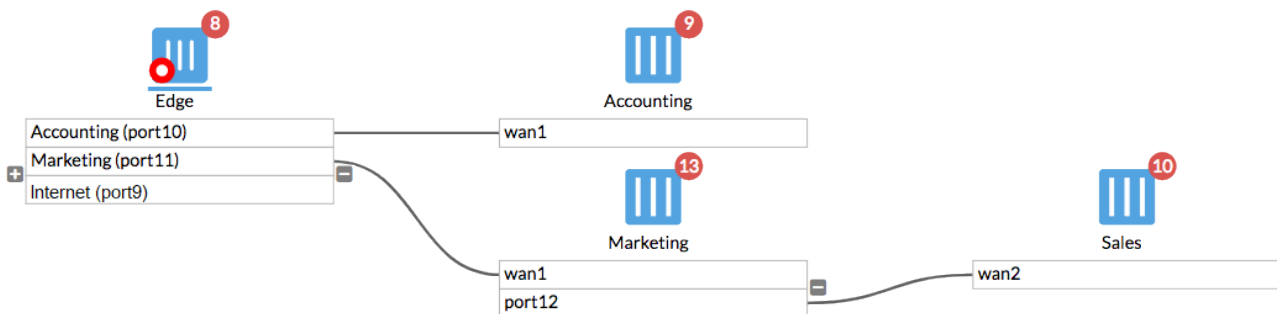**To run diagnostics:**

1. To view the downstream FortiGate pending authorization on the root FortiGate :

```
Edge # diagnose sys csf authorization pending-list
Serial          IP Address      HA-Members      Path
```

```
-----
FG201ETK18902514      0.0.0.0      FG3H1E5818900718:FG201ETK18902514
```

**2. To view the downstream FortiGates after they join Security Fabric on the root or first level downstream FortiGate:**

```
Edge # diagnose sys csf downstream
1:      FG201ETK18902514 (192.168.200.10) Management-IP: 0.0.0.0 Management-port:0
parent: FG3H1E5818900718
        path:FG3H1E5818900718:FG201ETK18902514
        data received: Y downstream intf:wan1 upstream intf:port11 admin-port:443
        authorizer:FG3H1E5818900718
2:      FGT81ETK18002246 (192.168.10.10) Management-IP: 0.0.0.0 Management-port:0 parent:
FG3H1E5818900718
        path:FG3H1E5818900718:FGT81ETK18002246
        data received: Y downstream intf:wan1 upstream intf:port10 admin-port:443
        authorizer:FG3H1E5818900718
3:      FG101ETK18002187 (192.168.135.10) Management-IP: 0.0.0.0 Management-port:0
parent: FG201ETK18902514
        path:FG3H1E5818900718:FG201ETK18902514:FG101ETK18002187
        data received: Y downstream intf:wan2 upstream intf:port12 admin-port:443
        authorizer:FG3H1E5818900718
```


**3. To view the upstream FortiGate after the downstream FortiGate joins Security Fabric:**

```
Marketing # diagnose sys csf upstream
Upstream Information:
Serial Number:FG3H1E5818900718
IP:192.168.200.2
Connecting interface:wan1
Connection status:Authorized
```


## Deploying the Security Fabric in a multi-VDOM environment

A Security Fabric can be enabled in multi-VDOM environments. This allows access to all of the Security Fabric features, including automation, security rating, and topologies, across the VDOM deployment.

- Users can navigate to downstream FortiGate devices and VDOMs directly from the root FortiGate using the Fabric selection menu.

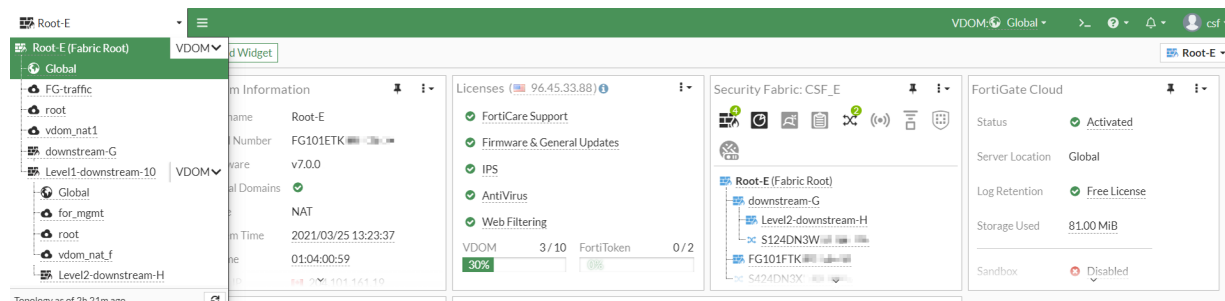

- The logical topology shows all of the configured VDOMs.

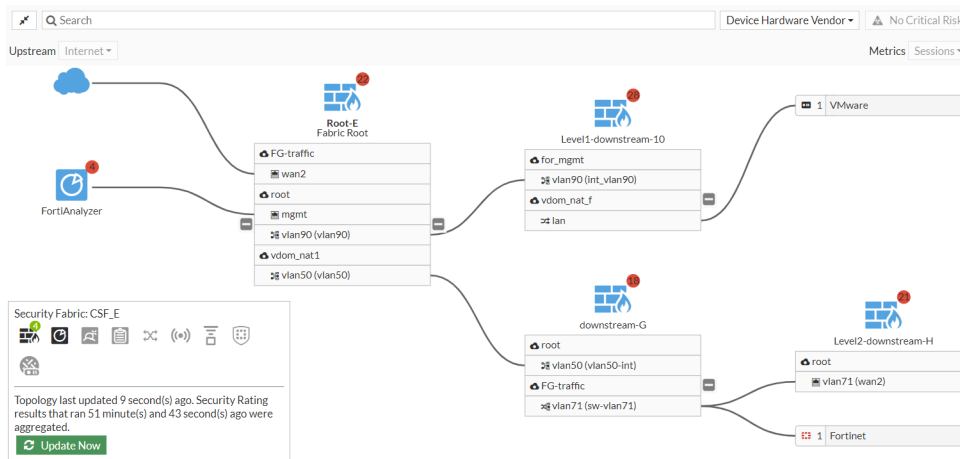


- Security rating reports include results for all of the configured VDOMs as well the entire Fabric.



Downstream FortiGate devices must connect to the upstream FortiGate from its management VDOM.

## Topology

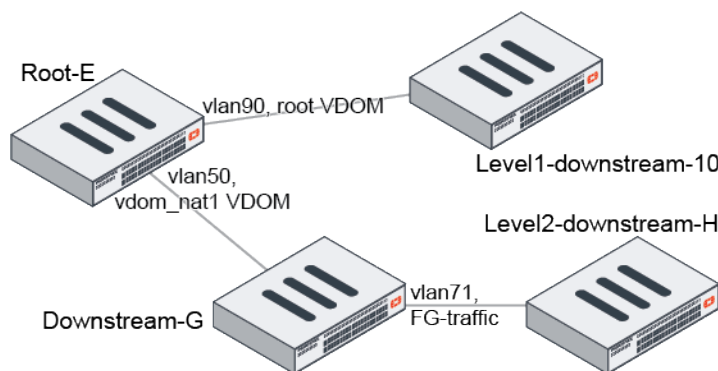

In this topology, there is a root FortiGate with three FortiGates connected through two different VDOMs. The root FortiGate is able to manage all devices running in multi-VDOM mode.

This example assumes multi-VDOM mode is already configured on each FortiGate, and that FortiAnalyzer logging is configured on the root FortiGate (see [Configuring FortiAnalyzer on page 2593](#) and [Configuring the root FortiGate and downstream FortiGates on page 2583](#) for more details).

### To enable multi-VDOM mode:

```
config system global
    set vdom-mode multi-vdom
end
```

## Device configurations

### Root FortiGate (Root-E)

The Security Fabric is enabled, and configured so that downstream interfaces from all VDOMs can allow other Security Fabric devices to join.

#### To configure Root-E in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. Select the *Settings* tab, and set the *Security Fabric role* to *Serve as Fabric Root*.
3. Enable *Allow other Security Fabric devices to join* and click the + to add the interfaces (vlan50 and vlan90) from the vdom\_nat1 and root VDOMs.

The screenshot shows the 'Security Fabric Settings' window with the 'Settings' tab selected. The 'Security Fabric role' is set to 'Serve as Fabric Root'. The 'Allow other Security Fabric devices to join' toggle is enabled. Two interfaces, 'vlan50 (vlan50)' and 'vlan90 (vlan90)', are listed in the 'Fabric name' field. The 'Fabric name' is 'CSF\_E'. The 'Device authorization' is set to 'None'. The 'FortiCloud account enforcement' and 'Allow downstream device REST API access' toggles are disabled. The 'Fabric synchronization' toggle is enabled. The 'SAML Single Sign-On' toggle is disabled. The 'Management IP/FQDN' is set to '172.16.116.236'. The 'Management port' is set to 'Use Admin Port'. The 'OK' button is highlighted.

4. Configure the other settings as needed.
5. Click **OK**.

#### To configure Root-E in the CLI:

1. Enable the Security Fabric:

```
config system csf
    set status enable
    set group-name "CSF_E"
end
```

2. Configure the interfaces:

```
config system interface
    edit "vlan50"
        set vdom "vdom_nat1"
        ...
        set allowaccess ping https ssh http fgfm fabric
        ...
    next
    edit "vlan90"
```

```


set vdom "root"
...
set allowaccess ping https ssh http fgfm fabric
...
next
end

```

## Downstream FortiGate 1 (Downstream-G)

### To configure Downstream-G in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.
3. Enter the *Upstream FortiGate IP*, which is the IP of the root FortiGate vdom\_nat1 interface (192.168.5.5). Downstream-G must use the interface from the management VDOM to connect to the upstream FortiGate IP.
4. Enable *Allow other Security Fabric devices to join* and click the + to add the downstream interface (sw-vlan71) from the FG-traffic VDOM.

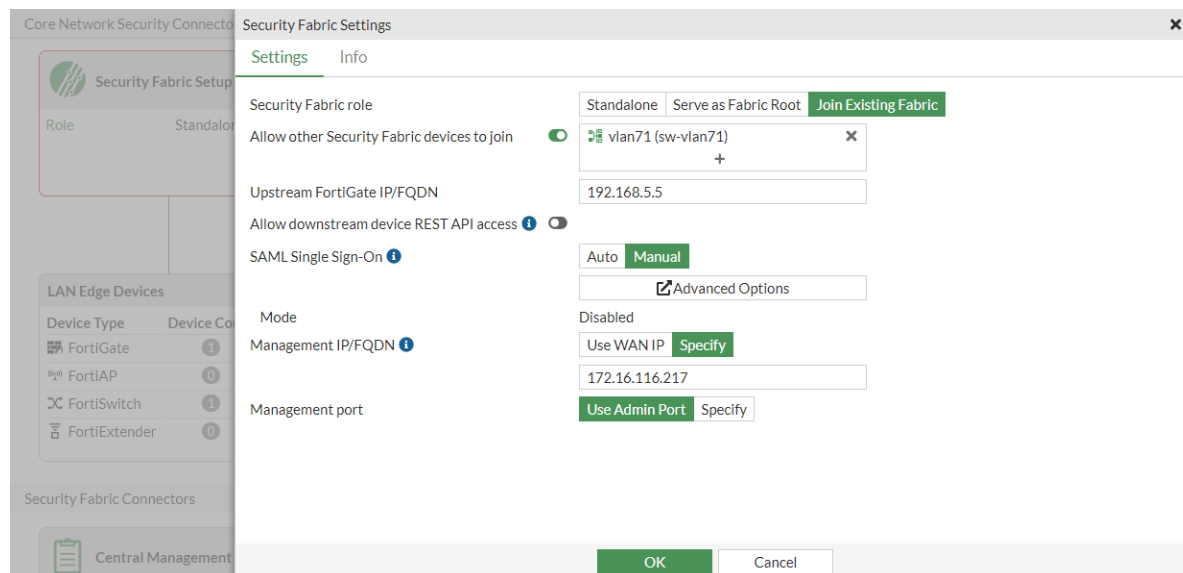

5. Configure the other settings as needed.
6. Click **OK**.

### To configure Downstream-G in the CLI:

1. Enable the Security Fabric:

```

config system csf
    set status enable
    set upstream-ip 192.168.5.5
end

```

2. Configure the interfaces:

```

config system interface
    edit "sw-vlan71"
        set vdom "FG-traffic"
    ...
end

```

```

        set allowaccess ping https ssh http fgfm fabric
    ...
next
end

```

## Downstream FortiGate 2 (Level2-downstream-H)

To configure Level2-downstream-H in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.
3. Enter the *Upstream FortiGate IP*, which is the IP of the root VDOM on Downstream-G (192.168.71.7).

The screenshot shows the 'Security Fabric Settings' dialog box in the FortiGate GUI. The 'Settings' tab is selected. The 'Security Fabric role' is set to 'Join Existing Fabric'. The 'Upstream FortiGate IP/FQDN' is set to '192.168.71.7'. The 'Allow downstream device REST API access' is set to 'Off'. The 'SAML Single Sign-On' is set to 'Auto'. The 'Mode' is set to 'Disabled'. The 'Management IP/FQDN' is set to '172.16.116.226'. The 'Management port' is set to 'Use Admin Port'. The 'OK' button is highlighted.

4. Configure the other settings as needed.
5. Click **OK**.

To configure Level2-downstream-H in the CLI:

```

config system csf
    set status enable
    set upstream-ip 192.168.71.7
end

```

## Downstream FortiGate 3 (Level1-downstream-10)

To configure Level1-downstream-10 in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. In the *Settings* tab, set the *Security Fabric role* to *Join Existing Fabric*.

3. Enter the *Upstream FortiGate IP*, which is the IP of the root VDOM on Root-E (192.168.9.5).

Core Network Security Connecto Security Fabric Settings

Settings Info

Security Fabric Setup

Role Standalone

Security Fabric role Standalone Serve as Fabric Root Join Existing Fabric

Allow other Security Fabric devices to join

Upstream FortiGate IP/FQDN 192.168.9.5

Allow downstream device REST API access

SAML Single Sign-On Auto Manual Advanced Options

Mode Pending

Default login page Normal Single Sign-On

Default admin profile super\_admin

Management IP/FQDN Use WAN IP Specify 172.16.116.204

Management port Use Admin Port Specify

OK Cancel

4. Configure the other settings as needed.
5. Click **OK**.

#### To configure Level1-downstream-10 in the CLI:

```
config system csf
    set status enable
    set upstream-ip 192.168.9.5
end
```

## Device authorization and verification

#### To authorize the downstream devices on the root FortiGate:

1. On Root-E, go to *System > Fabric Management*.
2. Select the unauthorized device and click *Authorization > Authorize* for each downstream FortiGate. Once all the devices are authorized, the physical topology page shows the root and downstream FortiGates. The logical topology page shows the root and downstream FortiGates connected to interfaces in their corresponding VDOMs.

## Other Security Fabric topics

The following topics provide instructions on configuring other Security Fabric use cases:

- [Synchronizing objects across the Security Fabric on page 2691](#)
- [Group address objects synchronized from FortiManager on page 2697](#)
- [Security Fabric over IPsec VPN on page 2699](#)
- [Leveraging LLDP to simplify Security Fabric negotiation on page 2705](#)



## Synchronizing objects across the Security Fabric

When the Security Fabric is enabled, various objects such as addresses, services, and schedules are synced from the upstream FortiGate to all downstream devices by default. FortiOS has the following settings for object synchronization across the Security Fabric:

- Set object synchronization (`fabric-object-unification`) to `default` or `local` on a downstream device.
- Set a per object option to toggle whether the specific Fabric object will be synchronized or not. After upgrading from 6.4.3, this option is disabled for supported Fabric objects. The synchronized Fabric objects are kept as locally created objects on downstream FortiGates.
- Define the number of task workers to handle synchronizations.

The firewall object synchronization wizard helps identify objects that are not synchronized and resolves any conflicts. A warning message appears in the topology tree if there is a conflict.

### Summary of CLI commands

#### To configure object synchronization:

```
config system csf
    set fabric-object-unification {default | local}
    set configuration-sync {default | local}
    set fabric-workers <integer>
end
```

Parameter	Description
<code>fabric-object-unification</code>	<i>default:</i> Global CMDB objects will be synchronized in the Security Fabric. <i>local:</i> Global CMDB objects will not be synchronized to and from this device. This command is available on the root FortiGate. If set to <code>local</code> , the device does not synchronize objects from the root, but will send the synchronized objects downstream.
<code>configuration-sync</code>	<i>default:</i> Synchronize configuration for FortiAnalyzer, FortiSandbox, and Central Management to root node. <i>local:</i> Do not synchronize configuration with root node. If downstream FortiGates are set to <code>local</code> , the synchronized objects from the root to downstream are not applied locally. However, the downstream FortiGate will send the configuration to lower FortiGates.
<code>fabric-workers</code>	Define how many task worker process are created to handle synchronizations (1-4, default = 2). The worker processes dies if there is no task to perform after 60 seconds.


The per object setting can be configured on the root FortiGate as follows:

```
config firewall <object>
    edit <name>
        set fabric-object {enable | disable}
    next
end
```

Where:

- `<object>` is one of the following: `address`, `address6`, `addrgrp`, `addrgrp6`, `service`, `category`, `service custom`, `service group`, `schedule group`, `schedule onetime`, or `schedule recurring`.
- Enabling `fabric-object` sets the object as a Security Fabric-wide global object that is synchronized to downstream FortiGates.
- Disabling `fabric-object` sets the object as local to this Security Fabric member.
- If a device in the Fabric is in multi-VDOM mode, the GUI will not display the Fabric synchronization option. Even if this is enabled in the CLI, the object will not be synchronized to any downstream devices.

## Sample topology

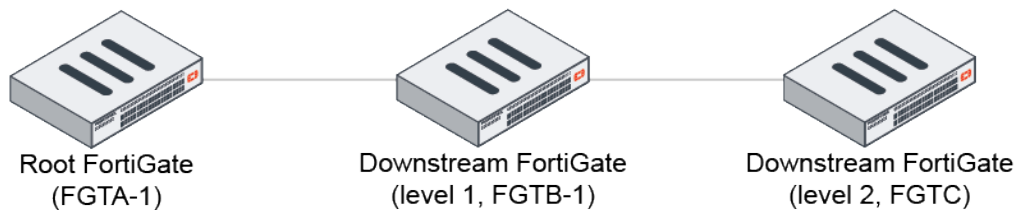

In this Security Fabric, the root FortiGate (FGTA-1) has `fabric-object-unification` set to `default` so the Fabric objects can be synchronized to the downstream FortiGate. The level 1 downstream FortiGate (FGTB-1) has `configuration-sync` set to `local`, so it will not apply the synchronized objects locally. The level 2 downstream FortiGate (FGTC) has `configuration-sync` set to `default`, so it will apply the synchronized objects locally.

In this example, firewall addresses and address groups are used. Other supported Fabric objects have the same behaviors. The following use cases illustrate common synchronization scenarios:

- If no conflicts exist, firewall addresses and address groups can be synchronized to downstream FortiGates ([see example below](#)).
- If a conflict exists between the root and downstream FortiGates, it can be resolved with the conflict resolution wizard. After the conflict is resolved, the firewall addresses and address groups can be synchronized to downstream FortiGates ([see example below](#)).
- If `set fabric-object` (*Fabric synchronization* option in the GUI) is disabled for firewall addresses and address groups on the root FortiGate, they will not be synchronized to downstream FortiGates ([see example below](#)).

## To configure the FortiGates used in this example:

```

FGTA-1 # config system csf
    set status enable
    set group-name "fabric"
    set fabric-object-unification default
    ...
end

FGTB-1 # config system csf
    set status enable
    set upstream-ip 10.2.200.1
    set configuration-sync local
    ...
end

FGTC # config system csf
    set status enable
    set upstream-ip 192.168.7.2
    set configuration-sync default
  
```

```
...  
end
```

### To synchronize a firewall address and address group in the Security Fabric:

#### 1. Configure the firewall address on the root FortiGate:

```
FGTA-1 # config firewall address  
  edit "add_subnet_1"  
    set fabric-object enable  
    set subnet 22.22.22.0 255.255.255.0  
  next  
end
```

#### 2. Configure the address group on the root FortiGate:

```
FGTA-1 # config firewall addrgrp  
  edit "group_subnet_1"  
    set member "add_subnet_1"  
    set fabric-object enable  
  next  
end
```

#### 3. Check the firewall address and address group on the downstream FortiGates:

```
FGTB-1 # show firewall address add_subnet_1  
entry is not found in table  
  
FGTB-1 # show firewall addrgrp group_subnet_1  
entry is not found in table
```

The synchronized objects are not applied locally on this FortiGate because `configuration-sync` is set to `local`.

```
FGTC # show firewall address add_subnet_1  
config firewall address  
  edit "add_subnet_1"  
    set uuid 378a8094-34cb-51eb-ce40-097f298fcfdc  
    set fabric-object enable  
    set subnet 22.22.22.0 255.255.255.0  
  next  
end  
  
FGTC # show firewall addrgrp group_subnet_1  
config firewall addrgrp  
  edit "group_subnet_1"  
    set uuid 4d7a8a52-34cb-51eb-fce7-d93f76915319  
    set member "add_subnet_1"  
    set color 19  
    set fabric-object enable  
  next  
end
```

The objects are synchronized on this FortiGate because `configuration-sync` is set to `default`.

**To resolve a firewall address and address group conflict in the Security Fabric:**

1. On FGTC, create a firewall address:

- a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
- b. Configure the following:

Name	sync_add_1
IP/Netmask	33.33.33.0 255.255.255.0

- c. Click OK.

2. On FGTA-1 (Fabric root), create the firewall address with same name but a different subnet:

- a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
- b. Configure the following:

Name	sync_add_1
IP/Netmask	11.11.11.0 255.255.255.0
Fabric synchronization	Enable

- c. Click OK.


3. Add the address to a different address group than what is configured on FGTC:

- a. Go to *Policy & Objects > Addresses* and click *Create New > Address Group*.
- b. Configure the following:

Name	sync_group4
Members	sync_add_1
Fabric synchronization	Enable

- c. Click OK.

4. Open the notification center drop dropdown. There is a message that *1 Firewall object is conflict with other FortiGates in the fabric*.

 1 Firewall object is in conflict with other FortiGates in the fabric.

## 5. Resolve the conflict:

- Click the message in the notification center drop dropdown. The *Firewall Object Synchronization* pane opens.
- Click *Rename All Objects*. The conflicted object will be renamed on the downstream FortiGate.

The screenshot shows the **Firewall Object Synchronization** pane. A blue notification box at the top states: "The following objects require manual intervention in order to synchronize them with the fabric. Click 'Rename All Objects' to automatically resolve all conflicts by renaming them." Below this, the **Strategy** is set to **Automatic**, and **Automatically rename on** is set to **Downstream FortiGates**. A **Rename All Objects** button is visible. The table below shows the conflict:

Fabric Object	Status	Conflicting FortiGate
Address 1		
sync_add_1	Content mismatch	FGTC

A **Close** button is at the bottom right of the pane.

- The conflict is resolved. Click *Close* to exit the *Firewall Object Synchronization* pane.

The screenshot shows the **Firewall Object Synchronization** pane after the conflict has been resolved. The notification box is still present. The **Strategy** remains **Automatic**, and **Automatically rename on** is still **Downstream FortiGates**. The table now shows the conflict as resolved:

Fabric Object	Status	Conflicting FortiGate
Address 1		
sync_add_1_FGTC	Resolved	FGTC

The **Close** button is still at the bottom right.

## 6. Verify the results on the downstream FortiGates:

- On FGTC-1, go to *Policy & Objects > Addresses*.
- Search for *sync\_add\_1* and *sync\_group4*. No results are found. The synchronized objects are not applied locally on this FortiGate because `configuration-sync` is set to `local`.

The screenshot shows the **Addresses** page in the FortiGate web interface. The search bar contains `sync_add_1`. Below the search bar, a table shows the results:

Name	Details	Interface	Type	Ref.
No results				

At the bottom, a status bar shows "0 Security Rating Issues" and "Updated: 10:29:03".

+ Create New

Edit

Clone

Delete

sync\_group\_4

✕

🔍

Name	Details	Interface	Type	Ref.
No results				

0 Security Rating Issues

0/34 | Updated: 10:29:03

🔄

- c. On FGTC, go to *Policy & Objects > Addresses*.
- d. Search for *sync\_add\_1*. The original firewall address *sync\_add\_1* was renamed to *sync\_add\_1\_FGTC* by resolving the conflict on FGTA-1. The address *sync\_add\_1* and address group *sync\_group4* are synchronized from FGTA-1.

+ Create New

Edit

Clone

Delete

sync\_add\_1

Name	Details	Interface	Type	Ref.
IP Range/Subnet 2/17				
sync_add_1	11.11.11.0/24		Address	1
sync_add_1_FGTC	33.33.33.0/24		Address	0
Address Group 1/6				
sync_group4	sync_add_1		Address Group	0

0 Security Rating Issues

3/34 | Updated: 10:19:56

### To disable Fabric synchronization on the root FortiGate in the GUI:

1. On FGTA-1, create a firewall address:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the following:

Name	add_subnet_3
IP/Netmask	33.33.33.0 255.255.255.0
Fabric synchronization	Disable


- c. Click *OK*.

2. Create the firewall address group and add the address:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address Group*.
  - b. Configure the following:


Name	group_subnet_3
Members	add_subnet_3
Fabric synchronization	Disable

- c. Click *OK*.

3. On FGTA-1, go to *Policy & Objects > Addresses* and search for *subnet\_3*. No results are found because Fabric synchronization is disabled on the root FortiGate (FGTA-1).

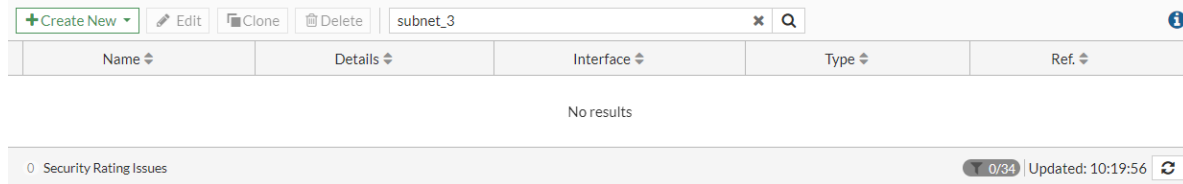

4. On FGTC, go to *Policy & Objects > Addresses* and search for *subnet\_3*. No results are found because Fabric synchronization is disabled on the root FortiGate (FGTA-1).

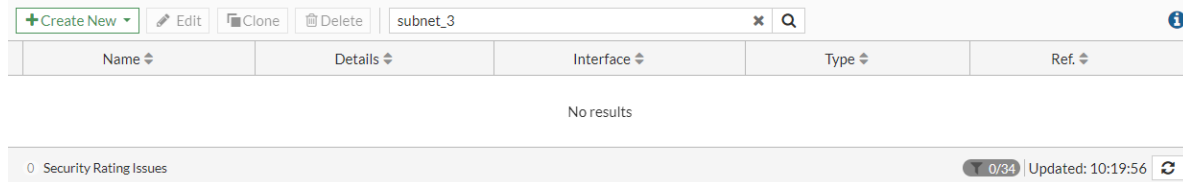

### To disable Fabric synchronization on the root FortiGate in the CLI:

1. Configure the firewall address on the root FortiGate:

```
FGTA-1 # config firewall address
edit "add_subnet_3"
    set subnet 33.33.33.0 255.255.255.0
    set fabric-object disable
next
end
```

2. Configure the address group on the root FortiGate:

```
FGTA-1 # config firewall addrgrp
edit "group_subnet_3"
    set member "add_subnet_3"
    set fabric-object disable
next
end
```

3. Check the firewall address and address group on the downstream FortiGates:

```
FGTB-1 # show firewall address add_subnet_3
entry is not found in table

FGTB-1 # show firewall addrgrp group_subnet_3
entry is not found in table

FGTC # show firewall address add_subnet_3
entry is not found in table

FGTC # show firewall addrgrp group_subnet_3
entry is not found in table
```

The objects are not synchronized from the root FortiGate (FGTA-1) because the `fabric-object` setting is disabled.

## Group address objects synchronized from FortiManager

Address objects from external connectors that are learned by FortiManager are synchronized to FortiGate. These objects can be grouped together with the FortiGate CLI to simplify selecting connector objects in the FortiGate GUI.

Multiple groups can be created.

This option is only available for objects that are synchronized from FortiManager.

### To add an object to a connector group:


```
config user adgrp
  edit <object_name>
    set server-name "FortiManager"
    set connector-source <group_name>
  next
end
```

### Example

In this example, objects learned by the FortiManager from an Aruba ClearPass device are synchronized to the FortiGate. Some of the objects are then added to a group called *ClearPass* to make them easier to find in the object list when creating a firewall policy.



Prior to being grouped, the synchronized objects are listed under the FortiManager heading in the object lists.

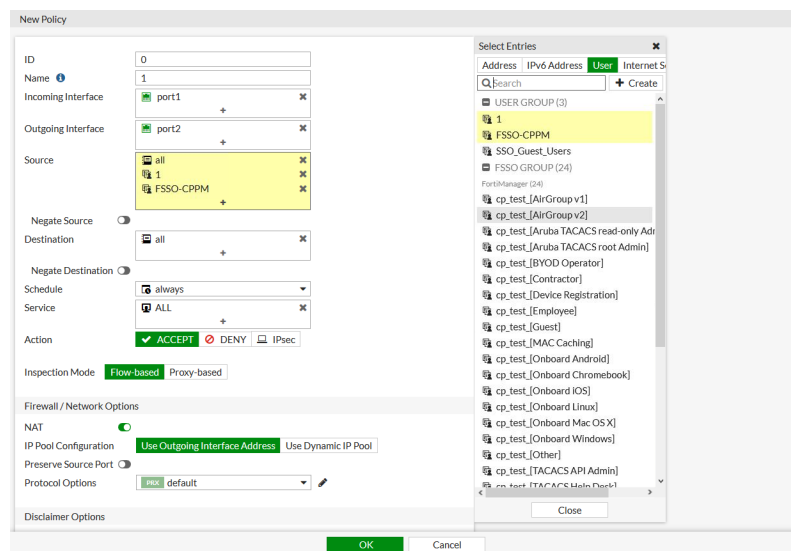

### To add some of the objects to a group:

```
config user adgrp
  edit "cp_test_FSSOROLE"
    set server-name "FortiManager"
    set connector-source "ClearPass"
  next
  edit "cp_test_[AirGroup v2]"
```




```

set server-name "FortiManager"
set connector-source "ClearPass"
next
end

```

The objects are now listed under the *ClearPass* heading.

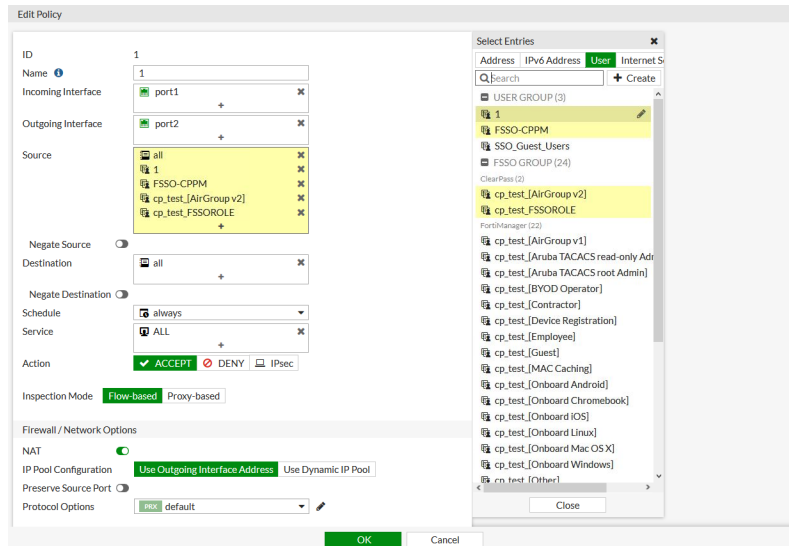


## Security Fabric over IPsec VPN

This is an example of configuring Security Fabric over IPsec VPN.

### Sample topology

This sample topology shows a downstream FortiGate (HQ2) connected to the root FortiGate (HQ1) over IPsec VPN to join Security Fabric.

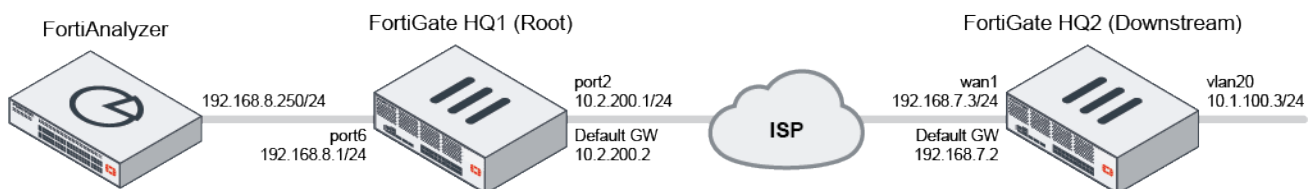

### Sample configuration

To configure the root FortiGate (HQ1):

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit *port2*:
    - Set *Role* to *WAN*.
    - For the interface connected to the internet, set the *IP/Network Mask* to *10.2.200.1/255.255.255.0*

- c. Edit *port6*:
    - Set *Role* to *DMZ*.
    - For the interface connected to FortiAnalyzer, set the *IP/Network Mask* to *192.168.8.250/255.255.255.0*
2. Configure the static route to connect to the internet:
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *port2*.
    - Set *Gateway Address* to *10.2.200.2*.
  - b. Click *OK*.
3. Configure the IPsec VPN:
  - a. Go to *VPN > IPsec Wizard*.
    - Set *Name* to *To-HQ2*.
    - Set *Template Type* to *Custom*.
    - Click *Next*.
    - Set *Authentication* to *Method*.
    - Set *Pre-shared Key* to *123456*.
  - b. Leave all other fields in their default values and click *OK*.
4. Configure the IPsec VPN interface IP address which will be used to form Security Fabric:
  - a. Go to *Network > Interfaces*.
  - b. Edit *To-HQ2*:
    - Set *Role* to *LAN*.
    - Set the *IP/Network Mask* to *10.10.10.1/255.255.255.255*.
    - Set *Remote IP/Network Mask* to *10.10.10.3/255.255.255.0*.
5. Configure the IPsec VPN local and remote subnets:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*
    - Set *Name* to *To-HQ2\_remote\_subnet\_2*.
    - Set *Type* to *Subnet*.
    - Set *IP/Network Mask* to *10.10.10.3/32*.
  - c. Click *OK*.
  - d. Click *Create New*
    - Set *Name* to *To-HQ2\_local\_subnet\_1*.
    - Set *Type* to *Subnet*.
    - Set *IP/Network Mask* to *192.168.8.0/24*.
  - e. Click *OK*.
  - f. Click *Create New*
    - Set *Name* to *To-HQ2\_remote\_subnet\_1*.
    - Set *Type* to *Subnet*.
    - Set *IP/Network Mask* to *10.1.100.0/24*.
  - g. Click *OK*.
6. Configure the IPsec VPN static routes:
  - a. Go to *Network > Static Routes*.
  - b. Click *Create New* or *Create New > IPv4 Static Route*.
    - For *Named Address*, select *Type* and select *To-HQ2\_remote\_subnet\_1*.
    - Set *Interface* to *To-HQ2*.

Click OK.

- c. Click *Create New* or *Create New > IPv4 Static Route*.
  - For *Named Address*, select *Type* and select *To-HQ2\_remote\_subnet\_1*.
  - Set *Interface* to *Blackhole*.
  - Set *Administrative Distance* to *254*.
- d. Click OK.

7. Configure the IPsec VPN policies:

- a. Go to *Policy & Objects > Firewall Policy*
- b. Click *Create New*.
  - Set *Name* to *vpn\_To-HQ2\_local*.
  - Set *Incoming Interface* to *port6*.
  - Set *Outgoing Interface* to *To-HQ2*.
  - Set *Source* to *To-HQ2\_local\_subnet\_1*.
  - Set *Destination* to *To-HQ2\_remote\_subnet\_1*.
  - Set *Schedule* to *Always*.
  - Set *Service* to *All*.
  - Disable *NAT*.
- c. Click OK.
- d. Click *Create New*.
  - Set *Name* to *vpn\_To-HQ2\_remote*.
  - Set *Incoming Interface* to *To-HQ2*.
  - Set *Outgoing Interface* to *port6*.
  - Set *Source* to *To-HQ2\_remote\_subnet\_1, To-HQ2\_remote\_subnet\_2*.
  - Set *Destination* to *To-HQ2\_local\_subnet\_1*.
  - Set *Schedule* to *Always*.
  - Set *Service* to *All*.
  - Enable *NAT*.
  - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.
- e. Click OK.

8. Configure the Security Fabric:

- a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
- b. Select the *Settings* tab, and set the *Security Fabric role* to *Serve as Fabric Root*.
- c. Enter a *Fabric name*, such as *Office-Security-Fabric*.
- d. Ensure *Allow other Security Fabric devices to join* is enabled and add VPN interface *To-HQ2*.
- e. Click OK.

9. Configure the FortiAnalyzer logging settings:

- a. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
- b. Select the *Settings* tab, select the *FortiAnalyzer* tab, and set the *Status* to *Enabled*.
- c. Enter the FortiAnalyzer IP in the *Server* field (*192.168.8.250*). The *Upload option* is automatically set to *Real Time*.
- d. Click *Refresh*. The FortiAnalyzer serial number is verified.
- e. Click OK.

**To configure the downstream FortiGate (HQ2):**

1. Configure the interface:
  - a. Go to *Network > Interfaces*.
  - b. Edit interface *wan1*:
    - Set *Role* to *WAN*.
    - For the interface connected to the internet, set the *IP/Network Mask* to *192.168.7.3/255.255.255.0*.
  - c. Edit interface *vlan20*:
    - Set *Role* to *LAN*.
    - For the interface connected to local endpoint clients, set the *IP/Network Mask* to *10.1.100.3/255.255.255.0*.
2. Configure the static route to connect to the internet:
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - Set *Destination* to *0.0.0.0/0.0.0.0*.
    - Set *Interface* to *wan1*.
    - Set *Gateway Address* to *192.168.7.2*.
  - b. Click *OK*.
3. Configure the IPsec VPN:
  - a. Go to *VPN > IPsec Wizard*.
    - Set *VPN Name* to *To-HQ1*.
    - Set *Template Type* to *Custom*.
    - Click *Next*.
    - In the *Network IP Address*, enter *10.2.200.1*.
    - Set *Interface* to *wan1*.
    - Set *Authentication* to *Method*.
    - Set *Pre-shared Key* to *123456*.
  - b. Leave all other fields in their default values and click *OK*.
4. Configure the IPsec VPN interface IP address which will be used to form Security Fabric:
  - a. Go to *Network > Interfaces*.
  - b. Edit *To-HQ1*:
    - Set *Role* to *WAN*.
    - Set the *IP/Network Mask* to *10.10.10.3/255.255.255.255*.
    - Set *Remote IP/Network Mask* to *10.10.10.1/255.255.255.0.0*.
5. Configure the IPsec VPN local and remote subnets:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*
    - Set *Name* to *To-HQ1\_local\_subnet\_1*.
    - Set *Type* to *Subnet*.
    - Set *IP/Network Mask* to *10.1.100.0/24*.
  - c. Click *OK*.
  - d. Click *Create New*
    - Set *Name* to *To-HQ1\_remote\_subnet\_1*.
    - Set *Type* to *Subnet*.
    - Set *IP/Network Mask* to *192.168.8.0/24*.
  - e. Click *OK*.

6. Configure the IPsec VPN static routes:
  - a. Go to *Network > Static Routes* and click *Create New* or *Create New > IPv4 Static Route*.
    - For *Named Address*, select *Type* and select *To-HQ1\_remote\_subnet\_1*.
    - Set *Interface* to *To-HQ1*.
  - b. Click *OK*.
  - c. Click *Create New* or *Create New > IPv4 Static Route*.
    - For *Named Address*, select *Type* and select *To-HQ1\_remote\_subnet\_1*.
    - Set *Interface* to *Blackhole*.
    - Set *Administrative Distance* to *254*.
  - d. Click *OK*.
7. Configure the IPsec VPN policies:
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
    - Set *Name* to *vpn\_To-HQ1\_local*.
    - Set *Incoming Interface* to *vlan20*.
    - Set *Outgoing Interface* to *To-HQ1*.
    - Set *Source* to *To-HQ1\_local\_subnet\_1*.
    - Set *Destination* to *To-HQ1\_remote\_subnet\_1*.
    - Set *Schedule* to *Always*.
    - Set *Service* to *All*.
    - Disable *NAT*.
  - b. Click *OK*.
  - c. Click *Create New*.
    - Set *Name* to *vpn\_To-HQ1\_remote*.
    - Set *Incoming Interface* to *To-HQ1*.
    - Set *Outgoing Interface* to *vlan20*.
    - Set *Source* to *To-HQ1\_remote\_subnet\_1*.
    - Set *Destination* to *-HQ1\_local\_subnet\_1*.
    - Set *Schedule* to *Always*.
    - Set *Service* to *All*.
    - Disable *NAT*.
  - d. Click *OK*.
8. Configure the Security Fabric:
  - a. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, set the *Security Fabric* role to *Join Existing Fabric*.  
 FortiAnalyzer automatically enables logging. FortiAnalyzer settings will be retrieved when the downstream FortiGate connects to the root FortiGate.
  - c. Set the *Upstream FortiGate IP* to *10.10.10.1*.
  - d. Click *OK*.


#### To authorize the downstream FortiGate (HQ2) on the root FortiGate (HQ1):

1. In the root FortiGate (HQ1), go to *System > Fabric Management*.  
 The table highlights the connected FortiGate with its serial numbers that is unauthorized.
2. Select the unauthorized device and click *Authorization > Authorize*.


After authorization, the downstream FortiGate (HQ2) appears in the *Security Fabric* widget. This means the downstream FortiGate (HQ2) has successfully joined the Security Fabric.

### To check the Security Fabric over IPsec VPN:

1. On the root FortiGate (HQ1), go to *Security Fabric > Physical Topology*.  
The root FortiGate (HQ1) is connected by the downstream FortiGate (HQ2) with VPN icon in the middle.

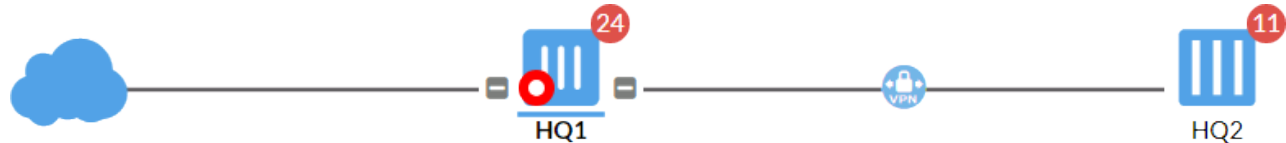

2. On the root FortiGate (HQ1), go to *Security Fabric > Logical Topology*.  
The root FortiGate (HQ1) VPN interface *To-HQ2* is connected by downstream FortiGate (HQ2) VPN interface *To-HQ1* with VPN icon in the middle.

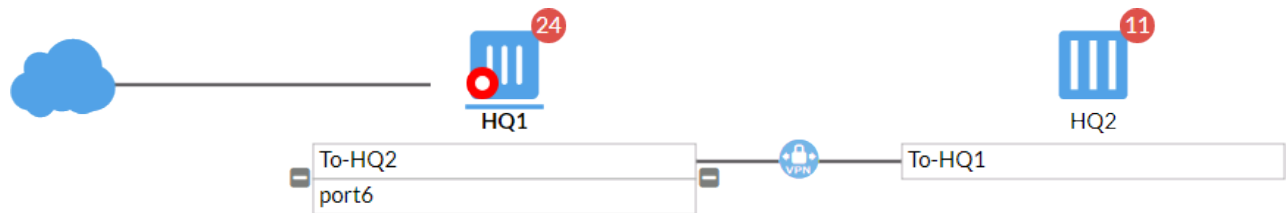

### To run diagnostics:

1. To view the downstream FortiGate pending authorization on root FortiGate (HQ1):

```
HQ1 # diagnose sys csf authorization pending-list
Serial          IP Address      HA-Members
Path
-----
FG101ETK18002187      0.0.0.0
FG3H1E5818900718:FG101ETK18002187
```

2. To view the downstream FortiGate (HQ2) after it joins the Security Fabric:

```
HQ1 # diagnose sys csf downstream
1:      FG101ETK18002187 (10.10.10.3) Management-IP: 0.0.0.0 Management-port:0 parent:
FG3H1E5818900718
      path:FG3H1E5818900718:FG101ETK18002187
      data received: Y downstream intf:To-HQ1 upstream intf:To-HQ2 admin-port:443
      authorizer:FG3H1E5818900718
```


3. To view the root FortiGate (HQ1) on the downstream FortiGate (HQ2) after joining the Security Fabric:

```
HQ2 # diagnose sys csf upstream
Upstream Information:
Serial Number:FG3H1E5818900718
IP:10.10.10.1
Connecting interface:To-HQ1
Connection status:Authorized
```

## Leveraging LLDP to simplify Security Fabric negotiation

LLDP reception is enabled on WAN interfaces, which prompts FortiGate devices that are joining the Security Fabric if the upstream FortiGate asks.

- If the interface role is undefined, LLDP reception and transmission inherit settings from the VDOM.
- If the interface role is WAN, LLDP reception is enabled.
- If the interface role is LAN, LLDP transmission is enabled.

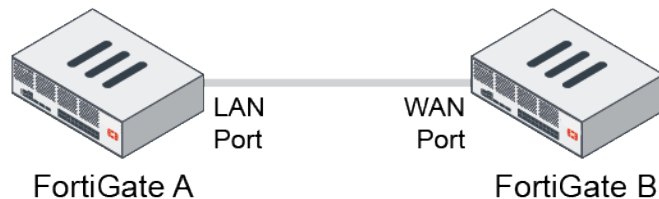

When a FortiGate B's WAN interface detects that FortiGate A's LAN interface is immediately upstream (through the default gateway), and FortiGate A has Security Fabric enabled, FortiGate B will show a notification on the GUI asking to join the Security Fabric.

### To configure LLDP reception and join a Security Fabric in the GUI:

1. On FortiGate A, go to *Network > Interfaces*.
2. Configure an interface:
  - If the interface's role is undefined, under *Administrative Access*, set *Receive LLDP* and *Transmit LLDP* to *Use VDOM Setting*.

The screenshot shows the 'Edit Interface' configuration page for 'port3'. The interface is configured as a Physical Interface with VRF ID 0 and Role Undefined. The Address section shows Manual DHCP addressing mode with IP/Netmask 10.100.88.1/255.255.255.0 and IPv6 Address/Prefix ::0. The Administrative Access section shows various protocols enabled, including HTTP, HTTPS, PING, and Security Fabric Connection. The Receive LLDP and Transmit LLDP settings are both set to 'Use VDOM Setting'.

- If the interface's role is WAN, under *Administrative Access*, set *Receive LLDP* to *Enable* and *Transmit LLDP* to *Use VDOM Setting*.

**Edit Interface**

Name: wan1  
 Alias:   
 Type: Physical Interface  
 VRF ID: 0  
 Role: WAN  
 Estimated bandwidth: 0 kbps Upstream, 0 kbps Downstream

**Address**  
 Addressing mode: Manual DHCP Auto-managed by FortiIPAM  
 IP/Netmask: 10.2.200.2/255.255.255.0  
 IPv6 addressing mode: Manual DHCP Delegated  
 IPv6 Address/Prefix: ::0  
 Auto configure IPv6 address:   
 DHCPv6 prefix delegation:   
 Secondary IP address:

**Administrative Access**  
 IPv4: ☒ HTTPS ☒ HTTP ☒ PING  
☐ FMG-Access ☐ SSH ☐ SNMP  
☐ FTM ☐ RADIUS Accounting ☒ Security Fabric Connection  
 IPv6: ☐ HTTPS ☐ PING ☐ FMG-Access  
☐ SSH ☐ SNMP ☐ Security Fabric Connection  
 Receive LLDP: Use VDOM Setting Enable Disable  
 Transmit LLDP: Use VDOM Setting Enable Disable  
☐ Stateless Address Auto-configuration (SLAAC)  
☐ DHCPv6 Server

FortiGate: FGDocs  
 Status: Up  
 MAC address: 00:09:0f:00:03:03  
 Speed Test: Execute speed test  
 Additional Information: API Preview, References, Edit in CLI  
 Documentation: Online Help, Video Tutorials

OK Cancel

- If the interface's role is LAN, under *Administrative Access*, set *Receive LLDP* to *Use VDOM Setting* and *Transmit LLDP* to *Enable*.

**Edit Interface**

Name: port2  
 Alias:   
 Type: Physical Interface  
 VRF ID: 0  
 Role: LAN

**Address**  
 Addressing mode: Manual DHCP Auto-managed by FortiIPAM  
 IP/Netmask: 10.2.200.1/255.255.255.0  
 IPv6 addressing mode: Manual DHCP Delegated  
 IPv6 Address/Prefix: ::0  
 Auto configure IPv6 address:   
 DHCPv6 prefix delegation:   
 Create address object matching subnet:   
 Secondary IP address:


**Administrative Access**  
 IPv4: ☒ HTTPS ☒ HTTP ☒ PING  
☐ FMG-Access ☐ SSH ☐ SNMP  
☐ FTM ☐ RADIUS Accounting ☒ Security Fabric Connection  
 IPv6: ☐ HTTPS ☐ PING ☐ FMG-Access  
☐ SSH ☐ SNMP ☐ Security Fabric Connection  
 Receive LLDP: Use VDOM Setting Enable Disable  
 Transmit LLDP: Use VDOM Setting Enable Disable  
☐ DHCP Server  
☐ Stateless Address Auto-configuration (SLAAC)  
☐ DHCPv6 Server

FortiGate: FGDocs  
 Status: Up  
 MAC address: 00:09:0f:00:02:02  
 Additional Information: API Preview, References, Edit in CLI  
 Documentation: Online Help, Video Tutorials

OK Cancel

3. Click OK. A notification is shown on FortiGate B, *You can connect to a Security Fabric via an upstream FortiGate at 10.2.200.1.*



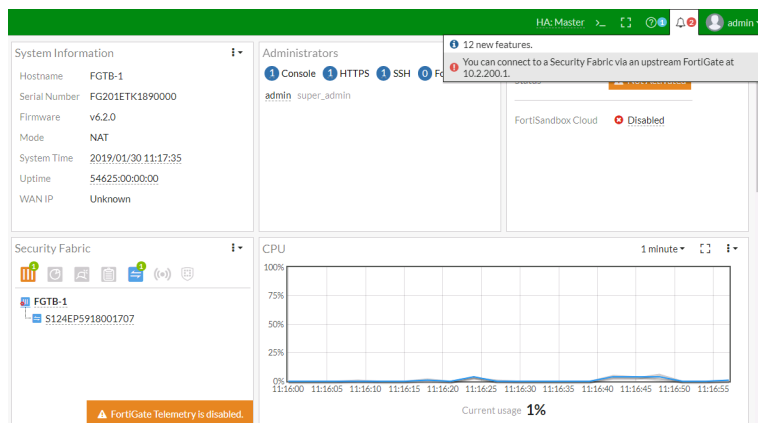

4. Click the notification. The *Core Network Security* page with the Security Fabric settings opens. All the required settings automatically configured.
5. Click **OK** to apply the settings.

### To configure LLDP reception and join a Security Fabric in the CLI:

1. Configure the interface on FortiGate A:

- Undefined role

```
config system interface
  edit "port3"
    set lldp-reception vdom
    set lldp-transmission vdom
    set role undefined
    ...
  next
end
```

- WAN role

```
config system interface
  edit "wan1"
    set lldp-reception enable
    set lldp-transmission vdom
    set role wan
    ...
  next
end
```

- LAN role

```
config system interface
  edit "port2"
    set lldp-reception vdom
    set lldp-transmission enable
    set role lan
    ...
  next
end
```

**2. Edit the Security Fabric settings on FortiGate B:**

```
config system csf
    set status enable
    set upstream-ip 10.2.200.1
end
```

## Configuring the Security Fabric with SAML

Security Assertion Markup Language (SAML) is an open standard for exchanging authentication and authorization data between one Identity Provider (IdP) and one or more Service Providers (SP). Both parties exchange messages using the XML protocol as transport. FortiGate firewall devices can be configured as IdPs or SPs.

When the Security Fabric is enabled, you can configure the root FortiGate as the IdP. You can also configure downstream FortiGates to be automatically configured as SPs, with all links required for SAML communication, when added to the Security Fabric. Administrators must still be authorized on each device. Credentials are verified by the root FortiGate, and login credentials are shared between devices. Once authorized, an administrator can move between fabric devices without logging in again.

Optionally, the downstream FortiGate can also be manually configured as an SP, and then linked to the root FortiGate.

The authentication service is provided by the root FortiGate using local system admin accounts for authentication. Any of the administrator account types can be used for SAML log in. After successful authentication, the administrator logs in to the first downstream FortiGate SP, and can then connect to other downstream FortiGates that have the SSO account properly configured, without needing to provide credentials again, as long as admins use the same browser session. In summary, the root FortiGate IdP performs SAML SSO authentication, and individual device administrators define authorization on FortiGate SPs by using security profiles.

## Configuring single-sign-on in the Security Fabric

SAML SSO enables a single FortiGate device to act as the identity provider (IdP), while other FortiGate devices act as service providers (SP) and redirect logins to the IdP.



Only the root FortiGate can be the identity provider (IdP). The downstream FortiGates can be configured as service providers (SP).

---

The process is as follows:

1. [Configuring the root FortiGate as the IdP on page 2709](#)
2. [Configuring a downstream FortiGate as an SP on page 2709](#)
3. [Configuring certificates for SAML SSO on page 2711](#)
4. [Verifying the single-sign-on configuration on page 2713](#)

You can also use the CLI. See [CLI commands for SAML SSO on page 2713](#).

## Configuring the root FortiGate as the IdP

To configure the root FortiGate as the IdP:

1. Log in to the root FortiGate.
2. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
3. In the *Settings* tab, enable *SAML Single Sign-On*. The *Mode* field is automatically populated as *Identity Provider (IdP)*.
4. Enter an IP address in the *Management IP/FQDN* field.
5. Enter a management port in the *Management port* field.  
The *Management IP/FQDN* will be used by the SPs to redirect the login request. The *Management IP/FQDN* and *Management port* must be reachable from the user's device.
6. Select the *IdP certificate*.

Core Network Security Connecto Security Fabric Settings

Settings Info

Security Fabric role: Standalone **Serve as Fabric Root** Join Existing Fabric

Allow other Security Fabric devices to join: ☒

Fabric name: fabric

Group password: ..... Change

Device authorization: 7 Connected / 7 Total Edit

FortiCloud account enforcement: ☒

Allow downstream device REST API access: ☒

Fabric global object: ☒

SAML Single Sign-On: ☒ Advanced Options

Mode: Identity Provider (IdP)

IdP certificate: FortiDemo Download

IdP address: Use Management IP/FQDN Specify

Management IP/FQDN: Use WAN IP Specify

Management port: Use Admin Port Specify

14003

OK Cancel

7. Click **OK**.

## Configuring a downstream FortiGate as an SP

There are two ways to configure the downstream FortiGate:


- From the root FortiGate
- From within the downstream device



An SP must be a member of the Security Fabric before you configure it.

### To configure the downstream FortiGate from the root FortiGate:

1. Log in to the root FortiGate.
2. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
3. In the topology tree, hover over a FortiGate and click *Configure*.

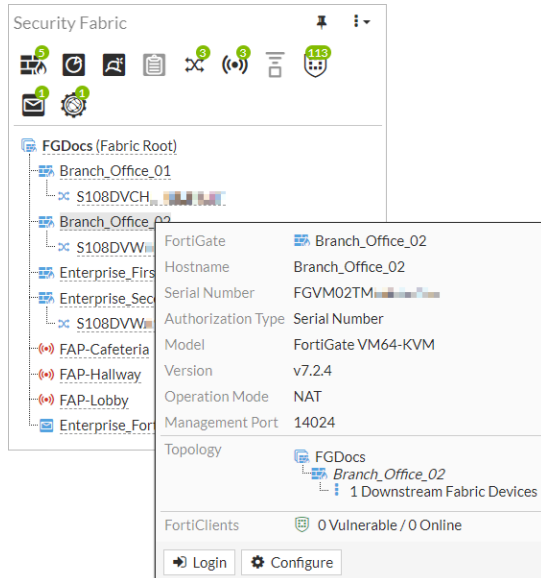


The *Configure* pane opens.

4. Select a *SAML Single Sign-On* option. *Auto* sets the device to SP mode. *Manual* allows you to configure the SSO settings by clicking *Advanced Options*.
5. Select a *Default login page* option.
6. Select one of the following *Default admin profile* types: *prof\_admin*, *super\_admin*, or *super\_admin\_readonly*.
7. Enter an IP address in the *Management IP/FQDN* field.
8. Enter a management port in the *Management port* field.

The *Management IP/FQDN* will be used by the IdP and so other SPs can redirect to each other. The *Management port* must be reachable from the user's device.

9. Click *OK*.

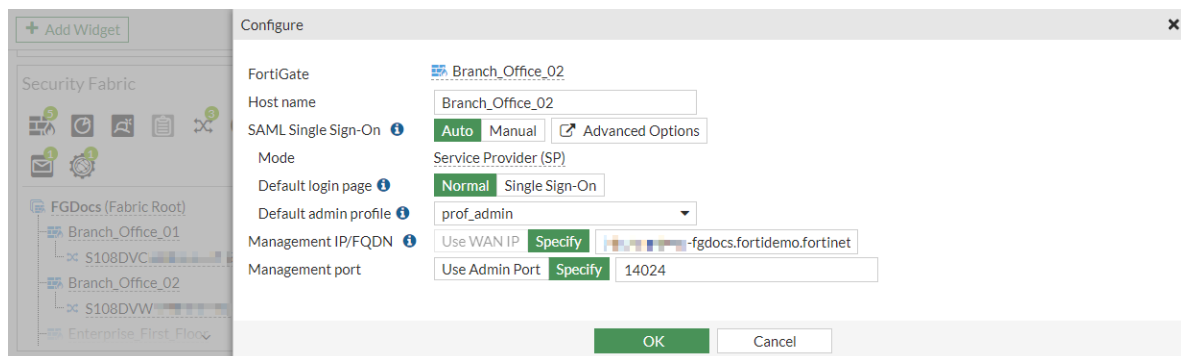

**To configure the downstream FortiGate within the device:**

1. Log in to the downstream FortiGate.
2. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
3. In the *Settings* tab, select a *SAML Single Sign-On* option. *Auto* sets the device to SP mode. *Manual* allows you to configure the SSO settings by clicking *Advanced Options*.
4. Select a *Default login page* option.
5. Select one of the following *Default admin profile* types: *prof\_admin*, *admin\_no\_access*, *super\_admin*, or *super\_admin\_readonly*.
6. Enter an IP address in the *Management IP/FQDN* field.
7. Enter a management port in the *Management port* field.  
The *Management IP/FQDN* will be used by the IdP and so other SPs can redirect to each other. The *Management port* must be reachable from the user's device.
8. Click *OK*.

## Configuring certificates for SAML SSO

Because communication between the root FortiGate IdP and FortiGate SPs is secured, you must select a local server certificate in the *IdP certificate* option on the root FortiGate. When downstream SPs join the IdP (root FortiGate), the SP automatically obtains the certificate.


In the following SP example, the *IdP certificate* displays *REMOTE\_Cert\_2*, which is the root server certificate for the IdP:

It is possible to manually import a certificate from an SP to the IdP so it can be used for authentication.

**To manually import an SP certificate to an IdP:**


1. Add the certificate:
  - a. On the SP, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *Settings* tab, click *Advanced Options*. The *SAML SSO* pane opens.
  - c. Enable *SP certificate* and select a certificate from the dropdown box.
  - d. Click *Download*. The certificate is downloaded on the local file system.
  - e. Click *OK* to close the *SAML SSO* pane.

- f. Click **OK** to close the *Security Fabric Setup* card.

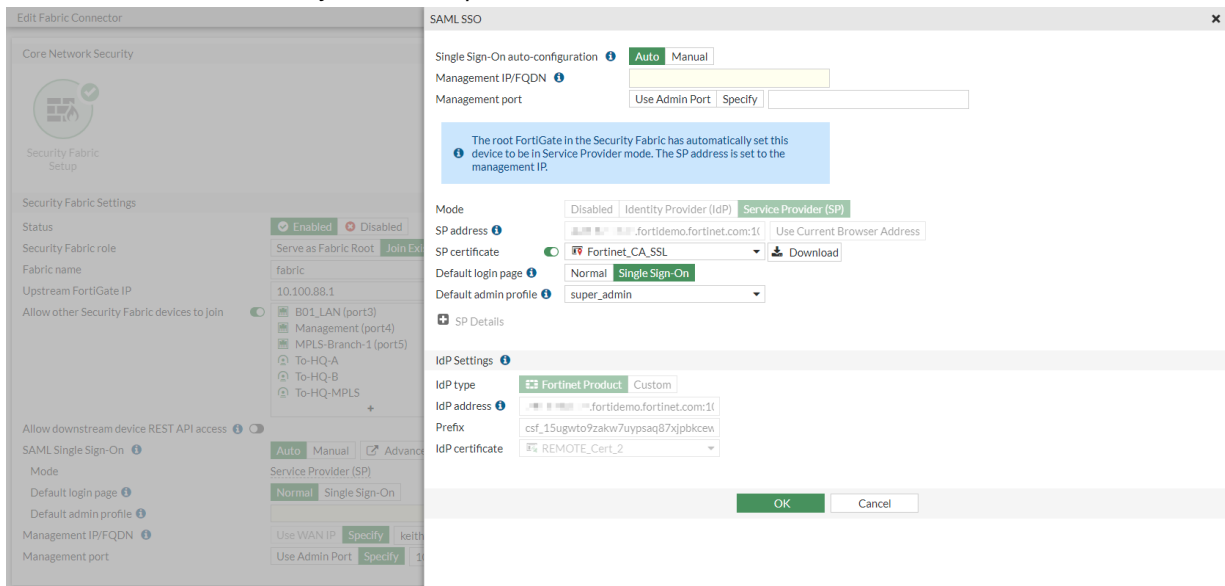

2. Import the certificate:

- On the IdP, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
- In the *Settings* tab, click *Advanced Options*. The *SAML SSO* pane opens.
- In the *Service Providers* table, select the SP from step 1 and click *Edit*.
- Enable *SP certificate* and in the dropdown box, click *Import*.

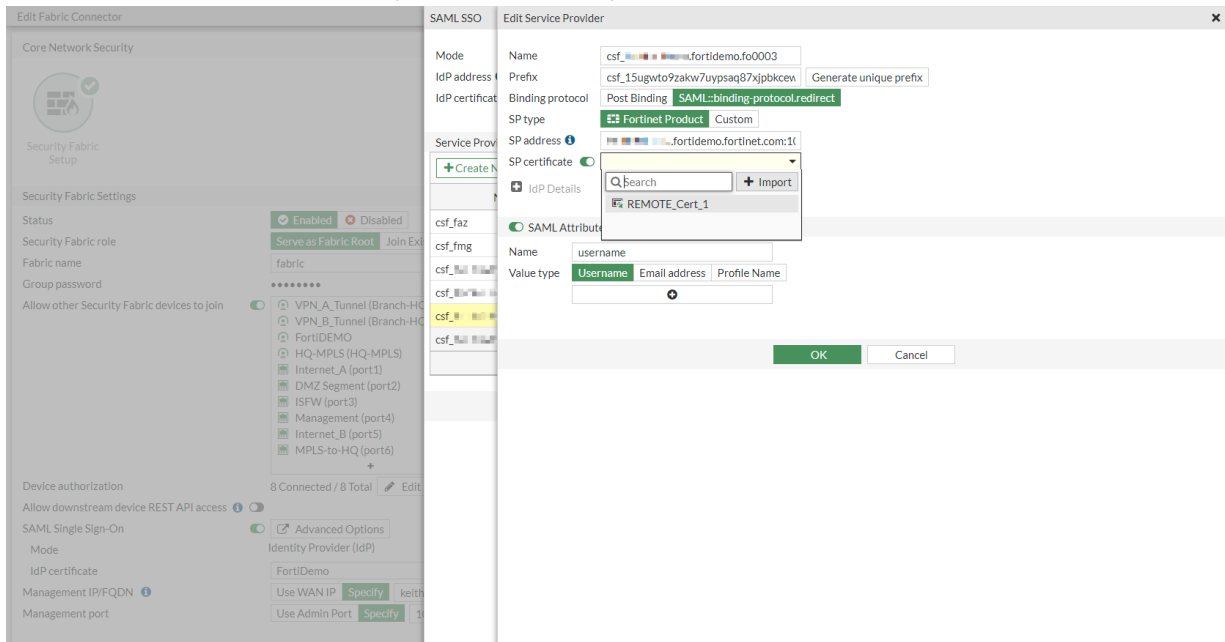

The *Upload Remote Certificate* window opens.

- Click *Upload* and select the certificate downloaded in step 1.
- Select *REMOTE\_Cert\_2*.
- Click *OK*. The certificate is imported.
- In the *IdP certificate* list, select the certificate that you imported.


- i. Click *OK* to close the *SAML SSO* pane.
- j. Click *OK* to close the *Security Fabric Setup* card.

## Verifying the single-sign-on configuration


After you have logged in to a Security Fabric member using SSO, you can navigate between any Security Fabric member with SSO configured.

### To navigate between Security Fabric members:


1. Log in to a Security Fabric member that is using SSO.
2. In the top banner, click the name of the device you are logged in to. A list of Security Fabric members displays.

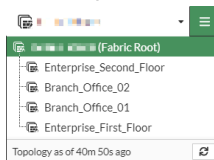

3. Click a Security Fabric member. The login page appears. Click *Sign in with Security Fabric*.

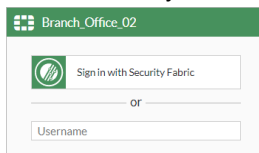

4. A prompt appears that an SSO administrator account has been created. Click *Continue*.

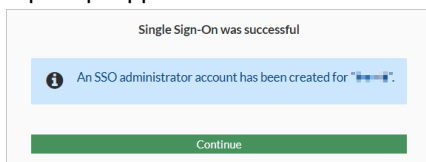

You are now logged in to the Security Fabric member with SSO. The letters "SSO" also display beside the user name in the top banner.

5. Go to *System > Administrators > Single-Sign-On Administrator* to view the list of SSO admins created.

<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Delete</a> <input type="text" value="Search"/>					
Name	Trusted Hosts	IPv6 Trusted Host	Profile	Type	Two-factor Authentication
System Administrator					
REST API Administrator					
Single Sign-On Administrator					
			super_admin	SSO Admin	

## CLI commands for SAML SSO

To enter a question mark (?) or a tab, Ctrl + V must be entered first. Question marks and tabs cannot be typed or copied into the CLI Console or some SSH clients.

### To configure the IdP:

```
config system saml
    set status enable
```

```

set role identity-provider
set cert "Fortinet_Factory"
set server-address "172.16.106.74"
config service-providers
  edit "csf_172.16.106.74:12443"
    set prefix "csf_ngczjwqxujfsbhgr9ivhehwu37fml20"
    set sp-entity-id "http://172.16.106.74/metadata/"
    set sp-single-sign-on-url "https://172.16.106.74/saml/?acs"
    set sp-single-logout-url "https://172.16.106.74/saml/?sls"
    set sp-portal-url "https://172.16.106.74/saml/login/"
    config assertion-attributes
      edit "username"
      next
      edit "tdoc@fortinet.com"
      set type email
      next
    end
  next
end
end
end

```

### To configure an SP:

```

config system saml
  set status enable
  set cert "Fortinet_Factory"
  set idp-entity-id "http://172.16.106.74/saml-idp/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/metadata/"
  set idp-single-sign-on-url "https://172.16.106.74/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/login/"
  set idp-single-logout-url "https://172.16.106.74/saml-idp/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/logout/"
  set idp-cert "REMOTE_Cert_1"
  set server-address "172.16.106.74:12443"
end

```

### To configure an SSO administrator:

```

config system sso-admin
  edit "SSO-admin-name"
    set accprofile <SSO admin user access profile>
    set vdom <Virtual domain(s) that the administrator can access>
  next
end

```

## SAML SSO with pre-authorized FortiGates

You can set up SAML SSO authentication in a Security Fabric environment by starting with a root FortiGate that has one or more pre-authorized FortiGates.

After the initial configuration, you can add more downstream FortiGates to the Security Fabric, and they are automatically configured with default values for a service provider.



**To set up basic SAML SSO for the Security Fabric:**

1. Log in to the root FortiGate of the Security Fabric.
2. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
3. Join two pre-authorized FortiGates to the root FortiGate (see [Configuring the root FortiGate and downstream FortiGates on page 2583](#)).
4. Configure the IdP (see [Configuring the root FortiGate as the IdP on page 2709](#)).
5. Configure the SPs (see [Configuring a downstream FortiGate as an SP on page 2709](#)).

## Navigating between Security Fabric members with SSO


After you have logged in to a Security Fabric member by using SSO, you can navigate between any Security Fabric member with SSO configured. This can be done using the Security Fabric members dropdown menu or by logging in to a FortiGate SP from the root FortiGate IdP.

**Security Fabric members dropdown**

The Security Fabric members dropdown menu allows you to easily switch between all FortiGate devices that are connected to the Security Fabric. You can also use this menu to customize a FortiGate in the Security Fabric.

**To navigate between Security Fabric members:**

1. Log in to a Security Fabric member by using SSO.
2. In the top banner, click the name of the device you are logged into with SSO.  
A list of Security Fabric members is displayed.

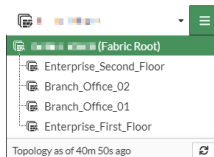

3. Click the Security Fabric member.  
You are logged in to the Security Fabric member without further authentication.

**To customize a FortiGate in the Security Fabric:**


1. In the Security Fabric members dropdown menu, hover the cursor over a FortiGate so the tooltip is shown.
2. Click *Configure*. The *Configure* pane opens.
3. Edit the settings as required.
4. Click *OK*.

**Logging in to an SP from the root IdP**


The following example describes how to log in to a root FortiGate IdP, and navigate to other FortiGate SPs in the Security Fabric without further authentication. The local administrator account is named *test3*. The local administrator account must also be available as an SSO administrator account on all downstream FortiGate SPs. Different tabs of the same browser are used to log in to the various FortiGates.

### To log in to a FortiGate SP from a root FortiGate IdP:

1. Log in to the root FortiGate IdP by using the local administrator account.  
In this example, the local administrator account is named *test3*.
2. Go to *Dashboard > Status* and locate the *Security Fabric* widget.
3. In the topology tree, click one of the downstream FortiGate SPs, and select *Login to <name of FortiGate>*. The login screen is displayed.
4. In the login screen, select *Single Sign-On*.  
By using cookies in your local browser for the already-authenticated SSO administrator, FortiGate logs you in to the downstream FortiGate SP as the SSO administrator. In this example, the SSO administrator name is *test3*.

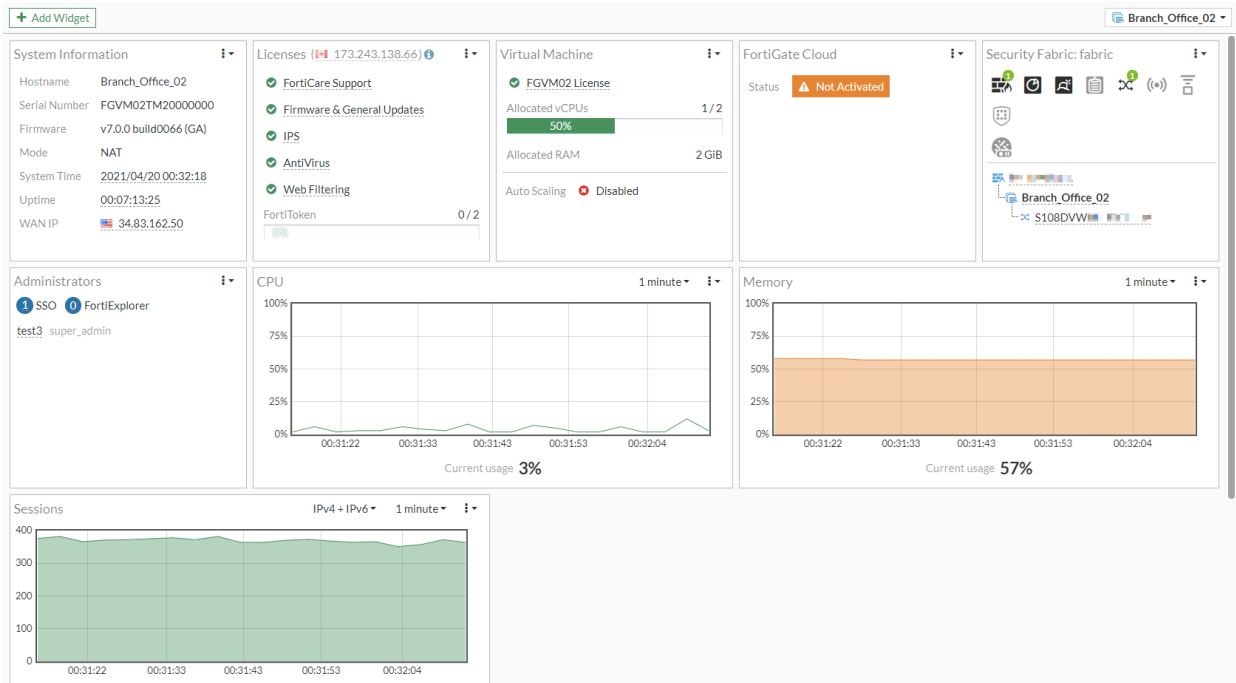

5. While still logged into the root FortiGate IdP in your browser, go to the browser tab for the root FortiGate IdP, and log in to another FortiGate SP that is displayed on the *Security Fabric* widget in the GUI.

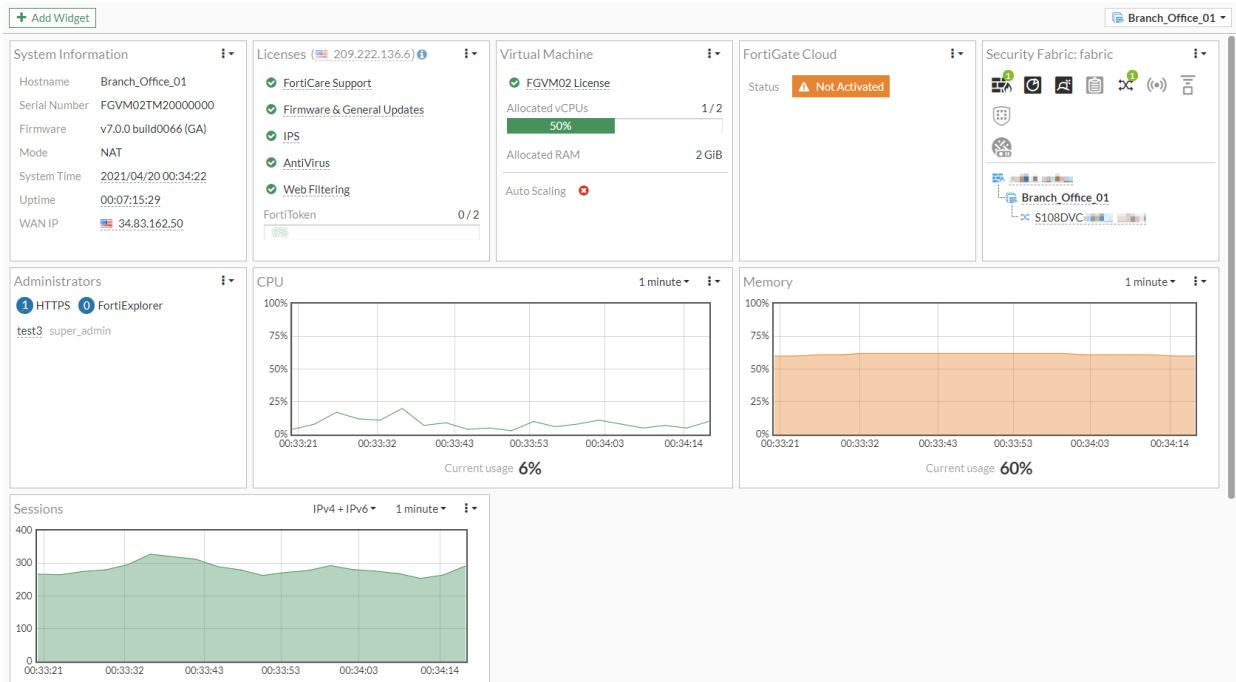

SAML SSO login uses *SAML\_IDP* session cookies of already authenticated admin users in your local browser cache to send to the root FortiGate IdP for authentication. If your browser cache is manually cleared, or you close your browser, you must authenticate again.



It is possible to log in to one downstream FortiGate SP in a Security Fabric, and then open another tab in your browser to connect to another FortiGate SP that is not a member of the Security Fabric.


This is useful in cases where the SSO administrator and the local system administrator on the FortiGate SP both have the same login name, but are two different entities.

## Integrating FortiAnalyzer management using SAML SSO

When a FortiGate acting as a Security Fabric root is configured as a SAML SSO identity provider (IdP), the FortiAnalyzer of the Security Fabric can register itself as a service provider (SP). This simplifies the configuration by enabling the setting in FortiAnalyzer to facilitate Fabric SSO access to the FortiAnalyzer once authenticated to the root FortiGate. When signed in using SSO, the FortiAnalyzer includes a Security Fabric navigation dropdown, which allows easy navigation to FortiGates in the Fabric.

### To enable FortiAnalyzer as a Fabric SP in the GUI:

1. On the root FortiGate, go to *Security Fabric > Physical Topology* or *Logical Topology*.
2. In the topology, click the *FortiAnalyzer* icon and select *Login to FortiAnalyzer*.

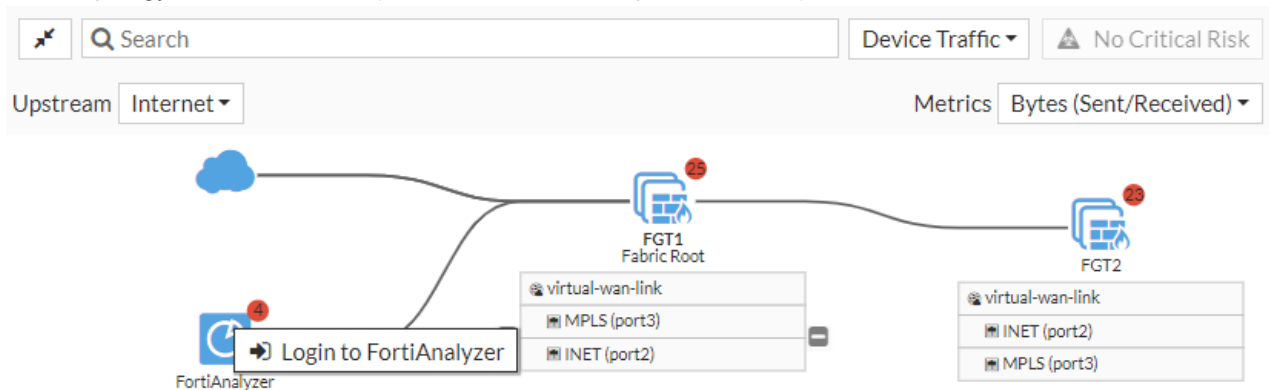

3. Enter the credentials to log in. A Security Fabric must be configured with the Fabric devices listed under the Fabric name.
  - a. Go to *Device Manager* to verify the Fabric setup. There is an asterisk beside the root FortiGate.

+ Add Device Edit Delete More Column Settings Show Map					
<input type="checkbox"/>	Device Name	IP Address	Platform	Logs	Average Log Rate(Logs/Sec)
<input type="checkbox"/>	labric				
<input type="checkbox"/>	FGT1*	192.168.1.99	FortiGate-VM64	Real Time	0
<input type="checkbox"/>	FGT2	192.168.1.100	FortiGate-VM64	Real Time	0

4. Edit the FortiAnalyzer SAML SSO settings:

- a. Go to *System Settings > Admin > SAML SSO*.
- b. For *Single Sign-On Mode*, select *Fabric SP* and enter the address to access the FortiAnalyzer in *Server Address*.

**Single Sign-On Settings**

Server Address i

Allow admins to login with FortiCloud i ☐

Single Sign-On Mode Disabled Identity Provider (IdP) Service Provider (SP) **Fabric SP**

i In Fabric SP mode, an SSO administrator is created for each Security Fabric. When a user logs in via Fabric SSO, the Fabric IdP provides the user's profile name. If this system has a profile with the matching name, the profile is assigned to the user. Otherwise, the profile of the SSO administrator is assigned to the user by default.


Default Admin Profile i Super\_Admin

**Fabric IdPs**


<input type="checkbox"/>	Root Device	ADOM Name	Status	IdP Settings
<input type="checkbox"/>	FGVM01TM	70	Enabled	Entity ID: http://192.168.1.99/saml-idp/csf_ubhqs18oq2i2u8C Login URL: https://192.168.1.99/saml-idp/csf_ubhqs18oq2i2u Logout URL: https://192.168.1.99/saml-idp/csf_ubhqs18oq2i2

- c. Click *Apply* and log out of the FortiAnalyzer. The FortiAnalyzer will automatically register itself on the FortiGate and is a visible appliance in the list of SPs.


5. Verify that the FortiAnalyzer registration was successful:
  - a. In FortiOS, go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
  - b. In the *SAML Single Sign-On* section click *Advanced Options*. There should be an entry for the FortiAnalyzer in the *Service Providers* table (*appliance\_192.168.1.103*).

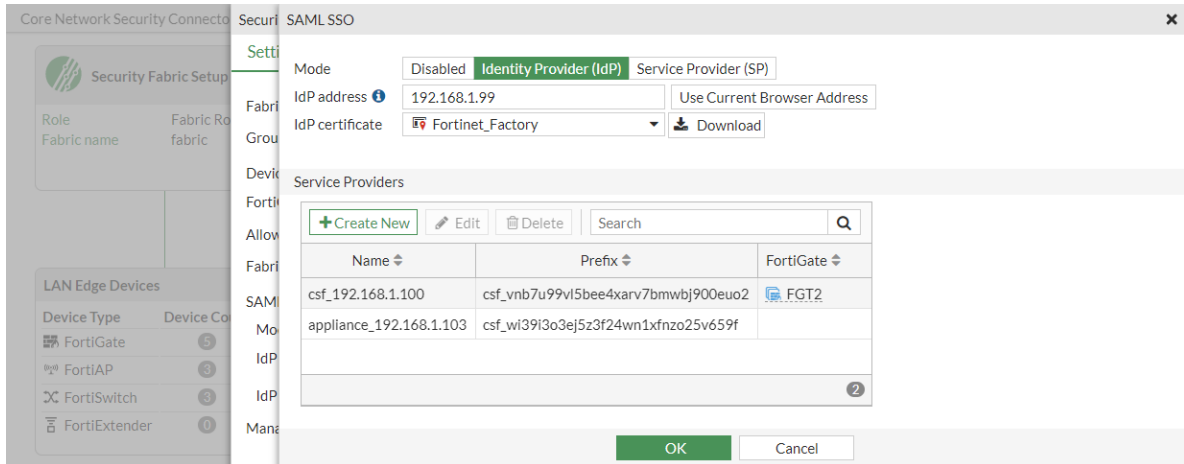

6. Log in to the FortiAnalyzer. There is a new option to *Login with Fabric Single Sign-On*.

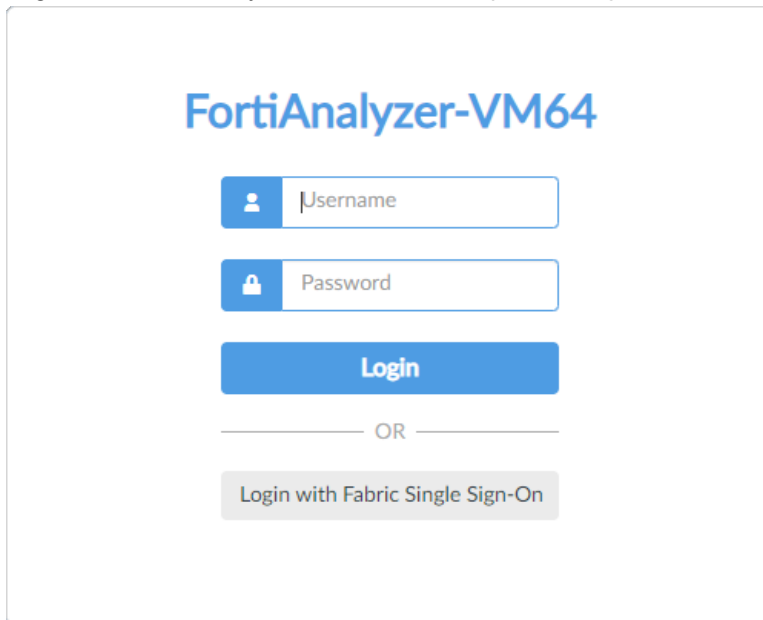

7. Click *Login with Fabric Single Sign-On*. A dialog appears to select a Fabric IdP.

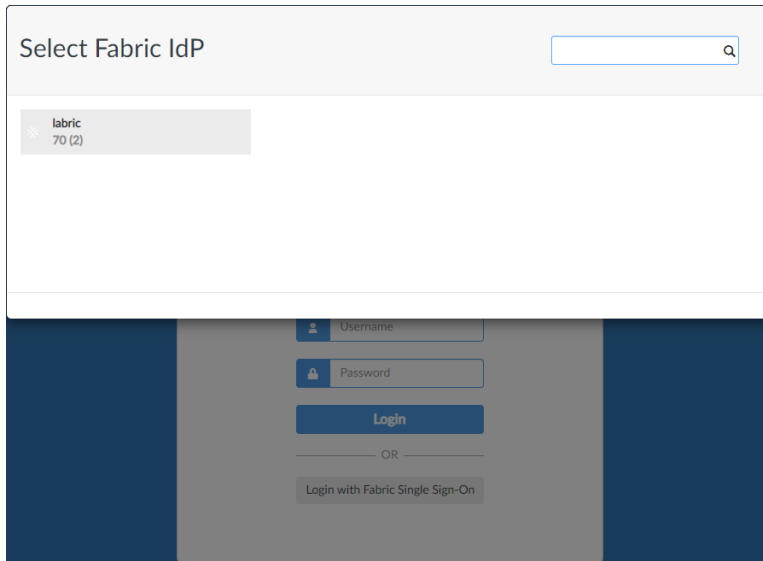

8. Select a FortiGate. The ADOM containing that FortiGate opens.

### To enable FortiAnalyzer as a Fabric SP in the CLI:

1. In FortiAnalyzer, enable the device as a Fabric SP:

```
config system saml
    set status enable
    set role FAB-SP
    set server-address "192.168.1.99"
end
```

FortiAnalyzer will register itself on the FortiGate as an appliance.

2. Verify the configuration in FortiOS:

```
show system saml
config system saml
    set status enable
    set role identity-provider
    set cert "fortigate.domain.tld"
    set server-address "192.168.1.99"
    config service-providers
        edit "appliance_192.168.1.103"
            set prefix "csf_76sh0bm4e7hf1ty54w42yrrv88tk8uj"
            set sp-entity-id "http://192.168.1.103/metadata/"
            set sp-single-sign-on-url "https://192.168.1.103/saml/?acs"
            set sp-single-logout-url "https://192.168.1.103/saml/?sls"
            set sp-portal-url "https://192.168.1.103/saml/login/"
            config assertion-attributes
                edit "username"
                next
                edit "profilename"
                set type profile-name
            next
        next
    next
end
```


```

    end
  next
end
end

```


### To navigate between devices using SAML SSO in FortiOS:

1. Log in to the root FortiGate.
2. Go to *Security Fabric > Physical Topology* or *Logical Topology*.
3. In the topology, click the *FortiAnalyzer* icon and select *Login to FortiAnalyzer*.

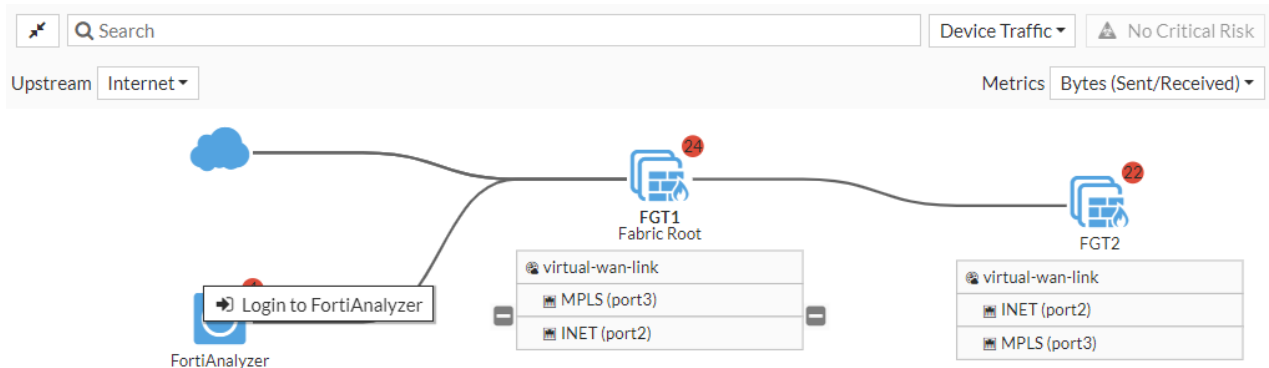

### To navigate between devices using SAML SSO in FortiAnalyzer:

1. Log in to the FortiAnalyzer using SSO.
2. Navigate to the ADOM that contains the root FortiGate of the Security Fabric.
3. In the toolbar, click the Security Fabric name to display a dropdown a list of the Fabric FortiGates.

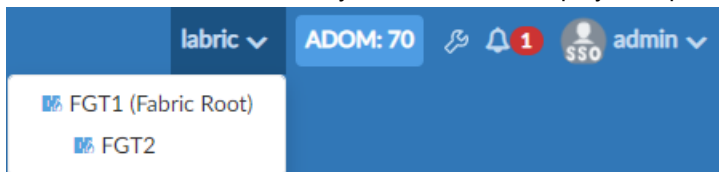

## Integrating FortiManager management using SAML SSO

When a FortiGate is configured as the SAML SSO IdP, FortiManager can be added as an SP.

### To configure FortiManager as a Fabric SP:

1. On the root FortiGate, go to *Security Fabric > Fabric Connectors*, and edit the *Security Fabric Setup* connector.
2. In the *Security Fabric Settings* section, click *Advanced Options*.
3. In the *Service Providers* section, click *Create New*.
4. Enter a name and a prefix for the SP. FortiOS generates a unique prefix, but you can enter your own.

5. In *SP address*, enter the FortiManager address including the port number.

Create Service Provider ✕

Name

Prefix  Generate unique prefix

SP type Fortinet Product Custom

SP address i

SP certificate 🔑

+ IdP Details

---

🔑 SAML Attribute

Name

Type Username Email address Profile Name

OK Cancel

6. Click **OK**.
7. In FortiManager, go to *System Settings > Admin > SAML SSO* and in the *Single Sign-On Mode* section, click *Service Provider (SP)*.
8. Configure the *IdP Settings*:
- For *IdP Type*, click *Fortinet*.
  - For *IdP Address*, enter the root FortiGate address including the port number.
  - Enter the *Prefix* of the SP.
  - For *IdP Certificate*, import the same certificate used on the root FortiGate.
  - Click *Apply*.

Single Sign-On Settings

Single Sign-On Mode Disabled Identity Provider (IdP) Service Provider (SP)

i In SP mode, an SSO administrator is created for each user who logs in via SSO. The SSO administrators have restricted profiles by default. You can edit their profiles on the Administrators page.

SP Address

SP Entity ID

SP ACS (Login) URL

SP SLS (Logout) URL

View SP Metadata 🔗 View

Default Login Page ? Normal Single-Sign On

Default Admin Profile ? Restricted\_User

IdP Settings ?

IdP Type Fortinet Custom

IdP Address

Prefix


IdP Certificate  📄 Import

Apply



9. To verify that the configuration works, log out of FortiManager and log in using the *Login via Single-Sign-On* link.

### FortiManager-VM64-KVM

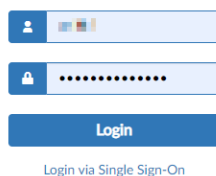


## Advanced option - FortiGate SP changes

From a root FortiGate IdP, you can edit each of the FortiGate SPs. For example, you can edit a FortiGate SP to generate a new prefix, or you can add or modify SAML attributes. When you generate a new prefix value, it is propagated to the respective downstream FortiGates.

### To edit an SP from the root FortiGate (IdP):

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Security Fabric Setup* card.
2. Click *Advanced Options*. The *SAML SSO* pane opens.
3. In the *Service Providers* table, select a device and click *Edit*. The *Edit Service Provider* pane opens.

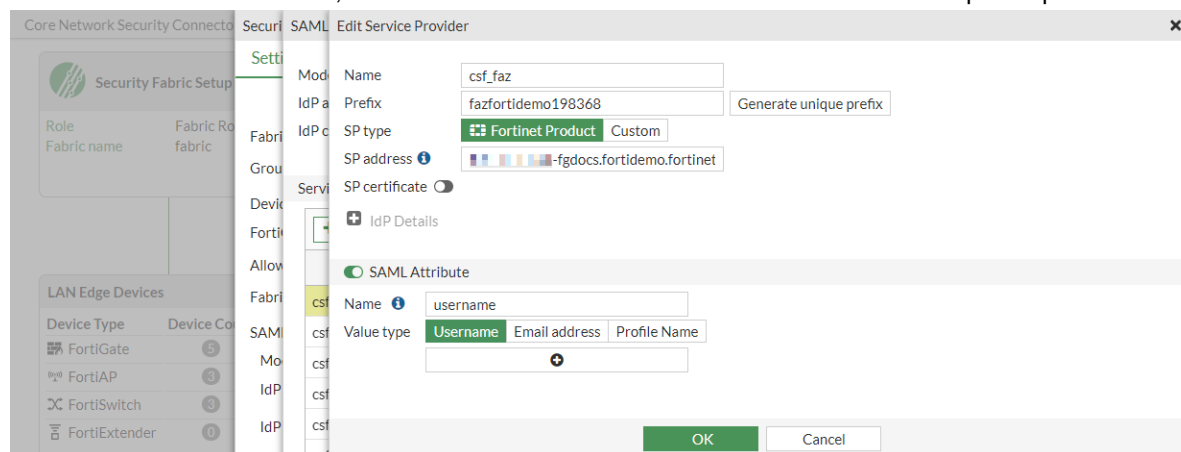


4. Edit the settings as needed.
5. Click *OK*.

## Security rating

The security rating uses real-time monitoring to analyze your Security Fabric deployment, identify potential vulnerabilities, highlight best practices that can be used to improve the security and performance of your network, and calculate Security Fabric scores.

To view the security rating, go to *Security Fabric > Security Rating* on the root FortiGate.

The *Security Rating* page is separated into three major scorecards: *Security Posture*, *Fabric Coverage*, and *Optimization*, which provide an executive summary of the three largest areas of security focus in the Security Fabric.

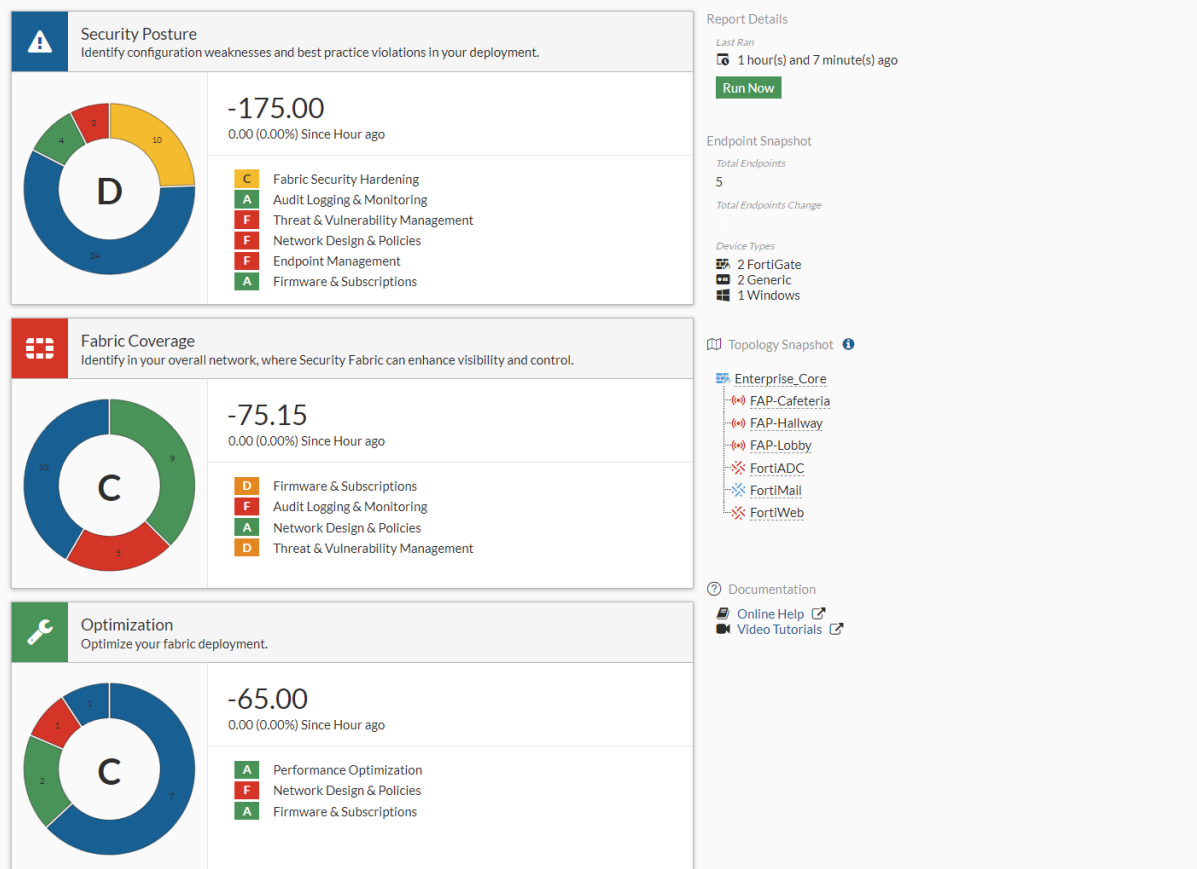


The scorecards show an overall letter grade and breakdown of the performance in sub-categories. The letter grade is calculated based on the percent of tests in a category that passed:

- A = 90% and above
- B = 77% to <90%
- C = 60% to <77%
- D = 50% to <60%
- F = Less than 50%

For example, if eight out of ten tests in a category passed, then 80% of the tests passed, and the category would be given a B grade.

Clicking a scorecard drills down to a detailed report of itemized results and compliance recommendations. The point score represents the net score for all passed and failed items in that area. In the drill down report, hover the cursor over a score to view the calculation breakdown.

The report includes the security controls that were tested against, linking to specific FSBP or PCI compliance policies. Click the *FSBP* and *PCI* buttons to reference the corresponding standard. Users can search or filter the report results. If there is a failed check on the scorecard, there is a link in the *Recommendations* section that takes you to the page to resolve the problem.

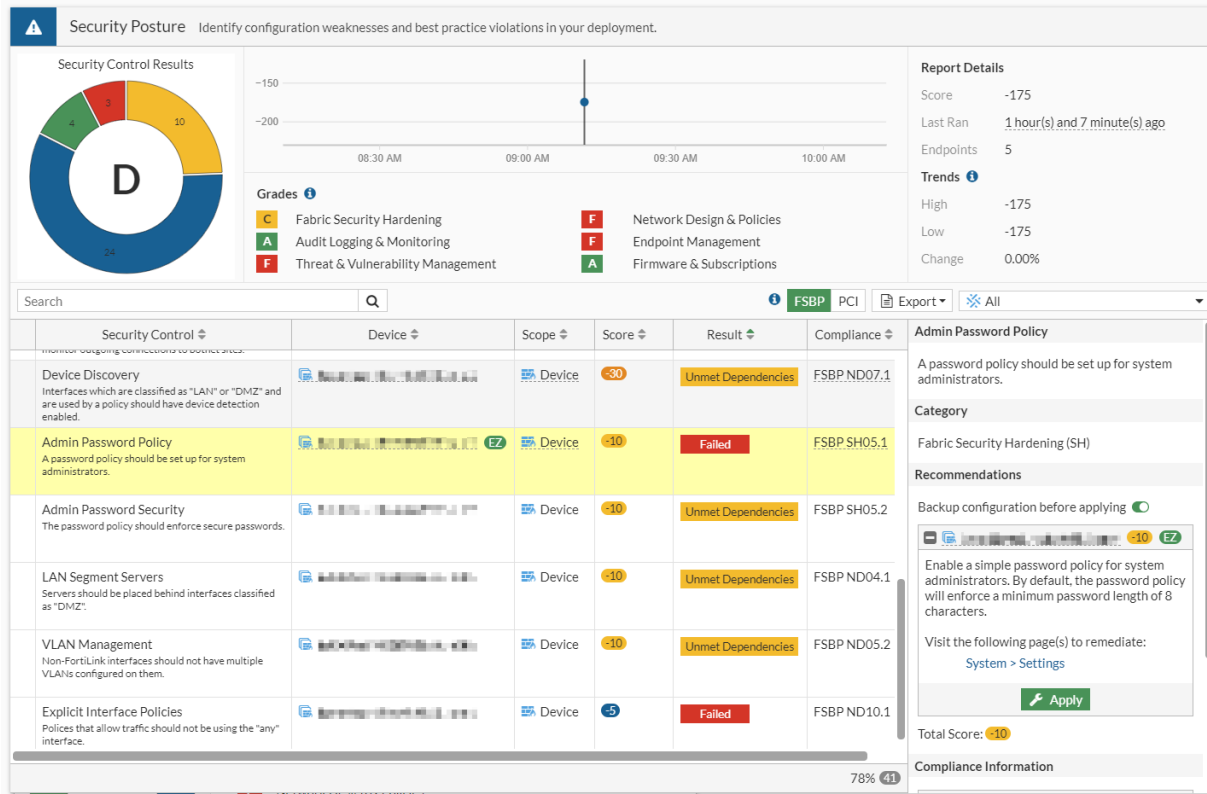

Certain remediations marked with an *EZ* symbol represent configuration recommendations that support *Easy Apply*. In the panel on the right, in the *Recommendations* section, click *Apply* to apply the changes to resolve the failed security control.

**Recommendations**

Backup configuration before applying ☐

<60

Define a role for the following interfaces:

Management (port4)


SSL-VPN tunnel interface (ssl.root)

Visit the following page(s) to remediate:  
[Network > Interfaces](#)

**Apply**


Total Score: <60

The report table can be customized by adding more columns, such as *Category*, to view, filter, or sort the results based on scorecard categories. Click the gear icon to customize the table.

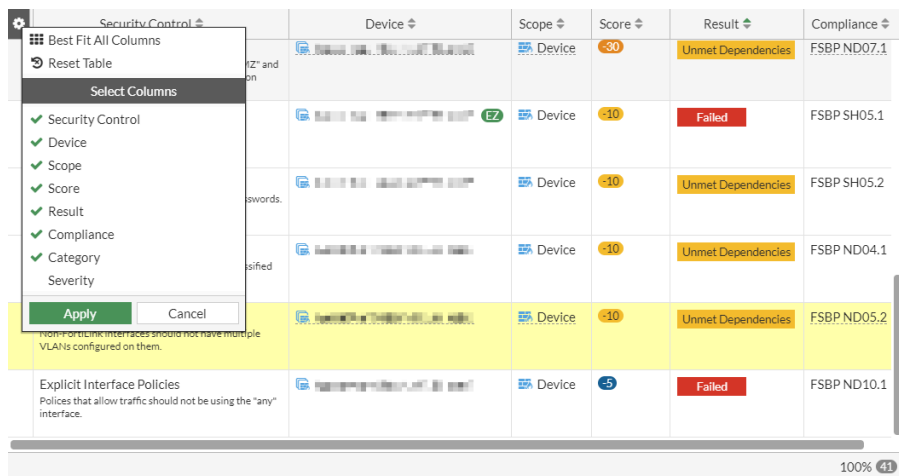

Security Control	Device	Scope	Score	Result	Compliance
Best Fit All Columns	Device	Device	-30	Unmet Dependencies	FSBP ND07.1
Reset Table	Device	Device	-10	Failed	FSBP SH05.1
Security Control	Device	Device	-10	Unmet Dependencies	FSBP SH05.2
Device	Device	Device	-10	Unmet Dependencies	FSBP ND04.1
Scope	Device	Device	-10	Unmet Dependencies	FSBP ND05.2
Score	Device	Device	-5	Failed	FSBP ND10.1
Result	Device	Device	-5	Failed	FSBP ND10.1
Compliance	Device	Device	-5	Failed	FSBP ND10.1
Category	Device	Device	-5	Failed	FSBP ND10.1
Severity	Device	Device	-5	Failed	FSBP ND10.1

Users can also export the reports as CSV or JSON files by clicking the *Export* dropdown.

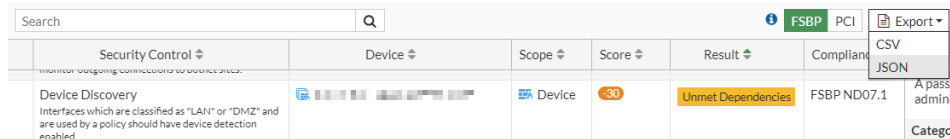

Security Control	Device	Scope	Score	Result	Compliance
Device Discovery	Device	Device	-30	Unmet Dependencies	FSBP ND07.1



To exit the current view, click the icon beside the scorecard title to return to the summary view.

For more information about security ratings, and details about each of the checks that are performed, go to [Security Best Practices & Security Rating Feature](#).



The following licensing options are available for security rating checks:

- A base set of free checks
  - A licensed set that requires a FortiGuard Security Rating Service subscription
- The base set can be run locally on any FortiGate and on all other devices in the Security Fabric. On licensed FortiGates, ratings scores can be submitted to and received from FortiGuard for ranking networks by percentile.

For a list of base and licensed security rating checks, see [FortiGuard Security Rating Service](#).

## Security rating notifications

Security rating notifications are shown on settings pages, which list configuration issues determined by the security rating report. You can open the recommendations to see which items need to be fixed. Notifications can be dismissed in the GUI. Dismissed issues are unique for each administrator. Hashes for dismissed notifications are saved in local storage. If a user clears the local storage, all issues will show up again as not dismissed.

### Notification locations

On the *System > Settings* page, there is a *Security Rating Issues* section in the right-side gutter. To dismiss a notification, hover over the issue and click the *X* beside it. To view dismissed notifications, enable *Show Dismissed*.

System Settings

Host name: FGVM-R1

System Time

Current system time: 2021/02/09 09:18:34

Time zone: [GMT-8:00] Pacific Time (US & Canada)

Set Time: NTP PTP Manual settings

Select server: FortiGuard Custom

Sync interval: 60 Minutes (1 - 1440)

Setup device as local NTP server: ☐

Administration Settings

HTTP port: 80

Redirect to HTTPS: ☒

HTTPS port: 443

Port conflicts with the SSL-VPN port setting

HTTPS server certificate: self-sign

SSH port: 22

Telnet port: 23

Idle timeout: 480 Minutes (1 - 480)

Allow concurrent sessions: ☒

Redirect to HTTPS: ☒

FortiCloud Single Sign-On: ☐

WiFi Settings

WiFi certificate: Fortinet\_Wifi

WiFi CA certificate: Fortinet\_Wifi\_CA

WiFi country/region: United States

Password Policy

Apply

Additional Information

API Preview

Edit In CLI

Virtual Domain

Setup guide

How to Configure Virtual Domains

Documentation

Online Help

Video Tutorials

Security Rating Issues

Default Port HTTPS

Default Port SSH

USB Auto Configuration

Valid HTTPS Certificate - Adminis..

Admin Password Policy

Admin Idle Timeout

Show Dismissed

On the **Network > Interfaces** page, there is a **Security Rating Issues** section in the table footer. Click **Security Rating Issues** to view the list of issues. To dismiss a notification, click the **X** beside it. To view dismissed notifications, click **Show Dismissed**.

FortiGate VM64


Name	Type	Members	IP/Netmask	Administrative Access	DHCP Clients	DHCP Ranges	Ref.
<b>Physical Interface</b> 22							
port1	Physical Interface		172.16.151.87/255.255.255.0	PING HTTPS SSH SNMP			16
port2	Physical Interface		192.168.2.87/255.255.255.0	PING HTTPS SSH SNMP HTTP			5
port3	Physical Interface		192.168.102.1/255.255.255.0	PING HTTPS HTTP			7
port4	Physical Interface		192.168.80.87/255.255.255.0				4
port5	Physical Interface		0.0.0.0/0.0.0.0				1
port6	Physical Interface		0.0.0.0/0.0.0.0				0
<b>Software Switch</b> 1							
wqt.root	Software Switch	wqtn.28.test	10.253.255.254/255.255.255.0			10.253.240.1-10.253.255.253	1
<b>Virtual Wire Pair</b> 0							
vwp78	Virtual Wire Pair						0
vwp910	Virtual Wire Pair						0
<b>WiFi SSID</b> 2							
fortinet	WiFi SSID		0.0.0.0/0.0.0.0	HTTPS			?

Security Rating Issues

0% Updated: 18:27:53

## Notification pop-ups

When you click a security rating notification, a pop-up appears and the related setting is highlighted in the GUI. The pop-up contains a description of the problem and a timestamp of when the issue was found.

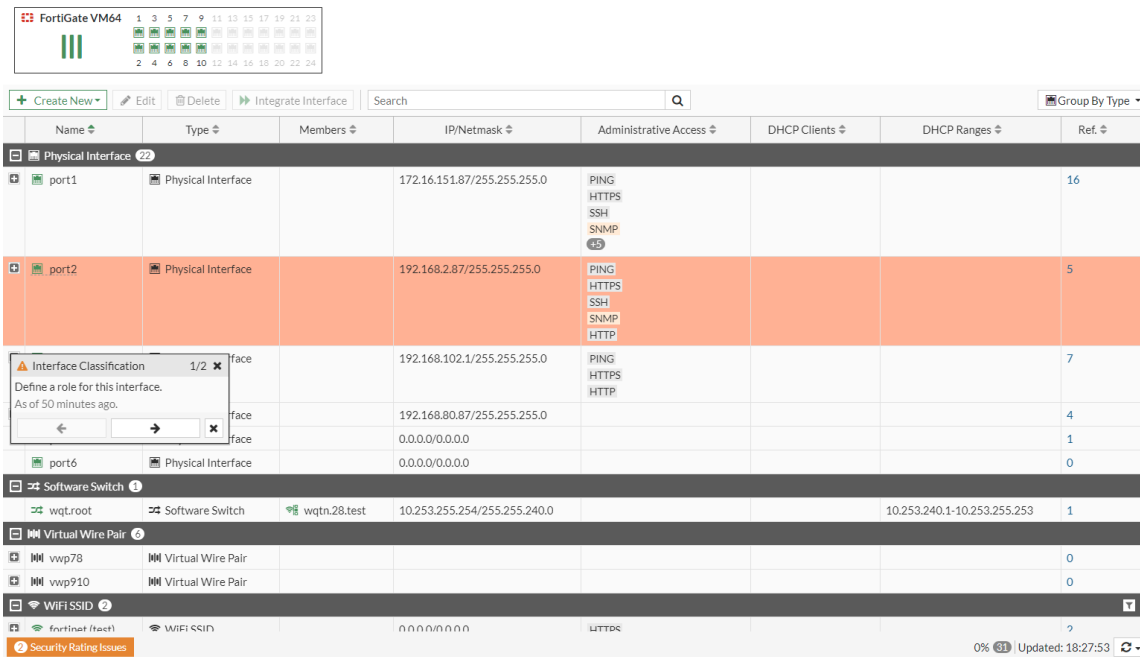

Name	Type	Members	IP/Netmask	Administrative Access	DHCP Clients	DHCP Ranges	Ref.
<b>Physical Interface</b>							
port1	Physical Interface		172.16.151.87/255.255.255.0	PING HTTPS SSH SNMP			16
port2	Physical Interface		192.168.2.87/255.255.255.0	PING HTTPS SSH SNMP HTTP			5
<b>Interface Classification</b>							
face			192.168.102.1/255.255.255.0	PING HTTPS HTTP			7
face			192.168.80.87/255.255.255.0				4
face			0.0.0.0/0.0.0.0				1
port6	Physical Interface		0.0.0.0/0.0.0.0				0
<b>Software Switch</b>							
wqtroot	Software Switch	wqtrn.28.test	10.253.255.254/255.255.240.0			10.253.240.1-10.253.255.253	1
<b>Virtual Wire Pair</b>							
vvp78	Virtual Wire Pair						0
vvp910	Virtual Wire Pair						0
<b>WiFi SSID</b>							
fortinet (face)	WiFi SSID		0.0.0.0/0.0.0.0	HTTP			0

Security Rating Issues

0% Updated: 18:27:53


Once an issue is resolved, the notification disappears after the next security rating report runs.

## PSIRT-related notifications

On a FortiGate with a valid Security Rating license, the separate Security Rating package downloaded from FortiGuard supports PSIRT vulnerabilities, which are highlighted in security rating results.

### To verify the FortiGuard license entitlement in the GUI:

1. Go to *System > FortiGuard* and expand the *License Information* table.
2. Check that *Security Rating* appears in the list and the license is valid.

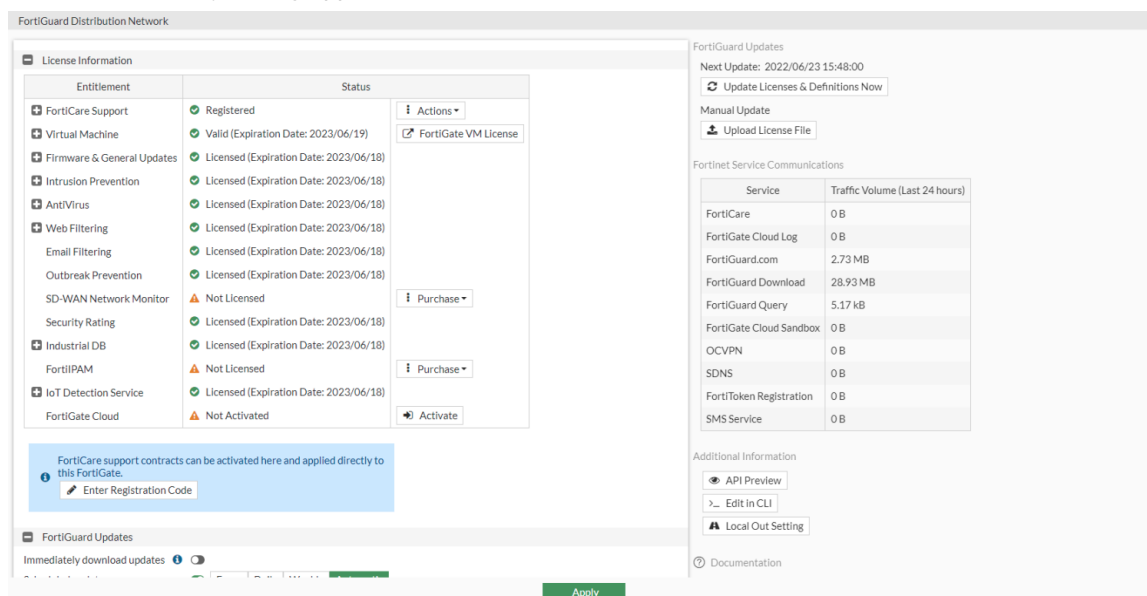

License Information		
Entitlement	Status	Actions
FortiCare Support	Registered	
Virtual Machine	Valid (Expiration Date: 2023/06/19)	FortiGate VM License
Firmware & General Updates	Licensed (Expiration Date: 2023/06/18)	
Intrusion Prevention	Licensed (Expiration Date: 2023/06/18)	
AntiVirus	Licensed (Expiration Date: 2023/06/18)	
Web Filtering	Licensed (Expiration Date: 2023/06/18)	
Email Filtering	Licensed (Expiration Date: 2023/06/18)	
Outbreak Prevention	Licensed (Expiration Date: 2023/06/18)	
SD-WAN Network Monitor	Not Licensed	Purchase
Security Rating	Licensed (Expiration Date: 2023/06/18)	
Industrial DB	Licensed (Expiration Date: 2023/06/18)	
FortiIPAM	Not Licensed	Purchase
IoT Detection Service	Licensed (Expiration Date: 2023/06/18)	
FortiGate Cloud	Not Activated	Activate

FortiCare support contracts can be activated here and applied directly to this FortiGate.  
Enter Registration Code

FortiGuard Updates	
Next Update: 2022/06/23 15:48:00	
Update Licenses & Definitions Now	
Manual Update	
Upload License File	

Fortinet Service Communications	
Service	Traffic Volume (Last 24 hours)
FortiCare	0 B
FortiGate Cloud Log	0 B
FortiGuard.com	2.73 MB
FortiGuard Download	28.93 MB
FortiGuard Query	5.17 kB
FortiGate Cloud Sandbox	0 B
OCVPN	0 B
SDNS	0 B
FortiToken Registration	0 B
SMS Service	0 B

Additional Information

API Preview

Edit in CLI

Local Out Setting

Documentation

Apply


**To verify the FortiGuard license entitlement in the CLI:**

```
# diagnose autoupdate versions
...
Security Rating Data Package
-----
Version: 4.00008
Contract Expiry Date: Sun Jun 18 2023
Last Updated using scheduled update on Thu Jun 23 15:48:13 2022
Last Update Attempt: Thu Jun 23 15:48:13 2022
Result: Updates Installed
```


```
FDS Address
-----
173.243.140.6:443
```

The following notifications are visible in the GUI.


- Warning message: if the security rating result indicates a vulnerability with a critical severity, then the FortiOS GUI displays a warning message in the header and a new notification under the bell icon. The *View Vulnerability* link appears in the header for global administrators.

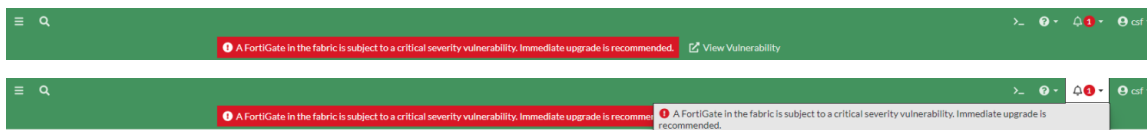


Clicking the warning message redirects to the *System > Fabric Management* page, where users are encouraged to update any affected Fortinet Fabric devices to the latest firmware releases to resolve the critical vulnerabilities.

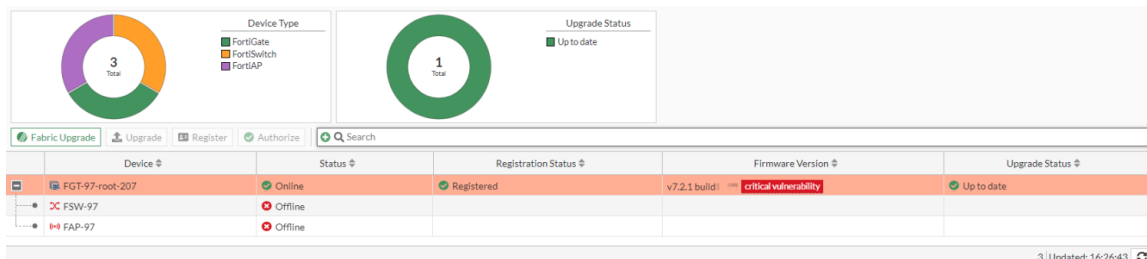

- Security Rating* page: when a failed result is selected, the security panel provides a description of the PSIRT vulnerability for failed results.

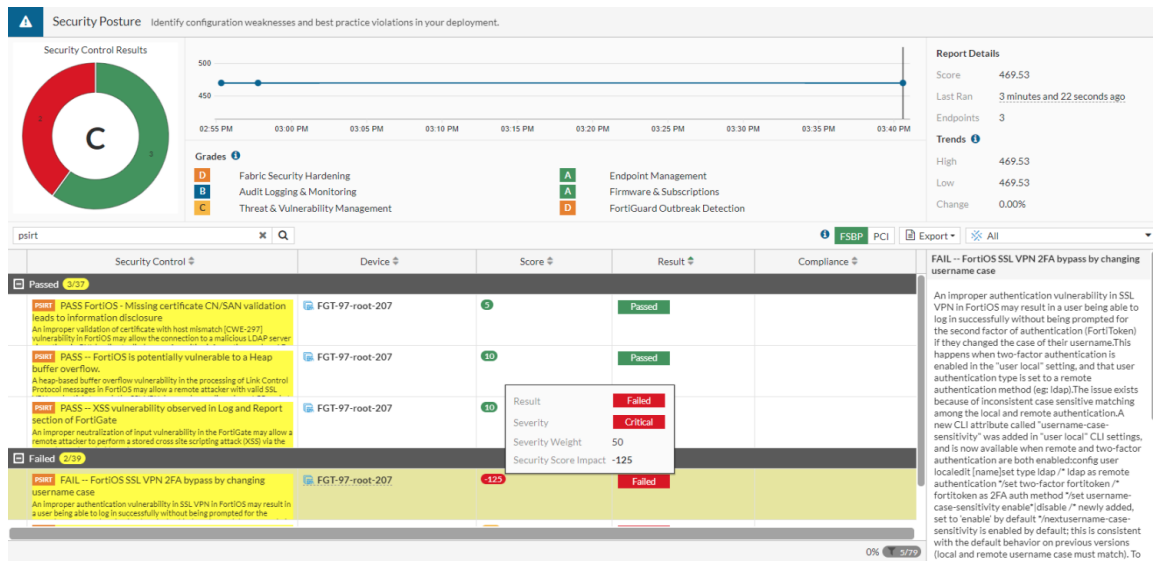


The **Recommendations** section includes a link to the **System > Fabric Management** page to update the firmware.

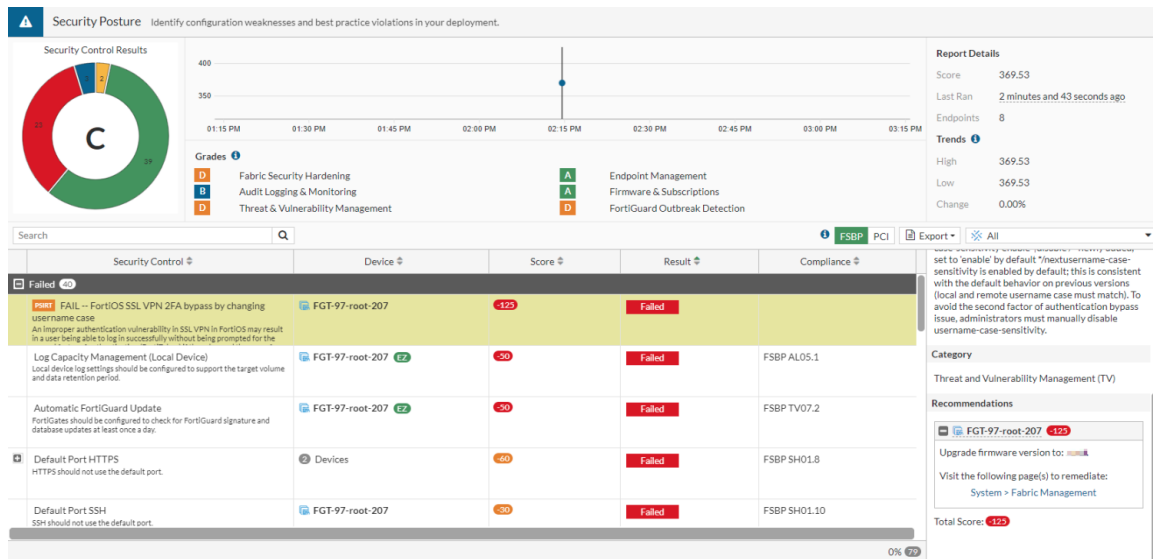

In the search bar, use PSIRT keywords to filter for PSIRT vulnerabilities.

- Tooltip: a tooltip for the **critical vulnerability** label on the **System > Fabric Management** page lists the vulnerability, and it links to the **Security Fabric > Security Rating** page where more details about the vulnerability are displayed.

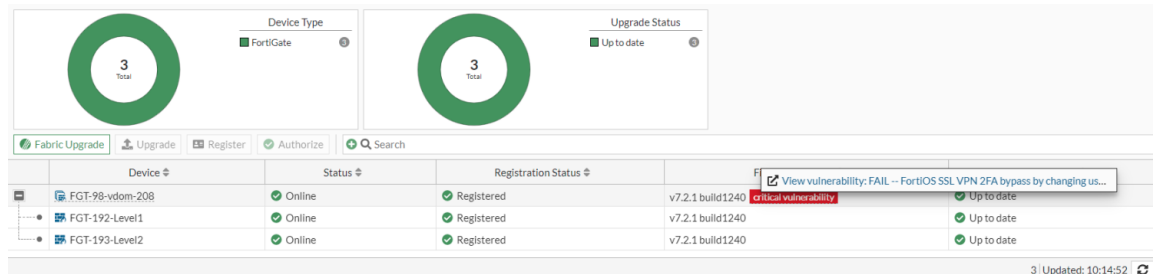





## FortiGuard IoT vulnerability-related checks

There are two rating checks in the *Security Posture* report related to IoT vulnerabilities:

- The *FortiGuard IoT Detection Subscription* rating check will pass if the *System > FortiGuard* page shows that the *IoT Detection Service* is licensed. In this example, the result is marked as *Passed* because the license is valid.

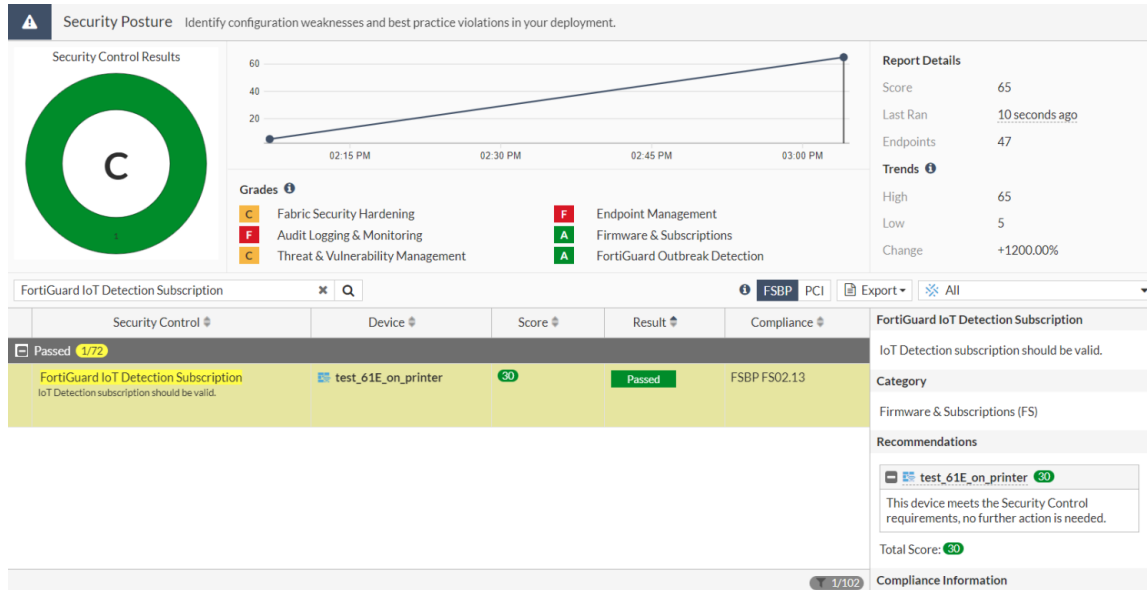


- The *FortiGuard IoT Vulnerability* rating check will fail if any IoT vulnerabilities are found. In this example, the result is marked as *Failed* because there is a device with IoT vulnerabilities.

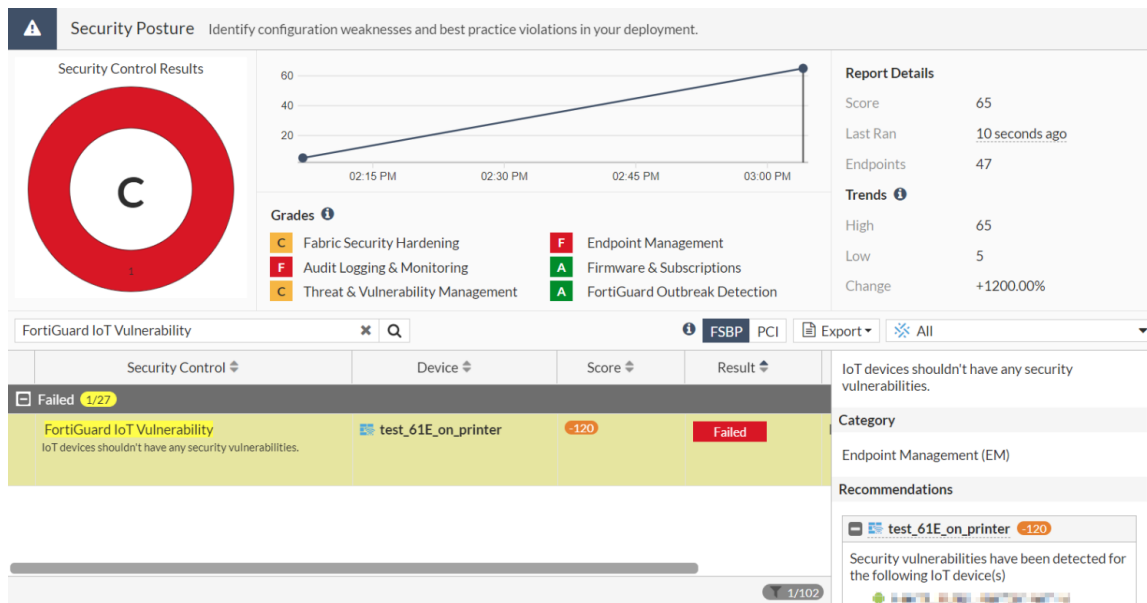

In the *Recommendations* section, hover over the device name to display the tooltip, which includes an option to

### View IoT Vulnerabilities.

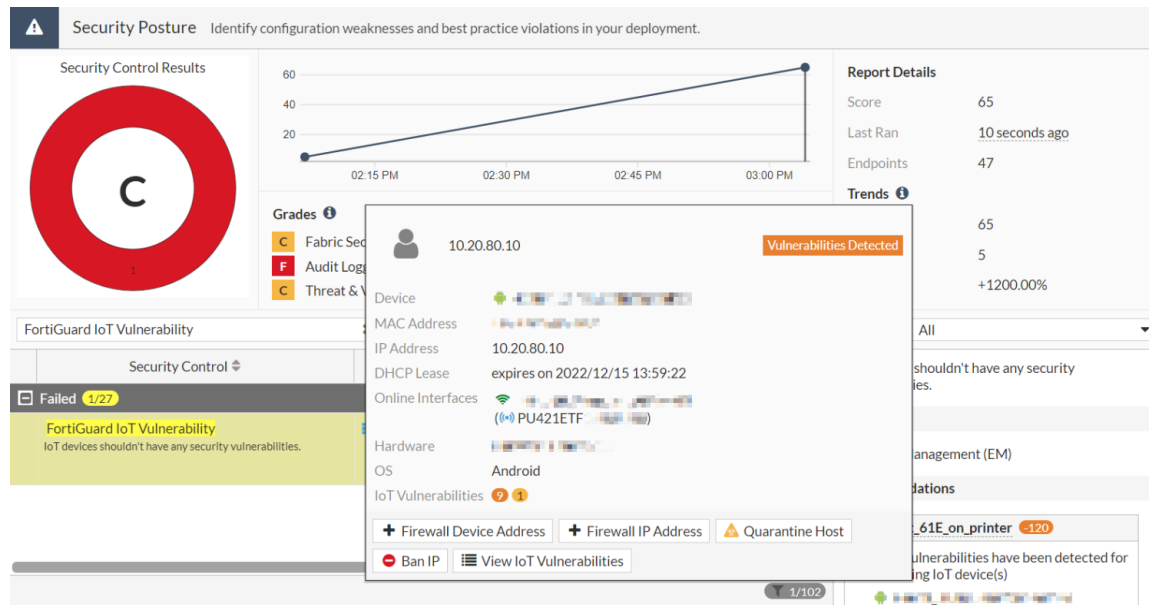

To detect IoT vulnerabilities, the FortiGate must have a valid IoT Detection Service license, device detection must be configured on a LAN interface used by IoT devices, and a firewall policy with an application control sensor must be configured.

## Security rating check scheduling

Security rating checks by default are scheduled to run automatically every four hours.

### To disable automatic security checks using the CLI:

```
config system global
    security-rating-run-on-schedule disable
end
```

### To manually run a report using the CLI:

```
# diagnose report-runner trigger
```

## Opt out of ranking

Security rating scores can be submitted to FortiGuard for comparison with other organizations' scores, allowing a percentile score to be calculated. If you opt out of submitting your score, only an absolute score will be available.

### To opt out of submitting the score using the CLI:

```
config system global
    set security-rating-result-submission {enable | disable}
end
```

## Logging the security rating

The results of past security checks are available on the *Log & Report > System Events* page. Click the *Security Rating Events* card to see the detailed log.

Date/Time	Level	Log Description	Result	Security Score	Report	Log Details
24 minutes ago		Security Rating summary		+240	Fabric Coverage	<div>Log Details</div> <div>General</div> <div>Absolute Date/Time 2021/04/14 Time 09:37:49 Virtual Domain root Log Description Security Rating summary</div> <div>Security</div> <div>Level </div> <div>Security Rating</div> <div>Security Ranking ID 1618418249152 Security Rating Time 1618418269000 Report Fabric Coverage Security Score +240 Critical Count  High Count  Medium Count  Low Count  Passed Count </div> <div>Other</div> <div>Log event original timestamp 1618418269614653000 Timezone -0700 Log ID 0110052000 Type event Sub Type security-rating</div>
24 minutes ago		Security Rating summary		-395	Security Posture	
24 minutes ago		Security Rating summary		+20	Optimization	
4 hours ago		Security Rating summary		+240	Fabric Coverage	
4 hours ago		Security Rating summary		-395	Security Posture	
4 hours ago		Security Rating summary		+20	Optimization	
8 hours ago		Security Rating summary		+240	Fabric Coverage	
8 hours ago		Security Rating summary		-395	Security Posture	
8 hours ago		Security Rating summary		+20	Optimization	
12 hours ago		Security Rating summary		+240	Fabric Coverage	
12 hours ago		Security Rating summary		-395	Security Posture	
12 hours ago		Security Rating summary		+20	Optimization	
17 hours ago		Security Rating summary		+240	Fabric Coverage	
17 hours ago		Security Rating summary		-395	Security Posture	
17 hours ago		Security Rating summary		+20	Optimization	
21 hours ago		Security Rating summary		+240	Fabric Coverage	
21 hours ago		Security Rating summary		-395	Security Posture	
21 hours ago		Security Rating summary		+20	Optimization	

An event filter subtype can be created for the Security Fabric rating so event logs are created on the root FortiGate that summarize the results and show detailed information for the individual tests.

### To configure security rating logging using the CLI:


```
config log eventfilter
    set security-rating enable
end
```

## Multi VDOM mode


In multi VDOM mode, security rating reports can be generated in the Global VDOM for all of the VDOMs on the device. Administrators with read/write access can run the security rating report in the Global VDOM. Administrators with read-only access can only view the report.

On the report scorecards, the *Scope* column shows the VDOMs that the check was run on. On checks that support *Easy Apply*, the remediation can be run on all of the associated VDOMs.

Global scope:

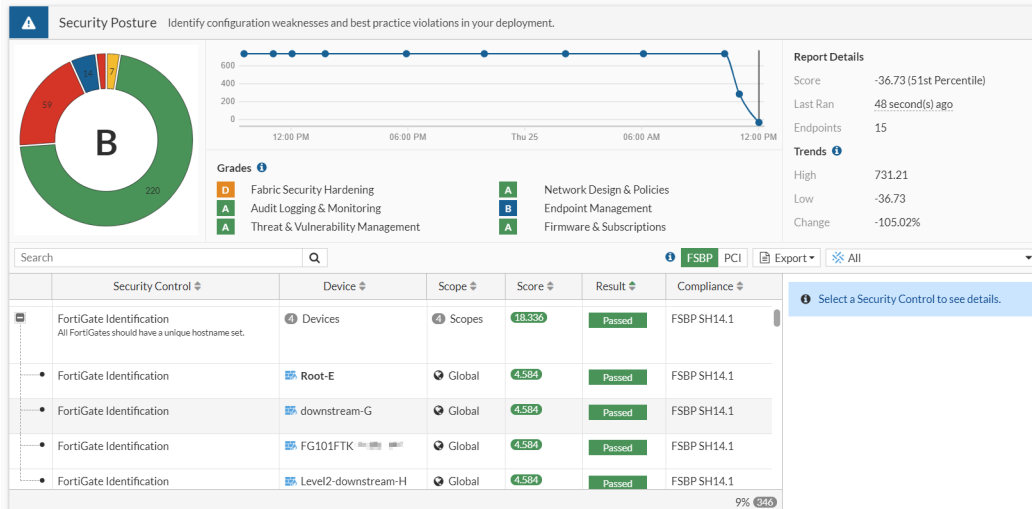

VDOM scope:

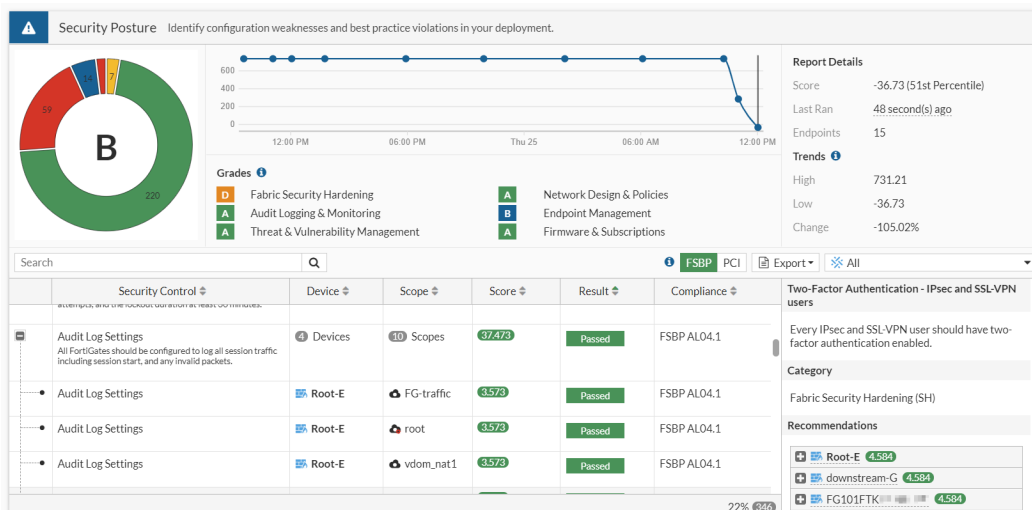

The security rating event log is available on the root VDOM.

## Security Fabric score

The Security Fabric score is calculated when a security rating check is run, based on the severity level of the checks that are passed or failed. A higher scores represents a more secure network. Points are added for passed checks and removed for failed checks.

Severity level	Weight (points)
Critical	50
High	25
Medium	10
Low	5

To calculate the number of points awarded to a device for a passed check, the following equation is used:

$$\text{score} = \frac{\text{<severity level weight>}}{\text{<\# of FortiGates>}} \times \text{<secure FortiGate multiplier>}$$

The secure FortiGate multiplier is determined using logarithms and the number of FortiGate devices in the Security Fabric.

For example, if there are four FortiGate devices in the Security Fabric that all pass the compatible firmware check, the score for each FortiGate device is calculated with the following equation:

$$\frac{50}{4} \times 1.292 = 16.15 \text{ points}$$

All of the FortiGate devices in the Security Fabric must pass the check in order to receive the points. If any one of the FortiGate devices fails a check, the devices that passed are not awarded any points. For the device that failed the check, the following equation is used to calculate the number of points that are lost:

$$\text{score} = \text{<severity level weight>} \times \text{<secure FortiGate multiplier>}$$

For example, if the check finds two critical FortiClient vulnerabilities, the score is calculated with the following equation:

$$-50 \times 2 = -100 \text{ points}$$

Scores are not affected by checks that do not apply to your network. For example, if there are no FortiAP devices in the Security Fabric, no points will be added or subtracted for the FortiAP firmware version check.

## Automation stitches

Automation stitches automate the activities between the different components in the Security Fabric, which decreases the response times to security events. Events from any source in the Security Fabric can be monitored, and action responses can be set up to any destination.

The automation settings can be synchronized within the Security Fabric, or can only apply to an individual FortiGate in the Security Fabric. Automation stitches can only be created on the root FortiGate in a Security Fabric.

### To configure automation setting synchronization in a Security Fabric:

```
config automation setting
    set fabric-sync {enable | disable}
end
```



Automation stitches can also be used on FortiGates that are not part of a Security Fabric.

An automation stitch consists of two parts: the trigger and the actions. The trigger is the condition or event on the FortiGate that activates the action, for example, a specific log, or a failed log in attempt. The action is what the FortiGate does in response to the trigger.

Automation stitches that use cloud-based actions (AWS Lambda, Azure Function, Google Cloud Function, and AliCloud Function) have the option to delay an action after the previous action is completed.

Diagnose commands are available in the CLI to test, log, and display the stitch history and settings.

## Creating automation stitches

To create an automation stitch, a trigger event and a response action or actions are selected. Automation stitches can be tested after they are created.

In the GUI, go to *Security Fabric > Automation* and click *Create New*. Automation stitches, actions, and triggers are configured in separate dialogs.

The stitch *Action execution* can be set to either *Sequential* or *Parallel*. In sequential execution, actions will execute one after another with a delay (if specified). If one action fails, then the action chain stops. This is the default setting. In parallel execution, all actions will execute immediately when the stitch is triggered.

When creating a stitch, clicking *Add Trigger* and *Add Action* displays a list of available triggers and actions, and the option to create a new one.

Once the stitch is configured, a process diagram of the trigger, actions, and delays is displayed. A delay can be added before an action if *Sequential* action execution is used. Executing the next action can be delayed by up to 3600 seconds (one hour).

**Create New Automation Stitch**

Name:

Status: ☒ Enable ☐ Disable

FortiGate(s):

Action execution: ☒ Sequential ☐ Parallel

Description:  15/255

**Stitch**

```

graph TD
    Trigger[Trigger  
aws_no_delay] --> Delay[Add delay  
60 Seconds]
    Delay --> Action1[Action  
aws_no_delay]
    Action1 --> Action2[Action  
email_action]
    Action2 --> AddAction[Add Action]
  
```

**Additional Information**

**Guides**

- [Chaining and delaying actions](#)
- [Execute a CLI script based on CPU and memory thresholds](#)
- [Default automation stitches](#)

**Documentation**

- [Online Help](#)
- [Video Tutorials](#)



Triggers and actions can be configured separately, and then added to an automation stitch.

The maximum number of automation stitches that are allowed to run concurrently can be configured in the CLI (32 - 256, default = 128).

#### To configure the maximum number of concurrent automation stitches:

```

config automation setting
    set max-concurrent-stitches <integer>
end
  
```

### Tabs on the Automation page

On the *Security Fabric > Automation* page, there are tabs for *Stitch*, *Trigger*, and *Action*. The *Stitch* tab is the default view that lists the trigger and actions used in each stitch. Individual triggers and actions can be created or edited in the corresponding tabs.

Stitch Trigger Action						
<a href="#">+ Create New</a> <a href="#">View</a> <a href="#">Delete</a> <a href="#">Clone</a> <input type="text" value="Search"/>						
Name	Status	Trigger	Actions	FortiGate(s)	Trigger Count	Last Triggered
<b>Compromised Host 2</b>						
Access_Layer_Quarantine	Enabled	Access_Layer_Quarantine	Access_Layer_Quarantine_quarantine	All FortiGates	0	
Compromised Host Quarantine	Enabled	Compromised Host Quarantine	Compromised Host Quarantine_quarantine Compromised Host Quarantine_quarantine-forticlient	All FortiGates	0	
<b>Configuration Change 1</b>						
Configuration_Change_Notification	Enabled	Configuration_Change_Notification	Configuration_Change_Notification_email Configuration_Change_Notification_ios-notification	All FortiGates	0	
<b>FortiOS Event Log 2</b>						
FortiAnalyzer Connection Down	Enabled	FortiAnalyzer Connection Down	FortiAnalyzer Connection Down_fortilexplorer-notification	All FortiGates	0	
Network Down	Disabled	Network Down	Network_Down_email	All FortiGates	0	
<b>HA Failover 1</b>						
HA Failover	Enabled	HA Failover	HA Failover_email	All FortiGates	0	
<b>Incoming Webhook 1</b>						
Incoming Webhook Quarantine	Enabled	Incoming Webhook Call	Compromised Host Quarantine_quarantine Compromised Host Quarantine_quarantine-forticlient	All FortiGates	0	
<b>License Expiry 1</b>						
License Expired Notification	Enabled	License Expired Notification	License Expired Notification_fortilexplorer-notification	All FortiGates	0	
0% <b>10</b> Updated: 11:39:36						

Click *Trigger* to view the list of triggers.

Stitch Trigger Action			
<a href="#">+ Create New</a> <a href="#">View</a> <a href="#">Delete</a> <a href="#">Clone</a> <input type="text" value="Search"/>			
Name	Details	Description	Ref
<b>Compromised Host 3</b>			
Access_Layer_Quarantine	SEVR High		1
Compromised Host Quarantine	SEVR High		1
MultiCloud_Quarantine_Compromised	SEVR High		0
<b>Configuration Change 1</b>			
Configuration_Change_Notification			1
<b>FortiAnalyzer Event Handler 2</b>			
Add_Malware_Providers_to_Blacklist	EVENT FOS_Automaton_Blacklist_Malware_Provider		0
MultiCloud_Quarantine_Botnet	EVENT Default-Botnet-Communication-Detection		0
<b>FortiOS Event Log 4</b>			
AWS_Log_Admin_Login_Fail	Admin login failed		0
AWS_Log_HA_Sync_Fail	HA secondary synchronization failed		0
FortiAnalyzer Connection Down	FortiAnalyzer connection down		1
Network Down	Interface status changed		1
<b>HA Failover 2</b>			
AWS_Log_HA_Failover			0
0% <b>22</b> Updated: 11:40:14			

Click *Action* to view the list of actions.



Stitch Trigger Action					
<a href="#">+ Create New</a> <a href="#">View</a> <a href="#">Delete</a> <a href="#">Clone</a> <input type="text" value="Search"/>					
Name	Details	Required	Trigger Count	Last Triggered	Ref.
<b>Access Layer Quarantine 2</b>					
Access_Layer_Quarantine_quarantine		No	0		1
Compromised Host Quarantine_quarantine		No	0		2
<b>Email 4</b>					
Configuration_Change_Notification_email	EMAIL admin@example.com	No	0		1
HA Failover_email		No	0		1
Network Down_email		No	0		1
Reboot_email		No	0		1
<b>FortiClient Quarantine 1</b>					
Compromised Host Quarantine_forticlient		No	0		2
<b>FortiExplorer Notification 3</b>					
FortiAnalyzer Connection Down_fortilexplorer-notification		No	0		1
License Expired Notification_fortilexplorer-notification		No	0		1
Security Rating Notification_fortilexplorer-notification		No	1	Hour ago	1
<b>FortiOS Notification 1</b>					
Configuration_Change_Notification_ios-notification		No	0		1

11 Updated: 11:40:35

## Sample configuration

The following example shows how to configure a Security Rating Summary automation stitch with AWS Lambda and Email actions. There is a 60-second delay before the Email action.

### To configure the automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name and description.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	<i>aws_no_delay</i>
<b>Report</b>	<i>Security Posture</i>

**Create New Automation Trigger**

**Security Rating Summary** A specified Security Rating report was generated. CHANGE TYPE

Name:

Description:

Security Rating Summary

Report:

OK Cancel

- d. Click **OK**.
  - e. Select the trigger in the list and click **Apply**.
4. Configure the AWS Lambda function action:
- a. Click **Add Action**.
  - b. Click **Create** and select **AWS Lambda**.
  - c. Enter the following:

<b>Name</b>	<i>aws_no_delay</i>
<b>URL</b>	Enter the request API URI
<b>API key</b>	Enter the API key
<b>HTTP header</b>	<i>header2 : header2_value</i>

**Create New Automation Action**

**AWS Lambda** Query an AWS Lambda function. CHANGE TYPE

Name:

Minimum Interval:  second(s)

Description:

AWS Lambda

URL:

API key:

HTTP header:

OK Cancel

- d. Click **OK**.
- e. Select the action in the list and click **Apply**.

5. Configure the Email notification action:

- a. Click *Add Action*.
- b. Click *Create* and select *Email*.
- c. Enter the following:

<b>Name</b>	<i>email_action</i>
<b>To</b>	Enter an email address
<b>Subject</b>	<i>email action for test</i>
<b>Replacement message</b>	Enable

Create New Automation Action

**Email** Send a custom email to the specified recipient(s). CHANGE TYPE

Name:

Minimum interval:  second(s)

Description:

Email

To:

Subject:

Body:

Replacement message: ☒ Edit %

Customize messages: ☐

OK Cancel

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
6. Click the *Add delay* located between both actions. Enter *60* and click *OK*.
7. Click *OK*.

**To configure the automation stitch in the CLI:**

1. Configure the trigger:

```
config system automation-trigger
  edit "aws_no_delay"
    set event-type security-rating-summary
  next
end
```

2. Configure the actions:

```
config system automation-action
  edit "aws_no_delay"
    set action-type aws-lambda
    set aws-api-key xxxxxxxxxxxx
    set uri "xxxxxxxxxx.execute-api.us-east-1.amazonaws.com/xxxxxxxxxx"
    config http-headers
```

```
        edit 1
            set key "header2"
            set value "header2_value"
        next
    end
next
edit "email_action"
    set action-type email
    set email-to "test@fortinet.com"
    set email-subject "email action for test"
    set replacement-message enable
next
end
```

### 3. Configure the stitch:

```
config system automation-stitch
    edit "aws_no_delay"
        set description "aws action test"
        set trigger "aws_no_delay"
        config actions
            edit 1
                set action "aws_no_delay"
                set required enable
            next
            edit 2
                set action "email_action"
                set delay 60
                set required enable
            next
        end
    next
end
```

## Testing automation stitches

In the GUI, go to *Security Fabric > Automation*, right-click on the automation stitch and select *Test Automation Stitch*.

In the CLI, enter `diagnose automation test <automation-stitch name>`.

## Default automation stitches

The following default automation stitches are included in FortiOS:

- Compromised Host Quarantine
- [Incoming Webhook Quarantine](#)
- HA Failover
- Network Down
- Reboot
- FortiAnalyzer Connection Down
- License Expired Notification
- Security Rating Notification

To view and edit the automation stitches in the GUI, go to *Security Fabric > Automation*.

Stitch Trigger Action						
<div> <div>+ Create New</div> <div>View</div> <div>Delete</div> <div>Clone</div> <div>Search</div> <div>Q</div> </div>						
Name	Status	Trigger	Actions	FortiGate(s)	Trigger Count	Last Triggered
<b>Compromised Host 1</b>						
Compromised Host Quarantine	Disabled	Compromised Host - High	Quarantine on FortiSwitch + FortiAP Quarantine FortiClient EMS Endpoint	All FortiGates	0	
<b>FortiOS Event Log 2</b>						
FortiAnalyzer Connection Down	Enabled	FortiAnalyzer Connection Down	FortiExplorer Notification	All FortiGates	0	
Network Down	Disabled	Network Down	Default Email	All FortiGates	0	
<b>HA Failover 1</b>						
HA Failover	Disabled	HA Failover	Default Email	All FortiGates	0	
<b>Incoming Webhook 1</b>						
Incoming Webhook Quarantine	Disabled	Incoming Webhook Call	Quarantine on FortiSwitch + FortiAP Quarantine FortiClient EMS Endpoint	All FortiGates	0	
<b>License Expiry 1</b>						
License Expired Notification	Enabled	License Expired Notification	FortiExplorer Notification	All FortiGates	0	
<b>Reboot 1</b>						
Reboot	Disabled	Reboot	Default Email	All FortiGates	0	
<b>Security Rating Summary 1</b>						
Security Rating Notification	Enabled	Security Rating Notification	FortiExplorer Notification	All FortiGates	0	
Updated: 17:09:59						

## CLI configurations

### Compromised Host Quarantine

```

config system automation-action
    edit "Quarantine on FortiSwitch + FortiAP"
        set description "Default automation action configuration for quarantining a MAC
address on FortiSwitches and FortiAPs."
        set action-type quarantine
    next
    edit "Quarantine FortiClient EMS Endpoint"
        set description "Default automation action configuration for quarantining a
FortiClient EMS endpoint device."
        set action-type quarantine-forticlient
    next
end

config system automation-trigger
    edit "Compromised Host - High"
        set description "Default automation trigger configuration for when a high severity
compromised host is detected."
    next
end

config system automation-stitch
    edit "Compromised Host Quarantine"
        set description "Default automation stitch to quarantine a high severity compromised
host on FortiAPs, FortiSwitches, and FortiClient EMS."
        set status disable
        set trigger "Compromised Host - High"
        config actions
            edit 1
                set action "Quarantine on FortiSwitch + FortiAP"
            next
        end
    next
end

```

```
        edit 2
            set action "Quarantine FortiClient EMS Endpoint"
        next
    end
next
end
```

### FortiAnalyzer Connection Down

```
config system automation-action
    edit "FortiExplorer Notification"
        set description "Default automation action configuration for sending a notification
to any FortiExplorer mobile application."
        set action-type fortiexplorer-notification
    next
end

config system automation-trigger
    edit "FortiAnalyzer Connection Down"
        set description "Default automation trigger configuration for when the FortiAnalyzer
connection is lost."
        set event-type event-log
        set logid 22902
    next
end

config system automation-stitch
    edit "FortiAnalyzer Connection Down"
        set description "Default automation stitch to send a FortiExplorer notification when
the connection to FortiAnalyzer is lost."
        set trigger "FortiAnalyzer Connection Down"
        config actions
            edit 1
                set action "FortiExplorer Notification"
            next
        end
    next
end
```

### Network Down

```
config system automation-action
    edit "Default Email"
        set description "Default automation action configuration for sending an email with
basic information on the log event."
        set action-type email
        set email-subject "%log.logdesc%"
    next
end

config system automation-trigger
    edit "Network Down"
        set description "Default automation trigger configuration for when a network
connection goes down."
        set event-type event-log
        set logid 20099
        config fields
```

```
        edit 1
            set name "status"
            set value "DOWN"
        next
    end
next
end

config system automation-stitch
    edit "Network Down"
        set description "Default automation stitch to send an email when a network goes
down."
        set status disable
        set trigger "Network Down"
        config actions
            edit 1
                set action "Default Email"
            next
        end
    next
end
```

## HA Failover

```
config system automation-action
    edit "Default Email"
        set description "Default automation action configuration for sending an email with
basic information on the log event."
        set action-type email
        set email-subject "%log.logdesc%"
    next
end

config system automation-trigger
    edit "HA Failover"
        set description "Default automation trigger configuration for when an HA failover
occurs."
        set event-type ha-failover
    next
end

config system automation-stitch
    edit "HA Failover"
        set description "Default automation stitch to send an email when a HA failover is
detected."
        set status disable
        set trigger "HA Failover"
        config actions
            edit 1
                set action "Default Email"
            next
        end
    next
end
```

### Incoming Webhook Quarantine

```
config system automation-action
  edit "Quarantine on FortiSwitch + FortiAP"
    set description "Default automation action configuration for quarantining a MAC
address on FortiSwitches and FortiAPs."
    set action-type quarantine
  next
  edit "Quarantine FortiClient EMS Endpoint"
    set description "Default automation action configuration for quarantining a
FortiClient EMS endpoint device."
    set action-type quarantine-forticlient
  next
end

config system automation-trigger
  edit "Incoming Webhook Call"
    set description "Default automation trigger configuration for an incoming webhook."
    set event-type incoming-webhook
  next
end

config system automation-stitch
  edit "Incoming Webhook Quarantine"
    set description "Default automation stitch to quarantine a provided MAC address on
FortiAPs, FortiSwitches, and FortiClient EMS using an Incoming Webhook."
    set trigger "Incoming Webhook Call"
    config actions
      edit 1
        set action "Quarantine on FortiSwitch + FortiAP"
      next
      edit 2
        set action "Quarantine FortiClient EMS Endpoint"
      next
    end
  next
end
```

### License Expired Notification

```
config system automation-action
  edit "FortiExplorer Notification"
    set description "Default automation action configuration for sending a notification
to any FortiExplorer mobile application."
    set action-type fortiexplorer-notification
  next
end

config system automation-trigger
  edit "License Expired Notification"
    set description "Default automation trigger configuration for when a license is near
expiration."
    set event-type license-near-expiry
    set license-type any
  next
end
```



```
config system automation-stitch
  edit "License Expired Notification"
    set description "Default automation stitch to send a FortiExplorer notification when
a license is near expiration."
    set trigger "License Expired Notification"
    config actions
      edit 1
        set action "FortiExplorer Notification"
      next
    end
  next
end
```

## Reboot

```
config system automation-action
  edit "Default Email"
    set description "Default automation action configuration for sending an email with
basic information on the log event."
    set action-type email
    set email-subject "%log.logdesc%"
  next
end

config system automation-trigger
  edit "Reboot"
    set description "Default automation trigger configuration for when a FortiGate is
rebooted."
    set event-type reboot
  next
end

config system automation-stitch
  edit "Reboot"
    set description "Default automation stitch to send an email when a FortiGate is
rebooted."
    set status disable
    set trigger "Reboot"
    config actions
      edit 1
        set action "Default Email"
      next
    end
  next
end
```

## Security Rating Notification

```
config system automation-action
  edit "FortiExplorer Notification"
    set description "Default automation action configuration for sending a notification
to any FortiExplorer mobile application."
    set action-type fortiexplorer-notification
  next
end
```

```

config system automation-trigger
    edit "Security Rating Notification"
        set description "Default automation trigger configuration for when a new Security
Rating report is available."
        set event-type security-rating-summary
        set report-type any
    next
end

config system automation-stitch
    edit "Security Rating Notification"
        set description "Default automation stitch to send a FortiExplorer notification when
a new Security Rating report is available."
        set trigger "Security Rating Notification"
        config actions
            edit 1
                set action "FortiExplorer Notification"
            next
        end
    next
end


```

## Incoming Webhook Quarantine stitch

The Incoming Webhook Quarantine stitch for API calls to the FortiGate accepts multiple parameters (MAC address and FortiClient UUID) from an Incoming Webhook trigger, which enacts either the Access Layer Quarantine action (MAC address) or the FortiClient Quarantine action (FortiClient UUID). This is a default automation stitch included in FortiOS.

### To trigger the Incoming Webhook Quarantine stitch in the GUI:

1. Create a new API user:
  - a. Go to *System > Administrators*.
  - b. Click *Create New > REST API Admin*.
  - c. Configure the *New REST API Admin* settings, and copy the API key to the clipboard.

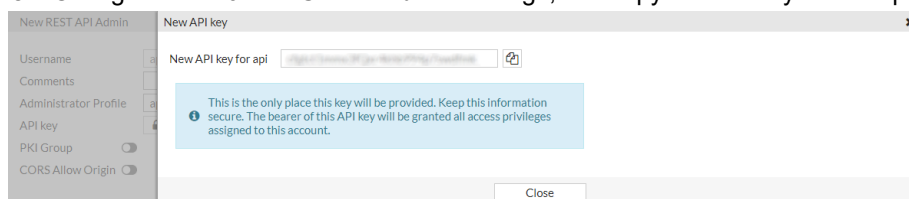

2. Enable the stitch:
  - a. Go to *Security Fabric > Automation*.
  - b. Under *Incoming Webhook*, right-click *Incoming Webhook Quarantine*, and select *Select Status > Enable*.
3. Get the sample cURL request:
  - a. Click the *Trigger* trigger tab.
  - b. Under *Incoming Webhook*, right-click *Incoming Webhook Call*, and select *Edit*.

- c. In the *API admin key* field, enter the API key you recorded previously. The *Sample cURL request* field updates.

The screenshot shows the 'Edit Automation Trigger' window for an 'Incoming Webhook'. The window has a title bar 'Edit Automation Trigger' and a subtitle 'Incoming Webhook An incoming webhook has been triggered.' Below the subtitle, there are fields for 'Name' (Incoming Webhook Call) and 'Description' (0/255). The 'Incoming Webhook' section contains a 'URL' field with the value 'https://172.16.116.226/api/v2/monitor/system/automation-stitch/webhook/Incoming Webhook Call' and an 'API admin key' field. The 'Sample cURL request' field contains the following text:

```
curl -k -X POST -H 'Authorization: Bearer
[redacted]' --data '{"srcip":
"1.1.1.1",
"mac": "11:11:11:11:11:11",
"fctuid":
[redacted]}'
https://172.16.116.226/api/v2/monitor/system/automation-stitch/webhook/Incoming Webhook Call
```

On the right side, there is an 'Additional Information' panel with links for 'API Preview', 'References', 'Edit in CLI', 'Guides', 'FortiAnalyzer Event Handler', 'Documentation', 'Online Help', and 'Video Tutorials'. At the bottom, there are 'OK' and 'Cancel' buttons.

- d. Copy the *Sample cURL request* to the clipboard.

- e. Click OK.

#### 4. Execute the request:

- a. Edit the sample cURL request you just copied.

- b. Add parameters to the data field ("mac" and "fctuid"), and then execute the request.

```
root@pc:~# curl -k -X POST -H 'Authorization: Bearer
cfgtctlmmx3fQxr4kxb994p7swdfmk' --data '{"mac": "0c:0a:00:0c:ce:b0", "fctuid":
"0000BB0B0ABD0D00B0D0A0B0E0F0B00B"}'
https://172.16.116.226/api/v2/monitor/system/automation-stitch/webhook/Incoming%20Webhook%20Quarantine
{
  "http_method": "POST",
  "status": "success",
  "http_status": 200,
  "serial": "FGT00E0Q00000000",
  "version": "v6.4.0",
  "build": 1545
}
```



Encode spaces in the automation stitch name with %20. For example,  
Incoming%20Webhook%20Quarantine

Once the automation stitch is triggered, the MAC address is quarantined by the FortiGate, and an event log is created. The FortiClient UUID is quarantined on the EMS server side.

#### To trigger the Incoming Webhook Quarantine stitch in the CLI:

1. Create a new API user and note the API key:

```
config system api-user
```

**2. Enable the automation stitch:**

```

config system api-user
  edit "api"
    set api-key *****
    set accprofile "api_profile"
    set vdom "root"
    config trusthost
      edit 1
        set ipv4-trusthost 10.6.30.0 200.200.200.0
      next
    end
  next
end

```

**3. Edit the cURL request to include parameters in the data field ("mac" and "fctuid"), then execute the request:**

```

root@pc56:~# curl -k -X POST -H 'Authorization: Bearer
cftgtclmmx0fQxr4kxb000p70wdfmk' --data '{ "mac": "0c:0a:00:0c:ce:b0", "fctuid":
"3000BB0B0ABD0D00B0D0A0B0E0F0B00B"}'
https://100.10.100.200/api/v2/monitor/system/automation-
stitch/webhook/Incoming%20Webhook%20Quarantine
{
  "http_method": "POST",
  "status": "success",
  "http_status": 200,
  "serial": "FGT80E0Q00000000",
  "version": "v6.4.0",
  "build": 1545
}

```



Encode spaces in the automation stitch name with %20. For example, Incoming%20Webhook%20Quarantine.

Once the automation stitch is triggered, the MAC address is quarantined by the FortiGate, and an event log is created. The FortiClient UUID is quarantined on the EMS server side.

**Sample log**

```

date=2020-02-14 time=15:37:48 logid="0100046600" type="event" subtype="system"
level="notice" vd="root" eventtime=1581723468644200712 tz="-0800" logdesc="Automation
stitch triggered" stitch="Incoming Webhook Quarantine" trigger="Incoming Webhook
Quarantine" stitchaction="Compromised Host Quarantine_quarantine,Compromised Host
Quarantine_quarantine-forticlient" from="log" msg="stitch:Incoming Webhook Quarantine is
triggered."

```

## Triggers

The following table outlines the available triggers.

Category	Trigger	Description
Security Fabric		

Category	Trigger	Description
	<b>Compromised Host</b>	An indicator of compromise (IoC) is detected on a host endpoint. Additional actions are available only for <i>Compromised Host</i> triggers: <ul style="list-style-type: none"> <li>• Access Layer Quarantine</li> <li>• FortiClient Quarantine</li> <li>• VMware NSX Security Tag</li> <li>• IP Ban</li> </ul>
	<b>Fabric Connector Event</b>	An event has occurred on a specific Fabric connector. See <a href="#">Fabric connector event trigger on page 2757</a> for details.
	<b>FortiAnalyzer Event Handler</b>	The specified FortiAnalyzer event handler has occurred. See <a href="#">FortiAnalyzer event handler trigger on page 2752</a> for details.
	<b>FortiGate Cloud-Based IOC</b>	IOC detection from the FortiGate Cloud IOC service. This option requires an IOC license, a web filter license, and FortiCloud logging must be enabled.
	<b>FortiGate Cloud Event Handler</b>	The specified FortiGate Cloud event handler has occurred. This option requires a FortiGate Cloud log retention license.
	<b>Security Rating Summary</b>	A summary is available for a recently run Security Rating report. Options include: <ul style="list-style-type: none"> <li>• Security Posture</li> <li>• Fabric Coverage</li> <li>• Optimization</li> <li>• Any</li> </ul>
<b>System</b>		
	<b>AV &amp; IPS DB Update</b>	The antivirus and IPS database is updating.
	<b>Configuration Change</b>	A FortiGate configuration change has occurred.
	<b>Conserve Mode</b>	A FortiGate entered conserve mode due to low memory. See <a href="#">Execute a CLI script based on memory and CPU thresholds on page 2809</a> for an example.
	<b>HA Failover</b>	An HA failover is occurring.
	<b>High CPU</b>	A FortiGate has high CPU usage. See <a href="#">Execute a CLI script based on memory and CPU thresholds on page 2809</a> for an example.
	<b>License Expiry</b>	A FortiGuard license is expiring. The license type must be selected. Options include: <ul style="list-style-type: none"> <li>• FortiCare Support</li> <li>• FortiGuard Web Filter</li> <li>• FortiGuard AntiSpam</li> <li>• FortiGuard AntiVirus</li> <li>• FortiGuard IPS</li> <li>• FortiGuard Management Service</li> <li>• FortiGate Cloud</li> </ul>

Category	Trigger	Description
		<ul style="list-style-type: none"> <li>Any</li> </ul>
	<b>Local Certificate Expiry</b>	A local certificate is about to expire. See <a href="#">Certificate expiration trigger on page 2766</a> for an example.
	<b>Reboot</b>	A FortiGate is rebooting.
<b>Event Log Category</b>		
	<b>Anomaly Logs</b>	An anomalous event has occurred. See <a href="#">Event log category triggers on page 2763</a> for an example.
	<b>IPS Logs</b>	An IPS event has occurred.
	<b>SSH Logs</b>	An SSH event has occurred.
	<b>Traffic Violation</b>	A traffic policy has been violated.
	<b>Virus Logs</b>	A virus event has occurred.
	<b>Web Filter Violation</b>	A web filter policy has been violated.
<b>Miscellaneous</b>		
	<b>FortiOS Event Log</b>	The specified FortiOS log has occurred. Multiple event log IDs can be selected, and log field filters can be applied. See <a href="#">FortiOS event log trigger on page 2762</a> for an example.
	<b>Incoming Webhook</b>	An incoming webhook is triggered.
	<b>Schedule</b>	A scheduled monthly, weekly, daily, hourly, or one-time trigger. Set to occur on a specific minute of an specific hour on a specific day. When using the one-time trigger, set to occur on specific date and time in the future. See <a href="#">Schedule trigger on page 2769</a> for an example.

## FortiAnalyzer event handler trigger

You can trigger automation stitches based on FortiAnalyzer event handlers. This allows you to define rules based on complex correlations across devices, log types, frequencies, and other criteria.

To set up a FortiAnalyzer event handler trigger:

1. [Configure a FortiGate event handler on the FortiAnalyzer](#)
2. [Configure FortiAnalyzer logging on the FortiGate on page 2753](#)
3. [Configure an automation stitch that is triggered by a FortiAnalyzer event handler on page 2754](#)

## Configure a FortiGate event handler on the FortiAnalyzer

On the FortiAnalyzer, configure an event handler for the automation stitch. In this example, the event handler is triggered when an administrator logs in to the FortiGate. See [Creating a custom event handler](#) in the FortiAnalyzer Administration Guide for more information.

**To configure an event handler on the FortiAnalyzer:**

1. Go to *FortiSoC > Handlers > FortiGate Event Handlers*, and click *Create New*.
2. Configure an event handler with two conditions for the automation stitch:

<b>Log Type</b>	Event Log
<b>Log Subtype</b>	System
<b>Group By</b>	Device ID
<b>Logs match</b>	Any of the following conditions
<b>Log Field</b>	Level
<b>Match Criteria</b>	Equal To
<b>Value</b>	Information
<b>Log Field</b>	Action
<b>Match Criteria</b>	Equal To
<b>Value</b>	login

3. Configure the other settings as needed.

**Create New Handler**

Status: ☒ ON

Name: system-log-handler2

Description:

Devices: ☒ All Devices ☐ Specify

Subnets: ☒ All Subnets ☐ Specify

**Filters** +

**Filter 1** ☒ ON

Log Device Type: FortiGate

Log Type: Event Log (event)

Log Subtype: System (system)

Group By: Device ID (devid) +

Logs match: ☐ All ☒ Any of the following conditions

Log Field	Match Criteria	Value
Level (pri)	Equal To	Information
Action (action)	Equal To	login

Generic Text Filter: 0/1023

Generate Alert When: At least 1 Exact matches occurred over a period of 30 minutes

Event Message:

OK Cancel


4. Click **OK**.

**Configure FortiAnalyzer logging on the FortiGate**

See [Configuring FortiAnalyzer on page 2593](#) for more information.

### To configure FortiAnalyzer logging in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *FortiAnalyzer Logging* card.
2. In the *Settings > FortiAnalyzer* tab, ensure the *Status* is *Enabled*, and configure the settings as needed.

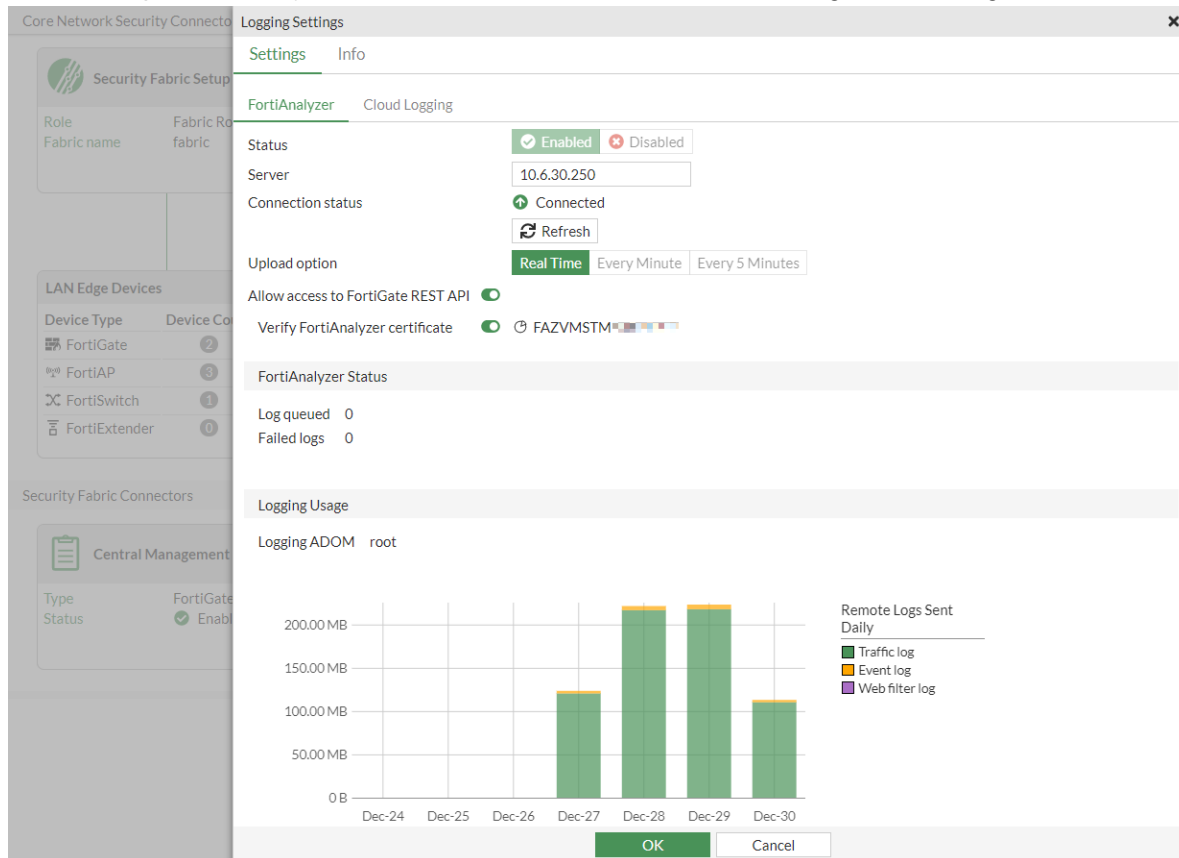

3. Click *OK*.

### To configure FortiAnalyzer logging in the CLI:

```
config log fortianalyzer setting
  set status enable
  set server "10.6.30.250"
  set serial "FL-4HET0000000000"
  set upload-option realtime
  set reliable enable
end
```

### Configure an automation stitch that is triggered by a FortiAnalyzer event handler

When a FortiAnalyzer event handler is triggered, it sends a notification to the FortiGate automation framework, which generates a log and triggers the automation stitch.


### To configure an automation stitch that is triggered by a FortiAnalyzer event handler in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name, *auto-faz-1*.



3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *FortiAnalyzer Event Handler*.
  - c. Enter the following:

<b>Name</b>	auto-faz-1
<b>Event handler name</b>	system-log-handler2
<b>Event severity</b>	Medium
<b>Event tag</b>	User login successful

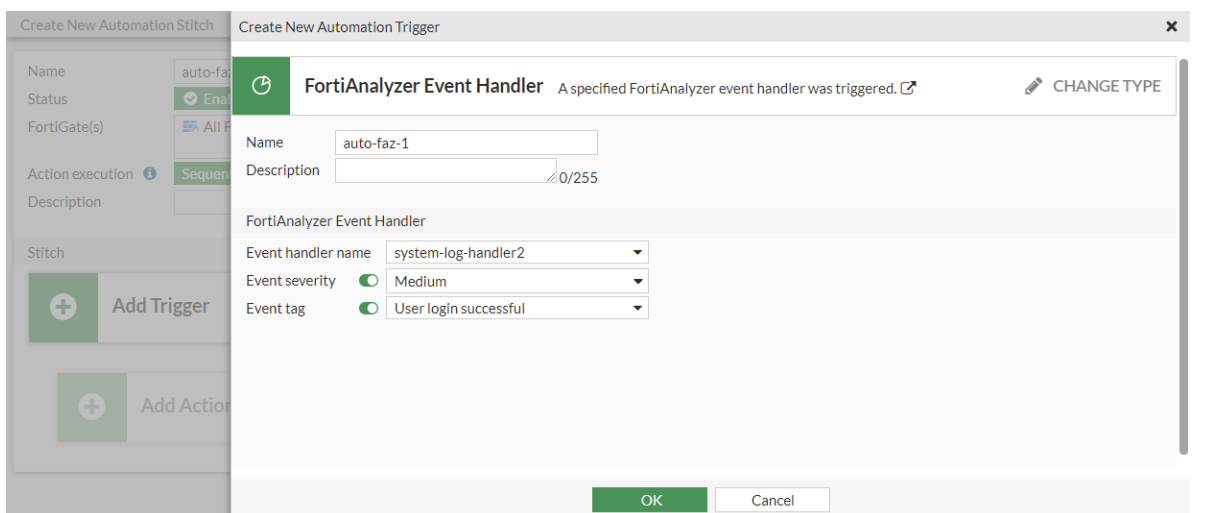- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the Email notification action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Email*.
  - c. Enter the following:

<b>Name</b>	auto-faz-1_email
<b>To</b>	Enter an email address
<b>Subject</b>	CSF stitch alert
<b>Body</b>	User login FortiGate successfully.

The screenshot shows the 'Create New Automation Action' dialog box in the Fortinet Security Fabric GUI. The dialog is titled 'Create New Automation Action' and has a close button (X) in the top right corner. On the left, there is a sidebar with a 'Trigger' button and an 'Add Action' button. The main area is divided into two sections: 'Email' (selected) and 'CHANGE TYPE'. The 'Email' section contains the following fields:

- Name:** auto-faz-1\_email
- Minimum interval:** 0 second(s)
- Description:** (empty field, 0/255 characters)
- Email:**
  - To:** admin@fortinet.com
  - Subject:** CSF stitch alert
  - Body:** User login FortiGate successfully.
  - Replacement message:** (toggle switch is off)

At the bottom of the dialog, there are 'OK' and 'Cancel' buttons.

- d. Click **OK**.
  - e. Select the action in the list and click **Apply**.
5. Click **OK**.

### To configure an automation stitch that is triggered by a FortiAnalyzer event handler in the CLI:

1. Create an automation trigger:

```
config system automation-trigger
  edit "auto-faz-1"
    set event-type faz-event
    set faz-event-name "system-log-handler2"
    set faz-event-severity "medium"
    set faz-event-tags "User log in successful"
  next
end
```

2. Create an automation action:

```
config system automation-action
  edit "auto-faz-1_email"
    set action-type email
    set email-to "admin@fortinet.com"
    set email-subject "CSF stitch alert"
    set message "User login FortiGate successfully."
  next
end
```

3. Create the automation stitch:

```
config system automation-stitch
  edit "auto-faz-1"
    set trigger "auto-faz-1"
    config actions
      edit 1
        set action "auto-faz-1_email"
        set required enable
      next
    end
end
```

```

    next
end

```

## View the trigger event log

### To view the trigger event log in the GUI:

1. Log in to the FortiGate.  
The FortiAnalyzer sends a notification to the FortiGate automation framework, generates an event log on the FortiGate, and triggers the automation stitch.
2. Go to *Log & Report > System Events* and select *General System Events*. From the log location dropdown, select *FortiAnalyzer*.

### To view the trigger event log in the CLI:

```

# execute log display
...
date=2019-02-05 time=14:16:17 logid="0100046600" type="event" subtype="system"
level="notice" vd="root" eventtime=1549404977 logdesc="Automation stitch triggered"
stitch="auto-faz-1" trigger="auto-faz-1" from="log" msg="stitch:auto-faz-1 is triggered."
...

```

## Sample email

The email sent by the action will look similar to the following:



## Fabric connector event trigger

With the *Fabric Connector Event* trigger, any supported Fabric connector is able to trigger an automation stitch on the FortiGate based on a specific event defined on the Fabric connector. Currently, only FortiDeceptor 4.1 supports this trigger for the *Insider Threat*, *Notify Ban*, and *Notify Unban* events.

In the following example, an authorized FortiDeceptor in the Security Fabric deploys a decoy called ubuntu16 configured with SSH, SAMBA, HTTP, and HTTPS services.

This example assumes the Security Fabric is already configured. Refer to [Configuring the root FortiGate and downstream FortiGates](#) and [FortiDeceptor](#) for detailed configuration steps. On the root FortiGate, the *Allow downstream device REST API access* option must be enabled (`set downstream-access enable`). The minimum permission required for the selected *Administrator profile* is *Read/Write for User & Device* (`set authgrp read-write`).

Three stitches are configured, one for each FortiDeceptor trigger type:

Stitch name	Fabric connector event trigger	Actions
fortideceptor_threat	Insider threat	Email and IP ban
fortideceptor_ban	Notify ban	Email and IP ban
fortideceptor_unban	Notify unban	Email and CLI script

**To configure stitches with the Fabric connector event trigger in the GUI:****1. Configure the triggers:**

- a. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
- b. In the *Security Fabric* section, click *Fabric Connector Event* and enter the following:

<b>Name</b>	<i>fdc_Insider_Threat</i>
<b>Description</b>	<i>Insider_Threat</i>
<b>Connector</b>	Select the FortiDeceptor connector
<b>Event Name</b>	<i>Insider Threat</i>

- c. Click *OK*.
- d. Repeat these steps to create two more triggers with the following settings:

<b>Name</b>	<i>fdc_Notify_Ban</i>
<b>Description</b>	<i>Notify_Ban</i>
<b>Connector</b>	Select the FortiDeceptor connector
<b>Event Name</b>	<i>Notify Ban</i>

<b>Name</b>	<i>fdc_Notify_Unban</i>
<b>Description</b>	<i>Notify_Unban</i>
<b>Connector</b>	Select the FortiDeceptor connector
<b>Event Name</b>	<i>Notify Unban</i>

**2. Configure the actions:**

- a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
- b. In the *Security Response* section, click *IP Ban* and enter the name, *fdc\_ban-ip*.
- c. Click *OK*.
- d. Repeat these steps to create an *Email* (in the *Notifications* section) and a *CLI Script* (in the *General* section) action with the following settings:

<b>Email</b>	
<b>Name</b>	<i>email_log</i>
<b>To</b>	Enter an email address
<b>Subject</b>	<i>CSF stitch alert</i>

<b>CLI Script</b>	
<b>Name</b>	<i>fdc_unban</i>
<b>Script</b>	<i>diagnose user quarantine delete src4 %%log.srcip%%</i>
<b>Administrator profile</b>	<i>super_admin</i>

**3. Configure the *fortideceptor\_threat* stitch:**

- a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
  - b. Enter the name, *fortideceptor\_threat*.
  - c. Click *Add Trigger*. Select *fdc\_Insider\_Threat* and click *Apply*.
  - d. Click *Add Action*. Select *email\_log* and click *Apply*.
  - e. Click *Add Action*. Select *fdc\_ban-ip* and click *Apply*.
  - f. Click the *Add delay* located between both actions. Enter 5 and click *OK*.
  - g. Click *OK*.
4. Configure the *fortideceptor\_ban* stitch:
- a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
  - b. Enter the name, *fortideceptor\_ban*.
  - c. Click *Add Trigger*. Select *fdc\_Notify\_Ban* and click *Apply*.
  - d. Click *Add Action*. Select *email\_log* and click *Apply*.
  - e. Click *Add Action*. Select *fdc\_ban-ip* and click *Apply*.
  - f. Click the *Add delay* located between both actions. Enter 5 and click *OK*.
  - g. Click *OK*.
5. Configure the *fortideceptor\_unban* stitch:
- a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
  - b. Enter the name, *fortideceptor\_unban*.
  - c. Click *Add Trigger*. Select *fdc\_Notify\_Unban* and click *Apply*.
  - d. Click *Add Action*. Select *email\_log* and click *Apply*.
  - e. Click *Add Action*. Select *fdc\_unban* and click *Apply*.
  - f. Click the *Add delay* located between both actions. Enter 5 and click *OK*.
  - g. Click *OK*.

### To configure stitches with the Fabric connector event trigger in the CLI:

1. Configure the triggers:

```
config system automation-trigger
  edit "fdc_Insider_Threat"
    set description "Insider_Threat"
    set event-type fabric-event
    set serial "FDC-VMTM210000**"
    set fabric-event-name "insider_threat"
  next
  edit "fdc_Notify_Ban"
    set description "Notify_Ban"
    set event-type fabric-event
    set serial "FDC-VMTM210000**"
    set fabric-event-name "notify_ban"
  next
  edit "fdc_Notify_Unban"
    set description "Notify_Unban"
    set event-type fabric-event
    set serial "FDC-VMTM210000**"
    set fabric-event-name "notify_unban"
  next
end
```

**2. Configure the actions:**

```
config system automation-action
  edit "fdc_ban-ip"
    set action-type ban-ip
  next
  edit "fdc_unban"
    set action-type cli-script
    set script "diagnose user quarantine delete src4 %%log.srcip%"
    set output-size 10
    set timeout 0
    set accprofile "super_admin"
  next
  edit "email_log"
    set action-type email
    set email-to "*****@fortinet.com"
    set email-subject "CSF stitch alert"
  next
end
```

**3. Configure the stitches:**

```
config system automation-stitch
  edit "fortideceptor_threat"
    set trigger "fdc_Insider_Threat"
    config actions
      edit 1
        set action "email_log"
        set required enable
      next
      edit 2
        set action "fdc_ban-ip"
        set delay 5
        set required enable
      next
    end
  next
  edit "fortideceptor_ban"
    set trigger "fdc_Notify_Ban"
    config actions
      edit 1
        set action "email_log"
        set required enable
      next
      edit 2
        set action "fdc_ban-ip"
        set delay 5
        set required enable
      next
    end
  next
  edit "fortideceptor_unban"
    set trigger "fdc_Notify_Unban"
    config actions
      edit 1
        set action "email_log"
        set required enable
```

```

        next
    edit 2
        set action "fdc_unban"
        set delay 5
        set required enable
    next
end
next
end

```

## Verification

A device with IP 172.16.200.33 uses SSH to access the decoy (ubuntu16) deployed in the FortiDeceptor. The FortiDeceptor will detect the attacker IP 172.16.200.33, automatically quarantine it, and send the insider threat notification to the FortiGate. This notification will trigger the *fortideceptor\_threat* stitch due to the insider threat event trigger, so an email alert is sent and the attacker IP (172.16.200.33) is banned.

In FortiDeceptor, if the attacker IP (172.16.200.33) is manually blocked or unblocked, the FortiDeceptor will send out the internal block or unblock notification to FortiGate (see [Quarantine Status](#) for more details). This notification will trigger the *fortideceptor\_ban* or *fortideceptor\_unban* stitch due the notify ban or unban event trigger. An email alert is sent, and based on the event, the IP is banned or the CLI script runs to unban the IP.

### To view the quarantine details in FortiDeceptor:

#### 1. Go to *Fabric > Quarantine Status*.

##### a. Automatic quarantine:

Refresh

Block

Unblock

	Attacker IP	Start	End	Type	Integrated Device	Time Remaining	Status	Message
<input checked="" type="checkbox"/>	172.16.200.33	2022-01-05 15:5...	2022-01-05 15:5...	Auto quarantine	fabricupstream	0	Quarantine stopp...	
<input type="checkbox"/>	172.16.200.33	2022-01-05 15:3...	2022-01-05 15:3...	Manual quarantine	fabricupstream	0	Quarantine stopp...	Manual block by a...
<input type="checkbox"/>	172.16.200.33	2021-10-13 10:1...	2021-10-13 10:1...	Manual quarantine	fabricupstream	0	Quarantine failed	Manual block by a...

##### b. Manual block or unblock:

Refresh

Block

Unblock

	Attacker IP	Start	End	Type	Integrated Device	Time Remaining	Status	Message
<input checked="" type="checkbox"/>	172.16.200.33	2022-01-05 17:3...	2022-01-05 17:3...	Manual quarantine	fabricupstream	1m 57s	Quarantined	Manual block by a...
<input type="checkbox"/>	172.16.200.33	2022-01-05 15:5...	2022-01-05 15:5...	Auto quarantine	fabricupstream	0	Quarantine stopp...	
<input type="checkbox"/>	172.16.200.33	2022-01-05 15:3...	2022-01-05 15:3...	Manual quarantine	fabricupstream	0	Quarantine stopp...	Manual block by a...

### To confirm that the stitch was triggered in the FortiOS GUI:

#### 1. Go to *Security Fabric > Automation* and select the *Stitch* tab.

##### a. Triggered insider threat:

Stitch	Trigger	Action
Name	Status	Trigger
Fabric Connector Event		
fortideceptor_threat	Enabled	fdc_Insider_Threat
		email_log
		fdc_ban-ip
		All FortiGates
		3
		Hour ago

## b. Triggered notify ban or unban:

Stitch Trigger Action						
<a href="#">+ Create New</a> <a href="#">View</a> <a href="#">Delete</a> <a href="#">Clone</a> <input type="text" value="Search"/>						
Name	Status	Trigger	Actions	FortiGate(s)	Trigger Count	Last Triggered
Fabric Connector Event (2/3)						
fortideceptor_ban	Enabled	fdc_Notify_Ban	email_log fdc_ban-ip	All FortiGates	1	Hour ago
fortideceptor_unban	Enabled	fdc_Notify_Unban	email_log >... fdc_unban	All FortiGates	2	Hour ago

## To view the quarantined IP details in the FortiOS CLI:

```
# diagnose user banned-ip list
src-ip-addr      created              expires              cause
172.16.200.33    Wed Jan  5 15:57:41 2022 indefinite          Administrative
```

If the IP is unbanned by the stitch, the list will be empty:

```
# diagnose user quarantine list
src-ip-addr      created              expires              cause
```


## FortiOS event log trigger

You can configure a FortiOS event log trigger for when a specific event log ID occurs. You can select multiple event log IDs, and apply log field filters.

## To configure a FortiOS event log trigger in the GUI:

1. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
2. In the *Miscellaneous* section, click *FortiOS Event Log*.
3. Enter a name and description.
4. In the *Event* field, click the + to select multiple event log IDs.

The *Event* options correspond to the *Message Meaning* listed in the FortiOS Log Message Reference. Hover over an entry to view the tooltip that includes the event ID and log name. In this example, the *Admin login successful* event in the GUI corresponds to log ID 32001, which is *LOG\_ID\_ADMIN\_LOGIN\_SUCC*.

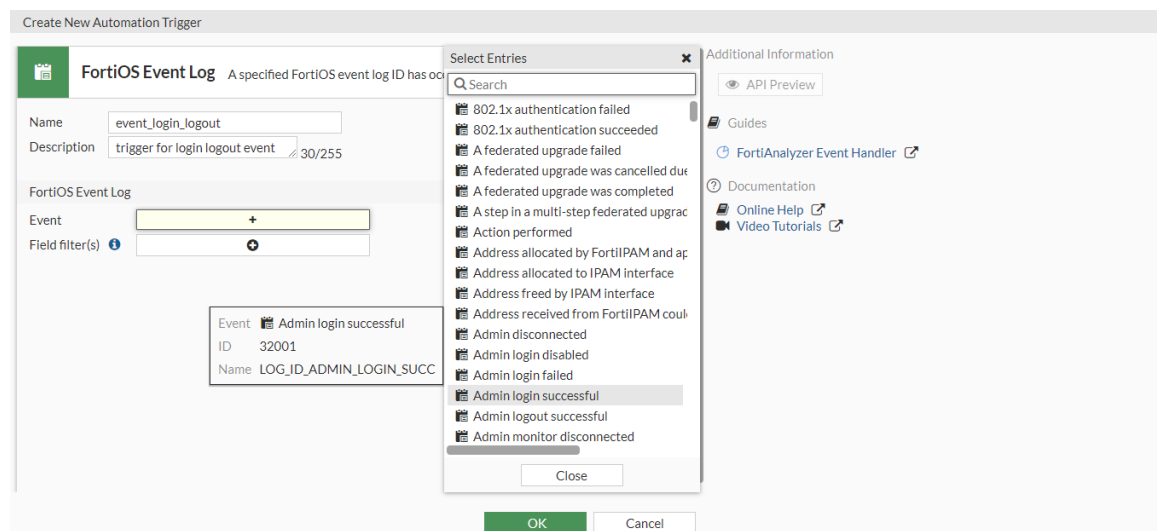



5. In the *Field filter(s)* field, click the + to add multiple field filters. The configured filters must match in order for the stitch to be triggered.
  - a. To view the list of available fields for a log, refer to the FortiOS Log Message Reference by appending the log ID to the document URL ([https://docs.fortinet.com/document/fortigate/7.2.6/fortios-log-message-reference/<log\\_ID>](https://docs.fortinet.com/document/fortigate/7.2.6/fortios-log-message-reference/<log_ID>)).

6. Click OK.

### To configure a FortiOS event log trigger in the CLI:

```
config system automation-trigger
  edit "event_login_logout"
    set description "trigger for login logout event"
    set event-type event-log
    set logid 32001 32003
    config fields
      edit 1
        set name "user"
        set value "csf"
      next
      edit 2
        set name "srcip"
        set value "10.6.30.254"
      next
    end
  next
end
```

## Event log category triggers

There are six automation triggers based on event log categories:

- Anomaly logs
- IPS logs
- SSH logs
- Traffic violations
- Virus logs
- Web filter violations

When multi VDOM mode is enabled, individual VDOMs can be specified so that the trigger is only applied to those VDOMs.

```
config system automation-trigger
  edit <name>
    set event-type {ips-logs | anomaly-logs | virus-logs | ssh-logs | webfilter-
violation | traffic-violation}
    set vdom <name>
  next
end
```

## Example

In this example, an automation stitch is created that uses an anomaly logs trigger and an email notification action. The trigger specifies which VDOMs should be used. There is a three-second delay between the trigger and action.

### To configure an automation stitch with the anomaly logs trigger in the GUI:

1. Configure the trigger:
  - a. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
  - b. In the *Event Log Category* section, click *Anomaly Logs*.
  - c. Enter a name (*anomaly-logs*) and add the required VDOMs (*root*, *vdom-nat*, *vdom-tp*).

- d. Click *OK*.
2. Configure the action:
  - a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
  - b. In the *Notifications* section, click *Email* and enter the following:

<b>Name</b>	<i>email_default_rep_message</i>
<b>To</b>	Enter an email address
<b>Subject</b>	<i>CSF stitch alert</i>
<b>Replacement message</b>	Enable

- c. Click *OK*.

3. Configure the stitch:
  - a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
  - b. Enter the name, *anomaly-logs-stitch*.
  - c. Click *Add Trigger*. Select *anomaly-logs* and click *Apply*.
  - d. Click *Add Action*. Select *email\_default\_rep\_message* and click *Apply*.
  - e. Click *Add delay* (between the trigger and action). Enter 3 and click *OK*.
  - f. Click *OK*.

### To configure an automation stitch with the anomaly logs trigger in the CLI:

1. Configure the trigger:

```
config system automation-trigger
  edit "anomaly-logs"
    set event-type anomaly-logs
    set vdom "root" "vdom-nat" "vdom-tp"
  next
end
```

2. Configure the action:

 
```
config system automation-action
  edit "email_default_rep_message"
    set action-type email
    set email-to "admin@fortinet.com"
    set email-subject "CSF stitch alert"
    set replacement-message enable
  next
end
```

3. Configure the stitch:

```
config system automation-stitch
  edit "anomaly-logs-stitch"
    set description "anomaly-logs"
    set trigger "anomaly-logs"
    config actions
      edit 1
        set action "email_default_rep_message"
        set delay 3
        set required enable
      next
    end
  next
end
```

### Verification

Once the anomaly log is generated, the automation stitch is triggered and the email notification is sent.



### To confirm that the stitch was triggered in the GUI:

1. Go to *Security Fabric > Automation* and select the *Stitch* tab.
2. Verify the *Last Triggered* column.

### To confirm that the stitch was triggered in the CLI:

```
# diagnose test application autod 2
...
stitch: anomaly-logs-stitch
       destinations: all
       trigger: anomaly-logs
              type: anomaly logs

       field ids:
              (id:6) vd=root, vdom=nat, vdom=tp

local hit: 1 relayed to: 0 relayed from: 0
actions:
       email_default_rep_message type:email interval:0
       delay:3 required:yes
       subject: CSF stitch alert
       body: %%log%%
       sender:
       mailto:admin@fortinet.com;
```

## Certificate expiration trigger

The local certificate expiry trigger (`local-certificate-near-expiry`) can be used in an automation stitch if a user-supplied local certificate used for SSL VPN, deep inspection, or other purpose is about to expire. This trigger relies on a VPN certificate setting in the CLI configuration setting for the certificate log expiring warning threshold:

```
config vpn certificate setting
    set cert-expire-warning <integer>
end
```

```
cert-expire-warning
  <integer>
```

Set the certificate log expiring warning threshold, in days (0 - 100, default = 14).

## Example

In this example, the local certificate expiry trigger is used with an email notification action to remind an administrator to re-sign or load a new local certificate to avoid any service interruptions. The local certificate, fw-cert-30-days, will expire in 30 days. The certificate log expiring warning threshold is set to 31 days.

### To configure the certificate log expiring warning threshold:

```
config vpn certificate setting
  set cert-expire-warning 31
end
```

### To configure an automation stitch with the local certificate expiry trigger in the GUI:

#### 1. Configure the trigger:

- a. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
- b. In the *System* section, click *Local Certificate Expiry*, and enter the following:

<b>Name</b>	<i>Local Cert Expired Notification</i>
<b>Description</b>	<i>Default automation trigger configuration for when a local certificate is near expiration.</i>

The screenshot shows the 'Edit Automation Trigger' dialog box. The title bar says 'Edit Automation Trigger'. The main content area has a header 'Local Certificate Expiry' with a sub-header 'A local certificate is about to expire.' Below this, there are two fields: 'Name' with the value 'Local Cert Expired Notification' and 'Description' with the value 'Default automation trigger configuration for when a local certificate is near expiration.' To the right of the description field is a small icon and the text '89/255'. On the right side of the dialog, there is a sidebar titled 'Additional Information' with links for 'API Preview', 'References', 'Edit in CLI', 'Guides', 'FortiAnalyzer Event Handler', 'Documentation', 'Online Help', and 'Video Tutorials'. At the bottom of the dialog are 'OK' and 'Cancel' buttons.

- c. Click *OK*.

#### 2. Configure the action:

- a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
- b. In the *Notifications* section, click *Email*, and enter the following:

<b>Name</b>	<i>email_no_rep_message</i>
<b>To</b>	Enter an email address.
<b>Subject</b>	<i>CSF stitch alert</i>

- c. Click *OK*.

#### 3. Configure the stitch:

- a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
- b. Enter the name, *cert-expiry*.

- c. Click *Add Trigger*. Select *Local Cert Expired Notification* and click *Apply*.
- d. Click *Add Action*. Select *email\_no\_rep\_message* and click *Apply*.
- e. Click *OK*.

### To configure an automation stitch with the local certificate expiry trigger in the CLI:

#### 1. Configure the trigger:

```
config system automation-trigger
  edit "Local Cert Expired Notification"
    set description "Default automation trigger configuration for when a local
certificate is near expiration."
    set event-type local-cert-near-expiry
  next
end
```

#### 2. Configure the action:

```
config system automation-action
  edit "email_no_rep_message"
    set action-type email
    set email-to "*****@fortinet.com"
    set email-subject "CSF stitch alert"
  next
end
```

#### 3. Configure the stitch:

```
config system automation-stitch
  edit "cert-expiry"
    set trigger "Local Cert Expired Notification"
    config actions
      edit 1
        set action "email_no_rep_message"
        set required enable
      next
    end
  next
end
```

### Verification

Once the event log is generated for the local certificate expiry, the automation stitch is triggered and the email notification is sent.



**To confirm that the stitch was triggered in the GUI:**

1. Go to *Security Fabric > Automation* and select the *Stitch* tab.
2. Verify the *Last Triggered* column.

Stitch Trigger Action						
<div> <div>Create New</div> <div>Edit</div> <div>Delete</div> <div>Clone</div> <div>Search</div> <div>Q</div> </div>						
Name	Status	Trigger	Actions	FortiGate(s)	Trigger Count	Last Triggered
<div>Local Certificate Expiry</div> <div>cert-expiry</div> <div>Enabled</div> <div>Local Cert Expired Notification</div> <div>email_no_rep_message</div> <div>All FortiGates</div> <div>1</div> <div>Minute ago</div>						

**To confirm that the stitch was triggered in the CLI:**

```
# diagnose test application autod 3
alert mail log count: 0

stitch: cert-expiry

    local hit: 1 relayed to: 0 relayed from: 0
    last trigger:Thu Jun 23 09:32:21 2022
    last relay:
    actions:
        email_no_rep_message:
            done: 1 relayed to: 0 relayed from: 0
            last trigger:Thu Jun 23 09:32:21 2022
            last relay:

logid to stitch mapping:
id:22207 local hit: 1 relayed hits: 0
cert-expiry
```

## Schedule trigger

The schedule automation trigger can be used for monthly, weekly, daily, hourly, or one-time triggers, including a one-time configuration backup to a disk, a reboot, or a shutdown.

```
config system automation-trigger
  edit <name>
    set trigger-type scheduled
    set trigger-frequency {hourly | daily | weekly | monthly | once}
    set trigger-hour <inetger>
    set trigger-minute <integer>
    set trigger-weekday {sunday | monday | tuesday | wednesday | thursday | friday |
saturday}
    set trigger-day <integer>
    set trigger-datetime <YYYY-MM-DD HH:MM:SS>
  next
end
```

```
trigger-frequency {hourly
| daily | weekly |
monthly | once}
```

Set the scheduled trigger frequency (default = daily).

```
trigger-hour <inetger>
```

Set the hour of the day on which to trigger (0 - 23, default = 1), available for daily, weekly, and monthly schedule.

<code>trigger-minute &lt;integer&gt;</code>	Set the minute of the hour on which to trigger (0 - 59, default = 0), available for hourly, daily, weekly, and monthly schedule.
<code>trigger-weekday {sunday   monday   tuesday   wednesday   thursday   friday   saturday}</code>	Set the day of the week to trigger, available for weekly schedule.
<code>trigger-day &lt;integer&gt;</code>	Set the day within a month to trigger, available for monthly schedule.
<code>trigger-datetime &lt;YYYY-MM-DD HH:MM:SS&gt;</code>	Set the trigger time in YYYY-MM-DD HH:MM:SS format for one-time triggers.

## Example


In this example, an automation stitch is created to trigger a one-time configuration backup to a disk. The backup will occur August 5, 2022 at 4:00 AM.

### To schedule a one-time automation stitch in the GUI:

1. Configure the trigger:
  - a. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
  - b. In the *Miscellaneous* section, click *Schedule*.
  - c. Enter a name (*schedule-once*) in the *Name* field.
  - d. In the *Frequency* dropdown list, select *Once*.
  - e. Select when the trigger will occur in the *Date/Time* fields.

- f. Click *OK*.
2. Configure the action:
    - a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
    - b. In the *General* section, click *System Action*.
    - c. Enter a name (*Backup config disk*) and an action description.
    - d. In the *Action* dropdown list, select *Backup configuration*.
    - e. Click *OK*.
  3. Configure the stitch:
    - a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
    - b. Enter the name, *backup-once*.
    - c. Click *Add Trigger*. Select *schedule-once* and click *Apply*.
    - d. Click *Add Action*. Select *Backup config disk* and click *Apply*.



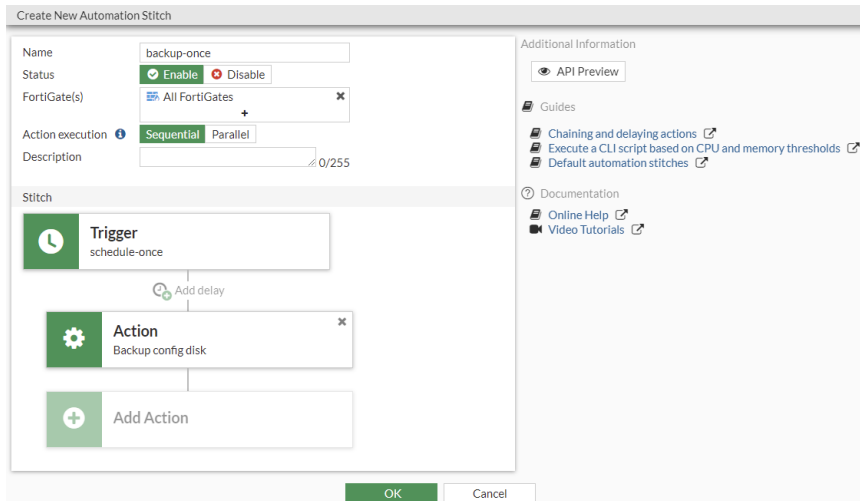

- e. Click **OK**. The backup configuration will occur once at the date and time you set.

### To schedule a one-time automation stitch in the CLI:

#### 1. Configure the trigger:

```
config system automation-trigger
  edit "schedule-once"
    set trigger-type scheduled
    set trigger-frequency once
    set trigger-datetime 2022-08-05 04:00:00
  next
end
```

#### 2. Configure the action:

```
config system automation-action
  edit "Backup config disk"
    set description "Default automation action configuration for backing up the
configuration on disk."
    set action-type system-actions
    set system-action backup-config
  next
end
```

#### 3. Configure the stitch:

```
config system automation-stitch
  edit "backup-once"
    set trigger "schedule-once"
    config actions
      edit 1
        set action "Backup config disk"
        set required enable
      next
    end
  next
end
```

#### 4. To view automation stitch information:

```
# diagnose test application autod 3
stitch: backup-once (scheduled)

    local hit: 0 relayed to: 0 relayed from: 0
    last trigger:    last relay:
    next scheduled trigger: Fri Aug  5 05:00:00 2022
    actions:
        backup config disk:
            done: 0 relayed to: 0 relayed from: 0
            last trigger:                last relay:

logid to stitch mapping:
id:0 (scheduled stitches) local hit: 0 relayed hits: 0
    backup-once
```

## Actions

The following table outlines the available actions. Multiple actions can be added to an automation stitch. Actions can be reorganized in the *Edit Automation Stitch* page by dragging and dropping the actions in the diagram.

Category	Action	Description
<b>Security Response</b>		
	<b>Access Layer Quarantine</b>	This option is only available for Compromised Host triggers. Quarantine the MAC address on access layer devices (FortiSwitch and FortiAP).
	<b>FortiClient Quarantine</b>	This option is only available for Compromised Host triggers. Use FortiClient EMS to block all traffic from the source addresses that are flagged as compromised hosts. Quarantined devices are flagged on the Security Fabric topology views. Go to the <i>Dashboard &gt; Users &amp; Devices &gt; Quarantine</i> widget to view and manage quarantined IP addresses.
	<b>FortiNAC Quarantine</b>	This option is only available for Compromised Host and Incoming Webhook triggers. Use FortiNAC to quarantine a client PC and disable its MAC address. See <a href="#">FortiNAC Quarantine action on page 2774</a> for details.
	<b>VMware NSX Security Tag</b>	This option is only available for Compromised Host triggers. If an endpoint instance in a VMware NSX environment is compromised, the configured security tag is assigned to the compromised endpoint. See <a href="#">VMware NSX security tag action on page 2777</a> and <a href="#">VMware NSX-T security tag action on page 2781</a> for details.
	<b>IP Ban</b>	This option is only available for Compromised Host triggers. Block all traffic from the source addresses flagged by the IoC. Go to the <i>Dashboard &gt; Users &amp; Devices &gt; Quarantine</i> widget to view and manage quarantined IP addresses.

Category	Action	Description
<b>Notifications</b>		
	<b>Email</b>	<p>Send a custom email message to the selected recipients. At least one recipient and an email subject must be specified.</p> <p>The email body can use parameters from logs or previous action results. Wrapping the parameter with %% will replace the expression with the JSON value for the parameter, for example:  %%results.source%% is the source property from the previous action.</p> <p>Replacement messages can be enabled in the email body to create branded email alerts. See <a href="#">Replacement messages for email alerts on page 2785</a> for details.</p>
	<b>FortiExplorer Notification</b>	<p>Send push notifications to FortiExplorer.</p> <p>The FortiGate must be registered to FortiCare on the mobile app that will receive the notification.</p>
	<b>Slack Notification</b>	Send a notification to a Slack channel. See <a href="#">Slack Notification action on page 2789</a> for details.
	<b>Microsoft Teams Notification</b>	Send a notification to channels in Microsoft Teams. See <a href="#">Microsoft Teams Notification action on page 2794</a> for details.
<b>Cloud Compute</b>		
	<b>AWS Lambda</b>	Send log data to an integrated AWS service. See <a href="#">AWS Lambda action on page 2799</a> for details.
	<b>Azure Function</b>	Send log data to an Azure function. See <a href="#">Azure Function action on page 2801</a> for details.
	<b>Google Cloud Function</b>	Send log data to a Google Cloud function. See <a href="#">Google Cloud Function action on page 2802</a> for details.
	<b>AliCloud Function</b>	Send log data to an AliCloud function. See <a href="#">AliCloud Function action on page 2804</a> for details.
<b>General</b>		
	<b>CLI Script</b>	Run one or more CLI scripts. See <a href="#">CLI script action on page 2806</a> for details. See <a href="#">Execute a CLI script based on memory and CPU thresholds on page 2809</a> for an example.
	<b>Webhook</b>	Send an HTTP request using a REST callback. See <a href="#">Webhook action on page 2815</a> for details, and <a href="#">Slack integration webhook on page 2828</a> and <a href="#">Microsoft Teams integration webhook on page 2830</a> for examples.
	<b>System Action</b>	Execute one of the following system actions: reboot, shut down, or back up the configuration. See <a href="#">System action on page 2832</a> for an example.
	<b>Alert</b>	Generate a FortiOS dashboard alert.

Category	Action	Description
		This option is only available in the CLI.
	<b>Disable SSID</b>	Disable the SSID interface. This option is only available in the CLI.

## FortiNAC Quarantine action

Users can configure an automation stitch with the FortiNAC Quarantine action with a Compromised Host or Incoming Webhook trigger. When the automation is triggered, the client PC will be quarantined and its MAC address is disabled in the configured FortiNAC.


In this example, the FortiNAC has been configured to join an enabled Security Fabric. See [Configuring FortiNAC on page 2644](#) for more information.

The FortiNAC must also be configured to isolate disabled hosts:

- Endpoints connecting to FortiWiFi or wired ports on FortiGate:
  - See the requisite *Configure FortiNAC* section in the [FortiGate Endpoint Management Integration Guide](#).
- Endpoints connecting to FortiAP:
  - Set the *Dead End VLAN*. See [Model configuration](#).
- Endpoints connecting to FortiSwitch:
  - Set the *Dead End VLAN*. See [Model configuration](#).
  - Add the switch to the physical address filtering group. See [Systems groups](#) and [Modify a group](#).

### To configure an automation stitch with a FortiNAC quarantine action in the GUI:

- Create a new API user and generate the API key:
  - Go to *System > Administrators* and click *Create New > REST API Admin*.
  - Configure the settings as needed.
  - Click *OK*. The *New API key* window opens.
  - Copy the key to the clipboard and click *Close*.

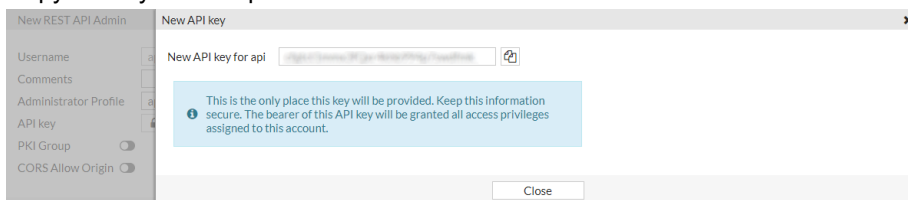

- Click *OK*.
- Configure the automation stitch trigger:
    - Go to *Security Fabric > Automation* and click *Create New*.
    - Enter the stitch name (*auto\_webhook*).
    - Click *Add Trigger*.
    - Click *Create* and select *Incoming Webhook*.
    - Enter a name (*auto\_webhook*).
    - Click *OK*.

- g. Paste the key in the *API admin key* field.

The screenshot shows two panels in the FortiNAC configuration interface. The 'Create New Automation Trigger' panel is titled 'Incoming Webhook' and contains fields for Name (auto\_webhook), Description, URL (https://172.17.48.225/api/v2/monitor/system/automation-stitch/webhook/auto\_webhook), API admin key, and Sample cURL request. A blue information box states: 'To trigger an automation stitch using this trigger, make an application/json POST request to this URL with the data you want to pass on to the automation action(s)'. The 'Incoming Webhook URL' panel shows the same URL and API admin key, with a sample cURL request: 'curl -k -X POST -H 'Authorization: Bearer ckx7d9xdzxx14Nztd1Ncr701dpwwy9' -data '{"srcip": "1.1.1.1", "mac": "00:0C:29:0B:A6:16", "fctuid": "A8BA0B12DA694E47BA4ADF24F8358E2F"}' https://172.17.48.225/api/v2/monitor/system/automation-stitch/webhook/auto\_webhook'. Both panels have an 'OK' button at the bottom.

- h. Click **OK**.

- i. Select the trigger in the list and click *Apply*.

3. Configure the automation stitch action:

- Click *Add Action*.
- Click *Create* and select *FortiNAC Quarantine*.
- Enter an action name (*auto\_webhook\_quarantine-fortinac*) and click **OK**.
- Select the action in the list and click *Apply*.
- Click **OK**.

4. On a Linux PC accessible by the FortiGate, create a cURL request to trigger the automation stitch:

```
root@pc56:~# curl -k -X POST -H 'Authorization: Bearer ckx7d9xdzxx14Nztd1Ncr701dpwwy9' -
-data '{"srcip": "1.1.1.1", "mac": "00:0C:29:0B:A6:16", "fctuid":
"A8BA0B12DA694E47BA4ADF24F8358E2F"}'
https://172.17.48.225:4431/api/v2/monitor/system/automation-stitch/webhook/auto_webhook
```

5. In FortiOS, verify the automation stitch is triggered and the action is executed:

- Go to *Log & Report > System Events* to confirm that the stitch was activated.
- Go to *Security Fabric > Automation* to see the last time that the stitch was triggered.

In FortiNAC, the *Host View* shows the status of the client PC. It is quarantined and its MAC address is disabled.

Hosts - Displayed: 1 Total: 7

Search PC34

Status	Host Name	Registered To	Logged On User	Host Role	Operating System	Host Created	Last Modified Date	Last M...
	PC34			NAC-Default	Microsoft Windows 7	06/19/20 04:24 AM PDT	06/19/20 09:51 AM PDT	SYSTEM
	IP Address	Physical Address	Media Type	Location	Connected Container	Actions		
		00:0C:29:0B:A6:16	Wired					

Import Export to: Options Add Modify Delete Enable Disable

**To configure an automation stitch with a FortiNAC quarantine action in the CLI:****1. Create a new API user and generate the API key:**

```
config system api-user
  edit "g-api-rw-user"
    set api-key *****
    set accprofile "super_admin"
    set vdom "root"
    config trusthost
      edit 1
        set ipv4-trusthost 10.6.30.0 255.255.255.0
      next
    end
  next
end
```

**2. Configure the automation trigger:**

```
config system automation-trigger
  edit "auto_webhook"
    set event-type incoming-webhook
  next
end
```

**3. Configure the automation action:**

```
config system automation-action
  edit "auto_webhook_quarantine-fortinac"
    set action-type quarantine-fortinac
  next
end
```

**4. Configure the automation stitch:**

```
config system automation-stitch
  edit "auto_webhook"
    set trigger "auto_webhook"
    config actions
      edit 1
        set action "auto_webhook_quarantine-fortinac"
        set required enable
      next
    end
  next
end
```

**5. On a Linux PC accessible by the FortiGate, create a cURL request to trigger the automation stitch:**

```
root@pc56:~# curl -k -X POST -H 'Authorization: Bearer ckx7d9xdzzx14Nztd1Ncr701dpwwy9' -
-data '{ "srcip": "1.1.1.1", "mac": "00:0C:29:0B:A6:16", "fctuid":
"A8BA0B12DA694E47BA4ADF24F8358E2F"}'
https://172.17.48.225:4431/api/v2/monitor/system/automation-stitch/webhook/auto_webhook
```

**6. In FortiOS, verify that the automation stitch is triggered and the action is executed:**

```
# diagnose test application autod 2
csf: enabled    root:yes
version:1592949233 sync time:Tue Jun 23 15:03:15 2020
```

```

total stitches activated: 1

stitch: auto_webhook
  destinations: all
  trigger: auto_webhook

      (id:15) service=auto_webhook

local hit: 1 relayed to: 0 relayed from: 0
actions:
  auto_webhook_quarantine-fortinac type:quarantine-fortinac interval:0

date=2020-06-23 time=15:25:44 logdesc="Internal Message" path="system" name="automation-
stitch" action="webhook" mkey="auto_webhook" srcip="1.1.1.1" mac="00:0C:29:0B:A6:16"
fctuid="A8BA0B12DA694E47BA4ADF24F8358E2F" vdom="root" service="auto_webhook"

date=2020-06-23 time=15:25:44 logid="0100046600" type="event" subtype="system"
level="notice" vd="root" eventtime=1592951144401490054 tz="-0700" logdesc="Automation
stitch triggered" stitch="auto_webhook" trigger="auto_webhook" stitchaction="auto_
webhook_quarantine-fortinac" from="log" msg="stitch:auto_webhook is triggered."

```

## VMware NSX security tag action

If an endpoint instance in a VMware NSX environment is compromised, this action will assign the configured security tag to the compromised endpoint.

This action is only available when the automation trigger is set to compromised host.

To set up the NSX quarantine action, you need to:

1. [Configure a VMware NSX SDN connector](#)
2. [Configure an NSX security tag automation stitch](#)
3. [Configure FortiAnalyzer logging on the FortiGate](#)

## Configure a VMware NSX SDN connector

The FortiGate retrieves security tags from the VMware NSX server through the connector.

### To configure a VMware NSX SDN connector in the GUI:

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.
3. Select *VMware NSX*.

#### 4. Configure the settings as needed.

**New External Connector**

**Private SDN**

vmware  
VMware NSX

**Connector Settings**

Name: nsx

Status: ☒ Enabled ☐ Disabled

Update interval: ☒ Use Default ☐ Specify

**NSX Connector**

IP / Hostname: 172.18.64.32

Username: admin

Password: .....

☐ vCenter Settings

**Additional Information**

**Public SDN Connector Setup Guides**

- [Amazon Web Services](#)
- [Google Cloud Platform](#)
- [Microsoft Azure](#)
- [Oracle Cloud Infrastructure](#)

**Private SDN Connector Setup Guides**

- [Cisco Application Centric Infrastructure](#)
- [Nuage Virtualized Services Platform](#)
- [OpenStack Connector](#)
- [VMware NSX](#)

**Documentation**

- [Online Help](#)
- [Video Tutorials](#)

#### 5. Click OK.

#### To configure a VMware NSX SDN connector in the CLI:

```
config system sdn-connector
  edit "nsx"
    set type nsx
    set server "172.18.64.32"
    set username "admin"
    set password xxxxxxxxxxxx
  next
end
```

### Configure an NSX security tag automation stitch

Security tags are retrieved from the VMware NSX server through the NSX SDN connector.

#### To configure an automation stitch with an NSX security tag in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*pcui-test*).
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Compromised Host*.
  - c. Enter the trigger name (*pcui-test*).
  - d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.



4. Configure the VMware NSX Security Tag action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *VMware NSX Security Tag*.
  - c. Enter the following:

<b>Name</b>	pcui-test_quarantine-nsx
<b>Specify NSX server(s)</b>	Enable and select the SDN connector
<b>Security tag</b>	Select an existing tag, or create a new one

The screenshot shows the 'Create New Automation Action' window. The title bar says 'Create New Automation Action'. The main content area has a green header 'NSX VMware NSX Security Tag' with a description 'Assign a specified security tag to a VMware endpoint device.' and a 'CHANGE TYPE' button. Below this, there are input fields for 'Name' (pcui-test\_quarantine-nsx) and 'Description' (0/255). A section titled 'VMware NSX Security Tag' contains two fields: 'Specify NSX server(s)' with a dropdown showing 'NSX NSX' and a plus icon, and 'Security tag' with a dropdown showing 'pcui-tag2'. At the bottom, there are 'OK' and 'Cancel' buttons. In the background, a 'Create New Automation Stitch' window is partially visible, showing a list of actions and a 'Trigger' button.

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
5. Click *OK*.

### To configure an automation stitch with an NSX security tag in the CLI:

1. Create the automation trigger:

```
config system automation-trigger
  edit "pcui-test"
  next
end
```

2. Create the automation action:

```
config system automation-action
  edit "pcui-test_quarantine-nsx"
  set action-type quarantine-nsx
  set security-tag "pcui-tag2"
  set sdn-connector "nsx"
  next
end
```

3. Create the automation stitch:

```
config system automation-stitch
  edit "pcui-test"
  set trigger "pcui-test"
  config actions
```

```

edit 1
    set action "pcui-test_quarantine-nsx"
    set required enable
next
end
next
end

```

## Configure FortiAnalyzer logging on the FortiGate

The FortiAnalyzer is used to send endpoint compromise notification to the FortiGate.

See [Configuring FortiAnalyzer on page 2593](#) for more information.

### To configure FortiAnalyzer logging in the GUI:

1. Go to *Security Fabric > Fabric Connectors* and double-click the *Logging & Analytics* card.
2. In the *Settings > FortiAnalyzer* tab, ensure the *Status* is *Enabled*, and configure the settings as needed.

The screenshot displays the 'Logging Settings' window for FortiAnalyzer. The 'Settings' tab is active, showing the 'FortiAnalyzer' configuration. The 'Status' is set to 'Enabled' (indicated by a green checkmark). The 'Server' field contains '10.6.30.250'. The 'Connection status' is 'Connected' (indicated by a green up arrow). The 'Upload option' is set to 'Real Time'. The 'Allow access to FortiGate REST API' is checked. The 'Verify FortiAnalyzer certificate' is checked, showing a certificate 'FAZVMSTM'. The 'FortiAnalyzer Status' section shows 'Log queued' as 0 and 'Failed logs' as 0. The 'Logging Usage' section shows a bar chart for 'Logging ADOM: root' with data for Dec-27, Dec-28, Dec-29, and Dec-30. The chart shows 'Traffic log' (green), 'Event log' (orange), and 'Web filter log' (purple). The 'Remote Logs Sent Daily' section shows a bar chart for 'Traffic log' (green), 'Event log' (orange), and 'Web filter log' (purple). The 'OK' button is highlighted.

3. Click **OK**.

### To configure FortiAnalyzer logging in the CLI:

```

config log fortianalyzer setting
    set status enable
    set server "172.18.64.234"
    set serial "FL-8HFT0000000000"

```


```

set upload-option realtime
set reliable enable
end

```

## When an endpoint instance is compromised

When an endpoint instance, such as *pcui-ubuntu2*, in the VMware NSX environment is compromised, the automation stitch is triggered. The FortiGate then assigns the configured security tag, *pcui-tag2* in this example, to the compromised NSX endpoint instance.

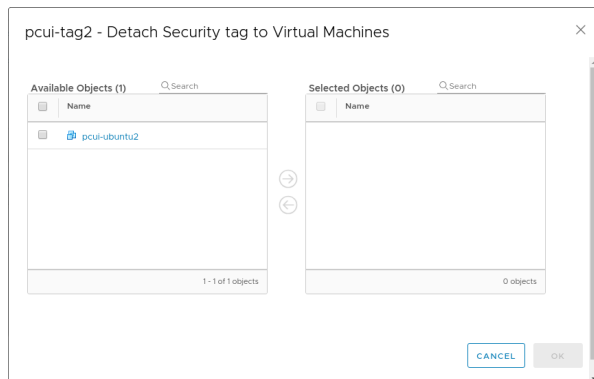

## VMware NSX-T security tag action

VMware NSX SDN connectors' vCenter server and credentials can be configured so the FortiGate resolves NSX-T VMs. The FortiGate uses the VMware NSX Security Tag automation action to assign a tag to the VM through an automation stitch.

The FortiGate is notified of a compromised host on the NSX-T network by an incoming webhook or other means, such as FortiGuard IOC. An automation stitch can be configured to process this trigger and action it by assigning a VMware NSX security tag on the VM instance.


### To configure an automation stitch to assign a security tag to NSX-T VMs in the GUI:

1. Configure the NSX SDN connector:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. Select *VMware NSX*.
  - c. Configure the connector settings.

- d. Enable *vCenter Settings* and configure as needed.

- e. Click **OK**.
2. Configure the automation stitch trigger:
- Go to *Security Fabric > Automation* and click *Create New*.
  - Enter the stitch name (*auto\_webhook*).
  - Click *Add Trigger*.
  - Click *Create* and select *Incoming Webhook*.
  - Enter a name (*auto\_webhook*).
  - Click **OK** to close the *Incoming Webhook URL* prompt.
  - Select the trigger in the list and click *Apply*.
3. Configure the automation stitch action:
- Click *Add Action*.
  - Click *Create* and select *VMware NSX Security Tag*.
  - Enter the following:

<b>Name</b>	auto_webhook_quarantine-nsx
<b>Specify NSX server(s)</b>	Enable and select the SDN connector
<b>Security tag</b>	Select an existing tag, or create a new one

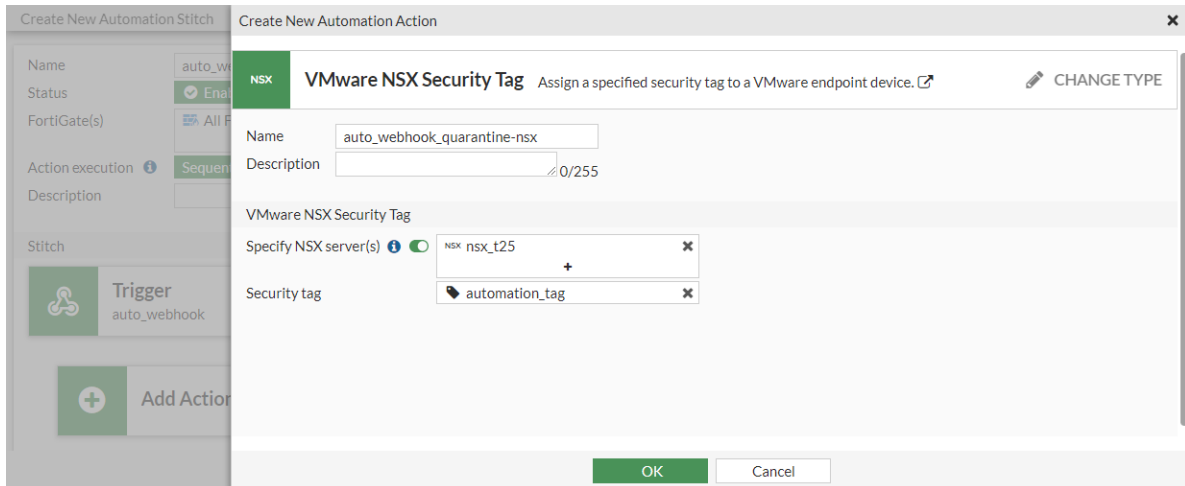

d. Click **OK**.


e. Select the action in the list and click **Apply**.

4. Click **OK**.

5. In NSX-T, create a cURL request to trigger the automation stitch on the FortiGate:

```
root@pc56:/home# curl -k -X POST -H 'Authorization: Bearer
3fdxNG08mgNg0fh4NQ51g1NQ1QHcx' --data '{ "srcip": "10.1.30.242" }'
https://172.16.116.230/api/v2/monitor/system/automation-stitch/webhook/auto_webhook
{
  "http_method": "POST",
  "status": "success",
  "http_status": 200,
  "serial": "FGVM08TM20000000",
  "version": "v6.4.0",
  "build": 1608
}
```

The automation stitch is triggered and the configured tag is added to the NSX-T VM.

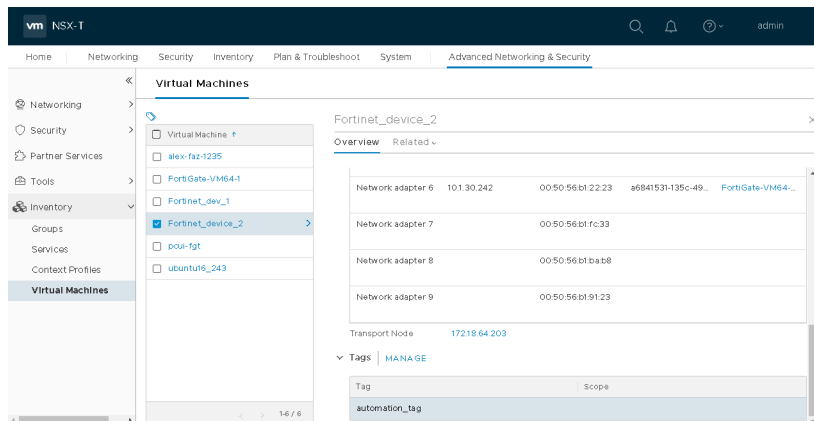

In FortiOS, the *Security Fabric > Automation* page shows the last trigger time.

+ Create New		Edit	Delete	Clone	Search	Q	Manage Components	
Name	Status	Trigger	Actions		FortiGate(s)	Trigger Count	Last Triggered	
Incoming Webhook 2								
Incoming Webhook Quarantine	Enabled	Incoming Webhook Call	Compromised Host Quarantine_quarantine Compromised Host Quarantine_quarantine-forticlient		All FortiGates	0		
auto_webhook	Enabled	auto_webhook	NSX auto_webhook_quarantine-nsx		All FortiGates	1	6 minutes ago	
						100% 2 Updated: 15:38:21		

## To configure an automation stitch to assign a security tag to NSX-T VMs in the CLI:

### 1. Configure the NSX SDN connector:

```
config system sdn-connector
  edit "nsx_t25"
    set type nsx
    set server "172.18.64.205"
    set username "admin"
    set password xxxxxxxxxxxx
    set vcenter-server "172.18.64.201"
    set vcenter-username "administrator@vsphere.local"
    set vcenter-password xxxxxxxxxxxx
  next
end
```

### 2. Configure the automation stitch:

```
config system automation-trigger
  edit "auto_webhook"
    set trigger-type event-based
    set event-type incoming-webhook
  next
end

config system automation-action
  edit "auto_webhook_quarantine-nsx"
    set action-type quarantine-nsx
    set security-tag "automation_tag"
    set sdn-connector "nsx_t25"
  next
end

config system automation-stitch
  edit "auto_webhook"
    set trigger "auto_webhook"
    config actions
      edit 1
        set action "auto_webhook_quarantine-nsx"
        set required enable
      next
    end
  next
end
```

### 3. In NSX-T, create a cURL request to trigger the automation stitch on the FortiGate:

```
root@pc56:/home# curl -k -X POST -H 'Authorization: Bearer 3fdxNG08mgNg0fh4NQ51g1NQ1QHcxx' --data '{ "srcip": "10.1.30.242" }' https://172.16.116.230/api/v2/monitor/system/automation-stitch/webhook/auto_webhook
```

```
{
  "http_method": "POST",
  "status": "success",
  "http_status": 200,
  "serial": "FGVM08TM20000000",
  "version": "v6.4.0",
  "build": 1608
}
```

**To verify the automation stitch is triggered and the action is executed:**

```
# diagnose test application autod 2

csf: enabled root:yes
version:1586883541 sync time:Tue Apr 14 11:04:05 2020

total stitches activated: 1

stitch: auto_webhook
destinations: all
trigger: auto_webhook

(id:15)service=auto_webhook

local hit: 1 relayed to: 0 relayed from: 0
actions:
auto_webhook_quarantine-nsx type:quarantine-nsx interval:0
security tag:automation_tag
sdn connector:
nsx_t25;
```

## Replacement messages for email alerts

Automation stitches with an Email action can leverage the formatting options provided by replacement messages to create branded email alerts.

You can enable a replacement message and edit the message body or select a customized replacement message group when you configure the automation action. When the automation stitch is triggered, the FortiGate will send the email with the defined replacement message.

In this example, a Security Rating report triggers an Email notification action. The email uses a customized replacement message group.


**To configure the replacement message group in the GUI:**

1. Go to *System > Replacement Message Groups* and click *Create New*.
2. Enter the following:

<b>Name</b>	group-sec1
<b>Group Type</b>	Security

3. Click *OK*.
4. Select the group in the list and click *Edit*.

5. Select *Automation Alert Email* and click *Edit*.

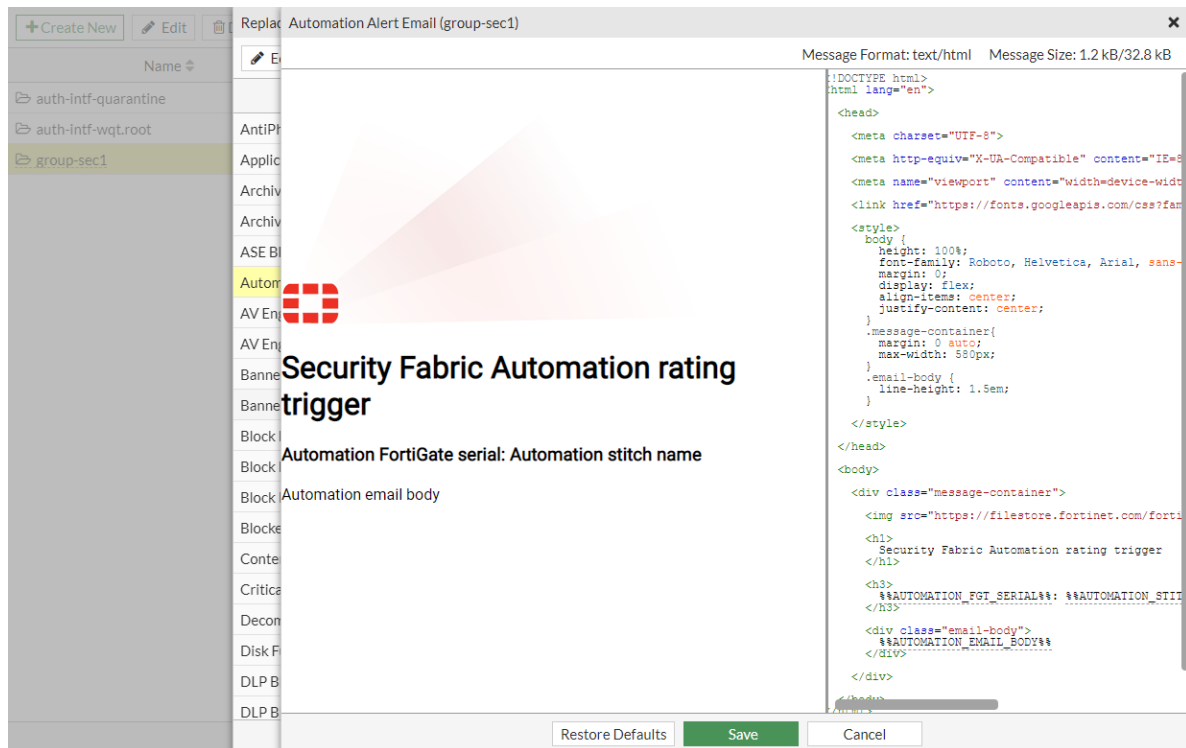

6. Edit the HTML code as needed, then click *Save*.

**To configure the email action in the GUI:**

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	rating_posture
<b>Description</b>	rating test
<b>Report</b>	Security Posture



**Create New Automation Trigger**

**Security Rating Summary** A specified Security Rating report was generated. [CHANGE TYPE](#)

Name: rating\_posture

Description: 0/255

Security Rating Summary

Report: Security Posture

OK Cancel

- d. Click **OK**.
- e. Select the trigger in the list and click **Apply**.

4. Configure the Email notification action:

- a. Click **Add Action**.
- b. Click **Create** and select **Email**.
- c. Enter the following:

<b>Name</b>	email-group1
<b>To</b>	Enter an email address
<b>Subject</b>	CSF stitch alert group1
<b>Replacement message</b>	Enable
<b>Customize messages</b>	Enable and select group-sec1 from the dropdown

**Create New Automation Action**

**Email** Send a custom email to the specified recipient(s). [CHANGE TYPE](#)

Name: email-group1

Minimum interval: 0 second(s)

Description: 0/255

Email

To: admin@fortinet.com

Subject: CSF stitch alert group1

Body: %log%%

Replacement message: ☒ Edit %

Customize messages: ☒ group-sec1

OK Cancel

- d. Click **OK**.
- e. Select the action in the list and click **Apply**.

5. Click **OK**.

6. Right-click the automation stitch, and click *Test Automation Stitch*.

After the Security Rating report is finished, the automation is triggered, and the email is delivered with the customized replacement message in the email body.



**To configure the replacement message group in the CLI:**

```
config system replacemsg-group
  edit "group-secl"
    set comment ""
    set group-type utm
    config automation
      edit "automation-email"
        set buffer "...<h1> Security Fabric Automation rating trigger </h1>..."
        ...
      next
    end
  next
end
```

**To configure the email action in the CLI:**

1. Configure the automation trigger:

```
config system automation-trigger
  edit "rating_posture"
    set description "rating test"
    set event-type security-rating-summary
  next
end
```

2. Configure the automation action:

```
config system automation-action
  edit "email-group1"
    set action-type email
    set email-to "admin@fortinet.com"
    set email-subject "CSF stitch alert group1"
    set replacement-message enable
```

```
        set replacemsg-group "group-sec1"
    next
end
```

### 3. Configure the automation stitch:

```
config system automation-stitch
    edit "auto_rating"
        set trigger "rating_posture"
        config actions
            edit 1
                set action "email-group1"
                set required enable
            next
        end
    next
end
```

### 4. To view the automation stitch information after it is triggered:

```
# diagnose test application autod 3
stitch: auto_rating
    local hit: 1 relayed to: 0 relayed from: 0
    last trigger: Tue Mar 16 15:11:29 2021
    last relay:
    actions:
        email-group1:
            done: 1 relayed to: 0 relayed from: 0
            last trigger: Tue Mar 16 15:11:29 2021
            last relay:

logid2stitch mapping:
id:52000 local hit: 1 relayed hits: 0
    auto_rating
```


## Slack Notification action

To configure an automation stitch with a Slack Notification action, you first need to configure an incoming webhook in Slack. Then you can enter the webhook URL when you configure the Slack Notification action.


This example uses a Security Rating Summary trigger in the automation stitch with two Slack Notification actions with different notification messages. One message is a custom message, and the other is for the Security Rating Summary log with a 90 second delay.

## To create an Incoming Webhook in Slack:

1. Go to the Slack website, and create a workspace.
2. Create a Slack application for the workspace.

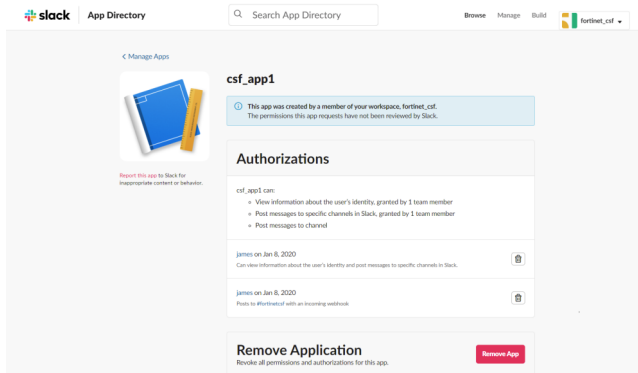

3. Add an Incoming Webhook to a channel in the workspace (see [Sending messages using Incoming Webhooks](#) for more details).
4. Activate the Incoming Webhook, and copy the *Webhook URL* to the clipboard.

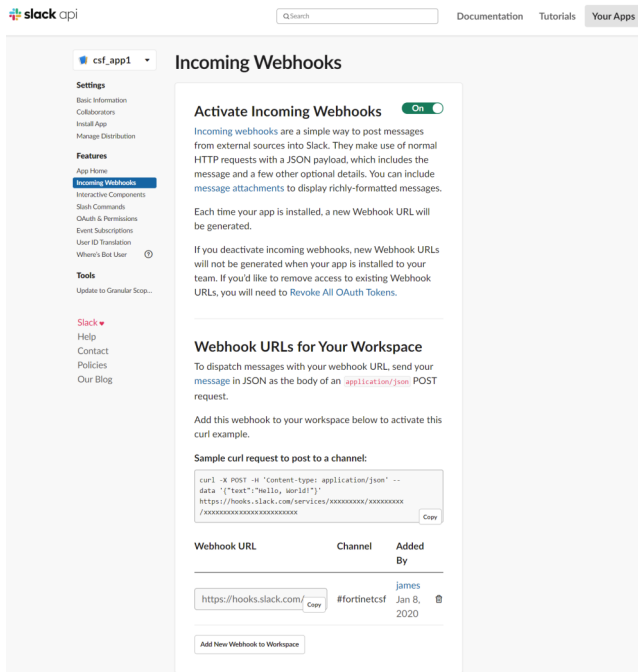

## To configure an automation stitch with Slack Notification actions in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the Security Rating Summary trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.

- c. Enter the following:

<b>Name</b>	auto-rating
<b>Report</b>	Security Posture

- d. Click *OK*.

- e. Select the trigger in the list and click *Apply*.

4. Configure the first Slack Notification action:

- a. Click *Add Action*.

- b. Click *Create* and select *Slack Notification*.

- c. Enter the following:

<b>Name</b>	slack1
<b>URL</b>	Paste the webhook URL from the clipboard
<b>Message</b>	Text
<b>Message text</b>	This is test for slack notification.

The screenshot shows the 'Create New Automation Action' dialog box for a 'Slack Notification' action. The dialog is titled 'Create New Automation Action' and has a close button (X) in the top right corner. On the left side, there is a sidebar with a 'Trigger' section containing 'auto-rating' and an 'Add Action' button. The main area of the dialog is for configuring the 'Slack Notification' action, which is described as 'Send a notification to a Slack channel.' with a 'CHANGE TYPE' link. The configuration fields are as follows:

- Name:** slack1
- Minimum interval:** 0 second(s)
- Description:** (empty field with a character count of 0/255)
- Slack Notification:**
  - URL:** https://hooks.slack.com/services/xxxxxxxx/xxxxxxxx/xxxxxxxxxxxxxxxxxxxxxxxxx (with a character count of 69/1023)
  - Message:** Text (selected) / JSON
  - Message text:** This is test for slack notification. (with a character count of 36/4095 and a percentage icon)

At the bottom of the dialog, there are 'OK' and 'Cancel' buttons.

- d. Click *OK*.

- e. Select the action in the list and click *Apply*.

5. Configure the second Slack Notification action:

- a. Click *Add Action*.

- b. Click *Create* and select *Slack Notification*.

- c. Enter the following:

<b>Name</b>	slack2
<b>URL</b>	Paste the webhook URL from the clipboard

Message

Message text

Text

%%log%%

Create New Automation Stitch

Create New Automation Action

Name

auto-rating

Status

Enabled

FortiGate(s)

All FortiGate(s)

Action execution

Sequential

Description

Stitch

Trigger  
auto-rating

Action

slack1

Add Action

Slack Notification

Send a notification to a Slack channel. [?](#)

CHANGE TYPE

Name

slack2

Minimum interval

0

second(s)

Description

0/255

Slack Notification

URL

https://hooks.slack.com/services/xxxxxxxx/xxxxxxxx/xxxxxxxxxxxxxxxxxxxxxxxx

69/1023

Message

Text

JSON

%%log%%

7/4095

%

OK

Cancel

- Click *OK*.
- Select the action in the list and click *Apply*.
- Click the *Add delay* located between both actions. Enter *90* and click *OK*.

Create New Automation Stitch

Name

auto\_rating

Status

Enable

Disable

FortiGate(s)

All FortiGates

Action execution

Sequential

Parallel

Description

0/255

Stitch

Trigger

auto-rating

Add delay

Action

slack1

90 Seconds

Action

slack2

Statistics

Last Triggered

Never

Trigger Count

0

Additional Information

API Preview

Edit in CLI

Guides

Chaining and delaying actions

Execute a CLI script based on CPU and memory thresholds

Default automation stitches

Documentation

Online Help


Video Tutorials

- 6.** Click *OK*.

## 7. Trigger the automation stitch:

- a. Right-click the automation stitch and select *Test Automation Stitch*.

After the Security Rating report is finished, the automation is triggered and an event log is created by the FortiGate. The two notifications are sent to the Slack channel.

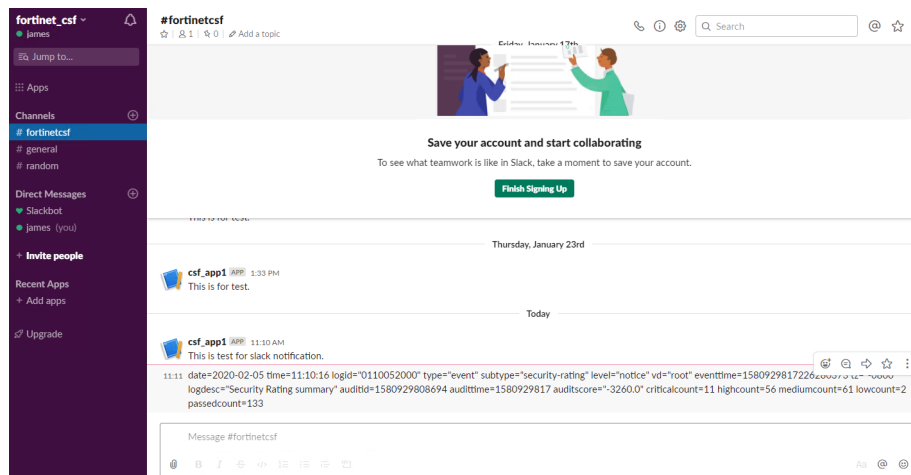

## To configure an automation stitch with Slack Notification actions in the CLI:

### 1. Configure the automation trigger:

```
config system automation-trigger
  edit "auto-rating"
    set event-type security-rating-summary
  next
end
```

### 2. Configure the automation actions:

```
config system automation-action
  edit "slack1"
    set action-type slack-notification
    set message "This is test for slack notification."
    set uri "hooks.slack.com/services/xxxxxxxx/xxxxxxxx/xxxxxxxxxxxxxxxxxxxxxxxx"
  next
  edit "slack2"
    set action-type slack-notification
    set uri "hooks.slack.com/services/xxxxxxxx/xxxxxxxx/xxxxxxxxxxxxxxxxxxxxxxxx"
  next
end
```

### 3. Configure the automation stitch:

```
config system automation-stitch
  edit "auto_rating"
    set trigger "auto-rating"
    config actions
      edit 1
        set action "slack1"
        set required enable
      next
      edit 2
        set action "slack2"
```

```

        set delay 90
        set required enable
    next
end
next
end

```

#### 4. Verify that the automation action was triggered:

```

# diagnose test application autod 3
stitch: auto-rating
  local hit: 1 relayed to: 0 relayed from: 0
  last trigger:Wed Feb 05 11:10:23 2020
  last relay:
  actions:
    slack1:
      done: 1 relayed to: 0 relayed from: 0
      last trigger:Wed Feb 11:10:23 2020
      last relay:
    slack2:
      done: 1 relayed to: 0 relayed from: 0
      last trigger:Wed Feb 05 11:10:23 2020
      last relay:

```


## Microsoft Teams Notification action

Microsoft Teams Notification actions can be configured to send notifications to channels in Microsoft Teams. To trigger the notifications, you need to add an Incoming Webhook connector to a channel in Microsoft Teams, then you can configure the automation stitch with the webhook URL.

In the following example, you will configure an automation stitch with a Security Rating Summary trigger and two Microsoft Teams Notification actions with different notification messages. One message is for the Security Rating Summary log, and the other is a custom message with a ten second delay.

#### To add the Incoming Webhook connector in a Microsoft Teams channel:

1. In Microsoft Teams, click the ... (*More options*) beside the channel name, and select *Connectors*.
2. Search for *Incoming Webhook* and click *Configure*.
3. Enter a name for the webhook, upload an image for the webhook, and click *Create*.
4. Copy the webhook to the clipboard and save it.

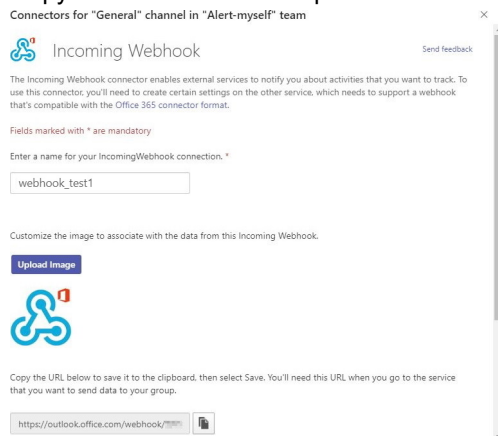



5. Click *Done*.

**To configure an automation stitch with Microsoft Teams Notification actions in the GUI:**

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the Security Rating Summary trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter a name, and for *Report*, select *Security Posture*.

- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the first Microsoft Teams Notification action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Microsoft Teams Notification*.
  - c. Enter the following:

<b>Name</b>	teams_1
<b>URL</b>	Paste the webhook URI from the clipboard
<b>Message</b>	Text
<b>Message text</b>	%%log%%

The screenshot shows the 'Create New Automation Action' window for the 'Microsoft Teams Notification' action. The window has a sidebar on the left with options like 'Name', 'Status', 'FortiGate(s)', 'Action execution', 'Description', 'Stitch', 'Trigger', and 'Add Action'. The main area contains the following fields:

- Name:** teams\_1
- Minimum Interval:** 0 second(s)
- Description:** (empty)
- Microsoft Teams Notification:**
  - URL:** https://outlook.office.com/webhook/xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx@xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx/IncomingWebhook/xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx/xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx (186/1023)
  - Message:** Text JSON (7/4095)

At the bottom, there are 'OK' and 'Cancel' buttons.

- d. Click **OK**.
- e. Select the action in the list and click **Apply**.
5. Configure the second Microsoft Teams Notification action:
  - a. Click **Add Action**.
  - b. Click **Create** and select **Microsoft Teams Notification**.
  - c. Enter the following:

<b>Name</b>	teams_2
<b>URL</b>	Paste the webhook URI from the clipboard
<b>Message</b>	Text
<b>Message text</b>	This is for test.

Create New Automation Action

Name

Status

FortiGate(s)

Action execution

Description

Stitch

Teams\_2

Enabled

All FortiGate(s)

Sequenced

Trigger  
Teams\_action

Action  
teams\_1

Add Action

Microsoft Teams Notification

Send a notification to a Microsoft Teams channel.

CHANGE TYPE

Name

teams\_2

Minimum interval

0

second(s)

Description

0/255

Microsoft Teams Notification

URL

https://outlook.office.com/webhook/xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx@xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx/IncomingWebhook/xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx/xxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx

186/1023

Message

Text

JSON

This is for test.

17/4095

%

OK

Cancel

- Click *OK*.
- Select the action in the list and click *Apply*.
- Click the *Add delay* located between both actions. Enter *10* and click *OK*.

Create New Automation Stitch

Name

Teams\_action

Status

Enable

Disable

FortiGate(s)

All FortiGates

Action execution

Sequential

Parallel

Description

0/255

Stitch

Trigger

Teams\_action

Add delay

Action

teams\_1

10 Seconds

Action

teams\_2

Additional Information

API Preview

Guides

Chaining and delaying actions

Execute a CLI script based on CPU and memory thresholds

Default automation stitches

Documentation


Online Help

Video Tutorials

OK

Cancel

6. Click OK.
7. Trigger the automation stitch:
  - a. Right-click the automation stitch and select *Test Automation Stitch*.  
After the Security Rating report is finished, the automation is triggered and an event log is created by the FortiGate. The two notifications are sent to the Microsoft Teams channel.

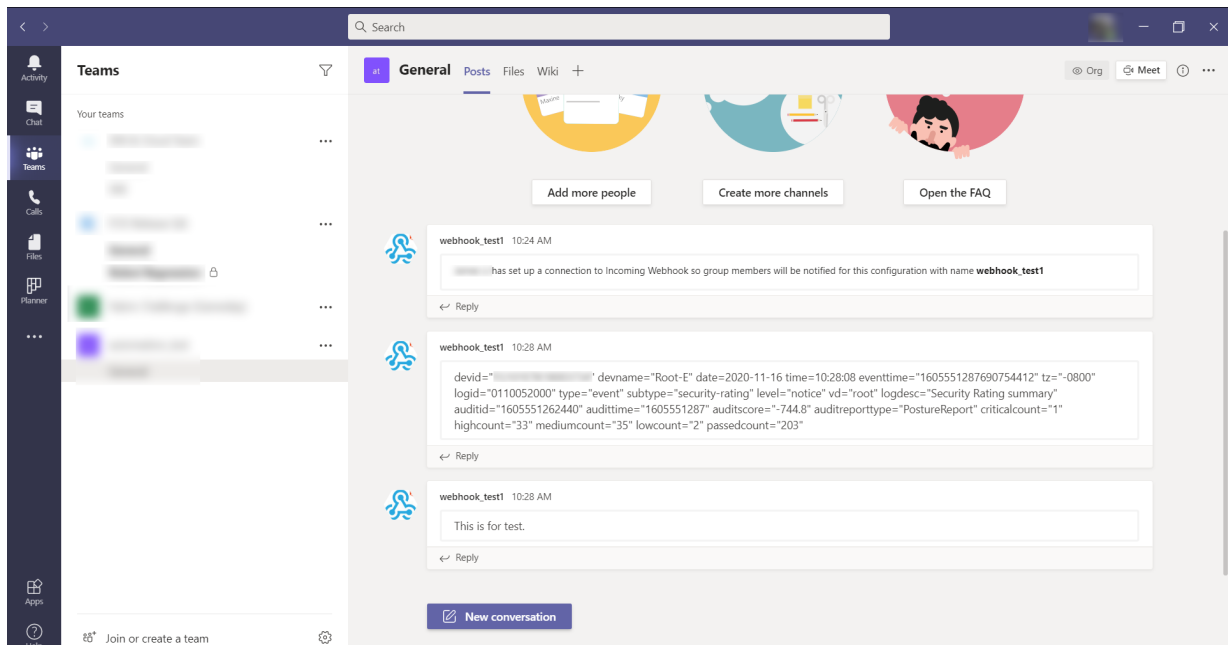

## To configure an automation stitch with Microsoft Teams Notification actions in the CLI:

### 1. Configure the automation trigger:

```
config system automation-trigger
  edit "Teams_action"
    set event-type security-rating-summary
  next
end
```

### 2. Configure the automation actions:

```
config system automation-action
  edit "teams_1"
    set action-type microsoft-teams-notification
    set uri "outlook.office.com/webhook/xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx@xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx/IncomingWebhook/xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx/xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx"
  next
  edit "teams_2"
    set action-type microsoft-teams-notification
    set message "This is for test."
    set uri "outlook.office.com/webhook/xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx@xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx/IncomingWebhook/xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx/xxxxxxxx-xxxx-xxxx-xxxx-
xxxxxxxxxxxxx"
  next
end
```

### 3. Configure the automation stitch:

```
config system automation-stitch
  edit "Teams_action"
    set trigger "Teams_action"
```

```

    config actions
      edit 1
        set action "teams_1"
        set required enable
      next
      edit 2
        set action "teams_2"
        set delay 10
        set required enable
      next
    end
  next
end

```

#### 4. Verify that the automation action was triggered:

```

# diagnose test application autod 3
stitch: Teams_action
  local hit: 2 relayed to: 0 relayed from: 0
  last trigger: Mon Nov 16 10:28:08 2020
  last relay:
  actions:
    teams_1:
      done: 2 relayed to: 0 relayed from: 0
      last trigger: Mon Nov 16 10:28:08 2020
      last relay:
    teams_2:
      done: 2 relayed to: 0 relayed from: 0
      last trigger: Mon Nov 16 10:28:08 2020
      last relay:
  logid2stitch mapping:
  id: 52000 local hit: 22 relayed hits: 0
  Teams_action

```

## AWS Lambda action

AWS Lambda functions can be called when an automation stitch is triggered. This example uses a Security Rating Summary trigger in the automation stitch.

#### To configure an AWS Lambda function automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	auto-aws
<b>Report</b>	Security Posture

- d. Click *OK*.
- e. Select the trigger in the list and click *Apply*.

**4. Configure the AWS Lambda function action:**

- a. Click *Add Action*.
- b. Click *Create* and select *AWS Lambda*.
- c. Enter the following:

<b>Name</b>	aws-action-1
<b>URL</b>	Enter the request API URI
<b>API key</b>	Enter the API key
<b>HTTP header</b>	header2 : header2_value

- d. Click *OK*.
- e. Select the action in the list and click *Apply*.

**5. Click *OK*.****To configure an AWS Lambda function automation stitch in the CLI:****1. Create the automation trigger:**

```
config system automation-trigger
  edit "auto-aws"
    set event-type security-rating-summary
  next
end
```

**2. Create the automation action:**

```
config system automation-action
  edit "aws-action-1"
    set action-type aws-lambda
    set aws-api-key *****
    set uri "0100000000.execute-api.us-east-2.amazonaws.com/default/xxxxx-
autobatoon-XXX-lambdaXXX"
    config http-headers
      edit 1
        set key "header2"
        set value "header2_value"
      next
    end
  next
end
```

**3. Create the automation stitch:**

```
config system automation-stitch
  edit "auto-aws"
    set trigger "auto-aws"
    config actions
      edit 1
        set action "aws-action-1"
        set required enable
      next
    end
  next
end
```

When the automation stitch is triggered, the *Security Fabric > Automation* page shows the stitch trigger time. In AWS, the log shows that the function was called, executed, and finished.

## Azure Function action

Azure functions can be called when an automation stitch is triggered. This example uses a Security Rating Summary trigger in the automation stitch.

### To configure an Azure function automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	auto-azure
<b>Report</b>	Security Posture

- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the Azure Function action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Azure Function*.
  - c. Enter the following:

<b>Name</b>	azure_function
<b>URL</b>	Enter the request API URI
<b>Authorization</b>	Function
<b>API key</b>	Enter the API key
<b>HTTP header</b>	header1 : value1

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
5. Click *OK*.

### To configure an Azure function automation stitch in the CLI:

1. Create an automation trigger:

```
config system automation-trigger
  edit "auto-azure"
    set event-type security-rating-summary
  next
end
```


## 2. Create an automation action:

```
config system automation-action
  edit "azure_function"
    set action-type azure-function
    set azure-function-authorization function
    set azure-api-key *****
    set uri "xxxxx00-no-delete-xxxx.azurewebsites.net/api/headersResponse"
    config http-headers
      edit 1
        set key "header1"
        set value "value1"
      next
    end
  next
end
```

## 3. Create the automation stitch:

```
config system automation-stitch
  edit "auto-azure"
    set trigger "auto-azure"
    config actions
      edit 1
        set action "azure_function"
        set required enable
      next
    end
  next
end
```

When the automation stitch is triggered, the *Security Fabric > Automation* page shows the stitch trigger time. In Azure, the function log shows that the function was called, executed, and finished:

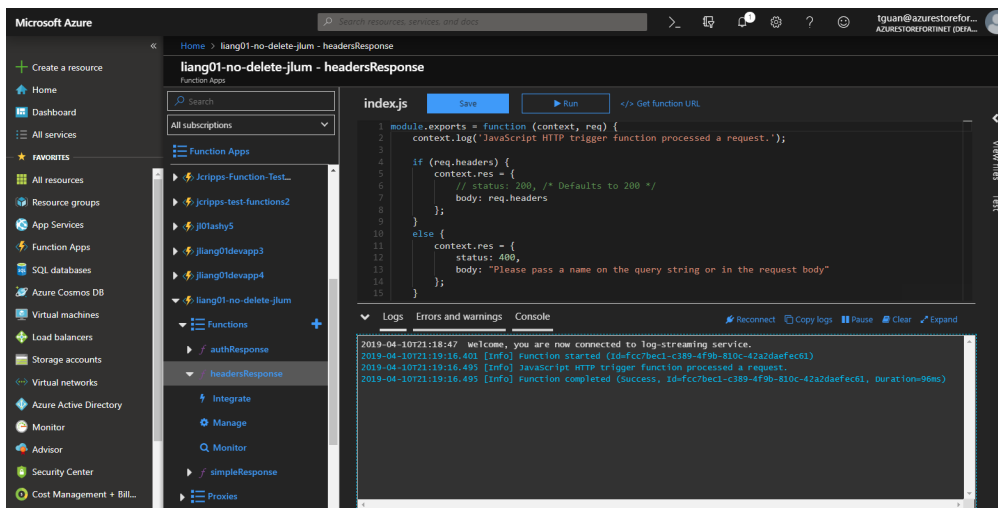

## Google Cloud Function action

Google Cloud functions can be called when an automation stitch is triggered. This example uses a Security Rating Summary trigger in the automation stitch.



**To configure a Google Cloud function automation stitch in the GUI:**

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	auto-google1
<b>Report</b>	Security Posture

- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the Google Cloud Function action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Google Cloud Function*.
  - c. Enter the following:

<b>Name</b>	google-echo
<b>URL</b>	Enter the request API URI
<b>HTTP header</b>	echo-header : echo-value

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
5. Click *OK*.

**To configure a Google Cloud function automation stitch in the CLI:**

1. Create an automation trigger:

```
config system automation-trigger
  edit "auto-google1"
    set event-type security-rating-summary
  next
end
```


2. Create an automation action:

```
config system automation-action
  edit "google-echo"
    set action-type google-cloud-function
    set uri "us-central1-xxx-xxxxxxx-000-000000.cloudfunctions.net/xxxx-echo"
    config http-headers
      edit 1
        set key "echo-header"
        set value "echo-value"
      next
    end
  next
end
```

### 3. Create the automation stitch:

```
config system automation-stitch
  edit "auto-google1"
    set trigger "auto-google1"
    config actions
      edit 1
        set action "google-echo"
        set required enable
      next
    end
  next
end
```

When the automation stitch is triggered, the *Security Fabric > Automation* page shows the stitch trigger time. In Google Cloud, go to *Logs* to see the function log showing that the configured function was called, executed, and finished:

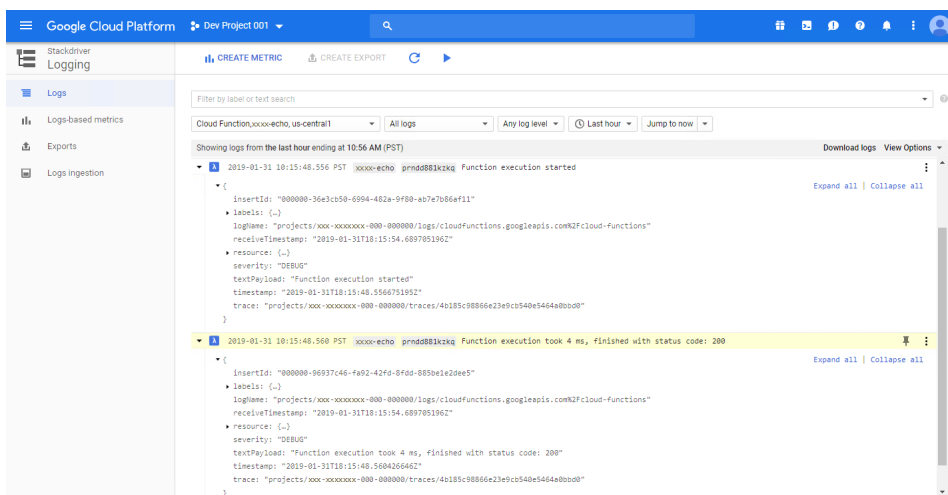

## AliCloud Function action

AliCloud functions can be called when an automation stitch is triggered. This example uses a Security Rating Summary trigger in the automation stitch.

### To configure an AliCloud function automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name.
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.
  - c. Enter the following:

<b>Name</b>	auto-ali
<b>Report</b>	Security Posture

- d. Click *OK*.
- e. Select the trigger in the list and click *Apply*.

4. Configure the AliCloud Function action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *AliCloud Function*.
  - c. Enter the following:

<b>Name</b>	Ali-Action-1
<b>URL</b>	Enter the request API URI
<b>Authorization</b>	Function
<b>AccessKey ID</b>	Enter the access key ID
<b>AccessKey Secret</b>	Enter the access key secret

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
5. Click *OK*.

### To configure an AliCloud function automation stitch in the CLI:

1. Create an automation trigger:

```
config system automation-trigger
  edit "auto-ali"
    set event-type security-rating-summary
  next
end
```


2. Create an automation action:

```
config system automation-action
  edit "Ali-Action-1"
    set action-type alicloud-function
    set alicloud-function-authorization function
    set alicloud-access-key-id "XXXXXXXXXXXXXXXXXXXX"
    set alicloud-access-key-secret xxxxxx
    set uri "0000000000000000.us-east-1.fc.aliyuncs.com/2099-99-99/proxy/test-
function/echoBodyAuth/"
  next
end
```

3. Create the automation stitch:

```
config system automation-stitch
  edit "auto-ali"
    set trigger "auto-ali"
    config actions
      edit 1
        set action "Ali-Action-1"
        set required enable
      next
    end
  next
end
```

When the automation stitch is triggered, the *Security Fabric > Automation* page shows the stitch trigger time. In AliCloud, the function log shows that the function was called, executed, and finished:

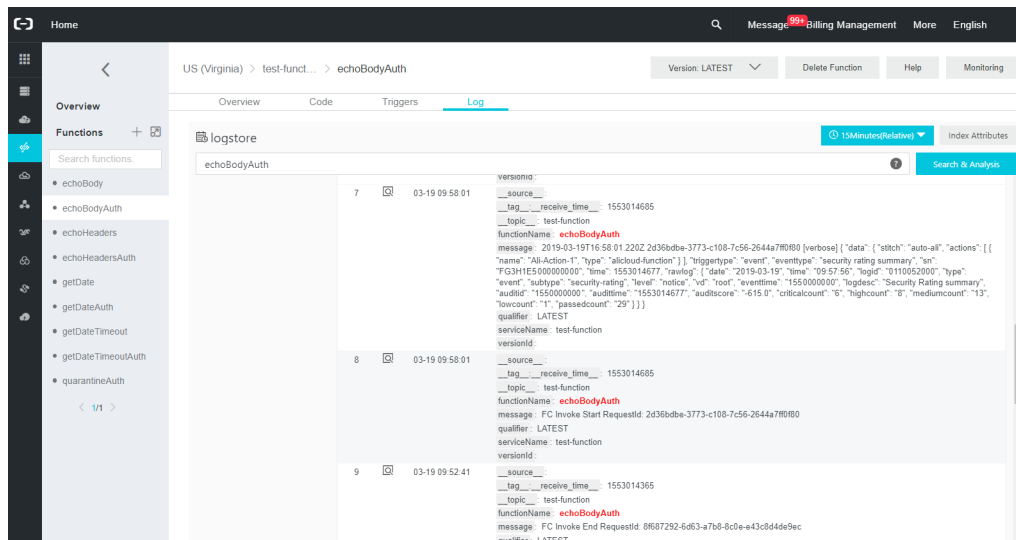

## CLI script action

CLI scripts can run when an automation stitch is triggered. The scripts can be entered manually, uploaded as a file, or recorded in the CLI console. The output of the script can be sent as an email action.

The maximum length of the CLI script action output is 16 thousand characters. The CLI script can be configured in the GUI and CLI; however, the output size and timeout settings can only be configured in the CLI.

```
config system automation-action
    edit <name>
        set action-type cli-script
        set output-size <integer>
        set timeout <integer>
    next
end
```

output-size <integer>	Set the size to limit the script output, in megabytes (1 - 1024, default = 10).
timeout <integer>	Set the maximum running time for this script, in seconds (0 - 300, 0 = no timeout).

## Example

In this example, the script sets the idle timeout value to 479 minutes, and sends an email with the script output.

### To configure a stitch with a CLI script action in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*auto-cli-1*).
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Security Rating Summary*.

- c. Enter the following:

<b>Name</b>	auto-cli-1
<b>Report</b>	Security Posture

- d. Click **OK**.  
e. Select the trigger in the list and click **Apply**.

4. Configure the CLI Script action:

- a. Click **Add Action**.  
b. Click **Create** and select **CLI Script**.  
c. Enter the following:

<b>Name</b>	admintimeout
<b>Script</b>	<pre>config system global   set admintimeout 479 end</pre> <p>Alternatively, click <b>Upload</b> to upload a file, or click <b>&gt;_Record in CLI console</b> and enter the CLI commands.</p>
<b>Administrator profile</b>	Select a profile

The screenshot shows the 'Create New Automation Action' window in FortiGate. The 'CLI Script' action is selected. The configuration fields are as follows:

- Name:** admintimeout
- Minimum Interval:** 0 second(s)
- Description:** (empty)
- CLI Script:**

```
config system global
  set admintimeout 479
end
```
- Administrator profile:** super\_admin
- Execute on Security Fabric:** (checked)

The sidebar on the left shows the 'Trigger' section with 'auto-cli-1' and an 'Add Action' button.

- d. Click **OK**.  
e. Select the action in the list and click **Apply**.

5. Configure the Email notification action:

- a. Click **Add Action**.  
b. Click **Create** and select **Email**.

- c. Enter the following:

<b>Name</b>	auto-cli-1_email
<b>To</b>	Enter an email address
<b>Subject</b>	CSF stitch alert
<b>Body</b>	%%results%%

The screenshot shows the 'Create New Automation Action' dialog box in the Fortinet GUI. The dialog is titled 'Create New Automation Action' and has a close button (X) in the top right corner. It features a green envelope icon and the text 'Email Send a custom email to the specified recipient(s).'. There is a 'CHANGE TYPE' link with a pencil icon. The form contains the following fields:

- Name:** auto-cli-1\_email
- Minimum Interval:** 0 second(s)
- Description:** (empty field, 0/255 characters)
- Email section:**
  - To:** admin@fortinet.com (with a plus icon to add more)
  - Subject:** CSF stitch alert
  - Body:** %%results%% (with a plus icon to add more)
- Replacement message:** (toggle switch is turned off)

At the bottom of the dialog are 'OK' and 'Cancel' buttons. In the background, a 'Create New Automation Stitch' dialog is visible, showing a 'Trigger' block named 'auto-cli-1' and an 'Action' block named 'admintimeout'.

- d. Click OK.  
 e. Select the action in the list and click *Apply*.  
 6. Click OK.

### To configure a stitch with a CLI script action in the CLI:

1. Create the automation trigger:

```
config system automation-trigger
  edit "auto-cli-1"
    set event-type security-rating-summary
  next
end
```

2. Create the automation actions:

```
config system automation-action
  edit "admintimeout"
    set action-type cli-script
    set script "config system global
      set admintimeout 479
    end"
    set output-size 10
    set timeout 0
    set accprofile "super_admin"
```

```

    next
    edit "auto-cli-1_email"
        set action-type email
        set email-to "admin@fortinet.com"
        set email-subject "CSF stitch alert"
        set message "%%results%%"
    next
end

```

### 3. Create the automation stitch:


```

config system automation-stitch
    edit "auto-cli-1"
        set trigger "auto-cli-1"
        config actions
            edit 1
                set action "admintimeout"
                set required enable
            next
            edit 2
                set action "auto-cli-1_email"
                set required enable
            next
        end
    next
end

```

### Sample email

The email sent by the action will look similar to the following:

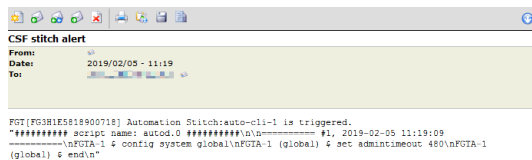

## Execute a CLI script based on memory and CPU thresholds

Automation stitches can be created to run a CLI script and send an email message when memory or CPU usage exceeds specified thresholds.



The maximum size of the CLI script action output is 16K characters. In cases where the output exceeds 16K, the email received will contain truncated output. To avoid this, it is recommended to limit the number of commands per script.

### To define memory and CPU usage thresholds:

```

config system global
    set cpu-use-threshold <percent>
    set memory-use-threshold-extreme <percent>
    set memory-use-threshold-green <percent>

```

```
set memory-use-threshold-red <percent>
end
```

Where:

cpu-use-threshold	Threshold at which CPU usage is reported, in percent of total possible CPU utilization (default = 90).
memory-use-threshold-extreme	Threshold at which memory usage is considered extreme, and new sessions are dropped, in percent of total RAM (default = 95).
memory-use-threshold-green	Threshold at which memory usage forces the FortiGate to exit conserve mode, in percent of total RAM (default = 82).
memory-use-threshold-red	Threshold at which memory usage forces the FortiGate to enter conserve mode, in percent of total RAM (default = 88).

## Configuring a high memory usage stitch

In this example, an automation stitch is created that runs two CLI scripts to collect debug information, and then two email messages will be received with CLI output to a specified email address when the memory usage causes the FortiGate to enter conserve mode.



Since the output in this example will exceed 16K, two scripts are used. The CLI scripts are run sequentially, and an email is sent out each time a script runs.

### To create an automation stitch for high memory usage in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*auto\_high\_memory*).
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Conserve Mode*.
  - c. Enter the name, *auto\_high\_memory*.
  - d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the first CLI Script action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *CLI Script*.
  - c. Enter the following:

<b>Name</b>	high_memory_debug1
<b>Script</b>	diagnose sys top 5 20 5 diagnose sys session full-stat get system performance status
<b>Administrator profile</b>	Select a profile



**Create New Automation Action**

Name:

Status: ☒ Enabled

FortiGate(s):

Action execution: ☒ Sequence

Description:

Stitch: ☒ Trigger

Trigger:

Add Action: ☒

**CLI Script** Execute a CLI script. [CHANGE TYPE](#)

Name:

Minimum interval:  second(s)

Description:

CLI Script

Script:

Upload

Administrator profile:

Execute on Security Fabric: ☒

OK Cancel

- d. Click **OK**.
  - e. Select the action in the list and click **Apply**.
5. Configure the first Email notification action:
- a. Click **Add Action**.
  - b. Click **Create** and select **Email**.
  - c. Enter the following:

<b>Name</b>	auto_high_memory_email1
<b>To</b>	Enter an email address
<b>Subject</b>	CSF stitch alert: high_memory1
<b>Body</b>	%%results%%

- d. Click **OK**.
  - e. Select the action in the list and click **Apply**.
6. Configure the second CLI Script action:
- a. Click **Add Action**.
  - b. Click **Create** and select **CLI Script**.
  - c. Enter the following:

<b>Name</b>	high_memory_debug2
<b>Script</b>	diagnose sys session full-stat diagnose hardware sysinfo shm diagnose hardware sysinfo memory
<b>Administrator profile</b>	Select a profile

**Create New Automation Action**

Name:

Status: ☒ Enabled

FortiGate(s):

Action execution: ☒ Sequence

Description:

Stitch:

Script:

Minimum interval:  second(s)

Description:

CLI Script

Script:

Upload

Administrator profile:

Execute on Security Fabric: ☒

OK Cancel

- d. Click **OK**.
- e. Select the action in the list and click **Apply**.
7. Configure the second Email notification action:
  - a. Click **Add Action**.
  - b. Click **Create** and select **Email**.
  - c. Enter the following:

<b>Name</b>	auto_high_memory_email2
<b>To</b>	Enter an email address
<b>Subject</b>	CSF stitch alert: high_memory2
<b>Body</b>	%%results%%

- d. Click **OK**.
- e. Select the action in the list and click **Apply**.
8. Click **OK**.

#### To create an automation stitch for high memory usage in the CLI:

1. Create the automation trigger:

```
config system automation-trigger
  edit "auto_high_memory"
    set event-type low-memory
  next
end
```

**2. Create the automation actions:**

```

config system automation-action
    edit "high_memory_debug1"
        set action-type cli-script
        set script "diagnose sys top 5 20 5"
diagnose sys session full-stat
get system performance status"
        set output-size 10
        set timeout 0
        set accprofile "super_admin"
    next
    edit "auto_high_memory_email1"
        set action-type email
        set email-to "person@fortinet.com"
        set email-subject "CSF stitch alert: high_memory1"
        set message "%results%"
    next
    edit "high_memory_debug2"
        set action-type cli-script
        set script "diagnose sys session full-stat"
diagnose hardware sysinfo shm
diagnose hardware sysinfo memory"
        set accprofile "super_admin"
    next
    edit "auto_high_memory_email2"
        set action-type email
        set email-to "person@fortinet.com"
        set email-subject "CSF stitch alert: high_memory2"
        set message "%results%"
    next
end

```

**3. Create the automation stitch:**

```

config system automation-stitch
    edit "auto_high_memory"
        set trigger "auto_high_memory"
        config actions
            edit 1
                set action "high_memory_debug1"
                set required enable
            next
            edit 2
                set action "auto_high_memory_email1"
                set required enable
            next
            edit 3
                set action "high_memory_debug2"
                set required enable
            next
            edit 4
                set action "auto_high_memory_email2"
                set required enable
            next
        end
    end

```


```

next
end

```

## Results

When the FortiGate enters conserve mode due to the `memory-use-threshold-red` being exceeded, the GUI displays a notice, and the `auto_high_memory` automation stitch is triggered. This causes the CLI scripts to run and the scripts' results are emailed to the specified address.

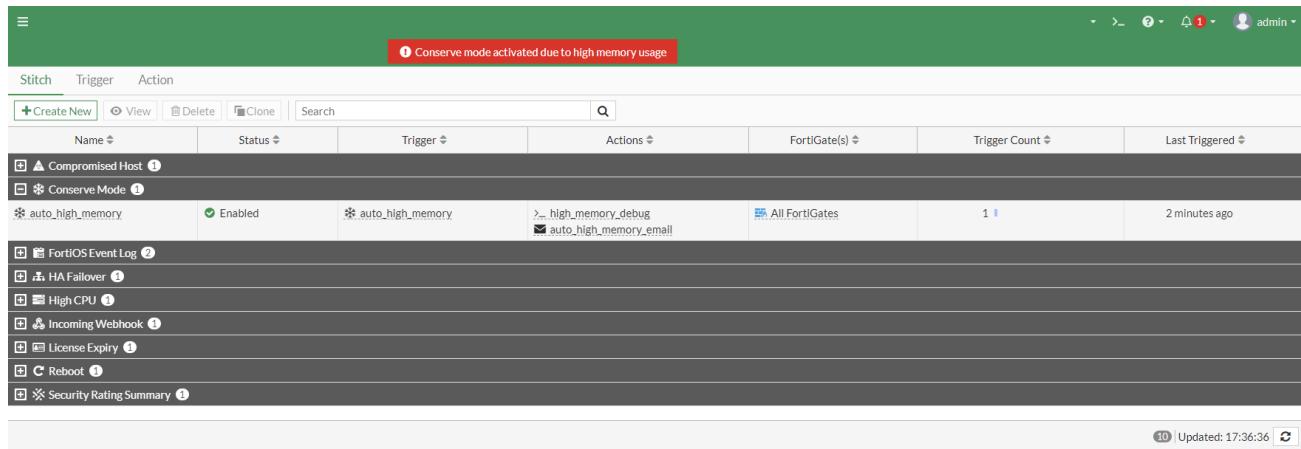

Here is sample text from the email message:

```

CSF stitch alert: high_memory1
DoNotReply@notification.fortinet.net
Tue 05/16/2023 5:34 PM
##### script name: autod.0 #####
===== #1, 2023-05-16 17:34:17 =====
Client_Fgt $ diagnose sys top 5 20 3
Run Time: 0 days, 0 hours and 0 minutes 61U, 0N, 6S, 33I, 0WA, 0HI, 0SI, 0ST; 1356T, 129F
    ipshelper      2601      S <    61.6    8.0    0
    ipseengine     2745      S <     4.9    8.5    0
    cmdbsvr        2528      S N     0.0    7.9    0
    cmdbsvr        2529      S      0.0    5.0    0
    scanunitd      2610      S <     0.0    3.8    0
    miglogd        2603      S      0.0    3.6    0
    cw_acd         2634      S      0.0    3.4    0
    node           2574      S      0.0    3.3    0
    forticron       2584      S      0.0    2.9    0
    miglogd        2693      S      0.0    2.8    0
    reportd        2604      S      0.0    2.5    0
    httpsd         2573      S      0.0    2.4    0
...

```

## Configuring a high CPU usage stitch

Similar to the previous example, an automation stitch can be created that runs a CLI script to collect debug information, and then email the results of the script to a specified email address when CPU usage threshold is exceeded (High CPU trigger type).

The following commands are recommended for collecting debug information, but they are not the only options. Other commands can be used.

```

diagnose sys cmdb info
diagnose sys vd list | grep fib
diagnose sys top 5 20 2
diagnose sys session full-stat
diagnose sys session list | grep "<dirty>" -c
get system performance status
diagnose sys session full-stat
diagnose hardware sysinfo memory
diagnose sys cmdb info
diagnose sys vd list | grep fib

```

## Webhook action

The webhook automation stitch action makes HTTP and HTTPS requests to a specified server, with custom headers, bodies, ports, and methods. It can be used to leverage the ubiquity of HTML requests and APIs to integrate with other tools.



The URI and HTTP body can use parameters from logs or previous action results. Wrapping the parameter with %% will replace the expression with the JSON value for the parameter, for example: %%results.source%% is the source property from the previous action.

In this example, a specific log message (failed administrator log in attempt) triggers the FortiGate to send the contents of the log to a server. The server responds with a generic reply. This example assumes that the server is already configured and able to communicate with the FortiGate.

### To configure the webhook automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*badLogin*).
3. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *FortiOS Event Log*.
  - c. Enter the following:

<b>Name</b>	badLogin
<b>Event</b>	Admin login failed

- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the automation stitch action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Webhook*.
  - c. Enter the following:

<b>Name</b>	Send Log To Server
<b>Protocol</b>	HTTP
<b>URL</b>	172.16.200.44

<b>Custom port</b>	Enable and enter 80
<b>Method</b>	POST
<b>HTTP body</b>	%%log%%
<b>HTTP header</b>	Header : 1st Action

The screenshot shows the 'Create New Automation Action' window in the FortiGate GUI. The 'Webhook' action type is selected. The configuration details are as follows:

- Name:** Send Log To Server
- Minimum Interval:** 0 second(s)
- Description:** (empty)
- Webhook Section:**
  - Protocol:** HTTP (selected), HTTPS
  - URL:** https:// 172.16.200.44
  - Custom port:** ☒ 80
  - Method:** POST (selected), PUT, GET, PATCH, DELETE
  - HTTP body:** %%log%%
  - HTTP header:** Header : 1st Action

The 'OK' button is highlighted in green at the bottom right of the dialog.

- d. Click OK.
  - e. Select the action in the list and click *Apply*.
5. Click OK.

### To configure the webhook automation stitch in the CLI:

1. Create an automation trigger:

```
config system automation-trigger
  edit "badLogin"
    set event-type event-log
    set logid 32002
  next
end
```

2. Create the automation action:

```
config system automation-action
  edit "Send Log To Server"
    set action-type webhook
    set uri "172.16.200.44"
    set http-body "%%log%%"
    set port 80
    config http-headers
      edit 1
        set key "Header"
        set value "1st Action"
      next
    end
```

```

    next
end

```

### 3. Create the automation stitch:

```

config system automation-stitch
  edit "badLogin"
    set trigger "badLogin"
    config actions
      edit 1
        set action "Send Log To Server"
        set required enable
      next
    end
  next
end

```

### To test the automation stitch:

1. Attempt to log in to the FortiGate with an incorrect username or password.
2. On the server, check the log to see that its contents were sent by the FortiGate.

```

..b781718-A--
[30/May/2019:16:44:45 -0700] XPBq7awQyCwAAEp2NoAAAD 172.16.200.5 19028 172.16.200.44 80
..b781718-B--
POST / HTTP/1.1
Host: 172.16.200.44
Accept: */*
Header: 1st Action
Content-Length: 489
Content-Type: application/x-www-form-urlencoded
..b781718-C--
date=2019-05-30 time=16:44:43 logid="0100032002" type="event" subtype="system" level="alert" vd="root" eventtime=15592508420935090 tz="-0700" logdesc="Admin login failed" sn="0" user="admin" ui="http(10.6.30.254)" method="http" srcip=10.6.30.254 dstip=10.6.30.5 action="login" status="failed" reason="passwd_invalid" msg="Administrator admin login failed from http(10.6.30.254) because of invalid password"
..b781718-F--
HTTP/1.1 200 OK
Upgrade: h2,h2c
Connection: Upgrade
Last-Modified: Thu, 30 May 2019 21:46:33 GMT
ETag: "61-58a21d4dcffa"
Accept-Ranges: bytes
Content-Length: 67
Vary: Accept-Encoding
Content-Type: text/html
..b781718-E--
{
  "userId": 1,
  "id": 1,
  "title": "Test Response",
  "body": "ABCDEFGHIJKLMNQRSTUWXYZ"
}

```

The body content is replaced with the log from the trigger.

3. On the FortiGate, go to *Log & Report > System Events* to confirm that the stitch was activated.
4. Go to *Security Fabric > Automation* to see the last time that the stitch was triggered.

## Diagnose commands

### To enable log dumping:

```

# diagnose test application autod 1
autod dumped total:1 logs, num of logids:1
autod log dumping is enabled

```

```

vdom:root(0) logid:32002 len:408 log:
date=2019-05-30 time=17:41:03 logid="0100032002" type="event" subtype="system" level="alert"
vd="root" eventtime=1559263263858888451 tz="-0700" logdesc="Admin login failed" sn="0"
user="admin" ui="http(10.6.30.254)" method="http" srcip=10.6.30.254 dstip=10.6.30.5
action="login" status="failed" reason="passwd_invalid" msg="Administrator admin login failed
from http(10.6.30.254) because of invalid password"
autod log dumping is disabled

```

```

autod logs dumping summary:
  logid:32002 count:1

```

```

autod dumped total:1 logs, num of logids:1

```

**To show the automation settings:**

```
# diagnose test application autod 2
csf: enabled   root:yes
total stitches activated: 2

stitch: badLogin
  destinations: all
  trigger: badLogin

  local hit: 6 relayed to: 6 relayed from: 6
  actions:
    Send Log To Server type:webhook interval:0
      delay:0 required:no
      proto:0 method:0 port:80
      uri: 172.16.200.44
      http body: %%log%%
      headers:
        0. Header:1st Action
```

**To show the automation statistics:**

```
# diagnose test application autod 3

stitch: badLogin

  local hit: 1 relayed to: 1 relayed from: 1
  last trigger:Wed Jul 10 12:14:14 2019
  last relay:Wed Jul 10 12:14:14 2019

  actions:
    Send Log To Server:
      done: 1 relayed to: 1 relayed from: 1
      last trigger:Wed Jul 10 12:14:14 2019
      last relay:Wed Jul 10 12:14:14 2019

logid2stitch mapping:
id:32002  local hit: 3 relayed to: 3 relayed from: 3
  badLogin

action run cfg&stats:
total:55 cur:0 done:55 drop:0
  email:
    flags:10
    stats: total:4 cur:0 done:4 drop:0
  fortiexplorer-notification:
    flags:1
    stats: total:0 cur:0 done:0 drop:0
  alert:
    flags:0
    stats: total:0 cur:0 done:0 drop:0
  disable-ssid:
    flags:7
    stats: total:0 cur:0 done:0 drop:0
  quarantine:
    flags:7
```



```

        stats: total:0 cur:0 done:0 drop:0
quarantine-forticlient:
    flags:4
    stats: total:0 cur:0 done:0 drop:0
quarantine-nsx:
    flags:4
    stats: total:0 cur:0 done:0 drop:0
ban-ip:
    flags:7
    stats: total:0 cur:0 done:0 drop:0
aws-lambda:
    flags:11
    stats: total:21 cur:0 done:21 drop:0
webhook:
    flags:11
    stats: total:6 cur:0 done:6 drop:0
cli-script:
    flags:10
    stats: total:4 cur:0 done:4 drop:0
azure-function:
    flags:11
    stats: total:0 cur:0 done:0 drop:0
google-cloud-function:
    flags:11
    stats: total:0 cur:0 done:0 drop:0
alicloud-function:
    flags:11
    stats: total:20 cur:0 done:20 drop:0

```

### To enable debug output and turn on automation debug messages for about 30 minutes:

```

# diagnose debug enable
# diagnose debug application autod -1
__auto_generate_generic_curl_request()-358: Generating generic automation CURL request for
action (Send Log To Server).
__auto_generate_generic_curl_request()-406: Generic automation CURL request POST data for
action (Send Log To Server):
date=2019-05-30 time=16:44:43 logid="0100032002" type="event" subtype="system" level="alert"
vd="root" eventtime=1559259884209355090 tz="-0700" logdesc="Admin login failed" sn="0"
user="admin" ui="http(10.6.30.254)" method="http" srcip=10.6.30.254 dstip=10.6.30.5
action="login" status="failed" reason="passwd_invalid" msg="Administrator admin login failed
from http(10.6.30.254) because of invalid password"

__auto_generic_curl_request_close()-512: Generic CURL request response body from
http://172.16.200.44:
{
  "userId": 1,
  "id": 1,
  "title": "Test Response",
  "body": "ABCDEFGHJKLMNOPQRSTUVWXYZ"
}

```

## Webhook action with Twilio for SMS text messages

The FortiGate automation stitch framework can be used to interact with third-party services with webhooks to perform various tasks. A webhook action to Twilio can be used to automate tasks that send alerts and information to administrators by SMS text messages.

This topic includes two examples where the FortiGate uses webhooks to trigger Twilio to send SMS text messages to an administrator.

- [Example 1: using an SD-WAN health check to trigger a Twilio webhook action](#)
- [Example 2: using an incoming webhook to trigger a Twilio webhook action](#)

### Prerequisites


- An active Twilio account with a virtual phone number that is able to send SMS text messages to the receiver in the desired region
- A valid Twilio Account SID and Auth token for sending SMS text messages



These examples assume that the Twilio account is already configured. For more information, see [Creating or Updating Resources with the POST Method](#) in the Twilio documentation.

### Example 1: using an SD-WAN health check to trigger a Twilio webhook action

In this example, an administrator wants to monitor the FortiGate's SD-WAN health, particularly when a dead health check is reported. An automation stitch will trigger the alert based on an SD-WAN log event (log ID 0113022931, SD-WAN SLA information warning) and perform a webhook action to inform Twilio to send an SMS message.

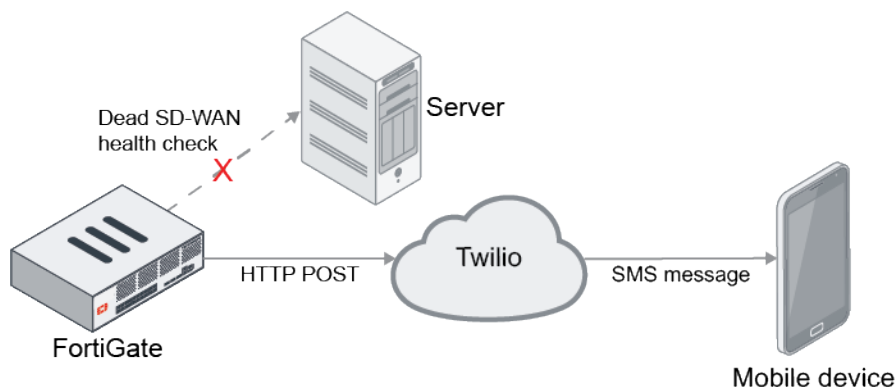

### Sample SD-WAN log event

```

date=2023-01-13 time=10:39:26 eventtime=1673635167489361827 tz="-0800" logid="0113022931"
type="event" subtype="sdwan" level="warning" vd="root" logdesc="SDWAN SLA information
warning" eventtype="Health Check" healthcheck="Google" interface="VLAN1101"
probepproto="ping" oldvalue="alive" newvalue="dead" msg="SD-WAN health-check member changed
state."
  
```

**To configure the automation stitch in the GUI:**

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*SD-WAN-HC-Down-SMS*).
3. Configure the FortiOS event log trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *FortiOS Event Log*.
  - c. Enter the following:

<b>Name</b>	<i>SD-WAN-HC-Down</i>
<b>Event</b>	<i>SDWAN SLA information warning</i>
<b>Field filter(s)</b>	<i>Set Field name to newvalue. Set Value to dead.</i>

- d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the webhook action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Webhook*.
  - c. Enter the following:

<b>Name</b>	<i>Twilio-SMS-HC</i>
<b>Protocol</b>	<i>HTTPS</i>
<b>URL</b>	Enter the URL provided by Twilio for sending SMS messages using the POST method. The URL can be found in the cURL code sample in the following format: <i>https://api.twilio.com/2010-04-01/Accounts/&lt;Twilio_Account_SID&gt;/Messages.json</i> .
<b>Method</b>	<i>POST</i>
<b>HTTP body</b>	<i>Body=%%log%%&amp;From=%2B1360x*****&amp;To=%2B1604*****</i> This string for the body text includes the SD-WAN log message, and the Twilio from and to phone numbers.
<b>HTTP header</b>	<i>Content-Type : application/x-www-form-urlencoded</i> <i>Authorization : Basic &lt;Base64_encoded_authentication_code&gt;</i>

**Create New Automation Action**

**Webhook** Send an HTTP request using a REST callback. [CHANGE TYPE](#)

Name: Twilio-SMS-HC

Minimum interval: 0 second(s)

Description: 0/255

**Webhook**

Protocol: HTTP **HTTPS**

URL: https://api.twilio.com/2010-04-01/Accounts/\*\*\*\*\*/Messages.json 83/1023

Custom port: ☐

Method: **POST** PUT GET PATCH DELETE

HTTP body: Body=%%log%%&From=%2B1360\*\*\*\*\*&To=%2B1604\*\*\*\*\* 50/4095

HTTP header:

Content-Type: application/x-www-form-urlencoded

Authorization: Basic \*\*\*\*\*

**Security**

TLS certificate: ☐

Verify remote host: ☒

**Additional Information**

[API Preview](#)

**Guides**

[Execute a CLI script based on CPU and memory thresholds](#)

[Default automation stitches](#)

**Online Guides**

[Relevant Documentation](#)

[Video Tutorials](#)

**Hot Questions at FortiAnswers**

Automation for debug commands?

1 Answers 0 Votes 168 Views

[See More](#)

**OK** **Cancel**

- d. Click **OK**.
  - e. Select the action in the list and click **Apply**.
5. Click **OK** to save the stitch.

### To configure the automation stitch in the CLI:

1. Configure the automation trigger:

```
config system automation-trigger
  edit "SD-WAN-HC-Down"
    set event-type event-log
    set logid 22931
    config fields
      edit 1
        set name "newvalue"
        set value "dead"
      next
    end
  next
end
```

2. Configure the automation action:

```
config system automation-action
  edit "Twilio-SMS-HC"
    set action-type webhook
    set protocol https
    set uri "api.twilio.com/2010-04-01/Accounts/*****/Messages.json"
    set http-body "Body=%%log%%&From=%2B1360*****&To=%2B1604*****"
    set port 443
```

```

config http-headers
  edit 1
    set key "Content-Type"
    set value "application/x-www-form-urlencoded"
  next
  edit 2
    set key "Authorization"
    set value "Basic *****"
  next
end
next
end

```

### 3. Configure the automation stitch:


```

config system automation-stitch
  edit "SD-WAN-HC-Down-SMS"
    set trigger "SD-WAN-HC-Down"
    config actions
      edit 1
        set action "Twilio-SMS-HC"
        set required enable
      next
    end
  next
end

```

### Verification:

1. Simulate an SD-WAN health check failure to trigger the automation stitch.
2. Twilio sends an SMS message to the administrator.

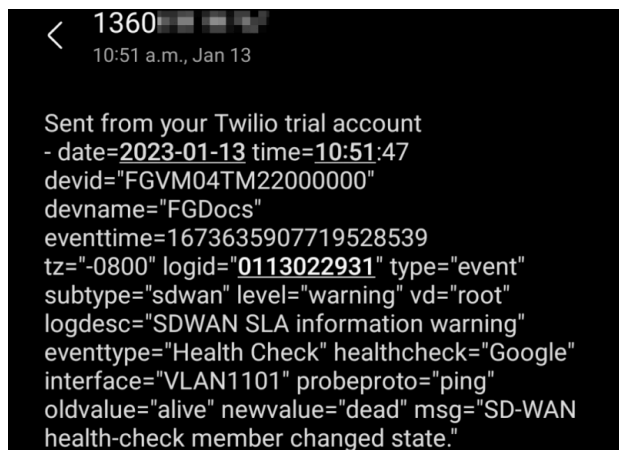

3. Go to *Security Fabric > Automation* and locate the *SD-WAN-HC-Down-SMS* stitch. The *Trigger Count* value has increased by one.

### System log after the stitch was triggered:


```

date=2023-01-13 time=10:51:47 eventtime=1673635907720476287 tz="-0800" logid="0100046600"
type="event" subtype="system" level="notice" vd="root" logdesc="Automation stitch triggered"
stitch="SD-WAN-HC-Down-SMS" trigger="SD-WAN-HC-Down" stitchaction="Twilio-SMS-HC" from="log"
msg="stitch:SD-WAN-HC-Down-SMS is triggered."

```

## Example 2: using an incoming webhook to trigger a Twilio webhook action

In this example, an administrator wants to trigger an automation stitch remotely to retrieve the device uptime with an SMS text message. An incoming webhook will be used to send an HTTP POST request to trigger the event to occur. Subsequently, the FortiGate performs a CLI action followed by a webhook action to inform Twilio to send an SMS text message.

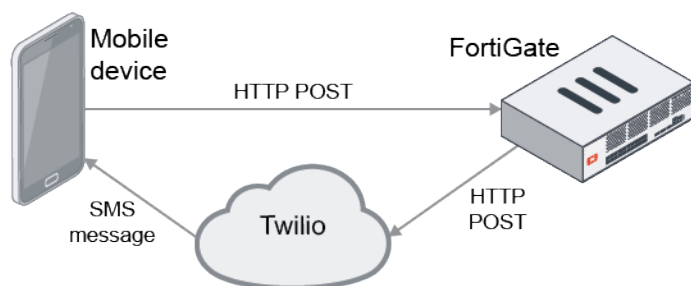

A REST API administrator with write privileges must be configured to apply an API key to this incoming webhook. See [REST API administrator on page 2224](#) for more information.

### To configure the automation stitch in the GUI:

1. Go to *Security Fabric > Automation* and click *Create New*.
2. Enter the stitch name (*Check-Uptime*).
3. Configure the incoming webhook trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Incoming Webhook*.
  - c. Enter the trigger name (*Check-Uptime-Webhook*).
  - d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
4. Configure the CLI script action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *CLI Script*.
  - c. Enter the following:

Name	Uptime
Script	<code>get system performance status   grep Uptime</code>
Administrator profile	Select a profile with REST API write privileges ( <i>prof_admin</i> )

- d. Click *OK*.
  - e. Select the action in the list and click *Apply*.
5. Configure the webhook action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Webhook*.
  - c. Enter the following:

<b>Name</b>	<i>Twilio-SMS-Uptime</i>
<b>Protocol</b>	<i>HTTPS</i>
<b>URL</b>	Enter the URL provided by Twilio for sending SMS messages using the POST method. The URL can be found in the cURL code sample in the following format: <i>https://api.twilio.com/2010-04-01/Accounts/&lt;Twilio_Account_SID&gt;/Messages.json</i> .
<b>Method</b>	<i>POST</i>
<b>HTTP body</b>	<i>Body=%%results%%&amp;From=%2B1360*****&amp;To=%2B1604*****</i> This string for the body text includes the results from the preceding CLI script action.
<b>HTTP header</b>	<i>Content-Type : application/x-www-form-urlencoded</i> <i>Authorization : Basic &lt;Base64_encoded_authentication_code&gt;</i>

d. Click **OK**.

e. Select the action in the list and click **Apply**.

6. Click **OK** to save the stitch.

### To configure the automation stitch in the CLI:

1. Configure the automation trigger:

```
config system automation-trigger
  edit "Check-Uptime-Webhook"
    set event-type incoming-webhook
  next
end
```

2. Configure the automation actions:

```
config system automation-action
  edit "Uptime"
    set action-type cli-script
    set script "get system performance status | grep Uptime"
    set accprofile "prof_admin"
  next
  edit "Twilio-SMS-Uptime"
    set action-type webhook
    set protocol https
    set uri "api.twilio.com/2010-04-01/Accounts/*****/Messages.json"
    set http-body "Body=%%results%%&From=%2B1360*****&To=%2B1604*****"
    set port 443
    config http-headers
      edit 1
        set key "Content-Type"
        set value "application/x-www-form-urlencoded"
      next
      edit 2
        set key "Authorization"
        set value "Basic *****"
      next
    next
  next
end
```

```

        end
    next
end

```

### 3. Configure the automation stitch:

```

config system automation-stitch
    edit "Check-Uptime"
        set trigger "Check-Uptime-Webhook"
        config actions
            edit 1
                set action "Uptime"
                set required enable
            next
            edit 2
                set action "Twilio-SMS-Uptime"
                set required enable
            next
        end
    next
end

```

### Verification:

1. From a command prompt, issue the sample cURL command as recommended by the Check-Uptime-Webhook incoming webhook:

```

>curl -k -X POST -H "Authorization: Bearer <API_token>" --data "{ 'srcip': '1.1.1.1',
'mac':'11:11:11:11:11:11', 'fctuid': '*****'}"
https://x.x.x.x/api/v2/monitor/system/automation-stitch/webhook/Check-Uptime-Webhook

```

#### Response:


```

{
    "http_method": "POST",
    "status": "success",
    "http_status": 200,
    "serial": "FGVM04TM20000000",
    "version": "v7.2.4",
    "build": 1368
}


```

2. This triggers the automation stitch on the FortiGate to send a HTTP POST request to Twilio. In response, Twilio sends an SMS text message to the recipient.



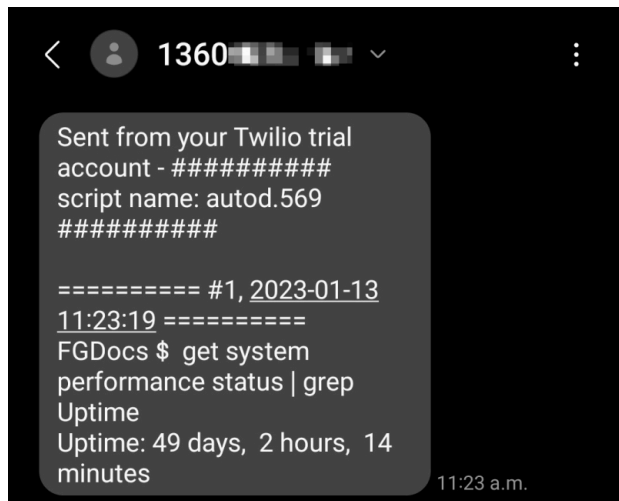

3. From the Twilio dashboard, go to *Messaging > Overview* and verify the *Recent Messages* section to confirm that the SMS text message was delivered.

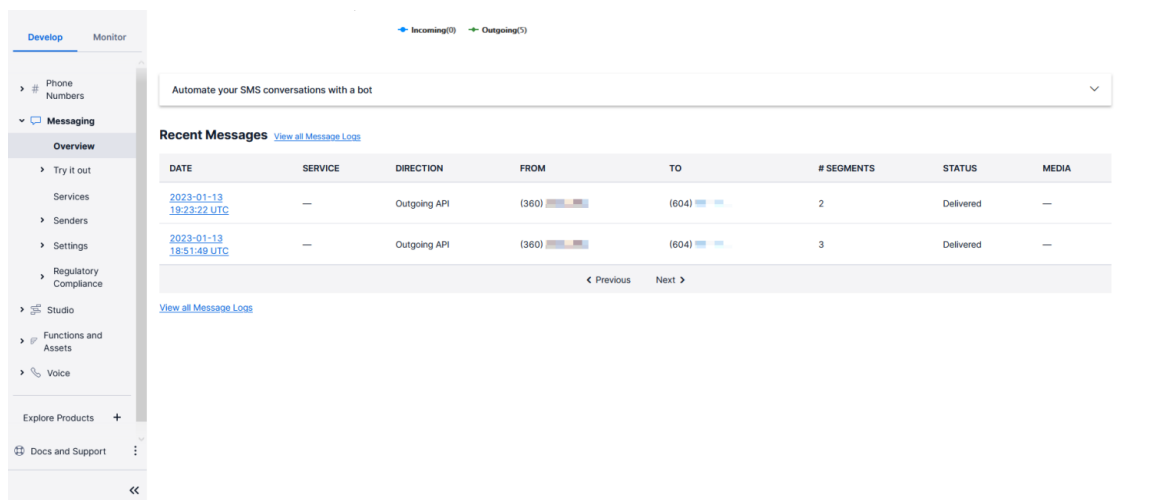

### To view automation stitch diagnostics:

```
# diagnose debug enable
# diagnose debug application autod -1

2023-01-13 11:23:19 __action_cli_script_open()-180: cli script action:Uptime is called. svc
ctx:0x10b4d5c0
accprof:prof_admin script:
get system performance status | grep Uptime

2023-01-13 11:23:19 0: get system performance status | grep Uptime
2023-01-13 11:23:20 __cli_script_close()-115: cli script:
autod.569
output:
##### script name: autod.569 #####

===== #1, 2023-01-13 11:23:19 =====
FGDocs $ get system performance status | grep Uptime
Uptime: 49 days, 2 hours, 14 minutes
```

```

2023-01-13 11:23:20 0: config system auto-script
2023-01-13 11:23:20 0: delete "autod.569"
2023-01-13 11:23:20 0: end
2023-01-13 11:23:20 __action_cli_script_close()-207: cli script action is done. script:
get system performance status | grep Uptime
output:
##### script name: autod.569 #####

===== #1, 2023-01-13 11:23:19 =====
FGDocs $ get system performance status | grep Uptime
Uptime: 49 days, 2 hours, 14 minutes

2023-01-13 11:23:20 auto_generate_generic_curl_request()-443: Generating generic automation
CURL request for action (Twilio-SMS-Uptime).
2023-01-13 11:23:20 auto_generate_generic_curl_request()-462: Formatting HTTP body with
action parameters.
2023-01-13 11:23:20 auto_generate_generic_curl_request()-495: Generic automation CURL
request POST data for action (Twilio-SMS-Uptime):
Body=##### script name: autod.569 #####

===== #1, 2023-01-13 11:23:19 =====
FGDocs $ get system performance status | grep Uptime
Uptime: 49 days, 2 hours, 14 minutes
&From=%2B1360*****&To=%2B1604*****

2023-01-13 11:23:20 auto_generate_generic_curl_request()-550: Generic automation CURL
request Host header: api.twilio.com
2023-01-13 11:23:20 auto_generate_generic_curl_request()-553: Adding 2 user defined headers
2023-01-13 11:23:23 auto_curl_perform()-114: Failed to send curl request. http status code:
201

```

Although the final line in this debug output shows Failed to send curl request. http status code: 201, the HTTP status code 201 indicates that the request was successful and a response code was created.

## Slack integration webhook

A webhook can be created to post messages and notifications to Slack.

In this example, a configuration change triggers the FortiGate to post a message to Slack.

### To create a webhook automation stitch for Slack integration in the GUI:

1. Create an incoming webhook in Slack. See [Sending messages using Incoming Webhooks](#) for more information.
2. Go to *Security Fabric > Automation* and click *Create New*.
3. Enter the stitch name.
4. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Configuration Change*.
  - c. Enter a name (*config change*).
  - d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.

## 5. Configure the action:

- a. Click *Add Action*.
- b. Click *Create* and select *Webhook*.
- c. Enter the following:

<b>Name</b>	send to Slack
<b>Protocol</b>	HTTPS
<b>URL</b>	Enter the incoming webhook URL created in Slack
<b>Custom port</b>	Enable and enter 443
<b>Method</b>	POST
<b>HTTP body</b>	{\"channel\": \"#delivery\", \"username\": \"tleela\", \"text\": \"Configuration changed\", \"icon_emoji\": \"worried:\"}
<b>HTTP header</b>	Content-type : application/json

The screenshot shows the 'Create New Automation Action' window for a 'Webhook' action. The 'Name' field is 'send to Slack'. The 'Minimum interval' is '0' seconds. The 'Description' field is empty. Under the 'Webhook' section, the 'Protocol' is 'HTTPS', the 'URL' is 'https://hooks.slack.com/services/XXXXXXXX', 'Custom port' is checked and set to '443', and the 'Method' is 'POST'. The 'HTTP body' contains a JSON string: {\"channel\": \"#delivery\", \"username\": \"tleela\", \"text\": \"Configuration changed\", \"icon\_emoji\": \"worried:\"}. The 'HTTP header' has 'Content-type' set to 'application/json'. Under the 'Security' section, 'TLS certificate' is disabled and 'Verify remote host' is enabled. The 'OK' button is highlighted in green.

- d. Click *OK*.
- e. Select the action in the list and click *Apply*.

6. Click *OK*.**To create a webhook automation stitch for Slack integration in the CLI:**

1. Create an incoming webhook in Slack. See [Sending messages using Incoming Webhooks](#) for more information.
2. Create the automation trigger:

```
config system automation-trigger
  edit "config change"
    set event-type config-change
  next
end
```

**3. Create the automation action:**

```

config system automation-action
  edit "send to Slack"
    set action-type webhook
    set protocol https
    set uri "hooks.slack.com/services/XXXXXXXX"
    set http-body "{\"channel\": \"#delivery\", \"username\": \"tleela\", \"text\": \"Configuration changed\", \"icon_emoji\": \":worried:\"}"
    set port 443
    config http-headers
      edit 1
        set key "Content-type"
        set value "application/json"
      next
    end
  next
end

```

**4. Create the automation stitch:**

```

config system automation-stitch
  edit "Slack"
    set trigger "config change"
    config actions
      edit 1
        set action "send to Slack"
        set required enable
      next
    end
  next
end

```

## Microsoft Teams integration webhook

A webhook can be created to post messages and notifications to Microsoft Teams.

In this example, a configuration change triggers the FortiGate to post a message to Teams.

**To create a webhook automation stitch for Teams integration in the GUI:**

1. Create an incoming webhook in Teams. See [Create an incoming webhook](#) for information.
2. Go to *Security Fabric > Automation* and click *Create New*.
3. Enter the stitch name.
4. Configure the trigger:
  - a. Click *Add Trigger*.
  - b. Click *Create* and select *Configuration Change*.
  - c. Enter a name (*Teams*).
  - d. Click *OK*.
  - e. Select the trigger in the list and click *Apply*.
5. Configure the action:
  - a. Click *Add Action*.
  - b. Click *Create* and select *Webhook*.

c. Enter the following:

<b>Name</b>	send to Teams
<b>Protocol</b>	HTTPS
<b>URL</b>	Enter the incoming webhook URL created in Teams
<b>Custom port</b>	Enable and enter 443
<b>Method</b>	POST
<b>HTTP body</b>	{\"text\": \"<message to send>\" }
<b>HTTP header</b>	Content-type : application/json

The screenshot shows the 'Create New Automation Action' window for a 'Webhook' action. The left sidebar shows the 'Automation' menu with 'Trigger' and 'Teams' options. The main area is titled 'Webhook' with a description 'Send an HTTP request using a REST callback.' The configuration fields are as follows:

- Name:** send to Teams
- Minimum interval:** 0 second(s)
- Description:** (empty)
- Webhook Section:**
  - Protocol:** HTTP (selected), HTTPS
  - URL:** https://outlook.office.com/webhook/XXXXXXXXXXXX/IncomingWebhook/XXXXXXXXXXXX/XXXXXXXXXXXX (81/1023)
  - Custom port:** ☒ 443
  - Method:** POST (selected), PUT, GET, PATCH, DELETE
  - HTTP body:** {\"text\": \"<message to send>\" } (35/4095)
  - HTTP header:** Content-type : application/json
- Security Section:**
  - TLS certificate:** ☐
  - Verify remote host:** ☒

Buttons at the bottom: OK, Cancel.

d. Click **OK**.

e. Select the action in the list and click *Apply*.

6. Click **OK**.

### To create a webhook automation stitch for Teams integration in the CLI:

1. Create an incoming webhook in Teams. See [Create an incoming webhook](#) for information.
2. Create the automation trigger:

```
config system automation-trigger
  edit "Teams"
    set event-type config-change
  next
end
```

3. Create the automation action:

```
config system automation-action
  edit "send to Teams"
    set action-type webhook
```

```

        set protocol https
        set uri
        "outlook.office.com/webhook/XXXXXXXXXXXX/IncomingWebhook/XXXXXXXXXXXX/XXXXXXXXXXXX"
        set http-body "{ \"text\": \"<message to send>\" }"
        set port 443
        config http-headers
            edit 1
                set key "Content-type"
                set value "application/json"
            next
        end
    next
end

```

#### 4. Create the automation stitch:

```

config system automation-stitch
    edit "Teams"
        set trigger "Teams"
        config actions
            edit 1
                set action "send to Teams"
                set required enable
            next
        end
    next
end

```



For information about more advanced messages that can be configured and sent to the Teams incoming webhook, see [Sending messages to connectors and webhooks](#).

## System action

The system action can be used to back up the configuration of the FortiGate, reboot the FortiGate, or shut down the FortiGate.

These actions can occur even if the FortiGate is in conserve mode, and allows the automation stitch to bypass the CLI user confirmation prompts, which the CLI script action does not support.

```

config system automation-action
    edit <name>
        set action-type system-actions
        set system-action {reboot | shutdown | backup-config}
    next
end

```

## Example

In this example, an automation stitch is created that uses a low-memory event trigger, a backup-config action to back up the configuration to the FortiGate's disk (see [Configuration backups on page 67](#) for more details), and then a reboot action to reboot the FortiGate. There is a 120-second delay between the two actions.

## To configure an automation stitch with system actions in the GUI:

1. Configure the trigger:
  - a. Go to *Security Fabric > Automation*, select the *Trigger* tab, and click *Create New*.
  - b. In the *System* section, click *Conserve Mode*.
  - c. Enter a name (*conserver-mode*).
  - d. Click *OK*.
2. Configure the back up action:
  - a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
  - b. In the *General* section, click *System Action* and enter the following:

<b>Name</b>	<i>Backup Config Disk</i>
<b>Description</b>	<i>Default automation action configuration for backing up the configuration on disk.</i>
<b>Action</b>	<i>Backup configuration</i>

Edit Automation Action

System Action
Execute a system action.

Name

Minimum interval
second(s)

Description

Default automation action configuration for backing up the configuration on disk.
81/255

System Action

Action

OK
Cancel

Statistics
Last Triggered
Never
Trigger Count
0

Additional Information
API Preview
References
Edit in CLI

Guides
FortiNAC Quarantine
VMWare NSX Security Tag
Slack Notification
AWS Lambda
Azure Function
Google Cloud Function
AliCloud Function
CLI Script
Webhook

Documentation
Online Help
Video Tutorials

- c. Click *OK*.
3. Configure the reboot action:
  - a. Go to *Security Fabric > Automation*, select the *Action* tab, and click *Create New*.
  - b. In the *General* section, click *System Action* and enter the following:

<b>Name</b>	<i>Reboot FortiGate</i>
<b>Description</b>	<i>Default automation action configuration for rebooting this FortiGate unit.</i>
<b>Action</b>	<i>Reboot</i>
<b>Minimum interval</b>	<i>5 minutes</i>

c. Click **OK**.

4. Configure the stitch:

- a. Go to *Security Fabric > Automation*, select the *Stitch* tab, and click *Create New*.
- b. Enter the name, *system-action-stitch*.
- c. Click *Add Trigger*. Select *conserver-mode* and click *Apply*.
- d. Click *Add Action*. Select *Backup Config Disk* and click *Apply*.
- e. Click *Add Action*. Select *Reboot FortiGate* and click *Apply*.
- f. Click *Add delay* (between the actions). Enter *120* and click *OK*.

g. Click **OK**.



**To configure an automation stitch with system actions in the CLI:****1. Configure the trigger:**

```
config system automation-trigger
  edit "conserver-mode"
    set event-type low-memory
  next
end
```

**2. Configure the back up and reboot actions:**

```
config system automation-action
  edit "Backup Config Disk"
    set description "Default automation action configuration for backing up the
configuration on disk."
    set action-type system-actions
    set system-action backup-config
  next
  edit "Reboot FortiGate"
    set description "Default automation action configuration for rebooting this
FortiGate unit."
    set action-type system-actions
    set system-action reboot
    set minimum-interval 300
  next
end
```

**3. Configure the stitch:**

```
config system automation-stitch
  edit "system-action-stitch"
    set trigger "conserver-mode"
    config actions
      edit 1
        set action "Backup Config Disk"
        set required enable
      next
      edit 2
        set action "Reboot FortiGate"
        set delay 120
        set required enable
      next
    end
  next
end
```

**Verification**

When the FortiGate enters conserve mode due to low memory, the automation stitch will be triggered and it will back up the configuration to the FortiGate disk, then reboot the FortiGate.

**To confirm that the stitch was triggered in the GUI:**

1. Go to *Security Fabric > Automation* and select the *Stitch* tab.
2. Verify the *Last Triggered* column.

**To confirm that the stitch was triggered in the CLI:**

```
# diagnose test application autod 3
alert mail log count: 0

stitch: system-action-stitch

local hit: 1 relayed to: 0 relayed from: 0
last trigger:Thu Jun 23 11:31:25 2022
last relay:
actions:
  Backup Config Disk:
    done: 1 relayed to: 0 relayed from: 0
    last trigger:Thu Jun 23 11:31:25 2022
    last relay:
  Reboot FortiGate:
    done: 0 relayed to: 0 relayed from: 0
    last trigger:Thu Jun 23 11:31:25 2022
    last relay:

logid to stitch mapping:
id:22011 local hit: 1 relayed hits: 0
  system-action-stitch

log category to stitch mapping:
```

**To locate the backed up configuration in the GUI:**

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration > Revisions*.
2. Click the + in the table to expand and view more details.

**To locate the backed up configuration in the CLI:**

```
# execute revision list config
Last Firmware Version: V0.0.0-build000-REL0
1  2022-04-01 09:27:26 daemon_admin V7.2.0-build1157-REL0 Automatic backup
(upgrade)
2  2022-06-20 13:41:02 daemon_admin V7.2.1-build1254-REL0 Automatic backup
(upgrade)
3  2022-06-23 11:31:25 daemon_admin V7.2.1-build1254-REL0 Autod backup config
by stitch: system-action-stitch
```

## Public and private SDN connectors

Cloud SDN connectors provide integration and orchestration of Fortinet products with public and private cloud solutions. In a typical cloud environment, resources are dynamic and often provisioned and scaled on-demand. By using an SDN connector, you can ensure that changes to cloud environment attributes are automatically updated in the Security Fabric.

To protect the East-West or North-South traffic in these environments, the FortiGate uses the SDN connector to sync the dynamic addresses that these volatile environments use. You can then configure the dynamic address objects as sources or destinations for firewall policies. When you make changes to cloud environment resources, such as moving

them to a new location or assigning different IP addresses to them, you do not need to modify the policy in FortiOS, as the SDN connector syncs changes to the cloud address objects.

These configurations consist of three primary steps:

1. Configure the cloud SDN connector to connect your FortiGate and public or private cloud account.
2. Create dynamic address objects to use the SDN connector. Use filters to sync only cloud address objects that you require.
3. Apply the dynamic address objects to your firewall policy to protect your traffic.

This chapter explores the steps in detail and describes how to connect to each currently supported cloud platform. This chapter does not discuss cloud account role-based or permission requirements. The respective cloud documents contain this information.

The following external connectors are available in the Security Fabric:

Category	Connector	Example configuration
<b>Public SDN</b>		
	<b>Amazon Web Services (AWS)</b>	<a href="#">AWS SDN connector using access keys on page 2844</a>
	<b>Microsoft Azure</b>	<a href="#">Azure SDN connector using service principal on page 2850</a>
	<b>Google Cloud Platform (GCP)</b>	<a href="#">GCP SDN connector using service account on page 2858</a>
	<b>Oracle Cloud Infrastructure (OCI)</b>	<a href="#">OCI SDN connector using certificates on page 2884</a>
	<b>IBM Cloud</b>	<a href="#">IBM Cloud SDN connector using API keys on page 2860</a>
	<b>AliCloud</b>	<a href="#">AliCloud SDN connector using access key on page 2842</a>
<b>Private SDN</b>		
	<b>Kubernetes</b>	<a href="#">Kubernetes (K8s) SDN connectors on page 2864</a>
	<b>VMware ESXi</b>	<a href="#">VMware ESXi SDN connector using server credentials on page 2893</a>
	<b>VMware NSX</b>	<a href="#">VMware NSX-T Manager SDN connector using NSX-T Manager credentials on page 2895</a>
	<b>OpenStack (Horizon)</b>	<a href="#">OpenStack SDN connector using node credentials on page 2886</a>
	<b>Application Centric Infrastructure (ACI)</b>	<a href="#">Cisco ACI SDN connector using a standalone connector on page 2851</a>
	<b>Nuage Virtualized Services Platform</b>	<a href="#">Nuage SDN connector using server credentials on page 2880</a>
	<b>Nutanix</b>	<a href="#">Nutanix SDN connector using server credentials on page 2882</a>
	<b>SAP</b>	<a href="#">SAP SDN connector on page 2890</a>
<b>Endpoint/Identity</b>		

Category	Connector	Example configuration
	<b>FSSO Agent on Windows AD</b>	<a href="#">Fortinet single sign-on agent on page 2906</a>
	<b>Symantec Endpoint Protection</b>	<a href="#">Symantec endpoint connector on page 2908</a>
	<b>Poll Active Directory Server</b>	<a href="#">Poll Active Directory server on page 2907</a>
	<b>RADIUS Single Sign-On Agent</b>	<a href="#">RADIUS single sign-on agent on page 2914</a>
	<b>Exchange Server</b>	<a href="#">Exchange Server connector on page 2917</a>
<b>Threat Feeds</b>		
	<b>FortiGuard Category</b>	<a href="#">Threat feeds on page 2921</a>
	<b>IP Address</b>	<a href="#">IP address threat feed on page 2934</a>
	<b>Domain Name</b>	<a href="#">Domain name threat feed on page 2937</a>
	<b>Malware Hash</b>	<a href="#">Malware hash threat feed on page 2939</a>



If VDOMs are enabled, SDN and Threat Feeds connectors are in the global settings, and Endpoint/Identity connectors are per VDOM.

## Getting started with public and private SDN connectors

You can use SDN connectors to connect your FortiGate to public and private cloud solutions. By using an SDN connector, you can ensure that changes to cloud environment attributes are automatically updated in the Security Fabric. You can use SDN connector address objects to create policies that provide dynamic access control based on cloud environment attribute changes. There is no need to manually reconfigure addresses and policies whenever changes to the cloud environment occur.

There are four steps to creating and using an SDN connector:

1. Gather the required information. The required information depends on which public or private cloud solution SDN connector you are configuring.
2. [Creating the SDN connector on page 2839](#)
3. [Creating an SDN connector address on page 2839](#)
4. [Adding the address to a firewall policy on page 2841](#)

The following provides general instructions for creating an SDN connector and using the dynamic address object in a firewall policy. For instructions for specific public and private cloud solutions, see the relevant topic in this guide. For advanced scenarios regarding SDN connectors, see the appropriate [FortiOS 7.2 cloud platform guide](#).

## Creating the SDN connector

### To create an SDN connector in the GUI:

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.
3. Click the desired public or private cloud.
4. Enter the *Name*, *Status*, and *Update Interval* for the connector.
5. Enter previously collected information for the connector as needed.
6. Click *OK*.

### To create an SDN connector in the CLI:

```
config system sdn-connector
  edit <name>
    set status {enable | disable}
    set type {connector type}
    ...
    set update-interval <integer>
  next
end
```



The available CLI commands vary depending on the selected SDN connector type.

---

## Creating an SDN connector address

You can use an SDN connector address in the following ways:

- As the source or destination address for firewall policies.
- To automatically update changes to addresses in the public or private cloud environment, based on specified filters.
- To automatically apply changes to firewall policies that use the address, based on specified filters.

### To create an SDN connector address in the GUI:

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*.
3. Configure the address:
  - a. Set the *Type* to *Dynamic*.
  - b. From the *Sub Type* dropdown list, select *Fabric Connector Address*.
  - c. From the *SDN Connector* dropdown list, select the desired SDN connector.
  - d. From the *Filter* dropdown list, configure the desired filter. The filters available depend on the selected SDN connector type. The SDN connector automatically populates and updates IP addresses only for instances that satisfy the filter requirements. In this example, the address will automatically populate and update IP addresses only for AliCloud instances that belong to the specified security group:

You can set filtering conditions using multiple entries with AND ("&") or OR ("|"). When both AND and OR are specified, AND is interpreted first, then OR.

- e. Configure other settings as desired.
  - f. Click OK.
4. Ensure that the SDN connector resolves dynamic firewall IP addresses as configured:
    - a. Go to *Policy & Objects > Addresses*.
    - b. Hover over the address that you created to see a list of IP addresses for instances that satisfy the filter that you configured. In this case, the IP addresses of instances that belong to the specified security group display:

+ Create New Edit Clone Delete Search	
Name	Type
Address 31	
FIREWALL_AUTH	all-address-security resolves to:
SSLVPN_TUNNEL	<ul style="list-style-type: none"> <li>10.0.0.16</li> <li>10.0.0.17</li> <li>10.0.0.20</li> </ul>
all-address-OR	connector Address (ACS)
all-address-security	Fabric Connector Address (ACS)

### To create an SDN connector address in the CLI:

1. Create the address:

```
config firewall address
  edit <name>
    set type dynamic
    set sdn <sdn_connector>
    set visibility enable
    set associated-interface <interface_name>
    set color <integer>
    ...
    set comment <comment>
    config tagging
      edit <name>
        set category <string>
        set tags <strings>
      next
    end
  next
end
```

2. Ensure that the SDN connector resolves dynamic firewall IP addresses as configured by running `show`. The following shows example output:

```
config firewall address
  edit "ali-address-security"
    set type dynamic
    config list
      edit "10.0.0.16"
      next
      edit "10.0.0.17"
      next
      edit "10.0.20.20"
      next
    end
  ...
next
end
```



The available CLI commands vary depending on the selected SDN connector type.

---

## Adding the address to a firewall policy

You can use an SDN connector address as the source or destination address in a policy.

### To add the address to a firewall policy in the GUI:


1. Go to *Policy & Objects > Firewall Policy*.
2. Click *Create New*.
3. Use the SDN connector address as the source or destination address.
4. Configure the remaining settings as needed.
5. Click *OK*.

### To add the address to a firewall policy in the CLI:

```
config firewall policy
  edit 0
    set name <name>
    set srcintf <port_name>
    set dstintf <port_name>
    set srcaddr <firewall_address>
    set dstaddr <firewall_address>
    set action accept
    set schedule <schedule>
    set service <service>
  next
end
```

Connector tooltips

In *Security Fabric > External Connectors*, hover over an SDN connector to view a tooltip that shows basic configuration information.

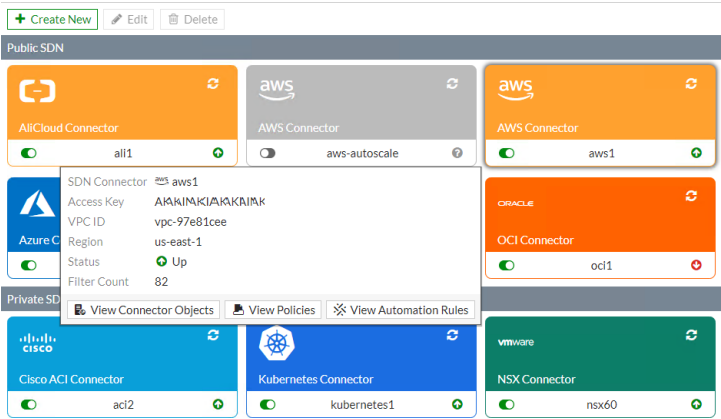

Three buttons provide additional information:

Button	Information
View Connector Objects	Connector's dynamic objects, such as filters and instances.
View Policies	List of policies that use the dynamic addresses from the connector.
View Automation Rules	List of automation actions that use the connector.

AliCloud SDN connector using access key

FortiOS automatically updates dynamic addresses for AliCloud using an AliCloud SDN connector, including mapping the following attributes from AliCloud instances to dynamic address groups in FortiOS:

- ImageId
- InstanceId
- SecurityGroupId
- VpcId
- VSwitchId
- TagKey
- TagValue

To configure AliCloud SDN connector using the GUI:

1. Configure the AliCloud SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, and select *AliCloud*.
  - c. Configure as shown, substituting the access key, secret, and region ID for your deployment. The update



interval is in seconds.

**Edit External Connector**

**Public SDN**

Alibaba Cloud

**Connector Settings**

Name: ali1

AccessKey ID: LTAIKmERWEuEOChg

AccessKey Secret: •••••••• Change

Region ID: us-west-1

Update Interval: Use Default Specify 30

Status: On

2. Create a dynamic firewall address for the configured AliCloud SDN connector:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*, then select *Address*.
  - c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the address will automatically populate and update IP addresses only for AliCloud instances that belong to the specified security group:

**Edit Address**

Name: ali-address-security

Color: Change

Type: Fabric Connector Address

SDN Connector: ali1

Filter: SecurityGroupId=sg-rj9bp5ax5kv

Interface:

Show in Address List: ☒

Comments:

Tags: Add Tag

OK Cancel

3. Ensure that the AliCloud SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the security group configured in step 2:

+ Create New Edit Clone Delete Search	
Name	Type
Address 31	
FIREWALL_AUTH	all-address-security resolves to:
SSLVPN_TUNNEL	<ul style="list-style-type: none"> <li>10.0.0.16</li> <li>10.0.0.17</li> <li>10.0.0.20</li> </ul>
ali-address-OR	ector Address (ACS)
ali-address-security	Fabric Connector Address (ACS)

**To configure AliCloud SDN connector using CLI commands:****1. Configure the AliCloud SDN connector:**

```
config system sdn-connector
  edit "ali1"
    set type acs
    set access-key "LTAIKmERWEuEOChg"
    set secret-key xxxxx
    set region "us-west-1"
    set update-interval 30
  next
end
```

**2. Create a dynamic firewall address for the configured AliCloud SDN connector with the supported AliCloud filter. In this example, the AliCloud SDN Connector will automatically populate and update IP addresses only for instances that belong to the specified security group:**

```
config firewall address
  edit "ali-address-security"
    set type dynamic
    set sdn "ali1"
    set filter "SecurityGroupId=sg-rj9bp5ax5kwy3gqdzqb"
  next
end
```

**3. Confirm that the AliCloud SDN connector resolves dynamic firewall IP addresses using the configured filter:**

```
config firewall address
  edit "ali-address-security"
    set type dynamic
    set sdn "ali1"
    set filter "SecurityGroupId=sg-rj9bp5ax5kwy3gqdzqb"
    config list
      edit "10.0.0.16"
      next
      edit "10.0.0.17"
      next
      edit "10.0.0.20"
      next
    end
  next
end
```

## AWS SDN connector using access keys

FortiOS automatically updates dynamic addresses for AWS using an AWS SDN connector, including mapping attributes from AWS instances to dynamic address groups in FortiOS.

Configuring the SDN connector using the GUI, then checking the configuration using the CLI is recommended.

**To configure an AWS SDN connector using the GUI:****1. Configure the AWS SDN connector:**

- a. Go to *Security Fabric > External Connectors*.
- b. Click *Create New*, and select *Amazon Web Services (AWS)*.
- c. In the *Access key ID* field, enter the key created in the AWS management portal.

- d. In the *Secret access key* field, enter the secret access key accompanying the above access key.
- e. In the *Region name* field, enter the region name. Refer to [AWS Regions and Endpoints](#) for the desired region name.
- f. In the *VPC ID* field, enter the VPC ID within the specified region you desire to cover with the SDN connector.
- g. Click OK.

**2. Check the configuration using the CLI:**

```
config system sdn-connector
  edit "<connector-name>"
  show
```

The output resembles the following:

```
config system sdn-connector
  edit "<connector-name>"
    set access-key "<example-access-key>"
    set secret-key ENC <example-secret-key>
    set region "us-west-2"
    set vpc-id "vpc-e1e4b587"
    set update-interval 1
  next
end
```


If you see that the SDN connector is not enabled in *Security Fabric > External Connectors* in the GUI, run the following commands to enable the SDN connector:

```
diagnose deb application awsd -1
diagnose debug enable
```

The output may display an error like the following:

```
FGT # awsd sdn connector AWS_SDN prepare to update
awsd sdn connector AWS_SDN start updating
aws curl response err, 403
<?xml version="1.0" encoding="UTF-8"?>
<Response><Errors><Error><Code>UnauthorizedOperation</Code><Message>You are not
  authorized to perform this
  operation.</Message></Error></Errors><RequestID>8403cc11-b185-41da-ad6d-
  23bb4db7d00a</RequestID></Response>
awsd curl failed 403
awsd sdn connector AWS_SDN failed to get instance list
aws curl response err, 403
{"Message": "User: arn:aws:iam::956224459807:user/jcarcavallo is not authorized to
  perform: eks:ListClusters on resource: arn:aws:eks:us-east-
  1:956224459807:cluster/*"}
awsd sdn connector AWS_SDN get EKS cluster list failed
awsd sdn connector AWS_SDN list EKS cluster failed
awsd sdn connector AWS_SDN start updating IP addresses
awsd sdn connector AWS_SDN finish updating IP addresses
awsd reap child pid: 569
```

In this case, you must configure power user access for the current administrator in the AWS management console:

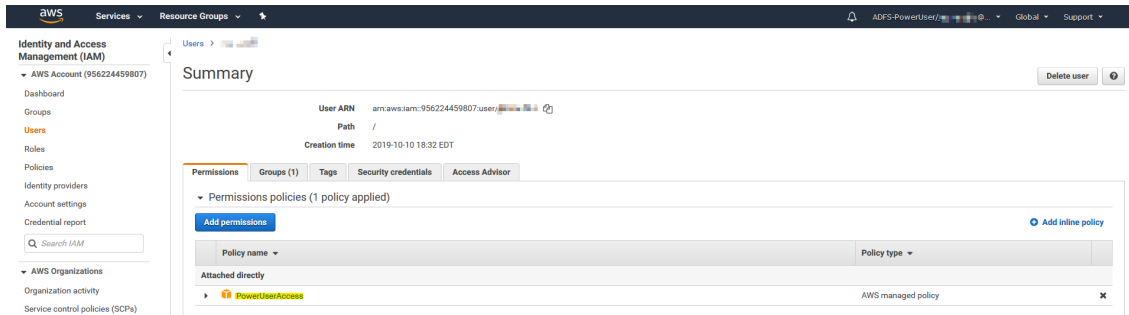

After configuring power user access, run the following commands:

```
diagnose deb application awsd -1
diagnose debug enable
```

The output should display without error, as follows:

```
FGT # AWSD: update sdn connector AWS_SDN status to enabled
awsd sdn connector AWS_SDN prepare to update
awsd sdn connector AWS_SDN start updating
awsd get ec2 instance info successfully
awsd sdn connector AWS_SDN start updating IP addresses
awsd sdn connector AWS_SDN finish updating IP addresses
awsd reap child pid: 893
```

The AWS connector is now enabled.

**3. Create a dynamic firewall address for the configured AWS SDN connector:**

- a. Go to *Policy & Objects > Addresses*.
- b. Click *Create New*, then select *Address*.
- c. From the *Type* dropdown list, select *Dynamic*.
- d. From the *Sub Type* dropdown list, select *Fabric Connector Address*.

- e. In the *Filter* field, add the desired filters. The following filters are supported:

Description	Key	Example value
Architecture	architecture	x86
Autoscaling group	AutoScaleGroup	10703c-4f731e90-fortigate-payg-auto-scaling-group
AZ	placement.availabilityzone	us-east-1a
Endpoint DNS name	EndpointDNSName	vpce-06795... This filter supports the following ENI IP address types: <ul style="list-style-type: none"> <li>• API gateway private endpoint</li> <li>• VPC endpoint for data API for Aurora</li> <li>• AWS PrivateLink for S3</li> <li>• VPC endpoints for Lambda</li> </ul>
Group name	placement.groupname	
Image ID	imageId	ami-123456
Instance ID	instanceId	i-12345678
Instance type	instanceType	t2.micro
Key name	keyName	
Kubernetes cluster	k8s_cluster	
Kubernetes label and its name	k8s_label.Name	
Kubernetes namespace	k8s_namespace	
Kubernetes node name	k8s_nodename	
Kubernetes pod name	k8s_podname	
Kubernetes region	k8s_region	
Kubernetes service name	k8s_servicename	
Kubernetes zone	k8s_zone	
Private DNS name	privateDnsName	ip-172-31-10-211.us-west-2.compute.internal
Public DNS name	publicDnsName	ec2-54-202-168-254.us-west-2.compute.amazonaws.com
Security group ID	SecurityGroupId	
Subnet ID	subnetId	sub-123456
Tag and its name. This key supports	tag.Name	

Description	Key	Example value
a maximum of eight tags.		
Tenancy placement	placement.tenancy	
VPC ID	VpcId	

4. Ensure that the AWS SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the security group configured in step 2.

The following is an example for a public SDN address type:

Name	Type	Details	Interface	Visibility	Ref.
FABRIC_DEVICE	Subnet	0.0.0.0/0		Visible	0
FIREWALL	Subnet	0.0.0.0/0		Hidden	0
SSLVPN	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (sslroot)	Visible	2
all	Subnet	0.0.0.0/0		Visible	0
aws-ec2	Fabric Connector Address (AWS)			Visible	1

The following is an example for a private SDN address type:

Name	Type	Details	Interface	Visibility	Ref.
FABRIC_DEVICE	Subnet	0.0.0.0/0		Visible	0
FIREWALL	Subnet	0.0.0.0/0		Hidden	0
SSLVPN	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (sslroot)	Visible	2
all	Subnet	0.0.0.0/0		Visible	0
aws-ec2	Fabric Connector Address (AWS)			Visible	1
aws-eks1	Fabric Connector Address (AWS)			Visible	1

## To configure AWS SDN connector using CLI commands:

1. Configure the AWS connector:

```
config system sdn-connector
edit "<connector-name>"
    set access-key "<example-access-key>"
    set secret-key ENC <example-secret-key>
    set region "us-west-2"
    set vpc-id "vpc-e1e4b587"
    set update-interval 1
next
end
```

**2. Create a dynamic firewall address for the configured AWS SDN connector with the supported filter:**

```
config firewall address
  edit "aws-ec2"
    set type dynamic
    set sdn "<connector-name>"
    set filter "SecurityGroupId=sg-05f4749cf84267548"
    set sdn-addr-type public
  next
  edit "aws-eks1"
    set type dynamic
    set sdn "<connector-name>"
    set filter "K8S_Region=us-west-2"
  next
end
```

**3. Confirm that the AWS SDN connector resolves dynamic firewall IP addresses using the configured filter:**

```
config firewall address
  edit "aws-ec2"
    set type dynamic
    set sdn "<connector-name>"
    set filter "SecurityGroupId=sg-05f4749cf84267548"
    set sdn-addr-type public
    config list
      edit "34.222.246.198"
      next
      edit "54.188.139.177"
      next
      edit "54.218.229.229"
      next
    end
  next
  edit "aws-eks1"
    set type dynamic
    set sdn "<connector-name>"
    set filter "K8S_Region=us-west-2"
    config list
      edit "192.168.114.197"
      next
      edit "192.168.167.20"
      next
      edit "192.168.180.72"
      next
      edit "192.168.181.186"
      next
      edit "192.168.210.107"
      next
    end
  next
end
```

**To add an EC2 instance to test automatic address population:**

1. Assume that you want to boot up another instance with an IP address of 34.222.246.178, which is currently stopped. This instance belongs to the security group that the aws-ec2 address is filtering for. In the AWS management portal, start the instance.
2. Verify that the instance is running.

3. At this point, running `show` again shows the SDN connector has automatically populated and added the 34.222.246.178 instance.

```
config firewall address
  edit "aws-ec2"
    set type dynamic
    set sdn "<connector-name>"
    set filter "SecurityGroupId=sg-05f4749cf84267548"
    set sdn-addr-type public
  config list
    edit "34.222.246.198"
    next
    edit "54.188.139.177"
    next
    edit "54.218.229.229"
    next
    edit "34.222.246.178"
    next
  end
next
end
```

Therefore, administrators do not need to add this instance to the address manually. When a firewall policy is applied to this address, 34.222.246.178 is automatically covered.

## Azure SDN connector using service principal

FortiOS automatically updates dynamic addresses for Azure using Azure SDN connector, including mapping attributes from Azure instances to dynamic address groups in FortiOS.

### To configure the Azure SDN connector using service principal:

1. Create an Azure SDN connector:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. Select *Microsoft Azure*.



- c. Configure the connector. See [Azure SDN connector service principal configuration requirements](#):

New External Connector

Public SDN

Microsoft Azure

Connector Settings

Name: azure1

Status: ☒ Enabled ☐ Disabled

Update interval: ☒ Use Default ☐ Specify

Azure Connector

Server region: Global

Directory ID: 942b80cd-1b14-42a1-8dcf-4b21dece6

Application ID: 14dbd5c5-307e-4ea4-8133-68738141

Client secret: [masked]

Resource path: ☐

- d. Click OK.

2. Create a dynamic firewall address for the Azure connector.

- a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
- b. From the *Type* dropdown list, select *Dynamic*.
- c. From the *Sub Type* dropdown list, select *Fabric Connector Address*.
- d. From the *SDN Connector* dropdown list, select the Azure SDN connector.
- e. In the *Filter* field, add filters as desired. The Azure SDN connector supports the following filters:
  - vm=<VM name>
  - securitygroup=<nsg id>
  - vnet=<VNet id>
  - subnet=<subnet id>
  - vmss=<VM scale set>
  - tag.<key>=<value>
  - servicetag=<value>
  - tag.<key>=<value>
- f. Click OK.
- g. Hover the cursor over the address name to see the dynamic IP addresses that the connector resolves.

## Cisco ACI SDN connector using a standalone connector

You can use Cisco Application Centric Infrastructure (ACI) SDN connectors in dynamic firewall addresses.

The Fortinet SDN Connector for Cisco ACI and Nuage Networks is a standalone connector that connects to SDN controllers within Cisco ACI and Nuage Networks. You must configure a connection to the Fortinet SDN connector in FortiOS to query the dynamic addresses.

## To configure a Cisco ACI connector in the GUI:

1. Create the Cisco ACI SDN connector:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. In the *Private SDN* section, click *Application Centric Infrastructure (ACI)*.
  - c. In the *Cisco ACI Connector* section, for *Type*, select *Fortinet SDN Connector* and configure the remaining settings as needed.
  - d. Click *OK*.

2. Create the dynamic firewall address for the connector:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the following settings:
    - i. For *Type*, select *Dynamic*.
    - ii. For *Sub Type*, select *Fabric Connector Address*.
    - iii. For *SDN Connector*, select the first ACI connector.
    - iv. Configure the remaining settings as needed.
  - c. Click *OK*.

**To verify the SDN connector resolves the dynamic firewall IP addresses in the GUI:**

1. Go to *Policy & Objects > Addresses*.
2. In the address table, hover over the address to view which IPs it resolves to.

**To configure a Cisco ACI connector in the CLI:**

1. Create the SDN connector:

```
config system sdn-connector
  edit "aci1"
    set type aci
    set server "172.18.64.31"
    set username "admin"
    set password xxxxxxxx
  next
end
```

2. Create the dynamic firewall address for the connector:

```
config firewall address
  edit "aci-address1"
    set type dynamic
    set sdn "aci1"
    set color 17
    set tenant "wqdai-ten"
    set epg-name "EPG-in"
    set sdn-tag "fffff"
  next
end
```

**To verify the dynamic firewall IPs are resolved by the SDN connector in the CLI:**

```
# diagnose firewall dynamic list

List all dynamic addresses:
aci1.aci.wqdai-ten.EPG-in.fffff: ID(171)
  ADDR(192.168.100.20)
```

## Retrieve IPv6 dynamic addresses from Cisco ACI SDN connector

IPv6 dynamic addresses can be retrieved from Cisco ACI SDN connectors. IPv6 addresses imported from Cisco ACI to the Fortinet SDN Connector VM can be imported into the FortiGate as IPv6 dynamic addresses. The Fortinet SDN Connector VM must be running version 1.1.10 or later.

```
config firewall address6
  edit <name>
    set type dynamic
    set sdn <ACI_connector>
  next
end
```

The following example assumes the Fortinet SDN Connector VM has already connected to Cisco ACI and learned the IPv6 addresses. See [Configuring the SDN Connector](#) in the Cisco ACI Administration Guide for more information. The *Dynamic Address List* values for the DN with the filter *tn-Fortinet/ap-ApplicationProfile/epg-App1* is used in this example.

Fortinet SDN Connector			
<a href="#">Upgrade Service</a> <a href="#">Restart Service</a> <a href="#">Change Password</a> <a href="#">Logout</a>			
<a href="#">Configuration</a> <a href="#">Running Status</a> <a href="#">Cache Content</a> <a href="#">Download Log</a>	Total DN with endpoints: 5000; Total number of endpoints: 50000 <div>search</div>		
DN ▲	TAGS	Dynamic Address List	Address Count
tn-Fortinet/ap-ApplicationProfile/epg-App0	[]	[{"ip": "90.212.147.139", "mac": "07:07:2b:68:b7:ff"}, {"ip": "93.189.75.86", "mac": "08:af:f8:e4:3f:6d"}, <a href="#">[...read more]</a>	10
tn-Fortinet/ap-ApplicationProfile/epg-App1	[]	[{"ip": "2001:cafe:654e:7d1:df4a:5f7c:3ab2:361a", "mac": "45:54:f2:67:c8:7e"}, {"ip": "205.111.127.223", "mac": "cb:05:86:b0:be:b2"}, {"ip": "204.184.220.95", "mac": "e3:46:a0:8c:b0:f1"}, {"ip": "2001:cafe:da3:69c3:4136:eb69:90ea:9481", "mac": "c4:a7:11:4a:a7:43"}, {"ip": "2001:cafe:b9a7:793a:ab04:9c29:385b:6e11", "mac": "85:f7:dc:94:f7:2f"}, {"ip": "2001:cafe:1880:e8d5:21af:4837:854:603c", "mac": "63:75:a8:11:c7:53"}, {"ip": "2001:cafe:100f:8d5b:14f9:ab2c:98fe:32c0", "mac": "c6:c8:20:37:20:50"}, {"ip": "190.153.226.57", "mac": "4e:61:e4:c8:4a:4d"}, {"ip": "221.208.85.160", "mac": "78:7e:40:90:62:96"}, {"ip": "98.175.149.97", "mac": "b6:82:f7:c3:83:93"}, <a href="#">[...read less]</a>	10
tn-Fortinet/ap-ApplicationProfile/epg-App10	[]	[{"ip": "196.140.217.136", "mac": "75:68:f4:10:15:d3"}, 	10

## To configure the Cisco ACI connector and dynamic address:

### 1. Configure the Cisco ACI SDN connector:

```
config system sdn-connector
  edit "aci_64.115_115"
    set type aci
    set server-list "10.6.30.115"
    set server-port 5671
    set username "admin"
    set password xxxxxxxx
  next
end
```

### 2. Verify that the SDN connector status is up:

```
# diagnose sys sdn status "aci_64.115_115"
SDN Connector          Type          Status
-----
aci_64.115_115        aci           Up
```

### 3. Configure the IPv6 dynamic firewall address (filters for tenant and endpoint group are used in this example):

```
config firewall address6
  edit "aci-add6-App1"
    set type dynamic
    set sdn "aci_64.115_115"
    set color 17
    set tenant "Fortinet"
    set epg-name "App1"
  next
end
```

### 4. Verify the list of resolved IPv6 addresses:

```
# diagnose firewall dynamic6 list "aci-add6-App1"
aci_64.115_115.aci.Fortinet.App1.*: ID(220)
  ADDR(2001:cafe:654e:7d1:df4a:5f7c:3ab2:361a)
  ADDR(2001:cafe:da3:69c3:4136:eb69:90ea:9481)
```

```
ADDR(2001:cafe:b9a7:793a:abc4:9c29:385b:6e11)
ADDR(2001:cafe:1880:e8d5:21af:4837:854:603c)
ADDR(2001:cafe:f00f:8d5b:f4f9:ab2c:98fe:32c0)
```

## ClearPass endpoint connector via FortiManager

ClearPass Policy Manager (CPPM) is a network access system that can send information about authenticated users to third party systems, such as a FortiGate or FortiManager.

In this example, communications are established between CPPM and FortiManager, and then the FortiManager forwards information to a managed FortiGate. On the FortiGate, the user information can be used in firewall policies and added to FSSO dynamic addresses.

### Configure the FortiManager


Establish communications between FortiManager and CPPM so that FortiManager can synchronize CPPM user groups. See [Creating a ClearPass connector](#) in the FortiManager Administration Guide.

FortiManager forwards the group information to managed FortiGates.

### Adding CPPM FSSO user groups to a local user group

**To add CPPM user groups to a local user group in the GUI:**

1. On the FortiGate, go to *User & Authentication > User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set *Type* to *Fortinet Single Sign-On (FSSO)*.
4. Click the *Members* field, and add one or more FSSO groups.  
FSSO groups can come from multiple sources; CPPM FSSO groups are prefixed with *cp\_* and are listed under the *FortiManager* heading.

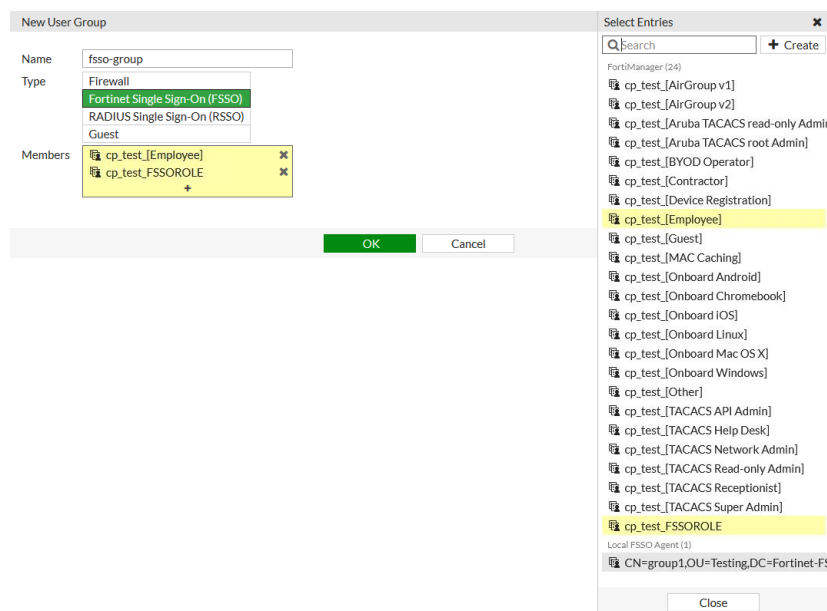

5. Click **OK**.

**To add CPPM user groups to a local user group in the CLI:**


```
config user group
  edit fssso-group
    set group-type fssso-service
    set member "cp_test_[Employee]" "cp_test_FSSOROLE"
  next
end
```

## Using the local FSSO user group in a firewall policy

**To add the local FSSO user group to a firewall policy in the GUI:**

1. Go to *Policy & Objects > Firewall Policy*.
2. Create a new policy, or edit an existing one.

- Click in the *Source* field and add the *fsso-group* user group.

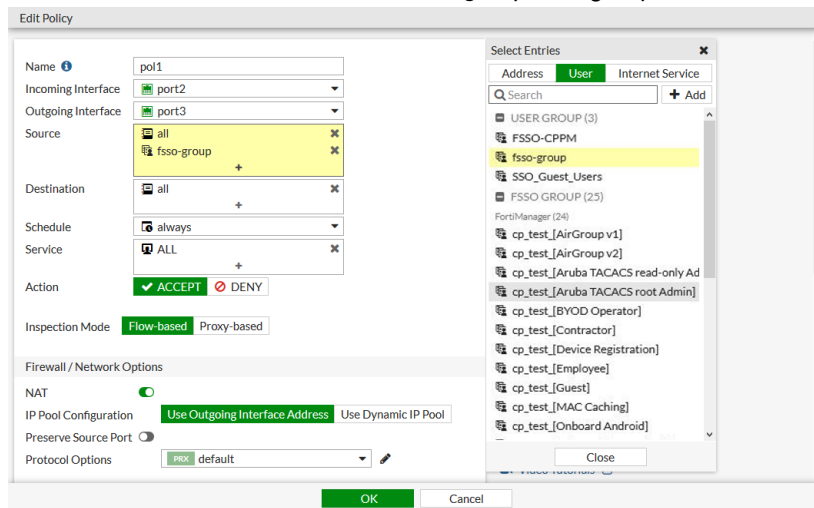

CPPM user groups can also be added directly to the policy.

- Click OK.

### To add the local FSSO user group to a firewall policy in the CLI:

```
config firewall policy
  edit 1
    set name "pol1"
    set srcintf "port2"
    set dstintf "port3"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set groups "fsso-group"
    set nat enable
  next
end
```

## Verification

### To verify that a user was added to the FSSO list on the FortiGate:

- Log on to the client and authenticate with CPPM.  
After successful authentication, the user is added to the FSSO list on the FortiGate.
- On the FortiGate, go to *Dashboard > Users & Devices* and look at the *Firewall Users* widget to verify that the user was added.

<div><div><div><div><div><div></div></div></div><div><div></div></div></div><div><div></div></div><div><div></div></div></div></div> <div><div>Refresh</div><div>Deauthenticate</div><div>Show all FSSO Logons</div><div>Search</div><div>Q</div><div>Enterprise_First_Floor</div></div>					
User Name	User Group	Duration	IP Address	Traffic Volume	Method
<div><div><div></div></div><div>fsso2</div></div>	<div><div><div></div></div><div>fsso-group</div><div>cp test FSSOROLE</div></div>	9 second(s)	10.1.100.188	0 B	<div><div><div></div></div><div>Fortinet Single Sign-On</div></div>

The user group *cp\_test\_FSSOROLE* is listed separately because the user is a member of that group on the CPPM.

**To verify that traffic can pass the firewall:**

1. Log on to the client and browse to an external website.
2. On the FortiGate, go to *Dashboard > FortiView Sources*.
3. Double-click on the user and select the *Destinations* tab to verify that traffic is being passed by the firewall.

**To verify the user address groups:**

```
show user adgrp
config user adgrp
    edit "cp_test_FSSOROLE"
        set server-name "FortiManager"
    next
    edit "cp_test_[AirGroup v1]"
        set server-name "FortiManager"
    next
    edit "cp_test_[AirGroup v2]"
        set server-name "FortiManager"
    next
    edit "cp_test_[Aruba TACACS read-only Admin]"
        set server-name "FortiManager"
    next
    edit "cp_test_[Aruba TACACS root Admin]"
        set server-name "FortiManager"
    next
    edit "cp_test_[BYOD Operator]"
        set server-name "FortiManager"
    next
    edit "cp_test_[Contractor]"
        set server-name "FortiManager"
    next
    edit "cp_test_[Device Registration]"
        set server-name "FortiManager"
    next
    ...
    edit "CN=group1,OU=Testing,DC=Fortinet-FSSO,DC=COM"
        set server-name "Local FSSO Agent"    <----- !!!
    next
end
```

## GCP SDN connector using service account

FortiOS automatically updates dynamic addresses for GCP using a GCP SDN connector, including mapping attributes from GCP instances to dynamic address groups in FortiOS.

**To configure GCP connector using the GUI:**

1. In FortiOS, go to *Security Fabric > External Connectors*.
2. Click *Create New*, and select *Google Cloud Platform (GCP)*.

Note you can create only one SDN Connector per connector type. For example, you can create one entry for GCP.



### 3. Configure the connector as follows:

- a. **Project name:** Enter the name of the GCP project. The VMs whose IP addresses you want to populate should be running within this project.
- b. **Service account email:** Enter the email address associated with the service account that will call APIs to the GCP project specified above.
- c. **Private key:** Enter the private key statement as shown in the text box. For details, see [Creating a GCP service account](#).

Once the connector is successfully configured, a green indicator appears at the bottom right corner. If the indicator is red, the connector is not working. See [Troubleshooting GCP SDN Connector](#).

### 4. Create a dynamic firewall address for the configured GCP SDN connector:

- a. Go to *Policy & Objects > Addresses*. Click *Create New*, then select *Address*.
- b. Configure the address:
  - i. **Name:** Enter the desired name.
  - ii. **Type:** Select *Dynamic*.
  - iii. **Fabric Connector Type:** Select *Google Cloud Platform (GCP)*.
  - iv. **Filter:** The SDN connector automatically populates and updates only instances that match this filtering condition. Currently GCP supports the following filters:

- `id=<instance id>`: This matches an VM instance ID.
- `name=<instance name>`: This matches a VM instance name.
- `zone=<gcp zones>`: This matches a zone name.
- `network=<gcp network name>`: This matches a network name.
- `subnet=<gcp subnet name>`: This matches a subnet name.
- `tag=<gcp network tags>`: This matches a network tag.
- `label.<gcp label key>=<gcp label value>`: This matches a free form GCP label key and its value.

In the example, the filter is set as `'network=default & zone=us-central-1f'`. This configuration populates all IP addresses that belong to the default network in the zone us-central-1f.

You can set filtering conditions using multiple entries with AND ("&") or OR ("|"). When both AND and OR are specified, AND is interpreted first, then OR.

Note that wildcards (such as the asterisk) are not allowed in filter values.

v. Click OK.

The address has been created. Wait for a few minutes before the setting takes effect. You will know that the address is in effect when the exclamation mark disappears from the address entry. When you hover over the address, you can see the list of populated IP addresses.

Name	Type	Details
jkatogcp001	Fabric Connector Address (GCP)	

Tooltip: jkatogcp001 resolves to:

- 10.128.0.12
- 10.128.0.15
- 10.128.0.27
- 10.128.0.4
- 10.128.0.8
- 10.128.0.9
- 104.197.121.152
- 104.197.135.149
- 104.197.87.56
- 35.188.64.215
- 35.194.4.150
- 35.224.83.138

If the exclamation mark does not disappear, check the address settings.

## IBM Cloud SDN connector using API keys

FortiOS can automatically update dynamic addresses for IBM Cloud using an SDN connector.

### To configure IBM Cloud SDN connectors using the GUI:

1. Create SDN connectors for compute generation 1 and 2:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, then select *IBM Cloud*.

## c. Configure the connector for computer generation 1:

**New External Connector**

**Public SDN**

IBM Cloud

**Connector Settings**

Name: ibm\_gen1

Status: ☒ Enabled ☐ Disabled

Update Interval:

**IBM Cloud Connector**

Compute generation: 1 2

Region: US South (Dallas)

API key: \*\*\*\*\*

**Public SDN Connector Setup Guides**

- Amazon Web Services
- Google Cloud Platform
- Microsoft Azure
- Oracle Cloud Infrastructure

**Private SDN Connector Setup Guides**

- Cisco Application Centric Infrastructure
- Nuage Virtualized Services Platform
- OpenStack Connector
- VMware NSX

**Documentation**

- Online Help
- Video Tutorials

**OK** **Cancel**

d. Click **OK**.e. Click **Create New**, then select **IBM Cloud**.

## f. Configure the connector for computer generation 2:

**New External Connector**

**Public SDN**

IBM Cloud

**Connector Settings**

Name: ibm\_gen2

Status: ☒ Enabled ☐ Disabled

Update Interval:

**IBM Cloud Connector**

Compute generation: 1 2

Region: US East (Washington DC)

API key: \*\*\*\*\*

**Public SDN Connector Setup Guides**

- Amazon Web Services
- Google Cloud Platform
- Microsoft Azure
- Oracle Cloud Infrastructure

**Private SDN Connector Setup Guides**

- Cisco Application Centric Infrastructure
- Nuage Virtualized Services Platform
- OpenStack Connector
- VMware NSX

**Documentation**

- Online Help
- Video Tutorials

**OK** **Cancel**

g. Click **OK**.

## 2. Create dynamic firewall addresses for the configured connectors:

- Go to *Policy & Objects > Addresses*.
- Click *Create New > Address*.
- From the *Type* dropdown list, select *Dynamic*.
- From the *Sub Type* dropdown list, select *Fabric Connector Address*.
- From the *SDN Connector* dropdown list, select the IBM SDN connector.
- In the *Filter* field, add the desired filters. The following filters are supported:
  - <Instanceld>
  - <InstanceName>
  - <ImageId>
  - <ImageName>
  - <Architecture>
  - <Profile>
  - <Vpc>
  - <Zone>
  - <Subnet>
  - <ResourceGroup>

- g. Click **OK**.
- h. Click **Create New > Address**.
- i. Repeat the process for computer generation 2:

- j. Click **OK**.
3. Ensure that the connectors resolve dynamic firewall IP addresses:
  - a. Go to **Policy & Objects > Addresses**.
  - b. Hover over the addresses created in step 2 to see a list of IP addresses that the connector has resolved:

Name	Type	Details	Interface
gmail.com	FQDN	gmail.com	
ibm_gen1_add1	Dynamic (IBM)	ibm_gen1_add1	
ibm_gen2_add1	Dynamic	ibm_gen2_add1	
login.microsoft.com	Fabric Connector Address	login.microsoft.com	
login.windows.net	Fabric Connector Address	login.windows.net	
onboarding.address	Fabric Connector Address	onboarding.address	
vlan_linux.address	Fabric Connector Address	vlan_linux.address	
wildcard.dropbox.com	FQDN	wildcard.dropbox.com	
wildcard.google.com	FQDN	wildcard.google.com	

## To configure IBM Cloud SDN connectors using the CLI:

1. Create SDN connectors for compute generation 1 and 2:

```
config system sdn-connector
  edit "ibm_gen1"
    set status enable
    set type ibm
    set api-key xxxxxx
    set compute-generation 1
    set ibm-region us-south
    set update-interval 60
  next
  edit "ibm_gen2"
    set status enable
    set type ibm
```

```
        set api-key xxxxxx
        set compute-generation 2
        set ibm-region us-east
        set update-interval 60
    next
end
```

**2. Create dynamic firewall addresses for the configured connectors:**

```
config firewall address
    edit "ibm_gen1_add1"
        set type dynamic
        set sdn "ibm_gen1"
        set color 19
        set filter "Vpc=alex-vpc1"
    next
    edit "ibm_gen2_add1"
        set type dynamic
        set sdn "ibm_gen2"
        set color 19
        set filter "ResourceGroup=alex-grp2"
    next
end
```

**3. Ensure that the connectors resolve dynamic firewall IP addresses:**

```
# show firewall address ibm_gen1_add1
config firewall address
    edit "ibm_gen1_add1"
        set uuid 586841c4-7f46-51ea-dc66-dbf840af03d3
        set type dynamic
        set sdn "ibm_gen1"
        set color 19
        set filter "Vpc=alex-vpc1"
        config list
            edit "10.240.0.49"
            next
            edit "10.240.0.75"
            next
            edit "169.61.227.88"
            next
            edit "52.117.170.31"
            next
        end
    next
end

# show firewall address ibm_gen2_add1
config firewall address
    edit "ibm_gen2_add1"
        set uuid 5868c4f0-7f46-51ea-2b79-b5170fbfd4a8
        set type dynamic
        set sdn "ibm_gen2"
        set color 19
        set filter "ResourceGroup=alex-grp2"
        config list
            edit "10.241.128.4"
            next
        end
    end
```

```
        edit "10.241.128.5"  
        next  
        edit "10.241.129.4"  
        next  
        edit "52.117.126.69"  
        next  
    end  
next  
end
```

## Kubernetes (K8s) SDN connectors

The following topics provide information about configuring Kubernetes SDN connectors:

- [AliCloud Kubernetes SDN connector using access key on page 2864](#)
- [AWS Kubernetes \(EKS\) SDN connector using access key on page 2866](#)
- [Azure Kubernetes \(AKS\) SDN connector using client secret on page 2869](#)
- [GCP Kubernetes \(GKE\) SDN connector using service account on page 2871](#)
- [Oracle Kubernetes \(OKE\) SDN connector using certificates on page 2874](#)
- [Private cloud K8s SDN connector using secret token on page 2876](#)

### AliCloud Kubernetes SDN connector using access key

When an AliCloud SDN connector is configured, dynamic address objects can support Kubernetes filters based on cluster, service, node, pod, and more.

The following address filters can be applied:

- K8S\_Cluster
- K8S\_Namespace
- K8S\_ServiceName
- K8S\_NodeName
- K8S\_PodName
- K8S\_Region
- K8S\_Zone
- K8S\_Label


#### To configure an AliCloud SDN connector with a Kubernetes filter in the GUI:

1. Configure the AliCloud SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, and select *AliCloud*.

- c.** Configure the settings as needed and click *OK*.

New External Connector

Public SDN



AllCloud

Connector Settings

Name

all1

Status

Enabled

Disabled

Update Interval

Use Default

Specify

AllCloud Connector

AccessKey ID

\*\*\*\*\*

AccessKey Secret

\*\*\*\*\*

Region ID

us-west-1

Additional Information

API Preview

Public SDN Connector Setup Guides

Amazon Web Services

Google Cloud Platform

Microsoft Azure

Oracle Cloud Infrastructure

Private SDN Connector Setup Guides

Cisco Application Centric Infrastructure

Nuage Virtualized Services Platform

OpenStack Connector

VMware NSX

Documentation

Online Help

Video Tutorials

2. Create a dynamic firewall address with the supported Kubernetes filter:

- a. Go to *Policy & Objects > Addresses*.
- b. Click *Create New > Address* and enter a name.
- c. Configure the following settings:
  - i. For *Type*, select *Dynamic*.
  - ii. For *Sub Type*, select *Fabric Connector Address*.
  - iii. For *SDN Connector*, select the connector created in step 1.
  - iv. For *SDN address type*, select *Private*.
  - v. For *Filter*, select *K8S\_Cluster=zhmcluster*.

- d.** Click *OK*.

The corresponding IP addresses are dynamically updated and resolved after applying the Kubernetes filter.

- 3. Confirm that the AliCloud SDN connector resolves dynamic firewall IP addresses using the configured filter:**

- a. Go to *Policy & Objects* > *Addresses*.
- b. In the address table, hover over the address created in step 2 to view which IPs it resolves to:

+ Create New		Address		ali_add1	
		Type		Dynamic	
		Sub Type		Fabric Connector Address	
IP Range/Sub		SDN Connector		ali1	
FABRIC_I		Filter		K8S_Cluster=zhmcluster1	
FIREWAL		Interface		any	
SSSLVPN_		Resolved To		10.0.0.28 10.0.0.29 10.0.0.30	
all				10.0.1.129 10.0.104.237 10.0.104.238	
				10.0.2.65 10.0.50.166 172.16.0.20	
none				172.16.1.10 172.16.1.30 172.16.1.50	
FortiClient E				172.16.2.30 172.16.3.30 172.16.4.30	
				172.16.5.30 172.16.6.30 172.16.7.30	
2				172.16.8.30 172.20.0.130 172.20.0.131	
				172.20.0.132 172.20.0.133 172.20.0.2	
ali_add1				172.20.0.3 172.20.0.4 172.20.0.5	
				172.20.0.66 172.20.0.67 172.20.0.68	
aws_add1				172.20.0.69 172.20.0.70 172.20.0.71	
				172.20.0.72 172.20.0.73 172.20.0.74	
FQDN 6				172.20.0.75 172.21.0.1 172.21.0.10	
gmail.com				172.21.1.159 172.21.11.21 172.21.12.245	
login.mic				172.21.12.35 172.21.13.2 172.21.14.62	
login.mic				172.21.2.138 172.21.2.254 172.21.3.135	
				172.21.9.67 192.168.0.202 192.168.0.203	
Security Ratin				192.168.0.204 192.168.0.94 192.168.0.95	

**To configure an AliCloud SDN connector with a Kubernetes filter in the CLI:****1. Configure the AliCloud SDN connector:**

```
config system sdn-connector
  edit "ali1"
    set type alicloud
    set access-key "*****"
    set secret-key xxxxxxxx
    set region "us-west-1"
  next
end
```

**2. Create a dynamic firewall address with the supported Kubernetes filter:**

```
config firewall address
  edit "ali_add1"
    set type dynamic
    set sdn "ali1"
    set color 10
    set filter "K8S_Cluster=zhmcluster1"
  next
end
```

**3. Confirm that the AliCloud SDN connector resolves dynamic firewall IP addresses using the configured filter:**

```
config firewall address
  edit "ali_add1"
    show
    config firewall address
      edit "ali_add1"
        set uuid c48e4f00-5435-51eb-0547-aced5cf80f1f
        set type dynamic
        set sdn "ali1"
        set color 10
        set filter "K8S_Cluster=zhmcluster1"
      config list
        edit "10.0.0.28"
        next
        edit "10.0.0.29"
        next
        edit "10.0.0.30"
        next
        ...
      end
    next
  end
end
next
end
```

**AWS Kubernetes (EKS) SDN connector using access key**

AWS SDN connectors support dynamic address groups based on AWS Kubernetes (EKS) filters.



### To enable an AWS SDN connector to fetch IP addresses from AWS Kubernetes:

1. Go to *Security Fabric > External Connectors*. Click *Create New*, then select *Amazon Web Services (AWS)*. Configure the SDN connector as desired. See [AWS SDN connector using access keys on page 2844](#)

2. Go to *Policies & Objects > Addresses*. Click *Create New > Address* to create a dynamic firewall address for the configured SDN connector using the supported Kubernetes filter.
3. From the *Type* dropdown list, select *Dynamic*.
4. From the *Sub Type* dropdown list, select *Fabric Connector Address*.
5. From the *SDN Connector* dropdown list, select the desired SDN connector.
6. In the *Filter* field, add the desired filters. The following filters are supported:

Filter	Description
k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_svcname	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/pod).

7. Configure the rest of the settings, then click **OK**.
8. Ensure that the SDN connector resolves the dynamic firewall address IP addresses by going to *Policy & Objects > Addresses* and hovering over the newly created address.

<div> <div>+ Create New</div> <div>Edit</div> <div>Clone</div> <div>Delete</div> <div>Search</div> </div>	
Name	Type
aws-k8s-and	Fabric Connector Address (AWS)
aws-k8s-or	Fabric Connector Address (AWS)
aws-label	Fabric Connector Address (AWS)
aws-nam	Fabric Connector Address (AWS)
aws-nod	Fabric Connector Address (AWS)
aws-pod	Fabric Connector Address (AWS)

aws-pod resolves to:  
• 192.168.114.197

## To configure an AWS Kubernetes SDN connector through the CLI:

1. Configure the SDN connector:

```
config system sdn-connector
  edit "aws1"
    set type aws
    set access-key "AKIAIJNKE75ANVN5AEQA"
    set secret-key xxxxx
    set region "us-west-2"
    set update-interval 30
  next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter:

```
config firewall address
  edit "aws-pod"
    set type dynamic
    set sdn "aws1"
    set filter "K8S_PodName=aws-node-g6zhx"
  next
end
```

The SDN connector resolves the dynamic firewall address IP address:

```
config firewall address
  edit "aws-pod"
    set type dynamic
    set sdn "aws1"
```

```

set filter "K8S_PodName=aws-node-g6zhx"
config list
  edit "192.168.114.197"
  next
end
next
end

```

## Azure Kubernetes (AKS) SDN connector using client secret

Azure SDN connectors support dynamic address groups based on Azure Kubernetes (AKS) filters.

### To enable an Azure SDN connector to fetch IP addresses from Azure Kubernetes:

1. Configure the Azure SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, and select *Azure*.
  - c. Configure as shown substituting the region, tenant and client IDs, and client secret for your deployment. See [Azure SDN connector service principal configuration requirements](#).

2. Create a dynamic firewall address for the configured K8s SDN connector:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*, then select *Address*.
  - c. From the *Type* dropdown list, select *Dynamic*.
  - d. From the *Sub Type* dropdown list, select *Fabric Connector Address*.
  - e. From the *SDN Connector* dropdown list, select the desired SDN connector.
  - f. In the *Filter* field, add the desired filter. The following filters are supported:

Filter	Description
k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.

Filter	Description
k8s_svcname	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/pod).

In this example, the address is configured to automatically populate and update IP addresses only for instances that belong to the zhmcKC cluster:

**Edit Address**

Name: az-k8s-cluster

Color: Change

Type: Fabric Connector Address

SDN Connector: azure1

Filter: K8S\_Cluster=zhmKC

Interface: Search

Show in Address List: ☒

Comments:

Tags: Add Tag

**Filter List:**

- K8S\_Cluster=zhmKC
- K8S\_Label.agentpool=agentpool
- K8S\_Label.app=guestbook
- K8S\_Label.app=redis
- K8S\_Label.beta.kubernetes.io/arc
- K8S\_Label.beta.kubernetes.io/ins
- K8S\_Label.beta.kubernetes.io/os=
- K8S\_Label.component=kube-prox
- K8S\_Label.component=kube-svc-i
- K8S\_Label.component=oms-agent
- K8S\_Label.component=tunnel

**OK** **Cancel**

3. Ensure that the K8s SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the zhmkC cluster as configured in step 2:

+ Create New ▾		✎ Edit	📁 Clone	🗑 Delete	Search
Name	Type				
aws-zone	Fabric Connector Address (AWS)				
az-k8s-cluster	Fabric Connector Address (AZURE)				
az-k8s-label	az-k8s-cluster resolves to:				
az-k8s-label	<ul style="list-style-type: none"> <li>10.240.0.4</li> </ul>	Fabric Connector Address (AZURE)			
az-k8s-pod	<ul style="list-style-type: none"> <li>10.240.0.5</li> </ul>	Fabric Connector Address (AZURE)			
az-k8s-region	<ul style="list-style-type: none"> <li>10.244.0.10</li> </ul>	Fabric Connector Address (AZURE)			
az-k8s-region	<ul style="list-style-type: none"> <li>10.244.0.11</li> </ul>	Fabric Connector Address (AZURE)			
dmz	<ul style="list-style-type: none"> <li>10.244.0.12</li> </ul>	Interface Subnet			
dmz	<ul style="list-style-type: none"> <li>10.244.0.2</li> </ul>				
gmail.com	<ul style="list-style-type: none"> <li>10.244.0.5</li> </ul>	QDN			
gmail.com	<ul style="list-style-type: none"> <li>10.244.0.6</li> </ul>				
google-play	<ul style="list-style-type: none"> <li>10.244.0.7</li> </ul>	QDN			
google-play	<ul style="list-style-type: none"> <li>10.244.0.8</li> </ul>				
login.microsoftonline.com	<ul style="list-style-type: none"> <li>10.244.0.9</li> </ul>	QDN			
login.microsoftonline.com	<ul style="list-style-type: none"> <li>10.244.1.12</li> </ul>	QDN			
login.microsoftonline.com	<ul style="list-style-type: none"> <li>10.244.1.13</li> </ul>				
login.windowslive.com	<ul style="list-style-type: none"> <li>10.244.1.14</li> </ul>	QDN			
login.windowslive.com	<ul style="list-style-type: none"> <li>10.244.1.2</li> </ul>				
none	<ul style="list-style-type: none"> <li>10.244.1.3</li> </ul>	ubnet			
none	<ul style="list-style-type: none"> <li>10.244.1.4</li> </ul>				
swscan.apple.com	<ul style="list-style-type: none"> <li>10.244.1.5</li> </ul>	QDN			
swscan.apple.com	<ul style="list-style-type: none"> <li>10.244.1.6</li> </ul>				
update.microsoft.com	<ul style="list-style-type: none"> <li>10.244.1.7</li> </ul>	QDN			
update.microsoft.com	<ul style="list-style-type: none"> <li>40.118.228.31</li> </ul>				

**To configure an Azure Kubernetes SDN connector through the CLI:****1. Configure the SDN connector:**

```
config system sdn-connector
  edit "azure1"
    set type azure
    set tenant-id "942b80cd-1b14-42a1-8dcf-4b21dece61ba"
    set client-id "14dbd5c5-307e-4ea4-8133-68738141feb1"
    set client-secret xxxxx
    set update-interval 30
  next
end
```

**2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter. In this example, the address will automatically populate and update IP addresses only for instances that belong to the zhmkC cluster:**

```
config firewall address
  edit "az-k8s-cluster"
    set type dynamic
    set sdn "azure1"
    set filter "K8S_Cluster=zhmkC"
  next
end
```

**3. Confirm that the Azure SDN connector resolves dynamic firewall IP addresses using the configured filter:**


```
config firewall address
  edit "az-k8s-cluster"
    set type dynamic
    set sdn "azure1"
    set filter "K8S_Cluster=zhmkC"
  config list
    edit "10.240.0.4"
    next
    edit "10.240.0.5"
    next
    edit "10.244.0.10"
    next
  end
next
end
```

**GCP Kubernetes (GKE) SDN connector using service account**

Google Cloud Platform (GCP) SDN connectors support dynamic address groups based on GCP Kubernetes Engine (GKE) filters.

### To enable a GCP SDN connector to fetch IP addresses from GKE:

1. Go to *Security Fabric > External Connectors*, and configure an SDN connector for GCP.

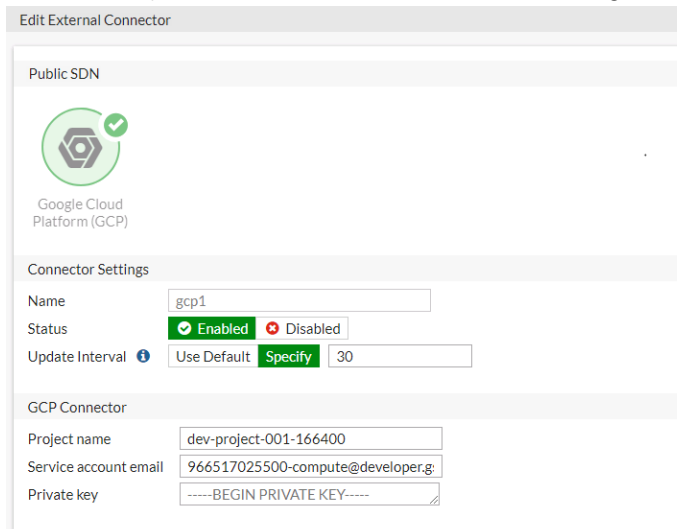

**Edit External Connector**

**Public SDN**

Google Cloud Platform (GCP)

**Connector Settings**

Name: gcp1

Status: Enabled Disabled

Update Interval: Use Default Specify 30

**GCP Connector**

Project name: dev-project-001-166400

Service account email: 966517025500-compute@developer.g

Private key: -----BEGIN PRIVATE KEY-----

2. Go to *Policies & Objects > Addresses* and create a dynamic firewall address for the configured SDN connector using the supported Kubernetes filter.
3. To filter out the Kubernetes IP addresses, select the address filter or filters. The following filters are supported:

Filter	Description
k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_svcname	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod).

In this example, the GCP SDN connector will automatically populate and update IP addresses only for instances that belong to the zhm-kc3 cluster:

**Edit Address**

Name:

Color:

Type:

SDN Connector:

Filter:

Interface:

Show in Address List: ☒

Comments:

Tags:

4. Configure the rest of the settings, then click **OK**.  
 The dynamic firewall address IP is resolved by the SDN connector.

Create New	Edit	Clone	Delete	<input type="text" value="Search"/>
Name	Type			
Address 13				
FIREWALL_AUTH_PORTAL_ADDRESS	Subnet			
SSLVPN_TUNNEL_ADDR1	IP Range			
all	Subnet			
gcp-k8s-cluster	Fabric Connector Address (GCP)			
gcp-k8s-label	gcp-k8s-cluster resolves to:			
gcp-k8s-pod	10.0.2.4			
gcp-k8s-pool	10.0.2.7			
gmail.com	10.28.0.13			
login.microsoft	10.28.0.14			
login.microsoft	10.28.0.17			
login.microsoft	10.28.0.18			
login.microsoft	10.28.0.19			
login.microsoft	10.28.0.20			
login.microsoft	10.28.0.21			
login.microsoft	10.28.0.22			
login.microsoft	10.28.1.11			
login.microsoft	10.28.1.12			
login.microsoft	10.28.1.13			
login.microsoft	10.28.1.14			
login.microsoft	10.28.1.15			
login.microsoft	35.235.101.176			
login.microsoft	35.236.43.119			
login.microsoft	35.236.60.13			
login.microsoft	50.13.123.45			
Address Group				
Wildcard FQDN				

## To configure a GCP Kubernetes SDN connector through the CLI:

1. Configure an SDN connector for Kubernetes:

```
config system sdn-connector
  edit "gcp1"
    set type gcp
    set gcp-project "dev-project-001-166400"
    set service-account "966517025500-compute@developer.gserviceaccount.com"
    set update-interval 30
  next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter:

```
config firewall address
  edit "gcp-k8s-cluster"
    set type dynamic
    set sdn "gcp1"
```

```

        set filter "K8S_Cluster=zhm-kc3"
    next
end

```

The dynamic firewall address IP is resolved by the SDN connector:

```

config firewall address
    edit "gcp-k8s-cluster"
        set type dynamic
        set sdn "gcp1"
        set filter "K8S_Cluster=zhm-kc3"
    config list
        edit "10.0.2.4"
        next
        edit "10.0.2.7"
        next
        edit "10.28.0.13"
        next
    end
next
end

```

## Oracle Kubernetes (OKE) SDN connector using certificates

OCI SDN connectors support dynamic address groups based on Oracle Kubernetes (OKE) filters.

**To enable an OCI SDN connector to fetch IP addresses from Oracle Kubernetes:**

1. Configure the OCI SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, and select *Oracle Cloud Infrastructure (OCI)*.
  - c. Configure as shown substituting the region, tenant and client IDs, and client secret for your deployment. The update interval is in seconds.

**Edit External Connector**

**Public SDN**

Oracle Cloud Infrastructure (OCI)

**Connector Settings**

Name: oci1

Status: Enabled Disabled

Update Interval: Use Default Specify: 30

**OCI Connector**

Server region: US Ashburn

User ID: ocid1.user.oc1.aaaaaaq2ifspco3uetz

Tenant ID: ocid1.tenancy.oc1.aaaaaaaambr3uzzto

Compartment ID: ocid1.compartment.oc1.aaaaaaaebxd

Certificate: cert-sha2

**Public SDN Connector Setup Guides**

- Amazon Web Services
- Google Cloud Platform
- Microsoft Azure

**Private SDN Connector Setup Guides**

- Cisco Application Centric Infrastructure
- Nuage Virtualized Services Platform
- OpenStack Connector
- Oracle Cloud Infrastructure
- VMware NSX

**Documentation**

- Online Help
- Video Tutorials

**Feedback**

**OK** **Cancel**

2. Create dynamic firewall addresses for the configured SDN connector with supported Kubernetes filter:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*, then select *Address*.



- c. In the *Filter* field, select the desired filters. The following filters are supported:

Filter	Description
k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_svcname	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod).

3. Confirm that the SDN connector resolves dynamic firewall IP addresses:

- Go to *Policy & Objects > Addresses*.
- Hover over the address created in step 2 to see a list of IP addresses for instances:

Name	Type	Details	Interface	Visibility	Re
SSLVPN_TUNNEL_ADDR1	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (ssl.root)	Visible	
ali-address-security	Fabric Connector Address (ALICLOUD)			Visible	
ali-address-vpc	Fabric Connector Address (ALICLOUD)			Visible	
all	Subnet	0.0.0.0/0		Visible	
gmail.com	FQDN	gmail.com		Visible	
k8s_and	Fabric Connector Address (OCI)			Visible	
k8s_cluster	Fabric Connector Address (OCI)			Visible	
k8s_compartm	Fabric Connector Address (OCI)			Visible	
k8s_label	Fabric Connector Address (OCI)			Visible	
k8s_namespace	Fabric Connector Address (OCI)			Visible	
k8s_nodename	Fabric Connector Address (OCI)			Visible	
k8s_or	Fabric Connector Address (OCI)			Visible	
k8s_podname	Fabric Connector Address (OCI)			Visible	
k8s_region	Fabric Connector Address (OCI)			Visible	
k8s_servicename	Fabric Connector Address (OCI)			Visible	
k8s_zone	Fabric Connector Address (OCI)			Visible	
login.microsoft.com	FQDN	login.microsoft.com		Visible	
login.microsoftonline.com	FQDN	login.microsoftonline.com		Visible	
login.windows.net	FQDN	login.windows.net		Visible	

**To configure an SDN connector through the CLI:****1. Configure the OCI SDN connector:**

```

config system sdn-connector
  edit "oci1"
    set type oci
    set tenant-id
      "ocidl.tenancy.oc1..aaaaaaaambr3uzztoyhweohbzqqdo775h7d3t54zpmz4b2cf35vs55cxxx"
    set user-id
      "ocidl.user.oc1..aaaaaaaq2lfspeo3uetzbzpiv2pqvzzevozccnys347stwssvizqlatfxxx"
    set compartment-id
      "ocidl.compartment.oc1..aaaaaaaaelxxdjazqo7nzcpgypyiqcgkmytjry6nfq5345vw7eavpwnmxxx"
    set oci-region ashburn
    set oci-cert "cert-sha2"
    set update-interval 30
  next
end

```

**2. Create dynamic firewall addresses for the configured SDN connector with supported Kubernetes filter:**

```

config firewall address
  edit "k8s_nodename"
    set type dynamic
    set sdn "oci1"
    set filter "K8S_NodeName=129.213.120.172"
  next
end

```

**3. Confirm that the SDN connector resolves dynamic firewall IP addresses:**

```

config firewall address
  edit "k8s_nodename"
    set type dynamic
    set sdn "oci1"
    set filter "K8S_NodeName=129.213.120.172"
  config list
    edit "10.0.32.2"
    next
    edit "10.244.2.2"
    next
    edit "10.244.2.3"
    next
    edit "10.244.2.4"
    next
    edit "10.244.2.5"
    next
  end
next
end

```

**Private cloud K8s SDN connector using secret token**

FortiOS automatically updates dynamic and cluster IP addresses for Kubernetes (K8s) by using a K8s SDN connector, enabling FortiOS to manage K8s pods as global address objects, as with other connectors. This includes mapping the following attributes from K8s instances to dynamic address groups in FortiOS:

Filter	Description
Namespace	Filter service IP addresses in a given namespace.
ServiceName	Filter service IP addresses by the given service name.
NodeName	Filter node IP addresses by the given node name.
PodName	Filter IP addresses by the pod name.
Label.XXX	Filter service or node IP addresses with the given label XXX. For example: <code>K8S_Label.app=nginx</code> .

FortiOS 6.2.3 and later collect cluster IP addresses in addition to external IP addresses for exposed K8s services.



There is no maximum limit for the number of IP addresses populated with the filters.

### To configure K8s SDN connector using the GUI:

1. Configure the K8s SDN connector:
  - a. Go to *Security Fabric > External Connectors > Create New Connector*.
  - b. Select *Kubernetes*.
  - c. In the *IP* field, enter the IP address that you obtained in [Obtaining the IP address, port, and secret token in Kubernetes](#).
  - d. In the *Port* field, select *Specify*, then enter the port that you obtained in [Obtaining the IP address, port, and secret token in Kubernetes](#).
  - e. In the *Secret token* field, enter the token that you obtained in [Obtaining the IP address, port, and secret token in Kubernetes](#).
  - f. Configure the other fields as desired.
2. Create a dynamic firewall address for the configured K8S SDN connector:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*, then select *Address*.
  - c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the K8s SDN connector will automatically populate and update IP addresses only for node instances that match

the specified node name:

3. Ensure that the K8s SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for node instances that match the node name configured in step 2:

<div> <div>+ Create New</div> <div>Edit</div> <div>Clone</div> <div>Delete</div> <div>Search</div> </div>	
Name	Type
aws-security	Fabric Connector Address (AWS)
aws-zone	Fabric Connector Address (AWS)
az-k8s-cluster	Fabric Connector Address (AZURE)
az-k8s-label	Fabric Connector Address (AZURE)
az-k8s-pod	Fabric Connector Address (AZURE)
az-k8s-region	Fabric Connector Address (AZURE)
dmz	Interface Subnet
gmail.com	FQDN
google-play	SDN
k8s_label	Fabric Connector Address (KUBERNETES)
k8s_nodename	Fabric Connector Address (KUBERNETES)

k8s\_nodename resolves to:

- 172.16.65.227

### To configure K8s SDN connector using CLI commands:

1. Configure the K8s SDN connector:
 

```
config system sdn-connector
edit "kubernetes1"
set type kubernetes
set server "<IP address obtained in Obtaining the IP address, port, and secret token in Kubernetes>"
set server-port <Port obtained in Obtaining the IP address, port, and secret token in Kubernetes>
set secret-token <Secret token obtained in Obtaining the IP address, port, and secret token in Kubernetes>
set update-interval 30
next
end
```
2. Create a dynamic firewall address for the configured K8s SDN connector with the supported K8s filter. In this example, the K8s SDN connector will automatically populate and update IP addresses only for node instances that match the specified node name:

```

config firewall address
  edit "k8s_nodename"
    set type dynamic
    set sdn "kubernetes1"
    set filter "K8S_NodeName=van-201669-pc1"
  next
end

```

**3. Confirm that the K8s SDN connector resolves dynamic firewall IP addresses using the configured filter:**

```

config firewall address
  edit "k8s_nodename"
    set type dynamic
    set sdn "kubernetes1"
    set filter "K8S_NodeName=van-201669-pc1"
  config list
    edit "172.16.65.227"
    next
  end
next
end

```

**To troubleshoot the connection:**

1. In FortiOS, run the following commands:  
 diagnose deb application kubed -1  
 diagnose debug enable
2. Reset the connection on the web UI to generate logs and troubleshoot the issue. The following shows the output in the case of a failure:

```

fortigate # diagnose deb application kubed -1
Debug messages will be on for 30 minutes.

fortigate # diagnose debug enable

fortigate # k8s: update sdn connector kubernetes1 status to enabled
k8s: update sdn connector kubernetes2 status to disabled
kubed sdn connector kubernetes1 prepare to update
getting token
kubed sdn connector kubernetes1 start updating
kube url: https://172.17.215.10:6443/api/v1/services
kube host: 172.17.215.10:6443:172.17.215.10
{"kind":"Status","apiVersion":"v1","metadata":{"status":"Failure","message":"s
ervices is forbidden: User \"system:serviceaccount:default:fortigateconnector\"
cannot list resource \"services\" in API group \"\" at the cluster scope","reason":
n:"Forbidden","details":{"kind":"services"},"code":403}

kubed failed to list kubernetes services.
kubed failed to get IPs from kubedrnets services.
kubed failed to get ip addr list
kubed reap child pid: 1226

```

The following shows the output in the case of a success:

```

kube-system
k8s pod ip: 10.180.1.2, podname: metrics-server-v0.3.6-64655c969-djt8s, namespace: kube-system
e: kube-system
k8s pod ip: 10.138.0.6, podname: netd-4qvvn, namespace: kube-system
k8s pod ip: 10.138.0.5, podname: netd-756ch, namespace: kube-system
k8s pod ip: 10.138.0.4, podname: netd-hr75d, namespace: kube-system
k8s pod ip: 10.138.0.6, podname: prometheus-to-sd-59trp, namespace: kube-system
k8s pod ip: 10.138.0.4, podname: prometheus-to-sd-q6qv5, namespace: kube-system
k8s pod ip: 10.138.0.5, podname: prometheus-to-sd-rq2zm, namespace: kube-system
k8s pod ip: 10.180.1.3, podname: stackdriver-metadata-agent-cluster-level-6c4f64f8cc-zgnp5, namespace: kube-system
k8s pod ip: 10.180.0.3, podname: nginx-deployment-c68885cbb-sf6f5, namespace: ng
inx
k8s pod ip: 10.180.1.4, podname: nginx-deployment-c68885cbb-w5w2b, namespace: ng
inx
kubed get IP address list from Kubernetes:
kubed sdn connector kubernetes2 start updating IP addresses
kubed checking firewall address object gcp-address, vd 0
address num change 0/3, new ip list:
10.180.0.3
10.180.1.4
10.184.0.1
kubed sdn connector kubernetes2 finish updating IP addresses
kubed reap child pid: 1252

```

## Nuage SDN connector using server credentials

You can use Nuage SDN connectors in dynamic firewall addresses.

The Fortinet SDN Connector for Cisco ACI and Nuage Networks is a standalone connector that connects to SDN controllers within Cisco ACI and Nuage Networks. You must configure a connection to the Fortinet SDN connector in FortiOS to query the dynamic addresses.

### To configure a Nuage connector in the GUI:

1. Create the Nuage SDN connector:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. In the *Private SDN* section, click *Nuage Virtualized Services Platform*.
  - c. Configure the settings as needed.
  - d. Click *OK*.

2. Create the dynamic firewall address for the connector:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the following settings:
    - i. For *Type*, select *Dynamic*.
    - ii. For *Sub Type*, select *Fabric Connector Address*.
    - iii. For *SDN Connector*, select the Nuage connector.
    - iv. Configure the remaining settings as needed.

## c. Click OK.

**To verify the SDN connector resolves the dynamic firewall IP addresses in the GUI:**

1. Go to *Policy & Objects > Addresses*.
2. In the address table, hover over an address to view which IP addresses it resolves to.

**To configure a Nuage connector in the CLI:**

1. Create the SDN connector:

```
config system sdn-connector
  edit "nuage1"
    set type nuage
    set server "172.18.64.27"
    set server-port 5671
    set username "admin"
    set password xxxxxxxx
  next
end
```

2. Create the dynamic firewall address for the connector:

```
config firewall address
  edit "nuage-address1"
    set type dynamic
    set sdn "nuage1"
    set color 19
    set organization "nuage/L3"
    set subnet-name "Subnet20"
  next
end
```

**To verify the SDN connector resolves the dynamic firewall IP addresses in the CLI:**

```
# diagnose firewall dynamic list
```

List all dynamic addresses:

```
nuage1.nuage.nuage/L3.Subnet20.*: ID(196)
  ADDR(192.168.20.92)
  ADDR(192.168.20.240)
```

## Nutanix SDN connector using server credentials

FortiOS automatically updates dynamic addresses for Nutanix using an Nutanix SDN connector, including mapping the following attributes from Nutanix instances to dynamic address groups in FortiOS:


- Cluster name
- Cluster UUID
- Description
- Host name
- Host UUID
- Hypervisor type
- Image name
- Image UUID
- Subnet name
- Subnet UUID
- VM name
- VM UUID

### To configure a Nutanix connector using the GUI:

1. Configure the Nutanix SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Select *Nutanix*.
  - c. In the *IP address* field, enter the IP address for your Nutanix environment.
  - d. In the *Port* field, enter the desired port.
  - e. In the *Username* and *Password* fields, enter the credentials for your Nutanix environment.
  - f. Click *OK*.
2. Create a dynamic firewall address for the configured Nutanix SDN connector:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New*, then select *Address*.
  - c. From the *Type* dropdown list, select *Dynamic*.
  - d. From the *Sub Type* dropdown list, select *Fabric Connector Address*.
  - e. From the *SDN Connector* dropdown list, select the Nutanix connector.
  - f. From the *Filter* dropdown list, select the desired filters.
  - g. Click *OK*.
3. Ensure that the Nutanix SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for instances that satisfy the filter



requirements configured in step 2. In this example, the configured filter is "ClusterName=Fortinet-Lab":

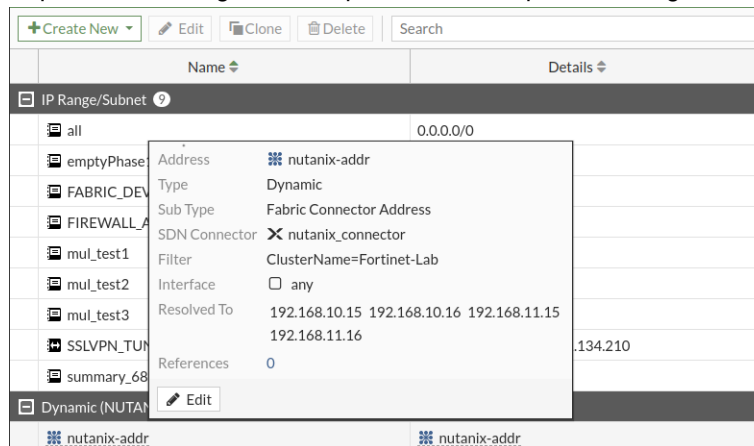

### To configure a Nutanix connector using the CLI:

#### 1. Configure the Nutanix SDN connector:

```
config system sdn-connector
edit "nutanix_connector"
set status disable
set type nutanix set server "172.18.33.59"
set server-port 9440
set username "admin"
set password *****
set update-interval 60
next
end
```

#### 2. Create a dynamic firewall address for the configured Nutanix SDN connector:

```
config firewall address
edit "nutanix-addr"
set uuid 382ceafe-8e72-51eb-7300-0807ee907946
set type dynamic
set sdn "nutanix_connector"
set color 2
set filter "ClusterName=Fortinet-Lab"
next
end
```

#### 3. Ensure that the Nutanix SDN connector resolves dynamic firewall IP addresses:

```
config firewall address
edit "nutanix-addr"
set uuid 382ceafe-8e72-51eb-7300-0807ee907946
set type dynamic
set sdn "nutanix_connector"
set color 2
set filter "ClusterName=Fortinet-Lab"
config list
edit "192.168.10.15"
next
edit "192.168.10.16"
next
edit "192.168.11.15"
next
edit "192.168.11.16"
```

```

    next
  end
  next
end

```

## OCI SDN connector using certificates

You can configure SDN connector integration with Oracle Cloud Infrastructure (OCI).

### To configure an OCI SDN connector in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Public SDN* section, select *Oracle Cloud Infrastructure (OCI)*.
3. Configure the connector as desired:
  - a. *User ID*: Enter the OCID of the OCI user who belongs to the administrator group. See [Certificate-based SDN connector requirements](#).
  - b. For the *OCI Certificate* field, you must select a certificate that satisfies OCI key size limits. The minimum size is 2048 bits. Do one of the following:
    - i. Select the built-in default certificate called *Fortinet\_Factory*.
    - ii. Follow steps 1-2 in [Using custom certificates](#) to configure a custom certificate.

The screenshot shows the 'Edit External Connector' window. On the left, under 'Public SDN', the 'Oracle Cloud Infrastructure (OCI)' icon is selected. Below this, the 'Connector Settings' section has 'Name' set to 'oci1', 'Status' as 'Enabled', and 'Update Interval' set to '30'. The 'OCI Connector' section has 'Server region type' set to 'Commercial', 'Server region' set to 'us-ashburn-1', 'User ID' set to 'ocid1.user.oc1..aaaaaaaq2lfspeo3uetz', 'Tenant ID' set to 'ocid1.tenancy.oc1..aaaaaaaambr3uzzto', 'Compartment ID' set to 'ocid1.compartment.oc1..aaaaaaaebod', and 'Certificate' set to 'cert-sha2'. On the right, there are links for 'Public SDN Connector Setup Guides' (Amazon Web Services, Google Cloud Platform, Microsoft Azure) and 'Private SDN Connector Setup Guides' (Cisco Application Centric Infrastructure, Nuage Virtualized Services Platform, OpenStack Connector, Oracle Cloud Infrastructure, VMware NSX), along with 'Documentation' links for 'Online Help' and 'Video Tutorials'. At the bottom are 'OK' and 'Cancel' buttons.

4. Click *OK*.
5. At this stage, you must register the certificate's fingerprint to the specified OCI user.
  - a. Go to the OCI user, then *API Keys > Add Public Key*.
  - b. If you selected the *Fortinet\_Factory* certificate in step 2f, do the following:
    - i. In FortiOS, go to *System > Certificate*. Select *Fortinet\_Factory*, then click *Download*.
    - ii. You now have the *Fortinet\_Factory.cer* file. Create a public key file in PEM format from it, using a freely available tool of your choice such as OpenSSL.
  - c. Copy and paste the content of the certificate PEM key file in the *Add Public Key* window in OCI. Click *Add*.

- d. You now see the fingerprint.

## API Keys



You can configure the following for the fingerprint:

1. **Update Interval:** The default value is 60 seconds. You can change the value to between 1 and 3600 seconds.
2. **Status:** Green means that the connector is enabled. You can disable it at any time by toggling the switch.

- e. Click **OK**.

6. Go to **Policy & Objects > Addresses** and click **Create New > Address**.


7. Configure the address as needed, selecting the OCI connector in the **SDN Connector** field. The following filters are supported:

'vm\_name=<vm name>': matches VM instance name.

'instance\_id=<instance id>': matches instance OCID.

'tag.<key>=<value>': matches freeform tag key and its value.

'definedtag.<namespace>.<key>=<value>': matches a tag namespace, tag key, and its value.

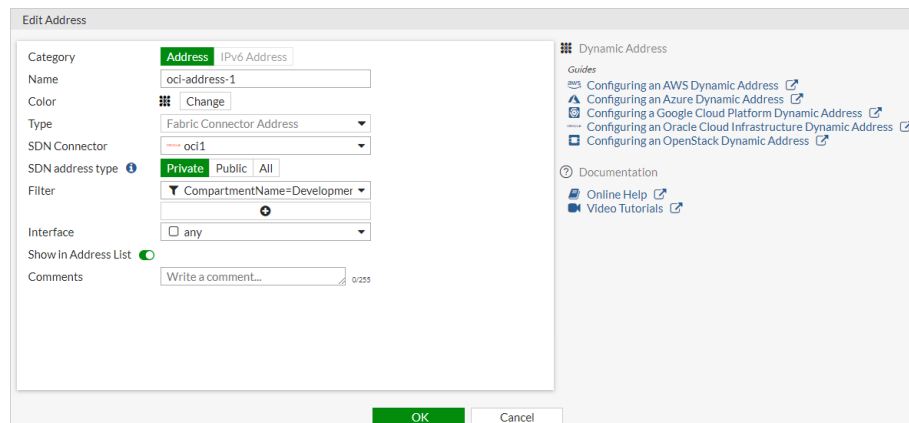

8. Click **OK**.

## To configure an OCI SDN connector in the CLI:

1. Configure an SDN connector:

```
config system sdn-connector
edit "oci1"
set status enable
set type oci
set tenant-id
"ocidl.tenancy.oc1..aaaaaaaa3aaaaaaaaaaaaaaaaa77xxxxx54bbbbbb4xxxx35xx55xxxx"
set user-id
"ocidl.user.oc1..aaaaaaaa2laaaaa3aaaaaaaaabbbbbbbbbbcccccccccccccccccccc"
set compartment-id
"ocidl.compartment.oc1..aaaaaaaaaaaaaaaa7bbbbbbbbbcccccccccccc6xxx53xxxx7xxxxxxxxx"
set oci-region "us-ashburn-1"
```

```

        set oci-region-type commercial
        set oci-cert "cert-sha2"
        set update-interval 30
    next
end

```

2. Create a dynamic firewall address for the SDN connector with a supported filter:

```

config firewall address
    edit "oci-address-1"
        set type dynamic
        set sdn "oci1"
        set filter "CompartmentName=DevelopmentEngineering"
    next
end

```

**To confirm that dynamic firewall addresses are resolved by the SDN connector:**

1. In the CLI, check that the addresses are listed:

```

config firewall address
    edit "oci-address-1"
        set type dynamic
        set sdn "oci1"
        set filter "CompartmentName=DevelopmentEngineering"
    config list
        edit "10.0.0.11"
        next
        edit "10.0.0.118"
        next
        ...
    next
end
next
end

```

2. In the GUI, go to *Policy & Objects > Addresses* and hover the cursor over the address name.

oci-address-1 resolves to:

Type	Details	Interface	Visibility	Ref
abric Connector Address (VMWARE)			Visible	0
abric Connector Address (VMWARE)			Visible	0
ubnet	0.0.0.0/0		Visible	6
abric Connector Address (GCP)			Visible	0
QDN	gmail.com		Visible	1
QDN	login.microsoft.com		Visible	1
QDN	login.microsoftonline.com		Visible	1
QDN	login.windows.net		Visible	1
ubnet	0.0.0.0/32		Visible	0
abric Connector Address (OCI)			Visible	0


## OpenStack SDN connector using node credentials

**To configure OpenStack SDN connector using node credentials:**

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*, then select *OpenStack (Horizon)*.

## 3. Configure the fields as follows:

- a. **Name:** Name the connector as desired.
- b. **IP:** Enter the OpenStack management component's IP address. Generally you can find it in the OpenStack identity.

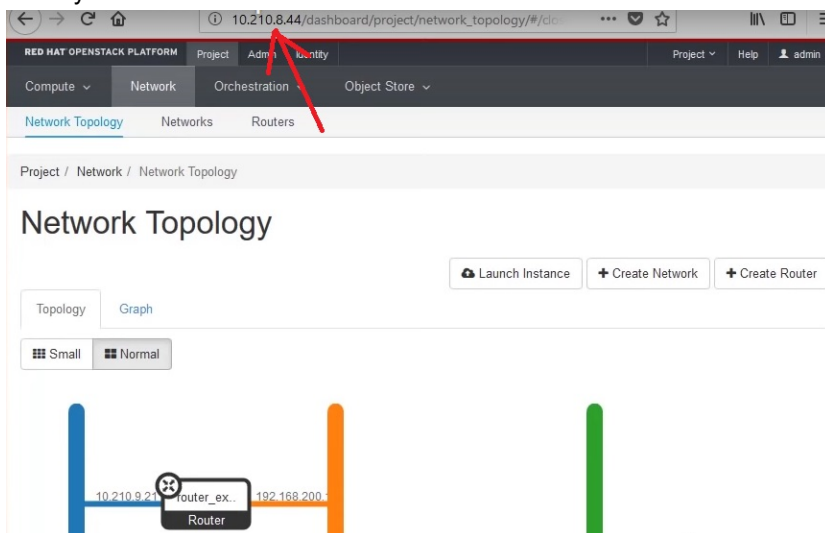

- c. **User name:** Enter the specified node's administrator name.
- d. **Password:** Enter the administrator password.

 A screenshot of the 'New Fabric Connector' dialog box. The 'SDN' section is selected. Below it, there is a green circular icon with a checkmark and the text 'OpenStack (Horizon)'. The 'Connector Settings' section contains the following fields:
 

- Name: openstack
- IP: 10.210.8.44
- Username: admin
- Password: A field with masked characters (dots) and an eye icon to toggle visibility.
- Status: A toggle switch that is currently turned on.

 At the bottom of the dialog, there are 'OK' and 'Cancel' buttons.

## 4. Click OK. The SDN connector is now configured.

**To configure a dynamic firewall address:**

The next step is to create an address that will be used as an address group or single address that acts as the source/destination for firewall policies. The address is based on IP addresses and contains VM instances' IP addresses.

No matter what changes occur to the instances, the SDN connector populates and updates the changes automatically based on the specified filtering condition so that administrators do not need to reconfigure the address content manually. Appropriate firewall policies using the address are applied to instances that are members of the address.

1. Go to *Policy & Objects > Address*. Click *Create New*, then select *Address*.
2. Configure the address as follows:
  - a. *Name*: Name the address as desired.
  - b. *Type*: Select *Dynamic*.
  - c. *Sub Type*: Select *Fabric Connector Address*.
  - d. *SDN Connector*: Select *openstack*.
  - e. *Filter*: The SDN connector automatically populates and updates only IP addresses belonging to the specified filter that matches the condition. OpenStack Horizon connectors support the following filters:
    - i. `id=<instance id>`: This matches a VM instance ID.
    - ii. `name=<instance name>`: This matches a VM instance name.
    - iii. `flavor=<instance flavor name>`: This matches an instance flavor name.
    - iv. `keypair=<key pair name>`: This matches a key pair name.
    - v. `network=<net name>`: This matches a network name.
    - vi. `project=<project name>`: This matches a project name.
    - vii. `availabilityzone=<zone name>`: This matches an availability zone name.
    - viii. `servergroup=<group name>`: This matches a server group name.
    - ix. `securitygroup=<security group name>`: This matches a security group name.
    - x. `metadata.<key>=<value>`: This matches metadata with its key and value pair.

You can set filtering conditions using multiple entries with AND ("&") or OR ("|"). When both AND and OR are specified, AND is interpreted first, then OR.

For example, you could enter `flavor=m1.nano&project=admin`. In this case, IP addresses of instances that match both the flavor name and project name are populated. Wildcards (asterisks) are not allowed in values.

In this example, let's use `project=admin`, assuming the project name is admin.



## SAP SDN connector

The SAP external Fabric connector allows the FortiGate to connect to an SAP instance to synchronize dynamic address objects and ports for SAP workloads. These address objects can be used in firewall policies to grant access control to dynamic SAP workloads.

### To configure an SAP connector in the GUI:

1. Configure the SAP SDN connector:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. In the *Private SDN* section, select *SAP*.
  - c. Enter a *Name* (*sap-s4-docker*).
  - d. Enter the *IP* for the SAP instance.
  - e. Enter the *Username* and *Password*.

The screenshot displays the 'New External Connector' configuration window in the FortiGate GUI. The window is titled 'New External Connector' and is divided into two main sections: 'Private SDN' and 'Additional Information'.

**Private SDN Section:**

- Connector Settings:**
  - Name:** sap-s4-docker
  - Status:** Enabled (indicated by a green checkmark icon)
  - Update interval:** Use Default (radio button selected)
  - Verify certificate:** Disabled (radio button selected)
- SAP Connector:**
  - IP:** 20.124.134.109
  - Port:** Use Default (radio button selected)
  - Username:** a4hadm
  - Password:** [masked with dots]


**Additional Information Section:**

- API Preview:** [button]
- Public SDN Connector Setup Guides:**
  - Amazon Web Services
  - Google Cloud Platform
  - Microsoft Azure
  - Oracle Cloud Infrastructure
- Private SDN Connector Setup Guides:**
  - Cisco Application Centric Infrastructure
  - Nuage Virtualized Services Platform
  - OpenStack Connector
  - VMware NSX
- Documentation:**
  - Online Help
  - Video Tutorials

At the bottom of the window, there are two buttons: 'OK' and 'Cancel'.

- f. Click **OK**.
2. Configure a network service associated with the configured SAP SDN connector:
  - a. Go to *Policy & Objects > Internet Service Database*, select the *Network Services* tab, and click *Create New*.
  - b. Enter a *Name* (*sap-instance1*).
  - c. Set *SDN connector* to *sap-s4-docker*.
  - d. Select a filter, such as *InstanceNumber=1*. The available filters are for *HostName*, *InstanceNumber*, and *ServiceName*.



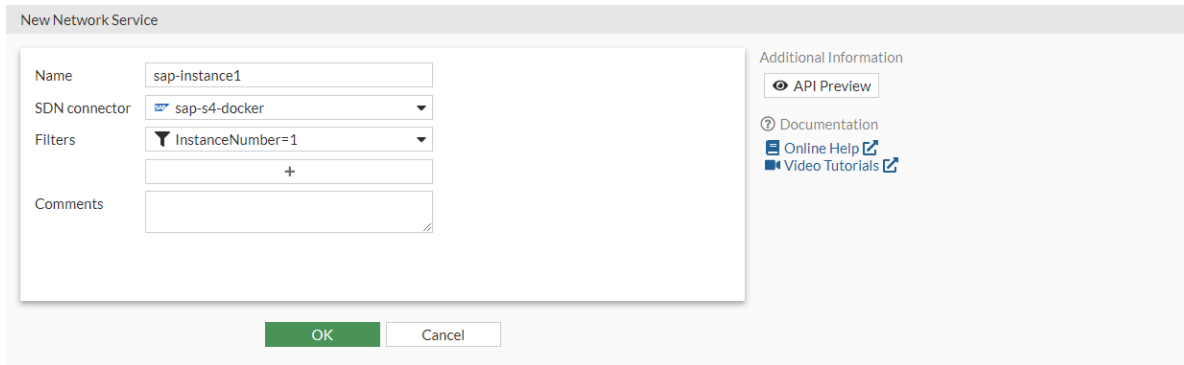

**New Network Service**

Name:

SDN connector:

Filters:

Comments:

Additional Information:


- [API Preview](#)
- [Documentation](#)
- [Online Help](#)
- [Video Tutorials](#)

**OK** **Cancel**

e. Click **OK**.

3. Ensure that the SAP SDN connector resolves dynamic network services:

- Go to **Policy & Objects > Internet Service Database**, select the **Network Services** tab.
- Hover over the *sap-instance1* and click **View Resolved Entries**.

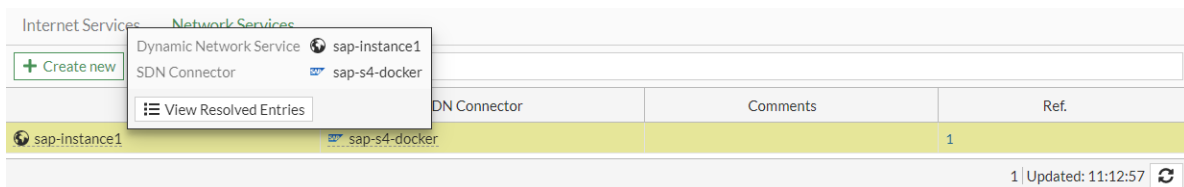

Internet Services **Network Services**

[+ Create new](#)

Dynamic Network Service


SDN Connector

[View Resolved Entries](#)

Name	SDN Connector	Comments	Ref.
sap-instance1	sap-s4-docker		1

1 | Updated: 11:12:57

A list of resolved internet services is displayed.

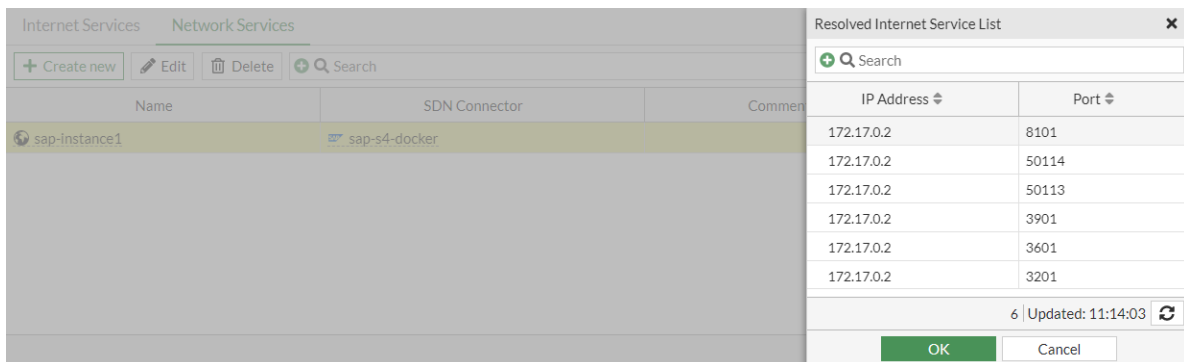

Internet Services **Network Services**

[+ Create new](#) [Edit](#) [Delete](#) [Search](#)

Name	SDN Connector	Comment
sap-instance1	sap-s4-docker	

**Resolved Internet Service List**

[+ Search](#)

IP Address	Port
172.17.0.2	8101
172.17.0.2	50114
172.17.0.2	50113
172.17.0.2	3901
172.17.0.2	3601
172.17.0.2	3201

6 | Updated: 11:14:03

**OK** **Cancel**

Click **OK** to close the list.

4. Configure a firewall policy with the resolved dynamic network service as the destination:

- Go to **Policy & Objects > Firewall Policy** and click **Create New**.
- Set the **Destination** to the *sap-instance1* network service.
- Configure the other settings as needed.
- Click **OK**.

### To configure an SAP connector in the CLI:

1. Configure the SAP SDN connector:

```
config system sdn-connector
edit "sap-s4-docker"
set type sap
set verify-certificate disable
set server "20.124.134.109"
```

```

        set server-port 50014
        set username "a4hadm"
        set password *****
    next
end

```

2. Configure a network service associated with the configured SAP SDN connector (available filters are HostName, InstanceNumber, and ServiceName):

```

config firewall network-service-dynamic
    edit "sap-instance1"
        set sdn "sap-s4-docker"
        set filter "InstanceNumber=1"
    next
end

```

3. Ensure that the SAP SDN connector resolves dynamic network services:

```

# diagnose firewall network-service-dynamic list "sap-instance1"
List internet service in kernel(custom):
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=8101-8101
addr ip range(1): 172.17.0.2-172.17.0.2
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=50114-50114
addr ip range(1): 172.17.0.2-172.17.0.2
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=50113-50113
addr ip range(1): 172.17.0.2-172.17.0.2
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=3901-3901
addr ip range(1): 172.17.0.2-172.17.0.2
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=3601-3601
addr ip range(1): 172.17.0.2-172.17.0.2
name=sap-instance1 id=4294770689 reputation=0 (null) singularity=0 flags=0x0 protocol=6
port=3201-3201
addr ip range(1): 172.17.0.2-172.17.0.2

```

4. Configure a firewall policy with the resolved dynamic network service as the destination:

```

config firewall policy
    edit 2
        set name "FGT97-service-dynamic"
        set srcintf "port3"
        set dstintf "port10"
        set action accept
        set srcaddr "all"
        set internet-service enable
        set network-service-dynamic "sap-instance1"
        set schedule "always"
        set nat enable
    next
end

```

## VMware ESXi SDN connector using server credentials

Dynamic addresses for VMware ESXi and vCenter servers can be automatically updated by using a VMware ESXi SDN connector, including mapping the following attributes from VMware ESXi and vCenter objects to dynamic address groups in FortiOS:

- vmid
- host
- name
- uuid
- vmuuid
- vmnetwork
- guestid
- guestname
- annotation
- datacenter
- tag

### To configure VMware ESXi SDN connector using the GUI:

1. Configure the VMware ESXi SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*, and select *VMware ESXi*.
  - c. Configure as shown, substituting the server IP address, username, and password for your deployment. The update interval is in seconds. The password cannot contain single or double quotes.

2. Create a dynamic firewall address for the configured VMware ESXi SDN connector:
  - a. Go to *Policy & Objects > Addresses* and click *Create New > Address*.
  - b. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the VMware ESXi fabric connector will automatically populate and update IP addresses only for instances that

belong to VLAN80:

3. Ensure that the VMware ESXi SDN connector resolves dynamic firewall IP addresses:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to VLAN80 as configured in step 2:

### To configure VMware ESXi SDN connector using CLI commands:

1. Configure the VMware ESXi SDN connector:

```
config system sdn-connector
  edit "vmware1"
    set type vmware
    set server "172.17.48.222"
    set username "example_username"
    set password xxxxx
    set update-interval 30
  next
end
```

2. Create a dynamic firewall address for the configured VMware ESXi SDN connector with the supported VMware ESXi filter. In this example, the VMware ESXi SDN connector will automatically populate and update IP addresses only for instances that belong to the specified VLAN:

```
config firewall address
  edit "vmware-network"
    set type dynamic
    set sdn "vmware1"
    set filter "vmnetwork=VLAN80"
  next
end
```

3. Confirm that the VMware ESXi SDN connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
  edit "vmware-network"
    set type dynamic
    set sdn "vmware1"
    set filter "vmnetwork=VLAN80"
    config list
      edit "192.168.8.240"
    next
  end
next
end
```

## VMware NSX-T Manager SDN connector using NSX-T Manager credentials

This feature provides SDN connector configuration for VMware NSX-T manager. You can import specific groups, or all groups from the NSX-T Manager.

### To configure SDN connector for NSX-T Manager in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Private SDN* section, click *VMware NSX*.

3. Configure the settings and click *OK*.

### To configure SDN connector for NSX-T Manager in the CLI:

```
config system sdn-connector
  edit "nsx_t24"
    set type nsx
    set server "172.18.64.205"
    set username "admin"
    set password xxxxxx
  next
end
```

### To import a specific group from the NSX-T Manager:

```
# execute nsx group import nsx_t24 root csf_ns_group
[1] 336914ba-0660-4840-b0f1-9320f5c5ca5e csf_ns_group:
  Name:csf_ns_group
  Address:1.1.1.0
  Address:1.1.1.1
  Address:172.16.10.104
  Address:172.16.20.104
  Address:172.16.30.104
  Address:2.2.2.0
  Address:2.2.2.2
  Address:4.4.4.0
  Address:5.5.5.0
```

Address:6.6.6.6  
Address:7.7.7.7

**To import all groups from NSX-T Manager:**

```
# execute nsx group import nsx_t24 root
[1] 663a7686-b9a3-4659-b06f-b45c908349a0 ServiceInsertion_NSGroup:
    Name:ServiceInsertion_NSGroup
    Address:10.0.0.2
[2] 336914ba-0660-4840-b0f1-9320f5c5ca5e csf_ns_group:
    Name:csf_ns_group
    Address:1.1.1.0
    Address:1.1.1.1
    Address:172.16.10.104
    Address:172.16.20.104
    Address:172.16.30.104
    Address:2.2.2.0
    Address:2.2.2.2
    Address:4.4.4.0
    Address:5.5.5.0
    Address:6.6.6.6
    Address:7.7.7.7
[3] c462ec4d-d526-4ceb-aeb5-3f168cecd89d charlie_test:
    Name:charlie_test
    Address:1.1.1.1
    Address:2.2.2.2
    Address:6.6.6.6
    Address:7.7.7.7
[4] ff4dcb08-53cf-46bd-bef4-f7aeda9c0ad9 fgt:
    Name:fgt
    Address:172.16.10.101
    Address:172.16.10.102
    Address:172.16.20.102
    Address:172.16.30.103
[5] 3dd7df0d-2baa-44e0-b88f-bd21a92eb2e5 yongyu_test:
    Name:yongyu_test
    Address:1.1.1.0
    Address:2.2.2.0
    Address:4.4.4.0
    Address:5.5.5.0
```

## To view the dynamic firewall IP addresses that are resolved by the SDN connector in the GUI:

1. Go to *Policy & Objects > Addresses* to view the IP addresses resolved by an SDN connector.

[+ Create New](#)
[Edit](#)
[Clone](#)
[Delete](#)

Name	Type	Details	Interface	Visibility
aci-add-long	Fabric Connector Address (ACI)			Visible
aci-add-tag	Fabric Connector Address (ACI)			Visible
add-esxi-1	Fabric Connector Address (VMWARE)			Visible
all	Subnet	0.0.0.0/0		Visible
aws-address-	Fabric Connector Address (AWS)			Visible
aws-address-	Fabric Connector Address (AWS)			Visible
aws-address-	Fabric Connector Address (AWS)			Visible
aws-address-	Fabric Connector Address (AWS)			Visible
azure-address	Fabric Connector Address (AZURE)			Visible
charlie_test	Fabric Connector Address (NSX)			Visible
csf_ns_group	Fabric Connector Address (NSX)			Visible
fgt	Fabric Connector Address (NSX)			Visible
gcp-1	Fabric Connector Address (GCP)			Visible
gcp-address-tag1	Fabric Connector Address (GCP)			Visible
gmail.com	FQDN	gmail.com		Visible
k8s_label	Fabric Connector Address (KUBERNETES)			Visible
k8s_nodename	Fabric Connector Address (KUBERNETES)			Visible
login.microsoft.com	FQDN	login.microsoft.com		Visible

## To view the dynamic firewall IP addresses that are resolved by the SDN connector in the CLI:

```
# show firewall address csf_ns_group
config firewall address
  edit "csf_ns_group"
    set uuid ee4a2696-bacd-51e9-f828-59457565b880
    set type dynamic
    set sdn "nsx_t24"
    set obj-id "336914ba-0660-4840-b0f1-9320f5c5ca5e"
  config list
    edit "1.1.1.0"
      next
    edit "1.1.1.1"
      next
    edit "172.16.10.104"
      next
    edit "172.16.20.104"
      next
    edit "172.16.30.104"
      next
    edit "2.2.2.0"
      next
    edit "2.2.2.2"
      next
    edit "4.4.4.0"
      next
    edit "5.5.5.0"
      next
    edit "6.6.6.6"
      next
    edit "7.7.7.7"
      next
```


```
end
next
end
```

## Multiple concurrent SDN connectors

This guide shows how to configure SDN connectors and resolve dynamic firewall addresses through the configured SDN connector in FortiOS.

FortiOS supports multiple SDN connectors including public connectors (AWS, Azure, GCP, OCI, AliCloud) and private connectors (Kubernetes, VMware ESXi, VMware NSX, OpenStack, Cisco ACI, Nuage). FortiOS also supports multiple instances for each type of SDN connector.

This guide uses an Azure SDN connector as an example. The configuration procedure for all supported SDN connectors is the same. In the following topology, the FortiGate accesses the Azure public cloud through the Internet:

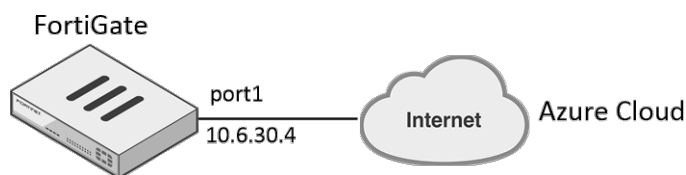

This process consists of the following:

1. [Configure the interface.](#)
2. [Configure a static route to connect to the Internet.](#)
3. [Configure two Azure SDN connectors with different client IDs.](#)
4. [Check the configured SDN connectors.](#)
5. [Create two firewall addresses.](#)
6. [Check the resolved firewall addresses after the update interval.](#)
7. [Run diagnose commands.](#)

### To configure the interface:

1. In FortiOS, go to *Network > Interfaces*.
2. Edit port1:
  - a. From the *Role* dropdown list, select *WAN*.
  - b. In the *IP/Network Mask* field, enter 10.6.30.4/255.255.255.0 for the interface connected to the Internet.

### To configure a static route to connect to the Internet:

1. Go to *Network > Static Routes*. Click *Create New*.
2. In the *Destination* field, enter 0.0.0.0/0.0.0.0.
3. From the *Interface* dropdown list, select *port1*.
4. In the *Gateway Address* field, enter 10.60.30.254.



### To configure two Azure SDN connectors with different client IDs:

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*. Configure the first SDN connector:
  - a. Select *Microsoft Azure*.
  - b. In the *Name* field, enter *azure1*.
  - c. In the *Status* field, select *Enabled*.
  - d. From the *Server region* dropdown list, select *Global*.
  - e. In the *Directory ID* field, enter the directory ID. In this example, it is 942b80cd-1b14-42a1-8dcf-4b21dece61ba.
  - f. In the *Application ID* field, enter the application ID. In this example, it is 14dbd5c5-307e-4ea4-8133-68738141feb1.
  - g. In the *Client secret* field, enter the client secret.
  - h. Leave the *Resource path* disabled.
  - i. Click *OK*.

The screenshot shows the 'New External Connector' configuration window. At the top, it says 'New External Connector'. Below that, there's a 'Public SDN' section with a green checkmark icon and the text 'Microsoft Azure'. The 'Connector Settings' section includes:
 

- Name:** azure1
- Status:** Enabled (with a green checkmark icon) and Disabled (with a red X icon)
- Update interval:** Use Default (selected) and Specify

 The 'Azure Connector' section includes:
 

- Server region:** Global (dropdown menu)
- Directory ID:** 942b80cd-1b14-42a1-8dcf-4b21dece61ba
- Application ID:** 14dbd5c5-307e-4ea4-8133-68738141
- Client secret:** A field with masked characters (dots) and an eye icon to toggle visibility.
- Resource path:** A toggle switch that is currently turned off.


3. Click *Create New*. Configure the second SDN connector:
  - a. Select *Microsoft Azure*.
  - b. In the *Name* field, enter *azure2*.
  - c. In the *Status* field, select *Enabled*.
  - d. From the *Server region* dropdown list, select *Global*.
  - e. In the *Directory ID* field, enter the directory ID. In this example, it is 942b80cd-1b14-42a1-8dcf-4b21dece61ba.
  - f. In the *Application ID* field, enter the application ID. In this example, it is 3baf0a6c-44ff-4f94-b292-07f7a2c36be6.
  - g. In the *Client secret* field, enter the client secret.
  - h. Leave the *Resource path* disabled.

## i. Click OK.

The screenshot shows the 'New External Connector' configuration window. It is titled 'Public SDN' and features the Microsoft Azure logo with a green checkmark. Below the logo, the 'Connector Settings' section includes fields for 'Name' (set to 'azure2'), 'Status' (set to 'Enabled'), and 'Update interval' (set to 'Use Default'). The 'Azure Connector' section includes fields for 'Server region' (set to 'Global'), 'Directory ID' (942b80cd-1b14-42a1-8dcf-4b21dece), 'Application ID' (3baf0a6c-44ff-4f94-b292-07f7a2c36b), 'Client secret' (masked with dots), and 'Resource path' (set to 'any').

**To check the configured SDN connectors:**

1. Go to *Security Fabric > External Connectors*.
2. Click the *Refresh* icon in the upper right corner of each configured SDN connector. A green up arrow appears in the lower right corner, meaning that both SDN connectors are connected to the Azure cloud using different client IDs.

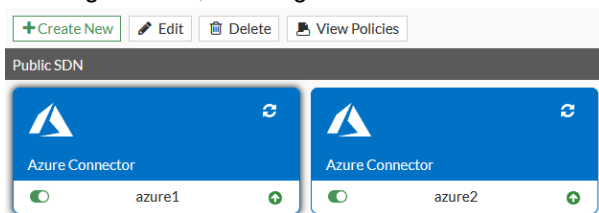**To create two firewall addresses:**

This process creates two SDN connector firewall addresses to associate with the configured SDN connectors.

1. Go to *Policy & Objects > Addresses*.
2. Click *Create New > Address*. Configure the first SDN connector firewall address:
  - a. In the *Name* field, enter *azure-address-1*.
  - b. From the *Type* dropdown list, select *Dynamic*.
  - c. From the *Sub Type* dropdown list, select *Fabric Connector address*.
  - d. From the *SDN Connector* dropdown list, select *azure1*.
  - e. For *SDN address type*, select *Private*.
  - f. From the *Filter* dropdown list, select the desired filter.
  - g. For *Interface*, select *any*.

## h. Click OK.

The 'New Address' configuration window shows the following settings:

- Name: azure-address-1
- Color: Change
- Type: Dynamic
- Sub Type: Fabric Connector Address
- SDN Connector: azure1
- SDN address type: Private (selected), Public, All
- Filter: (empty dropdown)
- Interface: any
- Comments: Write a comment... 0/255

3. Click *Create New > Address*. Configure the second SDN connector firewall address:

- In the *Name* field, enter *azure-address-1*.
- From the *Type* dropdown list, select *Dynamic*.
- From the *Sub Type* dropdown list, select *Fabric Connector address*.
- From the *SDN Connector* dropdown list, select *azure2*.
- For *SDN address type*, select *Private*.
- From the *Filter* dropdown list, select the desired filter.
- For *Interface*, select *any*.
- Click *OK*.

**To check the resolved firewall addresses after the update interval:**

By default, the update interval is 60 seconds.

- Go to *Policy & Objects > Addresses*.
- Hover over the created addresses. The firewall address that the configured SDN connectors resolved display.

Name	Type
azure-address-1	Fabric Connector Address (AZURE)
azure-address-2	Fabric Connector Address (AZURE)

**To run diagnose commands:**

Run the `show sdn connector status` command. Both SDN connectors should appear with a status of `connected`.

Run the `diagnose debug application azd -1` command. The output should look like the following:

```
Level2-downstream-D # diagnose debug application azd -1
...
azd sdn connector azure1 start updating IP addresses
azd checking firewall address object azure-address-1, vd 0
IP address change, new list:
10.18.0.4
...
```

To restart the Azure SDN connector daemon, run the `diagnose test application azd 99` command.

## Filter lookup in SDN connectors

When configuring dynamic address mappings for filters in SDN connectors for Azure, GCP, OpenStack, Kubernetes, and AliCloud, FortiGate can query the filters automatically.

### To use the filter lookup:

1. Navigate to *Policy & Objects > Addresses*.
2. Create or edit an SDN connector type dynamic IP address.  
Supported SDN connector types include: AWS, Azure, GCP, OpenStack, Kubernetes, and AliCloud. The example below is for an Azure SDN connector.
3. In the address *Filter* field, you can perform the following actions:
  - List all available filters.

The 'Edit Address' dialog is shown with the 'Filter' dropdown menu open. The search bar contains the text 'Search'. The list of filters includes:

- Location (1)
  - Location=northeurope
- Resource Group (1)
  - ResourceGroup=ThomasGuanQA
- Security Group (2)
  - SecurityGroup=thomas\_allowall
  - SecurityGroup=thomasbydelete
- Size (2)
  - Size=standard\_d4\_v2
  - Size=Standard\_DS1\_V2
- Subnet (3)
  - Subnet=client

The 'OK' button is highlighted in green.

- Search the available filters.

The 'Edit Address' dialog is shown with the 'Filter' dropdown menu open. The search bar contains the text 'subnet'. The list of filters includes:

- Subnet (3)
  - Subnet=client
  - Subnet=mgmt
  - Subnet=server

The 'OK' button is highlighted in green.

- Create custom filters.

**Edit Address**

Category: **Address** IPv6 Address

Name: azure-address-name1

Color: Change

Type: Fabric Connector Address

SDN Connector: azure1

Filter:

Interface:

Show in Address List: ☒

Comments:

Tags: Add Tag C

**Filter Selection Dialog**

Search:

Location (1): Location=northeurope

Resource Group (1): ResourceGroup=thomasGuanQA

Security Group (2): SecurityGroup=thomas\_allowall, SecurityGroup=thomasbyoldelete

Size (2): Size=standard\_d4\_v2, Size=Standard\_DS1\_V2

Subnet (3): Subnet=client

**OK** **Cancel**

**Edit Address**

Category: **Address** IPv6 Address

Name: azure-address-name1

Color: Change

Type: Fabric Connector Address

SDN Connector: azure1

Filter: **Vm=webserver**

**OK** **Cancel**

**Edit Address**

Category: **Address** IPv6 Address

Name: azure-address-name1

Color: Change

Type: Fabric Connector Address

SDN Connector: azure1

Filter:

Interface:

Show in Address List: ☒

Comments:

Tags: Add Tag C

**Filter Selection Dialog**

Search:

Size=Standard\_DS1\_V2

Subnet (3): Subnet=client, Subnet=mgmt, Subnet=server

Virtual Machine (4): Vm=fortiosbyol0228, Vm=thomasqa-ubuntu-client, Vm=thomasqa-ubuntu-server, **Vm=webserver**

Virtual Network (1): Vnet=thomasqa\_azure

**OK** **Cancel**

- Set filter logic [and|or].

The screenshot shows the 'Edit Address' configuration window. The 'Category' is set to 'Address' (IPv6 Address). The 'Name' is 'azure-address-name1'. The 'Color' is set to 'Change'. The 'Type' is 'Fabric Connector Address'. The 'SDN Connector' is 'azure1'. The 'Filter' section shows three conditions: 'Location=northeurope', 'ResourceGroup=ThomasGuanQA', and 'Subnet=server', connected by 'and' and 'or' operators. The 'Interface' is set to 'any'. The 'Show in Address List' checkbox is checked. The 'Comments' field is empty. At the bottom, there are 'OK' and 'Cancel' buttons.

## Support for wildcard SDN connectors in filter configurations

Wildcards are supported for SDN connectors when configuring dynamic address filters.

The following SDN connector types are currently supported:

- AWS
- Azure
- Google Cloud Platform
- Kubernetes
- OpenStack
- Oracle Cloud Infrastructure
- VMware ESXi

### To configure a dynamic address filter for AWS in the GUI:

1. Create the SDN connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*.
  - c. In the *Public SDN* section, click *Amazon Web Services (AWS)*.
  - d. Configure the settings as needed.
  - e. Click *OK*.
2. Create the dynamic firewall address:
  - a. Go to *Policy & Objects > Addresses*.
  - b. Click *Create New > Address*
  - c. Enter a name for the address, then configure the following settings:
    - Set *Type* to *Dynamic*.
    - Set *Sub Type* to *Fabric Connector Address*.
    - Set *SDN Connector* to *aws1*.
    - Set *SDN address type* to *Private*.

- For **Filter**, click **Create**, enter **Tag.Name=aws\***, then click **OK**.

d. Click **OK**.

- In the address table, hover over the address to view what IPs it resolves to.

<div> <div>+ Create New</div> <div>Edit Clone Delete</div> <div>Search</div> </div>					
Name	Type	Details	Interface	Visibility	
FIREWALL_A	aws-address-1 resolves to:	jbnet	0.0.0.0/0	Hidden	
SSLVPN_TUN	<ul style="list-style-type: none"> <li>18.234.167.123</li> <li>3.81.41.167</li> <li>52.87.157.127</li> </ul>	Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (ssl.FG-traffic)	Visible
all	jbnet	0.0.0.0/0		Visible	
aws-address-1	Dynamic (AWS)			Visible	

- In AWS, verify to confirm the IP addresses match.

Name	Instance ID	Instance Type	Availability Zone	Instance State	Status Checks	IPv4 Public IP	Key Name
aws_ond	i-023b73b73b73b3b7	t2.micro	us-east-1b	running	2/2 checks ...	18.234.167.123	thomaskeypair
aws_ond	i-04c34c34c34c4c4c3	t2.small	us-east-1d	running	2/2 checks ...	3.81.41.167	thomaskeypair
awsondemand	i-0e0a70a70a70a70a7	t2.micro	us-east-1b	running	2/2 checks ...	52.87.157.127	thomaskeypair

## To configure a dynamic address filter for AWS in the CLI:

- Configure the SDN connector:

```
config firewall address
edit "aws-address-1"
set type dynamic
set sdn "aws1"
set filter "Tag.Name=aws*"
set sdn-addr-type public
next
end
```

- Create the dynamic firewall address and verify where the IP addresses resolve to:

```
config firewall address
edit "aws-address-1"
set type dynamic
set sdn "aws1"
set filter "Tag.Name=aws*"
set sdn-addr-type public
config list
edit "18.234.167.123"
```

```
        next
        edit "3.81.41.167"
        next
        edit "52.87.157.127"
        next
    end
next
end
```

3. In AWS, verify that the IP addresses match.

## Endpoint/Identity connectors

SSO fabric connectors integrate SSO authentication into the network. This allows users to enter their credentials only once, and have those credentials reused when accessing other network resources through the FortiGate.

The following fabric connectors are available:

- [Fortinet single sign-on agent on page 2906](#)
- [Poll Active Directory server on page 2907](#)
- [Symantec endpoint connector on page 2908](#)
- [RADIUS single sign-on agent on page 2914](#)
- [Exchange Server connector on page 2917](#)

### Fortinet single sign-on agent

**To create an FSSO agent connector in the GUI:**

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.



3. In the *Endpoint/Identity* section, click *FSSO Agent on Windows AD*.

4. Fill in the *Name*, and *Primary FSSO Agent* server IP address or name and *Password*.
5. Optionally, add more FSSO agents by clicking the plus icon.
6. Optionally, enable *Trusted SSL certificate* and select or import a certificate.
7. Select the *User group source*:
- *Collector Agent*: User groups will be pushed to the FortiGate from the collector agent. Click *Apply & Refresh* to fetch group filters from the collector agent.
  - *Local*: User groups will be specified in the FortiGate unit's configuration. Select the LDAP server from the list, then click *Edit* to select the *Users*, *Groups*, and *Organizational Units*. Optionally, enable *Proactively retrieve from LDAP server* and configure the *Search filter* and *Interval*.
8. Click *OK*.

## Poll Active Directory server

The FortiGate unit can authenticate users and allow them network access based on groups membership in Windows Active Directory (AD).

### To create an AD server connector in the GUI:

1. Go to *Security Fabric > External Connectors*.
2. Click *Create New*.

3. In the *Endpoint/Identity* section, click *Poll Active Directory Server*.

4. Fill in the *Server IP/Name*, *User*, and *Password* for the AD server.
5. Select the LDAP server from the list.
6. If necessary, disable *Enable Polling*. This can be used to temporarily stop the FortiGate from polling security event logs on the Windows logon server, for troubleshooting purposes.
7. Click *OK*.

## Symantec endpoint connector

With the Fabric connector for Symantec Endpoint Protection Manager (SEPM), you can use the client IP information from SEPM to assign to dynamic IP addresses on FortiOS.


When communication between FortiGate and SEPM is established, FortiGate polls every minute for updates via TLS over port 8446. You can use the CLI to change the default one minute polling interval.

For example, you can create a dynamic Fabric Connector IP address subtype and use it in firewall policies as the source address. The dynamic IP address contains all IP addresses sent by SEPM.


This example shows a dynamic IP address with SEPM and one client PC managed by SEPM using FortiGate as the default gateway.

### To configure SEPM on a managed client PC:

1. In SEPM, create client packages for client hosts and group them into SEPM groups.  
You can install packages locally on clients or download them directly from SEPM.

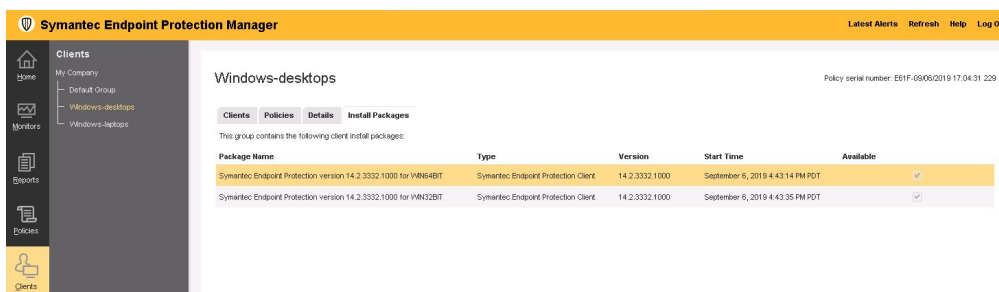


2. When a package is installed on the client host, the host is considered managed by SEPM. Even if the host has multiple interfaces, only one IP per host is displayed.

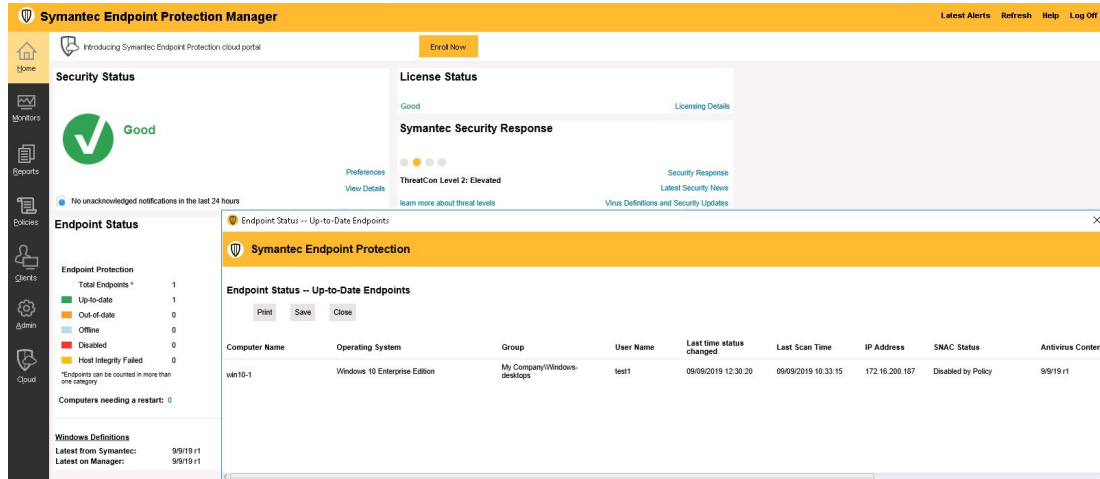

### To configure Symantec endpoint connector on FortiGate in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*:
  - a. In the *Endpoint/Identity* section, click *Symantec Endpoint Protection*.
  - b. Fill in the *Name*, and set the *Status* and *Update Interval*.
  - c. Set *Server* to the SEPM IP address.
  - d. Enter the *Username* and *Password* for the server.
  - e. To limit the domain or group that is monitored, enter them in the requisite fields.

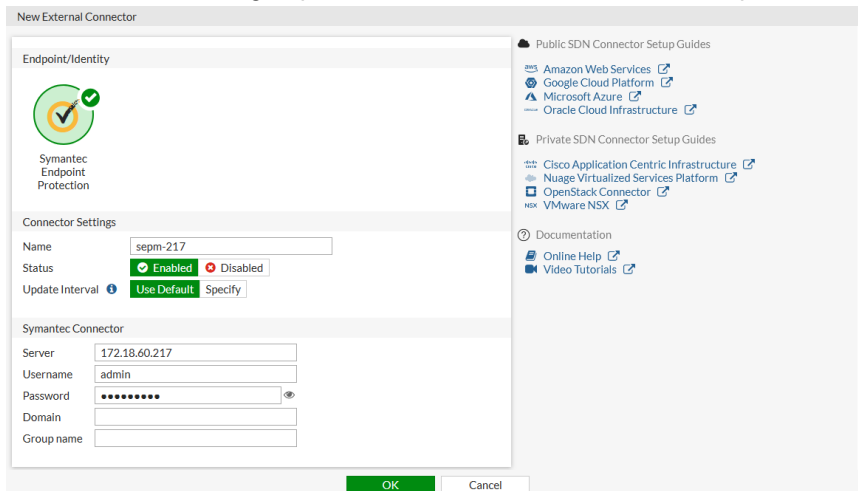

- f. Click **OK**.  
When the connection is established, you can see a green up arrow in the bottom right of the card. You might need to refresh your browser to see the established connection.
2. Go to *Policy & Objects > Addresses* and click *Create New > Address*:
  - a. Fill in the address *Name*.
  - b. Set *Type* to *Dynamic*.
  - c. Set *Sub Type* to *Fabric Connector Address*.
  - d. Set *SDN Connector* to the fabric connector that you just created.

e. Add *Filters* as needed.

## f. Click OK.



Filter options are only available for active computers that are configured and registered in SEPM. Free-form filters can be created manually by clicking *Create* and entering the filter, in the format: `filter_type=value`.

Possible manual filter types are: `GroupName`, `GroupID`, `ComputerName`, `ComputerUUID`, and `OSName`. For example: `GroupName=MyGroup`.

3. Go to *Policy & Objects > Addresses* and hover the cursor over the name of the new address to see the resolved IP addresses of the host.

Name	Type	Details	Interface	Ref.
FIREWALL_AUTH_PORTAL_ADDRESS	Subnet	0.0.0.0/0		0
SSL2	Subnet	0.0.0.0/0		0
SSLVPN_TUNNEL_ADDR1	IP Range	10.212.134.200 - 10.212.134.210	SSL-VPN tunnel interface (ssl.root)	3
all	Subnet	0.0.0.0/0		4
dmz	Address	10.10.10.0/24		0
gmail.com	Type	Dynamic	gmail.com	1
internal	Sub Type	Fabric Connector Address		0
login.microsoft.com	SDN Connector	sepm-217	login.microsoft.com	1
login.microsoft.com	Interface	any	login.microsoftonline.com	1
login.microsoft.com	Resolved To	10.1.100.187 10.6.30.187 172.16.200.187	login.microsoftonline.com	1
login.windows.net	References	1	login.windows.net	1
none		0.0.0.0/32		0
sepm-ip	Dynamic (SEPM)	sepm-ip		1
wildcard.dropbox.com	FQDN	*.dropbox.com		1
wildcard.google.com	FQDN	*.google.com		2
<b>Address Group</b>				
G Suite	Address Group	gmail.com		0
		wildcard.google.com		35% 27

4. Go to *Policy & Objects > Firewall Policy*, click *Create New*, and add a policy that uses the dynamic IP address.

## To verify the configuration:

1. On the client PC, check that it is managed by SEPM to access the Internet.

The screenshot shows the Symantec Endpoint Protection (SEP) status window on the left and a Windows Command Prompt on the right.

**Symantec Endpoint Protection Status:**

- Status:** Your computer is protected. No problems detected. Protection definitions are current.
- Virus and Spyware Protection:** Protects against viruses, malware, and spyware. Definitions: Monday, September 9, 2019 r1.
- Proactive Threat Protection:** Provides advanced behavioral protection against threats. Definitions: Tuesday, September 3, 2019 r1.
- Network and Host Exploit Mitigation:** Protects against Web, network threats, and zero-day attacks. Definitions: Friday, September 6, 2019 r61.

**Command Prompt Output:**

```

Ethernet adapter Ethernet 2:
Connection-specific DNS Suffix . : 
Link-local IPv6 Address . . . . . : fe80::5551:ed3b:4ebf:9701%8
IPv4 Address. . . . . : 10.6.30.187
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 

Ethernet adapter Ethernet 3:
Connection-specific DNS Suffix . : 
IPv6 Address. . . . . : 2001::187
Link-local IPv6 Address . . . . . : fe80::25a3:ad7c:bc6c:fc98%11
IPv4 Address. . . . . : 10.1.100.187
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 2001::3
10.1.100.13

Ethernet adapter Ethernet 4:
Connection-specific DNS Suffix . : 
Link-local IPv6 Address . . . . . : fe80::694f:fb5:8c62:b0eb%7
IPv4 Address. . . . . : 172.16.200.187
Subnet Mask . . . . . : 255.255.255.0
Default gateway . . . . . : 

C:\Users\test1.F5502019>ping 8.8.8.8

Pinging 8.8.8.8 with 32 bytes of data:
Reply from 8.8.8.8: bytes=32 time=5ms TTL=51
Reply from 8.8.8.8: bytes=32 time=4ms TTL=51
Reply from 8.8.8.8: bytes=32 time=4ms TTL=51

Ping statistics for 8.8.8.8:
    Packets: Sent = 3, Received = 3, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 4ms, Maximum = 5ms, Average = 4ms
Control-C
^C
C:\Users\test1.F5502019>

```

2. On the FortiGate, you can check in *Dashboard > FortiView Sources* and *Log & Report > Forward Traffic*.

Date/Time	Source	Device	Destination	Application Name	Log Details
2019/09/09 11:16:17	10.1.100.187	WIN10-1	13.32.253.39		General
2019/09/09 11:11:17	10.1.100.187	WIN10-1	13.32.253.227		Date: 2019/09/09 Time: 11:16:17 Duration: 5s Session ID: 3820960 Virtual Domain: root NAT Translation: Source
2019/09/09 11:08:53	10.1.100.187	WIN10-1	23.60.73.11		Source
2019/09/09 11:08:53	10.1.100.187	WIN10-1	23.60.73.11		IP: 10.1.100.187 NAT IP: 172.16.200.13 Source Port: 51881 Country/Region: Reserved Primary MAC: 00:0c:29:71:8aea Source Interface: port2 Host Name: WIN10-1 OS Name: Windows User:
2019/09/09 11:08:53	10.1.100.187	WIN10-1	23.195.226.49		Destination
2019/09/09 11:08:53	10.1.100.187	WIN10-1	23.60.73.11		IP: 13.32.253.39 Port: 443 Destination MAC: 90:6cac:49:5eff Country/Region: United States Destination Interface: port1
2019/09/09 11:08:51	10.1.100.187	WIN10-1	23.60.73.11		Application Control
2019/09/09 11:08:51	10.1.100.187	WIN10-1	23.60.73.11		Application Name: unscanned Category: undefined Risk: 6 Protocol: HTTPS Service: HTTPS
2019/09/09 11:08:51	10.1.100.187	WIN10-1	23.60.73.11		Data
2019/09/09 11:08:51	10.1.100.187	WIN10-1	23.195.226.49		Received Bytes: 8 kB Received Packets: 12 Sent Bytes: 2 kB Sent Packets: 13
2019/09/09 11:07:58	10.1.100.187	WIN10-1	216.58.217.46 (den03s10-in-f46.1e100.net)		Action
2019/09/09 11:07:57	10.1.100.187	WIN10-1	216.58.217.46 (den03s10-in-f46.1e100.net)		Action: Accept: session close Policy: pol1 (1) Policy ID: 9174563...
2019/09/09 11:07:40	10.1.100.187	WIN10-1	52.114.77.34		
2019/09/09 11:06:55	10.1.100.187	WIN10-1	52.158.238.42		
2019/09/09 11:06:55	10.1.100.187	WIN10-1	13.68.92.143		
2019/09/09 11:06:53	10.1.100.187	WIN10-1	173.194.152.56		
2019/09/09 11:06:50	10.1.100.187	WIN10-1	173.194.152.75		
2019/09/09 11:06:38	10.1.100.187	WIN10-1	52.177.83.224		
2019/09/09 11:06:32	10.1.100.187	WIN10-1	216.58.217.35		
2019/09/09 11:06:28	10.1.100.187	WIN10-1	173.194.152.87		
2019/09/09 11:06:23	10.1.100.187	WIN10-1	173.194.152.88		
2019/09/09 11:06:23	10.1.100.187	WIN10-1	209.52.146.51		
2019/09/09 11:06:23	10.1.100.187	WIN10-1	173.194.152.88		
2019/09/09 11:06:23	10.1.100.187	WIN10-1	209.52.146.51		
2019/09/09 11:06:22	10.1.100.187	WIN10-1	13.32.253.218 (server-13-32-253-218.ssa19r.cloudfront.net)		
2019/09/09 11:06:20	10.1.100.187	WIN10-1	173.194.152.58		



Because this traffic is not authenticated traffic but is based on source IP address only, it is not shown in the GUI firewall monitor or in the `diagnose firewall auth list` CLI command.

**To configure Symantec endpoint connector on FortiGate in the CLI:****1. Create the fabric connector:**

```
config system sdn-connector
  edit "sepm-217"
    set type sepm
    set server "172.18.60.217"
    set username "admin"
    set password "*****"
    set status enable
  next
end
```

**2. Create the dynamic IP address:**

```
config firewall address
  edit "sepm-ip"
    set type dynamic
    set sdn "sepm-217"
    set filter "ComputerName=win10-1"
    config list
      edit "10.1.100.187"
      next
      edit "10.6.30.187"
      next
      edit "172.16.200.187"
      next
    end
  next
end
```

**3. Add the dynamic IP address to the firewall policy:**

```
config firewall policy
  edit 1
    set name "pol1"
    set srcintf "port2"
    set dstintf "port1"
    set srcaddr "sepm-ip"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "certificate-inspection"
    set av-profile "default"
    set logtraffic all
    set fsso disable
    set nat enable
  next
end
```

**To troubleshoot Symantec SD connector in the CLI:**

```
# diagnose debug application sepm -1
```

Output is sent every minute (default). All IPv4 learned from SEPM. IPv6 also sent but not

yet supported.

```
2019-09-09 12:01:09 sepmd sdn connector sepm-217 start updating IP addresses
2019-09-09 12:01:09 sepmd checking firewall address object sepm-ip, vd 0
2019-09-09 12:01:09 sepmd sdn connector sepm-217 finish updating IP addresses
2019-09-09 12:01:09 sepmd reap child pid: 18079
2019-09-09 12:02:09 sepmd sdn connector sepm-217 prepare to update
2019-09-09 12:02:09 sepmd sdn connector sepm-217 start updating
2019-09-09 12:02:09 sepm-217 sdn connector will retrieve token after 9526 secs
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 172.16.200.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.6.30.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.1.100.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 2001:0000:0000:0000:0000:0000:0000:0187 is not in IPv4 presentation
format
```

```
2019-09-09 12:02:09 sepmd sdn connector sepm-217 start updating IP addresses
2019-09-09 12:02:09 sepmd checking firewall address object sepm-ip, vd 0
2019-09-09 12:02:09 sepmd sdn connector sepm-217 finish updating IP addresses
2019-09-09 12:02:09 sepmd reap child pid: 18089
2019-09-09 12:03:09 sepmd sdn connector sepm-217 prepare to update
2019-09-09 12:03:09 sepmd sdn connector sepm-217 start updating
2019-09-09 12:03:09 sepm-217 sdn connector will retrieve token after 9466 secs
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 172.16.200.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.6.30.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.1.100.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 2001:0000:0000:0000:0000:0000:0000:0187 is not in IPv4 presentation
format
```

**To list the SEPM daemon SDN connectors:**

```
# diagnose test application sepm 1
sepm SDN connector list:
  name: sepm-217, status: enabled, updater_interval: 60
```

**To list the SEPM daemon SDN filters:**

```
# diagnose test application sepm 2
sepm SDN connector sepm-217 filter list:
  name: sepm-ip, vd 0, filter 'ComputerName=win10-1'
```

**Using a self-signed certificate**

Users can explicitly specify a certificate or series of certificates for FortiGate to trust during the connection to the Symantec Endpoint Protection Manager (SEPM) server. For example, a self-signed certificate without proper SAN.

The following new options are added in SEPM `sdn-connector`:

Option	Description
<code>server-cert</code>	Trust servers that contain this certificate only.
<code>server-ca-cert</code>	Trust only those servers whose certificate is directly or indirectly signed by this certificate.

When these options are enabled, only the specified certificate or series of certificates will be allowed for SEPM server connection ensuring some level of security by blocking off all unspecified certificates.

**To specify SEPM certificates:**

```
config system sdn-connector
  edit "sepm-217"
    set type sepm
    set server "172.18.60.217"
    set username "admin"
    set password "*****"
    set status enable
    set server-cert "REMOTE_Cert_1"
    set server-ca-cert "REMOTE_Cert_2"
  next
end
```



The `server-cert` and `server-ca-cert` options are independent of each other and can be set separately. However, when both options are set, both constraints are applied.

**RADIUS single sign-on agent**

With RADIUS single sign-on (RSSO), a FortiGate can authenticate users who have authenticated on a remote RADIUS server. Based on which user group the user belongs to, the security policy applies the appropriate UTM profiles.



The FortiGate does not interact with the remote RADIUS server; it only monitors RADIUS accounting records that the server forwards (originating from the RADIUS client). These records include the user IP address and user group. The remote RADIUS server sends the following accounting messages to the FortiGate:

Message	Action
Start	If the information in the start message matches the RSSO configuration on the FortiGate, the user is added to the local list of authenticated firewall users.
Stop	The user is removed from the local list of authenticated firewall users because the user session no longer exists on the RADIUS server.

You can configure an RSSO agent connector using the FortiOS GUI; however, in most cases, you will need to use the CLI. There are some default options you may need to modify that can only be done in the CLI.

```
config user radius
  edit <name>
    set rso enable
    set rso-radius-response enable
    set rso-secret <password>
    set rso-endpoint-attribute <attribute>
    set sso-attribute <attribute>
    set delimiter {plus | comma}
  next
end
```

### To configure an RSSO agent connector:

1. Create the new connector:
  - a. Go to *Security Fabric > External Connectors*.
  - b. Click *Create New*.
  - c. In the *Endpoint/Identity* section, click *RADIUS Single Sign-On Agent*. The *New Fabric Connector* pane opens.
  - d. Enter the connector name.
  - e. Enable *Use RADIUS Shared Secret*.



The value entered in *Use RADIUS Shared Secret* must be identical to what the remote RADIUS server uses to authenticate when it sends RADIUS accounting messages to the FortiGate.

- f. Enable *Send RADIUS Responses*.



You should enable *Send RADIUS Responses* because some RADIUS servers continue to send the same RADIUS accounting message several times if there is no response.

- g. Click **OK**.
2. Edit the network interface:
  - a. Go to *Network > Interfaces*.
  - b. Double-click the interface that will receive the RADIUS accounting messages. The *Edit Interface* pane opens.
  - c. In the *Administrative Access* section, select the *RADIUS Accounting* checkbox. This will open listening for port 1813 on this interface. The FortiGate will then be ready to receive RADIUS accounting messages.
  - d. Click **OK**.
3. Create a local RSSO user group:
  - a. Go to *User & Authentication > User Groups*.
  - b. Click *Create New*.
  - c. Enter the group name.
  - d. For the *Type* field, click *RADIUS Single-Sign-ON (RSSO)*.
  - e. Enter a value for *RADIUS Attribute Value*.

This value by default is the class attribute. The FortiGate uses the content of this attribute in RADIUS accounting start messages to map a user to a FortiGate group, which then can be used in firewall policies.

In this example configuration, the FortiGate will only add a remote RADIUS user to the local firewall user list if the class attribute in the RADIUS accounting START message contains the value group1.



If your users are in multiple groups, you will need to add multiple local RSSO user group.



If the RADIUS attribute value used to map users to a local RSSO group is different than the RADIUS attribute in the RADIUS accounting messages forwarded by the server, you must change it in the CLI.

- f. Click **OK**.
4. Edit the local RSSO agent to modify default options using the CLI.  
For example, the default value for `rsso-endpoint-attribute` might work in common remote access scenarios where users are identified by their unique `Calling-Station-Id`, but in other scenarios the user name might be in a different attribute.

```
config user radius
  edit "Local RSSO Agent"
    set rsso-endpoint-attribute <attribute>
    set sso-attribute <attribute>
```

```

    next
end

```

5. Add the local RSSO user group to a firewall policy.

## Verifying the RSSO configuration

Verification requires a working remote RADIUS server configured for RADIUS accounting forwarding and wireless or wired clients that use RADIUS for user authentication.

For a quick test, you can use one of the publicly available RADIUS test tools to send RADIUS accounting start and stop messages to the FortiGate. You can also use [radclient](#).

### To verify the RSSO configuration:

1. In `radclient`, enter the RADIUS attributes. These attributes are then executed with the FortiGate IP parameters (sends accounting messages to port 1813) and shared password you configured. `-x` is used for verbose output:

```

root@ControlPC:~# echo "Acct-Status-Type =Start,Framed-IP-Address=10.1.100.185,User-
Name=test2,Acct-Session-Id=0211a4ef,Class=group1,Calling-Station-Id=00-0c-29-44-BE-B8" |
radclient -x 10.1.100.1 acct 123456
Sending Accounting-Request of id 180 to 10.1.100.1 port 1813
    Acct-Status-Type = Start
    Framed-IP-Address = 10.1.100.185
    User-Name = "test2"
    Acct-Session-Id = "0211a4ef"
    Class = 0x67726f757031
    Calling-Station-Id = "00-0c-29-44-BE-B8"
rad_recv: Accounting-Response packet from host 10.1.100.1 port 1813, id=180, length=20
root@ControlPC:~#

```

2. Verify that the user is in the local firewall user list with the correct type (`rsso`) and local firewall group (`rsso-group1`):

```

# diagnose firewall auth 1

10.1.100.185, test2
    type: rso, id: 0, duration: 5, idled: 5
    flag(10): radius
    server: vdom1
    packets: in 0 out 0, bytes: in 0 out 0
    group_id: 3
    group_name: rso-group-1

----- 1 listed, 0 filtered -----

```

## Exchange Server connector

FortiGate can collect additional information about authenticated users from corporate Microsoft Exchange Servers. After a user logs in, the additional information can be viewed in various parts of the GUI.

The Exchange connector must be mapped to the LDAP server that is used for authentication.

The following attributes are retrieved:

USER_INFO_FULL_NAME	USER_INFO_COMPANY	USER_INFO_CITY
---------------------	-------------------	----------------

USER_INFO_FIRST_NAME	USER_INFO_DEPARTMENT	USER_INFO_STATE
USER_INFO_LAST_NAME	USER_INFO_GROUP	USER_INFO_POSTAL_CODE
USER_INFO_LOGON_NAME	USER_INFO_TITLE	USER_INFO_COUNTRY
USER_INFO_TELEPHONE	USER_INFO_MANAGER	USER_INFO_ACCOUNT_EXPIRES
USER_INFO_EMAIL	USER_INFO_STREET	
USER_INFO_USER_PHOTO	USER_INFO_POST_OFFICE_BOX	

Kerberos Key Distribution Center (KDC) automatic discovery is enabled by default. The FortiGate must be able to use DNS to resolve the KDC IP addresses, otherwise the FortiGate will be unable to retrieve additional user information from the Exchange Server.

KDC automatic discovery can be disabled, and one or more internal IP addresses that the FortiGate can reach can be configured for KDC.

The Override server IP address is enabled when the IP address of the Exchange server cannot be resolved by DNS and must be entered manually.

### To configure an Exchange connector in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Endpoint/Identity* section, click *Exchange Server*.
3. Set *Name* to *exchange140*.
4. Set *Exchange account* to *Administrator@W2K8-SERV1.FORTINET-FSSO.COM*.  
*Administrator* is the username, *W2K8-SERV1* is the exchange server name, and *FORTINET-FSSO.COM* is the domain name.
5. Set *Password* to the password.
6. Enable *Override server IP address* and set it to *10.1.100.140*.
7. Ensure that *Auto-discover KDC* is enabled.

If *Auto-discover KDC* is disabled, one or more KDC IP addresses can be manually entered.

8. Click *OK*.

**To link the connector to the LDAP server in the GUI:**

1. Go to *User & Authentication > LDAP Servers*.
2. Edit an existing LDAP server, or click *Create New* to create a new one.
3. Enable *Exchange server*, and select the connector from the list.
4. Configure the remaining settings as required.

5. Click **OK**.

**To configure an Exchange connector with automatic KDC discovery in the CLI:**

```
config user exchange
  edit "exchange140"
    set server-name "W2K8-SERV1"
    set domain-name "FORTINET-FSSO.COM"
    set username "Administrator"
    set password *****
    set ip 10.1.100.140
    set auto-discover-kdc enable
  next
end
```

**To link the connector to the LDAP server in the CLI:**

```
config user ldap
  edit "openldap"
    set server "172.18.60.213"
    set cnid "cn"
    set dn "dc=fortinet-fsso,dc=com"
    set type regular
    set username "cn=Manager,dc=fortinet-fsso,dc=com"
    set password *****
    set group-member-check group-object
    set group-object-filter "(&(objectclass=groupofnames)(member=*))"
    set member-attr "member"
    set user-info-exchange-server "exchange140"
  next
end
```

## Verification

### To verify that KDC auto-discovery is working:

```
# diagnose wad debug enable category all
# diagnose wad debug enable level verbose
# diagnose debug enable
# diagnose wad user exchange test-auto-discover

wad_diag_session_acceptor(3115): diag socket 20 accepted.
__wad_fmем_open(557): fmem=0x12490bd8, fmem_name='cmem 9188 bucket', elm_sz=9188, block_
sz=73728, overhead=0, type=advanced
Starting auto-discover test for all configured user-exchanges.
[NOTE]: If any errors are returned, try manually configuring IPs for the reported errors.

wad_rpc_nspi_test_autodiscover_kdc(1835): Starting DNS SRV request for srv(0x7f938e052050)
query(_kerberos._udp.FORTINET-FSSO.COM)
wad_dns_send_srv_query(705): 1:0: sending DNS SRV request for remote peer _kerberos._
udp.FORTINET-FSSO.COM id=0
1: DNS response received for remote host _kerberos._udp.FORTINET-FSSO.COM req-id=0
wad_dns_parse_srv_resp(409): _kerberos._udp.FORTINET-FSSO.COM: resp_type(SUCCESS)
  srv[0]: name(w2k12-serv1.fortinet-fsso.com) port(88) priority(0) weight(100)
    addr[0]: 10.1.100.131
    addr[1]: 10.6.30.131
    addr[2]: 172.16.200.131
    addr[3]: 2003::131
    addr[4]: 2001::131
  srv[1]: name(fsso-core-DC.Fortinet-FSSO.COM) port(88) priority(0) weight(100)
    addr[0]: 10.6.30.16
    addr[1]: 172.16.200.16
  srv[2]: name(w2k12-serv1.Fortinet-FSSO.COM) port(88) priority(0) weight(100)
    addr[0]: 10.1.100.131
    addr[1]: 172.16.200.131
    addr[2]: 10.6.30.131
    addr[3]: 2001::131
    addr[4]: 2003::131
wad_rpc_nspi_dns_on_discover_kdc_done(1787): Received response for DNS autodiscover req
(0x7f938dfe8050) query(_kerberos._udp.FORTINET-FSSO.COM) n_rsp(3)

Completed auto-discover test for all configured user-exchanges.
```

### To check the collected information after the user has been authenticated:

1. In the GUI, go to *Dashboard > Users & Devices*, expand the *Firewall Users* widget, and hover over the user name.
2. In the CLI, run the following diagnose command:

```
# diagnose wad user info 20 test1
'username' = 'test1'
'sourceip' = '10.1.100.185'
'vdom' = 'root'
'cn' = 'test1'
'givenName' = 'test1'
'sn' = 'test101'
'userPrincipalName' = 'test1@Fortinet-FSSO.COM'
'telephoneNumber' = '604-123456'
'mail' = 'test1@fortinet-fsso.com'
```

```
'thumbnailPhoto' = '/tmp/wad/user_info/76665fff62ffffffffffffffffffff75ff68ffffffffffa'
'company' = 'Fortinet'
'department' = 'Release QA'
'memberOf' = 'CN=group321,OU=Testing,DC=Fortinet-FSSO,DC=COM'
'memberOf' = 'CN=g1,OU=Testing,DC=Fortinet-FSSO,DC=COM'
'memberOf' = 'CN=group21,OU=Testing,DC=Fortinet-FSSO,DC=COM'
'memberOf' = 'CN=group1,OU=Testing,DC=Fortinet-FSSO,DC=COM'
'manager' = 'CN=test6,OU=Testing,DC=Fortinet-FSSO,DC=COM'
'streetAddress' = 'One Backend Street 1901'
'l' = 'Burnaby'
'st' = 'BC'
'postalCode' = '4711'
'co' = 'Canada'
'accountExpires' = '9223372036854'
```

If the results are not as expected, verify what information FortiGate can collect from the Exchanger Server:

```
# diagnose test application wad 2500
# diagnose test application wad 162
```

## Threat feeds

The FortiGate dynamically imports an external list from an HTTP/HTTPS server in the form of a plain text file. The imported list is then available as a threat feed, which can be used to enforce special security requirements, such as long-term policies to always allow or block access to certain websites, or short-term requirements to block access to known compromised locations. The threat feeds are dynamically synchronized and are updated periodically so that any changes are immediately imported by FortiOS.



If the FortiGate loses connectivity with the external server, the threat feed will continue to function despite the *Connection Status* error or reboot. However, the threat feed will not be updated and no new entries will be added until the connection is re-established.

FortiOS also supports STIX/TAXII format. See [STIX format for external threat feeds on page 2945](#) for more information.

There are four types of threat feeds:

<b>FortiGuard Category</b>	The FortiGate dynamically imports a text file from an external server, which contains one URL per line. See <a href="#">FortiGuard category threat feed on page 2930</a> for more information.
<b>IP Address</b>	The FortiGate dynamically imports a text file from an external server, which contains one IP/IP range/subnet per line. See <a href="#">IP address threat feed on page 2934</a> for more information.
<b>Domain Name</b>	The FortiGate dynamically imports a text file from an external server, which contains one domain per line. Simple wildcards are supported. See <a href="#">Domain name threat feed on page 2937</a> for more information.
<b>Malware Hash</b>	The FortiGate dynamically imports a text file from an external server, which contains one hash per line in the format <hex hash> [optional hash description]. Each line supports MD5, SHA1, and SHA256 hex hashes. See <a href="#">Malware hash threat feed on page 2939</a> for more information.

Additionally, the EMS threat feed is integrated with FortiClient EMS, but it is not configured in the same way as the preceding feeds:

<b>EMS Threat Feed</b>	A FortiGate can pull malware threat feeds from FortiClient EMS, which in turn receives malware hashes detected by FortiClients. The malware hash can be used in an antivirus profile when AV scanning is enabled with block or monitor actions. See <a href="#">Malware threat feed from EMS on page 1286</a> for an example.
------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## External resources file format

File format requirements for a HTTP/HTTPS external resources file:

- The file is in plain text format with each URL list, IP address, domain name, or malware hash occupying one line. Comments can be added by using the number sign, for example: `# This is a test.`
- The file is limited to 10 MB or 128 KB ( $128 \times 1024 = 131072$ ) entries, whichever limit is hit first.
- The entry limit also follows the table size limitation defined by CMDDB per model.
- The external resources update period can be set to 1 minute, hourly, daily, weekly, or monthly (43200 min, 30 days).
- The external resources type as category (URL list) and domain (domain name list) share the category number range 192 to 221 (total of 30 categories).
- There is no duplicated entry validation for the external resources file (entry inside each file or inside different files).
- If the number of entries exceed the limit, a warning is displayed. Additional entries beyond the threshold will not be loaded.

For URL list (type = category):

- The scheme is optional, and will be truncated if found; `https://` and `http://` are not required.
- Wildcards are allowed at the beginning or end of the URL, for example: `*.domain.com` or `domain.com.*`.
- IDN and UTF encoding URL are supported.
- The URL can be an IPv4 or IPv6 address. An IPv6 URL must be in `[ ]` format.

For IP address list (type = address):

- The IP address can be a single IP address, subnet address, or address range. For example, `192.168.1.1`, `192.168.10.0/24`, or `192.168.100.1-192.168.100.254`.
- The address can be an IPv4 or IPv6 address. An IPv6 address does not need to be in `[ ]` format.

For domain name list (type = domain):

- Simple wildcards are allowed in the domain name list, for example: `*.test.com`.
- IDN (international domain name) is supported.

For malware hash list (type = malware):

- The malware hash list follows a strict format in order for its contents to be valid. Malware hash signature entries must be separated into each line. A valid signature must follow this format:

```
# MD5 Entry with hash description
aa67243f746e5d76f68ec809355ec234 md5_sample1

# SHA1 Entry with hash description
a57983cb39e25ab80d7d3dc05695dd0ee0e49766 sha1_sample2
```



```
# SHA256 Entry with hash description
ae9bc0b4c5639d977d720e4271da06b50f7c60d1e2070e9c75cc59ab30e49379  sha256_sample1

# Entry without hash description
0289b0d967cb7b1fb1451339c7b9818a621903090e0020366ab415c549212521

# Invalid entries
7688499dc71b932feb126347289c0b8a_md5_sample2
7614e98badca10b5e2d08f8664c519b7a906fbd5180ea5d04a82fce9796a4b87sha256_sample3
```

**To determine the external resource table size limit for your device:**

```
# print tablesize
...
system.external-resource: 0 256 512
...
```

In this example, a FortiGate 60E has a global limit of 512 and a per-VDOM limit of 256. A FortiGate 60E can configure up to 512 feeds. Each feed is limited to a maximum size of 10 MB or 131072 entries, whichever is reached first. The total number of feeds is limited by the available memory on the device.

## Configuring a threat feed

A threat feed can be configured on the *Security Fabric > External Connectors* page. After clicking *Create New*, there are four threat feed options available: *FortiGuard Category*, *IP Address*, *Domain Name*, and *Malware Hash*. When configuring the threat feed settings, the *Update method* can be either a pull method (*External Feed*) or a push method (*PUSH API*).

This topic includes three example threat feed configurations:

- [Configuring a threat feed with an external feed update](#)
- [Configuring threat feed authentication](#)
- [Configuring a threat feed with a push API update](#)



When multi VDOM mode is enabled, threat feed external connectors can be defined in the global VDOM or within a VDOM. See [Threat feed connectors per VDOM on page 2941](#) for example configurations.

---

### Configuring a threat feed with an external feed update

The threat feed will periodically fetch entries from the URI using HTTP or HTTPS.

**To configure the threat feed in the GUI:**

1. Go *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, select the required feed type.

## 3. Configure the connector settings:

<b>Status</b>	Enable/disable the connector.
<b>Name</b>	Enter a name for the threat feed connector.
<b>Update method</b>	Select <i>External Feed</i> .
<b>URI of external resource</b>	Enter the link to the external resource file. HTTP, HTTPS, and STIX protocols are supported.
<b>HTTP basic authentication</b>	Enable/disable basic HTTP authentication. When enabled, enter the username and password in the requisite fields. See <a href="#">Configuring threat feed authentication</a> for more information.
<b>Refresh Rate</b>	The time interval to refresh the external resource, in minutes (1 - 43200, default = 5).  The applicable threat feed will be triggered to refresh between 0 minutes and the configured value. When the refresh is triggered, if another task is being processed by the schedule worker, the refresh task will be added to the queue.
<b>Comments</b>	Optionally, enter a description of the connector.

## 4. Click OK.

## To configure the threat feed in the CLI:

```

config system external-resource
  edit <name>
    set status {enable | disable}
    set type {category | address | domain | malware}
    set category <integer, 192-221>
    set update-method {feed | push}
    set username <string>
    set password <string>
    set comments <string>
    *set resource <resource-uri>
    set user-agent <string>
    set server-identity-check {none | basic | full}
    set refresh-rate <integer>
    set source-ip <ip address>
    set interface-select-method {auto | sdwan | specify}
  next
end

```

The parameter marked with an asterisk (\*) is mandatory and must be filled in. The `category` parameter must be set when the `type` is either `category` or `domain`. Other parameters have either default values or are optional.

To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) either in basic or full mode.

## Configuring threat feed authentication

Threat feed external connectors support username and password authentication.



The *HTTP basic authentication* field is only visible when the *Update method* is set to *External Feed*.

### To enable username and password authentication in a threat feed connector:

1. Go *Security Fabric > External Connectors*.
2. Click *Create New*, or edit an existing threat feed connector.
3. Enable *HTTP basic authentication*.
4. Enter the *Username* and *Password*.

5. Click *OK*.

## HTTP header

Additional headers can be included in the *user-agent* field. Use `\r\n` to separate the URL headers, for example:

```
# set user-agent "Firefox\r\nheader1: test1\r\nheader2: test2"
```

Sample request:

```
HTTP request: http
GET /filetypes/test.tar.gz HTTP/1.1
Host: 172.17.219.10
User-Agent: Firefox
header1: test1
header2: test2
Accept: */*
Connection: close
```

Threat feed external connectors use this functionality to support authentication using an API key. The API key authentication can only be configured in the CLI with the `set user-agent` command. The API key must be appended with *user-agent* in the following format: `"user-agent\r\nAPI-Key:SecretAPIkey"`. API keys are typically used for programmatic access to the resource by an authorized requester. See [What Is an API Key](#) in the Fortinet Cyber Glossary for more information.

### To enable API key authentication in a threat feed connector:

1. Configure the threat feed. See [Configuring a threat feed with an external feed update on page 2923](#).
2. Configure the user-agent with an API key:

```
config system external resources
  edit <name>
    set user-agent "Firefox\r\nAPI-Key:abcdef12345"
  next
end
```

See [Using the AusCERT malicious URL feed with an API key on page 2947](#) for an example.

### Configuring a threat feed with a push API update

The threat feed receives entry updates from webhook requests to the FortiGate REST API. This method provides the code samples needed to perform add, remove, and snapshot operations.

In the following example, a *FortiGuard Category* threat feed is used to show the different API push options.

### To configure the threat feed in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Enter a name.
4. Set the *Update method* to *Push API*.
5. Click *OK*. The *Threat Feed Push API Information* pane opens that contains the following fields:
  - *URL*: the FortiGate's API URL to call in order to perform the update.
  - *API admin key*: when an API administrator user is configured on the FortiGate, an *API admin key* will be associated with the API administrator. Input the API key to see the final cURL request.
  - *Push command*: select one of three push methods.
    - *Add*: add the specified entries to the threat feed.

The screenshot shows the 'New External Connector' configuration window for a 'FortiGuard Category' threat feed. The 'Update method' is set to 'Push API'. The 'Threat Feed Push API Information' pane is open, displaying the following fields:

- URL**: `https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic`
- API admin key**: `*****`
- Push command**: **Add** (selected), Remove, Snapshot
- Entries**: `dal.ca`
- Sample cURL request**: `curl -k -X POST -H 'Authorization: Bearer *****' --data '{ "commands": [ [ { "name": "ccccc", "command": "add", "entries": [ "dal.ca" ] } ] ] }' https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic`

The 'OK' button is visible at the bottom right of the pane.

- *Remove*: remove the specified entries from the threat feed.

**New External Connector**

FortiGuard Category

Connector Settings

Status: ☒ Enabled ☐ Disabled

Name: cccccc

Update method:

Comments: 0/25

**Threat Feed Push API Information**

To update an threat feed that has set Push API update method, make a application/JSON POST request to the URL. Provide the API admin key, push command, and entries to create a working sample cURL request.

URL: https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic

API admin key: \*\*\*\*\*

Push command:

Entries: dal.ca

Sample cURL request: curl -k -X POST -H 'Authorization: Bearer \*\*\*\*\*' --data '{"commands":[{"name":"ccccc","command":"remove","entries":["dal.ca"]}]}'"https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic"

OK

- **Snapshot:** replace the threat feed with all specified entries.

**New External Connector**

FortiGuard Category

Connector Settings

Status: ☒ Enabled ☐ Disabled

Name: cccccc

Update method:

Comments: 0/25

**Threat Feed Push API Information**

To update an threat feed that has set Push API update method, make a application/JSON POST request to the URL. Provide the API admin key, push command, and entries to create a working sample cURL request.

URL: https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic

API admin key: \*\*\*\*\*

Push command:

Entries: entry1,entry2,entry3

Sample cURL request: curl -k -X POST -H 'Authorization: Bearer \*\*\*\*\*' --data '{"commands":[{"name":"ccccc","command":"snapshot","entries":["dal.ca"]}]}'"https://192.168.1.112/api/v2/monitor/system/external-resource/dynamic"

OK

- **Entries:** enter the entries separated by a comma (,) to be applied to the FortiGuard Category threat feed list.
- **Sample cURL request:** copy this cURL command to perform the push API update on the FortiGate against the list (ccccc).

See [REST API administrator on page 2224](#) for more information.

6. Copy the content in the *Sample cURL request* field (*Add* is used in this example).
7. Click **OK**.
8. On a client, generate the API request for the threat feed.

### To configure the threat feed in the CLI:

```
config system external-resource
  edit "ccccc"
    set update-method push
    set category 201
  next
end
```

**To use the API in the CLI:**

```
# diagnose system external-resource {push-add | push-remove | push-snapshot} <ext_name>
<entry>
```

**To use the API with a JSON file:**

```
# diagnose sys external-resource push-api-json-commands
{
  "commands": [ <Array: Mandatory>
    { <Object: Mandatory>
      "name": <String: Mandatory, Example: "AWS_MALWARE_FEED">
      "command": <String: mandatory, Options: "add", "remove", "snapshot">,
      "entries": [ <Array: Mandatory>
        <String: Mandatory, Example: "10.100.1.1">
      ]
    }
  ]
}
```

**Sample:**

```
# diagnose sys external-resource push-api-json-commands '{"commands":
[{"name":"test","command":"add","entries":["10.10.10.1","10.10.10.2"]},
{"name":"test","command":"whatever","entries":["10.10.10.3","10.10.10.4"]}]}'
```

command returned: EXT\_RESOURCE\_PUSH\_CMD\_RETURN\_OK

Returned json:

```
[
  {
    "name":"test",
    "command":"add",
    "status":"success"
  },
  {
    "name":"test",
    "command":"whatever",
    "error":"Invalid command.",
    "status":"error"
  }
]
```

**To use the API with a Postman REST client:**

1. Create an API administrator in FortiOS with write access.
2. Ensure the API token is generated.
3. Configure the external resource list as needed.
4. In the Postman client, create a new request, set the HTTP method to *POST*, enter the URL.
5. Configure the access token using one of the following methods:
  - To use the bearer token: click the *Authorization* tab, set the *Type* to *Bearer*, and enter the REST API administrator token.
  - To use the access\_token parameter: click the *Params* tab and enter the access\_token key-value pair (*access\_token* and *<key>*).
6. Click the *Body* tab and configure the following:

- a. Select *raw* and set the input type to *JSON*.
- b. Insert the JSON data payload.

7. Click *Send* to send the POST request. If there is a response, the response body appears. For example,

```
POST https://172.18.52.153/api/v2/monitor/system/external-resource/dynamic?access_
token=glmnfs8bzvk5hf8Qwcz4kx7yn3jHmG&vdom=vd1
Content-Type: application/json
User-Agent: PostmanRuntime/7.29.2
Accept: */*
Postman-Token: 04e10736-190e-4119-92e1-04e91bf99c10
Host: 172.18.52.153
Accept-Encoding: gzip, deflate, br
Connection: keep-alive
Content-Length: 485
```

```
{
  "commands": [
    {
      "name": "ip",
      "command": "add",
      "entries": [
        "10.10.10.1",
        "10.10.10.2"
      ]
    },
    {
      "name": "fqdn",
      "command": "remove",
      "entries": [
        "10.10.10.1",
        "10.10.10.2"
      ]
    },
    {
      "name": "fortiguard",
      "command": "snapshot",
      "entries": [
        "10.10.10.1",
        "10.10.10.2"
      ]
    }
  ]
}
```

```
HTTP/1.1 200 OK
date: Fri, 22 Jul 2022 21:10:39 GMT
x-frame-options: SAMEORIGIN
content-security-policy: frame-ancestors 'self'
x-xss-protection: 1; mode=block
cache-control: no-cache, must-revalidate
content-length: 480
content-type: application/json
Connection: keep-alive
```

```
{
  "http_method": "POST",
```

```

"results": [
  {
    "name": "ip",
    "command": "add",
    "status": "success"
  },
  {
    "name": "fqdn",
    "command": "remove",
    "status": "success"
  },
  {
    "name": "fortiguard",
    "command": "snapshot",
    "status": "success"
  }
],
"vdom": "vd1",
"path": "system",
"name": "external-resource",
"action": "dynamic",
"status": "success",
"serial": "FG6H1E5819900000",
"version": "v7.2.1",
"build": 1254
}

```

## Viewing the update history

To review the update history of a threat feed, go to *Security Fabric > External Connectors*, select a feed, and click *Edit*. The *Last Update* field shows the date and time that the feed was last updated.

Click *View Entries* to view the current entries in the list.

Edit External Connector	
IP Address Threat Feed: AWS_IP_Blocklist	
<div>Search</div> <div>397 Valid</div>	
Entry	Validity
209.212.233.26	Valid
46.17.46.54	Valid
49.51.82.246	Valid
117.21.191.108	Valid
132.232.69.180	Valid
104.131.66.15	Valid
114.80.157.210	Valid
142.44.143.102	Valid
202.103.207.211	Valid
209.141.41.228	Valid
35.166.182.197	Valid
144.217.74.187	Valid
118.24.185.191	Valid

## FortiGuard category threat feed

A FortiGuard category threat feed is a dynamic list that contains URLs and is periodically updated from an external server. The list is stored in text file format on an external server. After the FortiGate imports this list, it becomes available as a category in the *Remote Categories* group of web filter profiles that can be used to allow, block, or monitor URLs



matching this category. A category threat feed can also be used solely or grouped with other categories to be used for exemptions within an SSL/SSH profile that performs full SSL inspection.

Multiple custom categories can be defined by creating a FortiGuard Category threat feed for each category.

Text file example:

```
http://example.com.url
https://example.com/url
http://example.com:8080/url
```


The file contains one URL per line. See [External resources file format](#) for more information about the URL list formatting style.

## Example configuration

In this example, a list of URLs is imported using the FortiGuard category threat feed. The newly created threat feed is set to block in the web filter profile, and the web filter profile is applied to a firewall policy. Any traffic that passes through the FortiGate and matches the URLs in the threat feed list will be dropped.

### To configure a FortiGuard category threat feed in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Set the *Name* to *Custom-Remote-FGD*.
4. Set the *Update method* to *External Feed*.
5. Set the *URI of external resource* to *https://192.168.10.13/Override\_URLs.txt*.
6. Configure the remaining settings as needed, then click *OK*.
7. Edit the connector, then click *View Entries* to view the URL in the feed, which is *https://www.facebook.com*.

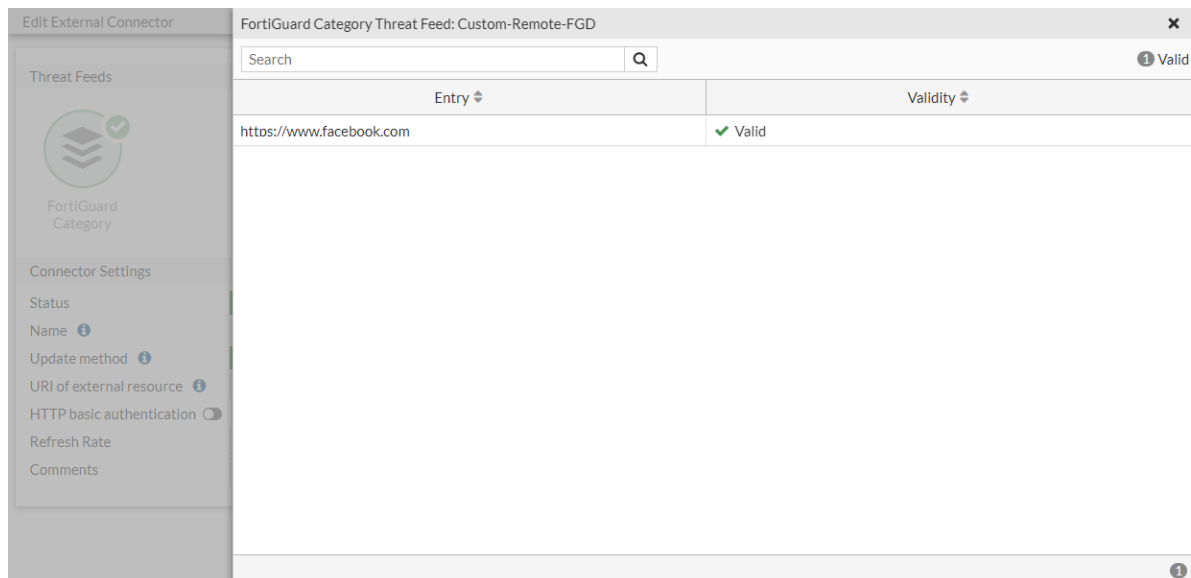

**To configure a FortiGuard category threat feed in the CLI:**

```

config system external-resource
    edit "Custom-Remote-FGD"
        set type category
        set category 192
        set resource "https://192.168.10.13/Override_URLs.txt"
        set server-identity-check {none | basic | full}
    next
end

```



To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) in either `basic` or `full` mode. By default, it is set to `none`.

**To apply a FortiGuard category threat feed in a web filter profile:**

1. Go to *Security Profiles > Web Filter* and create a new web filter profile, or edit an existing one.
2. Enable *FortiGuard category based filter*.
3. In the *Remote Categories* group, set the action for the *Custom-Remote-FGD* category to *Block*.
4. Configure the remaining settings as needed, then click *OK*.

**To apply the web filter profile in a firewall policy:**

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *Web Filter* and select the profile used in the previous procedure.
4. Enable *Log Allowed Traffic*.
5. Click *OK*.

URLs that match the FortiGuard category threat feed list are rated as the category matching the corresponding FortiGuard category threat feed, overriding their original domain rating.

**To view the web filter logs:**

1. Go to *Log & Report > Security Events* and select *Web Filter*.
2. View the log details in the GUI, or download the log file:

```

1: date=2023-02-06 time=09:31:04 eventtime=1675704664795395841 tz="-0800"
logid="0316013056" type="utm" subtype="webfilter" eventtype="ftgd_blk" level="warning"
vd="root" policyid=1 poluid="e8b310ba-914f-51ed-9014-7b2a116f29ad" policytype="policy"
sessionid=509983 srcip=172.20.120.13 srcport=54645 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuid="3342cb44-9140-51ed-5dbe-8e0787bedeec"
dstip=157.240.3.35 dstport=443 dstcountry="United States" dstintf="port3"
dstintfrole="wan" dstuid="3342cb44-9140-51ed-5dbe-8e0787bedeec" proto=6
httpmethod="GET" service="HTTPS" hostname="www.facebook.com" agent="Mozilla/5.0 (Windows
NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/64.0.3282.140
Safari/537.36 Edge/18.17763" profile="default" action="blocked" reftype="referral"
url="https://www.facebook.com/"
referralurl="https://www.google.com/url?url=https://www.facebook.com/&q=facebook&rct=j&s
a=X&source=suggest&ct=res&oi=suggest_nav&usg=AOvVaw3XzIKieZE-

```

```
CH5KqZaBe775&oq=facebook&gs_l=heirloom-
hp..0.5j0i512i433i131i1013j0i512i433i1013j0i512i433i131i1012j0i512i433i10.1716.3397.0.58
24.8.8.0.0.0.0.85.609.8.8.0....0...lac.1.34.heirloom-hp..0.8.608.798UUeJkbN0"
sentbyte=527 rcvdbyte=0 direction="outgoing" msg="URL belongs to a denied category in
policy" ratemethod="domain" cat=192 catdesc="Custom-Remote-FGD"
```

## Applying a FortiGuard category threat feed in an SSL/SSH profile

A FortiGuard category threat feed can be applied in an SSL/SSH profile where full SSL inspection mode is used. The threat feed category can be selected in the exempt category list. HTTPS requests that match the URLs in the threat feed list will be exempted from SSL deep inspection. This example uses the *Custom-Remote-FGD* threat feed configured in the previous example.

### To configure the SSL/SSH profile:

1. Go to *Security Profiles > SSL/SSH Inspection* and create a new profile, or edit an existing one.
2. Set the *Inspection method* to *Full SSL Inspection*.
3. In the *Exempt from SSL Inspection* section, locate *Web categories*. Click the + and add *Custom-Remote-FGD* in the *FORTIGUARD CATEGORY THREAT FEED* section.
4. Enable *Log SSL exemptions*.
5. Click *OK*.

### To apply the SSL/SSH inspection profile in a firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, set *SSL Inspection* to the profile used in the previous procedure.
4. Enable *Log Allowed Traffic*.
5. Click *OK*.

URLs that match the FortiGuard category threat feed list are rated as the FortiGuard category threat feed, overriding their original domain rating.

### To view the SSL logs:

1. Go to *Log & Report > Security Events* and select *SSL*.
2. View the log details in the GUI, or download the log file:

```
1: date=2023-02-06 time=11:23:54 eventtime=1675711434094550877 tz="-0800"
logid="1701062009" type="utm" subtype="ssl" eventtype="ssl-exempt" level="notice"
vd="root" action="exempt" policyid=1 poluuid="e8b310ba-914f-51ed-9014-7b2a116f29ad"
policytype="policy" sessionid=531331 service="SSL" profile="custom-deep-inspection"
srcip=172.20.120.13 srcport=52805 srccountry="Reserved" dstip=157.240.3.35 dstport=443
dstcountry="United States" srcintf="port2" srcintfrole="undefined" dstintf="port3"
dstintfrole="wan" srcuuid="3342cb44-9140-51ed-5dbe-8e0787bedeec" dstuuid="3342cb44-9140-
51ed-5dbe-8e0787bedeec" proto=17 tlsver="tls1.3" sni="www.facebook.com" cipher="0x1301"
authalgo="ecdhsa" kxproto="ecdhe" eventsubtype="user-category" cat=192 catdesc="Custom-
Remote-FGD" hostname="www.facebook.com" msg="SSL connection is exempted based on user
category rating."
```

## IP address threat feed

An IP address threat feed is a dynamic list that contains IPv4 and IPv6 addresses, address ranges, and subnets. The list is periodically updated from an external server and stored in text file format on an external server. After the FortiGate imports this list, it can be used as a source or destination in firewall policies, proxy policies, local-in policies, and ZTNA rules. It can also be used as an external IP block list in DNS filter profiles.

Text file example:

```
192.168.2.100
172.200.1.4/16
172.16.1.2/24
172.16.8.1-172.16.8.100
2001:0db8::eade:27ff:fe04:9a01/120
2001:0db8::eade:27ff:fe04:aa01-2001:0db8::eade:27ff:fe04:ab01
```

The file contains one IPv4 or IPv6 address, address range, or subnet per line. See [External resources file format](#) for more information about the IP list formatting style.

## Example configuration

In this example, a list of destination IP addresses is imported using the IP address threat feed. The newly created threat feed is then used as a destination in a firewall policy with the action set to deny. Any traffic that passes through the FortiGate and matches the defined firewall policy will be dropped.

### To configure an IP address threat feed in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *IP Address*.
3. Set the *Name* to *AWS\_IP\_Blocklist*.
4. Set the *Update method* to *External Feed*.
5. Set the *URI of external resource* to *https://s3.us-east-2.amazonaws.com/ip-blocklist/ip.txt*.
6. Configure the remaining settings as required, then click *OK*.

7. Edit the connector, then click *View Entries* to view the IP addresses in the feed.

Edit External Connector																																	
IP Address Threat Feed: AWS_IP_Blocklist																																	
Threat Feeds	<div>Search</div> <div>433 Valid</div>																																
<div>IP Address</div> <div>Connector Settings</div> <div>Status</div> <div>Name ⓘ</div> <div>Update method ⓘ</div> <div>URI of external resource ⓘ</div> <div>HTTP basic authentication <input type="checkbox"/></div> <div>Refresh Rate</div> <div>Comments</div>	<table> <tr> <th>Entry</th><th>Validity</th></tr> <tr><td>34.201.172.46</td><td>✓ Valid</td></tr> <tr><td>111.230.166.116</td><td>✓ Valid</td></tr> <tr><td>172.16.0.26</td><td>✓ Valid</td></tr> <tr><td>46.101.28.225</td><td>✓ Valid</td></tr> <tr><td>5.188.203.131</td><td>✓ Valid</td></tr> <tr><td>159.89.117.42</td><td>✓ Valid</td></tr> <tr><td>159.65.95.224</td><td>✓ Valid</td></tr> <tr><td>218.107.216.7</td><td>✓ Valid</td></tr> <tr><td>122.49.218.5</td><td>✓ Valid</td></tr> <tr><td>103.99.0.227</td><td>✓ Valid</td></tr> <tr><td>52.80.114.97</td><td>✓ Valid</td></tr> <tr><td>125.45.94.149</td><td>✓ Valid</td></tr> <tr><td>5.97.84.130</td><td>✓ Valid</td></tr> <tr><td>54.197.9.142</td><td>✓ Valid</td></tr> <tr><td>77.16.10.100</td><td>✓ Valid</td></tr> </table> <div>0% 433</div>	Entry	Validity	34.201.172.46	✓ Valid	111.230.166.116	✓ Valid	172.16.0.26	✓ Valid	46.101.28.225	✓ Valid	5.188.203.131	✓ Valid	159.89.117.42	✓ Valid	159.65.95.224	✓ Valid	218.107.216.7	✓ Valid	122.49.218.5	✓ Valid	103.99.0.227	✓ Valid	52.80.114.97	✓ Valid	125.45.94.149	✓ Valid	5.97.84.130	✓ Valid	54.197.9.142	✓ Valid	77.16.10.100	✓ Valid
Entry	Validity																																
34.201.172.46	✓ Valid																																
111.230.166.116	✓ Valid																																
172.16.0.26	✓ Valid																																
46.101.28.225	✓ Valid																																
5.188.203.131	✓ Valid																																
159.89.117.42	✓ Valid																																
159.65.95.224	✓ Valid																																
218.107.216.7	✓ Valid																																
122.49.218.5	✓ Valid																																
103.99.0.227	✓ Valid																																
52.80.114.97	✓ Valid																																
125.45.94.149	✓ Valid																																
5.97.84.130	✓ Valid																																
54.197.9.142	✓ Valid																																
77.16.10.100	✓ Valid																																

**To configure an IP address threat feed in the CLI:**

```
config system external-resource
  edit "AWS_IP_Blocklist"
    set type address
    set resource "https://s3.us-east-2.amazonaws.com/ip-blocklist/ip.txt"
    set server-identity-check {none | basic | full}
  next
end
```



To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) either in basic or full mode. By default, it is set to none.

**To apply an IP address threat feed in a firewall policy:**

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. In the *Destination* field, click the + and select *AWS\_IP\_Blocklist* from the list (in the *IP ADDRESS FEED* section).
4. Set *Action* to *DENY*.
5. Enable *Log Allowed Traffic*.
6. Click *OK*.

## Applying an IP address threat feed as an external IP block list in a DNS filter profile

An IP address threat feed can be applied by enabling *External IP Block Lists* in a DNS filter profile. Any DNS query that passes through the FortiGate and resolves to any of the IP addresses in the threat feed list will be dropped.

**To configure the DNS filter profile:**

1. Go to *Security Profiles > DNS Filter* and create a new profile, or edit an existing one.
2. Enable *External IP Block Lists*.
3. Click the + and select *AWS\_IP\_Blocklist* from the list.
4. Click *OK*.

**To apply the DNS filter profile in a firewall policy:**

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *DNS Filter* and select the profile used in the previous procedure.
4. Enable *Log Allowed Traffic*.
5. Click *OK*.

IP addresses that match the IP address threat feed list will be blocked.

**To view the DNS query logs:**

1. Go to *Log & Report > Security Events* and select *DNS Query*.
2. View the log details in the GUI, or download the log file:

```
1: date=2023-02-06 time=15:06:50 eventtime=1675724810452621179 tz="-0800"
logid="1501054400" type="utm" subtype="dns" eventtype="dns-response" level="warning"
vd="root" policyid=0 sessionid=555999 srcip=172.20.120.13 srcport=59602
srccountry="Reserved" srcintf="port2" srcintfrole="undefined" dstip=172.20.120.12
dstport=53 dstcountry="Reserved" dstintf="root" dstintfrole="undefined" proto=17
profile="default" xid=24532 qname="dns.google" qtype="A" qtypeval=1 qclass="IN"
ipaddr="208.91.112.55" msg="Domain was blocked because it is in the domain-filter list"
action="redirect" domainfilteridx=0 domainfilterlist="AWS_IP_Block_list"
```

**Applying an IP address threat feed in a local-in policy**

An IP address threat feed can be applied as a source or destination in a local-in policy.

In this example, a previously created IP address threat feed named *AWS\_IP\_Blocklist* is used as a source address in a local-in-policy. Any traffic originating from any of the IP addresses in the threat feed list and destined for the FortiGate will be dropped.

**To apply an IP address threat feed in a local-in policy:**

```
config firewall local-in-policy
  edit 1
    set intf "any"
    set srcaddr "AWS_IP_Blocklist"
    set dstaddr "all"
    set service "ALL"
    set schedule "always"
  next
end
```

**To test the configuration:**

1. From one of the IP addresses listed in IP address threat feed (in this case 172.16.200.2), start a continuous ping to port1:

```
ping 172.16.200.1 -t
```

2. On the FortiGate, enable debug flow:

```
# diagnose debug flow filter addr 172.16.200.2
# diagnose debug flow filter proto 1
# diagnose debug enable
# diagnose debug flow trace start 10
```

3. The output of the debug flow shows that traffic is dropped by local-in policy 1:

```
id=65308 trace_id=11 func=print_pkt_detail line=5939 msg="vd-root:0 received a packet
(proto=1, 172.16.200.2:0->172.16.200.1:2048) tun_id=0.0.0.0 from port1. type=8, code=0,
id=0, seq=0."
id=65308 trace_id=11 func=init_ip_session_common line=6121 msg="allocate a new session-
0002f318, tun_id=0.0.0.0"
id=65308 trace_id=11 func=__vf_ip_route_input_rcu line=2012 msg="find a route:
flag=80000000 gw=0.0.0.0 via root"
id=65308 trace_id=11 func=fw_local_in_handler line=545 msg="iprope_in_check() check
failed on policy 1, drop"
```

## Domain name threat feed

A domain name threat feed is a dynamic list that contains domains and periodically updates from an external server. The list is stored in a text file format on an external server. After the FortiGate imports this list, it becomes available as a category in the *Remote Categories* group of DNS filter profiles that can be used to allow, block, or monitor domains matching this category. Multiple custom categories can be defined by creating a domain name threat feed for each category.

Text file example:

```
mail.*.example.com
*-special.example.com
www.*example.com
example.com
```

The file contains one domain name per line. See [External resources file format](#) for more information about the domain list formatting style.


## Example configuration

In this example, a list of domain names is imported using the domain name threat feed. The newly created threat feed is set to monitor in the DNS filter profile, and the DNS filter profile is applied to a firewall policy. Any traffic that passes through the FortiGate and matches any of the domain names in the threat feed list will be monitored.

**To configure a domain name threat feed in the GUI:**

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *Domain Name*.

3. Set the *Name* to *Domain\_monitor\_list*.
4. Set the *Update method* to *External Feed*.
5. Set the *URI of external resource* to *https://192.168.10.13/external\_domain\_list.txt*.
6. Configure the remaining settings as required, then click *OK*.
7. Edit the connector, then click *View Entries* to view the domain names in the feed (fortinet.com and example.com).

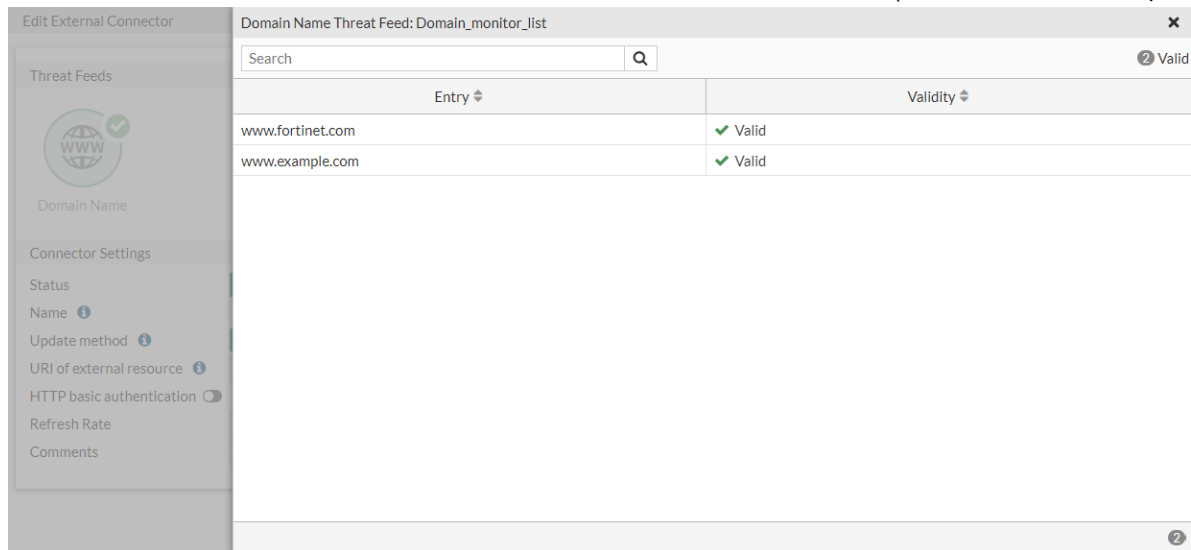

### To configure a domain name threat feed in the CLI:

```
config system external-resource
  edit "Domain_monitor_list"
    set type domain
    set category 194
    set resource "http://192.168.10.13/external_domain_list.txt"
    set server-identity-check {none | basic | full}
  next
end
```



To improve the security of the connection, it is recommended to enable server certificate validation (*server-identity-check*) either in basic or full mode. By default, it is set to none.

### To apply a domain name threat feed in a DNS filter profile:

1. Go to *Security Profiles > DNS Filter* and create a new web filter profile, or edit an existing one.
2. Enable *FortiGuard category based filter*.
3. In the *Remote Categories* group, set the action for the *Domain\_monitor\_list* category to *Monitor*.
4. Configure the remaining settings as needed, then click *OK*.

### To apply the DNS filter profile in a firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *DNS Filter* and select the profile used in the previous procedure.



4. Enable *Log Allowed Traffic*.
5. Click **OK**.

Domains that match the domain threat feed list are rated as domain threat feed, overriding their original domain rating.

### To view the DNS query logs:

1. Go to *Log & Report > Security Events* and select *DNS Query*.
2. View the log details in the GUI, or download the log file:

```
1: date=2023-02-03 time=10:44:16 eventtime=1675449856658521042 tz="-0800"
logid="1501054802" type="utm" subtype="dns" eventtype="dns-response" level="notice"
vd="root" policyid=0 sessionid=265870 srcip=172.20.120.13 srcport=59662
srccountry="Reserved" srcintf="port2" srcintfrole="undefined" dstip=172.20.120.12
dstport=53 dstcountry="Reserved" dstintf="root" dstintfrole="undefined" proto=17
profile="default" xid=35624 qname="example.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="93.184.216.34" msg="Domain is monitored" action="pass" cat=194 catdesc="Domain_
monitor_list"

2: date=2023-02-03 time=10:44:08 eventtime=1675449848683418535 tz="-0800"
logid="1501054802" type="utm" subtype="dns" eventtype="dns-response" level="notice"
vd="root" policyid=0 sessionid=265537 srcip=172.20.120.13 srcport=57434
srccountry="Reserved" srcintf="port2" srcintfrole="undefined" dstip=172.20.120.12
dstport=53 dstcountry="Reserved" dstintf="root" dstintfrole="undefined" proto=17
profile="default" xid=31194 qname="fortinet.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="3.1.92.70, 52.220.222.172" msg="Domain is monitored" action="pass" cat=194
catdesc="Domain_monitor_list"
```

## Malware hash threat feed

A malware hash threat feed is a dynamic list that contains malware hashes and periodically updates from an external server. The list is stored in text file format on an external server. After the FortiGate imports this list, it is automatically used for virus outbreak prevention on antivirus profiles when *Use external malware block list* is enabled. Similar to FortiGuard outbreak prevention, the malware hash threat feed is not supported in AV quick scan mode.

Text file example:

```
292b2e6bb027cd4ff4d24e338f5c48de
dda37961870ce079defbf185eeef905 Trojan-Ransom.Win32.Locky.abfl
3fa86717650a17d075d856a41b3874265f8e9eab Trojan-Ransom.Win32.Locky.abfl
c35f705df9e475305c0984b05991d444450809c35dd1d96106bb8e7128b9082f Trojan-
Ransom.Win32.Locky.abfl
```

The file contains one malware hash per line. See [External resources file format](#) for more information about the malware hash list formatting style.



For optimal performance, do not mix different hashes in the list. Only use one MD5, SHA1, or SHA256.

## Example configuration

In this example, a list of malware hashes is imported using the malware threat feed. The newly created threat feed is applied to an antivirus profile, and the antivirus profile is applied to a firewall policy. Any traffic that passes through the FortiGate and matches the malware hashes in the threat feed list will be dropped.

### To configure a malware hash threat feed in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *Malware Hash*.
3. Set the *Name* to *AWS\_Malware\_Hash*.
4. Set the *Update method* to *External Feed*.
5. Set the *URI of external resource* to *https://s3.us-west-2.amazonaws.com/malware.txt*.
6. Configure the remaining settings as required, then click *OK*.
7. Edit the connector, then click *View Entries* to view the hash list.

Edit External Connector	
Malware Hash Threat Feed: AWS_Malware_Hash	
<div>Threat Feeds</div> <div>Malware Hash</div> <div>Connector Settings</div> <div>Status</div> <div>Name ⓘ</div> <div>Update method ⓘ</div> <div>URI of external resource ⓘ</div> <div>HTTP basic authentication ⚙</div> <div>Refresh Rate</div> <div>Comments</div>	
<div>Search</div> <div>15 Valid</div>	
Entry	Validity
037c69bqbabb001f7cae8b8ecf0be000	✓ Valid
fd34fe0c35060f56q72fcb8c14243800	✓ Valid
94a47763681qf353962ae30091ff8000	✓ Valid
7fd4cd3d2f13209b088c903c0bq1ec00	✓ Valid
18042a1df40f10fff38dqe0d081ad700	✓ Valid
e7e4ddefq86da465ec5da9f9e1982e00	✓ Valid
c4f6894q3de5fc82cfa9dd01c8105700	✓ Valid
f445628bb3edf3eafq7d4057c9996700	✓ Valid
2adf12q013f1db2db139dc73f9f9a400	✓ Valid
336ab9ce9274bce2c8aqe431d1d8de00	✓ Valid
41c13f6e71497a827a91dbq876089400	✓ Valid
dade9d2aq30ce9eb7e2765cb93659d00	✓ Valid
d59149c1f7247c3q89d2e01ecd630500	✓ Valid

### To configure a malware hash threat feed in the CLI:

```
config system external-resource
  edit "AWS_Malware_Hash"
    set type malware
    set resource "https://s3.us-west-2.amazonaws.com/malware.txt"
    set server-identity-check {none | basic | full}
  next
end
```



To improve the security of the connection, it is recommended to enable server certificate validation (*server-identity-check*) either in basic or full mode. By default, it is set to none.

### To apply a malware hash threat feed in an antivirus profile:

1. Go to *Security Profiles > AntiVirus* and create a new web filter profile, or edit an existing one.
2. Enable *Use external malware block list*.

3. Click the + and select *AWS\_Malware\_Hash* from the list.
4. Configure the remaining settings as needed, then click *OK*.

### To apply the antivirus profile in a firewall policy:

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *AntiVirus* and select the profile used in the previous procedure.
4. Set *SSL Inspection* to *deep-inspection* to inspect HTTPS traffic.
5. Enable *Log Allowed Traffic*.
6. Click *OK*.

### To view the antivirus logs:

1. Go to *Log & Report > Security Events* and select *AntiVirus*.
2. View the log details in the GUI, or download the log file:

```
1: date=2023-02-03 time=15:42:41 eventtime=1675467761491047388 tz="-0800"
logid="0207008212" type="utm" subtype="virus" eventtype="malware-list" level="warning"
vd="root" policyid=1 poluuid="e8b310ba-914f-51ed-9014-7b2a116f29ad" policytype="policy"
msg="Blocked by local malware list." action="blocked" service="HTTP" sessionid=293915
srcip=172.20.120.13 dstip=192.168.10.13 srcport=53515 dstport=80 srccountry="Reserved"
dstcountry="Reserved" srcintf="port2" srcintfrole="undefined" dstintf="port3"
dstintfrole="wan" srcuuid="3342cb44-9140-51ed-5dbe-8e0787bedeec" dstuuid="3342cb44-9140-
51ed-5dbe-8e0787bedeec" proto=6 direction="incoming" filename="test.jpg"
quarskip="Quarantine-disabled" virus="a1a74a39788854b75d454dc9c83c612b" viruscat="File
Hash" dtype="external-blocklist" filehash="a1a74a39788854b75d454dc9c83c612b"
filehashsrc="AWS_Malware_Hash" url="http://192.168.10.13/test.jpg" profile="default"
agent="curl/7.55.1" httpmethod="GET" analyticssubmit="false" crscore=10 craction=2
crlevel="medium"
```

### To verify the scanunit daemon:

```
# diagnose sys scanunit file-hash list
malware 'a1a74a39788854b75d454dc9c83c612b' vf_id 0 uuid 15752 profile 'AWS_Malware_Hash'
description ''
```

The list of external hashes has been updated.

## Threat feed connectors per VDOM

When multi-VDOM mode is enabled, a threat feed external connector can be defined in global or within a VDOM. Global threat feeds can be used in any VDOM, but cannot be edited within the VDOM. FortiGuard category and domain name-based external feeds have an added category number field to identify the threat feed. The threat feed name in global must start with *g-*. Threat feed names in VDOMs cannot start with *g-*.

FortiGuard category and domain name-based external feed entries must have a number assigned to them that ranges from 192 to 221. This number can be assigned to both external feed types. However, when a category number is used under a global entry, such as 192 with the name *g-cat-192*, this category number cannot be used in any other global or VDOM entries. If a category is used under a VDOM entry, such as 192 under VDOM1 with the name *cat-192*, the category 192 can be used in another VDOM or root with the name *cat-192*.

A threat feed connector can only be used in profiles in the VDOM that it was created in. Global connectors can be used in all VDOMs.

Each VDOM can have a maximum of 256 threat feed entries. But in total, a FortiGate can only have 511 threat feed entries.

To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) either in basic or full mode.

### To configure a FortiGuard category threat feed connector under global in the GUI:


1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Enter a name that begins with `g-`.
4. Configure the other settings as needed.
5. Click *OK*.

### To configure a FortiGuard category threat feed connector under global in the CLI:

```
config global
    config system external-resource
        edit "g-category"
            set status enable
            set type category
            set category 192
            set comments ''
            set resource "http://172.16.200.55/external-resource-test/513-FDGCATEGORY.txt"
            set server-identity-check {none | basic | full}
            set refresh-rate 5
        next
    end
end
```

### To configure a domain name threat feed connector under a VDOM in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *Domain Name*.
3. Enter a name that does not begin with `g-`.
4. Configure the other settings as needed.
5. Click *OK*. The threat feed connector created under global also appears, but it is not editable.

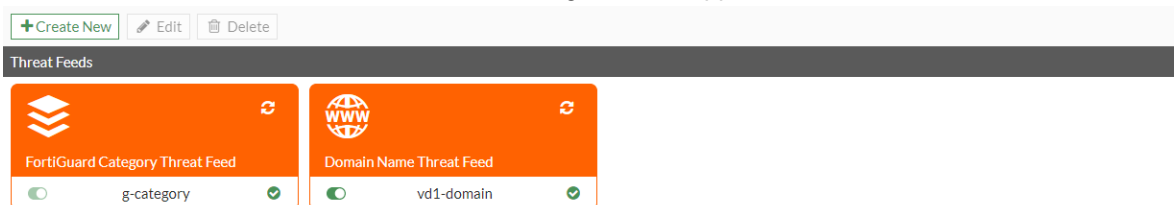

### To configure a domain name threat feed connector under a VDOM in the CLI:

```
config vdom
    edit vd1
        config system external-resource
```


```

        edit "vd1-domain"
            set status enable
            set type domain
            set category 193
            set comments ''
            set resource "http://172.16.200.55/external-resource-test/513-Domain.txt"
            set server-identity-check {none | basic | full}
            set refresh-rate 5
        next
    end
next
end


```

### To use an IP address threat feed in a policy in the GUI:

1. Configure an IP address connector in global:
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. In the *Threat Feeds* section, click *IP Address*.
  - c. Enter a name that begins with *g-*.
  - d. Configure the other settings as needed.
  - e. Click *OK*.
2. Configure an IP address connector in the VDOM (vd1):
  - a. Go to *Security Fabric > External Connectors* and click *Create New*.
  - b. In the *Threat Feeds* section, click *IP Address*.
  - c. Enter a name that does not begin with *g-*.
  - d. Configure the other settings as needed.
  - e. Click *OK*. The threat feed connectors created under global also appear, but they are not editable.

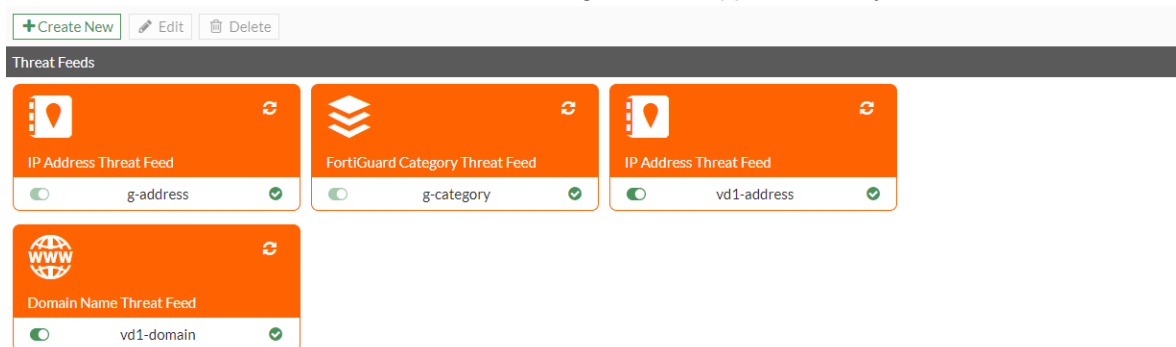

3. Configure the firewall policy in the VDOM (vd1):
  - a. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
  - b. For *Destination*, select *vd1-address*. Since this policy is configured under *vd1*, *g-address* can also be set as the destination.

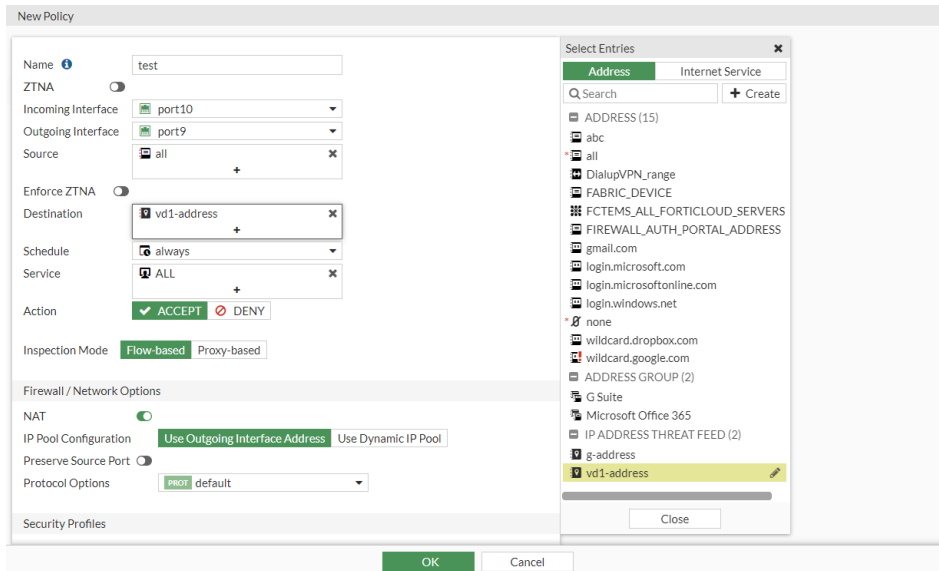

- c. Configure the other settings as needed.
- d. Click OK.

### To use an IP address threat feed in a policy in the CLI:

#### 1. Configure the IP address connectors:

```
config global
    config system external-resource
        edit "g-address"
            set status enable
            set type address
            set username ''
            set comments ''
            set resource "http://172.16.200.55/external-resource-test/513-IP.txt"
            set server-identity-check {none | basic | full}
            set refresh-rate 5
        next
    end
end

config vdom
    edit vd1
        config system external-resource
            edit "vd1-address"
                set status enable
                set type address
                set comments ''
                set resource "http://172.16.200.55/external-resource-test/513-IP.txt"
                set user-agent "curl/7.58.0"
                set server-identity-check {none | basic | full}
                set refresh-rate 5
            next
        end
    next
end
```

2. In the VDOM, configure a firewall policy with the external address as the destination address:

```
config vdom
  edit vd1
    config firewall policy
      edit 1
        set name "test"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "vd1-address"
        set action accept
        set schedule "always"
        set service "ALL"
        set profile-protocol-options "protocol"
        set nat enable
      next
    end
  next
end
```



Since this firewall policy is configured under `vd1`, `g-address` can also be set as the `dstaddr`.

---

## STIX format for external threat feeds

The FortiGate's external threat feeds support feeds that are in the STIX/TAXII format. Use the `stix://` prefix in the URI to denote the protocol.

All external threat feeds support the STIX format. In this example, a FortiGuard Category threat feed in the STIX format is configured.

### To configure a FortiGuard Category threat feed in the STIX format in the GUI:

1. Go to *Security Fabric > External Connectors* and click *Create New*.
2. Select *FortiGuard Category* from the *Threat Feeds* section.
3. Configure the connector:
  - *Name*: `category-taxii`
  - *Update method*: *External Feed*
  - *URI of external resource*: `stix://limo.anomali.com/api/v1/taxii2/feeds/collections/200/objects/`
  - *HTTP basic authentication*: Enable and enter the username and password, such as *guest* and *guest*.

**New External Connector**

**Threat Feeds**

FortiGuard Category

**Connector Settings**

Status: ☒ Enabled ☐ Disabled

Name: category-taxii

Update method: ☒ External Feed ☐ Push API

URI of external resource: stix://limo.anomali.com/api/v1/taxii2/fe

HTTP basic authentication: ☒

Username: guest

Password: \*\*\*\*

Refresh Rate: 5 Minutes (1 - 43200)

Comments: 0/255

**Additional Information**

API Preview

Public SDN Connector Setup Guides

- Amazon Web Services
- Google Cloud Platform
- Microsoft Azure
- Oracle Cloud Infrastructure

Private SDN Connector Setup Guides

- Cisco Application Centric Infrastructure
- Nuage Virtualized Services Platform
- OpenStack Connector
- VMware NSX

Online Guides

- Relevant Documentation
- Video Tutorials
- Hot Questions at FortiAnswers
- Join the Discussion

OK Cancel

- Click **OK**.
- Edit the connector, and click **View Entries** in the right side bar to view the retrieved entries.

**Edit External Connector: FortiGuard Category Threat Feed: category-taxii**

Search

11 Valid

Entry	Validity
www.assculturaleincontri.it	Valid
dancecourt.com	Valid
strangeduckfilms.com	Valid
ukonline.hc0.me	Valid
boschetto-hotel.gr	Valid
tecslide.com	Valid
dl.microsword.net	Valid
axisbuild.com	Valid
romvarimarton.hu	Valid
rsiuk.co.uk	Valid
www.catgallery.com	Valid

11

### To configure a FortiGuard Category threat feed in the STIX format in the CLI:

```

config system external-resource
  edit "category-taxii"
    set category 194
    set username "guest"
    set password guest
    set resource "stix://limo.anomali.com/api/v1/taxii2/feeds/collections/200/objects/"
    set server-identity-check {none| basic | full}
    set update-method feed
  next
end

```





To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) either in basic or full mode. By default, `server-identity-check` is set to none.

If the connector is used in webfilter that blocks category 194, the traffic that matches the retrieved URLs, such as `rsiuk.co.uk`, is blocked:

```
1: date=2021-10-06 time=18:07:46 eventtime=1633568867163763708 tz="-0700" logid="0316013056"
type="utm" subtype="webfilter" eventtype="ftgd_blk" level="warning" vd="vd1" policyid=1
sessionid=174974 srcip=10.1.100.12 srcport=48284 srcintf="port2" srcintfrole="undefined"
srcuuid="c6753ba2-231b-51ec-1675-090f2b5f1384" dstip=78.129.255.151 dstport=443
dstintf="port1" dstintfrole="undefined" dstuuid="c6753ba2-231b-51ec-1675-090f2b5f1384"
proto=6 service="HTTPS" hostname="rsiuk.co.uk" profile="test" action="blocked"
reqtype="direct" url="https://rsiuk.co.uk/" sentbyte=75 rcvbyte=0 direction="outgoing"
msg="URL belongs to a denied category in policy" method="domain" cat=194 catdesc="category-
taxii"
```

## Using the AusCERT malicious URL feed with an API key

In this example, a list of malicious URLs is imported from AUSCERT, an Australian not for profit organization. See [AUSCERT](#) for more information.

The FortiGuard threat feed is used to import the malicious URL feed by appending the API key to the user-agent. See [HTTP header on page 2925](#) for more information. The newly created threat feed is set to block in the web filter profile, and the web filter profile is applied to a firewall policy. Any traffic that passes through the FortiGate and matches the URLs in the threat feed list will be dropped, and a replacement message will be shown.

### To configure the FortiGuard category threat feed in the GUI:

1. Go *Security Fabric > External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, select *FortiGuard Category*.
3. Configure the following settings:

<b>Status</b>	Enabled
<b>Name</b>	AusCERT_Feed
<b>Update method</b>	External Feed
<b>URI of external resource</b>	<code>https://www.auscert.org.au/api/v1/malurl/combo-7-txt/</code>

4. Click *OK*.
5. In the CLI, enter the following:

```
config system external-resource
  edit "AusCERT_Feed"
    set user-agent "Firefox\r\nAPI-Key:SECRETAPIOKEY"
  next
end
```

6. In the GUI, edit the connector and configure the remaining settings as needed, then click *OK*.
7. Edit the connector again, and click *View Entries* in the right pane to view the URL list.

**To configure the FortiGuard category threat feed in the CLI:**

```

config system external-resource
    edit "AusCERT_Feed"
        set category 194
        set resource "https://www.uscert.org.au/api/v1/malurl/combo-7-txt/"
        set user-agent "Firefox\r\nAPI-Key:SECRETAPIKEY"
    next
end

```



When configuring a FortiGuard category threat feed in the GUI, the category is set automatically. When configuring a the threat feed in the CLI, the category must be set manually. The category must be unique and in the range of 192 - 221.



To improve the security of the connection, it is recommended to enable server certificate validation (`server-identity-check`) in either `basic` or `full` mode. By default, it is set to `none`.

**To apply the FortiGuard category threat feed to a web filter profile:**

1. Go to *Security Profiles > Web Filter* and create a new web filter profile, or edit an existing one.
2. Enable *FortiGuard category based filter*.
3. In the *Remote Categories* group, set the action for the *AusCERT\_Feed* category to *Block*.
4. Configure the remaining settings as needed, then click *OK*.

**To apply the web filter profile in a firewall policy:**

1. Go to *Policy & Objects > Firewall Policy* and create a new policy, or edit an existing one.
2. Configure the policy fields as required.
3. Under *Security Profiles*, enable *Web Filter* and select the profile used in the previous procedure.
4. Enable *Log Allowed Traffic*.
5. Click *OK*.

URLs that match the FortiGuard category threat feed list are rated as the category matching the corresponding FortiGuard category threat feed, overriding their original domain rating.

**To verify that FortiGate is blocking URLs from the AusCERT feed list:**

1. Visit one of the URLs from the AusCERT\_Feed list.  
A replacement message should be shown.



## FortiGuard Intrusion Prevention - Access Blocked

### Web Page Blocked

You have tried to access a web page that is in violation of your Internet usage policy.

Category AusCERT\_Feed  
URL <http://pcmach.co.nz/>

To have the rating of this web page re-evaluated [please click here](#).

2. Go to *Log & Report > Security Events* and select *Web Filter*.
3. View the log details in the GUI, or download the log file:

```
1: date=2023-04-11 time=14:18:02 eventtime=1681247882561766251 tz="-0700"
logid="0316013056" type="utm" subtype="webfilter" eventtype="ftgd_blk" level="warning"
vd="root" policyid=1 poluid="26540ed0-ae54-51ed-80eb-89af8af4d53f" policytype="policy"
sessionid=3275 srcip=172.20.120.13 srcport=64151 srccountry="Reserved" srcintf="port2"
srcintfrole="undefined" srcuuid="3342cb44-9140-51ed-5dbe-8e0787bedeec"
dstip=114.142.162.65 dstport=80 dstcountry="Australia" dstintf="port3" dstintfrole="wan"
dstuuid="3342cb44-9140-51ed-5dbe-8e0787bedeec" proto=6 httpmethod="GET" service="HTTP"
hostname="pcmach.co.nz" agent="Mozilla/5.0 (Windows NT 10.0; Win64; x64)
AppleWebKit/537.36 (KHTML, like Gecko) Chrome/112.0.0.0 Safari/537.36" profile="default"
action="blocked" reqtype="direct" url="http://pcmach.co.nz/" sentbyte=427 rcvbyte=0
direction="outgoing" msg="URL belongs to a denied category in policy"
ratemethod="domain" cat=194 catdesc="AusCERT_Feed"
```

## Troubleshooting a threat feed

In this example, the user entered the URL of external resource without the trailing slash. The following commands can be used to troubleshoot connectivity issues between a FortiGate and external resource:

```
diagnose debug app dnsproxy -1
diagnose debug app forticron -1
diagnose debug enable
```

This output shows that the DNS resolution is successful, indicating that the FortiGate has connectivity to the external server:

```
#diagnose debug app dnsproxy -1
[worker 0] dns_local_lookup()-2476: vfid=0, real_vfid=0, qname=www.auscert.org.au, qtype=1,
qclass=1, offset=36, map#=4 max_sz=512
[worker 0] dns_lookup_aa_zone()-608: vfid=0, fqdn=www.auscert.org.au
[worker 0] dns_send_request()-1398
[worker 0] dns_send_resol_request()-1234: orig id: 0xa002 local id: 0xa002
domain=www.auscert.org.au
[worker 0] dns_find_best_server()-595: found server: 96.45.46.46
...
id:0xa002 domain=www.auscert.org.au active
```

This output shows that the requested resource was missing a trailing slash:

```
#diagnose debug app forticron -1
fcron_timer_func()-23: Timer ext_upd fired
```

```
6745-before-init: fd=-1 name='ext-root.AusCERT_Feed' http_1=0 loc=0 state=send.body info=0-
DNS fail chunk=0 content=0 etag=0 csum=0 done=0 closed=0
    sync-0(len=0 note=0 err=0) buf-1(sz=8192 data=179 free=8013 pos=0 end=179 max=10485760)
6745-init-as: fd=-1 name='ext-root.AusCERT_Feed' http_1=0 loc=0 state=send.body info=0-None
chunk=0 content=0 etag=0 csum=0 done=0 closed=0
    sync-0(len=0 note=0 err=0) buf-1(sz=8192 data=0 free=8192 pos=0 end=0 max=10485760)
http_request_make()-2066: HTTP request: https
```

```
GET /api/v1/malurl/combo-7-txt HTTP/1.1
```

```
Host: www.auscert.org.au
```

```
User-Agent: Firefox
```

```
API-Key: <obfuscated>
```

```
Accept: */*
```

```
Connection: close
```

```
http_request_make()-2101: fcron_get_addr(www.auscert.org.au)
```

```
__update_ext()-187: Updating EXT 'AusCERT_Feed' with HTTP
```

```
fcron_update_ext_func()-611: update ver: 0
```

```
fcron_timer_func()-32: Timer ext_upd done
```

```
fcron_epoll_before_handle()-297: BEFORE READ fd 11 handle event 0x01 read 0xc55a40 epoll
events 0x01
```

```
dns_parse_resp()-102: DNS www.auscert.org.au -> 54.253.78.74
```

```
dns_parse_resp()-102: DNS www.auscert.org.au -> 13.54.251.23
```

```
...
```

```
HTTP/1.1 301 Moved Permanently
```

```
...
```

```
Location: /api/v1/malurl/combo-7-txt/
```

After adding a trailing slash to the external resource URL, the connection is now working:

```
#diagnose debug app forticron -1
```

```
fcron_timer_func()-23: Timer ext_upd fired
```

```
2832-before-init: fd=-1 name='ext-root.AusCERT_Feed' http_1=0 loc=0 state=send.header
info=0-None chunk=0 content=0 etag=0 csum=0 done=0 closed=0
```

```
    sync-0(len=0 note=0 err=0) buf-0(sz=0 data=0 free=0 pos=0 end=0 max=10485760)
```

```
2832-init-as: fd=-1 name='ext-root.AusCERT_Feed' http_1=0 loc=0 state=send.header info=0-
None chunk=0 content=0 etag=0 csum=0 done=0 closed=0
```

```
    sync-0(len=0 note=0 err=0) buf-1(sz=8192 data=0 free=8192 pos=0 end=0 max=10485760)
```

```
http_request_make()-2066: HTTP request: https
```

```
GET /api/v1/malurl/combo-7-txt/ HTTP/1.1
```

```
Host: www.auscert.org.au
```

```
User-Agent: Firefox
```

```
API-Key: <obfuscated>
```

```
Accept: */*
```

```
Connection: close
```

```
...
```

```
HTTP/1.1 200 OK
```




These troubleshooting commands can be used to resolve a variety of issues. they are not limited to this specific use case.

---

## Monitoring the Security Fabric using FortiExplorer for Apple TV

FortiExplorer for Apple TV allows you to use a TV screen to monitor your entire Security Fabric.

FortiExplorer for Apple TV is an analysis tool that provides easy to use NOC and SOC monitoring capabilities. The app features real-time data traffic, visual alerts, as well as a general overview of hardware devices, operating systems, and interfaces. The monitor also provides a wireless health summary of your entire network across multiple buildings. If an access point goes offline, you will be notified about the network's health. After the issues are resolved, you will immediately see the health update on your screen.

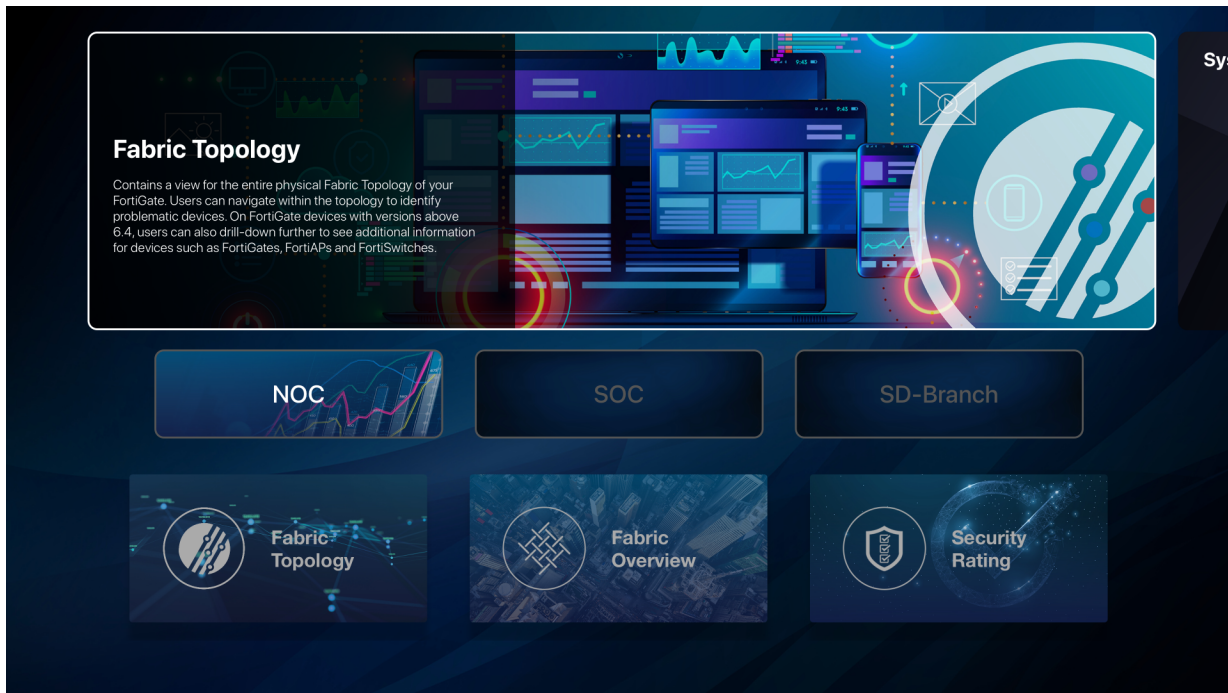

### Getting started with FortiExplorer for Apple TV

Download FortiExplorer for Apple TV from the app store on Apple TV. After the app is installed, add devices using the Apple TV remote or by sharing a login profile with FortiExplorer. Once the devices are added, you can use FortiExplorer for Apple TV to view real-time data in the Network Operations Center, Security Operations Center, and Software-Defined Branch.

#### To get started with FortiExplorer for Apple TV:

1. [Download the app and add devices to FortiExplorer for Apple TV.](#)  
You can add devices by sharing a login profile with FortiExplorer or logging into the device directly on FortiExplorer for Apple TV.
2. [View the physical topology of the Fabric to identify risks](#)
3. [View the Fabric components as seen on the root FortiGate.](#)
4. [View an executive summary of the three largest areas of security focus in the Security Fabric.](#)
5. [View data collected by FortiAnalyzer on the endpoints on your network.](#)
6. [View vulnerability data collected by FortiClient EMS.](#)

7. Use the Software-Defined Branch module to monitor interface SD-WAN usage and associated service level agreements.

## NOC and SOC example


In this example, you have configured your FortiGates, FortiAnalyzer and other devices in your Security Fabric. Now you want to use FortiExplorer for Apple TV to display the status of the devices on a TV in your Network Operation Center or Security Operation Center.

### Topology

This topology has a Headquarter and two Branches. Within the Headquarter is the Enterprise Core and two FortiGates acting as ISFWs. In addition, an on-premise FortiAnalyzer collects all logging information from the fabric devices. The FortiClient EMS manages all the endpoints within the topology.

The two branches are configured with SD-WAN with VPN overlays to the Enterprise Core. Traffic is steered towards the overlays and underlays based on SD-WAN Rules.

Using FortiExplorer for Apple TV, you will be able to monitor the different components in this topology.

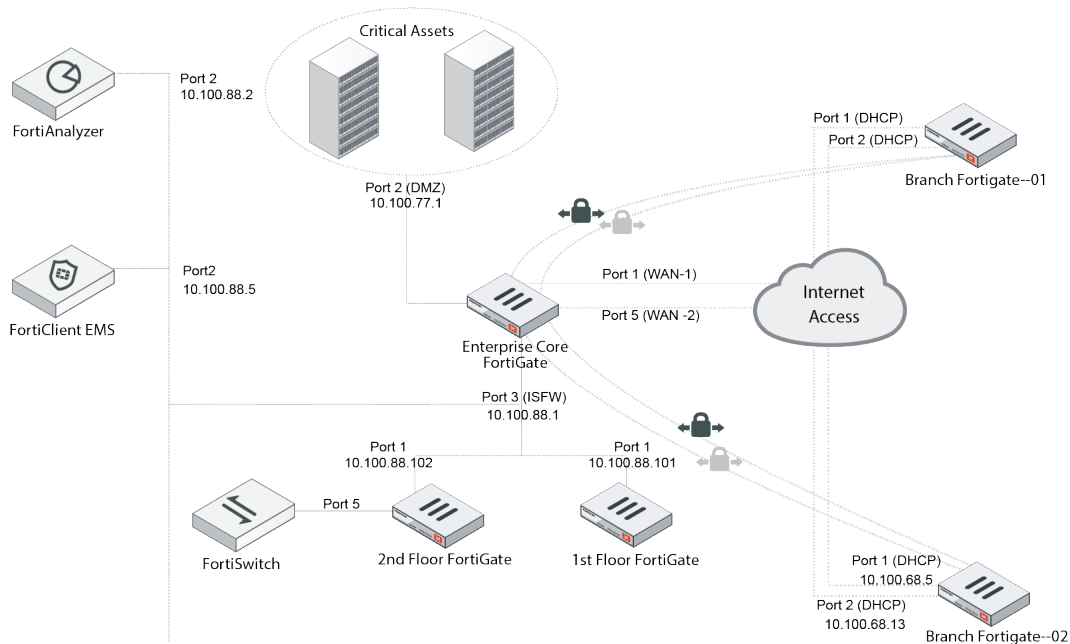

To take advantage of the views in the FortiExplorer for Apple TV, you should configure:


- Security Fabric on all FortiGates. See [Configuring the root FortiGate and downstream FortiGates on page 2583](#).
- FortiAnalyzer Logging. See [Configuring FortiAnalyzer on page 2593](#).
- FortiClient EMS. See [Configuring FortiClient EMS on page 2604](#)

## Adding the root FortiGate to FortiExplorer for Apple TV


By adding the root FortiGate, you can view the entire topology and navigate to branch FortiGates in the SD-WAN view. If you are already using FortiExplorer on a mobile device, you can connect the same FortiGate device to Apple TV by sharing the login credentials on both devices. Alternatively, you can manually connect to your root FortiGate directly from the app.

### To share login credentials between FortiExplorer and FortiExplorer for Apple TV:


1. Connect the FortiExplorer and FortiExplorer for Apple TV devices to the same network.
2. On FortiExplorer for Apple TV, click *New FortiGate*.
3. In FortiExplorer, go to *My Fabric*.
4. Swipe right on the device you want to share, and tap *Share Login Profile*.

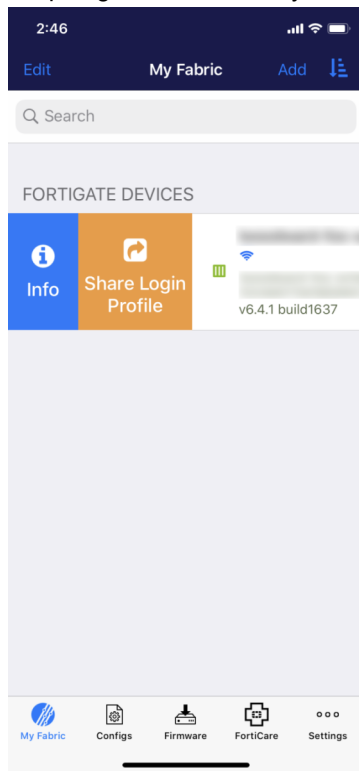

5. Tap *Share to Apple TV*.

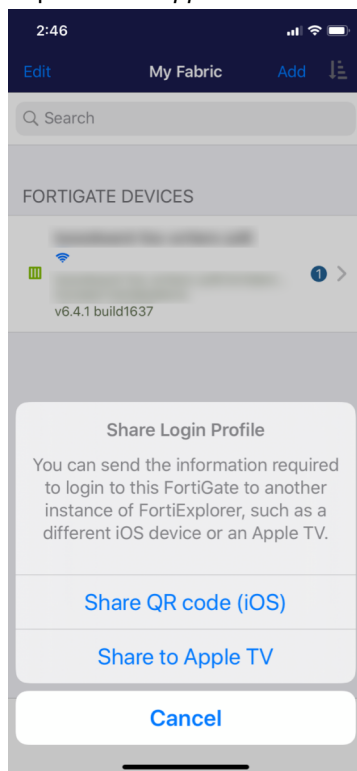

6. On Apple TV, click *Accept*. FortiExplorer for Apple TV confirms the request and proceeds to the device main menu.

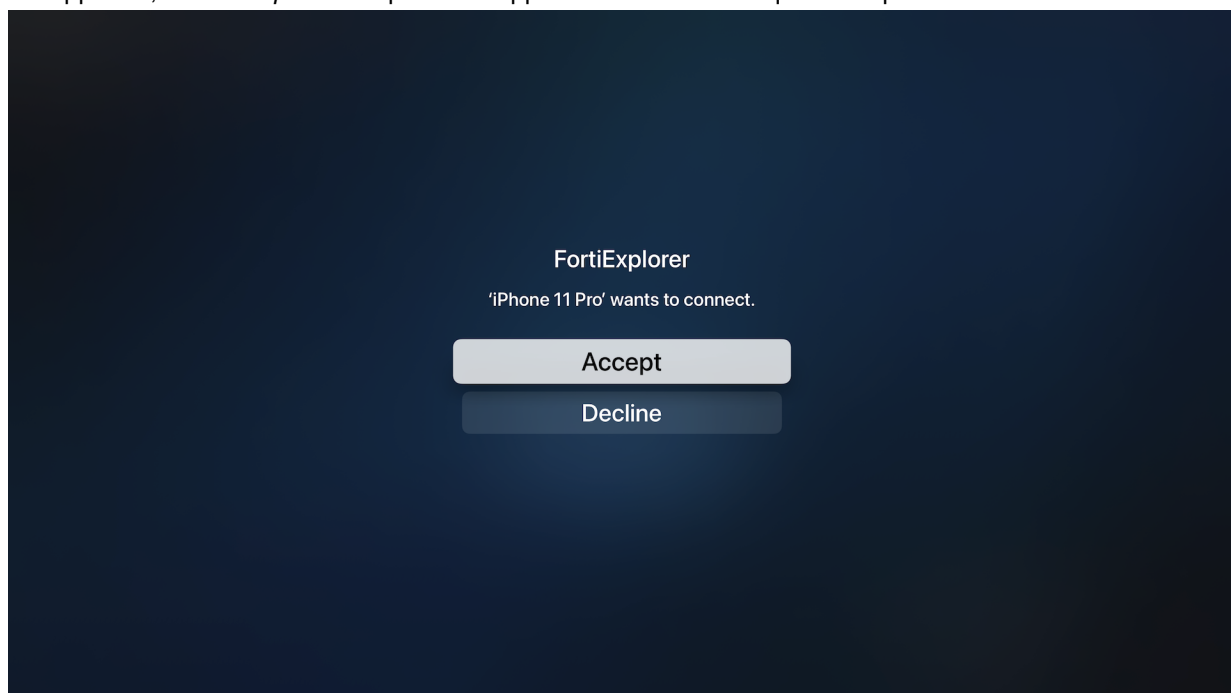



**To add devices to FortiExplorer for Apple TV:**

1. In the *Devices* menu, click *New FortiGate*. The *Login to FortiGate* dialog box is displayed.
2. In the *IP Address/Host Name* field, take one of the following actions:
  - Enter the device IP address and port, if not using the default admin port 443
  - Enter the full host name including the domain. Enter port if not using the default admin port 443.

IP Address

fortinet.com:10403

SPACE a b c d e f g h i j k l m n o p q r s t u v w x y z

1 2 3 4 5 6 7 8 9 0 . - \_ ! @ # \$ % ^ & \*

ABC abc #+~

next

3. Enter the *Username* and *Password* for the FortiGate device.
4. Click *Remember* to save time entering the login credentials later.
5. Click *Login*. The device is added to FortiExplorer for Apple TV.



If the IP or hostname is not defined in the CN or SAN field of your certificate, you will receive a prompt that "Your connection is not private". You may choose to continue with your connection.



## Viewing the Fabric Topology monitor

Use the Fabric Topology monitor to view the physical topology of the Fabric to identify risks. FortiGate devices with version 6.4. and above can drilldown further to see additional information for devices such as FortiGates, FortiAPs, and FortiSwitches.

To view the Fabric Topology monitor, go to *Network Operations Center > Fabric Topology*. This monitor displays the same information as the *Physical Topology* on the FortiGate



Use your remote to navigate through the devices in the Fabric topology. Click a device to view the drilldown information. To return to the default view, click the *Menu* button.

## Viewing the Fabric Overview monitor

Use the Fabric Overview monitor to view the Fabric components as seen on the Dashboard of the Fabric Root FortiGate in the example topology. Each device must be authorized and be part of the Fabric.

For information about configuring the Security Fabric, see [Fortinet Security Fabric on page 2578](#)

To view the Fabric Overview monitor, go to *Network Operations Center > Fabric Overview*.



The Security Fabric monitor has multiple panes. To see data populated on the panes, ensure that proper configurations are applied on the Fabric devices:

Pane	Description	Configuration
<b>Fabric Connectors</b>	Displays external SDN connectors that are enabled.	Configure <i>Security Fabric &gt; External Connectors</i> .
<b>Security Fabric Overview</b>	Displays the number of devices in the topology.	Configure <i>Security Fabric &gt; Fabric Connectors</i> .
<b>Attack Surface</b>	Displays devices detected by the FortiGate with a server tag.	Ensure Device Detection is configured on the interface(s). Go to <i>Network &gt; Interfaces</i> .
<b>Device Inventory</b>	Displays devices based on Hardware Vendor and detected OS	Ensure Device Detection is configured on the interface(s). Go to <i>Network &gt; Interfaces</i> .
<b>Endpoint Coverage</b>	Displays the number of online devices and the percentage of Unscanned, Vulnerable, and Secured devices.	Ensure Device Detection is configured on the interface(s). Vulnerability scan results come from FortiClient EMS. Go to <i>Network &gt; Interfaces</i> .



Device related information only corresponds to devices local to the FortiGate. Device information from downstream FortiGates do not propagate to the Upstream FortiGate.

## Viewing the Security Rating monitor

The Security Rating monitor is separated into three major scorecards: *Security Posture*, *Fabric Coverage*, and *Optimization*, which provide an executive summary of the three largest areas of security focus in the Security Fabric.

To see the Security Rating summary, the root FortiGate and all FortiGates within the Fabric should have the proper FortiGuard Security Rating license. Security rating is performed on the root FortiGate. Its reports are generated periodically.

To view the Security Rating monitor, go to *Network Operations Center > Security Rating*.



The scorecards show an overall score of the performance and sub-categories. The point score represents the net score for all passed and failed items in that area.

For more information about the Security Rating score, see [Security Fabric score on page 2734](#).

## Viewing the Compromised Hosts monitor

The Compromised Hosts monitor leverages the data collected by FortiAnalyzer on the endpoints on your network. To see compromised hosts, the FortiAnalyzer must have a FortiGuard Indicators of Compromise license. The IOC service helps identify compromised hosts based on infected websites that it may have visited.

This monitor captures the same information as seen on the *Compromised Hosts* monitor on the FortiGate.

The screenshot displays the Fortinet Security Fabric interface with the 'Compromised Hosts' monitor selected. The interface is divided into three main sections:

- Left Panel (User List):** A list of users with their status 'Compromised'. Jesse Hughes is highlighted.
- USER INFORMATION Panel:**
  - User:** Jesse Hughes
  - Status:** Not Registered
  - Phone:** 1778160275
  - IP:** 10.200.1.18
  - Email:** JesseHughes@hotmail.com
  - OS:** Linux LUBUNTU 16.0.4
  - Time:** 14:03:04:69:1b:20
- TOPOLOGY VIEW Panel:** A network diagram showing the user's location. The path is: jko-testapptv → Enterprise\_Second\_Floor → Jesse Hughes.
- VERDICT VIEW Panel:**
  - Threats:** 1 Threat Detected (indicated by a red robot icon).
  - Malware Sinkhole - 176.31.62.76:**
    - Detected Method:** infected-ip
    - Security Action:** close
  - Malware Sinkhole - 23.253.46.64:**
    - Detected Method:** infected-ip
    - Security Action:** close


### To view the Compromised Hosts monitor:

1. Go to *Security Operations Center > Compromised Hosts*.
2. In the left-hand pane, scroll through the user list. The monitor displays three panes:
  - The *User Information* pane displays the user's contact information and IP address.
  - The *Topology View* pane displays the user's location in the topology.
  - The *Verdict View* pane displays the *Malware*, *Detected Method*, and *Security Action*.

## Viewing the Vulnerability Monitor

The Vulnerability Monitor obtains data from FortiClient EMS. It displays vulnerabilities detected by the FortiClient endpoint, categorized into Critical, High, Medium and Low risk. In this example, an on-premise FortiClient EMS is connected on the root FortiGate's Fabric Connector.

This monitor captures the same information as seen on the *Top Vulnerable Endpoint Devices* monitor on the FortiGate.

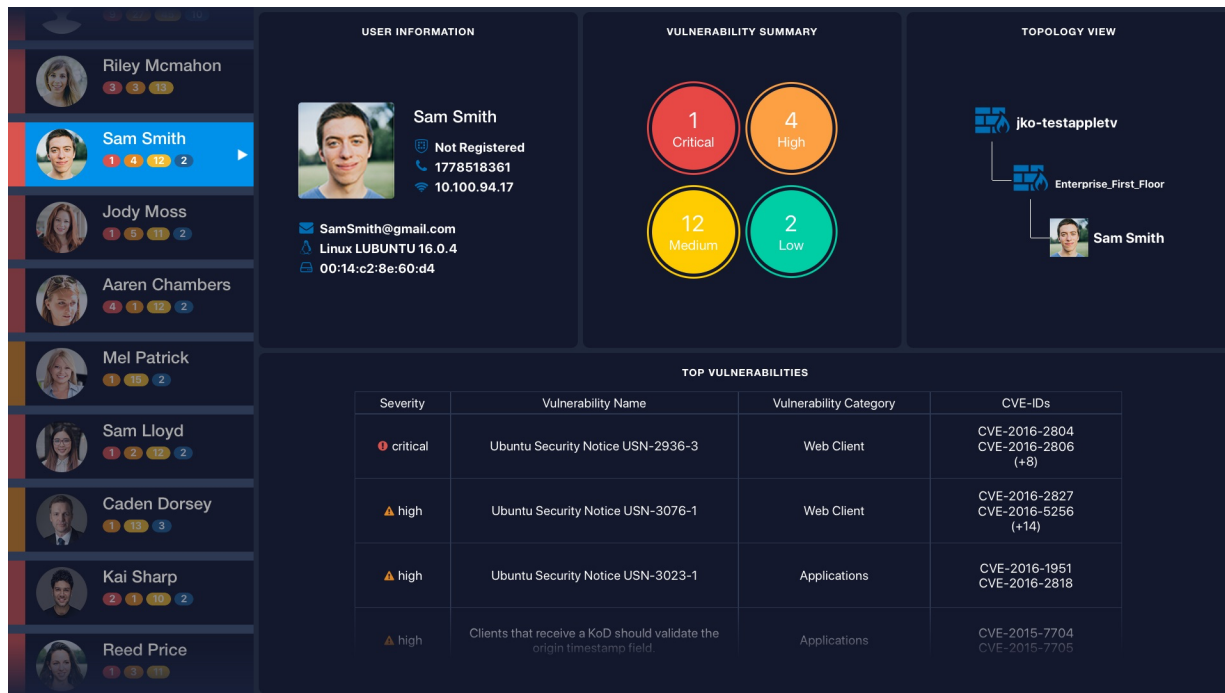

### To view the Vulnerability Monitor:


1. Go to *Security Operations Center > Vulnerability Monitor*. The monitor displays a user list and their vulnerabilities.
2. Use your remote to scroll through the user list. The vulnerability details are displayed on the right side of the monitor.
  - The *User Information* pane displays the user's contact details and IP address.
  - The *Vulnerability Summary* pane displays the number of vulnerabilities categorized into *Critical*, *High*, *Medium* and *Low* risk.
  - The *Topology View* pane displays the user's location in the topology.
  - The *Top Vulnerabilities* pane displays the top vulnerabilities by severity.

## Using the SD-WAN monitor

In the example topology, the branches are configured to use SD-WAN. You can use the top-right navigation menu in the SD-WAN monitor to navigate to the Branch FortiGate to display information about the SD-WAN.

To view the SD-WAN monitor, go to *Software-Defined Branch > SD-WAN Monitor*.


The SD-WAN monitor summarizes the SD-WAN members, Zones, SD-WAN Rules and health checks deployed on the FortiGate. It shows the interface member's SD-WAN usage and its associated service level agreements. The monitor contains a chart that shows if the ports are meeting the SLA target for bandwidth, jitter and latency per the health check in use in each SD-WAN Rule.

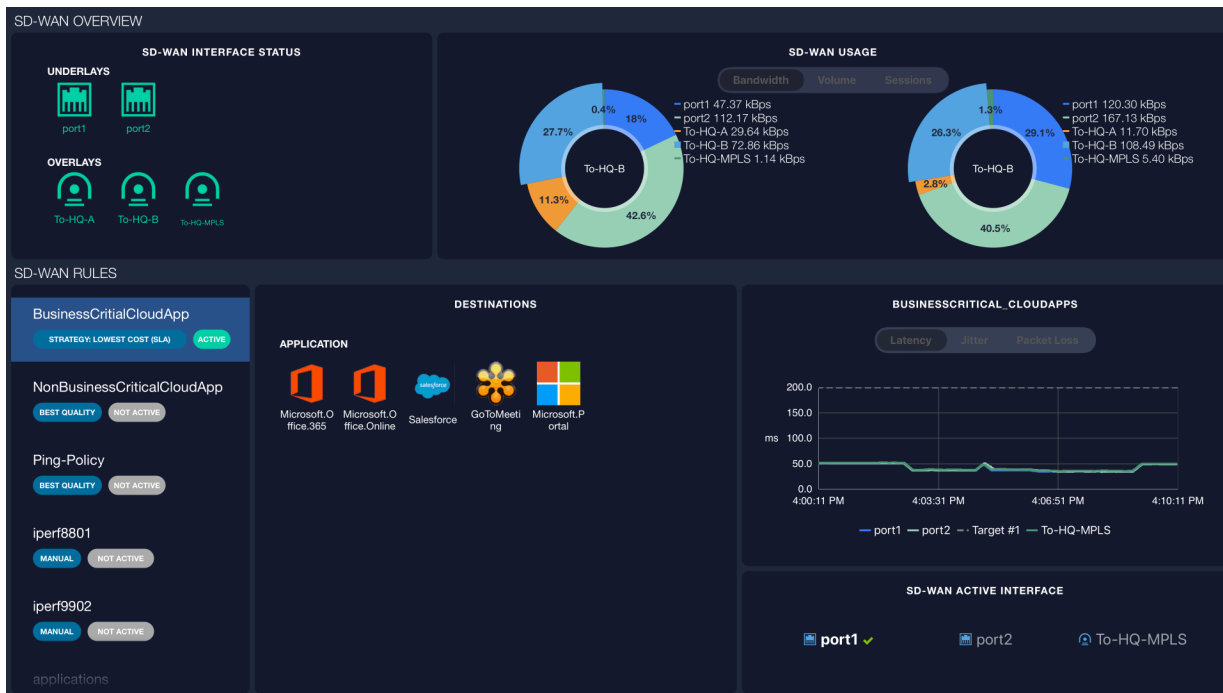

Some of the SD-WAN statistics are only available in FOS 6.4.1 and higher.

### To view SD-WAN usage charts:

1. In the *SD-WAN Overview* area, Use your remote to select the *SD-WAN Usage* pane.
2. Scroll left and right to view *Bandwidth*, *Volume* and *Sessions* charts for the *VIRTUAL-WAN-LINK* and *Underlay* interfaces in the *SD-WAN Zones* pane.

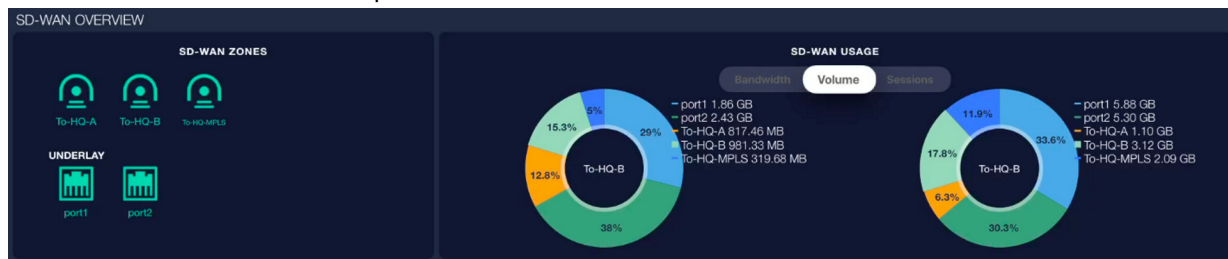


### To view SLA targets:

1. In the *SD-WAN Rules* area, use your remote to scroll the rules pane at the left-side of the monitor.
  - The *Destinations* pane displays the destination details.
  - The *Performance SLA* pane displays the SLA targets for the rule.
  - The *SD-WAN Active Interface* pane displays a checkmark next to the active interface.



2. Use your remote to navigate between the *Latency*, *Jitter*, and *Packet Loss* charts.

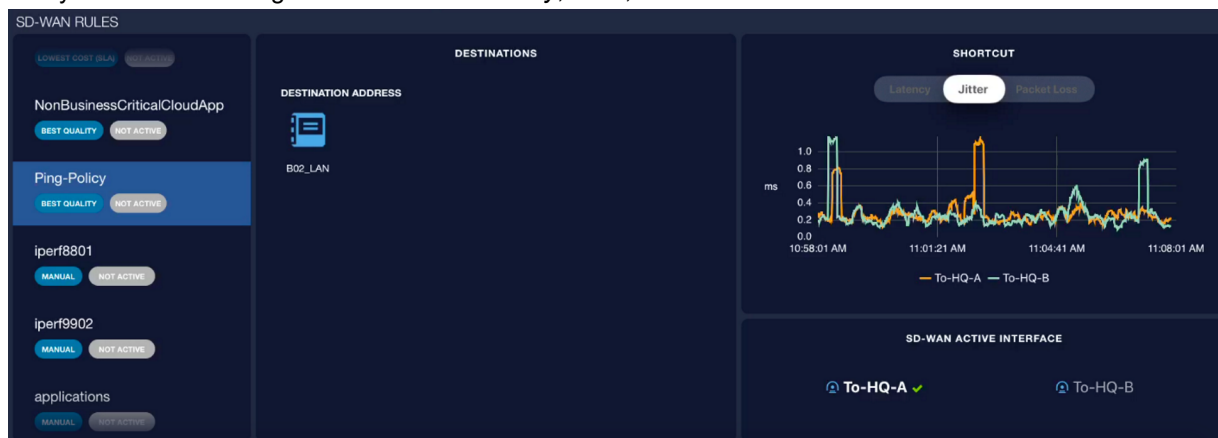


### To view a branch in the topology:

1. Use your remote to swipe to the top navigation in the monitor. Wait for the topology to load.
2. At the top-right of the monitor, select the current device.



3. Select the device you want to view.

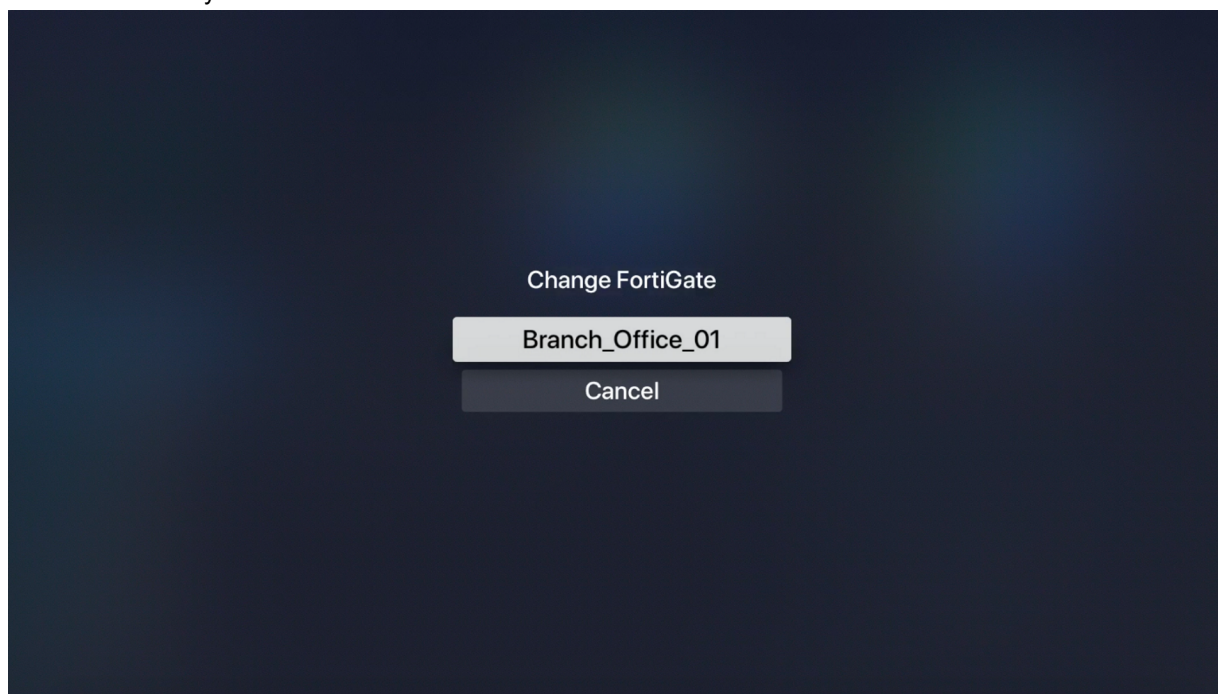

## Troubleshooting

The following topics provide troubleshooting information for the Fortinet Security Fabric:



- [Viewing a summary of all connected FortiGates in a Security Fabric on page 2963](#)
- [Diagnosing automation stitches on page 2965](#)

## Viewing a summary of all connected FortiGates in a Security Fabric

In downstream FortiGates, the `diagnose sys csf global` command shows a summary of all of the connected FortiGates in the Security Fabric.

**To view a Security Fabric summary on a downstream FortiGate:**

```
# diagnose sys csf global
Current vision:
[
  {
    "path":"FGVM01TM19000001",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10403,
    "sync_mode":1,
    "saml_role":"identity-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000001",
    "host_name":"admin-root",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "subtree_members":[
      {
        "serial":"FGVM01TM19000002"
      },
      {
        "serial":"FGVM01TM19000003"
      },
      {
        "serial":"FGVM01TM19000004"
      },
      {
        "serial":"FGVM01TM19000005"
      }
    ]
  },
  {
    "path":"FGVM01TM19000001:FGVM01TM19000002",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10423,
    "sync_mode":1,
    "saml_role":"service-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000002",
    "host_name":"Branch_Office_01",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
```

```

    "upstream_intf": "Branch-HQ-A",
    "upstream_serial": "FGVM01TM19000001",
    "parent_serial": "FGVM01TM19000001",
    "parent_hostname": "admin-root",
    "upstream_status": "Authorized",
    "upstream_ip": 22569994,
    "upstream_ip_str": "10.100.88.1",
    "subtree_members": [
    ],
    "is_discovered": true,
    "ip_str": "10.0.10.2",
    "downstream_intf": "To-HQ-A",
    "idx": 1
  },
  {
    "path": "FGVM01TM19000001:FGVM01TM19000003",
    "mgmt_ip_str": "104.196.102.183",
    "mgmt_port": 10407,
    "sync_mode": 1,
    "saml_role": "service-provider",
    "admin_port": 443,
    "serial": "FGVM01TM19000003",
    "host_name": "Enterprise_Second_Floor",
    "firmware_version_major": 6,
    "firmware_version_minor": 2,
    "firmware_version_patch": 0,
    "firmware_version_build": 1010,
    "upstream_intf": "port3",
    "upstream_serial": "FGVM01TM19000001",
    "parent_serial": "FGVM01TM19000001",
    "parent_hostname": "admin-root",
    "upstream_status": "Authorized",
    "upstream_ip": 22569994,
    "upstream_ip_str": "10.100.88.1",
    "subtree_members": [
    ],
    "is_discovered": true,
    "ip_str": "10.100.88.102",
    "downstream_intf": "port1",
    "idx": 2
  },
  {
    "path": "FGVM01TM19000001:FGVM01TM19000004",
    "mgmt_ip_str": "104.196.102.183",
    "mgmt_port": 10424,
    "sync_mode": 1,
    "saml_role": "service-provider",
    "admin_port": 443,
    "serial": "FGVM01TM19000004",
    "host_name": "Branch_Office_02",
    "firmware_version_major": 6,
    "firmware_version_minor": 2,
    "firmware_version_patch": 0,
    "firmware_version_build": 1010,
    "upstream_intf": "HQ-MPLS",
    "upstream_serial": "FGVM01TM19000001",

```

```

    "parent_serial": "FGVM01TM19000001",
    "parent_hostname": "admin-root",
    "upstream_status": "Authorized",
    "upstream_ip": 22569994,
    "upstream_ip_str": "10.100.88.1",
    "subtree_members": [
    ],
    "is_discovered": true,
    "ip_str": "10.0.12.3",
    "downstream_intf": "To-HQ-MPLS",
    "idx": 3
  },
  {
    "path": "FGVM01TM19000001:FGVM01TM19000005",
    "mgmt_ip_str": "104.196.102.183",
    "mgmt_port": 10404,
    "sync_mode": 1,
    "saml_role": "service-provider",
    "admin_port": 443,
    "serial": "FGVM01TM19000005",
    "host_name": "Enterprise_First_Floor",
    "firmware_version_major": 6,
    "firmware_version_minor": 2,
    "firmware_version_patch": 0,
    "firmware_version_build": 1010,
    "upstream_intf": "port3",
    "upstream_serial": "FGVM01TM19000001",
    "parent_serial": "FGVM01TM19000001",
    "parent_hostname": "admin-root",
    "upstream_status": "Authorized",
    "upstream_ip": 22569994,
    "upstream_ip_str": "10.100.88.1",
    "subtree_members": [
    ],
    "is_discovered": true,
    "ip_str": "10.100.88.101",
    "downstream_intf": "port1",
    "idx": 4
  }
]

```

## Diagnosing automation stitches

Diagnose commands are available to:

- Test an automation stitch
- Enable or disable log dumping for automation stitches
- Display the settings of every automation stitch
- Display statistics on every automation stitch

### To test an automation stitch:

```
diagnose automation test <automation-stitch-name>
```

Example:

```
# diagnose automation test HA-failover
automation test is done. stitch:HA-failover
```

**To toggle log dumping:**

```
diagnose test application autod 1
```

**Examples:**

```
# diagnose test application autod 1
autod log dumping is enabled

# diagnose test application autod 1
autod log dumping is disabled

autod logs dumping summary:
autod dumped total:7 logs, num of logids:4
```

**To display the settings for all of the automation stitches:**

```
diagnose test application autod 2
```

**Example:**

```
# diagnose test application autod 2
csf: enabled root:yes
total stitches activated: 3

stitch: Compromised-IP-Banned
  destinations: all
  trigger: Compromised-IP-Banned

  local hit: 0 relayed to: 0 relayed from: 0
  actions:
    Compromised-IP-Banned_ban-ip type:ban-ip interval:0

stitch: HA-failover
  destinations: HA-failover_ha-cluster_25;
  trigger: HA-failover

  local hit: 0 relayed to: 0 relayed from: 0
  actions:
    HA-failover_email type:email interval:0
    subject: HA Failover
    mailto:admin@example.com;

stitch: reboot
  destinations: all
  trigger: reboot

  local hit: 0 relayed to: 0 relayed from: 0
  actions:
    action1 type:alicloud-function interval:0
      delay:1 required:yes
      Account ID: id
      Region: region
      Function domain: fc.aliyuncs.com
      Version: versoin
```

```

Service name: serv
Function name: funky
headers:

```

### To display statistic on all of the automation stitches:

```
diagnose test application autod 3
```

#### Example:

```

stitch: Compromised-IP-Banned
  local hit: 0 relayed to: 0 relayed from: 0
  last trigger:Wed Dec 31 20:00:00 1969
  last relay:Wed Dec 31 20:00:00 1969
  actions:
    Compromised-IP-Banned_ban-ip:
      done: 1 relayed to: 0 relayed from: 0
      last trigger:Wed Dec 31 20:00:00 1969
      last relay:

stitch: HA-failover
  local hit: 0 relayed to: 0 relayed from: 0
  last trigger:Thu May 24 11:35:22 2018
  last relay:Thu May 24 11:35:22 2018
  actions:
    HA-failover_email:
      done: 1 relayed to: 1 relayed from: 1
      last trigger:Thu May 24 11:35:22 2018
      last relay:Thu May 24 11:35:22 2018

stitch: reboot
  local hit: 2 relayed to: 1 relayed from: 1
  last trigger:Fri May 3 13:30:56 2019
  last relay:Fri May 3 13:30:23 2019
  actions:
    action1
      done: 1 relayed to: 0 relayed from: 0
      last trigger:Fri May 3 13:30:56 2019
      last relay:

logid2stitch mapping:
id:20103 local hit: 0 relayed to: 0 relayed from: 0
  License Expiry
  lambada

id:32138 local hit: 2 relayed to: 1 relayed from: 1
  Compromised-IP-Banned
  HA-failover
  reboot

action run cfg&stats:
total:2 cur:0 done:1 drop:1
email:
  flags:10
  stats: total:1 cur:0 done:1 drop:0
fortiexplorer-notification:
  flags:1

```

```
stats: total:0 cur:0 done:0 drop:0
alert:
  flags:0
  stats: total:0 cur:0 done:0 drop:0
disable-ssid:
  flags:7
  stats: total:0 cur:0 done:0 drop:0
quarantine:
  flags:7
  stats: total:0 cur:0 done:0 drop:0
quarantine-forticlient:
  flags:4
  stats: total:0 cur:0 done:0 drop:0
quarantine-nsx:
  flags:4
  stats: total:0 cur:0 done:0 drop:0
ban-ip:
  flags:7
  stats: total:0 cur:0 done:0 drop:0
aws-lambda:
  flags:11
  stats: total:0 cur:0 done:0 drop:0
webhook:
  flags:11
  stats: total:0 cur:0 done:0 drop:0
cli-script:
  flags:10
  stats: total:0 cur:0 done:0 drop:0
azure-function:
  flags:11
  stats: total:1 cur:0 done:0 drop:1
google-cloud-function:
  flags:11
  stats: total:0 cur:0 done:0 drop:0
alicloud-function:
  flags:11
  stats: total:0 cur:0 done:0 drop:0
```

# Log and Report

Logging and reporting are useful components to help you understand what is happening on your network, and to inform you about certain network activities, such as the detection of a virus, a visit to an invalid website, an intrusion, a failed log in attempt, and myriad others.

Logging records the traffic that passes through, starts from, or ends on the FortiGate, and records the actions the FortiGate took during the traffic scanning process. After this information is recorded in a log message, it is stored in a log file that is stored on a log device (a central storage location for log messages). FortiGate supports sending all log types to several log devices, including FortiAnalyzer, FortiAnalyzer Cloud, FortiGate Cloud, and syslog servers. Approximately 5% of memory is used for buffering logs sent to FortiAnalyzer. The FortiGate system memory and local disk can also be configured to store logs, so it is also considered a log device. See [Log settings and targets on page 2984](#) for more information.

Reports show the recorded activity in a more readable format. A report gathers all the log information that it needs, then presents it in a graphical format with a customizable design and automatically generated charts showing what is happening on the network. Reports can be generated on FortiGate devices with disk logging and on FortiAnalyzer devices.

FortiView is a more comprehensive network reporting and monitoring tool. It integrates real-time and historical data into a single view in FortiOS. For more information, see [FortiView monitors and widgets on page 119](#).



Performance statistics are not logged to disk. Performance statistics can be received by a syslog server or by FortiAnalyzer.


---

The following topics provide information about logging and reporting:

- [Viewing event logs on page 2969](#)
- [System Events log page on page 2972](#)
- [Security Events log page on page 2977](#)
- [Reports page on page 2980](#)
- [Log settings and targets on page 2984](#)
- [Logging to FortiAnalyzer on page 2989](#)
- [Advanced and specialized logging on page 2996](#)
- [Sample logs by log type on page 3012](#)
- [Troubleshooting on page 3033](#)

## Viewing event logs

Event log subtypes are available on the *Log & Report > System Events* page. Not all of the event log subtypes are available by default. See [System Events log page on page 2972](#) for more information.

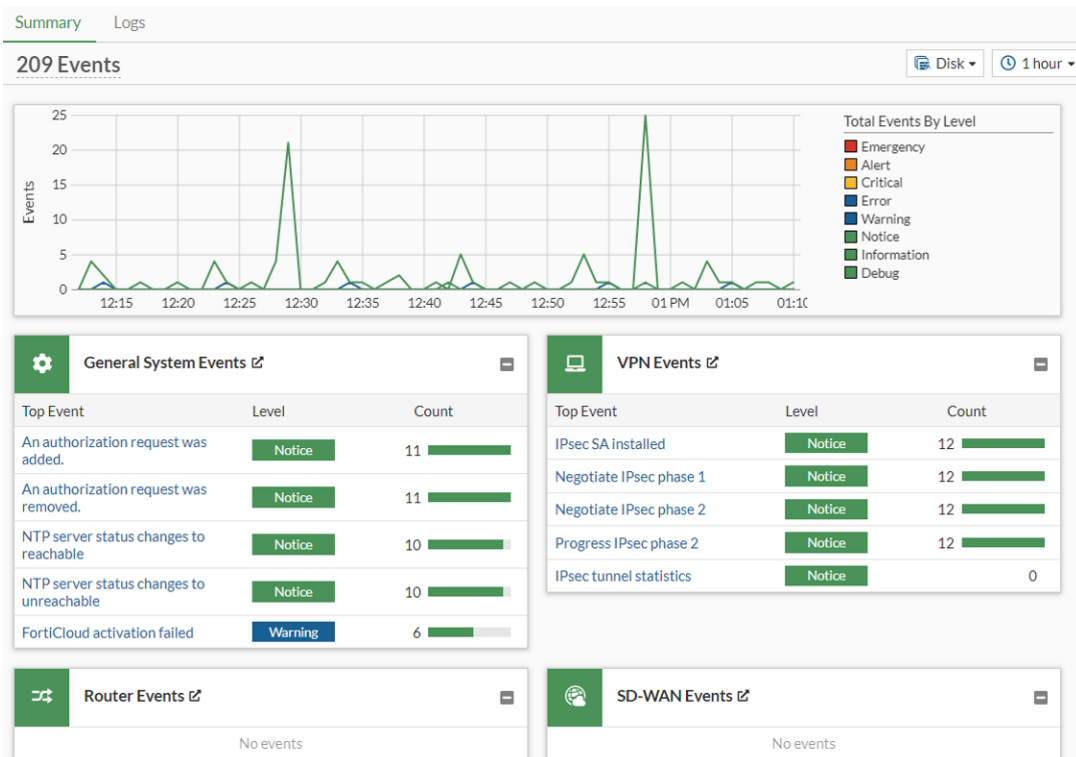

When viewing event logs in the *Logs* tab, use the event log subtype dropdown list on the to navigate between event log types.

Summary Logs

Download

Date/Time 2022-08-02 09:54:30 -> 2022-08-02 09:59:00 Log Description == Synchroni

General System Events

VPN Events

User Events

Endpoint Events

WiFi Events

SDN Connector Events

Router Events

SD-WAN Events

HA Events

Security Rating Events

FortiSwitch Events

CIFS Events

Date/Time	Level	User	Message
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for down
2022/08/02 09:58:43	Notice		Global sync report for downstream. CMDB table=fire...
2022/08/02 09:58:43	Notice		Global sync report for downstream. CMDB table=fire...
2022/08/02 09:58:43	Notice		Global sync report for downstream. CMDB table=fire...

<b>System Events</b>	Always available.
<b>Router Events</b>	Always available.
<b>VPN Events</b>	Available when <i>VPN</i> is enabled in <i>System &gt; Feature Visibility</i> .
<b>SD-WAN Events</b>	Always available.
<b>User Events</b>	Always available.



<b>Endpoint Events</b>	Available when <i>Endpoint Control</i> is enabled in <i>System &gt; Feature Visibility</i> .
<b>HA Events</b>	Always available.
<b>Security Rating Events</b>	Always available, but logs are only generated when a Security Rating License is registered.
<b>WAN Opt. &amp; Cache Events</b>	Available on devices with two hard disks by default. On devices with one hard disk, the disk usage must be set to <code>wanopt</code> and then <i>WAN Opt. &amp; Cache</i> must be enabled in <i>System &gt; Feature Visibility</i> .
<b>WiFi Events</b>	Available on hardware devices when <i>WiFi Controller</i> is enabled in <i>System &gt; Feature Visibility</i> .
<b>FortiExtender Events</b>	Available when <i>FortiExtender</i> is enabled in <i>System &gt; Feature Visibility</i> .
<b>SDN Connector Events</b>	Always available.
<b>FortiSwitch Events</b>	Available when <i>Switch Controller</i> is enabled in <i>System &gt; Feature Visibility</i> .
<b>CIFS Events</b>	Always available.
<b>REST API Events</b>	Always available.


Logs can be filtered by date and time in the *Log & Report > System Events* page. The log viewer can be filtered with a custom range or with specific time frames.




UTM logs can also be filtered by date and time in *Log & Report > Security Events*. See [Security Events log page on page 2977](#).

The time frame available is dependent on the source:

- Logs sourced from FortiAnalyzer, FortiGate Cloud, and FortiAnalyzer Cloud have the same time frame options as FortiView (5 minutes, 1 hour, 24 hours, or 7 days).

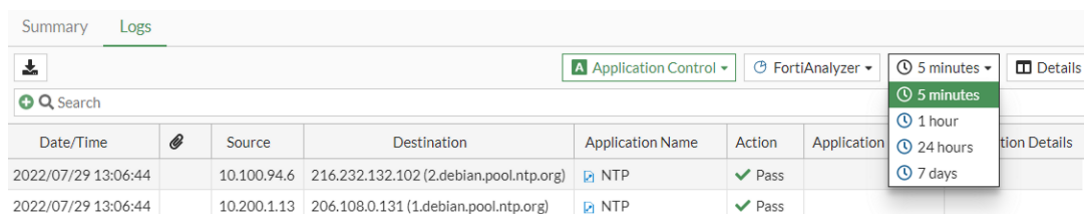

- Logs sourced from the Disk have the time frame options of 5 minutes, 1 hour, 24 hours, 7 days, or None.

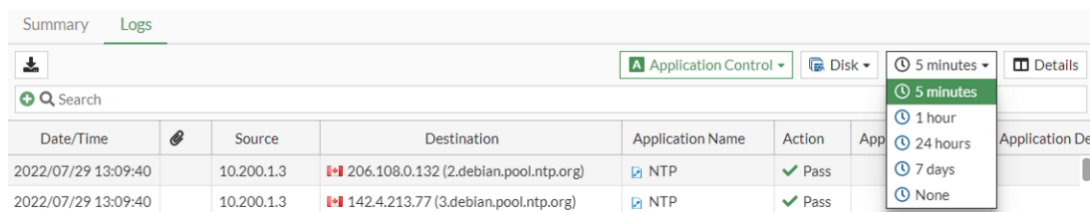

- Logs source from Memory do not have time frame filters.

A custom time frame can be applied using the *Date/Time* filter. If the *Date/Time* filter is applied, the time frame will be disabled and set to *custom*.

Summary		Logs				
		<div> <div>Application Control</div> <div>Disk</div> <div>custom</div> <div>Details</div> </div>				
		<div> <div>Date/Time 2022-07-22 13:11:00 -&gt; 2022-07-29 13:11:00</div> <div>Search</div> </div>				
Date/Time	Source	Destination	Application Name	Action	Application User	Application De
2022/07/29 13:11:00	10.100.93.2	172.217.13.142 (youtube.com)	YouTube	Pass		
2022/07/29 13:11:00	10.200.1.7	204.2.134.163 (0.debian.pool.ntp.org)	NTP	Pass		



Time frame settings for each *Log & Report* page are independent of each other. For example, if you change the time frame on the *System Events* page, the time frame will be different than that of the *Security Events* page unless it is also changed to match.

## System Events log page

The *Log & Report > System Events* page includes:


- A *Summary* tab that displays the top five most frequent events in each type of event log and a line chart to show aggregated events by each severity level. Clicking on a peak in the line chart will display the specific event count for the selected severity level.
- A *Logs* tab that displays individual, detailed log views for event type.

The *Summary* tab includes the following:

- Event list footers show a count of the events that relate to the type.

General System Events		
Top Event	Level	Count
Test	Warning	11
Admin login successful	Information	7
Admin logout successful	Information	6
Super admin entered VDOM	Information	6
Admin login failed	Alert	1
34 events		

- A count of the total events is shown at the top of the *Summary*. Hovering over the count shows the number of events with a time stamp.

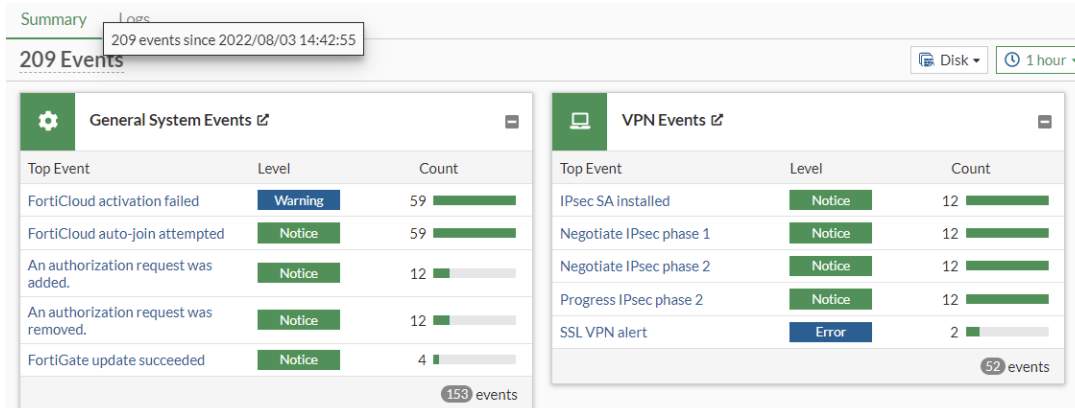

- Hovering over the *Total Events By Level* shows the number of events with a time stamp.



- Clicking on any event type title opens the *Logs* page for that event type filtered by the selected time span. For example, clicking *VPN Events* opens the following page:

The screenshot displays the 'Logs' tab of the FortiGate log interface. It shows a table of VPN Events filtered by the selected time span. The table has columns: Date/Time, Level, Action, Status, Message, and VPN Tunnel.

Date/Time	Level	Action	Status	Message	VPN Tunnel
2022/08/03 15:39:17	Warning	ssl-alert		SSL alerts	
2022/08/03 15:39:17	Warning	ssl-alert		SSL alerts	
2022/08/03 15:39:17	Critical	ssl-login-fail		SSL user failed to logged in	
2022/08/03 15:39:11	Notice	ssl-new-con		SSL new connection	
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	HQ-MPLS_1
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	Branch-HQ-B_1
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	Branch-HQ-B_0
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	Branch-HQ-A_1
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	Branch-HQ-A_0
2022/08/03 15:38:38	Notice	tunnel-stats		IPsec tunnel statistics	HQ-MPLS_0
2022/08/03 15:28:41	Notice	negotiate	success	progress IPsec phase 2	Branch-HQ-A
2022/08/03 15:28:41	Notice	install_sa		install IPsec SA	Branch-HQ-A

- Clicking on any event entry opens the *Logs* page for that event type filtered by the selected time span and log description.


For example, in the *General System Events* box, clicking *Admin logout successful* opens the following page:

Summary Logs						
Date/Time 2022-07-26 10:24:25 -> 2022-07-26 11:24:25 Log Description == Admin logout successful X Search						
Date/Time	Level	User	Message	Log Description	Absolute Date/Time	
2022/07/26 11:21:42	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:21:42	
2022/07/26 11:21:31	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:21:31	
2022/07/26 11:21:01	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:21:01	
2022/07/26 11:20:49	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:20:49	
2022/07/26 11:17:23	Information	admin	Administrator admin logged out from https://10.6.30.254	Admin logout successful	2022-07-26 11:17:23	
2022/07/26 11:17:17	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:17:17	
2022/07/26 11:13:37	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:13:37	
2022/07/26 11:13:04	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:13:04	
2022/07/26 11:13:04	Information	admin	Administrator admin logged out from https://10.6.30.254	Admin logout successful	2022-07-26 11:13:04	
2022/07/26 11:12:49	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:12:49	
2022/07/26 11:12:26	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:12:26	
2022/07/26 11:11:51	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:11:51	
2022/07/26 11:10:42	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 11:10:42	
2022/07/26 10:40:16	Information	admin	Administrator admin logged out from https://10.6.30.254	Admin logout successful	2022-07-26 10:40:16	
2022/07/26 10:39:22	Information	admin	Administrator admin logged out from https://10.6.30.254	Admin logout successful	2022-07-26 10:39:22	
2022/07/26 10:39:17	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 10:39:17	
2022/07/26 10:37:59	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 10:37:59	
2022/07/26 10:37:16	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 10:37:16	
2022/07/26 10:36:40	Information	admin	Administrator admin logged out from jscnsole	Admin logout successful	2022-07-26 10:36:40	



Disk logging and historical FortiView must be enabled for the **Summary** tab to display valid data. See [Log settings and targets on page 2984](#) for more information.

A time frame can be selected from the dropdown.

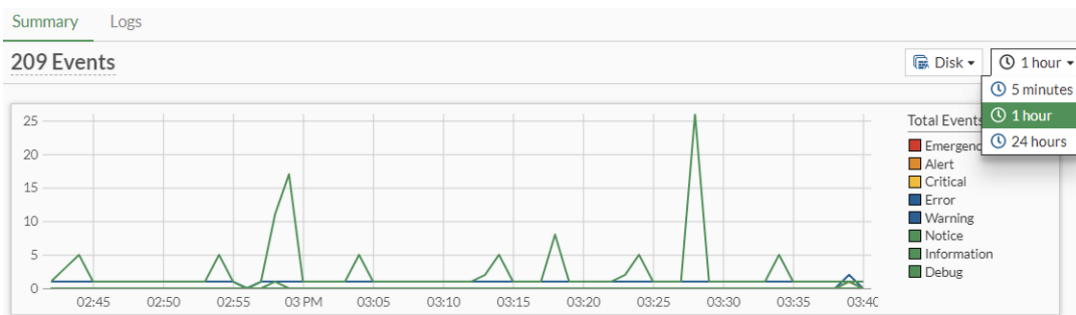

The line chart will display all of the system events, and the non-empty event cards will list up to five *Top Event* entries within the time frame set.



Data is retrieved from FortiView with the *5 minutes* range updated first. When selecting either the *1 hour* or *24 hours* time range, there may be a delay to update *Top Event* entries.

Up to 100 *Top Event* entries can be listed in the CLI using the `diagnose fortiview result event-log` command.

### To view filtered log information:

1. Go to **Log & Report > System Events**.
2. Select the **Logs** tab.
3. Hover over the leftmost column and click the gear icon. A list of column you can filter is displayed.

Best Fit Columns  
Reset Table

Select Columns

- ☒ Date/Time
- ☒ Level
- ☒ User
- ☒ Message
- ☒ Log Description
- ☐ #
- ☐ Absolute Date/Time
- ☐ Action
- ☐ Alternate User
- ☐ Destination
- ☐ Destination Interface
- ☐ Device ID
- ☐ DHCP Message
- ☐ From
- ☐ Group
- ☐ Hostname
- ☐ Log ID
- ☐ Method
- ☐ Name
- ☐ Path
- ☐ Pool Name
- ☐ Previous serial number
- ☐ Probe Protocol
- ☐ Profile

Apply Cancel

General System Events | Disk | 5 minutes | Details

User	Message	Log Description
ntp_daemon	The IPv4 ntp server, ntp2.fortiguard.com(208.91.11...	NTP server status changes to unreachable
auto-join	FortiCloud service activation failed	FortiCloud activation failed
auto-join	Attempted to join FortiCloud	FortiCloud auto-join attempted
auto-join	FortiCloud service activation failed	FortiCloud activation failed
auto-join	Attempted to join FortiCloud	FortiCloud auto-join attempted
auto-join	FortiCloud service activation failed	FortiCloud activation failed
auto-join	Attempted to join FortiCloud	FortiCloud auto-join attempted
ntp_daemon	The IPv4 ntp server, ntp1.fortiguard.com(208.91.11...	NTP server status changes to reachable
auto-join	FortiCloud service activation failed	FortiCloud activation failed
auto-join	Attempted to join FortiCloud	FortiCloud auto-join attempted
auto-join	FortiCloud service activation failed	FortiCloud activation failed
auto-join	Attempted to join FortiCloud	FortiCloud auto-join attempted
	An authorization request was added.	An authorization request was added.
	An authorization request was added.	An authorization request was added.
	An authorization request was removed.	An authorization request was removed.
	An authorization request was removed.	An authorization request was removed.

16 | Updated: 14:54:04

4. Select the columns you want displayed.
5. Click *Apply*. The selected columns are displayed.
6. Click the filter icon for the column you want to filter. The filter dialog is displayed and the number of logs for each filter type is listed.

Summary Logs

Search

General System Events | Disk | 5 minutes | Details

Date/Time	Level	User	Message	Log Description
2022/07/29 14:53:50			server, ntp2.fortiguard.com(208.91.11...	NTP server status changes to unreachable
2022/07/29 14:53:25			service activation failed	FortiCloud activation failed
2022/07/29 14:53:24			join FortiCloud	FortiCloud auto-join attempted
2022/07/29 14:52:25			service activation failed	FortiCloud activation failed
2022/07/29 14:52:24			join FortiCloud	FortiCloud auto-join attempted
2022/07/29 14:51:24			service activation failed	FortiCloud activation failed
2022/07/29 14:51:24			join FortiCloud	FortiCloud auto-join attempted
2022/07/29 14:51:03			server, ntp1.fortiguard.com(208.91.11...	NTP server status changes to reachable
2022/07/29 14:50:24			service activation failed	FortiCloud activation failed
2022/07/29 14:50:23			join FortiCloud	FortiCloud auto-join attempted
2022/07/29 14:49:23			service activation failed	FortiCloud activation failed
2022/07/29 14:49:23			join FortiCloud	FortiCloud auto-join attempted

Filter

Contains Exact Match NOT

value1, value2, etc.

Notice

Warning

Emergency

Alert Notification

Critical

Error

Information

Debug

Apply

7. Select the filters you want and click *Apply*. The logs that match the set filters are displayed and the filter is listed in the search bar.
8. Select the log you want to see more information on.
9. Click *Details*. The *Log Details* pane is displayed.

Summary

Logs

Level = notice X Search

General System Events

Disk

5 minutes

Details

Date/Time	Level	User	Message	Log Details
2022/07/29 14:59:06			An authorization request...	An autho
2022/07/29 14:58:27		auto-join	Attempted to join FortiC...	FortiClo
2022/07/29 14:57:27		auto-join	Attempted to join FortiC...	FortiClo
2022/07/29 14:56:58		ntp_daemon	The IPv4 ntp server, ntp2...	NTP serv
2022/07/29 14:56:26		auto-join	Attempted to join FortiC...	FortiClo
2022/07/29 14:55:26		auto-join	Attempted to join FortiC...	FortiClo
2022/07/29 14:54:33			scanunit=manager pid=2...	Scanunit
2022/07/29 14:54:25		auto-join	Attempted to join FortiC...	FortiClo
2022/07/29 14:54:13			Fortigate scheduled upd...	FortiGat

General

Absolute Date/Time

2022-07-29 14:56:58

Last Access Time

14:56:58

VDOM

root

Log Description

NTP server status changes to reachable

Source

User

ntp\_daemon

Security

Level

Notice

Event

User Interface

NONE

Message

The IPv4 ntp server, ntp2.fortiguard.com(208.91.112.62), is determined reachable at Fri Jul 29 14:56:58 2022

Other

### To list system events in the CLI:

```
# diagnose fortiview result event-log
```

```
data(1646760000-1646846401):
0). subtype-ha | eventname-HA device interface failed | level-warning | count-1 |
1). subtype-system | eventname-DHCP statistics | level-information | count-40 |
2). subtype-system | eventname-Super admin left VDOM | level-information | count-13 |
3). subtype-system | eventname-Admin performed an action from GUI | level-warning |
count-5 |
4). subtype-system | eventname-Super admin entered VDOM | level-information | count-4 |
5). subtype-system | eventname-Global setting changed | level-notice | count-3 |
6). subtype-system | eventname-Attribute configured | level-information | count-2 |
7). subtype-system | eventname-Clear active sessions | level-warning | count-2 |
8). subtype-system | eventname-Disk log rolled | level-notice | count-2 |
9). subtype-system | eventname-Log rotation requested by FortiCron | level-notice |
count-1 |
10). subtype-system | eventname-Report generated successfully | level-notice | count-1 |
11). subtype-system | eventname-Test | level-warning | count-1 |
12). subtype-system | eventname-VDOM added | level-notice | count-1 |
13). subtype-user | eventname-Authentication failed | level-notice | count-1 |
14). subtype-user | eventname-Authentication lockout | level-warning | count-1 |
15). subtype-user | eventname-FortiGuard override failed | level-warning | count-1 |
```

The data is collected from FortiView for the last 24 hours by default. To specify a specific time range, customize the time filter using the `diagnose fortiview time` command.

### To filter the time range of system events in the CLI:

```
# diagnose fortiview time <arg1> <arg2>
```

Where `<arg1>` is the start time in YYYY-MM-DD HH:MM:SS and `<arg2>` is the end time in YYYY-MM-DD HH:MM:SS.

## Security Events log page

The *Log & Report > Security Events* log page includes:

- A *Summary* tab that displays the five most frequent events for all of the enabled UTM security events.
- A *Logs* tab that displays individual, detailed logs for each UTM type.

The *Summary* tab includes the following:

- Event list footers show a count of the events that relate to the type.

Application Control <a href="#">↗</a>		
Top Category	Action	Count
Network.Service	Pass	11 <div></div>
Storage.Backup	Pass	9 <div></div>
Video/Audio	Pass	3 <div></div>
im	Pass	1 <div></div>
P2P	Pass	1 <div></div>
25 events		

- A count of the total events is shown at the top of the *Summary*. Hovering over the count shows the number of events with a time stamp.

Application Control <a href="#">↗</a>		
Top Category	Action	Count
Storage.Backup	Pass	18 <div></div>
Network.Service	Pass	10 <div></div>
Video/Audio	Pass	6 <div></div>
im	Pass	2 <div></div>
P2P	Pass	2 <div></div>
63 events		

AntiVirus <a href="#">↗</a>		
Top Virus/Botnet	Action	Count
virus_test3	Passthrough	2 <div></div>
filename	Passthrough	2 <div></div>
EXCAR_TEST_FILE	Blocked	1 <div></div>
3 events		

- Clicking on any event type title opens the *Logs* page for that event type filtered by the selected time span. For example, clicking *Application Control* opens the following page:

Summary <u>Logs</u>							
<div> Date/Time 2022-08-03 10:42:28 -&gt; 2022-08-03 10:47:28 </div>				<div> Application Control Disk custom Details </div>			
Date/Time	Source	Destination	Application Name	Action	Application User	Application Details	
2022/08/03 10:47:28	10.100.94.21	67.215.197.149 (3.debian.pool.ntp.org)	NTP	✓ Pass			
2022/08/03 10:47:28	10.100.92.11	158.69.20.38 (pool.ntp.org)	NTP	✓ Pass			
2022/08/03 10:47:28	10.200.1.15	208.91.114.109 (fortiguard.com)	HTTPS.BROWSER	✓ Pass			
2022/08/03 10:47:28	10.200.1.15	208.91.114.109 (fortiguard.com)	SSL	✓ Pass			
2022/08/03 10:47:28	10.100.94.21	209.115.181.108 (pool.ntp.org)	NTP	✓ Pass			
2022/08/03 10:47:27	10.200.1.15	208.91.114.109 (fortiguard.com)	HTTP.BROWSER	✓ Pass			

The security event type can be changed in the top-right dropdown list.

Summary **Logs**

Date/Time 2022-08-02 09:57:17 -> 2022-08-02 10:02:17

Search

Date/Time	Source	Destination	App	Action	Application User	Application Detail
2022/08/02 10:02:17	10.200.1.15	216.232.132.102 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:16	10.200.1.15	185.119.117.217 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:16	10.200.1.15	51.38.162.10 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:16	10.100.92.17	149.56.37.32 (2.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:16	10.100.92.17	54.39.23.64 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	209.58.185.100 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	138.236.128.36 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	74.6.168.73 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.200.1.15	38.229.57.9 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	208.81.1.244 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	85.199.214.102 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:15	10.100.94.9	199.182.221.110 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:14	10.200.1.15	151.80.211.8 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:14	10.200.1.15	178.63.52.31 (0.debian.pool.ntp.org)	NTP	Pass		
2022/08/02 10:02:14	10.200.1.15	213.81.129.98 (0.debian.pool.ntp.org)	NTP	Pass		

- Clicking on any event entry opens the *Logs* page for that event type filtered by the selected time span and log description.

For example, in the *Application Control* box, clicking *Network.Service* opens the following page:

Summary **Logs**

Date/Time 2022-08-03 10:42:28 -> 2022-08-03 10:47:28

Category == Network.Service

Search

Date/Time	Source	Destination	Application Name	Action	Application User	Application Detail
2022/08/03 10:47:28	10.100.94.21	67.215.197.149 (3.debian.pool.ntp.org)	NTP	Pass		
2022/08/03 10:47:28	10.100.92.11	158.69.20.38 (pool.ntp.org)	NTP	Pass		
2022/08/03 10:47:28	10.200.1.15	208.91.114.109 (fortiguard.com)	SSL	Pass		
2022/08/03 10:47:28	10.100.94.21	209.115.181.108 (pool.ntp.org)	NTP	Pass		
2022/08/03 10:47:27	10.200.1.15	104.86.39.172 (cbc.ca)	SSL	Pass		
2022/08/03 10:47:27	10.100.92.11	188.165.18.162 (1.debian.pool.ntp.org)	NTP	Pass		



Disk logging and historical FortiView must be enabled for the *Summary* tab to display valid data. See [Log settings and targets on page 2984](#) for more information.

A time frame can be selected from the dropdown.

Summary **Logs**

1,861 Events

Disk

5 minutes

5 minutes

1 hour

24 hours

Top Category	Action	Count
Network.Service	Pass	807
Web.Client	Pass	715
Social.Media	Pass	166
General.Interest	Pass	83
Video/Audio	Pass	83

1,860 events

Top Attack	Action	Count
BlackMoon	Dropped	1

1 events



The non-empty security event cards will list up to five top entries within the time range set.



Data is retrieved from FortiView with the *5 minutes* range updated first. When selecting either the *1 hour* or *24 hours* time range, there may be a delay to update top security event entries. Logs sourced from the Disk have different time frames available for filtering. See [Viewing event logs on page 2969](#).

Up to 100 top security event entries can be listed in the CLI using the `diagnose fortiview result security-log` command.

### To list security events in the CLI:

```
# diagnose fortiview result security-log [<filters>]
```

### To list security events in the CLI with no filters applied:

```
# diagnose fortiview result security-log

data(1646862300-1646948701):
0). logcat-2 | logcatname-virus | logid-0211008192 | eventname-EICAR_TEST_FILE |
eventname_field-virus | action-blocked | count-1 |
1). logcat-2 | logcatname-virus | logid-0211008192 | eventname-virus_test3 | eventname_
field-virus | action-passthrough | count-1 |
2). logcat-2 | logcatname-virus | logid-0212008448 | eventname-filename | eventname_
field-virus | action-passthrough | count-1 |
3). logcat-3 | logcatname-webfilter | logid-0318012800 | eventname- | eventname_field-
catdesc | action-blocked | count-2 |
4). logcat-3 | logcatname-webfilter | logid-0316013056 | eventname-Information
Technology | eventname_field-catdesc | action-blocked | count-1 |
5). logcat-3 | logcatname-webfilter | logid-0316013056 | eventname-Malicious Websites |
eventname_field-catdesc | action-blocked | count-1 |
6). logcat-4 | logcatname-ips | logid-0419016384 | eventname-Eicar.Virus.Test.File |
eventname_field-attack | action-dropped | count-3 |
7). logcat-4 | logcatname-ips | logid-0422016400 | eventname-test_botnet | eventname_
field-attack | action-detected | count-1 |
8). logcat-7 | logcatname-anomaly | logid-0720018432 | eventname-tcp_syn_flood |
eventname_field-attack | action-clear_session | count-1 |
9). logcat-10 | logcatname-app-ctrl | logid-1059028704 | eventname-Storage.Backup |
eventname_field-appcat | action-pass | count-9 |
10). logcat-10 | logcatname-app-ctrl | logid-1059028704 | eventname-Video/Audio |
eventname_field-appcat | action-pass | count-3 |
11). logcat-10 | logcatname-app-ctrl | logid-1059028672 | eventname-im | eventname_
field-appcat | action-pass | count-1 |
12). logcat-10 | logcatname-app-ctrl | logid-1059028704 | eventname-P2P | eventname_
field-appcat | action-pass | count-1 |
13). logcat-15 | logcatname-dns | logid-1501054400 | eventname-Domain blocked because it
is in the domain-filter list | eventname_field-logid | action-block | count-1 |
14). logcat-17 | logcatname-ssl | logid-1700062300 | eventname-SSL connection is blocked
due to the server certificate is blocklisted | eventname_field-logid | action-blocked |
count-1 |
15). logcat-16 | logcatname-ssh | logid-1600061002 | eventname-SSH shell command is
detected | eventname_field-logid | action-passthrough | count-1 |
16). logcat-16 | logcatname-ssh | logid-1601061010 | eventname-SSH channel is blocked |
eventname_field-logid | action-blocked | count-1 |
```

```

17). logcat-12 | logcatname-waf | logid-1200030248 | eventname-Web application firewall
blocked application by signature | eventname_field-logid | action-blocked | count-1 |
18). logcat-8 | logcatname-voip | logid-0814044032 | eventname-Logid_44032 | eventname_
field-logid | action-permit | count-1 |
19). logcat-5 | logcatname-emailfilter | logid-0513020480 | eventname-SPAM notification
| eventname_field-logid | action-blocked | count-1 |

```

### To list blocked security events in the CLI:

```
# diagnose fortiview result security-log action=blocked
```

```

data(1646862600-1646949001):
0). logcat-2 | logcatname-virus | logid-0211008192 | eventname-EICAR_TEST_FILE |
eventname_field-virus | action-blocked | count-1 |
1). logcat-3 | logcatname-webfilter | logid-0318012800 | eventname- | eventname_field-
catdesc | action-blocked | count-2 |
2). logcat-3 | logcatname-webfilter | logid-0316013056 | eventname-Information
Technology | eventname_field-catdesc | action-blocked | count-1 |
3). logcat-3 | logcatname-webfilter | logid-0316013056 | eventname-Malicious Websites |
eventname_field-catdesc | action-blocked | count-1 |
4). logcat-17 | logcatname-ssl | logid-1700062300 | eventname-SSL connection is blocked
due to the server certificate is blocklisted | eventname_field-logid | action-blocked |
count-1 |
5). logcat-16 | logcatname-ssh | logid-1601061010 | eventname-SSH channel is blocked |
eventname_field-logid | action-blocked | count-1 |
6). logcat-12 | logcatname-waf | logid-1200030248 | eventname-Web application firewall
blocked application by signature | eventname_field-logid | action-blocked | count-1 |
7). logcat-5 | logcatname-emailfilter | logid-0513020480 | eventname-SPAM notification |
eventname_field-logid | action-blocked | count-1 |

```

## Reports page

The *Log & Report > Reports* page consolidates FortiAnalyzer, FortiGate Cloud, and Local log reports. Administrators can generate, delete, and edit report schedules, and view and download generated reports. The *Reports* page is organized into dedicated tabs:

- [FortiAnalyzer on page 2980](#)
- [FortiGate Cloud on page 2982](#)
- [Local on page 2983](#)

## FortiAnalyzer

FortiAnalyzer reports can be viewed in the *FortiAnalyzer* tab.



FortiAnalyzer must be configured in FortiOS. If the FortiGate is unauthorized on FortiAnalyzer, or the connection to FortiAnalyzer is down, the *FortiAnalyzer* tab loads with *No results*.

When the Security Fabric is enabled, only the root FortiGate can run, edit, and delete FortiAnalyzer reports. Downstream FortiGates can only view the generated reports.

### To edit a report schedule:

1. Go to **Log & Report > Reports** and select the **FortiAnalyzer** tab.
2. Select **Scheduled**.

FortiAnalyzer FortiGate Cloud Local				
Run Report Edit Schedule Search		Generated Scheduled		
Report Title	Description	Schedule	Schedule Status	Time Period
Application				
Application Risk and Control	Application risk, categories, bandwidth by app,...	Every 1 week(s)	Disabled	Last 7 D
Bandwidth and Applications Report	Traffic, Bandwidth, Sessions, Destinations summ...			
Cyber-Bullying Indicators Report	Cyber-Bullying Indicators Report.			
High Bandwidth Application Usage Report	High Bandwidth Application Usage Report.			
Security				
Cyber Threat Assessment	Cyber Threat review of Application Visibility an...	Every 1 week(s) from 2012/10/01 03:00	Enabled	Last 7 D
Security Events and Incidents Summary	Present a brief summary of the events/incidents...			
Threat Report	Malware, Botnets - detected, victims and source...			
VPN Report	VPN Traffic, authenticated and failed User login...			
Web Usage Report	Web usage requests, browsing and bandwidth s...			

3. Select a report and click **Edit Schedule**. The **Edit Schedule** pane opens. In this example, the schedule for the Bandwidth and Applications report is changed to run from every week to every two weeks.
4. In the **Schedule** section, set the values for **Generate report every** to **2 week(s)**.


5. Click **OK**.

The schedule is also updated automatically in FortiAnalyzer for the same report (go to **Reports > Report Definitions > All Reports** and edit the report to view the settings).


## To view and download reports:

1. Go to *Log & Report > Reports* and select the *FortiAnalyzer* tab.

A pie chart displays the total count of FortiAnalyzer reports, categorized by report title. Generated reports are listed below and arranged by title, which includes reports from all VDOMs.

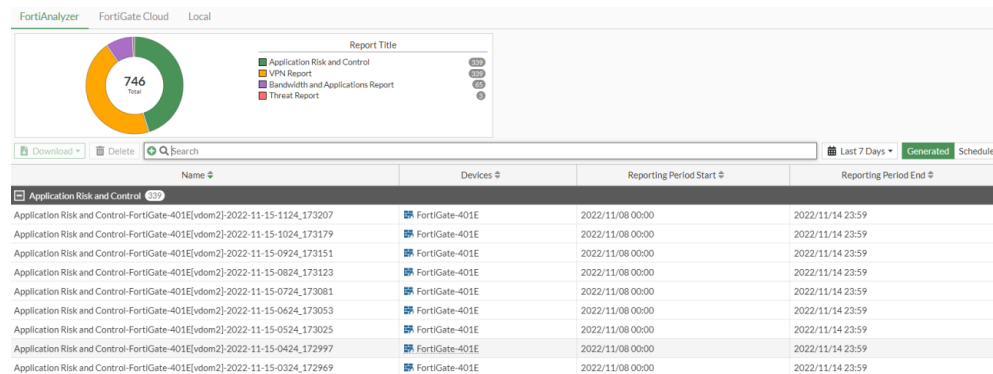

2. In the pie chart, click the a segment to filter reports.
3. In the filtered results, select the report. Right-click and select *Download*.

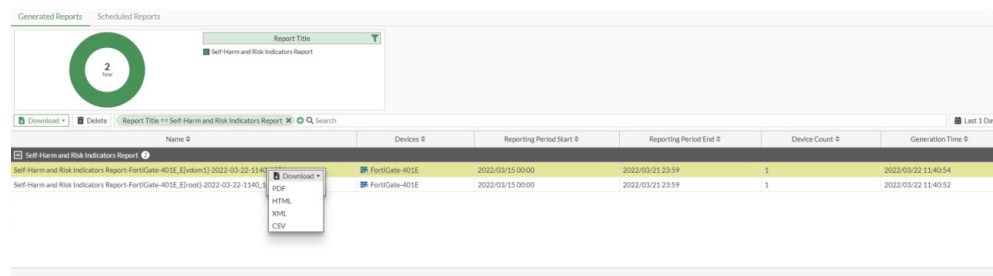

4. Select a file format. The report is saved to the default download location.

## FortiGate Cloud

Reports can be viewed and downloaded from the *FortiGate Cloud* tab. Select *Refresh* to regenerate the available reports.

FortiAnalyzer FortiGate Cloud Local

Refresh

Download

View

Launch Portal

Name	Start Time	End Time	Schedule
360 Degree Activities Report	2022/11/20 00:00:00	2022/11/27 00:00:00	Weekly
360 Degree Activities Report	2022/11/13 00:00:00	2022/11/20 00:00:00	Weekly
360 Degree Activities Report	2022/11/13 10:52:00	2022/11/14 10:52:00	Once

## To download a report:

1. Go to *Log & Report > Reports* and select the *FortiGate Cloud* tab.
2. Select the report.
3. Click *Download*. The report is saved to the default download location.

**To view a report:**

1. Go to *Log & Report > Reports* and select the *FortiGate Cloud* tab.
2. Select the report.
3. Click *View*. The report is displayed.

You can launch the FortiGate Cloud portal from the *FortiGate Cloud* tab.

**To launch the FortiGate Cloud portal:**


1. Go to *Log & Report > Reports* and select the *FortiGate Cloud* tab.
2. Select *Launch Portal*. The FortiGate Cloud landing page opens.

## Local

Reports can be generated, scheduled, viewed, and downloaded in the *Local* tab.

**To generate a report:**

1. Go to *Log & Report > Reports* and select the *Local* tab.
2. Select *Generate Now*. The *Confirm* pane opens.

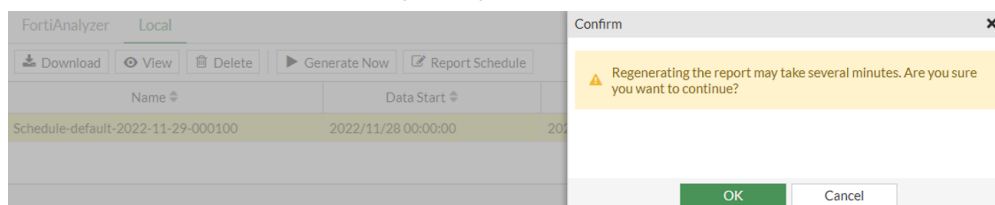

3. Click *OK*.

**To view a report:**


1. Go to *Log & Report > Reports* and select the *Local* tab.
2. Select the report.
3. Click *View*. The report is displayed.

**To download a report:**

1. Go to *Log & Report > Reports* and select the *Local* tab.
2. Select the report.
3. Click *Download*. The report is saved to the default download location.

**To schedule reports:**

1. Go to *Log & Report > Reports* and select the *Local* tab.
2. Click *Report Schedule*. The *Report Schedule* pane opens.

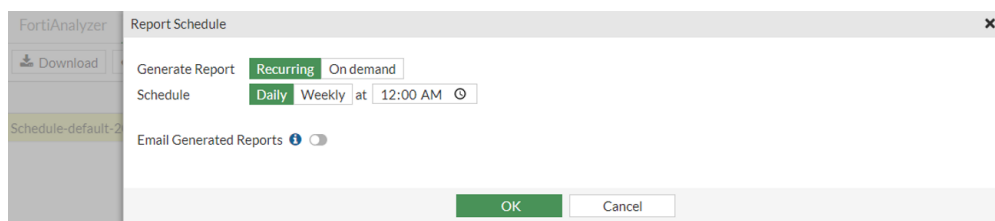

3. Set the schedule details.
4. Click **OK**.

## Log settings and targets

Log settings determine what information is recorded in logs, where the logs are stored, and how often storage occurs. Log settings can be configured in the GUI and CLI. In the GUI, *Log & Report > Log Settings* provides the settings for local and remote logging.

*Log & Report > Log Settings* is organized into tabs:

- [Global Settings on page 2984](#)
- [Local Logs on page 2985](#)
- [Threat Weight on page 2985](#)

## Global Settings

Settings available in the *Global Settings* tab include:

UUIDs in Traffic Log	
<b>Policy</b>	Define the use of policy UUIDs in traffic logs: <ul style="list-style-type: none"> <li>• <i>Enable</i>: Policy UUIDs are stored in traffic logs. UUIDs can be matched for each source and destination that match a policy in the traffic log. See <a href="#">Source and destination UUID logging on page 2999</a> for more information.</li> <li>• <i>Disable</i>: Policy UUIDs are excluded from the traffic logs.</li> </ul>
<b>Address</b>	Define the use of address UUIDs in traffic logs: <ul style="list-style-type: none"> <li>• <i>Enable</i>: Address UUIDs are stored in traffic logs. When viewing <i>Forward Traffic</i> logs, a filter is automatically set based on UUID.</li> <li>• <i>Disable</i>: Address UUIDs are excluded from traffic logs.</li> </ul>
Log Settings	
<b>Event Logging</b>	Define the allowed set of event logs to be recorded: <ul style="list-style-type: none"> <li>• <i>All</i>: All event logs will be recorded.</li> <li>• <i>Customize</i>: Select specific event log types to be recorded. Deselect all options to disable event logging.</li> </ul>
<b>Local Traffic Log</b>	Define the allowed set of traffic logs to be recorded: <ul style="list-style-type: none"> <li>• <i>All</i>: All traffic logs to and from the FortiGate will be recorded.</li> </ul>

- *Customize*: Select specific traffic logs to be recorded. Deselect all options to disable traffic logging. Local traffic logging is disabled by default due to the high volume of logs generated.

#### GUI Preferences

##### Resolve Hostnames

Define the translation of IP addresses to host names:

- *Enable*: IP addresses are translated to host names using reverse DNS lookup. If the DNS server is not available or is slow to reply, requests may time out.
- *Disable*: IP addresses are not translated to host names.

##### Resolve Unknown Applications

Define the resolution of unknown applications:

- *Enable*: Unknown applications are resolved using the Internet Service Database.
- *Disable*: Unknown applications are not resolved.

## Local Logs

Settings available in the *Local Logs* tab include:

#### Local Logs

##### Disk logging

Define local log storage on the FortiGate:

- *Enable*: Logs will be stored on a local disk. Local disk logging is not available in the GUI if the Security Fabric is enabled. When the Security Fabric is enabled, disk logging can still be configured on the root FortiGate in the CLI but is not available for downstream FortiGates.
- *Disable*: Logs will be stored remotely to FortiAnalyzer/FortiManager or to a Cloud logging device.

##### Local Reports

Define log reporting on the FortiGate:

- *Enable*: Local reports will be available on the FortiGate. Reports can be reviewed in *Log & Report > Reports* in the *Local* tab.
- *Disable*: Local reports will not be available on the FortiGate.

##### Historical FortiView

Define the presentation of log information on FortiView:

- *Enable*: Historical log data will be available on a FortiView monitor. By default, logs older than seven days are deleted. Disk logging must be enabled.
- *Disable*: Historical log data will not be available on FortiView.

##### Disk Usage

Presents the disk space used and the total disk space available on the disk.

## Threat Weight

Threat weight helps aggregate and score threats based on user-defined severity levels. It adds several fields such as threat level (*crlevel*), threat score (*crscore*), and threat type (*craction*) to traffic logs. Threat weight logging is


enabled by default and the settings can be customized. Threats can be viewed from the *Top Threats* FortiView dashboard.

### To configure threat weight settings:


1. Go to *Log & Report > Log Settings* and select the *Threat Weight* tab.
2. Adjust the settings as needed, such as individual weights per threat type and risk level values.
3. Click *Apply*.

### To add the Top Threats monitor to the dashboard:

1. In the tree menu, click *Dashboard* and in the FortiView section, click the + sign (*Add Monitor*).
2. In the *Security* section, enable *Show More* and click *Top Threats*.
3. Configure the settings as needed.
4. Click *Add Monitor*.
5. Go to *Dashboard > Top Threats*. The *Top Threats* monitor displays threats based on the scores in the traffic logs.

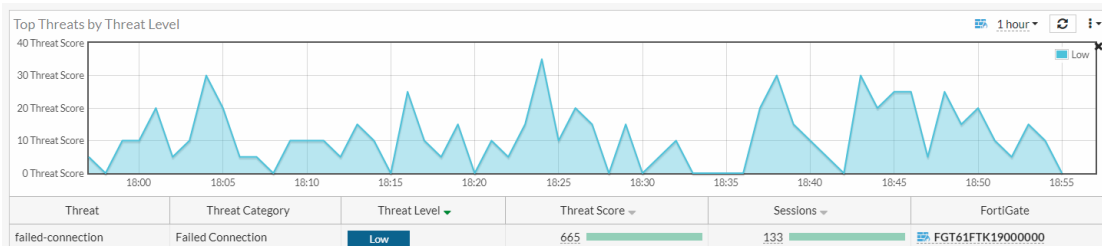

6. Double-click a threat to view the summary.
7. Click *Sources*, *Destinations*, *Countries/Regions*, or *Sessions* to view more information. Double-click an entry to view the log details.

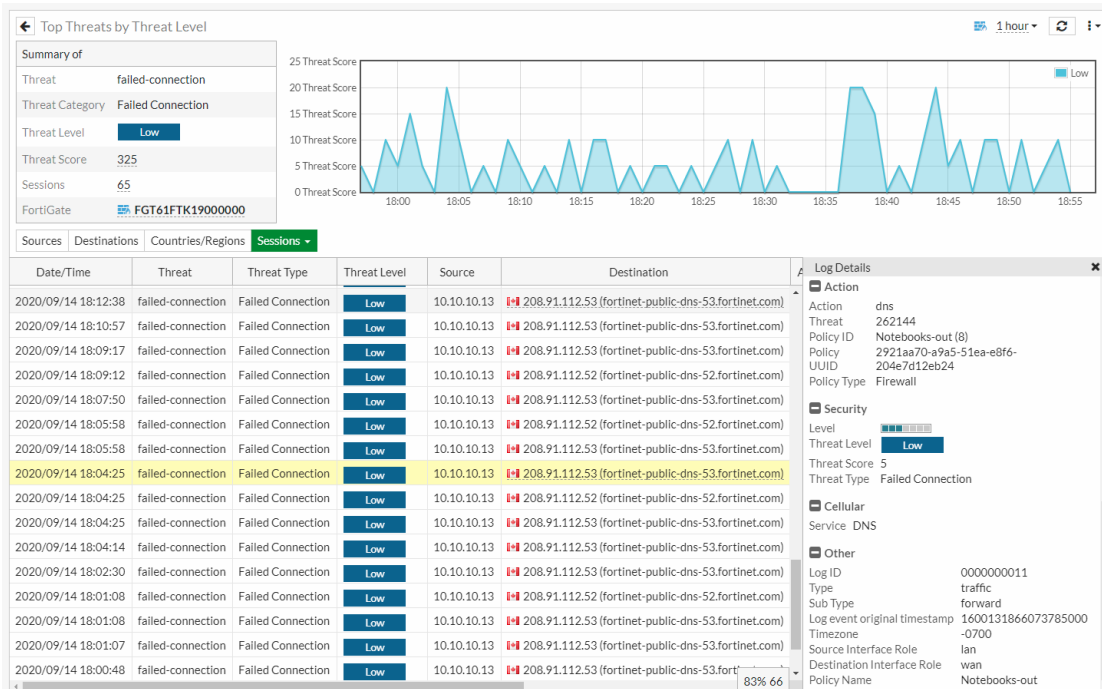



## Configuring logs in the CLI

The FortiGate can store logs locally to its system memory or a local disk. Logs can also be stored externally on a storage device, such as FortiAnalyzer, FortiAnalyzer Cloud, FortiGate Cloud, or a syslog server.

### Disk logging

Disk logging must be enabled for logs to be stored locally on the FortiGate. By default, logs older than seven days are deleted from the disk. Log age can be configured in the CLI. Approximately 75% of disk space is available for log storage. Log storage space can be determined using the `diagnose sys logdisk usage` command.

#### To configure local disk logging:

```
config log disk setting
    set status enable
    set maximum-log-age <integer>
    set max-log-file-size <integer>
end
```

### Remote logging

The process to configure FortiGate to send logs to FortiAnalyzer or FortiManager is identical. Remote logging to FortiAnalyzer and FortiManager can be configured using both the GUI and CLI. When using the CLI, use the `config log fortianalyzer setting` command for both FortiAnalyzer and FortiManager.

If VDOMs are configured on the FortiGate, multiple FortiAnalyzers and syslog servers can be added globally. See [Configuring multiple FortiAnalyzers \(or syslog servers\) per VDOM on page 2992](#) and [Configuring multiple FortiAnalyzers on a FortiGate in multi-VDOM mode on page 2993](#) for more information.

#### To configure remote logging to FortiAnalyzer:

```
config log fortianalyzer setting
    set status enable
    set server <server_IP>
    set upload option {store-and-upload | realtime | 1-minute | 5-minute}
end
```

Remote logging can also be configured to FortiCloud, FortiSIEM, and syslog servers. Up to four syslog servers or FortiSIEM devices can be configured using the `config log syslogd` command and can send logs to syslog in CSV and CEF formats.

#### To configure remote logging to FortiCloud:

```
config log fortiguard setting
    set status enable
    set source-ip <source IP used to connect FortiCloud>
end
```

**To configure remote logging to a syslog server:**

```
config log syslogd setting
    set status enable
    set server <syslog_IP>
    set format {default | cev | cef}
end
```

## Log filters

Log filter settings can be configured to determine which logs are recorded to the FortiAnalyzer, FortiManager, and syslog servers. This allows certain logging levels and types of logs to be directed to specific log devices.

**To configure log filters for FortiAnalyzer:**

```
config log fortianalyzer filter
    set severity <level>
    set forward-traffic {enable | disable}
    set local-traffic {enable | disable}
    set multicast-traffic {enable | disable}
    set sniffer-traffic {enable | disable}
end
```

**To configure log filters for a syslog server:**

```
config log syslogd filter
    set severity <level>
    set forward-traffic {enable | disable}
    set local-traffic {enable | disable}
    set multicast-traffic {enable | disable}
    set sniffer-traffic {enable | disable}
end
```

## Email alerts

FortiGate events can be monitored at all times using email alerts. Email alerts send notifications to up to three recipients and can be triggered based on log event and severity level. Email alerts will be sent every five minutes by default but this can be configured in the CLI.

**To configure email alerts:**

```
config alertemail setting
    set username <name>
    set mailto1 <email>
    set filter-mode {category | threshold}
    set email-interval <integer>
    set IPS-logs {enable | disable}
    set HA-logs {enable | disable}
    set antivirus-logs {enable | disable}
    set webfilter-logs {enable | disable}
    set log-disk-usage-warning {enable | disable}
end
```

## Logging to FortiAnalyzer

The following topics provide instructions on logging to FortiAnalyzer:

- [FortiAnalyzer log caching on page 2989](#)
- [Configuring multiple FortiAnalyzers \(or syslog servers\) per VDOM on page 2992](#)
- [Configuring multiple FortiAnalyzers on a FortiGate in multi-VDOM mode on page 2993](#)

### FortiAnalyzer log caching

Reliable logging to FortiAnalyzer prevents lost logs when the connection between FortiOS and FortiAnalyzer is disrupted. When reliable mode is enabled:

1. Logs are cached in a FortiOS memory queue.
2. FortiOS sends logs to FortiAnalyzer, and FortiAnalyzer uses `seq_no` to track received logs.
3. After FortiOS sends logs to FortiAnalyzer, logs are moved to a confirm queue in FortiOS.
4. FortiOS periodically queries FortiAnalyzer for the latest `seq_no` of the last log received, and clears logs from the confirm queue up to the `seq_no`.
5. If the connection between FortiOS and FortiAnalyzer is disrupted, FortiOS resends the logs in the confirm queue to FortiAnalyzer when the connection is reestablished.



FortiAnalyzer 7.2.0 and later is required.

---

#### To enable reliable mode:

```
config log fortianalyzer setting
    set reliable enable
end
```

#### To view the memory and confirm queues:

1. Verify that log synchronization is enabled for FortiAnalyzer:

```
# diagnose test application fgtlogd 1
vdom-admin=0
mgmt=root

fortilog:
faz: global , enabled
    server=172.16.200.251, realtime=1, ssl=1, state=connected
    server_log_status=Log is allowed.,
    src=, mgmt_name=FGh_Log_root_172.16.200.251, reliable=1, sni_prefix_type=none,
    required_entitlement=none, region=ca-west-1,,
    logsync_enabled:1, logsync_conn_id:65535, seq_no:790
...
```

2. When a network disruption disconnects FortiOS from FortiAnalyzer and FortiOS continues to generate logs, the logs are cached in the memory queue.

- View the number of logs in the cache and queue:

```
# diagnose test application fgtlogd 41

cache maximum: 189516595(180MB) objects: 40 used: 27051(0MB) allocated: 29568(0MB)

VDOM:root
Memory queue for: global-faz
queue:
    num: 9 size:6976(0MB) total size:26068(0MB) max:189516595(180MB) logs:28
Confirm queue for: global-faz
queue:
    num: 29 size:19092(0MB) total size:27051(0MB) max:189516595(180MB) logs:7

# diagnose test application fgtlogd 30
VDOM:root
Memory queue for: global-faz
queue:
    num: 9 size:6976(0MB) total size:26068(0MB) max:189516595(180MB)
        type:3, cat=1, log_count=1, seq_no=0, data len=359 size:435
        type:3, cat=1, log_count=1, seq_no=0, data len=307 size:383
        .....
        type:3, cat=0, log_count=4, seq_no=0, data len=1347 size:1423
        type:3, cat=4, log_count=1, seq_no=0, data len=653 size:729
    'total log count':28, 'total data len':6292

Confirm queue for: global-faz
queue:
    num: 29 size:19092(0MB) total size:26068(0MB) max:189516595(180MB)
        type:3, cat=1, log_count=1, seq_no=1, data len=290 size:366
        type:3, cat=1, log_count=1, seq_no=2, data len=233 size:309
        .....
        type:3, cat=0, log_count=1, seq_no=28, data len=524 size:600
        type:3, cat=1, log_count=1, seq_no=29, data len=307 size:383
    'total log count':76, 'total data len':16888
```

There are nine OFTP items cached to the memory queue, and 29 OFTP items to send from FortiOS to FortiAnalyzer that are waiting for confirmation from FortiAnalyzer.

- Go to *Log & Report > Log Settings* to view the queue in the GUI:

**Log Settings**

---

**Remote Logging and Archiving**

Send logs to FortiAnalyzer/FortiManager Enabled Disabled

Server  Test Connectivity

Connection status Unauthorized Authorize

Upload option Real Time Every Minute Every 5 Minutes

Connectivity issue, 217814 logs queued

Allow access to FortiGate REST API ☒

Verify FortiAnalyzer certificate ☒ FAZVM

3. Re-establish the connection between FortiOS and FortiAnalyzer and confirm that the queue has cleared by checking the `seq_no`, which indicates the latest confirmation log from FortiAnalyzer:

```
# diagnose test application fgtlogd 30
VDOM:root
Memory queue for: global-faz
queue:
  num:0 size:0(0MB) total size:0(0MB) max:189516595(180MB)
  'total log count':0, 'total data len':0
```

```
Confirm queue for: global-faz
queue:
  num:0 size:0(0MB) total size:0(0MB) max:189516595(180MB)
  'total log count':0, 'total data len':0
```

The queue has been cleared, meaning that FortiOS received confirmation from FortiAnalyzer and cleared the confirm queue.

```
# diagnose test application fgtlogd 1
vdom-admin=0
mgmt=root

fortilog:
faz: global , enabled
  server=172.16.200.251, realtime=1, ssl=1, state=connected
  server_log_status=Log is allowed.,
  src=, mgmt_name=FGh_Log_root_172.16.200.251, reliable=1, sni_prefix_type=none,
  required_entitlement=none, region=ca-west-1,
  logsync_enabled:1, logsync_conn_id:65535, seq_no:67
  status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_verified=Y
  SNs: last sn update:38 seconds ago.
  Sn list:
    (FAZ-VM21000000,age=38s)
  queue: qlen=0.
```

OFTP items with a `seq_no` lower than 67 have been sent to FortiAnalyzer and were confirmed.

## Configuring multiple FortiAnalyzers (or syslog servers) per VDOM

In a VDOM, multiple FortiAnalyzer and syslog servers can be configured as follows:

- Up to three override FortiAnalyzer servers
- Up to four override syslog servers

If the VDOM `faz-override` and/or `syslog-override` setting is enabled or disabled (default) before upgrading, the setting remains the same after upgrading.

If the override setting is disabled, the GUI displays the global FortiAnalyzer1 or syslog1 setting. If the override setting is enabled, the GUI displays the VDOM override FortiAnalyzer1 or syslog1 setting.

You can only use CLI to enable the override to support multiple log servers.

### To enable FortiAnalyzer and syslog server override under VDOM:

```
config log setting
    set faz-override enable
    set syslog-override enable
end
```

When `faz-override` and/or `syslog-override` is enabled, the following CLI commands are available for configuring VDOM override:

### To configure VDOM override for FortiAnalyzer:

#### 1. Configure the FortiAnalyzer override settings:

```
config log fortianalyzer/fortianalyzer2/fortianalyzer3 override-setting
    set status enable
    set server "123.12.123.123"
    set reliable enable
end
```

#### 2. Configure the override filters:

```
config log fortianalyzer/fortianalyzer2/fortianalyzer3 override-filter
    set severity information
    set forward-traffic enable
    set local-traffic enable
    set multicast-traffic enable
    set sniffer-traffic enable
    set anomaly enable
    set voip enable
    set dlp-archive enable
    set dns enable
    set ssh enable
    set ssl enable
end
```

### To configure VDOM override for a syslog server:

#### 1. Configure the syslog override settings:

```
config log syslogd/syslogd2/syslogd3/syslogd4 override-setting
    set status enable
```

```
    set server "123.12.123.12"
    set facility local1
end
```

### 2. Configure the override filters:

```
config log syslogd/syslogd2/syslogd3/syslogd4 override-filter
    set severity information
    set forward-traffic enable
    set local-traffic enable
    set multicast-traffic enable
    set sniffer-traffic enable
    set anomaly enable
    set voip enable
    set dns enable
    set ssh enable
    set ssl enable
end
```

## Configuring multiple FortiAnalyzers on a FortiGate in multi-VDOM mode

This topic shows a sample configuration of multiple FortiAnalyzers on a FortiGate in multi-VDOM mode.

In this example:

- The FortiGate has three VDOMs:
  - Root (management VDOM)
  - VDOM1
  - VDOM2
- There are four FortiAnalyzers.  
These IP addresses are used as examples in the instructions below.
  - FAZ1: 172.16.200.55
  - FAZ2: 172.18.60.25
  - FAZ3: 192.168.1.253
  - FAZ4: 192.168.1.254
- Set up FAZ1 and FAZ2 under global.
  - These two collect logs from the root VDOM and VDOM2.
  - FAZ1 and FAZ2 must be accessible from management VDOM root.
- Set up FAZ3 and FAZ4 under VDOM1.
  - These two collect logs from VDOM1.
  - FAZ3 and FAZ4 must be accessible from VDOM1.

### To set up FAZ1 as global FortiAnalyzer 1 from the GUI:

Prerequisite: FAZ1 must be reachable from the management root VDOM.

1. Go to *Global > Log & Report > Log Settings*.
2. Enable *Send logs to FortiAnalyzer/FortiManager*.
3. Enter the FortiAnalyzer IP.

In this example: 172.16.200.55.

4. For *Upload option*, select *Real Time*.
5. Click *Apply*.

### To set up FAZ2 as global FortiAnalyzer 2 from the CLI:

Prerequisite: FAZ2 must be reachable from the management root VDOM.

```
config log fortianalyzer2 setting
    set status enable
    set server "172.18.60.25"
    set upload-option realtime
end
```

### To set up FAZ3 and FAZ4 as VDOM1 FortiAnalyzer 1 and FortiAnalyzer 2:

Prerequisite: FAZ3 and FAZ4 must be reachable from VDOM1.

```
config log setting
    set faz-override enable
end
```

```
config log fortianalyzer override-setting
    set status enable
    set server "192.168.1.253"
    set upload-option realtime
end
```

```
config log fortianalyzer2 override-setting
    set status enable
    set server "192.168.1.254"
    set upload-option realtime
end
```

## Checking FortiAnalyzer connectivity

### To use the diagnose command to check FortiAnalyzer connectivity:

1. Check the global FortiAnalyzer status:

```
FGTA(global) # diagnose test application fgtlogd 1
vdom-admin=1
mgmt=root
faz: global , enabled
    server=172.16.200.55, realtime=1, ssl=1, state=connected
    server_log_status=Log is allowed.,
    src=, mgmt_name=FGh_Log_root_172.16.200.55, reliable=0, sni_prefix_type=none,
    required_entitlement=none, region=ca-west-1,
    logsync_enabled:1, logsync_conn_id:65535, seq_no:0
        status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=Y
    SNs: last sn update:383 seconds ago.
        Sn list:
            (FAZ-VM2M2200****,age=383s)
        queue: qlen=0.
filter: severity=6, sz_exclude_list=0
```



```

    traffic virus webfilter ips emailfilter anomaly voip dlp app-ctrl waf dns ssh
ssl file-filter icap sctp-filter
subcategory:
    traffic: forward local multicast sniffer ztna
    anomaly:all subcategories are enabled.
    server: global, id=0, ready=1, name=172.16.200.55 addr=172.16.200.55:514
    oftp-state=connected
faz2: global , enabled
    server=172.18.60.25, realtime=3, ssl=1, state=connected
    server_log_status=Log is allowed.,
    src=, mgmt_name=FGh_Log_root_172.18.60.25, reliable=0, sni_prefix_type=none,
    required_entitlement=none, region=ca-west-1,
    logsync_enabled:1, logsync_conn_id:131071, seq_no:0
        status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=Y
    SNs: last sn update:383 seconds ago.
        Sn list:
            (FAZ-VMTM2201****,age=383s)
        queue: qlen=0.
filter: severity=6, sz_exclude_list=0
    traffic virus webfilter ips emailfilter anomaly voip dlp app-ctrl waf dns ssh
ssl file-filter icap sctp-filter
subcategory:
    traffic: forward local multicast sniffer ztna
    anomaly:all subcategories are enabled.
    server: global, id=1, ready=1, name=172.18.60.25 addr=172.18.60.25:514
    oftp-state=connected

```

## 2. Check the VDOM1 override FortiAnalyzer status:

```

FGTA(global) # diagnose test application fgtlogd 3101
vdom VDOM1: id=3
event filter:
    event
system vpn user router wireless wanopt endpoint ha security-rating fortixtender
connector sdwan cifs-auth-fail switch-controller rest-api webproxy
faz: vdom, enabled, override
    server=192.168.1.253, realtime=3, ssl=1, state=connected
    server_log_status=Log is allowed.,
    src=, mgmt_name=FGh_Log_VDOM1_192.168.1.253, reliable=0, sni_prefix_type=none,
    required_entitlement=none, region=ca-west-1,
    logsync_enabled:1, logsync_conn_id:3, seq_no:0
        status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=Y
    SNs: last sn update:16 seconds ago.
        Sn list:
            (FAZ-VMTM2200****,age=16s)
        queue: qlen=0.
filter: severity=6, sz_exclude_list=0
    traffic virus webfilter ips emailfilter anomaly voip dlp app-ctrl waf dns ssh
ssl file-filter icap sctp-filter
subcategory:
    traffic: forward local multicast sniffer ztna
    anomaly:all subcategories are enabled.
    server: vdom, id=0, ready=1, name=192.168.1.253 addr=192.168.1.253:514
    oftp-state=connected
faz2: vdom, enabled, override

```

```
server=192.168.1.254, realtime=3, ssl=1, state=connected
server_log_status=Log is allowed.,
src=, mgmt_name=FGh_Log_VDOM1_192.168.1.254, reliable=0, sni_prefix_type=none,
required_entitlement=none, region=ca-west-1,
logsync_enabled:1, logsync_conn_id:65539, seq_no:0
      status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=Y
      SNs: last sn update:16 seconds ago.
          Sn list:
              (FAZ-VMTM2201****,age=16s)
          queue: qlen=0.
filter: severity=6, sz_exclude_list=0
      traffic virus webfilter ips emailfilter anomaly voip dlp app-ctrl waf dns ssh
ssl file-filter icap sctp-filter
subcategory:
    traffic: forward local multicast sniffer ztna
    anomaly:all subcategories are enabled.

server: vdom, id=1, ready=1, name=192.168.1.254 addr=192.168.1.254:514
oftp-state=connected
faz3: vdom, disabled, override
```

## Advanced and specialized logging

The following topics provide information on advanced and specialized logging:

- [Logs for the execution of CLI commands on page 2996](#)
- [Log buffer on FortiGates with an SSD disk on page 2998](#)
- [Source and destination UUID logging on page 2999](#)
- [Configuring and debugging the free-style filter on page 3001](#)
- [Logging the signal-to-noise ratio and signal strength per client on page 3003](#)
- [RSSO information for authenticated destination users in logs on page 3005](#)
- [Destination user information in UTM logs on page 3008](#)

### Logs for the execution of CLI commands

The `cli-audit-log` option records the execution of CLI commands in system event logs (log ID 44548). In addition to `execute` and `config` commands, `show`, `get`, and `diagnose` commands are recorded in the system event logs.

The `cli-audit-log` data can be recorded on memory or disk, and can be uploaded to FortiAnalyzer, FortiGate Cloud, or a syslog server.

**To enable the CLI audit log option:**

```
config system global
    set cli-audit-log enable
end
```

## To view system event logs in the GUI:

1. Run the command in the CLI (# show log fortianalyzer setting).
2. Go to **Log & Report > System Events**.
3. Select **General System Events**.
4. Select the log entry and click **Details**.

Add Filter					System Events	Details
Date/Time	Level	User	Message	Log Description	Log Details	
40 seconds ago	Information		Delete 60 old report files	Outdated report files deleted	<b>General</b> Date: 2021/03/03 Time: 12:12:11 Virtual Domain: root Log Description: Action performed	
Minute ago	Information	admin	show log fortianalyzer setting	Action performed		
Minute ago	Information	admin	Edit system_global	Attribute configured	<b>Source</b> User: admin	
2 minutes ago	Information		stitch:Test is triggered.	Automation stitch triggered		
2 minutes ago	Information	admin	Administrator admin logged in successfully from jsconsole	Admin login successful	<b>Action</b> Action: Show	
5 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
5 minutes ago	Information		Delete 35 old report files	Outdated report files deleted	<b>Security</b> Level: Information	
10 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
10 minutes ago	Information		Delete 36 old report files	Outdated report files deleted	<b>Event</b> User Interface: jsconsole(2.0.248.28) Message: show log fortianalyzer setting	
14 minutes ago	Information		DHCP statistics	DHCP statistics		
14 minutes ago	Information		DHCP statistics	DHCP statistics	<b>Other</b> Log event original timestamp: 1614902331006465000 Timezone: -0800 Log ID: 0100044548 Type: event Sub Type: system	
14 minutes ago	Information		DHCP statistics	DHCP statistics		
14 minutes ago	Information		DHCP statistics	DHCP statistics		
14 minutes ago	Information		Fortigate scheduled update fcni=yes fdni=yes fsci=yes from 173.243.140...	FortiGate update succeeded		
15 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
15 minutes ago	Information		Delete 38 old report files	Outdated report files deleted		
20 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
20 minutes ago	Information		Delete 35 old report files	Outdated report files deleted		
25 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
25 minutes ago	Information		Delete 36 old report files	Outdated report files deleted		
30 minutes ago	Information		Fortigate scheduled update fcni=yes fdni=yes fsci=yes from 173.243.140...	FortiGate update succeeded		
30 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
30 minutes ago	Information		Delete 36 old report files	Outdated report files deleted		
35 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		
35 minutes ago	Information		Delete 35 old report files	Outdated report files deleted		
40 minutes ago	Information		Performance statistics: average CPU: 0, memory: 49, concurrent sessions: ...	System performance statistics		

## To display the logs:

```
# execute log filter device disk
# execute log filter category event
# execute log filter field subtype system
# execute log filter field logid 0100044548
# execute log display
```

## Sample log:

```
1: date=2020-11-16 time=10:43:00 eventtime=1605552179970875703 tz="-0800" logid="0100044548"
type="event" subtype="system" level="information" vd="root" logdesc="Action performed"
user="admin" ui="jsconsole(2.0.225.112)" action="Show" msg="show log fortianalyzer setting"

2: date=2020-11-16 time=10:42:43 eventtime=1605552163502003054 tz="-0800" logid="0100044548"
type="event" subtype="system" level="information" vd="root" logdesc="Action performed"
user="admin" ui="jsconsole(2.0.225.112)" action="Get" msg="get sys status"

3: date=2020-11-16 time=09:47:04 eventtime=1605548824762387718 tz="-0800" logid="0100044548"
type="event" subtype="system" level="information" vd="root" logdesc="Action performed"
user="admin" ui="jsconsole(2.0.228.202)" action="Diagnose" msg="diagnose log test"
```

## Log buffer on FortiGates with an SSD disk

FortiGates with an SSD disk have a configurable log buffer. When the connection to FortiAnalyzer is unreachable, the FortiGate is able to buffer logs on disk if the memory log buffer is full. The logs queued on the disk buffer can be sent successfully once the connection to FortiAnalyzer is restored.

The queued logs are buffered to the memory first and then disk. If the total buffer is full, new logs will overwrite the old logs.

### To configure the log buffer:

1. Allocate disk space (MB) to temporarily store logs to FortiAnalyzer:

```
config system global
    set faz-disk-buffer-size 200
end
```

2. Check the `fgtlogd` statistics. The 200 MB disk buffer has been set, and there are currently no logs buffered in memory or on disk when FortiAnalyzer is reachable:

```
# diagnose test application fgtlogd 41
cache maximum: 19569745(18MB) objects: 0 used: 0(0MB) allocated: 0(0MB)
VDOM:root
Memory queue for: global-faz
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:15375441(14MB) logs:0
    queue disk total size:0MB, max size:200MB
        total items:0
            devid:-1-13-0-0
            buffer path:/var/log/log/qbuf/13.0/0
            saved size:0MB, lost files: 0
            save roll:0 restore roll:0
Confirm queue for: global-faz
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:15375441(14MB) logs:0
```

3. Disable the connection between the FortiGate and FortiAnalyzer. For example, delete the FortiGate from the FortiAnalyzer authorized device list.

Assuming a massive number of logs (~ 300000) are recorded during this downtime, the logs will be queued in the memory buffer first. If the memory buffer is full, then the remaining logs will be queued on the disk buffer.

4. Recheck the `fgtlogd` statistics. Currently, there are logs buffered in both memory and disk:

```
# diagnose test application fgtlogd 41
cache maximum: 19569745(18MB) objects: 14391 used: 10450754(9MB) allocated: 12089088(11MB)
VDOM:root
Memory queue for: global-faz
    queue:
        num:14245 size:9306505(8MB) total size:10450754(9MB) max:15375441(14MB)
    logs:14245
    queue disk total size:199MB, max size:200MB
        total items:321085
            devid:-1-13-0-0
            buffer path:/var/log/log/qbuf/13.0/0
            saved size:199MB, lost files: 10
            save roll:60 restore roll:10
```

```
Confirm queue for: global-faz
queue:
    num:0 size:0(0MB) total size:10450754(9MB) max:15375441(14MB) logs:0
```

The overall `fgtlogd` statistics shows the total cached logs is the sum of the logs buffered in memory and on disk:

```
# diagnose test application fgtlogd 4
Queues in all miglogds: cur:1 total-so-far:727973
global log dev statistics:
faz=399411, faz_cloud=0, fds_log=399411
faz 0: sent=0, failed=0, cached=335480, dropped=0
Num of REST URLs: 0
```

5. Enable the connection between FortiAnalyzer and the FortiGate.
6. After a while, check the `fgtlogd` statistics to confirm that all buffered logs are being sent to FortiAnalyzer successfully:

```
# diagnose test application fgtlogd 4
Queues in all miglogds: cur:1 total-so-far:727973
global log dev statistics:
faz=399411, faz_cloud=0, fds_log=399411
faz 0: sent=335487, failed=0, cached=0, dropped=0
Num of REST URLs: 0

# diagnose test application fgtlogd 41
cache maximum: 19569745(18MB) objects: 0 used: 0(0MB) allocated: 0(0MB)
VDOM:root
Memory queue for: global-faz
queue:
    num:0 size:0(0MB) total size:0(0MB) max:15375441(14MB) logs:0
queue disk total size:0MB, max size:200MB
total items:0
    devid:-1-13-0-0
    buffer path:/var/log/log/qbuf/13.0/0
    saved size:0MB, lost files: 10
    save roll:60 restore roll:60

Confirm queue for: global-faz
queue:
    num:0 size:0(0MB) total size:0(0MB) max:15375441(14MB) logs:0
```

## Source and destination UUID logging

The `log-uuid` setting in system global is split into two settings: `log-uuid-address` and `log-uuid policy`.

The traffic log includes two internet-service name fields: *Source Internet Service* (`srcinetsvc`) and *Destination Internet Service* (`dstinetsvc`).


### Log UUIDs

UUIDs can be matched for each source and destination that match a policy that is added to the traffic log. This allows the address objects to be referenced in log analysis and reporting.

As this may consume a significant amount of storage space, this feature is optional. By default, policy UUID insertion is enabled and address UUID insertion is disabled.

### To enable address and policy UUID insertion in traffic logs using the GUI:

1. Go to *Log & Report > Log Settings*.
2. Under *UUIDs in Traffic Log*, enable *Policy* and/or *Address*.
3. Click *Apply*.

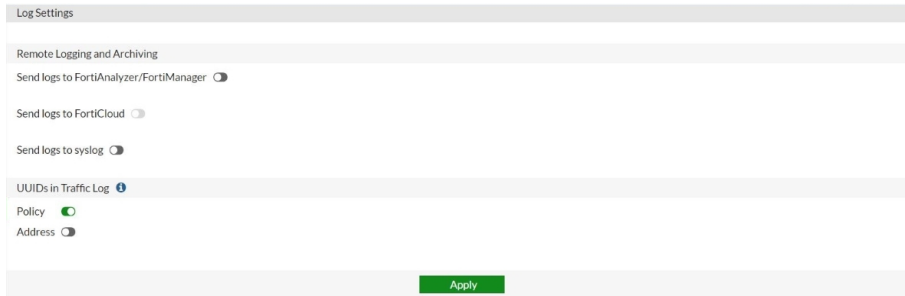

### To enable address and policy UUID insertion in traffic logs using the CLI:

```
config system global
    set log-uuid-address enable
    set log-uuid-policy enable
end
```

### Sample log

```
date=2019-01-25 time=11:32:55 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1528223575srcip=192.168.1.183 srcname="PC24"
srcport=33709 srcintf="lan" srcintfrole="lan" dstip=192.168.70.184 dstport=80 dstintf="wan1"
dstintfrole="wan" srcuuid="27dd503e-883c-51e7-ade1-7e015d46494f" dstuuid="27dd503e-883c-
51e7-ade1-7e015d46494f" poluuid="9e0fe24c-1808-51e8-1257-68ce4245572c" sessionid=5181
proto=6 action="client-rst" policyid=4 policytype="policy" service="HTTP" trandisp="snat"
transip=192.168.70.228 transport=33709 appid=38783 app="Wget" appcat="General.Interest"
apprisk="low" applist="default" duration=5 sentbyte=450 rcvdbyte=2305 sentpkt=6 wanin=368
wanout=130 lanin=130 lanout=130 utmaction="block" countav=2 countapp=1 crscore=50 craction=2
devtype="Linux PC" devcategory="None" osname="Linux" mastersrcmac="00:0c:29:36:5c:c3"
srcmac="00:0c:29:36:5c:c3" srcserver=0 utmref=65523-1018
```

## Internet service name fields

Traffic logs for `internet-service` include two fields: *Source Internet Service* and *Destination Internet Service*.

### To view the internet service fields using the GUI:

1. Go to *Log & Report > Forward Traffic*.
2. Double-click on an entry to view the *Log Details*. The *Source Internet Service* and *Destination Internet Service* fields

are visible in the *Log Details* pane.

Date/Time	Source	Destination	Result	Policy	Log Details
2019/02/01 16:29:48	10.2.2.1	192.168.100.205		2	Protocol 6 Service HTTP
2019/02/01 16:29:33	10.2.2.1	192.168.100.205		2	
2019/02/01 16:28:58	10.1.100.11	172.16.200.55	✓ 397 B / 1.30 kB	2	Data Received Bytes 1 kB Received Packets 4 Sent Bytes 397 B Sent Packets 6 Action Action Policy Policy f542b0b6-1b78-51e9-5afb-83cf787596a4 UUID Policy Type policy Security Level Other Sub Type forward Log event original timestamp 1549067338 Source Interface Role undefined Destination Interface Role undefined Source Internet Service isdb-875099 Destination Internet Service Google.Gmail Destination Device Type Unknown Destination Device Category None Primary Destination Mac 00:0c:29:2d:97:c0 Destination Server 1
2019/02/01 16:28:58	10.1.100.11	172.217.14.228	✓ 398 B / 756 B	2	

## Sample log

```
date=2019-01-25 time=14:17:04 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1548454622
srcip=10.1.100.11 srcport=51112 srcintf="port3" srcintfrole="undefined" dstip=172.217.14.228
dstport=80 dstintf="port1" dstintfrole="undefined" poluuid="af519380-2094-51e9-391c-b78e8edbddfc"
srcinetsvc="isdb-875099" dstinetsvc="Google.Gmail" sessionid=6930 proto=6
action="close" policyid=2 policytype="policy" service="HTTP" dstcountry="United States"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=51112 duration=11
sentbyte=398 rcvdbyte=756 sentpkt=6 rcvdpkt=4 appcat="unscanned" devtype="Router/NAT Device"
devcategory="Fortinet Device" mastersrcmac="90:6c:ac:41:7a:24" srcmac="90:6c:ac:41:7a:24"
srcserver=0 dstdevtype="Unknown" dstdevcategory="Fortinet Device"
masterdstmac="08:5b:0e:1f:ed:ed" dstmac="08:5b:0e:1f:ed:ed" dstserver=0
```

## Configuring and debugging the free-style filter

Free-style filters allow users to define a filter for logs that are captured to each individual logging device type. Filters can include log categories and specific log fields. The filters can be created as an inclusive list or exclusive list.

Free-style filters can also be used to filter logs that have been captured on logging devices already to narrow down the list of logs to view.

```
config log syslogd filter
  config free-style
    edit <id>
      set category <option>
      set filter <string>
      set filter-type {include | exclude}
    next
  end
end
```

category <option>

Set the log category. The following options are available: traffic, event, virus, webfilter, attack, spam, anomaly, voip, dlp, app-ctrl, waf, dns, ssh, ssl, file-filter, icap, and ztna.

<code>filter &lt;string&gt;</code>	Enter the filter criteria. Multiple values can be added, for example: <code>set filter "logid &lt;id&gt; &lt;id&gt;"</code>
<code>filter-type {include   exclude}</code>	Include/exclude logs that match the filter.

Use the following commands to view the results when multiple fields are used:

```
# execute log filter free-style "logid <id> <id>"
# execute log filter free-style "srcip <IP_address> <IP_address>"
# execute log filter free-style "(logid <id>) or (srcip <IP_address> <IP_address>)"
# execute log filter free-style "(srcip <IP_address>) and (dstip <IP_address>)"
```

In this example, the free-style filter is set to filter log IDs 0102043039 and 0102043040. The source IPs, 192.168.2.5 and 192.168.2.205, are also checked.

### To configure the syslogd free-style filter with multiple values:

```
config log syslogd filter
  config free-style
    edit 1
      set category event
      set filter "logid 0102043039 0102043040"
    next
  end
end
```

### To view the syslogd free-style filter results:

```
# execute log filter free-style "logid 0102043039 0102043040"
# execute log filter dump
category: event
device: disk
start-line: 1
view-lines: 10
max-checklines: 0
HA member:
log search mode: on-demand
pre-fetch-pages: 2
Filter: logid 0102043039 0102043040
Oftp search string: (and (or logid=="0102043039" not-exact logid=="0102043040" not-exact))


# execute log filter free-style "(logid 0102043039) or (srcip 192.168.2.5 192.168.2.205)"
# execute log filter dump
category: event
device: disk
start-line: 1
view-lines: 10
max-checklines: 0
HA member:
log search mode: on-demand
pre-fetch-pages: 2
Filter: (logid 0102043039) or (srcip 192.168.2.5 192.168.2.205)
Oftp search string: (or (or (or srcip==192.168.2.5) (or srcip==192.168.2.205)) (or
logid=="0102043039" not-exact))
```



## Logging the signal-to-noise ratio and signal strength per client

The signal-to-noise ratio (`snr`) and signal strength (`signal`) are logged per client in the WiFi event and traffic logs.

When a WiFi client connects to a tunnel or local-bridge mode SSID on an FortiAP that is managed by a FortiGate, signal-to-noise ratio and signal strength details are included in WiFi event logs for local-bridge traffic statistics and authentication, and in forward traffic logs for tunnel traffic. This allows you to store and view clients' historical signal strength and signal-to-noise ratio information.

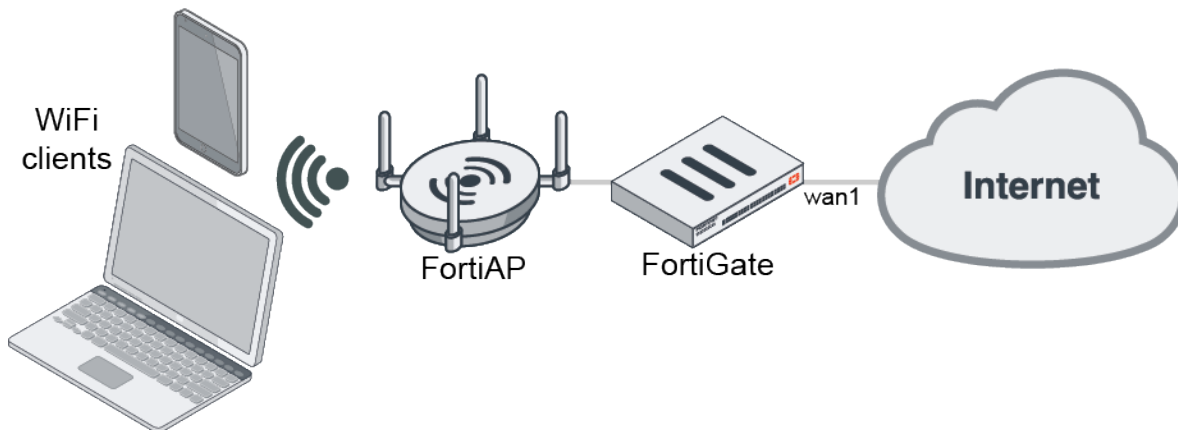

### To verify when a client is connecting to an SSID:

1. Go to **Log & Report > System Events** and select **WiFi Events**.

The **Signal** and **Signal/Noise** columns show the signal strength and signal-to-noise ratio for each applicable client.

Date/Time	Level	Action	Message	SSID	Channel	Signal	Signal/Noise
2020/05/29 10:00:16	notice	fake-ap-on-air	Fake AP On-air starr-ssid.fap.02 90:6c:ac:8a:69:41 chan 44 live ...	starr-ssid.fap.02	44	-34	
2020/05/29 10:00:15	info	DHCP-ACK	DHCP ACK for IP 11.10.80.2 from server 11.10.80.1 for client 4...	FOS_QA_Starr_140E_Guest-11			
2020/05/29 10:00:15	info	DHCP-REQUEST	DHCP REQUEST for IP 11.10.80.2 offered by server 11.10.80.1 ...	FOS_QA_Starr_140E_Guest-11			
2020/05/29 10:00:15	info	DHCP-OFFER	DHCP OFFER of IP 11.10.80.2 from server 11.10.80.1 for client ...	FOS_QA_Starr_140E_Guest-11			
2020/05/29 10:00:14	info	client-ip-detected	Client 48:ee:0c:23:43:d1 had an IP address detected (by DHCP ...	FOS_QA_Starr_140E_Guest-11	6	-45	50
2020/05/29 10:00:14	info	DHCP-DISCOVER	DHCP DISCOVER from client 48:ee:0c:23:43:d1	FOS_QA_Starr_140E_Guest-11			
2020/05/29 10:00:04	info	client-authentication	Client 48:ee:0c:23:43:d1 authenticated.	FOS_QA_Starr_140E_Guest-11	6	-45	50
2020/05/29 10:00:04	info	WPA-4/4-key-msg	AP received 4/4 message of 4-way handshake from client 48:ee...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	WPA-3/4-key-msg	AP sent 3/4 message of 4-way handshake to client 48:ee:0c:23...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	WPA-2/4-key-msg	AP received 2/4 message of 4-way handshake from client 48:ee...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	WPA-1/4-key-msg	AP sent 1/4 message of 4-way handshake to client 48:ee:0c:23...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	assoc-resp	AP sent association response frame to client 48:ee:0c:23:43:d1	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	assoc-req	AP received association request frame from client 48:ee:0c:23:4...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	auth-resp	AP sent authentication response frame to client 48:ee:0c:23:43...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 10:00:04	info	auth-req	AP received authentication request frame from client 48:ee:0c...	FOS_QA_Starr_140E_Guest-11	6		
2020/05/29 09:59:30	info	oper-tpxpower	AP FP231ETF20000455 radio 1 oper tpxpower is changed to 26 ...				
2020/05/29 09:59:28	info	oper-tpxpower	AP FP231ETF20000455 radio 1 oper tpxpower is changed to 4 d...				
2020/05/29 09:59:24	info	config-tpxpower	AP FP231ETF20000455 radio 1 cfg tpxpower is changed to 27 d...				
2020/05/29 09:58:46	notice	fake-ap-on-air	Fake AP On-air starr-ssid.fap.02 90:6c:ac:8a:69:41 chan 44 live ...	starr-ssid.fap.02	44	-34	
2020/05/29 09:57:16	notice	fake-ap-on-air	Fake AP On-air starr-ssid.fap.02 90:6c:ac:8a:69:41 chan 44 live ...	starr-ssid.fap.02	44	-34	
2020/05/29 09:55:46	notice	fake-ap-on-air	Fake AP On-air starr-ssid.fap.02 90:6c:ac:8a:69:41 chan 44 live ...	starr-ssid.fap.02	44	-34	

2. WiFi event log messages include the signal and snr values:

```

date=2020-05-27 time=11:26:28 logid="0104043579" type="event" subtype="wireless"
level="notice" vd="vdom1" eventtime=1590603988877156921 tz="-0700" logdesc="Wireless
client IP assigned" sn="FP231ETF20000455" ap="FP231ETF20000455" vap="stability3"
ssid="FOS_QA_Starr_140E_Guest-11" radioid=1 user="N/A" group="N/A"
stamac="1c:87:2c:b6:a8:49" srcip=11.10.80.2 channel=6 radioband="802.11n,g-only"
signal=-45 snr=50 security="WPA2 Personal" encryption="AES" action="client-ip-detected"
reason="Reserved 0" mpsk="N/A" msg="Client 1c:87:2c:b6:a8:49 had an IP address detected
(by DHCP packets)."

```

```
date=2020-05-27 time=11:26:11 logid="0104043573" type="event" subtype="wireless"
level="notice" vd="vdom1" eventtime=1590603970962702892 tz="-0700" logdesc="Wireless
client authenticated" sn="FP231ETF20000455" ap="FP231ETF20000455" vap="stability3"
ssid="FOS_QA_Starr_140E_Guest-11" radioid=1 user="N/A" group="N/A"
stamac="1c:87:2c:b6:a8:49" srcip=0.0.0.0 channel=6 radioband="802.11n,g-only" signal=-45
snr=50 security="WPA2 Personal" encryption="AES" action="client-authentication"
reason="Reserved 0" mpsk="N/A" msg="Client 1c:87:2c:b6:a8:49 authenticated."
```

## To verify tunnel traffic when a client is connecting to a tunnel mode SSID:

### 1. Go to *Log & Report > Forward Traffic*.

The *Signal* and *Signal/Noise* columns show the signal strength and signal-to-noise ratio for each applicable client.

Date/Time	Source	Device	Destination	Application Name	Result	Policy ID	Signal	Signal/Noise
2020/05/29 10:19:04	11.10.80.3	00:1e5dfb1:63	108.175.12.139 (img2westca.com)	HTTPS.BROWSER	✓ 938 B / 389 B	wmm (13)	-32	62
2020/05/29 10:19:04	11.10.80.3	00:1e5dfb1:63	108.175.12.139 (img2westca.com)	HTTPS.BROWSER	✓ 938 B / 389 B	wmm (13)	-32	62
2020/05/29 10:19:02	11.10.80.6	WIFI23	142.232.230.11 (www.bclt.ca)	SSL_TLSv1.2	✓ 3.67 kB / 97.47 kB	wmm (13)	-30	64
2020/05/29 10:18:58	11.10.80.3	00:1e5dfb1:63	108.175.12.139 (img2westca.com)	HTTPS.BROWSER	✓ 938 B / 389 B	wmm (13)	-32	62
2020/05/29 10:18:51	11.10.80.3	00:1e5dfb1:63	149.7.32.209 (widgetdata-backup.tradingview.com)	SSL_TLSv1.2	✓ 255.25 kB / 903.92 kB	wmm (13)	-32	62
2020/05/29 10:18:46	11.10.80.3	00:1e5dfb1:63	108.175.12.139 (img2westca.com)	HTTPS.BROWSER	✓ 938 B / 389 B	wmm (13)	-34	60
2020/05/29 10:18:46	11.10.80.6	WIFI23	172.18.56.163	HTTP.BROWSER	✓ 397 B / 669 B	wmm (13)	-30	64
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 292 B	wmm (13)	-34	60
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 63 B / 240 B	wmm (13)	-34	60
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 166 B	wmm (13)	-34	60
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 292 B	wmm (13)	-34	60
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 292 B	wmm (13)	-34	60
2020/05/29 10:18:35	11.10.80.3	00:1e5dfb1:63	65.39.243.196 (www.everforex.ca)	HTTPS.BROWSER	✓ 596.72 kB / 2.97 MB	wmm (13)	-34	60
2020/05/29 10:18:34	11.10.80.3	00:1e5dfb1:63	108.175.12.139 (img2westca.com)	HTTPS.BROWSER	✓ 936 B / 429 B	wmm (13)	-34	60
2020/05/29 10:18:32	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 79 B / 243 B	wmm (13)	-34	60
2020/05/29 10:18:32	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 79 B / 243 B	wmm (13)	-34	60
2020/05/29 10:18:32	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 267 B	wmm (13)	-34	60
2020/05/29 10:18:32	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 157 B	wmm (13)	-34	60
2020/05/29 10:18:31	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 267 B	wmm (13)	-34	60
2020/05/29 10:18:31	11.10.80.3	00:1e5dfb1:63	172.16.100.100	DNS	✓ 59 B / 267 B	wmm (13)	-34	60

### 2. Forward traffic log messages include the signal and snr values:

```
date=2020-05-27 time=11:30:26 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1590604226533016978 tz="-0700" srcip=11.10.80.2
srcname="WIFI23" srcport=53926 srcintf="stability3" srcintfrole="lan" srcssid="FOS_QA_
Starr_140E_Guest-11" apsn="FP231ETF20000455" ap="FP231ETF20000455" channel=6
radioband="802.11n,g-only" signal=-31 snr=64 dstip=91.189.91.157 dstport=123
dstintf="wan1" dstintfrole="wan" srccountry="United States" dstcountry="United States"
sessionid=322069 proto=17 action="accept" policyid=13 policytype="policy"
poluid="7c14770c-1456-51e9-4c57-806e9c499782" policyname="wmm" service="NTP"
trandisp="snat" transip=172.16.200.111 transport=53926 appid=16270 app="NTP"
appcat="Network.Service" apprisk="elevated" applist="g-default" duration=180 sentbyte=76
rcvdbyte=76 sentpkt=1 rcvdpkt=1 utmaction="allow" countapp=1 osname="Linux"
mastersrcmac="1c:87:2c:b6:a8:49" srcmac="1c:87:2c:b6:a8:49" srcserver=0 utmref=65534-66
```

## To verify local-bridge traffic statistics when a client is connecting to a local-bridge mode SSID:

### 1. Go to *Log & Report > System Events* and select *WiFi Events*.

The *Signal* and *Signal/Noise* columns show the signal strength and signal-to-noise ratio for each applicable client.

Date/Time	Level	Action	Message	SSID	Channel	Signal	Signal/Noise
2020/05/29 10:44:44	████████	sta-wl-bridge-traffic-stats	Traffic stats for bridge ssid client 00:1e5dfb1:63	FOS_QA_Starr-140E-LB		-53	51
2020/05/29 10:39:44	████████	sta-wl-bridge-traffic-stats	Traffic stats for bridge ssid client 00:1e5dfb1:63	FOS_QA_Starr-140E-LB		-54	50
2020/05/29 10:34:44	████████	sta-wl-bridge-traffic-stats	Traffic stats for bridge ssid client 00:1e5dfb1:63	FOS_QA_Starr-140E-LB		-54	51
2020/05/29 10:29:44	████████	sta-wl-bridge-traffic-stats	Traffic stats for bridge ssid client 00:1e5dfb1:63	FOS_QA_Starr-140E-LB		-52	52

## 2. WiFi event log messages include the signal and snr values:

```
date=2020-05-26 time=17:48:57 logid="0104043687" type="event" subtype="wireless"
level="information" vd="vdom1" eventtime=1590540537841497433 tz="-0700" logdesc="Traffic
stats for station with bridge wlan" sn="FP231ETF20000455" ap="FP231ETF20000455"
vap="wifi.fap.01" ssid="FOS_QA_Starr-140E-LB-cap-2" srcip=10.128.100.4 user="N/A"
stamac="00:1e:e5:df:b1:63" signal=-53 snr=52 sentbyte=8970016 rcvbyte=985910
nextstat=300 action="sta-wl-bridge-traffic-stats" msg="Traffic stats for bridge ssid
client 00:1e:e5:df:b1:63"
```


## RSSO information for authenticated destination users in logs

FortiGate can use RSSO accounting information from authenticated RSSO users to populate destination users and groups, along with source users and groups.

RSSO user login information can be forwarded by the RADIUS server to the FortiGate that is listening for incoming RADIUS accounting start messages on the RADIUS accounting port. Accounting start messages usually contain the IP address, user name, and user group information. FortiGate uses this information in traffic logs, which include *dstuser* and *dstgroup* fields for user and group destination information .

For instructions on configuring RSSO, see [RADIUS single sign-on agent on page 2914](#).

The three following scenarios show traffic between pc1 and the internet, and pc1 and pc2.

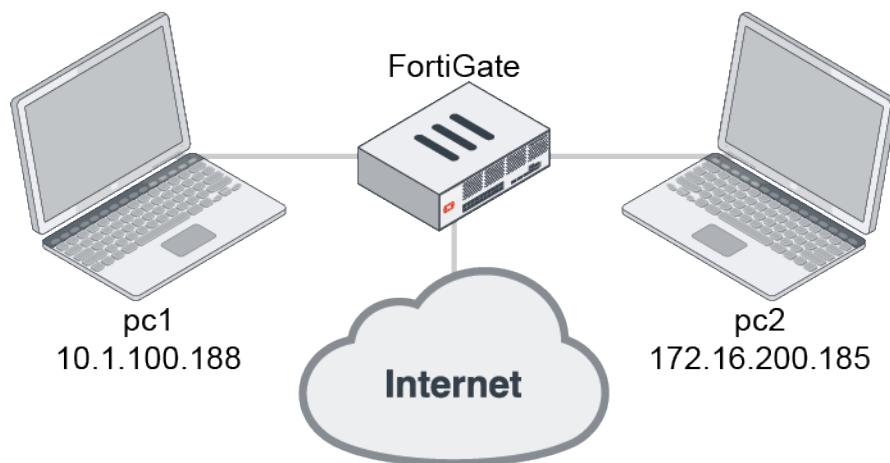

### Scenario 1

In this scenario, RSSO user *test2* in group *rsso-grp1* is authenticated on pc1. Traffic flows from pc1 to the internet.

#### Expected result:

In the logs, user *test2* is shown as the source user in the *rsso-grp1* group.

**To verify the results:**

1. In the GUI, go to **Log & Report > Forward Traffic** and view the details of an entry with **test2** as the source.
2. In the **Source** section, **User** is **test2** and **Group** is the **rsso-grp1**.

The screenshot shows the FortiGate Log & Report interface. The main table displays a list of traffic logs with columns for Date/Time, Source, Device, Destination, Application Name, and Result. The log entry for 2020/05/26 14:37:33 is highlighted. The right-hand pane shows the details for this log entry, including General, Source, Destination, Application Control, and Data sections.

Date/Time	Source	Device	Destination	Application Name	Result
2020/05/26 14:37:33	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	52.38.8.230		
2020/05/26 14:37:29	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	54.153.103.110 (ups.analytics.yahoo.com)		
2020/05/26 14:37:28	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.217.14.226 (www.googleadservices.com)		
2020/05/26 14:37:25	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	216.58.217.35 (ssl.gstatic.com)		
2020/05/26 14:37:23	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	23.111.11.182 (a.opnmstr.com)		2.54 MB / 71.3
2020/05/26 14:37:22	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.217.3.195 (fonts.gstatic.com)		1.00 MB / 4.17
2020/05/26 14:37:13	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	172.16.200.131		14.79 MB / 28
2020/05/26 14:37:09	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.16		256 B / 224 B
2020/05/26 14:37:09	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.16		256 B / 224 B
2020/05/26 14:37:09	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.16		256 B / 224 B
2020/05/26 14:36:47	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.134		104.83 KB / 2
2020/05/26 14:36:43	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.131		132.01 MB / 3
2020/05/26 14:36:33	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	10.6.30.16		
2020/05/26 14:36:16	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	172.16.200.142		3.42 MB / 1.96
2020/05/26 14:36:06	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	172.16.200.142		
2020/05/26 14:36:06	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	20.189.79.72		76 B / 76 B
2020/05/26 14:36:50	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	172.16.200.194		11.73 MB / 22
2020/05/26 14:36:18	10.1.100.210	GENERIC/PPPO	10.6.30.201		84 B / 84 B
2020/05/26 14:36:13	10.1.100.251	win2012-fsso-3.Fortinet-FSSO.COM	172.16.200.131		14.73 MB / 28
2020/05/26 14:34:59	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B
2020/05/26 14:34:58	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B
2020/05/26 14:34:58	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B
2020/05/26 14:34:57	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B
2020/05/26 14:34:55	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B
2020/05/26 14:34:54	test2 (10.1.100.188)	win7-2-A.Fortinet-FSSO.COM	172.16.200.185		290 B / 508 B

**Log Details**

- General**
  - Date: 2020/05/26
  - Time: 14:37:33
  - Duration: 14s
  - Session ID: 48958
  - Virtual Domain: vdom1
  - NAT Translation: Source
- Source**
  - IP: 10.1.100.188
  - NAT IP: 172.16.200.1
  - Source Port: 49891
  - Country/Region: Reserved
  - Primary MAC: 00:0c:29:44:be:b9
  - Source Interface: port10
  - Source Host Name: win7-2-A.Fortinet-FSSO.COM
  - OS Name: Windows
  - User: test2
  - Group: rsso-grp1
- Destination**
  - IP: 52.38.8.230
  - Port: 443
  - Country/Region: United States
  - Destination Interface: port9
- Application Control**
  - Application Name: unscanned
  - Risk: undefined
  - Protocol: B
  - Service: HTTPS
- Data**
  - Received Bytes: 5 KB
  - Sent Bytes: 3 KB
  - Sent Packets: 16
- Action**
  - Action: TCP reset from client
  - Reason: null
  - Rate: 1/s

3. The log message shows the user and group:

```
10: date=2020-05-25 time=15:34:43 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1590446083718007055 tz="-0700" srcip=10.1.100.188
srcname="win7-2-A.Fortinet-FSSO.COM" srcport=56982 srcintf="port10"
srcintfrole="undefined" dstip=172.217.3.195 dstport=443 dstintf="port9"
dstintfrole="undefined" srccountry="Reserved" dstcountry="United States"
sessionid=120651 proto=17 action="accept" policyid=1 policytype="policy"
poluid="d130f886-9ec6-51ea-206e-8c561c5244c6" policyname="pol1" user="test2"
group="rsso-grp1" authserver="vdom1" service="udp/443"trandisp="snat"
transip=172.16.200.1 transport=56982 duration=181 sentbyte=2001 rcvdbyte=1820 sentpkt=6
rcvdpkt=4 appcat="unscanned" sentdelta=0 rcvddelta=0 srchwvender="VMware"
osname="Windows" srcswversion="7" mastersrcmac="00:0c:29:44:be:b9"
srcmac="00:0c:29:44:be:b9" srcserver=0
```

**Scenario 2**

In this scenario, RSSO user **test2** is authenticated on pc1. Traffic is initialized on pc2 (172.16.200.185) going to pc1 (10.1.100.188).

**Expected result:**

In the logs, user **test2** is shown as the destination user (**dstuser**). No destination group (**dstgroup**) is logged because no RSSO user is logged in on pc2, so the traffic from pc2 is unauthenticated.

**To verify the results:**

1. In the GUI, go to **Log & Report > Forward Traffic** and view the details of an entry with 172.16.200.185 (pc2) as the source.

2. In the *Other* section, *Destination User* is *test2* and no destination group is shown.

DateTime	Source	Device	Destination	Application N.	Result	Policy ID	Log Details
20200526 14:56:55	test2 (10.1.100.180)	win7-2-A.Fortinet.F880.COM	99.86.38.97 (embeds.driftn.com)			port1 (1)	<b>Destination</b> IP 10.1.100.180 Port 80 Destination MAC 00:0c:29:44:be:b9 Country/Region Reserved Destination Interface port10
20200526 14:56:44	172.16.200.185		10.1.100.188		✓ 328 B / 563 B	pol2 (2)	<b>Application Control</b> Application Name Category unscanned Risk undefined Protocol 6 Service HTTP
20200526 14:56:43	172.16.200.185		10.1.100.188		✓ 328 B / 563 B	pol2 (2)	<b>Data</b> Received Bytes 563 B Received Packets 5 Sent Bytes 328 B Sent Packets 6
20200526 14:56:42	172.16.200.185		10.1.100.188		✓ 328 B / 563 B	pol2 (2)	<b>Action</b> Action Accept session close Policy ID pol2 (2) Policy 2894368:Seca51cap:64c UUID ec5a6c1d5943 Policy Type Forward
20200526 14:56:38	172.16.200.185		10.1.100.188		✓ 328 B / 563 B	pol2 (2)	<b>Security</b> Level [     ]
20200526 14:56:37	172.16.200.185		10.1.100.188		✓ 328 B / 563 B	pol2 (2)	<b>Cellular</b> Service HTTP
							<b>Other</b> Log ID 0000000013 Type traffic Sub Type forward Log event original 1600530197271602500 Timestamp -0700 Source Interface Role undefined Destination Interface Role undefined Policy Name pol2 Destination User test2 Destination Authentication Server Destination Hardware Vendor VMware Destination OS Name Windows Destination Software Version 7

3. The log message shows the destination user:

```
1: date=2020-05-22 time=07:38:06 logid="0000000020" type="traffic" subtype="forward"
level="notice" vd="root" eventtime=1590158286585506922 tz="-0700" srcip=172.16.200.185
identifier=1 srcintf="port9" srcintfrole="undefined" dstip=10.1.100.188 dstintf="port10"
dstintfrole="undefined" srccountry="Reserved" dstcountry="Reserved" sessionid=4395
proto=1 action="accept" policyid=3 policytype="policy" poluuid="d4f18e1e-9c36-51ea-6ec0-
3a354d5910ee" policyname="pol2" dstuser="test2" dstauthserver="root" service="PING"
trandisp="snat" transip=10.1.100.1 transport=0 duration=128 sentbyte=7620 rcvdbyte=5220
sentpkt=127 rcvdpkt=87 appcat="unscanned" sentdelta=7620 rcvddelta=5220
```

## Scenario 3

In this scenario, RSSO user *test2* in group *rsso-grp1* is authenticated on pc1, and user *test3* in group *rsso-grp2* is authenticated on pc2. Traffic flows from pc2 to pc1.

### Expected result:

In the logs, user *test3* is shown as the source user in the *rsso-grp1* group. User *test2* is shown as destination user (*dstuser*) in the *rsso-grp1* destination group (*dstgroup*). The destination group is logged because an RSSO user is logged in to pc2.

### To verify the results:

1. In the GUI, go to *Log & Report > Forward Traffic* and view the details of an entry with 172.16.200.185 (pc2) as the source.
2. In the *Source* section, *User* is *test3* and *Group* is the *rsso-grp2*. In the *Other* section, *Destination User* is *test2* and *Destination Group* is *rsso-grp1*.

Date/Time	Source	Device	Destination	Application N...	Result	Policy...	Log Details
2020/05/26 14:5...	test2 (10.1.100.188)	win7-2A-FortinetFSBO.COM	13.224.13.67 (ambada.difcon.e...		✓ 1.78 KB / 1.55 KB	pol1 (1)	Log Details Source Interface: port0 User: test2 Group: rrsso-grp2
2020/05/26 14:5...	10.1.100.251	win2012-fsoo-3-FortinetFSBO.C...	10.8.36.16			dns (2)	Destination IP: 10.1.100.188 Port: 80 Destination MAC: 00:0c:29:44:be:b9 Country/Region: Reserved Destination Interface: port10
2020/05/26 14:5...	10.1.100.251	win2012-fsoo-3-FortinetFSBO.C...	172.16.200.142			dns (2)	
2020/05/26 14:5...	10.1.100.251	win2012-fsoo-3-FortinetFSBO.C...	10.8.36.124			dns (2)	
2020/05/26 14:5...	10.1.100.251	win2012-fsoo-3-FortinetFSBO.C...	10.8.36.131			dns (2)	
2020/05/26 14:5...	test2 (10.1.100.188)	win7-2A-FortinetFSBO.COM	172.16.200.16		✓ 197 B / 226 B	pol1 (1)	
2020/05/26 14:5...	test2 (10.1.100.188)	win7-2A-FortinetFSBO.COM	172.16.200.16		✓ 197 B / 226 B	pol1 (1)	
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Application Control Application Name: undefined Category: unscanned Risk: undefined Protocol: 6 Service: HTTP
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Data Received Bytes: 563 B Received Packets: 5 Sent Bytes: 328 B Sent Packets: 6
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Action Action: Accept session close Policy ID: pol2 (3) Policy: 5894c368-9eca-51ea-fb4c-ec5a6c1d5043 UID: ec5a6c1d5043 Policy Type: Firewall
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Security Level: [     ]
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Session Service: HTTP
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	Other Log ID: 0000000013 Type: traffic Sub Type: Forward Log event original timestamp: 1590528803131680000 Timezone: -0700 Source Interface Role: undefined Destination Interface Role: pol2 Policy Name: vdom1 Authentication Server: vdom1 Destination User: test2 Destination Group: rrsso-grp1 Destination Authentication: vdom1
2020/05/26 14:5...	10.1.100.251	win2012-fsoo-3-FortinetFSBO.C...	172.16.200.131		✓ 15.25 MB / 203.33...	dns (2)	
2020/05/26 14:5...	test2 (172.16.200...		10.1.100.188		✓ 328 B / 563 B	pol2 (3)	
2020/05/26 14:5...	test2 (10.1.100.188)	win2012-fsoo-3-FortinetFSBO.C...	172.16.200.142		✓ 3.42 KB / 1.99 KB	dns (2)	
2020/05/26 14:5...	test2 (10.1.100.188)	win7-2A-FortinetFSBO.COM	60.147.60.15 (ads.yahoo.com)		✓ 2.44 KB / 1.71 KB	pol1 (1)	


### 3. The log message shows both the source and the destination users and groups:

```
8: date=2020-05-25 time=14:23:07 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1590441786958007914 tz="-0700" srcip=172.16.200.185
srcport=64096 srcintf="port9" srcintfrole="undefined" dstip=10.1.100.188 dstport=80
dstintf="port10" dstintfrole="undefined" srccountry="Reserved" dstcountry="Reserved"
sessionid=112445 proto=6 action="close" policyid=3 policytype="policy"
poluid="5894c368-9eca-51ea-fb4c-ec5a6c1d5043" policyname="pol2" user="test3"
group="rsso-grp2" authserver="vdom1" dstuser="test2" dstgroup="rsso-grp1"
dstauthserver="vdom1" service="HTTP" transip="snat" transip=10.1.100.1 transport=64096
duration=1 sentbyte=328 rcvbyte=563 sentpkt=6 rcvdpkt=5 appcat="unscanned"
dsthwvendor="VMware" dstosname="Windows" dstswversion="7"
masterdstmac="00:0c:29:44:be:b9" dstmac="00:0c:29:44:be:b9" dstserver=0
```

## Destination user information in UTM logs

The `dstuser` field in UTM logs records the username of a destination device when that user has been authenticated on the FortiGate.

In the following example topology, the user, bob, is authenticated on a client computer. The user, guest, is authenticated on the server. Log are collected for AV and IPS in flow inspection mode. Logs are collected for application control and web filter in proxy mode.

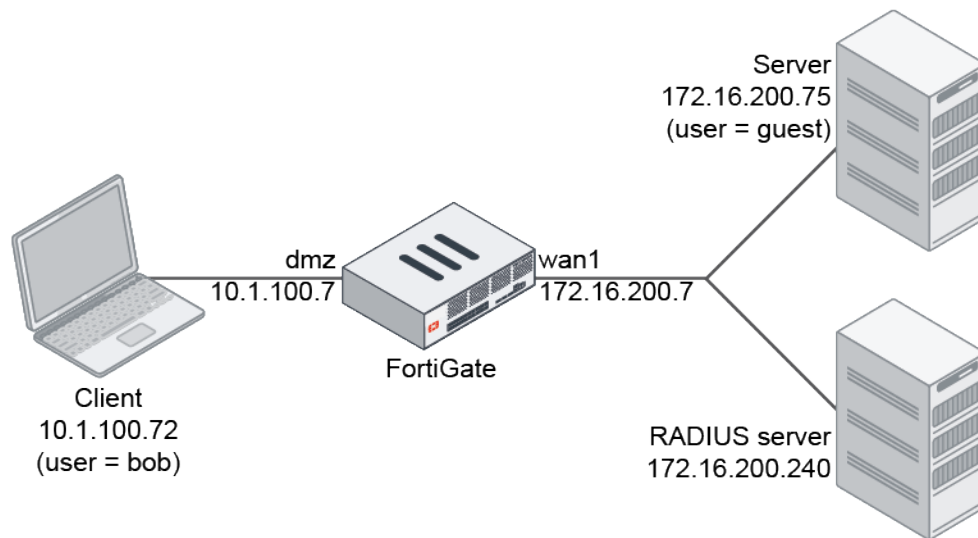**To configure the RADIUS user and user groups:****1. Configure the RADIUS server:**

```
config user radius
  edit "Ubuntu_docker"
    set server "172.16.200.240"
    set secret *****
  next
end
```

**2. Configure the local user:**

```
config user local
  edit "guest"
    set type password
    set passwd *****
  next
end
```

**3. Configure the RADIUS user groups:**

```
config user group
  edit "RADIUS_User_Group"
    set member "Ubuntu_docker"
  next
  edit "Local_User"
    set member "guest"
  next
end
```

## Flow inspection mode

### To verify AV and IPS logs in flow mode:

#### 1. Configure the firewall policies:

```
config firewall policy
  edit 1
    set name "WAN_out"
    set srcintf "dmz"
    set dstintf "wan1"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set ssl-ssh-profile "deep-inspection"
    set av-profile "g-default"
    set ips-sensor "sensor-11"
    set nat enable
    set groups "RADIUS_User_Group" "Local_User"
  next
  edit 3
    set name "WAN_in"
    set srcintf "wan1"
    set dstintf "dmz"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set logtraffic all
    set nat enable
    set groups "RADIUS_User_Group" "Local_User"
  next
end
```

#### 2. Verify the AV log:

```
date=2021-09-14 time=16:37:25 eventtime=1631662646131356720 tz="-0700"
logid="0211008192" type="utm" subtype="virus" eventtype="infected" level="warning"
vd="vdom1" policyid=1 msg="File is infected." action="blocked" service="HTTP"
sessionid=4613 srcip=10.1.100.72 dstip=172.16.200.75 srcport=60086 dstport=80
srcintf="dmz" srcintfrole="undefined" dstintf="wan1" dstintfrole="undefined"
srcuuid="877d43a4-c2f9-51eb-f78f-e09794924d8a" dstuuid="877d43a4-c2f9-51eb-f78f-
e09794924d8a" proto=6 direction="incoming" filename="eicar.com" quarskip="Quarantine-
disabled" virus="EICAR_TEST_FILE" viruscat="Virus" dtype="av-engine"
ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172
url="http://172.16.200.75/eicar.com" profile="g-default" user="bob" group="RADIUS_User_
Group" authserver="Ubuntu_docker" dstuser="guest" agent="Wget/1.17.1"
analyticsscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f"
analyticsssubmit="false" crscore=50 craction=2 crlevel="critical"
```



### 3. Verify the IPS log:

```
date=2021-09-14 time=16:56:06 eventtime=1631663765992499880 tz="-0700"
logid="0419016384" type="utm" subtype="ips" eventtype="signature" level="alert"
vd="vdom1" severity="info" srcip=10.1.100.72 srccountry="Reserved" dstip=172.16.200.75
srcintf="dmz" srcintfrole="undefined" dstintf="wan1" dstintfrole="undefined"
sessionid=7881 action="dropped" proto=6 service="HTTP" policyid=1
attack="Eicar.Virus.Test.File" srcport=60092 dstport=80 direction="incoming"
attackid=29844 profile="sensor-11" ref="http://www.fortinet.com/ids/VID29844" user="bob"
group="RADIUS_User_Group" authserver="Ubuntu_docker" dstuser="guest"
incidentserialno=17825794 attackcontextid="2/2"
attackcontext="dGVudC1mZW5ndGg6IDY4DQpLZWVwLUFsaXZlOiB0aW1lb3V0PTUsIG1heD0xMDANCkNvbW51Y
3Rpb246IEtlZXAtQWxpdmUNCkNvbRlbnQtVHlwZTogYXBwbGljYXRpb24veC1tc2Rvcylwcm9ncmFtDQoNC1glT
yFQJUBBUFs0XFBaWDU0KFBektDQyk3fSRFSUNBUi1TVEFOREFSRC1BTlRJVklSVVMtVEVTVClGSUxFIGRlK0gqP
C9QQUNLRVQ+"

```

## Proxy inspection mode

### To verify application control and web filter logs in proxy mode:

#### 1. Configure the firewall policies:

```
config firewall policy
  edit 1
    set name "WAN_out"
    set srcintf "dmz"
    set dstintf "wan1"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set inspection-mode proxy
    set ssl-ssh-profile "deep-inspection"
    set av-profile "g-default"
    set application-list "g-default"
    set webfilter-profile "1"
    set nat enable
    set groups "RADIUS_User_Group" "Local_User"
  next
  edit 3
    set name "WAN_in"
    set srcintf "wan1"
    set dstintf "dmz"
    set action accept
    set srcaddr "all"
    set dstaddr "all"
    set schedule "always"
    set service "ALL"
    set inspection-mode proxy
    set logtraffic all
    set nat enable
    set groups "RADIUS_User_Group" "Local_User"
  next
end

```

**2. Verify the application control log:**

```
date=2021-09-14 time=17:05:45 eventtime=1631664345570951500 tz="-0700"
logid="1059028704" type="utm" subtype="app-ctrl" eventtype="signature"
level="information" vd="vdom1" appid=38783 user="bob" group="RADIUS_User_Group"
authserver="Ubuntu_docker" dstuser="guest" srcip=10.1.100.72 dstip=172.16.200.75
srcport=60098 dstport=80 srcintf="dmz" srcintfrole="undefined" dstintf="wan1"
dstintfrole="undefined" proto=6 service="HTTP" direction="outgoing" policyid=1
sessionid=10871 applist="g-default" action="pass" appcat="General.Interest" app="Wget"
hostname="172.16.200.75" incidentserialno=17825796 url="/eicar.com"
msg="General.Interest: Wget," apprisk="low"
```

**3. Verify the web filter log:**

```
date=2021-09-14 time=17:14:46 eventtime=1631664886585770420 tz="-0700"
logid="0315012546" type="utm" subtype="webfilter" eventtype="urlfilter"
level="information" vd="vdom1" urlfilteridx=1 urlfilterlist="Auto-webfilter-urlfilter_
caex00jl5" policyid=1 sessionid=15251 user="bob" group="RADIUS_User_Group"
authserver="Ubuntu_docker" dstuser="guest" srcip=10.1.100.72 srcport=60106 srcintf="dmz"
srcintfrole="undefined" srcuuid="877d43a4-c2f9-51eb-f78f-e09794924d8a"
dstip=172.16.200.75 dstport=80 dstintf="wan1" dstintfrole="undefined" dstuuid="877d43a4-
c2f9-51eb-f78f-e09794924d8a" proto=6 service="HTTP" hostname="172.16.200.75" profile="1"
action="passthrough" reqtype="direct" url="http://172.16.200.75/eicar.com" sentbyte=149
rcvbyte=0 direction="outgoing" msg="URL was allowed because it is in the URL filter
list"
```

## Sample logs by log type

This topic provides a sample raw log for each subtype and the configuration requirements.

### Traffic Logs > Forward Traffic

#### Log configuration requirements

```
config firewall policy
    edit 1
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic all
        set application-list "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

## Sample log

```
date=2019-05-10 time=11:37:47 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557513467369913239 srcip=10.1.100.11 srcport=58012
srcintf="port12" srcintfrole="undefined" dstip=23.59.154.35 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluuid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=105048
proto=6 action="close" policyid=1 policytype="policy" service="HTTP" dstcountry="Canada"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=58012 appid=34050
app="HTTP.BROWSER_Firefox" appcat="Web.Client" apprisk="elevated" applist="g-default"
duration=116 sentbyte=1188 rcvbyte=1224 sentpkt=17 rcvpkt=16 utmaction="allow" countapp=1
osname="Ubuntu" mastersrcmac="a2:e9:00:ec:40:01" srcmac="a2:e9:00:ec:40:01" srcserver=0
utmref=65500-742
```

## Traffic Logs > Local Traffic

### Log configuration requirements

```
config log setting
    set local-in-allow enable
    set local-in-deny-unicast enable
    set local-in-deny-broadcast enable
    set local-out enable
end
```

## Sample log

```
date=2019-05-10 time=11:50:48 logid="0001000014" type="traffic" subtype="local"
level="notice" vd="vdom1" eventtime=1557514248379911176 srcip=172.16.200.254 srcport=62024
srcintf="port11" srcintfrole="undefined" dstip=172.16.200.2 dstport=443 dstintf="vdom1"
dstintfrole="undefined" sessionid=107478 proto=6 action="server-rst" policyid=0
policytype="local-in-policy" service="HTTPS" dstcountry="Reserved" srccountry="Reserved"
trandisp="noop" app="Web Management(HTTPS)" duration=5 sentbyte=1247 rcvbyte=1719 sentpkt=5
rcvpkt=6 appcat="unscanned"
```

## Traffic Logs > Multicast Traffic

### Log configuration requirements

```
config firewall multicast-policy
    edit 1
        set dstaddr 230-1-0-0
        set dstintf port3
        set srcaddr 172-16-200-0
        set srcintf port25
        set action accept
        set log enable
    next
end

config system setting
    set multicast-forward enable
end
```

## Sample log

```
date=2019-03-31 time=06:42:54 logid="0002000012" type="traffic" subtype="multicast"
level="notice" vd="vdom1" eventtime=1554039772 srcip=172.16.200.55 srcport=60660
srcintf="port25" srcintfrole="undefined" dstip=230.1.1.2 dstport=7878 dstintf="port3"
dstintfrole="undefined" sessionid=1162 proto=17 action="accept" policyid=1
policytype="multicast-policy" service="udp/7878" dstcountry="Reserved" srccountry="Reserved"
trandisp="noop" duration=22 sentbyte=5940 rcvbyte=0 sentpkt=11 rcvpkt=0 appcat="unscanned"
```

## Traffic Logs > Sniffer Traffic

### Log configuration requirements

```
config firewall sniffer
    edit 3
        set logtraffic all
        set interface "port1"
        set ips-sensor-status enable
        set ips-sensor "sniffer-profile"
    next
end
```

### Sample log

```
date=2019-05-10 time=14:18:54 logid="0004000017" type="traffic" subtype="sniffer"
level="notice" vd="root" eventtime=1557523134021045897 srcip=208.91.114.4 srcport=50463
srcintf="port1" srcintfrole="undefined" dstip=104.80.88.154 dstport=443 dstintf="port1"
dstintfrole="undefined" sessionid=2193276 proto=6 action="accept" policyid=3
policytype="sniffer" service="HTTPS" dstcountry="United States" srccountry="Canada"
trandisp="snat" transip=0.0.0.0 transport=0 duration=10 sentbyte=0 rcvbyte=0 sentpkt=0
rcvpkt=0 appcat="unscanned" utmaction="allow" countips=1 crscore=5 craction=32768
sentdelta=0 rcvddelta=0 utmref=65162-7772
```

```
config system global
    set log-uuid-address enable
end
```

```
config firewall sniffer
    edit 1
        set logtraffic all
        set ipv6 enable
        set interface "port3"
        set ip-threatfeed-status enable
        set ip-threatfeed "g-source"
    next
end
```

### Sample log

```
1: date=2021-01-26 time=15:51:37 eventtime=1611705097880421908 tz="-0800" logid="0004000017"
type="traffic" subtype="sniffer" level="notice" vd="vd1" srcip=10.1.100.12 srcport=34604
srcintf="port3" srcintfrole="undefined" dstip=172.16.200.55 dstport=80 dstintf="port3"
dstintfrole="undefined" srcthreadfeed="g-source" srccountry="Reserved" dstcountry="Reserved"
sessionid=30384 proto=6 action="accept" policyid=1 policytype="sniffer" service="HTTP"
```

```
trandisp="snat" transip=0.0.0.0 transport=0 duration=0 sentbyte=0 rcvdbyte=0 sentpkt=0  
rcvdpkt=0 appcat="unscanned"
```

### Event Logs > SD-WAN Events

#### Log configuration requirements

```
config log eventfilter  
    set event enable  
    set sdwan enable  
end
```

#### Sample log

```
date=2020-03-29 time=16:41:30 logid="0113022923" type="event" subtype="sdwan" level="notice"  
vd="root" eventtime=1585525290513555981 tz="-0700" logdesc="Virtual WAN Link status"  
eventtype="Health Check" healthcheck="ping1" slatargetid=1 oldvalue="1" newvalue="2"  
msg="Number of pass member changed."
```

```
date=2020-03-29 time=16:51:27 logid="0113022925" type="event" subtype="sdwan" level="notice"  
vd="root" eventtime=1585525888177637570 tz="-0700" logdesc="Virtual WAN Link SLA  
information" eventtype="SLA" healthcheck="ping1" slatargetid=1 interface="R150" status="up"  
latency="0.013" jitter="0.001" packetloss="100.000%" inbandwidth="0kbps"  
outbandwidth="0kbps" bibandwidth="0kbps" slamap="0x0" metric="packetloss" msg="Health Check  
SLA status. SLA failed due to being over the performance metric threshold."
```

### Event Logs > System Events

#### Log configuration requirements

```
config log eventfilter  
    set event enable  
    set system enable  
end
```

#### Sample log

```
date=2019-05-13 time=11:20:54 logid="0100032001" type="event" subtype="system"  
level="information" vd="vdom1" eventtime=1557771654587081441 logdesc="Admin login  
successful" sn="1557771654" user="admin" ui="ssh(172.16.200.254)" method="ssh"  
srcip=172.16.200.254 dstip=172.16.200.2 action="login" status="success" reason="none"  
profile="super_admin" msg="Administrator admin logged in successfully from ssh  
(172.16.200.254) "
```

### Event Logs > Router Events

#### Log configuration requirements

```
config log eventfilter  
    set event enable  
    set router enable  
end
```

```
config router bgp
    set log-neighbour-changes enable
end

config router ospf
    set log-neighbour-changes enable
end
```

### Sample log

```
date=2019-05-13 time=14:12:26 logid="0103020301" type="event" subtype="router"
level="warning" vd="root" eventtime=1557781946677737955 logdesc="Routing log" msg="OSPF:
REC[V[Hello]: From 31.1.1.1 via port9:172.16.200.1: Invalid Area ID 0.0.0.0"
```

## Event Logs > VPN Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set vpn enable
end
```

### Sample log

```
date=2019-05-13 time=14:21:42 logid="0101037127" type="event" subtype="vpn" level="notice"
vd="root" eventtime=1557782502722231889 logdesc="Progress IPsec phase 1" msg="progress IPsec
phase 1" action="negotiate" remip=50.1.1.101 locip=50.1.1.100 remport=500 locport=500
outintf="port14" cookies="9091f4d4837ea71c/0000000000000000" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=N/A vpntunnel="test" status="success" init="local"
mode="main" dir="outbound" stage=1 role="initiator" result="OK"
```

## Event Logs > User Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set user enable
end
```

### Sample log

```
date=2019-05-13 time=15:55:56 logid="0102043008" type="event" subtype="user" level="notice"
vd="root" eventtime=1557788156913809277 logdesc="Authentication success" srcip=10.1.100.11
dstip=172.16.200.55 policyid=1 interface="port10" user="bob" group="local-group1"
authproto="TELNET(10.1.100.11)" action="authentication" status="success" reason="N/A"
msg="User bob succeeded in authentication"
```

## Event Logs > Endpoint Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set endpoint enable
end
```

### Sample log

```
date=2019-05-14 time=08:32:13 logid="0107045057" type="event" subtype="endpoint"
level="information" vd="root" eventtime=1557847933900764210 logdesc="FortiClient connection
added" action="add" status="success" license_limit="unlimited" used_for_type=4 connection_
type="sslvpn" count=1 user="skubas" ip=172.18.64.250 name="VAN-200957-PC"
fctuid="52C66FE08F724FE0B116DAD5062C96CD" msg="Add a FortiClient Connection."

date=2019-05-14 time=08:19:38 logid="0107045058" type="event" subtype="endpoint"
level="information" vd="root" eventtime=1557847179037488154 logdesc="FortiClient connection
closed" action="close" status="success" license_limit="unlimited" used_for_type=5
connection_type="sslvpn" count=1 user="skubas" ip=172.18.64.250 name="VAN-200957-PC"
fctuid="52C66FE08F724FE0B116DAD5062C96CD" msg="Close a FortiClient Connection."
```

## Event Logs > HA Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set ha enable
end
```

### Sample log

```
date=2019-05-10 time=09:53:18 logid="0108037894" type="event" subtype="ha" level="critical"
vd="root" eventtime=1557507199208575235 logdesc="Virtual cluster member joined" msg="Virtual
cluster detected member join" vcluster=1 ha_group=0 sn="FG2K5E3916900286"
```

## Event Logs > Security Rating Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set security-rating enable
end
```

### Sample log

```
date=2019-05-13 time=14:40:59 logid="0110052000" type="event" subtype="security-rating"
level="notice" vd="root" eventtime=1557783659536252389 logdesc="Security Rating summary"
auditid=1557783648 audittime=1557783659 auditscore="5.0" criticalcount=1 highcount=6
mediumcount=8 lowcount=0 passedcount=38
```

## Event Logs > WAN Opt & Cache Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set wan-opt enable
end
```

### Sample log

```
date=2019-05-14 time=09:37:46 logid="0105048039" type="event" subtype="wad" level="error"
vd="root" eventtime=1557851867382676560 logdesc="SSL fatal alert sent" session_id=0
policyid=0 srcip=0.0.0.0 srcport=0 dstip=208.91.113.83 dstport=636 action="send" alert="2"
desc="certificate unknown" msg="SSL Alert sent"
```

```
date=2019-05-10 time=15:48:31 logid="0105048038" type="event" subtype="wad" level="error"
vd="root" eventtime=1557528511221374615 logdesc="SSL Fatal Alert received" session_
id=5f88ddd1 policyid=0 srcip=172.18.70.15 srcport=59880 dstip=91.189.89.223 dstport=443
action="receive" alert="2" desc="unknown ca" msg="SSL Alert received"
```

## Event Logs > Wireless

### Log configuration requirements

```
config log eventfilter
    set event enable
    set wireless-activity enable
end

config wireless-controller log
    set status enable
end
```

### Sample log

```
date=2019-05-13 time=11:30:08 logid="0104043568" type="event" subtype="wireless"
level="warning" vd="vdom1" eventtime=1557772208134721423 logdesc="Fake AP on air"
ssid="fortinet" bssid="90:6c:ac:89:e1:fa" aptype=0 rate=130 radioband="802.11n" channel=6
action="fake-ap-on-air" manuf="Fortinet, Inc." security="WPA2 Personal" encryption="AES"
signal=-93 noise=-95 live=353938 age=505 onwire="no" detectionmethod="N/A" stamac="N/A"
apscan="N/A" sndetected="N/A" radioiddetected=0 stacount=0 snclosest="FP320C3X17001909"
radioidclosest=0 apstatus=0 msg="Fake AP On-air fortinet 90:6c:ac:89:e1:fa chan 6 live
353938 age 505"
```

## Event Logs > SDN Connector

### Log configuration requirements

```
config log eventfilter
    set event enable
    set connector enable
end
```



## Sample log

```
date=2019-05-13 time=16:09:43 logid="0112053200" type="event" subtype="connector"
level="information" vd="root" eventtime=1557788982 logdesc="IP address added" cfgobj="aws1"
action="object-add" addr="54.210.36.196" clidobjid="i-0fe5a1ef16bb94796" netid="vpc-97e81cee"
msg="connector object discovered in addr-obj aws1, 54.210.36.196"
```

```
date=2019-05-13 time=16:09:43 logid="0112053201" type="event" subtype="connector"
level="information" vd="root" eventtime=1557788982 logdesc="IP address removed"
cfgobj="aws1" action="object-remove" addr="172.31.31.101" clidobjid="i-0fe5a1ef16bb94796"
netid="vpc-97e81cee" msg="connector object removed in addr-obj aws1, 172.31.31.101"
```

## Event Logs > FortiExtender Events

### Log configuration requirements

```
config log eventfilter
    set event enable
    set fortiextender enable
end
```

## Sample log

```
date=2019-02-20 time=09:57:22 logid="0111046400" type="event" subtype="fortiextender"
level="notice" vd="root" eventtime=1550685442 logdesc="FortiExtender system activity"
action="FortiExtender Authorized" msg="ext SN:FX04DN4N16002352 authorized"
```

```
date=2019-02-20 time=09:51:42 logid="0111046401" type="event" subtype="fortiextender"
level="notice" vd="root" eventtime=1550685102 logdesc="FortiExtender controller activity"
sn="FX04DN4N16002352" ip=11.11.11.2 action="ext session-deauthed" msg="ext
SN:FX04DN4N16002352 deauthorized"
```

```
date=2019-02-20 time=10:02:26 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550685746 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Connected"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" apn="N/A" service="LTE"
msg="FX04DN4N16002352 STATE: sim with imsi:302720502331361 in slot:2 on carrier:Rogers
connected"
```

```
date=2019-02-20 time=10:33:57 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550687636 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Disconnected"
imei="359376060442770" imsi="N/A" iccid="N/A" phonenumber="N/A" carrier="N/A" plan="N/A"
apn="N/A" service="LTE" msg="FX04DN4N16002352 STATE: sim with imsi: in slot:2 on carrier:N/A
disconnected"
```

```
date=2019-02-20 time=10:02:24 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550685744 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Connecting"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" apn="N/A" service="N/A"
msg="FX04DN4N16002352 STATE: sim with imsi:302720502331361 in slot:2 on carrier:Rogers
connecting"
```

```
date=2019-02-20 time=10:47:19 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550688438 logdesc="Remote FortiExtender warning"
```

```

activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Change" imei="N/A" slot=2
msg="FX04DN4N16002352 SIM: SIM2 is inserted"

date=2019-02-20 time=10:57:50 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550689069 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Change" imei="359376060442770"
slot=1 msg="FX04DN4N16002352 SIM: SIM2 is plucked out"

date=2019-02-20 time=12:02:24 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550692942 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Switch" imei="359376060442770"
reason="sim-switch can't take effect due to unavailability of 2 sim cards"
msg="FX04DN4N16002352 SIM: sim-switch can't take effect due to unavailability of 2 sim
cards"

date=2019-02-19 time=18:08:46 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550628524 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Signal Statistics"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenummer="+16045067526" carrier="Rogers" plan="Rogers-plan" service="LTE" sinr="7.0 dB"
rsrp="-89 dBm" rsrq="-16 dB" signalstrength="92 dBm" rssi="-54" temperature="40 C" apn="N/A"
msg="FX04DN4N16002352 INFO: LTE RSSI=-54dBm,RSRP=-89dBm,RSRQ=-
16dB,SINR=7.0dB,BAND=B2,CELLID=061C700F,BW=15MHz,RXCH=1025,TXCH=19025,TAC=8AAC,TEMPERATURE=4
0 C"

date=2019-02-19 time=18:09:46 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550628585 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Data Statistics"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenummer="+16045067526" carrier="Rogers" plan="Rogers-plan" service="LTE" rcvdbyte=7760
sentbyte=3315 msg="FX04DN4N16002352 INFO: SIM2 LTE, rx=7760, tx=3315, rx_diff=2538, tx_
diff=567"

```

## Event Logs > FortiSwitch Events

### Log configuration requirements

```

config log eventfilter
    set event enable
    set switch-controller enable
end

```

### Sample log

```

date=2020-09-28 time=15:37:02 eventtime=1601332622257714795 tz="-0700" logid="0114032695"
type="event" subtype="switch-controller" level="notice" vd="vdom1" logdesc="FortiSwitch
link" user="Fortilink" sn="S248EPTF18001384" name="S248EPTF18001384" msg="port51 Module re-
initialized to recover from ERROR state."

date=2020-09-28 time=15:37:02 eventtime=1601332622255619520 tz="-0700" logid="0114032697"
type="event" subtype="switch-controller" level="warning" vd="vdom1" logdesc="FortiSwitch
switch" user="Fortilink" sn="S248EPTF18001384" name="S248EPTF18001384" msg="FortiLink:
internal echo reply timed out"

date=2020-09-28 time=15:37:01 eventtime=1601332621664809633 tz="-0700" logid="0114032605"
type="event" subtype="switch-controller" level="information" vd="vdom1" logdesc="Switch-

```

```
Controller Tunnel Up" user="Switch-Controller" ui="cu_acd" sn="S248EPTF18001384"
name="S248EPTF18001384" msg="CAPWAP Tunnel Up (169.254.1.3)"

date=2020-09-28 time=15:36:59 eventtime=1601332619501461995 tz="-0700" logid="0114022904"
type="event" subtype="switch-controller" level="notice" vd="vdom1" logdesc="CAPUTP session
status notification" user="Switch-Controller" ui="cu_acd" sn="S248EPTF18001384"
name="S248EPTF18001384" msg="S248EPTF18001384 Connected via session join" action="session-
join" srcip=169.254.1.3

date=2020-09-28 time=15:36:26 eventtime=1601332560434649361 tz="-0700" logid="0114032601"
type="event" subtype="switch-controller" level="information" vd="vdom1" logdesc="Switch-
Controller discovered" user="daemon_admin" ui="cmdbsvr" sn="S524DN4K16000116"
name="S524DN4K16000116" msg="S524DN4K16000116 Discovered"

date=2020-09-28 time=15:36:26 eventtime=1601332560405228924 tz="-0700" logid="0114032601"
type="event" subtype="switch-controller" level="information" vd="vdom1" logdesc="Switch-
Controller discovered" user="daemon_admin" ui="cmdbsvr" sn="S248EPTF18001827"
name="S248EPTF18001827" msg="S248EPTF18001827 Discovered"

date=2020-09-28 time=15:36:26 eventtime=1601332560336851635 tz="-0700" logid="0114032601"
type="event" subtype="switch-controller" level="information" vd="vdom1" logdesc="Switch-
Controller discovered" user="daemon_admin" ui="cmdbsvr" sn="S248EPTF18001384"
name="S248EPTF18001384" msg="S248EPTF18001384 Discovered"
```

## Event Logs > REST API Events

### Log configuration requirements

```
config log setting
    set rest-api-set enable
    set rest-api-get enable
end
```

### Sample log

```
date=2022-02-02 time=15:52:09 eventtime=1643845930263415066 tz="-0800" logid="0116047301"
type="event" subtype="rest-api" level="information" vd="root" logdesc="REST API request
success" user="admin" ui="GUI(192.168.1.69)" method="GET" path="system.usb-log" status="200"
url="/api/v2/monitor/system/usb-log?vdom=root"

date=2022-02-02 time=15:52:06 eventtime=1643845926774931021 tz="-0800" logid="0116047301"
type="event" subtype="rest-api" level="information" vd="root" logdesc="REST API request
success" user="admin" ui="GUI(192.168.1.69)" method="GET" path="license.status" status="200"
url="/api/v2/monitor/license/status?vdom=root"

date=2022-02-02 time=15:52:06 eventtime=1643845926764579729 tz="-0800" logid="0116047301"
type="event" subtype="rest-api" level="information" vd="root" logdesc="REST API request
success" user="admin" ui="GUI(192.168.1.69)" method="GET" path="log.fortianalyzer.setting"
status="200" url="/api/v2/cmdb/log.fortianalyzer/setting?vdom=root"

date=2022-02-02 time=15:52:06 eventtime=1643845926762372766 tz="-0800" logid="0116047301"
type="event" subtype="rest-api" level="information" vd="root" logdesc="REST API request
success" user="admin" ui="GUI(192.168.1.69)" method="GET" path="system.sandbox"
action="connection" status="200" url="/api/v2/monitor/system/sandbox/connection?vdom=root"

date=2022-02-02 time=15:52:06 eventtime=1643845926755869998 tz="-0800" logid="0116047301"
type="event" subtype="rest-api" level="information" vd="root" logdesc="REST API request
```

```
success" user="admin" ui="GUI(192.168.1.69)" method="GET" path="system.firmware"
status="200" url="/api/v2/monitor/system/firmware?vdom=root"
```

## Event Logs > IOC Detection

### Log configuration requirements

```
config log setting
    set local-out enable
    set local-out-ioc-detection enable
end
```

### Sample log

```
date=2021-12-20 time=16:43:54 eventtime=1640047434839814226 tz="-0800" logid="0100020214"
type="event" subtype="system" level="warning" vd="root" logdesc="Locally generated traffic
goes to IoC location" srcip=172.16.200.2 srcport=18047 dstip=223.205.1.54 dstport=514
session_id=23563 proto=6
```

# Corresponding Traffic Log #

```
date=2021-12-20 time=16:45:18 eventtime=1640047518959313316 tz="-0800" logid="0001000014"
type="traffic" subtype="local" level="notice" vd="root" srcip=172.16.200.2 srcport=18047
srcintf="unknown-0" srcintfrole="undefined" dstip=223.205.1.54 dstport=514 dstintf="port2"
dstintfrole="undefined" srccountry="Reserved" dstcountry="Thailand" sessionid=23632 proto=6
action="timeout" policyid=0 service="tcp/514" trandisp="noop" app="tcp/514" duration=17
sentbyte=240 rcvdbyte=0 sentpkt=4 rcvdpkt=0 appcat="unscanned" dsthwvendor="Fortinet"
masterdstmac="e8:1c:ba:c2:86:63" dstmac="e8:1c:ba:c2:86:63" dstserver=0
```

## Security Logs > Antivirus

### Log configuration requirements

```
config antivirus profile
    edit "test-av"
        config http
            set av-scan block
        end
        set av-virus-log enable
        set av-block-log enable
    next
end

config firewall policy
    edit 1
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "test-av"
        set logtraffic utm
```

```

        set nat enable
    next
end

```

## Sample log

```

date=2019-05-13 time=11:45:03 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1557773103767393505 msg="File is
infected." action="blocked" service="HTTP" sessionid=359260 srcip=10.1.100.11
dstip=172.16.200.55 srcport=60446 dstport=80 srcintf="port12" srcintfrole="undefined"
dstintf="port11" dstintfrole="undefined" policyid=4 proto=6 direction="incoming"
filename="eicar.com" quarskip="File-was-not-quarantined." virus="EICAR_TEST_FILE"
dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172
url="http://172.16.200.55/virus/eicar.com" profile="g-default" agent="curl/7.47.0"
analyticscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabbf651fd0f"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"

# Corresponding Traffic Log #
date=2019-05-13 time=11:45:04 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557773104815101919 srcip=10.1.100.11 srcport=60446
srcintf="port12" srcintfrole="undefined" dstip=172.16.200.55 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuid="48420c8a-5c88-51e9-0424-a37f9e74621e" dstuid="187d6f46-
5c86-51e9-70a0-fadcfc349c3e" poluid="3888b41a-5c88-51e9-cb32-1c32c66b4edf" sessionid=359260
proto=6 action="close" policyid=4 policytype="policy" service="HTTP" dstcountry="Reserved"
srccountry="Reserved" transdisp="snat" transip=172.16.200.2 transport=60446 appid=15893
app="HTTP.BROWSER" appcat="Web.Client" apprisk="medium" applist="g-default" duration=1
sentbyte=412 rcvdbyte=2286 sentpkt=6 rcvdpkt=6 wanin=313 wanout=92 lanin=92 lanout=92
utmaction="block" countav=1 countapp=1 crscore=50 craction=2 osname="Ubuntu"
mastersrcmac="a2:e9:00:ec:40:01" srcmac="a2:e9:00:ec:40:01" srcserver=0 utmref=65497-770

```

## Security Logs > Web Filter

### Log configuration requirements

```

config webfilter profile
    edit "test-webfilter"
        set web-content-log enable
        set web-filter-activex-log enable
        set web-filter-command-block-log enable
        set web-filter-cookie-log enable
        set web-filter-applet-log enable
        set web-filter-jscript-log enable
        set web-filter-js-log enable
        set web-filter-vbs-log enable
        set web-filter-unknown-log enable
        set web-filter-referer-log enable
        set web-filter-cookie-removal-log enable
        set web-url-log enable
        set web-invalid-domain-log enable
        set web-ftgd-err-log enable
        set web-ftgd-quota-usage enable
    next
end

config firewall policy
    edit 1

```

```

set name "v4-out"
set srcintf "port12"
set dstintf "port11"
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set service "ALL"
set logtraffic utm
set utm-status enable
set webfilter-profile "test-webfilter"
set nat enable
next
end

```

### Sample log

```

date=2019-05-13 time=16:29:45 logid="0316013056" type="utm" subtype="webfilter"
eventtype="ftgd_blk" level="warning" vd="vdom1" eventtime=1557790184975119738 policyid=1
sessionid=381780 srcip=10.1.100.11 srcport=44258 srcintf="port12" srcintfrole="undefined"
dstip=185.244.31.158 dstport=80 dstintf="port11" dstintfrole="undefined" proto=6
service="HTTP" hostname="morrishittu.ddns.net" profile="test-webfilter" action="blocked"
reqtype="direct" url="/" sentbyte=84 rcvbyte=0 direction="outgoing" msg="URL belongs to a
denied category in policy" method="domain" cat=26 catdesc="Malicious Websites" crscore=30
craction=4194304 crlevel="high"

```

```

# Corresponding traffic log #
date=2019-05-13 time=16:29:50 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557790190452146185 srcip=10.1.100.11 srcport=44258
srcintf="port12" srcintfrole="undefined" dstip=185.244.31.158 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=381780
proto=6 action="close" policyid=1 policytype="policy" service="HTTP" dstcountry="Germany"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=44258 duration=5
sentbyte=736 rcvbyte=3138 sentpkt=14 rcvdpkt=5 appcat="unscanned" utmaction="block"
countweb=1 crscore=30 craction=4194304 osname="Ubuntu" mastersrcmac="a2:e9:00:ec:40:01"
srcmac="a2:e9:00:ec:40:01" srcserver=0 utmref=65497-796

```

## Security Logs > DNS Query

### Log configuration requirements

```

config dnsfilter profile
  edit "dnsfilter_fgd"
    config ftgd-dns
      set options error-allow
    end
    set log-all-domain enable
    set block-botnet enable
  next
end

config firewall policy
  edit 1
    set srcintf "port12"
    set dstintf "port11"

```

```
set srcaddr "all"
set dstaddr "all"
set action accept
set schedule "always"
set service "ALL"
set utm-status enable
set dnsfilter-profile "dnsfilter_fgd"
set logtraffic utm
set nat enable

next
end
```

## Sample log

```
date=2019-05-15 time=15:05:49 logid="1501054802" type="utm" subtype="dns" eventtype="dns-
response" level="notice" vd="vdom1" eventtime=1557957949740931155 policyid=1 sessionid=6887
srcip=10.1.100.22 srcport=50002 srcintf="port12" srcintfrole="undefined"
dstip=172.16.100.100 dstport=53 dstintf="port11" dstintfrole="undefined" proto=17
profile="dnsfilter_fgd" srcmac="a2:e9:00:ec:40:41" xid=57945 qname="changelogs.ubuntu.com"
qtype="AAAA" qtypeval=28 qclass="IN" ipaddr="2001:67c:1560:8008::11" msg="Domain is
monitored" action="pass" cat=52 catdesc="Information Technology"
```

```
date=2019-05-15 time=15:05:49 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1557957949653103543 policyid=1
sessionid=6887 srcip=10.1.100.22 srcport=50002 srcintf="port12" srcintfrole="undefined"
dstip=172.16.100.100 dstport=53 dstintf="port11" dstintfrole="undefined" proto=17
profile="dnsfilter_fgd" srcmac="a2:e9:00:ec:40:41" xid=57945 qname="changelogs.ubuntu.com"
qtype="AAAA" qtypeval=28 qclass="IN"
```

```
# Corresponding traffic log #
date=2019-05-15 time=15:08:49 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557958129950003945 srcip=10.1.100.22 srcport=50002
srcintf="port12" srcintfrole="undefined" dstip=172.16.100.100 dstport=53 dstintf="port11"
dstintfrole="undefined" srcuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=6887
proto=17 action="accept" policyid=1 policytype="policy" service="DNS" dstcountry="Reserved"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=50002 duration=180
sentbyte=67 rcvdbyte=207 sentpkt=1 rcvdpkt=1 appcat="unscanned" utmaction="allow" countdns=1
osname="Linux" mastersrcmac="a2:e9:00:ec:40:41" srcmac="a2:e9:00:ec:40:41" srcserver=0
utmref=65495-306
```

## Security Logs > Application Control

### Log configuration requirements

# log enabled by default in application profile entry

```
config application list
  edit "block-social.media"
    set other-application-log enable
  config entries
    edit 1
      set category 2 5 6 23
      set log enable
    next
  end
```

```

    next
end
config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic utm
        set application-list "block-social.media"
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end

```

## Sample log

```

date=2019-05-15 time=18:03:36 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="information" vd="root" eventtime=1557968615 appid=40568
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="outgoing" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Web.Client" app="HTTPS.BROWSER" action="pass" hostname="www.dailymotion.com"
incidentserialno=1962906680 url="/" msg="Web.Client: HTTPS.BROWSER," apprisk="medium"
scertcname="*.dailymotion.com" scertissuer="DigiCert SHA2 High Assurance Server CA"

```

```

date=2019-05-15 time=18:03:35 logid="1059028705" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="warning" vd="root" eventtime=1557968615 appid=16072
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="incoming" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Video/Audio" app="Dailymotion" action="block" hostname="www.dailymotion.com"
incidentserialno=1962906682 url="/" msg="Video/Audio: Dailymotion," apprisk="elevated"

```

```

date=2019-05-15 time=18:03:35 logid="1059028705" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="warning" vd="root" eventtime=1557968615 appid=16072
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="incoming" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Video/Audio" app="Dailymotion" action="block" hostname="www.dailymotion.com"
incidentserialno=1962906681 url="/" msg="Video/Audio: Dailymotion," apprisk="elevated"

```

```

# Corresponding Traffic Log # date=2019-05-15 time=18:03:41 logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="root" eventtime=1557968619
srcip=10.1.100.22 srcport=50798 srcintf="port10" srcintfrole="lan" dstip=195.8.215.136
dstport=443 dstintf="port9" dstintfrole="wan" poluuid="d8ce7a90-7763-51e9-e2be-741294c96f31"
sessionid=4414 proto=6 action="client-rst" policyid=1 policytype="policy" service="HTTPS"
dstcountry="France" srccountry="Reserved" trandisp="snat" transip=172.16.200.10
transport=50798 appid=16072 app="Dailymotion" appcat="Video/Audio" apprisk="elevated"
applist="block-social.media" appact="drop-session" duration=5 sentbyte=1150 rcvdbyte=7039
sentpkt=13 utmaction="block" countapp=3 devtype="Unknown" devcategory="None"
mastersrcmac="00:0c:29:51:38:5e" srcmac="00:0c:29:51:38:5e" srcserver=0 utmref=0-330

```



## Security Logs > Intrusion Prevention

### Log configuration requirements

```
# log enabled by default in ips sensor

config ips sensor
    edit "block-critical-ips"
        config entries
            edit 1
                set severity critical
                set status enable
                set action block
                set log enable
            next
        end
    next
end

config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic utm
        set ips-sensor "block-critical-ips"
        set nat enable
    next
end
```

### Sample log

```
date=2019-05-15 time=17:56:41 logid="0419016384" type="utm" subtype="ips"
eventtype="signature" level="alert" vd="root" eventtime=1557968201 severity="critical"
srcip=10.1.100.22 srccountry="Reserved" dstip=172.16.200.55 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" sessionid=4017 action="dropped" proto=6
service="HTTP" policyid=1 attack="Adobe.Flash.newfunction.Handling.Code.Execution"
srcport=46810 dstport=80 hostname="172.16.200.55" url="/ips/sig1.pdf" direction="incoming"
attackid=23305 profile="block-critical-ips" ref="http://www.fortinet.com/ids/VID23305"
incidentserialno=582633933 msg="applications3:
Adobe.Flash.newfunction.Handling.Code.Execution," crscore=50 craction=4096
crlevel="critical"

# Corresponding Traffic Log # date=2019-05-15 time=17:58:10 logid="0000000013"
type="traffic" subtype="forward" level="notice" vd="root" eventtime=1557968289
srcip=10.1.100.22 srcport=46810 srcintf="port10" srcintfrole="lan" dstip=172.16.200.55
dstport=80 dstintf="port9" dstintfrole="wan" poluid="d8ce7a90-7763-51e9-e2be-741294c96f31"
sessionid=4017 proto=6 action="close" policyid=1 policytype="policy" service="HTTP"
dstcountry="Reserved" srccountry="Reserved"trandisp="snat" transip=172.16.200.10
transport=46810 duration=89 sentbyte=565 rcvdbyte=9112 sentpkt=9 rcvdpkt=8
```

```
appcat="unscanned" utmaction="block" counttips=1 crscore=50 craction=4096 devtype="Unknown"
devcategory="None" mastersrcmac="00:0c:29:51:38:5e" srcmac="00:0c:29:51:38:5e" srcserver=0
utmref=0-302
```

## Security Logs > Anomaly

### Log configuration requirements

```
config firewall DoS-policy
  edit 1
    set interface "port12"
    set srcaddr "all"
    set dstaddr "all"
    set service "ALL"
    config anomaly
      edit "icmp_flood"
        set status enable
        set log enable
        set action block
        set threshold 50
      next
    end
  next
end
```

### Sample log

```
date=2019-05-13 time=17:05:59 logid="0720018433" type="utm" subtype="anomaly"
eventtype="anomaly" level="alert" vd="vdom1" eventtime=1557792359461869329
severity="critical" srcip=10.1.100.11 srccountry="Reserved" dstip=172.16.200.55
srcintf="port12" srcintfrole="undefined" sessionid=0 action="clear_session" proto=1
service="PING" count=1 attack="icmp_flood" icmpid="0x1474" icmptype="0x08" icmpcode="0x00"
attackid=16777316 policyid=1 policytype="DoS-policy"
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 51 > threshold 50"
crscore=50 craction=4096 crlevel="critical"
```

## Security Logs > Data Leak Prevention

### Log configuration requirements

```
config dlp profile
  edit "dlp-file-type-test"
    set comment ''
    set replacemsg-group ''
    config filter
      edit 1
        set name ''
        set severity medium
        set type file
        set proto http-get http-post ftp
        set filter-by file-type
        set file-type 1
        set archive enable
        set action block
```

```
        next
    end
    set dlp-log enable
next
end

config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic utm
        set dlp-profile "dlp-file-type-test"
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

## Sample log

```
date=2022-02-03 time=17:45:30 eventtime=1643938572487964255 tz="-0800" logid="0954024576"
type="utm" subtype="dlp" eventtype="dlp" level="warning" vd="root" filteridx=1
dlpextra="dlp-file-size11" filtertype="file-type" filtercat="file" severity="medium"
policyid=1 policytype="policy" sessionid=156237 epoch=300501327 eventid=0 srcip=10.1.100.22
srcport=50354 srccountry="Reserved" srcintf="port10" srcintfrole="lan" dstip=52.216.177.83
dstport=443 dstcountry="United States" dstintf="port9" dstintfrole="wan" proto=6
service="HTTPS" filetype="pdf" direction="incoming" action="block"
hostname="fortinetweb.s3.amazonaws.com" url="https://172.16.200.88/dlp/files/fortiauto.pdf"
forwardedfor="192.168.0.99" agent="curl/7.56.0" httpmethod="GET"
referralurl="https://example.com/referer.html" filename="fortiauto.pdf" filesize=285442
profile="dlp-file-type-test" rawdata="x-forwarded-for=192.168.0.99|Response-Content-
Type=application/pdf"
```

### # Corresponding Traffic Log #

```
date=2022-02-03 time=17:45:34 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="root" eventtime=1557967534 srcip=10.1.100.22 srcport=50354
srcintf="port10" srcintfrole="lan" dstip=52.216.177.83 dstport=443 dstintf="port9"
dstintfrole="wan" poluuid="d8ce7a90-7763-51e9-e2be-741294c96f31" sessionid=3423 proto=6
action="server-rst" policyid=1 policytype="policy" service="HTTPS" dstcountry="United
States" srccountry="Reserved" trandisp="snat" transip=172.16.200.10 transport=50354
duration=5 sentbyte=2314 rcvdbyte=5266 sentpkt=33 rcvdpkt=12 appcat="unscanned" wanin=43936
wanout=710 lanin=753 lanout=753 utmaction="block" countdlp=1 crscore=5 craction=262144
crlevel="low" devtype="Unknown" devcategory="None" mastersrcmac="00:0c:29:51:38:5e"
srcmac="00:0c:29:51:38:5e" srcserver=0 utmref=0-152
```

## Security Logs > SSH and Security Logs > SSL

### Log configuration requirements

```
config ssh-filter profile
    edit "ssh-deepscan"
        set block shell
        set log shell
        set default-command-log disable
    next
end

config firewall policy
    edit 1
        set srcintf "port21"
        set dstintf "port23"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssh-filter-profile "ssh-deepscan"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
        set nat enable
    next
end
```

### For SSL-Traffic-log, enable logtraffic all

```
config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

### For SSL-UTM-log

```
#EVENTTYPE="SSL-ANOMALIES"
```

By default, ssl-anomaly-log is enabled.

```
config firewall ssl-ssh-profile
  edit "deep-inspection"
    set comment "Read-only deep inspection profile."
    set server-cert-mode re-sign
    set caname "Fortinet_CA_SSL"
    set untrusted-caname "Fortinet_CA_Untrusted"
    set ssl-anomaly-log enable
    set ssl-exemption-log disable
    set ssl-negotiation-log disable
    set rpc-over-https disable
    set mapi-over-https disable
    set use-ssl-server disable
  next
end

# EVENTTYPE="SSL-EXEMPT"
```

Enable ssl-exemption-log to generate ssl-utm-exempt log.

```
config firewall ssl-ssh-profile
  edit "deep-inspection"
    set comment "Read-only deep inspection profile."
    set server-cert-mode re-sign
    set caname "Fortinet_CA_SSL"
    set untrusted-caname "Fortinet_CA_Untrusted"
    set ssl-anomaly-log enable
    set ssl-exemption-log enable
    set ssl-negotiation-log disable
    set rpc-over-https disable
    set mapi-over-https disable
    set use-ssl-server disable
  next
end

# EVENTTYPE="SSL-negotiation"
```

Enable ssl-negotiation-log to log SSL negotiation. Enable ssl-server-cert-log to log server certificate information. Enable ssl-handshake-log to log TLS handshakes.

```
config firewall ssl-ssh-profile
  edit "deep-inspection"
    set comment "Read-only deep inspection profile."
    set server-cert-mode re-sign
    set caname "Fortinet_CA_SSL"
    set untrusted-caname "Fortinet_CA_Untrusted"
    set ssl-anomaly-log enable
    set ssl-exemption-log enable
    set ssl-negotiation-log enable
    set rpc-over-https disable
    set mapi-over-https disable
    set use-ssl-server disable
    set ssl-server-cert-log enable
    set ssl-handshake-log enable
  next
end
```

## Sample log for SSH

```
date=2019-05-15 time=16:18:17 logid="1601061010" type="utm" subtype="ssh" eventtype="ssh-channel" level="warning" vd="vdom1" eventtime=1557962296 policyid=1 sessionid=344 profile="ssh-deepscan" srcip=10.1.100.11 srcport=43580 dstip=172.16.200.44 dstport=22 srcintf="port21" srcintfrole="undefined" dstintf="port23" dstintfrole="undefined" proto=6 action="blocked" direction="outgoing" login="root" channeltype="shell"
```

# Corresponding Traffic Log #

```
date=2019-05-15 time=16:18:18 logid="0000000013" type="traffic" subtype="forward" level="notice" vd="vdom1" eventtime=1557962298 srcip=10.1.100.11 srcport=43580 srcintf="port21" srcintfrole="undefined" dstip=172.16.200.44 dstport=22 dstintf="port23" dstintfrole="undefined" poluuid="49871fae-7371-51e9-17b4-43c7ff119195" sessionid=344 proto=6 action="close" policyid=1 policytype="policy" service="SSH" dstcountry="Reserved" srccountry="Reserved" trandisp="snat" transip=172.16.200.171 transport=43580 duration=8 sentbyte=3093 rcvbyte=2973 sentpkt=18 rcvpkt=16 appcat="unscanned" utmaction="block" countssh=1 utmref=65535-0
```

## Sample log for SSL

### For SSL-Traffic-log

```
date=2019-05-16 time=10:08:26 logid="0000000013" type="traffic" subtype="forward" level="notice" vd="root" eventtime=1558026506763925658 srcip=10.1.100.66 srcport=38572 srcintf="dmz" srcintfrole="dmz" dstip=104.154.89.105 dstport=443 dstintf="wan1" dstintfrole="wan" poluuid="a17c0a38-75c6-51e9-4c0d-d547347b63e5" sessionid=100 proto=6 action="server-rst" policyid=1 policytype="policy" service="HTTPS" dstcountry="United States" srccountry="Reserved" trandisp="snat" transip=172.16.200.11 transport=38572 duration=5 sentbyte=930 rcvbyte=6832 sentpkt=11 rcvpkt=19 appcat="unscanned" wanin=1779 wanout=350 lanin=754 lanout=754 utmaction="block" countssl=1 crscore=5 craction=262144 crlevel="low" utmref=65467-0
```

### For SSL-UTM-log

#EVENTTYPE="SSL-ANOMALIES"

```
date=2019-03-28 time=10:44:53 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-anomalies" level="warning" vd="vdom1" eventtime=1553795092 policyid=1 sessionid=10796 service="HTTPS" srcip=10.1.100.66 srcport=43602 dstip=104.154.89.105 dstport=443 srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6 action="blocked" msg="Server certificate blocked" reason="block-cert-invalid"
```

```
date=2019-03-28 time=10:51:17 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-anomalies" level="warning" vd="vdom1" eventtime=1553795476 policyid=1 sessionid=11110 service="HTTPS" srcip=10.1.100.66 srcport=49076 dstip=172.16.200.99 dstport=443 srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6 action="blocked" msg="Server certificate blocked" reason="block-cert-untrusted"
```

```
date=2019-03-28 time=10:55:43 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-anomalies" level="warning" vd="vdom1" eventtime=1553795742 policyid=1 sessionid=11334 service="HTTPS" srcip=10.1.100.66 srcport=49082 dstip=172.16.200.99 dstport=443 srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6 action="blocked" msg="Server certificate blocked" reason="block-cert-req"
```

```
date=2019-03-28 time=10:57:42 logid="1700062053" type="utm" subtype="ssl" eventtype="ssl-anomalies" level="warning" vd="vdom1" eventtime=1553795861 policyid=1 sessionid=11424 service="SMTPS" profile="block-unsupported-ssl" srcip=10.1.100.66 srcport=41296
```

```
dstip=172.16.200.99 dstport=8080 srcintf="port2" srcintfrole="undefined" dstintf=unknown-0
dstintfrole="undefined" proto=6 action="blocked" msg="Connection is blocked due to
unsupported SSL traffic" reason="malformed input"
```

```
date=2019-03-28 time=11:00:17 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553796016 policyid=1 sessionid=11554
service="HTTPS" srcip=10.1.100.66 srcport=49088 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="blocked" msg="Server certificate blocked" reason="block-cert-sni-mismatch"
```

```
# EVENTTYPE="SSL-EXEMPT"
```

```
date=2019-03-28 time=11:09:14 logid="1701062003" type="utm" subtype="ssl" eventtype="ssl-
exempt" level="notice" vd="vdom1" eventtime=1553796553 policyid=1 sessionid=12079
service="HTTPS" srcip=10.1.100.66 srcport=49102 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="exempt" msg="SSL connection exempted" reason="exempt-addr"
```

```
date=2019-03-28 time=11:10:55 logid="1701062003" type="utm" subtype="ssl" eventtype="ssl-
exempt" level="notice" vd="vdom1" eventtime=1553796554 policyid=1 sessionid=12171
service="HTTPS" srcip=10.1.100.66 srcport=47390 dstip=50.18.221.132 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="exempt" msg="SSL connection exempted" reason="exempt-ftgd-cat"
```

```
# EVENTTYPE="SSL-NEGOTIATION"
```

```
date=2020-02-07 time=11:10:58 logid="1702062101" type="utm" subtype="ssl" eventtype="ssl-
negotiation" level="warning" vd="vdom1" eventtime=1581102658589415731 tz="-0800"
action="blocked" policyid=1 sessionid=141224 service="HTTPS" profile="deep-inspection-clone"
srcip=10.1.100.66 srcport=33666 dstip=172.16.200.99 dstport=8080 srcintf="port2"
srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
eventsubtype="unexpected-protocol" msg="SSL connection is blocked."
```

```
date=2021-06-17 time=16:55:26 eventtime=1623974126384215772 tz="-0700" logid="1702062103"
type="utm" subtype="ssl" eventtype="ssl-negotiation" level="information" vd="vdom1"
action="info" policyid=1 sessionid=6361 service="HTTPS" profile="deep-inspection-clone"
srcip=10.1.100.11 srcport=48892 dstip=18.140.21.233 dstport=443 srcintf="port2"
srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" srcuid="8666f70e-cfb9-51eb-
4991-9012417d69da" dstuid="8666f70e-cfb9-51eb-4991-9012417d69da" proto=6
sni="www.fortinet.com" eventsubtype="server-cert-info" hostname="www.fortinet.com"
notbefore="2021-03-13T00:00:00Z" notafter="2022-04-13T23:59:59Z" issuer="DigiCert TLS RSA
SHA256 2020 CA1" cn="*.fortinet.com" san="*.fortinet.com;www.fortinet.com;fortinet.com"
sn="000aa00a00000a00000a00a00aa000a0" ski="df9152b605cc18b346efb34de6907275dbdb2b3c"
certhash="1d55cd34a1ed5d3f69bd825a45e04fbd2efba937" keyalgo="rsa" keysize=2048
```

```
date=2021-06-17 time=16:55:26 eventtime=1623974126411127210 tz="-0700" logid="1702062103"
type="utm" subtype="ssl" eventtype="ssl-negotiation" level="information" vd="vdom1"
action="info" policyid=1 sessionid=6361 service="HTTPS" profile="deep-inspection-clone"
srcip=10.1.100.11 srcport=48892 dstip=18.140.21.233 dstport=443 srcintf="port2"
srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" srcuid="8666f70e-cfb9-51eb-
4991-9012417d69da" dstuid="8666f70e-cfb9-51eb-4991-9012417d69da" proto=6 tlsver="tls1.3"
sni="www.fortinet.com" cipher="0x1302" authalgo="rsa" kxproto="ecdhe" kxcurve="secp256r1"
eventsubtype="handshake-done" hostname="www.fortinet.com" handshake="full" mitm="yes"
```

## Troubleshooting

The following topics provide information about troubleshooting logging and reporting:

- [Log-related diagnostic commands on page 3034](#)
- [Backing up log files or dumping log messages on page 3039](#)
- [SNMP OID for logs that failed to send on page 3041](#)

## Log-related diagnostic commands

This topic contains examples of commonly used log-related diagnostic commands. Local logging is handled by the `miglogd` daemon, and remote logging is handled by the `fgtlogd` daemon.

### Log search debugging

The `diagnose debug application miglogd 0x1000` command is used to show log filter strings used by the log search backend. It also shows which log files are searched.

#### To run log search debugging:

```
# diagnose debug application miglogd 0x1000
Debug messages will be on for 28 minutes.
# diagnose debug enable

# Files to be searched:
file_no=65422, start_line=0, end_line=805
file_no=65423, start_line=0, end_line=221
session ID=2, total logs=1028
back ground search. process ID=2913, session_id=2
  start_line=1 view_line=10 pre-fetch-pages=2

back ground search. next log file roll number is: 65422
ID=2, total=1028, checked=806, found=806
on-demand back ground search exit. process ID=2913, session_id=2, status=process_on-demand_
pending
```

### Log filtering

The `execute log filter` command can be used to define and display specific log messages based on the parameters entered.

#### To display all login system event logs:

```
# execute log filter device disk
# execute log filter category event
# execute log filter field action login
# execute log display

Files to be searched:
file_no=65523, start_line=0, end_line=237
file_no=65524, start_line=0, end_line=429
file_no=65525, start_line=0, end_line=411
file_no=65526, start_line=0, end_line=381
file_no=65527, start_line=0, end_line=395
```



```

file_no=65528, start_line=0, end_line=458
file_no=65529, start_line=0, end_line=604
file_no=65530, start_line=0, end_line=389
file_no=65531, start_line=0, end_line=384
session ID=1, total logs=3697
back ground search. process ID=26240, session_id=1
  start_line=1  view_line=10
( action "login" )
ID=1, total=3697, checked=238, found=5
ID=1, total=3697, checked=668, found=13
ID=1, total=3697, checked=1080, found=23
ID=1, total=3697, checked=1462, found=23
ID=1, total=3697, checked=1858, found=23
ID=1, total=3697, checked=2317, found=54
ID=1, total=3697, checked=2922, found=106
ID=1, total=3697, checked=3312, found=111
ID=1, total=3697, checked=3697, found=114

```

## Checking the FortiGate to FortiAnalyzer connection

### To check the FortiGate to FortiAnalyzer connection status:

```

# diagnose test application fgtlogd 1
faz: global , enabled
    server=172.16.200.251, realtime=3, ssl=1, state=connected
    server_log_status=Log is allowed.,
    src=, mgmt_name=FGh_Log_vdom1_172.16.200.251, reliable=0, sni_prefix_type=none,
    required_entitlement=none, region=ca-west-1,
    logsync_enabled:1, logsync_conn_id:65535, seq_no:0
        status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_verified=Y
        SNs: last sn update:56 seconds ago.
            Sn list:
                (FAZ-VMTM2200****,age=56s)
            queue: qlen=0.
filter: severity=6, sz_exclude_list=0
    traffic virus webfilter ips emailfilter anomaly voip dlp app-ctrl waf dns ssh ssl
file-filter icap sctp-f
ilter
subcategory:
    traffic: forward local multicast sniffer ztna
    virus:all subcategories are enabled.
    webfilter:all subcategories are enabled.
    ips:all subcategories are enabled.
    emailfilter:all subcategories are enabled.
    anomaly:all subcategories are enabled.
    voip:all subcategories are enabled.
    dlp:all subcategories are enabled.
    app-ctrl:all subcategories are enabled.
    waf:all subcategories are enabled.
    dns:all subcategories are enabled.
    ssh:all subcategories are enabled.
    ssl:all subcategories are enabled.
    file-filter:all subcategories are enabled.
    icap:all subcategories are enabled.
    sctp-filter:all subcategories are enabled.

```

```
server: global, id=0, ready=1, name=172.16.200.251 addr=172.16.200.251:514
ofstp-state=connected
```

**To collect debug information when FortiAnalyzer is enabled:**

```
# diagnose debug application fgtlogd 0x100

# <2026> __fgtlog_parse_featset()-1680: No featset data in login packet,init the device with
default value
<2026> __on_connect()-1620: ofstp is ready.
<2026> __on_connect()-1621: status connected for global-faz.
<2026> __check_ofstp_certificate()-206: checking sn:FAZVMSTM2200**** vs cert
sn:FAZVMSTM2200****
<2026> __check_ofstp_certificate()-208: Verified the certificate of peer (10.100.88.2) to
match sn=FAZVMSTM2200****
<2026> __faz_post_connection()-249: Certificate verification:enabled, Faz verified:1
<2026> __send_queue_item()-549: Disconnect global-faz until receiving disk usage response.
<2026> __send_queue_item()-555: type=0, cat=0, logcount=0, len=0
<2026> __on_pkt_rcv()-1590: dev=global-faz type=252 pkt_len=1099
<2026> __on_pkt_rcv()-1590: opt=204, opt_len=91
<2026> __on_pkt_rcv()-1590: opt=252, opt_len=996
<2026> __process_hainfo_response()-1206: hainfo opt code=204
<2026> __faz_process_ofstp_resp_hainfo_json()-447: ha mode: standalone
<2026> __is_sn_known()-315: MATCHED: idx:0 sn:FAZVMSTM2200****
<2026> __faz_process_ofstp_resp_hainfo_json()-481: Received SN:FAZVMSTM2200**** should
update:0
<2026> __process_hainfo_response()-1206: hainfo opt code=252
<2026> __faz_process_ofstp_resp_hainfo_struct()-553: ha nmember:1 nvcluster:0 mode:1
<2026> __is_sn_known()-315: MATCHED: idx:0 sn:FAZVMSTM2200****
<2026> __faz_process_ofstp_resp_hainfo_struct()-559: Received SN:FAZVMSTM2200**** should
update:0
<2026> __on_pkt_rcv()-1590: dev=global-faz type=1 pkt_len=1356
<2026> __on_pkt_rcv()-1590: opt=12, opt_len=16
<2026> __on_pkt_rcv()-1590: opt=51, opt_len=9
...
<2026> __build_ack()-867: global-faz ready to send data.
<2026> __process_response()-1152: checking opt code=81
<2026> __process_response()-1152: checking opt code=81
<2026> __process_response()-1152: checking opt code=81
...
<2026> __send_queue_item()-555: type=1, cat=0, logcount=0, len=0
<2026> __send_queue_item()-555: type=7, cat=0, logcount=0, len=58
<2026> __send_queue_item()-555: type=3, cat=10, logcount=1, len=790
<2026> __send_queue_item()-555: type=3, cat=10, logcount=1, len=807
<2026> __on_pkt_rcv()-1590: dev=global-faz type=60 pkt_len=474
...
<2026> __on_pkt_rcv()-1590: opt=80, opt_len=16
<2026> __on_pkt_rcv()-1590: opt=7, opt_len=446
<2026> __on_pkt_rcv()-1590: dev=global-faz type=11 pkt_len=37
...
<2026> __send_queue_item()-555: type=3, cat=0, logcount=1, len=1037
<2026> __send_queue_item()-555: type=3, cat=0, logcount=1, len=1033
```

**To check the FortiGate to FortiGate Cloud connection status:**

```
# diagnose test application fgtlogd 20
Home log server:
  Address: 173.243.132.57:514
Alternative log server:
  Address: 173.243.132.121:514
FazCloud log server:
  Address:
    oftp status: connected
Debug zone info:
  Server IP:          173.243.132.57
  Server port:        514
  Server status:      up
  Server log status:  enabled
  Log quota:          500000000MB
  Log used:           599MB
  Daily volume:       1000000MB
  FDS arch pause:    0
  fams archive pause: 0
```

**locallogd diagnostics****To check real-time log statistics by log type since the miglogd daemon start:**

```
# diagnose test application miglogd 4
info for vdom: root
memory
traffic: logs=18289 len=15921725, Sun=0 Mon=18289 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0
event: logs=286 len=115729, Sun=0 Mon=286 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0
app-ctrl: logs=10018 len=7051278, Sun=0 Mon=10018 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0

disk
traffic: logs=18289 len=15921725, Sun=0 Mon=18289 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0
compressed=1620003
event: logs=280 len=112390, Sun=0 Mon=280 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0 compressed=13157
app-ctrl: logs=10018 len=7051278, Sun=0 Mon=10018 Tue=0 Wed=0 Thu=0 Fri=0 Sat=0
compressed=836906
```

**fgtlogd diagnostics****To check real-time log statistics by log type since the fgtlogd daemon start:**

```
# diagnose test application fgtlogd 3
info for vdom: root
faz
traffic: logs=11763 len=6528820, Sun=2698 Mon=3738 Tue=0 Wed=0 Thu=0 Fri=2523 Sat=2804
compressed=1851354
event: logs=2190 len=891772, Sun=500 Mon=400 Tue=0 Wed=0 Thu=0 Fri=786 Sat=504
compressed=713129
app-ctrl: logs=1 len=692, Sun=0 Mon=0 Tue=0 Wed=0 Thu=0 Fri=1 Sat=0 compressed=384

faz-cloud
traffic: logs=11763 len=6528820, Sun=2698 Mon=3738 Tue=0 Wed=0 Thu=0 Fri=2523 Sat=2804
```

```
event: logs=2190 len=891772, Sun=500 Mon=400 Tue=0 Wed=0 Thu=0 Fri=786 Sat=504
app-ctrl: logs=1 len=692, Sun=0 Mon=0 Tue=0 Wed=0 Thu=0 Fri=1 Sat=0
```

### To check the remote queue and see the maximum buffered memory size:

```
# diagnose test application fgtlogd 41
cache maximum: 19569745(18MB) objects: 0 used: 0(0MB) allocated: 0(0MB)
VDOM:root
Memory queue for: global-faz
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:19569745(18MB) logs:0
Confirm queue for: global-faz
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:19569745(18MB) logs:0
Memory queue for: fds
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:19569745(18MB) logs:0
Confirm queue for: fds
    queue:
        num:0 size:0(0MB) total size:0(0MB) max:19569745(18MB) logs:0
```

## miglogd diagnostics

The miglogd daemon includes a publisher/subscriber framework that separates functions into different daemons. The miglogd daemon is responsible for building and publishing logs, while device-related details are managed by subscriber daemons.

### To enable debugging the miglogd (log daemon) at the proper debug level:

```
# diagnose debug application miglogd <integer>
# diagnose debug enable
```

### To display the status or statistics at the proper debug level:

```
# diagnose test application miglogd <integer>
# diagnose debug enable
```



When using the preceding commands, press **Enter** after `diagnose debug application miglogd` or `diagnose test application miglogd` to view the list of available levels.

---

### To check log statistics to the local/remote log device since the miglogd daemon start:

```
# diagnose test application miglogd 6
mem=4288, disk=4070, alert=0, alarm=0, sys=5513, faz=4307, webt=0, fds=0
interface-missed=208
```

### To check the miglogd daemon number:

```
# diagnose test application miglogd 15
Main miglogd: ID=0, children=2, active-children=2
```

```
ID=1, duration=70465.  
ID=2, duration=70465.
```

### To increase one miglogd child:

```
# diagnose test application miglogd 13  
# diagnose test application miglogd 15  
Main miglogd: ID=0, children=3, active-children=3  
ID=1, duration=70486.  
ID=2, duration=70486.  
ID=3, duration=1.
```

### To decrease one miglogd child:

```
# diagnose test application miglogd 14  
# diagnose test application miglogd 15  
Main miglogd: ID=0, children=2, active-children=2  
ID=1, duration=70604.  
ID=2, duration=70604.
```

## Backing up log files or dumping log messages

When a log issue is caused by a particular log message, it is very help to get logs from that FortiGate. This topic provides steps for using `execute log backup` or dumping log messages to a USB drive.

### Backing up full logs using `execute log backup`

This command backs up all disk log files and is only available on FortiGates with an SSD disk.

Before running `execute log backup`, we recommend temporarily stopping `miglogd` and `reportd`.

### To stop and kill miglogd and reportd:

```
diagnose sys process daemon-auto-restart disable miglogd  
diagnose sys process daemon-auto-restart disable reportd
```

Or

1. Determine the process, or thread, ID (PID) of `miglogd` and `reportd`:

```
# diagnose sys top 10 99
```

2. Kill each process:

```
# diagnose sys kill 9 <PID>
```

### To store the log file on a USB drive:

1. Plug in a USB drive into the FortiGate.
2. Run this command:

```
execute log backup /usb/log.tar
```

**To restart miglogd and reportd:**

```
diagnose sys process daemon-auto-restart enable miglogd
diagnose sys process daemon-auto-restart enable reportd
```

**Dumping log messages****To dump log messages:****1. Enable log dumping for miglogd daemon:**

```
(global) # diagnose test application miglogd 26 1
miglogd(1) log dumping is enabled
```

**2. Display all miglogd dumping status:**

```
global) # diagnose test application miglogd 26 0 255
miglogd(0) log dumping is disabled
miglogd(1) log dumping is enabled
miglogd(2) log dumping is disabled

(global) # diagnose test application miglogd 26 2
miglogd(2) log dumping is enabled

(global) # diagnose test application miglogd 26 0
miglogd(0) log dumping is enabled

(global) # diagnose test application miglogd 26 0 255
miglogd(0) log dumping is enabled
miglogd(1) log dumping is enabled
miglogd(2) log dumping is enabled
```

**3. Let the FortiGate run and collect log messages.****4. List the log dump files:**

```
(global) # diagnose test application miglogd 33
2019-04-17 15:50:02      20828      log-1-0.dat
2019-04-17 15:48:31      4892      log-2-0.dat
```

**5. Back up log dump files to the USB drive:**

```
(global) # diagnose test application miglogd 34

Dumping file miglog1_index0.dat copied to USB disk OK.

Dumping file miglog2_index0.dat copied to USB disk OK.
```

**6. Disable log dumping for miglogd daemon:**

```
(global) # diagnose test application miglogd 26 0
miglogd(0) log dumping is disabled

(global) # diagnose test application miglogd 26 1
miglogd(1) log dumping is disabled

(global) # diagnose test application miglogd 26 2
miglogd(2) log dumping is disabled

(global) # diagnose test application miglogd 26 0 255
```

```
miglogd(0) log dumping is disabled
miglogd(1) log dumping is disabled
miglogd(2) log dumping is disabled
```

## SNMP OID for logs that failed to send

When a syslog server encounters low-performance conditions and slows down to respond, the buffered syslog messages in the kernel might overflow after a certain number of retransmissions, causing the overflowed messages to be lost. OIDs track the lost messages or failed logs.

SNMP query OIDs include log statistics for global log devices:

- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDeviceNumber 1.3.6.1.4.1.12356.101.21.1.1
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceEntryIndex 1.3.6.1.4.1.12356.101.21.2.1.1.1
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceEnabled 1.3.6.1.4.1.12356.101.21.2.1.1.2
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceName 1.3.6.1.4.1.12356.101.21.2.1.1.3
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceSentCount 1.3.6.1.4.1.12356.101.21.2.1.1.4
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceRelayedCount 1.3.6.1.4.1.12356.101.21.2.1.1.5
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceCachedCount 1.3.6.1.4.1.12356.101.21.2.1.1.6
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceFailedCount 1.3.6.1.4.1.12356.101.21.2.1.1.7
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceDroppedCount 1.3.6.1.4.1.12356.101.21.2.1.1.8

Where:

- fgLogDeviceNumber is the number of devices in the table.
- fgLogDeviceEnabled is either 1 or 0, indicating whether the device is enabled.
- fgLogDeviceName is the name of the device.

A FortiGate connected to a syslog server or FortiAnalyzer generates statistics that can be seen using the `diagnose test application syslogd` command:

```
(global) # diagnose test application syslogd 4
syslog=437, nulldev=0, webtrends=0, localout_ioc=258, alarms=0
global log dev statistics:
syslog 0: sent=222, failed=0, cached=0, dropped=0
syslog 1: sent=215, failed=0, cached=0, dropped=0
syslog 2: sent=95, failed=0, cached=0, dropped=0
```

The same statistics are also available in `snmpwalk/snmpget` on the OID 1.3.6.1.4.1.12356.101.21.

```
snmpwalk -v2c -c REGR-SYS 172.16.200.1 1.3.6.1.4.1.12356.101.21
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.1.1.0 = INTEGER: 9
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.0 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.2 = INTEGER: 2
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.3 = INTEGER: 3
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.4 = INTEGER: 4
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.5 = INTEGER: 5
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.6 = INTEGER: 6
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.7 = INTEGER: 7
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.8 = INTEGER: 8
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.0 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.2 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.3 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.4 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.5 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.6 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.7 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.8 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.0 = STRING: "syslog"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.1 = STRING: "syslog2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.2 = STRING: "syslog3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.3 = STRING: "syslog4"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.4 = STRING: "faz"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.5 = STRING: "faz2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.6 = STRING: "faz3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.7 = STRING: "webtrends"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.8 = STRING: "fds"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.0 = Counter32: 254
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.1 = Counter32: 220
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.2 = Counter32: 95
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.4 = Counter32: 282
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.5 = Counter32: 272
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.0 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.1 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.2 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.0 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.1 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.2 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.3 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.4 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.5 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.6 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.7 = Gauge32: 0
```



```
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.8 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.0 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.1 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.2 = Counter32: 73
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.0 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.1 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.2 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.8 = Counter32: 0
```

### To get the type of logging device that is attached to the FortiGate:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.3
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.0 = STRING: "syslog"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.1 = STRING: "syslog2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.2 = STRING: "syslog3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.3 = STRING: "syslog4"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.4 = STRING: "faz"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.5 = STRING: "faz2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.6 = STRING: "faz3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.7 = STRING: "webtrends"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.8 = STRING: "fds"
```

### To get the present state of the logging device that is attached to the FortiGate:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.2
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.0 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.2 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.3 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.4 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.5 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.6 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.7 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.8 = INTEGER: 0
```

### To get the failed log count value:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.7
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.0 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.1 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.2 = Counter32: 73
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.3 = Counter32: 0
```

```
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.8 = Counter32: 0
```

# WAN optimization

Many multi-location enterprise environments reduce costs and consolidate resources by centralizing applications or providing applications in the cloud. Applications that work fine on a local LAN, such as Windows File Sharing (CIFS), email exchange (MAPI), and many others, suffer from bandwidth limitations and latency issues when accessed over a WAN. This results in a loss of productivity and a perceived need for expensive network upgrades. WAN optimization reduces your network overhead and removes unnecessary traffic for a better overall performance experience and eliminates the need for costly WAN link upgrades between data centers and other expensive solutions for your network traffic growth.

FortiOS WAN optimization provides an inexpensive and comprehensive solution that maximizes your WAN performance and provides intelligent bandwidth management and unmatched consolidated security performance.

FortiOS includes license-free WAN optimization on most current FortiGate devices with internal storage that also support SSL offloading.

## Features

The following features are available through WAN optimization:

### Protocol optimization

Protocol optimization is effective for applications designed for the LAN that do not function well on low bandwidth, high latency networks. See [Protocol optimization on page 3053](#) for more information.

### Byte caching

Byte caching improves caching by accelerating the transfer of similar, but not identical content. See [Byte caching on page 3053](#) for more information.

### SSL offloading

SSL is used by many organizations to keep WAN communications private. WAN optimization utilizes the SSL offloading capabilities of the FortiGate FortiASIC hardware to accelerate SSL traffic across the WAN. The FortiGate unit handles SSL encryption and decryption for corporate servers providing SSL encrypted connections over the WAN. See [SSL Offloading on page 3049](#) for more information.

## WAN optimization and HA

You can configure WAN optimization on a FortiGate HA cluster. See [HA on page 3057](#) for more information.

## Secure tunneling

FortiOS WAN optimization supports secure SSL-encrypted tunnels between FortiGate units on the WAN. See [Secure tunneling on page 3051](#) for more information.

## Prerequisites

FortiGate WAN optimization is proprietary to Fortinet Inc.. It will not work with other vendors' WAN optimization or offloading features.

Before you begin to configure WAN optimization, please go through the following steps:

1. To use WAN optimization, your FortiGate unit must support it and not all FortiGate units do. In general, your FortiGate unit must include a hard disk to support these features. See [Feature Platform Matrix](#).
2. If the physical FortiGate has only one hard disk, make sure it is selected for WAN optimization. See [Disk usage on page 3046](#) for more information.
3. For FortiGate-VM, ensure you create two virtual disks besides the boot disk for WAN optimization to work.
4. To be able to configure WAN optimization from the GUI you should begin by going to *System > Feature Visibility* and turning on *WAN Opt. & Cache*.
5. If you enable virtual domains (VDOMs) on the FortiGate unit, WAN optimization is available separately for each VDOM.

At this stage, the following installation and configuration conditions are assumed:

- For WAN optimization you have already successfully installed two or more FortiGate units at various locations across your WAN.
- You have administrative access to the GUI or CLI.
- The FortiGate units are integrated into your WAN or other networks.
- The system time, DNS settings, administrator password, and network interfaces have been configured.
- Firmware, FortiGuard Antivirus, and FortiGuard Antispam updates are completed.
- Your Fortinet products have been registered. Register your Fortinet Inc. products at the Fortinet Technical Support website, <https://support.fortinet.com>.

## Disk usage

Both logging and WAN optimization use hard disk space to save data. In FortiOS, you cannot use the same hard disk for both WAN optimization and logging.

- If the FortiGate has one hard disk, then it can be used for either disk logging or WAN optimization, but not both. By default, the hard disk is used for disk logging.



Only physical FortiGate devices can switch between disk logging and WAN optimization in the case of a single hard disk. FortiGate-VM must have two virtual disks apart from the boot disk for WAN optimization to work.

---

- If the FortiGate has two hard disks, then one disk is always used for disk logging and the other disk is always used for WAN optimization.

On the FortiGate, go to *System > Settings > Disk Settings* to switch between *Local Log* and *WAN Optimization*.

You can also change disk usage from the CLI using the following command:

```
config system storage
  edit <name>
    set usage {log | wanopt}
    set wanopt-mode {mix | wanopt | webcache}
  next
end
```

Option	Description
wanopt-mode	<p>WAN optimization mode:</p> <ul style="list-style-type: none"> <li>• <b>mix</b>: This is the default mode.</li> <li>• <b>wanopt</b>: Recommended if only the WANopt feature is enabled.</li> <li>• <b>webcache</b>: Recommended if only the webcache feature is enabled.</li> </ul> <p>If only one of the two features is being used, using the applicable recommended mode will give a higher cache capacity and improve performance.</p>

Enabling WAN optimization affects more than just disk logging. The following table shows other features affected by the FortiGate disk configuration.

Feature	1 hard disk	2 hard disks
<b>Logging</b>	Not supported	Supported
<b>Report/Historical FortiView</b>	Not supported	Supported
<b>Firewall Packet Capture (Policy Capture and Interface Capture)</b>	Not supported	Supported
<b>AV Quarantine</b>	Not supported	Supported
<b>IPS Packet Capture</b>	Not supported	Supported
<b>DLP Archive</b>	Not supported	Supported
<b>Sandbox DB &amp; Results</b>	FortiSandbox database and results are also stored on disk, but will not be affected by this feature.	
<b>Remote Logging</b>	Remote logging (including logging to FortiAnalyzer and Syslog servers) is not affected by this features.	



Changing the disk setting formats the disk, erases current data stored on the disk, and disables either disk logging or WAN optimization.

The following sections provide information about WAN optimization:

- [Overview on page 3048](#)
- [Example topologies on page 3059](#)

- [Configuration examples on page 3061](#)

## Overview

The following topics provide an overview on WAN optimization:

- [Peers and authentication groups on page 3049](#)
- [Tunnels on page 3050](#)
- [Transparent mode on page 3052](#)
- [Protocol optimization on page 3053](#)
- [Cache service and video caching on page 3054](#)
- [Manual and active-passive on page 3055](#)
- [Monitoring performance on page 3056](#)
- [System and feature operation with WAN optimization on page 3056](#)
- [Best practices on page 3059](#)

## Client/server architecture

Traffic across a WAN typically consists of clients on a client network communicating across a WAN with a remote server network. The clients do this by starting communication sessions from the client network across a WAN to the server network. When you have FortiGates on each end, you can optimize these sessions by adding a WAN optimization profile.

To use WAN optimization, the FortiGate units can operate in either NAT or transparent mode. The client-side and server-side FortiGate units do not have to be operating in the same mode. The client-side FortiGate unit is located between the client network and the WAN. The server-side FortiGate unit is located between the server network and the WAN.



WAN optimization profiles are only added to the client-side. The server-side FortiGate unit employs the WAN optimization settings set in the WAN optimization profile on the client-side FortiGate unit.

---

## Profiles

Use WAN optimization profiles to apply WAN optimization techniques to traffic to be optimized. In a WAN optimization profile you can select the protocols to be optimized and for HTTP protocol. You can also enable SSL offloading (if supported), secure tunneling, byte caching, transparent mode, and optionally select an authentication group. You can edit the default WAN optimization profile or create new ones. See [Configuration examples on page 3061](#) for sample configuration.

Transparent mode	
Authentication group	Select this option and select an authentication group so that the client and server-

	Servers receiving packets after WAN optimization see different source addresses depending on whether or not you select <i>Transparent Mode</i> . See <a href="#">Transparent mode on page 3052</a> for more information.
--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	side FortiGate units must authenticate with each other before starting the WAN optimization tunnel. See <a href="#">Peers and authentication groups on page 3049</a> for more information.
<b>Protocol</b>	Select CIFS, FTP, HTTP, MAPI or TCP to apply protocol optimization for the selected protocols. See <a href="#">Protocol optimization on page 3053</a> for more information.
<b>SSL Offloading</b>	<p>Select to apply SSL offloading for HTTPS traffic. You can use SSL offloading to offload SSL encryption and decryption from one or more HTTP servers to the FortiGate unit. If you enable this option, you must also use one of the following option to achieve SSL offloading:</p> <ul style="list-style-type: none"> <li>• Enable ssl profile with <i>ssl deep-inspection</i> in the WAN optimization firewall policy on the client-side and use the CLI command <code>config firewall ssl-server</code> to add an SSL server on the server-side for each HTTP server that you want to offload SSL encryption and decryption for.</li> <li>• Enable ssl profile with <i>ssl deep-inspection</i> in the WAN optimization firewall policy on client-side and WAN optimization proxy policy on server-side to accept SSL encrypted traffic.</li> </ul>
<b>SSL Secure Tunneling</b>	The WAN optimization tunnel is encrypted using SSL encryption. You must also add an authentication group to the profile. See <a href="#">Secure tunneling on page 3051</a> for more information.
<b>Byte Caching</b>	Select to apply WAN optimization byte caching to the sessions accepted by this rule. See <a href="#">Byte caching on page 3053</a> for more information.

## Peers and authentication groups

The client-side and server-side FortiGate units are called WAN optimization peers. The client and server roles relate to how a session is started. Any FortiGate unit configured for WAN optimization can be a client-side and a server-side FortiGate unit at the same time, depending on the direction of the traffic. Client-side FortiGate units initiate WAN optimization sessions and server-side FortiGate units respond to the session requests.

During this process, the WAN optimization peers identify and optionally authenticate each other. The authentication group is optional unless the tunnel is a secure tunnel. You need to add authentication groups to support secure tunneling between WAN optimization peers.

### Peer requirements

WAN optimization requires the following configuration on each peer:

- The peer must have a unique host ID.
- Unless authentication groups are used, peers authenticate each other using host ID values. Do not leave the local host ID at its default value.
- The peer must know the host IDs and IP addresses of all of the other peers that it can start WAN optimization tunnels with. This does not apply if you use authentication groups that accept all peers.
- If a FortiGate unit or VDOM is operating in transparent mode, WAN optimization uses the management IP address as the peer IP address of the FortiGate unit instead of the address of an interface.

- All peers must have the same local certificate installed on their FortiGate units if the units authenticate by local certificate. Furthermore, system time must be enabled to ensure that SSL/TLS certificate expiry can be validated. Similarly, if the units authenticate by pre-shared key (password), administrators must know the password. The type of authentication is selected in the authentication group. This applies only if you use authentication groups.

## Tunnel requests for peer authentication

When a client-side FortiGate unit attempts to start a WAN optimization tunnel with a peer server-side FortiGate unit, the tunnel request includes the following information:

- The client-side host ID.
- The name of an authentication group, if included in the rule that initiates the tunnel.
- The authentication method it specifies (pre-shared key or certificate), if an authentication group is used.
- The type of tunnel (secure or not).

If the tunnel request does not include an authentication group, authentication will be based on the client-side host ID in the tunnel request.

If the tunnel request includes an authentication group, the authentication will be based on the settings of this group as follows:


- The server-side FortiGate unit searches its own configuration for the name of the authentication group in the tunnel request. If no match is found, the authentication fails.
- If a match is found, the server-side FortiGate unit compares the authentication method in the client and server authentication groups. If the methods do not match, the authentication fails.
- If the authentication methods match, the server-side FortiGate unit tests the peer acceptance settings in its copy of the authentication group.
  - If the *Accept peer(s)* setting is *Any*, the authentication is successful.
  - If the *Accept peer(s)* setting is *One*, the server-side FortiGate unit compares the client-side host ID in the tunnel request with the peer name in the server-side authentication group. If the names match, authentication is successful. If a match is not found, authentication fails.
  - If the *Accept peer(s)* setting is *Defined Peers Only*, the server-side FortiGate unit compares the client-side host ID in the tunnel request with the server-side peer list. If a match is found, authentication is successful. If a match is not found, authentication fails.

After a tunnel is established, multiple WAN optimization sessions can start and stop between peers without restarting the tunnel.

## Tunnels

All optimized traffic passes between the FortiGate units over a WAN optimization tunnel. Traffic in the tunnel can be sent in plain text or encrypted. Both plain text and the encrypted tunnels use TCP destination port 7810.



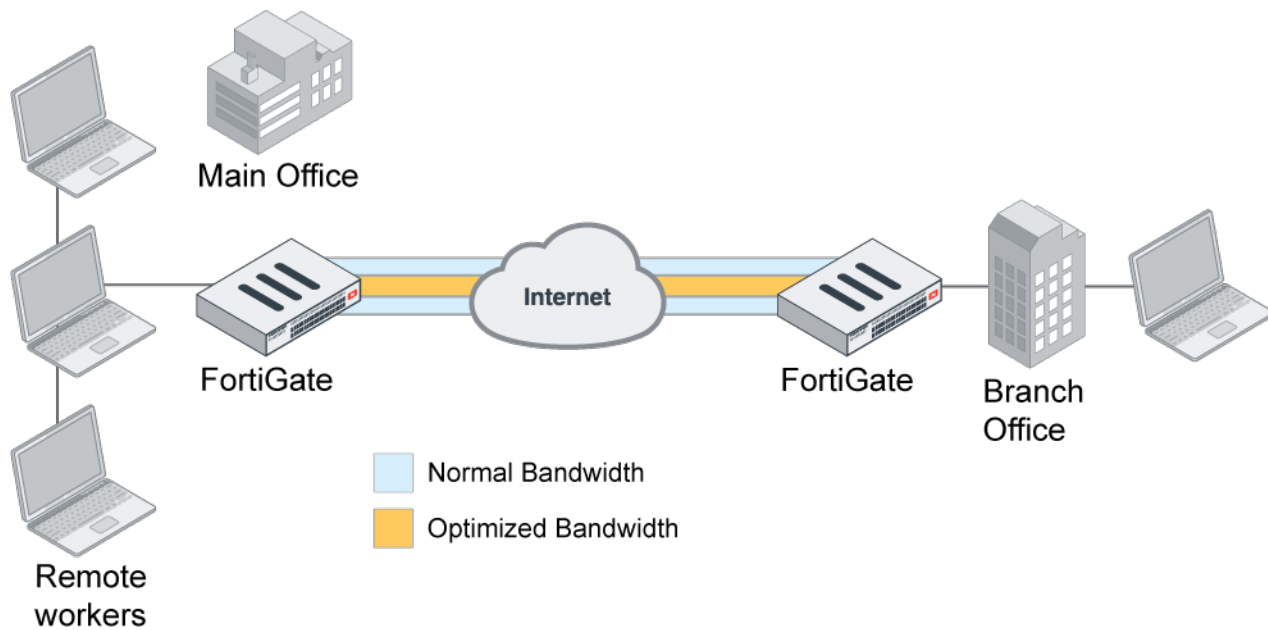

## Secure tunneling

You can configure a WAN optimization profile to use SSL secure tunneling to encrypt the traffic in the WAN optimization tunnel using AES-128bit-CBC SSL. WAN optimization uses FortiASIC acceleration to accelerate SSL decryption and encryption of the secure tunnel. Secure tunneling can be enabled in both manual and active-passive WAN optimization configuration. See [Manual and active-passive on page 3055](#) for more information.

To use secure tunneling, you must add an authentication group and enable *SSL Secure Tunneling* in a WAN optimization profile. The *Accept peers(s)* setting of the authentication group does not affect secure tunneling. See [Secure tunneling configuration example on page 3072](#) for sample configuration.

## Tunnel sharing

Tunnel sharing means multiple WAN optimization sessions share the same tunnel. It can improve performance by reducing the number of WAN optimization tunnels between FortiGate units. Having fewer tunnels means less data to manage. Also, tunnel setup requires more than one exchange of information between the ends of the tunnel. Once the tunnel is set up, each new session that shares the tunnel avoids tunnel setup delays.

Tunnel sharing also uses bandwidth more efficiently by reducing the chances that small packets will be sent down the tunnel. For example, suppose a FortiGate unit is processing five WAN optimization sessions and each session has 100 bytes to send. If these sessions use a shared tunnel, WAN optimization combines the packets from all five sessions into one 500-byte packet. If each session uses its own private tunnel, five 100-byte packets will be sent instead. Each packet also requires a TCP ACK reply. The combined packet in the shared tunnel requires one TCP ACK packet. The separate packets in the private tunnels require five.

Tunnel sharing is not always recommended and may not always be the best practice. For instance, aggressive and non-aggressive protocols should not share the same tunnel. An aggressive protocol can be defined as a protocol that is able to get more bandwidth than a non-aggressive protocol, for example, HTTP and FTP. If aggressive and non-aggressive protocols share the same tunnel, the aggressive protocols may take all of the available bandwidth. As a result, the performance of less aggressive protocols could be reduced.

To avoid this problem, rules for HTTP and FTP traffic should have their own tunnel. To do this, set `tunnel-sharing` to `private` for WAN optimization rules that accept HTTP or FTP traffic.

It is also useful to set `tunnel-sharing` to `express-shared` for applications, such as Telnet, that are very interactive but not aggressive.

Set `tunnel-sharing` to `shared` for applications that are not aggressive and are not sensitive to latency or delays.

## Example configuration

**To configure tunnel sharing for HTTP traffic in a WAN optimization profile:**

```
config wanopt profile
  edit default
    config http
      set tunnel-sharing {express-shared | private | shared}
    end
  next
end
```

## Transparent mode

WAN optimization is transparent to users. This means that with WAN optimization in place, clients connect to servers in the same way as they would without WAN optimization. However, servers receiving packets after WAN optimization see different source addresses depending on whether or not transparent mode is selected for WAN optimization. If transparent mode is selected, WAN optimization keeps the original source address of the packets, so servers appear to receive traffic directly from clients. Routing on the server network should be configured to route the traffic back to the client network.



Some protocols, for example CIFS, may not function as expected if transparent mode is not selected. In most cases, for CIFS WAN optimization you should select transparent mode and confirm the server network can route traffic as described to support transparent mode.

---

If transparent mode is not selected, the source address of the packets received by servers is changed to the address of the server-side FortiGate unit interface that sends the packets to the servers. So servers appear to receive packets from the server-side FortiGate unit. Routing on the server network is simpler in this case because client addresses are not involved. All traffic appears to come from the server-side FortiGate unit and not from individual clients.



Do not confuse WAN optimization transparent mode with FortiGate transparent mode. WAN optimization transparent mode is similar to source NAT. FortiGate's transparent mode is a system setting that controls how the FortiGate unit (or a VDOM) processes traffic.

---

## Configuring transparent mode

You can configure transparent mode by selecting *Transparent* in a WAN optimization profile. The profile is added to an active WAN optimization policy.

When you configure a passive WAN optimization policy you can accept or override the active policy transparent setting. From the GUI you can do this by setting the *Passive* option as follows:

- *Default*: Use the transparent setting in the WAN optimization profile added to the active policy (client-side configuration).
- *Transparent*: Override the active policy transparent mode setting and impose transparent mode. Packets exiting the FortiGate keep their original source addresses.
- *Non-transparent*: Override the active policy transparent mode setting and impose non-transparent mode. Packets exiting the FortiGate have their source address changed to the address of the server-side FortiGate unit interface that sends the packets to the servers.

### To configure a passive wan optimization policy in the CLI:

```
config firewall policy
  edit <policy ID>
    set srcintf <Incoming interface>
    set wanopt-passive-opt {default | transparent | non-transparent}
  next
end
```

## Protocol optimization

Protocol optimization techniques optimize bandwidth use across the WAN. These techniques can improve the efficiency of communication across the WAN optimization tunnel by reducing the amount of traffic required by communication protocols. You can apply protocol optimization to CIFS, FTP, HTTP, MAPI, and general TCP sessions. You can apply general TCP optimization to MAPI sessions.

For example, CIFS provides file access, record locking, read/write privileges, change notification, server name resolution, request batching, and server authentication. CIFS requires many background transactions to successfully transfer a single file. This is usually not a problem across a LAN. However, across a WAN, latency and bandwidth reduction can slow down CIFS performance.

When you select the CIFS protocol in a WAN optimization profile, the FortiGate units at both ends of the WAN optimization tunnel use a number of techniques to reduce the number of background transactions that occur over the WAN for CIFS traffic.

If a policy accepts a range of different types of traffic, you can set *Protocol* to *TCP* to apply general optimization techniques to TCP traffic. However, applying this TCP optimization is not as effective as applying more protocol-specific optimization to specific types of traffic. TCP protocol optimization uses techniques such as TCP SACK support, TCP window scaling and window size adjustment, and TCP connection pooling to remove TCP bottlenecks.

## Byte caching

Byte caching breaks large units of application data (for example, a file being downloaded from a web page) into small chunks of data, labeling each chunk of data with a hash of the chunk and storing those chunks and their hashes in a database. The database is stored on a WAN optimization storage device. Then, instead of sending the actual data over the WAN tunnel, the FortiGate unit sends the hashes. The FortiGate unit at the other end of the tunnel receives the hashes and compares them with the hashes in its local byte caching database. If any hashes match, that data does not have to be transmitted over the WAN optimization tunnel. The data for any hashes that does not match is transferred over the tunnel and added to that byte caching database. Then the unit of application data (the file being downloaded) is reassembled and sent to its destination.

The stored byte caches are not application specific. Byte caches from a file in an email can be used to optimize downloading that same file or a similar file from a web page.

The result is less data transmitted over the WAN. Initially, byte caching may reduce performance until a large enough byte caching database is built up.

To enable byte caching, select *Byte Caching* in a WAN optimization profile.

Byte caching cannot determine whether or not a file is compressed (for example a zip file), and caches compressed and non-compressed versions of the same file separately.

### Dynamic data chunking for byte caching

Dynamic data chunking can improve byte caching by improving detection of data chunks that are already cached in changed files or in data embedded in traffic using an unknown protocol. Dynamic data chunking can only be enabled from the CLI and is available for HTTP, CIFS and FTP.



Dynamic data chunking is disabled by default and `prefer-chunking` is set to `fix`.

---

**To enable dynamic data chunking for HTTP in the default WAN optimization profile:**

```
config wanopt profile
  edit default
    config http
      set prefer-chunking dynamic
    end
  next
end
```

## Cache service and video caching

Two features that can only be configured in the CLI include cache service and video caching.

### Cache service

The `config wanopt cache-service` command is used to configure cache-service clusters between multiple FortiGates. The result is that the cache-service daemons of the different FortiGates can collaborate for serving web cache entries.

See [config wanopt cache-service](#) in the CLI Reference guide for more configuration information.

### Video caching

The `config wanopt content-delivery-network-rule` command configures web-caching, including the video-cache matching rules.

See [config wanopt content-delivery-network-rule](#) in the CLI Reference guide for more configuration information.

## Manual and active-passive

You can create manual (peer-to-peer) and active-passive WAN optimization configurations.

There are a few key differences between manual and active-passive mode:

- For manual mode, the tunnels are always up which makes it more resource extensive as compared to active-passive.
- The performance of active-passive mode is lower than manual mode for the new connection.
- The active-passive mode can be used to deploy tunnel dynamically using *Authentication groups* set to accept *Any* peers which eliminates the need of defining peers manually. This is not possible with manual mode.



This setting is only recommended when you do not know the peer host IDs or IP addresses of the peers that will use this authentication group. This setting is most often used with FortiGate units that do not have static IP addresses, for example units that use DHCP.

- 
- For manual mode, traffic shaping cannot be applied to traffic on the server-side. See [Traffic shaping on page 3058](#) for more information.

## Manual (peer to peer) configurations

Manual configurations allow for WAN optimization between one client-side FortiGate unit and one server-side FortiGate unit. Manual WAN optimization requires a manual WAN optimization firewall policy on the client-side FortiGate unit and a WAN optimization proxy policy on the server-side FortiGate unit.

In a manual mode configuration, the client-side peer can only connect to the named server side peer. When the client-side peer initiates a tunnel with the server-side peer, the packets that initiate the tunnel include extra information so that the server-side peer can determine that it is a peer-to-peer tunnel request. This extra information is required because the server-side peer does not require a WAN optimization firewall policy; however, you need to add the client peer host ID and IP address to the server-side FortiGate unit peer list. See [Manual \(peer-to-peer\) WAN optimization configuration example on page 3062](#) for a sample configuration.

## Active-passive configurations

Active-passive WAN optimization requires an active WAN optimization firewall policy on the client-side FortiGate unit and a passive WAN optimization firewall policy on the server-side FortiGate unit. The server-side FortiGate unit also requires a WAN optimization proxy policy.

You can use the passive policy to control WAN optimization address translation by specifying transparent mode or non-transparent mode. You can also use the passive policy to apply security profiles, web caching, and other FortiGate features at the server-side FortiGate unit. For example, if a server-side FortiGate unit is protecting a web server, the passive policy could enable web caching.

A single passive policy can accept tunnel requests from multiple FortiGate units as long as the server-side FortiGate unit includes their peer IDs and all of the client-side FortiGate units include the server-side peer ID. See [Active-passive WAN optimization configuration example on page 3067](#) for a sample configuration.



The WAN optimization proxy policy can only be added from the CLI and policies with `proxy` set to `wanopt` do not appear on the GUI.


## Monitoring performance

Using *WAN Opt. & Cache* widgets, you can confirm that a FortiGate unit is optimizing traffic and view estimates of the amount of bandwidth saved. These include peers manually added to the configuration as well as discovered peers.

To add *WAN Opt. & Cache* widgets go to *Dashboard > Status > Add Widget > WAN Opt. & Cache* and add *WAN Opt. Monitor* and *Peer Monitor*.

### Wan Opt. Monitor

The *Wan Opt. Monitor* shows how WAN optimization is reducing the amount of traffic on the WAN for each WAN optimization protocol by showing the amount of WAN and LAN traffic. If WAN optimization is being effective, the amount of WAN traffic should be lower than the amount of LAN traffic.

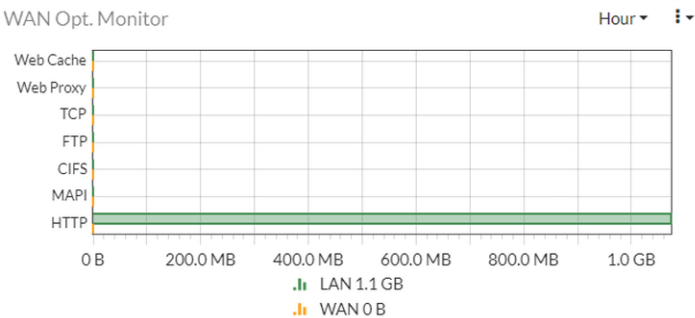

### Peer Monitor

The *Peer Monitor* lists all of the WAN optimization peers that a FortiGate unit can perform WAN optimization with.

Peer Monitor ↻ ⋮ ▾

Peer Host ID ▾	Peer IP Address ▾	Peer Type ▾
Server-Fgt	192.168.30.12	Manual Configured Peer

## System and feature operation with WAN optimization

This section contains the following information:

- [HA on page 3057](#)
- [Memory usage on page 3057](#)
- [Distributing WAN optimization processing on page 3057](#)
- [Distributing WAN optimization to multiple CPU cores on page 3058](#)
- [Identity policies and load balancing on page 3058](#)
- [Traffic shaping on page 3058](#)

## HA

You can configure WAN optimization on a FortiGate HA cluster. The recommended best practice HA configuration for WAN optimization is active-passive mode. When the cluster is operating, all WAN optimization sessions are processed by the primary unit only. Even if the cluster is operating in active-active mode, HA does not load-balance WAN optimization sessions.

You can also form a WAN optimization tunnel between a cluster and a standalone FortiGate unit or between two clusters.

In a cluster, only the primary unit stores the byte cache database. This database is not synchronized to the subordinate units. So, after a failover, the new primary unit must rebuild its byte cache. Rebuilding the byte cache can happen relatively quickly because the new primary unit gets byte cache data from the other FortiGate unit that it is participating with in WAN optimization tunnels.

## Memory usage

To accelerate and optimize disk access and to provide better throughput and less latency, FortiOS WAN optimization uses provisioned memory to reduce disk I/O and increase disk I/O efficiency. In addition, WAN optimization requires a small amount of additional memory per session for comprehensive flow control logic and efficient traffic forwarding.

When WAN optimization is enabled you will see a reduction in available memory. The reduction increases when more WAN optimization sessions are being processed. If you are thinking of enabling WAN optimization on an operating FortiGate unit, make sure its memory usage is not maxed out during high traffic periods.

In addition to using the system dashboard to see the current memory usage you can use the `get test wad 2` command to see how much memory is currently being used by WAN optimization.

## Distributing WAN optimization processing

The `wad-worker` balancing algorithm supports a more balanced dispersal of traffic to the wad processes even if the bulk of the traffic is coming from a small set of sources or single source.

By default, dispatching traffic to WAD workers is based on source affinity. This may negatively affect performance when users have another explicit proxy in front of the FortiGate. Source affinity causes the FortiGate to process the traffic as if it originated from the single (or small set of ) IP address of the outside proxy. This results in the use of one, or a small number, of WAD processes.

By disabling `wad-source-affinity` the traffic is balanced over all of the WAD processes. The WAD dispatcher will not assign the traffic based on the source IP address, but will assign the traffic to available workers in a round-robin fashion.

### To configure WAD source affinity:

```
config system global
    set wad-source-affinity {enable | disable}
end
```



Handling the traffic by different WAD workers results in losing cached related benefits of using source affinity, as there is the memory cache on the current wad worker and if a new connection is handled by another worker, the cache will not be hit.

This is explained by the warning message that appears when it is disabled:

```
WARNING: Disabling this option results in some features to be
unsupported. IP-based user authentication, disclaimer messages, security
profile override, authentication cookies, MAPI scanning, and some video
caches such as YouTube are not supported.
```

```
Do you want to continue? (y/n)
```

---

## Distributing WAN optimization to multiple CPU cores

By default WAN optimization is handled by half of the CPU cores in a FortiGate unit. For example, if your FortiGate unit has 4 CPU cores, by default two will be used for WAN optimization. You can use the following command to change the number of CPU cores that are used.

```
config system global
    set wad-worker-count <number>
end
```

The `wad-worker-count` can be between 1 and the total number of CPU cores in your FortiGate unit. Adding more cores may enhance WAN optimization but reduce the performance of other FortiGate systems.

## Identity policies and load balancing

WAN optimization and firewall policies compatibility varies depending on the type of policy:

- WAN optimization is not compatible with firewall load balancing.
- WAN optimization is compatible with source and destination NAT options in firewall policies (including firewall virtual IPs). If a virtual IP is added to a policy, the traffic that exits the WAN optimization tunnel has its destination address changed to the virtual IPs mapped to IP address and port.
- WAN optimization is compatible with user identity-based and device identity security policies. If a session is allowed after authentication or device identification the session can be optimized.

## Traffic shaping

Traffic shaping works for WAN optimization traffic that is not in a WAN optimization tunnel. So traffic accepted by a WAN optimization policy on a client-side FortiGate unit can be shaped on ingress. However, when the traffic enters the WAN optimization tunnel, traffic shaping is not applied.

In manual mode:

- Traffic shaping works as expected on the client-side FortiGate unit.
- Traffic shaping cannot be applied to traffic on the server-side FortiGate unit.

In active-passive mode:



- Traffic shaping works as expected on the client-side FortiGate unit.
- If transparent mode is enabled in the WAN optimization profile, traffic shaping also works as expected on the server-side FortiGate unit.
- If transparent mode is not enabled, traffic shaping works partially on the server-side FortiGate unit.

## Best practices

WAN optimization and explicit proxy best practices include:

- WAN optimization tunnel sharing is recommended for similar types of WAN optimization traffic. However, tunnel sharing for different types of traffic is not recommended. For example, aggressive and non-aggressive protocols should not share the same tunnel.
- Active-passive HA is the recommended HA configuration for WAN optimization.
- Configure WAN optimization authentication with specific peers. Accepting any peer is not recommended as this can be less secure.


## Example topologies

All FortiGate WAN optimization topologies consist of two FortiGate units operating as WAN optimization peers intercepting and optimizing traffic crossing the WAN between the private networks.

The following topics cover a few of the example topologies:


- [In-path WAN optimization topology on page 3059](#)
- [Out-of-path WAN optimization topology on page 3060](#)
- [Topology for multiple networks on page 3060](#)

### In-path WAN optimization topology

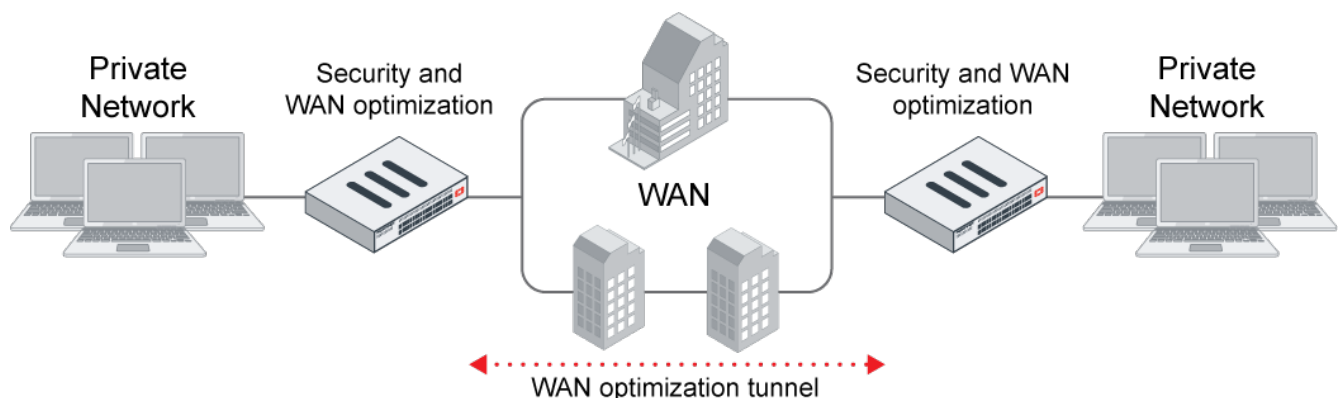


FortiGate units can be deployed as typical security devices that protect private networks connected to the WAN and also perform WAN optimization. The WAN optimization configuration intercepts traffic to be optimized as it passes through the FortiGate unit and uses a WAN optimization tunnel with another FortiGate unit to optimize the traffic that crosses the WAN.

You can add web caching to any WAN optimization topology when users on a private network communicate with web servers located across the WAN on another private network.

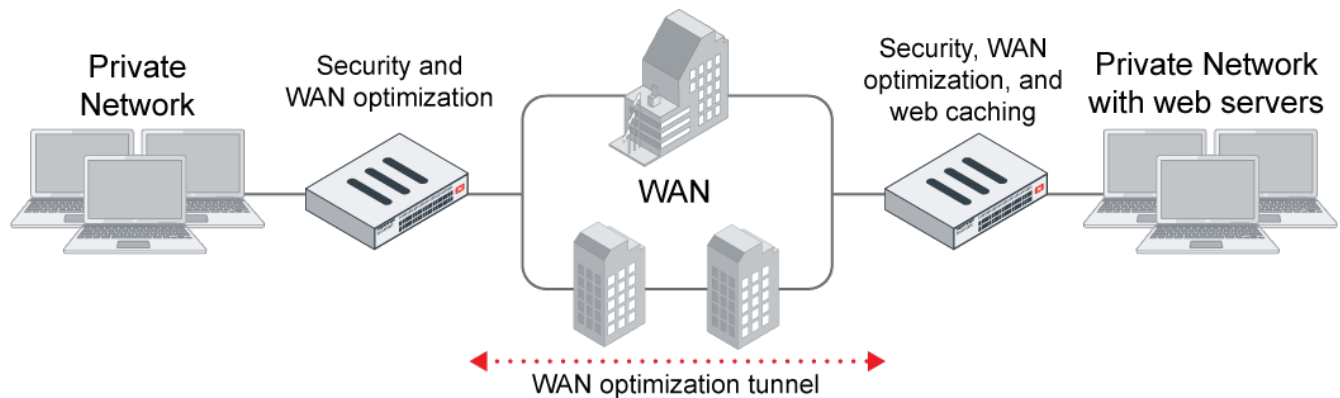

## Out-of-path WAN optimization topology

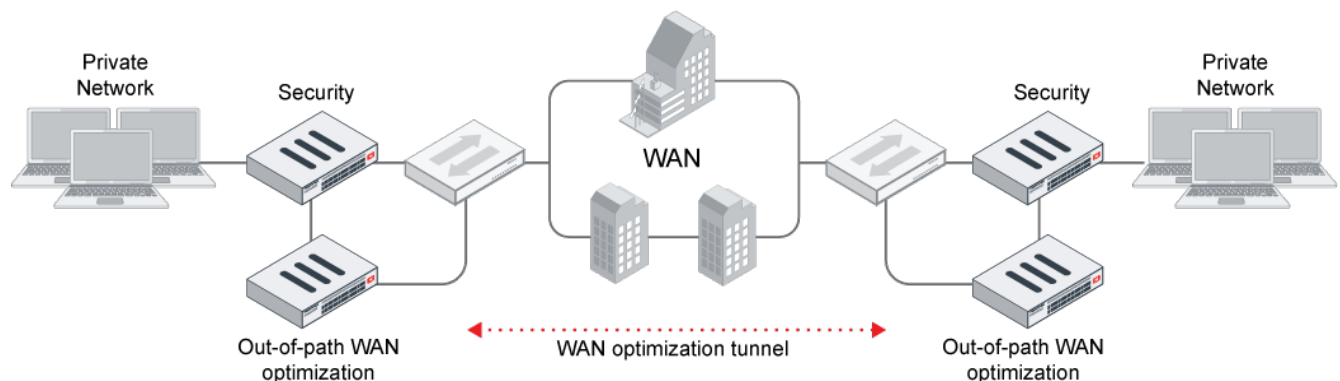


In an out-of-path topology, one or both of the FortiGate units configured for WAN optimization are not directly in the main data path. Instead, the out-of-path FortiGate unit is connected to FortiGate units in the data path, and the device is configured to redirect sessions to be optimized to the out-of-path FortiGate unit. The FortiGate units in the data path use a method such as policy routing to redirect traffic to be optimized to the out-of-path FortiGate units. The out-of-path FortiGate units establish a WAN optimization tunnel between each other and optimize the redirected traffic.

One of the benefits of out-of-path WAN optimization is that out-of-path FortiGate units only perform WAN optimization and do not have to process other traffic. An in-path FortiGate unit configured for WAN optimization also has to process other non-optimized traffic on the data path.

## Topology for multiple networks

As shown below, you can create multiple WAN optimization configurations between many private networks. Whenever WAN optimization occurs, it is always between two FortiGate units, but you can configure any FortiGate unit to perform WAN optimization with any of the other FortiGate units that are part of your WAN.

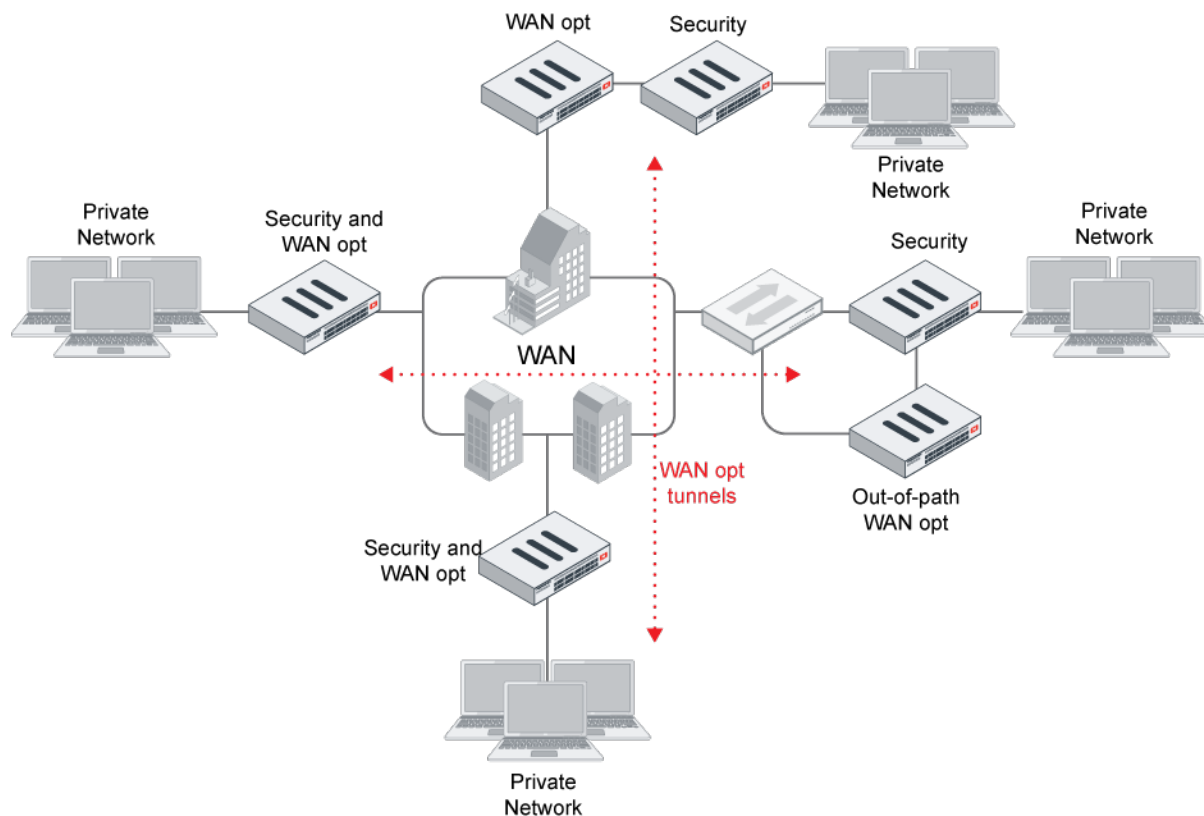

You can also configure WAN optimization between FortiGate units with different roles on the WAN. FortiGate units configured as security devices and for WAN optimization can perform WAN optimization as if they are single-purpose FortiGate units just configured for WAN optimization. The WAN optimization configuration is the same for FortiGate units deployed as security devices and for single-purpose WAN optimization FortiGate units. The only differences would result from the different network topologies.

## Configuration examples

The following pages are used in the WAN optimization configuration examples demonstrated in the subsequent sections:

- **WAN Opt. & Cache > Profiles:** Configure the default WAN optimization profile to optimize HTTP traffic on client side.

<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Clone</a> <a href="#">Delete</a> <input type="text" value="Search"/>					
Name	Protocol/Port	Transparent	Authentication Group	Comments	Ref.
default	HTTP	Enabled		Default WANopt profile.	1

- **WAN Opt. & Cache > Peers:** Change the *Host ID* and add *Peer Host ID* and *IP address* on both client and server side.

<a href="#">+ Create New</a> <a href="#">Edit</a> <a href="#">Delete</a> <input type="text" value="Search"/>			Host ID: Client_Fgt <a href="#">Change</a>	
Peer Host ID	IP	Ref.		
Server_Fgt	192.168.30.12	1		

- **WAN Opt. & Cache > Authentication Groups:** Add an authentication group for the authentication purpose on both client and server side. (Optional)

<a href="#">+ Create New</a>	<a href="#">Edit</a>	<a href="#">Delete</a>	<input type="text" value="Search"/>	<a href="#">Q</a>
Name	Authentication Method	Peer(s)	Ref.	
Auth-Secure-Tunnel	Pre-shared Key	any	0	

- **Policy & Objects > Firewall Policy:** Add a WAN optimization firewall policy on the client side or on both client and server side depending on the WAN optimization configuration. See the examples for more information.

Edit Policy

Name

WAN Optimization Firewall

Incoming Interface

port2

Outgoing Interface

port3

Source

all

+

IP/MAC Based Access Control

+

Destination

all

+

Schedule

always

Service

ALL

+

Action

☒ ACCEPT
 ☐ DENY

Inspection Mode

☐ Flow-based
 ☒ Proxy-based

Firewall/Network Options

NAT

☒

IP Pool Configuration

☒ Use Outgoing Interface Address
 ☐ Use Dynamic IP Pool

Preserve Source Port

☐

Protocol Options

☒ PROT default

Web Cache

☐

WAN Optimization

☒ Active
 ☐ Passive
 ☒ Manual

Profiles

default

Peers

Server-Fgt

Statistics (since last reset)

ID	2
Last used	N/A
First used	N/A
Active sessions	0
Hit count	0
Total bytes	0 B
Current bandwidth	0 bps

Clear Counters

Additional Information

API Preview

Edit in CLI

Online Guides

Relevant Documentation

Video Tutorials

Consolidated Policy Configuration

FortiAnswers

Join the Discussion

OK

Cancel



A WAN optimization firewall policy is a firewall policy running in *Proxy-based* inspection mode with *WAN Optimization* enabled. A WAN optimization firewall policy cannot be configured with inspection mode set to *Flow-based*.

The following topics provide instructions on different WAN optimization configuration examples:

- [Manual \(peer-to-peer\) WAN optimization configuration example on page 3062](#)
- [Active-passive WAN optimization configuration example on page 3067](#)
- [Secure tunneling configuration example on page 3072](#)
- [Testing and troubleshooting the configuration on page 3077](#)

## Manual (peer-to-peer) WAN optimization configuration example




Please ensure that the [Prerequisites on page 3046](#) are met before proceeding with the configuration example.

See [Manual \(peer to peer\) configurations on page 3055](#) for conceptual information.

This example configuration includes a client-side FortiGate unit called Client-Fgt with a WAN IP address of 172.20.34.12. This unit is in front of a network with IP address 172.20.120.0. The server-side FortiGate unit is called Server-Fgt with a WAN IP address of 192.168.30.12. This unit is in front of a web server network with IP address 192.168.10.0.

This example customizes the default WAN optimization profile on the client-side FortiGate unit and adds it to the WAN optimization firewall policy. You can also create a new WAN optimization profile.

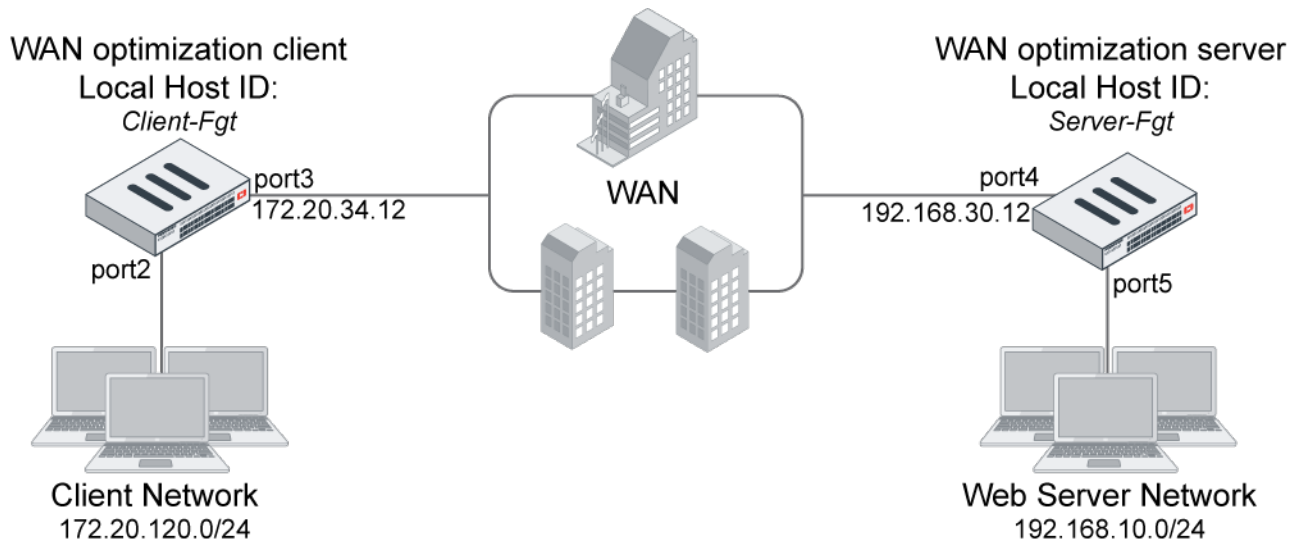

## General configuration steps

This section breaks down the configuration for this example into smaller procedures:

1. Configure the client-side FortiGate unit:
  - Add peers.
  - Configure the default WAN optimization profile to optimize HTTP traffic.
  - Add a manual WAN optimization firewall policy.
2. Configure the server-side FortiGate unit:
  - Add peers.
  - Add a WAN optimization proxy policy.

## Configuring manual WAN optimization from the GUI

Use the following steps to configure the example configuration from the GUI:

### To configure the client-side FortiGate unit:

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the client-side FortiGate unit:
  - a. Click *Change*. The *Host ID* pane opens.
  - b. Enter a new *Host ID*:

<b>Host ID</b>	Client-Fgt
----------------	------------

- c. Click OK.

2. Create the server-side FortiGate unit peer:

- a. Select *Create New*. The *New WAN Optimization Peer* opens.
- b. Configure the following settings:

<b>Peer Host ID</b>	Server-Fgt
<b>IP address</b>	192.168.30.12

- c. Click OK.

3. Go to *WAN Opt. & Cache > Profiles* and edit the default profile:

- a. Select the default profile and click *Edit*.
- b. Under *Protocol Options*, edit *HTTP*.
- c. Set *Status* to *Enable* and click *Apply*.
- d. Click OK.

4. Go to *Policy & Objects > Firewall Policy* to add a manual WAN optimization firewall policy to the client-side FortiGate unit that accepts traffic to be optimized:

- a. Click *Create New*.
- b. Enter a *Name* and configure the following settings:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- c. Set *Inspection Mode* to *Proxy-based*.
- d. Enable *WAN Optimization* and configure the following settings:

<b>WAN Optimization</b>	Manual
<b>Profiles</b>	default
<b>Peers</b>	Server-Fgt

- e. Click OK to save the policy.

**To configure the server-side FortiGate unit:**

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the server-side FortiGate unit:
  - a. Click *Change*. The *Host ID* pane opens.
  - b. Enter a new *Host ID*:

Host ID	Server-Fgt
---------	------------

c. Click OK.

2. Create the client-side FortiGate unit peer:

a. Select *Create New*. The *New WAN Optimization Peer* opens.

b. Configure the following settings:

Peer Host ID	Client-Fgt
IP address	172.20.34.12

c. Click OK.

3. Enter the following CLI command to add a WAN optimization proxy policy to accept WAN optimization tunnel connections:

```
config firewall proxy-policy
  edit 0
    set proxy wanopt
    set dstintf port5
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
end
```

## Configuring basic WAN optimization from the CLI

Use the following steps to configure the example configuration from the CLI.

**To configure the client-side FortiGate unit:**

1. Change the Host ID of the client-side FortiGate:

```
config wanopt settings
  set host-id Client-Fgt
end
```

2. Add the Host ID of the server-side FortiGate:

```
config wanopt peer
  edit Server-Fgt
    set ip 192.168.30.12
  next
end
```

3. Edit the *default* WAN optimization profile and enable HTTP WAN optimization:

```
config wanopt profile
  edit default
    config http
      set status enable
    end
```

```
    next
end
```

**4. Add a WAN optimization firewall policy to accept the traffic to be optimized:**

```
config firewall policy
  edit 0
    set srcintf port2
    set dstintf port3
    set srcaddr all
    set dstaddr all
    set action accept
    set service ALL
    set schedule always
    set inspection-mode proxy
    set wanopt enable
    set wanopt-profile default
    set wanopt-detection off
    set wanopt-peer Server-Fgt
  next
end
```

When you set the detection mode to off, the policy becomes a manual mode WAN optimization firewall, which is reflected on the GUI.

**To configure the server-side FortiGate unit:**

**1. Change the Host ID of the server-side FortiGate:**

```
config wanopt settings
  set host-id Server-Fgt
end
```

**2. Add the Host ID of the client-side FortiGate:**

```
config wanopt peer
  edit Client-Fgt
    set ip 172.20.34.12
  next
end
```

**3. Add a WAN optimization proxy policy:**

```
config firewall proxy-policy
  edit 0
    set proxy wanopt
    set dstintf port5
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
end
```




## Active-passive WAN optimization configuration example



Please ensure that the [Prerequisites on page 3046](#) are met before proceeding with the configuration example.

See [Active-passive configurations on page 3055](#) for conceptual information.

This example configuration includes a client-side FortiGate unit called Client-Fgt with a WAN IP address of 172.30.120.1. This unit is in front of a network with IP address 172.20.120.0. The server-side FortiGate unit is called Server-Fgt and has a WAN IP address of 192.168.20.1. This unit is in front of a web server network with IP address 192.168.10.0.

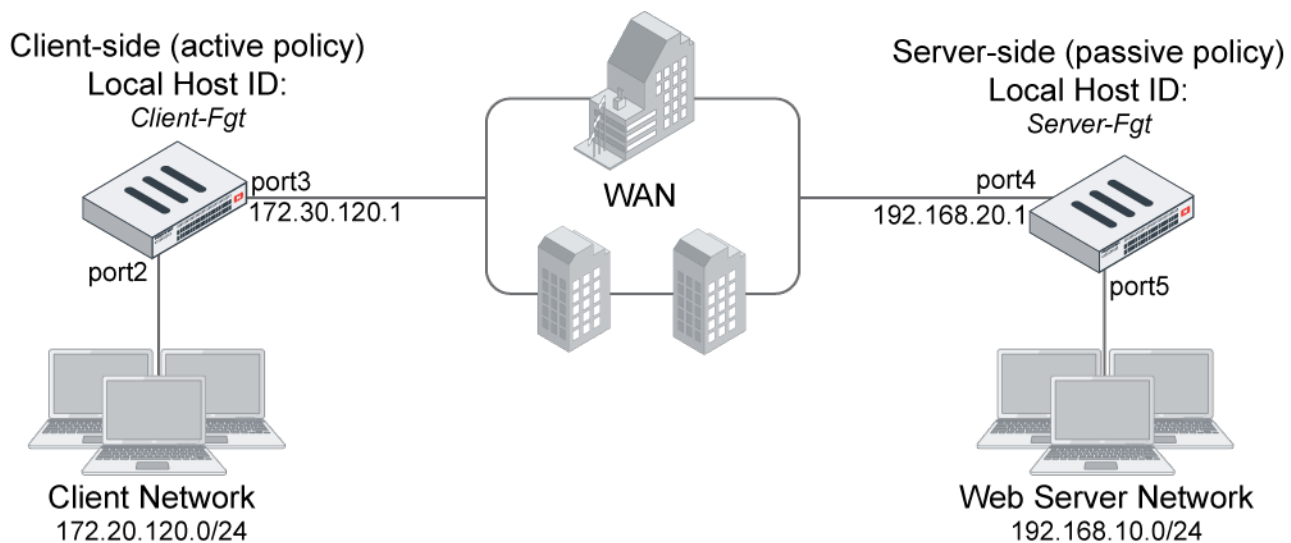

### General configuration steps

This section breaks down the configuration for this example into smaller procedures:

1. Configure the client-side FortiGate unit:
  - Add peers.
  - Add a WAN optimization profile to optimize CIFS, FTP, and HTTP traffic.
  - Add an active WAN optimization firewall policy.
2. Configure the server-side FortiGate unit:
  - Add peers.
  - Add a passive WAN optimization firewall policy.
  - Add a WAN optimization proxy policy.

### Configuring active-passive WAN optimization from the GUI

Use the following steps to configure the example configuration from the GUI.

**To configure the client-side FortiGate unit:**

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the client-side FortiGate unit:
  - a. Click *Change*. The *Host ID* pane opens.
  - b. Enter a new *Host ID*:

<b>Host ID</b>	Client-Fgt
----------------	------------

- c. Click *OK*.
2. Create the server-side FortiGate unit peer:
  - a. Select *Create New*. The *New WAN Optimization Peer* opens.
  - b. Configure the following settings:

<b>Peer Host ID</b>	Server-Fgt
<b>IP address</b>	192.168.20.1

- c. Click *OK*.
3. Go to *WAN Opt & Cache > Profiles* to add a WAN optimization profile to optimize CIFS, HTTP, and FTP traffic:
  - a. Select *Create New*.
  - b. Enter the profile name:

<b>Name</b>	Custom-wan-opt-pro
-------------	--------------------

- c. In the *Protocol Options* section:
    - i. Edit *CIFS*.
    - ii. Set *Status* to *Enable*.
    - iii. Click *Apply*.
    - iv. Repeat these steps to edit and enable *FTP* and *HTTP*.
  - d. Click *OK*.
4. Go to *Policy & Objects > Firewall Policy* to add an active WAN optimization firewall policy:
  - a. Click *Create New*.
  - b. Enter a *Name* and configure the following settings:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	HTTP FTP SMB
<b>Action</b>	ACCEPT

- c. Set *Inspection Mode* to *Proxy-based*.

- d. Enable WAN optimization and configure the following settings:

<b>WAN Optimization</b>	Active
<b>Profile</b>	Custom-wan-opt-pro

- e. Click *OK*.

#### To configure the server-side FortiGate unit:

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the server-side FortiGate unit:

- a. Click *Change*. The *Host ID* pane opens.  
b. Enter a new *Host ID*:

<b>Host ID</b>	Server-Fgt
----------------	------------

- c. Click *OK*.

2. Create the client-side FortiGate unit peer:

- a. Select *Create New*. The *New WAN Optimization Peer* opens.  
b. Configure the following settings:

<b>Peer Host ID</b>	Client-Fgt
<b>IP address</b>	172.30.120.1

- c. Click *OK*.

3. Go to *Policy & Objects > Firewall Policy* to add a passive WAN optimization firewall policy:

- a. Click *Create New*.  
b. Enter a *Name* and configure the following settings:

<b>Incoming Interface</b>	port4
<b>Outgoing Interface</b>	port5
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- c. Set *Inspection Mode* to *Proxy-based*.  
d. Enable *WAN Optimization* and configure the following settings:

<b>WAN Optimization</b>	Passive
<b>Passive Option</b>	Default

- e. Click *OK*.

4. Add a WAN optimization proxy policy from the CLI:

```
config firewall proxy-policy
  edit 0
    set proxy wanopt
    set dstintf port5
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
end
```

## Configuring basic active-passive WAN optimization from the CLI

Use the following steps to configure the example configuration from the CLI.

### To configure the client-side FortiGate unit:

1. Change the Host ID of the client-side FortiGate:

```
config wanopt settings
  set host-id Client-Fgt
end
```

2. Add the Host ID of the server-side FortiGate:

```
config wanopt peer
  edit Server-Fgt
    set ip 192.168.20.1
  next
end
```

3. Add a WAN optimization profile to optimize CIFS, HTTP, and FTP traffic:

```
config wanopt profile
  edit Custom-wan-opt-pro
    config cifs
      set status enable
    end
    config http
      set status enable
    end
    config ftp
      set status enable
    end
  next
end
```

4. Add an active WAN optimization firewall policy:

```
config firewall policy
  edit 0
    set srcintf port2
    set dstintf port3
    set srcaddr all
    set dstaddr all
    set action accept
```

```
        set service HTTP FTP SMB
        set schedule always
        set inspection-mode proxy
        set wanopt enable
        set wanopt-detection active
        set wanopt-profile Custom-wan-opt-pro
    next
end
```

**To configure the server-side FortiGate unit:****1. Change the Host ID of the server-side FortiGate:**

```
config wanopt settings
    set host-id Server-Fgt
end
```

**2. Add the Host ID of the client-side FortiGate:**

```
config wanopt peer
    edit Client-Fgt
        set ip 172.30.120.1
    next
end
```

**3. Add a passive WAN optimization firewall policy:**

```
config firewall policy
    edit 0
        set srcintf port4
        set dstintf port5
        set srcaddr all
        set dstaddr all
        set action accept
        set service ALL
        set schedule always
        set inspection-mode proxy
        set wanopt enable
        set wanopt-detection passive
        set wanopt-passive-opt default
    next
end
```

**4. Add a WAN optimization proxy policy:**

```
config firewall proxy-policy
    edit 0
        set proxy wanopt
        set dstintf port5
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
end
```


## Secure tunneling configuration example



Please ensure that the [Prerequisites on page 3046](#) are met before proceeding with the configuration example.

See [Secure tunneling on page 3051](#) for conceptual information.

This example configuration includes a client-side FortiGate unit called Client-Fgt with a WAN IP address of 172.30.120.1. This unit is in front of a network with IP address 172.20.120.0. The server-side FortiGate unit is called Server-Fgt and has a WAN IP address of 192.168.20.1. This unit is in front of a web server network with IP address 192.168.10.0.

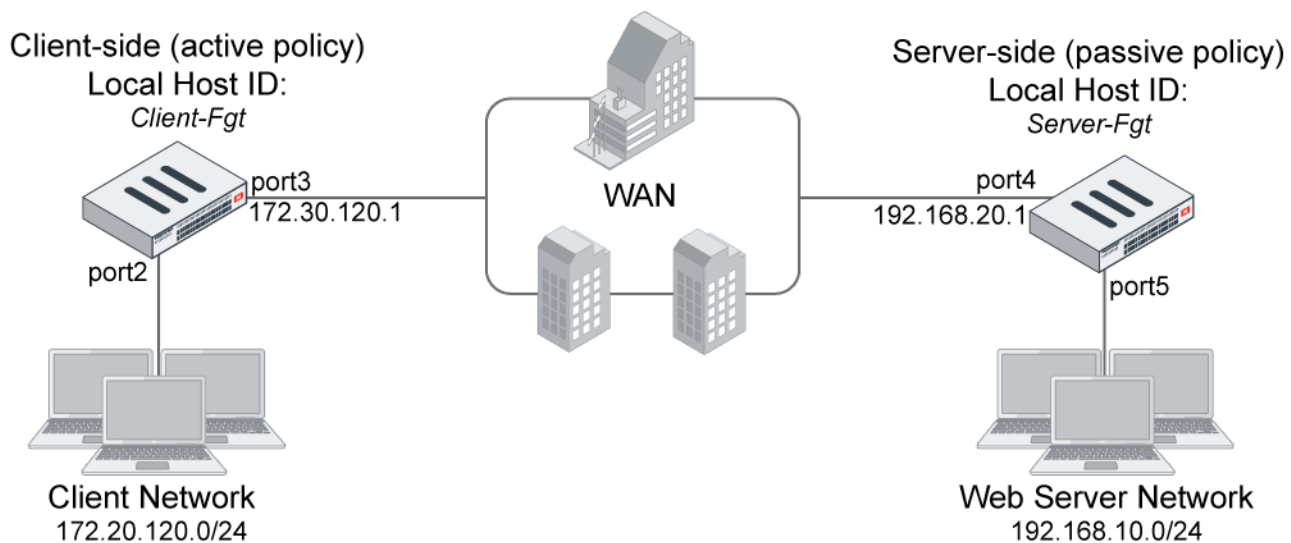

### General configuration steps

This section breaks down the configuration for this example into smaller procedures:

1. Configure the client-side FortiGate unit:
  - Add peers.
  - Add an authentication group.
  - Add an active WAN optimization firewall policy.
2. Configure the server-side FortiGate unit:
  - Add peers.
  - Add the same authentication group.
  - Add a passive WAN optimization firewall policy.
  - Add a WAN optimization proxy policy.

### Configuring WAN optimization with secure tunneling from the GUI

Use the following steps to configure the example configuration from the GUI.

**To configure the client-side FortiGate unit:**

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the client-side FortiGate unit:
  - a. Click *Change*. The *Host ID* pane opens.
  - b. Enter a new *Host ID*:

<b>Host ID</b>	Client-Fgt
----------------	------------

- c. Click *OK*.

2. Create the server-side FortiGate unit peer:
  - a. Select *Create New*. The *New WAN Optimization Peer* opens.
  - b. Configure the following settings:

<b>Peer Host ID</b>	Server-Fgt
<b>IP address</b>	192.168.20.1

- c. Click *OK*.

3. Go to *WAN Opt. & Cache > Authentication Groups* to add the authentication group to be used for secure tunneling:
  - a. Click *Create New* and configure the following settings:

<b>Name</b>	Auth-Secure-Tunnel
<b>Authentication Method</b>	Pre-shared key
<b>Pre-shared key</b>	*****
<b>Accept peer(s)</b>	Defined Peers Only

- b. Click *OK*.

4. Go to *WAN Opt. & Cache > Profiles* to add a WAN optimization profile that enables secure tunneling and includes the authentication group:
  - a. Click *Create New*.
  - b. Enter a *Name*:

<b>Name</b>	Secure-wan-opt-pro
-------------	--------------------

- c. Enable *Authentication group*:

<b>Authentication group</b>	Auth-Secure-Tunnel
-----------------------------	--------------------

- d. In the *Protocol Options* section, edit *HTTP*:
    - i. Set *Status* to *Enable*.
    - ii. Click *Apply*.
    - iii. Set *SSL Secure Tunneling* to *Enable*.
    - iv. Click *Apply*.
  - e. Click *OK*.

5. Go to *Policy & Objects > Firewall Policy* to add an active WAN optimization firewall policy:
  - a. Click *Create New*.
  - b. Enter a *Name* and configure the following settings:

<b>Incoming Interface</b>	port2
<b>Outgoing Interface</b>	port3
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	HTTP
<b>Action</b>	ACCEPT

- c. Set *Inspection Mode* to *Proxy-based*.
- d. Enable *WAN Optimization* and configure the following settings:

<b>WAN Optimization</b>	Active
<b>Profile</b>	Secure-wan-opt-pro

- e. Click *OK*.

#### To configure the server-side FortiGate unit:

1. Go to *WAN Opt. & Cache > Peers* and change the *Host ID* of the server-side FortiGate unit:
  - a. Click *Change*. The *Host ID* pane opens.
  - b. Enter a new *Host ID*:

<b>Host ID</b>	Server-Fgt
----------------	------------

- c. Click *OK*.
2. Create the client-side FortiGate unit peer:
  - a. Select *Create New*. The *New WAN Optimization Peer* opens.
  - b. Configure the following settings:

<b>Peer Host ID</b>	Client-Fgt
<b>IP address</b>	172.30.120.1

- c. Click *OK*.
3. Go to *WAN Opt. & Cache > Authentication Groups* to add the authentication group to be used for secure tunneling:
  - a. Click *Create New* and configure the following settings:

<b>Name</b>	Auth-Secure-Tunnel
<b>Authentication Method</b>	Pre-shared key
<b>Pre-shared key</b>	*****
<b>Accept peer(s)</b>	Defined Peers Only

- b. Click *OK*.
4. Go to *Policy & Objects > Firewall Policy* to add an passive WAN optimization firewall policy:



- a. Click *Create New*.
- b. Enter a *Name* and configure the following settings:

<b>Incoming Interface</b>	port4
<b>Outgoing Interface</b>	port5
<b>Source</b>	all
<b>Destination</b>	all
<b>Schedule</b>	always
<b>Service</b>	ALL
<b>Action</b>	ACCEPT

- c. Set *Inspection Mode* to *Proxy-based*.
- d. Enable *WAN Optimization* and configure the following settings:

<b>WAN Optimization</b>	Passive
<b>Passive Option</b>	Default

- e. Click *OK*.

5. Add a WAN optimization proxy policy from the CLI:

```
config firewall proxy-policy
  edit 0
    set proxy wanopt
    set dstintf port5
    set srcaddr all
    set dstaddr all
    set action accept
    set schedule always
    set service ALL
  next
end
```

## Configuring WAN optimization with secure tunneling from the CLI

Use the following steps to configure the example configuration from the CLI.

### To configure the client-side FortiGate unit:

1. Change the Host ID of the client-side FortiGate:

```
config wanopt settings
  set host-id Client-Fgt
end
```

2. Add the Host ID of the server-side FortiGate:

```
config wanopt peer
  edit Server-Fgt
    set ip 192.168.20.1
```

```
    next
end
```

**3. Add a new authentication group to be used for secure tunneling:**

```
config wanopt auth-group
    edit Auth-Secure-Tunnel
        set auth-method psk
        set peer-accept defined
        set psk *****
    next
end
```

**4. Add a WAN optimization profile that enabled secure tunneling and includes the authentication group, enables HTTP protocol optimization, and enables secure tunneling for HTTP traffic:**

```
config wanopt profile
    edit Secure-wan-opt-pro
        set auth-group Auth-Secure-Tunnel
        config http
            set status enable
            set secure-tunnel enable
        end
    next
end
```

**5. Add an active WAN optimization firewall policy that enables secure tunneling:**

```
config firewall policy
    edit 0
        set srcintf port2
        set dstintf port3
        set srcaddr all
        set dstaddr all
        set action accept
        set service HTTP
        set schedule always
        set inspection-mode proxy
        set wanopt enable
        set wanopt-detection active
        set wanopt-profile Secure-wan-opt-pro
    next
end
```

**To configure the server-side FortiGate unit:**

**1. Change the Host ID of the server-side FortiGate:**

```
config wanopt settings
    set host-id Server-Fgt
end
```

**2. Add the Host ID of the client-side FortiGate:**

```
config wanopt peer
    edit Client-Fgt
        set ip 172.30.120.1
    next
end
```

**3. Add an authentication group to be used for secure tunneling:**

```
config wanopt auth-group
    edit Auth-Secure-Tunnel
        set auth-method psk
        set peer-accept defined
        set psk *****
    next
end
```

**4. Add a passive WAN optimization firewall policy:**

```
config firewall policy
    edit 0
        set srcintf port4
        set dstintf port5
        set srcaddr all
        set dstaddr all
        set action accept
        set service ALL
        set schedule always
        set inspection-mode proxy
        set wanopt enable
        set wanopt-detection passive
        set wanopt-passive-opt default
    next
end
```

**5. Add a WAN optimization proxy policy:**

```
config firewall proxy-policy
    edit 0
        set proxy wanopt
        set dstintf port5
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
end
```

## Testing and troubleshooting the configuration

To test the configuration attempt, start a web browsing session between the client network and the web server network. For example, from a PC on the client network browse to the IP address of a web server on the web server network, for example <http://192.168.10.13>. Even though this address is not on the client network, you should be able to connect to this web server over the WAN optimization tunnel.

If you can connect, the *WAN Opt. Monitor* widget should show the protocol that has been optimized (in this case HTTP) and the *Peer Monitor* widget displays the *Peer* information. To add the *WAN Opt. Monitor* and the *Peer Monitor*, go to *Dashboard > Status > Add Widget > WAN Opt. & Cache* and add *WAN Opt. Monitor* and *Peer Monitor*. See [Monitoring performance on page 3056](#) for more information.

If you cannot connect, try the following to diagnose the problem:

- Review your configuration and make sure all details such as address ranges, peer names, and IP addresses are correct.
- Check routing on the FortiGate units and on the client and web server networks to make sure packets can be forwarded as required. The FortiGate units must be able to communicate with each other, routing on the client network must allow packets destined for the web server network to be received by the client-side FortiGate unit, and packets from the server-side FortiGate unit must be able to reach the web servers. See [Routing concepts on page 347](#) for more information.

You can use `get` and `diagnose` commands to display information about how WAN optimization is operating.

## Example output

The command output for the client-side FortiGate unit shows 10 tunnels all created by the manual WAN optimization configuration:

```
# diagnose wad tunnel list
```

```
Tunnel: id=100 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=100 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=348 bytes_out=384
```

```
Tunnel: id=99 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=99 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=348 bytes_out=384
```

```
Tunnel: id=98 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=98 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=348 bytes_out=384
```

```
Tunnel: id=39 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=39 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=1068 bytes_out=1104
```

```
Tunnel: id=7 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=7 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=1228 bytes_out=1264
```

```
Tunnel: id=8 type=manual  
vd=0 shared=no uses=0 state=2  
peer name=Server-Fgt id=8 ip=192.168.30.12  
SSL-secured-tunnel=no auth-grp=  
bytes_in=1228 bytes_out=1264
```

```
Tunnel: id=5 type=manual  
vd=0 shared=no uses=0 state=2
```

```
peer name=Server-Fgt id=5 ip=192.168.30.12
SSL-secured-tunnel=no auth-grp=
bytes_in=1228 bytes_out=1264
```

```
Tunnel: id=4 type=manual
vd=0 shared=no uses=0 state=2
peer name=Server-Fgt id=4 ip=192.168.30.12
SSL-secured-tunnel=no auth-grp=
bytes_in=1228 bytes_out=1264
```

```
Tunnel: id=1 type=manual
vd=0 shared=no uses=0 state=2
peer name=Server-Fgt id=1 ip=192.168.30.12
SSL-secured-tunnel=no auth-grp=
bytes_in=1228 bytes_out=1264
```

```
Tunnel: id=2 type=manual
vd=0 shared=no uses=0 state=2
peer name=Server-Fgt id=2 ip=192.168.30.12
SSL-secured-tunnel=no auth-grp=
bytes_in=1228 bytes_out=1264
```

```
Tunnels total=10 manual=10 auto=0
```

The command output shows three tunnels all created by the active-passive WAN optimization configuration:

```
# diagnose wad tunnel list
```

```
Tunnel: id=22 type=auto
vd=0 shared=no uses=1 state=2
peer name=Server-Fgt id=42 ip=192.168.20.1 (best guess)
SSL-secured-tunnel=no auth-grp=
bytes_in=56693 bytes_out=10831
```

```
Tunnel: id=24 type=auto
vd=0 shared=no uses=1 state=2
peer name=Server-Fgt id=44 ip=192.168.20.1 (best guess)
SSL-secured-tunnel=no auth-grp=
bytes_in=14833 bytes_out=3896
```

```
Tunnel: id=26 type=auto
vd=0 shared=no uses=1 state=2
peer name=Server-Fgt id=46 ip=192.168.20.1 (best guess)
SSL-secured-tunnel=no auth-grp=
bytes_in=481 bytes_out=176
```

```
Tunnels total=3 manual=0 auto=3
```

The command output shows a tunnel created by active passive WAN optimization configuration with secure tunneling:

```
# diagnose wad tunnel list
```

```
Tunnel: id=3 type=auto
vd=0 shared=no uses=1 state=2
peer name=Server-Fgt id=49 ip=192.168.20.1 (best guess)
SSL-secured-tunnel=yes auth-grp=Auth-Secure-Tunnel
bytes_in=95810 bytes_out=39597
```

Tunnels total=1 manual=0 **auto=1**



Unlike manual mode, for active-passive configurations, each session will negotiate an active-passive tunnel so an open session is required to display the corresponding output above.

For example, continuous data transfer such as uploading or downloading will display tunnel output in the active-passive configuration, which is in contrast to manual mode where tunnels are always open and ready to use.

---

# VM

This section contains topics on deploying FortiGate-VM:

- [Amazon Web Services on page 3081](#)
- [Microsoft Azure on page 3081](#)
- [Google Cloud Platform on page 3081](#)
- [Oracle OCI on page 3082](#)
- [AliCloud on page 3082](#)
- [Private cloud on page 3082](#)
- [VM license on page 3082](#)
- [Permanent trial mode for FortiGate-VM on page 3087](#)
- [Adding VDOMs with FortiGate v-series on page 3090](#)
- [Terraform: FortiOS as a provider on page 3093](#)
- [PF and VF SR-IOV driver and virtual SPU support on page 3097](#)
- [Using OCI IMDSv2 on page 3099](#)
- [FIPS cipher mode for AWS, Azure, OCI, and GCP FortiGate-VMs on page 3101](#)

## Amazon Web Services

See the [FortiOS 7.2.6 AWS Administration Guide](#).

## Microsoft Azure

See the [FortiOS 7.2.6 Azure Administration Guide](#).

For Azure vWAN deployments, see:

- [Azure vWAN NGFW Deployment Guide](#)
- [Azure vWAN SD-WAN NGFW Deployment Guide](#)

## Google Cloud Platform

See the [7.2.6 FortiOS GCP Administration Guide](#).

## Oracle OCI

See the [7.2.6 FortiOS OCI Administration Guide](#).

## AliCloud

See the [7.2.6 FortiOS AliCloud Administration Guide](#).

## Private cloud

See [FortiGate Private Cloud](#) in the document library.

## VM license

You can access the *FortiGate VM License* page from the *Dashboard > Status* page in the *Virtual Machine* widget. Click the device license and select *FortiGate VM License*.

The *FortiGate VM License* page displays the following information:

Field	Description
License status	<p>Displays one of the following statuses:</p> <ul style="list-style-type: none"><li>Valid: VM can connect and validate the license against a FortiManager or FortiGuard server. All features are available.</li><li>Warning: VM cannot connect and validate against a FortiManager or FortiGuard server. A check is made against how many days the warning status is continuous. If the number is less than 30 days, the status does not change.</li><li>Invalid: VM cannot connect and validate against a FortiManager or FortiGuard server. A check is made against how many days the warning status is continuous. If the number is 30 days or more, the status changes to invalid. GUI access is restricted until a valid license is uploaded. Firewall policies do not work. FortiGuard downloads are unavailable.</li><li>Pending: temporary state where the VM attempts to validate its license.</li></ul> <p>Reasons for having a warning or invalid status include:</p> <ul style="list-style-type: none"><li>The network environment does not allow FortiGate-VM to connect to the FortiGuard server.</li><li>The license may be expired. Check the expiration date for evaluation or term-based licenses.</li><li>Another VM has been already validated with FortiGuard using the same license. See <a href="#">VM license activation</a> for details about duplicated VM instances.</li></ul>



Field	Description
Allocated vCPUs	Number of allocated and total allowable vCPUs
Allocated RAM	Amount of allocated RAM. There are no RAM restrictions.
Expires on	Expiry date (value depends on the type of license)

This information is visible in the CLI by running `get system status` (see [CLI troubleshooting](#)).

## Uploading a license file

After you submit an order for a FortiGate-VM, Fortinet sends a license registration code to the email address that you entered in the order form. Use this code on the FortiCloud portal to register the FortiGate-VM.

Once the VM is registered, you can download the license file in .LIC format. On the *FortiGate VM License* page, click *Upload*. The system prompts you to reboot and validate the license with the FortiGuard server. Once validated, your FortiGate-VM is fully functional.

The VM license window may also appear immediately after logging in if you are running a VM with an evaluation license that has expired.

In cases where the GUI is not accessible, you can upload the license using secure copy (SCP).

### To upload the license using SCP:

#### 1. Enable SCP:

```
config system global
    set admin-scp enable
end
```

#### 2. Enable SSH in the administrative access for the interface where the transfer will take place:

```
config system interface
    edit <interface>
        append allowaccess ssh
    next
end
```

#### 3. On your computer, upload the VM license. This example is for Linux:

```
scp <filename> <admin-user>@<FortiGate_IP>:vmlicense
```

## VM license types

FortiGate-VM offers perpetual licensing (normal series and V-series) and annual subscription licensing (S-series). SKUs are based on the number of vCPUs (1, 2, 4, 8, 16, 32, or unlimited).

FortiOS 7.2.1 introduces a new permanent trial license, and moves away from the 15-day trial license. See [Permanent trial mode for FortiGate-VM on page 3087](#).

The FortiFlex program allows qualified enterprise and MSSP customers to create as many VM entitlements as required. Resource consumption is based upon predefined points that are calculated on a daily basis.

Feature	Normal series	Trial	V-series	S-series	FortiFlex
Licensing and support	<p>The VM base is perpetual.</p> <p>You must separately contract support services on an annual basis.</p> <p>See the price list for details.</p>	<p>Hardware configuration restrictions apply. Support is not available.</p>	<p>The VM base is perpetual.</p> <p>You must separately contract support services on an annual basis.</p> <p>See the price list for details.</p>	<p>Single annually contracted SKU that contains a VM base and a FortiCare service bundle.</p> <p>Four support service bundle types are available:</p> <ul style="list-style-type: none"> <li>• Only FortiCare</li> <li>• UTM</li> <li>• Enterprise</li> <li>• ATP</li> </ul>	<p>An annually contracted program to create multiple sets of a single entitlement per VM. Entitlements contain a VM base and FortiCare bundle.</p> <p>Four support service bundle types are available:</p> <ul style="list-style-type: none"> <li>• Only FortiCare</li> <li>• UTM</li> <li>• Enterprise</li> <li>• ATP</li> </ul>
vCPU number upgrade during contracted term	Not supported.			<p>Supported. You can also upgrade the support service bundle.</p> <p>Contact a Fortinet sales representative to upgrade.</p>	<p>Supported. You can apply different VM entitlement configurations in the FortiFlex portal. API is not supported at this time.</p>
vCPU number downgrade during contracted term	Not supported.				
VDOM support	<p>By default, each CPU level supports up to a certain number of VDOMs.</p> <p>Refer to the FortiGate-VM data sheet for default limits.</p>	<p>VDOMs are supported, but restricted by the CPU allowance for the trial license.</p>	<p>By default, all CPU levels do not support adding VDOMs.</p>	<p>By default, all CPU levels do not support adding VDOMs.</p> <p>S-series VM instances support the subscription VDOM license.</p>	

## Consuming a new vCPU

In 7.2.4 and later versions, FortiGate-VM supports automatic vCPU hot-add/hot-remove to the limit of the license entitlement after activating an S-series license or a FortiFlex license. This enhancement removes the requirement for the CLI command `execute cpu add` to be run or a reboot to be performed when the FortiGate-VM has a lower number of vCPUs allocated than the licensed number of vCPUs.

## CLI troubleshooting

In some cases, you can view more information from the CLI to diagnose issues with VM licensing. This is also useful when the GUI is inaccessible due to an invalid contract.

Before you begin, ensure your FortiGate has the proper routes to connect to the internet. Run all following debug commands for a full picture of the issue.

### To view the license status, expiration date, and VM resources:

```
# get system status
Version: FortiGate-VM64-KVM v6.4.2,build1723,200730 (GA)
...
Serial-Number: FGVM08*****
....
License Status: Valid
License Expiration Date: 2020-12-10
VM Resources: 1 CPU/8 allowed, 2010 MB RAM
...
```

### To display license details:

```
# diagnose debug vm-print-license
SerialNumber: FGVM08*****
CreateDate: Tue Dec 10 00:57:32 2019
License expires: Thu Dec 10 00:00:00 2020
Expiry: 366
Key: yes
Cert: yes
Key2: yes
Cert2: yes
Model: 08 (11)
CPU: 8
MEM: 2147483647
```

### To display license information from FortiGuard:

```
# diagnose hardware sysinfo vm full
UUID:      abbe*****
valid:     1
status:    1
code:      200
warn:      0
copy:      0
received:  4604955037
warning:   4600905081
```

recv: 202009152207  
dup:

Field	Value and description
Valid	0 – Invalid 1 – Valid
Status	0 – Startup 1 – Success 2 – Warning 3 – Error 4 – Invalid Copy 5 – Eval Expired 6 - Grace Period. For FortiFlex, there is a two-hour grace period to begin passing traffic upon retrieving the license from FortiCare.
Code	2xx, 3xx – Success 200 – Valid 202 – Accepted (treated as correct response code) 4xx - Error 400 – Expired 401 – Duplicate 5xx – Warning 500 - Warning 502 – Invalid. Cannot connect to FortiGuard Distribution Servers 6xx – Evaluation license expired  Other codes - Error

The following are examples of common combinations:

This combination indicates the license is valid and functioning normally:

```
valid: 1  
status: 1  
code: 200
```

This combination indicates the license itself is valid, but is running on a duplicate instance:

```
valid: 1  
status: 4  
code: 401
```

This combination indicates the system cannot connect to FortiGuard:

```
valid: 0  
status: 2  
code: 502
```

This combination indicates the license is expired and invalid:

```
valid: 0
status: 3
code: 400
```

This combination indicates the VM is unlicensed:

```
valid: 0
status: 3
code: 0
```

For FortiFlex licenses, the following command allows you to enter the license token and proxy information:

```
# execute vm-license <token> https://<username>:<password>@<proxy IP address>:<proxy port>
```

FortiOS can receive the following error codes from the FortiCare server:

```
1 - Runtime error (server unhandled error on FortiCare sever)
57 - License Token is invalid
58 - License Token is already used and cannot be used again to retrieve license key
```

The FortiGate can generate the following error code:

```
60 - Failed to request forticare license. Failed to download VM license.
```

Contact [Fortinet Support](#) for assistance if your licensing issue persists.

## Permanent trial mode for FortiGate-VM

A permanent evaluation VM license replaces the 15 day evaluation period for FortiGate-VM. The evaluation VM license applies to all private cloud (VMware ESXi, KVM, and so on) and all bring your own license (BYOL) public cloud instances.

When spinning up a new FortiGate-VM, you choose to log in to FortiCare to activate the VM trial or upload a new license.

Limitations of the evaluation VM license include the following:

- Maximum of one free evaluation copy per FortiCare account
- Support for low encryption operation only, except for GUI management access and FortiManager communications
- Maximum of 1 CPU and 2 GB of memory
- Maximum of three interfaces, firewall policies, and routes
- No FortiCare support
- No FortiGuard support
- Support for a maximum of two virtual domains (VDM). When using multi-VDM mode, the root VDM must be an admin type and the other can be a traffic VDM. See [VDM types on page 2300](#).

### To obtain the permanent VM trial license from FortiCare using the CLI:

1. A newly deployed FortiGate-VM no longer has a valid evaluation license, even if the instance has only 1 CPU and 2 GB of memory. Run `get sys stat`. The following output is expected:

```
Version: FortiGate-VM64 v7.2.1,build1242,220715 (interim)
...
Serial-Number: FGVMEVNXFLTGKOBK
License Status: Invalid
VM Resources: 1 CPU/1 allowed, 2007 MB RAM/2048 MB allowed
```

**2. Obtain the permanent VM trial license from FortiCare:**

```
execute vm-license-options account-id xxxx@fortinet.com
execute vm-license-options account-password xxxxxxxx
execute vm-license
This VM is using the evaluation license. This license does not expire.
Limitations of the Evaluation VM license include:
  1.Support for low encryption operation only
  2.Maximum of 1 CPU and 2GiB of memory
  3.Maximum of three interfaces, firewall policies, and routes each
  4.No FortiCare Support
This operation will reboot the system !
Do you want to continue? (y/n)y

Connection to 10.6.30.74 closed.
```

**3. You can run the following commands to check that the permanent VM trial license is valid:**

- **get sys stat.** The following output is expected:

```
Version: FortiGate-VM64 v7.2.1,build1242,220715 (interim)
...
Serial-Number: FGVMEVNXFLTGKOBBC
License Status: Valid
VM Resources: 1 CPU/1 allowed, 2007 MB RAM/2048 MB allowed
```

- **diagnose hardware sysinfo vm full.** The following output is expected:

```
UUID:      4213dbbc94f2520b0d75eeafe1b319c7
valid:      1
status:     1
code:       0
warn:       0
copy:       0
received:   4294939472
warning:    4294939472
recv:       202207162014
dup:
```

- **diagnose debug vm-print-license.** The following output is expected:


```
SerialNumber: FGVMEVNXFLTGKOBBC
CreateDate: Sat Jul 16 20:11:15 2022
UUID: 4213dbbc94f2520b0d75eeafe1b319c7
Key: yes
Cert: yes
Key2: yes
Cert2: yes
Model: EVAL (1)
CPU: 1
MEM: 2048
VDOM license:
  permanent: 2
```

subscription: 0

### To obtain the permanent VM trial license from FortiCare using the GUI:

1. When unlicensed, the FortiOS GUI allows you to download the permanent VM trial license from FortiCare with your FortiCare account credentials. In the FortiGate VM License page, for *How will you license this VM?*, select *Evaluation License*.

#### FortiGate VM License

 VM is not licensed or license is invalid for current VM configuration.  
Upload a new license or reconfigure the VM.

How will you license this VM? ☐ Full License

☒ Evaluation License

This license can only be used once per FortiCare account and has several restrictions:

- Support for low encryption operation only
- Maximum of 1 CPU and 2GiB of memory
- Maximum of three interfaces, firewall policies, and routes each
- No FortiCare Support

[Learn more about the Evaluation VM License](#) 

#### Login to FortiCare to activate VM Trial

Email

@fortinet.com

Password

.....

Are you a government user? ☐

OK

Cancel

2. In the *Email* field, enter your FortiCare account email address.
3. In the *Password* field, enter your FortiCare account password.
4. Click **OK**. When a permanent VM trial license is applied, the FortiOS, the GUI shows a summary of the license

limitations and allows you to upload a paid VM license.

FortiGate VM License

This VM is using the evaluation license. This license does not expire. Limitations of the Evaluation VM License include:

- Support for low encryption operation only
- Maximum of 1 CPU and 2GiB of memory
- Maximum of three interfaces, firewall policies, and routes each
- No FortiCare Support

[Learn more about the Evaluation VM License](#)

Allocated vCPUs 100% 1 / 1

Allocated RAM 98% 2 GiB / 2 GiB

Upload License File

Select file ➕ Upload

OK Cancel

### To allow FortiManager to apply a license to an unlicensed FortiGate-VM instance:

1. Confirm that the FortiGate is unlicensed by running `get system status` in the FortiOS CLI. The following shows expected output for this command:

```
Version: FortiGate-VM64-AZURE v7.2.1,build1252,220728 (interim)
...
Serial-Number: FGVMEVTN8UP4KIA6
License Status: Invalid
VM Resources: 1 CPU/1 allowed, 1945 MB RAM/2048 MB allowed
```

2. In the FortiOS CLI, configure the FortiManager as central management:

```
config system central-management
    set type fortimanager
    set fmg "<FortiManager IP address>"
end
```

3. In FortiManager, configure the VM license as [Installing VM licenses](#) describes.

## Adding VDOMs with FortiGate v-series

Each FortiGate-VM base license type allows a default number of virtual domains (VDOM). This topic provides sample procedures to add VDOMs beyond the default number using separately purchased VDOM licenses.

This topic consists of the following steps:

1. [Activate the FortiGate-VM with the base license.](#)
2. [Add more VDOMs to the FortiGate-VM.](#)



## To activate the FortiGate-VM with the base license:

1. Purchase and register the FortiGate-VM base license in FortiCare:
  - a. Purchase the FortiGate-VM base license from Fortinet or a Fortinet reseller.
  - b. You receive a license certification with a registration code. Open the certification.
  - c. Log in to [Fortinet Customer Service & Support](#).
  - d. Go to *Register Now* and enter the provided registration code.
  - e. Follow the registration process. The serial number generates and displays on the *Registration Completion* page.
  - f. Go to *Asset > Manage/View Products*. Click the serial number to download the license file.
2. Upload the FortiGate-VM base license file to FortiOS:
  - a. Log in to the FortiGate-VM GUI.
  - b. In *Dashboard > Status*, in the *Virtual Machine* widget, click *FortiGate VM License*.
  - c. Click the *Upload* button.
  - d. Select the FortiGate-VM base license file, then click *OK*. The FortiGate-VM reboots after applying the base license.
3. Verify the FortiGate-VM base license status and VDOM information:
  - a. Log in to the FortiGate-VM GUI.
  - b. In *Dashboard > Status*, in the *Virtual Machine* widget, ensure that there is a checkmark in front of the FortiGate-VM base license name. The checkmark indicates that the base license is valid.
  - c. You can check VDOM information using the CLI. The following output shows that the maximum number of VDOMs is currently one. This is correct since the FortiGate-VM base license only supports the default root VDOM that the system uses.

## To add more VDOMs to the FortiGate-VM:

You can repeat this procedure multiple times to stack multiple VDOM licenses on the same FortiGate-VM.

1. Purchase and register the FortiGate-VM upgrade license in FortiCare. This example adds 15 VDOMs:
  - a. Purchase the FortiGate-VM upgrade license from Fortinet or a Fortinet reseller.
  - b. You receive a license certification with a registration code. Open the certification.
  - c. Log in to [Fortinet Customer Service & Support](#).
  - d. Go to *Asset > Register/Activate* and enter the provided registration code.
  - e. On the *Specify License Confirmation Information* screen, enter the FortiGate-VM serial number to apply the VDOM upgrade license to the FortiGate-VM. In this example, the FortiGate-VM serial number is *FGVM4VTM19000476*.

- f. Follow the registration process.
- g. Go to *Asset > Manage/View Products > .* Select the desired product, then click *License & Key*. The VDOM upgrade license displays under *Registered License(s)*, and a key for adding 15 VDOMs (in this example

*M6JSD-8EE32-VHIJB-N* displays under *Available Key(s)*.

Customer Service & Support Home **Asset** Assistance Download Feedback 196068 fortinet

Product Details FortiGate VM04V FGVM4V/TM19000476 Firmware & General Updates Will Expire On 2020-04-29

Back To List

Information

- General
- Location
- Entitlement
- License & Key**
- Statistics

Registration

- Renew Contract
- + Add Licenses

Assistance

- Ticket List
- Technical Request
- Customer Service

Registered License(s)

License Type	License Number	Registration Date
VDOM Upgrade	VDOM4713241427	2018-04-13
Virtual Domain License Add 15		
FortiGateVM	FGVM4713410408	2019-04-29
FortiGate-VM for all supported platforms. 4 x vCPU core and up to 6GB RAM		

Available Key(s)

Key	License Number	Description
<a href="#">Get The License File</a>	FGVM4713410408	FortiGate-VM for all supported platforms. 4 x vCPU core and up to 6GB RAM
M6JSD-8EE32-VHIJB-N	VDOM4713241427	Virtual Domain License for 15

- Apply the FortiGate-VM upgrade license key to FortiOS:
  - Log in to the FortiGate-VM CLI in the local console or using SSH.
  - Apply the VDOM upgrade license key:  

```
FGVM4VTM19000476 # execute upd-vd-license M6JSD-8EE32-VHIJB-N
```

```
update vdom license succeeded
```
- Verify the FortiGate-VM VDOM information:
  - Log in to the FortiGate-VM CLI in the local console or using SSH.
  - Check VDOM information using the CLI. The following output shows that the maximum number of VDOMs is currently 15. When you add VDOMs for the first time on a FortiGate-VM v-series instance, FortiOS does not count the default VDOM, as the default VDOM is the so-called root VDOM that the system uses and FortiOS does not treat it as a countable VDOM in terms of VDOM addition. Therefore, as in this example, if your FortiGate-VM had the default VDOM configuration, then you add 15 VDOMs, FortiOS displays the maximum VDOM number as 15, not 16.

```
# get system status
Version: FortiGate-VM64-KVM v6.4.4,build1803,201209 (GA)
Virus-DB: 82.00644(2020-12-18 12:20)
Extended DB: 82.00644(2020-12-18 12:20)
Extreme DB: 1.00000(2018-04-09 18:07)
IPS-DB: 16.00982(2020-12-17 01:04)
IPS-ETDB: 0.00000(2001-01-01 00:00)
APP-DB: 16.00982(2020-12-17 01:04)
INDUSTRIAL-DB: 6.00741(2015-12-01 02:30)
Serial-Number: FGVM02TM20000000
IPS Malicious URL Database: 2.00862(2020-12-18 06:12)
License Status: Invalid Copy
License Expiration Date: 2021-10-02
VM Resources: 2 CPU/2 allowed, 2010 MB RAM
Log hard disk: Available
Hostname: FGDocs
Private Encryption: Disable
Operation Mode: NAT
Current virtual domain: root
Max number of virtual domains: 1
Virtual domains status: 1 in NAT mode, 0 in TP mode
Virtual domain configuration: disable
FIPS-CC mode: disable
```

```
Current HA mode: standalone
Branch point: 1803
Release Version Information: GA
FortiOS x86-64: Yes
System time: Fri Dec 25 13:24:20 2020
```

## Terraform: FortiOS as a provider

Fortinet's Terraform support provides customers with more ways to efficiently deploy, manage, and automate security across physical FortiGate appliances and virtual environments. You can use Terraform to automate various IT infrastructure needs, thereby diminishing mistakes from repetitive manual configurations.

For example, if Fortinet is releasing a new FortiOS version, your organization may require you to test a new functionality to determine how it may impact the environment before globally deploying the new version. In this case, the ability to rapidly stand up environments and test these functions prior to production environment integration provides a resource-efficient and fault-tolerant approach.

The following example demonstrates how to use the Terraform FortiOS provider to perform simple configuration changes on a FortiGate unit. It requires the following:

- FortiOS 6.0 or later
- [FortiOS Provider](#): This example uses terraform-provider-fortios 1.0.0.
- [Terraform](#): This example uses Terraform 0.11.14.
- REST API administrator created on the FortiGate with the API key

For more information, see the Terraform FortiOS Provider at <https://www.terraform.io/docs/providers/fortios/index.html>.

### To create a REST API administrator:

1. On the FortiGate, go to *System > Administrators* and click *Create New > REST API Admin*.
2. Enter the *Username* and, optionally, enter *Comments*.
3. Select an *Administrator Profile*.
4. We recommend that you create a new profile with minimal privileges for this terraform script:
  - a. In the *Administrator Profile* drop down click *Create New*.
  - b. Enter a name for the profile.
  - c. Configure the *Access Permissions*:
    - *None*: The REST API is not permitted access to the resource.
    - *Read*: The REST API can send read requests (HTTP GET) to the resource.
    - *Read/Write*: The REST API can send read and write requests (HTTP GET/POST/PUT/DELETE) to the resource.
  - d. Click *OK*.
5. Enter *Trusted Hosts* to specify the devices that are allowed to access this FortiGate.
6. Click *OK*.

An API key is displayed. This key is only shown once, so you must copy and store it securely.

## To configure FortiGate with Terraform Provider module support:

1. Download the terraform-provider-fortios file to a directory on the management computer.

2. Create a new file with the .tf extension for configuring your FortiGate:

```
root@mail:/home/terraform# ls
terraform-provider-fortios_v1.0.0_x4 test.tf
```

3. Edit the test.tf Terraform configuration file:

In this example, the FortiGate's IP address is 10.6.30.5, and the API user token is 17b\*\*\*\*\*63ck. Your provider information must also be changed.

```
# Configure the FortiOS Provider
provider "fortios" {
  hostname = "10.6.30.5"
  token = "17b*****63ck"
}
```

4. Create the resources for configuring your DNS object and adding a static route:

```
resource "fortios_system_setting_dns" "test1" {
  primary = "172.16.95.16"
  secondary = "8.8.8.8"
}
resource "fortios_networking_route_static" "test1" {
  dst = "110.2.2.122/32"
  gateway = "2.2.2.2"
  blackhole = "disable"
  distance = "22"
  weight = "3"
  priority = "3"
  device = "port2"
  comment = "Terraform test"
}
```

5. Save your Terraform configuration file.

6. In the terminal, enter terraform init to initialize the working directory.

It reads the provider if the name follows the convention terraform-provider-[name]:

```
root@mail:/home/terraform# terraform init
Initializing the backend...
Terraform has been successfully initialized!
You may now begin working with Terraform. Try running "terraform plan" to see
any changes that are required for your infrastructure. All Terraform commands
should now work.
If you ever set or change modules or backend configuration for Terraform,
rerun this command to reinitialize your working directory. If you forget, other
commands will detect it and remind you to do so if necessary.
```

7. Run terraform -v to verify the version of loaded provider module:

```
root@mail:/home/terraform# terraform -v
Terraform v0.11.14
+ provider.fortios v1.0.0
```

8. Enter terraform plan to parse the configuration file and read from the FortiGate configuration to see what Terraform changes:

This example create a static route and updates the DNS address. You can see that Terraform reads the DNS addresses from the FortiGate and then lists them.

```

root@mail:/home/terraform# terraform plan
Refreshing Terraform state in-memory prior to plan...
The refreshed state will be used to calculate this plan, but will not be
persisted to local or remote state storage.
fortios_networking_route_static.test1: Refreshing state... (ID: 2)
fortios_system_setting_dns.test1: Refreshing state... (ID: 96.45.45.45)
-----
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
+ create
~ update in-place
Terraform will perform the following actions:
+ fortios_networking_route_static.test1
id: <computed>
blackhole: "disable"
comment: "Terraform test"
device: "port2"
distance: "22"
dst: "110.2.2.122/32"
gateway: "2.2.2.2"
priority: "3"
weight: "3"
~ fortios_system_setting_dns.test1
primary: "96.45.45.45" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
Plan: 1 to add, 1 to change, 0 to destroy.
-----
Note: You didn't specify an "-out" parameter to save this plan, so Terraform
can't guarantee that exactly these actions will be performed if
"terraform apply" is subsequently run.

```



If you are running terraform-provider-fortios 1.1.0, you may see the following error:

```
Error: Error getting CA Bundle, CA Bundle should be set when
insecure is false.
```

In this case, add the following line to the FortiOS provider configuration in the test.tf file:

```
insecure = "true"
```

## 9. Enter terraform apply to continue the configuration:

```

root@mail:/home/terraform# terraform apply
fortios_system_setting_dns.test1: Refreshing state... (ID: 96.45.45.45)
fortios_networking_route_static.test1: Refreshing state... (ID: 2)
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
+ create
~ update in-place
Terraform will perform the following actions:
+ fortios_networking_route_static.test1
id: <computed>
blackhole: "disable"
comment: "Terraform test"
device: "port2"
distance: "22"
dst: "110.2.2.122/32"
gateway: "2.2.2.2"

```

```

priority: "3"
weight: "3"
~ fortios_system_setting_dns.test1
primary: "96.45.45.45" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
Plan: 1 to add, 1 to change, 0 to destroy.
Do you want to perform these actions?
Terraform will perform the actions described above.
Only 'yes' will be accepted to approve.
Enter a value: yes
fortios_networking_route_static.test1: Creating...
blackhole: "" => "disable"
comment: "" => "Terraform test"
device: "" => "port2"
distance: "" => "22"
dst: "" => "110.2.2.122/32"
gateway: "" => "2.2.2.2"
priority: "" => "3"
weight: "" => "3"
fortios_system_setting_dns.test1: Modifying... (ID: 96.45.45.45)
primary: "96.45.45.45" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
fortios_networking_route_static.test1: Creation complete after 0s (ID: 2)
fortios_system_setting_dns.test1: Modifications complete after 0s (ID: 172.16.95.16)
Apply complete! Resources: 1 added, 1 changed, 0 destroyed.

```

The FortiGate is now configured according to the configuration file.

10. To change or delete something in the future, edit the configuration file and then apply it again. In supported cases, it deletes, adds, or updates new entries as configured. For instance, in this example you can remove the static route and revert the DNS address to its original configuration by changing the .tf file:

**a. Edit the configuration file:**

```

# Configure the FortiOS Provider
provider "fortios" {
  hostname = "10.6.30.5"
  token = "17b*****63ck"
}
resource "fortios_system_setting_dns" "test1" {
  primary = "96.45.45.45"
  secondary = "208.91.112.22"
}
#resource "fortios_networking_route_static" "test1" {
#  dst = "110.2.2.122/32"
#  gateway = "2.2.2.2"
#  blackhole = "disable"
#  distance = "22"
#  weight = "3"
#  priority = "3"
#  device = "port2"
#  comment = "Terraform test"
#}

```

- b. Entering terraform apply deletes the static route that is commented out of the configuration file, and reverts the DNS address to the old address:**

```

root@mail:/home/terraform# terraform apply
fortios_system_setting_dns.test1: Refreshing state... (ID: 172.16.95.16)

```

```

fortios_networking_route_static.test1: Refreshing state... (ID: 2)
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
~ update in-place
- destroy
Terraform will perform the following actions:
- fortios_networking_route_static.test1
~ fortios_system_setting_dns.test1
primary: "172.16.95.16" => "96.45.45.45"
secondary: "8.8.8.8" => "208.91.112.22"
Plan: 0 to add, 1 to change, 1 to destroy.
Do you want to perform these actions?
Terraform will perform the actions described above.
Only 'yes' will be accepted to approve.
Enter a value: yes
fortios_networking_route_static.test1: Destroying... (ID: 2)
fortios_system_setting_dns.test1: Modifying... (ID: 172.16.95.16)
primary: "172.16.95.16" => "96.45.45.45"
secondary: "8.8.8.8" => "208.91.112.22"
fortios_networking_route_static.test1: Destruction complete after 0s
fortios_system_setting_dns.test1: Modifications complete after 0s (ID: 96.45.45.45)
Apply complete! Resources: 0 added, 1 changed, 1 destroyed.

```

## Troubleshooting

Use the HTTPS daemon debug to begin troubleshooting why a configuration was not accepted:

```
# diagnose debug enable
# diagnose debug application httpsd -1
```



The REST API 403 error means that your administrator profile does not have sufficient permissions.

The REST API 401 error means that you do not have the correct token or trusted host.

## PF and VF SR-IOV driver and virtual SPU support

Physical Function (PF) and Virtual Function (VF) PCI Passthrough and SR-IOV drivers in FortiGate guest VM are supported.

PF provides the ability for PCI Passthrough, but requires an entire Network Interface Card (NIC) for a VM. It can usually achieve greater performance than a Virtual Function (VF) based SR-IOV. PF is also expensive. While VF allows one NIC to be shared among multiple guests VMs, PF is allocated to one port on a VM.

The supported driver versions are:

Driver	Version	Hypervisor	PCI-Passthrough/SR-IOV	vSPU (In-guest DPDK)	Note
ixgbe	5.6.5	ESXi, KVM	Yes	Yes	
ixgbevf	4.6.3	ESXi, KVM	Yes		
i40e	2.10.19.82	ESXi, KVM	Yes	Yes	
i40evf	3.6.15	ESXi, KVM	Yes	Yes	Available in FortiOS 6.4.0 and earlier versions.
lavf	4.1.1	ESXi, KVM	Yes	Yes	Replaces i40evf in FortiOS 6.4.1 and later versions. Supports Intel E810-C 100G adapters.
Mlx5	4.6-1.0.1	ESXi, KVM	Yes	Yes	Supports Nvidia ConnectX-5 and ConnectX-6 100G adapters.
Bnxt_en	1.10.1-216.0.416.1	ESXi, KVM	Yes	Yes	Available in FortiOS 6.4.3 and later versions. Supports Broadcom P2100G 100G adapters.
Vmxnet3	1.4.a.0-k-NAPI	ESXi		Yes	The combination of VMware ESXi and NSX-T does not support virtual SPU (vSPU).



Other hypervisors, such as Xen or Microsoft Hyper-V, may work with vSPU, although they are unverified.



All tools and software utilities for UEFI 1.X have been removed from 6.2.0 and later releases. Update to UEFI 2.x to use the UEFI tools or software utilities.

You perform the configuration to use PF or VF on the hypervisor, and do not configure it on the FortiGate.

#### To check what driver is being used on the FortiGate:

```
# diagnose hardware deviceinfo nic port2
Name:      port2
Driver:    i40e
Version:   2.4.10
Bus:       0000:03:00.0
Hwaddr:    3c:fd:fe:1e:98:02
```



```

Permanent Hwaddr:3c:fd:fe:1e:98:02
State:      up
Link:       up
Mtu:        1500
Supported:   auto 1000full 10000full
Advertised:  auto 1000full 10000full
Auto:        disabled
Rx packets:  0
Rx bytes:    0
Rx compressed: 0
...

```

## Using OCI IMDSv2

OCI IMDSv2 offers increased security for accessing instance metadata compared to IMDSv1. IMDSv2 is used in OCI SDN connectors and on instance deployments with bootstrap metadata. When upgrading from previous FortiOS builds with legacy IMDSv1 endpoints, the endpoints will be updated to IMDSv2, and the same calls can be made.

The following use cases illustrate IMDSv2 support on the FortiGate-VM.

### To configure the Oracle OCI instance to use IMDSv2:

1. In OCI, deploy an instance using IMDSv2 with bootstrap metadata. There are two methods to enable IMDSv2 :

- Use the OCI command line to deploy an instance using `user-data`. This example uses a MIME file that contains the license and configuration, as well as a JSON file that specifies to disable V1 metadata.

```

oci compute instance launch
--availability-domain ww1:US-ASHBURN-AD-1
--compartment-id
ocidl.tenancy.oc1..aaaaaaaaa3aaaaaaaaaaaaaaaaa7xxxxxx54aaaaa4xxxxxxxxx55xxxa
--display-name fos-byol-v6.4.6-b2290-emulated
--image-id
ocidl.image.oc1.iad.aaaaaaa6xxx43xxxxxxxxx7aaaaaaaaaaaaaaaaaaaaa3xxxxxxxxxxxxxx
--subnet-id
ocidl.subnet.oc1.iad.aaaaaaaaxxxxxxxxxx2xxxxxxxxxxxxxxxxxxxxx5aaa4xxxxxxxxxxxx42aaa
--shape VM.Standard1.4
--assign-public-ip true
--user-data-file /home/oci/userdata/mime.txt
--ssh-authorized-keys-file /home/oci/userdata/myfirstkeypair.pub
--instance-options file://home/oci/scripts/metadatav2.json

root@mail:/home/oci/scripts# cat metadatav2.json
{
  "areLegacyImdsEndpointsDisabled": true
}

```

- While the instance is running, edit the instance metadata service version in the GUI ,and change the allowed

IMDS version to **VERSION 2 ONLY** (see [Getting Instance Metadata](#) in the OCI documentation).

- The FortiGate will use the metadata v2 endpoints to get the metadata bootstrap information. In FortiOS, verify this by running the following after bootup:

```
# diagnose debug cloudinit show
```

**To configure an SDN connector with meta-IAM enabled and firewall addresses to obtain dynamic addresses:**

- Configure an IAM policy and dynamic group (see [How Policies Work](#) and [Managing Dynamic Groups](#) in the OCI documentation).

- In FortiOS, configure the OCI Fabric connector (see [OCI SDN connector using certificates on page 2884](#) for detailed instructions):

- a. Create the SDN connector.
- b. Verify that the OCI connector comes up (*Security Fabric > External Connectors* page indicates the status is up).
- c. Configure a dynamic firewall address with a filter.
- d. Verify the dynamic firewall address is resolved by the SDN connector.

#### To manually update the external IP:

```
# execute update-eip
instance: fos-byol-v6.4.6-b2290-emulated
  vnic0: fos-byol-v6.4.6-b2290-emulated
    10.0.0.58 (129.213.138.192)
port1: 10.0.0.58, eip: 129.213.138.192
EIP is updated successfully
```

#### To verify the OCI daemon debugs related to metadata:

```
# diagnose test application ocid 4
instance: fos-byol-v6.4.6-b2290-emulated
  vnic0: fos-byol-v6.4.6-b2290-emulated
    10.0.0.58

# diagnose test application ocid 5
Compartment
Id:ocid1.tenancy.oc1..aaaaaaaaa3aaaaaaaaaaaaaaaa7xxxxxx54aaaaaa4xxxxxxx55xxxa
Instance Id:ocid1.instance.oc1.iad.aaaaaaaaaaaaaaaaaaaa4aaaaa5aaaaaaaa4xxxxxxx2aaaaaaa
Instance Name:fos-byol-v6.4.6-b2290-emulated
OCI Regarxiehlion:us-ashburn-1

# diagnose test application ocid 6
Instance Principal Token has been refreshed
```

## FIPS cipher mode for AWS, Azure, OCI, and GCP FortiGate-VMs

AWS, Azure, OCI, and GCP FortiGate-VMs support FIPS cipher mode. You must remove all VPN configurations before you can enable FIPS CC mode.

FIPS cipher mode only allows a restricted set of ciphers for features that require encryption, such as SSH, IPsec and SSL VPN, and HTTPS. You cannot use insecure protocols such as Telnet, TFTP, and HTTP to access the FortiGate-VM.

You must perform a factory reset to disable `fips-ciphers` mode.

#### To enable fips-cipher mode:

```
config system fips-cc
  set status fips-ciphers
end
Warning: entering fips-ciphers mode. To exit this mode, factory reset is required.
Do you want to continue? (y/n) y
```

The following behavior occurs when you enable FIPS cipher mode:

- You can restore a license, image, configuration, and so on from an FTP server.
- The following options are available:

**SSH algorithms**

- aes128-gcm@openssh.com
- aes256-gcm@openssh.com
- hmac-sha2-256
- hmac-sha2-512

**IKE/IPsec phase1 proposals**

- aes128-sha256
- aes128-sha256
- aes128-sha384
- aes128-sha384
- aes128-sha512
- aes128-sha512
- aes128gcm-prfsha256
- aes128gcm-prfsha256
- aes128gcm-prfsha384
- aes128gcm-prfsha384
- aes128gcm-prfsha512
- aes128gcm-prfsha512
- aes256-sha256
- aes256-sha256
- aes256-sha384
- aes256-sha384
- aes256-sha512
- aes256-sha512
- aes256gcm-prfsha256
- aes256gcm-prfsha256
- aes256gcm-prfsha384
- aes256gcm-prfsha384
- aes256gcm-prfsha512
- aes256gcm-prfsha512

**IKE/IPsec phase2 proposals**

- aes128-sha256
- aes128-sha256
- aes128-sha384
- aes128-sha384
- aes128-sha512
- aes128-sha512
- aes128gcm
- aes128gcm
- aes256-sha256
- aes256-sha256
- aes256-sha384
- aes256-sha384
- aes256-sha512
- aes256-sha512

	<ul style="list-style-type: none"> <li>• aes256gcm</li> <li>• aes256gcm</li> </ul>
<b>IKE/IPsec DH groups</b>	<ul style="list-style-type: none"> <li>• Default = 19, or any three from 14 - 21, 27 - 32</li> </ul>
<b>HTTPS for admin and SSL VPN (with RSA server certificate) TLS suites</b>	<p>PFS:</p> <ul style="list-style-type: none"> <li>• TLS_AES_256_GCM_SHA384</li> <li>• ECDHE-RSA-AES256-GCM-SHA384</li> <li>• DHE-RSA-AES256-GCM-SHA384</li> <li>• TLS_AES_128_GCM_SHA256</li> <li>• ECDHE-RSA-AES128-GCM-SHA256</li> <li>• DHE-RSA-AES128-GCM-SHA256</li> </ul> <p>Elliptic curves:</p> <ul style="list-style-type: none"> <li>• prime256v1</li> <li>• secp384r1</li> <li>• secp521r1</li> </ul> <p>DH group:</p> <ul style="list-style-type: none"> <li>• RFC3526/Oakley group 14 (2048 bits)</li> </ul>
<b>HTTPS for admin and SSL VPN (with ECC server certificate) TLS suites</b>	<p>PFS:</p> <ul style="list-style-type: none"> <li>• TLS_AES_256_GCM_SHA384</li> <li>• ECDHE-ECDSA-AES256-GCM-SHA384</li> <li>• TLS_AES_128_GCM_SHA256</li> <li>• ECDHE-ECDSA-AES128-GCM-SHA256</li> </ul> <p>Elliptic curves:</p> <ul style="list-style-type: none"> <li>• prime256v1</li> <li>• secp384r1</li> <li>• secp521r1</li> </ul>

- The FortiCare license is validated.
- FortiGuard databases and engines are updated.
- The DH-RSA-AES128-GCM-SHA256 and DH-RSA-AES256-GCM-SHA384 ciphers are not supported.

# Hyperscale firewall

Hyperscale hardware and facilities can scale a distributed computing environment up to thousands of servers. It is about achieving massive scale in computing, typically for big data or cloud computing.

A hyperscale firewall secures hyperscale data centers and 5G networks.

See the [Hyperscale Firewall Guide](#). For information about the difference between hyperscale and standard FortiOS CGNAT, see [Hyperscale and standard FortiOS CGNAT feature comparison](#).

# Troubleshooting

This section is intended for administrators with super\_admin permissions who require assistance with basic and advanced troubleshooting. Administrators with other types of permissions may not be able to perform all of the tasks in this section.

This section contains the following troubleshooting topics:

- [Troubleshooting methodologies on page 3106](#)
- [Troubleshooting scenarios on page 3109](#)
  - [Checking the system date and time on page 3110](#)
  - [Checking the hardware connections on page 3111](#)
  - [Checking FortiOS network settings on page 3112](#)
  - [Troubleshooting CPU and network resources on page 3115](#)
  - [FortiGuard server settings on page 3152](#)
  - [Troubleshooting high CPU usage on page 3116](#)
  - [Checking the modem status on page 3120](#)
  - [Running ping and traceroute on page 3121](#)
  - [Checking the logs on page 3124](#)
  - [Verifying routing table contents in NAT mode on page 3125](#)
  - [Verifying the correct route is being used on page 3126](#)
  - [Verifying the correct firewall policy is being used on page 3126](#)
  - [Checking the bridging information in transparent mode on page 3127](#)
  - [Checking wireless information on page 3128](#)
  - [Performing a sniffer trace or packet capture on page 3129](#)
  - [Debugging the packet flow on page 3131](#)
  - [Testing a proxy operation on page 3134](#)
  - [Displaying detail Hardware NIC information on page 3135](#)
  - [Performing a traffic trace on page 3138](#)
  - [Using a session table on page 3138](#)
  - [Finding object dependencies on page 3142](#)
  - [Diagnosing NPU-based interfaces on page 3143](#)
  - [Identifying the XAUI link used for a specific traffic stream on page 3143](#)
  - [Running the TAC report on page 3145](#)
  - [Using the process monitor on page 3145](#)
  - [Other commands on page 3147](#)
  - [FortiGuard troubleshooting on page 3150](#)
  - [View open and in use ports on page 3154](#)
- [CLI troubleshooting cheat sheet on page 3155](#)
- [Additional resources on page 3155](#)

## Troubleshooting methodologies

The sections in this topic provide an overview of how to prepare to troubleshoot problems in FortiGate. They include verifying your user permissions, establishing a baseline, defining the problem, and creating a plan.

### Verify user permissions

Before you begin troubleshooting, verify the following:

- You have administrator privileges for the FortiGate.
- The FortiGate is integrated into your network.
- The operation mode is configured.
- The system time, DNS settings, administrator password, and network interfaces are configured.
- Firmware, FortiGuard AntiVirus, FortiGuard Application Control, and FortiGuard IPS are up to date.



If you are using a FortiGate that has virtual domains (VDOMs) enabled, you can often troubleshoot within your own VDOM. However, you should inform the super\_admin for the FortiGate that you will be performing troubleshooting tasks.

You may also need access to other networking equipment, such as switches, routers, and servers to carry out tests. If you do not have access to this equipment, contact your network administrator for assistance.

### Establish a baseline

FortiGate operates at all layers of the OSI model. For this reason, troubleshooting can be complex. Establishing baseline parameters for your system before a problem occurs helps to reduce the complexity when you need to troubleshoot.

A best practice is to establish and record the normal operating status. Regular operation data shows trends, and allows you to see where changes occur when problems arise. You can gather this data by using logs and SNMP tools to monitor the system performance or by regularly running information gathering commands and saving the output.



You should back up your FortiOS configuration on a regular basis even when you are not troubleshooting. You can restore the backed up configuration as needed to save time recreating it from the factory default settings.

Use the following CLI commands to obtain normal operating data for a FortiGate:

<code>get system status</code>	Displays firmware versions and FortiGuard engine versions, and other system information.
<code>get system performance status</code>	Displays CPU and memory states, average network usage, average sessions and session setup rate, viruses caught, IPS attacks blocked, and uptime.
<code>get hardware memory</code>	Displays information about memory.



<code>get system session status</code>	Displays total number of sessions.
<code>get router info routing-table all</code>	Displays all the routes in the routing table, including their type, source, and other useful data.
<code>get ips session</code>	Displays memory used and maximum amount available to IPS as well as counts
<code>get webfilter ftgd-statistics</code>	Displays a list of FortiGuard related counts of status, errors, and other data.
<code>diagnose sys session list</code>	Displays the list of current detailed sessions.
<code>show sys dns</code>	Displays the configured DNS servers.
<code>diagnose sys ntp status</code>	Displays information about NTP servers.

You can run any commands that apply to your system for information gathering. For example, if you have active VPN connections, use the `get vpn` series of commands to get more information about them.

Use `execute tac report` to get an extensive snapshot of your system. This command runs many diagnostic commands for specific configurations. It also records the current state of each feature regardless of the features deployed on your FortiGate. If you need to troubleshoot later, you can run the same command again and compare the differences to identify any suspicious output.

## Define the problem

The following questions are intended to compare the current behavior of the FortiGate with normal operations to help you define the problem. Be specific with your answers. After you define the problem, search for a solution in the troubleshooting scenarios section, and then create a plan to resolve it.

<b>What is the problem?</b>	The problem being observed may not be the actual problem. You should determine where the problem lies before starting to troubleshoot the FortiGate.
<b>Was the device working before?</b>	If the device never worked, it might be defective. For more information, see <a href="#">Troubleshooting your installation on page 84</a> .
<b>Can the problem be reproduced?</b>	If the problem is intermittent, it may be dependent on system load. Intermittent problems are challenging to troubleshoot because they are difficult to reproduce.
<b>What has changed?</b>	Use the FortiGate event log to identify possible configuration changes. There may be changes in the operating environment. For example, there might be a gradual increase in load as more sites are forwarded through the firewall. If something has changed, roll back the change and assess the impact.
<b>What is the scope of the problem?</b>	After you isolate the problem, determine what applications, users, devices, and operating systems the problem affects. The following questions are intended to narrow the scope of the problem and identify what to check during troubleshooting. The more factors you can eliminate, the less you need to check. For this reason, be as specific and accurate as possible when gathering information. <ul style="list-style-type: none"> <li>What is not working?</li> </ul>

- Is more than one thing not working?
- Is it partly working? If so, what parts are working?
- Is it a connectivity issue for the entire device, or is there an application that isn't reaching the Internet?
- Where did the problem occur?
- When did the problem occur and to which users or groups of users?
- What components are involved?
- What applications are affected?
- Can you use a packet sniffer to trace the problem?
- Can you use system debugging or look in the session table to trace the problem?
- Do any of the log files indicate a failure has occurred?

## Create a troubleshooting plan

After you define the problem and its scope, develop a troubleshooting plan.

### Create checklist

Make a list all the possible causes of the problem and how you can test for each cause.

Create a checklist to keep track of what has been tried and what is left to test. Checklists are useful when more than one person is performing troubleshooting tasks.

### Obtain the required equipment

Testing your solution may require additional networking equipment, computers, or other devices.

Network administrators usually have additional networking equipment available to loan you, or a lab where you can bring the FortiGate unit to test.

If you do not have access to equipment, check for shareware applications that can perform the same tasks. Often, there are software solutions you can use when hardware is too expensive.

### Consult Fortinet troubleshooting resources

After the checklist is created, refer to the troubleshooting scenarios sections to assist with implementing your plan. See [Troubleshooting scenarios on page 3109](#).

### Gather information for technical support

If you still require technical assistance after the plan is implemented, be prepared to provide Fortinet technical support with following information:

- Firmware build version (use the `get system status` command)
- Network topology diagram
- Recent configuration file
- Recent debug log (optional)
- Summary of troubleshooting steps you have taken and the results.



Do not provide the output from the `execute tac` report unless the support team requests it. The output from this command is very large and is not required in many cases.

### Contact technical support

Before contacting technical support, ensure you have login access (preferably with full read/write privileges) to all networking devices that could be relevant to troubleshooting.

If you are using VMs, be prepared to have someone who can log in to the virtual hosting platform in case it is necessary to check and possibly modify resource allocation.

For information about contacting technical support, go to [FortiCare Support Service](#) page.

## Troubleshooting scenarios

The following table is intended to help you diagnose common problems and provides links to the corresponding troubleshooting topics:

Problem	Probable cause	Recommended action
<b>Hardware connections</b>	<ul style="list-style-type: none"> <li>Are all of the cables and interfaces connected properly?</li> <li>Is the LED for the interface green?</li> </ul>	<a href="#">Checking the hardware connections on page 3111</a>
<b>FortiOS network settings</b>	<ul style="list-style-type: none"> <li>If you are having problems connecting to the management interface, is your protocol enabled on the interface for administrative access?</li> <li>Does the interface have an IP address?</li> </ul>	<a href="#">Checking FortiOS network settings on page 3112</a>
<b>CPU and memory resources</b>	<ul style="list-style-type: none"> <li>Is the CPU running at almost 100 percent usage?</li> <li>Is your FortiGate running low on memory?</li> </ul>	<a href="#">Troubleshooting CPU and network resources on page 3115</a>
<b>Modem status</b>	<ul style="list-style-type: none"> <li>Is the modem connected?</li> <li>Are there PPP issues?</li> </ul>	<a href="#">Checking the modem status on page 3120</a>
<b>Ping and traceroute</b>	Is the FortiGate experiencing complete packet loss?	<a href="#">Running ping and traceroute on page 3121</a>
<b>Logs</b>	Do you need to identify a problem?	<a href="#">Checking the logs on page 3124</a>
<b>Contents of the routing table (in NAT mode)</b>	<ul style="list-style-type: none"> <li>Are there routes in the routing table for default and static routes?</li> <li>Do all connected subnets have a route in the routing table?</li> <li>Does a route have a higher priority than it should?</li> </ul>	<a href="#">Verifying routing table contents in NAT mode on page 3125</a>
<b>Traffic routes</b>	Is the traffic routed correctly?	<a href="#">Verifying the correct route is being used on page 3126</a>

Problem	Probable cause	Recommended action
<b>Firewall policies</b>	Is the correct firewall policy applied to the expected traffic?	<a href="#">Verifying the correct firewall policy is being used on page 3126</a>
<b>Bridging information in transparent mode</b>	Are you having problems in transparent mode?	<a href="#">Checking the bridging information in transparent mode on page 3127</a>
<b>Firewall session list</b>	<ul style="list-style-type: none"> <li>Are there active firewall sessions?</li> </ul>	<a href="#">Using a session table on page 3138</a>
<b>Wireless Network</b>	Is the wireless network working properly?	<a href="#">Checking wireless information on page 3128</a>
<b>FortiGuard connectivity</b>	Is the FortiGate communicating properly with FortiGuard?	<a href="#">Verifying connectivity to FortiGuard on page 3150</a>
<b>Sniffer trace</b>	<ul style="list-style-type: none"> <li>Is traffic entering the FortiGate? Does the traffic arrive on the expected interface?</li> <li>Is the ARP resolution correct for the next-hop destination?</li> <li>Is the traffic exiting the FortiGate to the destination as expected?</li> <li>Is the FortiGate sending traffic back to the originator?</li> </ul>	<a href="#">Performing a sniffer trace or packet capture on page 3129</a>
<b>Packet flow</b>	Is traffic entering or leaving the FortiGate as expected?	<a href="#">Debugging the packet flow on page 3131</a>

## Checking the system date and time

The system date and time are important for FortiGuard services, logging events, and sending alerts. The wrong time makes the log entries confusing and difficult to use.

When possible, use Network Time Protocol (NTP) to set the date and time. This is an automatic method that does not require manual intervention. However, you must ensure that the port is allowed through the firewalls on your network. FortiToken synchronization requires NTP in many situations.

For information about setting the system date and time, see [Setting the system time on page 2275](#).

### To view and configure the date and time in the GUI:

1. Go to *Dashboard > Status*. The date and time are displayed in the *System Information* widget, next to *System Time*.
2. Go to *System > Settings*.
3. In the *System Time* section, select *NTP*, and then configure the *Time Zone*, and *Set Time* settings as required.

### To view the date and time in the CLI:

```
execute date
execute time
```

### To configure the date and time in the CLI:

Use the `set timezone ?` command to display a list of timezones and the integers that represent them.

```
config system global
    set timezone <integer>
end
config system ntp
    set type custom
    config ntpserver
        edit 1
            set server "ntp1.fortinet.net"
        next
        edit 2
            set server "ntp2.fortinet.net"
        next
    end
    set ntpsync enable
    set syncinterval 60
end
```

## Checking the hardware connections

If traffic is not flowing from the FortiGate, there may be a problem with the hardware connection.

### To check hardware connections:

1. Ensure the network cables are plugged into the interfaces.
2. Verify the LED connection lights for the network cables indicate there is a connection. The lights are typically green when there is a connection.
3. Change the cable when:
  - The cable or its connector are damaged.
  - You are unsure of the type or quality of the cable, such as straight through or crossover.
  - You see exposed wires at the connector.
4. Connect the FortiGate to different hardware.
5. Go to *Network > Interfaces* to ensure the link status for the interface is set to *Up*.  
The link status is based on the physical connection and cannot be set in FortiOS.

### To enable an interface in the GUI:

You should still perform basic software connectivity tests to ensure complete connectivity even if there was a problem with the hardware connection. The interface might also be disabled, or its *Status* might be set to *Down*. See [Interfaces on page 147](#).

1. Go to *Network > Interfaces*.
2. Select an interface, such as *Port1*, and click *Edit*.
3. In the *Miscellaneous* area, next to *Status*, click *Enabled*.
4. Click *OK*.

### To enable an interface in the CLI:

```
config system interface
```

```

edit port1
    set status up
next
end

```

## Checking FortiOS network settings

Check the FortiOS network settings if you have problems connecting to the management interface. FortiOS network settings include, interface settings, DNS Settings, and DHCP settings.

### Interface settings

If you can access the FortiGate with the management cable only, you can view the interface settings in the GUI.

#### To view the interface settings in the GUI:

1. Go to *Network > Interfaces*.
2. Select an interface and click *Edit*.
3. Check the following interfaces to ensure they are not blocking traffic.

Setting	Description
<b>Link Status</b>	<p>The status is <i>Up</i> when a valid cable is plugged in. The status is <i>Down</i> when an invalid cable is plugged in.</p> <p>The Link Status is shown physically by the connection LED for the interface. If the LED is green, the connection is good. If Link Status is <i>Down</i>, the interface does not work.</p> <p>Link status also appears in the <i>Network &gt; Interfaces</i> page by default.</p>
<b>Addressing mode</b>	Do not use <i>DHCP</i> if you do not have a DHCP server. You will not be able to log into an interface in DHCP mode as it will not have an IP address.
<b>IP/Network Mask</b>	An interface requires an IP address to connect to other devices. Ensure there is a valid IP address in this field. The one exception is when <i>DHCP</i> is enabled for this interface to get its IP address from an external DHCP server.
<b>IPv6 address</b>	The same protocol must be used by both ends to complete the connection. Ensure this interface and the remote connection are both using IPv4 or both are using IPv6 addresses.
<b>Administrative access</b>	If no protocols are selected, you will have to use the local management cable to connect to the unit. If you are using IPv6, configure the IPv6 administrative access protocols.
<b>Status</b>	Ensure the status is set to <i>Up</i> or the interface will not work.

#### To display the internal interface settings in the CLI:

```
FGT# show system interface <interface_name>
```

### To view the list of possible interface settings:

```
config system interface
    edit <interface_name>
        get
    end
```

## DNS settings

### To view DNS settings in the GUI:

Go to *Network > DNS*.

You can trace many networking problems back to DNS issues. Check the following items:

1. Are there values for both the *Primary DNS server* and *Secondary DNS server* fields.
2. Is the *Local Domain Name* correct?
3. Are you using IPv6 addressing? If so, are the IPv6 DNS settings correct?
4. Are you using Dynamic DNS (DDNS)? If so, is it using the correct server, credentials, and interface?
5. Can you contact both DNS servers to verify the servers are operational?
6. If an interface addressing mode is set to DHCP and is set to override the internal DNS, is that interface receiving a valid DNS entry from the DHCP server? Is it a reasonable address and can it be contacted to verify it is operational?
7. Are there any DENY security policies that need to allow DNS?
8. Can any internal device perform a successful traceroute to a location using the FQDN?

### DHCP server settings

DHCP servers are common on internal and wireless networks. The DHCP server will cause problems if it is not configured correctly.

### To view DHCP server settings in the GUI:

1. Go to *Network > Interfaces*.
2. Select an interface, and click *Edit*.

### Check the following items:

1. Is the DHCP server enabled?
2. Is the DHCP server entry set to *Relay*? If so, verify there is another DHCP server to which requests can be relayed. Otherwise, set it to *Server*.
3. Does the DHCP server use a valid IP address range? Are other devices using the addresses? If one or more devices are using IP addresses in this range, you can use the IP reservation feature to ensure the DHCP server does not use these addresses. See [DHCP servers and relays on page 331](#)
4. Is there a gateway entry? If not, add a gateway entry to ensure that the server's clients have a default route.
5. Is the system DNS setting being used? A best practice is to avoid confusion by using the system DNS whenever possible. However, you can specify up to three custom DNS servers, and you should use all three entries for redundancy.



There are some situations, such as a new wireless interface, or during the initial FortiGate configuration, where interfaces override the system DNS entries. When this happens, it often shows up as intermittent Internet connectivity.

To fix the problem, go to *Network > DNS*, and enable *Use FortiGuard Servers*.

## Checking CPU and memory resources

Check the CPU and memory resources when the FortiGate is not working, the network is slow, or there is a reduced firewall session setup rate. All processes share the system resources in FortiOS, including CPU and memory.

### To view system resources in the GUI:

Go to *Dashboard > Status*.

The resource information is located in the *CPU* and *Memory* widgets. For information, see [Dashboards and Monitors on page 87](#).

### To view system resources in the CLI:

```
get system performance status
```

### Sample output:

```
FGT# get system performance status
CPU states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU0 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU1 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU2 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU3 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
Memory: 4050332k total, 527148k used (13%), 3381312k free (83%), 141872k freeable (3%)
Average network usage: 41 / 28 kbps in 1 minute, 54 / 44 kbps in 10 minutes, 42 / 34 kbps
in 30 minutes
Average sessions: 33 sessions in 1 minute, 48 sessions in 10 minutes, 38 sessions in 30
minutes
Average session setup rate: 0 sessions per second in last 1 minute, 0 sessions per second
in last 10 minutes, 0 sessions per second in last 30 minutes
Virus caught: 0 total in 1 minute
IPS attacks blocked: 0 total in 1 minute
Uptime: 0 days, 22 hours, 59 minutes
```

The first line of the output shows the CPU usage by category:

```
CPU states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
```

The second line of the output shows the memory usage:

```
Memory: 4050332k total, 527148k used (13%), 3381312k free (83%), 141872k freeable (3%)
```

Memory usage should not exceed 90%. Using too much memory prevents some processes from functioning properly. For example, if the system is running low on memory, antivirus scanning enters into *failopen* mode where it drops connections or bypasses the antivirus system.

Other lines of output, such as average network usage, average session setup rate, viruses caught, and IPS attacks blocked, help determine why system resource usage is high.

For example:



- A high average network usage may indicate high traffic processing on the FortiGate,
- A very low or zero, average session setup rate may indicate the proxy is overloaded and unable to do its job.

## Troubleshooting CPU and network resources

### FortiGate has stopped working

If the FortiGate has stopped working, the first line of the output will look similar to this:

```
CPU states: 0% user 0% system 0% nice 100% idle
```

### Network is slow

If your network is running slow, the first line of the output will look similar to this:

```
CPU states: 1% user 98% system 0% nice 1% idle
```

This example shows that all of the CPU is being used by system processes, and the FortiGate is overloaded. When overloading occurs, it is possible a process such as `scanunitid` is using all the resources to scan traffic. In this case you need to reduce the amount of traffic being scanned by blocking unwanted protocols, configuring more security policies to limit scanning to certain protocols, or similar actions.

It is also possible a hacker has accessed your network and is overloading it with malicious activity, such as running a spam server or using zombie PCs to attack other networks on the Internet.

You can use the following command to investigate the problem with the CPU:

```
get system performance top
```

This command shows all of the top processes that are running on the FortiGate and their CPU usage. The process names are on the left. If a process is using most of the CPU cycles, investigate it to determine whether the activity is normal.

### Reduced firewall session setup rate

A reduced firewall session setup rate can be caused by a lack of system resources on the FortiGate, or reaching the session count limit for a VDOM.



As a best practice, administrators should record the session setup rate during normal operation to establish a baseline to help define a problem when you are troubleshooting.

The session setup rate appears in the `average sessions` section of the output.

A reduced firewall session setup rate will look similar to this:

```
Average sessions: 80 sessions in 1 minute, 30 sessions in 10 minutes, 42 sessions in 30
minutes
```

```
Average session setup rate: 3 sessions per second in last 1 minute, 0 sessions per second in
last 10 minutes, 0 sessions per second in last 30 minutes
```

In the example above, there were 80 sessions in 1 minute, or an average of 3 sessions per second.

The values for `10 minutes` and `30 minutes` allow you to take a longer average for a more reliable value if your FortiGate is working at maximum capacity. The smallest FortiGate can have 1,000 sessions established per second across the unit.



The session setup rate is a global command. If you have multiple VDOMs configured with many sessions in each VDOM, the session setup rate per VDOM will be slower than if there are no VDOMs configured.

## High memory usage

As with any system, a FortiGate has limited hardware resources, such as memory, and all processes running on the FortiGate share the memory. Each process uses more or less memory, depending on its workload. For example, a process usually uses more memory in high traffic situations. If some processes use all of the available memory, other processes will not be able to run.

When high memory usage occurs, the services may freeze up, connections may be lost, or new connections may be refused.

If you see high memory usage in the *Memory* widget, the FortiGate may be handling high traffic volumes. Alternatively, the FortiGate may have problems with connection pool limits that are affecting a single proxy. If the FortiGate receives large volumes of traffic on a specific proxy, the unit may exceed the connection pool limit. If the number of free connections within a proxy connection pool reaches zero, issues may occur.

### To view current memory usage information in the CLI:

```
diagnose hardware sysinfo memory
```

### Sample output:

```
total: used: free: shared: buffers: cached: shm:
Mem: 2074185728 756936704 1317249024 0 20701184 194555904 161046528
Swap:      0      0      0
MemTotal:   2025572 kB
MemFree:    1286376 kB
MemShared:      0 kB
Buffers:     20216 kB
Cached:     189996 kB
SwapCached:      0 kB
Active:      56644 kB
Inactive:    153648 kB
HighTotal:      0 kB
HighFree:      0 kB
LowTotal:     2025572 kB
LowFree:     1286376 kB
SwapTotal:      0 kB
SwapFree:      0 kB
```

## Troubleshooting high CPU usage

Connection-related problems may occur when FortiGate's CPU resources are over extended. This occurs when you deploy too many FortiOS features at the same time.

## Examples of CPU intensive features:

- VPN high-level encryption
- Intensive scanning of all traffic
- Logging all traffic and packets
- Dashboard widgets that frequently perform data updates

For information on customizing the CPU use threshold, see [Execute a CLI script based on memory and CPU thresholds on page 2809](#).

## Determining the current level of CPU usage

You can view CPU usage levels in the GUI or CLI. For precise usage values for both overall usage and specific processes, use the CLI.

### To view CPU usage in the GUI:

Go to *Dashboard > Status*. Real-time CPU usage information is located in the *CPU* widget.

### To view CPU usage in the CLI:

- Show top processes information:  
`diagnose sys top`
- Show top threads information:  
`diagnose sys top-all`

### Sample output:

```
Run Time: 86 days, 0 hours and 10 minutes
OU, ON, OS, 100I, OWA, OHI, OSI, OST; 3040T, 2437F
bcm.user 93 S < 3.1 0.4
httpsd 18922 S 1.5 0.5
httpsd 19150 S 0.3 0.5
newcli 20195 R 0.1 0.1
cmdbsvr 115 S 0.0 0.8
pyfcgid 20107 S 0.0 0.6
forticron 146 S 0.0 0.5
httpsd 139 S 0.0 0.5
cw_acd 166 S 0.0 0.5
miglogd 136 S 0.0 0.5
pyfcgid 20110 S 0.0 0.4
pyfcgid 20111 S 0.0 0.4
pyfcgid 20109 S 0.0 0.4
httpsd 20192 S 0.0 0.4
miglogd 174 S 0.0 0.4
miglogd 175 S 0.0 0.4
fgfmd 165 S 0.0 0.3
newcli 20191 S 0.0 0.3
initXXXXXXXXXX 1 S 0.0 0.3
httpsd 184 s 0.0 0.3
```

The following table explains the codes in the second line of the output:

Code	Description
U	Percentage of user space applications that are currently using the CPU
N	Percentage of time that the CPU spent on low priority processes since the last shutdown
S	Percentage of system processes (or kernel processes) that are using the CPU
I	Percentage of idle CPU resources
WA	Percentage of time that the CPU spent waiting on IO peripherals since the last shutdown
HI	Percentage of time that the CPU spent handling hardware interrupt routines since the last shutdown
SI	Percentage of time that the CPU spent handling software interrupt routines since the last shutdown
ST	Steal time: Percentage of time a virtual CPU waits for the physical CPU when the hypervisor is servicing another virtual processor
T	Total FortiOS system memory in MB
F	Free memory in MB

Each additional line of the command output displays information specific to processes or threads that are running on the FortiGate unit. For example, the sixth line of the output is: `newcli 20195 R 0.1 0.1`

The following table describes the data in the sixth line of the output:

Item	Description
<code>newcli</code>	The process (or thread) name. Duplicate process or thread names indicate that separate instances of that process or thread are running.
<code>20195</code>	The process or thread ID, which can be any number.
<code>R</code>	Current state of the process or thread. The process or thread state can be: <ul style="list-style-type: none"> <li>• R - running</li> <li>• S - sleep</li> <li>• Z - zombie</li> <li>• D- disk sleep</li> </ul>
<code>0.1</code>	The percentage of CPU capacity that the process or thread is using. CPU usage can range from 0.0 for a process or thread that is sleeping to higher values for a process or thread that's taking a lot of CPU time.
<code>0.1</code>	The amount of memory that the process or thread is using. Memory usage can range from 0.1 to 5.5 and higher.

You can use the following single-key commands when running `diagnose sys top` or `diagnose sys top-all`:

- `q` to quit and return to the normal CLI prompt.
- `p` to sort the processes by the amount of CPU that the processes are using.
- `m` to sort the processes by the amount of memory that the processes are using.

The output only displays the top processes or threads that are running. For example, if 20 are listed, they are the top 20 currently running, sorted by either CPU or memory usage. You can configure the number of processes or threads displayed, using the following CLI commands:

```
diagnose sys top <integer_seconds> <integer_maximum_lines>
diagnose sys top-all <integer_seconds> <integer_maximum_lines>
```

Where:

- <integer\_seconds> is the delay in seconds (default is 5)
- <integer\_maximum\_lines> is the maximum number of lines (or processes) to list (default is 20)

## Determining which features are using the most CPU resources

You can use the CLI to view the top few processes that are currently running and using the most CPU resources.

### To view processes using the most CPU resources:

```
get system performance top
```

The entries at the top are using the most CPU resources. The second column from the right shows CPU usage by percentage. Note which processes are using the most resources and try to reduce their CPU load.

Processes you will see include:

- `ipsengine`: the IPS engine that scans traffic for intrusions
- `scanunitd`: antivirus scanner
- `httpsd`: secure HTTP
- `iked`: internet key exchange (IKE) in use with IPsec VPN tunnels
- `newcli`: active whenever you're accessing the CLI
- `sshd`: there are active secure socket connections
- `cmdbsrv`: the command database server application

Go to the features that are at the top of the list and look for evidence of CPU overuse. Generally, the monitor for a feature is a good place to start.

## Checking for unnecessary CPU “wasters”

These are some best practices that will reduce your CPU usage, even if the FortiGate is not experiencing high CPU usage. Note that if the following information instructs you to turn off a feature that you require, disregard that part of the instructions.

- Use hardware acceleration wherever possible to offload tasks from the CPU. Offloading tasks, such as encryption, frees up the CPU for other tasks.
- Schedule antivirus, IPS, and firmware updates during off-peak hours. These updates do not usually consume CPU resources but they can disrupt normal operation.
- Check the log levels and which events are being logged. This is the severity of the messages that are recorded. Consider going up one level to reduce the amount of logging. Also, if there are events you do not need to monitor, remove them from the list.
- Log to FortiCloud instead of logging to memory or disk. Logging to memory quickly uses up resources and logging to local disk impacts overall performance and reduces the lifetime of the unit. Fortinet recommends logging to FortiCloud to avoid using too much CPU.

- If the disk is almost full, transfer the logs or data off the disk to free up space. When a disk is almost full it consumes a lot of resources to find free space and organize the files.
- If packet logging is enabled on the FortiGate, consider disabling it. When packet logging is enabled, it records every packet that comes through that policy.
- Halt all sniffers and traces.
- Ensure the FortiGate isn't scanning traffic twice. Traffic does not need to be rescanned if it enters the FortiGate on one interface, goes out another, and then comes back in again. Doing so is a waste of resources. However, ensure that traffic truly is being scanned once.
- Reduce the session timers to close unused sessions faster. Enter the following CLI commands, which reduce the default values. Note that, by default, the system adds 10 seconds to `tcp-timewait`.

```
config system global
    set tcp-halfclose-timer 30
    set tcp-halfopen-timer 30
    set tcp-timewait-timer 0
    set udp-idle-timer 60
end
```

- Go to *System > Feature Visibility*, and enable only features that you need.

## SNMP monitoring

When CPU usage is under control, use SNMP to monitor CPU usage. Alternatively, use logging to record CPU and memory usage every 5 minutes.

Once the system is back to normal, you should set up a warning system that sends alerts when CPU resources are used excessively. A common method to do this is using SNMP. SNMP monitors many values in FortiOS and allows you to set high water marks that generate events. You can run an application on your computer to watch for and record these events.

### To enable SNMP:

1. Go to *System > SNMP*.
2. Configure an SNMP community.

See [SNMP on page 2475](#).



You can use the *System Resources* widget to record CPU usage if SNMP is too complicated. However, the widget only records problems as they happen and will not send you alerts for problems.

## Checking the modem status

You can use the CLI to troubleshoot a modem that is not working properly, or troubleshoot a FortiGate that does not detect the modem.

### To diagnose modem issues in the CLI:

```
diagnose sys modem {cmd | com | detect | history | external-modem | query| reset}
```

You should always run the following command after you connect a USB modem to FortiGate:

```
diagnose sys modem detect
```

Use the following command to view the modem's configuration, vendor and custom product identification number:

```
get system modem
```

Use the following commands to resolve connectivity issues:

- `diagnose debug enable`: Activates the debug on the console
- `diagnose debug application modemd`: Dumps communication between the modem and the unit.
- `diagnose debug application ppp`: Dumps the PPP negotiating messages.
- `execute modem dial`: Displays modem debug output.

The modem diagnose output should not contain errors when initializing. You should also verify the number used to dial into your ISP.

## Running ping and traceroute

Ping and traceroute are useful tools in network troubleshooting. Alone, either tool can determine network connectivity between two points. However, ping can be used to generate simple network traffic that you can view using `diagnose` commands in FortiGate. This combination can be very powerful when you are trying to locate network problems.

Ping and traceroute can also tell you if your computer or network device has access to a domain name server (DNS). Both tools can use IP addresses or device domain names to determine why particular services, such as email or web browsing, may not work properly.



If ping does not work, it may be disabled on at least one of the interface settings and security policies for that interface.

Both ping and traceroute require particular ports to be open on firewalls to function. Since you typically use these tools to troubleshoot, you can allow them in the security policies and on interfaces only when you need them. Otherwise, keep the ports disabled for added security.

## Ping

The ping command sends a very small packet to a destination, and waits for a response. The response has a timer that expires when the destination is unreachable.

Ping is part of layer 3 on the OSI Networking Model. Ping sends Internet Control Message Protocol (ICMP) "echo request" packets to the destination, and listens for "echo response" packets in reply. However, many public networks block ICMP packets because ping can be used in a denial of service (DoS) attack (such as Ping of Death or a smurf attack), or by an attacker to find active locations on the network. By default, FortiGate units have ping enabled while broadcast-forward is disabled on the external interface.

### What ping can tell you

Beyond the basic connectivity information, ping can tell you the amount of packet loss (if any), how long it takes the packet to make the round trip, and the variation in that time from packet to packet.

If packet loss is detected, you should investigate the following:

- Possible ECMP, split horizon, or network loops.
- Cabling, to ensure there are no loose connections.

- Verify which security policy was used. To do this:  
Go to *Policy & Objects > Firewall Policy* and view the packet count column.

If there is total packet loss, you should investigate the following:

1. Ensure cabling is correct, and all equipment between the two locations is accounted for.
2. Ensure all IP addresses and routing information along the route is configured as expected.
3. Ensure all firewalls, including FortiGate security policies allow PING to pass through.

## How to use ping

Ping syntax is the same for nearly every type of system on a network.

### To ping from a FortiGate unit:

1. Go to *Dashboard*, and connect to the CLI through either telnet or the CLI widget.
2. Enter `execute ping 10.11.101.101` to send 5 ping packets to the destination IP address. There are no options for this command.

```
Head_Office_620b # execute ping 10.11.101.101
PING 10.11.101.101 (10.11.101.101): 56 data bytes
64 bytes from 10.11.101.101: icmp_seq=0 ttl=255 time=0.3 ms
64 bytes from 10.11.101.101: icmp_seq=1 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=2 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=3 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=4 ttl=255 time=0.2 ms
```

```
--- 10.11.101.101 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.2/0.2/0.3 ms
```

### To ping from a Microsoft Windows PC:

1. Open a command window.
2. Enter `ping 10.11.101.100` to ping the default internal interface of the FortiGate with four packets.

Other options include:

- `-t` to send packets until you press `Ctrl+C`
- `-a` to resolve addresses to domain names where possible
- `-n X` to send X ping packets and stop

```
C:\>ping 10.11.101.101
```

```
Pinging 10.11.101.101 with 32 bytes of data:
Reply from 10.11.101.101: bytes=32 time=10ms TTL=255
Reply from 10.11.101.101: bytes=32 time<1ms TTL=255
Reply from 10.11.101.101: bytes=32 time=1ms TTL=255
Reply from 10.11.101.101: bytes=32 time=1ms TTL=255
```

```
Ping statistics for 10.11.101.101:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 10ms, Average = 3ms
```



### To ping from a Linux PC:

1. Go to a shell prompt.
2. Enter `"ping 10.11.101.101"`.

## Traceroute

Where ping will only tell you if it reached its destination and returned successfully, traceroute shows each step of the journey to its destination and how long each step takes. If ping finds an outage between two points, you can use traceroute to locate exactly where the problem is.

Traceroute works by sending ICMP packets to test each hop along the route. It sends three packets, and then increases the time to live (TTL) setting by one each time. This effectively allows the packets to go one hop farther along the route. This is why most traceroute commands display their maximum hop count before they start tracing the route, which is the maximum number of steps it takes before it declares the destination unreachable. Also, the TTL setting may result in steps along the route timing out due to slow responses. There are many possible reasons for this to occur.

By default, traceroute uses UDP datagrams with destination ports numbered from 33434 to 33534. The traceroute utility may also offer the option to select use of ICMP echo request (type 8) instead, which the Windows tracert utility uses. If you must, allow both protocols inbound through the FortiGate security policies (UDP with ports from 33434 to 33534 and ICMP type 8).

### To track traceroute packets in the GUI:

Go to *Policy & Objects > Firewall Policy* and view the packet count column.

This allows you to verify the connection and confirm which security policy the traceroute packets are using.

## What traceroute can tell you

Both ping and traceroute verify connectivity between two points. However, only traceroute shows you each step in the connection path. Also, ping and traceroute use different protocols and ports, so one may succeed where the other fails.

You can verify your DNS connection using traceroute. If you enter an FQDN instead of an IP address for the traceroute, DNS tries to resolve that domain name. If the name isn't resolved, you have DNS issues.

## Using traceroute

The traceroute command varies slightly between operating systems. In Microsoft Windows, the command name is shortened to `"tracert"`. Also, your output lists different domain names and IP addresses along your route.

### To use traceroute on a Microsoft Windows PC:

1. Open a command window.
2. Enter `tracert fortinet.com` to trace the route from the PC to the Fortinet web site.

```
C:\>tracert fortinet.com
Tracing route to fortinet.com [208.70.202.225]
over a maximum of 30 hops:
 1 <1 ms <1 ms <1 ms 172.20.120.2
 2 66 ms 24 ms 31 ms 209-87-254-xxx.storm.ca [209.87.254.221]
 3 52 ms 22 ms 18 ms core-2-g0-0-1104.storm.ca [209.87.239.129]
 4 43 ms 36 ms 27 ms core-3-g0-0-1185.storm.ca [209.87.239.222]
 5 46 ms 21 ms 16 ms te3-x.1156.mpd01.cogentco.com [38.104.158.69]
```

```

6 25 ms 45 ms 53 ms te8-7.mpd01.cogentco.com [154.54.27.249]
7 89 ms 70 ms 36 ms te3-x.mpd01.cogentco.com [154.54.6.206]
8 55 ms 77 ms 58 ms sl-st30-chi-.sprintlink.net [144.232.9.69]
9 53 ms 58 ms 46 ms sl-0-3-3-x.sprintlink.net [144.232.19.181]
10 82 ms 90 ms 75 ms sl-x-12-0-1.sprintlink.net [144.232.20.61]
11 122 ms 123 ms 132 ms sl-0-x-0-3.sprintlink.net [144.232.18.150]
12 129 ms 119 ms 139 ms 144.232.20.7
13 172 ms 164 ms 243 ms sl-321313-0.sprintlink.net [144.223.243.58]
14 99 ms 94 ms 93 ms 203.78.181.18
15 108 ms 102 ms 89 ms 203.78.176.2
16 98 ms 95 ms 97 ms 208.70.202.225

```

The first column on the left is the hop count, which cannot exceed 30 hops. When that number is reached, the traceroute ends.

The second, third, and fourth columns display how much time each of the three packets takes to reach this stage of the route. These values are in milliseconds and normally vary quite a bit. Typically a value of <1ms indicates a local connection.

The fifth column (farthest to the right) shows the domain name of the device and its IP address, or possibly only the IP address.

### To perform a traceroute on a Linux PC:

1. Go to a command line prompt.
2. Enter "traceroute fortinet.com".

The Linux traceroute output is very similar to the Windows tracert output.

### To trace a route from a FortiGate to a destination IP address in the CLI:

```

# execute traceroute www.fortinet.com

traceroute to www.fortinet.com (66.171.121.34), 32 hops max, 84 byte packets
1 172.20.120.2 0.637 ms 0.653 ms 0.279 ms
2 209.87.254.221 <static-209-87-254-221.storm.ca> 2.448 ms 2.519 ms 2.458 ms
3 209.87.239.129 <core-2-g0-2.storm.ca> 2.917 ms 2.828 ms 9.324 ms
4 209.87.239.199 <core-3-bdi1739.storm.ca> 13.248 ms 12.401 ms 13.009 ms
5 216.66.41.113 <v502.core1.tor1.he.net> 17.181 ms 12.422 ms 12.268 ms
6 184.105.80.9 <100ge1-2.core1.nyc4.he.net> 21.355 ms 21.518 ms 21.597 ms
7 198.32.118.41 <ny-paix-gni.twgate.net> 83.297 ms 84.416 ms 83.782 ms
8 203.160.228.217 <217-228-160-203.TWGATE-IP.twgate.net> 82.579 ms 82.187 ms 82.066 ms
9 203.160.228.229 <229-228-160-203.TWGATE-IP.twgate.net> 82.055 ms 82.455 ms 81.808 ms
10 203.78.181.2 82.262 ms 81.572 ms 82.015 ms
11 203.78.186.70 83.283 ms 83.243 ms 83.293 ms
12 66.171.127.177 84.030 ms 84.229 ms 83.550 ms
13 66.171.121.34 <www.fortinet.com> 84.023 ms 83.903 ms 84.032 ms
14 66.171.121.34 <www.fortinet.com> 83.874 ms 84.084 ms 83.810 ms

```

## Checking the logs

A log message records the traffic passing through FortiGate to your network and the action FortiGate takes when it scans the traffic. You should log as much information as possible when you first configure FortiOS. If FortiGate logs are too large, you can turn off or scale back the logging for features that are not in use.

It is difficult to troubleshoot logs without a baseline. Before you can determine if the logs indicate a problem, you need to know what logs result from normal operation.

### When troubleshooting with log files

- Compare current logs to a recorded baseline of normal operation.
- If you need to, increase the level of logging (such as from Warning to Information) to obtain more information. When increasing logging levels, ensure that you configure email alerts and select both disk usage and log quota. This ensures that you will be notified if the increase in logging causes problems.

### To configure the log settings in the GUI:

Go to *Log & Report > Log Settings*.

Determine the activities that generate the most log entries:

- Check all logs to ensure important information is not overlooked.
- Filter or order log entries based on different fields, such as level, service, or IP address, to look for patterns that may indicate a specific problem, such as frequent blocked connections on a specific port for all IP addresses.

Logs can help identify and locate any problems, but they do not solve them. The purpose of logs is to speed up your problem solving and save you time and effort.

For more information about logging and log reports, see [Log and Report on page 2969](#).

## Verifying routing table contents in NAT mode

Verify the contents of the routing table when a FortiGate has limited or no connectivity.

The routing table stores the routes currently in use for both static and dynamic protocols. Storing a route in the routing table saves time and resources performing a lookup. To ensure the most recently used routes remain in the table, old routes are bumped to make room for new ones. You cannot perform this task when FortiGate is in transparent mode.

If FortiGate is running in NAT mode, verify that all desired routes are in the routing table, including local subnets, default routes, specific static routes, and dynamic routing protocols.

### To view the routing table in the CLI:

```
get router info routing-table all
```

### Sample output:

```
FGT# get router info routing-table all
Codes:
  K - kernel, C - connected, S - static, R - RIP, B - BGP
  O - OSPF, IA - OSPF inter area
  N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
  E1 - OSPF external type 1, E2 - OSPF external type 2
  i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
  * - candidate default
S* 0.0.0.0/0 [10/0] via 172.20.120.2, wan1
C 10.31.101.0/24 is directly connected, internal
C 172.20.120.0/24 is directly connected, wan1
```

## Verifying the correct route is being used

Run a trace route from a machine in the local area network (LAN) to ensure traffic is flowing as expected through the correct route when there is more than one default route.

In the following example output:

- The first hop contains the IP address 10.10.1.99, which is the internal interface of the FortiGate.
- The second hop contains the IP address 172.20.120.2, to which the wan1 interface of the FortiGate is connected.

This means the route through the wan1 interface is being used for this traffic.

```
C:\>tracert www.fortinet.com
Tracing route to www.fortinet.com [66.171.121.34]
over a maximum of 30 hops:
 1 <1 ms <1 ms <1 ms 10.10.1.99
 2 1 ms <1 ms <1 ms 172.20.120.2
 3 3 ms 3 ms 3 ms static-209-87-254-221.storm.ca [209.87.254.221]
 4 3 ms 3 ms 3 ms core-2-g0-2.storm.ca [209.87.239.129]
 5 13 ms 13 ms 13 ms core-3-bdi1739.storm.ca [209.87.239.199]
 6 12 ms 19 ms 11 ms v502.core1.tor1.he.net [216.66.41.113]
 7 22 ms 22 ms 21 ms 100ge1-2.core1.nyc4.he.net [184.105.80.9]
 8 84 ms 84 ms 84 ms ny-paix-gni.twgate.net [198.32.118.41]
 9 82 ms 84 ms 82 ms 217-228-160-203.TWGATE-IP.twgate.net [203.160.22
8.217]
10 82 ms 81 ms 82 ms 229-228-160-203.TWGATE-IP.twgate.net [203.160.22
8.229]
11 82 ms 82 ms 82 ms 203.78.181.2
12 84 ms 83 ms 83 ms 203.78.186.70
13 84 ms * 85 ms 66.171.127.177
14 84 ms 84 ms 84 ms fortinet.com [66.171.121.34]
15 84 ms 84 ms 83 ms fortinet.com [66.171.121.34]
```

You can also see the route taken for each session by debugging the packet flow in the CLI. For more information, see [Debugging the packet flow on page 3131](#).

## Verifying the correct firewall policy is being used

If you have more than one firewall policy, you can check which policy is being used in the *Policy & Objects* module in the GUI.

### To verify the firewall policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy*.
2. Look in the *Count* column to see which policy is being used. The count must show traffic increasing.

Debugging the packet flow in the CLI shows the policy ID that's allowing the traffic. For information, see [Debugging the packet flow on page 3131](#).

## Checking the bridging information in transparent mode

Checking the bridging information is useful when you are experiencing connectivity problems. When FortiGate is set to transparent mode, it acts like a bridge and sends all incoming traffic out on the other interfaces. Each bridge is a link between interfaces.

When traffic is flowing between the interfaces, you can see the bridges listed in the CLI. If no bridges are listed, this is the likely cause of the connectivity issue. When investigating bridging information, check for the MAC address of the interface or device in question.

### How to check the bridging information

**To view the list of bridge instances in the CLI:**

```
diagnose netlink brctl list
```

**Sample output:**

```
#diagnose netlink brctl list
list bridge information
1. root.b fdb: size=256 used=6 num=7 depth=2 simple=no
Total 1 bridges
```

### How to display forwarding domain information

You can use forwarding domains, or collision domains, in routing to limit where packets are forwarded on the network. Layer 2 broadcasts are limited to the same group. By default, all interfaces are in group 0. For example, if the FortiGate has 12 interfaces, only two may be in the same forwarding domain, which limits packets that are broadcast to those two interfaces. This reduces traffic on the rest of the network.

Collision domains prevent the forwarding of ARP packets to all VLANs on an interface. Without collision domains, duplicate MAC addresses on VLANs may cause ARP packets to be duplicated. Duplicate ARP packets can cause some switches to reset. It's important to know what interfaces are part of which forwarding domains because this determines which interfaces can communicate with each other.

**To manually configure forwarding domains in transparent mode in the CLI:**

```
config system interface
  edit <interface_name>
    set forward-domain <integer>
  end
```

**To display the forward domains information in the CLI:**

```
diagnose netlink brctl domain <name> <id>
```

Where <name> is the name of the forwarding domain to display and <id> is the domain ID.

**Sample output:**

```
diagnose netlink brctl domain ione 101
show bridge root.b ione forward domain.
```

```
id=101 dev=trunk_1 6
```

### To list the existing bridge MAC table in the CLI:

```
diagnose netlink brctl name host <name>
```

### Sample output:

```
show bridge control interface root.b host.
fdb: size=256, used=6, num=7, depth=2, simple=no
Bridge root.b host table
```

port no	device	devname	mac addr	tth	attributes
2	7	wan2	02:09:0f:78:69:00	0	Local Static
5	6	vlan_1	02:09:0f:78:69:01	0	Local Static
3	8	dmz	02:09:0f:78:69:01	0	Local Static
4	9	internal	02:09:0f:78:69:02	0	Local Static
3	8	dmz	00:80:c8:39:87:5a	194	
4	9	internal	02:09:0f:78:67:68	8	
1	3	wan1	00:09:0f:78:69:fe	0	Local Static

### To list the existing bridge port list in the CLI:

```
diagnose netlink brctl name port <name>
```

### Sample output:

```
show bridge root.b data port.
trunk_1 peer_dev=0
internal peer_dev=0
dmz peer_dev=0
wan2 peer_dev=0
wan1 peer_dev=0
```

## Checking wireless information

Check wireless connections, stations, and interfaces when the problem is not caused by a physical interface.

### Troubleshooting station connection issues

#### To check if a station entry is created on access control in the CLI:

```
FG600B3909600253 # diagnose wireless-controller wla -d sta
* vf=0 wtp=70 rId=2 wlan=open ip=0.0.0.0 mac=00:09:0f:db:c4:03 rssi=0 idle=148 bw=0 use=2
vf=0 wtp=70 rId=2 wlan=open ip=172.30.32.122 mac=00:25:9c:e0:47:88 rssi=-40 idle=0 bw=9
use=2
```

### Enabling diagnostics for a specific station

This example uses the station MAC address to find where it is failing:

```
FG600B3909600253 # diagnose wireless-controller wlacl sta_filter 00:25:9c:e0:47:88 1
Set filter sta 00:25:9c:e0:47:88 level 1
FG600B3909600253 # 71419.245 <ih> IEEE 802.11 mgmt::disassoc <== 00:25:9c:e0:47:88 vap open
rId 1 wId 0 00:09:0f:db:c4:03
71419.246 <dc> STA del 00:25:9c:e0:47:88 vap open rId 1 wId 0
71419.246 <cc> STA_CFG_REQ(34) sta 00:25:9c:e0:47:88 del ==> ws (0-192.168.35.1:5246) rId 1
wId 0
71419.246 <cc> STA del 00:25:9c:e0:47:88 vap open ws (0-192.168.35.1:5246) rId 1 wId 0
00:09:0f:db:c4:03 sec open reason I2C_STA_DEL
71419.247 <cc> STA_CFG_RESP(34) 00:25:9c:e0:47:88 <== ws (0-192.168.35.1:5246) rc 0
(Success).
```

## Performing a sniffer trace or packet capture

When you troubleshoot networks and routing in particular, it helps to look inside the headers of packets to determine if they are traveling the route that you expect them to take. Packet sniffing is also known as network tap, packet capture, or logic analyzing.



For FortiGates with NP2, NP4, or NP6 interfaces that are offloading traffic, disable offloading on these interfaces before you perform a trace or it will change the sniffer trace.

### Sniffing packets

#### To perform a sniffer trace in the CLI:

Before you start sniffing packets, you should prepare to capture the output to a file. A large amount of data may scroll by and you will not be able to see it without saving it first. One method is to use a terminal program like PuTTY to connect to the FortiGate CLI. Once the packet sniffing count is reached, you can end the session and analyze the output in the file.

The general form of the internal FortiOS packet sniffer command is:

```
# diagnose sniffer packet <interface_name> <'filter'> <verbose> <count> <tsformat>
```

To stop the sniffer, type CTRL+C.

<interface_name>	The name of the interface to sniff, such as <code>port1</code> or <code>internal</code> . This can also be <code>any</code> to sniff all interfaces.
<'filter'>	What to look for in the information the sniffer reads. <code>none</code> indicates no filtering, and all packets are displayed as the other arguments indicate. The filter must be inside single quotes (').
<verbose>	The level of verbosity as one of: <ul style="list-style-type: none"> <li>• 1 - print header of packets</li> <li>• 2 - print header and data from IP of packets</li> <li>• 3 - print header and data from Ethernet of packets</li> <li>• 4 - print header of packets with interface name</li> <li>• 5 - print header and data from IP of packets with interface name</li> <li>• 6 - print header and data from Ethernet of packets with interface name</li> </ul>

<count>	The number of packets the sniffer reads before stopping. If you don't put a number here, the sniffer will run until you stop it with <CTRL+C>.
<tsformat>	The timestamp format. <ul style="list-style-type: none"> <li>a: absolute UTC time, yyyy-mm-dd hh:mm:ss.ms</li> <li>l: absolute LOCAL time, yyyy-mm-dd hh:mm:ss.ms</li> <li>otherwise: relative to the start of sniffing, ss.ms</li> </ul>

### Simple sniffing example:

```
# diagnose sniffer packet port1 none 1 3.
```

This displays the next three packets on the port1 interface using no filtering, and verbose level 1. At this verbosity level, you can see the source IP and port, the destination IP and port, action (such as ack), and sequence numbers.

In the output below, port 443 indicates these are HTTPS packets and that 172.20.120.17 is both sending and receiving traffic.

```
Head_Office_620b # diagnose sniffer packet port1 none 1 3
interfaces=[port1]
filters=[none]
0.545306 172.20.120.17.52989 -> 172.20.120.141.443: psh 3177924955 ack 1854307757
0.545963 172.20.120.141.443 -> 172.20.120.17.52989: psh 1854307757 ack 3177925808
0.562409 172.20.120.17.52988 -> 172.20.120.141.443: psh 4225311614 ack 3314279933
```

## Using packet capture in a firewall policy

FortiGate can capture packets matching a firewall policy. You can enable `capture-packet` in the firewall policy.

To use packet capture, the FortiGate must have a disk and logging must be enabled in the firewall policy.

For information about using the packet capture tool in the GUI, see [Using the packet capture tool on page 617](#).

### To enable packet capture in a policy in the GUI:

1. Go to *Policy & Objects > Firewall Policy* and click *Create New*.
2. Enter a name for the policy and configure the required settings.
3. Enable *Log Allowed Traffic* and select *Security Events* or *All Sessions*.
4. Enable *Capture Packets*.
5. Click *OK*.


### To enable packet capture in a policy in the CLI:

```
config firewall policy
    edit <id>
        set action accept
        set logtraffic {all | utm}
        set capture-packet enable
    next
end
```



**To view the packet capture:**

1. Go to *Log & Report > Forward Traffic* and select the log that matches the firewall policy.
2. Select *Details > Archived Data* and click on the download button.

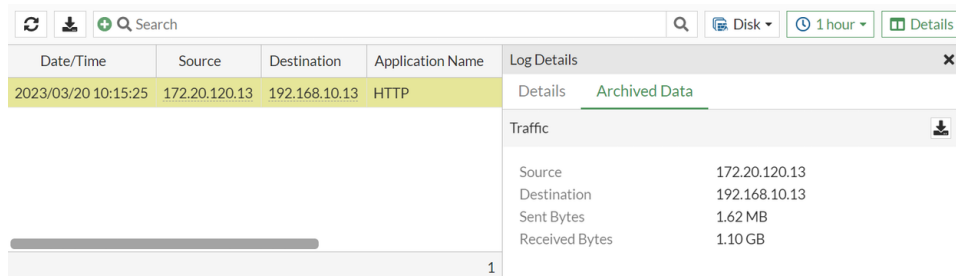

3. Open the downloaded PCAP file in a packet analyzer tool, such as Wireshark.

## Debugging the packet flow

Debug the packet flow when network traffic is not entering and leaving the FortiGate as expected. When debugging the packet flow in the CLI, each command configures a part of the debug action. The final command starts the debug.

For information about using the debug flow tool in the GUI, see [Using the debug flow tool on page 621](#).

**To trace the packet flow in the CLI:**

```
# diagnose debug flow trace start
```

**To follow packet flow by setting a flow filter:**

```
# diagnose debug flow {filter | filter6} <option>
```

- Enter `filter` if your network uses IPv4.
- Enter `filter6` if your network uses IPv6.

Replace `<option>` with one of the following variables:

Variable	Description
<code>addr</code>	IPv4 or IPv6 address
<code>clear</code>	clear filter
<code>daddr</code>	destination IPv4 or IPv6 address
<code>dport</code>	destination port
<code>negate</code>	inverse IPv4 or IPv6 filter
<code>port</code>	port
<code>proto</code>	protocol number
<code>saddr</code>	source address
<code>sport</code>	source port
<code>vd</code>	index of virtual domain; -1 matches all



If FortiGate is connected to FortiAnalyzer or FortiCloud, the diagnose debug flow output will be recorded as event log messages and then sent to the devices. Do not run this command longer than necessary, as it generates a significant amount of data.



Flow monitoring does not work for traffic offloaded to NP6 or NP7 processors. To use the diagnose debug flow commands with sessions offloaded to NP6 or NP7 processors you can test the traffic flow using ICMP (ICMP traffic is not offloaded) or you can disable NP6 or NP7 offloading.

You can use the following command to temporarily disable NP6 offloading of all traffic:

```
diagnose npu {np6 | np6xlite | np6lite} fastpath disable
```

You must disable NP7 offloading in the firewall policy that accepts the traffic that you are tracing, see [Tracing packet flow on FortiGates with NP7 processors](#).

You can also use the NP7 packet sniffer to sniff NP7 offloaded traffic without disabling NP7 offloading, see [NP7 packet sniffer](#).

### To start flow monitoring with a specific number of packets:

```
# diagnose debug flow trace start <N>
```

### To stop flow tracing at any time:

```
# diagnose debug flow trace stop
```

The following example shows the flow trace for a device with an IP address of 203.160.224.97:

```
# diagnose debug enable
# diagnose debug flow filter addr 203.160.224.97
# diagnose debug flow show function-name enable
# diagnose debug flow trace start 100
```

### Sample output: HTTP

To observe the debug flow trace, connect to the website at the following address:

```
https://www.fortinet.com
```

Comment: SYN packet received:

```
id=20085 trace_id=209 func=resolve_ip_tuple_fast
line=2700 msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

SYN sent and a new session is allocated:

```
id=20085 trace_id=209 func=resolve_ip_tuple line=2799
msg="allocate a new session-00000e90"
```

Lookup for next-hop gateway address:

```
id=20085 trace_id=209 func=vf_ip4_route_input line=1543
msg="find a route: gw-192.168.11.254 via port6"
```

Source NAT, lookup next available port:

```
id=20085 trace_id=209 func=get_new_addr line=1219
msg="find SNAT: IP-192.168.11.59, port-31925"
```

direction"

**Matched security policy. Check to see which policy this session matches:**

```
id=20085 trace_id=209 func=fw_forward_handler line=317
msg="Allowed by Policy-3: SNAT"
```

**Apply source NAT:**

```
id=20085 trace_id=209 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

**SYN ACK received:**

```
id=20085 trace_id=210 func=resolve_ip_tuple_fast line=2700
msg="vd-root received a packet(proto=6, 203.160.224.97:80-
>192.168.11.59:31925) from port6."
```

**Found existing session ID. Identified as the reply direction:**

```
id=20085 trace_id=210 func=resolve_ip_tuple_fast line=2727
msg="Find an existing session, id-00000e90, reply direction"
```

**Apply destination NAT to inverse source NAT action:**

```
id=20085 trace_id=210 func=__ip_session_run_tuple
line=1516 msg="DNAT 192.168.11.59:31925-
>192.168.3.221:1487"
```

**Lookup for next-hop gateway address for reply traffic:**

```
id=20085 trace_id=210 func=vf_ip4_route_input line=1543
msg="find a route: gw-192.168.3.221 via port5"
```

**ACK received:**

```
id=20085 trace_id=211 func=resolve_ip_tuple_fast line=2700
msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

**Match existing session in the original direction:**

```
id=20085 trace_id=211 func=resolve_ip_tuple_fast line=2727
msg="Find an existing session, id-00000e90, original
direction"
```

**Apply source NAT:**

```
id=20085 trace_id=211 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

**Receive data from client:**

```
id=20085 trace_id=212 func=resolve_ip_tuple_fast
line=2700 msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

**Match existing session in the original direction:**

```
id=20085 trace_id=212 func=resolve_ip_tuple_fast
line=2727 msg="Find an existing session, id-00000e90,
original direction"
```

**Apply source NAT:**

```
id=20085 trace_id=212 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

**Receive data from server:**

```
id=20085 trace_id=213 func=resolve_ip_tuple_fast
line=2700 msg="vd-root received a packet(proto=6,
203.160.224.97:80->192.168.11.59:31925) from port6."
```

**Match existing session in reply direction:**

```
id=20085 trace_id=213 func=resolve_ip_tuple_fast
line=2727 msg="Find an existing session, id-00000e90,
reply direction"
```

**Apply destination NAT to inverse source NAT action:**

```
id=20085 trace_id=213 func=__ip_session_run_tuple
line=1516 msg="DNAT 192.168.11.59:31925-
>192.168.3.221:1487"
```

## Sample output: IPsec (policy-based)

```
id=20085 trace_id=1 msg="vd-root received a packet(proto=1, 10.72.55.240:1->10.71.55.10:8)
from internal."
id=20085 trace_id=1 msg="allocate a new session-00001cd3"
id=20085 trace_id=1 msg="find a route: gw-66.236.56.230 via wan1"
id=20085 trace_id=1 msg="Allowed by Policy-2: encrypt"
id=20085 trace_id=1 msg="enter IPsec tunnel-RemotePhase1"
id=20085 trace_id=1 msg="encrypted, and send to 15.215.225.22 with source 66.236.56.226"
id=20085 trace_id=1 msg="send to 66.236.56.230 via intf-wan1"
id=20085 trace_id=2 msg="vd-root received a packet (proto=1, 10.72.55.240:1-1071.55.10:8)
from internal."
id=20085 trace_id=2 msg="Find an existing session, id-00001cd3, original direction"
id=20085 trace_id=2 msg="enter IPsec ="encrypted, and send to 15.215.225.22 with source
66.236.56.226" tunnel-RemotePhase1"
id=20085 trace_id=2 msgid=20085 trace_id=2 msg="send to 66.236.56.230 via intf-wan1"
```

## Testing a proxy operation

**To monitor proxy operations in the CLI:**

```
diagnose test application <application> <option>
```

**To display a list of available application values:**

```
diagnose test application ?
```

**To display a list of available option values:**

```
diagnose test application <application> ?
```

The <option> value will depend on the application value used in the command.

For example, if the application is http, the CLI command that displays the <option> values is:

```
diagnose test application http ?
```

## Displaying detail Hardware NIC information

Monitoring the hardware NIC is important because interface errors indicate data link or physical layer issues which may impact the performance of the FortiGate.

### To monitor hardware network operations in the CLI:

```
diagnose hardware deviceinfo nic <interface>
```

or

```
diagnose netlink interface list <interface>
```

### Sample output:

The following is sample output when the <interface> is set to port1:

```
# diagnose hardware deviceinfo nic port1

Name:                port1
...
HWaddr:              00:0c:xx:xx:xx:xx
Permanent Hwaddr: 00:0c:xx:xx:xx:xx
State:               up
Link:                up
Mtu:                 1500
Supported:           1000full 10000full
Advertised:
Speed:               10000full
Auto:                disabled
RX Ring:             1024
TX Ring:             512
Rx packets:          48758040
Rx bytes:             16071168530
Rx compressed:       0
Rx dropped:           3
Rx errors:           3
  Rx Length err:     0
  Rx Buf overflow:    0
  Rx Crc err:         0
  Rx Frame err:       0
  Rx Fifo overrun:    0
  Rx Missed packets:  0
Tx packets:          27153432
Tx bytes:             7107106138
Tx compressed:       0
Tx dropped:           0
Tx errors:           0
  Tx Aborted err:     0
  Tx Carrier err:     0
  Tx Fifo overrun:    0
  Tx Heartbeat err:   0
  Tx Window err:      0
Multicasts:          31747
Collisions:           0

# diagnose netlink interface list port1
```

```
if=port1 family=00 type=1 index=3 mtu=1500 link=0 master=0
flags=up broadcast run multicast
Qdisc=mq hw_addr=00:0c:29:fc:18:54 broadcast_addr=ff:ff:ff:ff:ff:ff
stat: rxp=61149 txp=81109 rxb=5839308 txb=52396373 rx=0 txe=0 rxd=0 txd=0 mc=95 collision=0
@ time=1678486883
re: rxl=0 rxo=0 rxc=0 rxf=0 rxfi=0 rxm=0
te: txa=0 txc=0 txfi=0 txh=0 txw=0
misc rxc=0 txc=0
```

## Field descriptions

The `diagnose hardware deviceinfo nic` and `diagnose netlink interface list` commands display lists of error names and values that are related to hardware.

The following table describes possible hardware errors:

Field	Description
Rx packets (rxp)	Number of received packets.
Tx packets (txp)	Number of transmitted packets.
Rx bytes (rxb)	Number of received bytes.
Tx bytes (txb)	Number of transmitted bytes.
Rx errors (rx) = rx error count	Bad frame was marked as error by PHY.
Tx errors (txe) = Tx aborted errors	ECOL (Excessive Collisions Count); only valid in half-duplex mode.
Rx CRC errors + Rx length errors - Rx align errors	This error is only valid in 10/100M mode.
Rx dropped (rxd) or Rx no buffer count	Running out of buffer space.
Tx dropped (txd)	Number of dropped packet.
Multicast (mc)	Number of multicast packets received.
Collisions	Total number of collisions experienced by the transmitter; valid in half-duplex mode.
Rx length errors (rxl)	Number of packets dropped due to invalid length.
Rx over errors (rxo)	Receive FIFO overflow event counter.
Rx CRC errors (rxc)	Number of received packets with Frame CRC error.
Rx frame errors (rxf)	Same as Rx_Align_Errors. This error is only valid in 10/100M mode.
Rx FIFO errors (rxfi)	Same as Rx_Missed_Errors - a missed packet count
Rx missed errors (rxm)	Equals Rx_FIFO_Errors + CEXTERR (Carrier Extension Error Count). Only valid in 1000M mode, which is marked by PHY.

Field	Description
Tx aborted errors (txa)	See Tx_Errors.
Tx carrier errors (txc)	The PHY should assert the internal carrier sense signal during every transmission. Failure to do so may indicate that the link has failed or the PHY has an incorrect link configuration. This register only increments if transmits are enabled. This register isn't valid in internal SerDes 1 mode (TBI mode for the 82544GC/EI) and is valid only when the Ethernet controller is operating at full duplex.
Tx FIFO errors (txfi)	Number of Frame transmission error due to underflow.
Tx heartbeat errors (txh)	Number of heartbeat error.
Tx window errors (txw)	Late Collisions (LATECOL) Count Late collisions are collisions that occur after 64-byte time into the transmission of the packet while working in 10 to 100 Mb/s data rate and 512-byte time into the transmission of the packet while working in the 1,000 Mb/s data rate. This register only increments if transmits are enabled and the device is in half-duplex mode.
Rx compressed (misc rxc)	Number of received compressed packets.
Tx compressed (misc txc)	Number of transmitted compressed packets.
Tx single collision frames	Counts the number of times that a successfully transmitted packet encountered a single collision. The value increments only if transmits are enabled and the Ethernet controller is in half-duplex mode.
Tx multiple collision frames	A Multiple Collision Count which indicates the number of times that a transmit encountered more than one collision, but less than 16. The value increments only if transmits are enabled and the Ethernet controller is in half-duplex mode.
Tx deferred	Counts defer events. A deferred event occurs when the transmitter cannot immediately send a packet due to: <ul style="list-style-type: none"> <li>• The medium being busy because another device is transmitting.</li> <li>• The IPG timer has not expired.</li> <li>• Half-duplex deferral events are occurring.</li> <li>• XOFF frames are being received .</li> <li>• The link is not up.</li> </ul> This register only increments if transmits are enabled. This counter does not increment for streaming transmits that are deferred due to TX IPG.
Rx frame too longs	The Rx frame is oversized.
Rx frame too shorts	The Rx frame is too short.
Rx align errors	This error is only valid in 10/100M mode.
Symbol error count	Counts the number of symbol errors (SYMERRS) between reads.

Field	Description
	The count increases for every bad symbol that's received, whether or not a packet is currently being received and whether or not the link is up. This register increments only in internal SerDes mode.

## Performing a traffic trace

Traffic tracing allows you to follow a specific packet stream. This is useful when you want to confirm that packets are using the route you expect them to take on your network.

### To view traffic sessions:

Use this command to view the characteristics of a traffic session through specific security policies.

```
diagnose sys session
```

### To trace per-packet operations for flow tracing:

```
diagnose debug flow
```

### To trace per-Ethernet frame:

```
diagnose sniffer packet
```

### To trace a route from a FortiGate to a destination IP address:

```
# execute traceroute www.fortinet.com
traceroute to www.fortinet.com (66.171.121.34), 32 hops max, 84 byte packets
 1 172.20.120.2 0.637 ms 0.653 ms 0.279 ms
 2 209.87.254.221 <static-209-87-254-221.storm.ca> 2.448 ms 2.519 ms 2.458 ms
 3 209.87.239.129 <core-2-g0-2.storm.ca> 2.917 ms 2.828 ms 9.324 ms
 4 209.87.239.199 <core-3-bd11739.storm.ca> 13.248 ms 12.401 ms 13.009 ms
 5 216.66.41.113 <v502.core1.tor1.he.net> 17.181 ms 12.422 ms 12.268 ms
 6 184.105.80.9 <100ge1-2.core1.nyc4.he.net> 21.355 ms 21.518 ms 21.597 ms
 7 198.32.118.41 <ny-paix-gni.twgate.net> 83.297 ms 84.416 ms 83.782 ms
 8 203.160.228.217 <217-228-160-203.TWGATE-IP.twgate.net> 82.579 ms 82.187 ms 82.066 ms
 9 203.160.228.229 <229-228-160-203.TWGATE-IP.twgate.net> 82.055 ms 82.455 ms 81.808 ms
10 203.78.181.2 82.262 ms 81.572 ms 82.015 ms
11 203.78.186.70 83.283 ms 83.243 ms 83.293 ms
12 66.171.127.177 84.030 ms 84.229 ms 83.550 ms
13 66.171.121.34 <www.fortinet.com> 84.023 ms 83.903 ms 84.032 ms
14 66.171.121.34 <www.fortinet.com> 83.874 ms 84.084 ms 83.810 ms
```

## Using a session table

A session is a communication channel between two devices or applications across the network. Sessions allow FortiOS to inspect and act on a sequential group of packets in a session all at once instead of inspecting each packet individually. Each session has an entry in the session table that includes important information about the session.



You can view FortiGate session tables from the FortiGate GUI or CLI. The most useful troubleshooting data comes from the CLI. The session table in the GUI also provides useful summary information, particularly the current policy number that the session is using.

## When to use a session table

Session tables are useful when verifying open connections. For example, if you have a web browser open to browse the Fortinet website, you would expect a session entry from your computer on port 80 to the IP address for the Fortinet website.

You can also use a session table to investigate why there are too many sessions for FortiOS to process.

## GUI

**To view session information in the GUI:**

1. Go to *Security Fabric > Physical Topology*.
2. From the *Metrics* dropdown, select *Sessions*.

## Finding the security policy for a specific connection

Every program and device on your network must have an open communication channel or session to pass information. FortiGate manages these sessions with features such as traffic shaping, antivirus scanning, and blocking known bad websites. Each session will have an entry in the session table.

If a secure web browser session is not working properly, you can check the session table to ensure the session is still active and going to the proper address. The session table can also tell you the security policy number it matches, so you can check what is happening in that policy.

### 1. Get the connection information.

You need to be able to identify the session you want. To do this, you will need:

- The source IP address (usually your computer)
- The destination IP address (if you have it)
- The port number which is determined by the program you are using. Common ports are:
  - Port 80 (HTTP for web browsing)
  - Port 443 (HTTPS for SSL encrypted web browsing)
  - Port 22 (SSH for Secure Shell)
  - Port 25 (SMTP for Mail Transfer)

### 2. Find the session and policy ID

Go to *Security Fabric > Physical Topology*. From the *Metrics* dropdown, select *Sessions*.

To find your session, search for your source IP address, destination IP address (if you have it), and port number. The policy ID is listed after the destination information.

### 3. Use filters to find a session

If there are multiple pages of sessions, you can use a filter to hide the sessions you do not need. To filter the sessions in the table, click *Add Filter*, and select an option from the list. You can filter the table by *Destination IP*, *Source IP*, or *Source Port*.

#### CLI

The session table output in the CLI is very large. The CLI command supports filters to show only the data you need.

#### To view session data in the CLI:

```
diagnose sys session list
```

An entry is placed in the session table for each traffic session passing through a security policy

#### To filter session data:

```
diagnose sys session filter <option>
```

The values for <option> include the following:

Value	Definition
clear	Clear session filter
dintf	Destination interface
dport	Destination port
dst	Destination IP address
duration	Duration of the session
expire	Expire
negate	Inverse filter
nport	NAT'd source port
nsrc	NAT'd source ip address
policy	Policy ID
proto	Protocol number
proto-state	Protocol state
session-state1	Session state1
session-state2	Session state2
sintf	Source interface
sport	Source port
src	Source IP address
vd	Index of virtual domain, -1 matches all

Even though UDP is a sessionless protocol, FortiGate keeps track of the following states:

- When UDP reply does not have a value of 0
- When UDP reply has a value of 1

The following table displays firewall session states from the session table:

State	Description
log	Session is being logged
local	Session is originated from or destined for local stack
ext	Session is created by a firewall session helper
may_dirty	Session is created by a policy For example, the session for <code>ftp control channel</code> will have this state but <code>ftp data channel</code> won't. This is also seen when NAT is enabled.
ndr	Session will be checked by IPS signature
nds	Session will be checked by IPS anomaly
br	Session is being bridged (TP) mode

## Examining the firewall session list

The firewall session list displays all open sessions in FortiGate. Examine the list for strange patterns, such as no sessions apart from the internal network, or all sessions are only to one IP address.

When you examine the firewall session list in the CLI, you can use filters to reduce the output.

### To examine the firewall session list in the CLI:

You can use a filter to limit the sessions displayed by source, destination address, port, or NAT'd address. To use more than one filter, enter a separate line for each value.

The following example filters the session list based on a source address of 10.11.101.112:

```
FGT# diagnose sys session filter src 10.11.101.112
FGT# diagnose sys session list
```

The following example filters the session list based on a destination address of 172.20.120.222.

```
FGT# diagnose sys session filter dst 172.20.120.222
FGT# diagnose sys session list
```

To clear all sessions corresponding to a filter:

```
FGT# diagnose sys session filter dst 172.20.120.222
FGT# diagnose sys session clear
```

## Checking source NAT information

Checking source NAT is important when you are troubleshooting from the remote end of the connection outside the firewall.

**To check the source NAT information in the CLI:**

When you display the session list in the CLI, you can match the NAT'd source address (`nsrc`) and port (`nport`). This is useful when multiple internal IP addresses are NAT'd to a common external-facing source IP address.

```
FGT# diagnose sys session filter nsrc 172.20.120.122
FGT# diagnose sys session filter nport 8888
FGT# diagnose sys session list
```

## Finding object dependencies

You may be prevented from deleting a configuration object when other configuration objects depend on it. You can use the GUI or CLI to identify objects which depend on, or make reference to the configuration you are trying to delete. Additionally, if you have a virtual interface with dependent objects, you will need to find and remove those dependencies before deleting the interface.

**To remove interface object dependencies in the GUI:**

1. Go to *Network > Interfaces*. The *Ref.* column displays the number of objects that reference this interface.
2. Select the number in the *Ref.* column for the interface. A window listing the dependencies appears.
3. Use these detailed entries to locate and remove object references to this interface. The trash can icon is enabled after all the object dependencies are removed.
4. Remove the interface by selecting the check box for the interface, and select *Delete*.

**To find object dependencies in the CLI:**

When running multiple VDOMs, use the following command in the global configuration only.

```
diagnose sys cmdb refcnt show <path.object.mkey>
```

The command searches for the named object in both the most recently used global and VDOM configurations.

**Examples**

To verify which objects a security policy with an ID of 1 refers to:

```
diagnose sys cmdb refcnt show firewall.policy.policyid 1
```

To check what is referred to by interface `port1`:

```
diagnose sys cmdb refcnt show system.interface.name port1
```

To show all dependencies for an interface:

```
diagnose sys cmdb refcnt show system.interface.name <interface name>
```

**Sample output:**

In this example, the interface has dependent objects, including four address objects, one VIP, and three security policies.

```
entry used by table firewall.address:name '10.98.23.23_host'
entry used by table firewall.address:name 'NAS'
entry used by table firewall.address:name 'all'
entry used by table firewall.address:name 'fortinet.com'
entry used by table firewall.vip:name 'TORRENT_10.0.0.70:6883'
```

```
entry used by table firewall.policy:policyid '21'
entry used by table firewall.policy:policyid '14'
entry used by table firewall.policy:policyid '19'
```

## Diagnosing NPU-based interfaces

Some Fortinet products contain network processors, such as NP4, NP6Lite, or NP6. Offloading requirements will vary depending on the model.

### To view the initial session setup for NPU-based interfaces:

```
diagnose debug flow
```

- If the session is programmed into the ASIC (fastpath) correctly, the command will not detect the packets that arrive at the CPU.
- If the NPU functionality is disabled, the CPU detects all the packets. However, you should only disable the NPU functionality for troubleshooting purposes.

### To diagnose NPU-based interfaces:

1. Get the NPx or NPU ID and port numbers.

```
diagnose npu <processor> list
```

The output will look like this:

```
ID Model Slot Interface
0 On-board port1 fabric1 fabric3 fabric5
1 On-board fabric2 port2 base2 fabric4
```

2. Disable the NPU functionality.

```
diagnose npu <processor> fastpath disable <dev_id>
```

The `dev_id` is the NPx ID number.

3. Analyze the packets.

```
diagnose npu <processor> fastpath-sniffer enable port1
```



These commands only apply to NP4 and NP6 interfaces.

---

The output will look similar to:

```
NP4 Fast Path Sniffer on port1 enabled
```

This causes traffic on `port1` of the network processor to be sent to the CPU. This means you can perform a standard sniffer trace and use other diagnostic commands, if it is a standard CPU-driven port.

## Identifying the XAUI link used for a specific traffic stream

The `diagnose npu np6 xaui-hash` command takes a 6-tuple input of the traffic stream to identify the NP6 XAUI link that the traffic passes through.

This command is only available on the 38xxD, 39xxD, 34xxE, 36xxE, and 5001E series devices.

## Syntax

```
diagnose npu np6 xaui-hash <interface> <proto> <src_ip> <dst_ip> <src_port> <dst_port>
```

Variable	Description
<interface>	The network interface that the packets are coming from.
<proto>	The proto number, 6 for TCP or 17 for UDP.
<src_ip>	The source IP address.
<dst_ip>	The destination IP address.
<src_port>	The source port.
<dst_port>	The destination port.

## Examples

```
# diagnose npu np6 xaui-hash port1 6 1.1.1.1 2.2.2.1 4567 80
NP6_ID: 0, XAUI_LINK: 2

# diagnose npu np6 xaui-hash port1 6 1.1.1.1 2.2.2.1 4567 200
NP6_ID: 6, XAUI_LINK: 2

# diagnose npu np6 xaui-hash port1 6 1.1.1.1 2.2.2.1 4567 20
NP6_ID: 1, XAUI_LINK: 2

# diagnose npu np6 xaui-hash port1 6 1.1.1.1 2.2.2.1 4567 23
NP6_ID: 1, XAUI_LINK: 1
```

The NP6\_ID is the NP index of the model that is being used. It can be found with the `diagnose npu np6 port-list` command.

## Date and time settings

Fortinet support may ask you to check the date and time settings for log message timestamp synchronization and for certificates that have a time requirement to check for validity.

### To check time settings:

```
execute time
```

### To check date settings:

```
execute date
```

If all devices have the same time, it helps to correlate log entries from different devices.

```
execute time
current time is: 12:40:48
last ntp sync:Thu Mar 16 12:00:21 2006
execute date
current date is: 2006-03-16
```

### To force synchronization with an NTP server:

```
config system ntp
    set ntpsync {enable | disable}
end
```

If all devices have the same time, it helps to correlate log entries from different devices.

## Running the TAC report

The Technical Assistance Center (TAC) report runs an exhaustive series of diagnostic commands. Some of the commands are only needed if you are using features, such as HA, VPN tunnels, or a modem. Fortinet support may ask you to use the report output to provide information about the current state of your FortiGate.

Due to the amount of output generated, the report may take a few minutes to run. If you are logging CLI output to a file, you can run this command to familiarize yourself with the diagnostic commands.

### To run the TAC report in the CLI:

```
execute tac report
```

## Using the process monitor


The *Process Monitor* displays running processes with their CPU and memory usage levels. Administrators can sort, filter, and terminate processes within the *Process Monitor* pane.

### To access the process monitor:

1. Go to *Dashboard > Status*:
  - Left-click in the *CPU* or *Memory* widget and select *Process Monitor*.
  - Click the user name in the upper right-hand corner of the screen, then go to *System > Process Monitor*.


The *Process Monitor* appears, which includes a line graph, donut chart, and process list.

- Click the + beside the search bar to view which columns can be filtered.

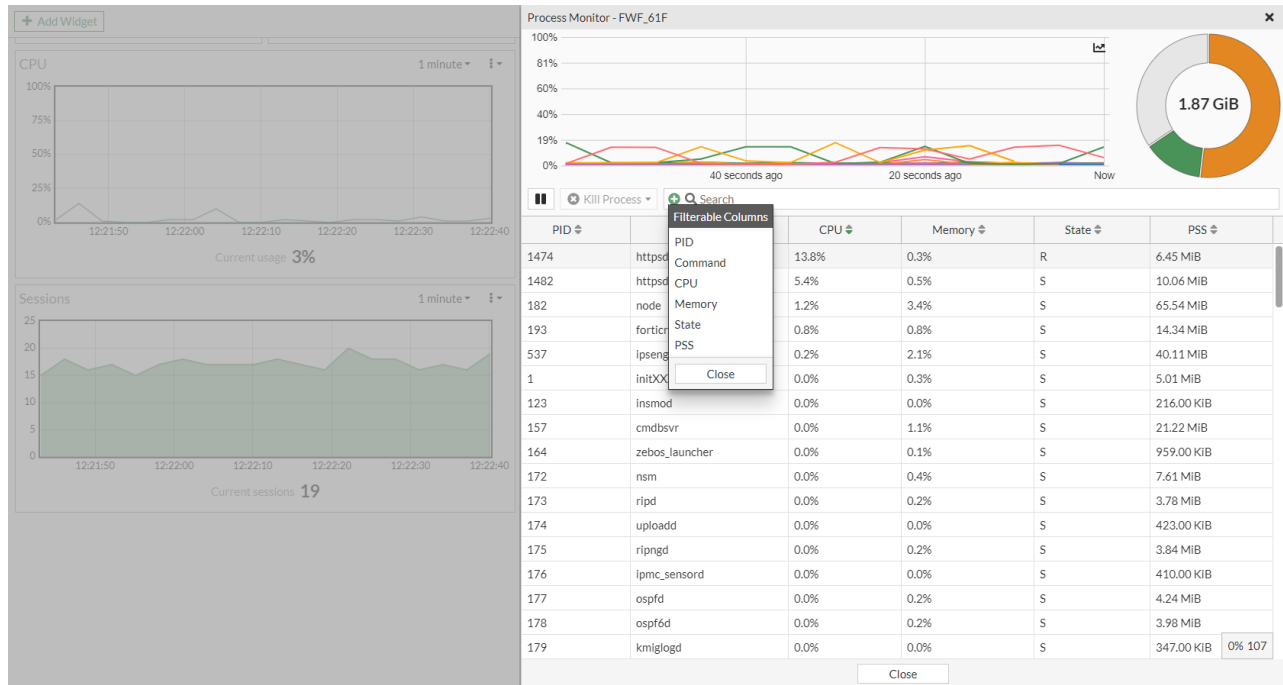

To kill a process within the process monitor:


- Select a process.
- Click the *Kill Process* dropdown.

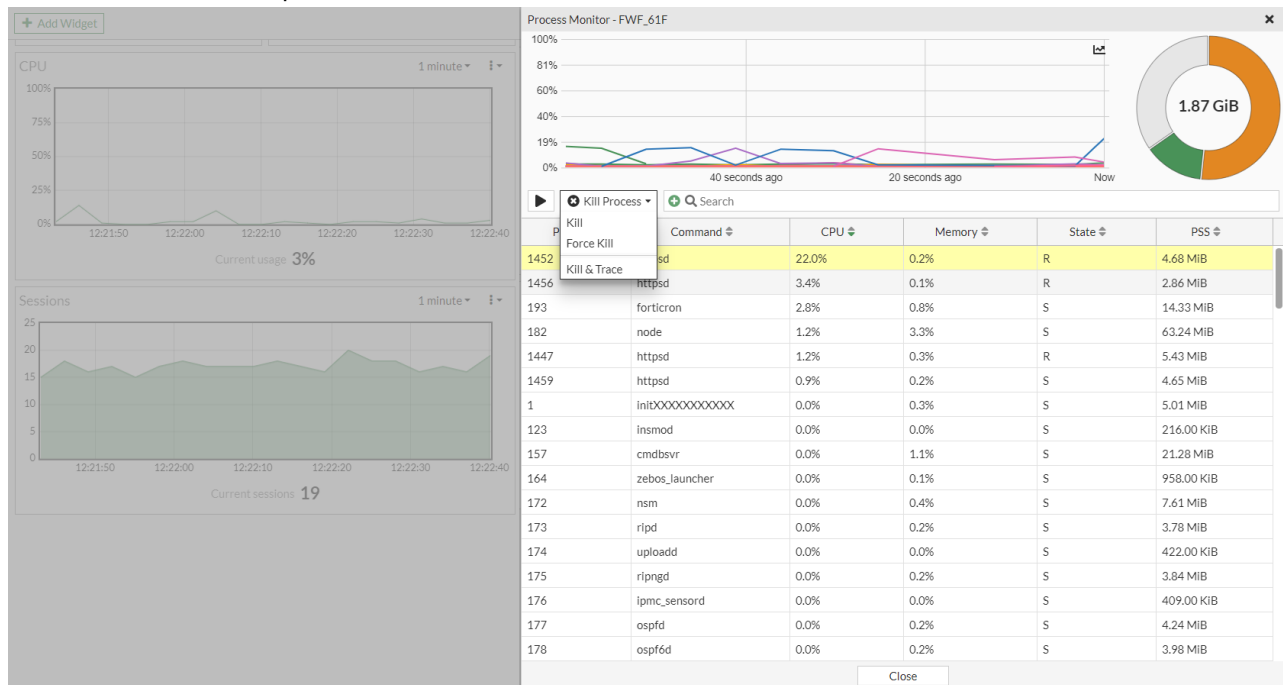

- Select one of the following options:
  - Kill*: the standard kill option that produces one line in the crash log (diagnose debug crashlog read).
  - Force Kill*: the equivalent to `diagnose sys kill 9 <pid>`. This can be viewed in the crash log.



- **Kill & Trace:** the equivalent to `diag sys kill 11 <pid>`. This generates a longer crash log and backtrace. A crash log is displayed afterwards.

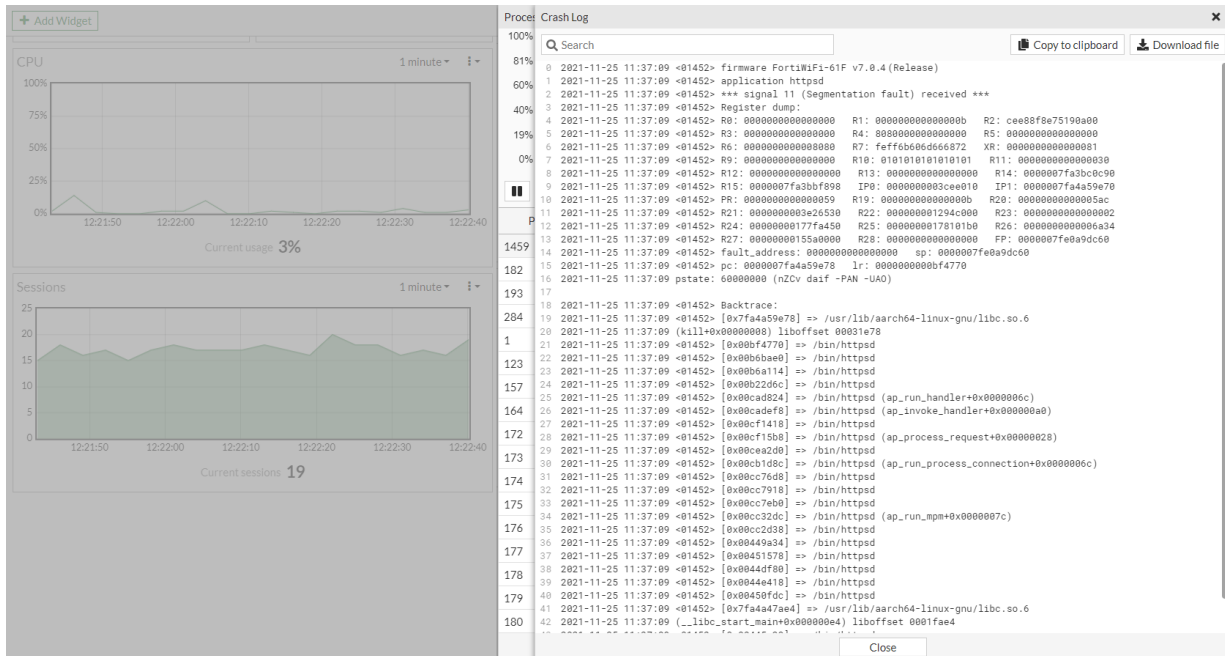

## Other commands

You may be asked to provide the following information when you contact Fortinet support.

- [ARP table on page 3147](#)
- [IP address on page 3149](#)

## ARP table

The ARP table is used to determine the destination MAC addresses of the network nodes, as well as the VLANs and ports from where the nodes are reached.

### To view the ARP table:

```
# get system arp
```

Address	Age(min)	Hardware Addr	Interface
10.10.1.3	1	50:b7:c3:75:ea:dd	internal7
192.168.0.190	0	28:f1:0e:03:2a:97	wan1
192.168.0.97	0	f4:f2:6d:37:b0:99	wan1

### To view the ARP cache in the system:

```
# diagnose ip arp list
```

```
index=14 ifname=internal7 10.10.1.3 50:b7:c3:75:ea:dd state=00000004 use=2494 confirm=1995
update=374 ref=3
```

```
index=5 ifname=wan1 192.168.0.190 28:f1:0e:03:2a:97 state=00000002 use=88 confirm=86
update=977639 ref=2
index=22 ifname=internal 192.168.1.111 00:0c:29:c6:79:3d state=00000004 use=3724
confirm=9724 update=3724 ref=0
index=5 ifname=wan1 224.0.1.140 01:00:5e:00:01:8c state=00000040 use=924202 confirm=930202
update=924202 ref=1
index=5 ifname=wan1 192.168.0.97 f4:f2:6d:37:b0:99 state=00000002 use=78 confirm=486
update=614 ref=26
index=14 ifname=internal7 10.10.1.11 state=00000020 use=172 confirm=1037790 update=78 ref=2
```

## ARP request and cache

The FortiGate must make an ARP request when it tries to reach a new destination. The base ARP reachable value determines how often an ARP request it sent; the default is 30 seconds. The actual ARP reachable time is a random number between half and three halves of the base reachable time, or 15 to 45 seconds. The random number is updated every five minutes.

ARP entries in the ARP cache are updated based on the state of the ARP entry and the objects that are using it, as highlighted in the following output sample:

```
index=5 ifname=wan1 224.0.1.140 01:00:5e:00:01:8c state=00000040 use=924202
confirm=930202 update=924202 ref=1
```

There are multiple possible states for an ARP entry, and the state-transition mechanism can be complex. Common states include the following:

State	Meaning	Description
000000002 or 0x02	REACHABLE	An ARP response was received
000000004 or 0x04	STALE	No ARP response within the expected time
000000008 or 0x08	DELAY	A transition state between STALE and REACHABLE before Probes are sent out
000000020 or 0x20	FAILED	Did not manage to resolve within the maximum configured number of probes
000000040 or 0x40	NOARP	Device does not support ARP, e.g. IPsec interface
000000080 or 0x80	PERMANENT	A statically defined ARP entry

An entry that is in the STALE (0x04) or FAILED (0x20) states with no references to it (ref=0) can be deleted. Many factors affect the state-transmit mechanism and if an entry is used by other subsystems. For example, ARP creation, ARP request/reply, neighbor lookup, routing, and others can cause an ARP entry to be in use or referenced.

The garbage collection mechanism runs every 30 seconds, and checks and removes stale and unreferenced entries if they have been stale for longer than 60 seconds. Garbage collection will also be triggered when the number of ARP entries exceeds the configured threshold. If the threshold is exceeded, no entries can be added to the ARP table.

### To set the maximum number of ARP entries threshold:

```
config system global
    set arp-max-entry <integer>
end
```

<b>arp-max-entry &lt;integer&gt;</b>	The maximum number of dynamically learned MAC addresses that can be added to the ARP table (131072 to 2147483647, default = 131072).
--------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------

**To set the ARP reachable time on an interface:**

```
config system interface
    edit port1
        set reachable-time <integer>
    next
end
```

<b>reachable-time &lt;integer&gt;</b>	The reachable time (30000 to 3600000, default = 30000).
---------------------------------------	---------------------------------------------------------

**To clear all of the entries in the ARP table:**

```
execute clear system arp table
```

**To delete a single ARP entry from the ARP table:**

```
diagnose ip arp delete <interface name> <IP address>
```

**To add static ARP entries:**

```
config system arp-table
    edit 1
        set interface "internal"
        set ip 192.168.50.8
        set mac bc:14:01:e9:77:02
    next
end
```

**To view a summary of the ARP table:**

```
# diagnose sys device list root

list virtual firewall root info:
ip4 route_cache: table_size=65536 max_depth=2 used=31 total=34
arp: table_size=16 max_depth=2 used=5 total=6
proxy_arp: table_size=256 max_depth=0 used=0 total=0
arp6: table_size=32 max_depth=1 used=3 total=3
proxy_arp6: table_size=256 max_depth=0 used=0 total=0
local table version=00000000 main table version=0000002b
vf=root dev=root vrf=0
vf=root dev=ssl.root vrf=0
...
vf=root dev=internal5 vrf=0
ses=0/0 ses6=0/0 rt=0/0 rt6=0/0
```

## IP address

You may want to verify the IP addresses assigned to the FortiGate interfaces are what you expect them to be.

### To verify IP addresses:

```
diagnose ip address list
```

The output lists the:

- IP address and mask (if available)
- `index` of the interface (a type of ID number)
- `devname` (the interface name)

While physical interface names are set, virtual interface names can vary. A good way to use this command is to list all of the virtual interface names. For `vsys_ha` and `vsys_fgfm`, the IP addresses are the local host, which are virtual interfaces that are used internally.

### Sample output:

```
# diagnose ip address list
IP=10.31.101.100->10.31.101.100/255.255.255.0 index=3 devname=internal
IP=172.20.120.122->172.20.120.122/255.255.255.0 index=5 devname=wan1
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=8 devname=root
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=11 devname=vsys_ha
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=13 devname=vsys_fgfm
```

## FortiGuard troubleshooting

The FortiGuard service provides updates to AntiVirus (AV), Antispam (AS), Intrusion Protection Services (IPS), Webfiltering (WF), and more. The FortiGuard Distribution System (FDS) consists of a number of servers across the world that provide updates to your FortiGate unit. Problems can occur with the connection to FDS and its configuration on your local FortiGate unit.

Some of the more common troubleshooting methods are listed here, including:

- [Troubleshooting process for FortiGuard updates on page 3151](#)
- [FortiGuard server settings on page 3152](#)
- [FortiGuard server settings on page 3152](#)

## Verifying connectivity to FortiGuard

You can verify FortiGuard connectivity in the GUI and CLI.

### To verify FortiGuard connectivity in the GUI:

1. Got to *Dashboard > Status*.
2. Check the *Licenses* widget. When FortiGate is connected to FortiGuard, a green check mark appears next to the available FortiGuard services.

### To verify FortiGuard connectivity in the CLI:

```
execute ping service.fortiguards.net
execute ping update.fortiguards.net
```

### Sample output:

```
FG100D# execute ping service.fortiguard.net
PING guard.fortinet.net (208.91.112.196): 56 data bytes
64 bytes from 208.91.112.196: icmp_seq=0 ttl=51 time=61.0 ms
64 bytes from 208.91.112.196: icmp_seq=1 ttl=51 time=60.0 ms
64 bytes from 208.91.112.196: icmp_seq=2 ttl=51 time=59.6 ms
64 bytes from 208.91.112.196: icmp_seq=3 ttl=51 time=58.9 ms
64 bytes from 208.91.112.196: icmp_seq=4 ttl=51 time=59.2 ms

--- guard.fortinet.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 58.9/59.7/61.0 ms

FG100D# execute ping update.fortiguard.net
PING fdl.fortinet.com (208.91.112.68): 56 data bytes
64 bytes from 208.91.112.68: icmp_seq=0 ttl=53 time=62.0 ms
64 bytes from 208.91.112.68: icmp_seq=1 ttl=53 time=61.8 ms
64 bytes from 208.91.112.68: icmp_seq=2 ttl=53 time=61.3 ms
64 bytes from 208.91.112.68: icmp_seq=3 ttl=53 time=61.9 ms
64 bytes from 208.91.112.68: icmp_seq=4 ttl=53 time=61.8 ms
```

## Troubleshooting process for FortiGuard updates

The following process shows the logical steps you should take when troubleshooting problems with FortiGuard updates:

1. **Does the device have a valid license that includes these services?**  
Each device requires a valid FortiGuard license to access updates for some or all of these services. You can verify the status of the support contract for your devices at the [Fortinet Support](#) website.
2. **If the device is part of a high availability (HA) cluster, do all members of the cluster have the same level of support?**  
You can verify the status of the support contract for all of the devices in your HA cluster at the [Fortinet Support](#) website.
3. **Are services enabled on the device?**  
To see the FortiGuard information and status for a device in the GUI, go to *System > FortiGuard*.  
Use this page to verify the status of each component, and enable each service.
4. **Can the device communicate with FortiGuard servers?**  
Go to *System > FortiGuard* in the GUI, and try to update AntiVirus and IPS, or test the availability of Web Filtering and AS default and alternate ports.
5. **Is there proper routing to reach the FortiGuard servers?**  
Ensure there is a static or dynamic route that allows your FortiGate to reach the FortiGuard servers. Usually a generic default route to the internet is enough, but you may need to verify this if your network is complex.
6. **Are there issues with DNS?**  
An easy way to test this is to attempt a traceroute from behind the FortiGate to an external network using the Fully Qualified Domain Name (FQDN) for a location. If the traceroute FQDN name doesn't resolve, you have general DNS problems.
7. **Is there anything upstream that might be blocking FortiGuard traffic, either on the network or ISP side?**  
Many firewalls block all ports, by default, and ISPs often block ports that are low. There may be a firewall between the FortiGate and the FortiGuard servers that's blocking the traffic. By default, FortiGuard uses port 53. If that port is blocked you need to either open a hole for it or change the port it is using.

### 8. Is there an issue with source ports?

It is possible that ports that FortiGate uses to contact FortiGuard are being changed before they reach FortiGuard or on the return trip before they reach FortiGate. A possible solution for this is to use a fixed-port at NAT'd firewalls to ensure the port remains the same. You can use packet sniffing to find more information about what's happening with ports.

### 9. Are there security policies that include antivirus?

If none of the security policies include antivirus, the antivirus database will not be updated. If antivirus is included, only the database type that's used will be updated.

## FortiGuard server settings

Your local FortiGate connects to remote FortiGuard servers to get updates to FortiGuard information, such as new viruses that may have been found or other new threats.

The default setting to reach FortiGuard is anycast. However, FortiGate can be configured to use unicast server. See [FortiGuard on page 2491](#) for more information.

This section provides methods to display FortiGuard server information on your FortiGate, and how to use that information and update it to fix potential problems.

### Displaying the server list

**To get a list of FDS servers FortiGate uses to send web filtering requests:**

```
get webfilter status
```

or

```
diagnose debug rating
```

Rating requests are only sent to the server at the top of the list in normal operation. Each server is probed for Round Trip Time (RTT) every two minutes. Rating may not be enabled on your FortiGate.

Optionally, you can add a refresh rate to the end of the command to determine how often the server list is refreshed.

#### Sample output:

```
Locale           : English

Service          : Web-filter
Status           : Enable
License          : Contract

Service          : Antispam
Status           : Disable

Service          : Virus Outbreak Prevention
Status           : Disable

Num. of servers  : 2
Protocol         : https
Port             : 443
Anycast          : Disable
```

Default servers : Included

```
-- Server List (Wed Nov 16 14:42:08 2022) --
IP                               Weight  RTT  Flags  TZ  FortiGuard-requests
Curr Lost Total Lost          Updated Time
140.174.22.68                    30    866      -5
13                               0    Wed Nov 16 14:41:35 2022
12.34.97.18                      30    878 DI   -5
12                               0    Wed Nov 16 14:41:35 2022
```

## Output details

The server list includes the IP addresses of alternate servers if the first entry cannot be reached. In this example, the IP addresses are not public addresses.

The following flags in `get webfilter status` indicate the server status:

Flag	Description
D	The server was found through the DNS lookup of the hostname. If the hostname returns more than one IP address, all of them are flagged with D and are used first for INIT requests before falling back to the other servers.
I	The server to which the last INIT request was sent
F	The server hasn't responded to requests and is considered to have failed
T	The server is currently being timed
S	Rating requests can be sent to the server. The flag is set for a server only in two cases: <ul style="list-style-type: none"> <li>The server exists in the servers list received from the FortiManager or any other INIT server.</li> <li>The server list received from the FortiManager is empty so the FortiManager is the only server that the FortiGate knows and it should be used as the rating server.</li> </ul>

Please note that the example output displays `Anycast` as `Disable` because the CLI commands above work with the FortiGuard unicast server case and not with the FortiGuard anycast servers case.

Also, in the example output above, the server 12.34.97.18 was found through a DNS lookup (D flag) and was sent the last INIT request (I flag).

## Sorting the server list

The server list is sorted first by weight. The server with the smallest RTT appears at the top of the list, regardless of weight. When a packet is lost (there has been no response in 2 seconds), it is re-sent to the next server in the list. Therefore, the top position in the list is selected based on RTT, while the other positions are based on weight.

## Calculating weight

The weight for each server increases with failed packets and decreases with successful packets. To lower the possibility of using a remote server, the weight isn't allowed to dip below a base weight. The base weight is calculated as the difference in hours between the FortiGate and the server multiplied by 10. The farther away the server is, the higher its base weight is and the lower it appears in the list.

## View open and in use ports

Traffic destined for the FortiGate itself, and not being passed through or dropped, is called local-in traffic. It can be from a variety of services, such as HTTPS for administrative access, or BGP for inter-router communication.

Local-in traffic is controlled by local-in policies. To enable viewing local-in policies in the GUI, go to *System > Feature Visibility* and enable *Local In Policy*.

The *Policy & Objects > Local In Policy* page shows a read-only list of the local policies, populated with default values, and values that are automatically enabled when the related service is enabled, for example, enabling BGP opens TCP port 179. For more information, see [Local-in policy on page 1065](#).

**To view ports that are being listened on, and active connections and the services or processes using them:**

```
# diagnose sys tcpsock | grep 0.0.0.0
0.0.0.0:10400->0.0.0.0:0->state=listen err=0 socktype=4 rma=0 wma=0 fma=0 tma=0 inode=10621
process=142/authd
...
0.0.0.0:53->0.0.0.0:0->state=listen err=0 socktype=1 rma=0 wma=0 fma=0 tma=0 inode=8067
process=177/dnssproxy
0.0.0.0:22->0.0.0.0:0->state=listen err=0 socktype=1 rma=0 wma=0 fma=0 tma=0 inode=13390
process=225/sshd
0.0.0.0:541->0.0.0.0:0->state=listen err=0 socktype=1 rma=0 wma=0 fma=0 tma=0 inode=13155
process=215/fgfmd
...
0.0.0.0:9980->0.0.0.0:0->state=listen err=0 socktype=1 rma=0 wma=0 fma=0 tma=0 inode=5063
process=129/httpsd
0.0.0.0:179->0.0.0.0:0->state=listen err=0 socktype=1 rma=0 wma=0 fma=0 tma=0 inode=10583
process=148/bgpd
...
```

For more information on incoming and outgoing ports, see the [FortiOS Ports](#) guide.

## IPS and AV engine version

The IPS engine is an important module that processes traffic in policies configured with flow-based inspection, next generation firewall policies, as well as any policies that have IPS and application control defined. Just like its counterpart, the WAD daemon in proxy-based inspection, the IPS engine can invoke other daemons to perform additional processing such as certificate inspection, authentication, and other functions.

For each FortiOS release, an IPS engine is built into the firmware. You can find information about the IPS engine in its corresponding [Release Notes](#).

When a FortiGate is configured for automatic FortiGuard updates and has policies configured to use the IPS engine, it downloads new releases of the IPS engine that are available through the FortiGuard Distribution Network. The IPS Engine package released to FortiGuard is unavailable for manual download.

The FortiGate supports manual upgrade/downgrade of the IPS engine in special cases, such as for troubleshooting or resolving a temporary issue that Technical Support deems necessary. In these cases, Technical Support distributes the IPS engine package.

Likewise, the AV engine is also built into the FortiOS firmware and available as an automatic update through FortiGuard. You can find information about the AV engine in its corresponding [Release Notes](#).



Finally, for compatibility information between IPS and AV engines with FortiOS, see [IPS Engine and AV Engine Support for FortiOS and FortiAPS](#)

## CLI troubleshooting cheat sheet

See [CLI troubleshooting cheat sheet](#).

## Additional resources

To learn more about FortiGate and FortiOS, and for information about technical issues, refer to the following resources.

### Fortinet Document Library

Installation Guides, Administration Guides, Quick Start Guides, and other technical documents are available online at the [Fortinet Document Library](#).

### Release notes

Issues that arise after the technical documentation has been published are often listed in the release notes. The release notes are available in the [Fortinet Document Library](#).

### Fortinet Video Library

The [Fortinet Video Library](#) hosts a collection of videos that provide valuable information about Fortinet products.

### Fortinet Community

The [Fortinet Community](#) provides a place to collaborate, share insights and experiences, and get answers to questions. It incorporates the Fortinet Knowledge Base and technical discussion forums. You can access the Fortinet Community at <https://community.fortinet.com>.

### Knowledge Base

The [Fortinet Knowledge Base](#) provides access to a variety of articles, white papers, and other documentation that provides technical insight into a range of Fortinet products. You can access the Knowledge Base at <https://community.fortinet.com/t5/Knowledge-Base/ct-p/knowledgebase>.

## Fortinet technical discussion forums

The [online technical forum](#) allows administrators to contribute to discussions about issues related to their Fortinet products. Searching the forum can help an administrator identify if an issue has been experienced by another user. You can access the support forum at <https://community.fortinet.com/t5/Fortinet-Forum/bd-p/fortinet-discussion>.

## Fortinet Training Institute

The [Fortinet Training Institute](#) hosts a collection of tutorials and training materials that you can use to increase your knowledge of Fortinet products. You can access these training resources at <https://www.fortinet.com/training.html>.

## Fortinet Support

You defined your problem, researched a solution, put together a plan to find the solution, and executed that plan. At this point, if the problem has not been solved, contact [Fortinet Support](#) for assistance.



[www.fortinet.com](http://www.fortinet.com)

---

Copyright© 2023 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.