

GigaPan Equipment

Equipment List

- DSLR Camera
 - o Camera: Canon T3i with camera strap and body cap
 - o 2 lenses with top and bottom lens caps: 18-55mm (shorter), 75-300mm (longer)
 - o Battery charger; 1 battery in camera
 - o 2 Memory cards (SD)
 - o Mini USB to USB cable and a mini USB to Video/Audio output cable
- Manfrotto Tripod with device mounting plate in place
- GigaPan Epic Pro
 - o GigaPan
 - o GigaPan Elite Backpack
 - o One battery charger and one battery
 - o 2 trigger cables – one for Canon and one for Nikon
 - o GigaPan Epic Pro Quick start guide

Charging the Batteries

The GigaPan's battery can be charged either on its own or while it is in the GigaPan.

1. On its own, you can remove the battery pack from the GigaPan by unlatching the battery lock counter-clockwise. There is a charger input on the other end of the battery.
2. While the battery is in the GigaPan, make sure that it is securely locked with its latch turned in clockwise. The battery must be fully pushed in before you are able to turn the latch. Once firmly locked in, there is an input for the charger on the bottom right corner below the screen, indicated by the lightning bolt image.

While charging, the charger's LED light will remain red until it turns green to indicate that it is fully charged.

