

## STARTING WEBSTER SOFTWARE

To start Webster software in Windows:

- 1 Plug in and turn on your whiteboard, if necessary.
- 2 Start your computer, if necessary.
- 3 On the Windows taskbar, choose “Programs” from the Start menu and choose “Webster” from the Webster group. The software launches and detects your connected whiteboard.

To start Webster software on a Macintosh:

- 1 Plug in and turn on your whiteboard, if necessary.
- 2 Start your computer, if necessary.
- 3 Open the Webster folder from its installation location and double-click the Webster application icon. The software launches and detects your connected whiteboard.

### NOTE:

*At startup, Webster software detects if you are using the PolyVision IRP or IPD system and automatically initiates projection mode alignment.*

## LT Whiteboard Calibration

High-precision lasers in the LT whiteboard sometimes require calibration. When you install Webster software and establish communication between the whiteboard and the computer, a calibration check is performed automatically.

If Webster software displays a warning stating that your LT whiteboard requires calibration, contact technical support.

## ESTABLISHING COMMUNICATION BETWEEN THE BOARD AND COMPUTER

Webster automatically detects the whiteboard connected to your computer's COM or USB port. However, in some circumstances you may need to identify the port manually (for example, if you add, move, or remove a serial device such as a modem, laptop, PDA or input device).

To establish communication between the board and the computer:

- 1 Make sure the whiteboard is plugged in and turned on, and properly connected to your computer, if necessary.