

To write:

- 1 Choose a pen (Walk-and-Talk, TS, or LT models) or stylus (IRP or IPD models).
- 2 Select a pen color on the whiteboard icon strip (TS models), on the remote control (Walk-and-Talk) or in the projection toolbar (IRP or IPD models). Webster records your writing in the color you choose.
- 3 Use firm consistent pressure as you write.

**NOTE:**

*TS models: As you write, the whiteboard provides audible feedback, and the green LED glows brighter to indicate that it recognizes your strokes.*

### Erasing the Board

Erase functions are based on a calculated circle around a single point. Always use the erasers that are provided with your whiteboard. Erasing depends upon which model you use.

To erase on Walk-and-Talk models:

- Erase using the battery-operated infrared eraser provided with the board. Use the eraser felt flat against the whiteboard. Never use the narrow edge of the eraser on the whiteboard.

To erase on TS models:

- Large areas: Tap the Wide Erase icon on the board. Use the eraser felt flat against the whiteboard.
- Small areas: Tap the Narrow Erase icon on the board and erase with your finger or the edge of the round eraser.

To erase on LT models:

- Use the large or small eraser with the felt flat against the whiteboard. Do not cover the reflective strip around the perimeter of the eraser. Never use the narrow edge of the eraser on the whiteboard.

To erase on IRP and IPD models:

- Tap the Wide or Narrow Erase button in the projection toolbar. Use the stylus to erase.