

Tarot 2-Axis Brushless Gimbal Software Upgrade Note V1.3

1. Upgrade Note

1. Upgrade method can be found in “Tarot 2-Axis Brushless Gimbal for Gopro User Manual V1.0”.
2. Firmware version and PC software version must be same.
3. The firmware v1.3 will restore factory settings, if you have changed the gimbal parameters you must remember that.

2. Upgraded content

1. Default mode parameter is added: If the gimbal stick mode channel is not connected to receiver , you can use this parameter to set up gimbal default stick mode.
2. Corrected the "Shot: S" and "RC mode: C" channel mapping error.

3. Extra attention

“Init Roll Angle” and “Init Tilt Angle” parameters are valid only in “stick rate mode(Mode1)”. In “stick position mode(Mode2)” the gimbal angle is given by receiver. If you want to set the initial angle without receiver, you must set the “Default Mode” to “stick rate mode(Mode1)”.