



D

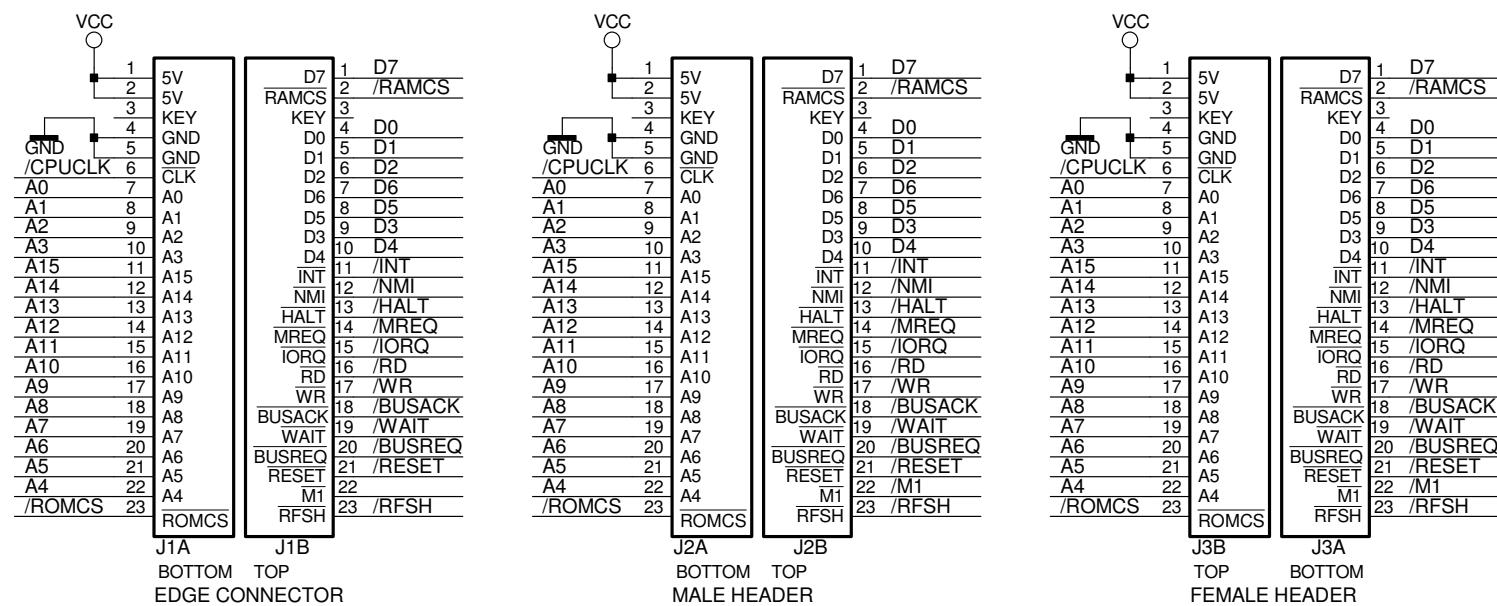


ALL ADDRESS LINES EXCEPT A7 ARE USED AS ACTIVE LOW CHIP SELECTS,
ALL OF A0 TO A3 MUST BE INACTIVE (HIGH) FOR THE PSG TO BE ADDRESSED.
ADDITIONALLY ANY OF A4, A5 AND A6, CAN BE ENABLED TO ALSO DISABLE THE PSG WHEN THESE ARE LOW.

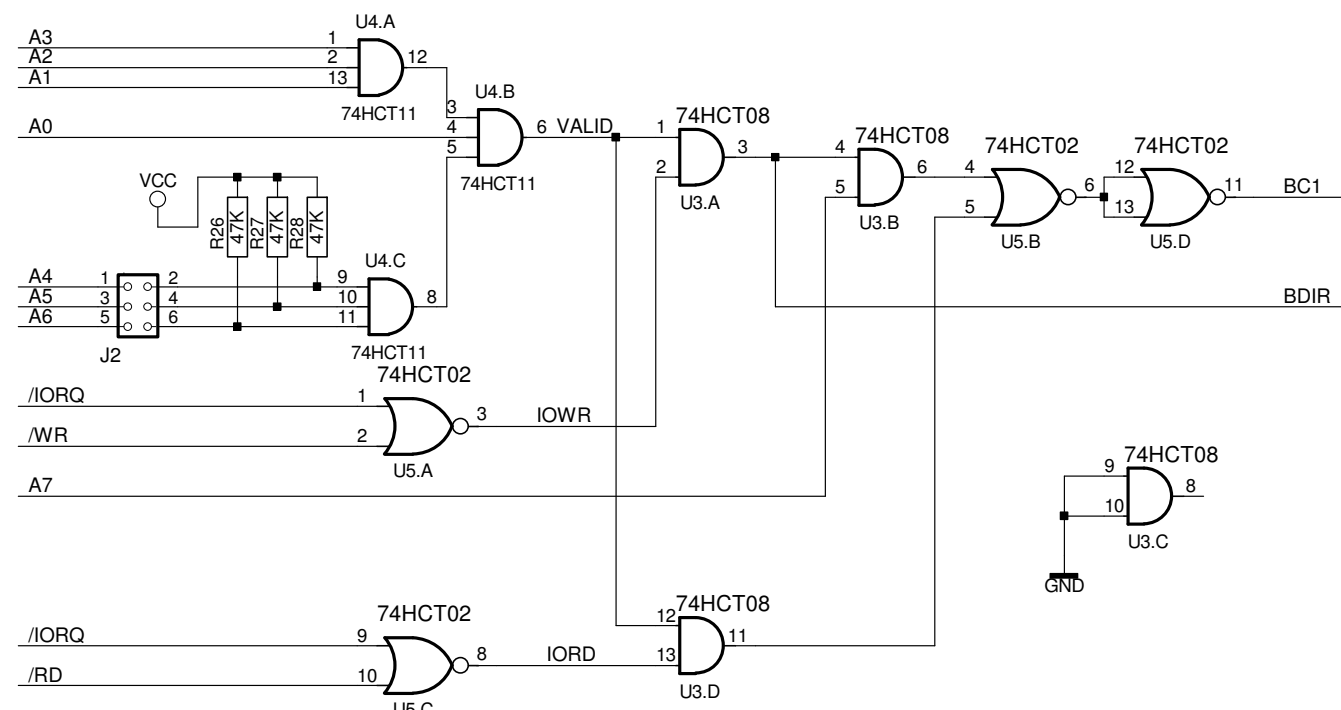



D

C

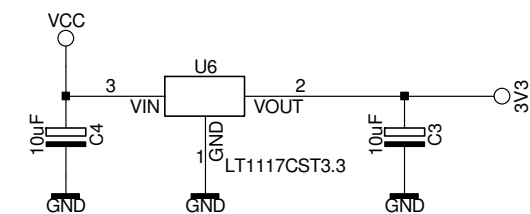

C

B

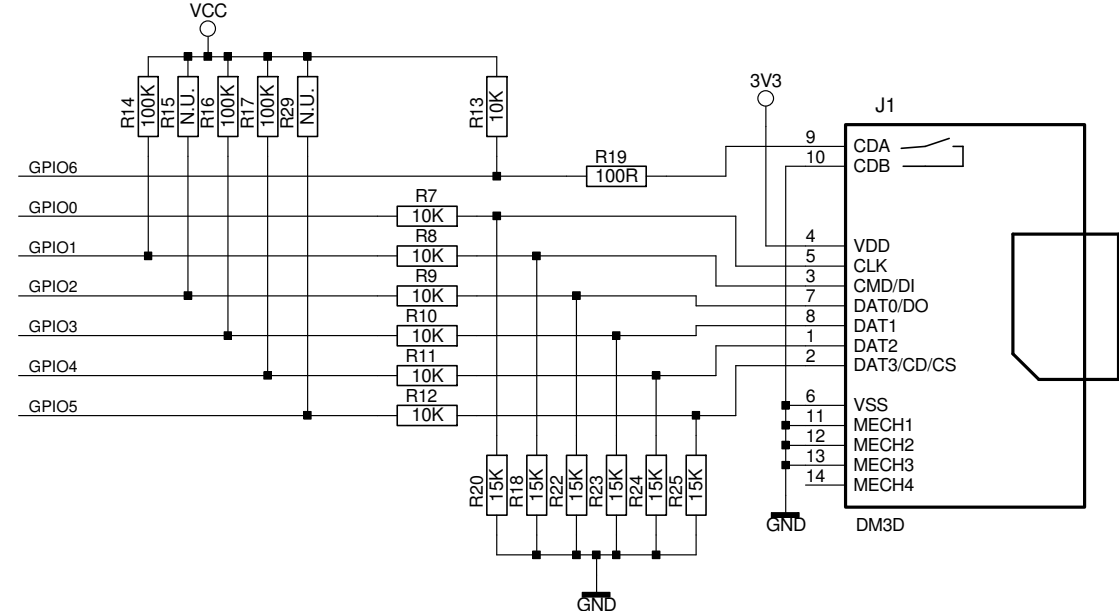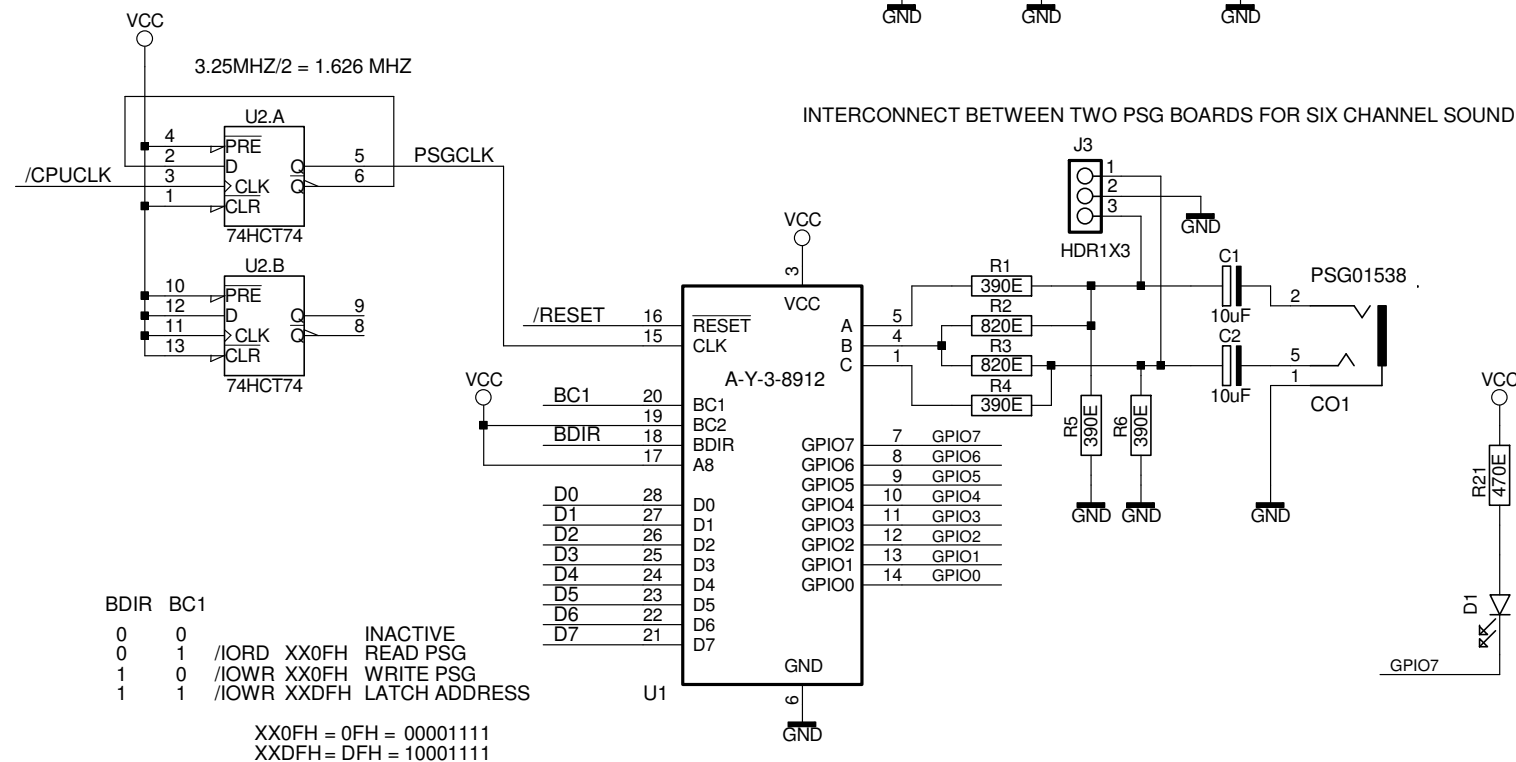

B

A

IN CASE YOU NEED TO USE THE PSG WITH ANOTHER DEVICE THAT USES ANY OF THE A4, A5 OR A6 LINES AS CHIP SELECT, PLACE JUMPERS ON J2 TO DISABLE THE PSG FOR A HIGH ON THOSE ADDRESS LINES
TO USE TWO (OR THREE) PSG BOARDS PLACE ONE (OR TWO FOR THREE PSG'S) ON J2, EACH BOARD IN A DIFFERENT CONFIGURATION.
FOR EXAMPLE, ON THE PRIMARY BOARD ONLY PLACE A JUMPER BETWEEN PINS 3 AND 4, AND ON THE SECONDARY BOARD PLACE A JUMPER BETWEEN PIN 1 AND 2.

| | | |
|----------|-----------------------|---------------|
| REV: 1.6 | DATE: 9/8/2016 | ENG: MAHJONGG |
| PROJECT: | SOUND EXPANSION BOARD | |
| COMPANY: | REVSPACE | |
| ADDRESS: | SPOORLAAN 5D, 2495AL | |
| CITY: | DEN HAAG | |
| COUNTRY: | NETHERLANDS | |
| INITIAL | 1/5/2015 | PAGE: 1 OF: 1 |

A