

Tips for Danas:

Two button turn on is helpful so that kids don't accidentally turn on the Dana.

Two-Button On setting

Dana is set to power on when you press the **on/off** key. Now you can change this setting so that you have to press **enter** and **on/off** to power on your Dana. If you frequently transport your Dana in a backpack or briefcase, you might want to select the Two-button On setting so that you avoid inadvertently turning the device on and draining power from it.

When you enable this option, you must press and hold down **enter**, then press **on/off** to turn your Dana on.

To enable this option:

1. From the Applications Launcher, tap Keyboard to launch the Keyboard application. (If you don't see the application, press **apps** repeatedly until you see ALL in the upper right corner of the Applications Launcher, then look for the Keyboard application.)



2. Choose Power On Keys from the list in the upper right corner. The screen changes to display power-on options.



3. Click the On Key dropdown list to choose On and enter keys.



Now Dana will turn on only when you hold down **enter** and press **on/off**. To change this behavior, repeat the steps and choose On key from the list.