



MOUNTING THE CAMERA 2 3 4 5
Remove the top assembly (fig. 2) by releasing knob "D". To slide it completely out of the housing, push safety button "E".

Remove camera plate "CP" (fig. 3) by releasing knob "G". To slide it completely out of the housing, push safety button "H".

You will find two screws attached to the top assembly: screw "J" (fig. 3) is 1/4 in; "L" is 3/8 in. Depending on your camera tripod attachment, choose the correct screw and use it to fix your camera to plate "CP" (fig. 4). Use a coin or screwdriver to lock: take care to align the lens with the centre of the plate indicated by letter "K". Mount the camera on the top assembly as show in figure 5 by sliding the camera + plate into the housing following the direction shown by the "insert" arrow. Lock in place using knob "G": before locking, take care to align the lens with the long plate "F" – the lens axis must be perfectly above the slot of the plate as shown in figure 5. The angle of the lever on the ratchet knob "G" can be repositioned as required without effecting the lock itself. Pull the lever outwards, rotate as required and release and it will locate in the new position.