



### ADDITIONAL PLATES 13

If you have a very compact camera we suggest you to use the short plates "SC" (fig. 13) and "FC" (supplied with the head) instead of the two long plates "F" and "S" in order to reduce space and weight of the system.

To replace the plate "S" unscrew screw "SD" (fig. 13)

To replace the plate "F", please refer to fig. 6 and unscrew screw "O"

### USE OF THE KIT AS AN OBJECT PANORAMA TURNTABLE 14

The head can also be used as a turntable, useful for shooting object panoramas. For this use, loosen knob "V" and push button "AH" to slide the lower plate "S" out of the housing on the panoramic rotation base unit. In place of the long plate and top assembly, mount one of the two shorter plates supplied as a base for your object. The plate housing has a "center" mark to help you position your object accurately above the center of panoramic rotation.

