


OKBABY

新登場 New Product Announcement.

國內外專利 Patents in Taiwan and overseas.

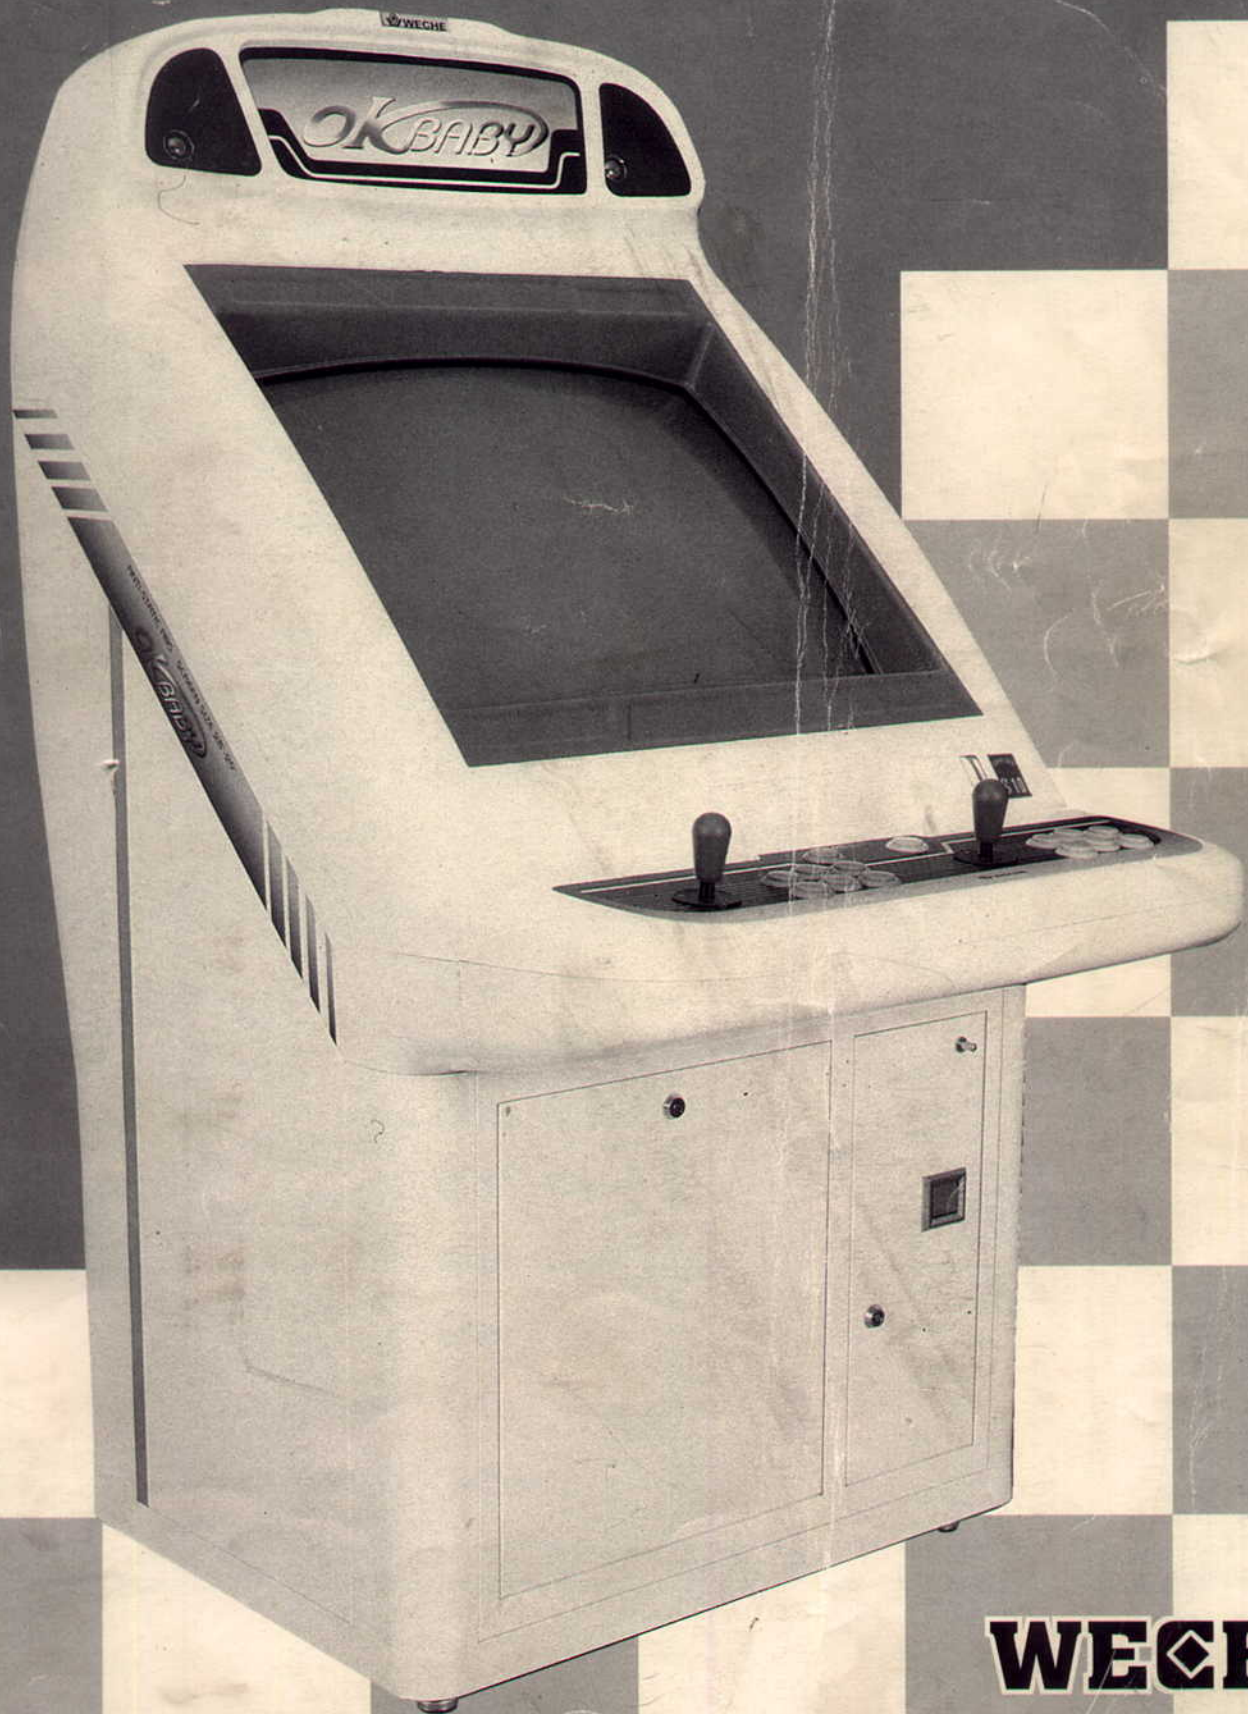

WEICHE

1. Attachment.....	1
2. Model.....	2
3. Caution.....	3
4. Ground Wire Assembly.....	4
5. Control Panel Wire Assembly.....	5
6. PCB Connector Wire Assembly.....	6
7. Assembly Drawing.....	7
8. Parts List.....	15

Attachment


1. Button	4
2. Button cap	6
3. Fuse 3A	1
4. Fuse 5A	1
5. Upright Conversion Base Ass	8
6. M5 Screw	2
7. M4 Screw	2
8. M4*12L (Screw)	2
9. M3*20L (Screw)	4
10. M6*12L (Washer nut)	4
11. Washer M6*18L	4
12. M4*12L (Washer nut)	2
13. Ashtray	1

OKBABY

MODEL

OK-S OK-L


OKBaby Cabinet+Upright Base

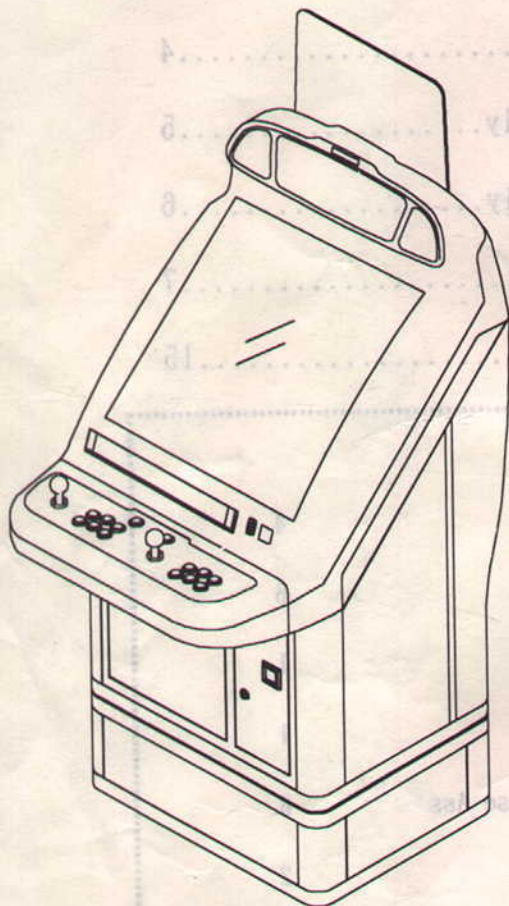


Model	OK-S
Power	110V . 220V
Monitor	28" . 29"
Weight	100kg
Coin	ticket, coin

Model	OK-L
Power	110V . 220V
Monitor	28" . 29"
Weight	110kg
Coin	ticket, coin

● OK-S Size

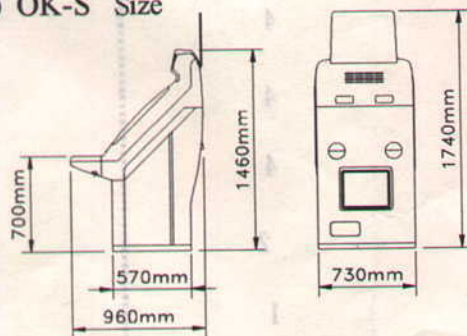

● OK-L Size

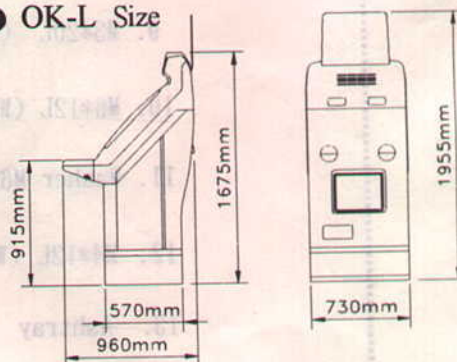


OKBABY

MODEL


OK-S

OK-L

GROUND WIRE ASSEMBLY

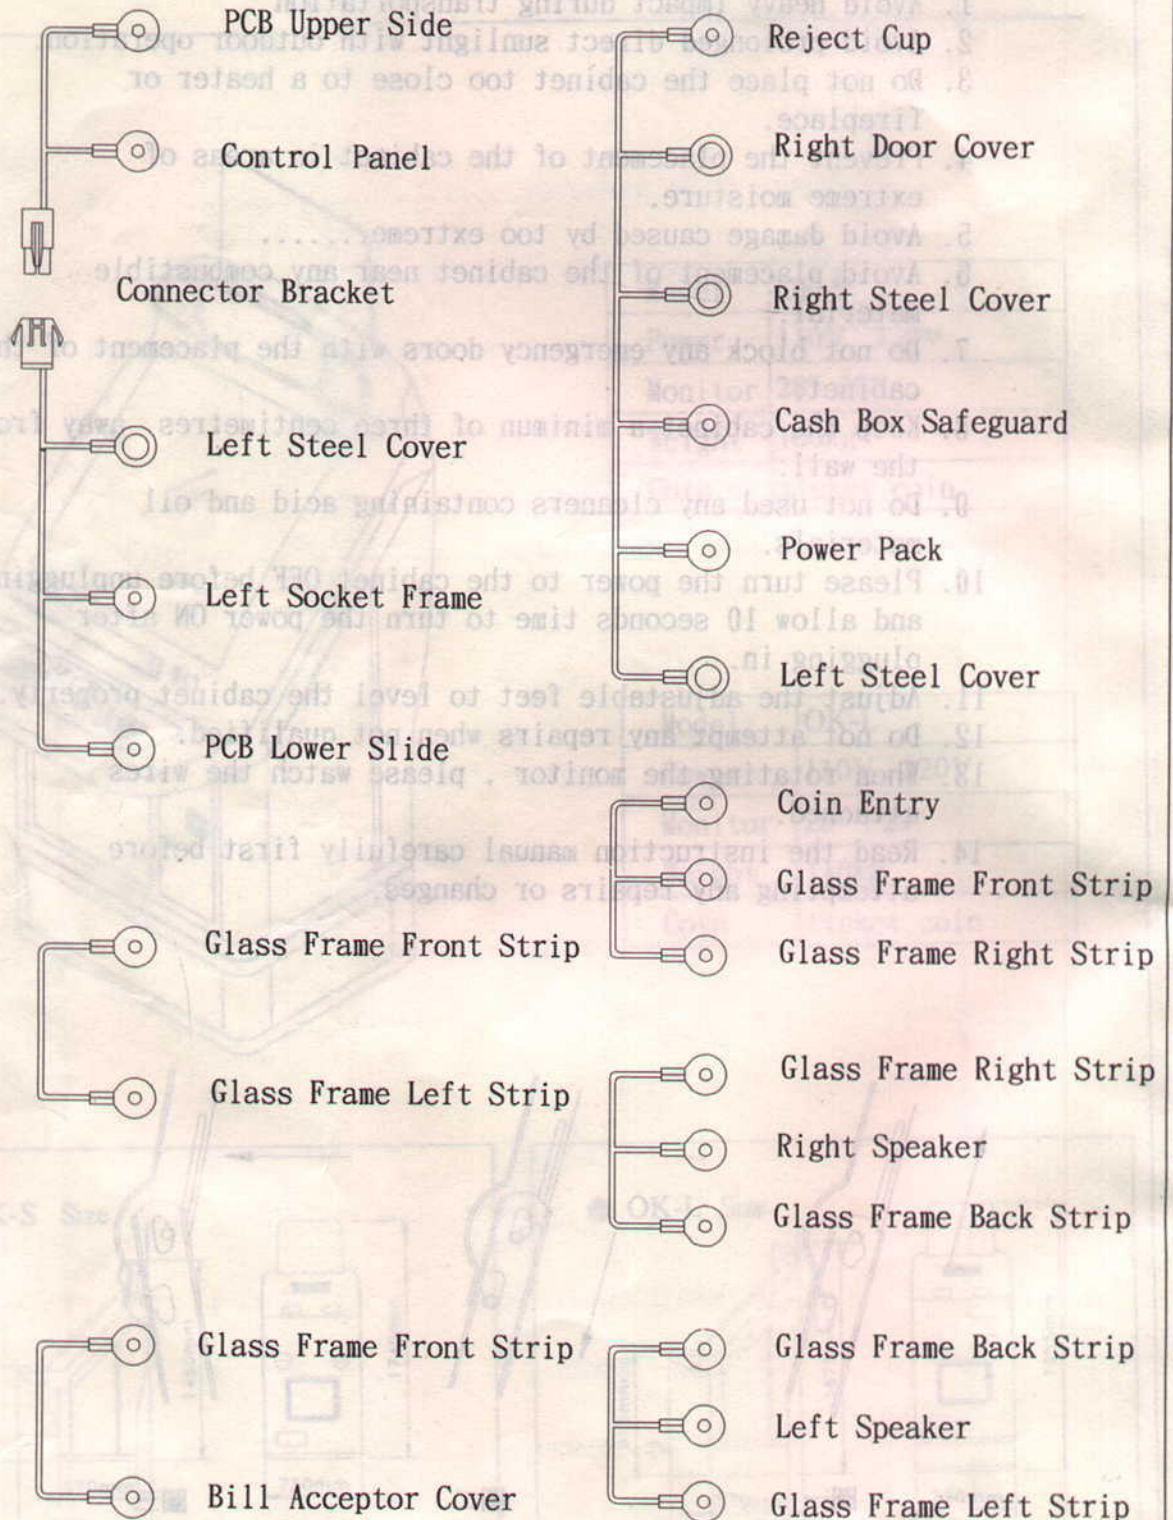

CONTROL PANEL LAYOUT

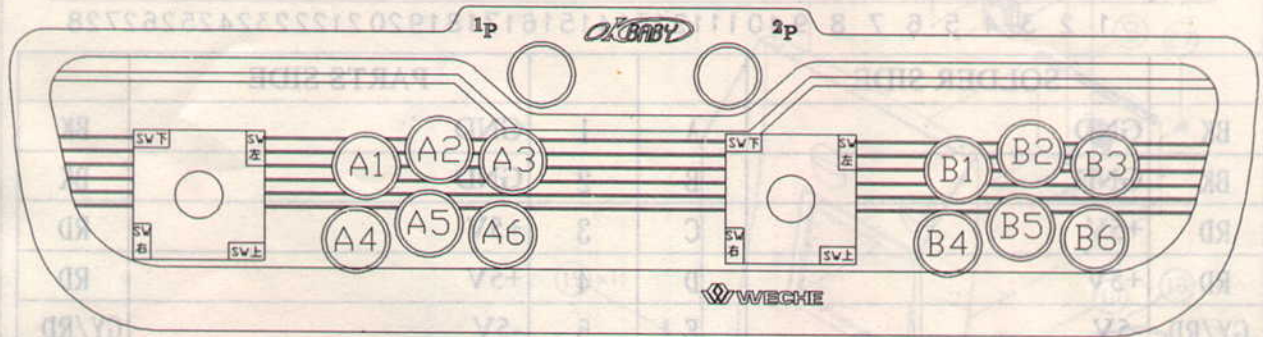

1P HOUSING (RED)

1	2	3	4
COM	1P	A1	A2
5	6	7	8
A3	A4	A5	A6
9	10	11	12
A-1	A-2	A-3	A-4

Pin 1 (BK/WE)=Button Joystick COM
 Pin 2 (BN/WE)=1 PLAY SW
 Pin 3 (RD/WE)=A1 SW
 Pin 4 (OE/BK)=A2 SW
 Pin 5 (YW/BK)=A3 SW
 Pin 6 (GN/BK)=A4 SW
 Pin 7 (BE/WE)=A5 SW
 Pin 8 NOT USED
 Pin 9 (GY/BK)=A-1 SW UP
 Pin 10(WE/BK)=A-2 SW DOWN
 Pin 11(PH/BK)=A-3 SW LEFT
 Pin 12(GN/YW)=A-4 SW RIGHT

2P HOUSING (WHITE)

1	2	3	4
COM	2P	B1	B2
5	6	7	8
B3	B4	B5	B6
9	10	11	12
B-1	B-2	B-3	B-4

 
Pin 1 (BK)=Button Joystick COM
 Pin 2 (BN)=2 PLAY SW
 Pin 3 (RD)=B1 SW
 Pin 4 (OE)=B2 SW
 Pin 5 (YW)=B3 SW
 Pin 6 (GN)=B4 SW
 Pin 7 (BE)=B5 SW
 Pin 8 NOT USED
 Pin 9 (GY)=B-1 SW UP
 Pin 10(WE)=B-2 SW DOWN
 Pin 11(PH)=B-3 SW LEFT
 Pin 12(GN/YW)=B-4 SW RIGHT

BK=Black YW=Yellow
 BN=Brown BE=Blue
 OE=Orange PH=Pink

WE=White GN=Green
 RD=Red GY=Grey
 PE=Purple


PCB CONNECTOR WIRE ASSEMBLY


A B C D E F H J K L M N P R S T U V W X Y Z a b c d e f





1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28


	SOLDER SIDE			PARTS SIDE	
BK	GND	A	1	GND	BK
BK	GND	B	2	GND	BK
RD	+5V	C	3	+5V	RD
RD	+5V	D	4	+5V	RD
GY/RD	-5V	E	5	-5V	GY/RD
OE/RD	+12V	F	6	+12V	OE
		H	7		
OE	Coin-out Meter	J	8	Coin-in Meter	YW
	Ticket Dispens	K	9		
PE	Audio " - "	L	10	Audio " + "	GY
		M	11		
	Video --- GN	N	12	Video --- RD	
	Sync(same step) --- WH	P	13	Video --- BL	
GN	SERVICE SW	R	14	Video --- gnd	
		S	15	TEST SW	BE
		T	16	COIN 1	WE
BN	2PLAY Start	U	17	1PLAY Start	BN/WE
GY	Joy Stick B-1 (Up)	V	18	Joy Stick A-1 (Up)	GY/BK
WE	Joy Stick B-2 (Down)	W	19	Joy Stick A-2 (Down)	WE/BK
PH	Joy Stick B-3 (Left)	X	20	Joy Stick A-3 (Left)	PH/BK
GN/YW	Joy Stick B-4 (Right)	Y	21	Joy Stick A-4 (Right)	GN/BK
RD	Button B1	Z	22	Button A1	RD/WE
OE	Button B2	a	23	Button A2	OE/BK
YW	Button B3	b	24	Button A3	YW/BK
GN	Button B4	c	25	Button A4	GN/YW
BE	Button B5	d	26	Button A5	BE/WE
BK	GND	e	27	GND	BK
BK	GND	f	28	GND	BK

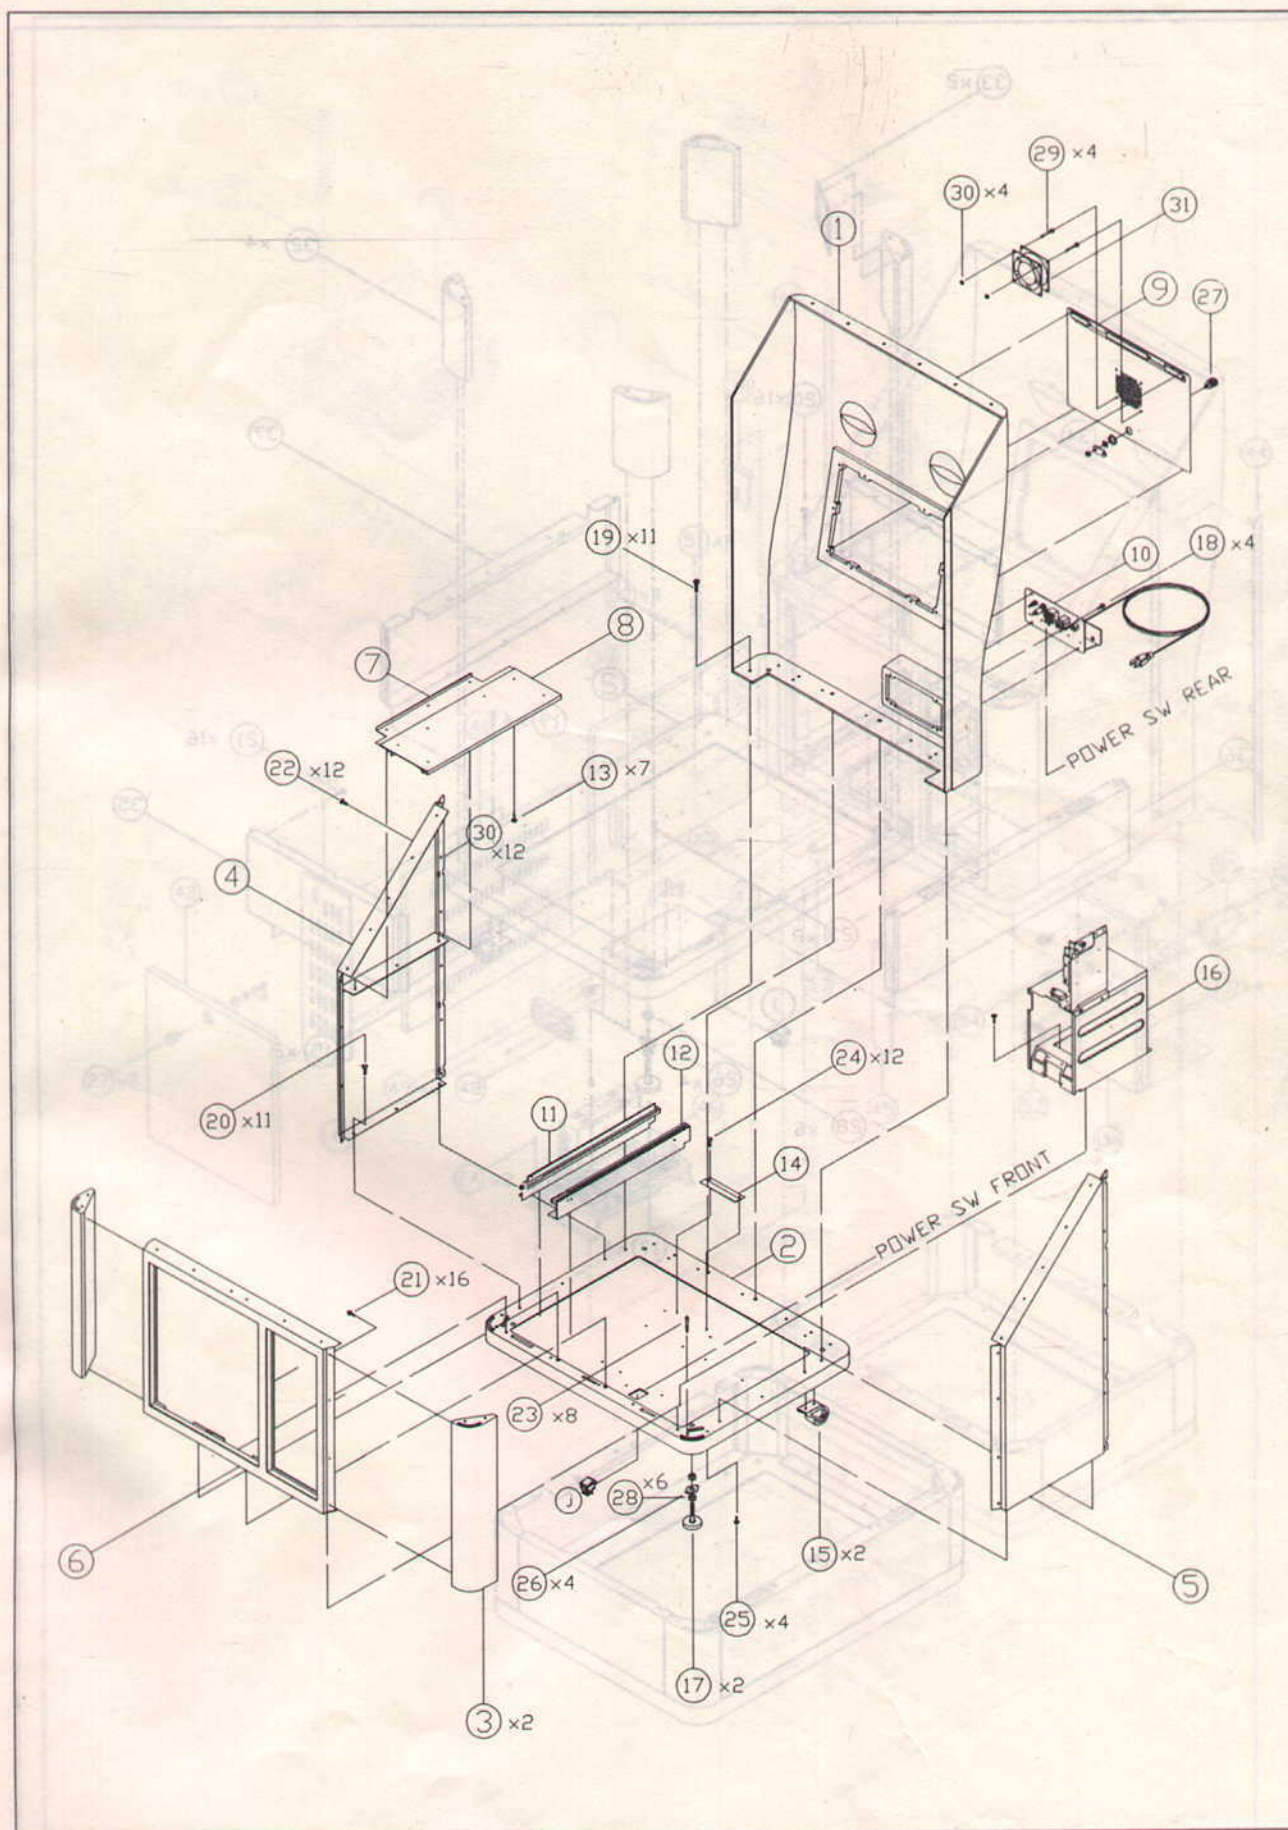


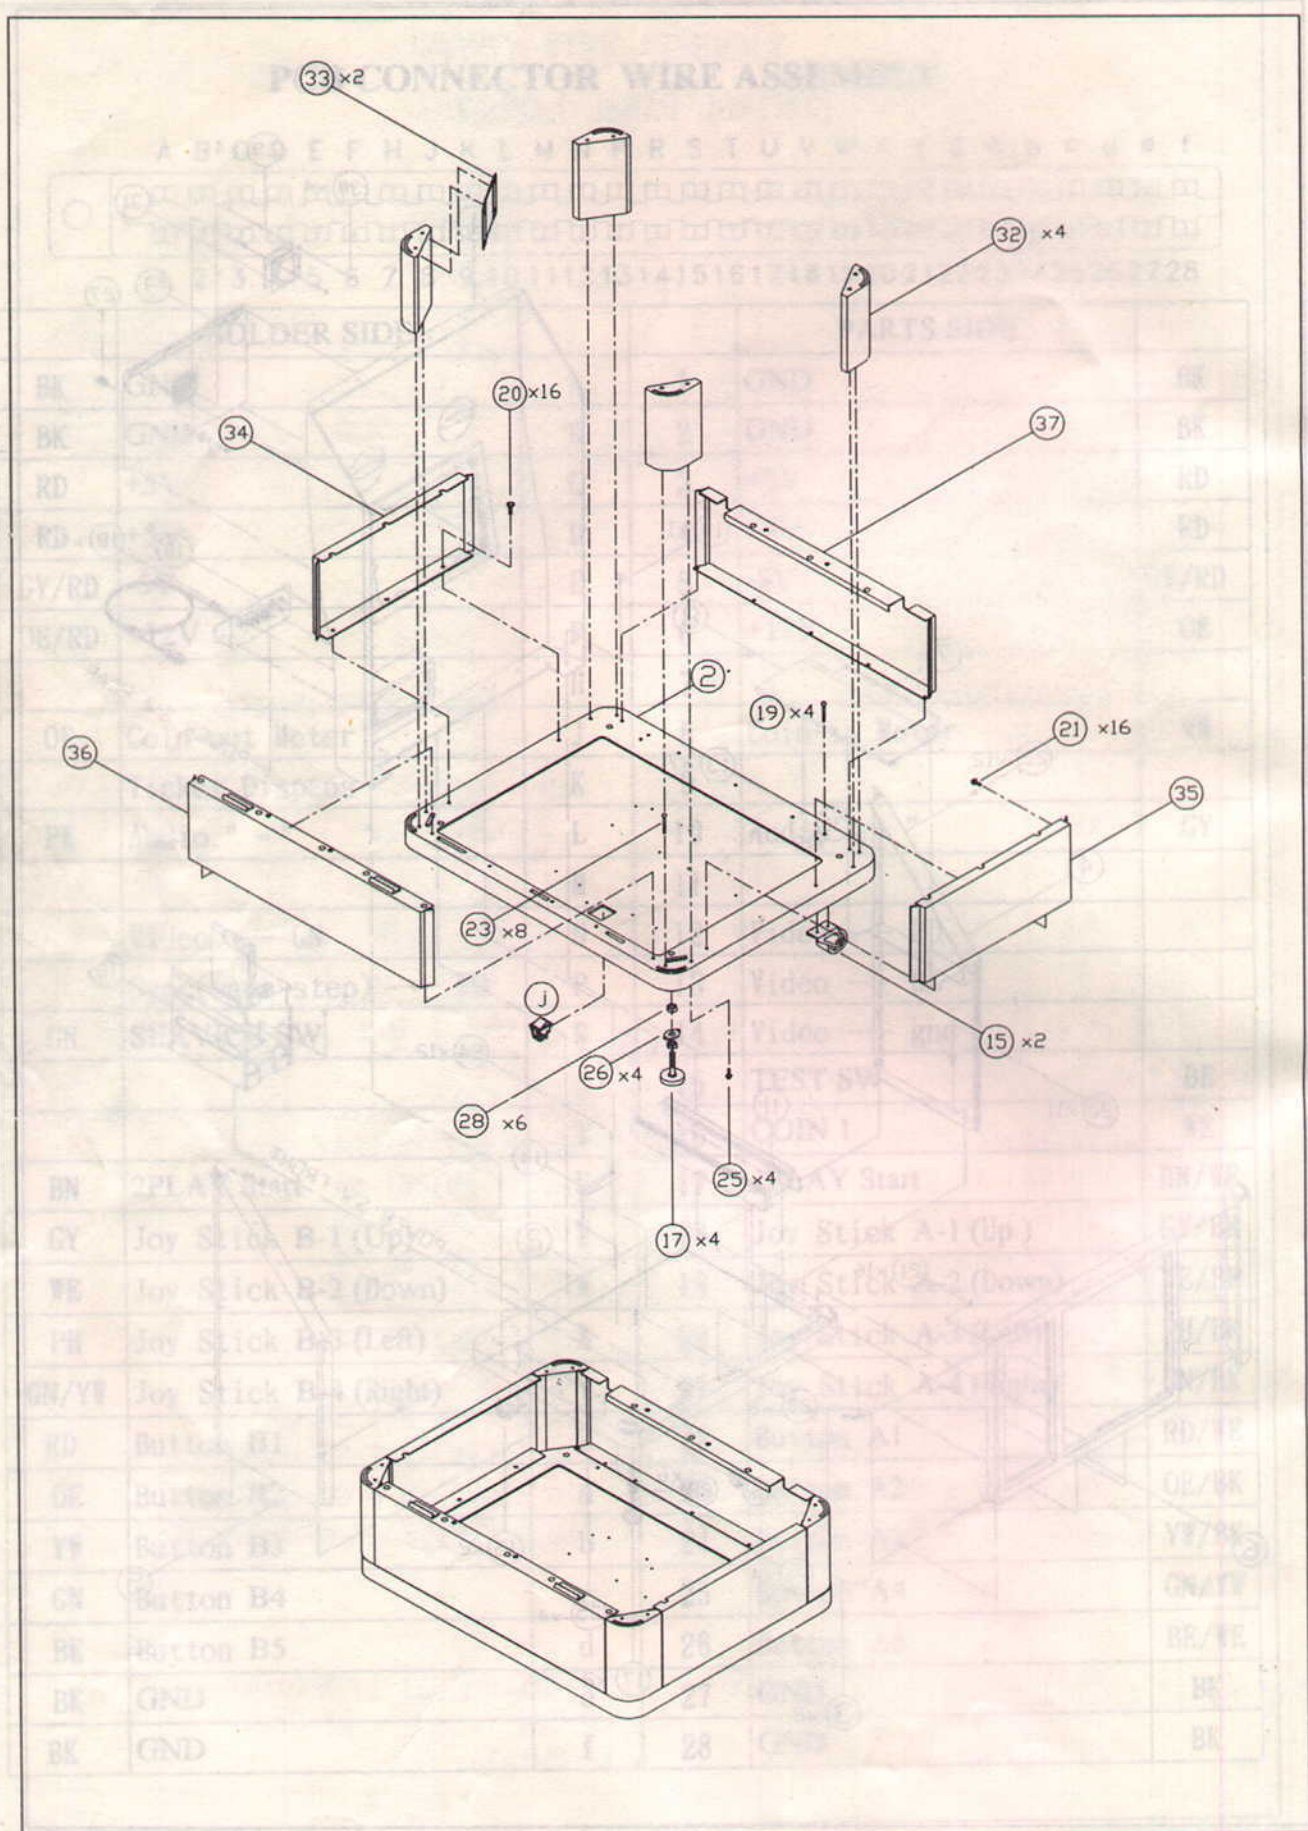


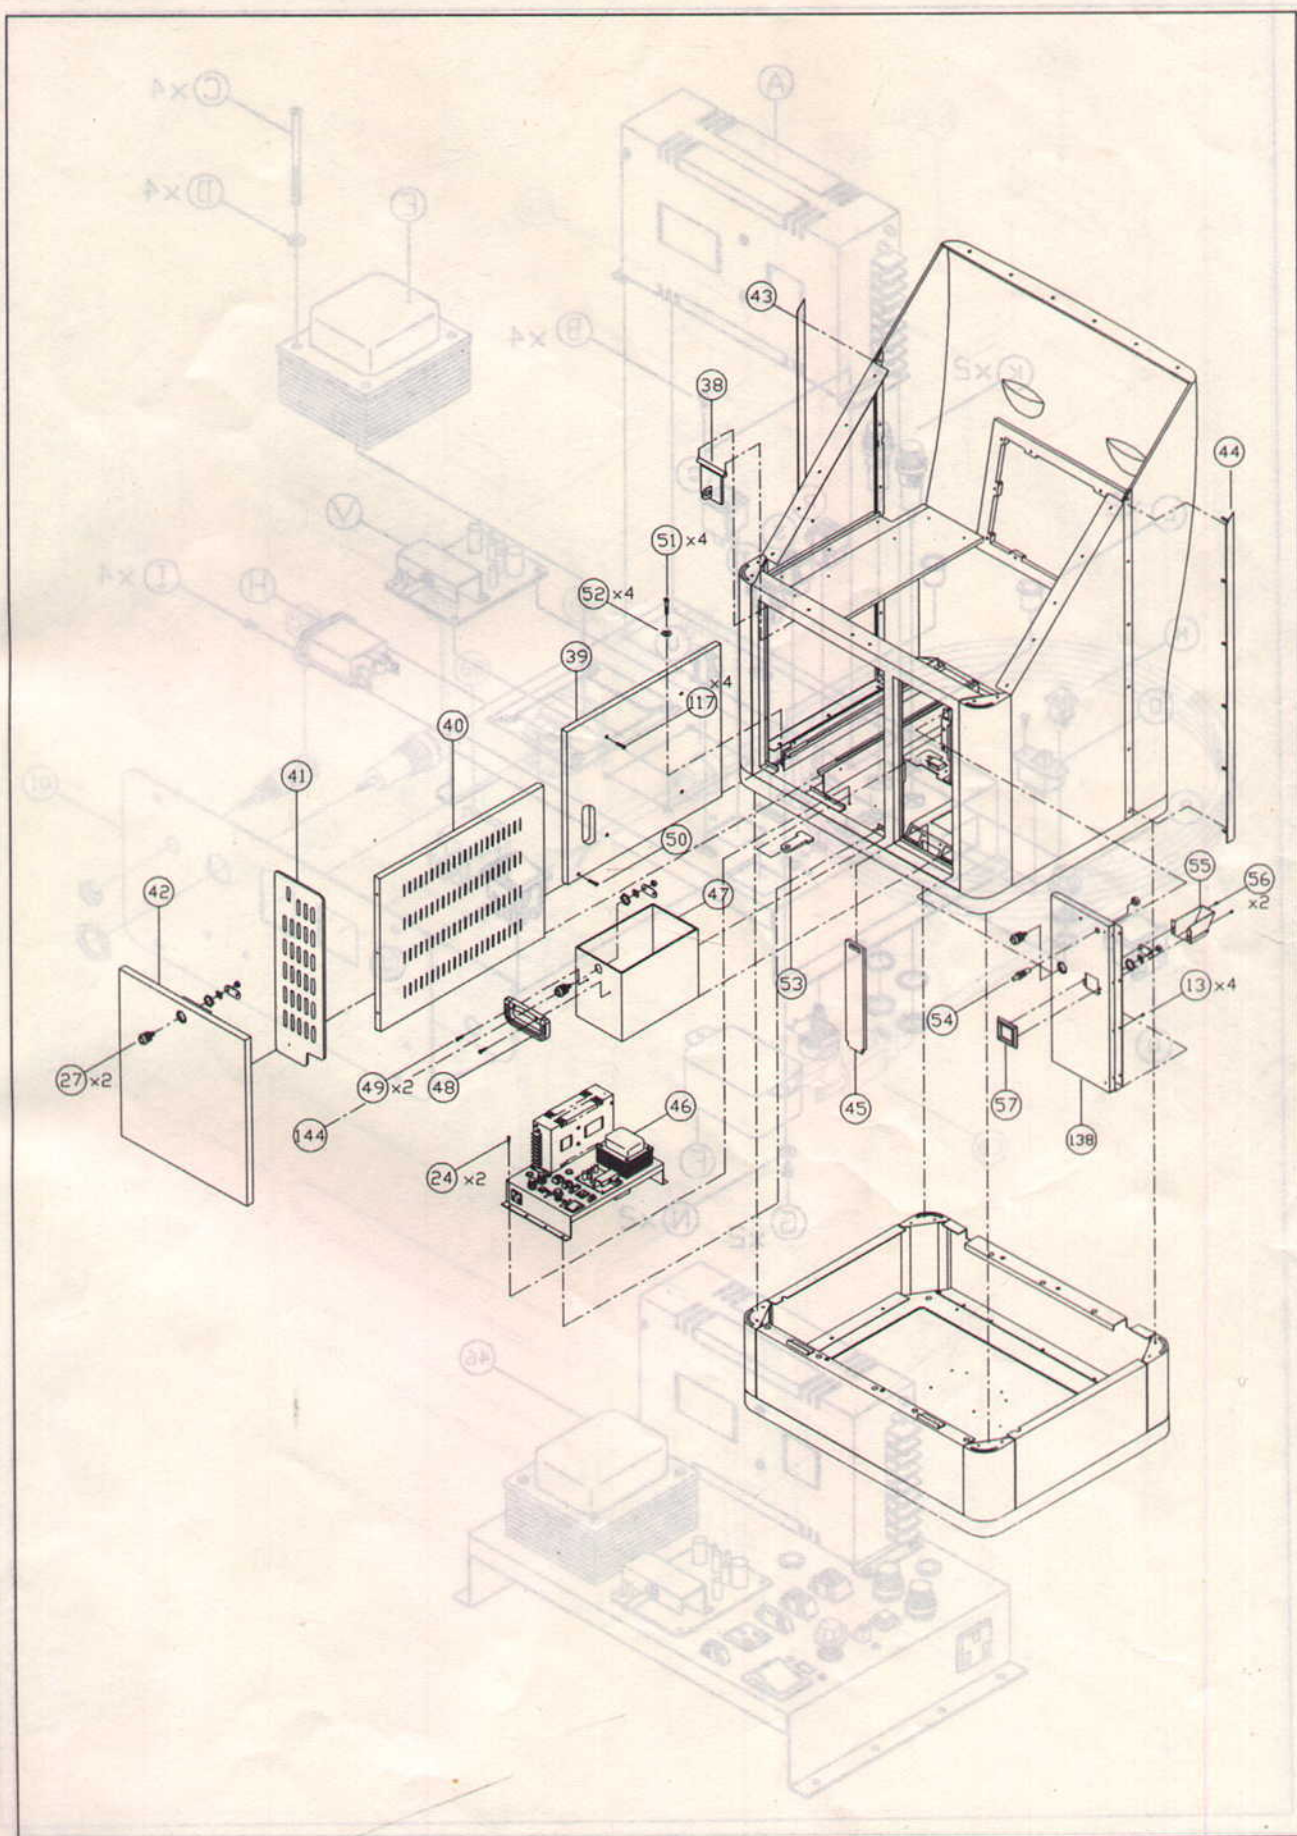


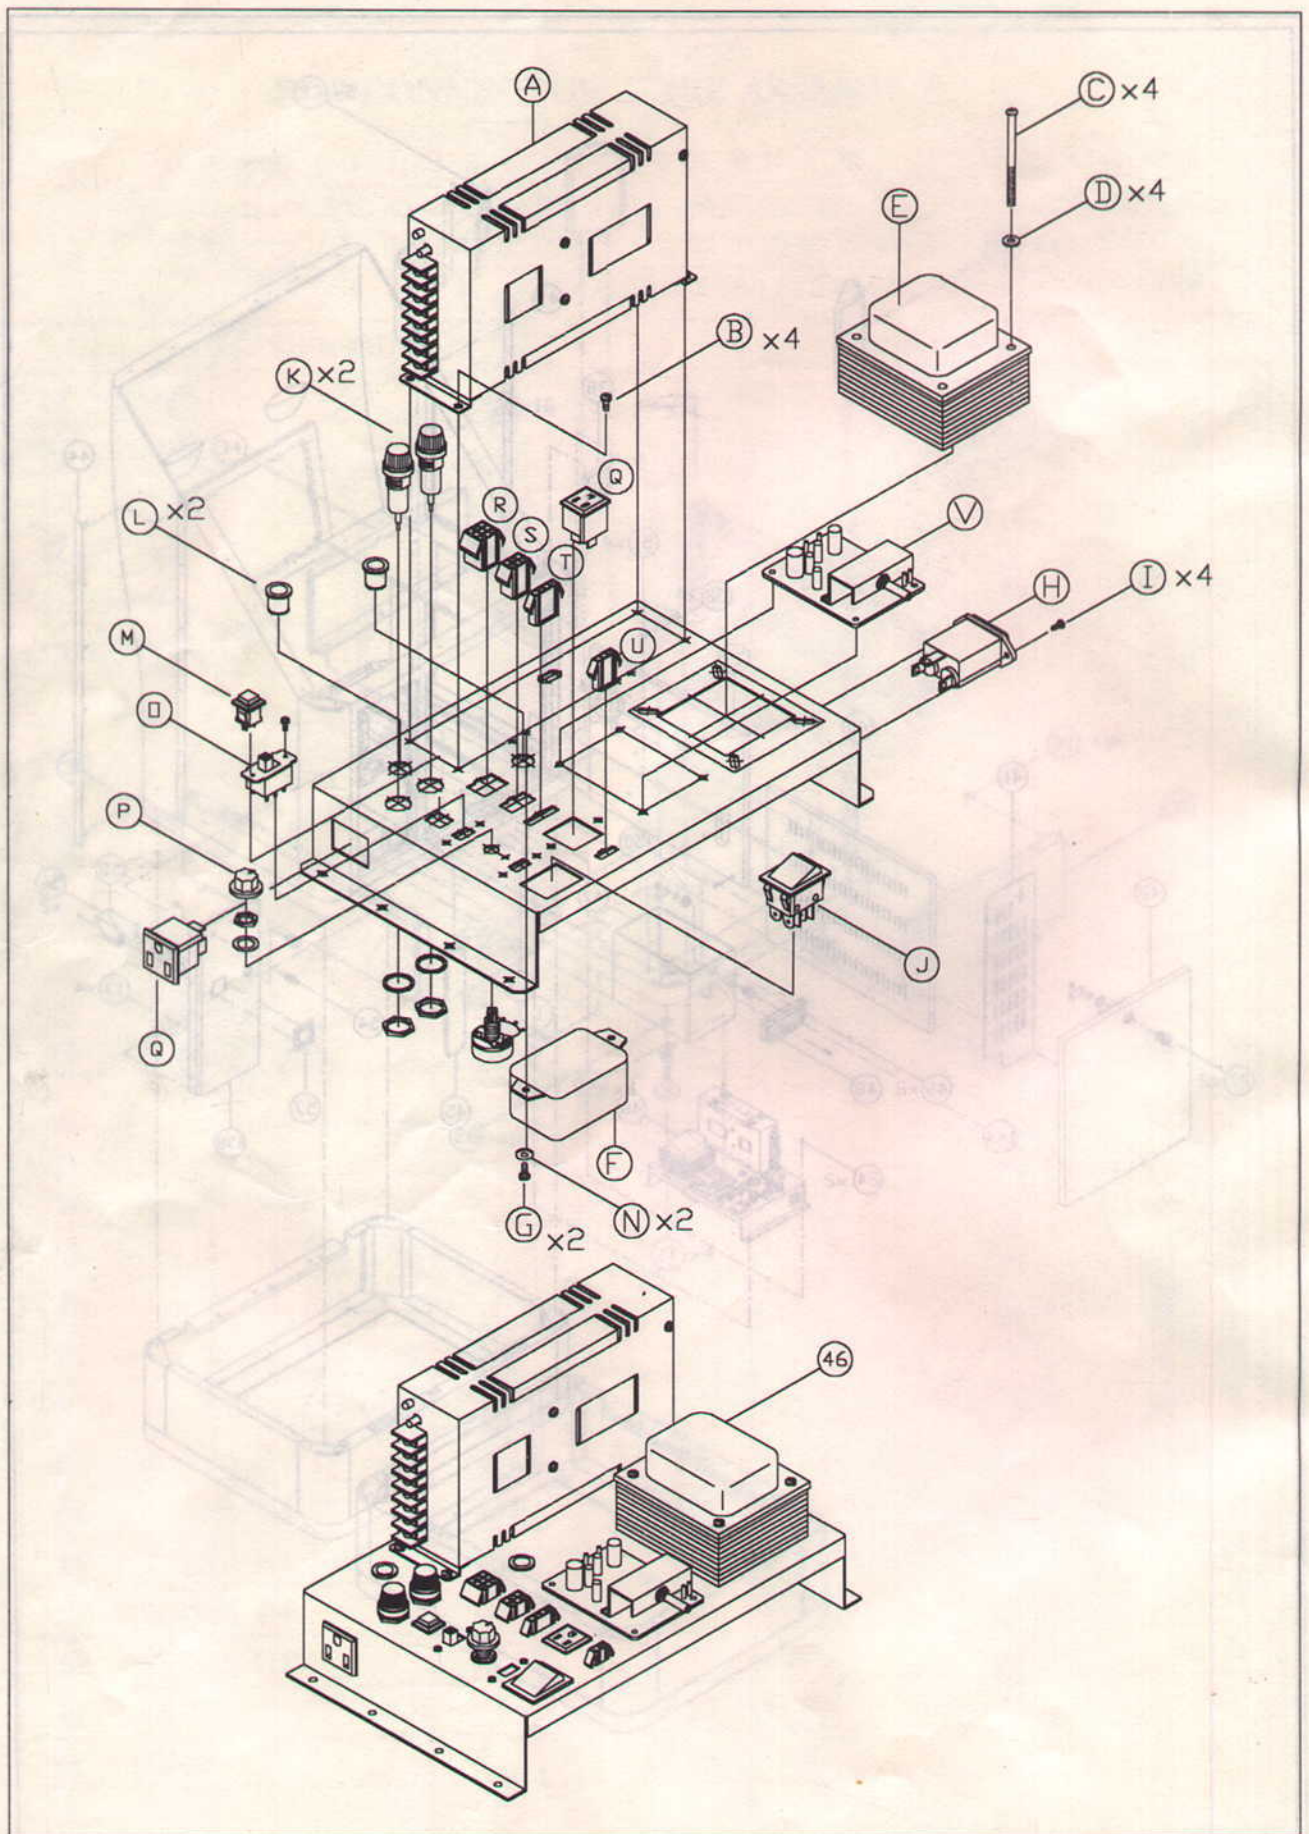

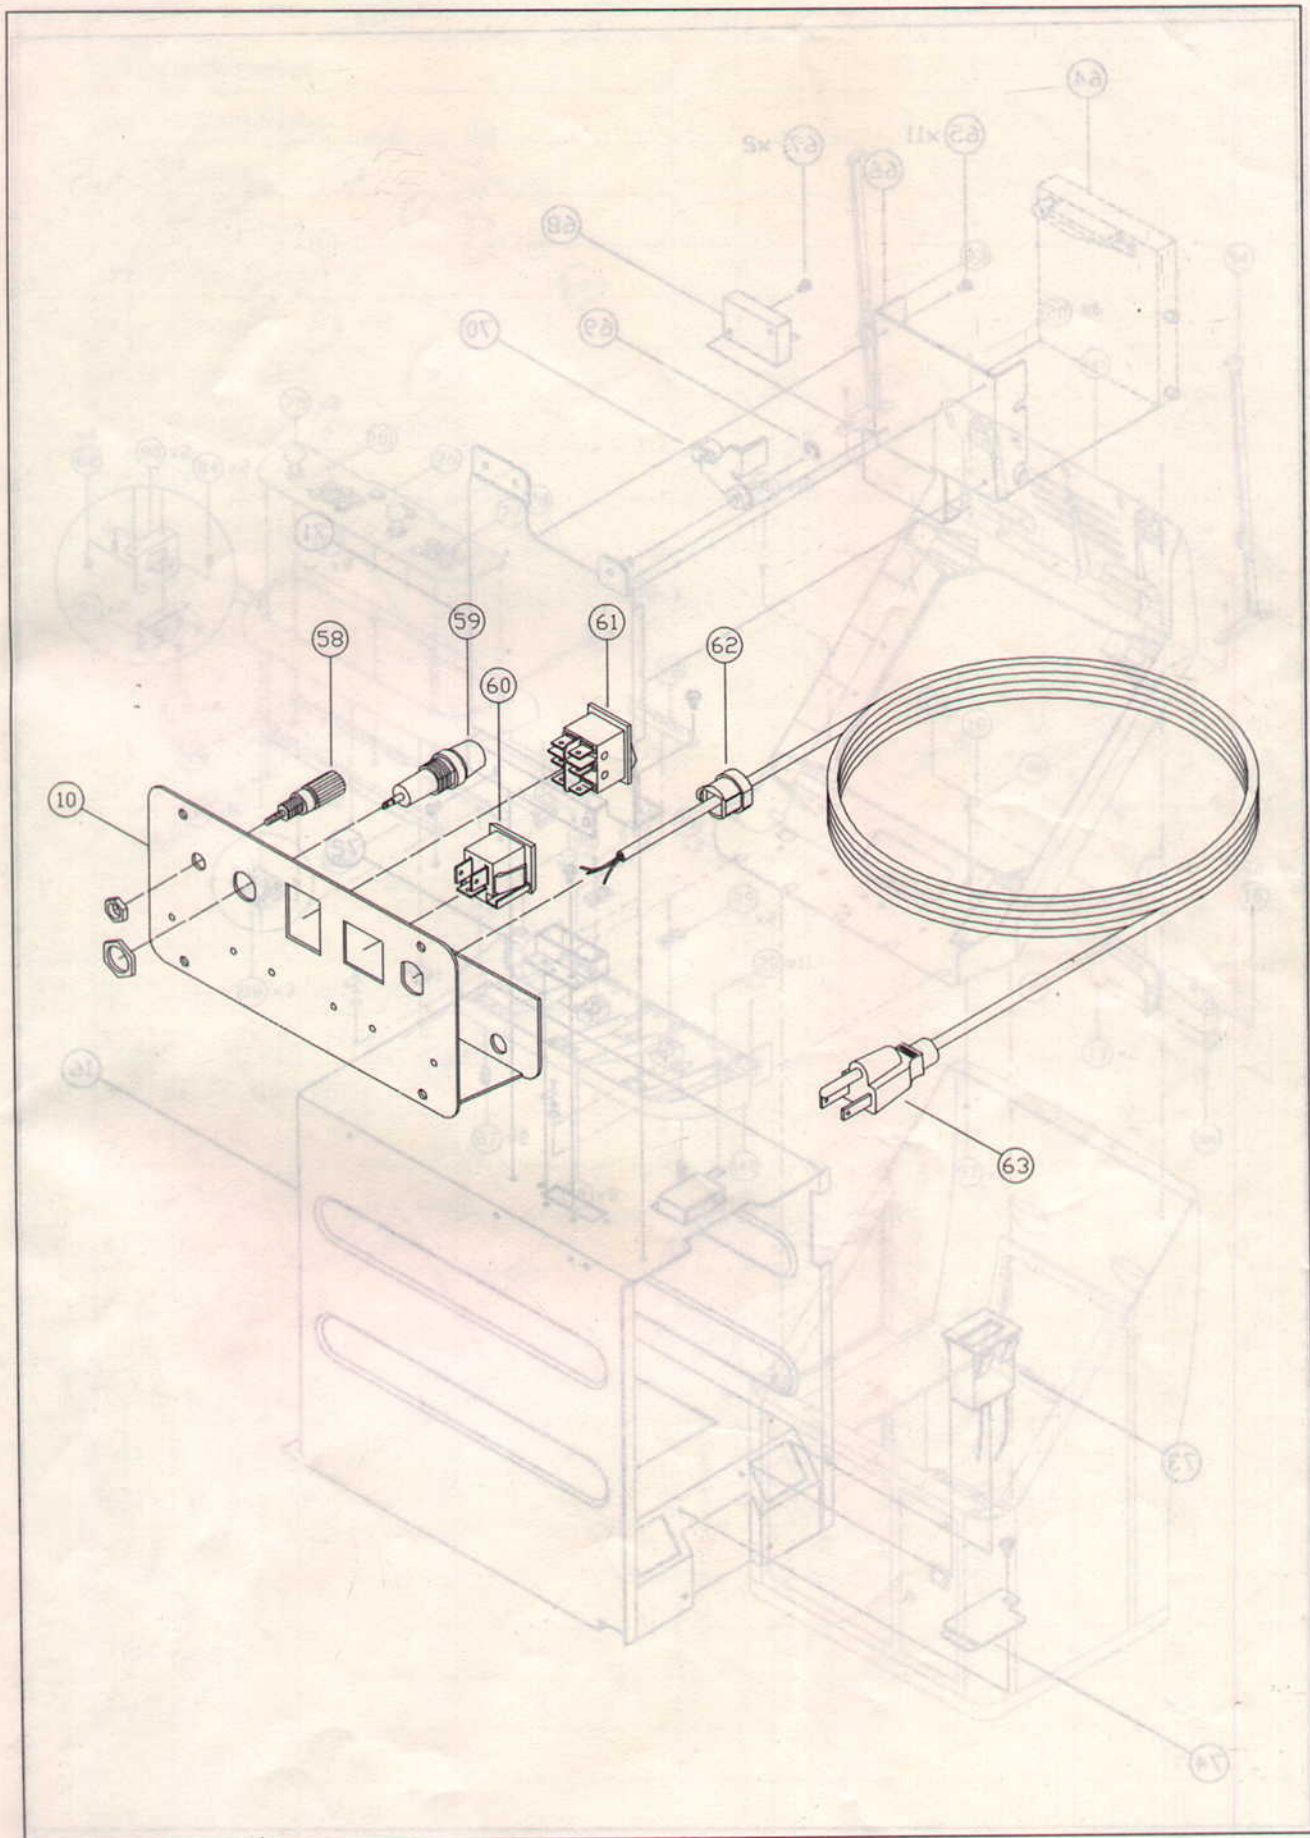

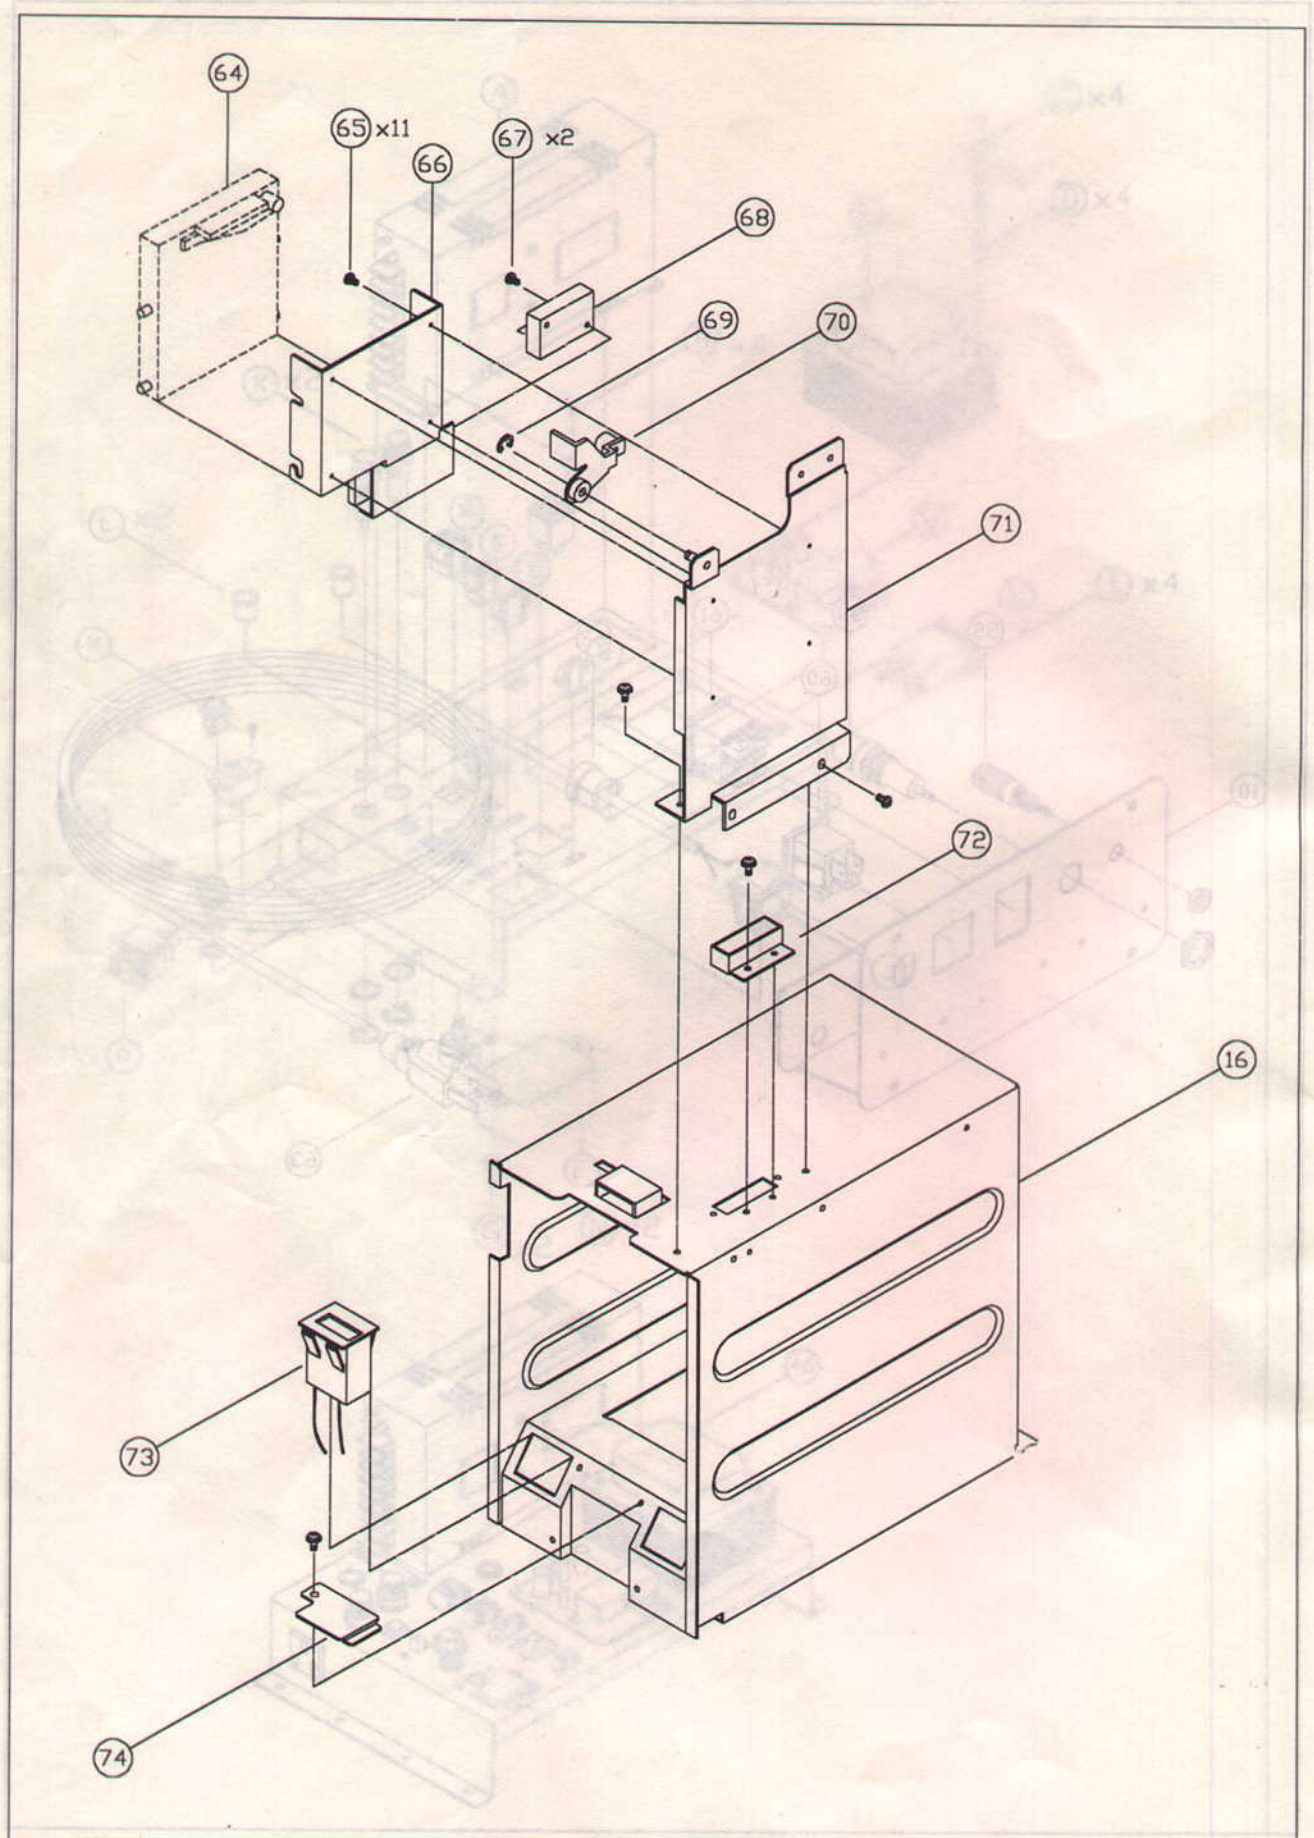

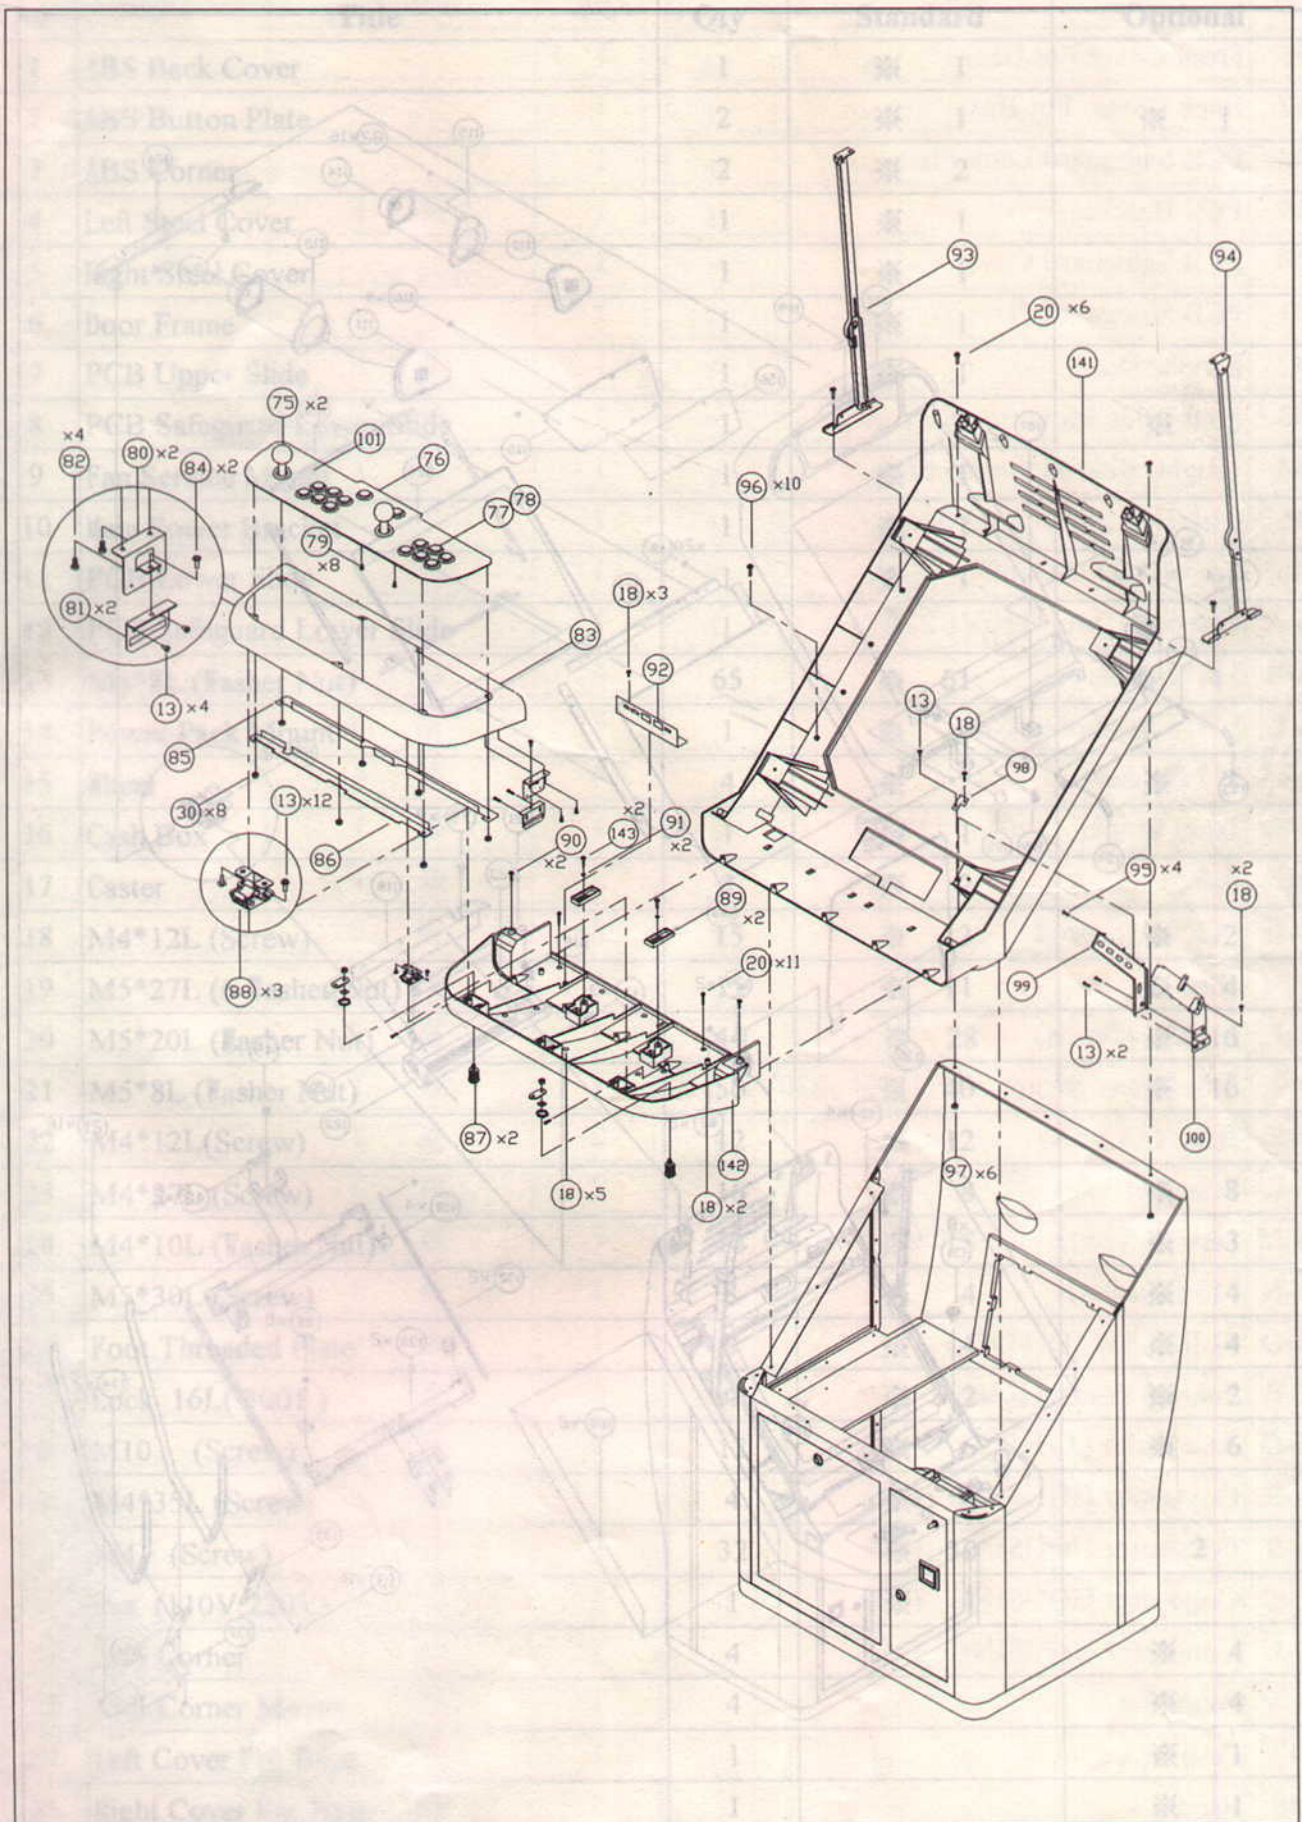

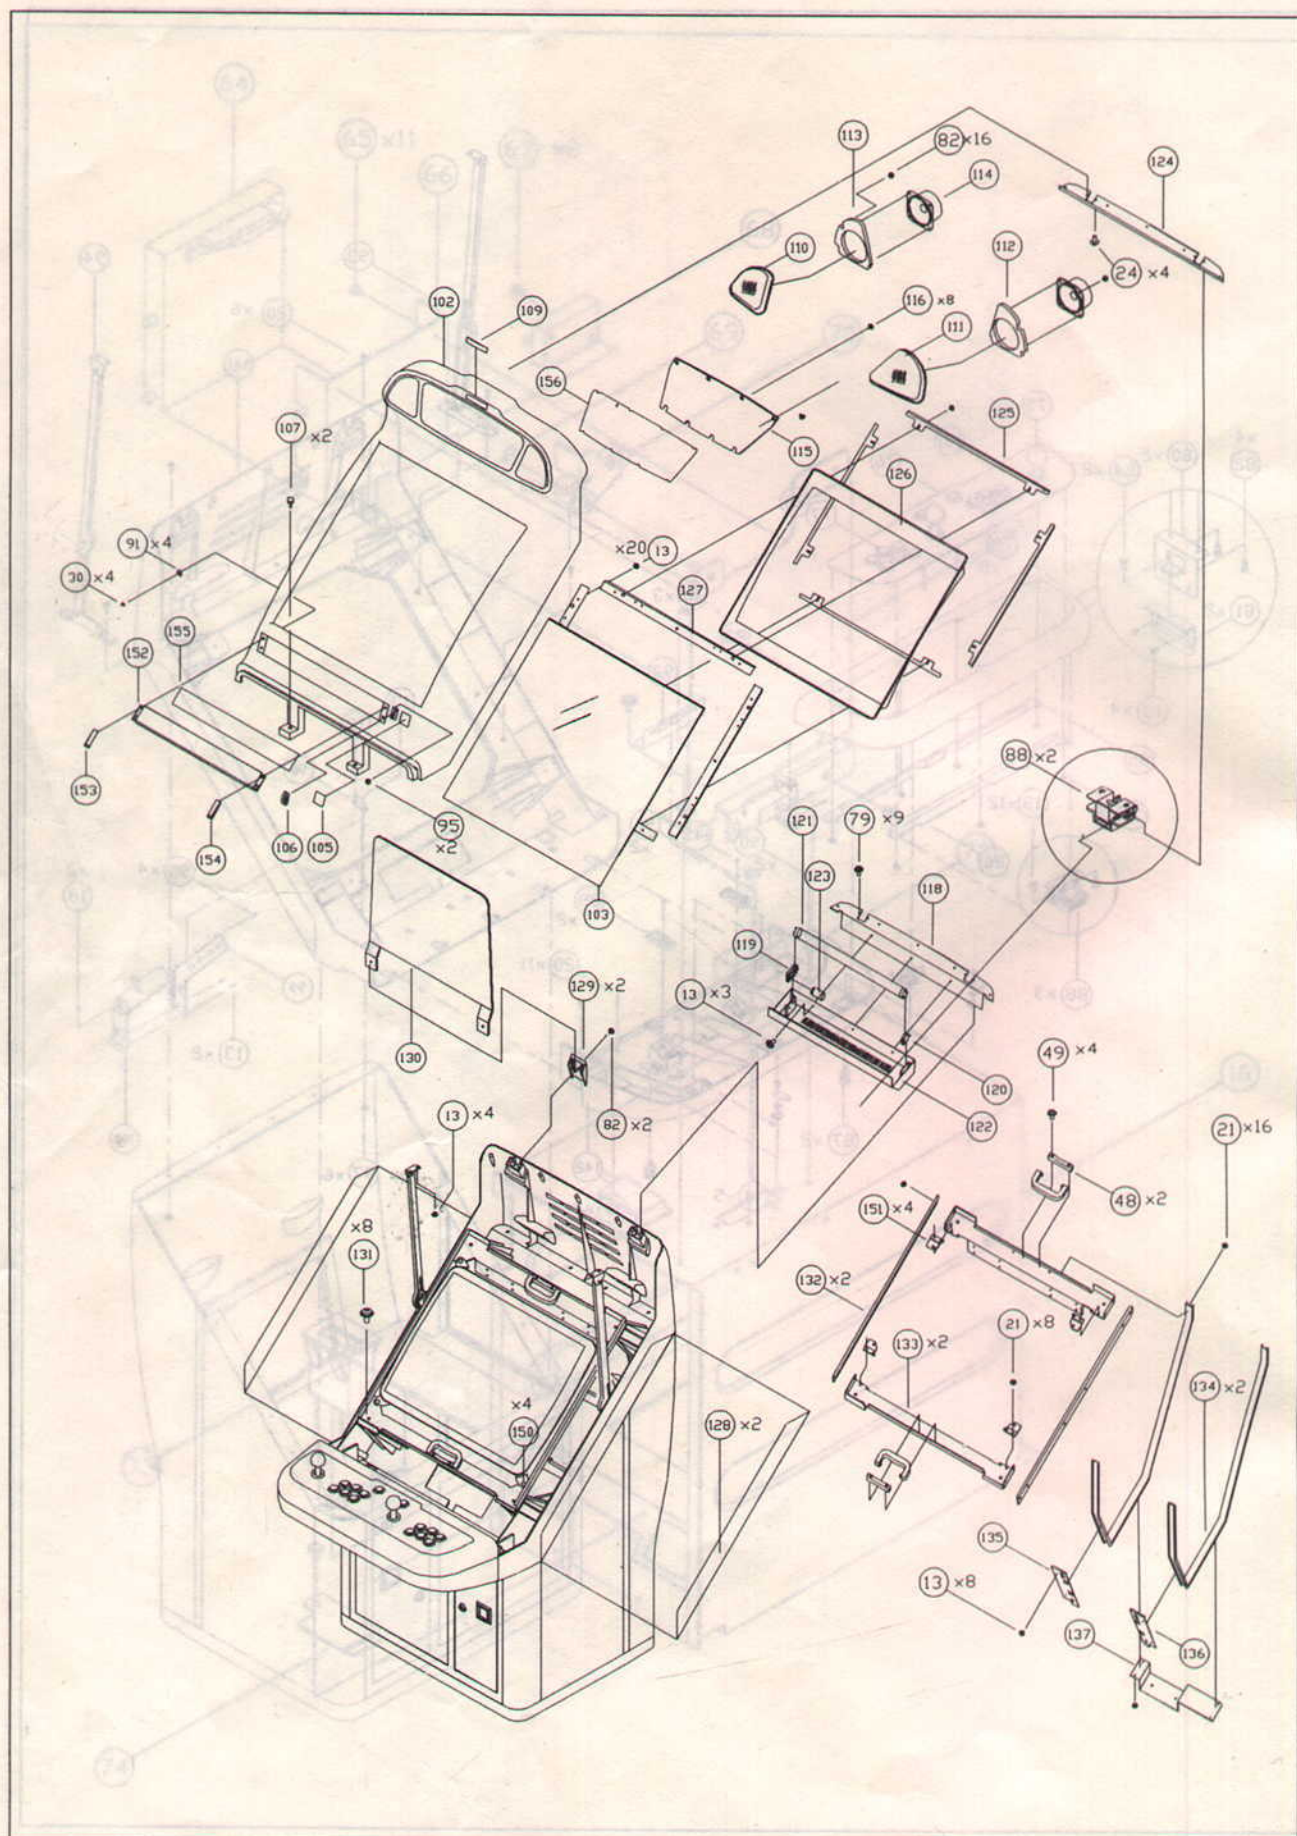


No	Title	Qty	Standard	Optional
1	ABS Back Cover	1	※ 1	
2	ABS Button Plate	2	※ 1	※ 1
3	ABS Corner	2	※ 2	
4	Left Steel Cover	1	※ 1	
5	Right Steel Cover	1	※ 1	
6	Door Frame	1	※ 1	
7	PCB Upper Slide	1	※ 1	
8	PCB Safeguard Lower Slide	1		※ 1
9	Fan Service Mount	1	※ 1	
10	Main Power Bracket	1	※ 1	
11	PCB Lower Slide	1	※ 1	
12	PCB Safeguard Lower Slide	1		※ 1
13	M4*8L (Washer Nut)	65	※ 61	※ 4
14	Power Pack Mount	1	※ 1	
15	Wheel	4	※ 2	※ 2
16	Cash Box	1	※ 1	
17	Caster	2	※ 2	
18	M4*12L (Screw)	15	※ 13	※ 2
19	M5*27L (6-Washer Nut)	15	※ 11	※ 4
20	M5*20L (Washer Nut)	44	※ 28	※ 16
21	M5*8L (Washer Nut)	56	※ 40	※ 16
22	M4*12L(Screw)	12	※ 12	
23	M4*27L (Screw)	16	※ 8	※ 8
24	M4*10L (Washer Nut)	18	※ 15	※ 3
25	M5*30L (Screw)	8	※ 4	※ 4
26	Foot Threaded Plate	8	※ 4	※ 4
27	Lock 16L(3001)	4	※ 2	※ 2
28	M10 (Screw)	12	※ 6	※ 6
29	M4*35L (Screw)	4	※ 4	
30	M4 (Screw)	32	※ 30	2
31	Fan (110V.220V)	1	※ 1	
32	ABS Corner	4		※ 4
33	ABS Corner Mount	4		※ 4
34	Left Cover For Base	1		※ 1
35	Right Cover For Base	1		※ 1

NO	Title	Qty	Included	Options
36	Front Cover For Base	1		※ 1
37	Back Cover For Base	1		※ 1
38	PCB Safeguard Lock Plate	1		※ 1
39	PCB Bracket	1	※ 1	
40	PCB Safeguard Cover	1		※ 1
41	PCB Safeguard Plate	1		※ 1
42	Service Door	1	※ 1	
43	(Left)Side Mounting Strip	1	※ 1	
44	(Right) Side Mounting Strip	1	※ 1	
45	Cash Box Safeguard Plate	1		※ 1
46	Power Pack Assembly	1	※ 1	
46-A	Power Supply (110V . 220V)	1	※ 1	
46-B	M4*8L (Screw)	4	※ 4	
46-C	M4*50L (Washer Nut)	4	※ 4	
46-D	M4 (Washer)	4	※ 4	
46-E	Trans former (110V . 220V)	1	※ 1	
46-F	Ballast	1	※ 1	
46-G	M3*8L (Screw)	2	※ 2	
46-H	Filter	1	※ 1	
46-I	M3*6L (Screw)	4	※ 4	
46-J	Main Power Switch 4P (110V . 220V)	1	※ 1	
46-K	Fuse (3A . 5A)	2	※ 2	
46-L	Grommet	2	※ 2	
46-M	Service Switch (ON/OFF)	1	※ 1	
46-N	M3 (Washer)	2	※ 2	
46-O	SLIDE SW (ON/OFF)	1	※ 1	
46-P	Volume Control Knob	1	※ 1	
46-Q	Aux outlet (3 Hole)	2	※ 2	
46-R	Connector HOUSING (9P)	1	※ 1	
46-S	Connector HOUSING (6P)	1	※ 1	
46-T	Connector HOUSING (4P)	1	※ 1	
46-U	Connector HOUSING (3P)	1	※ 1	
46-V	Amplifier	1	※ 1	
47	Cash Box	1	※ 1	
48	Handle	3	※ 3	

No	Title	Qty	Included	Options
49	M4*12L (Screw)	6	※ 6	
50	M4*25L (Screw)	1	※ 1	
51	M8*60L (Washer Nut)	4	※ 4	
52	M8 (Washer)	4	※ 4	
53	Cash Box Safeguard Lock Plate	1	※ 1	
54	Reject Pin	1	※ 1	
55	Reject Cup	1	※ 1	
56	M3*6L (Washer Nut)	2	※ 2	
57	Reject Cup Cover	1	※ 1	
58	GND Conn Plug	1	※ 1	
59	Fuse Holder (3A)	1	※ 1	
60	Aux Outlet (3 Hole)	1	※ 1	
61	Main Power Switch 4P (110V.220V)	1	※ 1	
62	Grommet SR-6R1	1	※ 1	
63	Power Cord (3 Hole)	1	※ 1	
64	Coin Mech	1	※ 1	
65	M4*6L (Washer Nut)	11	※ 11	
66	Coin Mech Bracket	1	※ 1	
67	M3*20L (Flat Head Screw)	2	※ 2	
68	Micro Switch	1	※ 1	
69	E Clip(3mm)	1	※ 1	
70	Reject Lever	1	※ 1	
71	Coin Mech Bracket Mount Plate	1	※ 1	
72	Cash Box Enclosure Entry	1	※ 1	
73	Counter	1	※ 1	
74	Counter Cover	1	※ 1	
75	Joy Stick	2	※ 2	
76	Control Panel (3 . 4 . 6. Hole)	1	※ 1	
77	Button		※	
78	Button Cap		※	
79	M4*12L (Washer Nut)	26	※ 24	2
80	Lock Plate Mount	2	※ 2	
81	Lock Plate	2	※ 2	
82	M4*15L (Screw)	22	※ 22	
83	Control Panel Frame	1	※ 1	


No	Title	Qty	Included	Options
84	M4*20L (Screw)	2	※ 2	
85	Control Panel Support (Front)	1	※ 1	
86	Control Panel Support (Rear)	1	※ 1	
87	Lock 25L (2804)	2	※ 2	
88	Hinge	5	※ 5	
89	Lock Clip	2	※ 2	
90	M5*30L (Screw)	2	※ 2	
91	M4 (Washer)	6	※ 6	
92	Connector Bracket	1	※ 1	
93	Top Support Bracket(Left)	1	※ 1	
94	Top Support Bracket(Right)	1	※ 1	
95	M3*8L (Washer Nut)	6	※ 6	
96	M5*25L (Washer Nut)	10	※ 10	
97	M5 (Screw Nut)	8	※ 6	2
98	Adjustable Slide Plate	1	※ 1	
99	Slide Upper Plate	1	※ 1	
100	Slide Lower Plate	1	※ 1	
101	Control Panel Sticker	1	※ 1	
102	ABS Top Cover	1	※ 1	
103	Monitor Glass	1	※ 1	
105	Coin Entry Sticker	1	※ 1	
106	Coin Entry	1	※ 1	
107	M5*10L (Washer Nut)	2	※ 2	
109	Title Sticker	1	※ 1	
110	Speaker Grill (Left)	1	※ 1	
111	Speaker Grill (Right)	1	※ 1	
112	Speaker Frame(Lfet)	1	※ 1	
113	Speaker Frame(Right)	1	※ 1	
114	Speaker(8 om 25W)	2	※ 2	
115	Acrylic Logo Sign	1	※ 1	
116	M4*10L (Screw)	8	※ 8	
117	M3*20L(Washer Nut)	4		4
118	Top Cover Hinge Support	1	※ 1	
119	Fluorescent Socket With Starter Bracket	1	※ 1	
120	Fluorescent Socket (Right)	1	※ 1	

No	Title	Qty	Included	Options
121	Fluorescent (15W)	1	※ 1	※ 1
122	Fluorescent Cover	1	※ 1	※ 1
123	Fluorescent Starter (FS-1P)	1	※ 1	※ 1
124	Top Cover Hinge Support	1	※ 1	※ 1
125	Bezel Frame Strip	4	※ 4	※ 4
126	Monitor Bezel	1	※ 1	※ 1
126A	Bezel (thin)28"			
126B	Bezel (thick)28"			
126C	Bezel (thick)29"			
126D	Bezel (thin)29"			
127	Glass Frame Strip	4	※ 4	
128	Side Sticker	2	※ 2	
129	Sign Board Mountingstrip	2	※ 2	
130	Sign Board For Game	1	※ 1	
131	M6*12L (6-Washer Nut)	12	※ 8	4
132	TV Frame-side Strip	2	※ 2	
133	TV Frame (28" . 29")	2	※ 2	
134	Tube Support Bracket	2	※ 2	
135	TV Chassis Bracket (Left)	1	※ 1	
136	TV Chassis Bracket (Right)	1	※ 1	
137	Tube Protection Cover	1	※ 1	
138	Cash Box Door	1	※ 1	
140	M5 Washer	15	※ 15	
141	Monitor Mounting Bracket	1	※ 1	
142	Control Panel base	1	※ 1	
143	M4*20L Screw	1	※ 1	
144	16L(3003) Lock	1	※ 1	
145	Sponge(5*8*528 5*8*403)	4	※ 4	
146	Monitor (28吋 29吋)	1		※ 1
147	Monitor Chassis	1		※ 1
148	Harness (ground wire included)	1		※ 1
149	Ashtray	2		※ 2
150	M6*L18(Washer)	8	※ 4	4
151A	Monitor Bracket (Orion 29")	4		※ 4
151B	Monitor Bracket(Pentranic 29")	4		※ 4

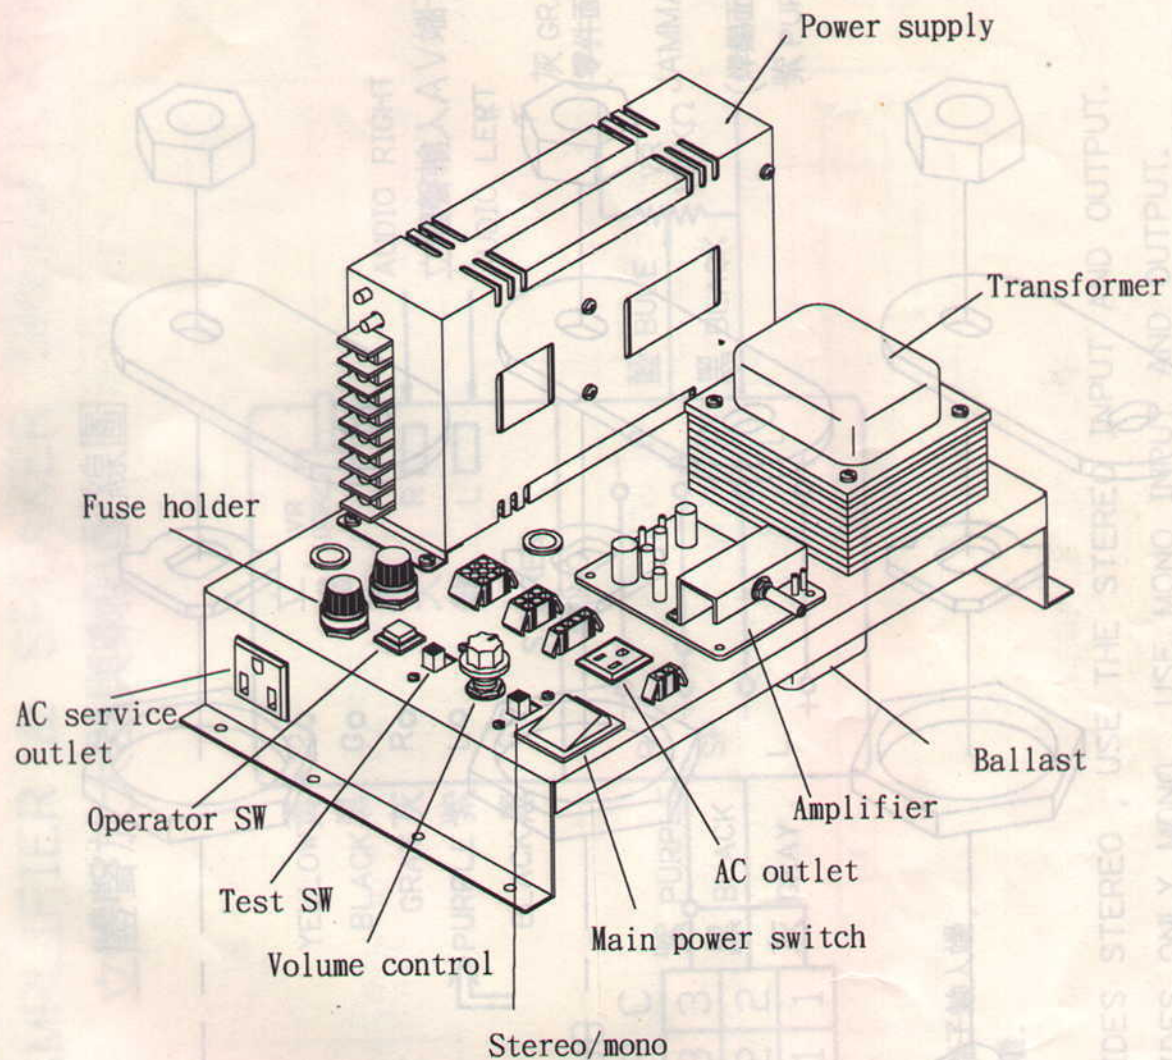


The "OK Baby" cabinet is equipped with it's own mono/stereo amplifier.

Please keep the volume of the output of the main board below 10W and adjust to volume to the desired level by the amplifier on the power supply.

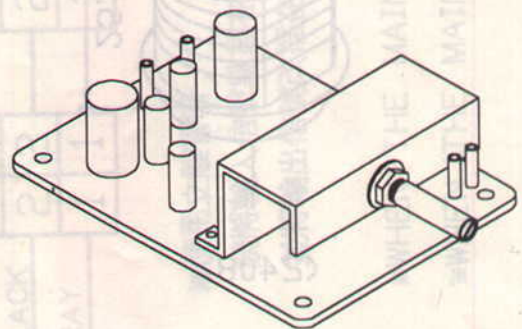

No.	Title	Qty	Included	Options
151C	Monitor Bracket (Pentranic 28")			※ 4
151D	Monitor Bracket (Pentranic 28")			※ 4
151E	Monitor Bracket (Pentranic 28")			※ 4
152	Sign Board			
153	Sign Board Mounting Bracket			
154	Sign Board Mounting Bracket			
155	Sign Board Base Plate			
156	FILE PC Sign Board			


梅花筒鎖規格圖
LOCK ASSEMBLY

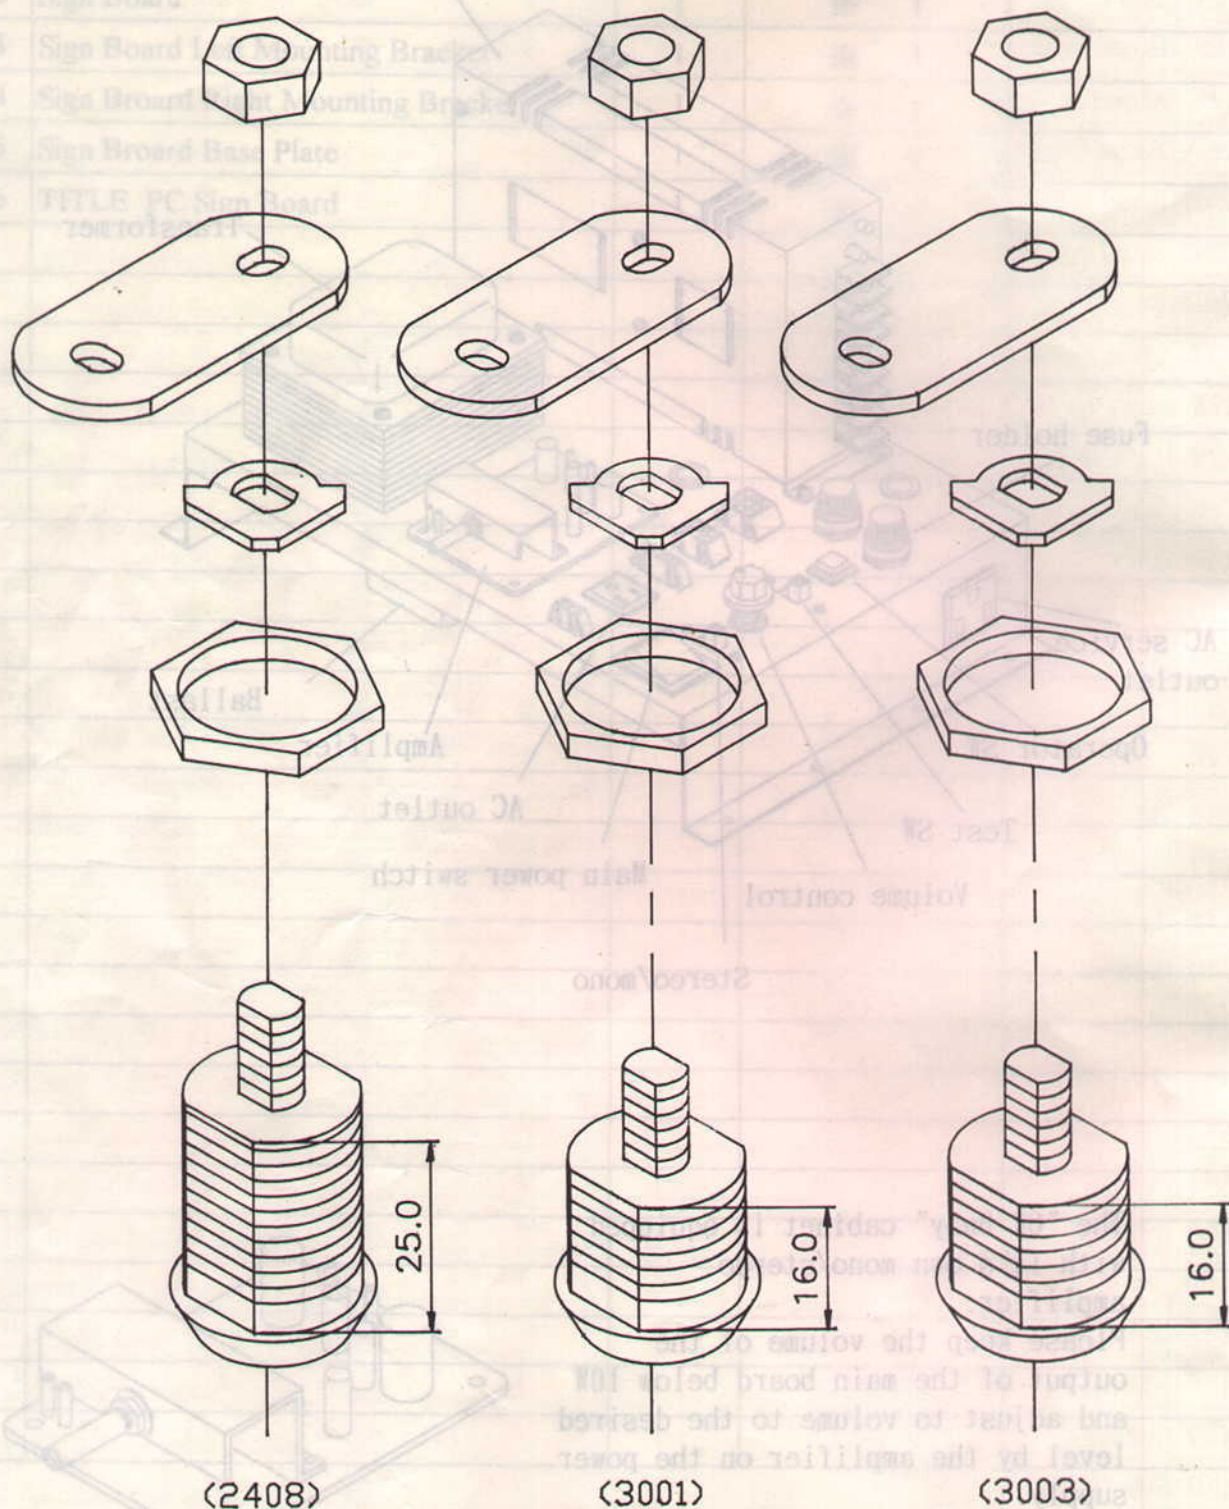

零件編號: DKBABY4

STEREO AMPLIFIER & SPEAKER SPECIFICATION

立體聲放大器與喇叭配線圖

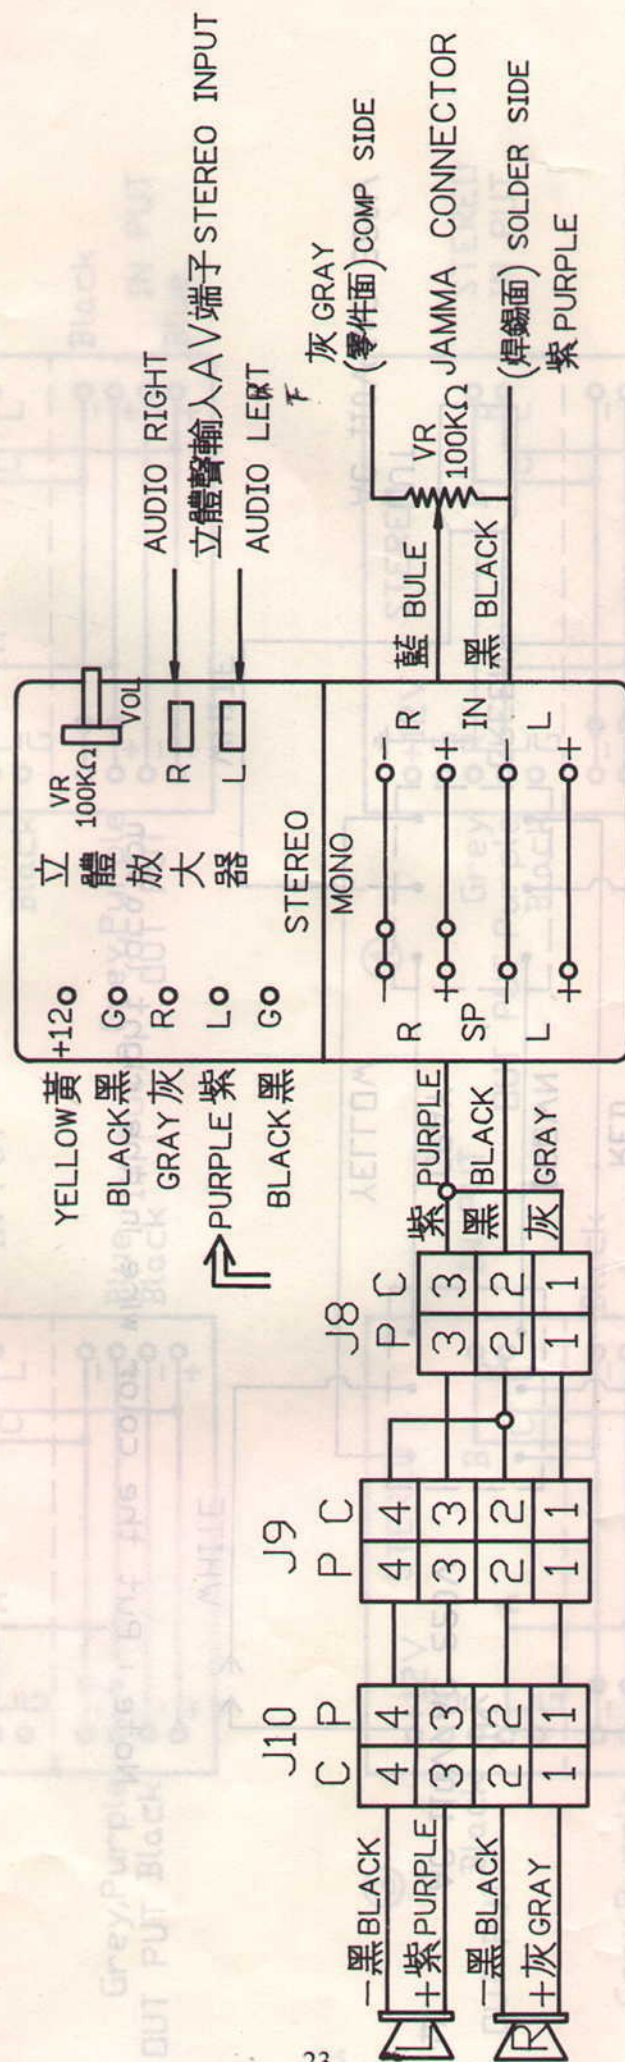

*使用立體聲時，
請將輸入信號線插在立體放大器A/V端子輸入端，
並將輸出信號改插在立體放大器輸出端。

*WHEN THE MAIN PCB PROVIDES STEREO, USE THE STEREO INPUT AND OUTPUT.


*WHEN THE MAIN PCB PROVIDES ONLY MONO , USE MONO INPUT AND OUTPUT.

零件編號 OKBABY2
比例 2 : 3

DOUBLE POWER SW HARNESS DRAWING

POWER SW FRONT

POWER SW REAR

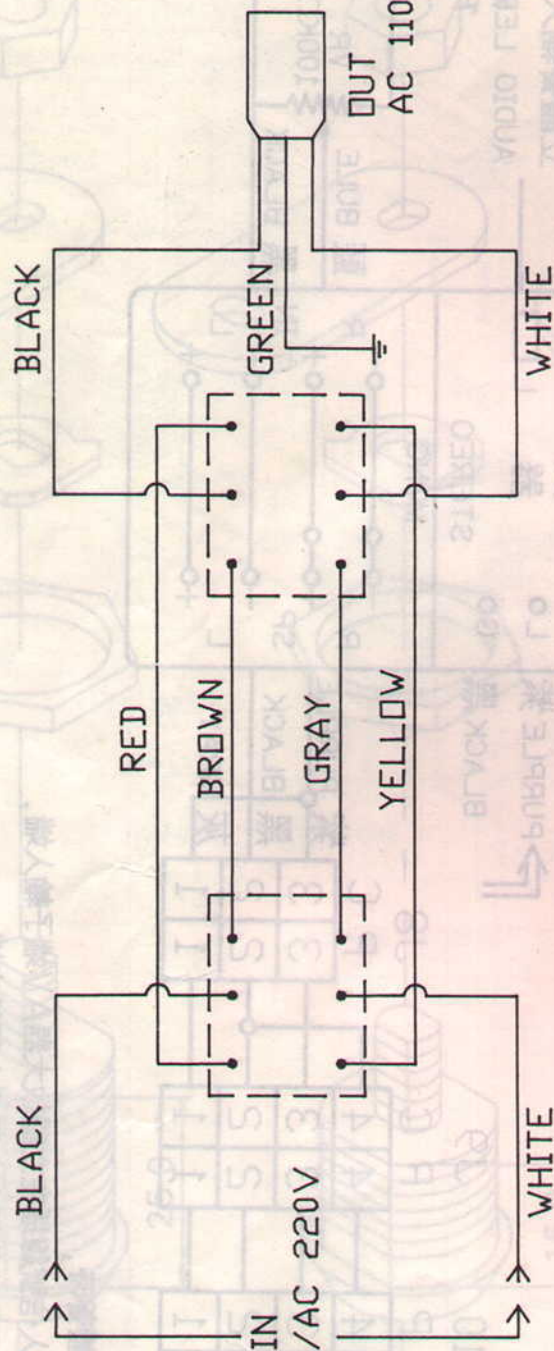



Note : Put the color wire in the right location

零件編號 OKBABY1


比例 1 : 1

NOTIFICATION


STEREO AMPLIFIER & SPEAKER SPECIFICATION

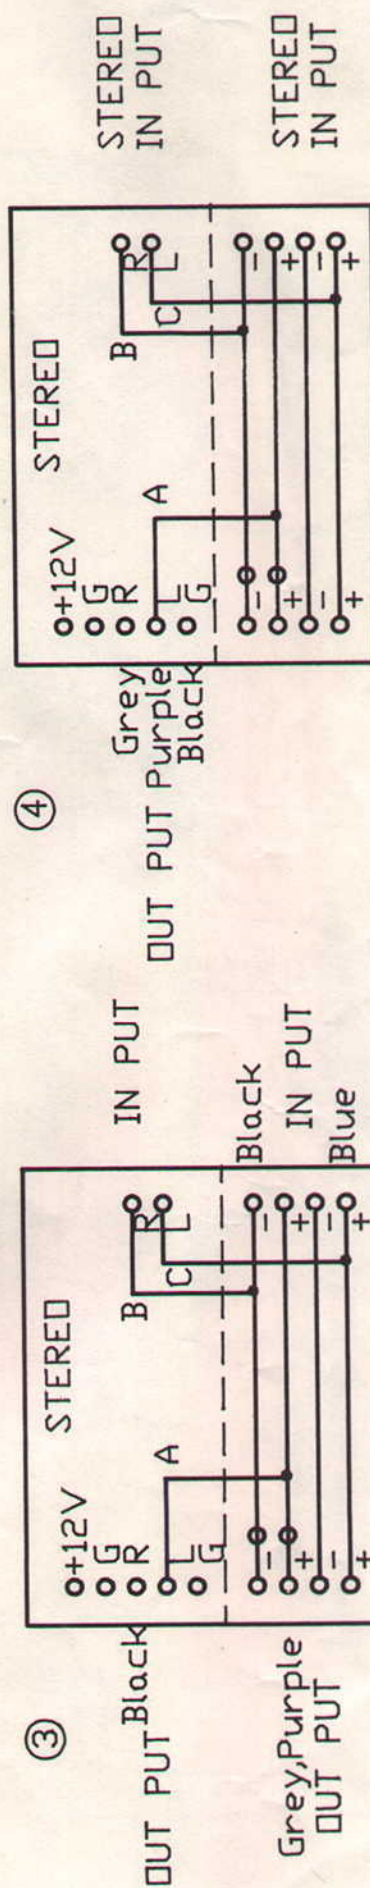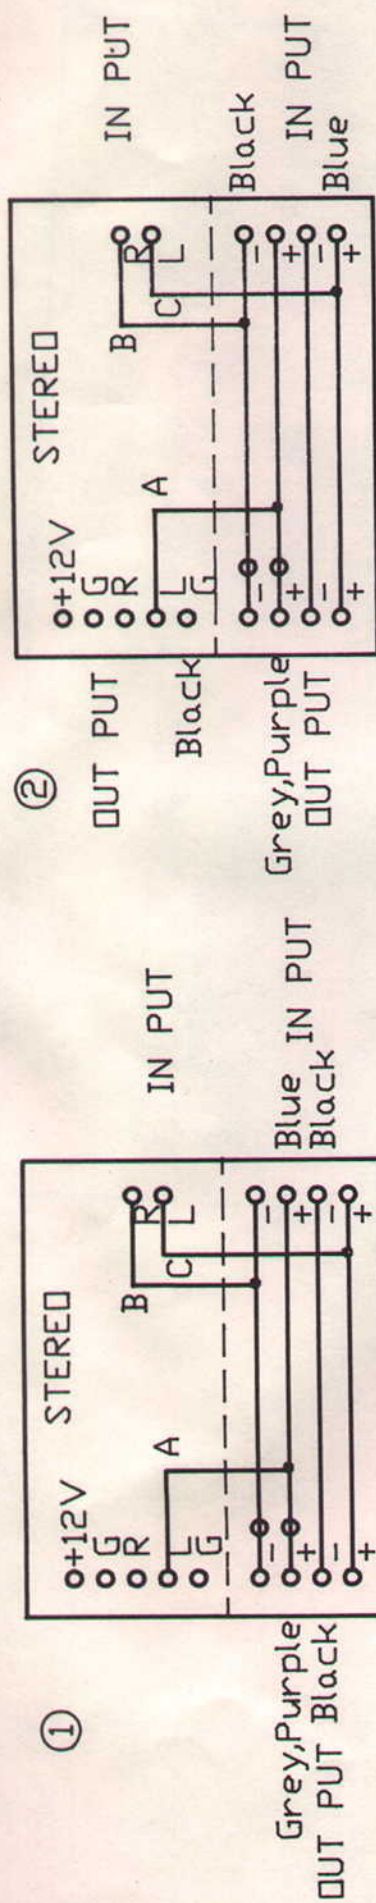

③

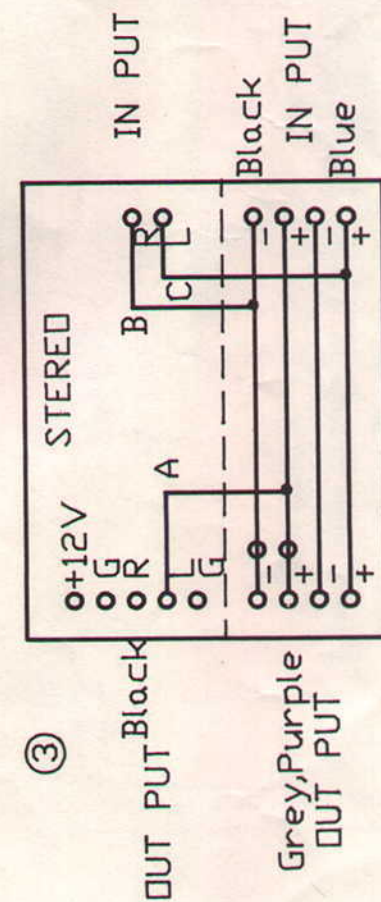


④

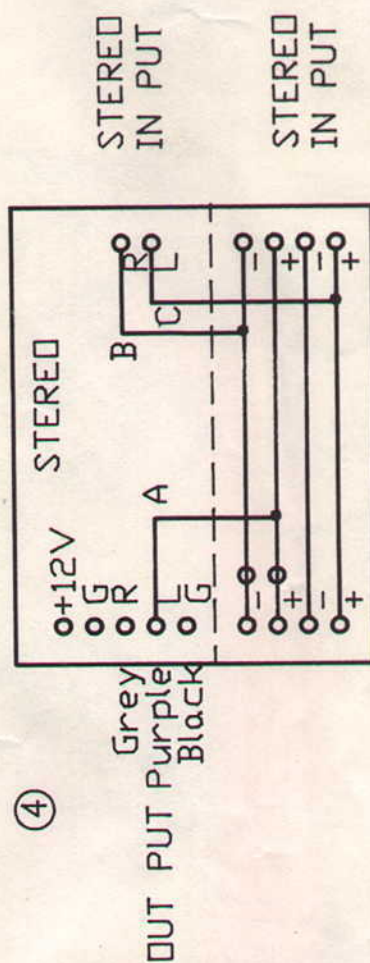

零件編號: EKBABY3

OK BABY 綜合配線圖
TOTAL HARNESS DRAWING

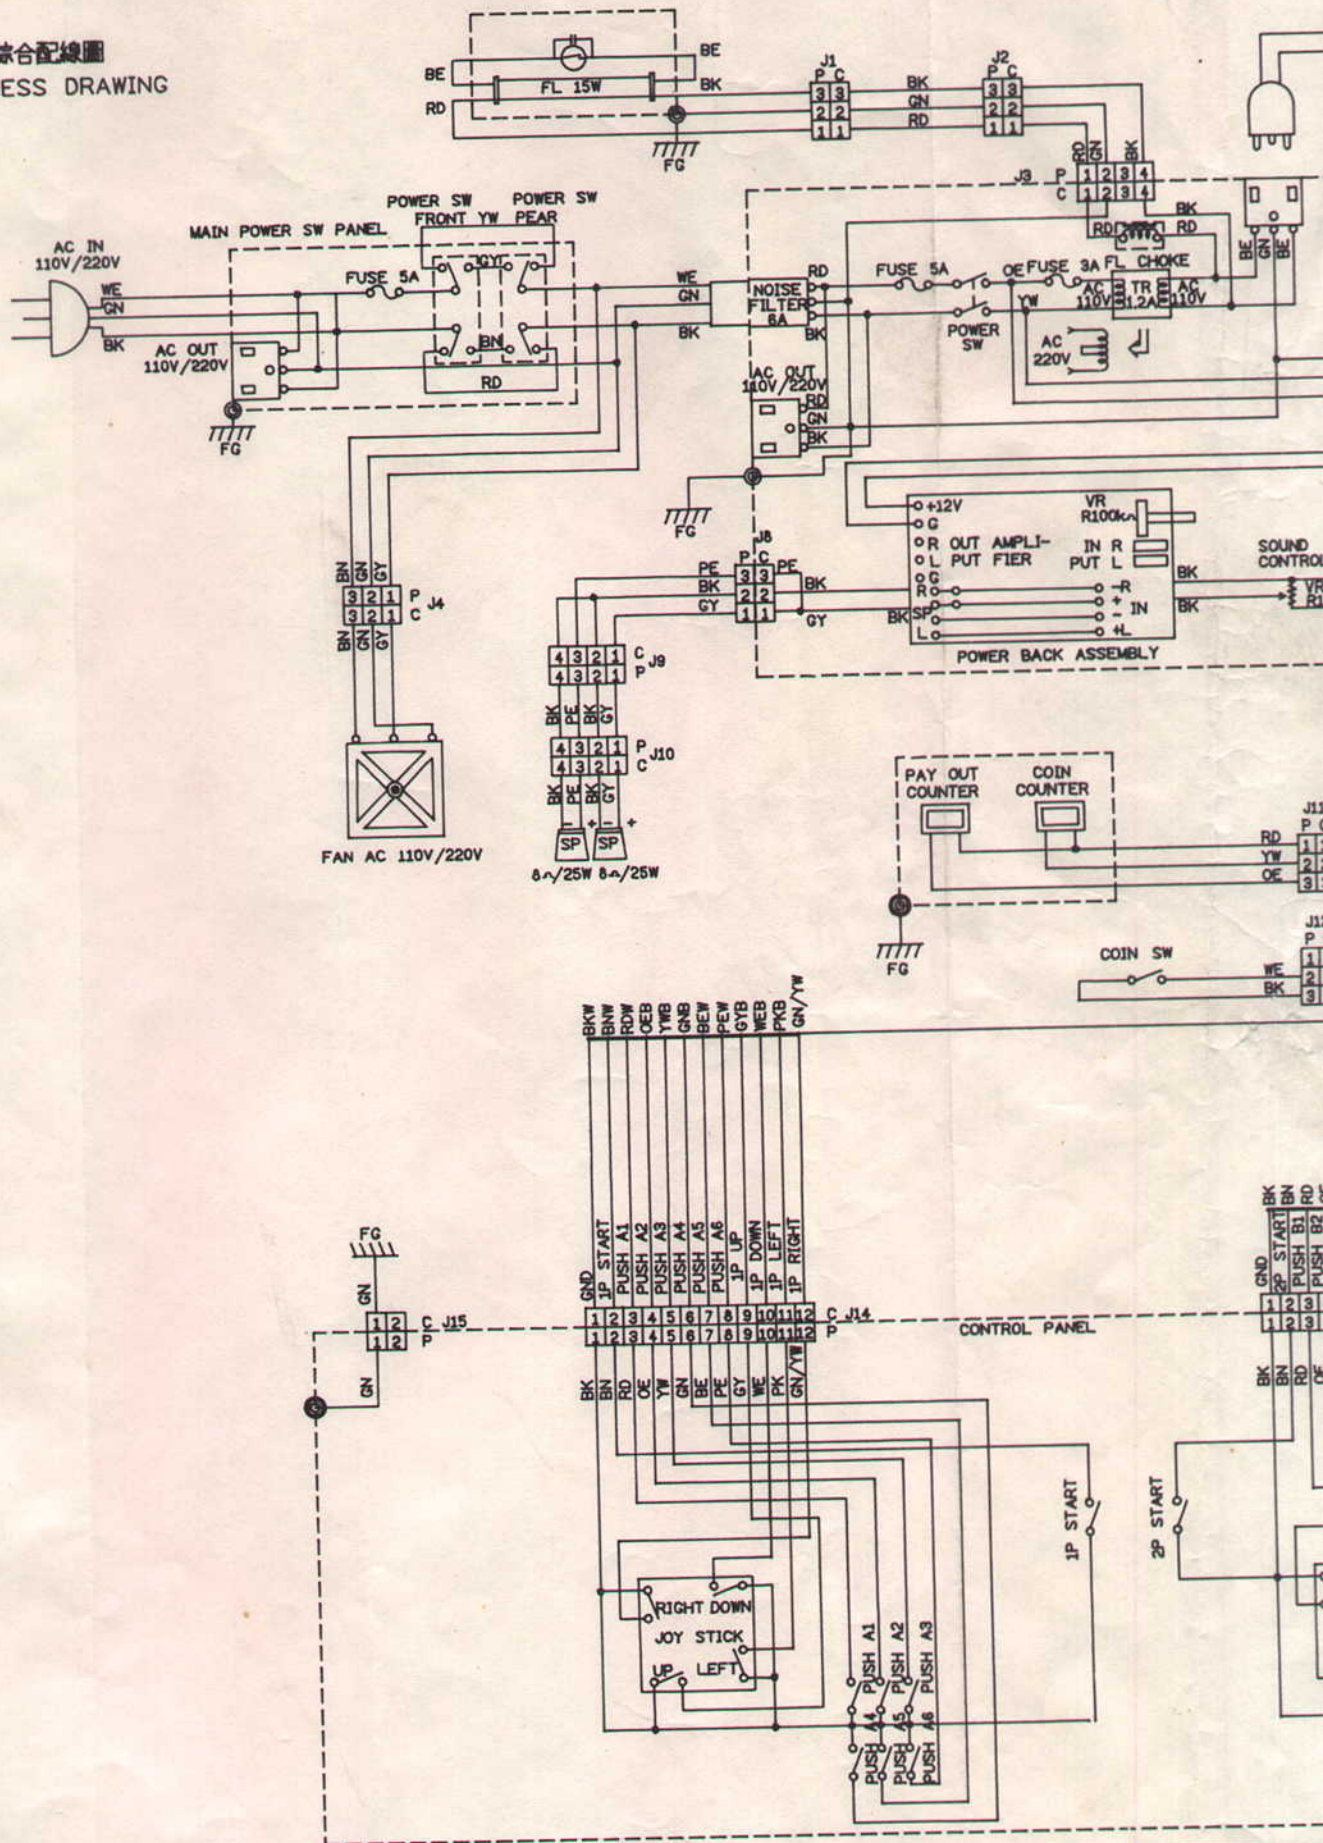

WE CHE 威崎企業股份有限公司
WEE CHIN ENTERPRISE CO., LTD.

鳳山市汽車工業區輔汽北一路1號
2F., NO.1, TZI CHI PEI 1ST RD., FENG SHAN,
KAOHSIUNG HSIEN, TAIWAN, R.O.C.
TEL: 886-7-7514949 FAX: 886-7-7118737

OK BABY

新登場 New Product Announcement.
國內(外)專利在內及海外。



WEICHE

2. Modellbeschreibung



OKBABY

Modell
OK-L


OKBaby Gehäuse + Unterbau

Modell	OK-L
	110 V.220 V
Monitor	29 Zoll
Gewicht	110 kg
Münzeinwurf	1, 2, 5 DM

● OK-L Size

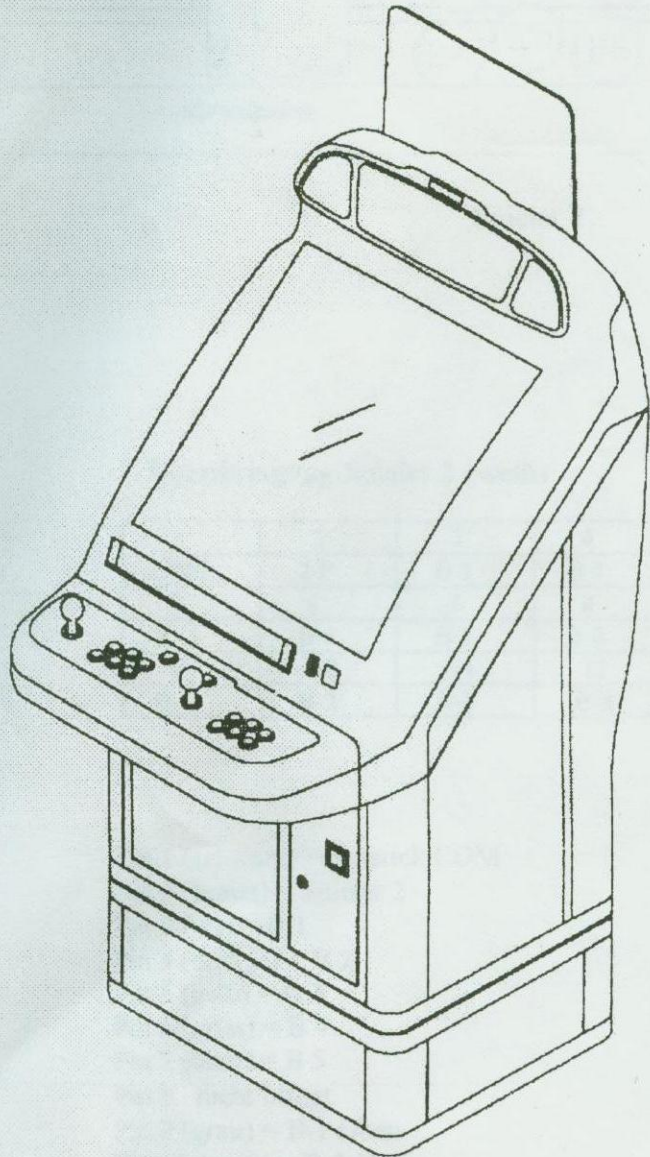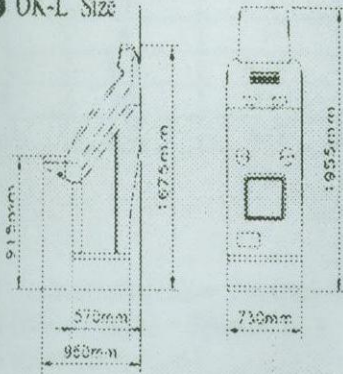

3. Bedienerkonsole

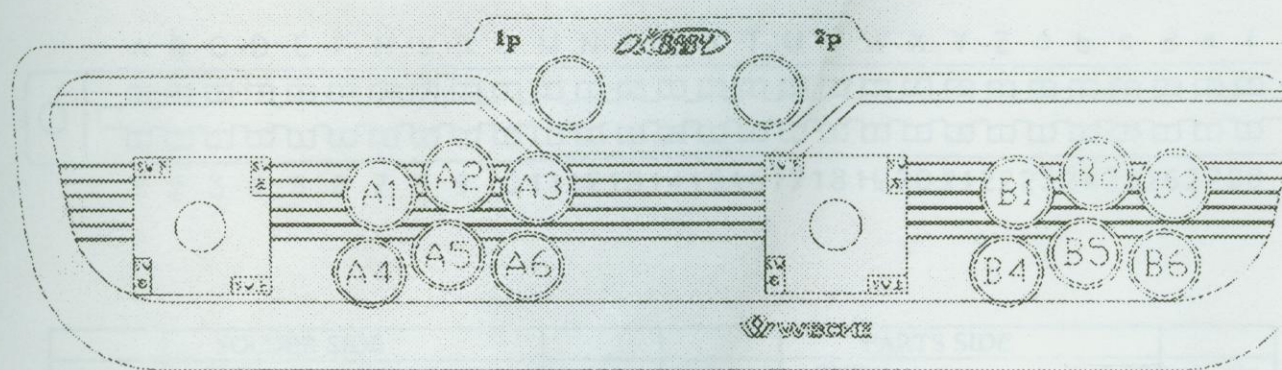

Spieler 1

Spieler 2

Unterbringung Spieler 1 (rot)

1	2	3	4
COM	1 P	A 1	A 2
5	6	7	8
A 3	A 4	A 5	A 6
9	10	11	12
A-1	A-2	A-3	A-4


- Pin 1 (Schwarz/weiß) = Joystick COM
- Pin 2 (braun/weiß) = Spieler 1
- Pin 3 (rot/weiß) = A 1
- Pin 4 (orange/weiß) = A 2
- Pin 5 (gelb/schwarz) = A 3
- Pin 6 (Grün/schwarz) = A 4
- Pin 7 (blau/weiß) = A 5
- Pin 8 nicht belegt
- Pin 9 (grau/Schwarz) = A-1 Oben
- Pin 10 (weiß/schwarz) = A-2 Unten
- Pin 11 (pink/schwarz) = A-3 Links
- Pin 12 (grün/gelb) = A-4 Rechts

Unterbringung Spieler 2 (weiß)

1	2	3	4
COM	2 P	B 1	B 2
5	6	7	8
B 3	B 4	B 5	B 6
9	10	11	12
B-1	B-2	B-3	B-4


- Pin 1 (schwarz) = Joystick COM
- Pin 2 (braun) = Spieler 2
- Pin 3 (rot) = B 1
- Pin 4 (orange) = B 2
- Pin 5 (gelb) = B 3
- Pin 6 (grün) = B 4
- Pin 7 (blau) = B 5
- Pin 8 nicht belegt
- Pin 9 (grau) = B-1 Oben
- Pin 10 (weiß) = B-2 Unten
- Pin 11 (pink) = B-3 Links
- Pin 12 (grün/gelb) = B-4 Rechts

4. Jammabelegung

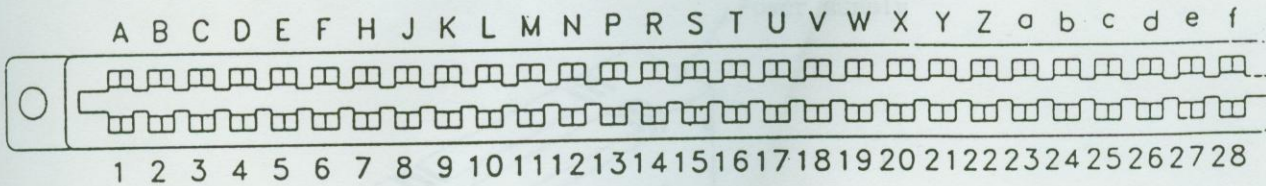


	SOLDER SIDE			PARTS SIDE	
schwarz	GND	A	1	GND	schwarz
schwarz	GND	B	2	GND	schwarz
rot	+ 5 V	C	3	+ 5 V	rot
rot	+ 5 V	D	4	+ 5 V	rot
grau/rot	- 5 V	E	5	- 5 V	grau/rot
oran/rot	+ 12 V	F	6	+ 12 V	orange
		H	7		
orange	Coin our- Meter	J	8	Coin-in Meter	gelb
	Ticket Dispens	K	9		
purpur	Audio (-)	L	10	Audio (+)	grau
		M	11		
	Video - GN	N	12	Video - RD	
	Synchr. (Gleichschritt) WH	P	13	Video - BL	
grün	SERVICE SCHALTER	R	14	Video - GND	
		S	15	TEST SCHALTER	blau
		T	16	Münze 1	weiß
braun	SPIELER 2 START	U	17	SPIELER 1 START	weiß
grau	Joystick B-1 (Oben)	V	18	Joystick A-1 (Oben)	grau/sch
weiß	Joystick B-2 (Unten)	W	19	Joystick A-2 (Unten)	weiß/sch
pink	Joystick B-3 (Links)	X	20	Joystick A-3 (Links)	pink/sch
grün/gelb	Joystick B-4 (Rechts)	Y	21	Joystick A-4 (Rechts)	grün/sch
rot	Taste B 1	Z	22	Taste A 1	rot/weiß
orange	Taste B 2	a	23	Taste A 2	ora/sch
gelb	Taste B 3	b	24	Taste A 3	gelb/sch
grün	Taste B 4	c	25	Taste A 4	grü/gelb
blau	Taste B 5	d	26	Taste A 5	blau/we
schwarz	GND	e	27	GND	schwarz
schwarz	GND	f	28	GND	schwarz

5. Netzteil

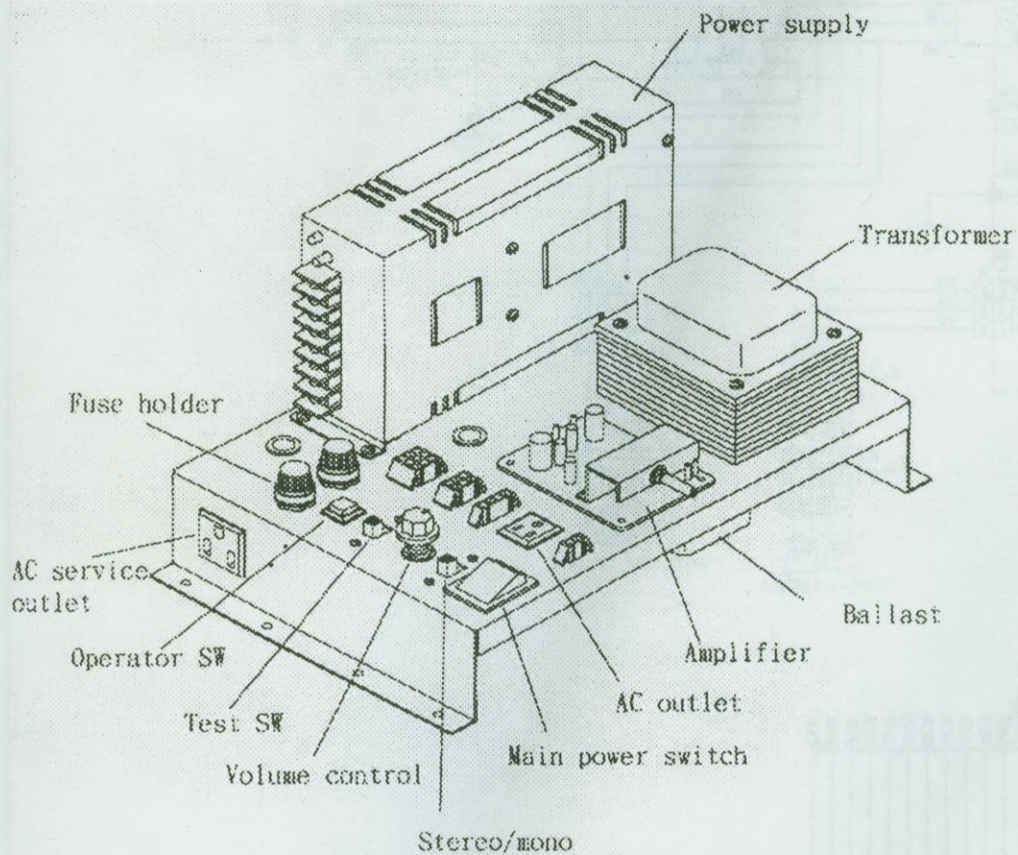



Das OKBABY ist mit einem eigenen Mono/Stereo-Verstärker ausgestattet.

Bitte halten Sie das Ausgangsvolumen des Hauptbords unter 10 W und regeln Sie die Lautstärke auf das gewünschte Volumen am Verstärker der Hauptversorgung.

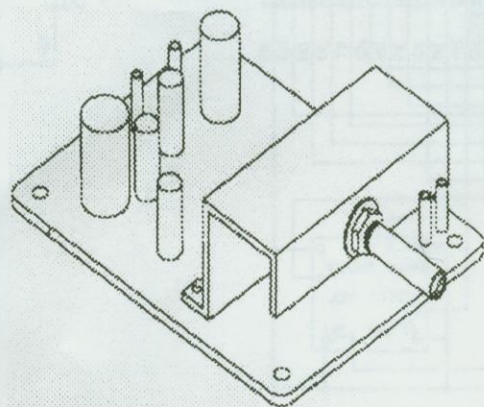

OK BABY 綜合配線圖
TOTAL HARNESS DRAWING

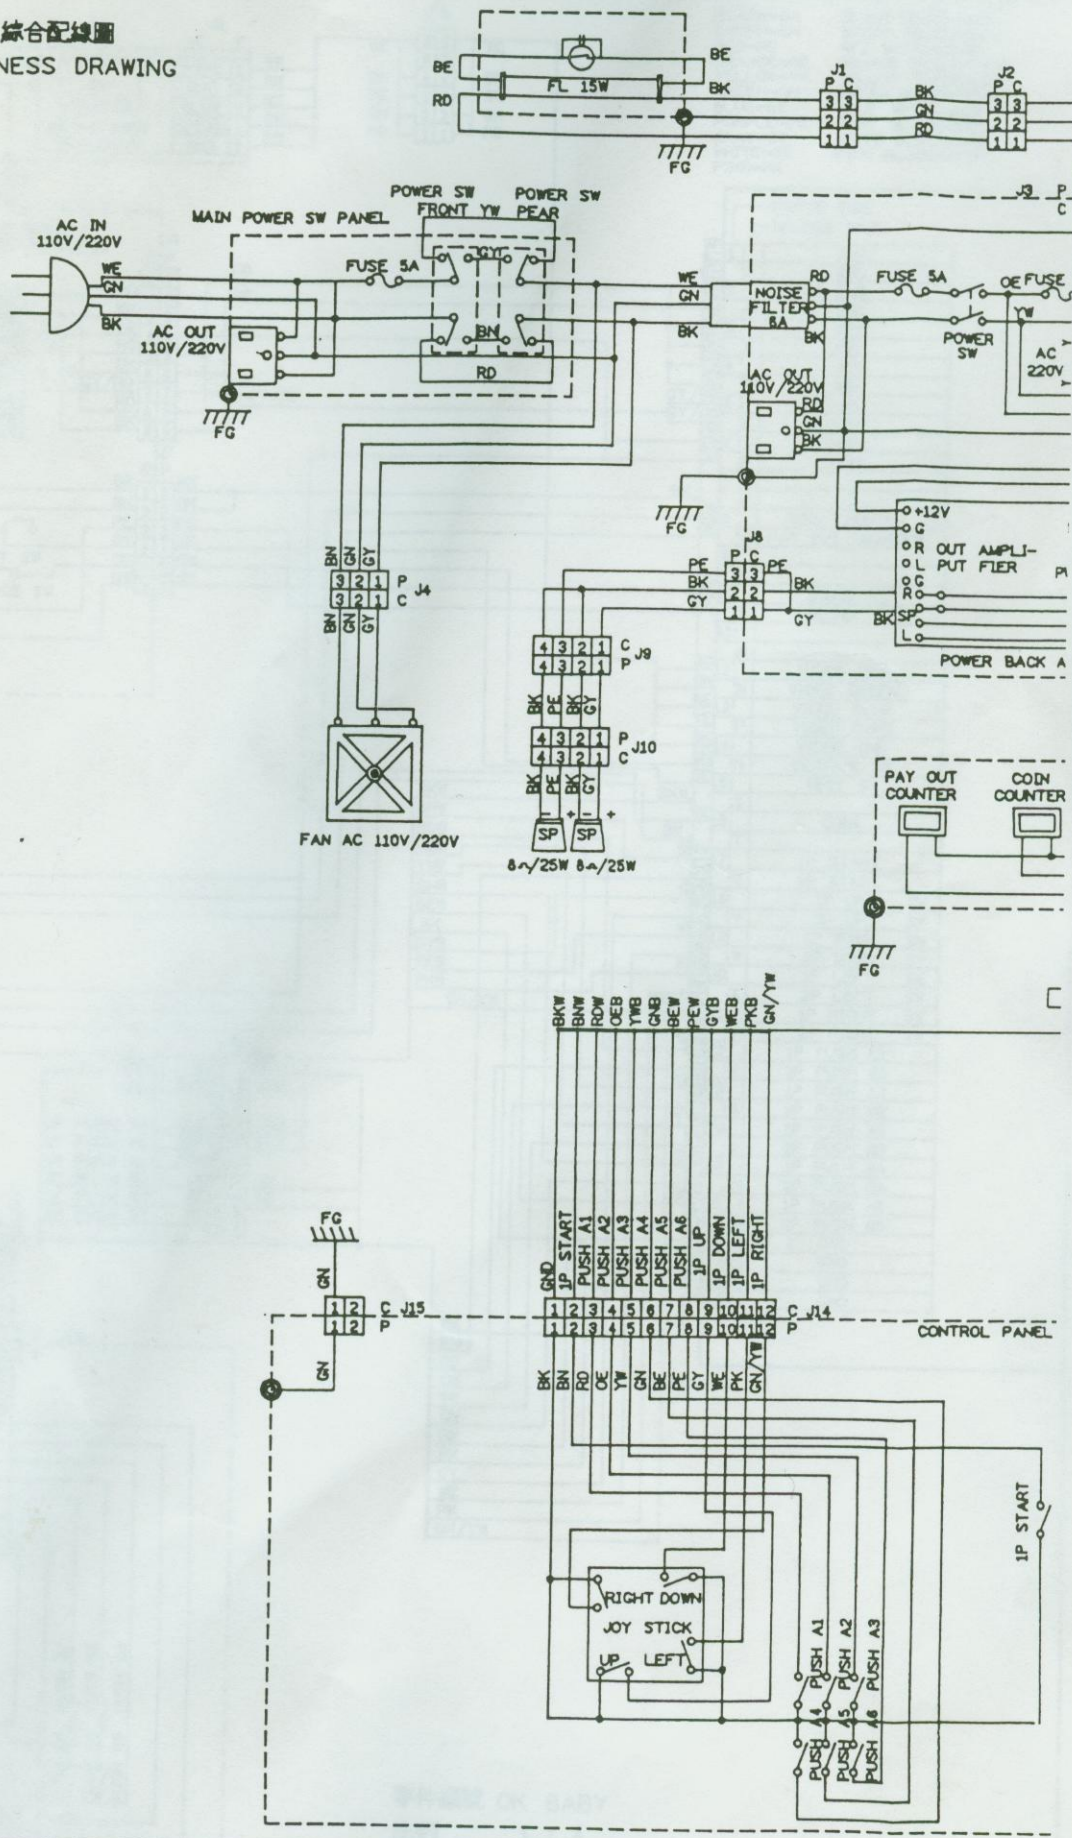

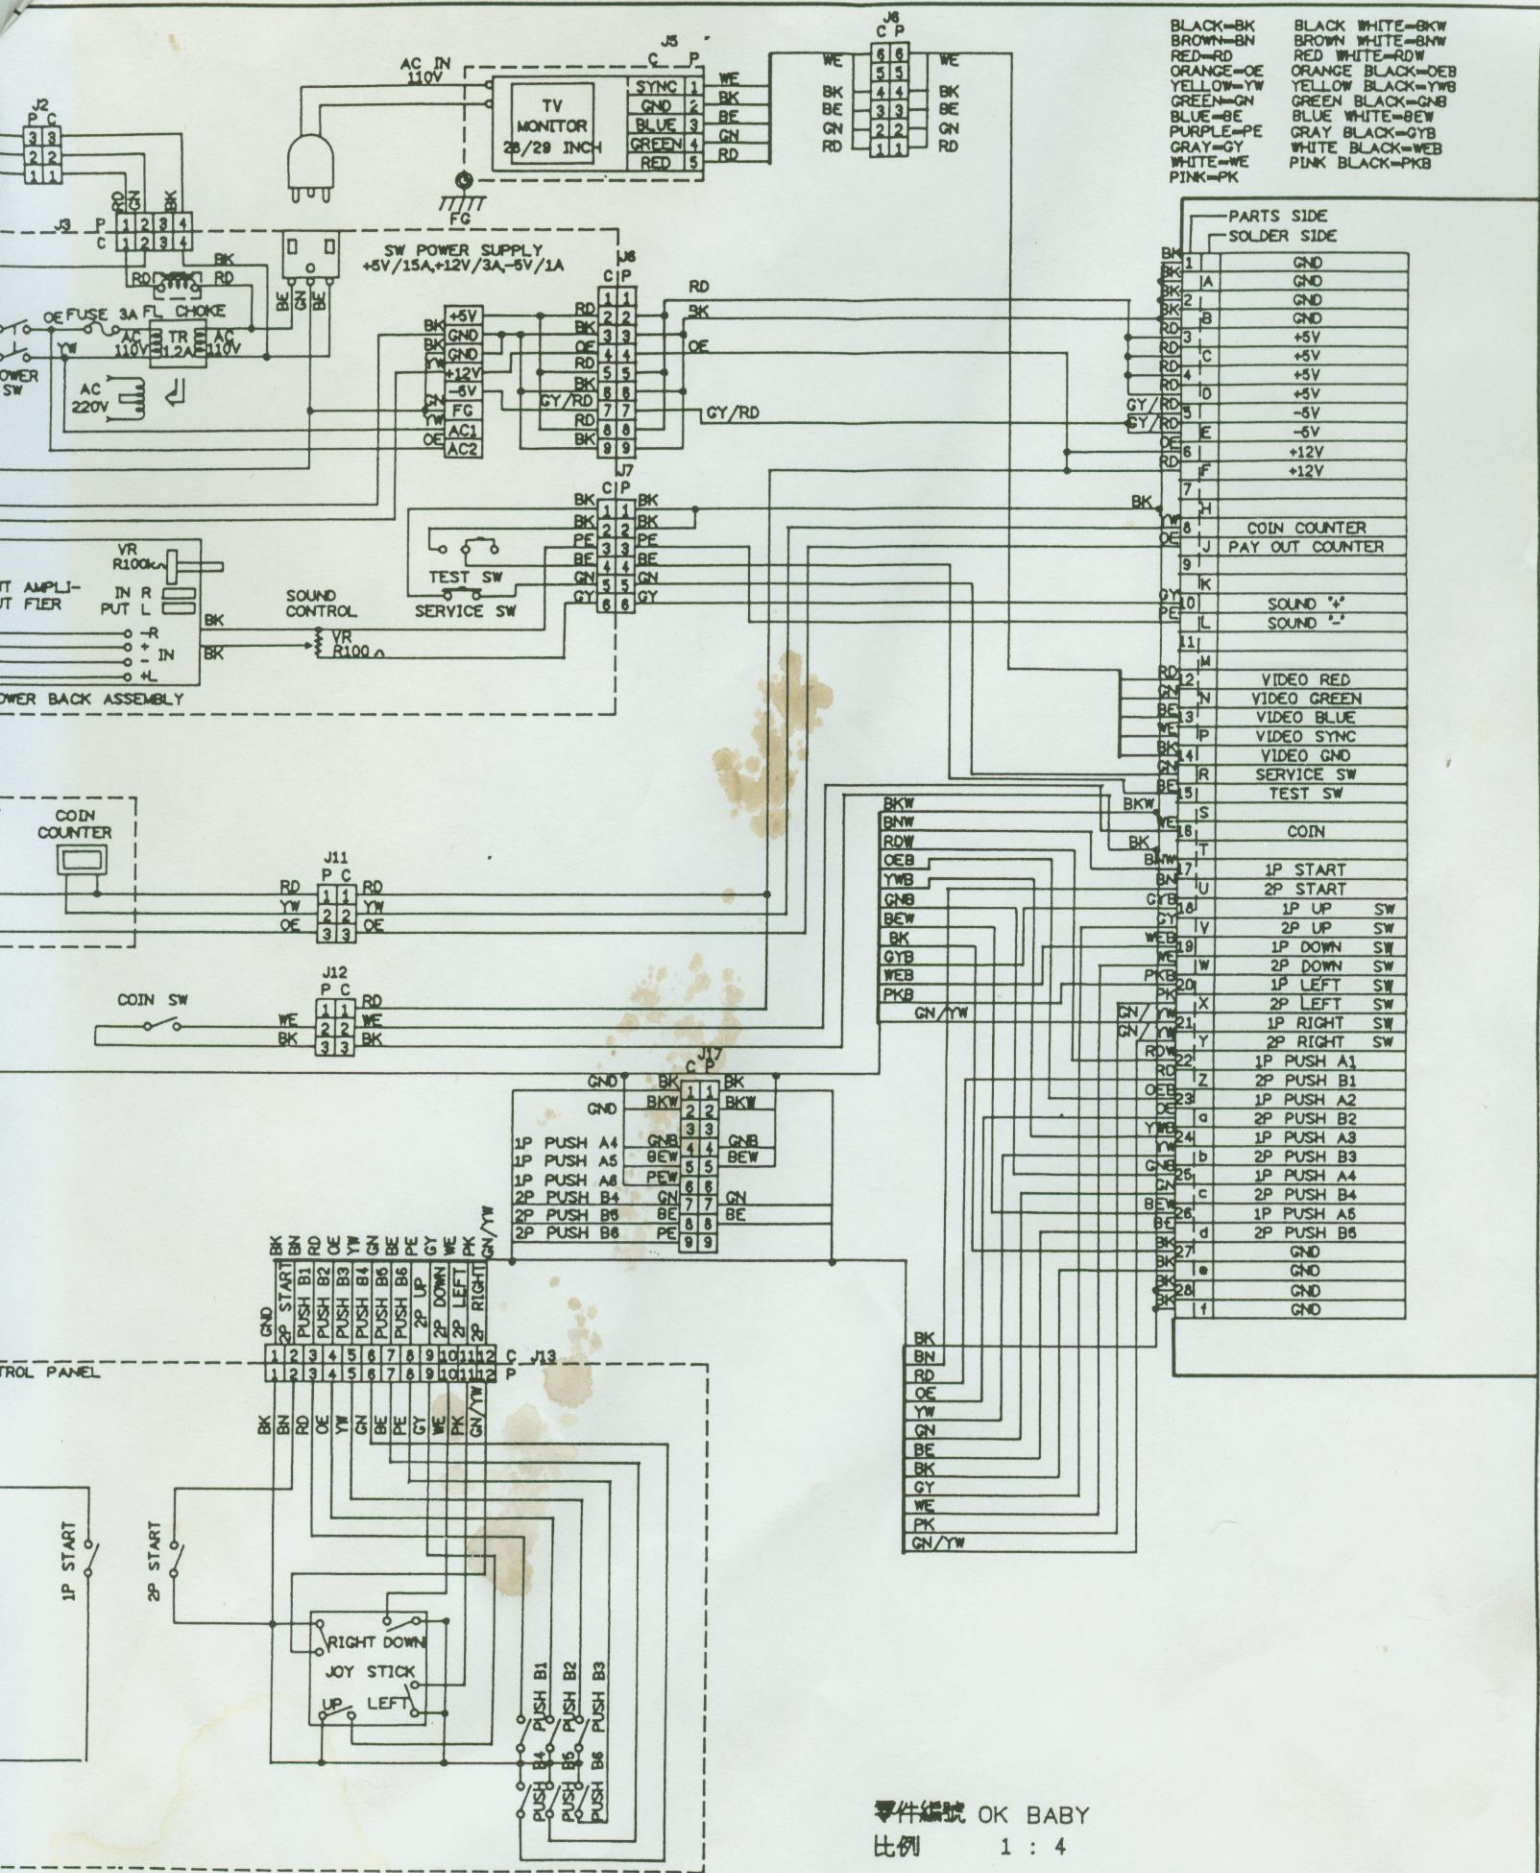

OKBABY

MODEL

OK-S OK-L

OKBaby Cabinet-Upright Base



Model	OK-S
Power	110V 220V
Monitor	28" 29"
Weight	100kg
Coin	ticket, coin

Model	OK-L
Power	110V 220V
Monitor	28" 29"
Weight	100kg
Coin	ticket, coin

● OK-S Size



● OK-L Size

