

Seimitsu MG04

DIP switch settings

	DIP SW	1	2	3	4	5	6	7	8
BUTTON									
1	NORMAL	ON							
	FIRE	OFF							
2	NORMAL		ON						
	FIRE		OFF						
3	NORMAL			ON					
	FIRE			OFF					
4	NORMAL				ON				
	FIRE				OFF				
1&3	YES					ON			
	NO					OFF			
2&4	YES						ON		
	NO						OFF		
1&4	YES							ON	
	NO							OFF	
2&3	YES								ON
	NO								OFF

1P AND 2P HAS SAME SETTING

FIRE SPEED ADJUST BY THE VOLUME ON PCB

DIP SW 1&5 ON, OFF FOR ALL THE REST, THEN FIRE 1&3