



Instruction Manual

Pop-A-Lot



Model No. 2007, 2007BN, 2007ST, 2007EX, 2007STX



GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

SAFETY PRECAUTIONS
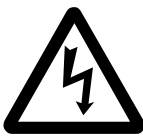
| | |
|---|---|
|  | <div>⚠ DANGER</div> <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p> <p>008GEND1112</p> |
|  | <div>⚠ DANGER</div> <p>Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>014GEND1112</p> |
|  | <div>⚠ WARNING</div> <p>To avoid burns, do NOT touch the kettle or any heated surface. Do NOT place or leave objects in contact with heated surfaces.</p> <p>013PW1112</p> |
|  | <div>⚠ WARNING</div> <p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010GENW1112</p> |
|  | <div>⚠ CAUTION</div> <p>Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation.</p> <p>012GENC1112</p> |
|  | <div>⚠ CAUTION</div> <p>This machine is NOT to be operated by anyone under the age of 18.</p> <p>007GENC1112</p> |

NOTE: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. *(Gold Medal Products Company does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)*

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control.

Setup

Your popcorn machine was adjusted, inspected, and tested before it left the factory.

1. Remove all packing before starting operation.
2. The door knobs are shipped facing the inside of the machine. Readjust the door knobs to face the outside of the machine.
3. After the machine has been installed, mount the kettle assembly in the hanger arms and plug in the kettle lead-in cord. Twist the kettle lead-in plug to lock in place.

Accessories Included With Your Machine


Measure One Cup
Stamped Aluminum Scoop
Measure 6.5cc
Oil Measure (1/3 Cup)



Electrical Requirements

2007, 2007BN, 2007ST: 120V, 1400W, 60Hz

2007EX, 2007STX: 230V, 1800W, 50Hz

| | |
|---|---|
|  | ⚠ DANGER |
| | <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.</p> <p>Do NOT immerse any part of this equipment in water.</p> <p>Do NOT use excessive water when cleaning.</p> <p>Keep cord and plug off the ground and away from moisture.</p> <p>Always unplug the equipment before cleaning or servicing.</p> |

Your electrician must furnish sufficient power for proper machine operation. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter.
5. Install the unit in a level position.

OPERATING INSTRUCTIONS


Controls and Their Functions

LIGHT SWITCH – Turns on the dome light and the interior heat light.

WARMER SWITCH – Turns on the heat to the bottom corn pan.

KETTLE MOTOR SWITCH – Turns on the motor which drives kettle agitator shaft and the exhaust blower in the popper dome.

KETTLE HEAT SWITCH – Turns on the heat element in the popcorn kettle.

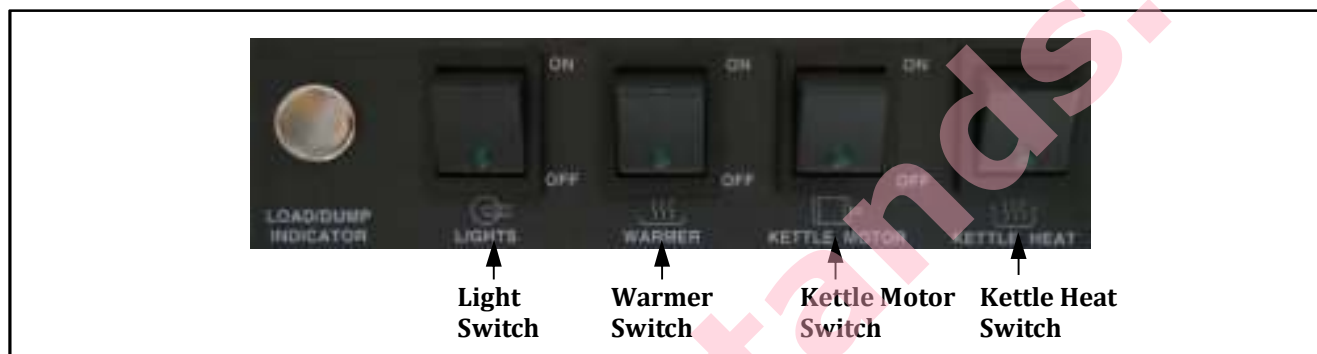

Amount of Popcorn and Oil

Your new popper is equipped with a corn, salt, and oil measure cup. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer and does not leave black deposits in your kettle like other oils. Use only top quality, fresh popcorn from reputable suppliers.

Corn charge – 8oz.

Oil charge – 1/3 Cup (2 2/3oz.)

Flavacol – 1 Teaspoon

For best results use 8oz. mega-pop premeasured pouches (Item# 2838)

Popping Instructions

1. Turn both the kettle heat and kettle motor switches “ON.”
2. Test pop three kernels of corn and one ounce of popping oil. When the kernels pop, the kettle is ready for use.
3. Load both a full corn/oil charge and Flavacol seasoning salt into the kettle. Close the lids.
4. When the corn has finished popping, gently dump the kettle.
5. Repeat the cycle, starting with step number 3, until the desired amount of popcorn has been achieved. Always pop 3 to 5 consecutive batches for the best popcorn.
6. On the final kettle of corn, it is a good idea to turn the kettle heat switch “Off” just as the lids are forced open by the popping corn. This procedure saves electricity since the kettle has plenty of heat and eliminates smoke/odor from any oil residue that remains after you have stopped popping.

NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING!



CARE AND CLEANING

Clean the Kettle Daily


1. As you popcorn, wipe the kettle with a clean cloth. It is easy to keep the outside clean when the kettle is warm and the oil is not baked on.

CAUTION: The hot kettle will cause burns if you touch it with your hand. Allow the kettle to cool for at least 1 hour before attempting to clean.

2. Every night, mix a gallon of Heat'n Klean solution (Gold Medal Part No. 2095) – (2 tablespoons per gallon of water). Add enough solution to fill the kettle 1/2" deep.
3. Turn on the kettle heat. When the water starts to boil, turn off the kettle heat and allow the solution to work over-night.
4. Before next use, dump the solution into a bucket and wipe the inside of the kettle with a cloth. Make sure all of the solution goes into the bucket, and that you do not spill any into the interior cabinet of the machine.
5. Wipe the inside of the kettle with a clean damp cloth.

Clean the Popcorn Machine

1. Wipe the stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).
2. **DO NOT** use oven cleaners or abrasive materials as they will damage parts of the machine.
3. Ammonia cleaners will damage the plastic doors. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).

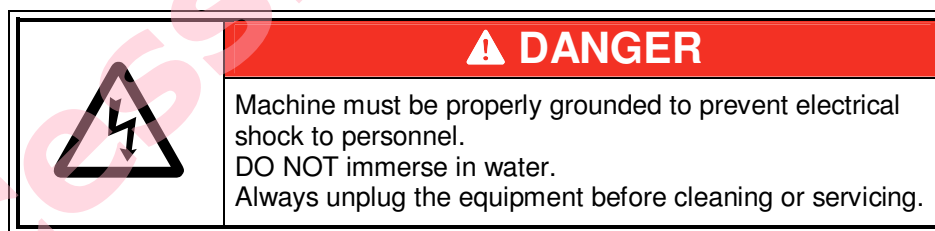

Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.

FILTER CLEANING INSTRUCTIONS

Cleaning the Filters

Your popcorn machine is equipped with an efficient and durable filtration system. The filter should be cleaned every week to maintain maximum efficiency.

Follow the steps below for proper filter cleaning:


Step 1:

The filter is located on the inside of the popcorn machine above the popping kettle.



Step 2:

Remove the filter by sliding it out of the filter retaining angles.

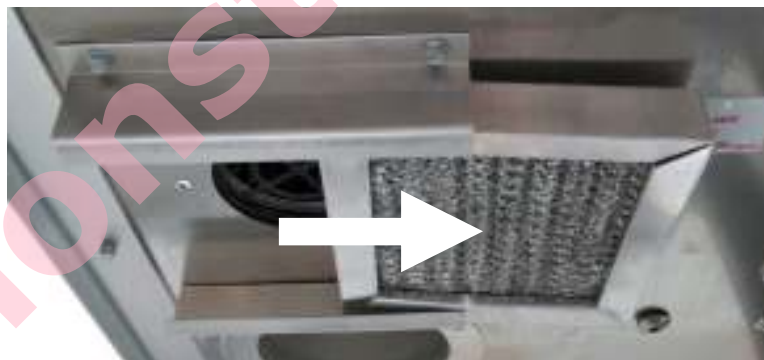

Step 3:

Clean the filter in warm soapy water and allow to dry overnight. Replace the filter to its original position (as seen in Step 1).

MAINTENANCE INSTRUCTIONS



⚠ DANGER

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury or death. Read the installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.



⚠ DANGER

Do Not immerse the equipment in water. Unplug your machine before servicing.



⚠ WARNING

Adequate eye protection must be used when servicing this equipment to prevent eye injury.



⚠ CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862

(513) 769-7676


Fax: (800) 542-1496

(513) 769-8500

E-mail: info@gmpopcorn.com

Web Page: www.gmpopcorn.com

Kettle Assembly – 47987N (Domestic), 47987EX (Export)

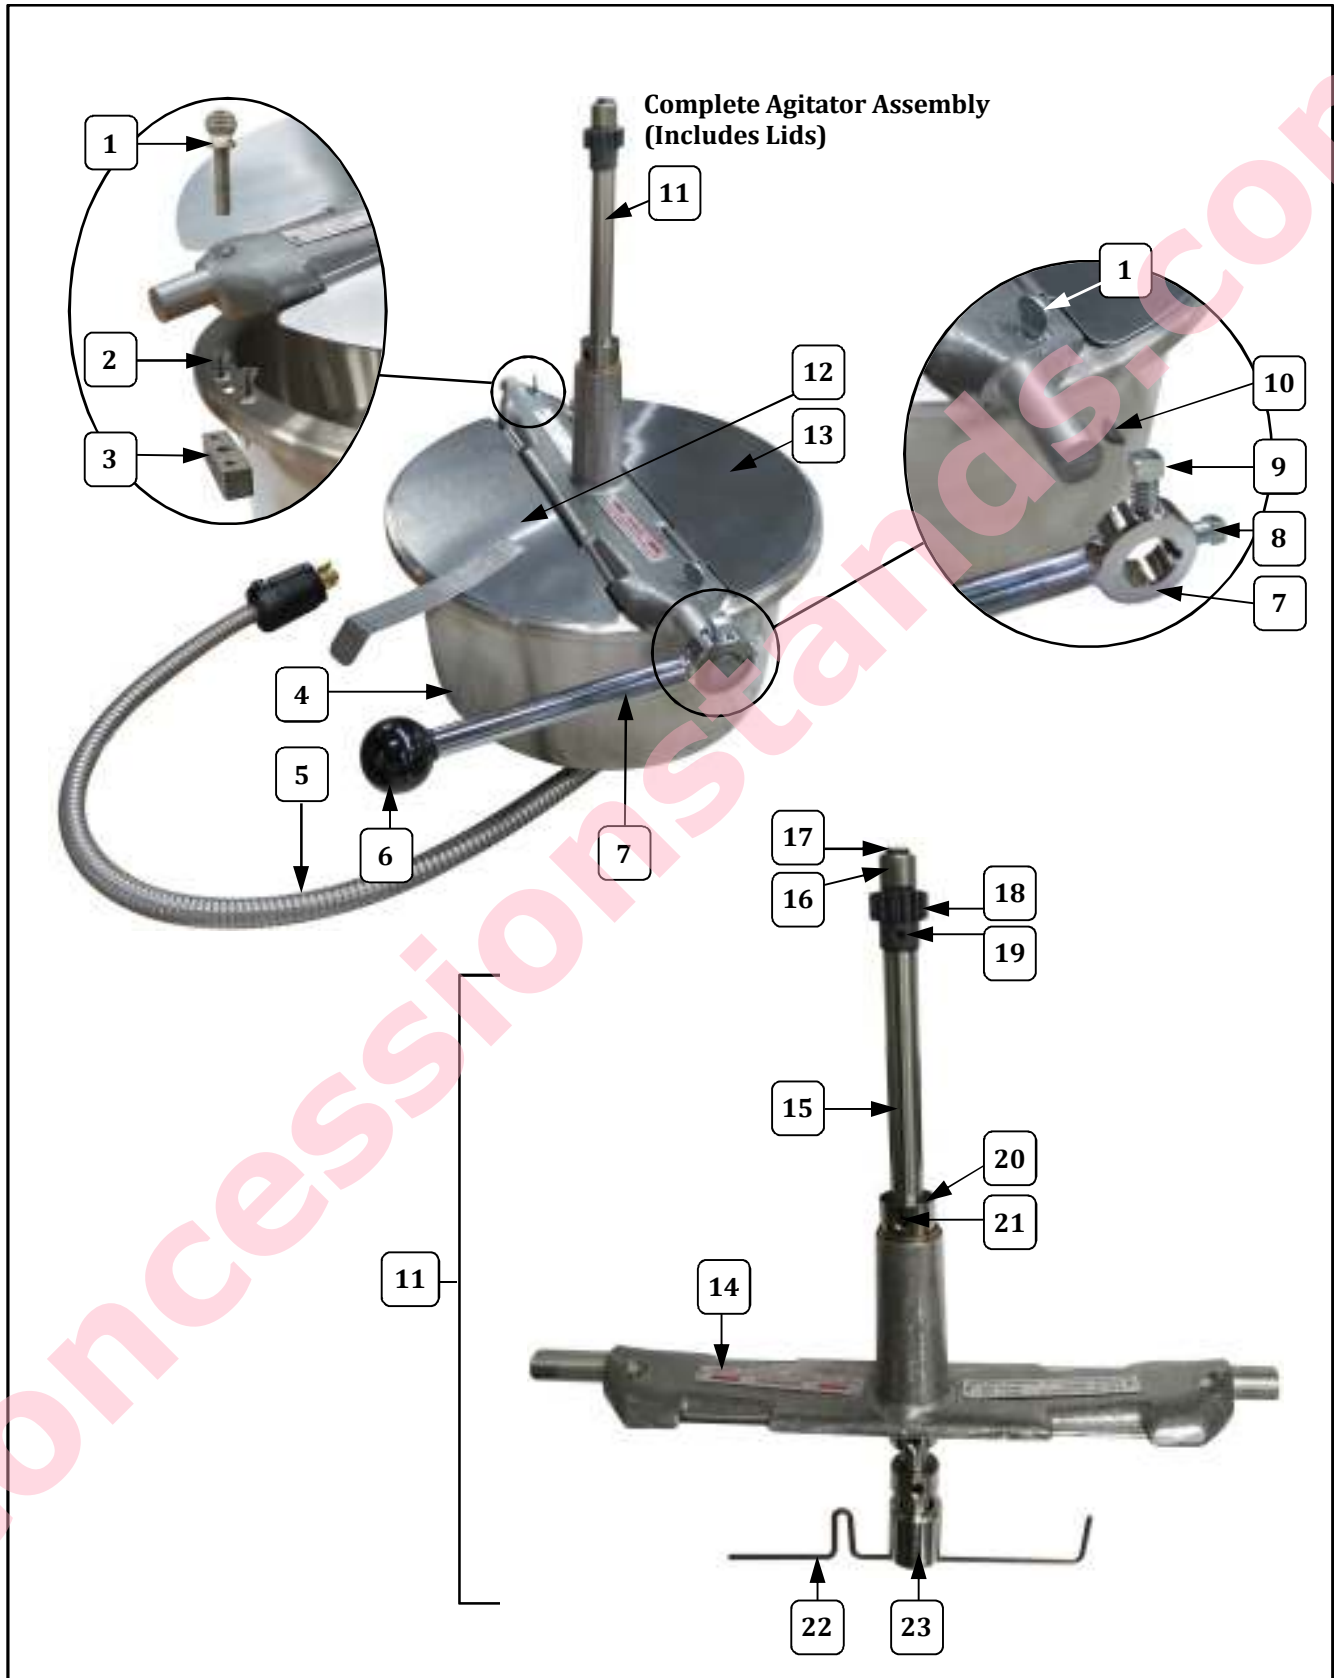




Kettle Assembly – Parts List

47987N –Used for Domestic Model Nos. 2007, 2007BN, 2007ST


47987EX – Used for Export Model Nos. 2007EX, 2007STX

| Item | Part Description | Qty. | Part Number | |
|------|--|------|-------------|---------|
| | | | 47987N | 47987EX |
| 1 | THUMB SCREW 1/4-20 x 1.25 | 2 | 61068 | 61068 |
| 2 | 8-32 X 1/2 PHILL FLAT M/S ZINC | 4 | 20066 | 20066 |
| 3 | BLOCK, SHELL AND KETTLE | 2 | 61013 | 61013 |
| 4 | 8 OZ KETTLE SHELL | 1 | 61017 | 61017 |
| 5 | KETTLE LEAD ASSEMBLY | 1 | 61053 | 61030 |
| 6 | KNOB, DUMP HANDLE | 1 | 47110 | 47110 |
| 7 | DUMP HANDLE | 1 | 47707 | 47707 |
| 8 | 5/16-18 X 3/8 SQ HD SCREW (holds key) | 1 | 47662 | 47662 |
| 9 | 5/16-18 X 1/2 SQ HD SCREW | 1 | 47725 | 47725 |
| 10 | WOODRUFF KEY #3 1/8 X 1/2 | 1 | 41730 | 41730 |
| 11 | 8 OZ LID & AGITATOR ASSY (Complete Assembly) | 1 | 61026N | 61026EX |
| 12 | FORMED LID (Front Kettle Lid w/Lid Lifter) | 1 | 47261 | 47261 |
| 13 | REAR KETTLE LID | 1 | 47119 | 47119 |
| 14 | CROSSBAR ASSEMBLY | 1 | 61025 | 61025 |
| 15 | AGITATOR SHAFT 12 IN | 1 | 61092 | 61092 |
| 16 | NEEDLE BEARING | 1 | 47106 | 47106 |
| 17 | RETAINING RING | 1 | 49701 | 49701 |
| 18 | SPUR GEAR | 1 | 47060 | 47060 |
| 19 | SET SCREW #10-32 X 3/16 | 1 | 41742 | 41742 |
| 20 | SET COLLAR 1/2ID X 7/8 OD | 3 | 47326 | 47326 |
| 21 | SET SCREW 1/4-20 X 3/16 | 3 | 47751 | 47751 |
| 22 | STIR ROD | 1 | 49011 | 49011 |
| 23 | AGITATOR WEIGHT | 1 | 61093 | 61093 |

Kettle Assembly – Element View

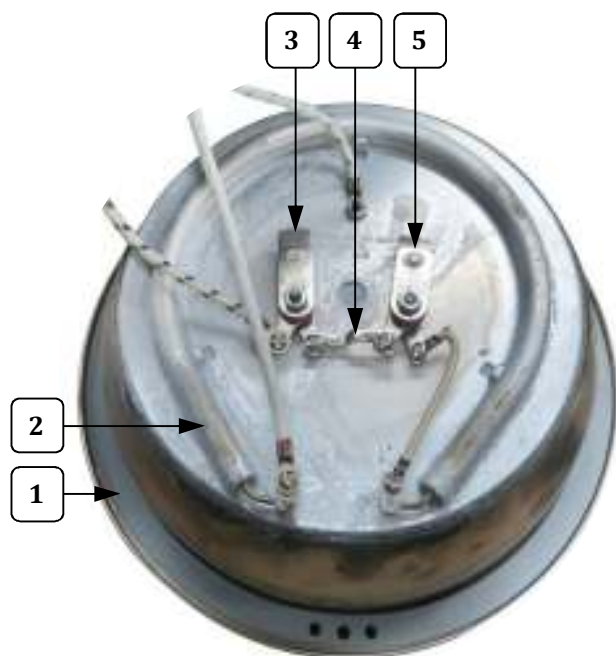

**Domestic – Element View
(47987N)**

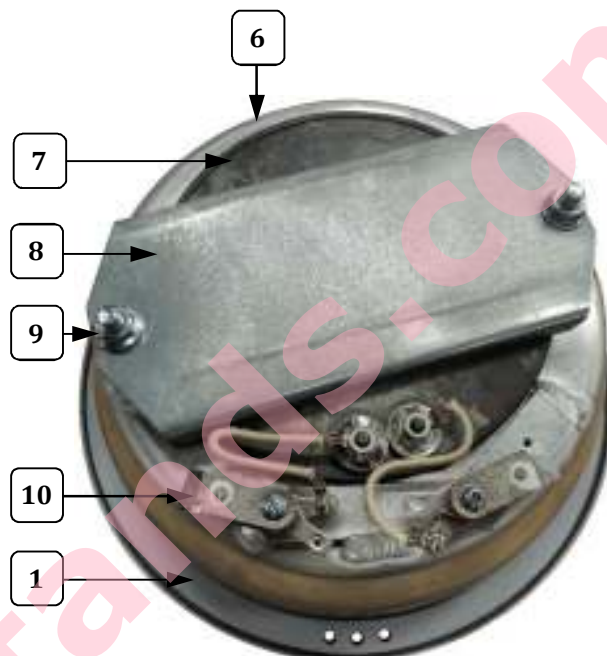

**Export – Element View
(47987EX)**

| Item | Part Description | Qty. | Part Number | |
|------|---------------------------|------|-------------|---------|
| | | | 47987N | 47987EX |
| 1 | 8 OZ KETTLE GASKET | 1 | 61012 | 61012 |
| 2 | 8OZ SS KETTLE & ELEMENT | 1 | 61280 | |
| 3 | 550°F THERMOSTAT | 1 | 77108 | |
| 4 | THERMOSTAT SHUNT BAR | 1 | 47193 | |
| 5 | 482°F THERMOSTAT | 1 | 76708 | |
| 6 | 8 OZ KETTLE WELDMENT | 1 | | 61019 |
| 7 | HEAT ELEMENT 240V,1350W | 1 | | 47672 |
| 8 | ELEMENT RETAINING BRACKET | 1 | | 49310 |
| 9 | 5/16-18 SERRATED LOCK NUT | 2 | | 49317 |
| 10 | 450°F THERMOSTAT | 2 | | 76089 |

Cabinet Assembly - Exterior


Molded Dome (Model 2007) Shown -
see Dome / Lighting Breakdown for
Part Numbers per Dome Assembly



* Complete Left or Right Hand Door
Hardware Kit - see next page for
individual component breakdown.


| Item | Parts Description | Qty. | Part Number | | | | |
|------|---|------|-------------|--------|--------|--------|---------|
| | | | 2007 | 2007BN | 2007ST | 2007EX | 2007STX |
| 1 | DOME ASSEMBLY 20 X 28 | 1 | 77001 | 45006 | 41811 | 77001 | 41811 |
| 2 | 8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not incl'd in Door Hardware Kit) | 8 | 42044 | 42044 | 42044 | 42044 | 42044 |
| 3 | COMPLETE HARDWARE KIT FOR LH DOOR* | 1 | 47054 | 47054 | 47054 | 47054 | 47054 |
| 4 | COMPLETE HARDWARE KIT FOR RH DOOR* | 1 | 47055 | 47055 | 47055 | 47055 | 47055 |
| 5 | DOOR (does not include hardware) | 1 | 47600 | 47600 | 47600 | 47600 | 47600 |
| 6 | MAGNETIC CATCH | 1 | 47561 | 47561 | 47561 | 47561 | 47561 |
| 7 | MAGNETIC CATCH MT BRACKET | | 47559 | 47559 | 47559 | 47559 | 47559 |
| 8 | DROP PANEL | 1 | 47337 | 47337 | 47337 | 47337 | 47337 |
| 9 | GLIDE | 4 | 47328 | 47328 | 47328 | 47328 | 47328 |
| 10 | OLD MAID PAN | 1 | 47336 | 47336 | 47336 | 47336 | 47336 |
| 11 | POWER SUPPLY CORD 15 AMP | 1 | 47602 | 47602 | 47602 | | |
| | POWER SUPPLY 24VDC 20W | 1 | | | | 55394 | 55394 |
| 12 | STRAIN RELIEF SR 31-2 | 1 | 41735 | 41735 | 41735 | 41735 | 41735 |

Door Hardware Kits – Individual Component Breakdown

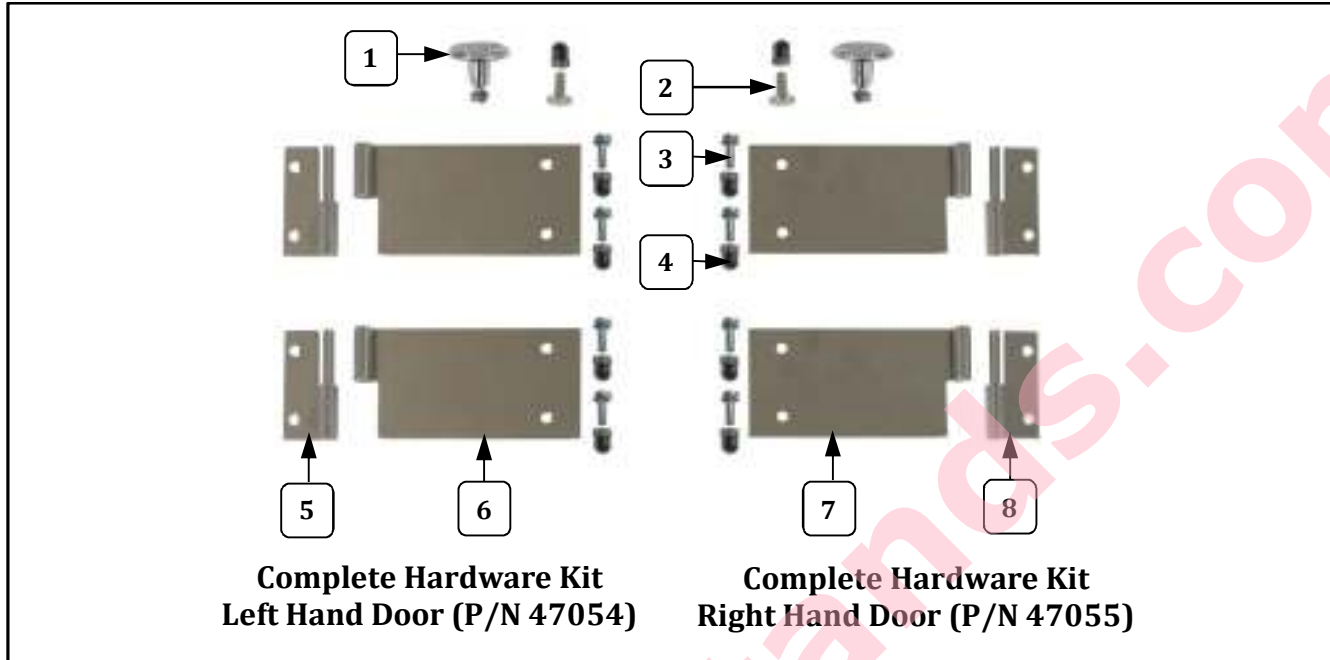

| Item | Part Description | Qty. | Part Number | |
|------|-------------------------------|------|-------------|-------|
| | | | 47054 | 47055 |
| 1 | DOOR KNOB | 1 | 41013 | 41013 |
| 2 | TEE BOLT | 1 | 75267 | 75267 |
| 3 | 8-32 X ½ SCREWS PH PAN W/SEMS | 5 | 47124 | 47124 |
| 4 | ACORN NUT #8-32 | 5 | 47702 | 47702 |
| 5 | MALE HINGE SHORT LEFT | 2 | 41349 | |
| 6 | FEMALE HINGE LONG LEFT | 2 | 41352 | |
| 7 | FEMALE HINGE LONG RIGHT | 2 | | 41351 |
| 8 | MALE HINGE SHORT RIGHT | 2 | | 41350 |

Cabinet Assembly – Interior – Hanger Assembly

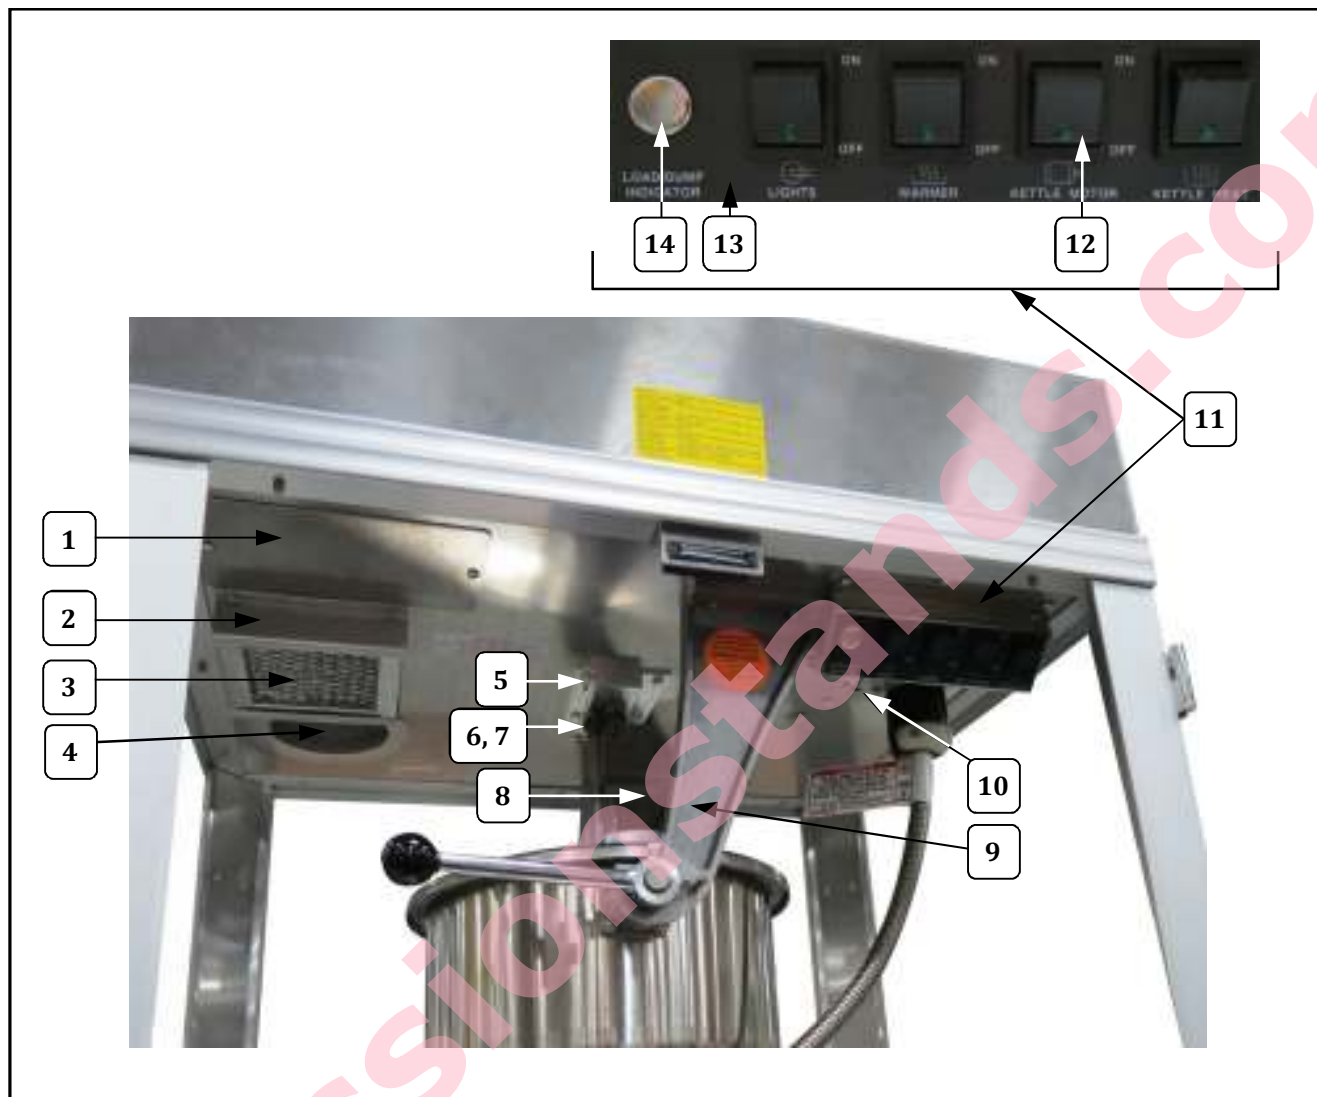


| Item | Parts Description | Qty. | Part Number | | | | |
|------|-------------------------------------|------|-------------|--------|--------|---------|---------|
| | | | 2007 | 2007BN | 2007ST | 2007EX | 2007STX |
| 1 | COVER PLATE FOR NO OIL | 1 | 77478 | 77478 | 77478 | 77478 | 77478 |
| 2 | FILTER RETAIN ANGLE | 2 | 41644 | 41644 | 41644 | 41644 | 41644 |
| 3 | FILTER | 1 | 47043 | 47043 | 47043 | 47043 | 47043 |
| 4 | REFLECTOR FLOOD 65W | 1 | 41671 | 41671 | 41671 | | |
| | 75W HALOGEN FLOOD 240V | 1 | | | | 41979EX | 41979EX |
| 5 | GEAR BLOCK ASSY | 1 | 67194 | 67194 | 67194 | 67194 | 67194 |
| 6 | SPUR GEAR | 1 | 47060 | 47060 | 47060 | 47060 | 47060 |
| 7 | SET SCREW #10-32 X 3/16 | 1 | 41742 | 41742 | 41742 | 41742 | 41742 |
| 8 | HANGER ARM FRONT | 1 | 47262 | 47262 | 47262 | 47262 | 47262 |
| 9 | HANGER ARM REAR ASSY (w/dowel stop) | 1 | 47263 | 47263 | 47263 | 47263 | 47263 |
| 10 | MOUNTING PLATE 15A TWIST | 1 | 77477 | 77477 | 77477 | 77477 | 77477 |
| 11 | 5 HOLE SWITCH BOX | 1 | 17450 | 17450 | 17450 | 17450 | 17450 |
| 12 | SWITCH, LIGHTED ROCKER | 4 | 42798 | 42798 | 42798 | 42798 | 42798 |
| 13 | ROCKER SWITCH LABEL | 1 | 48542 | 48542 | 48542 | 48542 | 48542 |
| 14 | HOLE PLUG, 1/2 DIA SS | 1 | 45395 | 45395 | 45395 | 45395 | 45395 |

Cabinet Assembly - Interior - Heated Corn Deck



| Item | Parts Description | Qty. | Part Number | | | | |
|------|-------------------------|------|-------------|--------|--------|---------|---------|
| | | | 2007 | 2007BN | 2007ST | 2007EX | 2007STX |
| 1 | CORN PAN ASSY | 1 | 47598 | 47598 | 47598 | 47598EX | 47598EX |
| 2 | STRAIN RELIEF SR 15-1 | 1 | 61099 | 61099 | 61099 | 61099 | 61099 |
| 3 | MALE CORDSET | 1 | 61020 | 61020 | 61020 | 61020 | 61020 |
| 4 | FEMALE CORDSET | 1 | 61021 | 61021 | 61021 | 61021 | 61021 |
| 5 | STRAIN RELIEF #SR 6P3-4 | 1 | 76026 | 76026 | 76026 | 76026 | 76026 |
| 6 | CORNER COVER | 1 | 41879 | 41879 | 41879 | 41879 | 41879 |
| 7 | OLD MAID PAN | 1 | 47336 | 47336 | 47336 | 47336 | 47336 |

Electrical Breakdown – Dome Interior

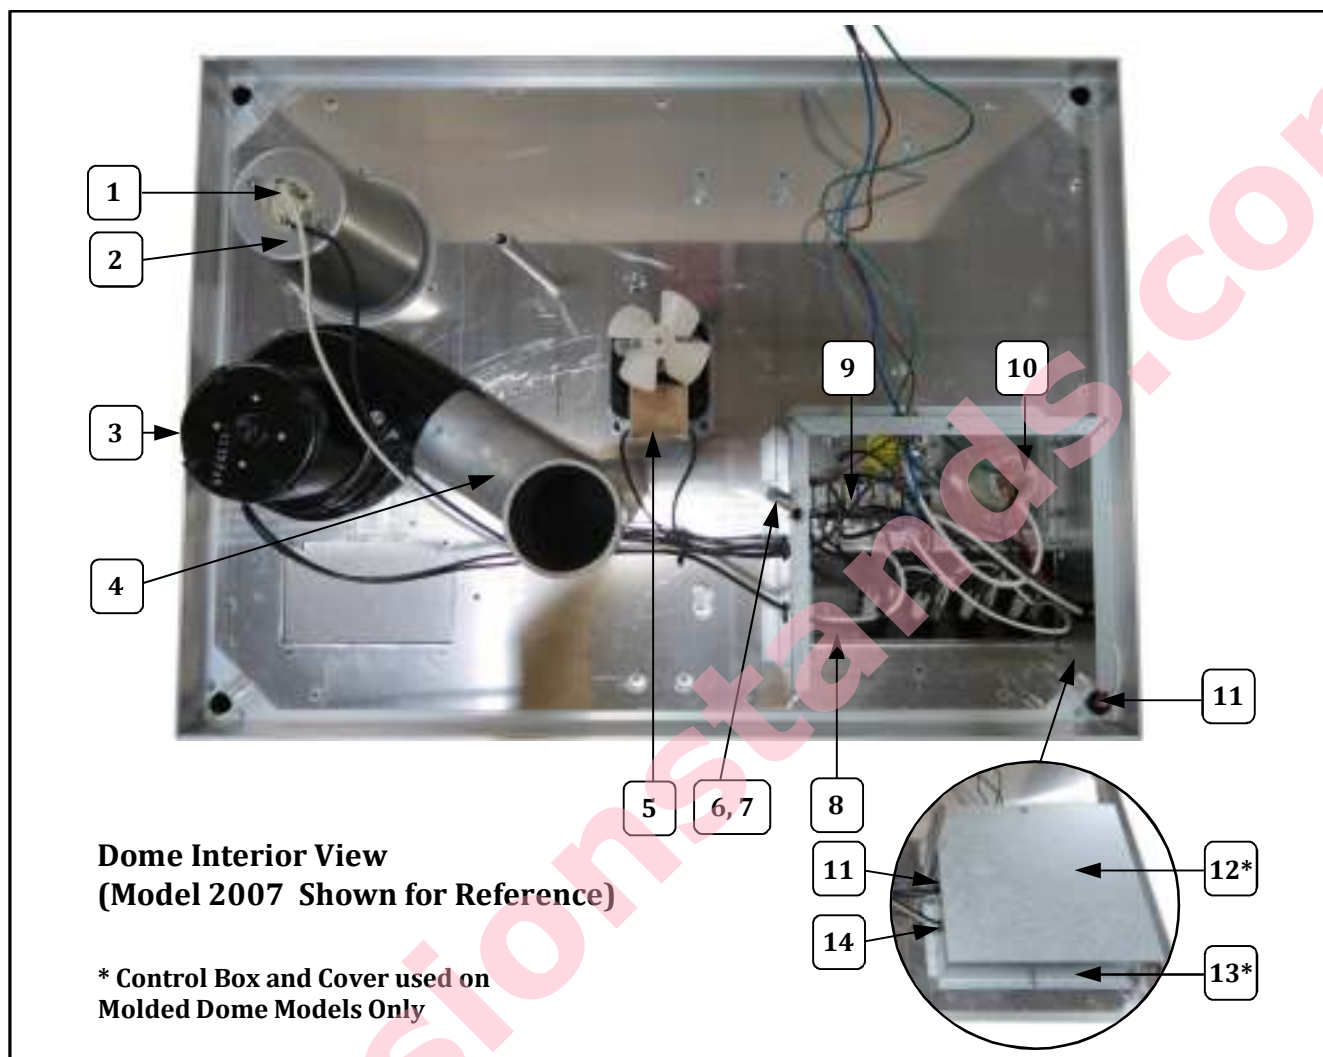

| Item | Parts Description | Qty. | Part Number | | | | |
|------|----------------------------------|------|-------------|--------|--------|---------|---------|
| | | | 2007 | 2007BN | 2007ST | 2007EX | 2007STX |
| 1 | LAMP HOLDER | 1 | 47047 | 47047 | 47047 | 47047 | 47047 |
| 2 | LIGHT SHIELD CONICAL | 1 | 49480 | 49480 | 49480 | 49480 | 49480 |
| 3 | EXHAUST BLOWER | 1 | 47343 | 47343 | 47343 | 47667EX | 47667EX |
| 4 | EXHAUST BLOWER ELBOW (SHORT) | 1 | | 47507 | 47507 | | 47507 |
| | EXHAUST BLOWER ELBOW (LONG) | 1 | 47506 | | | 47506 | |
| 5 | KETTLE DRIVE MOTOR | 1 | 47038 | 47038 | 47038 | 47067 | 47067 |
| 6 | DOMES SPACER | 2 | 54014 | 41526 | 41526 | 54014 | 41526 |
| 7 | 5/16-18 X 1/2 PH TR M/S (Screws) | 4 | 46638 | 46638 | 46638 | 46638 | 46638 |
| 8 | 5 HOLE SWITCH BOX | 1 | 17450 | 17450 | 17450 | 17450 | 17450 |
| 9 | TERMINAL BLOCK, 8 TERMINAL | 1 | 47208 | 47208 | 47208 | 47208 | 47208 |
| 10 | KETTLE RECPT 15A, TWIST LOCK | 1 | 49330 | 49330 | 49330 | 49330 | 49330 |
| 11 | SNAP BUSCHING, .625 IN | 4 | 47282 | 47282 | 47282 | 47282 | 47282 |
| 12 | CONTROL BOX COVER* | 1 | 79278 | | | 79278 | |
| 13 | CONTROL BOX* | 1 | 79277 | | | 79277 | |
| 14 | SNAP BUSCHING, .005 IN | 1 | 47236 | | | 47236 | |

Dome / Lighting Breakdown – Molded Dome Models 2007, 2007EX



| Item | Part Description | Qty. | Part No. |
|------|--|------|----------|
| 1 | 20 X 28 MOLDED DOME | 1 | 77001 |
| 2 | LED DOME LIGHT ASSEMBLY (includes itemized parts listed below) | 1 | 77040 |
| 3 | LED MOUNTING WHITE DOME | 1 | 55475 |
| 4 | 1/4-20 X 1/2 HEX HD BOLT | 3 | 14821 |
| 5 | FENDER WASHER | 3 | 82101 |
| 6 | 1/4-20 SERRATED LOCK NUT | 3 | 46311 |
| 7 | 6 1W LED STRIP | 1 | 55379 |
| 8 | 6-32 X 3/8 PH PAN HD M/S | 3 | 38087 |
| 9 | 6-32 M/S NUT 18-8 | 3 | 14221 |
| 10 | SNAP BUSHING, .500 IN | 1 | 47236 |
| 11 | POWER SUPPLY 24VDC 20W | 1 | 55394 |

Dome / Lighting Breakdown – Stainless Steel w/LED Neon Sign Model 2007BN



| Item | Part Description | Qty. | Part No. |
|------|--|------|----------|
| | DOMES ASSY W/LED SIGN (includes itemized parts listed below) | 1 | 45006 |
| 1 | LED POPCORN SIGN | 1 | 69708 |
| 2 | POWER SUPPLY 12VDC | 1 | 55231 |
| 3 | MOLDED PLUG | 1 | 47726 |
| 4 | MAIN WRAPPER | 1 | 41794 |
| 5 | FRONT WRAPPER | 1 | 41795 |
| 6 | BOTTOM NEON SIGN BRACKET | 2 | 67488 |
| 7 | 8-32 X 3/8 SLT. HWH M/S | 2 | 42044 |

Dome / Lighting Breakdown – Stainless Steel with LED Lighting Models 2007ST, 2007STX



| Item | Part Description | Qty. | Part No. |
|------|---|------|----------|
| | COMPLETE DOME ASSY (includes itemized parts listed below) | 1 | 41811 |
| 1 | MAIN WRAPPER | 1 | 41794 |
| 2 | FRONT WRAPPER ASSY | 1 | 41797 |
| 3 | SUPPORT ANGLE | 1 | 41316 |
| 4 | 8-32 x 5/16 SLOTTED HEX | 5 | 49594 |
| 5 | POPCORN SIGN | 1 | 41301 |
| 6 | 6 1W LED STRIP | 2 | 55379 |
| 7 | 6-32 X 3/8 PH PAN HD M/S | 6 | 38087 |
| 8 | 6-32 M/S NUT 18-8 | 6 | 14221 |
| 9 | SNAP BUSHING, .500 IN | 2 | 47236 |
| 10 | POWER SUPPLY 24VDC 20W | 1 | 55394 |
| 11 | MOLDED PLUG | 1 | 47726 |


Accessories




| Item | Part Description | Qty. | Part No. |
|------|------------------------|------|----------|
| 1 | MEASURE ONE CUP | 1 | 47147 |
| 2 | STAMPED ALUMINUM SCOOP | 1 | 2071 |
| 3 | MEASURE 6.5CC | 1 | 47678 |
| 4 | OIL MEASURE (1/3 CUP) | 1 | 47150 |


WIRING DIAGRAM

Model No. 2007, 2007ST

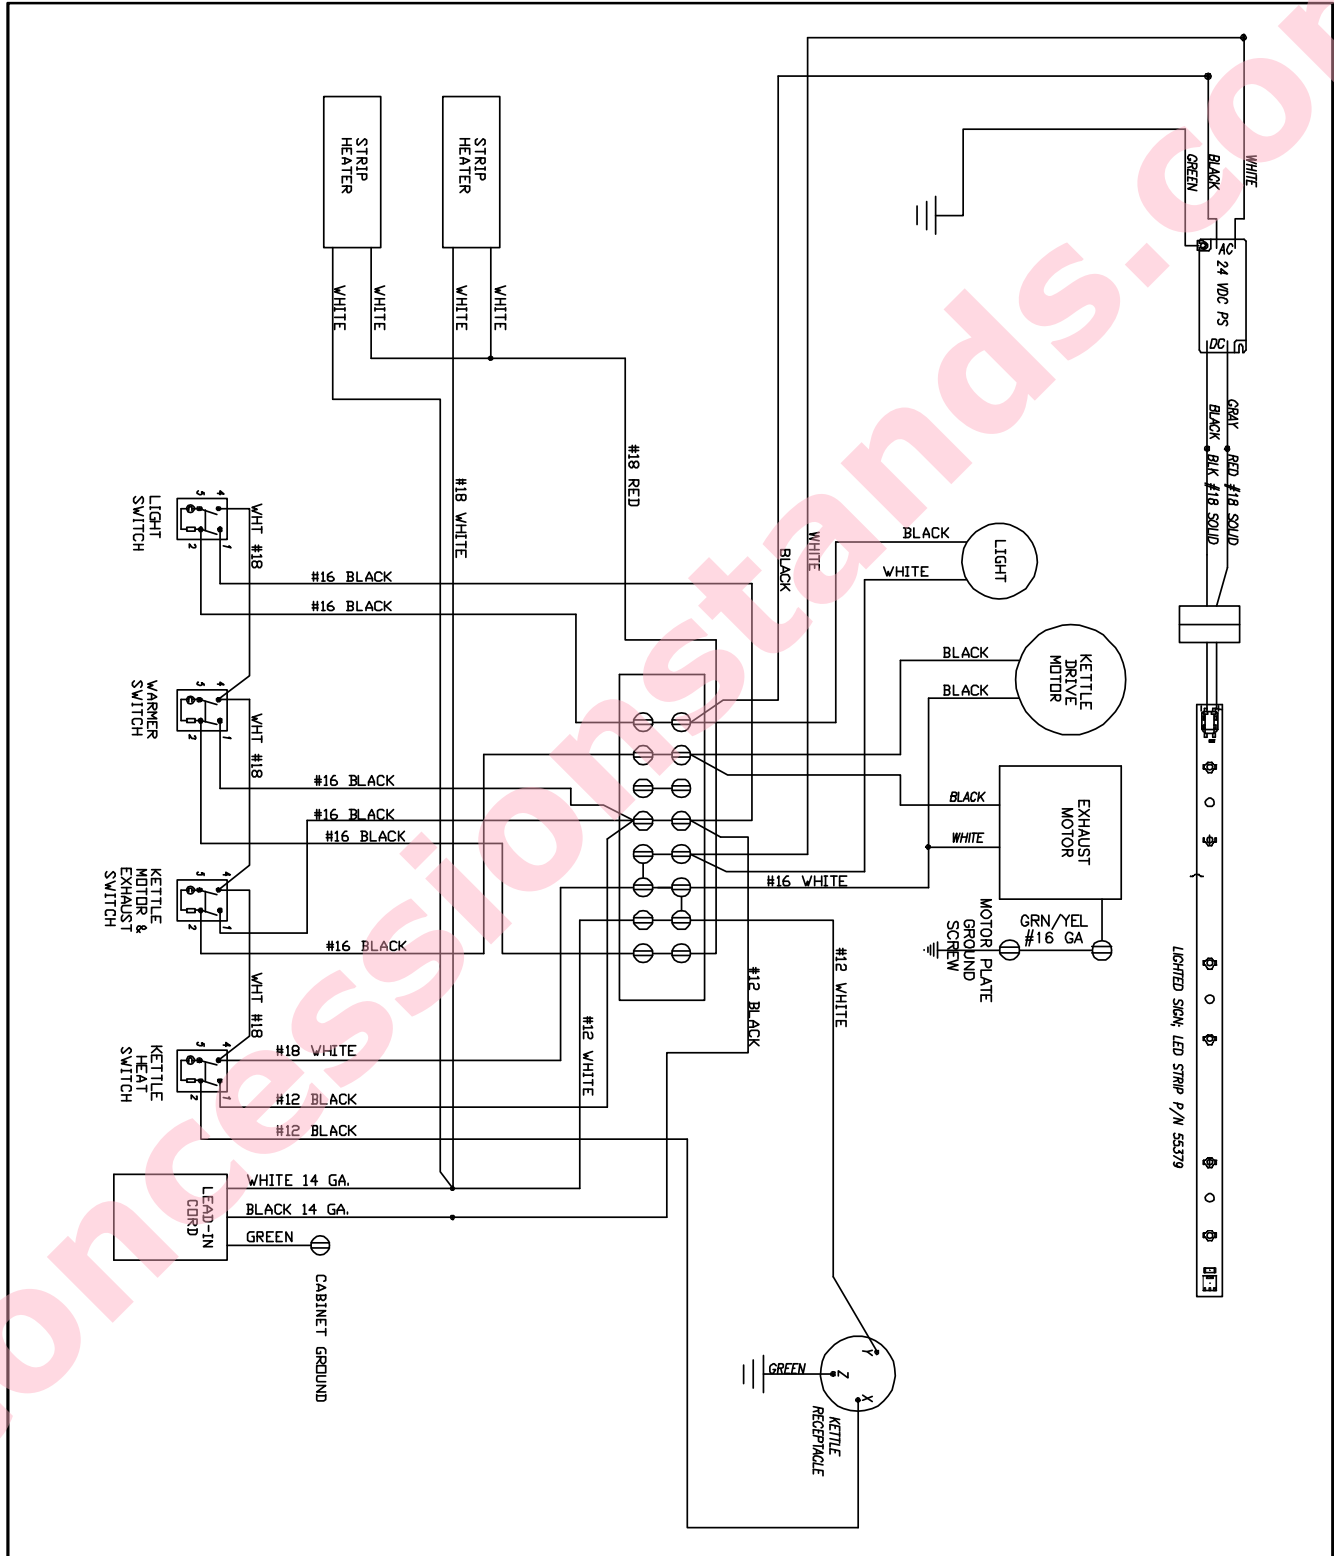

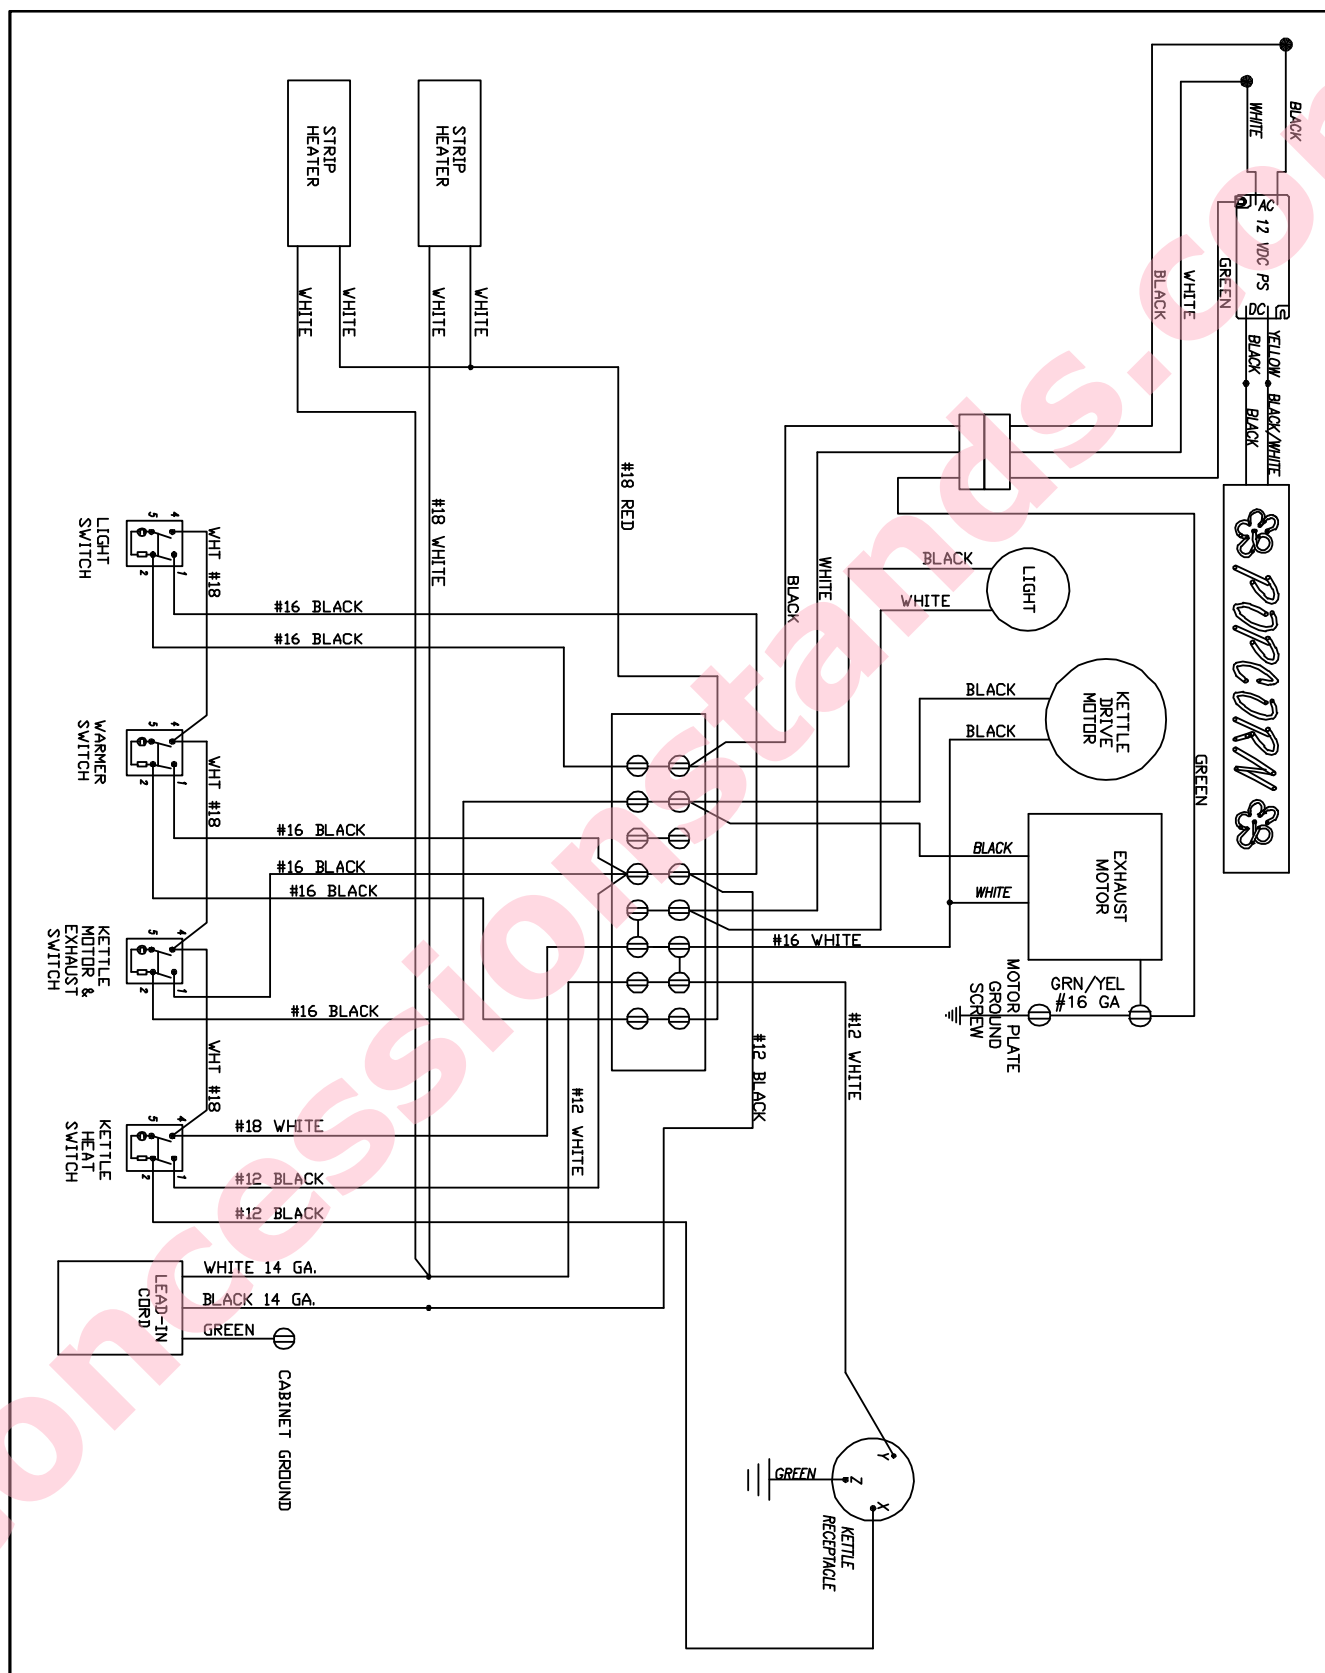Model No. 2007BN

Model No. 2007EX, 2007STX

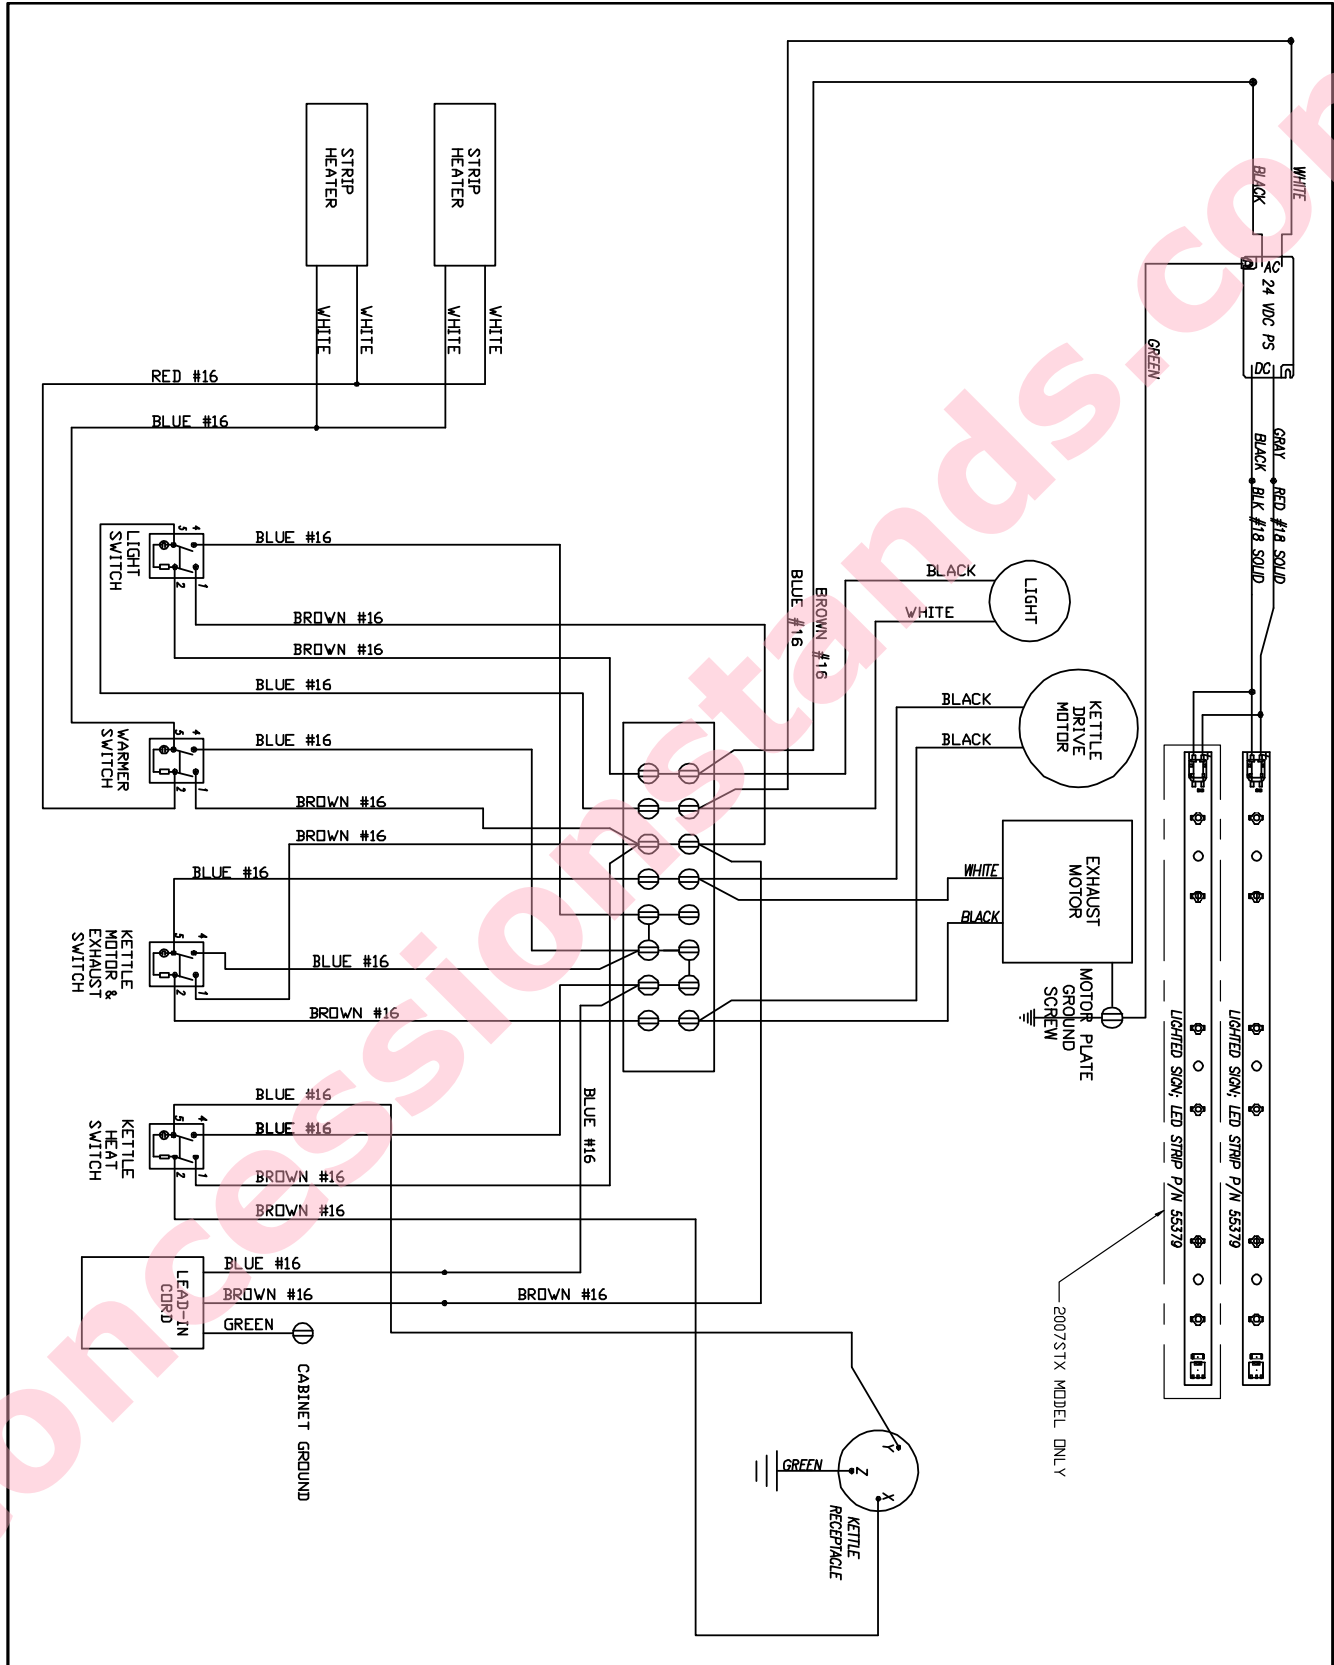



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500

© 2013 – The text, descriptions, graphics, layout, and other material in this publication are the exclusive property of Gold Medal Products Co. and shall not be used, copied, reproduced, or published in any fashion, including website display, without its express written consent.